

Operation Manual

Turning Arbor Press

61033



Illustration similar, may vary depending on model

Please read and follow the operating instructions and safety information prior to initial operation.

Technical changes reserved!

Illustrations, functional steps, and technical data may deviate insignificantly due to continuous further developments.



The information contained in this document may alter at any time without prior notice. No part of this document may be copied or otherwise duplicated without prior written consent. All rights reserved. WilTec Wildanger Technik GmbH cannot be held liable for any possible mistakes in this operating manual, nor in the diagrams and illustrations shown.

Although WilTec Wildanger Technik GmbH has made every possible effort to ensure that this operating manual is complete, accurate, and up-to-date, errors cannot be ruled out entirely.

If you have found an error or wish to suggest an improvement, we look forward to hearing from you. Send us an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in several languages can be found in our online shop:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler Germany

To return your goods for exchange, repair, or other purposes, please use the following address. Attention! To allow for a trouble-free complaint or return, it is important to contact our customer service team before returning your goods.

Retourenabteilung
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler Germany

E-mail: **service@wiltec.info**
Phone: +49 2403 55592-0
Fax: (+49 2403 55592-15)



Introduction

Thank you for choosing to purchase this quality product. To minimise the risk of injury, we ask you to always take some basic safety precautions when using this product. Please read this operating manual carefully and make sure that you understand it.

Keep these operation instructions in a safe place.


Safety instructions

- Before use, check the device for completeness and functionality.
- Never use a damaged or dysfunctional device. Have a qualified technician check the device.
- Always work with care and the attention required.
- Keep your working area tidy and well illuminated. A cluttered and poorly lit workplace increases the risk of accidents.
- Keep children away from the device.
- Thoroughly store the device if not using it. Store it in a dry place.
- Do not modify the device in any way.
- Only use original spare parts.
- Do not force the device; otherwise, it could be damaged.
- Only use the device according to the intended use defined in this manual. Pay special attention to the maximum dimensions.
- Wear appropriate protection equipment (safety gloves, working shoes, protective goggles, etc.).
- While working, ensure a safe stand.
- Handle the device with care.
- Before use, control all screws and nuts for safe seat.
- Regularly inspect the device to find damaged spots or dysfunctional components.
- After maintaining the device, remove all tools.
- If parts are damaged, replace them with original spare parts.
- Do not use the device when being tired or under the influence of alcohol, drugs, or medicine.

Technical specifications

Max. work piece height (mm)	105
Projection (mm)	115
Mandrel size (mm)	25 × 25
Diameter of table (mm)	100
Tool holder inside diameter × depth (mm)	10 × 25
Max. pressing force (t)	1 (9.8067 kN)
Weight (kg)	13

Exploded view and parts list

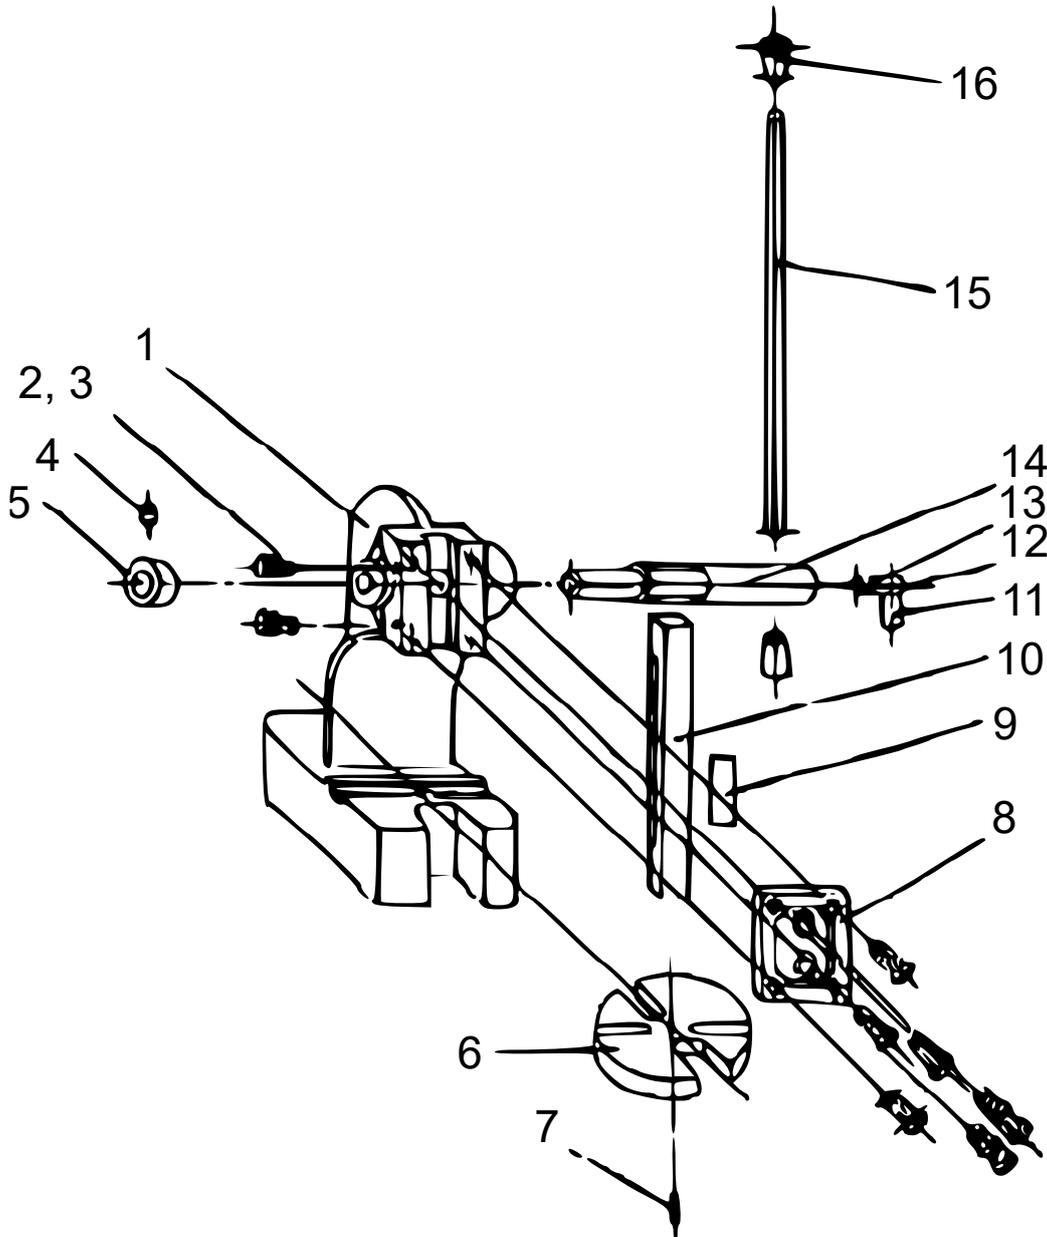

Nº	Name	Qty.	Nº	Name	Qty.
1	Body	1	9	(absent)	–
2	Screw	8	10	Guide rail	1
3	Nut	6	11	Locking bolt	1
4	Screw	1	12	Pin	1
5	Spacer ring	1	13	Screw	1
6	Plate	1	14	Shaft	1
7	Spring ring	1	15	Rod	1
8	Cover	11	16	Handle	2

Important Note: Reproduction and any commercial use (of parts) of this operating manual, requires a written permission of WilTec Wildanger Technik GmbH.