emWin

Graphic Library with Graphical User Interface

Version 5.12

Manual Rev. 0



www.segger.com

solutions for embedded software

Disclaimer

Specifications written in this document are believed to be accurate, but are not guaranteed to be entirely free of error. The information in this manual is subject to change for functional or performance improvements without notice. Please make sure your manual is the latest edition. While the information herein is assumed to be accurate, SEGGER Microcontroller GmbH & Co. KG (the manufacturer) assumes no responsibility for any errors or omissions. The manufacturer makes and you receive no warranties or conditions, express, implied, statutory or in any communication with you. The manufacturer specifically disclaims any implied warranty of merchantability or fitness for a particular purpose.

Copyright notice

You may not extract portions of this manual or modify the PDF file in any way without the prior written permission of the manufacturer. The software described in this document is furnished under a license and may only be used or copied in accordance with the terms of such a license.

© 2011 SEGGER Microcontroller GmbH & Co. KG, Hilden / Germany

Trademarks

Names mentioned in this manual may be trademarks of their respective companies.
Brand and product names are trademarks or registered trademarks of their respective holders.

Registration

Please register the software via email. This way we can make sure you will receive updates or notifications of updates as soon as they become available.
For registration, provide the following:

- Company name and address
- Your name
- Your job title
- Your email address and telephone number
- Name and version of the product

Please send this information to: register@segger.com

Contact address

SEGGER Microcontroller GmbH & Co. KG
In den Weiden 11
D-40721 Hilden
Germany
Tel.:+49 2103-2878-0
Fax.:+49 2103-2878-28
E-Mail: support@segger.com
Internet: http://www.segger.com

Manual versions

This manual describes the latest software version. The version number of the software can be found in the table ’Software versions’ later in this chapter. If any error occurs, inform us and we will try to assist you as soon as possible.
For further information on topics or routines not yet specified, contact us.
Print date: 6/28/11

Version	Date	By	Description
5.12R0	110621	AS JE	Chapter 17 'Window Objects (Widgets)' - New function LISTVIEW_SetHeaderHeight() added. - New function ICONVIEW_AddStreamedBitmapItem() added. - New function ICONVIEW_GetItemText() added. - New function ICONVIEW_GetItemUserData() added. - New function ICONVIEW_GetNumItems() added. - New function ICONVIEW_InsertBitmapItem() added. - New function ICONVIEW_InsertStreamedBitmapItem() added. - New function ICONVIEW_SetBitmapItem() added. - New function ICONVIEW_SetFrame() added. - New function ICONVIEW_SetItemText() added. - New function ICONVIEW_SetItemUserData() added. - New function ICONVIEW_SetSpace() added. - New function ICONVIEW_SetStreamedBitmapItem() added. - New function ICONVIEW_SetTextAlign() added. - New function TEXT_GetNumLines() added. Chapter 30 'Display Drivers' - New display driver added: GUIDRV_Dist GUIDRV_SPage - New display controller supported by GUIDRV_CompactColor_16: 66709: Solomon SSD1961 - LCD_SetDevFunc(): LCD_DEVFUNC_COPYRECT added. - GUIDRV_Lin: Support for LCD_DEVFUNC_COPYRECT added.
5.10R1	110531	AS JE	Chapter 30 'Display Drivers - New display driver: GUIDRV_FlexColor
5.10R0	110329	AS JE	Chapter 14 'Memory Devices' - Default for GUI_USE_MEMDEV_1BPP_FOR_SCREEN is 1. - New function GUI_MEMDEV_MarkDirty() added. Chapter 19 'GUIBuilder' added. Chapter 30 'Display Drivers' - New display controllers supporter by GUIDRV_CompactColor_16: 66708: Ilitek ILI9328 66709: Sitronix ST7715 66772: Ilitek ILI9221 - New function GUIDRV_BitPlains_Config() added.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Version	Date	By	Description
5.08R0	110112	AS JE	Chapter 9 ’2D Graphic Library’ - New function GUI_CreateBitmapFromStreamRLEAlpha() added. - New function GUI_CreateBitmapFromStreamRLE32() added. - Function GUI_CreateBitmapFromStream() supports additional formats. - New function GUI_UC_EnableBIDI() added. Chapter 12 ’Bitmap Converter’ - New format 'Alpha channel, compressed' added. - New format 'True color with alpha channel, compressed' added. - New function 'Image/Convert Into/Best Palette + transparency' added. Chapter 14 ’Memory Devices’ - New function GUI_MEMDEV_SetAnimationCallback() added. - New function GUI_MEMDEV_ShiftInWindow() added. - New function GUI_MEMDEV_ShiftOutWindow() added. Chapter 15 ’Execution Model’ - New function GUI_SetSignalEventFunc() added. - New function GUI_SetWaitEventFunc() added. - New function GUI_SetWaitEventTimedFunc() added. - Definitions of compile time configuration macros changed. Chapter 16 ’Window manager’ - New function WM_MULTIBUF_Enable() added. - New messages WM_PRE_PAINT and WM_POST_PAINT added. Chapter 17 ’Widgets’ - LISTVIEW_SetUserData() renamed o LISTVIEW_SetUserDataRow(). - LISTVIEW_GetUserData() renamed o LISTVIEW_GetUserDataRow(). - New function <WIDGET>_SetUserData added for all widgets. - New function <WIDGET>_GetUserData added for all widgets. - New function <WIDGET>_CreateUser added for all widgets. - New function BUTTON_GetTextAlign() added. - New function BUTTON_SetReactOnLevel() added. - New function ICONVIEW_CreateIndirect() added. - New function ICONVIEW_DeleteItem() added. - New function LISTWHEEL_CreateIndirect() added. - New function SCROLLBAR_SetThumbSizeMin() added. - New function SCROLLBAR_GetThumbSizeMin() added. - New function TREEVIEW_ITEM_CollapseAll() added. - New function TREEVIEW_ITEM_ExpandAll() added. Chapter 19 ’Skinning’ - New compile time configuration macro WIDGET_USE_FLEX_SKIN added. - New message WIDGET_ITEM_GET_RADIUS added to frame window skin. Chapter 20 ’Multiple buffering’. - New function GUI_MULTIBUF_Begin() added. - New function GUI_MULTIBUF_End() added. - New function GUI_MULTIBUF_Config() added.
5.06R0	100907	JE	Chapter 9 ’Fonts’: - New function GUI_SetDefaultFont() added. Chapter 12 ’Memory Devices’: - New function GUI_MEMDEV_FadeDevices() added. Chapter 15 ’Widgets’: - New function SCROLLBAR_GetNumItems() added. - New function SCROLLBAR_GetPageSize() added. - New function BUTTON_SetReactOnLevel() added. - New function LISTWHEEL_SetPos() added. - New function GRAPH_DATA_XY_SetOwnerDraw() added. - New function LISTVIEW_SetItemBitmap() added. New chapter 17 ’Skinning’: - Skinning for the most common widgets added. Chapter 26 ’Display Driver’: - New function GUI_SetOrientation() added (rotation device). - New OXY-orientations for 16, 24 and 32 bpp added to GUIDRV_Lin.
5.04R2	100526	AS	- New function LISTVIEW_SetItemBitmap() in Chapter ’Widgets’ - New function GRAPH_DATA_XY_SetOwnerDraw() in Chapter ’Widgets’ - New function GUI_SetDefaultFont() in Chapter ’Fonts’ - New function GUI_GetPixelIndex() in Chapter ’2-D Graphic Library’ - New function GUITASK_SetMaxTask() in Chapter ’Execution Model’ - GUIDRV_CompactColor_16: Support for the following display controllers added: Himax HX8353, LGDP4551, Orisetech SPFD54124C, Renesas R61505, Sitronix ST7735 and ST7787, Solomon SSD1284 and SSD2119. - Added driver macros to each driver which uses them.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Version	Date	By	Description
5.04R1	100505	AS	Drivers 'GUIDRV_S1D15G00' and 'GUIDRV_SLin' added Various corrections Chapter '2-D Graphic Library': - New function GUI_DrawGradientRoundedV() - New function GUI_DrawGradientRoundedH() - New function GUI_DrawRoundedFrame() Chapter 'Memory Devices': - New function GUI_MEMDEV_MoveInWindow() - New function GUI_MEMDEV_MoveOutWindow() - New function GUI_MEMDEV_FadeInWindow() - New function GUI_MEMDEV_FadeOutWindow() Chapter 'Simulation' - New function SIM_GUI_SetCallback() - New function SIM_GUI_ShowDevice()
5.04R0	100104	JE	Chapter 26 'VNC Server': - New function GUI_VNC_EnableKeyboardInput() added. - New function GUI_VNC_GetNumConnections() added. - New function GUI_VNC_SetPassword() added. - New function GUI_VNC_SetProgName() added. - New function GUI_VNC_SetSize() added. - New function GUI_VNC_RingBell() added.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Version	Date	By	Description
5.04R0	100104	JE	Chapter 5 'Displaying Text': - New function GUI_DispStringInRectWrap() added. - New function GUI_WrapGetNumLines() added. Chapter 7 '2-D Graphic Library': - New function GUI_EnableAlpha() added. - New function GUI_RestoreUserAlpha() added. - New function GUI_SetUserAlpha() added. - New function GUI_CreateBitmapFromStream() added. - New function GUI_DrawStreamedBitmapEx() added. - New function GUI_GetStreamedBitmapInfo() added. - New function GUI_GetStreamedBitmapInfoEx() added. - New function GUI_SetStreamedBitmapHook() added. - New function GUI_CreateBitmapFromStreamIDX() added. - New function GUI_CreateBitmapFromStreamRLE4() added. - New function GUI_CreateBitmapFromStreamRLE8() added. - New function GUI_CreateBitmapFromStream565() added. - New function GUI_CreateBitmapFromStreamM565() added. - New function GUI_CreateBitmapFromStream555() added. - New function GUI_CreateBitmapFromStreamM555() added. - New function GUI_CreateBitmapFromStreamRLE16() added. - New function GUI_CreateBitmapFromStreamRLEM16() added. - New function GUI_CreateBitmapFromStream24() added. - New function GUI_CreateBitmapFromStreamAlpha() added. Chapter 9 'Fonts': - New font F20F_ASCII (framed) added. - New fonts F6x8_ASCII and F6x8_1 added. - New fonts F8x8_ASCII and F8x8_1 added. - New fonts F8x16_ASCII and F8x16_1 added. - Support for new font formats extended AA2 and extended AA4 added. Chapter 12 'Memory Devices': - Considerations for multiple layers/displays added. Chapter 14 'Window Manager': - WM_DeleteWindow() now also deletes any associated timer. Chapter 15 'Widgets': - New function WINDOW_SetBkColor() added. Chapter 19 'Pointer Input Devices': - PID buffer added. - Explanation of touch calibration revised. Chapter 20 'Keyboard': - Keyboard buffer added. Chapter 25 'Display Driver': - New driver GUIDRV_BitPlains added. - New driver GUIDRV_SLin added. - New driver GUIDRV_SSD1926 added. - Driver GUIDRV_1611 added. - Driver GUIDRV_6331 added. - Driver GUIDRV_7529 added. - Driver GUIDRV_Page1bpp added. - GUIDRV_CompactColor_16: Support for the following display controllers added: Himax HX8340 and HX8352, Solomon SSD1298, SSD1355 and SSD1963, Epson S1D19122, Orisetech SPFD5414D, Ilitek ILI9320 and ILI9326
5.00R1	090409	JE	Chapter 3 'Simulator': - Completely revised. Chapter 8 'Displaying bitmap files' - PNG support added.
5.00R0	090326	JE	Software has been completely revised. For the version history of earlier versions, refer to older documents.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

SEGGER Microcontroller GmbH & Co. KG develops and distributes software development tools and ANSI C software components (middleware) for embedded systems in several industries such as telecom, medical technology, consumer electronics, automotive industry and industrial automation.

SEGGER's intention is to cut software development time for embedded applications by offering compact flexible and easy to use middleware, allowing developers to concentrate on their application.

Our most popular products are emWin, a universal graphic software package for embedded applications, and embOS, a small yet efficient real-time kernel. emWin, written entirely in ANSI C, can easily be used on any CPU and most any display. It is complemented by the available PC tools: Bitmap Converter, Font Converter, Simulator and Viewer. embOS supports most 8/16/32-bit CPUs. Its small memory footprint makes it suitable for single-chip applications.

Apart from its main focus on software tools, SEGGER develops and produces programming tools for flash micro controllers, as well as J-Link, a JTAG emulator to assist in development, debugging and production, which has rapidly become the industry standard for debug access to ARM cores.

Corporate Office:
http://www.segger.com

United States Office:
http://www.segger-us.com

EMBEDDED SOFTWARE (Middleware)

emWin
Graphics software and GUI



emWin is designed to provide an efficient, processor- and display controller-independent graphical user interface (GUI) for any application that operates with a graphical display. Starter kits, eval- and trial-versions are available.

embOS
Real Time Operating System



embOS is an RTOS designed to offer the benefits of a complete multitasking system for hard real time applications with minimal resources. The profiling PC tool embOSView is included.

emFile
File system



emFile is an embedded file system with FAT12, FAT16 and FAT32 support. emFile has been optimized for minimum memory consumption in RAM and ROM while maintaining high speed. Various Device drivers, for example for NAND and NOR flashes, SD/MMC and CompactFlash cards, are available.

USB-Stack
USB device stack



A USB stack designed to work on any embedded system with a USB client controller. Bulk communication and most standard device classes are supported.

SEGGER TOOLS

Flasher
Flash programmer

Flash Programming tool primarily for microcontrollers.

J-Link
JTAG emulator for ARM cores

USB driven JTAG interface for ARM cores.

J-Trace
JTAG emulator with trace

USB driven JTAG interface for ARM cores with Trace memory. supporting the ARM ETM (Embedded Trace Macrocell).

J-Link / J-Trace Related Software

Add-on software to be used with SEGGER's industry standard JTAG emulator, this includes flash programming software and flash breakpoints.



© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Table of Contents

1 Introduction to emWin 23

1.1 Purpose of this document 24
1.2 Assumptions 24
1.3 How to use this manual 24
1.4 Typographic conventions for syntax 24
1.5 Requirements 25
1.5.1 Target system (hardware) 25
1.5.2 Development environment (compiler) 25
1.6 Features 26
1.7 Examples and demos 27
1.8 Starter kits 27
1.9 Screen and coordinates 27
1.10 How to connect the display to the micro controller 28
1.11 Data types 29

2 Getting Started 31

2.1 Recommended directory structure 32
2.1.1 Subdirectories 32
2.1.2 Include directories 32
2.2 Adding emWin to the target program 32
2.3 Creating a library 33
2.3.1 Adapting the library batch files to a different system 33
2.4 C files to include in the project 35
2.5 Configuring emWin 35
2.6 Initializing emWin 36
2.7 Using emWin with target hardware 37
2.8 The "Hello world" example program 37

3 Simulation 39

3.1 Using the simulation 40
3.1.1 Using the simulation with the trial version of emWin 40
3.1.1.1 Directory structure 40
3.1.1.2 Visual C++ workspace 40
3.1.1.3 Compiling the demo program 41
3.1.1.4 Compiling the examples 41
3.1.2 Using the simulation with the emWin source 42
3.1.2.1 Directory structure 42
3.1.2.2 Visual C++ workspace 42
3.1.2.3 Compiling the application 43
3.1.3 Advanced features of the simulation 43
3.1.3.1 Pause and Resume 43
3.1.3.2 View system info 43
3.1.3.3 Copy to clipboard 43
3.2 Device simulation 44
3.2.1 Generated frame view 45
3.2.2 Custom bitmap view 45
3.2.3 Window view 46
3.3 Device simulation API 47
3.4 Hardkey simulation 52
3.4.1 Hardkey simulation API 53

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

3.5 Integrating the emWin simulation into an existing simulation 56
3.5.1 Directory structure 56
3.5.2 Using the simulation library 56
3.5.2.1 Modifying WinMain 56
3.5.2.2 Example application 57
3.5.3 Integration into the embOS Simulation 58
3.5.3.1 WinMain 58
3.5.3.2 Target program (main) 59
3.5.4 GUI simulation API 60

4 Viewer 63

4.1 Using the viewer 64
4.1.1 Using the simulation and the viewer 64
4.1.2 Using the viewer with virtual pages 65
4.1.3 Always on top 65
4.1.4 Open further windows of the display output 65
4.1.5 Zooming 66
4.1.6 Copy the output to the clipboard 66
4.1.7 Using the viewer with multiple displays 67
4.1.8 Using the viewer with multiple layers 67

5 Displaying Text 69

5.1 Basic routines 70
5.2 Text API 71
5.3 Routines to display text 72
5.4 Selecting text drawing modes 79
5.5 Selecting text alignment 81
5.6 Setting the current text position 83
5.7 Retrieving the current text position 84
5.8 Routines to clear a window or parts of it 84

6 Displaying Values 85

6.1 Value API 86
6.2 Displaying decimal values 87
6.3 Displaying floating point values 91
6.4 Displaying binary values 94
6.5 Displaying hexadecimal values 95
6.6 Version of emWin 96

7 2-D Graphic Library 97

7.1 Graphic API 98
7.2 Drawing modes 100
7.3 Query current client rectangle 102
7.4 Pen size 102
7.5 Basic drawing routines 103
7.6 Alpha blending 110
7.7 Drawing bitmaps 113
7.8 Drawing streamed bitmaps 116
7.9 Drawing lines 122
7.10 Drawing polygons 126
7.11 Drawing circles 131
7.12 Drawing ellipses 133
7.13 Drawing arcs 135
7.14 Drawing graphs 137
7.15 Drawing pie charts 138
7.16 Saving and restoring the GUI-context 139
7.17 Clipping 140

8 Displaying bitmap files 141

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

8.1 BMP file support 142
8.1.1 Supported formats 142
8.1.2 BMP file API 142
8.2 JPEG file support 148
8.2.1 Supported JPEG compression methods 148
8.2.2 Converting a JPEG file to C source 148
8.2.3 Displaying JPEG files 148
8.2.4 Memory usage 149
8.2.5 Progressive JPEG files 149
8.2.6 JPEG file API 149
8.3 GIF file support 154
8.3.1 Converting a GIF file to C source 154
8.3.2 Displaying GIF files 154
8.3.3 Memory usage 154
8.3.4 GIF file API 155
8.4 PNG file support 163
8.4.1 Converting a PNG file to C source 163
8.4.2 Displaying PNG files 163
8.4.3 Memory usage 163
8.4.4 PNG file API 163
8.5 Getting data with the ...Ex() functions 167

9 Fonts 169

9.1 Introduction 170
9.2 Font types 170
9.3 Font formats 172
9.3.1 C file format 172
9.3.2 System Independent Font (SIF) format 172
9.3.3 External Bitmap Font (XBF) format 173
9.3.4 TrueType Font (TTF) format 174
9.4 Converting a TTF file to C source 174
9.5 Declaring custom fonts 175
9.6 Selecting a font 175
9.7 Font API 176
9.8 C file related font functions 177
9.9 'SIF' file related font functions 178
9.10 'TTF' file related font functions 179
9.11 'XBF' file related font functions 183
9.12 Common font-related functions 184
9.13 Character sets 188
9.13.1 ASCII 188
9.13.2 ISO 8859-1 Western Latin character set 189
9.13.3 Unicode 190
9.14 Font converter 191
9.14.1 Adding fonts 191
9.15 Standard fonts 192
9.15.1 Font identifier naming convention 192
9.15.2 Font file naming convention 193
9.15.3 Measurement, ROM-size and character set of fonts 193
9.15.4 Proportional fonts 194
9.15.4.1 Overview 194
9.15.4.2 Measurement, ROM size and used files 194
9.15.4.3 Characters 196
9.15.5 Proportional fonts, framed 202
9.15.5.1 Overview 202
9.15.5.2 Measurement, ROM size and used files 202
9.15.5.3 Characters 202
9.15.6 Monospaced fonts 203
9.15.6.1 Overview 203
9.15.6.2 Measurement, ROM size and used files 204
9.15.6.3 Characters 205

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

9.15.7 Digit fonts (proportional) 209
9.15.7.1 Overview 209
9.15.7.2 Measurement, ROM size and used files 209
9.15.7.3 Characters 209
9.15.8 Digit fonts (monospaced) 210
9.15.8.1 Overview 210
9.15.8.2 Measurement, ROM size and used files 211
9.15.8.3 Characters 211

10 Bitmap Converter 213

10.1 What it does 214
10.2 Loading a bitmap 214
10.2.1 Supported input file formats 214
10.2.2 Loading from a file 214
10.2.3 Using the clipboard 215
10.3 Generating C files from bitmaps 215
10.3.1 Supported bitmap formats 215
10.3.2 Palette information 215
10.3.3 Transparency 216
10.3.4 Alpha blending 216
10.3.5 Selecting the best format 217
10.3.6 Saving the file 218
10.4 Color conversion 219
10.5 Generating C stream files 220
10.6 Compressed bitmaps 220
10.7 Using a custom palette 221
10.7.1 Saving a palette file 221
10.7.2 Palette file format 221
10.7.3 Palette files for fixed palette modes 221
10.7.4 Converting a bitmap 222
10.8 Command line usage 222
10.8.1 Format for commands 222
10.8.2 Valid command line options 222
10.9 Example of a converted bitmap 224

11 Colors 227

11.1 Predefined colors 228
11.2 The color bar test routine 228
11.3 Fixed palette modes 229
11.4 Detailed fixed palette mode description 230
11.5 Application defined color conversion 240
11.6 Custom palette mode 241
11.7 Color API 241
11.8 Basic color functions 242
11.9 Index & color conversion 244

12 Memory Devices 247

12.1 Using memory devices: an illustration 248
12.2 Supported color depth (bpp) 248
12.3 Memory devices and the window manager 249
12.4 Memory devices and multiple layers 249
12.5 Memory requirements 249
12.6 Performance 250
12.7 Basic functions 251
12.8 In order to be able to use memory devices... 251
12.9 Multi layer / multi display configurations 251
12.10 Configuration options 251
12.10.1 GUI_USE_MEMDEV_1BPP_FOR_SCREEN 251
12.11 Memory device API 251
12.12 Basic functions 253

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

12.13 Banding memory device 266
12.14 Auto device object 267
12.15 Measurement device object 269
12.16 Animation functions 271
12.17 Animation functions (Window Manager required) 272

13 Execution Model: Single Task / Multitask 277

13.1 Supported execution models 278
13.2 Single task system (superloop) 278
13.2.1 Description 278
13.2.2 Superloop example (without emWin) 278
13.2.3 Advantages 278
13.2.4 Disadvantages 278
13.2.5 Using emWin 278
13.2.6 Superloop example (with emWin) 279
13.3 Multitask system: one task calling emWin 279
13.3.1 Description 279
13.3.2 Advantages 279
13.3.3 Disadvantages 279
13.3.4 Using emWin 279
13.4 Multitask system: multiple tasks calling emWin 280
13.4.1 Description 280
13.4.2 Advantages 280
13.4.3 Disadvantages 280
13.4.4 Using emWin 280
13.4.5 Recommendations 280
13.4.6 Example 280
13.5 GUI configuration functions for multitasking support 281
13.6 GUI configuration macros for multitasking support 283
13.7 Kernel interface API 284
13.7.1 Examples 287

14 The Window Manager (WM) 289

14.1 Description of terms 290
14.2 Callback mechanism, invalidation and rendering 291
14.2.1 Rendering without callbacks 291
14.2.2 Rendering using callbacks 292
14.2.3 Background window redrawing and callback 292
14.2.4 Invalidation 293
14.2.5 Rendering of transparent windows 293
14.2.6 Automatic use of memory devices 293
14.2.7 Automatic use of multiple frame buffers 294
14.2.8 Automatic use of display driver cache 294
14.3 Messages 295
14.3.1 Message structure 295
14.3.2 List of messages 295
14.3.3 System-defined messages 296
14.3.4 Pointer input device (PID) messages 300
14.3.5 System-defined notification codes 303
14.3.6 Application-defined messages 303
14.4 Configuration options 304
14.5 WM API 305
14.5.1 Using the WM API functions 307
14.6 Basic functions 307
14.7 Memory device support (optional) 336
14.8 Timer related functions 336
14.9 Widget related functions 339
14.10 Example 342

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

15 Window Objects (Widgets) 345
15.1 Some basics 346
15.1.1 Available widgets 346
15.1.2 Understanding the redrawing mechanism 347
15.1.3 How to use widgets 347
15.2 Configuration options 349
15.3 General widget API 350
15.3.1 WM routines used for widgets 350
15.3.2 Common routines 350
15.3.3 User drawn widgets 354
15.4 BUTTON: Button widget 356
15.4.1 Configuration options 356
15.4.2 Notification codes 357
15.4.3 Keyboard reaction 357
15.4.4 BUTTON API 357
15.4.5 Examples 370
15.5 CHECKBOX: Checkbox widget 371
15.5.1 Configuration options 372
15.5.2 Notification codes 372
15.5.3 Keyboard reaction 372
15.5.4 CHECKBOX API 372
15.5.5 Example 386
15.6 DROPDOWN: Dropdown widget 387
15.6.1 Configuration options 388
15.6.2 Notification codes 388
15.6.3 Keyboard reaction 388
15.6.4 DROPDOWN API 388
15.6.5 Example 400
15.7 EDIT: Edit widget 402
15.7.1 Configuration options 402
15.7.2 Notification codes 402
15.7.3 Keyboard reaction 403
15.7.4 EDIT API 403
15.7.5 Examples 418
15.8 FRAMEWIN: Frame window widget 419
15.8.1 Structure of the frame window 420
15.8.2 Configuration options 421
15.8.3 Keyboard reaction 421
15.8.4 FRAMEWIN API 421
15.8.5 Example 442
15.9 GRAPH: Graph widget 443
15.9.1 Structure of the graph widget 443
15.9.2 Creating and deleting a graph widget 444
15.9.3 Drawing process 444
15.9.4 Supported types of curves 444
15.9.4.1 GRAPH_DATA_XY 445
15.9.4.2 GRAPH_DATA_YT 445
15.9.5 Configuration options 445
15.9.5.1 Graph widget 445
15.9.5.2 Scale object 445
15.9.6 Keyboard reaction 445
15.9.7 GRAPH API 445
15.9.7.1 Common routines 447
15.9.7.2 GRAPH_DATA_YT related routines 455
15.9.7.3 GRAPH_DATA_XY related routines 459
15.9.7.4 Scale related routines 463
15.9.8 Examples 467
15.10 HEADER: Header widget 469
15.10.1 Configuration options 470
15.10.2 Notification codes 470
15.10.3 Keyboard reaction 470

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

15.10.4 HEADER API 470
15.10.5 Example 482
15.11 ICONVIEW: Icon view widget 483
15.11.1 Configuration options 483
15.11.2 Notification codes 484
15.11.3 Keyboard reaction 484
15.11.4 ICONVIEW API 484
15.11.5 Example 494
15.12 LISTBOX: List box widget 496
15.12.1 Configuration options 496
15.12.2 Notification codes 496
15.12.3 Keyboard reaction 496
15.12.4 LISTBOX API 497
15.12.5 Examples 513
15.13 LISTVIEW: Listview widget 514
15.13.1 Configuration options 515
15.13.2 Notification codes 515
15.13.3 Keyboard reaction 515
15.13.4 LISTVIEW API 516
15.13.5 Example 537
15.14 LISTWHEEL: Listwheel widget 539
15.14.1 Configuration options 539
15.14.2 Notification codes 539
15.14.3 Keyboard reaction 539
15.14.4 LISTWHEEL API 540
15.15 MENU: Menu widget 553
15.15.1 Menu messages 554
15.15.2 Data structures 555
15.15.3 Configuration options 555
15.15.4 Keyboard reaction 556
15.15.5 MENU API 556
15.15.6 Example 570
15.16 MESSAGEBOX: Message box widget 571
15.16.1 Configuration options 571
15.16.2 Keyboard reaction 571
15.16.3 MESSAGEBOX API 571
15.17 MULTIEDIT: Multi line text widget 573
15.17.1 Configuration options 574
15.17.2 Notification codes 574
15.17.3 Keyboard reaction 574
15.17.4 MULTIEDIT API 574
15.17.5 Example 584
15.18 MULTIPAGE: Multiple page widget 586
15.18.1 Configuration options 587
15.18.2 Notification codes 587
15.18.3 Keyboard reaction 587
15.18.4 MULTIPAGE API 587
15.18.5 Example 598
15.19 PROGBAR: Progress bar widget 599
15.19.1 Configuration options 599
15.19.2 Keyboard reaction 599
15.19.3 PROGBAR API 599
15.19.4 Examples 604
15.20 RADIO: Radio button widget 605
15.20.1 Configuration options 605
15.20.2 Notification codes 605
15.20.3 Keyboard reaction 606
15.20.4 RADIO API 606
15.20.5 Examples 615
15.21 SCROLLBAR: Scroll bar widget 617
15.21.1 Configuration options 617

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

15.21.2 Notification codes 617
15.21.3 Keyboard reaction 617
15.21.4 SCROLLBAR API 618
15.21.5 Example 625
15.22 SLIDER: Slider widget 626
15.22.1 Configuration options 626
15.22.2 Notification codes 626
15.22.3 Keyboard reaction 626
15.22.4 SLIDER API 626
15.22.5 Example 632
15.23 TEXT: Text widget 633
15.23.1 Configuration options 633
15.23.2 Keyboard reaction 633
15.23.3 TEXT API 633
15.23.4 Examples 639
15.24 TREEVIEW: Treeview widget 640
15.24.1 Description of terms 641
15.24.2 Configuration options 642
15.24.3 Notification codes 642
15.24.4 Keyboard reaction 642
15.24.5 TREEVIEW API 643
15.24.5.1 Common routines 644
15.24.5.2 Item related routines 657
15.24.6 Example 662
15.25 WINDOW: Window widget 663
15.25.1 Configuration options 663
15.25.2 Keyboard reaction 663
15.25.3 WINDOW API 663

16 Dialogs 665

16.1 Dialog basics 666
16.2 Creating a dialog 666
16.2.1 Resource table 666
16.2.2 Dialog procedure 667
16.2.2.1 Initializing the dialog 668
16.2.2.2 Defining dialog behavior 669
16.3 Dialog API 670
16.4 Dialog boxes 670

17 GUIBuilder 673

17.1 Introduction 674
17.2 Getting started 675
17.3 Creating a dialog 676
17.3.1 Selecting a parent widget 676
17.3.2 Resizing and positioning in the editor 676
17.3.3 Modifying the widget properties 676
17.3.4 Adding additional functions to a widget 676
17.3.5 Deleting a widget property 677
17.3.6 Deleting a widget 677
17.4 Saving the current dialog(s) 678
17.5 Output of the GUIBuilder 679
17.6 Modifying the C files 681
17.7 How to use the C files 681

18 Skinning 683

18.1 What is a 'skin'? 684
18.2 From using API functions to skinning 684
18.3 Skinnable widgets 685
18.4 Using a skin 685
18.4.1 Runtime configuration 686

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

18.4.2 Compile time configuration ... 686
18.5 Simple changes to the look of the 'Flex' skin ... 686
18.6 Major changes to the look of the 'Flex' skin ... 687
18.6.1 The skinning callback mechanism ... 687
18.6.2 Changing the look of the default skin ... 687
18.6.3 List of commands ... 688
18.7 General skinning API ... 690
18.8 BUTTON_SKIN_FLEX ... 693
18.8.1 Configuration structure ... 693
18.8.2 Configuration options ... 693
18.8.3 Skinning API ... 694
18.8.4 List of commands ... 695
18.9 CHECKBOX_SKIN_FLEX ... 696
18.9.1 Configuration structure ... 696
18.9.2 Configuration options ... 696
18.9.3 Skinning API ... 697
18.9.4 List of commands ... 698
18.10 DROPDOWN_SKIN_FLEX ... 700
18.10.1 Configuration structure ... 700
18.10.2 Configuration options ... 701
18.10.3 Skinning API ... 701
18.10.4 List of commands ... 702
18.11 FRAMEWIN_SKIN_FLEX ... 703
18.11.1 Configuration structure ... 703
18.11.2 Configuration options ... 704
18.11.3 Skinning API ... 704
18.11.4 List of commands ... 705
18.12 HEADER_SKIN_FLEX ... 708
18.12.1 Configuration structure ... 708
18.12.2 Configuration options ... 708
18.12.3 Skinning API ... 709
18.12.4 List of commands ... 709
18.13 PROGBAR_SKIN_FLEX ... 711
18.13.1 Configuration structure ... 711
18.13.2 Configuration options ... 711
18.13.3 Skinning API ... 712
18.13.4 List of commands ... 712
18.14 RADIO_SKIN_FLEX ... 715
18.14.1 Configuration structure ... 715
18.14.2 Configuration options ... 716
18.14.3 Skinning API ... 716
18.14.4 List of commands ... 717
18.15 SCROLLBAR_SKIN_FLEX ... 719
18.15.1 Configuration structure ... 719
18.15.2 Configuration options ... 720
18.15.3 Skinning API ... 720
18.15.4 List of commands ... 721
18.16 SLIDER_SKIN_FLEX ... 724
18.16.1 Configuration structure ... 724
18.16.2 Configuration options ... 725
18.16.3 Skinning API ... 725
18.16.4 List of commands ... 726

19 Multiple buffering ... 729

19.1 How it works ... 730
19.1.1 Double buffering ... 730
19.1.2 Triple buffering ... 730
19.2 Requirements ... 731
19.3 Limitations ... 731
19.4 Configuration ... 731
19.4.1 LCD_X_Config() ... 731

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

19.4.2 LCD_X_DisplayDriver() 732
19.5 Automatic use of multiple buffers with the WM 733
19.6 Multiple buffer API 734

20 Virtual screen / Virtual pages 739

20.1 Introduction 740
20.2 Requirements 740
20.3 Configuration 741
20.4 Examples 741
20.4.1 Basic example 741
20.4.2 Real time example using the window manager 743
20.4.3 Dialog example using the window manager 744
20.5 Virtual screen API 746

21 Multi layer / multi display support 747

21.1 Introduction 748
21.1.1 Selecting a layer for drawing operations 748
21.1.2 Selecting a layer for a window 748
21.1.2.1 Moving a window from one layer to an other 749
21.2 Using multi layer support 751
21.2.1 Transparency 751
21.2.2 Alpha blending 752
21.2.3 Hardware cursors 753
21.2.4 Multi layer example 753
21.3 Using multi display support 753
21.3.1 Enabling multi display support 753
21.3.2 Run-time screen rotation 754
21.3.3 Multi display example 754
21.4 Configuring multi layer support 754
21.5 Configuring multi display support 755
21.6 Multi layer API 755

22 Pointer Input Devices 759

22.1 Description 760
22.2 Pointer input device API 760
22.3 Mouse driver 761
22.3.1 Generic mouse API 761
22.3.2 PS2 mouse driver 762
22.3.2.1 Using the PS2 mouse driver 762
22.3.2.2 PS2 mouse driver API 762
22.4 Touch screen driver 763
22.4.1 Generic touch screen API 763
22.4.2 The analog touch screen driver 764
22.4.2.1 Setting up the analog touch screen 765
22.4.2.2 Runtime calibration 767
22.4.2.3 Hardware routines 767
22.4.2.4 Driver API for analog touch screens 769
22.4.2.5 Configuring the analog touch-screen driver 770
22.5 Joystick input example 771

23 Keyboard Input 773

23.1 Description 774
23.1.1 Driver layer API 775
23.1.2 Application layer API 776

24 Sprites 777

24.1 Introduction 778
24.2 Sprite API 778

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

25 Cursors 783
25.1 Available cursors 784
25.2 Cursor API 784

26 Antialiasing 787
26.1 Introduction 788
26.1.1 Quality of antialiasing 788
26.1.2 Antialiased Fonts 788
26.1.3 High-resolution coordinates 789
26.2 Antialiasing API 790
26.3 Control functions 790
26.4 Drawing functions 791
26.5 Examples 795

27 Foreign Language Support 801
27.1 Unicode 802
27.1.1 UTF-8 encoding 802
27.1.2 Unicode characters 802
27.1.3 UTF-8 strings 803
27.1.3.1 Using U2C.exe to convert UTF-8 text into C-code 803
27.1.4 Unicode API 804
27.1.4.1 UTF-8 functions 804
27.1.4.2 Double byte functions 807
27.2 Arabic language support 808
27.2.1 Notation forms 808
27.2.2 Ligatures 809
27.2.3 Bidirectional text alignment 809
27.2.4 Requirements 810
27.2.5 How to enable Arabic support 810
27.2.6 Example 810
27.2.7 Font files used with Arabic text 810
27.3 Thai language support 811
27.3.1 Requirements 811
27.3.2 How to enable Thai support 811
27.3.3 Example 811
27.3.4 Font files used with Thai text 811
27.4 Shift JIS support 812
27.4.1 Creating Shift JIS fonts 812

28 Display drivers 813
28.1 Available display drivers 814
28.1.1 Driver file naming convention 814
28.1.2 Run-time configurable drivers 814
28.1.3 Compile-time configurable drivers 815
28.1.4 Available, but not yet migrated drivers 816
28.1.5 Special purpose drivers 816
28.2 CPU / Display controller interface 816
28.2.1 Direct interface 817
28.2.2 Indirect interface - Parallel bus 817
28.2.2.1 Example routines for connection to I/O pins 818
28.2.3 Indirect interface - 4 pin SPI 818
28.2.3.1 Example routines for connection to I/O pins 818
28.2.4 Indirect interface - 3 pin SPI 818
28.2.4.1 Example routines for connection to I/O pins 819
28.2.5 Indirect interface - I2C bus 819
28.2.5.1 Example routines for connection to I/O pins 819
28.3 Hardware interface configuration 819
28.3.1 Direct interface 819
28.3.2 Indirect interface 819

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

28.3.2.1 Run-time configuration 820
28.3.2.2 Compile-time configuration....821
28.4 Non readable displays....824
28.5 Display orientation 824
28.5.1 Driver based configuration of display orientation 824
28.5.1.1 Run-time configuration 825
28.5.1.2 Compile-time configuration....825
28.5.2 Function based configuration of display orientation 825
28.6 Display driver callback function 827
28.6.1 Commands passed to the callback function 827
28.7 Detailed display driver descriptions....829
28.7.1 GUIDRV_BitPlains....829
28.7.2 GUIDRV_Dist....832
28.7.3 GUIDRV_FlexColor....834
28.7.4 GUIDRV_IST3088....839
28.7.5 GUIDRV_Lin 841
28.7.6 GUIDRV_S1D13748....845
28.7.7 GUIDRV_S1D15G00 847
28.7.8 GUIDRV_SLin 850
28.7.9 GUIDRV_SPage....854
28.7.10 GUIDRV_SSD1926 858
28.7.11 GUIDRV_CompactColor_16....861
28.7.12 GUIDRV_Fujitsu_16....866
28.7.13 GUIDRV_Page1bpp....868
28.7.14 GUIDRV_07X1 871
28.7.15 GUIDRV_1611 874
28.7.16 GUIDRV_6331 877
28.7.17 GUIDRV_7529 879
28.7.18 GUIDRV_Template - Template for a new driver 882
28.8 LCD layer and display driver API 883
28.8.1 Display driver API 883
28.8.2 User defined routines....884
28.8.3 LCD layer routines....885
28.8.3.1 "Get" group....885
28.8.3.2 Configuration group....888
28.8.3.3 Cache group....891

29 VNC Server....893

29.1 Introduction 894
29.1.1 Requirements 894
29.1.2 Notes on this implementation 894
29.2 The VNC viewer 895
29.2.1 Starting the VNC viewer....895
29.3 emWin VNC server 896
29.3.1 Starting the emWin VNC server....896
29.3.2 How the server starts ... .896
29.3.3 Integration of the VNC server on the target 896
29.4 Requirements 897
29.5 Configuration options....897
29.6 VNC API....897

30 Timing- and execution-related functions....901

30.1 Timing and execution API....902

31 Configuration....905

31.1 What needs to be configured?....906
31.2 Run-time- and compile-time configuration 906
31.3 Initialization process of emWin....906
31.4 Run-time configuration 907
31.4.1 Customizing GUIConf.c 907

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

31.4.1.1 API functions to be used in GUI_X_Config() ... 907
31.4.2 Customizing LCDConf.c ... 909
31.4.2.1 API functions to be used in LCD_X_Config() ... 910
31.4.3 Customizing GUI_X.c ... 911
31.4.3.1 Timing routines ... 911
31.4.3.2 Debugging routines ... 912
31.4.3.3 Kernel interface routines ... 912
31.5 Compile time configuration ... 913
31.5.1 Customizing GUIConf.h ... 913
31.5.1.1 Configuring the available features of emWin ... 913
31.5.1.2 Default font and default color configuration ... 913
31.5.1.3 Advanced GUI configuration options ... 914
31.5.2 Customizing LCDConf.h ... 915
31.6 Request available memory ... 915

32 Performance and Resource Usage ... 917

32.1 Performance ... 918
32.1.1 Driver benchmark ... 918
32.1.2 Image drawing performance ... 919
32.2 Memory requirements ... 920
32.2.1 Memory requirements of the GUI components ... 920
32.2.2 Stack requirements ... 921
32.3 Memory requirements of example applications ... 921

33 Support ... 923

33.1 Problems with tool chain (compiler, linker) ... 924
33.1.1 Compiler crash ... 924
33.1.2 Compiler warnings ... 924
33.1.3 Compiler errors ... 924
33.1.4 Linker problems ... 925
33.2 Problems with hardware/driver ... 925
33.3 Problems with API functions ... 926
33.4 Problems with the performance ... 926
33.5 Contacting support ... 927
33.6 FAQ's ... 928

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 3

Introduction to emWin

This introduction gives some information about this document. It also gives an overview of what features emWin consists of and what it requires.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

3.1 Purpose of this document

This guide describes how to install, configure and use the emWin graphical user interface for embedded applications. It also explains the internal structure of the software.

3.2 Assumptions

This guide assumes that you already possess a solid knowledge of the C programming language. If you feel that your knowledge of C is not sufficient, we recommend *The "C" Programming Language* by Kernighan and Richie, which describes the programming standard and, in newer editions, it also covers the ANSI C standard. Knowledge of assembly programming is not required.

3.3 How to use this manual

This manual explains how to install, configure and use emWin. It describes the internal structure of the software and all the functions that emWin offers (the Application Program Interface, or API). Before actually using emWin, you should read or at least glance through this manual in order to become familiar with the software. The following steps are then recommended:

- Copy the emWin files to your computer.
- Go through the chapter "Getting Started" on page 31.
- Use the simulator in order to become more familiar with what the software can do (refer to the chapter "Simulation" on page 39).
- Expand your program using the rest of the manual for reference.

3.4 Typographic conventions for syntax

This manual uses the following typographic conventions:

Style	Used for
Body	Body text.
`Keyword`	Text that you enter at the command-prompt or that appears on the display (that is, system functions, file- or pathnames).
`Parameter`	Parameters in API functions.
`Example`	Example code in program examples.
`New Example`	Example code that has been added to an existing program example.
Warning	Important cautions or reminders.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

3.5 Requirements

A target system is not required in order to develop software with emWin; most of the software can be developed using the simulator. However, the final purpose is usually to be able to run the software on a target system.

3.5.1 Target system (hardware)

Your target system must:

- Have a CPU (8/16/32/64 bits)
- Have a minimum of RAM and ROM
- Have a full graphic display (any type and any resolution)

The memory requirements vary depending on which parts of the software are used and how efficient your target compiler is. It is therefore not possible to specify precise values, but the following apply to typical systems.

Small systems (no window manager)

- RAM: 100 bytes
- Stack: 600 bytes
- ROM: 10-25 kb (depending on the functionality used)

Big systems (including window manager and widgets)

- RAM: 2-6 kb (depending on number of windows required)
- Stack: 1200-1800 bytes (depending on the functionality used)
- ROM: 30-60 kb (depending on the functionality used)

Note that ROM requirements will increase if your application uses many fonts. All values are rough estimates and cannot be guaranteed.

3.5.2 Development environment (compiler)

The CPU used is of no importance; only an ANSI-compliant C compiler complying with at least one of the following international standard is required:

- ISO/IEC/ANSI 9899:1990 (C90) with support for C++ style comments (//)
- ISO/IEC 9899:1999 (C99)
- ISO/IEC 14882:1998 (C++)

If your compiler has some limitations, let us know and we will inform you if these will be a problem when compiling the software. Any compiler for 16/32/64-bit CPUs or DSPs that we know of can be used; most 8-bit compilers can be used as well. A C++ compiler is not required, but can be used. The application program can therefore also be programmed in C++ if desired.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

3.6 Features

emWin is designed to provide an efficient, processor- and display controller-independent graphical user interface for any application that operates with a graphical display. It is compatible with single-task and multitask environments, with a proprietary operating system or with any commercial RTOS. emWin is shipped as C source code. It may be adapted to any size physical and virtual display with any display controller and CPU. Its features include the following:

General

- Any (monochrome, grayscale or color) display with any controller supported (if the right driver is available).
- May work without display controller on smaller displays.
- Any interface supported using configuration macros.
- Display-size configurable.
- Characters and bitmaps may be written at any point on the display, not just on even-numbered byte addresses.
- Routines are optimized for both size and speed.
- Compile time switches allow for different optimizations.
- For slower display controllers, display can be cached in memory, reducing access to a minimum and resulting in very high speed.
- Clear structure.
- Virtual display support; the virtual display can be larger than the actual display.

Graphic library

- Bitmaps of different color depths supported.
- Bitmap converter available.
- Absolutely no floating-point usage.
- Fast line/point drawing (without floating-point usage).
- Very fast drawing of circles/polygons.
- Different drawing modes.

Fonts

- A variety of different fonts are shipped with the basic software: 4*6, 6*8, 6*9, 8*8, 8*9, 8*16, 8*17, 8*18, 24*32, and proportional fonts with pixel-heights of 8, 10, 13, 16. For more information, see chapter ’Fonts’.
- New fonts can be defined and simply linked in.
- Only the fonts used by the application are actually linked to the resulting executable, resulting in minimum ROM usage.
- Fonts are fully scalable, separately in X and Y.
- Font converter available; any font available on your host system (that is, Microsoft Windows) can be converted.

String/value output routines

- Routines to show values in decimal, binary, hexadecimal, any font.
- Routines to edit values in decimal, binary, hexadecimal, any font.

Window manager (WM)

- Complete window management including clipping. Overwriting of areas outside a window’s client area is impossible.
- Windows can be moved and resized.
- Callback routines supported (usage optional).
- WM uses minimum RAM (app. 50 bytes per window).

Optional widgets for PC look and feel

- Widgets (window objects, also known as controls) are available. They generally operate automatically and are simple to use.

Touch-screen & mouse support

- For window objects such as the button widget, emWin offers touch-screen and mouse support.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

PC tools

- Simulation plus viewer.
- Bitmap converter.
- Font converter.

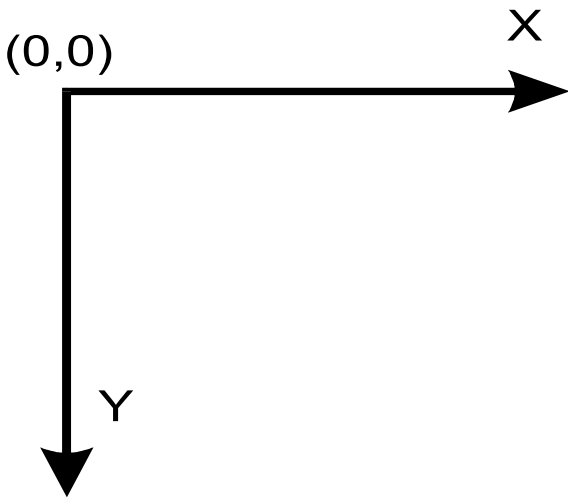
3.7 Examples and demos

To give you a better idea of what emWin can do, we have different demos available as "ready-to-use" simulation executables under `Sample\EXE`. The source of the example programs is located in the folder `Sample`. The folder `Sample\GUIDemo` contains an application program showing many features of emWin. All examples are also available at www.segger.com.

3.8 Starter kits

Complete starter kits including a demo board with a display, a C compiler and an example project are available. For more details, take a look at our website at www.segger.com.

3.9 Screen and coordinates



The screen consists of many dots that can be controlled individually. These dots are called pixels. Most of the text and drawing functions that emWin offers in its API to the user program can write or draw on any specified pixel.
The horizontal scale is called the X-axis, whereas the vertical scale is called the Y-axis. Coordinates are denoted as a pair consisting of an X- and a Y-value (X, Y). The X-coordinate is always first in routines that require X and Y coordinates. The upper left corner of the display (or a window) has per default the coordinates (0,0). Positive X-values are always to the right; positive Y-values are always down. The above graph illustrates the coordinate system and directions of the X- and Y- axes. All coordinates passed to an API function are always specified in pixels.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

3.10 How to connect the display to the micro controller

emWin handles all access to the display. Virtually any display controller can be supported, independently of how it is accessed. For details, refer to the chapter "Configuration" on page 905. Also, get in contact with us if your display controller is not supported. We are currently writing drivers for all display controllers available on the market and may already have a proven driver for the display controller that you intend to use. It is usually very simple to write the routines (or macros) used to access the display in your application SEGGER Microcontroller GmbH & Co. KG offers the service of making these customizations for you, if necessary with your target hardware.
It does not really matter how the display is connected to the system as long as it is somehow accessible by software, which may be accomplished in a variety of ways. Most of these interfaces are supported by a driver which is supplied in source code form. This driver does not normally require modifications, but is configured for your hardware by making changes in the file `LCDConf.h`. Details about how to customize a driver to your hardware as necessary are provided in the chapter "Display drivers" on page 813. The most common ways to access the display are described as follows. If you simply want to understand how to use emWin, you may skip this section.

Display with memory-mapped display controller:

The display controller is connected directly to the data bus of the system, which means the controller can be accessed just like a RAM. This is a very efficient way of accessing the display controller and is most recommended. The display addresses are defined to the segment LCDSEG, and in order to be able to access the display the linker/locator simply needs to be told where to locate this segment. The location must be identical to the access address in physical address space. Drivers are available for this type of interface and for different display controllers.

Display with display controller connected to port / buffer

For slower display controllers used on fast processors, the use of port-lines may be the only solution. This method of accessing the display has the disadvantage of being somewhat slower than direct bus-interface but, particularly with a cache that minimizes the accesses to the display, the display update is not slowed down significantly. All that needs to be done is to define routines or macros which set or read the hardware ports/buffers that the display is connected to. This type of interface is also supported by different drivers for the different display controllers.

Proprietary solutions: display without display controller

The display can also be connected without an display controller. In this case, the display data is usually supplied directly by the controller via a 4- or 8-bit shift register. These proprietary hardware solutions have the advantage of being inexpensive, but the disadvantage of using up much of the available computation time. Depending on the CPU, this can be anything between 20 and almost 100 percent; with slower CPUs, it is really not possible at all. This type of interface does not require a specific display driver because emWin simply places all the display data into the display cache. You yourself must write the hardware-dependent portion that periodically transfers the data in the cache memory to your display.
Example code for transferring the video image into the display is available in both C and optimized assembler for M16C and M16C/80.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

3.11 Data types

Since C does not provide data types of fixed lengths which are identical on all platforms, emWin uses, in most cases, its own data types as shown in the table below:

Data type	Definition	Explanation
I8	signed char	8-bit signed value
U8	unsigned char	8-bit unsigned value
I16	signed short	16-bit signed value
U16	unsigned short	16-bit unsigned value
I32	signed long	32-bit signed value
U32	unsigned long	32-bit unsigned value
I16P	signed short	16-bit (or more) signed value
U16P	unsigned short	16-bit (or more) unsigned value

For most 16/32-bit controllers, the settings will work fine. However, if you have similar defines in other sections of your program, you might want to change or relocate them. A recommended place is in the file `Global.h`.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG


Chapter 4

Getting Started

The following chapter provides an overview of the basic procedures for setting up and configuring emWin on your target system. It also includes a simple program example.
If you find yourself unsure about certain areas, keep in mind that most topics are treated in greater detail in later chapters. You will most likely need to refer to other parts of the manual before you begin more complicated programming.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

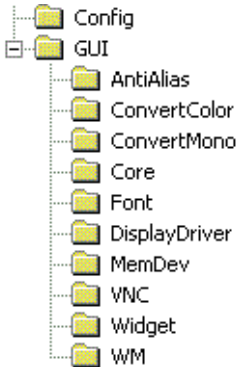4.1 Recommended directory structure



We recommend keeping emWin separate from your application files. It is good practice to keep all the program files (including the header files) together in the GUI subdirectories of your project's root directory. The directory structure should be similar to the one pictured on the right. This practice has the advantage of being very easy to update to newer versions of emWin by simply replacing the `GUI\` directories. Your application files can be stored anywhere.

4.1.1 Subdirectories

The following table shows the contents of all GUI subdirectories:

Directory	Contents
Config	Configuration files
GUI\AntiAlias	Antialiasing support *
GUI\ConvertMono	Color conversion routines used for grayscale displays *
GUI\ConvertColor	Color conversion routines used for color displays *
GUI\Core	emWin core files
GUI\Font	Font files
GUI\DisplayDriver	Display driver
GUI\MemDev	Memory device support *
GUI\VNC	VNC support *
GUI\Widget	Widget library *
GUI\WM	Window manager *

(* = optional)

4.1.2 Include directories

You should make sure that the include path contains the following directories (the order of inclusion is of no importance):

- Config
- GUI\Core
- GUI\DisplayDriver
- GUI\Widget (if using the widget library)
- GUI\WM (if using window manager)

Warning: Always make sure that you have only one version of each file!

It is frequently a major problem when updating to a new version of emWin if you have old files included and therefore mix different versions. If you keep emWin in the directories as suggested (and only in these), this type of problem cannot occur. When updating to a newer version, you should be able to keep your configuration files and leave them unchanged. For safety reasons, we recommend backing up (or at least renaming) the `GUI\` directories prior to updating.

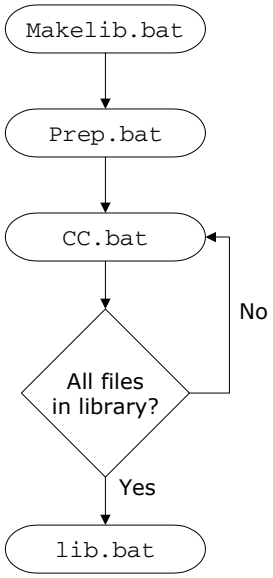
4.2 Adding emWin to the target program

You basically have a choice between including only the source files that you are actually going to use in your project, which will then be compiled and linked, or creating a library and linking the library file. If your tool chain supports "smart" linking (link-

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

ing in only the modules that are referenced and not those that are not referenced), there is no real need to create a library at all, since only the functions and data structures which are required will be linked. If your tool chain does not support "smart" linking, a library makes sense, because otherwise everything will be linked in and the program size will be excessively large. For some CPUs, we have example projects available to help you get started.

4.3 Creating a library



Building a library from the sources is a simple procedure. The first step is to copy the batch files (located under `SampleExample\Makelib`) into your root directory. Then, make any necessary changes. There are a total of four batch files which need to be copied, described in the table below. The main file, `Makelib.bat`, will be the same for all systems and requires no changes. To build a library for your target system, you will normally need to make slight modifications to the other three smaller files. Finally, start the file `Makelib.bat` to create the library. The batch files assume that your `GUI` and `Config` subdirectories are set up as recommended.
The procedure for creating a library is illustrated in the flow chart to the right. The `Makelib.bat` file first calls `Prep.bat` to prepare the environment for the tool chain. Then it calls `CC.bat` for every file to be included in the library. It does this as many times as necessary. `CC.bat` adds each object file to a list that will be used by `lib.bat`. When all files to be added to the library have been listed, `Makelib.bat` then calls `lib.bat`, which uses a librarian to put the listed object files into the actual library. Of course you are free to create libraries in another way.
It is not recommended to create an emWin library including a compile-time configurable display driver. For further information about the configurability of display drivers, please refer to "Available display drivers" on page 814.

File	Explanation
Makelib.bat	Main batch file. No modification required.
Prep.bat	Called by Makelib.bat to prepare environment for the tool chain to be used,
CC.bat	Called by Makelib.bat for every file to be added to the library; creates a list of these object files which will then be used in the next step by the librarian in the lib.bat file.
lib.bat	Called by Makelib.bat to put the object files listed by CC.bat into a library.

The files as shipped assume that a Microsoft compiler is installed in its default location. If all batch files are copied to the root directory (directly above GUI) and no changes are made at all, a simulation library will be generated for the emWin simulation. In order to create a target library, however, it will be necessary to modify `Prep.bat`, `CC.bat`, and `lib.bat`.

4.3.1 Adapting the library batch files to a different system

The following will show how to adapt the files by an example adaptation for a Mitsubishi M32C CPU.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Adapting Prep.bat

Prep.bat is called at the beginning of Makelib.bat. As described above its job is to set the environment variables for the used tools and the environment variable PATH, so that the batch files can call the tools without specifying an absolute path. Assuming the compiler is installed in the folder C:\MTOOL the file Prep.bat could look as follows:

```
@ECHO OFF
SET TOOLPATH=C:\MTOOL
REM ****************************************************************
REM   Set the variable PATH to be able to call the tools
SET PATH=%TOOLPATH%\BIN;%TOOLPATH%\LIB308;%PATH%
REM ****************************************************************
REM   Set the tool internal used variables
SET BIN308=%TOOLPATH%\BIN
SET INC308=%TOOLPATH%\INC308
SET LIB308=%TOOLPATH%\LIB308
SET TMP308=%TOOLPATH%\TMP
```

Adapting CC.bat

The job of CC.bat is to compile the passed source file and adding the file name of the object file to a link list. When starting MakeLib.bat it creates the following subdirectories relative to its position:

Directory	Contents
Lib	This folder should contain the library file after the build process.
Temp\Output	Should contain all the compiler output and the link list file. Will be deleted after the build process.
Temp\Source	MakeLib.bat uses this folder to copy all source and header files used for the build process. Will be deleted after the build process.

The object file should be created (or moved) to Temp\Output. This makes sure all the output will be deleted after the build process. Also the link list should be located in the output folder. The following shows an example for the Mitsubishi compiler:

```
@ECHO OFF
GOTO START
REM ****************************************************************
REM   Explanation of the used compiler options:
-silent : Suppresses the copyright message display at startup
-M82    : Generates object code for M32C/80 Series (Remove this switch
          for M16C80 targets)
-c      : Creates a relocatable file (extension .r30) and ends processing
-I      : Specifies the directory containing the file(s) specified in #include
-dir    : Specifies the destination directory
-OS     : Maximum optimization of speed followed by ROM size
-fFRAM  : Changes the default attribute of RAM data to far
-fETI   : Performs operation after extending char-type data to the int type
          (Extended according to ANSI standards)
:START
REM ****************************************************************
REM   Compile the passed source file with the Mitsubishi NC308 compiler
NC308 -silent -M82 -c -IInc -dir Temp\Output -OS -fFRAM -fETI Temp\Source\%1.c
REM ****************************************************************
REM   Pause if any problem occurs
IF ERRORLEVEL 1 PAUSE
REM ****************************************************************
REM   Add the file name of the object file to the link list
ECHO Temp\Output\%1.R30>>Temp\Output\Lib.dat
```

Adapting Lib.bat

After all source files have been compiled Lib.bat will be called from MakeLib.bat. The job is to create a library file using the link list created by CC.bat. The destination folder of the library file should be the Lib folder created by MakeLib.bat. The following shows an example for the Mitsubishi librarian:

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
@ECHO OFF
GOTO START
REM ************************************************************
REM   Explanation of the used options:
-C : Creates new library file
@  : Specifies command file
:START
REM ************************************************************
REM   Create the first part of the linker command file
ECHO -C Lib\GUI>Temp\Output\PARA.DAT
REM ************************************************************
REM   Merge the first part with the link list to the linker command file
COPY Temp\Output\PARA.DAT+Temp\Output\Lib.dat Temp\Output\LINK.DAT
REM ************************************************************
REM   Call the Mitsubishi librarian
LB308 @Temp\Output\LINK.DAT
REM ************************************************************
REM   Pause if any problem occurs
IF ERRORLEVEL 1 PAUSE
```

4.4 C files to include in the project

Generally speaking, you need to include the core C files of emWin, the display driver, all font files you plan to use and any optional modules you have ordered with emWin:

- All C files of the folder `Config`
- All C files of the folder `GUI\Core`
- The fonts you plan to use (located in `GUI\Font`)
- Display driver: All C files of the folder `GUI\DisplayDriver`.

Additional software packages

If you plan to use additional, optional modules you must also include their C files:

- Gray scale converting functions: all C files located in `GUI\ConvertMono`
- Color conversion functions: all C files located in `GUI\ConvertColor`
- Antialiasing: all C files located in `GUI\AntiAlias`
- Memory devices: all C files located in `GUI\MemDev`
- VNC support: all C files located in `GUI\VNC`
- Widget library: all C files located in `GUI\Widget`
- Window Manager: all C files located in `GUI\WM`

Target specifics

- For port/buffer-accessed displays, interface routines must be defined. Examples of the required routines are available under `Samples\LCD_X`.
- Either GUI_X_embOS.c or GUI_X.c has to be included in order to use embOS or another RTOS for timing and multitasking related functions.

Be sure that you include `GUI.h` in all of your source files that access emWin.

4.5 Configuring emWin

The `Config` folder should contain all configuration files. The chapter ’Configuration’ explains in detail how emWin should be configured.
The following types of configuration macros are available:

Binary switches "B"

Switches can have a value of either 0 or 1, where 0 means deactivated and 1 means activated (actually anything other than 0 would work, but using 1 makes it easier to read a `config` file). These switches can enable or disable a certain functionality or behavior. Switches are the simplest form of configuration macro.

Numerical values "N"

Numerical values are used somewhere in the code in place of a numerical constant. Typical examples are in the configuration of the resolution of a display.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Selection switches "S"

Selection switches are used to select one out of multiple options where only one of those options can be selected. A typical example might be the selection of the type of display controller used, where the number selected denotes which source code (in which display driver) is used to generate object code.

Alias "A"

A macro which operates like a simple text substitute. An example would be the define `U8`, in which the preprocessor would replace with `unsigned char`.

Function replacements "F"

Macros can basically be treated like regular functions although certain limitations apply, as a macro is still put into the code as simple text replacement. Function replacements are mainly used to add specific functionality to a module (such as the access to an display) which is highly hardware-dependent. This type of macro is always declared using brackets (and optional parameters).

4.6 Initializing emWin

The following functions should be used to initialize and 'deinitialize' emWin in order to start the configuration process (see chapter "Configuration" on page 905) or clear internal data from memory again.

Routine	Explanation
GUI_Init()	Initializes emWin internal data structures and variables.
GUI_Exit()	Clears emWin internal data from memory.

GUI_Init()

Description

Initializes emWin internal data structures and variables.

Prototype

```
int GUI_Init(void);
```

Return value

0, if successful; another value if the initialization of the display driver fails.

Additional information

Executing this function is mandatory before using any emWin functions. The only exception is setting create flags for windows (see "WM_SetCreateFlags()" on page 329). If the window manager is used, the background window is created from within GUI_Init(). So if create flags are set up before GUI_Init() is called, the background window is created according to them.

GUI_Exit()

Description

Clears emWin internal data from memory to make further calls of GUI_Init() possible.

Prototype

```
void GUI_Exit(void);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

This function should be used if emWin represents a part of the application which is not used continuosly and therefore has to be able to be turned on and off again. Please note that after GUI_Exit was called emWin will not work properly until GUI_Init() is called again.

4.7 Using emWin with target hardware

The following is just a basic outline of the general steps that should be taken when starting to program with emWin. All steps are explained further in subsequent chapters.

Step 1: Configuring emWin

The first step is usually to customize emWin. For details about the configuration, refer to the chapter "Configuration" on page 905".

Step 2: Defining access addresses or access routines

For memory-mapped display controllers, the access addresses of the display simply need to be defined in the configuration file of the display controller. For port/buffer-accessed display controllers, interface routines must be defined. Examples of the required routines are available under `Samples\LCD_X`.

Step 3: Compiling, linking and testing the example code

emWin comes with example code for both single- and multitask environments. Compile, link and test these little example programs until you feel comfortable doing so.

Step 4: Modifying the example program

Make simple modifications to the example programs. Add additional commands such as displaying text in different sizes on the display, showing lines and so on.

Step 5: In multitask applications: adapt to your OS (if necessary)

If multiple tasks should be able to access the display simultaneously, the macros `GUI_MAXTASK` and `GUI_OS` come into play, as well as the file `GUITask.c`. For details and example adaptations, refer to the chapter "Configuration" on page 905".

Step 6: Write your own application using emWin

By now you should have a clearer understanding of how to use emWin. Think about how to structure the program your application requires and use emWin by calling the appropriate routines. Consult the reference chapters later in this manual, as they discuss the specific emWin functions and configuration macros that are available.

4.8 The "Hello world" example program

In the following we will show the "Hellow world" example program. If you like to see a wide range of emWin based sample applications as well as further simple tutorial applications, please have a look in the `Sample` folder of your emWin shipment or visit the "emWin Samples" section on www.segger.com.

A "Hello world" program has been used as a starting point for C programming since the early days, because it is essentially the smallest program that can be written. An emWin "Hello world" program is shown below and is available as `BASIC_HelloWorld.c` in the Sample\Tutorial folder shipped with emWin.
The whole purpose of the program is to write "Hello world" in the upper left corner of the display. In order to be able to do this, the hardware of the application, the display controller and the GUI must be initialized first. emWin is initialized by a simple call of `GUI_Init()` in the beginning of the program. In this example, we assume that the hardware of your application is already initialized.
The "Hello world" program looks as follows:

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
#include "GUI.h"

void MainTask(void) {
  GUI_Init();
  GUI_DispString("Hello world!");
  while(1);
}
```

Adding functionality to the "Hello world" program

Our little program has not been doing too much so far. We can now extend the functionality a bit: after displaying "Hello world", we would like the program to start counting on the display in order to be able to estimate how fast outputs to the display can be made. We can simply add a bit of code to the loop at the end of the main program, which is essentially a call to the function that displays a value in decimal form.
The example is available as `BASIC_Hello1.c` in the `Sample` folder.

```
#include "GUI.h"

void MainTask(void) {
  int i=0;
  GUI_Init();
  GUI_DispString("Hello world!");
  while(1) {
    GUI_DispDecAt( i++, 20,20,4);
    if (i > 9999) {
      i = 0;
    }
  }
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG


Chapter 5

Simulation

The PC simulation of emWin allows you to compile the same C source on your Windows PC using a native (typically Microsoft) compiler and create an executable for your own application. Doing so allows the following:

- Design of the user interface on your PC (no need for hardware!).
- Debugging of your user interface program.
- Creation of demos of your application, which can be used to discuss the user interface.

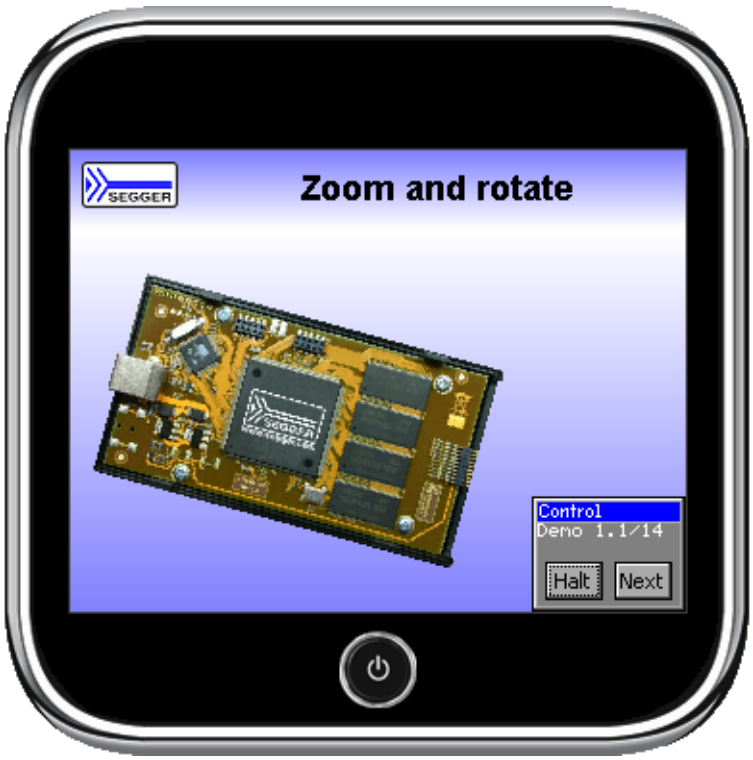The resulting executable can be easily sent via e-mail.



© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

5.1 Using the simulation

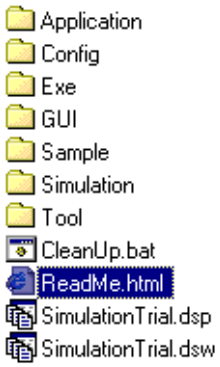
The emWin simulation requires Microsoft Visual C++ (version 6.00 or higher) and the integrated development environment (IDE) which comes with it. You will see a simulation of your LCD on your PC screen, which has the same resolution in X and Y and can display the exact same colors as your LCD once it has been properly configured. The entire graphic library API and window manager API of the simulation are identical to those on your target system; all functions will behave in the very same way as on the target hardware since the simulation uses the same C source code as the target system. The difference lies only in the lower level of the software: the LCD driver. Instead of using the actual LCD driver, the PC simulation uses a simulation driver which writes into a bitmap. The bitmap is then displayed on your screen using a second thread of the simulation. This second thread is invisible to the application; it behaves just as if the LCD routines were writing directly to the display.

5.1.1 Using the simulation with the trial version of emWin

The trial version of emWin contains a full library which allows you to evaluate all available features of emWin. It also includes the emWin viewer (used for debugging applications), as well as demo versions of the font converter and the bitmap converter. Keep in mind that, being a trial version, you will not be able to view the source code of emWin or the simulation, but you will still be able to become familiar with what emWin can do.

5.1.1.1 Directory structure


The directory structure of the simulation in the trial version is shown at the right side. The table below explains the contents of the folders:



Directory	Contents
Application	Source of the demo program.
Config	Configuration files used to build the library. Note that changes at the header files do not have any effect on the precompiled library!
Exe	Ready-to-use demo program.
GUI	Library files and include files needed to use the library.
Sample	Simulation examples.
Simulation	Files needed for the simulation.
Tool	The emWin viewer, a demo version of the bitmap converter and a demo version of the font converter.

5.1.1.2 Visual C++ workspace

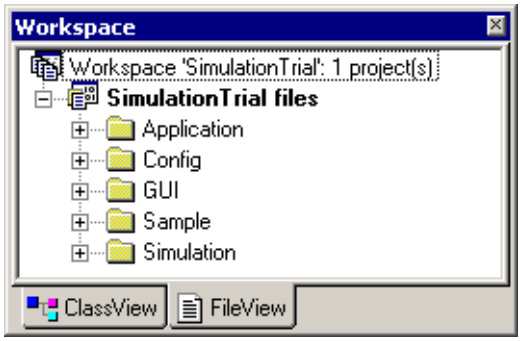The root directory shown above includes the Microsoft Visual C++ workspace (`SimulationTrial.dsw`) and project file (`SimulationTrial.dsp`). Double-click the workspace file to open the Microsoft IDE.
The directory structure of the Visual C++ workspace will look like the one shown to the right.



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

5.1.1.3 Compiling the demo program

The source files for the demo program are located in the `Application` directory as a ready-to-go simulation, meaning that you need only to rebuild and start it. Note that to rebuild the executable, you will need to have Microsoft Visual C++ (version 6.00 or later) installed.

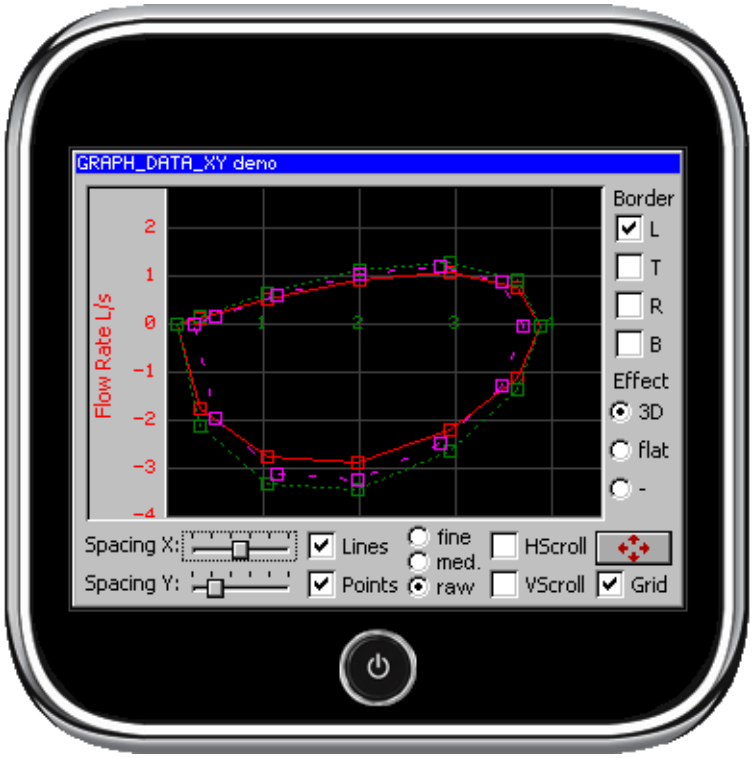
- Step 1: Open the Visual C++ workspace by double-clicking on `Simulation-Trial.dsw`.
- Step 2: Rebuild the project by choosing `Build/Rebuild All` from the menu (or by pressing F7).
- Step 3: Start the simulation by choosing `Build/Start Debug/Go` from the menu (or by pressing F5).

The demo project will begin to run and may be closed at any time by right-clicking on it and selecting `Exit`.

5.1.1.4 Compiling the examples

The `Sample` directory contains ready-to-go examples that demonstrate different features of emWin and provide examples of some of their typical uses. In order to build any of these executables, their C source must be 'activated' in the project. This is easily done with the following procedure:

- Step 1: Exclude the `Application` folder from the build process by right-clicking the `Application` folder of the workspace and selecting 'Settings\General\Exclude from build'.
- Step 2: Open the `Sample` folder of the workspace by double-clicking on it. Include the example which should be used by right-clicking on it and deselecting 'Settings\General\Exclude' from build.
- Step 3: If the example contains its own configuration files (`LCDConf.c` and/or `SIMConf.c`) the default configuration files located in the config folder need to be excluded from the build process.
- Step 4: Rebuild the example by choosing `Build/Rebuild All` from the menu (or by pressing F7).
- Step 5: Start the simulation by choosing `Build/Start Debug/Go` from the menu (or by pressing F5). The result of the example selected above is pictured below:



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG


5.1.2 Using the simulation with the emWin source

5.1.2.1 Directory structure




The root directory of the simulation can be anywhere on your PC, for example `C:\Work\emWinSim`. The directory structure will appear as shown to the right. This structure is very similar to that which we recommend for your target application (see Chapter 3: "Getting Started" for more information).
The following table shows the contents of the folders:

Directory	Contents
Doc	Contains emWin-Documentation.
Sample	Code examples, described later in this documentation.
Start	All you need to create a new project with emWin
Tool	Tools shipped with emWin

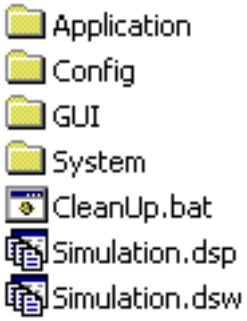

A new project can be started by making a copy of the Start-folder. It contains all required files for a new project. Subdirectories containing the emWin sources are in the `Start\GUI` folder and should contain the exact same files as the directories of the same names which are used for your target (cross) compiler. The files of the `GUI` subdirectories should not be changed, as this would make updating to a newer version of emWin more difficult.
The Start\`Config` directory contains configuration files which need to be modified in order to reflect your target hardware settings (mainly LCD-size and colors which can be displayed).

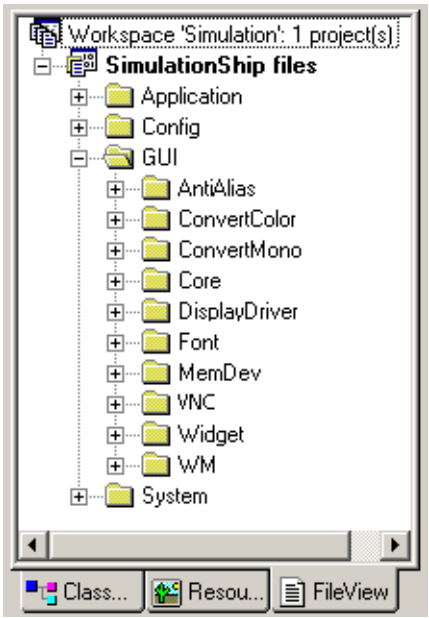5.1.2.2 Visual C++ workspace



The root directory shown above includes the Microsoft Visual C++ workspace (`Simulation.dsw`) and project files (`Simulation.dsp`). The workspace allows you to modify an application program and debug it before compiling it on your target system. The directory structure of the Visual C++ workspace will appear similar to that shown to the right. Here, the `GUI` folder is open to display the emWin subdirectories. Note that your `GUI` directory may not look exactly like the one pictured, depending on which additional features of emWin you have. The folders `Core`, `Font` and `LCDDriver` are part of the basic emWin package and will always appear in the workspace directory.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

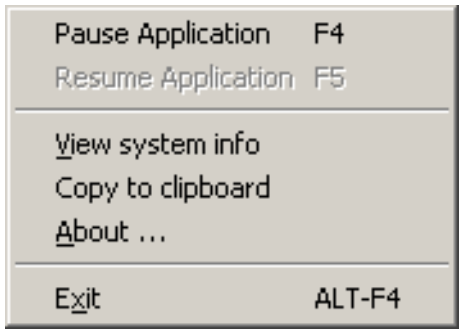
5.1.2.3 Compiling the application

The simulation contains one or more application C files (located in the `Application` directory), which can be modified or removed and additional files can be added to the project. You should then rebuild the program within the Visual C++ workspace in order to test/debug it. Once you have reached a point where you are satisfied with the result and want to use the program in your application, you should be able to compile these same files on your target system and get the same result on the target display. The general procedure for using the simulation would be as follows:

- Step 1: Open the Visual C++ workspace by double-clicking on `Simulation.dsw`.
- Step 2: Compile the project by choosing `Build/Rebuild All` from the menu (or by pressing F7).
- Step 3: Run the simulation by choosing `Build/Start Debug/Go` from the menu (or by pressing F5).
- Step 4: Replace the bitmap with your own logo or image.
- Step 5: Make further modifications to the application program as you wish, by editing the source code or adding/deleting files.
- Step 6: Compile and run the application program within Visual C++ to test the results. Continue to modify and debug as needed.
- Step 7: Compile and run the application program on your target system.

5.1.3 Advanced features of the simulation

Clicking the right mouse button shows a context menu with several advanced functions:




5.1.3.1 Pause and Resume

These menu items allows to pause and to resume the application currently running in the simulation. The same can be done by pressing <F4> or <F5>. Trying to pause an already paused application or trying to resume an already running application causes an error message.

5.1.3.2 View system info

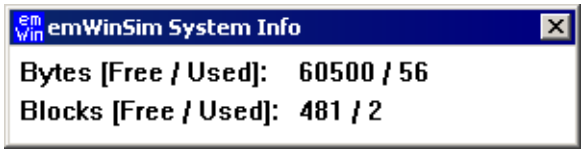This menu item opens a further window with information of the memory currently used by the application. The window continuously shows the current status of memory consumption by showing the free and used bytes and the free and used number of memory blocks. For details about the memory manager, refer to the chapter "Configuration" on page 905.



5.1.3.3 Copy to clipboard

This menu item copies the current contents of the display into the clipboard. This makes it easy to use it for documentation purpose with other applications.

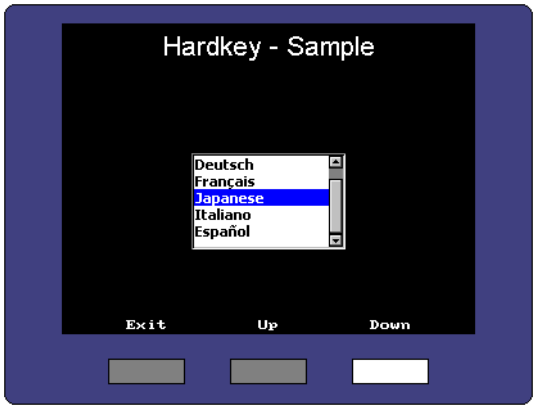
 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

5.2 Device simulation


The device simulation supports 3 views:

- Generated frame view
- Custom bitmap view
- Window view

The table below shows the different views:

Generated frame view	Custom bitmap view
	

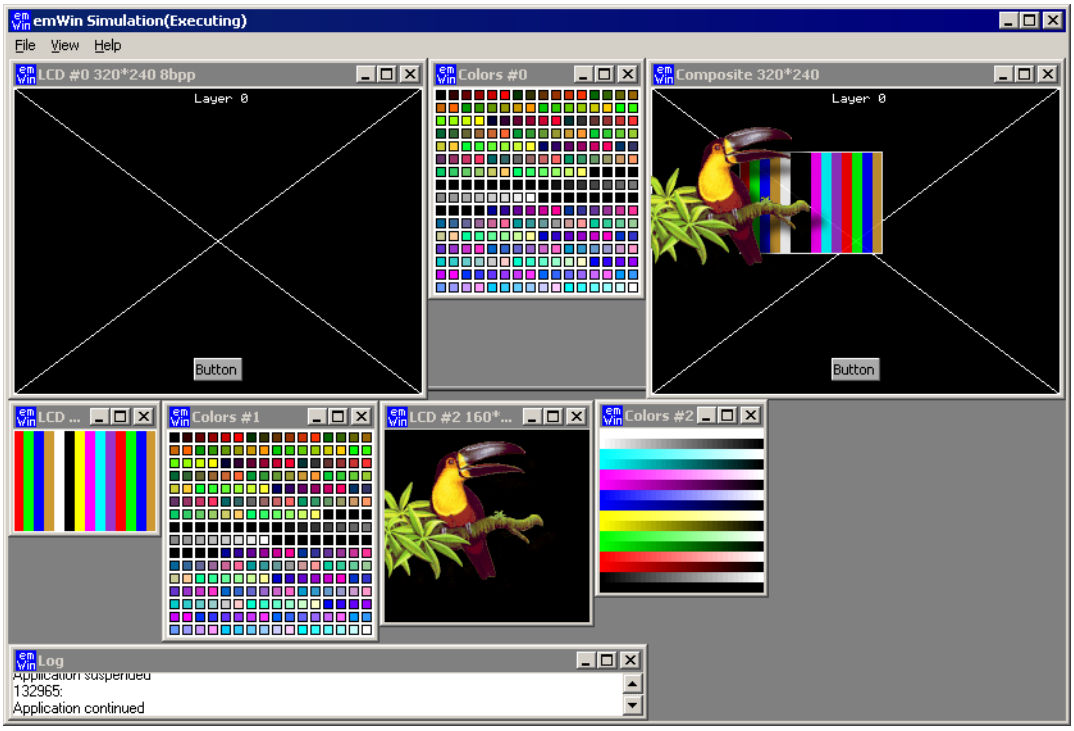Window view



The following will explain in detail how each option can be used.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

5.2.1 Generated frame view

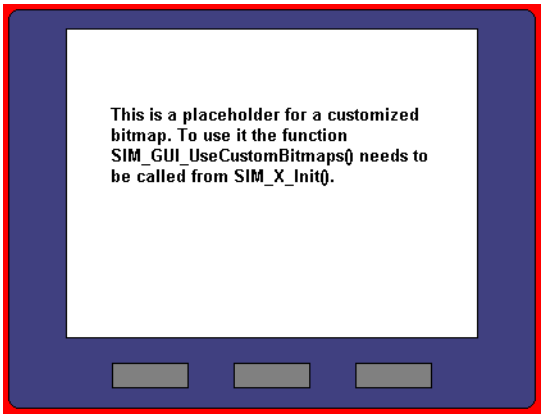


The simulation shows the display inside an automatically generated frame surrounding the display. The frame contains a small button which per default closes the application. This is the default behavior of the simulation for single layer systems. 'Single layer system' means that only the first layer is initialized.

5.2.2 Custom bitmap view

The simulation can show the simulated display in a bitmap of your choice, typically your target device. The bitmap can be used to simulate the behavior of the entire target device. In order to simulate the appearance of the device, bitmaps are required.


Device bitmap



The first bitmap is usually a photo (top view) of the device, and needs to be named `Device.bmp`. It may be a separate file (in the same directory as the executable), or it may be included as a resource in the application. How to do this is explained later in this chapter.
The file should provide an area for the simulated display of the same size in pixels as the physical display resolution.
If there are any hardkeys to be simulated the bitmap should also show all of them in unpressed state.
Transparent areas need to be colored with exact the same color as defined with the function `SIM_GUI_SetTransColor()`, typically bright red (0xFF0000). These areas do not have to be rectangular; they can have an arbitrary shape (up to a certain complexity which is limited by your operating system, but is normally sufficient). Bright red is the default color for transparent areas, mainly because it is not usually contained in most bitmaps. To use a bitmap with bright red, the default transparency color may be changed with the function `SIM_GUI_SetTransColor()`.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Hardkey bitmap



The second bitmap file is required for defining the hardkeys and must be named `Device1.bmp`. It contains the buttons in pressed state. The non hardkey area has to be filled with the transparent color. This is only a short description. For more details about how to simulate hardkeys, see "Hardkey simulation" on page 52.

Using separate files

When starting the simulation, it checks if the directory of the executable contains the bitmap files `Device.bmp` and `Device1.bmp`. If these files are available, they are used automatically and the resource bitmaps are ignored. Note that this is only valid with single layer systems.

Adding the bitmap to the application resources

The resource file of the simulation can be found under `System\Simulation\Res\Simulation.rc`. It contains the following section:

```
//////////////////////////////////////////////////////////////////////
//
// Customizable bitmaps
//
IDB_DEVICE              BITMAP  DISCARDABLE     "Device.bmp"
IDB_DEVICE1             BITMAP  DISCARDABLE     "Device1.bmp"
```

This section can be used to set custom device files. For more information, refer to the Win32 documentation.

5.2.3 Window view

Default for simulating a multiple layer system is showing each layer in a separate window without using bitmaps or a generated frames.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

5.3 Device simulation API

All of the device simulation API functions should be called in the setup phase. The calls should be done from within the routine `SIM_X_Config()`, which is located in the file `SIMConf.c` in the configuration folder. The example below calls `SIM_SetLCDPos()` in the setup:

```
#include "LCD_SIM.h"

void SIM_X_Config() {
  SIM_GUI_SetLCDPos(50, 20); // Define the position of the LCD in the bitmap}
}
```

The table below lists the available device-simulation-related routines in alphabetical order. Detailed descriptions of the routines follow:

Routine	Explanation
SIM_GUI_ShowDevice()	Manages the visibility of the device bitmap.
SIM_GUI_SetCallback()	Sets a callback function for receiving the handles of the simulation windows.
SIM_GUI_SetCompositeColor()	Sets the background color of the composite window. (Only used with multi layer systems)
SIM_GUI_SetCompositeSize()	Sets the size of the composite window. (Only used with multi layer systems)
SIM_GUI_SetLCDColorBlack()	Set the color to be used as black (color monochrome displays).
SIM_GUI_SetLCDColorWhite()	Set the color to be used as white (color monochrome displays).
SIM_GUI_SetLCDPos()	Set the position for the simulated LCD within the target device bitmap.
SIM_GUI_SetMag()	Set magnification factors for X and/or Y axis.
SIM_GUI_SetTransColor()	Set the color to be used for transparent areas (default: 0xFF0000).
SIM_GUI_UseCustomBitmaps()	Tells the simulation to use the custom bitmaps from the application resource file.

SIM_GUI_ShowDevice()

Description

This function can be used to manage the visibility of the surrounding device bitmap of the simulation.

Prototype

```
void SIM_GUI_ShowDevice(int OnOff);
```

Parameter	Description
OnOff	1 for showing the bitmap, 0 for hiding it.

Additional information

On systems with multiple layers the device bitmap is not shown per default and on single layer systems the bitmap is visible. If a different behavior is required this function can be used to set up the visibility of the device bitmap.

SIM_GUI_SetCallback()

Description

If it is required to simulate more than the display window or hardkeys, you can set a callback function to receive the window handles of the simulation. This opens up the possibility e.g. to add additional controls outside of the display window like leds or sliders. Please note that the emWin functions can not be used there.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void SIM_GUI_SetCallback(int (* _pfInfoCallback)(SIM_GUI_INFO * pInfo));
```

Parameter	Description
_pfInfoCallback	Pointer to the callback function. The function has to expect a pointer to a SIM_GUI_INFO structure as a parameter

Content of the SIM_GUI_INFO structure		
Type	Name	Description
HWND	hWndMain	Handle to the main window
HWND	ahWndLCD[16]	Array of handles to the display layers
HWND	ahWndColor[16]	Array of handles to the palette layers

SIM_GUI_SetCompositeColor()

Description

When simulating a multiple layer system each layer can be shown in its own window. However, the physical display has only one area. It shows the result of the blended layers. The simulation shows the result in the composite window which can have its own size independent of the layers. Each layer can have its own position and its own size within the composite window. This means that not necessarily the complete area is covered by the layers. For this case (and also for transparency effects) this function sets the default background color of the composite window.

Prototype

```
void SIM_GUI_SetCompositeColor(U32 Color);
```

Parameter	Description
Color	Background color to be used.

SIM_GUI_SetCompositeSize()

Description

As described above under `SIM_GUI_SetCompositeColor()` the size of the composite window is independent of the size of the layers. This function is used to set the size of the composite window.

Prototype

```
void SIM_GUI_SetCompositeSize(int xSize, int ySize);
```

Parameter	Description
xSize	Horizontal size in pixels.
ySize	Vertical size in pixels.

Example

The following shows a typical use (with a multi layer system):

```
void SIM_X_Config() {
  SIM_GUI_SetCompositeSize(240, 320);  // Set size of composite window
  SIM_GUI_SetCompositeColor(0x800000); // Define background color of composite window
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

SIM_GUI_SetLCDColorBlack(), SIM_GUI_SetLCDColorWhite()

Description

Set the colors to be used as black or white, respectively, on color monochrome displays.

Prototypes

```
int SIM_GUI_SetLCDColorBlack(int DisplayIndex, int Color);
int SIM_GUI_SetLCDColorWhite(int DisplayIndex, int Color);
```


Parameter	Description
DisplayIndex	Reserved for future use; must be 0.
Color	RGB value of the color.

Additional information

These functions can be used to simulate the true background color of your display. The default color values are black and white, or 0x000000 and 0xFFFFFF.


Example using default settings
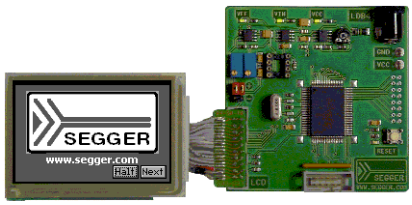
```
void SIM_X_Config() {
  SIM_GUI_SetLCDPos(14,84);                 // Define the position of the LCD
                                            // in the bitmap
  SIM_GUI_SetLCDColorBlack (0, 0x000000);   // Define the color used as black
  SIM_GUI_SetLCDColorWhite (0, 0xFFFFFF);   // Define the color used as white
  (used for colored monochrome displays)
}
```



Example using yellow instead of white
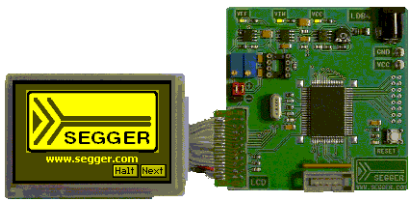
```
void SIM_X_Config() {
  SIM_GUI_SetLCDPos(14,84);                 // Define the position of the LCD
                                            // in the bitmap
  SIM_GUI_SetLCDColorBlack (0, 0x000000);   // Define the color used as black
  SIM_GUI_SetLCDColorWhite (0, 0x00FFFF);   // Define the color used as white
  (used for colored monochrome displays)
}
```



© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

SIM_GUI_SetLCDPos()

Description

Sets the position for the simulated LCD within the target device bitmap.

Prototype

```
void SIM_GUI_SetLCDPos(int x, int y);
```

Parameter	Description
x	X-position of the upper left corner for the simulated LCD (in pixels).
y	Y-position of the upper left corner for the simulated LCD (in pixels).

Additional information

The X- and Y-positions are relative to the target device bitmap, therefore position (0,0) refers to the upper left corner (origin) of the bitmap and not your actual LCD. Only the origin of the simulated screen needs to be specified; the resolution of your display should already be reflected in the configuration files in the `Config` directory. The use of this function enables the use of the bitmaps `Device.bmp` and `Device1.bmp`. Note that the values need to be >= 0 for enabling the use of the bitmaps. If the use of the device bitmaps should be disabled, omit the call of this function in `SIM_X_Init()`.

SIM_GUI_SetMag()

Description

Sets magnification factors for X and/or Y axis.

Prototype

```
void SIM_GUI_SetMag(int MagX, int MagY);
```

Parameter	Description
MagX	Magnification factor for X axis.
MagY	Magnification factor for Y axis.

Additional information

Per default the simulation uses one pixel on the PC for each pixel of the simulated display. The use of this function makes sense for small displays. If using a device bitmap together with a magnification > 1 the device bitmap needs to be adapted to the magnification. The device bitmap is not magnified automatically.

SIM_GUI_SetTransColor()

Description

Sets the color to be used for transparent areas of device or hardkey bitmaps.

Prototype

```
I32 SIM_GUI_SetTransColor(I32 Color);
```

Parameter	Description
Color	RGB value of the color in the format 00000000RRRRRRRRGGGGGGGGBBBBBBBB.

Additional information

The default setting for transparency is bright red (0xFF0000).
You would typically only need to change this setting if your bitmap contains the same shade of red.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

SIM_GUI_UseCustomBitmaps()

Description

As described earlier in this chapter it is possible to use device bitmaps from the application resources. This function tells the simulation to use the device- and hard-key bitmaps from the application resources and not to generate the default frame bitmap.

Prototype

```
void SIM_GUI_UseCustomBitmaps(void);
```

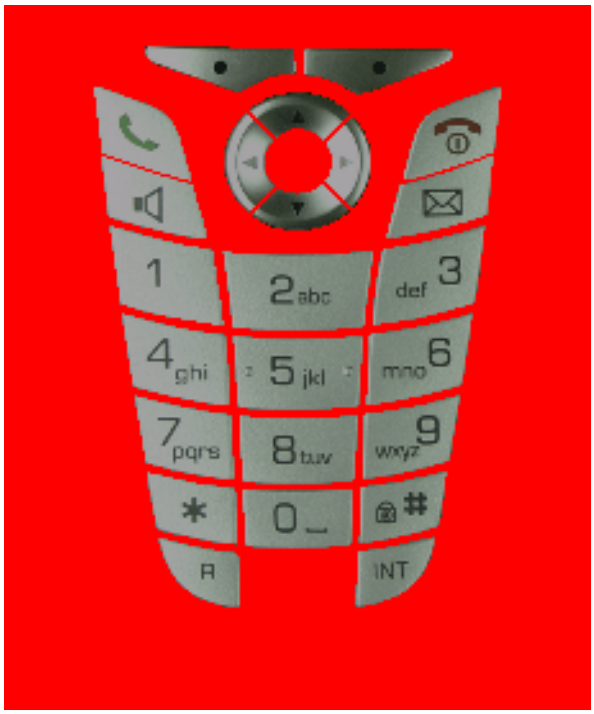
Additional information

The emWin shipment contains per default 2 bitmaps, `Device.bmp` and `Device1.bmp`, located in `Start\System\Simulation\Res` which can be used as a starting point for your own bitmaps.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

5.4 Hardkey simulation

The hardkey simulation can only be used in the custom bitmap view. Hardkeys may also be simulated as part of the device, and may be selected with the mouse pointer. The idea is to be able to distinguish whether a key or button on the simulated device is pressed or unpressed. A hardkey is considered "pressed" as long as the mouse button is held down; releasing the mouse button or moving the pointer off of the hardkey "unpresses" the key. A toggle behavior between pressed and unpressed may also be specified with the routine `SIM_HARDKEY_SetMode()`.
In order to simulate hardkeys, you need a second bitmap of the device which is transparent except for the keys themselves (in their pressed state). As described earlier in this chapter, this bitmap can be in a separate file in the directory, or included as a resource in the executable. Hardkeys may be any shape, as long as they are exactly the same size in pixels in both `Device.bmp` and `Device1.bmp`. The following example illustrates this:

Device bitmap: unpressed hardkey state (Device.bmp)	Device hardkey bitmap: pressed hardkey state (Device1.bmp)
	

When a key is "pressed" with the mouse, the corresponding section of the hardkey bitmap (`Device1.bmp`) will overlay the device bitmap in order to display the key in its pressed state.
The keys may be polled periodically to determine if their states (pressed/unpressed) have changed and whether they need to be updated. Alternatively, a callback routine may be set to trigger a particular action to be carried out when the state of a hardkey changes.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

5.4.1 Hardkey simulation API

The hardkey simulation functions are part of the standard simulation program shipped with emWin. If using a user defined emWin simulation these functions may not be available. The table below lists the available hardkey-simulation-related routines in alphabetical order within their respective categories. Detailed descriptions of the routines follow:

Routine	Explanation
SIM_HARDKEY_GetNum()	Return the number of available hardkeys.
SIM_HARDKEY_GetState()	Return the state of a specified hardkey (0: unpressed, 1: pressed).
SIM_HARDKEY_SetCallback()	Set a callback routine to be executed when the state of a specified hardkey changes.
SIM_HARDKEY_SetMode()	Set the behavior for a specified hardkey (default = 0: no toggle).
SIM_HARDKEY_SetState()	Set the state for a specified hardkey (0: unpressed, 1: pressed).

SIM_HARDKEY_GetNum()

Description

Returns the number of available hardkeys.

Prototype

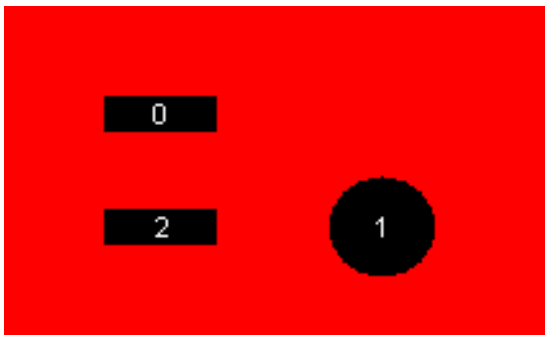
```
int SIM_HARDKEY_GetNum(void);
```

Return value

The number of available hardkeys found in the bitmap.

Additional information

The numbering order for hardkeys is standard reading order (left to right, then top to bottom). The topmost pixel of a hardkey is therefore found first, regardless of its horizontal position. In the bitmap below, for example, the hardkeys are labeled as they would be referenced by the KeyIndex parameter in other functions:



It is recommended to call this function in order to verify that a bitmap is properly loaded.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

SIM_HARDKEY_GetState()

Description

Returns the state of a specified hardkey.

Prototype

```
int SIM_HARDKEY_GetState(unsigned int KeyIndex);
```

Parameter	Description
KeyIndex	Index of hardkey (0 = index of first key).

Return value

State of the specified hardkey:
0: unpressed
1: pressed

SIM_HARDKEY_SetCallback()

Description

Sets a callback routine to be executed when the state of a specified hardkey changes.

Prototype

```
SIM_HARDKEY_CB * SIM_HARDKEY_SetCallback(unsigned int KeyIndex,
                                         SIM_HARDKEY_CB * pfCallback);
```

Parameter	Description
KeyIndex	Index of hardkey (0 = index of first key).
pfCallback	Pointer to callback routine.

Return value

Pointer to the previous callback routine.

Additional information

Note that multi tasking support has to be enabled if GUI functions need to be called within the callback functions. Without multi tasking support only the GUI functions which are allowed to be called within an interrupt routine should be used.
The callback routine must have the following prototype:

Prototype

```
typedef void SIM_HARDKEY_CB(int KeyIndex, int State);
```

Parameter	Description
KeyIndex	Index of hardkey (0 = index of first key).
State	State of the specified hardkey (see table below).

Permitted values for parameter State	
0	Unpressed.
1	Pressed.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

SIM_HARDKEY_SetMode()

Description

Sets the behavior for a specified hardkey.

Prototype

```
int SIM_HARDKEY_SetMode(unsigned int KeyIndex, int Mode);
```

Parameter	Description
KeyIndex	Index of hardkey (0 = index of first key).
Mode	Behavior mode (see table below).

Permitted values for parameter Mode	
0	Normal behavior (default).
1	Toggle behavior.

Additional information

Normal (default) hardkey behavior means that a key is considered pressed only as long as the mouse button is held down on it. When the mouse is released or moved off of the hardkey, the key is considered unpressed.
With toggle behavior, each click of the mouse toggles the state of a hardkey to pressed or unpressed. That means if you click the mouse on a hardkey and it becomes pressed, it will remain pressed until you click the mouse on it again.

SIM_HARDKEY_SetState()

Description

Sets the state for a specified hardkey.

Prototype

```
int SIM_HARDKEY_SetState(unsigned int KeyIndex, int State);
```

Parameter	Description
KeyIndex	Index of hardkey (0 = index of first key).
State	State of the specified hardkey (see table below).

Permitted values for parameter State	
0	Unpressed.
1	Pressed.

Additional information

This function is only usable when SIM_HARDKEY_SetMode() is set to 1 (toggle mode).

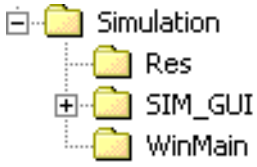
 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

5.5 Integrating the emWin simulation into an existing simulation

In order to integrate the emWin simulation into an existing simulation, the source code of the simulation is not required. The source code of the simulation is not normally shipped with emWin. It is a separate (optional) software item and is not included in the emWin basic package.
Normally the source code of the emWin simulation is not needed but available as an optional software item. As described earlier in this chapter the basic package and the trial version contains a simulation library. The API functions of this library can be used if for example the emWin simulation should be added to an existing hardware or real time kernel (RTOS) simulation.
To add the emWin simulation to an existing simulation (written in C or C++, using the Win32 API), only a few lines of code need to be added.

5.5.1 Directory structure

The subfolder `Simulation` of the `System` folder contains the emWin simulation. The directory structure is shown on the right. The table below explains the contents of the subfolders:



Directory	Contents
`Simulation`	Simulation source and header files to be used with and without the simulation source code. The folder also contains a ready to use simulation library.
`Res`	Resource files.
`SIM_GUI`	GUI simulation source code (optional).
`WinMain`	Contains the WinMain routine.

5.5.2 Using the simulation library

The following steps will show how to use the simulation library to integrate the emWin simulation into an existing simulation:

- Step 1: Add the simulation library `GUISim.lib` to the project.
- Step 2: Add all GUI files to the project as described in the chapter 2.1.1, "Subdirectories".
- Step 3: Add the include directories to the project as described in the chapter 2.1.2, "Include Directories".
- Step 4: Modify WinMain.

5.5.2.1 Modifying WinMain

Every windows Win32 program starts with `WinMain()` (contrary to a normal C program from the command line, which starts with `main()`. All that needs to be done is to add a few lines of code to this routine.
The following function calls need to be added (normally in the order as it’s shown in the following application code example):

- `SIM_GUI_Init`
- `SIM_GUI_CreateLCDWindow`
- `CreateThread`
- `SIM_GUI_Exit`

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

5.5.2.2 Example application

The following application is available under `Sample\WinMain\SampleApp.c` and shows how to integrate the emWin simulation into an existing application:

```
#include <windows.h>
#include "GUI_SIM_Win32.h"
void MainTask(void);

/*********************************************************************
*
*       _Thread
*/
static DWORD __stdcall _Thread(void* Parameter) {
  MainTask();
  return 0;
}

/*********************************************************************
*
*       _WndProcMain
*/
static LRESULT CALLBACK _WndProcMain(HWND   hWnd,   UINT   message,
                                     WPARAM wParam, LPARAM lParam) {
  SIM_GUI_HandleKeyEvents(message, wParam);
  switch (message) {
  case WM_DESTROY:
    PostQuitMessage(0);
    break;
  }
  return DefWindowProc(hWnd, message, wParam, lParam);
}

/*********************************************************************
*
*       _RegisterClass
*/
static void _RegisterClass(HINSTANCE hInstance) {
  WNDCLASSEX wcex;
  memset(&wcex, 0, sizeof(wcex));
  wcex.cbSize        = sizeof(WNDCLASSEX);
  wcex.hInstance     = hInstance;
  wcex.style         = CS_HREDRAW | CS_VREDRAW;
  wcex.lpfnWndProc   = (WNDPROC)_WndProcMain;
  wcex.hIcon         = 0;
  wcex.hCursor       = LoadCursor(NULL, IDC_ARROW);
  wcex.hbrBackground = (HBRUSH)(COLOR_APPWORKSPACE + 1);
  wcex.lpszMenuName  = 0;
  wcex.lpszClassName = "GUIApplication";
  RegisterClassEx(&wcex);
}

/*********************************************************************
*
*       WinMain
*/
int APIENTRY WinMain(HINSTANCE hInstance, HINSTANCE hPrevInstance,
                     LPSTR lpCmdLine, int nCmdShow) {
  DWORD ThreadID;
  MSG   Msg;
  HWND  hWndMain;
  /* Register window class */
  _RegisterClass(hInstance);
  /* Create main window    */
  hWndMain = CreateWindow("GUIApplication", "Application window",
                          WS_OVERLAPPEDWINDOW | WS_CLIPCHILDREN | WS_VISIBLE,
                          0, 0, 328, 267, NULL, NULL, hInstance, NULL);
  /* Initialize the emWin simulation and create a LCD window */
  SIM_GUI_Init(hInstance, hWndMain, lpCmdLine, "embOSIAR - emWin Simulation");
  SIM_GUI_CreateLCDWindow(hWndMain, 0, 0, 320, 240, 0);
  /* Create a thread which executes the code to be simulated */
  CreateThread(NULL, 0, (LPTHREAD_START_ROUTINE)_Thread, NULL, 0, &ThreadID);
  /* Main message loop */
  while (GetMessage(&Msg, NULL, 0, 0)) {
    TranslateMessage(&Msg);
    DispatchMessage(&Msg);
  }
  SIM_GUI_Exit();
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

5.5.3 Integration into the embOS Simulation

5.5.3.1 WinMain

The following code example shows how to modify the existing WinMain of the embOS simulation in order to integrate the emWin simulation. The red colored lines should be added to WinMain to initialize the emWin simulation, to create a simulation window and to exit the emWin simulation:

```
...
#include "GUI_SIM_Win32.h"
...
int APIENTRY WinMain(HINSTANCE hInstance,
                     HINSTANCE hPrevInstance,
                     LPSTR lpCmdLine, int nCmdShow) {
MSG    Msg;
HACCEL hAccelTable;
  HWND   hWndMain;
  BITMAP BmpDevice;
  DWORD  ThreadID;
  /* Init global data */
  _StopHyperThreading();
  _hInst = hInstance;
  /* Register main window class */
  _RegisterClass();
  /* Load bitmap */
  _hBmpDevice = (HBITMAP)LoadImage(_hInst,
                                   (LPCTSTR) IDB_DEVICE,
                                   IMAGE_BITMAP,  0, 0, 0);
  _hMenuPopup = LoadMenu(_hInst, (LPCSTR)IDC_CONTEXTMENU);
  _hMenuPopup = GetSubMenu(_hMenuPopup, 0);
  /* Create main window */
  GetObject(_hBmpDevice, sizeof(BmpDevice), &BmpDevice);
  hWndMain = CreateWindowEx(WS_EX_TOPMOST, _sWindowClass,
                            "embOSIAR Simulation",
                            WS_SYSMENU | WS_CLIPCHILDREN | WS_POPUP | WS_VISIBLE,
                            10, 20, BmpDevice.bmWidth, BmpDevice.bmHeight,
                            NULL, NULL, _hInst, NULL);
  if (!hWndMain) {
    return 1;   /* Error */
  }
  /* Init emWin simulation and create window */
  SIM_GUI_Init(hInstance, hWndMain, lpCmdLine, "embOSIAR - emWin Simulation");
  SIM_GUI_CreateLCDWindow(hWndMain, 80, 50, 128, 64, 0);
  /* Show main window */
  ShowWindow(hWndMain, nCmdShow);
  /* Load accelerator table */
  hAccelTable = LoadAccelerators(_hInst, (LPCTSTR)IDC_WINMAIN);
  /* application initialization: */
  CreateThread(NULL, 0, (LPTHREAD_START_ROUTINE)Thread, NULL, 0, &ThreadID);
  /* main message loop */
  if (SIM_Init(hWndMain) == 0) {
    while (GetMessage(&Msg, NULL, 0, 0)) {
      if (!TranslateAccelerator(Msg.hwnd, hAccelTable, &Msg)) {
        TranslateMessage(&Msg);
        DispatchMessage(&Msg);
      }
    }
  }
  /* Exit emWin simulation */
  SIM_GUI_Exit();
  return 0;
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

5.5.3.2 Target program (main)

The emWin API can be called from one or more target threads. Without RTOS, the WIN32 API function `CreateThread` is normally used to create a target thread which calls the emWin API; within an RTOS simulation, a target task/thread (Created by the simulated RTOS) is used to call the emWin API. In other words: Use `OS_CreateTask` to create a task for the user interface. Below a modified embOS start application:

```
#include "RTOS.H"
#include "HW_LED.h"
#include "GUI.h"
OS_STACKPTR int Stack0[128], Stack1[128], Stack2[2000]; /* Task stacks */
OS_TASK         TCB0,        TCB1,        TCB2;         /* Task-control-blocks */

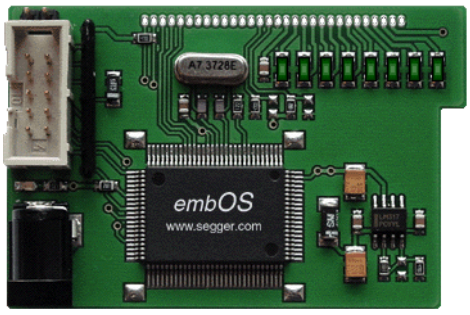
void Task0(void) {
  while (1) {
    HW_LED_Toggle0();
    OS_Delay(100);
  }
}

void Task1(void) {
  while (1) {
    HW_LED_Toggle1();
    OS_Delay(500);
  }
}

void MainTask(void) {
  GUI_COLOR aColor[] = {GUI_RED, GUI_YELLOW};
  GUI_Init();
  while (1) {
    int i;
    for (i = 0; i < 2; i++) {
      GUI_Clear();
      GUI_SetColor(aColor[i]);
      GUI_SetFont(&GUI_FontComic24B_ASCII);
      GUI_DispStringAt("Hello world!", 1, 1);
      OS_Delay(200);
    }
  }
}

/*************************************************************
*
*       main
*/
#include <windows.h>
void main(void) {
  OS_IncDI();           /* Initially disable interrupts  */
  OS_InitKern();        /* initialize OS                 */
  OS_InitHW();          /* initialize Hardware for OS    */
  /* You need to create at least one task here !         */
  OS_CREATETASK(&TCB0, "HP Task",  Task0,    100, Stack0);
  OS_CREATETASK(&TCB1, "LP Task",  Task1,     50, Stack1);
  OS_CREATETASK(&TCB2, "GUI Task", MainTask,  80, Stack2);
  OS_Start();           /* Start multitasking            */
}
```

The following table shows the simulation before and after integrating the emWin simulation:

Before	After
	

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

5.5.4 GUI simulation API

The table below lists the available routines for user defined simulation programs in alphabetical order within their respective categories. The functions are only available with the source code of the emWin simulation. Detailed descriptions of the routines follow:

Routine	Explanation
SIM_GUI_CreateLCDInfoWindow()	Creates a window which shows the available colors of the given layer with the given size and position.
SIM_GUI_CreateLCDWindow()	Creates a LCD window with the given size and position.
SIM_GUI_Exit()	Stops the GUI simulation.
SIM_GUI_Init()	Initializes the GUI simulation.
SIM_GUI_SetLCDWindowHook()	Sets a hook function to be called if the LCD window receives a message.

SIM_GUI_CreateLCDInfoWindow()

Description

Creates a window which shows the available colors for the given layer.

Prototype

```
HWND SIM_GUI_CreateLCDInfoWindow(HWND hParent,
                                 int x, int y, int xSize, int ySize
                                 int LayerIndex);
```

Parameter	Description
hParent	Handle of the parent window.
x	X position in parent coordinates.
y	Y position in parent coordinates.
xSize	X size in pixel of the new window. Should be 160 if using a color depth between 1 and 8 or 128 if working in high color mode.
ySize	Y size in pixel of the new window. Should be 160 if using a color depth between 1 and 8 or 128 if working in high color mode.
LayerIndex	Index of layer to be shown.

Additional information

The created color window has no frame, no title bar and no buttons.

Example

```
SIM_GUI_CreateLCDInfoWindow(hWnd, 0, 0, 160, 160, 0);
```

Screenshot



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

SIM_GUI_CreateLCDWindow()

Description

Creates a window which simulates a LCD display with the given size at the given position.

Prototype

```
HWND SIM_GUI_CreateLCDWindow(HWND hParent,
                             int x, int y, int xSize, int ySize
                             int LayerIndex);
```

Parameter	Description
hParent	Handle of the parent window.
x	X position in parent coordinates.
y	Y position in parent coordinates.
xSize	X size in pixel of the new window.
ySize	Y size in pixel of the new window.
LayerIndex	Index of layer to be shown.

Additional information

All display output to the given layer will be shown in this window. The size of the window should be the same as configured in LCDConf.c.
The created simulation window has no frame, no title bar and no buttons.

SIM_GUI_Exit()

Description

The function should be called before the simulation returns to the calling process.

Prototype

```
void SIM_GUI_Exit(void);
```

SIM_GUI_Init()

Description

This function initializes the emWin simulation and should be called before any other SIM_GUI... function call.

Prototype

```
int SIM_GUI_Init(HINSTANCE hInst, HWND hWndMain,
                 char * pCmdLine, const char * sAppName);
```

Parameter	Description
hInst	Handle to current instance passed to WinMain.
hWndMain	Handle of the simulations main window.
pCmdLine	Pointer to command line passed to WinMain
sAppName	Pointer to a string that contains the application name.

Additional information

The parameters hWndMain and sAppName are used if a message box should be displayed.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

SIM_GUI_SetLCDWindowHook()

Description

Sets a hook function to be called from the simulation if the LCD window receives a message.

Prototype

```
void SIM_GUI_SetLCDWindowHook(SIM_GUI_tfHook * pfHook);
```

Parameter	Description
pfHook	Pointer to hook function.

Prototype of hook function

```
int Hook(HWND hWnd, UINT Message, WPARAM wParam, LPARAM lParam,
         int * pResult);
```

Parameter	Description
hWnd	Handle of LCD window.
Message	Message received from the operating system.
wParam	wParam message parameter passed by the system.
lParam	lParam message parameter passed by the system.
pResult	Pointer to an integer which should be used as return code if the message has been processed by the hook function.

Return value

The hook function should return 0 if the message has been processed. In this case the GUI simulation ignores the message.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 6

Viewer

If you use the simulation when debugging your application, you cannot see the display output when stepping through the source code. The primary purpose of the viewer is to solve this problem. It shows the contents of the simulated display(s) while debugging in the simulation.

The viewer gives you the following additional capabilities:

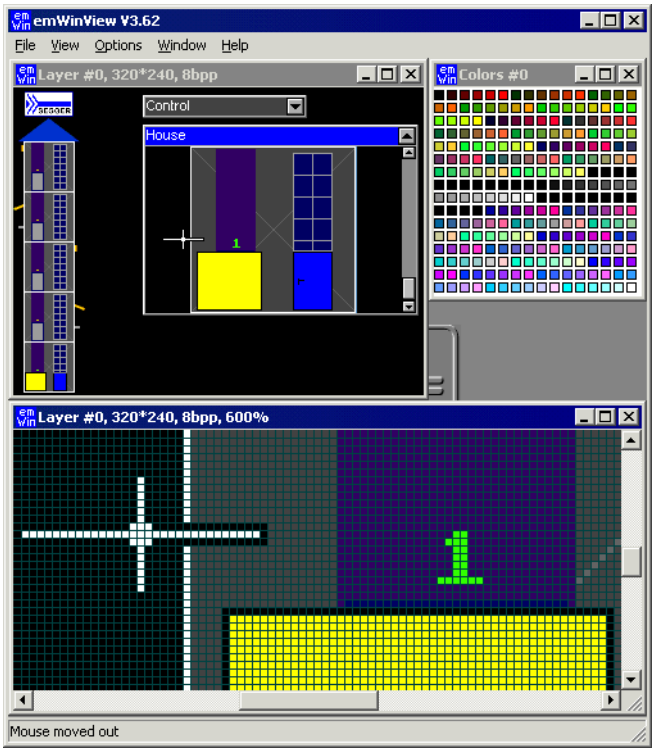
- Multiple windows for each layer
- Watching the whole virtual layer in one window
- Magnification of each layer window
- Composite view if using multiple layers

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

6.1 Using the viewer

The viewer allows you to:

- Open multiple windows for any layer/display
- Zoom in on any area of a layer/display
- See the contents of the individual layers/displays as well as the composite view in multi-layer configurations
- See the contents of the virtual screen and the visible display when using the virtual screen support.



The screenshot shows the viewer displaying the output of a single layer configuration. The upper left corner shows the simulated display. In the upper right corner is a window, which shows the available colors of the display configuration. At the bottom of the viewer a second display window shows a magnified area of the simulated display. If you start to debug your application, the viewer shows one display window per layer and one color window per layer. In a multi layer configuration, a composite view window will also be visible.

6.1.1 Using the simulation and the viewer

If you use the simulation when debugging your application, you cannot see the display output when stepping through the source code. This is due to a limitation of Win32: If one thread (the one being debugged) is halted, all other threads of the process are also halted. This includes the thread which outputs the simulated display on the screen.
The emWin viewer solves this problem by showing the display window and the color window of your simulation in a separate process. It is your choice if you want to start the viewer before debugging your application or while you are debugging. Our suggestion:

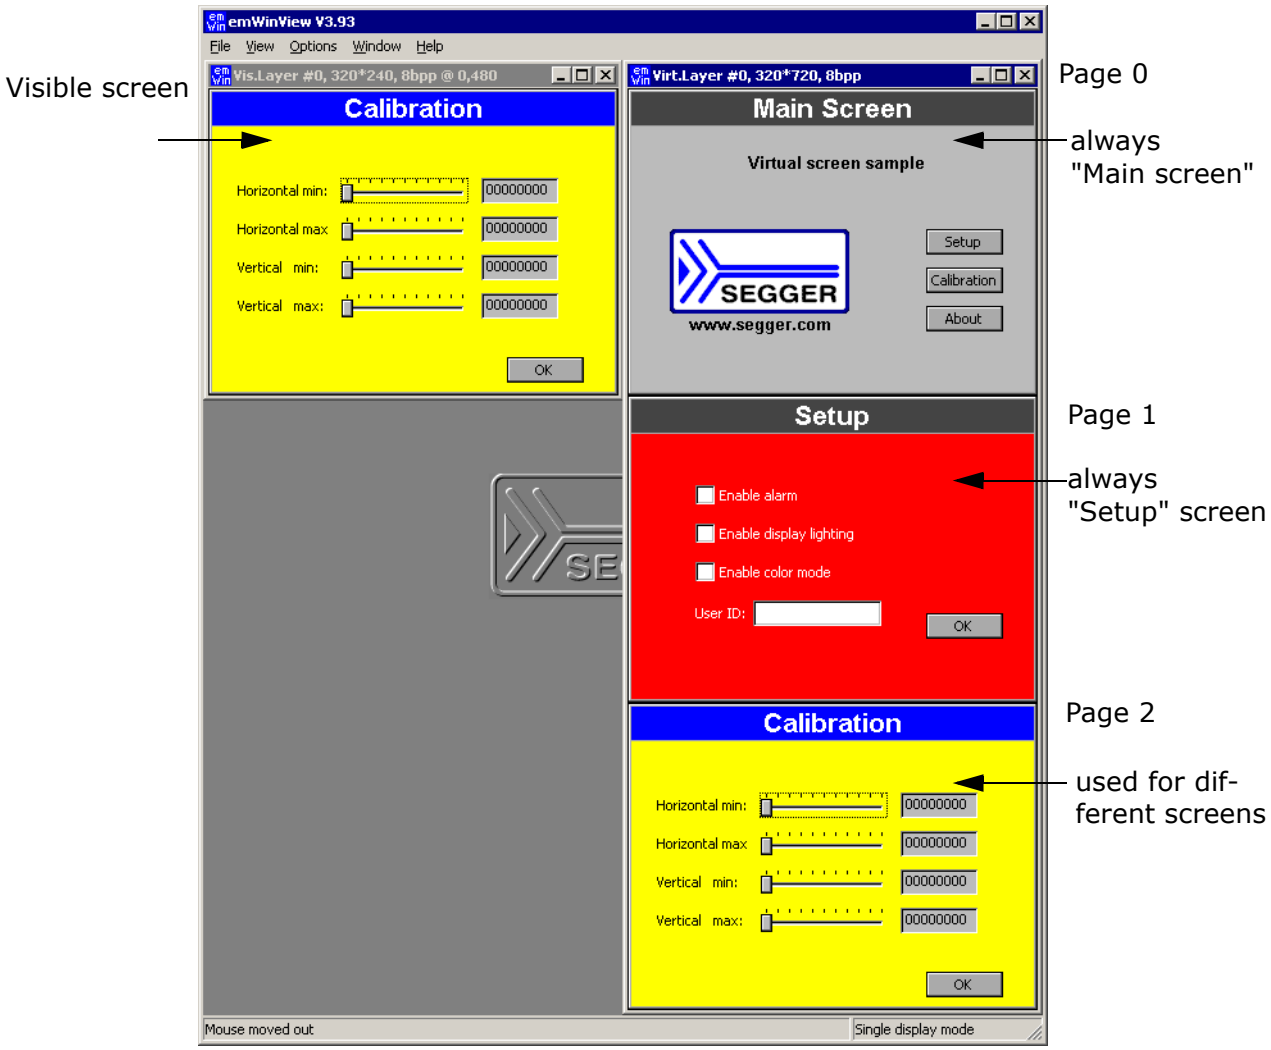
- Step 1: Start the viewer. No display- or color window is shown until the simulation has been started.
- Step 2: Open the Visual C++ workspace.
- Step 3: Compile and run the application program.
- Step 4: Debug the application as described previously.

The advantage is that you can now follow all drawing operations step by step in the LCD window.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

6.1.2 Using the viewer with virtual pages

By default the viewer opens one window per layer which shows the visible part of the video RAM, normally the display. If the configured virtual video RAM is larger than the display, the command `View/Virtual Layer/Layer (0...4)` can be used to show the whole video RAM in one window. When using the function `GUI_SetOrg()`, the contents of the visible screen will change, but the virtual layer window remains unchanged:



For more information about virtual screens, refer to chapter "Virtual screen / Virtual pages" on page 739.

6.1.3 Always on top

Per default the viewer window is always on top. You can change this behavior by selecting `Options\Always on top` from the menu.

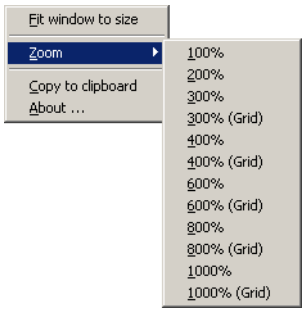
6.1.4 Open further windows of the display output

If you want to show a magnified area of the LCD output or the composite view of a multi layer configuration it could be useful to open more than one output window. You can do this by `View/Visible Layer/Layer (1...4)`, `View/Virtual Layer/Layer (1...4)` or `View/Composite`.


© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

6.1.5 Zooming

Zooming in or out is easy:
Right-click on a layer or composite window opens the `Zoom` popup menu.
Choose one of the zoom options:



Using the grid

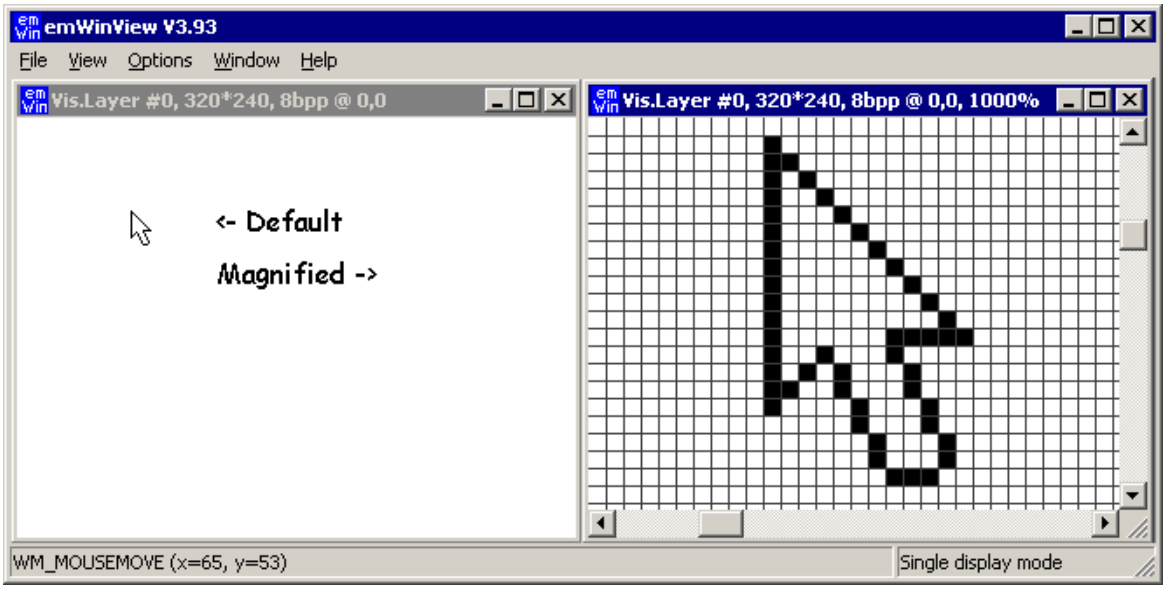

If you magnify the LCD output >= 300%, you have the choice between showing the output with or without a grid. It is possible to change the color of the grid. This can be done choosing the Menu point `Options/Grid color`.

Adapting the size of the window

If you want to adapt the size of the window to the magnification choose `Fit window to size` from the first popup menu.

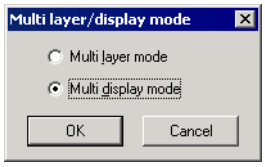
6.1.6 Copy the output to the clipboard

Click onto a LCD window or a composite view with the right mouse key and choose `Copy to clipboard`. Now you can paste the contents of the clipboard for example into the `mspaint` application.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

6.1.7 Using the viewer with multiple displays


If you are working with multiple displays you should set the viewer into 'Multi display mode' by using the command `Options/Multi layer/display`.



When starting the debugger the viewer will open one display window and one color window for each display:

6.1.8 Using the viewer with multiple layers

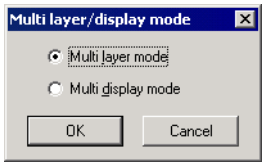
If you are working with multiple layers you should set the viewer into 'Multi layer mode' by using the command `Options/Multi layer/display`.



When starting the debugger the viewer will open one LCD window and one color window for each layer and one composite window for the result.

Example


The example below shows a screenshot of the viewer with 2 layers. Layer 0 shows color bars with a high color configuration. Layer 1 shows a transparent circle on a white background with colored rectangles. The composite window shows the result which is actually visible on the display

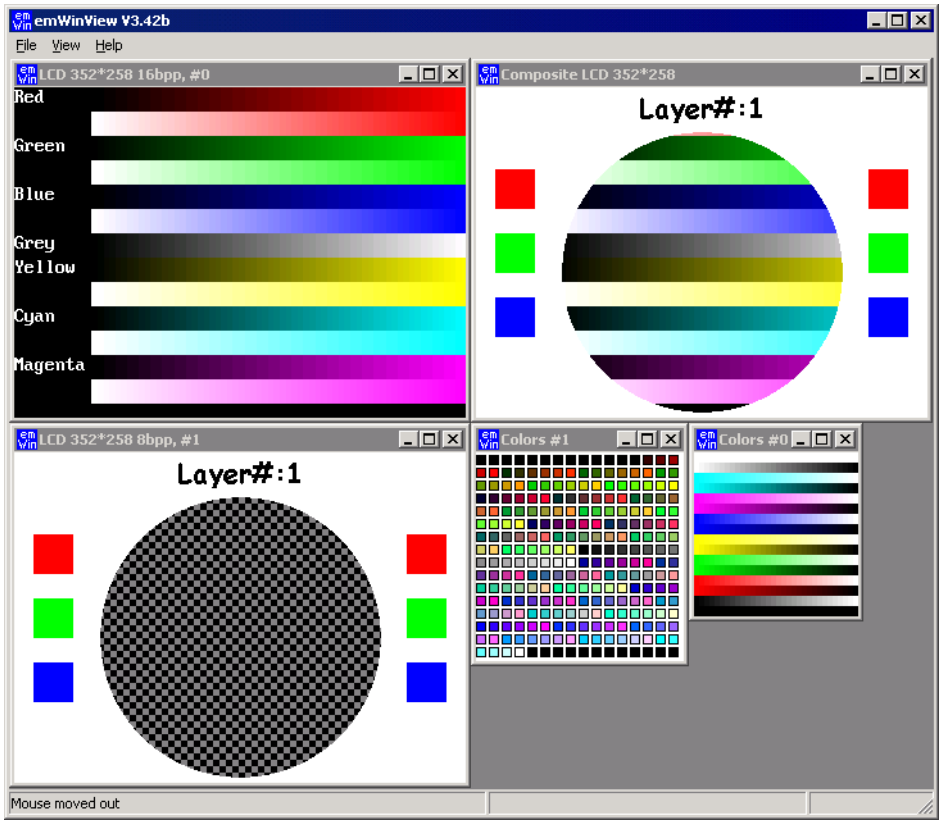

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Transparency

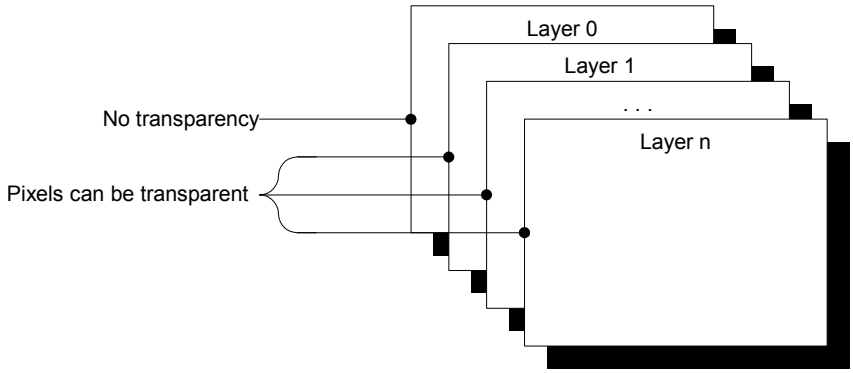The composite window of the viewer shows all layers; layers with higher index are on top of layers with lower index and can have transparent pixels:



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 7

Displaying Text

It is very easy to display text with emWin. Knowledge of only a few routines already allows you to write any text, in any available font, at any point on the display. We first provide a short introduction to displaying text, followed by more detailed explanations of the individual routines that are available.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

7.1 Basic routines

In order to display text on the LCD, simply call the routine `GUI_DispString()` with the text you want to display as parameters. For example:

```
GUI_DispString("Hello world!");
```

The above code will display the text "Hello world" at the current text position. However, as you will see, there are routines to display text in a different font or in a certain position. In addition, it is possible to write not only strings but also decimal, hexadecimal and binary values to the display. Even though the graphic displays are usually byte-oriented, the text can be positioned at any pixel of the display, not only at byte positions.

Control characters

Control characters are characters with a character code of less than 32. The control characters are defined as part of ASCII. emWin ignores all control characters except for the following:

Char. Code	ASCII code	C	Description
10	LF	\n	Line feed. The current text position is changed to the beginning of the next line. Per default, this is: X = 0. Y + =font-distance in pixels (as delivered by `GUI_GetFontDistY()`).
13	CR	\r	Carriage return. The current text position is changed to the beginning of the current line. Per default, this is: X = 0.

Usage of the control character `LF` can be very convenient in strings. A line feed can be made part of a string so that a string spanning multiple lines can be displayed with a single routine call.

Positioning text at a selected position

This may be done by using the routine `GUI_GotoXY()` as shown in the following example:

```
GUI_GotoXY(10,10);//  Set text position (in pixels)
GUI_DispString("Hello world!");//  Show text
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

7.2 Text API

The table below lists the available text-related routines in alphabetical order within their respective categories. Detailed descriptions of the routines can be found in the sections that follow.

Routine	Explanation
Routines to display text	
GUI_DispChar()	Displays single character at current position.
GUI_DispCharAt()	Displays single character at specified position.
GUI_DispChars()	Displays character a specified number of times.
GUI_DispNextLine()	Moves the cursor to the beginning of the next line.
GUI_DispString()	Displays string at current position.
GUI_DispStringAt()	Displays string at specified position.
GUI_DispStringAtCEOL()	Displays string at specified position, then clear to end of line.
GUI_DispStringHCenterAt()	Displays string centered horizontally at the given position.
GUI_DispStringInRect()	Displays string in specified rectangle.
GUI_DispStringInRectEx()	Displays string in specified rectangle and optionally rotates it.
GUI_DispStringInRectWrap()	Displays string in specified rectangle with optional wrapping.
GUI_DispStringLen()	Display string at current position with specified number of characters.
GUI_WrapGetNumLines()	Get the number of text lines for the given wrap mode.
Selecting text drawing modes	
GUI_GetTextMode()	Returns the current text mode
GUI_SetTextMode()	Sets text drawing mode.
GUI_SetTextStyle()	Sets the text style to be used.
Selecting text alignment	
GUI_GetTextAlign()	Return current text alignment mode.
GUI_SetLBorder()	Set left border after line feed.
GUI_SetTextAlign()	Set text alignment mode.
Setting the current text position	
GUI_GotoX()	Set current X-position.
GUI_GotoXY()	Set current (X,Y) position.
GUI_GotoY()	Set current Y-position.
Retrieving the current text position	
GUI_GetDispPosX()	Return current X-position.
GUI_GetDispPosY()	Return current Y-position.
Routines to clear a window or parts of it	
GUI_Clear()	Clear active window (or entire display if background is the active window).
GUI_DispCEOL()	Clear display from current text position to end of line.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

7.3 Routines to display text

GUI_DispChar()

Description

Displays a single character at the current text position in the current window using the current font.

Prototype

```
void GUI_DispChar(U16 c);
```

Parameter	Description
c	Character to display.

Additional information

This is the basic routine for displaying a single character. All other display routines (GUI_DispCharAt(), GUI_DispString(), etc.) call this routine to output the individual characters.
Which characters are available depends on the selected font. If the character is not available in the current font, nothing is displayed.

Example

Shows a capital A on the display:

```
GUI_DispChar('A');
```

Related topics

GUI_DispChars(), GUI_DispCharAt()

GUI_DispCharAt()

Description

Displays a single character at a specified position in the current window using the current font.

Prototype

```
void GUI_DispCharAt(U16 c, I16P x, I16P y);
```

Parameter	Description
c	Character to display.
x	X-position to write to in pixels of the client window.
y	Y-position to write to in pixels of the client window.

Add information

Displays the character with its upper left corner at the specified (X,Y) position.
Writes the character using the routine GUI_DispChar().
If the character is not available in the current font, nothing is displayed.

Example

Shows a capital A on the display in the upper left corner:

```
GUI_DispCharAt('A',0,0);
```

Related topics

GUI_DispChar(), GUI_DispChars()

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_DispChars()

Description

Displays a character a specified number of times at the current text position in the current window using the current font.

Prototype

```
void GUI_DispChars(U16 c, int Cnt);
```

Parameter	Description
c	Character to display.
Cnt	Number of repetitions (0 <= Cnt <= 32767).

Additional information

Writes the character using the routine `GUI_DispChar()`.
If the character is not available in the current font, nothing is displayed.

Example

Shows the line "******************************" on the display:

```
GUI_DispChars('*', 30);
```

Related topics

`GUI_DispChar()`, `GUI_DispCharAt()`

GUI_DispNextLine()

Description

Moves the cursor to the beginning of the next line.

Prototype

```
void GUI_DispNextLine(void);
```

Related topics

`GUI_SetLBorder()`

GUI_DispString()

Description

Displays the string passed as parameter at the current text position in the current window using the current font.

Prototype

```
void GUI_DispString(const char GUI_FAR * s);
```

Parameter	Description
s	String to display.

Additional information

The string can contain the control character `\n`. This control character moves the current text position to the beginning of the next line.

Example

Shows "Hello world" on the display and "Next line" on the next line:

```
GUI_DispString("Hello world");  //Disp text
GUI_DispString("\nNext line");  //Disp text
```

Related topics

`GUI_DispStringAt()`, `GUI_DispStringAtCEOL()`, `GUI_DispStringLen()`

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_DispStringAt()

Description

Displays the string passed as parameter at a specified position in the current window using the current font.

Prototype

```
void GUI_DispStringAt(const char GUI_FAR * s, int x, int y);
```

Parameter	Description
s	String to display.
x	X-position to write to in pixels of the client window.
y	Y-position to write to in pixels of the client window.

Example

Shows "Position 50,20" at position 50,20 on the display:

```
GUI_DispStringAt("Position 50,20", 50, 20);  // Disp text
```

Related topics

`GUI_DispString()`, `GUI_DispStringAtCEOL()`, `GUI_DispStringLen()`,

GUI_DispStringAtCEOL()

Description

This routine uses the exact same parameters as `GUI_DispStringAt()`. It does the same thing: displays a given string at a specified position. However, after doing so, it clears the remaining part of the line to the end by calling the routine `GUI_DispCEOL()`. This routine can be handy if one string is to overwrite another, and the overwriting string is or may be shorter than the previous one.

GUI_DispStringHCenterAt()

Description

Displays the string passed as parameter horizontally centered at a specified position in the current window using the current font.

Prototype

```
void GUI_DispStringHCenterAt(const char GUI_FAR * s, int x, int y);
```

Parameter	Description
s	String to display.
x	X-position to write to in pixels of the client window.
y	Y-position to write to in pixels of the client window.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_DispStringInRect()

Description

Displays the string passed as parameter at a specified position within a specified rectangle, in the current window using the current font.

Prototype

```
void GUI_DispStringInRect(const char GUI_FAR * s,
                          GUI_RECT *           pRect,
                          int                  Align);
```

Parameter	Description
s	String to display.
pRect	Rectangle to write to in pixels of the client window.
Align	Alignment flags; "OR" combinable. A flag for horizontal and a flag for vertical alignment should be combined. Available flags are: GUI_TA_TOP, GUI_TA_BOTTOM, GUI_TA_VCENTER for vertical alignment. GUI_TA_LEFT, GUI_TA_RIGHT, GUI_TA_HCENTER for horizontal alignment.

Example

Shows the word "Text" centered horizontally and vertically in the current window:

```
GUI_RECT rClient;
GUI_GetClientRect(&rClient);
GUI_DispStringInRect("Text", &rClient, GUI_TA_HCENTER | GUI_TA_VCENTER);
```

Additional information

If the specified rectangle is too small, the text will be clipped.

Related topics

GUI_DispString(), GUI_DispStringAtCEOL(), GUI_DispStringLen(),

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_DispStringInRectEx()

Description

Displays the string passed as parameter at a specified position within a specified rectangle, in the current window using the current font and (optionally) rotates it.

Prototype

```
void GUI_DispStringInRectEx(const char *         s,
                            GUI_RECT *           pRect,
                            int                  TextAlign,
                            int                  MaxLen,
                            const GUI_ROTATION * pLCD_Api);
```

Parameter	Description
s	String to display.
pRect	Rectangle to write to in pixels of the client window.
TextAlign	Alignment flags; "OR" combinable. A flag for horizontal and a flag for vertical alignment should be combined. Available flags are: GUI_TA_TOP, GUI_TA_BOTTOM, GUI_TA_VCENTER for vertical alignment. GUI_TA_LEFT, GUI_TA_RIGHT, GUI_TA_HCENTER for horizontal alignment.
MaxLen	Maximum number of characters to be shown.
pLCD_Api	(see table below)

Permitted values for parameter pLCD_Api	
GUI_ROTATE_0	Does not rotate the text. Shows it from left to right.
GUI_ROTATE_180	Rotates the text by 180 degrees.
GUI_ROTATE_CCW	Rotates the text counter clockwise.
GUI_ROTATE_CW	Rotates the text clockwise.

Example

Shows the word "Text" centered horizontally and vertically in the given rectangle:

```
GUI_RECT Rect = {10, 10, 40, 80};
char acText[] = "Rotated\ntext";
GUI_SetTextMode(GUI_TM_XOR);
GUI_FillRectEx(&Rect);
GUI_DispStringInRectEx(acText,
                       &Rect,
                       GUI_TA_HCENTER | GUI_TA_VCENTER,
                       strlen(acText),
                       GUI_ROTATE_CCW);
```

Screenshot of above example



Additional information

If the specified rectangle is too small, the text will be clipped.
To make the function available the configuration switch GUI_SUPPORT_ROTATION must be activated (default).

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_DispStringInRectWrap()

Description

Displays a string at a specified position within a specified rectangle, in the current window using the current font and (optionally) wraps the text.

Prototype

```
void GUI_DispStringInRectWrap(const char GUI_UNI_PTR * s,
                              GUI_RECT *               pRect,
                              int                      TextAlign,
                              GUI_WRAPMODE             WrapMode);
```

Parameter	Description
s	String to display.
pRect	Rectangle to write to in pixels of the client window.
TextAlign	Alignment flags; "OR" combinable. A flag for horizontal and a flag for vertical alignment should be combined. Available flags are: GUI_TA_TOP, GUI_TA_BOTTOM, GUI_TA_VCENTER for vertical alignment. GUI_TA_LEFT, GUI_TA_RIGHT, GUI_TA_HCENTER for horizontal alignment.
WrapMode	(see table below)

Permitted values for parameter WrapMode	
GUI_WRAPMODE_NONE	No wrapping will be performed.
GUI_WRAPMODE_WORD	Text is wrapped word wise.
GUI_WRAPMODE_CHAR	Text is wrapped char wise.

Additional information

If word wrapping should be performed and the given rectangle is too small for a word char wrapping is executed at this word.

Example

Shows a text centered horizontally and vertically in the given rectangle with word wrapping:

```
int i;
char acText[]      = "This example demonstrates text wrapping";
GUI_RECT Rect      = {10, 10, 59, 59};
GUI_WRAPMODE aWm[] = {GUI_WRAPMODE_NONE,
                      GUI_WRAPMODE_CHAR,
                      GUI_WRAPMODE_WORD};
GUI_SetTextMode(GUI_TM_TRANS);
for (i = 0; i < 3; i++) {
  GUI_SetColor(GUI_BLUE);
  GUI_FillRectEx(&Rect);
  GUI_SetColor(GUI_WHITE);
  GUI_DispStringInRectWrap(acText, &Rect, GUI_TA_LEFT, aWm[i]);
  Rect.x0 += 60;
  Rect.x1 += 60;
}
```

Screenshot of above example



© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_DispStringLen()

Description

Displays the string passed as parameter with a specified number of characters at the current text position, in the current window using the current font.

Prototype

```
void GUI_DispStringLen(const char GUI_FAR * s, int Len);
```

Parameter	Description
s	String to display. Should be a \0 terminated array of 8-bit character. Passing NULL as parameter is permitted.
Len	Number of characters to display.

Additional information

If the string has less characters than specified (is shorter), it is padded with spaces. If the string has more characters than specified (is longer), then only the given number of characters is actually displayed.
This function is especially useful if text messages can be displayed in different languages (and will naturally differ in length), but only a certain number of characters can be displayed.

Related topics

GUI_DispString(), GUI_DispStringAt(), GUI_DispStringAtCEOL(),

GUI_WrapGetNumLines()

Description

Returns the number of lines used to show the given text with the given wrap mode.

Prototype

```
int GUI_WrapGetNumLines(const char GUI_UNI_PTR * pText,
                        int                      xSize,
                        GUI_WRAPMODE             WrapMode);
```

Parameter	Description
pText	String to display. Should be a \0 terminated array of 8-bit character. Passing NULL as parameter is permitted.
xSize	X-size to be used to draw the text.
WrapMode	(see table below)

Permitted values for parameter WrapMode	
GUI_WRAPMODE_NONE	No wrapping will be performed.
GUI_WRAPMODE_WORD	Text is wrapped word wise.
GUI_WRAPMODE_CHAR	Text is wrapped char wise.

Additional information

Please remember that the number of lines required to draw text depends on the currently selected font.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

7.4 Selecting text drawing modes

Normally, text is written into the selected window at the current text position using the selected font in normal text. Normal text means that the text overwrites whatever is already displayed where the bits set in the character mask are set on the display. In this mode, active bits are written using the foreground color, while inactive bits are written with the background color. However, in some situations it may be desirable to change this default behavior. emWin offers four flags for this purpose (one default plus three modifiers), which may be combined:

Normal text

Text can be displayed normally by specifying GUI_TEXTMODE_NORMAL or 0.

Reverse text

Text can be displayed reverse by specifying GUI_TEXTMODE_REV. What is usually displayed as white on black will be displayed as black on white.

Transparent text

Text can be displayed transparently by specifying GUI_TEXTMODE_TRANS. Transparent text means that the text is written on top of whatever is already visible on the display. The difference is that whatever was previously on the screen can still be seen, whereas with normal text the background is replaced with the currently selected background color.

XOR text

Text can be displayed using the XOR mode by specifying GUI_TEXTMODE_XOR. What usually is drawn white (the actual character) is inverted. The effect is identical to that of the default mode (normal text) if the background is black. If the background is white, the output is identical to reverse text. If you use colors, an inverted pixel is calculated as follows:
New pixel color = number of colors - actual pixel color - 1.

Transparent reversed text

Text can be displayed in reverse transparently by specifying GUI_TEXTMODE_TRANS | GUI_TEXTMODE_REV. As with transparent text, it does not overwrite the background, and as with reverse text, the text is displayed in reverse.

Additional information

Please note that you can also use the abbreviated form: e.g. GUI_TM_NORMAL

Example

Displays normal, reverse, transparent, XOR, and transparent reversed text:

```
GUI_SetFont(&GUI_Font8x16);
GUI_SetBkColor(GUI_BLUE);
GUI_Clear();
GUI_SetPenSize(10);
GUI_SetColor(GUI_RED);
GUI_DrawLine(80, 10, 240, 90);
GUI_DrawLine(80, 90, 240, 10);
GUI_SetBkColor(GUI_BLACK);
GUI_SetColor(GUI_WHITE);
GUI_SetTextMode(GUI_TM_NORMAL);
GUI_DispStringHCenterAt("GUI_TM_NORMAL"            , 160, 10);
GUI_SetTextMode(GUI_TM_REV);
GUI_DispStringHCenterAt("GUI_TM_REV"               , 160, 26);
GUI_SetTextMode(GUI_TM_TRANS);
GUI_DispStringHCenterAt("GUI_TM_TRANS"             , 160, 42);
GUI_SetTextMode(GUI_TM_XOR);
GUI_DispStringHCenterAt("GUI_TM_XOR"               , 160, 58);
GUI_SetTextMode(GUI_TM_TRANS | GUI_TM_REV);
GUI_DispStringHCenterAt("GUI_TM_TRANS | GUI_TM_REV", 160, 74);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Screen shot of above example



GUI_GetTextMode()

Description

Returns the currently selected text mode.

Prototype

```
int GUI_GetTextMode(void);
```

Return value

The currently selected text mode.

GUI_SetTextMode()

Description

Sets the text mode to the parameter specified.

Prototype

```
int GUI_SetTextMode(int TextMode);
```

Parameter	Description
TextMode	Text mode to set. May be any combination of the TEXTMODE flags.

Permitted values for parameter TextMode (OR-combinable)	
GUI_TEXTMODE_NORMAL	Causes text to be displayed normally. This is the default setting; the value is identical to 0.
GUI_TEXTMODE_REV	Causes text to be displayed reverse.
GUI_TEXTMODE_TRANS	Causes text to be displayed transparent.
GUI_TEXTMODE_XOR	Causes text to invert the background.

Return value

The previous selected text mode.

Example

Shows "The value is" at position 0,0 on the display, shows a value in reverse text, then sets the text mode back to normal:

```
int i = 20;
GUI_DispStringAt("The value is", 0, 0);
GUI_SetTextMode(GUI_TEXTMODE_REV);
GUI_DispDec(20, 3);
GUI_SetTextMode(GUI_TEXTMODE_NORMAL);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_SetTextStyle()

Description

Sets the text style to the parameter specified.

Prototype

```
char GUI_SetTextStyle(char Style);
```

Parameter	Description
Style	Text style to set (see table below).

Permitted values for parameter Style	
GUI_TS_NORMAL	Renders text normal (default).
GUI_TS_UNDERLINE	Renders text underlined.
GUI_TS_STRIKETHRU	Renders text in strike through type.
GUI_TS_OVERLINE	Renders text in overline type.

Return value

The previous selected text style.

7.5 Selecting text alignment

GUI_GetTextAlign()

Description

Returns the current text alignment mode.

Prototype

```
int GUI_GetTextAlign(void);
```

GUI_SetLBorder()

Description

Sets the left border for line feeds in the current window.

Prototype

```
void GUI_SetLBorder(int x)
```

Parameter	Description
x	New left border (in pixels, 0 is left border).

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_SetTextAlign()

Description

Sets the text alignment mode for string output in the current window.

Prototype

```
int GUI_SetTextAlign(int TextAlign);
```

Parameter	Description
TextAlign	Text alignment mode to set. May be a combination of a horizontal and a vertical alignment flag.

Permitted values for parameter TextAlign (horizontal and vertical flags are OR-combinable)	
Horizontal alignment	
GUI_TA_LEFT	Align X-position left (default).
GUI_TA_HCENTER	Center X-position.
GUI_TA_RIGHT	Align X-position right.
Vertical alignment	
GUI_TA_TOP	Align Y-position with top of characters (default).
GUI_TA_VCENTER	Center Y-position.
GUI_TA_BOTTOM	Align Y-position with bottom pixel line of font.

Return value

The selected text alignment mode.

Additional information

GUI_SetTextAllign() does not affect the character output routines beginning with GUI_DispChar(). Note that the settings made with this function are valid only for one string.

Example

Displays the value 1234 with the center of the text at x=100, y=100:

```
GUI_SetTextAlign(GUI_TA_HCENTER | GUI_TA_VCENTER);
GUI_DispDecAt(1234,100,100,4);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

7.6 Setting the current text position

Every task has a current text position. This is the position relative to the origin of the window (usually (0,0)) where the next character will be written if a text output routine is called. Initially, this position is (0,0), which is the upper left corner of the current window. There are 3 functions which can be used to set the current text position.

GUI_GotoXY(), GUI_GotoX(), GUI_GotoY()

Description

Set the current text write position.

Prototypes

```
char GUI_GotoXY(int x, int y);
char GUI_GotoX(int x);
char GUI_GotoY(int y);
```

Parameter	Description
x	New X-position (in pixels, 0 is left border).
y	New Y-position (in pixels, 0 is top border).

Return value

Usually 0.
If a value != 0 is returned, then the current text position is outside of the window (to the right or below), so a following write operation can be omitted.

Additional information

`GUI_GotoXY()` sets both the X- and Y-components of the current text position.
`GUI_GotoX()` sets the X-component of the current text position; the Y-component remains unchanged.
`GUI_GotoY()` sets the Y-component of the current text position; the X-component remains unchanged.

Example

Shows "(20,20)" at position 20,20 on the display:

```
GUI_GotoXY(20,20)
GUI_DispString("The value is");
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

7.7 Retrieving the current text position

GUI_GetDispPosX()

Description

Returns the current X-position.

Prototype

```
int GUI_GetDispPosX(void);
```

GUI_GetDispPosY()

Description

Returns the current Y-position.

Prototype

```
int GUI_GetDispPosY(void);
```

7.8 Routines to clear a window or parts of it

GUI_Clear()

Description

Clears the current window.

Prototype

```
void GUI_Clear(void);
```

Additional information

If no window has been defined, the current window is the entire display. In this case, the entire display is cleared.

Example

Shows "Hello world" on the display, waits 1 second and then clears the display:

```
GUI_DispStringAt("Hello world", 0, 0); // Disp text
GUI_Delay(1000);                      // Wait 1 second (not part of emWin)
GUI_Clear();                           // Clear screen
```

GUI_DispCEOL()

Description

Clears the current window (or the display) from the current text position to the end of the line using the height of the current font.

Prototype

```
void GUI_DispCEOL(void);
```

Example

Shows "Hello world" on the display, waits 1 second and then displays "Hi" in the same place, replacing the old string:

```
GUI_DispStringAt("Hello world", 0, 0);// Disp text
Delay (1000);
GUI_DispStringAt("Hi", 0, 0);
GUI_DispCEOL();
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 8

Displaying Values

The preceding chapter explained how to show strings on the display. Of course you may use strings and the functions of the standard C library to display values. However, this can sometimes be a difficult task. It is usually much easier (and much more efficient) to call a routine that displays the value in the form that you want. emWin supports different decimal, hexadecimal and binary outputs. The individual routines are explained in this chapter.
All functions work without the usage of a floating-point library and are optimized for both speed and size. Of course `sprintf` may also be used on any system. Using the routines in this chapter can sometimes simplify things and save both ROM space and execution time.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

8.1 Value API

The table below lists the available value-related routines in alphabetical order within their respective categories. Detailed descriptions of the routines can be found in the sections that follow.

Routine	Explanation
Displaying decimal values	
GUI_DispDec()	Display value in decimal form at current position with specified number of characters.
GUI_DispDecAt()	Display value in decimal form at specified position with specified number of characters.
GUI_DispDecMin()	Display value in decimal form at current position with minimum number of characters.
GUI_DispDecShift()	Display long value in decimal form with decimal point at current position with specified number of characters.
GUI_DispDecSpace()	Display value in decimal form at current position with specified number of characters, replace leading zeros with spaces.
GUI_DispSDec()	Display value in decimal form at current position with specified number of characters and sign.
GUI_DispSDecShift()	Display long value in decimal form with decimal point at current position with specified number of characters and sign.
Displaying floating-point values	
GUI_DispFloat()	Display floating-point value with specified number of characters.
GUI_DispFloatFix()	Display floating-point value with fixed no. of digits to the right of decimal point.
GUI_DispFloatMin()	Display floating-point value with minimum number of characters.
GUI_DispSFloatFix()	Display floating-point value with fixed no. of digits to the right of decimal point and sign.
GUI_DispSFloatMin()	Display floating-point value with minimum number of characters and sign.
Displaying binary values	
GUI_DispBin()	Display value in binary form at current position.
GUI_DispBinAt()	Display value in binary form at specified position.
Displaying hexadecimal values	
GUI_DispHex()	Display value in hexadecimal form at current position.
GUI_DispHexAt()	Display value in hexadecimal form at specified position.
Version of emWin	
GUI_GetVersionString()	Return the current version of emWin.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

8.2 Displaying decimal values

GUI_DispDec()

Description

Displays a value in decimal form with a specified number of characters at the current text position, in the current window using the current font.

Prototype

```
void GUI_DispDec(I32 v, U8 Len);
```

Parameter	Description
v	Value to display. Minimum -2147483648 (= -2^31). Maximum 2147483647 (= 2^31 -1).
Len	No. of digits to display (max. 10).

Additional information

Leading zeros are not suppressed (are shown as 0).
If the value is negative, a minus sign is shown.

Example

```
// Display time as minutes and seconds
  GUI_DispString("Min:");
  GUI_DispDec(Min,2);
  GUI_DispString(" Sec:");
  GUI_DispDec(Sec,2);
```

Related topics

GUI_DispSDec(), GUI_DispDecAt(), GUI_DispDecMin(), GUI_DispDecSpace()

GUI_DispDecAt()

Description

Displays a value in decimal form with a specified number of characters at a specified position, in the current window using the current font.

Prototype

```
void GUI_DispDecAt(I32 v, I16P x, I16P y, U8 Len);
```

Parameter	Description
v	Value to display. Minimum -2147483648 (= -2^31). Maximum 2147483647 (= 2^31 -1).
x	X-position to write to in pixels of the client window.
y	Y-position to write to in pixels of the client window.
Len	No. of digits to display (max. 10).

Additional information

Leading zeros are not suppressed.
If the value is negative, a minus sign is shown.

Example

```
// Update seconds in upper right corner
GUI_DispDecAT(Sec, 200, 0, 2);
```

Related topics

GUI_DispDec(), GUI_DispSDec(), GUI_DispDecMin(), GUI_DispDecSpace()

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_DispDecMin()

Description

Displays a value in decimal form at the current text position in the current window using the current font. The length of the value does not require to be specified. The minimum length will automatically be used.

Prototype

```
void GUI_DispDecMin(I32 v);
```

Parameter	Description
v	Value to display. Minimum: -2147483648 (= -2^31); maximum 2147483647 (= 2^31 -1).

Additional information

The maximum number of displayed digits is 10. This function should not be used if values have to be aligned but differ in the number of digits. Try one of the functions which require specification of the number of digits to use in this case.

Example

```
// Show result
GUI_DispString("The result is :");
GUI_DispDecMin(Result);
```

Related topics

`GUI_DispDec(), GUI_DispDecAt(), GUI_DispSDec(), GUI_DispDecSpace()`

GUI_DispDecShift()

Description

Displays a `long` value in decimal form with a specified number of characters and with decimal point at the current text position, in the current window using the current font.

Prototype

```
void GUI_DispDecShift(I32 v, U8 Len, U8 Shift);
```

Parameter	Description
v	Value to display. Minimum: -2147483648 (= -2^31); maximum: 2147483647 (= 2^31 -1).
Len	No. of digits to display (max. 10).
Shift	No. of digits to show to right of decimal point.

Additional information

Watch the maximum number of 9 characters (including sign and decimal point).

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_DispDecSpace()

Description

Displays a value in decimal form at the current text position in the current window using the current font. Leading zeros are suppressed (replaced by spaces).

Prototype

```
void DispDecSpace(I32 v, U8 MaxDigits);
```

Parameter	Description
v	Value to display. Minimum: -2147483648 (= -2^31); maximum: 2147483647 (= 2^31 -1).
MaxDigits	No. of digits to display, including leading spaces. Maximum no. of digits displayed is 10 (excluding leading spaces).

Additional information

If values have to be aligned but differ in the number of digits, this function is a good choice.

Example

```
// Show result
GUI_DispString("The result is :");
GUI_DispDecSpace(Result, 200);
```

Related topics

GUI_DispDec(), GUI_DispDecAt(), GUI_DispSDec(), GUI_DispDecMin()

GUI_DispSDec()

Description

Displays a value in decimal form (with sign) with a specified number of characters at the current text position, in the current window using the current font.

Prototype

```
void GUI_DispSDec(I32 v, U8 Len);
```

Parameter	Description
v	Value to display. Minimum: -2147483648 (= -2^31); maximum: 2147483647 (= 2^31 -1).
Len	No. of digits to display (max. 10).

Additional information

Leading zeros are not suppressed.
This function is similar to GUI_DispDec, but a sign is always shown in front of the value, even if the value is positive.

Related topics

GUI_DispDec(), GUI_DispDecAt(), GUI_DispDecMin(), GUI_DispDecSpace()

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_DispSDecShift()

Description

Displays a `long` value in decimal form (with sign) with a specified number of characters and with decimal point at the current text position, in the current window using the current font.

Prototype

```
void GUI_DispSDecShift(I32 v, U8 Len, U8 Shift);
```

Parameter	Description
v	Value to display. Minimum: -2147483648 (= -2^31); maximum: 2147483647 (= 2^31 -1).
Len	No. of digits to display (max. 10).
Shift	No. of digits to show to right of decimal point.

Additional information

A sign is always shown in front of the value.
Watch the maximum number of 9 characters (including sign and decimal point).

Example

```
void DemoDec(void) {
  long l = 12345;
  GUI_Clear();
  GUI_SetFont(&GUI_Font8x8);
  GUI_DispStringAt("GUI_DispDecShift:\n",0,0);
  GUI_DispSDecShift(l, 7, 3);
  GUI_SetFont(&GUI_Font6x8);
  GUI_DispStringAt("Press any key",0,GUI_VYSIZE-8);
  WaitKey();
}
```

Screen shot of above example



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

8.3 Displaying floating point values

GUI_DispFloat()

Description

Displays a floating point value with a specified number of characters at the current text position in the current window using the current font.

Prototype

```
void GUI_DispFloat(float v, char Len);
```

Parameter	Description
v	Value to display. Minimum 1.2 E-38; maximum 3.4 E38.
Len	No. of digits to display (max. 10).

Additional information

Leading zeros are suppressed. The decimal point counts as one character.
If the value is negative, a minus sign is shown.

Example

```
/* Shows all features for displaying floating point values */
void DemoFloat(void) {
  float f = 123.45678;
  GUI_Clear();
  GUI_SetFont(&GUI_Font8x8);
  GUI_DispStringAt("GUI_DispFloat:\n",0,0);
  GUI_DispFloat (f,9);
  GUI_GotoX(100);
  GUI_DispFloat (-f,9);
  GUI_DispStringAt("GUI_DispFloatFix:\n",0,20);
  GUI_DispFloatFix (f,9,2);
  GUI_GotoX(100);
  GUI_DispFloatFix (-f,9,2);
  GUI_DispStringAt("GUI_DispSFloatFix:\n",0,40);
  GUI_DispSFloatFix (f,9,2);
  GUI_GotoX(100);
  GUI_DispSFloatFix (-f,9,2);
  GUI_DispStringAt("GUI_DispFloatMin:\n",0,60);
  GUI_DispFloatMin (f,3);
  GUI_GotoX(100);
  GUI_DispFloatMin (-f,3);
  GUI_DispStringAt("GUI_DispSFloatMin:\n",0,80);
  GUI_DispSFloatMin (f,3);
  GUI_GotoX(100);
  GUI_DispSFloatMin (-f,3);
  GUI_SetFont(&GUI_Font6x8);
  GUI_DispStringAt("Press any key",0,GUI_VYSIZE-8);
  WaitKey();
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Screen shot of above example



GUI_DispFloatFix()

Description

Displays a floating-point value with specified number of total characters and a specified number of characters to the right of the decimal point, at the current text position in the current window using the current font.

Prototype

```
void GUI_DispFloatFix (float v, char Len, char Decs);
```

Parameter	Description
v	Value to display. Minimum 1.2 E-38; maximum 3.4 E38.
Len	No. of digits to display (max. 10).
Decs	No. of digits to show to right of decimal point.

Additional information

Leading zeros are not suppressed.
If the value is negative, a minus sign is shown.

GUI_DispFloatMin()

Description

Displays a floating-point value with a minimum number of decimals to the right of the decimal point, at the current text position in the current window using the current font.

Prototype

```
void GUI_DispFloatMin(float f, char Fract);
```

Parameter	Description
v	Value to display. Minimum 1.2 E-38; maximum 3.4 E38.
Fract	Minimum no. of characters to display.

Additional information

Leading zeros are suppressed.
If the value is negative, a minus sign is shown.
The length need not be specified; the minimum length will automatically be used. If values have to be aligned but differ in the number of digits, this function is not a good choice. Try one of the functions that specify the number of digits.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_DispSFloatFix()

Description

Displays a floating-point value (with sign) with a specified number of total characters and a specified number of characters to the right of the decimal point, in the current window using the current font.

Prototype

```
void GUI_DispSFloatFix(float v, char Len, char Decs);
```

Parameter	Description
v	Value to display. Minimum 1.2 E-38; maximum 3.4 E38.
Len	No. of digits to display (max. 10).
Decs	No. of digits to show to right of decimal point.

Additional information

Leading zeros are not suppressed.
A sign is always shown in front of the value.

GUI_DispSFloatMin()

Description

Displays a floating-point value (with sign) with a minimum number of decimals to the right of the decimal point, at the current text position in the current window using the current font.

Prototype

```
void GUI_DispSFloatMin(float f, char Fract);
```

Parameter	Description
v	Value to display. Minimum 1.2 E-38; maximum 3.4 E38.
Fract	Minimum no. of digits to display.

Additional information

Leading zeros are suppressed.
A sign is always shown in front of the value.
The length need not be specified; the minimum length will automatically be used. If values have to be aligned but differ in the number of digits, this function is not a good choice. Try one of the functions that specify the number of digits.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

8.4 Displaying binary values

GUI_DispBin()

Description

Displays a value in binary form at the current text position in the current window using the current font.

Prototype

```
void GUI_DispBin(U32 v, U8 Len);
```

Parameter	Description
v	Value to display, 32-bit.
Len	No. of digits to display (including leading zeros).

Additional information

As with decimal and hexadecimal values, the least significant bit is rightmost.

Example

```
//
// Show binary value 7, result: 000111
//
  U32 Input = 0x7;
  GUI_DispBin(Input, 6);
```

Related topics

GUI_DispBinAt()

GUI_DispBinAt()

Description

Displays a value in binary form at a specified position in the current window using the current font.

Prototype

```
void DispBinAt(U32  v, I16P y, I16P x, U8 Len);
```

Parameter	Description
v	Value to display, 16-bit.
x	X-position to write to in pixels of the client window.
y	Y-position to write to in pixels of the client window.
Len	No. of digits to display (including leading zeroes).

Additional information

As with decimal and hexadecimal values, the least significant bit is rightmost.

Example

```
//
// Show binary input status
//
  GUI_DispBinAt(Input, 0,0, 8);
```

Related topics

GUI_DispBin(), GUI_DispHex()

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

8.5 Displaying hexadecimal values

GUI_DispHex()

Description

Displays a value in hexadecimal form at the current text position in the current window using the current font.

Prototype

```
void GUI_DispHex(U32 v, U8 Len);
```

Parameter	Description
v	Value to display, 16-bit.
Len	No. of digits to display.

Additional information

As with decimal and binary values, the least significant bit is rightmost.

Example

```
/* Show value of AD-converter */

GUI_DispHex(Input, 4);
```

Related topics

GUI_DispDec(), GUI_DispBin(), GUI_DispHexAt()

GUI_DispHexAt()

Description

Displays a value in hexadecimal form at a specified position in the current window using the current font.

Prototype

```
void GUI_DispHexAt(U32 v, I16P x, I16P y, U8 Len);
```

Parameter	Description
v	Value to display, 16-bit.
x	X-position to write to in pixels of the client window.
y	Y-position to write to in pixels of the client window.
Len	No. of digits to display.

Additional information

As with decimal and binary values, the least significant bit is rightmost.

Example

```
//
// Show value of AD-converter at specified position
//
GUI_DispHexAt(Input, 0, 0, 4);
```

Related topics

GUI_DispDec(), GUI_DispBin(), GUI_DispHex()

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

8.6 Version of emWin

GUI_GetVersionString()

Description

Returns a string containing the current version of emWin.

Prototype

```
const char * GUI_GetVersionString(void);
```

Example

```
//
// Displays the current version at the current cursor position
//
GUI_DispString(GUI_GetVersionString());
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 9

2-D Graphic Library

emWin contains a complete 2-D graphic library which should be sufficient for most applications. The routines supplied with emWin can be used with or without clipping (refer to the chapter "The Window Manager (WM)" on page 289) and are based on fast and efficient algorithms. Currently, only the `GUI_DrawArc()` function requires floating-point calculations.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

9.1 Graphic API

The table below lists the available graphic-related routines in alphabetical order within their respective categories. Detailed descriptions can be found in the sections that follow.

Routine	Description
GUI_GetPixelIndex()	Returns the color index of a given position.
Drawing modes	
GUI_GetDrawMode()	Returns the current drawing mode.
GUI_SetDrawMode()	Sets the drawing mode.
Pen size	
GUI_GetPenSize()	Returns the current pen size in pixels.
GUI_SetPenSize()	Sets the pen size in pixels.
Query current client rectangle	
GUI_GetClientRect()	Returns the current available drawing area.
Basic drawing routines	
GUI_ClearRect()	Fills a rectangular area with the background color.
GUI_CopyRect()	Copies a rectangle area on the display
GUI_DrawGradientH()	Draws a rectangle filled with a horizontal color gradient.
GUI_DrawGradientV()	Draws a rectangle filled with a vertical color gradient.
GUI_DrawGradientRoundedH()	Draws a rectangle with rounded corners filled with a horizontal color gradient.
GUI_DrawGradientRoundedV()	Draws a rectangle with rounded corners filled with a vertical color gradient.
GUI_DrawPixel()	Draws a single pixel.
GUI_DrawPoint()	Draws a point.
GUI_DrawRect()	Draws a rectangle.
GUI_DrawRectEx()	Draws a rectangle.
GUI_DrawRoundedFrame()	Draws a frame with rounded corners.
GUI_DrawRoundedRect()	Draws a rectangle with rounded corners.
GUI_FillRect()	Draws a filled rectangle.
GUI_FillRectEx()	Draws a filled rectangle.
GUI_FillRoundedRect()	Draws a filled rectangle with rounded corners.
GUI_InvertRect()	Invert a rectangular area.
Alpha blending	
GUI_EnableAlpha()	Enables/disables automatic alpha blending
GUI_RestoreUserAlpha()	Restores the previous state of user alpha blending
GUI_SetAlpha()	Sets the current alpha blending value. (Obsolete)
GUI_SetUserAlpha()	Sets an additional value which is used to calculate the actual alpha blending value to be used.
Drawing bitmaps	
GUI_DrawBitmap()	Draws a bitmap.
GUI_DrawBitmapEx()	Draws a scaled bitmap.
GUI_DrawBitmapHWAlpha()	Draws a bitmap with alpha blending information on a system with hardware alpha blending support.
GUI_DrawBitmapMag()	Draws a magnified bitmap.
Drawing streamed bitmaps	
GUI_CreateBitmapFromStream()	Creates a bitmap from a given stream of any type.
GUI_CreateBitmapFromStreamIDX()	Creates a bitmap from an index based bitmap stream.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
GUI_CreateBitmapFromStreamRLE4()	Creates a bitmap from an RLE4 bitmap stream.
GUI_CreateBitmapFromStreamRLE8()	Creates a bitmap from an RLE8 bitmap stream.
GUI_CreateBitmapFromStream565()	Creates a bitmap from a 16 bit bitmap stream.
GUI_CreateBitmapFromStreamM565()	Creates a bitmap from a 16 bit bitmap stream with red and blue swapped.
GUI_CreateBitmapFromStream555()	Creates a bitmap from a 15 bit bitmap stream.
GUI_CreateBitmapFromStreamM555()	Creates a bitmap from a 15 bit bitmap stream with red and blue swapped.
GUI_CreateBitmapFromStreamRLE16()	Creates a bitmap from an RLE16 bitmap stream.
GUI_CreateBitmapFromStreamRLEM16()	Creates a bitmap from an RLE16 bitmap stream with red and blue swapped.
GUI_CreateBitmapFromStream24()	Creates a bitmap from a 24 bit bitmap stream.
GUI_CreateBitmapFromStreamAlpha()	Creates a bitmap from a 32 bit bitmap stream.
GUI_CreateBitmapFromStreamRLEAlpha()	Creates a bitmap from an RLE compressed 8 bit alpha bitmap stream.
GUI_CreateBitmapFromStreamRLE32()	Creates a bitmap from an RLE32 bitmap stream.
GUI_DrawStreamedBitmap()	Draws a bitmap stream.
GUI_DrawStreamedBitmapEx()	Draws a bitmap stream without loading the complete image.
GUI_GetStreamedBitmapInfo()	Returns information about the given stream.
GUI_GetStreamedBitmapInfoEx()	Returns information about the given stream which can be located on any kind of media.
GUI_SetStreamedBitmapHook()	Sets a hook function for GUI_DrawStreamedBitmapEx().
Drawing lines	
GUI_DrawHLine()	Draws a horizontal line.
GUI_DrawLine()	Draws a line from a specified start point to a specified end point (absolute coordinates).
GUI_DrawLineRel()	Draws a line from the current position to an endpoint specified by X- and Y-distances (relative coordinates).
GUI_DrawLineTo()	Draws a line from the current position to a specified endpoint.
GUI_DrawPolyLine()	Draws a polyline.
GUI_DrawVLine()	Draws a vertical line.
GUI_GetLineStyle()	Returns the current line style.
GUI_MoveRel()	Moves the line pointer relative to its current position.
GUI_MoveTo()	Moves the line pointer to the given position.
GUI_SetLineStyle()	Sets the current line style.
Drawing polygons	
GUI_DrawPolygon()	Draws the outline of a polygon.
GUI_EnlargePolygon()	Enlarges a polygon.
GUI_FillPolygon()	Draws a filled polygon.
GUI_MagnifyPolygon()	Magnifies a polygon.
GUI_RotatePolygon()	Rotates a polygon by a specified angle.
Drawing circles	
GUI_DrawCircle()	Draws the outline of a circle.
GUI_FillCircle()	Draws a filled circle.
Drawing ellipses	
GUI_DrawEllipse()	Draws the outline of an ellipse.
GUI_FillEllipse()	Draws a filled ellipse.
Drawing arcs	
GUI_DrawArc()	Draws an arc.
Drawing a graph	
GUI_DrawGraph()	Draws a graph.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
Drawing a pie chart	
GUI_DrawPie()	Draws a circle sector.
Saving and restoring the GUI-context	
GUI_RestoreContext()	Restores the GUI-context.
GUI_SaveContext()	Saves the GUI-context.
Clipping	
GUI_SetClipRect()	Sets the rectangle used for clipping.

GUI_GetPixelIndex()

Description

Returns the color index of a given position.

Prototype

```
unsigned GUI_GetPixelIndex(int x, int y);
```

Parameter	Description
x	absolute x-position of the pixel
y	absolute y-position of the pixel

9.2 Drawing modes

emWin can draw in NORMAL mode or in XOR mode. The default is NORMAL mode, in which the content of the display is overdrawn by the graphic. In XOR mode, the content of the display is inverted when it is overdrawn.

Restrictions associated with GUI_DRAWMODE_XOR

- XOR mode is only useful when using two displayed colors inside the active window or screen.
- Some drawing functions of emWin do not work precisely with this drawing mode. Generally, this mode works only with a pen size of one pixel. That means before using functions like `GUI_DrawLine()`, `GUI_DrawCircle()`, `GUI_DrawRect()` and so on, you must make sure that the pen size is set to 1 when you are working in XOR mode.
- When drawing bitmaps with a color depth greater than 1 bit per pixel (bpp) this drawing mode takes no effect.
- When using drawing functions such as `GUI_DrawPolyLine()` or multiple calls of `GUI_DrawLineTo()`, the fulcrums are inverted twice. The result is that these pixels remain in the background color.

GUI_GetDrawMode()

Description

Returns the current drawing mode.

Prototype

```
GUI_DRAWMODE GUI_GetDrawMode(void);
```

Return value

The currently selected drawing mode.

Additional information

For details about drawing modes, refer to the function "GUI_GetDrawMode()" on page 100.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_SetDrawMode()

Description

Selects the specified drawing mode.

Prototype

```
GUI_DRAWMODE GUI_SetDrawMode(GUI_DRAWMODE mode);
```

Parameter	Description
mode	Drawing mode to set. May be a value returned by any routine which sets the drawing mode or one of the constants below.

Permitted values for parameter mode	
GUI_DM_NORMAL	Default: Draws points, lines, areas, bitmaps.
GUI_DM_XOR	Inverts points, lines, areas when overwriting the color of another object on the display.

Return value

The selected drawing mode.

Additional information

In addition to setting the drawing mode, this routine may also be used to restore a drawing mode that has previously been changed.
If using colors, an inverted pixel is calculated as follows:
New pixel color = number of colors - actual pixel color - 1.

Example

```
//
// Showing two circles, the second one XOR-combined with the first:
//
GUI_Clear();
GUI_SetDrawMode(GUI_DRAWMODE_NORMAL);
GUI_FillCircle(120, 64, 40);
GUI_SetDrawMode(GUI_DRAWMODE_XOR);
GUI_FillCircle(140, 84, 40);
```

Screen shot of above example



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

9.3 Query current client rectangle

GUI_GetClientRect()

Description

The current client rectangle depends on using the window manager or not. If using the window manager the function uses WM_GetClientRect to retrieve the client rectangle. If not using the window manager the client rectangle corresponds to the complete LCD display.

Prototype

```
void GUI_GetClientRect(GUI_RECT * pRect);
```

Parameter	Description
pRect	Pointer to GUI_RECT-structure to store result.

9.4 Pen size

The pen size determines the thickness of the following vector drawing operations:

- GUI_DrawPoint()
- GUI_DrawLine()
- GUI_DrawLineRel()
- GUI_DrawLineTo()
- GUI_DrawPolyLine()
- GUI_DrawPolygon()
- GUI_DrawEllipse()
- GUI_DrawArc()

Please note that it is not possible to combine line styles with a pen size > 1.

GUI_GetPenSize()

Description

Returns the current pen size.

Prototype

```
U8 GUI_GetPenSize(void);
```

GUI_SetPenSize()

Description

Sets the pen size to be used for further drawing operations.

Prototype

```
U8 GUI_SetPenSize(U8 PenSize);
```

Parameter	Description
PenSize	Pen size in pixels to be used.

Return value

Previous pen size.

Add information

The pen size should be >= 1.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

9.5 Basic drawing routines

The basic drawing routines allow drawing of individual points, horizontal and vertical lines and shapes at any position on the display. Any available drawing mode can be used. Since these routines are called frequently in most applications, they are optimized for speed as much as possible. For example, the horizontal and vertical line functions do not require the use of single-dot routines.

GUI_ClearRect()

Description

Clears a rectangular area at a specified position in the current window by filling it with the background color.

Prototype

```
void GUI_ClearRect(int x0, int y0, int x1, int y1);
```

Parameter	Description
x0	Upper left X-position.
y0	Upper left Y-position.
x1	Lower right X-position.
y1	Lower right Y-position.

Related topics

GUI_InvertRect(), GUI_FillRect()

GUI_CopyRect()

Description

Copies the content of the given rectangular area to the specified position.

Prototype

```
void GUI_CopyRect(int x0, int y0, int x1, int y1, int xSize, int ySize);
```

Parameter	Description
x0	Upper left X-position of the source rectangle.
y0	Upper left Y-position of the source rectangle.
x1	Upper left X-position of the destination rectangle.
y1	Upper left Y-position of the destination rectangle.
xSize	X-size of the rectangle.
ySize	Y-size of the rectangle.

Additional information

The source and destination rectangle may overlap each other.

GUI_DrawGradientH()

Description

Draws a rectangle filled with a horizontal color gradient.

Prototype

```
void GUI_DrawGradientH(int x0, int y0, int x1, int y1,
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
GUI_COLOR Color0, GUI_COLOR Color1);
```

Parameter	Description
x0	Upper left X-position.
y0	Upper left Y-position.
x1	Lower right X-position.
y1	Lower right Y-position.
Color0	Color to be drawn on the leftmost side of the rectangle.
Color1	Color to be drawn on the rightmost side of the rectangle.

Example

```
GUI_DrawGradientH(0, 0, 99, 99, 0x0000FF, 0x00FFFF);
```

Screenshot of above example



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_DrawGradientV()

Description

Draws a rectangle filled with a vertical color gradient.

Prototype

```
void GUI_DrawGradientV(int x0, int y0, int x1, int y1,
                       GUI_COLOR Color0, GUI_COLOR Color1);
```

Parameter	Description
x0	Upper left X-position.
y0	Upper left Y-position.
x1	Lower right X-position.
y1	Lower right Y-position.
Color0	Color to be drawn on the topmost side of the rectangle.
Color1	Color to be drawn on the bottommost side of the rectangle.

Example

```
GUI_DrawGradientV(0, 0, 99, 99, 0x0000FF, 0x00FFFF);
```

Screenshot of above example



GUI_DrawGradientRoundedH()

Description

Draws a rectangle with rounded corners filled with a horizontal color gradient.

Prototype

```
void GUI_DrawGradientRoundedH(int x0, int y0, int x1, int y1, int rd
                              GUI_COLOR Color0, GUI_COLOR Color1);
```

Parameter	Description
x0	Upper left X-position.
y0	Upper left Y-position.
x1	Lower right X-position.
y1	Lower right Y-position.
rd	
Color0	Color to be drawn on the leftmost side of the rectangle.
Color1	Color to be drawn on the rightmost side of the rectangle.

Example

```
GUI_DrawGradientRoundedH(0, 0,  99, 99, 25, 0x0000FF, 0x00FFFF);
```

Screenshot of above example



© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_DrawGradientRoundedV()

Description

Draws a rectangle with rounded corners filled with a vertical color gradient.

Prototype

```
void GUI_DrawGradientRoundedV(int x0,   int y0, int x1,   int y1,
                              GUI_COLOR Color0, GUI_COLOR Color1);
```

Parameter	Description
x0	Upper left X-position.
y0	Upper left Y-position.
x1	Lower right X-position.
y1	Lower right Y-position.
Color0	Color to be drawn on the leftmost side of the rectangle.
Color1	Color to be drawn on the rightmost side of the rectangle.

Example

```
GUI_DrawGradientRoundedV(0, 0, 99, 99, 25, 0x0000FF, 0x00FFFF);
```

Screenshot of above example



GUI_DrawPixel()

Description

Draws a pixel at a specified position in the current window.

Prototype

```
void GUI_DrawPixel(int x, int y);
```

Parameter	Description
x	X-position of pixel.
y	Y-position of pixel.

Related topics

GUI_DrawPoint()

GUI_DrawPoint()

Description

Draws a point with the current pen size at a specified position in the current window.

Prototype

```
void GUI_DrawPoint(int x, int y);
```

Parameter	Description
x	X-position of point.
y	Y-position of point.

Related topics

GUI_DrawPixel()

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_DrawRect()

Description

Draws a rectangle at a specified position in the current window.

Prototype

```
void GUI_DrawRect(int x0, int y0, int x1, int y1);
```

Parameter	Description
x0	Upper left X-position.
y0	Upper left Y-position.
x1	Lower right X-position.
y1	Lower right Y-position.

GUI_DrawRectEx()

Description

Draws a rectangle at a specified position in the current window.

Prototype

```
void GUI_DrawRectEx(const GUI_RECT * pRect);
```

Parameter	Description
pRect	Pointer to a GUI_RECT-structure containing the coordinates of the rectangle

GUI_DrawRoundedFrame()

Description

Draws a frame at a specified position in the current window with rounded corners an a specified width.

Prototype

```
void GUI_DrawRoundedFrame(int x0, int y0, int x1, int y1, int r, int w);
```

Parameter	Description
x0	Upper left X-position.
y0	Upper left Y-position.
x1	Lower right X-position.
y1	Lower right Y-position.
r	Radius to be used for the rounded corners.
w	Width in which the frame is drawn.

GUI_DrawRoundedRect()

Description

Draws a rectangle at a specified position in the current window with rounded corners.

Prototype

```
void GUI_DrawRoundedRect(int x0, int y0, int x1, int y1, int r);
```

Parameter	Description
x0	Upper left X-position.
y0	Upper left Y-position.
x1	Lower right X-position.
y1	Lower right Y-position.
r	Radius to be used for the rounded corners.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_FillRect()

Description

Draws a filled rectangular area at a specified position in the current window.

Prototype

```
void GUI_FillRect(int x0, int y0, int x1, int y1);
```

Parameter	Description
x0	Upper left X-position.
y0	Upper left Y-position.
x1	Lower right X-position.
y1	Lower right Y-position.

Additional information

Uses the current drawing mode, which normally means all pixels inside the rectangle are set.

Related topics

GUI_InvertRect(), GUI_ClearRect()

GUI_FillRectEx()

Description

Draws a filled rectangle at a specified position in the current window.

Prototype

```
void GUI_FillRectEx(const GUI_RECT * pRect);
```

Parameter	Description
pRect	Pointer to a GUI_RECT-structure containing the coordinates of the rectangle

GUI_FillRoundedRect()

Description

Draws a filled rectangle at a specified position in the current window with rounded corners.

Prototype

```
void GUI_FillRoundedRect(int x0, int y0, int x1, int y1, int r);
```

Parameter	Description
x0	Upper left X-position.
y0	Upper left Y-position.
x1	Lower right X-position.
y1	Lower right Y-position.
r	Radius to be used for the rounded corners.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_InvertRect()

Description

Draws an inverted rectangular area at a specified position in the current window.

Prototype

```
void GUI_InvertRect(int x0, int y0, int x1, int y1);
```

Parameter	Description
x0	Upper left X-position.
y0	Upper left Y-position.
x1	Lower right X-position.
y1	Lower right Y-position.

Related topics

GUI_FillRect(), GUI_ClearRect()

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

9.6 Alpha blending

Alpha blending is a method of combining a foreground image with the background to create the appearance of semi transparency. An alpha value determines how much of a pixel should be visible and how much of the background should show through.

Color information

emWin internally works with 32 bits of color information:

- Bits 0-7: Red
- Bits 8-15: Green
- Bits 16-23: Blue
- Bits 24-31: Alpha information

An alpha value of 0 means opaque and a value of 255 means completely transparent.

How it works

The alpha blending is done completely automatically. The only thing which needs to be done is enabling alpha blending with `GUI_EnableAlpha()`. From there on the upper 8 bits of the color information are managed as alpha values.

Example

The following small example shows how it works:

```
GUI_EnableAlpha(1);
GUI_SetBkColor(GUI_WHITE);
GUI_Clear();
GUI_SetColor(GUI_BLACK);
GUI_DispStringHCenterAt("Alphablending", 45, 41);
GUI_SetColor((0x40uL << 24) | GUI_RED);
GUI_FillRect(0, 0, 49, 49);
GUI_SetColor((0x80uL << 24) | GUI_GREEN);
GUI_FillRect(20, 20, 69, 69);
GUI_SetColor((0xC0uL << 24) | GUI_BLUE);
GUI_FillRect(40, 40, 89, 89);
```



Older versions

In older versions it was required to use the function `GUI_SetAlpha()` for blending the foreground with the current background color information. This also works but is no longer required.

GUI_EnableAlpha()

Description

Enables or disables automatic alpha blending.

Prototype

```
unsigned GUI_EnableAlpha(unsigned OnOff);
```

Parameter	Description
`OnOff`	1 enables automatic alpha blending, 0 disables it.

Return value

Old state.

Additional information

After enabling automatic alpha blending the color information of each object automatically determines its transparency.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_SetAlpha()

(Obsolete)

Description

Enables software alpha blending for all subsequent drawing operations.

Prototype

```
unsigned GUI_SetAlpha(U8 Value);
```

Parameter	Description
Alpha	Alpha value to be used for all subsequent drawing operations. Default is 0 which means no alpha blending.

Return value

Previous value used for alpha blending.

Additional information

The function sets the alpha value to be used for all subsequent drawing operations. A value of 0 for parameter `Alpha` means opaque (alpha blending disabled) and a value of 255 means completely transparent (invisible).
Note that software alpha blending increases the CPU load. Further it is strongly recommended to set the alpha value back to the default value after finishing the drawing operations.

Example

```
extern const GUI_BITMAP _LogoBitmap;

GUI_SetColor(GUI_BLUE);
GUI_FillCircle(100, 50, 49);
GUI_SetColor(GUI_YELLOW);
for (i = 0; i < 100; i++) {
  U8 Alpha;
  Alpha = (i * 255 / 100);
  GUI_SetAlpha(Alpha);
  GUI_DrawHLine(i, 100 - i, 100 + i);
}
GUI_SetAlpha(0x80);
GUI_DrawBitmap(&_LogoBitmap, 30, 30);
GUI_SetColor(GUI_MAGENTA);
GUI_SetFont(&GUI_Font24B_ASCII);
GUI_SetTextMode(GUI_TM_TRANS);
GUI_DispStringHCenterAt("Alphablending", 100, 3);
GUI_SetAlpha(0);                          /* Set back to default (opaque) */
```

Screen shot of above example



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_SetUserAlpha()

Description

Sets an additional value which is used to calculate the actual alpha value to be used. The actual alpha value is calculated as follows:

Alpha = AlphaFromObject + ((255 - AlphaFromObject) * UserAlpha) / 255

Prototype

```
U32 GUI_SetUserAlpha(GUI_ALPHA_STATE * pAlphaState, U32 UserAlpha);
```

Parameter	Description
pAlphaState	Pointer to an GUI_ALPHA_STATE structure to be used to save the current state.
UserAlpha	Value to be used.

Return value

Previous user alpha value.

Additional information

The following function `GUI_RestoreUserAlpha()` can be used to restore the previous state of the function.

GUI_RestoreUserAlpha()

Description

Restores the previous state of user alpha blending. saved in the structure pointed by.

Prototype

```
U32 GUI_RestoreUserAlpha(GUI_ALPHA_STATE * pAlphaState);
```

Parameter	Description
pAlphaState	Pointer to an GUI_ALPHA_STATE structure containing information of the previous state to be restored.

Return value

Current user alpha value.

Example

```
{
  GUI_ALPHA_STATE AlphaState;

  GUI_EnableAlpha(1);
  GUI_SetBkColor(GUI_WHITE);
  GUI_Clear();
  GUI_SetColor(GUI_BLACK);
  GUI_DispStringHCenterAt("Alphablending", 45, 41);
  GUI_SetUserAlpha(&AlphaState, 0xC0);
  GUI_SetColor(GUI_RED);
  GUI_FillRect(0, 0, 49, 49);
  GUI_SetColor(GUI_GREEN);
  GUI_FillRect(20, 20, 69, 69);
  GUI_SetColor(GUI_BLUE);
  GUI_FillRect(40, 40, 89, 89);
  GUI_RestoreUserAlpha(&AlphaState);
}
```



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

9.7 Drawing bitmaps

Generally emWin is able to display any bitmap image at any display position. On 16 bit CPUs (sizeof(int) == 2), the size of one bitmap per default is limited to 64 kb. If larger bitmaps should be displayed with a 16 bit CPU, refer to the chapter "Configuration" on page 905.

GUI_DrawBitmap()

Description

Draws a bitmap image at a specified position in the current window.

Prototype

```
void GUI_DrawBitmap(const GUI_BITMAP * pBM, int x, int y);
```

Parameter	Description
pBM	Pointer to the bitmap to display.
x	X-position of the upper left corner of the bitmap in the display.
y	Y-position of the upper left corner of the bitmap in the display.

Additional information

The picture data is interpreted as bit stream starting with the most significant bit (msb) of the first byte.
A new line always starts at an even byte address, as the nth line of the bitmap starts at offset n*BytesPerLine. The bitmap can be shown at any point in the client area.
Usually, the bitmap converter is used to generate bitmaps. For more information, refer to the chapter "Bitmap Converter" on page 213.

Example

```
extern const GUI_BITMAP bmSeggerLogoBlue;  /* declare external Bitmap */

void main() {
  GUI_Init();
  GUI_DrawBitmap(&bmSeggerLogoBlue, 45, 20);
}
```

Screen shot of above example



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_DrawBitmapEx()

Description

This routine makes it possible to scale and/or to mirror a bitmap on the display.

Prototype

```
void GUI_DrawBitmapEx(const GUI_BITMAP * pBitmap,
                      int x0,      int y0,
                      int xCenter, int yCenter,
                      int xMag,    int yMag);
```

Parameter	Description
pBM	Pointer to the bitmap to display.
x0	X-position of the anchor point in the display.
y0	Y-position of the anchor point in the display.
xCenter	X-position of the anchor point in the bitmap.
yCenter	Y-position of the anchor point in the bitmap.
xMag	Scale factor of X-direction.
yMag	Scale factor of Y-direction.

Additional information

A negative value of the xMag-parameter would mirror the bitmap in the X-axis and a negative value of the yMag-parameter would mirror the bitmap in the Y-axis. The unit of xMag- and yMag are thousandth. The position given by the parameter xCenter and yCenter specifies the pixel of the bitmap which should be displayed at the display at position x0/y0 independent of scaling or mirroring.
This function can not be used to draw RLE-compressed bitmaps.

GUI_DrawBitmapHWAlpha()

Description

Draws a bitmap with alpha information on a multi layer system with hardware alpha blending support.

Prototype

```
void GUI_DrawBitmapHWAlpha(const GUI_BITMAP GUI_UNI_PTR * pBM,
                           int x0, int y0);
```

Parameter	Description
pBM	Pointer to the bitmap to display.
x0	X-position of the upper left corner of the bitmap in the display.
y0	Y-position of the upper left corner of the bitmap in the display.

Additional information

In emWin logical colors are handled as 32 bit values. The lower 24 bits are used for the color information and the upper 8 bits are used to manage the alpha value. An alpha value of 0 means the image is opaque and a value of 0xFF means completely transparent (invisible).
On systems with hardware support for alpha blending the alpha values need to be written to the display controller which does the alpha blending.
Normally the alpha format of the hardware is not the same as the alpha definition in emWin described above. Mostly a value of 0 means fully transparent and higher values means the pixel becomes more visible.
Because of this in the most cases custom color conversion routines are required to translate a logical color to the required hardware format. The Sample folder contains the example ALPHA_DrawBitmapHWAlpha which shows how to consider the requirement of custom color conversion.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_DrawBitmapMag()

Description

This routine makes it possible to magnify a bitmap on the display.

Prototype

```
void GUI_DrawBitmapMag(const GUI_BITMAP * pBM,
                       int x0,   int y0,
                       int XMul, int YMul);
```

Parameter	Description
pBM	Pointer to the bitmap to display.
x0	X-position of the upper left corner of the bitmap in the display.
y0	Y-position of the upper left corner of the bitmap in the display.
XMul	Magnification factor of X-direction.
YMul	Magnification factor of Y-direction.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

9.8 Drawing streamed bitmaps

Contrary to bitmaps in C file format a streamed bitmap can be located anywhere. Bitmap streams can be used to create bitmaps. These bitmaps can be used in the same manner as bitmaps in C file format. Further emWin supports direct drawing of palette based bitmap streams without having the complete image in the addressable area (RAM or ROM).

GUI_CreateBitmapFromStream()

Description

The function creates a bitmap structure by passing any type of bitmap stream.

Prototype

```
int  GUI_CreateBitmapFromStream(GUI_BITMAP *     pBMP,
                                GUI_LOGPALETTE * pPAL,
                                const void *     p);
```

Parameter	Description
pBMP	Pointer to a GUI_BITMAP structure to be initialized by the function.
pPAL	Pointer to a GUI_LOGPALETTE structure to be initialized by the function.
p	Pointer to the data stream.

Return value

0 on success, 1 on error.

Additional information

This function should be used if the data stream can consist of several kinds of bitmap formats or unknown. Disadvantage of using this function is that it has a significant memory footprint. If memory usage (ROM) is a concern, it may be better to use the format specific functions below.

GUI_CreateBitmapFromStreamIDX(), GUI_CreateBitmapFromStreamRLE4(), GUI_CreateBitmapFromStreamRLE8(), GUI_CreateBitmapFromStream565(), GUI_CreateBitmapFromStreamM565(), GUI_CreateBitmapFromStream555(), GUI_CreateBitmapFromStreamM555(), GUI_CreateBitmapFromStreamRLE16(), GUI_CreateBitmapFromStreamRLEM16(), GUI_CreateBitmapFromStream24(), GUI_CreateBitmapFromStreamAlpha(), GUI_CreateBitmapFromStreamRLEAlpha(), GUI_CreateBitmapFromStreamRLE32()

Description

These functions create bitmap structures by passing bitmap streams of a known format.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
int  GUI_CreateBitmapFromStream<FORMAT>(GUI_BITMAP *     pBMP,
                                        GUI_LOGPALETTE * pPAL,
                                        const void *     p);
```

Parameter	Description
pBMP	Pointer to a GUI_BITMAP structure to be initialized by the function.
pPAL	Pointer to a GUI_LOGPALETTE structure to be initialized by the function.
p	Pointer to the data stream.

Supported data stream formats

The following table shows the supported data stream formats for each function:

Function	Supported stream format
GUI_CreateBitmapFromStreamIDX()	Streams of index based bitmaps.
GUI_CreateBitmapFromStreamRLE4()	Streams of RLE4 compressed bitmaps.
GUI_CreateBitmapFromStreamRLE8()	Streams of RLE8 compressed bitmaps.
GUI_CreateBitmapFromStream565()	Streams of high color bitmaps (565).
GUI_CreateBitmapFromStreamM565()	Streams of high color bitmaps (M565).
GUI_CreateBitmapFromStream555()	Streams of high color bitmaps (555).
GUI_CreateBitmapFromStreamM555()	Streams of high color bitmaps (M565).
GUI_CreateBitmapFromStreamRLE16()	Streams of RLE16 compressed bitmaps.
GUI_CreateBitmapFromStreamRLEM16()	Streams of RLE16 compressed bitmaps, red and blue swapped.
GUI_CreateBitmapFromStream24()	Streams of 24bpp bitmaps (true color).
GUI_CreateBitmapFromStreamAlpha()	Streams of 32bpp bitmaps (true color with alpha channel).
GUI_CreateBitmapFromStreamRLEAlpha()	Streams of RLE compressed 8bpp alpha bitmaps.
GUI_CreateBitmapFromStreamRLE32()	Streams of RLE32 compressed bitmaps (true color with alpha channel).

Return value

0 on success, 1 on error.

Additional information

These functions should be used if the data stream consists of a known format. This avoids linking of unused code and keeps the binary code small.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_DrawStreamedBitmap()

Description

Draws a bitmap from a data bitmap data stream.

Prototype

```
void GUI_DrawStreamedBitmap(const void * p, int x, int y);
```

Parameter	Description
p	Pointer to the data stream.
x	X-position of the upper left corner of the bitmap in the display.
y	Y-position of the upper left corner of the bitmap in the display.

Additional information

You can use the bitmap converter (see "Bitmap Converter" on page 213) to create bitmap data streams. The format of these streams is not the same as the format of a bmp file.

GUI_DrawStreamedBitmapEx()

Description

This function is used for drawing data streams if not enough RAM or ROM is available to keep the whole file within the addressable memory (RAM or ROM). The GUI library calls the function pointed by the parameter pfGetData to read the data. The GetData function needs to return the number of requested bytes. The maximum number of bytes requested by the GUI is the number of bytes needed for drawing one line of the image.

Prototype

```
int GUI_DrawStreamedBitmapEx(GUI_GET_DATA_FUNC * pfGetData,
                             const void        * p, int x, int y);
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.
x	X-position of the upper left corner of the bitmap in the display.
y	Y-position of the upper left corner of the bitmap in the display.

Return value

0 on success, 1 on error.

Additional information

Please also refer to the function GUI_SetStreamedBitmapHook().

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_GetStreamedBitmapInfo()

Description

Returns a structure with information about the given data stream.

Prototype

```
void GUI_GetStreamedBitmapInfo(const void *            p,
                               GUI_BITMAPSTREAM_INFO * pInfo);
```

Parameter	Description
p	Pointer to the data stream.
pInfo	Pointer to a GUI_BITMAPSTREAM_INFO structure to be filled by the function.

Elements of GUI_BITMAPSTREAM_INFO

Data type	Element	Description
int	XSize	Pixel size in X of the image.
int	YSize	Pixel size in Y of the image.
int	BitsPerPixel	Number of bits per pixel.
int	NumColors	Number of colors in case of an index based image.
int	HasTrans	In case of an index based image 1 if transparency exist, 0 if not.

GUI_GetStreamedBitmapInfoEx()

Description

Returns a structure with information about the given data stream which does not need to be located in the addressable ROM or RAM area of the CPU.

Prototype

```
int GUI_GetStreamedBitmapInfoEx(GUI_GET_DATA_FUNC *     pfGetData,
                                const void *            p,
                                GUI_BITMAPSTREAM_INFO * pInfo);
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.
pInfo	Pointer to a GUI_BITMAPSTREAM_INFO structure to be filled by the function.

Return value

0 on success, 1 on error.

Elements of GUI_BITMAPSTREAM_INFO

Please refer to GUI_GetStreamedBitmapInfo().

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_SetStreamedBitmapHook()

Description

Sets a hook function to be able to manipulate the palette of a streamed bitmap which is not located in the addressable area of the CPU. The hook function is called when executing GUI_DrawStreamedBitmapEx().

Prototype

```
void GUI_SetStreamedBitmapHook(
                              GUI_BITMAPSTREAM_CALLBACK pfStreamedBitmapHook);
```

Parameter	Description
pfStreamedBitmapHook	Hook function to be called by GUI_DrawStreamedBitmapEx().

Prototype of hook function

```
void * Hook(GUI_BITMAPSTREAM_PARAM * pParam);
```

Parameter	Description
pParam	Pointer to a GUI_BITMAPSTREAM_PARAM structure

Elements of GUI_BITMAPSTREAM_PARAM

Data type	Element	Description
int	Cmd	Command to be executed.
U32	v	Depends on the command to be executed.
void *	p	Depends on the command to be executed.

Supported values for parameter Cmd	
GUI_BITMAPSTREAM_GET_BUFFER	When receiving this command the application can spend a buffer for the palette of a bitmap stream. Parameters: p - Pointer to the buffer or NULL v - Requested buffer size
GUI_BITMAPSTREAM_RELEASE_BUFFER	If the application has spend a buffer for the palette here the buffer should be released. Parameters: p - Pointer to buffer to be released v - not used
GUI_BITMAPSTREAM_MODIFY_PALETTE	This command is send after loading the palette and before drawing the image to be able to modify the palette of the streamed image. Parameters: p - Pointer to palette data v - Number of colors in palette

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Example

```
static void * _cbStreamedBitmapHook(GUI_BITMAPSTREAM_PARAM * pParam) {
  void * p = NULL;
  int    i, NumColors;
  U32    Color;
  U32  * pColor;

  switch (pParam->Cmd) {
  case GUI_BITMAPSTREAM_GET_BUFFER:
    //
    // Allocate buffer for palette data
    //
    p = malloc(pParam->v);
    break;
  case GUI_BITMAPSTREAM_RELEASE_BUFFER:
    //
    // Release buffer
    //
    free(pParam->p);
    break;
  case GUI_BITMAPSTREAM_MODIFY_PALETTE:
    //
    // Do something with the palette...
    //
    NumColors = pParam->v;
    pColor    = (U32 *)pParam->p;
    Color     = *(pColor + pParam->v - 1);
    for (i = NumColors - 2; i >= 0; i--) {
      *(pColor + i + 1) = *(pColor + i);
    }
    *pColor = Color;
    break;
  }
  return p;
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

9.9 Drawing lines

The most frequently used drawing routines are those that draw a line from one point to another.

GUI_DrawHLine()

Description

Draws a horizontal line one pixel thick from a specified starting point to a specified endpoint in the current window.

Prototype

```
void GUI_DrawHLine(int y, int x0, int x1);
```

Parameter	Description
y	Y-position.
x0	X-starting position.
x1	X-end position.

Additional information

If x1 < x0, nothing will be displayed.
With most LCD controllers, this routine is executed very quickly because multiple pixels can be set at once and no calculations are needed. If it is clear that horizontal lines are to be drawn, this routine executes faster than the GUI_DrawLine() routine.

GUI_DrawLine()

Description

Draws a line from a specified starting point to a specified endpoint in the current window (absolute coordinates).

Prototype

```
void GUI_DrawLine(int x0, int y0, int x1, int y1);
```

Parameter	Description
x0	X-starting position.
y0	Y-starting position.
x1	X-end position.
y1	Y-end position.

Additional information

If part of the line is not visible because it is not in the current window or because part of the current window is not visible, this is due to clipping.

GUI_DrawLineRel()

Description

Draws a line from the current (X,Y) position to an endpoint specified by X-distance and Y-distance in the current window (relative coordinates).

Prototype

```
void GUI_DrawLineRel(int dx, int dy);
```

Parameter	Description
dx	Distance in X-direction to end of line to draw.
dy	Distance in Y-direction end of line to draw.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_DrawLineTo()

Description

Draws a line from the current (X,Y) position to an endpoint specified by X- and Y-coordinates in the current window.

Prototype

```
void GUI_DrawLineTo(int x, int y);
```

Parameter	Description
x	X-end position.
y	Y-end position.

GUI_DrawPolyLine()

Description

Connects a predefined list of points with lines in the current window.

Prototype

```
void GUI_DrawPolyLine(const GUI_POINT * pPoint, int NumPoints,
                      int x, int y);
```

Parameter	Description
pPoint	Pointer to the polyline to display.
NumPoints	Number of points specified in the list of points.
x	X-position of origin.
y	Y-position of origin.

Additional information

The starting point and endpoint of the polyline need not be identical.

GUI_DrawVLine()

Description

Draws a vertical line one pixel thick from a specified starting point to a specified end-point in the current window.

Prototype

```
void GUI_DrawVLine(int x, int y0, int y1);
```

Parameter	Description
x	X-position.
y0	Y-starting position.
y1	Y-end position.

Additional information

If `y1` < `y0`, nothing will be displayed.
With most LCD controllers, this routine is executed very quickly because multiple pixels can be set at once and no calculations are needed. If it is clear that vertical lines are to be drawn, this routine executes faster than the `GUI_DrawLine()` routine.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_GetLineStyle()

Description

Returns the current line style used by the function GUI_DrawLine.

Prototype

```
U8 GUI_GetLineStyle(void);
```

Return value

Current line style used by the function GUI_DrawLine.

GUI_MoveRel()

Description

Moves the current line pointer relative to its current position.

Prototype

```
void GUI_MoveRel(int dx, int dy);
```

Parameter	Description
dx	Distance to move in X.
dy	Distance to move in Y.

Related topics

GUI_DrawLineTo(), GUI_MoveTo()

GUI_MoveTo()

Description

Moves the current line pointer to the given position.

Prototype

```
void GUI_MoveTo(int x, int y);
```

Parameter	Description
x	New position in X.
y	New position in Y.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_SetLineStyle()

Description

Sets the current line style used by the function GUI_DrawLine.

Prototype

```
U8 GUI_SetLineStyle(U8 LineStyle);
```

Parameter	Description
LineStyle	New line style to be used (see table below).

Permitted values for parameter LineStyle	
GUI_LS_SOLID	Lines would be drawn solid (default).
GUI_LS_DASH	Lines would be drawn dashed.
GUI_LS_DOT	Lines would be drawn dotted.
GUI_LS_DASHDOT	Lines would be drawn alternating with dashes and dots.
GUI_LS_DASHDOTDOT	Lines would be drawn alternating with dashes and double dots.

Return value

Previous line style used by the function GUI_DrawLine.

Additional information

This function sets only the line style used by GUI_DrawLine. The style will be used only with a pen size of 1.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

9.10 Drawing polygons

The polygon drawing routines can be helpful when drawing vectorized symbols.

GUI_DrawPolygon()

Description

Draws the outline of a polygon defined by a list of points in the current window.

Prototype

```
void GUI_DrawPolygon(const GUI_POINT * pPoint, int NumPoints,
                     int x, int y);
```

Parameter	Description
pPoint	Pointer to the polygon to display.
NumPoints	Number of points specified in the list of points.
x	X-position of origin.
y	Y-position of origin.

Additional information

The polyline drawn is automatically closed by connecting the endpoint to the starting point.

GUI_EnlargePolygon()

Description

Enlarges a polygon on all sides by a specified length in pixels.

Prototype

```
void GUI_EnlargePolygon(GUI_POINT       * pDest,
                        const GUI_POINT * pSrc,
                        int               NumPoints,
                        int               Len);
```

Parameter	Description
pDest	Pointer to the destination polygon.
pSrc	Pointer to the source polygon.
NumPoints	Number of points specified in the list of points.
Len	Length (in pixels) by which to enlarge the polygon.

Additional information

Make sure the destination array of points is equal to or larger than the source array.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Example

```
const GUI_POINT aPoints[] = {
  { 40, 20},
  {  0, 20},
  { 20,  0}
};

GUI_POINT aEnlargedPoints[GUI_COUNTOF(aPoints)];

void Sample(void) {
  int i;
  GUI_Clear();
  GUI_SetDrawMode(GUI_DM_XOR);
  GUI_FillPolygon(aPoints, GUI_COUNTOF(aPoints), 140, 110);
  for (i = 1; i < 10; i++) {
    GUI_EnlargePolygon(aEnlargedPoints, aPoints, GUI_COUNTOF(aPoints), i * 5);
    GUI_FillPolygon(aEnlargedPoints, GUI_COUNTOF(aPoints), 140, 110);
  }
}
```

Screen shot of above example



GUI_FillPolygon()

Description

Draws a filled polygon defined by a list of points in the current window.

Prototype

```
void GUI_FillPolygon(const GUI_POINT * pPoint, int NumPoints, int x, int y);
```

Parameter	Description
pPoint	Pointer to the polygon to display and to fill.
NumPoints	Number of points specified in the list of points.
x	X-position of origin.
y	Y-position of origin.

Additional information

The polyline drawn is automatically closed by connecting the endpoint to the starting point. It is not required that the endpoint touches the outline of the polygon.
Rendering a polygon is done by drawing one or more horizontal lines for each y-position of the polygon. Per default the maximum number of points used to draw the horizontal lines for one y-position is 12 (which means 6 lines per y-position). If this value needs to be increased, the macro GUI_FP_MAXCOUNT can be used to set the maximum number of points.

Example

```
#define GUI_FP_MAXCOUNT 50
```

GUI_MagnifyPolygon()

Description

Magnifies a polygon by a specified factor.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void GUI_MagnifyPolygon(GUI_POINT *       pDest,
                        const GUI_POINT * pSrc,
                        int               NumPoints,
                        int               Mag);
```

Parameter	Description
pDest	Pointer to the destination polygon.
pSrc	Pointer to the source polygon.
NumPoints	Number of points specified in the list of points.
Mag	Factor used to magnify the polygon.

Additional information

Make sure the destination array of points is equal to or larger than the source array. Note the difference between enlarging and magnifying a polygon. Calling the function GUI_EnlargePolygon() with the parameter Len = 1 will enlarge the polygon by one pixel on all sides, whereas the call of GUI_MagnifyPolygon() with the parameter Mag = 1 will have no effect.

Example

```
const GUI_POINT aPoints[] = {
  {  0, 20},
  { 40, 20},
  { 20,  0}
};

GUI_POINT aMagnifiedPoints[GUI_COUNTOF(aPoints)];

void Sample(void) {
  int Mag, y = 0, Count = 4;
  GUI_Clear();
  GUI_SetColor(GUI_GREEN);
  for (Mag = 1; Mag <= 4; Mag *= 2, Count /= 2) {
    int i, x = 0;
    GUI_MagnifyPolygon(aMagnifiedPoints, aPoints, GUI_COUNTOF(aPoints), Mag);
    for (i = Count; i > 0; i--, x += 40 * Mag) {
      GUI_FillPolygon(aMagnifiedPoints, GUI_COUNTOF(aPoints), x, y);
    }
    y += 20 * Mag;
  }
}
```

Screen shot of above example



GUI_RotatePolygon()

Description

Rotates a polygon by a specified angle.

Prototype

```
void GUI_RotatePolygon(GUI_POINT *       pDest,
                       const GUI_POINT * pSrc,
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                    int             NumPoints,
                    float           Angle);
```

Parameter	Description
pDest	Pointer to the destination polygon.
pSrc	Pointer to the source polygon.
NumPoints	Number of points specified in the list of points.
Angle	Angle in radian used to rotate the polygon.

Additional information

Make sure the destination array of points is equal to or larger than the source array.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Example

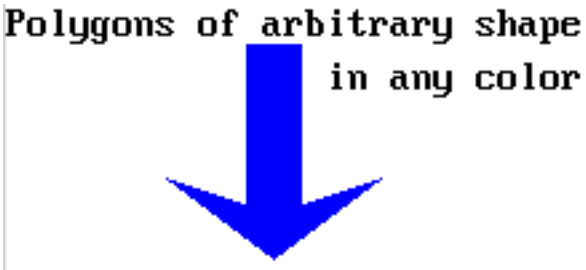
The following example shows how to draw a polygon. It is available as `2DGL_DrawPolygon.c` in the examples shipped with emWin.

```
#include "gui.h"
/*********************************************************************
*
*           The points of the arrow
*/
static const GUI_POINT aPointArrow[] = {
  {  0,  -5},
  {-40, -35},
  {-10, -25},
  {-10, -85},
  { 10, -85},
  { 10, -25},
  { 40, -35},
};

/*********************************************************************
*
*               Draws a polygon
*/
static void DrawPolygon(void) {
  int Cnt =0;
  GUI_SetBkColor(GUI_WHITE);
  GUI_Clear();
  GUI_SetFont(&GUI_Font8x16);
  GUI_SetColor(0x0);
  GUI_DispStringAt("Polygons of arbitrary shape ", 0, 0);
  GUI_DispStringAt("in any color", 120, 20);
  GUI_SetColor(GUI_BLUE);
  /* Draw filled polygon */
  GUI_FillPolygon (&aPointArrow[0],7,100,100);
}

/*********************************************************************
*
*                 main
*/
void main(void) {
  GUI_Init();
  DrawPolygon();
  while(1)
    GUI_Delay(100);
}
```

Screen shot of above example



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

9.11 Drawing circles

GUI_DrawCircle()

Description

Draws the outline of a circle of specified dimensions, at a specified position in the current window.

Prototype

```
void GUI_DrawCircle(int x0, int y0, int r);
```

Parameter	Description
x0	X-position of the center of the circle in pixels of the client window.
y0	Y-position of the center of the circle in pixels of the client window.
r	Radius of the circle (half the diameter). Minimum: 0 (will result in a point); maximum: 180.

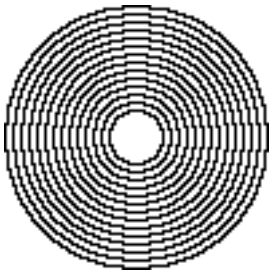
Additional information

This routine cannot handle a radius in excess of 180 because it uses integer calculations that would otherwise produce an overflow. However, for most embedded applications this is not a problem since a circle with diameter 360 is larger than the display anyhow.

Example

```
// Draw concentric circles
void ShowCircles(void) {
  int i;
  for (i=10; i<50; i += 3)
    GUI_DrawCircle(120, 60, i);
}
```

Screen shot of above example



© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_FillCircle()

Description

Draws a filled circle of specified dimensions at a specified position in the current window.

Prototype

```
void GUI_FillCircle(int x0, int y0, int r);
```

Parameter	Description
x0	X-position of the center of the circle in pixels of the client window.
y0	Y-position of the center of the circle in pixels of the client window.
r	Radius of the circle (half the diameter). Minimum: 0 (will result in a point); maximum: 180.

Additional information

This routine cannot handle a radius in excess of 180.

Example

```
GUI_FillCircle(120,60,50);
```

Screen shot of above example



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

9.12 Drawing ellipses

GUI_DrawEllipse()

Description

Draws the outline of an ellipse of specified dimensions, at a specified position in the current window.

Prototype

```
void GUI_DrawEllipse(int x0, int y0, int rx, int ry);
```

Parameter	Description
x0	X-position of the center of the circle in pixels of the client window.
y0	Y-position of the center of the circle in pixels of the client window.
rx	X-radius of the ellipse (half the diameter). Minimum: 0; maximum: 180.
ry	Y-radius of the ellipse (half the diameter). Minimum: 0; maximum: 180.

Additional information

This routine cannot handle rx/ry parameters in excess of 180 because it uses integer calculations that would otherwise produce an overflow.

Example

See the `GUI_FillEllipse()` example.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_FillEllipse()

Description

Draws a filled ellipse of specified dimensions at a specified position in the current window.

Prototype

```
void GUI_FillEllipse(int x0, int y0, int rx, int ry);
```

Parameter	Description
x0	X-position of the center of the circle in pixels of the client window.
y0	Y-position of the center of the circle in pixels of the client window.
rx	X-radius of the ellipse (half the diameter). Minimum: 0; maximum: 180.
ry	Y-radius of the ellipse (half the diameter). Minimum: 0; maximum: 180.

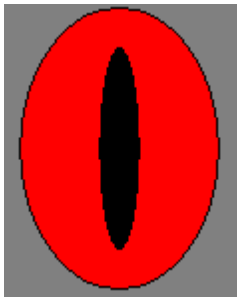
Additional information

This routine cannot handle a rx/ry parameters in excess of 180.

Example

```
// Demo ellipses
GUI_SetColor(0xff);
GUI_FillEllipse(100, 180, 50, 70);
GUI_SetColor(0x0);
GUI_DrawEllipse(100, 180, 50, 70);
GUI_SetColor(0x000000);
GUI_FillEllipse(100, 180, 10, 50);
```

Screen shot of above example



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

9.13 Drawing arcs

GUI_DrawArc()

Description

Draws an arc of specified dimensions at a specified position in the current window. An arc is a section of the outline of a circle.

Prototype

```
void GUI_DrawArc(int xCenter, int yCenter, int rx, int ry, int a0, int a1);
```

Parameter	Description
xCenter	Horizontal position of the center in pixels of the client window.
yCenter	Vertical position of the center in pixels of the client window.
rx	X-radius (pixels).
ry	Y-radius (pixels).
a0	Starting angle (degrees).
a1	Ending angle (degrees).

Limitations

Currently the ry parameter is not used. The rx parameter is used instead.

Additional information

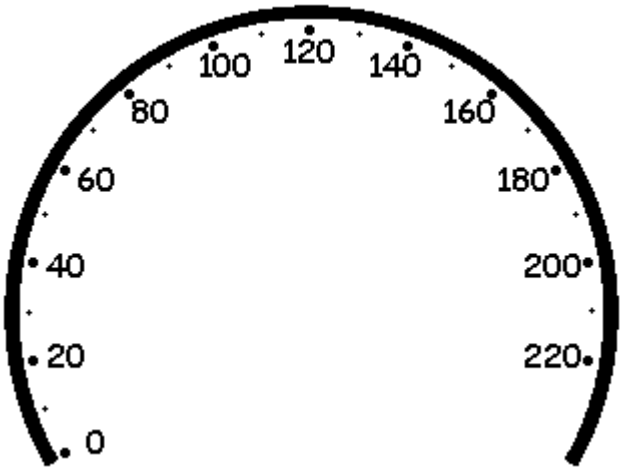
GUI_DrawArc() uses the floating-point library. It cannot handle rx/ry parameters in excess of 180 because it uses integer calculations that would otherwise produce an overflow.

Example

```
void DrawArcScale(void) {
  int x0 = 160;
  int y0 = 180;
  int i;
  char ac[4];
  GUI_SetBkColor(GUI_WHITE);
  GUI_Clear();
  GUI_SetPenSize( 5 );
  GUI_SetTextMode(GUI_TM_TRANS);
  GUI_SetFont(&GUI_FontComic18B_ASCII);
  GUI_SetColor( GUI_BLACK );
  GUI_DrawArc( x0,y0,150, 150,-30, 210 );
  GUI_Delay(1000);
  for (i=0; i<= 23; i++) {
    float a = (-30+i*10)*3.1415926/180;
    int x = -141*cos(a)+x0;
    int y = -141*sin(a)+y0;
    if (i%2 == 0)
      GUI_SetPenSize( 5 );
    else
      GUI_SetPenSize( 4 );
    GUI_DrawPoint(x,y);
    if (i%2 == 0) {
      x = -123*cos(a)+x0;
      y = -130*sin(a)+y0;
      sprintf(ac, "%d", 10*i);
      GUI_SetTextAlign(GUI_TA_VCENTER);
      GUI_DispStringHCenterAt(ac,x,y);
    }
  }
}
```


© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Screen shot of above example



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

9.14 Drawing graphs

GUI_DrawGraph()

Description

Draws a graph at once.

Prototype

```
void GUI_DrawGraph(I16 * paY, int NumPoints, int x0, int y0);
```

Parameter	Description
paY	Pointer to an array containing the Y-values of the graph.
NumPoints	Number of Y-values to be displayed.
x0	Starting point in x.
y0	Starting point in y.

Additional information

The function first sets the line-cursor to the position specified with x0, y0 and the first Y-value of the given array. Then it starts drawing lines to x0 + 1, y0 + *(paY + 1), x0 + 2, y0 + *(paY + 2) and so on.

Example

```
#include "GUI.h"
#include <stdlib.h>

I16 aY[100];

void MainTask(void) {
  int i;
  GUI_Init();
  for (i = 0; i < GUI_COUNTOF(aY); i++) {
    aY[i] = rand() % 50;
  }
  GUI_DrawGraph(aY, GUI_COUNTOF(aY), 0, 0);
}
```

Screen shot of above example



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

9.15 Drawing pie charts

GUI_DrawPie()

Description

Draws a circle sector.

Prototype

```
void GUI_DrawPie(int x0, int y0, int r, int a0, int a1, int Type);
```

Parameter	Description
x0	X-position of the center of the circle in pixels of the client window.
y0	Y-position of the center of the circle in pixels of the client window.
r	Radius of the circle (half the diameter).
a0	Starting angle (degrees).
a1	End angle (degrees).
Type	(reserved for future use, should be 0)

Example

```
int i, a0, a1;
const unsigned aValues[]  = { 100, 135, 190, 240, 340, 360};
const GUI_COLOR aColors[] = { GUI_BLUE, GUI_GREEN,   GUI_RED,
                              GUI_CYAN, GUI_MAGENTA, GUI_YELLOW };
for (i = 0; i < GUI_COUNTOF(aValues); i++) {
  a0 = (i == 0) ? 0 : aValues[i - 1];
  a1 = aValues[i];
  GUI_SetColor(aColors[i]);
  GUI_DrawPie(100, 100, 50, a0, a1, 0);
}
```

Screen shot of above example



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

9.16 Saving and restoring the GUI-context

GUI_RestoreContext()

Description

The function restores the GUI-context.

Prototype

```
void GUI_RestoreContext(const GUI_CONTEXT * pContext);
```

Parameter	Description
pContext	Pointer to a GUI_CONTEXT structure containing the new context.

Additional information

The GUI-context contains the current state of the GUI like the text cursor position, a pointer to the current font and so on. Sometimes it could be useful to save the current state ant to restore it later. For this you can use these functions.

GUI_SaveContext()

Description

The function saves the current GUI-context. (See also GUI_RestoreContext)

Prototype

```
void GUI_SaveContext(GUI_CONTEXT * pContext);
```

Parameter	Description
pContext	Pointer to a GUI_CONTEXT structure for saving the current context.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

9.17 Clipping

GUI_SetClipRect()

Description

Sets the clipping rectangle used for limiting the output.

Prototype

```
void GUI_SetClipRect(const GUI_RECT * pRect);
```

Parameter	Description
pRect	Pointer to the rectangle which should be used for clipping. A NULL pointer should be used to restore the default value.

Additional information

The clipping area is per default limited to the configured (virtual) display size.
Under some circumstances it can be useful to use a smaller clipping rectangle, which can be set using this function.
The rectangle referred to should remain unchanged until the function is called again with a NULL pointer.

Example

The following example shows how to use the function:

```
GUI_RECT Rect = {10, 10, 100, 100};
GUI_SetClipRect(&Rect);
.
. /* Use the clipping area ... */
.
GUI_SetClipRect(NULL);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 10

Displaying bitmap files

The recommended and most efficient way to display a bitmap known at compile time is to use the bitmap converter to convert it into a C file and add it to the project / makefile. For details about the bitmap converter, refer to the chapter "Bitmap Converter" on page 213.
If the application needs to display images not known at compile time, the image needs to be available in a graphic file format supported by emWin. In this case, the image file can reside in memory or on an other storage device; it can be displayed even if the amount of available memory is less than the size of the image file.
emWin currently supports BMP, JPEG, GIF and PNG file formats.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

10.1 BMP file support

Although bitmaps which can be used with emWin are normally compiled and linked as C files with the application, there may be situations when using these types of structures is not desirable. A typical example would be an application that continuously references new images, such as bitmaps downloaded by the user. The following functions support `bmp` files which have been loaded into memory.
For images that you plan to re-use (that is, a company logo) it is much more efficient to compile and link it as C file which can be used directly by emWin. This may be easily done with the Bitmap Converter.

10.1.1 Supported formats

The BMP file format has been defined by Microsoft. There are a number of different formats as shown in the table below:

Bits per pixel	Indexed	Compression	Supported
1	yes	no	yes
4	yes	no	yes
4	yes	yes	yes
8	yes	no	yes
8	yes	yes	yes
16	no	no	yes
24	no	no	yes
32	no	no	yes

10.1.2 BMP file API

The table below lists the available BMP file related routines in alphabetical order. Detailed descriptions follows:

Routine	Explanation
GUI_BMP_Draw()	Draws a BMP file which has been loaded into memory.
GUI_BMP_DrawEx()	Draws a BMP file which needs not to be loaded into memory.
GUI_BMP_DrawScaled()	Draws a BMP file with scaling which has been loaded into memory.
GUI_BMP_DrawScaledEx()	Draws a BMP file with scaling which needs not to be loaded into memory.
GUI_BMP_GetXSize()	Returns the X-size of a BMP file loaded into memory.
GUI_BMP_GetXSizeEx()	Returns the X-size of a BMP file which needs not to be loaded into memory.
GUI_BMP_GetYSize()	Returns the Y-size of a bitmap loaded into memory.
GUI_BMP_GetYSizeEx()	Returns the Y-size of a BMP file which needs not to be loaded into memory.
GUI_BMP_Serialize()	Creates a BMP-file.
GUI_BMP_SerializeEx()	Creates a BMP-file from the given rectangle.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_BMP_Draw()

Description

Draws a Windows bmp file, which has been loaded into memory, at a specified position in the current window.

Prototype

```
int GUI_BMP_Draw(const void * pFileData, int x0, int y0);
```

Parameter	Description
pFileData	Pointer to the start of the memory area in which the bmp file resides.
x0	X-position of the upper left corner of the bitmap in the display.
y0	Y-position of the upper left corner of the bitmap in the display.

Additional information

The table at the beginning of the chapter shows the supported BMP file formats. The example 2DGL_DrawBMP.c shows how to use the function.

GUI_BMP_DrawEx()

Description

Draws a bmp file, which does not have to be loaded into memory, at a specified position in the current window.

Prototype

```
int GUI_BMP_DrawEx(GUI_GET_DATA_FUNC * pfGetData, void * p, int x0, int y0);
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.
x0	X-position of the upper left corner of the bitmap in the display.
y0	Y-position of the upper left corner of the bitmap in the display.

Return value

Zero on success, nonzero if the function fails.

Additional information

This function is used for drawing bmp files if not enough RAM is available to load the whole file into memory. The GUI library then calls the function pointed by the parameter pfGetData to read the data. The GetData function needs to return the number of requested bytes. The maximum number of bytes requested by the GUI is the number of bytes needed for drawing one line of the image.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_BMP_DrawScaled()

Description

Draws a bmp file, which has been loaded into memory, at a specified position in the current window using scaling.

Prototype

```
int GUI_BMP_DrawScaled(const void * pFileData,
                       int x0, int y0, int Num, int Denom);
```

Parameter	Description
pFileData	Pointer to the start of the memory area in which the bmp file resides.
x0	X-position of the upper left corner of the bitmap in the display.
y0	Y-position of the upper left corner of the bitmap in the display.
Num	Numerator to be used for scaling.
Denom	Denominator used for scaling.

Return value

Zero on success, nonzero if the function fails.

Additional information

The function scales the image by building a fraction with the given numerator and denominator. If for example an image should be shrunk to 2/3 of size the parameter Num should be 2 and Denom should be 3.

GUI_BMP_DrawScaledEx()

Description

Draws a bmp file, which does not have to be loaded into memory, at a specified position in the current window using scaling.

Prototype

```
int  GUI_BMP_DrawScaledEx(GUI_GET_DATA_FUNC * pfGetData, void * p,
                          int                 x0,        int    y0,
                          int                 Num,       int    Denom);
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.
x0	X-position of the upper left corner of the bitmap in the display.
y0	Y-position of the upper left corner of the bitmap in the display.
Num	Numerator to be used for scaling.
Denom	Denominator used for scaling.

Return value

Zero on success, nonzero if the function fails.

Additional information

The function scales the image by building a fraction with the given numerator and denominator. If for example an image should be shrunk to 2/3 of size the parameter Num should be 2 and Denom should be 3.
For more details, refer to "GUI_BMP_DrawEx()" on page 143.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_BMP_GetXSize()

Description

Returns the X-size of a specified bitmap which has been loaded into memory.

Prototype

```
int GUI_BMP_GetXSize(const void * pFileData);
```

Parameter	Description
pFileData	Pointer to the start of the memory area in which the bmp file resides.

Return value

X-size of the bitmap.

GUI_BMP_GetXSizeEx()

Description

Returns the X-size of a specified bmp file which does not have to be loaded into memory.

Prototype

```
int GUI_BMP_GetXSizeEx(GUI_GET_DATA_FUNC * pfGetData, void * p);
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.

Return value

X-size of the bitmap.

GUI_BMP_GetYSize()

Description

Returns the Y-size of a specified bitmap which has been loaded into memory.

Prototype

```
int GUI_BMP_GetYSize(const void * pFileData);;
```

Parameter	Description
pFileData	Pointer to the start of the memory area in which the bmp file resides.

Return value

Y-size of the bitmap.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_BMP_GetYSizeEx()

Description

Returns the Y-size of a specified bmp file which does not have to be loaded into memory.

Prototype

```
int GUI_BMP_GetYSizeEx(GUI_GET_DATA_FUNC * pfGetData, void * p);
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.

Return value

Y-size of the bitmap.

GUI_BMP_Serialize()

Description

The function creates a BMP-file containing the complete contents of the LCD.

Prototype

```
void GUI_BMP_Serialize(GUI_CALLBACK_VOID_U8_P * pfSerialize, void * p);
```

Parameter	Description
pfSerialize	Pointer to serialization function
p	Pointer to user defined data passed to serialization function

Additional information

The following example will show how to create a BMP-file under windows.

```
static void _DrawSomething(void) {
  /* Draw something */
  GUI_DrawLine(10, 10, 100, 100);
}

static void _WriteByte2File(U8 Data, void * p) {
  U32 nWritten;
  WriteFile(*((HANDLE *)p), &Data, 1, &nWritten, NULL);
}

static void _ExportToFile(void) {
  HANDLE hFile = CreateFile("C:\\GUI_BMP_Serialize.bmp",
                            GENERIC_WRITE, 0, 0,
                            CREATE_ALWAYS, FILE_ATTRIBUTE_NORMAL, 0);
  GUI_BMP_Serialize(_WriteByte2File, &hFile);
  CloseHandle(hFile);
}

void MainTask(void) {
  GUI_Init();
  _DrawSomething();
  _ExportToFile();
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_BMP_SerializeEx()

Description

The function creates a BMP-file containing the given area.

Prototype

```
void GUI_BMP_SerializeEx(GUI_CALLBACK_VOID_U8_P * pfSerialize,
                         int    x0, int y0, int xSize, int ySize,
                         void * p);
```

Parameter	Description
pfSerialize	Pointer to serialization function.
x0	Start position in X to create the BMP-file.
y0	Start position in Y to create the BMP-file.
xSize	Size in X.
ySize	Size in Y.
p	Pointer to user defined data passed to serialization function.

Additional information

Refer to “GUI_BMP_Serialize()” on page 146.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

10.2 JPEG file support

JPEG (pronounced "jay-peg") is a standardized compression method for full-color and gray-scale images. JPEG is intended for compressing "real-world" scenes; line drawings, cartoons and other non-realistic images are not its strong suit. JPEG is lossy, meaning that the output image is not exactly identical to the input image. Hence you must not use JPEG if you have to have identical output bits. However, on typical photographic images, very good compression levels can be obtained with no visible change, and remarkably high compression levels are possible if you can tolerate a low-quality image.

10.2.1 Supported JPEG compression methods

This software implements JPEG baseline, extended-sequential and progressive compression processes. Provision is made for supporting all variants of these processes, although some uncommon parameter settings aren't implemented yet. For legal reasons, code for the arithmetic-coding variants of JPEG is not distributed. It appears that the arithmetic coding option of the JPEG spec is covered by patents owned by IBM, AT&T, and Mitsubishi. Hence arithmetic coding cannot legally be used without obtaining one or more licenses. For this reason, support for arithmetic coding has not been included. (Since arithmetic coding provides only a marginal gain over the unpatented Huffman mode, it is unlikely that very many implementations will support it.)
The JPEG file support does not contain provision for the hierarchical or lossless processes defined in the standard.

10.2.2 Converting a JPEG file to C source

Under some circumstances it can be useful to add a JPEG file as C file to the project. In this case the JPEG file first needs to be converted to a C file. This can be done using the tool `Bin2C.exe` shipped with emWin. It can be found in the `Tools` subfolder. It converts the given binary file (in this case the JPEG file) to a C file. The filename of the C file is the same as the binary file name with the file extension '.c'.
The following steps will show how to embed a JPEG file using `Bin2C`:

- Start `Bin2C.exe` and select the JPEG file to be converted to a C file, for example 'Image.jpeg' and convert it to a C file.
- Add the C file to the project.

Example

The following example shows how to display the converted JPEG file:

```
#include "GUI.h"
#include "Image.c" /* Include the converted C file */

void MainTask(void) {
  GUI_Init();
  GUI_JPEG_Draw(acImage, sizeof(acImage), 0, 0);
  ...
}
```

10.2.3 Displaying JPEG files

The graphic library first decodes the graphic information. If the image has to be drawn the decoding process takes considerable time. If a JPEG file is used in a frequently called callback routine of the window manager, the decoding process can take a considerable amount of time. The calculation time can be reduced by the use of memory devices. The best way would be to draw the image first into a memory device. In this case the decompression would be executed only one time. For more information about memory devices, refer to chapter "Memory Devices" on page 247.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

10.2.4 Memory usage

The JPEG decompression uses app. 33Kb RAM for decompression independent of the image size and a size dependent amount of bytes. The RAM requirement can be calculated as follows:

App. RAM requirement = X-Size of image * 80 bytes + 33 Kbytes

The X-size dependent amount depends on the compression type of the JPEG file. The following table shows some examples:

Compression	Size of image in pixels	RAM usage [Kbyte]	RAM usage, size dependent [Kbyte]
H1V1	160x120	45	12
H2V2	160x120	46	13
GRAY	160x120	38	4

The memory required for the decompression is allocated dynamically by the emWin memory management system. After drawing the JPEG image the complete RAM will be released.

10.2.5 Progressive JPEG files

Contrary to baseline and extended-sequential JPEG files progressive JPEGs consist of multiple scans. Each of these scans is based on the previous scan(s) and refines the appearance of the JPEG image. This requires scanning the whole file even if only one line needs to be decompressed.
If enough RAM is configured for the whole image data, the decompression needs only be done one time. If less RAM is configured, the JPEG decoder uses 'banding' for drawing the image. The more bands required the more times the image needs to be decompressed and the slower the performance. With other words: The more RAM the better the performance.

10.2.6 JPEG file API

The table below lists the available JPEG file related routines in alphabetical order. Detailed descriptions follows:

Routine	Explanation
GUI_JPEG_Draw()	Draws a JPEG file which has been loaded into memory.
GUI_JPEG_DrawEx()	Draws a JPEG file which needs not to be loaded into memory.
GUI_JPEG_DrawScaled()	Draws a JPEG file with scaling which has been loaded into memory.
GUI_JPEG_DrawScaledEx()	Draws a JPEG file with scaling which needs not to be loaded into memory.
GUI_JPEG_GetInfo()	Fills a GUI_JPEG_INFO structure from a JPEG file which has been loaded into memory.
GUI_JPEG_GetInfoEx()	Fills a GUI_JPEG_INFO structure from a JPEG file which needs not to be loaded into memory.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_JPEG_Draw()

Description

Draws a jpeg file, which has been loaded into memory, at a specified position in the current window.

Prototype

```
int GUI_JPEG_Draw(const void * pFileData, int DataSize, int x0, int y0);
```

Parameter	Description
pFileData	Pointer to the start of the memory area in which the jpeg file resides.
DataSize	Number of bytes of the jpeg file.
x0	X-position of the upper left corner of the bitmap in the display.
y0	Y-position of the upper left corner of the bitmap in the display.

Return value

Zero on success, nonzero if the function fails. (The current implementation always returns 0)

Additional information

The Sample folder contains the example 2DGL_DrawJPG.c which shows how to use the function.

GUI_JPEG_DrawEx()

Description

Draws a jpeg file, which does not have to be loaded into memory, at a specified position in the current window.

Prototype

```
int GUI_JPEG_DrawEx(GUI_GET_DATA_FUNC * pfGetData, void * p,
                    int                 x0,        int    y0);
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.
x0	X-position of the upper left corner of the bitmap in the display.
y0	Y-position of the upper left corner of the bitmap in the display.

Return value

Zero on success, nonzero if the function fails. (The current implementation always returns 0)

Additional information

This function is used for drawing jpegs if not enough RAM is available to load the whole file into memory. The JPEG library then calls the function pointed by the parameter pfGetData to read the data.
The GetData function should return the number of available bytes. This could be less or equal the number of requested bytes. The function needs at least to return 1 new byte. The Sample folder contains the example 2DGL_DrawJPGScaled.c which shows how to use a GetData function.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_JPEG_DrawScaled()

Description

Draws a jpeg file, which has been loaded into memory, at a specified position in the current window using scaling.

Prototype

```
int  GUI_JPEG_DrawScaled(const void * pFileData, int DataSize,
                         int x0, int y0, int Num, int Denom);
```

Parameter	Description
pFileData	Pointer to the start of the memory area in which the jpeg file resides.
DataSize	Number of bytes of the jpeg file.
x0	X-position of the upper left corner of the bitmap in the display.
y0	Y-position of the upper left corner of the bitmap in the display.
Num	Numerator to be used for scaling.
Denom	Denominator used for scaling.

Return value

Zero on success, nonzero if the function fails. (The current implementation always returns 0)

Additional information

The function scales the image by building a fraction with the given numerator and denominator. If for example an image should be shrunk to 2/3 of size the parameter Num should be 2 and Denom should be 3.
The Sample folder contains the example 2DGL_DrawJPGScaled.c which shows how to draw scaled JPEGs.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_JPEG_DrawScaledEx()

Description

Draws a jpeg file, which does not have to be loaded into memory, at a specified position in the current window using scaling.

Prototype

```
int  GUI_JPEG_DrawScaledEx(GUI_GET_DATA_FUNC * pfGetData, void * p,
                           int x0, int y0, int Num, int Denom);
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.
x0	X-position of the upper left corner of the bitmap in the display.
y0	Y-position of the upper left corner of the bitmap in the display.
Num	Numerator to be used for scaling.
Denom	Denominator used for scaling.

Return value

Zero on success, nonzero if the function fails. (The current implementation always returns 0)

Additional information

The function scales the image by building a fraction with the given numerator and denominator. If for example an image should be shrunk to 2/3 of size the parameter Num should be 2 and Denom should be 3.
For more details, refer to "GUI_JPEG_DrawEx()" on page 150.
The Sample folder contains the example 2DGL_DrawJPGScaled.c which shows how to use the function.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_JPEG_GetInfo()

Description

Fills a GUI_JPEG_INFO structure with information about a jpeg file, which has been loaded into memory.

Prototype

```
int GUI_JPEG_GetInfo(const void * pFileData,
                     int DataSize,
                     GUI_JPEG_INFO * pInfo);
```

Parameter	Description
pFileData	Pointer to the start of the memory area in which the jpeg file resides.
DataSize	Number of bytes of the jpeg file.
pInfo	Pointer to a GUI_JPEG_INFO structure to be filled by the function.

Return value

Zero on success, nonzero if the function fails.

Elements of GUI_JPEG_INFO

Data type	Element	Description
int	XSize	Pixel size in X of the image.
int	YSize	Pixel size in Y of the image.

Additional information

The Sample folder contains the example 2DGL_DrawJPG.c which shows how to use the function.

GUI_JPEG_GetInfoEx()

Description

Fills a GUI_JPEG_INFO structure with information about a jpeg file, which does not have to be loaded into memory.

Prototype

```
int GUI_JPEG_GetInfoEx(GUI_GET_DATA_FUNC * pfGetData, void * p,
                       GUI_JPEG_INFO     * pInfo);
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.
pInfo	Pointer to a GUI_JPEG_INFO structure to be filled by the function.

Return value

Zero on success, nonzero if the function fails.

Additional information

For more details about the function and the parameters pfGetData and p, refer to "GUI_JPEG_GetInfo()" on page 153 and "GUI_JPEG_DrawEx()" on page 150.
The Sample folder contains the example 2DGL_DrawJPGScaled.c which shows how to use the function.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

10.3 GIF file support

The GIF file format (Graphic Interchange Format) has been developed by the CompuServe Information Service in the 1980s. It has been designed to transmit images across data networks.
The GIF standard supports interlacing, transparency, application defined data, animations and rendering of raw text. Unsupported data like raw text or application specific data will be ignored by emWin.
GIF files uses the LZW (Lempel-Zif-Welch) file compression method for compressing the image data. This compression method works without loosing data. The output image is exactly identical to the input image.

10.3.1 Converting a GIF file to C source

Under some circumstances it can be useful to add a GIF file as C file to the project. This can be done by exactly the same way as described before under 'JPEG file support'.

10.3.2 Displaying GIF files

The graphic library first decodes the graphic information. If the image has to be drawn the decoding process takes considerable time. If a GIF file is used in a frequently called callback routine of the window manager, the decoding process can take a considerable amount of time. The calculation time can be reduced by the use of memory devices. The best way would be to draw the image first into a memory device. In this case the decompression would be executed only one time. For more information about memory devices, refer to the chapter "Memory Devices" on page 247.

10.3.3 Memory usage

The GIF decompression routine of emWin needs about 16Kbytes of dynamically allocated RAM for decompression. After drawing an image the RAM used for decompressing will be released.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

10.3.4 GIF file API

The table below lists the available GIF file related routines in alphabetical order. Detailed descriptions follows:

Routine	Explanation
GUI_GIF_Draw()	Draws the first image of a GIF file which has been loaded into memory.
GUI_GIF_DrawEx()	Draws the first image of a GIF file which needs not to be loaded into memory.
GUI_GIF_DrawSub()	Draws the given sub image of a GIF file which has been loaded into memory.
GUI_GIF_DrawSubEx()	Draws the given sub image of a GIF file which needs not to be loaded into memory.
GUI_GIF_DrawSubScaled()	Draws the given sub image of a GIF file with scaling which has been loaded into memory.
GUI_GIF_DrawSubScaledEx()	Draws the given sub image of a GIF file with scaling which needs not to be loaded into memory.
GUI_GIF_GetComment()	Returns the given comment of a GIF file which has been loaded into memory.
GUI_GIF_GetCommentEx()	Returns the given comment of a GIF file which needs not to be loaded into memory.
GUI_GIF_GetImageInfo()	Returns information about the given sub image of a GIF file which has been loaded into memory.
GUI_GIF_GetImageInfoEx()	Returns information about the given sub image of a GIF file which needs not to be loaded into memory.
GUI_GIF_GetInfo()	Returns information about a GIF file which has been loaded into memory.
GUI_GIF_GetInfoEx()	Returns information about a GIF file which needs not to be loaded into memory.
GUI_GIF_GetXSize()	Returns the X-size of a bitmap loaded into memory.
GUI_GIF_GetXSizeEx()	Returns the X-size of a bitmap which needs not to be loaded into memory.
GUI_GIF_GetYSize()	Returns the Y-size of a bitmap loaded into memory.
GUI_GIF_GetYSizeEx()	Returns the Y-size of a bitmap which needs not to be loaded into memory.

GUI_GIF_Draw()

Description

Draws the first image of a `gif` file, which has been loaded into memory, at a specified position in the current window.

Prototype

```
int GUI_GIF_Draw(const void * pGIF, U32 NumBytes, int x0, int y0);
```

Parameter	Description
pGIF	Pointer to the start of the memory area in which the gif file resides.
NumBytes	Number of bytes of the gif file.
x0	X-position of the upper left corner of the bitmap in the display.
y0	Y-position of the upper left corner of the bitmap in the display.

Return value

0 on success, != 0 on error.

Additional information

If the file contains more than one image, the function shows only the first image of the file. Transparency and interlaced images are supported.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_GIF_DrawEx()

Description

Draws a gif file, which does not have to be loaded into memory, at a specified position in the current window.

Prototype

```
int GUI_GIF_DrawEx(GUI_GET_DATA_FUNC * pfGetData, void * p, int x0, int y0);
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.
x0	X-position of the upper left corner of the bitmap in the display.
y0	Y-position of the upper left corner of the bitmap in the display.

Return value

Zero on success, nonzero if the function fails.

Additional information

This function is used for drawing gif files if not enough RAM is available to load the whole file into memory. The library calls the function pointed by the parameter pfGetData to read the data.
The GetData function should return the number of available bytes. This could be less or equal the number of requested bytes. The function needs at least to return 1 new byte.

GUI_GIF_DrawSub()

Description

Draws the given sub image of a gif file, which has been loaded into memory, at a specified position in the current window.

Prototype

```
int GUI_GIF_DrawSub(const void * pGIF, U32 NumBytes,
                    int x0, int y0, int Index);
```

Parameter	Description
pGIF	Pointer to the start of the memory area in which the gif file resides.
NumBytes	Number of bytes of the gif file.
x0	X-position of the upper left corner of the bitmap in the display.
y0	Y-position of the upper left corner of the bitmap in the display.
Index	Zero-based index of sub image to be shown.

Return value

0 on success, != 0 on error.

Additional information

The function manages the background pixels between the current and the previous image. If for example sub image #3 should be drawn at offset x20/y20 with a size of w10/h10 and the previous sub image was shown at x15/y15 with a size of w20/h20 and the background needs to be redrawn, the function fills the pixels between the images with the background color.
The file 2DGL_DrawGIF.c of the Sample folder shows how to use the function.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_GIF_DrawSubEx()

Description

Draws the given sub image of a gif file, which does not have to be loaded into memory, at a specified position in the current window.

Prototype

```
int GUI_GIF_DrawSubEx(GUI_GET_DATA_FUNC * pfGetData,
                      void * p, int x0, int  y0, int Index);
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.
x0	X-position of the upper left corner of the bitmap in the display.
y0	Y-position of the upper left corner of the bitmap in the display.
Index	Zero-based index of sub image to be shown.

Return value

Zero on success, nonzero if the function fails.

Additional information

This function is used for drawing gif images if not enough RAM is available to load the whole file into memory. The GUI library then calls the function pointed by the parameter pfGetData to read the data.
For more details, refer to the "GUI_GIF_DrawEx()" on page 156.

GUI_GIF_DrawSubScaled()

Description

Draws the given sub image of a gif file, which has been loaded into memory, at a specified position in the current window using scaling.

Prototype

```
int GUI_GIF_DrawSubScaled(const void * pGIF, U32 NumBytes, int x0, int y0,
                          int Index, int Num, int Denom);
```

Parameter	Description
pGif	Pointer to the start of the memory area in which the gif file resides.
NumBytes	Number of bytes of the gif file.
x0	X-position of the upper left corner of the bitmap in the display.
y0	Y-position of the upper left corner of the bitmap in the display.
Index	Zero-based index of sub image to be shown.
Num	Numerator to be used for scaling.
Denom	Denominator used for scaling.

Return value

Zero on success, nonzero if the function fails.

Additional information

The function scales the image by building a fraction with the given numerator and denominator. If for example an image should be shrunk to 2/3 of size the parameter Num should be 2 and Denom should be 3.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_GIF_DrawSubScaledEx()

Description

Draws the given sub image of a gif file, which does not have to be loaded into memory, at a specified position in the current window using scaling.

Prototype

```
int GUI_GIF_DrawSubScaledEx(GUI_GET_DATA_FUNC * pfGetData,
                            void * p,     int x0,  int y0,
                            int    Index, int Num, int Denom);
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.
x0	X-position of the upper left corner of the bitmap in the display.
y0	Y-position of the upper left corner of the bitmap in the display.
Index	Zero-based index of sub image to be shown.
Num	Numerator to be used for scaling.
Denom	Denominator used for scaling.

Return value

Zero on success, nonzero if the function fails.

Additional information

The function scales the image by building a fraction with the given numerator and denominator. If for example an image should be shrunk to 2/3 of size the parameter Num should be 2 and Denom should be 3.

GUI_GIF_GetComment()

Description

Returns the given comment from a GIF image, which has been loaded into memory.

Prototype

```
int GUI_GIF_GetComment(const void * pGIF, U32 NumBytes,
                       U8 * pBuffer, int MaxSize, int Index);
```

Parameter	Description
pGIF	Pointer to the start of the memory area in which the gif file resides.
NumBytes	Number of bytes of the gif file.
pBuffer	Pointer to a buffer to be filled with the comment.
MaxSize	Size of the buffer.
Index	Zero based index of comment to be returned.

Return value

0 on success, != 0 on error.

Additional information

A GIF file can contain 1 or more comments. The function copies the comment into the given buffer. If the comment is larger than the given buffer only the bytes which fit into the buffer will be copied.
The file 2DGL_DrawGIF.c of the Sample folder shows how to use the function.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_GIF_GetCommentEx()

Description

Returns the given comment from a GIF image, which does not have to be loaded into memory.

Prototype

```
int GUI_GIF_GetCommentEx(GUI_GET_DATA_FUNC * pfGetData, void * p,
                         U8 * pBuffer, int MaxSize, int Index);
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.
pBuffer	Pointer to a buffer to be filled with the comment.
MaxSize	Size of the buffer.
Index	Zero based index of comment to be returned.

Return value

0 on success, != 0 on error.

Additional information

For details, refer to "GUI_GIF_GetComment()" on page 158.

GUI_GIF_GetImageInfo()

Description

Returns information about the given sub image of a GIF file, which has been loaded into memory.

Prototype

```
int GUI_GIF_GetImageInfo(const void * pGIF, U32 NumBytes,
                         GUI_GIF_IMAGE_INFO * pInfo, int Index);
```

Parameter	Description
pGIF	Pointer to the start of the memory area in which the gif file resides.
NumBytes	Number of bytes of the gif file.
pInfo	Pointer to a GUI_GIF_IMAGE_INFO structure which will be filled by the function.
Index	Zero based index of sub image.

Return value

0 on success, != 0 on error.

Elements of GUI_GIF_IMAGE_INFO

Data type	Element	Description
int	xPos	X position of the last drawn image.
int	yPos	Y position of the last drawn image.
int	xSize	X size of the last drawn image.
int	ySize	Y size of the last drawn image.
int	Delay	Time in 1/100 seconds the image should be shown in a movie.

Additional information

If an image needs be shown as a movie this function should be used to get the time the sub image should be visible and the next sub image should be shown.
If the delay member is 0 the image should be visible for 1/10 second.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_GIF_GetImageInfoEx()

Description

Returns information about the given sub image of a GIF file, which needs not to be loaded into memory.

Prototype

```
int GUI_GIF_GetImageInfoEx(GUI_GET_DATA_FUNC * pfGetData, void * p,
                           GUI_GIF_IMAGE_INFO * pInfo, int Index);
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.
pInfo	Pointer to a GUI_GIF_IMAGE_INFO structure which will be filled by the function.
Index	Zero based index of sub image.

Return value

0 on success, != 0 on error.

Additional information

For more details, refer to "GUI_GIF_GetImageInfo()" on page 159.

GUI_GIF_GetInfo()

Description

Returns an information structure with information about the size and the number of sub images within the given GIF file, which has been loaded into memory.

Prototype

```
int GUI_GIF_GetInfo(const void * pGIF, U32 NumBytes, GUI_GIF_INFO * pInfo);
```

Parameter	Description
pGIF	Pointer to the start of the memory area in which the gif file resides.
NumBytes	Number of bytes of the gif file.
pInfo	Pointer to a GUI_GIF_INFO structure which will be filled by this function.

Return value

0 on success, != 0 on error.

Elements of GUI_GIF_INFO

Data type	Element	Description
int	XSize	Pixel size in X of the image.
int	YSize	Pixel size in Y of the image.
int	NumImages	Number of sub images in the file.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_GIF_GetInfoEx()

Description

Returns an information structure with information about the size and the number of sub images within the given GIF file, which needs not to be loaded into memory.

Prototype

```
int GUI_GIF_GetInfoEx(GUI_GET_DATA_FUNC * pfGetData, void * p,
                      GUI_GIF_INFO * pInfo);;
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.
pInfo	Pointer to a GUI_GIF_INFO structure which will be filled by this function.

Return value

0 on success, != 0 on error.

Elements of GUI_GIF_INFO

Data type	Element	Description
int	XSize	Pixel size in X of the image.
int	YSize	Pixel size in Y of the image.
int	NumImages	Number of sub images in the file.

GUI_GIF_GetXSize()

Description

Returns the X-size of a specified GIF image, which has been loaded into memory.

Prototype

```
int GUI_GIF_GetXSize(const void * pGIF);
```

Parameter	Description
pGIF	Pointer to the start of the memory area in which the gif file resides.

Return value

X-size of the GIF image.

GUI_GIF_GetXSizeEx()

Description

Returns the X-size of a specified GIF image, which needs not to be loaded into memory.

Prototype

```
int GUI_GIF_GetXSizeEx(GUI_GET_DATA_FUNC * pfGetData, void * p);
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.

Return value

X-size of the GIF image.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_GIF_GetYSize()

Description

Returns the Y-size of a specified GIF image, which has been loaded into memory.

Prototype

```
int GUI_GIF_GetYSize(const void * pGIF);;
```

Parameter	Description
pGIF	Pointer to the start of the memory area in which the bmp file resides.

Return value

Y-size of the GIF image.

GUI_GIF_GetYSizeEx()

Description

Returns the Y-size of a specified GIF image, which needs not to be loaded into memory.

Prototype

```
int GUI_GIF_GetYSizeEx(GUI_GET_DATA_FUNC * pfGetData, void * p);
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, please refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.

Return value

Y-size of the GIF image.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

10.4 PNG file support

The PNG (Portable Network Graphics) format is an image format which offers lossless data compression and alpha blending by using a non-patented data compression method. Version 1.0 of the PNG specification has been released in 1996. Since the end of 2003 PNG is an international standard (ISO/IEC 15948).
The emWin implementation of PNG support is based on the 'libpng' library from Glenn Randers-Pehrson, Guy Eric Schalnat and Andreas Dilger which is freely available under www.libpng.org. It is used in emWin under the copyright notice in `GUI\PNG\png.h` which allows using the library without any limitation.
The `PNG` library of emWin is available under www.segger.com/link/emwin_png.zip.

10.4.1 Converting a PNG file to C source

Under some circumstances it can be useful to add a PNG file as C file to the project. This can be done by exactly the same way as described before under 'JPEG file support'. Further the bitmap converter is able to load PNG files and can convert them into C bitmap files.

10.4.2 Displaying PNG files

The graphic library first decodes the graphic information. If the image has to be drawn the decoding process takes considerable time. If a PNG file is used in a frequently called callback routine of the window manager, the decoding process can take a considerable amount of time. The calculation time can be reduced by the use of memory devices. The best way would be to draw the image first into a memory device. In this case the decompression would be executed only one time. For more information about memory devices, refer to the chapter "Memory Devices" on page 247.

10.4.3 Memory usage

The PNG decompression uses app. 21Kbytes of RAM for decompression independent of the image size and a size dependent amount of bytes. The RAM requirement can be calculated as follows:

App. RAM requirement = (X-Size + 1) * Y-Size * 4 + 21Kbytes

10.4.4 PNG file API

The table below lists the available PNG file related routines in alphabetical order. Detailed descriptions follows:#

Routine	Explanation
GUI_PNG_Draw()	Draws the PNG file which has been loaded into memory.
GUI_PNG_DrawEx()	Draws the PNG file which needs not to be loaded into memory.
GUI_PNG_GetXSize()	Returns the X-size of a bitmap loaded into memory.
GUI_PNG_GetXSizeEx()	Returns the X-size of a bitmap which needs not to be loaded into memory.
GUI_PNG_GetYSize()	Returns the Y-size of a bitmap loaded into memory.
GUI_PNG_GetYSizeEx()	Returns the Y-size of a bitmap which needs not to be loaded into memory.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_PNG_Draw()

Description

Draws a png file, which has been loaded into memory, at a specified position in the current window.

Prototype

```
int GUI_PNG_Draw(const void * pFileData, int FileSize, int x0, int y0);
```

Parameter	Description
pFileData	Pointer to the start of the memory area in which the png file resides.
FileSize	Number of bytes of the jpeg file.
x0	X-position of the upper left corner of the bitmap in the display.
y0	Y-position of the upper left corner of the bitmap in the display.

Return value

Zero on success, nonzero if the function fails. (The current implementation always returns 0)

Additional information

The Sample folder contains the example 2DGL_DrawPNG.c which shows how to use the function.

GUI_PNG_DrawEx()

Description

Draws a png file, which does not have to be loaded into memory, at a specified position in the current window.

Prototype

```
int GUI_PNG_DrawEx(GUI_GET_DATA_FUNC * pfGetData, void * p, int x0, int y0);
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.
x0	X-position of the upper left corner of the bitmap in the display.
y0	Y-position of the upper left corner of the bitmap in the display.

Return value

Zero on success, nonzero if the function fails.

Additional information

This function is used for drawing png if not enough RAM is available to load the whole file into memory. The PNG library then calls the function pointed by the parameter pfGetData to read the data.
The GetData function should return the number of available bytes. This could be less or equal the number of requested bytes. The function needs at least to return 1 new byte. Note that the PNG library internally allocates a buffer for the complete image. This can not be avoided by using this function.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_PNG_GetXSize()

Description

Returns the X-size of a specified PNG image, which has been loaded into memory.

Prototype

```
int GUI_PNG_GetXSize(const void * pFileData, int FileSize);
```

Parameter	Description
pFileData	Pointer to the start of the memory area in which the png file resides.
FileSize	Size of the file in bytes.

Return value

X-size of the PNG image.

GUI_PNG_GetXSizeEx()

Description

Returns the X-size of a specified PNG image, which needs not to be loaded into memory.

Prototype

```
int GUI_PNG_GetXSizeEx(GUI_GET_DATA_FUNC * pfGetData, void * p);
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.

Return value

X-size of the PNG image.

GUI_PNG_GetYSize()

Description

Returns the Y-size of a specified PNG image, which has been loaded into memory.

Prototype

```
int GUI_PNG_GetYSize(const void * pFileData, int FileSize);
```

Parameter	Description
pFileData	Pointer to the start of the memory area in which the png file resides.
FileSize	Size of the file in bytes.

Return value

Y-size of the PNG image.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_PNG_GetYSizeEx()

Description

Returns the X-size of a specified PNG image, which needs not to be loaded into memory.

Prototype

```
int GUI_PNG_GetYSizeEx(GUI_GET_DATA_FUNC * pfGetData, void * p);
```

Parameter	Description
pfGetData	Pointer to a function which is called for getting data. For details about the GetData function, refer to "Getting data with the ...Ex() functions" on page 167.
p	Void pointer passed to the function pointed by pfGetData.

Return value

Y-size of the PNG image.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

10.5 Getting data with the ...Ex() functions

As well as streamed bitmaps, using BMP, GIF, JPEG and PNG files also works without loading the whole image into RAM. For this case the ...Ex() functions can be used. Common for all of these functions is the use of a 'GetData' function. Please note that the 'GetData' function has to work slightly different depending on the actual task it is used for. See table of parameters and examples below.

Prototype of the 'GetData' function

```
int GUI_GET_DATA_FUNC(void     * p,        const U8 * * ppData,
                      unsigned   NumBytes, U32          Off)
```

Parameter	Description
p	Application defined void pointer.
ppData	BMP, GIF & JPEG: Pointer to a pointer to U8. The 'GetData' function has to set the pointer to the location the requested data resides in. Streamed bitmaps & PNG: Pointer to U8. The location the pointer points to has to be filled by the 'GetData' function.
NumBytesReq	Number of requested bytes.
StartOfFile	If this flag is 1, the data pointer should be set to the beginning of the data stream.

Example (BMP, GIF and JPEG)

The following code excerpt shows how to implement a 'GetData' function for usage with BMP, GIF and JPEG data:

```
static char _acBuffer[0x200];

int APP_GetData(void * p, const U8 * * ppData, unsigned NumBytesReq, U32 Off) {
  HANDLE * phFile;
  DWORD    NumBytesRead;

  phFile = (HANDLE *)p;
  //
  // Check buffer size
  //
  if (NumBytesReq > sizeof(_acBuffer)) {
    NumBytesReq = sizeof(_acBuffer);
  }
  //
  // Set file pointer to the required position
  //
  SetFilePointer(*phFile, Off, 0, FILE_BEGIN);
  //
  // Read data into buffer
  //
  ReadFile(*phFile, _acBuffer, NumBytesReq, &NumBytesRead, NULL);
  //
  // Set data pointer to the beginning of the buffer
  //
  *ppData = _acBuffer;
  //
  // Return number of available bytes
  //
  return NumBytesRead;
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Example (PNG and streamed bitmap)

The following code excerpt shows how to implement a 'GetData' function for usage with PNG and streamed bitmap data:

```
static char acBuffer[0x200];

int APP_GetData(void * p, const U8 * * ppData, unsigned NumBytesReq, U32 Off) {
  HANDLE * phFile;
  DWORD    NumBytesRead;
  U8     * pData;

  pData  = (U8 *)*ppData;
  phFile = (HANDLE *)p;
  //
  // Set file pointer to the required position
  //
  SetFilePointer(*phFile, Off, 0, FILE_BEGIN);
  //
  // Read data into buffer
  //
  ReadFile(*phFile, pData, NumBytesReq, &NumBytesRead, NULL);
  //
  // Return number of available bytes
  //
  return NumBytesRead;
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 11

Fonts

This chapter describes the various methods of font support in emWin. The most common fonts are shipped with emWin as C font files. All of them contain the ASCII character set and most of them also the characters of ISO 8859-1. In fact, you will probably find that these fonts are fully sufficient for your application. For detailed information about the individual fonts, refer to "Standard fonts" on page 192.
emWin is compiled for 8-bit characters, allowing for a maximum of 256 different character codes out of which the first 32 are reserved as control characters. The characters that are available depends on the selected font.
For accessing the full Unicode area of 65536 possible characters emWin supports UTF8 decoding which is described in the chapter "Foreign Language Support" on page 801.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

11.1 Introduction

The first way of font support was the possibility to use C files with font definitions containing bitmaps with 1bpp pixel information for each character. This kind of font support was limited to use only the fonts which are compiled with the application.
Over time, the font support has been improved regarding font quality, ROM requirement, performance, scalability and the ability to add further fonts at run time.
In the meantime emWin fonts cover antialiasing, drawing of compound characters like required in Thai language, fonts located on external non addressable media and TrueType support. Except the TrueType font format, which is a vector font, all other kinds of fonts are bitmap fonts.

11.2 Font types

emWin supports different internal types of fonts defined by emWin and the common used TrueType fonts.

Monospaced bitmap fonts

Each character of a monospaced bitmap font has the same size. In a proportional font each character has its own width, whereas in a monospaced font the width is defined only one time. The pixel information is saved with 1bpp and covers the whole character area.

Proportional bitmap fonts

Each character of a proportional bitmap font has the same height and its own width. The pixel information is saved with 1bpp and covers the whole character area.

Antialiased fonts with 2 bpp antialiasing information

Each character has the same height and its own width. The pixel information is saved with 2bpp antialiasing information and covers the whole character area.

Antialiased fonts with 4 bpp antialiasing information

Each character has the same height and its own width. The pixel information is saved with 4bpp antialiasing information and covers the whole character area.

Extended proportional bitmap fonts

Each character of an extended proportional bitmap font has its own height and its own width. The pixel information is saved with 1bpp and covers only the areas of the glyph bitmaps.

Extended proportional bitmap fonts with 2 bpp antialiasing information

Each character has the same height and its own width. The pixel information is saved with 2bpp antialiasing information and covers only the areas of the glyph bitmaps.

Extended proportional bitmap fonts with 4 bpp antialiasing information

Each character has the same height and its own width. The pixel information is saved with 4bpp antialiasing information and covers only the areas of the glyph bitmaps.

Extended proportional bitmap fonts, framed

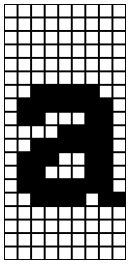
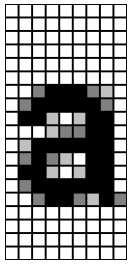
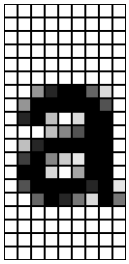

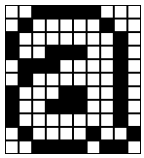
In some cases, for example in situations, where the background color is unknown at compile time, it can make sense to use a framed font. A framed font is always drawn in transparent mode regardless of the current settings. The character pixels are drawn in the currently selected foreground color and the frame is drawn in background color. A good contrast between foreground and background color makes sure, that the text can be read regardless of the background.
Note that this type of font is not suitable for compound characters like in Thai language. It is also not suitable for Arabic fonts. The picture below shows some framed text in front of a photo:

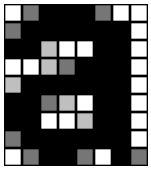
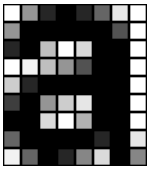
 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG



Table of font types

The following table shows the difference between the font types. The pictures only show the pixel information saved in the font file:

Prop. bitmap font	Prop. bitmap font, AA2	Prop. bitmap font, AA2	Ext. prop. bitmap font	Ext. prop. bitmap font, framed
				

Ext. prop. bitmap font, AA2	Ext. prop. bitmap font, AA4
	

TrueType vector fonts

The TrueType font support of emWin means support for the TrueType font file format described later in this chapter.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

11.3 Font formats

The following explains the differences between the supported font formats, when to use them and what is required to be able to use them.

11.3.1 C file format

This is the most common way of using fonts. When using fonts in form of C files, we recommend compiling all available fonts and linking them as library modules or putting all of the font object files in a library which you can link with your application. This way you can be sure that only the fonts which are needed by your application are actually linked. The font converter (described in a separate manual) may be used to create additional fonts.

When to use

This format should be used if the fonts are known at compile time and if there is enough addressable memory available for the font data.

Requirements

In order to be able to use a font C file in your application, the following requirements must be met:

- The font file is in a form compatible with emWin as C file, object file or library.
- The font file is linked with your application.
- The font declaration is contained in the application.

Format description

A font C file contains at first the pixel information of all characters included by the font. It is followed by a character information table with size information about each character. This table is followed by range information structures for each contiguous area of characters contained in the font file, whereas each structure points to the next one. Note that this method can enlarge a font file a lot if using many separate characters. After the range information structures a `GUI_FONT` structure follows with the main information like type, pixel size and so on of the font.

11.3.2 System Independent Font (SIF) format

System independent fonts are binary data blocks containing the font information. The font converter can be used to create system independent fonts. This tool is not part of the basic package. A short description follows later in this chapter.

When to use

This format should be used if the fonts are not known at compile time and if there is enough addressable memory available for the font data.

Requirements

In order to be able to use a SIF font file in your application, it is required that the whole file reside in addressable memory (ROM or RAM).

Format description

The structure of a SIF file is nearly the same as of a C file. It contains the same information in binary format. The sequence of the file components is vice versa: General font information followed by range information structures, character information table and at least pixel information of all characters.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

11.3.3 External Bitmap Font (XBF) format

As well as SIF fonts XBF fonts are binary data blocks containing the font information and the font converter can be used to create XBF files. The Font converter is not part of the emWin basic package. For details about how to create external binary fonts, please refer to the font converter documentation.
Contrary to other fonts, XBF fonts do not have to reside in memory when they are used, whereas all other kinds of emWin fonts need to reside completely in memory. The XBF font file can remain on any external media while it is used. Data access is done by a 'GetData' callback function whereas all other fonts need to reside in addressable memory (RAM or ROM). The advantage of XBF fonts is that it is possible to use very large fonts on systems with little memory.

When to use

This format should be used if there is not enough addressable memory available for the font data and if there is any kind of external media available for storing the fonts.

Requirements

In order to be able to use a XBF font in your application, a 'GetData' callback function is required which is responsible for getting font data.

Format description

This format differs in general from SIF and C file format. At first it contains a small block of general font information including the lowest character code and the highest character code. It is followed by an access table containing offset and data size information for each character between lowest and highest character code. If a character does not exist, this information is zero for the according character. The access table is followed by the character information of all characters containing pixel data and character size information.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

11.3.4 TrueType Font (TTF) format

TrueType is an outline font standard developed by Apple Computer. It offers font developers a high degree of control over how their fonts are displayed at various font heights. Contrary to bitmap fonts which are based on bitmaps for each character, TrueType fonts are based on vector graphics. The advantage of the vector representation is the loss-free scalability.
This implies that each character first needs to be rasterized into a bitmap before it is drawn. To avoid rasterization each time a character is drawn the bitmap data normally is cached by the font engine. This requires a fast CPU and enough RAM.
The emWin TTF package is not part of the shipment. It is freely available under www.segger.com/link/emwin_freetype.zip.

Licensing

The emWin implementation of the TTF support is based on the FreeType font library from David Turner, Robert Wilhelm and Werner Lemberg which is freely available under www.freetype.org. It is used in emWin under the FreeType license which can be found under GUI\TrueType\FTL.txt. It has been slightly adapted and a 'glue' layer with GUI-functions has been added.

When to use

This format should be used if fonts need to be scaleable at run-time.

Requirements

- CPU: TTF support works only on 32 bit CPUs. Our definition of a 32bit CPU: `sizeof(int)` = 4.
- ROM: The ROM requirement of the TTF engine is app. 250K. The exact size depends on the CPU, the compiler and the optimization level of the compiler.
- RAM: The RAM requirement of the library depends a lot on the used fonts. The basic RAM requirement of the TTF engine is app. 50K. When creating a GUI font with `GUI_TTF_CreateFont()` the font engine loads all font tables defined in the TTF file required to generate the characters. The table sizes varies a lot between the fonts. The additional required amount of RAM for creating a font can be between a few KB up to more than 1MB. For typical fonts 80-300 Kbytes are required. It depends on the used font file how much RAM is required. At least the TTF engine requires a bitmap cache. Per default the engine uses 200K for the cache. This should be enough for most applications.
  The TTF engine allocates its memory via the non emWin functions `malloc()` and `free()`. It must be made sure that these functions work before using the TTF engine.

Format description

For details about the TTF format, refer to the information available under www.apple.com.

11.4 Converting a TTF file to C source

Under some circumstances it can be useful to add a TTF file as 'C' file to the project, for example if no file system is available. This can be done by using the tool `Bin2C.exe` shipped with emWin. It can be found in the Tools subfolder. It converts the given binary file (in this case the TTF file) to a 'C' file.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

11.5 Declaring custom fonts

The most recommended way of declaring the prototypes of custom fonts is to put them into an application defined header file. This should be included from each application source file which uses these fonts. It could look like the following example:

```
#include "GUI.h"

extern GUI_CONST_STORAGE GUI_FONT GUI_FontApp1;
extern GUI_CONST_STORAGE GUI_FONT GUI_FontApp2;
```

Note that this kind of declaring prototypes does not work if the fonts should be used with emWin configuration macros like `BUTTON_FONT_DEFAULT` or similar. In this case the fonts need to be declared in the configuration file `GUIConf.h`. The declaration in this case can look like the following example:

```
typedef struct GUI_FONT GUI_FONT;

extern const GUI_FONT GUI_FontApp1;

#define BUTTON_FONT_DEFAULT &GUI_FontApp1
#define EDIT_FONT_DEFAULT   &GUI_FontApp1
```

The `typedef` is required because the structure `GUI_FONT` has not been defined at the early point where `GUIConf.h` is included by emWin.

11.6 Selecting a font

emWin offers different fonts, one of which is always selected. This selection can be changed by calling the function `GUI_SetFont()` or one of the `GUI_XXX_CreateFont()` functions, which select the font to use for all text output to follow for the current task.
If no font has been selected by your application, the default font is used. This default is configured in `GUIConf.h` and can be changed. You should make sure that the default font is one that you are actually using in your application because the default font will be linked with your application and will therefore use up ROM memory.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

11.7 Font API

The table below lists the available font-related routines in alphabetical order within their respective categories. Detailed descriptions can be found in the sections that follow.

Routine	Explanation
C file related font functions	
GUI_SetDefaultFont()	Sets the default font
GUI_SetFont()	Sets the current font
'SIF' file related font functions	
GUI_SIF_CreateFont()	Creates and selects a font by passing a pointer to system independent font data.
GUI_SIF_DeleteFont()	Deletes a font created by GUI_SIF_CreateFont()
'TTF' file related font functions	
GUI_TTF_CreateFont()	Creates a GUI font from a TTF font file.
GUI_TTF_DestroyCache()	Destroys the cache of the TTF engine.
GUI_TTF_Done()	Frees all dynamically allocated memory of the TTF engine.
GUI_TTF_GetFamilyName()	Returns the family name of the font.
GUI_TTF_GetStyleName()	Returns the style name of the font.
GUI_TTF_SetCacheSize()	Can be used to set the default size of the TTF cache.
'XBF' file related font functions	
GUI_XBF_CreateFont()	Creates and selects a font by passing a pointer to a callback function, which is responsible for getting data from the XBF font file.
GUI_XBF_DeleteFont()	Deletes a font created by GUI_XBF_CreateFont()
Common font-related functions	
GUI_GetCharDistX()	Returns the width in pixels (X-size) of a specified character in the current font.
GUI_GetFont()	Returns a pointer to the currently selected font.
GUI_GetFontDistY()	Returns the Y-spacing of the current font.
GUI_GetFontInfo()	Returns a structure containing font information.
GUI_GetFontSizeY()	Returns the height in pixels (Y-size) of the current font.
GUI_GetLeadingBlankCols()	Returns the number of leading blank pixel columns of the given character.
GUI_GetStringDistX()	Returns the X-size of a text using the current font.
GUI_GetTextExtend()	Evaluates the size of a text using the current font
GUI_GetTrailingBlankCols()	Returns the number of trailing blank pixel columns of the given character.
GUI_GetYDistOfFont()	Returns the Y-spacing of a particular font.
GUI_GetYSizeOfFont()	Returns the Y-size of a particular font.
GUI_IsInFont()	Evaluates whether a specified character is in a particular font.
GUI_SetDefaultFont()	Sets the default font to be used after GUI_Init().

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

11.8 C file related font functions

GUI_SetDefaultFont()

Description

Sets the font to be used by default for text output.

Prototype

```
void GUI_SetDefaultFont(const GUI_FONT GUI_UNI_PTR * pFont);
```

Parameter	Description
pFont	Pointer to the font to be selected as default

Additional information

This function is intended to be used in GUI_X_Config(). Defining GUI_DEFAULT_FONT is not mandatory anymore. If there is neither defined GUI_DEFAULT_FONT nor GUI_SetDefaultFont is called, GUI_Font6x8 will be set as the default Font. If none of the emWin fonts shall be used, GUI_DEFAULT_FONT has to be defined by NULL and a custom font needs to be set as default with this function.

GUI_SetFont()

Description

Sets the font to be used for text output.

Prototype

```
const GUI_FONT * GUI_SetFont(const GUI_FONT * pNewFont);
```

Parameter	Description
pFont	Pointer to the font to be selected and used.

Return value

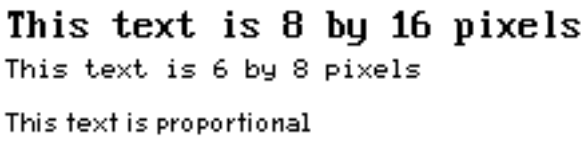
Returns a pointer to the previously selected font so that it may be buffered.

Examples

Displays example text in 3 different sizes, restoring the former font afterwards:

```
const GUI_FONT GUI_FLASH * OldFont;
OldFont = GUI_SetFont(&GUI_Font8x16);                // Buffer old font
GUI_DispStringAt("This text is 8 by 16 pixels",0,0);
GUI_SetFont(&GUI_Font6x8);
GUI_DispStringAt("This text is 6 by 8 pixels",0,20);
GUI_SetFont(&GUI_Font8);
GUI_DispStringAt("This text is proportional",0,40);
GUI_SetFont(OldFont);                                 // Restore old font
```


Screen shot of above example:



Displays text and value in different fonts:

```
GUI_SetFont(&GUI_Font6x8);
GUI_DispString("The result is: "); // Disp text
GUI_SetFont(&GUI_Font8x8);
GUI_DispDec(42,2);                 // Disp value
```

Screen shot of above example:



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

11.9 'SIF' file related font functions

GUI_SIF_CreateFont()

Description

Sets the font to be used by passing a pointer to system independent font data.

Prototype

```
void GUI_SIF_CreateFont(void                * pFontData,
                        GUI_FONT            * pFont,
                        const GUI_SIF_TYPE * pFontType);
```

Parameter	Description
pFontData	Pointer to the system independent font data.
pFont	Pointer to a GUI_FONT structure in RAM filled by the function.
pFontType	See table below.

Permitted values for element pFontType	
GUI_SIF_TYPE_PROP	Should be used if the parameter pFont points to a proportional font.
GUI_SIF_TYPE_PROP_EXT	Should be used if the parameter pFont points to an extended proportional font.
GUI_SIF_TYPE_PROP_FRM	Should be used if the parameter pFont points to an extended proportional framed font.
GUI_SIF_TYPE_PROP_AA2	Should be used if the parameter pFont points to a proportional font, which uses 2bpp antialiasing.
GUI_SIF_TYPE_PROP_AA4	Should be used if the parameter pFont points to a proportional font, which uses 4bpp antialiasing.
GUI_SIF_TYPE_PROP_AA2_EXT	Should be used if the parameter pFont points to an extended proportional font, which uses 2bpp antialiasing.
GUI_SIF_TYPE_PROP_AA4_EXT	Should be used if the parameter pFont points to an extended proportional font, which uses 4bpp antialiasing.

Additional information

Contrary to the emWin standard fonts which must be compiled and linked with the application program, system independent fonts (SIF) are binary data blocks containing the font information. The font converter can be used to create system independent fonts. This tool is not part of the basic package. A short description follows later in this chapter. For details about how to create system independent fonts, refer to the font converter documentation.
When using this function emWin needs to fill a GUI_FONT structure with the font information. The user needs to pass a pointer to this structure in the parameter pFont. The contents of this structure must remain valid during the use of the font.
The function does not know what kind of font should be created. To tell the function the type of the font to be created it must be passed in the parameter pFontType. This has been done to avoid linkage of code which is not required.

Example

```
static GUI_FONT _Font; /* Font structure in RAM */

void MainTask(void) {
  GUI_Init();
  GUI_SIF_CreateFont(_DownloadedFont, &_Font, GUI_SIF_TYPE_PROP);
  GUI_DispString("Hello World!");
  while (1) {
    GUI_Exec();
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
  }
}
```

GUI_SIF_DeleteFont()

Description

Deletes a font pointed by the parameter `pFont`.

Prototype

```
void GUI_SIF_DeleteFont(GUI_FONT * pFont);
```

Parameter	Description
pFont	Pointer to the font to be deleted.

Additional information

After using a font created with `GUI_SIF_CreateFont()` the font should be deleted if not used anymore.

Example

```
GUI_FONT _Font; /* Font structure in RAM */
GUI_SIF_CreateFont(_DownloadedFont, &_Font, GUI_SIF_TYPE_PROP);
/*
  Use the font
*/
GUI_SIF_DeleteFont(&_Font);
```

11.10 ’TTF’ file related font functions

The emWin implementation of TTF file support is based on the FreeType font library from David Turner, Robert Wilhelm and Werner Lemberg. For details, refer to “True-Type Font (TTF) format” on page 174.

GUI_TTF_CreateFont()

Description

Creates and selects an emWin font by using a TTF font file.

Prototype

```
int GUI_TTF_CreateFont(GUI_FONT * pFont, GUI_TTF_CS * pCS);
```

Parameter	Description
pFont	Pointer to a GUI_FONT structure in RAM filled by the function.
pCS	Pointer to a GUI_TTF_CS structure containing the creation parameters.

Return value

0 on success, 1 on error.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Elements of GUI_TTF_CS

Data type	Element	Description
GUI_TTF_DATA *	pTTF	Pointer to GUI_TTF_DATA structure which contains location and size of the font file to be used.
PixelHeight	PixelHeight	Pixel height of new font. It means the height of the surrounding rectangle between the glyphs 'g' and 'f'. Note that it is not the distance between two lines of text. With other words the value returned by GUI_GetFontSizeY() is not identical with this value.
FaceIndex	FaceIndex	Some font files can contain more than one font face. In case of more than one face this index specifies the zero based face index to be used to create the font. Usually 0.

Elements of GUI_TTF_DATA

Data type	Element	Description
const void *	pData	Pointer to TTF font file in addressable memory area.
NumBytes	NumBytes	Size of file in bytes.

Additional information

When using the function the first time it initializes the TTF engine and the internal cache system. If the cache should use other values as defined per default it needs to be configured before the first call of this function. For details how to configure the cache, refer to "GUI_TTF_SetCacheSize()" on page 182.
The internal data cache manages the complete mechanism of creating fonts and caching bitmap data. Font faces are uniquely identified from the cache by the address given in parameter pTTF and the parameter FaceIndex, which normally is 0. If the same font file for example should be used for creating fonts of different sizes the parameter pTTF should point to the same location of a GUI_TTF_DATA structure.
The parameter PixelHeight specifies the height of the surrounding rectangle between the glyphs 'g' and 'f'. Note that the value of PixelHeight this is not the same as the offset from one line of text to the next line.

Example

```
GUI_TTF_CS   Cs0, Cs1;
GUI_TTF_DATA Data;
GUI_FONT     Font0, Font1;
/* Set parameters for accessing the font file */
Data.pData      = aTTF;          /* Address */
Data.NumBytes   = sizeof(aTTF); /* Size */
/* Set creation parameters of first font */
Cs0.pTTF        = &Data;         /* Use address of GUI_TTF_DATA */
Cs0.PixelHeight = 24;            /* Pixel height */
Cs0.FaceIndex   = 0;             /* Initialize to 0 */
/* Set creation parameters of second font */
Cs1.pTTF        = &Data;         /* Use address of GUI_TTF_DATA */
Cs1.PixelHeight = 48;            /* Pixel height */
Cs1.FaceIndex   = 0;             /* Initialize to 0 */
/* Create 2 fonts */
GUI_TTF_CreateFont(&Font0, &Cs0);
GUI_TTF_CreateFont(&Font1, &Cs1);
/* Draw something using the fonts */
GUI_SetFont(&Font0);
GUI_DispString("Hello world\n");
GUI_SetFont(&Font1);
GUI_DispString("Hello world");
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_TTF_DestroyCache()

Description

This function frees all memory allocated by the TTF cache system and destroys the cache.

Prototype

```
void GUI_TTF_DestroyCache(void);
```

Additional information

The next time `GUI_TTF_CreateFont()` is used emWin automatically creates and initializes a new cache.

GUI_TTF_Done()

Description

This function frees all memory allocated by the TTF engine and its internal cache system.

Prototype

```
void GUI_TTF_Done(void);
```

Additional information

The next time `GUI_TTF_CreateFont()` is used emWin automatically initializes the TTF engine and creates and initializes a new cache.

GUI_TTF_GetFamilyName()

Description

The function returns the font family name defined in the font file.

Prototype

```
int GUI_TTF_GetFamilyName(GUI_FONT * pFont, char * pBuffer, int NumBytes);
```

Parameter	Description
`pFont`	Pointer to a GUI_FONT structure which has been created using `GUI_TTF_CreateFont()`.
`pBuffer`	Buffer to be filled with the family name.
`NumBytes`	Size of buffer in bytes.

Return value

0 on success, 1 on error.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_TTF_GetStyleName()

Description

The function returns the style name (bold, regular, ...) defined in the font file.

Prototype

```
int GUI_TTF_GetStyleName(GUI_FONT * pFont, char * pBuffer, int NumBytes);
```

Parameter	Description
pFont	Pointer to a GUI_FONT structure which has been created using GUI_TTF_CreateFont().
pBuffer	Buffer to be filled with the style name.
NumBytes	Size of buffer in bytes.

Return value

0 on success, 1 on error.

GUI_TTF_SetCacheSize()

Description

Sets the size parameters used to create the cache on the first call of GUI_TTF_CreateFont().

Prototype

```
void GUI_TTF_SetCacheSize(unsigned MaxFaces,
                          unsigned MaxSizes, U32 MaxBytes);
```

Parameter	Description
MaxFaces	Maximum number of font faces the cache should be able to handle simultaneously. 0 selects default value.
MaxSizes	Maximum number of size objects the cache should be able to handle simultaneously. 0 selects default value.
MaxBytes	Maximum number of bytes used for the bitmap cache. 0 selects default value.

Additional information

If for example 3 font faces should be used, each with 2 sizes, the cache should be able to manage 6 size objects.
The default values used by the TTF engine are: 2 faces, 4 size objects and 200K of bitmap data cache.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

11.11 'XBF' file related font functions

GUI_XBF_CreateFont()

Description

Creates and selects a font by passing a pointer to a callback function, which is responsible for getting data from the XBF font file.

Prototype

```
int GUI_XBF_CreateFont(GUI_FONT              * pFont,
                       GUI_XBF_DATA          * pXBF_Data,
                       const GUI_XBF_TYPE    * pFontType,
                       GUI_XBF_GET_DATA_FUNC * pfGetData,
                       void                  * pVoid);
```

Parameter	Description
pFont	Pointer to a GUI_FONT structure in RAM filled by the function.
pXBF_Data	Pointer to a GUI_XBF_DATA structure in RAM filled by the function.
pFontType	See table below.
pfGetData	Pointer to a callback function which is responsible for getting data from the font file. See prototype below.
pVoid	Application defined pointer passed to the 'GetData' callback function.

Permitted values for element pFontType	
GUI_XBF_TYPE_PROP	Should be used if the parameter pFont points to a proportional font.
GUI_XBF_TYPE_PROP_EXT	Should be used if the parameter pFont points to an extended proportional font.
GUI_XBF_TYPE_PROP_FRM	Should be used if the parameter pFont points to an extended framed proportional font.
GUI_XBF_TYPE_PROP_AA2_EXT	Should be used if the parameter pFont points to an extended proportional font, which uses 2bpp antialiasing.
GUI_XBF_TYPE_PROP_AA4_EXT	Should be used if the parameter pFont points to an extended framed proportional font, which uses 4bpp antialiasing.

GUI_XBF_GET_DATA_FUNC - Description

```
int GUI_XBF_GET_DATA_FUNC(U32    Off,   U16    NumBytes,
                          void * pVoid, void * pBuffer);
```

The function has to set pBuffer to point to the location the requested data resides in. For an example of a 'GetData' function, please refer to "Getting data with the ...Ex() functions" on page 167.

Additional information

The parameter pfGetData should point to an application defined callback routine, which is responsible for getting data from the font. Parameter pVoid is passed to the callback function when requesting font data. It can be used for example to pass a file handle to the callback function.
The function requires pointers to a GUI_FONT structure and a GUI_XBF_DATA structure. The function will fill these structures with font information. It is required, that the contents of these structures remain valid during the usage of the font. The function does not know what kind of XBF font has to be created, so the parameter pFontType has to be used to tell the function the type of the font to be created. This has been done to avoid unnecessary linkage of code.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

The maximum number of data bytes per character is limited to 200 per default. This should cover the most requirements. If loading a character with more bytes a warning will be generated in the debug version. The default value can be increased by adding the following define to the file GUIConf.h:

```
#define GUI_MAX_XBF_BYTES 500 // Sets the maximum number of bytes/chars to 500
```

Example

```
static  GUI_FONT     Font;     /* GUI_FONT structure in RAM */
static  GUI_XBF_DATA XBF_Data; /* GUI_XBF_DATA structure in RAM */

static int _cbGetData(U32 Off, U16 NumBytes, void * pVoid, void * pBuffer) {
  /* The pVoid pointer may be used to get a file handle */
  .../* TBD */
  /* Set file pointer to the given position */
  .../* TBD */
  /* Read the required number of bytes into the given buffer */
  .../* TBD */
}

void CreateXBF_Font(void * pVoid) {
  GUI_XBF_CreateFont(&Font,             /* Pointer to GUI_FONT structure */
                     &XBF_Data,         /* Pointer to GUI_XBF_DATA structure */
                     GUI_XBF_TYPE_PROP, /* Font type to be created */
                     _cbGetData,        /* Pointer to callback function */
                     pVoid);            /* Pointer to be passed to callback */

}
```

GUI_XBF_DeleteFont()

Description

Deletes a XBF font pointed by the parameter pFont.

Prototype

```
void GUI_XBF_DeleteFont(GUI_FONT * pFont);
```

Parameter	Description
pFont	Pointer to the font to be deleted.

Additional information

After using a font created with GUI_XBF_CreateFont() the font should be deleted if not used anymore.

11.12 Common font-related functions

GUI_GetFont()

Description

Returns a pointer to the currently selected font.

Prototype

```
const GUI_FONT * GUI_GetFont(void)
```

GUI_GetCharDistX()

Description

Returns the width in pixels (X-size) used to display a specified character in the currently selected font.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
int  GUI_GetCharDistX(U16 c);
```

Parameter	Description
c	Character to calculate width from.

GUI_GetFontDistY()

Description

Returns the Y-spacing of the currently selected font.

Prototype

```
int GUI_GetFontDistY(void);
```

Additional information

The Y-spacing is the vertical distance in pixels between two adjacent lines of text. The returned value is the YDist value of the entry for the currently selected font. The returned value is valid for both proportional and monospaced fonts.

GUI_GetFontInfo()

Description

Calculates a pointer to a GUI_FONTINFO structure of a particular font.

Prototype

```
void GUI_GetFontInfo(const GUI_FONT*pFont, GUI_FONTINFO* pfi);
```

Parameter	Description
pFont	Pointer to the font.
pfi	Pointer to a GUI_FONTINFO structure.

Additional information

The definition of the GUI_FONTINFO structure is as follows:

```
typedef struct {
  U16 Flags;
} GUI_FONTINFO;
```

The member variable flags can take the following values:

```
GUI_FONTINFO_FLAG_PROP
GUI_FONTINFO_FLAG_MONO
GUI_FONTINFO_FLAG_AA
GUI_FONTINFO_FLAG_AA2
GUI_FONTINFO_FLAG_AA4
```

Example

Gets the info of GUI_Font6x8. After the calculation, FontInfo.Flags contains the flag GUI_FONTINFO_FLAG_MONO.

```
GUI_FONTINFO FontInfo;
GUI_GetFontInfo(&GUI_Font6x8, &FontInfo);
```

GUI_GetFontSizeY()

Description

Returns the height in pixels (Y-size) of the currently selected font.

Prototype

```
int GUI_GetFontSizeY(void);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

The returned value is the `YSize` value of the entry for the currently selected font. This value is less than or equal to the Y-spacing returned by the function `GUI_GetFontDistY()`.
The returned value is valid for both proportional and monospaced fonts.

GUI_GetLeadingBlankCols()

Description


Returns the number of leading blank pixel columns in the currently selected font for the given character.

Prototype

```
int GUI_GetLeadingBlankCols(U16 c);
```

Parameter	Description
c	Character to be used.

Example



The result for the character 'B' shown in the screenshot above should be 2.

GUI_GetStringDistX()

Description

Returns the X-size used to display a specified string in the currently selected font.

Prototype

```
int  GUI_GetStringDistX(const char GUI_FAR *s);
```

Parameter	Description
s	Pointer to the string.

GUI_GetTextExtend()

Description

Calculates the size of a given string using the current font.

Prototype

```
void GUI_GetTextExtend(GUI_RECT* pRect, const char* s, int Len);
```

Parameter	Description
pRect	Pointer to GUI_RECT-structure to store result.
s	Pointer to the string.
Len	Number of characters of the string.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_GetTrailingBlankCols()

Description


Returns the number of trailing blank pixel columns in the currently selected font for the given character.

Prototype

```
int GUI_GetTrailingBlankCols(U16 c);
```

Parameter	Description
c	Character to be used.

Example



The result for the character 'B' shown in the screenshot above should be 1.

GUI_GetYDistOfFont()

Description

Returns the Y-spacing of a particular font.

Prototype

```
int  GUI_GetYDistOfFont(const GUI_FONT* pFont);
```

Parameter	Description
pFont	Pointer to the font.

Additional information

(see `GUI_GetFontDistY()`)

GUI_GetYSizeOfFont()

Description

Returns the Y-size of a particular font.

Prototype

```
int  GUI_GetYSizeOfFont(const GUI_FONT* pFont);
```

Parameter	Description
pFont	Pointer to the font.

Additional information

(see `GUI_GetFontSizeY()`)

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_IsInFont()

Description

Evaluates whether a particular font contains a specified character or not.

Prototype

```
char GUI_IsInFont(const GUI_FONT * pFont, U16 c);
```

Parameter	Description
pFont	Pointer to the font.
c	Character to be searched for.

Additional information

If the pointer pFont is set to 0, the currently selected font is used.

Example

Evaluates whether the font GUI_FontD32 contains an "X":

```
if (GUI_IsInFont(&GUI_FontD32, 'X') == 0) {
  GUI_DispString("GUI_FontD32 does not contains 'X'");
}
```

GUI_SetDefaultFont()

Description

Sets the default font to be used after GUI_Init().

Prototype

```
void GUI_SetDefaultFont(const GUI_FONT GUI_UNI_PTR * pFont);
```

Parameter	Description
pFont	Pointer to the font to be used.

11.13 Character sets

11.13.1 ASCII

emWin supports the full set of ASCII characters. These are the following 96 characters from 32 to 127:

Hex	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
2x		!		"#	$	%	&		'(	)	*	+	,	-	.	/
3x	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
4x	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
5x	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_
6x		`a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
7x	p	q	r	s	t	u	v	w	x	y	z	{	|	}	~	

Unfortunately, as ASCII stands for American Standard Code for Information Interchange, it is designed for American needs. It does not include any of the special characters used in European languages, such as Ä, Ö, Ü, á, à, and others. There is no single standard for these "European extensions" of the ASCII set of characters; several different ones exist. The one used on the Internet and by most Windows programs is ISO 8859-1, a superset of the ASCII set of characters.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

11.13.2 ISO 8859-1 Western Latin character set

emWin supports the ISO 8859-1, which defines characters as listed below:

Code	Description	Char
160	non-breaking space	
161	inverted exclamation	¡
162	cent sign	¢
163	pound sterling	£
164	general currency sign	¤
165	yen sign	¥
166	broken vertical bar	¦
167	section sign	§
168	umlaut (dieresis)	¨
169	copyright	©
170	feminine ordinal	ª
171	left angle quote, guillemotleft	«
172	not sign	¬
173	soft hyphen	
174	registered trademark	®
175	macron accent	¯
176	degree sign	°
177	plus or minus	±
178	superscript two	²
179	superscript three	³
180	acute accent	´
181	micro sign	µ
182	paragraph sign	¶
183	middle dot	·
184	cedilla	¸
185	superscript one	¹
186	masculine ordinal	º
187	right angle quote, guillemot right	»
188	fraction one-fourth	¼
189	fraction one-half	½
190	fraction three-fourth	¾
191	inverted question mark	¿
192	capital A, grave accent	À
193	capital A, acute accent	Á
194	capital A, circumflex accent	Â
195	capital A, tilde	Ã
196	capital A, dieresis or umlaut mark	Ä
197	capital A, ring	Å
198	capital A, diphthong (ligature)	Æ
199	capital C, cedilla	Ç
200	capital E, grave accent	È
201	capital E, acute accent	É
202	capital E, circumflex accent	Ê
203	capital E, dieresis or umlaut mark	Ë
204	capital I, grave accent	Ì
205	capital I, acute accent	Í
206	capital I, circumflex accent	Î
207	capital I, dieresis or umlaut mark	Ï
208	Eth, Icelandic	Ð
209	N, tilde	Ñ
210	capital O, grave accent	Ò
211	capital O, acute accent	Ó
212	capital O, circumflex accent	Ô
213	capital O, tilde	Õ
214	capital O, dieresis or umlaut mark	Ö
215	multiply sign	×

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Code	Description	Char
216	capital O, slash	Ø
217	capital U, grave accent	Ù
218	capital U, acute accent	Ú
219	capital U, circumflex accent	Û
220	capital U, dieresis or umlaut mark	Ü
221	capital Y, acute accent	Ý
222	THORN, Icelandic	Þ
223	sharp s, German (s-z ligature)	ß
224	small a, grave accent	à
225	small a, acute accent	á
226	small a, circumflex accent	â
227	small a, tilde	ã
228	small a, dieresis or umlaut mark	ä
229	small a, ring	å
230	small ae diphthong (ligature)	æ
231	cedilla	ç
232	small e, grave accent	è
233	small e, acute accent	é
234	small e, circumflex accent	ê
235	small e, dieresis or umlaut mark	ë
236	small i, grave accent	ì
237	small i, acute accent	í
238	small i, circumflex accent	î
239	small i, dieresis or umlaut mark	ï
240	small eth, Icelandic	ð
241	small n, tilde	ñ
242	small o, grave accent	ò
243	small o, acute accent	ó
244	small o, circumflex accent	õ
245	small o, tilde	õ
246	small o, dieresis or umlaut mark	ö
247	division sign	÷
248	small o, slash	ø
249	small u, grave accent	ù
250	small u, acute accent	ú
251	small u, circumflex accent	û
252	small u, dieresis or umlaut mark	ü
253	small y, acute accent	ý
254	small thorn, Icelandic	þ
255	small y, dieresis or umlaut mark	ÿ

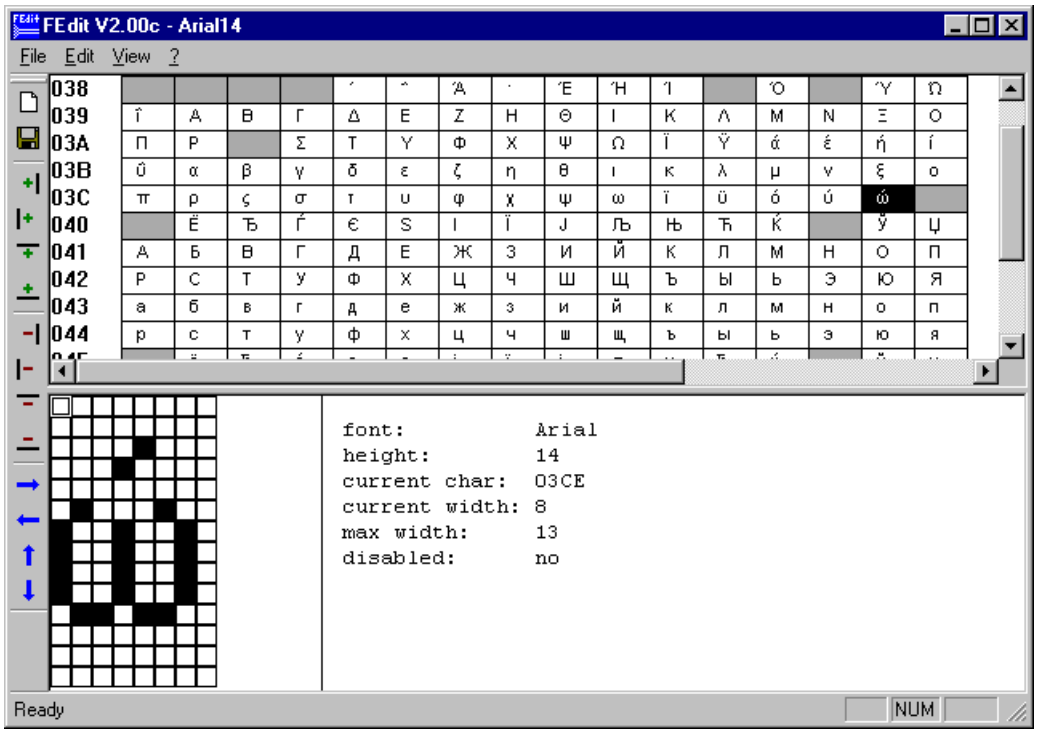
11.13.3 Unicode

Unicode is the ultimate in character coding. It is an international standard based on ASCII and ISO 8859-1. Contrary to ASCII, UNICODE requires 16-bit characters because all characters have their own code. Currently, more than 30,000 different characters are defined. However, not all of the character images are defined in emWin. It is the responsibility of the user to define these additional characters. Contact SEGGER Microcontroller GmbH & Co. KG or your distributor, as we may already have the character set that you need.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

11.14 Font converter

Fonts which can be used with emWin must be defined as `GUI_FONT` structures in C. The structures -- or rather the font data which is referenced by these structures -- can be rather large. It is very time-consuming and inefficient to generate these fonts manually. We therefore recommend using the font converter, which automatically generates C files from fonts.
The font converter is a simple Windows program. You need only to load an installed Windows font into the program, edit it if you want or have to, and save it as a C file. The C file may then be compiled, allowing the font to be shown on your display with emWin on demand.
The character codes 0x00 - 0x1F and 0x80 - 0x9F are disabled by default. The following is a example screen shot of the font converter with a font loaded:



The font converter is described in a separate documentation which can be obtained by request from SEGGER Microcontroller GmbH & Co. KG (info@segger.com).

11.14.1 Adding fonts

Once you have created a font file and linked it to the project, declare the linked font as `extern const GUI_FONT`, as shown in the example below.

Example

```
extern const GUI_FONT GUI_FontNew;

int main(void) {
  GUI_Init();
  GUI_Clear();
  GUI_SetFont(&GUI_FontNew);
  GUI_DispString("Hello world\n");
  return 0;
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

11.15 Standard fonts

emWin is shipped with a selection of fonts which should cover most of your needs. The standard font package contains monospaced and proportional fonts in different sizes and styles. **Monospaced fonts** are fonts with a fixed character width, in which all characters have the same width in pixels. **Proportional fonts** are fonts in which each character has its own individual pixel-width.
This chapter provides an overview of the standard emWin fonts.

11.15.1 Font identifier naming convention

All standard fonts are named as follows. The elements of the naming convention are then explained in the table:

```
GUI_Font[<style>][<width>x]<height>[x<MagX>x<MagY>][H][B][_<characterset>]
```

Element	Description
GUI_Font	Standard prefix for all fonts shipped with emWin.
<style>	Specifies a non-standard font style. Example: Comic style in GUI_FontComic18B_ASCII.
<width>	Width of characters, contained only in monospaced fonts.
<height>	Height of the font in pixels.
<MagX>	Factor of magnification in X, contained only in magnified fonts.
<MagY>	Factor of magnification in Y, contained only in magnified fonts.
H	Abbreviation for "high". Only used if there is more than one font with the same height. It means that the font appears "higher" than other fonts.
B	Abbreviation for "bold". Used in bold fonts.
<characterset>	Specifies the contents of characters: ASCII: Only ASCII characters 0x20-0x7E (0x7F). 1: ASCII characters and European extensions 0xA0 - 0xFF. HK: Hiragana and Katakana. 1HK: ASCII, European extensions, Hiragana and Katakana. D: Digit fonts, character set: +-.0123456789.

Example 1

```
GUI_Font16_ASCII
```

Element	Description
GUI_Font	Standard font prefix.
16	Height in pixels.
ASCII	Font contains ASCII characters only.

Example 2

```
GUI_Font8x15B_ASCII
```

Element	Description
GUI_Font	Standard font prefix.
8	Width of characters.
x15	Height in pixels.
B	Bold font.
ASCII	Font contains ASCII characters only.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Example 3

```
GUI_Font8x16x1x2
```

Element	Description
GUI_Font	Standard font prefix.
8	Width of characters.
x16	Height in pixels.
x1	Magnification factor in X.
x2	Magnification factor in Y.

11.15.2 Font file naming convention

The names for the font files are similar to the names of the fonts themselves. The files are named as follows:

```
F[<width>]<height>[H][B][<characterset>]
```

Element	Description
F	Standard prefix for all fonts files shipped with emWin.
<width>	Width of characters, contained only in monospaced fonts.
<height>	Height of the font in pixels.
H	Abbreviation for "high". Only used if there is more than one font with the same height. It means that the font appears "higher" than other fonts.
B	Abbreviation for "bold". Used in bold fonts.
<characterset>	Specifies the contents of characters: ASCII: Only ASCII characters 0x20-0x7E (0x7F). 1: ASCII characters and European extensions 0xA0 - 0xFF. HK: Hiragana and Katakana. 1HK: ASCII, European extensions, Hiragana and Katakana. D: Digit fonts.

11.15.3 Measurement, ROM-size and character set of fonts

The following pages describe the standard fonts shipped with emWin. For each font there is a measurement diagram, an overview of all characters included and a table containing the ROM size in bytes and the font files required for use.
The following parameters are used in the measurement diagrams:


Element	Description
F	Size of font in Y.
B	Distance of base line from the top of the font.
C	Height of capital characters.
L	Height of lowercase characters.
U	Size of underlength used by letters such as "g", "j" or "y".

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

11.15.4 Proportional fonts

11.15.4.1Overview

The following screenshot gives an overview of all available proportional fonts:

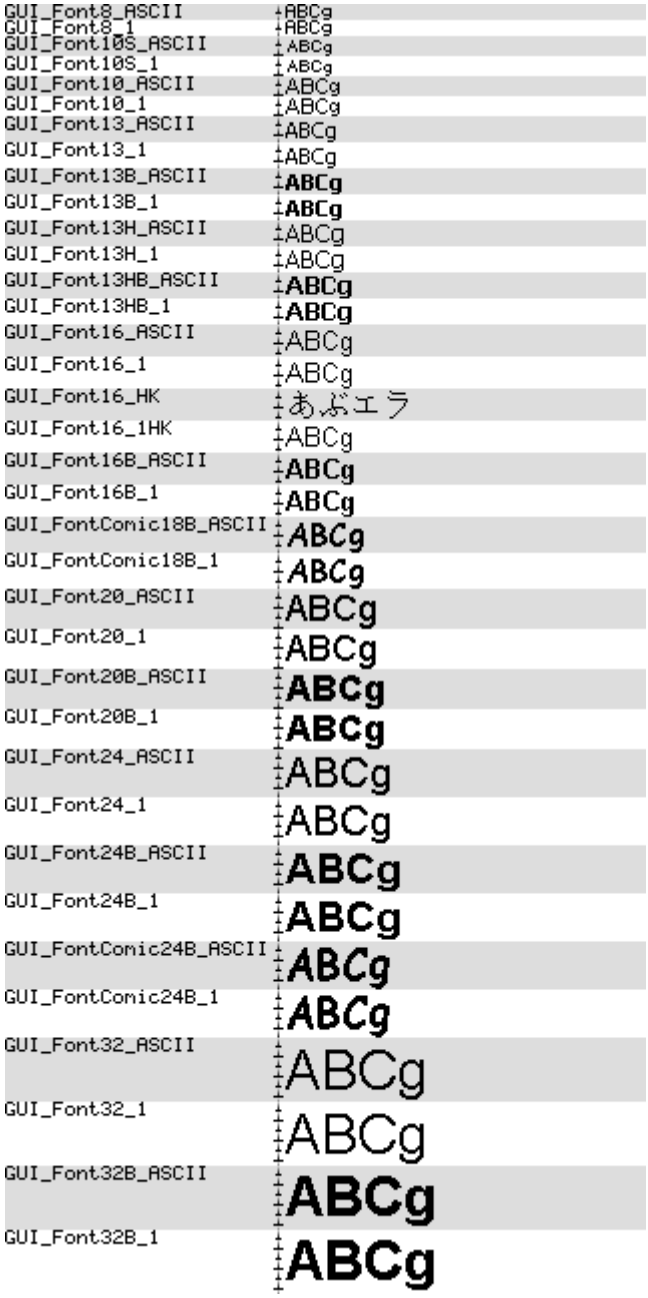

11.15.4.2Measurement, ROM size and used files

The following table shows the measurement, ROM size and used files of the fonts:

Font name	Measurement	ROM size in bytes	Used files
GUI_Font8_ASCII	F: 8, B: 7, C: 7, L: 5, U: 1	1562	F08_ASCII.c
GUI_Font8_1	F: 8, B: 7, C: 7, L: 5, U: 1	1562+ 1586	F08_ASCII.c F08_1.c
GUI_Font10S_ASCII	F: 10, B: 8, C: 6, L: 4, U: 2	1760	F10S_ASCII.c

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Font name	Measurement	ROM size in bytes	Used files
GUI_Font10S_1	F: 10, B: 8, C: 6, L: 4, U: 2	1760+ 1770	F10_ASCII.c F10_1.c
GUI_Font10_ASCII	F: 10, B: 9, C: 8, L: 6, U: 1	1800	F10_ASCII
GUI_Font10_1	F: 10, B: 9, C: 8, L: 6, U: 1	1800+ 2456	F10_ASCII.c F10_1.c
GUI_Font13_ASCII	F: 13, B: 11, C: 8, L: 6, U: 2	2076	F13_ASCII.c
GUI_Font13_1	F: 13, B: 11, C: 8, L: 6, U: 2	2076+ 2149	F13_ASCII.c F13_1.c
GUI_Font13B_ASCII	F: 13, B: 11, C: 8, L: 6, U: 2	2222	F13B_ASCII.c
GUI_Font13B_1	F: 13, B: 11, C: 8, L: 6, U: 2	2222+ 2216	F13B_ASCII.c F13B_1.c
GUI_Font13H_ASCII	F: 13, B: 11, C: 9, L: 7, U: 2	2232	F13H_ASCII.c
GUI_Font13H_1	F: 13, B: 11, C: 9, L: 7, U: 2	2232+ 2291	F13H_ASCII.c F13H_1.c
GUI_Font13HB_ASCII	F: 13, B: 11, C: 9, L: 7, U: 2	2690	F13HB_ASCII.c
GUI_Font13HB_1	F: 13, B: 11, C: 9, L: 7, U: 2	2690+ 2806	F13HB_ASCII.c F13HB_1.c
GUI_Font16_ASCII	F: 16, B: 13, C: 10, L: 7, U: 3	2714	F16_ASCII.c
GUI_Font16_1	F: 16, B: 13, C: 10, L: 7, U: 3	2714+ 3850	F16_ASCII.c F16_1.c
GUI_Font16_HK	F: 16, B: 13, C: 10, L: 7, U: 3	6950	F16_HK.c
GUI_Font16_1HK	F: 16, B: 13, C: 10, L: 7, U: 3	120+ 6950+ 2714+ 3850	F16_1HK.c F16_HK.c F16_ASCII.c F16_1.c
GUI_Font16B_ASCII	F: 16, B: 13, C: 10, L: 7, U: 3	2690	F16B_ASCII.c
GUI_Font16B_1	F: 16, B: 13, C: 10, L: 7, U: 3	2690+ 2790	F16B_ASCII.c F16B_1.c
GUI_FontComic18B_ASCII	F: 18, B: 15, C: 12, L: 9, U: 3	3572	FComic18B_ASCII.c
GUI_FontComic18B_1	F: 18, B: 15, C: 12, L: 9, U: 3	3572+ 4334	FComic18B_ASCII.c FComic18B_1.c
GUI_Font20_ASCII	F: 20, B: 16, C: 13, L: 10, U: 4	4044	F20_ASCII.c
GUI_Font20_1	F: 20, B: 16, C: 13, L: 10, U: 4	4044+ 4244	F20_ASCII.c F20_1.c
GUI_Font20B_ASCII	F: 20, B: 16, C: 13, L: 10, U: 4	4164	F20B_ASCII.c
GUI_Font20B_1	F: 20, B: 16, C: 13, L: 10, U: 4	4164+ 4244	F20B_ASCII.c F20B_1.c
GUI_Font24_ASCII	F: 24, B: 20, C: 17, L: 13, U: 4	4786	F24_ASCII.c
GUI_Font24_1	F: 24, B: 20, C: 17, L: 13, U: 4	4786+ 5022	F24_ASCII.c F24_1.c
GUI_Font24B_ASCII	F: 24, B: 19, C: 15, L: 11, U: 5	4858	F24B_ASCII.c
GUI_Font24B_1	F: 24, B: 19, C: 15, L: 11, U: 5	4858+ 5022	F24B_ASCII.c F24B_1.c
GUI_FontComic24B_ASCII	F: 24, B: 20, C: 17, L: 13, U: 4	6146	FComic24B_ASCII


 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Font name	Measurement	ROM size in bytes	Used files
GUI_FontComic24B_1	F: 24, B: 20, C: 17, L: 13, U: 4	6146+ 5598	FComic24B_ASCII FComic24B_1
GUI_Font32_ASCII	F: 32, B: 26, C: 20, L: 15, U: 6	7234	F32_ASCII.c
GUI_Font32_1	F: 32, B: 26, C: 20, L: 15, U: 6	7234+ 7734	F32_ASCII.c F32_1.c
GUI_Font32B_ASCII	F: 32, B: 25, C: 20, L: 15, U: 7	7842	F32B_ASCII.c
GUI_Font32B_1	F: 32, B: 25, C: 20, L: 15, U: 7	7842+ 8118	F32B_ASCII.c F32B_1.c


11.15.4.3Characters

The following shows all characters of all proportional standard fonts:


GUI_Font8_ASCII




GUI_Font8_1




GUI_Font10S_ASCII




GUI_Font10S_1




GUI_Font10_ASCII




GUI_Font10_1




GUI_Font13_ASCII



GUI_Font13_1




GUI_Font13B_ASCII




 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

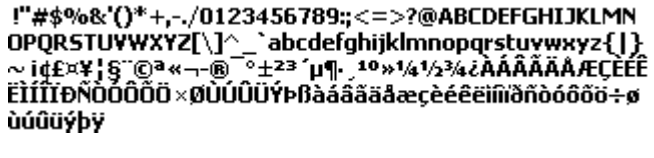
GUI_Font13B_1




GUI_Font13H_ASCII




GUI_Font13H_1




GUI_Font13HB_ASCII




GUI_Font13HB_1

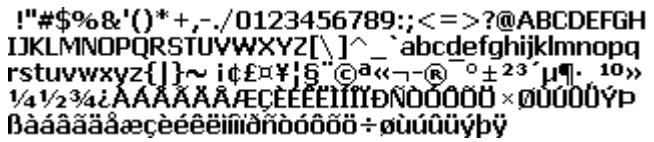


GUI_Font16_ASCII



GUI_Font16_1

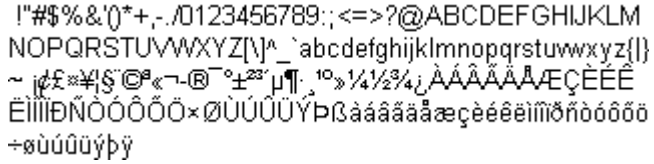


GUI_Font16_HK

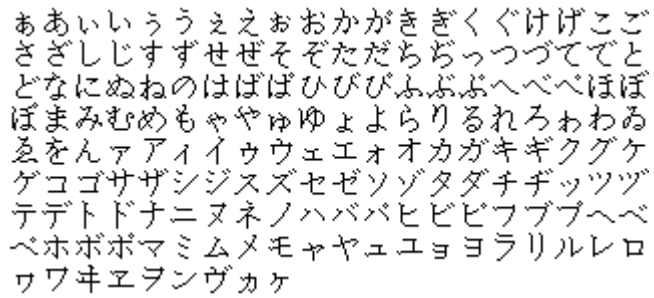


 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

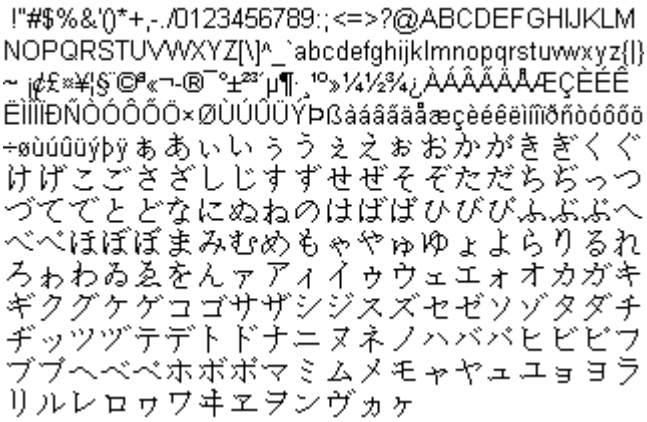
GUI_Font16_1HK




GUI_Font16B_ASCII




GUI_Font16B_1

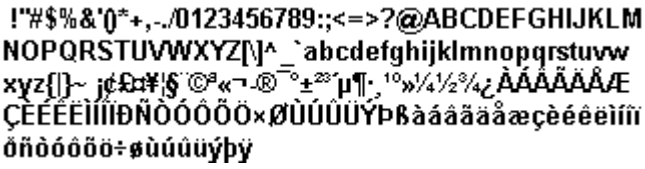


GUI_FontComic18B_ASCII




GUI_FontComic18B_1

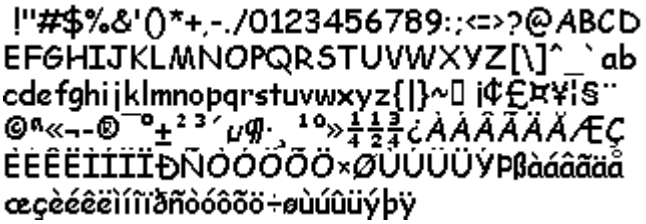

GUI_Font20_ASCII

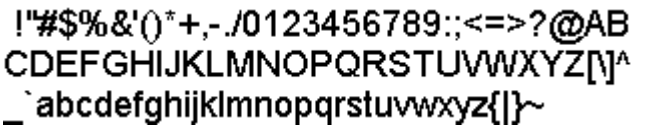


GUI_Font20_1

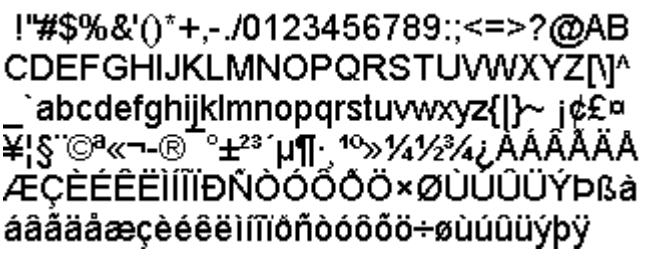

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

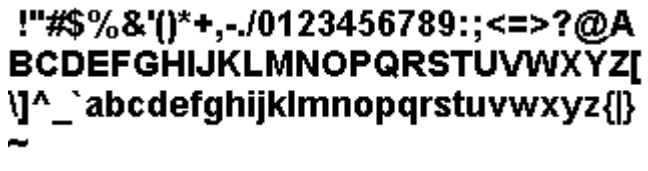
GUI_Font20B_ASCII




GUI_Font20B_1



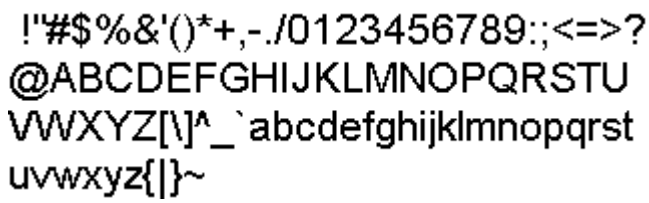
GUI_Font24_ASCII




GUI_Font24_1

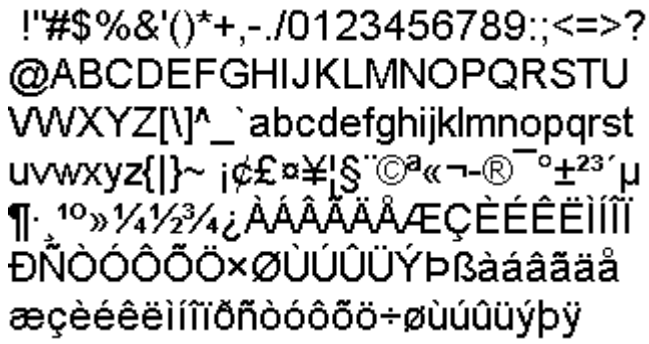

GUI_Font24B_ASCII

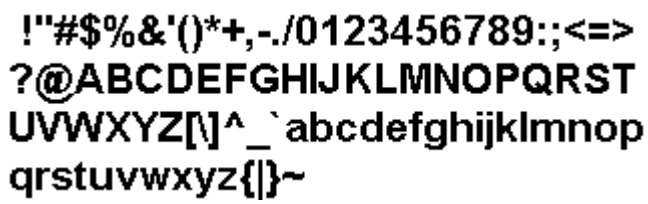


GUI_Font24B_1

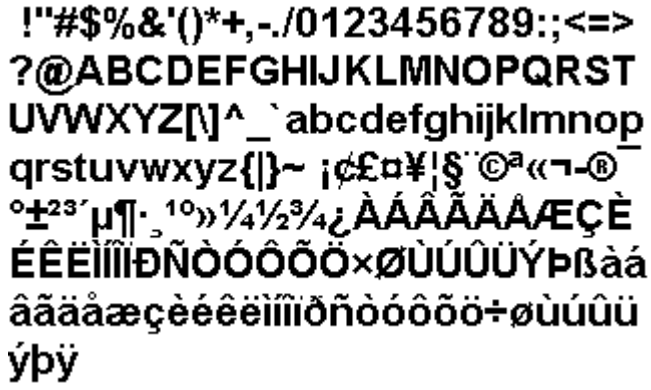


 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

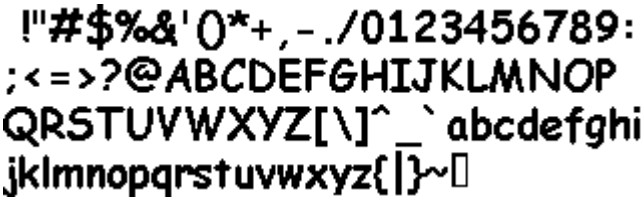
GUI_FontComic24B_ASCII



GUI_FontComic24B_1

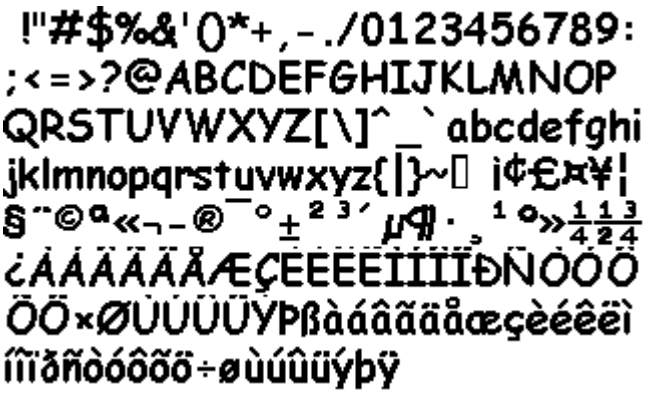

GUI_Font32_ASCII

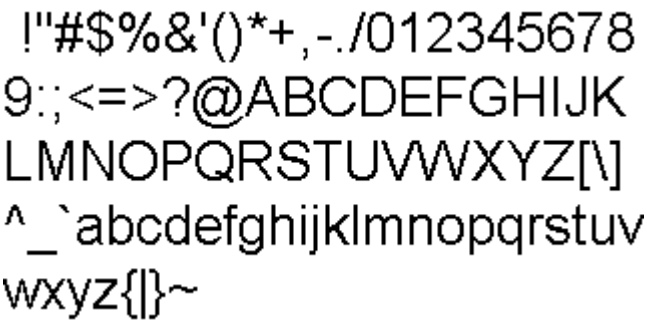


GUI_Font32_1



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

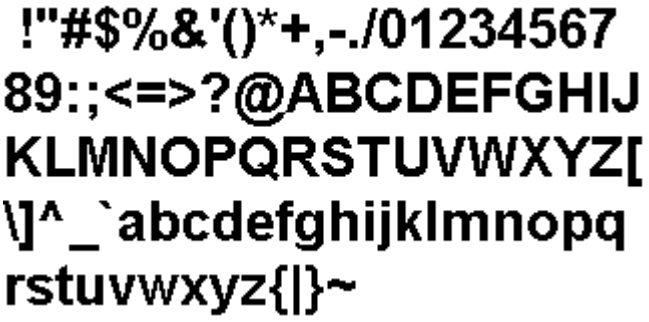GUI_Font32B_ASCII



GUI_Font32B_1



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

11.15.5 Proportional fonts, framed

11.15.5.1Overview

The following screenshot gives an overview of all available framed proportional fonts:



11.15.5.2Measurement, ROM size and used files

The following table shows the measurement, ROM size and used files of the fonts:

Font name	Measurement	ROM size in bytes	Used files
GUI_Font20F_ASCII	F: 20, B: 19, C: 19, L: 19, U: 1	5248	F20F_ASCII.c

11.15.5.3Characters

The following shows all characters of all framed proportional fonts:

GUI_Font20F_ASCII



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

11.15.6 Monospaced fonts

11.15.6.1Overview

The following screenshot gives an overview of all available monospaced fonts:



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

11.15.6.2Measurement, ROM size and used files

The following table shows the measurement, ROM size and used files of the fonts:


Font name	Measurement	ROM size in bytes	Used files
GUI_Font4x6	F: 6, B: 5, C: 5, L: 4, U: 1	620	F4x6.c
GUI_Font6x8	F: 8, B: 7, C: 7, L: 5, U: 1	1840	F6x8.c
GUI_Font6x8_ASCII	F: 8, B: 7, C: 7, L: 5, U: 1	1568	F6x8_ASCII.c
GUI_Font6x8_1	F: 8, B: 7, C: 7, L: 5, U: 1	1568+ 1584	F6x8_ASCII.c F6x8_1.c
GUI_Font6x9	F: 9, B: 7, C: 7, L: 5, U: 2	1840 (same ROM location as GUI_Font6x8)	F6x8.c
GUI_Font8x8	F: 8, B: 7, C: 7, L: 5, U: 1	1840	F8x8.c
GUI_Font8x8_ASCII	F: 8, B: 7, C: 7, L: 5, U: 1	1568	F8x8_ASCII.c
GUI_Font8x8_1	F: 8, B: 7, C: 7, L: 5, U: 1	1568+ 1584	F8x8_ASCII.c F8x8_1.c
GUI_Font8x9	F: 9, B: 7, C: 7, L: 5, U: 2	1840 (same ROM location as GUI_Font8x8)	F8x8.c
GUI_Font8x10_ASCII	F: 10, B: 9, C: 9, L: 7, U: 1	1770	F8x10_ASCII.c
GUI_Font8x12_ASCII	F: 12, B: 10, C: 9, L: 6, U: 2	1962	F8x12_ASCII.c
GUI_Font8x13_ASCII	F: 13, B: 11, C: 9, L: 6, U: 2	2058	F8x13_ASCII.c
GUI_Font8x13_1	F: 13, B: 11, C: 9, L: 6, U: 2	2058+ 2070	F8x13_ASCII.c F8x13_1.c
GUI_Font8x15B_ASCII	F: 15, B: 12, C: 9, L: 7, U: 3	2250	F8x15_ASCII.c
GUI_Font8x15B_1	F: 15, B: 12, C: 9, L: 7, U: 3	2250+ 2262	F8x15B_ASCII.c F8x15B_1.c
GUI_Font8x16	F: 16, B: 12, C: 10, L: 7, U: 4	3304	F8x16.c
GUI_Font8x17	F: 17, B: 12, C: 10, L: 7, U: 5	3304 (same ROM location as GUI_Font8x16)	F8x16.c
GUI_Font8x18	F: 18, B: 12, C: 10, L: 7, U: 6	3304 (same ROM location as GUI_Font8x16)	F8x16.c
GUI_Font8x16x1x2	F: 32, B: 24, C: 20, L: 14, U: 8	3304 (same ROM location as GUI_Font8x16)	F8x16.c
GUI_Font8x16x2x2	F: 32, B: 24, C: 20, L: 14, U: 8	3304 (same ROM location as GUI_Font8x16)	F8x16.c
GUI_Font8x16x3x3	F: 48, B: 36, C: 30, L: 21, U: 12	3304 (same ROM location as GUI_Font8x16)	F8x16.c
GUI_Font8x16_ASCII	F: 16, B: 12, C: 10, L: 7, U: 4	2328	F8x16_ASCII.c
GUI_Font8x16_1	F: 16, B: 12, C: 10, L: 7, U: 4	2328+ 2352	F8x16_ASCII.c F8x16_1.c

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG


11.15.6.3Characters

The following shows all characters of all monospaced standard fonts:


GUI_Font4x6




GUI_Font6x8




GUI_Font6x8_ASCII




GUI_Font6x8_1




GUI_Font6x9



GUI_Font8x8



GUI_Font8x8_ASCII




GUI_Font8x8_1




GUI_Font8x9




GUI_Font8x10_ASCII



GUI_Font8x12_ASCII




GUI_Font8x13_ASCII




© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

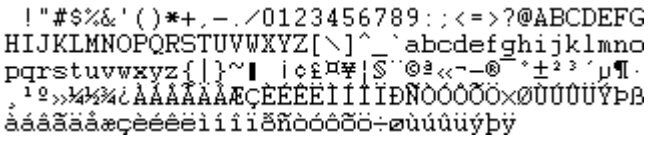
GUI_Font8x13_1




GUI_Font8x15B_ASCII

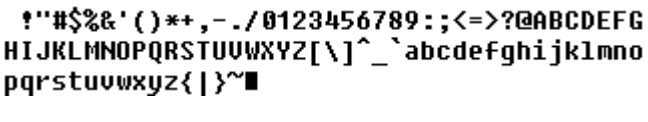


GUI_Font8x15B_1

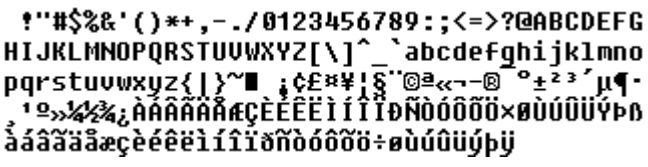


GUI_Font8x16

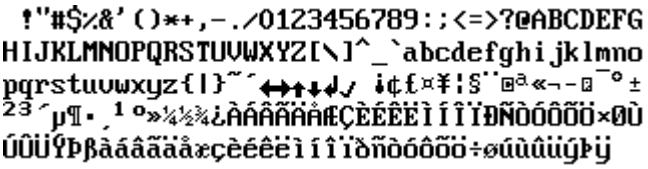

GUI_Font8x17

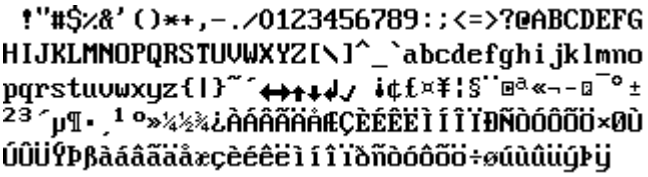

GUI_Font8x18

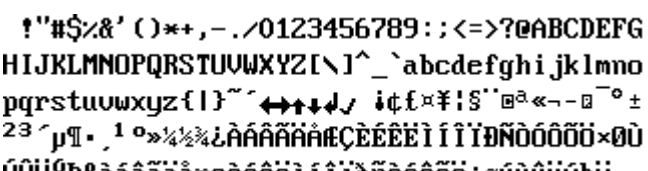


GUI_Font8x16x1x2




 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

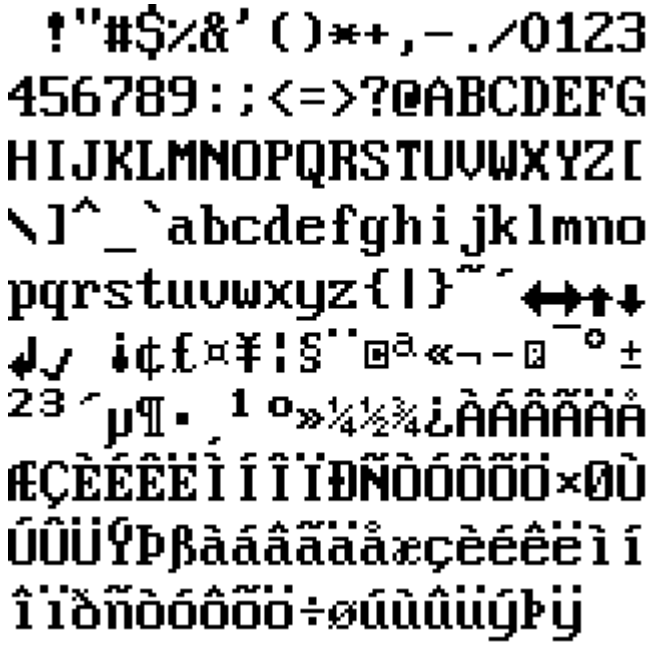GUI_Font8x16x2x2



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

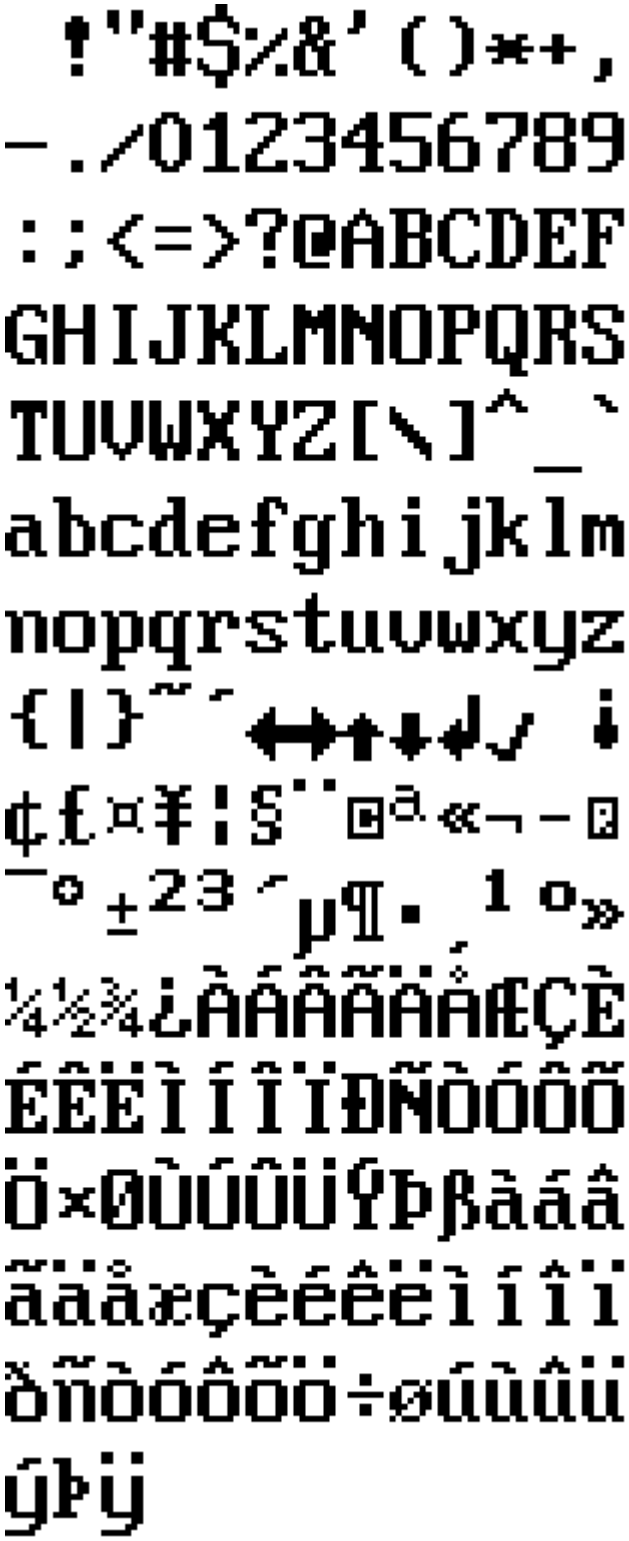GUI_Font8x16x3x3



GUI_Font8x16_ASCII

```
 !"#$%&'()*+,-./0123456789:;<=>?@ABCDEFG
HIJKLMNOPQRSTUVWXYZ[\]^_`abcdefghijklmno
pqrstuvwxyz{|}~
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG


GUI_Font8x16_1

```
 !"#$%&'()*+,-./0123456789:;<=>?@ABCDEFG
HIJKLMNOPQRSTUVWXYZ[\]^_`abcdefghijklmno
pqrstuvwxyz{|}~ ¡¢£¤¥¦§¨©ª«¬-®¯°±²³´µ¶·¸
¹º»¼½¾¿ÀÁÂÃÄÅÆÇÈÉÊËÌÍÎÏÐÑÒÓÔÕÖ×ØÙÚÛÜÝÞßà
áâãäåæçèéêëìíîïðñòóôõö÷øùúûüýþÿ
```

11.15.7 Digit fonts (proportional)

11.15.7.1Overview

The following screenshot gives an overview of all available proportional digit fonts:

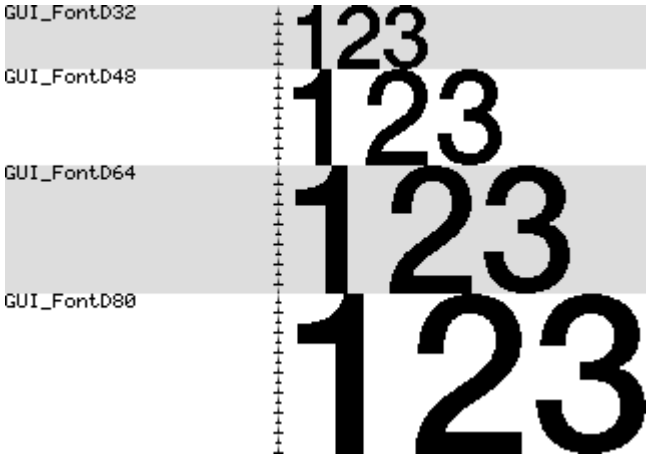

11.15.7.2Measurement, ROM size and used files

The following table shows the measurement, ROM size and used files of the fonts:

Font name	Measurement	ROM size in bytes	Used files
GUI_FontD32	F: 32, C: 31	1574	FD32.c
GUI_FontD48	F: 48, C: 47	3512	FD48.c
GUI_FontD64	F: 64, C: 63	5384	FD64.c
GUI_FontD80	F: 80, C: 79	8840	FD80.c

11.15.7.3Characters

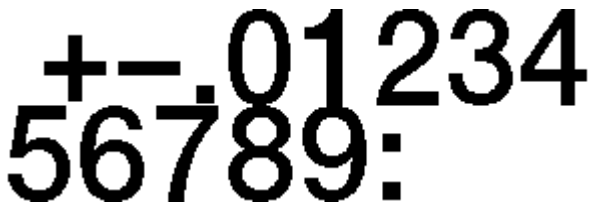
The following shows all characters of all proportional digit fonts:

GUI_FontD32


```
+-.012345678
9:
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG


GUI_FontD48



GUI_FontD64

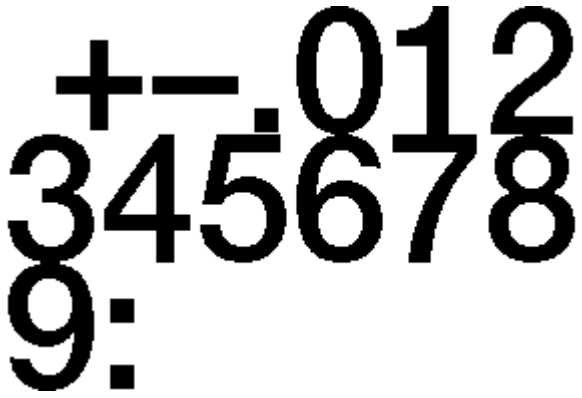


GUI_FontD80

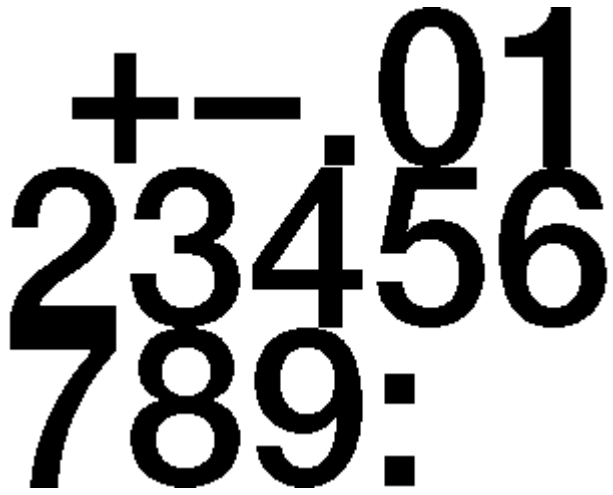

11.15.8 Digit fonts (monospaced)

11.15.8.1Overview

The following screenshot gives an overview of all available monospaced digit fonts:

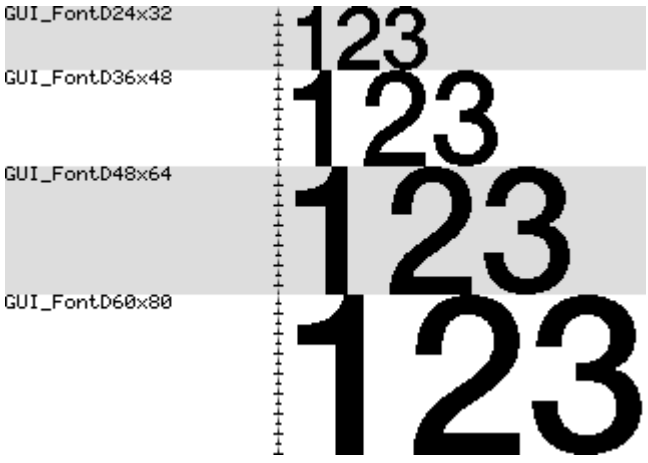

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

11.15.8.2Measurement, ROM size and used files

The following table shows the measurement, ROM size and used files of the fonts:

Font name	Measurement	ROM size in bytes	Used files
GUI_FontD24x32	F: 32, C: 31	1606	FD24x32.c
GUI_FontD36x48	F: 48, C: 47	3800	FD36x48.c
GUI_FontD48x64	F: 64, C: 63	5960	FD48x60.c
GUI_FontD60x80	F: 80, C: 79	9800	FD60x80.c

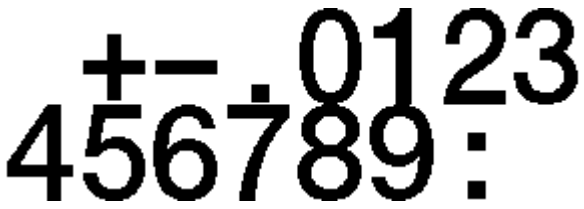
11.15.8.3Characters

The following shows all characters of all monospaced digit fonts:


GUI_FontD24x32



GUI_FontD36x48




GUI_FontD48x64

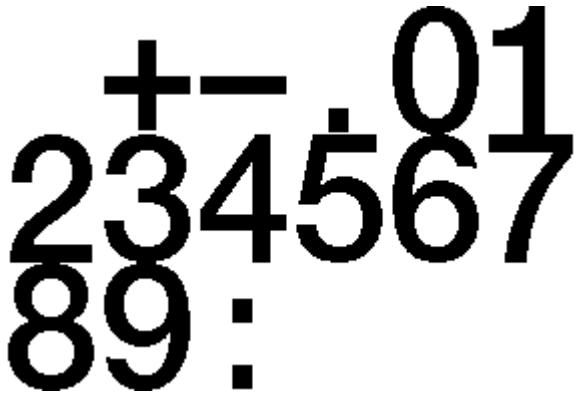

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

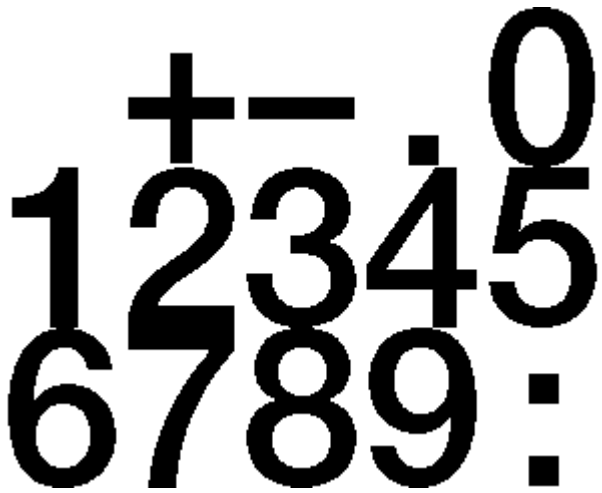GUI_FontD60x80




 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 12

Bitmap Converter

The bitmap converter is a Windows program which is easy to use. Simply load a bitmap (in the form of a `bmp` or a `gif` file) into the application. Convert the color format if you want or have to, and convert it into a C file by saving it in the appropriate format. The C file may then be compiled, allowing the image to be shown on your display with emWin.

Screenshot of the Bitmap Converter

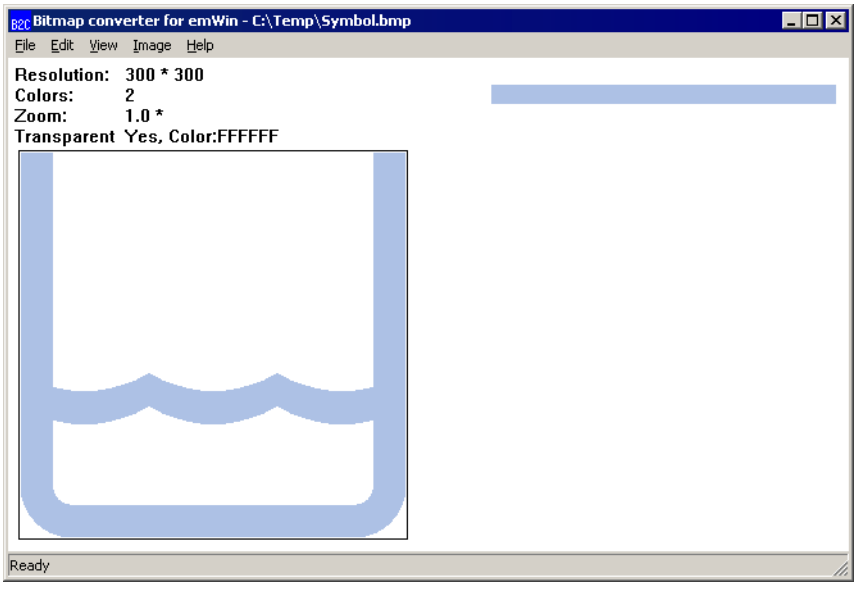

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

12.1 What it does

The bitmap converter is primarily intended as a tool to convert bitmaps from a PC format to a C file. Bitmaps which can be used with emWin are normally defined as `GUI_BITMAP` structures in C. The structures -- or rather the picture data which is referenced by these structures -- can be quite large. It is time-consuming and inefficient to generate these bitmaps manually. We therefore recommend using the bitmap converter, which automatically generates C files from bitmaps.
An other useful feature is the ability to save images as C stream files. The advantage against a normal C file is, that these data streams can be located anywhere on any media whereas C files need to be located in the addressable CPU area.
It also features color conversion, so that the resulting C code is not unnecessarily large. You would typically reduce the number of bits per pixel in order to reduce memory consumption. The bitmap converter displays the converted image.
A number of simple functions can be performed with the bitmap converter, including scaling the size, flipping the bitmap horizontally or vertically, rotating it, and inverting the bitmap indices or colors (these features can be found under the `Image` menu). Any further modifications to an image must be made in a bitmap manipulation program such as Adobe Photoshop or Corel Photopaint. It usually makes the most sense to perform any image modifications in such a program, using the bitmap converter for converting purposes only.

12.2 Loading a bitmap

12.2.1 Supported input file formats

The bitmap converter basically supports Windows bitmap files (*.bmp), "Graphic Interchange Format" (*.gif) and "Portable Network Graphics" (*.png):

Windows Bitmap Files (BMP)

The bitmap converter supports the most common bitmap file formats. Bitmap files of the following formats can be opened by the bitmap converter:

- 1, 4 or 8 bits per pixel (bpp) with palette;
- 16, 24 or 32 bpp without palette (full-color mode, in which each color is assigned an RGB value);
- RLE4 and RLE8.

Trying to read bitmap files of other formats will cause an error message of the bitmap converter.

Graphic Interchange Format (GIF)

The bitmap converter supports reading of one image per GIF file. If the file for example contains a movie consisting of more than one image, the converter reads only the first image.
Transparency and interlaced GIF images are supported by the converter.

Portable Network Graphic (PNG)

The PNG format is the most recommended format to create images with alpha blending. The bitmap converter supports reading PNG images with alpha channel.

12.2.2 Loading from a file

An image file of one of the supported formats may be opened directly in the bitmap converter by selecting `File/Open`.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

12.2.3 Using the clipboard

Any other type of bitmap (that is, `.jpg`, `.jpeg`, `.png`, `.tif`) may be opened with another program, copied to the clipboard, and pasted into the bitmap converter. This process will achieve the same effect as loading directly from a file.

12.3 Generating C files from bitmaps

The main function of the bitmap converter is to convert PC-formatted bitmaps into C files which can be used by emWin. Before doing so, however, it is often desirable to modify the color palette of an image so that the generated C file is not excessively large.
The bitmap may be saved as a `bmp` or a `gif` file (which can be reloaded and used or loaded into other bitmap manipulation programs) or as a C file. A C file will serve as an input file for your C compiler. It may contain a palette (device-independent bitmap, or DIB) or be saved without (device-dependent bitmap, or DDB). DIBs are recommended, as they will display correctly on any display; a DDB will only display correctly on a display which uses the same palette as the bitmap.
C files may be generated as "C with palette", "C without palette", "C with palette, compressed" or "C without palette, compressed". For more information on compressed files, see the section "Compressed bitmaps" as well as the example at the end of the chapter.

12.3.1 Supported bitmap formats

The following table shows the currently available output formats for C files:

Format	Color depth	Compression	Transparency	Palette
1 bit per pixel	1bpp	no	yes	yes
2 bits per pixel	2bpp	no	yes	yes
4 bits per pixel	4bpp	no	yes	yes
8 bits per pixel	8bpp	no	yes	yes
Compressed, RLE4	4bpp	yes	yes	yes
Compressed, RLE8	8bpp	yes	yes	yes
High color 555	15bpp	no	no	no
High color 555, red and blue swapped	15bpp	no	no	no
High color 565	16bpp	no	no	no
High color 565, red and blue swapped	16bpp	no	no	no
High color 565, compressed	16bpp	yes	no	no
High color 565, red and blue swapped, compressed	16bpp	yes	no	no
True color 888	24bpp	no	no	no
True color 8888 with alpha channel	32bpp	no	yes	no
Alpha channel, compressed	8bpp	yes	yes	no
True color with alpha channel, compressed	32bpp	yes	yes	no

12.3.2 Palette information

A bitmap palette is an array of 24 bit RGB color entries. Bitmaps with a color depth from 1 - 8 bpp can be saved with (device independent bitmap, DIB) or without palette information (device dependent bitmap DDB).

Device independent bitmaps (DIB)

The color information is stored in the form of an index into the color array. Before emWin draws a DIB, it converts the 24 bit RGB colors of the bitmap palette into color indices of the hardware palette. The advantage of using DIBs is that they are hardware independent and can be drawn correctly on systems with different color configurations. The disadvantages are the additional ROM requirement for the palette and the slower performance because of the color conversion.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Device dependent bitmaps (DDB)

The pixel information of a DDB is the index of the displays hardware palette. No conversion needs to be done before drawing a DDB. The advantages are less ROM requirement and a better performance. The disadvantage is that these bitmaps can not be displayed correctly on systems with other color configurations.

12.3.3 Transparency

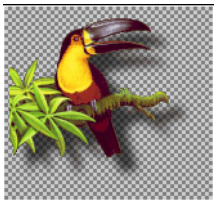
A palette based bitmap can be converted to a transparent bitmap. Transparency means each pixel with index 0 will not produce any output. The command `Image/Transparency` can be used to select the color which should be used for transparency. After selecting the transparent color, the pixel indices of the image will be recalculated, so that the selected color is on position 0 of the bitmap palette. When saving the bitmap file as C file, it will be saved with the transparency attribute.

12.3.4 Alpha blending

Alpha blending is a method of combining an image with the background to create the effect of semi transparency. The alpha value of a pixel determines its transparency. The color of a pixel after drawing the bitmap is a blend of the former color and the color value in the bitmap. In emWin, logical colors are handled as 32 bit values. The lower 24 bits are used for the color information and the upper 8 bits are used to manage the alpha value. An alpha value of 0 means the image is opaque and a value of 0xFF means completely transparent. Whereas BMP and GIF files do not support alpha blending PNG files support alpha blending. So the easiest way to create bitmap files with alpha blending is to load a PNG file. When working with BMP and/or GIF files the bitmap converter initially has no information about the alpha values.

Loading a PNG file


This is the most recommended way for creating bitmaps with an alpha mask:

After loading


The PNG file contains all required information.

Loading the alpha values from an alpha mask bitmap

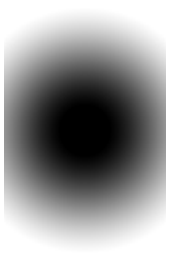This method loads the alpha values from a separate file. Black pixels of the alpha mask file means opaque and white means transparent. The following table shows an example:

Starting point	Alpha mask	Result
		

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

The command `File/Load Alpha Mask` can be used for loading an alpha mask.

Creating the alpha values from two bitmaps

This method uses the difference between the pixels of two pictures to calculate the alpha values. The first image should show the item on a black background. The second image should show the same on a white background. The following table shows an example of how to create the alpha values using the command `File/Create Alpha`:

Starting point	Black background	White background	Result
			

The command `File/Create Alpha` can be used tor creating the alpha values.

12.3.5 Selecting the best format

emWin supports various formats for the generated C file. It depends on several conditions which will be the 'best' format and there is no general rule to be used. Color depth, compression, palette and transparency affect the drawing performance and/or ROM requirement of the bitmap.

Color depth

In general the lower the color depth the smaller the ROM requirement of the bitmap. Each display driver has been optimized for drawing 1bpp bitmaps (text) and bitmaps with the same color depth as the display.

Compression

The supported RLE compression method has the best effect on bitmaps with many horizontal sequences of equal-colored pixels. Details later in this chapter. The performance is typically slightly slower than drawing uncompressed bitmaps.

Palette

The ROM requirement of a palette is 4 bytes for each color. So a palette of 256 colors uses 1 Kbyte. Furthermore emWin needs to convert the colors of the palette before drawing the bitmap. Advantage: Bitmaps are device independent meaning they can be displayed on any display, independent of its color depth and format.

Transparency

The ROM requirement of transparent bitmaps is the same as without transparency. The performance is with transparency slightly slower than without.

High color and true color bitmaps

Special consideration is required for bitmaps in these formats. Generally the use of these formats only make sense on displays with a color depth of 15 bits and above. Further it is strongly recommended to save the C files in the exact same format used by the hardware. Note that using the right format will have a positive effect on the drawing performance. If a high color bitmap for example should be shown on a system with a color depth of 16bpp which has the red and blue components swapped, the best format is 'High color 565, red and blue swapped'. Already a slightly other format has the effect, that each pixel needs color conversion, whereas a bitmap in the right format can be rendered very fast without color conversion. The difference of drawing performance in this case can be factor 10 and more.

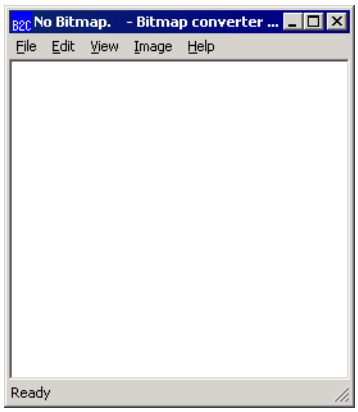
 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

12.3.6 Saving the file

The basic procedure for using the bitmap converter is illustrated below:


Step 1: Start the application.

The bitmap converter is opened showing an empty window.




Step 2: Load a bitmap into the bitmap converter.

Choose `File/Open`.
Locate the document you want to open and click `Open` (must be a `bmp` file).
In this example, the file `Logo200.bmp` is chosen.



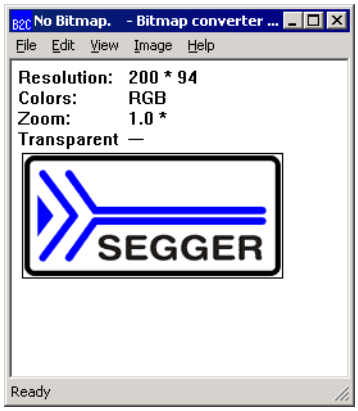
The bitmap converter displays the loaded bitmap.




In this example, the loaded bitmap is in full-color mode. It must be converted to a palette format before a C file can be generated.

Step 3: Convert the image if necessary.

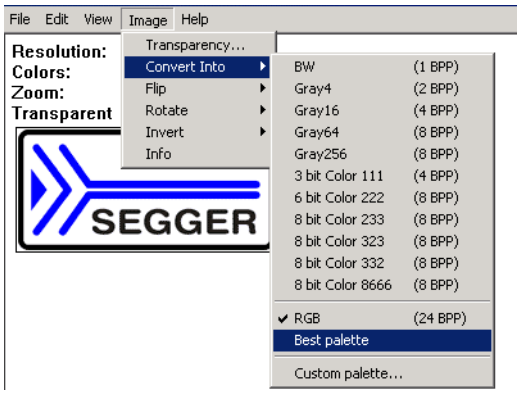Choose `Image/Convert Into`.
Select the desired palette.
In this example, the option `Best palette` is chosen.





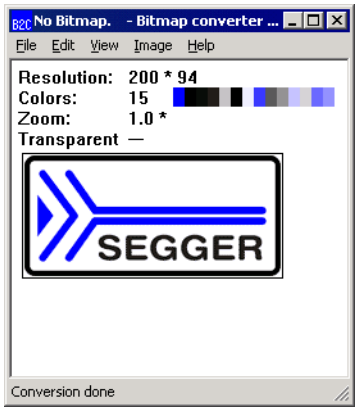The bitmap converter displays the converted bitmap.



The image is unchanged in terms of appearance, but uses less memory since a palette of only 15 colors is used instead of the full-color mode. These 15 colors are the only ones actually required to display this particular image.

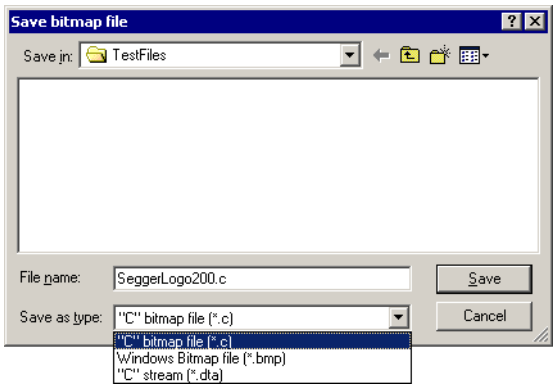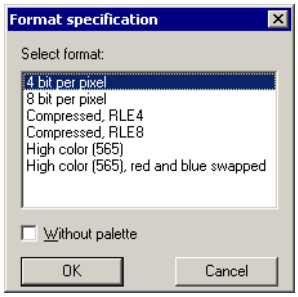 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Step 4: Save the bitmap as a C file. Choose `File/Save As`. Select a destination and a name for the C file. Select the file type. In this example, the file is saved as C bitmap file." Click `Save`.	
Step 5: Specify bitmap format. If the bitmap should be saved as C file the format should now be specified. Use one of the available formats shown in the dialog. If the bitmap should be saved without palette, activate the check box "Without palette" The bitmap converter will create a separate file in the specified destination, containing the C source code for the bitmap.	

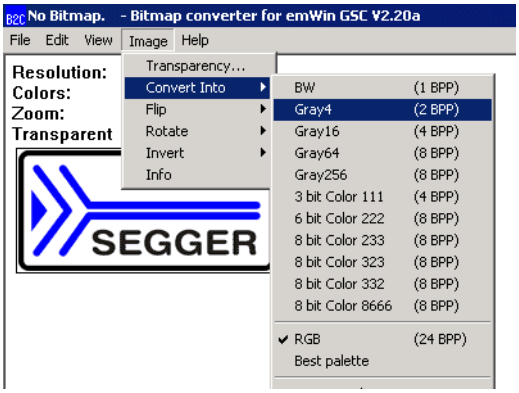
12.4 Color conversion

The primary reason for converting the color format of a bitmap is to reduce memory consumption. The most common way of doing this is by using the option `Best palette` as in the above example, which customizes the palette of a particular bitmap to include only the colors which are used in the image. It is especially useful with full-color bitmaps in order to make the palette as small as possible while still fully supporting the image. Once a bitmap file has been opened in the bitmap converter, simply select `Image/Convert Into/Best palette` from the menu. If it is necessary to keep transparency select `Image/Convert Into/Best palette + transparency`.
For certain applications, it may be more efficient to use a fixed color palette, chosen from the menu under `Image/Convert Into`. For example, suppose a bitmap in full-color mode is to be shown on a display which supports only four grayscales. It would be a waste of memory to keep the image in the original format, since it would only appear as four grayscales on the display. The full-color bitmap can be converted into a four-grayscale, 2bpp bitmap for maximum efficiency.
The procedure for conversion would be as follows:

The bitmap converter is opened and the same file is loaded as in steps 1 and 2 of the previous example. The bitmap converter displays the loaded bitmap.	

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Choose `Image/Convert Into/Gray4`.



The bitmap converter displays the converted bitmap.



In this example, the image uses less memory since a palette of only 4 grayscales is used instead of the full-color mode. If the target display supports only 4 grayscales, there is no use in having a higher pixel depth as it would only waste memory.

12.5 Generating C stream files

A C stream file consists of the same information as a C file. Contrary to a C file a data stream can be located anywhere and does not need to be compiled or linked with the project. All supported output formats described for C files are also available for C stream files. emWin supports creating bitmaps from data streams and drawing data streams directly. For details about C stream file support please refer to "Drawing bitmaps" on page 113.

12.6 Compressed bitmaps

The bitmap converter and emWin support run-length encoding (RLE) compression of bitmaps in the resulting source code files. The RLE compression method works most efficiently if your bitmap contains many horizontal sequences of equal-colored pixels. An efficiently compressed bitmap will save a significant amount of space. However, compression is not recommended for photographic images since they do not normally have sequences of identical pixels. It should also be noted that a compressed image may take slightly longer to display.
If you want to save a bitmap using RLE compression, you can do so by selecting one of the compressed output formats when saving as a C file: "C with palette, compressed" or "C without palette, compressed". There are no special functions needed for displaying compressed bitmaps; it works in the same way as displaying uncompressed bitmaps.

Compression ratios

The ratio of compression achieved will vary depending on the bitmap used. The more horizontal uniformity in the image, the better the ratio will be. A higher number of bits per pixel will also result in a higher degree of compression.
In the bitmap used in the previous examples, the total number of pixels in the image is (200*94) = 18,800.
Since 2 pixels are stored in 1 byte, the total uncompressed size of the image is 18,800/2 = 9,400 bytes.
The total compressed size for this particular bitmap is 3,803 bytes for 18,800 pixels (see the example at the end of the chapter).
The ratio of compression can therefore be calculated as 9,400/3,803 = 2.47.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

12.7 Using a custom palette

Converting bitmaps to a custom palette and saving them without palette information can save memory and can increase the performance of bitmap drawing operations.

More efficient memory utilization

Per default each bitmap contains its own palette. Even the smallest bitmaps can contain a large palette with up to 256 colors. In many cases only a small fraction of the palette is used by the bitmap. If using many of these bitmaps the amount of memory used by the palettes can grow rapidly.
So it can save much ROM if converting the bitmaps used by emWin to the available hardware palette and saving them as (D)evice (D)ependent (B)itmaps without palette information.

Better bitmap drawing performance

Before emWin draws a bitmap, it needs to convert each device independent bitmap palette to the available hardware palette. This is required because the pixel indices of the bitmap file are indices into the device independent bitmap palette and not to the available hardware palette.
Converting the bitmap to a DDB means that color conversion at run time is not required and speeds up the drawing.

12.7.1 Saving a palette file

The bitmap converter can save the palette of the currently loaded bitmap into a palette file which can be used for converting other bitmaps with the command `Image/Convert Into/Custom palette`. This requires that the current file is a palette based file and not a RGB file. To save the palette the command `File/Save palette...` can be used.

12.7.2 Palette file format

Custom palette files are simple files defining the available colors for conversion. They contain the following:

- Header (8 bytes).
- NumColors (U32, 4 bytes).
- 0 (4 bytes).
- U32 Colors[NumColors] (NumColors*4 bytes, type GUI_COLOR).

Total file size is therefore: 16+(NumColors*4) bytes. A custom palette file with 8 colors would be 16+(8*4) = 48 bytes. At this point, a binary editor must be used in order to create such a file.
The maximum number of colors supported is 256; the minimum is 2.

Example

This example file would define a palette containing 2 colors -- red and white:

```
0000: 65 6d 57 69 6e 50 61 6c 02 00 00 00 00 00 00 00
0010: ff 00 00 00 ff ff ff 00
```

The 8 headers make up the first eight bytes of the first line. The U32 is stored lsb first (big endian) and represents the next four bytes, followed by the four 0 bytes. Colors are stored 1 byte per color, where the 4th byte is 0 as follows: RRGGBB00. The second line of code defines the two colors used in this example.

12.7.3 Palette files for fixed palette modes

Using the custom palette feature can even make sense with the most common used fixed palette modes, not only with custom hardware palettes. For the most palette based fixed palette modes a palette file can be found in the folder `Sample\Palette`.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

12.7.4 Converting a bitmap

The command `Image/Convert Into/Custom palette` should be used for converting the currently loaded bitmap to a custom palette. The bitmap converter tries to find the nearest color of the palette file for each pixel of the currently loaded bitmap.

12.8 Command line usage

It is also possible to work with the bitmap converter using the command prompt. All conversion functions available in the bitmap converter menu are available as commands, and any number of functions may be performed on a bitmap in one command line.

12.8.1 Format for commands

Commands are entered using the following format:

```
BmpCvt <filename>.bmp <-command>
```

(If more than one command is used, one space is typed between each.)
For example, a bitmap with the name `logo.bmp` is converted into `Best palette` format and saved as a C file named `logo.bmp` all at once by entering the following at the command prompt:

```
BmpCvt logo.bmp -convertintobestpalette -saveaslogo,1 -exit
```

Note that while the file to be loaded into the bitmap converter always includes its `bmp` extension, no file extension is written in the `-saveas` command. An integer is used instead to specify the desired file type. The number 1 in the `-saveas` command above designates "C with palette". The `-exit` command automatically closes the program upon completion. See the table below for more information.

12.8.2 Valid command line options

The following table lists all permitted bitmap converter commands. It can also be viewed at any time by entering `BmpCvt -?` at the command prompt.

Command	Explanation
-convertintobw	Convert to BW.
-convertintogray4	Convert to Gray4.
-convertintogray16	Convert to Gray16.
-convertintogray64	Convert to Gray64.
-convertintogray256	Convert to Gray256.
-convertinto111	Convert to 111.
-convertinto222	Convert to 222.
-convertinto233	Convert to 233.
-convertinto323	Convert to 323.
-convertinto332	Convert to 332.
-convertinto8666	Convert to 8666.
-convertintorgb	Convert to RGB.
-convertintobestpalette	Convert to best palette.
-convertintotranspalette	Convert to best palette with transparency.
-convertintocustompalette<filename>	Convert to a custom palette.
<filename>	User-specified filename of desired custom palette.
-exit	Terminate PC program automatically.
-fliph	Flip image horizontally.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Command	Explanation
-flipv	Flip image vertically.
-help	Display this box.
-invertindices	Invert indices.
-rotate90cw	Rotate image by 90 degrees clockwise.
-rotate90cc	Rotate image by 90 degrees counter-clockwise.
-rotate180	Rotate image by 180 degrees.
-saveas<filename>,<type>[,<fmt>[,<noplt>]]	Save file as filename.
<filename>	User-specified file name including the file extension.
<type>	Must be an integer from 1 to 4 as follows: 1: C with palette (.c file) 2: Windows Bitmap file (bmp file) 3: C stream (.dta file) 4: GIF format (gif file)
<fmt>	Specifies the bitmap format (only if type == 1): 1: 1 bit per pixel 2: 2 bits per pixel 4: 4 bits per pixel 5: 8 bits per pixel 6: RLE4 compression 7: RLE8 compression 8: High color 565 9: High color 565, red and blue swapped 10: High color 555 11: High color 555, red and blue swapped 12: RLE16 compression 13: RLE16 compression, red and blue swapped 15: True color 32bpp, compressed 16: True color 32bpp 17: True color 24bpp 18: Alpha channel 8bpp, compressed If this parameter is not given, the bitmap converter uses the following default formats in dependence of the number of colors of the bitmap: Number of colors <= 2: 1 bit per pixel Number of colors <= 4: 2 bits per pixel Number of colors <= 16: 4 bits per pixel Number of colors <= 256: 8 bits per pixel RGB: High color 565
<noplt>	Saves the bitmap with or without palette (only if type == 1) 0: Save bitmap with palette (default) 1: Save bitmap without palette
-transparency<RGB-Color>	Sets the transparent color.
<RGB-Color>	RGB color which should be used as transparent color.
-?	Display this box.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

12.9 Example of a converted bitmap

A typical example for the use of the bitmap converter would be the conversion of your company logo into a C bitmap. Take another look at the example bitmap pictured below:



The bitmap is loaded into the bitmap converter, converted to `Best palette`, and saved as "C with palette". The resulting C source code is displayed below (some data is not shown to conserve space).

Resulting C code (generated by bitmap converter)

```
/*********************************************************************
*                SEGGER MICROCONTROLLER SYSTEME GmbH                 *
*        Solutions for real time microcontroller applications        *
*                           www.segger.com                           *
**********************************************************************
*
* C-file generated by
*
*        Bitmap converter for emWin V5.05.
*        Compiled Feb 26 2010, 14:49:28
*        (C) 1998 - 2005 Segger Microcontroller Systeme GmbH
*
**********************************************************************
*
* Source file: SeggerLogo200
* Dimensions:  200 * 100
* NumColors:   33
*
**********************************************************************
*/

#include <stdlib.h>

#include "GUI.h"

#ifndef GUI_CONST_STORAGE
  #define GUI_CONST_STORAGE const
#endif

/*   Palette
The following are the entries of the palette table.
Every entry is a 32-bit value (of which 24 bits are actually used)
the lower   8 bits represent the Red component,
the middle  8 bits represent the Green component,
the highest 8 bits (of the 24 bits used) represent the Blue component
as follows:   0xBBGGRR
*/

static GUI_CONST_STORAGE GUI_COLOR ColorsSeggerLogo200[] = {
     0xFFFFFF,0x353537,0x9C4B37,0xCDCDCD
    ,0x9A9A9B,0xE6D2CD,0xB57869,0x686869
    ,0xA25644,0xCEA59B,0xF9F4F3,0x424244
    ,0xECDDDA,0xF2F2F3,0xAF6D5D,0xD9D9DA
    ,0x818182,0x5B5B5D,0xB3B3B4,0x4E4E50
    ,0xD4B0A8,0x747476,0xA7A7A8,0xF3E9E6
    ,0xC79A8F,0xBB8376,0xDABCB4,0xE0C7C1
    ,0x8D8D8F,0xE6E6E6,0xA86250,0xC18F82
    ,0xC0C0C1
};

static GUI_CONST_STORAGE GUI_LOGPALETTE PalSeggerLogo200 = {
  33,/* number of entries */
  0, /* No transparency */
  &ColorsSeggerLogo200[0]
};

static GUI_CONST_STORAGE unsigned char acSeggerLogo200[] = {
  0x00, 0x00,       /* Not all data is shown in this example */
  0x00, 0x92,
.
.
.
0xC6, 0x22
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
0x0A, 0x22
};

extern GUI_CONST_STORAGE GUI_BITMAP bmSeggerLogo200;

GUI_CONST_STORAGE GUI_BITMAP bmSeggerLogo200 = {
  200, /* XSize */
  100, /* YSize */
  200, /* BytesPerLine */
  8, /* BitsPerPixel */
  acSeggerLogo200,  /* Pointer to picture data (indices) */
  &PalSeggerLogo200  /* Pointer to palette */
};

/* *** End of file *** */
```

Compressing the file

We can use the same bitmap image to create a compressed C file, which is done simply by loading and converting the bitmap as before, and saving it as "C with palette, compressed". The source code is displayed below (some data is not shown to conserve space).

The compressed image size can be seen towards the end of the file as 3,730 bytes for 18,800 pixels.

Resulting compressed C code (generated by bitmap converter)

```
/*********************************************************************
*                SEGGER MICROCONTROLLER SYSTEME GmbH                 *
*        Solutions for real time microcontroller applications        *
*                           www.segger.com                           *
**********************************************************************
*
* C-file generated by
*
*        Bitmap converter for emWin V5.05.
*        Compiled Feb 26 2010, 14:49:28
*        (C) 1998 - 2005 Segger Microcontroller Systeme GmbH
*
**********************************************************************
*
* Source file: SeggerLogo200_comp
* Dimensions:  200 * 100
* NumColors:   33
*
**********************************************************************
*/

#include <stdlib.h>

#include "GUI.h"

#ifndef GUI_CONST_STORAGE
  #define GUI_CONST_STORAGE const
#endif

/*   Palette
The following are the entries of the palette table.
Every entry is a 32-bit value (of which 24 bits are actually used)
the lower   8 bits represent the Red component,
the middle  8 bits represent the Green component,
the highest 8 bits (of the 24 bits used) represent the Blue component
as follows:   0xBBGGRR
*/

static GUI_CONST_STORAGE GUI_COLOR ColorsSeggerLogo200_comp[] = {
     0xFFFFFF,0x353537,0x9C4B37,0xCDCDCD
    ,0x9A9A9B,0xE6D2CD,0xB57869,0x686869
    ,0xA25644,0xCEA59B,0xF9F4F3,0x424244
    ,0xECDDDA,0xF2F2F3,0xAF6D5D,0xD9D9DA
    ,0x818182,0x5B5B5D,0xB3B3B4,0x4E4E50
    ,0xD4B0A8,0x747476,0xA7A7A8,0xF3E9E6
    ,0xC79A8F,0xBB8376,0xDABCB4,0xE0C7C1
    ,0x8D8D8F,0xE6E6E6,0xA86250,0xC18F82
    ,0xC0C0C1
};

static GUI_CONST_STORAGE GUI_LOGPALETTE PalSeggerLogo200_comp = {
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
  33,/* number of entries */
  0, /* No transparency */
  &ColorsSeggerLogo200_comp[0]
};

static GUI_CONST_STORAGE unsigned char acSeggerLogo200_comp[] = {
  /* RLE: 006 Pixels @ 000,000*/ 6, 0x00,
  /* RLE: 188 Pixels @ 006,000*/ 188, 0x01,
.
.
.
  /* RLE: 188 Pixels @ 006,099*/ 188, 0x01,
  /* RLE: 006 Pixels @ 194,099*/ 6, 0x00,


  0};  /* 3730 for 20000 pixels */

extern GUI_CONST_STORAGE GUI_BITMAP bmSeggerLogo200_comp;

GUI_CONST_STORAGE GUI_BITMAP bmSeggerLogo200_comp = {
  200, /* XSize */
  100, /* YSize */
  200, /* BytesPerLine */
  GUI_COMPRESS_RLE8, /* BitsPerPixel */
  acSeggerLogo200_comp,  /* Pointer to picture data (indices) */
  &PalSeggerLogo200_comp  /* Pointer to palette */
 ,GUI_DRAW_RLE8
};

/* *** End of file *** */
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 13

Colors

emWin supports black/white, grayscale (monochrome with different intensities) and color displays. The same user program can be used with any display; only the LCD-configuration needs to be changed. The color management tries to find the closest match for any color that should be displayed.

Logical colors are the colors the application deals with. A logical colors is always defined as an RGB value. This is a 24-bit value containing 8 bits per color as follows: 0xBBGGRR. Therefore, white would be 0xFFFFFF, black would be 0x000000, bright red 0xFF.

Physical colors are the colors which can actually be displayed by the display. They are specified in the same 24-bit RGB format as logical colors. At run-time, logical colors are mapped to physical colors.

For displays with few colors (such as monochrome displays or 8/16-color LCDs), emWin converts them by using an optimized version of the "least-square deviation search". It compares the color to display (the logical color) with all the available colors that the LCD can actually show (the physical colors) and uses the one that the LCD-metric considers closest.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

13.1 Predefined colors

In addition to self-defined colors, some standard colors are predefined in emWin, as shown in the following table:

GUI_BLUE		0xFF0000
GUI_GREEN		0x00FF00
GUI_RED		0x0000FF
GUI_CYAN		0xFFFF00
GUI_MAGENTA		0xFF00FF
GUI_YELLOW		0x00FFFF
GUI_LIGHTBLUE		0xFF8080
GUI_LIGHTGREEN		0x80FF80
GUI_LIGHTRED		0x8080FF
GUI_LIGHTCYAN		0xFFFF80
GUI_LIGHTMAGENTA		0xFF80FF
GUI_LIGHTYELLOW		0x80FFFF
GUI_DARKBLUE		0x800000
GUI_DARKGREEN		0x008000
GUI_DARKRED		0x000080
GUI_DARKCYAN		0x808000
GUI_DARKMAGENTA		0x800080
GUI_DARKYELLOW		0x008080
GUI_WHITE		0xFFFFFF
GUI_LIGHTGRAY		0xD3D3D3
GUI_GRAY		0x808080
GUI_DARKGRAY		0x404040
GUI_BLACK		0x000000
GUI_BROWN		0x2A2AA5

Example

```
/* Set background color to magenta */
GUI_SetBkColor(GUI_MAGENTA);
GUI_Clear();
```

13.2 The color bar test routine

The color bar example program is used to show 13 color bars as follows:

Black -> Red, White -> Red, Black -> Green, White -> Green, Black -> Blue, White -> Blue, Black -> White, Black -> Yellow, White -> Yellow, Black -> Cyan, White -> Cyan, Black -> Magenta and White -> Magenta.

This little routine may be used on all displays in any color format. Of course, the results vary depending on the colors that can be displayed; the routine requires a display size of 320*240 in order to show all colors. The routine is used to demonstrate the effect of the different color settings for displays. It may also be used by a test program to verify the functionality of the display, to check available colors and grayscales, as well as to correct color conversion. The screen shots are taken from the windows simulation and will look exactly like the actual output on your display if your settings and hardware are working properly. The routine is available as `COLOR_ShowColorBar.c` in the examples shipped with emWin.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

13.3 Fixed palette modes

The following table lists the available fixed palette color modes and the necessary identifiers which need to be used when creating a driver- or a memory device. Detailed descriptions follow.

Identifier	No. available colors	Mask
GUICC_1	2 (black and white)	0x01
GUICC_2	4 (grayscales)	0x03
GUICC_4	16 (grayscales)	0x0F
GUICC_5	32 (grayscales)	0x1F
GUICC_111	8	BGR
GUICC_M111	8	RGB
GUICC_222	64	BBGGRR
GUICC_M222	64	RRGGBB
GUICC_233	256	BBGGGRRR
GUICC_M233	256	RRGGGBBB
GUICC_323	256	BBBGGRRR
GUICC_M323	256	RRRGGBBB
GUICC_332	256	BBBGGGRR
GUICC_M332	256	RRRGGGBB
GUICC_44412	4096	0000BBBBGGGGRRRR
GUICC_M444_12	4096	0000RRRRGGGGBBBB
GUICC_444121	4096	BBBBGGGGRRRR0000
GUICC_44416	4096	0BBBB0GGGG0RRRR0
GUICC_M44416	4096	0RRRR0GGGG0BBBB0
GUICC_555	32768	0BBBBBGGGGGRRRRR
GUICC_M555	32768	0RRRRRGGGGGBBBBB
GUICC_556	65536	BBBBBGGGGGRRRRRR
GUICC_M556	65536	RRRRRGGGGGBBBBBB
GUICC_565	65536	BBBBBGGGGGGRRRRR
GUICC_M565	65536	RRRRRGGGGGGBBBBB
GUICC_655	65536	BBBBBBGGGGGRRRRR
GUICC_M655	65536	RRRRRRGGGGGBBBBB
GUICC_666	262144	BBBBBBGGGGGGRRRRRR
GUICC_M666	262144	RRRRRRGGGGGGBBBBBB
GUICC_666_9	262144	0000000BBBBBBGGG0000000GGGRRRRRR
GUICC_M666_9	262144	0000000RRRRRRGGG0000000GGGBBBBBB
GUICC_822216	256	0xFF
GUICC_84444	240	0xFF
GUICC_8666	232	0xFF
GUICC_86661	233 (232 + transparency)	0xFF

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Identifier	No. available colors	Mask
GUICC_888	16777216	BBBBBBBBGGGGGGGGRRRRRRRR
GUICC_M888	16777216	RRRRRRRRGGGGGGGGBBBBBBBB
GUICC_8888	16777216 + 8 bit alpha blending	AAAAAAAABBBBBBBBGGGGGGGGRRRRRRRR
GUICC_M8888	16777216 + 8 bit alpha blending	AAAAAAAARRRRRRRRGGGGGGGGBBBBBBBB
GUICC_0	x	x

13.4 Detailed fixed palette mode description

The following gives a detailed description of the available colors in each predefined fixed palette mode.

GUICC_1: 1 bpp (black and white)

Use of this mode is necessary for monochrome displays with 1 bit per pixel.




Available colors: 2:



GUICC_2: 2 bpp (4 grayscales)

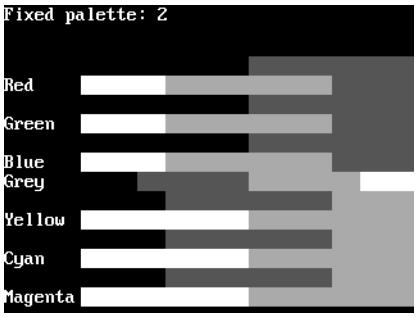Use of this mode is necessary for monochrome displays with 2 bits per pixel.




Available colors: 2 x 2 = 4:



GUICC_4: 4 bpp (16 grayscales)

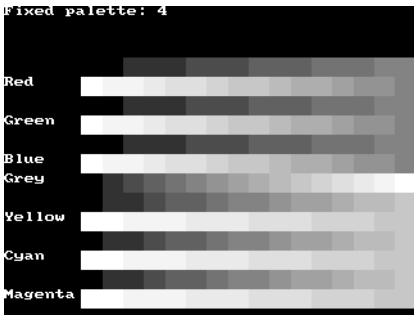Use of this mode is necessary for monochrome displays with 4 bits per pixel.




Available colors: 2 x 2 x 2 x 2 = 16:



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUICC_5: 5 bpp (32 grayscales)

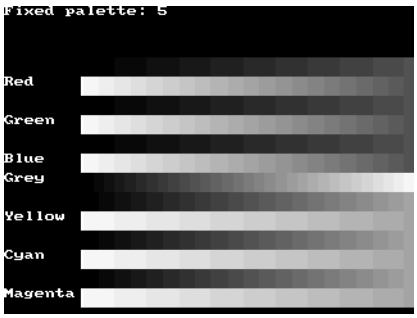Use of this mode is necessary for monochrome displays with 5 bits per pixel.



Available colors: 2 x 2 x 2 x 2 x 2 = 32:



GUICC_111: 3 bpp (2 levels per color)

Use this mode if the basic 8 colors are enough, if your hardware supports only one bit per pixel and color or if you do not have sufficient video memory for a higher color depth.
Color mask: BGR



Available colors: 2 x 2 x 2 = 8:



GUICC_M111: 3 bpp (2 levels per color), red and blue swapped

Use this mode if the basic 8 colors are enough, if your hardware supports only one bit per pixel and color or if you do not have sufficient video memory for a higher color depth. The available colors are the same as those in 111 mode.
Color mask: RGB
Available colors: 2 x 2 x 2 = 8:



GUICC_222: 6 bpp (4 levels per color)

This mode is a good choice if your hardware does not have a palette for every individual color. 2 bits per pixel and color are reserved; usually 1 byte is used to store one pixel.
Color mask: BBGGRR



Available colors: 4 x 4 x 4 = 64:



GUICC_M222: 6 bpp (4 levels per color), red and blue swapped


This mode is a good choice if your hardware does not have a palette for every individual color. 2 bits per pixel and color are reserved; usually 1 byte is used to store one pixel. The available colors are the same as those in 222 mode.
Color mask: RRGGBB
Available colors: 4 x 4 x 4 = 64:



© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUICC_233: 8 bpp

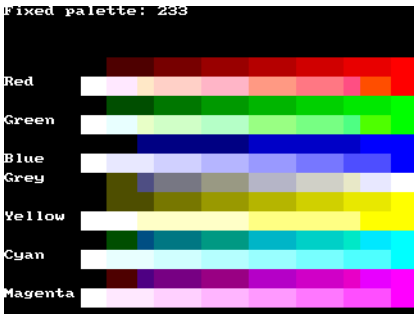This mode supports 256 colors. 3 bits are used for the red and green components of the color and 2 bits for the blue component. As shown in the picture, the result is 8 grades for green and red and 4 grades for blue. We discourage the use of this mode because it do not contain real shades of gray.
Color mask: BBGGGRRR




Available colors: 4 x 8 x 8 = 256:



GUICC_M233: 8 bpp, red and blue swapped

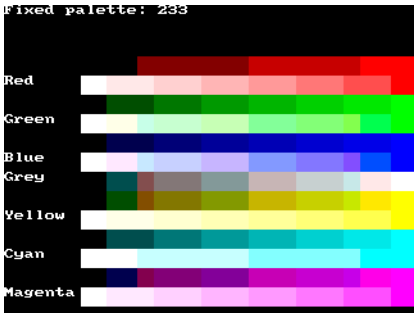This mode supports 256 colors. 3 bits are used for the red and green components of the color and 2 bits for the blue component. The result is 8 grades for green and blue and 4 grades for red. We discourage the use of this mode because it do not contain real shades of gray.
Color mask: RRGGGBBB




Available colors: 4 x 8 x 8 = 256:



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

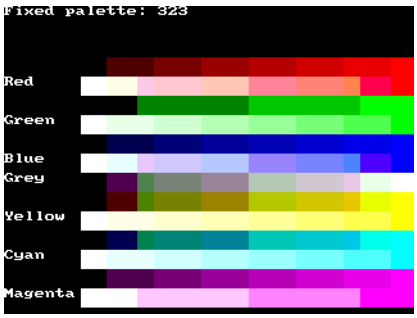GUICC_323: 8 bpp



This mode supports 256 colors. 3 bits are used for the red and blue components of the color and 2 bits for the green component. As shown in the picture, the result is 8 grades for blue and red and 4 grades for green. We discourage the use of this mode because it do not contain real shades of gray.
Color mask: BBBGGRRR

Available colors: 8 x 4 x 8 = 256:



GUICC_M323: 8 bpp, red and blue swapped

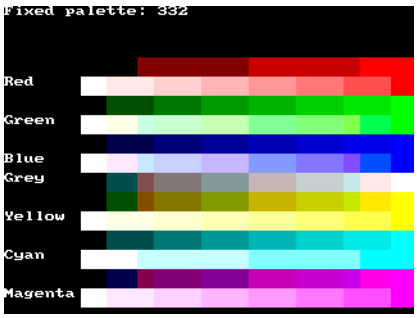
This mode supports 256 colors. 3 bits are used for the red and blue components of the color and 2 bits for the green component. The available colors are the same as those in 323 mode. The result is 8 grades for red and blue and 4 grades for green. We discourage the use of this mode because it do not contain real shades of gray.
Color mask: RRRGGBBB
Available colors: 8 x 4 x 8 = 256:



© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

332 mode: 8 bpp

This mode supports 256 colors. 3 bits are used for the blue and green components of the color and 2 bits for the red component. As shown in the picture, the result is 8 grades for green and blue and 4 grades for red. We discourage the use of this mode because it do not contain real shades of gray.
Color mask: BBBGGGRR




Available colors: 8 x 8 x 4 = 256:



GUICC_332: 8 bpp, red and blue swapped

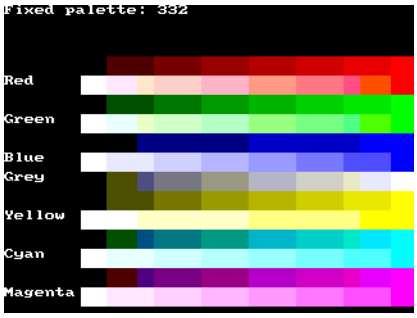This mode supports 256 colors. 3 bits are used for the red and green components of the color and 2 bits for the blue component. The result is 8 grades for red and green and only 4 grades for blue. We discourage the use of this mode because it do not contain real shades of gray.
Color mask: RRRGGGBB




Available colors: 8 x 8 x 4 = 256:



GUICC_44412:

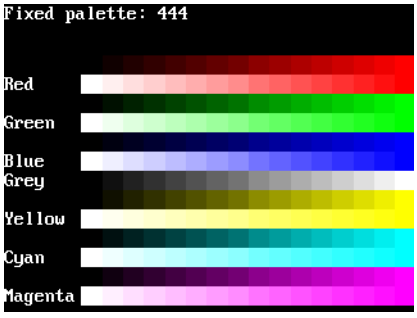The red, green and blue components are each 4 bits.
Color mask: 0000BBBBGGGGRRRR
Available colors: 16 x 16 x 16 = 4096.



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUICC_44416:

The red, green and blue components are each 4 bits. One bit between the color components is not used. The available colors are the same as those in 44412 mode.
Color mask: 0BBBB0GGGG0RRRR0
Available colors: 16 x 16 x 16 = 4096.

GUICC_44412: red and blue swapped

The red, green and blue components are each 4 bits. The available colors are the same as those in 44412 mode.
Available colors: 16 x 16 x 16 = 4096.
Color mask: RRRRGGGGBBBB

GUICC_44416: red and blue swapped


The red, green and blue components are each 4 bits. One bit between the color components is not used. The available colors are the same as those in 44412 mode.
Color mask: 0RRRR0GGGG0BBBB0
Available colors: 16 x 16 x 16 = 4096.

GUICC_444121:

The red, green and blue components are each 4 bits. The lower 4 bits of the color mask are not used. The available colors are the same as those in 44412 mode.
Color mask: BBBBGGGGRRRR0000
Available colors: 16 x 16 x 16 = 4096.

GUICC_555: 15 bpp

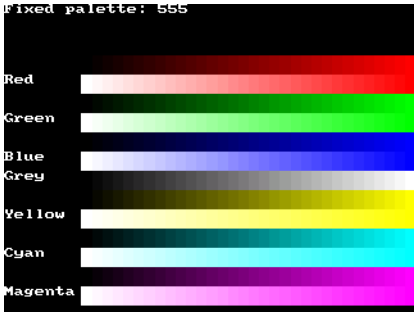Use of this mode is necessary for a display controller that supports RGB colors with a color-depth of 15 bpp. The red, green and blue components are each 5 bits.
Color mask: BBBBBGGGGGRRRRR
Available colors: 32 x 32 x 32 = 32768.




GUICC_M555: 15 bpp, red and blue swapped

Use of this mode is necessary for a display controller that supports RGB colors with a color-depth of 15 bpp. The red, green and blue components are each 5 bits. The available colors are the same as those in 555 mode.
Color mask: RRRRRGGGGGBBBBB
Available colors: 32 x 32 x 32 = 32768.

GUICC_565: 16 bpp

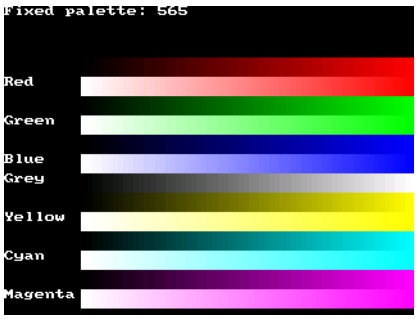Use of this mode is necessary for a display controller that supports RGB colors with a color-depth of 16 bpp. The red and the blue component is 5 bits and the green component is 6 bit.
Color mask: BBBBBGGGGGGRRRRR
Available colors: 32 x 64 x 32 = 65536.



GUICC_M565: 16 bpp, red and blue swapped

Use of this mode is necessary for a display controller that supports RGB colors with a color-depth of 16 bpp. The available colors are the same as those in 565 mode.
Color sequence: RRRRRGGGGGGBBBBB
Available colors: 32 x 64 x 32 = 65536.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUICC_556: 16 bpp

Use of this mode is necessary for a display controller that supports RGB colors with a color-depth of 16 bpp. The blue and the green component is 5 bit and the red component is 6 bit.
Color mask: BBBBBGGGGGRRRRR
Available colors: 32 x 32 x 64 = 65536.

GUICC_M556: 16 bpp, red and blue swapped

Use of this mode is necessary for a display controller that supports RGB colors with a color-depth of 16 bpp. The red and the green component is 5 bit and the blue component is 6 bit.
Color mask: RRRRRGGGGGBBBBB
Available colors: 32 x 32 x 64 = 65536.

GUICC_655: 16 bpp

Use of this mode is necessary for a display controller that supports RGB colors with a color-depth of 16 bpp. The red and green component is 5 bit and the blue component is 6 bit.
Color mask: BBBBBBGGGGGRRRRR
Available colors: 64 x 32 x 32 = 65536.

GUICC_M655: 16 bpp, red and blue swapped

Use of this mode is necessary for a display controller that supports RGB colors with a color-depth of 16 bpp. The blue and green component is 5 bit and the red component is 6 bit.
Color mask: RRRRRGGGGGBBBBB
Available colors: 64 x 32 x 32 = 65536.

GUICC_666: 18 bpp

Use of this mode is necessary for a display controller that supports RGB colors with a color-depth of 18 bpp. The red, green and blue component is 6 bit.
Color mask: BBBBBBGGGGGGRRRRRR
Available colors: 64 x 64 x 64 = 262144.

GUICC_M666: 18 bpp, red and blue swapped

Use of this mode is necessary for a display controller that supports RGB colors with a color-depth of 18 bpp. The red, green and the blue component is 6 bit.
Color mask: RRRRRRGGGGGGBBBBBB
Available colors: 64 x 64 x 64 = 262144.

GUICC_666_9: 18 bpp

Use of this mode is necessary for a display controller that supports RGB colors with a color-depth of 18 bpp. The red, green and blue component is 6 bit.
Color mask: 0000000BBBBBBGGG0000000GGGRRRRRR
Available colors: 64 x 64 x 64 = 262144.

GUICC_M666_9: 18 bpp, red and blue swapped

Use of this mode is necessary for a display controller that supports RGB colors with a color-depth of 18 bpp. The red, green and blue component is 6 bit.
Color mask: RRRRRRGGGGGGBBBBBB
Available colors: 64 x 64 x 64 = 262144.


 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUICC_822216: 8 bpp, 2 levels per color + 8 grayscales + 16 levels of alpha blending

This mode can be used with a programmable color lookup table (LUT), supporting a total of 256 possible colors and alpha blending support. It supports the 8 basic colors, 8 grayscales and 16 levels of alpha blending for each color / grayscale. With other words it can be used if only a few colors are required but more levels of alpha blending.

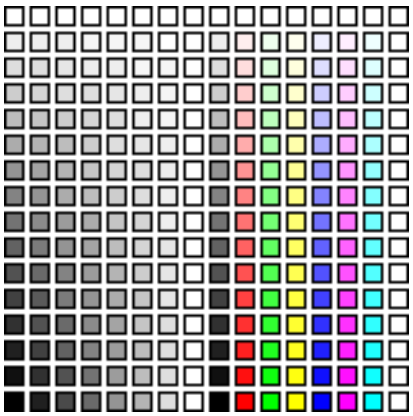
Available colors: (2 x 2 x 2 + 8) * 16 = 256





GUICC_84444: 8 bpp, 4 levels per color + 16 grayscales + 4(3) levels of alpha blending

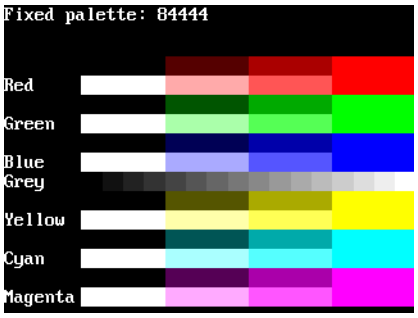
This mode can be used with a programmable color lookup table (LUT), supporting a total of 256 possible colors and alpha blending support. 4 levels of intensity are available for each color, in addition to 16 grayscales and 4 levels of alpha blending for each color / grayscale. With other words it can be used if only a few levels of alpha blending are required and different shades of colors.
Available colors: (4 x 4 x 4 + 16) * 3 = 240





© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

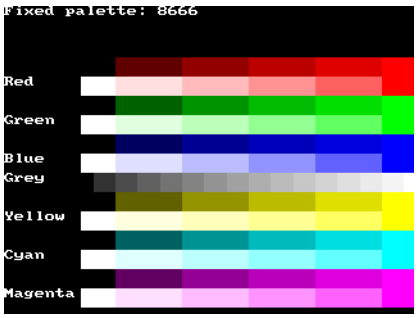GUICC_8666: 8bpp, 6 levels per color + 16 grayscales



This mode is most frequently used with a programmable color lookup table (LUT), supporting a total of 256 possible colors using a palette. The screen shot gives an idea of the available colors; this mode contains the best choice for general purpose applications. Six levels of intensity are available for each color, in addition to 16 grayscales.

Available colors: 6 x 6 x 6 + 16 = 232:




GUICC_86661: 8bpp, 6 levels per color + 16 grayscales + transparency

This mode is most frequently used with multi layer configurations and a programmable color lookup table (LUT), supporting a total of 256 possible colors using a palette. The difference between 8666 and 86661 is, that the first color indices of the 86661 mode are not used. So the color conversion routine GUI_Color2Index does never return 0 which is used for transparency.
Available colors: 6 x 6 x 6 + 16 = 232.



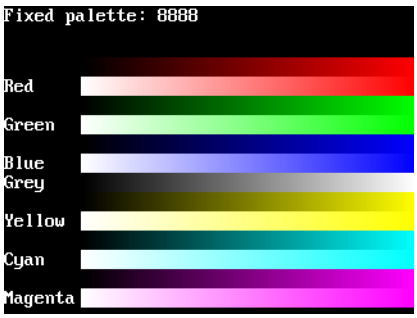GUICC_888: 24 bpp



Use of this mode is necessary for a display controller that supports RGB colors with a color depth of 24 bpp. The red, green and blue components are each 8 bits.
Color mask: BBBBBBBBGGGGGGGGRRRRRRRR
Available colors: 256 x 256 x 256 = 16777216.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUICC_M888: 24 bpp, red and blue swapped

Use of this mode is necessary for a display controller that supports RGB colors with a color depth of 24 bpp. The red, green and blue components are each 8 bits.
Color mask: RRRRRRRRGGGGGGGGBBBBBBBB
Available colors: 256 x 256 x 256 = 16777216.

GUICC_8888: 32 bpp

Use of this mode is necessary for a display controller that supports RGB colors with a color depth of 32 bpp, where the lower 3 bytes are used for the color components and the upper byte is used for alpha blending. The red, green, blue and alpha blending components are each 8 bits.
Color mask: AAAAAAAABBBBBBBBGGGGGGGGRRRRRRRR
Available colors: 256 x 256 x 256 = 16777216.

GUICC_M8888: 32 bpp, red and blue swapped

Use of this mode is necessary for a display controller that supports RGB colors with a color depth of 32 bpp, where the lower 3 bytes are used for the color components and the upper byte is used for alpha blending. The red, green, blue and alpha blending components are each 8 bits.
Color mask: AAAAAAAARRRRRRRRGGGGGGGGBBBBBBBB
Available colors: 256 x 256 x 256 = 16777216.

GUICC_0: Custom palette mode

(explained later in this chapter)

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

13.5 Application defined color conversion

If none of the fixed palette modes matches the need of color conversion this mode makes it possible to use application defined color conversion routines. The purpose of these routines is converting an RGB value into an index value for the hardware and vice versa.

Example of defining custom color conversion routines

The following example should explain how it works:

```
static unsigned _Color2Index_User(LCD_COLOR Color) {
  unsigned Index;
  /* Add code for converting the RGB value to an index value for the hardware */
  return Index;
}

static LCD_COLOR _Index2Color_User(unsigned Index) {
  LCD_COLOR Color;
  /* Add code for converting the index value into an RGB value */
  return Color;
}

static unsigned _GetIndexMask_User(void) {
  return 0xffff; /* Example for using 16 bits */
}

const LCD_API_COLOR_CONV LCD_API_ColorConv_User = {
  _Color2Index_User,
  _Index2Color_User,
  _GetIndexMask_User
};
```

The function `LCD_Color2Index_User()` is called by emWin if a RGB value should be converted into an index value for the display controller whereas the function `LCD_Index2Color_User`() is called if an index value should be converted into a RGB value.
`LCD_GetIndexMask_User()` should return a bit mask value, which has each bit set to 1 which is used by the display controller and unused bits should be set to 0. For example the index mask of `GUICC_44416` mode is 0BBBB0GGGG0RRRR0, where 0 stands for unused bits. The bit mask for this mode is 0x7BDE.

Example of using custom color conversion routines

As described in the chapter 'Configuration' a pointer to an API table is required for creating the display driver device. As shown in the example above the API table consists of function pointers to the color conversion routines.
A good location for the API table and the color conversion routines is the configuration file `LCDConf.c` located in the `Config` folder. The routines can be used as follow in the function `LCD_X_Config()` which is responsible to create the display driver device:

```
void LCD_X_Config(void) {
  //
  // Set display driver and color conversion for 1st layer
  //
  GUI_DEVICE_CreateAndLink(GUIDRV_LIN_16, &LCD_API_ColorConv_User, 0, 0);
  .
  .
  .
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

13.6 Custom palette mode

If none of the fixed palette modes fulfils the requirements of the application emWin is able to use a custom palette. A custom palette simply lists all the available colors in the same order as they are used by the hardware. This means that no matter what colors your LCD controller/display combination is able to display, emWin will be able to simulate them in the PC simulation and handle these colors correctly in your target system. Working with a custom palette requires a color depth <= 8 bpp.
A custom palette is typically used during the initialization in the function LCD_X_Config() which is responsible for creating and configuring the display driver device.

Example

The following example should show how a custom palette can be used. It passes the palette to the function:

```
static const LCD_COLOR _aColors_16[] = {
  0x000000,  0x0000FF,  0x00FF00,  0x00FFFF,
  0xFF0000,  0xFF00FF,  0xFFFF00,  0xFFFFFF,
  0x000000,  0x000080,  0x008000,  0x008080,
  0x800000,  0x800080,  0x808000,  0x808080,
};

static const LCD_PHYSPALETTE _aPalette_16 = {
  COUNTOF(_aColors_16), _aColors_16
};

void LCD_X_Config(void) {
  //
  // Set display driver and color conversion for 1st layer
  //
  .
  .
  .
  //
  // Set user palette data (only required if no fixed palette is used)
  //
  LCD_SetLUTEx(0, _aPalette_16);
}
```

13.7 Color API

The following table lists the available color-related functions in alphabetical order within their respective categories. Detailed description of the routines can be found in the sections that follow.

Routine	Description
Basic color functions	
GUI_GetBkColor()	Return the current background color.
GUI_GetBkColorIndex()	Return the index of the current background color.
GUI_GetColor()	Return the current foreground color.
GUI_GetColorIndex()	Return the index of the current foreground color.
GUI_SetBkColor()	Set the current background color.
GUI_SetBkColorIndex()	Set the index of the current background color.
GUI_SetColor()	Set the current foreground color.
GUI_SetColorIndex()	Set the index of the current foreground color.
Index & color conversion	
GUI_CalcColorDist()	Returns the difference between 2 colors
GUI_CalcVisColorError()	Returns the difference to the next available color
GUI_Color2Index()	Convert color into color index.
GUI_Color2VisColor()	Returns the nearest available color
GUI_ColorIsAvailable()	Checks if given color is available
GUI_Index2Color()	Convert color index into color.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

13.8 Basic color functions

GUI_GetBkColor()

Description

Returns the current background color.

Prototype

```
GUI_COLOR GUI_GetBkColor(void);
```

Return value

The current background color.

GUI_GetBkColorIndex()

Description

Returns the index of the current background color.

Prototype

```
int GUI_GetBkColorIndex(void);
```

Return value

The current background color index.

GUI_GetColor()

Description

Returns the current foreground color.

Prototype

```
GUI_COLOR GUI_GetColor(void);
```

Return value

The current foreground color.

GUI_GetColorIndex()

Description

Returns the index of the current foreground color.

Prototype

```
int GUI_GetColorIndex(void);
```

Return value

The current foreground color index.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_SetBkColor()

Description

Sets the current background color.

Prototype

```
GUI_COLOR GUI_SetBkColor(GUI_COLOR Color);
```

Parameter	Description
Color	Color for background, 24-bit RGB value.

Return value

The selected background color.

GUI_SetBkColorIndex()

Description

Sets the index of the current background color.

Prototype

```
int GUI_SetBkColorIndex(int Index);
```

Parameter	Description
Index	Index of the color to be used.

Return value

The selected background color index.

GUI_SetColor()

Description

Sets the current foreground color.

Prototype

```
void GUI_SetColor(GUI_COLOR Color);
```

Parameter	Description
Color	Color for foreground, 24-bit RGB value.

Return value

The selected foreground color.

GUI_SetColorIndex()

Description

Sets the index of the current foreground color.

Prototype

```
void GUI_SetColorIndex(int Index);
```

Parameter	Description
Index	Index of the color to be used.

Return value

The selected foreground color index.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

13.9 Index & color conversion

GUI_CalcColorDist()

Calculates the distance between 2 colors. The distance will be calculated by the sum of the square value from the distances of the red, green and the blue component:
Difference = (Red1 - Red0)² + (Green1 - Green0)² + (Blue1 - Blue0)²

Prototype

```
U32 GUI_CalcColorDist(GUI_COLOR Color0, GUI_COLOR Color1))
```

Parameter	Description
Color0	RGB value of the first color.
Color1	RGB value of the second color.

Return value

The distance as described above.

GUI_CalcVisColorError()

Calculates the distance to the next available color. For details about the calculation, refer to “GUI_CalcColorDist()” on page 244.

Prototype

```
U32 GUI_CalcVisColorError(GUI_COLOR color)
```

Parameter	Description
Color	RGB value of the color to be calculated.

Return value

The distance to the next available color.

GUI_Color2Index()

Returns the index of a specified RGB color value.

Prototype

```
int GUI_Color2Index(GUI_COLOR Color)
```

Parameter	Description
Color	RGB value of the color to be converted.

Return value

The color index.

GUI_Color2VisColor()

Returns the next available color of the system as an RGB color value.

Prototype

```
GUI_COLOR GUI_Color2VisColor(GUI_COLOR color)
```

Parameter	Description
Color	RGB value of the color.

Return value

The RGB color value of the nearest available color.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_ColorIsAvailable()

Checks if the given color is available.

Prototype

```
char GUI_ColorIsAvailable(GUI_COLOR color)
```

Parameter	Description
Color	RGB value of the color.

Return value

1 if color is available, 0 if not.

GUI_Index2Color()

Returns the RGB color value of a specified index.

Prototype

```
int GUI_Index2Color(int Index)
```

Parameter	Description
Index	Index of the color. to be converted

Return value

The RGB color value.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 14

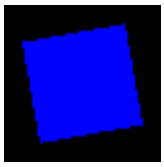
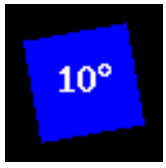
Memory Devices

Memory devices can be used in a variety of situations, mainly to prevent the display from flickering when using drawing operations for overlapping items. The basic idea is quite simple. Without the use of a memory device, drawing operations write directly to the display. The screen is updated as drawing operations are executed, which gives it a flickering appearance as the various updates are made. For example, if you want to draw a bitmap in the background and some transparent text in the foreground, you would first have to draw the bitmap and then the text. The effect would be a flickering of the text.
If a memory device is used for such a procedure, however, all drawing operations are executed in memory. The final result is displayed on the screen only when all operations have been carried out, with the advantage of no flickering. This difference can be seen in the example in the following section, which illustrates a sequence of drawing operations both with and without the use of a memory device.
The distinction may be summarized as follows: If no memory device is used, the effects of drawing operations can be seen step by step, with the disadvantage of a flickering display. With a memory device, the effects of all routines are made visible as a single operation. No intermediate steps can actually be seen. The advantage, as explained above, is that display flickering is completely eliminated, and this is often desirable.
Memory devices are an additional (optional) software item and are not shipped with the emWin basic package. The software for memory devices is located in the subdirectory `GUI\Memdev`.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

14.1 Using memory devices: an illustration

The following table shows screen shots of the same operations handled with and without a memory device. The objective in both cases is identical: a work piece is to be rotated and labeled with the respective angle of rotation (here, 10 degrees). In the first case (without a memory device) the screen must be cleared, then the polygon is redrawn in the new position and a string with the new label is written. In the second case (with a memory device) the same operations are performed in memory, but the screen is not updated during this time. The only update occurs when the routine `GUI_MEMDEV_CopyToLCD()` is called, and this update reflects all the operations at once. Note that the initial states and final outputs of both procedures are identical.

API function	Without memory device	With memory device
Step 0: Initial state		
Step 1: `GUI_Clear()`		
Step 2: `GUI_DrawPolygon()`		
Step 3: `GUI_DispString()`		
Step 4: `GUI_MEMDEV_CopyToLCD()` (only when using memory device)		

14.2 Supported color depth (bpp)

Memory devices are available in 4 different color depth:
1 bpp, 8 bpp, 16 bpp and 32 bpp.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Creating memory devices "compatible" to the display

There are two ways to create memory devices. If they are use to avoid flickering, a memory device compatible to the display is created. This "compatible" memory device needs to have the same or a higher color depth as the display. emWin automatically selects the "right" type of memory device for the display if the functions `GUI_MEMDEV_Create()`, `GUI_MEMDEV_CreateEx()` are used.
The Window manager, which also has the ability to use memory devices for some or all windows in the system, also uses these functions.
This way, the memory device with the lowest color depth (using the least memory) is automatically used.

Creating memory devices for other purposes

Memory devices of any type can be created using `GUI_MEMDEV_CreateFixed()`. A typical application would be the use of a memory device for printing as described later in this chapter.

14.3 Memory devices and the window manager

The window manager works seamlessly with memory devices. Every window has a flag which tells the window manager if a memory device should be used for rendering. This flag can be specified when creating the window or set/reset at any time.
If the memory device flag is set for a particular window, the WM automatically uses a memory device when drawing the window. It creates a memory device before drawing a window and deletes it after the drawing operation. If enough memory is available, the whole window fits into the size of the memory device created by the WM. If not enough memory is available for the complete window in one memory device, the WM uses 'banding' for drawing the window. Details about 'banding' are described in the documentation, chapter 'Memory Devices \ Banding memory device'. The memory used for the drawing operation is only allocated during the drawing operation. If there is not enough memory available when (re-)drawing the window, the window is redrawn without memory device.

14.4 Memory devices and multiple layers

The memory device API functions do not have any option to specify a layer. Please note that when creating a memory device the memory device is associated with the currently selected layer. The memory devices also use automatically the color conversion settings of the currently selected layer.

Example

```
//
// Create a memory device associated with layer 1
//
GUI_SelectLayer(1);
hMem = GUI_MEMDEV_Create(0, 0, 100, 100);
GUI_MEMDEV_Select(hMem);
GUI_DrawLine(0, 0, 99, 99);
GUI_MEMDEV_Select(0);
//
// Select layer 0
//
GUI_SelectLayer(0);
//
// The following line copies the memory device to layer 1 and not to layer 0
//
GUI_MEMDEV_CopyToLCD(hMem);
```

14.5 Memory requirements

If creating a memory device the required number of bytes depends on the color depth of the memory device and whether transparency support is needed or not.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Memory usage without transparency support

The following table shows the memory requirement in dependence of the system color depth for memory devices without transparency support.

Color depth of memory device	System color depth (LCD_BITSPERPIXEL)	Memory usage
1 bpp	1 bpp	1 byte / 8 pixels: (XSIZE + 7) / 8 * YSIZE
8 bpp	2, 4 and 8 bpp	XSIZE * YSIZE
16 bpp	12 and 16 bpp	2 bytes / pixel: XSIZE * YSIZE * 2
32 bpp	18, 24 and 32 bpp	4 bytes / pixel: XSIZE * YSIZE * 4

Example:

A memory device of 111 pixels in X and 33 pixels in Y should be created. It should be compatible to a display with a color depth of 12 bpp and should support transparency. The required number of bytes can be calculated as follows:

Number of required bytes = (111 * 2 + (111 + 7) / 8) * 33 = 7788 bytes

Memory usage with transparency support

If a memory device should support transparency it needs one additional byte / 8 pixels for internal management.

Color depth of memory device	System color depth (LCD_BITSPERPIXEL)	Memory usage
1 bpp	1 bpp	2 byte / 8 pixels: (XSIZE + 7) / 8 * YSIZE * 2
8 bpp	2, 4 and 8 bpp	1 bytes / pixel + 1 byte / 8 pixels: (XSIZE + (XSIZE + 7) / 8) * YSIZE
16 bpp	12 and 16 bpp	2 bytes / pixel + 1 byte / 8 pixels: (XSIZE * 2 + (XSIZE + 7) / 8) * YSIZE
32 bpp	18, 24 and 32 bpp	4 bytes / pixel + 1 byte / 8 pixels: (XSIZE * 4 + (XSIZE + 7) / 8) * YSIZE

Example:

A memory device of 200 pixels in X and 50 pixels in Y should be created. It should be compatible to a display with a color depth of 4bpp and should support transparency. The required number of bytes can be calculated as follows:

Number of required bytes = (200 + (200 + 7) / 8) * 50 = 11250 bytes

14.6 Performance

Using memory devices typically does not significantly affect performance. When memory devices are used, the work of the driver is easier: It simply transfers bitmaps to the display controller. On systems with slow drivers (for example displays connected via serial interface), the performance is better if memory devices are used; on systems with a fast driver (such as memory mapped display memory, GUIDRV_Lin and others) the use of memory devices costs some performance.
If 'banding' is needed, the used time to draw a window increases with the number of bands. The more memory available for memory devices, the better the performance.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

14.7 Basic functions

The following routines are those that are normally called when using memory devices. Basic usage is rather simple:

1. Create the memory device (using `GUI_MEMDEV_Create()`).
2. Activate it (using `GUI_MEMDEV_Select()`).
3. Execute drawing operations.
4. Copy the result into the display (using `GUI_MEMDEV_CopyToLCD()`).
5. Delete the memory device if you no longer need it (using `GUI_MEMDEV_Delete()`).

14.8 In order to be able to use memory devices...

Memory devices are enabled by default. In order to optimize performance of the software, support for memory devices can be switched off in the configuration file `GUIConf.h` by including the following line:

```
#define GUI_SUPPORT_MEMDEV        0
```

If this line is in the configuration file and you want to use memory devices, either delete the line or change the define to 1.

14.9 Multi layer / multi display configurations

As explained earlier in this chapter memory devices "compatible" to the display needs to have the same or a higher color depth as the display. When creating a memory device compatible to the display emWin "knows" the color depth of the currently selected layer/display and automatically uses the lowest color depth.

14.10 Configuration options

Type	Macro	Default	Description
B	GUI_USE_MEMDEV_1BPP_FOR_SCREEN	1	Enables the use of 1bpp memory devices with displays of 1bpp color depth.

14.10.1 GUI_USE_MEMDEV_1BPP_FOR_SCREEN

On systems with a display color depth <= 8bpp the default color depth of memory devices compatible to the display is 8bpp. To enable the use of 1bpp memory devices with displays of 1bpp color depth the following line should be added to the configuration file GUIConf.h:

```
#define GUI_USE_MEMDEV_1BPP_FOR_SCREEN 0
```

14.11 Memory device API

The table below lists the available routines of the emWin memory device API.
All functions are listed in alphabetical order within their respective categories. Detailed descriptions of the routines can be found in the sections that follow.

Routine	Description
Basic functions	
GUI_MEMDEV_Clear()	Marks the memory device contents as unchanged
GUI_MEMDEV_CopyFromLCD()	Copies contents of LCD to memory device
GUI_MEMDEV_CopyToLCD()	Copies contents of memory device to LCD

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
GUI_MEMDEV_CopyToLCDAA()	Copies the contents of memory device antialiased
GUI_MEMDEV_CopyToLCDAt()	Copies contents of memory device to LCD at the given position
GUI_MEMDEV_Create()	Creates the memory device (first step)
GUI_MEMDEV_CreateEx()	Creates the memory device with additional creation flags
GUI_MEMDEV_CreateFixed()	Creates a memory device with a given color depth
GUI_MEMDEV_Delete()	Frees the memory used by the memory device
GUI_MEMDEV_DrawPerspectiveX()	Draws the given memory device perspectively distorted into the current selected device
GUI_MEMDEV_GetDataPtr()	Returns a pointer to the data area for direct manipulation
GUI_MEMDEV_GetXSize()	Returns the X-size (width) of memory device
GUI_MEMDEV_GetYSize()	Returns the Y-size (height) of memory device
GUI_MEMDEV_MarkDirty()	Marks a rectangle area as dirty.
GUI_MEMDEV_ReduceYSize()	Reduces Y-size of memory device
GUI_MEMDEV_Rotate()	Rotates and scales a memory device and writes the result into a memory device using the 'nearest neighbor' method
GUI_MEMDEV_RotateHQ()	Rotates and scales a memory device and writes the result into a memory device using the 'high quality' method
GUI_MEMDEV_Select()	Selects a memory device as target for drawing operations
GUI_MEMDEV_SetOrg()	Changes the origin of the memory device on the LCD
GUI_MEMDEV_Write()	Writes the contents of a memory device into a memory device
GUI_MEMDEV_WriteAlpha()	Writes the contents of a memory device into a memory device using alpha blending
GUI_MEMDEV_WriteAlphaAt()	Writes the contents of a memory device into a memory device using the given position and alpha blending
GUI_MEMDEV_WriteAt()	Writes the contents of a memory device into a memory device to the given position
GUI_MEMEDV_WriteEx()	Writes the contents of a memory device into a memory device using alpha blending and scaling
GUI_MEMDEV_WriteExAt()	Writes the contents of a memory device into a memory device to the given position using alpha blending and scaling
GUI_SelectLCD()	Selects the LCD as target for drawing operations
Banding memory device	
GUI_MEMDEV_Draw()	Use a memory device for drawing
Auto device object functions	
GUI_MEMDEV_CreateAuto()	Creates an auto device object
GUI_MEMDEV_DeleteAuto()	Deletes an auto device object
GUI_MEMDEV_DrawAuto()	Uses a GUI_AUTODEV object for drawing
Measurement device object functions	
GUI_MEASDEV_ClearRect()	Clears the measurement rectangle
GUI_MEASDEV_Create()	Creates a measurement device
GUI_MEASDEV_Delete()	Deletes a measurement device
GUI_MEASDEV_GetRect()	Retrieves the measurement result
GUI_MEASDEV_Select()	Selects a measurement device as target for drawing operations
Animation functions	
GUI_MEMDEV_FadeDevices()	Performs fading from one to another memory device.
GUI_MEMDEV_SetAnimationCallback()	Sets a user defined function to be called while animations are processed.
Animation functions (Window Manager required)	
GUI_MEMDEV_FadeInWindow()	Fades in a window by decreasing the alpha value

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
GUI_MEMDEV_FadeOutWindow()	Fades out a window by increasing the alpha value
GUI_MEMDEV_MoveInWindow()	Moves in a Window from a specified to its actual position by magnification (optionally with rotation)
GUI_MEMDEV_MoveOutWindow()	Moves out a Window from its actual to a specified position by demagnification (optionally with rotation)
GUI_MEMDEV_ShiftInWindow()	Shifts a Window in a specified direction into the screen to its actual position.
GUI_MEMDEV_ShiftOutWindow()	Shifts a Window in a specified direction from its actual position out of the screen.
GUI_MEMDEV_ShiftWindow()	Shifts a window in a specified direction into the screen to its actual position and shifts out the old content of the window area.

14.12 Basic functions

GUI_MEMDEV_Clear()

Description

Marks the entire contents of a memory device as "unchanged".

Prototype

```
void GUI_MEMDEV_Clear(GUI_MEMDEV_Handle hMem);
```

Parameter	Description
hMem	Handle to memory device.

Additional information

The next drawing operation with `GUI_MEMDEV_CopyToLCD()` will then write only the bytes modified between `GUI_MEMDEV_Clear()` and `GUI_MEMDEV_CopyToLCD()`.

GUI_MEMDEV_CopyFromLCD()

Description

Copies the contents of a memory device from LCD data (video memory) to the memory device. In other words: read back the contents of the LCD to the memory device.

Prototype

```
void GUI_MEMDEV_CopyFromLCD(GUI_MEMDEV_Handle hMem);
```

Parameter	Description
hMem	Handle to memory device.

GUI_MEMDEV_CopyToLCD()

Description

Copies the contents of a memory device from memory to the LCD.

Prototype

```
void GUI_MEMDEV_CopyToLCD(GUI_MEMDEV_Handle hMem);
```

Parameter	Description
hMem	Handle to memory device.

Additional information

Do not use this function within a paint callback function called by the window man-

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

ager, because it deactivates the clipping area of the window manager. The function GUI_MEMDEV_WriteAt should be used instead.

GUI_MEMDEV_CopyToLCDAA()

Description

Copies the contents of a memory device (antialiased) from memory to the LCD.

Prototype

```
void GUI_MEMDEV_CopyToLCDAA(GUI_MEMDEV_Handle MemDev);
```

Parameter	Description
hMem	Handle to memory device.

Additional information

The device data is handled as antialiased data. A matrix of 2x2 pixels is converted to 1 pixel. The intensity of the resulting pixel depends on how many pixels are set in the matrix.

Example

Creates a memory device and selects it for output. A large font is then set and a text is written to the memory device:

```
GUI_MEMDEV_Handle hMem = GUI_MEMDEV_Create(0,0,60,32);
GUI_MEMDEV_Select(hMem);
GUI_SetFont(&GUI_Font32B_ASCII);
GUI_DispString("Text");
GUI_MEMDEV_CopyToLCDAA(hMem);
```

Screen shot of above example



GUI_MEMDEV_CopyToLCDAt()

Description

Copies the contents of a memory device from memory to the LCD at the given position.

Prototype

```
void GUI_MEMDEV_CopyToLCDAt(GUI_MEMDEV_Handle hMem, int x, int y)
```

Parameter	Description
hMem	Handle to memory device.
x	Position in X
y	Position in Y

GUI_MEMDEV_Create()

Description

Creates a memory device.

Prototype

```
GUI_MEMDEV_Handle GUI_MEMDEV_Create(int x0, int y0, int XSize, int YSize)
```

Parameter	Description
x0	X-position of memory device.
y0	Y-position of memory device.
xsize	X-size of memory device.
ysize	Y-size of memory device.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

Handle for created memory device. If the routine fails the return value is 0.

GUI_MEMDEV_CreateEx()

Description

Creates a memory device.

Prototype

```
GUI_MEMDEV_Handle GUI_MEMDEV_CreateEx(int x0, int y0,
                                      int XSize, int YSize
                                      int Flags)
```

Parameter	Description
x0	X-position of memory device.
y0	Y-position of memory device.
xsize	X-size of memory device.
ysize	Y-size of memory device.
Flags	(see table below).

Permitted values for parameter Flags	
GUI_MEMDEV_HASTRANS (recommended)	Default: The memory device is created with a transparency flag which ensures that the background will be drawn correctly.
GUI_MEMDEV_NOTRANS	Creates a memory device without transparency. The user must make sure that the background is drawn correctly. This way the memory device can be used for non-rectangular areas. An other advantage is the higher speed: Using this flag accelerates the memory device app. 30 - 50%.

Return value

Handle for created memory device. If the routine fails the return value is 0.

GUI_MEMDEV_CreateFixed()

Description

Creates a memory device of fixed size, color depth (bpp) and specified color conversion.

Prototype

```
GUI_MEMDEV_Handle GUI_MEMDEV_CreateFixed(
                                  int x0, int y0, int xsize, int ysize,
                                  int Flags,
                                  const tLCDDEV_APIList     * pMemDevAPI,
                                  const LCD_API_COLOR_CONV * pColorConvAPI)
```

Parameter	Description
x0	X-position of memory device.
y0	Y-position of memory device.
xsize	X-size of memory device.
ysize	Y-size of memory device.
Flags	(see table below).
pMemDevAPI	(see table below).
pColorConvAPI	(see table below).

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for parameter Flags	
GUI_MEMDEV_HASTRANS (recommended)	Default: The memory device is created with a transparency flag which ensures that the background will be drawn correctly.
GUI_MEMDEV_NOTRANS	Creates a memory device without transparency. The user must make sure that the background is drawn correctly. This way the memory device can be used for non-rectangular areas. An other advantage is the higher speed: Using this flag accelerates the memory device app. 30 - 50%.

Parameter pMemDevAPI	
Defines the color depth of the memory device in bpp. The color depth of the memory device should be equal or greater than the required bits for the color conversion routines. A memory device with a 1bpp color conversion (GUI_COLOR_CONV_1) for example requires at least a memory device with 1bpp color depth. The available memory devices are 1bpp, 8bpp, 16bpp and 32bpp memory devices. So an 1bpp memory device should be used. If using a 4 bit per pixel color conversion (GUI_COLOR_CONV_4) at least 4bpp are needed for the memory device. In this case an 8bpp memory device should be used.	
Permitted values	
GUI_MEMDEV_APILIST_1	Create memory device with 1bpp color depth (1 byte per 8 pixels) Use if the specified color conversion requires 1bpp.
GUI_MEMDEV_APILIST_8	Create memory device with 8bpp color depth (1 byte per pixel) Use if the specified color conversion requires 8bpp or less.
GUI_MEMDEV_APILIST_16	Create memory device with 16bpp color depth (1 U16 per pixel) Use if the specified color conversion requires more than 8 bpp. (High color modes)
GUI_MEMDEV_APILIST_32	Create memory device with 32bpp color depth (1 U32 per pixel) Use if the specified color conversion requires more than 16 bpp. (True color modes)

Parameter pColorConvAPI	
This parameter defines the desired color conversion. For more details about the used bits per pixel and the color conversion, refer to the chapter “Colors” on page 227.	
Permitted values	
GUI_COLOR_CONV_1	Same color conversion like the fixed palette mode 1. (black/white)
GUI_COLOR_CONV_2	Same color conversion like the fixed palette mode 2. (4 gray scales)
GUI_COLOR_CONV_4	Same color conversion like the fixed palette mode 4. (16 gray scales)
GUI_COLOR_CONV_565	Same color conversion like the fixed palette mode 565.
GUI_COLOR_CONV_M565	Same color conversion like the fixed palette mode M565.
GUI_COLOR_CONV_8666	Same color conversion like the fixed palette mode 8666.
GUI_COLOR_CONV_888	Same color conversion like the fixed palette mode 888.
GUI_COLOR_CONV_8888	Same color conversion like the fixed palette mode 8888.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

Handle for created memory device. If the routine fails the return value is 0.

Additional information

This function can be used if a memory device with a specified color conversion should be created. This could make sense if for example some items should be printed on a printer device. The `Sample` folder contains the code example `MEMDEV_Printing.c` which shows how to use the function to print something in 1bpp color conversion mode.

Example

The following example shows how to create a memory device with 1bpp color depth:

```
GUI_MEMDEV_Handle hMem;
hMem = GUI_MEMDEV_CreateFixed(0, 0, 128, 128, 0,
                              GUI_MEMDEV_APILIST_1, /* Used API list */
                             GUI_COLOR_CONV_1);    /* Black/white color conversion */
GUI_MEMDEV_Select(hMem);
```

GUI_MEMDEV_Delete()

Description

Deletes a memory device.

Prototype

```
void GUI_MEMDEV_Delete(GUI_MEMDEV_Handle MemDev);
```

Parameter	Description
hMem	Handle to memory device.

Return value

Handle for deleted memory device.

GUI_MEMDEV_DrawPerspectiveX()

Description

Draws the given memory device perspectively distorted into the currently selected device.


Prototype

```
void GUI_MEMDEV_DrawPerspectiveX(GUI_MEMDEV_Handle hMem, int x, int y,
                                 int h0, int h1, int dx, int dy);
```

Parameter	Description
hMem	Handle to source memory device with the image to be drawn.
x	Horizontal start position in pixels.
y	Vertical start position in pixels.
h0	Height of the leftmost edge of the image to be drawn.
h1	Height of the rightmost edge of the image to be drawn.
dx	Width of the image to be drawn.
dy	Position in y from the topmost pixel at the right relative to the topmost pixel at the left.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

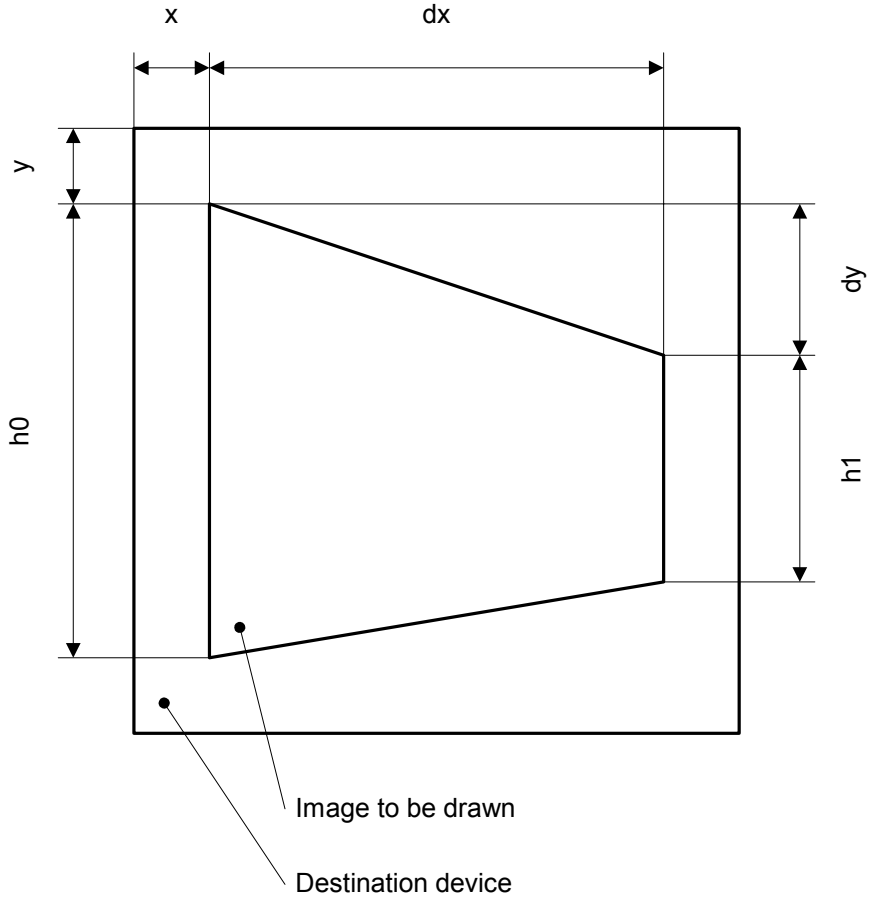The picture below explains the parameters more detailed:



Additional information

The function draws the contents of the given memory device into the currently selected device. The origin of the source device should be (0, 0). Size and distortion of the new image is defined by the parameters `dx`, `dy`, `h0` and `h1`.
Note that the function currently only works with memory devices with 32-bpp color depth and a system color depth of 32 bpp.


Example

The following example shows how to use the function:

```
GUI_MEMDEV_Handle hMem0, hMem1, hMem2;
hMem0 = GUI_MEMDEV_CreateFixed(0, 0, 150, 150, GUI_MEMDEV_NOTRANS,
                               GUI_MEMDEV_APILIST_32,
                               GUI_COLOR_CONV_888);
hMem1 = GUI_MEMDEV_CreateFixed(0, 0,  75, 150, GUI_MEMDEV_HASTRANS,
                               GUI_MEMDEV_APILIST_32,
                               GUI_COLOR_CONV_888);
hMem2 = GUI_MEMDEV_CreateFixed(0, 0,  75, 150, GUI_MEMDEV_HASTRANS,
                               GUI_MEMDEV_APILIST_32,
                               GUI_COLOR_CONV_888);
GUI_MEMDEV_Select(hMem0);
GUI_JPEG_Draw(_aJPEG, sizeof(_aJPEG), 0, 0);
GUI_MEMDEV_Select(hMem1);
GUI_MEMDEV_DrawPerspectiveX(hMem0, 0,  0, 150, 110, 75,  20);
GUI_MEMDEV_Select(hMem2);
GUI_MEMDEV_DrawPerspectiveX(hMem0, 0, 20, 110, 150, 75, -20);
GUI_MEMDEV_CopyToLCDAt(hMem0,   0, 10);
GUI_MEMDEV_CopyToLCDAt(hMem1, 160, 10);
GUI_MEMDEV_CopyToLCDAt(hMem2, 245, 10);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Screenshot of the above example

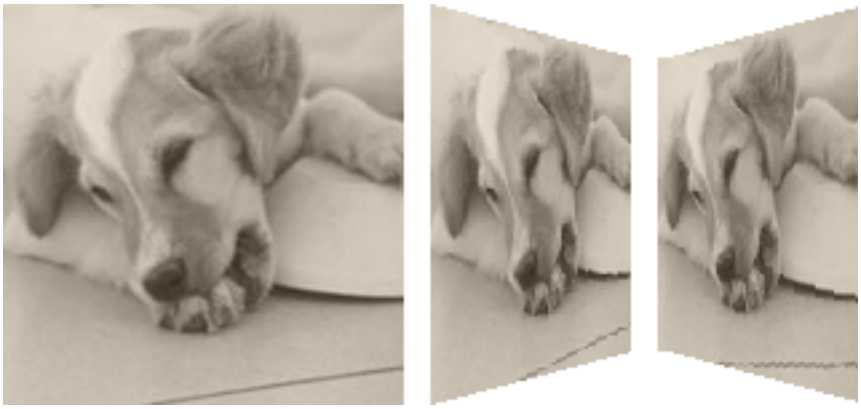

GUI_MEMDEV_GetDataPtr()

Description

Returns a pointer to the data area (image area) of a memory device. This data area can then be manipulated without the use of GUI functions; it can for example be used as output buffer for a JPEG or video decompression routine.

Prototype

```
void* GUI_MEMDEV_GetDataPtr(GUI_MEMDEV_Handle hMem);
```

Parameter	Description
hMem	Handle to memory device.

Additional information

The device data is stored from the returned address onwards. An application modifying this data has to take extreme caution that it does not overwrite memory outside of this data area. If this data area is used with emWins default memory management, the memory area must remain locked as long as the pointer is in use.

Organization of the data area:

The pixels are stored in the mode "native" to the display (or layer) for which they are intended. For layers with 8 bpp or less, 8 bits (1 byte) are used per pixel; for layers with more than 8 and less or equal 16 bpp, a 16 bit value (U16) is used for one pixel. The memory is organized in reading order which means: First byte (or U16), stored at the start address, represents the color index of the pixel in the upper left corner (y=0, x=0); the next pixel, stored right after the first one, is the one to the left at (y=0, x=1). (Unless the memory device area is only 1 pixel wide). The next line is stored right after the first line in memory, without any kind of padding. Endian mode is irrelevant, it is assumed that 16 bit units are accessed as 16 bit units and not as 2 separate bytes. The data area is comprised of (xSize * ySize) pixels, so
xSize * ySize bytes for 8bpp or lower memory devices,
2 * xSize * ySize bytes (accessed as xSize * ySize units of 16 bits) for 16 bpp memory devices.

GUI_MEMDEV_GetXSize()

Description

Returns the X-size (width) of a memory device.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
int  GUI_MEMDEV_GetXSize(GUI_MEMDEV_Handle hMem);
```

Parameter	Description
hMem	Handle to memory device.

GUI_MEMDEV_GetYSize()

Description

Returns the Y-size (height) of a memory device in pixels.

Prototype

```
int  GUI_MEMDEV_GetYSize(GUI_MEMDEV_Handle hMem);
```

Parameter	Description
hMem	Handle to memory device.

GUI_MEMDEV_MarkDirty()

Description

Marks a rectangle area as dirty.

Prototype

```
void GUI_MEMDEV_MarkDirty(GUI_MEMDEV_Handle hMem,
                          int x0, int y0, int x1, int y1);
```

Parameter	Description
hMem	Handle to the memory device.
x0	x-coordinate of the upper left corner.
y0	y-coordinate of the upper left corner.
x1	x-coordinate of the lower right corner.
y1	y-coordinate of the lower right corner.

GUI_MEMDEV_ReduceYSize()

Description

Reduces the Y-size of a memory device.

Prototype

```
void GUI_MEMDEV_ReduceYSize(GUI_MEMDEV_Handle hMem, int YSize);
```

Parameter	Description
hMem	Handle to memory device.
YSize	New Y-size of the memory device.

Additional information

Changing the size of the memory device is more efficient than deleting and then recreating it.

GUI_MEMDEV_Rotate(), GUI_MEMDEV_RotateHQ()

Description

The functions rotate and scale the given source memory device. The source device will be rotated and scaled around its center and then shifted by the given amount of pixels. The result is saved into the given destination memory device.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

The difference between both functions is the algorithm for calculating the destination pixel data. GUI_MEMDEV_Rotate() uses the 'nearest neighbor' method which is fast but less accurate. GUI_MEMDEV_RotateHQ() uses a more complex method which is quite accurate but not as fast as the 'nearest neighbor' method.
For a more detailed impression of the difference between the functions there are two screenshots at the end of this function description.


Prototypes

```
void GUI_MEMDEV_RotateHQ(GUI_MEMDEV_Handle hSrc, GUI_MEMDEV_Handle hDst,
                         int dx, int dy, int a, int Mag);

void GUI_MEMDEV_Rotate(GUI_MEMDEV_Handle hSrc, GUI_MEMDEV_Handle hDst,
                       int dx, int dy, int a, int Mag);
```

Parameter	Description
hSrc	Handle of memory device to be rotated and scaled.
hDst	Handle of destination device.
dx	Distance in pixels for shifting the image in X.
dy	Distance in pixels for shifting the image in Y.
a	Angle to be used for rotation in degrees * 1000.
Mag	Magnification factor * 1000

The following picture gives a more detailed impression of the parameters:

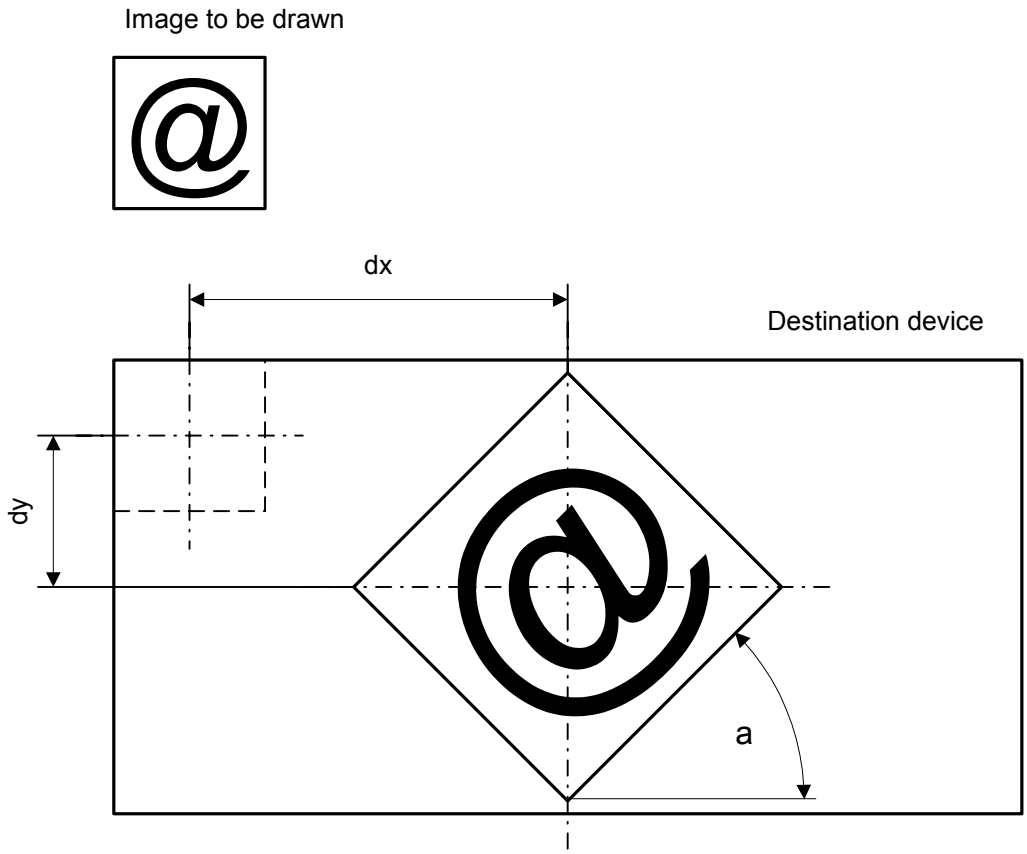

Additional information

Both memory devices, source and destination, need to be 32 bit memory devices. In any other case the function will return immediately.
The Sample folder also contains the example MEMDEV_ZoomAndRotate.c which shows in detail how the function can be used.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Example

```
GUI_MEMDEV_Handle hMemSource;
GUI_MEMDEV_Handle hMemDest;
GUI_RECT RectSource = {0, 0, 69, 39};
GUI_RECT RectDest   = {0, 0, 79, 79};
hMemSource = GUI_MEMDEV_CreateFixed(RectSource.x0, RectSource.y0,
                                    RectSource.x1 - RectSource.x0 + 1,
                                    RectSource.y1 - RectSource.y0 + 1,
                                    GUI_MEMDEV_NOTRANS,
                                    GUI_MEMDEV_APILIST_32, GUI_COLOR_CONV_888);
hMemDest   = GUI_MEMDEV_CreateFixed(RectDest.x0,   RectDest.y0,
                                    RectDest.x1   - RectDest.x0   + 1,
                                    RectDest.y1   - RectDest.y0   + 1,
                                    GUI_MEMDEV_NOTRANS,
                                    GUI_MEMDEV_APILIST_32, GUI_COLOR_CONV_888);
GUI_MEMDEV_Select(hMemSource);
GUI_DrawGradientV(RectSource.x0, RectSource.y0,
                  RectSource.x1, RectSource.y1,
                  GUI_WHITE, GUI_DARKGREEN);
GUI_SetColor(GUI_BLUE);
GUI_SetFont(&GUI_Font20B_ASCII);
GUI_SetTextMode(GUI_TM_TRANS);
GUI_DispStringInRect("emWin", &RectSource, GUI_TA_HCENTER | GUI_TA_VCENTER);
GUI_DrawRect(0, 0, RectSource.x1, RectSource.y1);
GUI_MEMDEV_RotateHQ(hMemSource, hMemDest,
                    (RectDest.x1 - RectSource.x1) / 2,
                    (RectDest.y1 - RectSource.y1) / 2,
                    30 * 1000,
                    1000);
GUI_MEMDEV_CopyToLCDAt(hMemSource,  10, (RectDest.y1 - RectSource.y1) / 2);
GUI_MEMDEV_CopyToLCDAt(hMemDest,   100, 0);
```

Screenshot of the above example using GUI_MEMDEV_RotateHQ()



Screenshot of the above example using GUI_MEMDEV_Rotate()



GUI_MEMDEV_Select()

Description

Activates a memory device (or activates LCD if handle is 0)

Prototype

```
void GUI_MEMDEV_Select(GUI_MEMDEV_Handle hMem)
```

Parameter	Description
hMem	Handle to memory device.

GUI_MEMDEV_SetOrg()

Description

Changes the origin of the memory device on the LCD.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void GUI_MEMDEV_SetOrg(GUI_MEMDEV_Handle hMem, int x0, int y0);
```

Parameter	Description
hMem	Handle to memory device.
x0	Horizontal position (of the upper left pixel).
y0	Vertical position (of the upper left pixel).

Additional information

This routine can be helpful when the same device is used for different areas of the screen or when the contents of the memory device are to be copied into different areas.
Changing the origin of the memory device is more efficient than deleting and then recreating it.

GUI_MEMDEV_Write()

Description

Writes the contents of the given memory device into the currently selected memory device.

Prototype

```
void GUI_MEMDEV_Write(GUI_MEMDEV_Handle hMem);
```

Parameter	Description
hMem	Handle to memory device.

GUI_MEMDEV_WriteAlpha()

Description

Writes the contents of the given memory device into the currently selected memory device using alpha blending.

Prototype

```
void GUI_MEMDEV_WriteAlpha(GUI_MEMDEV_Handle hMem, int Alpha);
```

Parameter	Description
hMem	Handle to memory device.
Alpha	Alpha blending factor, 0 - 255

Additional information

Alpha blending means mixing 2 colors with a given intensity. This function makes it possible to write semi-transparent from one memory device into an other memory device. The Alpha-parameter specifies the intensity used when writing to the currently selected memory device.

GUI_MEMDEV_WriteAlphaAt()

Description

Writes the contents of the given memory device into the currently selected memory device at the specified position using alpha blending.

Prototype

```
void GUI_MEMDEV_WriteAlphaAt(GUI_MEMDEV_Handle hMem,
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                                int Alpha, int x, int y);
```

Parameter	Description
hMem	Handle to memory device.
Alpha	Alpha blending factor, 0 - 255
x	Position in X
y	Position in Y

Additional information

(See GUI_MEMDEV_WriteAlpha)

GUI_MEMDEV_WriteAt()

Description

Writes the contents of the given memory device into the currently selected memory device at the specified position.

Prototype

```
void GUI_MEMDEV_WriteAt(GUI_MEMDEV_Handle hMem, int x, int y);
```

Parameter	Description
hMem	Handle to memory device.
x	Position in X
y	Position in Y

GUI_MEMDEV_WriteEx()

Description

Writes the contents of the given memory device into the currently selected memory device at position (0, 0) using alpha blending and scaling.

Prototype

```
void GUI_MEMDEV_WriteEx(GUI_MEMDEV_Handle hMem,
                        int xMag, int yMag, int Alpha);
```

Parameter	Description
hMem	Handle to memory device.
xMag	Scaling factor for X-axis * 1000.
yMag	Scaling factor for Y-axis * 1000.
Alpha	Alpha blending factor, 0 - 255.

Additional information

A negative scaling factor mirrors the output. Refer also to “GUI_MEMDEV_WriteExAt()” on page 264.

GUI_MEMDEV_WriteExAt()

Description

Writes the contents of the given memory device into the currently selected memory device at the specified position using alpha blending and scaling.

Prototype

```
void GUI_MEMDEV_WriteExAt(GUI_MEMDEV_Handle hMem,
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                                    int x, int y, int xMag, int yMag, int Alpha);
```

Parameter	Description
hMem	Handle to memory device.
x	Position in X.
y	Position in Y.
xMag	Scaling factor for X-axis * 1000.
yMag	Scaling factor for Y-axis * 1000.
Alpha	Alpha blending factor, 0 - 255.

Additional information

A negative scaling factor mirrors the output.

Example

The following example creates 2 memory devices: hMem0 (40x10) and hMem1 (80x20). A small white text is drawn at the upper left position of hMem0 and hMem1. Then the function GUI_MEMDEV_WriteEx() writes the contents of hMem0 to hMem1 using mirroring and magnifying:

```
GUI_MEMDEV_Handle hMem0, hMem1;
GUI_Init();
hMem0 = GUI_MEMDEV_Create(0, 0, 40, 10);
hMem1 = GUI_MEMDEV_Create(0, 0, 80, 20);
GUI_MEMDEV_Select(hMem0);
GUI_SetTextMode(GUI_TM_TRANS);
GUI_DispString("Text");
GUI_MEMDEV_Select(hMem1);
GUI_SetBkColor(GUI_RED);
GUI_Clear();
GUI_DispStringAt("Text", 0, 0);
GUI_MEMDEV_WriteExAt(hMem0, 0, 0, -2000, -2000, 160);
GUI_MEMDEV_CopyToLCD(hMem1);
```

Screenshot of the above example



GUI_SelectLCD()

Description

Selects the LCD as target for drawing operations.

Prototype

```
void GUI_SelectLCD(void))
```

Example for using a memory device


The Sample folder contains the following example which shows how memory devices can be used:

- MEMDEV_MemDev.c

This example demonstrates the use of a memory device. Some items are written to a memory device and then copied to the display. Note that several other examples also make use of memory devices and may also be helpful to get familiar with them.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Screenshot of the above example:

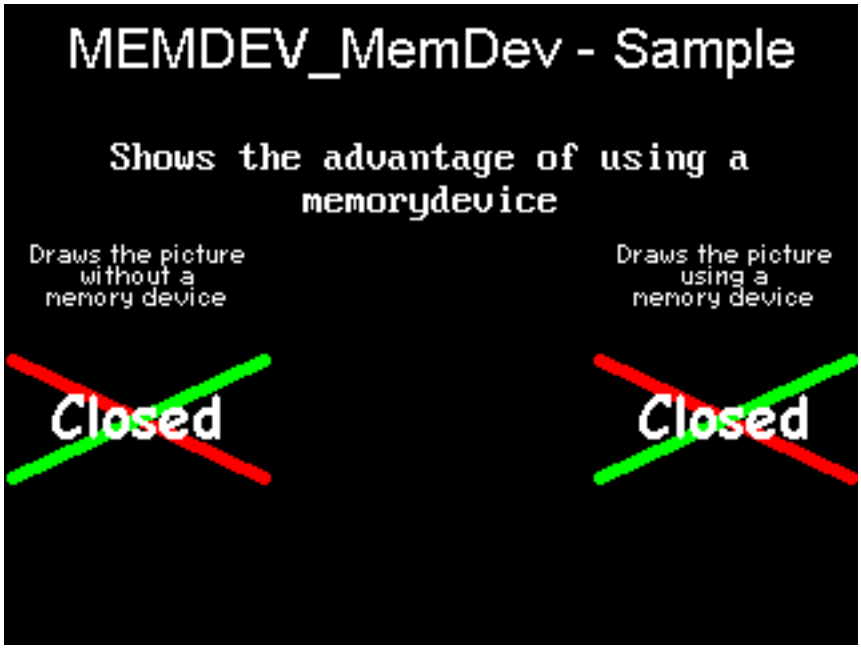

14.13 Banding memory device

A memory device is first filled by executing the specified drawing functions. After filling the device, the contents are drawn to the LCD. There may not be enough memory available to store the complete output area at once, depending on your configuration (see the GUI_ALLOC_SIZE configuration macro in the chapter "Configuration" on page 905. A banding memory device divides the drawing area into bands, in which each band covers as many lines as possible with the currently available memory.

GUI_MEMDEV_Draw()

Description

Basic drawing function that prevents flickering of the display.

Prototype

```
int GUI_MEMDEV_Draw(GUI_RECT* pRect,
                    GUI_CALLBACK_VOID_P* pfDraw,
                    void* pData,
                    int NumLines,
                     int Flags)
```

Parameter	Description
pRect	Pointer to a GUI_RECT structure for the used LCD area.
pfDraw	Pointer to a callback function for executing the drawing.
pData	Pointer to a data structure used as parameter for the callback function.
NumLines	0 (recommended) or number of lines for the memory device.
Flags	(see table below).

Permitted values for parameter Flags	
GUI_MEMDEV_HASTRANS (recommended)	Default: The memory device is created with a transparency flag which ensures that the background will be drawn correctly.
GUI_MEMDEV_NOTRANS	Creates a memory device without transparency. The user must make sure that the background is drawn correctly. Should be used for optimization purposes only.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

0 if successful, 1 if the routine fails.

Additional information

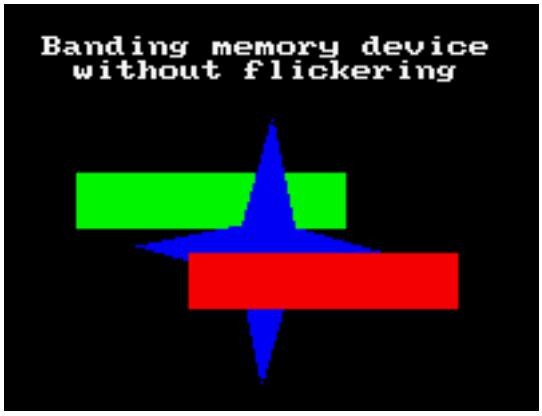
If the parameter `NumLines` is 0, the number of lines in each band is calculated automatically by the function. The function then iterates over the output area band by band by moving the origin of the memory device.

Example for using a banding memory device

The `Sample` folder contains the following example which shows how the function can be used:

- `MEMDEV_Banding.c`

Screen shot of above example



14.14 Auto device object

Memory devices are useful when the display must be updated to reflect the movement or changing of items, since it is important in such applications to prevent the LCD from flickering. An auto device object is based on the banding memory device, and may be more efficient for applications such as moving indicators, in which only a small part of the display is updated at a time.
The device automatically distinguishes which areas of the display consist of fixed objects and which areas consist of moving or changing objects that must be updated. When the drawing function is called for the first time, all items are drawn. Each further call updates only the space used by the moving or changing objects. The actual drawing operation uses the banding memory device, but only within the necessary space. The main advantage of using an auto device object (versus direct usage of a banding memory device) is that it saves computation time, since it does not keep updating the entire display.

GUI_MEMDEV_CreateAuto()

Description

Creates an auto device object.

Prototype

```
int GUI_MEMDEV_CreateAuto(GUI_AUTODEV * pAutoDev);
```

Parameter	Description
pAutoDev	Pointer to a GUI_AUTODEV object.

Return value

Currently 0, reserved for later use.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_MEMDEV_DeleteAuto()

Description

Deletes an auto device object.

Prototype

```
void GUI_MEMDEV_DeleteAuto(GUI_AUTODEV * pAutoDev);
```

Parameter	Description
pAutoDev	Pointer to a GUI_AUTODEV object.

GUI_MEMDEV_DrawAuto()

Description

Executes a specified drawing routine using a banding memory device.

Prototype

```
int GUI_MEMDEV_DrawAuto(GUI_AUTODEV          * pAutoDev,
                        GUI_AUTODEV_INFO     * pAutoDevInfo,
                        GUI_CALLBACK_VOID_P * pfDraw,
                        void                 * pData);
```

Parameter	Description
pAutoDev	Pointer to a GUI_AUTODEV object.
pAutoDevInfo	Pointer to a GUI_AUTODEV_INFO object.
pfDraw	Pointer to the user-defined drawing function which is to be executed.
pData	Pointer to a data structure passed to the drawing function.

Return value

0 if successful, 1 if the routine fails.

Additional information

The GUI_AUTODEV_INFO structure contains the information about what items must be drawn by the user function:

```
typedef struct {
  char DrawFixed;
} GUI_AUTODEV_INFO;
```

DrawFixed is set to 1 if all items have to be drawn. It is set to 0 when only the moving or changing objects have to be drawn. We recommend the following procedure when using this feature:

```
typedef struct {
  GUI_AUTODEV_INFO AutoDevInfo; /* Information about what has to be drawn */
  /* Additional data used by the user function */
  ...
} PARAM;

static void Draw(void * p) {
  PARAM * pParam = (PARAM *)p;
  if (pParam->AutoDevInfo.DrawFixed) {
    /* Draw fixed background */
    ...
  }
  /* Draw moving objects */
  ...
  if (pParam->AutoDevInfo.DrawFixed) {
    /* Draw fixed foreground (if needed) */
    ...
  }
}

void main(void) {
  PARAM Param;                    /* Parameters for drawing routine */
```

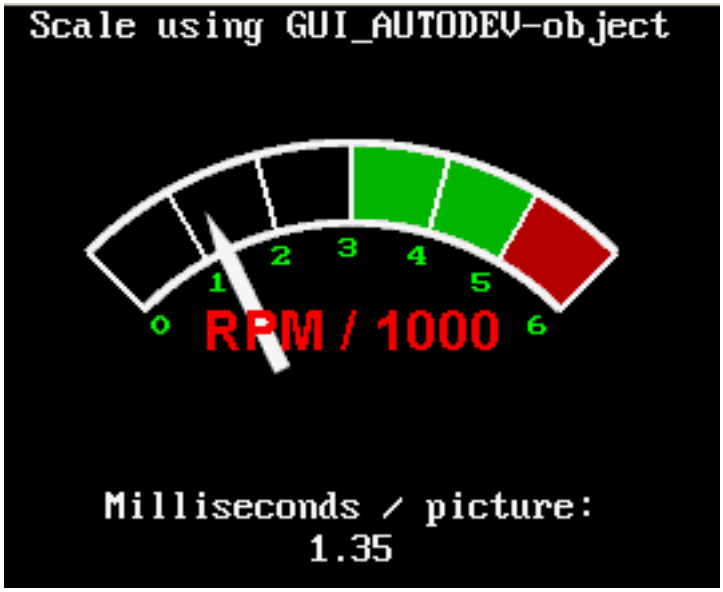
 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
  GUI_AUTODEV AutoDev;             /* Object for banding memory device */
  /* Set/modify informations for drawing routine */
  ...
  GUI_MEMDEV_CreateAuto(&AutoDev); /* Create GUI_AUTODEV-object */
  GUI_MEMDEV_DrawAuto(&AutoDev,    /* Use GUI_AUTODEV-object for drawing */
                      &Param.AutoDevInfo,
                      &Draw,
                      &Param);
  GUI_MEMDEV_DeleteAuto(&AutoDev); /* Delete GUI_AUTODEV-object */
}
```

Example for using an auto device object

The example `MEMDEV_AutoDev.c` demonstrates the use of an auto device object. It can be found as `MEMDEV_AutoDev.c`. A scale with a moving needle is drawn in the background and a small text is written in the foreground. The needle is drawn with the antialiasing feature of emWin. High-resolution antialiasing is used here to improve the appearance of the moving needle. For more information, see the chapter “Antialiasing” on page 787.

Screen shot of above example



14.15 Measurement device object

Measurement devices are useful when you need to know the area used to draw something. Creating and selecting a measurement device as target for drawing operations makes it possible to retrieve the rectangle used for drawing operations.

GUI_MEASDEV_Create()

Description

Creates a measurement device.

Prototype

```
GUI_MEASDEV_Handle GUI_MEASDEV_Create(void);
```

Return value

The handle of the measurement device.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_MEASDEV_ClearRect()

Description

Call this function to clear the measurement rectangle of the given measurement device.

Prototype

```
void GUI_MEASDEV_ClearRect(GUI_MEASDEV_Handle hMem);
```

Parameter	Description
hMem	Handle to measurement device.

GUI_MEASDEV_Delete()

Description

Deletes a measurement device.

Prototype

```
void GUI_MEASDEV_Delete (GUI_MEASDEV_Handle hMem);
```

Parameter	Description
hMem	Handle to measurement device.

GUI_MEASDEV_GetRect()

Description

Retrieves the result of the drawing operations.

Prototype

```
void GUI_MEASDEV_GetRect(GUI_MEASDEV_Handle hMem, GUI_RECT *pRect);
```

Parameter	Description
hMem	Handle to measurement device.
pRect	Pointer to GUI_RECT-structure to store result.

GUI_MEASDEV_Select()

Description

Selects a measurement device as target for drawing operations.

Prototype

```
void GUI_MEASDEV_Select (GUI_MEASDEV_Handle hMem);
```

Parameter	Description
hMem	Handle to measurement device.

Example

The following example shows the use of a measurement device. It creates a measurement device, draws a line and displays the result of the measurement device:

```
void MainTask(void) {
  GUI_MEASDEV_Handle hMeasdev;
  GUI_RECT Rect;
  GUI_Init();
  hMeasdev = GUI_MEASDEV_Create();
  GUI_MEASDEV_Select(hMeasdev);
  GUI_DrawLine(10, 20, 30, 40);
  GUI_SelectLCD();
  GUI_MEASDEV_GetRect(hMeasdev, &Rect);
  GUI_MEASDEV_Delete(hMeasdev);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
  GUI_DispString("X0:");
  GUI_DispDec(Rect.x0, 3);
  GUI_DispString(" Y0:");
  GUI_DispDec(Rect.y0, 3);
  GUI_DispString(" X1:");
  GUI_DispDec(Rect.x1, 3);
  GUI_DispString(" Y1:");
  GUI_DispDec(Rect.y1, 3);
}
```

Screenshot of the above example:



14.16 Animation functions

Animations can be used to inject some life into the application. They will always help to let the user's eye smoothly capture what happens in the application.

GUI_MEMDEV_FadeDevices()

Description

Performs fading from one to another memory device.

Prototype

```
int GUI_MEMDEV_FadeDevices(GUI_MEMDEV_Handle hMem0,
                           GUI_MEMDEV_Handle hMem1,
                           int               Period);
```

Parameter	Description
hMem0	Handle to the memory device which has to be faded out.
hMem1	Handle to the memory device which has to be faded in.
Period	Time period in which the fading is processed.

Return value

0 if successful, 1 if the function fails.

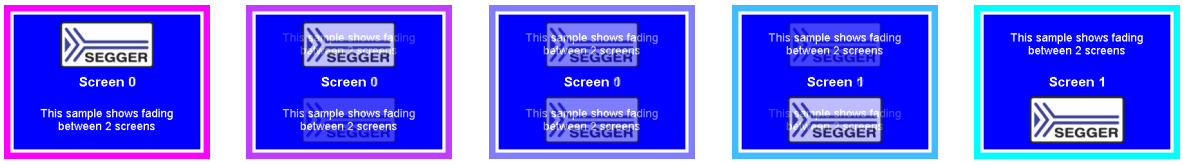
Additional Information

Please note that this function only processes if hMem0 and hMem1 are of the same size and are located at the same position on the screen.

Example

For an example on using the fading functions, please refer to "MEMDEV_FadingPerformance.c" which can be found in "emWin\Sample\Tutorial".

Screenshots



GUI_MEMDEV_SetAnimationCallback()

Description

Sets a user defined callback function to be called while animations are processed. The function should contain code to determine whether processing of the current animation shall go on or abort.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void GUI_MEMDEV_SetAnimationCallback(
                                  GUI_ANIMATION_CALLBACK_FUNC * pCbAnimation,
                                  void                        * pVoid);
```

Parameter	Description
pCbAnimation	Pointer to the user defined callback function.
pVoid	Data pointer.

Additional Information

The callback function is called every time an animation function has just copied the actual step to the screen.

Example

The following example shows the use of a GUI_ANIMATION_CALLBACK_FUNC, which gives the possibility to react on PID events:

```
static int _cbAnimation(int TimeRem, void * pVoid) {
  int           Pressed;

  if (TimeRem /* Insert Condition */) {
    /* ... React on remaining Time ... */
  }
  Pressed = _GetButtonState();
  if (Pressed) {
    return 1;   // Button was     pressed, stop     animation
  } else {
    return 0;   // Button was not pressed, continue animation
  }
}

void main(void) {
  GUI_Init();
  GUI_MEMDEV_SetAnimationCallback(_cbAnimation, (void *)&_Pressed);
  while (1) {
    /* Do animations... */
  }
}
```

14.17 Animation functions (Window Manager required)

The following animation functions require usage of the window manager.

GUI_MEMDEV_FadeInWindow()

GUI_MEMDEV_FadeOutWindow()

Description

Fades in/out a window by decreasing/increasing the alpha value

Prototype

```
int GUI_MEMDEV_FadeInWindow (WM_HWIN hWin, int Period);
int GUI_MEMDEV_FadeOutWindow(WM_HWIN hWin, int Period);
```

Parameter	Description
hWin	Handle to the window which has to be faded in/out
Period	Time period in which the fading is processed

Return value

0 if successful, 1 if the function fails.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional Information

Please note that the state of the current desktop and its child windows is 'valid' after calling this function.

Example

For an example on using the fading functions, please refer to "SKINNING_NestedModal.c" which can be found in your "emWin\Sample" folder.

Screenshots



GUI_MEMDEV_MoveInWindow()

GUI_MEMDEV_MoveOutWindow()

Description

Moves a window into/out of the screen. First the window is drawn minimized/maximized at the specified position/its actual position and then moved to its actual position/the specified position while magnifying to its actual size/demagnifying. The window can be spun clockwise as well as counterclockwise while it is moving.

Prototype

```
int GUI_MEMDEV_MoveInWindow (WM_HWIN hWin, int x,    int y,
                                           int a180, int Period);
int GUI_MEMDEV_MoveOutWindow(WM_HWIN hWin, int x,    int y,
                                           int a180, int Period);
```

Parameter	Description
hWin	Handle to the window which has to be moved
x	Position in x from/to where the window is moved
y	Position in y from/to where the window is moved
a180	Count of degrees the window will be spun for: a180 = 0 -> no spinning a180 > 0 -> clockwise a180 < 0 -> counterclockwise
Period	Time period in which the moving is processed

Return value

0 if successful, 1 if the function fails.

Additional Information

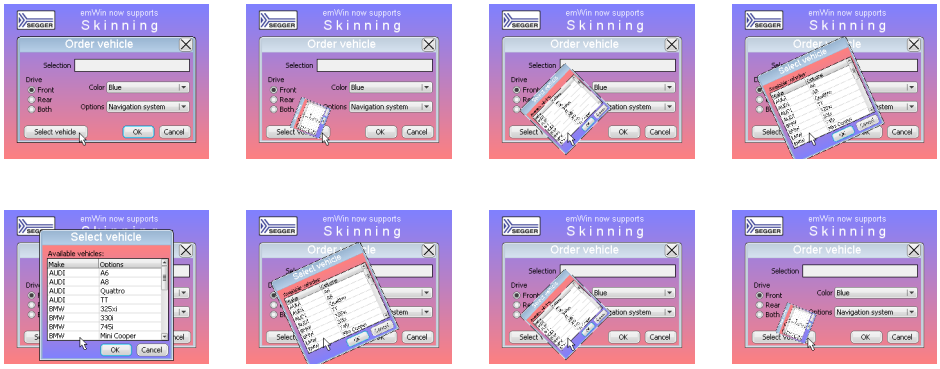
Please note that the state of the current desktop and its child windows is 'valid' after calling this function. `GUI_MEMDEV_MoveInWindow()` / `GUI_MEMDEV_MoveOutWindow()` requires approximately 1 MB of dynamic memory to run properly in QVGA mode.

Example

For an example on using `GUI_MEMDEV_MoveInWindow()` and `GUI_MEMDEV_MoveOutWindow()`, please refer to "SKINNING_NestedModal.c" which can be found in your "emWin\Sample" folder.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Screenshots



GUI_MEMDEV_ShiftInWindow()

GUI_MEMDEV_ShiftOutWindow()

Description

Shifts a Window in a specified direction into/out of the screen to/from its actual position.

Prototype

```
int GUI_MEMDEV_ShiftInWindow (WM_HWIN hWin, int Period, int Direction);
int GUI_MEMDEV_ShiftOutWindow(WM_HWIN hWin, int Period, int Direction);
```

Parameter	Description
hWin	Handle to the window which has to be shifted
Period	Time period in which the shifting is processed
Direction	Direction the window is shifted from/to.

Return value

0 if successful, 1 if the function fails.

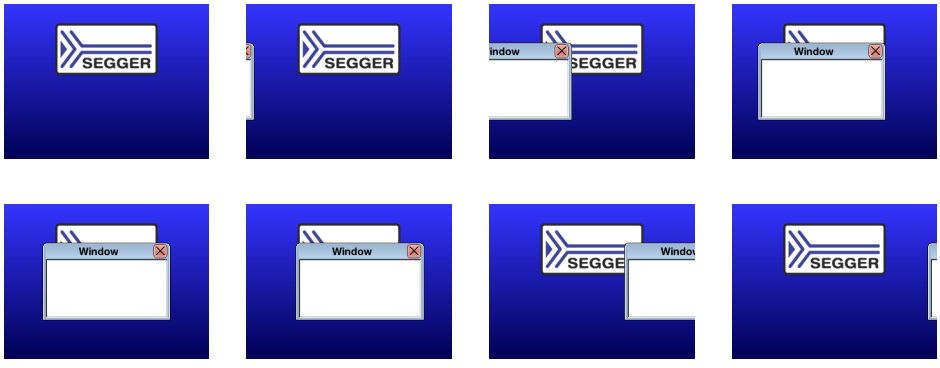
Additional Information

Please note that the state of the current desktop and its child windows is 'valid' after a window has been shifted. `GUI_MEMDEV_ShiftInWindow()` and `GUI_MEMDEV_ShiftOutWindow()` require approximately 1 MB of dynamic memory to run properly in QVGA mode.

Example

For an example on using `GUI_MEMDEV_ShiftInWindow()` and `GUI_MEMDEV_ShiftOutWindow()`, please refer to "SKINNING_Notepad.c" which can be found in your "emWin\Sample" folder.

Screenshots



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_MEMDEV_ShiftWindow()

Description

Shifts a window in a specified direction into the screen to its actual position and shifts out the old content of the window area.

Prototype

```
int GUI_MEMDEV_ShiftWindow(WM_HWIN hWin, int Period, int Edge);
```

Parameter	Description
hWin	Handle to the window which has to be shifted
Period	Time period in which the shifting is processed
Edge	Direction the window is shifted from/to.

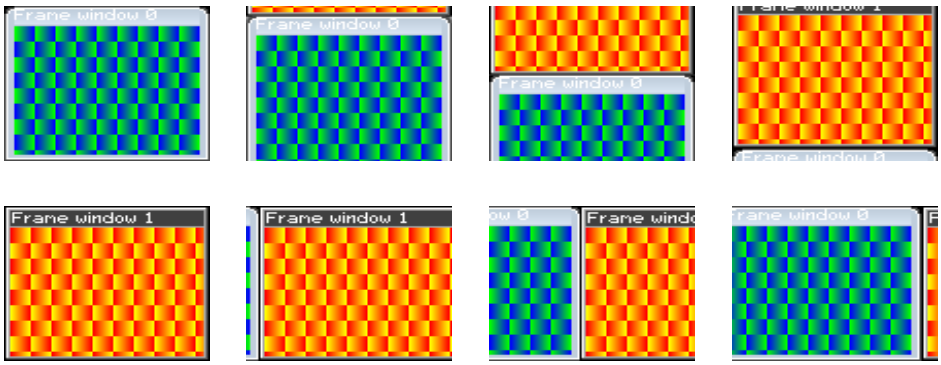
Return value

0 if successful, 1 if the function fails.

Additional Information

Please note that the state of the current desktop and its child windows is 'valid' after a window has been swapped. GUI_MEMDEV_ShiftWindow() requires approximately 1 MB of dynamic memory to run properly in QVGA mode.

Screenshots



© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 15

Execution Model: Single Task / Multitask

emWin has been designed from the beginning to be compatible with different types of environments. It works in single task and in multitask applications, with a proprietary operating system or with any commercial RTOS such as embOS or uC/OS.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

15.1 Supported execution models

We have to basically distinguish between 3 different execution models:

Single task system (superloop)

The entire program runs in one superloop. Normally, all software components are periodically called. Interrupts must be used for real time parts of the software since no real time kernel is used.

Multitask system: one task calling emWin

A real time kernel (RTOS) is used, but only one task calls emWin functions. From the graphic software's point of view, it is the same as being used in a single task system.

Multitask system: multiple tasks calling emWin

A real time kernel (RTOS) is used, and multiple tasks call emWin functions. This works without a problem as long as the software is made thread-safe, which is done by enabling multitask support in the configuration and adapting the kernel interface routines. For popular kernels, the kernel interface routines are readily available.

15.2 Single task system (superloop)

15.2.1 Description

The entire program runs in one superloop. Normally, all components of the software are periodically called. No real time kernel is used, so interrupts must be used for real time parts of the software. This type of system is primarily used in smaller systems or if real time behavior is not critical.

15.2.2 Superloop example (without emWin)

```
void main (void) {
  HARDWARE_Init();

  /* Init software components */
  XXX_Init();
  YYY_Init();

  /* Superloop: call all software components regularily */
  while (1) {
    /* Exec all compontents of the software */
    XXX_Exec();
    YYY_Exec();
  }
}
```

15.2.3 Advantages

No real time kernel is used (-> smaller ROM size, just one stack -> less RAM for stacks), no preemption/synchronization problems.

15.2.4 Disadvantages

The superloop type of program can become hard to maintain if it exceeds a certain program size. Real time behavior is poor, since one software component cannot be interrupted by any other component (only by interrupts). This means that the reaction time of one software component depends on the execution time of all other components in the system.

15.2.5 Using emWin

There are no real restrictions regarding the use of emWin. As always, `GUI_Init()` has to be called before you can use the software. From there on, any API function can be used. If the window manager's callback mechanism is used, then an emWin update function has to be called regularly. This is typically done by calling the

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_Exec() from within the superloop. Blocking functions such as GUI_Delay() and GUI_ExecDialog() should not be used in the loop since they would block the other software modules.
The default configuration, which does not support multitasking (#define GUI_OS 0) can be used; kernel interface routines are not required.

15.2.6 Superloop example (with emWin)

```
void main (void) {
  HARDWARE_Init();

  /* Init software components */
  XXX_Init();
  YYY_Init();
  GUI_Init();         /* Init emWin */

  /* Superloop: call all software components regularily */
  while (1) {
    /* Exec all compontents of the software */
    XXX_Exec();
    YYY_Exec();
    GUI_Exec();         /* Exec emWin for functionality like updating windows */
  }
}
```

15.3 Multitask system: one task calling emWin

15.3.1 Description

A real time kernel (RTOS) is used. The user program is split into different parts, which execute in different tasks and typically have different priorities. Normally the real time critical tasks (which require a certain reaction time) will have the highest priorities. **One single task** is used for the user interface, which calls emWin functions. This task usually has the lowest priority in the system or at least one of the lowest (some statistical tasks or simple idle processing may have even lower priorities).
Interrupts can, but do not have to be used for real time parts of the software.

15.3.2 Advantages

The real time behavior of the system is excellent. The real time behavior of a task is affected only by tasks running at higher priority. This means that changes to a program component running in a low priority task do not affect the real time behavior at all. If the user interface is executed from a low priority task, this means that changes to the user interface do not affect the real time behavior. This kind of system makes it easy to assign different components of the software to different members of the development team, which can work to a high degree independently from each other.

15.3.3 Disadvantages

You need to have a real time kernel (RTOS), which costs money and uses up ROM and RAM (for stacks). In addition, you will have to think about task synchronization and how to transfer information from one task to another.

15.3.4 Using emWin

If the window manager's callback mechanism is used, then an emWin update function (typically GUI_Exec(), GUI_Delay()) has to be called regularly from the task calling emWin. Since emWin is only called by one task, to emWin it is the same as being used in a single task system.
The default configuration, which does not support multitasking (#define GUI_OS 0) can be used; kernel interface routines are not required. You can use any real time kernel, commercial or proprietary.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

15.4 Multitask system: multiple tasks calling emWin

15.4.1 Description

A real time kernel (RTOS) is used. The user program is split into different parts, which execute in different tasks with typically different priorities. Normally the real time critical tasks (which require a certain reaction time) will have the highest priorities. **Multiple tasks** are used for the user interface, calling emWin functions. These tasks typically have low priorities in the system, so they do not affect the real time behavior of the system.
Interrupts can, but do not have to be used for real time parts of the software.

15.4.2 Advantages

The real time behavior of the system is excellent. The real time behavior of a task is affected only by tasks running at higher priority. This means that changes of a program component running in a low priority task do not affect the real time behavior at all. If the user interface is executed from a low priority task, this means that changes on the user interface do not affect the real time behavior. This kind of system makes it easy to assign different components of the software to different members of the development team, which can work to a high degree independently from each other.

15.4.3 Disadvantages

You have to have a real time kernel (RTOS), which costs money and uses up some ROM and RAM (for stacks). In addition, you will have to think about task synchronization and how to transfer information from one task to another.

15.4.4 Using emWin

If the window manager's callback mechanism is used, then an emWin update function (typically `GUI_Exec()`, `GUI_Delay()`) has to be called regularly from one or more tasks calling emWin.
The default configuration, which does not support multitasking (`#define GUI_OS 0`) can **NOT** be used. The configuration needs to enable multitasking support and define a maximum number of tasks from which emWin is called (excerpt from `GUIConf.h`):

```
#define GUI_OS 1            // Enable multitasking support
#define GUI_MAX_TASK 5      // Max. number of tasks that may call emWin
```

Kernel interface routines are required, and need to match the kernel being used. You can use any real time kernel, commercial or proprietary. Both the macros and the routines are discussed in the following chapter sections.

15.4.5 Recommendations

- Call the emWin update functions (that is, `GUI_Exec()`, `GUI_Delay()`) from just one task. It will help to keep the program structure clear. If you have sufficient RAM in your system, dedicate one task (with the lowest priority) to updating emWin. This task will continuously call `GUI_Exec()` as shown in the example below and will do nothing else.
- Keep your real time tasks (which determine the behavior of your system with respect to I/O, interface, network, etc.) separate from tasks that call emWin. This will help to assure best real time performance.
- If possible, use only one task for your user interface. This helps to keep the program structure simple and simplifies debugging. (However, this is not required and may not be suitable in some systems.)

15.4.6 Example

This excerpt shows the dedicated emWin update task. It is taken from the example `MT_Multitasking`, which is included in the examples shipped with emWin:

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
/*********************************************************************
*
*          GUI background processing
*
* This task does the background processing.
* The main job is to update invalid windows, but other things such as
* evaluating mouse or touch input may also be done.
*/
void GUI_Task(void) {
  while(1) {
    GUI_Exec();           /* Do the background work ... Update windows etc.) */
    GUI_X_ExecIdle();     /* Nothing left to do for the moment ... Idle processing */
  }
}
```

15.5 GUI configuration functions for multitasking support

The following table shows the configuration functions available for a multitask system with multiple tasks calling emWin:

Routine	Description
GUI_SetSignalEventFunc()	Sets a function that signals an event.
GUI_SetWaitEventFunc()	Sets a function that waits for an event.
GUI_SetWaitEventTimedFunc()	Sets a function that waits for an event for a given period of time.

GUI_SetSignalEventFunc()

Description

Sets a function that signals an event.

Prototype

```
void GUI_SetSignalEventFunc(GUI_SIGNAL_EVENT_FUNC pfSignalEvent);
```

Parameter	Description
pfSignalEvent	Pointer to a function that signals an event.

Definition of GUI_SIGNAL_EVENT_FUNC

```
typedef void (* GUI_SIGNAL_EVENT_FUNC)(void);
```

Additional information

Per default the GUI needs to periodically check for events unless a function is defined which waits and one that triggers an event. This function sets the function which triggers an event. It makes only sense in combination with `GUI_SetWaitEventFunc()`. and `GUI_SetWaitEventTimedFunc()`. The advantage of using these functions instead of polling is the reduction of CPU load of the waiting task to 0% while it waits for input. If the function has been specified as recommended and the user gives the system any input (keyboard or pointer input device) the specified function should signal an event.
It is recommended to specify the function `GUI_X_SignalEvent()` for the job.

Example

```
GUI_SetSignalEventFunc(GUI_X_SignalEvent);
```

GUI_SetWaitEventFunc()

Description

Sets a function which waits for an event.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void GUI_SetWaitEventFunc(GUI_WAIT_EVENT_FUNC pfWaitEvent);
```

Parameter	Description
pfWaitEvent	Pointer to a function that waits for an event.

Definition of GUI_SIGNAL_EVENT_FUNC

```
typedef void (* GUI_WAIT_EVENT_FUNC)(void);
```

Additional information

Per default the GUI needs to periodically check for events unless a function is defined which waits and one that triggers an event. This function sets the function which waits for an event. Makes only sense in combination with GUI_SetSignalEventFunc() and GUI_SetWaitEventTimedFunc(). The advantage of using these functions instead of polling is the reduction of CPU load of the waiting task to 0% while it waits for input. If the function has been specified as recommended and the system waits for user input the defined function should wait for an event signaled from the function specified by GUI_SetSignalEventFunc().
It is recommended to specify the function GUI_X_WaitEvent() for the job.

Example

```
GUI_SetWaitEventFunc(GUI_X_WaitEvent);
```

GUI_SetWaitEventTimedFunc()

Description

Defines a function which waits for an event for a dedicated period of time.

Prototype

```
void GUI_SetWaitEventTimedFunc(GUI_WAIT_EVENT_TIMED_FUNC pfWaitEventTimed);
```

Parameter	Description
pfWaitEventTimed	Pointer to a function that waits for an event.

Definition of GUI_WAIT_EVENT_TIMED_FUNC

```
typedef void (* GUI_WAIT_EVENT_TIMED_FUNC)(int Period);
```

Parameter	Description
Period	Period in ms to wait for an event.

Additional information

Per default the GUI needs to periodically check for events unless a function is defined which waits and one that triggers an event. This function sets the function which waits for an event if a timer is active. Makes only sense in combination with GUI_SetSignalEventFunc() and GUI_SetWaitEventFunc(). If the function has been specified as recommended and the system waits for user input during a timer is active the defined function should wait until the timer expires or an event signaled from the function set by GUI_SetSignalEventFunc().
It is recommended to specify the function GUI_X_WaitEventTimed() for the job.

Example

```
GUI_SetWaitEventTimedFunc(GUI_X_WaitEventTimed);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

15.6 GUI configuration macros for multitasking support

The following table shows the configuration macros used for a multitask system with multiple tasks calling emWin:

Type	Macro	Default	Explanation
N	GUI_MAXTASK	4	Defines the maximum number of tasks from which emWin is called when multi-tasking support is enabled.
B	GUI_OS	0	Activate to enable multitasking support.
F	GUI_X_SIGNAL_EVENT	-	Defines a function that signals an event. (Obsolete)
F	GUI_X_WAIT_EVENT	GUI_X_ExecIdle	Defines a function that waits for an event. (Obsolete)
F	GUI_X_WAIT_EVENT_TIMED	-	Defines a function that waits for an event for a dedicated period of time. (Obsolete)

GUI_MAXTASK

Description

Defines the maximum number of tasks from which emWin is called to access the display.

Type

Numerical value.

Additional information

This symbol is only relevant when GUI_OS is activated. If working with a pre-compiled library the function GUITASK_SetMaxTask() should be used instead. For further information, please refer to "GUITASK_SetMaxTask()" on page 908.

GUI_OS

Description

Enables multitasking support by activating the module GUITask.

Type

Binary switch
0: inactive, multitask support disabled (default)
1: active, multitask support enabled

GUI_X_SIGNAL_EVENT

Description

Defines a function that signals an event.

Type

Function replacement

Additional information

Per default the GUI needs to periodically check for events unless a function is defined which waits and one that triggers an event. This macro defines the function which triggers an event. It makes only sense in combination with GUI_X_WAIT_EVENT. The advantage of using the macros GUI_X_SIGNAL_EVENT and GUI_X_WAIT_EVENT instead of polling is the reduction of CPU load of the waiting task to 0% while it waits for input. If the macro has been defined as recommended and the user gives the system any input (keyboard or pointer input device) the defined function should signal an event.
It is recommended to specify the function GUI_X_SignalEvent() for the job.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Example

```
#define GUI_X_SIGNAL_EVENT GUI_X_SignalEvent
```

GUI_X_WAIT_EVENT

Description

Defines a function which waits for an event.

Type

Function replacement

Additional information

Per default the GUI needs to periodically check for events unless a function is defined which waits and one that triggers an event. This macro defines the function which waits for an event. Makes only sense in combination with `GUI_X_SIGNAL_EVENT`. The advantage of using the macros `GUI_X_SIGNAL_EVENT` and `GUI_X_WAIT_EVENT` instead of polling is the reduction of CPU load of the waiting task to 0% while it waits for input. If the macro has been defined as recommended and the system waits for user input the defined function should wait for an event signaled from the function defined by the macro `GUI_X_SIGNAL_EVENT`.
It is recommended to specify the function `GUI_X_WaitEvent()` for the job.

Example

```
#define GUI_X_WAIT_EVENT GUI_X_WaitEvent
```

GUI_X_WAIT_EVENT_TIMED

Description

Defines a function which waits for an event for a dedicated period of time.

Type

Function replacement

Additional information

Per default the GUI needs to periodically check for events unless a function is defined which waits and one that triggers an event. This macro defines the function which waits for an event if a timer is active. Makes only sense in combination with `GUI_X_SIGNAL_EVENT`. If the macro has been defined as recommended and the system waits for user input during a timer is active the defined function should wait until the timer expires or an event signaled from the function defined by the macro `GUI_X_SIGNAL_EVENT`.
It is recommended to specify the function `GUI_X_WaitEventTimed()` for the job.

Example

```
#define GUI_X_WAIT_EVENT_TIMED GUI_X_WaitEventTimed
```

15.7 Kernel interface API

An RTOS usually offers a mechanism called a resource semaphore, in which a task using a particular resource claims that resource before actually using it. The display is an example of a resource that needs to be protected with a resource semaphore. emWin uses the macro `GUI_USE` to call the function `GUI_Use()` before it accesses the display or before it uses a critical internal data structure. In a similar way, it calls `GUI_Unuse()` after accessing the display or using the data structure. This is done in the module `GUITask.c`.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUITask.c in turn uses the GUI kernel interface routines shown in the table below. These routines are prefixed GUI_X_ since they are high-level (hardware-dependent) functions. They must be adapted to the real time kernel used in order to make the emWin task (or thread) safe. Detailed descriptions of the routines follow, as well as examples of how they are adapted for different kernels.

Routine	Explanation
GUI_X_GetTaskId()	Return a unique, 32-bit identifier for the current task/thread.
GUI_X_InitOS()	Initialize the kernel interface module (create a resource semaphore/ mutex).
GUI_X_Lock()	Lock the GUI (block resource semaphore/mutex).
GUI_X_SignalEvent()	Signals an event.
GUI_X_Unlock()	Unlock the GUI (unblock resource semaphore/mutex).
GUI_X_WaitEvent()	Waits for an event.

GUI_X_GetTaskID()

Description

Returns a unique ID for the current task.

Prototype

```
U32 GUI_X_GetTaskID(void);
```

Return value

ID of the current task as a 32-bit integer.

Additional information

Used with a real-time operating system.
It does not matter which value is returned, as long as it is unique for each task/ thread using the emWin API and as long as the value is always the same for each particular thread.

GUI_X_InitOS()

Description

Creates the resource semaphore or mutex typically used by GUI_X_Lock() and GUI_X_Unlock().

Prototype

```
void GUI_X_InitOS(void)
```

GUI_X_Lock()

Description

Locks the GUI.

Prototype

```
void GUI_X_Lock(void);
```

Additional information

This routine is called by the GUI before it accesses the display or before using a critical internal data structure. It blocks other threads from entering the same critical section using a resource semaphore/mutex until GUI_X_Unlock() has been called.
When using a real time operating system, you normally have to increment a counting resource semaphore.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_X_SignalEvent()

Description

Signals an event.

Prototype

```
void GUI_X_SignalEvent(void);
```

Additional information

This function is optional, it is used only via the macro `GUI_X_SIGNAL_EVENT` or the function `GUI_SetSignalEventFunc()`.

GUI_X_Unlock()

Description

Unlocks the GUI.

Prototype

```
void GUI_X_Unlock(void);
```

Additional information

This routine is called by the GUI after accessing the display or after using a critical internal data structure.
When using a real time operating system, you normally have to decrement a counting resource semaphore.

GUI_X_WaitEvent()

Description

Waits for an event.

Prototype

```
void GUI_X_WaitEvent(void);
```

Additional information

This function is optional, it is used only via the macro `GUI_X_WAIT_EVENT` or the function `GUI_SetWaitEventFunc()`.

GUI_X_WaitEventTimed()

Description

Waits for an event for the given period.

Prototype

```
void GUI_X_WaitEventTimed(int Period);
```

Parameter	Description
Period	Period in ms to be used.

Additional information

This function is optional, it is used only via the macro `GUI_X_WAIT_EVENT_TIMED` or the function `GUI_SetWaitEventTimedFunc()`.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

15.7.1 Examples

Kernel interface routines for embOS

The following example shows an adaption for embOS (excerpt from file `GUI_X_embOS.c` located in the folder `Sample\GUI_X`):

```
#include "RTOS.H"

static OS_TASK* _pGUITask;
static OS_RSEMA _RSema;

void GUI_X_InitOS(void)    { OS_CreateRSema(&_RSema);    }
void GUI_X_Unlock(void)    { OS_Unuse(&_RSema);          }
void GUI_X_Lock(void)      { OS_Use(&_RSema);            }
U32  GUI_X_GetTaskId(void) { return (U32)OS_GetTaskID(); }

void GUI_X_WaitEvent(void) {
  _pGUITask = OS_GetpCurrentTask();
  OS_WaitEvent(1);
}

void GUI_X_SignalEvent(void) {
  if (_pGUITask) {
    OS_SignalEvent(1, _pGUITask);
  }
}

void GUI_X_WaitEventTimed(int Period) {
  static OS_TIMER Timer;
  static int Initialized;

  if (Period > 0) {
    if (Initialized != 0) {
      OS_DeleteTimer(&Timer);
    }
    Initialized = 1;
    OS_CreateTimer(&Timer, GUI_X_SignalEvent, Period);
    OS_StartTimer(&Timer);
    GUI_X_WaitEvent();
  }
}
```

Kernel interface routines for uC/OS

The following example shows an adaption for uC/OS (excerpt from file `GUI_X_uCOS.c` located in the folder `Sample\GUI_X`):

```
#include "INCLUDES.H"

static OS_EVENT * pDispSem;
static OS_EVENT * pGUITask;

U32   GUI_X_GetTaskId(void) { return ((U32)(OSTCBCur->OSTCBPrio)); }
void  GUI_X_Unlock(void)    { OSSemPost(pDispSem);                 }

void  GUI_X_InitOS(void)    {
  pDispSem = OSSemCreate(1);
  pGUITask = OSSemCreate(0);
}

void  GUI_X_Lock(void)      {
  INT8U err;
  OSSemPend(pDispSem, 0, &err);
}
```

Kernel interface routines for Win32

The following is an excerpt from the Win32 simulation for emWin. (When using the emWin simulation, there is no need to add these routines, as they are already in the library.)
Note: cleanup code has been omitted for clarity.

```
/*********************************************************************
*
*      emWin - Multitask interface for Win32
*
**********************************************************************
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
  The following section consisting of 4 routines is used to make
  emWin thread safe with WIN32
*/

static HANDLE hMutex;

void GUI_X_InitOS(void) {
  hMutex = CreateMutex(NULL, 0, "emWinSim - Mutex");
}

unsigned int GUI_X_GetTaskId(void) {
  return GetCurrentThreadId();
}

void GUI_X_Lock(void) {
  WaitForSingleObject(hMutex, INFINITE);
}

void GUI_X_Unlock(void) {
  ReleaseMutex(hMutex);
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 16

The Window Manager (WM)

When using the emWin window manager (WM), everything which appears on the display is contained in a window -- a rectangular area on the screen. A window can be any size, and you can display multiple windows on the screen at once, even partially or entirely in front of other windows.
The window manager supplies a set of routines which allow you to easily create, move, resize, and otherwise manipulate any number of windows. It also provides lower-level support by managing the layering of windows on the display and by alerting your application to display changes that affect its windows.
The emWin window manager is a separate (optional) software item and is not included in the emWin basic package. The software for the window manager is located in the subdirectory `GUI\WM`.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

16.1 Description of terms

Windows are rectangular in shape, defined by their origin (the X- and Y-coordinates of the upper left corner) as well as their X- and Y-sizes (width and height, respectively). A window in emWin:

- is rectangular.
- has a Z-position.
- may be hidden or shown.
- may have valid and/or invalid areas.
- may or may not have transparency.
- may or may not have a callback routine.

Active window

The window which is currently being used for drawing operations is referred to as the active window. It is not necessarily the same as the topmost window.

Callback routines

Callback routines are defined by the user program, instructing the graphic system to call a specific function when a specific event occurs. Normally they are used to automatically redraw a window when its content has changed.

Child/parent windows, siblings

A child window is one that is defined relative to another window, called the parent. Whenever a parent window moves, its child or children move correspondingly. A child window is always completely contained within its parent, and will be clipped if necessary. Multiple child windows with the same parent are considered "siblings" to one another.

Client area

The client area of a window is simply its usable area. If a window contains a frame or title bar, then the client area is the rectangular inner area. If there is no such frame, then the coordinates of the client area are identical to those of the window itself.

Clipping, clip area

Clipping is the process of limiting output to a window or part of it.
The clip area of a window is its visible area. This is the window area minus the area obstructed by siblings of higher Z-order, minus any part that does not fit into the visible area of the parent window.

Coordinates

Coordinates are usually 2 dimensional coordinates, expressed in units of pixels. A coordinate consists of 2 values. The first value specifies the horizontal component (also called the x-coordinate), the second value specifies the vertical component (also called the y-coordinate).

Desktop coordinates

Desktop coordinates are coordinates of the desktop window. The upper left position (the origin) of the display is (0,0).

Desktop window

The desktop window is automatically created by the window manager, and always covers the entire display area. It is always the bottommost window, and when no other window has been defined, it is the default (active) window. All windows are descendants (children, grandchildren, etc.) of the desktop window.

Handle

When a new window is created, the WM assigns it a unique identifier called a handle. The handle is used in any further operations performed on that particular window.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Hiding/showing windows

A hidden window is not visible, although it still exists (has a handle). When a window is created, it is hidden by default if no create flag is specified. Showing a window makes it visible; hiding it makes it invisible.

Parent coordinates

Parent coordinates are window coordinates relative to the parent window. The upper left position (the origin) of the window is (0,0).

Transparency

A window that has transparency contains areas that are not redrawn with the rest of the window. These areas operate as though the window behind "shows through" them. In this case, it is important that the window behind is redrawn before the window with transparency. The WM automatically handles redrawing in the correct order.

Validation/invalidation

A valid window is a fully updated window which does not need redrawing.
An invalid window does not yet reflect all updates and therefore needs to be redrawn, either completely or partially. When changes are made that affect a particular window, the WM marks that window as invalid. The next time the window is redrawn (either manually or by a callback routine) it will be validated.

Window coordinates

Window coordinates are coordinates of a window. The upper left position (the origin) of the window is (0,0).

Z-position, bottom/top

Although a window is displayed on a two-dimensional screen in terms of X and Y, the WM also manages what is known as a Z-position, or depth coordinate -- a position in a virtual third dimension which determines its placement from background to foreground. Windows can therefore appear on top of or beneath one another.
Setting a window to the bottom will place it "underneath" all of its sibling windows (if any); setting it to the top will place it "on top of" its siblings. When a window is created, it is set to the top by default if no create flag is specified.

16.2 Callback mechanism, invalidation and rendering

The WM may be used with or without callback routines. In most cases, using callbacks is preferable.
The idea behind the callback mechanism that emWin offers for windows and window objects (widgets) is that of an event-driven system. As in most windowing systems, the principle is that the flow of control is not just from the user program to the graphic system, but also from the user program to the graphic system and back up to the user program by means of the callback routines provided by the user program. This mechanism -- often characterized as the Hollywood principle ("Don't call us, we'll call you!") -- is needed by the window manager mainly in order to trigger the redrawing of windows. This contrasts with classical programming, but it makes it possible to exploit the invalidation logic of the window manager.

16.2.1 Rendering without callbacks

You do not have to use callback routines, but in doing so, the WM loses the ability to manage redrawing (updating) of the windows. It is also possible to mix; for example, having some windows use callbacks and others not. However, if a window does not use the callback mechanism, your application is responsible for updating its contents.

Warning: When not using the callback mechanism, it is your responsibility to manage screen updates!

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

16.2.2 Rendering using callbacks

In order to create a window with a callback, you must have a callback routine. The routine is used as part of the WM_CreateWindow() function when creating the window (the cb parameter).
All callback routines must have the following prototype:

Prototype

```
void callback(WM_MESSAGE * pMsg);
```

Parameter	Description
pMsg	Pointer to a data structure of type WM_MESSAGE.

The action performed by the callback routine depends on the type of message it receives. The prototype above is usually followed by a switch statement, which defines different behaviors for different messages using one or more case statements (typically at least WM_PAINT).

Processing the WM_PAINT message

When a window receives a WM_PAINT message, it should repaint itself. Before sending this message to the window, the WM makes sure it is selected.
A non transparent window (default!) has to repaint its entire invalid area. The easiest way is to repaint the entire area of the window. The clipping mechanism of the WM makes sure that only the invalid area will be redrawn. In order to accelerate the drawing process, it can make sense to only repaint the invalid area. How to get the invalid area is described later in this chapter (Information is part of the message).
A transparent window on the other hand does not have to redraw the entire invalid area; it can leave the window area partially untouched. This untouched area will then be transparent.
Before the WM sends a WM_PAINT message to a transparent window, the area below has been redrawn (by sending a WM_PAINT message to the window(s) below).

Warning: Certain things should not be done when processing WM_PAINT

When processing the WM_PAINT message, the callback routine should do nothing but redrawing the contents of the window. When processing the WM_PAINT event, the following functions may not be called: WM_SelectWindow(), WM_Paint(), WM_DeleteWindow() and WM_CreateWindow(). Also any other functions which changes the properties of a window may not be called: WM_Move(), WM_Resize(), ...

Example

Creates a callback routine to automatically redraw a window:

```
void WinHandler(WM_MESSAGE * pMsg) {
  switch (pMsg->MsgId) {
  case WM_PAINT:
    GUI_SetBkColor(0xFF00);
    GUI_Clear();
    GUI_DispStringAt("Hello world",0,0);
    break;
  default:
    WM_DefaultProc(pMsg);
  }
}
```

Please note that a WM_PRE_PAINT and a WM_POST_PAINT message is processed directly before and after WM_PAINT messages are sent.

16.2.3 Background window redrawing and callback

During initialization of the window manager, a window containing the whole LCD area is created as a background window. The handle of this window is WM_HBKWIN. The WM does not redraw areas of the background window automatically, because there is no

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

default background color. That means if you create a further window and then delete it, the deleted window will still be visible. The routine WM_SetDesktopColor() needs to be specified in order to set a color for redrawing the background window.
You can also set a callback function to take care of this problem. If a window is created and then deleted as before, the callback routine will trigger the WM to recognize that the background window is no longer valid and redraw it automatically. For more information on using a callback routine to redraw the background, see the example at the end of the chapter.

16.2.4 Invalidation

Invalidation of a window or a part of it tells the WM that the invalid area of the window should be redrawn the next time GUI_Exec() or GUI_Delay() is called. The invalidation routines of emWin do not redraw the invalid part of a window. They only manage the invalid areas of the windows.

The invalid area of a window

The WM uses just one rectangle per window to store the smallest rectangle containing the entire invalid area. If for example a small part in the upper left corner and a small part in the lower right corner becomes invalid, the complete window is invalidated.

Why using invalidation

The advantage of using window invalidation in opposite of drawing each window immediately is that the window will be drawn only one time even if it is invalidated more than one time. If for example several properties of a window need to be changed (for example the background color, the font and the size of the window) it takes more time to draw the window immediately after each property has been changed than drawing the window only one time after all properties have been changed.

Redrawing of invalid windows

The function GUI_Exec() redraws all invalid windows. This is done by sending one or more WM_PAINT messages to each invalid window.

16.2.5 Rendering of transparent windows

If a transparent window needs to be drawn, the WM automatically makes sure, that the background of the window is drawn before the transparent window receives a WM_PAINT message. This is done by redrawing all window areas below the invalid area of the transparent window first before sending a WM_PAINT message to the transparent window.
To make sure the window manager can handle the redrawing of transparent windows it is necessary to redraw the window in reaction to the WM_PAINT message. Otherwise it can not be guaranteed that the appearance of a transparent window will be correctly.
The use of transparent windows is more CPU-intensive than the use of non transparent windows. If performance is a problem, trying to avoid transparent windows may be an option.

16.2.6 Automatic use of memory devices

The default behavior of the window manager is sending a WM_PAINT to each window which needs to be redrawn. This can cause flickering effects. To suppress these 'per window' flickering effects memory devices can be used automatically for the drawing operation. This can be achieved by setting the flag WM_CF_MEMDEV when creating the window, by setting the default creation flags with WM_SetCreateFlags() or by using the function WM_EnableMemdev(). The WM then redirects the output of the WM_PAINT message into a memory device which is then copied to the display. If not enough memory for the whole window is available banding is used automatically. The memory device is only used temporarily and will be removed after the drawing operation. For more information please also refer to chapter "Memory Devices" on page 247.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

16.2.7 Automatic use of multiple frame buffers

The WM is able to use automatically multiple frame buffers if they are available. This can be achieved by the function `WM_MULTIBUF_Enable()`. If enabled the window manager redirects the output of all drawing functions to the invisible back buffer before it draws the invalid windows. After the last invalid window has been drawn the WM makes the back buffer visible. Please note that feature is only available if the display driver supports multiple buffers and if there is enough RAM for at least 2 frame buffers. For more information please also refer to chapter "Multiple buffering" on page 729.

16.2.8 Automatic use of display driver cache

The WM automatically uses the display driver cache if available. If available it locks the buffer before it starts to draw the invalid windows. After the last window has been drawn the WM unlocks the cache.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

16.3 Messages

The following section shows which system messages are used by emWin, how to use the message data and how to use application defined messages.

16.3.1 Message structure

When a callback routine is called, it receives the message specified as its pMsg parameter. This message is actually a WM_MESSAGE data structure, with elements defined as follows.

Elements of WM_MESSAGE

Data type	Element	Description
int	MsgId	Type of message (see table below).
WM_HWIN	hWin	Destination window.
WM_HWIN	hWinSrc	Source window.
void*	Data.p	Data pointer.
int	Data.v	Data value.

16.3.2 List of messages

The following messages are defined by emWin.

Message Id (MsgId)	Description
System defined messages	
WM_CREATE	Sent immediately after a window has been created, giving the window the chance to initialize and create any child windows.
WM_DELETE	Sent just before a window is deleted, telling the window to free its data structures (if any).
WM_GET_ID	Sent to a window to request the Id of the window.
WM_INIT_DIALOG	Sent to a dialog window immediately after the creation of the dialog.
WM_KEY	Sent to the window currently containing the focus if a key has been pressed.
WM_MOVE	Sent to a window immediately after it has been moved.
WM_NOTIFY_PARENT	Informs a parent window that something has occurred in one of its child windows.
WM_NOTIFY_VIS_CHANGED	Sent to a window if its visibility has been changed.
WM_PAINT	Sent to a window after it has become invalid and it should be redrawn.
WM_POST_PAINT	Sent to a window after the last WM_PAINT message was processed.
WM_PRE_PAINT	Sent to a window before the first WM_PAINT message is sent.
WM_SET_FOCUS	Sent to a window if it gains or looses the input focus.
WM_SET_ID	Sent to a window to change the window Id.
WM_SIZE	Sent to a window after its size has changed.
WM_TIMER	Sent to a window after a timer has expired.
Pointer input device (PID) messages	
WM_MOUSEOVER	Sent to a window if a pointer input device touches the outline of a window. Only send if mouse support is enabled.
WM_MOUSEOVER_END	Sent to a window if a pointer input device has been moved out of the outline of a window. Only sent if mouse support is enabled.
WM_PID_STATE_CHANGED	Sent to the window pointed by the pointer input device when the pressed state has been changed.
WM_TOUCH	Sent to a window if a pointer input device touches the outline of a window in pressed state.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Message Id (MsgId)	Description
WM_TOUCH_CHILD	Sent to a parent window if a child window has been touched by the pointer input device.
Notification codes	
WM_NOTIFICATION_CHILD_DELETED	This notification message will be sent from a window to its parent before it is deleted.
WM_NOTIFICATION_CLICKED	This notification message will be sent when the window has been clicked.
WM_NOTIFICATION_LOST_FOCUS	This notification message will be sent when the window has lost the focus.
WM_NOTIFICATION_MOVED_OUT	This notification message will be sent when the pointer was moved out of the window while it is clicked.
WM_NOTIFICATION_RELEASED	This notification message will be sent when a clicked widget has been released.
WM_NOTIFICATION_SCROLL_CHANGED	This notification message will be sent when the scroll position of an attached SCROLLBAR widget has changed.
WM_NOTIFICATION_SCROLLBAR_ADDED	This notification message will be sent when a SCROLLBAR widget has been added to the window.
WM_NOTIFICATION_SEL_CHANGED	This notification message will be sent when the selection of a widget has changed.
WM_NOTIFICATION_VALUE_CHANGED	This notification message will be sent when a widget specific value has changed.
User defined messages	
WM_USER	The WM_USER constant could be used by applications to define private messages, usually of the form WM_USER+X, where X is an integer value.

16.3.3 System-defined messages

These kind of messages are send by the GUI library. Do not send system defined messages from the user application to a window or a widget.

WM_CREATE

Description

This message is sent immediately after a window has been created, giving the window the chance to initialize and create any child windows.

Data

This message contains no data.

WM_DELETE

Description

This message is sent just before a window is deleted, telling the window to free its data structures (if any).

Data

This message contains no data.

WM_GET_ID

Description

This message is sent to a window to request it's Id. All emWin widgets handle this message. Application defined windows should handle this message in their callback routine. Otherwise this message will be ignored.

Data

The callback routine of the window should store the Id in the `Data.v` value.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WM_INIT_DIALOG

Description

This message is sent to a window immediately after the creation of the dialog and before the dialog is displayed. Dialog procedures typically use this message to initialize widgets and carry out any other initialization tasks that affect the appearance of the dialog box.

Data

This message contains no data.

WM_KEY

Description

Sent to the window currently containing the focus if a key has been pressed.

Data

The `Data.p` pointer of the message points to a `WM_KEY_INFO` structure.

Elements of WM_KEY_INFO

Data type	Element	Description
`int`	`Key`	The key which has been pressed.
`int`	`PressedCount`	> 0 if the key has been pressed, 0 if the key has been released.

WM_MOVE

Description

This message is sent to a window immediately after it has been moved.
If the window has any child windows, they will be moved first. Also each child window will receive this message after it has been moved.
The message is sent regardless if the window is visible or not.

Data

This message contains no data.

WM_NOTIFY_PARENT

Description

Informs a parent window that something has occurred in one of its child window. These messages are typically send by widgets to their parent windows to give them a chance to react on the event.

Data

The `Data.v` value of the message contains the notification code of the message. For more information about the notification codes, refer to the appropriate widget.

WM_NOTIFY_VIS_CHANGED

Description

This message is sent to a window if its visibility is changed and the configuration switch `WM_SUPPORT_NOTIFY_VIS_CHANGED` is set to 1. The visibility of a window changes if

- obstruction changes: The window is partially or totally covered or uncovered by a higher level window (a window which is displayed on top of the window),
- the window is deleted or
- the window changes from not hidden to hidden or reverse.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Typical application

Applications which show a video in a window using a hardware decoder. The hardware decoder can write directly into the display, bypassing emWin, if the window containing the video is completely visible. If the visibility changes, the hardware decoder needs to be reprogrammed.

Example

The following shows a typical reaction on this message:

```
case WM_NOTIFY_VIS_CHANGED:
  if (WM_IsCompletelyVisible(WM_GetClientWindow(pMsg->hWin))) {
    ...
  }
```

The `Sample` folder of emWin contains the example `WM_Video.c` which shows how to use the message.

Data

This message contains no data.

WM_PAINT

Description

The WM sends this message to a window if it has become invalid (partially or complete) and needs to be drawn. When a window receives a `WM_PAINT` message, it should repaint itself. Before sending this message to the window, the WM makes sure it is selected. More details about how to react on the `WM_PAINT` message is described earlier in this chapter under "Using callback routines".

Data

The `Data.p` pointer of the message points to a `GUI_RECT` structure containing the invalid rectangle of the window in screen coordinates. This information could be used to optimize the paint function.

WM_POST_PAINT

Description

The WM sends this message to a window right after the last WM_PAINT message was processed.

Data

This message contains no data.

WM_PRE_PAINT

Description

The WM sends this message to a window before the first WM_PAINT is sent.

Data

This message contains no data.

WM_SET_FOCUS

Description

Send to a window if it gains or looses the input focus.

Data

If the window gains the input focus, the Data.v value is set to 1. If the window 'accepts' the input focus, it should set the Data.v value to 0 in reaction on this message.
If the window looses the input focus, the Data.v value is set to 0.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WM_SET_ID

Description

Send to a window to change the Id. All emWin widgets handle this message. Application defined windows should handle this message in their callback routine. Otherwise this message will be ignored.

Data

The Data.v value contains the new Id of the window.

WM_SIZE

Description

Sent to a window after its size has changed. Gives the window the chance to reposition its child windows (if any).

Data

This message contains no data.

WM_TIMER

Description

This message will be send to a window when a timer created by `WM_CreateTimer()` has expired.

Data

The Data.v value contains the handle of the expired timer.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

16.3.4 Pointer input device (PID) messages

These kind of messages are send by the GUI library in reaction of PID input. Do not send this messages from the user application to a window or a widget.

WM_MOUSEOVER

Description

A WM_MOUSEOVER message is send to a window if a pointer input device touches the outline of a window. It is send only if mouse support is enabled. This message is not sent to disabled windows.
To enable mouse support, add the following line to the file GUIConf.h:

```
#define GUI_SUPPORT_MOUSE 1
```

Data

The Data.p pointer of the message points to a GUI_PID_STATE structure.

Elements of GUI_PID_STATE

Data type	Element	Description
int	x	Horizontal position of the PID in window coordinates.
int	y	Vertical position of the PID in window coordinates.
U8	Pressed	Is always set to 0 when receiving a WM_MOUSEOVER message.

WM_MOUSEOVER_END

Description

A WM_MOUSEOVER_END message is sent to a window if the mouse pointer has been moved out of the window. It is send only if mouse support is enabled. This message is not sent to disabled windows.

Data

The Data.p pointer of the message points to a GUI_PID_STATE structure. For details about this structure, refer to the message WM_MOUSEOVER.

WM_PID_STATE_CHANGED

Description

Sent to the window affected by the pointer input device when the pressed state has changed. The affected window is the visible window at the input position. With other words: If the user releases for example the touch screen over a window, the pressed state changes from 1 (pressed) to 0 (unpressed). In this case a WM_PID_STATE_CHANGED message is send to the window. This message is send before the touch message is send. An invisible window does not receive this message. Transparent windows are handled the same way as visible windows.
This message is not sent to disabled windows.

Data

The Data.p pointer of the message points to a WM_PID_STATE_CHANGED_INFO structure.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Elements of WM_PID_STATE_CHANGED_INFO

Data type	Element	Description
int	x	Horizontal position of the PID in window coordinates.
int	y	Vertical position of the PID in window coordinates.
U8	State	Pressed state (> 0 if PID is pressed).
U8	StatePrev	Previous pressed state

WM_TOUCH

Description

A WM_TOUCH message is send to a window if

- the PID is in pressed state and the pointer is over the visible part of the window
- or the PID just has been released.

This message is not sent to disabled windows.

Data

The Data.p pointer of the message points to a GUI_PID_STATE structure. For details about the structure please refer to the message WM_MOUSEOVER.

Elements of GUI_PID_STATE

Data type	Element	Description
int	x	Horizontal position of the PID in window coordinates.
int	y	Vertical position of the PID in window coordinates.
U8	Pressed	If the message is originated by a touch screen this value can be 0 (unpressed) or 1 (pressed). If the message is originated by a mouse each bit represents a mouse button (0 for unpressed and 1 for pressed state): - Bit 0 represents the first button (normally the left button) - Bit 1 represents the second button (normally the right button) - Bit 2 represents the third button (normally the middle button) The remaining bits can be used for further buttons.

WM_TOUCH_CHILD

Description

This message is send to the parent window if the outline of a child window has been touched with a pointer input device in pressed or unpressed state.
This message is not sent to disabled windows.

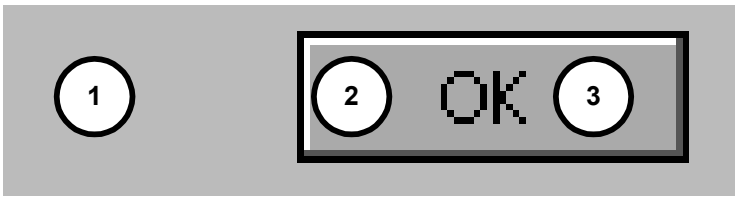
Data

The Data.p pointer of the message points to the touch message sent to the child window. For details about the message data, please refer to “WM_TOUCH” on page 301.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Example

The following example explains what happens if a pointer input device is dragged over a dialog with a button:



Position	Description
1	The pointer input device (PID) is pressed at this position. This causes the WM to send the following WM_PID_STATE_CHANGED message to the window at this position: x = Horizontal position in desktop coordinates. y = Vertical position in desktop coordinates. State = 1 StatePrev = 0 The WM also sends a WM_TOUCH message with the same x and y coordinates to the window: x = Horizontal position in desktop coordinates. y = Vertical position in desktop coordinates. Pressed = 1
2	The PID is dragged to this position. The window below (the button) will receive no WM_PID_STATE_CHANGED message, because the PID remains in pressed state. The WM only sends a WM_TOUCH message to the window: x = Horizontal position in desktop coordinates. y = Vertical position in desktop coordinates. Pressed = 1
3	The PID is released at this position. This causes the WM to send the following WM_PID_STATE_CHANGED message to the window at this position: x = Horizontal position in desktop coordinates. y = Vertical position in desktop coordinates. State = 0 StatePrev = 1 The WM also sends a WM_TOUCH message with the same x and y coordinates to the window: x = Horizontal position in desktop coordinates. y = Vertical position in desktop coordinates. Pressed = 0

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

16.3.5 System-defined notification codes

A message of this type is sent from a window to its parent window to notify it of a change in the child window. This gives the parent window the chance to react on this event. The message contains a `hWinSrc` element which is a handle to the widget which caused the message. For more information on which notification messages can be sent by the various widgets, please refer to the appropriate widget in the Chapter "Widgets".

Note: Do not send system defined notification codes from the user application to a window.

WM_NOTIFICATION_CHILD_DELETED

This notification message will be sent from a window to its parent before it is deleted.

WM_NOTIFICATION_CLICKED

This notification message will be sent when the window has been clicked.

WM_NOTIFICATION_LOST_FOCUS

This notification message will be sent when the window has lost the focus.

WM_NOTIFICATION_MOVED_OUT

This notification message will be sent when the pointer was moved out of the window while it is clicked.

WM_NOTIFICATION_RELEASED

This notification message will be sent when a clicked widget has been released.

WM_NOTIFICATION_SCROLL_CHANGED

This notification message will be sent when the scroll position of an attached SCROLLBAR widget has changed.

WM_NOTIFICATION_SCROLLBAR_ADDED

This notification message will be sent when a SCROLLBAR widget has been added to the window.

WM_NOTIFICATION_SEL_CHANGED

This notification message will be sent when the selection of a widget has changed.

WM_NOTIFICATION_VALUE_CHANGED

This notification message will be sent when a widget specific value has changed.

16.3.6 Application-defined messages

The application program can define additional messages for its own usage. In order to ensure that they do not use the same message Id's as those used by emWin, user-defined messages start numbering after `WM_USER`. You would define your own messages as follows:

```
#define MY_MESSAGE_AAA WM_USER+0
#define MY_MESSAGE_BBB WM_USER+1
```

and so on.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

16.4 Configuration options

Type	Macro	Default	Description
B	WM_SUPPORT_NOTIFY_VIS_CHANGED	0	Enables the WM to send a WM_NOTIFY_VIS_CHANGED message to a window if its visibility is changed.
B	WM_SUPPORT_TRANSPARENCY	1	Enable support for transparent windows. If set to 0 the additional code for transparency support is not included.

WM_SUPPORT_NOTIFY_VIS_CHANGED

Per default emWin does not inform windows if their visibility has changed. If enabled, the WM sends WM_NOTIFY_VIS_CHANGED messages.

WM_SUPPORT_TRANSPARENCY

Per default emWin supports transparent windows. This means per default the additional code used to handle transparent windows is linked if the WM is used. If the application does not use transparent windows the memory requirement of the application can be reduced if setting WM_SUPPORT_TRANSPARENCY to 0.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

16.5 WM API

The following table lists the available routines of the emWin window manager API. All functions are listed in alphabetical order within their respective categories. Detailed descriptions of the routines can be found later in the chapter.

Routine	Description
Basic functions	
WM_Activate()	Activates the window manager.
WM_AttachWindow()	Attaches a window to a new parent window.
WM_AttachWindowAt()	Attaches a window to a new parent window at the given position.
WM_BroadcastMessage()	Sends a message to all existing windows.
WM_BringToBottom()	Places a window behind its siblings.
WM_BringToTop()	Places a window in front of its siblings.
WM_ClrHasTrans()	Clears the has transparency flag.
WM_CreateWindow()	Creates a window.
WM_CreateWindowAsChild()	Creates a child window.
WM_Deactivate()	Deactivates the window manager.
WM_DefaultProc()	Default routine to handle messages.
WM_DeleteWindow()	Deletes a window.
WM_DetachWindow()	Detaches a window from its parent window.
WM_DisableWindow()	Sets the widget state to disabled.
WM_EnableWindow()	Sets the window state to enabled (default).
WM_Exec()	Redraws invalid windows by executing callbacks (all jobs).
WM_Exec1()	Redraws one invalid window by executing one callback (one job only).
WM_ForEachDesc()	Iterates over all descendants of a window.
WM_GetActiveWindow()	Returns handle of the active window.
WM_GetCallback()	Returns a pointer to the callback function of a window.
WM_GetClientRect()	Returns the size of the active window.
WM_GetClientRectEx()	Returns the size of a window.
WM_GetDesktopWindow()	Returns the window handle of the desktop window
WM_GetDesktopWindowEx()	Returns the window handle of the specified desktop window
WM_GetDialogItem()	Returns the window handle of a dialog box item (widget).
WM_GetFirstChild()	Returns handle of a window's first child window.
WM_GetFocussedWindow()	Returns the handle of the window with the input focus.
WM_GetHasTrans()	Returns current value of the has transparency flag.
WM_GetInvalidRect()	Returns the invalid rectangle of the given window.
WM_GetNextSibling()	Returns the handle of a window's next sibling.
WM_GetOrgX()	Returns the origin in X of the active window.
WM_GetOrgY()	Returns the origin in Y of the active window.
WM_GetParent()	Returns handle of a window's parent window.
WM_GetPrevSibling()	Returns the handle of a window's previous sibling.
WM_GetStayOnTop()	Returns current value of the stay on top flag.
WM_GetUserData()	Retrieves the user data of a window
WM_GetWindowOrgX()	Returns the origin in X of a window.
WM_GetWindowOrgY()	Returns the origin in Y of a window.
WM_GetWindowRect()	Returns the screen coordinates of the active window.
WM_GetWindowRectEx()	Returns the screen coordinates of a window.
WM_GetWindowSizeX()	Returns the horizontal size (width) of a window.
WM_GetWindowSizeY()	Returns the vertical size (height) of a window.
WM_HasCaptured()	Checks if the given window has captured mouse- and touch-screen-input.
WM_HasFocus()	Checks if the given window has the input focus.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
WM_HideWindow()	Makes a window invisible.
WM_InvalidateArea()	Invalidates a certain section of the display.
WM_InvalidateRect()	Invalidates a part of a window.
WM_InvalidateWindow()	Invalidates a window.
WM_IsCompletelyCovered()	Checks if a window is completely covered or not.
WM_IsCompletelyVisible()	Checks if a window is completely visible or not.
WM_IsEnabled()	Returns if a window is enabled or not.
WM_IsVisible()	Returns if a window is visible or not.
WM_IsWindow()	Determine whether a specified handle is a valid window handle.
WM_MakeModal()	Changes the window to a 'modal' window.
WM_MoveChildTo()	Sets the position of a window in window coordinates.
WM_MoveTo()	Sets the position of a window in desktop coordinates.
WM_MoveWindow()	Moves a window to another position.
WM_NotifyParent()	Sends a WM_NOTIFY_PARENT message to the parent of the given window.
WM_Paint()	Draws or redraws a window immediately.
WM_PaintWindowAndDescs()	Draws a given window and all descendant windows immediately.
WM_ReleaseCapture()	Stops capturing mouse- and touch screen-input.
WM_ResizeWindow()	Changes window size.
WM_SelectWindow()	Sets the active window to be used for drawing operations.
WM_SendMessage()	Sends a message to a window.
WM_SendMessageNoPara()	Sends a message without parameters to a window.
WM_SendToParent()	Sends the given message to the parent window of the given window.
WM_SetDesktopColor()	Sets desktop window color.
WM_SetDesktopColorEx()	Sets desktop window color of the given desktop.
WM_SetCallback()	Sets the callback routine for a window.
WM_SetCapture()	Starts capturing mouse- and touch screen-input.
WM_SetCreateFlags()	Sets the flags to be used as default when creating new windows
WM_SetFocus()	Sets input focus to a specified window.
WM_SetHasTrans()	Sets the `has transparency` flag.
WM_SetId()	Sends a `WM_SET_ID` message to the given window.
WM_SetpfPollPID()	Sets a function to be called by the WM for polling the PID.
WM_SetSize()	Sets the new size of a window.
WM_SetWindowPos()	Sets size and position of a window.
WM_SetXSize()	Sets the new X-size of a window.
WM_SetYSize()	Sets the new Y-size of a window.
WM_SetStayOnTop()	Sets the `stay on top` flag.
WM_SetTransState()	Sets or clears the `WM_CF_HASTRANS` and `WM_CF_CONST_OUTLINE` flags.
WM_SetUserClipRect()	Temporarily reduce the clipping area.
WM_SetUserData()	Sets the user data of the given window.
WM_ShowWindow()	Makes a window visible.
WM_Update()	Draws the invalid part of the given window.
WM_UpdateWindowAndDescs()	Draws the invalid part of a given window and the invalid part of all descendant windows.
WM_ValidateRect()	Validates parts of a window.
WM_ValidateWindow()	Validates a window.
Memory device support (optional)	
WM_DisableMemdev()	Disables usage of memory devices for redrawing.
WM_EnableMemdev()	Enables usage of memory devices for redrawing.
Timer related	

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
WM_CreateTimer()	Creates a timer which sends a WM_TIMER message to a window.
WM_DeleteTimer()	Deletes a timer.
WM_GetTimerId()	Gets the Id of the given timer.
WM_RestartTimer()	Restarts a timer.
	Widget related functions
WM_GetClientWindow()	Returns the handle of the client window.
WM_GetId()	Returns the ID of a widget.
WM_GetInsideRect()	Returns the size of the active window less the border.
WM_GetInsideRectEx()	Returns the size of a window less the border.
WM_GetScrollPosH()	Returns the scroll position of the windows horizontal scroll bar.
WM_GetScrollPosV()	Returns the scroll position of the windows vertical scroll bar.
WM_GetScrollState()	Gets the state of a scroll bar widget.
WM_SetScrollPosH()	Sets the scroll position of the windows horizontal scroll bar.
WM_SetScrollPosV()	Sets the scroll position of the windows vertical scroll bar.
WM_SetScrollState()	Sets the state of a scroll bar widget.

16.5.1 Using the WM API functions

Many of the WM functions have window handles as parameters. Observe the following rules when using handles:

- A window handle can be 0. In this case the function returns immediately unless the documentation of the function says otherwise.
- If a window handle is != 0, it should be a valid handle. The WM does not check if the given handle is valid. If an invalid handle is given to a function it fails or may even crashes.

16.6 Basic functions

WM_Activate()

Description

Activates the window manager.

Prototype

```
void WM_Activate(void);
```

Additional information

The WM is activated by default after initialization. This function only needs to be called if there has been a previous call of `WM_Deactivate()`.

WM_AttachWindow()

Description

The given window will be detached from its parent window and attached to the new parent window. The new origin in window coordinates of the new parent window will be the same as the old origin in window coordinates of the old parent window.

Prototype

```
void WM_AttachWindow(WM_HWIN hWin, WM_HWIN hParent);
```

Parameter	Description
hWin	Window handle.
hWinParent	Window handle of the new parent.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

If the given window handle is 0 or both handles are the same the function returns immediately.
If only the given parent window handle is 0 the function detaches the given window and returns; the window remains unattached.

WM_AttachWindowAt()

Description

The given window will be detached from its parent window and attached to the new parent window. The given position will be used to set the origin of the window in window coordinates of the parent window.

Prototype

```
void WM_AttachWindowAt(WM_HWIN hWin, WM_HWIN hParent, int x, int y);
```

Parameter	Description
hWin	Window handle.
hWinParent	Window handle of the new parent.
x	X position of the window in window coordinates of the parent window.
y	Y position of the window in window coordinates of the parent window.

Additional information

If the given window handle is 0 or both handles are the same the function returns immediately.
If only the given parent window handle is 0 the function detaches the given window, moves it to the new position and returns; the window remains unattached.

WM_BringToBottom()

Description

Places a specified window underneath its siblings.

Prototype

```
void WM_BringToBottom(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Additional information

The window will be placed underneath all other sibling windows, but will remain in front of its parent.

WM_BringToTop()

Description

Places a specified window on top of its siblings.

Prototype

```
void WM_BringToTop(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Additional information

The window will be placed on top of all other sibling windows and its parent.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WM_BroadcastMessage()

Description

Sends the given message to all existing windows.

Prototype

```
int WM_BroadcastMessage(WM_MESSAGE * pMsg);
```

Parameter	Description
pMsg	Pointer to message to be send.

Additional information

A window should not delete itself or a parent window in reaction of a broadcasted message.

WM_ClrHasTrans()

Description

Clears the `has transparency` flag (sets it to 0).

Prototype

```
void WM_ClrHasTrans(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Additional information

When set, this flag tells the window manager that a window contains sections which are not redrawn and will therefore be transparent. The WM then knows that the background needs to be redrawn prior to redrawing the window in order to make sure the transparent sections are restored correctly.
When the flag is cleared with `WM_ClrHasTrans()`, the WM will not automatically redraw the background before redrawing the window.

WM_CreateWindow()

Description

Creates a window of a specified size at a specified location.

Prototype

```
WM_HWIN WM_CreateWindow(int x0,              int           y0,
                        int width,           int           height,
                        U8  Style,           WM_CALLBACK * cb
                        int NumExtraBytes);
```

Parameter	Description
x0	Upper left X-position in desktop coordinates.
y0	Upper left Y-position in desktop coordinates.
width	X-size of window.
height	Y-size of window.
Style	Window create flags, listed below.
cb	Pointer to callback routine, or NULL if no callback used.
NumExtra-Bytes	Number of extra bytes to be allocated, normally 0.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for parameter Style (OR-combinable)	
WM_CF_ANCHOR_BOTTOM	Anchors the bottom edge of the new window relative to the bottom edge of the parent window. If the position of the parent windows bottom edge will be adjusted due to a size change, the position of new window will also be adjusted.
WM_CF_ANCHOR_LEFT	Anchors the left edge of the new window relative to the left edge of the parent window (default). If the position of the parent windows left edge will be adjusted due to a size change, the position of new window will also be adjusted.
WM_CF_ANCHOR_RIGHT	Anchors the right edge of the new window relative to the right edge of the parent window. If the position of the parent windows right edge will be adjusted due to a size change, the position of new window will also be adjusted.
WM_CF_ANCHOR_TOP	Anchors the top edge of the new window relative to the top edge of the parent window (default). If the position of the parent windows top edge will be adjusted due to a size change, the position of new window will also be adjusted.
WM_CF_BGND	Put window in background after creation.
WM_CF_CONST_OUTLINE	This flag is an optimization for transparent windows. It gives the window manager a chance to optimize redraw and invalidation of a transparent window. A transparent window is normally redrawn as part of the background, which is less efficient than redrawing the window separately. However, this flag may NOT be used if the window has semi transparency (alpha blending / antialiasing with background) or the outline (the shape) changes. Can normally be used; in case of doubt do not use it.
WM_CF_FGND	Put window in foreground after creation (default).
WM_CF_HASTRANS	Has transparency flag. Must be defined for windows whose client area is not entirely filled.
WM_CF_HIDE	Hide window after creation (default).
WM_CF_LATE_CLIP	This flag can be used to tell the WM that the clipping should be done in the drawing routines (late clipping). The default behavior of the WM is early clipping. That means that the clipping rectangle will be calculated before a WM_PAINT message will be send to a window. In dependence of other existing windows it can be necessary to send more than one WM_PAINT message to a window. If using WM_CF_LATE_CLIP the WM makes sure only one message will be sent to an invalid window and the clipping will be done by the drawing routines. The Sample folder of emWin contains the example WM_LateClipping.c to show the effect.
WM_CF_MEMDEV	Automatically use a memory device when redrawing. This will avoid flicker and also improve the output speed in most cases, as clipping is simplified. Note that the memory device package is required (and needs to be enabled in the configuration) in order to be able to use this flag. If memory devices are not enabled, this flag is ignored.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for parameter Style (OR-combinable)	
WM_CF_MEMDEV_ON_REDRAW	After the window is drawn the first time the WM will automatically use a memory device for redrawing. This flag can be used as a replacement of WM_CF_MEMDEV. It typically accelerates the initial rendering of the window, but maintains the advantage of flicker free updates.
WM_CF_SHOW	Show window after creation.
WM_CF_STAYONTOP	Make sure window stays on top of all siblings created without this flag.

Return value

Handle for created window.

Additional information

Several create flags can be combined by using the (OR) operator.
Negative-position coordinates may be used.

Examples

Creates a window with callback:

```
hWin2 = WM_CreateWindow(100, 10 ,180, 100, WM_CF_SHOW, &WinHandler, 0);
```

Creates a window without callback:

```
hWin2 = WM_CreateWindow(100, 10 ,180, 100,WM_CF_SHOW, NULL, 0);
```

WM_CreateWindowAsChild()

Description

Creates a window as a child window.

Prototype

```
WM_HWIN WM_CreateWindowAsChild(int x0, int y0,
                               int width, int height,
                               WM_HWIN hWinParent,
                               U8 Style,
                               WM_CALLBACK* cb
                                 int NumExtraBytes);
```

Parameter	Description
x0	Upper left X-position in window coordinates of the parent window.
y0	Upper left Y-position in window coordinates of the parent window.
width	X-size of window. If 0, X-size of client area of parent window.
height	Y-size of window. If 0, Y-size of client area of parent window.
hWinParent	Handle of parent window.
Style	Window create flags (see WM_CreateWindow()).
cb	Pointer to callback routine, or NULL if no callback used.
NumExtra-Bytes	Number of extra bytes to be allocated, normally 0.

Return value

Handle for the child window.

Additional information

If the hWinParent parameter is set to 0, the background window is used as parent.
A child window is placed on top of its parent and any previous siblings by default, so that if their Z-positions are not changed, the "youngest" window will always be top-most.
The Z-positions of siblings may be changed, although they will always remain on top of their parent regardless of their order.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WM_Deactivate()

Description

Deactivates the window manager.

Prototype

```
void WM_Deactivate(void);
```

Additional information

After calling this function, the clip area is set to the complete LCD area and the WM will not execute window callback functions.

WM_DefaultProc()

Description

Default message handler.

Prototype

```
void WM_DefaultProc(WM_MESSAGE* pMsg)
```

Parameter	Description
pMsg	Pointer to message.

Additional information

Use this function to handle unprocessed messages as in the following example:

```
static WM_RESULT cbBackgroundWin(WM_MESSAGE* pMsg) {
  switch (pMsg->MsgId) {
  case WM_PAINT:
    GUI_Clear();
  default:
    WM_DefaultProc(pMsg);
  }
}
```

WM_DeleteWindow()

Description

Deletes a specified window.

Prototype

```
void WM_DeleteWindow(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Additional information

Before the window is deleted, it receives a WM_DELETE message. This message is typically used to delete any objects (widgets) it uses and to free memory dynamically allocated by the window.
If the specified window has any existing child windows, these are automatically deleted before the window itself is deleted. Child windows therefore do not need to be separately deleted.
Before the window will be deleted it sends a WM_NOTIFICATION_CHILD_DELETED message to its parent window.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WM_DetachWindow()

Description

Detaches a window from its parent window. Detached windows will not be redrawn by the window manager.

Prototype

```
void WM_DetachWindow(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

WM_DisableWindow()

Description

Set the specified window to a disabled state. The WM does not pass pointer input device (PID) messages (touch, mouse, joystick, ...) to a disabled window.

Prototype

```
void WM_DisableWindow(WM_Handle hObj);
```

Parameter	Description
hObj	Handle of widget.

Additional information

A widget that is disabled will typically appear gray, and will not accept input from the user. However, the actual appearance may vary (depends on widget/configuration settings, etc.).
A disabled window will not receive the following messages: WM_TOUCH, WM_TOUCH_CHILD, WM_PID_STATE_CHANGED and WM_MOUSEOVER.

WM_EnableWindow()

Description

Sets the specified window to enabled state. An enabled window receives pointer input device (PID) messages (touch, mouse, joystick, ...) from the WM.

Prototype

```
void WM_EnableWindow(WM_Handle hObj);
```

Parameter	Description
hObj	Handle of window.

Additional information

This is the default setting for any widget.

WM_Exec()

Description

Redraws invalid windows by executing callback functions (all jobs).

Prototype

```
int WM_Exec(void);
```

Return value

0 if there were no jobs performed.
1 if a job was performed.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

This function will automatically call `WM_Exec1()` repeatedly until it has completed all jobs -- essentially until a 0 value is returned.
It is recommended to call the function `GUI_Exec()` instead.
Normally this function does not need to be called by the user application. It is called automatically by `GUI_Delay()`. If you are using a multitasking system, we recommend executing this function by a separate task as seen below:

```
void ExecIdleTask(void) {
  while(1) {
    WM_Exec();
  }
}
```

WM_Exec1()

Description

Redraws an invalid window by executing one callback function (one job only).

Prototype

```
int WM_Exec1(void);
```

Return value

0 if there were no jobs performed.
1 if a job was performed.

Additional information

This routine may be called repeatedly until 0 is returned, which means all jobs have been completed.
It is recommended to call the function `GUI_Exec1()` instead.
This function is called automatically by `WM_Exec()`.

WM_ForEachDesc()

Description

Iterates over all descendants of the given window. A descendant of a window is a child window or a grand child window or a child of a grand child or ....

Prototype

```
void WM_ForEachDesc(WM_HWIN hWin, WM_tfForEach * pcb, void * pData);
```

Parameter	Description
hWin	Window handle.
pcb	Pointer to callback function to be called by WM_ForEachDesc.
pData	User data to be passed to the callback function.

Additional information

This function calls the callback function given by the pointer `pcb` for each descendant of the given window. The parameter `pData` will be passed to the user function and can be used to point to user defined data.

Prototype of callback function

```
void CallbackFunction(WM_HWIN hWin, void * pData);
```

Example

The following example shows how the function can be used. It creates 3 windows, the first as a child window of the desktop, the second as a child window of the first window and the third as a child window of the second window. After creating the window it uses `WM_ForEachDesc()` to move each window within its parent window:

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
#include "GUI.h"
#include "WM.h"

/*********************************************************************
*
*       _cbWin
*/
static void _cbWin(WM_MESSAGE * pMsg) {
  GUI_COLOR Color;
  switch (pMsg->MsgId) {
  case WM_PAINT:
    WM_GetUserData(pMsg->hWin, &Color, 4);
    GUI_SetBkColor(Color);
    GUI_Clear();
    break;
  default:
    WM_DefaultProc(pMsg);
  }
}

/*********************************************************************
*
*       _cbDoSomething
*/
static void _cbDoSomething(WM_HWIN hWin, void * p) {
  int Value = *(int *)p;
  WM_MoveWindow(hWin, Value, Value);
}

/*********************************************************************
*
*       MainTask
*/
void MainTask(void) {
  WM_HWIN hWin_1, hWin_2, hWin_3;
  int Value = 10;
  GUI_COLOR aColor[] = {GUI_RED, GUI_GREEN, GUI_BLUE};
  GUI_Init();
  WM_SetDesktopColor(GUI_BLACK);
  hWin_1 = WM_CreateWindow( 10, 10, 100, 100, WM_CF_SHOW, _cbWin, 4);
  hWin_2 = WM_CreateWindowAsChild(10, 10, 80, 80, hWin_1, WM_CF_SHOW, _cbWin, 4);
  hWin_3 = WM_CreateWindowAsChild(10, 10, 60, 60, hWin_2, WM_CF_SHOW, _cbWin, 4);
  WM_SetUserData(hWin_1, &aColor[0], 4);
  WM_SetUserData(hWin_2, &aColor[1], 4);
  WM_SetUserData(hWin_3, &aColor[2], 4);
  while(1) {
    WM_ForEachDesc(WM_HBKWIN, _cbDoSomething, (void *)&Value);
    Value *= -1;
    GUI_Delay(500);
  }
}
```

WM_GetCallback()

Description

Returns a pointer to the callback function of the given window

Prototype

```
WM_CALLBACK * WM_GetCallback(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Return value

Pointer of type WM_CALLBACK which points to the callback function of the given window. If the window has no callback function, NULL is returned.

WM_GetActiveWindow()

Description

Returns the handle of the active window used for drawing operations.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
WM_HWIN WM_GetActiveWindow(void);
```

Return value

The handle of the active window.

WM_GetClientRect()

Description

Returns the coordinates of the client area in the active window in window coordinates. That means x0 and y0 of the GUI_RECT structure will be 0, x1 and y1 corresponds to the size - 1.

Prototype

```
void WM_GetClientRect(GUI_RECT* pRect);
```

Parameter	Description
pRect	Pointer to a GUI_RECT structure.

WM_GetClientRectEx()

Description

Returns the coordinates of the client area of a window in window coordinates. That means x0 and y0 of the GUI_RECT structure will be 0, x1 and y1 corresponds to the size - 1.

Prototype

```
void WM_GetClientRectEx(WM_HWIN hWin, GUI_RECT* pRect);
```

Parameter	Description
hWin	Window handle.
pRect	Pointer to a GUI_RECT structure.

WM_GetDesktopWindow()

Description

Returns the handle of the desktop window.

Prototype

```
WM_HWIN WM_GetDesktopWindow(void);
```

Return value

The handle of the desktop window.

Additional information

The desktop window is always the bottommost window and any further created windows are its descendants.

WM_GetDesktopWindowEx()

Description

Returns the handle of the specified desktop window when working in a multi layer environment.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
WM_HWIN WM_GetDesktopWindowEx(unsigned int LayerIndex);
```

Parameter	Description
LayerIndex	Index of layer

Return value

The handle of the specified desktop window.

WM_GetDialogItem()

Description

Returns the window handle of a dialog box item (widget).

Prototype

```
WM_HWIN WM_GetDialogItem(WM_HWIN hDialog, int Id);
```

Parameter	Description
hDialog	Handle of dialog box.
Id	Window Id of the widget.

Return value

The window handle of the widget.

Additional information

This function is always used when creating dialog boxes, since the window Id of a widget used in a dialog must be converted to its handle before it can be used.

WM_GetFirstChild()

Description

Returns the handle of a specified window's first child window.

Prototype

```
void WM_GetFirstChild(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Return value

Handle of the window's first child window; 0 if no child window exists.

Additional information

A window's first child window is the first child created to that particular parent. If the Z-positions of the windows have not been changed, it will be the window directly on top of the specified parent.

WM_GetFocussedWindow()

Description

Returns the handle of the window with the input focus.

Prototype

```
WM_HWIN WM_GetFocussedWindow(void);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

Handle of the window with the input focus or 0 if no window has the input focus.

WM_GetHasTrans()

Description

Returns the current value of the `has transparency` flag.

Prototype

```
U8 WM_GetHasTrans(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Return value

0: no transparency
1: window has transparency

Additional information

When set, this flag tells the window manager that a window contains sections which are not redrawn and will therefore be transparent. The WM then knows that the background needs to be redrawn prior to redrawing the window in order to make sure the transparent sections are restored correctly.

WM_GetInvalidRect()

Description

Returns the invalid rectangle of a window in desktop coordinates.

Prototype

```
int WM_GetInvalidRect(WM_HWIN hWin, GUI_RECT * pRect);
```

Parameter	Description
hWin	Window handle.
pRect	Pointer to a GUI_RECT-structure for storing the invalid rectangle.

Return value

0 if nothing is invalid, otherwise 1.

WM_GetNextSibling()

Description

Returns the handle of a specified window's next sibling.

Prototype

```
void WM_GetNextSibling(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Return value

Handle of the window's next sibling; 0 if none exists.

Additional information

A window's next sibling is the next child window that was created relative to the same parent. If the Z-positions of the windows have not been changed, it will be the window directly on top of the one specified.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WM_GetOrgX(), WM_GetOrgY()

Description

Returns the X- or Y-position (respectively) of the origin of the active window in desktop coordinates.

Prototypes

```
int WM_GetOrgX(void);
int WM_GetOrgY(void);
```

Return value

X- or Y-position of the origin of the active window in desktop coordinates.

WM_GetParent()

Description

Returns the handle of a specified window's parent window.

Prototype

```
void WM_GetParent(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Return value

Handle of the window's parent window; 0 if none exists.

Additional information

The only case in which no parent window exists is if the handle of the desktop window is used as parameter.

WM_GetPrevSibling()

Description

Returns the handle of a specified window's previous sibling.

Prototype

```
void WM_GetPrevSibling(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Return value

Handle of the window's previous sibling; 0 if none exists.

Additional information

A window's previous sibling is the previous child window that was created relative to the same parent. If the Z-positions of the windows have not been changed, it will be the window directly below of the one specified.

WM_GetStayOnTop()

Description

Returns the current value of the `stay on top` flag.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
int WM_GetStayOnTop(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Return value

0: stay on top flag not set
1: stay on top flag set

WM_GetUserData()

Description

Retrieves the data set with WM_SetUserData().

Prototype

```
int WM_GetUserData(WM_HWIN hWin, void* pDest, int SizeofBuffer);
```

Parameter	Description
hWin	Window handle.
pDest	Pointer to buffer.
SizeOfBuffer	SIze of buffer.

Return value

Number of bytes retrieved.

Additional information

The maximum number of bytes returned by this function is the number of Extra-Bytes specified when creating the window.

WM_GetWindowOrgX(), WM_GetWindowOrgY()

Description

Returns the X- or Y-position (respectively) of the origin of the specified window in desktop coordinates.

Prototypes

```
int WM_GetWindowOrgX(WM_HWIN hWin);
int WM_GetWindowOrgY(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Return value

X- or Y-position of the client area in pixels.

WM_GetWindowRect()

Description

Returns the coordinates of the active window in desktop coordinates.

Prototype

```
void WM_GetWindowRect(GUI_RECT* pRect);
```

Parameter	Description
pRect	Pointer to a GUI_RECT structure.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WM_GetWindowRectEx()

Description

Returns the coordinates of a window in desktop coordinates.

Prototype

```
void WM_GetWindowRectEx(WM_HWIN hWin, GUI_RECT* pRect);
```

Parameter	Description
hWin	Window handle.
pRect	Pointer to a GUI_RECT structure.

Additional information

If the given window handle is 0 or the given pointer to the GUI_RECT structure is NULL the function returns immediately.

WM_GetWindowSizeX(), WM_GetWindowSizeY()

Description

Return the X- or Y-size (respectively) of a specified window.

Prototypes

```
int WM_GetWindowSizeX(WM_HWIN hWin);
int WM_GetWindowSizeY(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Return value

X- or Y-size of the window in pixels.
Defined as x1-x0+1 in horizontal direction, y1-y0+1 in vertical direction, where x0, x1, y0, y1 are the leftmost/rightmost/topmost/bottommost positions of the window.
If the given window handle is 0 the function returns the size of the desktop window.

WM_HasCaptured()

Description

Returns 1 if the given window has captured mouse- and touchscreen-input, 0 if not.

Prototype

```
int WM_HasCaptured(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Return value

1 if the given window has captured mouse- and touchscreen-input, 0 if not.

Additional information

If the given window handle is invalid or 0 the function returns a wrong result.

WM_HasFocus()

Description

Checks if the given window has the input focus.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
int WM_HasFocus(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Return value

1 if the given window has the input focus, otherwise 0.

Additional information

If the given window handle is invalid or 0 the function returns a wrong result.

WM_HideWindow()

Description

Makes a specified window invisible.

Prototype

```
void WM_HideWindow(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Additional information

The window will not immediately appear "invisible" after calling this function. The invalid areas of other windows (areas which appear to lie "behind" the window which should be hidden) will be redrawn when executing `WM_Exec()`. If you need to hide (draw over) a window immediately, you should call `WM_Paint()` to redraw the other windows.

WM_InvalidateArea()

Description

Invalidates a specified, rectangular area of the display.

Prototype

```
void WM_InvalidateArea(GUI_RECT* pRect);
```

Parameter	Description
pRect	Pointer to a GUI_RECT structure with desktop coordinates.

Additional information

Calling this function will tell the WM that the specified area is not updated.
This function can be used to invalidate any windows or parts of windows that overlap or intersect the area. The coordinates of the GUI_RECT structure have to be in desktop coordinates.

WM_InvalidateRect()

Description

Invalidates a specfied, rectangular area of a window.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void WM_InvalidateRect(WM_HWIN hWin, GUI_RECT* pRect);
```

Parameter	Description
hWin	Window handle.
pRect	Pointer to a GUI_RECT structure with window coordinates of the parent window.

Additional information

Calling this function will tell the WM that the specified area is not updated.
The next time `WM_Paint()` is called to redraw the window, the area will be redrawn as well. The coordinates of the GUI_RECT structure have to be in window coordinates.

WM_InvalidateWindow()

Description

Invalidates a specified window.

Prototype

```
void WM_InvalidateWindow(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Additional information

Calling this function tells the WM that the specified window is not updated.

WM_IsCompletelyCovered()

Description

Checks if the given window is completely covered or not.

Prototype

```
char WM_IsCompletelyCovered(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Return value

1 if the given window is completely covered, otherwise 0.

Additional information

If the given window handle is invalid or 0 the function returns a wrong result.

WM_IsCompletelyVisible()

Description

Checks if the given window is completely visible or not.

Prototype

```
char WM_IsCompletelyVisible(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

1 if the given window is completely visible, otherwise 0.

Additional information

If the given window handle is invalid or 0 the function returns a wrong result.

WM_IsEnabled()

Description

This function returns if a window is enabled or not.

Prototype

```
int WM_IsEnabled(WM_HWIN hObj);
```

Parameter	Description
hObj	Handle of window.

Return value

1 if the window is enabled, 0 if not.

Additional information

A widget that is disabled will typically appear gray, and will not accept input from the user. However, the actual appearance may vary (depends on widget/configuration settings, etc.)

WM_IsVisible()

Description

Determines whether or not a specified window is visible.

Prototype

```
int WM_IsVisible(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Return value

0: Window is not visible
1: Window is visible

WM_IsWindow()

Description

Determines whether or not a specified handle is a valid window handle.

Prototype

```
void WM_IsWindow(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Return value

0: handle is not a valid window handle
1: handle is a valid window handle

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

This function should be used only if absolutely necessary. The more windows exist the more time will be used to evaluate, if the given handle is a window.

WM_MakeModal()

Description

This function makes the window work in 'modal' mode. This means pointer device input will only be send to the 'modal' window or a child window of it if the input position is within the rectangle of the modal window.

Prototype

```
void WM_MakeModal(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

WM_MoveChildTo()

Description

Moves a specified window to a certain position.

Prototype

```
void WM_MoveChildTo(WM_HWIN hWin, int x, int y);
```

Parameter	Description
hWin	Window handle.
x	New X-position in window coordinates of the parent window.
y	New Y-position in window coordinates of the parent window.

WM_MoveTo()

Description

Moves a specified window to a certain position.

Prototype

```
void WM_MoveTo(WM_HWIN hWin, int x, int y);
```

Parameter	Description
hWin	Window handle.
x	New X-position in desktop coordinates.
y	New Y-position in desktop coordinates.

WM_MoveWindow()

Description

Moves a specified window by a certain distance.

Prototype

```
void WM_MoveWindow(WM_HWIN hWin, int dx, int dy);
```

Parameter	Description
hWin	Window handle.
dx	Horizontal distance to move.
dy	Vertical distance to move.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WM_NotifyParent()

Description

Sends a WM_NOTIFY_PARENT message to the given window.

Prototype

```
void WM_NotifyParent(WM_HWIN hWin, int Notification);
```

Parameter	Description
hWin	Window handle.
Notification	Value to send to the parent window.

Additional information

The Notification-parameter will be send in the Data.v element of the message. The macro WM_NOTIFOCATION_USER can be used for defining application defined messages:

```
#define NOTIFICATION_1 (WM_NOTIFOCATION_USER + 0)
#define NOTIFICATION_2 (WM_NOTIFOCATION_USER + 1)
```

WM_Paint()

Description

Draws or redraws a specified window immediately.

Prototype

```
void WM_Paint(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Additional information

The window is redrawn reflecting all updates made since the last time it was drawn.

WM_PaintWindowAndDescs()

Description

Paints the given window and all its descendants.

Prototype

```
void WM_PaintWindowAndDescs(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Additional information

The function draws the complete window regions by invalidating them before drawing.

WM_ReleaseCapture()

Description

Releases capturing of mouse- and touchscreen-input.

Prototype

```
void WM_ReleaseCapture(void);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

Use `WM_SetCapture()` to send all mouse- and touchscreen-input to a specific window.

WM_ResizeWindow()

Description

Changes the size of a specified window by adding (or subtracting) the given differences.

Prototype

```
void WM_ResizeWindow(WM_HWIN hWin, int XSize, int YSize);
```

Parameter	Description
hWin	Window handle.
dx	Difference in X.
dy	Difference in Y.

WM_SelectWindow()

Description

Sets the active window to be used for drawing operations.

Prototype

```
WM_HWIN WM_SelectWindow(WM_HWIN  hWin);
```

Parameter	Description
hWin	Window handle.

Return value

The selected window.

Additional information

This function should not be called within a paint function called by the window manager. If the window manager sends a WM_PAINT message the target window already has been selected.
When working with a multi layer configuration the function switches also to the layer of the top level parent window of the given window.
If the given window handle is 0 the function selects the first created window, normally the first desktop window.

Example

Sets a window with handle `hWin2` to the active window, sets the background color, and then clears the window:

```
WM_SelectWindow(hWin2);
GUI_SetBkColor(0xFF00);
GUI_Clear();
```

WM_SendMessage()

Description

Sends a message to a specified window.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void WM_SendMessage(WM_HWIN hWin, WM_MESSAGE* pMsg)
```

Parameter	Description
hWin	Window handle.
pMsg	Pointer to message.

WM_SendMessageNoPara()

Description

Sends a message without parameters to a specified window.

Prototype

```
void WM_SendMessageNoPara(WM_HWIN hWin, int MsgId)
```

Parameter	Description
hWin	Window handle.
MsgId	Id of message to be send.

Additional information

If only a message Id should be send to a window this should be done with this function, because it does not need a pointer to a WM_MESSAGE structure. Note that the receiving window gets no further information except the message Id.

WM_SendToParent()

Description

Sends the given message to the parent window of the given window.

Prototype

```
void WM_SendToParent(WM_HWIN hWin, WM_MESSAGE* pMsg);
```

Parameter	Description
hWin	Window handle.
pMsg	Pointer to WM_MESSAGE-structure.

WM_SetDesktopColor()

Description

Sets the color for the desktop window.

Prototype

```
GUI_COLOR WM_SetDesktopColor(GUI_COLOR Color);
```

Parameter	Description
Color	Color for desktop window, 24-bit RGB value.

Return value

The previously selected desktop window color.

Additional information

The default setting for the desktop window is not to repaint itself. If this function is not called, the desktop window will not be redrawn at all; therefore other windows will remain visible even after they are deleted.
Once a color is specified with this function, the desktop window will repaint itself. In order to restore the default, call this function and specify GUI_INVALID_COLOR.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WM_SetDesktopColorEx()

Description

Sets the color for the desktop window in a multi layer environment.

Prototype

```
GUI_COLOR WM_SetDesktopColorEx(GUI_COLOR Color, unsigned int LayerIndex);
```

Parameter	Description
Color	Color for desktop window, 24-bit RGB value.
LayerIndex	Index of the layer.

Return value

The previously selected desktop window color.

Additional information

(see WM_SetDesktopColor).

WM_SetCallback()

Description

Sets a callback routine to be executed by the window manager.

Prototype

```
WM_CALLBACK* WM_SetCallback (WM_HWIN hWin, WM_CALLBACK* cb)
```

Parameter	Description
hWin	Window handle.
cb	Pointer to callback routine.

Return value

Pointer to the previous callback routine.

Additional information

The given window will be invalidated. This makes sure the window will be redrawn.

WM_SetCapture()

Description

Routes all mouse- and touchscreen-messages to the given window.

Prototype

```
void WM_SetCapture(WM_HWIN hObj, int AutoRelease);
```

Parameter	Description
hWin	Window handle.
AutoRelease	1 if capturing should end when the user releases the touch.

WM_SetCreateFlags()

Description

Sets the flags to be used as default when creating a new window.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
U8 WM_SetCreateFlags (U8 Flags)
```

Parameter	Description
Flags	Window create flags (see WM_CreateWindow()).

Return value

Former value of this parameter.

Additional information

The flags specified here are binary ORed with the flags specified in the WM_CreateWindow() and WM_CreateWindowAsChild() routines.
The flag WM_CF_MEMDEV is frequently used to enable memory devices on all windows. Please note that it is permitted to set create flags before GUI_Init() is called. This causes the background window to be also affected by the create flags.

Example

```
WM_SetCreateFlags(WM_CF_MEMDEV);  /* Auto. use memory devices on all windows */
```

WM_SetFocus()

Description

Sets the input focus to a specified window.

Prototype

```
void WM_SetFocus(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Return value

0 if window accepted focus; value other than 0 if it could not.

Additional information

The window receives a WM_SETFOCUS message which gives it the input focus. If for some reason the window could not accept the focus, nothing happens.

WM_SetHasTrans()

Description

Sets the has transparency flag (sets it to 1).

Prototype

```
void WM_SetHasTrans(WM_HWIN hWin);
```

Parameter	Description
HWin	Window handle.

Additional information

When set, this flag tells the window manager that a window contains sections which are not redrawn and will therefore be transparent. The WM then knows that the background needs to be redrawn prior to redrawing the window in order to make sure the transparent sections are restored correctly.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WM_SetId()

Description

This function sends a WM_SET_ID message to the given window.

Prototype

```
void WM_SetId(WM_HWIN hObj, int Id);
```

Parameter	Description
hObj	Window handle.
Id	Id to be send to the window.

Additional information

This function can be used to change the Id of a widget. It works with every widget. When using this function with a application defined window, the callback function of the window should handle the message. Otherwise it will be ignored.

WM_SetpfPollPID()

Description

Sets a function which will be called by the window manager in order to poll the pointer input device (touch-screen or mouse).

Prototype

```
WM_tfPollPID * WM_SetpfPollPID(WM_tfPollPID * pf);
```

Parameter	Description
pf	Pointer to a function of type WM_tfPollPID.

Additional information

The function type is defined as follows:

```
typedef void WM_tfPollPID(void);
```

Example

Example of a touch-screen handled as a device:

```
void ReadTouch(void) {
  // ...read touchscreen
}

WM_SetpfPollPID(ReadTouch);
```

WM_SetSize()

Description

Sets the new size of a window.

Prototype

```
void WM_SetSize(WM_HWIN hWin, int XSize, int YSize);
```

Parameter	Description
hWin	Window handle.
XSize	New size in X.
YSize	New size in Y.

WM_SetWindowPos()

Description

Sets the size and the position of a window.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void WM_SetWindowPos(WM_HWIN hWin,
                     int xPos, int yPos,
                     int xSize, int ySize);
```

Parameter	Description
hWin	Window handle.
xPos	New position in X in desktop coordinates.
yPos	New position in Y in desktop coordinates.
xSize	New size in X.
ySize	New size in Y.

WM_SetXSize()

Description

Sets the new X-size of a window.

Prototype

```
void WM_SetXSize(WM_HWIN hWin, int XSize);
```

Parameter	Description
hWin	Window handle.
XSize	New size in X.

WM_SetYSize()

Description

Sets the new Y-size of a window.

Prototype

```
void WM_SetYSize(WM_HWIN hWin, int YSize);
```

Parameter	Description
hWin	Window handle.
YSize	New size in Y.

WM_SetStayOnTop()

Description

Sets the `stay on top` flag.

Prototype

```
void WM_SetStayOnTop(WM_HWIN hWin, int OnOff);
```

Parameter	Description
hWin	Window handle.
OnOff	(see table below)

Permitted values for parameter OnOff	
0	`Stay on top` flag would be cleared.
1	`Stay on top` flag would be set.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WM_SetTransState()

Description

This function sets or clears the flags WM_CF_HASTRANS and WM_CF_CONST_OUTLINE of the given window.

Prototype

```
void WM_SetTransState(WM_HWIN hWin, unsigned State);
```

Parameter	Description
hWin	Window handle.
State	Combination of the flags WM_CF_HASTRANS and WM_CF_CONST_OUTLINE.

Additional information

For details about the flag WM_CF_CONST_OUTLINE, refer to "WM_CreateWindow()" on page 309.

WM_SetUserClipRect()

Description

Temporarily reduces the clip area of the current window to a specified rectangle.

Prototype

```
const GUI_RECT* WM_SetUserClipRect(const GUI_RECT* pRect);
```

Parameter	Description
pRect	Pointer to a GUI_RECT structure defining the clipping region in desktop coordinates.

Return value

Pointer to the previous clip rectangle.

Additional information

A NULL pointer can be passed in order to restore the default settings. The clip rectangle will automatically be reset by the WM when callbacks are used.
The specified rectangle must be relative to the current window. You cannot enlarge the clip rectangle beyond the current window rectangle.
Your application must ensure that the specified rectangle retains its value until it is no longer needed; that is, until a different clip rectangle is specified or until a NULL pointer is passed. This means that the rectangle structure passed as parameter should not be an auto variable (usually located on the stack) if the clip rectangle remains active until after the return. In this case, a static variable should be used.

Example

This example is taken from the drawing routine of a progress indicator. The progress indicator must write text on top of the progress bar, where the text color has to be different on the left and right parts of the bar. This means that half of a digit could be in one color, while the other half could be in a different color. The best way to do this is to temporarily reduce the clip area when drawing each part of the bar as shown below:

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
/* Draw left part of the bar */
    r.x0=0; r.x1=x1-1; r.y0=0; r.y1 = GUI_YMAX;
    WM_SetUserClipRect(&r);
    GUI_SetBkColor(pThis->ColorBar[0]);
    GUI_SetColor(pThis->ColorText[0]);
    GUI_Clear();
    GUI_GotoXY(xText,yText); GUI_DispDecMin(pThis->v); GUI_DispChar('%');
/* Draw right part of the bar */
    r.x0=r.x1; r.x1=GUI_XMAX;
    WM_SetUserClipRect(&r);
    GUI_SetBkColor(pThis->ColorBar[1]);
    GUI_SetColor(pThis->ColorText[1]);
    GUI_Clear();
    GUI_GotoXY(xText,yText); GUI_DispDecMin(pThis->v); GUI_DispChar('%');
```

Screen shot of progress bar



WM_SetUserData()

Description

Sets the extra data of a window. Memory for extra data is reserved with the parameter `NumExtraBytes` when creating a window.

Prototype

```
int WM_SetUserData(WM_HWIN hWin, void * pSrc, int NumBytes);
```

Parameter	Description
hWin	Window handle.
pSrc	Pointer to buffer.
NumBytes	Size of buffer.

Return value

Number of bytes written.

Additional information

The maximum number of bytes used to store user data is the number of ExtraBytes specified when creating a window.

WM_ShowWindow()

Description

Makes a specified window visible.

Prototype

```
void WM_ShowWindow(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Additional information

The window will not immediately be visible after calling this function. It will be redrawn when executing `WM_Exec()`. If you need to show (draw) the window immediately, you should call `WM_Paint()`.

WM_Update()

Description

Draws the invalid part of the specified window immediately.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void WM_Update(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Additional information

After updating a window its complete region is marked as valid.

WM_UpdateWindowAndDescs()

Description

Paints the invalid part of the given window and the invalid part of all its descendants.

Prototype

```
void WM_UpdateWindowAndDescs(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Additional information

The function only draws the invalid window regions.

WM_ValidateRect()

Description

Validates a specfied, rectangular area of a window.

Prototype

```
void WM_ValidateRect  (WM_HWIN hWin, GUI_RECT* pRect);
```

Parameter	Description
hWin	Window handle.
pRect	Pointer to a GUI_RECT structure with window coordinates of the parent window.

Additional information

Calling this function will tell the WM that the specified area is updated.
Normally this function is called internally and does not need to be called by the user application. The coordinates of the GUI_RECT structure have to be in desktop coordinates.

WM_ValidateWindow()

Description

Validates a specified window.

Prototype

```
void WM_ValidateWindow  (WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Additional information

Calling this function will tell the WM that the specified window is updated.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Normally this function is called internally and does not need to be called by the user application.

16.7 Memory device support (optional)

When a memory device is used for redrawing a window, all drawing operations are automatically routed to a memory device context and are executed in memory. Only after all drawing operations have been carried out is the window redrawn on the LCD, reflecting all updates at once. The advantage of using memory devices is that any flickering effects (which normally occur when the screen is continuously updated as drawing operations are executed) are eliminated.
For more information on how memory devices operate, see the chapter "Memory Devices" on page 247.

WM_DisableMemdev()

Description

Disables the use of memory devices for redrawing a window.

Prototype

```
void WM_DisableMemdev (WM_HWIN hWin)
```

Parameter	Description
hWin	Window handle.

WM_EnableMemdev()

Description

Enables the use of memory devices for redrawing a window.

Prototype

```
void WM_EnableMemdev (WM_HWIN hWin)
```

Parameter	Description
hWin	Window handle.

16.8 Timer related functions

WM_CreateTimer()

Description

Creates a timer which sends a message to the given window after the given time period has expired. The timer is associated to the given window.

Prototype

```
WM_HTIMER WM_CreateTimer(WM_HWIN hWin, int UserId, int Period, int Mode);
```

Parameter	Description
hWin	Handle of window to be informed.
UserId	User defined Id. Can be set to 0 if not using multiple timers for the same window.
Period	Time period after which the given window should receive a message.
Mode	(reserved for future use, should be 0)

Return value

Handle of the timer.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

The function creates a 'one shot timer' which sends a WM_TIMER message to the given window. After the timer period has expired the timer object remains valid and can be restarted using the function WM_RestartTimer() or deleted with WM_DeleteTimer(). Please note that the window manager automatically deletes each associated timer of a window when deleting the window.

Example

```
static void _cbWin(WM_MESSAGE * pMsg) {
  switch (pMsg->MsgId) {
  case WM_TIMER:
    /*
      ... do something ...
    */
    WM_RestartTimer(pMsg->Data.v, 1000);
    break;
  default:
    WM_DefaultProc(pMsg);
  }
}

static void _DemoTimer(void) {
  WM_HWIN hWin;
  WM_HTIMER hTimer;
  hWin   = WM_CreateWindow(10, 10, 100, 100, WM_CF_SHOW, _cbWin, 0);
  hTimer = WM_CreateTimer(hWin, 0, 1000, 0);
  while (1) {
    GUI_Exec();
  }
}
```

WM_DeleteTimer()

Description

Deletes the given timer.

Prototype

```
void WM_DeleteTimer(WM_HTIMER hTimer);
```

Parameter	Description
hTimer	Handle of the timer to be deleted.

Additional information

After a timer has expired the timer object remains valid and will not be deleted automatically. If it is not used anymore it should be deleted using this function.
Please note that the window manager automatically deletes the timer when deleting the window.

WM_GetTimerId()

Description

Gets the Id of the given timer.

Prototype

```
int WM_GetTimerId(WM_HTIMER hTimer);
```

Parameter	Description
hTimer	Handle of the timer to be deleted.

Return value

The Id of the timer which was previously set within the function WM_CreateTimer().

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WM_RestartTimer()

Description

Restarts the given timer with the given period.

Prototype

```
void WM_RestartTimer(WM_HTIMER hTimer, int Period);
```

Parameter	Description
hTimer	Handle of the timer to be restarted.
Period	New period to be used.

Additional information

After the period has expired a WM_TIMER message will be send to the window assigned to the timer. For details, refer to "WM_CreateTimer()" on page 336.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

16.9 Widget related functions

WM_GetClientWindow()

Description

Returns the handle of the client window. The function sends a message to the active window to retrieve the handle of the client window. If the window does not handle the message the handle of the current window will be returned.

Prototype

```
WM_HWIN WM_GetClientWindow(WM_HWIN hObj);
```

Parameter	Description
hWin	Handle of widget.

Return value

Handle of the client window.

Additional information

Use this function to retrieve the client window handle of a FRAMEWIN widget.

WM_GetId()

Description

Returns the ID of a specified widget window.

Prototype

```
int WM_GetId(WM_HWIN hObj);
```

Parameter	Description
hObj	Handle of widget.

Return value

The ID of the widget specified at creation.
0 will be returned if the specified window is not a widget.

WM_GetInsideRect()

Description

Returns the coordinates of the client area of the active widget less the border size. The function sends a message to the active window to retrieve the inside rectangle. If the widget does not handle the message (that means the widget has no border) WM_GetClientRect will be used to calculate the rectangle. The result is given in window coordinates. That means x0 and y0 of the GUI_RECT structure corresponds to the border size in x and y, x1 and y1 corresponds to the size of the window less the border size - 1.

Prototype

```
void WM_GetInsideRect(GUI_RECT* pRect);
```

Parameter	Description
pRect	Pointer to a GUI_RECT structure.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WM_GetInsideRectEx()

Description

Returns the coordinates of a window less the border size. For details, refer to "WM_GetInsideRect()" on page 339.

Prototype

```
void WM_GetInsideRectEx(WM_HWIN hObj, GUI_RECT* pRect);
```

Parameter	Description
hObj	Handle of widget.
pRect	Pointer to a GUI_RECT structure.

WM_GetScrollPosH()

Description

If a horizontal scroll bar is attached to the window, the function returns the scroll position of it.

Prototype

```
int WM_GetScrollPosH(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Return value

Scroll position of the horizontal scroll bar attached to this window.

Additional information

If no horizontal scroll bar is attached to the window, the function returns 0.
For more information, refer to "SCROLLBAR: Scroll bar widget" on page 617.

WM_GetScrollPosV()

Description

If a vertical scroll bar is attached to the window, the function returns the scroll position of it.

Prototype

```
int WM_GetScrollPosV(WM_HWIN hWin);
```

Parameter	Description
hWin	Window handle.

Return value

Scroll position of the vertical scroll bar attached to this window.

Additional information

If no vertical scroll bar is attached to the window, the function returns 0.
For more information, refer to "SCROLLBAR: Scroll bar widget" on page 617.

WM_GetScrollState()

Description

Fills a data structure with information on the current state of a specified scroll bar widget window.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void WM_GetScrollState(WM_HWIN hObj, WM_SCROLL_STATE* pScrollState);
```

Parameter	Description
hObj	Handle of scroll bar widget.
pScrollState	Pointer to a data structure of type WM_SCROLL_STATE.

Additional information

This function does not return since the state of a scroll bar is defined by more than one value.
It has no effect on other types of widgets or windows.
For more information, refer to "SCROLLBAR: Scroll bar widget" on page 617.

Elements of WM_SCROLL_STATE

Data type	Element	Description
int	NumItems	Number of items.
int	v	Current value.
int	PageSize	Number of items visible on one page.

WM_SetScrollPosH()

Description

If a horizontal scroll bar is attached to the window, the function sets the scroll position of it.

Prototype

```
void WM_SetScrollPosH(WM_HWIN hWin, unsigned ScrollPos);
```

Parameter	Description
hWin	Window handle.
ScrollPos	New scroll position of the scroll bar.

Additional information

If no horizontal scroll bar is attached to the window, the function returns.
For more information, refer to "SCROLLBAR: Scroll bar widget" on page 617.

WM_SetScrollPosV()

Description

If a vertical scroll bar is attached to the window, the function sets the scroll position of it.

Prototype

```
void WM_SetScrollPosV(WM_HWIN hWin, unsigned ScrollPos);
```

Parameter	Description
hWin	Window handle.
ScrollPos	New scroll position of the scroll bar.

Additional information

If no vertical scroll bar is attached to the window, the function returns.
For more information, refer to "SCROLLBAR: Scroll bar widget" on page 617.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WM_SetScrollState()

Description

Sets the state of a specified scroll bar widget.

Prototype

```
void WM_SetScrollState(WM_HWIN hObj, const WM_SCROLL_STATE* pState);
```

Parameter	Description
hObj	Handle of scroll bar widget.

16.10 Example

The following example illustrates the difference between using a callback routine for redrawing the background and not having one. It also shows how to set your own callback function. The example is available as `WM_Redraw.c` in the examples shipped with emWin:

```
/*********************************************************************
*                 SEGGER MICROCONTROLLER SYSTEME GmbH                *
*         Solutions for real time microcontroller applications       *
*                                                                    *
*                     emWin example code                             *
*                                                                    *
**********************************************************************

----------------------------------------------------------------------
File        : WM_Redraw.c
Purpose     : Demonstrates the redrawing mechanism of the window manager
----------------------------------------------------------------------
*/

#include "GUI.H"

/*********************************************************************
*
*            Callback routine for background window
*
**********************************************************************
*/

static void cbBackgroundWin(WM_MESSAGE* pMsg) {
  switch (pMsg->MsgId) {
  case WM_PAINT:
    GUI_Clear();
  default:
    WM_DefaultProc(pMsg);
  }
}

/*********************************************************************
*
*            Callback routine for foreground window
*
**********************************************************************
*/

static void cbForegroundWin(WM_MESSAGE* pMsg) {
  switch (pMsg->MsgId) {
  case WM_PAINT:
    GUI_SetBkColor(GUI_GREEN);
    GUI_Clear();
    GUI_DispString("Foreground window");
    break;
  default:
    WM_DefaultProc(pMsg);
  }
}

/*********************************************************************
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
*
*         Demonstrates the redraw mechanism of emWin
*
**********************************************************************
*/

static void DemoRedraw(void) {
  GUI_HWIN hWnd;
  while(1) {
    /* Create foreground window */
    hWnd = WM_CreateWindow(10, 10, 100, 100, WM_CF_SHOW, cbForegroundWin, 0);
    /* Show foreground window */
    GUI_Delay(1000);
    /* Delete foreground window */
    WM_DeleteWindow(hWnd);
    GUI_DispStringAt("Background of window has not been redrawn", 10, 10);
    /* Wait a while, background will not be redrawn */
    GUI_Delay(1000);
    GUI_Clear();
    /* Set callback for Background window */
    WM_SetCallback(WM_HBKWIN, cbBackgroundWin);
    /* Create foreground window */
    hWnd = WM_CreateWindow(10, 10, 100, 100,WM_CF_SHOW, cbForegroundWin, 0);
    /* Show foreground window */
    GUI_Delay(1000);
    /* Delete foreground window */
    WM_DeleteWindow(hWnd);
    /* Wait a while, background will be redrawn */
    GUI_Delay(1000);
    /* Delete callback for Background window */
    WM_SetCallback(WM_HBKWIN, 0);
 }}

/*********************************************************************
*
*                 main
*
**********************************************************************
*/

void main(void) {
  GUI_Init();
  DemoRedraw();
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 17

Window Objects (Widgets)


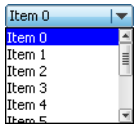

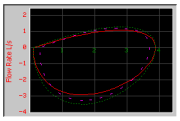

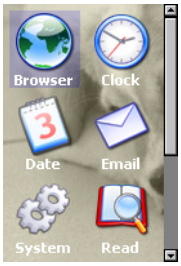
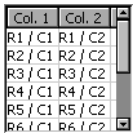

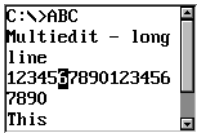
Widgets are windows with object-type properties; they are called controls in the windows world and make up the elements of the user interface. They can react automatically to certain events; for example, a button can appear in a different state if it is pressed. Widgets need to be created, have properties which may be changed at any time during their existence and are then typically deleted when they are no longer needed. Just like a window, a widget is referenced by a handle which is returned by its create function.
Widgets require the window manager. Once a widget is created, it is treated just like any other window; the WM ensures that it is properly displayed (and redrawn) whenever necessary. Widgets are not required when writing an application or a user interface, but they can make programming much easier.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG






17.1 Some basics

17.1.1 Available widgets

The following table shows the appearance of the currently available widgets. Some of the widgets support skinning. This method of changing the appearance is explained in detail in chapter 'Skinning'. The second screenshot shows the appearance when skinning is enabled for the widget:

Name	Screenshot (classic)	Screenshot (skinned)	Description
BUTTON			Button which can be pressed. Text or bitmaps may be displayed on a button.
CHECKBOX			Check box which may be checked or unchecked.
DROPDOWN			Dropdown listbox, opens a listbox when pressed.
EDIT			Single-line edit field which prompts the user to type a number or text.
FRAMEWIN			Frame window. Creates the typical GUI look.
GRAPH			Graph widget, used to show curves or measured values.
HEADER			Header control, used to manage columns.
ICONVIEW			Icon view widget. Useful for icon based platforms as found in common hand held devices.
LISTBOX			Listbox which highlights items as they are selected by the user.
LISTVIEW			Listview widgets are used to creates tables.
LISTWHEEL			Listwheel widget. The data can be moved and accelerated via pointer input device.
MENU			Menu widgets are used to create horizontal and vertical menus.
MULTIEDIT			Multiedit widgets are used to edit multiple lines of text.

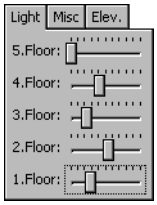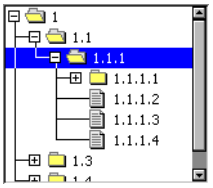 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Name	Screenshot (classic)	Screenshot (skinned)	Description
MULTIPAGE			Multipage widgets are used to create dialogs with multiple pages.
PROGBAR			Progress bar used for visualization.
RADIOBUTTON			Radio button which may be selected. Only one button may be selected at a time.
SCROLLBAR			Scrollbar which may be horizontal or vertical.
SLIDER			Slider bar used for changing values.
TEXT			Static text controls typically used in dialogs.
TREEVIEW			Treeview widget for managing hierarchical lists.

17.1.2 Understanding the redrawing mechanism

A widget draws itself according to its properties. This is done when `WM_Exec()`, `GUI_Exec()` or `GUI_Delay()` is called. In a multitasking environment, a background task is normally used to call `WM_Exec()` and update the widgets (and all other windows with callback functions).
When a property of a widget is changed, the window of the widget (or part of it) is marked as invalid, but it is not immediately redrawn. Therefore, the section of code executes very fast. The redrawing is done by the WM at a later time or it can be forced by calling `WM_Paint()` for the widget (or `WM_Exec()` until all windows are redrawn).

17.1.3 How to use widgets

Suppose we would like to display a progress bar. All that is needed is the following code:

```
PROGBAR_Handle hProgBar;
GUI_DispStringAt("Progress bar", 100, 20);
hProgBar = PROGBAR_Create(100, 40, 100, 20, WM_CF_SHOW);
```



The first line reserves memory for the handle of the widget. The last line actually creates the widget. The widget will then automatically be drawn by the window manager if `WM_Exec()` is called at a later point or in a separate task.
Member functions are available for each type of widget which allow modifications to their appearance. Once the widget has been created, its properties can be changed by calling one of its member functions. These functions take the handle of the widget as their first argument. In order to make the progress bar created above show 45% and to change the bar colors from their defaults (dark gray/light gray) to green/red, the following section of code may be used:

```
PROGBAR_SetBarColor(hProgBar, 0, GUI_GREEN);
PROGBAR_SetBarColor(hProgBar, 1, GUI_RED);
PROGBAR_SetValue(hProgBar, 45);
```



Default configuration

All widgets also have one or more configuration macros which define various default settings such as fonts and colors used. The available configuration options are listed for each widget in their respective sections later in the chapter.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

How widgets communicate

Widgets are often created as child windows. The parent window may be any type of window, even another widget. A parent window usually needs to be informed whenever something occurs with one of its children in order to ensure synchronization. Child window widgets communicate with their parent window by sending a `WM_NOTIFY_PARENT` message whenever an event occurs. The notification code sent as part of the message depends on the event.
Most widgets have one or more notification codes defining different types of events. The available notification codes for each widget (if any) are listed under their respective sections.

Skinning

As explained before the appearance of a widget can be modified by using the member functions of the respective widget. Some of the widgets support skinning. If skinning is used for a widget the 'skin' determines the appearance of the widget and some of the member functions have no effect. For details please refer to the chapter 'Skinning'.

Dynamic memory usage for widgets

In embedded applications it is usually not very desirable to use dynamic memory at all because of fragmentation effects. There are a number of different strategies that can be used to avoid this, but they all work in a limited way whenever memory areas are referenced by a pointer in the application program. For this reason, emWin uses a different approach: all objects (and all data stored at run-time) are stored in memory areas referenced by a handle. This makes it possible to relocate the allocated memory areas at run-time, thus avoiding the long-term allocation problems which occur when using pointers. All widgets are thus referenced by handles.

Determine the type of a widget

There is no function like `WM_GetWidgetType()` to determine the type of a widget. The type can be determined only by comparing the callback function of a specific widget with the public callback functions of the widget API. This works fine if the callback function is not overwritten. The following shows a short example how to determine the type of a widget. In case of overwritten callback functions the method should be adapted:

```
WM_CALLBACK * pCb = WM_GetCallback(hWidget);
if        (pCb == BUTTON_Callback) {
  /* Widget is a button */
} else if (pCb == DROPDOWN_Callback) {
  /* Widget is a dropdown */
} else if (pCb == LISTBOX_Callback) {
  /* Widget is a listbox */
} else if (...) {
  ...
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG


17.2 Configuration options

Type	Macro	Default	Description
B	WIDGET_USE_PARENT_EFFECT	0	If set to 1, each 'child widget' of a widget, has the same effect as the parent widget. If for example a listbox needs to create a scrollbar, the new scrollbar has the same effect as the listbox.
B	WIDGET_USE_SCHEME_LARGE	0	If set to 1, the default appearance of the widgets is large sized. That means that all widgets which show text are configured to use large sized default fonts.
B	WIDGET_USE_SCHEME_MEDIUM	0	If set to 1, the default appearance of the widgets is medium sized. That means that all widgets which show text are configured to use medium sized default fonts.
B	WIDGET_USE_SCHEME_SMALL	1	If set to 1, the default appearance of the widgets is small sized. That means that all widgets which show text are configured to use small sized default fonts.
B	WIDGET_USE_FLEX_SKIN	0	If set to 1, widgets are drawn using the Flex Skin by default. For more information about Skinning, please refer to the chapter 'Skinning'.


WIDGET_USE_SCHEME...

The table below shows the default appearance of the widget schemes:

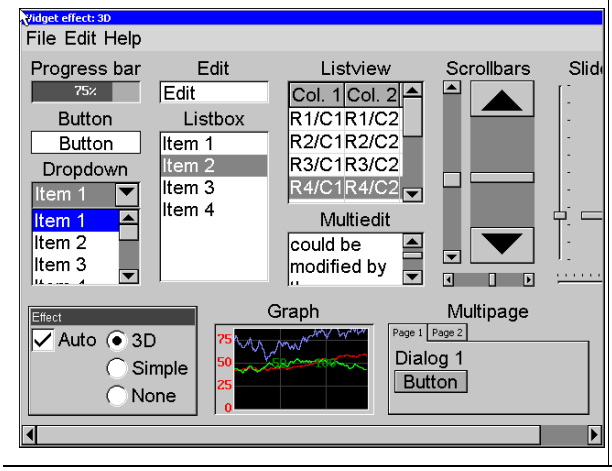
WIDGET_USE_SCHEME_LARGE



WIDGET_USE_SCHEME_MEDIUM

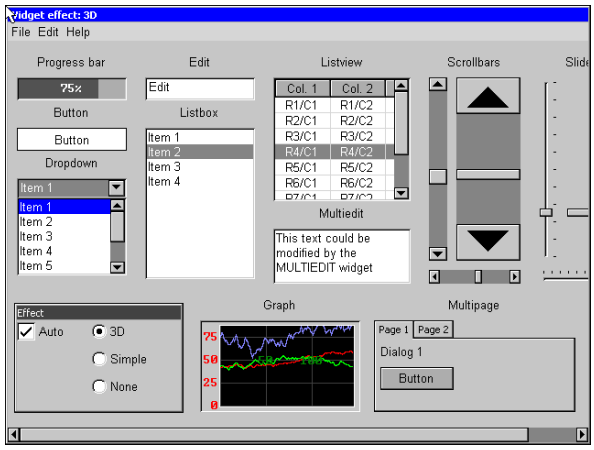

WIDGET_USE_SCHEME_SMALL

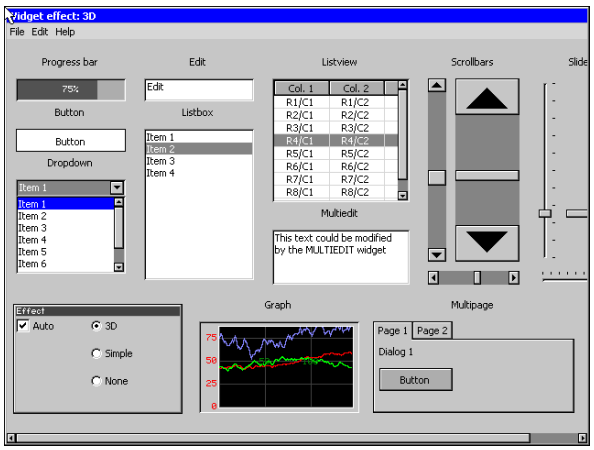

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.3 General widget API

17.3.1 WM routines used for widgets

Since widgets are essentially windows, they are compatible with any of the window manager API routines. The handle of the widget is used as the hWin parameter and the widget is treated like any other window. The WM functions most commonly used with widgets are listed as follows:

Routine	Description
WM_DeleteWindow()	Deletes a window.
WM_DisableMemdev()	Disables usage of memory devices for redrawing.
WM_EnableMemdev()	Enables usage of memory devices for redrawing.
WM_InvalidateWindow()	Invalidates a window.
WM_Paint()	Draws or redraws a window immediately.

For a complete list of WM-related functions, refer to the chapter "The Window Manager (WM)" on page 289.

17.3.2 Common routines

The table below lists available widget-related routines in alphabetical order. These functions are common to all widgets, and are listed here in order to avoid repetition. Detailed descriptions of the routines follow. The additional member functions available for each widget may be found in later sections.

Routine	Description
<WIDGET>_Callback()	Default callback function.
<WIDGET>_CreateIndirect()	Used for automatic creation in dialog boxes.
<WIDGET>_CreateUser()	Creates a widget using extra bytes as user data.
<WIDGET>_GetUserData()	Retrieves the data set with <WIDGET>_SetUserData.
<WIDGET>_SetUserData()	Sets the extra data of a widget.
WIDGET_GetDefaultEffect()	Returns the default effect used for widgets.
WIDGET_SetDefaultEffect()	Sets the default effect used for widgets.
WIDGET_SetEffect()	Sets the effect used for a given widget.

<WIDGET>_Callback()

Description

Default callback function of the widgets to be used from within overwritten callback function.

Prototype

```
void <WIDGET>_Callback(WM_MESSAGE * pMsg);
```

Parameter	Description
pMsg	Pointer to a data structure of type WM_MESSAGE.

Additional information

A default callback function of a widget should not be called directly. It is only to be used from within an overwritten callback function.
For details about the WM_MESSAGE data structure, refer to "Messages" on page 295.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

<WIDGET>_CreateIndirect()

Description

Creates a widget to be used in dialog boxes.

Prototype

```
<WIDGET>_Handle <WIDGET>_CreateIndirect(
  const GUI_WIDGET_CREATE_INFO * pCreateInfo,
  WM_HWIN                        hParent,
  int                            x0,
  int                            y0,
  WM_CALLBACK                  * cb
);
```

Parameter	Description
pCreateInfo	Pointer to a GUI_WIDGET_CREATE_INFO structure (see below).
hParent	Handle of parent window.
x0	Leftmost pixel of the widget (in parent coordinates).
y0	Topmost pixel of the widget (in parent coordinates).
cb	Pointer to a callback function.

Additional information

Any widget may be created indirectly by using the appropriate prefix. For example: BUTTON_CreateIndirect() to indirectly create a button widget, CHECKBOX_CreateIndirect() to indirectly create a check box widget, and so on.

A widget only needs to be created indirectly if it is to be included in a dialog box. Otherwise, it may be created directly by using the <WIDGET>_Create() functions. See the chapter "Dialogs" on page 665 for more information about dialog boxes.

Resource table

The GUI_WIDGET_CREATE_INFO data structure is defined in the dialog resource table as follows:

```
typedef struct {
  GUI_WIDGET_CREATE_FUNC * pfCreateIndirect; // Create function
  const char * pName;                        // Text (not used for all widgets)
  I16 Id;                                    // Window ID of the widget
  I16 x0, y0, xSize, ySize;                  // Size and position of the widget
  I16 Flags;                                 // Widget-specific flags (or 0)
  I32 Para;                                  // Widget-specific parameter (or 0)
  U32 NumExtraBytes;                         // Number of extra bytes usable
                                             // with <WIDGET>_SetUserData &
                                             //      <WIDGET>_GetUserData
} GUI_WIDGET_CREATE_INFO;
```

Widget flags and parameters are optional, and vary depending on the type of widget. The available flags and parameters for each widget (if any) will be listed under the appropriate section later in this chapter.

<WIDGET>_CreateUser()

Description

Creates a widget using extra bytes as user data. This function is similar to the <WIDGET>_CreateEx()-function of the appropriate widget in every case except the additional parameter NumExtraBytes.

Prototype

```
<WIDGET>_Handle <WIDGET>_CreateUser(int x0, int y0, ..., int Id,
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                                    int NumExtraBytes);
```

Parameter	Description
NumBytes	Number of extra bytes to be allocated

Return value

Handle of the created widget; 0 if the function fails.

Additional information

For more information about the other parameters the appropriate <WIDGET>_CreateEx()-functions can be referred to.

<WIDGET>_GetUserData()

Description

Retrieves the data set with <WIDGET>_SetUserData.

Prototype

```
int <WIDGET>_GetUserData(<WIDGET>_Handle   hObj,
                         void            * pDest,
                         int               NumBytes)
```

Parameter	Description
hObj	Handle of the widget
pDest	Pointer to buffer
NumBytes	Number of bytes to read

Return value

Number of bytes read

Additional information

The maximum number of bytes returned by this function is the number of extra bytes specified when creating the widget using <WIDGET>_CreateUser() or <WIDGET>_CreateIndirect().

<WIDGET>_SetUserData()

Description

Sets the extra data of a widget.

Prototype

```
int <WIDGET>_GetUser(<WIDGET>_Handle   hObj,
                     void            * pDest,
                     int               NumBytes)
```

Parameter	Description
hObj	Handle of the widget
pDest	Pointer to buffer
NumBytes	Number of bytes to write

Return value

Number of bytes written

Additional information

The maximum number of bytes used to store user data is the number of extra bytes specified when creating the widget using <WIDGET>_CreateUser() or <WIDGET>_CreateIndirect().

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WIDGET_GetDefaultEffect()

Description

Returns the default effect used for widgets.

Prototype

```
const WIDGET_EFFECT * WIDGET_GetDefaultEffect(void);
```

Return value

The result of the function is a pointer to a `WIDGET_EFFECT` structure.

Additional information

For more information, refer to “WIDGET_SetDefaultEffect()” on page 353.

WIDGET_SetDefaultEffect()

Description

Sets the default effect used for widgets.

Prototype

```
const WIDGET_EFFECT * WIDGET_SetDefaultEffect(const WIDGET_EFFECT* pEffect);
```

Parameter	Description
`pEffect`	Pointer to a WIDGET_EFFECT structure. See table below.




Permitted values for element `pEffect`	
`&WIDGET_Effect_3D`	Sets the default effect to ’3D’.
`&WIDGET_Effect_None`	Sets the default effect to ’None’.
`&WIDGET_Effect_Simple`	Sets the default effect to ’Simple’.

Return value

Previous used default effect.

Additional information

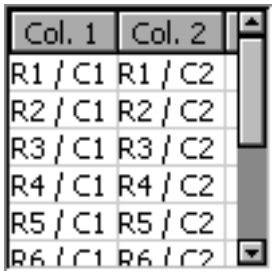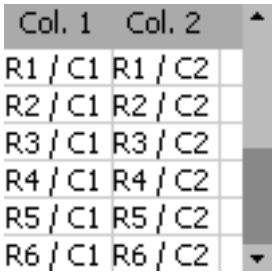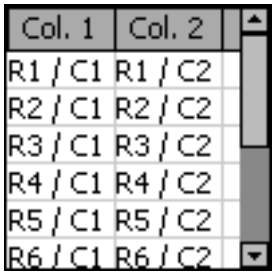The following table shows the appearance of some widgets in dependence of the used effect:

’3D’	’None’	’Simple’
		
		
		

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WIDGET_SetEffect()

Description

Sets the effect for the given widget.

Prototype

```
void WIDGET_SetEffect(WM_HWIN hObj, const WIDGET_EFFECT* pEffect);
```

Parameter	Description
hObj	Handle of widget.
pEffect	Pointer to a WIDGET_EFFECT structure. For details, refer to "WIDGET_SetDefaultEffect()" on page 353.

17.3.3 User drawn widgets

Some widgets supports owner drawing, for example the LISTBOX widget. If the user draw mode of a widget has been activated a application-defined function of type WIDGET_DRAW_ITEM_FUNC will be called to draw the widget (item). The prototype of an application-defined owner draw function should be defined as follows:

Prototype

```
int WIDGET_DRAW_ITEM_FUNC(const WIDGET_ITEM_DRAW_INFO * pDrawItemInfo)
```

Parameter	Description
pDrawItemInfo	Pointer to a WIDGET_ITEM_DRAW_INFO structure.

Elements of WIDGET_ITEM_DRAW_INFO

Data type	Element	Description
WM_HWIN	hWin	Handle to the widget.
int	Cmd	(see table below)
int	ItemIndex	Zero based index of item to be drawn.
int	x0	X position in window coordinates to be used to draw the item.
int	y0	Y position in window coordinates to be used to draw the item.

Permitted values for element Cmd	
WIDGET_ITEM_GET_XSIZE	The function returns the x-size (width) in pixels of the given item.
WIDGET_ITEM_GET_YSIZE	The function returns the y-size (height) in pixels of the given item.
WIDGET_ITEM_DRAW	The function draws the given item at the given position.
WIDGET_DRAW_BACKGROUND	The background of the widget should be drawn.
WIDGET_DRAW_OVERLAY	This command is send after all other drawing operations have been finished and enables the possibility to draw some overlaying items above the widget.

Return value

Depends on the given command.

Reaction to commands

The function has to react to the command given in the WIDGET_ITEM_DRAW_INFO structure. This can be done in one of 2 ways:

- By calling the appropriate default function supplied by the particular widget (for example, LISTBOX_OwnerDraw())
- By supplying code that reacts accordingly.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Commands

The commands listed below are supported and should be reacted to by the function. As explained above, the default owner draw function should be called for all not handled functions. This is can save code size (for example if the height is the same as the default height) and makes sure that your code stays compatible if in a future version of the software and add. command is introduced.

WIDGET_ITEM_GET_XSIZE

The X-size in pixels of the given item has to be returned.

WIDGET_ITEM_GET_YSIZE

The Y-size (height) in pixels of the given item has to be returned.

WIDGET_ITEM_DRAW

The given item has to be drawn. x0 and y0 of the `WIDGET_ITEM_DRAW_INFO` structure specify the position of the item in window coordinates. The item has to fill its entire rectangle; the rectangle is defined by the starting position x0, y0 supplied to the function and the sizes returned by the function as reaction to the commands `WIDGET_ITEM_GET_YSIZE`, `WIDGET_ITEM_GET_XSIZE`. It may NOT leave a part of this rectangular area unpainted. It can not paint outside of this rectangular area because the clip rectangle has been set before the function call.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.4 BUTTON: Button widget

Button widgets are commonly used as the primary user interface element for touch-screens. If the button has the input focus, it also reacts on the keys GUI_KEY_SPACE and GUI_KEY_ENTER. Buttons may be displayed with text, as shown below, or with a bitmap.



All BUTTON-related routines are located in the file(s) BUTTON*.c, BUTTON.h. All identifiers are prefixed BUTTON.

Skinning...



...is available for this widget. The screenshot above shows the widget using the default skin. For details please refer to chapter 'Skinning'.

17.4.1 Configuration options

Type	Macro	Default	Description
N	BUTTON_3D_MOVE_X	1	Number of pixels that text/bitmap moves in horizontal direction in pressed state.
N	BUTTON_3D_MOVE_Y	1	Number of pixels that text/bitmap moves in vertical direction in pressed state.
N	BUTTON_ALIGN_DEFAULT	GUI_TA_HCENTER | GUI_TA_VCENTER	Alignment used to display the button text.
N	BUTTON_BKCOLOR0_DEFAULT	0xAAAAAA	Background color, unpressed state.
N	BUTTON_BKCOLOR1_DEFAULT	GUI_WHITE	Background color, pressed state.
N	BUTTON_FOCUSCOLOR_DEFAULT	GUI_BLACK	Default color for rendering the focus rectangle.
S	BUTTON_FONT_DEFAULT	&GUI_Font13_1	Font used for button text.
B	BUTTON_REACT_ON_LEVEL	0	See description below.
N	BUTTON_TEXTCOLOR0_DEFAULT	GUI_BLACK	Text color, unpressed state.
N	BUTTON_TEXTCOLOR1_DEFAULT	GUI_BLACK	Text color, pressed state.

BUTTON_REACT_ON_LEVEL

A button per default reacts on each touch message. For example if touching a dialog with a pointer input device (PID) not exactly on the button and then move the PID in pressed state over the button, the button changes from unpressed to pressed state. This behavior can be useful if using a touch panel.
If a button should only react on level changes, BUTTON_REACT_ON_LEVEL should be set to 1. Then a button changes the state only if the PID is pressed and released on the button. If then moving a PID in pressed state over the button it does not react. This behavior can be useful if dialogs should react on WM_NOTIFICATION_CLICKED.
Example (BUTTON_REACT_ON_LEVEL = 0): One dialog (dialog 2) is shown over an other dialog (dialog 1). The close button of dialog 2 is on the same position as a button of dialog 1. Now the close button of dialog 2 is pressed, which removes dialog 2. The PID now is in pressed state. If now moving the button before releasing it the button of dialog 1 would change from unpressed to pressed state.
This unwanted behavior can be avoid by setting BUTTON_REACT_ON_LEVEL to 1.
Alternatively to this configuration option the function BUTTON_SetReactOnLevel() can be used.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

BUTTON_BKCOLOR0_DEFAULT, BUTTON_BKCOLOR1_DEFAULT

The default for the button is to use a white background in the pressed state. This has been done purposely because it makes it very obvious that the button is pressed, on any kind of display. If you want the background color of the button to be the same in both its pressed and unpressed states, change BUTTON_BKCOLOR1_DEFAULT to BUTTON_BKCOLOR0_DEFAULT.

17.4.2 Notification codes

The following events are sent from a button widget to its parent window as part of a WM_NOTIFY_PARENT message:

Message	Description
WM_NOTIFICATION_CLICKED	Button has been clicked.
WM_NOTIFICATION_RELEASED	Button has been released.
WM_NOTIFICATION_MOVED_OUT	Button has been clicked and pointer has been moved out off of the button without releasing.

17.4.3 Keyboard reaction

The widget reacts to the following keys if it has the input focus:

Key	Reaction
GUI_KEY_ENTER	If the keys is pressed, the button reacts as it has been pressed and immediately released.
GUI_KEY_SPACE	If the keys is pressed, the button state changes to pressed. If the keys is released, the button state changes to unpressed.

17.4.4 BUTTON API

The table below lists the available emWin BUTTON-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
BUTTON_Create()	Creates a BUTTON widget. (Obsolete)
BUTTON_CreateAsChild()	Creates a BUTTON widget as a child window. (Obsolete)
BUTTON_CreateEx()	Creates a BUTTON widget.
BUTTON_CreateIndirect()	Creates a BUTTON widget from a resource table entry.
BUTTON_CreateUser()	Creates a BUTTON widget using extra bytes as user data.
BUTTON_GetBitmap()	Returns the pointer to the BUTTON bitmap.
BUTTON_GetBkColor()	Returns the background color of the BUTTON
BUTTON_GetDefaultBkColor()	Returns the default background color for BUTTON widgets.
BUTTON_GetDefaultFont()	Returns the default font for BUTTON widgets.
BUTTON_GetDefaultTextAlign()	Returns the default text alignment for BUTTON widgets.
BUTTON_GetDefaultTextColor()	Returns the default text color for BUTTON widgets.
BUTTON_GetFont()	Returns the pointer to the font of the BUTTON widget.
BUTTON_GetText()	Retrieves the text of a specified BUTTON.
BUTTON_GetTextAlign()	Returns the alignment of the BUTTON text.
BUTTON_GetTextColor()	Returns the text color of the specified BUTTON.
BUTTON_GetUserData()	Retrieves the data set with BUTTON_SetUserData().
BUTTON_IsPressed()	Returns if a button is pressed or not.
BUTTON_SetBitmap()	Sets the bitmap used when displaying the BUTTON.
BUTTON_SetBitmapEx()	Sets the bitmap used when displaying the BUTTON.
BUTTON_SetBkColor()	Sets the background color of the button.
BUTTON_SetBMP()	Sets the bitmap used when displaying the BUTTON.
BUTTON_SetBMPEx()	Sets the bitmap used when displaying the BUTTON.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
BUTTON_SetDefaultBkColor()	Sets the default background color for BUTTON widgets.
BUTTON_SetDefaultFont()	Sets the default font for BUTTON widgets.
BUTTON_SetDefaultTextAlign()	Sets the default text alignment for BUTTON widgets.
BUTTON_SetDefaultTextColor()	Sets the default text color for BUTTON widgets.
BUTTON_SetFocussable()	Sets the ability to receive the input focus.
BUTTON_SetFont()	Selects the font for the text.
BUTTON_SetPressed()	Sets the state of the button to pressed or unpressed.
BUTTON_SetReactOnLevel()	Sets all BUTTON widgets to react on level.
BUTTON_SetStreamedBitmap()	Sets the bitmap used when displaying the BUTTON widget.
BUTTON_SetStreamedBitmapEx()	Sets the bitmap used when displaying the BUTTON widget.
BUTTON_SetText()	Sets the text.
BUTTON_SetTextAlign()	Sets the alignment of the BUTTON text.
BUTTON_SetTextColor()	Set the color(s) for the text.
BUTTON_SetTextOffset()	Adjusts the position of the button text considering the current text alignment setting.
BUTTON_SetUserData()	Sets the extra data of a BUTTON widget.

BUTTON_Create()

(Obsolete, BUTTON_CreateEx() should be used instead)

Description

Creates a BUTTON widget of a specified size at a specified location.

Prototype

```
BUTTON_Handle BUTTON_Create(int x0,    int y0,
                            int xsize, int ysize,
                            int Id,    int Flags);
```

Parameter	Description
x0	Leftmost pixel of the button (in parent coordinates).
y0	Topmost pixel of the button (in parent coordinates).
xsize	Horizontal size of the button (in pixels).
ysize	Vertical size of the button (in pixels).
Id	ID to be returned when button is pressed.
Flags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).

Return value

Handle of the created BUTTON widget; 0 if the function fails.

BUTTON_CreateAsChild()

(Obsolete, BUTTON_CreateEx should be used instead)

Description

Creates a BUTTON widget as a child window.

Prototype

```
BUTTON_Handle BUTTON_CreateAsChild(int     x0,      int y0,
                                   int     xsize,   int ysize,
                                   WM_HWIN hParent, int Id,
                                   int     Flags);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Parameter	Description
x0	X-position of the button relative to the parent window.
y0	Y-position of the button relative to the parent window.
xsize	Horizontal size of the button (in pixels).
ysize	Vertical size of the button (in pixels).
hParent	Handle of parent window. If 0, the BUTTON widget will be a child of the desktop (top-level window).
Id	ID to be returned when button is pressed.
Flags	Window create flags (see BUTTON_Create()).

Return value

Handle of the created BUTTON widget; 0 if the function fails.

BUTTON_CreateEx()

Description

Creates a BUTTON widget of a specified size at a specified location.

Prototype

```
BUTTON_Handle BUTTON_CreateEx(int     x0,      int y0,
                              int     xsize,   int ysize,
                              WM_HWIN hParent, int WinFlags,
                              int     ExFlags, int Id);
```

Parameter	Description
x0	Leftmost pixel of the widget (in parent coordinates).
y0	Topmost pixel of the widget (in parent coordinates).
xsize	Horizontal size of the widget (in pixels).
ysize	Vertical size of the widget (in pixels).
hParent	Handle of parent window. If 0, the BUTTON widget will be a child of the desktop (top-level window).
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
ExFlags	Not used yet, reserved for future use.
Id	Window ID of the widget.

Return value

Handle of the created BUTTON widget; 0 if the function fails.

Additional information

If the possibility of storing user data is a matter the function BUTTON_CreateUser() should be used instead.

BUTTON_CreateIndirect()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateIndirect(). The elements Flags and Para of the resource passed as parameter are not used.

BUTTON_CreateUser()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateUser(). For a detailed description of the parameters the function BUTTON_CreateEx() can be referred to.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

BUTTON_GetBitmap()

Description

Returns a pointer to the optional BUTTON bitmap.

Prototype

```
const GUI_BITMAP * BUTTON_GetBitmap(BUTTON_Handle hObj,
                                    unsigned int  Index);
```

Parameter	Description
hObj	Handle of widget.
Index	Index of desired bitmap (see table below).

Permitted values for parameter Index	
BUTTON_BI_DISABLED	Bitmap for disabled state.
BUTTON_BI_PRESSED	Bitmap for pressed state.
BUTTON_BI_UNPRESSED	Bitmap for unpressed state.

Return value

Pointer to the bitmap, 0 if no bitmap exist.

Additional information

For details about how to set a button bitmap, refer to "BUTTON_SetBitmap()" on page 363 and "BUTTON_SetBitmapEx()" on page 363.

BUTTON_GetBkColor()

Description

Returns the background color of the given BUTTON widget.

Prototype

```
GUI_COLOR BUTTON_GetBkColor(BUTTON_Handle hObj, unsigned int Index);
```

Parameter	Description
hObj	Handle of widget.
Index	Index for color (see table below).

Permitted values for parameter Index	
BUTTON_CI_DISABLED	Color for disabled state.
BUTTON_CI_PRESSED	Color for pressed state.
BUTTON_CI_UNPRESSED	Color for unpressed state.

Return value

Background color of the given BUTTON widget

BUTTON_GetDefaultBkColor()

Description

Returns the default background color for BUTTON widgets.

Prototype

```
GUI_COLOR BUTTON_GetDefaultBkColor(unsigned Index);
```

Parameter	Description
Index	Index for color (see table below).

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for parameter Index	
BUTTON_CI_DISABLED	Color for disabled state.
BUTTON_CI_PRESSED	Color for pressed state.
BUTTON_CI_UNPRESSED	Color for unpressed state.

Return value

Default background color for BUTTON widgets

BUTTON_GetDefaultFont()

Description

Returns the pointer to the font used to display the text of BUTTON widgets.

Prototype

```
const GUI_FONT * BUTTON_GetDefaultFont(void);
```

Return value

Pointer to the font used to display the text of BUTTON widgets.

BUTTON_GetDefaultTextAlign()

Description

Returns the default text alignment used to display the text of BUTTON widgets.

Prototype

```
int BUTTON_GetDefaultTextAlign(void);
```

Return value

Default text alignment used to display the text of BUTTON widgets.

BUTTON_GetDefaultTextColor()

Description

Returns the default text color used to display the text of BUTTON widgets.

Prototype

```
GUI_COLOR BUTTON_GetDefaultTextColor(unsigned Index);
```

Parameter	Description
Index	Index for color (see table below).

Permitted values for parameter Index	
BUTTON_CI_DISABLED	Color for disabled state.
BUTTON_CI_PRESSED	Color for pressed state.
BUTTON_CI_UNPRESSED	Color for unpressed state.

Return value

Default text color used to display the text of BUTTON widgets.

BUTTON_GetFont()

Description

Returns a pointer to the font used to display the text of the given BUTTON widget

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
const GUI_FONT * BUTTON_GetFont(BUTTON_Handle hObj);
```

Parameter	Description
hObj	Handle of widget.

Return value

Pointer to the font used to display the text of the given BUTTON widget.

BUTTON_GetText()

Description

Retrieves the text of the specified BUTTON widget.

Prototype

```
void BUTTON_GetText(BUTTON_Handle hObj, char * pBuffer, int MaxLen);
```

Parameter	Description
hObj	Handle of widget.
pBuffer	Pointer to buffer.
MaxLen	Size of buffer.

BUTTON_GetTextAlign()

Description

Returns the alignment of the BUTTON text.

Prototype

```
int BUTTON_GetTextAlign(BUTTON_Handle hObj);
```

Parameter	Description
hObj	Handle of the BUTTON widget.

Return value

Alignment of the BUTTON text.

BUTTON_GetTextColor()

Description

Returns the text color of the given BUTTON widget.

Prototype

```
GUI_COLOR BUTTON_GetTextColor(BUTTON_Handle hObj, unsigned int Index);
```

Parameter	Description
hObj	Handle of widget.
Index	Index for color (see table below).

Permitted values for parameter Index	
BUTTON_CI_DISABLED	Color for disabled state.
BUTTON_CI_PRESSED	Color for pressed state.
BUTTON_CI_UNPRESSED	Color for unpressed state.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

Text color of the given BUTTON widget.

BUTTON_GetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_GetUserData().

BUTTON_IsPressed()

Description

Returns if the BUTTON is pressed or not.

Prototype

```
unsigned BUTTON_IsPressed(BUTTON_Handle hObj);
```

Parameter	Description
hObj	Handle of widget.

Return value

1 if the button is pressed, 0 if not.

BUTTON_SetBitmap()

Description

Sets the bitmap(s) to be used when displaying a specified button.

Prototype

```
void BUTTON_SetBitmap(BUTTON_Handle      hObj,
                      unsigned int       Index,
                      const GUI_BITMAP * pBitmap);
```

Parameter	Description
hObj	Handle of button.
Index	Index for bitmap (see table below).
pBitmap	Pointer to the bitmap structure.

Permitted values for parameter Index	
BUTTON_BI_DISABLED	Bitmap for disabled state.
BUTTON_BI_PRESSED	Bitmap for pressed state.
BUTTON_BI_UNPRESSED	Bitmap for unpressed state.

Additional information

If only a bitmap for the unpressed state is set the button will show it also when it is pressed or disabled.

BUTTON_SetBitmapEx()

Description

Sets the bitmap(s) to be used when displaying a specified button.

Prototype

```
void BUTTON_SetBitmapEx(BUTTON_Handle      hObj,
                        unsigned int       Index,
                        const GUI_BITMAP * pBitmap,
                        int                x,
                        int                y);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Parameter	Description
hObj	Handle of button.
Index	Index for bitmap (see BUTTON_SetBitmap()).
pBitmap	Pointer to the bitmap structure.
x	X-position for the bitmap relative to the button.
y	Y-position for the bitmap relative to the button.

Additional information

If only a bitmap for the unpressed state is set the button will show it also when it is pressed or disabled.

BUTTON_SetBkColor()

Description

Sets the button background color.

Prototype

```
void BUTTON_SetBkColor(BUTTON_Handle hObj,   unsigned int Index,
                       GUI_COLOR     Color);
```

Parameter	Description
hObj	Handle of button.
Index	Index for color (see table below).
Color	Background color to be set.

Permitted values for parameter Index	
BUTTON_CI_DISABLED	Sets the color to be used when button is disabled.
BUTTON_CI_PRESSED	Sets the color to be used when button is pressed.
BUTTON_CI_UNPRESSED	Sets the color to be used when button is unpressed.

BUTTON_SetBMP()

Description

Sets the bitmap(s) to be used when displaying a specified button.

Prototype

```
void BUTTON_SetBMP(BUTTON_Handle hObj, unsigned int Index,
                   const void * pBitmap);
```

Parameter	Description
hObj	Handle of widget.
Index	Index for bitmap (see table below).
pBitmap	Pointer to bitmap file data

Permitted values for parameter Index	
BUTTON_BI_DISABLED	Sets the bitmap to be used when button is disabled.
BUTTON_BI_PRESSED	Sets the bitmap to be used when button is pressed.
BUTTON_BI_UNPRESSED	Sets the bitmap to be used when button is unpressed.

Additional information

If only a bitmap for the unpressed state is set the button will show it also when it is pressed or disabled.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

For additional information's regarding bitmap files, refer to "BMP file support" on page 142.

BUTTON_SetBMPEx()

Description

Sets the bitmap(s) to be used when displaying a specified button.

Prototype

```
void BUTTON_SetBMPEx(BUTTON_Handle   hObj,    unsigned int Index,
                     const void    * pBitmap, int          x,
                     int             y);
```

Parameter	Description
hObj	Handle of widget.
Index	Index for bitmap (see BUTTON_SetBitmap()).
pBitmap	Pointer to bitmap file data
x	X-position for the bitmap relative to the button.
y	Y-position for the bitmap relative to the button.

Additional information

If only a bitmap for the unpressed state is set the button will show it also when it is pressed or disabled.
For additional informations regarding bitmap files, refer to "BMP file support" on page 142.

BUTTON_SetDefaultBkColor()

Description

Sets the default background color used for BUTTON widgets.

Prototype

```
void BUTTON_SetDefaultBkColor(GUI_COLOR Color, unsigned Index);
```

Parameter	Description
Color	Color to be used.
Index	Index for color (see table below).

Permitted values for parameter Index	
BUTTON_CI_DISABLED	Color for disabled state.
BUTTON_CI_PRESSED	Color for pressed state.
BUTTON_CI_UNPRESSED	Color for unpressed state.

BUTTON_SetDefaultFocusColor()

Description

Sets the default focus rectangle color for BUTTON widgets.

Prototype

```
GUI_COLOR BUTTON_SetDefaultFocusColor(GUI_COLOR Color);
```

Parameter	Description
Color	Default color to be used for BUTTON widgets.

Return value

Previous default focus rectangle color.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

For more information, refer to "BUTTON_SetFocusColor()" on page 366.

BUTTON_SetDefaultFont()

Description

Sets a pointer to a GUI_FONT structure used to display the text of BUTTON widgets.

Prototype

```
void BUTTON_SetDefaultFont(const GUI_FONT * pFont);
```

Parameter	Description
pFont	Pointer to GUI_FONT structure to be used.

BUTTON_SetDefaultTextAlign()

Description

Sets the default text alignment used to display the text of BUTTON widgets.

Prototype

```
void BUTTON_SetDefaultTextAlign(int Align);
```

Parameter	Description
Align	Text alignment to be used. For details, refer to "GUI_SetTextAlign()" on page 82.

BUTTON_SetDefaultTextColor()

Description

Sets the default text color used to display the text of BUTTON widgets.

Prototype

```
void BUTTON_SetDefaultTextColor(GUI_COLOR Color, unsigned Index);
```

Parameter	Description
Color	Default text color to be used.
Index	Index for color (see table below).

Permitted values for parameter Index	
BUTTON_CI_DISABLED	Color for disabled state.
BUTTON_CI_PRESSED	Color for pressed state.
BUTTON_CI_UNPRESSED	Color for unpressed state.

BUTTON_SetFocusColor()

Before	After
	

Description

Sets the color used to render the focus rectangle of the BUTTON widget.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
GUI_COLOR BUTTON_SetFocusColor(BUTTON_Handle hObj, GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of widget.
Color	Color to be used for the focus rectangle.

Return value

Previous color of the focus rectangle.

Additional information

The focus rectangle is only visible if the widget has the input focus.

BUTTON_SetFocussable()

Description

Sets the ability to receive the input focus.

Prototype

```
void BUTTON_SetFocussable(BUTTON_Handle hObj, int State);
```

Parameter	Description
hWin	Window handle.
State	see table below

Permitted values for parameter State	
1	Button can receive the input focus
0	Button can't receive the input focus

BUTTON_SetFont()

Description

Sets the button font.

Prototype

```
void BUTTON_SetFont(BUTTON_Handle hObj, const GUI_FONT* pFont);
```

Parameter	Description
hObj	Handle of button.
pFont	Pointer to the font.

Additional information

If no font is selected, BUTTON_FONT_DEF will be used.

BUTTON_SetPressed()

Description

Sets the state of the button to pressed or unpressed.

Prototype

```
void BUTTON_SetPressed(BUTTON_Handle hObj, int State);
```

Parameter	Description
hObj	Handle of button.
State	State, 1 for pressed, 0 for unpressed

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

BUTTON_SetReactOnLevel()

Description

Sets all BUTTON widgets to react on level.

Prototype

```
void BUTTON_SetReactOnLevel(void);
```

Additional Information

Alternatively to this function the configuration option BUTTON_REACT_ON_LEVEL can be used.

BUTTON_SetStreamedBitmap()

Description

Sets the streamed bitmap(s) to be used when displaying a specified button object.

Prototype

```
void BUTTON_SetStreamedBitmap(BUTTON_Handle             hObj,
                              unsigned int              Index,
                              const GUI_BITMAP_STREAM * pBitmap);
```

Parameter	Description
hObj	Handle of button.
Index	Index for bitmap (see BUTTON_SetBitmap()).
pBitmap	Pointer to a bitmap stream.

Additional information

For details about streamed bitmaps, refer to "GUI_DrawStreamedBitmap()" on page 118.

BUTTON_SetStreamedBitmapEx()

Description

Sets the streamed bitmap(s) to be used when displaying a specified button object.

Prototype

```
void BUTTON_SetStreamedBitmapEx(BUTTON_Handle             hObj,
                                unsigned int              Index,
                                const GUI_BITMAP_STREAM * pBitmap,
                                int                       x,
                                int                       y);
```

Parameter	Description
hObj	Handle of button.
Index	Index for bitmap (see BUTTON_SetBitmap()).
pBitmap	Pointer to a bitmap stream.
x	X-position for the bitmap relative to the button.
y	Y-position for the bitmap relative to the button.

Additional information

For details about streamed bitmaps, refer to "GUI_DrawStreamedBitmap()" on page 118().

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

BUTTON_SetText()

Description

Sets the text to be displayed on the button.

Prototype

```
void BUTTON_SetText(BUTTON_Handle hObj, const char * s);
```

Parameter	Description
hObj	Handle of button.
s	Text to display.

BUTTON_SetTextAlign()

Description

Sets the alignment of the button text.

Prototype

```
void BUTTON_SetTextAlign(BUTTON_Handle hObj, int Align);
```

Parameter	Description
hObj	Handle of button.
Align	Text alignment to be set (see "GUI_SetTextAlign()" on page 82)

Additional information

The default value of the text alignment is `GUI_TA_HCENTER | GUI_TA_VCENTER`.

BUTTON_SetTextColor()

Description

Sets the button text color.

Prototype

```
void BUTTON_SetTextColor(BUTTON_Handle hObj, unsigned int Index,
                         GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of button.
Index	Index for text color (see `BUTTON_SetBkColor()`).
Color	Text color to be set.

BUTTON_SetTextOffset()

Description

Adjusts the position of the button text considering the current text alignment setting.

Prototype

```
void BUTTON_SetTextOffset(BUTTON_Handle hObj, int xPos, int yPos);
```

Parameter	Description
hObj	Handle of button.
xPos	Offset to be used for the x-axis. Default is 0.
yPos	Offset to be used for the y-axis. Default is 0.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

BUTTON_SetUserData()

Prototype explained at the beginning of the chapter as `<WIDGET>_SetUserData()`.


17.4.5 Examples

The `Sample` folder contains the following examples which show how the widget can be used:

- `WIDGET_ButtonSimple.c`
- `WIDGET_ButtonPhone.c`
- `WIDGET_ButtonRound.c`

Note that several other examples also make use of this widget and may also be helpful to get familiar with the widget.


Screenshot of WIDGET_ButtonSimple.c:

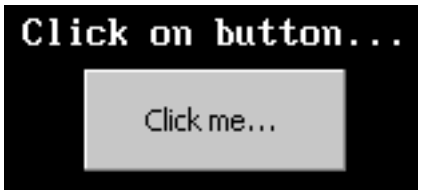

Screenshot of WIDGET_ButtonPhone.c:



Screenshot of WIDGET_ButtonRound.c:

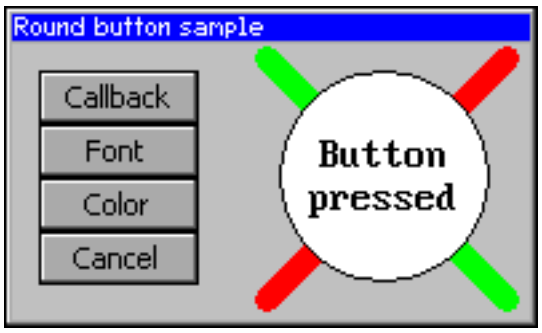

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.5 CHECKBOX: Checkbox widget

One of the most familiar widgets for selecting various choices is the check box. A check box may be checked or unchecked by the user, and any number of boxes may be checked at one time. If using a keyboard interface the state of a focused check box can be toggled by the <SPACE> key. A box will appear gray if it is disabled, as seen in the table below where each of the possible check box appearances are illustrated:

	Unchecked	Checked	Third state
Enabled			
Disabled			

All CHECKBOX-related routines are located in the file(s) `CHECKBOX*.c`, `CHECKBOX.h`. All identifiers are prefixed CHECKBOX.

Skinning...



...is available for this widget. The screenshot above shows the widget using the default skin. For details please refer to chapter ’Skinning’.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.5.1 Configuration options

Type	Macro	Default	Description
N	CHECKBOX_BKCOLOR_DEFAULT	0xC0C0C0	Default background color.
N	CHECKBOX_BKCOLOR0_DEFAULT	0x808080	Background color of the default image, disabled state.
N	CHECKBOX_BKCOLOR1_DEFAULT	GUI_WHITE	Background color of the default image, enabled state.
N	CHECKBOX_FGCOLOR0_DEFAULT	0x101010	Foreground color of the default image, disabled state.
N	CHECKBOX_FGCOLOR1_DEFAULT	GUI_BLACK	Foreground color of the default image, enabled state.
N	CHECKBOX_FOCUSCOLOR_DEFAULT	GUI_BLACK	Color used to render the focus rectangle.
S	CHECKBOX_FONT_DEFAULT	&GUI_Font13_1	Default font used to display the optional checkbox text.
S	CHECKBOX_IMAGE0_DEFAULT	(see table above)	Pointer to bitmap used to draw the widget if checked, disabled state.
S	CHECKBOX_IMAGE1_DEFAULT	(see table above)	Pointer to bitmap used to draw the widget if checked, enabled state.
N	CHECKBOX_SPACING_DEFAULT	4	Spacing used to display the optional checkbox text beside the box.
N	CHECKBOX_TEXTALIGN_DEFAULT	GUI_TA_LEFT | GUI_TA_VCENTER	Default alignment of the optional checkbox text.
N	CHECKBOX_TEXTCOLOR_DEFAULT	GUI_BLACK	Default color used to display the optional checkbox text.

17.5.2 Notification codes

The following events are sent from a check box widget to its parent window as part of a WM_NOTIFY_PARENT message:

Message	Description
WM_NOTIFICATION_CLICKED	Check box has been clicked.
WM_NOTIFICATION_RELEASED	Check box has been released.
WM_NOTIFICATION_MOVED_OUT	Check box has been clicked and pointer has been moved out off of the box without releasing.
WM_NOTIFICATION_VALUE_CHANGED	Status of check box has been changed.

17.5.3 Keyboard reaction

The widget reacts to the following keys if it has the input focus:

Key	Reaction
GUI_KEY_SPACE	Toggles the checked state of the widget.

17.5.4 CHECKBOX API

The table below lists the available emWin CHECKBOX-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
CHECKBOX_Check()	Set the check box state to checked. (Obsolete)
CHECKBOX_Create()	Creates a CHECKBOX widget. (Obsolete)
CHECKBOX_CreateEx()	Creates a CHECKBOX widget.
CHECKBOX_CreateIndirect()	Creates a CHECKBOX widget from resource table entry.
CHECKBOX_CreateUser()	Creates a CHECKBOX widget using extra bytes as user data.
CHECKBOX_GetDefaultBkColor()	Returns the default background color for CHECKBOX widgets.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
CHECKBOX_GetDefaultFont()	Returns the default font used to display the text of CHECKBOX widgets.
CHECKBOX_GetDefaultSpacing()	Returns the default spacing between the box and the text of CHECKBOX widgets.
CHECKBOX_GetDefaultTextAlign()	Returns the default alignment used to display the text of CHECKBOX widgets.
CHECKBOX_GetDefaultTextColor()	Returns the default text color used to display the text of CHECKBOX widgets.
CHECKBOX_GetState()	Returns the current state of the check box.
CHECKBOX_GetText()	Returns the text of the check box.
CHECKBOX_GetUserData()	Retrieves the data set with CHECKBOX_SetUserData().
CHECKBOX_IsChecked()	Return the current state (checked or not checked) of the check box.
CHECKBOX_SetBkColor()	Sets the background color of the given CHECKBOX widget.
CHECKBOX_SetBoxBkColor()	Sets the background color of the box area.
CHECKBOX_SetDefaultBkColor()	Sets the default background color for CHECKBOX widget.
CHECKBOX_SetDefaultFocusColor()	Sets the default focus rectangle color for CHECKBOX widgets.
CHECKBOX_SetDefaultFont()	Sets the default font used to display the text of CHECKBOX widgets.
CHECKBOX_SetDefaultImage()	Sets the default image to be shown when a box has been checked.
CHECKBOX_SetDefaultSpacing()	Sets the default spacing between the box and the text of CHECKBOX widgets.
CHECKBOX_SetDefaultTextAlign()	Sets the default alignment used to display the check box text.
CHECKBOX_SetDefaultTextColor()	Sets the default text color used to display the text of CHECKBOX widgets.
CHECKBOX_SetFocusColor()	Sets the color of the focus rectangle.
CHECKBOX_SetFont()	Sets the checkbox font.
CHECKBOX_SetImage()	Sets the image to be shown when box has been checked.
CHECKBOX_SetNumStates()	Sets the number of possible states of the check box (2 or 3).
CHECKBOX_SetSpacing()	Sets the spacing between the box and the check box text.
CHECKBOX_SetState()	Sets the state of the CHECKBOX widget.
CHECKBOX_SetText()	Sets the text of the CHECKBOX widget.
CHECKBOX_SetTextAlign()	Sets the alignment used to display the text of the CHECKBOX widget.
CHECKBOX_SetTextColor()	Sets the color used to display the text of the CHECKBOX widget.
CHECKBOX_SetUserData()	Sets the extra data of a CHECKBOX widget.
CHECKBOX_Uncheck()	Set the check box state to unchecked. (Obsolete)

CHECKBOX_Check()

(Obsolete, CHECKBOX_SetState() should be used instead)

Before	After
	

Description

Sets a specified check box to a checked state.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void CHECKBOX_Check(CHECKBOX_Handle hObj);
```

Parameter	Description
hObj	Handle of check box.

CHECKBOX_Create()

(Obsolete, CHECKBOX_CreateEx should be used instead)

Description

Creates a CHECKBOX widget of a specified size at a specified location.

Prototype

```
CHECKBOX_Handle CHECKBOX_Create(int     x0,      int y0,
                                int     xsize,   int ysize,
                                WM_HWIN hParent, int Id,
                                int     Flags);
```

Parameter	Description
x0	Leftmost pixel of the check box (in parent coordinates).
y0	Topmost pixel of the check box (in parent coordinates).
xsize	Horizontal size of the check box (in pixels).
ysize	Vertical size of the check box (in pixels).
hParent	Handle of parent window.
Id	ID to be returned.
Flags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).

Return value

Handle of the created CHECKBOX widget; 0 if the function fails.

Additional information

If the parameters xsize or ysize are 0 the size of the bitmap will be used as default size of the check box.

CHECKBOX_CreateEx()

Description

Creates a CHECKBOX widget of a specified size at a specified location.

Prototype

```
CHECKBOX_Handle CHECKBOX_CreateEx(int     x0,      int y0,
                                  int     xsize,   int ysize,
                                  WM_HWIN hParent, int WinFlags,
                                  int     ExFlags, int Id);
```

Parameter	Description
x0	Leftmost pixel of the widget (in parent coordinates).
y0	Topmost pixel of the widget (in parent coordinates).
xsize	Horizontal size of the widget (in pixels).
ysize	Vertical size of the widget (in pixels).
hParent	Handle of parent window. If 0, the new CHECKBOX widget will be a child of the desktop (top-level window).

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Parameter	Description
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
ExFlags	Not used yet, reserved for future use.
Id	Window ID of the widget.

Return value

Handle of the created CHECKBOX widget; 0 if the function fails.

Additional information

If the parameters xsize or ysize are 0 the size of the default check mark bitmap (11 x 11 pixels) plus the effect size will be used as default size of the check box. If the desired size of the check box is different to the default size it can be useful to set a user defined check mark image using the function CHECKBOX_SetImage().
If check box text should be shown with the widget the size should be large enough to show the box + text + spacing between box and text.

CHECKBOX_CreateIndirect()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateIndirect(). The elements Flags and Para of the resource passed as parameter are not used.

CHECKBOX_CreateUser()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateUser(). For a detailed description of the parameters the function CHECKBOX_CreateEx() can be referred to.

CHECKBOX_GetDefaultBkColor()

Description

Returns the default background color of new check box widgets.

Prototype

```
GUI_COLOR CHECKBOX_GetDefaultBkColor(void);
```

Return value

Default background color of new check box widgets.

Additional information

The background color returned by this function is not the background color shown in the box, but the background color of the rest of the widget.
For more information, refer to "CHECKBOX_SetBoxBkColor()" on page 378.

CHECKBOX_GetDefaultFont()

Description

Returns a pointer to a GUI_FONT structure used to display the check box text of new check box widgets.

Prototype

```
const GUI_FONT * CHECKBOX_GetDefaultFont(void);
```

Return value

Pointer to a GUI_FONT structure used to display the check box text of new check box widgets.

Additional information

For more information, refer to "CHECKBOX_SetFont()" on page 381.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

CHECKBOX_GetDefaultSpacing()

Description

Returns the default spacing between box and text used to display the check box text of new check box widgets.

Prototype

```
int CHECKBOX_GetDefaultSpacing(void);
```

Return value

Default spacing between box and text used to display the check box text of new check box widgets.

Additional information

For more information, refer to "CHECKBOX_SetSpacing()" on page 383.

CHECKBOX_GetDefaultTextAlign()

Description

Returns the default alignment used to display the check box text of new check box widgets.

Prototype

```
int CHECKBOX_GetDefaultAlign(void);
```

Return value

Default alignment used to display the check box text.

Additional information

For more information, refer to "CHECKBOX_SetTextAlign()" on page 384.

CHECKBOX_GetDefaultTextColor()

Description

Returns the default text color used to display the check box text of new check box widgets.

Prototype

```
GUI_COLOR CHECKBOX_GetDefaultTextColor(void);
```

Return value

Default text color used to display the check box text of new check box widgets.

Additional information

For more information, refer to "CHECKBOX_SetTextColor()" on page 384.

CHECKBOX_GetState()

Description

Returns the current state of the given check box.

Prototype

```
int CHECKBOX_GetState(CHECKBOX_Handle hObj);
```

Parameter	Description
hObj	Handle of widget.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

Current state of the given check box.

Additional information

Per default a check box can have 2 states, checked (1) and unchecked (0). With the function `CHECKBOX_SetNumStates()` the number of possible states can be increased to 3. If the check box is in the third state the function returns 2.
For more information, refer to “CHECKBOX_SetNumStates()” on page 382.

CHECKBOX_GetText()

Description

Returns the optional text of the given check box.

Prototype

```
int CHECKBOX_GetText(CHECKBOX_Handle hObj, char * pBuffer, int MaxLen);
```

Parameter	Description
hObj	Handle of widget.
pBuffer	Pointer to buffer to which the text will be copied.
MaxLen	Buffer size in bytes.

Return value

Length of the text copied into the buffer.

Additional information

If the check box contains no text the function returns 0 and the buffer remains unchanged.

CHECKBOX_GetUserData()

Prototype explained at the beginning of the chapter as `<WIDGET>_GetUserData()`.

CHECKBOX_IsChecked()

Description

Returns the current state (checked or not checked) of a specified CHECKBOX widget.

Prototype

```
int CHECKBOX_IsChecked(CHECKBOX_Handle hObj);
```

Parameter	Description
hObj	Handle of check box.

Return value

0: not checked
1: checked

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

CHECKBOX_SetBkColor()

Before	After
	

Description

Sets the background color used to display the background of the check box.

Prototype

```
void CHECKBOX_SetBkColor(CHECKBOX_Handle hObj, GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of widget.
Color	Color to be used to draw the background or GUI_INVALID_COLOR to work in transparent mode.

Additional information

If the check box should work in transparent mode GUI_INVALID_COLOR should be used.

CHECKBOX_SetBoxBkColor()

Before	After
	

Description

Sets the background color of the box area.

Prototype

```
GUI_COLOR CHECKBOX_SetBoxBkColor(CHECKBOX_Handle hObj,
                                 GUI_COLOR       Color,
                                 int             Index);
```

Parameter	Description
hObj	Handle of widget.
Color	Color to be used.
Index	(see table below)

Permitted values for parameter Index	
CHECKBOX_CI_DISABLED	Background color used for disabled state.
CHECKBOX_CI_ENABLED	Background color used for enabled state.

Return value

Previous background color.

Additional information

The color set by this function will only be visible, if the images used by the widget are transparent or no image is used. The default images of this widget are transparent.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

CHECKBOX_SetDefaultBkColor()

Description

Sets the default background color used for new check box widgets.

Prototype

```
void CHECKBOX_SetDefaultBkColor(GUI_COLOR Color);
```

Parameter	Description
Color	Color to be used, GUI_INVALID_COLOR for transparency.

Additional information

For more information, refer to "CHECKBOX_SetBkColor()" on page 378.

CHECKBOX_SetDefaultFocusColor()

Description

Sets the color used to render the focus rectangle of new check box widgets.

Prototype

```
GUI_COLOR CHECKBOX_SetDefaultFocusColor(GUI_COLOR Color);
```

Parameter	Description
Color	Color to be used.

Return value

Previous color used to render the focus rectangle.

Additional information

For mode information, refer to "CHECKBOX_SetFocusColor()" on page 381.

CHECKBOX_SetDefaultFont()

Description

Sets a pointer to a GUI_FONT structure used to display the check box text of new check box widgets.

Prototype

```
void CHECKBOX_SetDefaultFont(const GUI_FONT * pFont);
```

Parameter	Description
pFont	Pointer to GUI_FONT structure to be used.

Additional information

For more information, refer to "CHECKBOX_SetFont()" on page 381.

CHECKBOX_SetDefaultImage()

Description

Sets the images used for new check boxes to be shown if they has been checked.

Prototype

```
void CHECKBOX_SetDefaultImage(const GUI_BITMAP * pBitmap,
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                                unsigned int       Index);
```

Parameter	Description
pBitmap	Pointer to bitmap.
Index	(see table below)

Permitted values for parameter Index	
CHECKBOX_BI_INACTIV_UNCHECKED	Sets the bitmap displayed when the check box is unchecked and disabled.
CHECKBOX_BI_ACTIV_UNCHECKED	Sets the bitmap displayed when the check box is unchecked and enabled.
CHECKBOX_BI_INACTIV_CHECKED	Sets the bitmap displayed when the check box is checked and disabled.
CHECKBOX_BI_ACTIV_CHECKED	Sets the bitmap displayed when the check box is checked and enabled.
CHECKBOX_BI_INACTIV_3STATE	Sets the bitmap displayed when the check box is in the third state and disabled.
CHECKBOX_BI_ACTIV_3STATE	Sets the bitmap displayed when the check box is in the third state and enabled.

Additional information

The image has to fill the complete inner area of the check box.

CHECKBOX_SetDefaultSpacing()

Description

Sets the default spacing between box and text used to display the check box text of new check box widgets.

Prototype

```
void CHECKBOX_SetDefaultSpacing(int Spacing);
```

Parameter	Description
Spacing	Number of pixels between box and text used for new check box widgets.

Additional information

For more information, refer to “CHECKBOX_SetSpacing()” on page 383.

CHECKBOX_SetDefaultTextAlign()

Description

Sets the default alignment used to display the check box text of new check box widgets.

Prototype

```
void CHECKBOX_SetDefaultTextAlign(int Align);
```

Parameter	Description
Align	Text alignment used to display the text of new check box widgets.

Additional information

For more information, refer to “CHECKBOX_SetTextAlign()” on page 384.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

CHECKBOX_SetDefaultTextColor()

Description

Sets the default text color used to display the check box text of new check box widgets.

Prototype

```
void CHECKBOX_SetDefaultTextColor(GUI_COLOR Color);
```

Parameter	Description
Color	Color to be used.

Additional information

For more information, refer to “CHECKBOX_SetTextColor()” on page 384.

CHECKBOX_SetFocusColor()

Before	After
	

Description

Sets the color used to render the focus rectangle.

Prototype

```
GUI_COLOR CHECKBOX_SetFocusColor(CHECKBOX_Handle hObj, GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of widget.

Return value

Previous color of the focus rectangle.

Additional information

The focus rectangle is only visible if the widget has the input focus.

CHECKBOX_SetFont()

Description

Sets the checkbox font.

Prototype

```
void CHECKBOX_SetFont(CHECKBOX_Handle              hObj,
                      const GUI_FONT GUI_UNI_PTR * pFont);
```

Parameter	Description
hObj	Handle of checkbox.
pFont	Pointer to the font.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

CHECKBOX_SetImage()

Before	After
 	 

Description

Sets the images to be shown if the check box has been checked.

Prototype

```
void CHECKBOX_SetImage(CHECKBOX_Handle    hObj,
                       const GUI_BITMAP * pBitmap,
                       unsigned int       Index);
```

Parameter	Description
hObj	Handle of check box.
pBitmap	Pointer to bitmap.
Index	(see table shown under CHECKBOX_SetDefaultImage)

Additional information

The image has to fill the complete inner area of the check box. If using this function make sure, the size of the check box used to create the widget is large enough to show the bitmap and (optional) the text.

CHECKBOX_SetNumStates()

Description

This function sets the number of possible states of the given check box.

Prototype

```
void CHECKBOX_SetNumStates(CHECKBOX_Handle hObj, unsigned NumStates);
```

Parameter	Description
hObj	Handle of widget.
NumStates	Number of possible states of the given check box. Currently supported are 2 or 3 states.

Additional information

Per default a check box supports 2 states: checked (1) and unchecked (0). If the check box should support a third state the number of possible states can be increased to 3.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

CHECKBOX_SetSpacing()

Before	After
	

Description

Sets the number of pixels between box and text of a given check box widget.

Prototype

```
void CHECKBOX_SetSpacing(CHECKBOX_Handle hObj, unsigned Spacing);
```

Parameter	Description
hObj	Handle of widget.
Spacing	Number of pixels between box and text to be used.

Additional information

The default spacing is 4 pixels. The function `CHECKBOX_SetDefaultSpacing()` or the configuration macro `CHECKBOX_SPACING_DEFAULT` can be used to set the default value.

CHECKBOX_SetState()

Before	After
	

Description

Sets the new state of the given check box widget.

Prototype

```
void CHECKBOX_SetState(CHECKBOX_Handle hObj, unsigned State);
```

Parameter	Description
hObj	Handle of widget.
State	Zero based number of new state.

Permitted values for parameter State	
0	Unchecked
1	Checked
2	Third state

Additional information

The passed state should not be greater than the number of possible states set with `CHECKBOX_SetNumStates()` minus 1.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

CHECKBOX_SetText()

Before	After
	

Description

Sets the optional text shown beside the box.

Prototype

```
void CHECKBOX_SetText(CHECKBOX_Handle hObj, const char * pText);
```

Parameter	Description
hObj	Handle of widget.
pText	Pointer to text to be shown beside the box.

Additional information

Clicking on the text beside the box has the same effect as clicking into the box.

CHECKBOX_SetTextAlign()

Before	After
	

Description

Sets the alignment used to display the check box text beside the box.

Prototype

```
void CHECKBOX_SetTextAlign(CHECKBOX_Handle hObj, int Align);
```

Parameter	Description
hObj	Handle of widget.
Align	Desired text alignment.

Additional information

Per default the text alignment is `GUI_TA_LEFT | GUI_TA_VCENTER`. The function `CHECKBOX_SetDefaultTextAlign()` and the configuration macro `CHECKBOX_TEXTALIGN_DEFAULT` can be used to set a user defined default value.

CHECKBOX_SetTextColor()

Before	After
	

Description

Sets the color used to display the check box text.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void CHECKBOX_SetTextColor(CHECKBOX_Handle hObj, GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of widget.
Color	Desired color of check box text.

Additional information

Per default the text color of a check box text is GUI_BLACK. The function CHECKBOX_SetDefaultTextColor() and the configuration macro CHECKBOX_TEXTCOLOR_DEFAULT can be used to set a user defined default color.

CHECKBOX_SetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_SetUserData().

CHECKBOX_Uncheck()

(Obsolete, CHECKBOX_SetState() should be used instead)

Before	After
	

Description

Sets the state of a specified check box unchecked.

Prototype

```
void CHECKBOX_Uncheck(CHECKBOX_Handle hObj);
```

Parameter	Description
hObj	Handle of check box.

Additional information

This is the default setting for check boxes.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG


17.5.5 Example

The `Sample` folder contains the following example which shows how the widget can be used:

- `WIDGET_Checkbox.c`

Note that several other examples also make use of this widget and may also be helpful to get familiar with the widget.


Screenshot of WIDGET_Checkbox.c:

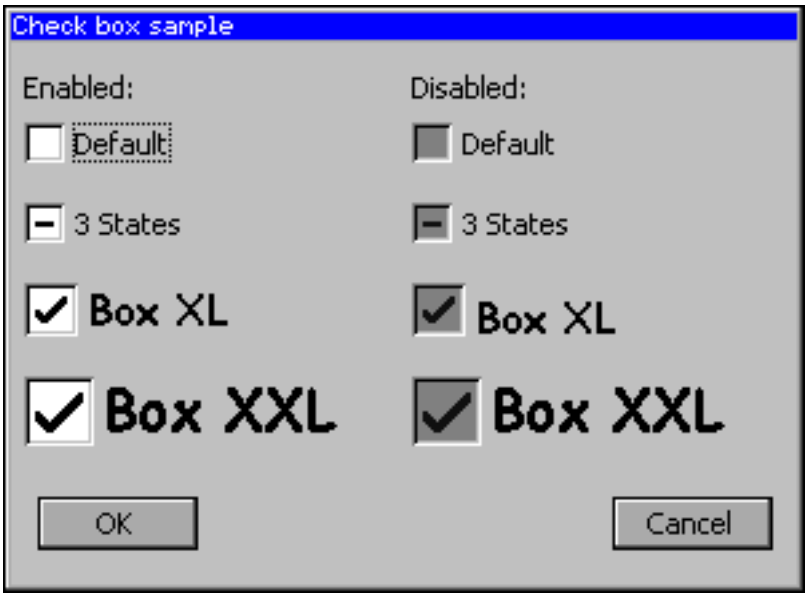

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG


17.6 DROPDOWN: Dropdown widget

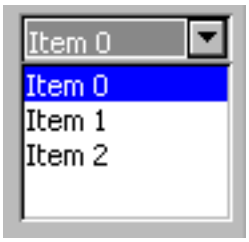DROPDOWN widgets are used to select one element of a list with several columns. It shows the currently selected item in non open state. If the user opens a DROPDOWN widget a LISTBOX appears to select a new item.

DROPDOWN closed	DROPDOWN opened
	

If mouse support is enabled, the open list reacts on moving the mouse over it.

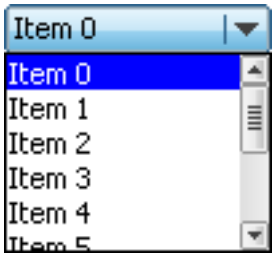Skinning...



...is available for this widget. The screenshot above shows the widget using the default skin. For details please refer to chapter 'Skinning'.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.6.1 Configuration options

Type	Macro	Default	Description
N	DROPDOWN_ALIGN_DEFAULT	GUI_TA_LEFT	Text alignment used to display the drop-down text in closed state.
S	DROPDOWN_FONT_DEFAULT	&GUI_Font13_1	Default font
N	DROPDOWN_BKCOLOR0_DEFAULT	GUI_WHITE	Background color, unselected state.
N	DROPDOWN_BKCOLOR1_DEFAULT	GUI_GRAY	Background color, selected state without focus.
N	DROPDOWN_BKCOLOR2_DEFAULT	GUI_BLUE	Background color, selected state with focus.
N	DROPDOWN_KEY_EXPAND	GUI_KEY_SPACE	Key which can be used to expand the dropdown list.
N	DROPDOWN_KEY_SELECT	GUI_KEY_ENTER	Key which can be used to select an item from the open dropdown list.
N	DROPDOWN_TEXTCOLOR0_DEFAULT	GUI_BLACK	Text color, unselected state.
N	DROPDOWN_TEXTCOLOR1_DEFAULT	GUI_BLACK	Text color, selected state without focus.
N	DROPDOWN_TEXTCOLOR2_DEFAULT	GUI_WHITE	Enable 3D support.

17.6.2 Notification codes

The following events are sent from the widget to its parent window as part of a WM_NOTIFY_PARENT message:

Message	Description
WM_NOTIFICATION_CLICKED	Widget has been clicked.
WM_NOTIFICATION_RELEASED	Widget has been released.
WM_NOTIFICATION_MOVED_OUT	Widget has been clicked and pointer has been moved out off of the widget without releasing.
WM_NOTIFICATION_SCROLL_CHANGED	The scroll position of the optional scrollbar of the opened dropdown widget has been changed.
WM_NOTIFICATION_SEL_CHANGED	The selection of the dropdown list has been changed.

17.6.3 Keyboard reaction

The widget reacts to the following keys if it has the input focus:

Key	Reaction
GUI_KEY_ENTER	Selects an item from the open dropdown list and closes the list.
GUI_KEY_SPACE	Opens the dropdown list.

17.6.4 DROPDOWN API

The table below lists the available emWin DROPDOWN-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
DROPDOWN_AddString()	Adds an element to the DROPDOWN list.
DROPDOWN_Collapse()	Closes the dropdown list.
DROPDOWN_Create()	Creates a DROPDOWN widget. (Obsolete)
DROPDOWN_CreateEx()	Creates a DROPDOWN widget.
DROPDOWN_CreateIndirect()	Creates a DROPDOWN widget from a resource table entry.
DROPDOWN_CreateUser()	Creates a DROPDOWN widget using extra bytes as user data.
DROPDOWN_DecSel()	Decrements selection.
DROPDOWN_DecSelExp()	Decrements selection in expanded state.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
DROPROWN_DeleteItem()	Deletes an item of the DROPDOWN list.
DROPDOWN_Expand()	Opens the dropdown list.
DROPDOWN_GetDefaultFont()	Returns the default font used to create DROPDOWN widgets.
DROPDOWN_GetItemDisabled()	Returns the state of the given item.
DROPDOWN_GetListbox()	Returns the handle of the attached LISTBOX in expanded state.
DROPDOWN_GetNumItems()	Returns the number of items in the dropdown list.
DROPDOWN_GetSel()	Returns the number of the currently selected element.
DROPDOWN_GetSelExp()	Returns the number of the currently selected element in expanded state.
DROPDOWN_GetUserData()	Retrieves the data set with DROPDOWN_SetUserData().
DROPDOWN_IncSel()	Increments selection.
DROPDOWN_IncSelExp()	Increments selection in expanded state.
DROPDOWN_InsertString()	Inserts a string to the dropdown list.
DROPDOWN_SetAutoScroll()	Enables the automatic use of a scrollbar in the dropdown list.
DROPDOWN_SetBkColor()	Sets the background color.
DROPDOWN_SetColor()	Sets the color of the arrow and the button of the DROPDOWN widget.
DROPDOWN_SetDefaultColor()	Sets the default color for arrow and button of DROPDOWN widgets.
DROPDOWN_SetDefaultFont()	Sets the default font for DROPDOWN widgets.
DROPDOWN_SetDefaultScrollbarColor()	Sets the default colors of the optional scrollbar in the dropdown list.
DROPDOWN_SetFont()	Sets the font of the given DROPDOWN widget
DROPDOWN_SetItemDisabled()	Sets the state of the given item.
DROPDOWN_SetItemSpacing()	Sets the spacing between the items of the dropdown list.
DROPDOWN_SetScrollbarColor()	Sets the colors of the scrollbar in the dropdown list.
DROPDOWN_SetSel()	Sets the current selection.
DROPDOWN_SetSelExp()	Sets the current selection in expanded state.
DROPDOWN_SetTextAlign()	Sets the text alignment used to display the dropdown text in closed state.
DROPDOWN_SetTextColor()	Sets the text color of the given DROPDOWN widget.
DROPDOWN_SetTextHeight()	Sets the height of the rectangle used to display the dropdown text in closed state.
DROPDOWN_SetUserData()	Sets the extra data of a DROPDOWN widget.

DROPDOWN_AddString()

Description

Adds a new element to the dropdown list.

Prototype

```
void DROPDOWN_AddString(DROPDOWN_Handle hObj, const char * s);
```

Parameter	Description
hObj	Handle of widget
s	Pointer to string to be added

DROPDOWN_Collapse()

Description

Closes the dropdown list of the DROPDOWN widget.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void DROPDOWN_Collapse(DROPDOWN_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

DROPDOWN_Create()

(Obsolete, DROPDOWN_CreateEx() should be used instead)

Description

Creates a DROPDOWN widget of a specified size at a specified location.

Prototype

```
DROPDOWN_Handle DROPDOWN_Create(WM_HWIN hWinParent,
                                int     x0,          int y0,
                                int     xsize,       int ysize,
                                int     Flags);
```

Parameter	Description
hWinParent	Handle of parent window
x0	Leftmost pixel of the DROPDOWN widget (in parent coordinates).
y0	Topmost pixel of the DROPDOWN widget (in parent coordinates).
xsize	Horizontal size of the DROPDOWN widget (in pixels).
ysize	Vertical size of the DROPDOWN widget in open state (in pixels).
Flags	Window create flags. Typically, WM_CF_SHOW to make the widget visible immediately (refer to "WM_CreateWindow()" on page 309 for a list of available parameter values).

Return value

Handle of the created DROPDOWN widget; 0 if the function fails.

Additional information

The ysize of the widget in closed state depends on the font used to create the widget. You can not set the ysize of a closed DROPDOWN widget.

DROPDOWN_CreateEx()

Description

Creates a DROPDOWN widget of a specified size at a specified location.

Prototype

```
DROPDOWN_Handle DROPDOWN_CreateEx(int     x0,      int y0,
                                  int     xsize,   int ysize,
                                  WM_HWIN hParent, int WinFlags,
                                  int     ExFlags, int Id);
```

Parameter	Description
x0	Leftmost pixel of the widget (in parent coordinates).
y0	Topmost pixel of the widget (in parent coordinates).
xsize	Horizontal size of the widget (in pixels).
ysize	Vertical size of the widget in open state (in pixels).
hParent	Handle of parent window. If 0, the new DROPDOWN widget will be a child of the desktop (top-level window).

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Parameter	Description
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
ExFlags	(see table below)
Id	Window ID of the widget.

Permitted values for parameter ExFlags	
0	No function.
DROPDOWN_CF_AUTOSCROLLBAR	Enable automatic use of a scrollbar. For details, refer to "DROPDOWN_SetAutoScroll()" on page 394.
DROPDOWN_CF_UP	Creates a DROPDOWN widget which opens the dropdown list above the widget. This flag is useful if the space below the widget is not sufficient for the dropdown list.

Return value

Handle of the created DROPDOWN widget; 0 if the function fails.

DROPDOWN_CreateIndirect()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateIndirect().

DROPDOWN_CreateUser()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateUser(). For a detailed description of the parameters the function DROPDOWN_CreateEx() can be referred to.

DROPDOWN_DecSel()

Description

Decrement the selection, moves the selection of a specified DROPDOWN widget up by one item.

Prototype

```
void DROPDOWN_DecSel(DROPDOWN_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

DROPDOWN_DecSelExp()

Description

Decrements the selection of the attached LISTBOX in expanded state.

Prototype

```
void DROPDOWN_DecSelExp(DROPDOWN_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

DROPDOWN_DeleteItem()

Description

Deletes the given item of the dropdown list.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void DROPDOWN_DeleteItem(DROPDOWN_Handle hObj, unsigned int Index);
```

Parameter	Description
hObj	Handle of widget.
Index	Zero based index of the item to be deleted.

Additional information

If the index is greater than the number of items < 1 the function returns immediately.

DROPDOWN_Expand()

Description

Opens the dropdown list of the widget.

Prototype

```
void DROPDOWN_Expand(DROPDOWN_Handle hObj);
```

Parameter	Description
hObj	Handle of widget.

Additional information

The dropdown list remains open until an element has been selected or the focus has been lost.

DROPDOWN_GetItemDisabled()

Description

Returns the state of the given item.

Prototype

```
unsigned DROPDOWN_GetItemDisabled(DROPDOWN_Handle hObj, unsigned Index);
```

Parameter	Description
hObj	Handle of widget
Index	Zero-based index of the item.

Return value

1 if the given item is disabled, 0 if not.

DROPDOWN_GetListbox()

Description

Returns the handle of the attached LISTBOX widget in expanded state.

Prototype

```
LISTBOX_Handle DROPDOWN_GetListbox(DROPDOWN_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

Return value

Handle of the attached LISTBOX widget in expanded state, 0 if DROPDOWN is in collapsed state.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

DROPDOWN_GetNumItems()

Description

Returns the number of items in the given DROPDOWN widget.

Prototype

```
int DROPDOWN_GetNumItems(DROPDOWN_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

Return value

Number of items in the given DROPDOWN widget.

DROPDOWN_GetSel()

Description

Returns the number of the currently selected item in a specified DROPDOWN widget.

Prototype

```
int DROPDOWN_GetSel(DROPDOWN_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

Return value

Number of the currently selected item.

DROPDOWN_GetSelExp()

Description

Returns the number of the currently selected item of the attached LISTBOX in expanded state.

Prototype

```
int DROPDOWN_GetSelExp(DROPDOWN_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

Return value

Number of the currently selected item.

DROPDOWN_GetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_GetUserData().

DROPDOWN_IncSel()

Description

Increment the selection, moves the selection of a specified DROPDOWN widget down by one item.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void DROPDOWN_IncSel(DROPDOWN_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

DROPDOWN_IncSelExp()

Description

Increments the selection of the attached LISTBOX in expanded state.

Prototype

```
void DROPDOWN_IncSelExp(DROPDOWN_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

DROPDOWN_InsertString()

Description

Inserts a string to the dropdown list at the given position.

Prototype

```
void DROPDOWN_InsertString(DROPDOWN_Handle   hObj,
                           const char      * s,
                           unsigned int      Index);
```

Parameter	Description
hObj	Handle of widget.
s	Pointer to the string to be inserted.
Index	Zero based index of the position.

Additional information

If the given index is greater than the number of items the string will be appended to the end of the dropdown list.

DROPDOWN_SetAutoScroll()

Description

Enables the automatic use of a vertical scrollbar in the dropdown list.

Prototype

```
void DROPDOWN_SetAutoScroll(DROPDOWN_Handle hObj, int OnOff);
```

Parameter	Description
hObj	Handle of widget.
OnOff	(see table below)

Permitted values for parameter OnOff	
0	Disable automatic use of a scrollbar.
1	Enable automatic use of a scrollbar.

Additional information

If enabled the dropdown list checks if all elements fits into the listbox. If not a vertical scrollbar will be added.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

DROPDOWN_SetBkColor()

Before	After
	

Description

Sets the background color of the given DROPDOWN widget.

Prototype

```
void DROPDOWN_SetBkColor(DROPDOWN_Handle hObj,
                         unsigned int    Index,
                         GUI_COLOR       Color);
```

Parameter	Description
hObj	Handle of widget
Index	Index for background color (see table below).
Color	Color to be set.

Permitted values for parameter Index	
DROPDOWN_CI_UNSEL	Unselected element.
DROPDOWN_CI_SEL	Selected element, without focus.
DROPDOWN_CI_SELFOCUS	Selected element, with focus.

DROPDOWN_SetColor()

Before	After
	

Description

Sets the color of the button or the arrow of the given DROPDOWN widget.

Prototype

```
void DROPDOWN_SetColor(DROPDOWN_Handle hObj,
                       unsigned int    Index,
                       GUI_COLOR       Color);
```

Parameter	Description
hObj	Handle of widget
Index	Index of desired item (see table below).
Color	Color to be used.

Permitted values for parameter Index	
DROPDOWN_CI_ARROW	Color of small arrow within the button.
DROPDOWN_CI_BUTTON	Button color.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

DROPDOWN_SetDefaultColor()

Description

Sets the default colors for the arrow and the button of new DROPDOWN widgets.

Prototype

```
GUI_COLOR DROPDOWN_SetDefaultColor(int Index, GUI_COLOR Color);
```

Parameter	Description
Index	Refer to "DROPDOWN_SetColor()" on page 395.
Color	Color to be used.

DROPDOWN_SetDefaultFont()

Description

Sets the default font used for new DROPDOWN widgets.

Prototype

```
void DROPDOWN_SetDefaultFont(const GUI_FONT * pFont);
```

Parameter	Description
pFont	Pointer to GUI_FONT structure.

DROPDOWN_SetDefaultScrollbarColor()

Description

Sets the default colors used for the optional scrollbar in the dropdown list.

Prototype

```
GUI_COLOR DROPDOWN_SetDefaultScrollbarColor(int Index, GUI_COLOR Color);
```

Parameter	Description
Index	Refer to "DROPDOWN_SetScrollbarColor()" on page 397.
Color	Color to be used.

DROPDOWN_SetFont()

Description

Sets the font used to display the given DROPDOWN widget.



Prototype

```
void DROPDOWN_SetFont(DROPDOWN_Handle hObj, const GUI_FONT * pFont);
```

Parameter	Description
hObj	Handle of widget
pFont	Pointer to the font.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

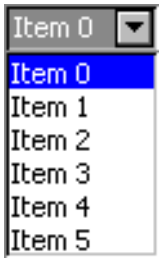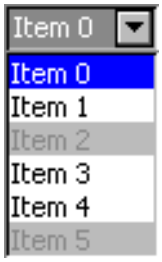DROPDOWN_SetItemDisabled()

Before	After
	

Description


Sets the enabled state of the given item.

Prototype

```
void DROPDOWN_SetItemDisabled(DROPDOWN_Handle hObj,
                              unsigned        Index,
                              int             OnOff);
```

Parameter	Description
hObj	Handle of widget
Index	Zero-based index of the item.
OnOff	1 for enabled, 0 for disabled.

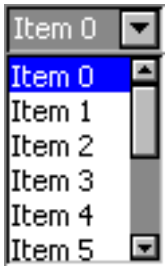DROPDOWN_SetScrollbarColor()

Before	After
	

Description

Sets the colors of the optional scrollbar in the dropdown list.

Prototype

```
void DROPDOWN_SetScrollbarColor(DROPDOWN_Handle hObj,
                                unsigned int    Index,
                                GUI_COLOR       Color);
```

Parameter	Description
hObj	Handle of widget
Index	Index of desired item (see table below).
Color	Color to be used.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for parameter Index	
SCROLLBAR_CI_THUMB	Color of thumb area.
SCROLLBAR_CI_SHAFT	Color of shaft.
SCROLLBAR_CI_ARROW	Color of arrows.

DROPDOWN_SetScrollbarWidth()

Description

Sets the width of the scrollbars used by the dropdown list of the given DROPDOWN widget.

Prototype

```
void DROPDOWN_SetScrollbarWidth(DROPDOWN_Handle hObj, unsigned Width);
```

Parameter	Description
hObj	Handle of widget.
Width	Width of the scrollbar(s) used by the dropdown list of the given DROPDOWN widget.

DROPDOWN_SetSel()

Description

Sets the selected item of a specified DROPDOWN widget.

Prototype

```
void DROPDOWN_SetSel(DROPDOWN_Handle hObj, int Sel);
```

Parameter	Description
hObj	Handle of widget
Sel	Element to be selected.

DROPDOWN_SetSelExp()

Description

Sets the selected item of the attached LISTBOX in expanded state.



Prototype

```
void DROPDOWN_SetSelExp(DROPDOWN_Handle hObj, int Sel);
```

Parameter	Description
hObj	Handle of widget
Sel	Element to be selected.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

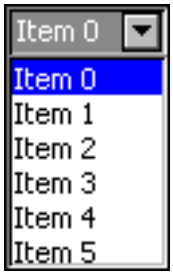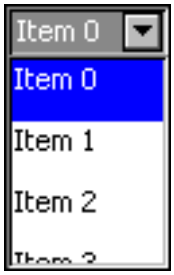DROPDOWN_SetItemSpacing()

Before	After
	

Description

Sets an additional spacing below the items of the dropdown list.

Prototype

```
void DROPDOWN_SetItemSpacing(DROPDOWN_Handle hObj, unsigned Value);
```

Parameter	Description
hObj	Handle of widget
Value	Number of pixels used as additional space between the items of the dropdown list.

DROPDOWN_SetTextAlign()

Before	After
	

Description

Sets the alignment used to display the dropdown text in closed state.

Prototype

```
void DROPDOWN_SetTextAlign(DROPDOWN_Handle hObj, int Align);
```

Parameter	Description
hObj	Handle of widget
Align	Alignment used to display the dropdown text in closed state.

DROPDOWN_SetTextColor()

Description

Sets the background color of the given DROPDOWN widget.

Prototype

```
void DROPDOWN_SetTextColor(DROPDOWN_Handle hObj,
                           unsigned int    Index,
```


© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                                GUI_COLOR       Color);
```

Parameter	Description
hObj	Handle of widget
Index	Index for background color (see table below).
Color	Color to be set.

Permitted values for parameter Index	
DROPDOWN_CI_UNSEL	Unselected element.
DROPDOWN_CI_SEL	Selected element, without focus.
DROPDOWN_CI_SELFOCUS	Selected element, with focus.

DROPDOWN_SetTextHeight()

Before	After
	

Description

Sets the height of the rectangle used to display the DROPDOWN text in closed state.

Prototype

```
void DROPDOWN_SetTextHeight(DROPDOWN_Handle hObj, unsigned TextHeight);
```

Parameter	Description
hObj	Handle of widget
TextHeight	Height of the rectangle used to display the text in closed state.

Additional information

Per default the height of the DROPDOWN widget depends on the used font. Using this function with TextHeight > 0 means the given value should be used. Text Height = 0 means the default behavior should be used.

DROPDOWN_SetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_SetUserData().

17.6.5 Example


The Sample folder contains the following example which shows how the widget can be used:

- WIDGET_Dropdown.c

Note that several other examples also make use of this widget and may also be helpful to get familiar with the widget.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Screenshot of WIDGET_Dropdown.c:

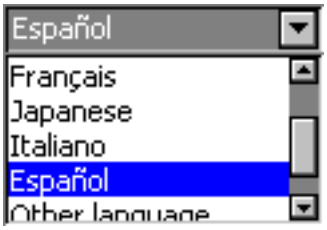

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.7 EDIT: Edit widget

Edit fields are commonly used as the primary user interface for text input:

Blank edit field	Edit field with user input
	

You can also use edit fields for entering values in binary, decimal, or hexadecimal modes. A decimal-mode edit field might appear similar to those in the following table. Like a check box, an edit field will appear gray if disabled:

Edit field with user input (decimal)	Disabled edit field
	

All EDIT-related routines are located in the file(s) `EDIT*.c`, `EDIT.h`. All identifiers are prefixed EDIT.

17.7.1 Configuration options

Type	Macro	Default	Description
S	EDIT_ALIGN_DEFAULT	GUI_TA_RIGHT | GUI_TA_VCENTER	Alignment for edit field text.
N	EDIT_BKCOLOR0_DEFAULT	0xc0c0c0	Background color, disabled state.
N	EDIT_BKCOLOR1_DEFAULT	GUI_WHITE	Background color, enabled state.
N	EDIT_BORDER_DEFAULT	1	Width of border, in pixels.
S	EDIT_FONT_DEFAULT	&GUI_Font13_1	Font used for edit field text.
N	EDIT_TEXTCOLOR0_DEFAULT	GUI_BLACK	Text color, disabled state.
N	EDIT_TEXTCOLOR1_DEFAULT	GUI_BLACK	Text color, enabled state.
N	EDIT_XOFF	2	Distance in X to offset text from left border of edit field.

Available alignment flags are:
`GUI_TA_LEFT`, `GUI_TA_RIGHT`, `GUI_TA_HCENTER` for horizontal alignment.
`GUI_TA_TOP`, `GUI_TA_BOTTOM`, `GUI_TA_VCENTER` for vertical alignment.

17.7.2 Notification codes

The following events are sent from an edit widget to its parent window as part of a `WM_NOTIFY_PARENT` message:

Message	Description
WM_NOTIFICATION_CLICKED	Widget has been clicked.
WM_NOTIFICATION_RELEASED	Widget has been released.
WM_NOTIFICATION_MOVED_OUT	Widget has been clicked and pointer has been moved out off of the widget without releasing.
WM_NOTIFICATION_VALUE_CHANGED	Value (content) of the edit widget has changed.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.7.3 Keyboard reaction

The widget reacts to the following keys if it has the input focus:

Key	Reaction
GUI_KEY_UP	Increases the current character. If for example the current character (the character below the cursor) is a 'A' it changes to 'B'.
GUI_KEY_DOWN	Decreases the current character. If for example the current character is a 'B' it changes to 'A'.
GUI_KEY_RIGHT	Moves the cursor one character to the right.
GUI_KEY_LEFT	Moves the cursor one character to the left.
GUI_KEY_BACKSPACE	If the widget works in text mode, the character before the cursor is deleted.
GUI_KEY_DELETE	If the widget works in text mode, the current is deleted.
GUI_KEY_INSERT	If the widget works in text mode, this key toggles the edit mode between GUI_EDIT_MODE_OVERWRITE and GUI_EDIT_MODE_INSERT. For details, refer to "EDIT_SetInsertMode()" on page 413.

17.7.4 EDIT API

The table below lists the available emWin EDIT-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
EDIT_AddKey()	Key input routine.
EDIT_Create()	Creates an EDIT widget. (Obsolete)
EDIT_CreateAsChild()	Creates an EDIT widget as a child window. (Obsolete)
EDIT_CreateEx()	Creates an EDIT widget.
EDIT_CreateIndirect()	Creates an EDIT widget from resource table entry.
EDIT_CreateUser()	Creates an EDIT widget using extra bytes as user data.
EDIT_EnableBlink()	Enables/disables a blinking cursor
EDIT_GetCursorCharPos()	Returns the number of the character at the cursor position.
EDIT_GetCursorPixelPos()	Returns the pixel position of the cursor.
EDIT_GetDefaultBkColor()	Returns the default background color.
EDIT_GetDefaultFont()	Returns the default font.
EDIT_GetDefaultTextAlign()	Returns the default text alignment.
EDIT_GetDefaultTextColor()	Returns the default text color.
EDIT_GetFloatValue()	Returns the current value as floating point value.
EDIT_GetNumChars()	Returns the number of characters of the given edit widget.
EDIT_GetText()	Get user input.
EDIT_GetUserData()	Retrieves the data set with EDIT_SetUserData().
EDIT_GetValue()	Returns the current value.
EDIT_SetBinMode()	Enables the binary edit mode.
EDIT_SetBkColor()	Sets the background color of the edit field.
EDIT_SetCursorAtChar()	Sets the edit widget cursor to a specified character position.
EDIT_SetCursorAtPixel()	Sets the edit widget cursor to a specified pixel position.
EDIT_SetDecMode()	Enables the decimal edit mode.
EDIT_SetDefaultBkColor()	Sets the default background color.
EDIT_SetDefaultFont()	Sets the default font used for edit fields.
EDIT_SetDefaultTextAlign()	Sets the default text alignment for edit fields.
EDIT_SetDefaultTextColor()	Sets the default text color.
EDIT_SetFloatMode()	Enables the floating point edit mode.
EDIT_SetFloatValue()	Sets the floating point value if using the floating point edit mode.
EDIT_SetFont()	Select the font for the text.
EDIT_SetHexMode()	Enables the hexadecimal edit mode.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
EDIT_SetInsertMode()	Enables or disables the insert mode.
EDIT_SetMaxLen()	Sets the maximum number of characters of the edit field.
EDIT_SetpfAddKeyEx()	Sets a function which is called to add a character.
EDIT_SetSel()	Sets the current selection.
EDIT_SetText()	Sets the text.
EDIT_SetTextAlign()	Sets the text alignment for the edit field.
EDIT_SetTextColor()	Sets the color(s) for the text.
EDIT_SetTextMode()	Sets the edit mode of the widget back to text mode.
EDIT_SetValue()	Sets the current value.
EDIT_SetUlongMode()	Enables the unsigned long decimal edit mode.
EDIT_SetUserData()	Sets the extra data of an EDIT widget.
GUI_EditBin()	Edits a binary value at the current cursor position.
GUI_EditDec()	Edits a decimal value at the current cursor position.
GUI_EditHex()	Edits a hexadecimal value at the current cursor position.
GUI_EditString()	Edits a string at the current cursor position.

EDIT_AddKey()

Description

Adds user input to a specified edit field.

Prototype

```
void EDIT_AddKey(EDIT_Handle hObj, int Key);
```

Parameter	Description
hObj	Handle of edit field.
Key	Character to be added.

Additional information

The specified character is added to the user input of the EDIT widget. If the last character should be erased, the key GUI_KEY_BACKSPACE can be used. If the maximum count of characters has been reached, another character will not be added.

EDIT_Create()

(Obsolete, EDIT_CreateEx() should be used instead)

Description

Creates an EDIT widget of a specified size at a specified location.

Prototype

```
EDIT_Handle EDIT_Create(int x0, int y0,     int xsize,  int ysize,
                        int Id, int MaxLen, int Flags);
```

Parameter	Description
x0	Leftmost pixel of the edit field (in parent coordinates).
y0	Topmost pixel of the edit field (in parent coordinates).
xsize	Horizontal size of the edit field (in pixels).
ysize	Vertical size of the edit field (in pixels.
Id	ID to be returned.
MaxLen	Maximum count of characters.
Flags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

Handle of the created EDIT widget; 0 if the function fails.

EDIT_CreateAsChild()

(Obsolete, EDIT_CreateEx should be used instead)

Description

Creates an EDIT widget as a child window.

Prototype

```
EDIT_Handle EDIT_CreateAsChild(int     x0,      int y0,
                               int     xsize,   int ysize,
                               WM_HWIN hParent, int Id,
                               int     Flags,   int MaxLen);
```

Parameter	Description
x0	X-position of the edit field relative to the parent window.
y0	Y-position of the edit field relative to the parent window.
xsize	Horizontal size of the edit field (in pixels).
ysize	Vertical size of the edit field (in pixels.
hParent	Handle of parent window.
Id	ID to be returned.
Flags	Window create flags (see EDIT_Create()).
MaxLen	Maximum count of characters.

Return value

Handle of the created EDIT widget; 0 if the function fails.

EDIT_CreateEx()

Description

Creates a EDIT widget of a specified size at a specified location.

Prototype

```
EDIT_Handle EDIT_CreateEx(int     x0,      int y0,
                          int     xsize,   int ysize,
                          WM_HWIN hParent, int WinFlags,
                          int     ExFlags, int Id,
                          int     MaxLen);
```

Parameter	Description
x0	Leftmost pixel of the widget (in parent coordinates).
y0	Topmost pixel of the widget (in parent coordinates).
xsize	Horizontal size of the widget (in pixels).
ysize	Vertical size of the widget (in pixels).
hParent	Handle of parent window. If 0, the new EDIT widget will be a child of the desktop (top-level window).
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
ExFlags	Not used, reserved for future use.
Id	Window ID of the widget.
MaxLen	Maximum count of characters.

Return value

Handle of the created EDIT widget; 0 if the function fails.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

EDIT_CreateIndirect()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateIndirect(). The following flags may be used as the Flags element of the resource passed as parameter:

Permitted indirect creation flags ("OR" combinable)	
EDIT_CF_LEFT	Horizontal alignment: left
EDIT_CF_RIGHT	Horizontal alignment: right
EDIT_CF_HCENTER	Horizontal alignment: center
EDIT_CF_TOP	Vertical alignment: top
EDIT_CF_BOTTOM	Vertical alignment: bottom
EDIT_CF_VCENTER	Vertical alignment: center

The Para element is used as maximum length of a string to display / max. no. of digits if used in decimal, bin or hex mode.

EDIT_CreateUser()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateUser(). For a detailed description of the parameters the function EDIT_CreateEx() can be referred to.

EDIT_EnableBlink()

Description

Enables/disables a blinking cursor.

Prototype

```
void EDIT_EnableBlink(EDIT_Handle hObj, int Period, int OnOff);
```

Parameter	Description
hObj	Handle of edit field.
Period	Blinking period
OnOff	1 enables blinking, 0 disables blinking

Additional information

This function calls GUI_X_GetTime().

EDIT_GetCursorCharPos()

Description

Returns the number of the character at the cursor position.

Prototype

```
int EDIT_GetCursorCharPos(EDIT_Handle hObj);
```

Parameter	Description
hObj	Handle of edit field.

Return value

Number of the character at the cursor position.

Additional information

The widget returns the character position if it has the focus or not. This means the cursor position is also returned, if the cursor is currently not visible in the widget.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

EDIT_GetCursorPixelPos()

Description

Returns the pixel position of the cursor in window coordinates.

Prototype

```
void EDIT_GetCursorPixelPos(EDIT_Handle hObj, int * pxPos, int * pyPos);
```

Parameter	Description
hObj	Handle of edit field.
pxPos	Pointer to integer variable for the X-position in window coordinates.
pyPos	Pointer to integer variable for the Y-position in window coordinates.

Additional information

The widget returns the pixel position if it has the focus or not. This means the cursor position is also returned, if the cursor is currently not visible in the widget.

EDIT_GetDefaultBkColor()

Description

Returns the default background color used for EDIT widgets.

Prototype

```
GUI_COLOR EDIT_GetDefaultBkColor(unsigned int Index);
```

Parameter	Description
Index	(see table below)

Permitted values for parameter Index	
0	Color to be used when widget is inactive.
1	Color to be used when widget is active.

Return value

Default background color used for EDIT widgets.

EDIT_GetDefaultFont()

Description

Returns the default font used for EDIT widgets.

Prototype

```
const GUI_FONT* EDIT_GetDefaultFont(void);
```

Return value

Default font used for EDIT widgets.

EDIT_GetDefaultTextAlign()

Description

Returns the default text alignment used for EDIT widgets.

Prototype

```
int EDIT_GetDefaultTextAlign(void);
```

Return value

Default text alignment used for EDIT widgets.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

EDIT_GetDefaultTextColor()

Description

Returns the default text color used for EDIT widgets.

Prototype

```
GUI_COLOR EDIT_GetDefaultTextColor(unsigned int Index);
```

Parameter	Description
Index	Has to be 0, reserved for future use.

Return value

Default text color used for EDIT widgets.

EDIT_GetFloatValue()

Description

Returns the current value of the edit field as floating point value.

Prototype

```
float EDIT_GetFloatValue(EDIT_Handle hObj);
```

Parameter	Description
hObj	Handle of edit field.

Return value

The current value.

Additional information

The use of this function makes only sense if the edit field is in floating point edit mode.

EDIT_GetNumChars

Description

Returns the number of characters of the specified edit field.

Prototype

```
int EDIT_GetNumChars(EDIT_Handle hObj);
```

Parameter	Description
hObj	Handle of edit field.

Return value

Number of characters of the specified edit field.

EDIT_GetText()

Description

Retrieves the user input of a specified edit field.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void EDIT_GetText(EDIT_Handle hObj, char * sDest, int MaxLen);
```

Parameter	Description
hObj	Handle of edit field.
sDest	Pointer to buffer.
MaxLen	Size of buffer.

EDIT_GetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_GetUserData().

EDIT_GetValue()

Description

Returns the current value of the edit field. The current value is only useful if the edit field is in binary, decimal or hexadecimal mode.

Prototype

```
I32  EDIT_GetValue(EDIT_Handle hObj);
```

Parameter	Description
hObj	Handle of edit field.

Return value

The current value.

EDIT_SetBinMode()

Description

Enables the binary edit mode of the edit field. The given value can be modified in the given range.

Prototype

```
void EDIT_SetBinMode(EDIT_Handle hObj, U32 Value, U32 Min, U32 Max);
```

Parameter	Description
hObj	Handle of edit field.
Value	Value to be modified.
Min	Minimum value.
Max	Maximum value.

EDIT_SetBkColor()

Description

Sets the edit fields background color.

Prototype

```
void EDIT_SetBkColor(EDIT_Handle hObj, unsigned int Index, GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of edit field.
Index	Index for background color (see table below).
Color	Color to be set.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for parameter Index	
EDIT_CI_DISABLED	Disabled state.
EDIT_CI_ENABLED	Enabled state.

EDIT_SetCursorAtChar()

Description

Sets the edit widget cursor to a specified character position.

Prototype

```
void EDIT_SetCursorAtChar(EDIT_Handle hObj, int xPos);
```

Parameter	Description
hObj	Handle of edit field.
xPos	Character position to set cursor to.

Additional information

The character position works as follows:
0: left of the first (leftmost) character,
1: between the first and second characters,
2: between the second and third characters,
and so on.

EDIT_SetCursorAtPixel()

Description

Sets the edit widget cursor to a specified pixel position.

Prototype

```
void EDIT_SetCursorAtPixel(EDIT_Handle hObj, int Pos);
```

Parameter	Description
hObj	Handle of edit field.
Pos	Pixel position to set cursor to.

EDIT_SetDecMode()

Description

Enables the decimal edit mode of the edit field. The given value can be modified in the given range.

Prototype

```
void EDIT_SetDecMode(EDIT_Handle hEdit, I32 Value, I32 Min,
                     I32         Max,   int Shift, U8  Flags);
```

Parameter	Description
hObj	Handle of edit field.
Value	Value to be modified.
Min	Minimum value.
Max	Maximum value.
Shift	If > 0 it specifies the position of the decimal point.
Flags	See table below.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for parameter Flags ("OR" combinable)	
0 (default)	Edit in normal mode, sign is only displayed if the value is negative
GUI_EDIT_SIGNED	"+" and "-" sign is displayed.

EDIT_SetDefaultBkColor()

Description

Sets the default background color used for edit widgets.

Prototype

```
void EDIT_SetDefaultBkColor(unsigned int Index, GUI_COLOR Color);
```

Parameter	Description
Index	(see table below)
Color	Color to be used.

Permitted values for parameter Index	
0	Color to be used when widget is inactive.
1	Color to be used when widget is active.

EDIT_SetDefaultFont()

Description

Sets the default font used for edit fields.

Prototype

```
void EDIT_SetDefaultFont(const GUI_FONT * pFont);
```

Parameter	Description
pFont	Pointer to the font to be set as default.

EDIT_SetDefaultTextAlign()

Description

Sets the default text alignment for edit fields.

Prototype

```
void EDIT_SetDefaultTextAlign(int Align);
```

Parameter	Description
Align	Default text alignment. For details, refer to “EDIT_SetTextAlign()” on page 415.

EDIT_SetDefaultTextColor()

Description

Sets the default text color used for edit widgets.

Prototype

```
void EDIT_SetDefaultTextColor(unsigned int Index, GUI_COLOR Color);
```

Parameter	Description
Index	Has to be 0, reserved for future use.
Color	Color to be used.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

EDIT_SetFloatMode()

Description

Enables the floating point edit mode of the edit field. The given value can be modified in the given range.

Prototype

```
void  EDIT_SetFloatMode(EDIT_Handle hObj, float Value, float Min,
                        float       Max,  int   Shift, U8    Flags);
```

Parameter	Description
hObj	Handle of edit field.
Value	Value to be modified.
Min	Minimum value.
Max	Maximum value.
Shift	Number of post decimal positions.
Flags	See table below.

Permitted values for parameter Flags ("OR" combinable)	
0 (default)	Edit in normal mode, sign is only displayed if the value is negative
GUI_EDIT_SIGNED	"+" and "-" sign is displayed.
GUI_EDIT_SUPPRESS_LEADING_ZEROES	Does not show leading zeroes.

EDIT_SetFloatValue()

Description

The function can be used to set the floating point value of the edit field if working in floating point mode.

Prototype

```
void EDIT_SetFloatValue(EDIT_Handle hObj, float Value);
```

Parameter	Description
hObj	Handle of edit field.
Value	New floating point value of the edit field.

Additional information

The use of this function makes only sense if the edit field works in floating point mode. If working in text mode the function has no effect. If working in binary, decimal or hexadecimal mode the behavior of the edit field is undefined.

EDIT_SetFont()

Description

Sets the edit field font.

Prototype

```
void EDIT_SetFont(EDIT_Handle hObj, const GUI_FONT * pFont);
```

Parameter	Description
hObj	Handle of edit field.
pFont	Pointer to the font.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

EDIT_SetHexMode()

Description

Enables the hexadecimal edit mode of the edit field. The given value can be modified in the given range.

Prototype

```
void EDIT_SetHexMode(EDIT_Handle hObj, U32 Value, U32 Min, U32 Max);
```

Parameter	Description
hObj	Handle of edit field.
Value	Value to be modified.
Min	Minimum value.
Max	Maximum value.

EDIT_SetInsertMode()

Description

Enables or disables the insert mode of the edit widget.

Prototype

```
int EDIT_SetInsertMode(EDIT_Handle hObj, int OnOff);
```

Parameter	Description
hObj	Handle of edit field.
OnOff	See table below.

Permitted values for parameter OnOff	
0	Disable insert mode.
1	Enable insert mode.

Return value

Returns the previous insert mode state.

Additional information

The use of this function makes only sense if the edit widget operates in text mode or in any user defined mode. If working in hexadecimal, binary, floating point or decimal mode the use of this function has no effect except that it changes the appearance of the cursor.

EDIT_SetMaxLen()

Description

Sets the maximum number of characters to be edited by the given edit field.

Prototype

```
void EDIT_SetMaxLen(EDIT_Handle hObj, int MaxLen);
```

Parameter	Description
hObj	Handle of edit field.
MaxLen	Number of characters.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

EDIT_SetpfAddKeyEx()

Description

Sets the function pointer which is used by the EDIT widget to call the function which is responsible for adding characters.

Prototype



```
void EDIT_SetpfAddKeyEx(EDIT_Handle hObj, tEDIT_AddKeyEx * pfAddKeyEx);
```

Parameter	Description
hObj	Handle of edit field.
pfAddKeyEx	Function pointer to the function to be used to add a character.

Additional information

If working in text mode (default) or one of the modes for editing values, the edit widget uses its own routines to add a character. The use of this function only makes sense if the default behavior of the edit widget needs to be changed. If a function pointer has been set with this function the application program is responsible for the contents of the text buffer.

EDIT_SetSel()

Before	After
	

Description

Used to set the current selection of the edit field.

Prototype

```
void EDIT_SetSel(EDIT_Handle hObj, int FirstChar, int LastChar);
```

Parameter	Description
hObj	Handle of edit field.
FirstChar	Zero based index of the first character to be selected. -1 if no character should be selected.
LastChar	Zero based index of the last character to be selected. -1 if all characters from the first character until the last character should be selected.

Additional information

Selected characters are usually displayed in reverse. Setting the cursor position deselects all characters.

Example

```
EDIT_SetSel(0, -1) /* Selects all characters of the widget */
EDIT_SetSel(-1, 0) /* Deselect all characters */
EDIT_SetSel(0, 2)  /* Selects the first 3 characters */
```

EDIT_SetText()

Description

Sets the text to be displayed in the edit field.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void EDIT_SetText(EDIT_Handle hObj, const char* s)
```

Parameter	Description
hObj	Handle of edit field.
s	Text to display.

EDIT_SetTextAlign()

Description

Sets the text alignment of the edit field.

Prototype

```
void EDIT_SetTextAlign(EDIT_Handle hObj, int Align);
```

Parameter	Description
hObj	Handle of edit field.
Align	Text alignment to be set (see "GUI_SetTextAlign()" on page 82)

EDIT_SetTextColor()

Description

Sets the edit fields text color.

Prototype

```
void EDIT_SetTextColor(EDIT_Handle hObj,   unsigned int Index,
                       GUI_COLOR   Color);
```

Parameter	Description
hObj	Handle of edit field.
Index	Index for text color (see table below).
Color	Color to be set.

Permitted values for parameter OnOff	
EDIT_CI_DISABLED	Sets the text color for disabled state.
EDIT_CI_ENABLED	Sets the text color for enabled state.

EDIT_SetTextMode()

Description

Sets the edit mode of the widget back to text mode.

Prototype

```
void EDIT_SetTextMode(EDIT_Handle hEdit);
```

Parameter	Description
hObj	Handle of widget.

Additional information

If one of the functions EDIT_SetBinMode(), EDIT_SetDecMode(), EDIT_SetFloatMode() or EDIT_SetHexMode() has been used to set the edit field to one of the numeric edit modes, this function sets the edit mode back to text mode. It also clears the contents of the widget.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

EDIT_SetUlongMode()

Description

Enables the unsigned long decimal edit mode of the edit field. The given value can be modified in the given range.

Prototype

```
void EDIT_SetUlongMode(EDIT_Handle hEdit, U32 Value, U32 Min, U32 Max);
```

Parameter	Description
hObj	Handle of edit field.
Value	Value to be modified.
Min	Minimum value.
Max	Maximum value.

EDIT_SetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_SetUserData().

EDIT_SetValue()

Description

Sets the current value of the edit field. Only useful if binary, decimal or hexadecimal edit mode is set.

Prototype

```
void EDIT_SetValue(EDIT_Handle hObj, I32 Value);
```

Parameter	Description
hObj	Handle of edit field.
Value	New value.

GUI_EditBin()

Description

Edits a binary value at the current cursor position.

Prototype

```
U32 GUI_EditBin(U32 Value, U32 Min, U32 Max, int Len, int xsize);
```

Parameter	Description
Value	Value to be modified.
Min	Minimum value.
Max	Maximum value.
Len	Number of digits to edit.
xsize	Pixel-size in X of the edit field.

Return value

The new value will be returned if <ENTER> is pressed. If <ESC> is pressed, the old value is returned.

Additional information

The routine returns after pressing <ENTER> or <ESC>. The contents of the given text will be modified only if <ENTER> is pressed.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_EditDec()

Description

Edits a decimal value at the current cursor position.

Prototype

```
U32 GUI_EditDec(I32 Value, I32 Min, I32 Max, int Len, int xsize,
                int Shift, U8 Flags);
```

Parameter	Description
Value	Value to be modified.
Min	Minimum value.
Max	Maximum value.
Len	Number of digits to edit.
xsize	Pixel-size in X of edit field.
Shift	If > 0 it specifies the position of the decimal point.
Flags	See EDIT_SetDecMode().

Return value

The new value will be returned if <ENTER> is pressed. If <ESC> is pressed, the old value is returned.

Additional information

The routine returns after pressing <ENTER> or <ESC>. The contents of the given text will be modified only if <ENTER> is pressed.

GUI_EditHex()

Description

Edits a hexadecimal value at the current cursor position.

Prototype

```
U32 GUI_EditHex(U32 Value, U32 Min, U32 Max, int Len, int xsize);
```

Parameter	Description
Value	Value to be modified.
Min	Minimum value.
Max	Maximum value.
Len	Number of digits to edit.
xsize	Pixel-size in X of the edit field.

Return value

The new value will be returned if <ENTER> is pressed. If <ESC> is pressed, the old value is returned.

Additional information

The routine returns after pressing <ENTER> or <ESC>. The contents of the given text will be modified only if <ENTER> is pressed.

GUI_EditString()

Description

Edits a string at the current cursor position.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void GUI_EditString(char * pString, int Len, int xsize);
```

Parameter	Description
pString	Pointer to the string to be edited.
Len	Maximum number of characters.
xsize	Pixel-size in X of the edit field.

Additional information

The routine returns after pressing <ENTER> or <ESC>. The contents of the given text will be modified only if <ENTER> is pressed.

17.7.5 Examples

The Sample folder contains the following examples which show how the widget can be used:

- WIDGET_Edit.c
- WIDGET_EditWinmode.c

Note that several other examples also make use of this widget and may also be helpful to get familiar with the widget.

Screen shot of WIDGET_Edit.c:



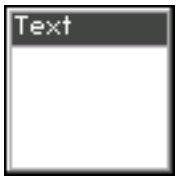
Screen shot of WIDGET_EditWinmode.c:





 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.8 FRAMEWIN: Frame window widget

Frame windows give your application a PC application-window appearance. They consist of a surrounding frame, a title bar and a user area. The color of the title bar changes to show whether the window is active or inactive, as seen below:

Active frame window	Inactive frame window
	

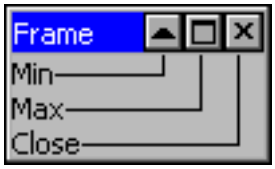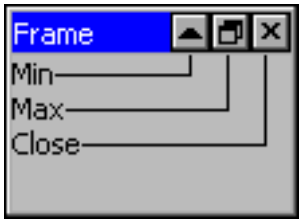You can attach predefined buttons to the title bar as seen below or you can attach your own buttons to a title bar:

Description	Frame window
Frame window with minimize-, maximize- and close button.	
Frame window with minimize-, maximize- and close button in maximized state.	
Frame window with minimize-, maximize- and close button in minimized state	

Skinning...




...is available for this widget. The screenshot above shows the widget using the default skin. For details please refer to chapter ’Skinning’.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.8.1 Structure of the frame window

The following diagram shows the detailed structure and looks of a frame window:

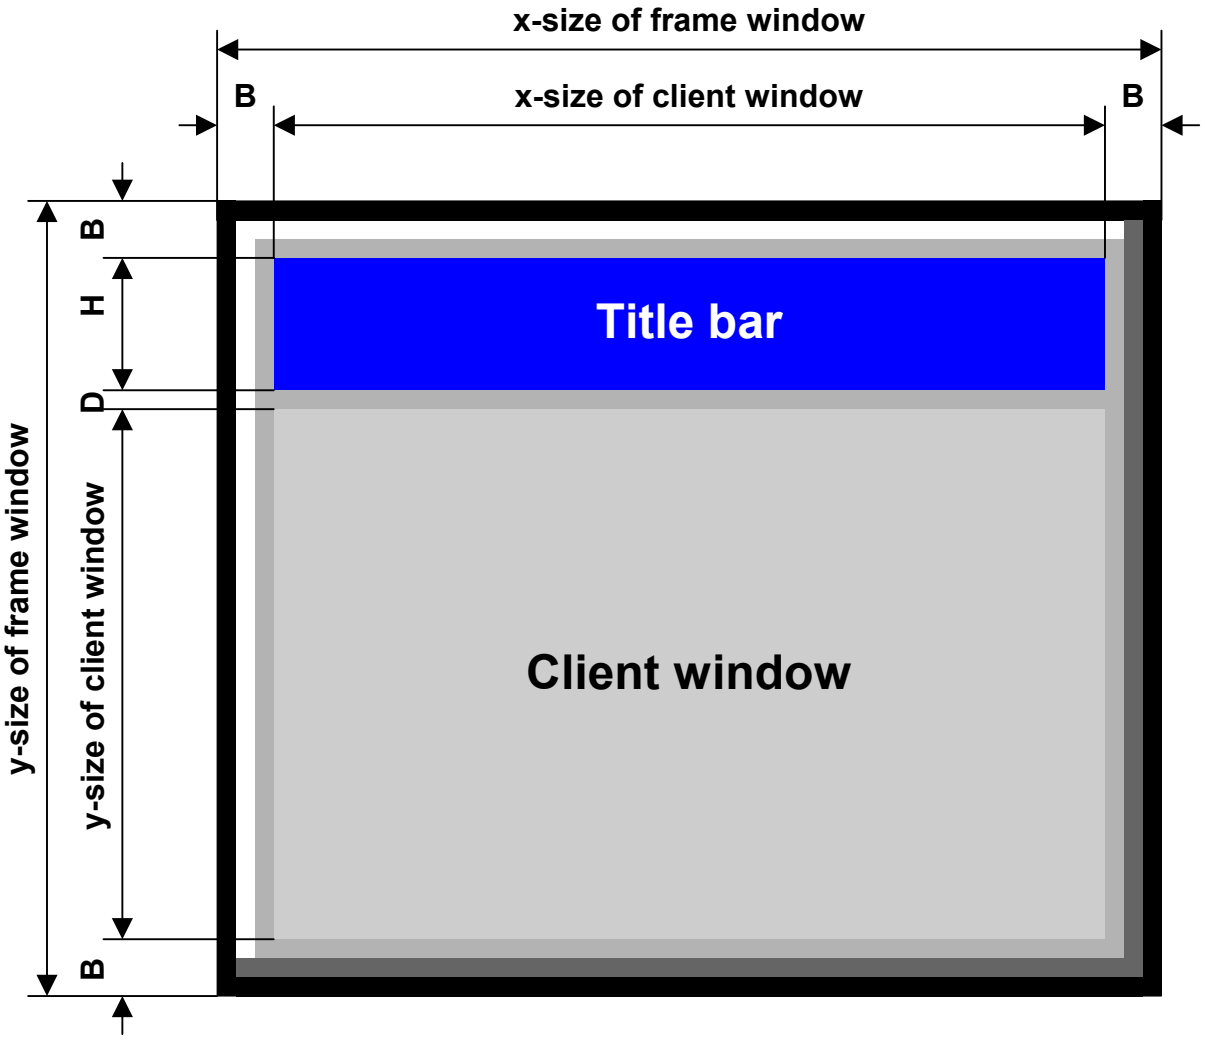

The frame window actually consists of 2 windows; the main window and a child window. The child window is called `Client window`. It is important to be aware of this when dealing with callback functions: There are 2 windows with 2 different callback functions. When creating child windows, these child windows are typically created as children of the client window; their parent is therefor the client window.

Detail	Description
`B`	Border size of the frame window. The default size of the border is 3 pixels.
`H`	Height of the title bar. Depends on the size of the used font for the title.
`D`	Spacing between title bar and client window. (1 pixel)
`Title bar`	The title bar is part of the frame window and not a separate window.
`Client window`	The client window is a separate window created as a child window of the frame window.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.8.2 Configuration options

Type	Macro	Default	Description
B	FRAMEWIN_ALLOW_DRAG_ON_FRAME	1	Allows dragging the widget on the surrounding frame.
N	FRAMEWIN_BARCOLOR_ACTIVE_DEFAULT	0xff0000	Title bar color, active state.
N	FRAMEWIN_BARCOLOR_INACTIVE_DEFAULT	0x404040	Title bar color, inactive state.
N	FRAMEWIN_BORDER_DEFAULT	3	Outer border width, in pixels.
N	FRAMEWIN_CLIENTCOLOR_DEFAULT	0xc0c0c0	Color of client window area.
S	FRAMEWIN_DEFAULT_FONT	&GUI_Font8_1	Font used for title bar text.
N	FRAMEWIN_FRAMECOLOR_DEFAULT	0xaaaaaa	Frame color.
N	FRAMEWIN_IBORDER_DEFAULT	1	Inner border width, in pixels.
N	FRAMEWIN_TITLEHEIGHT_DEFAULT	0	Default height of title bar.

17.8.3 Keyboard reaction

The widget can not gain the input focus and does not react on keyboard input.

17.8.4 FRAMEWIN API

The table below lists the available emWin FRAMEWIN-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
FRAMEWIN_AddButton()	Adds a button in the title bar.
FRAMEWIN_AddCloseButton()	Adds a close button in the title bar.
FRAMEWIN_AddMaxButton()	Adds a maximize button in the title bar.
FRAMEWIN_AddMenu()	Adds a menu widget to the frame window.
FRAMEWIN_AddMinButton()	Adds a minimize button in the title bar.
FRAMEWIN_Create()	Creates a FRAMEWIN widget. (Obsolete)
FRAMEWIN_CreateAsChild()	Creates a FRAMEWIN widget as a child window. (Obsolete)
FRAMEWIN_CreateEx()	Creates a FRAMEWIN widget.
FRAMEWIN_CreateIndirect()	Creates a BUTTON widget from a resource table entry.
FRAMEWIN_CreateUser()	Creates a FRAMEWIN widget using extra bytes as user data.
FRAMEWIN_GetActive()	Returns if the frame window is in active state.
FRAMEWIN_GetBarColor()	Returns the color of the title bar.
FRAMEWIN_GetBorderSize()	Returns the size of the border.
FRAMEWIN_GetDefaultBarColor()	Returns the default color of the title bar.
FRAMEWIN_GetDefaultBorderSize()	Returns the default border size
FRAMEWIN_GetDefaultClientColor()	Returns the default color of the client area.
FRAMEWIN_GetDefaultFont()	Returns the default font used for the title bar
FRAMEWIN_GetDefaultTextColor()	Returns the default text color of the title.
FRAMEWIN_GetDefaultTitleHeight()	Returns the default size of the title bar
FRAMEWIN_GetFont()	Returns the font used for the title text.
FRAMEWIN_GetText()	Returns the title text.
FRAMEWIN_GetTextAlign()	Returns the alignment of the title text.
FRAMEWIN_GetTitleHeight()	Returns the height of the title bar.
FRAMEWIN_GetUserData()	Retrieves the data set with FRAMEWIN_SetUserData().
FRAMEWIN_IsMinimized()	Returns if the frame window is minimized or not.
FRAMEWIN_IsMaximized()	Returns if the frame window is maximized or not.
FRAMEWIN_Maximize()	Enlarges the frame window to the size of its parent.
FRAMEWIN_Minimize()	Hides the client area of the frame window.
FRAMEWIN_OwnerDraw()	Default function for drawing the title bar.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
FRAMEWIN_Restore()	Restores a minimized or maximized frame window.
FRAMEWIN_SetActive()	Sets the state of the frame window. (Obsolete)
FRAMEWIN_SetBarColor()	Sets the color of the title bar.
FRAMEWIN_SetBorderSize()	Sets the border size of the frame window.
FRAMEWIN_SetClientColor()	Sets the color of the client area
FRAMEWIN_SetDefaultBarColor()	Sets the default color of the title bar
FRAMEWIN_SetDefaultBorderSize()	Sets the default border size
FRAMEWIN_SetDefaultClientColor()	Sets the default color of the client area.
FRAMEWIN_SetDefaultFont()	Sets the default font used for the title bar.
FRAMEWIN_SetDefaultTextColor()	Sets the default text color of the title.
FRAMEWIN_SetDefaultTitleHeight()	Sets the default height of the title bar
FRAMEWIN_SetFont()	Selects the font used for the title text.
FRAMEWIN_SetMoveable()	Sets the frame window to a moveable/non-moveable state.
FRAMEWIN_SetOwnerDraw()	Enables the frame window to be owner drawn.
FRAMEWIN_SetResizeable()	Sets the frame window to resizable state.
FRAMEWIN_SetText()	Sets the title text.
FRAMEWIN_SetTextAlign()	Sets the alignment of the title text.
FRAMEWIN_SetTextColor()	Sets the color(s) for the title text.
FRAMEWIN_SetTextColorEx()	Sets the color(s) for the title text.
FRAMEWIN_SetTitleHeight()	Sets the height of the title bar.
FRAMEWIN_SetTitleVis()	Sets the visibility flag of the title bar
FRAMEWIN_SetUserData()	Sets the extra data of a FRAMEWIN widget.

FRAMEWIN_AddButton()

Before	After
	

Description

Adds a button to the title bar of the frame window.

Prototype

```
WM_HWIN FRAMEWIN_AddButton(FRAMEWIN_Handle hObj, int Flags,
                           int             Off,  int Id);
```

Parameter	Description
hObj	Handle of frame window.
Flags	(see table below)
Off	X-offset used to create the BUTTON widget
Id	ID of the BUTTON widget

Permitted values for parameter Flags	
0	The BUTTON will be created at the left side.
FRAMEWIN_BUTTON_RIGHT	The BUTTON will be created at the right side.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

Handle of the BUTTON widget.

Additional information

The button will be created as a child window from the frame window. So the window manager keeps sure it will be deleted when the frame window will be deleted.
The button can be created at the left side or at the right side of the title bar depending on the parameter Flags. The parameter Offset specifies the space between the button and the border of the frame window or the space between the previous created button.

FRAMEWIN_AddCloseButton()

Before	After
	

Description

Adds a close button to the title bar of the frame window.

Prototype

```
WM_HWIN FRAMEWIN_AddCloseButton(FRAMEWIN_Handle hObj, int Flags, int Off);
```

Parameter	Description
hObj	Handle of frame window.
Flags	(see table below)
Off	X-offset used to create the BUTTON widget

Permitted values for parameter Index	
0	The BUTTON will be created at the left side.
FRAMEWIN_BUTTON_RIGHT	The BUTTON will be created at the right side.

Return value

Handle of the close button.

Additional information

When the user presses the close button the frame window and all its children will be deleted.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

FRAMEWIN_AddMaxButton()

Before	After	Maximized
		

Description

Adds a maximize button to the title bar of the frame window.

Prototype

```
WM_HWIN FRAMEWIN_AddMaxButton(FRAMEWIN_Handle hObj, int Flags, int Off);
```

Parameter	Description
hObj	Handle of frame window.
Flags	(see table below)
Off	X-offset used to create the BUTTON widget

Permitted values for parameter Index	
0	The BUTTON will be created at the left side.
FRAMEWIN_BUTTON_RIGHT	The BUTTON will be created at the right side.

Return value

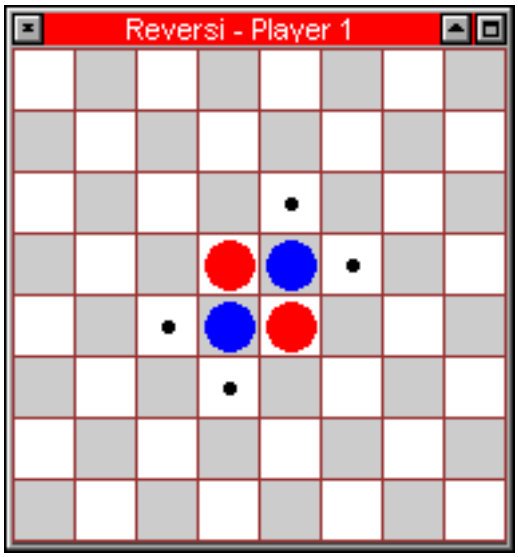
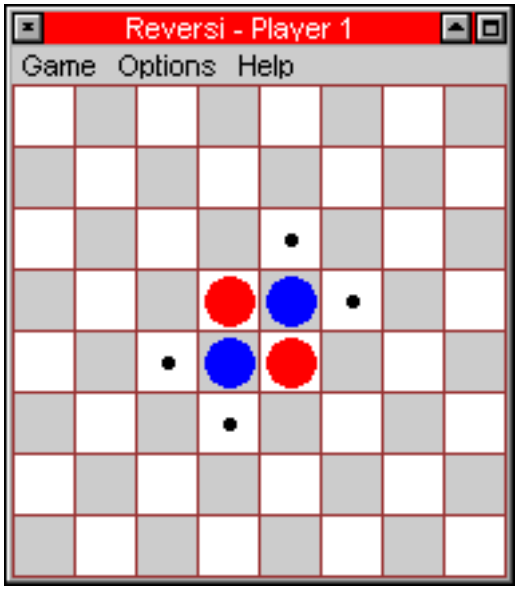
Handle of the maximize button.

Additional information

When the user presses the maximize button the first time the frame window will be enlarged to the size of its parent window. The second use of the button will reduce the frame window to its old size and restores the old position.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

FRAMEWIN_AddMenu()

Before	After
	

Description

Adds the given menu to a frame window. The menu is shown below the title bar.

Prototype

```
void FRAMEWIN_AddMenu(FRAMEWIN_Handle hObj, WM_HWIN hMenu);
```

Parameter	Description
hObj	Handle of frame window.
hMenu	Handle of menu widget to be added.

Additional information

The added menu is attached as a child of the frame window. If the frame window has been created with a callback routine, the function makes sure, that the WM_MENU messages are passed to the client window of the frame window.

FRAMEWIN_AddMinButton()

Before	After	Minimized window
		

Description

Adds a minimize button to the title bar of the frame window.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
WM_HWIN FRAMEWIN_AddMinButton(FRAMEWIN_Handle hObj, int Flags, int Off);
```

Parameter	Description
hObj	Handle of frame window.
Flags	(see table below)
Off	X-offset used to create the BUTTON widget

Permitted values for parameter Index	
0	The BUTTON will be created at the left side.
FRAMEWIN_BUTTON_RIGHT	The BUTTON will be created at the right side.

Return value

Handle of the minimize button.

Additional information

When the user presses the minimize button the first time the client area of the frame window will be hidden and only the title bar remains visible. The second use of the button will restore the frame window to its old size.

FRAMEWIN_Create()

(Obsolete, FRAMEWIN_CreateEx() should be used instead)

Description

Creates a FRAMEWIN widget of a specified size at a specified location.

Prototype

```
FRAMEWIN_Handle FRAMEWIN_Create(const char * pTitle, WM_CALLBACK * cb,
                                int          Flags,
                                int          x0,     int          y0,
                                int          xsize,  int          ysize);
```

Parameter	Description
pTitle	Title displayed in the title bar.
cb	Pointer to callback routine of client area.
Flags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
x0	Leftmost pixel of the frame window (in parent coordinates).
y0	Topmost pixel of the frame window (in parent coordinates).
xsize	Horizontal size of the frame window (in pixels).
ysize	Vertical size of the frame window (in pixels).

Return value

Handle of the created FRAMEWIN widget; 0 if the function fails.

FRAMEWIN_CreateAsChild()

(Obsolete, FRAMEWIN_CreateEx should be used instead)

Description

Creates a FRAMEWIN widget as a child window.

Prototype

```
FRAMEWIN_Handle FRAMEWIN_CreateAsChild(int          x0,     int y0,
                                       int          xsize,  int ysize,
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                                    WM_HWIN       hParent,
                                    const char  * pText,
                                    WM_CALLBACK * cb,      int Flags);
```

Parameter	Description
x0	X-position of the frame window relative to the parent window.
y0	Y-position of the frame window relative to the parent window.
xsize	Horizontal size of the frame window (in pixels).
ysize	Vertical size of the frame window (in pixels).
hParent	Handle of parent window.
pText	Text to be displayed in the title bar.
cb	Pointer to callback routine.
Flags	Window create flags (see FRAMEWIN_Create()).

Return value

Handle of the created FRAMEWIN widget; 0 if the function fails.

FRAMEWIN_CreateEx()

Description

Creates a FRAMEWIN widget of a specified size at a specified location.

Prototype

```
FRAMEWIN_Handle FRAMEWIN_CreateEx(int           x0,      int y0,
                                  int           xsize,   int ysize,
                                  WM_HWIN       hParent, int WinFlags,
                                  int           ExFlags, int Id,
                                  const char  * pTitle,
                                  WM_CALLBACK * cb);
```

Parameter	Description
x0	Leftmost pixel of the widget (in parent coordinates).
y0	Topmost pixel of the widget (in parent coordinates).
xsize	Horizontal size of the widget (in pixels).
ysize	Vertical size of the widget (in pixels).
hParent	Handle of parent window. If 0, the new FRAMEWIN widget will be a child of the desktop (top-level window).
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
ExFlags	(see table below)
Id	Window ID of the widget.
pTitle	Title displayed in the title bar.
cb	Pointer to user callback routine. This user callback routine is called by the window callback routine of the client window.

Permitted values for parameter ExFlags	
0	No function.
FRAMEWIN_CF_MOVEABLE	Sets the new frame window to a moveable state. For details, refer to "FRAMEWIN_SetMoveable()" on page 437.

Return value

Handle of the created FRAMEWIN widget; 0 if the function fails.

Additional information

The user callback routine is typically used for 2 purposes:

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

- to paint the client window (if filling with a color is not desired)
- to react to messages of child windows, typically dialog elements

The normal behaviour of the client window is to paint itself, filling the entire window with the client color.
If the user callback also fills the client window (or a part of it), it can be desirable to set the client color to GUI_INVALID_COLOR, causing the window callback to not fill the client window.
The user callback of the client window does not receive all messages sent to the client window; some system messages are completely handled by the window callback routine and are not passed to the user callback. All notification messages as well as WM_PAINT and all user messages are sent to the user callback routine.
The handle received by the user callback is the handle of the frame window (the parent window of the client window), except for the WM_PAINT message, which receives the handle of the client window.

FRAMEWIN_CreateIndirect()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateIndirect(). The elements Flags and Para of the resource passed as parameter are not used.

FRAMEWIN_CreateUser()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateUser(). For a detailed description of the parameters the function FRAMEWIN_CreateEx() can be referred to.

FRAMEWIN_GetActive()

Description

Returns if the given frame window is in active state or not.

Prototype

```
GUI_COLOR FRAMEWIN_GetBarColor(FRAMEWIN_Handle hObj, unsigned Index);
```

Parameter	Description
hObj	Handle of frame window.

Return value

1 if frame window is in active state, 0 if not.

FRAMEWIN_GetBarColor()

Description

Returns the color of the title bar of the given frame window.

Prototype

```
GUI_COLOR FRAMEWIN_GetBarColor(FRAMEWIN_Handle hObj, unsigned Index);
```

Parameter	Description
hObj	Handle of frame window.
Index	(see table below)

Permitted values for parameter Index	
0	Returns the bar color used when frame window is inactive.
1	Returns the bar color used when frame window is active.

Return value

Color of the title bar as RGB value.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

FRAMEWIN_GetBorderSize()

Description

Returns the border size of the given frame window.

Prototype

```
int FRAMEWIN_GetBorderSize(FRAMEWIN_Handle hObj);
```

Parameter	Description
hObj	Handle of frame window.

Return value

The border size of the given frame window.

FRAMEWIN_GetDefaultBarColor()

Description

Returns the default color for title bars in frame windows.

Prototype

```
const GUI_COLOR* FRAMEWIN_GetDefaultBarColor(unsigned int Index);
```

Parameter	Description
Index	(see table below)

Permitted values for parameter Index	
0	Returns the bar color used when frame window is inactive.
1	Returns the bar color used when frame window is active.

Return value

Pointer to the default title bar color used for frame windows in the specified state.

FRAMEWIN_GetDefaultBorderSize()

Description

Returns the default size of a frame window border.

Prototype

```
int FRAMEWIN_GetDefaultBorderSize(void);
```

Return value

Default size of a frame window border.

FRAMEWIN_GetDefaultClientColor()

Description

Returns the default color of client areas in frame windows.

Prototype

```
const GUI_COLOR* FRAMEWIN_GetDefaultClientColor(void);
```

Return value

Pointer to the default client area color.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

FRAMEWIN_GetDefaultFont()

Description

Returns the default font used for frame window captions.

Prototype

```
const GUI_FONT* FRAMEWIN_GetDefaultFont(void);
```

Return value

Pointer to the default font used for frame window captions.

FRAMEWIN_GetDefaultTextColor()

Description

Returns the default text color of the title.

Prototype

```
GUI_COLOR FRAMEWIN_GetDefaultTextColor(unsigned Index);
```

Parameter	Description
Index	(see table below)

Permitted values for parameter Index	
0	Color to be used when frame window is inactive.
1	Color to be used when frame window is active.

Return value

Default text color of the title.

FRAMEWIN_GetFont()

Description

Returns a pointer to the font used to draw the title text.

Prototype

```
const GUI_FONT GUI_UNI_PTR * FRAMEWIN_GetFont(FRAMEWIN_Handle hObj);
```

Parameter	Description
hObj	Handle of frame window.

Return value

Pointer to the font used to draw the title text.

FRAMEWIN_GetText()

Description

Returns the title text.

Prototype

```
void FRAMEWIN_GetText(FRAMEWIN_Handle hObj, char * pBuffer, int MaxLen);
```

Parameter	Description
hObj	Handle of frame window.
pBuffer	Pointer to buffer to be filled with the title text.
MaxLen	Buffer size in bytes.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

If the buffer size is smaller than the title text the function copies `MaxLen`.

FRAMEWIN_GetTextAlign()

Description

Returns the text alignment of the title text.

Prototype

```
int FRAMEWIN_GetTextAlign(FRAMEWIN_Handle hObj);
```

Parameter	Description
hObj	Handle of frame window.

Return value

The currently used text alignment. For details about text alignment, refer to"GUI_SetTextAlign()" on page 82.

FRAMEWIN_GetDefaultTitleHeight()

Description

Returns the default height of title bars in frame windows.

Prototype

```
int FRAMEWIN_GetDefaultCaptionSize(void);
```

Return value

Default title bar height. For more informations about the title height, refer to "FRAMEWIN_SetDefaultTitleHeight()" on page 437.

FRAMEWIN_GetTitleHeight()

Description

Returns the height of title bar of the given frame window.

Prototype

```
int FRAMEWIN_GetTitleHeight(FRAMEWIN_Handle hObj);
```

Parameter	Description
hObj	Handle of frame window.

Return value

The height of title bar of the given frame window. For more informations about the title height, refer to "FRAMEWIN_SetDefaultTitleHeight()" on page 437.

FRAMEWIN_GetUserData()

Prototype explained at the beginning of the chapter as `<WIDGET>_GetUserData()`.

FRAMEWIN_IsMaximized()

Description

Returns if the frame window is maximized or not.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
int FRAMEWIN_IsMaximized(FRAMEWIN_Handle hObj);
```

Parameter	Description
hObj	Handle of frame window.

Return value

1 if the frame window is maximized, 0 if not.

FRAMEWIN_IsMinimized()

Description

Returns if the frame window is minimized or not.

Prototype


```
int FRAMEWIN_IsMinimized(FRAMEWIN_Handle hObj);
```

Parameter	Description
hObj	Handle of frame window.

Return value

1 if the frame window is minimized, 0 if not.

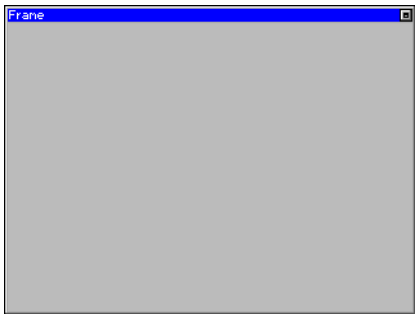FRAMEWIN_Maximize()

Before	After
	

Description

Enlarges a frame window to the size of its parent window.

Prototype

```
void FRAMEWIN_Maximize(FRAMEWIN_Handle hObj);
```

Parameter	Description
hObj	Handle of frame window.

Additional information

When calling this function the frame window will show the same behavior as when the user presses the maximize button. The frame window will be enlarged to the size of its parent window.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

FRAMEWIN_Minimize()

Before	After
	

Description

Hides the client area of the given frame window.

Prototype

```
void FRAMEWIN_Minimize(FRAMEWIN_Handle hObj);
```

Parameter	Description
hObj	Handle of frame window.

Additional information

When calling this function the frame window will show the same behavior as when the user presses the minimize button. The client area of the frame window will be hidden and only the title bar remains visible.

FRAMEWIN_OwnerDraw()

Description

Default function for drawing the title bar of a frame window.

Prototypes

```
int FRAMEWIN_OwnerDraw(const WIDGET_ITEM_DRAW_INFO * pDrawItemInfo);
```

Parameter	Description
pDrawItemInfo	Pointer to a WIDGET_ITEM_DRAW_INFO structure.

Additional information

This function is useful if FRAMEWIN_SetOwnerDraw() is used. It should be called for all unhandled commands passed to the owner draw function. For more information, refer to the section explaining user drawn widgets and FRAMEWIN_SetOwnerDraw().

FRAMEWIN_Restore()

Before	After
	

Description

Restores a minimized or maximized frame window to its old size and position.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void FRAMEWIN_Restore(FRAMEWIN_Handle hObj);
```

Parameter	Description
hObj	Handle of frame window.

Additional information

If the given frame window is neither maximized nor minimized the function takes no effect.

FRAMEWIN_SetActive()

Before	After
	

Description

Sets the state of a specified frame window. Depending on the state, the color of the title bar will change.

Prototype

```
void FRAMEWIN_SetActive(FRAMEWIN_Handle hObj, int State);
```

Parameter	Description
hObj	Handle of frame window.
State	State of frame window (see table below).

Permitted values for parameter State	
0	Frame window is inactive.
1	Frame window is active.

Additional information

This function is obsolete. If pointing with a input device to a child of a frame window the frame window will become active automatically. It is not recommended to use this function. If using this function to set a frame window to active state, it is not warranted that the state becomes inactive if an other frame window becomes active.

FRAMEWIN_SetBarColor()

Before	After
	

Description

Sets the color of the title bar of a specified frame window.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void FRAMEWIN_SetBarColor(FRAMEWIN_Handle hObj,   unsigned int Index,
                          GUI_COLOR       Color);
```

Parameter	Description
hObj	Handle of frame window.
Index	Index for state of frame window (see table below).
Color	Color to be set.

Permitted values for parameter Index	
0	Sets the color to be used when frame window is inactive.
1	Sets the color to be used when frame window is active.

FRAMEWIN_SetBorderSize()

Before	After
	

Description

Sets the border size of a specified frame window.

Prototype

```
void FRAMEWIN_SetBorderSize(FRAMEWIN_Handle hObj, unsigned Size);
```

Parameter	Description
hObj	Handle of frame window.
Size	New border size of the frame window.

FRAMEWIN_SetClientColor()

Before	After
	

Description

Sets the color of the client window area of a specified frame window.

Prototype

```
void FRAMEWIN_SetClientColor(FRAMEWIN_Handle hObj, GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of frame window.
Color	Color to be set.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

FRAMEWIN_SetDefaultBarColor()

Description

Sets the default color for title bars in frame windows.

Prototype

```
void FRAMEWIN_SetDefaultBarColor(unsigned int Index, GUI_COLOR Color);
```

Parameter	Description
Index	Index for state of frame window (see table below).
Color	Color to be set.

Permitted values for parameter Index	
0	Sets the color to be used when frame window is inactive.
1	Sets the color to be used when frame window is active.

FRAMEWIN_SetDefaultBorderSize()

Description

Sets the default border size of frame windows.

Prototype

```
void FRAMEWIN_SetDefaultBorderSize(int BorderSize);
```

Parameter	Description
BorderSize	Size to be set.

FRAMEWIN_SetDefaultClientColor()

Description

Sets the default color for client areas in frame windows.

Prototype

```
void FRAMEWIN_SetDefaultClientColor(GUI_COLOR Color);
```

Parameter	Description
Color	Color to be set.

FRAMEWIN_SetDefaultFont()

Description

Sets the default font used to display the title in frame windows.

Prototype

```
void FRAMEWIN_SetDefaultFont(const GUI_FONT * pFont);
```

Parameter	Description
pFont	Pointer to font to be used as default

FRAMEWIN_SetDefaultTextColor()

Description

Sets the default text color of the title.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void FRAMEWIN_SetDefaultTextColor(unsigned Index, GUI_COLOR Color);
```

Parameter	Description
Index	(see table below)
Color	Color to be used.

Permitted values for parameter Index	
0	Color to be used when frame window is inactive.
1	Color to be used when frame window is active.

FRAMEWIN_SetDefaultTitleHeight()

Description

Sets the size in Y for the title bar.

Prototype

```
void FRAMEWIN_SetDefaultTitleHeight(int Height);
```

Parameter	Description
Height	Size to be set

Additional information

The default value of the title height is 0. That means the height of the title depends on the font used to display the title text. If the default value is set to a value > 0 each new frame window will use this height for the title height and not the height of the font of the title.

FRAMEWIN_SetFont()

Before	After
	

Description

Sets the title font.

Prototype

```
void FRAMEWIN_SetFont(FRAMEWIN_Handle hObj, const GUI_FONT * pfont);
```

Parameter	Description
hObj	Handle of frame window.
pFont	Pointer to the font.

FRAMEWIN_SetMoveable()

Description

Sets a frame window to a moveable or fixed state.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void FRAMEWIN_SetMoveable(FRAMEWIN_Handle hObj, int State);
```

Parameter	Description
hObj	Handle of frame window.
State	State of frame window (see table below).

Permitted values for parameter State	
0	Frame window is fixed (non-moveable).
1	Frame window is moveable.

Additional information

The default state of a frame window after creation is fixed.
Moveable state means, the frame window can be dragged with a pointer input device (PID). To move the frame window, it first needs to be touched with a PID in pressed state in the title area. Moving the pressed PID now moves also the widget.
If the config macro FRAMEWIN_ALLOW_DRAG_ON_FRAME is 1 (default), the frame window can also be dragged on the surrounding frame. This works only if the frame window is not in resizable state.

FRAMEWIN_SetOwnerDraw()

Description

Enables the frame window to be owner drawn.

Prototype

```
void FRAMEWIN_SetOwnerDraw(FRAMEWIN_Handle          hObj,
                           WIDGET_DRAW_ITEM_FUNC * pfDrawItem);
```

Parameter	Description
hObj	Handle of frame window.
pfDrawItem	Pointer to owner draw function.

Additional information

This function sets a function pointer to a function which will be called by the widget if a frame window has to be drawn. It gives you the possibility to draw a complete customized title bar, not just plain text. pfDrawItem is a pointer to an application-defined function of type WIDGET_DRAW_ITEM_FUNC which is explained at the beginning of the chapter.

Example

The following shows a typical owner draw function:

```
int _OwnerDraw(const WIDGET_ITEM_DRAW_INFO * pDrawItemInfo) {
  GUI_RECT Rect;
  char acBuffer[20];
  switch (pDrawItemInfo->Cmd) {
  case WIDGET_ITEM_DRAW:
    Rect.x0 = pDrawItemInfo->x0 + 1;
    Rect.x1 = pDrawItemInfo->x1 - 1;
    Rect.y0 = pDrawItemInfo->y0 + 1;
    Rect.y1 = pDrawItemInfo->y1;
    FRAMEWIN_GetText(pDrawItemInfo->hWin, acBuffer, sizeof(acBuffer));
    GUI_DrawGradientH(pDrawItemInfo->x0, pDrawItemInfo->y0,
                      pDrawItemInfo->x1, pDrawItemInfo->y1,
                      GUI_RED, GUI_GREEN);
    GUI_SetFont(FRAMEWIN_GetFont(pDrawItemInfo->hWin));
    GUI_SetTextMode(GUI_TM_TRANS);
    GUI_SetColor(GUI_YELLOW);
    GUI_DispStringInRect(acBuffer, &Rect,
                         FRAMEWIN_GetTextAlign(pDrawItemInfo->hWin));
    return 0;
  }
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG



```
  return FRAMEWIN_OwnerDraw(pDrawItemInfo);
}

void CreateFrameWindow(void) {
  ...
  FRAMEWIN_SetOwnerDraw(hWin, _OwnerDraw);
  ...
}
```

Screenshot of above example



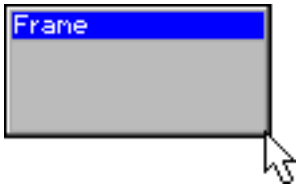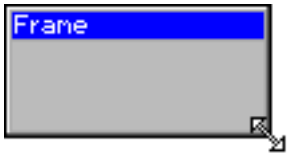FRAMEWIN_SetResizeable()

Before	After
	

Description

Sets the resizable state of the given frame window.

Prototype


```
void FRAMEWIN_SetResizeable(FRAMEWIN_Handle hObj, int State);
```

Parameter	Description
hObj	Handle of frame window.
State	1 if the frame window should be resizable, 0 if not.

Additional information

If the frame window is in resizable state its size can be changed by dragging the borders. If a pointer input device points over the border, the cursor will change to a resize cursor (if cursor is on and if optional mouse support is enabled).
If pointing to the edge of the border, the X and Y size of the window can be changed simultaneously.

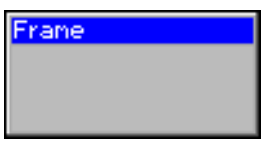FRAMEWIN_SetText()

Before	After
	

Description

Sets the title text.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void FRAMEWIN_SetText(FRAMEWIN_Handle hObj, const char * s);
```

Parameter	Description
hObj	Handle of frame window.
s	Text to display as the title.

FRAMEWIN_SetTextAlign()

Before	After
	

Description

Sets the text alignment of the title bar.

Prototype

```
void FRAMEWIN_SetTextAlign(FRAMEWIN_Handle hObj, int Align);
```

Parameter	Description
hObj	Handle of frame window.
Align	Alignment attribute for the title (see table below).

Permitted values for parameter Align	
GUI_TA_HCENTER	Centers the title (default).
GUI_TA_LEFT	Displays the title to the left.
GUI_TA_RIGHT	Displays the title to the right.

Additional information

If this function is not called, the default behavior is to display the text centered.

FRAMEWIN_SetTextColor()

Before	After
	

Description

Sets the color of the title text for both states, active and inactive.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void FRAMEWIN_SetTextColor(FRAMEWIN_Handle hObj, GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of frame window.
Color	Color to be set.

FRAMEWIN_SetTextColorEx()

Before	After
	

Description

Sets the text color for the given state.


Prototype

```
void FRAMEWIN_SetTextColorEx(FRAMEWIN_Handle hObj,   unsigned Index,
                             GUI_COLOR       Color);
```

Parameter	Description
hObj	Handle of frame window.
Index	(see table below)
Color	Color to be used.

Permitted values for parameter Index	
0	Color to be used when frame window is inactive.
1	Color to be used when frame window is active.

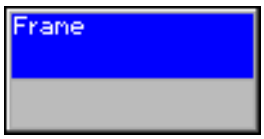FRAMEWIN_SetTitleHeight()

Before	After
	

Description

Sets the height of the title bar.

Prototype

```
int FRAMEWIN_SetTitleHeight(FRAMEWIN_Handle hObj, int Height);
```


Parameter	Description
hObj	Handle of frame window.
Height	Height of the title bar.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

Per default the height of the title bar depends on the size on the font used to display the title text. When using FRAMEWIN_SetTitleHeight the height will be fixed to the given value. Changes of the font takes no effect concerning the height of the title bar. A value of 0 will restore the default behavior.

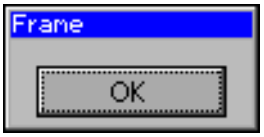FRAMEWIN_SetTitleVis()

Before	After
	

Description

Sets the visibility flag of the title bar.

Prototype

```
void FRAMEWIN_SetTitleVis(FRAMEWIN_Handle hObj, int Show);
```

Parameter	Description
hObj	Handle of frame window.
Show	1 for visible (default), 0 for hidden

FRAMEWIN_SetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_SetUserData().

17.8.5 Example

The Sample folder contains the following example which shows how the widget can be used:

- WIDGET_FrameWin.c

Note that several other examples also make use of this widget and may also be helpful to get familiar with the widget.

Screen shot of WIDGET_FrameWin.c:



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.9 GRAPH: Graph widget


Graph widgets can be used to visualize data. Typical applications for graph widgets are showing measurement values or the curve of a function graph. Multiple curves can be shown simultaneously. Horizontal and vertical scales can be used to label the curves. A grid with different horizontal and vertical spacing can be shown on the background. If the data array does not fit into the visible area of the graph, the widget can automatically show scrollbars which allow scrolling through large data arrays.

17.9.1 Structure of the graph widget

A graph widget consists of different kinds objects:

- The graph widget itself to which data objects and scale objects can be attached.
- Optionally one or more data objects.
- Optionally one or more scale objects.

The following diagram shows the detailed structure of a graph widget:

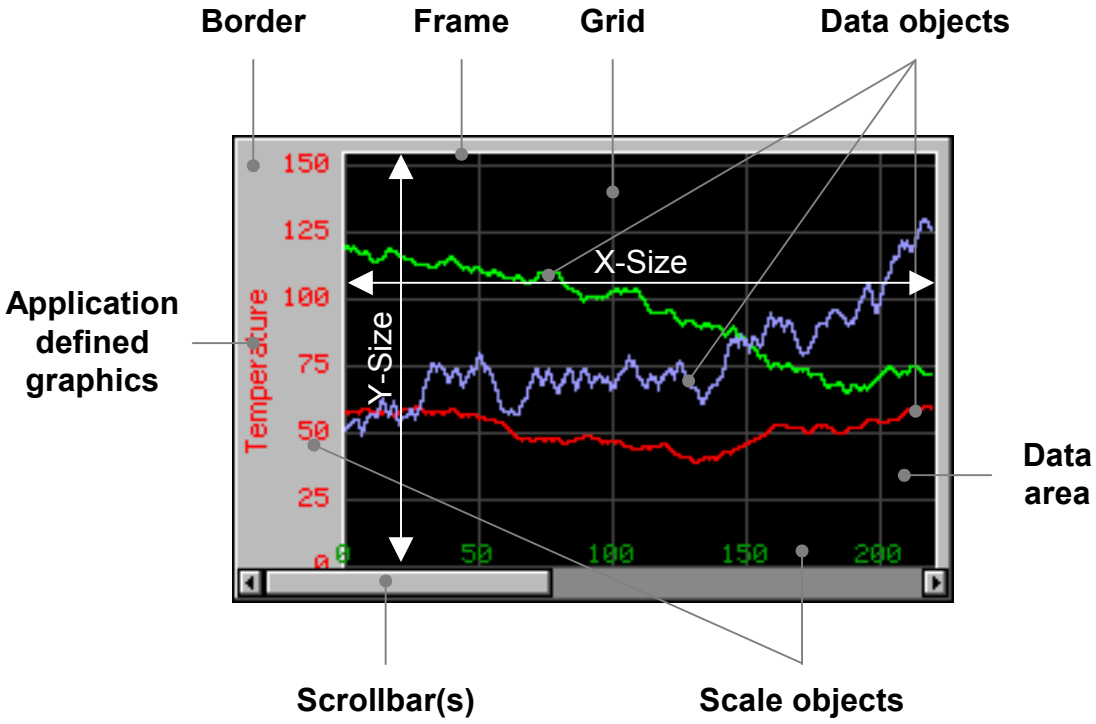

The following table explains the details of the diagram above:

Detail	Description
Border	The optional border is part of the graph widget.
Frame	A thin line around the data area, part of the graph widget.
Grid	Shown in the background of the data area, part of the graph widget.
Data area	Area, in which grid and data objects are shown.
Data object(s)	For each curve one data object should be added to the graph widget.
Application defined graphic	An application defined callback function can be used to draw any application defined text and/or graphics.
Scrollbar(s)	If the range of the data object is bigger than the data area of the graph widget, the graph widget can automatically show a horizontal and/or a vertical scrollbar.
Scale object(s)	Horizontal and vertical scales can be attached to the graph widget.
X-Size	X-Size of the data area.
Y-Size	Y-Size of the data area.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.9.2 Creating and deleting a graph widget

The process of creating a graph widget should be the following:

- Create the graph widget and set the desired attributes.
- Create the data object(s).
- Attach the data object(s) to the graph widget.
- Create the optional scale object(s).
- Attach the scale object(s) to the graph widget.

Once attached to the graph widget the data and scale objects need not to be deleted by the application. This is done by the graph widget.

Example

The following shows a small example how to create and delete a graph widget:

```
GRAPH_DATA_Handle  hData;
GRAPH_SCALE_Handle hScale;
WM_HWIN hGraph;
hGraph = GRAPH_CreateEx(10, 10, 216, 106, WM_HBKWIN, WM_CF_SHOW, 0, GUI_ID_GRAPH0);
hData  = GRAPH_DATA_YT_Create(GUI_DARKGREEN, NumDataItems, aData0, MaxNumDataItems);
GRAPH_AttachData(hGraph, hData);
hScale = GRAPH_SCALE_Create(28, GUI_TA_RIGHT, GRAPH_SCALE_CF_VERTICAL, 20);
GRAPH_AttachScale(hGraph, hScale);
/*
  Do something with the widget...
*/
WM_DeleteWindow(hGraph);
```



17.9.3 Drawing process

As explained above a graph widget consists of different parts and 'sub' objects. The following will explain, in which sequence the widget is drawn:

1. Filling the background with the background color.
2. Calling an optional callback routine. This makes it possible to draw for example a user defined grid.
3. Drawing the grid (if enabled).
4. Drawing the data objects and the border area.
5. Drawing the scale objects.
6. Calling an optional callback routine. This makes it possible to draw for example a user defined scale or some additional text and/or graphics.

17.9.4 Supported types of curves

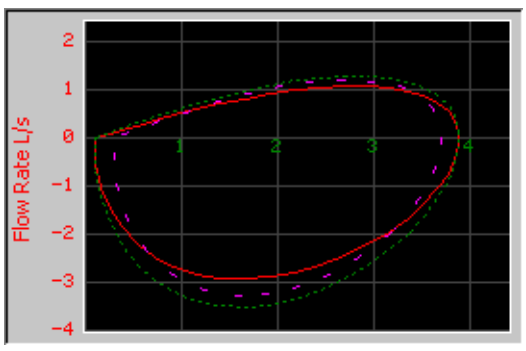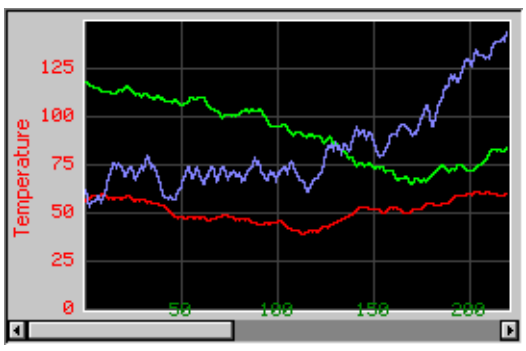The requirements for showing a curve with continuously updated measurement values can be different to the requirements when showing a function graph with X/Y coordinates. For that reason the widget currently supports 2 kinds of data objects, which are shown in the table below:

GRAPH_DATA_XY	GRAPH_DATA_YT
	

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.9.4.1 GRAPH_DATA_XY

This data object is used to show curves which consist of an array of points. The object data is drawn as a polyline. A typical application for using this data object is drawing a function graph.

17.9.4.2 GRAPH_DATA_YT

This data object is used to show curves with one Y-value for each X-position on the graph. A typical application for using this data object is showing a curve with continuously updated measurement values.

17.9.5 Configuration options

17.9.5.1 Graph widget

Type	Macro	Default	Description
N	GRAPH_BKCOLOR_DEFAULT	GUI_BLACK	Default background color of the data area.
N	GRAPH_BORDERCOLOR_DEFAULT	0xC0C0C0	Default background color of the border.
N	GRAPH_FRAMECOLOR_DEFAULT	GUI_WHITE	Default color of the thin frame line.
N	GRAPH_GRIDCOLOR_DEFAULT	GUI_DARKGRAY	Default color used to draw the grid.
N	GRAPH_GRIDSPACING_X_DEFAULT	50	Default horizontal spacing of the grid.
N	GRAPH_GRIDSPACING_Y_DEFAULT	50	Default vertical spacing of the grid.
N	GRAPH_BORDER_L_DEFAULT	0	Default size of the left border.
N	GRAPH_BORDER_T_DEFAULT	0	Default size of the top border.
N	GRAPH_BORDER_R_DEFAULT	0	Default size of the right border.
N	GRAPH_BORDER_B_DEFAULT	0	Default size of the bottom border.

17.9.5.2 Scale object

Type	Macro	Default	Description
N	GRAPH_SCALE_TEXTCOLOR_DEFAULT	GUI_WHITE	Default text color.
S	GRAPH_SCALE_FONT_DEFAULT	&GUI_Font6x8	Default font used to draw the values.

17.9.6 Keyboard reaction

The widget can not gain the input focus and does not react on keyboard input.

17.9.7 GRAPH API

The table below lists the available emWin GRAPH-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
Common routines	
GRAPH_AttachData()	Attaches a data object to a GRAPH widget.
GRAPH_AttachScale()	Attaches a scale object to a GRAPH widget.
GRAPH_CreateEx()	Creates a GRAPH widget.
GRAPH_CreateIndirect()	Creates a GRAPH widget from a resource table entry
GRAPH_CreateUser()	Creates a GRAPH widget using extra bytes as user data.
GRAPH_DetachData()	Detaches a data object from a GRAPH widget.
GRAPH_DetachScale()	Detaches a scale object from a GRAPH widget.
GRAPH_GetUserData()	Retrieves the data set with GRAPH_SetUserData().
GRAPH_SetBorder()	Sets the size (right, left, top and bottom) of the border.



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
GRAPH_SetColor()	Sets the color of the GRAPH widget.
GRAPH_SetGridDistX()	Sets the horizontal grid spacing.
GRAPH_SetGridDistY()	Sets the vertical grid spacing.
GRAPH_SetGridFixedX()	Fixes the grid in X-axis.
GRAPH_SetGridVis()	Enables the drawing of a grid.
GRAPH_SetLineStyleH()	Sets the line style for the horizontal grid lines.
GRAPH_SetLineStyleV()	Sets the line style for the vertical grid lines.
GRAPH_SetUserData()	Sets the extra data of a GRAPH widget.
GRAPH_SetUserDraw()	Sets the user callback function.
GRAPH_SetVSizeX()	Sets the horizontal range of the GRAPH widget.
GRAPH_SetVSizeY()	Sets the vertical range of the GRAPH widget.
GRAPH_DATA_YT related routines	
GRAPH_DATA_YT_AddValue()	Adds one data item to the GRAPH_DATA_YT object.
GRAPH_DATA_YT_Clear()	Clears all data items of the GRAPH_DATA_YT object.
GRAPH_DATA_YT_Create()	Creates a GRAPH_DATA_YT object.
GRAPH_DATA_YT_Delete()	Deletes a GRAPH_DATA_YT object.
GRAPH_DATA_YT_MirrorX()	Mirrors the x-axis.
GRAPH_DATA_YT_SetAlign()	Sets the alignment of the given GRAPH_DATA_YT object.
GRAPH_DATA_YT_SetOffY()	Sets a vertical offset for drawing the data.
GRAPH_DATA_XY related routines	
GRAPH_DATA_XY_AddPoint()	Adds one point to the GRAPH_DATA_XY object.
GRAPH_DATA_XY_Create()	Creates a GRAPH_DATA_XY object.
GRAPH_DATA_XY_Delete()	Deletes a GRAPH_DATA_XY object.
GRAPH_DATA_XY_SetLineStyle()	Sets the line style used to draw the data.
GRAPH_DATA_XY_SetOffX()	Sets a horizontal offset for drawing the data.
GRAPH_DATA_XY_SetOffY()	Sets a vertical offset for drawing the data.
GRAPH_DATA_XY_SetOwnerDraw()	Sets the owner callback function.
GRAPH_DATA_XY_SetPenSize()	Sets the pen size used to draw the data.
Scale related routines	
GRAPH_SCALE_Create()	Creates a GRAPH_SCALE object.
GRAPH_SCALE_Delete()	Deletes a GRAPH_SCALE object.
GRAPH_SCALE_SetFactor()	Sets a calculation factor used to calculate from pixels to the desired unit.
GRAPH_SCALE_SetFixed()	Avoids scrolling of the scale.
GRAPH_SCALE_SetFont()	Sets the font used to draw the numbers.
GRAPH_SCALE_SetNumDecs()	Sets the number of digits of the fractional portion.
GRAPH_SCALE_SetOff()	Sets an optional offset which is added to the numbers.
GRAPH_SCALE_SetPos()	Sets the horizontal or vertical position of the scale.
GRAPH_SCALE_SetTextColor()	Sets the text color of the scale.
GRAPH_SCALE_SetTickDist()	Sets the distance in pixels between the tick marks.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.9.7.1 Common routines

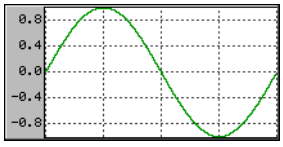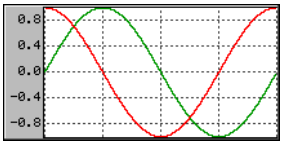GRAPH_AttachData()

Before	After
	

Description

Attaches a data object to an existing graph widget.

Prototype



```
void GRAPH_AddGraph(GRAPH_Handle hObj, GRAPH_DATA_Handle hData);
```

Parameter	Description
hObj	Handle of widget
hData	Handle of the data object to be added to the widget. The data object should be created with GRAPH_DATA_YT_Create() or GRAPH_DATA_XY_Create()

Additional information

Once attached to a graph widget the application needs not to destroy the data object. The graph widget deletes all attached data objects when it is deleted.
For details about how to create data objects, refer to "GRAPH_DATA_YT_Create()" on page 456 and "GRAPH_DATA_XY_Create()" on page 459.

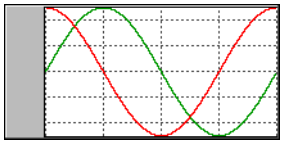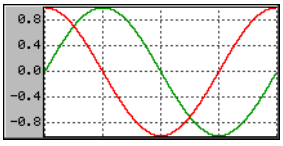GRAPH_AttachScale()

Before	After
	

Description

Attaches a scale object to an existing graph widget.

Prototype

```
void GRAPH_AttachScale(GRAPH_Handle hObj, GRAPH_SCALE_Handle hScale);
```

Parameter	Description
hObj	Handle of widget
hScale	Handle of the scale to be added.

Additional information

Once attached to a graph widget the application needs not to destroy the scale object. The graph widget deletes all attached scale objects when it is deleted.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

For details about how to create scale objects, refer to "GRAPH_SCALE_Create()" on page 463.

GRAPH_CreateEx()

Description

Creates a new GRAPH widget of a specified size at a specified location.

Prototype

```
GRAPH_Handle GRAPH_CreateEx(int     x0,      int y0,
                            int     xsize,   int ysize,
                            WM_HWIN hParent, int WinFlags,
                            int     ExFlags, int Id);
```

Parameter	Description
x0	Leftmost pixel of the widget (in parent coordinates).
y0	Topmost pixel of the widget (in parent coordinates).
xsize	Horizontal size of the widget (in pixels).
ysize	Vertical size of the widget (in pixels).
hParent	Handle of parent window. If 0, the new button window will be a child of the desktop (top-level window).
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to "WM_CreateWindow()" on page 309 for a list of available parameter values).
ExFlags	(see table below)
Id	Window Id of the widget.

Permitted values for parameter ExFlags	
GRAPH_CF_GRID_FIXED_X	This flag 'fixes' the grid in X-axis. That means if horizontal scrolling is used, the grid remains on its position.

Return value

Handle of the created GRAPH widget; 0 if the function fails.

GRAPH_CreateIndirect()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateIndirect().

GRAPH_CreateUser()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateUser(). For a detailed description of the parameters the function GRAPH_CreateEx() can be referred to.

GRAPH_DetachData()

Description

Detaches a data object from a graph widget.

Prototype

```
void GRAPH_DetachData(GRAPH_Handle hObj, GRAPH_DATA_Handle hData);
```

Parameter	Description
hObj	Handle of widget
hData	Handle of the data object to be detached from the widget.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

Once detached from a graph widget the application needs to destroy the data object. Detaching a data object does not delete it. For more details about deleting data objects, refer to "GRAPH_DATA_YT_Delete()" on page 457 and "GRAPH_DATA_XY_Delete()" on page 460.

GRAPH_DetachScale()

Description

Detaches a scale object from a graph widget.

Prototype

```
void GRAPH_DetachScale(GRAPH_Handle hObj, GRAPH_SCALE_Handle hScale);
```

Parameter	Description
hObj	Handle of widget
hScale	Handle of the scale object to be detached from the widget.

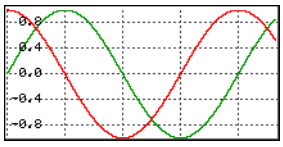
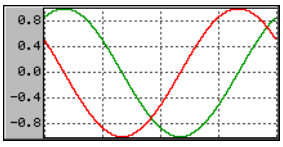
Additional information

Once detached from a graph widget the application needs to destroy the scale object. Detaching a scale object does not delete it. For more details about deleting scale objects, refer to "GRAPH_SCALE_Delete()" on page 463.

GRAPH_GetUserData()

Prototype explained at the beginning of the chapter as `<WIDGET>_GetUserData()`.

GRAPH_SetBorder()

Before	After
	

Description

Sets the left, top, right and bottom border of the given graph widget.

Prototype

```
void GRAPH_SetBorder(GRAPH_Handle hObj,
                     unsigned     BorderL, unsigned BorderT,
                     unsigned     BorderR, unsigned BorderB);
```



Parameter	Description
hObj	Handle of widget.
BorderL	Size in pixels from the left border.
BorderT	Size in pixels from the top border.
BorderR	Size in pixels from the right border.
BorderB	Size in pixels from the bottom border.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

The border size is the number of pixels between the widget effect frame and the data area of the graph widget. The frame, the thin line around the data area, is only visible if the border size is at least one pixel. For details about how to set the color of the border and the thin frame, refer to "GRAPH_SetColor()" on page 450.

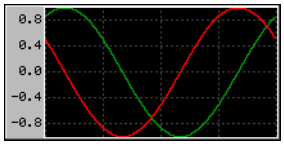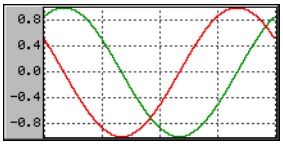GRAPH_SetColor()

Before	After
	

Description

Sets the desired color of the given graph widget.

Prototype

```
GUI_COLOR GRAPH_SetColor(GRAPH_Handle hObj,   GUI_COLOR Color,
                         unsigned     Index);
```



Parameter	Description
hObj	Handle of widget.
Color	Color to be used for the desired item.
Index	(see table below)

Permitted values for parameter Index	
GRAPH_CI_BK	Sets the background color.
GRAPH_CI_BORDER	Sets the color of the border area.
GRAPH_CI_FRAME	Sets the color of the thin frame line.
GRAPH_CI_GRID	Sets the color of the grid.

Return value

Previous color used for the desired item.

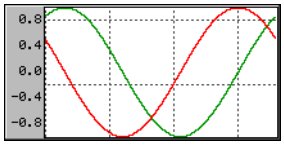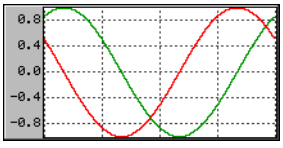GRAPH_SetGridDistX(), GRAPH_SetGridDistY()

Before	After
	

Description

These functions set the distance from one grid line to the next.

Prototypes

```
unsigned GRAPH_SetGridDistX(GRAPH_Handle hObj, unsigned Value);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
unsigned GRAPH_SetGridDistY(GRAPH_Handle hObj, unsigned Value)
```

Parameter	Description
hObj	Handle of widget
Value	Distance in pixels from one grid line to the next, default is 50 pixel.

Return value

Previous grid line distance.

Additional information

The first vertical grid line is drawn at the leftmost position of the data area and the first horizontal grid line is drawn at the bottom position of the data area, except an offset is used.

GRAPH_SetGridFixedX()

Description

Fixes the grid in X-axis.

Prototype

```
unsigned GRAPH_SetGridFixedX(GRAPH_Handle hObj, unsigned OnOff);
```

Parameter	Description
hObj	Handle of widget.
OnOff	1 if grid should be fixed in X-axis, 0 if not (default).

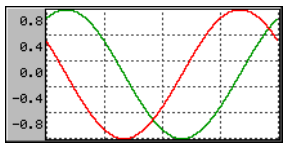
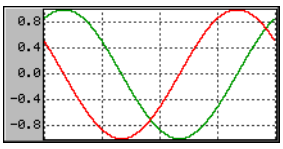
Return value

Previous value used

Additional information

In some situations it can be useful to fix the grid in X-axis. A typical application would be a YT-graph, to which continuously new values are added and horizontal scrolling is possible. In this case it could be desirable to fix the grid in the background.
For details about how to activate scrolling for a graph widget, refer to “GRAPH_SetVSizeX(), GRAPH_SetVSizeY()” on page 454.

GRAPH_SetGridOffY()

Before	After
	

Description

Adds an offset used to show the horizontal grid lines.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
unsigned GRAPH_SetGridOffY(GRAPH_Handle hObj, unsigned Value);
```

Parameter	Description
hObj	Handle of widget.
Value	Offset to be used.

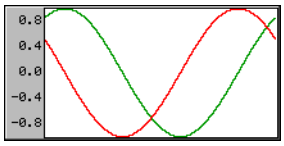
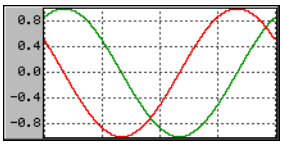
Return value

Previous offset used to draw the horizontal grid lines.

Additional information

When rendering the grid the widget starts drawing the horizontal grid lines from the bottom of the data area and uses the current spacing. In case of a zero point in the middle of the Y-axis it could happen, that there is no grid line in the middle. In this case the grid can be shifted in Y-axis by adding an offset with this function. A positive value shifts the grid down and negative values shifts it up.
For details about how to set the grid spacing, refer to the functions "GRAPH_SetGridDistX(), GRAPH_SetGridDistY()" on page 450.

GRAPH_SetGridVis()

Before	After
	

Description

Sets the visibility of the grid lines.

Prototype

```
unsigned GRAPH_SetGridVis(GRAPH_Handle hObj, unsigned OnOff);
```



Parameter	Description
hObj	Handle of widget.
OnOff	1 if the grid should be visible, 0 if not (default).

Return value

Previous value of the grid visibility.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

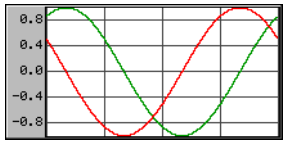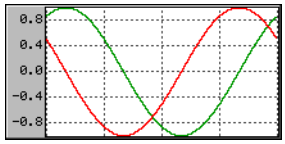GRAPH_SetLineStyleH(), GRAPH_SetLineStyleV()

Before	After
	

Description

These functions are used to set the line style used to draw the horizontal and vertical grid lines.

Prototypes

```
U8 GRAPH_SetLineStyleH(GRAPH_Handle hObj, U8 LineStyle);
U8 GRAPH_SetLineStyleV(GRAPH_Handle hObj, U8 LineStyle);
```

Parameter	Description
hObj	Handle of widget.
LineStyle	Line style to be used. For details about the supported line styles, refer to "GUI_SetLineStyle()" on page 125. Default is GUI_LS_SOLID.

Return value

Previous line style used to draw the horizontal/vertical grid lines.

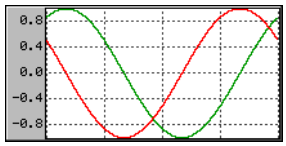
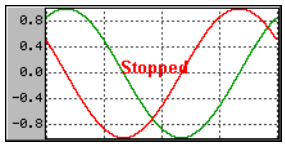
Additional information

Note that using other styles than GUI_LS_SOLID will need more time to show the grid.

GRAPH_SetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_SetUserData().

GRAPH_SetUserDraw()

Before	After
	

Description

Sets the user draw function. This function is called by the widget during the drawing process to give the application the possibility to draw user defined data.

Prototype

```
void GRAPH_SetUserDraw(GRAPH_Handle hObj,
                       void (* pUserDraw)(WM_HWIN hObj, int Stage));
```

Parameter	Description
hObj	Handle of widget
pUserDraw	Pointer to application function to be called by the widget during the drawing process.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for parameter Stage	
GRAPH_DRAW_FIRST	Function call after filling the background of the data area. Gives the application for example the possibility to draw a user defined grid.
GRAPH_DRAW_LAST	Function call after drawing all graph items. Gives the application for example the possibility to label the data with a user defined scale.

Additional information

The user draw function is called at the beginning after filling the background of the data area and after drawing all graph items like described at the beginning of the chapter. On the first call the clipping region is limited to the data area. On the last call it is limited to the complete graph widget area except the effect frame.

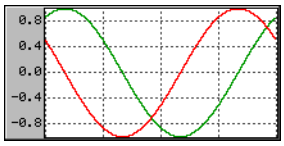
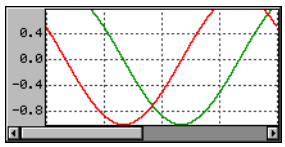
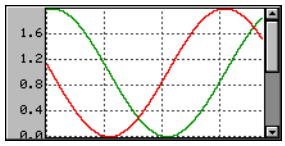
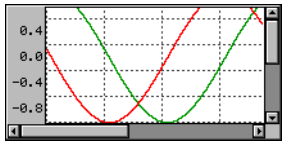
Example

The following small example shows the use of a user draw function:

```
static void _UserDraw(WM_HWIN hWin, int Stage) {
  switch (Stage) {
  case GRAPH_DRAW_FIRST:
    /* Draw for example a user defined grid... */
    break;
  case GRAPH_DRAW_LAST:
    /* Draw for example a user defined scale or additional text... */
    break;
  }
}

static void _CreateGraph(void) {
  WM_HWIN hGraph;
  hGraph = GRAPH_CreateEx(10, 10, 216, 106, WM_HBKWIN, WM_CF_SHOW, 0, GUI_ID_GRAPH0);
  GRAPH_SetUserDraw(hGraph, _UserDraw); /* Enable user draw */
  ...
}
```

GRAPH_SetVSizeX(), GRAPH_SetVSizeY()

Before	After
	  

Description

The functions set the virtual size in X and Y-axis.

Prototypes

```
unsigned GRAPH_SetVSizeX(GRAPH_Handle hObj, unsigned Value);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
unsigned GRAPH_SetVSizeY(GRAPH_Handle hObj, unsigned Value);
```

Parameter	Description
hObj	Handle of widget.
Value	Virtual size in pixels in X or Y axis.

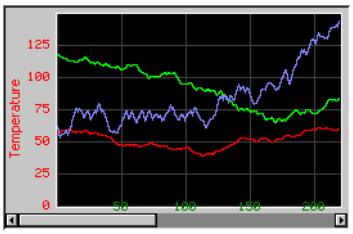
Return value

Previous virtual size of the widgets data area in X or Y-axis.



Additional information

If the widgets virtual size is bigger than the visible size of the data area, the widget automatically shows a scrollbar. If for example a data object, created by the function GRAPH_DATA_YT_Create(), contains more data than can be shown in the data area, the function GRAPH_SetVSizeX() can be used to enable scrolling. A function call like GRAPH_SetVSizeX(NumDataItems) enables the horizontal scrollbar, provided that the number of data items is bigger than the X-size of the visible data area.

17.9.7.2 GRAPH_DATA_YT related routines



GRAPH_DATA_YT_AddValue()

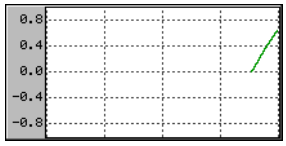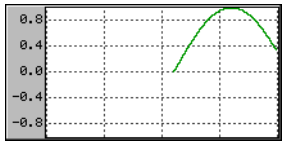Before	After
	

Description

Adds a new data item to a GRAPH_DATA_YT object.

Prototype

```
void GRAPH_DATA_YT_AddValue(GRAPH_DATA_Handle hDataObj, I16 Value);
```


Parameter	Description
hDataObj	Handle of data object.
Value	Value to be added to the data object.

Additional information



The given data value is added to the data object. If the data object is 'full', that means it contains as many data items as specified in parameter MaxNumItems during the creation, it first shifts the data items by one before adding the new value. So the first data item is shifted out when adding a data item to a 'full' object.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

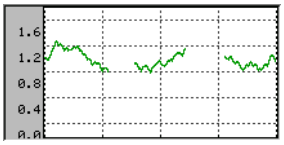The value 0x7FFF can be used to handle invalid data values. These values are excluded when drawing the graph. The following screenshot shows a graph with 2 gaps of invalid data:



GRAPH_DATA_YT_Clear()

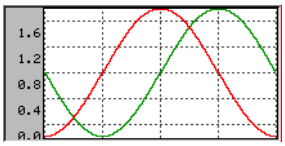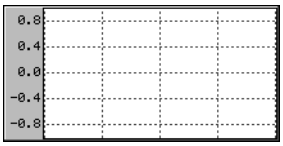Before	After
	

Description

Clears all data items of the data object.

Prototype

```
void GRAPH_DATA_YT_Clear(GRAPH_DATA_Handle hDataObj);
```

Parameter	Description
hDataObj	Handle of data object.

GRAPH_DATA_YT_Create()

Description

Creates a GRAPH_DATA_YT object. This kind of object requires for each point on the x-axis a value on the y-axis. Typically used for time related graphs.

Prototype

```
GRAPH_DATA_Handle GRAPH_DATA_YT_Create(GUI_COLOR   Color,
                                       unsigned    MaxNumItems,
                                       I16       * pData,
                                       unsigned    NumItems);
```

Parameter	Description
Color	Color to be used to draw the data.
MaxNumItems	Maximum number of data items.
pData	Pointer to data to be added to the object. The pointer should point to an array of I16 values.
NumItems	Number of data items to be added.

Return value

Handle of data object if creation was successful, otherwise 0.

Additional information

The last data item is shown at the rightmost column of the data area. If a data object contains more data as can be shown in the data area of the graph widget, the function GRAPH_SetVSizeX() can be used to show a scrollbar which makes it possible to scroll through large data objects.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Once attached to a graph widget a data object needs not to be deleted by the application. This is automatically done during the deletion of the graph widget.

GRAPH_DATA_YT_Delete()

Description

Deletes the given data object.

Prototype



```
void GRAPH_DATA_YT_Delete(GRAPH_DATA_Handle hDataObj);
```

Parameter	Description
hDataObj	Data object to be deleted.

Additional information

When a graph widget is deleted it deletes all currently attached data objects. So the application needs only to delete unattached data objects.

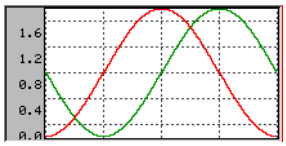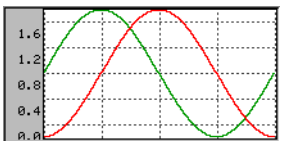GRAPH_DATA_YT_MirrorX()

Before	After
	

Description

Mirrors the x-axis of the widget.

Prototype

```
void GRAPH_DATA_YT_MirrorX(GRAPH_DATA_Handle hDataObj, int Value);
```



Parameter	Description
hDataObj	Handle of data object.
OnOff	1 for mirroring the x-axis, 0 for default view.

Additional information

Per default the data is drawn from the right to the left. After calling this function the data is drawn from the left to the right.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

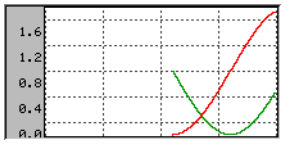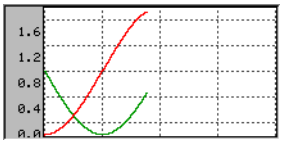GRAPH_DATA_YT_SetAlign()

Before	After
	

Description

Sets the alignment of the data.



Prototype

```
void GRAPH_DATA_YT_SetAlign(GRAPH_DATA_Handle hDataObj, int Align);
```

Parameter	Description
hDataObj	Handle of data object.
Align	(see table below)

Permitted values for parameter Align	
GRAPH_ALIGN_RIGHT	The data is aligned at the right edge (default).
GRAPH_ALIGN_LEFT	The data is aligned at the left edge.

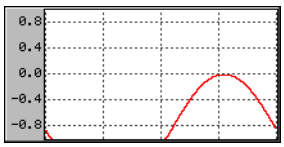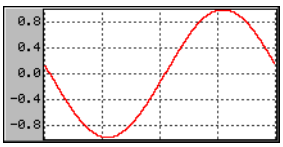GRAPH_DATA_YT_SetOffY()

Before	After
	

Description

Sets a vertical offset used to draw the object data.

Prototype

```
void GRAPH_DATA_YT_SetOffY(GRAPH_DATA_Handle hDataObj, int Off);
```

Parameter	Description
hDataObj	Handle of data object.
Off	Vertical offset which should be used to draw the data.

Additional information

The vertical range of data, which is shown by the data object, is the range (0) - (Y-size of data area - 1). In case of using a scroll bar the current scroll position is added to the range.

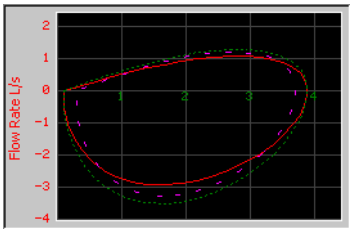
Example

If for example the visible data range should be -200 to -100 the data needs to be shifted in positive direction by 200 pixels:



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
GRAPH_DATA_YT_SetOffY(hDataObj, 200);
```

17.9.7.3 GRAPH_DATA_XY related routines



GRAPH_DATA_XY_AddPoint()

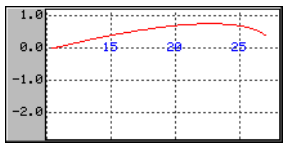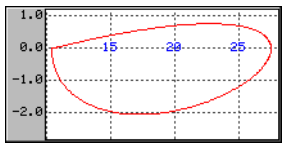Before	After
	

Description

Adds a new data item to a GRAPH_DATA_XY object.

Prototype

```
void GRAPH_DATA_XY_AddPoint(GRAPH_DATA_Handle hDataObj, GUI_POINT * pPoint);
```

Parameter	Description
hDataObj	Handle of data object.
pPoint	Pointer to a GUI_POINT structure to be added to the data object.

Additional information

The given point is added to the data object. If the data object is 'full', that means it contains as many points as specified in parameter MaxNumItems during the creation, it first shifts the data items by one before adding the new point. So the first point is shifted out when adding a new point to a 'full' object.

GRAPH_DATA_XY_Create()

Description

Creates a GRAPH_DATA_XY object. This kind of object is able to store any pairs of values which will be connected by adding order.

Prototype

```
GRAPH_DATA_Handle GRAPH_DATA_XY_Create(GUI_COLOR   Color,
                                       unsigned    MaxNumItems,
                                       GUI_POINT * pData,
                                       unsigned    NumItems);
```

Parameter	Description
Color	Color to be used to draw the data.
MaxNumItems	Maximum number of points.
pData	Pointer to data to be added to the object. The pointer should point to a GUI_POINT array.
NumItems	Number of points to be added.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

Handle of data object if creation was successful, otherwise 0.

Additional information

Once attached to a graph widget a data object needs not to be deleted by the application. This is automatically done during the deletion of the graph widget.

GRAPH_DATA_XY_Delete()

Description

Deletes the given data object.

Prototype



```
void GRAPH_DATA_XY_Delete(GRAPH_DATA_Handle hDataObj);
```

Parameter	Description
hDataObj	Data object to be deleted.

Additional information

When a graph widget is deleted it deletes all currently attached data objects. So the application needs only to delete unattached data objects.

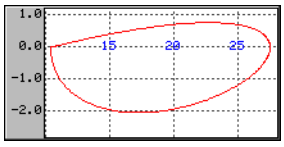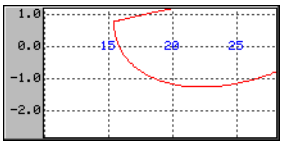GRAPH_DATA_XY_SetOffX(), GRAPH_DATA_XY_SetOffY()

Before	After
	

Description

Sets a vertical or horizontal offset used to draw the polyline.

Prototype

```
void GRAPH_DATA_XY_SetOffX(GRAPH_DATA_Handle hDataObj, int Off);
void GRAPH_DATA_XY_SetOffY(GRAPH_DATA_Handle hDataObj, int Off);
```

Parameter	Description
hDataObj	Handle of data object.
Off	Horizontal/vertical offset which should be used to draw the polyline.

Additional information

The range of data shown by the data object is (0, 0) - (X-size of data area - 1, Y-size of data area - 1). In case of using scroll bars the current scroll position is added to the respective range. To make other ranges of data visible this functions should be used to set an offset, so that the data is in the visible area.

Example

If for example the visible data range should be (100, -1200) - (200, -1100) the following offsets need to be used:

```
GRAPH_DATA_XY_SetOffX(hDataObj, -100);
GRAPH_DATA_XY_SetOffY(hDataObj, 1200);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GRAPH_DATA_XY_SetOwnerDraw()

Description

Sets the owner callback function. This function is called by the widget during the drawing process to give the application the possibility to draw additional items on top of the widget.

Prototype

```
void GRAPH_DATA_XY_SetOwnerDraw(GRAPH_DATA_Handle hDataObj,
  void (* pOwnerDraw)(const WIDGET_ITEM_DRAW_INFO * pDrawItemInfo));
```

Parameter	Description
hDataObj	Data object to be deleted.
pOwnerDraw	Pointer to application function to be called by the widget during the drawing process.

Additional information

The owner draw function is called after background, scales and grid lines are drawn.

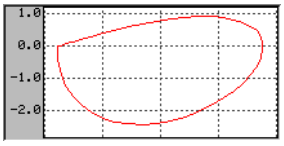
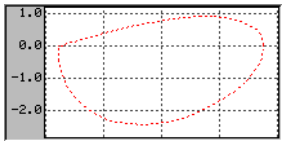
Example

The following code snippet shows an example of an user draw function:

```
static int _cbData(const WIDGET_ITEM_DRAW_INFO * pDrawItemInfo) {
  switch (pDrawItemInfo->Cmd) {
  case WIDGET_ITEM_DRAW:
    GUI_DrawRect(pDrawItemInfo->x0 - 3, pDrawItemInfo->y0 - 3,
                 pDrawItemInfo->x0 + 3, pDrawItemInfo->y0 + 3);
    break;
  }
  return 0;
}

void MainTask(void) {
  WM_HWIN            hGraph;
  GRAPH_DATA_Handle  hData;
  GUI_Init();
  hGraph = GRAPH_CreateEx (140, 100, 171, 131, 0, WM_CF_SHOW, 0, GUI_ID_GRAPH0);
  hData  = GRAPH_DATA_XY_Create(USER_DEFINED_COLOR, 126, 0, 0);
  GRAPH_DATA_XY_SetOwnerDraw(hData, _cbData);
}
```

GRAPH_DATA_XY_SetLineStyle()

Before	After
	

Description

Sets the line style used to draw the polyline.

Prototype

```
void GRAPH_DATA_XY_SetLineStyle(GRAPH_DATA_Handle hDataObj, U8 LineStyle);
```



Parameter	Description
hDataObj	Handle of data object.
LineStyle	New line style to be used. For details about the supported line styles, refer to "GUI_SetLineStyle()" on page 125.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Limitations

Note that only curves with line style GUI_LS_SOLID (default) can be drawn with a pen size >1.

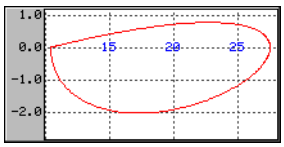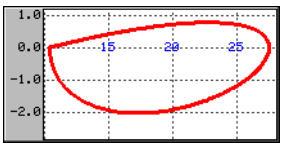GRAPH_DATA_XY_SetPenSize()

Before	After
	

Description

Sets the pen size used to draw the polyline.

Prototype

```
void GRAPH_DATA_XY_SetPenSize(GRAPH_DATA_Handle hDataObj, U8 PenSize);
```

Parameter	Description
hDataObj	Handle of data object.
PenSize	Pen size which should be used to draw the polyline.

Limitations

Note that only curves with line style GUI_LS_SOLID (default) can be drawn with a pen size >1.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.9.7.4 Scale related routines

The graph widget supports horizontal and vertical scales for labeling purpose. The following describes the available functions for using scales.

GRAPH_SCALE_Create()

Description

Creates a scale object.

Prototype

```
GRAPH_SCALE_Handle GRAPH_SCALE_Create(int      Pos,   int      Align,
                                      unsigned Flags, unsigned TickDist);
```

Parameter	Description
Pos	Position relative to the left/top edge of the graph widget.
TextAlign	Text alignment used to draw the numbers. For details, refer to "GUI_GetTextAlign()" on page 81.
Flags	(see table below)
TickDist	Distance from one tick mark to the next.

Permitted values for parameter Flags	
GRAPH_SCALE_CF_HORIZONTAL	Creates a horizontal scale object.
GRAPH_SCALE_CF_VERTICAL	Creates a vertical scale object.

Return value

Handle of the scale object if creation was successful, otherwise 0.

Additional information

A horizontal scale object starts labeling from the bottom edge of the data area to the top and a vertical scale object from the left edge (horizontal scale) to the right, where the first position is the zero point. The parameter TickDist specifies the distance between the numbers.
The parameter Pos specifies in case of a horizontal scale the vertical distance in pixels from the top edge of the graph widget to the scale text. In case of a vertical scale the parameter specifies the horizontal distance from the left edge of the graph widget to the horizontal text position. Note that the actual text position also depends on the text alignment specified with parameter TextAlign.
The scale object draws a number for each position which is within the data area. In case of a horizontal scale there is one exception: If the first position is 0 no number is drawn at this position.
Once attached to a graph widget a scale object needs not to be deleted by the application. This is automatically done during the deletion of the graph widget.

GRAPH_SCALE_Delete()

Description

Deletes the given scale object.

Prototype

```
void GRAPH_SCALE_Delete(GRAPH_SCALE_Handle hScaleObj);
```



Parameter	Description
hScaleObj	Scale object to be deleted.

Additional information

When a graph widget is deleted it deletes all currently attached scale objects. So the application needs only to delete unattached scale objects.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

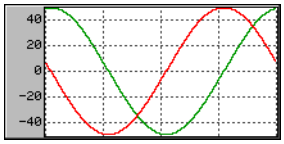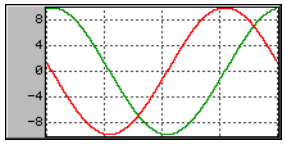GRAPH_SCALE_SetFactor()

Before	After
	

Description

Sets a factor used to calculate the numbers to be drawn.

Prototype

```
float GRAPH_SCALE_SetFactor(GRAPH_SCALE_Handle hScaleObj, float Factor);
```

Parameter	Description
hScaleObj	Handle of scale object.
Factor	Factor to be used to calculate the number.

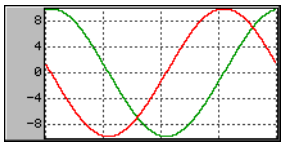
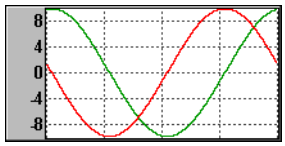
Return value

Old factor used to calculate the numbers.

Additional information

Without using a factor the unit of the scale object is ’pixel’. So the given factor should convert the pixel value to the desired unit.

GRAPH_SCALE_SetFont()

Before	After
	

Description

Sets the font used to draw the scale numbers.

Prototype

```
const GUI_FONT * GRAPH_SCALE_SetFont(GRAPH_SCALE_Handle   hScaleObj,
                                     const GUI_FONT     * pFont);
```



Parameter	Description
hScaleObj	Handle of scale object.
pFont	Font to be used.

Return value

Previous used font used to draw the numbers.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

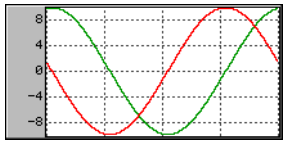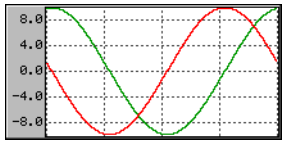GRAPH_SCALE_SetNumDecs()

Before	After
	

Description

Sets the number of post decimal positions to be shown.

Prototype



```
int GRAPH_SCALE_SetNumDecs(GRAPH_SCALE_Handle hScaleObj, int NumDecs);
```

Parameter	Description
hScaleObj	Handle of scale object.
NumDecs	Number of post decimal positions.

Return value

Previous number of post decimal positions.

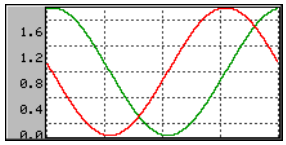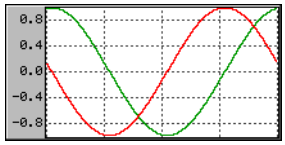GRAPH_SCALE_SetOff()

Before	After
	

Description

Sets an offset used to 'shift' the scale object in positive or negative direction.

Prototype

```
int GRAPH_SCALE_SetOff(GRAPH_SCALE_Handle hScaleObj, int Off);
```

Parameter	Description
hScaleObj	Handle of scale object.
Off	Offset used for drawing the scale.

Return value

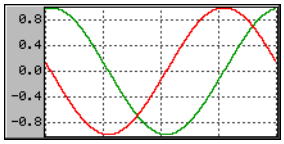
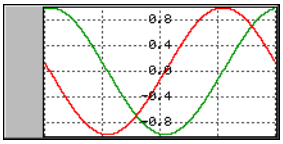
Previous used offset.

Additional information

As described under the function GRAPH_SCALE_Create() a horizontal scale object starts labeling from the bottom edge of the data area to the top and a vertical scale object from the left edge (horizontal scale) to the right, where the first position is the zero point. In many situations it is not desirable, that the first position is the zero point. If the scale should be 'shifted' in positive direction, a positive offset should be added, for negative direction a negative value.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GRAPH_SCALE_SetPos()

Before	After
	

Description

Sets the position for showing the scale object within the graph widget.

Prototype

```
int GRAPH_SCALE_SetPos(GRAPH_SCALE_Handle hScaleObj, int Pos);
```

Parameter	Description
hScaleObj	Handle of scale object.
Pos	Position, at which the scale should be shown.

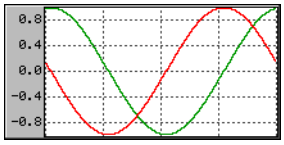
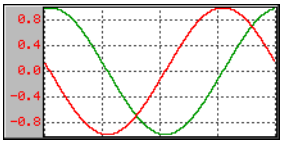
Return value

Previous position of the scale object.

Additional information

The parameter `Pos` specifies in case of a horizontal scale the vertical distance in pixels from the top edge of the graph widget to the scale text. In case of a vertical scale the parameter specifies the horizontal distance from the left edge of the graph widget to the horizontal text position. Note that the actual text position also depends on the text alignment of the scale object.

GRAPH_SCALE_SetTextColor()

Before	After
	

Description

Sets the text color used to draw the numbers.

Prototype

```
GUI_COLOR GRAPH_SCALE_SetTextColor(GRAPH_SCALE_Handle hScaleObj,
                                   GUI_COLOR          Color);
```



Parameter	Description
hScaleObj	Handle of scale object.
Color	Color to be used to show the numbers.

Return value

Previous color used to show the numbers.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

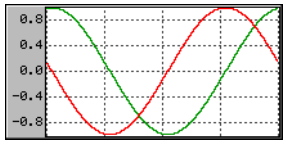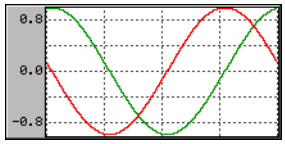GRAPH_SCALE_SetTickDist()

Before	After
	

Description

Sets the distance from one number to the next.

Prototype

```
unsigned GRAPH_SCALE_SetTickDist(GRAPH_SCALE_Handle hScaleObj,
                                 unsigned           Dist);
```

Parameter	Description
hScaleObj	Handle of scale object.
Dist	Distance in pixels between the numbers.

Return value

Previous distance between the numbers.

17.9.8 Examples

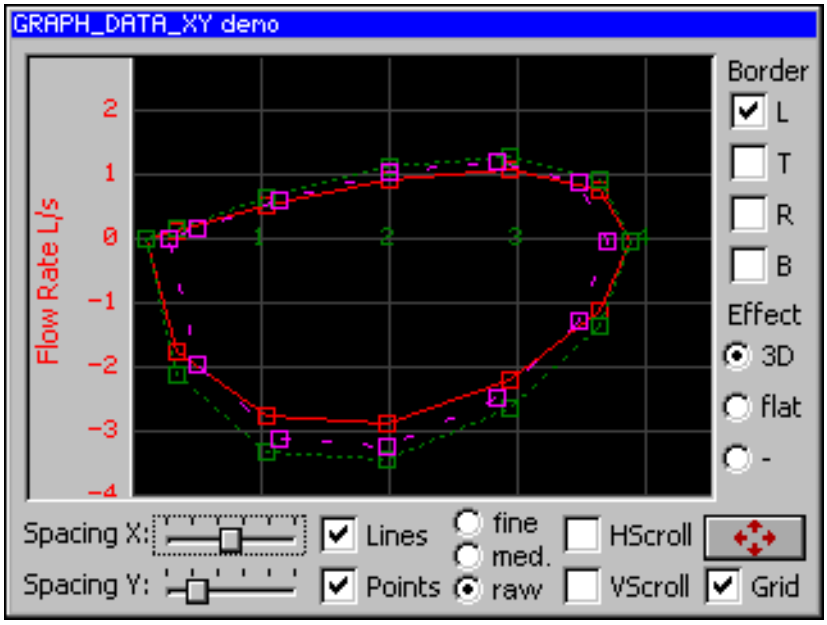
The Sample folder contains the following examples which show how the widget can be used:

- WIDGET_GraphXY.c
- WIDGET_GraphYT.c


Note that several other examples also make use of this widget and may also be helpful to get familiar with the widget.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Screen shot of WIDGET_GraphXY.c:



Screen shot of WIDGET_GraphYT.c:

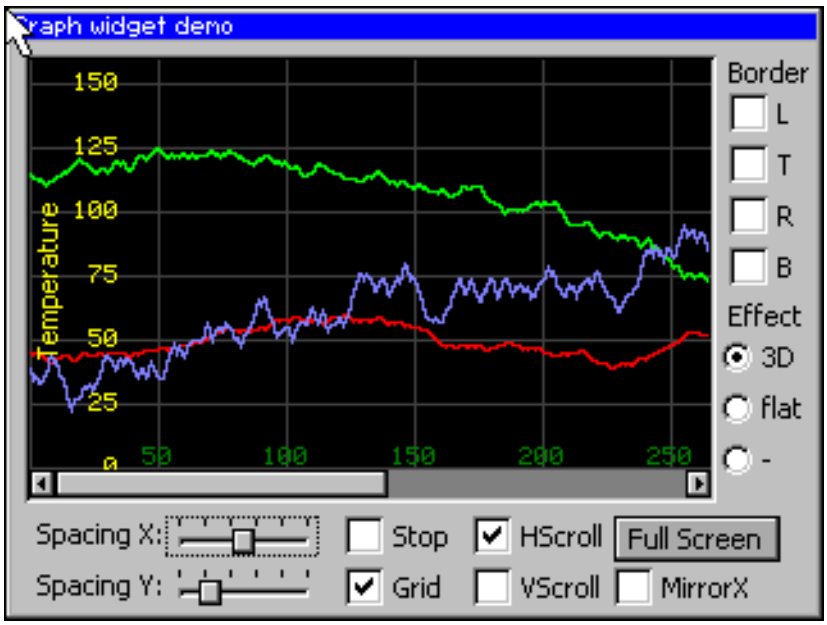

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.10 HEADER: Header widget

HEADER widgets are used to label columns of a table:



If a pointer input device (PID) is used, the width of the header items can be managed by dragging the dividers by the PID.

Behavior with mouse

If mouse support is enabled, the cursor is on and the PID is moved nearby a divider the cursor will change to signal, that the divider can be dragged at the current position.

Behavior with touch screen

If the widget is pressed nearby a divider and the cursor is on the cursor will change to signal, that the divider can now be dragged.

Screenshot of drag-able divider



Predefined cursors

There are 2 predefined cursors as shown below:

GUI_CursorHeaderM (default)	GUI_CursorHeaderMI
	

You can also create and use your own cursors when using a HEADER widget as described later in this chapter.

Skinning...



...is available for this widget. The screenshot above shows the widget using the default skin. For details please refer to chapter ’Skinning’.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.10.1 Configuration options

Type	Macro	Default	Description
N	HEADER_BKCOLOR_DEFAULT	0xAAAAAA	Default value of background color
S	HEADER_CURSOR_DEFAULT	&GUI_CursorHeaderM	Default cursor
S	HEADER_FONT_DEFAULT	&GUI_Font13_1	Default font
N	HEADER_BORDER_H_DEFAULT	2	Horizontal space between text and border
N	HEADER_BORDER_V_DEFAULT	0	Vertical space between text and border
B	HEADER_SUPPORT_DRAG	1	Enable/disable dragging support
N	HEADER_TEXTCOLOR_DEFAULT	GUI_BLACK	Default value of text color

17.10.2 Notification codes

The following events are sent from a HEADER widget to its parent window as part of a WM_NOTIFY_PARENT message:

Message	Description
WM_NOTIFICATION_CLICKED	Widget has been clicked.
WM_NOTIFICATION_RELEASED	Widget has been released.
WM_NOTIFICATION_MOVED_OUT	Widget has been clicked and pointer has been moved out off of the widget without releasing.

17.10.3 Keyboard reaction

The widget can not gain the input focus and does not react on keyboard input.

17.10.4 HEADER API

The table below lists the available emWin HEADER-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
HEADER_AddItem()	Adds one item at the right side
HEADER_Create()	Creates a HEADER widget. (Obsolete)
HEADER_CreateAttached()	Creates a HEADER widget attached to a window
HEADER_CreateEx()	Creates a HEADER widget.
HEADER_CreateIndirect()	Creates a HEADER widget from a resource table entry
HEADER_CreateUser()	Creates a HEADER widget using extra bytes as user data.
HEADER_GetDefaultBkColor()	Returns the default background color
HEADER_GetDefaultBorderH()	Returns the value of the horizontal spacing.
HEADER_GetDefaultBorderV()	Returns the value of the vertical spacing.
HEADER_GetDefaultCursor()	Returns the a pointer to the default cursor.
HEADER_GetDefaultFont()	Returns a pointer to the default font.
HEADER_GetDefaultTextColor()	Returns the default text color.
HEADER_GetHeight()	Returns the height of the widget.
HEADER_GetItemWidth()	Returns the item width.
HEADER_GetNumItems()	Returns the number of items.
HEADER_GetUserData()	Retrieves the data set with HEADER_SetUserData().
HEADER_SetBitmap()	Sets the bitmap used when displaying the given item.
HEADER_SetBitmapEx()	Sets the bitmap used when displaying the given item.
HEADER_SetBkColor()	Sets the background color of the widget.
HEADER_SetBMP()	Sets the bitmap used when displaying the given item.
HEADER_SetBMPEx()	Sets the bitmap used when displaying the given item.
HEADER_SetDefaultBkColor()	Sets the default background color.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
HEADER_SetDefaultBorderH()	Sets the default value for the horizontal spacing.
HEADER_SetDefaultBorderV()	Sets the default value for the vertical spacing.
HEADER_SetDefaultCursor()	Sets the default cursor.
HEADER_SetDefaultFont()	Sets the default font.
HEADER_SetDefaultTextColor()	Sets the default text color.
HEADER_SetDragLimit()	Sets the limit for dragging the items on or off.
HEADER_SetFont()	Sets the font of the widget.
HEADER_SetHeight()	Sets the height of the widget.
HEADER_SetItemText()	Sets the text of a given item.
HEADER_SetItemWidth()	Sets the width of a given item.
HEADER_SetStreamedBitmap()	Sets the bitmap used when displaying the given item.
HEADER_SetStreamedBitmapEx()	Sets the bitmap used when displaying the given item.
HEADER_SetTextAlign()	Sets the alignment of the given item.
HEADER_SetTextColor()	Sets the Text color of the widget.
HEADER_SetUserData()	Sets the extra data of a HEADER widget.

HEADER_AddItem()

Description

Adds an item to an already existing HEADER widget.

Prototype

```
void HEADER_AddItem(HEADER_Handle   hObj, int Width,
                    const char    * s,    int Align);
```

Parameter	Description
hObj	Handle of widget
Width	Width of the new item
s	Text to be displayed
Align	Text alignment mode to set. May be a combination of a horizontal and a vertical alignment flag.

Permitted values for parameter Align (horizontal and vertical flags are OR-combinable)	
Horizontal alignment	
GUI_TA_LEFT	Align X-position left (default).
GUI_TA_HCENTER	Center X-position.
GUI_TA_RIGHT	Align X-position right (default).
Vertical alignment	
GUI_TA_TOP	Align Y-position with top of characters (default).
GUI_TA_VCENTER	Center Y-position.
GUI_TA_BOTTOM	Align Y-position with bottom pixel line of font.

Additional information

The Width-parameter can be 0. If Width = 0 the width of the new item will be calculated by the given text and by the default value of the horizontal spacing.

HEADER_Create()

(Obsolete, HEADER_CreateEx() should be used instead)

Description

Creates a HEADER widget of a specified size at a specified location.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
HEADER_Handle HEADER_Create(int     x0,       int y0,
                            int     xsize,    int ysize,
                            WM_HWIN hParent,  int Id,
                            int     Flags,    int SpecialFlags);
```

Parameter	Description
x0	Leftmost pixel of the HEADER widget (in parent coordinates).
y0	Topmost pixel of the HEADER widget (in parent coordinates).
xsize	Horizontal size of the HEADER widget (in pixels).
ysize	Vertical size of the HEADER widget (in pixels).
hParent	Handle of the parent window
Id	Id of the new HEADER widget
Flags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
SpecialFlags	(Reserved for later use)

Return value

Handle of the created HEADER widget; 0 if the function fails.

HEADER_CreateAttached()

Description

Creates a HEADER widget which is attached to an existing window.

Prototype

```
HEADER_Handle HEADER_CreateAttached(WM_HWIN hParent,
                                    int     Id,
                                    int     SpecialFlags);
```

Parameter	Description
hObj	Handle of widget
Id	Id of the HEADER widget
SpecialFlags	(Not used, reserved for later use)

Return value

Handle of the created HEADER widget; 0 if the function fails.

Additional information

An attached HEADER widget is essentially a child window which will position itself on the parent window and operate accordingly.

HEADER_CreateEx()

Description

Creates a HEADER widget of a specified size at a specified location.

Prototype

```
HEADER_Handle HEADER_CreateEx(int     x0,       int y0,
                              int     xsize,    int ysize,
                              WM_HWIN hParent,  int WinFlags,
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                                int     ExFlags, int Id);
```

Parameter	Description
x0	Leftmost pixel of the widget (in parent coordinates).
y0	Topmost pixel of the widget (in parent coordinates).
xsize	Horizontal size of the widget (in pixels).
ysize	Vertical size of the widget (in pixels).
hParent	Handle of parent window. If 0, the new HEADER widget will be a child of the desktop (top-level window).
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
ExFlags	Not used, reserved for future use.
Id	Window ID of the widget.

Return value

Handle of the created HEADER widget; 0 if the function fails.

HEADER_CreateIndirect()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateIndirect().

HEADER_CreateUser()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateUser(). For a detailed description of the parameters the function HEADER_CreateEx() can be referred to.

HEADER_GetDefaultBkColor()

Description

Returns the default background color used when creating a HEADER widget.

Prototype

```
GUI_COLOR HEADER_GetDefaultBkColor(void);
```

Return value

Default background color used when creating a HEADER widget.

HEADER_GetDefaultBorderH()

Description

Returns the value used for the horizontal spacing when creating a HEADER widget. Horizontal spacing means the horizontal distance in pixel between text and the horizontal border of the item.

Prototype

```
int HEADER_GetDefaultBorderH(void);
```

Return value

Value used for the horizontal spacing when creating a HEADER widget.

Additional information

Horizontal spacing takes effect only if the given width of a new item is 0.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

HEADER_GetDefaultBorderV()

Description

Returns the value used for the vertical spacing when creating a HEADER widget. Vertical spacing means the vertical distance in pixel between text and the vertical border of the HEADER widget.

Prototype

```
int HEADER_GetDefaultBorderV(void);
```

Return value

Value used for the vertical spacing when creating a HEADER widget.

HEADER_GetDefaultCursor()

Description

Returns a pointer to the cursor displayed when dragging the width of an item.

Prototype

```
const GUI_CURSOR * HEADER_GetDefaultCursor(void);
```

Return value

pointer to the cursor displayed when dragging the width of an item.

HEADER_GetDefaultFont()

Description

Returns a pointer to the default font used when creating a HEADER widget.

Prototype

```
const GUI_FONT * HEADER_GetDefaultFont(void);
```

Return value

Pointer to the default font used when creating a HEADER widget.

HEADER_GetDefaultTextColor()

Description

Returns the default text color used when creating a HEADER widget.

Prototype

```
GUI_COLOR HEADER_GetDefaultTextColor(void);
```

Return value

Default text color used when creating a HEADER widget.

HEADER_GetHeight()

Description

Returns the height of the given HEADER widget.

Prototype

```
int HEADER_GetHeight(HEADER_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

Height of the given HEADER widget.

HEADER_GetItemWidth()

Description

Returns the item width of the given HEADER widget.

Prototype

```
int HEADER_GetItemWidth(HEADER_Handle hObj, unsigned int Index);
```

Parameter	Description
hObj	Handle of widget
Index	Index of the item

Return value

Width of the item.

HEADER_GetNumItems()

Description

Returns the number of items of the given HEADER widget.

Prototype

```
int HEADER_GetNumItems(HEADER_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

Return value

Number of items of the given HEADER widget.

HEADER_GetUserData()

Prototype explained at the beginning of the chapter as `<WIDGET>_GetUserData()`.

HEADER_SetBitmap()

Description

Sets the bitmap used when displaying the specified item.

Prototype

```
void HEADER_SetBitmap(HEADER_Handle      hObj,
                      unsigned int       Index,
                      const GUI_BITMAP * pBitmap);
```

Parameter	Description
hObj	Handle of widget
Index	Index of the item
pBitmap	Pointer to a bitmap structure to be displayed

Additional information

One item of a HEADER widget can contain text and a bitmap. (look at `sample` under `HEADER_SetBitmapEx`)

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

HEADER_SetBitmapEx()

Description

Sets the bitmap used when displaying the specified item.

Prototype

```
void HEADER_SetBitmapEx(HEADER_Handle      hObj,    unsigned int Index,
                        const GUI_BITMAP * pBitmap,
                        int                x,       int          y);
```

Parameter	Description
hObj	Handle of widget
Index	Index of the item
pBitmap	Pointer to a bitmap structure to be displayed
x	Additional offset in x
y	Additional offset in y

Additional information

One item of a HEADER widget can contain text and a bitmap.

Example:

```
...
HEADER_Handle hHeader;
GUI_Init();
HEADER_SetDefaultTextColor(GUI_YELLOW);
HEADER_SetDefaultFont(&GUI_Font8x8);
hHeader = HEADER_Create(10, 10, 100, 40, WM_HBKWIN, 1234, WM_CF_SHOW, 0);
HEADER_AddItem(hHeader, 50, "Phone", GUI_TA_BOTTOM | GUI_TA_HCENTER);
HEADER_AddItem(hHeader, 50, "Code" , GUI_TA_BOTTOM | GUI_TA_HCENTER);
HEADER_SetBitmapEx(hHeader, 0, &bmPhone, 0, -15);
HEADER_SetBitmapEx(hHeader, 1, &bmCode,  0, -15);
...
```

Screenshot of example above:



HEADER_SetBkColor()

Description

Sets the background color of the given HEADER widget.

Prototype

```
void HEADER_SetBkColor(HEADER_Handle hObj, GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of widget
Color	Background color to be set

HEADER_SetBMP()

Description

Sets the bitmap used when displaying the specified item.

Prototype

```
void HEADER_SetBMP(HEADER_Handle   hObj,     unsigned int Index,
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                                const void    * pBitmap);
```

Parameter	Description
hObj	Handle of widget
Index	Index of HEADER item
pBitmap	Pointer to bitmap file data

Additional information

For additional informations regarding bitmap files, refer to chapter "Displaying bitmap files" on page 141.

HEADER_SetBMPEx()

Description

Sets the bitmap used when displaying the specified item.

Prototype

```
void HEADER_SetBMPEx(HEADER_Handle   hObj,    unsigned int Index,
                     const void    * pBitmap,
                     int             x,       int          y);
```

Parameter	Description
hObj	Handle of widget
Index	Index of the item
pBitmap	Pointer to bitmap file data
x	Additional offset in x
y	Additional offset in y

Additional information

For additional informations regarding bitmap files, refer to chapter "Displaying bitmap files" on page 141.

HEADER_SetDefaultBkColor()

Description

Sets the default background color used when creating a HEADER widget.

Prototype

```
GUI_COLOR HEADER_SetDefaultBkColor(GUI_COLOR Color);
```

Parameter	Description
Color	Background color to be used

Return value

Previous default background color.

HEADER_SetDefaultBorderH()

Description

Sets the value used for the horizontal spacing when creating a HEADER widget. Horizontal spacing means the horizontal distance in pixel between text and the horizontal border of the item.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
int HEADER_SetDefaultBorderH(int Spacing);
```

Parameter	Description
Spacing	Value to be used

Return value

Previous default value.

Additional information

Horizontal spacing takes effect only if the given width of a new item is 0.

HEADER_SetDefaultBorderV()

Description

Sets the value used for the vertical spacing when creating a HEADER widget. Vertical spacing means the vertical distance in pixel between text and the vertical border of the HEADER widget.

Prototype

```
int HEADER_SetDefaultBorderV(int Spacing);
```

Parameter	Description
Spacing	Value to be used

Return value

Previous default value.

HEADER_SetDefaultCursor()

Description

Sets the cursor which will be displayed when dragging the width of an HEADER item.

Prototype

```
const GUI_CURSOR * HEADER_SetDefaultCursor(const GUI_CURSOR * pCursor);
```

Parameter	Description
pCursor	Pointer to the cursor to be shown when dragging the width of an HEADER item

Return value

Pointer to the previous default cursor.

Additional information

There are 2 predefined cursors shown at the beginning of this chapter.

HEADER_SetDefaultFont()

Description

Sets the default font used when creating a HEADER widget.

Prototype

```
const GUI_FONT * HEADER_SetDefaultFont(const GUI_FONT * pFont);
```

Parameter	Description
pFont	Pointer to font to be used

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

Pointer to previous default font.

HEADER_SetDefaultTextColor()

Description

Returns the default text color used when creating a HEADER widget.

Prototype

```
GUI_COLOR HEADER_SetDefaultTextColor(GUI_COLOR Color);
```

Parameter	Description
Color	Color to be used

Return value

Previous default value.

HEADER_SetDragLimit()

Description

Sets the limit for dragging the dividers on or off. If the limit is on, a divider can only be dragged within the widget area. If the limit is off, it can be dragged outside the widget.

Prototype

```
void HEADER_SetDragLimit(HEADER_Handle hObj, unsigned OnOff);
```

Parameter	Description
hObj	Handle of widget
OnOff	1 for setting the drag limit on, 0 for off.

HEADER_SetFont()

Description

Sets the font used when displaying the given HEADER widget

Prototype

```
void HEADER_SetFont(HEADER_Handle hObj, const GUI_FONT * pFont);
```

Parameter	Description
hObj	Handle of widget
pFont	Pointer to font to be used

HEADER_SetHeight()

Description

Sets the height of the given HEADER widget.

Prototype

```
void HEADER_SetHeight(HEADER_Handle hObj, int Height);
```

Parameter	Description
hObj	Handle of widget
Height	New height

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

HEADER_SetItemText()

Description

Sets the text used when displaying the specified item.

Prototype

```
void HEADER_SetItemText(HEADER_Handle   hObj, unsigned int Index,
                        const char    * s);
```

Parameter	Description
hObj	Handle of widget
Index	Index of HEADER item
s	Pointer to string to be displayed

Additional information

One HEADER item can contain a string and a bitmap.

HEADER_SetItemWidth()

Description

Sets the width of the specified HEADER item.

Prototype

```
void HEADER_SetItemWidth(HEADER_Handle hObj, unsigned int Index, int Width);
```

Parameter	Description
hObj	Handle of widget
Index	Index of HEADER item
Width	New width

HEADER_SetStreamedBitmap()

Description

Sets the bitmap used when displaying the specified item.

Prototype

```
void HEADER_SetStreamedBitmap(HEADER_Handle             hObj,
                              unsigned int              Index,
                              const GUI_BITMAP_STREAM * pBitmap);
```

Parameter	Description
hObj	Handle of widget
Index	Index of the item
pBitmap	Pointer to streamed bitmap data to be displayed

Additional information

For additional informations regarding streamed bitmap files, refer to the chapter "2-D Graphic Library" on page 97.

HEADER_SetStreamedBitmapEx()

Description

Sets the bitmap used when displaying the specified item.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void HEADER_SetStreamedBitmapEx(HEADER_Handle             hObj,
                                unsigned int              Index,
                                const GUI_BITMAP_STREAM * pBitmap,
                                int                       x,
                                int                       y);
```

Parameter	Description
hObj	Handle of widget
Index	Index of the item
pBitmap	Pointer to streamed bitmap data to be displayed
x	Additional offset in x
y	Additional offset in y

Additional information

For additional informations regarding streamed bitmap files, refer to the chapter "2-D Graphic Library" on page 97.

HEADER_SetTextAlign()

Description

Sets the text alignment of the specified HEADER item.

Prototype

```
void HEADER_SetTextAlign(HEADER_Handle hObj, unsigned int Index, int Align);
```

Parameter	Description
hObj	Handle of widget
Index	Index of header item
Align	Text alignment mode to set. May be a combination of a horizontal and a vertical alignment flag.

Permitted values for parameter Align (horizontal and vertical flags are OR-combinable)	
Horizontal alignment	
GUI_TA_LEFT	Align X-position left (default).
GUI_TA_HCENTER	Center X-position.
GUI_TA_RIGHT	Align X-position right (default).
Vertical alignment	
GUI_TA_TOP	Align Y-position with top of characters (default).
GUI_TA_VCENTER	Center Y-position.
GUI_TA_BOTTOM	Align Y-position with bottom pixel line of font.

HEADER_SetTextColor()

Description

Sets the text color used when displaying the widget.

Prototype

```
void HEADER_SetTextColor(HEADER_Handle hObj, GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of widget
Color	Color to be used

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

HEADER_SetUserData()

Prototype explained at the beginning of the chapter as `<WIDGET>_SetUserData()`.

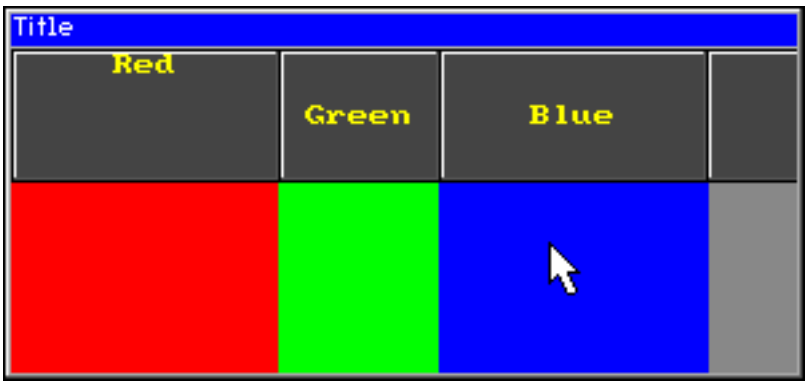
17.10.5 Example

The `Sample` folder contains the following example which shows how the widget can be used:

- `WIDGET_Header.c`

Note that several other examples also make use of this widget and may also be helpful to get familiar with the widget.



Screen shot of WIDGET_Header.c:



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.11 ICONVIEW: Icon view widget

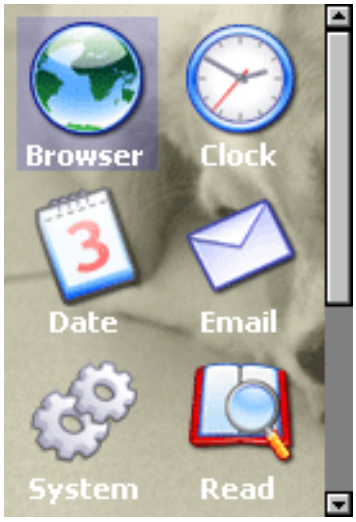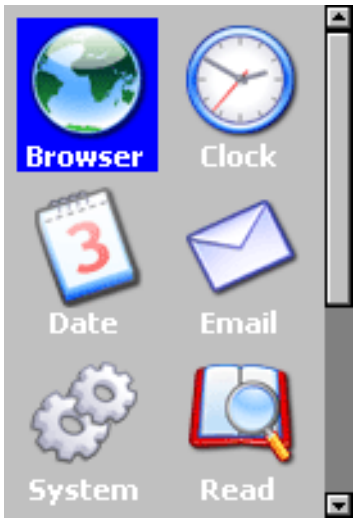The icon view widget can be used for icon based menus often required in hand held devices like mobile telephones or pocket organizers. It shows a list of icons where each icon can be labeled with optional text. Icon view widgets support transparency and alpha blending. So any content can be shown in the background. The currently selected icon can be highlighted by a solid color or with an alpha blending effect, which lets the background shine through. If required a scrollbar can be shown.

ICONVIEW with transparency	ICONVIEW without transparency
	

All ICONVIEW-related routines are in the file(s) `ICONVIEW*.c`, `ICONVIEW*.h`. All identifiers are prefixed ICONVIEW.

17.11.1 Configuration options

Type	Macro	Default	Description
N	ICONVIEW_BKCOLOR0_DEFAULT	GUI_WHITE	Background color, unselected state.
N	ICONVIEW_BKCOLOR1_DEFAULT	GUI_BLUE	Background color, selected state.
N	ICONVIEW_TEXTCOLOR0_DEFAULT	GUI_WHITE	Text color, unselected state.
N	ICONVIEW_TEXTCOLOR1_DEFAULT	GUI_WHITE	Text color, selected state.
S	ICONVIEW_FONT_DEFAULT	GUI_Font13_1	Font to be used for drawing the labels.
N	ICONVIEW_FRAMEX_DEFAULT	5	Free space between the icons and the left and right border of the widget.
N	ICONVIEW_FRAMEY_DEFAULT	5	Free space between the icons and the top and bottom border of the widget.
N	ICONVIEW_SPACEX_DEFAULT	5	Free horizontal space between the icons.
N	ICONVIEW_SPACEY_DEFAULT	5	Free vertical space between the icons.
N	ICONVIEW_ALIGN_DEFAULT	GUI_TA_HCENTER | GUI_TA_BOTTOM	Default alignment to be used for drawing the labels.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.11.2 Notification codes

The following events are sent from an ICONVIEW widget to its parent window as part of a WM_NOTIFY_PARENT message:

Message	Description
WM_NOTIFICATION_CLICKED	Widget has been clicked.
WM_NOTIFICATION_RELEASED	Widget has been released.
WM_NOTIFICATION_MOVED_OUT	Widget has been clicked and pointer has been moved out off of the widget area without releasing.
WM_NOTIFICATION_SCROLL_CHANGED	The scroll position of the optional scrollbar has been changed.
WM_NOTIFICATION_SEL_CHANGED	The selection of the widget has been changed.

17.11.3 Keyboard reaction

The widget reacts to the following keys if it has the input focus:

Key	Reaction
GUI_KEY_RIGHT	Moves the selection to the next icon.
GUI_KEY_LEFT	Moves the selection to the previous icon.
GUI_KEY_DOWN	Moves the selection down.
GUI_KEY_UP	Moves the selection up.
GUI_KEY_HOME	Moves the selection to the first icon.
GUI_KEY_END	Moves the selection to the last icon.

17.11.4 ICONVIEW API



The table below lists the available emWin ICONVIEW-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
ICONVIEW_AddBitmapItem()	Adds a new icon to the ICONVIEW widget.
ICONVIEW_AddStreamedBitmapItem()	Adds a new icon to the ICONVIEW widget using a streamed bitmap.
ICONVIEW_CreateEx()	Creates an ICONVIEW widget.
ICONVIEW_CreateIndirect()	Creates an ICONVIEW widget from a resource table entry.
ICONVIEW_CreateUser()	Creates an ICONVIEW widget using extra bytes as user data.
ICONVIEW_DeleteItem()	Deletes an existing item.
ICONVIEW_GetItemText()	Retrieves the text of a specified icon view item.
ICONVIEW_GetItemUserData()	Retrieves the previously stored user data from a specific item.
ICONVIEW_GetNumItems()	Returns the number of items in the given icon view.
ICONVIEW_GetSel()	Returns the index of the currently selected icon.
ICONVIEW_GetUserData()	Retrieves the data set with ICONVIEW_SetUserData().
ICONVIEW_InsertBitmapItem()	Inserts a new icon to the icon view widget at the given position.
ICONVIEW_InsertStreamedBitmapItem()	Inserts a new icon to the icon view widget at the given position using a streamed bitmap.
ICONVIEW_SetBitmapItem()	Sets a bitmap to be used by a specific item.
ICONVIEW_SetBkColor()	Sets the background color.
ICONVIEW_SetFont()	Sets the font to be used for drawing the labels.
ICONVIEW_SetFrame()	Sets the size of the frame between the border of the widget and the icons.
ICONVIEW_SetItemText()	Sets the text of a specific item.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
ICONVIEW_SetItemUserData()	Stores user data in a specific item.
ICONVIEW_SetSel()	Sets the current selection.
ICONVIEW_SetSpace()	Sets the space between icons in x- or y-direction.
ICONVIEW_SetStreamedBitmapItem()	Sets the current selection.
ICONVIEW_SetTextAlign()	Sets the color to be used to draw the labels.
ICONVIEW_SetTextColor()	Sets the color to be used to draw the labels.
ICONVIEW_SetUserData()	Sets the extra data of an ICONVIEW widget.

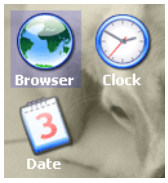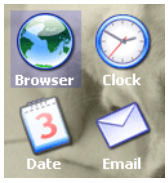ICONVIEW_AddBitmapItem()

Before	After
	

Description

Adds a new bitmap icon to the widget.

Prototype

```
int ICONVIEW_AddBitmapItem(ICONVIEW_Handle    hObj,
                           const GUI_BITMAP * pBitmap,
                           const char       * pText);
```

Parameter	Description
hObj	Handle of the widget.
pBitmap	Pointer to a bitmap structure used to draw the icon.
pText	Text to be used to label the icon.

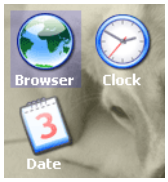
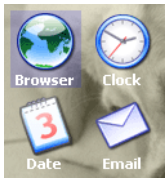
Return value

0 on success, !=0 on error.

Additional information

Note that the bitmap pointer needs to remain valid.

ICONVIEW_AddStreamedBitmapItem()

Before	After
	

Description

Adds a new streamed bitmap icon to the widget.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
int ICONVIEW_AddStreamedBitmapItem(ICONVIEW_Handle   hObj,
                                   const void      * pStreamedBitmap,
                                   const char      * pText);
```

Parameter	Description
hObj	Handle of the widget.
pStreamedBitmap	Pointer to a bitmap stream used to draw the icon.
pText	Text to be used to label the icon.

Return value

0 on success, !=0 on error.

Additional information

The pointer to the bitmap stream needs to remain valid.

ICONVIEW_CreateEx()

Description

Creates an ICONVIEW widget of a specified size at a specified location.

Prototype

```
ICONVIEW_Handle ICONVIEW_CreateEx(int     x0,         int y0,
                                  int     xSize,      int ySize,
                                  WM_HWIN hParent,    int WinFlags,
                                  int     ExFlags,    int Id,
                                  int     xSizeItem, int ySizeItem);
```

Parameter	Description
x0	Leftmost pixel of the widget in parent coordinates.
y0	Topmost pixel of the widget in parent coordinates.
xSize	Horizontal size of the widget in pixels.
ySize	Vertical size of the widget in pixels.
hParent	Handle of parent window. If 0, the new widget will be a child window of the desktop (top-level window).
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to "WM_CreateWindow()" on page 309 for a list of available parameter values).
ExFlags	(see table below)
Id	Window ID of the widget.
xSizeItem	Horizontal icon size in pixels.
ySizeItem	Vertical icon size in pixels.

Permitted values for parameter ExFlags	
0	(default)
ICONVIEW_CF_AUTOSCROLLBAR_V	A vertical scrollbar will be added if the widget area is too small to show all icons.

Return value

Handle of the new widget, 0 if the function fails.

Additional information

If the widget should be transparent, the parameter WinFlags should be or-combined with WM_CF_HASTRANS.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

ICONVIEW_CreateIndirect()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateIndirect().

ICONVIEW_CreateUser()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateUser(). For a detailed description of the parameters the function ICONVIEW_CreateEx() can be referred to.

ICONVIEW_DeleteItem()

Description

Deletes an existing item of the ICONVIEW widget.

Prototype

```
void ICONVIEW_DeleteItem(ICONVIEW_Handle hObj, unsigned Index);
```

Parameter	Description
hObj	Handle of the widget.
Index	Index of the item to be deleted.

ICONVIEW_GetItemText()

Description

Retrieves the text of a specified icon view item.

Prototype

```
int ICONVIEW_GetItemText(ICONVIEW_Handle hObj,    int Index,
                         char *          pBuffer, int MaxSize);
```

Parameter	Description
hObj	Handle of the widget.
Index	Index of the item to be deleted.
pBuffer	Buffer to retrieve the text.
MaxSize	Maximum length of text to copy to the buffer.

Return value

The length of the actually copied text is returned.

ICONVIEW_GetItemUserData()

Description

Retrieves the previously stored user data from a specific item.

Prototype

```
U32 ICONVIEW_GetItemUserData(ICONVIEW_Handle hObj, int Index);
```

Parameter	Description
hObj	Handle of the widget.
Index	Index of the item.

Return value

User data stored in the item as U32.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

ICONVIEW_GetNumItems()

Description

Returns the number of items in the given icon view.

Prototype

```
int ICONVIEW_GetNumItems(ICONVIEW_Handle hObj);
```

Parameter	Description
hObj	Handle of the widget.

Return value

Number of items.

ICONVIEW_GetSel()

Description

Returns the zero based index of the currently selected icon.

Prototype

```
int ICONVIEW_GetSel(ICONVIEW_Handle hObj);
```

Parameter	Description
hObj	Handle of widget.

Return value

Zero based index of the currently selected icon.

ICONVIEW_GetUserData()

Prototype explained at the beginning of the chapter as `<WIDGET>_GetUserData()`.

ICONVIEW_InsertBitmapItem()

Description

Inserts a new bitmap icon to the widget. See "ICONVIEW_AddBitmapItem()" on page 485 for screenshots.

Prototype

```
int ICONVIEW_InsertBitmapItem(ICONVIEW_Handle    hObj,
                              const GUI_BITMAP * pBitmap,
                              const char       * pText
                              int                Index);
```

Parameter	Description
hObj	Handle of the widget.
pBitmap	Pointer to a bitmap structure used to draw the icon.
pText	Text to be used to label the icon.
Index	Index position to insert the item at.

Return value

0 on success, !=0 on error.

Additional information

Note that the bitmap pointer needs to remain valid.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

ICONVIEW_InsertStreamedBitmapItem()

Description

Inserts a new streamed bitmap icon to the widget. See "ICONVIEW_AddBitmapItem()" on page 485 for screenshots.

Prototype

```
int ICONVIEW_InsertStreamedBitmapItem(ICONVIEW_Handle   hObj,
                                      const void      * pStreamedBitmap,
                                      const char      * pText,
                                      int               Index);
```

Parameter	Description
hObj	Handle of the widget.
pStreamedBitmap	Pointer to a bitmap stream used to draw the icon.
pText	Text to be used to label the icon.
Index	Index position to insert the item at.

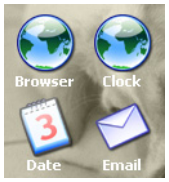
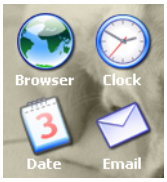
Return value

0 on success, !=0 on error.

Additional information

The pointer to the bitmap stream needs to remain valid.

ICONVIEW_SetBitmapItem()

Before	After
	

Description

Sets a bitmap to be used by a specific item.

Prototype

```
void ICONVIEW_SetBitmapItem(ICONVIEW_Handle    hObj,
                            int                Index,
                            const GUI_BITMAP * pBitmap);
```



Parameter	Description
hObj	Handle of widget.
Index	Index of the item.
pBitmap	Pointer to the bitmap to be used.

Additional information

The pointer to the bitmap structure needs to remain valid.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

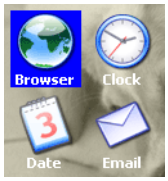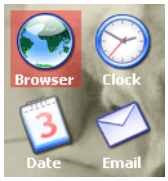ICONVIEW_SetBkColor()

Before	After
	

Description

Sets the background color of the widget.

Prototype

```
void ICONVIEW_SetBkColor(ICONVIEW_Handle hObj, int Index, GUI_COLOR Color);
```



Parameter	Description
hObj	Handle of widget.
Index	(see table below)
Color	Color to be used for drawing the background.

Permitted values for parameter Index	
ICONVIEW_CI_BK	Color used to draw the widget background.
ICONVIEW_CI_SEL	Color used to highlight the currently selected item.

Additional information

The upper 8 bits of the 32 bit color value can be used for an alpha blending effect. For more details about alpha blending, refer to "GUI_SetAlpha()" on page 111.

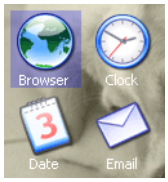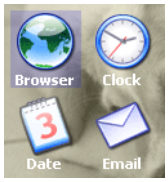ICONVIEW_SetFont()

Before	After
	

Description

Sets the font to be used for drawing the icon labels.



Prototype

```
void ICONVIEW_SetFont(ICONVIEW_Handle              hObj,
                      const GUI_FONT GUI_UNI_PTR * pFont);
```

Parameter	Description
hObj	Handle of widget.
pFont	Pointer to a GUI_FONT structure to be used to draw the icon labels.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

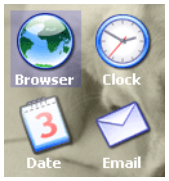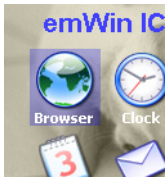ICONVIEW_SetFrame()

Before	After
	

Description

Sets the size of the frame between the border of the widget and the icons.



Prototype

```
void ICONVIEW_SetFrame(ICONVIEW_Handle hObj,
                       int             Coord,
                       int             Value);
```

Parameter	Description
hObj	Handle of the widget.
Coord	See permitted values for this parameter below.
Value	Distance to be set.

Permitted values for parameter Coord	
GUI_COORD_X	X-direction.
GUI_COORD_Y	Y-direction.

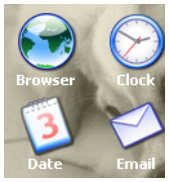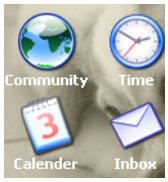ICONVIEW_SetItemText()

Before	After
	

Description

Sets the text of a specific item.

Prototype

```
void ICONVIEW_SetItemText(ICONVIEW_Handle   hObj,
                          int               Index,
                          const char      * pText);
```

Parameter	Description
hObj	Handle of the widget.
Index	Index of the item.
pText	Pointer to the text to be used.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

ICONVIEW_SetItemUserData()

Description



Stores user data in a specific item.

Prototype

```
void ICONVIEW_SetItemUserData(ICONVIEW_Handle hObj,
                              int             Index,
                              U32             UserData);
```

Parameter	Description
hObj	Handle of widget.
Index	Index of the item.
UserData	32 bit user data to be stored.

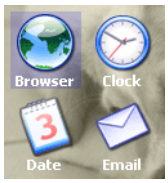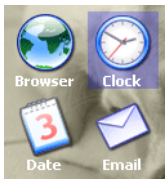ICONVIEW_SetSel()

Before	After
	

Description



Sets the current selection.

Prototype

```
void ICONVIEW_SetSel(ICONVIEW_Handle hObj, int Sel);
```

Parameter	Description
hObj	Handle of widget.
Sel	New selection.

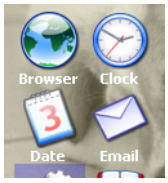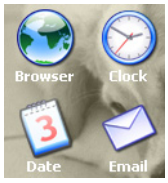ICONVIEW_SetSpace()

Before	After
	

Description

Sets the space between icons in x- or y-direction.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG



Prototype

```
void ICONVIEW_SetSpace(ICONVIEW_Handle hObj, int Coord, int Value);
```

Parameter	Description
hObj	Handle of the widget.
Coord	See permitted values for this parameter below.
Value	Distance to be set.

Permitted values for parameter Coord	
GUI_COORD_X	X-direction.
GUI_COORD_Y	Y-direction.

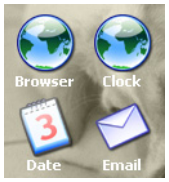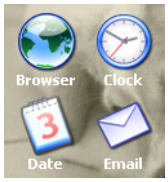ICONVIEW_SetStreamedBitmapItem()

Before	After
	

Description

Sets a streamed bitmap to be used by a specific item.

Prototype



```
void ICONVIEW_SetStreamedBitmapItem(ICONVIEW_Handle   hObj,
                                    int               Index,
                                    const void      * pStreamedBitmap);
```

Parameter	Description
hObj	Handle of widget.
Index	Index of the item.
pStreamedBitmap	Pointer to the bitmap stream to be used.

Additional information

The pointer to the bitmap stream needs to remain valid.

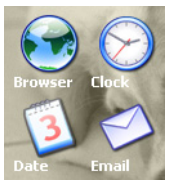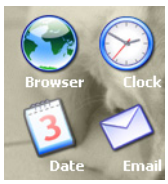ICONVIEW_SetTextAlign()

Before	After
	

Description

Sets the color to be used to draw the labels.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG



Prototype

```
void ICONVIEW_SetTextAlign(ICONVIEW_Handle hObj, int TextAlign);
```

Parameter	Description
hObj	Handle of widget.
TextAlign	See table below.

Permitted values for parameter TextAlign (horizontal and vertical flags are OR-combinable)	
Horizontal alignment	
GUI_TA_LEFT	Align X-position left (default).
GUI_TA_HCENTER	Center X-position.
GUI_TA_RIGHT	Align X-position right (default).
Vertical alignment	
GUI_TA_TOP	Align Y-position with top of characters (default).
GUI_TA_VCENTER	Center Y-position.
GUI_TA_BOTTOM	Align Y-position with bottom pixel line of font.

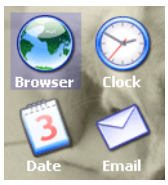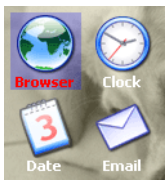ICONVIEW_SetTextColor()

Before	After
	

Description

Sets the color to be used to draw the labels.

Prototype

```
void ICONVIEW_SetTextColor(ICONVIEW_Handle hObj,   int Index,
                           GUI_COLOR       Color);
```

Parameter	Description
hObj	Handle of widget.
Index	(see table below)
Color	Color to be used

Permitted values for parameter Index	
ICONVIEW_CI_UNSEL	Color used to draw the labels in unselected state.
ICONVIEW_CI_SEL	Color used to draw the labels in selected state.

ICONVIEW_SetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_SetUserData().


17.11.5 Example

The Sample folder contains the following example which shows how the widget can be used:

- WIDGET_IconView

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Screenshot of WIDGET_Iconview.c:

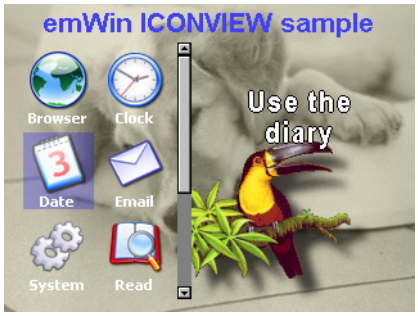

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.12 LISTBOX: List box widget

List boxes are used to select one element of a list. A list box can be created without a surrounding frame window, as shown below, or as a child window of a FRAMEWIN widget (see the additional screen shots at the end of the section). As items in a list box are selected, they appear highlighted. Note that the background color of a selected item depends on whether the list box window has input focus.

List box with focus	List box without focus
	

All LISTBOX-related routines are in the file(s) `LISTBOX*.c`, `LISTBOX.h`. All identifiers are prefixed LISTBOX.

17.12.1 Configuration options

Type	Macro	Default	Description
N	LISTBOX_BKCOLOR0_DEFAULT	GUI_WHITE	Background color, unselected state.
N	LISTBOX_BKCOLOR1_DEFAULT	GUI_GRAY	Background color, selected state without focus.
N	LISTBOX_BKCOLOR2_DEFAULT	GUI_BLUE	Background color, selected state with focus.
S	LISTBOX_FONT_DEFAULT	&GUI_Font13_1	Font used.
N	LISTBOX_TEXTCOLOR0_DEFAULT	GUI_BLACK	Text color, unselected state.
N	LISTBOX_TEXTCOLOR1_DEFAULT	GUI_WHITE	Text color, selected state without focus.
N	LISTBOX_TEXTCOLOR2_DEFAULT	GUI_WHITE	Text color, selected state with focus.

17.12.2 Notification codes

The following events are sent from a list box widget to its parent window as part of a `WM_NOTIFY_PARENT` message:

Message	Description
WM_NOTIFICATION_CLICKED	List box has been clicked.
WM_NOTIFICATION_RELEASED	List box has been released.
WM_NOTIFICATION_MOVED_OUT	List box has been clicked and pointer has been moved out off of the box without releasing.
WM_NOTIFICATION_SCROLL_CHANGED	The scroll position of the optional scrollbar has been changed.
WM_NOTIFICATION_SEL_CHANGED	The selection of the list box has changed.

17.12.3 Keyboard reaction

The widget reacts to the following keys if it has the input focus:

Key	Reaction
GUI_KEY_SPACE	If the widget works in multi selection mode this key toggles the state of the current selected item.
GUI_KEY_RIGHT	If the maximum X-size of the list box items is larger than the list box itself this key scrolls the list box contents to the left.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Key	Reaction
GUI_KEY_LEFT	If the maximum X-size of the list box items is larger than the list box itself this key scrolls the list box contents to the right.
GUI_KEY_DOWN	Moves the selection bar down.
GUI_KEY_UP	Moves the selection bar up.

17.12.4 LISTBOX API

The table below lists the available emWin LISTBOX-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
LISTBOX_AddString()	Adds an item to a list box.
LISTBOX_Create()	Creates a LISTBOX widget. (Obsolete)
LISTBOX_CreateAsChild()	Creates a LISTBOX widget as a child window. (Obsolete)
LISTBOX_CreateEx()	Creates a LISTBOX widget.
LISTBOX_CreateIndirect()	Creates a LISTBOX widget from resource table entry.
LISTBOX_CreateUser()	Creates a LISTBOX widget using extra bytes as user data.
LISTBOX_DecSel()	Decrements selection.
LISTBOX_DeleteItem()	Deletes an element.
LISTBOX_GetDefaultBkColor()	Returns the default background color for LISTBOX widgets.
LISTBOX_GetDefaultFont()	Returns the default font for LISTBOX widgets.
LISTBOX_GetDefaultScrollStepH()	Returns the default number of pixels to be scrolled horizontal.
LISTBOX_GetDefaultTextAlign()	Returns the default text alignment for new list boxes.
LISTBOX_GetDefaultTextColor()	Returns the default text color for new list boxes.
LISTBOX_GetFont()	Returns the font of the list box.
LISTBOX_GetItemDisabled()	Returns the disabled state of the given item.
LISTBOX_GetItemSel()	Returns the selection state of a LISTBOX entry.
LISTBOX_GetItemText()	Returns the text of a list box entry.
LISTBOX_GetMulti()	Returns if the multi select mode is active.
LISTBOX_GetNumItems()	Returns the number of items in a list box.
LISTBOX_GetScrollStepH()	Returns the number of pixels to be scrolled horizontal.
LISTBOX_GetSel()	Returns the number of the selected item.
LISTBOX_GetTextAlign()	Returns the text alignment of the LISTBOX.
LISTBOX_GetUserData()	Retrieves the data set with LISTBOX_SetUserData().
LISTBOX_IncSel()	Increments selection.
LISTBOX_InsertString()	Inserts an element.
LISTBOX_InvalidateItem()	Invalidates an item of an owner drawn LISTBOX.
LISTBOX_OwnerDraw()	Default function for drawing a LISTBOX entry.
LISTBOX_SetAutoScrollH()	Activates automatic use of a horizontal scrollbar.
LISTBOX_SetAutoScrollV()	Activates automatic use of a vertical scrollbar.
LISTBOX_SetBkColor()	Sets the background color.
LISTBOX_SetDefaultBkColor()	Sets the default background color for LISTBOX widgets.
LISTBOX_SetDefaultFont()	Changes the default font for LISTBOX widgets.
LISTBOX_SetDefaultScrollStepH()	Sets the default number of pixels to be scrolled horizontal.
LISTBOX_SetDefaultTextAlign()	Sets the default text alignment for new LISTBOX widgets.
LISTBOX_SetDefaultTextColor()	Sets the default text color for LISTBOX widgets.
LISTBOX_SetFont()	Selects the font.
LISTBOX_SetItemDisabled()	Sets the disabled state of the given item.
LISTBOX_SetItemSel()	Sets the selection state of the given item.
LISTBOX_SetItemSpacing()	Sets a spacing between the items.
LISTBOX_SetMulti()	Sets the multi selection mode on or off.
LISTBOX_SetOwnerDraw()	Enables the list box to be owner drawn.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
LISTBOX_SetScrollbarColor()	Sets the colors of the optional scrollbar.
LISTBOX_SetScrollbarWidth()	Sets the width of the scrollbars used by the LISTBOX.
LISTBOX_SetScrollStepH()	Sets the number of pixels to be scrolled horizontal.
LISTBOX_SetSel()	Sets the selected item.
LISTBOX_SetString()	Sets the text of an element.
LISTBOX_SetTextAlign()	Sets the text alignment of the LISTBOX.
LISTBOX_SetTextColor()	Sets the foreground color.
LISTBOX_SetUserData()	Sets the extra data of a LISTBOX widget.

LISTBOX_AddString()

Description

Adds an item to an already existing list box.

Prototype

```
void LISTBOX_AddString(LISTBOX_Handle hObj, const char * s);
```

Parameter	Description
hObj	Handle of list box.
s	Text to display.

LISTBOX_Create()

Description

Creates a LISTBOX widget of a specified size at a specified location.

Prototype

```
LISTBOX_Handle LISTBOX_Create(const GUI_ConstString * ppText,
                              int   x0, int y0,
                              int   xSize, int ySize,
                              int   Flags);
```

Parameter	Description
ppText	Pointer to an array of string pointers containing the elements to be displayed.
x0	Leftmost pixel of the list box (in parent coordinates).
y0	Topmost pixel of the list box (in parent coordinates).
xSize	Horizontal size of the list box (in pixels).
ySize	Vertical size of the list box (in pixels).
Flags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).

Return value

Handle of the created LISTBOX widget; 0 if the function fails.

Additional information

If the parameter ySize is greater than the required space for drawing the contents of the widget, the Y-size will be reduced to the required value. The same applies for the Xsize parameter.

LISTBOX_CreateAsChild()

Description

Creates a LISTBOX widget as a child window.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
LISTBOX_Handle LISTBOX_CreateAsChild(const   GUI_ConstString * ppText,
                                     WM_HWIN hParent,
                                     int     x0,      int y0,
                                     int     xSize,   int ySize,
                                     int     Flags);
```

Parameter	Description
ppText	Pointer to an array of string pointers containing the elements to be displayed.
hParent	Handle of parent window.
x0	X-position of the list box relative to the parent window.
y0	Y-position of the list box relative to the parent window.
xSize	Horizontal size of the list box (in pixels).
ySize	Vertical size of the list box (in pixels).
Flags	Window create flags (see LISTBOX_Create()).

Return value

Handle of the created LISTBOX widget; 0 if the function fails.

Additional information

If the parameter ySize is greater than the space required for drawing the contents of the widget, the Y-size will be reduced to the required value. If ySize = 0 the Y-size of the widget will be set to the Y-size of the client area from the parent window. The same applies for the Xsize parameter.

LISTBOX_CreateEx()

Description

Creates a LISTBOX widget of a specified size at a specified location.

Prototype

```
LISTBOX_Handle LISTBOX_CreateEx(int     x0,      int y0,
                                int     xsize,   int ysize,
                                WM_HWIN hParent, int WinFlags,
                                int     ExFlags, int Id,
                                const   GUI_ConstString * ppText);
```

Parameter	Description
x0	Leftmost pixel of the widget (in parent coordinates).
y0	Topmost pixel of the widget (in parent coordinates).
xsize	Horizontal size of the widget (in pixels).
ysize	Vertical size of the widget (in pixels).
hParent	Handle of parent window. If 0, the new HEADER widget will be a child of the desktop (top-level window).
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
ExFlags	Not used, reserved for future use.
Id	Window ID of the widget.
ppText	Pointer to an array of string pointers containing the elements to be displayed.

Return value

Handle of the created LISTBOX widget; 0 if the function fails.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTBOX_CreateIndirect()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateIndirect(). The elements Flags and Para of the resource passed as parameter are not used.

LISTBOX_CreateUser()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateUser(). For a detailed description of the parameters the function LISTBOX_CreateEx() can be referred to.

LISTBOX_DecSel()

Description

Decrement the list box selection (moves the selection bar of a specified list box up by one item).

Prototypes

```
void LISTBOX_DecSel(LISTBOX_Handle hObj);
```

Parameter	Description
hObj	Handle of list box.

Additional information

Note that the numbering of items always starts from the top with a value of 0; therefore, decrementing the selection will actually move the selection one row up.

LISTBOX_DeleteItem()

Description

Deletes an element from a listbox.

Prototypes

```
void LISTBOX_DeleteItem(LISTBOX_Handle hObj, unsigned int Index);
```

Parameter	Description
hObj	Handle of list box.
Index	Zero based index of element to be deleted.

LISTBOX_GetDefaultBkColor()

Description

Returns the default background color for new LISTBOX widgets.

Prototype

```
GUI_COLOR LISTBOX_GetDefaultBkColor(unsigned Index);
```

Parameter	Description
Index	Zero based index for background color (see table below)

Permitted values for parameter Index	
LISTBOX_CI_UNSEL	Unselected element.
LISTBOX_CI_SEL	Selected element, without focus.
LISTBOX_CI_SELFOCUS	Selected element, with focus.

Return value

Default background color for new LISTBOX widgets.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTBOX_GetDefaultFont()

Description

Returns the default font used for creating LISTBOX widgets.

Prototype

```
const GUI_FONT * LISTBOX_GetDefaultFont(void);
```

Return value

Pointer to the default font.

LISTBOX_GetDefaultScrollStepH()

Description

Returns the default horizontal scroll step used for creating LISTBOX widgets. The horizontal scroll step defines the number of pixels to be scrolled if needed.

Prototype

```
int LISTBOX_GetDefaultScrollStepH(void);
```

Return value

Default horizontal scroll step.

LISTBOX_GetDefaultTextAlign()

Description

Returns the default text alignment for new LISTBOX widgets.

Prototype

```
int LISTBOX_GetDefaultTextAlign(void);
```

Return value

Default text alignment for new LISTBOX widgets.

Additional information

For more information, refer to “LISTBOX_SetTextAlign()” on page 512.

LISTBOX_GetDefaultTextColor()

Description

Returns the default text color for new LISTBOX widgets.

Prototype

```
GUI_COLOR LISTBOX_GetDefaultTextColor(unsigned Index);
```

Parameter	Description
Index	Zero based index for text color (see table below)

Permitted values for parameter Index	
LISTBOX_CI_UNSEL	Unselected element.
LISTBOX_CI_SEL	Selected element, without focus.
LISTBOX_CI_SELFOCUS	Selected element, with focus.

Return value

Default text color for new LISTBOX widgets.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTBOX_GetFont()

Description

Returns a pointer to the font used to display the text of the list box.

Prototype

```
const GUI_FONT * LISTBOX_GetFont(LISTBOX_Handle hObj);
```

Parameter	Description
hObj	Handle of list box.

Return value

Pointer to the font used to display the text of the list box.

LISTBOX_GetItemDisabled()

Description

Returns if the given list box item has been disabled.

Prototype

```
int LISTBOX_GetItemDisabled(LISTBOX_Handle hObj, unsigned Index);
```

Parameter	Description
hObj	Handle of list box.
Index	Zero based index of item.

Return value

1 if item has been disabled, 0 if not.

LISTBOX_GetItemSel()

Description

Returns the selection state of the given listbox item. The selection state of a LISTBOX item can be modified in multi selection mode only.

Prototype

```
int LISTBOX_GetItemSel(LISTBOX_Handle hObj, unsigned int Index);
```

Parameter	Description
hObj	Handle of list box.
Index	Zero based index of item.

Return value

1 if item has been selected, 0 if not.

LISTBOX_GetItemText()

Description

Returns the text of the given list box item.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void LISTBOX_GetItemText(LISTBOX_Handle   hObj,    unsigned Index,
                         char           * pBuffer, int      MaxSize);
```

Parameter	Description
hObj	Handle of list box.
Index	Zero based index of item.
pBuffer	Pointer to buffer to store the item text.
MaxSize	Size of the buffer.

Additional information

The function copies the text of the given list box item into the given buffer.

LISTBOX_GetMulti()

Description

Returns if the multi selection mode of the given list box is active.

Prototype

```
int LISTBOX_GetMulti(LISTBOX_Handle hObj);
```

Parameter	Description
hObj	Handle of list box.

Return value

1 if active, 0 if not.

LISTBOX_GetNumItems()

Description

Returns the number of items in a specified list box.

Prototypes

```
unsigned LISTBOX_GetNumItems(LISTBOX_Handle hObj);
```

Parameter	Description
hObj	Handle of list box.

Return value

Number of items in the list box.

LISTBOX_GetScrollStepH()

Description

Returns the horizontal scroll step of the given list box.

Prototype

```
int LISTBOX_GetScrollStepH(LISTBOX_Handle hObj);
```

Parameter	Description
hObj	Handle of list box.

Return value

Horizontal scroll step of the given list box.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTBOX_GetSel()

Description

Returns the zero based index of the currently selected item in a specified list box. In multi selection mode the function returns the index of the focused element.

Prototype

```
int LISTBOX_GetSel(LISTBOX_Handle hObj);
```

Parameter	Description
hObj	Handle of list box.

Return value

Zero based index of the currently selected item.

Additional information

If no element has been selected the function returns -1.

LISTBOX_GetTextAlign()

Description

Returns the text alignment of the given LISTBOX widget.

Prototype

```
int LISTBOX_GetTextAlign(LISTBOX_Handle hObj);
```

Parameter	Description
hObj	Handle of widget.

Return value

Text alignment of the given LISTBOX widget.

Additional information

For more information, refer to "LISTBOX_SetTextAlign()" on page 512.

LISTBOX_GetUserData()

Prototype explained at the beginning of the chapter as `<WIDGET>_GetUserData()`.

LISTBOX_IncSel()

Description

Increment the list box selection (moves the selection bar of a specified list box down by one item).

Prototypes

```
void LISTBOX_IncSel(LISTBOX_Handle hObj);
```

Parameter	Description
hObj	Handle of list box.

Additional information

Note that the numbering of items always starts from the top with a value of 0; therefore incrementing the selection will actually move the selection one row down.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTBOX_InsertString()

Description

Inserts an element into a listbox.

Prototypes

```
void LISTBOX_InsertString(LISTBOX_Handle hObj,   const char * s,
                          unsigned int   Index);
```

Parameter	Description
hObj	Handle of list box.
s	Pointer to string to be inserted.
Index	Zero based index of element to be inserted.

LISTBOX_InvalidateItem()

Description

Invalidates an item of a owner drawn listbox.

Prototypes

```
void LISTBOX_InvalidateItem(LISTBOX_Handle hObj, int Index);
```

Parameter	Description
hObj	Handle of list box.
Index	Zero based index of element to be invalidated or LISTBOX_ALL_ITEMS if all items should be invalidated.

Additional information

This function only needs to be called if an item of an owner drawn listbox has been changed. If a listbox API function (like `LISTBOX_SetString()`) has been used to modify a listbox item `LISTBOX_InvalidateItem()` needs not to be called. It needs to be called if the user decides, that for example the vertical size of an item has been changed. With other words if no listbox API function has been used to modify the item this function needs to be called.

LISTBOX_ALL_ITEMS

If all items of a listbox should be invalidated use this define as `Index` parameter.

LISTBOX_OwnerDraw()

Description

Default function to handle a LISTBOX entry.

Prototypes

```
int LISTBOX_OwnerDraw(const WIDGET_ITEM_DRAW_INFO * pDrawItemInfo);
```

Parameter	Description
pDrawItemInfo	Pointer to a `WIDGET_ITEM_DRAW_INFO` structure.

Additional information

This function is useful if `LISTBOX_SetOwnerDraw()` has been used. It can be used from your drawing function to retrieve the original x size of a LISTBOX entry and/or to display the text of a LISTBOX entry and should be called for all unhandled commands.
For more information, refer to the section explaining user drawn widgets, `LISTBOX_SetOwnerDraw()` and to the provided example.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTBOX_SetAutoScrollH()

Description

Enables/disables the automatic use of a horizontal scrollbar.

Prototypes

```
void LISTBOX_SetAutoScrollH(LISTBOX_Handle hObj, int OnOff);
```

Parameter	Description
hObj	Handle of list box.
OnOff	(See table below)

Permitted values for parameter OnOff	
0	Disable automatic use of a horizontal scrollbar.
1	Enable automatic use of a horizontal scrollbar.

Additional information

If enabled the listbox checks if all elements fits into the listbox. If not a horizontal scrollbar will be attached to the window.

LISTBOX_SetAutoScrollV()

Description

Enables/disables the automatic use of a vertical scrollbar.

Prototypes

```
void LISTBOX_SetAutoScrollV(LISTBOX_Handle hObj, int OnOff);
```

Parameter	Description
hObj	Handle of list box.
OnOff	(See table below)

Permitted values for parameter OnOff	
0	Disable automatic use of a vertical scrollbar.
1	Enable automatic use of a vertical scrollbar.

Additional information

If enabled the listbox checks if all elements fits into the listbox. If not a vertical scrollbar will be added.

LISTBOX_SetBkColor()

Description

Sets the list box background color.

Prototype

```
void LISTBOX_SetBkColor(LISTBOX_Handle hObj, unsigned int Index,
                        GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of list box.
Index	Index for background color (see table below).
Color	Color to be set.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for parameter Index	
LISTBOX_CI_UNSEL	Unselected element.
LISTBOX_CI_SEL	Selected element, without focus.
LISTBOX_CI_SELFOCUS	Selected element, with focus.
LISTBOX_CI_DISABLED	Disabled element.

LISTBOX_SetDefaultBkColor()

Description

Sets the default background color for new LISTBOX widgets.

Prototype

```
void LISTBOX_SetDefaultBkColor(unsigned Index, GUI_COLOR Color);
```

Parameter	Description
Index	Zero based index for background color (see table below)
Color	Desired background color.

Permitted values for parameter Index	
LISTBOX_CI_UNSEL	Unselected element.
LISTBOX_CI_SEL	Selected element, without focus.
LISTBOX_CI_SELFOCUS	Selected element, with focus.
LISTBOX_CI_DISABLED	Disabled element.

LISTBOX_SetDefaultFont()

Description

Sets the default font used for creating LISTBOX widgets.

Prototype

```
void LISTBOX_SetDefaultFont(const GUI_FONT * pFont)
```

Parameter	Description
pFont	Pointer to the font.

LISTBOX_SetDefaultScrollStepH()

Description

Sets the default horizontal scroll step used when creating a LISTBOX widget.

Prototype

```
void LISTBOX_SetDefaultScrollStepH(int Value);
```

Parameter	Description
Value	Number of pixels to be scrolled.

LISTBOX_SetDefaultTextAlign()

Description

Sets the default text alignment for new LISTBOX widgets.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void LISTBOX_SetDefaultTextAlign(int Align);
```

Parameter	Description
Align	Default text alignment for new LISTBOX widgets.

Additional information

For more information, refer to "LISTBOX_SetTextAlign()" on page 512.

LISTBOX_SetDefaultTextColor()

Description

Sets the default text color for new LISTBOX widgets.

Prototype

```
void LISTBOX_SetDefaultTextColor(unsigned Index, GUI_COLOR Color);
```

Parameter	Description
Index	Zero based index for text color (see table below)
Color	Desired text color.

Permitted values for parameter Index	
LISTBOX_CI_UNSEL	Unselected element.
LISTBOX_CI_SEL	Selected element, without focus.
LISTBOX_CI_SELFOCUS	Selected element, with focus.

LISTBOX_SetFont()

Description

Sets the list box font.

Prototype

```
void LISTBOX_SetFont(LISTBOX_Handle hObj, const GUI_FONT* pfont);
```

Parameter	Description
hObj	Handle of list box.
pFont	Pointer to the font.

LISTBOX_SetItemDisabled()

Description

Modifies the disable state of the given list box item.

Prototype

```
void LISTBOX_SetItemDisabled(LISTBOX_Handle hObj, unsigned Index,
                             int            OnOff);
```

Parameter	Description
hObj	Handle of list box.
Index	Zero based index of the listbox item.
OnOff	1 for disabled, 0 for not disabled.

Additional information

When scrolling through a list box disabled items will be skipped. You can not scroll to a disabled list box item.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTBOX_SetItemSel()

Description

Modifies the selection state of the given list box item.

Prototype


```
void LISTBOX_SetItemSel(LISTBOX_Handle hObj, unsigned Index, int OnOff);
```

Parameter	Description
hObj	Handle of list box.
Index	Zero based index of the listbox item.
OnOff	1 for selected, 0 for not selected.

Additional information

Setting the selection state of a list box item makes only sense when using the multi selection mode. See also LISTBOX_SetMulti().

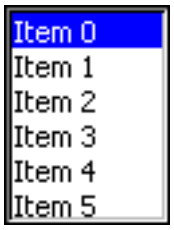LISTBOX_SetItemSpacing()

Before	After
	

Description

Sets an additional spacing below the items of a list box.

Prototype

```
void LISTBOX_SetItemSpacing(LISTBOX_Handle hObj, unsigned Value);
```

Parameter	Description
hObj	Handle of list box.
Value	Number of pixels used as additional spacing between the items.

LISTBOX_SetMulti()

Description

Switches the multi selection mode of a LISTBOX on or off.

Prototype

```
void LISTBOX_SetMulti(LISTBOX_Handle hObj, int Mode);
```

Parameter	Description
hObj	Handle of list box.
Mode	0 for off, 1 for on.

Additional information

The multi selection mode enables the list box to have more than one selected element. Using the space key would toggle the selection state of a list box item.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTBOX_SetOwnerDraw()

Description

Sets the list box to be owner drawn.

Prototype

```
void LISTBOX_SetOwnerDraw(LISTBOX_Handle          hObj,
                          WIDGET_DRAW_ITEM_FUNC * pfDrawItem);
```

Parameter	Description
hObj	Handle of list box.
pfDrawItem	Pointer to owner draw function.

Additional information

This function sets a function pointer to a function which will be called by the widget if a list box item has to be drawn and when the x or y size of a item is needed. It gives you the possibility to draw anything as list box item, not just plain text. pfDrawItem is a pointer to a application-defined function of type WIDGET_DRAW_ITEM_FUNC which is explained at the beginning of the chapter.

Structure of the user defined owner draw function

The following shows the structure of a typical owner draw function. It assumes that your LISTBOX entries are 30 pixels wider than and have the same height as the item drawn by the default function:

```
static int _OwnerDraw(const WIDGET_ITEM_DRAW_INFO * pDrawItemInfo) {
  switch (pDrawItemInfo->Cmd) {
  case WIDGET_ITEM_GET_XSIZE:
    return LISTBOX_OwnerDraw(pDrawItemInfo) + 30; /* Returns the default xsize+10 */
  case WIDGET_ITEM_DRAW:

    /* Your code to be added to draw the LISTBOX item */

    return 0;
  }
  return LISTBOX_OwnerDraw(pDrawItemInfo);   /* Def. function for unhandled cmds */
}
```

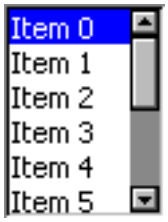
Example



The source code of this example is available in the examples as WIDGET_ListBoxOwnerDraw.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTBOX_SetScrollbarColor()

Before	After
	

Description

Sets the colors of the optional scrollbar.

Prototype

```
void LISTBOX_SetScrollbarColor(LISTBOX_Handle hObj,
                               unsigned int   Index,
                               GUI_COLOR      Color);
```

Parameter	Description
hObj	Handle of widget
Index	Index of desired item (see table below).
Color	Color to be used.

Permitted values for parameter Index	
SCROLLBAR_CI_THUMB	Color of thumb area.
SCROLLBAR_CI_SHAFT	Color of shaft.
SCROLLBAR_CI_ARROW	Color of arrows.

LISTBOX_SetScrollbarWidth()

Description

Sets the width of the scrollbars used by the given list box.

Prototype

```
void LISTBOX_SetScrollbarWidth(LISTBOX_Handle hObj, unsigned Width);
```

Parameter	Description
hObj	Handle of list box.
Width	Width of the scrollbar(s) used by the given listbox.

LISTBOX_SetScrollStepH()

Description

Sets the horizontal scroll step of the given list box. The horizontal scroll step defines the number of pixels to be scrolled if needed.

Prototype

```
void LISTBOX_SetScrollStepH(LISTBOX_Handle hObj, int Value);
```

Parameter	Description
hObj	Handle of list box.
Value	Number of pixels to be scrolled.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTBOX_SetSel()

Description

Sets the selected item of a specified list box.

Prototype

```
void LISTBOX_SetSel(LISTBOX_Handle hObj, int Sel);
```

Parameter	Description
hObj	Handle of list box.
Sel	Element to be selected.

LISTBOX_SetString()

Description



Sets the contents of the given item.

Prototypes

```
void LISTBOX_SetString(LISTBOX_Handle hObj,   const char * s,
                       unsigned int   Index);
```

Parameter	Description
hObj	Handle of list box.
s	Pointer to string containing the new contents.
Index	Zero based index of element to be changed.

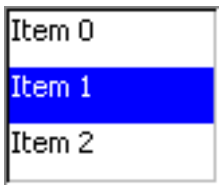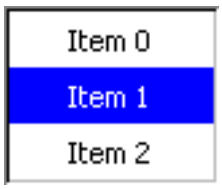LISTBOX_SetTextAlign()

Before	After
	

Description

The function sets the text alignment used to display each item of the list box.

Prototype

```
void LISTBOX_SetTextAlign(LISTBOX_Handle hObj, int Align);
```

Parameter	Description
hObj	Handle of widget.
Align	Text alignment to be used.

Permitted values for parameter Align (horizontal and vertical flags are OR-combinable)	
Horizontal alignment	
GUI_TA_LEFT	Align X-position left (default).
GUI_TA_HCENTER	Center X-position.
GUI_TA_RIGHT	Align X-position right (default).
Vertical alignment	

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for parameter Align (horizontal and vertical flags are OR-combinable)	
GUI_TA_TOP	Align Y-position with top of characters (default).
GUI_TA_VCENTER	Center Y-position.
GUI_TA_BOTTOM	Align Y-position with bottom pixel line of font.

Additional information

The default alignment of list boxes is GUI_TA_LEFT. Per default the height of each item depends on the height of the font used to render the list box items. So vertical text alignment makes only sense if the function LISTBOX_SetItemSpacing() is used to set an additional spacing below the items.

LISTBOX_SetTextColor()

Description

Sets the list box text color.

Prototype

```
void LISTBOX_SetTextColor(LISTBOX_Handle hObj,   unsigned int Index,
                          GUI_COLOR      Color);
```

Parameter	Description
hObj	Handle of list box.
Index	Index for text color (see LISTBOX_SetBackColor()).
Color	Color to be set.

LISTBOX_SetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_SetUserData().

17.12.5 Examples

The Sample folder contains the following examples which show how the widget can be used:

- WIDGET_SimpleListBox.c
- WIDGET_ListBox.c

Note that several other examples also make use of this widget and may also be helpful to get familiar with the widget.

Screenshot of WIDGET_SimpleListBox.c:



Screenshot(s) of WIDGET_ListBox.c:

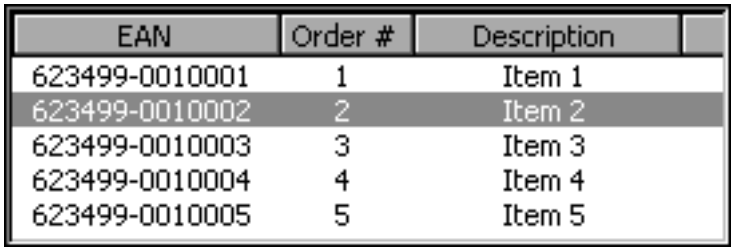
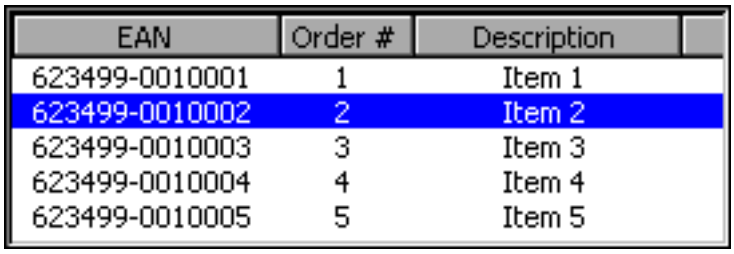
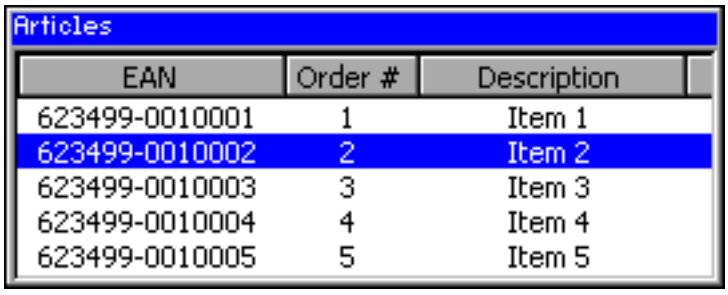
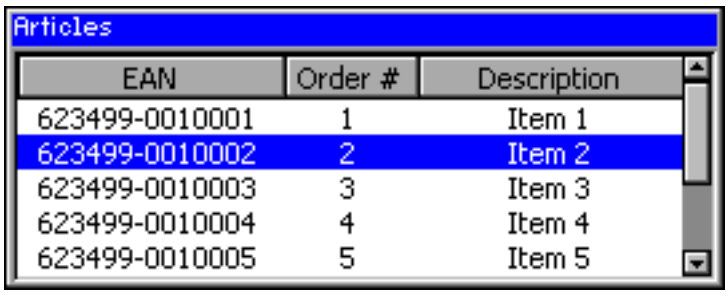





 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.13 LISTVIEW: Listview widget

LISTVIEW widgets are used to select one element of a list with several columns. To manage the columns a LISTVIEW widget contains a HEADER widget. A LISTVIEW can be created without a surrounding frame window or as a child window of a FRAMEWIN widget. As items in a listview are selected, they appear highlighted. Note that the background color of a selected item depends on whether the LISTVIEW window has input focus. The table below shows the appearance of the LISTVIEW widget:

Description	LISTVIEW widget
No focus No surrounding FRAMEWIN No SCROLLBAR attached Grid lines not visible	
Has input focus No surrounding FRAMEWIN No SCROLLBAR attached Grid lines not visible	
Has input focus With surrounding FRAMEWIN No SCROLLBAR attached Grid lines not visible	
Has input focus With surrounding FRAMEWIN SCROLLBAR attached Grid lines not visible	

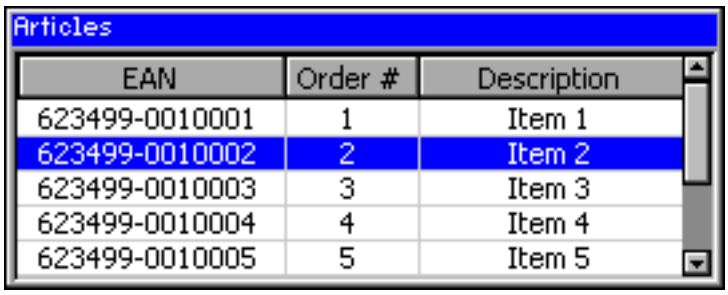 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Description	LISTVIEW widget
Has input focus With surrounding FRAMEWIN SCROLLBAR attached Grid lines visible	

17.13.1 Configuration options

Type	Macro	Default	Description
S	LISTVIEW_FONT_DEFAULT	&GUI_Font13_1	Default font
N	LISTVIEW_BKCOLOR0_DEFAULT	GUI_WHITE	Background color, unselected state.
N	LISTVIEW_BKCOLOR1_DEFAULT	GUI_GRAY	Background color, selected state without focus.
N	LISTVIEW_BKCOLOR2_DEFAULT	GUI_BLUE	Background color, selected state with focus.
N	LISTVIEW_SCROLLSTEP_H_DEFAULT	10	Defines the number of pixels to be scrolled if needed.
N	LISTVIEW_TEXTCOLOR0_DEFAULT	GUI_BLACK	Text color, unselected state.
N	LISTVIEW_TEXTCOLOR1_DEFAULT	GUI_WHITE	Text color, selected state without focus.
N	LISTVIEW_TEXTCOLOR2_DEFAULT	GUI_WHITE	Text color, selected state with focus.
N	LISTVIEW_GRIDCOLOR_DEFAULT	GUI_LIGHTGRAY	Color of grid lines (if shown)
N	LISTVIEW_ALIGN_DEFAULT	GUI_TA_VCENTER |GUI_TA_HCENTER	Default text alignment

17.13.2 Notification codes

The following events are sent from a LISTVIEW widget to its parent window as part of a WM_NOTIFY_PARENT message:

Message	Description
WM_NOTIFICATION_CLICKED	Widget has been clicked.
WM_NOTIFICATION_RELEASED	Widget has been released.
WM_NOTIFICATION_MOVED_OUT	Widget has been clicked and pointer has been moved out off of the widget without releasing.
WM_NOTIFICATION_SCROLL_CHANGED	The scroll position of the optional scrollbar has been changed.
WM_NOTIFICATION_SEL_CHANGED	The selection of the list box has changed.

17.13.3 Keyboard reaction

The widget reacts to the following keys if it has the input focus:

Key	Reaction
GUI_KEY_UP	Moves the selection bar up.
GUI_KEY_DOWN	Moves the selection bar down.
GUI_KEY_RIGHT	If the total amount of the column width is > than the inside area of the listview, the contents scrolls to the left.
GUI_KEY_LEFT	If the total amount of the column width is > than the inside area of the listview, the contents scrolls to the right.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.13.4 LISTVIEW API

The table below lists the available emWin LISTVIEW-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
LISTVIEW_AddColumn()	Adds a column to a LISTVIEW.
LISTVIEW_AddRow()	Adds a row to a LISTVIEW.
LISTVIEW_CompareDec()	Compare function for comparing 2 integer values.
LISTVIEW_CompareText()	Compare function for comparing 2 strings.
LISTVIEW_Create()	Creates a LISTVIEW widget. (Obsolete)
LISTVIEW_CreateAttached()	Creates a LISTVIEW widget attached to a window.
LISTVIEW_CreateEx()	Creates a LISTVIEW widget.
LISTVIEW_CreateIndirect()	Creates a LISTVIEW widget from a resource table entry.
LISTVIEW_CreateUser()	Creates a LISTVIEW widget using extra bytes as user data.
LISTVIEW_DecSel()	Decrements selection.
LISTVIEW_DeleteColumn()	Deletes the given column.
LISTVIEW_DeleteRow()	Deletes the given row.
LISTVIEW_DisableRow()	Sets the state of the given row to disabled.
LISTVIEW_DisableSort()	Disables sorting of the LISTVIEW.
LISTVIEW_EnableRow()	Sets the state of the given row to enabled.
LISTVIEW_EnableSort()	Enables sorting of the LISTVIEW.
LISTVIEW_GetBkColor()	Returns the background color of the LISTVIEW.
LISTVIEW_GetFont()	Returns the font of the LISTVIEW.
LISTVIEW_GetHeader()	Returns the handle of the attached HEADER widget.
LISTVIEW_GetItemText()	Returns the text of the given cell.
LISTVIEW_GetNumColumns()	Returns the number of columns.
LISTVIEW_GetNumRows()	Returns the number of rows.
LISTVIEW_GetSel()	Returns the number of the selected item.
LISTVIEW_GetSelUnsorted()	Returns the number of the selected item in unsorted state.
LISTVIEW_GetTextColor()	Returns the text color of the LISTVIEW.
LISTVIEW_GetUserData()	Retrieves the data set with LISTVIEW_SetUserData().
LISTVIEW_GetUserDataRow()	Returns the user data of the given row.
LISTVIEW_IncSel()	Increments selection.
LISTVIEW_InsertRow()	Inserts a new row at the given position.
LISTVIEW_SetAutoScrollH()	Enables the automatic use of a horizontal scrollbar.
LISTVIEW_SetAutoScrollV()	Enables the automatic use of a vertical scrollbar.
LISTVIEW_SetBkColor()	Sets the background color.
LISTVIEW_SetColumnWidth()	Sets the column width.
LISTVIEW_SetCompareFunc()	Sets the compare function for the given column.
LISTVIEW_SetDefaultBkColor()	Sets the default background color for HEADER widgets.
LISTVIEW_SetDefaultFont()	Sets the default font for HEADER widgets.
LISTVIEW_SetDefaultGridColor()	Sets the default text color for HEADER widgets.
LISTVIEW_SetDefaultTextColor()	Sets the default color of the grid lines for HEADER widgets.
LISTVIEW_SetFixed()	Fixes the given number of columns.
LISTVIEW_SetFont()	Sets the font of the LISTVIEW.
LISTVIEW_SetGridVis()	Sets the visibility flag of the grid lines.
LISTVIEW_SetHeaderHeight()	Sets the height of the header.
LISTVIEW_SetItemBitmap()	Sets a bitmap as the background of a LISTVIEW cell
LISTVIEW_SetItemBkColor()	Sets the background color of a LISTVIEW cell
LISTVIEW_SetItemText()	Sets the text of a LISTVIEW cell.
LISTVIEW_SetItemTextColor()	Sets the text color of a LISTVIEW cell

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
LISTVIEW_SetLBorder()	Sets the number of pixels used for the left border.
LISTVIEW_SetRBorder()	Sets the number of pixels used for the right border.
LISTVIEW_SetRowHeight()	Sets the row height of the LISTVIEW
LISTVIEW_SetSel()	Sets the current selection.
LISTVIEW_SetSelUnsorted()	Sets the current selection in unsorted state.
LISTVIEW_SetSort()	Sets the column and sorting order to be sorted by.
LISTVIEW_SetTextAlign()	Sets the text alignment of a column.
LISTVIEW_SetTextColor()	Sets the text color.
LISTVIEW_SetUserData()	Sets the extra data of a LISTVIEW widget.
LISTVIEW_SetUserDataRow()	Sets the user data of the given row.

LISTVIEW_AddColumn()

Description

Adds a new column to a LISTVIEW widget.

Prototype

```
void LISTVIEW_AddColumn(LISTVIEW_Handle   hObj, int Width,
                        const char      * s,    int Align);
```

Parameter	Description
hObj	Handle of widget
Width	Width of the new column
s	Text to be displayed in the HEADER widget
Align	Text alignment mode to set. May be a combination of a horizontal and a vertical alignment flag.

Permitted values for parameter Align (horizontal and vertical flags are OR-combinable)	
Horizontal alignment	
GUI_TA_LEFT	Align X-position left.
GUI_TA_HCENTER	Center X-position.
GUI_TA_RIGHT	Align X-position right.
Vertical alignment	
GUI_TA_TOP	Align Y-position with top of characters.
GUI_TA_VCENTER	Center Y-position.
GUI_TA_BOTTOM	Align Y-position with bottom pixel line of font.

Additional information

The Width-parameter can be 0. If Width = 0 the width of the new column will be calculated by the given text and by the default value of the horizontal spacing.
You can only add columns to an 'empty' LISTVIEW widget. If it contains 1 or more rows you can not add a new column.

LISTVIEW_AddRow()

Description

Adds a new row to a LISTVIEW widget.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void LISTVIEW_AddRow(LISTVIEW_Handle hObj, const GUI_ConstString * ppText);
```

Parameter	Description
hObj	Handle of widget
ppText	Pointer to array containing the text of the LISTVIEW cells

Additional information

The ppText-array should contain one item for each column. If it contains less items the remaining cells left blank.

LISTVIEW_CompareDec()

Description

Compare function for comparing 2 integer values.

Prototype

```
int LISTVIEW_CompareDec(const void * p0, const void * p1);
```

Parameter	Description
p0	Void pointer to first value:
p1	Void pointer to second value.

Return value

< 0 if value of cell 0 greater than value of cell 1.
0 if value of cell 0 identical to value of cell 1.
> 0 if value of cell 0 less than value of cell 1.

Additional information

The purpose of this function is to be used by the listviews sorting algorithm if the cell text represents integer values.
For details about how to use this function for sorting, refer also to "LISTVIEW_SetCompareFunc()" on page 528.
The Sample folder contains the example WIDGET_SortedListview.c which shows how to use the function.

LISTVIEW_CompareText()

Description

Function for comparison of 2 strings.

Prototype

```
int LISTVIEW_CompareText(const void * p0, const void * p1);
```

Parameter	Description
p0	Void pointer to first text:
p1	Void pointer to second text.

Return value

> 0 if text of cell 0 greater than text of cell 1.
0 if text of cell 0 identical to text of cell 1.
< 0 if text of cell 0 less than text of cell 1.

Additional information

The purpose of this function is to be used by the listviews sorting algorithm.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

For details about how to use this function for sorting, refer also to "LISTVIEW_SetCompareFunc()" on page 528.
The Sample folder contains the example WIDGET_SortedListview.c which shows how to use the function.

LISTVIEW_Create()

(Obsolete, LISTVIEW_CreateEx() should be used instead)

Description

Creates a LISTVIEW widget of a specified size at a specified location.

Prototype

```
LISTVIEW_Handle LISTVIEW_Create(int     x0,      int y0,
                                int     xsize,   int ysize,
                                WM_HWIN hParent, int Id,
                                int     Flags,   int SpecialFlags);
```

Parameter	Description
x0	Leftmost pixel of the HEADER widget (in parent coordinates).
y0	Topmost pixel of the HEADER widget (in parent coordinates).
xsize	Horizontal size of the HEADER widget (in pixels).
ysize	Vertical size of the HEADER widget (in pixels).
hParent	Handle of the parent window
Id	Id of the new HEADER widget
Flags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
SpecialFlags	(Reserved for later use)

Return value

Handle of the created LISTVIEW widget; 0 if the function fails.

LISTVIEW_CreateAttached()

Description

Creates a LISTVIEW widget which is attached to an existing window.

Prototype

```
LISTVIEW_Handle LISTVIEW_CreateAttached(WM_HWIN hParent,       int Id,
                                        int     SpecialFlags);
```

Parameter	Description
hObj	Handle of widget
Id	Id of the new LISTVIEW widget
SpecialFlags	(Not used, reserved for later use)

Return value

Handle of the created LISTVIEW widget; 0 if the function fails.

Additional information

An attached LISTVIEW widget is essentially a child window which will position itself on the parent window and operate accordingly.

LISTVIEW_CreateEx()

Description

Creates a LISTVIEW widget of a specified size at a specified location.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
LISTVIEW_Handle LISTVIEW_CreateEx(int     x0,      int y0,
                                  int     xsize,   int ysize,
                                  WM_HWIN hParent, int WinFlags,
                                  int     ExFlags, int Id);
```

Parameter	Description
x0	Leftmost pixel of the widget (in parent coordinates).
y0	Topmost pixel of the widget (in parent coordinates).
xsize	Horizontal size of the widget (in pixels).
ysize	Vertical size of the widget (in pixels).
hParent	Handle of parent window. If 0, the new LISTVIEW widget will be a child of the desktop (top-level window).
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
ExFlags	Not used, reserved for future use.
Id	Window ID of the widget.

Return value

Handle of the created LISTVIEW widget; 0 if the function fails.

LISTVIEW_CreateIndirect()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateIndirect().

LISTVIEW_CreateUser()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateUser(). For a detailed description of the parameters the function LISTVIEW_CreateEx() can be referred to.

LISTVIEW_DecSel()

Description

Decrement the listview selection (moves the selection bar of a specified listview up by one item, if possible).

Prototype

```
void LISTVIEW_DecSel(LISTVIEW_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

Additional information

Note that the numbering of items always starts from the top with a value of 0; therefore, decrementing the selection will actually move the selection one row up.

LISTVIEW_DeleteColumn()

Description

Deletes the specified column of the listview.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void LISTVIEW_DeleteColumn(LISTVIEW_Handle hObj, unsigned Index);
```

Parameter	Description
hObj	Handle of widget
Index	Zero based index of column to be deleted.

Additional information

Note that the numbering of items always starts from the left with a value of 0.

LISTVIEW_DeleteRow()

Description

Deletes the specified row of the listview.

Prototype



```
void LISTVIEW_DeleteRow(LISTVIEW_Handle hObj, unsigned Index);
```

Parameter	Description
hObj	Handle of widget
Index	Zero based index of row to be deleted.

Additional information

Note that the numbering of items always starts from the top with a value of 0.

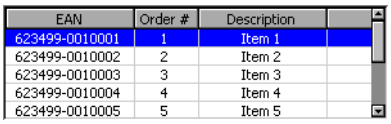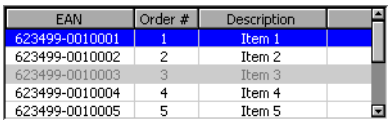LISTVIEW_DisableRow()

Before	After
	

Description

The function sets the state of the given row to disabled.

Prototype

```
void LISTVIEW_DisableRow(LISTVIEW_Handle hObj, unsigned Row);
```

Parameter	Description
hObj	Handle of widget
Row	Zero based index of the row to be disabled.

Additional information

When scrolling through a listview disabled items will be skipped. You can not scroll to a disabled listview item.

LISTVIEW_DisableSort()

Description

Disables sorting of the given listview. After calling this function the contents of the listview will be shown unsorted.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype



```
void LISTVIEW_DisableSort(LISTVIEW_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

Additional information

For details about how to use sorting in listview widgets, refer to "LISTVIEW_SetCompareFunc()" on page 528 and "LISTVIEW_SetSort()" on page 536.
The Sample folder contains the example WIDGET_SortedListview.c which shows how to use the function.

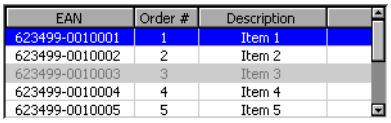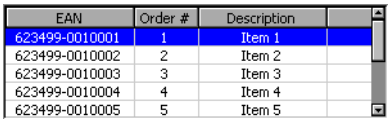LISTVIEW_EnableRow()

Before	After
	

Description

The function sets the state of the given row to enabled.

Prototype

```
void LISTVIEW_EnableRow(LISTVIEW_Handle hObj, unsigned Row);
```

Parameter	Description
hObj	Handle of widget
Row	Zero based index of the row to be disabled.

Additional information

Refer to "LISTVIEW_DisableRow()" on page 521.

LISTVIEW_EnableSort()

Description

Enables sorting for the given listview. After calling this function the contents of the listview can be rendered sorted after clicking on the header item of the desired column, by which the listview should sort its data. Note that this works only after a compare function for the desired column has been set.

Prototype

```
void LISTVIEW_EnableSort(LISTVIEW_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

Additional information

For details about how to set a compare function, refer to "LISTVIEW_SetCompareFunc()" on page 528.
The Sample folder contains the example WIDGET_SortedListview.c which shows how to use the function.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTVIEW_GetBkColor()

Description

Returns the background color of the given listview.

Prototype

```
GUI_COLOR LISTVIEW_GetBkColor(LISTVIEW_Handle hObj, unsigned Index);
```

Parameter	Description
hObj	Handle of widget
Index	Index of color (see table below)

Permitted values for parameter Index	
LISTVIEW_CI_UNSEL	Unselected element.
LISTVIEW_CI_SEL	Selected element, without focus.
LISTVIEW_CI_SELFOCUS	Selected element, with focus.

Return value

Background color of the given listview.

LISTVIEW_GetFont()

Description

Returns a pointer to the font used to display the text of the listview.

Prototype

```
const GUI_FONT * LISTVIEW_GetFont(LISTVIEW_Handle hObj);
```

Parameter	Description
hObj	Handle of widget.

Return value

Pointer to the font used to display the text of the listview.

LISTVIEW_GetHeader()

Description

Returns the handle of the HEADER widget.

Prototype

```
HEADER_Handle LISTVIEW_GetHeader(LISTVIEW_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

Return value

Handle of the HEADER widget.

Additional information

Each LISTVIEW widget contains a HEADER widget to manage the columns. You can use this handle to change the properties of the LISTVIEW-HEADER, for example to change the text color of the HEADER widget.
Example:

```
LISTVIEW_Handle hListView = LISTVIEW_Create(10, 80, 270, 89, 0, 1234, WM_CF_SHOW, 0);
HEADER_Handle hHeader = LISTVIEW_GetHeader(hListView);
HEADER_SetTextColor(hHeader, GUI_GREEN);
```


© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTVIEW_GetItemText()

Description

Returns the text of the given listview cell by copying it to the given buffer.

Prototype

```
void LISTVIEW_GetItemText(LISTVIEW_Handle hObj,     unsigned   Column,
                          unsigned        Row,      char     * pBuffer,
                          unsigned        MaxSize);
```

Parameter	Description
hObj	Handle of widget
Column	Zero based index of the cell's column.
Row	Zero based index of the cell's row
pBuffer	Pointer to a buffer to be filled by the routine.
MaxSize	Size in bytes of the buffer.

Additional information

If the text of the cell does not fit into the buffer, the number of bytes specified by the parameter `MaxSize` will be copied to the buffer.

LISTVIEW_GetNumColumns()

Description

Returns the number of columns of the given LISTVIEW widget.

Prototype

```
unsigned LISTVIEW_GetNumColumns(LISTVIEW_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

Return value

Number of columns of the given LISTVIEW widget.

LISTVIEW_GetNumRows()

Description

Returns the number of rows of the given LISTVIEW widget.

Prototype

```
unsigned LISTVIEW_GetNumRows(LISTVIEW_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

Return value

Number of rows of the given LISTVIEW widget.

LISTVIEW_GetSel()

Description

Returns the number of the currently selected row in a specified LISTVIEW widget.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
int LISTVIEW_GetSel(LISTVIEW_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

Return value

Number of the currently selected row.

LISTVIEW_GetSelUnsorted()

Description

Returns the index of the currently selected row in unsorted state.

Prototype

```
int LISTVIEW_GetSelUnsorted(LISTVIEW_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

Return value

Index of the currently selected row in unsorted state.

Additional information

This function returns the actually index of the selected row, whereas the function `LISTVIEW_GetSel()` only returns the index of the sorted row. The actual (unsorted) row index should be used in function calls as row index.
The `Sample` folder contains the example `WIDGET_SortedListview.c` which shows how to use the function.

LISTVIEW_GetTextColor()

Description

Returns the text color of the given listview.

Prototype

```
GUI_COLOR LISTVIEW_GetTextColor(LISTVIEW_Handle hObj, unsigned Index);
```

Parameter	Description
hObj	Handle of widget
Index	Index of color (see table below)

Permitted values for parameter Index	
LISTVIEW_CI_UNSEL	Unselected element.
LISTVIEW_CI_SEL	Selected element, without focus.
LISTVIEW_CI_SELFOCUS	Selected element, with focus.

Return value

Text color of the given listview.

LISTVIEW_GetUserData()

Prototype explained at the beginning of the chapter as `<WIDGET>_GetUserData()`.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTVIEW_GetUserDataRow()

Description

Returns the user data of the given row.

Prototype

```
U32 LISTVIEW_GetUserData(LISTVIEW_Handle hObj, unsigned Row);
```

Parameter	Description
hObj	Handle of widget
Row	Zero based index of row.

Return value

User data of the given row.

Additional information

For details about how to set user data of a row, please refer to "LISTVIEW_SetUserDataRow()" on page 537.

LISTVIEW_IncSel()

Description

Increment the list box selection (moves the selection bar of a specified LISTVIEW down by one item).

Prototype

```
void LISTVIEW_IncSel(LISTVIEW_Handle hObj);
```

Parameter	Description
hObj	Handle of widget

LISTVIEW_InsertRow()

Description

Inserts a new row into the listview at the given position.

Prototype

```
int LISTVIEW_InsertRow(LISTVIEW_Handle         hObj,    unsigned Index,
                       const GUI_ConstString * ppText);
```

Parameter	Description
hObj	Handle of widget
Index	Index of the new row.
ppText	Pointer to a string array containing the cell data of the new row.

Return value

0 if function succeed, 1 if an error occurs.

Additional information

The ppText-array should contain one item for each column. If it contains less items the remaining cells left blank.
If the given index is >= the current number of rows, the function LISTVIEW_AddRow() will be used to add the new row.
The Sample folder contains the example WIDGET_SortedListview.c which shows how to use the function.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTVIEW_SetAutoScrollH()

Description

Enables/disables the automatic use of a horizontal scrollbar.

Prototype

```
void LISTVIEW_SetAutoScrollH(LISTVIEW_Handle hObj, int OnOff);
```

Parameter	Description
hObj	Handle of widget
OnOff	(see table below)

Permitted values for parameter OnOff	
0	Disable automatic use of a horizontal scrollbar.
1	Enable automatic use of a horizontal scrollbar.

Additional information

If enabled the listview checks if all columns fit into the widgets area. If not a horizontal scrollbar will be added.

LISTVIEW_SetAutoScrollV()

Description

Enables/disables the automatic use of a vertical scrollbar.

Prototype

```
void LISTVIEW_SetAutoScrollV(LISTVIEW_Handle hObj, int OnOff);
```

Parameter	Description
hObj	Handle of widget
OnOff	(see table below)

Permitted values for parameter OnOff	
0	Disable automatic use of a vertical scrollbar.
1	Enable automatic use of a vertical scrollbar.

Additional information

If enabled the listview checks if all rows fit into the widgets area. If not a vertical scrollbar will be added.

LISTVIEW_SetBkColor()

Description

Sets the background color of the given LISTVIEW widget.

Prototype

```
void LISTVIEW_SetBkColor(LISTVIEW_Handle hObj,   unsigned int Index,
                         GUI_COLOR       Color);
```

Parameter	Description
hObj	Handle of widget
Index	Index for background color (see table below).
Color	Color to be set.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for parameter Index	
LISTVIEW_CI_UNSEL	Unselected element.
LISTVIEW_CI_SEL	Selected element, without focus.
LISTVIEW_CI_SELFOCUS	Selected element, with focus.
LISTVIEW_CI_DISABLED	Disabled element.

Additional information

To set the background color for a single cell the function LISTVIEW_SetItemBkColor() should be used.
The Sample folder contains the example WIDGET_SortedListview.c which shows how to use the function.

LISTVIEW_SetColumnWidth()

Description

Sets the width of the given column.

Prototype

```
void LISTVIEW_SetColumnWidth(LISTVIEW_Handle hObj,   unsigned int Index,
                             int             Width);
```

Parameter	Description
hObj	Handle of widget
Index	Number of column
Width	New width

LISTVIEW_SetCompareFunc()

Description

Sets the compare function for the given column. A compare function needs to be set if the listview widget should be sorted by the given column.

Prototype

```
void LISTVIEW_SetCompareFunc(LISTVIEW_Handle hObj, unsigned Column,
                     int (* fpCompare)(const void * p0, const void * p1));
```

Parameter	Description
hObj	Handle of widget
Column	Index of the desired column for which the compare function should be set.
fpCompare	Function pointer to compare function.

Additional information

If the sorting feature of the listview widget is used, the widget uses a compare function to decide if the contents of one cell is greater, equal or less than the contents of the other cell.
Per default no compare function is set for the listview columns. For each column which should be used for sorting, a compare function needs to be set.
The cells of the listview widget contain text. But sometimes the text represents data of other types like dates, integers or others. So different compare functions are required for sorting. emWin provides 2 compare functions:

LISTVIEW_CompareText(): Function can be used for comparing cells containing text.

LISTVIEW_CompareDec(): Function can be used for comparing cells which text, where the contents represents integer values.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

The compare function should return a value >0, if the contents of the second cell is greater than the contents of the first cell and <0, if the contents of the second cell is less than the contents of the first cell or 0 if equal.
Also user defined compare functions can be used. The prototype of a application-defined function should be defined as follows:

Prototype

```
int APPLICATION_Compare(const void * p0, const void * p1);
```

Parameter	Description
p0	Pointer to NULL terminated string data of the first cell.
p1	Pointer to NULL terminated string data of the second cell.

Example

```
int APPLICATION_Compare(const void * p0, const void * p1) {
  return strcmp((const char *)p1, (const char *)p0);
}

void SetAppCompareFunc(WM_HWIN hListView, int Column) {
  LISTVIEW_SetCompareFunc(hListView, Column, APPLICATION_Compare);
}
```

The `Sample` folder contains the example `WIDGET_SortedListview.c` which shows how to use the function.

LISTVIEW_SetDefaultBkColor()

Description

Sets the default background color for new LISTVIEW widgets.

Prototype

```
GUI_COLOR LISTVIEW_SetDefaultBkColor(unsigned int Index, GUI_COLOR Color);
```

Parameter	Description
Index	Index of default background color (see table below)
Color	Color to be set as default

Permitted values for parameter Index	
LISTVIEW_CI_UNSEL	Unselected element.
LISTVIEW_CI_SEL	Selected element, without focus.
LISTVIEW_CI_SELFOCUS	Selected element, with focus.
LISTVIEW_CI_DISABLED	Disabled element.

Return value

Previous default value.

LISTVIEW_SetDefaultFont()

Description

Sets the default font for new LISTVIEW widgets.

Prototype

```
const GUI_FONT * LISTVIEW_SetDefaultFont(const GUI_FONT * pFont);
```

Parameter	Description
pFont	Pointer to font used for new LISTVIEW widgets

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

Previous default value.

LISTVIEW_SetDefaultGridColor()

Description

Sets the default color of the grid lines for new LISTVIEW widgets.

Prototype

```
GUI_COLOR LISTVIEW_SetDefaultGridColor(GUI_COLOR Color);
```

Parameter	Description
Color	New default value

Return value

Previous default value

LISTVIEW_SetDefaultTextColor()

Description

Sets the default text color for new LISTVIEW widgets.

Prototype

```
GUI_COLOR LISTVIEW_SetDefaultTextColor(unsigned int Index, GUI_COLOR Color);
```

Parameter	Description
Index	Index of default text color (see table below)
Color	Color to be set as default

Permitted values for parameter Index	
0	Unselected element.
1	Selected element, without focus.
2	Selected element, with focus.

Return value

Previous default value.

LISTVIEW_SetFixed()

Description

Fixes the given number of columns at their horizontal positions.

Prototype

```
unsigned LISTVIEW_SetFixed(LISTVIEW_Handle hObj, unsigned Fixed);
```

Parameter	Description
hObj	Handle of listview.
Fixed	Number of columns to be fixed at their horizontal positions.

Additional information

Using this function makes sense if one or more columns should remain at their horizontal positions during scrolling operations.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTVIEW_SetFont()

Description

Sets the listview font.

Prototype

```
void LISTVIEW_SetFont(LISTVIEW_Handle hObj, const GUI_FONT * pFont);
```

Parameter	Description
hObj	Handle of listview.
pFont	Pointer to the font.

LISTVIEW_SetGridVis()

Description

Sets the visibility flag of the grid lines. When creating a LISTVIEW the grid lines are disabled per default.

Prototype

```
int LISTVIEW_SetGridVis(LISTVIEW_Handle hObj, int Show);
```

Parameter	Description
hObj	Handle of widget
Show	Sets the visibility of the grid lines

Permitted values for parameter Show	
0	Not visible.
1	Visible

Return value

Previous value of the visibility flag.

LISTVIEW_SetHeaderHeight()

Description

Sets the height of the attached header widget.

Prototype

```
void LISTVIEW_SetHeaderHeight(LISTVIEW_Handle hObj, unsigned HeaderHeight);
```



Parameter	Description
hObj	Handle of the LISTVIEW widget.
Show	Height of the attached HEADER widget to be set.

Additional information

Setting the height to 0 causes the header widget not to be displayed.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTVIEW_SetItemBitmap()

Before	After
	

Description



Sets a bitmap as background of the given cell.

Prototype

```
void LISTVIEW_SetItemBitmap(LISTVIEW_Handle hObj,
                            unsigned        Column, unsigned Row,
                            int             xOff,   int      yOff,
                            const GUI_BITMAP GUI_UNI_PTR * pBitmap);
```

Parameter	Description
hObj	Handle of a listview widget
Column	Number of column
Row	Number of row
xOff	Offset for the leftmost pixel of the bitmap to be drawn
yOff	Offset for the topmost pixel of the bitmap to be drawn
pBitmap	Pointer to the bitmap

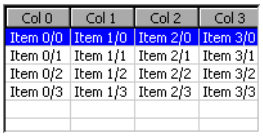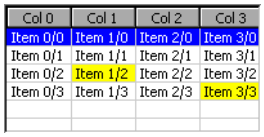LISTVIEW_SetItemBkColor()

Before	After
	

Description

Sets the background color of the given cell.

Prototype

```
void LISTVIEW_SetItemBkColor(LISTVIEW_Handle hObj,
                             unsigned        Column, unsigned  Row,
                             unsigned int    Index,  GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of widget
Column	Number of columns.
Row	Number of rows.
Index	Index of background color (see table below).
Color	Color to be used.

Permitted values for parameter Index	
LISTVIEW_CI_UNSEL	Unselected element.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for parameter Index	
LISTVIEW_CI_SEL	Selected element, without focus.
LISTVIEW_CI_SELFOCUS	Selected element, with focus.
LISTVIEW_CI_DISABLED	Disabled element.

Additional information

This function overwrites the default background color for the given cell set by LISTVIEW_SetBkColor().

LISTVIEW_SetItemText()

Description



Sets the text of one cell of the LISTVIEW widget specified by row and column.

Prototype

```
void LISTVIEW_SetItemText(LISTVIEW_Handle hObj, unsigned     Column,
                          unsigned        Row,  const char * s);
```

Parameter	Description
hObj	Handle of widget.
Column	Number of column.
Row	Number of row.
s	Text to be displayed in the table cell.

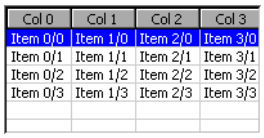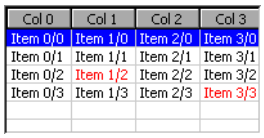LISTVIEW_SetItemTextColor()

Before	After
	

Description

Sets the text color of the given cell.

Prototype

```
void LISTVIEW_SetItemTextColor(LISTVIEW_Handle hObj,
                               unsigned        Column, unsigned  Row,
                               unsigned int    Index,  GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of widget
Column	Number of column.
Row	Number of row.
Index	Index of text color (see table below).
Color	Color to be used.



Permitted values for parameter Index	
LISTVIEW_CI_UNSEL	Unselected element.
LISTVIEW_CI_SEL	Selected element, without focus.
LISTVIEW_CI_SELFOCUS	Selected element, with focus.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

This function overwrites the default text color for the given cell set by `LISTVIEW_SetTextColor()`.

LISTVIEW_SetLBorder()

Before	After
	

Description

Sets the number of pixels used for the left border within each cell of the listview.

Prototype



```
void LISTVIEW_SetLBorder(LISTVIEW_Handle hObj, unsigned BorderSize);
```

Parameter	Description
hObj	Handle of widget.
BorderSize	Number of pixels to be used.

Additional information

Using this function has no effect to the header widget used by the listview.

LISTVIEW_SetRBorder()

Before	After
	

Description

Sets the number of pixels used for the right border within each cell of the listview.

Prototype

```
void LISTVIEW_SetRBorder(LISTVIEW_Handle hObj, unsigned BorderSize);
```

Parameter	Description
hObj	Handle of widget.
BorderSize	Number of pixels to be used.

Additional information

Using this function has no effect to the header widget used by the listview.

LISTVIEW_SetRowHeight()

Description

Sets the number of pixels used for the height of each row of the listview.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
unsigned LISTVIEW_SetRowHeight(LISTVIEW_Handle hObj, unsigned RowHeight);
```

Parameter	Description
hObj	Handle of widget.

Return value

Previous value of the row height set by this function. If the return value is 0, the height of the rows depends on the height of the font used by the widget.

Additional information

Per default the height of the rows depends on the height of the used font.

LISTVIEW_SetSel()

Description

Sets the selected row of a specified LISTVIEW widget.

Prototype

```
void LISTVIEW_SetSel(LISTVIEW_Handle hObj, int Sel);
```

Parameter	Description
hObj	Handle of widget
Sel	Element to be selected.

LISTVIEW_SetSelUnsorted()

Description

Sets the index of the currently selected row in unsorted state.

Prototype

```
void LISTVIEW_SetSelUnsorted(LISTVIEW_Handle hObj, int Sel);
```



Parameter	Description
hObj	Handle of widget.
Sel	Zero based selection index in unsorted state.

Additional information

This function sets the actually index of the selected row, whereas the function `LISTVIEW_SetSel()` sets the index of the sorted row. The actual (unsorted) row index should be used in function calls as row index.
The `Sample` folder contains the example `WIDGET_SortedListview.c` which shows how to use the function.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

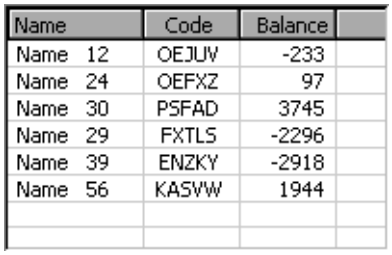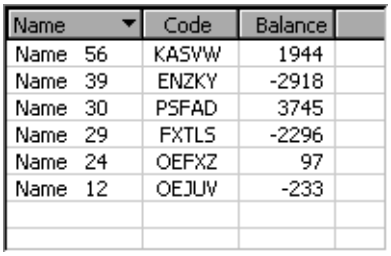LISTVIEW_SetSort()

Before	After
	

Description

This function sets the column to be sorted by and the sorting order.

Prototype

```
unsigned LISTVIEW_SetSort(LISTVIEW_Handle hObj,     unsigned Column,
                          unsigned        Reverse);
```

Parameter	Description
hObj	Handle of widget.
Column	Column to be sorted by.
Reverse	0 for normal sorting order (greatest element at the top), 1 for reverse order.

Return value

0 if function was successfully, 1 if not.

Additional information

Before calling this function a compare function needs to be set for the desired column. For details about how to set a compare function, refer to "LISTVIEW_SetCompareFunc()" on page 528.
The Sample folder contains the example WIDGET_SortedListview.c which shows how to use the function.

LISTVIEW_SetTextAlign()

Description

Sets the alignment for the given column.

Prototype

```
void LISTVIEW_SetTextAlign(LISTVIEW_Handle hObj,   unsigned int Index,
                           int             Align);
```

Parameter	Description
hObj	Handle of widget
Index	Number of column
Align	Text alignment mode to set. May be a combination of a horizontal and a vertical alignment flag.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for parameter Align (horizontal and vertical flags are OR-combinable)	
Horizontal alignment	
GUI_TA_LEFT	Align X-position left (default).
GUI_TA_HCENTER	Center X-position.
GUI_TA_RIGHT	Align X-position right (default).
Vertical alignment	
GUI_TA_TOP	Align Y-position with top of characters (default).
GUI_TA_VCENTER	Center Y-position.
GUI_TA_BOTTOM	Align Y-position with bottom pixel line of font.

LISTVIEW_SetTextColor()

Description

Sets the text color of the given LISTVIEW widget.

Prototype

```
void LISTVIEW_SetTextColor(LISTVIEW_Handle hObj,   unsigned int Index,
                           GUI_COLOR       Color);
```

Parameter	Description
hObj	Handle of widget
Index	Index for text color (see table below).
Color	Color to be set.

Permitted values for parameter Index	
LISTVIEW_CI_UNSEL	Unselected element.
LISTVIEW_CI_SEL	Selected element, without focus.
LISTVIEW_CI_SELFOCUS	Selected element, with focus.

LISTVIEW_SetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_SetUserData().

LISTVIEW_SetUserDataRow()

Description

Sets the user data of the given row.

Prototype

```
void LISTVIEW_SetUserData(LISTVIEW_Handle hObj,      unsigned Row,
                          U32             UserData);
```

Parameter	Description
hObj	Handle of widget
Row	Row for which the user data should be set
UserData	Value to be associated with the row.

Additional information

Sets the 32-bit value associated with the row. Each row has a corresponding 32-bit value intended for use by the application.

17.13.5 Example


The Sample folder contains the following example which shows how the widget can be used:

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

- WIDGET_ListView.c

Note that several other examples also make use of this widget and may also be helpful to get familiar with the widget.

Screenshot of WIDGET_ListView.c:

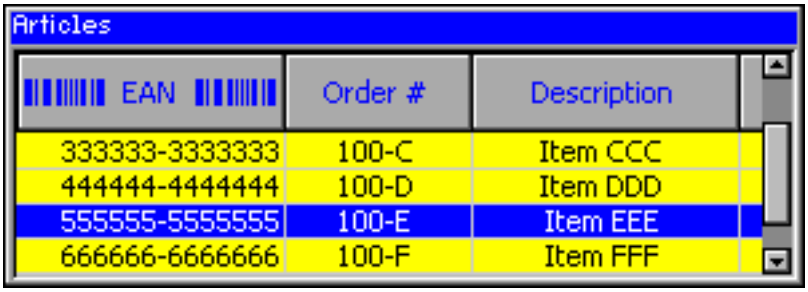

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.14 LISTWHEEL: Listwheel widget

This widget is similar to the LISTBOX widget described earlier in this chapter. Whereas the data of a LISTBOX is selected by moving the cursor with the keyboard or by using a SRCOLLBAR the LISTWHEEL works completely different: The whole data area can be moved via pointer input device (PID). Striking over the widget from top to bottom or vice versa moves the data up or downwards. When releasing the PID during the data area is moving it slows down its motion and stops by snapping in a new item at the snap position. Further the data is shown in a loop. After the last data item it continues with the first item like in a chain. So the data can be 'rotated' like on a wheel:

Description	LISTWHEEL widget
Application example showing three wheels for selecting a date. The example uses the owner draw mechanism to overlay the widget with a customized alpha mask for the shading effect.	

The table above shows a screenshot of the example `WIDGET_ListWheel.c` located in the example folder `Sample\Tutorial\` of emWin.

17.14.1 Configuration options

Type	Macro	Default	Description
S	LISTWHEEL_FONT_DEFAULT	GUI_Font13_1	Font used.
N	LISTWHEEL_BKCOLOR0_DEFAULT	GUI_WHITE	Background color of normal text.
N	LISTWHEEL_BKCOLOR1_DEFAULT	GUI_WHITE	Background color of selected text.
N	LISTWHEEL_TEXTCOLOR0_DEFAULT	GUI_BLACK	Text color of normal text.
N	LISTWHEEL_TEXTCOLOR1_DEFAULT	GUI_BLUE	Text color of selected text.
N	LISTWHEEL_TEXTALIGN_DEFAULT	GUI_TA_LEFT	Default text alignment

17.14.2 Notification codes

The following events are sent from the widget to its parent window as part of a `WM_NOTIFY_PARENT` message:

Message	Description
WM_NOTIFICATION_CLICKED	Widget has been clicked.
WM_NOTIFICATION_RELEASED	Widget has been released.
WM_NOTIFICATION_MOVED_OUT	Widget has been clicked and pointer has been moved out off of the widget without releasing.
WM_NOTIFICATION_SEL_CHANGED	An item has been snapped at the snap position.

17.14.3 Keyboard reaction

This widget currently does not react on keyboard input.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.14.4 LISTWHEEL API

(Subject to change)
The table below lists the available emWin LISTWHEEL-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
LISTWHEEL_AddString()	Adds a new string.
LISTWHEEL_CreateEx()	Creates a LISTWHEEL widget.
LISTWHEEL_CreateIndirect()	Creates a LISTWHEEL widget from a resource table entry.
LISTWHEEL_CreateUser()	Creates a LISTWHEEL widget using extra bytes as user data.
LISTWHEEL_GetFont()	Returns the font used to draw the data.
LISTWHEEL_GetItemText()	Returns the text of the requested item.
LISTWHEEL_GetLBorder()	Returns the size in pixels of the left border.
LISTWHEEL_GetLineHeight()	Returns the height used for one item.
LISTWHEEL_GetNumItems()	Returns the number of data items.
LISTWHEEL_GetPos()	Returns the item index of the currently engaged item.
LISTWHEEL_GetRBorder()	Returns the size in pixels of the right border.
LISTWHEEL_GetSel()	Returns the currently selected item.
LISTWHEEL_GetTextAlign()	Returns the text alignment used to draw the data items.
LISTWHEEL_GetUserData()	Retrieves the data set with LISTWHEEL_SetUserData().
LISTWHEEL_MoveToPos()	Moves the LISTWHEEL to the given position.
LISTWHEEL_OwnerDraw()	Default function for drawing the widget.
LISTWHEEL_SetBkColor()	Sets the color used for the background.
LISTWHEEL_SetFont()	Sets the font used to draw the item text.
LISTWHEEL_SetItemData()	Assigns a custom void pointer to the given data item.
LISTWHEEL_SetLBorder()	Sets the size in pixels of the left border.
LISTWHEEL_SetLineHeight()	Sets the height used for drawing one data item.
LISTWHEEL_SetOwnerDraw()	Sets a owner draw function for drawing the widget.
LISTWHEEL_SetPos()	Sets the LISTWHEEL to the given position.
LISTWHEEL_SetRBorder()	Sets the size in pixels of the right border.
LISTWHEEL_SetSel()	Sets the currently selected item.
LISTWHEEL_SetSnapPosition()	Sets the snap position in pixels from the top of the widget.
LISTWHEEL_SetText()	Sets the contents of the widget.
LISTWHEEL_SetTextAlign()	Sets the alignment used to draw the data items.
LISTWHEEL_SetTextColor()	Sets the color used to draw the data items.
LISTWHEEL_SetUserData()	Sets the extra data of a LISTWHEEL widget.
LISTWHEEL_SetVelocity()	Starts moving the wheel with the given velocity.

LISTWHEEL_AddString()

Description

Adds a new data item (typically a string) to the widget.

Prototype

```
void LISTWHEEL_AddString(LISTWHEEL_Handle hObj, const char * s);
```

Parameter	Description
hObj	Handle of the widget.
s	Pointer to the string to be added.

Additional information

The width of the given text should fit into the horizontal widget area. Otherwise the text will be clipped during the drawing operation.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTWHEEL_CreateEx()

Description

Creates a LISTWHEEL widget of a specified size at a specified location.

Prototype

```
LISTWHEEL_Handle LISTWHEEL_CreateEx(int     x0,       int y0,
                                    int     xSize,    int ySize,
                                    WM_HWIN hParent,  int WinFlags,
                                    int     ExFlags,  int Id,
                                    const GUI_ConstString * ppText);
```

Parameter	Description
x0	Leftmost pixel of the widget (in parent coordinates).
y0	Topmost pixel of the widget (in parent coordinates).
xsize	Horizontal size of the widget (in pixels).
ysize	Vertical size of the widget (in pixels).
hParent	Handle of parent window. If 0, the new LISTVIEW widget will be a child of the desktop (top-level window).
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to "WM_CreateWindow()" on page 309 for a list of available parameter values).
ExFlags	Not used, reserved for future use.
Id	Window ID of the widget.
ppText	Pointer to an array of string pointers containing the elements to be displayed.

Return value

Handle of the created LISTWHEEL widget; 0 if the function fails.

Additional information

If the parameter ppText is used the last element of the array needs to be a NULL element.

Example

```
char * apText[] = {
  "Monday",
  "Tuesday",
  "Wednesday",
  "Thursday",
  "Friday",
  "Saturday",
  "Sunday",
  NULL
};

LISTWHEEL_CreateEx(10, 10, 100, 100, WM_HBKWIN, WM_CF_SHOW,
                   0, GUI_ID_LISTWHEEL0, apText);
```

LISTWHEEL_CreateIndirect()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateIndirect().

LISTWHEEL_CreateUser()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateUser(). For a detailed description of the parameters the function LISTWHEEL_CreateEx() can be referred to.

LISTWHEEL_GetFont()

Description

Returns the font which is used to draw the data items of the given widget.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
const GUI_FONT GUI_UNI_PTR * LISTWHEEL_GetFont(LISTWHEEL_Handle hObj);
```

Parameter	Description
hObj	Handle of the widget.

Return value

Pointer to a GUI_FONT structure which is used to draw the data items.

LISTWHEEL_GetItemText()

Description

Returns the text of the requested data item.

Prototype

```
void LISTWHEEL_GetItemText(LISTWHEEL_Handle   hObj,    unsigned Index,
                           char             * pBuffer, int      MaxSize);
```

Parameter	Description
hObj	Handle of the widget.
Index	Index of the requested item.
pBuffer	Buffer for storing the text.
MaxSize	Size in bytes of the buffer.

Additional information

The function copies the text of the given item into the given buffer. If the size of the buffer is too small the text will be clipped.

LISTWHEEL_GetLBorder()

Description

Returns the size in pixels between the left border of the widget and the beginning of the text.

Prototype

```
int LISTWHEEL_GetLBorder(LISTWHEEL_Handle hObj);
```

Parameter	Description
hObj	Handle of the widget.

Return value

Number of pixels between left border and text.

LISTWHEEL_GetLineHeight()

Description

Returns the height of one data item.

Prototype

```
unsigned LISTWHEEL_GetLineHeight(LISTWHEEL_Handle hObj);
```

Parameter	Description
hObj	Handle of the widget.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

Height of one data item.

Additional information

This function returns the value set by the function `LISTWHEEL_SetLineHeight()`. A return value of zero means the height of one item depends on the size of the current font. For more details, refer to "LISTWHEEL_SetLineHeight()" on page 547,"LISTWHEEL_GetFont()" on page 541, and "GUI_GetYSizeOfFont()" on page 187.

LISTWHEEL_GetNumItems()

Description

Returns the number of data items of the given widget.

Prototype

```
int LISTWHEEL_GetNumItems(LISTWHEEL_Handle hObj);
```

Parameter	Description
hObj	Handle of the widget.

Return value

Number of data items of the given widget.

LISTWHEEL_GetPos()

Description

Returns the zero based index of the item which is currently snapped in.

Prototype

```
int LISTWHEEL_GetPos(LISTWHEEL_Handle hObj);
```

Parameter	Description
hObj	Handle of the widget.

Return value

Index of the item which is currently snapped in.

Additional information

The position at which the items being snapped can be set with the function `LISTWHEEL_SetSnapPosition()`. For more details, refer to "LISTWHEEL_SetSnapPosition()" on page 550.

LISTWHEEL_GetRBorder()

Description

Returns the size in pixels between the right border of the widget and the end of the text.

Prototype

```
int LISTWHEEL_GetRBorder(LISTWHEEL_Handle hObj);
```

Parameter	Description
hObj	Handle of the widget.

Return value

Number of pixels between right border and text.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTWHEEL_GetSel()

Description

Returns the zero based index of the currently selected item.

Prototype

```
int LISTWHEEL_GetSel(LISTWHEEL_Handle hObj);
```

Parameter	Description
hObj	Handle of the widget.

Return value

Index of the currently selected item.

Additional information

For more information, refer to “LISTWHEEL_SetSel()” on page 549.

LISTWHEEL_GetSnapPosition()

Description

Returns the position in pixels from the top of the widget at which the data items should be ‘snapped in’.

Prototype

```
int LISTWHEEL_GetSnapPosition(LISTWHEEL_Handle hObj);
```

Parameter	Description
hObj	Handle of the widget.

Return value

Snap position in pixels from the top edge of the widget.

Additional information

The default value is 0.

LISTWHEEL_GetTextAlign()

Description

Returns the text alignment of the given widget.

Prototype

```
int LISTWHEEL_GetTextAlign(LISTWHEEL_Handle hObj);
```

Parameter	Description
hObj	Handle of the widget.

Return value

Text alignment of the given widget.

Additional information

For more information, refer to “LISTWHEEL_SetTextAlign()” on page 551.

LISTWHEEL_GetUserData()

Prototype explained at the beginning of the chapter as `<WIDGET>_GetUserData()`.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTWHEEL_MoveToPos()

Description

Moves the data area of the widget to the given position.

Prototype

```
void LISTWHEEL_MoveToPos(LISTWHEEL_Handle hObj, unsigned int Index);
```

Parameter	Description
hObj	Handle of the widget.
Index	Zero based index of the item to which the 'wheel' should move.

Additional information

The widget starts moving by choosing the shortest way. If for example 7 items are available and item 2 is currently snapped and the widget should move to the last item it begins moving backwards until the seventh item has been reached.
Please also refer to "LISTWHEEL_SetPos()" on page 548.

LISTWHEEL_OwnerDraw()

Description

Default function for managing drawing operations of one data item.

Prototype

```
int LISTWHEEL_OwnerDraw(const WIDGET_ITEM_DRAW_INFO * pDrawItemInfo);
```

Parameter	Description
hObj	Handle of the widget.

Return value

Depends on the command in the `Cmd` element of the `WIDGET_ITEM_DRAW_INFO` structure pointed by `pDrawItemInfo`.

Additional information

This function is useful if `LISTWHEEL_SetOwnerDraw()` is used. It can be used to retrieve the original size of a data item and/or to draw the text of a data item and should be called for all commands which are not managed by the application defined owner draw function.
The following commands are managed by the default function:

- `WIDGET_ITEM_GET_XSIZE`
- `WIDGET_ITEM_GET_YSIZE`
- `WIDGET_ITEM_DRAW`

For more information, refer to "User drawn widgets" on page 354,"LISTWHEEL_SetOwnerDraw()" on page 548, and to the provided example.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTWHEEL_SetBkColor()

Before	After
	

Description

Sets the specified background color for selected and unselected items.

Prototype

```
void LISTWHEEL_SetBkColor(LISTWHEEL_Handle hObj,   unsigned int Index,
                          GUI_COLOR        Color);
```

Parameter	Description
hObj	Handle of the widget.
Index	See element list below.
Color	New background color.

Permitted values for element Index	
LISTWHEEL_CI_UNSEL	Changes the background color for all unselected items.
LISTWHEEL_CI_SEL	Changes the background color for the selected item.

LISTWHEEL_SetFont()

Before	After
	

Description

Sets the font which should be used to draw the data items.

Prototype

```
void LISTWHEEL_SetFont(LISTWHEEL_Handle             hObj,
                       const GUI_FONT GUI_UNI_PTR * pFont);
```

Parameter	Description
hObj	Handle of the widget.
pFont	Pointer to a GUI_FONT structure.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTWHEEL_SetLBorder()

Before	After
	

Description

Sets the border size between the left edge of the widget and the beginning of the text.

Prototype

```
void LISTWHEEL_SetLBorder(LISTWHEEL_Handle hObj, unsigned BorderSize);
```

Parameter	Description
hObj	Handle of the widget.
BorderSize	Desired border size.

Additional information

The default value of the border size is 0.

LISTWHEEL_SetLineHeight()

Before	After
	

Description

Sets the line height used to draw a data item.

Prototype

```
void LISTWHEEL_SetLineHeight(LISTWHEEL_Handle hObj, unsigned LineHeight);
```

Parameter	Description
hObj	Handle of the widget.
LineHeight	Desired height. Default is 0 which means the font size determines the height of a line.

Additional information

Per default the height of a line depends on the used font. The value set by this function 'overwrites' this default behavior.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTWHEEL_SetOwnerDraw()

Before	After
	

Description

Sets an application defined owner draw function for the widget which is responsible for drawing the widget items.

Prototype

```
void LISTWHEEL_SetOwnerDraw(LISTWHEEL_Handle         hObj,
                            WIDGET_DRAW_ITEM_FUNC * pfOwnerDraw);
```

Parameter	Description
hObj	Handle of the widget.
pfOwnerDraw	Pointer to owner draw function.

Additional information

This function sets a pointer to an application defined function which will be called by the widget when a data item has to be drawn or when the x or y size of a item is needed. It gives you the possibility to draw anything as data item, not just plain text. pfDrawItem is a pointer to an application-defined function of type WIDGET_DRAW_ITEM_FUNC which is explained at the beginning of the chapter.
The following commands are supported: WIDGET_ITEM_GET_YSIZE, WIDGET_ITEM_DRAW, WIDGET_DRAW_BACKGROUND and WIDGET_DRAW_OVERLAY.

Example

The following example routine draws 2 red indicator lines over the widget:

```
static int _OwnerDraw(const WIDGET_ITEM_DRAW_INFO * pDrawItemInfo) {
  switch (pDrawItemInfo->Cmd) {
  case WIDGET_DRAW_OVERLAY:
    GUI_SetColor(GUI_RED);
    GUI_DrawHLine(40, 0, 99);
    GUI_DrawHLine(59, 0, 99);
    break;
  default:
    return LISTWHEEL_OwnerDraw(pDrawItemInfo);
  }
  return 0;
}
```

LISTWHEEL_SetPos()

Description

Sets the data area of the widget to the given position.

Prototype

```
void LISTWHEEL_SetPos(LISTWHEEL_Handle hObj, unsigned int Index);
```

Parameter	Description
hObj	Handle of the widget.
Index	Zero based index of the item to which the 'wheel' should be set.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

Please also refer to “LISTWHEEL_MoveToPos()” on page 545.

LISTWHEEL_SetRBorder()

Before	After
	

Description

Sets the border size between the left edge of the widget and the beginning of the text.

Prototype

```
void LISTWHEEL_SetRBorder(LISTWHEEL_Handle hObj, unsigned BorderSize);
```

Parameter	Description
hObj	Handle of the widget.
BorderSize	Desired border size.

Additional information

The default value of the border size is 0.

LISTWHEEL_SetSel()

Before	After
	

Description

The function sets the selected item.

Prototype

```
void LISTWHEEL_SetSel(LISTWHEEL_Handle hObj, int Sel);
```

Parameter	Description
hObj	Handle of the widget.
Sel	Zero based index of item to be selected.

Additional information

Only one item can be selected. Per default the item with index 0 is selected.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LISTWHEEL_SetSnapPosition()

Before	After
	

Description

The function sets the relative position from the top of the widget at which the items should snap in. Per default the snap position is 0 which means the items are snapped in at the top of the widget.

Prototype

```
void LISTWHEEL_SetSnapPosition(LISTWHEEL_Handle hObj, int SnapPosition);
```

Parameter	Description
hObj	Handle of the widget.
SnapPosition	Relative position in pixels from the top of the widget at which the items should be snapped in.

Additional information

The function `LISTWHEEL_GetPos()` can be used to get the zero based index of the current item which has been snapped in.

LISTWHEEL_SetText()

Before	After
	

Description

It removes any existing item and adds the given items passed by the function.

Prototype

```
void LISTWHEEL_SetText(LISTWHEEL_Handle        hObj,
                       const GUI_ConstString * ppText);
```

Parameter	Description
hObj	Handle of the widget.
ppText	Pointer to an array of strings. The last item needs to be a NULL pointer.

Additional information

Note that the last element pointed to by `ppText` needs to be a NULL pointer.

Example

The following should show how the function should be used:

```
static char * _apText[] = {
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
  "Monday",
  "Tuesday",
  "Wednesday",
  "Thursday",
  "Friday",
  "Saturday",
  "Sunday",
  NULL
};

static void _SetContents(void) {
  LISTWHEEL_SetText(hWin, _apText);
}
```

LISTWHEEL_SetTextAlign()

Before	After
	

Description

Sets the text alignment used to draw the items of the widget.

Prototype

```
void LISTWHEEL_SetTextAlign(LISTWHEEL_Handle hObj, int Align);
```

Parameter	Description
hObj	Handle of the widget.
Align	Alignment to be used to draw the items of the widget.

Additional information

For details about text alignment, refer to “GUI_SetTextAlign()” on page 82.

LISTWHEEL_SetTextColor()

Before	After
	

Description

Sets the color to be used to draw the text.

Prototype

```
void LISTWHEEL_SetTextColor(LISTWHEEL_Handle hObj,
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                                unsigned int     Index, GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of the widget.
Index	(see table below)
Color	Color to be used.

Permitted values for parameter Index	
LISTWHEEL_CI_UNSEL	Sets the color of the not selected text.
LISTWHEEL_CI_SEL	Sets the color of the selected text.

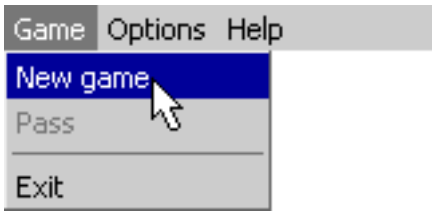
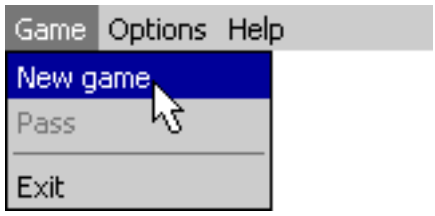
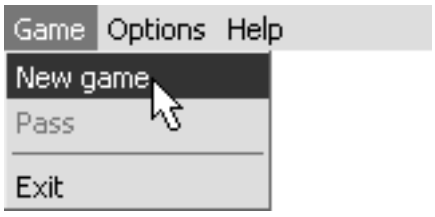
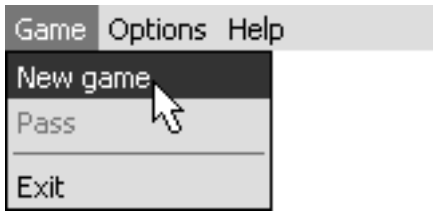
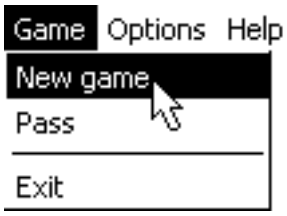
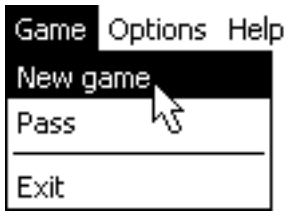
LISTWHEEL_SetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_SetUserData().

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.15 MENU: Menu widget

The MENU widget can be used to create several kinds of menus. Each menu item represents an application command or a submenu. MENUs can be shown horizontally and/or vertically. Menu items can be grouped using separators. Separators are supported for horizontal and vertical menus. Selecting a menu item sends a WM_MENU message to the owner of the menu or opens a submenu. If mouse support is enabled the MENU widget reacts on moving the mouse over the items of a menu.
The shipment of emWin contains a application example which shows how to use the MENU widget. It can be found under `Sample\Application\Reversi.c`.
The table below shows the appearance of a horizontal MENU widget with a vertical submenu:

Description	Menu using WIDGET_Effect_3D1L	Menu using WIDGET_Effect_Simple
Color display (8666 mode)		
Monochrome display (16 gray scales)		
Black/white display		

The table above shows the appearance of the menu widget using its default effect `WIDGET_Effect_3D1L` and using `WIDGET_Effect_Simple`. It also works with all other effects.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.15.1 Menu messages

To inform its owner about selecting an item or opening a submenu the menu widget sends a message of type WM_MENU to its owner.

WM_MENU

Description

This message is sent to inform the owner of a menu about selecting an item or opening a submenu. Disabled menu items will not send this message.

Data

The Data.p pointer of the message points to a MENU_MSG_DATA structure.

Elements of MENU_MSG_DATA

Data type	Element	Description
U16	MsgType	(see table below)
U16	ItemId	Id of menu item.

Permitted values for element MsgType	
MENU_ON_INITMENU	This message is send to the owner of menu immediately before the menu opens. This gives the application the chance to modify the menu before it is shown.
MENU_ON_ITEMACTIVATE	The owner window of a menu will receive this message after a menu item has been highlighted. The message is not send after highlighting a sub menu.
MENU_ON_ITEMPRESSED	After pressing a menu item this message will be send to the owner window of the widget. It will be send also for disabled menu items.
MENU_ON_ITEMSELECT	This message is send to the owner of a menu immediately after a menu item is selected. The ItemId element contains the Id of the pressed menu item.

Example

The following example shows how to react on a WM_MENU message:

```
void Callback(WM_MESSAGE * pMsg) {
  MENU_MSG_DATA * pData;
  WM_HWIN hWin = pMsg->hWin;
  switch (pMsg->MsgId) {
  case WM_MENU:
    pData = (MENU_MSG_DATA *)pMsg->Data.p;
    switch (pData->MsgType) {
    case MENU_ON_ITEMACTIVATE:
      _UpdateStatusbar(pData->ItemId);
      break;
    case MENU_ON_INITMENU:
      _OnInitMenu();
      break;
    case MENU_ON_ITEMSELECT:
      switch (pData->ItemId) {
      case ID_MENU_ITEM0:
        ... /* React on selection of menu item 0 */
        break;
      case ID_MENU_ITEM1:
        ... /* React on selection of menu item 1 */
        break;
      case ...
        ...
      }
      break;
    }
    break;
  default:
    MENU_Callback(pMsg);
  }
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
}
```

17.15.2 Data structures

The following shows the menu widget related data structures.

MENU_ITEM_DATA

This structure serves as a container to set or retrieve information about menu items.

Elements of MENU_ITEM_DATA

Data type	Element	Description
const char *	pText	Menu item text.
U16	Id	Id of the menu item.
U16	Flags	(see table below)
MENU_Handle	hSubmenu	If the item represents a submenu this element contains the handle of the submenu.

Permitted values for element Flags	
MENU_IF_DISABLED	Item is disabled.
MENU_IF_SEPARATOR	Item is a separator.

17.15.3 Configuration options

Type	Macro	Default	Description
N	MENU_BKCOLOR0_DEFAULT	GUI_LIGHTGRAY	Background color for enabled and unselected items.
N	MENU_BKCOLOR1_DEFAULT	0x980000	Background color for enabled and selected items.
N	MENU_BKCOLOR2_DEFAULT	GUI_LIGHTGRAY	Background color for disabled items.
N	MENU_BKCOLOR3_DEFAULT	0x980000	Background color for disabled and selected items.
N	MENU_BKCOLOR4_DEFAULT	0x7C7C7C	Background color for active sub-menu items.
N	MENU_BORDER_BOTTOM_DEFAULT	2	Border between item text and item bottom.
N	MENU_BORDER_LEFT_DEFAULT	4	Border between item text and left edge of item.
N	MENU_BORDER_RIGHT_DEFAULT	4	Border between item text and right edge of item.
N	MENU_BORDER_TOP_DEFAULT	2	Border between item text and item top.
S	MENU_EFFECT_DEFAULT	WIDGET_Effect_3D1L	Default effect.
S	MENU_FONT_DEFAULT	GUI_Font13_1	Font used.
N	MENU_TEXTCOLOR0_DEFAULT	GUI_BLACK	Text color for enabled and unselected items.
N	MENU_TEXTCOLOR1_DEFAULT	GUI_WHITE	Text color for enabled and selected items.
N	MENU_TEXTCOLOR2_DEFAULT	0x7C7C7C	Text color for disabled items.
N	MENU_TEXTCOLOR3_DEFAULT	GUI_LIGHTGRAY	Text color for disabled and selected items.
N	MENU_TEXTCOLOR4_DEFAULT	GUI_WHITE	Text color for active submenu items.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.15.4 Keyboard reaction

The widget reacts to the following keys if it has the input focus:

Key	Reaction
GUI_KEY_RIGHT	- If the menu is horizontal, the selection moves one item to the right. - If the menu is vertical and the current item is a submenu, the sub-menu opens and the input focus moves to the submenu. - If the menu is vertical and the current item is not a submenu and the top level menu is horizontal, the next item of the top level menu opens and the input focus moves to it.
GUI_KEY_LEFT	- If the menu is horizontal the selection moves one item to the left. - If the menu is vertical and the menu is not the top level menu, the current menu closes and the focus moves to the previous menu. If the previous menu is horizontal the previous submenu of it opens and the focus moves to the previous submenu.
GUI_KEY_DOWN	- If the menu is horizontal and the current menu item is a submenu this submenu opens. - If the menu is vertical, the selection moves to the next item.
GUI_KEY_UP	- If the menu is vertical, the selection moves to the previous item.
GUI_KEY_ESCAPE	- If the menu is not the top level menu the current menu will be closed and the focus moves to the previous menu. - If the menu is the top level menu, the current menu item becomes unselected.
GUI_KEY_ENTER	- If the current menu item is a submenu, the submenu opens and the focus moves to the submenu. - If the current menu item is not a submenu, all submenus of the top level menu closes and a MENU_ON_ITEMSELECT message will be send to the owner of the menu.

17.15.5 MENU API

The table below lists the available emWin MENU-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
MENU_AddItem()	Adds an item to an existing menu.
MENU_Attach()	Attaches a menu with the given size at the given position to a specified window.
MENU_CreateEx()	Creates a MENU widget.
MENU_CreateIndirect()	Creates a MENU widget from a resource table entry.
MENU_CreateUser()	Creates a MENU widget using extra bytes as user data.
MENU_DeleteItem()	Deletes the specified menu item.
MENU_DisableItem()	Disables the specified menu item.
MENU_EnableItem()	Enables the specified menu item.
MENU_GetDefaultBkColor()	Returns the default background color for new menus.
MENU_GetDefaultBorderSize()	Returns the default border size for new menus.
MENU_GetDefaultEffect()	Returns the default effect for new menus.
MENU_GetDefaultFont()	Returns a pointer to the default font used to display the menu item text of new menus.
MENU_GetDefaultTextColor()	Returns the default text color for new menus.
MENU_GetItem()	Retrieves information about the given menu item.
MENU_GetItemText()	Returns the text of the given menu item.
MENU_GetNumItems()	Returns the number of items of the given menu.
MENU_GetOwner()	Returns the owner window of the given menu.
MENU_GetUserData()	Retrieves the data set with MENU_SetUserData().
MENU_InsertItem()	Inserts a menu item.
MENU_Popup()	Opens a popup menu at the given position.
MENU_SetBkColor()	Sets the background color of the given menu.
MENU_SetBorderSize()	Sets the border size of the given menu.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
MENU_SetDefaultBkColor()	Sets the default background color for new menus.
MENU_SetDefaultBorderSize()	Sets the default border size for new menus.
MENU_SetDefaultEffect()	Sets the default effect for new menus.
MENU_SetDefaultFont()	Sets a pointer to the default font used to display the menu item text of new menus.
MENU_SetDefaultTextColor()	Sets the default text color for new menus.
MENU_SetFont()	Sets the font used to display the menu item text of the given menu.
MENU_SetItem()	Changes the information about the given menu item.
MENU_SetOwner()	Sets the window to be informed by the menu.
MENU_SetTextColor()	Sets the text color of the given menu.
MENU_SetUserData()	Sets the extra data of a MENU widget.

MENU_AddItem()

Before	After
	

Description

This function adds a new item to the end of the given menu.

Prototype

```
void MENU_AddItem(MENU_Handle hObj, const MENU_ITEM_DATA * pItemData);
```

Parameter	Description
hObj	Handle of widget.
pItemData	Pointer to a MENU_ITEM_DATA structure containing the information of the new item.

Additional information

If using a menu with several submenus the Id of the menu items should be unique. Different submenus should not contain menu items with the same Ids.
When adding items to a menu and no fixed sizes are used the size of the menu will be adapted.
Refer to “MENU_ITEM_DATA” on page 555.

MENU_Attach()

Description

Attaches the given menu at the given position with the given size to a specified window.

Prototype

```
void MENU_Attach(MENU_Handle hObj,    WM_HWIN hDestWin,
                 int         x,       int     y,
                 int         xSize,   int     ySize,
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                int         Flags);
```

Parameter	Description
hObj	Handle of widget.
hDestWin	Handle to the window to which the menu should be attached.
x	X position in window coordinates of the menu.
y	Y position in window coordinates of the menu.
xSize	Fixed X size of the menu. For details, refer to "MENU_CreateEx()" on page 558.
ySize	Fixed Y size of the menu. For details, refer to "MENU_CreateEx()" on page 558.
Flags	Reserved for future use

Additional information

After creating a menu widget this function can be used to attach the menu to an existing window.

MENU_CreateEx()

Description

Creates a MENU widget of a specified size at a specified location.

Prototype

```
MENU_Handle MENU_CreateEx(int     x0,       int y0,
                          int     xSize,    int ySize,
                          WM_HWIN hParent, int WinFlags,
                          int     ExFlags, int Id);
```

Parameter	Description
x0	Leftmost pixel of the widget (in parent coordinates).
y0	Topmost pixel of the widget (in parent coordinates).
xSize	Fixed horizontal size of the widget (in pixels). 0 if menu should handle the xSize.
ySize	Fixed vertical size of the widget (in pixels). 0 if menu should handle the ySize.
hParent	Handle of parent window. If 0, the new widget will be a child of the desktop (top-level window). In some cases it can be useful to create the menu widget in 'unattached' state and attach it later to an existing window. For this case WM_UNATTACHED can be used as parameter.
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to "WM_CreateWindow()" on page 309 for a list of available parameter values).
ExFlags	(see table below)
Id	Window ID of the widget.

Permitted values for parameter ExFlags	
MENU_CF_HORIZONTAL	Creates a horizontal menu.
MENU_CF_VERTICAL	Creates a vertical menu.

Return value

Handle of the created MENU widget; 0 if the function fails.

Additional information

The parameters xSize and/or ySize specifies if a fixed width and/or height should be used for the menu.
If these parameters are > 0, fixed sizes should be used. If for example the menu should be attached as a horizontal menu to the top of a window it can be necessary to use a fixed X size which covers the whole top of the window. In this case the parameter xSize can be used to set a fixed X size of the menu. When attaching or deleting items of a menu with a fixed size the size of the widget does not change.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

If the values are 0, the menu handles its size itself. That means the size of the menu depends on the size of the current menu items of a menu. If items are added or removed the size of the widget will be adapted.

MENU_CreateIndirect()

Prototype explained at the beginning of the chapter as `<WIDGET>_CreateIndirect()`.

MENU_CreateUser()

Prototype explained at the beginning of the chapter as `<WIDGET>_CreateUser()`. For a detailed description of the parameters the function `MENU_CreateEx()` can be referred to.

MENU_DeleteItem()

Before	After
	

Description

Deletes a given menu entry from a menu.

Prototype

```
void MENU_DeleteItem(MENU_Handle hObj, U16 ItemId);
```

Parameter	Description
hObj	Handle of widget.
ItemId	Id of the menu item to be deleted.

Additional information

If the item does not exist the function returns immediately.
When deleting items from a menu and no fixed sizes are used the window size will be adapted.

MENU_DisableItem()

Before	After
	

Description

Disables the given menu item.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void MENU_DisableItem(MENU_Handle hObj, U16 ItemId);
```

Parameter	Description
hObj	Handle of widget.
ItemId	Id of the menu item to be disabled.

Additional information

If a disabled menu item is selected, the menu widget sends no WM_MENU message to the owner. A disabled submenu item can not be opened.

MENU_EnableItem()

Before	After
	

Description

Enables the given menu item.

Prototype

```
void MENU_EnableItem(MENU_Handle hObj, U16 ItemId);
```

Parameter	Description
hObj	Handle of widget.
ItemId	Id of the menu item to be enabled.

Additional information

For details, refer to “MENU_DisableItem()” on page 559.

MENU_GetDefaultBkColor()

Description

Returns the default background color used to draw new menu items.

Prototype

```
GUI_COLOR MENU_GetDefaultBkColor(unsigned ColorIndex);
```

Parameter	Description
ColorIndex	Index of color to be returned (see table below).

Permitted values for parameter ColorIndex	
MENU_CI_ACTIVE_SUBMENU	Background color of active submenu items.
MENU_CI_DISABLED	Background color of disabled menu items.
MENU_CI_DISABLED_SEL	Background color of disabled and selected menu items.
MENU_CI_ENABLED	Background color of enabled and not selected menu items.
MENU_CI_SELECTED	Background color of enabled and selected menu items.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

Default background color used to draw new menu items.

Additional information

For details, refer to "MENU_SetBkColor()" on page 564.

MENU_GetDefaultBorderSize()

Description

Returns the default border size used for new menu widgets.

Prototype

```
U8 MENU_GetDefaultBorderSize(unsigned BorderIndex);
```

Parameter	Description
BorderIndex	(see table below)

Permitted values for parameter BorderIndex	
MENU_BI_BOTTOM	Border between item text and item bottom.
MENU_BI_LEFT	Border between item text and left edge of item.
MENU_BI_RIGHT	Border between item text and right edge of item
MENU_BI_TOP	Border between item text and item top.

Return value

Default border size used for new menu widgets.

Additional information

For details, refer to "MENU_SetBorderSize()" on page 565.

MENU_GetDefaultEffect()

Description

Returns the default effect for new menus.

Prototype

```
const WIDGET_EFFECT * MENU_GetDefaultEffect(void);
```

Return value

The result of the function is a pointer to a WIDGET_EFFECT structure.

Additional information

For more information, refer to "WIDGET_SetDefaultEffect()" on page 353.

MENU_GetDefaultFont()

Description

Returns a pointer to the default font used to display the menu item text of new menus.

Prototype

```
const GUI_FONT * MENU_GetDefaultFont(void);
```

Return value

Pointer to the default font used to display the menu item text of new menus.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

MENU_GetDefaultTextColor()

Description

Returns the default text color for new menus.

Prototype

```
GUI_COLOR MENU_GetDefaultTextColor(unsigned ColorIndex);
```

Parameter	Description
ColorIndex	Index of color to be returned (see table below)

Permitted values for parameter ColorIndex	
MENU_CI_ACTIVE_SUBMENU	Text color of active submenu items.
MENU_CI_DISABLED	Text color of disabled menu items.
MENU_CI_DISABLED_SEL	Text color of disabled and selected menu items.
MENU_CI_ENABLED	Text color of enabled and not selected menu items.
MENU_CI_SELECTED	Text color of enabled and selected menu items.

Return value

Default text color for new menus.

Additional information

For details, refer to "MENU_SetDefaultTextColor()" on page 567.

MENU_GetItem()

Description

Retrieves information about the given menu item.

Prototype

```
void MENU_GetItem(MENU_Handle hObj, U16 ItemId, MENU_ITEM_DATA * pItemData);
```

Parameter	Description
hObj	Handle of widget.
ItemId	Id of the requested menu item.
pItemData	Pointer to a MENU_ITEM_DATA structure to be filled by the function.

Additional information

If using a menu with several submenus the handle of the widget needs to be the handle of the menu/submenu containing the requested item or the handle of a higher menu/submenu.
The function sets the element pText of the MENU_ITEM_INFO data structure to 0. To retrieve the menu item text the function MENU_GetItemText() should be used.
Refer to the beginning of the menu chapter for details about the MENU_ITEM_INFO data structure.

MENU_GetItemText()

Description

Returns the text of the given menu item.

Prototype

```
void MENU_GetItemText(MENU_Handle   hObj,    U16      ItemId,
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                                char        * pBuffer, unsigned BufferSize);
```

Parameter	Description
hObj	Handle of widget.
ItemId	Id of the requested menu item.
pBuffer	Buffer to be filled by the function.
BufferSize	Maximum number of bytes to be retrieved.

MENU_GetNumItems()

Description

Returns the number of items of the given menu.

Prototype

```
unsigned MENU_GetNumItems(MENU_Handle hObj);
```

Parameter	Description
hObj	Handle of widget.

Return value

Number of items of the given menu.

MENU_GetOwner()

Description

Returns the owner window of the given menu.

Prototype

```
WM_HWIN MENU_GetOwner(MENU_Handle hObj);
```

Parameter	Description
hObj	Handle of widget.

Return value

Owner window of the given menu.

MENU_GetUserData()

Prototype explained at the beginning of the chapter as `<WIDGET>_GetUserData()`.

MENU_InsertItem()

Before	After
	

Description

Inserts a menu item at the given position.

Prototype

```
void MENU_InsertItem(MENU_Handle hObj, U16 ItemId,
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                                const MENU_ITEM_DATA * pItemData);
```

Parameter	Description
hObj	Handle of widget.
ItemId	Id of the menu item the new item should be inserted before.
pItemData	Pointer to a MENU_ITEM_DATA structure containing the information of the new item.

Additional information

Refer to the beginning of the menu chapter for details about the MENU_ITEM_INFO data structure.

MENU_Popup()

Description

Opens the given menu at the given position. After selecting a menu item or after touching the display outside the menu the popup menu will be closed.

Prototype

```
void MENU_Popup(MENU_Handle hObj,    WM_HWIN hDestWin,
                int         x,       int     y,
                int         xSize,   int     ySize,
                int         Flags);
```

Parameter	Description
hObj	Handle of widget.
hDestWin	Handle to the window to which the menu should be attached.
x	X position in window coordinates of the menu.
y	Y position in window coordinates of the menu.
xSize	Fixed X size of the menu. For details, refer to "MENU_CreateEx()" on page 558.
ySize	Fixed Y size of the menu. For details, refer to "MENU_CreateEx()" on page 558.
Flags	Reserved for future use

Additional information

After selecting a menu item or after touching the display outside the popup menu the menu will be closed. Note that the menu will not be deleted automatically.
The Sample folder contains the example WIDGET_PopupMenu.c which shows how to use the function.

MENU_SetBkColor()

Before	After
	

Description

Sets the background color of the given menu.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG


Prototype

```
void MENU_SetBkColor(MENU_Handle hObj,   unsigned ColorIndex,
                     GUI_COLOR   Color);
```

Parameter	Description
hObj	Handle of widget.
ColorIndex	Index of color (see table below)
Color	Color to be used.

Permitted values for parameter ColorIndex	
MENU_CI_ACTIVE_SUBMENU	Background color of active submenu items.
MENU_CI_DISABLED	Background color of disabled menu items.
MENU_CI_DISABLED_SEL	Background color of disabled and selected menu items.
MENU_CI_ENABLED	Background color of enabled and not selected menu items.
MENU_CI_SELECTED	Background color of enabled and selected menu items.

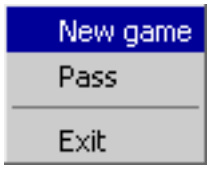MENU_SetBorderSize()

Before	After
	

The following code is executed between the screenshots above:

```
MENU_SetBorderSize(hMenuGame, MENU_BI_LEFT, 20);
```

Before	After
	

The following code is executed between the screenshots above:

```
MENU_SetBorderSize(hMenu, MENU_BI_LEFT, 10);
MENU_SetBorderSize(hMenu, MENU_BI_RIGHT, 10);
```

Description

Sets the border size of the given menu.

Prototype

```
void MENU_SetBorderSize(MENU_Handle hObj,         unsigned BorderIndex,
                        U8          BorderSize);
```

Parameter	Description
hObj	Handle of widget.
BorderIndex	(see table below)
BorderSize	Size to be used.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for parameter BorderIndex	
MENU_BI_BOTTOM	Border between item text and item bottom.
MENU_BI_LEFT	Border between item text and left edge of item.
MENU_BI_RIGHT	Border between item text and right edge of item
MENU_BI_TOP	Border between item text and item top.

MENU_SetDefaultBkColor()

Description

Sets the default background color used to draw new menu items.

Prototype

```
void MENU_SetDefaultBkColor(unsigned ColorIndex, GUI_COLOR Color);
```

Parameter	Description
ColorIndex	Index of color to be returned (see table below).
Color	Color to be used.

Permitted values for parameter ColorIndex	
MENU_CI_ACTIVE_SUBMENU	Background color of active submenu items.
MENU_CI_DISABLED	Background color of disabled menu items.
MENU_CI_DISABLED_SEL	Background color of disabled and selected menu items.
MENU_CI_ENABLED	Background color of enabled and not selected menu items.
MENU_CI_SELECTED	Background color of enabled and selected menu items.

Additional information

For details, refer to "MENU_SetBkColor()" on page 564.

MENU_SetDefaultBorderSize()

Description

Sets the default border size used for new menu widgets.

Prototype

```
void MENU_SetDefaultBorderSize(unsigned BorderIndex, U8 BorderSize);
```

Parameter	Description
BorderIndex	(see table below)
BorderSize	Border size to be used.

Permitted values for parameter BorderIndex	
MENU_BI_BOTTOM	Border between item text and item bottom.
MENU_BI_LEFT	Border between item text and left edge of item.
MENU_BI_RIGHT	Border between item text and right edge of item
MENU_BI_TOP	Border between item text and item top.

Additional information

For details, refer to "MENU_SetBorderSize()" on page 565.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

MENU_SetDefaultEffect()

Description

Sets the default effect for new menus.

Prototype

```
void MENU_SetDefaultEffect(const WIDGET_EFFECT * pEffect);
```

Parameter	Description
pEffect	Pointer to a WIDGET_EFFECT structure.

Additional information

For more information, refer to "WIDGET_SetDefaultEffect()" on page 353.

MENU_SetDefaultFont()

Description

Sets the pointer to the default font used to display the menu item text of new menus.

Prototype

```
void MENU_SetDefaultFont(const GUI_FONT * pFont);
```

Parameter	Description
pFont	Pointer to the GUI_FONT structure to be used.

Additional information

For details, refer to "MENU_SetFont()" on page 568.

MENU_SetDefaultTextColor()

Description

Sets the default text color for new menus.

Prototype

```
void MENU_SetDefaultTextColor(unsigned ColorIndex, GUI_COLOR Color);
```

Parameter	Description
ColorIndex	Index of color to be used (see table below)
Color	Color to be used

Permitted values for parameter ColorIndex	
MENU_CI_ACTIVE_SUBMENU	Text color of active submenu items.
MENU_CI_DISABLED	Text color of disabled menu items.
MENU_CI_DISABLED_SEL	Text color of disabled and selected menu items.
MENU_CI_ENABLED	Text color of enabled and not selected menu items.
MENU_CI_SELECTED	Text color of enabled and selected menu items.

Additional information

For details, refer to "MENU_SetTextColor()" on page 569.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

MENU_SetFont()

Before	After
	

Description


Sets the pointer to the default font used to display the menu item text of new menus.

Prototype

```
void MENU_SetFont(MENU_Handle hObj, const GUI_FONT * pFont);
```

Parameter	Description
hObj	Handle of widget.
pFont	Pointer to the GUI_FONT structure to be used.

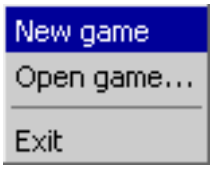MENU_SetItem()

Before	After
	

Description

Sets the item information for the given menu item.

Prototype

```
void MENU_SetItem(MENU_Handle            hObj,       U16 ItemId,
                  const MENU_ITEM_DATA * pItemData);
```

Parameter	Description
hObj	Handle of widget.
ItemId	Id of the menu item to be changed.
pItemData	Pointer to a MENU_ITEM_DATA structure containing the new information.

MENU_SetOwner()

Description

Sets the owner of the menu to be informed by the widget.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void MENU_SetOwner(MENU_Handle hObj, WM_HWIN hOwner);
```

Parameter	Description
hObj	Handle of widget.
hOwner	Handle of the owner window which should receive the WM_MENU messages of the menu.

Additional information

If no owner is set the parent window of the menu will receive WM_MENU messages. In some cases it makes sense to send the messages not to the parent window of the menu. In this case this function can be used to set the recipient for the WM_MENU messages.

MENU_SetSel()

Before	After
	

Description

Sets the selected item of the given menu.

Prototype

```
void MENU_SetSel(MENU_Handle hObj, int Sel);
```

Parameter	Description
hObj	Handle of widget.
Sel	Zero based index of menu item to be selected.

Return value

The function returns the zero based index of the previous selected menu item.

Additional information

A value <0 for parameter Sel deselects the menu items.

MENU_SetTextColor()

Before	After
	

Description

Sets the text color of the given menu.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void MENU_SetTextColor(MENU_Handle hObj,   unsigned ColorIndex,
                       GUI_COLOR   Color);
```

Parameter	Description
hObj	Handle of widget.
ColorIndex	Index of color to be used (see table below)
Color	Color to be used.

Permitted values for parameter ColorIndex	
MENU_CI_ACTIVE_SUBMENU	Text color of active submenu items.
MENU_CI_DISABLED	Text color of disabled menu items.
MENU_CI_DISABLED_SEL	Text color of disabled and selected menu items.
MENU_CI_ENABLED	Text color of enabled and not selected menu items.
MENU_CI_SELECTED	Text color of enabled and selected menu items.

MENU_SetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_SetUserData().


17.15.6 Example

The Sample folder contains the following example which shows how the widget can be used:

- WIDGET_Menu.c

Note that several other examples also make use of this widget and may also be helpful to get familiar with the widget.

Screenshot of WIDGET_Menu.c:

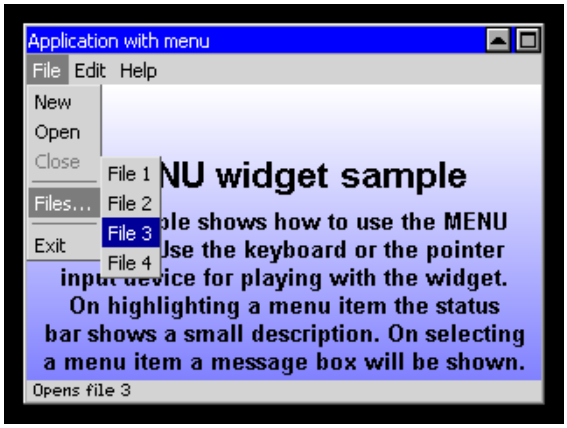

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.16 MESSAGEBOX: Message box widget

A MESSAGEBOX widget is used to show a message in a frame window with a title bar, as well as an "OK" button which must be pressed in order to close the window. It requires only one line of code to create or to create and execute a message box. All MESSAGEBOX-related routines are in the file(s) MESSAGEBOX*.c, MESSAGEBOX.h and GUI.h. The table below shows the appearance of the MESSAGEBOX widget:

Simple message box


17.16.1 Configuration options

Type	Macro	Default	Description
N	MESSAGEBOX_BORDER	4	Distance between the elements of a message box and the elements of the client window frame.
N	MESSAGEBOX_XSIZEOK	50	X-size of the "OK" button.
N	MESSAGEBOX_YSIZEOK	20	Y-size of the "OK" button.
S	MESSAGEBOX_BKCOLOR	GUI_WHITE	Color of the client window background.

17.16.2 Keyboard reaction

The widget consists of a frame window, a text and a button widget. When executing a message box the button gains the input focus. For more information, refer to “Keyboard reaction” on page 357.

17.16.3 MESSAGEBOX API

The table below lists the available emWin MESSAGEBOX-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
GUI_MessageBox()	Creates and displays a message box.
MESSAGEBOX_Create()	Creates a message box.

GUI_MessageBox()

Description

Creates and displays a message box.

Prototype

```
int GUI_MessageBox(const char* sMessage, const char* sCaption, int Flags);
```

Parameter	Description
sMessage	Message to display.
sCaption	Caption for the title bar of the frame window.
Flags	(see table below)

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for parameter Flags	
GUI_MESSAGEBOX_CF_MOVEABLE	The message box can be moved by dragging the title bar or the frame.
0	No function.

Additional information

This function gives you the possibility to create and execute a message box with one line of code. The Sample folder contains the example DIALOG_MessageBox.c which shows how to use this function.
For details about dragging, refer to "FRAMEWIN_SetMoveable()" on page 437.

MESSAGEBOX_Create()

Description

Creates a message box.

Prototype

```
WM_HWIN GUI_MessageBox(const char* sMessage, const char* sCaption, int
Flags);
```

Parameter	Description
sMessage	Message to display.
sCaption	Caption for the title bar of the frame window.
Flags	(see table below)

Permitted values for parameter Flags	
GUI_MESSAGEBOX_CF_MODAL	Creates a modal message box. The default is creating a non modal message box.

Return value

Handle of the message box window.

Additional information

The function creates a message box consisting of a frame window with the caption text in the title bar, a text widget with the message text and a button widget representing the 'OK' button. After creating the message box the dialog behaviour could be changed by using a user defined callback function or the properties of the box items can be modified using the widget API functions. The following Ids can be used for accessing the items:




Id	Description
GUI_ID_TEXT0	Id of the TEXT widget containing the message text.
GUI_ID_OK	Id of the 'OK' BUTTON widget.

The frame window can be accessed by the handle returned by this function.
The function GUI_ExecCreatedDialog() should be used to execute the message box.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.17 MULTIEDIT: Multi line text widget

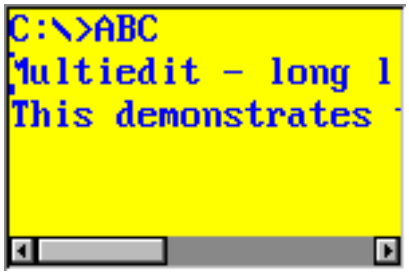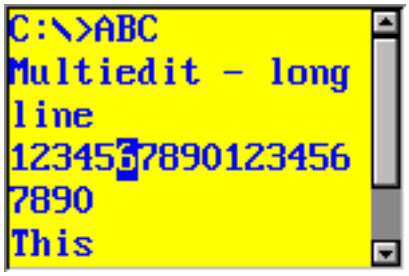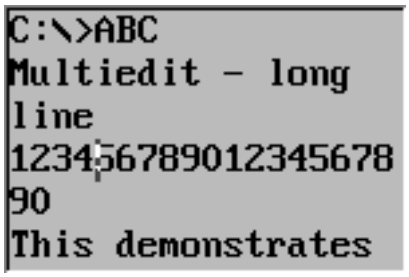The MULTIEDIT widget enables you to edit text with multiple lines. You can use it as a simple text editor or to display static text. The widget supports scrolling with and without scrollbars. All MULTIEDIT-related routines are in the file(s) MULTIEDIT*.c, MULTIEDIT.h. All identifiers are prefixed MULTIEDIT. The table below shows the appearance of the MULTIEDIT widget:

Description	Frame window
edit mode, automatic horizontal scrollbar, non wrapping mode, insert mode,	
edit mode, automatic vertical scrollbar, word wrapping mode, overwrite mode,	
read only mode, word wrapping mode	

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.17.1 Configuration options

Type	Macro	Default	Description
S	MULTIEDIT_FONT_DEFAULT	GUI_Font13_1	Font used.
N	MULTIEDIT_BKCOLOR0_DEFAULT	GUI_WHITE	Background color.
N	MULTIEDIT_BKCOLOR2_DEFAULT	0xC0C0C0	Background color read only mode.
N	MULTIEDIT_TEXTCOLOR0_DEFAULT	GUI_BLACK	Text color.
N	MULTIEDIT_TEXTCOLOR2_DEFAULT	GUI_BLACK	Text color read only mode.

17.17.2 Notification codes

The following events are sent from the widget to its parent window as part of a WM_NOTIFY_PARENT message:

Message	Description
WM_NOTIFICATION_CLICKED	Widget has been clicked.
WM_NOTIFICATION_RELEASED	Widget has been released.
WM_NOTIFICATION_MOVED_OUT	Widget has been clicked and pointer has been moved out off of the widget without releasing.
WM_NOTIFICATION_SCROLL_CHANGED	The scroll position of the optional scrollbar has been changed.
WM_NOTIFICATION_VALUE_CHANGED	The text of the widget has been changed.

17.17.3 Keyboard reaction

The widget reacts to the following keys if it has the input focus:

Key	Reaction
GUI_KEY_UP	Moves the cursor one line up.
GUI_KEY_DOWN	Moves the cursor one line down.
GUI_KEY_RIGHT	Moves the cursor one character to the right.
GUI_KEY_LEFT	Moves the cursor one character to the left.
GUI_KEY_END	Moves the cursor to the end of the current row.
GUI_KEY_HOME	Moves the cursor to the begin of the current row.
GUI_KEY_BACKSPACE	If the widget works in read/write mode this key deletes the character before the cursor.
GUI_KEY_DELETE	If the widget works in read/write mode this key deletes the character below the cursor.
GUI_KEY_INSERT	Toggles between insert and overwrite mode.
GUI_KEY_ENTER	If the widget works in read/write mode this key inserts a new line ('\n') at the current position. If the widget works in read only mode the cursor will be moved to the beginning of the next line.

17.17.4 MULTIEDIT API

The table below lists the available emWin MULTIEDIT-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
MULTIEDIT_AddKey()	Key input routine.
MULTIEDIT_AddText()	Adds additional text at the current cursor position.
MULTIEDIT_Create()	Creates a MULTIEDIT widget. (Obsolete)
MULTIEDIT_CreateEx()	Creates a MULTIEDIT widget.
MULTIEDIT_CreateIndirect()	Creates a MULTIEDIT widget from a resource table entry.
MULTIEDIT_CreateUser()	Creates a MULTIEDIT widget using extra bytes as user data.
MULTIEDIT_EnableBlink()	Enables/disables a blinking cursor.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
MULTIEDIT_GetCursorCharPos()	Returns the number of the character at the cursor position.
MULTIEDIT_GetCursorPixelPos()	Returns the pixel position of the cursor.
MULTIEDIT_GetPrompt()	Returns the text of the prompt.
MULTIEDIT_GetText()	Returns the text.
MULTIEDIT_GetTextSize()	Returns the buffer size used by the current text.
MULTIEDIT_GetUserData()	Retrieves the data set with MULTIEDIT_SetUserData().
MULTIEDIT_SetAutoScrollH()	Activates automatic use of a horizontal scrollbar.
MULTIEDIT_SetAutoScrollV()	Activates automatic use of a vertical scrollbar.
MULTIEDIT_SetBkColor()	Sets the background color.
MULTIEDIT_SetBufferSize()	Sets the buffer size used for text and prompt.
MULTIEDIT_SetCursorOffset()	Sets the cursor to the given character.
MULTIEDIT_SetFont()	Sets the font.
MULTIEDIT_SetInsertMode()	Enables/disables the insert mode.
MULTIEDIT_SetMaxNumChars()	Sets the maximum number of characters including the prompt.
MULTIEDIT_SetPasswordMode()	Enables/disables password mode.
MULTIEDIT_SetPrompt()	Sets the prompt text.
MULTIEDIT_SetReadOnly()	Enables/disables the read only mode.
MULTIEDIT_SetText()	Sets the text.
MULTIEDIT_SetTextAlign()	Sets the text alignment.
MULTIEDIT_SetTextColor()	Sets the text color,
MULTIEDIT_SetUserData()	Sets the extra data of a MULTIEDIT widget.
MULTIEDIT_SetWrapWord()	Enables/disables word wrapping.
MULTIEDIT_SetWrapNone()	Enables/disables the non wrapping mode.

MULTIEDIT_AddKey()

Description

Adds user input to a specified multiedit widget.

Prototype

```
void MULTIEDIT_AddKey(MULTIEDIT_HANDLE hObj, int Key);
```

Parameter	Description
hObj	Handle of multiedit widget.
Key	Character to be added.

Additional information

The specified character is added to the user input of the multiedit widget. If the maximum count of characters has been reached, another character will not be added.

MULTIEDIT_AddText()

Description

Adds the given text at the current cursor position.

Prototype

```
int MULTIEDIT_AddText(MULTIEDIT_HANDLE hObj, const char * s);
```

Parameter	Description
hObj	Handle of multiedit widget.
s	Pointer to a NULL terminated text to be added.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

If the number of characters exceeds the limit set with the function MULTIEDIT_SetMaxNumChars() the function will add only the characters of the text which fit into the widget respecting the limit.

MULTIEDIT_Create()

(Obsolete, MULTIEDIT_CreateEx() should be used instead)

Description

Creates a MULTIEDIT widget of a specified size at a specified location.

Prototype

```
MULTIEDIT_HANDLE MULTIEDIT_Create(int          x0,      int y0,
                                  int          xsize,   int ysize,
                                  WM_HWIN      hParent, int Id,
                                  int          Flags,   int ExFlags,
                                  const char * pText,   int MaxLen);
```

Parameter	Description
x0	Leftmost pixel of the multiedit widget (in parent coordinates).
y0	Topmost pixel of the multiedit widget (in parent coordinates).
xsize	Horizontal size of the multiedit widget (in pixels).
ysize	Vertical size of the multiedit widget (in pixels).
hParent	Parent window of the multiedit widget.
Id	ID of the multiedit widget.
Flags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
ExFlags	(see table below)
pText	Text to be used.
MaxLen	Maximum number of bytes for text and prompt.

Permitted values for parameter ExFlags	
MULTIEDIT_CF_AUTOSCROLLBAR_H	Automatic use of a horizontal scrollbar.
MULTIEDIT_CF_AUTOSCROLLBAR_V	Automatic use of a vertical scrollbar.
MULTIEDIT_CF_INSERT	Enables insert mode.
MULTIEDIT_CF_READONLY	Enables read only mode.

Return value

Handle of the created MULTIEDIT widget; 0 if the function fails.

MULTIEDIT_CreateEx()

Description

Creates a MULTIEDIT widget of a specified size at a specified location.

Prototype

```
MULTIEDIT_HANDLE MULTIEDIT_CreateEx(int          x0,         int y0,
                                    int          xsize,      int ysize,
                                    WM_HWIN      hParent,    int WinFlags,
                                    int          ExFlags,    int Id,
                                    int          BufferSize,
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                                    const char * pText);
```

Parameter	Description
x0	Leftmost pixel of the widget (in parent coordinates).
y0	Topmost pixel of the widget (in parent coordinates).
xsize	Horizontal size of the widget (in pixels).
ysize	Vertical size of the widget (in pixels).
hParent	Handle of parent window. If 0, the new MULTIEDIT widget will be a child of the desktop (top-level window).
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
ExFlags	(see table below)
Id	Window ID of the widget.
BufferSize	Initial text buffer size of the widget. Use MULTIEDIT_SetMaxNumChars to set the maximum number of characters.
pText	Text to be used.

Permitted values for parameter ExFlags	
MULTIEDIT_CF_AUTOSCROLLBAR_H	Automatic use of a horizontal scrollbar.
MULTIEDIT_CF_AUTOSCROLLBAR_V	Automatic use of a vertical scrollbar.
MULTIEDIT_CF_INSERT	Enables insert mode.
MULTIEDIT_CF_READONLY	Enables read only mode.

Return value

Handle of the created MULTIEDIT widget; 0 if the function fails.

MULTIEDIT_CreateIndirect()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateIndirect().

MULTIEDIT_CreateUser()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateUser(). For a detailed description of the parameters the function MULTIEDIT_CreateEx() can be referred to.

MULTIEDIT_EnableBlink()

Description

Enables/disables a blinking cursor.

Prototype

```
void MULTIEDIT_EnableBlink(EDIT_Handle hObj, int Period, int OnOff);
```

Parameter	Description
hObj	Handle of edit field.
Period	Blinking period
OnOff	1 enables blinking, 0 disables blinking

Additional information

This function calls GUI_X_GetTime().

MULTIEDIT_GetCursorCharPos()

Description

Returns the number of the character at the cursor position.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
int MULTIEDIT_GetCursorCharPos(MULTIEDIT_Handle hObj);
```

Parameter	Description
hObj	Handle of multiedit widget.

Return value

Number of the character at the cursor position.

Additional information

The widget returns the character position if it has the focus or not. This means the cursor position is also returned, if the cursor is currently not visible in the widget.

MULTIEDIT_GetCursorPixelPos()

Description

Returns the pixel position of the cursor in window coordinates.

Prototype

```
void MULTIEDIT_GetCursorPixelPos(MULTIEDIT_Handle   hObj,
                                 int              * pxPos, int * pyPos);
```

Parameter	Description
hObj	Handle of multiedit widget.
pxPos	Pointer to integer variable for the X-position in window coordinates.
pyPos	Pointer to integer variable for the Y-position in window coordinates.

Additional information

The widget returns the pixel position if it has the focus or not. This means the cursor position is also returned, if the cursor is currently not visible in the widget.

MULTIEDIT_GetPrompt()

Description

Returns the current prompt text.

Prototype

```
void MULTIEDIT_GetPrompt(MULTIEDIT_HANDLE hObj, char * sDest, int MaxLen);
```

Parameter	Description
hObj	Handle of multiedit widget.
sDest	Buffer for the prompt text to be returned.
MaxLen	Maximum number of bytes to be copied to sDest.

Additional information

The function copies the current prompt text to the buffer given by sDest. The maximum number of bytes copied to the buffer is given by `MaxLen`.

MULTIEDIT_GetText()

Description

Returns the current text.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void MULTIEDIT_GetText(MULTIEDIT_HANDLE hObj, char * sDest, int MaxLen);
```

Parameter	Description
hObj	Handle of multiedit widget.
sDest	Buffer for the text to be returned.
MaxLen	Maximum number of bytes to be copied to sDest.

Additional information

The function copies the current text to the buffer given by sDest. The maximum number of bytes copied to the buffer is given by MaxLen.

MULTIEDIT_GetTextSize()

Description

Returns the buffer size used to store the current text (and prompt).

Prototype

```
int MULTIEDIT_GetTextSize(MULTIEDIT_HANDLE hObj);
```

Parameter	Description
hObj	Handle of multiedit widget.

Return value

Buffer size used to store the current text (and prompt).

MULTIEDIT_GetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_GetUserData().

MULTIEDIT_SetAutoScrollH()

Description

Enables/disables the automatic use of a horizontal scrollbar.

Prototype

```
void MULTIEDIT_SetAutoScrollH(MULTIEDIT_HANDLE hObj, int OnOff);
```

Parameter	Description
hObj	Handle of multiedit widget.
OnOff	(See table below)

Permitted values for parameter OnOff	
0	Disables automatic use of a horizontal scrollbar.
1	Enables automatic use of a horizontal scrollbar.

Additional information

Enabling the use of a automatic horizontal scrollbar makes only sense with the non wrapping mode explained later in this chapter. If enabled the multiedit widget checks if the width of the non wrapped text fits into the client area. If not a horizontal scrollbar will be attached to the window.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

MULTIEDIT_SetAutoScrollV()

Description

Enables/disables the automatic use of a vertical scrollbar.

Prototype

```
void MULTIEDIT_SetAutoScrollV(MULTIEDIT_HANDLE hObj, int OnOff);
```

Parameter	Description
hObj	Handle of multiedit widget.
OnOff	(See table below)

Permitted values for parameter OnOff	
0	Disables automatic use of a vertical scrollbar.
1	Enables automatic use of a vertical scrollbar.

Additional information

If enabled the multiedit widget checks if the height of the text fits into the client area. If not a vertical scrollbar will be attached to the window.

MULTIEDIT_SetBkColor()

Description

Sets the background color of the given multiedit widget.

Prototype

```
void MULTIEDIT_SetBkColor(MULTIEDIT_HANDLE hObj,   unsigned int Index,
                          GUI_COLOR        Color);
```

Parameter	Description
hObj	Handle of multiedit widget.
Index	(See table below)
Color	Background color to be used.

Permitted values for parameter Index	
MULTIEDIT_CI_EDIT	Edit mode.
MULTIEDIT_CI_READONLY	Read only mode.

MULTIEDIT_SetBufferSize()

Description

Sets the maximum number of bytes used by text and prompt.

Prototype

```
void MULTIEDIT_SetBufferSize(MULTIEDIT_HANDLE hObj, int BufferSize);
```

Parameter	Description
hObj	Handle of multiedit widget.
BufferSize	Maximum number of bytes.

Additional information

The function clears the current contents of the multiedit widget and allocates the given number of bytes for the text and for the prompt.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

MULTIEDIT_SetCursorOffset()

Description

Sets the cursor position to the given character.

Prototype

```
void MULTIEDIT_SetCursorOffset(MULTIEDIT_HANDLE hObj, int Offset);
```

Parameter	Description
hObj	Handle of multiedit widget.
Offset	New cursor position.

Additional information

The number of characters used for the prompt has to be added to the parameter Offset. If a prompt is used the value for parameter Offset should not be smaller than the number of characters used for the prompt.

MULTIEDIT_SetFont()

Description

Sets the font used to display the text and the prompt.

Prototype

```
void MULTIEDIT_SetFont(MULTIEDIT_HANDLE hObj, const GUI_FONT * pFont);
```

Parameter	Description
hObj	Handle of multiedit widget.
pFont	Pointer to font to be used.

MULTIEDIT_SetInsertMode()

Description

Enables/disables the insert mode. The default behaviour is overwrite mode.

Prototype

```
void MULTIEDIT_SetInsertMode(MULTIEDIT_HANDLE hObj, int OnOff);
```

Parameter	Description
hObj	Handle of multiedit widget.
OnOff	(See table below)

Permitted values for parameter OnOff	
0	Disables insert mode.
1	Enables insert mode.

MULTIEDIT_SetMaxNumChars()

Description

Sets the maximum number of characters used by text and prompt.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void MULTIEDIT_SetMaxNumChars(MULTIEDIT_HANDLE hObj, unsigned MaxNumChars);
```

Parameter	Description
hObj	Handle of multiedit widget.
MaxNumChars	Maximum number of characters.

MULTIEDIT_SetPasswordMode()

Description

Enables/disables the password mode.

Prototype

```
void MULTIEDIT_SetPasswordMode(MULTIEDIT_HANDLE hObj, int OnOff);
```

Parameter	Description
hObj	Handle of multiedit widget.
OnOff	(See table below)

Permitted values for parameter OnOff	
0	Disables password mode.
1	Enables password mode.

Additional information

The password mode enables you to conceal the user input.

MULTIEDIT_SetPrompt()

Description

Sets the prompt text.

Prototype

```
void MULTIEDIT_SetPrompt(MULTIEDIT_HANDLE hObj, const char * sPrompt);
```

Parameter	Description
hObj	Handle of multiedit widget.
sPrompt	Pointer to the new prompt text.

Additional information

The prompt text is displayed first. The cursor can not be moved into the prompt.

MULTIEDIT_SetReadOnly()

Description

Enables/disables the read only mode.

Prototype

```
void MULTIEDIT_SetReadOnly(MULTIEDIT_HANDLE hObj, int OnOff);
```

Parameter	Description
hObj	Handle of multiedit widget.
OnOff	(see table below)

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for parameter OnOff	
0	Disables read only mode.
1	Enables read only mode.

Additional information

If the read only mode has been set the widget does not change the text. Only the cursor will be moved.

MULTIEDIT_SetText()

Description

Sets the text to be handled by the widget.

Prototype

```
void MULTIEDIT_SetText(MULTIEDIT_HANDLE hObj, const char * s);
```

Parameter	Description
hObj	Handle of multiedit widget.
s	Pointer to the text to be handled by the multiedit widget.

Additional information

The function copies the given text to the buffer allocated when creating the widget or by MULTIEDIT_SetMaxSize(). The current text can be retrieved by MULTIEDIT_GetText().

MULTIEDIT_SetTextAlign()

Description

Sets the text alignment for the given MULTIEDIT widget.

Prototype

```
void MULTIEDIT_SetTextAlign(MULTIEDIT_HANDLE hObj, int Align);
```

Parameter	Description
hObj	Handle of multiedit widget.
Align	(see table below)

Permitted values for parameter Align	
GUI_TA_LEFT	Left text align.
GUI_TA_RIGHT	Right text align.

MULTIEDIT_SetTextColor()

Description

Sets the text color.

Prototype

```
void MULTIEDIT_SetTextColor(MULTIEDIT_HANDLE hObj,   unsigned int Index,
                            GUI_COLOR        Color);
```

Parameter	Description
hObj	Handle of multiedit widget.
Index	(See table below)
Color	Text color to be used.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for parameter Index	
MULTIEDIT_CI_EDIT	Edit mode.
MULTIEDIT_CI_READONLY	Read only mode.

MULTIEDIT_SetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_SetUserData().

MULTIEDIT_SetWrapWord()

Description

Enables the word wrapping mode.

Prototype

```
void MULTIEDIT_SetWrapWord(MULTIEDIT_HANDLE hObj);
```

Parameter	Description
hObj	Handle of multiedit widget.

Additional information

If the word wrapping mode has been set the text at the end of a line will be wrapped at the beginning of the last word (if possible).

MULTIEDIT_SetWrapNone()

Description

Enables the non wrapping mode.

Prototype

```
void MULTIEDIT_SetWrapNone(MULTIEDIT_HANDLE hObj);
```

Parameter	Description
hObj	Handle of multiedit widget.

Additional information

'Non wrapping' means line wrapping would be done only at new lines. If the horizontal size of the text exceeds the size of the client area the text will be scrolled.

17.17.5 Example


The Sample folder contains the following example which shows how the widget can be used:

- WIDGET_MultiEdit.c

Note that several other examples also make use of this widget and may also be helpful to get familiar with it.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG



Screenshot of WIDGET_Multiedit.c:

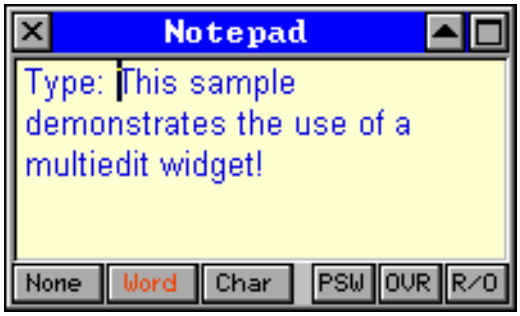

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.18 MULTIPAGE: Multiple page widget

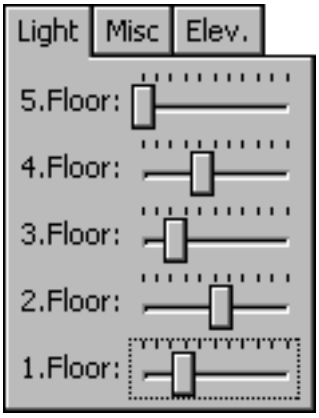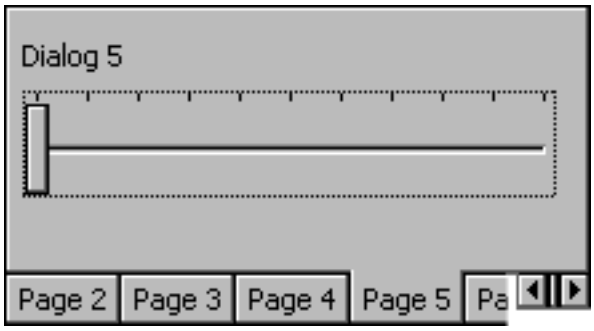A MULTIPAGE widget is analogous to the dividers in a notebook or the labels in a file cabinet. By using a MULTIPAGE widget, an application can define multiple pages for the same area of a window or dialog box. Each page consists of a certain type of information or a group of widgets that the application displays when the user selects the corresponding page. To select a page the tab of the page has to be clicked. If not all tabs can be displayed, the MULTIPAGE widget automatically shows a small scroll-bar at the edge to scroll the pages.
The `Sample` folder contains the file `WIDGET_Multipage.c` which shows how to create and use the MULTIPAGE widget.
The table below shows the appearance of the MULTIPAGE widget:


Description	MULTIPAGE widget
MULTIPAGE widget with 3 pages, alignment top/left.	
MULTIPAGE widget with 6 pages, alignment bottom/right.	

Structure of MULTIPAGE widget

A MULTIPAGE widget with n pages consists of n+2 windows:

- 1 MULTIPAGE window
- 1 Client window
- n Page windows

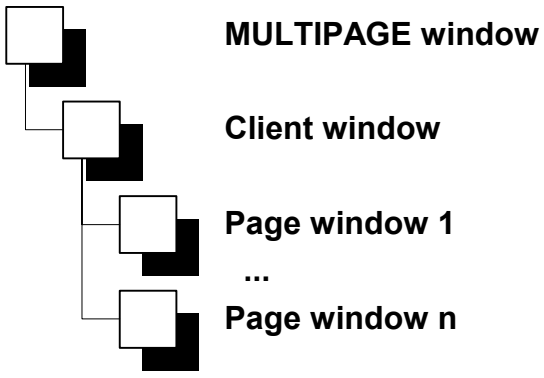The page windows will be added to the client window of the widget. The diagram at the right side shows the structure of the widget.



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.18.1 Configuration options

Type	Macro	Default	Description
N	MULTIPAGE_ALIGN_DEFAULT	MULTIPAGE_ALIGN_LEFT | MULTIPAGE_ALIGN_TOP	Default alignment.
N	MULTIPAGE_BKCOLOR0_DEFAULT	0xD0D0D0	Default background color of pages in disabled state.
N	MULTIPAGE_BKCOLOR1_DEFAULT	0xC0C0C0	Default background color of pages in enabled state.
S	MULTIPAGE_FONT_DEFAULT	&GUI_Font13_1	Default font used by the widget.
N	MULTIPAGE_TEXTCOLOR0_DEFAULT	0x808080	Default text color of pages in disabled state.
N	MULTIPAGE_TEXTCOLOR1_DEFAULT	0x000000	Default text color of pages in enabled state.

17.18.2 Notification codes

The following events are sent from the widget to its parent window as part of a WM_NOTIFY_PARENT message:

Message	Description
WM_NOTIFICATION_CLICKED	Widget has been clicked.
WM_NOTIFICATION_RELEASED	Widget has been released.
WM_NOTIFICATION_MOVED_OUT	Widget has been clicked and pointer has been moved out off of the widget without releasing.
WM_NOTIFICATION_VALUE_CHANGED	The text of the widget has been changed.

17.18.3 Keyboard reaction

The widget reacts to the following keys if it has the input focus:

Key	Reaction
GUI_KEY_PGUP	Switches to the next page.
GUI_KEY_PGDOWN	Switches to the previous page.

17.18.4 MULTIPAGE API


The table below lists the available emWin MULTIPAGE-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
MULTIPAGE_AddPage()	Adds a page to a MULTIPAGE widget.
MULTIPAGE_CreateEx()	Creates a MULTIPAGE widget.
MULTIPAGE_CreateIndirect()	Creates a MULTIPAGE widget from a resource table entry.
MULTIPAGE_CreateUser()	Creates a MULTIPAGE widget using extra bytes as user data.
MULTIPAGE_DeletePage()	Deletes a page from a MULTIPAGE widget.
MULTIPAGE_DisablePage()	Disables a page from a MULTIPAGE widget.
MULTIPAGE_EnablePage()	Enables a page from a MULTIPAGE widget.
MULTIPAGE_GetDefaultAlign()	Returns the default alignment for MULTIPAGE widgets.
MULTIPAGE_GetDefaultBkColor()	Returns the default background color for MULTIPAGE widgets.
MULTIPAGE_GetDefaultFont()	Returns the default font used for MULTIPAGE widgets.
MULTIPAGE_GetDefaultTextColor()	Returns the default text color used for MULTIPAGE widgets.
MULTIPAGE_GetSelection()	Returns the current selection.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
MULTIPAGE_GetUserData()	Retrieves the data set with MULTIPAGE_SetUserData().
MULTIPAGE_GetWindow()	Returns the window handle of a given page.
MULTIPAGE_IsPageEnabled()	Returns if a given page is enabled or not.
MULTIPAGE_SelectPage()	Selects the given page.
MULTIPAGE_SetAlign()	Sets the alignment for the tabs.
MULTIPAGE_SetBkColor()	Sets the background color.
MULTIPAGE_SetDefaultAlign()	Sets the default alignment for new MULTIPAGE widgets.
MULTIPAGE_SetDefaultBkColor()	Sets the default background color for new MULTIPAGE widgets.
MULTIPAGE_SetDefaultFont()	Sets the default font used by new MULTIPAGE widgets.
MULTIPAGE_SetDefaultTextColor()	Sets the default text color used by new MULTIPAGE widgets.
MULTIPAGE_SetFont()	Selects the font for the widget.
MULTIPAGE_SetRotation()	Sets the rotation mode for the widget.
MULTIPAGE_SetText()	Sets the text displayed in a tab of a MULTIPAGE widget.
MULTIPAGE_SetTextColor()	Sets the text color.
MULTIPAGE_SetUserData()	Sets the extra data of a MULTIPAGE widget.

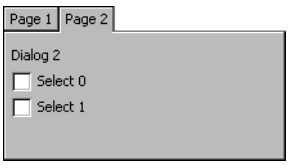MULTIPAGE_AddPage()

Before	After
	

Description

Adds a new page to a given MULTIPAGE widget.

Prototype

```
void MULTIPAGE_AddPage(MULTIPAGE_Handle   hObj,   WM_HWIN hWin ,
                       const char       * pText);
```

Parameter	Description
hObj	Handle of MULTIPAGE widget.
hWin	Handle of window to be shown in the given page.
pText	Pointer to text to be displayed in the tab of the page.

Additional information

It is recommended, that all windows added to a MULTIPAGE widget handle the complete client area of the MULTIPAGE widget when processing the WM_PAINT message.

MULTIPAGE_CreateEx()

Description

Creates a MULTIPAGE widget of a specified size at a specified position.

Prototype

```
MULTIPAGE_Handle MULTIPAGE_CreateEx(int     x0,      int y0,
                                    int     xsize,   int ysize,
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                                    WM_HWIN hParent, int WinFlags,
int     ExFlags, int Id);
```

Parameter	Description
x0	X-position of the widget (in parent coordinates).
y0	Y-position of the widget (in parent coordinates).
xsize	Horizontal size of the widget (in pixels).
ysize	Vertical size of the widget (in pixels).
hParent	Handle of parent window. If 0, the new widget will be a child of the desktop (top-level window).
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to "WM_CreateWindow()" on page 309 for a list of available parameter values).
ExFlags	Not used yet, reserved for future use.
Id	Window ID of the widget.

Return value

Handle of the new widget.

Additional information

The size of the tabs depends on the size of the font used for the MULTIPAGE widget.

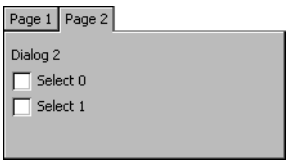
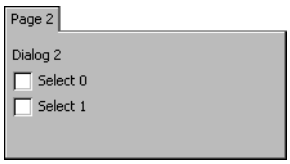
MULTIPAGE_CreateIndirect()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateIndirect().

MULTIPAGE_CreateUser()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateUser(). For a detailed description of the parameters the function MULTIPAGE_CreateEx() can be referred to.

MULTIPAGE_DeletePage()

Before	After
	

Description

Removes a page from a MULTIPAGE widget and optional deletes the window.



Prototype

```
void MULTIPAGE_DeletePage(MULTIPAGE_Handle hObj,    unsigned Index,
                          int               Delete);
```

Parameter	Description
hObj	Handle of MULTIPAGE widget.
Index	Zero based index of the page to be removed from the MULTIPAGE widget.
Delete	If >0 the window attached to the page will be deleted.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

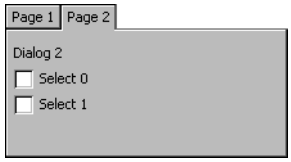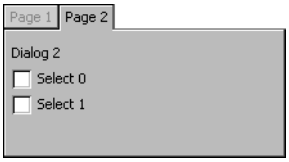MULTIPAGE_DisablePage()

Before	After
	

Description

Disables a page from a MULTIPAGE widget.

Prototype



```
void MULTIPAGE_DisablePage(MULTIPAGE_Handle hObj, unsigned Index);
```

Parameter	Description
hObj	Handle of MULTIPAGE widget.
Index	Zero based index of the page to be disabled.

Additional information

A disabled page of a window can not be selected by clicking the tab of the page. The default state of MULTIEDIT pages is 'enabled'.

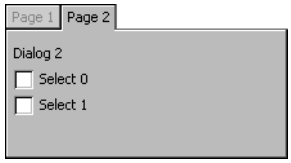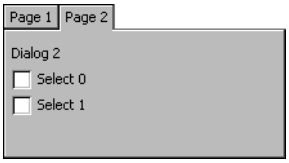MULTIPAGE_EnablePage()

Before	After
	

Description

Enables a page of a MULTIPAGE widget.

Prototype

```
void MULTIPAGE_EnablePage(MULTIPAGE_Handle hObj, unsigned Index);
```

Parameter	Description
hObj	Handle of MULTIPAGE widget.

Additional information

The default state of MULTIEDIT pages is 'enabled'.

MULTIPAGE_GetDefaultAlign()

Description

Returns the default tab alignment for new MULTIPAGE widgets.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

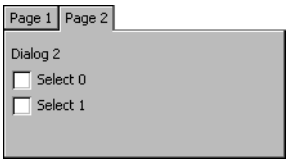
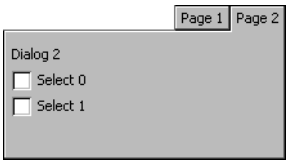
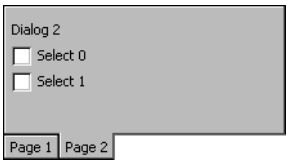
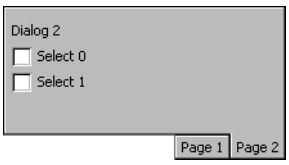
```
unsigned MULTIPAGE_GetDefaultAlign(void);
```

Return value

Default tab alignment for new MULTIPAGE widgets.

Additional information

The following table shows the alignment values returned by this function:

Alignment	Appearance of MULTIPAGE widget
MULTIPAGE_ALIGN_LEFT | MULTIPAGE_ALIGN_TOP	
MULTIPAGE_ALIGN_RIGHT | MULTIPAGE_ALIGN_TOP	
MULTIPAGE_ALIGN_LEFT | MULTIPAGE_ALIGN_BOTTOM	
MULTIPAGE_ALIGN_RIGHT | MULTIPAGE_ALIGN_BOTTOM	

MULTIPAGE_GetDefaultBkColor()

Description

Returns the default background color for new MULTIPAGE widgets.

Prototype

```
GUI_COLOR MULTIPAGE_GetDefaultBkColor(unsigned Index);
```

Parameter	Description
Index	See table below.

Permitted values for parameter Index	
0	Returns the default background color for pages in disabled state.
1	Returns the default background color for pages in enabled state.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

Default background color for new MULTIPAGE widgets.

MULTIPAGE_GetDefaultFont()

Description

Returns a pointer to the font used to display the text in the tabs of new MULTIPAGE widgets.

Prototype

```
const GUI_FONT * MULTIPAGE_GetDefaultFont(void);
```

Return value

Pointer to the font used to display the text in the tabs of new MULTIPAGE widgets.

MULTIPAGE_GetDefaultTextColor()

Description

Returns the default text color used to display the text in the tabs of new MULTIPAGE widgets.

Prototype

```
GUI_COLOR MULTIPAGE_GetDefaultTextColor(unsigned Index);
```

Parameter	Description
Index	See table below.

Permitted values for parameter Index	
0	Returns the default text color for pages in disabled state.
1	Returns the default text color for pages in enabled state.

Return value

Default text color used to display the text in the tabs of new MULTIPAGE widgets.

MULTIPAGE_GetSelection()

Description

Returns the zero based index of the currently selected page of a MULTIPAGE widget.

Prototype

```
int MULTIPAGE_GetSelection(MULTIPAGE_Handle hObj);
```

Parameter	Description
hObj	Handle of MULTIPAGE widget.

Return value

Zero based index of the currently selected page of a MULTIPAGE widget.

MULTIPAGE_GetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_GetUserData().

MULTIPAGE_GetWindow()

Description

Returns the handle of the window displayed in the given page.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
WM_HWIN MULTIPAGE_GetWindow(MULTIPAGE_Handle hObj, unsigned Index);
```

Parameter	Description
hObj	Handle of MULTIPAGE widget.
Index	Zero based index of page.

Return value

Handle of the window displayed in the given page.

MULTIPAGE_IsPageEnabled()

Description

Returns if the given page of a MULTIEDIT widget is enabled or not.

Prototype



```
int MULTIPAGE_IsPageEnabled (MULTIPAGE_Handle hObj, unsigned Index);
```

Parameter	Description
hObj	Handle of MULTIPAGE widget.
Index	Zero based index of requested page.

Return value

1 if the given page is enabled, otherwise 0.

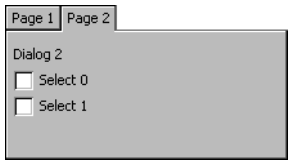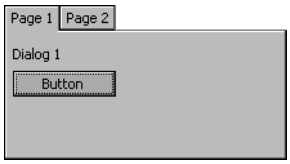MULTIPAGE_SelectPage()

Before	After
	

Description

Sets the currently selected page of a MULTIPAGE widget.



Prototype

```
void MULTIPAGE_SelectPage(MULTIPAGE_Handle hObj, unsigned Index);
```

Parameter	Description
hObj	Handle of MULTIPAGE widget.
Index	Zero based index of page to be selected.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

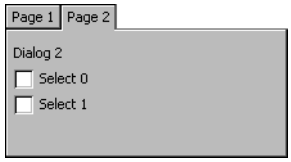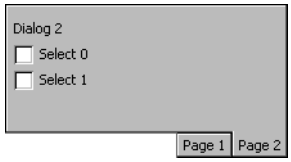MULTIPAGE_SetAlign()

Before	After
	

Description

Sets the tab alignment for the given MULTIPAGE widget.

Prototype

```
void MULTIPAGE_SetAlign(MULTIPAGE_Handle hObj, unsigned Align);
```



Parameter	Description
hObj	Handle of MULTIPAGE widget.
Align	See table below.

Permitted values for parameter Index (horizontal and vertical flags are OR-combinable)	
MULTIPAGE_ALIGN_BOTTOM	Aligns the tabs at the right side.
MULTIPAGE_ALIGN_LEFT	Aligns the tabs at the left side.
MULTIPAGE_ALIGN_RIGHT	Aligns the tabs at the top of the widget.
MULTIPAGE_ALIGN_TOP	Aligns the tabs at the bottom of the widget.

Additional information

For more information, refer to “MULTIPAGE_GetDefaultAlign()” on page 590.

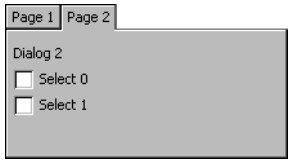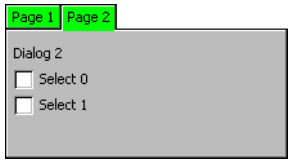MULTIPAGE_SetBkColor()

Before	After
	

Description

Sets the background color of the given MULTIPAGE widget.

Prototype

```
void MULTIPAGE_SetBkColor(MULTIPAGE_Handle hObj,   GUI_COLOR Color,
                          unsigned         Index);
```

Parameter	Description
hObj	Handle of MULTIPAGE widget.
Color	Color to be used.
Index	See table below.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for parameter Index	
MULTIPAGE_CI_DISABLED	Sets the default text color for disabled pages.
MULTIPAGE_CI_ENABLED	Sets the default text color for enabled pages.

Additional information

The function only sets the background color for the MULTIPAGE widget. The child windows added to the widget are not affected. That means if the complete client area is drawn by windows added to the widget, only the background color of the tabs changes.

MULTIPAGE_SetDefaultAlign()

Description

Sets the default tab alignment for new MULTIPAGE widgets.

Prototype

```
void MULTIPAGE_SetDefaultAlign(unsigned Align);
```

Parameter	Description
Align	Tab alignment used for new MULTIPAGE widgets.

Additional information

For more informations about the tab alignment, refer to "MULTIPAGE_GetDefaultAlign()" on page 590 and "MULTIPAGE_SetAlign()" on page 594.

MULTIPAGE_SetDefaultBkColor()

Description

Sets the default background color used for new MULTIPAGE widgets.

Prototype

```
void MULTIPAGE_SetDefaultBkColor(GUI_COLOR Color, unsigned Index);
```

Parameter	Description
Color	Color to be used.
Index	See table below.

Permitted values for parameter Index	
0	Sets the default background color for pages in disabled state.
1	Sets the default background color for pages in enabled state.

MULTIPAGE_SetDefaultFont()

Description

Sets the default font used to display the text in the tabs of new MULTIPAGE widgets.

Prototype

```
void MULTIPAGE_SetDefaultFont(const GUI_FONT * pFont);
```

Parameter	Description
pFont	Pointer to GUI_FONT structure to be used.

Additional information

The horizontal and vertical size of the tabs depends on the size of the used font.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

MULTIPAGE_SetDefaultTextColor()

Description



Sets the default text color used to display the text in the tabs of new MULTIPAGE widgets.

Prototype

```
void MULTIPAGE_SetDefaultTextColor(GUI_COLOR Color, unsigned Index);
```

Parameter	Description
Color	Color to be used.
Index	See table below.

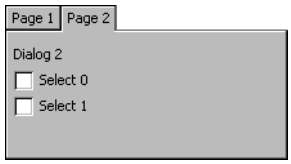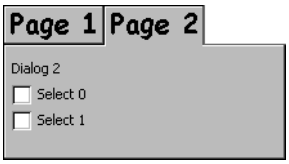MULTIPAGE_SetFont()

Before	After
	

Description

Sets the font used to display the text in the tabs of a given MULTIPAGE widget.

Prototype



```
void MULTIPAGE_SetFont(MULTIPAGE_Handle hObj, const GUI_FONT * pFont);
```

Parameter	Description
hObj	Handle of MULTIPAGE widget.
pFont	Pointer to GUI_FONT structure used to display the text in the tabs.

Additional information

The vertical and horizontal size of the tabs depend on the size of the used font and the text shown in the tabs.

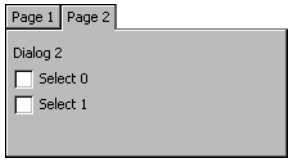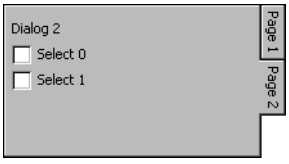MULTIPAGE_SetRotation()

Before	After
	

Description

Sets the rotation mode of the given widget.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG



Prototype

```
void MULTIPAGE_SetRotation(MULTIPAGE_Handle hObj, unsigned Rotation);
```

Parameter	Description
hObj	Handle of MULTIPAGE widget.
Rotation	Rotation mode (see table below)

Permitted values for parameter Index	
MULTIPAGE_CF_ROTATE_CW	Arranges the tabs at the vertical side and rotates the tab text by 90 degrees clockwise.
0	Default horizontal mode.

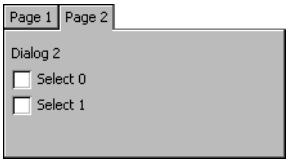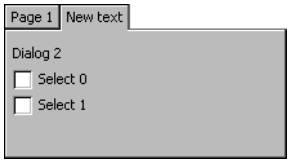MULTIPAGE_SetText()

Before	After
	

Description



Sets the text displayed in the tab of a given page.

Prototype

```
void MULTIPAGE_SetText(MULTIPAGE_Handle hObj,   const char * pText,
                       unsigned         Index);
```

Parameter	Description
hObj	Handle of MULTIPAGE widget.
pText	Pointer to the text to be displayed.
Index	Zero based index of the page.

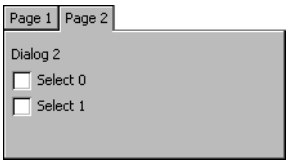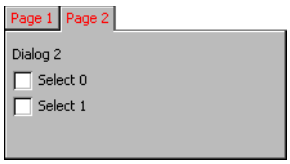MULTIPAGE_SetTextColor()

Before	After
	

Description

Sets the color used to display the text in the tabs of a MULTIPAGE widget.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void MULTIPAGE_SetTextColor(MULTIPAGE_Handle hObj,   GUI_COLOR Color,
                            unsigned         Index);
```

Parameter	Description
hObj	Handle of MULTIPAGE widget.
Color	Color to be used.
Index	See table below.

Permitted values for parameter Index	
0	Sets the text color for pages in disabled state.
1	Sets the text color for pages in enabled state.

MULTIPAGE_SetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_SetUserData().


17.18.5 Example

The Sample folder contains the following example which shows how the widget can be used:

- WIDGET_Multipage.c

Note that several other examples also make use of this widget and may also be helpful to get familiar with the widget.

Screenshot of WIDGET_Multipage.c:

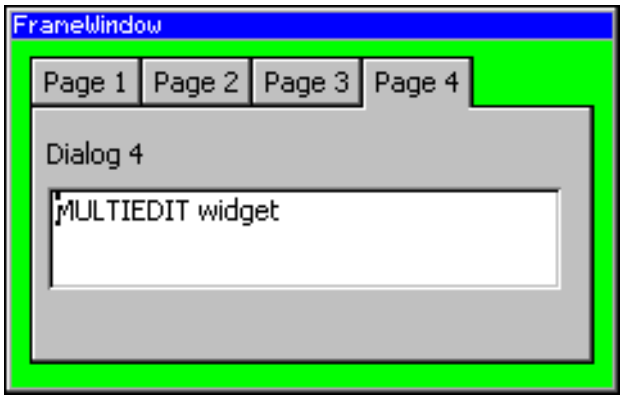


 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.19 PROGBAR: Progress bar widget

Progress bars are commonly used in applications for visualization; for example, a tank fill-level indicator or an oil-pressure indicator. Example screenshots can be found at the beginning of the chapter and at end of this section. All PROGBAR-related routines are in the file(s) PROGBAR*.c, PROGBAR.h. All identifiers are prefixed PROGBAR.

Skinning...



...is available for this widget. The screenshot above shows the widget using the default skin. For details please refer to chapter 'Skinning'.

17.19.1 Configuration options

Type	Macro	Default	Description
S	PROGBAR_DEFAULT_FONT	GUI_DEFAULT_FONT	Font used.
N	PROGBAR_DEFAULT_BARCOLOR0	0x555555 (dark gray)	Left bar color.
N	PROGBAR_DEFAULT_BARCOLOR1	0xAAAAAA (light gray)	Right bar color.
N	PROGBAR_DEFAULT_TEXTCOLOR0	0xFFFFFF	Text color, left bar.
N	PROGBAR_DEFAULT_TEXTCOLOR1	0x000000	Text color, right bar.

17.19.2 Keyboard reaction

The widget can not gain the input focus and does not react on keyboard input.

17.19.3 PROGBAR API

The table below lists the available emWin PROGBAR-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
PROGBAR_Create()	Creates a PROGBAR widget. (Obsolete)
PROGBAR_CreateAsChild()	Creates a PROGBAR widget as a child window. (Obsolete)
PROGBAR_CreateEx()	Creates a PROGBAR widget.
PROGBAR_CreateIndirect()	Creates a PROGBAR widget from resource table entry.
PROGBAR_CreateUser()	Creates a PROGBAR widget using extra bytes as user data.
PROGBAR_GetUserData()	Retrieves the data set with PROGBAR_SetUserData().
PROGBAR_SetBarColor()	Sets the color(s) for the bar.
PROGBAR_SetFont()	Select the font for the text.
PROGBAR_SetMinMax()	Set the minimum and maximum values used for the bar.
PROGBAR_SetText()	Set the (optional) text for the bar graph.
PROGBAR_SetTextAlign()	Set text alignment (default is centered).
PROGBAR_SetTextColor()	Set the color(s) for the text.
PROGBAR_SetTextPos()	Set the text position (default 0,0).
PROGBAR_SetUserData()	Sets the extra data of a PROGBAR widget.
PROGBAR_SetValue()	Set the value for the bar graph (and percentage if no text has been assigned).

PROGBAR_Create()

(Obsolete, PROGBAR_CreateEx() should be used instead)

Description

Creates a PROGBAR widget of a specified size at a specified location.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
PROGBAR_Handle PROGBAR_Create(int x0,    int y0,
                              int xsize, int ysize, int Flags);
```

Parameter	Description
x0	Leftmost pixel of the progress bar (in parent coordinates).
y0	Topmost pixel of the progress bar (in parent coordinates).
xsize	Horizontal size of the progress bar (in pixels).
ysize	Vertical size of the progress bar (in pixels).
Flags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).

Return value

Handle of the created PROGBAR widget; 0 if the function fails.

PROGBAR_CreateAsChild()

(Obsolete, PROGBAR_CreateEx should be used instead)

Description

Creates a PROGBAR widget as a child window.

Prototype

```
PROGBAR_Handle PROGBAR_CreateAsChild(int     x0,      int y0,
                                     int     xsize,   int ysize,
                                     WM_HWIN hParent, int Id,
                                     int     Flags);
```

Parameter	Description
x0	X-position of the progress bar relative to the parent window.
y0	Y-position of the progress bar relative to the parent window.
xsize	Horizontal size of the progress bar (in pixels).
ysize	Vertical size of the progress bar (in pixels).
hParent	Handle of parent window.
Id	ID to be returned.
Flags	Window create flags (see PROGBAR_Create()).

Return value

Handle of the created PROGBAR widget; 0 if the function fails.

PROGBAR_CreateEx()

Description

Creates a PROGBAR widget of a specified size at a specified location.

Prototype

```
PROGBAR_Handle PROGBAR_CreateEx(int     x0,      int y0,
                                int     xsize,   int ysize,
                                WM_HWIN hParent, int WinFlags,
                                int     ExFlags, int Id);
```

Parameter	Description
x0	Leftmost pixel of the widget (in parent coordinates).
y0	Topmost pixel of the widget (in parent coordinates).
xsize	Horizontal size of the widget (in pixels).

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Parameter	Description
ysize	Vertical size of the widget (in pixels).
hParent	Handle of parent window. If 0, the new PROGBAR widget will be a child of the desktop (top-level window).
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
ExFlags	(see table below)
Id	Window ID of the widget.

Permitted values for parameter ExFlags	
PROGBAR_CF_VERTICAL	A vertical progress bar will be created.
PROGBAR_CF_HORIZONTAL	A horizontal progress bar will be created.

Return value

Handle of the created PROGBAR widget; 0 if the function fails.

PROGBAR_CreateIndirect()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateIndirect(). The elements Flags and Para of the resource passed as parameter are not used.

PROGBAR_CreateUser()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateUser(). For a detailed description of the parameters the function PROGBAR_CreateEx() can be referred to.

PROGBAR_GetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_GetUserData().

PROGBAR_SetBarColor()

Description

Sets the color(s) of the progress bar.

Prototype

```
void PROGBAR_SetBarColor(PROGBAR_Handle hObj,   unsigned int Index,
                         GUI_COLOR      Color);
```

Parameter	Description
hObj	Handle of progress bar.
Index	See table below. Other values are not permitted.
Color	Color to set (24-bit RGB value).

Permitted values for parameter Index	
0	Left portion of the progress bar.
1	Right portion of the progress bar.

PROGBAR_SetFont()

Description

Selects the font for the text display inside the progress bar.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void PROGBAR_SetFont(PROGBAR_Handle hObj, const GUI_FONT* pFont);
```

Parameter	Description
hObj	Handle of progress bar.
pFont	Pointer to the font.

Additional information

If this function is not called, the default font for progress bars (the GUI default font) will be used. However, the progress bar default font may be changed in the GUIConf.h file.
Simply #define the default font as follows (example):

```
#define PROGBAR_DEFAULT_FONT &GUI_Font13_ASCII
```

PROGBAR_SetMinMax()

Description

Sets the minimum and maximum values used for the progress bar.

Prototype

```
void PROGBAR_SetMinMax(PROGBAR_Handle hObj, int Min, int Max);
```

Parameter	Description
hObj	Handle of progress bar.
Min	Minimum value Range: -16383 < Min <= 16383.
Max	Maximum value Range: -16383 < Max <= 16383.

Additional information

If this function is not called, the default values of Min = 0, Max = 100 will be used.

PROGBAR_SetText()

Description

Sets the text displayed inside the progress bar.

Prototype

```
void PROGBAR_SetText(PROGBAR_Handle hObj, const char* s);
```

Parameter	Description
hObj	Handle of progress bar.
s	Text to display. A NULL pointer is permitted; in this case a percentage value will be displayed.

Additional information

If this function is not called, a percentage value will be displayed as the default. If you do not want to display any text at all, you should set an empty string.

PROGBAR_SetTextAlign()

Description

Sets the text alignment.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void PROGBAR_SetTextAlign(PROGBAR_Handle hObj, int Align);
```

Parameter	Description
hObj	Handle of progress bar.
Align	Horizontal alignment attribute for the text (see table below).

Permitted values for parameter Align	
GUI_TA_HCENTER	Centers the title (default).
GUI_TA_LEFT	Displays the title to the left.
GUI_TA_RIGHT	Displays the title to the right.

Additional information

If this function is not called, the default behavior is to display the text centered.

PROGBAR_SetTextColor()

Description

Sets the text color of the progress bar.

Prototype

```
void PROGBAR_SetTextColor(PROGBAR_Handle hObj,   unsigned int Index,
                          GUI_COLOR      Color);
```

Parameter	Description
hObj	Handle of progress bar.
Index	See table below. Other values are not permitted.
Color	Color to set (24-bit RGB value).

Permitted values for parameter Index	
0	Left portion of the text.
1	Right portion of the text.

PROGBAR_SetTextPos()

Description

Sets the text position in pixels.

Prototype

```
void PROGBAR_SetTextPos(PROGBAR_Handle hObj, int XOff, int YOff);
```

Parameter	Description
hObj	Handle of progress bar.
XOff	Number of pixels to move text in horizontal direction. Positive number will move text to the right.
YOff	Number of pixels to move text in vertical direction. Positive number will move text down.

Additional information

The values move the text the specified number of pixels within the widget. Normally, the default of (0,0) should be sufficient.

PROGBAR_SetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_SetUserData().

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

PROGBAR_SetValue()

Description

Sets the value of the progress bar.

Prototype

```
void PROGBAR_SetValue(PROGBAR_Handle hObj, int v);
```

Parameter	Description
hObj	Handle of progress bar.
v	Value to set.

Additional information

The bar indicator will be calculated with regard to the max/min values. If a percentage is automatically displayed, the percentage will also be calculated using the given min/max values as follows:
p = 100% * (v-Min)/(Max-Min)
The default value after creation of the widget is 0.


17.19.4 Examples

The Sample folder contains the following examples which show how the widget can be used:

- WIDGET_SimpleProgbar.c
- WIDGET_Progbar.c

Note that several other examples also make use of this widget and may also be helpful to get familiar with the widget.

Screenshot of WIDGET_SimpleProgbar.c:

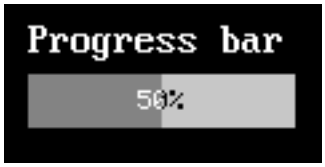

Screenshot of WIDGET_Progbar.c:



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG


17.20 RADIO: Radio button widget



Radio buttons, like check boxes, are used for selecting choices. A dot appears when a radio button is turned on or selected. The difference from check boxes is that the user can only select one radio button at a time. When a button is selected, the other buttons in the widget are turned off, as shown to the right. One radio button widget may contain any number of buttons, which are always arranged vertically.
All RADIO-related routines are located in the file(s) `RADIO*.c`, `RADIO.h`.
All identifiers are prefixed RADIO. The table below shows the default appearances of a RADIO button:

	Selected	Unselected
Enabled	Radio button	Radio button
Disabled	Radio button	Radio button

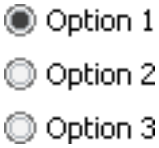Skinning...



...is available for this widget. The screenshot above shows the widget using the default skin. For details please refer to chapter 'Skinning'.

17.20.1 Configuration options

Type	Macro	Default	Description
S	RADIO_IMAGE0_DEFAULT	(see table above)	Default outer image used to show a disabled radio button.
S	RADIO_IMAGE1_DEFAULT	(see table above)	Default outer image used to show a enabled radio button.
S	RADIO_IMAGE_CHECK_DEFAULT	(see table above)	Default inner image used to mark the selected item.
N	RADIO_FONT_DEFAULT	&GUI_Font13_1	Default font used to render the radio button text.
N	RADIO_DEFAULT_TEXT_COLOR	GUI_BLACK	Default text color of radio button text.
N	RADIO_DEFAULT_BKCOLOR	0xC0C0C0	Default background color of radio buttons if no transparency is used.
N	RADIO_FOCUSCOLOR_DEFAULT	GUI_BLACK	Default color for rendering the focus rectangle.

17.20.2 Notification codes

The following events are sent from a radio button widget to its parent window as part of a `WM_NOTIFY_PARENT` message:

Message	Description
WM_NOTIFICATION_CLICKED	Radio button has been clicked.
WM_NOTIFICATION_RELEASED	Radio button has been released.
WM_NOTIFICATION_MOVED_OUT	Radio button has been clicked and pointer has been moved out off of the button without releasing.
WM_NOTIFICATION_VALUE_CHANGED	Value (selection) of the radio button widget has changed.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.20.3 Keyboard reaction

The widget reacts to the following keys if it has the input focus:

Key	Reaction
GUI_KEY_RIGHT	Increments the selection by 1.
GUI_KEY_DOWN	Increments the selection by 1.
GUI_KEY_LEFT	Decrements the selection by 1.
GUI_KEY_UP	Decrements the selection by 1.

17.20.4 RADIO API

The table below lists the available emWin RADIO-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
RADIO_Create()	Creates a RADIO widget. (Obsolete)
RADIO_CreateEx()	Creates a RADIO widget.
RADIO_CreateIndirect()	Creates a RADIO widget from resource table entry.
RADIO_CreateUser()	Creates a RADIO widget using extra bytes as user data.
RADIO_Dec()	Decrement the button selection by a value of 1.
RADIO_GetDefaultFont()	Returns the default font used to show the text of new radio buttons.
RADIO_GetDefaultTextColor()	Returns the default text color used to show the text of new radio buttons.
RADIO_GetText()	Returns the text of a radio button item.
RADIO_GetUserData()	Retrieves the data set with RADIO_SetUserData().
RADIO_GetValue()	Return the current button selection.
RADIO_Inc()	Increment the button selection by a value of 1.
RADIO_SetBkColor()	Sets the background color of the radio button.
RADIO_SetDefaultFocusColor()	Sets the default focus rectangle color for new radio buttons.
RADIO_SetDefaultFont()	Sets the default font used to show the text of new radio buttons.
RADIO_SetDefaultImage()	Sets the images to be used for new radio buttons.
RADIO_SetDefaultTextColor()	Sets the default text color used to show the text of new radio buttons.
RADIO_SetFocusColor()	Sets the color of the focus rectangle.
RADIO_SetFont()	Sets the font used to show the text of the radio button.
RADIO_SetGroupId()	Sets the group Id of the given radio widget.
RADIO_SetImage()	Sets the images used to display the radio button.
RADIO_SetText()	Sets the text
RADIO_SetTextColor()	Sets the text color used to show the text of radio button.
RADIO_SetUserData()	Sets the extra data of a RADIO widget.
RADIO_SetValue()	Set the button selection.

RADIO_Create()

(Obsolete, `RADIO_CreateEx()` should be used instead)

Description

Creates a RADIO widget of a specified size at a specified location.

Prototype

```
RADIO_Handle RADIO_Create(int     x0,      int      y0,
                          int     xsize,   int      ysize,
                          WM_HWIN hParent, int      Id,
                          int     Flags,   unsigned Para);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Parameter	Description
x0	Leftmost pixel of the radio button widget (in parent coordinates).
y0	Topmost pixel of the radio button widget (in parent coordinates).
xsize	Horizontal size of the radio button widget (in pixels).
ysize	Vertical size of the radio button widget (in pixels).
hParent	Handle of parent window.
Id	ID to be returned.
Flags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
Para	Number of buttons in the group.

Return value

Handle of the created RADIO widget; 0 if the function fails.

RADIO_CreateEx()

Description

Creates a RADIO widget of a specified size at a specified location.

Prototype

```
RADIO_Handle RADIO_CreateEx(int     x0,       int y0,
                            int     xsize,    int ysize,
                            WM_HWIN hParent,  int WinFlags,
                            int     ExFlags,  int Id,
                            int     NumItems, int Spacing);
```

Parameter	Description
x0	Leftmost pixel of the widget (in parent coordinates).
y0	Topmost pixel of the widget (in parent coordinates).
xsize	Horizontal size of the widget (in pixels).
ysize	Vertical size of the widget (in pixels).
hParent	Handle of parent window. If 0, the new RADIO widget will be a child of the desktop (top-level window).
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
ExFlags	Not used, reserved for future use.
Id	Window ID of the widget.
NumItems	Number of items of the radio widget. (default is 2)
Spacing	Number of vertical pixels used for each item of the radio widget.

Return value

Handle of the created RADIO widget; 0 if the function fails.

Additional information

If creating a radio widget make sure, that the given ysize is enough to show all items. The value should be at least NumItems * Spacing. If the given value of NumItems is <= 0 a default value of 2 is used.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

RADIO_CreateIndirect()

Prototype explained at the beginning of the chapter as `<WIDGET>_CreateIndirect()`. The element `Flags` of the resource passed as parameter is not used. The following table shows the use of the resource element `Para`:

Bits	Description
0 - 7	Number of items of the radio widget. If 0, a default value of 2 items is used.
8 - 15	Number of vertical pixels used for each item. If 0 the height of the default image is used.
16 - 23	Not used, reserved for future use.
24 - 31	Not used, reserved for future use.

RADIO_CreateUser()

Prototype explained at the beginning of the chapter as `<WIDGET>_CreateUser()`. For a detailed description of the parameters the function `RADIO_CreateEx()` can be referred to.

RADIO_Dec()

Before	After
	

Description

Decrements the selection by a value of 1.

Prototype

```
void RADIO_Dec(RADIO_Handle hObj);
```

Parameter	Description
hObj	Handle of radio button widget.

Additional information

Note that the numbering of the buttons always starts from the top with a value of 0; therefore, decrementing the selection will actually move the selection one button up.

RADIO_GetDefaultFont()

Description

Returns the default font used to display the optional text next to new radio buttons.

Prototype

```
const GUI_FONT * RADIO_GetDefaultFont(void);
```

Return value

Default font used to display the optional text next to the radio buttons.

Additional information

For information about how to add text to a radio widget, refer to "RADIO_SetText()" on page 614.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

RADIO_GetDefaultTextColor()

Description

Returns the default text color used to display the optional text next to new radio buttons.

Prototype

```
GUI_COLOR RADIO_GetDefaultTextColor (void);
```

Return value

Default text color used to display the optional text next to new radio buttons.

Additional information

For information about how to add text to a radio widget, refer to "RADIO_SetText()" on page 614.

RADIO_GetText()

Description

Returns the optional text of the given radio button.

Prototype

```
int RADIO_GetText(RADIO_Handle   hObj,    unsigned Index,
                  char         * pBuffer, int      MaxLen);
```

Parameter	Description
hObj	Handle of widget.
Index	Index of the desired item.
pBuffer	Pointer to buffer to which the text will be copied.
MaxLen	Buffer size in bytes.

Return value

Length of the text copied into the buffer.

Additional information

If the desired item of the radio button contains no text the function returns 0 and the buffer remains unchanged.

RADIO_GetUserData()

Prototype explained at the beginning of the chapter as `<WIDGET>_GetUserData()`.

RADIO_GetValue()

Description

Returns the current button selection.

Prototype

```
void RADIO_GetValue(RADIO_Handle hObj);
```

Parameter	Description
hObj	Handle of radio button widget.

Return value

The value of the currently selected button. If no button is selected (in case of using a radio button group) the return value is -1.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

For information about how to use groups of radio buttons, refer to "RADIO_SetGroupID()" on page 613.

RADIO_Inc()

Before	After
	

Description

Increments the selection by a value of 1.

Prototype

```
void RADIO_Inc(RADIO_Handle hObj);
```

Parameter	Description
hObj	Handle of radio button widget.

Additional information

Note that the numbering of the buttons always starts from the top with a value of 0; therefore, incrementing the selection will actually move the selection one button down.

RADIO_SetBkColor()

Before	After
	

Description

Sets the background color of the radio widget.

Prototype

```
void RADIO_SetBkColor(RADIO_Handle hObj, GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of radio button widget.
Color	Color to be used for the background. (range 0x000000 and 0xFFFFFF or a valid color define) GUI_INVALID_COLOR to make background transparent

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

The background of this widget can either be filled with any available color or transparent. If a valid RGB color is specified, the background is filled with the color, otherwise the background (typically the contents of the parent window) is visible. If the background is transparent, the widget is treated as transparent window, otherwise as non-transparent window. Note that using a background color allows more efficient (faster) rendering.

RADIO_SetDefaultFocusColor()

Description

Sets the default focus rectangle color for new radio buttons.

Prototype

```
GUI_COLOR RADIO_SetDefaultFocusColor(GUI_COLOR Color);
```

Parameter	Description
Color	Default color to be used for new radio buttons.

Return value

Previous default focus rectangle color.

Additional information

For more information, refer to "RADIO_SetFocusColor()" on page 612.

RADIO_SetDefaultFont()

Description

Sets the default font used to display the optional text next to new radio buttons.

Prototype

```
void RADIO_SetDefaultFont(const GUI_FONT * pFont);
```

Parameter	Description
pFont	Pointer to GUI_FONT structure used to show the text of new radio widgets.

Additional information

For information about how to add text to a radio widget, refer to "RADIO_SetText()" on page 614.

RADIO_SetDefaultImage()

Description

Sets the images used to draw new radio buttons.

Prototype

```
void RADIO_SetDefaultImage(const GUI_BITMAP * pBitmap, unsigned int Index);
```

Parameter	Description
pBitmap	Pointer to the bitmap.
Index	(see table below)

Permitted values for parameter Index	
RADIO_BI_INACTIV	Outer image used to show a disabled radio button.
RADIO_BI_ACTIV	Outer image used to show a enabled radio button.
RADIO_BI_CHECK	Inner image used to mark the selected item.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

Two images are used to display a radio button. One image is used to draw the outer frame used to display a unselected radio button. In dependence of the current state it will be the bitmap referenced by RADIO_BI_ACTIV (default) or by RADIO_BI_ACTIV. The second image (referenced by RADIO_BI_CHECK) is used to mark the currently selected button.

RADIO_SetDefaultTextColor()

Description

Sets the default text color used to display the optional text next to new radio buttons.

Prototype

```
void RADIO_SetDefaultTextColor(GUI_COLOR TextColor);
```

Parameter	Description
TextColor	New color to be used.

Additional information

For information about how to add text to a radio widget, refer to "RADIO_SetText()" on page 614.

RADIO_SetFocusColor()

Before	After
	

Description

Sets the color used to render the focus rectangle of the radio button.

Prototype

```
GUI_COLOR RADIO_SetFocusColor(RADIO_Handle hObj, GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of widget.
Color	Color to be used for the focus rectangle.

Return value

Previous color of the focus rectangle.

Additional information

The focus rectangle is only visible if the widget has the input focus.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

RADIO_SetFont()

Before	After
	

Description

Sets the font used to display the optional text next to the radio button.

Prototype


```
void RADIO_SetFont(RADIO_Handle hObj, const GUI_FONT * pFont);
```

Parameter	Description
hObj	Handle of radio button widget.
pFont	Pointer to GUI_FONT structure to be used to display the text.

Additional information

For information about how to add text to a radio widget, refer to "RADIO_SetText()" on page 614.

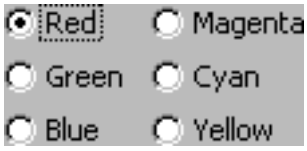RADIO_SetGroupID()

Before	After
	

Description

Sets the group ID of the radio widget.

Prototype

```
void RADIO_SetGroupID(RADIO_Handle hObj, U8 GroupID);
```

Parameter	Description
hObj	Handle of radio button widget.
GroupID	ID of the radio button group. Must be between 1 and 255. If the value is 0 the radio widget is not assigned to a radio button group.

Additional information

This command can be used to create groups of radio buttons. The behavior of one group is the same as the behavior of one radio button. This makes it possible to create for example 2 RADIO widgets side by side with 3 buttons each and build one group of them.

Example

The following example shows how to create a group of 2 RADIO widgets as shown in the screenshot at the beginning of the function description:

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
hRadio_0 = RADIO_CreateEx(10, 10, 60, 0, WM_HBKWIN, WM_CF_SHOW, 0, 1234, 3, 20);
RADIO_SetText(hRadio_0, "Red", 0);
RADIO_SetText(hRadio_0, "Green", 1);
RADIO_SetText(hRadio_0, "Blue", 2);
hRadio_1 = RADIO_CreateEx(65, 10, 60, 0, WM_HBKWIN, WM_CF_SHOW, 0, 1234, 3, 20);
RADIO_SetText(hRadio_1, "Magenta", 0);
RADIO_SetText(hRadio_1, "Cyan", 1);
RADIO_SetText(hRadio_1, "Yellow", 2);
RADIO_SetGroupID(hRadio_0, 1);
RADIO_SetGroupID(hRadio_1, 1);
```

RADIO_SetImage()

Description

Sets the images used to draw the radio button.

Prototype


```
void RADIO_SetImage(RADIO_Handle hObj,   const GUI_BITMAP * pBitmap,
                    unsigned int Index);
```

Parameter	Description
hObj	Handle of radio button widget.
pBitmap	Pointer to the bitmap.
Index	(see table shown under RADIO_SetDefaultImage)

Additional information

(see RADIO_SetDefaultImage).

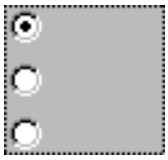RADIO_SetText()

Before	After
	

Description

Sets the optional text shown next to the radio buttons.

Prototype

```
void RADIO_SetText(RADIO_Handle hObj, const char * pText, unsigned Index);
```

Parameter	Description
hObj	Handle of radio button widget.
pText	Pointer to the text to be shown next to the specified radio button.
Index	Zero based index of the radio button.

Additional information

If using a RADIO widget without text (old style) the focus rectangle is drawn around the buttons of the widget. If using radio button text the focus rectangle is shown around the text of the currently selected radio button of the widget.

Example

The following example shows how to add the text shown in the screenshot above:

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
RADIO_SetText(hRadio_0, "Red",   0);
RADIO_SetText(hRadio_0, "Green", 1);
RADIO_SetText(hRadio_0, "Blue",  2);
```

RADIO_SetTextColor()

Before	After
	

Description

Sets the text color used to show the optional text beside the radio buttons.

Prototype

```
void RADIO_SetTextColor(RADIO_Handle hObj, GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of radio button widget.
Color	Color used to show the text.

Additional information

For information about how to add text to a radio widget, refer to "RADIO_SetText()" on page 614.

RADIO_SetUserData()

Prototype explained at the beginning of the chapter as `<WIDGET>_SetUserData()`.

RADIO_SetValue()

Description

Sets the current button selection.

Prototype

```
void RADIO_SetValue(RADIO_Handle hObj, int v);
```

Parameter	Description
hObj	Handle of radio button widget.
v	Value to be set.

Additional information

The topmost radio button in a RADIO widget always has the 0 value, the next button down is always 1, the next is 2, etc.

17.20.5 Examples


The `Sample` folder contains the following example which shows how the widget can be used:

- `DIALOG_Radio.c`

Note that several other examples also make use of this widget and may also be helpful to get familiar with the widget.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Screenshot of DIALOG_Radio.c:

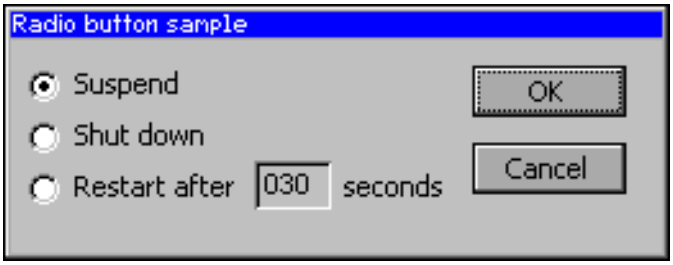

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.21 SCROLLBAR: Scroll bar widget

Scroll bars are used for scrolling through list boxes or any other type of window. They may be created horizontally, as shown below, or vertically.



A scroll bar is typically attached to an existing window, for example the list box shown below:



All SCROLLBAR-related routines are located in the file(s) `SCROLLBAR*.c`, `SCROLLBAR.h`. All identifiers are prefixed SCROLLBAR.

Skinning...



...is available for this widget. The screenshot above shows the widget using the default skin. For details please refer to chapter 'Skinning'.

17.21.1 Configuration options

Type	Macro	Default	Description
N	SCROLLBAR_COLOR_SHAFT_DEFAULT	0x808080	Color of the shaft.
N	SCROLLBAR_COLOR_ARROW_DEFAULT	GUI_BLACK	Color of the arrows.
N	SCROLLBAR_COLOR_THUMB_DEFAULT	0xc0c0c0	Color of the thumb area.
N	SCROLLBAR_THUMB_SIZE_MIN_DEFAULT	4	Minimum thumb size.

17.21.2 Notification codes

The following events are sent from a scroll bar widget to its parent window as part of a `WM_NOTIFY_PARENT` message:

Message	Description
WM_NOTIFICATION_CLICKED	Scrollbar has been clicked.
WM_NOTIFICATION_RELEASED	Scrollbar has been released.
WM_NOTIFICATION_SCROLLBAR_ADDED	Scroll bar has just been added (attached) to an existing window. The window needs to be informed so that it can initialize the scroll bar.
WM_NOTIFICATION_VALUE_CHANGED	Value of scroll bar has changed, either by moving the thumb or by pressing the arrow buttons.

17.21.3 Keyboard reaction

The widget reacts to the following keys if it has the input focus:

Key	Reaction
GUI_KEY_RIGHT	Increments the current value of the scroll bar by a value of 1.
GUI_KEY_DOWN	Increments the current value of the scroll bar by a value of 1.
GUI_KEY_PGDOWN	Increments the current value of the scroll bar by a value of 1 page.
GUI_KEY_LEFT	Decrements the current value of the scroll bar by a value of 1.
GUI_KEY_UP	Decrements the current value of the scroll bar by a value of 1.
GUI_KEY_PGUP	Decrements the current value of the scroll bar by a value of 1 page.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.21.4 SCROLLBAR API

The table below lists the available emWin SCROLLBAR-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
SCROLLBAR_AddValue()	Increment or decrement the value of the scroll bar by a specified value.
SCROLLBAR_Create()	Creates a SCROLLBAR widget. (Obsolete)
SCROLLBAR_CreateAttached()	Creates a SCROLLBAR widget attached to a window.
SCROLLBAR_CreateEx()	Creates a SCROLLBAR widget.
SCROLLBAR_CreateIndirect()	Creates a SCROLLBAR widget from resource table entry.
SCROLLBAR_CreateUser()	Creates a SCROLLBAR widget using extra bytes as user data.
SCROLLBAR_Dec()	Decrements the value of the scroll bar by a value of 1.
SCROLLBAR_GetDefaultWidth()	Returns the default width of a scroll bar.
SCROLLBAR_GetNumItems()	Returns the number of items.
SCROLLBAR_GetPageSize()	Returns the page size (in number of items).
SCROLLBAR_GetThumbSizeMin()	Returns the minimal thumb size in pixels.
SCROLLBAR_GetUserData()	Retrieves the data set with SCROLLBAR_SetUserData().
SCROLLBAR_GetValue()	Returns the current item value.
SCROLLBAR_Inc()	Increments the value of the scroll bar by a value of 1.
SCROLLBAR_SetColor()	Sets the color of a scroll bar.
SCROLLBAR_SetDefaultColor()	Sets the default colors for new scroll bars.
SCROLLBAR_SetDefaultWidth()	Sets the default width of a scroll bar.
SCROLLBAR_SetNumItems()	Sets the number of items for scrolling.
SCROLLBAR_SetPageSize()	Sets the page size (in number of items).
SCROLLBAR_SetState()	Sets the state of a scroll bar.
SCROLLBAR_SetThumbSizeMin()	Sets the minimal thumb size in pixels.
SCROLLBAR_SetUserData()	Sets the extra data of a SCROLLBAR widget.
SCROLLBAR_SetValue()	Sets the current value of the scroll bar.
SCROLLBAR_SetWidth()	Sets the width of the scroll bar.

SCROLLBAR_AddValue()

Definition

Increments or decrements the value of the scroll bar by a specified value.

Prototype

```
void SCROLLBAR_AddValue(SCROLLBAR_Handle hObj, int Add);
```

Parameter	Description
hObj	Handle of scroll bar.
Add	Number of items to increment or decrement at one time.

Additional information

The scroll bar cannot exceed the value set in SCROLLBAR_SetNumItems(). For example, if a window contains 200 items and the scroll bar is currently at value 195, incrementing the bar by 3 items will move it to value 198. However, incrementing by 10 items will only move the bar as far as value 200, which is the maximum value for this particular window.

SCROLLBAR_Create()

(Obsolete, SCROLLBAR_CreateEx() should be used instead)

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Description

Creates a SCROLLBAR widget of a specified size at a specified location.

Prototype

```
SCROLLBAR_Handle SCROLLBAR_Create(int x0,          int y0,
                                  int xsize,       int ysize
                                  WM_HWIN hParent, int Id,
                                  int WinFlags,    int SpecialFlags);
```

Parameter	Description
x0	Leftmost pixel of the scroll bar (in parent coordinates).
y0	Topmost pixel of the scroll bar (in parent coordinates).
xsize	Horizontal size of the scroll bar (in pixels).
ysize	Vertical size of the scroll bar (in pixels).
hParent	Handle of parent window.
Id	ID to be returned.
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
SpecialFlags	Special creation flags (see indirect creation flags under SCROLLBAR_CreateIndirect()).

Return value

Handle of the created SCROLLBAR widget; 0 if the function fails.

SCROLLBAR_CreateAttached()

Description

Creates a scroll bar which is attached to an existing window.

Prototype

```
SCROLLBAR_Handle SCROLLBAR_CreateAttached(WM_HWIN hParent,
                                          int     SpecialFlags);
```

Parameter	Description
hParent	Handle of parent window.
SpecialFlags	Special creation flags (see indirect creation flags under SCROLLBAR_CreateIndirect()).

Return value

Handle of the created SCROLLBAR widget; 0 if the function fails.

Additional information

An attached scroll bar is essentially a child window which will position itself on the parent window and operate accordingly.
Vertical attached scrollbars will be automatically placed on the right side of the parent window; horizontal scrollbars on the bottom. Since no more than one horizontal and one vertical scroll bar can be attached to a parent window, no ID needs to be passed as parameter. The following fixed ID's will automatically be assigned when an attached scroll bar is created:
GUI_ID_HSCROLL for a horizontal scroll bar, and
GUI_ID_VSCROLL for a vertical scroll bar.

Example

Creates a list box with an attached scrollbar:

```
LISTBOX_Handle hListBox;
hListBox = LISTBOX_Create(ListBox, 50, 50, 100, 100, WM_CF_SHOW);
SCROLLBAR_CreateAttached(hListBox, SCROLLBAR_CF_VERTICAL);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Screen shots of above example

The picture on the left shows the list box as it appears after creation. On the right it is shown with the attached vertical scrollbar:

After	After, with attached vertical scrollbar
	

SCROLLBAR_CreateEx()

Description

Creates a SCROLLBAR widget of a specified size at a specified location.

Prototype

```
SCROLLBAR_Handle SCROLLBAR_CreateEx(int     x0,      int y0,
                                    int     xsize,   int ysize,
                                    WM_HWIN hParent, int WinFlags,
                                    int     ExFlags, int Id);
```

Parameter	Description
x0	Leftmost pixel of the widget (in parent coordinates).
y0	Topmost pixel of the widget (in parent coordinates).
xsize	Horizontal size of the widget (in pixels).
ysize	Vertical size of the widget (in pixels).
hParent	Handle of parent window. If 0, the new SCROLLBAR widget will be a child of the desktop (top-level window).
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
ExFlags	Special creation flags (see indirect creation flags under SCROLLBAR_CreateIndirect()).
Id	Window ID of the widget.

Return value

Handle of the created SCROLLBAR widget; 0 if the function fails.

SCROLLBAR_CreateIndirect()

Prototype explained at the beginning of the chapter. The following flags may be used as the Flags element of the resource passed as parameter:

Permitted indirect creation flags ("OR" combinable)	
SCROLLBAR_CF_VERTICAL	Creates a vertical scroll bar (default is horizontal).
SCROLLBAR_CF_FOCUSSABLE	Gives scroll bar the input focus.

The Para element is not used in the resource table.

SCROLLBAR_CreateUser()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateUser(). For a detailed description of the parameters the function SCROLLBAR_CreateEx() can be referred to.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

SCROLLBAR_Dec()

Description

Decrements the current value of the scroll bar by a value of 1.

Prototype

```
void SCROLLBAR_Dec(SCROLLBAR_Handle hObj);
```

Parameter	Description
hObj	Handle of scroll bar.

Additional information

The definition of an "item" is application-specific, although in most cases it is equal to one line. Items are numbered top to bottom or left to right, beginning with a value of 0.

SCROLLBAR_GetDefaultWidth()

Description

Returns the default width used to create a scrollbar.

Prototype

```
int SCROLLBAR_GetDefaultWidth(void);
```

Return value

Default width used to create a scrollbar.

SCROLLBAR_GetNumItems()

Description

Returns the number of scrollbar items.

Prototype

```
int SCROLLBAR_GetNumItems(SCROLLBAR_Handle hObj);
```

Parameter	Description
hObj	Handle of scroll bar

Return value

The number of scrollbar items.

SCROLLBAR_GetPageSize()

Description

Returns the page size.

Prototype

```
int SCROLLBAR_GetValue(SCROLLBAR_Handle hObj);
```

Parameter	Description
hObj	Handle of scroll bar.

Return value

The number of items specified to be one page.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

SCROLLBAR_GetThumbSizeMin()

Description

Returns the minimum thumb size in pixels.

Prototype

```
int SCROLLBAR_GetThumbSizeMin(void);
```

Return value

Minimum thumb size in pixels.

SCROLLBAR_GetUserData()

Prototype explained at the beginning of the chapter as `<WIDGET>_GetUserData()`.

SCROLLBAR_GetValue()

Description

Returns the value of the current item.

Prototype

```
int SCROLLBAR_GetValue(SCROLLBAR_Handle hObj);
```

Parameter	Description
hObj	Handle of scroll bar.

Return value

The value of the current item.

SCROLLBAR_Inc()

Description

Increments the current value of the scroll bar by a value of 1.

Prototype

```
void SCROLLBAR_Inc(SCROLLBAR_Handle hObj);
```

Parameter	Description
hObj	Handle of scroll bar.

Additional information

The definition of an "item" is application-specific, although in most cases it is equal to one line. Items are numbered top to bottom or left to right, beginning with a value of 0.

SCROLLBAR_SetColor()

Before	After
	

Description

Sets the given color attribute of the scroll bar.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
GUI_COLOR SCROLLBAR_SetColor(SCROLLBAR_Handle hObj, int Index,
                             GUI_COLOR        Color);
```

Parameter	Description
hObj	Handle of scroll bar.
Index	(see table below)
Color	Color to be used.

Permitted values for parameter Index	
SCROLLBAR_CI_THUMB	Color of thumb area.
SCROLLBAR_CI_SHAFT	Color of shaft.
SCROLLBAR_CI_ARROW	Color of arrows.

Return value

Previous color used for the given index.

SCROLLBAR_SetDefaultColor()

Description

Sets the default color attributes for new scroll bars.

Prototype

```
GUI_COLOR SCROLLBAR_SetDefaultColor(GUI_COLOR Color, unsigned int Index);
```

Parameter	Description
Color	Color used as default for new scroll bars.
Index	(see table under SCROLLBAR_SetColor())

Return value

Previous default color.

SCROLLBAR_SetDefaultWidth()

Description

Sets the default width used to create a scrollbar.

Prototype

```
int SCROLLBAR_SetDefaultWidth(int DefaultWidth);
```

Parameter	Description

Return value

Previous default width.

SCROLLBAR_SetNumItems()

Description

Sets the number of items for scrolling.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void SCROLLBAR_SetNumItems(SCROLLBAR_Handle hObj, int NumItems);
```

Parameter	Description
hObj	Handle of scroll bar.
NumItems	Number of items to be set.

Additional information

The definition of an "item" is application-specific, although in most cases it is equal to one line.
The number of items specified is the maximum value; the scroll bar cannot go beyond this value.

SCROLLBAR_SetPageSize()

Description

Sets the page size.

Prototype

```
void SCROLLBAR_SetPageSize(SCROLLBAR_Handle hObj, int PageSize);
```

Parameter	Description
hObj	Handle of scroll bar.
PageSize	Page size (in number of items).

Additional information

Page size is specified as the number of items to one page. If the user pages up or down, either with the keyboard or by mouse-clicking in the scroll bar area, the window will be scrolled up or down by the number of items specified to be one page.

SCROLLBAR_SetState()

Description

Sets the state of a scroll bar.

Prototype

```
void SCROLLBAR_SetState(SCROLLBAR_Handle        hObj,
                        const WM_SCROLL_STATE * pState);
```

Parameter	Description
hObj	Handle of scroll bar.
pState	Pointer to a data structure of type WM_SCROLL_STATE.

Additional information

The data structure is defined as follows:

```
typedef struct {
  int NumItems;
  int v;
  int PageSize;
} WM_SCROLL_STATE;
```

SCROLLBAR_SetThumbSizeMin()

Description

Sets the minimum thumb size in pixels.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
int SCROLLBAR_SetThumbSizeMin(int ThumbSizeMin);
```

Parameter	Description
ThumbSizeMin	Minimum thumb size to be set.

Return value

Old minimum thumb size in pixels.

SCROLLBAR_SetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_SetUserData().

SCROLLBAR_SetValue()

Description

Sets the current value of a scroll bar.

Prototype

```
void SCROLLBAR_SetValue(SCROLLBAR_Handle hObj, int v);
```

Parameter	Description
hObj	Handle of scroll bar.
v	Value to be set.

SCROLLBAR_SetWidth()

Description

Sets the width of the scroll bar.

Prototype

```
void SCROLLBAR_SetWidth(SCROLLBAR_Handle hObj, int Width);
```

Parameter	Description
hObj	Handle of scroll bar.
Width	Width to be set.


17.21.5 Example

The Sample folder contains the following example which shows how the widget can be used:

- WIDGET_ScrollbarMove.c

Note that several other examples also make use of this widget and may also be helpful to get familiar with the widget.


Screenshot of WIDGET_ScrollbarMove.c:

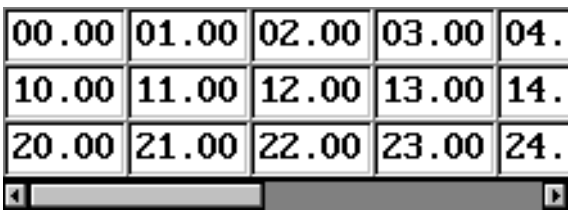

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.22 SLIDER: Slider widget

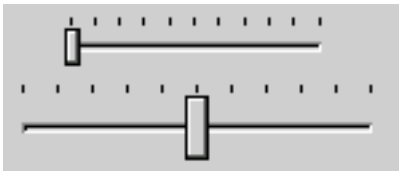Slider widgets are commonly used for modifying values through the use of a slider bar. The widget consists of a slider bar and tick marks beside the bar. These tick marks can be used to snap the slider bar while dragging it. For details about how to use the tick marks for snapping refer to the function SLIDER_SetRange().



All SLIDER-related routines are located in the file(s) SLIDER*.c, SLIDER.h. All identifiers are prefixed SLIDER.

Skinning...



...is available for this widget. The screenshot above shows the widget using the default skin. For details please refer to chapter 'Skinning'.

17.22.1 Configuration options

Type	Macro	Default	Description
N	SLIDER_BKCOLOR0_DEFAULT	0xc0c0c0	Background color.
N	SLIDER_COLOR0_DEFAULT	0xc0c0c0	Slider (thumb) color.
N	SLIDER_FOCUSCOLOR_DEFAULT	GUI_BLACK	Default color for rendering the focus rectangle.

17.22.2 Notification codes

The following events are sent from a slider widget to its parent window as part of a WM_NOTIFY_PARENT message:

Message	Description
WM_NOTIFICATION_CLICKED	Slider widget has been clicked.
WM_NOTIFICATION_RELEASED	Slider widget has been released.
WM_NOTIFICATION_VALUE_CHANGED	Value of the slider widget has changed by moving the thumb.

17.22.3 Keyboard reaction

The widget reacts to the following keys if it has the input focus:

Key	Reaction
GUI_KEY_RIGHT	Increments the current value of the slider bar by one item.
GUI_KEY_LEFT	Decrements the current value of the slider bar by one item.

17.22.4 SLIDER API

The table below lists the available emWin SLIDER-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
SLIDER_Create()	Creates a SLIDER widget. (Obsolete)
SLIDER_CreateEx()	Creates a SLIDER widget.
SLIDER_CreateIndirect()	Creates a SLIDER widget from resource table entry.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
SLIDER_CreateUser()	Creates a SLIDER widget using extra bytes as user data.
SLIDER_Dec()	Decrement the value of the slider bar.
SLIDER_GetUserData()	Retrieves the data set with SLIDER_SetUserData().
SLIDER_GetValue()	Return the current value of the slider bar.
SLIDER_Inc()	Increment the value of the slider bar.
SLIDER_SetBkColor()	Sets the background color of the slider bar.
SLIDER_SetDefaultFocusColor()	Sets the default focus rectangle color for new slider bars.
SLIDER_SetFocusColor()	Sets the color of the focus rectangle.
SLIDER_SetNumTicks()	Sets the number of tick marks of the slider bar.
SLIDER_SetRange()	Set the range of the slider value.
SLIDER_SetUserData()	Sets the extra data of a SLIDER widget.
SLIDER_SetValue()	Set the current value of the slider bar.
SLIDER_SetWidth()	Set the width of the slider bar.

SLIDER_Create()

(Obsolete, SLIDER_CreateEx() should be used instead)

Description

Creates a SLIDER widget of a specified size at a specified location.

Prototype

```
SLIDER_Handle SLIDER_Create(int     x0,       int y0,
                            int     xsize,    int ysize,
                            WM_HWIN hParent,  int Id,
                            int     WinFlags, int SpecialFlags);
```

Parameter	Description
x0	Leftmost pixel of the slider (in parent coordinates).
y0	Topmost pixel of the slider (in parent coordinates).
xsize	Horizontal size of the slider (in pixels).
ysize	Vertical size of the slider (in pixels).
hParent	Handle of the parent window.
Id	Id to be returned
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
SpecialFlags	Special creation flag (see indirect creation flag under SLIDER_CreateIndirect()).

Return value

Handle of the created SLIDER widget; 0 if the function fails.

SLIDER_CreateEx()

Description

Creates a SLIDER widget of a specified size at a specified location.

Prototype

```
SLIDER_Handle SLIDER_CreateEx(int     x0,       int y0,
                              int     xsize,    int ysize,
                              WM_HWIN hParent,  int WinFlags,
                              int     ExFlags,  int Id);
```


© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Parameter	Description
x0	Leftmost pixel of the widget (in parent coordinates).
y0	Topmost pixel of the widget (in parent coordinates).
xsize	Horizontal size of the widget (in pixels).
ysize	Vertical size of the widget (in pixels).
hParent	Handle of the parent window. If 0, the new SLIDER widget will be a child of the desktop (top-level window).
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
ExFlags	Special creation flags (see indirect creation flags under SLIDER_CreateIndirect()).
Id	Window ID of the widget.

Return value

Handle of the created SLIDER widget; 0 if the function fails.

SLIDER_CreateIndirect()

Prototype explained at the beginning of the chapter. The following flag may be used as the Flags element of the resource passed as parameter:

Permitted indirect creation flag	
SLIDER_CF_VERTICAL	Create a vertical slider (default is horizontal).

The Para element is not used in the resource table.

SLIDER_CreateUser()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateUser(). For a detailed description of the parameters the function SLIDER_CreateEx() can be referred to.

SLIDER_Dec()

Description

Decrements the current value of the slider bar by one item.

Prototype

```
void SLIDER_Dec(SLIDER_Handle hObj);
```

Parameter	Description
hObj	Handle of slider widget.

SLIDER_GetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_GetUserData().

SLIDER_GetValue()

Description

Returns the current value of the slider bar.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
int SLIDER_GetValue(SLIDER_Handle hObj);
```

Parameter	Description
hObj	Handle of slider widget.

Return value

The current value of the slider.

SLIDER_Inc()

Description

Increments the current value of the slider bar by one item.

Prototype

```
void SLIDER_Inc(SLIDER_Handle hObj);
```

Parameter	Description
hObj	Handle of slider widget.

SLIDER_SetBkColor()

Description

Sets the background color of the slider.

Prototype

```
void SLIDER_SetBkColor(SLIDER_Handle hObj, GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of slider widget.
Color	Color to be used for the background. (range 0x000000 and 0xFFFFFF or a valid color define) GUI_INVALID_COLOR to make background transparent

Additional information

The background of this widget can either be filled with any available color or transparent. If a valid RGB color is specified, the background is filled with the color, otherwise the background (typically the contents of the parent window) is visible. If the background is transparent, the widget is treated as transparent window, otherwise as non-transparent window. Note that using a background color allows more efficient (faster) rendering.

This widget is per default a transparent window. The appearance of a transparent windows background depends on the appearance of the parent window. When a transparent window needs to be redrawn first the background will be drawn by sending a WM_PAINT message to the parent window.
If using this function with a valid color the status of the window will be changed from transparent to non transparent and if the window needs to be redrawn the background will be filled with the given color.
If GUI_INVALID_COLOR is passed to the function the status will be changed from non transparent to transparent.

SLIDER_SetDefaultFocusColor()

Description

Sets the default focus rectangle color for new slider bars.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
GUI_COLOR SLIDER_SetDefaultFocusColor(GUI_COLOR Color);
```

Parameter	Description
Color	Default color to be used for new slider bars.

Return value

Previous default focus rectangle color.

Additional information

For more information, refer to "SLIDER_SetFocusColor()" on page 630.

SLIDER_SetFocusColor()

Before	After
	

Description

Sets the color used to render the focus rectangle of the slider bar.

Prototype

```
GUI_COLOR SLIDER_SetFocusColor(SLIDER_Handle hObj, GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of widget.
Color	Color to be used for the focus rectangle.

Return value

Previous color of the focus rectangle.

Additional information

The focus rectangle is only visible if the widget has the input focus.

SLIDER_SetNumTicks()

Before	After
	

Description

Sets the number of tick marks of the slider bar.

Prototype

```
void SLIDER_SetNumTicks(SLIDER_Handle hObj, int NumTicks);
```

Parameter	Description
hObj	Handle of slider widget.
NumTicks	Number of tick marks drawn.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

After creating a slider widget the default number of tick marks is 10. The tick marks have no effect to snap the slider bar while dragging it.

SLIDER_SetRange()

Description

Sets the range of the slider.

Prototype

```
void SLIDER_SetRange(SLIDER_Handle hObj, int Min, int Max);
```

Parameter	Description
hObj	Handle of slider widget.
Min	Minimum value.
Max	Maximum value.

Additional information

After creating a slider widget the default range is set to 0 - 100.

Examples

If a value should be modified in the range of 0 - 2499 set the range as follows:

```
SLIDER_SetRange(hSlider, 0, 2499);
```

If a value should be modified in the range of 100 - 499 set the range as follows:

```
SLIDER_SetRange(hSlider, 100, 499);
```

If a value should be modified in the range of 0 to 5000 and the slider bar should change the value in steps of 250 set the range and the tick marks as follows. The result returned by `SLIDER_GetValue()` should be multiplied with 250:

```
SLIDER_SetRange(hSlider, 0, 20);
SLIDER_SetNumTicks(hSlider, 21);
```

SLIDER_SetUserData()

Prototype explained at the beginning of the chapter as `<WIDGET>_SetUserData()`.

SLIDER_SetValue()

Description

Sets the current value of the slider bar.



Prototype

```
void SLIDER_SetValue(SLIDER_Handle hObj, int v);
```

Parameter	Description
hObj	Handle of slider widget.
v	Value to be set.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

SLIDER_SetWidth()

Before	After
	

Description

Sets the width of the slider bar.

Prototype

```
void SLIDER_SetWidth(SLIDER_Handle hObj, int Width);
```

Parameter	Description
hObj	Handle of slider widget.
Width	Width to be set.


17.22.5 Example

The `Sample` folder contains the following example which shows how the widget can be used:

- `DIALOG_SliderColor.c`

Note that several other examples also make use of this widget and may also be helpful to get familiar with the widget.

Screenshot of DIALOG_SliderColor.c:

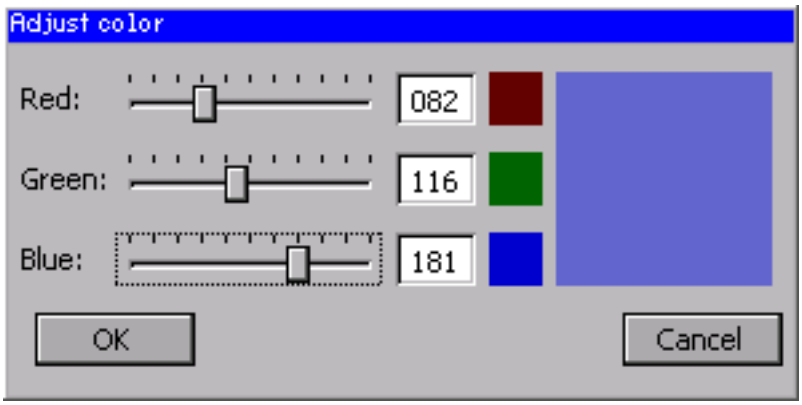


 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.23 TEXT: Text widget

Text widgets are typically used in order to display fields of text in dialog boxes, as shown in the message box below:



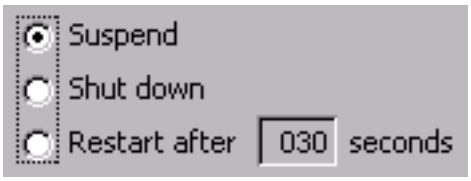Of course, text fields may also be used for labeling other widgets, as follows:



All TEXT-related routines are located in the file(s) `TEXT*.c`, `TEXT.h`. All identifiers are prefixed TEXT.

17.23.1 Configuration options

Type	Macro	Default	Description
N	TEXT_DEFAULT_BK_COLOR	GUI_INVALID_COLOR	Transparent background per default
N	TEXT_DEFAULT_TEXT_COLOR	GUI_BLACK	Default text color.
N	TEXT_DEFAULT_WRAPMODE	GUI_WRAPMODE_NONE	Default wrapping mode.
S	TEXT_FONT_DEFAULT	&GUI_Font13_1	Font used.

17.23.2 Keyboard reaction

The widget can not gain the input focus and does not react on keyboard input.

17.23.3 TEXT API

The table below lists the available emWin TEXT-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
TEXT_Create()	Creates a TEXT widget. (Obsolete)
TEXT_CreateAsChild()	Creates a TEXT widget as a child window. (Obsolete)
TEXT_CreateEx()	Creates a TEXT widget.
TEXT_CreateIndirect()	Creates a TEXT widget from resource table entry.
TEXT_CreateUser()	Creates a TEXT widget using extra bytes as user data.
TEXT_GetDefaultFont()	Returns the default font used for text.
TEXT_GetNumLines()	Returns the number of lines currently displayed in the widget.
TEXT_GetUserData()	Retrieves the data set with TEXT_SetUserData().
TEXT_SetBkColor()	Sets the background color for the text.
TEXT_SetDefaultFont()	Sets the default font used for text.
TEXT_SetDefaultTextColor()	Sets the default text color used for text.
TEXT_SetDefaultWrapMode()	Sets the default wrap mode for new text widgets.
TEXT_SetFont()	Sets the font used for a specified text widget.
TEXT_SetText()	Sets the text for a specified text widget.
TEXT_SetTextAlign()	Sets the text alignment of a specified text widget.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
TEXT_SetTextColor()	Sets the text color of the given widget.
TEXT_SetUserData()	Sets the extra data of a TEXT widget.
TEXT_SetWrapMode()	Sets the wrap mode of a specified text widget.

TEXT_Create()

(Obsolete, TEXT_CreateEx() should be used instead)

Description

Creates a TEXT widget of a specified size at a specified location.

Prototype

```
TEXT_Handle TEXT_Create(int          x0,    int y0,
                        int          xsize, int ysize,
                        int          Id,    int Flags,
                        const char * s,     int Align);
```

Parameter	Description
x0	Leftmost pixel of the text widget (in parent coordinates).
y0	Topmost pixel of the text widget (in parent coordinates).
xsize	Horizontal size of the text widget (in pixels).
ysize	Vertical size of the text widget (in pixels).
Id	ID to be returned.
Flags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
s	Pointer to the text to be displayed.
Align	Alignment attribute for the text (see indirect creation flags under TEXT_CreateIndirect()).

Return value

Handle of the created TEXT widget; 0 if the function fails.

TEXT_CreateAsChild()

(Obsolete, TEXT_CreateEx should be used instead)

Description

Creates a TEXT widget as a child window.

Prototype

```
TEXT_Handle TEXT_CreateAsChild(int     x0,      int          y0,
                               int     xsize,   int          ysize,
                               WM_HWIN hParent, int          Id,
                               int     Flags,   const char * s,
                               int     Align);
```

Parameter	Description
x0	X-position of the progress bar relative to the parent window.
y0	Y-position of the progress bar relative to the parent window.
xsize	Horizontal size of the text widget (in pixels).
ysize	Vertical size of the text widget (in pixels).
hParent	Handle of parent window.
Id	ID to be returned.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Parameter	Description
Flags	Window create flags (see TEXT_Create()).
s	Pointer to the text to be displayed.
Align	Alignment attribute for the text (see indirect creation flags under TEXT_CreateIndirect()).

Return value

Handle of the created TEXT widget; 0 if the function fails.

TEXT_CreateEx()

Description

Creates a TEXT widget of a specified size at a specified location.

Prototype

```
TEXT_Handle TEXT_CreateEx(int          x0,      int y0,
                          int          xsize,   int ysize,
                          WM_HWIN      hParent, int WinFlags,
                          int          ExFlags, int Id,
                          const char * pText);
```

Parameter	Description
x0	Leftmost pixel of the widget (in parent coordinates).
y0	Topmost pixel of the widget (in parent coordinates).
xsize	Horizontal size of the widget (in pixels).
ysize	Vertical size of the widget (in pixels).
hParent	Handle of parent window. If 0, the new TEXT widget will be a child of the desktop (top-level window).
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
ExFlags	Alignment attribute for the text (see indirect creation flags under TEXT_CreateIndirect()).
Id	Window ID of the TEXT widget.
pText	Pointer to the text to be displayed.

Return value

Handle of the created TEXT widget; 0 if the function fails.

TEXT_CreateIndirect()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateIndirect(). The following flags may be used as the Flags element of the resource passed as parameter:

Permitted indirect creation flags ("OR" combinable)	
TEXT_CF_LEFT	Horizontal alignment: left
TEXT_CF_RIGHT	Horizontal alignment: right
TEXT_CF_HCENTER	Horizontal alignment: center
TEXT_CF_TOP	Vertical alignment: top
TEXT_CF_BOTTOM	Vertical alignment: bottom
TEXT_CF_VCENTER	Vertical alignment: center

The Para element is not used in the resource table.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

TEXT_CreateUser()

Prototype explained at the beginning of the chapter as `<WIDGET>_CreateUser()`. For a detailed description of the parameters the function `TEXT_CreateEx()` can be referred to.

TEXT_GetDefaultFont()

Description

Returns the default font used for text widgets.

Prototype

```
const GUI_FONT* TEXT_GetDefaultFont(void);
```

Return value

Pointer to the default font used for text widgets.

TEXT_GetNumLines()

Description

Returns the number of lines currently displayed in the widget.

Prototype

```
int TEXT_GetNumLines(TEXT_Handle hObj);
```

Parameter	Explanation
hObj	Handle of the widget.

Return value

Number of lines.

TEXT_GetUserData()

Prototype explained at the beginning of the chapter as `<WIDGET>_GetUserData()`.

TEXT_SetBkColor()

Description

Sets the background color of the text widget.

Prototype

```
void TEXT_SetBkColor(TEXT_Handle hObj, GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of text widget.
Color	Color to be used for the background. (range 0x000000 and 0xFFFFFF or a valid color define) GUI_INVALID_COLOR to make background transparent

Additional information

The background of this widget can either be filled with any available color or transparent. If a valid RGB color is specified, the background is filled with the color, otherwise the background (typically the contents of the parent window) is visible. If the background is transparent, the widget is treated as transparent window, otherwise as non-transparent window. Note that using a background color allows more efficient (faster) rendering.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

TEXT_SetDefaultFont()

Description

Sets the default font used for text widgets.

Prototype

```
void TEXT_SetDefaultFont(const GUI_FONT * pFont);
```

Parameter	Description
pFont	Pointer to the font to be set as default.

TEXT_SetDefaultTextColor()

Description

Sets the default text color used for text widgets.

Prototype

```
void TEXT_SetDefaultTextColor(GUI_COLOR Color);
```

Parameter	Description
Color	Color to be used.

TEXT_SetDefaultWrapMode()

Description

Sets the default text wrapping mode used for new text widgets.

Prototype

```
GUI_WRAPMODE TEXT_SetDefaultWrapMode(GUI_WRAPMODE WrapMode);
```

Parameter	Description
WrapMode	Default text wrapping mode used for new text widgets. See table below.

Permitted values for parameter WrapMode	
GUI_WRAPMODE_NONE	No wrapping will be performed.
GUI_WRAPMODE_WORD	Text is wrapped word wise.
GUI_WRAPMODE_CHAR	Text is wrapped char wise.

Return value

Previous default text wrapping mode.

Additional information

The default wrapping mode for TEXT widgets is GUI_WRAPMODE_NONE. For details about text wrapping within the text widget, refer to “TEXT_SetWrapMode()” on page 638.

TEXT_SetFont()

Description

Sets the font to be used for a specified text widget.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void TEXT_SetFont(TEXT_Handle hObj, const GUI_FONT * pFont);
```

Parameter	Description
hObj	Handle of text widget.
pFont	Pointer to the font to be used.

TEXT_SetText()

Description

Sets the text to be used for a specified text widget.

Prototype

```
void TEXT_SetText(TEXT_Handle hObj, const char * s);
```

Parameter	Description
hObj	Handle of text widget.
s	Text to be displayed.

TEXT_SetTextAlign()

Description

Sets the text alignment of a specified text widget.

Prototype

```
void TEXT_SetTextAlign(TEXT_Handle hObj, int Align);
```

Parameter	Description
hObj	Handle of text widget.
Align	Text alignment (see TEXT_Create()).

TEXT_SetTextColor()

Description

Sets the text color of a specified text widget.

Prototype

```
void TEXT_SetTextColor(TEXT_Handle pObj, GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of text widget.
Color	New text color.

TEXT_SetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_SetUserData().

TEXT_SetWrapMode()

Description

Sets the wrapping mode of a specified text widget.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void TEXT_SetWrapMode(TEXT_Handle hObj, GUI_WRAPMODE WrapMode);
```

Parameter	Description
hObj	Handle of text widget.
WrapMode	(see table below)

Permitted values for parameter WrapMode	
GUI_WRAPMODE_NONE	No wrapping will be performed.
GUI_WRAPMODE_WORD	Text is wrapped word wise.
GUI_WRAPMODE_CHAR	Text is wrapped char wise.

Additional information

The default wrapping mode for TEXT widgets is GUI_WRAPMODE_NONE. For more details about text wrapping, refer to "GUI_DispStringInRectWrap()" on page 77.

17.23.4 Examples

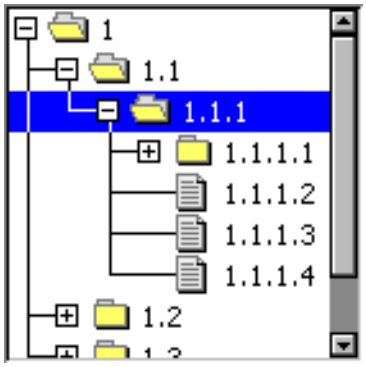
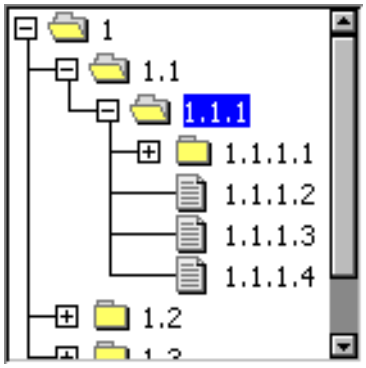
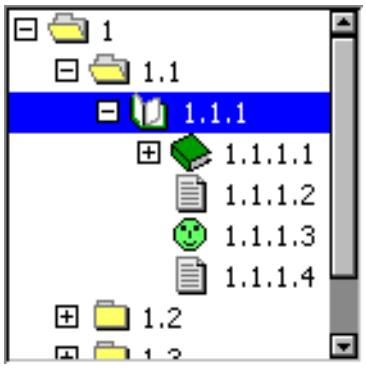
There is no special example for this widget. Many of the examples use this widget:

- DIALOG_Count.c
- DIALOG_Radio.c
- WIDGET_GraphXY.c
- ...

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.24 TREEVIEW: Treeview widget

A treeview widget can be used to show a hierarchical view of information like files in a directory or items of an index, whereas each item can be a node or a leaf. Each node can have a number of sub items and can be closed or opened.
A node consists of a button image, which shows a plus sign in closed state or a minus sign in open state, two item images (one for closed and one for open state) and the item text. Pressing the button image or double clicking the item image toggles the state (open or closed) of the node.
A leaf consists of an item image and the item text.
The current selection can be marked by highlighting the item text or by highlighting the whole row. All items of a tree are joined by lines per default.
All TREEVIEW-related routines are located in the file(s) `TREEVIEW*.c`, `TREEVIEW*.h`. All identifiers are prefixed TREEVIEW. The table below shows the appearances of the TREEVIEW widget:

Description	TREEVIEW widget
Treeview widget with row selection enabled.	
Treeview widget with text selection enabled.	
Treeview widget with some application defined bitmaps and lines off.	

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.24.1 Description of terms

Item

This means a treeview item which can be a leaf or a node.

Leaf

A leaf is a treeview item which is not able to have any children. It is represented by the leaf bitmap and the item text.

Node

A node is a treeview item which is able to have children. It is represented by the button bitmap, the node bitmap and the item text. The state of the node can be toggled by pressing the button bitmap or by double clicking the node bitmap or the selected area of the item. In open state the children are visible below the node at the next level of indentation.

Button bitmap

This means the bitmap visible at nodes which can be pressed to toggle the state of the node.

Item bitmap

Left beside the item text the item bitmap is shown. Which bitmap is shown depends in the item (leaf or node) and in case of a node it also depends on the state, collapsed or expanded.

Expanded state

In expanded state the children of a node are visible and the minus sign is shown in the button bitmap.

Collapsed state

In collapsed state the children of a node are hidden and the plus sign is shown in the button bitmap.

Joining lines

Lines which are used to connect the items of a tree. The lines connect the button bitmaps of the nodes and the item bitmaps of the leafs according to the hierarchy of the tree.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.24.2 Configuration options

Type	Macro	Default	Description
	TREEVIEW_FONT_DEFAULT	&GUI_Font13_1	Default font used to draw the text.
	TREEVIEW_BKCOLOR0_DEFAULT	GUI_WHITE	Background color for unselected state
	TREEVIEW_BKCOLOR1_DEFAULT	GUI_BLUE	Background color for selected state.
	TREEVIEW_BKCOLOR2_DEFAULT	0xC0C0C0	Background color for disabled state.
	TREEVIEW_TEXTCOLOR0_DEFAULT	GUI_BLACK	Text color for unselected state.
	TREEVIEW_TEXTCOLOR1_DEFAULT	GUI_WHITE	Text color for selected state.
	TREEVIEW_TEXTCOLOR2_DEFAULT	GUI_GRAY	Text color for disabled state.
	TREEVIEW_LINECOLOR0_DEFAULT	GUI_BLACK	Line color for unselected state.
	TREEVIEW_LINECOLOR1_DEFAULT	GUI_WHITE	Line color for selected state.
	TREEVIEW_LINECOLOR2_DEFAULT	GUI_GRAY	Line color for disabled state.
	TREEVIEW_IMAGE_CLOSED_DEFAULT		Item image for node in closed state.
	TREEVIEW_IMAGE_OPEN_DEFAULT		Item image for node in open state.
	TREEVIEW_IMAGE_LEAF_DEFAULT		Item image for leaf.
	TREEVIEW_IMAGE_PLUS_DEFAULT		Plus sign
	TREEVIEW_IMAGE_MINUS_DEFAULT		Minus sign
	TREEVIEW_INDENT_DEFAULT	16	Number of pixels for indenting.
	TREEVIEW_TEXT_INDENT_DEFAULT	20	Number of pixels for indenting text.

17.24.3 Notification codes

The following events are sent from a treeview widget to its parent window as part of a WM_NOTIFY_PARENT message:

Message	Description
WM_NOTIFICATION_CLICKED	Treeview has been clicked.
WM_NOTIFICATION_RELEASED	Treeview has been released.
WM_NOTIFICATION_MOVED_OUT	Treeview has been clicked and pointer has been moved out off of the widget area without releasing.
WM_NOTIFICATION_SEL_CHANGED	Value (selection) of the treeview widget has changed.

17.24.4 Keyboard reaction

The widget reacts to the following keys if it has the input focus:

Key	Reaction
GUI_KEY_RIGHT	If the cursor is at a closed node, the node is opened. If the cursor is at an open node the cursor moves to the first child of the node.
GUI_KEY_DOWN	The cursor moves to the next visible item below the current position.
GUI_KEY_LEFT	If the cursor is at a leaf the cursor moves to the parent node of the item. If the cursor is at an open node, the node will be closed. If the cursor is at a closed node, the cursor moves to the next parent node.
GUI_KEY_UP	The cursor moves to the previous visible item above the current position.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.24.5 TREEVIEW API

The table below lists the available TREEVIEW-related routines of emWin in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
Common routines	
TREEVIEW_AttachItem()	Attaches an already existing item to the given treeview.
TREEVIEW_CreateEx()	Creates a TREEVIEW widget.
TREEVIEW_CreateIndirect()	Creates a TREEVIEW widget from a resource table.
TREEVIEW_CreateUser()	Creates a TREEVIEW widget using extra bytes as user data.
TREEVIEW_DecSel()	Moves the cursor to the previous visible item.
TREEVIEW_GetDefaultBkColor()	Returns the default background color.
TREEVIEW_GetDefaultFont()	Returns the default font used to draw the item text.
TREEVIEW_GetDefaultLineColor()	Returns the default line color.
TREEVIEW_GetDefaultTextColor()	Returns the default text color.
TREEVIEW_GetItem()	Returns the requested item.
TREEVIEW_GetSel()	Returns the current selected item.
TREEVIEW_GetUserData()	Retrieves the data set with TREEVIEW_SetUserData().
TREEVIEW_IncSel()	Moves the cursor to the next visible item.
TREEVIEW_InsertItem()	Inserts the given item at the given position.
TREEVIEW_SetAutoScrollH()	Manages the automatic use of a horizontal scrollbar.
TREEVIEW_SetAutoScrollV()	Manages the automatic use of a vertical scrollbar.
TREEVIEW_SetBitmapOffset()	Sets the offset of the plus/minus bitmap.
TREEVIEW_SetBkColor()	Sets the background color.
TREEVIEW_SetDefaultBkColor()	Sets the default background color for TREEVIEW widgets.
TREEVIEW_SetDefaultFont()	Sets the default font for TREEVIEW widgets.
TREEVIEW_SetDefaultLineColor()	Sets the default line color for TREEVIEW widgets.
TREEVIEW_SetDefaultTextColor()	Sets the default text color for TREEVIEW widgets.
TREEVIEW_SetFont()	Sets the font used to draw the item text.
TREEVIEW_SetHasLines()	Manages the visibility of the joining lines.
TREEVIEW_SetImage()	Sets the images used to draw the treeview items.
TREEVIEW_SetIndent()	Sets the indentation distance for treeview items.
TREEVIEW_SetLineColor()	Sets the color used to draw the joining lines.
TREEVIEW_SetOwnerDraw()	Enables the treeview to be owner drawn.
TREEVIEW_SetSel()	Sets the selection of the treeview.
TREEVIEW_SetSelMode()	Manages the highlighting of the current selection.
TREEVIEW_SetTextColor()	Sets the color used to draw the treeview items.
TREEVIEW_SetTextIndent()	Sets the indentation distance for item text.
TREEVIEW_SetUserData()	Sets the extra data of a TREEVIEW widget.
Item related routines	
TREEVIEW_ITEM_Collapse()	Collapses the given node.
TREEVIEW_ITEM_CollapseAll()	Collapses the given node and all subnodes.
TREEVIEW_ITEM_Create()	Creates a new treeview item.
TREEVIEW_ITEM_Delete()	Deletes the given treeview item.
TREEVIEW_ITEM_Detach()	Detaches the given item without deleting it.
TREEVIEW_ITEM_Expand()	Expands the given node.
TREEVIEW_ITEM_ExpandAll()	Expands the given node and all subnodes.
TREEVIEW_ITEM_GetInfo()	Returns an information structure of the given item.
TREEVIEW_ITEM_GetText()	Returns the item text.
TREEVIEW_ITEM_GetUserData()	Returns the UserData value of the treeview item.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Routine	Description
TREEVIEW_ITEM_SetImage()	Sets the images used to draw the individual given item.
TREEVIEW_ITEM_SetText()	Sets the text of the given item.
TREEVIEW_ITEM_SetUserData()	Sets the UserData value of the treeview item.

17.24.5.1Common routines

TREEVIEW_AttachItem()

Description

Attaches an already existing item to the treeview widget.

Prototype

```
int TREEVIEW_AttachItem(TREEVIEW_Handle      hObj,
                        TREEVIEW_ITEM_Handle hItem,
                        TREEVIEW_ITEM_Handle hItemAt, int Position);
```

Parameter	Description
hObj	Handle of widget.
hItem	Handle of item to be attached.
hItemAt	Handle of a currently attached item which specifies the position to be used.
Position	(see table below)

Permitted values for parameter Position	
TREEVIEW_INSERT_ABOVE	Attaches the item above the given position at the same indent level as the given position.
TREEVIEW_INSERT_BELOW	Attaches the item below the given position at the same indent level as the given position.
TREEVIEW_INSERT_FIRST_CHILD	Attaches the item below the given position by indenting it. The given position needs to be a node level.

Return value

0 on success, otherwise 1.

Additional information

The function can be used for attaching a single item as well as for attaching a complete tree. Note that in case of attaching a tree, the root item of the tree needs to be passed as hItem. If attaching the first item to an empty treeview the parameters hItem and Position should be 0.

TREEVIEW_CreateEx()

Description

Creates a TREEVIEW widget of a specified size at a specified location.

Prototype

```
TREEVIEW_Handle TREEVIEW_CreateEx(int     x0,      int y0,
                                  int     xsize,   int ysize,
                                  WM_HWIN hParent, int WinFlags,
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                                    int     ExFlags, int Id);
```

Parameter	Description
x0	Leftmost pixel of the widget (in parent coordinates).
y0	Topmost pixel of the widget (in parent coordinates).
xsize	Horizontal size of the widget (in pixels).
ysize	Vertical size of the widget (in pixels).
hParent	Handle of parent window. If 0, the new TEXT widget will be a child of the desktop (top-level window).
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values).
ExFlags	(see table below)
Id	Window ID of the widget.

Permitted values for parameter ExFlags	
TREEVIEW_CF_HIDELINES	Joining lines are not displayed.
TREEVIEW_CF_ROWSELECT	Activates row selection mode.
TREEVIEW_CF_AUTOSCROLLBAR_H	Enables the use of an automatic horizontal scrollbar.
TREEVIEW_CF_AUTOSCROLLBAR_V	Enables the use of an automatic vertical scrollbar.

Return value

Handle of the new widget; 0 if the function fails.

Additional information

The values of parameter ExFlags can be or-combined.

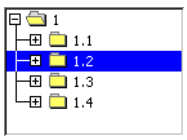
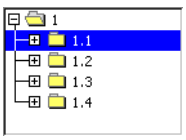
TREEVIEW_CreateIndirect()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateIndirect(). The Para element of the resource table is not used.

TREEVIEW_CreateUser()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateUser(). For a detailed description of the parameters the function TREEVIEW_CreateEx() can be referred to.

TREEVIEW_DecSel()

Before	After
	

Description

Moves the cursor to the previous visible item of the given treeview.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void TREEVIEW_DecSel(TREEVIEW_Handle hObj);
```

Parameter	Description
hObj	Handle of widget.

Additional information

If there is no previous visible item the cursor remains on the current position.

TREEVIEW_GetDefaultBkColor()

Description

Returns the default background color used for new treeview widgets.

Prototype

```
GUI_COLOR TREEVIEW_GetDefaultBkColor(int Index);
```

Parameter	Description
Index	(see table below)

Permitted values for parameter Index	
TREEVIEW_CI_UNSEL	Background color of unselected element.
TREEVIEW_CI_SEL	Background color of selected element.
TREEVIEW_CI_DISABLED	Background color of disabled element.

Return value

Default background color used for new treeview widgets.

TREEVIEW_GetDefaultFont()

Description

Returns the default font used to draw the item text of new treeview widgets.

Prototype

```
const GUI_FONT GUI_UNI_PTR * TREEVIEW_GetDefaultFont(void);
```

Return value

Default font used to draw the item text of new treeview widgets.

TREEVIEW_GetDefaultLineColor()

Description

Returns the default color used to draw the joining lines of new treeview widgets.

Prototype

```
GUI_COLOR TREEVIEW_GetDefaultLineColor(int Index);
```

Parameter	Description
Index	(see table below)

Permitted values for parameter Index	
TREEVIEW_CI_UNSEL	Line color of unselected element.
TREEVIEW_CI_SEL	Line color of selected element.
TREEVIEW_CI_DISABLED	Line color of disabled element.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

Default color used to draw the joining lines of new treeview widgets.

TREEVIEW_GetDefaultTextColor()

Description

Returns the default text color used to draw the item text of new treeview widgets.

Prototype

```
GUI_COLOR TREEVIEW_GetDefaultTextColor(int Index);
```

Parameter	Description
Index	(see table below)

Permitted values for parameter Index	
TREEVIEW_CI_UNSEL	Text color of unselected element.
TREEVIEW_CI_SEL	Text color of selected element.
TREEVIEW_CI_DISABLED	Text color of disabled element.

Return value

Default text color used to draw the item text of new treeview widgets.

TREEVIEW_GetItem()

Description

Returns the handle of the requested treeview item.

Prototype

```
TREEVIEW_ITEM_Handle TREEVIEW_GetItem(TREEVIEW_Handle      hObj,
                                      TREEVIEW_ITEM_Handle hItem,
                                      int                  Flags);
```

Parameter	Description
hObj	Handle of widget.
hItem	Handle of treeview item specifying the position to start search from.
Flags	(see table below)

Permitted values for parameter Flags	
TREEVIEW_GET_FIRST	Returns the first item of the treeview widget. Parameter hItem is not required and can be 0.
TREEVIEW_GET_LAST	Returns the last item of the treeview widget. Parameter hItem is not required and can be 0.
TREEVIEW_GET_NEXT_SIBLING	Returns the next child item of the parent node of hItem.
TREEVIEW_GET_PREV_SIBLING	Returns the previous child item of the parent node of hItem.
TREEVIEW_GET_FIRST_CHILD	Returns the first child of the given node.
TREEVIEW_GET_PARENT	Returns the parent node of the given item.


Return value

Handle of the requested treeview item on success, otherwise 0.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Example

The picture shows a treeview widget with several items. The following shows how parameter `Flags` can be used for getting treeview items relative to parameter `hItem`:

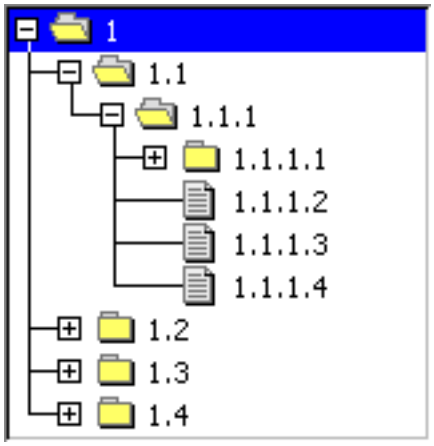

- `TREEVIEW_GET_NEXT_SIBLING`
  The next sibling of '1.1' is '1.2'.
- `TREEVIEW_GET_PREV_SIBLING`
  The previous sibling of '1.2' is '1.1'.
- `TREEVIEW_GET_FIRST_CHILD`
  The first child item of '1.1.1' is '1.1.1.1'.
- `TREEVIEW_GET_PARENT`
  The parent item of '1.1' is '1'.

The use of `TREEVIEW_GET_FIRST` and `TREEVIEW_GET_LAST` should be obvious. If the requested item does not exist, the function returns 0.

TREEVIEW_GetSel()

Description

Returns the handle of the currently selected treeview item.

Prototype

```
TREEVIEW_ITEM_Handle TREEVIEW_GetSel(TREEVIEW_Handle hObj);
```

Parameter	Description
hObj	Handle of widget.

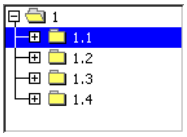
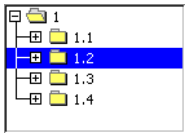
Return value

Handle of the currently selected treeview item. If no item has been selected the return value is 0.

TREEVIEW_GetUserData()

Prototype explained at the beginning of the chapter as `<WIDGET>_GetUserData()`.

TREEVIEW_IncSel()

Before	After
	

Description

Moves the cursor to the next visible item of the given treeview.

Prototype

```
void TREEVIEW_IncSel(TREEVIEW_Handle hObj);
```



Parameter	Description
hObj	Handle of widget.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

If there is no next visible item the cursor remains on the current position.

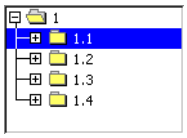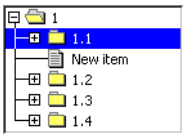TREEVIEW_InsertItem()

Before	After
	

Description

The function creates and inserts one new treeview item relative to the given item.

Prototype

```
TREEVIEW_ITEM_Handle TREEVIEW_InsertItem(TREEVIEW_Handle        hObj,
                                         int                    IsNode,
                                         TREEVIEW_ITEM_Handle   hItemPrev,
                                         int                    Position,
                                         const char GUI_UNI_PTR * s);
```

Parameter	Description
hObj	Handle of widget.
IsNode	(see table below)
hItemPrev	Handle of treeview item specifying the position of the new item.
Position	(see table below)
s	Text of new treeview item.

Permitted values for parameter IsNode	
TREEVIEW_ITEM_TYPE_LEAF	New item is a 'leaf'.
TREEVIEW_ITEM_TYPE_NODE	New item is a 'node'.



Permitted values for parameter Position	
TREEVIEW_INSERT_FIRST_CHILD	Should be used for the first item of a treeview node.
TREEVIEW_INSERT_ABOVE	Inserts the item above the given item with the same indent level.
TREEVIEW_INSERT_BELOW	Inserts the item below the given item with the same indent level.

Return value

Handle of the new item on success, otherwise 0.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

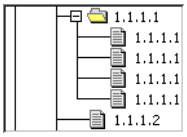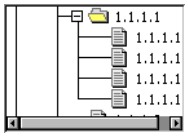TREEVIEW_SetAutoScrollH()

Before	After
	

Description



Enables or disables the use of an automatic horizontal scrollbar.

Prototype

```
void TREEVIEW_SetAutoScrollH(TREEVIEW_Handle hObj, int State);
```

Parameter	Description
hObj	Handle of widget.
State	1 for enabling an automatic horizontal scrollbar, 0 for disabling.

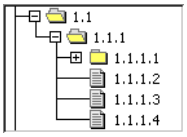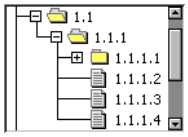TREEVIEW_SetAutoScrollV()

Before	After
	

Description



Enables or disables the use of an automatic vertical scrollbar.

Prototype

```
void TREEVIEW_SetAutoScrollV(TREEVIEW_Handle hObj, int State);
```

Parameter	Description
hObj	Handle of widget.
State	1 for enabling an automatic vertical scrollbar, 0 for disabling.

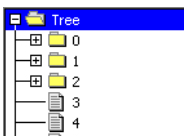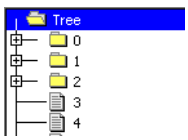TREEVIEW_SetBitmapOffset()

Before	After
	

Description

Sets the offset of the plus/minus bitmap.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype



```
void TREEVIEW_SetBitmapOffset(TREEVIEW_Handle hObj, int Index,
                              int             xOff, int yOff);
```

Parameter	Description
hObj	Handle of widget.
Index	Currently the only permitted value for this parameter is TREEVIEW_BI_PM.
xOff	Horizontal offset.
yOff	Vertical offset.

Additional information

If xOff and yOff are set to 0 (default), the plus/minus bitmap is centered horizontally and vertically in the indentation space left of the actual item. The indentation space is related to the parent item (if exists) or to the left border of the widget. See "before / after" screenshots of the function “TREEVIEW_SetIndent()” on page 654.

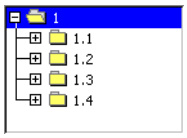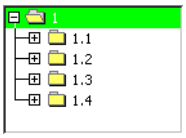TREEVIEW_SetBkColor()

Before	After
	

Description

Sets the background color of the given widget.

Prototype

```
void TREEVIEW_SetBkColor(TREEVIEW_Handle hObj, int Index, GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of widget.
Index	(see table below)
Color	Color to be used.

Permitted values for parameter Index	
TREEVIEW_CI_UNSEL	Color of unselected item.
TREEVIEW_CI_SEL	Color of selected item.
TREEVIEW_CI_DISABLED	Color of disabled item.

TREEVIEW_SetDefaultBkColor()

Description

Sets the default background color used for new treeview widgets.

Prototype

```
void TREEVIEW_SetDefaultBkColor(int Index, GUI_COLOR Color);
```

Parameter	Description
Index	Refer to “TREEVIEW_SetBkColor()” on page 651.
Color	Color to be used.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

TREEVIEW_SetDefaultFont()

Description

Sets the default font used for new treeview widgets.

Prototype

```
void TREEVIEW_SetDefaultFont(const GUI_FONT GUI_UNI_PTR * pFont);
```

Parameter	Description
pFont	Pointer to GUI_FONT structure to be used.

TREEVIEW_SetDefaultLineColor()

Description

Sets the default line color used for new treeview widgets.

Prototype

```
void TREEVIEW_SetDefaultLineColor(int Index, GUI_COLOR Color);
```

Parameter	Description
Index	Refer to "TREEVIEW_SetBkColor()" on page 651.
Color	Color to be used.

TREEVIEW_SetDefaultTextColor()

Description



Sets the default text color used for new treeview widgets.

Prototype

```
void TREEVIEW_SetDefaultTextColor(int Index, GUI_COLOR Color);
```

Parameter	Description
Index	Refer to "TREEVIEW_SetBkColor()" on page 651.
Color	Color to be used.

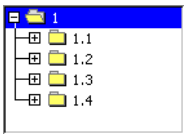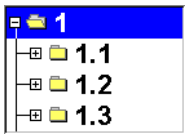TREEVIEW_SetFont()

Before	After
	

Description

Sets the font to be used to draw the item text of the given treeview widget.



Prototype

```
void TREEVIEW_SetFont(TREEVIEW_Handle               hObj,
                      const GUI_FONT GUI_UNI_PTR * pFont);
```

Parameter	Description
hObj	Handle of widget.
pFont	Pointer to GUI_FONT structure to be used.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

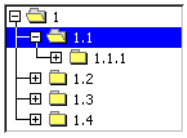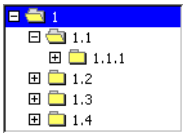TREEVIEW_SetHasLines()

Before	After
	

Description

Manages the visibility of the joining lines between the treeview items.

Prototype



```
void TREEVIEW_SetHasLines(TREEVIEW_Handle hObj, int State);
```

Parameter	Description
hObj	Handle of widget.
State	1 for showing the lines, 0 for not showing the lines.

Additional information

Per default the lines are shown.

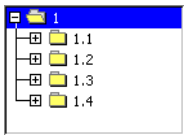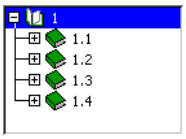TREEVIEW_SetImage()

Before	After
	

Description

Sets the images used to draw the treeview items.

Prototype

```
void TREEVIEW_SetImage(TREEVIEW_Handle    hObj,     int Index,
                       const GUI_BITMAP * pBitmap);
```

Parameter	Description
hObj	Handle of widget.
Index	(see table below)
pBitmap	Pointer to bitmap structure to be used.



Permitted values for parameter Index	
TREEVIEW_BI_CLOSED	Image of closed nodes.
TREEVIEW_BI_OPEN	Image of open nodes.
TREEVIEW_BI_LEAF	Image of leaf.
TREEVIEW_BI_PLUS	Plus sign of closed nodes.
TREEVIEW_BI_MINUS	Minus sign of open nodes.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

The function `TREEVIEW_SetItemImage()` can be used to set individual images for each item.

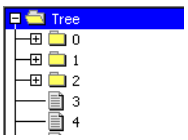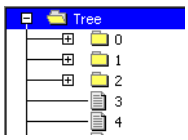TREEVIEW_SetIndent()

Before	After
	

Description

Sets the indentation of treeview items in pixels. Indentation is 16 pixels by default.

Prototype



```
int TREEVIEW_SetIndent(TREEVIEW_Handle hObj, int Indent);
```

Parameter	Description
hObj	Handle of widget.
Indent	Distance (in pixels) to indent treeview items.

Return value

Previous indentation.

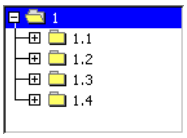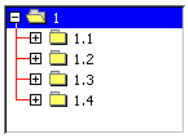TREEVIEW_SetLineColor()

Before	After
	

Description

Sets the color used to draw the joining lines between the treeview items.

Prototype

```
void TREEVIEW_SetLineColor(TREEVIEW_Handle hObj, int Index,
                           GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of widget.
Index	Refer to "TREEVIEW_SetBkColor()" on page 651.
Color	Color to be used.

TREEVIEW_SetOwnerDraw()

Description

Enables the treeview to be owner drawn.



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void TREEVIEW_SetOwnerDraw(TREEVIEW_Handle          hObj,
                           WIDGET_DRAW_ITEM_FUNC * pfDrawItem);
```

Parameter	Description
hObj	Handle of widget.
pfDrawItem	Pointer to the owner draw function. See "User drawn widgets" on page 354.

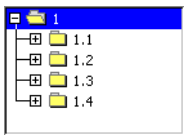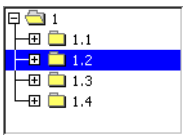TREEVIEW_SetSel()

Before	After
	

Description

Sets the currently selected item of the treeview.

Prototype



```
void TREEVIEW_SetSel(TREEVIEW_Handle hObj, TREEVIEW_ITEM_Handle hItem);
```

Parameter	Description
hObj	Handle of widget.
hItem	Handle of treeview item to be selected.

Additional information

If the given treeview item is a child of a closed node no selection is visible after calling this function.

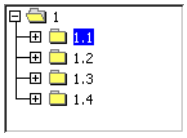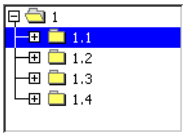TREEVIEW_SetSelMode()

Before	After
	

Description

Sets the selection mode of the treeview widget.

Prototype

```
void TREEVIEW_SetSelMode(TREEVIEW_Handle hObj, int Mode);
```

Parameter	Description
hObj	Handle of widget.
Mode	(see table below)



© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for parameter Mode	
TREEVIEW_SELMODE_ROW	Activates row selection mode.
TREEVIEW_SELMODE_TEXT	Activates text selection mode.

Additional information

Default selection mode is text selection. If row selection is activated, the complete row can be used to select the item. If text selection is active, only the item text and the item bitmap can be used for selection.

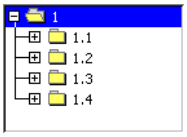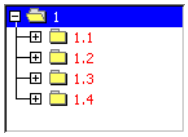TREEVIEW_SetTextColor()

Before	After
	

Description



Sets the color used to draw the treeview items of the given widget.

Prototype

```
void TREEVIEW_SetTextColor(TREEVIEW_Handle hObj, int Index,
                           GUI_COLOR       Color);
```

Parameter	Description
hObj	Handle of widget.
Index	Refer to "TREEVIEW_SetBkColor()" on page 651.
Color	Color to be used.

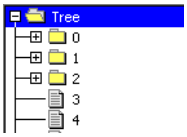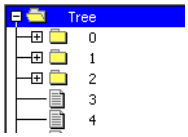TREEVIEW_SetTextIndent()

Before	After
	

Description

Sets the indentation of item text in pixels. Text indentation is 20 pixels by default.

Prototype

```
int TREEVIEW_SetTextIndent(TREEVIEW_Handle hObj, int TextIndent);
```

Parameter	Description
hObj	Handle of widget.
TextIndent	Text indentation to be used.

Return value

Previous text indentation.

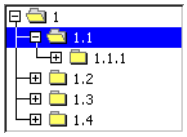
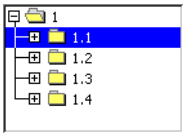
 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

TREEVIEW_SetUserData()

Prototype explained at the beginning of the chapter as `<WIDGET>_SetUserData()`.

17.24.5.2Item related routines

TREEVIEW_ITEM_Collapse()

Before	After
	

Description

Collapses the given node and shows the plus sign afterwards.

Prototype




```
void TREEVIEW_ITEM_Collapse(TREEVIEW_ITEM_Handle hItem);
```

Parameter	Description
hItem	Handle of the item to be collapsed.

Additional information

The given item needs to be a node. Otherwise the function returns immediately.

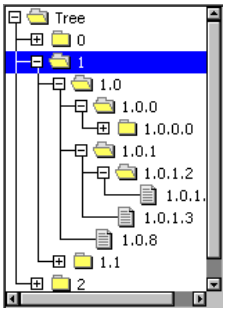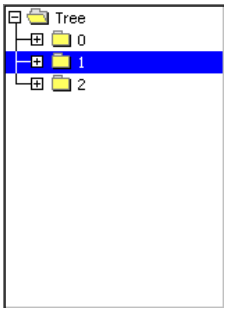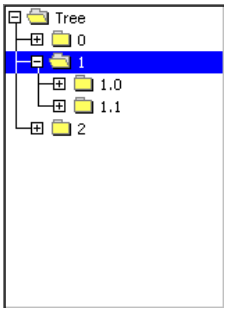TREEVIEW_ITEM_CollapseAll()

Before	All nodes collapsed	Expanded again
		

Description

Collapses the given node and all subnodes and shows the plus sign afterwards.

Prototype

```
void TREEVIEW_ITEM_CollapseAll(TREEVIEW_ITEM_Handle hItem);
```

Parameter	Description
hItem	Handle of the item to be collapsed.

Additional information

This function collapses all subnodes, so if the given node is expanded again, all subnodes are in collapsed state.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

TREEVIEW_ITEM_Create()

Description

Creates a new treeview item.

Prototype

```
TREEVIEW_ITEM_Handle TREEVIEW_CreateItem(int                    IsNode,
                                         const char GUI_UNI_PTR * s,
                                         U32                    UserData);
```

Parameter	Description
IsNode	(see table below)
s	Pointer to item text to be shown.
UserData	32 bit value to be used by the application.

Permitted values for parameter IsNode	
TREEVIEW_ITEM_TYPE_NODE	Used to create a node.
TREEVIEW_ITEM_TYPE_LEAF	Used to create a leaf.

Return value

Handle of new item on success, otherwise 0.

Additional information

After creating a treeview item it contains a copy of the text.

TREEVIEW_ITEM_Delete()

Description

Deletes the given treeview item.

Prototype

```
void TREEVIEW_ITEM_Delete(TREEVIEW_ITEM_Handle hItem);
```

Parameter	Description
hItem	Handle of item to be deleted.

Additional information

If the item is currently not attached to any treeview, the parameter `hObj` should be 0. The function can be used to delete a single item as well as for deleting a complete tree. In case of deleting a tree the root element of the tree should be passed to the function.

TREEVIEW_ITEM_Detach()

Description

Detaches the given treeview item from the treeview widget.

Prototype

```
void TREEVIEW_ITEM_Detach(TREEVIEW_ITEM_Handle hItem);
```



Parameter	Description
hItem	Handle of item to be detached.

Additional information

The function detaches the given item and all of its children from the treeview.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

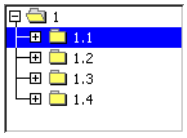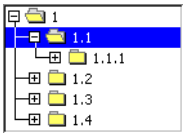TREEVIEW_ITEM_Expand()

Before	After
	

Description

Expands the given node and shows the minus sign afterwards.

Prototype



```
void TREEVIEW_ITEM_Expand(TREEVIEW_ITEM_Handle hItem);
```

Parameter	Description
hItem	Handle of node to be expanded.

Additional information

The given item needs to be a node. Otherwise the function returns immediately.

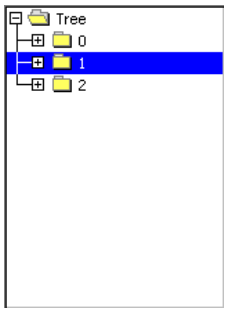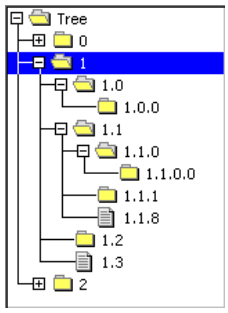TREEVIEW_ITEM_ExpandAll()

Before	After
	

Description

Expands the given node and all subnodes and shows the minus sign afterwards.

Prototype

```
void TREEVIEW_ITEM_ExpandAll(TREEVIEW_ITEM_Handle hItem);
```

Parameter	Description
hItem	Handle of the item to be expanded.

TREEVIEW_ITEM_GetInfo()

Description

Returns a structure with information about the given item.

Prototype

```
void TREEVIEW_ITEM_GetInfo(TREEVIEW_ITEM_Handle   hItem,
```


© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                                TREEVIEW_ITEM_INFO    * pInfo);
```

Parameter	Description
hItem	Handle of treeview item.
pInfo	Pointer to a TREEVIEW_ITEM_INFO structure to be filled by the function.

Elements of TREEVIEW_ITEM_INFO

Data type	Element	Description
int	IsNode	1 if item is a node, 0 if not.
int	IsExpanded	1 if item (node) is open, 0 if closed.
int	HasLines	1 if joining lines are visible, 0 if not.
int	HasRowSelect	1 if row selection is active, 0 if not.
int	Level	Indentation level of item.

TREEVIEW_ITEM_GetText()

Description

Returns the item text of the given treeview item.

Prototype

```
void TREEVIEW_ITEM_GetText(TREEVIEW_ITEM_Handle hItem,
                           U8 * pBuffer, int MaxNumBytes);
```

Parameter	Description
hItem	Handle of treeview item.
pBuffer	Pointer to buffer filled by the function.
MaxNumBytes	Size of the buffer in bytes.

Additional information

If MaxNumBytes is less than the item text length the buffer is filled with the first MaxNumBytes of the item text.

TREEVIEW_ITEM_GetUserData()

Description

The function return the 32 bit value associated with the given treeview item which can be used by the application program.



Prototype

```
U32 TREEVIEW_ITEM_GetUserData(TREEVIEW_ITEM_Handle hItem);
```

Parameter	Description
hItem	Handle of treeview item.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

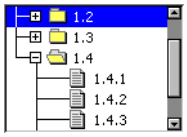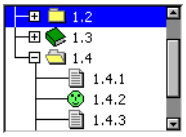TREEVIEW_ITEM_SetImage()

Before	After
	

Description

The function sets images to be used only with the given treeview item.

Prototype

```
void TREEVIEW_ITEM_SetImage(TREEVIEW_ITEM_Handle   hItem,    int Index,
                            const GUI_BITMAP     * pBitmap);
```



Parameter	Description
hItem	Handle if treeview item.
Index	(see table below)
pBitmap	Pointer to bitmap structure to be used.

Permitted values for parameter Index	
TREEVIEW_BI_CLOSED	Image of closed node.
TREEVIEW_BI_OPEN	Image of open node.
TREEVIEW_BI_LEAF	Image of leaf.

Additional information

This function 'overwrites' the default images of the widget. If no individual image is set the default image is used.

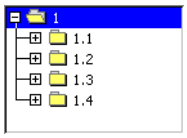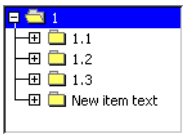TREEVIEW_ITEM_SetText()

Before	After
	

Description

The function sets the text of the given item.

Prototype

```
TREEVIEW_ITEM_Handle TREEVIEW_ITEM_SetText(TREEVIEW_ITEM_Handle     hItem,
                                           const char GUI_UNI_PTR * s);
```

Parameter	Description
hItem	Handle of treeview item.
s	Pointer to text to be used.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

Handle of the treeview item with the new text.

Additional information

The text will be copied into the treeview item. Note that using this function changes the handle of the item. After calling this function, the new handle needs to be used.

TREEVIEW_ITEM_SetUserData()

Description

The function sets a 32 bit value associated with the given treeview item which can be used by the application program.

Prototype

```
void TREEVIEW_ITEM_SetUserData(TREEVIEW_ITEM_Handle hItem, U32 UserData);
```


Parameter	Description
hItem	Handle of treeview item.
UserData	32 bit value to be used by the application program.

17.24.6 Example

The `Sample` folder contains the following example which shows how the widget can be used: `WIDGET_TreeviewTryit.c`

Note that several other examples also make use of this widget and may also be helpful to get familiar with the widget.

Screenshot of WIDGET_TreeviewTryit.c:

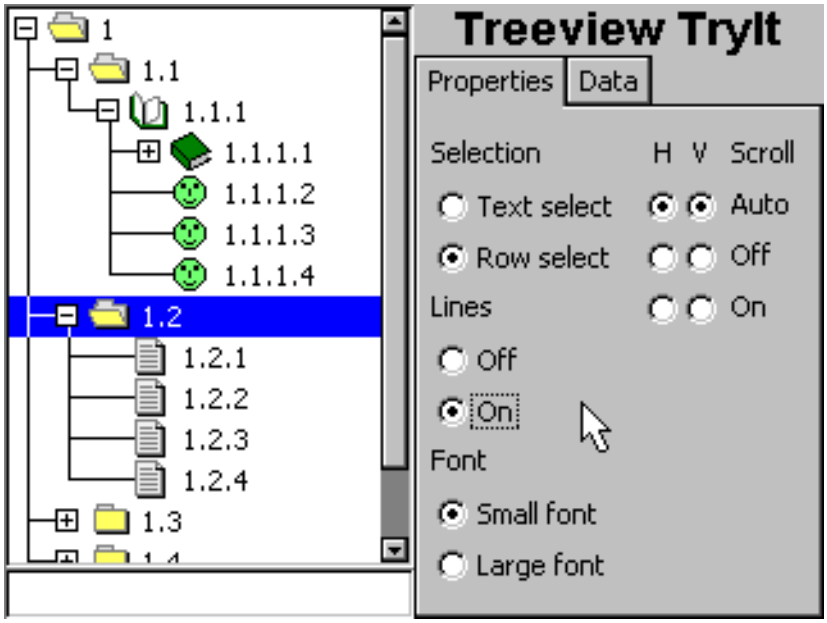

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

17.25 WINDOW: Window widget

The WINDOW widget is used to create a dialog window from a resource table. It should be used if the dialog should not look like a frame window. The window widget acts as background and as a container for child windows: It can contain child windows and fills the background, typically with gray.
It behaves much like a frame-window without frame and title bar and is used for dialogs.

17.25.1 Configuration options

Type	Macro	Default	Description
S	WINDOW_BKCOLOR_DEFAULT	0xC0C0C0	Default background color for new WINDOW widgets

17.25.2 Keyboard reaction

The widget can not gain the input focus and does not react on keyboard input.

17.25.3 WINDOW API

The table below lists the available emWin WINDOW-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
WINDOW_CreateEx()	Creates a WINDOW widget.
WINDOW_CreateIndirect()	Creates a WINDOW widget from a resource table entry.
WINDOW_CreateUser()	Creates a WINDOW widget using extra bytes as user data.
WINDOW_GetUserData()	Retrieves the data set with WINDOW_SetUserData().
WINDOW_SetBkColor()	Sets the background color of the given WINDOW widget.
WINDOW_SetDefaultBkColor()	Sets the default background color for WINDOW widgets.
WINDOW_SetUserData()	Sets the extra data of a WINDOW widget.

WINDOW_CreateEx()

Description

Creates a WINDOW widget of a specified size at a specified location.

Prototype

```
WINDOW_Handle WINDOW_CreateEx(int           x0,      int y0,
                              int           xsize,   int ysize,
                              WM_HWIN       hParent, int WinFlags,
                              int           ExFlags, int Id,
                              WM_CALLBACK * cb);
```

Parameter	Description
x0	Leftmost pixel of the WINDOW widget (in parent coordinates)
y0	Topmost pixel of the WINDOW widget (in parent coordinates)
xsize	Size of the WINDOW widget in X
ysize	Size of the WINDOW widget in Y
hParent	Handle of parent window
WinFlags	Window create flags. Typically WM_CF_SHOW in order to make the widget visible immediately (refer to WM_CreateWindow() in the chapter "The Window Manager (WM)" on page 289 for a list of available parameter values)

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Parameter	Description
ExFlags	Not used yet, reserved for future use
Id	Window ID of the WINDOW widget
cb	Pointer to callback routine.

Return value

Handle of the created WINDOW widget; 0 if the function fails.

WINDOW_CreateIndirect()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateIndirect(). The Sample folder contains the file WIDGET_Window.c which shows how to use the WINDOW widget in a dialog resource.

WINDOW_CreateUser()

Prototype explained at the beginning of the chapter as <WIDGET>_CreateUser(). For a detailed description of the parameters the function WINDOW_CreateEx() can be referred to.

WINDOW_GetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_GetUserData().

WINDOW_SetBkColor()

Description

Sets the background color for the given WINDOW widget.

Prototype

```
void WINDOW_SetBkColor(WM_HWIN hObj, GUI_COLOR Color);
```

Parameter	Description
hObj	Handle of the widget.
Color	Background color to be used.

WINDOW_SetDefaultBkColor()

Description

Sets the default background color used for WINDOW widgets.

Prototype

```
void WINDOW_SetDefaultBkColor(GUI_COLOR Color);
```

Parameter	Description
Color	Color to be used.

WINDOW_SetUserData()

Prototype explained at the beginning of the chapter as <WIDGET>_SetUserData().

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 18

Dialogs

Widgets may be created and used on their own, as they are by nature windows themselves. However, it is often desirable to use dialog boxes, which are windows that contain one or more widgets.
A dialog box (or dialog) is normally a window that appears in order to request input from the user. It may contain multiple widgets, requesting information from the user through various selections, or it may take the form of a message box which simply provides information (such as a note or warning to the user) and an "OK" button.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

18.1 Dialog basics

Input focus

The window manager remembers the window or window object that was last selected by the user with the touch-screen, mouse, keyboard, or other means. This window receives keyboard input messages and is said to have the input focus.
The primary reason for keeping track of input focus is to determine where to send keyboard commands. The window which has input focus will receive events generated by the keyboard.
To move the input focus within a dialog to the next focusable dialog item the key GUI_KEY_TAB can be used. To move backwards GUI_KEY_BACKTAB can be used.

Blocking vs. non-blocking dialogs

Dialog windows can be blocking or non-blocking.
A blocking dialog blocks the thread of execution. It has input focus by default and must be closed by the user before the thread can continue. A blocking dialog does not disable other dialogs shown at the same time. With other words a blocking dialog is not a modal dialog. Blocking means, the used functions (GUI_ExecDialogBox() or GUI_ExecCreatedDialog()) does not return until the dialog is closed.
A non-blocking dialog, on the other hand, does not block the calling thread -- it allows the task to continue while it is visible. The function returns immediately after creating the dialog.
Please note that blocking functions should never be called from within callback functions. This may cause malfunction of the application.

Dialog procedure

A dialog box is a window, and it receives messages just like all other windows in the system do. Most messages are handled by the window callback routine of the dialog box automatically; the others are passed to the callback routine specified upon creation of the dialog box, which is known as the dialog procedure.

Dialog messages

There are two types of additional messages which are sent to the dialog procedure: WM_INIT_DIALOG and WM_NOTIFY_PARENT. The WM_INIT_DIALOG message is sent to the dialog procedure immediately before a dialog box is displayed. Dialog procedures typically use this message to initialize widgets and carry out any other initialization tasks that affect the appearance of the dialog box. The WM_NOTIFY_PARENT message is sent to the dialog box by its child windows in order to notify the parent of any events in order to ensure synchronization. The events sent by a child depend on its type and are documented separately for every type of widget.

18.2 Creating a dialog

Two basic things are required to create a dialog box: a resource table that defines the widgets to be included, and a dialog procedure which defines the initial values for the widgets as well as their behavior. Once both items exist, you need only a single function call (GUI_CreateDialogBox() or GUI_ExecDialogBox()) to actually create the dialog.

18.2.1 Resource table

Dialog boxes may be created in a blocking manner (using GUI_ExecDialogBox()) or as non-blocking (using GUI_CreateDialogBox()). A resource table must first be defined which specifies all widgets to be included in the dialog. The example shown below creates a resource table:

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
static const GUI_WIDGET_CREATE_INFO _aDialogCreate[] = {
  { FRAMEWIN_CreateIndirect, "Dialog", 0,          10,  10, 180, 230, FRAMEWIN_CF_MOVEABLE, 0 },
  { BUTTON_CreateIndirect,   "OK",     GUI_ID_OK,     100,  5,   60,  20 },
  { BUTTON_CreateIndirect,   "Cancel", GUI_ID_CANCEL, 100,  30,  60,  20 },
  { TEXT_CreateIndirect,     "LText",  0,               10,  55,  48,  15, TEXT_CF_LEFT },
  { TEXT_CreateIndirect,     "RText",  0,               10,  80,  48,  15, TEXT_CF_RIGHT },
  { EDIT_CreateIndirect,     NULL,     GUI_ID_EDIT0,    60,  55, 100,  15, 0, 50 },
  { EDIT_CreateIndirect,     NULL,     GUI_ID_EDIT1,    60,  80, 100,  15, 0, 50 },
  { TEXT_CreateIndirect,     "Hex",    0,               10, 100,  48,  15, TEXT_CF_RIGHT },
  { EDIT_CreateIndirect,     NULL,     GUI_ID_EDIT2,    60, 100, 100,  15, 0, 6 },
  { TEXT_CreateIndirect,     "Bin",    0,               10, 120,  48,  15, TEXT_CF_RIGHT },
  { EDIT_CreateIndirect,     NULL,     GUI_ID_EDIT3,    60, 120, 100,  15 },
  { LISTBOX_CreateIndirect,  NULL,     GUI_ID_LISTBOX0,10,  10,  48,  40 },
  { CHECKBOX_CreateIndirect, NULL,     GUI_ID_CHECK0,   10, 140,   0,   0 },
  { CHECKBOX_CreateIndirect, NULL,     GUI_ID_CHECK1,   30, 140,   0,   0 },
  { SLIDER_CreateIndirect,   NULL,     GUI_ID_SLIDER0, 60, 140, 100,  20 },
  { SLIDER_CreateIndirect,   NULL,     GUI_ID_SLIDER1, 10, 170, 150,  30 }
};
```

Any widget to be included in a dialog box must be created indirectly with the `<WIDGET>_CreateIndirect()` function. For more information, refer to the chapter "Window Objects (Widgets)" on page 345.

18.2.2 Dialog procedure

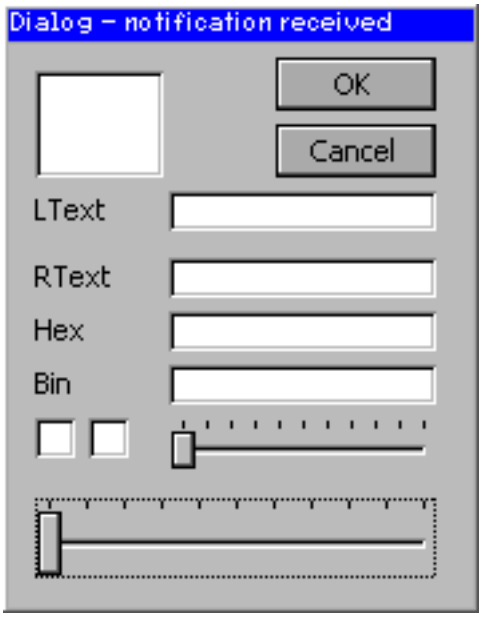
The example above has been created using the blank dialog procedure shown below. This is the basic template which should be used as a starting point when creating any dialog procedure:

```
/*********************************************************************
*
*       Dialog procedure
*/
static void _cbCallback(WM_MESSAGE * pMsg) {
  switch (pMsg->MsgId) {
    default:
      WM_DefaultProc(pMsg);
  }
}
```

For this example, the dialog box is displayed with the following line of code:

```
GUI_ExecDialogBox(_aDialogCreate, GUI_COUNTOF(_aDialogCreate),
                  &_cbCallback, 0, 0, 0);
```

The resulting dialog box looks as follows, or similar (the actual appearance will depend on your configuration and default settings):



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

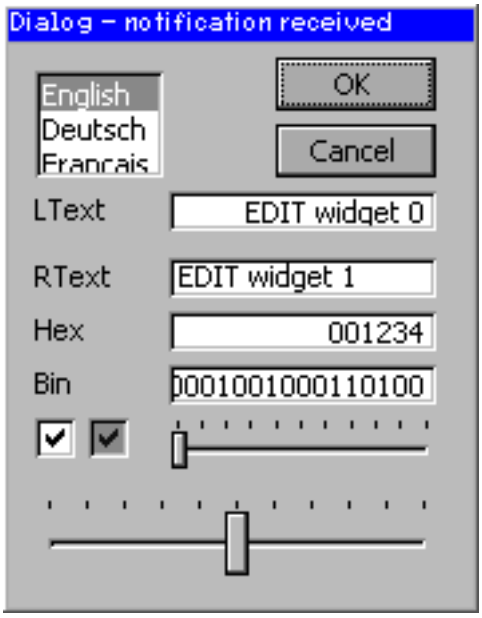
After creation of the dialog box, all widgets included in the resource table will be visible, although as can be seen in the previous screen shot, they will appear "empty". This is because the dialog procedure does not yet contain code that initializes the individual elements. The initial values of the widgets, the actions caused by them, and the interactions between them need to be defined in the dialog procedure.

18.2.2.1 Initializing the dialog

The typical next step is to initialize the widgets with their respective initial values. This is normally done in the dialog procedure as a reaction to the WM_INIT_DIALOG message. The program excerpt below illustrates things:

```
/*********************************************************************
*
*       Dialog procedure
*/
static void _cbCallback(WM_MESSAGE * pMsg) {
  int NCode, Id;
  WM_HWIN hEdit0, hEdit1, hEdit2, hEdit3, hListBox;
  WM_HWIN hWin = pMsg->hWin;
  switch (pMsg->MsgId) {
    case WM_INIT_DIALOG:
      /* Get window handles for all widgets */
      hEdit0   = WM_GetDialogItem(hWin, GUI_ID_EDIT0);
      hEdit1   = WM_GetDialogItem(hWin, GUI_ID_EDIT1);
      hEdit2   = WM_GetDialogItem(hWin, GUI_ID_EDIT2);
      hEdit3   = WM_GetDialogItem(hWin, GUI_ID_EDIT3);
      hListBox = WM_GetDialogItem(hWin, GUI_ID_LISTBOX0);
      /* Initialize all widgets */
      EDIT_SetText(hEdit0, "EDIT widget 0");
      EDIT_SetText(hEdit1, "EDIT widget 1");
      EDIT_SetTextAlign(hEdit1, GUI_TA_LEFT);
      EDIT_SetHexMode(hEdit2, 0x1234, 0, 0xffff);
      EDIT_SetBinMode(hEdit3, 0x1234, 0, 0xffff);
      LISTBOX_SetText(hListBox, _apListBox);
      WM_DisableWindow (WM_GetDialogItem(hWin, GUI_ID_CHECK1));
      CHECKBOX_Check(  WM_GetDialogItem(hWin, GUI_ID_CHECK0));
      CHECKBOX_Check(  WM_GetDialogItem(hWin, GUI_ID_CHECK1));
      SLIDER_SetWidth( WM_GetDialogItem(hWin, GUI_ID_SLIDER0), 5);
      SLIDER_SetValue( WM_GetDialogItem(hWin, GUI_ID_SLIDER1), 50);
      break;
    default:
      WM_DefaultProc(pMsg);
  )
}
```

The initialized dialog box now appears as follows, with all widgets containing their initial values:



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

18.2.2.2 Defining dialog behavior

Once the dialog has been initialized, all that remains is to add code to the dialog procedure which will define the behavior of the widgets, making them fully operable. Continuing with the same example, the final dialog procedure is shown below:

```
/*********************************************************************
*
*       Dialog procedure
*/
static void _cbCallback(WM_MESSAGE * pMsg) {
  int NCode, Id;
  WM_HWIN hEdit0, hEdit1, hEdit2, hEdit3, hListBox;
  WM_HWIN hWin = pMsg->hWin;
  switch (pMsg->MsgId) {
    case WM_INIT_DIALOG:
      /* Get window handles for all widgets */
      hEdit0   = WM_GetDialogItem(hWin, GUI_ID_EDIT0);
      hEdit1   = WM_GetDialogItem(hWin, GUI_ID_EDIT1);
      hEdit2   = WM_GetDialogItem(hWin, GUI_ID_EDIT2);
      hEdit3   = WM_GetDialogItem(hWin, GUI_ID_EDIT3);
      hListBox = WM_GetDialogItem(hWin, GUI_ID_LISTBOX0);
      /* Initialize all widgets */
      EDIT_SetText(hEdit0, "EDIT widget 0");
      EDIT_SetText(hEdit1, "EDIT widget 1");
      EDIT_SetTextAlign(hEdit1, GUI_TA_LEFT);
      EDIT_SetHexMode(hEdit2, 0x1234, 0, 0xffff);
      EDIT_SetBinMode(hEdit3, 0x1234, 0, 0xffff);
      LISTBOX_SetText(hListBox, _apListBox);
      WM_DisableWindow (WM_GetDialogItem(hWin, GUI_ID_CHECK1));
      CHECKBOX_Check(  WM_GetDialogItem(hWin, GUI_ID_CHECK0));
      CHECKBOX_Check(  WM_GetDialogItem(hWin, GUI_ID_CHECK1));
      SLIDER_SetWidth( WM_GetDialogItem(hWin, GUI_ID_SLIDER0), 5);
      SLIDER_SetValue( WM_GetDialogItem(hWin, GUI_ID_SLIDER1), 50);
      break;
    case WM_KEY:
      switch (((WM_KEY_INFO*)(pMsg->Data.p))->Key) {
      case GUI_ID_ESCAPE:
        GUI_EndDialog(hWin, 1);
        break;
      case GUI_ID_ENTER:
        GUI_EndDialog(hWin, 0);
        break;
      }
      break;
    case WM_NOTIFY_PARENT:
      Id    = WM_GetId(pMsg->hWinSrc);    /* Id of widget */
      NCode = pMsg->Data.v;               /* Notification code */
      switch (NCode) {
        case WM_NOTIFICATION_RELEASED:    /* React only if released */
          if (Id == GUI_ID_OK) {          /* OK Button */
            GUI_EndDialog(hWin, 0);
          }
          if (Id == GUI_ID_CANCEL) {      /* Cancel Button */
            GUI_EndDialog(hWin, 1);
          }
          break;
        case WM_NOTIFICATION_SEL_CHANGED: /* Selection changed */
          FRAMEWIN_SetText(hWin, "Dialog - sel changed");
          break;
        default:
          FRAMEWIN_SetText(hWin, "Dialog - notification received");
      }
      break;
    default:
      WM_DefaultProc(pMsg);
  }
}
```

For further details, this entire example is available as `Dialog.c` in the examples shipped with emWin.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

18.3 Dialog API

The table below lists the available dialog-related routines in alphabetical order within their respective categories. Detailed descriptions of the routines can be found in the sections that follow:

Routine	Description
GUI_CreateDialogBox()	Create a non-blocking dialog.
GUI_ExecCreatedDialog()	Executes an already created dialog.
GUI_ExecDialogBox()	Create and execute a dialog.
GUI_EndDialog()	End a dialog box.

18.4 Dialog boxes

GUI_CreateDialogBox()

Description

Creates a non-blocking dialog box.

Prototype

```
WM_HWIN GUI_CreateDialogBox(const GUI_WIDGET_CREATE_INFO * paWidget,
                            int                            NumWidgets,
                            WM_CALLBACK                  * cb,
                            WM_HWIN                        hParent,
                            int                            x0,
                            int                            y0);
```

Parameter	Description
paWidget	Pointer to resource table defining the widgets to be included in the dialog.
NumWidgets	Total number of widgets included in the dialog.
cb	Pointer to an application-specific callback function (dialog procedure).
hParent	Handle of parent window (0 = no parent window).
x0	X-position of the dialog relative to parent window.
y0	Y-position of the dialog relative to parent window.

GUI_ExecCreatedDialog()

Description

Executes an already created dialog box.

Prototype

```
int GUI_ExecCreatedDialog(WM_HWIN hDialog);
```

Parameter	Description
hDialog	Handle to dialog box.

Return value

Value returned from GUI_EndDialog.

GUI_ExecDialogBox()

Description

Creates and executes a dialog box.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
int GUI_ExecDialogBox(const GUI_WIDGET_CREATE_INFO * paWidget,
                      int                            NumWidgets,
                      WM_CALLBACK                  * cb,
                      WM_HWIN                        hParent,
                      int                            x0,
                      int                            y0);
```

Parameter	Description
paWidget	Pointer to a resource table defining the widgets to be included in the dialog.
NumWidgets	Total number of widgets included in the dialog.
cb	Pointer to an application-specific callback function (dialog procedure).
hParent	Handle of parent window (0 = no parent window).
x0	X-position of the dialog relative to parent window.
y0	Y-position of the dialog relative to parent window.

Return value

Value returned from GUI_EndDialog.

GUI_EndDialog()

Description

Ends (closes) a dialog box.

Prototype

```
void GUI_EndDialog(WM_HWIN hDialog, int r);
```

Parameter	Description
hDialog	Handle to dialog box.
r	Value to be returned by GUI_ExecDialogBox.

Return value

Specifies the value to be returned to the calling thread from the function that created the dialog box (typically only relevant with `GUI_ExecDialogBox()`).
With non-blocking dialogs, there is no application thread waiting and the return value is ignored.

Additional information

Note that the handle `hDialog` is not longer valid after the function has been called. As mentioned above, the function ends the dialog which means that it will be deleted from memory. This also applies to all child windows of the given window.


 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 19

GUIBuilder

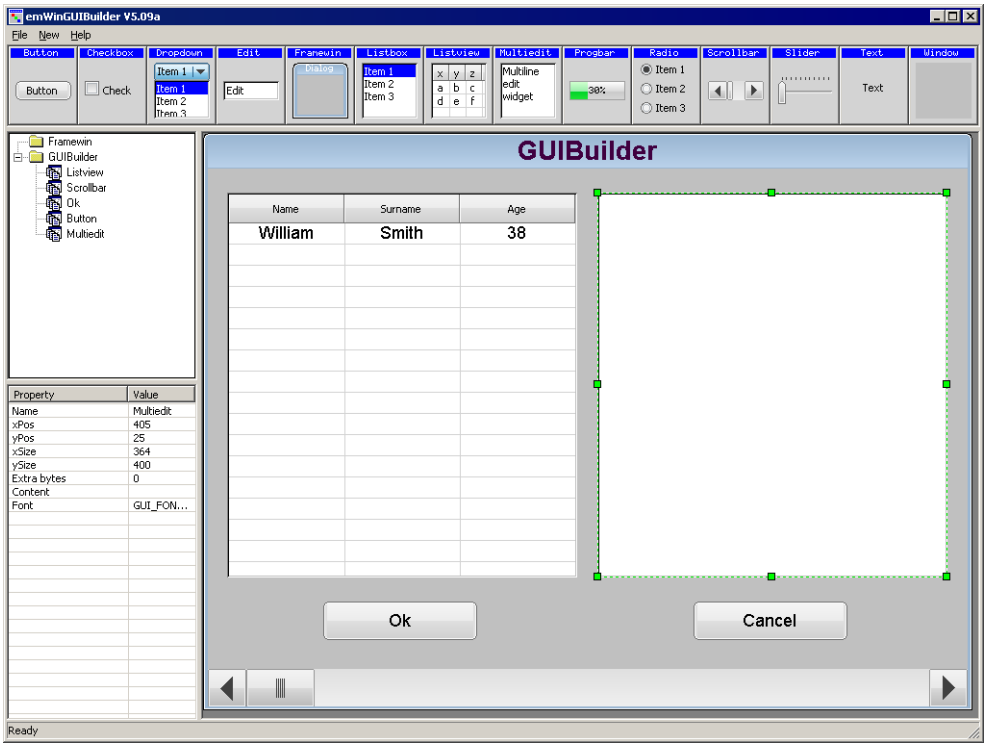
The GUIBuilder application is a tool for creating dialogs without any knowledge of the C programming language. Instead of writing source code the widgets can be placed and sized by drag and drop. Additional properties can be added per context menu. Fine tuning can be done by editing the properties of the widgets. This does not require any knowledge of the C programming language. The dialogs can be saved as C files which can be enhanced by adding user defined code. Of course these C files with the embedded user code can be loaded and modified by the GUIBuilder.



© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

19.1 Introduction

The following diagram shows the elements of the graphical user interface of the GUI-Builder:

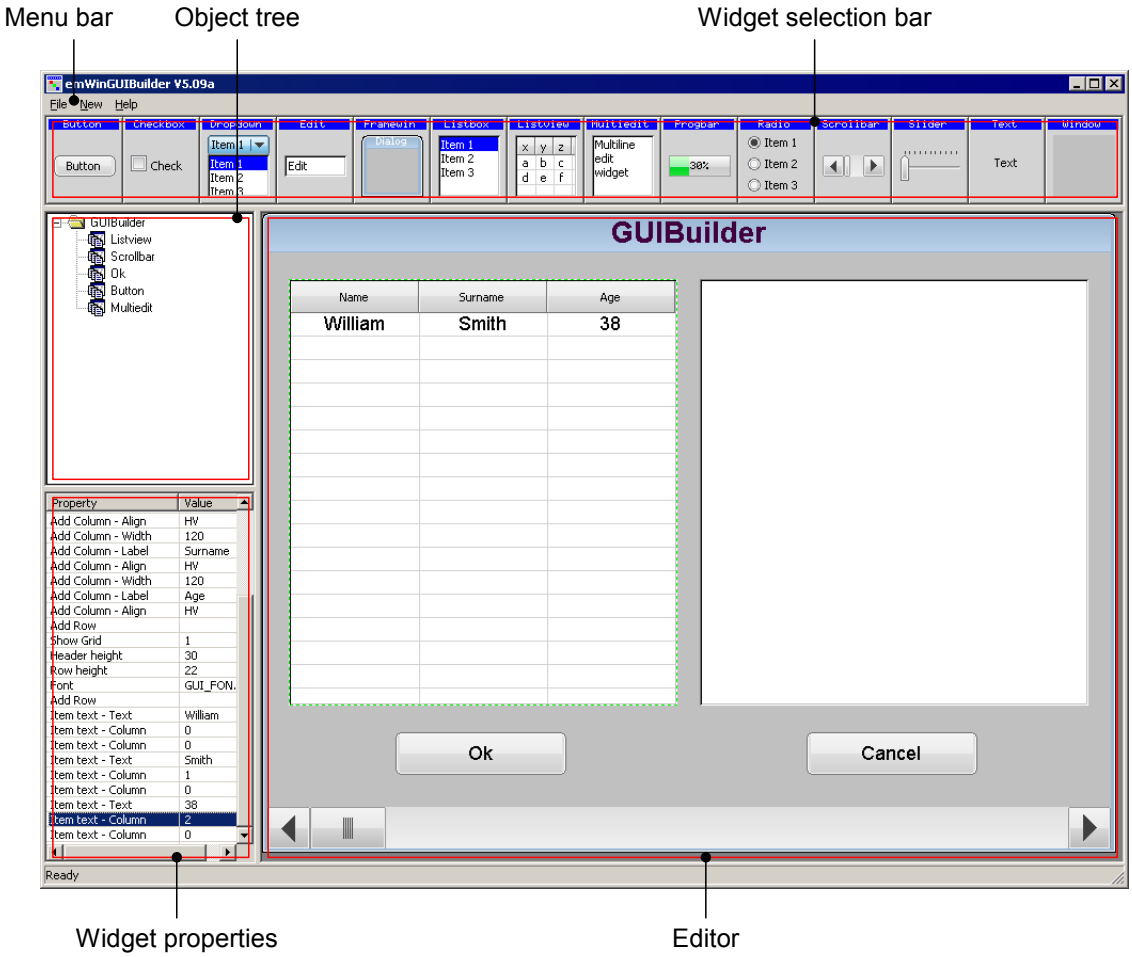

Widget selection bar

This bar contains all available widgets of the GUIBuilder. They can be added by a single click into the selection bar on the desired widget or by dragging them into the editor area.

Object tree

This area shows all currently loaded dialogs and their child widgets. It can be used for selecting a widget by clicking on the according entry.

Widget properties

It shows the properties of each widget and can be used for editing them.

Editor

The editor window shows the currently selected dialog. It can be used to place and resize the dialog and its widgets.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

19.2 Getting started

Before starting a project, the GUIBuilder needs to know the project path. Per default this is the application path of the GUIBuilder. All files are saved in this folder.

Setting up the project path

After the first execution, the GUIBuilder directory contains the configuration file `GUIBuilder.ini`. Within this file the project path can be changed by editing the value `ProjectPath`:

```
[Settings]
ProjectPath="C:\Work\MyProject\"
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

19.3 Creating a dialog

The following shows how to create a dialog and how to modify the properties of the used widgets.


19.3.1 Selecting a parent widget

Each dialog requires a valid parent widget. So it is required to start with a widget which is able to serve as a parent. Currently there are 2 widgets which can be used at this point:

Frame window widget	Window widget
	


The table above shows the according buttons of the widget selection bar. To get a widget into the editor the buttons can be single clicked, dragged with the mouse into the editor window or created by using the 'New' menu.

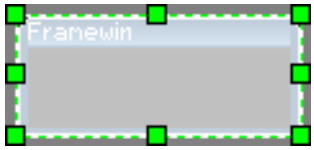19.3.2 Resizing and positioning in the editor



After placing a widget into the editor area it can be moved by using the mouse or the arrow keys of the keyboard. Resizing can be done by dragging the markers.

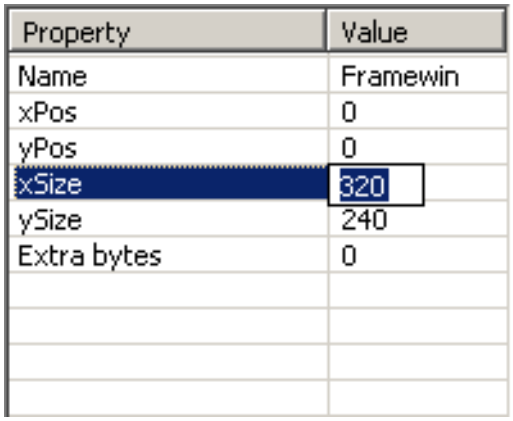19.3.3 Modifying the widget properties



Property	Value
Name	Framewin
xPos	0
yPos	0
xSize	320
ySize	240
Extra bytes	0

The lower left area of the GUIBuilder contains the property window. After creating a new widget it shows the default properties of the widget: Name, position, size and extra bytes. These properties are available for all kinds of widgets and can not be removed. Contrary to the default properties all additional properties can be removed by the context menu or by pressing <DEL> when the according line is selected. To change a value it can be selected by the keyboard by pressing <ENTER> (if the desired line is selected and the window has the focus) or by single clicking into the value field. Further the 'Edit' entry of the context menu available with a right click can be used to start the edit operation. <ESC> can be used to abort the edit operation.

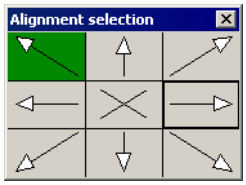
19.3.4 Adding additional functions to a widget

To get a context menu with the available functions for a widget either a right click in the editor window on the desired widget or a right click in the object tree can be done. Selecting a function adds a new property to the widget and starts the edit operation for the chosen function. In case of numerical or alpha numerical values the edit operation is done within the property window.
In case of choosing fonts, text alignments or colors a separate selection window occurs.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG


Alignment selection

The alignment selection dialog shows the previous selected alignment in green. A single click within the box selects a new alignment. <ESC> aborts the selection.




Color selection

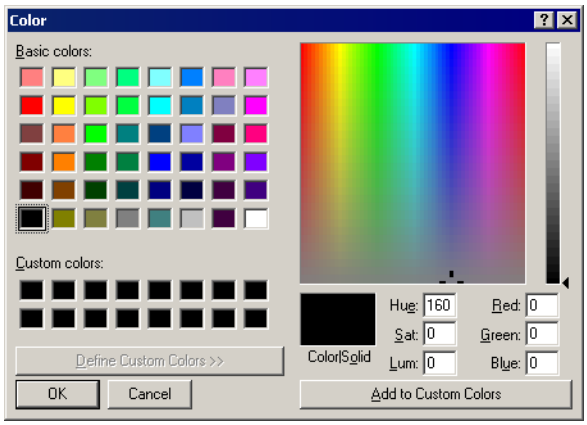For selecting a color the Windows default color selection dialog occurs. <ESC> aborts the selection.



Font selection

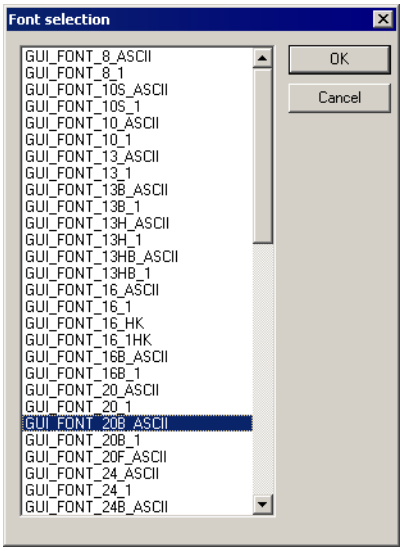The font selection dialog shows all available fonts of the GUIBuilder. The desired font can be selected by a single click on the desired font. <ESC> aborts the selection.



19.3.5 Deleting a widget property

This can be done easily by using the context menu of the property window or by pressing the <DEL> key if the desired property in the widget property window has the focus.

19.3.6 Deleting a widget

A widget can be deleted by pressing the <DEL> key if the widget is activated in the editor window. It can also be removed by selecting it in the object tree window and then pressing the <DEL> key.
Please note that deleting a parent widget also deletes all its child windows.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

19.4 Saving the current dialog(s)

With the menu entry 'File/Save...' all currently loaded dialogs will be saved in the project folder. For details about how to set up the project folder please refer to "Getting started" on page 675.
Each dialog will be saved as a single C file. Please note that the file names are generated automatically by the widget names of the parent widgets. The file names are build as follows:

<Widget name>DLG.c

If for example the name of the widget is 'Framewin' the file will be named FramewinDLG.c.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

19.5 Output of the GUIBuilder

As mentioned above the result of the GUIBuilder are C files only. The following shows a small sample which is generated by the tool:

```
/*********************************************************************
*                                                                    *
*                SEGGER Microcontroller GmbH & Co. KG                *
*        Solutions for real time microcontroller applications        *
*                                                                    *
**********************************************************************
*                                                                    *
* C-file generated by:                                               *
*                                                                    *
*        GUI_Builder for emWin version 5.09                          *
*        Compiled Mar 23 2011, 09:52:04                              *
*        (c) 2011 Segger Microcontroller GmbH & Co. KG               *
*                                                                    *
**********************************************************************
*                                                                    *
*        Internet: www.segger.com  Support: support@segger.com       *
*                                                                    *
**********************************************************************
*/

// USER START (Optionally insert additional includes)
// USER END

#include "DIALOG.h"

/*********************************************************************
*
*       Defines
*
**********************************************************************
*/

#define ID_FRAMEWIN_0   (GUI_ID_USER + 0x0A)
#define ID_BUTTON_0     (GUI_ID_USER + 0x0B)

// USER START (Optionally insert additional defines)
// USER END

/*********************************************************************
*
*       Static data
*
**********************************************************************
*/

// USER START (Optionally insert additional static data)
// USER END

/*********************************************************************
*
*       _aDialogCreate
*/
static const GUI_WIDGET_CREATE_INFO _aDialogCreate[] = {
  { FRAMEWIN_CreateIndirect, "Framewin", ID_FRAMEWIN_0, 0, 0, 320, 240, 0, 0, 0 },
  { BUTTON_CreateIndirect, "Button", ID_BUTTON_0, 5, 5, 80, 20, 0, 0, 0 },
  // USER START (Optionally insert additional widgets)
  // USER END
};

/*********************************************************************
*
*       Static code
*
**********************************************************************
*/

// USER START (Optionally insert additional static code)
// USER END

/*********************************************************************
*
*       _cbDialog
*/
static void _cbDialog(WM_MESSAGE * pMsg) {
  WM_HWIN hItem;
  int Id, NCode;
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
  // USER START (Optionally insert additional variables)
  // USER END

  switch (pMsg->MsgId) {
  case WM_INIT_DIALOG:
    //
    // Initialization of 'Framewin'
    //
    hItem = pMsg->hWin;
    FRAMEWIN_SetTextAlign(hItem, GUI_TA_HCENTER | GUI_TA_VCENTER);
    FRAMEWIN_SetFont(hItem, GUI_FONT_24_ASCII);
    //
    // Initialization of 'Button'
    //
    hItem = WM_GetDialogItem(pMsg->hWin, ID_BUTTON_0);
    BUTTON_SetText(hItem, "Press me...");
    // USER START (Opt. insert additional code for further widget initialization)
    // USER END
    break;
  case WM_NOTIFY_PARENT:
    Id    = WM_GetId(pMsg->hWinSrc);
    NCode = pMsg->Data.v;
    switch(Id) {
    case ID_BUTTON_0: // Notifications sent by 'Button'
      switch(NCode) {
      case WM_NOTIFICATION_CLICKED:
        // USER START (Optionally insert code for reacting on notification message)
        // USER END
        break;
      case WM_NOTIFICATION_RELEASED:
        // USER START (Optionally insert code for reacting on notification message)
        // USER END
        break;
      // USER START (Opt. insert additional code for further notification handling)
      // USER END
      }
      break;
    // USER START (Optionally insert additional code for further Ids)
    // USER END
    }
    break;
  // USER START (Optionally insert additional message handling)
  // USER END
  default:
    WM_DefaultProc(pMsg);
    break;
  }
}

/*********************************************************************
*
*       Public code
*
**********************************************************************
*/
/*********************************************************************
*
*       CreateFramewin
*/
WM_HWIN CreateFramewin(void) {
  WM_HWIN hWin;

  hWin = GUI_CreateDialogBox(_aDialogCreate,
                             GUI_COUNTOF(_aDialogCreate), &_cbDialog, WM_HBKWIN, 0, 0);
  return hWin;
}

// USER START (Optionally insert additional public code)
// USER END

/************************* End of file ****************************/
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

19.6 Modifying the C files

As the sample code shows, it contains many sections for custom code. These are the following sections:

```
// USER START (Optionally insert ...)
// USER END
```

Between these lines any code is allowed to be added. Please note that the code needs to be added between the lines. The comment lines itself are not allowed to be modified. The following shows how it should work:

```
// USER START (Optionally insert additional includes)
#ifndef WIN32
  #include <ioat91sam9261.h>
#endif
// USER END
```

19.7 How to use the C files

As the sample output shows, the code does not contain any code which uses the dialogs or with other words makes them visible on the display. Each file contains a creation routine at the end named `Create<Widget name>()`. These routines create the according dialog. Simply call these routines to make them occur on the display.

Example

The following code shows how to draw the dialog of the previous output sample on a display:

```
#include "DIALOG.h"

/*********************************************************************
*
*       Externals
*
**********************************************************************
*/
WM_HWIN CreateFramewin(void);

/*********************************************************************
*
*       Public code
*
**********************************************************************
*/
/*********************************************************************
*
*       MainTask
*/
void MainTask(void) {
  WM_HWIN hDlg;
  GUI_Init();
  //
  // Call creation function for the dialog
  //
  hDlg = CreateFramewin();
  //
  // May do anything with hDlg
  //
  ...
  //
  // Keep program allive...
  //
  while (1) {
    GUI_Delay(10);
  }
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 20

Skinning

Skinning is a method of changing the appearance of one or multiple widgets. It allows changing the look by using a dedicated skin which defines how the widgets are rendered. This makes it easy to change the appearance of a complete group of widgets in a similar way by changing only the skin.
Without skinning, widget member functions have to be used to change the look for each single widget or the callback function has to be overwritten.



© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.1 What is a ’skin’?

A skin is just a simple callback function which is available for drawing all details of a widget. It works by exactly same way as a ’user draw function’ of a widget, an older method of widget customization which was available before ’skinning’ was implemented.

20.2 From using API functions to skinning

There are different methods to change the appearance of a widget. Widget API functions, user draw functions, skinning and overwriting the callback function can be used to modify the appearance of a widget. The decision of the method to be used depends on what should be changed. The following explains what can be achieved with each method.

Using widget API functions

The default API functions can be used to change attributes like size, color, font or bitmaps used to draw a widget using the classical design. The following screenshot shows a typical sample of what can be done:

Before	After
	

Some attributes can be changed but the basic appearance stays the same.

User draw functions

Some widgets like LISTBOX, FRAMEWIN, GRAPH or BUTTON widgets offer user draw functions. These functions can be used to draw some additional details or to replacing the default drawing method for some items. The following screenshot shows a user drawn title area of a frame window. The user draw function renders the gradient in the title area, which can’t be achieved with the widget API functions:

Before	After
	

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Skinning

Contrary to the methods mentioned above skinning covers the drawing of the whole widget and not only some details. We also used this opportunity to lift the appearance of the skinnable widgets which look much more up-to-date as the classical widget design. The following table shows the look of the about box from above in comparison with the new default skin:

Classical design	Default skin
	

Overwriting the callback function of a widget

Before skinning was implemented, the only method of changing the complete appearance of a widget was overwriting the callback function of a widget. This gives full control over the complete message processing of the widget. It can be used in combination with the other methods. The main disadvantages of overwriting the callback function is that lots of code needs to be written by the user. This process is error-prone.

20.3 Skinnable widgets

Skinning makes only sense if a widget consists of several widget specific details. It does not make sense for each kind of widget. A TEXT widget for example does not require a separate skin, because it consists only of the text itself.
Currently the following widgets support skinning:

- BUTTON
- CHECKBOX
- DROPDOWN
- FRAMEWIN
- HEADER
- PROGBAR
- RADIO
- SCROLLBAR
- SLIDER

20.4 Using a skin

The shipment of emWin contains a ready-to-use default skin for all above listed skinnable widgets. They have been named `<WIDGET>_SKIN_FLEX`.

The following table shows the available default skins for all skinnable widgets:

Widget	Default skin
BUTTON	BUTTON_SKIN_FLEX
CHECKBOX	CHECKBOX_SKIN_FLEX

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Widget	Default skin
DROPDOWN	DROPDOWN_SKIN_FLEX
FRAMEWIN	FRAMEWIN_SKIN_FLEX
HEADER	HEADER_SKIN_FLEX
PROGBAR	PROGBAR_SKIN_FLEX
RADIO	RADIO_SKIN_FLEX
SCROLLBAR	SCROLLBAR_SKIN_FLEX
SLIDER	SLIDER_SKIN_FLEX

20.4.1 Runtime configuration

To use these skins the function `<WIDGET>_SetSkin(<WIDGET>_SKIN_FLEX)` can be used. Further it is possible to set a default skin by `<WIDGET>_SetDefaultSkin()` which is used automatically for each new widget.

Switching from classic design to a skin

The most recommended way of using a skin is first setup the widget behavior and then creating the widget.

Example

The following example shows how a skin can be used:

```
BUTTON_SetSkin(hButton, BUTTON_SKIN_FLEX); // Sets the skin for the given widget
BUTTON_SetDefaultSkin(BUTTON_SKIN_FLEX);   // Sets the default skin for new widgets
```

20.4.2 Compile time configuration

If skinning should be used as default behavior there exist a compile time configuration macro which can be used. To use skinning per default the macro `WIDGET_USE_FLEX_SKIN` can be used.

Example

To use skinning per default the macro should be added to the file `GUIConf.h`:

```
#define WIDGET_USE_FLEX_SKIN 1
```

20.5 Simple changes to the look of the ’Flex’ skin

Similar to the API functions available for changing the attributes of the classical look the attributes of the ’Flex’ skin can also be changed. This can be done without knowing all details of the skinning mechanism.
The function(s) `<WIDGET>_SetSkinFlexProps()` explained in detail later in this chapter can be used to change the attributes. For each skin exist functions for getting and setting the attributes.

Example

The following code shows how to change the attributes of the button skin:

```
BUTTON_GetSkinFlexProps(&Props, BUTTON_SKINFLEX_FOCUSSED);
Props.aColorFrame[0] = 0x007FB13C;
Props.aColorFrame[1] = 0x008FfF8F;
Props.Radius         = 6;
BUTTON_SetSkinFlexProps(&Props, BUTTON_SKINFLEX_FOCUSSED);
WM_InvalidateWindow(hWin);
```

Please note that it is required to invalidate the windows which are affected by the skin. Contrary to the widget API functions, which need to be called for each single widget, the skin does not ’know’ something about which widget is using it. So there is no automatic widget invalidation and redrawing when changing the skin attributes.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Screenshot

Before	After
	

20.6 Major changes to the look of the 'Flex' skin

The drawing mechanism of the default design without skinning is a 'black box' for the application designer. The same is true for skinning if no major changes of the default look are required. If changing the attributes of the default skin is not sufficient to realize the required look, it is required to understand the details of the drawing mechanism of skinning.

20.6.1 The skinning callback mechanism

The drawing mechanism for all skinnable widgets is very similar and looks as follows:

```
int <WIDGET>_DrawSkin(const WIDGET_ITEM_DRAW_INFO * pDrawItemInfo) {
  switch (pDrawItemInfo->Cmd) {
  case WIDGET_ITEM_DRAW_BACKGROUND:
    /* Draw the background */
    break;
  case WIDGET_ITEM_DRAW_TEXT:
    /* Draw the text */
    break;
  case WIDGET_ITEM_CREATE:
    /* Additional function calls required to create the widget */
    break;
  ...
}
```

Elements of WIDGET_ITEM_DRAW_INFO

Data type	Element	Description
WM_HWIN	hWin	Handle to the widget.
int	Cmd	Command to be processed.
int	ItemIndex	Index of item to be drawn.
int	x0	Leftmost coordinate in window coordinates.
int	y0	Topmost coordinate in window coordinates.
int	x1	Rightmost coordinate in window coordinates.
int	y1	Bottommost coordinate in window coordinates.
void *	p	Data pointer to widget specific information.

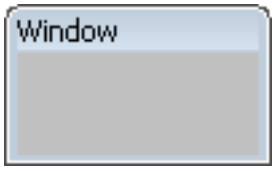
This scheme is identical to all skinnable widgets. The callback function receives a pointer to a WIDGET_ITEM_DRAW_INFO structure. The structure pointed by pDrawItem-Info contains a command which has to be processed, a handle to the widget and further information whose meaning may vary by widget. The skinning callback function has to react with drawing a dedicated detail or with returning a dedicated value.
How to use the drawing information in detail is explained later in this chapter.

20.6.2 Changing the look of the default skin


Understanding the above callback mechanism is important because changing a skin can easily be done by deriving a new skin from an existing one. A small example should show how the look of the default skin of a widget can be changed.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Assuming the default look of the frame window skin should be changed because an icon should be shown on the left side of the title bar. The default appearance of the FRAMEWIN skin is as follows:



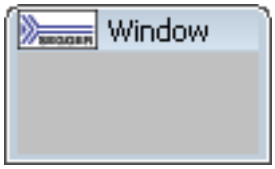This should be changed to the following:



This can be done easily by using a customized skin derived from the default skin. The following code shows how this can be achieved. It shows a custom skinning callback function which is used as skin by the function `FRAMEWIN_SetSkin()`. Because the icon should be drawn in the text area of the frame window the function overwrites the default behaviour of the text drawing:

```
  case WIDGET_ITEM_DRAW_TEXT:
    ...
```

All other tasks should be performed by the default skin:

```
  default:
    return FRAMEWIN_DrawSkinFlex(pDrawItemInfo);
```

Example

```
static int _DrawSkinFlex_FRAME(const WIDGET_ITEM_DRAW_INFO * pDrawItemInfo) {
  char acBuffer[20];
  GUI_RECT Rect;

  switch (pDrawItemInfo->Cmd) {
  case WIDGET_ITEM_DRAW_TEXT:
    //
    // Draw icon at the left side
    //
    GUI_DrawBitmap(&_bmLogo_30x15, pDrawItemInfo->x0, pDrawItemInfo->y0);
    //
    // Draw text beneath
    //
    FRAMEWIN_GetText(pDrawItemInfo->hWin, acBuffer, sizeof(acBuffer));
    GUI_SetColor(GUI_BLACK);
    Rect.x0 = pDrawItemInfo->x0   // Default position of text
            + _bmLogo_30x15.XSize // + X-size of icon
            + 4;                  // + small gap between icon and text
    Rect.y0 = pDrawItemInfo->y0;
    Rect.x1 = pDrawItemInfo->x1;
    Rect.y1 = pDrawItemInfo->y1;
    GUI_DispStringInRect(acBuffer, &Rect, GUI_TA_VCENTER);
    break;
  default:
     //
     // Use the default skinning routine for processing all other commands
     //
    return FRAMEWIN_DrawSkinFlex(pDrawItemInfo);
  }
  return 0;
}

void _SetSkin(WM_HWIN) {
  //
  // Set the derived
  //
  FRAMEWIN_SetSkin(hFrame, _DrawSkinFlex_FRAME);
}
```

20.6.3 List of commands

As explained above a skinning routine receives a pointer to a `WIDGET_ITEM_DRAW_INFO` structure. The `Cmd` member of this structure contains the command which needs to be processed. There are several commands which are send

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

to the skinning routine of a widget. Please note that not all commands are send to all widgets. Further the meaning in detail vary by widgets. Detailed descriptions how to react on the commands follow later in the widget specific details. The following table gives an overview of the commands which are send to the skinning routines:

Command Id (Cmd)	**Description**
Creation messages	
WIDGET_ITEM_CREATE	Sent to each skinnable widget after it has been created but before it is drawn.
Information messages	
WIDGET_ITEM_GET_BORDERSIZE_B	Used to get the size of the bottom border.
WIDGET_ITEM_GET_BORDERSIZE_L	Used to get the size of the left border.
WIDGET_ITEM_GET_BORDERSIZE_R	Used to get the size of the right border.
WIDGET_ITEM_GET_BORDERSIZE_T	Used to get the size of the top border.
WIDGET_ITEM_GET_BUTTONSIZE	Used to get the button size.
WIDGET_ITEM_GET_XSIZE	Used to get the X-size.
WIDGET_ITEM_GET_YSIZE	Used to get the Y-size.
Drawing messages	
WIDGET_ITEM_DRAW_ARROW	Used to draw an arrow.
WIDGET_ITEM_DRAW_BACKGROUND	Used to draw the background.
WIDGET_ITEM_DRAW_BITMAP	Used to draw a bitmap.
WIDGET_ITEM_DRAW_BUTTON	Used to draw the button area.
WIDGET_ITEM_DRAW_BUTTON_L	Used to draw the left button area.
WIDGET_ITEM_DRAW_BUTTON_R	Used to draw the right button area.
WIDGET_ITEM_DRAW_FOCUS	Used to draw the focus rectangle.
WIDGET_ITEM_DRAW_FRAME	Used to draw the frame of a widget.
WIDGET_ITEM_DRAW_OVERLAP	Used to draw the overlapping region.
WIDGET_ITEM_DRAW_SEP	Used to draw a separator.
WIDGET_ITEM_DRAW_SHAFT	Used to draw the shaft area.
WIDGET_ITEM_DRAW_SHAFT_L	Used to draw the left shaft area.
WIDGET_ITEM_DRAW_SHAFT_R	Used to draw the right shaft area.
WIDGET_ITEM_DRAW_TEXT	Used to draw the text.
WIDGET_ITEM_DRAW_THUMB	Used to draw the thumb area.
WIDGET_ITEM_DRAW_TICKS	Used to draw tick marks.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.7 General skinning API

The table below lists available skinning-related routines in alphabetical order. These functions are common to all skinnable widgets, and are listed here in order to avoid repetition. Detailed descriptions of the routines follow. The additional skinning member functions available for each widget may be found in later sections.

Routine	Description
<WIDGET>_DrawSkinFlex()	Skinning callback function of the default skin.
<WIDGET>_GetSkinFlexProps()	Returns the current properties of the skin.
<WIDGET>_SetDefaultSkin()	Sets the default skin used for new widgets.
<WIDGET>_SetDefaultSkinClassic()	Sets the classical design as default for new widgets.
<WIDGET>_SetSkin()	Sets a skin for the given widget.
<WIDGET>_SetSkinClassic()	Sets the classical design for the given widget.
<WIDGET>_SetSkinFlexProps()	Sets the properties of the skin.

<WIDGET>_DrawSkinFlex()

Description

These functions are the skinning callback functions of the default skin and are responsible to draw the complete widget.

Prototype

```
int <WIDGET>_DrawSkinFlex(const WIDGET_ITEM_DRAW_INFO * pDrawItemInfo);
```

Parameter	Description
pDrawItemInfo	Pointer to a data structure of type WIDGET_ITEM_DRAW_INFO.

Additional information

A derived skin can use this function for drawing details of the default skin.

<WIDGET>_GetSkinFlexProps()

Description

These functions return the attributes of the default skin. The widget specific explanations later in this chapter explain the skin attributes in detail.

Prototype

```
void <WIDGET>_GetSkinFlexProps(<WIDGET>_SKINFLEX_PROPS * pProps,
                               int Index);
```

Parameter	Description
pProps	Pointer to a skin specific configuration structure of type <WIDGET>_SKINFLEX_PROPS to be filled by the function.
Index	Widget state (pressed, active, selected, ...) for which the details should be retrieved.

<WIDGET>_SetDefaultSkin()

Description

These functions set the default skin which is used for new widgets of the dedicated type.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void <WIDGET>_SetDefaultSkin(WIDGET_DRAW_ITEM_FUNC * pfDrawSkin);
```

Parameter	Description
pfDrawSkin	Pointer to a skinning callback function of type WIDGET_DRAW_ITEM_FUNC.

Additional information

The given pointer should point to the skinning callback routine to be used for all new widgets. For more details please also refer to the function <WIDGET>_SetSkin() explained later in this chapter.

<WIDGET>_SetDefaultSkinClassic()

Description

These functions set the classical design for all new widgets of the dedicated type.

Prototype

```
void <WIDGET>_SetDefaultSkinClassic(void);
```

Additional information

The behaviour of widgets which use the classical design is completely identical to the behaviour before implementing the skinning feature.

<WIDGET>_SetSkin()

Description

These functions can be used for setting a skin for the given widget.

Prototype

```
void <WIDGET>_SetSkin(<WIDGET>_Handle          hObj,
                      WIDGET_DRAW_ITEM_FUNC * pfDrawSkin);
```

Parameter	Description
hObj	Handle to the dedicated widget.
pfDrawSkin	Pointer to a skinning callback function of type WIDGET_DRAW_ITEM_FUNC.

WIDGET_DRAW_ITEM_FUNC

```
typedef int  WIDGET_DRAW_ITEM_FUNC(const WIDGET_ITEM_DRAW_INFO * pDrawItemInfo);
```

Additional information

Please note that some of the default API functions for the widget have no effect if a skin is used.

<WIDGET>_SetSkinClassic()

Description

These functions switch to the classical design without skinning for the given widget.

Prototype

```
void <WIDGET>_SetSkinClassic(<WIDGET>_Handle hObj);
```

Parameter	Description
hObj	Handle to the dedicated widget.

Additional information

Please also refer to the function <WIDGET>_SetDefaultSkinClassic().

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

<WIDGET>_SetSkinFlexProps()

Description

With these functions some attributes of the default skin can be changed without deriving an own skin. The widget specific explanations later in this chapter will explain in detail what can be changed.

Prototype

```
void <WIDGET>_SetSkinFlexProps(const <WIDGET>_SKINFLEX_PROPS * pProps,
                               int Index);
```

Parameter	Description
pProps	Pointer to a skin specific configuration structure of type <WIDGET>_SKINFLEX_PROPS.
Index	Details of the state (pressed, active, selected, ...) for which the details should be valid.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.8 BUTTON_SKIN_FLEX

The following picture shows the details of the skin:



The button skin consists of a rounded border and a rectangular inner area which is filled by 2 gradients. The surrounding border is drawn by 2 colors.

Detail	Description
A	Top color of top gradient.
B	Bottom color of top gradient.
C	Top color of bottom gradient.
D	Bottom color of bottom gradient.
E	Outer color of surrounding frame.
F	Inner color of surrounding frame.
G	Color of area between surrounding frame and inner rectangular area.
R	Radius of rounded corner.
T	Optional text.

20.8.1 Configuration structure

To set up the default appearance of the skin or to change it at run time configuration structures of type `BUTTON_SKINFLEX_PROPS` are used:

Elements of BUTTON_SKINFLEX_PROPS

Data type	Element	Description
U32	aColorFrame[3]	[0] - Outer color of surrounding frame. [1] - Inner color of surrounding frame. [2] - Color of area between frame and inner area.
U32	aColorUpper[2]	[0] - First (upper) color of upper gradient. [1] - Second (lower) color of upper gradient.
U32	aColorLower[2]	[0] - First (upper) color of lower gradient. [1] - Second (lower) color of lower gradient.
int	Radius	Radius of rounded corner.

20.8.2 Configuration options

The default appearance of the skin can be determined by setting custom configuration structures of the above type in `GUIConf.h`. The following table shows the available configuration options:

Macro	Description
BUTTON_SKINPROPS_PRESSED	Defines the default attributes used for pressed state.
BUTTON_SKINPROPS_FOCUSSED	Defines the default attributes used for focussed state.
BUTTON_SKINPROPS_ENABLED	Defines the default attributes used for enabled state.
BUTTON_SKINPROPS_DISABLED	Defines the default attributes used for disabled state.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.8.3 Skinning API

The table below lists the available routines in alphabetical order:

Routine	Description
BUTTON_DrawSkinFlex()	Skinning callback function of BUTTON_SKIN_FLEX. (Explained at the beginning of the chapter)
BUTTON_GetSkinFlexProps()	Returns the properties of the given button skin. (Explained at the beginning of the chapter)
BUTTON_SetDefaultSkin()	Sets the default skin used for new button widgets. (Explained at the beginning of the chapter)
BUTTON_SetDefaultSkinClassic()	Sets the classical design as default for new button widgets. (Explained at the beginning of the chapter)
BUTTON_SetSkin()	Sets a skin for the given button widget. (Explained at the beginning of the chapter)
BUTTON_SetSkinClassic()	Sets the classical design for the given button widget. (Explained at the beginning of the chapter)
BUTTON_SetSkinFlexProps()	Sets the properties of the given button skin.

BUTTON_SetSkinFlexProps()

Before	After
	

Description

The function can be used to change the properties of the skin.

Prototype

```
void BUTTON_SetSkinFlexProps(const BUTTON_SKINFLEX_PROPS * pProps,
                             int Index);
```

Parameter	Description
pProps	Pointer to a structure of type BUTTON_SKINFLEX_PROPS.
Index	(see table below)

Permitted values for parameter Index	
BUTTON_SKINFLEX_PI_PRESSED	Properties for pressed state.
BUTTON_SKINFLEX_PI_FOCUSSED	Properties for focussed state.
BUTTON_SKINFLEX_PI_ENABLED	Properties for enabled state.
BUTTON_SKINFLEX_PI_DISABLED	Properties for disabled state.

Additional information

The function passes a pointer to a BUTTON_SKINFLEX_PROPS structure. It can be used to set up the colors and the radius of the skin.
The function BUTTON_GetSkinFlexProps() can be used to get the current attributes of the skin.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.8.4 List of commands

The skinning routine receives a pointer to a WIDGET_ITEM_DRAW_INFO structure. The Cmd member of this structure contains the command which needs to be processed. The following table shows all commands passed to the BUTTON_SKIN_FLEX callback function:

Command	Description
WIDGET_ITEM_CREATE	Is sent immediately after creating the widget.
WIDGET_ITEM_DRAW_BACKGROUND	The skinning function should draw the background.
WIDGET_ITEM_DRAW_BITMAP	The skinning function should draw the optional button bitmap.
WIDGET_ITEM_DRAW_TEXT	The skinning function should draw the optional button text.

The WIDGET_ITEM_DRAW_INFO structure is explained at the beginning of the chapter.

WIDGET_ITEM_CREATE

The skinning routine should, if necessary, set up skin related properties like e.g. transparency or text alignment.

WIDGET_ITEM_DRAW_BACKGROUND

The background of the widget should be drawn.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
ItemIndex	(See table below).
x0	Leftmost coordinate in window coordinates, normally 0.
y0	Topmost coordinate in window coordinates, normally 0.
x1	Rightmost coordinate in window coordinates.
y1	Bottommost coordinate in window coordinates.

Permitted values for element ItemIndex	
BUTTON_SKINFLEX_PI_PRESSED	The widget is pressed.
BUTTON_SKINFLEX_PI_FOCUSSED	The widget is not pressed but focussed.
BUTTON_SKINFLEX_PI_ENABLED	The widget is not focussed but enabled.
BUTTON_SKINFLEX_PI_DISABLED	The widget is disabled.

WIDGET_ITEM_DRAW_BITMAP

The optional button bitmap should be drawn.

Content of WIDGET_ITEM_DRAW_INFO structure

Please refer to WIDGET_ITEM_DRAW_BACKGROUND.

Additional information

The function BUTTON_GetBitmap() can be used to get the optional button bitmap.

WIDGET_ITEM_DRAW_TEXT

The optional button text should be drawn.

Content of WIDGET_ITEM_DRAW_INFO structure

Please refer to WIDGET_ITEM_DRAW_BACKGROUND.


Additional information

The function BUTTON_GetText() can be used to get the optional text.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.9 CHECKBOX_SKIN_FLEX

The following picture shows the details of the skin:

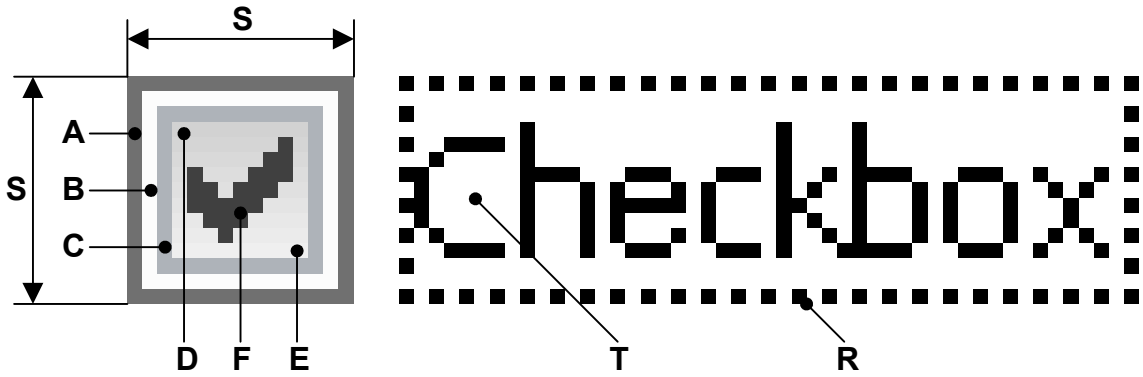

The button area of the checkbox skin consists of a frame and a rectangular inner area which is filled by a gradient. The frame is drawn by 3 colors. If it is checked, a checkmark is shown in the center of the box:

Detail	Description
A	First color of frame.
B	Second color of frame.
C	Third color of frame.
D	Upper color of gradient.
E	Lower color of gradient.
F	Color of checkmark.
R	Focus rectangle.
S	Size in pixels of button area.
T	Optional text.

20.9.1 Configuration structure

To set up the default appearance of the skin or to change it at run time configuration structures of type `CHECKBOX_SKINFLEX_PROPS` are used:

Elements of CHECKBOX_SKINFLEX_PROPS

Data type	Element	Description
`U32`	`aColorFrame[3]`	[0] - Outer color of frame. [1] - Middle color of frame. [2] - Inner color of frame.
`U32`	`aColorInner[2]`	[0] - First (upper) color of gradient. [1] - Second (lower) color of gradient.
`U32`	`ColorCheck`	Color of checkmark.
`int`	`Size`	Size in pixels of button area.

20.9.2 Configuration options

The default appearance of the skin can be determined by setting custom configuration structures of the above type in `GUIConf.h`. The following table shows the available configuration options:

Macro	Description
`CHECKBOX_SKINPROPS_ENABLED`	Defines the default attributes used for enabled state.
`CHECKBOX_SKINPROPS_DISABLED`	Defines the default attributes used for disabled state.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.9.3 Skinning API

The table below lists the available routines in alphabetical order:

Routine	Description
CHECKBOX_DrawSkinFlex()	Skinning callback function of CHECKBOX_SKIN_FLEX. (Explained at the beginning of the chapter)
CHECKBOX_GetSkinFlexProps()	Returns the properties of the given checkbox skin. (Explained at the beginning of the chapter)
CHECKBOX_SetDefaultSkin()	Sets the default skin used for new checkbox widgets. (Explained at the beginning of the chapter)
CHECKBOX_SetDefaultSkinClassic()	Sets the classical design as default for new checkbox widgets. (Explained at the beginning of the chapter)
CHECKBOX_SetSkin()	Sets a skin for the given checkbox widget. (Explained at the beginning of the chapter)
CHECKBOX_SetSkinClassic()	Sets the classical design for the given checkbox widget. (Explained at the beginning of the chapter)
CHECKBOX_SetSkinFlexProps()	Sets the properties of the given checkbox skin.

CHECKBOX_SetSkinFlexProps()

Before	After
	

Description

The function can be used to change the properties of the skin.

Prototype

```
void CHECKBOX_SetSkinFlexProps(const CHECKBOX_SKINFLEX_PROPS * pProps,
                               int Index);
```

Parameter	Description
pProps	Pointer to a structure of type CHECKBOX_SKINFLEX_PROPS.
Index	(see table below)

Permitted values for parameter Index	
CHECKBOX_SKINFLEX_PI_ENABLED	Properties for enabled state.
CHECKBOX_SKINFLEX_PI_DISABLED	Properties for disabled state.

Additional information

The function passes a pointer to a CHECKBOX_SKINFLEX_PROPS structure. It can be used to set up the colors of the skin.
Please note that the size of the widgets using the skin won't be changed if for example the new button size is different to the old button size. This can't be done by the skin, because it does not 'know' which widget is using it. If required resizing should be done by the application, for example with WM_ResizeWindow().
The function CHECKBOX_GetSkinFlexProps() can be used to get the current attributes of the skin.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.9.4 List of commands

The skinning routine receives a pointer to a WIDGET_ITEM_DRAW_INFO structure. The Cmd member of this structure contains the command which needs to be processed. The following table shows all commands passed to the CHECKBOX_SKIN_FLEX callback function:

Command	Description
WIDGET_ITEM_CREATE	Is sent immediately after creating the widget.
WIDGET_ITEM_DRAW_BUTTON	The background of the button area should be drawn.
WIDGET_ITEM_DRAW_BITMAP	The checkmark of the button area should be drawn.
WIDGET_ITEM_DRAW_FOCUS	The focus rectangle should be drawn.
WIDGET_ITEM_DRAW_TEXT	The optional text should be drawn.

WIDGET_ITEM_CREATE

The skinning routine should, if necessary, set up skin related properties like e.g. transparency or text alignment.

WIDGET_ITEM_DRAW_BUTTON

The button area of the widget without checkmark should be drawn. It is typically drawn at the left side of the widget area.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
x0	Leftmost coordinate of widget area in window coordinates, normally 0.
y0	Topmost coordinate of widget area in window coordinates, normally 0.
x1	Rightmost coordinate of widget area in window coordinates.
y1	Bottommost coordinate of widget area in window coordinates.

The content of hWin, x0, y0, x1 and y1 is the same for all commands of this skin.

WIDGET_ITEM_DRAW_BITMAP

The checkmark should be drawn in the center of the button area.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
ItemIndex	1 - The widget is checked. 2 - Second checked state when using a 3 state button.
hWin,x0,y0,x1,y1	(please refer to WIDGET_ITEM_DRAW_BUTTON)

WIDGET_ITEM_DRAW_FOCUS

The focus rectangle should be drawn around the text.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
p	The void pointer points to the zero terminated optional text of the widget.
hWin,x0,y0,x1,y1	(please refer to WIDGET_ITEM_DRAW_BUTTON)

Additional information

The element p can be casted to a text pointer. For details please refer to WIDGET_ITEM_DRAW_TEXT.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WIDGET_ITEM_DRAW_TEXT

The optional text should be drawn. The text is typically drawn at the right side of the button area.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
p	The void pointer points to the zero terminated optional text of the widget.
hWin,x0,y0,x1,y1	(please refer to WIDGET_ITEM_DRAW_BUTTON)

Additional information


To get a text pointer the element p can be casted to a text pointer:

```
char * s;
s = (char *)pDrawItemInfo->p;
GUI_DispString(s);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.10 DROPDOWN_SKIN_FLEX

The following picture shows the details of the skin:

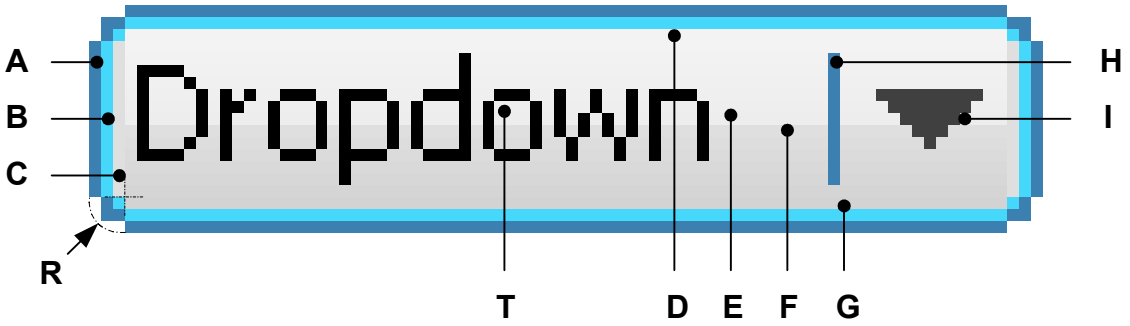

The dropdown skin consists of a rounded frame and a rectangular inner area which is filled by two gradients. The rounded frame is drawn by 3 colors. At the right side a small triangle is drawn. Between text and triangle a small separator is drawn:

Detail	Description
A	First color of frame.
B	Second color of frame.
C	Third color of frame.
D	Top color of top gradient.
E	Bottom color of top gradient.
F	Top color of bottom gradient.
G	Bottom color of bottom gradient.
H	Separator between text and triangle.
I	Triangle.
R	Radius of rounded corner.
T	Optional text.

The dropdown widget in open state consists of an additional listbox. Please note that this listbox is not affected by the skin.

20.10.1 Configuration structure

To set up the default appearance of the skin or to change it at run time configuration structures of type `DROPDOWN_SKINFLEX_PROPS` are used:

Elements of DROPDOWN_SKINFLEX_PROPS

Data type	Element	Description
U32	aColorFrame[3]	[0] - Outer color of surrounding frame. [1] - Inner color of surrounding frame. [2] - Color of area between frame and inner area.
U32	aColorUpper[2]	[0] - Top color of top gradient. [1] - Bottom color of top gradient.
U32	aColorLower[2]	[0] - Top color of bottom gradient. [1] - Bottom color of bottom gradient.
U32	ColorArrow	Color used to draw the arrow.
U32	ColorText	Color used to draw the text.
U32	ColorSep	Color used to draw the separator.
int	Radius	Radius of rounded corner.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.10.2 Configuration options

The default appearance of the skin can be determined by setting custom configuration structures of the above type in GUIConf.h. The following table shows the available configuration options:

Macro	Description
DROPDOWN_SKINPROPS_OPEN	Defines the default attributes used for open state.
DROPDOWN_SKINPROPS_FOCUSSED	Defines the default attributes used for focussed state.
DROPDOWN_SKINPROPS_ENABLED	Defines the default attributes used for enabled state.
DROPDOWN_SKINPROPS_DISABLED	Defines the default attributes used for disabled state.

20.10.3 Skinning API

The table below lists the available routines in alphabetical order:

Routine	Description
DROPDOWN_DrawSkinFlex()	Skinning callback function of DROPDOWN_SKIN_FLEX. (Explained at the beginning of the chapter)
DROPDOWN_GetSkinFlexProps()	Returns the properties of the given dropdown skin. (Explained at the beginning of the chapter)
DROPDOWN_SetDefaultSkin()	Sets the default skin used for new dropdown widgets. (Explained at the beginning of the chapter)
DROPDOWN_SetDefaultSkinClassic()	Sets the classical design as default for new dropdown widgets. (Explained at the beginning of the chapter)
DROPDOWN_SetSkin()	Sets a skin for the given dropdown widget. (Explained at the beginning of the chapter)
DROPDOWN_SetSkinClassic()	Sets the classical design for the given dropdown widget. (Explained at the beginning of the chapter)
DROPDOWN_SetSkinFlexProps()	Sets the properties of the given dropdown skin.

DROPDOWN_SetSkinFlexProps()

Before	After
	

Description

The function can be used to change the properties of the skin.

Prototype

```
void DROPDOWN_SetSkinFlexProps(const DROPDOWN_SKINFLEX_PROPS * pProps,
                               int Index);
```

Parameter	Description
pProps	Pointer to a structure of type DROPDOWN_SKINFLEX_PROPS.
Index	(see table below)

Permitted values for parameter Index	
DROPDOWN_SKINFLEX_PI_OPEN	Properties for open state.
DROPDOWN_SKINFLEX_PI_FOCUSSED	Properties for focussed state.
DROPDOWN_SKINFLEX_PI_ENABLED	Properties for enabled state.
DROPDOWN_SKINFLEX_PI_DISABLED	Properties for disabled state.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

The function passes a pointer to a DROPDOWN_SKINFLEX_PROPS structure. It can be used to set up the colors and the radius of the skin.
The function DROPDOWN_GetSkinFlexProps() can be used to get the current attributes of the skin.

20.10.4 List of commands

The skinning routine receives a pointer to a WIDGET_ITEM_DRAW_INFO structure. The Cmd member of this structure contains the command which needs to be processed. The following table shows all commands passed to the DROPDOWN_SKIN_FLEX callback function:

Command	Description
WIDGET_ITEM_CREATE	Is sent immediately after creating the widget.
WIDGET_ITEM_DRAW_ARROW	The skinning function should draw the arrow.
WIDGET_ITEM_DRAW_BACKGROUND	The skinning function should draw the background.
WIDGET_ITEM_DRAW_TEXT	The skinning function should draw the optional button text.

WIDGET_ITEM_CREATE

The skinning routine should, if necessary, set up skin related properties like e.g. transparency or text alignment.

WIDGET_ITEM_DRAW_ARROW

The triangle (arrow) at the right side should be drawn.

Content of WIDGET_ITEM_DRAW_INFO structure:

(please refer to WIDGET_ITEM_DRAW_BACKGROUND)

WIDGET_ITEM_DRAW_BACKGROUND

The background of the widget should be drawn.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
ItemIndex	(See table below).
x0	Leftmost coordinate in window coordinates, normally 0.
y0	Topmost coordinate in window coordinates, normally 0.
x1	Rightmost coordinate in window coordinates.
y1	Bottommost coordinate in window coordinates.

Permitted values for element ItemIndex	
DROPDOWN_SKINFLEX_PI_EXPANDED	The widget is expanded.
DROPDOWN_SKINFLEX_PI_FOCUSSED	The widget is in not pressed but focussed.
DROPDOWN_SKINFLEX_PI_ENABLED	The widget is in not focussed but enabled.
DROPDOWN_SKINFLEX_PI_DISABLED	The widget is disabled.

WIDGET_ITEM_DRAW_TEXT

The text of the currently selected string should be drawn within the button area of the dropdown widget. The text is typically drawn at the left side of the button area.


Content of WIDGET_ITEM_DRAW_INFO structure:

(please refer to WIDGET_ITEM_DRAW_BACKGROUND)

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.11 FRAMEWIN_SKIN_FLEX

The following picture shows the details of the skin:

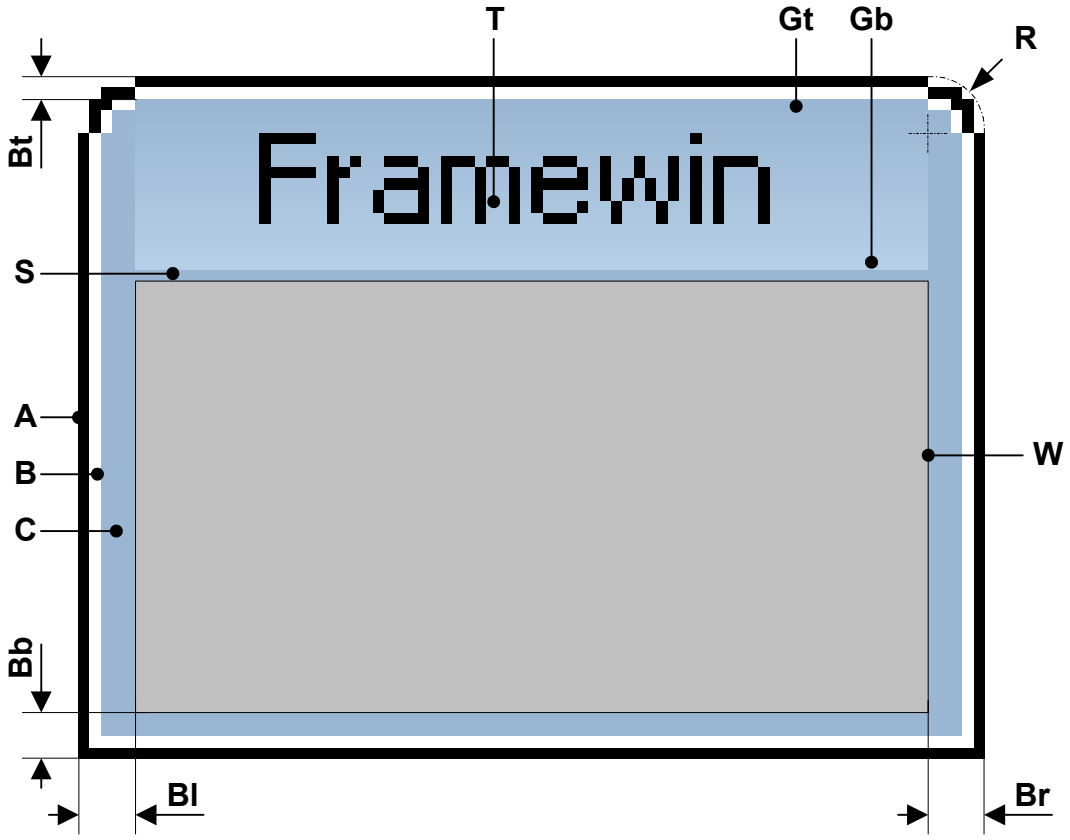

The above picture shows the details of the framewin skin. It consists of a title bar, rounded corners at the top, a gradient used to draw the background of the title bar, a border whose size is configurable and a separator between title bar and client area:

Detail	Description
A	Outer color of surrounding frame.
B	Inner color of surrounding frame.
C	Color of area between frame and inner area.
Gt	Top color of top title bar gradient.
Gb	Bottom color of title bar gradient.
Bt	Top size of border.
Bb	Bottom size of border.
Bl	Left size of border.
Br	Right size of border.
W	Area of client window.
R	Radius of rounded corner.
T	Optional text.

20.11.1 Configuration structure

To set up the default appearance of the skin or to change it at run time configuration structures of type `FRAMEWIN_SKINFLEX_PROPS` are used:

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Elements of FRAMEWIN_SKINFLEX_PROPS

Data type	Element	Description
U32	aColorFrame[3]	[0] - Outer color of surrounding frame. [1] - Inner color of surrounding frame. [2] - Color of area between frame and inner area.
U32	aColorTitle[2]	[0] - Top color of top title bar gradient. [1] - Bottom color of title bar gradient.
int	Radius	Radius of rounded corners.
int	SpaceX	Optional space in X between title text and border of title gradient.
int	BorderSizeL	Left size of border.
int	BorderSizeR	Right size of border.
int	BorderSizeT	Top size of border.
int	BorderSizeB	Bottom size of border.

20.11.2 Configuration options

The default appearance of the skin can be determined by setting custom configuration structures of the above type in GUIConf.h. The following table shows the available configuration options:

Macro	Description
FRAMEWIN_SKINPROPS_ACTIVE	Defines the default attributes used for active state.
FRAMEWIN_SKINPROPS_INACTIVE	Defines the default attributes used for inactive state.

20.11.3 Skinning API

The table below lists the available routines in alphabetical order:

Routine	Description
FRAMEWIN_DrawSkinFlex()	Skinning callback function of FRAMEWIN_SKIN_FLEX. (Explained at the beginning of the chapter)
FRAMEWIN_GetSkinFlexProps()	Returns the properties of the given FRAMEWIN skin. (Explained at the beginning of the chapter)
FRAMEWIN_SetDefaultSkin()	Sets the default skin used for new framewin widgets. (Explained at the beginning of the chapter)
FRAMEWIN_SetDefaultSkinClassic()	Sets the classical design as default for new framewin widgets. (Explained at the beginning of the chapter)
FRAMEWIN_SetSkin()	Sets a skin for the given framewin widget. (Explained at the beginning of the chapter)
FRAMEWIN_SetSkinClassic()	Sets the classical design for the given framewin widget. (Explained at the beginning of the chapter)
FRAMEWIN_SetSkinFlexProps()	Sets the properties of the given framewin skin.

FRAMEWIN_SetSkinFlexProps()

Before	After
	

Description

The function can be used to change the properties of the skin.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void FRAMEWIN_SetSkinFlexProps(const FRAMEWIN_SKINFLEX_PROPS * pProps,
                               int Index);
```

Parameter	Description
pProps	Pointer to a structure of type FRAMEWIN_SKINFLEX_PROPS.
Index	(see table below)

Permitted values for parameter Index	
FRAMEWIN_SKINFLEX_PI_ACTIVE	Properties for active state.
FRAMEWIN_SKINFLEX_PI_INACTIVE	Properties for inactive state.

Additional information

The function passes a pointer to a FRAMEWIN_SKINFLEX_PROPS structure. It can be used to set up the colors, radius and border size of the skin.
The function FRAMEWIN_GetSkinFlexProps() can be used to get the current attributes of the skin.
When creating a frame window using this skin the values for inactive state are used for calculating size and position of the client window.

20.11.4 List of commands

The skinning routine receives a pointer to a WIDGET_ITEM_DRAW_INFO structure. The Cmd member of this structure contains the command which needs to be processed. The following table shows all commands passed to the FRAMEWIN_SKIN_FLEX callback function:

Command	Description
WIDGET_ITEM_CREATE	Is sent immediately after creating the widget.
WIDGET_ITEM_DRAW_BACKGROUND	The skinning function should draw the title background.
WIDGET_ITEM_DRAW_FRAME	The skinning function should draw the frame.
WIDGET_ITEM_DRAW_SEP	The skinning function should draw the separator.
WIDGET_ITEM_DRAW_TEXT	The skinning function should draw the title text.
WIDGET_ITEM_GET_BORDERSIZE_L	The skinning function should return the left border size.
WIDGET_ITEM_GET_BORDERSIZE_R	The skinning function should return the right border size.
WIDGET_ITEM_GET_BORDERSIZE_T	The skinning function should return the top border size.
WIDGET_ITEM_GET_BORDERSIZE_B	The skinning function should return the bottom border size.
WIDGET_ITEM_GET_RADIUS	The skinning function should return the radius of the corners.

WIDGET_ITEM_CREATE

The skinning routine should, if necessary, set up skin related properties like e.g. transparency or text alignment.

WIDGET_ITEM_DRAW_BACKGROUND

The skinning routine should draw the background of the title area.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
ItemIndex	(See table below).
x0	Leftmost coordinate of title area in window coordinates.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Element	Description
y0	Topmost coordinate of title area in window coordinates.
x1	Rightmost coordinate of title area in window coordinates.
y1	Bottommost coordinate of title area in window coordinates.

Permitted values for element ItemIndex	
FRAMEWIN_SKINFLEX_PI_ACTIVE	The widget is in active state.
FRAMEWIN_SKINFLEX_PI_INACTIVE	The widget is in inactive state.

WIDGET_ITEM_DRAW_FRAME

The skinning routine should draw the complete border without the title area and the separator.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
ItemIndex	(See table below).
x0	Leftmost coordinate in window coordinates, normally 0.
y0	Topmost coordinate in window coordinates, normally 0.
x1	Rightmost coordinate in window coordinates (xSize of window - 1).
y1	Bottommost coordinate in window coordinates (ySize of window - 1).

Permitted values for element ItemIndex	
FRAMEWIN_SKINFLEX_PI_ACTIVE	The widget is in active state.
FRAMEWIN_SKINFLEX_PI_INACTIVE	The widget is in inactive state.

WIDGET_ITEM_DRAW_SEP

The skinning routine should draw the separator between title area and client window.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
ItemIndex	(See table below).
x0	Leftmost coordinate of separator in window coordinates.
y0	Topmost coordinate of separator in window coordinates.
x1	Rightmost coordinate of separator in window coordinates.
y1	Bottommost coordinate of separator in window coordinates.

Permitted values for element ItemIndex	
FRAMEWIN_SKINFLEX_PI_ACTIVE	The widget is in active state.
FRAMEWIN_SKINFLEX_PI_INACTIVE	The widget is in inactive state.

WIDGET_ITEM_DRAW_TEXT

The skinning routine should draw title text.

Content of WIDGET_ITEM_DRAW_INFO structure:

(please refer to WIDGET_ITEM_DRAW_BACKGROUND)

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG


WIDGET_ITEM_GET_BORDERSIZE_L,
WIDGET_ITEM_GET_BORDERSIZE_R,
WIDGET_ITEM_GET_BORDERSIZE_T,
WIDGET_ITEM_GET_BORDERSIZE_B

The skinning routine should return the size of the according border.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.12 HEADER_SKIN_FLEX

The following picture shows the details of the skin:

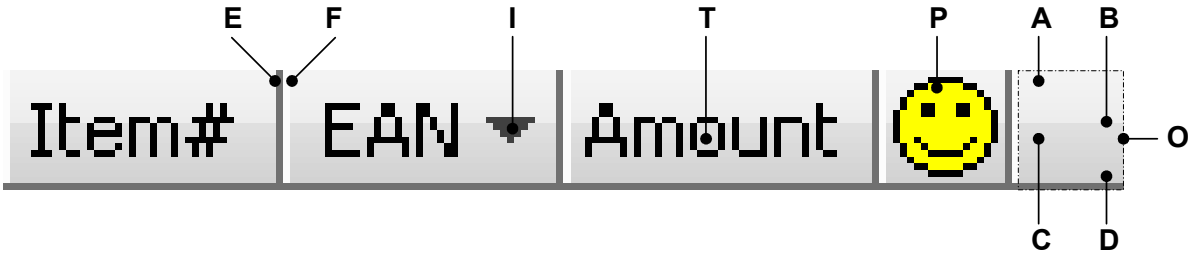

The above picture shows the details of the skin. It consists of a bar with a thin border which is divided into separate items. The background of the bar consists of a top and a bottom gradient. Each item can have a text, a bitmap and an indicator which can be used for example to show the sorting order:

Detail	Description
A	Top color of top gradient.
B	Bottom color of top gradient.
C	Top color of bottom gradient.
D	Bottom color of bottom gradient.
E	First color of frame.
F	Second color of frame.
I	Indicator.
T	Text (optional).
P	Bitmap (optional).

20.12.1 Configuration structure

To set up the default appearance of the skin or to change it at run time configuration structures of type `HEADER_SKINFLEX_PROPS` are used:

Elements of HEADER_SKINFLEX_PROPS

Data type	Element	Description
U32	aColorFrame[2]	[0] - First color of frame and separators. [1] - Second color of frame and separators.
U32	aColorUpper[2]	[0] - Top color of top gradient. [1] - Bottom color of top gradient.
U32	aColorLower[2]	[0] - Top color of bottom gradient. [1] - Bottom color of bottom gradient.
U32	ColorArrow	Color of indicator.

20.12.2 Configuration options

The default appearance of the skin can be determined by setting custom configuration structures of the above type in `GUIConf.h`. The following table shows the available configuration options:

Macro	Description
HEADER_SKINPROPS	Defines the default attributes used for drawing the skin.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.12.3 Skinning API

The table below lists the available routines in alphabetical order:

Routine	Description
HEADER_DrawSkinFlex()	Skinning callback function of HEADER_SKIN_FLEX. (Explained at the beginning of the chapter)
HEADER_GetSkinFlexProps()	Returns the properties of the given HEADER skin. (Explained at the beginning of the chapter)
HEADER_SetDefaultSkin()	Sets the default skin used for new HEADER widgets. (Explained at the beginning of the chapter)
HEADER_SetDefaultSkinClassic()	Sets the classical design as default for new HEADER widgets. (Explained at the beginning of the chapter)
HEADER_SetSkin()	Sets a skin for the given HEADER widget. (Explained at the beginning of the chapter)
HEADER_SetSkinClassic()	Sets the classical design for the given HEADER widget. (Explained at the beginning of the chapter)
HEADER_SetSkinFlexProps()	Sets the properties of the given HEADER skin.

HEADER_SetSkinFlexProps()

Before	After
	

Description

The function can be used to change the properties of the skin.

Prototype

```
void HEADER_SetSkinFlexProps(const HEADER_SKINFLEX_PROPS * pProps,
                             int Index);
```

Parameter	Description
pProps	Pointer to a structure of type HEADER_SKINFLEX_PROPS.
Index	Should be 0.

Additional information

The function passes a pointer to a HEADER_SKINFLEX_PROPS structure. It can be used to set up the colors of the skin.
The function HEADER_GetSkinFlexProps() can be used to get the current attributes of the skin.

20.12.4 List of commands

The skinning routine receives a pointer to a WIDGET_ITEM_DRAW_INFO structure. The Cmd member of this structure contains the command which needs to be processed. The following table shows all commands passed to the HEADER_SKIN_FLEX callback function:

Command	Description
WIDGET_ITEM_CREATE	Is sent immediately after creating the widget.
WIDGET_ITEM_DRAW_ARROW	The indicator arrow of the header item should be drawn.
WIDGET_ITEM_DRAW_BACKGROUND	The background of the header item should be drawn.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Command	Description
WIDGET_ITEM_DRAW_BITMAP	The bitmap of the header item should be drawn.
WIDGET_ITEM_DRAW_OVERLAP	The overlapping region of the widget should be drawn.
WIDGET_ITEM_DRAW_TEXT	The test of the header item should be drawn.

WIDGET_ITEM_CREATE

The skinning routine should, if necessary, set up skin related properties like e.g. transparency or text alignment.

WIDGET_ITEM_DRAW_ARROW

The skinning routine should draw the optional direction indicator. The message is only send if the indicator of the header item is enabled.

Content of WIDGET_ITEM_DRAW_INFO structure:

(please refer to WIDGET_ITEM_DRAW_BACKGROUND)

WIDGET_ITEM_DRAW_BACKGROUND

The skinning routine should draw the background of an item area.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
ItemIndex	Is always 0.
x0	Leftmost coordinate of item area in window coordinates.
y0	Topmost coordinate of item area in window coordinates.
x1	Rightmost coordinate of item area in window coordinates.
y1	Bottommost coordinate of item area in window coordinates.

WIDGET_ITEM_DRAW_BITMAP

The skinning routine should draw the optional item bitmap. The message is only send in case of an existing bitmap.

Content of WIDGET_ITEM_DRAW_INFO structure:

(please refer to WIDGET_ITEM_DRAW_BACKGROUND)

WIDGET_ITEM_DRAW_OVERLAP

The skinning routine should draw the overlapping region.

Content of WIDGET_ITEM_DRAW_INFO structure:

(please refer to WIDGET_ITEM_DRAW_BACKGROUND)

WIDGET_ITEM_DRAW_TEXT

The skinning routine should draw the optional item text. The message is only send in case of an existing text.


Content of WIDGET_ITEM_DRAW_INFO structure:

(please refer to WIDGET_ITEM_DRAW_BACKGROUND)

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.13 PROGBAR_SKIN_FLEX

The following picture shows the details of the skin:

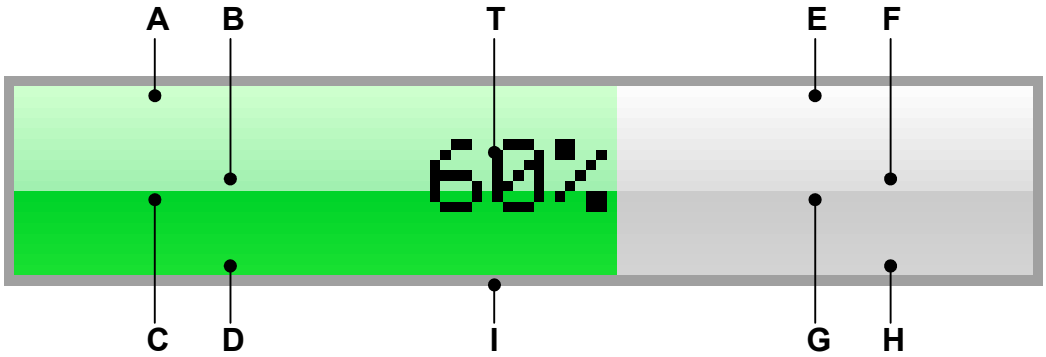

The above picture shows the details of the skin. It consists of a bar with a thin border. The background is drawn by 4 gradients, a top and a bottom gradient at the left and at the right side and a text which shows the current state per default:

Detail	Description
A	Top color of top left gradient.
B	Bottom color of top left gradient.
C	Top color of bottom left gradient.
D	Bottom color of bottom left gradient.
A	Top color of top right gradient.
B	Bottom color of top right gradient.
C	Top color of bottom right gradient.
D	Bottom color of bottom right gradient.
I	Color of frame.
T	Text (optional).

20.13.1 Configuration structure

To set up the default appearance of the skin or to change it at run time configuration structures of type `PROGBAR_SKINFLEX_PROPS` are used:

Elements of PROGBAR_SKINFLEX_PROPS

Data type	Element	Description
U32	aColorUpperL[2]	[0] - Top color of top gradient. [1] - Bottom color of top gradient.
U32	aColorLowerL[2]	[0] - Top color of bottom gradient. [1] - Bottom color of bottom gradient.
U32	aColorUpperR[2]	[0] - Top color of top gradient. [1] - Bottom color of top gradient.
U32	aColorLowerR[2]	[0] - Top color of bottom gradient. [1] - Bottom color of bottom gradient.
U32	ColorFrame	Color of frame.
U32	ColorText	Color of text.

20.13.2 Configuration options

The default appearance of the skin can be determined by setting custom configuration structures of the above type in `GUIConf.h`. The following table shows the available configuration options:

Macro	Description
PROGBAR_SKINPROPS	Defines the default attributes used for drawing the skin.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.13.3 Skinning API

The table below lists the available routines in alphabetical order:

Routine	Description
PROGBAR_DrawSkinFlex()	Skinning callback function of PROGBAR_SKIN_FLEX. (Explained at the beginning of the chapter)
PROGBAR_GetSkinFlexProps()	Returns the properties of the given PROGBAR skin. (Explained at the beginning of the chapter)
PROGBAR_SetDefaultSkin()	Sets the default skin used for new PROGBAR widgets. (Explained at the beginning of the chapter)
PROGBAR_SetDefaultSkinClassic()	Sets the classical design as default for new PROGBAR widgets. (Explained at the beginning of the chapter)
PROGBAR_SetSkin()	Sets a skin for the given PROGBAR widget. (Explained at the beginning of the chapter)
PROGBAR_SetSkinClassic()	Sets the classical design for the given PROGBAR widget. (Explained at the beginning of the chapter)
PROGBAR_SetSkinFlexProps()	Sets the properties of the given PROGBAR skin.

PROGBAR_SetSkinFlexProps()

Before	After
	

Description

The function can be used to change the colors of the skin.

Prototype

```
void PROGBAR_SetSkinFlexProps(const PROGBAR_SKINFLEX_PROPS * pProps,
                              int Index);
```

Parameter	Description
pProps	Pointer to a structure of type PROGBAR_SKINFLEX_PROPS.
Index	Should be 0.

Additional information

The function passes a pointer to a PROGBAR_SKINFLEX_PROPS structure. It can be used to set up the colors of the skin.
The function PROGBAR_GetSkinFlexProps() can be used to get the current attributes of the skin.

20.13.4 List of commands

The skinning routine receives a pointer to a WIDGET_ITEM_DRAW_INFO structure. The Cmd member of this structure contains the command which needs to be processed. The following table shows all commands passed to the PROGBAR_SKIN_FLEX callback function:

Command	Description
WIDGET_ITEM_CREATE	Is sent immediately after creating the widget.
WIDGET_ITEM_DRAW_BACKGROUND	The skinning function should draw the background.
WIDGET_ITEM_DRAW_FRAME	The skinning function should draw the frame.
WIDGET_ITEM_DRAW_TEXT	The skinning function should draw the text.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WIDGET_ITEM_CREATE

The skinning routine should, if necessary, set up skin related properties like e.g. transparency or text alignment.

WIDGET_ITEM_DRAW_BACKGROUND

The skinning routine should draw the background.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
ItemIndex	Is always 0.
x0	Leftmost coordinate of widget area in window coordinates.
y0	Topmost coordinate of widget area in window coordinates.
x1	Rightmost coordinate of widget area in window coordinates.
y1	Bottommost coordinate of widget area in window coordinates.
p	Pointer to a PROGBAR_SKINFLEX_INFO structure.

Elements of PROGBAR_SKINFLEX_INFO

Data type	Element	Description
int	IsVertical	0 if the progress bar is horizontal, 1 if it is vertical.
int	Index	(see table below)
const char *	pText	Pointer to the text to be drawn.

Permitted values for element Index	
PROGBAR_SKINFLEX_L	Horizontal progress bar: The left part should be drawn. Vertical progress bar: The top part should be drawn.
PROGBAR_SKINFLEX_R	Horizontal progress bar: The right part should be drawn. Vertical progress bar: The bottom part should be drawn.

Additional Information

The message is send twice, once for the left/top part and once for the right/bottom part of the progress bar. The information in the PROGBAR_SKINFLEX_INFO structure pointed by element p of the WIDGET_ITEM_DRAW_INFO structure can be used to get the information what exactly should be drawn. The parameters x0, y0, x1 and y1 of the WIDGET_ITEM_DRAW_INFO structure mark only the area which should be drawn, left/right or top/bottom.

WIDGET_ITEM_DRAW_FRAME

The skinning routine should draw the surrounding frame.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
ItemIndex	Is always 0.
x0	Leftmost coordinate of widget area in window coordinates.
y0	Topmost coordinate of widget area in window coordinates.
x1	Rightmost coordinate of widget area in window coordinates.
y1	Bottommost coordinate of widget area in window coordinates.

WIDGET_ITEM_DRAW_TEXT

The skinning routine should draw the text.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG


Content of WIDGET_ITEM_DRAW_INFO structure:

(please refer to `WIDGET_ITEM_DRAW_FRAME`)

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.14 RADIO_SKIN_FLEX

The following picture shows the details of the skin:

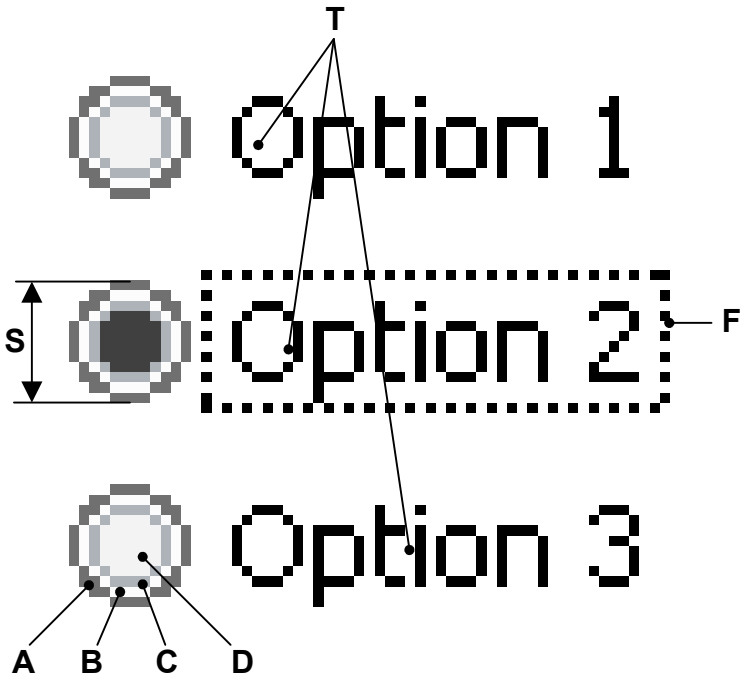

The above picture shows the details of the skin. It consists of a configurable button and a text for each item. If the widget has the input focus the currently selected item text is surrounded by a focus rectangle:

Detail	Description
A	Outer color of button frame.
B	Middle color of button frame.
C	Inner color of button frame.
D	Inner color of button.
F	Focus rectangle.
S	Size of button.
T	Item text.

20.14.1 Configuration structure

To set up the default appearance of the skin or to change it at run time configuration structures of type `RADIO_SKINFLEX_PROPS` are used:

Elements of RADIO_SKINFLEX_PROPS

Data type	Element	Description
`U32`	`aColorButton[4]`	[0] - Outer color of button frame. [1] - Middle color of button frame. [2] - Inner color of button frame. [3] - Inner color of button.
`int`	`ButtonSize`	Size of the button in pixels.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.14.2 Configuration options

The default appearance of the skin can be determined by setting custom configuration structures of the above type in GUIConf.h. The following table shows the available configuration options:



Macro	Description
RADIO_SKINPROPS_CHECKED	Defines the default attributes used for checked state.
RADIO_SKINPROPS_UNCHECKED	Defines the default attributes used for unchecked state.

20.14.3 Skinning API

The table below lists the available routines in alphabetical order:

Routine	Description
RADIO_DrawSkinFlex()	Skinning callback function of RADIO_SKIN_FLEX. (Explained at the beginning of the chapter)
RADIO_GetSkinFlexProps()	Returns the properties of the given RADIO skin. (Explained at the beginning of the chapter)
RADIO_SetDefaultSkin()	Sets the default skin used for new RADIO widgets. (Explained at the beginning of the chapter)
RADIO_SetDefaultSkinClassic()	Sets the classical design as default for new RADIO widgets. (Explained at the beginning of the chapter)
RADIO_SetSkin()	Sets a skin for the given RADIO widget. (Explained at the beginning of the chapter)
RADIO_SetSkinClassic()	Sets the classical design for the given RADIO widget. (Explained at the beginning of the chapter)
RADIO_SetSkinFlexProps()	Sets the properties of the given RADIO skin.

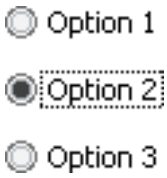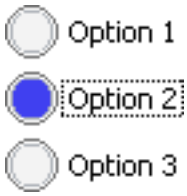RADIO_SetSkinFlexProps()

Before	After
	

Description

The function can be used to change the colors of the skin and the size of the button.

Prototype

```
void RADIO_SetSkinFlexProps(const RADIO_SKINFLEX_PROPS * pProps,
                            int Index);
```

Parameter	Description
pProps	Pointer to a structure of type RADIO_SKINFLEX_PROPS.
Index	Should be 0.

Additional information

The function passes a pointer to a RADIO_SKINFLEX_PROPS structure. It can be used to set up the colors and the button size of the skin.
The function RADIO_GetSkinFlexProps() can be used to get the current attributes of the skin.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.14.4 List of commands

The skinning routine receives a pointer to a WIDGET_ITEM_DRAW_INFO structure. The Cmd member of this structure contains the command which needs to be processed. The following table shows all commands passed to the RADIO_SKIN_FLEX callback function:

Command	Description
WIDGET_ITEM_CREATE	Is sent immediately after creating the widget.
WIDGET_ITEM_DRAW_BUTTON	The skinning function should draw the button of one item.
WIDGET_ITEM_DRAW_FOCUS	The skinning function should draw the focus rectangle.
WIDGET_ITEM_DRAW_TEXT	The skinning function should draw the text of one item.
WIDGET_ITEM_GET_BUTTONSIZE	The skinning function should return the button size.

WIDGET_ITEM_CREATE

The skinning routine should, if necessary, set up skin related properties like e.g. transparency or text alignment.

WIDGET_ITEM_DRAW_BUTTON

The skinning routine should draw the button of one item.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
ItemIndex	Index of item to be drawn.
x0	Leftmost coordinate of the button area in window coordinates.
y0	Topmost coordinate of the button area in window coordinates.
x1	Rightmost coordinate of the button area in window coordinates.
y1	Bottommost coordinate of the button area in window coordinates.

WIDGET_ITEM_DRAW_FOCUS

The skinning routine should draw the focus rectangle around the text of the currently selected item.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
ItemIndex	Index of item to be drawn.
x0	Leftmost coordinate of the focus rectangle in window coordinates.
y0	Topmost coordinate of the focus rectangle in window coordinates.
x1	Rightmost coordinate of the focus rectangle in window coordinates.
y1	Bottommost coordinate of the focus rectangle in window coordinates.

Additional Information

The given rectangular area in x0, y0, x1 and y1 considers the font settings and the item text.

WIDGET_ITEM_DRAW_TEXT

The skinning routine should draw the text of one item.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
ItemIndex	Index of item to be drawn.
x0	Leftmost coordinate of the text area in window coordinates.
y0	Topmost coordinate of the text area in window coordinates.
x1	Rightmost coordinate of the text area in window coordinates.
y1	Bottommost coordinate of the text area in window coordinates.

Additional Information

The given rectangular area in x0, y0, x1 and y1 considers the font settings and the item text.


WIDGET_ITEM_GET_BUTTONSIZE

The skinning routine should return the button size.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.15 SCROLLBAR_SKIN_FLEX

The following picture shows the details of the skin:

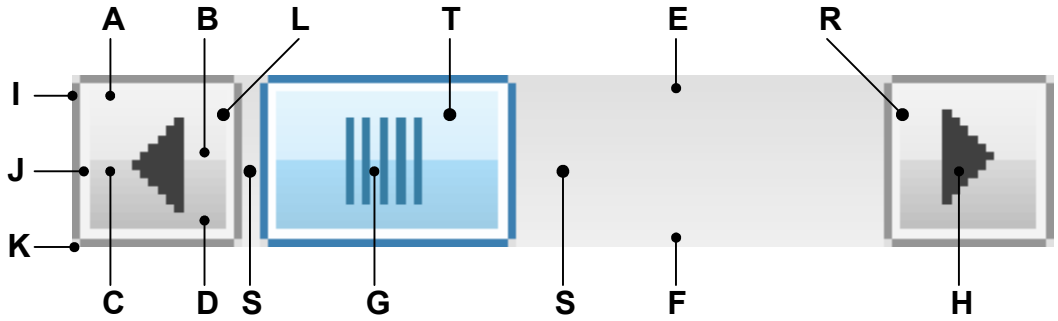

The above picture shows the details of the skin. It consists of a left and a right button with an arrow, a shaft area and a thumb with a grasp:

Detail	Description
A	Top color of top gradient.
B	Bottom color of top gradient.
C	Top color of bottom gradient.
D	Bottom color of bottom gradient.
E	Top color of shaft gradient.
F	Bottom color of shaft gradient.
G	Grasp of thumb area.
H	Button arrow.
I	Outer frame color.
J	Inner frame color.
K	Color of frame edges.
L	Left button.
T	Thumb area.
R	Right button.
S	Shaft area.

20.15.1 Configuration structure

To set up the default appearance of the skin or to change it at run time configuration structures of type `SCROLLBAR_SKINFLEX_PROPS` are used:

Elements of RADIO_SKINFLEX_PROPS

Data type	Element	Description
U32	aColorFrame[3]	[0] - Outer frame color. [1] - Inner frame color. [2] - Color of frame edges
U32	aColorUpper[2]	[0] - Top color of top gradient. [1] - Bottom color of top gradient.
U32	aColorLower[2]	[0] - Top color of bottom gradient. [1] - Bottom color of bottom gradient.
U32	aColorShaft[2]	[0] - Top color of shaft gradient. [1] - Bottom color of shaft gradient.
U32	ColorArrow	Color of button arrow.
U32	ColorGrasp	Color of grasp.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.15.2 Configuration options

The default appearance of the skin can be determined by setting custom configuration structures of the above type in GUIConf.h. The following table shows the available configuration options:

Macro	Description
SCROLLBAR_SKINPROPS_PRESSED	Defines the default attributes used for pressed state.
SCROLLBAR_SKINPROPS_UNPRESSED	Defines the default attributes used for unpressed state.

20.15.3 Skinning API

The table below lists the available routines in alphabetical order:

Routine	Description
SCROLLBAR_DrawSkinFlex()	Skinning callback function of SCROLLBAR_SKIN_FLEX. (Explained at the beginning of the chapter)
SCROLLBAR_GetSkinFlexProps()	Returns the properties of the given SCROLLBAR skin. (Explained at the beginning of the chapter)
SCROLLBAR_SetDefaultSkin()	Sets the default skin used for new SCROLLBAR widgets. (Explained at the beginning of the chapter)
SCROLLBAR_SetDefaultSkinClassic()	Sets the classical design as default for new SCROLLBAR widgets. (Explained at the beginning of the chapter)
SCROLLBAR_SetSkin()	Sets a skin for the given SCROLLBAR widget. (Explained at the beginning of the chapter)
SCROLLBAR_SetSkinClassic()	Sets the classical design for the given SCROLLBAR widget. (Explained at the beginning of the chapter)
SCROLLBAR_SetSkinFlexProps()	Sets the properties of the given SCROLLBAR skin.

SCROLLBAR_SetSkinFlexProps()

Before	After
	

Description

The function can be used to change the colors of the skin.

Prototype

```
void SCROLLBAR_SetSkinFlexProps(const SCROLLBAR_SKINFLEX_PROPS * pProps,
                                int Index);
```

Parameter	Description
pProps	Pointer to a structure of type SCROLLBAR_SKINFLEX_PROPS.
Index	(see table below).

Permitted values for parameter Index	
SCROLLBAR_SKINFLEX_PI_PRESSED	Properties for pressed state.
SCROLLBAR_SKINFLEX_PI_UNPRESSED	Properties for unpressed state.

Additional information

The function passes a pointer to a SCROLLBAR_SKINFLEX_PROPS structure. It can be used to set up the colors of the skin.
The function SCROLLBAR_GetSkinFlexProps() can be used to get the current attributes of the skin.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.15.4 List of commands

The skinning routine receives a pointer to a WIDGET_ITEM_DRAW_INFO structure. The Cmd member of this structure contains the command which needs to be processed. The following table shows all commands passed to the SCROLLBAR_SKIN_FLEX callback function:

Command	Description
WIDGET_ITEM_CREATE	Is sent immediately after creating the widget.
WIDGET_ITEM_DRAW_BUTTON_L	The skinning function should draw the left button.
WIDGET_ITEM_DRAW_BUTTON_R	The skinning function should draw the right button.
WIDGET_ITEM_DRAW_OVERLAP	The skinning function should draw the overlapping area.
WIDGET_ITEM_DRAW_SHAFT_L	The skinning function should draw the left part of the shaft.
WIDGET_ITEM_DRAW_SHAFT_R	The skinning function should draw the right part of the shaft.
WIDGET_ITEM_DRAW_THUMB	The skinning function should draw the thumb.
WIDGET_ITEM_GET_BUTTONSIZE	The skinning function should return the button size.

WIDGET_ITEM_DRAW_BUTTON_L, WIDGET_ITEM_DRAW_BUTTON_R

The skinning routine should draw a button.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
ItemIndex	Index of item to be drawn.
x0	Leftmost coordinate of the button in window coordinates.
y0	Topmost coordinate of the button in window coordinates.
x1	Rightmost coordinate of the button in window coordinates.
y1	Bottommost coordinate of the button in window coordinates.
p	Pointer to a SCROLLBAR_SKINFLEX_INFO structure.

Elements of SCROLLBAR_SKINFLEX_INFO

Data type	Element	Description
int	IsVertical	0 if the progress bar is horizontal, 1 if it is vertical.
int	State	(see table below)

Permitted values for element State	
PRESSED_STATE_NONE	Nothing is pressed.
PRESSED_STATE_RIGHT	The right button is pressed.
PRESSED_STATE_LEFT	The left button is pressed.
PRESSED_STATE_THUMB	The thumb is pressed.

WIDGET_ITEM_DRAW_OVERLAP

The skinning routine should draw the thumb.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
ItemIndex	Index of item to be drawn.
x0	Leftmost coordinate of the overlapping area in window coordinates.
y0	Topmost coordinate of the overlapping area in window coordinates.
x1	Rightmost coordinate of the overlapping area in window coordinates.
y1	Bottommost coordinate of the overlapping area in window coordinates.

Additional information

An overlapping area can exist if a dialog has a vertical and a horizontal scrollbar at the borders. Normally the overlapping region looks identically to the shaft area.

Example

The following screenshot shows a window with 2 scrollbars which have an overlapping region at the lower right corner of the client window:



WIDGET_ITEM_DRAW_SHAFT_L, WIDGET_ITEM_DRAW_SHAFT_R

The skinning routine should draw a shaft area.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
ItemIndex	Index of item to be drawn.
x0	Leftmost coordinate of the shaft area in window coordinates.
y0	Topmost coordinate of the shaft area in window coordinates.
x1	Rightmost coordinate of the shaft area in window coordinates.
y1	Bottommost coordinate of the shaft area in window coordinates.

WIDGET_ITEM_DRAW_THUMB

The skinning routine should draw the thumb.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
ItemIndex	Index of item to be drawn.
x0	Leftmost coordinate of the thumb area in window coordinates.
y0	Topmost coordinate of the thumb area in window coordinates.
x1	Rightmost coordinate of the thumb area in window coordinates.
y1	Bottommost coordinate of the thumb area in window coordinates.
p	Pointer to a SCROLLBAR_SKINFLEX_INFO structure.

Elements of SCROLLBAR_SKINFLEX_INFO

Please refer to WIDGET_ITEM_DRAW_BUTTON_L.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WIDGET_ITEM_GET_BUTTONSIZE

The skinning routine should return the button size. The button size means the following:

- A horizontal scrollbar should return the height of the scrollbar.
- A vertical scrollbar should return the width of the scrollbar.

Example

The following code can be used to return the right values in most cases:


```
int _SkinningCallback(const WIDGET_ITEM_DRAW_INFO * pDrawItemInfo) {
  SCROLLBAR_SKINFLEX_INFO * pSkinInfo;

  pSkinInfo = (SCROLLBAR_SKINFLEX_INFO *)pDrawItemInfo->p;
  switch (pDrawItemInfo->Cmd) {
  case WIDGET_ITEM_GET_BUTTONSIZE:
    return (pSkinInfo->IsVertical) ?
           pDrawItemInfo->x1 - pDrawItemInfo->x0 + 1 :
           pDrawItemInfo->y1 - pDrawItemInfo->y0 + 1;
    ...
  }
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.16 SLIDER_SKIN_FLEX

The following picture shows the details of the skin:

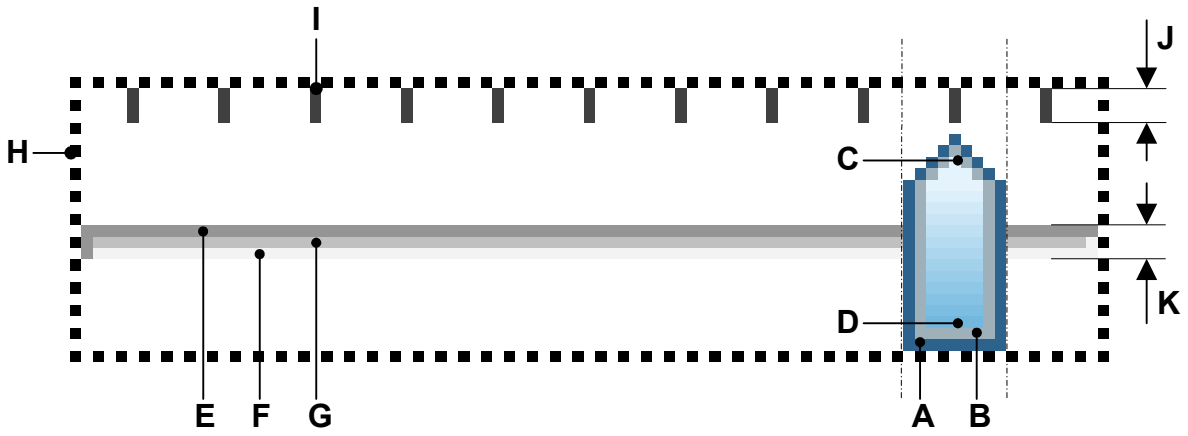

The above picture shows the details of the skin. It consists of a shaft with slider and tick marks above. Further a focus rectangle is shown if the widget has the input focus. The slider is drawn by a frame and a gradient:

Detail	Description
A	Outer color of slider frame.
B	Inner color of slider frame
C	Top color of gradient.
D	Bottom color of gradient.
E	First color of shaft.
F	Second color of shaft.
G	Third color of shaft.
H	Focus rectangle.
I	Tick marks.
J	Size of a tick mark.
K	Size of the shaft.

20.16.1 Configuration structure

To set up the default appearance of the skin or to change it at run time configuration structures of type `SLIDER_SKINFLEX_PROPS` are used:

Elements of RADIO_SKINFLEX_PROPS

Data type	Element	Description
U32	aColorFrame[2]	[0] - Outer frame color. [1] - Inner frame color.
U32	aColorInner[2]	[0] - Top color of gradient. [1] - Bottom color of gradient.
U32	aColorShaft[3]	[0] - First frame color of shaft. [1] - Second frame color of shaft. [2] - Inner color of shaft.
U32	ColorTick	Color of tick marks.
U32	ColorFocus	Color of focus rectangle.
int	TickSize	Size of tick marks.
int	ShaftSize	Size of shaft.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.16.2 Configuration options

The default appearance of the skin can be determined by setting custom configuration structures of the above type in GUIConf.h. The following table shows the available configuration options:


Macro	Description
SLIDER_SKINPROPS_PRESSED	Defines the default attributes used for pressed state.
SLIDER_SKINPROPS_UNPRESSED	Defines the default attributes used for unpressed state.

20.16.3 Skinning API

The table below lists the available routines in alphabetical order:

Routine	Description
SLIDER_DrawSkinFlex()	Skinning callback function of SLIDER_SKIN_FLEX. (Explained at the beginning of the chapter)
SLIDER_GetSkinFlexProps()	Returns the properties of the given SLIDER skin. (Explained at the beginning of the chapter)
SLIDER_SetDefaultSkin()	Sets the default skin used for new SLIDER widgets. (Explained at the beginning of the chapter)
SLIDER_SetDefaultSkinClassic()	Sets the classical design as default for new SLIDER widgets. (Explained at the beginning of the chapter)
SLIDER_SetSkin()	Sets a skin for the given SLIDER widget. (Explained at the beginning of the chapter)
SLIDER_SetSkinClassic()	Sets the classical design for the given SLIDER widget. (Explained at the beginning of the chapter)
SLIDER_SetSkinFlexProps()	Sets the properties of the given SLIDER skin.

SLIDER_SetSkinFlexProps()

Before	After
	

Description

The function can be used to change colors, tick mark and shaft size of the skin.

Prototype

```
void SLIDER_SetSkinFlexProps(const SLIDER_SKINFLEX_PROPS * pProps,
                             int Index);
```

Parameter	Description
pProps	Pointer to a structure of type SLIDER_SKINFLEX_PROPS.
Index	(see table below).

Permitted values for parameter Index	
SLIDER_SKINFLEX_PI_PRESSED	Properties for pressed state.
SLIDER_SKINFLEX_PI_UNPRESSED	Properties for unpressed state.

Additional information

The function passes a pointer to a SLIDER_SKINFLEX_PROPS structure. It can be used to set up the colors of the skin.
The function SLIDER_GetSkinFlexProps() can be used to get the current attributes of the skin.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

20.16.4 List of commands

The skinning routine receives a pointer to a WIDGET_ITEM_DRAW_INFO structure. The Cmd member of this structure contains the command which needs to be processed. The following table shows all commands passed to the SLIDER_SKIN_FLEX callback function:

Command	Description
WIDGET_ITEM_CREATE	Is sent immediately after creating the widget.
WIDGET_ITEM_DRAW_FOCUS	The skinning function should draw the focus rectangle.
WIDGET_ITEM_DRAW_SHAFT	The skinning function should draw the shaft.
WIDGET_ITEM_DRAW_THUMB	The skinning function should draw the slider.
WIDGET_ITEM_DRAW_TICKS	The skinning function should draw the tick marks.

WIDGET_ITEM_CREATE

The skinning routine should, if necessary, set up skin related properties like e.g. transparency or text alignment.

WIDGET_ITEM_DRAW_FOCUS

The skinning routine should draw the focus rectangle.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
ItemIndex	Index of item to be drawn.
x0	Leftmost coordinate of the widget in window coordinates.
y0	Topmost coordinate of the widget in window coordinates.
x1	Rightmost coordinate of the widget in window coordinates.
y1	Bottommost coordinate of the widget in window coordinates.

WIDGET_ITEM_DRAW_SHAFT

The skinning routine should draw the shaft.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
ItemIndex	Index of item to be drawn.
x0	Leftmost coordinate of the widget + 1 in window coordinates.
y0	Topmost coordinate of the widget + 1 in window coordinates.
x1	Rightmost coordinate of the widget - 1 in window coordinates.
y1	Bottommost coordinate of the widget - 1 in window coordinates.

WIDGET_ITEM_DRAW_THUMB

The skinning routine should draw the slider itself.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
ItemIndex	Index of item to be drawn.
x0	Leftmost coordinate of the slider in window coordinates.
y0	Topmost coordinate of the slider in window coordinates.
x1	Rightmost coordinate of the slider in window coordinates.
y1	Bottommost coordinate of the slider in window coordinates.
p	Pointer to a SLIDER_SKINFLEX_INFO structure.

Elements of SLIDER_SKINFLEX_INFO

Data type	Element	Description
int	Width	With of the slider.
int	IsPressed	1 if the slider is pressed, 0 if not.
int	IsVertical	0 if the slider is horizontal, 1 if it is vertical.

WIDGET_ITEM_DRAW_TICKS

The skinning routine should draw the tick marks.

Content of WIDGET_ITEM_DRAW_INFO structure:

Element	Description
hWin	Handle to the widget.
ItemIndex	Index of item to be drawn.
x0	Leftmost coordinate of the widget + 1 in window coordinates.
y0	Topmost coordinate of the widget + 1 in window coordinates.
x1	Rightmost coordinate of the widget - 1 in window coordinates.
y1	Bottommost coordinate of the widget - 1 in window coordinates.
p	Pointer to a SLIDER_SKINFLEX_INFO structure.

Elements of SLIDER_SKINFLEX_INFO

Data type	Element	Description
int	Width	With of the slider.
int	NumTicks	Number of ticks to be drawn.
int	Size	Length of the tick mark line.
int	IsPressed	1 if the slider is pressed, 0 if not.
int	IsVertical	0 if the slider is horizontal, 1 if it is vertical.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 21

Multiple buffering

Multiple buffering is a method of using more than one frame buffer. Basically it works as follows: With multiple buffers enabled there is a front buffer which is used by the display controller to generate the picture on the screen and one or more back buffers which are used for the drawing operations. After completing the drawing operations the back buffer becomes the visible front buffer.

With two buffers, one front and one back buffer, it is normally called ’double buffering’, with two back buffers and one front buffer it is called ’triple buffering’.

In general it is a method which is able to avoid several unwanted effects:

- The visible process of drawing a screen item by item
- Flickering effects caused by overlapping drawing operations
- Tearing effects caused by writing operations outside the vertical blanking period

The following section explains in detail how it works, the requirements to be able to use this feature, how to configure emWin and the advantage of ’triple buffering’ against ’double buffering’. Further it explains how to configure the optional window manager for automatic use of ’multiple buffering’.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

21.1 How it works

Multiple buffering is the use of more than one frame buffer, so that the display ever shows a screen which is already completely rendered, even if a drawing operation is in process. When starting the process of drawing the current content of the front buffer is copied into a back buffer. After that all drawing operations take effect only on this back buffer. After the drawing operation has been completed the back buffer becomes the front buffer. Making the back buffer the visible front buffer normally only requires the modification of the frame buffer start address register of the display controller.
Now it should be considered that a display is being refreshed continuously by the display controller app. 60 times per second. After each period there is a vertical synchronization signal, normally known as VSYNC signal. The best moment to make the back buffer the new front buffer is this signal. If not considering the VSYNC signal tearing effects can occur.

Tearing effect:



21.1.1 Double buffering

With double buffering only 2 buffers are available: One front and one back buffer. When starting the drawing operation the current content of the front buffer is copied into the back buffer. After completing the operation the back buffer should become the visible front buffer.
As explained above the best moment for doing this is reacting on the VSYNC signal of the display controller. Here the disadvantage of double buffering against triple buffering is revealed: Either the frame buffer start address is changed immediately at the end of the drawing operation or after waiting until the next VSYNC signal. This means that either tearing effects could occur or the performance slows down because of waiting for the next VSYNC signal.

21.1.2 Triple buffering

As the name implies there are 3 buffers available: One front and 2 back buffers. When starting the drawing operation the current content of the front buffer is copied into the first back buffer. After completing the operation the back buffer should become the visible front buffer. Contrary to the double buffer solution it is not required to switch to the buffer immediately. Switching to the new front buffer could be done on the next VSYNC signal of the display controller which can be achieved by an interrupt service routine (ISR). Most of the display controllers which are able to deal with more than one frame buffer provide the VSYNC signal as interrupt source. Within the ISR the pending front buffer should become visible. Until the pending front buffer becomes visible it is not used for further drawing operations. If a further drawing operation is initiated before the pending front buffer has become visible the sec-

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

ond back buffer is used for the drawing operation. If a new buffer is ready until waiting for the VSYNC signal it becomes the new pending front buffer and so on. This always protects the front buffer against writing operations.
It should be mentioned that changing the display buffer start address on some display controllers takes only effect when drawing the next frame. In this case the solution without ISR works as well as without ISR. Only if changing the address takes effect directly an ISR is required to avoid tearing effects.

21.2 Requirements

The following list shows the requirements for using multiple buffers:

- The display controller should support multiple frame buffers.
- Enough video RAM for multiple frame buffers should be available.
- If tearing effects should be avoided it should be possible to react on the VSYNC signal of the display controller and triple buffering is recommended to achieve the best performance.

21.3 Limitations

Unfortunately it is not possible to use virtual screens together with multiple buffer support.

21.4 Configuration

In general there are 2 routines in the configuration file `LCDConf.c` which need to be modified, the display configuration routine `LCD_X_Config()` and the driver callback function `LCD_X_DisplayDriver()`.

21.4.1 LCD_X_Config()

Basically one thing needs to be done here: Enabling the use of multiple buffers.

Basic configuration

The first thing which has to be done before creating the display driver device is configuring the multiple buffer interface. This is normally done in `LCD_X_Config()`. It is strictly required to enable multiple buffering before creating the display driver device as shown in the following code snippet:

```
void LCD_X_Config(void) {
  //
  // Initialize multibuffering
  //
  GUI_MULTIBUF_Config(NUM_BUFFERS);
  //
  // Set display driver and color conversion
  //
  GUI_DEVICE_CreateAndLink(DISPLAY_DRIVER, COLOR_CONVERSION, 0, 0);
  ...
}
```

Custom callback routine for copying the buffers

Further a callback routine for copying the buffers can be set. As explained above at the beginning of the drawing operation it is required to copy the content of the current front buffer to the back buffer. Normally a simple memcpy operation is used to do this. But if the used display controller for example consists of a BitBLT-engine which is able to do the copy operation it could be desired to use it for the copy operation. Or a DMA based routine should be used to do the copy operation. In these cases a custom defined callback function can be used for this operation. It can be installed after creating the display driver device as shown in the following code snippet:

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
static void _CopyBuffer(int LayerIndex, int IndexSrc, int IndexDst) {
  unsigned long BufferSize, AddrSrc, AddrDst;

  //
  // Calculate the size of one frame buffer
  //
  BufferSize = (XSIZE * YSIZE * BITSPERPIXEL) / 8;
  //
  // Calculate source- and destination address
  //
  AddrSrc    = _VRamBaseAddr + BufferSize * IndexSrc;
  AddrDst    = _VRamBaseAddr + BufferSize * IndexDst;
  memcpy((void *)AddrDst, (void *)AddrSrc, BufferSize);
}

void LCD_X_Config(void) {
  //
  // Initialize multibuffering
  //
  GUI_MULTIBUF_Config(NUM_BUFFERS);
  //
  // Set display driver and color conversion
  //
  GUI_DEVICE_CreateAndLink(DISPLAY_DRIVER, COLOR_CONVERSION, 0, 0);
  //
  // Set custom callback function for copy operation
  //
  LCD_SetDevFunc(0, LCD_DEVFUNC_COPYBUFFER, (void (*)())_CopyBuffer);
}
```

Please note that the above sample implementation normally makes no sense, because a simple `memcpy()` operation is the default behavior of the driver. It makes only sense to use a custom callback function if there is any acceleration option which should be used.

21.4.2 LCD_X_DisplayDriver()

After the drawing process has been completed the back buffer should become visible. The display driver sends a `LCD_X_SHOWBUFFER` command to the display driver callback function. The callback function then has to react on the command and should make sure that the buffer becomes visible. This can be done either by an ISR or by directly writing the right address into the frame buffer start address of the display controller.

With ISR

The following code snippet shows a sample implementation:

```
static void _ISR_EndOfFrame(void) {
  unsigned long Addr, BufferSize;

  if (_PendingBuffer >= 0) {
    //
    // Calculate address of the given buffer
    //
    BufferSize = (XSIZE * YSIZE * BITSPERPIXEL) / 8;
    Addr       = _VRamBaseAddr + BufferSize * pData->Index;
    //
    // Make the given buffer visible
    //
    AT91C_LCDC_BA1 = Addr;
    //
    // Send a confirmation that the buffer is visible now
    //
    GUI_MULTIBUF_Confirm(_PendingBuffer);
    _PendingBuffer = -1;
  }
}

int LCD_X_DisplayDriver(unsigned LayerIndex, unsigned Cmd, void * p) {
  switch (Cmd) {
  case LCD_X_SHOWBUFFER: {
      LCD_X_SHOWBUFFER_INFO * pData;

      pData = (LCD_X_SHOWBUFFER_INFO *)p;
      //
      // Remember buffer index to be used by ISR
      //
      _PendingBuffer = pData->Index;
    }
    break;
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
  ...
  }
}
```

The above implementation assumes the existence of an ISR which is executed at the next VSYNC signal.

Without ISR

If there is no ISR available alternatively the address can be set directly with the disadvantage that tearing effects could occur.
The following code snippet shows a sample implementation:

```
int LCD_X_DisplayDriver(unsigned LayerIndex, unsigned Cmd, void * p) {
  unsigned long Addr, BufferSize;

  switch (Cmd) {
  ...
  case LCD_X_SHOWBUFFER: {
      LCD_X_SHOWBUFFER_INFO * pData;

      pData = (LCD_X_SHOWBUFFER_INFO *)p;
      //
      // Calculate address of the given buffer
      //
     BufferSize = (XSIZE * YSIZE * BITSPERPIXEL) / 8;
     Addr       = _VRamBaseAddr + BufferSize * pData->Index;
      //
      // Make the given buffer visible
      //
      AT91C_LCDC_BA1 = Addr;
      //
      // Send a confirmation that the buffer is visible now
      //
      GUI_MULTIBUF_Confirm(pData->Index);
    }
    break;
  ...
  }
}
```

21.5 Automatic use of multiple buffers with the WM

The optional window manager (WM) is able to use the multiple buffer feature automatically. The function `WM_MULTIBUF_Enable()` can be used to enable this function. If enabled the WM first switches to the back buffer before redrawing the invalid windows. After drawing all invalid windows the new screen becomes visible. This hides the process of drawing a screen window by window.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

21.6 Multiple buffer API

The following table lists the available routines of the multiple buffer support.

Routine	Description
Basic functions	
GUI_MULTIBUF_Begin()	Needs be called before starting the drawing operation.
GUI_MULTIBUF_BeginEx()	Same as above except the parameter LayerIndex.
GUI_MULTIBUF_Config()	Needs to be called to configure the use of multiple buffers.
GUI_MULTIBUF_ConfigEx()	Same as above except the parameter LayerIndex.
GUI_MULTIBUF_Confirm()	Should be called immediately after the pending front buffer has become visible.
GUI_MULTIBUF_ConfirmEx()	Same as above except the parameter LayerIndex.
GUI_MULTIBUF_End()	Needs be called after completing the drawing operation.
GUI_MULTIBUF_EndEx()	Same as above except the parameter LayerIndex.
GUI_MULTIBUF_GetNumBuffers()	Returns the number of used buffers.
GUI_MULTIBUF_GetNumBuffersEx()	Same as above except the parameter LayerIndex.
GUI_MULTIBUF_UseSingleBuffer()	Lets the multi buffering use one frame for all layers.
Optional window manager functions	
WM_MULTIBUF_Enable()	Enables or disables the automatic use of multiple buffers by the optional WM.

(The interface of the above routines may be changed in a later version)

GUI_MULTIBUF_Begin()

Description

Needs to be called immediately before the drawing operation.

Prototype

```
void GUI_MULTIBUF_Begin(void);
```

Additional information

This function makes sure that the current front buffer will be copied into the back buffer which then is used for all subsequent drawing operations. The copy operation is normally done by the display driver itself. As explained earlier this can also be achieved by a custom callback function.

GUI_MULTIBUF_BeginEx()

Description

For details please refer to GUI_MULTIBUF_Begin().

Prototype

```
void GUI_MULTIBUF_BeginEx(int LayerIndex);
```

Parameter	Description
LayerIndex	Layer to be used.

GUI_MULTIBUF_Config()

Description

The function needs to be called during the process of initialization, typically from within LCD_X_Config() to enable the use of multiple buffers.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void GUI_MULTIBUF_Config(int NumBuffers);
```

Parameter	Description
NumBuffers	Number of buffers to be used. The following numbers make sense: 2 - Double buffering 3 - Triple buffering

Additional information

The function needs to be called before creating the display driver device.

GUI_MULTIBUF_ConfigEx()

Description

For details please refer to GUI_MULTIBUF_Config().

Prototype

```
void GUI_MULTIBUF_ConfigEx(int LayerIndex, int NumBuffers);
```

Parameter	Description
LayerIndex	Layer to be used.
NumBuffers	Number of buffers to be used. The following numbers make sense: 2 - Double buffering 3 - Triple buffering

GUI_MULTIBUF_Confirm()

Description

This function needs to be called immediately after a new buffer has become visible.

Prototype

```
void GUI_MULTIBUF_Confirm(int Index);
```

Parameter	Description
Index	Index of buffer which has been made visible.

Additional information

The function is typically called by the ISR which switches to the new front buffer or by the display driver callback function.

GUI_MULTIBUF_ConfirmEx()

Description

For details please refer to GUI_MULTIBUF_Confirm().

Prototype

```
void GUI_MULTIBUF_ConfirmEx(int LayerIndex, int BufferIndex);
```

Parameter	Description
LayerIndex	Layer to be used.
Index	Index of buffer which has been made visible.

GUI_MULTIBUF_End()

Description

This function needs to be called after the new screen has been completely drawn.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void GUI_MULTIBUF_End(void);
```

Additional information

When calling this function the display driver sends a LCD_X_SHOWBUFFER command to the display driver callback routine which then has to make the given buffer the front buffer.

GUI_MULTIBUF_EndEx()

Description

For details please refer to GUI_MULTIBUF_End().

Prototype

```
void GUI_MULTIBUF_EndEx(int LayerIndex);
```

Parameter	Description
LayerIndex	Layer to be used.

GUI_MULTIBUF_GetNumBuffers()

Description

The function returns the number of buffers configured for the current layer.

Prototype

```
int GUI_MULTIBUF_GetNumBuffers(void);
```

Return value

The number of buffers configured for the current layer.

GUI_MULTIBUF_GetNumBuffersEx()

Description

For details please refer to GUI_MULTIBUF_GetNumBuffers().

Prototype

```
int GUI_MULTIBUF_GetNumBuffersEx(int LayerIndex);
```

Parameter	Description
LayerIndex	Layer to be used.

Return value

The number of buffers configured for the specified layer.

GUI_MULTIBUF_UseSingleBuffer()

Description

Lets the multi buffering use one frame for all layers.

Prototype

```
void GUI_MULTIBUF_UseSingleBuffer(void);
```

Additional information

The function needs to be called before creating the display driver device.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

WM_MULTIBUF_Enable()

Description

The routine can be used to enable the automatic use of multiple buffers as explained earlier at the beginning.

Prototype

```
int WM_MULTIBUF_Enable(int OnOff);
```

Parameter	Description
OnOff	1 for enabling the automatic use of multiple buffers, 0 for disabling.

Return value

Previous state.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 22

Virtual screen / Virtual pages

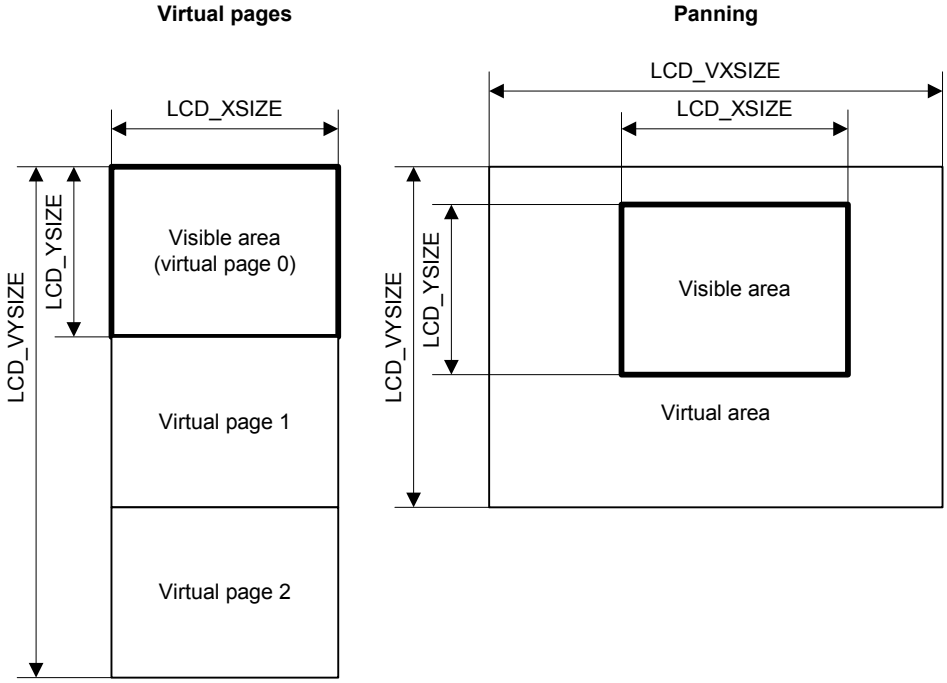
A virtual screen means a display area greater than the physical size of the display. It requires additional video memory and allows instantaneous switching between different screens even on slow CPUs. The following chapter shows

- the requirements for using virtual screens,
- how to configure emWin
- and how to take advantage of virtual screens.

If a virtual display area is configured, the visible part of the display can be changed by setting the origin.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

22.1 Introduction



The virtual screen support of emWin can be used for panning or for switching between different video pages.

Panning

If the application uses one screen which is larger than the display, the virtual screen API functions can be used to make the desired area visible.

Virtual pages

Virtual pages are a way to use the display RAM as multiple pages. If an application for example needs 3 different screens, each screen can use its own page in the display RAM. In this case, the application can draw the second and the third page before they are used. After that the application can switch very fast between the different pages using the virtual screen API functions of emWin. The only thing the functions have to do is setting the right display start address for showing the desired screen. In this case the virtual Y-size typically is a multiple of the display size in Y.

22.2 Requirements

The virtual screen feature requires hardware with more display RAM than required for a single screen and the ability of the hardware to change the start position of the display output.

Video RAM

The used display controller should support video RAM for the virtual area. For example if the display has a resolution of 320x240 and a color depth of 16 bits per pixel and 2 screens should be supported, the required size of the video RAM can be calculated as follows:

Size = LCD_XSIZE * LCD_YSIZE * LCD_BITSPERPIXEL / 8 * NUM_SCREENS
Size = 320 x 240 x 16 / 8 x 2
Size = 307200 Bytes

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Configurable display start position

The used display controller needs a configurable display start position. This means the display driver even has a register for setting the frame buffer start address or it has a command to set the upper left display start position.

22.3 Configuration

Virtual screens should be configured during the initialization. The function `LCD_SetVSizeEx()` needs to be used to define the virtual display size. Further it is required to react on the command `LCD_X_SETORG` in the driver callback routine by setting the right frame buffer start address.

LCD_SetVSizeEx()

Description

Sets the virtual display size.

Prototype

```
int LCD_SetVSizeEx(int LayerIndex, int xSize, int ySize);
```

Parameter	Description
LayerIndex	Zero based layer index, typically 0 on single layer systems.
xSize	Horizontal resolution of virtual display.
ySize	Vertical resolution of virtual display.

Return value

0 on success, 1 on error.

22.4 Examples

In the following a few examples are shown to make clear how to use virtual screens with emWin.

22.4.1 Basic example

The following example shows how to use a virtual screen of 128x192 and a display of 128x64 for instantaneous switching between 3 different screens.

Configuration

```
LCD_SetSizeEx (0, 128,  64);
LCD_SetVSizeEx(0, 128, 192);
```

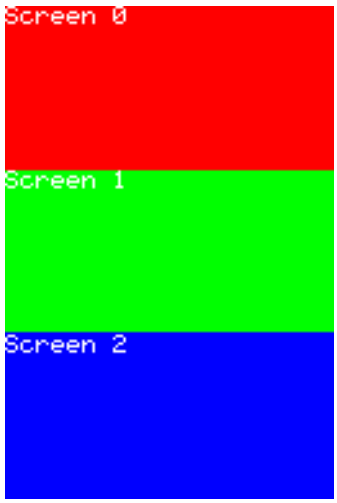
Application

```
  GUI_SetColor(GUI_RED);
  GUI_FillRect(0,   0, 127,  63);
  GUI_SetColor(GUI_GREEN);
  GUI_FillRect(0,  64, 127, 127);
  GUI_SetColor(GUI_BLUE);
  GUI_FillRect(0, 128, 127, 191);
  GUI_SetColor(GUI_WHITE);
  GUI_SetTextMode(GUI_TM_TRANS);
  GUI_DispStringAt("Screen 0", 0,   0);
  GUI_DispStringAt("Screen 1", 0,  64);
  GUI_DispStringAt("Screen 2", 0, 128);
  GUI_SetOrg(0,  64); /* Set origin to screen 1 */
  GUI_SetOrg(0, 128); /* Set origin to screen 2 */
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Output



The table below shows the output of the display:

Description	Display output	Contents of virtual area
Before executing `GUI_SetOrg(0,  64)`		
After executing `GUI_SetOrg(0,  64)`		
After executing `GUI_SetOrg(0, 128)`		

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG


22.4.2 Real time example using the window manager

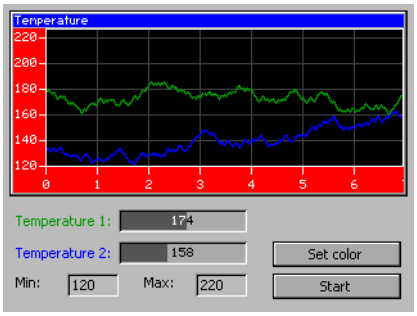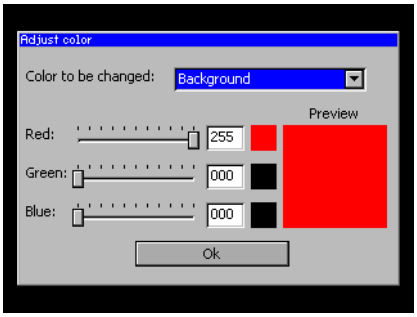The shipment of emWin contains an example which shows how to use virtual screens in a real time application. It can be found under `Sample\Tutorial\VSCREEN_RealTime.c`:

Screen 0 / Page 0	Screen 1 / Page 1
	

After showing a short introduction, the example creates 2 screens on 2 separate pages as shown above. The first screen shows a dialog which includes a graphical representation of 2 temperature curves. When pressing the 'Set color' button, the application switches instantaneously to the second screen, even on slow CPUs. After pressing the 'OK' button of the 'Adjust color' dialog, the application switches back to the first screen.
For more details, see the source code of the example.

Viewer Screenshot of the above example




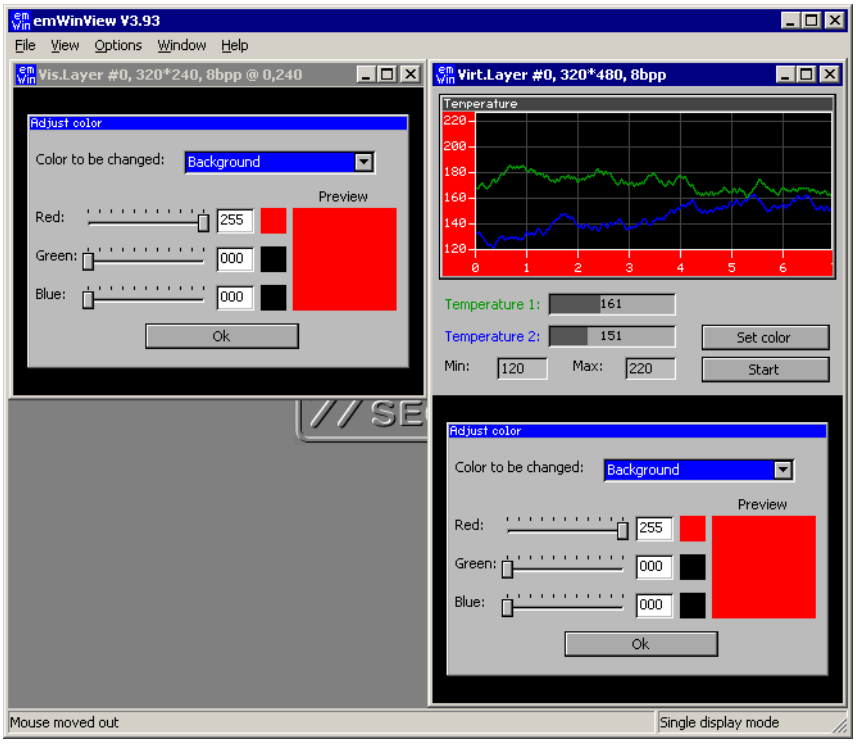


If using the viewer both screens can be shown at the same time. The screenshot above shows the visible display at the left side and the contents of the whole configured virtual display RAM at the right side.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

22.4.3 Dialog example using the window manager

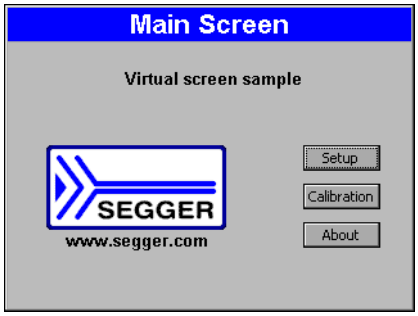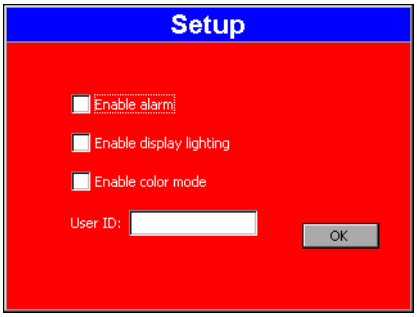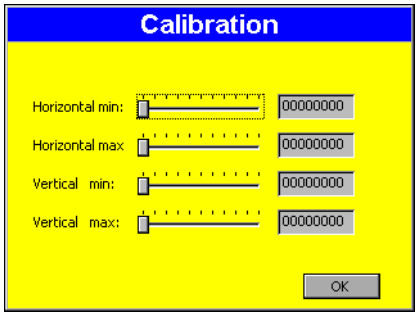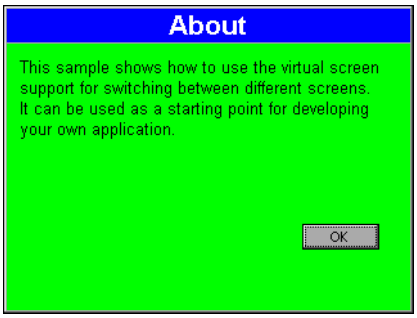
The second advanced example is available in the folder `Sample\GUI\VSCREEN_MultiPage`. It uses the virtual screen to show 4 screens on 3 different video pages. The application consists of the following screens:

Main screen / Page 0	Setup screen / Page 1
	
Calibration screen / Page 2	**About screen / Page 2**
	

After a short intro screen the 'Main Screen' is shown on the display using page 0. After the 'Setup' button is pressed, the 'Setup' screen is created on page 1. After the screen has been created, the application makes the screen visible by switching to page 1. The 'Calibration' and the 'About' screen both use page 2. If the user presses one of the buttons 'Calibration' or 'About' the application switches to page 2 and shows the dialog.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Viewer Screenshot of the above example

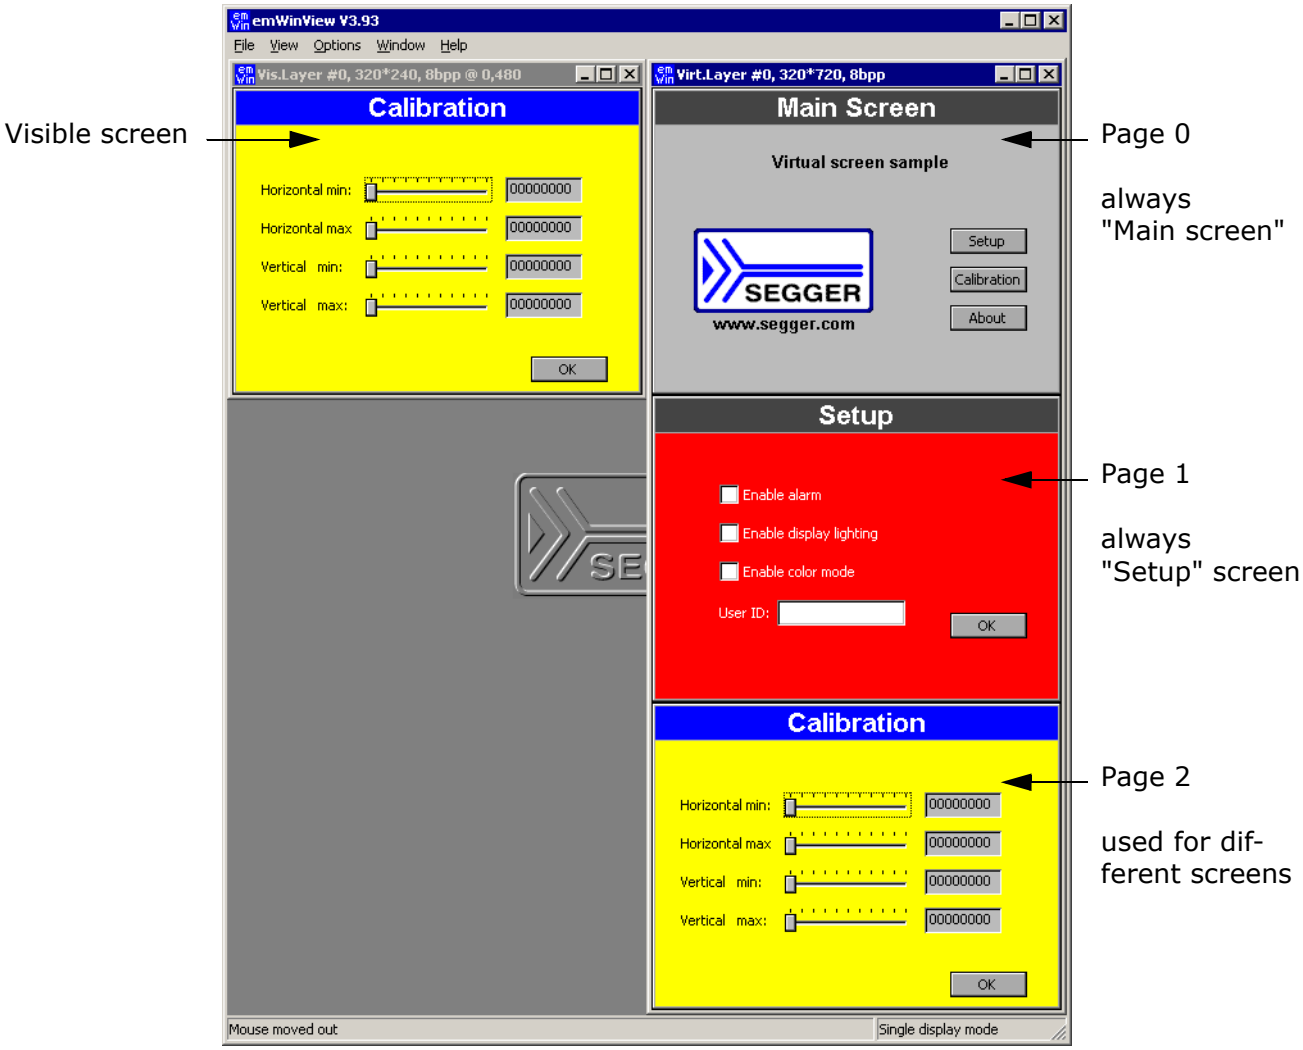

The viewer can show all pages at the same time. The screenshot above shows the visible display at the left side and the contents of the whole layer (virtual display RAM) with the pages 0 - 2 at the right side.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

22.5 Virtual screen API

The following table lists the available routines of the virtual screen support.

Routine	Description
GUI_GetOrg()	Returns the display start position.
GUI_SetOrg()	Sets the display start position.

GUI_GetOrg()

Description

Returns the display start position.

Prototype

```
void GUI_GetOrg(int * px, int * py);
```

Parameter	Description
px	Pointer to variable of type int to store the X position of the display start position.
py	Pointer to variable of type int to store the Y position of the display start position.

Additional information

The function stores the current display start position into the variables pointed by the given pointers.

GUI_SetOrg()

Description

Sets the display start position.

Prototype

```
void GUI_SetOrg(int x, int y);
```

Parameter	Description
x	New X position of the display start position.
y	New Y position of the display start position.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 23

Multi layer / multi display support

If more than 1 display should be accessed or the display controller supports more than 1 layer (and more than one layer should be used) multi layer support of emWin is required.
Multi layer support and multi display support work the same way. Each layer / display can be accessed with its own color settings, its own size and its own display driver. Initialization of more than one layer is quite simple: The maximum number of available layers `GUI_NUM_LAYERS` should be defined in `GUIConf.h` and each layer needs a display driver device which should be created during the initialization in the configuration routine `LCD_X_Config()`. There is no limitation regarding the maximum number of available layers.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

23.1 Introduction

Windows can be placed in any layer or display, drawing operations can be used on any layer or display. Since there are really only smaller differences from this point of view, multiple layers and multiple displays are handled the same way (Using the same API routines) and are simply referred to as multiple layers, even if the particular embedded system uses multiple displays. The emWin viewer allows you to look at every individual layer (display), but in the case of multiple layer systems also to look at the actual output (the composite view). Currently systems with multiple displays and multiple layers can be used, but not simulated.

23.1.1 Selecting a layer for drawing operations


When drawing directly, per default layer 0 is used. Other layers can be selected by using the function `GUI_SelectLayer()`.

Example

The following example shows how to select a layer for drawing operations:

```
void MainTask(void) {
  GUI_Init();
  /* Draw something on default layer 0 */
  GUI_SetBkColor(GUI_GREEN);
  GUI_Clear();
  GUI_DispStringHCenterAt("Layer 0", 100, 46);
  /* Draw something on layer 1 */
  GUI_SelectLayer(1); /* Select layer 1 */
  GUI_SetBkColor(GUI_RED);
  GUI_Clear();
  GUI_SetColor(GUI_BLUE);
  GUI_FillRect(20, 20, 179, 79);
  GUI_SetColor(GUI_WHITE);
  GUI_SetTextMode(GUI_TM_TRANS);
  GUI_DispStringHCenterAt("Layer 1", 100, 46);
  while(1) {
    GUI_Delay(100);
  }
}
```

Screenshot of above example

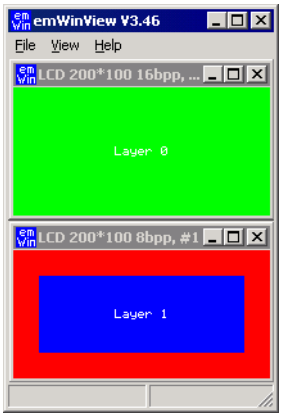

23.1.2 Selecting a layer for a window

The window manager automatically keeps track of which window is located in which layer. This is done in a fairly easy way:
If the window manager is used, every layer has a top level (desktop) window.
Any other window in this layer is visible only if it is a descendent (a child or grandchild or ...) of one of these desktop windows. Which layer a window is in depends solely on which desktop window it is a descendent of.



Example

The following example shows how to create 3 windows on 2 different desktop windows:

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
/* Create 1 child window on destop 0 */
hWin0 = WM_CreateWindowAsChild( 10, 20, 80, 70,
                                WM_GetDesktopWindowEx(0), WM_CF_SHOW, _cbWin0, 0);
/* Create 2 child windows on destop 1 */
hWin1 = WM_CreateWindowAsChild( 10, 20, 80, 70,
                                WM_GetDesktopWindowEx(1), WM_CF_SHOW, _cbWin1, 0);
hWin2 = WM_CreateWindowAsChild(110, 20, 80, 70,
                                WM_GetDesktopWindowEx(1), WM_CF_SHOW, _cbWin2, 0);
```

The following table shows the screenshot and the window hierarchy of the above example:

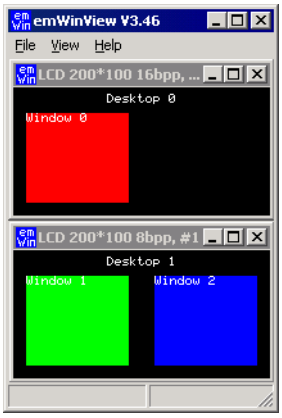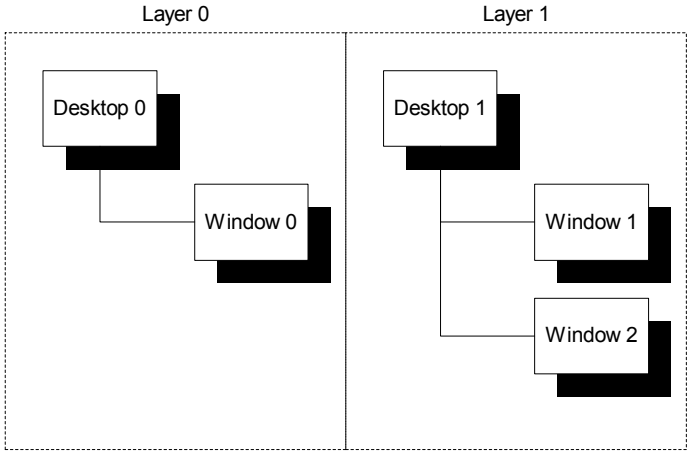Screenshot	Window hierarchy
	

23.1.2.1 Moving a window from one layer to an other

This can sometime be very desirable and can easily be accomplished: If a window is detached from its parent (The desktop window of one layer or any descendent of this desktop window) and attached to a window which lies in another layer, this window actually moves from one layer to another layer.



Example

The following example shows how to attach a window to a new parent window:



```
/* Create 1 child window on destop 0 */
hWin0 = WM_CreateWindowAsChild( 10, 20, 80, 70,
                                WM_GetDesktopWindowEx(0), WM_CF_SHOW, _cbWin0, 0);
/* Create 2 child windows on destop 1 */
hWin1 = WM_CreateWindowAsChild( 10, 20, 80, 70,
                                WM_GetDesktopWindowEx(1), WM_CF_SHOW, _cbWin1, 0);
hWin2 = WM_CreateWindowAsChild(110, 20, 80, 70,
                                WM_GetDesktopWindowEx(1), WM_CF_SHOW, _cbWin2, 0);
GUI_Delay(1000);
/* Detach window 2 from desktop 1 and attach it to desktop 0 */
WM_AttachWindow(hWin2, WM_GetDesktopWindowEx(0));
```


© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

The following table shows the screenshot and the window hierarchy of the above example before attaching the window to the new parent:

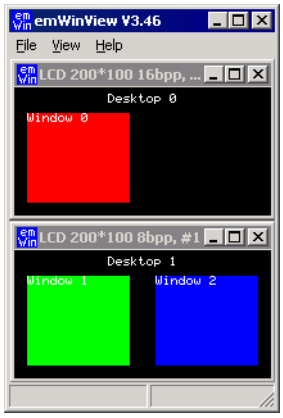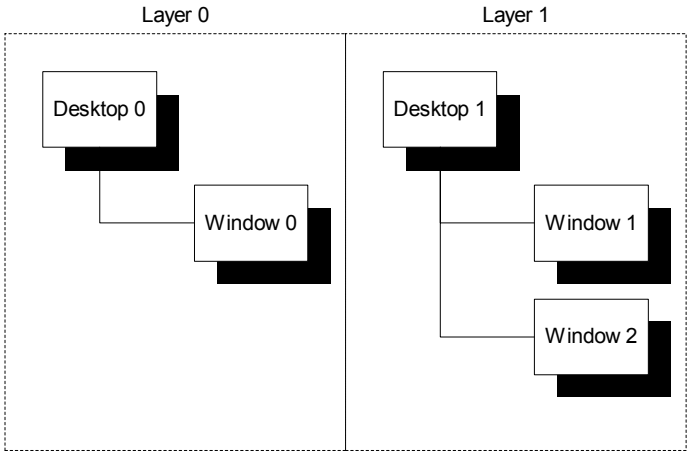Screenshot	Window hierarchy
	


The next table shows the screenshot and the window hierarchy of the above example after attaching the window to the new parent:

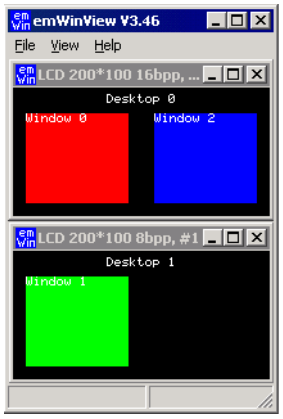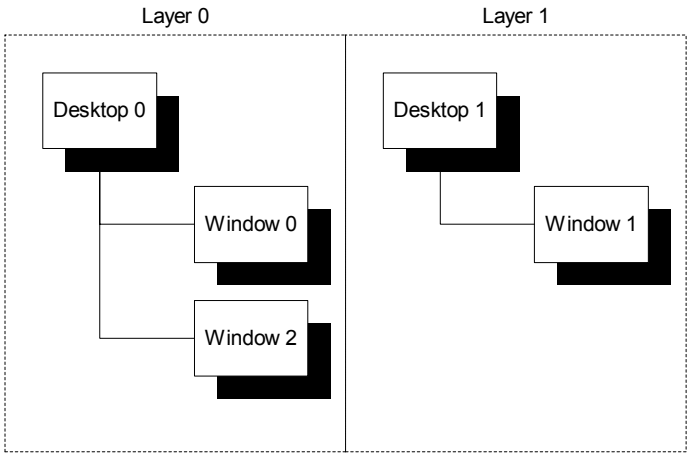Screenshot	Window hierarchy
	

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

23.2 Using multi layer support

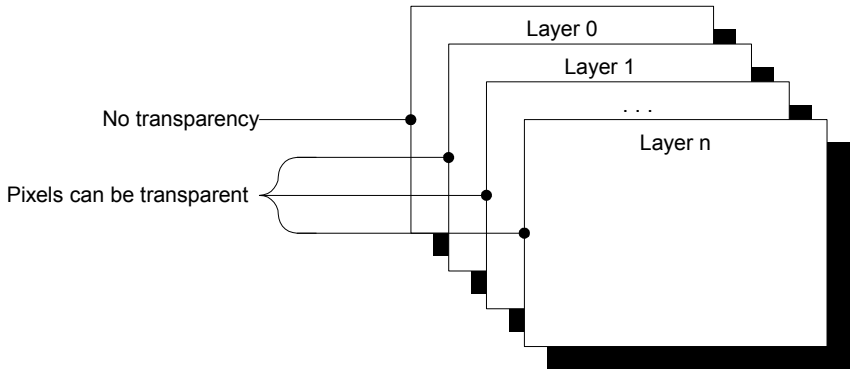emWin does not distinguish between multiple layers or multiple displays. When using multiple layers normally the size and the driver for each layer is the same. The viewer shows each layer in a separate window. The composite window of the viewer shows all layers; layers with higher index are on top of layers with lower index and can have transparent pixels:



23.2.1 Transparency

Transparency means that at the position of pixels with color index 0 in a layer > 0, the color of the background layer is visible. Since for all but layer 0 Index 0 means transparency, Index 0 can not be used to display colors. This also means that the color conversion should never yield 0 as best match for a color, since this would result in a transparent pixel. This means that only some fixed palette modes or a custom palette mode should be used and that you need to be careful when defining your own palette. You need to make sure that the color conversion (24 bit RGB -> Index) never yields 0 as result.

Fixed palette modes

86661 is currently the only available fixed palette mode for transparency support. For details, refer to the chapter "Colors" on page 227.

Custom palette mode

If a custom palette should be used in a layer > 0, the first color should not be used from the color conversion routines. The following shows an example definition for a custom palette with 15 gray scales:

```
static const LCD_COLOR _aColors_16[] = {
  GUI_TRANSPARENT, 0x000000, 0x222222, 0x333333,
  0x444444, 0x555555, 0x666666, 0x777777,
  0x888888, 0x999999, 0xAAAAAA, 0xBBBBBB,
  0xCCCCCC, 0xDDDDDD, 0xEEEEEE, 0xFFFFFF
};

static const LCD_PHYSPALETTE _aPalette_16 = {
  16, _aColors_16

};
void LCD_X_Config(void) {
  //
  // Set display driver and color conversion for 1st layer
  //
  .
  .
  .
  //
  // Set user palette data (only required if no fixed palette is used)
  //
  LCD_SetLUTEx(1, _aPalette_16);
}
```

Example




The following example shows how to use transparency. It draws 3 color bars in layer 0. Layer 1 is filled with white and 3 transparent items are drawn.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
GUI_SelectLayer(0);
GUI_SetColor(GUI_RED);
GUI_FillRect(0, 0, 199, 33);
GUI_SetColor(GUI_GREEN);
GUI_FillRect(0, 34, 199, 66);
GUI_SetColor(GUI_BLUE);
GUI_FillRect(0, 67, 199, 99);
GUI_SelectLayer(1);
GUI_SetBkColor(GUI_WHITE);
GUI_Clear();
GUI_SetColor(GUI_BLACK);
GUI_DispStringHCenterAt("Layer 1", 100, 4);
GUI_SetColor(GUI_TRANSPARENT);
GUI_FillCircle(100, 50, 35);
GUI_FillRect(10, 10, 40, 90);
GUI_FillRect(160, 10, 190, 90);
```

Screenshots of the above example

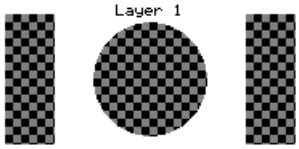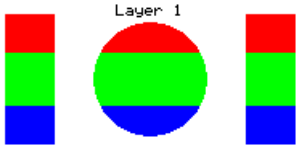The table below shows the contents of the separate layers and the composite view, as the result appears on the display:

Layer 0	Layer 1	Display
		

23.2.2 Alpha blending

Alpha blending is a method of combining two colors for transparency effects. Assumed 2 colors C_0 and C_1 should be combined with alpha blending A (a value between 0 and 1 where 0 means invisible and 1 means 100% visible) the resulting color C_r can be calculated as follows:

$$C_r = C_0 * (1 - A) + C_1 * A$$

Logical colors are handled internally as 32 bit values. The lower 24 bits are used for the color information and the alpha blending is managed in the upper 8 bits. An alpha value of 0x00 means opaque and 0xFF means completely transparent (invisible).

Different methods

There are 3 different methods of managing the alpha information:

- Layer alpha blending: On systems with layer alpha blending the alpha value is fixed to the layer and can be set with the function `LCD_SetAlphaEx()`.
- Lookup table (LUT) alpha blending: This kind of alpha blending uses the LUT for managing the alpha information.
- Pixel alpha blending: Each pixel of the layer which has to be combined with the background consists of alpha blending information.

Fixed palette modes

For LUT alpha blending the fixed palette modes 822216 and 84444 can be used. Pixel alpha blending is supported only in 32 bpp mode using the fixed palette mode 8888. For details about the fixed palette modes, refer to the chapter “Colors” on page 227.

Example

The following example shows how to use pixel alpha blending. It draws a circle in layer 0 and a yellow triangle build of horizontal lines with a vertical gradient of alpha values:



```
GUI_SetColor(GUI_BLUE);
GUI_FillCircle(100, 50, 49);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
GUI_SelectLayer(1);
GUI_SetBkColor(GUI_TRANSPARENT);
GUI_Clear();
for (i = 0; i < 100; i++) {
  U32 Alpha;
  Alpha = (i * 255 / 100) << 24;
  GUI_SetColor(GUI_YELLOW | Alpha);
  GUI_DrawHLine(i, 100 - i, 100 + i);
}
```

Screenshots of the above example

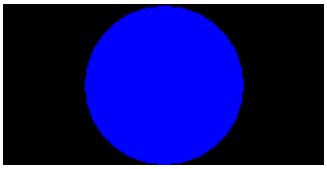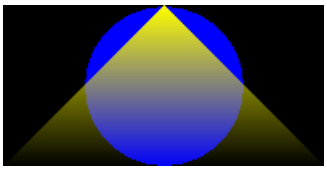The table below shows the contents of the separate layers and the composite view, as the result appears on the display:

Layer 0	Layer 1	Display
		

23.2.3 Hardware cursors


The term 'Hardware cursor' means the use of cursor images in a separate layer with a transparent background. If a hardware supports multiple layers and the ability of layer positioning emWin can be configured to use a separate layer for managing the cursor. The main advantages of this kind of cursor support are a better performance because only a few registers need to be changed on a movement and the ability of custom drawings in the cursor layer. For details about usage, refer to "GUI_AssignCursorLayer()" on page 755.

23.2.4 Multi layer example

For information about a multi-layer example, see the chapter "Simulation" on page 39. Further, the `Sample` folder contains the following example which shows how to use multiple layer support:

- MULTILAYER_AlphaChromaMove.c

Screenshot of above example

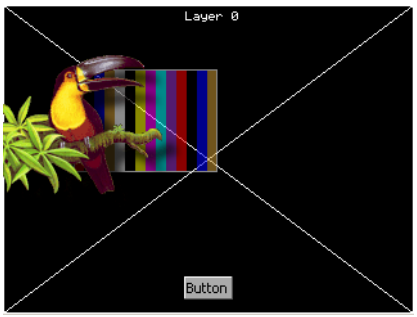

23.3 Using multi display support

Each display can be accessed with its own driver and with its own settings.

23.3.1 Enabling multi display support

To enable the multi display support you have to define the maximum number of layers in `GUIConf.h`:

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
#define GUI_NUM_LAYERS 2 /* Enables support for 2 displays/layers */
```

Further you have to create and configure a display driver device for each layer.


23.3.2 Run-time screen rotation

In some cases it may be necessary to change the display orientation at run-time. The multi display support allows to do this. In this case the file `LCDConf.c` should contain a display configuration for each required display orientation. Switching the display orientation then works as follows:

- Select the configuration with the required display orientation with `GUI_SelectLayer()`.
- If the rotation requires a reinitialization of the display controller the right driver function for reinitializing should be called. This is `LCD_L0_Init()` for layer 0 and `LCD_L0_x_Init()` for higher layers, where 'x' means the zero based index of the configuration.

23.3.3 Multi display example

The example below shows a screenshot of the simulation with 2 displays. The fist display is a 8bpp color display with a size of 320 x 240 pixel. The driver is LCD13XX.c configured for an Epson S1D13705 LCD-controller. The second display is a 1bpp bw-display with a size of 240 x 128 pixels. The driver is LCDSlin.c configured for a Toshiba T6963 LCD-controller:

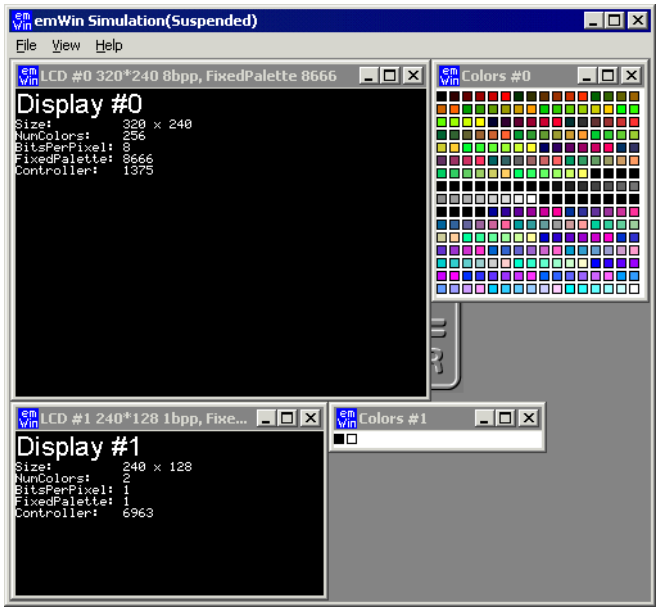

23.4 Configuring multi layer support

LCD Configuration of the above multi layer example

```
void LCD_X_Config(void) {
  //
  // Set display driver and color conversion for first layer ...
  //
  GUI_DEVICE_CreateAndLink(GUIDRV_LIN_16, // Display driver
                           GUICC_655,     // Color conversion
                           0, 0);
  //
  // ... and configure it
  //
  LCD_SetSizeEx    (0, 400,  234);        // Physical display size in pixels
  LCD_SetVRAMAddrEx(0, (void *)0xc00000); // Video RAM start address
  //
  // Set display driver and color conversion for second layer ...
  //
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
  GUI_DEVICE_CreateAndLink(GUIDRV_LIN_8,  // Display driver
                           GUICC_86661,   // Color conversion
                           0, 1);
  //
  // ... and configure it
  //
  LCD_SetSizeEx    (1, 400,  234);        // Physical display size in pixels
  LCD_SetVRAMAddrEx(1, (void *)0xc00000); // Video RAM start address
}
```

23.5 Configuring multi display support

Configuration of the above multi display example

```
void LCD_X_Config(void) {
  //
  // Set display driver and color conversion for first layer ...
  //
  GUI_DEVICE_CreateAndLink(GUIDRV_LIN_8,  // Display driver
                           GUICC_8666,    // Color conversion
                           0, 0);
  //
  // ... and configure it
  //
  LCD_SetSizeEx    (0, 320,  240);        // Physical display size in pixels
  LCD_SetVRAMAddrEx(0, (void *)0xc00000); // Video RAM start address
  //
  // Set display driver and color conversion for second layer ...
  //
  GUI_DEVICE_CreateAndLink(GUIDRV_LIN_1,  // Display driver
                           GUICC_1,       // Color conversion
                           0, 1);
  //
  // ... and configure it
  //
  LCD_SetSizeEx    (1, 240,  128);        // Physical display size in pixels
  LCD_SetVRAMAddrEx(1, (void *)0x800000); // Video RAM start address
}
```

23.6 Multi layer API

The table below lists the available multi layer related routines in alphabetical order. Detailed descriptions follow:

Routine	Description
GUI_AssignCursorLayer()	Assigns a layer to be used to manage a hardware cursor.
GUI_SelectLayer()	Selects a layer/display for output operations.
GUI_SetLayerAlphaEx()	Sets the layer alpha blending.
GUI_SetLayerPosEx()	Sets the position of the given layer.
GUI_SetLayerSizeEx()	Sets the size of the given layer.
GUI_SetLayerVisEx()	Sets the visibility of the given layer.
LCD_GetNumLayers()	Returns the number of layers.

GUI_AssignCursorLayer()

Description

The function assigns a layer to be used as cursor layer.

Prototype

```
void GUI_AssignCursorLayer(unsigned Index, unsigned CursorLayer);
```

Parameter	Description
Index	Layer index.
CursorLayer	Layer to be used to manage the cursor.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

Using a hardware cursor means a layer is used as cursor layer. Contrary to the default cursor handling, where the cursor is drawn in the same video memory area as all other items, a hardware cursor is drawn in a separate layer. In this case emWin makes sure the background color of the hardware cursor layer is set to transparency and the selected cursor will be drawn into the layer.
Whereas the default cursor management requires more or less calculation time to draw the cursor and to manage the background, moving a hardware cursor requires only the modification of a few registers.
Note that using this function requires that the display driver supports layer positioning.

GUI_SelectLayer()

Description

Selects a layer for drawing operations.

Prototype

```
unsigned int GUI_SelectLayer(unsigned int Index);
```

Parameter	Description
Index	Layer index.

Return value

Index of previous selected layer.

GUI_SetLayerAlphaEx()

Description

Sets the alpha blending of the given layer.

Prototype

```
int GUI_SetLayerAlphaEx(unsigned Index, int Alpha);
```

Parameter	Description
Index	Layer index.
Alpha	Alpha blending value of the given layer.

Additional information

To be able to use this function the hardware and the used display driver need to support layer alpha blending. If the driver does not support this feature the function returns immediately.
The usable range of alpha values depends on the hardware. In many cases the range of alpha values is limited, for example 0 - 0x3f. emWin does not know something about limitations and passes the given value to the driver. It is the responsibility of the application to make sure that the given value is in a legal range.

GUI_GetLayerPosEx()

Description

Sets the X- and Y-position of the given layer.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void GUI_GetLayerPosEx(unsigned Index, GUI_POINT * pPos);
```

Parameter	Description
Index	Layer index.
pPos	Pointer to a GUI_POINT structure containing the position to be set.

Additional information

To be able to use this function the hardware and the used display driver need to support layer positioning. If the driver does not support this feature the function returns immediately.

GUI_SetLayerSizeEx()

Description

Sets the X- and Y-size of the given layer.

Prototype

```
int GUI_SetLayerSizeEx(unsigned Index, int xSize, int ySize);
```

Parameter	Description
Index	Layer index.
xSize	New horizontal size in pixels of the given layer.
ySize	New vertical size in pixels of the given layer.

Additional information

To be able to use this function the hardware and the used display driver need to support layer sizing. If the driver does not support this feature the function returns immediately.

GUI_SetLayerVisEx()

Description

Sets the visibility of the given layer.

Prototype

```
int GUI_SetLayerVisEx(unsigned Index, int OnOff);
```

Parameter	Description
Index	Layer index.
OnOff	1 if layer should be visible, 0 for invisible.

Additional information

To be able to use this function the hardware and the used display driver need to support this feature. If the driver does not support this feature the function returns immediately.

LCD_GetNumLayers()

Description

Returns the number of layers configured in your configuration.

Prototype

```
int LCD_GetNumLayers(void);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

Number of layers configured in your configuration.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 24

Pointer Input Devices

emWin provides support for pointer-input-devices. Pointer input devices can be touch-screen, mouse or joystick. The basic emWin package includes a driver for analog touch-screens, a PS2 mouse driver, as well as an example joystick driver. Other types of touch-panel and mouse devices can also be used with the appropriate drivers.
The software for input devices is located in the subdirectory `GUI\Core`.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

24.1 Description

Pointer input devices are devices such as mouse, touch-screen, joystick. Multiple pointer input devices can be used in a single application to enable simultaneous mouse/touch-screen/joystick use. Basically all a PID driver does is calling the routine `GUI_PID_StoreState()` whenever an event (such as mouse move, or press on the touch screen) has been detected.
The window manager takes care of the appropriate reaction to PID events; If the window manager is not used, your application is responsible for reacting to PID events.

24.2 Pointer input device API

The table below lists the pointer input device routines in alphabetical order. Detailed descriptions follow.
Note: This API is used by the PID-driver; if you use a PID-driver shipped with emWin, your code does not need to call these routines.

Routine	Description
GUI_PID_GetState()	Return the current state of the PID.
GUI_PID_StoreState()	Store the current state of the PID.

Data structure

The structure of type `GUI_PID_STATE` referenced by the parameter `pState` is filled by the routine with the current values. The structure is defined as follows:

```
typedef struct {
  int x, y;
  U8  Pressed;
  U8  Layer;
} GUI_PID_STATE;
```

Elements of GUI_PID_STATE

Data type	Element	Description
int	x	X position of pointer input device.
int	y	Y position of pointer input device.
U8	Pressed	If using a touch screen this value can be 0 (unpressed) or 1 (pressed). If using a mouse bit 0 is used for the pressed state of the left button and bit 1 for the right button. The bits are 1 if the button is pressed and 0 if not.
U8	Layer	Describes the layer from which the PID state has been received

GUI_PID_GetState()

Description

Returns if the input device is currently pressed or not and fills the given GUI_PID_STATE structure with the current state information.

Prototype

```
int GUI_PID_GetState(GUI_PID_STATE * pState);
```

Parameter	Description
pState	Pointer to a structure of type `GUI_PID_STATE` to be filled with the current state.

Return value

1 if input device is currently pressed; 0 if not pressed.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Example

```
GUI_PID_STATE State;
GUI_PID_GetState(&State);
```

GUI_PID_StoreState()

Description

Stores the current state of the pointer input device.

Prototype

```
void GUI_PID_StoreState(const GUI_PID_STATE * pState);
```

Parameter	Description
pState	Pointer to a structure of type GUI_PID_STATE.

Additional information

This function can be used from an interrupt service routine.
The PID input manager of emWin contains a FIFO buffer which is able to hold up to 5 PID events per default. If a different size is required this value can be changed. For details please refer to “Advanced GUI configuration options” on page 914.

24.3 Mouse driver

Mouse support consists of two "layers": a generic layer and a mouse driver layer. Generic routines refer to those functions which always exist, no matter what type of mouse driver you use. The available mouse driver routines, on the other hand, will call the appropriate generic routines as necessary, and may only be used with the PS2 mouse driver supplied with emWin. If you write your own driver, it is responsible for calling the generic routines.
The generic mouse routines will in turn call the corresponding PID routines.

24.3.1 Generic mouse API

The table below lists the generic mouse routines in alphabetical order. These functions may be used with any type of mouse driver. Detailed descriptions follow.

Routine	Description
GUI_MOUSE_GetState()	Return the current state of the mouse.
GUI_MOUSE_StoreState()	Store the current state of the mouse.

GUI_MOUSE_GetState()

Description

Returns the current state of the mouse.

Prototype

```
int GUI_MOUSE_GetState(GUI_PID_STATE * pState);
```

Parameter	Description
pState	Pointer to a structure of type GUI_PID_STATE.

Return value

1 if mouse is currently pressed; 0 if not pressed.

Additional information

This function will call GUI_PID_GetState().

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_MOUSE_StoreState()

Description

Stores the current state of the mouse.

Prototype

```
void GUI_MOUSE_StoreState(const GUI_PID_STATE *pState);
```

Parameter	Description
pState	Pointer to a structure of type GUI_PID_STATE.

Additional information

This function will call GUI_PID_StoreState().
This function can be used from an interrupt service routine.

Example

```
GUI_PID_STATE State;
State.x = _MousepositionX; /* Screen position in X of mouse device */
State.y = _MousepositionY; /* Screen position in Y of mouse device */
State.Pressed = 0;
if (_LeftButtonPressed) {
  State.Pressed |= 1;      /* Set bit 0 if left button is pressed */
}
if (_RightButtonPressed) {
  State.Pressed |= 2;      /* Set bit 1 if right button is pressed */
}
GUI_MOUSE_StoreState(&State);
```

24.3.2 PS2 mouse driver

The driver supports any type of PS2 mouse.

24.3.2.1 Using the PS2 mouse driver

The driver is very easy to use. In the startup code, the init function GUI_MOUSE_DRIVER_PS2_Init() should be called.
The application should somehow notice when a byte is received from the mouse. When this happens, the function GUI_MOUSE_DRIVER_PS2_OnRx() should be called and the byte received passed as parameter. The driver in turn then calls GUI_PID_StoreState as required.
The reception of the byte is typically handled in an interrupt service routine.

An example ISR could look as follows: (Note that this is of course different for different systems)

```
void interrupt OnRx(void) {
  char Data;
  Data  = UART_REG;                  // Read data from the hardware
  GUI_MOUSE_DRIVER_PS2_OnRx(Data);   // Pass it on to the driver
}
```

24.3.2.2 PS2 mouse driver API

The table below lists the available mouse driver routines in alphabetical order.

Routine	Description
GUI_MOUSE_DRIVER_PS2_Init()	Initialize the mouse driver.
GUI_MOUSE_DRIVER_PS2_OnRx()	Called form receive interrupt routines.

GUI_MOUSE_DRIVER_PS2_Init()

Description

Initializes the mouse driver.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void GUI_MOUSE_DRIVER_PS2_Init(void);
```

GUI_MOUSE_DRIVER_PS2_OnRx()

Description

Must be called from receive interrupt routines.

Prototype

```
void GUI_MOUSE_DRIVER_PS2_OnRx(unsigned char Data);
```

Parameter	Description
Data	Byte of data received by ISR.

Additional information

The PS2 mouse driver is a serial driver, meaning it receives 1 byte at a time.
You need to ensure that this function is called from your receive interrupt routine every time a byte (1 character) is received.

24.4 Touch screen driver

A touch screen driver will typically simply call `GUI_PID_StoreState()` as described earlier. Any type of touch screen can be supported this way. Your are responsible for writing the driver code (which is usually fairly simple).
The most common way of interfacing a touch screen is the 4-pin analog interface, for which a driver is supplied.

24.4.1 Generic touch screen API

The generic touch screen API is used with any type of driver (analog, digital, etc.). A driver calls the appropriate routines as necessary. If you write your own driver, it has to call the generic routines.
The table below lists the generic touch-screen routines in alphabetical order. These functions may be used with any type of touch-screen driver. Detailed descriptions follow.

Routine	Description
GUI_TOUCH_GetState()	Return the current state of the touch-screen.
GUI_TOUCH_StoreState()	Store the current state of the touch-screen using X- and Y-coordinates.
GUI_TOUCH_StoreStateEx()	Store the current state of the touch-screen.

GUI_TOUCH_GetState()

Description

Returns the current state of the touch-screen.

Prototype

```
int GUI_TOUCH_GetState(GUI_PID_STATE *pState);
```

Parameter	Description
pState	Pointer to a structure of type GUI_PID_STATE.

Return value

1 if touch-screen is currently pressed; 0 if not pressed.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_TOUCH_StoreState()

Description

Stores the current state of the touch screen using X- and Y-coordinates as parameters.

Prototype

```
void GUI_TOUCH_StoreState(int x, int y);
```

Parameter	Description
x	X-position.
y	Y-position.

Additional information

If one of the given values is negative, the GUI assumes that the touch panel is not pressed.
This function can be used from an interrupt service routine.
For a more detailed example of a touch handling routine, please refer to `Sample\GUI_X\GUI_X_Touch_StoreState.c`.

Example

```
int x, y;
if (_TouchIsPressed) {
  x = _TouchPositionX; /* Current position in X of touch device */
  y = _TouchPositionY; /* Current position in Y of touch device */
} else {
  x = y = -1;          /* Use -1 if touch is not pressed */
}
GUI_TOUCH_StoreState(x, y);
```

GUI_TOUCH_StoreStateEx()

Description

Stores the current state of the touch screen.

Prototype

```
void GUI_TOUCH_StoreStateEx(const GUI_PID_STATE * pState);
```

Parameter	Description
pState	Pointer to a structure of type `GUI_PID_STATE`.

Additional information

This function will call `GUI_PID_StoreState()`.
For a more detailed example of a touch handling routine, please refer to `Sample\GUI_X\GUI_X_Touch_StoreState.c`.

Example

```
GUI_PID_STATE State;
State.x = _TouchPositionX;
State.y = _TouchPositionY;
if (_TouchIsPressed) {
  State.Pressed = 1;
} else {
  State.Pressed = 0;
}
GUI_TOUCH_StoreStateEx(&State);
```

24.4.2 The analog touch screen driver

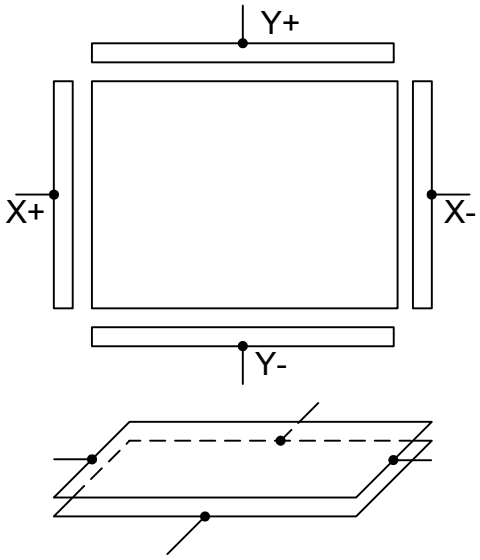
The emWin touch-screen driver handles analog input (from an 8-bit or better A/D converter), debouncing and calibration of the touch-screen.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

The touch-screen driver continuously monitors and updates the touch-panel through the use of the function GUI_TOUCH_Exec(), which calls the appropriate generic touch-screen API routines when it recognizes that an action has been performed or something has changed.

How an analog touch screen works

The touch panel consists of 2 thin conducting layers of glass, normally insulated from each other. If the user presses the touch panel, the two layers are connected at that point. If a voltage is applied to the Y-layer, when pressed, a voltage can be measured at the X+/X-terminals. This voltage depends on the touch position. The same thing holds true the other way round. If a voltage is applied to the X-layer, when pressed, a voltage can be measured at the Y+/Y-terminals.



24.4.2.1 Setting up the analog touch screen

Putting a touch panel into operation should be done in the following steps:

- Implementing the hardware routines
- Implementing regular calls to GUI_TOUCH_Exec()
- Verifying proper operation with the oscilloscope
- Using example to determine calibration values
- Adding a call of GUI_TOUCH_Calibrate() to the initialization routine LCD_X_Config() using the determined values

The following shows a detailed description of each step.

Implementing the hardware routines

The first step of implementing a touch screen should be filling the hardware routines with code. These routines are:

```
GUI_TOUCH_X_ActivateX(), GUI_TOUCH_X_ActivateY()
GUI_TOUCH_X_MeasureX(), GUI_TOUCH_X_MeasureY(
```

A module GUI_TOUCH_X.c containing the empty routines is located in the folder Sample\GUI_X. You can use this module as a starting point.
The activate routines should prepare the measurement by switching on the measurement voltage. GUI_TOUCH_X_ActivateX() for example should prepare the measurement in Y by switching on the measurement voltage in X. Further it should switch of the voltage in Y and disable the measurement in X.
The measurement routines should return the measurement result of a A/D converter. Later in this chapter you will find an example implementation of the hardware routines.

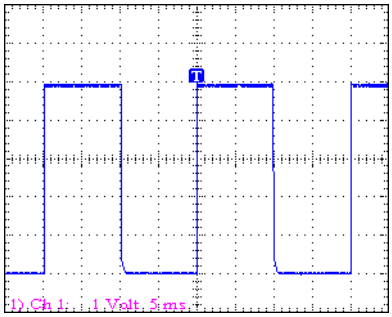
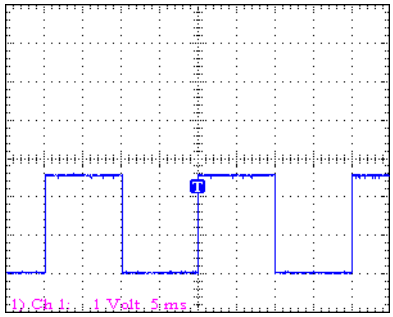
Implementing regular calls to GUI_TOUCH_Exec()

The second step of implementing a touch screen is to make sure, that the function GUI_TOUCH_Exec() will be called in regular intervals. Your application should call it about 100 times/second. If you are using a real-time operating system, the easiest way to make sure this function is called is to create a separate task. When not using a multitasking system, you can use an interrupt service routine to do the job.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Verifying proper operation with the oscilloscope

After implementing the call of GUI_TOUCH_Exec() make sure the hardware works. The easiest way to do this is to measure the supply and measurement voltages of the touch panel with a oscilloscope. The following table shows a typical result. The first column shows the supply voltage of an axis, the second column shows the result of measuring the measurement voltage when pressing in the middle of the touch panel.


Supply voltage	Measurement voltage
	

Use example to determine calibration values

The third step is to get the minimum and maximum values of the A/D converter. emWin needs this values to convert the measurement result to the touch position in pixels. These 4 values are:

Value	How to get them
GUI_TOUCH_AD_TOP	Press the touch at the top and write down the analog input value in Y.
GUI_TOUCH_AD_BOTTOM	Press the touch at the bottom and write down the analog input value in Y.
GUI_TOUCH_AD_LEFT	Press the touch at the left and write down the analog input value in X.
GUI_TOUCH_AD_RIGHT	Press the touch at the right and write down the analog input value in X.

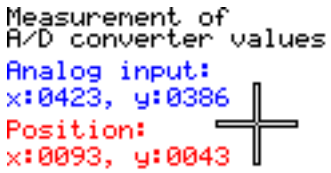The example folder of emWin contains a small program which can be used to get these values from your touch panel. It is located in the folder Sample\Tutorial and its name is TOUCH_Sample.c. Run this example on your hardware. The output should be similar to the screenshot at the right side.



Use GUI_TOUCH_Calibrate() with the above values

The last step is adding a call to GUI_TOUCH_Calibrate() using the calibration values. The recommended location for calibrating the touch screen is the initialization routine LCD_X_Config() which is located in LCDConf.c. similar to following example:


```
#define GUI_TOUCH_AD_TOP     877
#define GUI_TOUCH_AD_BOTTOM  273
#define GUI_TOUCH_AD_LEFT    232
#define GUI_TOUCH_AD_RIGHT   918
.
.
.
void LCD_X_Config(void) {
  //
  // Initialize display driver
  //
  .
  .
  .
  //
  // Set orientation of touch screen (only required when using
  //
  TouchOrientation = (GUI_MIRROR_X * LCD_GetMirrorX()) |
                     (GUI_MIRROR_Y * LCD_GetMirrorY()) |
                     (GUI_SWAP_XY  * LCD_GetSwapXY()) ;
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
  GUI_TOUCH_SetOrientation(TouchOrientation);
  //
  // Calibrate touch screen
  //
  GUI_TOUCH_Calibrate(GUI_COORD_X, 0, 240, TOUCH_AD_TOP , TOUCH_AD_BOTTOM);
  GUI_TOUCH_Calibrate(GUI_COORD_Y, 0, 320, TOUCH_AD_LEFT, TOUCH_AD_RIGHT);
}
```

24.4.2.2 Runtime calibration

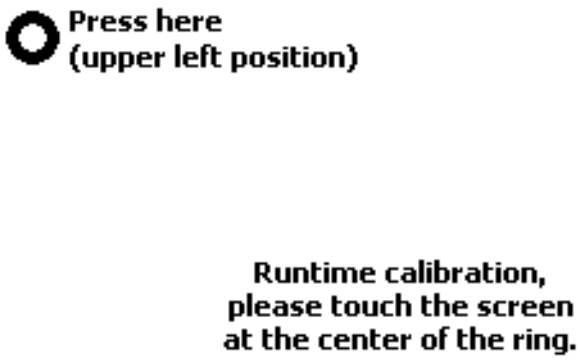In practice the exact values for the configuration file can be determined only for one touch panel. Because there are small differences between the parts of a series it could be very needful to calibrate each device at run-time. This can be done by using the function `GUI_TOUCH_Calibrate()`. The `Sample` folder contains the example `TOUCH_Calibrate.c` which shows, how a touch screen can be calibrated at run time:



24.4.2.3 Hardware routines

The following four hardware-dependent functions need to be added to your project if you use the driver supplied with emWin, as they are called by `GUI_TOUCH_Exec()` when polling the touch-panel. A suggested place is in the file `GUI_X.c`. These functions are as follows:

Routine	Description
GUI_TOUCH_X_ActivateX()	Prepares measurement for Y-axis.
GUI_TOUCH_X_ActivateY()	Prepares measurement for X-axis.
GUI_TOUCH_X_MeasureX()	Returns the X-result of the A/D converter.
GUI_TOUCH_X_MeasureY()	Returns the Y-result of the A/D converter.

GUI_TOUCH_X_ActivateX(), GUI_TOUCH_X_ActivateY()

Description

These routines are called from `GUI_TOUCH_Exec()` to activate the measurement of the X- and the Y-axes. `GUI_TOUCH_X_ActivateX()` switches on the measurement voltage to the X-axis; `GUI_TOUCH_X_ActivateY()` switches on the voltage to the Y-axis. Switching on the voltage in X means the value for the Y-axis can be measured and vice versa.

Prototypes

```
void GUI_TOUCH_X_ActivateX(void);
void GUI_TOUCH_X_ActivateY(void);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_TOUCH_X_MeasureX(), GUI_TOUCH_X_MeasureY()

Description

These routines are called from `GUI_TOUCH_Exec()` to return the measurement values from the A/D converter for the X- and the Y-axes.

Prototypes

```
int GUI_TOUCH_X_MeasureX(void);
int GUI_TOUCH_X_MeasureY(void);
```

Example implementation

The following shows an example implementation of the touch hardware routines for a Mitsubishi M16C/80 controller:

```
void GUI_TOUCH_X_ActivateX(void) {
  U8 Data;
  asm("fclr i");                  /* Disable interrupts            */
  Data  = P10;                    /* Read port data                */
  Data |=   (1 << 2) | (1 << 3);  /* Switch on  power in X
                                     and  enable measurement in Y  */
  Data &= ~((1 << 4) | (1 << 5)); /* Switch off power in Y
                                     and disable measurement in X  */
  P10   = Data;                   /* Write port data               */
  asm("fset i");                  /* Enable interrupts             */
}

void GUI_TOUCH_X_ActivateY(void) {
  U8 Data;
  asm("fclr i");                  /* Disable interrupts            */
  Data  = P10;                    /* Read port data                */
  Data |=   (1 << 5) | (1 << 4);  /* Switch on power in Y
                                     and  enable measurement in X  */
  Data &= ~((1 << 3) | (1 << 2)); /* Switch off power in X
                                     and disable measurement in Y  */
  P10   = Data;                   /* Write port data               */
  asm("fset i");                  /* Enable interrupts             */
}

static void ReadADCx(int channel) {
  ADCON0  = channel               /* Select channel 0-7            */
          | (0 << 3)              /* One shot mode                 */
          | (0 << 6)              /* A-D conversion start (0=stop) */
          | (0 << 7);             /* FAD/4 select                  */
  ADCON1  =  (0 << 0)             /* A-D sweep select (XX)         */
          | (0 << 2)              /* No sweep mode                 */
          | (0 << 3)              /* 8 bit mode                    */
          | (0 << 4)              /* FAD4 select                   */
          | (1 << 5)              /* VRef connected                */
          | (0 << 6);             /* Anex0/1 not used              */
  ADCON2  =  (1 << 0);            /* Use example and hold          */
  ADIC    = 0;                    /* Reset IR flag                 */
  ADCON0 |= (1 << 6);             /* Start conversion              */
  while ((ADIC & (1 << 3)) == 0); /* Wait for end of conversion    */
  ADCON0 &= ~(6 << 0);            /* Start conversion = 0          */
}

int GUI_TOUCH_X_MeasureX(void) {
  ReadADCx(0);
  return AD0;
}

int GUI_TOUCH_X_MeasureY(void) {
  ReadADCx(1);
  return AD1;
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

24.4.2.4 Driver API for analog touch screens

The table below lists the available analog touch screen driver routines in alphabetical order. These functions only apply if you are using the driver included with emWin.

Routine	Description
GUI_TOUCH_Calibrate()	Changes the calibration.
GUI_TOUCH_Exec()	Activates the measurement of the X- and Y-axes; needs to be called about 100 times/second.
GUI_TOUCH_SetOrientation()	Sets the logical display orientation.

GUI_TOUCH_Calibrate()

Description

Changes the calibration at runtime.

Prototype

```
int GUI_TOUCH_Calibrate(int Coord, int Log0, int Log1,
                        int Phys0, int Phys1);
```

Parameter	Description
Coord	GUI_COORD_X for X-axis, GUI_COORD_Y for Y-axis.
Log0	Logical value 0 in pixels.
Log1	Logical value 1 in pixels.
Phys0	A/D converter value for Log0.
Phys1	A/D converter value for Log1.

Additional information

The function takes as parameters the axis to be calibrated, two logical values in pixels for this axis and two corresponding physical values of the A/D converter.

GUI_TOUCH_Exec()

Description

Polls the touch-screen by calling the TOUCH_X routines to activate the measurement of the X- and Y-axes. You must ensure that this function is called for about 100 times per second.

Prototype

```
void GUI_TOUCH_Exec(void);
```

Additional information

If you are using a real-time operating system, the easiest way to make sure this function is called is to create a separate task. When not using a multitask system, you can use an interrupt service routine to do the job.

GUI_TOUCH_SetOrientation()

Description

The function configures the touch screen orientation. If the touch screen for example already has been configured to work with the default orientation and the display now needs to be turned or mirrored, this function can be used to configure the touch driver to use the same orientation as the display without changing anything at the hardware routines.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void GUI_TOUCH_SetOrientation(unsigned Orientation);
```

Parameter	Description
Orientation	One or more "OR" combined values of the table below.

Permitted values for parameter Orientation	
GUI_MIRROR_X	Mirroring the X-axis
GUI_MIRROR_Y	Mirroring the Y-axis
GUI_SWAP_XY	Swapping X- and Y-axis

24.4.2.5 Configuring the analog touch-screen driver

The touch screen driver is completely run-time configurable. GUI_TOUCH_Calibrate() should be used to specify the physical values returned by the A/D converter for 2 positions per axis. If the display needs to be turned or mirrored, GUI_TOUCH_SetOrientation() can be used to set a new orientation without changing anything at the hardware routines.
Configuring the touch screen should be done before emWin manages any touch input.

Example

```
#define TOUCH_AD_LEFT   0x3c0
#define TOUCH_AD_RIGHT  0x034
#define TOUCH_AD_TOP    0x3b0
#define TOUCH_AD_BOTTOM 0x034

Orientation = (GUI_MIRROR_X * LCD_GetMirrorXEx(0)) |
              (GUI_MIRROR_Y * LCD_GetMirrorYEx(0)) |
              (GUI_SWAP_XY  * LCD_GetSwapXYEx (0));
GUI_TOUCH_SetOrientation(Orientation);
GUI_TOUCH_Calibrate(GUI_COORD_X, 0, 239, TOUCH_AD_LEFT, TOUCH_AD_RIGHT);
GUI_TOUCH_Calibrate(GUI_COORD_Y, 0, 319, TOUCH_AD_TOP,  TOUCH_AD_BOTTOM);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

24.5 Joystick input example

The following example shows how to use the pointer input device API to process the input from a joystick:

```
/*********************************************************************
*
*         _JoystickTask
*
* Purpose:
*   Periodically read the Joystick and inform emWin using
*   GUI_PID_StoreState.
*   It supports dynamic acceleration of the pointer.
*   The Joystick is a simple, standard 5 switch (digital) type.
*
*/
static void _JoystickTask(void) {
  int Stat;
  int StatPrev = 0;
  int TimeAcc = 0;   // Dynamic acceleration value
  while (1) {
    Stat = HW_ReadJoystick();
    //
    // Handle dynamic pointer acceleration
    //
    if (Stat == StatPrev) {
      if (TimeAcc < 10) {
        TimeAcc++;
      }
    } else {
      TimeAcc = 1;
    }
    if (Stat || (Stat != StatPrev)) {
      GUI_PID_STATE State;
      int Max;
      //
      // Compute the new coordinates
      //
      GUI_PID_GetState(&State);
      if (Stat & JOYSTICK_LEFT) {
        State.x -= TimeAcc;
      }
      if (Stat & JOYSTICK_RIGHT) {
        State.x += TimeAcc;
      }
      if (Stat & JOYSTICK_UP) {
        State.y -= TimeAcc;
      }
      if (Stat & JOYSTICK_DOWN) {
        State.y += TimeAcc;
      }
      //
      // Make sure coordinates are still in bounds
      //
      if (State.x < 0) {
        State.x = 0;
      }
      if (State.y < 0) {
        State.y = 0;
      }
      Max = LCD_GetXSize() - 1;
      if (State.x >= Max) {
        State.x = Max;
      }
      Max = LCD_GetYSize() - 1;
      if (State.y > Max) {
        State.y = Max;
      }
      //
      // Inform emWin
      //
      State.Pressed = (Stat & JOYSTICK_ENTER) ? 1: 0;
      GUI_PID_StoreState(&State);
      StatPrev = Stat;
    }
    OS_Delay(40);
  }
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 25

Keyboard Input

emWin provides support for any kind of keyboards. Any type of keyboard driver is compatible with emWin.
The software for keyboard input is located in the subdirectory `GUI\Core` and part of the basic package.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

25.1 Description

A keyboard input device uses ASCII character coding in order to be able to distinguish between characters. For example, there is only one "A" key on the keyboard, but an uppercase "A" and a lowercase "a" have different ASCII codes (0x41 and 0x61, respectively).

emWin predefined character codes

emWin also defines character codes for other "virtual" keyboard operations. These codes are listed in the table below, and defined in an identifier table in `GUI.h`. A character code in emWin can therefore be any extended ASCII character value or any of the following predefined emWin values.

Predefined virtual key code	Description
GUI_KEY_BACKSPACE	Backspace key.
GUI_KEY_TAB	Tab key.
GUI_KEY_ENTER	Enter/return key.
GUI_KEY_LEFT	Left arrow key.
GUI_KEY_UP	Up arrow key.
GUI_KEY_RIGHT	Right arrow key.
GUI_KEY_DOWN	Down arrow key.
GUI_KEY_HOME	Home key (move to beginning of current line).
GUI_KEY_END	End key (move to end of current line).
GUI_KEY_SHIFT	Shift key.
GUI_KEY_CONTROL	Control key.
GUI_KEY_ESCAPE	Escape key.
GUI_KEY_INSERT	Insert key.
GUI_KEY_DELETE	Delete key.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

25.1.1 Driver layer API

The keyboard driver layer handles keyboard messaging functions. These routines notify the window manager when specific keys (or combinations of keys) have been pressed or released.
The table below lists the driver-layer keyboard routines in alphabetical order. Detailed descriptions follow.

Routine	Description
GUI_StoreKeyMsg()	Store a message in a specified key.
GUI_SendKeyMsg()	Send a message to a specified key.

GUI_StoreKeyMsg()

Description

Stores the message data (Key, PressedCnt) into the keyboard buffer.

Prototype

```
void GUI_StoreKeyMsg(int Key, int Pressed);
```

Parameter	Description
Key	May be any extended ASCII character (between 0x20 and 0xFF) or any predefined emWin character code.
Pressed	Key state (see table below).

Permitted values for parameter Pressed	
1	Pressed state.
0	Released (unpressed) state.

Additional information

This function can be used from an interrupt service routine.
The keyboard input manager of emWin contains a FIFO buffer which is able to hold up to 10 keyboard events per default. If a different size is required this value can be changed. For details please refer to "Advanced GUI configuration options" on page 914.

GUI_SendKeyMsg()

Description

Sends the keyboard data to the window with the input focus. If no window has the input focus, the function GUI_StoreKeyMsg() is called to store the data to the input buffer.

Prototype

```
void GUI_SendKeyMsg(int Key, int Pressed);
```

Parameter	Description
Key	May be any extended ASCII character (between 0x20 and 0xFF) or any predefined emWin character code.
Pressed	Key state (see GUI_StoreKeyMsg()).

Additional information

This function should not be called from an interrupt service routine.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

25.1.2 Application layer API

The table below lists the application-layer keyboard routines in alphabetical order. Detailed descriptions follow.

Routine	Description
GUI_ClearKeyBuffer()	Clear the key buffer.
GUI_GetKey()	Return the contents of the key buffer.
GUI_StoreKey()	Store a key in the buffer.
GUI_WaitKey()	Wait for a key to be pressed.

GUI_ClearKeyBuffer()

Description

Clears the key buffer.

Prototype

```
void GUI_ClearKeyBuffer(void);
```

GUI_GetKey()

Description

Returns the current contents of the key buffer.

Prototype

```
int GUI_GetKey(void);
```

Return value

Codes of characters in the key buffer; 0 if no key is buffered.

GUI_StoreKey()

Description

Stores a key in the buffer.

Prototype

```
void GUI_StoreKey(int Key);
```

Parameter	Description
Key	May be any extended ASCII character (between 0x20 and 0xFF) or any predefined emWin character code.

Additional information

This function is typically called by the driver and not by the application itself.

GUI_WaitKey()

Description

Waits for a key to be pressed.

Prototype

```
int GUI_WaitKey(void);
```

Additional information


The application is "blocked", meaning it will not return until a key is pressed.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 26

Sprites

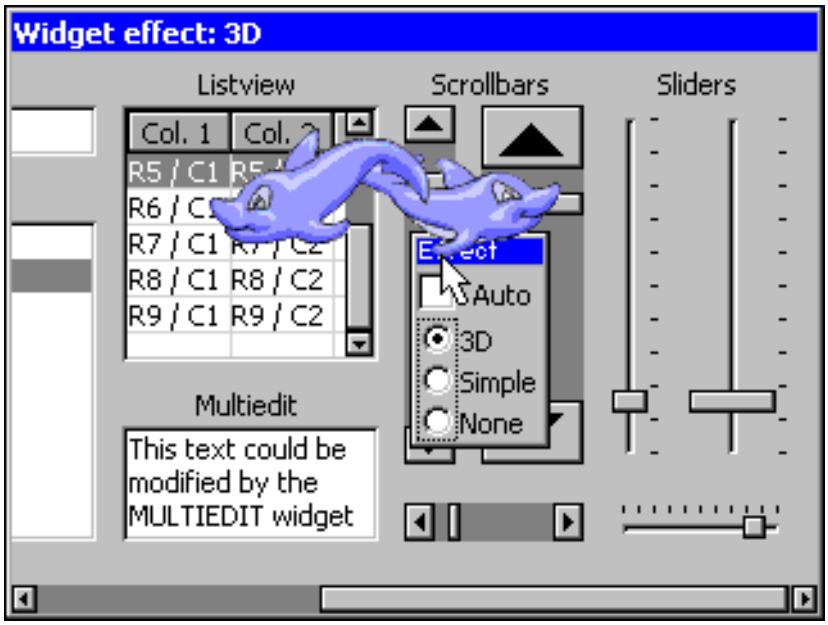A ’sprite’ is an image which can be shown above all other graphics on the screen. A sprite preserves the screen area it covers. It can be moved or removed at any time, fully restoring the screen content. Animation by use of multiple images is possible.
Sprites are completely independent from all other drawing operations as well as window operations: Sprites do not affect drawing or window operations; drawing or window operations do not affect sprites.
Sprites can be seen as objects which are sitting "on top" of the screen, similar to cursors.



© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

26.1 Introduction

emWin sprites are implemented as a pure software solution. No additional hardware is required to use emWin sprites. They can be shown, moved and deleted without effect on the currently visible graphic items.

Memory requirements

Each sprite needs a memory area for saving the display data 'behind' the sprite to be able to restore the background on moving operations or on removing the sprite. Further a memory area for a color cache is required. The size of the color cache depends on the number of colors used in the sprite image. So the complete number of bytes required for a sprite can be calculated as follows:

```
SizeOfSpriteObject (~30 bytes) +
(XSize * YSize + NumberOfBitmapColors) * REQUIRED_BYTES_PER_PIXEL
```

Maximum number of sprites

The number of simultaneous visible sprites is not limited by emWin. It depends only on the available memory.

Performance

Note that drawing a sprite is more computer-bound than drawing a simple bitmap, because it has to manage the background data and intersections with other sprites.

Z-order

Z-order is an ordering of overlapping two-dimensional objects, in this case the sprites. When two sprites overlap, their Z-order determines which one appears on top of the other. The sprite created at last is the topmost sprite.

26.2 Sprite API

The table below lists the available sprite-related routines in alphabetical order. Detailed descriptions follow:

Routine	Description
GUI_SPRITE_Create()	Creates a sprite.
GUI_SPRITE_CreateEx()	Creates a sprite in the given layer.
GUI_SPRITE_Delete()	Deletes a sprite.
GUI_SPRITE_GetState()	Return if the sprite is visible or not.
GUI_SPRITE_Hide()	Hides a sprite.
GUI_SPRITE_SetBitmap()	Sets a new bitmap of a sprite.
GUI_SPRITE_SetBitmapAndPosition()	Sets a new bitmap and the position of a sprite.
GUI_SPRITE_SetPosition()	Sets the position of a sprite.
GUI_SPRITE_Show()	Shows the given sprite.

GUI_SPRITE_Create()

Description

Creates a sprite at the given position in the current layer.

Prototype

```
GUI_HSPRITE GUI_SPRITE_Create(const GUI_BITMAP GUI_UNI_PTR * pBM,
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                                    int x, int y);
```

Parameter	Description
pBM	Pointer to a bitmap structure to be used for drawing the sprite.
x	X-position of the sprite in screen coordinates.
y	Y-position of the sprite in screen coordinates.

Return value

Handle of the new sprite, 0 on failure.

Additional information

The bitmap addressed by the parameter pBM needs to agree with the following requirements:

- It should not be compressed.
- It needs to be transparent.
- It needs to be a palette based bitmap with 1, 2, 4 or 8bpp.

Other bitmaps or insufficient memory cause the function to fail.

GUI_SPRITE_CreateEx()

Description

Creates a sprite at the given position in the desired layer.

Prototype

```
GUI_HSPRITE GUI_SPRITE_CreateEx(const GUI_BITMAP GUI_UNI_PTR * pBM,
                                int x, int y, int Layer);;
```

Parameter	Description
pBM	Pointer to a bitmap structure to be used for drawing the sprite.
x	X-position of the sprite in screen coordinates.
y	Y-position of the sprite in screen coordinates.
Layer	Layer of sprite.

Return value

Handle of the new sprite, 0 on failure.

GUI_SPRITE_Delete()

Description

Deletes the given sprite.

Prototype

```
void GUI_SPRITE_Delete(GUI_HSPRITE hSprite);
```

Parameter	Description
hSprite	Handle of sprite to be deleted.

Additional information

The function deletes the sprite from the memory and restores its background automatically.

GUI_SPRITE_GetState()

Description

Returns if the given Sprite is visible or not.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
int GUI_SPRITE_GetState(GUI_HSPRITE hSprite);
```

Parameter	Description
hSprite	Handle of sprite.

Return value

1 if it is visible, 0 if not.

GUI_SPRITE_Hide()

Description

Hides the given sprite.

Prototype

```
void GUI_SPRITE_Hide(GUI_HSPRITE hSprite);
```

Parameter	Description
hSprite	Handle of sprite to hide.

Additional information

The function removes the given sprite from the list of visible sprites.

GUI_SPRITE_SetBitmap()

Description

Sets a new image for drawing the sprite.

Prototype

```
int GUI_SPRITE_SetBitmap(GUI_HSPRITE hSprite,
                         const GUI_BITMAP GUI_UNI_PTR * pBM);
```

Parameter	Description
hSprite	Handle of sprite.
pBM	Pointer to a bitmap structure to be used for drawing the sprite.

Return value

0 on success, 1 if the routine fails.

Additional information

The new bitmap must have exact the same size as the previous one. Passing a pointer to a bitmap of a different size causes the function to fail.
The function immediately replaces the visible sprite image on the screen. No further operation is required for showing the new image.

GUI_SPRITE_SetBitmapAndPosition()

Description

Sets the position and the image at once.

Prototype

```
int GUI_SPRITE_SetBitmapAndPosition(GUI_HSPRITE hSprite,
                                    const GUI_BITMAP GUI_UNI_PTR * pBM,
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                                    int x, int y);
```

Parameter	Description
hSprite	Handle of sprite.
pBM	Pointer to the new bitmap structure to be used to draw the sprite.
x	New X-position in screen coordinates.
y	New Y-position in screen coordinates.

Additional information

It makes a difference on using the functions `GUI_SPRITE_SetBitmap()` and `GUI_SPRITE_SetPosition()` one after another or using this function. Whereas the image on the screen will be rendered twice on calling `GUI_SPRITE_SetBitmap()` and `GUI_SPRITE_SetPosition()` it is rendered only once on using this function, which can be used very well in animations.

GUI_SPRITE_SetPosition()

Description

Moves the sprite to the new position.

Prototype

```
void GUI_SPRITE_SetPosition(GUI_HSPRITE hSprite, int x, int y);
```

Parameter	Description
hSprite	Handle of sprite.
x	New X-position in screen coordinates.
y	New Y-position in screen coordinates.

Additional information

The function moves the given sprite to the new position.

GUI_SPRITE_Show()

Description

Shows the given sprite.

Prototype

```
void GUI_SPRITE_Show(GUI_HSPRITE hSprite);
```

Parameter	Description
hSprite	Handle of sprite.

Additional information

The function adds the given sprite to the list of visible sprites.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 27

Cursors

Window manager support includes a system-wide cursor which may be changed to other, predefined styles. Although the cursor always exists, it is hidden by default like a window. It will not be visible until a call is made to show it, and may be hidden again at any point.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

27.1 Available cursors

The following cursor styles are currently available. If a call to `GUI_CURSOR_Show()` is made and no style is specified with `GUI_CURSOR_Select()`, the default cursor will be a medium arrow.

Arrow cursors		Cross cursors	
GUI_CursorArrowS Small arrow		GUI_CursorCrossS Small cross	
GUI_CursorArrowM Medium arrow (default cursor)		GUI_CursorCrossM Medium cross	
GUI_CursorArrowL Large arrow		GUI_CursorCrossL Large cross	
Inverted arrow cursors		**Inverted cross cursors**	
GUI_CursorArrowSI Small inverted arrow		GUI_CursorCrossSI Small inverted cross	
GUI_CursorArrowMI Medium inverted arrow		GUI_CursorCrossMI Medium inverted cross	
GUI_CursorArrowLI Large inverted arrow		GUI_CursorCrossLI Large inverted cross	

27.2 Cursor API

The table below lists the available cursor-related routines in alphabetical order. Detailed descriptions follow:

Routine	Description
`GUI_CURSOR_GetState()`	Returns if the cursor is visible or not.
`GUI_CURSOR_Hide()`	Hide the cursor.
`GUI_CURSOR_Select()`	Set a specified cursor.
`GUI_CURSOR_SetPosition()`	Set the cursor position.
`GUI_CURSOR_Show()`	Show the cursor.

GUI_CURSOR_GetState()

Description

Returns if the cursor is currently visible or not.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
int GUI_CURSOR_GetState(void);
```

Return value

1 if the cursor is visible and 0 if not.

GUI_CURSOR_Hide()

Description

Hides the cursor.

Prototype

```
void GUI_CURSOR_Hide(void);
```

Additional information

This is the default cursor setting. If you want the cursor to be visible, you must call `GUI_CURSOR_Show()`.

GUI_CURSOR_Select()

Description

Sets a specified cursor style.

Prototype

```
void GUI_CURSOR_Select(const GUI_CURSOR * pCursor);
```

Parameter	Description
pCursor	Pointer to the cursor to be selected.

Permitted values for parameter pCursor	
GUI_CursorArrowS	Small arrow.
GUI_CursorArrowM	Medium arrow.
GUI_CursorArrowL	Large arrow.
GUI_CursorArrowSI	Small inverted arrow.
GUI_CursorArrowMI	Medium inverted arrow.
GUI_CursorArrowLI	Large inverted arrow.
GUI_CursorCrossS	Small cross.
GUI_CursorCrossM	Medium cross.
GUI_CursorCrossL	Large cross.
GUI_CursorCrossSI	Small inverted cross.
GUI_CursorCrossMI	Medium inverted cross.
GUI_CursorCrossLI	Large inverted cross.

Additional information

If this function is not called, the default cursor is a medium arrow.

GUI_CURSOR_SetPosition()

Description

Sets the cursor position.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void GUI_CURSOR_SetPosition(int x, int y);
```

Parameter	Description
x	X-position of the cursor.
y	Y-position of the cursor.

Additional information

Normally this function is called internally by the window manager and does not need to be called from the application.

GUI_CURSOR_Show()

Description

Shows the cursor.

Prototype

```
void GUI_CURSOR_Show(void);
```

Additional information

The default setting for the cursor is hidden; therefore this function must be called if you want the cursor to be visible.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 28

Antialiasing

Lines are approximated by a series of pixels that must lie at display coordinates. They can therefore appear jagged, particularly lines which are nearly horizontal or nearly vertical. This jaggedness is called aliasing.
Antialiasing is the smoothing of lines and curves. It reduces the jagged, stair-step appearance of any line that is not exactly horizontal or vertical. emWin supports different antialiasing qualities, antialiased fonts and high-resolution coordinates.
Support for antialiasing is a separate software item and is not included in the emWin basic package. The software for antialiasing is located in the subdirectory `GUI\AntiAlias`.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

28.1 Introduction

Antialiasing smoothes curves and diagonal lines by "blending" the background color with that of the foreground. The higher the number of shades used between background and foreground colors, the better the antialiasing result (and the longer the computation time).

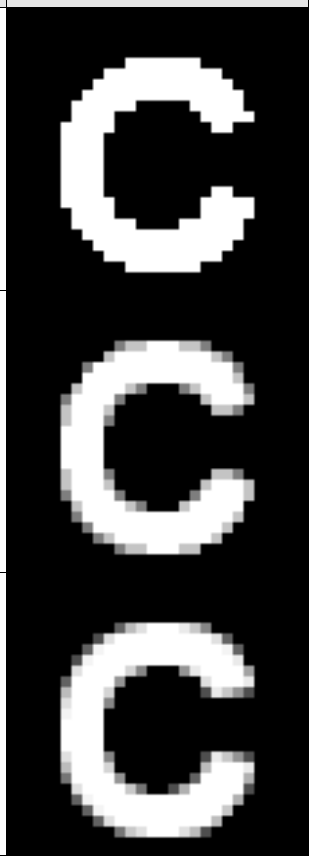
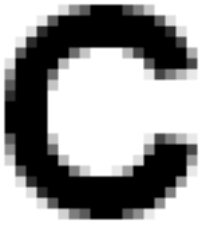
28.1.1 Quality of antialiasing



The quality of antialiasing is set by the routine `GUI_AA_SetFactor()`, explained later in the chapter. For an idea of the relationship between the antialiasing factor and the corresponding result, take a look at the image pictured.
The first line is drawn without antialiasing (factor 1). The second line is drawn antialiased using factor 2. This means that the number of shades from foreground to background is 2 x 2 = 4. The next line is drawn with an antialiasing factor of 3, so there are 3 x 3 = 9 shades, and so on. Factor 4 should be sufficient for most applications. Increasing the antialiasing factor further does not improve the result dramatically, but increases the calculation time.

28.1.2 Antialiased Fonts

Two types of antialiased fonts, low-quality (2bpp) and high-quality (4bpp), are supported. The routines needed to display these fonts are automatically linked when using them. The following table shows the effect on drawing the character C without antialiasing and with both types of antialiased fonts:

Font type	Black on white	White on black
Standard (no antialiasing) 1 bpp 2 shades		
Low-quality (antialiased) 2 bpp 4 shades		
High-quality (antialiased) 4 bpp 16 shades		

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

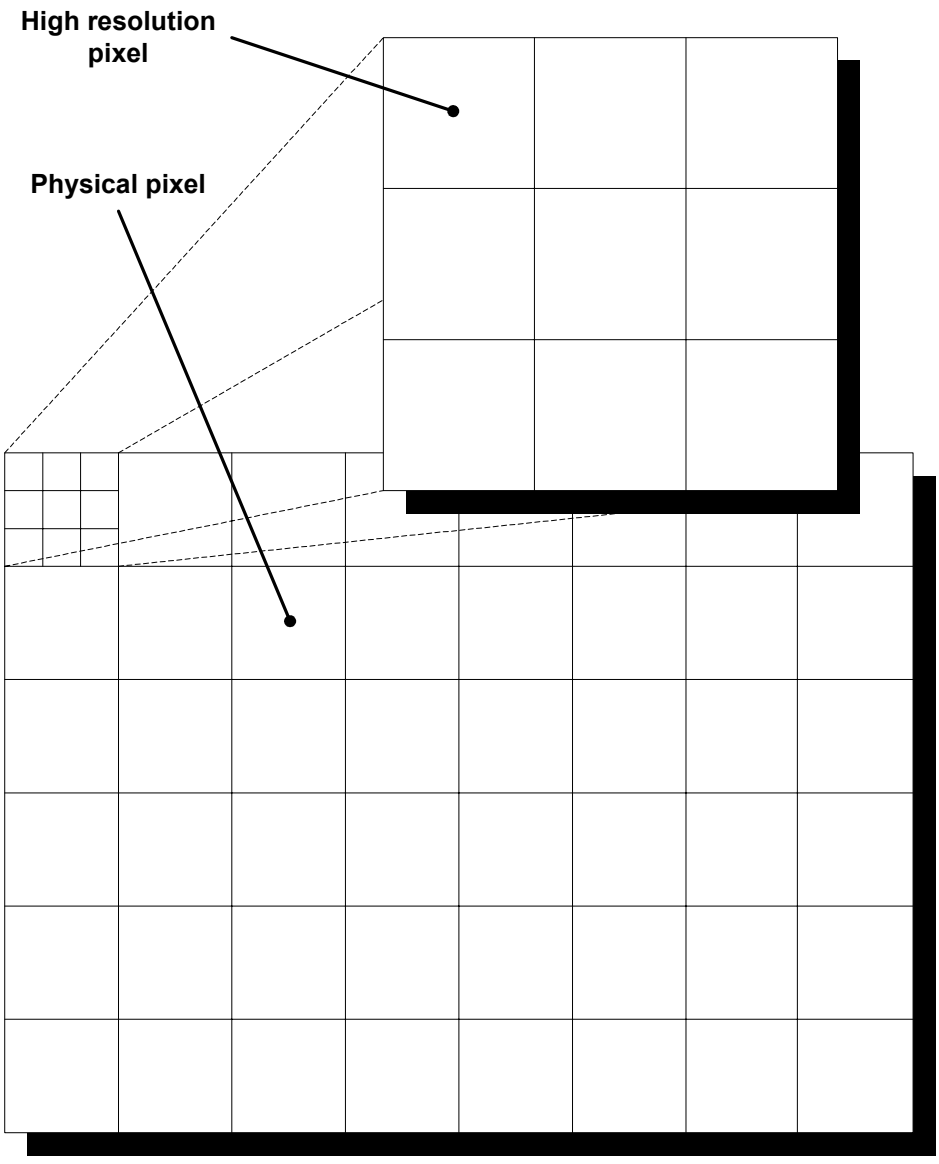
Antialiased fonts can be created with the emWin font converter. The general purpose of using antialiased fonts is to improve the appearance of text. While the effect of using high-quality antialiasing will be more visually pleasing than low-quality, computation time and memory consumption will increase proportionally. Low-quality (2bpp) fonts require twice the memory of non-antialiased (1bpp) fonts; high-quality (4bpp) fonts require four times the memory.

28.1.3 High-resolution coordinates

When drawing items using antialiasing, the same coordinates are used as for regular (non-antialiasing) drawing routines. This is the default mode. You do not need to consider the antialiasing factor in the function arguments. For example, to draw an antialiased line from (50, 100) to (100, 50) you would write:

```
GUI_AA_DrawLine(50, 100, 100, 50);
```

The high-resolution feature of emWin lets you use the virtual space determined by the antialiasing factor and your display size. The advantage of using high-resolution coordinates is that items can be placed not only at physical positions of your display but also "between" them.
The virtual space of a high-resolution pixel is illustrated below based on an antialiasing factor of 3:



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

To draw a line from pixel (50, 100) to (100, 50) in high-resolution mode with anti-aliasing factor 3, you would write:

```
GUI_AA_DrawLine(150, 300, 300, 150);
```

High-resolution coordinates must be enabled with the routine `GUI_AA_EnableHiRes()`, and may be disabled with `GUI_AA_DisableHiRes()`. Both functions are explained later in the chapter.
For example programs using the high-resolution feature, see the examples at the end of the chapter.

28.2 Antialiasing API

The table below lists the available routines in the antialiasing package, in alphabetical order within their respective categories. Detailed descriptions of the routines can be found in the sections that follow.

Routine	Description
Control functions	
GUI_AA_DisableHiRes()	Disable high-resoluton coordinates.
GUI_AA_EnableHiRes()	Enable high-resolution coordinates.
GUI_AA_GetFactor()	Return the current antialiasing factor.
GUI_AA_SetFactor()	Set the current antialiasing factor.
Drawing functions	
GUI_AA_DrawArc()	Draw an antialiased arc.
GUI_AA_DrawLine()	Draw an antialiased line.
GUI_AA_DrawPolyOutline()	Draw the outline of an antialiased polygon of max. 10 points.
GUI_AA_DrawPolyOutlineEx()	Draw the outline of an antialiased polygon.
GUI_AA_FillCircle()	Draw an antialiased circle.
GUI_AA_FillPolygon()	Draw a filled and antialiased polygon.

28.3 Control functions

GUI_AA_DisableHiRes()

Description

Disables high-resolution coordinates.

Prototype

```
void GUI_AA_DisableHiRes(void);
```

Additional information

High-resolution coordinates are disabled by default.

GUI_AA_EnableHiRes()

Description

Enables high-resolution coordinates.

Prototype

```
void GUI_AA_EnableHiRes(void);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_AA_GetFactor()

Description

Returns the current antialiasing quality factor.

Prototype

```
int  GUI_AA_GetFactor(void);
```

Return value

The current antialiasing factor.

GUI_AA_SetFactor()

Description

Sets the antialiasing quality factor.

Prototype

```
void GUI_AA_SetFactor(int Factor);
```

Parameter	Description
Factor	The new antialiasing factor. Minimum: 1 (will result in no antialiasing); maximum: 6.

Additional information

Setting the parameter Factor to 1, though permitted, will effectively disable antialiasing and result in a standard font.
We recommend an antialiasing quality factor of 2-4. The default factor is 3.

28.4 Drawing functions

GUI_AA_DrawArc()

Description

Displays an antialiased arc at a specified position in the current window, using the current pen size and the current pen shape.

Prototype

```
void GUI_AA_DrawArc(int x0, int y0, int rx, int ry, int a0, int a1);
```

Parameter	Description
x0	Horizontal position of the center.
y0	Vertical position of the center.
rx	Horizontal radius.
ry	Vertical radius.
a0	Starting angle (degrees).
a1	Ending angle (degrees).

Limitations

Currently the ry parameter is not available. The rx parameter is used instead.

Additional information

If working in high-resolution mode, position and radius must be in high-resolution coordinates. Otherwise they must be specified in pixels.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_AA_DrawLine()

Description

Displays an antialiased line at a specified position in the current window, using the current pen size and the current pen shape.

Prototype

```
void GUI_AA_DrawLine(int x0, int y0, int x1, int y1);
```

Parameter	Description
x0	X-starting position.
y0	Y-starting position.
x1	X-end position.
y1	Y-end position.

Additional information

If working in high-resolution mode, the coordinates must be in high-resolution coordinates. Otherwise they must be specified in pixels.

GUI_AA_DrawPolyOutline()

Description

Displays the outline of an antialiased polygon defined by a list of points, at a specified position in the current window and with a specified thickness. The number of points is limited to 10.

Prototype

```
void GUI_AA_DrawPolyOutline(const GUI_POINT * pPoint,
                            int               NumPoints,
                            int               Thickness,
                            int               x,
                            int               y)
```

Parameter	Description
pPoint	Pointer to the polygon to display.
NumPoints	Number of points specified in the list of points.
Thickness	Thickness of the outline.
x	X-position of origin.
y	Y-position of origin.

Additional information

The polyline drawn is automatically closed by connecting the endpoint to the starting point. The starting point must not be specified a second time as an endpoint.
If working in high-resolution mode, the coordinates must be in high-resolution coordinates. Otherwise they must be specified in pixels.
Per default the number of points processed by this function is limited to 10. If the polygon consists of more than 10 points the function GUI_AA_DrawPolyOutlineEx() should be used.

Example

```
#define countof(Array) (sizeof(Array) / sizeof(Array[0]))

static GUI_POINT aPoints[] = {
  {  0,  0 },
  { 15, 30 },
  {  0, 20 },
  {-15, 30 }
};

void Sample(void) {
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
  GUI_AA_DrawPolyOutline(aPoints, countof(aPoints), 3, 150, 40);
}
```

Screen shot of above example



GUI_AA_DrawPolyOutlineEx()

Description

Displays the outline of an antialiased polygon defined by a list of points, at a specified position in the current window and with a specified thickness.

Prototype

```
void GUI_AA_DrawPolyOutlineEx(const GUI_POINT * pPoint,
                              int               NumPoints,
                              int               Thickness,
                              int               x,
                              int               y,
                              GUI_POINT       * pBuffer);
```

Parameter	Description
pPoint	Pointer to the polygon to display.
NumPoints	Number of points specified in the list of points.
Thickness	Thickness of the outline.
x	X-position of origin.
y	Y-position of origin.
pBuffer	Pointer to a buffer of GUI_POINT elements.

Additional information

The number of polygon points is not limited by this function. Internally the function needs a buffer of GUI_POINT elements for calculation purpose. The number of points of the buffer needs to be >= the number of points of the polygon.
For more details, refer to “GUI_AA_DrawPolyOutline()” on page 792.

GUI_AA_FillCircle()

Description

Displays a filled, antialiased circle at a specified position in the current window.

Prototype

```
void GUI_AA_FillCircle(int x0, int y0, int r);
```

Parameter	Description
x0	X-position of the center of the circle in pixels of the client window.
y0	Y-position of the center of the circle in pixels of the client window.
r	Radius of the circle (half of the diameter). Minimum: 0 (will result in a point); maximum: 180.

Additional information

If working in high-resolution mode, the coordinates must be in high-resolution coordinates. Otherwise they must be specified in pixels.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_AA_FillPolygon()

Description

Fills an antialiased polygon defined by a list of points, at a specified position in the current window.

Prototype

```
void GUI_AA_FillPolygon(const GUI_POINT * pPoint,
                        int               NumPoints,
                        int               x,
                        int               y)
```

Parameter	Description
pPoint	Pointer to the polygon to display.
NumPoints	Number of points specified in the list of points.
x	X-position of origin.
y	Y-position of origin.

Additional information

The polyline drawn is automatically closed by connecting the endpoint to the starting point. The starting point must not be specified a second time as an endpoint.
If working in high-resolution mode, the coordinates must be in high-resolution coordinates. Otherwise they must be specified in pixels.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

28.5 Examples

Different antialiasing factors

The following example creates diagonal lines with and without antialiasing. The source code is available as `AA_Lines.c` in the examples shipped with emWin.

```
/*********************************************************************
*                 SEGGER Microcontroller GmbH & Co. KG               *
*        Solutions for real time microcontroller applications        *
*                                                                    *
*                      emWin example code                            *
*                                                                    *
**********************************************************************

----------------------------------------------------------------------
File        : AA_Lines.c
Purpose     : Shows lines with different antialiasing qualities
----------------------------------------------------------------------
*/

#include "GUI.H"

/*********************************************************************
*
*         Show lines with different antialiasing qualities
*
**********************************************************************
*/

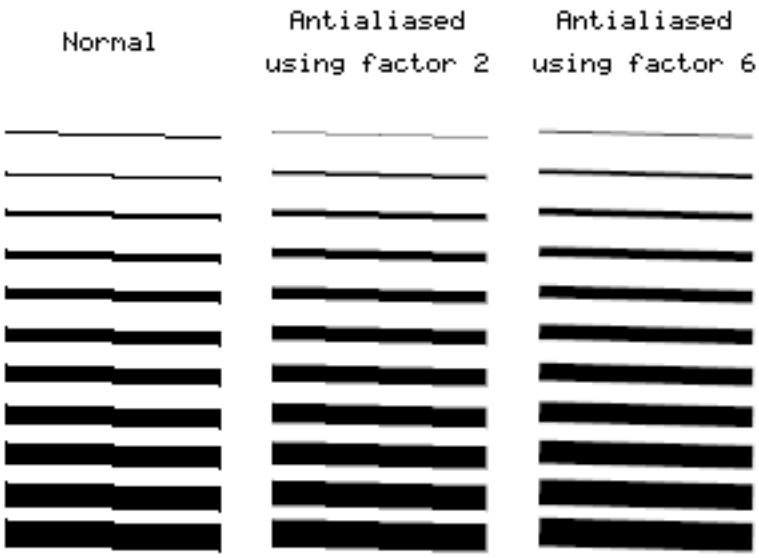
static void DemoAntialiasing(void) {
  int i, x1, x2;
  int y = 2;
  /* Set drawing attributes */
  GUI_SetColor(GUI_BLACK);
  GUI_SetBkColor(GUI_WHITE);
  GUI_SetPenShape(GUI_PS_FLAT);
  GUI_Clear();
  x1 = 10; x2 = 90;
  /* Draw lines without antialiasing */
  GUI_DispStringHCenterAt("\nNormal", (x1 + x2) / 2, 10);
  for (i = 1; i < 12; i++) {
    GUI_SetPenSize(i);
    GUI_DrawLine(x1, 40 + i * 15, x2, 40 + i * 15 +  y);
  }
  x1 = 110; x2 = 190;
  /* Draw lines with antialiasing quality faktor 2 */
  GUI_AA_SetFactor(2);
  GUI_DispStringHCenterAt("Antialiased\n\nusing factor 2", (x1 + x2) / 2, 10);
  for (i = 1; i < 12; i++) {
    GUI_SetPenSize(i);
    GUI_AA_DrawLine(x1, 40 + i * 15, x2, 40 + i * 15 +  y);
  }
  x1 = 210; x2 = 290;
  /* Draw lines with antialiasing quality faktor 6 */
  GUI_AA_SetFactor(6);
  GUI_DispStringHCenterAt("Antialiased\n\nusing factor 6", (x1 + x2) / 2, 10);
  for (i = 1; i < 12; i++) {
    GUI_SetPenSize(i);
    GUI_AA_DrawLine(x1, 40 + i * 15, x2, 40 + i * 15 +  y);
  }
}

/*********************************************************************
*
*                 main
*
**********************************************************************
*/

void main(void) {
  GUI_Init();
  DemoAntialiasing();
  while(1)
    GUI_Delay(100);
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Screen shot of above example



Lines placed on high-resolution coordinates

This example shows antialiased lines placed on high-resolution coordinates. It is available as `AA_HiResPixels.c`.

```
/*********************************************************************
*                 SEGGER Microcontroller GmbH & Co. KG               *
*        Solutions for real time microcontroller applications        *
*                                                                    *
*                     emWin example code                             *
*                                                                    *
**********************************************************************

----------------------------------------------------------------------
File        : AA_HiResPixels.c
Purpose     : Demonstrates high resolution pixels
----------------------------------------------------------------------
*/

#include "GUI.H"

/*********************************************************************
*
*         Show lines placed on high resolution pixels
*
**********************************************************************
*/

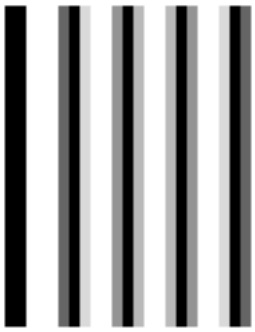
static void ShowHiResPixels(void) {
  int i, Factor = 5;
  GUI_SetBkColor(GUI_WHITE);
  GUI_SetColor(GUI_BLACK);
  GUI_Clear();
  GUI_SetLBorder(50);
  GUI_DispStringAt("This example uses high resolution pixels.\n", 50, 10);
  GUI_DispString  ("Not only the physical pixels are used.\n");
  GUI_DispString  ("Enabling high resolution simulates more\n");
  GUI_DispString  ("pixels by using antialiasing.\n");
  GUI_DispString  ("Please take a look at the magnified output\n");
  GUI_DispString  ("to view the result.\n");
  GUI_SetPenSize(2);
  GUI_SetPenShape(GUI_PS_FLAT);
  GUI_AA_EnableHiRes();       /* Enable high resolution */
  GUI_AA_SetFactor(Factor);   /* Set quality factor */
  /* Drawing lines using high resolution pixels */
  for (i = 0; i < Factor; i++) {
    int x = (i + 1) * 5 * Factor + i - 1;
    GUI_AA_DrawLine(x, 50, x, 199);
  }
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
/*************************************************************************
*
*                 main
*
*************************************************************************
*/

void main(void) {
  GUI_Init();
  ShowHiResPixels();
  while(1) {
    GUI_Delay(100);
  }
```

Magnified screen shot of above example



Moving pointer using high-resolution antialiasing

This example illustrates the use of high-resolution antialiasing by drawing a rotating pointer that turns 0.1 degrees with each step. There is no screen shot of this example because the effects of high-resolution antialiasing are only visible in the movement of the pointers. Without high-resolution the pointer appears to make short "jumps", whereas in high-resolution mode there is no apparent jumping.
The example can be found as `AA_HiResAntialiasing.c`.

```
/*************************************************************************
*                 SEGGER Microcontroller GmbH & Co. KG                  *
*        Solutions for real time microcontroller applications           *
*                                                                       *
*                     emWin example code                                *
*                                                                       *
*************************************************************************

----------------------------------------------------------------------
File        : AA_HiResAntialiasing.c
Purpose     : Demonstrates high resolution antialiasing
----------------------------------------------------------------------
*/

#include "GUI.H"

/*************************************************************************
*
*             Data
*
*************************************************************************
*/

#define countof(Obj) (sizeof(Obj)/sizeof(Obj[0]))

static const GUI_POINT aPointer[] = {
  {  0,  3},
  { 85,  1},
  { 90,  0},
  { 85, -1},
  {  0, -3}
};

static GUI_POINT aPointerHiRes[countof(aPointer)];
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
typedef struct {
  GUI_AUTODEV_INFO AutoInfo;
  GUI_POINT aPoints[countof(aPointer)];
  int Factor;
} PARAM;

/*********************************************************************
*
*                 Drawing routines
*
**********************************************************************
*/

static void DrawHiRes(void * p) {
  PARAM * pParam = (PARAM *)p;
  if (pParam->AutoInfo.DrawFixed) {
    GUI_ClearRect(0, 0, 99, 99);
  }
  GUI_AA_FillPolygon(pParam->aPoints,
                     countof(aPointer),
                     5 * pParam->Factor,
                     95 * pParam->Factor);
}

static void Draw(void * p) {
  PARAM * pParam = (PARAM *)p;
  if (pParam->AutoInfo.DrawFixed) {
    GUI_ClearRect(100, 0, 199, 99);
  }
  GUI_AA_FillPolygon(pParam->aPoints, countof(aPointer), 105, 95);
}

/*********************************************************************
*
*    Demonstrate high resolution by drawing rotating pointers
*
**********************************************************************
*/

static void ShowHiresAntialiasing(void) {
  int i;
  GUI_AUTODEV aAuto[2];
  PARAM Param;
  Param.Factor = 3;
  GUI_DispStringHCenterAt("Using\nhigh\nresolution\nmode", 50, 120);
  GUI_DispStringHCenterAt("Not using\nhigh\nresolution\nmode", 150, 120);
  /* Create GUI_AUTODEV objects */
  for (i = 0; i < countof(aAuto); i++) {
    GUI_MEMDEV_CreateAuto(&aAuto[i]);
  }
  /* Calculate pointer for high resolution */
  for (i = 0; i < countof(aPointer); i++) {
    aPointerHiRes[i].x = aPointer[i].x * Param.Factor;
    aPointerHiRes[i].y = aPointer[i].y * Param.Factor;
  }
  GUI_AA_SetFactor(Param.Factor); /* Set antialiasing factor */
  while(1) {
    for (i = 0; i < 1800; i++) {
      float Angle = (i >= 900) ? 1800 - i : i;
      Angle *= 3.1415926f / 1800;
      /* Draw pointer with high resolution */
      GUI_AA_EnableHiRes();
      GUI_RotatePolygon(Param.aPoints, aPointerHiRes, countof(aPointer), Angle);
      GUI_MEMDEV_DrawAuto(&aAuto[0], &Param.AutoInfo, DrawHiRes, &Param);
      /* Draw pointer without high resolution */
      GUI_AA_DisableHiRes();
      GUI_RotatePolygon(Param.aPoints, aPointer, countof(aPointer), Angle);
      GUI_MEMDEV_DrawAuto(&aAuto[1], &Param.AutoInfo, Draw, &Param);
      GUI_Delay(2);
    }
  }
}

/*********************************************************************
*
*                 main
*
**********************************************************************
*/
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
void main(void) {
  GUI_Init();
  ShowHiresAntialiasing();
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 29

Foreign Language Support

Text written in a foreign language like Arabic, Thai or Chinese contains characters, which are normally not part of the fonts shipped with emWin.
This chapter explains the basics like the Unicode standard, which defines all available characters worldwide and the UTF-8 encoding scheme, which is used by emWin to decode text with Unicode characters.
It also explains how to enable Arabic language support and how to render text with Shift-JIS (Japanese Industry Standard) encoding.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

29.1 Unicode

The Unicode standard is a 16-bit character encoding scheme. All of the characters available worldwide are in a single 16-bit character set (which works globally). The Unicode standard is defined by the Unicode consortium.
emWin can display individual characters or strings in Unicode, although it is most common to simply use mixed strings, which can have any number of Unicode sequences within one ASCII string.

29.1.1 UTF-8 encoding

ISO/IEC 10646-1 defines a multi-octet character set called the Universal Character Set (UCS) which encompasses most of the world's writing systems. Multi-octet characters, however, are not compatible with many current applications and protocols, and this has led to the development of a few UCS transformation formats (UTF), each with different characteristics.
UTF-8 has the characteristic of preserving the full ASCII range, providing compatibility with file systems, parsers and other software that rely on ASCII values but are transparent to other values.
In emWin, UTF-8 characters are encoded using sequences of 1 to 3 octets. If the high-order bit is set to 0, the remaining 7 bits being used to encode the character value. In a sequence of n octets, n>1, the initial octet has the n higher-order bits set to 1, followed by a bit set to 0. The remaining bit(s) of that octet contain bits from the value of the character to be encoded. The following octet(s) all have the higher-order bit set to 1 and the following bit set to 0, leaving 6 bits in each to contain bits from the character to be encoded.
The following table shows the encoding ranges:

Character range	UTF-8 Octet sequence
0000 - 007F	0xxxxxxx
0080 - 07FF	110xxxxx 10xxxxxx
0800 - FFFF	1110xxxx 10xxxxxx 10xxxxxx

Encoding example

The text "Halöle" contains ASCII characters and European extensions. The following hexdump shows this text as UTF-8 encoded text:

```
48 61 6C C3 B6 6C 65
```

Programming examples

If we want to display a text containing non-ASCII characters, we can do this by manually computing the UTF-8 codes for the non-ASCII characters in the string.
However, if your compiler supports UTF-8 encoding (Sometimes called multi-byte encoding), even non-ASCII characters can be used directly in strings.

```
//
// Example using ASCII encoding:
//
GUI_UC_SetEncodeUTF8();       /* required only once to activate UTF-8*/
GUI_DispString("Hal\xc3\xb6le");

//
// Example using UTF-8 encoding:
//
GUI_UC_SetEncodeUTF8();       /* required only once to activate UTF-8*/
GUI_DispString("Halöle");
```

29.1.2 Unicode characters

The character output routine used by emWin (`GUI_DispChar()`) does always take an unsigned 16-bit value (U16) and has the basic ability to display a character defined by Unicode. It simply requires a font which contains the character you want to display.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

29.1.3 UTF-8 strings

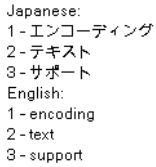
This is the most recommended way to display Unicode. You do not have to use special functions to do so. If UTF-8-encoding is enabled each function of emWin which handles with strings decodes the given text as UTF-8 text.

29.1.3.1 Using U2C.exe to convert UTF-8 text into C-code

The `Tool` subdirectory of emWin contains the tool `U2C.exe` to convert UTF-8 text to C-code. It reads an UTF-8 text file and creates a C-file with C-strings. The following steps show how to convert a text file into C-strings and how to display them with emWin:

Step 1: Creating a UTF-8 text file

Save the text to be converted in UTF-8 format. You can use `Notepad.exe` to do this. Load the text under `Notepad.exe`:



Choose "File/Save As...". The file dialog should contain a combo box to set the encoding format. Choose "UTF-8" and save the text file.

Step 2: Converting the text file into a C-code file

Start `U2C.exe`. After starting the program you need to select the text file to be converted. After selecting the text file the name of the C-file should be selected. Output of `U2C.exe`:

```
"Japanese:"
"1 - \xe3\x82\xa8\xe3\x83\xb3\xe3\x82\xb3\xe3\x83\xbc
    "\xe3\x83\x87\xe3\x82\xa3\xe3\x83\xb3\xe3\x82\xb0"
"2 - \xe3\x83\x86\xe3\x82\xad\xe3\x82\xb9\xe3\x83\x88"
"3 - \xe3\x82\xb5\xe3\x83\x9d\xe3\x83\xbc\xe3\x83\x88"
"English:"
"1 - encoding"
"2 - text"
"3 - support"
```

Step 3: Using the output in the application code

The following example shows how to display the UTF-8 text with emWin:

```
#include "GUI.h"

static const char * _apStrings[] = {
  "Japanese:",
  "1 - \xe3\x82\xa8\xe3\x83\xb3\xe3\x82\xb3\xe3\x83\xbc"
      "\xe3\x83\x87\xe3\x82\xa3\xe3\x83\xb3\xe3\x82\xb0",
  "2 - \xe3\x83\x86\xe3\x82\xad\xe3\x82\xb9\xe3\x83\x88",
  "3 - \xe3\x82\xb5\xe3\x83\x9d\xe3\x83\xbc\xe3\x83\x88",
  "English:",
  "1 - encoding",
  "2 - text",
  "3 - support"
};

void MainTask(void) {
  int i;
  GUI_Init();
  GUI_SetFont(&GUI_Font16_1HK);
  GUI_UC_SetEncodeUTF8();
  for (i = 0; i < GUI_COUNTOF(_apStrings); i++) {
    GUI_DispString(_apStrings[i]);
    GUI_DispNextLine();
  }
  while(1) {
    GUI_Delay(500);
  }
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

29.1.4 Unicode API

The table below lists the available routines in alphabetical order within their respective categories. Detailed descriptions of the routines can be found in the sections that follow.

Routine	Description
UTF-8 functions	
GUI_UC_ConvertUC2UTF8()	Converts a Unicode string into UTF-8 format.
GUI_UC_ConvertUTF82UC()	Converts a UTF-8 string into Unicode format.
GUI_UC_EnableBIDI()	Enables/Disables the support for bidirectional fonts.
GUI_UC_Encode()	Encodes the given character with the current encoding.
GUI_UC_GetCharCode()	Returns the decoded character.
GUI_UC_GetCharSize()	Returns the number of bytes used to encode the given character.
GUI_UC_SetEncodeNone()	Disables encoding.
GUI_UC_SetEncodeUTF8()	Enables UTF-8 encoding.
Double byte functions	
GUI_UC_DispString()	Displays a double byte string.

29.1.4.1 UTF-8 functions

GUI_UC_ConvertUC2UTF8()

Description

Converts the given double byte Unicode string into UTF-8 format.

Prototype

```
int GUI_UC_ConvertUC2UTF8(const U16 GUI_UNI_PTR * s, int Len,
                          char * pBuffer, int BufferSize);
```

Parameter	Description
s	Pointer to Unicode string to be converted.
Len	Number of Unicode characters to be converted.
pBuffer	Pointer to a buffer to write in the result.
BufferSize	Buffer size in bytes.

Return value

The function returns the number of bytes written to the buffer.

Additional information

UTF-8 encoded characters can use up to 3 bytes. To be on the save side the recommended buffer size is: Number of Unicode characters * 3.
If the buffer is not big enough for the whole result, the function returns when the buffer is full.

GUI_UC_ConvertUTF82UC()

Description

Converts the given UTF-8 string into Unicode format.

Prototype

```
int GUI_UC_ConvertUTF82UC(const char GUI_UNI_PTR * s, int Len,
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
                                U16 * pBuffer, int BufferSize);
```

Parameter	Description
s	Pointer to UFT-8 string to be converted.
Len	Length in bytes of the string to be converted.
pBuffer	Pointer to a buffer to write in the result.
BufferSize	Buffer size in words.

Return value

The function returns the number of Unicode characters written to the buffer.

Additional information

If the buffer is not big enough for the whole result, the function returns when the buffer is full.

GUI_UC_EnableBIDI()

Description

This function enables the support for bidirectional fonts.

Prototype

```
int GUI_UC_EnableBIDI(int OnOff);
```

Parameter	Description
OnOff	1 to enable BIDI support, 2 to disable it.

Return value

The previous state of BIDI support.

Additional information

Once this function is linked approximately 60 KBytes of ROM are additionally used.

GUI_UC_Encode()

Description

This function encodes a given character with the current encoding settings.

Prototype

```
int GUI_UC_Encode(char* s, U16 Char);
```

Parameter	Description
s	Pointer to a buffer to store the encoded character.
Char	Character to be encoded.

Return value

The number of bytes stored to the buffer.

Additional information

The function assumes that the buffer has at least 3 bytes for the result.

GUI_UC_GetCharCode()

Description

This function decodes a character from a given text.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
U16 GUI_UC_GetCharCode(const char* s);
```

Parameter	Description
s	Pointer to the text to be encoded.

Return value

The encoded character.

Related topics

GUI_UC_GetCharSize()

GUI_UC_GetCharSize()

Description

This function returns the number of bytes used to encode the given character.

Prototype

```
int GUI_UC_GetCharSize(const char* s);
```

Parameter	Description
s	Pointer to the text to be encoded.

Return value

Number of bytes used to encode the given character

Additional information

This function is used to determine how much bytes a pointer has to be incremented to point to the next character. The following example shows how to use the function:

```
static void _Display2Characters(const char * pText) {
  int Size;
  U16 Character;
  Size = GUI_UC_GetCharSize(pText);      /* Size to increment pointer */
  Character = GUI_UC_GetCharCode(pText); /* Get first character code */
  GUI_DispChar(Character);               /* Display first character */
  pText += Size;                         /* Increment pointer */
  Character = GUI_UC_GetCharCode(pText); /* Get next character code */
  GUI_DispChar(Character);               /* Display second character */
}
```

GUI_UC_SetEncodeNone()

Description

Disables character encoding.

Prototype

```
void GUI_UC_SetEncodeNone(void);
```

Additional information

After calling this function each byte of a text will be handled as one character. This is the default behavior of emWin.

GUI_UC_SetEncodeUTF8()

Description

Enables UTF-8 encoding.

Prototype

```
void GUI_UC_SetEncodeUTF8(void);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

After calling `GUI_UC_SetEncodeUTF8` each string related routine of emWin encodes a given sting in accordance to the UTF-8 transformation.

29.1.4.2 Double byte functions

GUI_UC_DispString()

Description

This function displays the given double byte string.

Prototype

```
void GUI_UC_DispString(const U16 GUI_FAR *s);
```


Parameter	Description
s	Pointer to double byte string.

Additional information

If you need to display double byte strings you should use this function. Each character has to be defined by a 16 bit value.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

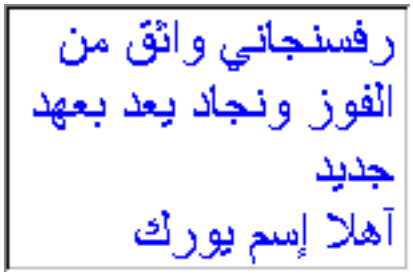29.2 Arabic language support



The basic difference between western languages and Arabic is, that Arabic is written from the right to the left and that it does not know uppercase and lowercase characters. Further the character codes of the text are not identical with the character index in the font file used to render the character, because the notation forms of the characters depend on the positions in the text.

29.2.1 Notation forms

The Arabic base character set is defined in the Unicode standard within the range from 0x0600 to 0x06FF. Unfortunately these character codes can not directly be used to get the character of the font for drawing it, because the notation form depends on the character position in the text. One character can have up to 4 different notation forms:

- One, if it is at the beginning of a word (initial)
- One, if it is at the end of a word (final)
- One, if it is in the middle of a word (medial)
- One, if the character stands alone (isolated)

But not each character is allowed to be joined to the left and to the right (double-joined). The character 'Hamza' for example always needs to be separated and 'Alef' is only allowed at the end or separated. Character combinations of the letters 'Lam' and 'Alef' should be transformed to a 'Ligature'. This means one character substitutionally for the combination of 'Lam' and 'Alef'.
The above explanation shows, that the notation form is normally not identically with the character code of the text. The following table shows how emWin transforms the characters to the notation form in dependence of the text position:

Base	Isolated	Final	Initial	Medial	Character
0x0621	0xFE80	-	-	-	Hamza
0x0622	0xFE81	0xFE82	-	-	Alef with Madda above
0x0623	0xFE83	0xFE84	-	-	Alef with Hamza above
0x0624	0xFE85	0xFE86	-	-	Waw with Hamza above
0x0625	0xFE87	0xFE88	-	-	Alef with Hamza below
0x0626	0xFE89	0xFE8A	0xFE8B	0xFE8C	Yeh with Hamza above
0x0627	0xFE8D	0xFE8E	-	-	Alef
0x0628	0xFE8F	0xFE90	0xFE91	0xFE92	Beh
0x0629	0xFE93	0xFE94	-	-	Teh Marbuta
0x062A	0xFE95	0xFE96	0xFE97	0xFE98	Teh
0x062B	0xFE99	0xFE9A	0xFE9B	0xFE9C	Theh
0x062C	0xFE9D	0xFE9E	0xFE9F	0xFEA0	Jeem
0x062D	0xFEA1	0xFEA2	0xFEA3	0xFEA4	Hah
0x062E	0xFEA5	0xFEA6	0xFEA7	0xFEA8	Khah
0x062F	0xFEA9	0xFEAA	-	-	Dal
0x0630	0xFEAB	0xFEAC	-	-	Thal
0x0631	0xFEAD	0xFEAE	-	-	Reh

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Base	Isolated	Final	Initial	Medial	Character
0x0632	0xFEAF	0xFEB0	-	-	Zain
0x0633	0xFEB1	0xFEB2	0xFEB3	0xFEB4	Seen
0x0634	0xFEB5	0xFEB6	0xFEB7	0xFEB8	Sheen
0x0635	0xFEB9	0xFEBA	0xFEBB	0xFEBC	Sad
0x0636	0xFEBD	0xFEBE	0xFEBF	0xFEC0	Dad
0x0637	0xFEC1	0xFEC2	0xFEC3	0xFEC4	Tah
0x0638	0xFEC5	0xFEC6	0xFEC7	0xFEC8	Zah
0x0639	0xFEC9	0xFECA	0xFECB	0xFECC	Ain
0x063A	0xFECD	0xFECE	0xFECF	0xFED0	Ghain
0x0641	0xFED1	0xFED2	0xFED3	0xFED4	Feh
0x0642	0xFED5	0xFED6	0xFED7	0xFED8	Qaf
0x0643	0xFED9	0xFEDA	0xFEDB	0xFEDC	Kaf
0x0644	0xFEDD	0xFEDE	0xFEDF	0xFEE0	Lam
0x0645	0xFEE1	0xFEE2	0xFEE3	0xFEE4	Meem
0x0646	0xFEE5	0xFEE6	0xFEE7	0xFEE8	Noon
0x0647	0xFEE9	0xFEEA	0xFEEB	0xFEEC	Heh
0x0648	0xFEED	0xFEEE	-	-	Waw
0x0649	0xFEEF	0xFEF0	-	-	Alef Maksura
0x064A	0xFEF1	0xFEF2	0xFEF3	0xFEF4	Yeh
0x067E	0xFB56	0xFB57	0xFB58	0xFB59	Peh
0x0686	0xFB7A	0xFB7B	0xFB7C	0xFB7D	Tcheh
0x0698	0xFB8A	0xFB8B	-	-	Jeh
0x06A9	0xFB8E	0xFB8F	0xFB90	0xFB91	Keheh
0x06AF	0xFB92	0xFB93	0xFB94	0xFB95	Gaf
0x06CC	0xFBFC	0xFBFD	0xFBFE	0xFBFF	Farsi Yeh

29.2.2 Ligatures

Character combinations of 'Lam' and 'Alef' needs to be transformed to ligatures. The following table shows how emWin transforms these combinations into ligatures, if the first letter is a 'Lam' (code 0x0644):


Second letter	Ligature (final)	Ligature (elsewhere)
0x622, Alef with Madda above	0xFEF6	0xFEF5
0x623, Alef with Hamza above	0xFEF8	0xFEF7
0x625, Alef with Hamza below	0xFEFA	0xFEF9
0x627, Alef	0xFEFC	0xFEFB

29.2.3 Bidirectional text alignment

As mentioned above Arabic is written from the right to the left (RTL). But if for example the Arabic text contains numbers build of more than one digit these numbers should be written from left to right. And if Arabic text is mixed with European text a couple of further rules need to be followed to get the right visual alignment of the text.
The Unicode consortium has defined these rules in the Unicode standard. If bidirectional text support is enabled, emWin follows up most of these rules to get the right visual order before drawing the text.
emWin also supports mirroring of neutral characters in RTL aligned text. This is important if for example Arabic text contains parenthesis. The mirroring is done by replacing the code of the character to be mirrored with the code of a mirror partner whose image fits to the mirrored image. This is done by a fast way using a table containing all characters with existing mirror partners. Note that support for mirroring further characters is not supported.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

The following example shows how bidirectional text is rendered by emWin:

UTF-8 text	Rendering
\xd8\xb9\xd9\x84\xd8\xa7 1, 2, 345 \xd8\xba\xd9\x86\xd9\x8a XYZ \xd8\xa3\xd9\x86\xd8\xa7	

29.2.4 Requirements

Arabic language support is part of the basic package. Note that the standard fonts of emWin does not contain font files with Arabic characters. To create a Arabic font file, the font converter is required

Memory

The bidirectional text alignment and Arabic character transformation uses app. 60 KB of ROM and app. 800 bytes of additional stack.

29.2.5 How to enable Arabic support

Per default emWin writes text always from the left to the right and there will be no Arabic character transformation as described above. To enable support for bidirectional text and Arabic character transformation, add the following line to your application:

```
GUI_UC_EnableBIDI(1);
```

If enabled, emWin follows the rules of the bidirectional algorithm, described by the Unicode consortium, to get the right visual order before drawing text.

29.2.6 Example

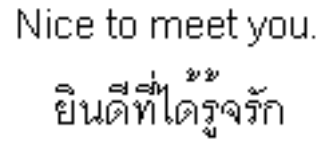
The `Sample` folder contains the example `FONT_Arabic`, which shows how to draw Arabic text. It contains an emWin font with Arabic characters and some small Arabic text examples.

29.2.7 Font files used with Arabic text

Font files used to render Arabic languages need to include at least all characters defined in the 'Arabic' range 0x600-0x6FF and the notation forms and ligatures listed in the tables of this chapter.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

29.3 Thai language support



The Thai alphabet uses 44 consonants and 15 basic vowel characters. These are horizontally placed, left to right, with no intervening space, to form syllables, words, and sentences. Vowels are written above, below, before, or after the consonant they modify, although the consonant always sounds first when the syllable is spoken. The vowel characters (and a few consonants) can be combined in various ways to produce numerous compound vowels (diphthongs and triphthongs).

29.3.1 Requirements

As explained above the Thai language makes an extensive usage of compound characters. To be able to draw compound characters in emWin, a new font type is needed, which contains all required character information like the image size, image position and cursor incrementation value. From version 4.00 emWin supports a new font type with this information. This also means that older font types can not be used to draw Thai text.
Note that the standard fonts of emWin does not contain font files with Thai characters. To create a Thai font file, the font converter of version 3.04 or newer is required.

Memory

The Thai language support needs no additional ROM or RAM.

29.3.2 How to enable Thai support

Thai support does not need to be enabled by a configuration switch. The only thing required to draw Thai text is a font file of type 'Extended' created with the font converter from version 3.04 or newer.

29.3.3 Example

The `Sample` folder contains the example `FONT_ThaiText.c`, which shows how to draw Thai text. It contains an emWin font with Thai characters and some small Thai text examples.

29.3.4 Font files used with Thai text

Font files used to render Thai text need to include at least all characters defined in the 'Thai' range 0xE00-0xE7F.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

29.4 Shift JIS support

Shift JIS (Japanese Industry Standard) is a character encoding method for the Japanese language. It is the most common Japanese encoding method. Shift JIS encoding makes generous use of 8-bit characters, and the value of the first byte is used to distinguish single- and multiple-byte characters.
The Shift JIS support of emWin is only needed if text with Shift JIS encoding needs to be rendered.
You need no special function calls to draw a Shift JIS string. The main requirement is a font file which contains the Shift JIS characters.

29.4.1 Creating Shift JIS fonts

The Font Converter can generate a Shift JIS font for emWin from any Windows font. When using a Shift JIS font, the functions used to display Shift JIS characters are linked automatically with the library.
For detailed information on how to create Shift-JIS fonts, contact SEGGER Microcontroller GmbH & Co. KG (info@segger.com). A separate Font Converter documentation describes all you need for an efficient way of implementing Shift JIS in your emWin projects.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 30

Display drivers

A display driver supports a particular family of display controllers and all displays which are connected to one or more of these controllers. The drivers can be configured by modifying their configuration files whereas the driver itself does not need to be modified. The configuration files contain all required information for the driver including how the hardware is accessed and how the controller(s) are connected to the display.
This chapter provides an overview of the display drivers available for emWin. It explains the following in terms of each driver:

- Which display controllers can be accessed, as well as supported color depths and types of interfaces.
- RAM requirements.
- Driver specific functions.
- How to access the hardware.
- Special configuration switches.
- Special requirements for particular display controllers.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.1 Available display drivers

Since emWin V5 the driver interface has changed. Old display drivers, developed for emWin V4 or earlier, are not longer supported.
The display driver interface was changed in order to be able to configure drivers at run-time. This was required because emWin is often used as a precompiled library which should not have to be changed when using a different display.

Warning: Creating a precompiled library including the source files of a compile-time configurable driver preclude configurability using the library.

To be able to support as many display controllers as possible in a short period, we migrated some of the older drivers to the new interface. Please note that these migrated display drivers are not completely run-time configurable. Only completely new developed drivers are run-time configurable. See 30.1.2 and following for the listings of all currently available drivers.

30.1.1 Driver file naming convention

All files belonging to the same display driver begin with the name of the driver. So all files called `<DriverName>*.*` describe the whole driver.

Example

The following files describe the `GUIDRV_IST3088` display driver:

- `GUIDRV_IST3088.c`
- `GUIDRV_IST3088.h`
- `GUIDRV_IST3088_4.c`
- `GUIDRV_IST3088_Private.h`
- `GUIDRV_IST3088_X_4.c`

30.1.2 Run-time configurable drivers

The following table lists the currently available run-time configurable drivers developed for the current interface of emWin:

Driver	Supported display controller / Purpose of driver	Supported bits/pixel
GUIDRV_BitPlains	This driver can be used for solutions without display controller. It manages separate 'bitplains' for each color bit. Initially it has been developed to support a solution for an R32C/111 which drives a TFT display without display controller. It can be used for each solution which requires the color bits in separate plains.	1 - 8
GUIDRV_Dist	This driver supports displays with multiple controllers	Depends on the actual display drivers.
GUIDRV_FlexColor	Epson S1D19122 Himax HX8353, HX8325A Ilitek ILI9320, ILI9325, ILI9328 LG Electronics LGDP4531, LGDP4551 Novatek NT39122 OriseTech SPFD5408, SPFD54124C, SPFD5414D Renesas R61505, R61516, R61580 Sitronix ST7628, ST7637, ST7735 Solomon SSD1355, SSD1961, SSD1963, SSD2119 Syncoam SEPS525	16, 18
GUIDRV_IST3088	IST3088 IST3257	4
GUIDRV_Lin	This driver supports each display controller with linear addressable video memory with a direct (full bus) interface. This means that the video RAM is directly addressable by the address lines of the CPU. The driver contains no controller specific code. So it can also be used for solutions without display controller which require a driver which only manages the video RAM.	1, 2, 4, 8, 16, 24, 32
GUIDRV_S1D13748	Epson S1D13748	16

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Driver	Supported display controller / Purpose of driver	Supported bits/pixel
GUIDRV_S1D15G00	Epson S1D15G00	12
GUIDRV_SLin	Epson S1D13700 (indirect interface only!) Solomon SSD1848 Toshiba T6963 UltraChip UC1617	1, 2
GUIDRV_SPage	UltraChip UC1611	2, 4
GUIDRV_SSD1926	Solomon SSD1926	8

30.1.3 Compile-time configurable drivers

The following table lists the currently available drivers which has already been migrated to the current version of emWin:

Driver	Supported display controller / Purpose of driver	Supported bits/pixel
GUIDRV_CompactColor_16	Ampire FSA506 Epson S1D13742, S1D13743, S1D19122 Himax HX8301, HX8312A, HX8325A, HX8340, HX8347, HX8352, HX8352B, HX8353 Hitachi HD66766, HD66772, HD66789 Ilitek ILI9161, ILI9220, ILI9221, ILI9320, ILI9325, ILI9326, ILI9328 LG Electronics LGDP4531, LGDP4551 MagnaChip D54E4PA7551 Novatek NT39122, NT7573 OriseTech SPFD5408, SPFD54124C, SPFD5414D, SPFD5420A Renesas R61505, R61509, R61516, R61580, R63401 Samsung S6D0110A, S6D0117, S6D0129, S6D04H0 Sharp LCY-A06003, LR38825, Sitronix ST7628, ST7637, ST7712, ST7715, ST7735, ST7787 Solomon SSD1284, SSD1289, SSD1298, SSD1355, SSD1961, SSD1963, SSD2119 Toshiba JBT6K71	16
GUIDRV_Fujitsu_16	Fujitsu MB87J2020 (Jasmine) Fujitsu MB87J2120 (Lavender)	1, 2, 4, 8, 16
GUIDRV_Page1bpp	Epson S1D10605, S1D15605, S1D15705, S1D15710, S1D15714, S1D15721, S1D15E05, S1D15E06, SED1520, SED1560, SED1565, SED1566, SED1567, SED1568, SED1569, SED1575 Hitachi HD61202 IST IST3020 New Japan Radio Company NJU6676, NJU6679 Novatek NT7502, NT7534, NT7538, NT75451 Philips PCF8810, PCF8811, PCF8535, PCD8544 Samsung KS0108B, KS0713, KS0724, S6B0108B, S6B0713, S6B0719, S6B0724, S6B1713 Sino Wealth SH1101A Sitronix ST7522, ST7565, ST7567 Solomon SSD1303, SSD1805, SSD1815 ST Microelectronics ST7548, STE2001, STE2002 Sunplus SPLC501C UltraChip UC1601, UC1606, UC1608, UC1701	1
GUIDRV_07X1	Novatek NT7506 Samsung KS0711, KS0741, S6B0711, S6B0741 Sitronix ST7541, ST7571 Solomon SSD1854 ST Microelectronics STE2010 Tomato TL0350A	2
GUIDRV_1611	Epson S1D15719, S1D15E05, S1D15E06 UltraChip UC1611 UltraChip UC1610	2 4 2
GUIDRV_6331	Samsung S6B33B0X, S6B33B1X, S6B33B2X	16
GUIDRV_7529	Sitronix ST7529	1, 4, 5

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.1.4 Available, but not yet migrated drivers

The following table lists all drivers, which are currently available, but not have been migrated to the new interface of the current version of emWin:

Driver	Supported display controller / Purpose of driver	Supported bits/pixel
GUIDRV_Mem	No controller, writes into main memory Requires ISR or special hardware to refresh LCD (monochrome displays)	1, 2
GUIDRV_MemC	No controller, writes into main memory Requires ISR or special hardware to refresh LCD (color displays)	3, 6
GUIDRV_Noritake	Noritake display GU256X128C-3900	1
GUIDRV_Page4bpp	Sitronix ST7528	4
GUIDRV_SLin (*1)	Epson SED1330, SED1335 RAIO 8822/8803, 8835	1
GUIDRV_Vesa	Any VESA compatible hardware	8, 16
GUIDRV_Xylon	FPGA based display controller from Xylon	8, 16, 32
GUIDRV_0323	Solomon SSD0323 OLED controller	4
GUIDRV_1200	Toppoly C0C0, C0E0	16
GUIDRV_13701	Epson S1D13701 OLED controller	9, 12
GUIDRV_159A	Epson SED159A Sitronix ST7632	8
GUIDRV_161620	NEC µPD161620	12
GUIDRV_1781	Solomon SSD1768, SSD1781, SSD1783, SSD1797	16
GUIDRV_6642X	Hitachi HD66420, HD66421	2
GUIDRV_66750	Hitachi HD66750, HD66753	2
GUIDRV_7920	Sitronix ST7920	1
GUIDRV_8822	Raio RA8822	2

*1: Currently exists a new driver named 'GUIDRV_SLin'. Please note that this driver currently does not support all of the controllers supported by the not yet migrated version of this driver. Support for these controllers can be added in a short period on demand.

30.1.5 Special purpose drivers

The basic package contains 2 drivers which don't support a specific LCD controller. They can be used as template for a new driver or for measurement purpose:

Driver	LCD Controller	Supported bits/pixel
GUIDRV_Template	Driver template. Can be used as a starting point for writing a new driver. Part of the basic package	-

30.2 CPU / Display controller interface

Different display controllers can have different CPU interfaces. Basically there are two different interfaces:

- Direct interface
- Indirect interface

Whereas the direct interface accesses the video memory directly by the address bus of the CPU, the indirect interface requires a more complex communication with the display controller to get access to the video memory. This can be done by different kinds of connections:

- Parallel access

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

- 4 pin SPI interface
- 3 pin SPI interface
- I2C bus interface

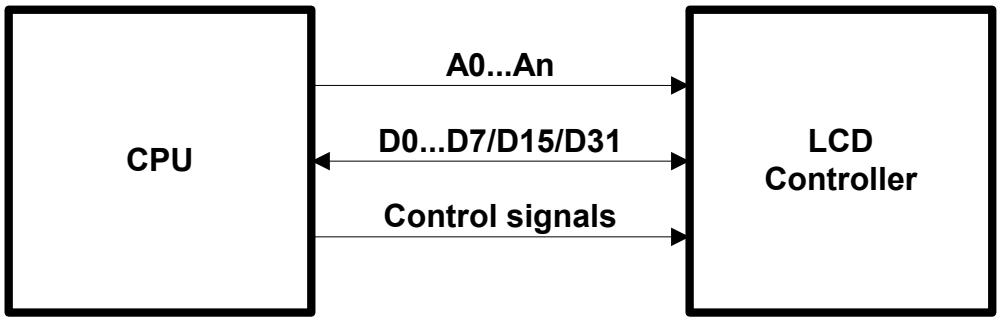
The following explains these interfaces and how to configure them. Note that not all configuration macros are always required. For details about which macros are required, refer to "Detailed display driver descriptions" on page 829.

30.2.1 Direct interface

Some display controllers (especially those for displays with higher resolution) require a full address bus, which means they are connected to at least 14 address bits. In a direct interface configuration, video memory is directly accessible by the CPU; the address bus is connected to the display controller.
The only knowledge required when configuring a direct interface is information about the address range (which will generate a CHIP-SELECT signal for the LCD controller) and whether 8-, 16- or 32-bit accesses should be used (bus-width to the display controller). In other words, you need to know the following:

- Base address for video memory access
- Base address for register access
- Distance between adjacent video memory locations (usually 1/2/4-byte)
- Distance between adjacent register locations (usually 1/2/4-byte)
- Type of access (8/16/32-bit) for video memory
- Type of access (8/16/32-bit) for registers


Typical block diagram



30.2.2 Indirect interface - Parallel bus

Most controllers for smaller displays use an indirect interface to connect to the CPU. With an indirect interface, only one address bit (usually A0) is connected to the LCD controller. Some of these controllers are very slow, so that the hardware designer may decide to connect it to input/output (I/O) pins instead of the address bus.

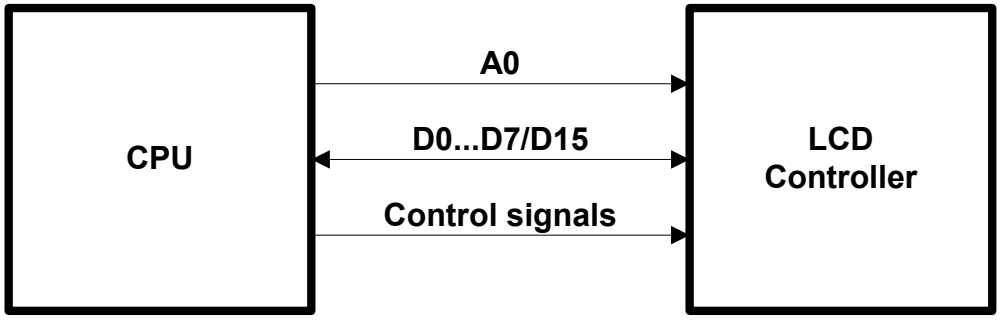Typical block diagram



8 (16) data bits, one address bit and 2 or 3 control lines are used to connect the CPU and one LCD controller. Four macros inform the LCD driver how to access each controller used. If the LCD controller(s) is connected directly to the address bus of the CPU, configuration is simple and usually consists of no more than one line per macro.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

If the LCD controller(s) is connected to I/O pins, the bus interface must be simulated, which takes about 5-10 lines of program per macro (or a function call to a routine which simulates the bus interface). The signal **A0** is also called **C/D** (Command/Data), **D/I** (Data/Instruction) or **RS** (Register select), depending on the display controller.

30.2.2.1 Example routines for connection to I/O pins

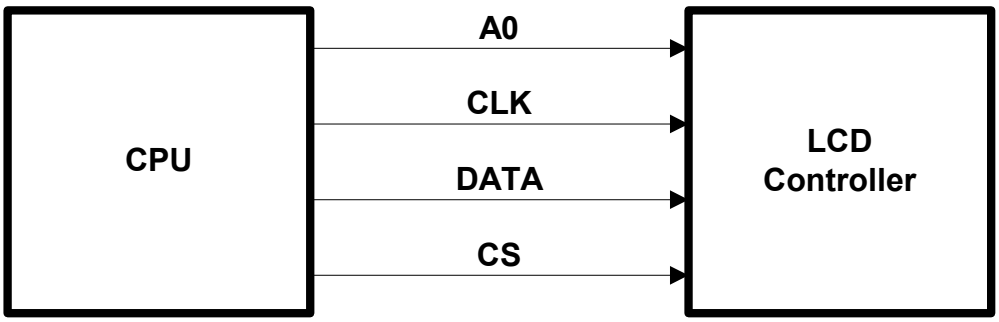
Examples can be found in the folder `Sample\LCD_X`:

- `LCD_X_6800.c`, port routines for the 6800 parallel interface.
- `LCD_X_8080.c`, port routines for the 8080 parallel interface.

30.2.3 Indirect interface - 4 pin SPI

Using a 4 pin SPI interface is very similar to a parallel interface. To connect a LCD display using 4 pin SPI interface the lines A0, CLK, DATA, and CS must be connected to the CPU.

Typical block diagram



30.2.3.1 Example routines for connection to I/O pins

An example can be found in the folder `Sample\LCD_X`:

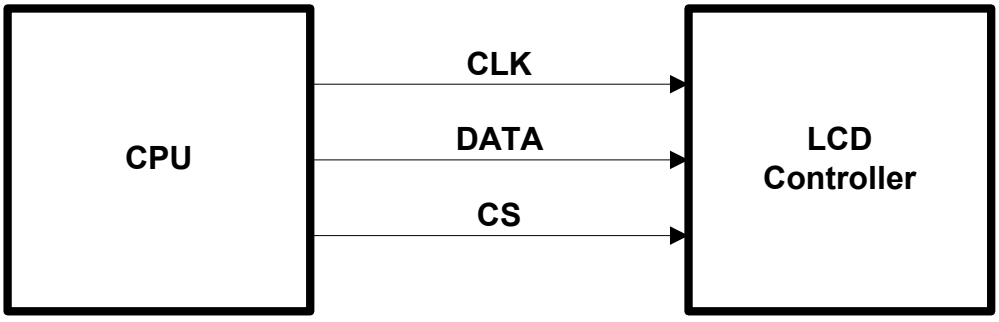
- `LCD_X_SERIAL.c`, port routines for a serial interface

Please note that this sample uses port pins for the communication. This works very slow but on each CPU. This should be optimized by the customer by using the hardware support of the CPU for this kind of communication.

30.2.4 Indirect interface - 3 pin SPI

To connect a LCD display using 4 pin SPI interface the lines CLK, DATA, and CS must be connected to the CPU.

Typical block diagram



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.2.4.1 Example routines for connection to I/O pins

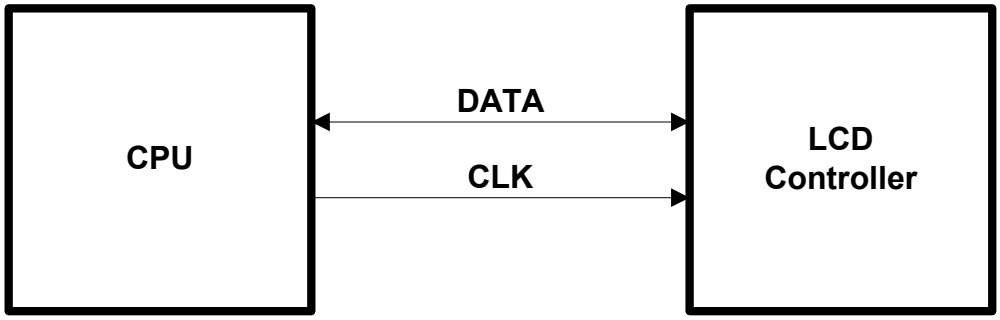
This interface does not have a separate line for distinguish between data and commands to be transmitted to the display controller. There is no standardized method to manage this. Some controllers use an additional bit for distinguish between data and command, other controllers work different.
Examples can be found in the folder `Sample\LCD_X`:

- `LCD_X_Serial_3Pin.c`, port routines for a 3 pin serial interface
- `LCD_X_Serial_3Wire.c`, port routines for a 3 pin serial interface

30.2.5 Indirect interface - I2C bus

This kind of interface use only 2 lines and a standardized protocol for the communication with the display controller.

Typical block diagram



30.2.5.1 Example routines for connection to I/O pins

An example can be found in the folder `Sample\LCD_X`:

- `LCD_X_I2CBUS.c`, port routines for a I2C bus interface

Similar to the serial communication examples this example uses port lines for the communication which works not very fast. If the CPU support this kind of communication these routines should be optimized by using the hardware functions.

30.3 Hardware interface configuration

The following explains how to configure the hardware communication between display driver and display controller.

30.3.1 Direct interface

The hardware interface configuration of drivers using a direct interface is done by specifying the address of the video memory. Normally the routine `LCD_SetVRAMAddrEx()` should be used for this. Normally nothing else should be done to enable access to the video memory for the driver. For details please refer to "Display driver API" on page 883.

30.3.2 Indirect interface

There are 2 kinds of display drivers:

- Run-time configurable drivers
- Compile-time configurable drivers

Configuring these kinds of drivers works differently:

- Run-time configuration means the driver can be compiled without being config-

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

ured. The configuration is done at run-time. This type of driver can still be configured at run-time when placed in a library.
- A compile-time configurable driver requires the configuration in a configuration header file, which is included at compile-time of the driver.

30.3.2.1 Run-time configuration

Run-time configurable drivers do not need to be configured at compile time. So this drivers can be used in a precompiled library.
Each driver has its own function(s) for setting up the hardware interface. This is done by passing a pointer to a `GUI_PORT_API` structure containing function pointers to the hardware routines to be used:

Elements of GUI_PORT_API

Element	Data type	Description
8 bit interface		
pfWrite8_A0	`void (*)(U8 Data)`	Pointer to a function which writes one byte to the controller with C/D line low.
pfWrite8_A1	`void (*)(U8 Data)`	Pointer to a function which writes one byte to the controller with C/D line high.
pfWriteM8_A0	`void (*)(U8 * pData, int NumItems)`	Pointer to a function which writes multiple bytes to the controller with C/D line low.
pfWriteM8_A1	`void (*)(U8 * pData, int NumItems)`	Pointer to a function which writes multiple bytes to the controller with C/D line high.
pfRead8_A0	`U8 (*)(void)`	Pointer to a function which reads one byte from the controller with C/D line low.
pfRead8_A1	`U8 (*)(void)`	Pointer to a function which reads one byte from the controller with C/D line high.
pfReadM8_A0	`void (*)(U8 * pData, int NumItems)`	Pointer to a function which reads multiple bytes from the controller with C/D line low.
pfReadM8_A1	`void (*)(U8 * pData, int NumItems)`	Pointer to a function which reads multiple bytes from the controller with C/D line high.
16 bit interface		
pfWrite16_A0	`void (*)(U16 Data)`	Pointer to a function which writes one word to the controller with C/D line low.
pfWrite16_A1	`void (*)(U16 Data)`	Pointer to a function which writes one word to the controller with C/D line high.
pfWriteM16_A0	`void (*)(U16 * pData, int NumItems)`	Pointer to a function which writes multiple words to the controller with C/D line low.
pfWriteM16_A1	`void (*)(U16 * pData, int NumItems)`	Pointer to a function which writes multiple words to the controller with C/D line high.
pfRead16_A0	`U16 (*)(void)`	Pointer to a function which reads one word from the controller with C/D line low.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Element	Data type	Description
pfRead16_A1	U16 (*)(void)	Pointer to a function which reads one word from the controller with C/D line high.
pfReadM16_A0	void (*)(U16 * pData, int NumItems)	Pointer to a function which reads multiple words from the controller with C/D line low.
pfReadM16_A1	void (*)(U16 * pData, int NumItems)	Pointer to a function which reads multiple words from the controller with C/D line high.

This structure contains function pointers for 8- and 16 bit access. Not all function pointers are required for each driver. Please refer to the documentation of the display driver which pointers are required for the driver.

Example

The following shows a configuration example for the driver GUIDRV_SLin. It creates and configures the driver, initializes the required function pointers of the GUI_PORT_API structure and passes them to the driver:

```
GUI_DEVICE * pDevice;
CONFIG_SLIN Config = {0};
GUI_PORT_API PortAPI = {0};

//
// Set display driver and color conversion
//
pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_SLIN_2, GUICC_2, 0, 0);
//
// Common display driver configuration
//
LCD_SetSizeEx (0, XSIZE, YSIZE);
LCD_SetVSizeEx(0, XSIZE, YSIZE);
//
// Driver specific configuration
//
Config.UseCache  = 1;
GUIDRV_SLin_Config(pDevice, &Config);
//
// Select display controller
//
GUIDRV_SLin_SetS1D13700(pDevice);
//
// Setup hardware access routines
//
PortAPI.pfWrite16_A0  = _Write0;
PortAPI.pfWrite16_A1  = _Write1;
PortAPI.pfWriteM16_A0 = _WriteM0;
PortAPI.pfRead16_A1   = _Read1;
GUIDRV_SLin_SetBus8(pDevice, &PortAPI);
```

For details please refer to the detailed description of the run-time configurable driver.

30.3.2.2 Compile-time configuration

A compile-time configurable driver requires its configuration in a header file. This configuration file is included when compiling the display driver. The compile-time configurable drivers use distinct macros for accessing the hardware. It depends on the interface details which macros are used. The following shows which macros are used by which kind of interface.

Macros used by a simple bus interface

The following table shows the used hardware access macros:

Type	Macro	Description
F	LCD_READ_A0	Reads a byte from LCD controller with A0 - line low.
F	LCD_READ_A1	Reads a byte from LCD controller with A0 - line high.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Type	Macro	Description
F	LCD_WRITE_A0	Writes a byte to the display controller with A0 - line low.
F	LCD_WRITE_A1	Writes a byte to the display controller with A0 - line high.
F	LCD_WRITEM_A1	Writes several bytes to the LCD controller with A0 - line high.

Macros used by a 4 pin SPI interface

The following table shows the used hardware access macros:

Type	Macro	Description
F	LCD_WRITE_A0	Writes a byte to the display controller with A0 (C/D) - line low.
F	LCD_WRITE_A1	Writes a byte to the display controller with A0 (C/D) - line high.
F	LCD_WRITEM_A1	Writes several bytes to the LCD controller with A0 (C/D) - line high.

Macros used by a 3 pin SPI interface

The following table shows the used hardware access macros:

Type	Macro	Description
F	LCD_WRITE	Writes a byte to the display controller.
F	LCD_WRITEM	Writes several bytes to the LCD controller.

Macros used by a I2C bus interface

The following table shows the used hardware access macros:

Type	Macro	Description
F	LCD_READ_A0	Reads a status byte from LCD controller.
F	LCD_READ_A1	Reads a data byte from LCD controller.
F	LCD_WRITE_A0	Writes a instruction byte to the display controller.
F	LCD_WRITE_A1	Writes a data byte to the display controller.
F	LCD_WRITEM_A1	Writes several data bytes to the LCD controller.

LCD_READ_A0

Description

Reads a byte from LCD controller with A0 (C/D) - line low.

Type

Function replacement

Prototype

```
#define LCD_READ_A0(Result)
```

Parameter	Description
Result	Result read. This is not a pointer, but a placeholder for the variable in which the value will be stored.

LCD_READ_A1

Description

Reads a byte from LCD controller with A0 (C/D) - line high.

Type

Function replacement

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
#define LCD_READ_A1(Result)
```

Parameter	Description
Result	Result read. This is not a pointer, but a placeholder for the variable in which the value will be stored.

LCD_WRITE_A0

Description

Writes a byte to the display controller with A0 (C/D) - line low.

Type

Function replacement

Prototype

```
#define LCD_WRITE_A0(Byte)
```

Parameter	Description
Byte	Byte to write.

LCD_WRITE_A1

Description

Writes a byte to the display controller with A0 (C/D) - line high.

Type

Function replacement

Prototype

```
#define LCD_WRITE_A1(Byte)
```

Parameter	Description
Byte	Byte to write.

LCD_WRITEM_A1

Description

Writes several bytes to the LCD controller with A0 (C/D) - line high.

Type

Function replacement

Prototype

```
#define LCD_WRITEM_A1(paBytes, NumberOfBytes)
```

Parameter	Description
paBytes	Placeholder for the pointer to the first data byte.
NumberOfBytes	Number of data bytes to be written.

LCD_WRITE

Description

Writes a byte to the LCD controller.

Type

Function replacement

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
#define LCD_WRITE(Byte)
```

Parameter	Description
Byte	Byte to write.

LCD_WRITEM

Description

Writes several bytes to the LCD controller.

Type

Function replacement

Prototype

```
#define LCD_WRITEM(paBytes, NumberOfBytes)
```

Parameter	Description
paBytes	Placeholder for the pointer to the first data byte.
NumberOfBytes	Number of data bytes to be written.

30.4 Non readable displays

Some display controllers with an indirect interface do not support reading back display data. Especially displays which are connected via SPI interface often have this limitation. In this case we recommend using a display data cache. For details how to enable a display data cache, refer to "Detailed display driver descriptions" on page 829.
On systems with a very small RAM it is sometimes not possible to use a display data cache. If a display is not readable and a display data cache can not be used some features of emWin will not work. The list below shows these features:

- Cursors and Sprites
- XOR-operations, required for text cursors in EDIT and MULTIEDIT widgets
- Alpha blending
- Antialiasing

This is valid for all drivers where one data unit (8 or 16 bit) represents one pixel. Display drivers, where one data unit represents more than one pixel, can not be used if no display data cache is available and the display is not readable. An example is the GUIDRV_Page1bpp driver where one byte represents 8 pixels.

30.5 Display orientation

If the original display orientation does not match the requirements, there are different ways to change the display orientation:

- Driver based configuration of the desired orientation
- Using GUI_SetOrientation()

30.5.1 Driver based configuration of display orientation

If the display driver supports different orientations it is recommended to use the driver for setting up the right orientation. The way how to configure the display orientation then depends on the display driver to be used. Whereas the display orientation of the most common drivers is run-time configurable some drivers need to be configured at compile time.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.5.1.1 Run-time configuration

The display orientation of the most common driver is determined by creating the display driver device in LCD_X_Config() using the proper macro. Please refer to "GUIDRV_Lin" on page 841 for a listing of all available identifiers to be used to create the driver. It shows all available macros and their respective orientations.

30.5.1.2 Compile-time configuration

The display orientation of some drivers with indirect interface like `GUIDRV_CompactColor_16` needs to be configured at compile time in the configuration file of the driver.

Display orientations

There are 8 possible display orientations; the display can be turned 0°, 90°, 180° or 270° and can also be viewed from top or from bottom. The default orientation is 0° and top view. These 4*2 = 8 different display orientations can also be expressed as a combination of 3 binary switches: X-mirroring, Y-mirroring and X/Y swapping. For this purpose, the binary configuration macros listed below can be used with each driver in any combination. If your display is not oriented well, take a look at the config switches in the table below to make it work properly. The orientation is handled as follows: Mirroring in X and Y first, then swapping (if selected).

Display	Orientation macros in driver configuration file	Display	Orientation macros in driver configuration file
	No orientation macro required		#define LCD_MIRROR_Y 1
	#define LCD_MIRROR_X 1		#define LCD_MIRROR_X 1 #define LCD_MIRROR_Y 1
	#define LCD_SWAP_XY 1		#define LCD_SWAP_XY 1 #define LCD_MIRROR_Y 1
	#define LCD_SWAP_XY 1 #define LCD_MIRROR_X 1		#define LCD_SWAP_XY 1 #define LCD_MIRROR_X 1 #define LCD_MIRROR_Y 1

For details about how use multiple orientations simultaneously please refer to "Run-time screen rotation" on page 754.

30.5.2 Function based configuration of display orientation

Another possibility to set up the display orientation is to call `GUI_SetOrientation()`. Using this function is recommended if the display driver can not be used.

GUI_SetOrientation()

Description

This function changes the display orientation by using a rotation device.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
int GUI_SetOrientation(int Orientation);
```

Parameter	Description
Orientation	See the table below for an overview of valid values.

Resulting display	Value to use for GUI_SetOrientation()	Resulting display	Value to use for GUI_SetOrientation()
	0		GUI_MIRROR_Y
	GUI_MIRROR_X		GUI_MIRROR_X | GUI_MIRROR_Y
	GUI_SWAP_XY		GUI_SWAP_XY | GUI_MIRROR_Y
	GUI_SWAP_XY | GUI_MIRROR_X		GUI_SWAP_XY | GUI_MIRROR_X | GUI_MIRROR_Y

Return value

0 on success, 1 on error.

Additional information

The rotation device covers the complete virtual screen within an internal screen buffer. Because of this the use of this function requires additional memory for this additional screen buffer. The number of required bytes can be calculated as follows:

Virtual xSize * Virtual ySize * BytesPerPixel

The number of bytes per pixel is for configurations from 1-8bpp 1, for systems with more than 8bpp up to 16bpp 2 and for systems with more than 16bpp 4.
Each drawing operation first updates this buffer. After this the affected pixels are passed to the display driver device.

GUI_SetOrientationEx()

Description

This function changes the orientation in the specified layer by using a rotation device.

Prototype

```
int GUI_SetOrientation(int Orientation, int LayerIndex);
```

Parameter	Description
Orientation	Refer to “GUI_SetOrientation()” on page 825 for an overview of valid values.
LayerIndex	Index of the layer which Orientation has to be (re-)configured.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Return value

0 on success, 1 on error.

Additional information

See "GUI_SetOrientation()" on page 825.

30.6 Display driver callback function

A display driver requires a callback function. It is called by the driver for several tasks. One task is putting the display driver into operation which is also explained in the chapter 'Configuration'. It is also called for other tasks which require hardware related operations like switching the display on and off or setting a lookup table entry.

LCD_X_DisplayDriver()

Description

This is the callback function of the display driver. It is called by the display driver for several jobs. It passes a command and a pointer to a data structure to the callback routine. The command tells the callback function what should be done. If the command requires parameters they are passed through the data pointer `pData`. It points to a structure whose format depends on the command.

Prototype

```
int LCD_X_DisplayDriver(unsigned LayerIndex, unsigned Cmd, void * pData);
```

Parameter	Description
`LayerIndex`	Zero based layer index.
`Cmd`	Command to be executed. Detailed descriptions below.
`pData`	Pointer to a data structure.

Return value

The routine should return -2 if an error occurs, -1 if the command is not handled by the function and 0 if the command has been successfully executed.

30.6.1 Commands passed to the callback function

The following explains the common commands passed to the callback function. For details about display driver specific commands, refer to "Detailed display driver descriptions" on page 829. They are described under the topic 'Additional callback commands'.

LCD_X_INITCONTROLLER

As mentioned above the application should initialize the display controller and put it into operation if the callback routine receives this command. No parameters are passed on this command. Typically an initialization routine which initializes the registers of the display controller should be called in reaction of this command.

Parameters

None.

LCD_X_SETVRAMADDR_INFO

This command is passed by the driver to tell the callback routine the start address of the video RAM. The typical reaction should be writing the address to the frame buffer start address register.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Parameters

pData points to a data structure of type LCD_X_SETVRAMADDR_INFO:

Data type	Element	Description
void *	pVRAM	Points to the start address of the video RAM. This address is typically written to the video RAM base address register of the display controller.

LCD_X_ON

This command switches the display on.

Parameters

none

LCD_X_OFF

This command switches the display off.

Parameters

none

LCD_X_SETLUTENTRY

A lookup table entry should be set. The typical reaction should be writing an entry into the lookup table of the display controller.

Parameters

pData points to a data structure of type LCD_X_SETLUTENTRY_INFO:

Data type	Element	Description
LCD_COLOR	Color	RGB value of the color to be written to the LUT. Note that the format required by the hardware could be different to the RGB format.
U8	Pos	Zero based index of the LUT entry to be set.

LCD_X_SETORG

The function is used in relation with virtual screens. It is called if the origin of the display should be set. A typical reaction can be modifying the frame buffer start address.

Parameters

pData points to a data structure of type LCD_X_SETORG_INFO:

Data type	Element	Description
int	xPos	New X-position of the physical display position within the virtual screen.
int	yPos	New Y-position of the physical display position within the virtual screen.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.7 Detailed display driver descriptions

30.7.1 GUIDRV_BitPlains

This driver has been developed for systems without display controller. It manages each color bit in a separate plain. This means if the color depth is for example 4 bits per pixel the driver manages 4 bit plains each containing one bit.
Initially the driver has been made to drive monochrome and color TFTs with an R323C/111 CPU via SPI interface. But the driver can be used also for similar applications.
The driver does only manage the content of the bit plains. It does not contain any display controller specific code.

Supported hardware

Controllers

None.

Bits per pixel

The driver has been developed for a color depth of 1 to 8 bits per pixel.

Interface

It is required to write an application defined routine which uses the content of the bit plains to generate the color signals for the display. The driver comes with a sample for the R32C/111 CPU which refreshes the display via timer interrupt routine using the SPI interface.

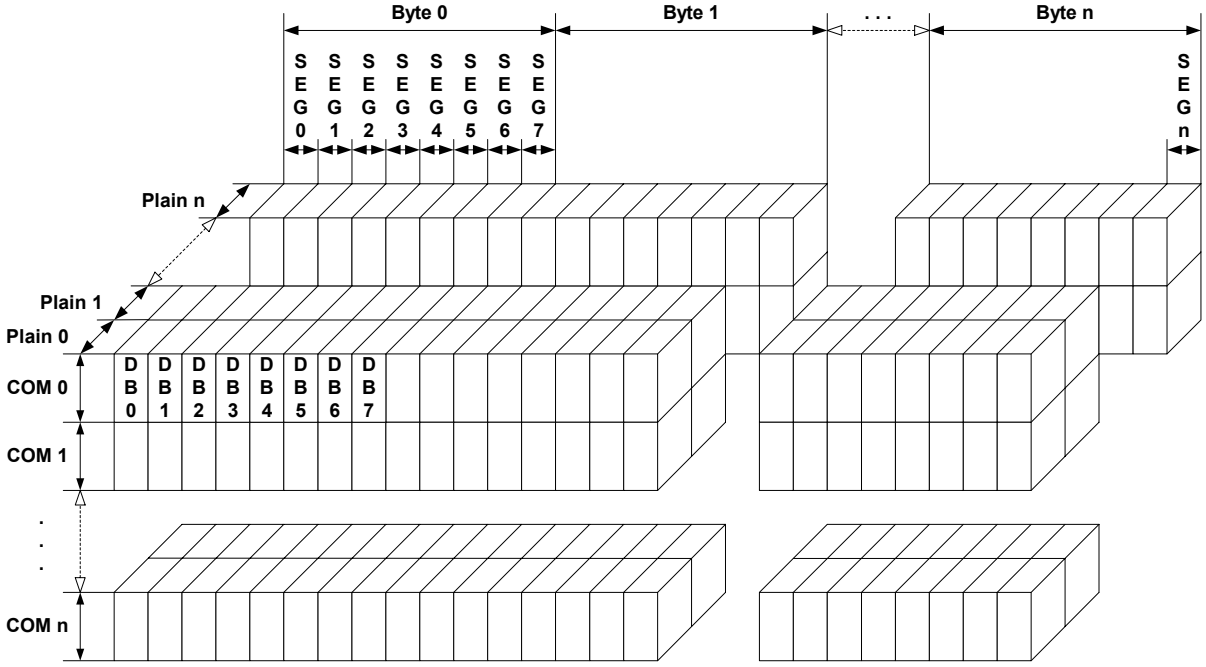
Driver selection

To use GUIDRV_BitPlains for the given display, the following command can be used e.g.:

```
pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_BITPLAINS, GUICC_M111, 0, 0);
```

Please refer to chapter "Colors" on page 227 to get more information about using the proper palette mode.

Display data RAM organization



 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

The picture above shows the relation between the display memory and the SEG and COM lines of the display. The display memory is divided into separate plains for each bit of the colors. This means that bit 0 of each pixel is stored in plain 0, the bit 1 in plain 1 and so on. The advantage of this method is that each color bit of the display data can be accessed very quickly.

RAM requirements

The required size of the display memory area can be calculated as follows:

```
Size = BitsPerPixel * (LCD_XSIZE + 7) / 8 * LCD_YSIZE
```

Please note that the pointers to the bit plain areas need to be passed to the configuration routine of the driver. They are not allocated within the driver but from application side.

Hardware configuration

Normally, the hardware interface is an interrupt service routine (ISR) which updates the display. The driver comes with an example written in "C" code. This routine should serve as an example.

Additional run-time configuration

The table below shows the available run-time configuration routines of this driver:

Routine	Explanation
GUIDRV_BitPlains_Config()	Passes a pointer to a CONFIG_BITPLAINS structure to the driver.
LCD_SetVRAMAddrEx()	Passes a pointer to a CONFIG_VRAM_BITPLAINS structure to the driver. See the explanation below. A description of the function can be found on page 890.

Elements of CONFIG_VRAM_BITPLAINS

Data type	Element	Description
U8 *	apVRAM	Array of pointers to the memory locations to be used by the driver for each bit plain. If the driver for example works in 2bpp mode only the first 2 pointers are used (One plain for each bit of the color information).

GUIDRV_BitPlains_Config()

Description

This function passes a pointer to a CONFIG_BITPLAINS structure to the driver.

Prototype

```
void GUIDRV_BitPlains_Config(GUI_DEVICE       * pDevice,
                             CONFIG_BITPLAINS * pConfig);
```

Parameter	Description
pDevice	Pointer to the driver device.
pConfig	Pointer to a CONFIG_BITPLAINS structure explained below.

Elements of CONFIG_BITPLAINS

Data type	Element	Description
int	Mirror	Config switch to mirror the bits of the display data.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Configuration example

```
//
// Data arrays to be used by the display driver
//
static U8 _aPlain_0[BYTES_PER_LINE * YSIZE_PHYS];
static U8 _aPlain_1[BYTES_PER_LINE * YSIZE_PHYS];
static U8 _aPlain_2[BYTES_PER_LINE * YSIZE_PHYS];

//
// Structure to be passed to the driver
//
static struct {
  U8 * apVRAM[8];
} _VRAM_Desc = {
  _aPlain_0,
  _aPlain_1,
  _aPlain_2,
};

void LCD_X_Config(void) {
  //
  // Set display driver and color conversion for 1st layer
  //
  GUI_DEVICE_CreateAndLink(GUIDRV_BITPLAINS, COLOR_CONVERSION, 0, 0);
  //
  // Display driver configuration, required for Lin-driver
  //
  if (LCD_GetSwapXY()) {
    LCD_SetSizeEx (0, YSIZE_PHYS, XSIZE_PHYS);
    LCD_SetVSizeEx(0, YSIZE_PHYS, XSIZE_PHYS);
  } else {
    LCD_SetSizeEx (0, XSIZE_PHYS, YSIZE_PHYS);
    LCD_SetVSizeEx(0, XSIZE_PHYS, YSIZE_PHYS);
  }
  //
  // Initialize VRAM access of the driver
  //
  LCD_SetVRAMAddrEx(0, (void *)&_VRAM_Desc);
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.7.2 GUIDRV_Dist

GUIDRV_Dist has been developed to support displays with multiple controllers. It is able to support multiple display areas each driven by a separate display controller. The distribution driver passes the drawing operations to the according display driver. This also works with overlaping operations. In these cases the operations are divided into sub operations for each affected controller.

Supported hardware

The distribution driver is able to work with each runtime configurable display driver. Please note that it is required that each of the configured display drivers use the same color conversion as the distribution driver.

Driver selection

To be able to use this driver the following call has to be made:

```
pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_DIST, COLOR_CONVERSION, 0, Layer);
```

RAM requirements

None.

Run-time configuration

After the driver has been created the actual display drivers should be also created and added to the distribution device:

```
pDevice0 = GUI_DEVICE_Create(DISPLAY_DRIVER, COLOR_CONVERSION, 0, -1);
pDevice1 = GUI_DEVICE_Create(DISPLAY_DRIVER, COLOR_CONVERSION, 0, -1);
GUIDRV_Dist_AddDriver(pDevice, pDevice0, &Rect0);
GUIDRV_Dist_AddDriver(pDevice, pDevice1, &Rect1);
```

GUIDRV_Dist_AddDriver()

Description

Adds a display driver to the distribution driver.

Prototype

```
void GUIDRV_Dist_AddDriver(GUI_DEVICE * pDevice,
                           GUI_DEVICE * pDriver, GUI_RECT * pRect);
```

Parameter	Description
pDevice	Pointer to the already created distribution device.
pDriver	Pointer to the already created driver device to be added.
pRect	Pointer to the rectangle in which outputs have to affect the driver.

Configuration example

```
void LCD_X_Config(void) {
  //
  // Set display driver and color conversion for 1st layer
  //
  pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_DIST, COLOR_CONVERSION, 0, 0);
  //
  // Display size configuration
  //
  LCD_SetSizeEx (0, XSIZE_PHYS,  YSIZE_PHYS);
  LCD_SetVSizeEx(0, VXSIZE_PHYS, VYSIZE_PHYS);
  //
  // Create first display driver
  //
  pDevice0 = GUI_DEVICE_Create(DISPLAY_DRIVER, COLOR_CONVERSION, 0, -1);
  //
  // Configuration of first driver
  //
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
  ...
  //
  // Create second display driver
  //
  pDevice1 = GUI_DEVICE_Create(DISPLAY_DRIVER, COLOR_CONVERSION, 0, -1);
  //
  // Configuration of second driver
  //
  ...
  //
  // Add display drivers to distribution driver
  //
  Rect0.x0 = 0;
  Rect0.y0 = 160;
  Rect0.x1 = 223;
  Rect0.y1 = 319;
  GUIDRV_Dist_AddDriver(pDevice, pDevice0, &Rect0);
  Rect1.x0 = 0;
  Rect1.y0 = 0;
  Rect1.x1 = 223;
  Rect1.y1 = 159;
  GUIDRV_Dist_AddDriver(pDevice, pDevice1, &Rect1);
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.7.3 GUIDRV_FlexColor

Supported hardware

Controllers

This driver works with the following display controllers:

- Epson S1D19122
- Himax HX8353, HX8325A
- Ilitek ILI9320, ILI9325, ILI9328
- LG Electronics LGDP4531, LGDP4551
- Novatek NT39122
- OriseTech SPFD5408, SPFD54124C, SPFD5414D
- Renesas R61505, R61516, R61580
- Sitronix ST7628, ST7637, ST7735
- Solomon SSD1355, SSD1961, SSD1963, SSD2119
- Syncoam SEPS525

Bits per pixel

Supported color depth is 16 bpp and 18 bpp.

Interfaces

The driver supports 8-bit, 9-bit and 16-bit indirect interface.

Driver selection

To be able to use this driver the following call has to be made:

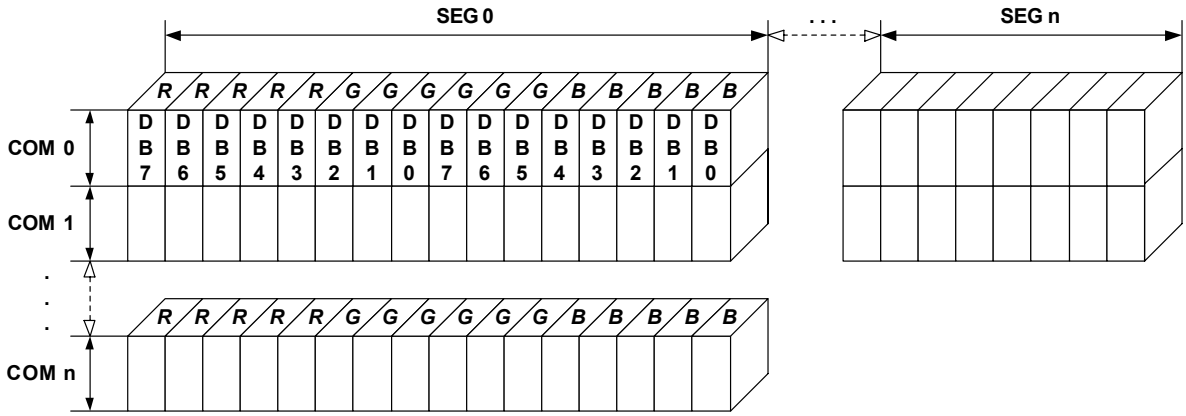
```
pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_FLEXCOLOR,
                                   COLOR_CONVERSION, 0, Layer);
```

In order to choose the proper color conversion, please refer to the chapter “Colors” on page 227 to get detailed information about palette modes.


 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Display data RAM organization

16 bits per pixel, fixed palette = 565



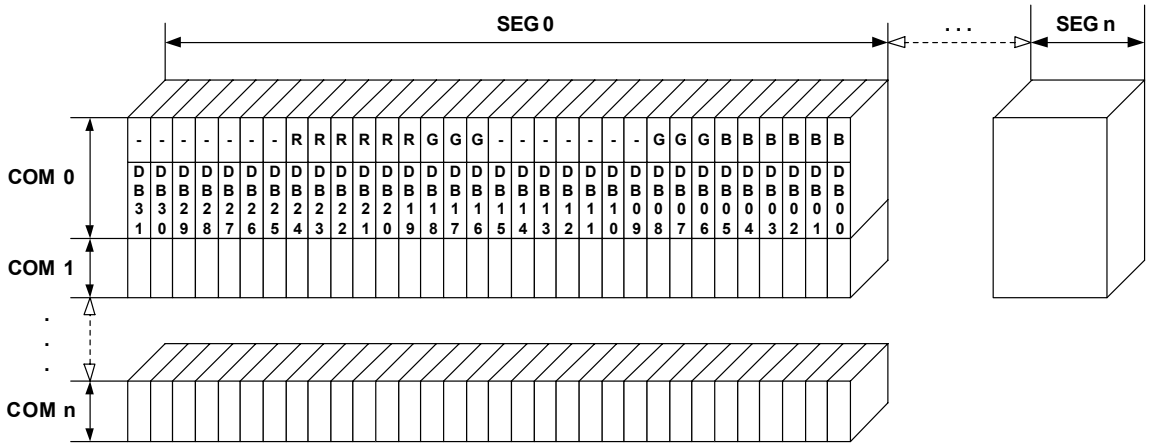18 bits per pixel, fixed palette = 666_9



RAM requirements

This display driver requires app. 500 Bytes to work. It can also be used with and without a display data cache, containing a complete copy of the content of the display data RAM. The amount of memory used by the cache is: `LCD_XSIZE * LCD_YSIZE * BytesPerPixel`. BytesPerPixel is 2 for 16bpp mode and 4 for 18bpp mode. Using a cache avoids reading operations from the display controller in case of XOR drawing operations and further it speeds up string output operations.

Configuration routines

Routine	Description
GUIDRV_FlexColor_SetFunc()	Configures bus, cache and hardware routines.
GUIDRV_FlexColor_Config()	Configures orientation and offset of the SEG- and COM-lines.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUIDRV_FlexColor_SetFunc()

Description

Configures bus width, cache usage and hardware routines.

Prototype

```
void GUIDRV_FlexColor_SetFunc(GUI_DEVICE   * pDevice,
                              GUI_PORT_API * pHW_API,
                              void (* pfFunc)(GUI_DEVICE * pDevice),
                              void (* pfMode)(GUI_DEVICE * pDevice));
```

Parameter	Description
pDevice	Pointer to the driver device structure.
pHW_API	Pointer to a GUI_PORT_API structure. See required routines below.
pfFunc	Controller selection macro. See table below.
pfMode	See table below.

Permitted values for parameter pfFunc Supported display controller	
GUIDRV_FLEXCOLOR_F66708	Set up the driver for using one of the following controllers: - Ilitek ILI9320, ILI9325, ILI9328 - LG Electronics LGDP4531, LGDP4551 - OriseTech SPFD5408 - Renesas R61505, R61580
GUIDRV_FLEXCOLOR_F66709	Set up the driver for using one of the following controllers: - Epson S1D19122 - Himax HX8353, HX8325A - Novatek NT39122 - Orisetech SPFD54124C, SPFD5414D - Renesas R61516 - Sitronix ST7628, ST7637, ST7735 - Solomon SSD1355, SSD1961, SSD1963
GUIDRV_FLEXCOLOR_F66714	Set up the driver to use the following display controller: - Solomon SSD2119
GUIDRV_FLEXCOLOR_F66718	Set up the driver to use the following display controller: - Syncoam SEPS525

The display controllers listed in the table above are the currently known controllers compatible to the driver. Please note that the used numbers of the selection macros are compatible to some of the LCD_CONTROLLER macro of the driver GUIDRV_CompactColor_16. This makes it easy to migrate from the compile time configurable GUIDRV_CompactColor_16 to the runtime configurable GUIDRV_FlexColor.

Permitted values for parameter pfMode	
GUIDRV_FLEXCOLOR_M16C0B8	16bpp, no cache, 8 bit bus
GUIDRV_FLEXCOLOR_M16C1B8	16bpp, cache, 8 bit bus
GUIDRV_FLEXCOLOR_M16C0B16	16bpp, no cache, 16 bit bus
GUIDRV_FLEXCOLOR_M16C1B16	16bpp, cache, 16 bit bus
GUIDRV_FLEXCOLOR_M18C0B9	18bpp, no cache, 9 bit bus
GUIDRV_FLEXCOLOR_M18C1B9	18bpp, cache, 9 bit bus

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Each controller selection supports different operation modes. The table below shows the supported modes for each controller:

Selection macro	M16C0B8	M16C1B8	M16C0B16	M16C1B16	M18C0B9	M18C1B9
GUIDRV_FLEXCOLOR_F66708	X	X	X	X	-	-
GUIDRV_FLEXCOLOR_F66709	X	X	X	X	-	-
GUIDRV_FLEXCOLOR_F66714	X	X	X	X	X	X
GUIDRV_FLEXCOLOR_F66718	X	X	X	X	X	X

Required GUI_PORT_API routines

The required GUI_PORT_API routines depend on the used interface. In case a cache is used the routines for reading data are unnecessary for each interface:

8 bit interface

Element	Data type
pfWrite8_A0	void (*)(U8 Data)
pfWrite8_A1	void (*)(U8 Data)
pfWriteM8_A1	void (*)(U8 * pData, int NumItems)
pfReadM8_A1	void (*)(U8 * pData, int NumItems)

16 bit interface

Element	Data type
pfWrite16_A0	void (*)(U16 Data)
pfWrite16_A1	void (*)(U16 Data)
pfWriteM16_A1	void (*)(U16 * pData, int NumItems)
pfReadM16_A1	void (*)(U16 * pData, int NumItems)

9 bit interface

When working with a 9 bit interface and a color depth of 18 bpp the display controller uses the lines D10-D17 (8 bit) for passing instructions and D9-D17 (9 bit) for passing data. So in this case the lines D9-D17 are connected to the interface lines of the CPU. In order to be able to process pixel data as fast as possible, the driver uses two 16 bit data values per pixel (0000000R RRRRRGGG and 0000000G GGBBBBBB) in which only the first 9 bits each contain pixel data, which are passed to the hardware routines.
As mentioned above the command and parameter interface use the lines D10-D17 (8 bit) of the display controller. The driver passes 16 bit values to the hardware routines where the bits 1-8 already contain the information for the lines D10-D17 of the display controller (bits 0 and 9-15 are unused). So no shift operation is required in the hardware routines.

Element	Data type	Description
pfWrite16_A0	void (*)(U16 Data)	Register to be set (DB1-DB9)
pfWrite16_A1	void (*)(U16 Data)	Parameter to be set (DB1-DB9)
pfWriteM16_A1	void (*)(U16 * pData, int NumItems)	Data to be written (DB0-DB9)
pfReadM16_A1	void (*)(U16 * pData, int NumItems)	Data read (DB0-DB9)

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUIDRV_FlexColor_Config()

Description

Configures orientation and offset of the SEG- and COM-lines.

Prototype

```
void GUIDRV_FlexColor_Config(GUI_DEVICE       * pDevice,
                             CONFIG_FLEXCOLOR * pConfig);
```

Parameter	Description
pDevice	Pointer to the device to configure.
pConfig	Pointer to a CONFIG_FLEXCOLOR structure. See element list below.

Elements of CONFIG_FLEXCOLOR

Data type	Element	Description
int	FirstSEG	First segment line.
int	FirstCOM	First common line.
int	Orientation	One or more "OR" combined values of the table below.
U16	RegEntryMode	Normally the display controller uses 3 bits of one register to define the required display orientation. Normally these are the bits ID0, ID1 and AM. To be able to control the content of the other bits the RegEntryMode element can be used. The driver combines this value with the required orientation bits during the initialization process.

Permitted values for parameter Orientation	
GUI_MIRROR_X	Mirroring the X-axis
GUI_MIRROR_Y	Mirroring the Y-axis
GUI_SWAP_XY	Swapping X- and Y-axis

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.7.4 GUIDRV_IST3088

Supported hardware

Controllers

This driver works with the following display controllers:

- IST3088
- IST3257

Bits per pixel

The supported color depth is 4 bpp.

Interfaces

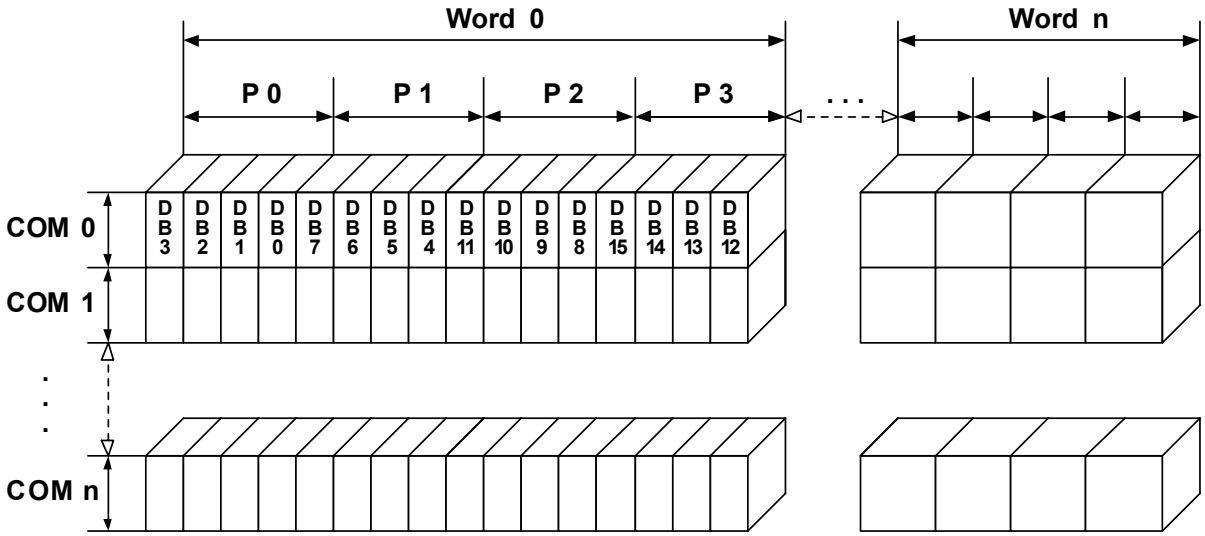
The driver supports the 16-bit indirect interface.

Driver selection

To use GUIDRV_IST3088 for the given display, the following command should be used:

```
pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_IST3088_4, GUICC_4, 0, 0);
```

Display data RAM organization



The delineation above shows the relation between the display memory and the SEG and COM lines of the LCD.

RAM requirements

This display driver can be used with and without a display data cache, containing a complete copy of the content of the display data RAM. The amount of memory used by the cache is: `LCD_XSIZE * LCD_YSIZE / 2`.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional run-time configuration

The table below shows the available run-time configuration routines of this driver:

Routine	Explanation
GUIDRV_IST3088_SetBus16	Tells the driver to use the 16 bit indirect interface and passes pointer to a GUI_PORT_API structure to the driver.

GUIDRV_IST3088_SetBus16()

Description

Tells the driver to use the 16 bit indirect interface and passes a pointer to a GUI_PORT_API structure to the driver containing function pointers to the hardware routines to be used.

Prototype

```
void GUIDRV_IST3088_SetBus16(GUI_DEVICE * pDevice, GUI_PORT_API * pHW_API);
```

Parameter	Description
pDevice	Pointer to the driver device.
pHW_API	Pointer to a GUI_PORT_API structure. See required routines below.

Required GUI_PORT_API routines

Element	Data type
pfWrite16_A0	void (*)(U16 Data)
pfWrite16_A1	void (*)(U16 Data)
pfWriteM16_A1	void (*)(U16 * pData, int NumItems)

Special requirements

The driver needs to work in the fixed palette mode GUICC_4. The driver does not work with other palettes or fixed palette modes. You should use GUICC_4 as color conversion.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.7.5 GUIDRV_Lin

This driver supports all display controllers with linear video memory accessible via direct interface. It can be used with and without a display controller. The driver does only manage the contents of the video memory. It does not send any commands to the display controller or assumes any specific registers. So it is independent of the register interface of the display controller and can be used for managing each linear mapped video memory.

Supported hardware

Controllers

The driver supports all systems with linear mapped video memory.

Bits per pixel

Supported color depths are 1, 2, 4, 8, 16, 24 and 32 bits per pixel.

Interfaces

The driver supports a full bus interface from the CPU to the video memory. The video memory needs to be accessible 8, 16 or 32 bit wise.

Color depth and display orientation

The driver consists of several files. They are named `_[O]_BPP.c`. where the optional `'O'` stands for the desired display orientation and `'BPP'` for the color depth. The following table shows the driver files and the configuration macros which should be used to create and link the driver during the initialization:

Identifier	Color depth and orientation
GUIDRV_LIN_1	1bpp, default orientation
GUIDRV_LIN_2	2bpp, default orientation
GUIDRV_LIN_4	4bpp, default orientation
GUIDRV_LIN_8	8bpp, default orientation
GUIDRV_LIN_16	16bpp, default orientation
GUIDRV_LIN_OX_16	16bpp, X axis mirrored
GUIDRV_LIN_OXY_16	16bpp, X and Y axis mirrored
GUIDRV_LIN_OY_16	16bpp, Y axis mirrored
GUIDRV_LIN_OS_16	16bpp, X and Y swapped
GUIDRV_LIN_OSX_16	16bpp, X axis mirrored, X and Y swapped
GUIDRV_LIN_OSY_16	16bpp, Y axis mirrored, X and Y swapped
GUIDRV_LIN_24	24bpp, default orientation
GUIDRV_LIN_OX_24	24bpp, X axis mirrored
GUIDRV_LIN_OXY_24	24bpp, X and Y axis mirrored
GUIDRV_LIN_OY_24	24bpp, Y axis mirrored
GUIDRV_LIN_OS_24	24bpp, X and Y swapped
GUIDRV_LIN_OSX_24	24bpp, X axis mirrored, X and Y swapped
GUIDRV_LIN_OSY_24	24bpp, Y axis mirrored, X and Y swapped
GUIDRV_LIN_32	32bpp, default orientation
GUIDRV_LIN_OX_32	32bpp, X axis mirrored
GUIDRV_LIN_OXY_32	32bpp, X and Y axis mirrored
GUIDRV_LIN_OY_32	32bpp, Y axis mirrored
GUIDRV_LIN_OS_32	32bpp, X and Y swapped
GUIDRV_LIN_OSX_32	32bpp, X axis mirrored, X and Y swapped
GUIDRV_LIN_OSY_32	32bpp, Y axis mirrored, X and Y swapped

The table above shows identifiers which can be used to select the driver. Each combination of orientation and color depth is possible. Please note that currently not all combinations are shipped with the driver. If the required combination is not available, please send a request to obtain the required combination.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

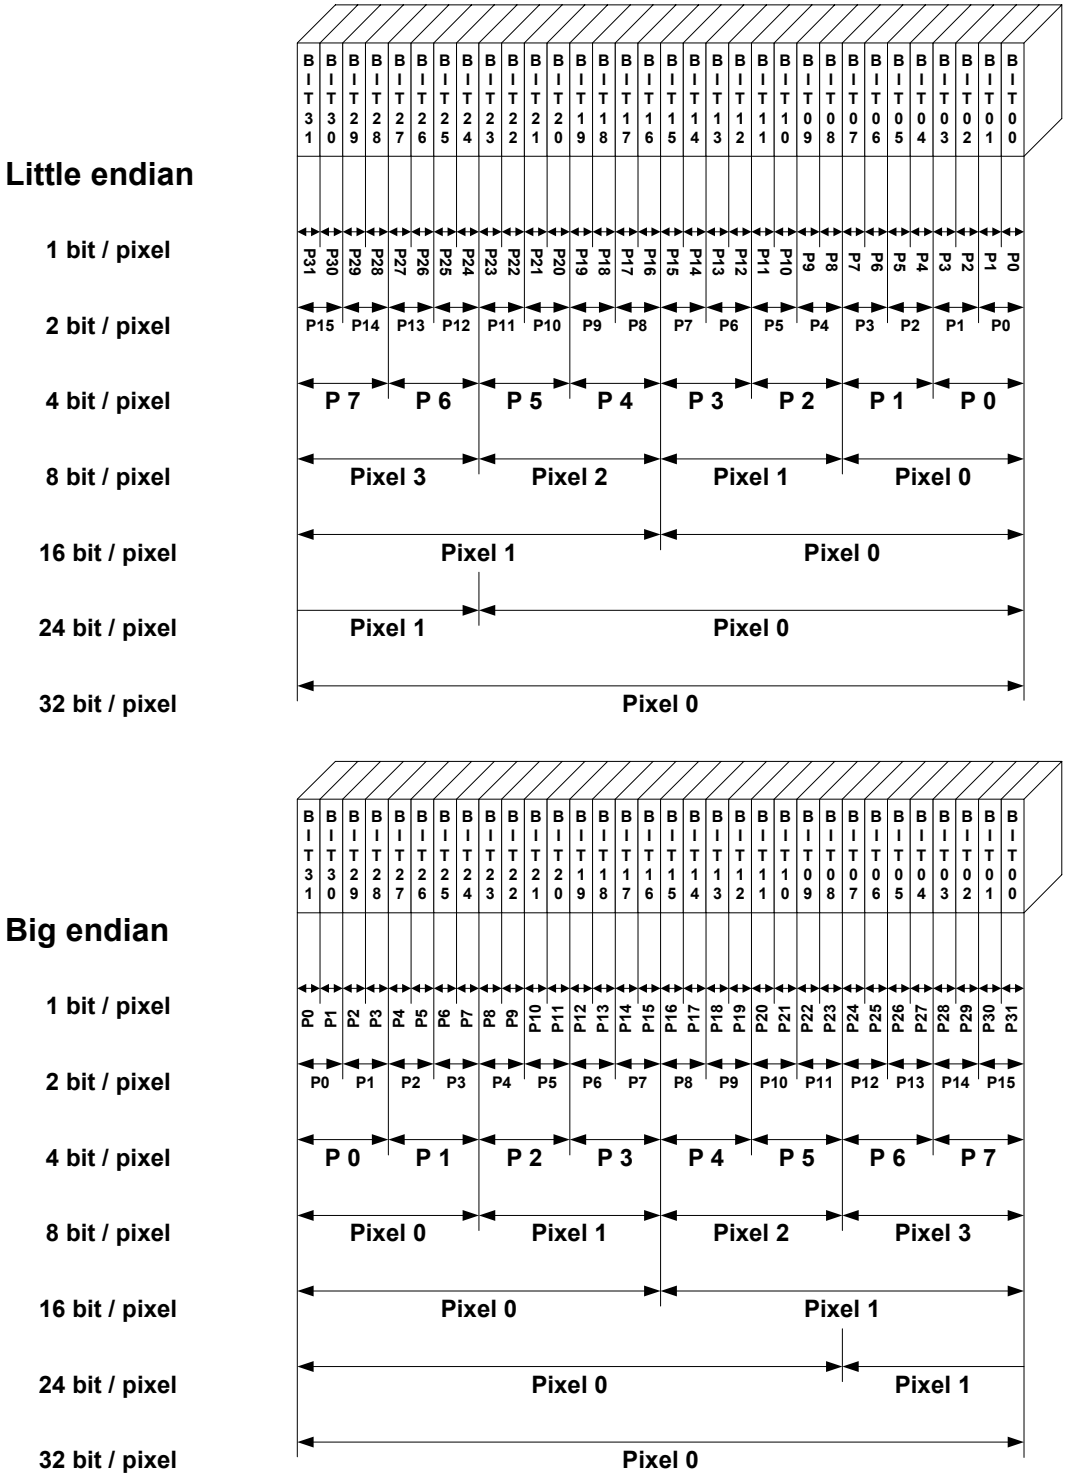
Driver selection

To use for the given display, the following command can be used e.g.:

```
pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_LIN_OX_16, GUICC_565, 0, 0);
```

Please refer to chapter “Colors” on page 227 to get more information about using the proper palette mode.

Display data RAM organization



The picture above shows the relation between the display memory and the pixels of the LCD in terms of the color depth and the endian mode.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Little endian video mode

Least significant bits are used and output first. The least significant bits are for the first (left-most) pixel.

Big endian video mode

Most significant bits are used and output first. The most significant bits are for the first (left-most) pixel.

RAM requirements

None.

Available configuration macros (compile time configuration)

The following table lists the macros which must be defined for hardware access:

Macro	Description
LCD_ENDIAN_BIG	Should be set to 1 for big endian mode, 0 (default) for little endian mode.

Available configuration routines (run-time configuration)

The following table lists the available run-time configuration routines:

Routine	Description
LCD_SetDevFunc()	Can be used to set optional or custom defined routines.
LCD_SetSizeEx()	Changes the size of the visible area.
LCD_SetVRAMAddrEx()	Changes the video RAM start address.
LCD_SetVSizeEx()	Changes the size of the virtual display area.

Supported values by LCD_SetDevFunc()

The following table shows the supported values of the function:

Value	Description
LCD_DEVFUNC_COPYBUFFER	Can be used to set a custom defined routine for copying buffers. Makes only sense in combination with multiple buffers.
LCD_DEVFUNC_COPYRECT	Can be used to set a custom defined routine for copying rectangular areas of the display.
LCD_DEVFUNC_DRAWBMP_1BPP	Can be used to se a custom routine for drawing 1bpp bitmaps. Makes sense if a BitBLT engine should be used for drawing text and 1bpp bitmaps.
LCD_DEVFUNC_FILLRECT	Can be used to set a custom defined routine for filling rectangles. Makes sense if for example a BitBLT engine should be used for filling operations.

For further information about the LCD layer routines, please refer to “LCD layer routines” on page 885.

Configuration example

The following shows how to create a display driver device with this driver and how to configure it:

```
void LCD_X_Config(void) {
  //
  // Set display driver and color conversion
  //
  GUI_DEVICE_CreateAndLink(GUIDRV_LIN_8,    // Display driver
                           GUICC_8666,      // Color conversion
                           0, 0);
  //
  // Display driver configuration
  //
  LCD_SetSizeEx    (0, 320,  240);          // Physical display size in pixels
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
  LCD_SetVSizeEx   (0, 320,  480);          // Virtual  display size in pixels
  LCD_SetVRAMAddrEx(0, (void *)0x20000000); // Video RAM start address
}
```

Using the Lin driver in systems with cache memory

The rules to follow are quite simple:

Rule 1

All caches (if applicable, as in your case) should be fully enabled. This means I- and D- caches in systems with separate caches.

Rule 2

All Code and data should be placed in cacheable areas to achieve maximum performance. If other parts of the application require some or all data to be placed in non-cacheable areas, this is not a problem but may degrade performance.

Rule 3

The only exception to Rule 2 is that the display memory (which is really a shared memory area, accessed by both the CPU and the LCD-controller DMA) should be uncached. In many systems with MMU, this can be achieved by mapping the RAM twice into the virtual address space: At its normal address, the RAM is cached, at the second address, it is uncached. The address of the VRAM given to the driver should be the uncached address.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.7.6 GUIDRV_S1D13748

Supported hardware

Controllers

This driver has been tested with the Epson S1D13748.

Bits per pixel

The supported color depth is 16 bpp.

Interfaces

The driver supports the 16-bit parallel (simple bus) interface.

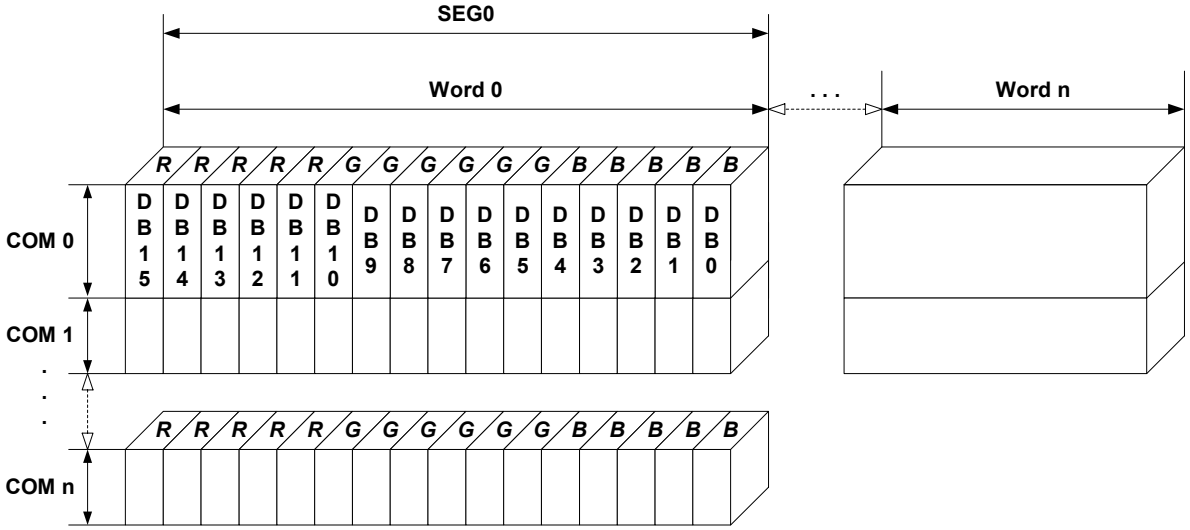
Driver selection

To use GUIDRV_S1D13748 for the given display, the following command should be used:

```
pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_S1D13748, GUICC_M565, 0, 0);
```

Display data RAM organization

16 bits per pixel, fixed palette = 565



The delineation above shows the relation between the display memory and the SEG and COM lines of the LCD.

RAM requirements

Approximately 500 bytes.

Additional run-time configuration

The table below shows the available run-time configuration routines of this driver:

Routine	Explanation
GUIDRV_S1D13748_Config	Passes a pointer to a CONFIG_S1D13748 structure to the driver.
GUIDRV_S1D13748_SetBus_16	Tells the driver to use the 16 bit indirect interface and passes pointer to a GUI_PORT_API structure to the driver.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUIDRV_S1D13748_Config()

Description

Passes a pointer to a CONFIG_S1D13748 structure to the driver.

Prototype

```
void GUIDRV_S1D13748_Config(GUI_DEVICE       * pDevice,
                            CONFIG_S1D13748 * pConfig);
```

Parameter	Description
pDevice	Pointer to the driver device.
pConfig	Pointer to a CONFIG_S1D13748 structure described below.

Elements of CONFIG_S1D13748

Data type	Element	Description
U32	BufferOffset	TBD
int	UseLayer	TBD

GUIDRV_S1D13748_SetBus_16()

Description

Tells the driver to use the 16 bit indirect interface and passes a pointer to a GUI_PORT_API structure to the driver containing function pointers to the hardware routines to be used.

Prototype

```
void GUIDRV_S1D13748_SetBus_16(GUI_DEVICE    * pDevice,
                               GUI_PORT_API * pHW_API);
```

Parameter	Description
pDevice	Pointer to the driver device.
pHW_API	Pointer to a GUI_PORT_API structure. See required routines below.

Required GUI_PORT_API routines

Element	Data type
pfWrite16_A0	void (*)(U16 Data)
pfWrite16_A1	void (*)(U16 Data)
pfWriteM16_A1	void (*)(U16 * pData, int NumItems)
pfRead16_A1	U16 (*)(void)
pfReadM16_A1	U16 (*)(U16 * pData, int NumItems)

Additional configuration switches

None.

Special requirements

The driver needs to work with the fixed palette mode GUICC_M565. The driver does not work with other palettes or fixed palette modes.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.7.7 GUIDRV_S1D15G00

Supported hardware

Controllers

The driver supports the Epson S1D15G00 controller.

Bits per pixel

Supported color depth is 12bpp.

Interfaces

The driver supports the 8 bit indirect interface.

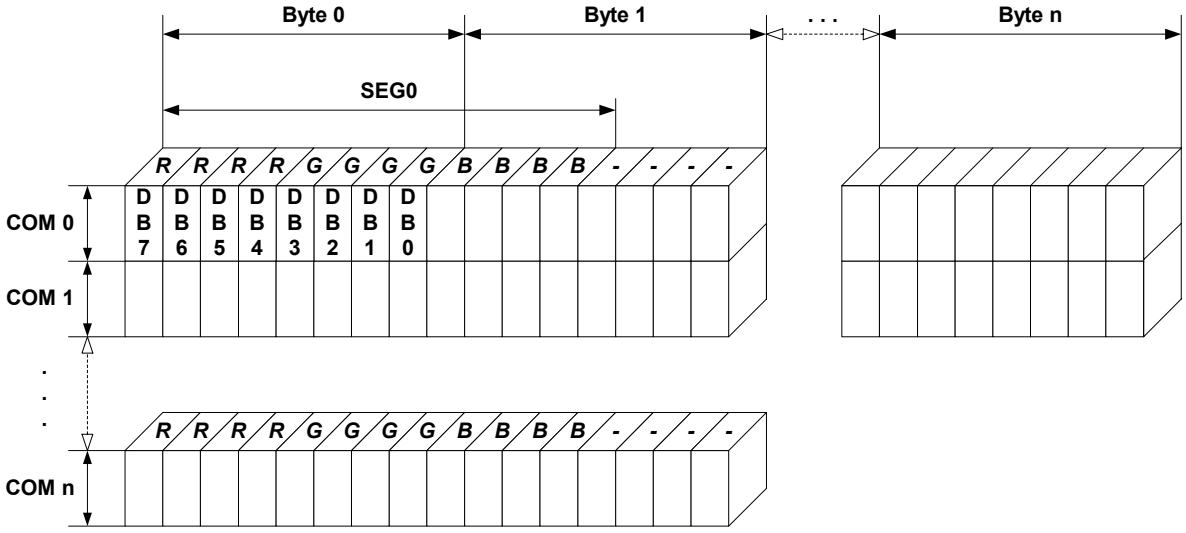
Driver selection

To use GUIDRV_S1D15G00 for the given display, the following command should be used:

```
pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_S1D15G00, GUICC_M444_12, 0, 0);
```

Display data RAM organization

12 bits per pixel, fixed palette = M444_12



The picture above shows the relation between the display memory and the SEG and COM lines of the LCD.

RAM requirements

This LCD driver can be used with and without a display data cache, containing a complete copy of the contents of the LCD data RAM. The amount of memory used by the cache is:

LCD_XSIZE x LCD_YSIZE x 2 bytes

Using a cache is only recommended if a lot of drawing operations uses the XOR drawing mode. A cache would avoid reading the display data in this case. Normally the use of a cache is not recommended.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional run-time configuration

The table below shows the available run-time configuration routines of this driver:

Routine	Explanation
GUIDRV_S1D15G00_Config	Passes a pointer to a CONFIG_S1D15G00 structure to the driver.
GUIDRV_S1D15G00_SetBus8	Tells the driver to use the 8 bit indirect interface and passes pointer to a GUI_PORT_API structure to the driver.

GUIDRV_S1D15G00_Config()

Description

Passes a pointer to a CONFIG_S1D15G00 structure to the driver.

Prototype

```
void GUIDRV_S1D15G00_Config(GUI_DEVICE      * pDevice,
                            CONFIG_S1D15G00 * pConfig);
```

Parameter	Description
pDevice	Pointer to the driver device.
pConfig	Pointer to a CONFIG_S1D15G00 structure described below.

Elements of CONFIG_S1D15G00

Data type	Element	Description
int	FirstSEG	First segment address to be used in the data RAM of the display controller. The value can be determined experimentally or taken from the display documentation. The value is normally 0.
int	FirstCOM	First common address to be used in the data RAM of the display controller. The value can be determined experimentally or taken from the display documentation. The value is normally 0.
int	UseCache	Enables or disables use of a data cache. Should be set to 1 for enabling and to 0 for disabling.

GUIDRV_S1D15G00_SetBus8()

Description

Tells the driver to use the 8 bit indirect interface and passes a pointer to a GUI_PORT_API structure to the driver containing function pointers to the hardware routines to be used.

Prototype

```
void GUIDRV_S1D15G00_SetBus8(GUI_DEVICE * pDevice, GUI_PORT_API * pHW_API);
```

Parameter	Description
pDevice	Pointer to the driver device.
pHW_API	Pointer to a GUI_PORT_API structure. See required routines below.

Required GUI_PORT_API routines

Element	Data type
pfWrite8_A0	void (*)(U8 Data)
pfWrite8_A1	void (*)(U8 Data)
pfWriteM8_A1	void (*)(U8 * pData, int NumItems)
pfRead8_A1	U8 (*)(void)

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Configuration Example

```
#define XSIZE 130
#define YSIZE 130

GUI_PORT_API _PortAPI;

void LCD_X_Config(void) {
  GUI_DEVICE * pDevice;
  CONFIG_S1D15G00 Config = {0};

  //
  // Set display driver and color conversion for 1st layer
  //
  pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_S1D15G00, GUICC_M444_12, 0, 0);
  //
  // Display driver configuration, required for Lin-driver
  //
  LCD_SetSizeEx (0, XSIZE,  YSIZE);
  LCD_SetVSizeEx(0, XSIZE,  YSIZE);
  //
  // Driver specific configuration
  //
  Config.FirstCOM  = 2;
  GUIDRV_S1D15G00_Config(pDevice, &Config);
  //
  // Setup hardware access routines
  //
  _PortAPI.pfWrite8_A0  = _Write_A0;
  _PortAPI.pfWrite8_A1  = _Write_A1;
  _PortAPI.pfWriteM8_A1 = _WriteM_A1;
  GUIDRV_S1D15G00_SetBus8(pDevice, &_PortAPI);
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.7.8 GUIDRV_SLin

Supported hardware

Controllers

The driver works with the following display controllers:

- Epson S1D13700
- Solomon SSD1848
- Ultrachip UC1617
- Toshiba T6963

Bits per pixel

Supported color depth is 1 and 2 bits per pixel. Please note that the Toshiba T6963 controller does only support the 1bpp mode.

Interfaces

The driver supports the 8 bit indirect interface.

Color depth and display orientation

The driver can be used with different orientations and color depths. The following table shows the configuration macros which can be used to create and link the driver during the initialization:

Identifier	Color depth and orientation
GUIDRV_SLIN_1	1bpp, default orientation
GUIDRV_SLIN_OY_1	1bpp, Y axis mirrored
GUIDRV_SLIN_OX_1	1bpp, X axis mirrored
GUIDRV_SLIN_OXY_1	1bpp, X and Y axis mirrored
GUIDRV_SLIN_OS_1	1bpp, X and Y swapped
GUIDRV_SLIN_OSY_1	1bpp, X and Y swapped, Y axis mirrored
GUIDRV_SLIN_OSX_1	1bpp, X and Y swapped, X axis mirrored
GUIDRV_SLIN_OSXY_1	1bpp, X and Y swapped, X and Y axis mirrored
GUIDRV_SLIN_2	2bpp, default orientation
GUIDRV_SLIN_OY_2	2bpp, Y axis mirrored
GUIDRV_SLIN_OX_2	2bpp, X axis mirrored
GUIDRV_SLIN_OXY_2	2bpp, X axis mirrored, Y axis mirrored
GUIDRV_SLIN_OS_2	2bpp, X and Y swapped
GUIDRV_SLIN_OSY_2	2bpp, X and Y swapped, Y axis mirrored
GUIDRV_SLIN_OSX_2	2bpp, X and Y swapped, X axis mirrored
GUIDRV_SLIN_OSXY_2	2bpp, X and Y swapped, Y and X axis mirrored

Driver selection

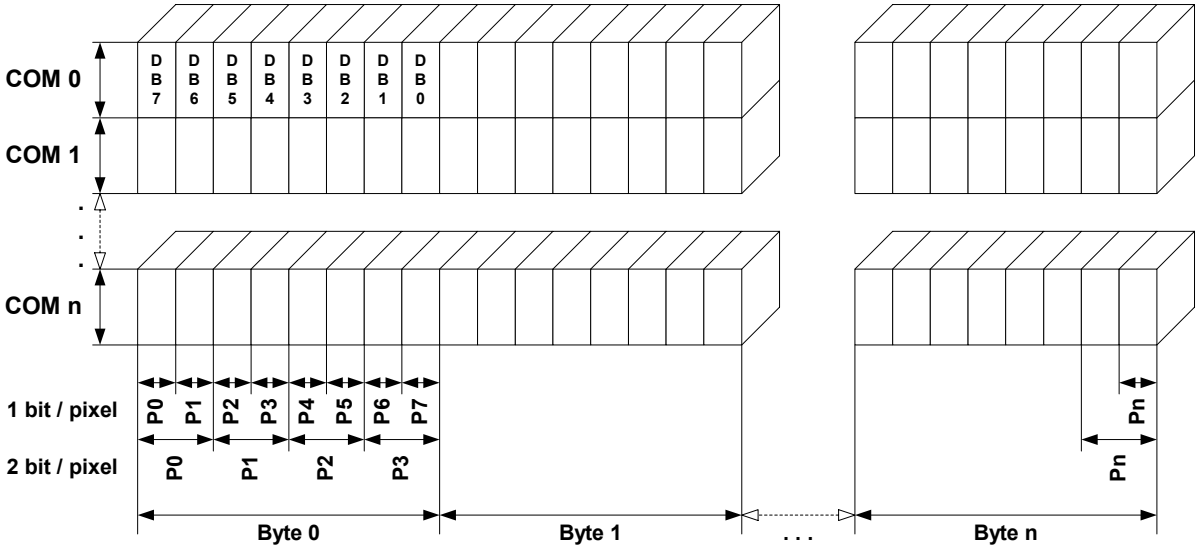
To use GUIDRV_SLin for the given display, the following command can be used e.g.:

```
pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_SLIN_OX_1, GUICC_1, 0, 0);
```

Please refer to chapter “Colors” on page 227 to get more information about using the proper palette mode.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Display data RAM organization



The picture above shows the relation between the display memory and the SEG and COM lines of the display.

RAM requirements

This display driver may be used with or without a display data cache, containing a complete copy of the LCD data RAM. If a cache is not used, there are no additional RAM requirements.
It is recommended to use this driver with a data cache for faster LCD-access. The amount of memory used by the cache may be calculated as follows:

Size of RAM (in bytes) = BitsPerPixel * (LCD_XSIZE + 7) / 8 * LCD_YSIZE

Additional run-time configuration

The table below shows the available run-time configuration routines of this driver:

Routine	Explanation
GUIDRV_SLin_Config	Passes a pointer to a CONFIG_SLIN structure to the driver.
GUIDRV_SLin_SetBus8	Tells the driver to use the 8 bit indirect interface and passes pointer to a GUI_PORT_API structure to the driver.
GUIDRV_SLin_SetS1D13700	Tells the driver to use an Epson S1D13700 controller.
GUIDRV_SLin_SetSSD1848	Tells the driver to use a Solomon SSD1848 controller.
GUIDRV_SLin_SetT6963	Tells the driver to use a Toshiba T6963 controller.
GUIDRV_SLin_SetUC1617	Tells the driver to use an Ultrachip UC1617 controller.

GUIDRV_SLin_Config()

Description

Passes a pointer to a CONFIG_SLIN structure to the driver.

Prototype

```
void GUIDRV_SLin_Config(GUI_DEVICE * pDevice, CONFIG_SLIN * pConfig);
```

Parameter	Description
pDevice	Pointer to the driver device.
pConfig	Pointer to a CONFIG_SLIN structure described below.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Elements of CONFIG_SLIN

Data type	Element	Description
int	FirstSEG	First segment address to be used in the data RAM of the display controller. The value can be determined experimentally or taken from the display documentation. The value is normally 0.
int	FirstCOM	First common address to be used in the data RAM of the display controller. The value can be determined experimentally or taken from the display documentation. The value is normally 0.
int	UseCache	Enables or disables use of a data cache. Should be set to 1 for enabling and to 0 for disabling.
int	UseMirror	Only used with SSD1848. Should be normally 1.

GUIDRV_SLin_SetBus8()

Description

Tells the driver to use the 16 bit indirect interface and passes a pointer to a GUI_PORT_API structure to the driver containing function pointers to the hardware routines to be used.

Prototype

```
void GUIDRV_Slin_SetBus8(GUI_DEVICE * pDevice, GUI_PORT_API * pHW_API);
```

Parameter	Description
pDevice	Pointer to the driver device
pHW_API	Pointer to a GUI_PORT_API structure. See required routines below.

Required GUI_PORT_API routines

Element	Data type
pfWrite8_A0	void (*)(U8 Data)
pfWrite8_A1	void (*)(U8 Data)
pfWriteM8_A0	void (*)(U8 * pData, int NumItems)
pfWriteM8_A1	void (*)(U8 * pData, int NumItems)
pfRead8_A1	U8 (*)(void)

GUIDRV_SLin_SetS1D13700()

Description

Tells the driver that an Epson S1D13700 controller should be used.

Prototype

```
void GUIDRV_SLin_SetS1D13700(GUI_DEVICE * pDevice);
```

Parameter	Description
pDevice	Pointer to the driver device.

GUIDRV_SLin_SetSSD1848()

Description

Tells the driver that a Solomon SSD1848 controller should be used.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void GUIDRV_SLin_SetSSD1848(GUI_DEVICE * pDevice);
```

Parameter	Description
pDevice	Pointer to the driver device.

GUIDRV_SLin_SetT6963()

Description

Tells the driver that a Toshiba T6963 controller should be used.

Prototype

```
void GUIDRV_SLin_SetT6963(GUI_DEVICE * pDevice);
```

Parameter	Description
pDevice	Pointer to the driver device.

GUIDRV_SLin_SetUC1617()

Description

Tells the driver that an Ultrachip UC1617 controller should be used.

Prototype

```
void GUIDRV_SLin_SetUC1617(GUI_DEVICE * pDevice);
```

Parameter	Description
pDevice	Pointer to the driver device.

Configuration Example

```
#define XSIZE 320
#define YSIZE 240

void LCD_X_Config(void) {
  GUI_DEVICE * pDevice;
  CONFIG_SLIN  Config  = {0};
  GUI_PORT_API PortAPI = {0};

  //
  // Set display driver and color conversion
  //
  pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_SLIN_2, GUICC_2, 0, 0);
  //
  // Common display driver configuration
  //
  LCD_SetSizeEx (0, XSIZE, YSIZE);
  LCD_SetVSizeEx(0, XSIZE, YSIZE);
  //
  // Driver specific configuration
  //
  Config.UseCache  = 1;
  GUIDRV_SLin_Config(pDevice, &Config);
  //
  // Select display controller
  //
  GUIDRV_SLin_SetS1D13700(pDevice);
  //
  // Setup hardware access routines
  //
  PortAPI.pfWrite16_A0  = _Write0;
  PortAPI.pfWrite16_A1  = _Write1;
  PortAPI.pfWriteM16_A0 = _WriteM0;
  PortAPI.pfRead16_A1   = _Read1;
  GUIDRV_SLin_SetBus8(pDevice, &PortAPI);
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.7.9 GUIDRV_SPage

Supported hardware

Controllers

The driver works with the following display controller:

- UltraChip UC1611

Bits per pixel

The driver currently supports 2 and 4 bpp resolutions.

Interfaces

The driver supports the indirect interface (8 bit) of the display controller. Parallel, 4-pin SPI or I2C bus can be used.

Color depth and display orientation

The driver can be used with different orientations and color depths. The following table shows the configuration macros which can be used to create and link the driver during the initialization:

Identifier	Color depth	Cache	Orientation
GUIDRV_SPAGE_2C0	2bpp	No	default
GUIDRV_SPAGE_OY_2C0	2bpp	No	Y axis mirrored
GUIDRV_SPAGE_OX_2C0	2bpp	No	X axis mirrored
GUIDRV_SPAGE_OXY_2C0	2bpp	No	X and Y axis mirrored
GUIDRV_SPAGE_OS_2C0	2bpp	No	X and Y swapped
GUIDRV_SPAGE_OSY_2C0	2bpp	No	X and Y swapped, Y axis mirrored
GUIDRV_SPAGE_OSX_2C0	2bpp	No	X and Y swapped, X axis mirrored
GUIDRV_SPAGE_OSXY_2C0	2bpp	No	X and Y swapped, X and Y axis mirrored
GUIDRV_SPAGE_2C1	2bpp	Yes	default
GUIDRV_SPAGE_OY_2C1	2bpp	Yes	Y axis mirrored
GUIDRV_SPAGE_OX_2C1	2bpp	Yes	X axis mirrored
GUIDRV_SPAGE_OXY_2C1	2bpp	Yes	X and Y axis mirrored
GUIDRV_SPAGE_OS_2C1	2bpp	Yes	X and Y swapped
GUIDRV_SPAGE_OSY_2C1	2bpp	Yes	X and Y swapped, Y axis mirrored
GUIDRV_SPAGE_OSX_2C1	2bpp	Yes	X and Y swapped, X axis mirrored
GUIDRV_SPAGE_OSXY_2C1	2bpp	Yes	X and Y swapped, X and Y axis mirrored
GUIDRV_SPAGE_4C0	4bpp	No	default
GUIDRV_SPAGE_OY_4C0	4bpp	No	Y axis mirrored
GUIDRV_SPAGE_OX_4C0	4bpp	No	X axis mirrored
GUIDRV_SPAGE_OXY_4C0	4bpp	No	X and Y axis mirrored
GUIDRV_SPAGE_OS_4C0	4bpp	No	X and Y swapped
GUIDRV_SPAGE_OSY_4C0	4bpp	No	X and Y swapped, Y axis mirrored
GUIDRV_SPAGE_OSX_4C0	4bpp	No	X and Y swapped, X axis mirrored
GUIDRV_SPAGE_OSXY_4C0	4bpp	No	X and Y swapped, X and Y axis mirrored
GUIDRV_SPAGE_4C1	4bpp	Yes	default
GUIDRV_SPAGE_OY_4C1	4bpp	Yes	Y axis mirrored
GUIDRV_SPAGE_OX_4C1	4bpp	Yes	X axis mirrored
GUIDRV_SPAGE_OXY_4C1	4bpp	Yes	X and Y axis mirrored
GUIDRV_SPAGE_OS_4C1	4bpp	Yes	X and Y swapped
GUIDRV_SPAGE_OSY_4C1	4bpp	Yes	X and Y swapped, Y axis mirrored
GUIDRV_SPAGE_OSX_4C1	4bpp	Yes	X and Y swapped, X axis mirrored
GUIDRV_SPAGE_OSXY_4C1	4bpp	Yes	X and Y swapped, X and Y axis mirrored

Driver selection

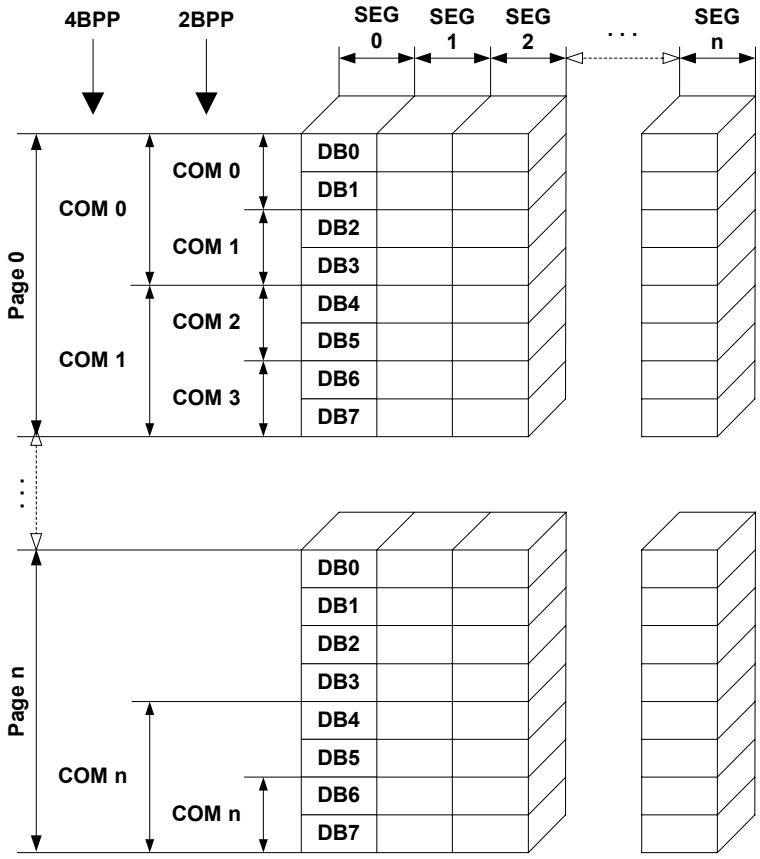
To use GUIDRV_SPage for the given display, the following call may be used in the function LCD_X_Config:

```
pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_SPAGE_4C0, GUICC_4, 0, 0);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Please refer to the chapter “Colors” on page 227 to get more information about using the proper palette mode.

Display data RAM organization



The picture above shows the relation between the display memory and the SEG and COM lines of the display.

RAM requirements

This display driver can be used with or without a display data cache. The data cache contains a complete copy of the LCD data RAM. If no cache is used, there are no additional RAM requirements.
It is highly recommended to use this driver with a data cache for faster LCD-access. Not using a cache degrades the performance of this driver seriously. The amount of memory used by the cache may be calculated as follows:

```
Size of RAM (in bytes) =
(LCD_YSIZE + (8 / LCD_BITSPERPIXEL - 1)) / 8 * LCD_BITSPERPIXEL * LCD_XSIZE
```

Additional run-time configuration

The table below shows the available run-time configuration routines of this driver:

Routine	Explanation
GUIDRV_SPage_Config	Passes a pointer to a CONFIG_SPAGE structure
GUIDRV_SPage_SetBus8	Tells the driver to use the 8 bit indirect interface and passes pointer to a GUI_PORT_API structure to the driver.
GUIDRV_SPage_SetUC1611	Tells the driver to use an UltraChip UC1611 controller.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUIDRV_SPage_Config()

Description

Passes a pointer to a CONFIG_SPAGE structure to the driver.

Prototype

```
void GUIDRV_SPage_Config(GUI_DEVICE * pDevice, CONFIG_SPAGE * pConfig);
```

Parameter	Description
pDevice	Pointer to the driver device.
pConfig	Pointer to a CONFIG_SPAGE structure described below.

Elements of CONFIG_SPAGE

Data type	Element	Description
int	FirstSEG	First segment address to be used in the data RAM of the display controller. The value can be determined experimentally or taken from the display documentation. The value is normally 0.
int	FirstCOM	First common address to be used in the data RAM of the display controller. The value can be determined experimentally or taken from the display documentation. The value is normally 0.

GUIDRV_SPage_SetBus8()

Description

Tells the driver to use the 8 bit indirect interface and passes a pointer to a GUI_PORT_API structure to the driver containing function pointers to the hardware routines to be used.

Prototype

```
void GUIDRV_SPage_SetBus8(GUI_DEVICE * pDevice, GUI_PORT_API * pHW_API);
```

Parameter	Description
pDevice	Pointer to the driver device.
pHW_API	Pointer to a GUI_PORT_API structure. See required routines below.

Required GUI_PORT_API routines

Element	Data type
pfWrite8_A0	void (*)(U8 Data)
pfWrite8_A1	void (*)(U8 Data)
pfWriteM8_A1	void (*)(U8 * pData, int NumItems)
pfRead8_A1	U8 (*)(void)

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Configuration Example

```
void LCD_X_Config(void) {
  CONFIG_SPAGE Config = {0};
  GUI_DEVICE * pDevice;
  GUI_PORT_API PortAPI = {0};

  //
  // Set display driver and color conversion for 1st layer
  //
  pDevice = GUI_DEVICE_CreateAndLink(DISPLAY_DRIVER, COLOR_CONVERSION, 0, 0);
  //
  // Display size configuration
  //
  if (LCD_GetSwapXY()) {
    LCD_SetSizeEx (0, YSIZE_PHYS,   XSIZE_PHYS);
    LCD_SetVSizeEx(0, VYSIZE_PHYS,  VXSIZE_PHYS);
  } else {
    LCD_SetSizeEx (0, XSIZE_PHYS,   YSIZE_PHYS);
    LCD_SetVSizeEx(0, VXSIZE_PHYS,  VYSIZE_PHYS);
  }
  //
  // Driver configuration
  //
  Config.FirstSEG = 0;//256 - 224;
  GUIDRV_SPage_Config(pDevice, &Config);
  //
  // Configure hardware routines
  //
  PortAPI.pfWrite8_A0  = _Write8_A0;
  PortAPI.pfWrite8_A1  = _Write8_A1;
  PortAPI.pfWriteM8_A1 = _WriteM8_A1;
  PortAPI.pfReadM8_A1  = LCD_X_8080_8_ReadM01;
  GUIDRV_SPage_SetBus8(pDevice, &PortAPI);
  //
  // Controller configuration
  //
  GUIDRV_SPage_SetUC1611(pDevice);
}
```

GUIDRV_SPage_SetUC1611()

Description

Tells the driver that an UltraChip UC1611 controller should be used.

Prototype

```
void GUIDRV_SPage_SetUC1611(GUI_DEVICE * pDevice);
```

Parameter	Description
pDevice	Pointer to the driver device.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.7.10 GUIDRV_SSD1926

Supported hardware

Controllers

This driver works with the Solomon SSD1926 display controller.

Bits per pixel

Currently supported color depth is 8. The display controller supports up to 32 bits per pixel. The driver can be extended on demand if support for an other color depth is required.

Interfaces

The driver supports the 16 bit indirect interface.

Color depth and display orientation

This driver can be used with different orientations. The following table shows the configuration macros which can be used to create and link the driver during the initialization:

Identifier	Color depth and orientation
GUIDRV_SSD1926_8	8bpp, default orientation
GUIDRV_SSD1926_OY_8	8bpp, Y axis mirrored
GUIDRV_SSD1926_OX_8	8bpp, X axis mirrored
GUIDRV_SSD1926_OXY_8	8bpp, X and Y axis mirrored
GUIDRV_SSD1926_OS_8	8bpp, X and Y swapped
GUIDRV_SSD1926_OSY_8	8bpp, X and Y swapped, Y axis mirrored
GUIDRV_SSD1926_OSX_8	8bpp, X and Y swapped, X axis mirrored
GUIDRV_SSD1926_OSXY_8	8bpp, X and Y swapped, X and Y axis mirrored

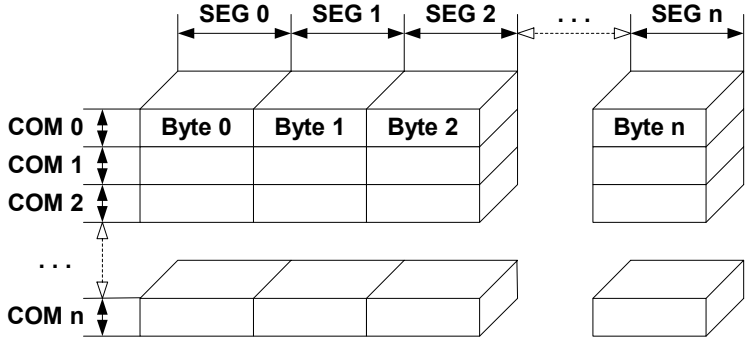
Driver selection

To use GUIDRV_SSD1926 for the given display, the following command can be used e.g.:

```
pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_SSD1926, GUICC_323, 0, 0);
```

Please refer to chapter “Colors” on page 227 to get more information about using the proper palette mode.

Display data RAM organization



The picture above shows the relation between the display memory and the SEG and COM lines of the display.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

RAM requirements

This display driver may be used with or without a display data cache, containing a complete copy of the LCD data RAM. If no cache is used, there are no additional RAM requirements.
It is recommended to use this driver with a data cache for faster LCD-access. The amount of memory used by the cache may be calculated as follows:

Size of RAM (in bytes) = LCD_XSIZE * LCD_YSIZE

Additional run-time configuration

The table below shows the available run-time configuration routines of this driver:

Routine	Explanation
GUIDRV_SSD1926_Config	Passes a pointer to a CONFIG_SSD1926 structure to the driver.
GUIDRV_SSD1926_SetBus16	Tells the driver to use the 16 bit indirect interface and passes pointer to a GUI_PORT_API structure to the driver.

GUIDRV_SSD1926_Config()

Description

Passes a pointer to a CONFIG_SSD1926 structure to the driver.

Prototype

```
void GUIDRV_SSD1926_Config(GUI_DEVICE * pDevice, CONFIG_SSD1926 * pConfig);
```

Parameter	Description
pDevice	Pointer to the driver device.
pConfig	Pointer to a CONFIG_SSD1926 structure described below.

Elements of CONFIG_SSD1926

Data type	Element	Description
int	FirstSEG	First segment address to be used in the data RAM of the display controller. The value can be determined experimentally or taken from the display documentation. The value is normally 0.
int	FirstCOM	First common address to be used in the data RAM of the display controller. The value can be determined experimentally or taken from the display documentation. The value is normally 0.
int	UseCache	Enables or disables use of a data cache. Should be set to 1 for enabling and to 0 for disabling.

GUIDRV_SSD1926_SetBus16()

Description

Tells the driver to use the 16 bit indirect interface and passes a pointer to a GUI_PORT_API structure to the driver containing function pointers to the hardware routines to be used.

Prototype

```
void GUIDRV_SSD1926_SetBus16(GUI_DEVICE * pDevice, GUI_PORT_API * pHW_API);
```

Parameter	Description
pDevice	Pointer to the driver device.
pHW_API	Pointer to a GUI_PORT_API structure. See required routines below.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Required GUI_PORT_API routines

Element	Data type
pfWrite16_A0	void (*)(U16 Data)
pfWrite16_A1	void (*)(U16 Data)
pfWriteM16_A0	void (*)(U16 * pData, int NumItems)
pfWriteM16_A1	void (*)(U16 * pData, int NumItems)
pfRead16_A1	U16 (*)(void)

Configuration Example

```
#define XSIZE 320L
#define YSIZE 240L

GUI_PORT_API _PortAPI;

void LCD_X_Config(void) {
  GUI_DEVICE * pDevice_0;
  CONFIG_SSD1926 Config_0 = {0};

  //
  // Set display driver and color conversion
  //
  pDevice_0 = GUI_DEVICE_CreateAndLink(GUIDRV_SSD1926_8, GUICC_8666, 0, 0);
  //
  // Common display driver configuration
  //
  LCD_SetSizeEx (0, XSIZE, YSIZE);
  LCD_SetVSizeEx(0, XSIZE, YSIZE);
  //
  // Set driver specific configuration items
  //
  Config_0.UseCache  = 1;
  //
  // Set hardware access routines
  //
  _PortAPI.pfWrite16_A0  = LCD_X_8080_16_Write00_16;
  _PortAPI.pfWrite16_A1  = LCD_X_8080_16_Write01_16;
  _PortAPI.pfWriteM16_A0 = LCD_X_8080_16_WriteM00_16;
  _PortAPI.pfWriteM16_A1 = LCD_X_8080_16_WriteM01_16;
  _PortAPI.pfRead16_A1   = LCD_X_8080_16_Read01_16;
  GUIDRV_SSD1926_SetBus16(pDevice, &_PortAPI);
  //
  // Pass configuration structure to driver
  //
  GUIDRV_SSD1926_Config(pDevice, &Config_0);
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.7.11 GUIDRV_CompactColor_16

Supported hardware

Controllers

This driver works with the following display controllers:

- Ampire FSA506
- Epson S1D13742, S1D13743, S1D19122
- Himax HX8301, HX8312A, HX8325A, HX8340, HX8347, HX8352, HX8352B, HX8353
- Hitachi HD66766, HD66772, HD66789
- Ilitek ILI9161, ILI9220, ILI9221, ILI9320, ILI9325, ILI9326, ILI9328
- LG Electronics LGDP4531, LGDP4551
- MagnaChip D54E4PA7551
- Novatek NT39122, NT7573
- OriseTech SPFD5408, SPFD54124C, SPFD5414D, SPFD5420A
- Renesas R61505, R61509, R61516, R61580, R63401
- Samsung S6D0110A, S6D0117, S6D0129, S6D04H0
- Sharp LCY-A06003, LR38825
- Sitronix ST7628, ST7637, ST7687, ST7712, ST7715, ST7735, ST7787
- Solomon SSD1284, SSD1289, SSD1298, SSD1355, SSD1961, SSD1963, SSD2119
- Toshiba JBT6K71

Bits per pixel

Supported color depth is 16 bpp.

Interfaces

The driver supports the indirect interface (8- and 16-bit) and the 3 pin SPI interface. Default mode is 8-bit indirect.

Driver selection and configuration

To be able to use this driver the following macro definition needs to be added to the configuration file `LCDConf.h`:

```
#define LCD_USE_COMPACT_COLOR_16
```

After this define has been added the display driver assumes the driver specific configuration file `LCDConf_CompactColor_16.h` in the configuration folder. All further compile time configuration macros should be defined in this file. To create a driver device using the GUIDRV_CompactColor_16 for the given display, e.g. the following command can be used:

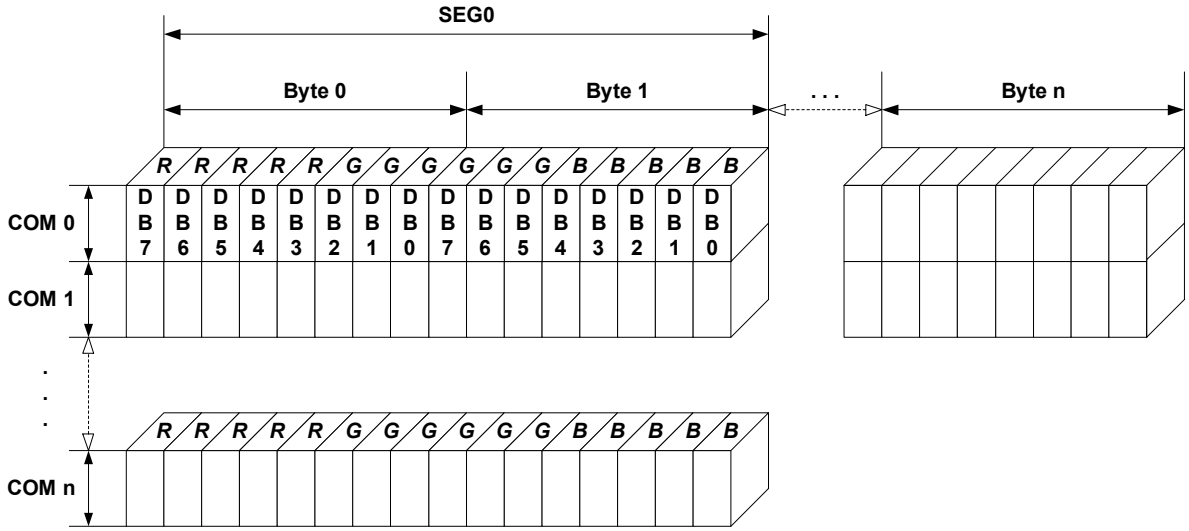
```
pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_COMPACT_COLOR_16,
                                   GUICC_565, 0, 0);
```

Please refer to chapter “Colors” on page 227 to get more information about using the proper palette mode.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Display data RAM organization

16 bits per pixel, fixed palette = 565



The picture above shows the relation between the display memory and the SEG and COM lines of the LCD.

RAM requirements

This LCD driver can be used with and without a display data cache, containing a complete copy of the contents of the LCD data RAM. The amount of memory used by the cache is: `LCD_XSIZE * LCD_YSIZE * 2 bytes`. Using a cache is only recommended if it is intended to use a lot of drawing operations using the XOR drawing mode. A cache would avoid reading the display data in this case. Normally the use of a cache is not recommended.

The driver uses a write buffer for drawing multiple pixels of the same color. If multiple pixels of the same color should be drawn, the driver first fills the buffer and then performs a single call of the LCD_WRITEM_A1 macro to transfer the data to the display controller at once. The default buffer size is 500 bytes.

Available configuration macros (compile time configuration)

Controller selection

To select the desired controller the macro `LCD_CONTROLLER` should be used in the configuration file LCDConf_CompactColor_16.h. The following table shows the values to be used to select the appropriate controller:

Number	Supported Controller
66700	Sharp LR38825
66701	Ilitek ILI9326 OriseTech SPFD5420A Renesas R61509, R63401
66702	Solomon SSD1284, SSD1289, SSD1298
66703	Toshiba JBT6K71
66704	Sharp LCY-A06003
66705	Renesas R61505 Samsung S6D0129
66706	MagnaChip D54E4PA7551
66707	Himax HX8312

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Number	Supported Controller
66708	Ilitek ILI9320, ILI9325, ILI9328 LG Electronics LGDP4531, LGDP4551 OriseTech SPFD5408 Renesas R61505, R61580
66709	Epson S1D19122 Himax HX8353 Novatek NT39122 Orisetech SPFD54124C, SPFD5414D Renesas R61516 Samsung S6D04H0 Sitronix ST7628, ST7637, ST7715, ST7735 Solomon SSD1355, SSD1961, SSD1963
66710	Novatek NT7573
66711	Epson S1D13742, S1D13743
66712	Himax HX8347, HX8352
66713	Himax HX8340
66714	Solomon SSD2119
66715	Himax HX8352B
66716	Ampire FSA506
66717	Sitronix ST7787
66766	Hitachi HD66766 Ilitec ILI9161 Samsung S6D0110A
66772	Himax HX8301 Hitachi HD66772 Ilitec ILI9220, ILI9221 Samsung S6D0117 Sitronix ST7712
66789	Hitachi HD66789

Display configuration

The following table shows the available configuration macros:

Macro	Description
LCD_MIRROR_X	Activate to mirror X-axis.
LCD_MIRROR_Y	Activate to mirror Y-axis.
LCD_SWAP_XY	Activate to swap X- and Y-axis.

For details, refer to “Display orientation” on page 824.

Hardware access

The following table shows the available configuration macros which can be defined in this file for configuring the hardware access:

Macro	Description
LCD_NUM_DUMMY_READS	Number of required dummy reads if a read operation should be executed. The default value is 2. If using a serial interface the display controllers HD66766 and HD66772 need 5 dummy reads. Sharp LR38825 needs 3 dummy reads with a 8-bit bus.
LCD_REG01	This macro is only required if a Himax HX8312A is used. Unfortunately the register 0x01 (Control register 1) contains orientation specific settings as well as common settings. So this macro should contain the contents of this register.
LCD_SERIAL_ID	With a serial 3 wire interface this macro defines the ID signal of the device ID code. It should be 0 (default) or 1. Please note: This macro is only used with the 3 wire protocol for Hitachi HD66772, Samsung S6D0117, Himax HX8301 and Ilitek ILI9220.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Macro	Description
LCD_USE_SERIAL_3PIN	This configuration macro has been implemented to support the 3 wire serial interface of the following controllers: Hitachi HD66772, Samsung S6D0117, Himax HX8301, Ilitek ILI9220. Should be set to 1 if the 3 wire serial interface is used. Default is 0. Please note: Do not use this macro with other display controllers!
LCD_USE_PARALLEL_16	Should be set to 1 if the 16 bit parallel interface is used. Default is 0.
LCD_WRITE_BUFFER_SIZE	Defines the size of the write buffer. Using a write buffer increases the performance of the driver. If multiple pixels should be written with the same color, the driver first fills the buffer and then writes the contents of the buffer with one execution of the macro LCD_WRITEM_A1, instead of multiple macro executions. The default buffer size is 500 bytes.
LCD_WRITE_A0	Write a byte to display controller with RS-line low.
LCD_WRITE_A1	Write a byte to display controller with RS-line high.
LCD_READM_A1	Read multiple bytes (8 bit parallel interface) or multiple words (16 bit parallel interface) from display controller with RS-line high.
LCD_WRITEM_A1	Write multiple bytes (8 bit parallel interface) or multiple words (16 bit parallel interface) to display controller with RS-line high.
LCD_WRITEM_A0	Write multiple bytes (8 bit parallel interface) or multiple words (16 bit parallel interface) to display controller with RS-line low.

The driver initializes the 'Driver Output Mode' and 'Entry Mode' register itself. The user does not need to initialize this registers in `LCD_X_InitController()`.

Available configuration routines (run-time configuration)

The following table lists the available run-time configuration routines:

Routine	Description
LCD_SetSizeEx()	Changes the size of the visible area.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Configuration example

The following shows how to select the driver and how it can be configured:

LCDConf.h

As explained above it should include the following for selecting the driver:

```
#define LCD_USE_COMPACT_COLOR_16
```

LCDConf_CompactColor_16.h

This file contains the display driver specific configuration and could look as the following:

```
//
// General configuration of LCD
//
#define LCD_CONTROLLER      66709 // Renesas R61516
#define LCD_BITSPERPIXEL       16
#define LCD_USE_PARALLEL_16     1
#define LCD_MIRROR_Y            1
//
// Indirect interface configuration
//
void LCD_X_Write01_16(unsigned short c);
void LCD_X_Write00_16(unsigned short c);
void LCD_X_WriteM01_16(unsigned short * pData, int NumWords);
void LCD_X_WriteM00_16(unsigned short * pData, int NumWords);
void LCD_X_ReadM01_16 (unsigned short * pData, int NumWords);
#define LCD_WRITE_A1(Word) LCD_X_Write01_16(Word)
#define LCD_WRITE_A0(Word) LCD_X_Write00_16(Word)
#define LCD_WRITEM_A1(Word, NumWords) LCD_X_WriteM01_16(Word, NumWords)
#define LCD_WRITEM_A0(Word, NumWords) LCD_X_WriteM00_16(Word, NumWords)
#define LCD_READM_A1(Word, NumWords)  LCD_X_ReadM01_16(Word, NumWords)
```

LCDConf.c

The following shows how to create a display driver device with this driver and how to configure it:

```
void LCD_X_Config(void) {
  //
  // Set display driver and color conversion
  //
  GUI_DEVICE_CreateAndLink(GUIDRV_COMPACT_COLOR_16, // Display driver
                           GUICC_M565,              // Color conversion
                           0, 0);
  //
  // Display driver configuration
  //
  LCD_SetSizeEx(0, 240, 320);                    // Physical display size in pixels
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.7.12 GUIDRV_Fujitsu_16

This driver supports the Fujitsu Graphic display controllers. It has been tested with "Jasmine", but it should also work with "Lavender", since all relevant registers are compatible.

Supported hardware

Controllers

This driver works with the following display controllers:

- Fujitsu Jasmine
- Fujitsu Lavender

Bits per pixel

Supported color depths are 1, 2, 4, 8 and 16 bpp.

Interfaces

The driver has been tested with a 32 bit interface to the CPU. If a 16 bit interface is used, the 32-bit accesses can be replaced by 2 16-bit accesses.

Driver selection

To use GUIDRV_Fujitsu_16 for the given display, the following command can be used e.g.:

```
pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_FUJITSU_16, GUICC_556, 0, 0);
```

Please refer to chapter “Colors” on page 227 to get more information about using the proper palette mode.

Available configuration macros (compile time configuration)

Controller selection

To select the desired controller the macro `LCD_CONTROLLER` should be used in the configuration file `LCDConf_Fujitsu_16.h`. The following table shows the values to be used to select the appropriate controller:

Number	Supported Controller
8720	Fujitsu Jasmine
8721	Fujitsu Lavender

Display data RAM organization

The display controller uses DRAM in an optimized, non-linear way (described in the Fujitsu documentation). Direct memory access is not used by the driver.

RAM requirements

About 16 bytes for some static variables.

Hardware configuration

This driver requires a full bus interface for hardware access as described in Chapter 28: "Configuration". The following table lists the macros which must be defined for hardware access:

Macro	Explanation
LCD_READ_REG	Read a register of the display controller. (as 32 bit value) (optional)
LCD_WRITE_REG	Write a register of the display controller. (as 32 bit value) (optional)

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

The driver contains a default for hardware access macros, which configures 32 bit access on the Fujitsu demonstration platform (Using an MB91361 or MB91362 and a Jasmine chip at address 0x30000000); if the target hardware is compatible with these settings, then LCD_READ_REG(), LCD_WRITE_REG() do not need to be defined.

Color format (R/B swap)

It seems that on some target systems, Red and blue are swapped. This can be changed via software if the Config switch LCD_SWAP_RB is toggled in the configuration file.

Hardware initialization

The display controller requires a complicated initialization. Example code is available from Fujitsu in the GDC module. This code is not part of the driver, since it depends on the actual chip used, on the clock settings, the display and a lot of other things. We recommend using the original Fujitsu code, since the documentation of the chips is not sufficient to write this code. Before calling GUI_Init(), the GDC should be initialized using this code (typically called as GDC_Init(0xff)).

Example:

LCDConf.h for VGA display, 8bpp, Jasmine:

```
#define LCD_XSIZE 640 /* X-resolution of LCD, Logical color. */
#define LCD_YSIZE 480 /* Y-resolution of LCD, Logical color. */
#define LCD_BITSPERPIXEL 8
#define LCD_CONTROLLER 8720 /* Jasmine */
```

Additional configuration switches

The following table shows optional configuration macros available for this driver:

Macro	Explanation
LCD_ON	Function replacement macro which switches the display on.
LCD_OFF	Function replacement macro which switches the display off.

Special requirements

None

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.7.13 GUIDRV_Page1bpp

Supported hardware

Controllers

This driver works with the following display controllers:

- Epson S1D10605, S1D15605, S1D15705, S1D15710, S1D15714, S1D15721
- Epson S1D15E05, S1D15E06, SED1520, SED1560, SED1565, SED1566
- Epson SED1567, SED1568, SED1569, SED1575
- Hitachi HD61202
- IST IST3020
- New Japan Radio Company NJU6676, NJU6679
- Novatek NT7502, NT7534, NT7538, NT75451
- Philips PCF8810, PCF8811, PCF8535, PCD8544
- Samsung KS0108B, KS0713, KS0724
- Samsung S6B0108B, S6B0713, S6B0719, S6B0724, S6B1713
- Sino Wealth SH1101A
- Sitronix ST7522, ST7565, ST7567
- Solomon SSD1303, SSD1805, SSD1815
- ST Microelectronics ST7548, STE2001, STE2002
- Sunplus SPLC501C
- UltraChip UC1601, UC1606, UC1608, UC1701

It should be assumed that it will also work with every similar organized controller.

Bits per pixel

Supported color depth is 1bpp.

Interfaces

The driver supports the indirect interface (8 bit) of the display controller. Parallel, 4-pin SPI or I2C bus can be used.

Driver selection

To use GUIDRV_Page1bpp for the given display, the following command should be used:

```
pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_PAGE1BPP, GUICC_1, 0, 0);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Available configuration macros (compile time configuration)

Controller selection

To select the desired controller the macro LCD_CONTROLLER should be used in the configuration file LCDConf_Page1bpp.h. The following table shows the values to be used to select the appropriate controller:

Number	Supported Controller
1501	Samsung KS0713, KS0724, S6B0713, S6B0724 UltraChip UC1601, UC1606
1502	Samsung KS0108B S6B0108B
1503	Hitachi HD61202
1504	Philips PCF8810, PCF8811
1505	Philips PCF8535
1506	New Japan Radio Company NJU6679
1507	Philips PCD8544
1508	Epson S1D15710
1509	Solomon SSD1303 OLED controller
1510	Epson S1D15714 IST 3020 New Japan Radio Company NJU6676 Novatek NT7538, NT75451 Samsung S6B0719 Sino Wealth SH1101A Sitronix ST7522, ST7565, ST7567 Solomon SSD1805 UltraChip UC1608, UC1701
1511	Epson S1D15721
1512	Epson S1D15E05, S1D15E06
1513	ST Microelectronics ST7548, STE2001, STE2002
1520	Epson SED1520
1560	Epson SED1560
1565	Epson SED1565, S1D10605, S1D15605 Novatek NT7502, NT7534 Samsung S6B1713 Solomon SSD1815 Sunplus SPLC501C
1566	Epson SED1566
1567	Epson SED1567
1568	Epson SED1568
1569	Epson SED1569
1575	Epson SED1575, S1D15705

RAM requirements

This LCD driver can be used with or without a display data cache in the most cases. If one display contains more than 1 LCD controller you can not disable the cache. The data cache contains a complete copy of the contents of the LCD data RAM. If a cache is not used, there are no additional RAM requirements.
It is recommended to use this driver with a data cache for faster LCD-access. The amount of memory used by the cache may be calculated as follows:
Size of RAM (in bytes) = (LCD_YSIZE + 7) / 8 * LCD_XSIZE

Additional driver functions

LCD_ControlCache

For information about this function, please refer to page 891.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Hardware configuration

This driver accesses the hardware with the indirect interface as described in Chapter 28: "Configuration". The following table lists the macros which must be defined for hardware access:

Macro	Explanation
LCD_READ_A0	Read a byte from LCD controller with A-line low.
LCD_READ_A1	Read a byte from LCD controller with A-line high.
LCD_WRITE_A0	Write a byte to LCD controller with A-line low.
LCD_WRITE_A1	Write a byte to LCD controller with A-line high.
LCD_WRITEM_A1	Write multiple bytes to LCD controller with A-line high.

Display orientation

Some of the supported display controllers supports hardware mirroring of x/y axis. It is recommended to use these functions instead of the display orientation macros of emWin.
If mirroring of the X axis is needed, the command 0xA1 (ADC select reverse) should be used in the initialization macro. This causes the display controller to reverse the assignment of column address to segment output. If the display size in X is smaller than the number of segment outputs of the display controller, the macro LCD_FIRSTSEG0 can be used to add an offset to the column address to make sure, the right RAM address of the LCD controller is accessed.
If mirroring of the Y axis is needed the command 0xC8 (SHL select revers) should be used in the initialization macro and the macro LCD_FIRSTCOM0 should be used to define the offset needed to access the right RAM address of the display controller.

Additional configuration switches

The following table shows optional configuration switches available for this driver:

Macro	Explanation
LCD_CACHE	When set to 0, no display data cache is used, which slows down the speed of the driver. Default is 1 (cache activated).
LCD_FIRSTCOM0	This macro can be used to define the first common address to be used in the data RAM of the display controller. The value can be determined experimentally or taken from the display doc.
LCD_FIRSTSEG0	This macro can be used to define the first segment address to be used in the data RAM of the display controller. The value can be determined experimentally or taken from the display doc.
LCD_SUPPORT_CACHECONTROL	When set to 1, LCD_ControlCache() can be used.

Special requirements for certain LCD controllers

None.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.7.14 GUIDRV_07X1

Supported hardware

Controllers

This driver works with the following LCD controllers:

- Novatek NT7506
- Samsung KS0711, KS0741, S6B0711, S6B0741
- Solomon SSD1854
- Sitronix ST7541, ST7571
- ST Microelectronics STE2010
- Tomato TL0350A

Bits per pixel

Supported color depth is 2 bpp.

Interface

The chip supports either the 8-bit parallel (simple bus) interface as well as the 4-pin or 3-pin serial peripheral interface (SPI). The current version of the driver supports the 8-bit parallel (simple bus) or 4-pin SPI interface.

Driver selection

To use GUIDRV_07X1 for the given display, the following command can be used e.g.:

```
pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_07X1, GUICC_2, 0, 0);
```

Please refer to chapter “Colors” on page 227 to get more information about using the proper palette mode.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG


Available configuration macros (compile time configuration)

Controller selection

To select the desired controller the macro `LCD_CONTROLLER` should be used in the configuration file `LCDConf_07X1.h`. The following table shows the values to be used to select the appropriate controller:

Number	Supported Controller
701	Novatek NT7506 Solomon SSD1854
702	ST Microelectronics STE2010
711	Samsung KS0711, S6B0711
741	Samsung KS0741, S6B0741 Sitronix ST7541, ST7571 Tomato TL0350A

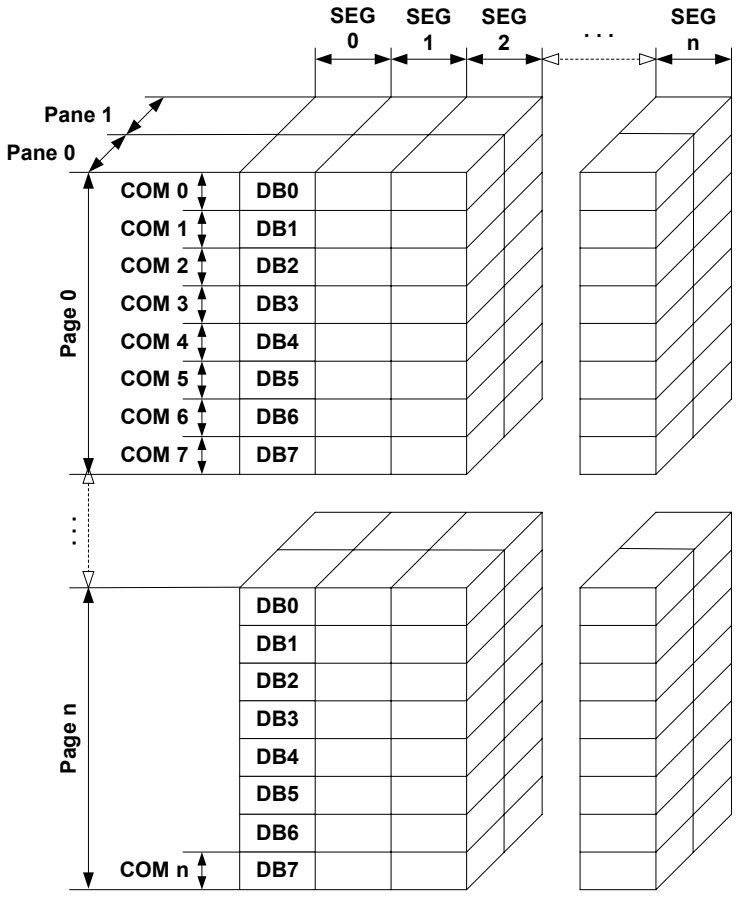Display data RAM organization



The picture above shows the relation between the display memory and the SEG and COM lines of the LCD. The display memory is divided into two panes for each pixel. The lower bit of each pixel is stored in pane 0 and the higher bit is stored in pane 1.

RAM requirements

This LCD driver may be used with or without a display data cache, containing a complete copy of the contents of the LCD data RAM. If a cache is not used, there are no additional RAM requirements.
It is recommended to use this driver with a data cache for faster LCD-access. The amount of memory used by the cache may be calculated as follows:

```
Size of RAM (in bytes) = (LCD_YSIZE + 7) / 8 * LCD_XSIZE * 2
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional driver functions

LCD_ControlCache

For information about this function, please refer to page 891.

Hardware configuration

This driver accesses the hardware with a simple bus interface as described in "Configuration" on page 905. The following table lists the macros which must be defined for hardware access:

Macro	Explanation
LCD_READ_A0	Read a byte from LCD controller with A-line low. (Used only if working without cache)
LCD_READ_A1	Read a byte from LCD controller with A-line high. (Used only if working without cache)
LCD_WRITE_A0	Write a byte to LCD controller with A-line low.
LCD_WRITE_A1	Write a byte to LCD controller with A-line high.
LCD_WRITEM_A1	Write multiple bytes to LCD controller with A-line high.

Display orientation

The supported display controllers supports hardware mirroring of x/y axis. It is recommended to use these functions instead of the display orientation macros of emWin. If mirroring of the X axis is needed, the command 0xA1 (ADC select reverse) should be used in the initialization macro. This causes the display controller to reverse the assignment of column address to segment output. If the display size in X is smaller than the number of segment outputs of the display controller, the macro LCD_FIRSTSEG0 can be used to add an offset to the column address to make sure, the right RAM address of the LCD controller is accessed.
If mirroring of the Y axis is needed the command 0xC8 (SHL select revers) should be used in the initialization macro and the macro LCD_FIRSTCOM0 should be used to define the offset needed to access the right RAM address of the display controller.

Additional configuration switches

The following table shows optional configuration switches available for this driver:

Macro	Explanation
LCD_FIRSTCOM0	This macro can be used to define the first common address to be used in the data RAM of the display controller. The value can be determined experimentally or taken from the display documentation.
LCD_FIRSTSEG0	This macro can be used to define the first segment address to be used in the data RAM of the display controller. The value can be determined experimentally or taken from the display documentation.

Special requirements for certain LCD controllers

None.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.7.15 GUIDRV_1611

Supported hardware

Controllers

This driver works with the following display controllers:

- Epson S1D15E05, S1D15E06, S1D15719
- UltraChip UC1610, UC1611

Bits per pixel

Supported color depth is 2bpp (UC1610, S1D15E05, S1D15E06, S1D15719) and 4bpp (UC1611).

Interfaces

The driver supports the indirect interface (8 bit) of the display controller. Parallel, 4-pin SPI or I2C bus can be used.

Driver selection

To select GUIDRV_1611 as the driver to be used by your application, you can use e.g. the following command:

```
pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_1611, GUICC_2, 0, 0);
```

Please refer to chapter “Colors” on page 227 to get more information about using the proper palette mode.

Available configuration macros (compile time configuration)


Controller selection

To select the desired controller the macro `LCD_CONTROLLER` should be used in the configuration file `LCDConf_1611.h`. The following table shows the values to be used to select the appropriate controller:

Number	Supported Controller
1701	Epson S1D15E05
1702	Epson S1D15719
1800	UltraChip UC1611
1801	UltraChip UC1610
1802	UltraChip UC1611s

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

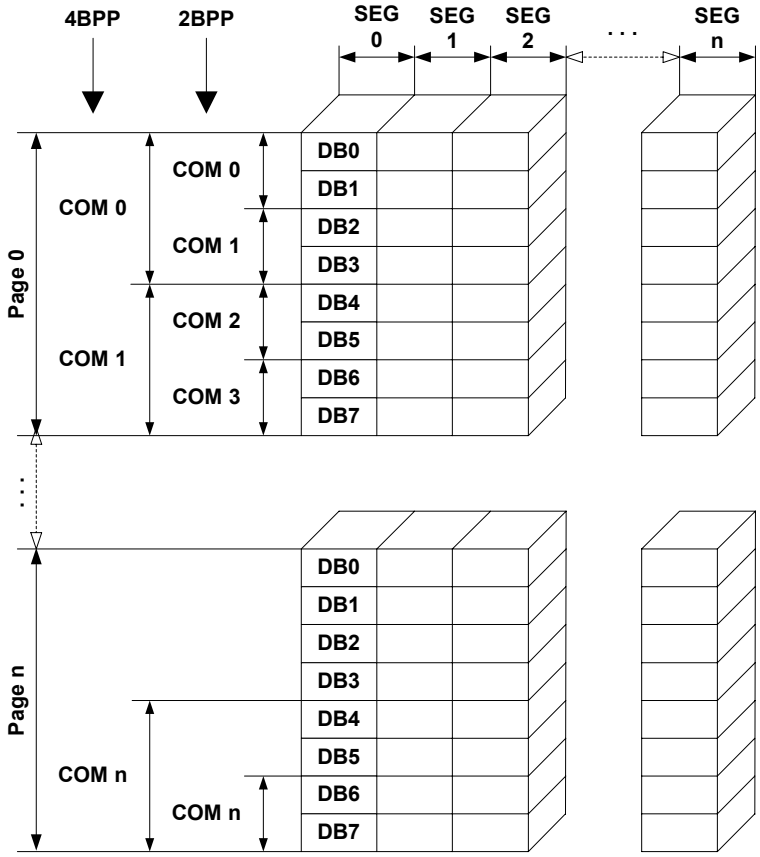Display data RAM organization



The picture above shows the relation between the display memory and the SEG and COM lines of the LCD.

RAM requirements

This display driver can be used with or without a display data cache. The data cache contains a complete copy of the LCD data RAM. If no cache is used, there are no additional RAM requirements.
It is highly recommended to use this driver with a data cache for faster LCD-access. Not using a cache degrades the performance of this driver seriously. The amount of memory used by the cache may be calculated as follows:

```
Size of RAM (in bytes) =
(LCD_YSIZE + (8 / LCD_BITSPERPIXEL - 1)) / 8 * LCD_BITSPERPIXEL * LCD_XSIZE
```

Hardware configuration

This driver accesses the hardware with the indirect interface. The following table lists the macros which need to be defined for hardware access:

Macro	Explanation
LCD_READ_A0	Read a byte from LCD controller with A-line low.
LCD_READ_A1	Read a byte from LCD controller with A-line high.
LCD_WRITE_A0	Write a byte to LCD controller with A-line low.
LCD_WRITE_A1	Write a byte to LCD controller with A-line high.
LCD_WRITEM_A1	Write multiple bytes to LCD controller with A-line high.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional configuration switches

The following table shows optional configuration switches available for this driver:

Macro	Explanation
LCD_CACHE	When set to 0, no display data cache is used, which slows down the speed of the driver. Default is 1 (cache activated).

Special requirements for certain LCD controllers

None.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.7.16 GUIDRV_6331

Supported hardware

Controllers

This driver has been tested with the Samsung S6B33B1X display controller.

Bits per pixel

Supported color depth is 16 bpp.

Interfaces

The driver supports the indirect interface (8 bit) of the display controller. Parallel or 4-pin SPI bus can be used.

Driver selection

To select GUIDRV_6331 as the driver to be used by your application, you should use the following command:

```
pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_6331, GUICC_565, 0, 0);
```

Available configuration macros (compile time configuration)


Controller selection

To select the desired controller the macro `LCD_CONTROLLER` should be used in the configuration file `LCDConf_6331.h`. The following table shows the values to be used to select the appropriate controller:

Number	Supported Controller
6331	Samsung S6B33B1X

Display data RAM organization

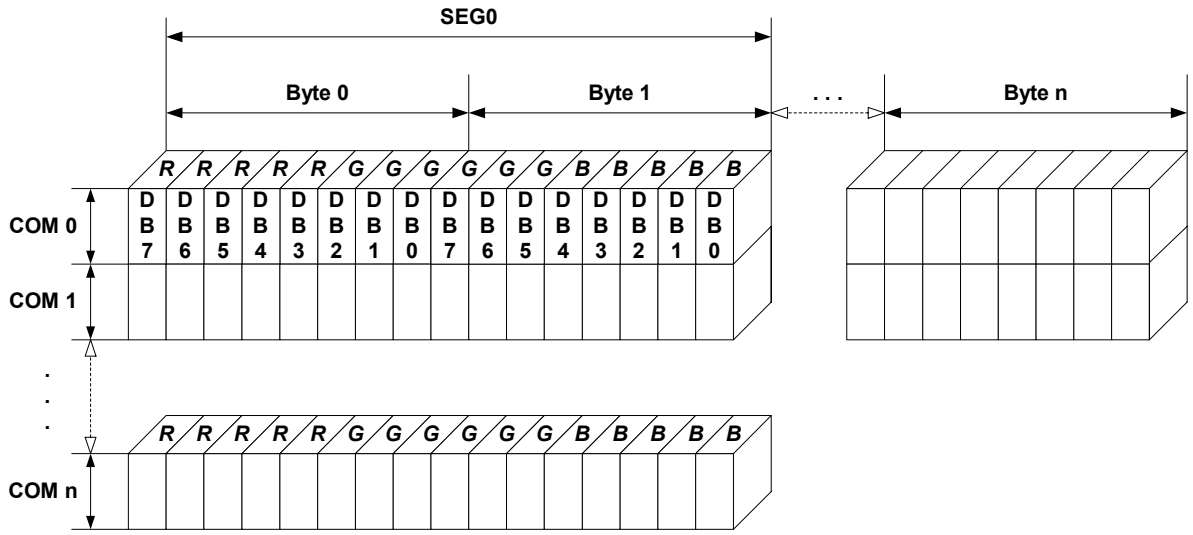16 bits per pixel, fixed palette = 565



The picture above shows the relation between the display memory and the SEG and COM lines of the LCD.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

RAM requirements

This display driver can be used with or without a display data cache, containing a complete copy of the LCD data RAM. The amount of memory used by the cache is: LCD_XSIZE x LCD_YSIZE x 2 bytes.

Hardware configuration

This driver accesses the hardware with the indirect interface. The following table lists the macros which must be defined for hardware access:

Macro	Explanation
LCD_WRITE_A0	Write a byte to display controller with A-line low.
LCD_WRITE_A1	Write a byte to display controller with A-line high.
LCD_WRITEM_A1	Write multiple bytes to display controller with A-line high.
LCD_DRIVER_OUTPUT_MODE_DLN	'Display Line Number' (DLN) selection bits of the 'Driver Output Mode Set' instruction. For details please refer to the display controller documentation.
LCD_DRIVER_ENTRY_MODE_16B	Data bus width selection bit of the 'Entry Mode Set' instruction. For details please refer to the display controller documentation.

The driver initializes the 'Driver Output Mode' and 'Entry Mode' itself. The user does not need to initialize this registers in `LCD_X_InitController()`.

Additional configuration switches

The following table shows optional configuration switches available for this driver:

Macro	Explanation
LCD_CACHE	When set to 0, no display data cache is used, which slows down the speed of the driver. Default is 1 (cache activated).

Special requirements

The driver needs to work with the fixed palette mode 565. The driver does not work with other palettes or fixed palette modes. Further the driver needs to swap the red and the blue part of the color index. You should use the following macro definitions in the configuration file LCDConf.h:

```
#define LCD_FIXEDPALETTE 565
#define LCD_SWAP_RB        1
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.7.17 GUIDRV_7529

Supported hardware

Controllers

This driver works with the Sitronix ST7529 display controller.

Bits per pixel

Supported color depths are 5 bpp (default), 4 bpp and 1bpp.

Interfaces

The driver supports the indirect interface (8 and 16 bit) of the display controller. Parallel, 3-pin SPI or 4-pin SPI access can be used.

Driver selection

To select GUIDRV_7529 as the driver to be used by your application, you can use e.g. the following command:

```
pDevice = GUI_DEVICE_CreateAndLink(GUIDRV_7529, GUICC_5, 0, 0);
```

Please refer to chapter "Colors" on page 227 to get more information about using the proper palette mode.

Available configuration macros (compile time configuration)


Controller selection

To select the desired controller the macro `LCD_CONTROLLER` should be used in the configuration file `LCDConf_7529.h`. The following table shows the values to be used to select the appropriate controller:

Number	Supported Controller
7529	Sitronix ST7529

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

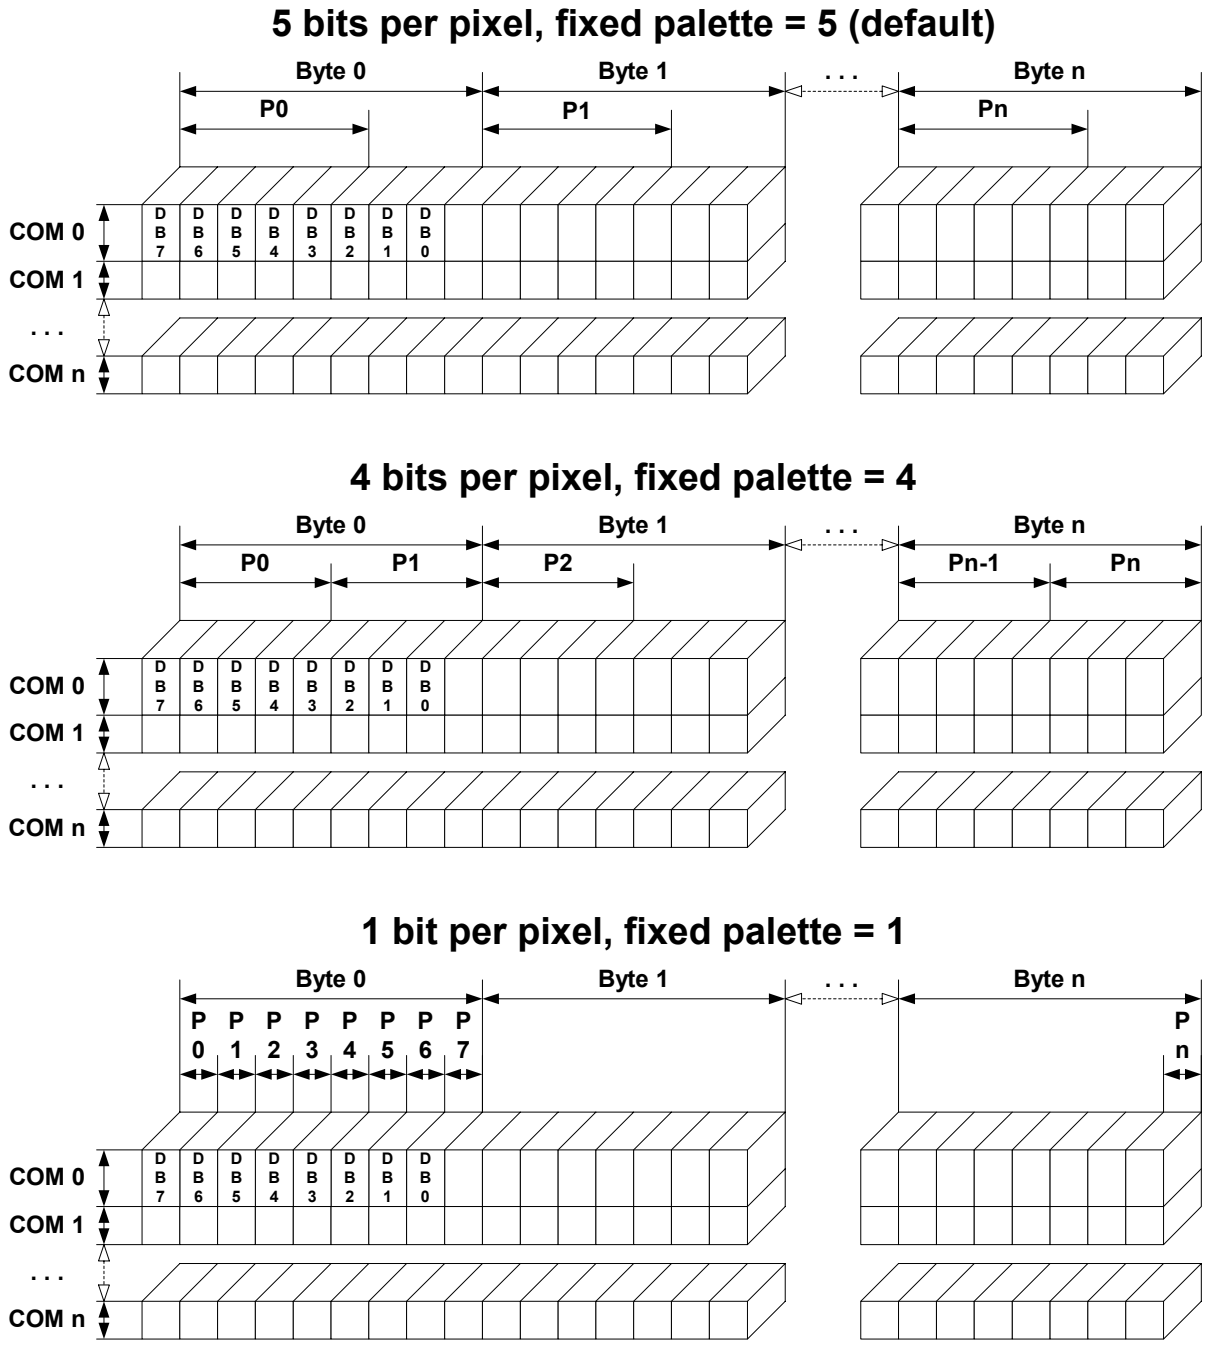Display data RAM organization



The picture above shows the relation between the display memory and the SEG and COM lines of the LCD.

RAM requirements

This display driver can be used with or without a display data cache, containing a complete copy of the LCD data RAM. If no cache is used, there are no additional RAM requirements.
It is optional (but recommended) to use this driver with a data cache for faster LCD-access. The amount of memory used by the cache may be calculated as follows:

```
5bpp mode:
Size of RAM (in bytes) =  (LCD_XSIZE + 2) / 3 * 3 * LCD_YSIZE
4bpp mode:
Size of RAM (in bytes) = ((LCD_XSIZE + 2) / 3 * 3 + 1) / 2 * LCD_YSIZE
1bpp mode:
Size of RAM (in bytes) = ((LCD_XSIZE + 2) / 3 * 3 + 7) / 8 * LCD_YSIZE
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Hardware configuration

This driver accesses the hardware with the indirect interface. The following table lists the macros which must be defined for hardware access:

Macro	Explanation
LCD_WRITE_A0	Write a byte to LCD controller with A-line low.
LCD_WRITE_A1	Write a byte to LCD controller with A-line high.
LCD_WRITEM_A1	Write multiple bytes to display controller with A-line high.
LCD_READM_A1	Read multiple bytes from display controller with A-line high. Required only if no display data cache is configured.
LCD_FIRSTPIXEL0	If the display size in X is smaller than the number of segment outputs of the display controller, this macro can be used for defining the first visible pixel of the display. It should be used if the first segment lines of the display controller are not connected to the display.

Additional configuration switches

The following table shows optional configuration switches available for this driver:

Macro	Explanation
LCD_CACHE	When set to 0, no display data cache is used, which slows down the speed of the driver. Default is 1 (cache activated).

Special requirements for certain LCD controllers

None.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.7.18 GUIDRV_Template - Template for a new driver

This driver is part of the basic package and can be easily adapted to each display controller. It contains the complete functionality needed for a display driver.

Adapting the template driver

To adapt the driver to a currently not supported display controller you only have to adapt the routines `_SetPixelIndex()` and `_GetPixelIndex()`. The upper layers calling this routines already make sure that the given coordinates are in range, so that no check on the parameters needs to be performed.
If a display is not readable the function `_GetPixelIndex()` won't be able to read back the contents of the display data RAM. In this case a display data cache should be implemented in the driver, so that the contents of each pixel is known by the driver. If no data cache is available in this case some functions of emWin will not work right. These are all functions which need to invert pixels. Especially the XOR draw mode and the drawing of text cursors (which also uses the XOR draw mode) will not work right. A simple application which does not use the XOR draw mode will also work without adapting the function `_GetPixelIndex()`.
In a second step it should be optimized to improve drawing speed.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.8 LCD layer and display driver API

emWin requires a driver for the hardware. This chapter explains what an LCD driver for emWin does and what routines it supplies to emWin (the application programming interface, or API).
Under most circumstances, you probably do not need to read this chapter, as most calls to the LCD layer of emWin will be done through the GUI layer. In fact, we recommend that you only call LCD functions if there is no GUI equivalent (for example, if you wish to modify the lookup table of the LCD controller directly). The reason for this is that LCD driver functions are not thread-safe, unlike their GUI equivalents. They should therefore not be called directly in multitask environments.

30.8.1 Display driver API

The table below lists the available emWin LCD-related routines in alphabetical order. Detailed descriptions of the routines can be found in the sections that follow.

User defined routines

Routine	Description
LCD_X_InitController()	Called by the display driver to get the display controller initialized.

LCD layer routines

Routine	Description
"Get" group	
LCD_GetBitsPerPixel()	Return the number of bits per pixel.
LCD_GetBitsPerPixelEx()	Returns the number of bits per pixel of given layer/display.
LCD_GetNumColors()	Return the number of available colors.
LCD_GetNumColorsEx()	Returns the number of available colors of given layer/display.
LCD_GetVXSize()	Return virtual X-size of LCD in pixels.
LCD_GetVXSizeEx()	Returns virtual X-size of given layer/display in pixels.
LCD_GetVYSize()	Return virtual Y-size of LCD in pixels.
LCD_GetVYSizeEx()	Returns virtual Y-size of given layer/display in pixels.
LCD_GetXMag()	Returns the magnification factor in x.
LCD_GetXMagEx()	Returns the magnification factor of given layer/display in x.
LCD_GetXSize()	Return physical X-size of LCD in pixels.
LCD_GetXSizeEx()	Returns physical X-size of given layer/display in pixels.
LCD_GetYMag()	Returns the magnification factor in y.
LCD_GetYMagEx()	Returns the magnification factor of given layer/display in y.
LCD_GetYSize()	Return physical Y-size of LCD in pixels.
LCD_GetYSizeEx()	Returns physical Y-size of given layer/display in pixels.
Configuration group	
LCD_SetDevFunc()	Sets optional or custom defined routines for the display driver.
LCD_SetSizeEx()	Sets the physical size in pixels of the given layer.
LCD_SetVRAMAddrEx()	Sets the address of the video RAM of the given layer.
LCD_SetVSizeEx()	Sets the size of the virtual display area in pixels of the given layer.
Cache group	
LCD_ControlCache()	Locks, unlocks and flushes the cache of the display controller if it is supported.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.8.2 User defined routines

LCD_X_InitController()

Description

The function is called by the display controller. The job of the routine is to get the display controller registers initialized right.

Prototype

```
void LCD_X_InitController(unsigned LayerIndex);
```

Parameter	Description
LayerIndex	Index of layer to be initialized.

Additional information

The Sample folder contains several examples for a large number of display controllers. This function replaces the macro LCD_INIT_CONTROLLER which was used in older versions.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.8.3 LCD layer routines

30.8.3.1 "Get" group

LCD_GetBitsPerPixel()

Description

Returns the number of bits per pixel.

Prototype

```
int LCD_GetBitsPerPixel(void);
```

Return value

Number of bits per pixel.

LCD_GetBitsPerPixelEx()

Description

Returns the number of bits per pixel.

Prototype

```
int LCD_GetBitsPerPixelEx(int Index);
```

Parameter	Description
Index	Layer index.

Return value

Number of bits per pixel.

LCD_GetNumColors()

Description

Returns the number of currently available colors on the LCD.

Prototype

```
int LCD_GetNumColors(void);
```

Return value

Number of available colors

LCD_GetNumColorsEx()

Description

Returns the number of currently available colors on the LCD.

Prototype

```
U32 LCD_GetNumColorsEx(int Index);
```

Parameter	Description
Index	Layer index.

Return value

Number of available colors.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LCD_GetVXSize(), LCD_GetVYSize()

Description

Returns the virtual X- or Y-size, respectively, of the LCD in pixels. In most cases, the virtual size is equal to the physical size.

Prototype

```
int LCD_GetVXSize(void)
int LCD_GetVYSize(void)
```

Return value

Virtual X/Y-size of the display.

LCD_GetVXSizeEx(), LCD_GetVYSizeEx()

Description

Returns the virtual X- or Y-size, respectively, of the LCD in pixels. In most cases, the virtual size is equal to the physical size.

Prototype

```
int LCD_GetVXSizeEx(int Index);
int LCD_GetVYSizeEx(int Index);
```

Parameter	Description
Index	Layer index.

Return value

Virtual X/Y-size of the display.

LCD_GetXMag(), LCD_GetYMag()

Description

Returns the magnification factor in X- or Y-axis, respectively.

Prototype

```
int LCD_GetXMag(int Index);
int LCD_GetYMag(int Index);
```

Return value

Magnification factor in X- or Y-axis.

LCD_GetXMagEx(), LCD_GetYMagEx()

Description

Returns the magnification factor in X- or Y-axis, respectively.

Prototype

```
int LCD_GetXMagEx(int Index);
```

Parameter	Description
Index	Layer index.

Return value

Magnification factor in X- or Y-axis.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

LCD_GetXSize(), LCD_GetYSize()

Description

Returns the physical X- or Y-size, respectively, of the LCD in pixels.

Prototypes

```
int LCD_GetXSize(void)
int LCD_GetYSize(void)
```

Return value

Physical X/Y-size of the display.

LCD_GetXSizeEx(), LCD_GetYSizeEx()

Description

Returns the physical X- or Y-size, respectively, of the LCD in pixels.

Prototype

```
int LCD_GetXSizeEx(int Index);
int LCD_GetYSizeEx(int Index);
```

Parameter	Description
Index	Layer index.

Return value

Physical X/Y-size of the display.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.8.3.2 Configuration group

LCD_SetDevFunc()

Description

The function sets additional and / or user defined functions of the display driver.

Prototype

```
int LCD_SetDevFunc(int LayerIndex, int IdFunc, void (* pDriverFunc)(void));
```

Parameter	Description
LayerIndex	Layer index.
IdFunc	(see table below)
pDriverFunc	Pointer to function which should be used.

Permitted values for element IdFunc	
LCD_DEVFUNC_COPYBUFFER	Can be used to set a custom defined routine for copying buffers. Makes only sense in combination with multiple buffers.
LCD_DEVFUNC_COPYRECT	Can be used to set a custom defined routine for copying rectangular areas.
LCD_DEVFUNC_DRAWBMP_1BPP	Can be used to se a custom routine for drawing 1bpp bitmaps. Makes sense if a BitBLT engine should be used for drawing text and 1bpp bitmaps.
LCD_DEVFUNC_FILLRECT	Can be used to set a custom defined routine for filling rectangles. Makes sense if for example a BitBLT engine should be used for filling operations.

LCD_DEVFUNC_COPYBUFFER

Can be used to set up a function which copies a frame buffer to the desired location. This can make sense if for example a BitBLT engine is available to do the job.
The function pointed by pDriverFunc should be of the following type:

```
void CopyRect(int LayerIndex, int x0, int y0, int x1, int y1,
              int xSize,      int ySize)
```

Parameter	Description
LayerIndex	Layer index.
IndexSrc	Index of the source frame buffer to be copied.
IndexDst	Index of the destination frame buffer to be overwritten.

LCD_DEVFUNC_COPYRECT

Can be used to set up a function which copies a rectangular area of the screen to the desired location. This can make sense if for example a BitBLT engine is available to do the job.
The function pointed by pDriverFunc should be of the following type:

```
void CopyRect(int LayerIndex, int x0, int y0, int x1, int y1,
              int xSize,      int ySize);
```

Parameter	Description
LayerIndex	Layer index.
x0	Leftmost pixel of the source rectangle.
y0	Topmost pixel of the source rectangle.
x1	Leftmost pixel of the destination rectangle.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Parameter	Description
y1	Topmost pixel of the destination rectangle.
xSize	X-size of the rectangle.
ySize	Y-size of the rectangle

LCD_DEVFUNC_FILLRECT

Can be used to set a custom function for filling operations. The function pointed by pDriverFunc should be of the following type:

```
void FillRect(int LayerIndex,  int x0, int y0, int x1, int y1,
              U32 PixelIndex);
```

Parameter	Description
LayerIndex	Layer index.
x0	Leftmost coordinate to be filled in screen coordinates.
y0	Topmost coordinate to be filled in screen coordinates.
x1	Rightmost coordinate to be filled in screen coordinates.
y1	Bottommost coordinate to be filled in screen coordinates.
PixelIndex	Color index to be used to fill the specified area.

LCD_DEVFUNC_DRAWBMP_1BPP

Can be used to set up a function which draws 1bpp bitmaps which includes also text. This can make sense if for example a BitBLT engine is available to do the job.
The function pointed by pDriverFunc should be of the following type:

```
void DrawBMP1(int LayerIndex,
              int x, int y, U8 const * p, int Diff, int xSize, int ySize,
               int BytesPerLine, const LCD_PIXELINDEX * pTrans);
```

Parameter	Description
LayerIndex	Layer index.
x	Leftmost coordinate in screen coordinates of the bitmap to be drawn.
y	Topmost coordinate in screen coordinates of the bitmap to be drawn.
p	Pointer to the pixel data of the bitmap.
Diff	Offset to the first pixel pointed by parameter p. Supported values are 0-7.
xSize	xSize in pixels of the bitmap to be drawn.
ySize	ySize in pixels of the bitmap to be drawn.
BytesPerLine	Number of bytes of one line of bitmap data.
pTrans	Pointer to an array of color indices to be used to draw the bitmap data. The first color index defines the background color, the secont color index defines the foreground color.

Return value

0 on success, 1 on error.

Additional information

Please note that it depends on the display driver which values for parameter IdFunc are supported or not.

LCD_SetSizeEx()

Description

Sets the physical size of the visible area of the given display/layer.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
int LCD_SetSizeEx(int LayerIndex, int xSize, int ySize);
```

Parameter	Description
LayerIndex	Layer index.
xSize	X-Size in pixels of the visible area of the given layer.
ySize	Y-Size in pixels of the visible area of the given layer.

Return value

0 on success, 1 on error.

Additional information

The function requires a display driver which is able to manage dynamically changes of the display size. If the display driver does not support this feature the function fails.

LCD_SetVRAMAddrEx()

Description

Sets the address of the video RAM.

Prototype

```
int LCD_SetVRAMAddrEx(int LayerIndex, void * pVRAM);
```

Parameter	Description
LayerIndex	Layer index.
pVRAM	Pointer to start address of video RAM.

Return value

0 on success, 1 on error.

Additional information

The function requires a display driver which is able to manage dynamically changes of the video RAM address. If the display driver does not support this feature the function fails.

LCD_SetVSizeEx()

Description

Sets the size of the virtual display area.

Prototype

```
int LCD_SetVSizeEx(int LayerIndex, int xSize, int ySize);
```

Parameter	Description
LayerIndex	Layer index.
xSize	X-Size in pixels of the virtual area of the given layer.
ySize	Y-Size in pixels of the virtual area of the given layer.

Return value

0 on success, 1 on error.

Additional information

The function requires a display driver which is able to manage dynamically changes of the virtual display size. If the display driver does not support this feature the function fails.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

30.8.3.3 Cache group

LCD_ControlCache()

Description

Locks, unlocks and flushes the cache of the display controller if it is supported.

Prototype

```
int LCD_ControlCache(int Cmd);
```

Parameter	Description
Cmd	Contains the action which has to be done with the cache: LCD_CC_LOCK, LCD_CC_UNLOCK or LCD_CC_FLUSH

Return value

0 on success, 1 on error.

Additional information

The function requires a display driver which is able to manage dynamically changes of the virtual display size. If the display driver does not support this feature the function fails. This function is automatically used for drawing operations of windows and strings.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG


 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 31

VNC Server

The emWin VNC server can be used for administration of the embedded target and a variety of other purposes. It supports compressed (hextile) encoding.
VNC stands for ’Virtual Network Computing’. It is, a client server system based on a simple display protocol which allows the user to view and control a computing 'desktop' environment from anywhere on the Internet and from a wide variety of machine architectures, communicating via TCP/IP.
In other words: The display contents of the embedded device are visible on the screen of the machine running the client (for example, your PC); your mouse and keyboard can be used to control the target.

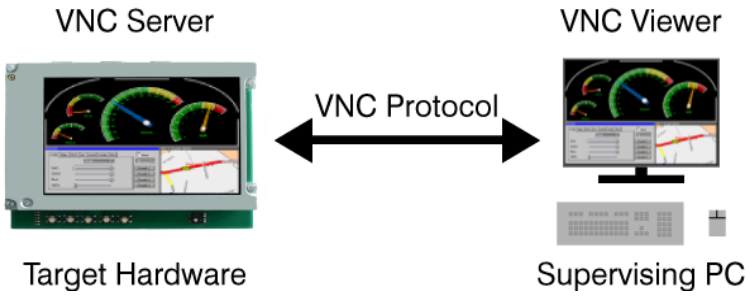This feature is available in the emWin simulation and trial versions.
emWin VNC support is available as a separate package, it is not included in the basic package.



© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

31.1 Introduction

VNC consists of two types of components. A server, which generates a display, and a viewer, which actually draws the display on your screen. The remote machine (target or simulation) can not only be viewed, but also controlled via mouse or keyboard.
The server and the viewer may be on different machines and on different architectures. The protocol which connects the server and viewer is simple, open, and platform independent. No state is stored at the viewer. Breaking the viewer's connection to the server and then reconnecting will not result in any loss of data. Because the connection can be remade from somewhere else, you have easy mobility. Using the VNC server, you may control your target from anywhere and you can make screenshots (for example, for a manual) from a "live" system.

31.1.1 Requirements

TCP/IP stack

Since the communication between the server and the viewer is based on a TCP/IP connection, VNC requires a TCP/IP stack. In the Win32 simulation environment, TCP/IP (Winsock) is normally present. In the target, a TCP/IP stack needs to be present. The TCP/IP stack is NOT part of emWin. The flexible interface ensures that any TCP/IP stack can be used.

Multi tasking

The VNC server needs to run as a separate thread. Therefore a multi tasking system is required to use the emWin VNC server.

31.1.2 Notes on this implementation

Supported client to server messages

The emWin VNC server supports pointer event messages and keyboard event messages.

Encoding

The server supports raw encoding and hextile encoding.

Performance

Most viewers support hextile encoding, which supports descent compression. A typical quarter VGA screen requires typically 20 - 50 kb of data. An implementation running on an ARM7 platform (50 MHZ, with Cache) requires app. 200 - 300 ms for an update of the entire screen.
The server handles incremental updates; in most cases the updated display area is a lot smaller than the entire display and less data needs to be transmitted. A typical ARM7 system therefore allows real time updates.

Multiple servers

The implementation is fully thread safe and reentrant; multiple VNC-servers can be started on the same CPU for different layers or displays. If your target (of course the same holds true for the simulation) has multiple displays or multiple layers, this can be a useful option. Only one VNC server may be started per layer at any given time; once the connection to a Viewer ends, an other one can connect.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

31.2 The VNC viewer

Availability

The subfolder `Tool` contains a VNC viewer from the AT&T Laboratories Cambridge. It is free software and is distributed under the terms of the GNU Public License. The current version of the VNC software can be downloaded from http://www.uk.research.att.com/vnc, where more information about the VNC protocol, as well as source code for servers and clients for different platforms are available.

Version

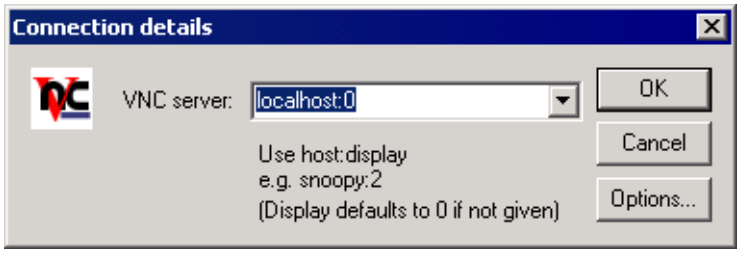
The VNC implementation of emWin has been tested with version 3.3.3R2 and should work with this version or later versions.

Platforms

The viewer is available for different platforms. Refer to the website of AT&T Laboratories Cambridge for detailed information about the availability.

31.2.1 Starting the VNC viewer

Start the viewer by double-clicking the file Tool\VNCViewer.exe. It will prompt for the VNC server to be connected:



Connecting to a VNC server using the simulation on the same PC

When running VNCViewer and simulation on the same PC, type 'localhost:0' to connect. ':0' means server index 0. If you omit the server index the viewer assumes server 0. So in the most cases you can type 'localhost' to connect to the simulation.



Connecting to a VNC server running on a different PC or the target

To connect to VNC server running on a different PC or on the target system, enter the name or IP address of the machine (optionally followed by a ':' and the server number). To connect to a VNC server on the computer 'Joerg' , with IP address 192.168.1.2, you may enter '192.168.1.2:0', or 'Joerg:0' or 'Joerg'.
To connect to a target with IP address 192.168.1.254, enter '192.168.1.254'.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Screenshot

The following screenshots shows the viewer:

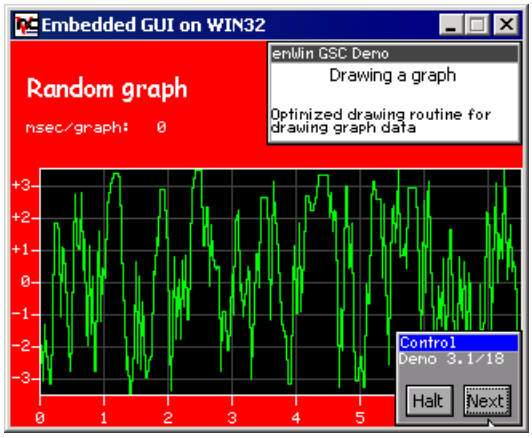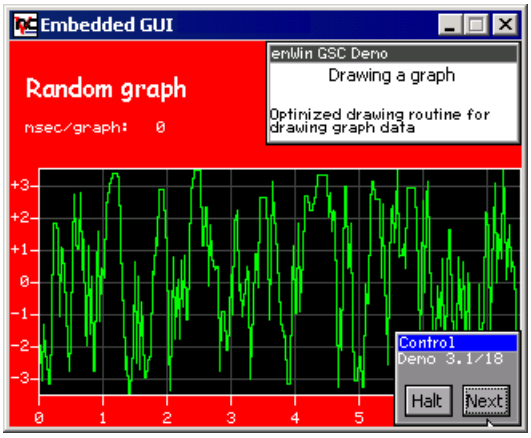Connected to the simulation	Connected to the target
	

31.3 emWin VNC server

31.3.1 Starting the emWin VNC server

The one and only thing to start the VNC server is to call the function `GUI_VNC_X_StartServer()`:

```
void MainTask(void) {
  GUI_Init();
  GUI_VNC_X_StartServer(0,    /* Layer index */
                        0);   /* Server index */
  ...
}
```

The above function call creates a thread which listens on port 5900 for an incoming connection. After a connection has been detected `GUI_VNC_Process()` will be called.

Ports

The VNC server listens on port 590x, where x is the server index. So for most PC servers, the port will be 5900, because they use display 0 by default.

Example

A ready to use example (in executable form) is available on our website. The trial version also contains the VNC server; it takes no more than one line of code (using `GUI_VNC_X_StartServer()`) to activate it.

31.3.2 How the server starts ...

When using the simulation, only the function `GUI_VNC_X_StartServer()` needs to be called. It creates a thread which listens on port 590x until an incoming connection is detected and then calls `GUI_VNC_Process()`, which is the implementation of the actual server.

31.3.3 Integration of the VNC server on the target

Before the function `GUI_VNC_X_StartServer()` can be used, it has to be adapted to the used TCP/IP stack and the multi tasking system. An implementation example is available under `Sample\GUI_X\GUI_VNC_X_VNCServer.c`, which should require only

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

smaller modifications. The example file does not use dynamic memory allocation to allocate memory for the GUI_VNC_CONTEXT structure described later. So this implementation only allows to start one server.

31.4 Requirements

ROM

About 4.9 kb on ARM7 with hextile encoding, about 3.5 kb without hextile encoding.

RAM

The VNC support does not use static data. For each instance one GUI_VNC_CONTEXT structure (app. 60 bytes) is used.

Others

Each instance needs one TCP/IP socket and one thread.

31.5 Configuration options

Type	Macro	Default	Description
N	GUI_VNC_BUFFER_SIZE	1000	Frame buffer size. The buffer is located on the stack. Typically bigger sizes result in only minor accelerations. A reasonable buffer size is app. 200 bytes.
B	GUI_VNC_LOCK_FRAME	0	If set to 1 the GUI will be locked during a frame is send to the viewer. This option could make sense if screenshots for a documentation should be made.
S	GUI_VNC_PROGNAME	(see explanation)	This macro defines the name of the target shown in the title bar of the viewer. If using the viewer in the simulation the default is: "Embedded GUI on WIN32" On the target the default is: "Embedded GUI"
B	GUI_VNC_SUPPORT_HEXTILE	1	Enables or disables hextile encoding. Hextile encoding is a faster but needs bigger code (app. 1.4 k more).

31.6 VNC API

The following table lists the available VNC-related functions in alphabetical order. Detailed description of the routines can be found in the sections that follow.

Routine	Description
GUI_VNC_AttachToLayer()	Attaches a VNC server to a layer. Without a multi display configuration the given index must be 0.
GUI_VNC_EnableKeyboardInput()	Enables or disables keyboard input via VNC.
GUI_VNC_GetNumConnections()	Return the number of connections to the server.
GUI_VNC_Process()	The actual VNC server; initializes the communication with the viewer.
GUI_VNC_RingBell()	Ring a bell on the client if it has one.
GUI_VNC_SetPassword()	Sets the password required to connect with the server.
GUI_VNC_SetProgName()	Sets the text to be shown in the viewers title bar.
GUI_VNC_SetSize()	Sets the area to be transmitted to the client.
GUI_VNC_X_StartServer()	Routine to be called to start a VNC viewer.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_VNC_AttachToLayer()

Description

This function attaches the given layer to the VNC server. Normally, with single layer configurations, this parameter should be 0.

Prototype

```
void GUI_VNC_AttachToLayer(GUI_VNC_CONTEXT * pContext, int LayerIndex);
```

Parameter	Description
pContext	Pointer to a GUI_VNC_CONTEXT structure.
LayerIndex	Zero based index of layer to be handled by the server.

Return value

0 if the function succeed, != 0 if the function fails.

GUI_VNC_EnableKeyboardInput()

Description

Enables or disables keyboard input via VNC.

Prototype

```
void GUI_VNC_EnableKeyboardInput(int OnOff);
```

Parameter	Description
OnOff	1 for enabling keyboard input, 0 for disabling.

GUI_VNC_GetNumConnections()

Description

Returns the number of currently existing connections to the server.

Prototype

```
int GUI_VNC_GetNumConnections(void);
```

Return value

Number of connections.

GUI_VNC_Process()

Description

The function sets the send and receive function used to send and receive data and starts the communication with the viewer.

Prototype

```
void GUI_VNC_Process(GUI_VNC_CONTEXT * pContext,
                     GUI_tSend pfSend,
                     GUI_tReceive pfReceive,
                     void * pConnectInfo);
```

Parameter	Description
pContext	Pointer to a GUI_VNC_CONTEXT structure.
pfSend	Pointer to the function to be used by the server to send data to the viewer.
pfReceive	Pointer to the function to be used by the server to read from the viewer.
pConnectInfo	Pointer to be passed to the send and receive function.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

The GUI_VNC_CONTEXT structure is used by the server to store connection state information's.
The send and receive functions should return the number of bytes successfully send/received to/from the viewer.
The pointer pConnectInfo is passed to the send and receive routines. It can be used to pass a pointer to a structure containing connection information or to pass a socket number.
The following types are used as function pointers to the routines used to send and receive bytes from/to the viewer:

```
typedef int (*GUI_tSend)   (const U8 * pData, int len, void* pConnectInfo);
typedef int (*GUI_tReceive)(      U8 * pData, int len, void* pConnectInfo);
```

Example

```
static GUI_VNC_CONTEXT _Context; /* Data area for server */

static int _Send(const U8* buf, int len, void * pConnectionInfo) {
  SOCKET Socket = (SOCKET)pConnectionInfo;
 ...
}
static int _Recv(U8* buf, int len, void * pConnectionInfo) {
  SOCKET Socket = (SOCKET)pConnectionInfo;
  ...
}
static void _ServerTask(void) {
  int Socket;
  ...
  GUI_VNC_Process(&_Context, _Send, _Recv, (void*)Socket);
  ...
}
```

GUI_VNC_RingBell()

Description

Ring a bell on the client if it has one.

Prototype

```
void GUI_VNC_RingBell(void);
```

GUI_VNC_SetPassword()

Description

Sets a password required to connect to the server.

Prototype

```
void GUI_VNC_SetPassword(U8 * sPassword);
```

Parameter	Description
sPassword	Password required to connect to the server.

Additional information

Per default no password is required.

GUI_VNC_SetProgName()

Description

Sets the title to be displayed in the title bar of the client window.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Prototype

```
void GUI_VNC_SetProgName(const char * sProgName);
```

Parameter	Description
sProgName	Title to be displayed in the title bar of the client window.

GUI_VNC_SetSize()

Description

Sets the display size to be transmitted to the client.

Prototype

```
void GUI_VNC_SetSize(unsigned xSize, unsigned ySize);
```

Parameter	Description
xSize	X-size to be used.
ySize	Y-size to be used.

Additional information

Per default the server uses the layer size. The size passed to this function can be smaller or larger than the real display.

GUI_VNC_X_StartServer()

Description

Starts a VNC viewer with the given server index to display the given layer in the viewer.
The function has to be written by the customer because the implementation depends on the used TCP/IP stack and on the used operating system.
The emWin shipment contains an example implementation under `Sample\GUI_X\GUI_VNC_X_StartServer.c`. It could be used as a starting point for adapting it to other systems.

Prototype

```
int GUI_VNC_X_StartServer(int LayerIndex, int ServerIndex);
```

Parameter	Description
LayerIndex	Layer to be shown by the viewer.
ServerIndex	Server index.

Additional information

There is no difference to start a VNC server in the simulation or on the target. In both cases you should call this function. The simulation contains an implementation of this function, the hardware implementation has to be done by the customer.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 32

Timing- and execution-related functions

Some widgets, as well as our demonstration code, require time-related functions. The other parts of the emWin graphic library do not require a time base.
The demonstration code makes heavy use of the routine `GUI_Delay()`, which delays for a given period of time. A unit of time is referred to as a tick.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

32.1 Timing and execution API

The table below lists the available timing- and execution-related routines in alphabetical order. Detailed descriptions of the routines follow.

Routine	Description
GUI_Delay()	Delay for a specified period of time.
GUI_Exec()	Execute callback functions (all jobs).
GUI_Exec1()	Execute one callback function (one job only).
GUI_GetTime()	Return the current system time.

GUI_Delay()

Description

Delays for a specified period of time.

Prototype

```
void GUI_Delay(int Period);
```

Parameter	Description
Period	Period in ticks until function should return.

Additional information

The time unit (tick) is usually milliseconds (depending on GUI_X_ functions).
GUI_Delay() only executes idle functions for the given period. If the window manager is used, the delay time is used for the updating of invalid windows (through execution of WM_Exec()).
This function will call GUI_X_Delay().

GUI_Exec()

Description

Executes callback functions (typically redrawing of windows).

Prototype

```
int GUI_Exec(void);
```

Return value

0 if there were no jobs performed.
1 if a job was performed.

Additional information

This function will automatically call GUI_Exec1() repeatedly until it has completed all jobs -- essentially until a 0 value is returned.
Normally this function does not need to be called by the user application. It is called automatically by GUI_Delay().

GUI_Exec1()

Description

Executes a callback function (one job only -- typically redrawing a window).

Prototype

```
int GUI_Exec1(void);
```

Return value

0 if there were no jobs performed.
1 if a job was performed.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

This routine may be called repeatedly until 0 is returned, which means all jobs have been completed.
This function is called automatically by `GUI_Exec()`.

GUI_GetTime()

Description

Returns the current system time.

Prototype

```
int GUI_GetTime(void);
```

Return value

The current system time in ticks.

Additional information

This function will call `GUI_X_GetTime()`.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 33

Configuration

Before emWin can be used on a target system, the software needs to be configured. Configuring means modifying the configuration files which usually reside in the (sub)directory `Config`. We try to keep the configuration as simple as possible, but there are some configuration routines which need to be modified in order for the system to work properly.
The following items need to be configured:

- Memory area to be used by emWin
- Display driver to be used for drawing operations
- Color conversion routines to be used
- Display controller initialization

The following chapter explains the configuration of emWin in detail.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

33.1 What needs to be configured?


The configuration is basically divided into two parts: GUI-configuration and LCD-configuration. GUI-configuration means configuration of available features, default colors and -fonts and the configuration of available memory. The LCD-configuration is more hardware dependent and has to define the physical size of the display, the display driver and the color conversion routines to be used. For details about color conversion routines, refer to the chapter "Colors" on page 227.
A further part is configuring the simulation. But this is not required for the target hardware and not part of this chapter. For details about configuring the simulation, refer to the chapter "Simulation" on page 39.

33.2 Run-time- and compile-time configuration

There are C and include files to be configured. The configuration in the header files is fixed at compile time and can not be changed whereas the configuration done in the C files can be changed at run-time. This makes it possible to create a library which is largely configuration independent and can be used with any display and any driver. This requires that the configuration routines described in this chapter are not part of the library but of the application.

33.3 Initialization process of emWin

The illustration shows the process of initialization. To initialize emWin, the application only has to call GUI_Init(). The configuration routines explained below are called during the internal initialization process.

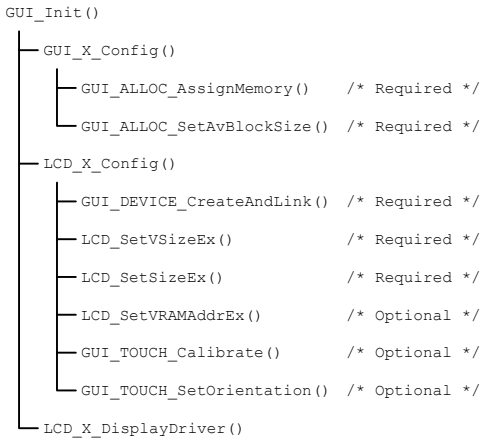

GUI_X_Config()

It is called at the very first beginning of the initialization process to make sure that memory is assigned to emWin. Within this routine `GUI_ALLOC_AssignMemory()` and `GUI_ALLOC_SetAvBlockSize()` must be called to assign a memory block to emWin and set the average memory block size. The functions are explained later in this chapter.

LCD_X_Config()

This function is called immediately after `GUI_X_Config()`. The main purpose of this routine is creating a display driver device and selecting the color conversion routines. Further it is responsible for setting the display size. If a touch screen is used it should also be configured here.

LCD_X_DisplayDriver()

At a later point of the initialization process the function `LCD_X_DisplayDriver()` is called. It is called directly by the display driver. During the initialization process the task of this routine is putting the display controller into operation. A detailed explanation of the routine follows later in this chapter.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

33.4 Run-time configuration

The following table shows the available run-time configuration files located in the subfolder `Config`:

Configuration file	Purpose
`GUIConf.c`	Configuration of available memory.
`LCDConf.c`	Configuration of the display size, the display driver and the color conversion routines.
`SIMConf.c`	Configuration of the simulation (not part of this chapter).
`GUI_X.c`	Configuration of timing routines.

33.4.1 Customizing GUIConf.c

The purpose of this module is to provide emWin with the function `GUI_X_Config()` which is responsible for assigning a memory block to the memory management system. This requires knowledge about the memory requirement of the used components. The separate chapter 'Performance and Resource Usage' contains a detailed description of the memory requirements (RAM and ROM) of the individual emWin modules.
Per default `GUIConf.c` is located in the (sub)directory `Config` and contains the routine `GUI_X_Config()` which is responsible to assign a memory block to emWin. It is not cogently required to leave it in the file `GUIConf.c`. The routine `GUI_X_Config()` can be located anywhere in the application.

GUI_X_Config()

Description

Calling this function is the very first thing done by the initialization process. It is responsible to assign a memory block to emWin. This block is managed by the internal memory management system. The memory block needs to be accessible 8, 16 and 32 bit wise.

Prototype

```
void GUI_X_Config(void);
```

Additional information

Note that not the complete memory block can be used by the application, because a small overhead of the memory is used by the management system itself. Each memory block requires approximately 12 bytes for management purpose.

33.4.1.1 API functions to be used in GUI_X_Config()

The following table shows the API functions which must be called within `GUI_X_Config()`:

Routine	Description
`GUI_ALLOC_AssignMemory()`	Assigns a memory block for the memory management system.
`GUI_ALLOC_SetAvBlockSize()`	Sets the average size of the memory blocks. The bigger the block size, the less number of memory blocks are available.
`GUITASK_SetMaxTask()`	Sets the maximum number of tasks from which emWin can be accessed when multitasking is enabled.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_ALLOC_AssignMemory()

Description

The function assigns the one and only memory block to emWin which is used by the internal memory management system. This function should be called typically from `GUI_X_Config()`.

Prototype

```
void GUI_ALLOC_AssignMemory(void * p, U32 NumBytes);
```

Parameter	Description
p	Pointer to the memory block which should be used by emWin.
NumBytes	Size of the memory block in bytes.

Additional information

Note that not the complete memory block can be used by the application, because a small overhead of the memory is used by the management system itself.

GUI_ALLOC_SetAvBlockSize()

Description

Sets the average block size of the memory blocks allocated by the memory management system. The block size affects the number of maximum available blocks. If for example an application uses some listviews with a large number of entries it makes sense to set the average block size to a small value. On the other hand if an application uses the memory management primarily for a few memory devices or image decompression the average size should be set to a bigger value. The recommended range is between 32 and 1024. The value depends on the application.
This function should be called typically from `GUI_X_Config()`.

Prototype

```
void GUI_ALLOC_SetAvBlockSize(U32 BlockSize);
```

Parameter	Description
BlockSize	Average block

Additional information

The average block size is used to calculate the maximum number of available memory blocks:

Max. # of blocks = Size of memory in bytes / (`BlockSize` + sizeof(`BLOCK_STRUCT`))

`BlockStruct` means an internal structure whose size depends on `GUI_DEBUG_LEVEL`. If it is >0 the size will be 12 bytes, otherwise 8 bytes. Note that the structure size also depends on the used compiler.

GUITASK_SetMaxTask()

Description

Sets the maximum number of tasks from which emWin can be accessed when multitasking is enabled.

Prototype

```
void GUITASK_SetMaxTask(int MaxTask);
```

Parameter	Description
MaxTask	Number of tasks from which emWin is used at most.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

This function is intended to be called from GUI_X_Config(). It is necessary to use this function when working with a pre-compiled library. Otherwise GUI_MAXTASK can be defined. For further information please refer to "GUI_MAXTASK" on page 283.

33.4.2 Customizing LCDConf.c

The purpose of this module is to provide emWin with the required display configuration routine and the callback function for the display driver. These are the following functions:

Routine	Description
LCD_X_Config()	Configuration routine for creating the display driver device, setting the color conversion routines and the display size.
LCD_X_DisplayDriver()	Callback routine called by the display driver for putting the display controller into operation.

LCD_X_Config()

Description

As described in the table above this routine is responsible to create a display driver device, set the right color conversion routines and for configuring the physical display size.

Prototype

```
void LCD_X_Config(void);
```

Additional information

Depending on the used display driver it could also be required to set the video RAM address, initialize a custom palette or some else. For information about any additional requirements, refer to "Detailed display driver descriptions" on page 829. The functions available for configuration purpose in this routine are listed and explained later in this chapter.

Example

The following shows a typical example implementation:

```
//
// Set display driver and color conversion for 1st layer
//
GUI_DEVICE_CreateAndLink(GUIDRV_LIN_16, GUICC_565, 0, 0);
//
// Display driver configuration, required for Lin-driver
//
LCD_SetSizeEx    (0, 320, 240);
LCD_SetVSizeEx   (0, 320, 240);
LCD_SetVRAMAddrEx(0, (void *)0x200000);
```

LCD_X_DisplayDriver()

Description

This is the callback function of the display driver. It is called for several purposes. During the process of initialization only a few are of interest, actually the display controller initialization and the setting of the video RAM address.

Prototype

```
int LCD_X_DisplayDriver(unsigned LayerIndex, unsigned Cmd, void * pData);
```

Parameter	Description
LayerIndex	Zero based layer index.
Cmd	(see table below)
pData	Pointer to a data structure of a type that depends on Cmd

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Permitted values for element Cmd during the initialization process	
LCD_X_INITCONTROLLER	The display controller should become initialized. Typically an initialization routine which initializes the registers of the display controller should be called in reaction of this command. pData is NULL
LCD_X_SETVRAMADDR	The element pVRAM of the data structure pointed by pData points to the start address of the video RAM. This address is typically written to the video RAM base address register of the display controller. pData points to a LCD_X_SETVRAMADDR_INFO structure.

Elements of LCD_X_SETVRAMADDR:

Data type	Element	Description
void *	pVRAM	Pointer to the start address of the video RAM.

Return value

The routine should return -2 if an error occurs, -1 if the command is not handled by the function and 0 if the command has been successfully executed.

Additional information

For more information about the commands passed to the routine by the display driver, refer to "Display drivers" on page 813.

Examples

The folder Sample\LCDConf\ contains a lot of example implementations of this routine which can be used as starting point.

33.4.2.1 API functions to be used in LCD_X_Config()

The following table shows the API functions which are available for configuration purpose within LCD_X_Config():

Routine	Description
GUI_DEVICE_CreateAndLink()	Creates a display driver device and associates the color conversion routines to be used.
GUI_TOUCH_SetOrientation()	Sets the orientation of the touch screen. This routine is only required if a touch screen is used which does not operates in its default orientation.
GUI_TOUCH_Calibrate()	Calibrates the touch screen.
LCD_SetLUTEx()	Initializes the lookup table with the given palette. This function is only required if a custom palette should be used.
LCD_SetSizeEx()	Required to set the physical size of the display.
LCD_SetVRAMAddrEx()	Sets the address of the video RAM. It is only required if a display driver with linear mapped video RAM is used.
LCD_SetVSizeEx()	Required only if the virtual display size is different to the physical size.

For information about LCD_..., refer to chapter "Display drivers" on page 813.
For information about GUI_TOUCH_..., refer to "Touch screen driver" on page 763.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

GUI_DEVICE_CreateAndLink()

Description

This routine creates the display driver device, sets the color conversion routines to be used for accessing the display and it links the driver device into the device list of the given layer. `LCD_X_Config()` is called immediately after `GUI_X_Config()`. This makes sure that the memory configuration already has been done and the driver is able to allocate memory.
The required memory for a display driver device is app. 50 bytes + the driver specific memory. For details about the memory requirements of the individual display drivers, refer to the chapter "Display drivers" on page 813.

Prototype

```
GUI_DEVICE * GUI_DEVICE_CreateAndLink(const GUI_DEVICE_API * pDeviceAPI,
                                      const LCD_API_COLOR_CONV * pColorConvAPI,
                                        U16 Flags, int LayerIndex);
```

Parameter	Description
pDeviceAPI	Pointer to the display driver to be used. The chapter 'Display drivers' contains a table of the available display drivers.
pColorConvAPI	Pointer to the color conversion routines to be used. The chapter 'Colors' contains a table with the available color conversion routines.
Flags	Should be zero.
LayerIndex	Layer which should be managed by the driver.

Return value

On success the function returns a pointer to the created device object, otherwise it returns NULL.

Additional information

Note that the used driver also determines the display orientation in some cases. This differs from driver to driver. For details about the display orientation, refer to the chapter "Display drivers" on page 813.

33.4.3 Customizing GUI_X.c

This file is the location of the timing routines, the debugging routines and the kernel interface routines:

33.4.3.1 Timing routines

GUI_X_Delay()

Description

Returns after a specified time period in milliseconds.

Prototype

```
void GUI_X_Delay(int Period)
```

Parameter	Description
Period	Period in milliseconds.

GUI_X_ExecIdle()

Description

Called only from non-blocking functions of the window manager.

Prototype

```
void GUI_X_ExecIdle(void);
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Additional information

Called when there are no longer any messages which require processing. In this case the GUI is up to date.

GUI_X_GetTime()

Description

Used by GUI_GetTime to return the current system time in milliseconds.

Prototype

```
int GUI_X_GetTime(void)
```

Return value

The current system time in milliseconds, of type integer.

33.4.3.2 Debugging routines

GUI_X_ErrorOut(), GUI_X_Warn(), GUI_X_Log()

Description

These routines are called by emWin with debug information in higher debug levels in case a problem (Error) or potential problem is discovered. The routines can be blank; they are not required for the functionality of emWin. In a target system, they are typically not required in a release (production) build, since a production build typically uses a lower debug level.
Fatal errors are output using GUI_X_ErrorOut() if (GUI_DEBUG_LEVEL >= 3)
Warnings are output using GUI_X_Warn() if (GUI_DEBUG_LEVEL >= 4)
Messages are output using GUI_X_Log() if (GUI_DEBUG_LEVEL >= 5)

Prototypes

```
void GUI_X_ErrorOut(const char * s);
void GUI_X_Warn(const char * s);
void GUI_X_Log(const char * s);
```

Parameter	Description
s	Pointer to the string to be sent.

Additional information

This routine is called by emWin to transmit error messages or warnings, and is required if logging is enabled. The GUI calls this function depending on the configuration macro GUI_DEBUG_LEVEL. The following table lists the permitted values for GUI_DEBUG_LEVEL:

Value	Symbolic name	Description
0	GUI_DEBUG_LEVEL_NOCHECK	No run-time checks are performed.
1	GUI_DEBUG_LEVEL_CHECK_PARA	Parameter checks are performed to avoid crashes. (Default for target system)
2	GUI_DEBUG_LEVEL_CHECK_ALL	Parameter checks and consistency checks are performed.
3	GUI_DEBUG_LEVEL_LOG_ERRORS	Errors are recorded.
4	GUI_DEBUG_LEVEL_LOG_WARNINGS	Errors and warnings are recorded. (Default for PC-simulation)
5	GUI_DEBUG_LEVEL_LOG_ALL	Errors, warnings and messages are recorded.

33.4.3.3 Kernel interface routines

Detailed descriptions for these routines may be found in 'Execution Model: Single Task/Multitask'.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

33.5 Compile time configuration

The following table shows the available compile time configuration files located in the subfolder `Config`:

Configuration file	Purpose
`GUIConf.h`	Configuration of available features, number of layers, default fonts and default colors.
`LCDConf.h`	Configuration of the used display driver(s).

33.5.1 Customizing GUIConf.h

As described above the file should contain the configuration of available features and the configuration of the default font. Each emWin shipment comes with a `GUIConf.h` file which includes a basic configuration which can be used as a starting point.

33.5.1.1 Configuring the available features of emWin

The following table shows the available configuration macros:

Type	Macro	Default	Description
B	`GUI_OS`	0	Activate to enable multitasking support with multiple tasks calling emWin (see the chapter "Execution Model: Single Task / Multitask" on page 277.
B	`GUI_SUPPORT_CURSOR`	(see expl.)	Per default cursors are enabled if either `GUI_SUPPORT_TOUCH` or `GUI_SUPPORT_MOUSE` has been enabled. If cursors should be shown without enabling one of these options it should be set to 1.
B	`GUI_SUPPORT_MEMDEV`	0	Enables optional memory device support.
B	`GUI_SUPPORT_MOUSE`	0	Enables the optional mouse support.
B	`GUI_SUPPORT_ROTATION`	1	Enables text rotation support.
B	`GUI_SUPPORT_TOUCH`	0	Enables optional touch-screen support.
B	`GUI_WINSUPPORT`	0	Enables optional window manager support.

33.5.1.2 Default font and default color configuration

The following table shows the available configuration macros:

Type	Macro	Default	Description
N	`GUI_DEFAULT_BKCOLOR`	GUI_BLACK	Define the default background color.
N	`GUI_DEFAULT_COLOR`	GUI_WHITE	Define the default foreground color.
S	`GUI_DEFAULT_FONT`	&GUI_Font6x8	Defines which font is used per default after `GUI_Init()`. If you do not use the default font, it makes sense to change to a different default, as the default font is referenced by the code and will therefore always be linked. Please also refer to `GUI_SetDefaultFont()` which can be used for runtime configuration of the default font.

The default colors and fonts of the widgets which are part of the optional window manager can also be configured. For details, refer to the chapter "Window Objects (Widgets)" on page 345.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

33.5.1.3 Advanced GUI configuration options

The following table shows the available configuration macros:

Type	Macro	Default	Description
S	GUI_DEBUG_LEVEL	1 (target) 4 (simulation)	Defines the debug level, which determines how many checks (assertions) are performed by emWin and if debug errors, warnings and messages are output. Higher debug levels generate bigger code.
N	GUI_MAXTASK	4	Define the maximum number of tasks from which emWin is called to access the display when multitasking support is enabled (see the chapter "Execution Model: Single Task / Multitask" on page 277.
F	GUI_MEMCPY	---	This macro allows replacement of the memcpy function.
F	GUI_MEMSET	---	Replacement of the memset function of the GUI.
N	GUI_NUM_LAYERS	1	Defines the maximum of available layers/ displays.
B	GUI_TRIAL_VERSION	0	Marks the compiler output as evaluation version.
B	GUI_WINSUPPORT	0	Enables optional window manager support.
N	GUI_PID_BUFFER_SIZE	5	Maximum number of PID events managed by the input buffer.
N	GUI_KEY_BUFFER_SIZE	10	Maximum number of key events managed by the input buffer.

GUI_MEMCPY

This macro allows replacement of the memcpy function of the GUI. On a lot of systems, memcpy takes up a considerable amount of time because it is not optimized by the compiler manufacturer. emWin contains an alternative memcpy routine, which has been optimized for 32 bit CPUs. On a lot of systems this routine should generate faster code than the default memcpy routine. However, this is still a generic C routine, which in a lot of systems can be replaced by faster code, typically using either a different C routine, which is better optimized for the particular CPU or by writing a routine in Assembly language.
To use the optimized emWin routine add the following define to the file `GUIConf.h`:

```
#define GUI_MEMCPY(pSrc, pDest, NumBytes) GUI__memcpy(pSrc, pDest, NumBytes)
```

GUI_MEMSET

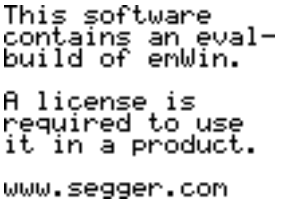
This macro allows replacement of the memset function of the GUI. On a lot of systems, memset takes up a considerable amount of time because it is not optimized by the compiler manufacturer. We have tried to address this by using our own `memset()` Routine `GUI__memset`. However, this is still a generic C routine, which in a lot of systems can be replaced by faster code, typically using either a different C routine, which is better optimized for the particular CPU, by writing a routine in Assembly language or using the DMA.
If you want to use your own memset replacement routine, add the define to the `GUIConf.h` file.

GUI_TRIAL_VERSION

This macro can be used to mark the compiler output as an evaluation build. It should be defined if the software is given to a third party for evaluation purpose (typically with evaluation boards).
Note that a special license is required to do this; the most common licenses do not permit redistribution of emWin in source or object code (relinkable) form. Contact sales@segger.com if you would like to do this.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

If GUI_TRIAL_VERSION is defined, the following message is shown when calling GUI_Init():



This message is always shown in the upper left corner of the display and is normally visible for 1 second. The timing is implemented by a call GUI_X_Delay(1000). The functionality of emWin is in no way limited if this switch is active.

Example

```
#define GUI_TRIAL_VERSION 1
```

33.5.2 Customizing LCDConf.h

This file contains general configuration options required for compiling the display driver(s) which need not to be changed at run-time. The available configuration options depend on the used display driver. For details about the available configuration options, refer to the chapter "Display drivers" on page 813. The detailed driver description shows the available configuration options for each display driver.

33.6 Request available memory

The following functions allow control of memory usage at runtime. They can be used to e.g. prevent waste of memory.

Routine	Description
GUI_ALLOC_GetNumFreeBytes()	Returns the actual number of free bytes.
GUI_ALLOC_GetNumUsedBytes()	Returns the actual number of bytes used by the application.

GUI_ALLOC_GetNumFreeBytes()

Description

This function returns the number of bytes which can be used for emWin functions.

Prototype

```
I32 GUI_ALLOC_GetNumFreeBytes(void);
```

Return value

Number of free bytes.

GUI_ALLOC_GetNumUsedBytes()

Description

This function returns the number of bytes which are already used by emWin functions.

Prototype

```
I32 GUI_ALLOC_GetNumUsedBytes(void);
```

Return value

Number of used bytes.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 34

Performance and Resource Usage

High performance combined with low resource usage has always been a major design consideration. emWin runs on 8/16/32-bit CPUs. Depending on which modules are being used, even single-chip systems with less than 64 Kbytes ROM and 2 Kbytes RAM can be supported by emWin. The actual performance and resource usage depends on many factors (CPU, compiler, memory model, optimization, configuration, interface to LCD controller, etc.). This chapter contains benchmarks and information about resource usage in typical systems which can be used to obtain sufficient estimates for most target systems.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

34.1 Performance

The following chapter shows driver benchmarks on different targets and performance values of image drawing operations.

34.1.1 Driver benchmark

We use a benchmark test to measure the speed of the display drivers on available targets. This benchmark is in no way complete, but it gives an approximation of the length of time required for common operations on various targets.

Configuration and performance table

CPU	LCD Controller (Driver)	bpp	Bench1 Filling	Bench2 Small fonts	Bench3 Big fonts	Bench4 Bitmap 1bpp	Bench5 Bitmap 2bpp	Bench6 Bitmap 4bpp	Bench7 Bitmap 8bpp	Bench8 DDP bitmap
V850SB1 (20MHz)	S1D13806 (1300)	8	16.7M	339K	1.59M	1.52M	240K	459K	83K	1.25M
V850SB1 (20MHz)	S1D13806 (1300)	16	8.33M	326K	1.45M	1.49M	391K	388K	214K	806K
ARM720T (50MHz)	(internal) (3200)	16	7.14M	581K	1.85M	1.96M	694K	645K	410K	2.94M
ARM926EJ-S (200MHz)	(internal) (3200)	16	123M	3.79M	5.21M	7.59M	2.27M	2.21M	1.77M	15.2M

Bench1: Filling

Bench the speed of filling. An area of 64*64 pixels is filled with different colors.

Bench2: Small fonts

Bench the speed of small character output. An area of 60*64 pixels is filled with small-character text.

Bench3: Big fonts

Bench the speed of big character output. An area of 65*48 pixels is filled with big-character text.

Bench4: Bitmap 1bpp

Bench the speed of 1bbp bitmaps. An area of 58*8 pixels is filled with a 1bpp bitmap.

Bench 5: Bitmap 2bpp

Bench the speed of 2bbp bitmaps. An area of 32*11 pixels is filled with a 2bpp bitmap.

Bench6: Bitmap 4bpp

Bench the speed of 4bbp bitmaps. An area of 32*11 pixels is filled with a 4bpp bitmap.

Bench7: Bitmap 8bpp

Bench the speed of 8bbp bitmaps. An area of 32*11 pixels is filled with a 8bpp bitmap.

Bench8: Device-dependent bitmap, 8 or 16 bpp

Bench the speed of bitmaps 8 or 16 bits per pixel. An area of 64*8 pixels is filled with a bitmap. The color depth of the tested bitmap depends on the configuration. For configurations <= 8bpp, a bitmap with 8 bpp is used; 16bpp configurations use a 16-bpp bitmap.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

34.1.2 Image drawing performance

The purpose of the following table is to show the drawing performance of the various image formats supported by emWin. The measurement for the following table has been done on an ARM922T CPU (Sharp LH7A404) running with 200MHz and with 15 bpp display color depth (fixed palette = 555) using the LCDLin driver:

Image format	Megapixels / second
Internal bitmap format: 1bpp C file	17.186
Internal bitmap format: 4bpp C file	3.897
Internal bitmap format: 8bpp C file	4.017
Internal bitmap format: 8bpp C file, without palette	4.478
Internal bitmap format: 16bpp C file, high color 555	13.363
Internal bitmap format: 16bpp C file, high color 565	1.336
Internal bitmap format: 24bpp C file, true color 888	1.671
Internal bitmap format: RLE4 C file	6.144
Internal bitmap format: RLE8 C file	6.806
Internal bitmap format: RLE16 C file	3.740
BMP file 8bpp	4.115
BMP file 16bpp	1.134
BMP file 24bpp	1.544
BMP file 32bpp	1.525
BMP file RLE4	6.998
BMP file RLE8	6.345
GIF file	1.285
JPEG file, gray	0.516
JPEG file, gray, progressive	0.438
JPEG file, H1V1	0.402
JPEG file, H1V1, progressive	0.280
JPEG file, H2V2	0.602
JPEG file, H2V2, progressive	0.431

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

34.2 Memory requirements

The operation area of emWin varies widely, depending primarily on the application and features used. In the following sections, memory requirements of different modules are listed as well as memory requirement of example applications. The memory requirements of the GUI components have been measured on a system as follows:

ARM7, IAR Embedded Workbench V4.42A, Thumb mode, Size optimization

34.2.1 Memory requirements of the GUI components

The following table shows the memory requirements of the main components of emWin. These values depend a lot on the compiler options, the compiler version and the used CPU. Note that the listed values are the requirements of the basic functions of each module and that there are several additional functions available which have not been considered in the table:

Component	ROM	RAM	Description
Window manager	+ 6.2 Kbytes	+ 2.5 Kbyte	Additional memory requirements of a 'Hello world' application when using the window manager. The configured GUI_ALLOC_SIZE for the measurement was 2000.
Memory devices	+ 4.7 Kbytes	+ 7 Kbyte	Additional memory requirements of a 'Hello world' application when using memory devices. The configured GUI_ALLOC_SIZE for the measurement was 8000.
Antialiasing	+ 4.5 Kbytes	+ 2 * LCD_XSIZE	Additional memory requirements for the antialiasing software item.
Driver	+ 2 - 8 Kbytes	20	The memory requirements of the driver depend on the configured driver and if a data cache is used or not. With a data cache, the driver requires more RAM. For details, refer to the chapter "Display drivers" on page 813.
Multilayer	+ 2 - 8 Kbytes	-	If working with a multi layer or a multi display configuration additional memory for each additional layer is required, because each layer requires its own driver.
Core	5.2 Kbytes	80 Byte	Memory requirements of a typical 'Hello world' application without using additional software items.
Core / JPEG	12 Kbytes	38 Kbyte	Basic routines for drawing JPEG files.
Core / GIF	3.3 Kbytes	17 Kbyte	Basic routines for drawing GIF files.
Core / Sprites	4.7 Kbytes	16 Byte	Routines for drawing sprites and cursors.
Core / Fonts	(see description)	-	For details about the ROM requirements of the standard fonts shipped with emWin, refer to the chapter "Fonts" on page 169.
Widgets	4.5 Kbytes	-	This is the approximately basic ROM requirement for the widgets depending on the individual core functions used by the widgets.
Widget / BUTTON	1 Kbyte	40 Bytes	*1
Widget / CHECKBOX	1 Kbyte	52 Bytes	*1
Widget / DROPDOWN	1.8 Kbytes	52 Bytes	*1
Widget / EDIT	2.2 Kbytes	28 Bytes	*1
Widget / FRAMEWIN	2.2 Kbytes	12 Bytes	*1
Widget / GRAPH	2.9 Kbytes	48 Bytes	*1
Widget / GRAPH_DATA_XY	0.7 Kbyte	-	*1
Widget / GRAPH_DATA_YT	0.6 Kbyte	-	*1
Widget / HEADER	2.8 Kbytes	32 Bytes	*1
Widget / LISTBOX	3.7 Kbytes	56 Bytes	*1
Widget / LISTVIEW	3.6 Kbytes	44 Bytes	*1
Widget / MENU	5.7 Kbytes	52 Bytes	*1
Widget / MULTIEDIT	7.1 Kbytes	16 Bytes	*1

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Component	ROM	RAM	Description
Widget / MULTIPAGE	3.9 Kbytes	32 Bytes	*1
Widget / PROGBAR	1.3 Kbytes	20 Bytes	*1
Widget / RADIOBUTTON	1.4 Kbytes	32 Bytes	*1
Widget / SCROLLBAR	2 Kbytes	14 Bytes	*1
Widget / SLIDER	1.3 Kbytes	16 Bytes	*1
Widget / TEXT	0.4 Kbyte	16 Bytes	*1

*1. The listed memory requirements of the widgets contain the basic routines required for creating and drawing the widget. Depending of the specific widget there are several additional functions available which are not listed in the table.

34.2.2 Stack requirements

The basic stack requirement is app. 600 bytes. If using the window manager additional 600 bytes should be calculated. For memory devices further additional 200 bytes are recommended. Please note that the stack requirement also depends on the application, the used compiler and the CPU.

34.3 Memory requirements of example applications

This section shows the requirements of some example applications. The following table contains the summary of the memory requirements. The values are in bytes unless specified other:

Example	GUI core	Fonts	Application	Startup code	Library	Total	GUI core	Application	Stack	Total
	ROM						RAM			
Hello world	5.9 kB	1.8 kB	38	0.3 kB	0.1 kB	**8.1 kB**	62	-	272	**334**
Window application	43 kB	12.5 kB	2.7 kB	0.3 kB	1.5 kB	**60 kB**	5.2 kB	40	1.4 kB	**6.6 kB**

For details about the examples, refer to the following sections.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Chapter 35

Support

This chapter should help if any problem occurs. This could be a problem with the tool chain, with the hardware, the use of the GUI functions or with the performance and it describes how to contact the emWin support.

© 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

35.1 Problems with tool chain (compiler, linker)

The following shows some of the problems that can occur with the use of your tool chain. The chapter tries to show what to do in case of a problem and how to contact the emWin support if needed.

35.1.1 Compiler crash

You ran into a tool chain (compiler) problem, not a problem of emWin. If one of the tools of your tool chain crashes, you should contact your compiler support:

```
"Tool internal error, please contact support"
```

35.1.2 Compiler warnings

The code of emWin has been tested on different target systems and with different compilers. We spend a lot of time on improving the quality of the code and we do our best to avoid compiler warnings. But the sensitivity of each compiler regarding warnings is different. So we can not avoid compiler warnings for unknown tools.

Warnings you should not see

This kind of warnings should not occur:

```
"Function has no prototype"
"Incompatible pointer types"
"Variable used without having been initialized"
"Illegal redefinition of macro"
```

Warnings you may see

Warnings such as the ones below should be ignored:

```
"Integer conversion, may loose significant bits"
"Statement not reached"
"Descriptionless statements were deleted during op-timization"
"Condition is always true/false"
"Unreachable code"
```

Most compilers offers a way to suppress selected warnings.

Warning "Parameter not used"

Depending of the used configuration sometimes not all of the parameters of the functions are used. To avoid compiler warnings regarding this problem you can define the macro `GUI_USE_PARA` in the file `GUIConf.h` like the following example:

```
#define GUI_USE_PARA(para) para=para;
```

emWin uses this macro wherever necessary to avoid this type of warning.

35.1.3 Compiler errors

emWin assumes that the used compiler is ANSI C compatible. The compiler should cover at least one of the following standards:

- ISO/IEC/ANSI 9899:1990 (C90) with support for C++ style comments (//)
- ISO/IEC 9899:1999 (C99)
- ISO/IEC 14882:1998 (C++)

Limited number of arguments in a function pointer call

But some compilers are not 100% ANSI C compatible and have for example a limitation regarding the number of arguments in a function pointer call:

```
typedef int tFunc(int a, int b, int c, int d, int e,
                  int f, int g, int h, int i, int j);

static int _Func(int a, int b, int c, int d, int e,
                 int f, int g, int h, int i, int j) {
  return a + b + c + d + e + f + g + h;
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

```
static void _Test(void) {
  int Result;
  tFunc * pFunc;
  pFunc = _Func;
  Result = pFunc(1, 2, 3, 4, 5, 6, 7, 8, 9, 10);
}
```

If the example above can not be compiled, only the core version of emWin can be used. The additional packages of emWin like the window manager or the memory device module sometimes need to pass up to 10 parameters with a function pointer call. The core package of emWin needs only up to 2 parameters in a function pointer call. But you can also use emWin if your compiler only supports one argument in a function pointer call. If so some functions are not available, for example rotating text or UTF-8 encoding. For details about how to configure emWin in this case take a look at the chapter 'High-Level Configuration'.

35.1.4 Linker problems

Undefined externals

If your linker shows the error message "Undefined external symbols...", check if the following files have been included to the project or library:

- All source files shipped with emWin
- In case of a simple bus interface: One of the hardware routines located in the folder `Sample\LCD_X`? For details about this, refer to the chapter "Configuration" on page 905.
- One of the files located in the folder `Sample\GUI_X`? For details about this, refer to the chapter "Configuration" on page 905.

Executable to large

Some linkers are not able to link only the modules/functions referenced by the project. This results is an executable with a lot of unused code. In this case the use of a library would be very helpful. For details about how to build an emWin library, refer to the chapter "Getting Started" on page 31.

35.2 Problems with hardware/driver

If your tools are working fine but your display does not work may one of the following helps to find the problem.

Stack size to low?

Make sure that there have been configured enough stack. Unfortunately we can not estimate exactly how much stack will be used by your configuration and with your compiler. Further the required stack size depends a lot on the application.

Initialization of the display wrong?

Please check if the controller initialization has been adapted to your needs.

Display interface configured wrong?

When starting to work with emWin and the display does not show something you should use an oscilloscope to measure the pins connected with the display/controller. If there is a problem, check the following:

- If using a simple bus interface: Probably the hardware routines have not been configured correctly. If possible use an emulator and step through these routines.
- If using a full bus interface: Probably the register/memory access have not been configured correctly.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

35.3 Problems with API functions

If your tool chain and your hardware works fine but the API functions do not function as documented, make a small example as described in "Contacting support" on page 927. This allows us to easily reproduce the problem and solve it quickly.

35.4 Problems with the performance

If there is any performance problem with emWin it should be determined, which part of the software causes the problem.

Does the driver causes the problem?

To determine the cause of the problem the first step should be writing a small test routine which executes some test code and measures the time used to execute this code. Starting point should be the file `ProblemReport.c` described above. To measure the time used by the real hardware driver the shipment of emWin contains the driver `LCDNull.c`. This driver can be used if no output to the hardware should be done. To activate the driver the `LCD_CONTROLLER` macro in `LCDConf.h` as follows:

```
#define LCD_CONTROLLER -2
```

The difference between the used time by the real driver and the `LCDNull` driver shows the execution time spent in the real hardware driver.

Driver not optimized?

If there is a significant difference between the use of the real driver and the `LCDNull` driver the cause of the problem could be a not optimized driver mode. If using one of the following macros: `LCD_MIRROR_X, LCD_MIRROR_Y, LCD_SWAP_XY or LCD_CACHE` the driver may not be optimized for the configured mode. In this case, contact our support, we should be able to optimize the code.

Slow display controller?

Also, refer to the chapter "Display drivers" on page 813. If using a slow display controller like the Epson SED1335 this chapter may answer the question, why the driver works slow.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

35.5 Contacting support

If you need to contact the emWin support, send the following information to the support:

- A detailed description of the problem may written as comment in the example code.
- The configuration file `GUIConf.h`.
- The configuration file `LCDConf.h`.
- An example source file which can be compiled in the simulation without any additional files as described in the following.
- If there are any problems with the tool chain, also send the error message of the compiler/linker.
- If there are any problems with the hardware/driver and a simple bus interface is used, also send the hardware routines including the configuration.

Problem report

The following file can be used as a starting point when creating a problem report. Also fill in the CPU, the used tool chain and the problem description. It can be found under `Sample\Tutorial\ProblemReport.c`:

```
/*********************************************************************
*                 SEGGER Microcontroller GmbH & Co. KG               *
*        Solutions for real time microcontroller applications        *
*                                                                    *
*                        emWin problem report                        *
*                                                                    *
**********************************************************************

----------------------------------------------------------------------
File                : ProblemReport.c
CPU                 :
Compiler/Tool chain :
Problem description :
----------------------------------------------------------------------
*/

#include "GUI.h"
/*  Add further GUI header files here as required. */


/*********************************************************************
*
*       Static code
*
**********************************************************************
*
* Please insert helper functions here if required.
*/

/*********************************************************************
*
*       MainTask
*/
void MainTask(void) {
  GUI_Init();
  /*
    To do:  Insert the code here which demonstrates the problem.
  */
  while (1);   /* Make sure program does not terminate */
}
```

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

35.6 FAQ's

Q: I use a different LCD controller. Can I still use emWin?
A: Yes. The hardware access is done in the driver module and is completely independent of the rest of the GUI. The appropriate driver can be easily written for any controller (memory-mapped or bus-driven). Please get in touch with us.

Q: Which CPUs can I use emWin with?
A: emWin can be used with any CPU (or MPU) for which a C compiler exists. Of course, it will work faster on 16/32-bit CPUs than on 8-bit CPUs.

Q: Is emWin flexible enough to do what I want to do in my application?
A: emWin should be flexible enough for any application. If for some reason you do not think it is in your case, please contact us. Believe it or not, the source code is available.

Q: Does emWin work in a multitask environment?
A: Yes, it has been designed with multitask kernels in mind.

 © 1997 - 2011 SEGGER Microcontroller GmbH & Co. KG

Index

A

Access addresses, defining 37
Access routines, defining 37
Active window 290
Additional software 35
Alias macro 36
ANSI 24
Antialiasing 787–799
  API 790, 794
  Examples 795–799
  Factors 795–796
  Fonts 788–789
  High-resolution coordinates 787, 789–790
  Lines 796–797
  Movement 797–799
  Quality 788
  Software 787
Application program interface (API) 24
Arcs, drawing 135–136
ASCII 70, 169, 188, 190
Auto device 267–269

B

Background window 292
Banding memory device 266–267
Basic drawing routines 103
Best palette option 219, 222, 224
Binary switch macro 35
Binary values 94
Bitmap converter 27, 213–226
  command line usage 222–224
  supported input formats 214
  using for color conversion 219–220
Bitmaps 213–226
  color conversion of 219–220
  device-dependent (DDB) 215
  device-independent (DIB) 215
  drawing 113–167
  full-color mode 219
  generating "C" files from 213–219
  manipulating 214
  RLE compressed 215, 220, 225
Blocking dialog 666
BMP file support 142–147
  API 142
BmpCvt.exe 222–224
Bottom window 291
Button widget 346, 356–370
  API 357–370
  Configuration 356
  Examples 370
  Notification 357
BUTTON_3D_MOVE_X 356
BUTTON_3D_MOVE_Y 356
BUTTON_ALIGN_DEFAULT 356
BUTTON_BI_DISABLED 360, 363
BUTTON_BI_PRESSED 360, 363
BUTTON_BI_UNPRESSED 360, 363
BUTTON_BKCOLOR0_DEFAULT 356
BUTTON_BKCOLOR1_DEFAULT 356
BUTTON_CI_DISABLED . 360–362, 364–366
BUTTON_CI_PRESSED .. 360–362, 364–366
BUTTON_CI_UNPRESSED 360–362, 364–366
BUTTON_Create 358
BUTTON_CreateAsChild 358
BUTTON_CreateEx 359
BUTTON_CreateIndirect 359
BUTTON_CreateUser 359
BUTTON_DrawSkinFlex 690, 694
BUTTON_FOCUSCOLOR_DEFAULT 356
BUTTON_FONT_DEFAULT 356
BUTTON_GetBitmap 360
BUTTON_GetBkColor 360
BUTTON_GetDefaultBkColor 360
BUTTON_GetDefaultFont 361
BUTTON_GetDefaultTextAlign 361
BUTTON_GetDefaultTextColor 361
BUTTON_GetFont 361
BUTTON_GetSkinFlexProps 690, 694
BUTTON_GetText 362
BUTTON_GetTextAlign 362
BUTTON_GetTextColor 362
BUTTON_GetUserData 363
BUTTON_IsPressed 363
BUTTON_REACT_ON_LEVEL 356
BUTTON_SetBitmap 363

© 1997 - 2010 SEGGER Microcontroller GmbH & Co. KG

BUTTON_SetBitmapEx 363
BUTTON_SetBkColor 364
BUTTON_SetBMP 364
BUTTON_SetBMPEx 365
BUTTON_SetDefaultBkColor 365
BUTTON_SetDefaultFocusColor 365
BUTTON_SetDefaultFont 366
BUTTON_SetDefaultSkin 690, 694
BUTTON_SetDefaultSkinClassic 691, 694
BUTTON_SetDefaultTextAlign 366
BUTTON_SetDefaultTextColor 366
BUTTON_SetFocusColor 366
BUTTON_SetFocussable 367
BUTTON_SetFont 367
BUTTON_SetPressed 367
BUTTON_SetReactOnLevel 368
BUTTON_SetSkin 691, 694
BUTTON_SetSkinClassic 691, 694, 697
BUTTON_SetSkinFlexProps 692, 694
BUTTON_SetStreamedBitmap 368
BUTTON_SetStreamedBitmapEx 368
BUTTON_SetText 369
BUTTON_SetTextAlign 369
BUTTON_SetTextColor 369
BUTTON_SetTextOffset 369
BUTTON_SetUserData 370
BUTTON_SKINFLEX_PROPS 693
BUTTON_SKINPROPS_DISABLED 693
BUTTON_SKINPROPS_ENABLED 693
BUTTON_SKINPROPS_FOCUSSED 693
BUTTON_SKINPROPS_PRESSED 693
BUTTON_TEXTCOLOR0_DEFAULT 356
BUTTON_TEXTCOLOR1_DEFAULT 356

C

"C" compiler 39, 215
"C" files
  converting bitmaps into 213–219
  converting fonts into 191
  inclusion of in emWin 35
C programming language 24
Callback 350
Callback mechanism 26, 291–303
Callback routines 52, 290
  using 292–303
Character sets 188–190
Checkbox widget 346, 371–386
  API 372–385
  Configuration 372
  Example 386
  Keyboard reaction 372
  Notification 372
CHECKBOX_ALIGN_DEFAULT 372
CHECKBOX_BKCOLOR_DEFAULT 372
CHECKBOX_BKCOLOR0_DEFAULT 372
CHECKBOX_BKCOLOR1_DEFAULT 372
CHECKBOX_Check 373
CHECKBOX_Create 374
CHECKBOX_CreateEx 374
CHECKBOX_CreateIndirect 375
CHECKBOX_CreateUser 375
CHECKBOX_DrawSkinFlex 690, 697
CHECKBOX_FGCOLOR0_DEFAULT 372
CHECKBOX_FGCOLOR1_DEFAULT 372
CHECKBOX_FOCUSCOLOR_DEFAULT 372
CHECKBOX_FONT_DEFAULT 372
CHECKBOX_GetDefaultBkColor 375
CHECKBOX_GetDefaultFont 375
CHECKBOX_GetDefaultSpacing 376
CHECKBOX_GetDefaultTextAlign 376
CHECKBOX_GetDefaultTextColor 376
CHECKBOX_GetSkinFlexProps 690, 697
CHECKBOX_GetState 376
CHECKBOX_GetText 377
CHECKBOX_GetUserData 377
CHECKBOX_IMAGE0_DEFAULT 372
CHECKBOX_IMAGE1_DEFAULT 372
CHECKBOX_IsChecked 377
CHECKBOX_SetBkColor 378
CHECKBOX_SetBoxBkColor 378
CHECKBOX_SetDefaultBkColor 379
CHECKBOX_SetDefaultFocusColor 379
CHECKBOX_SetDefaultFont 379
CHECKBOX_SetDefaultImage 379
CHECKBOX_SetDefaultSkin 690, 697
CHECKBOX_SetDefaultSkinClassic . 691, 697
CHECKBOX_SetDefaultSpacing 380
CHECKBOX_SetDefaultTextAlign 380
CHECKBOX_SetDefaultTextColor 381
CHECKBOX_SetFocusColor 381
CHECKBOX_SetFont 381
CHECKBOX_SetImage 382
CHECKBOX_SetNumStates 382
CHECKBOX_SetSkin 691, 697
CHECKBOX_SetSkinClassic 691, 697
CHECKBOX_SetSkinFlexProps 692, 697
CHECKBOX_SetSpacing 383
CHECKBOX_SetState 383
CHECKBOX_SetText 384
CHECKBOX_SetTextAlign 384
CHECKBOX_SetTextColor 384
CHECKBOX_SetUserData 385
CHECKBOX_SKINFLEX_DISABLED 697
CHECKBOX_SKINFLEX_ENABLED 697
CHECKBOX_SKINFLEX_PROPS 696
CHECKBOX_SKINPROPS_DISABLED 696
CHECKBOX_SKINPROPS_ENABLED 696
CHECKBOX_SPACING_DEFAULT 372
CHECKBOX_TEXTCOLOR_DEFAULT 372
CHECKBOX_Uncheck 385
Child window 290, 311, 666
Circles, drawing 131–132
Client area, of windows 290
Client rectangle 102
Clip area, of windows 290
Clipping 97, 290
Color
  API, basic 242–243
  API, conversion 244–245
Color bar test routine 228–229
Color conversion, of bitmaps . 214, 219–220
Color palettes
  best palette option 219, 222, 224
  custom 221, 241
  fixed 219, 229–238
Colors 227
  API 241
  converting 227
  logical 227
  physical 227
  predefined 228
Command line usage
  of bitmap converter 222–224

 © 1997 - 2010 SEGGER Microcontroller GmbH & Co. KG

Compile time switches 26
Compile-time configuration 821
Compiling, with simulator
  demo program 41, 43
  for your application 43
  samples 41
Config folder 35, 42, 905
Configuration, of emWin 35
Control characters 70, 169
Controls (see Widgets)
Coordinates 27, 290, 789–790
  High-resolution 787, 789–790
Cursors 783–786
  API 784–786
  Available styles 784
Custom palettes
  defining for hardware 241
  file formats, for color conversion 221
  for color conversion 221

D

Data types 29
Decimal values 87–90
Demos 27
Depth coordinate 291
Description of terms 290
Desktop coordinates 290
Desktop window 290
Device.bmp 45, 52
Device1.bmp 46, 52
Device-dependent bitmap (DDB) 215
Device-independent bitmap (DIB) 215
Dialog
  Behavior 669
Dialog messages 666
Dialog procedure 666–669
Dialogs 665–671
  API 670–671
  Basics 666
  Blocking 666
  Creating 666
  creating ??– 669
  defining behavior of 669
  Initialization 668
  Messages 666
  Non-blocking 666
Direct interface 817, 819
Directories, inclusion of 32
Directory structure
  for emWin 32
  for simulator 42
  for Visual C++ workspace 42
Display driver
  Available, but not yet migrated 816
  Available compile-time configurable drivers 815
  Run-time configurable drivers 814
  Special purpose drivers 816
Display driver API 883–891
Display drivers 813–891
Displaying bitmap files 141–168
Drawing modes 100–101
Dropdown widget 346, 387–401
  API 388–400
  Configuration 388
  Example 400
  Keyboard reaction 388
  Notification 388
DROPDOWN_AddString 389
DROPDOWN_ALIGN_DEFAULT 388
DROPDOWN_BKCOLOR0_DEFAULT 388
DROPDOWN_BKCOLOR1_DEFAULT 388
DROPDOWN_BKCOLOR2_DEFAULT 388
DROPDOWN_CF_AUTOSCROLLBAR 391
DROPDOWN_CF_UP 391
DROPDOWN_Collapse 389
DROPDOWN_Create 390
DROPDOWN_CreateEx 390
DROPDOWN_CreateIndirect 391
DROPDOWN_CreateUser 391
DROPDOWN_DecSel 391
DROPDOWN_DecSelExp 391
DROPDOWN_DeleteItem 391
DROPDOWN_DrawSkinFlex 690, 701
DROPDOWN_Expand 392
DROPDOWN_FONT_DEFAULT 388
DROPDOWN_GetItemDisabled 392
DROPDOWN_GetListbox 392
DROPDOWN_GetNumItems 393
DROPDOWN_GetSel 393
DROPDOWN_GetSelExp 393
DROPDOWN_GetSkinFlexProps 701
DROPDOWN_GetUserData 393
DROPDOWN_IncSel 393
DROPDOWN_IncSelExp 394
DROPDOWN_InsertString 394
DROPDOWN_KEY_EXPAND 388
DROPDOWN_KEY_SELECT 388
DROPDOWN_SetAutoScroll 394
DROPDOWN_SetBkColor 395
DROPDOWN_SetColor 395
DROPDOWN_SetDefaultColor 396
DROPDOWN_SetDefaultFont 396
DROPDOWN_SetDefaultScrollbarColor ..396
DROPDOWN_SetDefaultSkin 690, 701
DROPDOWN_SetDefaultSkinClassic 691, 701
DROPDOWN_SetFont 396
DROPDOWN_SetItemDisabled 397
DROPDOWN_SetItemSpacing 399
DROPDOWN_SetScrollbarColor 397
DROPDOWN_SetScrollbarWidth 398
DROPDOWN_SetSel 398
DROPDOWN_SetSelExp 398
DROPDOWN_SetSkin 691, 701
DROPDOWN_SetSkinClassic 691, 701
DROPDOWN_SetSkinFlexProps 690, 692, 701
DROPDOWN_SetTextAlign 399
DROPDOWN_SetTextColor 399
DROPDOWN_SetTextHeight 400
DROPDOWN_SetUserData 400
DROPDOWN_SKINFLEX_DISABLED 702
DROPDOWN_SKINFLEX_ENABLED 702
DROPDOWN_SKINFLEX_EXPANDED 702
DROPDOWN_SKINFLEX_FOCUSSED 702
DROPDOWN_SKINFLEX_PROPS 700
DROPDOWN_SKINPROPS_DISABLED 701
DROPDOWN_SKINPROPS_ENABLED 701
DROPDOWN_SKINPROPS_FOCUSSED 701
DROPDOWN_SKINPROPS_OPEN 701
DROPDOWN_TEXTCOLOR0_DEFAULT 388
DROPDOWN_TEXTCOLOR1_DEFAULT 388
DROPDOWN_TEXTCOLOR2_DEFAULT 388

 © 1997 - 2010 SEGGER Microcontroller GmbH & Co. KG

E

Edit widget 346, 402–418
  API 403–418
  Configuration 402
  Examples 418
  Keyboard reaction 403
  Notification 402
EDIT_AddKey 404, 578–579
EDIT_ALIGN_DEFAULT 402
EDIT_BKCOLOR0_DEFAULT 402
EDIT_BKCOLOR1_DEFAULT 402
EDIT_BORDER_DEFAULT 402
EDIT_Create 404
EDIT_CreateAsChild 405
EDIT_CreateEx 405
EDIT_CreateIndirect 406
EDIT_CreateUser 406
EDIT_EnableBlink 406
EDIT_FONT_DEFAULT 402
EDIT_GetCursorCharPos 406
EDIT_GetCursorPixelPos 407
EDIT_GetDefaultBkColor 407
EDIT_GetDefaultFont 407
EDIT_GetDefaultTextAlign 407
EDIT_GetDefaultTextColor 408
EDIT_GetFloatValue 408
EDIT_GetNumChars 408
EDIT_GetText 408
EDIT_GetUserData 409
EDIT_GetValue 409
EDIT_SetBinMode 409
EDIT_SetBkColor 409
EDIT_SetCursorAtChar 410
EDIT_SetCursorAtPixel 410
EDIT_SetDecMode 410
EDIT_SetDefaultBkColor 411
EDIT_SetDefaultFont 411
EDIT_SetDefaultTextAlign 411
EDIT_SetDefaultTextColor 411
EDIT_SetFloatMode 412
EDIT_SetFloatValue 412
EDIT_SetFont 412
EDIT_SetHexMode 413
EDIT_SetInsertMode 413
EDIT_SetMaxLen 413
EDIT_SetpfAddKeyEx 414
EDIT_SetSel 414
EDIT_SetText 414
EDIT_SetTextAlign 415
EDIT_SetTextColor 415
EDIT_SetTextMode 415
EDIT_SetUlongMode 416
EDIT_SetUserData 416
EDIT_SetValue 416
EDIT_TEXTCOLOR0_DEFAULT 402
EDIT_TEXTCOLOR1_DEFAULT 402
EDIT_XOFF 402
Ellipses, drawing 133
embOS 277
  Kernel interface routines 287
emWin
  as trial version 40–41
  configuration of 35
  data types used (see Data types)
  directory structure for 32
  Driver benchmark 918–919
  Features 26
  features of ??– 27
  in multitask environments 37
  initialization of 36
  memory requirements 920
  updating to newer versions 32
example programs 27
Execution model 277–288
  supported types 278
Execution-related functions 901–903

F

Fixed color palettes 219
Fixed palette modes 229–238
Flickering 247
Flickering of display 336
Floating point values 91–93
Floating-point calculations 97
Font Converter 789
Font converter 27, 172, 191, 812
Font editor 191
Font files
  linking 172, 191
  naming convention 193
Fonts 26, 169–212
  adding 191
  Antialiased 170, 788–789
  API 176–188
  converting (see Font converter)
  creating additional 172
  declaring 172, 191
  Default 175
  defining 26
  Digit fonts (monospaced) 210–212
  Digit fonts (proportional) 209–210
  editing 191
  External Bitmap Fonts (XBF) 173
  file naming convention 193
  Formats 172
  Framed 170
  generating "C" files from 191
  Included with emWin 169
  included with emWin 26
  Monospaced 170
  monospaced 192, 203–209
  naming convention 192–193
  Proportional 170
  proportional 192, 194–201
  scaling 26
  Selecting 175
  System Independent Fonts (SIF) 172
  Types 170
  usage of 172
Foreign Language Support 801–812
Frame window widget 346, 419–442
  API 421–442
  Configuration 421
  Example 442
  Keyboard reaction 421
  Structure 420
FRAMEWIN_AddButton 422
FRAMEWIN_AddCloseButton 423
FRAMEWIN_AddMaxButton 424
FRAMEWIN_AddMenu 425
FRAMEWIN_AddMinButton 425
FRAMEWIN_ALLOW_DRAG_ON_FRAME . 421

 © 1997 - 2010 SEGGER Microcontroller GmbH & Co. KG

FRAMEWIN_BARCOLOR_ACTIVE_DEFAULT . 421
FRAMEWIN_BARCOLOR_INACTIVE_DEFAULT 421
FRAMEWIN_BORDER_DEFAULT 421
FRAMEWIN_CLIENTCOLOR_DEFAULT 421
FRAMEWIN_Create 426
FRAMEWIN_CreateAsChild 426
FRAMEWIN_CreateEx 427
FRAMEWIN_CreateIndirect 428
FRAMEWIN_CreateUser 428
FRAMEWIN_DEFAULT_FONT 421
FRAMEWIN_DrawSkinFlex 690, 704
FRAMEWIN_FRAMECOLOR_DEFAULT 421
FRAMEWIN_GetActive 428
FRAMEWIN_GetBarColor 428
FRAMEWIN_GetBorderSize 429
FRAMEWIN_GetDefaultBarColor 429
FRAMEWIN_GetDefaultBorderSize 429
FRAMEWIN_GetDefaultClientColor 429
FRAMEWIN_GetDefaultFont 430
FRAMEWIN_GetDefaultTextColor ...430, 436
FRAMEWIN_GetDefaultTitleHeight 431
FRAMEWIN_GetFont 430
FRAMEWIN_GetSkinFlexProps 704
FRAMEWIN_GetText 430
FRAMEWIN_GetTextAlign 431
FRAMEWIN_GetTitleHeight 431
FRAMEWIN_GetUserData 431
FRAMEWIN_IBORDER_DEFAULT 421
FRAMEWIN_IsMaximized 431
FRAMEWIN_IsMinimized 432
FRAMEWIN_Maximize 432
FRAMEWIN_Minimize 433
FRAMEWIN_OwnerDraw 433
FRAMEWIN_Restore 433
FRAMEWIN_SetActive 434
FRAMEWIN_SetBarColor 434
FRAMEWIN_SetBorderSize 435
FRAMEWIN_SetClientColor 435
FRAMEWIN_SetDefaultBarColor 436
FRAMEWIN_SetDefaultBorderSize 436
FRAMEWIN_SetDefaultClient Color 436
FRAMEWIN_SetDefaultFont 436
FRAMEWIN_SetDefaultSkin 690, 704
FRAMEWIN_SetDefaultSkinClassic .691, 704
FRAMEWIN_SetDefaultTitleHeight 437
FRAMEWIN_SetFont 437
FRAMEWIN_SetMoveable 437
FRAMEWIN_SetOwnerDraw 438
FRAMEWIN_SetResizeable 439
FRAMEWIN_SetSkin 691, 704
FRAMEWIN_SetSkinClassic 691, 704
FRAMEWIN_SetSkinFlexProps 690, 692, 704
FRAMEWIN_SetText 439
FRAMEWIN_SetTextAlign 440
FRAMEWIN_SetTextColor 440
FRAMEWIN_SetTextColorEx 441
FRAMEWIN_SetTitleHeight 441
FRAMEWIN_SetTitleVis 442
FRAMEWIN_SetUserData 442
FRAMEWIN_SKINFLEX_PROPS 704
FRAMEWIN_SKINPROPS_ACTIVE 704
FRAMEWIN_SKINPROPS_INACTIVE 704
FRAMEWIN_TITLEHEIGHT_DEFAULT 421
Full-color mode, of bitmaps 219
Function replacement macro 36
Function-level linking 32

G

GIF
  API 155–162
  Conversion to C file 154
  Displaying 154
  Memory usage 154
GIF file support 154–162
Graph widget 346, 443–468
  API 445–467
  API Common 447–455
  API GRAPH_DATA_XY 459–462
  API GRAPH_DATA_YT 455–459
  API GRAPH_SCALE 463–467
  Configuration 445
  Create 444
  Delete 444
  Drawing 444
  Examples 467
  Keyboard reaction 445
  Structure 443
  Types 444
GRAPH_AttachData 447
GRAPH_AttachScale 447
GRAPH_CreateEx 448
GRAPH_CreateIndirect 448
GRAPH_CreateUser 448
GRAPH_DATA_XY_AddPoint 459
GRAPH_DATA_XY_Create 459
GRAPH_DATA_XY_Delete 460
GRAPH_DATA_XY_SetLineStyle 461
GRAPH_DATA_XY_SetOffX 460
GRAPH_DATA_XY_SetOffY 460
GRAPH_DATA_XY_SetOwnerDraw 461
GRAPH_DATA_XY_SetPenSize 462
GRAPH_DATA_YT_AddValue 455
GRAPH_DATA_YT_Clear 456
GRAPH_DATA_YT_Create 456
GRAPH_DATA_YT_Delete 457
GRAPH_DATA_YT_MirrorX 457
GRAPH_DATA_YT_SetAlign 458
GRAPH_DATA_YT_SetOffY 458
GRAPH_DetachData 448
GRAPH_DetachScale 449
GRAPH_GetUserData 449
GRAPH_SCALE_Create 463
GRAPH_SCALE_Delete 463
GRAPH_SCALE_SetFactor 464
GRAPH_SCALE_SetFont 464
GRAPH_SCALE_SetNumDecs 465
GRAPH_SCALE_SetOff 465
GRAPH_SCALE_SetPos 466
GRAPH_SCALE_SetTextColor 466
GRAPH_SCALE_SetTickDist 467
GRAPH_SetBorder 449
GRAPH_SetColor 450
GRAPH_SetGridDistX 450
GRAPH_SetGridDistY 450
GRAPH_SetGridFixedX 451
GRAPH_SetGridOffY 451
GRAPH_SetGridVis 452
GRAPH_SetLineStyleH 453
GRAPH_SetLineStyleV 453
GRAPH_SetUserData 453
GRAPH_SetUserDraw 453

 © 1997 - 2010 SEGGER Microcontroller GmbH & Co. KG

GRAPH_SetVSizeX 454
GRAPH_SetVSizeY 454
Graphic
API 98–140
Graphic library 26, 97–140, 901
Grayscales 219, 227
GUI subdirectories 32
GUI_AA_DisableHiRes 790
GUI_AA_DrawArc 791
GUI_AA_DrawLine 792
GUI_AA_DrawPolyOutline 792
GUI_AA_DrawPolyOutlineEx 793
GUI_AA_EnableHiRes 790
GUI_AA_FillCircle 793
GUI_AA_FillPolygon 794
GUI_AA_GetFactor 791
GUI_AA_SetFactor 791
GUI_ALLOC_AssignMemory 908
GUI_ALLOC_SetAvBlockSize 908
GUI_AssignCursorLayer 755
GUI_AUTODEV 267
GUI_AUTODEV_INFO 268
GUI_BITMAP structures 214
GUI_BITMAPSTREAM_INFO 119
GUI_BITMAPSTREAM_PARAM 120
GUI_BMP_Draw 143
GUI_BMP_DrawEx 143
GUI_BMP_DrawScaled 144
GUI_BMP_DrawScaledEx 144
GUI_BMP_GetXSize 145
GUI_BMP_GetXSizeEx 145
GUI_BMP_GetYSize 145
GUI_BMP_GetYSizeEx 146
GUI_BMP_SerializeEx 147
GUI_CalcColorDist 244
GUI_CalcVisColorError 244
GUI_Clear 84
GUI_ClearKeyBuffer 776
GUI_ClearRect 103
GUI_Color2Index 244
GUI_Color2VisColor 244
GUI_ColorIsAvailable 245
GUI_CopyRect 103
GUI_CreateBitmapFromStream 116
GUI_CreateBitmapFromStream24 116
GUI_CreateBitmapFromStream555 116
GUI_CreateBitmapFromStream565 116
GUI_CreateBitmapFromStreamAlpha 116
GUI_CreateBitmapFromStreamIDX 116
GUI_CreateBitmapFromStreamM555 116
GUI_CreateBitmapFromStreamM565 116
GUI_CreateBitmapFromStreamRLE16 ... 116
GUI_CreateBitmapFromStreamRLE32 ... 116
GUI_CreateBitmapFromStreamRLE4 116
GUI_CreateBitmapFromStreamRLE8 116
GUI_CreateBitmapFromStreamRLEAlpha 116
GUI_CreateBitmapFromStreamRLEM16 116
GUI_CreateDialogBox 666, 670
GUI_CURSOR_GetState 784
GUI_CURSOR_Hide 785
GUI_CURSOR_Select 785
GUI_CURSOR_SetPosition 785
GUI_CURSOR_Show 786
GUI_DEBUG_LEVEL 914
GUI_DEFAULT_BKCOLOR 913
GUI_DEFAULT_COLOR 913
GUI_DEFAULT_FONT 913
GUI_Delay 901–902
GUI_DEVICE_CreateAndLink 911
GUI_DispBin 94
GUI_DispBinAt 94
GUI_DispCEOL 84
GUI_DispChar 72
GUI_DispCharAt 72
GUI_DispChars 73
GUI_DispDec 87
GUI_DispDecAt 87
GUI_DispDecMin 88
GUI_DispDecShift 88
GUI_DispDecSpace 89
GUI_DispFloat 91
GUI_DispFloatFix 92
GUI_DispFloatMin 92
GUI_DispHex 95
GUI_DispHexAt 95
GUI_DispNextLine 73
GUI_DispSDec 89
GUI_DispSDecShift 90
GUI_DispSFloatFix 93
GUI_DispSFloatMin 93
GUI_DispString 73
GUI_DispStringAt 74
GUI_DispStringAtCEOL 74
GUI_DispStringHCenterAt 74
GUI_DispStringInRect 75
GUI_DispStringInRectEx 76
GUI_DispStringInRectWrap 77
GUI_DispStringLen 78
GUI_DrawArc 135
GUI_DrawBitmap 113
GUI_DrawBitmapEx 114
GUI_DrawBitmapHWAlpha 114
GUI_DrawBitmapMag 115
GUI_DrawCircle 131
GUI_DrawEllipse 133
GUI_DrawGradientH 103
GUI_DrawGradientRoundedH 105
GUI_DrawGradientRoundedV 106
GUI_DrawGradientV 105
GUI_DrawGraph 137
GUI_DrawHLine 122
GUI_DrawLine 122
GUI_DrawLineRel 122
GUI_DrawLineTo 123
GUI_DRAWMODE_XOR 100
GUI_DrawPie 138
GUI_DrawPixel 106
GUI_DrawPoint 106
GUI_DrawPolygon 126
GUI_DrawPolyLine 123
GUI_DrawRect 107
GUI_DrawRoundedRect 107
GUI_DrawStreamedBitmap 118
GUI_DrawStreamedBitmapEx 118
GUI_DrawVLine 123–124
GUI_EditBin 416
GUI_EditDec 417
GUI_EditHex 417
GUI_EditString 417
GUI_EnableAlpha 110
GUI_EndDialog 671
GUI_EnlargePolygon 126
GUI_Exec 902
GUI_Exec1 902

 © 1997 - 2010 SEGGER Microcontroller GmbH & Co. KG

GUI_ExecCreatedDialog 670
GUI_ExecDialogBox 666, 670
GUI_Exit 36
GUI_FillCircle 132
GUI_FillEllipse 134
GUI_FillPolygon 127
GUI_FillRect 108
GUI_FillRectEx 108
GUI_FillRoundedRect 108
GUI_FONT structures 191
GUI_GetBkColor 242
GUI_GetBkColorIndex 242
GUI_GetCharDistX 184
GUI_GetClientRect 102
GUI_GetColor 242
GUI_GetColorIndex 242
GUI_GetDispPosX 84
GUI_GetDispPosY 84
GUI_GetDrawMode 100
GUI_GetFont 184
GUI_GetFontDistY 185
GUI_GetFontInfo 185
GUI_GetFontSizeY 185
GUI_GetKey 776
GUI_GetLayerPosEx 756
GUI_GetLeadingBlankCols 186
GUI_GetLineStyle 124
GUI_GetOrg 746
GUI_GetPenSize 102
GUI_GetStreamedBitmapInfo 119
GUI_GetStreamedBitmapInfoEx 119
GUI_GetStringDistX 186
GUI_GetTextAlign 81
GUI_GetTextExtend 186
GUI_GetTextMode 80
GUI_GetTime 903
GUI_GetTrailingBlankCols 187
GUI_GetVersionString 96
GUI_GetYDistOfFont 187
GUI_GetYSizeOfFont 187
GUI_GIF_Draw 155
GUI_GIF_DrawEx 156
GUI_GIF_DrawSub 156
GUI_GIF_DrawSubEx 157
GUI_GIF_DrawSubScaled 157
GUI_GIF_DrawSubScaledEx 158
GUI_GIF_GetComment 158
GUI_GIF_GetCommentEx 159
GUI_GIF_GetImageInfo 159
GUI_GIF_GetImageInfoEx 160
GUI_GIF_GetInfo 160
GUI_GIF_GetInfoEx 161
GUI_GIF_GetXSize 161
GUI_GIF_GetXSizeEx 161
GUI_GIF_GetYSize 162
GUI_GIF_GetYSizeEx 162
GUI_GotoX 83
GUI_GotoXY 83
GUI_GotoY 83
GUI_Index2Color 245
GUI_Init 36
GUI_InvertRect 109
GUI_IsInFont 188
GUI_JPEG_Draw 150
GUI_JPEG_DrawEx 150
GUI_JPEG_DrawScaled 151
GUI_JPEG_DrawScaledEx 152
GUI_JPEG_GetInfo 153
GUI_JPEG_GetInfoEx 153
GUI_JPEG_INFO 153
GUI_KEY_BUFFER_SIZE 914
GUI_MagnifyPolygon 127
GUI_MAXTASK 283, 914
GUI_MEASDEV_ClearRect 270
GUI_MEASDEV_Create 269
GUI_MEASDEV_Delete 270
GUI_MEASDEV_GetRect 270
GUI_MEASDEV_Select 270
GUI_MEMCPY 914
GUI_MEMDEV_Clear 253
GUI_MEMDEV_CopyFromLCD 253
GUI_MEMDEV_CopyToLCD 253
GUI_MEMDEV_CopyToLCDAA 254
GUI_MEMDEV_CopyToLCDAt 254
GUI_MEMDEV_Create 254–255
GUI_MEMDEV_CreateAuto 267
GUI_MEMDEV_CreateFixed 255
GUI_MEMDEV_Delete 257
GUI_MEMDEV_DeleteAuto 268
GUI_MEMDEV_Draw 266
GUI_MEMDEV_DrawAuto 268
GUI_MEMDEV_DrawPerspectiveX 257
GUI_MEMDEV_FadeDevices 271
GUI_MEMDEV_FadeInWindow 272
GUI_MEMDEV_FadeOutWindow 272
GUI_MEMDEV_GetDataPtr 259
GUI_MEMDEV_GetYSize 259–260
GUI_MEMDEV_MarkDirty 260
GUI_MEMDEV_MoveInWindow 273
GUI_MEMDEV_MoveOutWindow 273
GUI_MEMDEV_ReduceYSize 260
GUI_MEMDEV_Rotate 260
GUI_MEMDEV_RotateHQ 260
GUI_MEMDEV_Select 262
GUI_MEMDEV_SetAnimationCallback 271
GUI_MEMDEV_SetOrg 262
GUI_MEMDEV_ShiftInWindow 274
GUI_MEMDEV_ShiftOutWindow 274
GUI_MEMDEV_ShiftWindow 275
GUI_MEMDEV_Write 263
GUI_MEMDEV_WriteAlpha 263
GUI_MEMDEV_WriteAlphaAt 263
GUI_MEMDEV_WriteAt 264
GUI_MEMDEV_WriteEx 264
GUI_MEMSET 914
GUI_MessageBox 571
GUI_MOUSE_DRIVER_PS2_Init 762
GUI_MOUSE_DRIVER_PS2_OnRx 763
GUI_MOUSE_GetState 761
GUI_MoveRel 124
GUI_MULTIBUF_Begin 734
GUI_MULTIBUF_BeginEx 734
GUI_MULTIBUF_Config 734
GUI_MULTIBUF_ConfigEx 735
GUI_MULTIBUF_Confirm 735
GUI_MULTIBUF_ConfirmEx 735
GUI_MULTIBUF_End 735
GUI_MULTIBUF_EndEx 736
GUI_MULTIBUF_GetNumBuffers 736
GUI_MULTIBUF_GetNumBuffersEx 736
GUI_MULTIBUF_UseSingleBuffer 736
GUI_NUM_LAYERS 914
GUI_OS 283, 913
GUI_PID_BUFFER_SIZE 914

 © 1997 - 2010 SEGGER Microcontroller GmbH & Co. KG

GUI_PID_GetState 760
GUI_PID_STATE 760
GUI_PID_StoreState 761
GUI_PNG_Draw 164
GUI_PNG_DrawEx 164
GUI_PNG_GetXSize 165
GUI_PNG_GetXSizeEx 165
GUI_PNG_GetYSize 165
GUI_PNG_GetYSizeEx 166
GUI_RestoreContext 139
GUI_RestoreUserAlpha 112
GUI_RotatePolygon 128
GUI_SaveContext 139
GUI_SelectLCD 265
GUI_SelLayer 756
GUI_SendKeyMsg 775
GUI_SetAlpha 111
GUI_SetBkColor 243
GUI_SetBkColorIndex 243
GUI_SetClipRect 140
GUI_SetColor 243
GUI_SetColorIndex 243
GUI_SetDefaultFont 188
GUI_SetDrawMode 101
GUI_SetFont 177
GUI_SetLayerAlphaEx 756
GUI_SetLayerSizeEx 757
GUI_SetLayerVisEx 757
GUI_SetLBorder 81
GUI_SetLineStyle 125
GUI_SetOrg 746
GUI_SetPenSize 102
GUI_SetSignalEventFunc 281
GUI_SetStreamedBitmapHook 120
GUI_SetTextAlign 82
GUI_SetTextMode 80
GUI_SetTextStyle 81
GUI_SetUserAlpha 112
GUI_SetWaitEventFunc 281
GUI_SetWaitEventTimedFunc 282
GUI_SIF_CreateFont 178
GUI_SIF_DeleteFont 179
GUI_SPRITE_Create 778
GUI_SPRITE_CreateEx 779
GUI_SPRITE_Delete 779
GUI_SPRITE_GetState 779
GUI_SPRITE_Hide 780
GUI_SPRITE_SetBitmap 780
GUI_SPRITE_SetBitmapAndPosition 780
GUI_SPRITE_SetPosition 781
GUI_StoreKey 776
GUI_StoreKeyMsg 775
GUI_SUPPORT_CURSOR 913
GUI_SUPPORT_MEMDEV 913
GUI_SUPPORT_MOUSE 913
GUI_SUPPORT_ROTATION 913
GUI_SUPPORT_TOUCH 913
GUI_TEXTMODE_NORMAL 80, 82
GUI_TEXTMODE_REV 80
GUI_TEXTMODE_REVERSE 82
GUI_TEXTMODE_TRANS 80
GUI_TEXTMODE_TRANSPARENT 82
GUI_TEXTMODE_XOR 80, 82
GUI_TOUCH_Calibrate 769
GUI_TOUCH_Exec 769
GUI_TOUCH_GetState 763
GUI_TOUCH_SetOrientation 769
GUI_TOUCH_StoreState 762, 764
GUI_TOUCH_StoreStateEx 764
GUI_TOUCH_X_ActivateX 767
GUI_TOUCH_X_ActivateY 767
GUI_TOUCH_X_MeasureX 768
GUI_TOUCH_X_MeasureY 768
GUI_TRIAL_VERSION 914
GUI_TTF_CreateFont 179
GUI_TTF_DestroyCache 181
GUI_TTF_Done 181
GUI_TTF_GetFamilyName 181
GUI_TTF_GetStyleName 182
GUI_TTF_SetCacheSize 182
GUI_UC_ConvertUC2UTF8 804
GUI_UC_ConvertUTF82UC 804
GUI_UC_DispString 807
GUI_UC_EnableBIDI 805
GUI_UC_Encode 805
GUI_UC_GetCharCode 805
GUI_UC_GetCharSize 806
GUI_UC_SetEncodeNone 806
GUI_UC_SetEncodeUTF8 806
GUI_VNC_AttachToLayer 898
GUI_VNC_EnableKeyboardInput 898
GUI_VNC_GetNumConnections 898
GUI_VNC_Process 898
GUI_VNC_RingBell 899
GUI_VNC_SetPassword 899
GUI_VNC_SetProgName 899
GUI_VNC_SetSize 900
GUI_VNC_X_StartServer 900
GUI_WaitKey 776
GUI_WINSUPPORT 913–914
GUI_WrapGetNumLines 78
GUI_X_Config 907
GUI_X_Delay 902, 911
GUI_X_ExecIdle 911
GUI_X_GetTaskID 285
GUI_X_GetTime 903, 912
GUI_X_InitOS 285
GUI_X_Lock 285
GUI_X_Log 912
GUI_X_SIGNAL_EVENT 283
GUI_X_SignalEvent 286
GUI_X_Unlock 286
GUI_X_WAIT_EVENT 284
GUI_X_WAIT_EVENT_TIMED 284
GUI_X_WaitEvent 286
GUI_X_WaitEventTimed 286
GUI_XBF_CreateFont 183
GUI_XBF_DeleteFont 184
GUIBuilder 673–681
GUIConf.h 175, 251
GUIDRV_07X1 871–873
GUIDRV_1611 874–876
GUIDRV_6331 877–878
GUIDRV_7529 879–881
GUIDRV_BitPlains 829–831
GUIDRV_BitPlains_Config 830
GUIDRV_CompactColor_16 driver 861–865
GUIDRV_Dist 832
GUIDRV_FlexColor 834–838
GUIDRV_FlexColor_Config 838
GUIDRV_FlexColor_SetFunc 836
GUIDRV_Fujitsu_16 866–867
GUIDRV_IST3008_SetBus16 840
GUIDRV_IST3088 839–840

 © 1997 - 2010 SEGGER Microcontroller GmbH & Co. KG

GUIDRV_Lin 841–844
GUIDRV_Page1bpp driver 868–870
GUIDRV_S1D13748 845–846
GUIDRV_S1D13748_Config 846
GUIDRV_S1D13748_SetBus_16 846
GUIDRV_S1D15G00 847–849
GUIDRV_S1D15G00_Config 848
GUIDRV_S1D15G00_SetBus8 848
GUIDRV_SLin 850–853
GUIDRV_SLin_Config 851
GUIDRV_SLin_SetBus8 852
GUIDRV_SLin_SetS1D13700 852
GUIDRV_SLin_SetSSD1848 852
GUIDRV_SLin_SetT6963 853
GUIDRV_SLin_SetUC1617 853
GUIDRV_SPage 854–857
GUIDRV_SPage_Config 856
GUIDRV_SPage_SetBus8 856
GUIDRV_SPage_SetUC1611 857
GUIDRV_SSD1926 driver 858–860
GUIDRV_SSD1926_Config 859
GUIDRV_SSD1926_SetBus16 859
GUITASK_SetMaxTask 908

H

Handle, of a window 290
Header widget 346, 469–482
  API 470–482
  Configuration 470
  Example 482
  Keyboard reaction 470
  Notification 470
HEADER_AddItem 471
HEADER_Create 471
HEADER_CreateAttached 472
HEADER_CreateEx 472, 519
HEADER_CreateIndirect 473
HEADER_CreateUser 473
HEADER_DrawSkinFlex 690, 709
HEADER_GetDefaultBkColor 473
HEADER_GetDefaultBorderH 473
HEADER_GetDefaultBorderV 474
HEADER_GetDefaultCursor 474
HEADER_GetDefaultFont 474
HEADER_GetDefaultTextColor 474
HEADER_GetHeight 474
HEADER_GetItemWidth 475
HEADER_GetNumItems 475
HEADER_GetSkinFlexProps 709
HEADER_GetUserData 475
HEADER_SetBitmap 475
HEADER_SetBitmapEx 476
HEADER_SetBkColor 476
HEADER_SetBMP 476
HEADER_SetBMPEx 477
HEADER_SetDefaultBkColor 477
HEADER_SetDefaultBorderH 477
HEADER_SetDefaultBorderV 478
HEADER_SetDefaultCursor 478
HEADER_SetDefaultFont 478
HEADER_SetDefaultSkin 690, 709
HEADER_SetDefaultSkinClassic 691, 709
HEADER_SetDefaultTextColor 479
HEADER_SetDragLimit 479
HEADER_SetFont 479
HEADER_SetHeight 479
HEADER_SetItemText 480
HEADER_SetItemWidth 480
HEADER_SetSkin 691, 709
HEADER_SetSkinClassic 691, 709
HEADER_SetSkinFlexProps ... 690, 692, 709
HEADER_SetStreamedBitmap 480
HEADER_SetStreamedBitmapEx 480
HEADER_SetTextAlign 481
HEADER_SetTextColor 481
HEADER_SetUserData 482
HEADER_SKINFLEX_PROPS 708
HEADER_SKINPROPS 708
Hello world program 37
Hexadecimal values 95
Hiding windows 291
High-resolution coordinates .. 787, 789–790

I

I/O pins, connection to 818
Icon view widget 483–495
  API 484–494
  Configuration 483
  Example 494
  Keyboard reaction 484
  Notification 484
Iconview widget 346
ICONVIEW_AddBitmapItem 485
ICONVIEW_AddStreamedBitmapItem ... 485
ICONVIEW_ALIGN_DEFAULT 483
ICONVIEW_BKCOLOR0_DEFAULT 483
ICONVIEW_BKCOLOR1_DEFAULT 483
ICONVIEW_CreateEx 486
ICONVIEW_CreateIndirect 487
ICONVIEW_CreateUser 487
ICONVIEW_DeleteItem 487
ICONVIEW_FONT_DEFAULT 483
ICONVIEW_FRAMEX_DEFAULT 483
ICONVIEW_FRAMEY_DEFAULT 483
ICONVIEW_GetItemText 487
ICONVIEW_GetItemUserData 487
ICONVIEW_GetNumItems 488
ICONVIEW_GetSel 488
ICONVIEW_GetUserData 488
ICONVIEW_InsertBitmapItem 488
ICONVIEW_InsertStreamedBitmapItem .489
ICONVIEW_SetBitmapItem 489
ICONVIEW_SetBkColor 490
ICONVIEW_SetFont 490
ICONVIEW_SetFrame 491
ICONVIEW_SetItemText 491
ICONVIEW_SetItemUserData 492
ICONVIEW_SetSel 492
ICONVIEW_SetSpace 492
ICONVIEW_SetStreamedBitmapItem 493
ICONVIEW_SetTextAlign 493
ICONVIEW_SetTextColor 494
ICONVIEW_SetUserData 494
ICONVIEW_SPACEX_DEFAULT 483
ICONVIEW_SPACEY_DEFAULT 483
ICONVIEW_TEXTCOLOR0_DEFAULT 483
ICONVIEW_TEXTCOLOR1_DEFAULT 483
Indirect interface 817–819
Initializing emWin 36
Input devices 759, 773–776
  keyboard ??– 776
  mouse ??– 763

 © 1997 - 2010 SEGGER Microcontroller GmbH & Co. KG

Input focus 666
Interrupt service routines 278–280, 769
Invalidation, of windows 291
ISO 8859-1 ..... 169, 189–190

J

Joystick example 771
JPEG
  API 149–153
  Compression methods 148
  Conversion to C file 148
  Displaying 148
  Memory usage 149
  Progressive 149
JPEG file support 148–153

K

Kernel interface API 284–286
Kernel interface routines 278–280
Keyboard input support ??– 776

L

LCD
  caching in memory 26
  configuration of 227
  connecting to microcontroller 28
  without LCD controller 28
LCD controller
  connected to port/buffer 28
  memory-mapped 28
  support for 28
LCD driver 40
  customization of 28
LCD layer API 883–891
LCD_CACHE 870, 876, 878, 881
LCD_ControlCache 891
LCD_ENDIAN_BIG 843
LCD_FIRSTCOM 870
LCD_FIRSTPIXEL0 881
LCD_FIRSTSEG0 870
LCD_GetBitsPerPixel 885
LCD_GetBitsPerPixelEx 885
LCD_GetNumColors 885
LCD_GetNumColorsEx 885
LCD_GetNumLayers 757
LCD_GetVXSize 886
LCD_GetVXSizeEx 886
LCD_GetVYSize 886
LCD_GetVYSizeEx 886
LCD_GetXMag 886
LCD_GetXMagEx 886
LCD_GetXSize 887
LCD_GetXSizeEx 887
LCD_GetYMag 886
LCD_GetYMagEx 886
LCD_GetYSize 887
LCD_GetYSizeEx 887
LCD_L0_ControlCache 869
LCD_NUM_DUMMY_READS 863
LCD_READ_A0 ..... 822, 870, 875
LCD_READ_A1 ..... 822, 870, 875
LCD_READM_A1 ..... 864, 881
LCD_REG01 863
LCD_SERIAL_ID 863
LCD_SetDevFunc 888
LCD_SetSizeEx 889
LCD_SetVRAMAddrEx 890
LCD_SetVSizeEx 741, 890
LCD_SUPPORT_CACHECONTROL 870
LCD_USE_PARALLEL_16 864
LCD_USE_SERIAL_3PIN 864
LCD_WRITE 823
LCD_WRITE_A0 ... 823, 864, 870, 875, 878, 881
LCD_WRITE_A1 ... 823, 864, 870, 875, 878, 881
LCD_WRITE_BUFFER_SIZE 864
LCD_WRITEM 824
LCD_WRITEM_A0 864
LCD_WRITEM_A1 823, 864, 870, 875, 878, 881
LCD_X_Config 909
LCD_X_DisplayDriver 827, 909
LCD_X_INITCONTROLLER 827
LCD_X_InitController 884
LCD_X_OFF 828
LCD_X_ON 828
LCD_X_SETLUTENTRY 828
LCD_X_SETORG 828
LCD_X_SETVRAMADDR_INFO 827
LCDConf.h 28
Library, creating 33
Lines, drawing 122–123
Linking source files 32
List box widget 496–513
  API 497–513
  Configuration 496
  Examples 513
  Keyboard reaction 496
  Notification 496
Listbox widget 346
LISTBOX_AddString 498
LISTBOX_BKCOLOR0_DEFAULT 496
LISTBOX_BKCOLOR1_DEFAULT 496
LISTBOX_BKCOLOR2_DEFAULT 496
LISTBOX_Create 498
LISTBOX_CreateAsChild 498
LISTBOX_CreateEx 499–500
LISTBOX_CreateUser 500
LISTBOX_DecSel 500
LISTBOX_DeleteItem 500
LISTBOX_FONT_DEFAULT 496
LISTBOX_GetDefaultBkColor 500
LISTBOX_GetDefaultFont 501
LISTBOX_GetDefaultScrollStepH 501
LISTBOX_GetDefaultTextAlign 501
LISTBOX_GetDefaultTextColor 501
LISTBOX_GetFont 502
LISTBOX_GetItemDisabled 502
LISTBOX_GetItemSel 502
LISTBOX_GetItemText 502
LISTBOX_GetMulti 503
LISTBOX_GetNumItems 503
LISTBOX_GetScrollStepH 503
LISTBOX_GetSel 504
LISTBOX_GetTextAlign 504
LISTBOX_GetUserData 504
LISTBOX_IncSel 504
LISTBOX_InsertString 505
LISTBOX_InvalidateItem 505
LISTBOX_OwnerDraw 505
LISTBOX_SetAutoScrollH 506

 © 1997 - 2010 SEGGER Microcontroller GmbH & Co. KG

LISTBOX_SetAutoscrollV 506
LISTBOX_SetBkColor 506
LISTBOX_SetDefaultBkColor 507
LISTBOX_SetDefaultFont 507
LISTBOX_SetDefaultScrollStepH 507
LISTBOX_SetDefaultTextAlign 507
LISTBOX_SetDefaultTextColor 508
LISTBOX_SetFont 508
LISTBOX_SetItemDisabled 508
LISTBOX_SetItemSel 509
LISTBOX_SetItemSpacing 509
LISTBOX_SetMulti 509
LISTBOX_SetOwnerDraw 510
LISTBOX_SetScrollbarColor 511
LISTBOX_SetScrollbarWidth 511
LISTBOX_SetScrollStepH 511
LISTBOX_SetSel 512
LISTBOX_SetString 512
LISTBOX_SetTextAlign 512
LISTBOX_SetTextColor 513
LISTBOX_SetUserData 513
LISTBOX_TEXTCOLOR0_DEFAULT 496
LISTBOX_TEXTCOLOR1_DEFAULT 496
LISTBOX_TEXTCOLOR2_DEFAULT 496
Listview widget 346, 514–616
  API 516–537
  Configuration 515
  Example 537
  Keyboard reaction 515
  Notification 515
LISTVIEW_AddColumn 517
LISTVIEW_AddRow 517
LISTVIEW_CompareDec 518
LISTVIEW_CompareText 518
LISTVIEW_Create 519
LISTVIEW_CreateAttached 519
LISTVIEW_CreateIndirect 520
LISTVIEW_CreateUser 520
LISTVIEW_DecSel 520
LISTVIEW_DeleteColumn 520
LISTVIEW_DeleteRow 521
LISTVIEW_DisableRow 521
LISTVIEW_DisableSort 521
LISTVIEW_EnableRow 522
LISTVIEW_EnableSort 522
LISTVIEW_GetBkColor 523
LISTVIEW_GetFont 523
LISTVIEW_GetHeader 523
LISTVIEW_GetItemText 524
LISTVIEW_GetNumColumns 524
LISTVIEW_GetNumRows 524
LISTVIEW_GetSel 524
LISTVIEW_GetSelUnsorted 525
LISTVIEW_GetTextColor 525
LISTVIEW_GetUserData 525
LISTVIEW_GetUserDataRow 526
LISTVIEW_IncSel 526
LISTVIEW_InsertRow 526
LISTVIEW_SetAutoScrollH 527
LISTVIEW_SetAutoScrollV 527
LISTVIEW_SetBkColor 527
LISTVIEW_SetColumnWidth 528
LISTVIEW_SetCompareFunc 528
LISTVIEW_SetDefaultBkColor 529
LISTVIEW_SetDefaultFont 529
LISTVIEW_SetDefaultGridColor 530
LISTVIEW_SetDefaultTextColor 530
LISTVIEW_SetFixed 530
LISTVIEW_SetFont 531
LISTVIEW_SetGridVis 531
LISTVIEW_SetHeaderHeight 531
LISTVIEW_SetItemBitmap 532
LISTVIEW_SetItemBkColor 532
LISTVIEW_SetItemText 533
LISTVIEW_SetItemTextColor 533
LISTVIEW_SetLBorder 534
LISTVIEW_SetRBorder 534
LISTVIEW_SetRowHeight 534
LISTVIEW_SetSel 535
LISTVIEW_SetSelUnsorted 535
LISTVIEW_SetSort 536
LISTVIEW_SetTextAlign 536
LISTVIEW_SetTextColor 537
LISTVIEW_SetUserData 537
LISTVIEW_SetUserDataRow 537
Listwheel widget 346, 539
  API 540–552
  Configuration 539
  Keyboard reaction 539
  Notification 539
LISTWHEEL_AddString 540
LISTWHEEL_CreateEx 541
LISTWHEEL_CreateIndirect 541
LISTWHEEL_CreateUser 541
LISTWHEEL_GetFont 541
LISTWHEEL_GetItemText 542
LISTWHEEL_GetLBorder 542
LISTWHEEL_GetLineHeight 542
LISTWHEEL_GetNumItems 543
LISTWHEEL_GetPos 543
LISTWHEEL_GetRBorder 543
LISTWHEEL_GetSel 544
LISTWHEEL_GetSnapPosition 544
LISTWHEEL_GetTextAlign 544
LISTWHEEL_GetUserData 544
LISTWHEEL_MoveToPos 545
LISTWHEEL_OwnerDraw 545
LISTWHEEL_SetBkColor 546
LISTWHEEL_SetFont 546
LISTWHEEL_SetLBorder 547
LISTWHEEL_SetLineHeight 547
LISTWHEEL_SetOwnerDraw 548
LISTWHEEL_SetPos 548
LISTWHEEL_SetRBorder 549
LISTWHEEL_SetSel 549
LISTWHEEL_SetSnapPosition 550
LISTWHEEL_SetText 550
LISTWHEEL_SetTextAlign 551
LISTWHEEL_SetTextColor 551
LISTWHEEL_SetUserData 552
Lookup table (LUT) 238, 883

M

Measurement device object 269–271
Memory devices 247–343
  API 251–275
  Auto device 267–269
  banding 266–267
  Basic usage 251
  Color depth 248
  Configuration 251
  Disabling 251
  disabling of 336

 © 1997 - 2010 SEGGER Microcontroller GmbH & Co. KG

Illustration 248
Memory requirements 249
Multi layer/display configuration 251
Multiple layers 249
Performance 250
Shipping 247
Window manager 249
with window manager 336
Memory, reducing consumption of 214, 219
Menu widget 346, 553–570
API 556–570
Configuration 555
Data structures 555
Example 570
Keyboard reaction 556
Messages 554
MENU_AddItem 557
MENU_Attach 557
MENU_CreateEx 558
MENU_CreateIndirect 559
MENU_CreateUser 559
MENU_DeleteItem 559
MENU_DisableItem 559
MENU_EnableItem 560
MENU_GetDefaultBkColor 560
MENU_GetDefaultBorderSize 561
MENU_GetDefaultEffect 561
MENU_GetDefaultFont 561
MENU_GetDefaultTextColor 562
MENU_GetItem 562
MENU_GetItemText 562
MENU_GetNumItems 563
MENU_GetOwner 563
MENU_GetUserData 563
MENU_IF_DISABLED 555
MENU_IF_SEPARATOR 555
MENU_InsertItem 563
MENU_ITEM_DATA 555
MENU_MSG_DATA 554, 910
MENU_ON_INITMENU 554
MENU_ON_ITEMACTIVATE 554
MENU_ON_ITEMPRESSED 554
MENU_ON_ITEMSELECT 554
MENU_Popup 564
MENU_SetBkColor 564
MENU_SetBorderSize 565
MENU_SetDefaultBkColor 566
MENU_SetDefaultBorderSize 566
MENU_SetDefaultEffect 567
MENU_SetDefaultFont 567
MENU_SetDefaultTextColor 567
MENU_SetFont 568
MENU_SetItem 568
MENU_SetOwner 568
MENU_SetSel 569
MENU_SetTextColor 569
MENU_SetUserData 570
Message box widget 571–572
API 571–572
Configuration 571
Keyboard reaction 571
MESSAGEBOX_Create 572
Messages, sent by callback routines 295
Monospaced fonts (see Fonts)
Mouse API
Generic 761
PS2 762
Mouse driver 761
PS2 762
Mouse support ??– 763
Multi layer
API 755–758
Multiedit widget 346, 573–585
API 574–584
Configuration 574
Example 584
Keyboard reaction 574
Notification 574
MULTIEDIT_AddKey 575
MULTIEDIT_AddText 575
MULTIEDIT_Create 576
MULTIEDIT_CreateEx 576
MULTIEDIT_CreateIndirect 577
MULTIEDIT_CreateUser 577
MULTIEDIT_EnableBlink 577
MULTIEDIT_GetCursorCharPos 577
MULTIEDIT_GetCursorPixelPos 578
MULTIEDIT_GetPrompt 578
MULTIEDIT_GetText 578
MULTIEDIT_GetTextSize 579
MULTIEDIT_GetUserData 579
MULTIEDIT_SetAutoScrollH 579
MULTIEDIT_SetAutoScrollV 580
MULTIEDIT_SetBkColor 580
MULTIEDIT_SetBufferSize 580
MULTIEDIT_SetCursorOffset 581
MULTIEDIT_SetFont 581
MULTIEDIT_SetInsertMode 581
MULTIEDIT_SetMaxNumChars 581
MULTIEDIT_SetPasswordMode 582
MULTIEDIT_SetPrompt 582
MULTIEDIT_SetReadOnly 582
MULTIEDIT_SetText 583
MULTIEDIT_SetTextAlign 583
MULTIEDIT_SetTextColor 583
MULTIEDIT_SetUserData 584
MULTIEDIT_SetWrapNone 584
MULTIEDIT_SetWrapWord 584
Multipage widget 347, 586–598
API 587–598
Configuration 587
Example 598
Keyboard reaction 587
Notification 587
MULTIPAGE_AddPage 588
MULTIPAGE_CreateEx 588
MULTIPAGE_CreateIndirect 589
MULTIPAGE_CreateUser 589
MULTIPAGE_DeletePage 589
MULTIPAGE_DisablePage 590
MULTIPAGE_EnablePage 590
MULTIPAGE_GetDefaultAlign 590
MULTIPAGE_GetDefaultBkColor 591
MULTIPAGE_GetDefaultFont 592
MULTIPAGE_GetDefaultTextColor 592
MULTIPAGE_GetSelection 592
MULTIPAGE_GetUserData 592
MULTIPAGE_GetWindow 592
MULTIPAGE_IsPageEnabled 593
MULTIPAGE_SelectPage 593
MULTIPAGE_SetAlign 594
MULTIPAGE_SetBkColor 594
MULTIPAGE_SetDefaultAlign 595
MULTIPAGE_SetDefaultBkColor 595

 © 1997 - 2010 SEGGER Microcontroller GmbH & Co. KG

MULTIPAGE_SetDefaultFont 595
MULTIPAGE_SetDefaultTextColor 596
MULTIPAGE_SetFont 596
MULTIPAGE_SetRotation 596
MULTIPAGE_SetText 597
MULTIPAGE_SetTextColor 597
MULTIPAGE_SetUserData 598
Multiple buffer support 729–737
Multiple layer support 747–758
Multitask environments 278–281, 347
  multiple tasks call emWin ... 278, 280–281
  one task calls emWin 278–279

N

Non readable displays 824
Non-blocking dialog 666
NORMAL drawing mode 100
Normal text 79
Numerical value macro 35

O

Optional software 35

P

Palettes (see Color palettes)
Parent window 290
Pen size 102
Performance 917–921
Pixels 27
PNG
  API 163–166
PNG file support 163–166
Pointer input device
  API 760
  Data structure 760
Pointer input device support
  mouse input ??–..... 763
Polygons, drawing 126–130
Progbar widget 347
PROGBAR_Create 599
PROGBAR_CreateAsChild 600
PROGBAR_CreateEx 600
PROGBAR_CreateIndirect 601
PROGBAR_CreateUser 601
PROGBAR_DEFAULT_BARCOLOR0 599
PROGBAR_DEFAULT_BARCOLOR1 599
PROGBAR_DEFAULT_FONT 599
PROGBAR_DEFAULT_TEXTCOLOR0 599
PROGBAR_DEFAULT_TEXTCOLOR1 599
PROGBAR_DrawSkinFlex 690, 712
PROGBAR_GetSkinFlexProps 712
PROGBAR_GetUserData 601
PROGBAR_SetBarColor 601
PROGBAR_SetDefaultSkin 690, 712
PROGBAR_SetDefaultSkinClassic ... 691, 712
PROGBAR_SetFont 601
PROGBAR_SetMinMax 602
PROGBAR_SetSkin 691, 712
PROGBAR_SetSkinClassic 691, 712
PROGBAR_SetSkinFlexProps .. 690, 692, 712
PROGBAR_SetText 602
PROGBAR_SetTextAlign 602
PROGBAR_SetTextColor 603
PROGBAR_SetTextPos 603
PROGBAR_SetUserData 603
PROGBAR_SetValue 604
PROGBAR_SKINFLEX_INFO 713
PROGBAR_SKINFLEX_L 713
PROGBAR_SKINFLEX_PROPS 711
PROGBAR_SKINFLEX_R 713
Progress bar widget 599–604
  API 599–604
  Configuration 599
  Examples 604
  Keyboard reaction 599
Proportional fonts (see Fonts)

R

Radio button widget 605–616
  API 606–615
  Configuration 605
  Example 615
  Keyboard reaction 606
  Notification 605
RADIO_Create 606
RADIO_CreateEx 607
RADIO_CreateIndirect 608
RADIO_CreateUser 608
RADIO_Dec 608
RADIO_DrawSkinFlex 690
RADIO_GetDefaultFont 608
RADIO_GetDefaultTextColor 609
RADIO_GetText 609
RADIO_GetUserData 609
RADIO_GetValue 609
RADIO_Inc 610
RADIO_SetBkColor 610
RADIO_SetDefaultFocusColor 611
RADIO_SetDefaultFont 611
RADIO_SetDefaultImage 611
RADIO_SetDefaultSkin 690
RADIO_SetDefaultSkinClassic 691
RADIO_SetDefaultTextColor 612
RADIO_SetFocusColor 612
RADIO_SetFont 613
RADIO_SetGroupID 613
RADIO_SetImage 614
RADIO_SetSkin 691
RADIO_SetSkinClassic 691
RADIO_SetSkinFlexProps 690, 692, 716
RADIO_SetText 614
RADIO_SetTextColor 615
RADIO_SetUserData 615
RADIO_SetValue 615
RADIO_SKINFLEX_PROPS 715, 719, 724
RADIO_SKINPROPS_CHECKED 716
RADIO_SKINPROPS_UNCHECKED 716
Radiobutton widget 347
Redrawing mechanism 347
Resource semaphore 284
Resource table, for dialogs 666–667
Resource usage 917–921
Reverse text 79
RLE compression, of bitmaps 215, 220, 225
Run-time configuration 820

S

Sample programs 37
Scroll bar widget 617–625
  API 618–625
  Configuration 617

© 1997 - 2010 SEGGER Microcontroller GmbH & Co. KG

Example 625
Keyboard reaction 617
Notification 617
Scrollbar widget 347
SCROLLBAR_AddValue 618
SCROLLBAR_COLOR_ARROW_DEFAULT 617
SCROLLBAR_COLOR_SHAFT_DEFAULT .. 617
SCROLLBAR_COLOR_THUMB_DEFAULT . 617
SCROLLBAR_Create 618
SCROLLBAR_CreateAttached 619
SCROLLBAR_CreateEx 620
SCROLLBAR_CreateIndirect 620
SCROLLBAR_CreateUser 620
SCROLLBAR_Dec 621
SCROLLBAR_DrawSkinFlex 690
SCROLLBAR_GetDefaultWidth 621
SCROLLBAR_GetNumItems 621
SCROLLBAR_GetPageSize 621
SCROLLBAR_GetThumbSizeMin 622
SCROLLBAR_GetUserData 622
SCROLLBAR_GetValue 622
SCROLLBAR_Inc 622
SCROLLBAR_SetColor 622
SCROLLBAR_SetDefaultColor 623
SCROLLBAR_SetDefaultSkin 690
SCROLLBAR_SetDefaultSkinClassic 691
SCROLLBAR_SetDefaultWidth 623
SCROLLBAR_SetNumItems 623
SCROLLBAR_SetPageSize 624
SCROLLBAR_SetSkin 691
SCROLLBAR_SetSkinClassic 691
SCROLLBAR_SetSkinFlexProps 690, 692, 720
SCROLLBAR_SetState 624
SCROLLBAR_SetThumbSizeMin 624
SCROLLBAR_SetUserData 625
SCROLLBAR_SetValue 625
SCROLLBAR_SetWidth 625
SCROLLBAR_SKINFLEX_INFO 721–722
SCROLLBAR_SKINPROPS_PRESSED 720
SCROLLBAR_SKINPROPS_UNPRESSED . 720
SCROLLBAR_THUMB_SIZE_MIN_DEFAULT .. 617
Selection switch macro 36
Shift JIS
creating fonts 812
Showing windows 291
Sibling window 290
SIM_GUI_CreateLCDInfoWindow() 60
SIM_GUI_CreateLCDWindow 61
SIM_GUI_Exit 61
SIM_GUI_Init 61
SIM_GUI_SetCallback 47
SIM_GUI_SetCompositeColor 48
SIM_GUI_SetCompositeSize 48
SIM_GUI_SetLCDColorBlack 49
SIM_GUI_SetLCDColorWhite 49
SIM_GUI_SetLCDPos 50
SIM_GUI_SetLCDWindowHook 62
SIM_GUI_SetMag 50
SIM_GUI_SetTransColor 50
SIM_GUI_ShowDevice 47
SIM_GUI_UseCustomBitmaps 51
SIM_HARDKEY_GetNum 53
SIM_HARDKEY_GetState 54
SIM_HARDKEY_SetCallback 54
SIM_HARDKEY_SetMode 52, 55
SIM_HARDKEY_SetState 55
SIM_SetTransColor 45
Simulation 39–62
API, Device 47–51
API, GUI 60–62
API, Hardkey 53–55
Hardkey 52–55
Integration 56–62
Simulator 27
directory structure for 42
usage of with emWin source 42–43
usage of with emWin trial version ... 40–41
Single task system 278–279
Skinning ??– 681683–727
Slider widget 347, 626–632
API 626–632
Configuration 626
Example 632
Keyboard reaction 626
Notification 626
SLIDER_BKCOLOR0_DEFAULT 626
SLIDER_COLOR0_DEFAULT 626
SLIDER_Create 627
SLIDER_CreateEx 627
SLIDER_CreateIndirect 628
SLIDER_CreateUser 628
SLIDER_Dec 628
SLIDER_DrawSkinFlex 690
SLIDER_FOCUSCOLOR_DEFAULT 626
SLIDER_GetUserData 628
SLIDER_GetValue 628
SLIDER_Inc 629
SLIDER_SetBkColor 629
SLIDER_SetDefaultFocusColor 629
SLIDER_SetDefaultSkin 690
SLIDER_SetDefaultSkinClassic 691
SLIDER_SetFocusColor 630
SLIDER_SetNumTicks 630
SLIDER_SetRange 631
SLIDER_SetSkin 691
SLIDER_SetSkinClassic 691
SLIDER_SetSkinFlexProps 690, 692
SLIDER_SetUserData 631
SLIDER_SetValue 631
SLIDER_SetWidth 632
SLIDER_SKINFLEX_INFO 727
SLIDER_SKINPROPS_PRESSED 725
SLIDER_SKINPROPS_UNPRESSED 725
Source files, linking 32
Sprintf 85
Sprites 777–781
API 778–781
Standard fonts 169
Subdirectories, of GUI 32
Superloop 278–279
Support 923–928
Syntax, conventions used 24

T

Template driver 882
Text 69–84
alignment 81–82
API 71–84
modes 79–80
positioning 70, 83–84
Text widget 347, 633–639
API 633–639

 © 1997 - 2010 SEGGER Microcontroller GmbH & Co. KG

Configuration 633
Examples 639
Keyboard reaction 633
TEXT_Create 634
TEXT_CreateAsChild 634
TEXT_CreateEx 635
TEXT_CreateIndirect 635
TEXT_CreateUser 636
TEXT_DEFAULT_BK_COLOR 633
TEXT_DEFAULT_TEXT_COLOR 633
TEXT_DEFAULT_WRAPMODE 633
TEXT_FONT_DEFAULT 633
TEXT_GetDefaultFont 636
TEXT_GetNumLines 636
TEXT_GetUserData 636
TEXT_SetBkColor 636
TEXT_SetDefaultFont 637
TEXT_SetDefaultTextColor 637
TEXT_SetDefaultWrapMode 637
TEXT_SetFont 637
TEXT_SetText 638
TEXT_SetTextAlign 638
TEXT_SetTextColor 638
TEXT_SetUserData 638
TEXT_SetWrapMode 638
Tick 901–902
Timing and execution
API 902–903
Timing-related functions 901–903
Toggle behavior, of hardkeys 52, 55
Top window 291
Touch screen
API 763
API, analog 769
Runtime calibration 767
Touch screen driver 763
Analog 764
Analog, config 770
Touch-screens 26
Transparency 291
Transparent reversed text 79
Transparent text 79
Treeview widget 347, 640–662
API 643–662
API, common 644–657
API, item related 657–662
Configuration 642
Example 662
Keyboard reaction 642
Notification 642
Terms 641
TREEVIEW_AttachItem 644
TREEVIEW_CreateEx 644
TREEVIEW_CreateIndirect 645
TREEVIEW_CreateUser 645
TREEVIEW_DecSel 645
TREEVIEW_GetDefaultBkColor 646
TREEVIEW_GetDefaultFont 646
TREEVIEW_GetDefaultLineColor 646
TREEVIEW_GetDefaultTextColor 647
TREEVIEW_GetItem 647
TREEVIEW_GetSel 648
TREEVIEW_GetUserData 648
TREEVIEW_IncSel 648
TREEVIEW_InsertItem 649
TREEVIEW_ITEM_Collapse 657
TREEVIEW_ITEM_CollapseAll 657
TREEVIEW_ITEM_Create 658
TREEVIEW_ITEM_Delete 658
TREEVIEW_ITEM_Detach 658
TREEVIEW_ITEM_Expand 659
TREEVIEW_ITEM_ExpandAll 659
TREEVIEW_ITEM_GetInfo 659
TREEVIEW_ITEM_GetText 660
TREEVIEW_ITEM_GetUserData 660
TREEVIEW_ITEM_SetImage 661
TREEVIEW_ITEM_SetText 661
TREEVIEW_ITEM_SetUserData 662
TREEVIEW_SetAutoScrollH 650
TREEVIEW_SetAutoScrollV 650
TREEVIEW_SetBitmapOffset 650
TREEVIEW_SetBkColor 651
TREEVIEW_SetDefaultBkColor 651
TREEVIEW_SetDefaultFont 652
TREEVIEW_SetDefaultLineColor 652
TREEVIEW_SetDefaultTextColor 652
TREEVIEW_SetFont 652
TREEVIEW_SetHasLines 653
TREEVIEW_SetImage 653
TREEVIEW_SetIndent 654
TREEVIEW_SetLineColor 654
TREEVIEW_SetOwnerDraw 654
TREEVIEW_SetSel 655
TREEVIEW_SetSelMode 655
TREEVIEW_SetTextColor 656
TREEVIEW_SetTextIndent 656
TREEVIEW_SetUserData 657
Trial version, of emWin 40–41
Tutorial 37

U

uC/OS 277
kernel interface routines for 287
Unicode 169, 190
API reference 804
displaying characters in 802
UTF-8 strings 803

V

Validation, of windows 291
Values
API 86–96
Binary 94
Decimal 87–90
emWin version number 96
Floating point 91–93
Hexadecimal 95
Values, displaying 85
Vectorized symbols 126
Version number 96
Viewer 27–68
Virtual display 26
Virtual screen support 739–746
Visual C++ 40, 43
directory structure for 42
VNC
API 897–900
VNC support ??– 900

W

Western Latin character set (see ISO 8859-1)
WIDGET_DRAW_ITEM_FUNC 354, 691

© 1997 - 2010 SEGGER Microcontroller GmbH & Co. KG

WIDGET_GetDefaultEffect 353
WIDGET_ITEM_CREATE 689
WIDGET_ITEM_DRAW 355
WIDGET_ITEM_DRAW_ARROW 689
WIDGET_ITEM_DRAW_BACKGROUND .. 689
WIDGET_ITEM_DRAW_BITMAP 689
WIDGET_ITEM_DRAW_BUTTON 689
WIDGET_ITEM_DRAW_BUTTON_L 689
WIDGET_ITEM_DRAW_BUTTON_R 689
WIDGET_ITEM_DRAW_FOCUS 689
WIDGET_ITEM_DRAW_FRAME 689
WIDGET_ITEM_DRAW_INFO 687
WIDGET_ITEM_DRAW_OVERLAP 689
WIDGET_ITEM_DRAW_SEP 689
WIDGET_ITEM_DRAW_SHAFT 689
WIDGET_ITEM_DRAW_SHAFT_L 689
WIDGET_ITEM_DRAW_SHAFT_R 689
WIDGET_ITEM_DRAW_TEXT 689
WIDGET_ITEM_DRAW_THUMB 689
WIDGET_ITEM_DRAW_TICKS 689
WIDGET_ITEM_GET_BORDERSIZE_B ... 689
WIDGET_ITEM_GET_BORDERSIZE_L ... 689
WIDGET_ITEM_GET_BORDERSIZE_R ... 689
WIDGET_ITEM_GET_BORDERSIZE_T ... 689
WIDGET_ITEM_GET_BUTTONSIZE 689
WIDGET_ITEM_GET_XSIZE 355, 689
WIDGET_ITEM_GET_YSIZE 355, 689
WIDGET_SetDefaultEffect 353
WIDGET_SetEffect 354
WIDGET_USE_FLEX_SKIN 349
WIDGET_USE_PARENT_EFFECT 349
WIDGET_USE_SCHEME_LARGE 349
WIDGET_USE_SCHEME_MEDIUM 349
WIDGET_USE_SCHEME_SMALL 349
Widgets 26, 345–664, 901
  Available widgets 346
  Callback 350
  Common routines 350
  CreateIndirect 351
  CreateUser 351
  defining behavior of 669
  Dynamic memory usage 348
  GetUserData 352
  Handle 345, 348
  in dialogs 665
  Initialization 668
  initialization of 666
  Member functions 347
  SetUserData 352
  User drawn 354
  Using 347
  WM routines 350
Window coordinates 291
Window Manager
  Terms 290
Window manager 26, 289–343, 345, 902
  API 305–342
Window objects (see Widgets)
Window widget 663–727
  API 663
  Configuration 663
  Keyboard reaction 663
WINDOW_BKCOLOR_DEFAULT 663
WINDOW_CreateEx 663
WINDOW_CreateIndirect 664
WINDOW_CreateUser 664
WINDOW_GetUserData 664
WINDOW_SetBkColor 664
WINDOW_SetDefaultBkColor 664
WINDOW_SetUserData 664
Windows 289–343
  clearing 84
  properties of 290
  terms associated with 290–291
WM_Activate 307
WM_AttachWindow 307
WM_AttachWindowAt 308
WM_BringToBottom 308
WM_BringToTop 308
WM_BroadcastMessage 309
WM_CF_ANCHOR_BOTTOM 310
WM_CF_ANCHOR_LEFT 310
WM_CF_ANCHOR_RIGHT 310
WM_CF_ANCHOR_TOP 310
WM_CF_BGND 310
WM_CF_CONST_OUTLINE 310
WM_CF_FGND 310
WM_CF_HASTRANS 310
WM_CF_HIDE 310
WM_CF_LATE_CLIP 310
WM_CF_MEMDEV 310
WM_CF_MEMDEV_ON_REDRAW 311
WM_CF_SHOW 311
WM_CF_STAYONTOP 311
WM_ClrHasTrans 309
WM_CREATE 295–296
WM_CreateTimer 336
WM_CreateWindow 309
WM_CreateWindowAsChild 311
WM_Deactivate 312
WM_DefaultProc 312
WM_DELETE 295–296
WM_DeleteTimer 337
WM_DeleteWindow 312
WM_DetachWindow 313
WM_DisableMemdev 336
WM_DisableWindow 313
WM_EnableMemdev 336
WM_EnableWindow 313
WM_Exec 313, 347, 902
WM_Exec1 314
WM_ForEachDesc 314
WM_GET_ID 295–296
WM_GetActiveWindow 315
WM_GetBackgroundWindow 316
WM_GetCallback 315
WM_GetClientRect 316
WM_GetClientRectEx 316
WM_GetClientWindow 339
WM_GetDesktopWindowEx 316–317
WM_GetDialogItem 317
WM_GetFirstChild 317
WM_GetFocussedWindow 317
WM_GetHasTrans 318
WM_GetId 339
WM_GetInsideRect 339
WM_GetInsideRectEx 340
WM_GetInvalidRect 318
WM_GetNextSibling 318
WM_GetOrgX 319
WM_GetOrgY 319
WM_GetParent 319
WM_GetPrevSibling 319
WM_GetScrollPosH 340

 © 1997 - 2010 SEGGER Microcontroller GmbH & Co. KG

WM_GetScrollPosV 340
WM_GetScrollState 340
WM_GetStayOnTop 319
WM_GetTimerId 337
WM_GetUserData 320
WM_GetWindowOrgX 320
WM_GetWindowOrgY 320
WM_GetWindowRect 320
WM_GetWindowRectEx 321
WM_GetWindowSizeX 321
WM_GetWindowSizeY 321
WM_HasCaptured 321
WM_HasFocus 321
WM_HideWindow 322
WM_INIT_DIALOG 295, 297, 666, 668
WM_InvalidateArea 322
WM_InvalidateRect 322
WM_InvalidateWindow 323
WM_IsCompletelyCovered 323
WM_IsCompletelyVisible 323
WM_IsEnabled 324
WM_IsVisible 324
WM_IsWindow 324
WM_KEY 295, 297
WM_MakeModal 325
WM_MENU 554
WM_MESSAGE 295
WM_MOUSEOVER 295, 300
WM_MOUSEOVER_END 295, 300
WM_MOVE 295, 297
WM_MoveChildTo 325
WM_MoveTo 325
WM_MoveWindow 325
WM_MULTIBUF_Enable 737
WM_NOTIFICATION_CHILD_DELETED ... 296
WM_NOTIFICATION_CLICKED 296, 357, 372, ..388, 402, 470, 484, 496, 515, 539, 574, ... 587, 605, 617, 626, 642
WM_NOTIFICATION_LOST_FOCUS 296
WM_NOTIFICATION_MOVED_OUT 296, 357, 372, ..388, 402, 470, 484, 496, 515, 539, ... 574, 587, 605, 642
WM_NOTIFICATION_RELEASED ...296, 357, 372, ..388, 402, 470, 484, 496, 515, 539, ...574, 587, 605, 617, 626, 642
WM_NOTIFICATION_SCROLL_CHANGED 388, ... 484, 496, 515, 574
WM_NOTIFICATION_SCROLLBAR_ADDED .. 296, ... 617
WM_NOTIFICATION_SEL_CHANGED .... 296, 388, ... 484, 496, 515, 539
WM_NOTIFICATION_VALUE_CHANGED 296, 372, ..402, 574, 587, 605, 617, 626, 642
WM_NOTIFY_PARENT ... 295, 297, 348, 666
WM_NOTIFY_VIS_CHANGED 295, 297
WM_NotifyParent 326
WM_PAINT 295, 298
WM_Paint 326
WM_PaintWindowAndDescs 326
WM_PID_STATE_CHANGED 295, 300
WM_POST_PAINT 295, 298
WM_PRE_PAINT 295, 298
WM_ReleaseCapture 326
WM_ResizeWindow 327
WM_RestartTimer 338
WM_SelectWindow 327
WM_SendMessage 327
WM_SendMessageNoPara 328
WM_SendToParent 328
WM_SET_FOCUS 295, 298
WM_SET_ID 295, 299
WM_SetCallback 329
WM_SetCapture 329
WM_SetDesktopColor 328–329
WM_SetDesktopColorEx 329
WM_SetFocus 330
WM_SetHasTrans 330
WM_SetpfPollPID 331
WM_SetScrollPosH 341
WM_SetScrollPosV 341
WM_SetScrollState 342
WM_SetSize 331
WM_SetStayOnTop 332
WM_SetTransState 333
WM_SetUserClipRect 333
WM_SetUserData 334
WM_SetWindowPos 331
WM_SetXSize 332
WM_SetYSize 332
WM_ShowWindow 334
WM_SIZE 295, 299
WM_SUPPORT_NOTIFY_VIS_CHANGED .304
WM_SUPPORT_TRANSPARENCY 304
WM_TIMER 295, 299
WM_TOUCH 295, 301
WM_TOUCH_CHILD 296, 301
WM_Update 334
WM_UpdateWindowAndDescs 335
WM_USER 296, 303
WM_ValidateRect 335
WM_ValidateWindow 335

X

X-axis 27
XOR drawing mode 100
XOR text 79

Y

Y-axis 27

Z

Z-position 291

 © 1997 - 2010 SEGGER Microcontroller GmbH & Co. KG