Keysight N5166B CXG N5171B/72B/73B EXG N5181B/82B/83B MXG X-Series Signal Generators



Programming Guide

Notices

© Keysight Technologies, Inc. 2012-2019

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies, Inc. as governed by United States and international copyright laws.

Trademark Acknowledgments

Manual Part Number

N5180-90074

Edition

Edition 1, July 2019

Supersedes: February 2019

Printed in USA/Malaysia

Published by: Keysight Technologies 1400 Fountaingrove Parkway Santa Rosa, CA 95403

Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS

COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT WILL CONTROL.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at http://www.keysight.com/find/sweula The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein. does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software

documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

Safety Notices

CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Where to Find the Latest Information

Documentation is updated periodically. For the latest information about these products, including instrument software upgrades, application information, and product information, browse to one of the following URLs, according to the name of your product:

http://www.keysight.com/find/mxg

To receive the latest updates by email, subscribe to Keysight Email Updates at the following URL:

http://www.keysight.com/find/MyKeysight

Information on preventing instrument damage can be found at:

www.keysight.com/find/PreventingInstrumentRepair

Is your product software up-to-date?

Periodically, Keysight releases software updates to fix known defects and incorporate product enhancements. To search for software updates for your product, go to the Keysight Technical Support website at:

http://www.keysight.com/find/techsupport

Table of Contents

١.	Getting Started with Remote Operation	
	Programming and Software/Hardware Layers	1-14
	Interfaces	1-15
	IO Libraries and Programming Languages	
	Keysight IO Libraries Suite	
	Windows XP, 2000 Professional and Vista Business Keysight IO Libraries 15.0 (and Newer)	
	Windows NT and Keysight IO Libraries M (and Earlier)	
	Selecting IO Libraries for GPIB	
	Selecting IO Libraries for LAN	1-2
	Programming Languages	1-22
	Using the Web Browser	1-23
	Modifying the Signal Generator Configuration	1-24
	Enabling the Signal Generator Web Server	1-26
	LAN Configuration System Defaults	1-28
	Displaying the LAN Configuration Summary	1-29
	Preferences	1-30
	Configuring the Display for Remote Command Setups	
	Getting Key Help	1-30
	Troubleshooting	1-3
	Error Messages	1-32
	Error Message File	
	Error Message Types	
2.	Using IO Interfaces	
	Using GPIB	2-36
	Installing the GPIB Interface	2-36
	Set Up the GPIB Interface	2-38
	Verify GPIB Functionality.	
	GPIB Interface Terms	2-39
	GPIB Programming Interface Examples	2-40
	Before Using the GPIB Examples	2-40
	Interface Check using HP Basic and GPIB	2-40
	Interface Check Using NI-488.2 and C++	2-4
	Using LAN	2-42
	Setting Up the LAN Interface	2-43
	Setting up Private LAN	2-45
	Verifying LAN Functionality	2-46
	Using VXI–11	
	Using Sockets LAN	
	Using Telnet LAN	
	Using FTP	2-56
	Using USB	2-58
	Selecting I/O Libraries for USB	
	Setting Up the USB Interface	2-59

3.	Programming Examples	
	Using the Programming Interface Examples	3-62
	Programming Examples Development Environment	3-62
	Running C++ Programs	3-63
	Running C# Examples	3-64
	Running Basic Examples	3-64
	Running Java Examples	3-65
	Running MATLAB Examples	3-66
	Running Perl Examples	3-66
	Using GPIB	3-67
	Installing the GPIB Interface Card	
	GPIB Programming Interface Examples	
	Before Using the GPIB Examples	
	GPIB Function Statements (Command Messages)	
	Interface Check using HP Basic and GPIB	
	Interface Check Using NI-488.2 and C++.	
	Interface Check for GPIB Using VISA and C	
	Local Lockout Using HP Basic and GPIB	
	Local Lockout Using NI-488.2 and C++	
	Queries Using HP Basic and GPIB	3-80
	Queries Using NI-488.2 and Visual C++	3-82
	Queries for GPIB Using VISA and C	3-85
	Generating a CW Signal Using VISA and C	3-88
	Generating an Externally Applied AC-Coupled FM Signal Using VISA and C	3-91
	Generating an Internal FM Signal Using VISA and C	3-93
	Generating a Step-Swept Signal Using VISA and C++	3-96
	Generating a Swept Signal Using VISA and Visual C++	3-98
	Saving and Recalling States Using VISA and C	3-101
	Reading the Data Questionable Status Register Using VISA and C	3-104
	Reading the Service Request Interrupt (SRQ) Using VISA and C	3-110
	LAN Programming Interface Examples	3-115
	VXI-11 Programming	3-115
	VXI-11 Programming Using SICL and C++	3-116
	VXI-11 Programming Using VISA and C++	3-118
	Sockets LAN Programming and C	3-120
	Queries for Lan Using Sockets	3-124
	Sockets LAN Programming Using Java	3-150
	Sockets LAN Programming Using Perl	3-153
	TCP-IP (LAN) Programming Using Matlab	3-154
4.	Programming the Status Register System	
	Overview	4-168
	Overall Status Byte Register Systems	4-170
	Status Register Bit Values	4-172
	Example: Enable a Register	
	Example: Query a Register	4-172
	Accessing Status Register Information	4-173

	Determining What to Monitor	4-173
	Deciding How to Monitor	4-173
	Status Register SCPI Commands	4-176
	Status Byte Group.	4-179
	Status Byte Register	4-180
	Service Request Enable Register	
	Status Groups	
	Standard Event Status Group	
	Standard Operation Status Group	
	Data Questionable Status Group	
	Data Questionable Power Status Group	
	Data Questionable Frequency Status Group	
	Data Questionable Calibration Status Group	
	Data Questionable BERT Status Group	4-199
5.	Creating and Downloading Waveform Files	
	Overview of Downloading and Extracting Waveform Files	5-204
	Waveform Data Requirements	5-205
	Understanding Waveform Data	5-206
	Bits and Bytes	
	LSB and MSB (Bit Order)	
	Little Endian and Big Endian (Byte Order)	
	Byte Swapping	
	DAC Input Values	5-209
	2's Complement Data Format	5-211
	I and Q Interleaving	5-212
	Waveform Structure	5-214
	File Header	5-214
	Marker File	5-214
	I/Q File	5-216
	Waveform	5-216
	Waveform Phase Continuity	5-217
	Phase Discontinuity, Distortion, and Spectral Regrowth	5-217
	Avoiding Phase Discontinuities	5-218
		5-220
	Memory Allocation	
	Memory Size	
	Commands for Downloading and Extracting Waveform Data	5-225
	Waveform Data Encryption	
	File Transfer Methods	
	SCPI Command Line Structure	
	Commands and File Paths for Downloading and Extracting Waveform Data	5-227
	FTP Procedures	
	Creating Waveform Data	
	Code Algorithm	
	Downloading Waveform Data.	
	Using Simulation Software	

	Using Advanced Programming Languages	5-243
	Loading, Playing, and Verifying a Downloaded Waveform	5-247
	Loading a File from Non-Volatile Memory	
	Playing the Waveform	
	Verifying the Waveform	
	Building and Playing Waveform Sequences	5-248
	Using the Download Utilities	
	Downloading E443xB Signal Generator Files	5-251
	E443xB Data Format	
	SCPI Commands	
	Programming Examples	
	C++ Programming Examples.	
	MATLAB Programming Examples	
	Visual Basic Programming Examples	
	HP Basic Programming Examples	
	Troubleshooting Waveform Files	
	Configuring the Pulse/RF Blank	
	Configuring the Fulse/NF blank	5-510
6.	Creating and Downloading User-Data Files	
	Overview	6-320
	Signal Generator Memory	
	Memory Allocation	
	Memory Size	
	Checking Available Memory	
	User File Data (Bit/Binary) Downloads.	
	User File Bit Order (LSB and MSB)	
	Bit File Type Data	
	Binary File Type Data	
	User File Size.	
	Determining Memory Usage for Custom User File Data	
	Downloading User Files	
	Commands for Bit File Downloads	
	Commands for Binary File Downloads	
	Selecting a Downloaded User File as the Data Source	
	Modulating and Activating the Carrier	
	Modifying User File Data.	
	Real-Time Custom High Data Rates	
	Pattern RAM (PRAM) Data Downloads	
	Understanding PRAM Files	
	PRAM File Size	
	SCPI Command for a List Format Download	
	SCPI Command for a Block Data Download	
	Selecting a Downloaded PRAM File as the Data Source	
	Modulating and Activating the Carrier	
	Storing a PRAM File to Non-Volatile Memory and Restoring to Volatile Memory	
	Extracting a PRAM File	
	Modifying PRAM Files	
	INTO UNITY IT IN A INTERNATIONAL AND A CONTROL OF THE INTERNATIONAL AND A CONTROL OF T	u-jjo

FIR Filter Coefficient Downloads	6-360
Data Requirements	6-360
Data Limitations	6-360
Downloading FIR Filter Coefficient Data	6-361
Selecting a Downloaded User FIR Filter as the Active Filter	6-362
Using the Equalization Filter	6-364
Save and Recall Instrument State Files	6-365
Save and Recall SCPI Commands	6-365
Save and Recall Programming Example Using VISA and C#	6-366
User Flatness Correction Downloads Using C++ and VISA	6-379
Data Transfer Troubleshooting	6-384
User File Download Problems	6-384
PRAM Download Problems	
User FIR Filter Coefficient File Download Problems	6-387

Documentation Overview

Getting Started Guide

- Safety Information
- Receiving the Instrument
- Environmental & Electrical Requirements
- Basic Setup
- AccessoriesOperation Verification
- Regulatory Information

User's Guide

- Signal Generator Overview
- Preferences & Enabling Options
- Basic Operation
- Optimize Performance
- Avionics VOR/ILS (Option N5180302B)
- Analog Modulation (Option UNT)
- Pulse Modulation (Options UNW or N5180320B)
- Basic Digital Operation—No BBG Option
- Basic Digital Operation (Options 653/655/656/657)
- Digital Signal Interface Module (Option 003 /004)
- Baseband Operating Mode—Primary, BERT, or N5102A
- BERT (Option N5180UN7B)
- Real-Time Noise—AWGN (Option N5180403B)
- Real-Time Phase Noise Impairments (Option N5180432B)
- Real-Time Fading (Option 660)
- Custom Digital Modulation (Option N5180431B)
- Multitone and Two-Tone Waveforms (Option N5180430B)
- Troubleshooting
- Working in a Secure Environment

Programming Guide

- Getting Started with Remote Operation
- Using IO Interfaces
- Programming Examples
- Programming the Status Register System
- Creating and Downloading Files
- Creating and Downloading User-Data Files

SCPI Reference

- SCPI Basics
- Basic Function Commands
- System Commands
- Analog Modulation Commands
- Arb Commands
- Avionics VOR/ILS Commands
- Bit Error Rate Test (BERT) Commands
- Digital Signal Interface Module Commands
- Real-Time Commands

Programming Compatibility Guide

Provides a listing of SCPI commands and programming codes for signal generator models that are supported by the Keysight EXG and MXG X- Series signal generators.

Service Guide

Troubleshooting
Replaceable Parts
Assembly Replacement
Post-Repair Procedures

Safety and Regulatory Information

Instrument History

Error Messages Guide

Error Messages
Error Message Format
Error Message Type
List of Error Messages

Key Help^a

Key function description Related SCPI commands

a. Press the **Help** key, and then the key for which you wish help.

Keysight Technologies X-Series Signal Generators

Programming Guide

1 Getting Started with Remote Operation

CAUTION

Keysight does **not** recommend going backwards in firmware versions (loading older firmware versions into newer instruments) as hardware/firmware conflicts can result.

- Programming and Software/Hardware Layers on page 14
- Interfaces on page 15
- IO Libraries and Programming Languages on page 16
- Using the Web Browser on page 23
- Preferences on page 30
- Error Messages on page 32



Programming and Software/Hardware Layers


Keysight X-Series signal generators support the following interfaces:

Table 1-1

Instrument	Interfaces Supported
Keysight N51xxB EXG/MXG	GPIB, LAN, and USB 2.0

Use these interfaces, in combination with IO libraries and programming languages, to remotely control a signal generator. Figure 1-1 uses GPIB as an example of the relationships between the interface, IO libraries, programming language, and signal generator.

Figure 1-1 Software/Hardware Layers

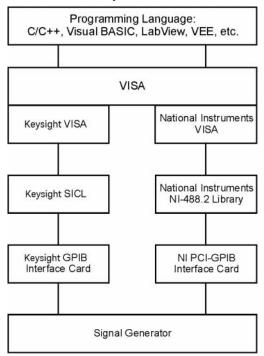

Interfaces

Table 1-2

GPIB	GPIB is used extensively when a dedicated computer is available for remote control of each instrument or system. Data transfer is fast because GPIB handles information in bytes with data transfer rates of up to 8 MBps. GPIB is physically restricted by the location and distance between the instrument/system and the computer; cables are limited to an average length of two meters per device with a total length of 20 meters. For more information on configuring the signal generator to communicate over the GPIB, refer to "Using GPIB" on page 36.	
LAN	Data transfer using the LAN is fast as the LAN handles packets of data. The single cable distance between a computer and the signal generator is limited to 100 meters (100Base-T and 10Base-T). The following protocols can be used to communicate with the signal generator over the LAN: VXI-11 (recommended) Sockets TELNET FTP The Keysight N51xxB EXG/MXG supports LXI Class C functionality. For more information on the LXI standards, refer to http://www.lxistandard.org/home. For more information on configuring the signal generator to communicate over the LAN,	
	refer to "Using LAN" on page 42.	
USB	 The rear panel Type-B or Mini-B 5-pin connector is a device USB and can be used to connect a controller for remote operation. The Type-A front panel connector is a host USB and can be used to connect a mouse, a keyboard, or a USB 1.1/2.0 flash drive. 	
	USB 2.0's 64 MBps communication speed is faster than GPIB for data transfers >1 KB; however, longer latency makes small USB transfers slower and less efficient than GPIB. For additional information, refer to the Keysight SICL or VISA User's Guide.)	
	For more information on connecting the signal generator to the USB, refer to the "Keysight IO Libraries Suite" on page 16 and the Keysight Connection Expert in the Keysight IO Libraries Help.	
	For more information on configuring the signal generator to communicate over the USB, refer to "Using USB" on page 58.	

10 Libraries and Programming Languages

The IO libraries is a collection of functions used by a programming language to send instrument commands and receive instrument data. Before you can communicate and control the signal generator, you must have an IO library installed on your computer. The Keysight IO libraries are included on an Automation-Ready CD with your signal generator and Keysight GPIB interface board, or they can be downloaded from the Keysight website:

http://www.keysight.com.

NOTE

To learn about using IO libraries with Windows XP or newer operating systems, refer to the Keysight IO Libraries Suite's help located on the Automation-Ready CD that ships with your signal generator. Other sources of this information, can be found with the Keysight GPIB interface board's CD, or downloaded from the Keysight website: http://www.keysight.com.

To better understand setting up Windows XP operating systems and newer, using PC LAN port settings, refer to Chapter 2.

Keysight IO Libraries Suite

The Keysight IO Libraries Suite replaces earlier versions of the Keysight IO Libraries. Keysight IO Libraries Suite does not support Windows NT. If you are using the Windows NT platform, you must use Keysight IO Libraries version M or earlier.

CAUTION

The USB interface requires Keysight IO Libraries Suite 14.1 or newer. For more information on connecting instruments using USB, refer to the Keysight Connection Expert in the Keysight IO Libraries Help.

NOTE

The signal generator ships with an Automation-Ready CD that contains the Keysight IO Libraries Suite 14.0 for users who use Windows 98 and Windows ME. These older systems are no longer supported in Keysight IO Libraries Suite version 14.1 and higher.

Once the libraries are loaded, you can use the Keysight Connection Expert, Interactive IO, or VISA Assistant to configure and communicate with the signal generator over different IO interfaces. Follow instructions in the setup wizard to install the libraries.

NOTE

Before setting the LAN interface, the signal generator must be configured for VXI-11 SCPI. Refer to "Configuring the VXI-11 Service" on page 43.

Refer to the Keysight IO Libraries Suite Help documentation for details about this software.

Windows XP, 2000 Professional and Vista Business Keysight IO Libraries 15.0 (and Newer)

NOTE

Windows NT is not supported on Keysight IO Libraries 14.0 and newer.

For additional information on older versions of Keysight IO libraries, refer to the Keysight Connection Expert in the Keysight IO Libraries Help. The Keysight IO libraries are included with your signal generator or Keysight GPIB interface board, or they can be downloaded from the Keysight website: http://www.keysight.com.

VISA Assistant

VISA is an industry standard IO library API. It allows the user to send SCPI commands to instruments and to read instrument data in a variety of formats. Refer to the VISA Assistant Help menu and the Keysight VISA User's Manual (available on Keysight's website) for more information.

VISA Configuration (Automatic)

- 1. Run the VISA Assistant program:
 - Start > All Programs > Keysight IO Libraries Suite > Keysight Connection Expert > Tools > Visa Assistant >.
- 2. Click on the interface you want to use for sending commands to the signal generator.
- 3. Click the Formatted I/O tab.
- 4. Select SCPI in the Instr. Lang. section.

You can enter SCPI commands in the text box and send the command using the **viPrintf** button.

Using VISA Configuration (Manual)

Use the Keysight IO Libraries Suite 15.0 to perform the following steps to use the Connection Expert and VISA to manually configure an interface.

- 1. Run the Keysight Connection Expert program: Start > All Programs > Keysight IO Libraries Suite > Keysight Connection Expert >.
- 2. On the tool bar select the Add Interface button.
- 3. Click LAN Interface in the Available interface types text box.
- 4. Click the ADD button.
- **5.** Verify that the **Auto (automatically detect protocol)** bubble is checked. Click **O.K.** to use the default settings.
- 6. Click LAN(TCPIPO) in the Instrument I/O on this PC text box.
- 7. On the tool bar select the Add Instrument button.
- 8. Click the Add Address button in the Add LAN Instruments window.
- **9.** Enter the **hostname** of the instrument or select the **Use IP Address** check box and enter the IP address.

10.Click OK.

Windows NT and Keysight IO Libraries M (and Earlier)

NOTE

Windows NT is not supported on Keysight IO Libraries 14.0 and newer.

The following sections are specific to Keysight IO Libraries versions M and earlier and apply only to the Windows NT platform.

For additional information on older versions of Keysight IO libraries, refer to the Keysight Connection Expert in the Keysight IO Libraries Help. The Keysight IO libraries are included with your signal generator or Keysight GPIB interface board, or they can be downloaded from the Keysight website: http://www.keysight.com.

Using IO Config for Computer-to-Instrument Communication with VISA (Automatic or Manually)

After installing the Keysight IO Libraries version M or earlier, you can configure the interfaces available on your computer by using the IO Config program. This program can setup the interfaces that you want to use to control the signal generator. The following steps set up the interfaces.

1. Install GPIB interface boards before running IO Config.

NOTE

You can also connect GPIB instruments using the Keysight 82357A USB/GPIB Interface Converter, which eliminates the need for a GPIB card. For more information, go to http://www.keysight.com/find/gpib.

- **2.** Run the IO Config program. The program automatically identifies available interfaces.
- **3.** Click on the interface type you want to configure, such as GPIB, in the Available Interface Types text box.
- 4. Click the **Configure** button. Set the Default Protocol to AUTO.
- 5. Click **OK** to use the default settings.
- **6.** Click **OK** to exit the IO Config program.

VISA Assistant

VISA is an industry standard IO library API. It allows the user to send SCPI commands to instruments and to read instrument data in a variety of formats. You can use the VISA Assistant, available with the Keysight IO Libraries versions M and earlier, to send commands to the signal generator. If the interface you want to use does not appear in the VISA Assistant then you must manually configure the interface. See the Manual VISA Configuration section below. Refer to the VISA Assistant Help menu and the Keysight VISA User's Manual (available on Keysight's website) for more information.

VISA Configuration (Automatic)

- 1. Run the VISA Assistant program.
- 2. Click on the interface you want to use for sending commands to the signal generator.
- 3. Click the Formatted I/O tab.
- 4. Select SCPI in the Instr. Lang. section.

You can enter SCPI commands in the text box and send the command using the **viPrintf** button.

VISA Configuration (Manual)

Perform the following steps to use IO Config and VISA to manually configure an interface.

- 1. Run the IO Config Program.
- 2. Click on GPIB in the Available Interface Types text box.
- 3. Click the Configure button. Set the Default Protocol to AUTO and then click OK to use the default settings.
- 4. Click on GPIBO in the Configured Interfaces text box.
- 5. Click Edit...
- 6. Click the Edit VISA Config... button.
- 7. Click the Add device button.
- 8. Enter the GPIB address of the signal generator.
- **9.** Click the **OK** button in this form and all other forms to exit the IO Config program.

Selecting IO Libraries for GPIB

The IO libraries are included with the GPIB interface card, and can be downloaded from the National Instruments website or the Keysight website. See also, "IO Libraries and Programming Languages" on page 16 for information on IO libraries. The following is a discussion on these libraries.

CAUTION

Because of the potential for portability problems, running Keysight SICL without the VISA overlay is **not** recommended by Keysight Technologies.

VISA VISA is an IO library used to develop IO applications and instrument drivers that comply with industry standards.

It is recommended that the VISA library be used for programming the signal generator. The NI-VISA™ and Keysight VISA libraries are similar implementations of VISA and have the same commands, syntax, and functions. The differences are in the lower level IO libraries; NI-488.2 and SICL respectively. It is best to use the Keysight VISA library with the Keysight GPIB interface card or NI-VISA with the NI PCI-GPIB interface

card.

SICL Kevsight SICL can be used without the VISA overlay.

The SICL functions can be called from a program. However, if this method is used, executable programs will not be portable to other hardware platforms. For example, a program using SICL functions will not run on a computer with NI libraries (PCI-GPIB interface card).

NI-488.2 can be used without the VISA overlay. The

NI-488.2 functions can be called from a program. However, if this method is used, executable programs will not be portable to other hardware platforms. For example, a program using NI-488.2 functions will not run on a computer with Keysight SICL (Keysight GPIB

interface card).

Selecting IO Libraries for LAN

The TELNET and FTP protocols do not require IO libraries to be installed on your computer. However, to write programs to control your signal generator, an IO library must be installed on your computer and the computer configured for instrument control using the LAN interface.

The Keysight IO libraries Suite is available on the Automation-Ready CD, which was shipped with your signal generator. The libraries can also be downloaded from the Keysight website. The following is a discussion on these libraries.

[.] NI-VISA is a registered trademark of National Instruments Corporation.

Getting Started with Remote Operation IO Libraries and Programming Languages

Keysight VISA VISA is an IO library used to develop IO applications and

instrument drivers that comply with industry standards. Use the Keysight VISA library for programming the

signal generator over the LAN interface.

SICL Keysight SICL is a lower level library that is installed

along with Keysight VISA.

Programming Languages

Along with Standard Commands for Programming Instructions (SCPI) and IO library functions, you use a programming language to remotely control the signal generator. Common programming languages include:

- C/C++
- C#
- MATLAB $^{\circledR}$ (MATLAB is a registered trademark of The MathWorks.)
- HP Basic
- LabView
- Java™ (Java is a U.S. trademark of Sun Microsystems, Inc.)
- Visual Basic[®] (Visual Basic is a registered trademark of Microsoft Corporation.)
- PERL
- Keysight VEE

For examples, using some of these languages, refer to Chapter 3.

Using the Web Browser

NOTE

The following example for accessing the Web-Enabled X-Series web page uses the newly shipped instrument's predetermined default hostname (a-<instrument model number>-<last 5 digits of the instrument serial number>).

The procedure that follows assumes the signal generator is running firmware A.01.20 or later.

Web-Enabled SCPI command capability is not available for versions of Internet Explorer ≥7.0. (The SCPI Telnet softkey is inactive for these versions.) To use the Telnet SCPI, refer to the figure on page 24.

For more information on LAN Connectivity, refer to the Keysight Connectivity Guide (E2094-90009) or to the LAN Connectivity FAQs for details on using the instrument over LAN.

The instrument can be accessed through a standard web browser, when it is connected to the LAN. To access through the web browser, enter the instrument IP address or the hostname as the URL in your browser. Refer to Figure 1-2, "The Signal Generator Web Service" on page 24.

The signal generator web page, shown at right and page 27, provides general information on the signal generator, FTP access to files stored on the signal generator, and a means to control the instrument using either a remote front-panel interface or SCPI commands. The web page also has links to Keysight's products, support, manuals, and website. For additional information on memory catalog access (file storing), and FTP, refer to the User's Guide and "" on page 220 and for FTP, see "Using FTP" on page 56 and "FTP Procedures" on page 231.

The Web Server service is compatible with the Microsoft Internet Explorer (6.0 and newer) web browser and operating systems Windows 2000, Windows XP, and newer. For more information on using the Web Server, refer to "Enabling the Signal Generator Web Server" on page 26.

Figure 1-2 The Signal Generator Web Service





The Keysight N51xxB EXG/MXG supports LXI Class C functionality. For more information on the LXI standards, refer to http://www.lxistandard.org/home.



NOTE: If you do not see this window,

check to see if the window is hidden behind your browser window or your web browser settings are set to block pop-ups. To use this feature, you need to set your web browser to allow pop-ups for your instrument's IP address.

Remote SCPI commands requires the Telnet feature on the computer. The Telnet feature is available from a variety of sources. Some software updates can block (break) this Telnet connection (e.g. Internet Explorer 7). When using Internet Explorer as a browser, only versions <Internet Explorer 7 enable the Web-Enabled SCPI feature.

Modifying the Signal Generator Configuration


NOTE

Use **Help with this Page** for assistance with the Web-Enabled interface.

 From the welcome page of the Web-Enabled interface, click View & Modify Configuration to show the instrument's currently assigned IP address and other parameters.

- 2. Enter the new settings and click Save.
- 3. Click Renew LAN Settings to cause the new settings to take effect.

Figure 1-3 View & Modify Configuration

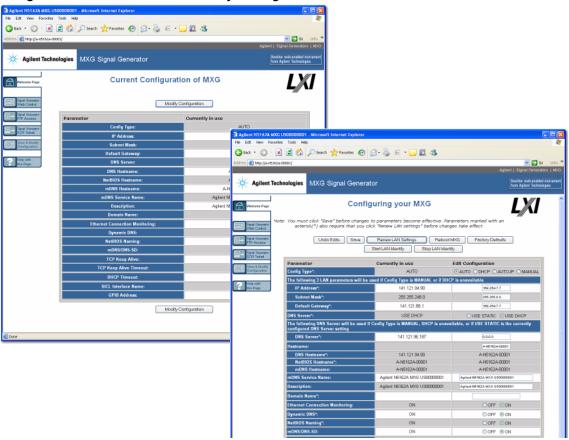


Enabling the Signal Generator Web Server

NOTE

Javascript or Active Scripts must be enabled to use the web front panel controls.

1. Turn on the Web server as shown below.

Keysight X-Series Web Server On

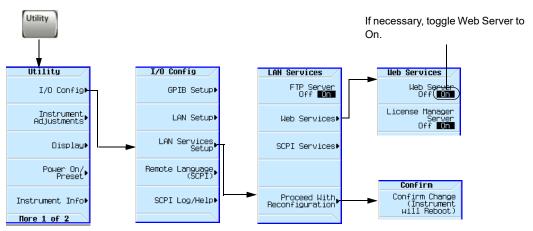

For details on each key and for equivalent SCPI commands, use the key help. Refer to "Getting Key Help" on page 30 and the User's Guide. For additional SCPI command information, refer to the SCPI Command Reference.

- 2. Launch the PC or workstation web browser.
- 3. In the web browser address field, enter the signal generator's IP address. For example, http://101.101.101.101 (where 101.101.101.101 is the signal generator's IP address).
 - The IP (internet protocol) address can change depending on the LAN configuration (see "Using LAN" on page 42).
- **4.** On the computer's keyboard, press **Enter**. The web browser displays the signal generator's homepage.
- Click the Signal Generator Web Control menu button on the left of the page. The LXI password box is displayed on the computer. Refer to the Web-Enabled Help.
- 6. Click Submit.
- 7. The front panel web page displays.


NOTE

If you are experiencing problems with opening the signal generator's remote front panel web page, verify that the pop-up blocker is turned off on your web browser.

In some cases the Web-Enabled front panel may appear behind the main browser window, so you must move the browser window to see the Web-Enabled front panel.

To control the signal generator, either click the front panel keys or enter SCPI commands.

FTP enables the transfer of files between the instrument and a computer. The FTP access button provides drag-and-drop file capability.

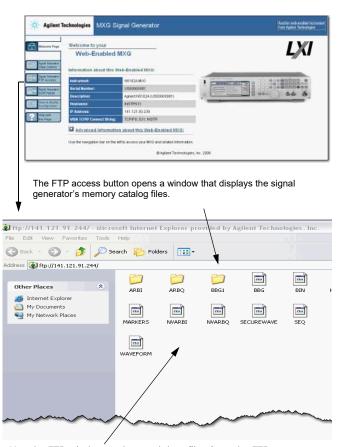

Use the FTP window to drag and drop files from the FTP page to your computer.

LAN Configuration System Defaults

NOTE

The instrument's LAN configuration system information can be found on the signal generator's homepage and on the signal generator. Refer to "Enabling the Signal Generator Web Server" on page 26 and to "Displaying the LAN Configuration Summary" on page 29.

If the instrument has been restored to the factory defaults from the LAN Setup menu the signal generator will revert to the values displayed in Table on page 28. Refer to "Displaying the LAN Configuration Summary" on page 29.

To reset the instrument LXI password to "agilent" and the LAN settings to their factory default values, press the following key sequence on the signal generator:

Utility > I/O Config > LAN Setup > Advanced Settings > More 2 of 2 > Restore LAN Settings to Default Values > Confirm Restore LAN Settings to Default Values

NOTE

There are no SCPI commands associated with this LXI password factory reset.

For more information, refer to the signal generator's **Web Server Interface Help**.

Table 1-3 LAN Configuration Summary Values

Parameter	Default			
Signal Generator LAN Configura	Generator LAN Configuration Summary			
Hostname:	Keysight- <model number="">-<last_5_chars_of_serial_number></last_5_chars_of_serial_number></model>			
Config Type:	AUTO			
IP Address:	127.0.0.1			
Connection Monitoring:	On			
Subnet:	255.255.255.0			
DNS Server Override:	Off			
Gateway:	0.0.0.0			
Dynamic DNS Naming:	On			
RFC NETBIOS Naming:	On			
DNS Server:	0.0.0.0			
TCP Keep Alive:	On			

Table 1-3 LAN Configuration Summary Values

Parameter	Default		
Domain Name:	<empty></empty>		
TCP Keep Alive Timeout:	1800.0 sec		
Signal Generator Web Server Int	erface		
Description:	Keysight <model_number>(<serial_number>)</serial_number></model_number>		
SICL Interface Name ^b :	gpib0		
Web Password:	agilent		

- a. The Domain Name defaults to a null field.
- b. This information is part of the "Advanced Information about this Web-Enabled <signal generator model number>"

Displaying the LAN Configuration Summary

For details on each key and for equivalent SCPI commands (if applicable), use the key help (described in the User's Guide).

Not applicable


Preferences

The following commonly-used manual command sections are included here:

"Configuring the Display for Remote Command Setups" on page 30

"Getting Key Help" on page 30


Configuring the Display for Remote Command Setups

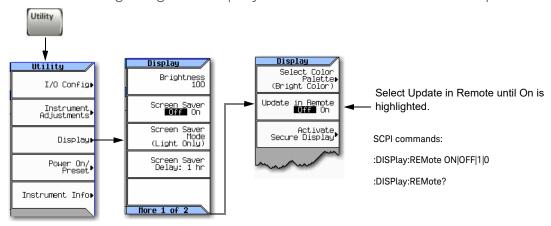

For details on each key and for equivalent SCPI commands (if applicable), use the key help (described below and in the User's Guide).

Getting Key Help

When you press the front-panel Help button:

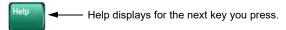

The "key help" includes a description of the key's functionality and a list of equivalent SCPI commands (if they exist). This feature is especially useful if you are building a SCPI program based on front-panel key presses.

Use the cursor keys, Page Up, Page Down, and the RPG knob to scroll the help text. Then press Cancel to close the help window or press any other key to close the help window and execute that key.

For details on each key and for equivalent SCPI commands (if applicable), use the key help (described in User's Guide).

Getting Started with Remote Operation Troubleshooting

Troubleshooting

In each section of this document, there is information that is related to troubleshooting that topic, if applicable. Refer to those corresponding sections in this document as well as to the User's Guide, before using the diagnostics mode referred to in the Service Guide and in the caution below.

CAUTION

All X-Series signal generators have a fail-safe and diagnostic mode that should only be used if all other troubleshooting mentioned in this document has been attempted and failed. If the diagnostic mode is determined to be needed, refer to the Service Guide.

NOTE

If the LAN Reset hardkey has been pressed and then the power is cycled on the instrument, the web-server will be enabled after reboot.

Error Messages

If an error condition occurs in the signal generator, it is reported to both the SCPI (remote interface) error queue and the front panel display error queue. These two queues are viewed and managed separately; for information on the front panel display error queue, refer to the User's Guide.

NOTE

For additional general information on troubleshooting problems with your connections, refer to the Help in the Keysight IO Libraries and documentation.

When accessing error messages using the SCPI (remote interface) error queue, the error numbers and the <error_description> portions of the error query response are displayed on the host terminal.

Characteristic	SCPI Remote Interface Error Queue			
Capacity (#errors)	30			
Overflow Handling	Linear, first-in/first-out. Replaces newest error with: -350, Queue overflow			
Viewing Entries ^a	Use SCPI query SYSTem: ERRor[:NEXT]?			
Clearing the Queue ^b	Power up Send a *CLS command Read last item in the queue			
Unresolved Errors ^c	Re-reported after queue is cleared.			
No Errors	When the queue is empty (every error in the queue has been read, or the queue is cleared), the following message appears in the queue: +0, "No error"			

- a. Using this SCPI command to read out the error messages clears the display of the ERR annunciator and the error message at the bottom of the screen.
- b. Executing the SCPI command *CLS clears the display of the ERR annunciator and the error message at the bottom of the screen.
- c. Errors that still exist after clearing the error queue. For example, unlock.

Error Message File

A complete list of error messages is provided in the file **errormessages.pdf**, on the CD-ROM supplied with your instrument. In the error message list, an explanation is generally included with each error to further clarify its meaning. The error messages are listed numerically. In cases where there are multiple listings for the same error number, the messages are in alphabetical order.

Error Message Types

Events generate only one type of error. For example, an event that generates a query error will not generate a device-specific, execution, or command error.

Query Errors (-499 to -400) indicate that the instrument's output queue control has detected a problem with the message exchange protocol described in IEEE 488.2, Chapter 6. Errors in this class set the query error bit (bit 2) in the event status register (IEEE 488.2, section 11.5.1). These errors correspond to message exchange protocol errors described in IEEE 488.2, 6.5. In this case:

- Either an attempt is being made to read data from the output queue when no output is either present or pending, or
- data in the output queue has been lost.

Device Specific Errors (-399 to -300, 201 to 703, and 800 to 810) indicate that a device operation did not properly complete, possibly due to an abnormal hardware or firmware condition. These codes are also used for self-test response errors. Errors in this class set the device-specific error bit (bit 3) in the event status register (IEEE 488.2, section 11.5.1).

The <error_message> string for a **positive** error is not defined by SCPI. A positive error indicates that the instrument detected an error within the GPIB system, within the instrument's firmware or hardware, during the transfer of block data, or during calibration.

Execution Errors (-299 to -200) indicate that an error has been detected by the instrument's execution control block. Errors in this class set the execution error bit (bit 4) in the event status register (IEEE 488.2, section 11.5.1). In this case:

- Either a <PROGRAM DATA> element following a header was evaluated by the device as outside of its legal input range or is otherwise inconsistent with the device's capabilities, or
- a valid program message could not be properly executed due to some device condition.

Execution errors are reported **after** rounding and expression evaluation operations are completed. Rounding a numeric data element, for example, is not reported as an execution error.

Command Errors (-199 to -100) indicate that the instrument's parser detected an IEEE 488.2 syntax error. Errors in this class set the command error bit (bit 5) in the event status register (IEEE 488.2, section 11.5.1). In this case:

- Either an IEEE 488.2 syntax error has been detected by the parser (a control-to-device message was received that is in violation of the IEEE 488.2 standard. Possible violations include a data element that violates device listening formats or whose type is unacceptable to the device.), or
- an unrecognized header was received. These include incorrect device-specific headers and incorrect or unimplemented IEEE 488.2 common commands.

Getting Started with Remote Operation Error Messages

Keysight Technologies X-Series Signal Generators

Programming Guide

2 Using IO Interfaces

Using the programming examples with GPIB, LAN, and USB interfaces:

- Using GPIB on page 36
- Using LAN on page 42
- Using USB on page 58



Using GPIB

GPIB enables instruments to be connected together and controlled by a computer. GPIB and its associated interface operations are defined in the ANSI/IEEE Standard 488.1–1987 and ANSI/IEEE Standard 488.2–1992. See the IEEE website, http://www.ieee.org, for details on these standards.

The following sections contain information for installing a GPIB interface card or NI-GPIB interface card for your PC or UNIX-based system.

- "Installing the GPIB Interface" on page 36
- "Set Up the GPIB Interface" on page 38
- "Verify GPIB Functionality" on page 38

Installing the GPIB Interface

NOTE

You can also connect GPIB instruments to a PC USB port using the Keysight 82357A USB/GPIB Interface Converter, which eliminates the need for a GPIB card. For more information, refer to the table on page 36 or go to http://www.keysight.com/find/gpib.

A GPIB interface card can be installed in a computer. Two common GPIB interface cards are the Keysight GPIB interface card and the National Instruments (NI) PCI-GPIB card. Follow the interface card instructions for installing and configuring the card. The following table provide lists on some of the available interface cards. Also, see the Keysight website, http://www.keysight.com for details on GPIB interface cards.

Interface Type	Operating System	IO Library	Languages	Backplane/ BUS	Max IO (kB/sec)	Buffering	
USB/GPIB Inte	USB/GPIB Interface Converter for PC-Based Systems						
Keysight 82357A Converter	Windows 98(SE)/ME/ 2000/XP	VISA / SICL	C/C++, Visual Basic, Keysight VEE, HP Basic for Windows, NI Labview	USB 2.0 (1.1 compatible)	850	Built-in	
GPIB Interface	GPIB Interface Card for PC-Based Systems						
Keysight 82341C for ISA bus computers	Windows 95/98/NT /2000	VISA / SICL	C/C++, Visual Basic, Keysight VEE, HP Basic for Windows	ISA/EISA, 16 bit	750	Built-in	
Keysight 82341D Plug&Play for PC	Windows 95	VISA / SICL	C/C++, Visual Basic, Keysight VEE, HP Basic for Windows	ISA/EISA, 16 bit	750	Built-in	

Interface Type	Operating System	IO Library	Languages	Backplane/ BUS	Max IO (kB/sec)	Buffering
USB/GPIB Inte	erface Converter	for PC-Based	l Systems			
Keysight 82350A for PCI bus computers	Windows 95/98/NT /2000	VISA / SICL	C/C++, Visual Basic, Keysight VEE, HP Basic for Windows	PCI 32 bit	750	Built-in
Keysight 82350B for PCI bus computers	Windows 98(SE)/ME/200 0/XP	VISA / SICL	C/C++, Visual Basic, Keysight VEE, HP Basic for Windows	PCI 32 bit	> 900	Built-in


NI-GPIB Interface Card for PC-Based Systems						
National Instruments PCI-GPIB	Windows 95/98/2000/ ME/NT	VISA NI-488.2 ^a	C/C++, Visual BASIC, LabView	PCI 32 bit	1.5 MBps	Built-in
National Instruments PCI-GPIB+	Windows NT	VISA NI-488.2	C/C++, Visual BASIC, LabView	PCI 32 bit	1.5 MBps	Built-in
GPIB Interface	GPIB Interface Card for HP-UX Workstations					
Keysight E2071C	HP-UX 9.x, HP-UX 10.01	VISA/SICL	ANSI C, Keysight VEE, HP BASIC, HP- UX	EISA	750	Built-in
Keysight E2071D	HP-UX 10.20	VISA/SICL	ANSI C, Keysight VEE, HP BASIC, HP– UX	EISA	750	Built-in
Keysight E2078A	HP-UX 10.20	VISA/SICL	ANSI C, Keysight VEE, HP BASIC, HP– UX	PCI	750	Built-in

a. NI-488.2 is a trademark of National Instruments Corporation.

Set Up the GPIB Interface

Enter the GPIB address as shown in Figure 2-1.

Figure 2-1 Setting the GPIB Address

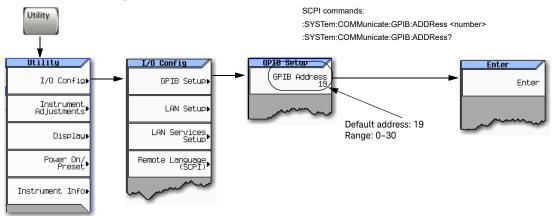

For details on each key, use the key help. Refer to "Getting Key Help" on page 30 and the User's Guide. For additional SCPI command information, refer to the SCPI Command Reference.

Connect a GPIB interface cable between the signal generator and the computer. (The following table lists cable part numbers.)

Model	10833A	10833B	10833C	10833D	10833F	10833G
Length	1 meter	2 meters	4 meters	.5 meter	6 meters	8 meters

Verify GPIB Functionality

To verify GPIB functionality, use the VISA Assistant, available with the Keysight IO Library or the Getting Started Wizard available with the National Instrument IO Library. These utility programs enable you to communicate with the signal generator and verify its operation over GPIB. For information and instructions on running these programs, refer to the Help menu available in each utility.

If You Have Problems

- 1. Verify that the signal generator's address matches the address declared in the program (example programs in Chapter 3).
- 2. Remove all other instruments connected through GPIB and rerun the program.
- **3.** Verify that the GPIB card's name or id number matches the GPIB name or id number configured for your PC.

GPIB Interface Terms

An instrument that is part of a GPIB network is categorized as a listener, talker, or controller, depending on its current function in the network.

listener A listener is a device capable of receiving data or

commands from other instruments. Several instruments in the GPIB network can be listeners simultaneously.

talker A talker is a device capable of transmitting data. To

avoid confusion, a GPIB system allows only one device

at a time to be an active talker.

controller A controller, typically a computer, can specify the talker

and listeners (including itself) for an information transfer. Only one device at a time can be an active

controller.

GPIB Programming Interface Examples

NOTE

The portions of the programming examples discussed in this section are taken from the full text of these programs that can be found in Chapter 3, "Programming Examples."

- "Interface Check using HP Basic and GPIB" on page 40
- "Interface Check Using NI-488.2 and C++" on page 41

Before Using the GPIB Examples

If the Keysight GPIB interface card is used, the Keysight VISA library should be installed along with Keysight SICL. If the National Instruments PCI-GPIB interface card is used, the NI-VISA library along with the NI-488.2 library should be installed. Refer to "Selecting IO Libraries for GPIB" on page 21 and the documentation for your GPIB interface card for details.

HP Basic addresses the signal generator at 719. The GPIB card is addressed at 7 and the signal generator at 19. The GPIB address designator for other libraries is typically GPIB0 or GPIB1.

The following sections contain HP Basic and C++ lines of programming removed from the programming interface examples in **Chapter 3**, **"Programming Examples."** these portions of programming demonstrate the important features to consider when developing programming for use with the GPIB interface.

Interface Check using HP Basic and GPIB

This portion of the example program "Interface Check using HP Basic and GPIB" on page 40, causes the signal generator to perform an instrument reset. The SCPI command *RST places the signal generator into a pre-defined state and the remote annunciator (R) appears on the front panel display.

The following program example is available on the signal generator Documentation CD–ROM as basicex1.txt. For the full text of this program, refer to "Interface Check using HP Basic and GPIB" on page 72 or to the signal generator's documentation CD–ROM.

```
160
      Sig_gen=719
                     ! Declares a variable to hold the signal
generator's address
170
     LOCAL Sig gen ! Places the signal generator into Local mode
     CLEAR Sig_gen ! Clears any pending data I/O and resets the
180
parser
190
      REMOTE 719
                     ! Puts the signal generator into remote mode
200
     CLEAR SCREEN
                   ! Clears the controllers display
210
     REMOTE 719
```

```
220 OUTPUT Sig_gen;"*RST" ! Places the signal generator into a defined state
```

Interface Check Using NI-488.2 and C++

This portion of the example program "Interface Check Using NI–488.2 and C++" on page 41, uses the NI–488.2 library to verify that the GPIB connections and interface are functional.

The following program example is available on the signal generator Documentation CD-ROM as niex1.cpp. For the full text of this program, refer to "Interface Check Using NI-488.2 and C++" on page 73 or to the signal generator's documentation CD-ROM.

```
#include "stdafx.h"
#include <iostream>
#include "windows.h"
#include "Decl-32.h"
using namespace std;
int GPIB0=
            0;
                     // Board handle
Addr4882 t Address[31]; // Declares an array of type Addr4882 t
int main(void)
{
    int sig;
                                    // Declares a device descriptor
variable
     sig = ibdev(0, 19, 0, 13, 1, 0); // Aquires a device descriptor
    ibclr(sig);
                                     // Sends device clear message
to signal generator
    ibwrt(sig, "*RST", 4);
                                   // Places the signal generator
into a defined state
```

Using LAN

The signal generator can be remotely programmed through a 100Base-T LAN interface or 10Base-T LAN interface and LAN-connected computer using one of several LAN interface protocols. The LAN allows instruments to be connected together and controlled by a LAN-based computer. LAN and its associated interface operations are defined in the IEEE 802.2 standard. For more information refer to **http://www.ieee.org**.

NOTE

For more information on configuring your signal generator for LAN, refer to the User's Guide for your signal generator. You can also refer to www.keysight.com and search on the FAQs: Hardware Configurations and Installation.

The signal generator supports the following LAN interface protocols:

- VXI-11 (See page 50)
- Sockets LAN (See page 51)
- Telephone Network (TELNET) (See page 52)
- File Transfer Protocol (FTP) (See page 56)
- LXI

VXI-11 and sockets LAN are used for general programming using the LAN interface, TELNET is used for interactive, one command at a time instrument control, and FTP is for file transfer. LXI is used to communicate with multiple instruments through LAN events using precision time protocols.

For more information on the LXI standards, refer to www.keysight.com/find/lxi.

NOTE

For more information on configuring the signal generator to communicate over the LAN, refer to "Using VXI-11" on page 50.

The following sections contain information on selecting and connecting IO libraries and LAN interface hardware that are required to remotely program the signal generator through LAN to a LAN-based computer and combining those choices with one of several possible LAN interface protocols.

- "Setting Up the LAN Interface" on page 43
- "Verifying LAN Functionality" on page 46

Setting Up the LAN Interface


For LAN operation, the signal generator must be connected to the LAN, and an IP address must be assigned to the signal generator either manually or by using DHCP client service. Your system administrator can tell you which method to use. (Most modern LAN networks use DHCP.)

NOTE

Verify that the signal generator is connected to the LAN using a 100Base-T LAN or 10Base-T LAN cable.

Configuring the VXI-11 Service

To communicate with the signal generator over the LAN, you must enable the VXI-11 SCPI service. Select VXI-11 until On is highlighted. (Default condition is On.)

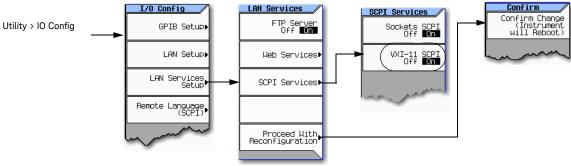

NOTE

For optimum performance, use a 100Base-T LAN cable to connect the signal generator to the LAN.


For details on each key or for a list of equivalent SCPI commands, use the front-panel key help. For information describing the key help, refer to "Getting Key Help" on page 30 and the User's Guide. For additional SCPI command information, refer to the SCPI Command Reference.

Manual LAN Configuration

The **Hostname** softkey is only available when **LAN Config Manual DHCP** is set to **Manual**.

To remotely access the signal generator from a different LAN subnet, you must also enter the subnet mask and default gateway. See your system administrator for more information.

Manual LAN Configuration Sequence

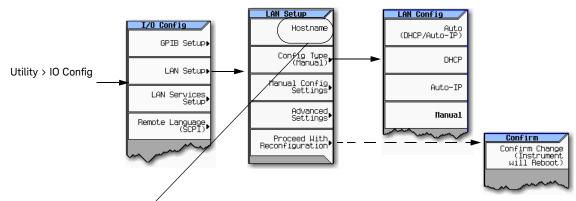

Your hostname can be up to 20 characters long.

SCPI commands:

- :SYSTem:COMMunicate:LAN:CONFig MANual
- :SYSTem:COMMunicate:LAN:CONFig?

For details on each key, use the key help (described in User's Guide). For additional SCPI command information, refer to the SCPI Command Reference.

DHCP LAN Configuration

If the DHCP server uses dynamic DNS to link the hostname with the assigned IP address, the hostname may be used in place of the IP address. Otherwise, the hostname is not usable.

AUTO (DHCP/Auto-IP) Configuration

DHCP and Auto-IP are used together to make automatic (AUTO) mode for IP configuration. Automatic mode attempts DHCP first and then if that fails Auto-IP is used to detect a private network. If neither is found, Manual is the final choice.

If the DHCP server uses dynamic DNS to link the hostname with the assigned IP address, the hostname may be used in place of the IP address. Otherwise, the hostname is not usable.


Auto-IP provides automatic TCP/IP set-up for instruments on any manually configured networks.

DHCP/Auto-IP LAN Configuration Sequence

AUTO (DHCP/Auto-IP): Request a new IP address in the following sequence: 1) from the DHCP (server-based LAN), 2) Auto-IP (private network without a network administrator) or if neither is available, 3) Manual setting is selected.

DHCP (MXG-A models only): Request a new IP address from the DHCP server each power cycle.

Confirming this action configures the signal generator as a DHCP client. In DHCP mode, the signal generator will request a new IP address from the DHCP server upon rebooting to determine the assigned IP address.

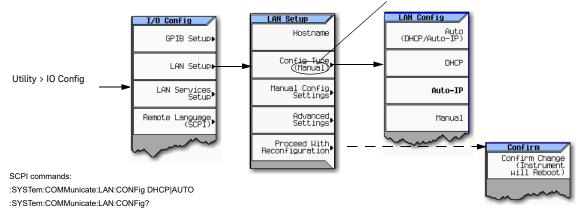

For details on each key, use the key help (described in User's Guide). For additional SCPI command information, refer to the SCPI Command Reference.

Setting up Private LAN

You can connect the Keysight X-Series signal generator directly to a PC using a crossover cable. To do this, you should either choose to set IP addresses of the PC and signal generator to differ only in the last digit (example: PC's IP: 1.1.1.1 and Signal generator's IP: 1.1.1.2); or you can use the DHCP feature or Auto-IP feature if your PC supports them. For more information go to www.keysight.com, and search on the Connectivity Guide (E2094–90009) or use the Keysight Connection Expert's Help to see the Connection Guide.

Verifying LAN Functionality

Verify the communications link between the computer and the signal generator remote file server using the ping utility. Compare your ping response to those described in "LAN Ping Responses" on page 46.

NOTE

For additional information on troubleshooting your LAN connection, refer to "If You Have Problems" on page 46 and to the Help in the Keysight IO Libraries and documentation for LAN connections and problems.

From a UNIX workstation, type:

```
ping <hostname or IP address> 64 10
```

where <hostname or IP address> is your instrument's name or IP address, 64 is the packet size, and 10 is the number of packets transmitted. Type man ping at the UNIX prompt for details on the ping command.

From the MS-DOS Command Prompt or Windows environment, type:

```
ping -n 10 <hostname or IP address>
```

where <hostname or IP address> is your instrument's name or IP address and 10 is the number of echo requests. Type ping at the command prompt for details on the ping command.

NOTE

In DHCP mode, if the DHCP server uses dynamic DNS to link the hostname with the assigned IP address, the hostname may be used in place of the IP address. Otherwise, the hostname is not usable and you must use the IP address to communicate with the signal generator over the LAN.

If You Have Problems

If you are experiencing problems with the LAN connection on the signal generator, verify the rear panel LAN connector green LED is on.

For additional information on troubleshooting your LAN connection, refer to the Help in the Keysight IO Libraries and documentation for LAN connections and problems.

LAN Ping Responses

Normal Response for UNIX	A normal response to the ping command will be a total of 9 or 10 packets received with a minimal average round-trip time. The minimal average will be different from network to network. LAN traffic will cause the round-trip time to vary widely.
Normal Response for DOS or Windows	A normal response to the ping command will be a total of 9 or 10 packets received if 10 echo requests were specified.

Error Messages	If error messages appear, then check the command syntax before continuing with troubleshooting. If the syntax is correct, resolve the error messages using your network documentation or by consulting your network administrator.
	If an unknown host error message appears, try using the IP address instead of the hostname. Also, verify that the host name and IP address for the signal generator have been registered by your IT administrator.
	Check that the hostname and IP address are correctly entered in the node names database. To do this, enter the nslookup <hostname> command from the command prompt.</hostname>
No Response	If there is no response from a ping, no packets were received. Check that the typed address or hostname matches the IP address or hostname assigned to the signal generator in the System LAN Setup menu. For more information, refer to "DHCP/Auto-IP LAN Configuration Sequence" on page 45.
	Ping each node along the route between your workstation and the signal generator, starting with your workstation. If a node doesn't respond, contact your IT administrator.
	If the signal generator still does not respond to ping, you should suspect a hardware problem.
	 Check the signal generator LAN connector lights Verify the hostname is not being used with DHCP addressing
Intermittent Response	If you received 1 to 8 packets back, there maybe a problem with the network. In networks with switches and bridges, the first few pings may be lost until these devices 'learn' the location of hosts. Also, because the number of packets received depends on your network traffic and integrity, the number might be different for your network. Problems of this nature are best resolved by your IT department.

Using Interactive IO

Use the VISA Assistant utility available in the Keysight IO Libraries Suite to verify instrument communication over the LAN interface. Refer to the section on the "IO Libraries and Programming Languages" on page 16 for more information.

The Keysight IO Libraries Suite is supported on all platforms except Windows NT. If you are using Windows NT, refer to the section below on using the VISA Assistant to verify LAN communication. See the section on "Windows NT and Keysight IO Libraries M (and Earlier)" on page 19 for more information.

NOTE

The following sections are specific to Keysight IO Libraries versions M and earlier and apply only to the Windows NT platform.

Using VISA Assistant

Use the VISA Assistant, available with the Keysight IO Library versions M and earlier, to communicate with the signal generator over the LAN interface. However, you must manually configure the VISA LAN client. Refer to the Help menu for instructions on configuring and running the VISA Assistant program.

- 1. Run the IO Config program.
- 2. Click on TCPIPO in the Available Interface Types text box.
- 3. Click the Configure button. Then Click OK to use the default settings.
- **4.** Click on **TCPIP0** in the Configured Interfaces text box.
- 5. Click Edit...
- 6. Click the Edit VISA Config... button.
- 7. Click the Add device button.
- **8.** Enter the TCPIP address of the signal generator. Leave the Device text box empty.
- **9.** Click the **OK** button in this form and all subsequent forms to exit the IO Config program.


If You Have Problems

- 1. Verify the signal generator's IP address is valid and that no other instrument is using the IP address.
- 2. Switch between manual LAN configuration and DHCP using the front panel LAN Config softkey and run the ping program using the different IP addresses.

NOTE

For Keysight IO Libraries versions M and earlier, you must manually configure the VISA LAN client in the IO Config program if you want to use the VISA Assistant to verify LAN configuration. Refer to the IO Libraries Installation Guide for information on configuring IO interfaces. The IO Config program interface is shown in Figure 2-3 on page 51.

Figure 2-2 IO Config Form (Windows NT)

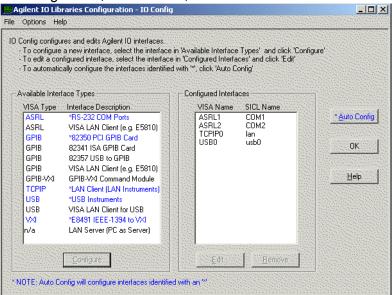

Check to see that the Default Protocol is set to Automatic.

- 1. Run the IO Config program.
- 2. Click on TCPIP in the Configured Interfaces text box. If there is no TCPIPO in the box, follow the steps shown in the section "Using VISA Assistant" on page 48.
- 3. Click the Edit button.
- 4. Click the radio button for AUTO (automatically detect protocol).
- 5. Click **OK**, **OK** to end the IO Config program.

Using IO Interfaces
Using LAN

Using VXI-11

The signal generator supports the LAN interface protocol described in the VXI–11 standard. VXI–11 is an instrument control protocol based on Open Network Computing/Remote Procedure Call (ONC/RPC) interfaces running over TCP/IP. It is intended to provide GPIB capabilities such as SRQ (Service Request), status byte reading, and DCAS (Device Clear State) over a LAN interface. This protocol is a good choice for migrating from GPIB to LAN as it has full Keysight VISA/SICL support.

NOTE

It is recommended that the VXI–11 protocol be used for instrument communication over the LAN interface.

Configuring for VXI-11

The Keysight IO library has a program, IO Config, that is used to setup the computer/signal generator interface for the VXI–11 protocol. Download the latest version of the Keysight IO library from the Keysight website. Refer to the Keysight IO library user manual, documentation, and Help menu for information on running the IO Config program and configuring the VXI–11 interface.

Use the IO Config program to configure the LAN client. Once the computer is configured for a LAN client, you can use the VXI–11 protocol and the VISA library to send SCPI commands to the signal generator over the LAN interface. Example programs for this protocol are included in "LAN Programming Interface Examples" on page 115 of this programming guide.

NOTE

To communicate with the signal generator over the LAN interface you must enable the VXI-11 SCPI service. For more information, refer to "DHCP/Auto-IP LAN Configuration Sequence" on page 45.

If you are using the Windows NT platform, refer to "Windows NT and Keysight IO Libraries M (and Earlier)" on page 19 for information on using Keysight IO Libraries versions M or earlier to configure the interface.

For Keysight IO library version J.01.0100, the "Identify devices at runtime" check box must be unchecked. Refer to Figure 2-3.

Figure 2-3 Show Devices Form (Keysight IO Library version J.01.0100)



Using Sockets LAN

NOTE

Users with Windows XP operating systems and newer can use this section to better understand how to use the signal generator with port settings. For more information, refer to the help software of the IO libraries being used.

Sockets LAN is a method used to communicate with the signal generator over the LAN interface using the Transmission Control Protocol/Internet Protocol (TCP/IP). A socket is a fundamental technology used for computer networking and allows applications to communicate using standard mechanisms built into network hardware and operating systems. The method accesses a port on the signal generator from which bidirectional communication with a network computer can be established.

Sockets LAN can be described as an internet address that combines Internet Protocol (IP) with a device port number and represents a single connection between two pieces of software. The socket can be accessed using code libraries packaged with the computer operating system. Two common versions of socket libraries are the Berkeley Sockets Library for UNIX systems and Winsock for Microsoft operating systems.

Your signal generator implements a sockets Applications Programming Interface (API) that is compatible with Berkeley socket for UNIX systems, and Winsock for Microsoft systems. The signal generator is also compatible with other standard sockets APIs. The signal generator can be controlled using SCPI commands that are output to a socket connection established in your program.

Before you can use sockets LAN, you must select the signal generator's sockets port number to use:

Using IO Interfaces
Using LAN

- Standard mode. Available on port 5025. Use this port for simple programming.
- TELNET mode. The telnet SCPI service is available on port 5024.

NOTE

The default telnet port is 5024. Telnet port 5023 is still available for backwards compatibility. Refer to the SCPI Command Reference.

An example using sockets LAN is given in "LAN Programming Interface Examples" on page 115 of this programming guide.

Using Telnet LAN

Telnet provides a means of communicating with the signal generator over the LAN. The Telnet client, run on a LAN connected computer, will create a login session on the signal generator. A connection, established between computer and signal generator, generates a user interface display screen with SCPI> prompts on the command line.

Using the Telnet protocol to send commands to the signal generator is similar to communicating with the signal generator over GPIB. You establish a connection with the signal generator and then send or receive information using SCPI commands. Communication is interactive: one command at a time.

NOTE

Some systems use a command prompt style interface for the Telnet client. Refer to the Figure 2-6 on page 54 for an example of this interface.

For Windows XP and newer, use this section to better understand how to use the signal generator with port settings. For more information, refer to the help software of the IO libraries being used.

For Windows 7, Telnet functionality is disabled by default. To enable Telnet, got to **Start > Control Panel > Programs and Features > Turn Windows features on or off** and select the **Telnet Client** checkbox. Click **OK** and restart your PC.

The following telnet LAN connections are discussed:

- "Using Telnet On a PC With a Host/Port Setting Menu GUI" on page 53
- "Using Telnet On a PC With a Command Prompt Interface" on page 53
- "The Standard UNIX Telnet Command" on page 54

A Telnet example is provided in "Unix Telnet Example" on page 56.

Using Telnet On a PC With a Host/Port Setting Menu GUI

- 1. Launch either the Start Menu's Command Prompt or Run utility.
- 2. Type Telnet and press the Enter key (Command Prompt) or click OK (Run utility). The Telnet connection screen will be displayed.
- **3.** Click on the **Connect** menu then select **Remote System**. A connection form is displayed. See Figure 2-4.
- 4. Enter the hostname, port number, and TermType then click Connect.
 - Host Name-signal generator's IP address or hostname
 - Port-5024
 - Term Type-vt100
- **5.** At the SCPI> prompt, enter SCPI commands. Refer to Figure 2-5 on page 53.
- 6. To signal device clear, press Ctrl-C.
- 7. Select Exit from the Connect menu to end the Telnet session.
- Figure 2-4 Connect Form (Keysight IO Library version J.01.0100)


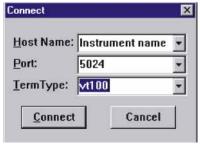


Figure 2-5 Telnet Window

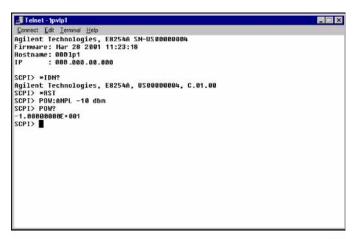


Using Telnet On a PC With a Command Prompt Interface

1. Launch either the Start Menu's Command Prompt or Run utility.

- 2. Type Telnet and press the Enter key (Command Prompt) or click OK (Run utility). The Telnet client screen will be displayed. See Figure 2-6 on page 54.
- **3.** Type open at the prompt and then press the **Enter** key. The prompt will change to (to).
- **4.** At the (to) prompt, enter the signal generator's IP address followed by a space and 5024, which is the Telnet port associated with the signal generator.
- **5.** At the SCPI> prompt, enter SCPI commands.
- **6.** To escape from the SCPI> session type Ctrl-].
- 7. Type quit at the prompt to end the Telnet session.

Figure 2-6 Telnet Command Prompt Window

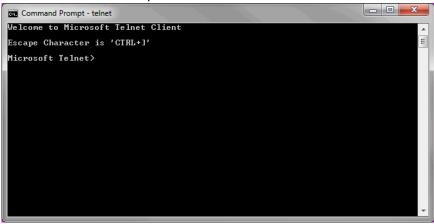

The Standard UNIX Telnet Command

Synopsis

telnet[host[port]]

Description

This command is used to communicate with another host using the Telnet protocol. When the command telnet is invoked with host or port arguments, a connection is opened to the host, and

Using IO Interfaces
Using LAN

input is sent from the user to the host.

Options and Parameters

The command telnet operates in character—at—a—time or line—by—line mode. In line—by—line mode, typed text is echoed to the screen. When the line is completed (by pressing the **Enter** key), the text line is sent to host. In character—at—a—time mode, text is echoed to the screen and sent to host as it is typed. At the UNIX prompt, type man telnet to view the options and parameters available with the telnet command.

NOTE

If your Telnet connection is in line-by-line mode, there is no local echo. This means you cannot see the characters you are typing until you press the **Enter** key. To remedy this, change your Telnet connection to character-by-character mode. Escape out of Telnet, and at the telnet> prompt, type mode char. If this does not work, consult your Telnet program's documentation.

Unix Telnet Example

To connect to the instrument with host name myInstrument and port number 5024, enter the following command on the command line: telnet myInstrument 5024.

When you connect to the signal generator, the UNIX window will display a welcome message and a SCPI command prompt. The instrument is now ready to accept your SCPI commands. As you type SCPI commands, query results appear on the next line. When you are done, break the Telnet connection using an escape character. For example, Ctrl-1, where the control key and the pressed at the same time. The following example shows Telnet commands:

```
$ telnet myinstrument 5024
Trying...
Connected to signal generator
Escape character is '^]'.
Keysight Technologies, N51xx SN-US00000001
Firmware:
Hostname: your instrument
IP :xxx.xx.xxx.xxx
SCPI>
```


Using FTP

FTP allows users to transfer files between the signal generator and any computer connected to the LAN. For example, you can use FTP to download instrument screen images to a computer. When logged onto the signal generator with the FTP command, the signal generator's file structure can be accessed. Figure 2-7 shows the FTP interface and lists the directories in the signal generator's user level directory.

NOTE

File access is limited to the signal generator's /user directory.

Figure 2-7 FTP Screen

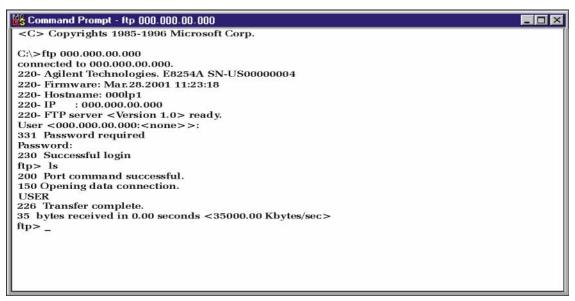

ce917a

The following steps outline a sample FTP session from the MS-DOS Command Prompt:

- 1. On the PC click Start > Programs > Command Prompt.
- 2. At the command prompt enter:

```
ftp < IP address > or < hostname >
```

- 3. At the user name prompt, press enter.
- 4. At the password prompt, press enter.

You are now in the signal generator's user directory. Typing help at the command prompt will show you the FTP commands that are available on your system.

- **5.** Type quit or bye to end your FTP session.
- **6.** Type exit to end the command prompt session.

Using USB

CAUTION

USB cables are not industrial graded and potentially allows data loss in noisy environments.

USB cables do not have a latching mechanism and the cables can be pulled out of the PC or instrument relatively easily.

The maximum length for USB cables is 30 m, including the use of inline repeaters.

NOTE

The USB 2.0 interface supports USBTMC or USBTMC-USB488 specifications.

For more information on connecting instruments to the USB, refer to the Keysight Connection Expert in the Keysight IO Libraries Help.

USB 2.0 connectors can be used to communicate with the signal generator. N51xxB EXG/MXG signal generators are equipped with a Type-B rear panel connector (device USB). Use a Type-A to Mini-USB 5 pin cable to connect the signal generator to the computer (Refer to "Setting Up the USB Interface" on page 59). Connect the Type-A front panel connector (host USB) can be used to connect a mouse, a keyboard, or a USB 1.1/2.0 flash drive (USB media). (Refer to the User's Guide.) ARB waveform encryption of proprietary information is supported. Many functions provided by GPIB, including GET, non-SCPI remote languages, and remote mode are available using the USB interface.

NOTE

For a list of compatible flash drives to use with the USB external interface. Refer to http://www.keysight.com/find/mxg.

Do not use the front panel USB (Type-A) connector to connect to a computer.

The following sections contain information on selecting and connecting I/O libraries and the USB interface that are required to remotely program the signal generator through the computer and combining those choices with one of several possible USB interface protocols.

- "Selecting I/O Libraries for USB" on page 59
- "Setting Up the USB Interface" on page 59
- "Verifying USB Functionality" on page 60

Selecting I/O Libraries for USB

CAUTION

The Keysight X-Series USB interface requires Keysight IO Libraries Suite 14.1 or newer to run properly. For more information on connecting instruments to the USB, refer to the Keysight Connection Expert in the Keysight IO Libraries Help.

The I/O libraries can be downloaded from the National Instrument website, **http://www.ni.com**, or Keysight's website, **http://www.keysight.com**. The following is a discussion on these libraries.

NOTE

I/O applications such as IVI-COM or VXIplug&play can be used in place of VISA.

VISA	VISA is an I/O library used to develop I/O applications and instrument drivers that comply with industry standards. It is recommended that the VISA library be used for programming the signal generator. The NI–VISA and Keysight VISA libraries are similar implementations of VISA and have the same commands, syntax, and functions. The differences are in the lower level I/O libraries used to communicate over the USB; NI–488.2 and SICL respectively.
NI-488.2	NI-488.2 I/O libraries can be used to develop applications for the USB interface. See National Instrument's website for information on NI-488.2.
SICL	Keysight SICL can be used to develop applications for the USB interface. See Keysight's website for information on SICL.

CAUTION

Because of the potential for portability problems, running Keysight SICL without the VISA overlay is **not** recommended by Keysight Technologies.

Setting Up the USB Interface

Rear Panel Interface (Mini-B 5 pin)

To use USB, connect the USB cable (Refer to Table 2-1, "USB Interface Cable," on page 60, for USB cable information.) between the computer and the signal generator's rear panel Mini-B 5-pin USB connector.

Table 2-1 USB Interface Cable

Quantity	Description	Keysight Part Number
1	USB cable Mini-B 5 pin to Type-A	82357-61601

Front Panel USB (Type-A)

For details on using the front panel USB (Type-A) and the front panel USB Media operation, refer to the User's Guide.

Verifying USB Functionality

Mini-B 5 Pin Rear Panel Connector

NOTE

For information on verifying your Mini-B 5 pin USB (rear panel) functionality, refer to the Keysight Connection Expert in the Keysight IO Libraries Help. The Keysight IO libraries are included with your signal generator or Keysight GPIB interface board, or they can be downloaded from the Keysight website: http://www.keysight.com.

Type-A Front Panel USB Connector

For details on using the front panel USB (Type-A) and the front panel USB Media operation, refer to the User's Guide.

Keysight Technologies X-Series Signal Generators

Programming Guide

3 Programming Examples

- Using the Programming Interface Examples on page 62
- GPIB Programming Interface Examples on page 68
- LAN Programming Interface Examples on page 115



Using the Programming Interface Examples

The programming examples for remote control of the signal generator use the GPIB and LAN interfaces and demonstrate instrument control using different IO libraries and programming languages. Many of the example programs in this chapter are interactive; the user will be prompted to perform certain actions or verify signal generator operation or functionality. Example programs are written in the following languages:

HP Basic C#

C/C++ Microsoft Visual Basic 6.0

Java MATLAB

Perl

These example programs are also available on the signal generator Documentation CD-ROM, enabling you to cut and paste the examples into a text editor.

NOTE

The example programs set the signal generator into remote. Press the **Keysight MXG Local/Esc/Cancel** key to revert to manual operation.

To have the signal generator's front panel update with changes caused by remote operations, enable the signal generator's Update in Remote function.

NOTE

The Update in Remote function will slow test execution. For faster test execution, disable the Update in Remote function. For more information, refer to or "Configuring the Display for Remote Command Setups" on page 30.

Programming Examples Development Environment

The C/C++ examples were written using an IBM-compatible personal computer (PC), configured as follows:

- Pentium processor (Pentium is a registered trademark of Intel Corporation.)
- Windows NT 4.0 operating system or later
- C/C++ programming language with the Microsoft Visual C++ 6.0 IDE
- National Instruments PCI-GPIB interface card or Keysight GPIB interface card
- National Instruments VISA Library or Keysight VISA library
- LAN interface card

The HP Basic examples were run on a UNIX 700 series workstation.

Programming Examples
Using the Programming Interface Examples

Running C++ Programs

When using Microsoft Visual C++ 6.0 to run the example programs, include the following files in your project.

When using the VISA library:

- add the visa32.lib file to the Resource Files
- add the visa.h file to the Header Files

When using the NI-488.2 library:

- add the GPIB-32.0BJ file to the Resource Files
- add the windows.h file to the Header Files
- add the Deci-32.h file to the Header Files

For information on the NI-488.2 library and file requirements refer to the National Instrument website. For information on the VISA library see the Keysight website or National Instrument's website.

NOTE

To communicate with the signal generator over the LAN interface you must enable the VXI-11 SCPI service. For more information, refer to "DHCP/Auto-IP LAN Configuration Sequence" on page 45.

C/C++ Examples

- "Interface Check for GPIB Using VISA and C" on page 75
- "Local Lockout Using NI-488.2 and C++" on page 78
- "Queries Using NI-488.2 and Visual C++" on page 82
- "Queries for GPIB Using VISA and C" on page 85
- "Generating a CW Signal Using VISA and C" on page 88
- "Generating an Externally Applied AC-Coupled FM Signal Using VISA and C" on page 91
- "Generating an Internal FM Signal Using VISA and C" on page 93
- "Generating a Step-Swept Signal Using VISA and C++" on page 96
- "Reading the Data Questionable Status Register Using VISA and C" on page 104
- "Reading the Service Request Interrupt (SRQ) Using VISA and C" on page 110
- "VXI-11 Programming Using SICL and C++" on page 116
- "VXI-11 Programming Using VISA and C++" on page 118
- "Sockets LAN Programming and C" on page 120

Running C# Examples

To run the example program **State_Files.cs** on page 367, you must have the .NET framework installed on your computer. You must also have the Keysight IO Libraries installed on your computer. The .NET framework can be downloaded from the Microsoft website. For more information on running C# programs using .NET framework, see **Chapter 6**.

NOTE

To communicate with the signal generator over the LAN interface you must enable the VXI-11 SCPI service. For more information, refer to "Configuring the VXI-11 Service" on page 43.

Running Basic Examples

The BASIC programming interface examples provided in this chapter use either HP Basic or Visual Basic 6.0 languages.

Visual Basic 6.0 Programming Examples

To run the example programs written in Visual Basic 6.0 you must include references to the IO Libraries. For more information on VISA and IO libraries, refer to the Keysight VISA User's Manual, available on Keysight's website: http://www.keysight.com. In the Visual Basic IDE (Integrated Development Environment) go to Project–References and place a check mark on the following references:

- Keysight VISA COM Resource Manager 1.0
- VISA COM 1.0 Type Library

NOTE

If you want to use VISA functions such as viWrite, then you must add the visa32.bas module to your Visual Basic project.

The signal generator's VXI-11 SCPI service must be on before you can run the Download Visual Basic 6.0 programming example.

NOTE

To communicate with the signal generator over the LAN interface you must enable the VXI-11 SCPI service. For more information, refer to "Configuring the VXI-11 Service" on page 43.

You can start a new Standard EXE project and add the required references. Once the required references are included, you can copy the example programs into your project and add a command button to Form1 that will call the program.

The example Visual Basic 6.0 programs are available on the signal generator Documentation CD-ROM, enabling you to cut and paste the examples into your project.

Visual Basic Examples

The Visual Basic examples enable the use of waveform files and are located in **Chapter 5**.

- "Creating I/Q Data—Little Endian Order" on page 301
- "Downloading I/Q Data" on page 304

HP Basic Examples

- "Interface Check using HP Basic and GPIB" on page 72
- "Local Lockout Using HP Basic and GPIB" on page 76
- "Queries Using HP Basic and GPIB" on page 80

Running Java Examples

The Java program "Sockets LAN Programming Using Java" on page 150, connects to the signal generator through sockets LAN. This program requires Java version 1.1 or later be installed on your PC. For more information on sockets LAN programming with Java, refer to "Sockets LAN Programming Using Java" on page 150.

Programming Examples
Using the Programming Interface Examples

Running MATLAB Examples

For information regarding programming examples and files required to create and play waveform files, refer to Chapter 5.

NOTE

To communicate with the signal generator over the LAN interface you must enable the VXI-11 SCPI service. For more information, refer to "Configuring the VXI-11 Service" on page 43.

Running Perl Examples

The Perl example "Sockets LAN Programming Using Perl" on page 153, uses PERL script to control the signal generator over the sockets LAN interface.

Programming Examples Using GPIB

Using GPIB

GPIB enables instruments to be connected together and controlled by a computer. GPIB and its associated interface operations are defined in the ANSI/IEEE Standard 488.1-1987 and ANSI/IEEE Standard 488.2-1992. See the IEEE website, http://www.ieee.org, for details on these standards.

The following sections contain information for installing a GPIB interface card or NI-GPIB interface card for your PC or UNIX-based system.

"Installing the GPIB Interface Card" on page 67

For more information on setting up a GPIB interface card or NI-GPIB interface card, refer to:

- "Set Up the GPIB Interface" on page 38
- "Verify GPIB Functionality" on page 38

NOTE

You can also connect GPIB instruments to a PC USB port using the Keysight 82357A USB/GPIB Interface Converter, which eliminates the need for a GPIB card. For more information, go to http://www.keysight.com/find/gpib.

Installing the GPIB Interface Card

Refer to "Installing the GPIB Interface" on page 36.

GPIB Programming Interface Examples

- "Interface Check using HP Basic and GPIB" on page 72
- "Interface Check Using NI-488.2 and C++" on page 73
- "Interface Check for GPIB Using VISA and C" on page 75
- "Local Lockout Using HP Basic and GPIB" on page 76
- "Local Lockout Using NI-488.2 and C++" on page 78
- "Queries Using HP Basic and GPIB" on page 80
- "Queries Using NI-488.2 and Visual C++" on page 82
- "Queries for GPIB Using VISA and C" on page 85
- "Generating a CW Signal Using VISA and C" on page 88
- "Generating an Externally Applied AC-Coupled FM Signal Using VISA and C" on page 91
- "Generating an Internal FM Signal Using VISA and C" on page 93
- "Generating a Step-Swept Signal Using VISA and C++" on page 96
- "Generating a Swept Signal Using VISA and Visual C++" on page 98
- "Saving and Recalling States Using VISA and C" on page 101
- "Reading the Data Questionable Status Register Using VISA and C" on page 104
- "Reading the Service Request Interrupt (SRQ) Using VISA and C" on page 110

Before Using the GPIB Examples

HP Basic addresses the signal generator at 719. The GPIB card is addressed at 7 and the signal generator at 19. The GPIB address designator for other libraries is typically GPIB0 or GPIB1.

GPIB Function Statements (Command Messages)

Function statements are the basis for GPIB programming and instrument control. These function statements, combined with SCPI, provide management and data communication for the GPIB interface and the signal generator.

This section describes functions used by different IO libraries. For more information, refer to the NI-488.2 Function Reference Manual for Windows, Keysight Standard Instrument Control Library reference manual, and Microsoft Visual C++ 6.0 documentation.

Abort Function

The HP Basic function ABORT and the other listed IO library functions terminate listener/talker activity on the GPIB and prepare the signal generator to receive a new command from the computer. Typically, this is an initialization command used to place the GPIB in a known starting condition.

Library	Function Statement	Initialization Command
HP Basic	The ABORT function stops all GPIB activity.	10 ABORT 7

Library	Function Statement	Initialization Command
VISA Library	In VISA, the viTerminate command requests a VISA session to terminate normal execution of an asynchronous operation. The parameter list describes the session and job id.	viTerminate (parameter list)
NI-488.2	The NI-488.2 library function aborts any asynchronous read, write, or command operation that is in progress. The parameter ud is the interface or device descriptor.	ibstop(int ud)
SICL	The Keysight SICL function aborts any command currently executing with the session id. This function is supported with C/C++ on Windows 3.1 and Series 700 HP-UX.	iabort (id)

Remote Function

The HP Basic function REMOTE and the other listed IO library functions change the signal generator from local operation to remote operation. In remote operation, the front panel keys are disabled except for the **Local** key and the line power switch. Pressing the **Local** key restores manual operation.

Library	Function Statement	Initialization Command
HP Basic	The REMOTE 719 function disables the front panel operation of all keys with the exception of the Local key.	10 REMOTE 719
VISA Library	The VISA library, at this time, does not have a similar command.	N/A
NI-488.2	The NI-488.2 library function asserts the Remote Enable (REN) GPIB line. All devices listed in the parameter list are put into a listen-active state although no indication is generated by the signal generator. The parameter list describes the interface or device descriptor.	EnableRemote (parameter list)
SICL	The Keysight SICL function puts an instrument, identified by the id parameter, into remote mode and disables the front panel keys. Pressing the Local key on the signal generator front panel restores manual operation. The parameter id is the session identifier.	iremote (id)

Local Lockout Function

The HP Basic function LOCAL LOCKOUT and the other listed IO library functions disable the front panel keys including the **Local** key. With the **Local** key disabled, only the controller (or a hard reset of line power) can restore local control.

Library	Function Statement	Initialization Command
HP Basic	The LOCAL LOCKOUT function disables all front-panel signal generator keys. Return to local control can occur only by cycling power on the instrument, when the LOCAL command is sent or if the Preset key is pressed.	10 LOCAL LOCKOUT 719
VISA Library	The VISA library, at this time, does not have a similar command.	N/A
NI-488.2	The LOCAL LOCKOUT function disables all front-panel signal generator keys. Return to local control can occur only by cycling power on the instrument, when the LOCAL command is sent or if the Preset key is pressed.	SetRWLS (parameter list)
SICL	The Keysight SICL igpibllo prevents function prevents user access to front panel keys operation. The function puts an instrument, identified by the id parameter, into remote mode with local lockout. The parameter id is the session identifier and instrument address list.	igpibllo (id)

Local Function

The HP Basic function LOCAL and the other listed functions return the signal generator to local control with a fully enabled front panel.

Library	Function Statement	Initialization Command
HP Basic	The LOCAL 719 function returns the signal generator to manual operation, allowing access to the signal generator's front panel keys.	10 LOCAL 719
VISA Library	The VISA library, at this time, does not have a similar command.	N/A
NI-488.2	The NI-488.2 library function places the interface in local mode and allows operation of the signal generator's front panel keys. The ud parameter in the parameter list is the interface or device descriptor.	ibloc (int ud)
SICL	The Keysight SICL function puts the signal generator into Local operation; enabling front panel key operation. The id parameter identifies the session.	iloc (id)

Clear Function

The HP Basic function CLEAR and the other listed IO library functions clear the signal generator.

Library	Function Statement	Initialization Command
HP Basic	The CLEAR 719 function halts all pending output-parameter operations, resets the parser (interpreter of programming codes) and prepares for a new programming code, stops any sweep in progress, and turns off continuous sweep.	10 CLEAR 719
VISA Library	The VISA library uses the viClear function. This function performs an IEEE 488.1 clear of the signal generator.	viClear (ViSession vi)
NI-488.2	The NI-488.2 library function sends the GPIB Selected Device Clear (SDC) message to the device described by ud.	ibclr (int ud)
SICL	The Keysight SICL function clears a device or interface. The function also discards data in both the read and write formatted IO buffers. The id parameter identifies the session.	iclear (id)

Output Function

The HP Basic IO function OUTPUT and the other listed IO library functions put the signal generator into a listen mode and prepare it to receive ASCII data, typically SCPI commands.

Library	Function Statement	Initialization Command
HP Basic	The function OUTPUT 719 puts the signal generator into remote mode, makes it a listener, and prepares it to receive data.	10 OUTPUT 719
VISA Library	The VISA library uses the above function and associated parameter list to output data. This function formats according to the format string and sends data to the device. The parameter list describes the session id and data to send.	viPrintf (parameter list)
NI-488.2	The NI-488.2 library function addresses the GPIB and writes data to the signal generator. The parameter list includes the instrument address, session id, and the data to send.	ibwrt (parameter list)
SICL	The Keysight SICL function converts data using the format string. The format string specifies how the argument is converted before it is output. The function sends the characters in the format string directly to the instrument. The parameter list includes the instrument address, data buffer to write, and so forth.	iprintf (parameter list)

Enter Function

The HP Basic function ENTER reads formatted data from the signal generator. Other IO libraries use similar functions to read data from the signal generator.

Library	Function Statement	Initialization Command
HP Basic	The function ENTER 719 puts the signal generator into remote mode, makes it a talker, and assigns data or status information to a designated variable.	10 ENTER 719;
VISA Library	The VISA library uses the viScanf function and an associated parameter list to receive data. This function receives data from the instrument, formats it using the format string, and stores the data in the argument list. The parameter list includes the session id and string argument.	viScanf (parameter list)
NI-488.2	The NI-488.2 library function addresses the GPIB, reads data bytes from the signal generator, and stores the data into a specified buffer. The parameter list includes the instrument address and session id.	ibrd (parameter list)
SICL	The Keysight SICL function reads formatted data, converts it, and stores the results into the argument list. The conversion is done using conversion rules for the format string. The parameter list includes the instrument address, formatted data to read, and so forth.	iscanf (parameter list)

Interface Check using HP Basic and GPIB

This simple program causes the signal generator to perform an instrument reset. The SCPI command *RST places the signal generator into a pre-defined state and the remote annunciator (R) appears on the front panel display.

The following program example is available on the signal generator Documentation CD-ROM as basicex1.txt.

```
20
30
      ! PROGRAM NAME:
                              basicex1.txt
40
50
      ! PROGRAM DESCRIPTION: This program verifies that the GPIB
connections and
                               interface are functional.
     !
60
70
      ! Connect a controller to the signal generator using a GPIB
80
cable.
      !
90
```

```
100
110
     ! CLEAR and RESET the controller and type in the following
commands and then
120
     ! RUN the program:
130
140
150
     Sig_gen=719 ! Declares a variable to hold the signal
160
generator's address
     LOCAL Sig gen ! Places the signal generator into Local mode
170
     CLEAR Sig gen ! Clears any pending data I/O and resets the
180
parser
190
     REMOTE 719
                   ! Puts the signal generator into remote mode
                  ! Clears the controllers display
200
     CLEAR SCREEN
210
     REMOTE 719
     OUTPUT Sig_gen; "*RST" ! Places the signal generator into a
220
defined state
     PRINT "The signal generator should now be in REMOTE."
230
240
     PRINT
    PRINT "Verify that the remote [R] annunciator is on. Press the
250
`Local' key, "
260
     PRINT "on the front panel to return the signal generator to
local control."
270
     PRINT
     PRINT "Press RUN to start again."
280
290
     END
           ! Program ends
```

Interface Check Using NI-488.2 and C++

This example uses the NI-488.2 library to verify that the GPIB connections and interface are functional. Launch Microsoft Visual C++ 6.0, add the required files, and enter the following code into your .cpp source file.

The following program example is available on the signal generator Documentation CD-ROM as niex1.cpp.

```
//
// PROGRAM DESCRIPTION: This program verifies that the GPIB
connections and
// interface are functional.
//
// Connect a GPIB cable from the PC GPIB card to the signal
// Enter the following code into the source .cpp file and execute
the program
//
#include "stdafx.h"
#include <iostream>
#include "windows.h"
#include "Dec1-32.h"
using namespace std;
int GPIB0= 0; // Board handle
Addr4882_t Address[31]; // Declares an array of type Addr4882_t
int main(void)
{
    int sig;
                                 // Declares a device descriptor
variable
    sig = ibdev(0, 19, 0, 13, 1, 0); // Aquires a device descriptor
    ibclr(sig);
                                 // Sends device clear message
to signal generator
    ibwrt(sig, "*RST", 4);  // Places the signal generator
into a defined state
                               // Print data to the output window
    cout << "The signal generator should now be in REMOTE. The</pre>
remote indicator"<<endl;</pre>
```

```
cout <<"annunciator R should appear on the signal generator
display"<<endl;
return 0;
}</pre>
```

Interface Check for GPIB Using VISA and C

This program uses VISA library functions and the C language to communicate with the signal generator. The program verifies that the GPIB connections and interface are functional. Launch Microsoft Visual C++ 6.0, add the required files, and enter the following code into your .cpp source file. visaex1.cpp performs the following functions:

- verifies the GPIB connections and interface are functional
- switches the signal generator into remote operation mode

The following program example is available on the signal generator Documentation CD-ROM as visaex1.cpp.

```
// PROGRAM NAME:visaex1.cpp
//
// PROGRAM DESCRIPTION: This example program verifies that the GPIB
connections and
// and interface are functional.
// Turn signal generator power off then on and then run the program
//
#include <visa.h>
#include <stdio.h>
#include "StdAfx.h"
#include <stdlib.h>
void main ()
  ViSession defaultRM, vi; // Declares a variable of type
ViSession
                          // for instrument communication
```

```
ViStatus viStatus = 0;
                                    // Opens a session to the GPIB
device
                                     // at address 19
   viStatus=viOpenDefaultRM(&defaultRM);
   viStatus=viOpen(defaultRM, "GPIB::19::INSTR", VI NULL, VI NULL,
&vi);
   if(viStatus){
   printf("Could not open ViSession!\n");
   printf("Check instruments and connections\n");
   printf("\n");
   exit(0);}
   viPrintf(vi, "*RST\n");
                                 // initializes signal generator
                                   // prints to the output window
   printf("The signal generator should now be in REMOTE. The remote
                      indicator\n");
   printf("annunciator R should appear on the signal generator
display\n");
   printf("\n");
   viClose(vi);
                                  // closes session
   viClose(defaultRM);
                                 // closes default session
}
```

Local Lockout Using HP Basic and GPIB

This example demonstrates the Local Lockout function. Local Lockout disables the front panel signal generator keys. basicex2.txt performs the following functions:

- resets instrument
- places signal generator into local
- places signal generator into remote

The following program example is available on the signal generator Documentation CD-ROM as basicex2.txt.

```
30
     ! PROGRAM NAME:
                           basicex2.txt
40
     ! PROGRAM DESCRIPTION: In REMOTE mode, access to the signal
50
generators
60
     .
                             functional front panel keys are
disabled except for
                          the Local and Contrast keys. The LOCAL
LOCKOUT
   !
                             command will disable the Local key.
80
                            The LOCAL command, executed from the
90
     !
controller, is then
100
     !
                            the only way to return the signal
generator to front panel,
110
                             Local, control.
120
Sig_gen=719
                     ! Declares a variable to hold signal
generator address
     CLEAR Sig gen ! Resets signal generator parser and clears
any output
    LOCAL Sig gen
                     ! Places the signal generator in local mode
150
160
     REMOTE Sig gen
                     ! Places the signal generator in remote mode
170
     CLEAR SCREEN
                     ! Clears the controllers display
     OUTPUT Sig_gen;"*RST"
180
                             ! Places the signal generator in a
defined state
     ! The following print statements are user prompts
190
     PRINT "The signal generator should now be in remote."
200
210
     PRINT "Verify that the 'R' and 'L' annunciators are visable"
     PRINT "..... Press Continue"
220
     PAUSE
230
240
     LOCAL LOCKOUT 7 ! Puts the signal generator in LOCAL LOCKOUT
mode
                      ! Prints user prompt messages
250
     PRINT
260
     PRINT "Signal generator should now be in LOCAL LOCKOUT mode."
270
     PRINT
     PRINT "Verify that all keys including `Local' (except Contrast
280
keys) have no effect."
290
     PRINT
```

```
PRINT "..... Press Continue"
300
310
     PAUSE
320
     PRINT
                        ! Returns signal generator to Local control
330
     LOCAL 7
340
     ! The following print statements are user prompts
350
     PRINT "Signal generator should now be in Local mode."
360
     PRINT
370
     PRINT "Verify that the signal generator's front-panel keyboard
is functional."
380
     PRINT
     PRINT "To re-start this program press RUN."
390
400
     END
```

Local Lockout Using NI-488.2 and C++

This example uses the NI-488.2 library to set the signal generator local lockout mode. Launch Microsoft Visual C++ 6.0, add the required files, and enter the following code into your .cpp source file. niex2.cpp performs the following functions:

- all front panel keys, except the contrast key
- places the signal generator into remote
- prompts the user to verify the signal generator is in remote
- places the signal generator into local

The following program example is available on the signal generator Documentation CD-ROM as niex2.cpp.

```
#include "stdafx.h"
#include <iostream>
#include "windows.h"
#include "Decl-32.h"
using namespace std;
int GPIB0= 0;
                                          // Board handle
Addr4882_t Address[31];
                                         // Declares a variable of
type Addr4882 t
int main()
{
                                      // Declares variable to hold
     int sig;
interface descriptor
     sig = ibdev(0, 19, 0, 13, 1, 0); // Opens and initialize a
device descriptor
     ibclr(sig);
                                     // Sends GPIB Selected Device
Clear (SDC) message
     ibwrt(sig, "*RST", 4);  // Places signal generator
in a defined state
      cout << "The signal generator should now be in REMOTE. The</pre>
remote mode R "<<endl;</pre>
     cout <<"annunciator should appear on the signal generator</pre>
display."<<endl;</pre>
      cout <<"Press Enter to continue"<<endl;</pre>
     cin.ignore(10000,'\n');
     SendIFC(GPIB0);
                                       // Resets the GPIB interface
                                      // Signal generator's address
     Address[0]=19;
     Address[1]=NOADDR;
                                      // Signifies end element in
array. Defined in
                                                            //
DECL-32.H
      SetRWLS(GPIB0, Address); // Places device in Remote
with Lockout State.
     cout<< "The signal generator should now be in LOCAL LOCKOUT.</pre>
Verify that all
                             keys"<<endl;
     cout<< "including the 'Local' key are disabled (Contrast keys</pre>
                      affected)"<<endl;</pre>
are not
```

Queries Using HP Basic and GPIB

This example demonstrates signal generator query commands. The signal generator can be queried for conditions and setup parameters. Query commands are identified by the question mark as in the identify command *IDN? basicex3.txt performs the following functions:

- clears the signal generator
- queries the signal generator's settings

The following program example is available on the signal generator Documentation CD-ROM as basicex3.txt.

```
!
20
30
    ! PROGRAM NAME: basicex3.txt
40
    !
    ! PROGRAM DESCRIPTION: In this example, query commands are
50
used with response
                      data formats.
60
70
    ! CLEAR and RESET the controller and RUN the following
80
program:
90
    1
100
110
    DIM A$[10],C$[100],D$[10] ! Declares variables to hold
120
string response data
130
   INTEGER B
                       ! Declares variable to hold integer
response data
```

```
Sig_gen=719
                                 ! Declares variable to hold signal
generator address
                                  ! Puts signal generator in Local
150
     LOCAL Sig_gen
mode
160
     CLEAR Sig gen
                                  ! Resets parser and clears any
pending output
     CLEAR SCREEN
                                  ! Clears the controller's display
170
180
     OUTPUT Sig gen; "*RST"
                                  ! Puts signal generator into a
defined state
     OUTPUT Sig gen; "FREQ:CW?" ! Querys the signal generator CW
frequency setting
200
     ENTER Sig_gen;F
                                  ! Enter the CW frequency setting
      ! Print frequency setting to the controller display
210
220
     PRINT "Present source CW frequency is: ";F/1.E+6;"MHz"
230
     PRINT
240
     OUTPUT Sig gen; "POW: AMPL?" ! Querys the signal generator
power level
     ENTER Sig gen; W
                                  ! Enter the power level
250
     ! Print power level to the controller display
260
     PRINT "Current power setting is: ";W;"dBM"
270
280
     PRINT
290
     OUTPUT Sig_gen; "FREQ: MODE?" ! Querys the signal generator for
frequency mode
300
     ENTER Sig gen;A$
                                  ! Enter in the mode: CW, Fixed or
List
      ! Print frequency mode to the controller display
310
     PRINT "Source's frequency mode is: ";A$
320
330
     PRINT
340
     OUTPUT Sig_gen; "OUTP OFF" ! Turns signal generator RF state
off
     OUTPUT Sig_gen;"OUTP?"
                               ! Querys the operating state of the
signal generator
                                  ! Enter in the state (0 for off)
360
     ENTER Sig gen; B
      ! Print the on/off state of the signal generator to the
370
controller display
380
     IF B>0 THEN
390
       PRINT "Signal Generator output is: on"
400
      ELSE
```

```
PRINT "Signal Generator output is: off"
410
420
     OUTPUT Sig gen; "*IDN?" ! Querys for signal generator ID
430
440
     ENTER Sig_gen;C$
                           ! Enter in the signal generator ID
450
      ! Print the signal generator ID to the controller display
460
     PRINT
470
     PRINT "This signal generator is a ";C$
     PRINT
480
490
      ! The next command is a query for the signal generator's GPIB
address
     OUTPUT Sig_gen; "SYST:COMM:GPIB:ADDR?"
500
     ENTER Sig gen;D$
                                  ! Enter in the signal generator's
510
address
     ! Print the signal generator's GPIB address to the controllers
520
display
530
     PRINT "The GPIB address is ";D$
540
     PRINT
550
     ! Print user prompts to the controller's display
     PRINT "The signal generator is now under local control"
560
570
     PRINT "or Press RUN to start again."
580
     END
```

Queries Using NI-488.2 and Visual C++

This example uses the NI-488.2 library to query different instrument states and conditions. Launch Microsoft Visual C++ 6.0, add the required files, and enter the following code into your .cpp source file. niex3.cpp performs the following functions:

- resets the signal generator
- queries the signal generator for various settings
- reads the various settings

The following program example is available on the signal generator Documentation CD-ROM as niex3.cpp.

```
//**************************
// PROGRAM NAME: niex3.cpp
//
// PROGRAM DESCRIPTION: This example demonstrates the use of query commands.
```

```
//
// The signal generator can be queried for conditions and instrument
states.
// These commands are of the type "*IDN?" where the question mark
indicates
// a query.
#include "stdafx.h"
#include <iostream>
#include "windows.h"
#include "Decl-32.h"
using namespace std;
int GPIB0= 0;
                                     // Board handle
Addr4882 t Address[31];
                                  // Declare a variable of type
Addr4882 t
int main()
 int sig;
                               // Declares variable to hold
interface descriptor
 int num;
 char rdVal[100];
                               // Declares variable to read
instrument responses
 sig = ibdev(0, 19, 0, 13, 1, 0); // Open and initialize a device
descriptor
 ibloc(sig);
                              // Places the signal generator in
local mode
                // Sends Selected Device Clear(SDC)
 ibclr(sig);
message
 ibwrt(sig, "*RST", 4);  // Places signal generator in a
defined state
 ibwrt(sig, ":FREQuency:CW?",14); // Querys the CW frequency
 ibrd(sig, rdVal,100);
                              // Reads in the response into
rdVal
```

```
// Null character indicating end
 rdVal[ibcntl] = '\0';
of array
 cout<<"Source CW frequency is "<<rdVal; // Print frequency of</pre>
signal generator
 cout<<"Press any key to continue"<<endl;</pre>
 cin.ignore(10000,'\n');
 ibwrt(sig, "POW:AMPL?",10); // Querys the signal generator
                          // Reads the signal generator
 ibrd(sig, rdVal,100);
power level
 rdVal[ibcntl] = '\0';
                               // Null character indicating end
of array
                                  // Prints signal generator power
level
 cout<<"Source power (dBm) is : "<<rdVal;</pre>
 cout<<"Press any key to continue"<<endl;</pre>
 cin.ignore(10000,'\n');
 ibwrt(sig, ":FREQ:MODE?",11); // Querys source frequency mode
                          // Enters in the source frequency
 ibrd(sig, rdVal,100);
mode
 rdVal[ibcntl] = '\0';  // Null character indicating end
of array
 cout<<"Source frequency mode is "<<rdVal; // Print source</pre>
frequency mode
 cout<<"Press any key to continue"<<endl;</pre>
 cin.ignore(10000,'\n');
 ibwrt(sig, "OUTP OFF",12);  // Turns off RF source
  ibwrt(sig, "OUTP?",5);
                                // Querys the on/off state of the
instrument
                                 // Enter in the source state
  ibrd(sig,rdVal,2);
 rdVal[ibcntl] = '\0';
 num = (int (rdVal[0]) -('0'));
 if (num > 0){
     cout<<"Source RF state is : On"<<endl;</pre>
  }else{
      cout<<"Source RF state is : Off"<<endl;}</pre>
 cout<<endl;</pre>
  ibwrt(sig, "*IDN?",5);  // Querys the instrument ID
```

```
ibrd(sig, rdVal,100);
                                  // Reads the source ID
 rdVal[ibcntl] = '\0';
                                  // Null character indicating end
of array
 cout<<"Source ID is : "<<rdVal; // Prints the source ID</pre>
 cout<<"Press any key to continue"<<endl;</pre>
 cin.ignore(10000,'\n');
  ibwrt(sig, "SYST:COMM:GPIB:ADDR?",20); //Querys source address
 ibrd(sig, rdVal,100);
                                  // Reads the source address
                            // Null character indicates end of
 rdVal[ibcntl] = '\0';
array
                                     // Prints the signal generator
address
 cout<<"Source GPIB address is : "<<rdVal;</pre>
 cout<<endl;</pre>
  cout<<"Press the 'Local' key to return the signal generator to</pre>
LOCAL control"<<endl; cout<<endl;
return 0;
```

Queries for GPIB Using VISA and C

This example uses VISA library functions to query different instrument states and conditions. Launch Microsoft Visual C++ 6.0, add the required files, and enter the following code into your .cpp source file. visaex3.cpp performs the following functions:

- verifies the GPIB connections and interface are functional
- resets the signal generator
- queries the instrument (CW frequency, power level, frequency mode, and RF state)
- reads responses into the rdBuffer (CW frequency, power level, and frequency mode)
- turns signal generator RF state off
- verifies RF state off

The following program example is available on the signal generator Documentation CD-ROM as visaex3.cpp.

```
//**************************
// PROGRAM FILE NAME:visaex3.cpp
//
// PROGRAM DESCRIPTION:This example demonstrates the use of query commands. The signal
```

```
// generator can be queried for conditions and instrument states.
These commands are of
// the type "*IDN?"; the question mark indicates a query.
//
#include <visa.h>
#include "StdAfx.h"
#include <iostream>
#include <conio.h>
#include <stdlib.h>
using namespace std;
void main ()
   ViSession defaultRM, vi; // Declares variables of type
ViSession
                             // for instrument communication
   ViStatus viStatus = 0;
                            // Declares a variable of type
ViStatus
                             // for GPIB verifications
   char rdBuffer [256];
                            // Declares variable to hold string
data
   int num;
                            // Declares variable to hold integer
data
                             // Initialize the VISA system
   viStatus=viOpenDefaultRM(&defaultRM);
                             // Open session to GPIB device at
address 19
   viStatus=viOpen(defaultRM, "GPIB::19::INSTR", VI_NULL, VI_NULL,
&vi);
                             // If problems, then prompt user
   if(viStatus){
       printf("Could not open ViSession!\n");
       printf("Check instruments and connections\n");
       printf("\n");
```

```
exit(0);}
   viPrintf(vi, "*RST\n");
                                  // Resets signal generator
   viPrintf(vi, "FREQ:CW?\n");
                                  // Querys the CW frequency
   viScanf(vi, "%t", rdBuffer);
                                   // Reads response into rdBuffer
                                   // Prints the source frequency
   printf("Source CW frequency is : %s\n", rdBuffer);
   printf("Press any key to continue\n");
   printf("\n");
                                   // Prints new line character to
the display
   getch();
   viPrintf(vi, "POW:AMPL?\n");
                                  // Querys the power level
   viScanf(vi, "%t", rdBuffer); // Reads the response into
rdBuffer
                                   // Prints the source power level
   printf("Source power (dBm) is : %s\n", rdBuffer);
   printf("Press any key to continue\n");
   printf("\n");
                                   // Prints new line character to
the display
   getch();
   viPrintf(vi, "FREQ:MODE?\n"); // Querys the frequency mode
   viScanf(vi, "%t", rdBuffer); // Reads the response into
rdBuffer
                                   // Prints the source freq mode
   printf("Source frequency mode is : %s\n", rdBuffer);
   printf("Press any key to continue\n");
   printf("\n");
                                   // Prints new line character to
the display
   getch();
   viPrintf(vi, "OUTP OFF\n");
                                 // Turns source RF state off
   viPrintf(vi, "OUTP?\n");
                                  // Querys the signal generator's
RF state
   viScanf(vi, "%1i", &num);
                                  // Reads the response (integer
value)
                                   // Prints the on/off RF state
   if (num > 0 ) {
   printf("Source RF state is : on\n");
```

Generating a CW Signal Using VISA and C

This example uses VISA library functions to control the signal generator. The signal generator is set for a CW frequency of 500 kHz and a power level of -2.3 dBm. Launch

Microsoft Visual C++ 6.0, add the required files, and enter the code into your .cpp source file. visaex4.cpp performs the following functions:

- verifies the GPIB connections and interface are functional
- resets the signal generator
- queries the instrument (CW frequency, power level, frequency mode, and RF state)
- reads responses into the rdBuffer (CW frequency, power level, and frequency mode)
- turns signal generator RF state off
- verifies RF state off

The following program example is available on the signal generator Documentation CD-ROM as visaex4.cpp.

```
#include "StdAfx.h"
#include <visa.h>
#include <iostream>
#include <stdlib.h>
#include <conio.h>
void main ()
   ViSession defaultRM, vi; // Declares variables of type
ViSession
                                  // for instrument communication
                                  // Declares a variable of type
   ViStatus viStatus = 0;
ViStatus
                                  // for GPIB verifications
   char rdBuffer [256];
                                  // Declare variable to hold
string data
   int num;
                               // Declare variable to hold integer
data
   viStatus=viOpenDefaultRM(&defaultRM); // Initialize VISA
system
                                 // Open session to GPIB device at
address 19
   viStatus=viOpen(defaultRM, "GPIB::19::INSTR", VI_NULL, VI_NULL,
&vi);
                                  // If problems then prompt user
   if(viStatus){
   printf("Could not open ViSession!\n");
   printf("Check instruments and connections\n");
   printf("\n");
   exit(0);}
   viPrintf(vi, "*RST\n");  // Reset the signal generator
   viPrintf(vi, "FREQ 500 kHz\n"); // Set the source CW frequency
for 500 kHz
   viPrintf(vi, "FREQ:CW?\n"); // Query the CW frequency
   viScanf(vi, "%t", rdBuffer); // Read signal generator response
```

```
printf("Source CW frequency is : %s\n", rdBuffer); // Print the
frequency
   viPrintf(vi, "POW:AMPL -2.3 dBm\n"); // Set the power level to
-2.3 dBm
   viPrintf(vi, "POW:AMPL?\n"); // Query the power level
   viScanf(vi, "%t", rdBuffer); // Read the response into
rdBuffer
   printf("Source power (dBm) is : %s\n", rdBuffer); // Print the
power level
   viPrintf(vi, "OUTP:STAT ON\n"); // Turn source RF state on
   viPrintf(vi, "OUTP?\n"); // Query the signal generator's
RF state
   viScanf(vi, "%1i", &num); // Read the response (integer
value)
     // Print the on/off RF state
   if (num > 0 ) {
   printf("Source RF state is : on\n");
   }else{
   printf("Source RF state is : off\n");
   }
   printf("\n");
   printf("Verify RF state then press continue\n");
   printf("\n");
   getch();
   viClear(vi);
   viPrintf(vi, "OUTP:STAT OFF\n"); // Turn source RF state off
   viPrintf(vi, "OUTP?\n"); // Query the signal generator's
RF state
   viScanf(vi, "%1i", &num); // Read the response
     // Print the on/off RF state
   if (num > 0 ) {
   printf("Source RF state is now: on\n");
   }else{
   printf("Source RF state is now: off\n");
   }
                                    // Close the sessions
```

Programming Examples
GPIB Programming Interface Examples

```
printf("\n");
viClear(vi);
viClose(vi);
viClose(defaultRM);
}
```

Generating an Externally Applied AC-Coupled FM Signal Using VISA and C

In this example, the VISA library is used to generate an ac-coupled FM signal at a carrier frequency of 700 MHz, a power level of –2.5 dBm, and a deviation of 20 kHz. Before running the program:

- Connect the output of a modulating signal source to the signal generator's EXT 2 input connector.
- Set the modulation signal source for the desired FM characteristics.

Launch Microsoft Visual C++ 6.0, add the required files, and enter the code into your .cpp source file. visaex5.cpp performs the following functions:

- error checking
- resets the signal generator
- sets up the EXT 2 connector on the signal generator for FM
- sets up FM path 2 coupling to AC
- sets up FM path 2 deviation to 20 kHz
- sets carrier frequency to 700 MHz
- sets the power level to -2.5 dBm
- turns on frequency modulation and RF output

The following program example is available on the signal generator Documentation CD-ROM as visaex5.cpp.

```
#include <iostream>
#include <stdlib.h>
#include <conio.h>
void main ()
   ViSession defaultRM, vi; // Declares variables of type
ViSession
                                     // for instrument
communication
   ViStatus viStatus = 0;
                                    // Declares a variable of
type ViStatus
                                     // for GPIB verifications
                                     // Initialize VISA session
   viStatus=viOpenDefaultRM(&defaultRM);
                                 // open session to gpib device at
address 19
   viStatus=viOpen(defaultRM, "GPIB::19::INSTR", VI_NULL, VI_NULL,
&vi);
   if(viStatus){
                                      // If problems, then prompt
user
       printf("Could not open ViSession!\n");
       printf("Check instruments and connections\n");
       printf("\n");
       exit(0);}
   printf("Example program to set up the signal generator\n");
   printf("for an AC-coupled FM signal\n");
   printf("Press any key to continue\n");
   printf("\n");
   getch();
   printf("\n");
   viPrintf(vi, "*RST\n");  // Resets the signal
generator
   viPrintf(vi, "FM:SOUR EXT2\n");  // Sets EXT 2 source for FM
```

```
viPrintf(vi, "FM:EXT2:COUP AC\n"); // Sets FM path 2 coupling
to AC
   viPrintf(vi, "FM:DEV 20 kHz\n");  // Sets FM path 2 deviation
to 20 kHz
   viPrintf(vi, "FREQ 700 MHz\n"); // Sets carrier frequency to
700 MHz
   viPrintf(vi, "POW:AMPL -2.5 dBm\n"); // Sets the power level to
-2.5 dBm
   viPrintf(vi, "FM:STAT ON\n"); // Turns on frequency
modulation
   viPrintf(vi, "OUTP:STAT ON\n"); // Turns on RF output
                                        // Print user information
   printf("Power level : -2.5 dBm\n");
   printf("FM state : on\n");
   printf("RF output : on\n");
   printf("Carrier Frequency : 700 MHZ\n");
   printf("Deviation : 20 kHZ\n");
   printf("EXT2 and AC coupling are selected\n");
   printf("\n");
                                       // Prints a carrage return
                                        // Close the sessions
   viClose(vi);
   viClose(defaultRM);
}
```

Generating an Internal FM Signal Using VISA and C

In this example the VISA library is used to generate an internal FM signal at a carrier frequency of 900 MHz and a power level of -15 dBm. The FM rate will be 5 kHz and the peak deviation will be 100 kHz. Launch Microsoft Visual C++ 6.0, add the required files, and enter the following code into your .cpp source file. visaex6.cpp performs the following functions:

- error checking
- resets the signal generator
- sets up the signal generator for FM path 2 and internal FM rate of 5 kHz
- sets up FM path 2 deviation to 100 kHz
- sets carrier frequency to 900 MHz
- sets the power level to -15 dBm
- turns on frequency modulation and RF output

The following program example is available on the signal generator Documentation CD-ROM as visaex6.cpp.

```
// PROGRAM FILE NAME:visaex6.cpp
// PROGRAM DESCRIPION: This example generates an internal FM signal
at a 900
// MHz carrier frequency and a power level of -15 dBm. The FM rate is
5 kHz and the peak
// deviation 100 kHz
//
#include <visa.h>
#include "StdAfx.h"
#include <iostream>
#include <stdlib.h>
#include <conio.h>
void main ()
  ViSession defaultRM, vi; // Declares variables of type
ViSession
                            // for instrument communication
  ViStatus
                              // for GPIB verifications
  viStatus=viOpenDefaultRM(&defaultRM); // Initialize VISA session
                          // open session to gpib device at
address 19
  viStatus=viOpen(defaultRM, "GPIB::19::INSTR", VI_NULL, VI_NULL,
&vi);
  if(viStatus){
                               // If problems, then prompt
user
  printf("Could not open ViSession!\n");
  printf("Check instruments and connections\n");
  printf("\n");
```

```
exit(0);}
   printf("Example program to set up the signal generator\n");
   printf("for an AC-coupled FM signal\n");
   printf("\n");
   printf("Press any key to continue\n");
   getch();
   viClear(vi);
                                         // Clears the signal
generator
   viPrintf(vi, "*RST\n");
                                        // Resets the signal
generator
   viPrintf(vi, "FM2:INT:FREQ 5 kHz\n"); // Sets FM path 2 to
internal at a modulation rate of 5 kHz
   viPrintf(vi, "FM2:DEV 100 kHz\n");
                                        // Sets FM path 2
modulation deviation rate of 100 kHz
   viPrintf(vi, "FREQ 900 MHz\n"); // Sets carrier frequency
to 900 MHz
   viPrintf(vi, "POW -15 dBm\n");
                                        // Sets the power level to
-15 dBm
   viPrintf(vi, "FM2:STAT ON\n");
                                       // Turns on frequency
modulation
   viPrintf(vi, "OUTP:STAT ON\n");
                                        // Turns on RF output
   printf("\n");
                                        // Prints a carriage return
                                         // Print user information
   printf("Power level : -15 dBm\n");
   printf("FM state : on\n");
   printf("RF output : on\n");
   printf("Carrier Frequency : 900 MHZ\n");
   printf("Deviation : 100 kHZ\n");
   printf("Internal modulation : 5 kHz\n");
   printf("\n");
                                        // Print a carrage return
                   // Close the sessions
   viClose(vi);
   viClose(defaultRM);
}
```

Generating a Step-Swept Signal Using VISA and C++

In this example the VISA library is used to set the signal generator for a continuous step sweep on a defined set of points from 500 MHz to 800 MHz. The number of steps is set for 10 and the dwell time at each step is set to 500 ms. The signal generator will then be set to local mode which allows the user to make adjustments from the front panel. Launch Microsoft Visual C++ 6.0, add the required files, and enter the following code into your .cpp source file. visaex7.cpp performs the following functions:

- clears and resets the signal generator
- sets up the instrument for continuous step sweep
- sets up the start and stop sweep frequencies
- sets up the number of steps
- sets the power level
- turns on the RF output

The following program example is available on the signal generator Documentation CD-ROM as visaex7.cpp.

```
// PROGRAM FILE NAME:visaex7.cpp
//
// PROGRAM DESCRIPTION: This example will program the signal
generator to perform a step
// sweep from 500-800 MHz with a .5 sec dwell at each frequency
step.
#include <visa.h>
#include "StdAfx.h"
#include <iostream>
void main ()
{
  ViSession defaultRM, vi;// Declares variables of type ViSession
  // vi establishes instrument communication
  ViStatus viStatus = 0;// Declares a variable of type ViStatus
                      // for GPIB verifications
  viStatus=viOpenDefaultRM(&defaultRM); // Initialize VISA session
```

```
// Open session to GPIB device at address 19
   viStatus=viOpen(defaultRM, "GPIB::19::INSTR", VI NULL, VI NULL,
&vi);
   if(viStatus){// If problems, then prompt user
   printf("Could not open ViSession!\n");
   printf("Check instruments and connections\n");
   printf("\n");
   exit(0);}
   viClear(vi);
                                        // Clears the signal
generator
   viPrintf(vi, "*RST\n");
                                        // Resets the signal
generator
   viPrintf(vi, "*CLS\n");
                                        // Clears the status byte
register
   viPrintf(vi, "FREQ:MODE LIST\n"); // Sets the sig gen freq
mode to list
   viPrintf(vi, "LIST:TYPE STEP\n"); // Sets sig gen LIST type
to step
   viPrintf(vi, "FREQ:STAR 500 MHz\n"); // Sets start frequency
   viPrintf(vi, "FREQ:STOP 800 MHz\n"); // Sets stop frequency
   viPrintf(vi, "SWE:POIN 10\n"); // Sets number of steps (30
mHz/step)
   viPrintf(vi, "SWE:DWEL .5 S\n"); // Sets dwell time to 500
ms/step
   viPrintf(vi, "POW:AMPL -5 dBm\n");
                                       // Sets the power level for
-5 dBm
   viPrintf(vi, "OUTP:STAT ON\n");
                                       // Turns RF output on
   viPrintf(vi, "INIT:CONT ON\n");
                                        // Begins the step sweep
operation
                                        // Print user information
   printf("The signal generator is in step sweep mode. The
frequency range
                                        is\n");
   printf("500 to 800 mHz. There is a .5 sec dwell time at each 30
mHz
                            step.\n");
   printf("\n");
                                        // Prints a carriage
return/line feed
   viPrintf(vi, "OUTP:STAT OFF\n"); // Turns the RF output off
```

Generating a Swept Signal Using VISA and Visual C++

This example sets up the signal generator for a frequency sweep from 1 to 2 GHz with 101 points and a .01 second dwell period for each point. A loop is used to generator 5 sweep operations. The signal generator triggers each sweep with the :INIT command. There is a wait introduced in the loop to allow the signal generator to complete all operations such as set up and retrace before the next sweep is generated. visaex11.cpp performs the following functions:

- sets up the signal generator for a 1 to 2 GHz frequency sweep
- sets up the signal generator to have a dwell time of .01 seconds and 101 points in the sweep
- sleep function is used to allow the instrument to complete its sweep operation

The following program example is available on the signal generator Documentation CD-ROM as visaex11.cpp.

```
// NOTE: Change the TCPIP0 address in the instOpenString declaration
to
// match the IP address of your signal generator.
//
#include "stdafx.h"
#include "visa.h"
#include <iostream>
#include <windows.h>
void main ()
 {
    ViStatus stat;
        ViSession defaultRM,inst;
    int npoints = 101;
    double dwell = 0.01;
        int intCounter=5;
        char* instOpenString = "TCPIP0::141.121.93.101::INSTR";
        stat = viOpenDefaultRM(&defaultRM);
    stat = viOpen(defaultRM,instOpenString,VI_NULL,VI_NULL,
&inst);
    // preset to start clean
    stat = viPrintf( inst, "*RST\n" );
    // set power level for -10dBm
        stat = viPrintf(inst, "POW -10DBM\n");
        // set the start and stop frequency for the sweep
    stat = viPrintf(inst, "FREQ:START 1GHZ\n");
    stat = viPrintf(inst, "FREQ:STOP 2GHZ\n");
    // setup dwell per point
```

```
stat = viPrintf(inst, "SWEEP:DWELL %e\n", dwell);
// setup number of points
stat = viPrintf(inst, "SWEEP:POINTS %d\n", npoints);
// set interface timeout to double the expected sweep time
// sweep takes (~15ms + dwell) per point * number of points
// the timeout should not be shorter then the sweep, set it
// longer
long timeoutMS = long(2*npoints*(.015+dwell)*1000);
   // set the VISA timeout
stat = viSetAttribute(inst, VI_ATTR_TMO_VALUE, timeoutMS);
// set continuous trigger mode off
stat = viPrintf(inst, "INIT:CONT OFF\n");
// turn list sweep on
stat = viPrintf(inst, "FREQ:MODE LIST\n");
int sweepNo = 0;
while(intCounter>0 )
{
    // start the sweep (initialize)
    stat = viPrintf(inst, "INIT\n");
    printf("Sweep %d started\n",++sweepNo);
       // wait for the sweep completion with *OPC?
    int res;
    stat = viPrintf(inst, "*OPC?\n");
    stat = viScanf(inst, "%d", &res);
      // handle possible errors here (most likely a timeout)
      // err handler( inst, stat );
    puts("Sweep ended");
    // delay before sending next INIT since instrument
    // may not be ready to receive it yet
    Sleep(15);
```

```
intCounter = intCounter-1;
}
printf("End of Program\n\n");
}
```

Saving and Recalling States Using VISA and C

In this example, instrument settings are saved in the signal generator's save register. These settings can then be recalled separately; either from the keyboard or from the signal generator's front panel. Launch Microsoft Visual C++ 6.0, add the required files, and enter the following code into your .cpp source file. visaex8.cpp performs the following functions:

- error checking
- clears the signal generator
- resets the status byte register
- resets the signal generator
- sets up the signal generator frequency, ALC off, power level, RF output on
- checks for operation complete
- saves to settings to instrument register number one
- recalls information from register number one
- prompts user input to put instrument into Local and checks for operation complete

The following program example is available on the signal generator Documentation CD-ROM as visaex8.cpp.

```
// will be instructed to place the signal generator in Local mode.
#include <visa.h>
#include "StdAfx.h"
#include <iostream>
#include <conio.h>
void main ()
{
   ViSession defaultRM, vi;// Declares variables of type ViSession
   // for instrument communication
   ViStatus viStatus = 0;// Declares a variable of type ViStatus
                           // for GPIB verifications
   long lngDone = 0;
                          // Operation complete flag
   viStatus=viOpenDefaultRM(&defaultRM);  // Initialize VISA
session
   // Open session to gpib device at address 19
   viStatus=viOpen(defaultRM, "GPIB::19::INSTR", VI NULL, VI NULL,
&vi);
   if(viStatus){// If problems, then prompt user
       printf("Could not open ViSession!\n");
       printf("Check instruments and connections\n");
       printf("\n");
       exit(0);}
   printf("\n");
                                     // Clears the signal
   viClear(vi);
generator
   viPrintf(vi, "*CLS\n");
                                     // Resets the status byte
register
                                       // Print user information
   printf("Programming example using the *SAV,*RCL
commands\n");
   printf("used to save and recall an instrument's state\n");
```

```
printf("\n");
   viPrintf(vi, "*RST\n");
                                        // Resets the signal
generator
   viPrintf(vi, "FREQ 5 MHz\n");
                                        // Sets sig gen frequency
   viPrintf(vi, "POW:ALC OFF\n");
                                         // Turns ALC Off
   viPrintf(vi, "POW:AMPL -3.2 dBm\n"); // Sets power for -3.2 dBm
   viPrintf(vi, "OUTP:STAT ON\n");
                                        // Turns RF output On
   viPrintf(vi, "*OPC?\n");
                                         // Checks for operation
complete
   while (!lngDone)
       viScanf (vi ,"%d",&lngDone);
                                        // Waits for setup to
complete
   viPrintf(vi, "*SAV 1\n");
                                         // Saves sig gen state to
register #1
                                         // Print user information
   printf("The current signal generator operating state will be
saved\n");
   printf("to Register #1. Observe the state then press Enter\n");
   printf("\n");
                                      // Prints new line character
   getch();
                                         // Wait for user input
   lngDone=0;
                                         // Resets the operation
complete flag
   viPrintf(vi, "*RST\n");
                                         // Resets the signal
generator
   viPrintf(vi, "*OPC?\n");
                                         // Checks for operation
complete
   while (!lngDone)
       viScanf (vi ,"%d",&lngDone);
                                     // Waits for setup to
complete
                                         // Print user infromation
   printf("The instrument is now in it's Reset operating state.
Press the\n");
   printf("Enter key to return the signal generator to the Register
#1
                            state\n");
   printf("\n");
                                        // Prints new line character
   getch();
                                         // Waits for user input
   lngDone=0;
                                         // Reset the operation
complete flag
```

```
viPrintf(vi, "*RCL 1\n");
                                       // Recalls stored register
#1 state
   viPrintf(vi, "*OPC?\n");
                                        // Checks for operation
complete
   while (!lngDone)
       viScanf (vi ,"%d",&lngDone);
                                        // Waits for setup to
complete
                                         // Print user information
   printf("The signal generator has been returned to it's Register
                           state\n");
#1
   printf("Press Enter to continue\n");
   printf("\n");
                                       // Prints new line character
   getch();
                                         // Waits for user input
   lngDone=0;
                                         // Reset the operation
complete flag
   viPrintf(vi, "*RST\n");
                                         // Resets the signal
generator
   viPrintf(vi, "*OPC?\n");
                                         // Checks for operation
complete
   while (!lngDone)
       viScanf (vi ,"%d",&lngDone); // Waits for setup to
complete
                                        // Print user information
   printf("Press Local on instrument front panel to return to
manual mode\n");
   printf("\n");
                                       // Prints new line character
                                         // Close the sessions
   viClose(vi);
   viClose(defaultRM);
}
```

Reading the Data Questionable Status Register Using VISA and C

In this example, the signal generator's data questionable status register is read. You will be asked to set up the signal generator for error generating conditions. The data questionable status register will be read and the program will notify the user of the error condition that the setup caused. Follow the user prompts presented when the program runs. Launch Microsoft Visual C++ 6.0, add the required files, and enter the following code into your .cpp source file. visaex9.cpp performs the following functions:

Programming Examples
GPIB Programming Interface Examples

- error checking
- clears the signal generator
- resets the signal generator
- the data questionable status register is enabled to read an unleveled condition
- prompts user to manually set up the signal generator for an unleveled condition
- queries the data questionable status register for any set bits and converts the string data to numeric
- based on the numeric value, program checks for a corresponding status check value
- similarly checks for over or undermodulation condition

The following program example is available on the signal generator Documentation CD-ROM as visaex9.cpp.

```
// PROGRAM NAME:visaex9.cpp
//
// PROGRAM DESCRIPTION: In this example, the data questionable status
register is read.
// The data questionable status register is enabled to read an
unleveled condition.
// The signal generator is then set up for an unleveled condition
and the data
// questionable status register read. The results are then displayed
to the user.
// The status questionable register is then setup to monitor a
modulation error condition.
// The signal generator is set up for a modulation error condition
and the data
// questionable status register is read.
// The results are displayed to the active window.
//
#include <visa.h>
#include "StdAfx.h"
#include <iostream>
#include <conio.h>
void main ()
```

Programming Examples

```
printf("Press Enter when ready\n");
   printf("\n");
   getch();
                                             // Waits for keyboard
user input
   viPrintf(vi, "STAT:QUES:POW:ENAB 2\n"); // Enables the Data
Questionable
                                             // Power Condition
Register Bits
            // Bits '0' and '1'
   viPrintf(vi, "STAT:QUES:POW:COND?\n"); // Querys the register
for any
            // set bits
   viScanf(vi, "%s", rdBuffer);
                                        // Reads the decimal sum
of the
            // set bits
   num=(int (rdBuffer[1]) -('0'));
                                           // Converts string data
to
            // numeric
   switch (num)
                                           // Based on the decimal
value
   {
       case 1:
   printf("Signal Generator Reverse Power Protection
                                        Tripped\n");
   printf("/n");
   break;
       case 2:
   printf("Signal Generator Power is Unleveled\n");
   printf("\n");
   break;
       default:
   printf("No Power Unleveled condition detected\n");
   printf("\n");
   }
   viClear(vi);
                                             // Clears the signal
generator
```

```
// Prints user information
printf("-----
---\n");
   printf("\n");
   printf("Manually set up the sig gen for an unleveled output
condition:\n");
   printf("\n");
   printf("* Select AM modulation\n");
   printf("* Select AM Source Ext 1 and Ext Coupling AC\n");
   printf("* Turn On the modulation.\n");
   printf("* Do not connect any source to the input\n");
   printf("* Check signal generator's display for the EXT1 LO
annunciator\n");
   printf("\n");
   printf("Press Enter when ready\n");
   printf("\n");
   getch();
                                           // Waits for keyboard
user input
   viPrintf(vi, "STAT:QUES:MOD:ENAB 16\n"); // Enables the Data
Ouestionable
                                         // Modulation Condition
Register
           // bits '0','1','2','3' and '4'
   viPrintf(vi, "STAT:QUES:MOD:COND?\n"); // Querys the register
for any
           // set bits
   viScanf(vi, "%s", rdBuffer);  // Reads the decimal sum
of the
           // set bits
   num=(int (rdBuffer[1]) -('0')); // Converts string data to
numeric
   switch (num)
                                         // Based on the decimal
value
   {
       case 1:
   printf("Signal Generator Modulation 1 Undermod\n");
```

```
printf("\n");
break;
    case 2:
printf("Signal Generator Modulation 1 Overmod\n");
printf("\n");
break;
    case 4:
printf("Signal Generator Modulation 2 Undermod\n");
printf("\n");
break;
    case 8:
printf("Signal Generator Modulation 2 Overmod\n");
printf("\n");
break;
    case 16:
printf("Signal Generator Modulation Uncalibrated\n");
printf("\n");
break;
    default:
printf("No Problems with Modulation\n");
printf("\n");
}
// Close the sessions
viClose(vi);
viClose(defaultRM);
```

}

Reading the Service Request Interrupt (SRQ) Using VISA and C

This example demonstrates use of the Service Request (SRQ) interrupt. By using the SRQ, the computer can attend to other tasks while the signal generator is busy performing a function or operation. When the signal generator finishes its operation, or detects a failure, then a Service Request can be generated. The computer will respond to the SRQ and, depending on the code, can perform some other operation or notify the user of failures or other conditions.

This program sets up a step sweep function for the signal generator and, while the operation is in progress, prints out a series of asterisks. When the step sweep operation is complete, an SRQ is generated and the printing ceases.

Launch Microsoft Visual C++ 6.0, add the required files, and enter the following code into your .cpp source file. visaex10.cpp performs the following functions:

- error checking
- clears the signal generator
- resets the signal generator
- prompts user to manually begin the step sweep and waits for response
- clears the status register
- sets up the operation status group to respond to an end of sweep
- the data questionable status register is enabled to read an unleveled condition
- prompts user to manually set up the signal generator for an unleveled condition
- queries the data questionable status register for any set bits and converts the string data to numeric
- based on the numeric value, program checks for a corresponding status check value
- similarly checks for over or undermodulation condition

The following program example is available on the signal generator Documentation CD-ROM as visaex10.cpp.

```
//
#include "visa.h"
#include <stdio.h>
#include "StdAfx.h"
#include "windows.h"
#include <conio.h>
#define MAX_CNT 1024
int sweep=1; // End of sweep flag
/* Prototypes */
ViStatus _VI_FUNCH interupt(ViSession vi, ViEventType eventType,
ViEvent event, ViAddr addr);
int main ()
{
   ViSession defaultRM, vi;// Declares variables of type ViSession
   // for instrument communication
   ViStatus viStatus = 0;// Declares a variable of type ViStatus
                       // for GPIB verifications
   char rdBuffer[MAX_CNT];// Declare a block of memory data
   viStatus=viOpenDefaultRM(&defaultRM);// Initialize VISA session
   if(viStatus < VI_SUCCESS){// If problems, then prompt user</pre>
   printf("ERROR initializing VISA... exiting\n");
   printf("\n");
   return -1;}
                               // Open session to gpib device at
address 19
```

```
viStatus=viOpen(defaultRM, "GPIB::19::INSTR", VI_NULL, VI_NULL,
&vi);
   if(viStatus){
                                 // If problems then prompt user
   printf("ERROR: Could not open communication with
                                         instrument\n");
   printf("\n");
   return -1;}
   viClear(vi);
                                // Clears the signal generator
   viPrintf(vi, "*RST\n");
                                // Resets signal generator
                                 // Print program header and
information
   printf("** End of Sweep Service Request **\n");
   printf("\n");
   printf("The signal generator will be set up for a step sweep mode
                         operation.\n");
   printf("An '*' will be printed while the instrument is sweeping.
The end of
                                    \n");
   printf("sweep will be indicated by an SRQ on the GPIB and the
program will
                                     end.\n");
   printf("\n");
   printf("Press Enter to continue\n");
   printf("\n");
   getch();
   viPrintf(vi, "*CLS\n");// Clears signal generator status byte
   viPrintf(vi, "STAT:OPER:NTR 8\n");// Sets the Operation Status
Group // Negative Transition Filter to indicate a // negative
transition in Bit 3 (Sweeping)
   // which will set a corresponding event in // the Operation
Event Register. This occurs // at the end of a sweep.
   viPrintf(vi, "STAT:OPER:PTR 0\n");// Sets the Operation Status
Group // Positive Transition Filter so that no
   // positive transition on Bit 3 affects the // Operation Event
Register. The positive // transition occurs at the start of a
   viPrintf(vi, "STAT:OPER:ENAB 8\n");// Enables Operation Status
Event Bit 3 // to report the event to Status Byte // Register
Summary Bit 7.
```

```
viPrintf(vi, "*SRE 128\n");// Enables Status Byte Register
Summary Bit 7
   // The next line of code indicates the // function to call on an
event
   viStatus = viInstallHandler(vi, VI EVENT SERVICE REQ, interupt,
rdBuffer);
   // The next line of code enables the // detection of an event
   viStatus = viEnableEvent(vi, VI_EVENT_SERVICE_REQ, VI_HNDLR,
VI_NULL);
   viPrintf(vi, "FREQ:MODE LIST\n");// Sets frequency mode to list
   viPrintf(vi, "LIST:TYPE STEP\n");// Sets sweep to step
   viPrintf(vi, "LIST:TRIG:SOUR IMM\n");// Immediately trigger the
sweep
   viPrintf(vi, "LIST:MODE AUTO\n");// Sets mode for the list sweep
   viPrintf(vi, "FREQ:STAR 40 MHZ\n"); // Start frequency set to 40
MHz
   viPrintf(vi, "FREQ:STOP 900 MHZ\n");// Stop frequency set to 900
MHz
   viPrintf(vi, "SWE:POIN 25\n");// Set number of points for the
step sweep
   viPrintf(vi, "SWE:DWEL .5 S\n");// Allow .5 sec dwell at each
point
   viPrintf(vi, "INIT:CONT OFF\n");// Set up for single sweep
   viPrintf(vi, "TRIG:SOUR IMM\n");// Triggers the sweep
   viPrintf(vi, "INIT\n"); // Takes a single sweep
   printf("\n");
   // While the instrument is sweeping have the
   // program busy with printing to the display.
   // The Sleep function, defined in the header
   // file windows.h, will pause the program
   // operation for .5 seconds
   while (sweep==1){
   printf("*");
   Sleep(500);}
   printf("\n");
   // The following lines of code will stop the
```

```
// events and close down the session
   viStatus = viDisableEvent(vi,
VI_ALL_ENABLED_EVENTS, VI_ALL_MECH);
   viStatus = viUninstallHandler(vi, VI_EVENT_SERVICE_REQ,
                                                          rdBuffer);
interupt,
   viStatus = viClose(vi);
   viStatus = viClose(defaultRM);
   return 0;
}
// The following function is called when an SRQ event occurs. Code
specific to your
// requirements would be entered in the body of the function.
ViStatus _VI_FUNCH interupt(ViSession vi, ViEventType eventType,
ViEvent event, ViAddr
                                                   addr)
{
   ViStatus status;
   ViUInt16 stb;
   status = viReadSTB(vi, &stb);// Reads the Status Byte
   sweep=0;// Sets the flag to stop the '*' printing
   printf("\n");// Print user information
   printf("An SRQ, indicating end of sweep has occurred\n");
   viClose(event);// Closes the event
   return VI SUCCESS;
}
```

LAN Programming Interface Examples

NOTE

The LAN programming examples in this section demonstrate the use of VXI-11 and Sockets LAN to control the signal generator.

To use these programming examples you must change references to the IP address and hostname to match the IP address and hostname of your signal generator.

- "VXI-11 Programming Using SICL and C++" on page 116
- "VXI-11 Programming Using VISA and C++" on page 118
- "Sockets LAN Programming and C" on page 120
- "Sockets LAN Programming Using Java" on page 150
- "Sockets LAN Programming Using Perl" on page 153
- "TCP-IP (LAN) Programming Using Matlab" on page 154

For additional LAN programming examples that work with user-data files, refer to:

"Save and Recall Instrument State Files" on page 365

VXI-11 Programming

The signal generator supports the VXI-11 standard for instrument communication over the LAN interface. Keysight IO Libraries support the VXI-11 standard and must be installed on your computer before using the VXI-11 protocol. Refer to "Using VXI-11" on page 50 for information on configuring and using the VXI-11 protocol.

The VXI-11 examples use TCPIPO as the board address.

Using VXI-11 with GPIB Programs

The GPIB programming examples that use the VISA library, and are listed in "GPIB Programming Interface Examples" on page 68, can be easily changed to use the LAN VXI-11 protocol by changing the address string. For example, change the "GPIB::19::INSTR" address string to "TCPIP::hostname::INSTR" where hostname is the IP address or hostname of the signal generator. The VXI-11 protocol has the same capabilities as GPIB. See the section "Setting Up the LAN Interface" on page 43 for more information.

NOTE

To communicate with the signal generator over the LAN interface you must enable the VXI-11 SCPI service. For more information, refer to "Configuring the VXI-11 Service" on page 43.

VXI-11 Programming Using SICL and C++

The following program uses the VXI-11 protocol and SICL to control the signal generator. Before running this code, you must set up the interface using the Keysight IO Libraries IO Config utility. vxisicl.cpp performs the following functions:

- sets signal generator to 1 GHz CW frequency
- queries signal generator for an ID string
- error checking

The following program example is available on the signal generator Documentation CD-ROM as vxisicl.cpp.

```
//
// PROGRAM NAME: vxisicl.cpp
//
// PROGRAM DESCRIPTION:Sample test program using SICL and the VXI-11
protocol
//
// NOTE: You must have the Keysight IO Libraries installed to run
this program.
//
// This example uses the VXI-11 protocol to set the signal generator
for a 1 gHz CW // frequency. The signal generator is queried for
operation complete and then queried
// for its ID string. The frequency and ID string are then printed
to the display.
// IMPORTANT: Enter in your signal generators hostname in the
instrumentName declaration
// where the "xxxxx" appears.
#include "stdafx.h"
#include <sicl.h>
#include <stdlib.h>
#include <stdio.h>
```

```
Programming Examples
LAN Programming Interface Examples
int main(int argc, char* argv[])
{
   INST id;
                                               // Device session id
   int opcResponse;
                                                  // Variable for
response flag
   char instrumentName[] = "xxxxxx"; // Put your instrument's
hostname here
   char instNameBuf[256];// Variable to hold instrument name
   char buf[256];// Variable for id string
   ionerror(I_ERROR_EXIT);// Register SICL error handler
               // Open SICL instrument handle using VXI-11 protocol
   sprintf(instNameBuf, "lan[%s]:inst0", instrumentName);
   id = iopen(instNameBuf);// Open instrument session
   itimeout(id, 1000);// Set 1 second timeout for operations
   printf("Setting frequency to 1 Ghz...\n");
   iprintf(id, "freq 1 GHz\n");// Set frequency to 1 GHz
   printf("Waiting for source to settle...\n");
   iprintf(id, "*opc?\n");// Query for operation complete
   iscanf(id, "%d", &opcResponse); // Operation complete flag
   if (opcResponse != 1)// If operation fails, prompt user
      printf("Bad response to 'OPC?'\n");
      iclose(id);
      exit(1);
   }
   iprintf(id, "FREQ?\n");// Query the frequency
   iscanf(id, "%t", &buf);// Read the signal generator frequency
   printf("\n");// Print the frequency to the display
   printf("Frequency of signal generator is %s\n", buf);
```

```
ipromptf(id, "*IDN?\n", "%t", buf);// Query for id string
printf("Instrument ID: %s\n", buf);// Print id string to display
iclose(id);// Close the session
return 0;
}
```

VXI-11 Programming Using VISA and C++

The following program uses the VXI-11 protocol and the VISA library to control the signal generator. The signal generator is set to a -5 dBm power level and queried for its ID string. Before running this code, you must set up the interface using the Keysight IO Libraries IO Config utility. vxivisa.cpp performs the following functions:

- sets signal generator to a -5 dBm power level
- queries signal generator for an ID string
- error checking

The following program example is available on the signal generator Documentation CD-ROM as vxivisa.cpp.

```
// PROGRAM FILE NAME:vxivisa.cpp
// Sample test program using the VISA libraries and the VXI-11
protocol
//
// NOTE: You must have the Keysight Libraries installed on your
computer to run
// this program
// PROGRAM DESCRIPTION: This example uses the VXI-11 protocol and
VISA to query
// the signal generator for its ID string. The ID string is then
printed to the
// screen. Next the signal generator is set for a -5 dBm power level
and then
// queried for the power level. The power level is printed to the
screen.
//
// IMPORTANT: Set up the LAN Client using the IO Config utility
//
```

```
#include <visa.h>
#include <stdio.h>
#include "StdAfx.h"
#include <stdlib.h>
#include <conio.h>
#define MAX_COUNT 200
int main (void)
{
   ViStatus status;// Declares a type ViStatus variable
   ViSession defaultRM, instr;// Declares a type ViSession variable
   ViUInt32 retCount;// Return count for string I/O
   ViChar buffer[MAX_COUNT];// Buffer for string I/O
   status = viOpenDefaultRM(&defaultRM); // Initialize the
system
                                         // Open communication
with Serial
                                         // Port 2
   status = viOpen(defaultRM, "TPCIPO::19::INSTR", VI_NULL,
VI_NULL, &instr);
   if(status){
                                     // If problems then prompt
user
   printf("Could not open ViSession!\n");
   printf("Check instruments and connections\n");
   printf("\n");
   exit(0);}
                                         // Set timeout for 5
seconds
   viSetAttribute(instr, VI_ATTR_TMO_VALUE, 5000);
```

```
// Ask for sig gen ID
string
   status = viWrite(instr, (ViBuf)"*IDN?\n", 6, &retCount);
                                            // Read the sig gen
response
   status = viRead(instr, (ViBuf)buffer, MAX COUNT, &retCount);
   buffer[retCount]= '\0';
                                            // Indicate the end of
the string
   printf("Signal Generator ID = ");
                                           // Print header for ID
   printf(buffer);
                                            // Print the ID string
   printf("\n");
                                           // Print carriage return
                                            // Flush the read buffer
                                            // Set sig gen power to
-5dbm
   status = viWrite(instr, (ViBuf)"POW:AMPL -5dbm\n", 15,
&retCount);
                                            // Query the power level
   status = viWrite(instr, (ViBuf)"POW?\n",5,&retCount);
                                            // Read the power level
   status = viRead(instr, (ViBuf)buffer, MAX_COUNT, &retCount);
   buffer[retCount] = '\0';
                                            // Indicate the end of
the string
   printf("Power level = ");
                                            // Print header to the
screen
   printf(buffer);
                                         // Print the queried power
level
   printf("\n");
   status = viClose(instr);
                                          // Close down the system
   status = viClose(defaultRM);
   return 0;
}
```

Sockets LAN Programming and C

The program listing shown in "Queries for Lan Using Sockets" on page 124 consists of two files; lanio.c and getopt.c. The lanio.c file has two main functions; int main() and an int main1().

The int main() function allows communication with the signal generator interactively from the command line. The program reads the signal generator's hostname from the command line, followed by the SCPI command. It then opens a socket to the signal generator, using port 5025, and sends the command. If the command appears to be a query, the program queries the signal generator for a response, and prints the response.

The int main1(), after renaming to int main(), will output a sequence of commands to the signal generator. You can use the format as a template and then add your own code.

This program is available on the signal generator Documentation CD-ROM as lanio.c.

Sockets on UNIX

In UNIX, LAN communication through sockets is very similar to reading or writing a file. The only difference is the openSocket() routine, which uses a few network library routines to create the TCP/IP network connection. Once this connection is created, the standard fread() and fwrite() routines are used for network communication. The following steps outline the process:

- 1. Copy the lanio.c and getopt.c files to your home UNIX directory. For example, /users/mydir/.
- 2. At the UNIX prompt in your home directory type: cc -Aa -O -o lanio lanio.c
- **3.** At the UNIX prompt in your home directory type: ./lanio xxxxx "*IDN?" where xxxxx is the hostname for the signal generator. Use this same format to output SCPI commands to the signal generator.

The int main1() function will output a sequence of commands in a program format. If you want to run a program using a sequence of commands then perform the following:

- 1. Rename the lanio.c int main1() to int main() and the original int main() to int main1().
- 2. In the main(), openSocket() function, change the "your hostname here" string to the hostname of the signal generator you want to control.
- **3.** Re-save the lanio.c program.
- 4. At the UNIX prompt type: cc -Aa -O -o lanio lanio.c
- **5.** At the UNIX prompt type: ./lanio

The program will run and output a sequence of SCPI commands to the signal generator. The UNIX display will show a display similar to the following:

```
unix machine: /users/mydir
$ ./lanio
ID: Keysight Technologies, E4438C, US70000001, C.02.00
```

Frequency: +2.500000000000E+09
Power Level: -5.00000000E+000

Sockets on Windows

In Windows, the routines send() and recv() must be used, since fread() and fwrite() may not work on sockets. The following steps outline the process for running the interactive program in the Microsoft Visual C++ 6.0 environment:

1. Rename the lanio.c to lanio.cpp and getopt.c to getopt.cpp and add them to the Source folder of the Visual C++ project.

NOTE

The int main() function in the lanio.cpp file will allow commands to be sent to the signal generator in a line-by-line format; the user types in SCPI commands. The int main1(0) function can be used to output a sequence of commands in a "program format." See Programming Using main1() Function below.

- 2. Click Rebuild All from Build menu. Then Click Execute Lanio.exe. The Debug window will appear with a prompt "Press any key to continue." This indicates that the program has compiled and can be used to send commands to the signal generator.
- **3.** Click **Start**, click **Programs**, then click **Command Prompt**. The command prompt window will appear.
- **4.** At the command prompt, cd to the directory containing the lanio.exe file and then to the Debug folder. For example C:\SocketIO\Lanio\Debug.
- **5.** After you cd to the directory where the lanio.exe file is located, type in the following command at the command prompt: lanio xxxxx "*IDN?". For example:
 - C:\SocketIO\Lanio\Debug>lanio xxxxx "*IDN?" where the xxxxx is the hostname of your signal generator. Use this format to output SCPI commands to the signal generator in a line by line format from the command prompt.
- **6.** Type exit at the command prompt to guit the program.

Programming Using main1() Function


The int main1() function will output a sequence of commands in a program format. If you want to run a program using a sequence of commands then perform the following:

- 1. Enter the hostname of your signal generator in the openSocket function of the main1() function of the lanio.cpp program.
- 2. Rename the lanio.cpp int main1() function to int main() and the original int main() function to int main1().

3. Select Rebuild All from Build menu. Then select Execute Lanio.exe.

The program will run and display results similar to those shown in Figure 3-1.

Figure 3-1 Program Output Screen

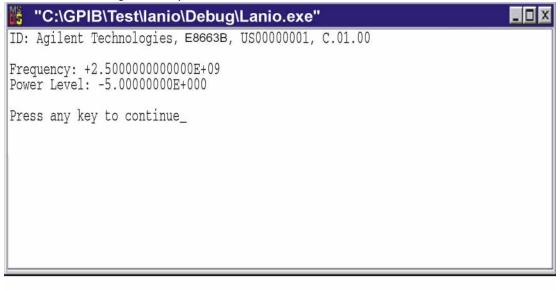

Queries for Lan Using Sockets

lanio.c and getopt.c perform the following functions:

- establishes TCP/IP connection to port 5025
- resultant file descriptor is used to "talk" to the instrument using regular socket I/O mechanisms
- maps the desired hostname to an internal form
- error checks
- queries signal generator for ID
- sets frequency on signal generator to 2.5 GHz
- sets power on signal generator to -5 dBm
- gets option letter from argument vector and checks for end of file (EOF)

The following programming examples are available on the signal generator Documentation CD-ROM as lanio.c and getopt.c.

```
/*****************************
   $Header: lanio.c 04/24/01
   $Revision: 1.1 $
   $Date: 10/24/01
   PROGRAM NAME:
   $Description:
                    Functions to talk to an Keysight signal
generator
                    via TCP/IP. Uses command-line arguments.
                  A TCP/IP connection to port 5025 is established
and
                  the resultant file descriptor is used to "talk"
to the
                  instrument using regular socket I/O mechanisms.
$
   Examples:
    Query the signal generator frequency:
         lanio xx.xxx.xx.x 'FREQ?'
```

```
Query the signal generator power level:
         lanio xx.xxx.xx.x 'POW?'
    Check for errors (gets one error):
         lanio xx.xxx.xx.x 'syst:err?'
    Send a list of commands from a file, and number them:
         cat scpi_cmds | lanio -n xx.xxx.xx.x
***********************
   This program compiles and runs under
      - HP-UX 10.20 (UNIX), using HP cc or gcc:
            + cc -Aa -O -o lanio lanio.c
            + gcc -Wall -O -o lanio lanio.c
      - Windows 95, using Microsoft Visual C++ 4.0 Standard Edition
 *
      - Windows NT 3.51, using Microsoft Visual C++ 4.0
           + Be sure to add WSOCK32.LIB to your list of libraries!
            + Compile both lanio.c and getopt.c
            + Consider re-naming the files to lanio.cpp and
getopt.cpp
  Considerations:
      - On UNIX systems, file I/O can be used on network sockets.
 *
        This makes programming very convenient, since routines like
        getc(), fgets(), fscanf() and fprintf() can be used. These
        routines typically use the lower level read() and write()
calls.
      - In the Windows environment, file operations such as read(),
write(),
*
       and close() cannot be assumed to work correctly when applied
to
```

```
sockets. Instead, the functions send() and recv() MUST be
used.
/* Support both Win32 and HP-UX UNIX environment */
#ifdef _WIN32 /* Visual C++ 6.0 will define this */
# define WINSOCK
#endif
#ifndef WINSOCK
# ifndef HPUX SOURCE
# define HPUX SOURCE
# endif
#endif
#include <stdio.h>
                     /* for fprintf and NULL */
                     /* for memcpy and memset */
#include <string.h>
                      /* for malloc(), atol() */
#include <stdlib.h>
#include <errno.h> /* for strerror */
#ifdef WINSOCK
#include <windows.h>
# ifndef _WINSOCKAPI_
# include <winsock.h> // BSD-style socket functions
# endif
                       /* UNIX with BSD sockets */
#else
# include <sys/socket.h> /* for connect and socket*/
# include <netinet/in.h> /* for sockaddr_in
                       /* for gethostbyname
                                              */
# include <netdb.h>
```

```
# define SOCKET_ERROR (-1)
# define INVALID SOCKET (-1)
  typedef int SOCKET;
#endif /* WINSOCK */
#ifdef WINSOCK
 /* Declared in getopt.c. See example programs disk. */
 extern char *optarg;
 extern int optind;
 extern int getopt(int argc, char * const argv[], const char*
optstring);
#else
# include <unistd.h> /* for getopt(3C) */
#endif
#define COMMAND ERROR (1)
#define NO_CMD_ERROR (0)
#define SCPI_PORT 5025
#define INPUT_BUF_SIZE (64*1024)
* Display usage
static void usage(char *basename)
   fprintf(stderr, "Usage: %s [-nqu] <hostname> [<command>]\n",
basename);
```

```
fprintf(stderr,"
                         %s [-nqu] <hostname> < stdin\n",</pre>
basename);
   fprintf(stderr," -n, number output lines\n");
   fprintf(stderr," -q, quiet; do NOT echo lines\n");
    fprintf(stderr," -e, show messages in error queue when
done\n");
}
#ifdef WINSOCK
int init_winsock(void)
{
   WORD wVersionRequested;
   WSADATA wsaData;
    int err;
   wVersionRequested = MAKEWORD(1, 1);
    wVersionRequested = MAKEWORD(2, 0);
    err = WSAStartup(wVersionRequested, &wsaData);
    if (err != 0) {
        /* Tell the user that we couldn't find a useable */
        /* winsock.dll. */
        fprintf(stderr, "Cannot initialize Winsock 1.1.\n");
        return -1;
    }
    return 0;
}
int close_winsock(void)
{
   WSACleanup();
    return 0;
```

```
Programming Examples
LAN Programming Interface Examples
}
#endif /* WINSOCK */
> $Function: openSocket$
* $Description: open a TCP/IP socket connection to the instrument
$
* $Parameters: $
    (const char *) hostname . . . . Network name of instrument.
                              This can be in dotted decimal
notation.
    (int) portNumber \dots . The TCP/IP port to talk to.
                               Use 5025 for the SCPI port.
* $Return: (int) . . . . . . A file descriptor similar to
open(1).$
* $Errors: returns -1 if anything goes wrong $
SOCKET openSocket(const char *hostname, int portNumber)
{
   struct hostent *hostPtr;
   struct sockaddr_in peeraddr_in;
   SOCKET s;
   memset(&peeraddr in, 0, sizeof(struct sockaddr in));
```

```
/****************/
   /* map the desired host name to internal form. */
   hostPtr = gethostbyname(hostname);
   if (hostPtr == NULL)
   {
       fprintf(stderr, "unable to resolve hostname '%s'\n",
hostname);
       return INVALID_SOCKET;
   }
   /**************/
   /* create a socket */
   /**************/
   s = socket(AF_INET, SOCK_STREAM, 0);
   if (s == INVALID_SOCKET)
   {
       fprintf(stderr,"unable to create socket to '%s': %s\n",
              hostname, strerror(errno));
       return INVALID_SOCKET;
   }
   memcpy(&peeraddr_in.sin_addr.s_addr, hostPtr->h_addr,
hostPtr->h_length);
   peeraddr_in.sin_family = AF_INET;
   peeraddr in.sin port = htons((unsigned short)portNumber);
   if (connect(s, (const struct sockaddr*)&peeraddr in,
              sizeof(struct sockaddr_in)) == SOCKET_ERROR)
   {
       fprintf(stderr,"unable to create socket to '%s': %s\n",
              hostname, strerror(errno));
       return INVALID_SOCKET;
   }
```

```
return s;
}
> $Function: commandInstrument$
* $Description: send a SCPI command to the instrument.$
* $Parameters: $
     (FILE *) . . . . . . . file pointer associated with TCP/IP
socket.
     (const char *command) . . SCPI command string.
* $Return: (char *) . . . . . a pointer to the result string.
* $Errors: returns 0 if send fails $
int commandInstrument(SOCKET sock,
                  const char *command)
{
   int count;
   /* fprintf(stderr, "Sending \"%s\".\n", command); */
   if (strchr(command, '\n') == NULL) {
     fprintf(stderr, "Warning: missing newline on command %s.\n",
command);
   }
   count = send(sock, command, strlen(command), 0);
   if (count == SOCKET_ERROR) {
```

```
return COMMAND_ERROR;
   }
   return NO_CMD_ERROR;
}
/****************************
* recv_line(): similar to fgets(), but uses recv()
char * recv_line(SOCKET sock, char * result, int maxLength)
{
#ifdef WINSOCK
   int cur_length = 0;
   int count;
   char * ptr = result;
   int err = 1;
   while (cur_length < maxLength) {</pre>
      /* Get a byte into ptr */
      count = recv(sock, ptr, 1, 0);
      /* If no chars to read, stop. */
      if (count < 1) {
          break;
       }
      cur_length += count;
       /* If we hit a newline, stop. */
      if (*ptr == '\n') {
          ptr++;
          err = 0;
          break;
```

```
}
     ptr++;
   }
   *ptr = '\0';
  if (err) {
      return NULL;
   } else {
     return result;
   }
#else
* Simpler UNIX version, using file I/O. recv() version works
too.
   * This demonstrates how to use file I/O on sockets, in UNIX.
FILE * instFile;
   instFile = fdopen(sock, "r+");
   if (instFile == NULL)
   {
     fprintf(stderr, "Unable to create FILE * structure : %s\n",
           strerror(errno));
     exit(2);
   }
   return fgets(result, maxLength, instFile);
#endif
}
/***************************
```

```
> $Function: queryInstrument$
* $Description: send a SCPI command to the instrument, return a
response.$
* $Parameters: $
    (FILE *) . . . . . . . file pointer associated with TCP/IP
socket.
     (const char *command) . . SCPI command string.
     (char *result) . . . . . where to put the result.
     (size_t) maxLength . . . . maximum size of result array in
bytes.
* $Return: (long) . . . . . . The number of bytes in result
buffer.
* $Errors: returns 0 if anything goes wrong. $
long queryInstrument(SOCKET sock,
                  const char *command, char *result, size_t
maxLength)
{
   long ch;
   char tmp_buf[8];
   long resultBytes = 0;
   int command err;
   int count;
   /**********************************
    * Send command to signal generator
    command err = commandInstrument(sock, command);
   if (command err) return COMMAND ERROR;
```

```
/***********************************
 * Read response from signal generator
count = recv(sock, tmp_buf, 1, 0); /* read 1 char */
ch = tmp_buf[0];
if ((count < 1) || (ch == EOF) || (ch == '\n'))
{
   *result = '\0'; /* null terminate result for ascii */
   return 0;
}
/* use a do-while so we can break out */
do
{
   if (ch == '#')
   {
       /* binary data encountered - figure out what it is */
       long numDigits;
       long numBytes = 0;
       /* char length[10]; */
       count = recv(sock, tmp_buf, 1, 0); /* read 1 char */
       ch = tmp_buf[0];
       if ((count < 1) || (ch == EOF)) break; /* End of file */</pre>
       if (ch < '0' || ch > '9') break; /* unexpected char */
       numDigits = ch - '0';
       if (numDigits)
       {
           /* read numDigits bytes into result string. */
```

```
count = recv(sock, result, (int)numDigits, 0);
              result[count] = 0; /* null terminate */
              numBytes = atol(result);
          }
          if (numBytes)
          {
              resultBytes = 0;
              /* Loop until we get all the bytes we requested. */
              /* Each call seems to return up to 1457 bytes, on
HP-UX 9.05 */
              do {
                  int rcount;
                  rcount = recv(sock, result, (int)numBytes, 0);
                  resultBytes += rcount;
                           += rcount; /* Advance pointer */
                  result
              } while ( resultBytes < numBytes );</pre>
/********************************
               * For LAN dumps, there is always an extra trailing
newline
              * Since there is no EOI line. For ASCII dumps this
is
            * great but for binary dumps, it is not needed.
if (resultBytes == numBytes)
              {
                  char junk;
                  count = recv(sock, &junk, 1, 0);
              }
          }
          else
           {
```

```
/* indefinite block ... dump til we can an extra line
feed */
               do
               {
                  if (recv_line(sock, result, maxLength) == NULL)
break;
                  if (strlen(result)==1 && *result == '\n') break;
                   resultBytes += strlen(result);
                   result += strlen(result);
               } while (1);
           }
       }
       else
       {
           /* ASCII response (not a binary block) */
           *result = (char)ch;
           if (recv_line(sock, result+1, maxLength-1) == NULL)
return 0;
           /* REMOVE trailing newline, if present. And terminate
string. */
           resultBytes = strlen(result);
           if (result[resultBytes-1] == '\n') resultBytes -= 1;
           result[resultBytes] = '\0';
       }
   } while (0);
   return resultBytes;
}
/**********************
```

```
> $Function: showErrors$
* $Description: Query the SCPI error queue, until empty. Print
results. $
* $Return: (void)
void showErrors(SOCKET sock)
{
  const char * command = "SYST:ERR?\n";
  char result_str[256];
  do {
     queryInstrument(sock, command, result_str,
sizeof(result_str)-1);
* Typical result str:
          -221, "Settings conflict; Frequency span reduced."
          +0, "No error"
      * Don't bother decoding.
if (strncmp(result_str, "+0,", 3) == 0) {
        /* Matched +0,"No error" */
        break;
     }
     puts(result_str);
  } while (1);
}
```

```
> $Function: isQuery$
* $Description: Test current SCPI command to see if it a query. $
* $Return: (unsigned char) . . . non-zero if command is a query. 0
if not.
unsigned char isQuery( char* cmd )
{
  unsigned char q = 0;
  char *query ;
   /* if the command has a '?' in it, use queryInstrument. */
  /* otherwise, simply send the command.
                                            */
  /* Actually, we must be a more specific so that */
   /* marker value querys are treated as commands.
                                            */
   /* Example: SENS:FREQ:CENT (CALC1:MARK1:X?)
                                            */
   if ( (query = strchr(cmd,'?')) != NULL)
   {
     /* Make sure we don't have a marker value query, or
      * any command with a '?' followed by a ')' character.
      * This kind of command is not a query from our point of
view.
      * The signal generator does the query internally, and uses
the result.
      */
     while (*query)
     {
```

```
if (*query == ' ') /* attempt to ignore white spc */
               query++;
           else break;
       }
       if ( *query != ')' )
       {
           q = 1;
       }
   }
   return q;
}
 > $Function: main$
 * $Description: Read command line arguments, and talk to signal
generator.
               Send query results to stdout. $
 * $Return: (int) . . . non-zero if an error occurs
**************************
int main(int argc, char *argv[])
{
   SOCKET instSock;
   char *charBuf = (char *) malloc(INPUT_BUF_SIZE);
   char *basename;
   int chr;
   char command[1024];
```

```
char *destination;
    unsigned char quiet = 0;
    unsigned char show errs = 0;
    int number = 0;
    basename = strrchr(argv[0], '/');
    if (basename != NULL)
        basename++ ;
    else
        basename = argv[0];
    while ( ( chr = getopt(argc,argv,"qune")) != EOF )
        switch (chr)
        {
            case 'q': quiet = 1; break;
            case 'n': number = 1; break ;
            case 'e': show_errs = 1; break ;
            case 'u':
            case '?': usage(basename); exit(1);
        }
    /* now look for hostname and optional <command>*/
    if (optind < argc)</pre>
    {
        destination = argv[optind++] ;
        strcpy(command, "");
        if (optind < argc)</pre>
        {
            while (optind < argc) {</pre>
                /* <hostname> <command> provided; only one command
string */
                strcat(command, argv[optind++]);
                if (optind < argc) {</pre>
                    strcat(command, " ");
```

```
} else {
                 strcat(command, "\n");
             }
          }
       }
      else
       {
          /*Only <hostname> provided; input on <stdin> */
          strcpy(command, "");
          if (optind > argc)
             usage(basename);
             exit(1);
          }
       }
   }
   else
   {
      /* no hostname! */
      usage(basename);
      exit(1);
   }
   /*****************
   /* open a socket connection to the instrument
   /******************/
#ifdef WINSOCK
   if (init_winsock() != 0) {
      exit(1);
   }
#endif /* WINSOCK */
```

```
instSock = openSocket(destination, SCPI_PORT);
if (instSock == INVALID_SOCKET) {
   fprintf(stderr, "Unable to open socket.\n");
   return 1;
}
/* fprintf(stderr, "Socket opened.\n"); */
if (strlen(command) > 0)
/*****************
/* if the command has a '?' in it, use queryInstrument. */
/* otherwise, simply send the command.
if ( isQuery(command) )
   {
       long bufBytes;
       bufBytes = queryInstrument(instSock, command,
                               charBuf, INPUT BUF SIZE);
       if (!quiet)
       {
          fwrite(charBuf, bufBytes, 1, stdout);
          fwrite("\n", 1, 1, stdout);
          fflush(stdout);
       }
   }
   else
   {
       commandInstrument(instSock, command);
   }
}
else
{
   /* read a line from <stdin> */
   while ( gets(charBuf) != NULL )
```

```
{
            if ( !strlen(charBuf) )
                continue;
            if ( *charBuf == '#' || *charBuf == '!' )
                continue;
            strcat(charBuf, "\n");
            if (!quiet)
            {
                if (number)
                {
                    char num[10];
                    sprintf(num,"%d: ",number);
                    fwrite(num, strlen(num), 1, stdout);
                }
                fwrite(charBuf, strlen(charBuf), 1, stdout);
                fflush(stdout);
            }
            if ( isQuery(charBuf) )
            {
                long bufBytes;
                /* Put the query response into the same buffer as
the*/
                /* command string appended after the null
terminator.*/
                bufBytes = queryInstrument(instSock, charBuf,
                                          charBuf + strlen(charBuf)
+ 1,
                                            INPUT_BUF_SIZE
-strlen(charBuf) );
```

```
if (!quiet)
                {
                    fwrite(" ", 2, 1, stdout);
                   fwrite(charBuf + strlen(charBuf)+1, bufBytes, 1,
stdout);
                    fwrite("\n", 1, 1, stdout);
                    fflush(stdout);
                }
            }
            else
            {
                commandInstrument(instSock, charBuf);
            }
            if (number) number++;
        }
    }
    if (show_errs) {
        showErrors(instSock);
    }
#ifdef WINSOCK
    closesocket(instSock);
    close_winsock();
#else
    close(instSock);
#endif /* WINSOCK */
    return 0;
}
/* End of lanio.cpp *
```

```
/* $Function: main1$
*/
/* $Description: Output a series of SCPI commands to the signal
generator */
         Send query results to stdout. $
*/
/* $Return: (int) . . . non-zero if an error occurs
*/
/*
*/
/* Rename this int main1() function to int main(). Re-compile and
the
    */
/* execute the program
int main1()
{
  SOCKET instSock;
  long bufBytes;
  char *charBuf = (char *) malloc(INPUT_BUF_SIZE);
  /* open a socket connection to the instrument*/
  #ifdef WINSOCK
  if (init_winsock() != 0) {
     exit(1);
  }
```

```
#endif /* WINSOCK */
   instSock = openSocket("xxxxxxx", SCPI PORT); /* Put your hostname
here */
   if (instSock == INVALID_SOCKET) {
       fprintf(stderr, "Unable to open socket.\n");
       return 1;
   }
   /* fprintf(stderr, "Socket opened.\n"); */
  bufBytes = queryInstrument(instSock, "*IDN?\n", charBuf,
INPUT_BUF_SIZE);
  printf("ID: %s\n",charBuf);
  commandInstrument(instSock, "FREQ 2.5 GHz\n");
  printf("\n");
  bufBytes = queryInstrument(instSock, "FREQ:CW?\n", charBuf,
INPUT_BUF_SIZE);
  printf("Frequency: %s\n",charBuf);
  commandInstrument(instSock, "POW:AMPL -5 dBm\n");
  bufBytes = queryInstrument(instSock, "POW:AMPL?\n", charBuf,
INPUT BUF SIZE);
  printf("Power Level: %s\n",charBuf);
  printf("\n");
#ifdef WINSOCK
   closesocket(instSock);
   close winsock();
#else
   close(instSock);
#endif /* WINSOCK */
   return 0;
}
```

getopt(3C)
getopt(3C)

```
PROGRAM FILE NAME: getopt.c
 getopt - get option letter from argument vector
SYNOPSIS
      int getopt(int argc, char * const argv[], const char
*optstring);
     extern char *optarg;
      extern int optind, opterr, optopt;
PRORGAM DESCRIPTION:
      getopt returns the next option letter in argv (starting from
argv[1])
     that matches a letter in optstring. optstring is a string of
     recognized option letters; if a letter is followed by a colon,
the
     option is expected to have an argument that may or may not be
      separated from it by white space. optarg is set to point to
the start
     of the option argument on return from getopt.
     getopt places in optind the argv index of the next argument to
be
     processed. The external variable optind is initialized to 1
before
     the first call to the function getopt.
     When all options have been processed (i.e., up to the first
non-option
      argument), getopt returns EOF. The special option -- can be
used to
      delimit the end of the options; EOF is returned, and -- is
skipped.
```

```
#include <stdio.h> /* For NULL, EOF */
#include <string.h> /* For strchr() */
                     /* Global argument pointer. */
char
       *optarg;
       optind = 0; /* Global argv index. */
int
static char *scan = NULL; /* Private scan pointer. */
int getopt( int argc, char * const argv[], const char* optstring)
{
    char c;
    char *posn;
    optarg = NULL;
    if (scan == NULL || *scan == '\0') {
       if (optind == 0)
           optind++;
        if (optind >= argc || argv[optind][0] != '-' ||
argv[optind][1] == '\0')
           return(EOF);
        if (strcmp(argv[optind], "--")==0) {
           optind++;
           return(EOF);
       }
        scan = argv[optind]+1;
       optind++;
    }
```

```
c = *scan++;
posn = strchr(optstring, c);  /* DDP */
if (posn == NULL || c == ':') {
    fprintf(stderr, "%s: unknown option -%c\n", argv[0], c);
    return('?');
}
posn++;
if (*posn == ':') {
    if (*scan != '\0') {
        optarg = scan;
        scan = NULL;
    } else {
        optarg = argv[optind];
        optind++;
    }
}
return(c);
```

Sockets LAN Programming Using Java

}

In this example the Java program connects to the signal generator through sockets LAN. This program requires Java version 1.1 or later be installed on your PC. To run the program perform the following steps:

- In the code example below, type in the hostname or IP address of your signal generator. For example, String instrumentName = (your signal generator's hostname).
- 2. Copy the program as ScpiSockTest.java and save it in a convenient directory on your computer. For example save the file to the C:\jdk1.3.0_2\bin\javac directory.
- 3. Launch the Command Prompt program on your computer. Click Start > Programs > Command Prompt.

- **4.** Compile the program. At the command prompt type: javac ScpiSockTest.java.
 - The directory path for the Java compiler must be specified. For example: C:\>jdk1.3.0_02\bin\javac ScpiSockTest.java
- **5.** Run the program by typing java ScpiSockTest at the command prompt.
- **6.** Type exit at the command prompt to end the program.

Generating a CW Signal Using Java

The following program example is available on the signal generator Documentation CD-ROM as javaex.txt.

```
// PROGRAM NAME: javaex.txt
                                               // Sample
java program to talk to the signal generator via SCPI-over-sockets
// This program requires Java version 1.1 or later.
// Save this code as ScpiSockTest.java
// Compile by typing: javac ScpiSockTest.java
// Run by typing: java ScpiSockTest
// The signal generator is set for 1 GHz and queried for its id
string
import java.io.*;
import java.net.*;
class ScpiSockTest
{
   public static void main(String[] args)
     String instrumentName = "xxxxxx";  // Put instrument
hostname here
  try
      {
     Socket t = new Socket(instrumentName, 5025); // Connect to
instrument
                                                     //
Setup read/write mechanism
```

```
BufferedWriter out =
            new BufferedWriter(
           new OutputStreamWriter(t.getOutputStream()));
            BufferedReader in =
            new BufferedReader(
           new InputStreamReader(t.getInputStream()));
            System.out.println("Setting frequency to 1 GHz...");
            out.write("freq 1GHz\n");
                                                  // Sets
frequency
           out.flush();
           System.out.println("Waiting for source to settle...");
            out.write("*opc?\n");
                                                  // Waits for
completion
           out.flush();
           String opcResponse = in.readLine();
            if (!opcResponse.equals("1"))
              System.err.println("Invalid response to '*OPC?'!");
              System.exit(1);
             }
       System.out.println("Retrieving instrument ID...");
       out.write("*idn?\n");
                                                  // Querys the id
string
       out.flush();
       String idnResponse = in.readLine();  // Reads the id
string
                                             // Prints the id string
       System.out.println("Instrument ID: " + idnResponse);
       }
       catch (IOException e)
       System.out.println("Error" + e);
    }
   }
}
```

Sockets LAN Programming Using Perl

This example uses PERL to control the signal generator over the sockets LAN interface. The signal generator frequency is set to 1 GHz, queried for operation complete and then queried for it's identify string. This example was developed using PERL version 5.6.0 and requires a PERL version with the IO::Socket library.

- 1. In the code below, enter your signal generator's hostname in place of the xxxxx in the code line: my \$instrumentName= "xxxxx"; .
- 2. Save the code listed below using the filename lanper1.
- **3.** Run the program by typing perl lanperl at the UNIX term window prompt.

Setting the Power Level and Sending Queries Using PERL

The following program example is available on the signal generator Documentation CD-ROM as perl.txt.

```
#!/usr/bin/perl
# PROGRAM NAME: perl.txt
# Example of talking to the signal generator via SCPI-over-sockets
#
use IO::Socket;
# Change to your instrument's hostname
my $instrumentName = "xxxxx";
# Get socket
$sock = new IO::Socket::INET ( PeerAddr => $instrumentName,
                               PeerPort => 5025,
                               Proto => 'tcp',
                               );
die "Socket Could not be created, Reason: $!\n" unless $sock;
# Set freq
print "Setting frequency...\n";
print $sock "freq 1 GHz\n";
# Wait for completion
print "Waiting for source to settle...\n";
```

```
print $sock "*opc?\n";
my $response = <$sock>;
chomp $response;  # Removes newline from response
if ($response ne "1")
{
    die "Bad response to '*OPC?' from instrument!\n";
}

# Send identification query
print $sock "*IDN?\n";
$response = <$sock>;
chomp $response;
print "Instrument ID: $response\n";
```

TCP-IP (LAN) Programming Using Matlab

The examples in this section are meant to be used in one of three ways:

- Using a PSA to directly calculate and load an Equalization filter into the MXG. (This process can be easily automated.)
 - 1. Set up the PSA to measure the modulation.
 - 2. Turn on the equalization filter.
 - 3. Call loadPsaEqFilterFreq (example 1) in Matlab to read out the equalization channel response over LAN via SCPI and calculate the correct equalization filter.
 - 4. Call writeMxgFir (example 4) in Matlab to write out the equalization filter over LAN via SCPI to the MXG.
- Manual process using the VSA 89600 software to measure the channel response, calculate the correction equalization filter and load that filter into the MXG:
 - 1. Setup to measure the modulation.
 - 2. Turn on the equalization filter.
 - 3. View the equalization channel response trace, either "Eq Ch Freq Resp" or "Eq Impls Resp".
 - 4. Save the trace as ".mat" file, with the header included.
 - 5. Call loadVsaEqFilter (example 3) in Matlab to read the file and calculate a correction filter.

- 6. Call writeMxgFir (example 4) in Matlab to write out the equalization filter over LAN via SCPI to the MXG.
- Takes a user-created filter in Matlab—either an equalization filter or a modulation filter—and writes it to a FIR file in the MXG.

This section contains the following examples:

- 1. "Example 1: Reading Out the Channel Response and Calculating Corrections for an Equalization Filter Using Matlab"
- 2. "Example 2: Reading a PXA Trace and Setting up the Equalization Filter Using Matlab"
- **3.** "Example 3: Reading a VSA Trace and Setting up the Equalization Filter Using Matlab"
- 4. "Example 4: Downloading a FIR filter in Matlab to the MXG"

Example 1: Reading Out the Channel Response and Calculating Corrections for an Equalization Filter Using Matlab

This example reads out the channel response from a PSA and calculates a correction equalization filter that can be loaded into the EXG/MXG.

```
function [corrFilter] = loadPsaEqFilter(psaDev, destRate)
% [corrFilter] = loadPsaEqFilter(psaDev[, destRate])
% Reads out the current Equalization filter active on the PSA
specified.
% The communication is over TCP-IP (LAN).
% destRate is assumed to be 200e6 if missing
% Example: [corrFilter] = loadPsaEqFilter('psa4')
% output of corrFilter is in time domain.
% NOTE: The equalization filter feature in the PSA Digital
Modulation
% Modulation Analysis mode must be ON for this script to work.
% It can be set to EQ Hold ON.
%
% Typically followed with something like:
% writeMxgFir('a-n5182b-00211', 'EQ_1GHZ_62MHZ', corrFilter);
if (nargin<1 || nargin>2)
    error('[corrFilter] = loadPsaEqFilter(psaDev[, destRate]) --
destRate is assumed to be 200e6 if missing');
end
if (nargin<2)
    destRate=200e6;
end
% contact PSA using LAN
t=tcpip(psaDev, 5025);
t.OutputBufferSize=1*1024*1024;
t.InputBufferSize=1*1024*1024;
fopen(t);
fprintf(t, ':FETCh:EVM9?\n');
magDb = readArrayOfDoubles(t);
fprintf(t, ':FETCh:EVM10?\n');
phaseDeg = readArrayOfDoubles(t);
```

```
fprintf(t, ':FETCh:EVM21?\n');
xSteps = readArrayOfDoubles(t);
fclose(t);
freqStep = xSteps(1 + 9*2 + 1);
oversample = 1/xSteps(1 + 8*2 +1);
% /10 compensates for issue with PSA (should be /20)
% this issue will be corrected in a future release
linmag = 10.^{magDb./10};
% *2 compensates for issue with PSA (should be *1)
% this issue will be corrected in a future release
phaseRad = phaseDeg./(360/(2*pi)).*2;
coeffs = linmag.*cos(phaseRad)+j*linmag.*sin(phaseRad);
rate = oversample*round(freqStep*length(coeffs)); % frequency range
is also rate
% we now have a centered frequency domain version of the channel
response
% invert so that we will cancel the channel response
invertedFreqDomain = 1./coeffs;
% convert to time domain (first placing the 0 frequency at the left
edge)
timeDomain=ifft(ifftshift(invertedFreqDomain));
% put time domain 0 time in center
len=length(timeDomain);
if (mod(length(timeDomain), 2)==1) % odd
    center=ceil(len/2);
    centeredTime(1:(center-1)) = timeDomain(center+1:end);
    centeredTime(center:len) = timeDomain(1:center);
else % even
    topHalf = (length(timeDomain)/2)+1;
    centeredTime(1:(topHalf-1)) = timeDomain(topHalf:end);
    centeredTime(topHalf:len) = timeDomain(1:(topHalf-1));
end
% resample to desired rate if necessary
if (abs(destRate-rate)>1e-6)
   % note that this resample function only works with integer rates
```

```
resampledTime = resample(centeredTime, destRate, rate, 30);
    resampledTime = resampledTime.*(rate/destRate);
else
    resampledTime = centeredTime;
end
% clip off the center 256 (if necessary)
if (length(resampledTime)>256)
    % the peak point is assumed to be the center
    [maxval, index] = max(abs(resampledTime));
    center=index;
    left = center-127;
    right = left+255;
    clippedTime=resampledTime((left):(right));
else
    clippedTime = resampledTime;
end
corrFilter=clippedTime;
end
function array = readArrayOfDoubles(fid)
line = fgets(fid);
array = sscanf(line, '%g%*c');
end
```

Example 2: Reading a PXA Trace and Setting up the Equalization Filter Using Matlab

This example reads a PXA trace of "Eq Ch Freq Resp" or "Eq Impls Resp" and creates an equalization filter compatible with X-Series signal generators.

```
function [corrFilter] = loadPxaEqFilter(pxaAddress, destRate,
displayCorr)
% [corrFilter] = loadPxaEqFilter(pxaAddress[, destRate[,
displayCorr]])
% Reads out the current Equalization filter active on the PXA
specified.
```

```
% The communication is over TCP-IP (LAN).
% destRate is assumed to be 200e6 if missing
% displayCorr is assumed to 0 (off) if missing
% Example: [corrFilter] = loadPxaEqFilter('pxa4')
% output of corrFilter is in time domain.
% NOTE: The equalization filter feature on the PXA must be ON for
this
% script to work. It can be EQ Hold ON.
% Typically followed with something like:
% writeMxgFir('a-n5182b-00211', 'EQ_1GHZ_62MHZ', corrFilter);
if (nargin<1 || nargin>3)
    error('[corrFilter] = loadPxaEqFilter(pxaAddress[, destRate[,
displayCorr]]) -- destRate is assumed to be 200e6 if missing');
end
if (nargin<2)
    destRate=200e6;
end
if (nargin<3)
    displayCorr=0;
end
% contact PXA
t=tcpip(pxaAddress, 5025);
t.OutputBufferSize=1*1024*1024;
t.InputBufferSize=1*1024*1024;
fopen(t);
fprintf(t, ':DISPlay:DDEM:TRAC2:FEED "Eq Impulse Response1"\n');
fprintf(t, 'DISP:DDEM:TRACe2:FORMat REAL\n');
fprintf(t, 'calc:DDEM:DATA2?\n');
realTime = readArrayOfDoubles(t);
fprintf(t, 'DISP:DDEM:TRACe2:FORMat IMAG\n');
fprintf(t, 'calc:DDEM:DATA2?\n');
imagTime = readArrayOfDoubles(t);
coeffs = realTime + 1i.*imagTime;
```

```
fprintf(t, 'calc:DDEM:DATA2:HEAD? "XDelta"\n');
timeStep = readArrayOfDoubles(t);
rate = ceil(1 / timeStep - 1e-9);
% mirror coefficients
coeffs = coeffs(length(coeffs):-1:1);
% convert to frequency coefficients (null group delay with
ifftshift)
coeffs = fft(ifftshift(coeffs));
% invert phase in frequency domain
mag = abs(coeffs);
ang = -angle(coeffs);
coeffs = mag.*cos(ang)+1i*mag.*sin(ang);
% display the frequency domain version again
fprintf(t, ':DISPlay:DDEM:TRAC2:FEED "Ch Frequency Response1"\n');
fprintf(t, ':DISPlay:DDEM:TRAC2:FORMat MLOG\n');
fprintf(t, ':DISPlay:DDEM:TRAC2:Y:AUTO:ONCE\n');
% must center frequency domain (to match what comes in frequency
domain)
coeffs = fftshift(coeffs);
fclose(t);
% convert to time domain (first placing the 0 frequency at the left
edge)
timeDomain=ifft(ifftshift(coeffs));
centeredTime = fftshift(timeDomain);
if (abs(destRate-rate)>1e-6)
% this simple resample function may be insuffient for some rates
    resampledTime = resample(centeredTime, destRate, rate, 30);
    resampledTime = resampledTime.*(rate/destRate);
else
    resampledTime = centeredTime;
end
%%%
% display resulting corrections
if displayCorr~=0
    fcorr = fftshift(fft(resampledTime));
```

```
displayOversample = 100;
    xcoordsOversample =
    ((1:(displayOversample*length(fcorr)))-(displayOversample*lengt
h(fcorr)+2)/2)/(length(fcorr))*destRate/displayOversample;
% plot amplitude correction
    figure;plot(xcoords0versample,
resample(20*log10(abs(fcorr)),displayOversample,1,100));
% plot phase correction
    fcorrz = fftshift(fft(ifftshift(resampledTime)));
    figure; plot(xcoordsOversample,
resample(unwrap(angle(fcorrz)),displayOversample,1,100)/pi*180);
end
% clip off the center 256 (if necessary)
if (length(resampledTime)>256)
    [~, index] = max(abs(resampledTime));
    center=index;
    left = center-127;
    right = left+255;
    clippedTime=resampledTime((left):(right));
else
    clippedTime = resampledTime;
end
corrFilter=clippedTime;
end
function array = readArrayOfDoubles(fid)
line = fgets(fid);
array = sscanf(line, '%g%*c');
end
```

Example 3: Reading a VSA Trace and Setting up the Equalization Filter Using Matlab

This example reads a VSA trace of "Eq Ch Freq Resp" or "Eq Impls Resp" and creates an equalization filter compatible with the MXG.

```
function [corrFilter] = loadVsaEqFilter(filename, destRate)
% [corrFilter] = loadVsaFilter(filename[, destRate])
```

```
% filename must reference an 89600 Equalization filter saved as .mat
file with the header included.
% destRate is assumed to be 200e6 if missing
% output of corrFilter is in time domain.
% Typically followed with:
% writeMxgFir('a-n5182b-00211', 'cft', corrFilter);
if (nargin<1 || nargin>2)
    error('[corrFilter] = loadVsaEqFilter(filename[, destRate]) --
destRate is assumed to be 200e6 if missing');
end
if (nargin<2)
    destRate=200e6;
end
% load filter struct from .mat file
filterStruct=load(filename);
coeffs = double(filterStruct.Y);
if (filterStruct.XDomain==1) % frequency
   rate = filterStruct.XDelta*length(coeffs); % frequency range is
also rate
    % VSA software supplies centered frequency domain
else % time domain is 2
    rate = 1/filterStruct.XDelta; % inverse of time step is
frequency
   % convert to frequency domain
   % must center frequency domain (to match what comes from the VSA
   % software)
    coeffs = fftshift(fft(coeffs));
end
% invert
invertedFreqDomain = 1./coeffs;
% convert to time domain (first placing the 0 frequency at the left
edge)
timeDomain=ifft(ifftshift(invertedFreqDomain));
if (filterStruct.XDomain==1) % frequency
    % put time domain 0 time in center
    len=length(timeDomain);
```

```
if (mod(length(timeDomain), 2)==1) % odd
        center=ceil(len/2);
        centeredTime(1:(center-1)) = timeDomain(center+1:end);
        centeredTime(center:len) = timeDomain(1:center);
    else % even
        topHalf = (length(timeDomain)/2)+1;
        centeredTime(1:(topHalf-1)) = timeDomain(topHalf:end);
        centeredTime(topHalf:len) = timeDomain(1:(topHalf-1));
    end
else % already centered in time domain
    centeredTime = timeDomain;
end
if (abs(destRate-rate)>1e-6)
    resampledTime = resample(centeredTime, destRate, rate, 30);
    resampledTime = resampledTime.*(rate/destRate);
else
    resampledTime = centeredTime;
end
% clip off the center 256 (if necessary)
if (length(resampledTime)>256)
    [maxval, index] = max(abs(resampledTime));
    center=index;
    left = center-127;
    right = left+255;
    clippedTime=resampledTime((left):(right));
else
    clippedTime = resampledTime;
end
corrFilter=clippedTime;
end
```

Example 4: Downloading a FIR filter in Matlab to the MXG

This example uses Matlab to control the X-Series signal generators over the TCP-IP (LAN) interface. This example takes a filter in Matlab and writes it to a FIR file in the MXG. This example can be used in combination with

```
either the automatable loadPsaEgFilterFreg.m example (1) or the
loadVsaEqFilter.m (example 3) to manually work with the VSA 89600 software.
This example can also be used to create real modulation FIRs.
function [rateAdjustedFilter]=writeMxgFir(host, instrumentFilename,
timeDomainFilter, osr, rate, destRate, maxTaps)
% writeMxgEqFir(host, instrumentFilename, timeDomainFilter, osr,
rate, destRate, maxTaps);
% writes filter to 'instrumentFilename' on 'host' using tcp-ip. Real
or complex is
% auto-detected. osr is assumed to be 1 if it is missing. rate is
assumed
% to be 200Mhz if missing. destRate is assumed to be 200Mhz if
missing.
% maxTaps is the hardware limit of the MXG (256 if not specified).
% This value should be 256 for the Equalization filter and 32*osr
for the
% Arb Modulation filter. Note that the filter has a rectangular
window
% applied with a width of maxTaps centered about the peak point.
% Example: writeMxgEqFir('mxg1', 'a', [-0.1 0.1 0.4 0.1 0.4 0.1
-0.1]);
if (nargin<3 || nargin>7)
    error('usage: writeMxgFir(host, instrumentFilename,
timeDomainFilter[, osr[, rate[, destRate[, maxTaps]]]])');
end
if (nargin<4)
    osr=1;
end
if (nargin<5)
    rate=200e6;
end
if (nargin<6)
    destRate=200e6;
end
if (nargin<7)
    maxTaps=1024;
end
% adjust coefficients for destination rate
```

```
if (rate ~= destRate)
   timeDomainFilter = resample(double(timeDomainFilter), destRate,
rate, 30);
    timeDomainFilter = timeDomainFilter.*(rate/destRate);
end
if (length(timeDomainFilter)>maxTaps)
    [maxval, index] = max(abs(timeDomainFilter));
    center=index;
    left = center-(maxTaps/2-1);
    if (left<1)
        left=1;
    end
    right = left+(maxTaps-1);
    while (right > length(timeDomainFilter))
        right = right-1;
    end
    timeDomainFilter = timeDomainFilter((left):(right));
end
rateAdjustedFilter = timeDomainFilter;
% open tcp connection
t=tcpip(host, 5025);
t.OutputBufferSize=1024*1024; % plenty big for filters
% write file contents
fopen(t);
%for writing to a file instead to see what is being output
%t=fopen('test', 'w');
% send command with filename
fprintf(t, '%s', horzcat(':MEM:DATA:FIR "', instrumentFilename,
'",'));
% send type
if (isreal(timeDomainFilter))
    fprintf(t, '%s', 'REAL,');
else % convert complex to a real array
    fprintf(t, '%s', 'COMP,');
```

Programming Examples LAN Programming Interface Examples

```
temp=zeros(1,length(timeDomainFilter)*2);
  temp(1:2:end)=real(timeDomainFilter);
  temp(2:2:end)=imag(timeDomainFilter);
  timeDomainFilter=temp;
end
% output osr
fprintf(t, '%d', osr);
% send coefficients
fprintf(t, ',%g', timeDomainFilter);
% send terminator
fprintf(t, '\n');
fclose(t);
end
```

Keysight Technologies X-Series Signal Generators

Programming Guide

4 Programming the Status Register System

This chapter provides the following major sections:

- Overview on page 168
- Status Register Bit Values on page 172
- Accessing Status Register Information on page 173
- Status Byte Group on page 179
- Status Groups on page 181



Overview

NOTE

Some of the status bits and register groups only apply to select signal generators with certain options. For more specific information on each exception, refer to the following:

- Standard Operation Condition Register bits (see Table on page 185)
- Data Questionable Condition Register bits (see Table on page 188)
- Data Questionable Power Condition Register bits (see Table on page 191)
- Data Questionable Frequency Condition Register bits (see Table on page 194)
- Data Questionable Calibration Condition Register bit (see Table on page 197)
- Data Questionable BERT Status Group (see page 199)

During remote operation, you may need to monitor the status of the signal generator for error conditions or status changes. You can use the signal generator's status register system to monitor error conditions, or condition changes, or both. In general, the error queue is easier to use than the status registers, but the status registers provide some additional information not found in the error queue. For more information on using the signal generator's SCPI commands to query the signal generator's error queue, refer to the SCPI Command Reference.

The signal generator's status register system provides two major advantages:

- You can monitor the settling of the signal generator using the settling bit of the Standard Operation Status Group's condition register.
- You can use the service request (SRQ) interrupt technique to avoid status polling, therefore giving a speed advantage.

The signal generator's instrument status system provides complete SCPI compliant data structures for reporting instrument status using the register model.

The SCPI register model of the status system has multiple registers that are arranged in a hierarchical order. The lower-priority status registers propagate their data to the higher-priority registers using summary bits. The Status Byte Register is at the top of the hierarchy and contains the status information for lower level registers. The lower level registers monitor specific events or conditions.

The lower level status registers are grouped according to their functionality. For example, the Data Questionable Frequency Status Group consists of five registers. This chapter may refer to a group as a register so that the cumbersome longer description is avoided. For example, the Standard

Programming the Status Register System Overview

Operation Status Group's Condition Register can be referred to as the Standard Operation Status register. Refer to "Status Groups" on page 181 for more information.

Figure 4-1 and Figure 4-2 show the EXG/MXG's signal generator status byte register system and hierarchy.

The status register systems use IEEE 488.2 commands (those beginning with *) to access the higher-level summary registers (refer to the SCPI Command Reference). Access Lower-level registers by using STATus commands.

Overall Status Byte Register Systems

- "Overall Status Byte Register System (1 of 2)" on page 170
- "Overall Status Byte Register System (2 of 2)" on page 171

Figure 4-1 Overall Status Byte Register System (1 of 2)


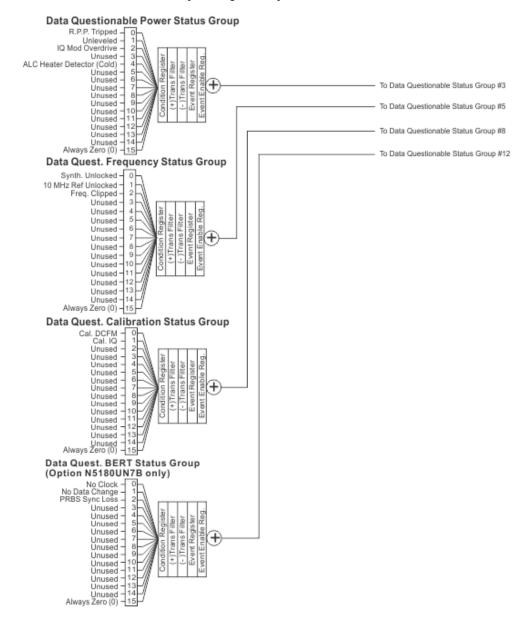


Figure 4-2 Overall Status Byte Register System (2 of 2)

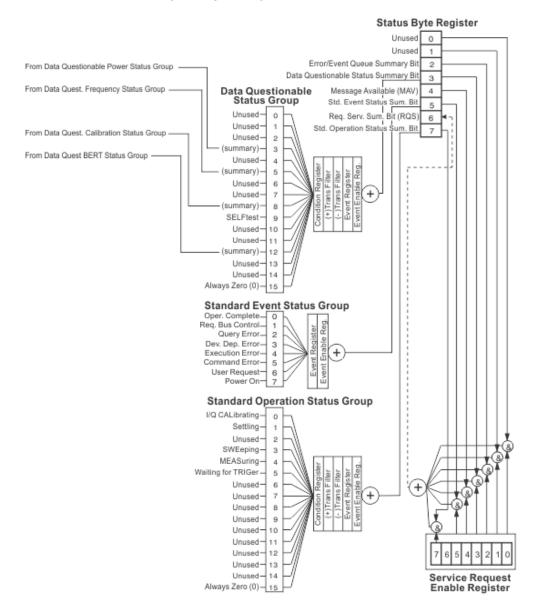

Status Register Bit Values

Each bit in a register is represented by a decimal value based on its location in the register (see Table 4-1).

- To enable a particular bit in a register, send its value with the SCPI command. Refer to the signal generator's SCPI command listing for more information.
- To enable more than one bit, send the sum of all the bits that you want to enable.
- To verify the bits set in a register, query the register.

Example: Enable a Register

To enable bit 0 and bit 6 of the Standard Event Status Group's Event Register:

- 1. Add the decimal value of bit 0 (1) and the decimal value of bit 6 (64) to give a decimal value of 65.
- 2. Send the sum with the command: *ESE 65.

Example: Query a Register

To query a register for a condition, send a SCPI query command. For example, if you want to query the Standard Operation Status Group's Condition Register, send the command:

STATus: OPERation: CONDition?

If bit 7, bit 3 and bit 2 in this register are set (bits = 1) then the query will return the decimal value 140. The value represents the decimal values of bit 7, bit 3 and bit 2: 128 + 8 + 4 = 140.

Table 4-1 Status Register Bit Decimal Values

Decimal Value	Always 0	16384	8192	4096	2048	1024	512	256	128	79	32	16	8	4	2	_
Bit Number	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

NOTE

Bit 15 is not used and is always set to zero.

Accessing Status Register Information

- 1. Determine which register contains the bit that reports the condition. Refer to Figure 4-1 on page 170 and Figure 4-2 on page 171 for register location and names.
- 2. Send the unique SCPI query that reads that register.
- 3. Examine the bit to see if the condition has changed.

Determining What to Monitor

You can monitor the following conditions:

- current signal generator hardware and firmware status
- whether a particular condition (bit) has occurred

Monitoring Current Signal Generator Hardware and Firmware Status

To monitor the signal generator's operating status, you can query the condition registers. These registers represent the current state of the signal generator and are updated in real time. When the condition monitored by a particular bit becomes true, the bit sets to 1. When the condition becomes false, the bit resets to 0.

Monitoring Whether a Condition (Bit) has Changed

The transition registers determine which bit transition (condition change) should be recorded as an event. The transitions can be positive to negative, negative to positive, or both. To monitor a certain condition, enable the bit associated with the condition in the associated positive and negative registers.

Once you have enabled a bit through the transition registers, the signal generator monitors it for a change in its condition. If this change in condition occurs, the corresponding bit in the event register will be set to 1. When a bit becomes true (set to 1) in the event register, it stays set until the event register is read or is cleared. You can thus query the event register for a condition even if that condition no longer exists.

To clear the event register, query its contents or send the *CLS command, which clears **all** event registers.

Monitoring When a Condition (Bit) Changes

Once you enable a bit, the signal generator monitors it for a change in its condition. The transition registers are preset to register positive transitions (a change going from 0 to 1). This can be changed so the selected bit is detected if it goes from true to false (negative transition), or if either transition occurs.

Deciding How to Monitor

You can use either of two methods described below to access the information in status registers (both methods allow you to monitor one or more conditions).

The polling method

In the polling method, the signal generator has a passive role. It tells the controller that conditions have changed only when the controller asks the right question. This is accomplished by a program loop that continually sends a query.

The polling method works well if you do not need to know about changes the moment they occur. Use polling in the following situations:

- when you use a programming language/development environment or IO interface that does not support SRQ interrupts
- when you want to write a simple, single-purpose program without the complexity of setting up an SRQ handler

The service request (SRQ) method

In the SRQ method (described in the following section), the signal generator takes a more active role. It tells the controller when there has been a condition change without the controller asking. Use the SRQ method to detect changes using the polling method, where the program must repeatedly read the registers.

Use the SRQ method if you must know immediately when a condition changes. Use the SRQ method in the following situations:

- when you need time-critical notification of changes
- when you are monitoring more than one device that supports SRQs
- when you need to have the controller do something else while waiting
- when you can't afford the performance penalty inherent to polling

Using the Service Request (SRQ) Method

The programming language, I/O interface, and programming environment must support SRQ interrupts (for example: BASIC or VISA used with GPIB and VXI-11 over the LAN). Using this method, you must do the following:

- 1. Determine which bit monitors the condition.
- 2. Send commands to enable the bit that monitors the condition (transition registers).
- **3.** Send commands to enable the summary bits that report the condition (event enable registers).
- **4.** Send commands to enable the status byte register to monitor the condition.
- **5.** Enable the controller to respond to service requests.

The controller responds to the SRQ as soon as it occurs. As a result, the time the controller would otherwise have used to monitor the condition, as in a loop method, can be used to perform other tasks. The application determines how the controller responds to the SRQ.

Programming the Status Register System Accessing Status Register Information

When a condition changes and that condition has been enabled, the request service summary (RQS) bit in the status byte register is set. In order for the controller to respond to the change, the Service Request Enable Register needs to be enabled for the bit(s) that will trigger the SRQ.

Generating a Service Request

The Service Request Enable Register lets you choose the bits in the Status Byte Register that will trigger a service request. Send the *SRE <num> command where <num> is the sum of the decimal values of the bits you want to enable.

For example, to enable bit 7 on the Status Byte Register (so that whenever the Standard Operation Status register summary bit is set to 1, a service request is generated) send the command *SRE 128.

Refer to Figure 4-1 on page 170 and Figure 4-2 on page 171 for bit positions and values.

The query command *SRE? returns the decimal value of the sum of the bits previously enabled with the *SRE < num > command.

To query the Status Byte Register, send the command *STB?. The response will be the decimal sum of the bits which are set to 1. For example, if bit 7 and bit 3 are set, the decimal sum will be 136 (bit 7 = 128 and bit 3 = 8).

NOTE

Multiple Status Byte Register bits can assert an SRQ, however only one bit at a time can set the RQS bit. All bits that are asserting an SRQ will be read as part of the status byte when it is queried or serial polled.

The SRQ process asserts SRQ as true and sets the status byte's RQS bit to 1. Both actions are necessary to inform the controller that the signal generator requires service. Asserting SRQ informs the controller that some device on the bus requires service. Setting the RQS bit allows the controller to determine which signal generator requires service.

This process is initiated if both of the following conditions are true:

- The corresponding bit of the Service Request Enable Register is also set to 1.
- The signal generator does not have a service request pending.

A service request is considered to be pending between the time the signal generator's SRQ process is initiated and the time the controller reads the status byte register.

Programming the Status Register System Accessing Status Register Information

If a program enables the controller to detect and respond to service requests, it should instruct the controller to perform a serial poll when SRQ is true. Each device on the bus returns the contents of its status byte register in response to this poll. The device whose request service summary (RQS) bit is set to 1 is the device that requested service.

NOTE

When you read the signal generator's Status Byte Register with a serial poll, the RQS bit is reset to 0. Other bits in the register are not affected.

If the status register is configured to SRQ on end-of-sweep or measurement and the mode set to continuous, restarting the measurement (INIT command) can cause the measuring bit to pulse low. This causes an SRQ when you have not actually reached the "end-of-sweep" or measurement condition. To avoid this, do the following:

- 1. Send the command INITiate: CONTinuous OFF.
- 2. Set/enable the status registers.
- 3. Restart the measurement (send INIT).

Status Register SCPI Commands

Most monitoring of signal generator conditions is done at the highest level using the IEEE 488.2 common commands listed below. You can set and query individual status registers using the commands in the STATus subsystem.

- *CLS (clear status) clears the Status Byte Register by emptying the error queue and clearing all the event registers.
- *ESE, *ESE? (event status enable) sets and queries the bits in the Standard Event Enable Register which is part of the Standard Event Status Group.
- *ESR? (event status register) queries and clears the Standard Event Status Register which is part of the Standard Event Status Group.
- *OPC, *OPC? (operation complete) sets bit #0 in the Standard Event Status Register to 1 when all commands have completed. The query stops any new commands from being processed until the current processing is complete, then returns a 1.
- *PSC, *PSC? (power-on state clear) sets the power-on state so that it clears the Service Request Enable Register, the Standard Event Status Enable Register, and device-specific event enable registers at power on. The query returns the flag setting from the *PSC command.
- *SRE, *SRE? (service request enable) sets and queries the value of the Service Request Enable Register.
- *STB? (status byte) queries the value of the status byte register without erasing its contents.

Programming the Status Register System Accessing Status Register Information

:STATus:PRESet presets all transition filters, non-IEEE 488.2 enable registers, and error/event queue enable registers. (Refer to **Table**.)

Table 4-2 Effects of :STATus:PRESet

Register ^a	Value after :STATus:PRESet
:STATus:OPERation:ENABle	0
:STATus:OPERation:NTRansition	0
:STATus:OPERation:PTRransition	32767
:STATus:QUEStionable:CALibration:ENABle	32767
:STATus:QUEStionable:CALibration:NTRansition	32767
:STATus:QUEStionable:CALibration:PTRansition	32767
:STATus:QUEStionable:ENABle	0
:STATus:QUEStionable:NTRansition	0
:STATus:QUEStionable:PTRansition	32767
:STATus:QUEStionable:FREQuency:ENABle	32767
:STATus:QUEStionable:FREQuency:NTRansition	32767
:STATus:QUEStionable:FREQuency:PTRansition	32767
:STATus:QUEStionable:POWer:ENABle	32767
:STATus:QUEStionable:POWer:NTRansition	32767
:STATus:QUEStionable:POWer:PTRansition	32767
:STATus:QUEStionable:BERT:ENABle	32767
:STATus:QUEStionable:BERT:NTRansition	32767
:STATus:QUEStionable:BERT:PTRansition	32767

a. Table reflects :STAT:PRES values for EXG and MXG models with all options. Refer to **Figure 4–1 on page 170**, **Figure 4–2 on page 171**, and **Table on page 180** through **Table on page 200**.

Status Byte Group

The Status Byte Group includes the Status Byte Register and the Service Request Enable Register.

NOTE: Status Byte Register Some signal 0 Unused generator models may 1 Unused use only a 2 Error/Event Queue Summary Bit subset of the 3 Data Questionable Summary Bit status 4 Message Available (MAV) registers shown. 5 Standard Event Summary Bit 6 Request Service (RQS) 7 Operation Status Summary Bit (&)

6 7

Service Request Enable Register

2 3 4 5

Status Byte Register

Bit	Description
0,1	Unused. These bits are always set to 0.
2	Error/Event Queue Summary Bit . A 1 in this bit position indicates that the SCPI error queue is not empty. The SCPI error queue contains at least one error message.
3	Data Questionable Status Summary Bit . A 1 in this bit position indicates that the Data Questionable summary bit has been set. The Data Questionable Event Register can then be read to determine the specific condition that caused this bit to be set.
4	Message Available . A 1 in this bit position indicates that the signal generator has data ready in the output queue. There are no lower status groups that provide input to this bit.
5	Standard Event Status Summary Bit. A 1 in this bit position indicates that the Standard Event summary bit has been set. The Standard Event Status Register can then be read to determine the specific event that caused this bit to be set.
6	Request Service (RQS) Summary Bit. A 1 in this bit position indicates that the signal generator has at least one reason to require service. This bit is also called the Master Summary Status bit (MSS). The individual bits in the Status Byte are individually ANDed with their corresponding service request enable register, then each individual bit value is ORed and input to this bit.
7	Standard Operation Status Summary Bit . A 1 in this bit position indicates that the Standard Operation Status Group's summary bit has been set. The Standard Operation Event Register can then be read to determine the specific condition that caused this bit to be set.

Query: *STB?

Response: The **decimal** sum of the bits set to 1 including the master summary status bit (MSS) bit 6.

Example: The decimal value 136 is returned when the MSS bit is set low (0).

Decimal sum = 128 (bit 7) + 8 (bit 3)

The decimal value 200 is returned when the MSS bit is set high (1).

Decimal sum = 128 (bit 7) + 8 (bit 3) + 64 (MSS bit)

Service Request Enable Register

The Service Request Enable Register lets you choose which bits in the Status Byte Register trigger a service request.

be enabled on this register. Refer to Figure 4-1 on page 170 and Figure 4-2 on page 171.

Example: To enable bits 7 and 5 to trigger a service request when either corresponding status group

register summary bit sets to 1, send the command *SRE 160 (128 + 32).

Query: *SRE?

Response: The decimal value of the sum of the bits previously enabled with the *SRE <data> command.

Status Groups

The Standard Operation Status Group and the Data Questionable Status Group consist of the registers listed below. The Standard Event Status Group is similar but does **not** have negative or positive transition filters or a condition register.

Condition

Register A condition register continuously monitors the

hardware and firmware status of the signal generator. There is no latching or buffering for a condition register;

it is updated in real time.

Negative Transition Filter

A negative transition filter specifies the bits in the condition register that will set corresponding bits in the

event register when the condition bit changes from 1 to

0.

Positive Transition

Filter A positive transition filter specifies the bits in the

condition register that will set corresponding bits in the event register when the condition bit changes from 0 to

1.

Event Register

An event register latches transition events from the

condition register as specified by the positive and negative transition filters. Once the bits in the event register are set, they remain set until cleared by either querying the register contents or sending the *CLS

command.

Event Enable

Register An enable register specifies the bits in the event register

that generate the summary bit. The signal generator logically ANDs corresponding bits in the event and enable registers and ORs all the resulting bits to produce a summary bit. Summary bits are, in turn, used


by the Status Byte Register.

A status group is a set of related registers whose contents are programmed to produce status summary bits. In each status group, corresponding bits in the condition register are filtered by the negative and positive transition filters and stored in the event register. The contents of the event register are logically ANDed with the contents of the enable register and the result is logically ORed to produce a status summary bit in the Status Byte Register.

Standard Event Status Group

The Standard Event Status Group is used to determine the specific event that set bit 5 in the Status Byte Register. This group consists of the Standard Event Status Register (an event register) and the Standard Event Status Enable Register.

NOTE: Some signal generator models may use only a subset of the status registers

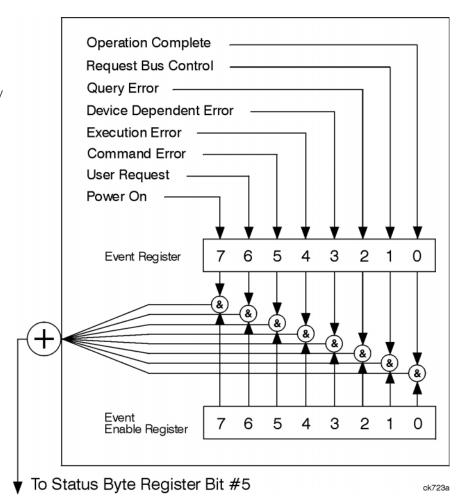

Standard Event Status Register

Bit	Description				
0	Operation Complete. A 1 in this bit position indicates that all pending signal generator operations were completed following execution of the *OPC command.				
1	Request Control. This bit is always set to 0. (The signal generator does not request control.)				
2	Query Error . A 1 in this bit position indicates that a query error has occurred. Query errors have instrument error numbers from -499 to -400.				
3	Device Dependent Error . A 1 in this bit position indicates that a device dependent error has occurred. Device dependent errors have instrument error numbers from -399 to -300 and 1 to 32767.				

Bit	Description				
4	Execution Error . A 1 in this bit position indicates that an execution error has occurred. Execution errors have instrument error numbers from -299 to -200 .				
5	Command Error . A 1 in this bit position indicates that a command error has occurred. Command errors have instrument error numbers from -199 to -100 .				
6	User Request Key (Local) . A 1 in this bit position indicates that the Local key has been pressed. This is true even if the signal generator is in local lockout mode.				
7	Power On. A 1 in this bit position indicates that the signal generator has been turned off and then on.				

Query: *ESR?

Response: The **decimal** sum of the bits set to 1

Example: The decimal value 136 is returned. The decimal sum = 128 (bit 7) + 8 (bit 3).

Standard Event Status Enable Register

The Standard Event Status Enable Register lets you choose which bits in the Standard Event Status Register set the summary bit (bit 5 of the Status Byte Register) to 1.

*ESE <data> is the sum of the decimal values of the bits you want to enable.

Example: To enable bit 7 and bit 6 so that whenever either of those bits are set to 1, the Standard Event

Status summary bit of the Status Byte Register is set to 1. Send the command *ESE 192 (128

+ 64).

Query: *ESE?

Response: Decimal value of the sum of the bits previously enabled with the *ESE <data> command.

Standard Operation Status Group


NOTE

Some of the bits in this status group do not apply to all models, and return zero when queried. See Table 4-3 on page 185 for more information.

The SCPI command : STAT: OPER: SUPP can suppress the managing of this status group and save 50 us from the switching time. Refer to the SCPI Command Reference.

The Operation Status Group is used to determine the specific event that set bit 7 in the Status Byte Register. This group consists of the Standard Operation Condition Register, the Standard Operation Transition Filters (negative and positive), the Standard Operation Event Register, and the Standard Operation Event Enable Register.

NOTE: Some signal generator models may use only a subset of the status registers shown.

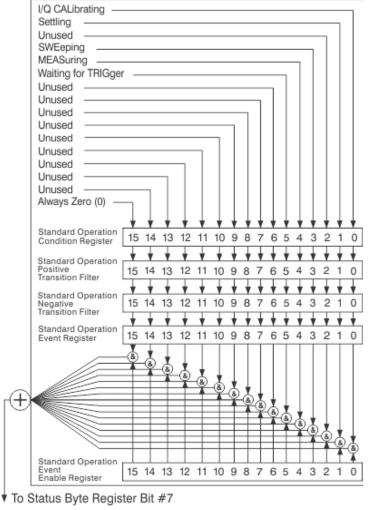

Standard Operation Condition Register

The Standard Operation Condition Register continuously monitors the hardware and firmware status of the signal generator. Condition registers are read only.

Table 4-3 Standard Operation Condition Register Bits

Bit	Description				
0 ^a	I/Q Calibrating. A 1 in this position indicates an I/Q calibration is in process.				
1	Settling . A 1 in this bit position indicates that the signal generator is settling.				
2	Unused. This bit position is always set to 0.				
3	Sweeping. A 1 in this bit position indicates that a sweep is in progress.				
4 ^b	Measuring . A 1 in this bit position indicates that a bit error rate test is in progress.				
5	Waiting for Trigger. A 1 in this bit position indicates that the source is in a "wait for trigger" state.				
6-14	Unused. These bits are always set to 0.				
15	Always 0.				

- a. In analog models, this bit is always set to 0.
- b. Always set to 0 if Option N5180UN7B not present.

Query: STATus:OPERation:CONDition?

Response: The **decimal** sum of the bits set to 1

Example: The decimal value 40 is returned. The decimal sum = 32 (bit 5) + 8 (bit 3).

Standard Operation Transition Filters (negative and positive)

The Standard Operation Transition Filters specify which types of bit state changes in the condition register set corresponding bits in the event register. Changes can be positive (0 to 1) or negative (1 to 0).

Commands: STATus: OPERation: NTRansition < value > (negative transition), or

STATus: OPERation: PTRansition <value> (positive transition), where <value> is the sum of the decimal values of the bits you want to enable.

Queries: STATus:OPERation:NTRansition?

STATus: OPERation: PTRansition?

Standard Operation Event Register

The Standard Operation Event Register latches transition events from the condition register as specified by the transition filters. Event registers are destructive read only. Reading data from an event register clears the content of that register.

Query: STATus:OPERation[:EVENt]?

Standard Operation Event Enable Register

The Standard Operation Event Enable Register lets you choose which bits in the Standard Operation Event Register set the summary bit (bit 7 of the Status Byte Register) to 1.

Command: STATus: OPERation: ENABle <value>, where

<value> is the sum of the decimal values of the bits you want to enable.

Example: To enable bit 5 and bit 3 so that whenever either of those bits are set to 1, the Standard Operation

Status summary bit of the Status Byte Register is set to 1. Send the command STAT: OPER: ENAB

40 (32 + 8).

Query: STATus:OPERation:ENABle?

Response: Decimal value of the sum of the bits previously enabled with the STATus: OPERation: ENABle

<value> command.

Data Questionable Status Group


The Data Questionable Status Group is used to determine the specific event

NOTE

Some of the bits in this status group do not apply to all models, and return zero when queried. See **Table 4-4 on page 188** for more information.

that set bit 3 in the Status Byte Register. This group consists of the Data Questionable Condition Register, the Data Questionable Transition Filters (negative and positive), the Data Questionable Event Register, and the Data Questionable Event Enable Register.

NOTE: Some signal generator models may use only a subset of the status registers shown.

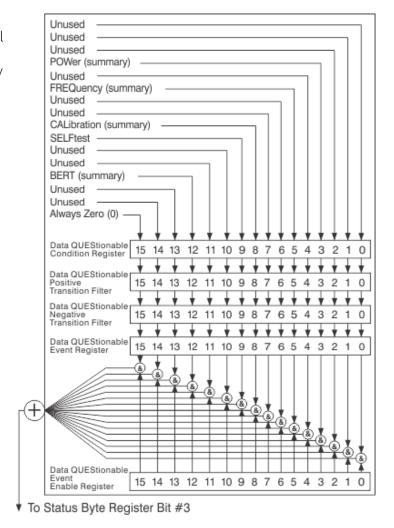

Data Questionable Condition Register

The Data Questionable Condition Register continuously monitors the hardware and firmware status of the signal generator. Condition registers are read only.

Table 4-4 Data Questionable Condition Register Bits

Bit	Description				
0-2	Unused. These bits are always set to 0.				
3	Power (summary) . This is a summary bit taken from the QUEStionable:POWer register. A 1 in this bit position indicates that one of the following may have happened: The ALC (Automatic Leveling Control) is unable to maintain a leveled RF output power (i.e., ALC is UNLEVELED), the reverse power protection circuit has been tripped. See the "Data Questionable Power Status Group" on page 190 for more information.				
4	Unused. This bit is always set to 0.				
5	Frequency (summary) . This is a summary bit taken from the QUEStionable:FREQuency register. A 1 in this bit position indicates that one of the following may have happened: synthesizer PLL unlocked, 10 MHz reference VCO PLL unlocked, 1 GHz reference unlocked, sampler, YO loop unlocked or baseband 1 unlocked. For more information, see the "Data Questionable Frequency Status Group" on page 193.				
6, 7	Unused. These bits are always set to 0.				
8 ^a	Calibration (summary). This is a summary bit taken from the QUEStionable:CALibration register. A 1 in this bit position indicates that one of the following may have happened: an error has occurred in the DCFM zero calibration, or an error has occurred in the I/Q calibration. See the "Data Questionable Calibration Status Group" on page 196 for more information.				
9	Self Test . A 1 in this bit position indicates that a self-test has failed during power-up. Reset this bit by cycling the signal generator's line power. *CLS will not clear this bit.				
10, 11	Unused. These bits are always set to 0.				
12 ^b	BERT (summary). This is a summary bit taken from the QUEStionable:BERT register. A 1 in this bit position indicates that one of the following occurred: no BCH/TCH synchronization, no data change, no clock input, PRBS not synchronized, demod/DSP unlocked, or demod unleveled. See the "Data Questionable BERT Status Group" on page 199 for more information.				
13, 14	Unused. These bits are always set to 0.				
15	Always 0.				

- a. The data reported by this bit depends on the installed options.
- b. In models that do not support Bit Error Rate Testing (Option N5180UN7B), this bit is always set to 0.

Query: STATus:QUEStionable:CONDition?

Response: The **decimal** sum of the bits set to 1

Example: The decimal value 520 is returned. The decimal sum = 512 (bit 9) + 8 (bit 3).

Data Questionable Transition Filters (negative and positive)

The Data Questionable Transition Filters specify which type of bit state changes in the condition register set corresponding bits in the event register. Changes can be positive (0 to 1) or negative (1 to 0).

Commands: STATus:QUEStionable:NTRansition <value>(negative transition), or

STATus:QUEStionable:PTRansition <value>(positive transition), where

<value> is the sum of the decimal values of the bits you want to enable.

Queries: STATus:QUEStionable:NTRansition?

STATus:QUEStionable:PTRansition?

Data Questionable Event Register

The Data Questionable Event Register latches transition events from the condition register as specified by the transition filters. Event registers are destructive read-only. Reading data from an event register clears the content of that register.

Query: STATus:QUEStionable[:EVENt]?

Data Questionable Event Enable Register

The Data Questionable Event Enable Register lets you choose which bits in the Data Questionable Event Register set the summary bit (bit 3 of the Status Byte Register) to 1.

Command: STATus:QUEStionable:ENABle <value> where <value> is the sum of the decimal values

of the bits you want to enable.

Example: Enable bit 9 and bit 3 so that whenever either of those bits are set to 1, the Data Questionable Status

summary bit of the Status Byte Register is set to 1. Send the command STAT: QUES: ENAB 520

(512 + 8).

Query: STATus:QUEStionable:ENABle?

Response: Decimal value of the sum of the bits previously enabled with the

STATus:QUEStionable:ENABle <value> command.


Data Questionable Power Status Group

NOTE

Some of the bits in this status group do not apply to all models, and return zero when queried. See Table 4-5 on page 191 for more information.

The Data Questionable Power Status Group is used to determine the specific event that set bit 3 in the Data Questionable Condition Register. This group consists of the Data Questionable Power Condition Register, the Data Questionable Power Transition Filters (negative and positive), the Data Questionable Power Event Register, and the Data Questionable Power Event Enable Register.

NOTE: Some signal generator models may use only a subset of the status registers shown.

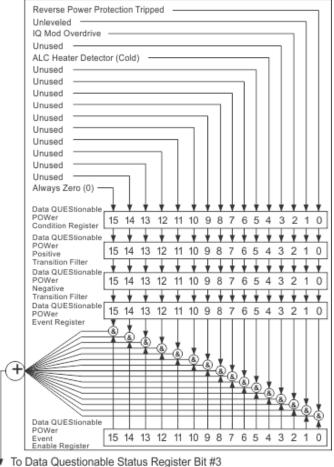

ck704c

Data Questionable Power Condition Register

The Data Questionable Power Condition Register continuously monitors the hardware and firmware status of the signal generator. Condition registers are read only.

Table 4-5 Data Questionable Power Condition Register Bits

Bit	Description			
0	Reverse Power Protection Tripped. A 1 in this bit position indicates that the reverse power protection (RPP) circuit has been tripped. There is no output in this state. Any conditions that may have caused the problem should be corrected. Reset the RPP circuit by sending the remote SCPI command: OUTput:PROTection:CLEar. Resetting the RPP circuit bit, resets this bit to 0.			
1	Unleveled. A 1 in this bit position indicates that the output leveling loop is unable to set the output power.			
2	IQ Mod Overdrive. A 1 in this bit position indicates that the signal level into the IQ modulator is too high.			
3	Unused. This bit is always set to 0.			
4	ALC Heater Detector (Cold). A 1 in this bit position indicates that the ALC detector is cold.			
5–14	Unused. These bits are always set to 0.			
15	Always 0.			

Query: STATus:QUEStionable:POWer:CONDition?

Response: The **decimal** sum of the bits set to 1.

Data Questionable Power Transition Filters (negative and positive)

The Data Questionable Power Transition Filters specify which type of bit state changes in the condition register set corresponding bits in the event register. Changes can be positive (0 to 1) or negative (1 to 0).

Commands: STATus:QUEStionable:POWer:NTRansition <value>(negative transition), or

STATus:QUEStionable:POWer:PTRansition <value>(positive transition), where

<value> is the sum of the decimal values of the bits you want to enable.

Queries: STATus:QUEStionable:POWer:NTRansition?

STATus:QUEStionable:POWer:PTRansition?

Data Questionable Power Event Register

The Data Questionable Power Event Register latches transition events from the condition register as specified by the transition filters. Event registers are destructive read-only. Reading data from an event register clears the content of that register.

Query: STATus:QUEStionable:POWer[:EVENt]?

Data Questionable Power Event Enable Register

The Data Questionable Power Event Enable Register lets you choose which bits in the Data Questionable Power Event Register set the summary bit (bit 3 of the Data Questionable Condition Register) to 1.

Command: STATus:QUEStionable:POWer:ENABle <value> where <value> is the sum of the

decimal values of the bits you want to enable

Example: Enable bit 3 and bit 2 so that whenever either of those bits are set to 1, the Data Questionable Power

summary bit of the Data Questionable Condition Register is set to 1. Send the command

STAT: QUES: POW: ENAB 12 (8 + 4).

Query: STATus:QUEStionable:POWer:ENABle?

Response: Decimal value of the sum of the bits previously enabled with the

STATus:QUEStionable:POWer:ENABle <value>command.

Data Questionable Frequency Status Group


NOTE

Some of the bits in this status group do not apply to all models, and return zero when queried. See Table 4-6 on page 194 for more information.

The Data Questionable Frequency Status Group is used to determine the specific event that set bit 5 in the Data Questionable Condition Register. This group consists of the Data Questionable Frequency Condition Register, the Data Questionable Frequency Transition Filters (negative and positive), the Data Questionable Frequency Event Register, and the Data Questionable Frequency Event Enable Register.

NOTE

Some signal generator models may use only a subset of the status registers shown.

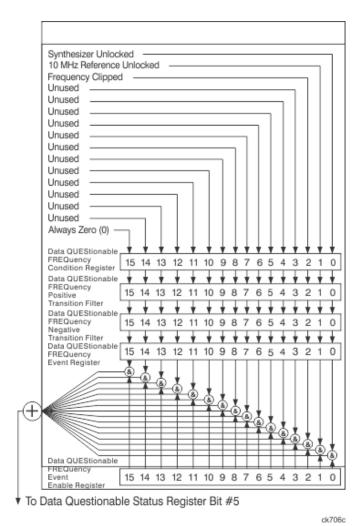

Keysight CXG, EXG, and MXG X-Series Signal Generators Programming Guide

Data Questionable Frequency Condition Register

The Data Questionable Frequency Condition Register continuously monitors the hardware and firmware status of the signal generator. Condition registers are read-only.

Table 4-6 Data Questionable Frequency Condition Register Bits

Bit	Description			
0	Synth. Unlocked. A 1 in this bit position indicates that the synthesizer is unlocked.			
1	10 MHz Ref Unlocked. A 1 in this bit position indicates that the 10 MHz reference signal is unlocked.			
2	Frequency Clipped. A 1 in this bit position indicates that the 1 GHz reference signal is unlocked.			
3–14	Unused. These bits are always set to 0.			
15	Always 0.			

Query: STATus:QUEStionable:FREQuency:CONDition?

Response: The **decimal** sum of the bits set to 1.

Data Questionable Frequency Transition Filters (negative and positive)

Specifies which types of bit state changes in the condition register set corresponding bits in the event register. Changes can be positive (0 to 1) or negative (1 to 0).

Commands: STATus:QUEStionable:FREQuency:NTRansition <value>(negative transition) or

STATus:QUEStionable:FREQuency:PTRansition <value>(positive transition) where

<value> is the sum of the decimal values of the bits you want to enable.

Queries: STATus:QUEStionable:FREQuency:NTRansition?

STATus:QUEStionable:FREQuency:PTRansition?

Data Questionable Frequency Event Register

Latches transition events from the condition register as specified by the transition filters. Event registers are destructive read-only. Reading data from an event register clears the content of that register.

Query: STATus:QUEStionable:FREQuency[:EVENt]?

Data Questionable Frequency Event Enable Register

Lets you choose which bits in the Data Questionable Frequency Event Register set the summary bit (bit 5 of the Data Questionable Condition Register) to 1.

Command: STATus:QUEStionable:FREQuency:ENABle <value>, where <value> is the sum of the

decimal values of the bits you want to enable.

Example: Enable bit 5 and bit 2 so that whenever either of those bits are set to 1, the Data Questionable

Frequency summary bit of the Data Questionable Condition Register is set to 1. Send the command

STAT:QUES:FREQ:ENAB 36 (32 + 4).

Query: STATus:QUEStionable:FREQuency:ENABle?

Response: Decimal value of the sum of the bits previously enabled with the

STATus:QUEStionable:FREQuency:ENABle <value> command.


Data Questionable Calibration Status Group

NOTE

Some of the bits in this status group do not apply to all models, and return zero when queried. See Table 4-7 on page 197 for more information.

The Data Questionable Calibration Status Group is used to determine the specific event that set bit 8 in the Data Questionable Condition Register. This group consists of the Data Questionable Calibration Condition Register, the Data Questionable Calibration Transition Filters (negative and positive), the Data Questionable Calibration Event Register, and the Data Questionable Calibration Event Enable Register.

NOTE: Some signal generator models may use only a subset of the status registers shown.

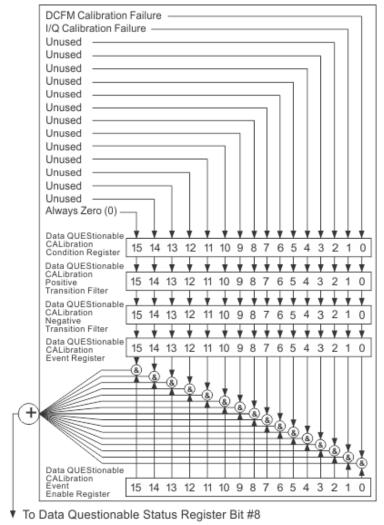

ck720a

Data Questionable Calibration Condition Register

The Data Questionable Calibration Condition Register continuously monitors the calibration status of the signal generator. Condition registers are read only.

Table 4-7 Data Questionable Calibration Condition Register Bits

Bit	Description
0	DCFM Calibration Failure . A 1 in this bit position indicates that the DCFM zero calibration routine has failed. This is a critical error. The output of the source has no validity until the condition of this bit is 0.
1	I/Q Calibration Failure. A 1 in this bit position indicates that the I/Q modulation calibration experienced a failure.
2–14	Unused. These bits are always set to 0.
15	Always 0.

Query: STATus:QUEStionable:CALibration:CONDition?

Response: The **decimal** sum of the bits set to 1.

Data Questionable Calibration Transition Filters (negative and positive)

The Data Questionable Calibration Transition Filters specify which type of bit state changes in the condition register set corresponding bits in the event register. Changes can be positive (0 to 1) or negative (1 to 0).

Commands: STATus:QUEStionable:CALibration:NTRansition <value>(negative transition),

or STATus:QUEStionable:CALibration:PTRansition <value> (positive transition),

where <value> is the sum of the decimal values of the bits you want to enable.

Queries: STATus:QUEStionable:CALibration:NTRansition?

STATus:QUEStionable:CALibration:PTRansition?

Data Questionable Calibration Event Register

The Data Questionable Calibration Event Register latches transition events from the condition register as specified by the transition filters. Event registers are destructive read-only. Reading data from an event register clears the content of that register.

Query: STATus:QUEStionable:CALibration[:EVENt]?

Data Questionable Calibration Event Enable Register

The Data Questionable Calibration Event Enable Register lets you choose which bits in the Data Questionable Calibration Event Register set the summary bit (bit 8 of the Data Questionable Condition register) to 1.

Command: STATus:QUEStionable:CALibration:ENABle <value>, where <value> is the sum of

the decimal values of the bits you want to enable.

Example: Enable bit 1 and bit 0 so that whenever either of those bits are set to 1, the Data Questionable

Calibration summary bit of the Data Questionable Condition Register is set to 1. Send the command

STAT:QUES:CAL:ENAB 3 (2 + 1).

Query: STATus:QUEStionable:CALibration:ENABle?

Response: Decimal value of the sum of the bits previously enabled with the


STATus:QUEStionable:CALibration:ENABle <value> command.

Data Questionable BERT Status Group

NOTE

This status group applies only to signal generator models with Option N5180UN7B. Refer to Table 4-8 on page 200 for more information.

The Data Questionable BERT Status Group is used to determine the specific event that set bit 12 in the Data Questionable Condition Register. The Data Questionable Status group consists of the Data Questionable BERT Condition Register, the Data Questionable BERT Transition Filters (negative and positive), the Data Questionable BERT Event Register, and the Data Questionable BERT Event Enable Register.

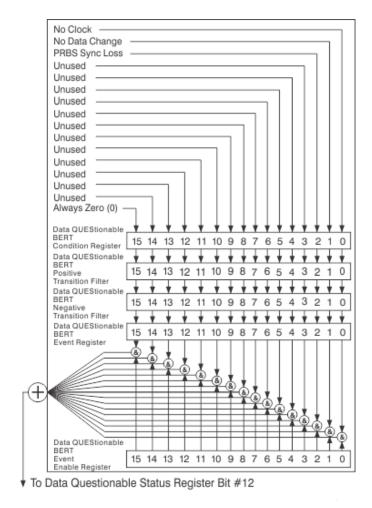

Data Questionable BERT Condition Register

The Data Questionable BERT Condition Register continuously monitors the hardware and firmware status of the signal generator. Condition registers are read only.

Table 4-8 Data Questionable BERT Condition Register Bits

Bit	Description				
0	No Clock. A 1 in this bit position indicates no clock input for more than 3 seconds.				
1	No Data Change. A 1 in this bit position indicates no data change occurred during the last 200 clock signals.				
2	PRBS Sync Loss. A 1 is set while PRBS synchronization is not established. *RST sets the bit to zero.				
3–14	Unused. These bits are always set to 0.				
15	Always 0.				

Query: STATus:QUEStionable:BERT:CONDition?

Response: The **decimal** sum of the bits set to 1.

Data Questionable BERT Transition Filters (negative and positive)

The Data Questionable BERT Transition Filters specify which type of bit state changes in the condition register set corresponding bits in the event register. Changes can be positive (0 to 1) or negative (1 to 0).

Commands: STATus:QUEStionable:BERT:NTRansition <value>(negative transition), or

STATus:QUEStionable:BERT:PTRansition <value> (positive transition), where

<value> is the sum of the decimal values of the bits you want to enable.

Queries: STATus:QUEStionable:BERT:NTRansition?

STATus:QUEStionable:BERT:PTRansition?

Data Questionable BERT Event Register

The Data Questionable BERT Event Register latches transition events from the condition register as specified by the transition filters. Event registers are destructive read-only. Reading data from an event register clears the content of that register.

Query: STATus:QUEStionable:BERT[:EVENt]?

Data Questionable BERT Event Enable Register

The Data Questionable BERT Event Enable Register lets you choose which bits in the Data Questionable BERT Event Register set the summary bit (bit 3 of the Data Questionable Condition Register) to 1.

Command: STATus:QUEStionable:BERT:ENABle <value> where <value> is the sum of the

decimal values of the bits you want to enable

Example: Enable bit 2 and bit 1 so that whenever either of those bits are set to 1, the Data Questionable BERT

summary bit of the Data Questionable Condition Register is set to 1. Send the command

STAT:QUES:BERT:ENAB 6 (4 + 2).

Query: STATus:QUEStionable:BERT:ENABle?

Response: Decimal value of the sum of the bits previously enabled with the

STATus:QUEStionable:BERT:ENABle <value> command.

Programming Guide

5 Creating and Downloading Waveform Files

NOTE

The ability to play externally created waveform data in the signal generator is available only in vector signal generator models with an installed internal baseband generator option (refer to the Data Sheet for more information).

This chapter explains how to create Arb-based waveform data and download it into the signal generator.

- "Overview of Downloading and Extracting Waveform Files" on page 204
- "Understanding Waveform Data" on page 206
- "Waveform Structure" on page 214
- "Waveform Phase Continuity" on page 217
- "" on page 220
- "Commands for Downloading and Extracting Waveform Data" on page 225
- "Creating Waveform Data" on page 235
- "Downloading Waveform Data" on page 241
- "Loading, Playing, and Verifying a Downloaded Waveform" on page 247
- "Using the Download Utilities" on page 250
- "Downloading E443xB Signal Generator Files" on page 251
- "Programming Examples" on page 253
- "Troubleshooting Waveform Files" on page 317



Overview of Downloading and Extracting Waveform Files

The signal generator lets you download and extract waveform files. You can create these files externally and download them to the signal generator. The signal generator also accepts waveforms files created for some earlier signal generator models. For file extractions, the signal generator encrypts the waveform file information. The exception to encrypted file extraction is usercreated I/Q data. The signal generator lets you extract this type of file unencrypted. After extracting a waveform file, you can download it into another Keysight signal generator that has the same option or software license required to play it. Waveform files consist of three items:

- 1. I/Q data
- 2. Marker data
- 3. File header

NOTE

This order of download is required, as the I/Q data downloads results in the overwriting of all of these three parts of the file.

The signal generator automatically creates the marker file and the file header if the two items are *not* part of the download. In this situation, the signal generator sets the file header information to unspecified (no settings saved) and sets all markers to zero (off).

There are three ways to download waveform files: FTP, programmatically, or using one of the available free download utilities created by Keysight Technologies:

- N7622A Signal Studio Toolkit 2 http://www.keysight.com/find/signalstudio
- Keysight Waveform Download Assistant for use only with MATLAB http://www.keysight.com/find/downloadassistant

Creating and Downloading Waveform Files

Overview of Downloading and Extracting Waveform Files

Waveform Data Requirements

To be successful in downloading files, you must first create the data in the required format.

- Signed 2's complement
- 2-byte integer values
- Input data range of –32768 to 32767
- Minimum of 60 samples per waveform (60 I and 60 Q data points)
- Interleaved I and Q data
- Big-endian byte order
- The same name for the marker, header, and I/Q file

This is only a requirement if you create and download a marker file and or file header, otherwise the signal generator automatically creates the marker file and or file header using the I/Q data file name.

NOTE

FTP can be used without programming commands to transfer files from the PC to the signal generator or from the signal generator to the PC.

For more information, see "Waveform Structure" on page 214.

For more information on waveform data, see "Understanding Waveform Data" on page 206.

Understanding Waveform Data

The signal generator accepts binary data formatted into a binary I/Q file. This section explains the necessary components of the binary data, which uses ones and zeros to represent a value.

Bits and Bytes

Binary data uses the base–two number system. The location of each bit within the data represents a value that uses base two raised to a power (2^{n-1}) . The exponent is n-1 because the first position is zero. The first bit position, zero, is located at the far right. To find the decimal value of the binary data, sum the value of each location:

$$1101 = (1 \times 2^{3}) + (1 \times 2^{2}) + (0 \times 2^{1}) + (1 \times 2^{0})$$

$$= (1 \times 8) + (1 \times 4) + (0 \times 2) + (1 \times 1)$$

$$= 13 \text{ (decimal value)}$$

Notice that the exponent identifies the bit position within the data, and we read the data from right to left.

The signal generator accepts data in the form of bytes. Bytes are groups of eight bits:

```
01101110 = (0 \times 2^{7}) + (1 \times 2^{6}) + (1 \times 2^{5}) + (0 \times 2^{4}) + (1 \times 2^{3}) + (1 \times 2^{2}) + (1 \times 2^{1}) + (0 \times 2^{0})
+ (0 \times 2^{0})
= 110 (decimal value)
```

The maximum value for a single unsigned byte is 255 (111111111 or 2^8-1), but you can use multiple bytes to represent larger values. The following shows two bytes and the resulting integer value:

```
01101110 10110011= 28339 (decimal value)
```

The maximum value for two unsigned bytes is 65535. Since binary strings lengthen as the value increases, it is common to show binary values using hexadecimal (hex) values (base 16), which are shorter. The value 65535 in hex is FFFF. Hexadecimal consists of the values 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, A, B, C, D, E, and F. In decimal, hex values range from 0 to 15 (F). It takes 4 bits to represent a single hex value.

1 = 0001	2 = 0010	3 = 0011	4 = 0100	5 = 0101
6 = 0110	7 = 0111	8 = 1000	9 = 1001	A = 1010
B = 1011	C = 1100	D = 1101	E = 1110	F = 1111

For I and Q data, the signal generator uses two bytes to represent an integer value.

LSB and MSB (Bit Order)

Within groups (strings) of bits, we designate the order of the bits by identifying which bit has the highest value and which has the lowest value by its location in the bit string. The following is an example of this order.

Most Significant Bit (MSB)


This bit has the highest value (greatest weight) and is located at the far left of the bit

string.

Least Significant Bit (LSB)

This bit has the lowest value (bit position zero) and is located at the far right of the bit

string.

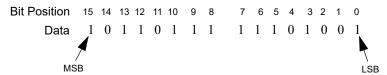


Because we are using 2 bytes of data, the LSB appears in the second byte.

Little Endian and Big Endian (Byte Order)

When you use multiple bytes (as required for the waveform data), you must identify their order. This is similar to identifying the order of bits by LSB and MSB. To identify byte order, use the terms little endian and big endian. These terms are used by designers of computer processors.

Little Endian Order

The lowest order byte that contains bits 0-7 comes first.

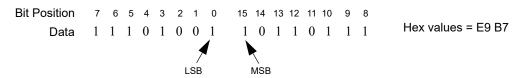

Big Endian Order

The highest order byte that contains bits 8–15 comes first.



Notice in the previous figure that the LSB and MSB positioning changes with the byte order. In little endian order, the LSB and MSB are next to each other in the bit sequence.

NOTE

For I/Q data downloads, Keysight signal generators require big-endian order.

For each I/Q data point, the signal generator uses four bytes (two integer values), two bytes for the I point and two bytes for the Q point.

The byte order, little-endian or big-endian, depends on the type of processor used with your development platform. Intel® processors and its clones use little endian. Sun™ and Motorola processors use big endian. The Apple PowerPC processor, while big-endian oriented, also supports the little-endian order. Always refer to the processor's manufacturer to determine the order they use for bytes and if they support both, to understand how to ensure that you are using the correct byte order.


Development platforms include any product that creates and saves waveform data to a file. This includes Keysight Technologies Advanced Design System EDA software, C++, MATLAB, and so forth.

The byte order describes how the system processor stores integer values as binary data in memory. If you output data from a little-endian system to a text file (ASCII text), the values are the same as viewed from a big endian system. The order only becomes important when you use the data in binary format, as is done when downloading data to the signal generator.

Byte Swapping

While the processor for the development platform determines the byte order, the recipient of the data may require the bytes in the reverse order. In this situation, you must reverse the byte order before downloading the data. This is commonly referred to as byte swapping. You can swap bytes either programmatically or by using the Signal Studio Toolkit 2 software. For the signal generator, byte swapping is the method to change the byte order of little endian to big endian. For more information on little endian and big endian order, see "Little Endian and Big Endian (Byte Order)" on page 207.

The following figure shows the concept of byte swapping for the signal generator. Remember that we can represent data in hex format (4 bits per hex value), so each byte (8 bits) in the figure shows two example hex values.

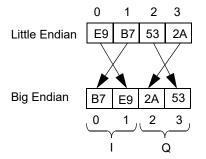

16—bit integer values (2 bytes = 1 integer value)

I data = bytes 0 and 1 Q data = bytes 2 and 3 Creating and Downloading Waveform Files Understanding Waveform Data

To correctly swap bytes, you must group the data to maintain the I and Q values. One common method is to break the two-byte integer into one-byte character values (0–255). Character values use 8 bits (1 byte) to identify a character. Remember that the maximum unsigned 8-bit value is $255 (2^8 - 1)$. Changing the data into character codes groups the data into bytes. The next step is then to swap the bytes to align with big endian order.

NOTE

Keysight signal generators always assume that downloaded data is in big-endian order, so there is no data order check. Downloading data in little-endian order will produce an undesired output signal.

DAC Input Values

The signal generator uses a 16-bit DAC (digital-to-analog converter) to process each of the 2-byte integer values for the I and Q data points. The DAC determines the range of input values required from the I/Q data. Remember that with 16 bits we have a range of 0-65535, but the signal generator divides this range between positive and negative values:

- 32767 = positive full scale output
- -0 = 0 volts
- 32768 = negative full scale output

Because the DAC's range uses both positive and negative values, the signal generator requires signed input values. The following list illustrates the DAC's input value range.

Voltage	DAC Range	Input Range	Binary Data	<u>Hex Data</u>
Vmax	65535	32767	01111111 111111	111 7FFF
1	i i	i I	; ;	
1	i	1	İ	i
! !	! !	; ;	1	1 1 1
1	32768	1	00000000 000000	0001 0001
0 Volts	32767	0	00000000 000000	0000 0000
1	32766	-1	11111111 111111	l11 FFFF
1	•		1	•
1	i	i	ı I	i
i	1	I	1	1
1	ı İ	I	1	ı
Vmin	0	-32768	10000000 00000	0008 000

Notice that it takes only 15 bits (2¹⁵) to reach the Vmax (positive) or Vmin (negative) values. The MSB determines the sign of the value. This is covered in "2's Complement Data Format" on page 211.

Using E443xB ESG DAC Input Values


Keysight E443xBsignal generator models have a DAC input range that is different from other Keysight signal generator models. For E443xB models, the input values are all positive (unsigned) and the data is contained within 14 bits plus 2 bits for markers. This means that the E443xB DAC has a smaller range:

- 0 = negative full scale output
- -8192 = 0 volts
- 16383 = positive full scale output

Although X-Series signal generators use signed input values, they accept unsigned data created for the E443xB and convert it to the proper DAC values. To download an E443xB files to an X-Series signal generator, use the same command syntax as for the E443xB models. For more information on downloading E443xB files, see "Downloading E443xB Signal Generator Files" on page 251.

Scaling DAC Values

The signal generator uses an interpolation algorithm (sampling between the I/Q data points) when reconstructing the waveform. For common waveforms, this interpolation can cause overshoot, which may exceed the limits of the signal process path's internal number representation, causing arithmatic overload. This will be reported as a data path overload error. Because of the interpolation, the error condition can occur even when all the I and Q values are within the DAC input range. To avoid the DAC over–range problem, you must scale (reduce) the I and Q input values, so that any overshoot remains within the DAC range.

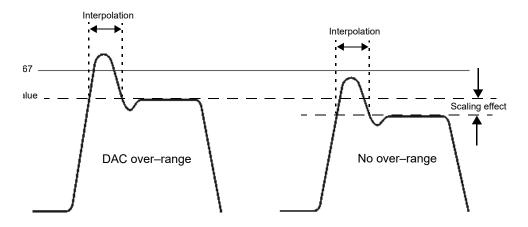

68 _____

NOTE

Whenever you interchange files between signal generator models, ensure that all scaling is adequate for that signal generator's waveform.

Creating and Downloading Waveform Files Understanding Waveform Data

There is no single scaling value that is optimal for all waveforms. To achieve the maximum dynamic range, select the largest scaling value that does not result in a DAC over-range error. There are two ways to scale the I/Q data:

- Reduce the input values for the DAC.
- Use the SCPI command :RADio:ARB:RSCaling <val> to set the waveform amplitude as a percentage of full scale.

NOTE

The signal generator factory preset for scaling is 70%. If you reduce the DAC input values, ensure that you set the signal generator scaling (:RADio:ARB:RSCaling) to an appropriate setting that accounts for the reduced values.

To further minimize overshoot problems, use the correct FIR filter for your signal type and adjust your sample rate to accommodate the filter response.

NOTE

FIR filter capability is only available on vector signal generator models with an installed baseband generator option.

2's Complement Data Format

The signal generator requires signed values for the input data. For binary data, two's complement is a way to represent positive and negative values. The most significant bit (MSB) determines the sign.

- 0 equals a positive value (01011011 = 91 decimal)
- 1 equals a negative value (10100101 = -91 decimal)

Like decimal values, if you sum the binary positive and negative values, you get zero. The one difference with binary values is that you have a carry, which is ignored. The following shows how to calculate the two's complement using 16-bits. The process is the same for both positive and negative values.

Convert the decimal value to binary.

```
23710 = 01011100 10011110
```

Notice that 15 bits (0-14) determine the value and bit 16 (MSB) indicates a positive value. Invert the bits (1 becomes 0 and 0 becomes 1).

```
10100011 01100001
```

Add one to the inverted bits. Adding one makes it a two's complement of the original binary value.

```
10100011 01100001
+ 00000000 00000001
10100011 01100010
```

The MSB of the resultant is one, indicating a negative value (-23710). Test the results by summing the binary positive and negative values; when correct, they produce zero.

```
01011100 10011110
+ 10100011 01100010
00000000 000000000
```

Creating and Downloading Waveform Files Understanding Waveform Data


I and Q Interleaving

When you create the waveform data, the I and Q data points typically reside in separate arrays or files. The signal generator requires a single I/Q file for waveform data playback. The process of interleaving creates a single array with alternating I and Q data points, with the Q data following the I data. This array is then downloaded to the signal generator as a binary file. The interleaved file comprises the waveform data points where each set of data points, one I data point and one Q data point, represents one I/Q waveform point.


NOTE

The signal generator can accept separate I and Q files created for the earlier E443xB ESG models. For more information on downloading E443xB files, see "Downloading E443xB Signal Generator Files" on page 251.


The following figure illustrates interleaving I and Q data. Remember that it takes two bytes (16 bits) to represent one I or Q data point.

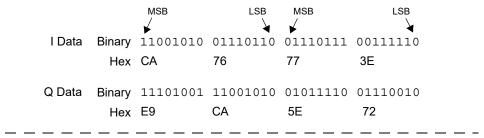

Interleaved Binary Data

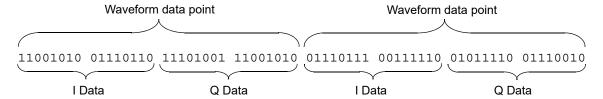

Interleaved Hex Data

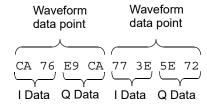

Waveform Structure

To play back waveforms, the signal generator uses data from the following three files:

- File header
- Marker file
- I/Q file

All three files have the same name, the name of the I/Q data file, but the signal generator stores each file in its respective directory (headers, markers, and waveform). For information on file extractions, see "Commands for Downloading and Extracting Waveform Data" on page 225.

File Header

The file header contains settings for the ARB modulation format such as sample rate, marker polarity, I/Q modulation attenuator setting and so forth. When you create and download I/Q data, the signal generator automatically creates a file header with all saved parameters set to unspecified. With unspecified header settings, the waveform either uses the signal generator default settings, or if a waveform was previously played, the settings from that waveform. Ensure that you configure and save the file header settings for each waveform.


NOTE

If you have no RF output when you play back a waveform, ensure that the marker RF blanking function has not been set for any of the markers. The marker RF blanking function is a header parameter that can be inadvertently set active for a marker by a previous waveform. To check for and turn RF blanking off manually, refer to "Configuring the Pulse/RF Blank" on page 318.

Marker File

The marker file uses one byte per I/Q waveform point to set the state of the four markers either on (1) or off (0) for each I/Q point. When a marker is active (on), an output trigger signal is sent to a corresponding rear-panel BNC and/or AUX IO connector pin. (For more information on active markers and their output trigger signal location, refer to your signal generator's User's Guide.) Because markers are set at each waveform point, the marker file contains the same number of bytes as there are waveform points. For example, for 200 waveform points, the marker file contains 200 bytes.

Although a marker point is one byte, the signal generator uses only bits 0–3 to configure the markers; bits 4–7 are reserved and set to zero. The following example shows a marker byte.

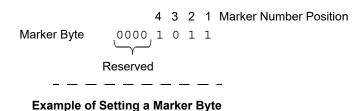

Binary 0000 0101 Hex 05

Sets markers 1 and 3 on for a waveform point

The following example shows a marker binary file (all values in hex) for a waveform with 200 points. Notice the first marker point, 0f, shows all four markers on for only the first waveform point.

```
0f = All markers on
01 = Marker 1 on
05 = Markers 1 and
04 = Marker 3 on
00 = No active mark
00000060: 05 05 05 05 04 04 04 04 04 04 04 04 04 04 04 04 04
000000c0: 00 00 00 00 00 00 00
```

If you create your own marker file, its name must be the same as the waveform file. If you download I/Q data without a marker file, the signal generator automatically creates a marker file with all points set to zero. For more information on markers, see the User's Guide.

NOTE

Downloading marker data using a file name that currently resides on the signal generator overwrites the existing marker file without affecting the I/Q (waveform) file. However, downloading just the I/Q data with the same file name as an existing I/Q file also overwrites the existing marker file setting all bits to zero.

Creating and Downloading Waveform Files Waveform Structure

I/Q File

The I/Q file contains the interleaved I and Q data points (signed 16-bit integers for each I and Q data point). Each I/Q point equals one waveform point. The signal generator stores the I/Q data in the waveform directory.

NOTE

If you download I/Q data using a file name that currently resides on the signal generator, it also overwrites the existing marker file setting all bits to zero and the file header setting all parameters to unspecified.

Waveform

A waveform consists of samples. When you select a waveform for playback, the signal generator loads settings from the file header. When the ARB is on, it creates the waveform samples from the data in the marker and I/Q (waveform) files. The file header, while required, does not affect the number of bytes that compose a waveform sample. One sample contains five bytes:

I/Q Data	+	Marker Data =	1 Waveform Sample
2 bytes I 2 bytes C	Q	1byte (8 bits)	5 bytes
(16 bits) (16 bits)	Bits	4–7 reserved—Bits 0–3 set	t ·

To create a waveform, the signal generator requires a minimum of 60 samples. To help minimize signal imperfections, use an even number of samples (for information on waveform continuity, see "Waveform Phase Continuity" on page 217). When you store waveforms, the signal generator saves changes to the waveform file, marker file, and file header.

Waveform Phase Continuity


Phase Discontinuity, Distortion, and Spectral Regrowth

The most common arbitrary waveform generation use case is to play back a waveform that is finite in length and repeat it continuously. Although often overlooked, a phase discontinuity between the end of a waveform and the beginning of the next repetition can lead to periodic spectral regrowth and distortion.

For example, the sampled sinewave segment in the following figure may have been simulated in software or captured off the air and sampled. It is an accurate sinewave for the time period it occupies, however the waveform does not occupy an entire period of the sinewave or some multiple thereof. Therefore, when repeatedly playing back the waveform by an arbitrary waveform generator, a phase discontinuity is introduced at the transition point between the beginning and the end of the waveform.

Repetitions with abrupt phase changes result in high frequency spectral regrowth. In the case of playing back the sinewave samples, the phase discontinuity produces a noticeable increase in distortion components in addition to the line spectra normally representative of a single sinewave.

Sampled Sinewave with Phase Discontinuity

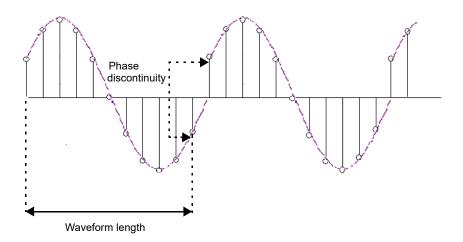

Avoiding Phase Discontinuities

You can easily avoid phase discontinuities for periodic waveforms by simulating an integer number of cycles when you create your waveform segment.


NOTE

If there are N samples in a complete cycle, only the first N-1 samples are stored in the waveform segment. Therefore, when continuously playing back the segment, the first and Nth waveform samples are always the same, preserving the periodicity of the waveform.

By adding off time at the beginning of the waveform and subtracting an equivalent amount of off time from the end of the waveform, you can address phase discontinuity for pulsed periodic waveforms. Consequently, when the waveform repeats, the lack of signal present avoids the issue of phase discontinuity.

However, if the period of the waveform exceeds the waveform playback memory available in the arbitrary waveform generator, a periodic phase discontinuity could be unavoidable.

Sampled Sinewave with No Discontinuity

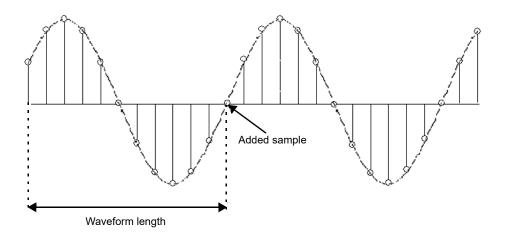


The following figures illustrate the influence a single sample can have. The generated 3-tone test signal requires 100 samples in the waveform to maintain periodicity for all three tones. The measurement on the left shows the effect of using the first 99 samples rather than all 100 samples. Notice all the distortion products (at levels up to -35 dBc) introduced in addition to the wanted 3-tone


signal. The measurement on the right shows the same waveform using all 100 samples to maintain periodicity and avoid a phase discontinuity. Maintaining periodicity removes the distortion products.

Phase Discontinuity

Phase Continuity

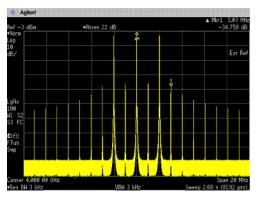

3-tone - 20 MHz Bandwidth Measured distortion = 35 dBc

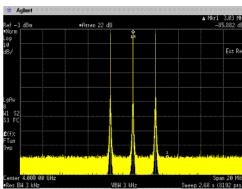

3-tone - 20 MHz Bandwidth Measured distortion = 86 dBc

The signal generator provides two types of memory, volatile and non-volatile. You can download files to either memory type.

NOTE

The X-Series ARB Waveform File Cache is limited to 128 files. Consequently, once the 128 file cache limit has been reached, the waveform switching speed will be much slower for files loaded into the volatile (BBG). For cache information, always refer to the Data Sheet for the current information.

Volatile

Random access memory that does not survive cycling of the signal generator power. This memory is commonly referred to as (WFM1) or waveform playback memory. To play back waveforms, they must reside in volatile memory. The following file types share this memory:

Table 5-1 Signal Generators and Volatile Memory Types

Volatile Memory Type	Signal Generator Model
	N5166B, N5172B, N5182B with an installed BBG option
I/Q	Х
Marker	Х
File header	Х
User PRAM	-

Non-volatile


Storage memory where files survive cycling the signal generator power. Files remain until overwritten or deleted. To play back waveforms after cycling the signal generator power, you must load waveforms from non-volatile (NVWFM) to volatile (WFM1). On the Keysight X-Series signal generators the non-volatile memory is referred to as internal media and external media. The following file types share this memory:

Table 5-2 Signal Generators and Non-Volatile Memory Types

Non-Volatile Memory Type	Signal Generator Model
	N5166B, N5172B, N5182B with an installed BBG option
I/Q	Х
Marker	Х
File header	Х
Sweep List	Х
User Data	Х
User PRAM	Х
Instrument State	Х
Waveform Sequences (multiple I/Q files played together)	х

The following figure on Figure 5-1 on page 222 shows the locations within the signal generator for volatile and non-volatile waveform data.

Figure 5-1 File Structure Map

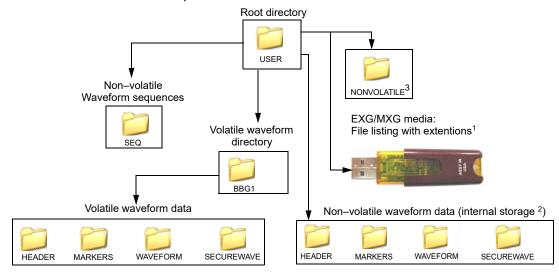

- 1 The Keysight X-Series signal generator use an optional "USB media" to store non-volatile waveform data.
- 2 The Keysight X-Series signal generator internal non-volatile memory is referred to as "internal storage". These internal storage directories contain pointers to the files, which are located in the NONVOLATILE directory.
- 3 The NONVOLATILE directory shows the files with the same extensions as the USB media and is useful with ftp.

Memory Allocation

Volatile Memory

The signal generator allocates volatile memory in blocks of 1024 bytes. For example, a waveform file with 60 samples (the minimum number of samples) has 300 bytes (5 bytes per sample x 60 samples), but the signal generator allocates 1024 bytes of memory. If a waveform is too large to fit into 1024 bytes, the signal generator allocates additional memory in multiples of 1024 bytes. For example, the signal generator allocates 3072 bytes of memory for a waveform with 500 samples (2500 bytes).

 3×1024 bytes = 3072 bytes of memory

As shown in the examples, waveforms can cause the signal generator to allocate more memory than what is actually used, which decreases the amount of available memory.

NOTE

In the first block of data of volatile memory that is allocated for each waveform file, the file header requires 512 bytes.

Non-Volatile Memory

NOTE

If the signal generator's external USB flash memory port is used, the USB flash memory can provide actual physical storage of non-volatile data in the SECUREWAVE directory versus the "virtual" only data.

ARB waveform encryption of proprietary information is supported on the external non-volatile USB flash memory.

To copy unencrypted data files from an external media (as in USB Flash Drive [UFD]) for playing on a signal generator, the full filename extension is required (i.e. .MARKER, .HEADER, .WAVEFORM, etc.). For more information on unencrypted data, refer to "Commands for Downloading and Extracting Waveform Data" on page 225. For more information on how to work with files, refer to the User's Guide.

To copy **compatible licensed** encrypted data files (i.e. .SECUREWAVE) from an external media, download (copy) the files to the signal generator (refer to the User's Guide for information on how to work with files). When using the external media along with the signal generator's **Use** as or **Copy File to Instrument** softkey menus, encrypted data files can be automatically detected by the signal generator, regardless of the suffix (e.g. .wfm, .wvfm, and **no suffix**, etc.). These various waveform files can be selected and played by the signal generator. For more information on encrypted data, refer to "Commands for Downloading and Extracting Waveform Data" on page 225. When using the **Copy File to Instrument**, the signal generator prompts the user to select between BBG Memory and Internal Storage memories as locations to copy the files.

Non-volatile files are stored on the non-volatile internal signal generator memory (internal storage) or to an USB media, if available.

The non-volatile internal memory is allocated according to a Microsoft compatible file allocation table (FAT) file system. The signal generator allocates non-volatile memory in clusters according to the drive size (see **Table on page 223**). For example, referring to **Table on page 223**, if the drive size is 15 MB and if the file is less than or equal to 4K bytes, the file uses only one 4 KB cluster of memory. For files larger than 4 KB, and with a drive size of 15 MB, the signal generator allocates additional memory in multiples of 4KB clusters. For example, a file that has 21,538 bytes consumes 6 memory clusters (24,000 bytes).

For more information on default cluster sizes for FAT file structures, refer to Table on page 223 and to http://support.microsoft.com/.

Table 5-3 Drive Size (logical volume)

Drive Size (logical volume)	Cluster Size (Bytes) (Minimum Allocation Size)
0 MB – 15 MB	4K
16 MB – 127 MB	2K

Table 5-3 Drive Size (logical volume)

Drive Size (logical volume)	Cluster Size (Bytes) (Minimum Allocation Size)
128 MB – 255 MB	4K
256 MB – 511 MB	8K
512 MB – 1023 MB	16K
1024 MB – 2048 MB	32K
2048 MB – 4096 MB	64K
4096 MB – 8192 MB	128K
8192 MB – 16384 MB	256K

Memory Size

The amount of available memory, volatile and non-volatile, varies by the installed options and by amount of memory used by other files that share the memory. When we refer to waveform files, we state the memory size in samples (one sample equals five bytes). The waveform playback memory resides on the baseband generator that is installed in the Keysight X-Series signal generator. Refer to Table 5-4 on page 224 for the maximum available memory for each model and option.

Table 5-4 Maximum Signal Generator Memory

Volatile (BBG) Memory			Non-Volatile (Internal Storage and USB Media) Memory	
Option	Size		Option	Size
			N5166B	
653, 655 (BBG)	32 MSa (160 MB)		Standard 009	600 MSa (3 GB) 7.5 GSa (30 GB)
022	512 MSa (2.5 GB)		USB Flash Drive (UFD)	user determined
	N5172B and N5182B			
653, 655, 656, 657 (BBG)	32 MSa (160 MB)		Standard 006 009	600 MSa (3 GB) 2 GSa (8 GB) 7.5 GSa (30 GB)
021 (N5172B only) 022 023 (N5182B only)	256 MSa (1.25 GB) 512 MSa (2.5 GB) 1024 MSa (5 GB)		USB Flash Drive (UFD)	user determined

Commands for Downloading and Extracting Waveform Data

You can download I/Q data, the associated file header, and marker file information (collectively called waveform data) into volatile or non-volatile memory. For information on waveform structure, see "Waveform Structure" on page 214.

The signal generator provides the option of downloading waveform data either for extraction or not for extraction. When you extract waveform data, the signal generator may require it to be read out in encrypted form. The SCPI download commands determine whether the waveform data is extractable.

You can download or extract waveform data created in any of the following ways:

- with signal simulation software, such as MATLAB or Keysight Advanced Design System (ADS)
- with advanced programming languages, such as C++, VB or VEE
- with Keysight Signal Studio software
- with the signal generator

Waveform Data Encryption

You can download encrypted waveform data extracted from one signal generator into another signal generator with the same option or software license for the modulation format. You can also extract encrypted waveform data created with software such as MATLAB or ADS, providing the data was downloaded to the signal generator using the proper command.

When you download an exported waveform using a Keysight Signal Studio software product, you can use the FTP process and the securewave directory or SCPI commands, to extract the encrypted file to the non-volatile memory on the signal generator. Refer to "File Transfer Methods" on page 226.

Encrypted I/Q Files and the Securewave Directory

The signal generator uses the securewave directory to perform file encryption (extraction) and decryption (downloads). The securewave directory is not an actual storage directory, but rather a portal for the encryption and decryption process. While the securewave directory contains file names, these are actually pointers to the true files located in signal generator memory (volatile or non-volatile). When you download an encrypted file, the securewave directory decrypts the file and unpackages the contents into its file header, I/Q data, and marker data. When you extract a file, the securewave directory packages the file header, I/Q data, and marker data and encrypts the waveform data file. When you extract the waveform file (I/Q data file), it includes the other two files, so there is no need to extract each one individually.

The signal generator uses the following securewave directory paths for file extractions and encrypted file downloads:

Volatile /user/bbg1/securewave/file_name or swfm:file_name

Non-volatile /user/securewave or snvwfm1:file_name

NOTE

To extract files (other than user-created I/Q files) and to download encrypted files, you must use the securewave directory. If you attempt to extract previously downloaded encrypted files (including Signal Studio downloaded files) without using the securewave directory, the signal generator generates an error and displays:

ERROR: 221, Access Denied.

Encrypted I/Q Files and the Securewave Directory

NOTE

Header parameters of files stored on the Keysight X-Series signal generator internal or USB media cannot be changed unless the file is copied to the volatile BBG memory. For more information on modifying header parameters, refer to the User's Guide.

When downloading encrypted files (.SECUREWAVE) from the USB media that have had the file suffix changed to something other than .SECUREWAVE, you must use the **Use As** or **Copy File to Instrument** menus to play an encrypted waveform file in the signal generator.

File Transfer Methods

- SCPI using VXI–11 (VMEbus Extensions for Instrumentation as defined in VXI–11)
- SCPI over the GPIB or RS 232
- SCPI with sockets LAN (using port 5025)
- File Transfer Protocol (FTP)


SCPI Command Line Structure

The signal generator expects to see waveform data as block data (binary files). The IEEE standard 488.2–1992 section 7.7.6 defines block data. The following example shows how to structure a SCPI command for downloading waveform data (#ABC represents the block data):

:MMEM:DATA "<file_name>",#ABC

C the actual binary waveform data

The following example demonstrates this structure:

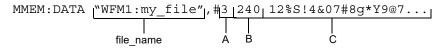

WFM1: the file path

my file the I/Q file name as it will appear in the signal

generator's memory catalog

indicates the start of the data block

B has three decimal digits

240 240 bytes of data to follow in C

12%S!4&07#8g*Y9@7... the ASCII representation of some of the binary data downloaded to the signal generator, however not all ASCII values are printable

Commands and File Paths for Downloading and Extracting Waveform Data

NOTE

Filenames should not exceed 23 characters.

You can download or extract waveform data using the commands and file paths in the following tables:

- Table 5-5, "Downloading Unencrypted Files for No Extraction," on page 228
- Table 5-6, "Downloading Encrypted Files for No Extraction," on page 228
- Table 5-7, "Downloading Unencrypted Files for Extraction," on page 228

- Table 5-9, "Downloading Encrypted Files for Extraction," on page 230
- Table 5-10, "Extracting Encrypted Waveform Data," on page 230

Table 5-5 Downloading Unencrypted Files for No Extraction

Download Method/ Memory Type	Command Syntax Options	
SCPI/volatile memory	MMEM:DATA "WFM1: <file_name>",<blockdata> MMEM:DATA "MKR1:<file_name>",<blockdata> MMEM:DATA "HDR1:<file_name>",<blockdata></blockdata></file_name></blockdata></file_name></blockdata></file_name>	
SCPI/volatile memory with full directory path	MMEM:DATA "user/bbg1/waveform/ <file_name>",<blockdata> MMEM:DATA "user/bbg1/markers/<file_name>",<blockdata> MMEM:DATA "user/bbg1/header/<file_name>",<blockdata></blockdata></file_name></blockdata></file_name></blockdata></file_name>	
SCPI/non-volatile memory	MMEM:DATA "NVWFM: <file_name>",<blockdata> MMEM:DATA "NVMKR:<file_name>",<blockdata> MMEM:DATA "NVHDR:<file_name>",<blockdata></blockdata></file_name></blockdata></file_name></blockdata></file_name>	
SCPI/non-volatile memory with full directory path	MMEM:DATA /user/waveform/ <file_name>",<blockdata> MMEM:DATA /user/markers/<file_name>",<blockdata> MMEM:DATA /user/header/<file_name>",<blockdata></blockdata></file_name></blockdata></file_name></blockdata></file_name>	

Table 5-6 Downloading Encrypted Files for No Extraction

Download Method /Memory Type	Command Syntax Options	
SCPI/volatile memory	<pre>MMEM:DATA "user/bbg1/securewave/<file_name>",<blockdata> MMEM:DATA "SWFM1:<file_name>",<blockdata> MMEM:DATA "file_name@SWFM1",<blockdata></blockdata></blockdata></file_name></blockdata></file_name></pre>	
SCPI/non-volatile memory	MMEM:DATA "user/securewave/ <file_name>",<blockdata> MMEM:DATA "SNVWFM:<file_name>",<blockdata> MMEM:DATA "file_name@SNVWFM",<blockdata></blockdata></blockdata></file_name></blockdata></file_name>	

Table 5-7 Downloading Unencrypted Files for Extraction

Download Method/ Memory Type	Command Syntax Options
SCPI/volatile memory ^a	MEM:DATA:UNPRotected "/user/bbg1/waveform/file_name", <blockdata> MEM:DATA:UNPRotected "/user/bbg1/markers/file_name", <blockdata> MEM:DATA:UNPRotected "/user/bbg1/header/file_name", <blockdata> MEM:DATA:UNPRotected "WFM1:file_name", <blockdata> MEM:DATA:UNPRotected "MKR1:file_name", <blockdata> MEM:DATA:UNPRotected "HDR1:file_name", <blockdata> MEM:DATA:UNPRotected "file_name@WFM1", <blockdata> MEM:DATA:UNPRotected "file_name@MKR1", <blockdata> MEM:DATA:UNPRotected "file_name@MKR1", <blockdata> MEM:DATA:UNPRotected "file_name@HDR1", <blockdata></blockdata></blockdata></blockdata></blockdata></blockdata></blockdata></blockdata></blockdata></blockdata></blockdata>

Table 5-7 Downloading Unencrypted Files for Extraction

Download Method/ Memory Type	Command Syntax Options
SCPI/non-volatile memory ^a	MEM:DATA:UNPRotected "/user/waveform/file_name", <blockdata> MEM:DATA:UNPRotected "/user/markers/file_name", <blockdata> MEM:DATA:UNPRotected "/user/header/file_name", <blockdata> MEM:DATA:UNPRotected "NVWFM:file_name", <blockdata> MEM:DATA:UNPRotected "NVMKR:file_name", <blockdata> MEM:DATA:UNPRotected "NVHDR:file_name", <blockdata> MEM:DATA:UNPRotected "file_name@NVWFM", <blockdata> MEM:DATA:UNPRotected "file_name@NVWFM", <blockdata> MEM:DATA:UNPRotected "file_name@NVMKR", <blockdata> MEM:DATA:UNPRotected "file_name@NVMKR", <blockdata></blockdata></blockdata></blockdata></blockdata></blockdata></blockdata></blockdata></blockdata></blockdata></blockdata>
FTP/volatile memory ^b	<pre>put <file_name> /user/bbg1/waveform/<file_name> put <file_name> /user/bbg1/markers/<file_name> put <file_name> /user/bbg1/header/<file_name></file_name></file_name></file_name></file_name></file_name></file_name></pre>
FTP/non-volatile memory b	<pre>put <file_name> /user/waveform/<file_name> put <file_name> /user/markers/<file_name> put <file_name> /user/header/<file_name></file_name></file_name></file_name></file_name></file_name></file_name></pre>

- a. The :MEM:DATA:UNPRotected command is **not** required to be able to extract files (i.e. use :MEM:DATA). For more information, refer to the SCPI Command Reference.
- b. See "FTP Procedures" on page 231.

Table 5-8 Extracting Unencrypted I/Q Data

Download Method/Memory Type	Command Syntax Options
SCPI/volatile memory	MMEM:DATA? "/user/bbg1/waveform/ <file_name>" MMEM:DATA? "WFM1:<file_name>" MMEM:DATA? "<file_name>@WFM1"</file_name></file_name></file_name>
SCPI/non-volatile memory	MMEM:DATA? "/user/waveform/ <file_name>" MMEM:DATA? "NVWFM:<file_name>" MMEM:DATA? "<file_name>@NVWFM"</file_name></file_name></file_name>
FTP/volatile memory ^a	<pre>get /user/bbg1/waveform/<file_name> get /user/bbg1/markers/<file_name> get /user/bbg1/header/<file_name></file_name></file_name></file_name></pre>
FTP/non-volatile memory ^a	<pre>get /user/waveform/<file_name> get /user/markers/<file_name> get /user/header/<file_name></file_name></file_name></file_name></pre>

a. See "FTP Procedures" on page 231.

Table 5-9 Downloading Encrypted Files for Extraction

Download Method/Memory Type	Command Syntax Options
SCPI/volatile ^a memory	MEM:DATA:UNPRotected "/user/bbg1/securewave/file_name", <blockdata> MEM:DATA:UNPRotected "SWFM1:file_name", <blockdata> MEM:DATA:UNPRotected "file_name@SWFM1", <blockdata></blockdata></blockdata></blockdata>
SCPI/non-volatile memorySCPI/n on-volatile memory ^a	MEM:DATA:UNPRotected "/user/securewave/file_name", <blockdata> MEM:DATA:UNPRotected "SNVWFM:file_name",<blockdata> MEM:DATA:UNPRotected "file_name@SNVWFM",<blockdata></blockdata></blockdata></blockdata>
FTP/volatile memory ^b	<pre>put <file_name> /user/bbg1/securewave/<file_name></file_name></file_name></pre>
FTP/non-volatile memory ^b	<pre>put <file_name> /user/securewave/<file_name></file_name></file_name></pre>

- a. The :MEM:DATA:UNPRotected command is **not** required to be able to extract files (i.e.
 - use :MEM:DATA). For more information, refer to the SCPI Command Reference.
- b. See "FTP Procedures" on page 231.

Table 5-10 Extracting Encrypted Waveform Data

Download Method/Memory Type	Command Syntax Options
SCPI/volatile memory	MMEM:DATA? "/user/bbg1/securewave/file_name" MMEM:DATA? "SWFM1:file_name" MMEM:DATA? "file_name@SWFM1"
SCPI/non-volatile memory	MMEM:DATA? "/user/securewave/file_name" MMEM:DATA? "SNVWFM:file_name" MMEM:DATA? "file_name@SNVWFM"
FTP/volatile memory ^a	<pre>get /user/bbg1/securewave/<file_name></file_name></pre>
FTP/non-volatile memory ^a	get /user/securewave/ <file_name></file_name>

a. See "FTP Procedures" on page 231.

FTP Procedures

CAUTION

Avoid using the *OPC? or *WAI commands to verify that the FTP process has been completed. These commands can potentially hang up due to the processing of other SCPI parser operations. Refer to the SCPI Command Reference.

NOTE

If you are remotely FTPing files and need to verify the completion of the FTP process, then query the instrument by using SCPI commands such as: ':MEM:DATA:', ':MEM:CAT', '*STB?', 'FREQ?', '*IDN?', 'OUTP:STAT?'. Refer to the SCPI Command Reference.

There are three ways to FTP files:

- use the Microsoft Internet Explorer FTP feature
- use the PC's or UNIX command window
- use the signal generator's internal web server

Using Microsoft Internet Explorer

1. Enter the signal generator's hostname or IP address as part of the FTP URL.

ftp://<host name > or

ftp://<IP address>

- Press Enter on the keyboard or Go from the Internet Explorer window.The signal generator files appear in the Internet Explorer window.
- 3. Drag and drop files between the PC and the Internet Explorer window

Using the Command Window (PC or UNIX)

This procedure downloads to non-volatile memory. To download to volatile memory, change the file path.

CAUTION

Get and Put commands write over existing files by the same name in destination directories. Remember to change remote and local filenames to avoid the loss of data.

NOTE

If a filename has a space, quotations are required around the filename. Always transfer the waveform file before transferring the marker file. For additional information on FTP commands, refer to the operating system's Window Help and Support Center.

- 1. From the PC command prompt or UNIX command line, change to the destination directory for the file you intend to download.
- 2. From the PC command prompt or UNIX command line, type ftp <instrument name>. Where instrument name is the signal generator's hostname or IP address.
- 3. At the User: prompt in the ftp window, press Enter (no entry is required).
- **4.** At the Password: prompt in the ftp window, press **Enter** (no entry is required).
- **5.** At the ftp prompt, either put a file or get a file:

To put a file, type:

put <file_name> /user/waveform/<file_name1>

where <file_name> is the name of the file to download and <file_name1> is the name designator for the signal generator's /user/waveform/ directory.

If <filename1> is unspecified, ftp uses the specified <file_name> to
name <file name1>.

 If a marker file is associated with the data file, use the following command to download it to the signal generator:

put <marker file_name> /user/markers/<file_name1>

where <marker file_name> is the name of the file to download and <file_name1> is the name designator for the file in the signal generator's /user/markers/ directory. Marker files and the associated I/Q waveform data have the same name.

For more examples of put command usage refer to Table 5-11.

Table 5-11 Put Command Examples

Command Results	Local	Remote	Notes
Incorrect	<pre>put <filename.wfm> put <filename.mkr></filename.mkr></filename.wfm></pre>	/user/waveform/ <filename 1.wfm> /user/marker/<filename1. mkr></filename1. </filename 	Produces two separate and incompatible files.

Table 5-11 Put Command Examples

Command Results	Local	Remote	Notes
Correct	<pre>put <filename.wfm> put <filename.mkr></filename.mkr></filename.wfm></pre>	/user/waveform/ <filename 1> /user/marker/<filenamel></filenamel></filename 	Creates a waveform file and a compatible marker file.

To get a file, type:

get /user/waveform/<file_name1> <file_name>

where <file_name1> is the file to download from the signal generator's /user/waveform/ directory and <file_name> is the name designator for the local PC/UNIX.

 If a marker file is associated with the data file, use the following command to download it to the local PC/UNIX directory:
 get /user/markers/<file_namel> <marker file_name>

where <marker file_name1> is the name of the marker file to download from the signal generator's /user/markers/ directory and <marker file_name> is the name of the file to be downloaded to the local PC/UNIX.

For more examples of get command usage refer to Table 5-12.

Table 5-12 Get Command Examples

Command Results	Local	Remote	Notes
Incorrect	<pre>get /user/waveform/file get /user/marker/file</pre>	file1	Results in file1 containing only the marker data.
Correct	<pre>get /user/waveform/file get /user/marker/file</pre>	file1.wfm	Creates a waveform file and a compatible marker file. It is easier to keep files associated by varying the extenders.

- **6.** At the ftp prompt, type: bye
- 7. At the command prompt, type: exit

Using the Signal Generator's Internal Web Server

1. Enter the signal generator's hostname or IP address in the URL.

http://<host name> or <IP address>

2. Click the **Signal Generator FTP Access** button located on the left side of the window.

Creating and Downloading Waveform Files
Commands for Downloading and Extracting Waveform Data

The signal generator files appear in the web browser's window.

3. Drag and drop files between the PC and the browser's window

For more information on the web server feature, see Chapter 1.

Creating Waveform Data

This section examines the C++ code algorithm for creating I/Q waveform data by breaking the programming example into functional parts and explaining the code in generic terms. This is done to help you understand the code algorithm in creating the I and Q data, so you can leverage the concept into your programming environment. The SCPI Command Reference, contains information on how to use SCPI commands to define the markers (polarity, routing, and other marker settings). If you do not need this level of detail, you can find the complete programming examples in "Programming Examples" on page 253.

You can use various programming environments to create ARB waveform data. Generally there are two types:

- Simulation software— this includes MATLAB, Keysight Technologies EESof Advanced Design System (ADS), Signal Processing WorkSystem (SPW), and so forth.
- Advanced programming languages—this includes, C++, VB, VEE, MS
 Visual Studio.Net, Labview, and so forth.

No matter which programming environment you use to create the waveform data, make sure that the data conforms to the data requirements shown on page 205. To learn about I/Q data for the signal generator, see "Understanding Waveform Data" on page 206.

Code Algorithm

This section uses code from the C++ programming example "Importing, Byte Swapping, Interleaving, and Downloading I and Q Data—Big and Little Endian Order" on page 275 to demonstrate how to create and scale waveform data.

There are three steps in the process of creating an I/Q waveform:

- 1. Create the I and Q data.
- 2. Save the I and Q data to a text file for review.
- **3.** Interleave the I and Q data to make an I/Q file, and swap the byte order for little–endian platforms.

For information on downloading I/Q waveform data to a signal generator, refer to "Commands and File Paths for Downloading and Extracting Waveform Data" on page 227 and "Downloading Waveform Data" on page 241.

Create I and Q data.

The following lines of code create scaled I and Q data for a sine wave. The I data consists of one period of a sine wave and the Q data consists of one period of a cosine wave.

Line Code-Create I and Q data

```
1
      const int NUMSAMPLES=500;
2
      main(int argc, char* argv[]);
3
4
         short idata[NUMSAMPLES];
5
         short qdata[NUMSAMPLES];
6
       int numsamples = NUMSAMPLES;
7
         for(int index=0; index<numsamples; index++);</pre>
8
9
             idata[index]=23000 * sin((2*3.14*index)/numsamples);
10
             qdata[index]=23000 * cos((2*3.14*index)/numsamples);
          }
11
```

Line	Code Description-Create I and Q data	
1	Define the number of waveform points. Note that the maximum number of waveform points that you can set based on the amount of available memory in the signal generator. For more information on signal generator memory, refer to "" on page 220.	
2	Define the main function in C++.	
4	Create an array to hold the generated I values. The array length equals the number of the waveform points. Note that we define the array as type short , which represents a 16-bit signed integer in most C++ compilers.	
5	Create an array to hold the generated Q values (signed 16-bit integers).	
6	Define and set a temporary variable, which is used to calculate the I and Q values.	
7–11	Create a loop to do the following:	
	 Generate and scale the I data (DAC values). This example uses a simple sine equation, where 2*3.14 equals one waveform cycle. Change the equation to fit your application. 	
	 The array pointer, index, increments from 0–499, creating 500 I data points over one period of the sine waveform. 	
	 Set the scale of the DAC values in the range of -32768 to 32767, where the values 	
	-32768 and 32767 equal full scale negative and positive respectively. This example uses 23000 as the multiplier, resulting in approximately 70% scaling. For more information on scaling, see "Scaling DAC Values" on page 210.	
	NOTE The signal generator comes from the factory with I/Q scaling set to 70%. If you reduce the DAC input values, ensure that you set the signal generator scaling (:RADio:ARB:RSCaling) to an appropriate setting that accounts for the reduced values.	
	 Generate and scale the Q data (DAC value). This example uses a simple cosine equation, where 2*3.14 equals one waveform cycle. Change the equation to fit your application. 	
	 The array pointer, index, increments from 0–499, creating 500 Q data points over one period of the cosine waveform. 	
	 Set the scale of the DAC values in the range of -32767 to 32768, where the values 	
	-32767 and 32768 equal full scale negative and positive respectively. This example uses 23000 as the multiplier, resulting in approximately 70% scaling. For more information on scaling, see "Scaling DAC Values" on page 210.	

2. Save the I/Q data to a text file to review.

The following lines of code export the I and Q data to a text file for validation. After exporting the data, open the file using Microsoft Excel or a similar spreadsheet program, and verify that the I and Q data are correct.

Line Code Description—Saving the I/Q Data to a Text File

```
char *ofile = "c:\\temp\\iq.txt";

FILE *outfile = fopen(ofile, "w");

if (outfile==NULL) perror ("Error opening file to write");

for(index=0; index<numsamples; index++)

{

fprintf(outfile, "%d, %d\n", idata[index], qdata[index]);

}

fclose(outfile);
```

Line	Code Description-Saving the I/Q Data to a Text File	
12	Set the absolute path of a text file to a character variable. In this example, <i>iq.txt</i> is the file name and * <i>ofile</i> is the variable name .	
	For the file path, some operating systems may not use the drive prefix ('c:' in this example), or may require only a single forward slash (/), or both ("/temp/iq.txt")	
13	Open the text file in write format.	
14	If the text file does not open, print an error message.	
15–18	Create a loop that prints the array of generated I and Q data samples to the text file.	
19	Close the text file.	

3. Interleave the I and Q data, and byte swap if using little endian order.

This step has two sets of code:


- Interleaving and byte swapping I and Q data for little endian order
- Interleaving I and Q data for big endian order

For more information on byte order, see "Little Endian and Big Endian (Byte Order)" on page 207.

Line Code-Interleaving and Byte Swapping for Little Endian Order

```
20
      char iqbuffer[NUMSAMPLES*4];
21
      for(index=0; index<numsamples; index++)</pre>
22
23
         short ivalue = idata[index];
24
         short qvalue = qdata[index];
25
         iqbuffer[index*4] = (ivalue >> 8) & 0xFF;
26
         iqbuffer[index*4+1] = ivalue & 0xFF;
27
         iqbuffer[index*4+2] = (qvalue >> 8) & 0xFF;
28
         iqbuffer[index*4+3] = qvalue & 0xFF;
29
30
     return 0;
```

Line	Code Description-Interleaving and Byte Swapping for Little Endian Order	
20	Define a character array to store the interleaved I and Q data. The character array makes byte swapping easier, since each array location accepts only 8 bits (1 byte). The array size increases by four times to accommodate two bytes of I data and two bytes of Q data.	
21-29	Create a loop to do the following:	
	 Save the current I data array value to a variable. NOTE In rare instances, a compiler may define short as larger than 16 bits. If this condition exists, replace short with the appropriate object or label that defines a 16-bit integer. Save the current Q data array value to a variable. Swap the low bytes (bits 0-7) of the data with the high bytes of the data (done for both 	

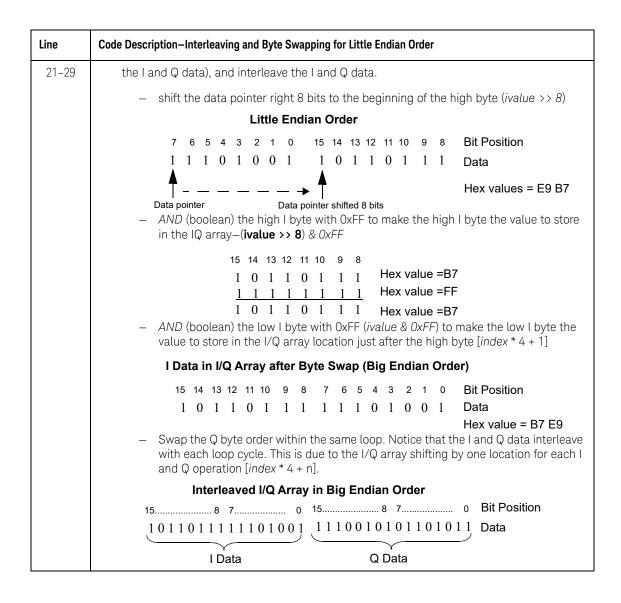

Line Code-Interleaving I and Q data for Big Endian Order

```
20     short iqbuffer[NUMSAMPLES*2];
21     for(index=0; index<numsamples; index++)
22     {
23         iqbuffer[index*2] = idata[index];
24         iqbuffer[index*2+1] = qdata[index];
25     }
26     return 0;</pre>
```

Line	Code Description-Interleaving I and Q data for Big Endian Order		
20	Define a 16-bit integer (short) array to store the interleaved I and Q data. The array size increases by two times to accommodate two bytes of I data and two bytes of Q data.		
	NOTE In rare instances, a compiler may define <i>short</i> as larger than 16 bits. If this condition exists, replace <i>short</i> with the appropriate object or label that defines a 16-bit integer.		
21-25	Create a loop to do the following:		
	 Store the I data values to the I/Q array location [index*2]. Store the Q data values to the I/Q array location [index*2+1]. 		
	Interleaved I/Q Array in Big Endian Order		
	15 8 7 0 15 8 7 0 Bit Position		
	1011011111101001 1110010110111 Data		
	l Data Q Data		

To download the data created in the above example, see "Using Advanced Programming Languages" on page 243.

Downloading Waveform Data

This section examines methods of downloading I/Q waveform data created in MATLAB (a simulation software) and C++ (an advanced programming language). For more information on simulation and advanced programming environments, see "Creating Waveform Data" on page 235.

To download data from simulation software environments, it is typically easier to use one of the free download utilities (described on page 250), because simulation software usually saves the data to a file. In MATLAB however, you can either save data to a .mat file or create a complex array. To facilitate downloading a MATLAB complex data array, Keysight created the Keysight Waveform Download Assistant (one of the free download utilities), which downloads the complex data array from within the MATLAB environment. This section shows how to use the Waveform Download Assistant.

For advanced programming languages, this section closely examines the code algorithm for downloading I/Q waveform data by breaking the programming examples into functional parts and explaining the code in generic terms. This is done to help you understand the code algorithm in downloading the interleaved I/Q data, so you can leverage the concept into your programming environment. While not discussed in this section, you may also save the data to a binary file and use one of the download utilities to download the waveform data (see "Using the Download Utilities" on page 250).

If you do not need the level of detail this section provides, you can find complete programming examples in "Programming Examples" on page 253. Prior to downloading the I/Q data, ensure that it conforms to the data requirements shown on page 205. To learn about I/Q data for the signal generator, see "Understanding Waveform Data" on page 206. For creating waveform data, see "Creating Waveform Data" on page 235.

NOTE

To avoid overwriting the current waveform in volatile memory, before downloading files into volatile memory (WFM1), change the file name or turn off the ARB. For more information, on manually turning off the ARB, refer to the User's Guide.

To turn off the ARB remotely, send: :SOURce:RADio:ARB:STATe OFF.

Using Simulation Software

This procedure uses a complex data array created in MATLAB and uses the Keysight Waveform Download Assistant to download the data. To obtain the Keysight Waveform Download Assistant, see "Using the Download Utilities" on page 250.

There are two steps in the process of downloading an I/Q waveform:

- 1. Open a connection session.
- 2. Download the I/Q data.

1. Open a connection session with the signal generator.

The following code establishes a LAN connection with the signal generator, sends the IEEE SCPI command *idn?, and if the connection fails, displays an error message.

Line Code-Open a Connection Session

```
io = agt_newconnection('tcpip','IP address');
%io = agt_newconnection('gpib',<primary address>,<secondary
address>);
[status,status_description,query_result] = agt_query(io,'*idn?');
if status == -1
display 'fail to connect to the signal generator';
end;
```

Line	Code Description-Open a Connection Session with the Signal Generator	
1	Sets up a structure (indicated above by io) used by subsequent function calls to establish a LAN connection the signal generator.	
	 agt_newconnection() is the function of Keysight Waveform Download Assistant used in MATLAB to build a connection to the signal generator. 	
	 If you are using GPIB to connect to the signal generator, provide the board, primary address, and secondary address: io = agt_newconnection('gpib',0,19); Change the GPIB address based on your instrument setting. 	
2	Send a query to the signal generator to verify the connection.	
	 agt_query() is an Keysight Waveform Download Assistant function that sends a query to the signal generator. 	
	 If signal generator receives the query *idn?, status returns zero and query_result returns the signal generator's model number, serial number, and firmware version. 	
3–5	If the query fails, display a message.	

2. Download the I/Q data

The following code downloads the generated waveform data to the signal generator, and if the download fails, displays a message.

Line Code-Download the I/Q data

Line	Code Description-Download the I/Q data
6	Download the I/Q waveform data to the signal generator by using the function call (agt_waveformload) from the Keysight Waveform Download Assistant. Some of the arguments are optional as indicated below, but if one is used, you must use all arguments previous to the one you require.
	Notice that with this function, you can perform the following actions:
	 download complex I/Q data name the file (optional argument) set the sample rate (optional argument) If you do not set a value, the signal generator uses its preset value, or if a waveform was previously played, the value from that waveform. start or not start waveform playback after downloading the data (optional argument) Use either the argument play or the argument no_play. whether to normalize and scale the I/Q data (optional argument) If you normalize and scale the data within the body of the code, then use no_normscale, but if you need to normalize and scale the data, use norm_scale. This normalizes the waveform data to the DAC values and then scales the data to 70% of the DAC values. download marker data (optional argument) If there is no marker data, the signal generator creates a default marker file, all marker set to zero.
	To verify the waveform data download, see "Loading, Playing, and Verifying a Downloaded Waveform" on page 247.
7–9	If the download fails, display an error message.

Using Advanced Programming Languages

This procedure uses code from the C++ programming example "Importing, Byte Swapping, Interleaving, and Downloading I and Q Data—Big and Little Endian Order" on page 275.

For information on creating I/Q waveform data, refer to "Creating Waveform Data" on page 235.

There are two steps in the process of downloading an I/Q waveform:

- 1. Open a connection session.
- 2. Download the I/Q data.

1. Open a connection session with the signal generator.

The following code establishes a LAN connection with the signal generator or prints an error message if the session is not opened successfully.

Line Code Description-Open a Connection Session

```
char* instOpenString ="lan[hostname or IP address]";
   //char* instOpenString ="gpib<primary addr>,<secondary addr>";
INST id=iopen(instOpenString);
   if (!id)
{
     fprintf(stderr, "iopen failed (%s)\n", instOpenString);
     return -1;
}
```

Line	Code Description-Open a Connection Session		
1	Assign the signal generator's LAN hostname, IP address, or GPIB address to a character string.		
	This example uses the Keysight IO library's iopen() SICL function to establish a LAN connection with the signal generator. The input argument, lan[hostname or IP address] contains the device, interface, or commander address. Change it to your signal generator host name or just set it to the IP address used by your signal generator. For example: "lan[999.137.240.9]"		
	 If you are using GPIB to connect to the signal generator, use the commented line in place of the first line. Insert the GPIB address based on your instrument setting, for example "gpib0,19". 		
	 For the detailed information about the parameters of the SICL function iopen(), refer to the online "Keysight SICL User's Guide for Windows." 		
2	Open a connection session with the signal generator to download the generated I/Q data.		
	The SICL function <i>iopen()</i> is from the Keysight IO library and creates a session that returns an identifier to <i>id</i> .		
	 If iopen() succeeds in establishing a connection, the function returns a valid session id. The valid session id is not viewable, and can only be used by other SICL functions. 		
	 If iopen() generates an error before making the connection, the session identifier is always set to zero. This occurs if the connection fails. 		
	 To use this function in C++, you must include the standard header #include <sicl.h> before the main() function.</sicl.h> 		
3–7	If $id = 0$, the program prints out the error message and exits the program.		

2. Download the I/Q data.

The following code sends the SCPI command and downloads the generated waveform data to the signal generator.

Line CodeDescription-Download the I/Q Data

```
8
      int bytesToSend;
9
     bytesToSend = numsamples*4;
10
     char s[20];
11
     char cmd[200];
12
      sprintf(s, "%d", bytesToSend);
13
      sprintf(cmd, ":MEM:DATA \"WFM1:FILE1\", #%d%d", strlen(s),
     bytesToSend);
14
      iwrite(id, cmd, strlen(cmd), 0, 0);
15
      iwrite(id, iqbuffer, bytesToSend, 0, 0);
16
      iwrite(id, "\n", 1, 1, 0);
```

Line	Code Description—Download the I/Q data
8	Define an integer variable (bytesToSend) to store the number of bytes to send to the signal generator.

Line	Code Description—Download the I/Q data
9	Calculate the total number of bytes, and store the value in the integer variable defined in line 8.
	In this code, <i>numsamples</i> contains the number of waveform points, not the number of bytes. Because it takes four bytes of data, two I bytes and two Q bytes, to create one waveform point, we have to multiply <i>numsamples</i> by four. This is shown in the following example:
	numsamples = 500 waveform points numsamples x 4 = 2000 (four bytes per point) bytesToSend = 2000 (numsamples x 4)
	For information on setting the number of waveform points, see "1. Create I and Q data." on page 235.
10	Create a string large enough to hold the <i>bytesToSend</i> value as characters. In this code, string s is set to 20 bytes (20 characters—one character equals one byte)
11	Create a string and set its length (cmd[200]) to hold the SCPI command syntax and parameters. In this code, we define the string length as 200 bytes (200 characters).
12	Store the value of bytesToSend in string s. For example, if bytesToSend = 2000; s = "2000"
	sprintf() is a standard function in C++, which writes string data to a string variable.
13	Store the SCPI command syntax and parameters in the string cmd . The SCPI command prepares the signal generator to accept the data.
	- strlen() is a standard function in C++, which returns length of a string.
	If bytesToSend = 2000, then s = "2000", strlen(s) = 4, socmd = :MEM:DATA "WFM1:FILE1\" #42000.
14	Send the SCPI command stored in the string <i>cmd</i> to the signal generator, which is represented by the session <i>id</i> .
	 iwrite() is a SICL function in Keysight IO library, which writes the data (block data) specified in the string cmd to the signal generator (id).
	 The third argument of iwrite(), strlen(cmd), informs the signal generator of the number of bytes in the command string. The signal generator parses the string to determine the number of I/Q data bytes it expects to receive.
	 The fourth argument of iwrite(), 0, means there is no END of file indicator for the string. This lets the session remain open, so the program can download the I/Q data.
15	Send the generated waveform data stored in the I/Q array (iqbuffer) to the signal generator.
	 iwrite() sends the data specified in iqbuffer to the signal generator (session identifier specified in id).
	 The third argument of iwrite(), bytesToSend, contains the length of the iqbuffer in bytes. In this example, it is 2000.
	- The fourth argument of <i>iwrite()</i> , 0, means there is no END of file indicator in the data.
	In many programming languages, there are two methods to send SCPI commands and data:
	 Method 1 where the program stops the data download when it encounters the first zero (END indicator) in the data.
	 Method 2 where the program sends a fixed number of bytes and ignores any zeros in the data. This is the method used in our program.
	For your programming language, you must find and use the equivalent of method two. Otherwise you may only achieve a partial download of the I and Q data.

Creating and Downloading Waveform Files Downloading Waveform Data

Line	Code Description-Download the I/Q data	
16	Send the terminating carriage (\n) as the last byte of the waveform data.	
	- iwrite() writes the data "\n" to the signal generator (session identifier specified in id).	
	— The third argument of <i>iwrite()</i> , 1, sends one byte to the signal generator.	
	 The fourth argument of iwrite(), 1, is the END of file indicator, which the program uses to terminate the data download. 	
	To verify the waveform data download, see "Loading, Playing, and Verifying a Downloaded Waveform" on page 247.	

Loading, Playing, and Verifying a Downloaded Waveform

The following procedures show how to perform the steps using SCPI commands. For front panel key commands, refer to the User's Guide or to the Key help in the signal generator.

Loading a File from Non-Volatile Memory

Select the downloaded I/Q file in non-volatile (NVWFM) and load it into volatile (WFM1). The file comprises three items: I/Q data, marker file, and file header information.

Send one of the following SCPI command to copy the I/Q file, marker file and file header information:

```
:MEMory:COPY:NAME "<NVWFM:file_name>","<WFM1:file_name>"
:MEMory:COPY:NAME "<NVMKR:file_name>","<MKR1:file_name>"
:MEMory:COPY:NAME "<NVHDR:file_name>","<HDR:file_name>"
```

NOTE

When you copy a waveform file, marker file, or header file information from volatile or non-volatile memory, the waveform and associated marker and header files are all copied. Conversely, when you delete an I/Q file, the associated marker and header files are deleted. It is not necessary to send separate commands to copy or delete the marker and header files.

Playing the Waveform

NOTE

If you would like to build and play a waveform sequence, refer to "Building and Playing Waveform Sequences" on page 248.

Play the waveform and use it to modulate the RF carrier.

1. List the waveform files from the volatile memory waveform list:

Send the following SCPI command:

```
:MMEMory:CATalog? "WFM1:"
```

2. Select the waveform from the volatile memory waveform list:

Send the following SCPI command:

```
:SOURce:RADio:ARB:WAVeform "WFM1:<file name>"
```

3. Play the waveform:

Send the following SCPI commands:


```
:SOURce:RADio:ARB:STATe ON :OUTPut:MODulation:STATe ON
```

:OUTPut:STATe ON

Verifying the Waveform

Perform this procedure after completing the steps in the previous procedure, "Playing the Waveform" on page 247.

1. Connect the signal generator to an oscilloscope as shown in the figure.

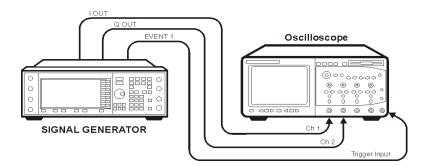

2. Set an active marker point on the first waveform point for marker one.

NOTE

Select the same waveform selected in "Playing the Waveform" on page 247.

Send the following SCPI commands:

```
:SOURce:RADio:ARB:MARKer:CLEar:ALL "WFM1:<file_name>",1
:SOURce:RADio:ARB:MARKer:SET "WFM1:<file_name>",1,1,1,0.
```

3. Compare the oscilloscope display to the plot of the I and Q data from the text file you created when you generated the data.

If the oscilloscope display, and the I and Q data plots differ, recheck your code. For detailed information on programmatically creating and downloading waveform data, see "Creating Waveform Data" on page 235 and "Downloading Waveform Data" on page 241. For information on the waveform data requirements, see "Waveform Data Requirements" on page 205.

Building and Playing Waveform Sequences

The signal generator can be used to build waveform sequences. This section assumes you have created the waveform segment file(s) and have the waveform segment file(s) in volatile memory. The following SCPI commands can be used to generate and work with a waveform sequence. For more information refer to the signal generator's SCPI Command Reference and User's Guide.

NOTE

If you would like to verify the waveform sequence, refer to "Verifying the Waveform" on page 248.

1. List the waveform files from the volatile memory waveform list:

Send the following SCPI command:

```
:MMEMory:CATalog? "WFM1:"
```

2. Select the waveform segment file(s) from the volatile memory waveform list:

Send the following SCPI command:

```
:SOURce:RADio:ARB:WAVeform "WFM1:<file_name>"
```

3. Save the waveform segment(s) ("<waveform1>", "<waveform2>", ...), to non-volatile memory as a waveform sequence ("<file_name>"), define the number of repetitions (<reps>), each waveform segment plays, and enable/disable markers (M1 | M2 | M3 | M4 | ...), for each waveform segment:

Send the following SCPI command:

```
:SOURce:RADio:ARB:SEQuence
"<file_name>","<waveform1>",<reps>,M1|M2|M3|M4,{"<waveform
2>",<reps>,ALL}

:SOURce:RADio:ARB:SEQuence? "<file_name>"
```

NOTE

 $M1 \mid M2 \mid M3 \mid M4$ represent the number parameter of the marker selected (i.e. $1 \mid 2 \mid 3 \mid 4$). Entering $M1 \mid M2 \mid M3 \mid M4$ causes the signal generator to display an error. For more information on this SCPI command, refer to the signal generator's SCPI Command Reference.

4. Play the waveform sequence:

Send the following SCPI commands:

```
:SOURce:RADio:ARB:STATe ON
:OUTPut:MODulation:STATe ON
```

:OUTPut:STATe ON

Using the Download Utilities

Keysight provides free download utilities to download waveform data into the signal generator. The table in this section describes the capabilities of three such utilities.

For more information and to install the utilities, refer to the following URLs:

Keysight Signal Studio Toolkit 2: http://www.keysight.com/find/signalstudio

This software provides a graphical interface for downloading files.

Keysight Waveform Download Assistant:
 http://www.keysight.com/find/downloadassistant

This software provides functions for the MATLAB environment to download waveform data.

Table 5-13

Features	Keysight Signal Studio Toolkit 2	Keysight Waveform Download Assistant
Downloads encrypted waveform files	Х	
Downloads complex MATLAB waveform data		Х
Downloads MATLAB files (.mat)	Х	
Downloads unencrypted interleaved 16-bit I/Q files ^a	Х	
Interleaves and downloads earlier 14-bit E443xB I and Q files	Х	
Swaps bytes for little endian order		
Manually select big endian byte order for 14-bit and 16-bit I/Q files	Х	
Downloads user-created marker files	X	Х
Performs scaling	Х	Х
Starts waveform play back	Х	Х
Sends SCPI Commands and Queries	Х	Х
Builds a waveform sequence	Х	Х

a. ASCII or binary format.

Creating and Downloading Waveform Files Downloading E443xB Signal Generator Files

Downloading E443xB Signal Generator Files


To download earlier E443xB model I and Q files, use the same SCPI commands as if downloading files to an E443xB signal generator. The signal generator automatically converts the E443xB files to the proper file format as described in "Waveform Structure" on page 214 and stores them in the signal generator's memory. This conversion process causes the signal generator to take more time to download the earlier file format. To minimize the time to convert earlier E443xB files to the proper file format, store E443xB file downloads to volatile memory, and then transfer them over to non–volatile (NVWFM) memory.

NOTE

You cannot extract waveform data downloaded as E443xB files.

E443xB Data Format

The following diagram describes the data format for the E443xB waveform files. This file structure can be compared with the new style file format shown in "Waveform Structure" on page 214. If you create new waveform files for the signal generator, use the format shown in "Waveform Data Requirements" on page 205.

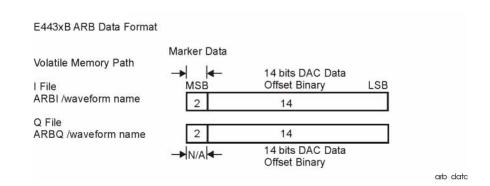

SCPI Commands

Use the following commands to download E443xB waveform files into the signal generator.

NOTE

To avoid overwriting the current waveform in volatile memory, before downloading files into volatile memory (WFM1), change the file name or turn off the ARB. For more information, on manually turning off the ARB, refer to the User's Guide.

To turn off the ARB remotely, send: :SOURce:RADio:ARB:STATe OFF.

Extraction Method/ Memory Type	Command Syntax Options
SCPI/ volatile memory	:MMEM:DATA "ARBI: <file_name>", <i block="" data="" waveform=""> :MMEM:DATA "ARBQ:<file_name>", <q data="" waveform=""></q></file_name></i></file_name>
SCPI/ non-volatile memory	:MMEM:DATA "NVARBI: <file_name>", <i block="" data="" waveform=""> :MMEM:DATA "NVARBQ:<file_name>", <q block="" data="" waveform=""></q></file_name></i></file_name>

The variables <I waveform block data > and <Q waveform block data > represents data in the E443xB file format. The string variable <file_name > is the name of the I and Q data file. After downloading the data, the signal generator associates a file header and marker file with the I/Q data file.

Programming Examples

NOTE

The programming examples contain instrument–specific information. However, users can still use these programming examples by substituting in the instrument–specific information for your signal generator. Model specific exceptions for programming use will be noted at the top of each programming section.

The programming examples use GPIB or LAN interfaces and are written in the following languages:

- C++ (page 254)
- MATLAB (page 284)
- Visual Basic (page 301)
- HP Basic (page 308)

See Chapter 2 of this programming guide for information on interfaces and IO libraries.

The example programs are also available on the signal generator **Documentation CD-ROM**, which allows you to cut and paste the examples into an editor.

C++ Programming Examples

This section contains the following programming examples:

- "Creating and Storing Offset I/Q Data—Big and Little Endian Order" on page 254
- "Creating and Storing I/Q Data-Little Endian Order" on page 260
- "Creating and Downloading I/Q Data—Big and Little Endian Order" on page 262
- "Importing and Downloading I/Q Data-Big Endian Order" on page 267
- "Importing and Downloading Using VISA-Big Endian Order" on page 269
- "Importing, Byte Swapping, Interleaving, and Downloading I and Q Data— Big and Little Endian Order" on page 275
- "Calculating the RMS Voltage for a Waveform Programming Using C++" on page 283

Creating and Storing Offset I/Q Data—Big and Little Endian Order

On the documentation CD, this programming example's name is "offset_iq_c++.txt."

This C++ programming example (compiled using Microsoft Visual C++ 6.0) follows the same coding algorithm as the MATLAB programming example "Creating and Storing I/Q Data" on page 284 and performs the following functions:

- error checking
- data creation
- data normalization
- data scaling
- I/Q signal offset from the carrier (single sideband suppressed carrier signal)
- byte swapping and interleaving for little endian order data
- I and Q interleaving for big endian order data
- binary data file storing to a PC or workstation
- reversal of the data formatting process (byte swapping, interleaving, and normalizing the data)

After creating the binary file, you can use FTP, one of the download utilities, or one of the C++ download programming examples to download the file to the signal generator.

```
// This C++ example shows how to
// 1.) Create a simple IQ waveform
// 2.) Save the waveform into the ESG/PSG Internal Arb format
// This format is for the E4438C, E8267C, E8267D
// This format will not work with the ESG E443xB or the
Keysight MXG N518xA
// 3.) Load the internal Arb format file into an array
```

```
#include <stdio.h>
#include <string.h>
#include <math.h>
const int POINTS = 1000; // Size of waveform
const char *computer = "PCWIN";
int main(int argc, char* argv[])
{
// 1.) Create Simple IQ Signal ******************************
     // This signal is a single tone on the upper
     // side of the carrier and is usually refered to as
     // a Single Side Band Suppressed Carrier (SSBSC) signal.
     // It is nothing more than a cosine wavefomm in I
     // and a sine waveform in Q.
     int points = POINTS; // Number of points in the waveform
     int cycles = 101; // Determines the frequency offset from the
carrier
     double Iwave[POINTS]; // I waveform
     double Qwave[POINTS]; // Q waveform
     short int waveform[2*POINTS]; // Holds interleaved I/Q data
     double maxAmp = 0; // Used to Normalize waveform data
     double minAmp = 0; // Used to Normalize waveform data
     double scale = 1;
     char buf; // Used for byte swapping
     char *pChar; // Used for byte swapping
     bool PC = true; // Set flag as appropriate
     double phaseInc = 2.0 * 3.141592654 * cycles / points;
     double phase = 0;
     int i = 0;
```

```
for( i=0; i<points; i++ )</pre>
     {
       phase = i * phaseInc;
       Iwave[i] = cos(phase);
       Qwave[i] = sin(phase);
     }
     // 2.) Save waveform in internal format ****************
     // Convert the I and Q data into the internal arb format
     // The internal arb format is a single waveform containing
interleaved IQ
     // data. The I/Q data is signed short integers (16 bits).
   // The data has values scaled between +-32767 where
          DAC Value Description
     //
     //
           32767 Maximum positive value of the DAC
                      Zero out of the DAC
     //
               0
          -32767
                      Maximum negative value of the DAC
     // The internal arb expects the data bytes to be in Big Endian
format.
     // This is opposite of how short integers are saved on a PC
(Little Endian).
   // For this reason the data bytes are swapped before being saved.
     // Find the Maximum amplitude in I and Q to normalize the data
between +-1
     maxAmp = Iwave[0];
     minAmp = Iwave[0];
   for( i=0; i<points; i++)</pre>
     {
       if( maxAmp < Iwave[i] )</pre>
        maxAmp = Iwave[i];
        else if( minAmp > Iwave[i] )
           minAmp = Iwave[i];
       if( maxAmp < Qwave[i] )</pre>
```

```
maxAmp = Qwave[i];
       else if( minAmp > Qwave[i] )
         minAmp = Qwave[i];
     }
   maxAmp = fabs(maxAmp);
     minAmp = fabs(minAmp);
     if( minAmp > maxAmp )
       maxAmp = minAmp;
     // Convert to short integers and interleave I/Q data
     scale = 32767 / maxAmp; // Watch out for divide by zero.
     for( i=0; i<points; i++)</pre>
       waveform[2*i] = (short)floor(Iwave[i]*scale + 0.5);
       waveform[2*i+1] = (short)floor(Qwave[i]*scale + 0.5);
     }
     // If on a PC swap the bytes to Big Endian
     if( strcmp(computer,"PCWIN") == 0 )
 //if( PC )
     {
       pChar = (char *)&waveform[0]; // Character pointer to short
int data
       for( i=0; i<2*points; i++ )</pre>
       {
          buf = *pChar;
          *pChar = *(pChar+1);
          *(pChar+1) = buf;
          pChar+= 2;
        }
     }
 // Save the data to a file
 // Use FTP or one of the download assistants to download the file
to the
 // signal generator
     char *filename = "C:\\Temp\\PSGTestFile";
```

```
FILE *stream = NULL;
     stream = fopen(filename, "w+b");// Open the file
 if (stream==NULL) perror ("Cannot Open File");
     int numwritten = fwrite( (void *)waveform, sizeof( short ),
points*2, stream );
 fclose(stream);// Close the file
     // 3.) Load the internal Arb format file ********************
     // This process is just the reverse of saving the waveform
     // Read in waveform as unsigned short integers.
     // Swap the bytes as necessary
     // Normalize between +-1
     // De-interleave the I/Q Data
     // Open the file and load the internal format data
     stream = fopen(filename, "r+b");// Open the file
     if (stream==NULL) perror ("Cannot Open File");
     int numread = fread( (void *)waveform, sizeof( short ),
points*2, stream );
 fclose(stream);// Close the file
   // If on a PC swap the bytes back to Little Endian
     if( strcmp(computer,"PCWIN") == 0 )
  {
     pChar = (char *)&waveform[0]; // Character pointer to short
int data
     for( i=0; i<2*points; i++ )</pre>
     {
        buf = *pChar;
        *pChar = *(pChar+1);
        *(pChar+1) = buf;
        pChar+= 2;
     }
     // Normalize De-Interleave the IQ data
     double IwaveIn[POINTS];
     double QwaveIn[POINTS];
```

Creating and Downloading Waveform Files Programming Examples

```
for( i=0; i<points; i++)
{
          IwaveIn[i] = waveform[2*i] / 32767.0;
          QwaveIn[i] = waveform[2*i+1] / 32767.0;
}
return 0;
}</pre>
```

Creating and Storing I/Q Data-Little Endian Order

On the documentation CD, this programming example's name is "CreateStore_Data_c++.txt."

This C++ programming example (compiled using Metrowerks CodeWarrior 3.0) performs the following functions:

- error checking
- data creation
- byte swapping and interleaving for little endian order data
- binary data file storing to a PC or workstation

After creating the binary file, you can use FTP, one of the download utilities, or one of the C++ download programming examples to download the file to the signal generator.

```
#include <iostream>
#include <fstream>
#include <math.h>
#include <stdlib.h>
using namespace std;
int main ( void )
   ofstream out_stream; // write the I/Q data to a file
    const unsigned int SAMPLES =200; // number of sample pairs in
the waveform
   const short AMPLITUDE = 32000; // amplitude between 0 and
full scale dac value
   const double two_pi = 6.2831853;
    //allocate buffer for waveform
    short* iqData = new short[2*SAMPLES];// need two bytes for each
integer
   if (!iqData)
    {
       cout << "Could not allocate data buffer." << endl;</pre>
       return 1;
    }
```

```
out_stream.open("IQ_data");// create a data file
    if (out stream.fail())
      cout << "Input file opening failed" << endl;</pre>
      exit(1);
    }
    //generate the sample data for I and Q. The I channel will have
a sine
    //wave and the Q channel will a cosine wave.
    for (int i=0; i<SAMPLES; ++i)</pre>
    {
        iqData[2*i] = AMPLITUDE * sin(two_pi*i/(float)SAMPLES);
        iqData[2*i+1] = AMPLITUDE * cos(two_pi*i/(float)SAMPLES);
    }
   // make sure bytes are in the order MSB(most significant byte)
first. (PC only).
    char* cptr = (char*)iqData;// cast the integer values to
characters
    for (int i=0; i<(4*SAMPLES); i+=2)// 4*SAMPLES
    {
        char temp = cptr[i];// swap LSB and MSB bytes
        cptr[i]=cptr[i+1];
        cptr[i+1]=temp;
    }
    // now write the buffer to a file
        out_stream.write((char*)iqData, 4*SAMPLES);
return 0;
}
```

Creating and Downloading I/Q Data-Big and Little Endian Order

On the documentation CD, this programming example's name is "CreateDwnLd Data c++.txt."

This C++ programming example (compiled using Microsoft Visual C++ 6.0) performs the following functions:

- error checking
- data creation
- data scaling
- text file creation for viewing and debugging data
- byte swapping and interleaving for little endian order data
- interleaving for big endian order data
- data saving to an array (data block)
- data block download to the signal generator

```
// This C++ program is an example of creating and scaling
// I and Q data, and then downloading the data into the
// signal generator as an interleaved I/Q file.
// This example uses a sine and cosine wave as the I/Q
// data.
//
// Include the standard headers for SICL programming
#include <sicl.h>
#include <stdlib.h>
#include <stdio.h>
#include <string.h>
#include <math.h>
// Choose a GPIB, LAN, or RS-232 connection
char* instOpenString ="lan[galqaDhcp1]";
//char* instOpenString ="gpib0,19";
// Pick some maximum number of samples, based on the
// amount of memory in your computer and the signal generator.
const int NUMSAMPLES=500;
int main(int argc, char* argv[])
```

```
{
     // Create a text file to view the waveform
     // prior to downloading it to the signal generator.
     // This verifies that the data looks correct.
    char *ofile = "c:\\temp\\iq.txt";
    // Create arrays to hold the I and Q data
    int idata[NUMSAMPLES];
    int qdata[NUMSAMPLES];
    // save the number of sampes into numsamples
    int numsamples = NUMSAMPLES;
    // Fill the I and Q buffers with the sample data
    for(int index=0; index<numsamples; index++)</pre>
    {
        // Create the I and Q data for the number of waveform
        // points and Scale the data (20000 * ...) as a precentage
        // of the DAC full scale (-32768 to 32767). This example
        // scales to approximately 70% of full scale.
        idata[index]=23000 * sin((4*3.14*index)/numsamples);
        qdata[index]=23000 * cos((4*3.14*index)/numsamples);
    }
    // Print the I and Q values to a text file. View the data
    // to see if its correct and if needed, plot the data in a
    // spreadsheet to help spot any problems.
    FILE *outfile = fopen(ofile, "w");
    if (outfile==NULL) perror ("Error opening file to write");
    for(index=0; index<numsamples; index++)</pre>
    {
```

```
fprintf(outfile, "%d, %d\n", idata[index], qdata[index]);
   }
   fclose(outfile);
   // Little endian order data, use the character array and for
loop.
   // If big endian order, comment out this character array and for
loop,
   // and use the next loop (Big Endian order data).
   // We need a buffer to interleave the I and Q data.
   // 4 bytes to account for 2 I bytes and 2 Q bytes.
   char igbuffer[NUMSAMPLES*4];
   // Interleave I and Q, and swap bytes from little
    // endian order to big endian order.
    for(index=0; index<numsamples; index++)</pre>
   {
       int ivalue = idata[index];
       int qvalue = qdata[index];
       iqbuffer[index*4] = (ivalue >> 8) & 0xFF; // high byte of i
      iqbuffer[index*4+1] = ivalue & 0xFF;  // low byte of i
       iqbuffer[index*4+2] = (qvalue >> 8) & 0xFF; // high byte of q
       iqbuffer[index*4+3] = qvalue & 0xFF;  // low byte of q
   }
   // Big Endian order data, uncomment the following lines of code.
   // Interleave the I and Q data.
   // short iqbuffer[NUMSAMPLES*2]; // Big endian order,
uncomment this line
   // for(index=0; index<numsamples; index++) // Big endian order,</pre>
uncomment this line
                                               // Big endian order,
   // {
uncomment this line
```

```
iqbuffer[index*2] = idata[index]; // Big endian order,
uncomment this line
          iqbuffer[index*2+1] = qdata[index]; // Big endian order,
uncomment this line
                                              // Big endian order,
   // }
uncomment this line
   // Open a connection to write to the instrument
   INST id=iopen(instOpenString);
   if (!id)
   {
       fprintf(stderr, "iopen failed (%s)\n", instOpenString);
       return -1;
   }
   // Declare variables to hold portions of the SCPI command
   int bytesToSend;
   char s[20];
   char cmd[200];
   bytesToSend = numsamples*4;  // calculate the number of
bytes
    sprintf(s, "%d", bytesToSend); // create a string s with that
number of bytes
   // The SCPI command has four parts.
       Part 1 = :MEM:DATA "filename",#
   //
       Part 2 = length of Part 3 when written to a string
        Part 3 = length of the data in bytes. This is in s from
   //
above.
        Part 4 = the buffer of data
    //
   // Build parts 1, 2, and 3 for the I and Q data.
   sprintf(cmd, ":MEM:DATA \"WFM1:FILE1\", #%d%d", strlen(s),
bytesToSend);
   // Send parts 1, 2, and 3
```

```
iwrite(id, cmd, strlen(cmd), 0, 0);
   // Send part 4. Be careful to use the correct command here. In
many
    // programming languages, there are two methods to send SCPI
commands:
        Method 1 = stop at the first '0' in the data
    //
        Method 2 = send a fixed number of bytes, ignoring '0' in the
data.
    // You must find and use the correct command for Method 2.
    iwrite(id, iqbuffer, bytesToSend, 0, 0);
    // Send a terminating carriage return
    iwrite(id, "\n", 1, 1, 0);
    printf("Loaded file using the E4438C, E8267C and E8267D
format\n");
    return 0;
}
```

Importing and Downloading I/Q Data-Big Endian Order

On the documentation CD, this programming example's name is "impDwnLd_c++.txt."

This C++ programming example (compiled using Metrowerks CodeWarrier 3.0) assumes that the data is in big endian order and performs the following functions:

- error checking
- binary file importing from the PC or workstation.
- binary file download to the signal generator.

```
// Description: Send a file in blocks of data to a signal generator
//
#include <sicl.h>
#include <stdlib.h>
#include <stdio.h>
#include <string.h>
// ATTENTION:
// - Configure these three lines appropriately for your instrument
     and use before compiling and running
//
char* instOpenString = "gpib7,19"; //for LAN replace with
"lan[<hostname or IP address>]"
const char* localSrcFile = "D:\\home\\TEST WAVE"; //enter file
location on PC/workstation
const char* instDestFile = "/USER/BBG1/WAVEFORM/TEST_WAVE"; //for
non-volatile memory
 //remove BBG1 from file path
// Size of the copy buffer
const int BUFFER_SIZE = 100*1024;
int
main()
{
    INST id=iopen(instOpenString);
    if (!id)
```

```
{
    fprintf(stderr, "iopen failed (%s)\n", instOpenString);
    return -1;
}
FILE* file = fopen(localSrcFile, "rb");
if (!file)
{
    fprintf(stderr, "Could not open file: %s\n", localSrcFile);
    return 0;
}
if( fseek( file, 0, SEEK_END ) < 0 )</pre>
{
    fprintf(stderr, "Cannot seek to the end of file.\n" );
    return 0;
}
long lenToSend = ftell(file);
printf("File size = %d\n", lenToSend);
if (fseek(file, 0, SEEK_SET) < 0)</pre>
{
    fprintf(stderr, "Cannot seek to the start of file.\n");
    return 0;
}
char* buf = new char[BUFFER_SIZE];
if (buf && lenToSend)
{
    // Prepare and send the SCPI command header
    char s[20];
    sprintf(s, "%d", lenToSend);
    int lenLen = strlen(s);
```

```
char s2[256];
       sprintf(s2, "mmem:data \"%s\", #%d%d", instDestFile, lenLen,
lenToSend);
        iwrite(id, s2, strlen(s2), 0, 0);
        // Send file in BUFFER SIZE chunks
        long numRead;
        do
        {
            numRead = fread(buf, sizeof(char), BUFFER SIZE, file);
            iwrite(id, buf, numRead, 0, 0);
        } while (numRead == BUFFER SIZE);
        // Send the terminating newline and EOM
        iwrite(id, "\n", 1, 1, 0);
        delete [] buf;
    }
    else
    {
        fprintf(stderr, "Could not allocate memory for copy
buffer\n");
    }
    fclose(file);
    iclose(id);
    return 0;
}
```

Importing and Downloading Using VISA-Big Endian Order

On the documentation CD, this programming example's name is "DownLoad_Visa_c++.txt."

This C++ programming example (compiled using Microsoft Visual C++ 6.0) assumes that the data is in big endian order and performs the following functions:

- error checking

- binary file importing from the PC or workstation
- binary file download to the signal generator's non-volatile memory

To load the waveform data to volatile (WFM1) memory, change the instDestfile declaration to: "USER/BBG1/WAVEFORM/".

```
// PROGRAM NAME:Download_Visa_c++.cpp
// PROGRAM DESCRIPTION:Sample test program to download ARB waveform
data. Send a
// file in chunks of ascii data to the signal generator.
//
// NOTE: You must have the Keysight IO Libraries installed to run
this program.
//
// This example uses the LAN/TCPIP to download a file to the signal
generator's
// non-volatile memory. The program allocates a memory buffer on the
// workstation of 102400 bytes (100*1024 bytes). The actual size of
the buffer is
// limited by the memory on your PC or workstation, so the buffer
size can be
// increased or decreased to meet your system limitations.
//
// While this program uses the LAN/TCPIP to download a waveform file
// non-volatile memory, it can be modified to store files in
volatile memory
// WFM1 using GPIB by setting the instrOpenString =
"TCPIP0::xxx.xxx.xxx.xxx::INSTR"
// declaration with "GPIB::19::INSTR"
//
// The program also includes some error checking to alert you when
problems arise
// while trying to download files. This includes checking to see if
the file exists.
// IMPORTANT: Replace the xxx.xxx.xxx IP address in the
instOpenString declaration
```

```
// in the code below with the IP address of your signal generator.
(or you can use the
// instrument's hostname). Replace the localSrcFile and instDestFile
directory paths
// as needed.
#include <stdlib.h>
#include <stdio.h>
#include <string.h>
#include "visa.h"
//
// IMPORTANT:
// Configure the following three lines correctly before compiling
and running
char* instOpenString ="TCPIP0::xxx.xxx.xxx.xxx::INSTR"; // your
instrument's IP address
const char* localSrcFile = "\\Files\\IQ_DataC";
const char* instDestFile = "/USER/WAVEFORM/IQ_DataC";
const int BUFFER SIZE = 100*1024;// Size of the copy buffer
int main(int argc, char* argv[])
{
   ViSession defaultRM, vi;
   ViStatus status = 0;
   status = viOpenDefaultRM(&defaultRM);// Open the default
resource manager
   // TO DO: Error handling here
```

```
status = viOpen(defaultRM, instOpenString, VI_NULL, VI_NULL,
&vi);
    if (status)// If any errors then display the error and exit the
program
    {
        fprintf(stderr, "viOpen failed (%s)\n", instOpenString);
   return -1;
    }
    FILE* file = fopen(localSrcFile, "rb");// Open local source file
for binary reading
    if (!file) // If any errors display the error and exit the
program
    {
        fprintf(stderr, "Could not open file: %s\n", localSrcFile);
   return 0;
    }
    if( fseek( file, 0, SEEK END ) < 0 )</pre>
    {
        fprintf(stderr, "Cannot lseek to the end of file.\n" );
        return 0;
    }
    long lenToSend = ftell(file);// Number of bytes in the file
    printf("File size = %d\n", lenToSend);
    if (fseek(file, 0, SEEK_SET) < 0)</pre>
    {
        fprintf(stderr, "Cannot lseek to the start of file.\n");
        return 0;
    }
```

```
unsigned char* buf = new unsigned char[BUFFER_SIZE]; // Allocate
char buffer memory
   if (buf && lenToSend)
    {
       // Do not send the EOI (end of instruction) terminator on any
write except the
        // last one
        viSetAttribute( vi, VI ATTR SEND END EN, 0 );
        // Prepare and send the SCPI command header
        char s[20];
        sprintf(s, "%d", lenToSend);
        int lenLen = strlen(s);
        unsigned char s2[256];
   // Write the command mmem:data and the header.The number lenLen
represents the
   // number of bytes and the actual number of bytes is the variable
lenToSend
       sprintf((char*)s2, "mmem:data \"%s\", #%d%d", instDestFile,
lenLen, lenToSend);
   // Send the command and header to the signal generator
        viWrite(vi, s2, strlen((char*)s2), 0);
        long numRead;
   // Send file in BUFFER_SIZE chunks to the signal generator
```

```
do
        {
            numRead = fread(buf, sizeof(char), BUFFER_SIZE, file);
            viWrite(vi, buf, numRead, 0);
        } while (numRead == BUFFER_SIZE);
        // Send the terminating newline and EOI
        viSetAttribute( vi, VI_ATTR_SEND_END_EN, 1 );
        char* newLine = "\n";
        viWrite(vi, (unsigned char*)newLine, 1, 0);
        delete [] buf;
    }
    else
    {
        fprintf(stderr, "Could not allocate memory for copy
buffer\n");
    }
    fclose(file);
    viClose(vi);
    viClose(defaultRM);
    return 0;
}
```

Importing, Byte Swapping, Interleaving, and Downloading I and Q Data—Big and Little Endian Order

On the documentation CD, this programming example's name is "impDwnLd2_c++.txt."

This C++ programming example (compiled using Microsoft Visual C++ 6.0) performs the following functions:

- error checking
- binary file importing (earlier E443xB or current model signal generators)
- byte swapping and interleaving for little endian order data
- data interleaving for big endian order data
- data scaling
- binary file download for earlier E443xB data or current signal generator formatted data

```
// This C++ program is an example of loading I and Q
// data into an E443xB, E4438C, E8267C, or E8267D signal
// generator.
//
// It reads the I and Q data from a binary data file
// and then writes the data to the instrument.
// Include the standard headers for SICL programming
#include <sicl.h>
#include <stdlib.h>
#include <stdio.h>
#include <string.h>
// Choose a GPIB, LAN, or RS-232 connection
char* instOpenString ="gpib0,19";
// Pick some maximum number of samples, based on the
// amount of memory in your computer and your waveforms.
const int MAXSAMPLES=50000;
int main(int argc, char* argv[])
```

```
{
   // These are the I and Q input files.
   // Some compilers will allow '/' in the directory
   // names. Older compilers might need '\\' in the
   // directory names. It depends on your operating system
    // and compiler.
    char *ifile = "c:\\SignalGenerator\\data\\BurstA1I.bin";
    char *qfile = "c:\\SignalGenerator\\data\\BurstA1Q.bin";
   // This is a text file to which we will write the
   // I and Q data just for debugging purposes. It is
   // a good programming practice to check your data
   // in this way before attempting to write it to
   // the instrument.
    char *ofile = "c:\\SignalGenerator\\data\\iq.txt";
   // Create arrays to hold the I and Q data
    int idata[MAXSAMPLES];
    int qdata[MAXSAMPLES];
   // Often we must modify, scale, or offset the data
   // before loading it into the instrument. These
   // buffers are used for that purpose. Since each
   // sample is 16 bits, and a character only holds
   // 8 bits, we must make these arrays twice as long
    // as the I and Q data arrays.
    char ibuffer[MAXSAMPLES*2];
    char qbuffer[MAXSAMPLES*2];
   // For the E4438C or E8267C/67D, we might also need to interleave
   // the I and Q data. This buffer is used for that
   // purpose. In this case, this buffer must hold
   // both I and Q data so it needs to be four times
   // as big as the data arrays.
```

```
char igbuffer[MAXSAMPLES*4];
// Declare variables which will be used later
bool done;
FILE *infile;
int index, numsamples, i1, i2, ivalue;
// In this example, we'll assume the data files have
// the I and Q data in binary form as unsigned 16 bit integers.
// This next block reads those binary files. If your
// data is in some other format, then replace this block
// with appropriate code for reading your format.
// First read I values
done = false;
index = 0;
infile = fopen(ifile, "rb");
if (infile==NULL) perror ("Error opening file to read");
while(!done)
{
    i1 = fgetc(infile); // read the first byte
    if(i1==EOF) break;
    i2 = fgetc(infile); // read the next byte
    if(i2==EOF) break;
    ivalue=i1+i2*256;  // put the two bytes together
    // note that the above format is for a little endian
    // processor such as Intel. Reverse the order for
    // a big endian processor such as Motorola, HP, or Sun
    idata[index++]=ivalue;
    if(index==MAXSAMPLES) break;
}
fclose(infile);
// Then read Q values
index = 0;
```

```
infile = fopen(qfile, "rb");
if (infile==NULL) perror ("Error opening file to read");
while(!done)
{
    i1 = fgetc(infile); // read the first byte
    if(i1==EOF) break;
    i2 = fgetc(infile); // read the next byte
    if(i2==EOF) break;
    ivalue=i1+i2*256; // put the two bytes together
    // note that the above format is for a little endian
    // processor such as Intel. Reverse the order for
    // a big endian processor such as Motorola, HP, or Sun
    qdata[index++]=ivalue;
    if(index==MAXSAMPLES) break;
}
fclose(infile);
// Remember the number of samples which were read from the file.
numsamples = index;
// Print the I and Q values to a text file. If you are
// having trouble, look in the file and see if your I and
// Q data looks correct. Plot the data from this file if
// that helps you to diagnose the problem.
FILE *outfile = fopen(ofile, "w");
if (outfile==NULL) perror ("Error opening file to write");
for(index=0; index<numsamples; index++)</pre>
{
    fprintf(outfile, "%d, %d\n", idata[index], qdata[index]);
}
fclose(outfile);
// The E443xB, E4438C, E8267C or E8267D all use big-endian
// processors. If your software is running on a little-endian
```

```
// processor such as Intel, then you will need to swap the
// bytes in the data before sending it to the signal generator.
// The arrays ibuffer and qbuffer are used to hold the data
// after any byte swapping, shifting or scaling.
// In this example, we'll assume that the data is in the format
// of the E443xB without markers. In other words, the data
// is in the range 0-16383.
// 0 gives negative full-scale output
// 8192 gives 0 V output
// 16383 gives positive full-scale output
// If this is not the scaling of your data, then you will need
// to scale your data appropriately in the next two blocks.
// ibuffer and gbuffer will hold the data in the E443xB format.
// No scaling is needed, however we need to swap the byte order
// on a little endian computer. Remove the byte swapping
// if you are using a big endian computer.
for(index=0; index<numsamples; index++)</pre>
{
   int ivalue = idata[index];
   int qvalue = qdata[index];
   ibuffer[index*2] = (ivalue >> 8) & 0xFF; // high byte of i
    ibuffer[index*2+1] = ivalue & 0xFF;
                                        // low byte of i
   qbuffer[index*2] = (qvalue >> 8) & 0xFF; // high byte of q
   }
// igbuffer will hold the data in the E4438C, E8267C, E8267D
// format. In this format, the I and Q data is interleaved.
// The data is in the range -32768 to 32767.
// -32768 gives negative full-scale output
         0 gives 0 V output
//
```

```
32767 gives positive full-scale output
   // From these ranges, it appears you should offset the
   // data by 8192 and scale it by 4. However, due to the
   // interpolators in these products, it is better to scale
   // the data by a number less than four. Commonly a good
   // choice is 70% of 4 which is 2.8.
   // By default, the signal generator scales data to 70%
   // If you scale the data here, you may want to change the
   // signal generator scaling to 100%
   // Also we need to swap the byte order on a little endian
   // computer. This code also works for big endian order data
   // since it swaps bytes based on the order.
   for(index=0; index<numsamples; index++)</pre>
   {
       int iscaled = 2.8*(idata[index]-8192); // shift and scale
       int gscaled = 2.8*(gdata[index]-8192); // shift and scale
       iqbuffer[index*4] = (iscaled >> 8) & 0xFF; // high byte of
i
      iqbuffer[index*4+2] = (qscaled >> 8) & 0xFF; // high byte of
q
       iqbuffer[index*4+3] = qscaled & 0xFF; // low byte of q
   }
   // Open a connection to write to the instrument
   INST id=iopen(instOpenString);
   if (!id)
   {
       fprintf(stderr, "iopen failed (%s)\n", instOpenString);
       return -1;
   }
   // Declare variables which will be used later
   int bytesToSend;
```

```
char s[20];
   char cmd[200];
   // The E4438C, E8267C and E8267D accept the E443xB format.
   // so we can use this next section on any of these signal
generators.
   // However the E443xB format only uses 14 bits.
   bytesToSend = numsamples*2;  // calculate the number of
bytes
    sprintf(s, "%d", bytesToSend); // create a string s with that
number of bytes
   // The SCPI command has four parts.
        Part 1 = :MEM:DATA "filename",
    //
        Part 2 = length of Part 3 when written to a string
   //
        Part 3 = length of the data in bytes. This is in s from
above.
        Part 4 = the buffer of data
   //
   // Build parts 1, 2, and 3 for the I data.
    sprintf(cmd, ":MEM:DATA \"ARBI:FILE1\", #%d%d", strlen(s),
bytesToSend);
   // Send parts 1, 2, and 3
   iwrite(id, cmd, strlen(cmd), 0, 0);
   // Send part 4. Be careful to use the correct command here. In
many
   // programming languages, there are two methods to send SCPI
commands:
        Method 1 = stop at the first '0' in the data
   //
       Method 2 = send a fixed number of bytes, ignoring '0' in the
data.
   // You must find and use the correct command for Method 2.
   iwrite(id, ibuffer, bytesToSend, 0, 0);
   // Send a terminating carriage return
    iwrite(id, "\n", 1, 1, 0);
```

```
// Identical to the section above, except for the Q data.
    sprintf(cmd, ":MEM:DATA \"ARBQ:FILE1\", #%d%d",
strlen(s),bytesToSend);
    iwrite(id, cmd, strlen(cmd), 0, 0);
    iwrite(id, qbuffer, bytesToSend, 0, 0);
    iwrite(id, "\n", 1, 1, 0);
    printf("Loaded FILE1 using the E443xB format\n");
   // The E4438C, E8267C and E8267D have a newer faster format which
   // allows 16 bits to be used. However this format is not
accepted in
   // the E443xB. Therefore do not use this next section for the
E443xB.
   printf("Note: Loading FILE2 on a E443xB will cause \"ERROR: 208,
I/0 error\"\n");
    // Identical to the I and Q sections above except
        a) The I and Q data are interleaved
    //
       b) The buffer of I+Q is twice as long as the I buffer was.
         c) The SCPI command uses WFM1 instead of ARBI and ARBQ.
    bytesToSend = numsamples*4;
    sprintf(s, "%d", bytesToSend);
       sprintf(cmd, ":mem:data \"WFM1:FILE2\", #%d%d",
strlen(s),bytesToSend);
    iwrite(id, cmd, strlen(cmd), 0, 0);
    iwrite(id, iqbuffer, bytesToSend, 0, 0);
    iwrite(id, "\n", 1, 1, 0);
    printf("Loaded FILE2 using the E4438C, E8267C and E8267D
format\n");
    return 0;
}
```

Calculating the RMS Voltage for a Waveform Programming Using C++

This example calculates the RMS voltage value of a waveform segment stored as 16-bit alternating I/Q twos complement DAC values. Refer to the User's Guide. This example is named: "calculate_rms_data_c++.txt" and is not included on the Documentation CD.

NOTE

For a short the value must be a 16 bit quantity.

For waveforms of 4 Gsa or more, samples must be an int64.

Internally, the MXG ignores two or more zeros in a row when calculating RMS voltage values.

There is no interface version of this example in the Programming Examples chapter.

```
#include <math.h>
#ifndef WIN32
typedef long long int int64;
typedef long long unsigned uint64;
#else // WIN32
typedef int64 int64;
typedef unsigned __int64 uint64;
#endif // WIN32
static const int NUM DAC BITS=16;
static const int DAC MAX=(1 << NUM DAC BITS);</pre>
//-----
// calculates the rms of a chunk of a waveform stored as 16-bit
alternating
// I/Q twos complement DAC values.
// NOTE: short must be a 16 bit quantity.
// Also NOTE: For 4Gsa or more, samples must be an int64.
double
calcRmsWaveformSegment(const signed short* iq data, unsigned
samples)
   // a double cannot hold the full number accurately for very long
waveforms
   // This type can handle up to (but not including) 8Gsa.
```

```
uint64 sum of squares accum = 0;
int ival;
int qval;
unsigned mag_squared;
double rmsDac;
unsigned i;
for (i=0; i<samples; i++)</pre>
{
    ival = (int)(iq_data[i*2]);
    qval = (int)(iq_data[i*2+1]);
   mag_squared = (unsigned)(ival*ival) + (unsigned)(qval*qval);
    sum of squares accum += mag squared;
}
// the rms in DAC counts (0 - 32768)
rmsDac = sqrt((double)sum of squares accum / (double)samples);
// convert to normalized form (0 - 1.414).
return rmsDac * 2.0/(double)(DAC MAX);
```

MATLAB Programming Examples

}

This section contains the following programming examples:

- "Creating and Storing I/Q Data" on page 284
- "Creating and Downloading a Pulse" on page 289
- "Downloading a Waveform, Markers, and Setting the Waveform Header" on page 291
- "Playing Downloaded Waveforms" on page 299

Creating and Storing I/Q Data

On the documentation CD, this programming example's name is "offset ig ml.m."

This MATLAB programming example follows the same coding algorithm as the C++ programming example "Creating and Storing Offset I/Q Data—Big and Little Endian Order" on page 254 and performs the following functions:

- error checking
- data creation
- data normalization
- data scaling
- I/Q signal offset from the carrier (single sideband suppressed carrier signal)

Creating and Downloading Waveform Files Programming Examples

- byte swapping and interleaving for little endian order data
- I and Q interleaving for big endian order data
- binary data file storing to a PC or workstation
- reversal of the data formatting process (byte swapping, interleaving, and normalizing the data)

```
function main
% Program name: offset_iq_ml
% Using MatLab this example shows how to
% 1.) Create a simple IQ waveform
% 2.) Save the waveform into the EXG/MXG Internal Arb format
      This format is for the N5182B
% 3.) Load the internal Arb format file into a MatLab array
% 1.) Create Simple IQ Signal
% This signal is a single tone on the upper
% side of the carrier and is usually refered to as
% a Single Side Band Suppressed Carrier (SSBSC) signal.
% It is nothing more than a cosine wavefomm in I
% and a sine waveform in Q.
carrier
phaseInc = 2*pi*cycles/points;
phase = phaseInc * [0:points-1];
Iwave = cos(phase);
Qwave = sin(phase);
```

% Alternate way to calculate the waveform RMS voltage

```
% rms = sqrt(sum(Iwave.*Iwave + Qwave*.Qwave)/points);
% 2.) Save waveform in internal format
% Convert the I and Q data into the internal arb format
% The internal arb format is a single waveform containing
interleaved IO
% data. The I/Q data is signed short integers (16 bits).
% The data has values scaled between +-32767 where
   DAC Value Description
             Maximum positive value of the DAC
    32767
              Zero out of the DAC
%
       0
             Maximum negative value of the DAC
% The internal arb expects the data bytes to be in Big Endian
% This is opposite of how short integers are saved on a PC (Little
Endian).
% For this reason the data bytes are swapped before being saved.
% Interleave the IQ data
waveform(1:2:2*points) = Iwave;
waveform(2:2:2*points) = Qwave;
%[Iwave;Qwave];
%waveform = waveform(:)';
% Normalize the data between +-1
by zero.
% Scale to use full range of the DAC
signed short integer values
% waveform = round(waveform * (32767 / max(abs(waveform))));
More efficient than previous two steps!
```

```
% PRESERVE THE BIT PATTERN but convert the waveform to
% unsigned short integers so the bytes can be swapped.
% Note: Can't swap the bytes of signed short integers in MatLab.
waveform = uint16(mod(65536 + waveform,65536)); %
% If on a PC swap the bytes to Big Endian
if strcmp( computer, 'PCWIN' )
    waveform = bitor(bitshift(waveform, -8), bitshift(waveform, 8));
end
% Save the data to a file
% Note: The waveform is saved as unsigned short integers. However,
        the acual bit pattern is that of signed short integers and
        that is how the ESG/PSG interprets them.
%
filename = 'C:\Temp\EsgTestFile';
[FID, message] = fopen(filename,'w');% Open a file to write data
if FID == -1 error('Cannot Open File'); end
fwrite(FID, waveform, 'unsigned short');% write to the file
fclose(FID);
                                    % close the file
% 3.) Load the internal Arb format file
% This process is just the reverse of saving the waveform
% Read in waveform as unsigned short integers.
% Swap the bytes as necessary
% Convert to signed integers then normalize between +-1
% De-interleave the I/Q Data
% Open the file and load the internal format data
[FID, message] = fopen(filename, 'r');% Open file to read data
if FID == -1 error('Cannot Open File'); end
[internalWave,n] = fread(FID, 'uint16');% read the IQ file
```

```
fclose(FID);% close the file
internalWave = internalWave';  % Conver from column array to row
array
% If on a PC swap the bytes back to Little Endian
if strcmp( computer, 'PCWIN' ) % Put the bytes into the correct
order
    internalWave=
bitor(bitshift(internalWave, -8), bitshift(bitand(internalWave, 255), 8
));
end
% convert unsigned to signed representation
internalWave = double(internalWave);
tmp = (internalWave > 32767.0) * 65536;
iqWave = (internalWave - tmp) ./ 32767; % and normalize the data
% De-Interleave the IQ data
IwaveIn = iqWave(1:2:n);
QwaveIn = iqWave(2:2:n);
```

Creating and Downloading a Pulse

NOTE

For the Keysight X-Series signal generators, the maximum frequency is 6. For more frequency information, refer to the signal generator's Data Sheet.

On the documentation CD, this programming example's name is "pulsepat.m."


This MATLAB programming example performs the following functions:

- I and Q data creation for 10 pulses
- marker file creation
- data scaling
- downloading using Keysight Waveform Download Assistant functions (see
 "Using the Download Utilities" on page 250 for more information)

```
% verify that communication with the Keysight X-Series signal
generator has been extablished
[status, status description, query result] = agt query(io, '*idn?');
if (status < 0) return; end
% set the carrier frequency and power level on the signal generator
using the Keysight
%Waveform Download Assistant
[status, status description] = agt sendcommand(io, 'SOURce:FREQuency
6000000000');
[status, status_description] = agt_sendcommand(io, 'POWer 0');
% define the ARB sample clock for playback
sampclk = 40000000;
% download the iq waveform to the baseband generator for playback
[status, status_description] = agt_waveformload(io, IQData,
'pulsepat', sampclk, 'play', 'no_normscale', Markers);
% turn on RF output power
[status, status description ] = agt sendcommand( io, 'OUTPut:STATe
ON')
```

You can test your program by performing a simulated plot of the in-phase modulation signal in Matlab (see Figure 5-2 on page 290). To do this, enter plot (i) at the Matlab command prompt.

Figure 5-2 Simulated Plot of In-Phase Signal

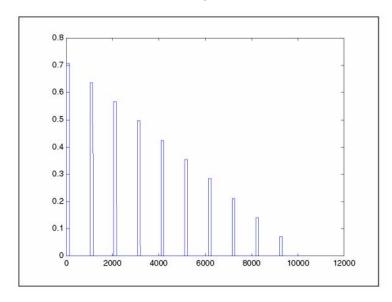

The following additional Matlab M-file pulse programming examples are also available on the Documentation CD-ROM for your signal generator:

NOTE

For the Keysight X-Series signal generator, the <code>SOURce:FREQuency</code> <value> value must be changed as required in the following programs.
For more information on frequency limits, refer to the Data Sheet.

barker.m	This programming example calculates and downloads an arbitrary waveform file that simulates a simple 7-bit barker RADAR signal to the vector signal generator.
chirp.m	This programming example calculates and downloads an arbitrary waveform file that simulates a simple compressed pulse RADAR signal using linear FM chirp to the vector signal generator.
FM.m	This programming example calculates and downloads an arbitrary waveform file that simulates a single tone FM signal with a rate of 6 KHz, deviation of =/- 14.3 KHz, Bessel null of dev/rate=2.404 to the vector signal generator.
nchirp.m	This programming example calculates and downloads an arbitrary waveform file that simulates a simple compressed pulse RADAR signal using non–linear FM chirp to the vector signal generator.
pulse.m	This programming example calculates and downloads an arbitrary waveform file that simulates a simple pulse signal to the vector signal generator.

pulsedroop.m

This programming example calculates and downloads an arbitrary waveform file that simulates a simple pulse signal with pulse droop to the vector signal generator.

Downloading a Waveform, Markers, and Setting the Waveform Header

NOTE

This example works on either a 32bit or 64bit system that is connected over the LAN. So, the Waveform Download Assistant—which only works on 32bit systems—is not required, to use this program.

Additional documentation is available on this program through Matlab, by adding your PC's path to the Matlab's path and then from the Matlab command line type: "help download".

This is example is used to download a waveform to the instrument.

On the documentation CD, this programming example's name is "Download.m."

This MATLAB programming example performs the following functions:

- downloads a waveform
- downloads the waveform's marker information
- downloads the waveform's header information.

```
function Download( tcpipAddress, iqWave, name, markers, header )
% Download( tcpipAddress, iqWave, name, markers, header );
% Copyright 2009 Keysight Technologies Inc.
%
% This function downloads a waveform and markers to an Keysight
X-Series signal generator,
% X-Series Vector Signal Generator. markers is a two dimentional
% array that contains 4 markers. The header contains the sample
rate, the
% waveform rms voltage, and the marker routings to the pulse
modulator and
% the ALC hold. Default values used by the header if values are not
present.
% header.sampleRate = 100e6;
                                             % Waveform Sample Rate
% header.rms = CalculateWaveformRMS(iqWave); % Waveform RMS voltage
% header.peak = 1.414;
                                            % Waveform Peak voltage
% header.runtimeScaling = 70;
                                            % Runtime scaling in
percent
```

```
% header.pulse = 'None';
                          % Marker routing
'Non','M1','M2','M3','M4'
% header.alcHold = 'None'; % Marker routing
'Non', 'M1', 'M2', 'M3', 'M4'
% header.description = 'Keysight Technologies'; % User provided
description
%
% INPUT PARAMETERS:
   tcpipAddress - '141.121.148.188' What ever works for your signal
Generator!
%
   name
                 - Waveform name - 21 characters max
%
   iqWave
                 - Complex waveform, min length 60 points
%
   markers
                 - markers(4,length(iqWave)) 4 possible markers
%
   header
                 - Structure containing waveform information.
%
% OUTPUT PARAMETERS:
%
% EXAMPLES:
                                            % Waveform name
   name = 'My Test';
%
   tcpipAddress = '141.121.151.129';
                                           % Signal Generator IP
Address
                                            % Points in waveform
%
   n = 1000;
   phase = (102*pi/n)*(0:(n-1));
   iqWave= complex(cos(phase), sin(phase)); % Create single tone
%
%
   markers = zeros(4,n);
                                         % Create markers
%
   markers(1,1:2) = 1;
%
   markers(2,1:4) = 1;
%
   markers(3,1:8) = 1;
   markers(4,1:16) = 1;
%
%
   header.sampleRate = 50e6;
                                          % Set Sample Rate to 50
MHz
%
    Download( tcpipAddress, iqWave, name, markers, header);
%
    % Range checks
    if nargin<2
```

```
error('ERROR: download() Insufficient input parmaeters.');
    end
    if length(iqWave)<60
        error('ERROR: download() iqWave must contain 60 or more
points.');
    end
    if nargin<3 name = 'NO_NAME'; end
    if nargin<4
        markers = zeros(4,length(iqWave));
        markers(:,1:4) = 1;
    end
    if nargin<5
        header = [];
    end
    if length(iqWave) ~= length(markers)
        error('ERROR: download() The length of the iqWave and the
marker arrays must be the same.');
    end
    % Process waveform and marker data
    [iqData, rms] = FormatWaveform( iqWave );
    mkrData = FormatMarkers( markers );
    % Download the Waveform
    wfmCmd = CreateWaveformCommand( name, length(iqWave) );
    mkrCmd = CreateMarkerCommand( name, length(markers) );
    hdrCmd = CreateHeaderCommand( name, rms, header );
    bufSize = 8192;
    t = tcpip(tcpipAddress, 5025);
    t.OutputBufferSize = bufSize;
```

```
% Order dependency on download. 1:Waveform, 2:Markers, 3:Header
   fopen(t);
    fprintf(t,'%s',wfmCmd);
   %fwrite(t,iqData,'int16'); % Use loop to prevent the need for a
buffer as big as waveform
    WriteData(t,iqData,2,bufSize);
    fprintf(t,'\n');
    fprintf(t,'syst:err?');
    fgets(t)
    fprintf(t,'%s',mkrCmd);
    %fwrite(t,mkrData,'int8');
   WriteData(t,mkrData,1,bufSize);
    fprintf(t,'\n');
    fprintf(t,'syst:err?');
    fgets(t)
    fprintf(t,'%s\n',hdrCmd);
    fprintf(t,'syst:err?');
    fgets(t)
    fclose(t);
end
function WriteData(fid,data,format,bufSize)
% Write data using a loop to support large waveforms without having
% specify a huge buffer.
% INPUT PARAMETERS:
            - file id
%
   fid
           - all the data
%
   data
   format - data size to output in bytes 1,2,4 etc.
   bufSize - Buffer size in bytes
```

```
buf = floor(bufSize/format);
    fullChunks = floor(length(data)/buf);
    partialChunk = length(data)-(fullChunks*buf);
    sfmt = 'int32';
    if format==1
        sfmt = 'int8';
    elseif format==2
        sfmt = 'int16';
    end
    stop=0;
    for i=0:(fullChunks-1)
        start = 1+(i*buf);
        stop = (i+1)*buf;
        fwrite(fid,data(start:stop),sfmt);
    end
    if partialChunk>0
        fwrite(fid,data(stop+1:end),sfmt);
    end
end
function [data, rms] = FormatWaveform( iqWave )
    % Scale the waveform to DAC values
    [a,b] = size(iqWave);
    if a>b
        iqWave = iqWave';
    end
    maxV = max(abs([real(iqWave) imag(iqWave)]));
    if maxV==0 maxV=1; end % Prevent divide by zero
    scale = 32767/maxV;
    iqWave = round( scale*iqWave );
```

```
% Calcurate waveform RMS
    rms = sqrt(mean(abs(iqWave).^2)) / 32767;
   % account for pulse duty cycle
    pw = sum(abs(iqWave)>0);
    dutyCycle = pw/length(iqWave);
    rms = rms/dutyCycle;
   % Interlace the I & Q vectors
    data = [real(iqWave);imag(iqWave)];
    data = data(:)';
end
function mkr = FormatMarkers( markers )
% The markers are placed in the 4 LSBs of a byte
% in this order M4 M3 M2 M1
    [c,d] = size(markers);
    if c>d
        markers = markers';
        [c,d] = size(markers);
    end
   mkr = (markers(1,:)\sim=0);
    if c>1
        mkr = mkr + 2*(markers(2,:)\sim=0);
    end
    if c>2
        mkr = mkr + 4*(markers(3,:)\sim=0);
    end
    if c>3
        mkr = mkr + 8*(markers(4,:)\sim=0);
    end
end
function hdrCmd = CreateHeaderCommand( file_name, rms, header )
```

```
% [:SOURce]:RADio[1]|2|3|4:ARB:HEADer:WRITe
"filename", "description", <sample_rate>, <scaling>, <marker_polarity>,
<alc_hold>, <alt_power>, <pulse>, <mod_atten>, <mod_filter>, <output_fil</pre>
ter>,<peak_power>,<rms>
% This function doesn't do any range checking
    hdr.sampleRate = 100e6;
    hdr.rms = rms;
    hdr.peak = 1.414;
    hdr.runtimeScaling = 70;  % In percent
    hdr.pulse = 'None';
    hdr.alcHold = 'None';
    hdr.description = 'Keysight Technologies';
    if ~isempty(header)
        if isstruct(header)
            if isfield(header, 'sampleRate')
                hdr.sampleRate = header.sampleRate;
            end
            if isfield(header,'rms')
                hdr.rms = header.rms;
            end
            if isfield(header, 'peak')
                hdr.peak = header.peak;
            end
            if isfield(header, 'runtimeScaling')
                hdr.runtimeScaling = header.runtimeScaling;
            end
            if isfield(header, 'pulse')
                hdr.pulse = header.pulse;
            end
            if isfield(header, 'alcHold')
                hdr.alcHold = header.alcHold;
            end
            if isfield(header, 'description')
                hdr.description = header.description;
            end
```

```
end
    end
    hdrCmd = ['RADio:ARB:HEAD:WRIT "WFM1:' file name '","'
hdr.description '",' num2str( hdr.sampleRate ) ','
num2str(hdr.runtimeScaling) ',NONE,' hdr.alcHold ',UNSP,' hdr.pulse
',UNSP,UNSP,UNSP,' num2str(hdr.peak) ',' num2str(hdr.rms)];
end
function wfmCmd = CreateWaveformCommand( file_name, points )
% :MMEM:DATA "<file name>",#ABC
% "<file_name>" the I/Q file name and file path within the signal
generator
% # indicates the start of the data block
% A the number of decimal digits present in B
% B a decimal number specifying the number of data bytes to follow
in C
    B = num2str(4*points); % Bytes in waveform
    A = num2str(length(B));
    wfmCmd = [':MEM:DATA:UNPR "WFM1:' file_name '",#' A B ];
end
function mkrCmd = CreateMarkerCommand( file name, points )
    B = num2str(points); % Bytes in marker file
    A = num2str(length(B));
    mkrCmd = [':MEM:DATA:UNPR "MKR1:' file_name '",#' A B ];
```

end

Playing Downloaded Waveforms

NOTE

This example works on either a 32bit or 64bit system that is connected over the LAN. So, the Waveform Download Assistant—which only works on 32bit systems—is not required, to use this program.

Additional documentation is available on this program through Matlab, by adding your PC's path to the Matlab's path and then from the Matlab command line type: "help PlayWaveform".

This is a simple example to play a waveform that was downloaded to the instrument. This example can be easily modified to send additional SCPI commands.

This programming example's name is "PlayWaveform.m." This example is not included on the Documentation CD.

This MATLAB programming example performs the following functions:

plays a waveform that has been downloaded

```
function PlayWaveform( tcpipAddress, name )
% PlayWaveform( tcpipAddress, name );
% Copyright 2009 Keysight Technologies Inc.
%
% Play the waveform in the Signal Generator
%
% INPUT PARAMETERS:
   tcpipAddress - '141.121.148.188' Whatever works for your signal
Generator!
                 - Waveform name - 21 characters max
    name
%
% EXAMPLE:
                                            % Waveform name
   name = 'My_Test';
   tcpipAddress = '141.121.151.129';
%
                                           % Signal Generator IP
Address
   PlayWaveform( tcpipAddress, name );
                                           % play the waveform
    playCmd = [':RAD:ARB:WAV "WFM1:' name '"'];
    t = tcpip(tcpipAddress, 5025);
```

Creating and Downloading Waveform Files Programming Examples

```
fopen(t);
fprintf(t,'%s\n',playCmd);

fprintf(t,'syst:err?');
fgets(t)

fclose(t);
```

Visual Basic Programming Examples

Creating I/Q Data-Little Endian Order

On the documentation CD, this programming example's name is "Create_IQData_vb.txt."

This Visual Basic programming example, using Microsoft Visual Basic 6.0, uses little endian order data, and performs the following functions:

- error checking
- I an Q integer array creation
- I an Q data interleaving
- byte swapping to convert to big endian order
- binary data file storing to a PC or workstation

Once the file is created, you can download the file to the signal generator using FTP (see "FTP Procedures" on page 231).

- ' Program Name: Create_IQData
- ' Program Description: This program creates a sine and cosine wave using 200 I/Q data
- ' samples. Each I and Q value is represented by a 2 byte integer. The sample points are
- ' calculated, scaled using the AMPLITUDE constant of 32767, and then stored in an array
- ' named iq_data. The AMPLITUDE scaling allows for full range I/Q modulator DAC values.
- ' Data must be in 2's complement, MSB/LSB big-endian format. If your PC uses LSB/MSB
- ' format, then the integer bytes must be swapped. This program converts the integer
- $^{\prime}$ array values to hex data types and then swaps the byte positions before saving the
- ' data to the IQ DataVB file.

Private Sub Create_IQData()

Dim index As Integer

Dim AMPLITUDE As Integer

Dim pi As Double

Dim loByte As Byte

Dim hiByte As Byte

```
Creating and Downloading Waveform Files Programming Examples
```

```
Dim loHex As String
Dim hiHex As String
Dim strSrc As String
Dim numPoints As Integer
Dim FileHandle As Integer
Dim data As Byte
Dim iq_data() As Byte
Dim strFilename As String
strFilename = "C:\IQ DataVB"
Const SAMPLES = 200
                       ' Number of sample PAIRS of I and Q integers
for the waveform
AMPLITUDE = 32767
                        ' Scale the amplitude for full range of the
signal generators
                        ' I/Q modulator DAC
pi = 3.141592
Dim intIQ_Data(0 To 2 * SAMPLES - 1) 'Array for I and Q integers:
400
ReDim iq_data(0 To (4 * SAMPLES - 1)) 'Need MSB and LSB bytes for
each integer value: 800
'Create an integer array of I/Q pairs
    For index = 0 To (SAMPLES - 1)
       intIQ Data(2 * index) = CInt(AMPLITUDE * Sin(2 * pi * index
/ SAMPLES))
        intIQ_Data(2 * index + 1) = CInt(AMPLITUDE * Cos(2 * pi *
index / SAMPLES))
    Next index
 'Convert each integer value to a hex string and then write into the
iq_data byte array
 'MSB, LSB ordered
For index = 0 To (2 * SAMPLES - 1)
```

```
strSrc = Hex(intIQ_Data(index)) 'convert the integer to a hex
value
   If Len(strSrc) <> 4 Then
       strSrc = String(4 - Len(strSrc), "0") & strSrc 'Convert to
hex format i.e "800F
   End If
                                                  'Pad with 0's
if needed to get 4
                                                    'characters
i.e '0' to "0000"
      hiHex = Mid$(strSrc, 1, 2) 'Get the first two hex values
(MSB)
      loHex = Mid$(strSrc, 3, 2) 'Get the next two hex values
(LSB)
      loByte = CByte("&H" & loHex) 'Convert to byte data type LSB
      hiByte = CByte("&H" & hiHex) 'Convert to byte data type MSB
      iq_data(2 * index + 1) = loByte 'LSB into second byte
 Next index
  'Now write the data to the file
FileHandle = FreeFile() 'Get a file number
numPoints = UBound(iq_data) 'Get the number of bytes in the file
Open strFilename For Binary Access Write As #FileHandle Len =
numPoints + 1
On Error GoTo file_error
   For index = 0 To (numPoints)
       data = iq data(index)
```

```
Put #FileHandle, index + 1, data 'Write the I/Q data to the file

Next index

Close #FileHandle

Call MsgBox("Data written to file " & strFilename, vbOKOnly, "Download")

Exit Sub

file_error:

MsgBox Err.Description

Close #FileHandle
```

End Sub

Downloading I/Q Data

On the signal generator's documentation CD, this programming example's name is "Download File vb.txt."

This Visual Basic programming example, using Microsoft Visual Basic 6.0, downloads the file created in "Creating I/Q Data—Little Endian Order" on page 301 into non-volatile memory using a LAN connection. To use GPIB, replace the instOpenString object declaration with "GPIB::19::INSTR". To download the data into volatile memory, change the instDestfile declaration to "USER/BBG1/WAVEFORM/".

NOTE

The example program listed here uses the VISA COM IO API, which includes the WriteIEEEBlock method. This method eliminates the need to format the download command with arbitrary block information such as defining number of bytes and byte numbers. Refer to "SCPI Command Line Structure" on page 227 for more information.

This program also includes some error checking to alert you when problems arise while trying to download files. This includes checking to see if the file exists.

^{&#}x27; Program Name: Download File

^{&#}x27; Program Description: This program uses Microsoft Visual Basic 6.0 and the Keysight

Creating and Downloading Waveform Files Programming Examples

' VISA COM I/O Library to download a waveform file to the signal generator. ' The program downloads a file (the previously created 'IO DataVB' file) to the signal ' generator. Refer to the Programming Guide for information on binary ' data requirements for file downloads. The waveform data 'IO DataVB' is ' downloaded to the signal generator's non-volatile memory(NVWFM) ' " /USER/WAVEFORM/IQ_DataVB". For volatile memory(WFM1) download to the ' " /USER/BBG1/WAVEFORM/IQ_DataVB" directory. ' You must reference the Keysight VISA COM Resource Manager and VISA COM 1.0 Type ' Library in your Visual Basic project in the Project/References ' The VISA COM 1.0 Type Library, corresponds to VISACOM.tlb and the Keysight ' VISA COM Resource Manager, corresponds to AgtRM.DLL. ' The VISA COM 488.2 Formatted I/O 1.0, corresponds to the BasicFormattedIO.dll ' Use a statement such as "Dim Instr As VisaComLib.FormattedIO488" to ' create the formatted I/O reference and use ' "Set Instr = New VisaComLib.FormattedIO488" to create the actual object. ****** ' IMPORTANT: Use the TCPIP address of your signal generator in the rm.Open ' declaraion. If you are using the GPIB interface in your project use "GPIB::19::INSTR" ' in the rm.Open declaration.

Private Sub Download_File()

' The following four lines declare IO objects and instantiate them.

```
Creating and Downloading Waveform Files Programming Examples
```

```
Dim rm As VisaComLib.ResourceManager
Set rm = New AgilentRMLib.SRMCls
Dim SigGen As VisaComLib.FormattedIO488
Set SigGen = New VisaComLib.FormattedIO488
' NOTE: Use the IP address of your signal generator in the rm.Open
declaration
Set SigGen.IO = rm.Open("TCPIP0::000.000.000.000")
Dim data As Byte
Dim iq_data() As Byte
Dim FileHandle As Integer
Dim numPoints As Integer
Dim index As Integer
Dim Header As String
Dim response As String
Dim hiByte As String
Dim loByte As String
Dim strFilename As String
strFilename = "C:\IQ DataVB" 'File Name and location on PC
                                'Data will be saved to the signal
generator's NVWFM
                                          '/USER/WAVEFORM/IQ DataVB
directory.
FileHandle = FreeFile()
On Error GoTo errorhandler
With SigGen
                           'Set up the signal generator to accept a
download
                            'Timeout 50 seconds
    .I0.Timeout = 5000
    .WriteString "*RST"
                            'Reset the signal generator.
End With
```

```
numPoints = (FileLen(strFilename)) 'Get number of bytes in the
file: 800 bytes
ReDim iq data(0 To numPoints - 1)
                                   'Dimension the iq data array
to the
                                    'size of the IQ_DataVB file:
800 bytes
Open strFilename For Binary Access Read As #FileHandle 'Open the
file for binary read
On Error GoTo file_error
For index = 0 To (numPoints - 1) Write the IQ_DataVB data to the
iq data array
      Get #FileHandle, index + 1, data '(index+1) is the record
number
       iq_data(index) = data
Next index
   Close #FileHandle
                                     'Close the file
'Write the command to the Header string. NOTE: syntax
    Header = "MEM:DATA ""/USER/WAVEFORM/IQ_DataVB"","
  'Now write the data to the signal generator's non-volatile memory
(NVWFM)
   SigGen.WriteIEEEBlock Header, iq data
   SigGen.WriteString "*OPC?"
                                    'Wait for the operation to
complete
   the OPC? query
   Call MsgBox("Data downloaded to the signal generator", vbOKOnly,
"Download")
   Exit Sub
errorhandler:
```

```
MsgBox Err.Description, vbExclamation, "Error Occurred",
Err.HelpFile, Err.HelpContext

Exit Sub

file_error:
    Call MsgBox(Err.Description, vbOKOnly) 'Display any error
message
    Close #FileHandle
End Sub
```

HP Basic Programming Examples

This section contains the following programming examples:

- "Creating and Downloading Waveform Data Using HP BASIC for Windows®" on page 308
- "Creating and Downloading Waveform Data Using HP BASIC for UNIX" on page 310
- "Creating and Downloading E443xB Waveform Data Using HP BASIC for Windows" on page 312
- "Creating and Downloading E443xB Waveform Data Using HP Basic for UNIX" on page 314

Creating and Downloading Waveform Data Using HP BASIC for Windows®

On the documentation CD, this programming example's name is "hpbasicWin.txt."

The following program will download a waveform using HP Basic for Windows into volatile ARB memory. The waveform generated by this program is the same as the default SINE_TEST_WFM waveform file available in the signal generator's. This code is similar to the code shown for BASIC for UNIX but there is a formatting difference in line 130 and line 140.

To download into non-volatile memory, replace line 190 with:

```
190 OUTPUT @PSG USING "#,K";":MMEM:DATA ""NVWFM:testfile"", #"
```

As discussed at the beginning of this section, I and Q waveform data is interleaved into one file in 2's compliment form and a marker file is associated with this I/Q waveform file.

In the Output commands, USING "#,K" formats the data. The pound symbol (#) suppresses the automatic EOL (End of Line) output. This allows multiple output commands to be concatenated as if they were a single output. The "K" instructs HP Basic to output the following numbers or strings in the default format.

```
10 ! RE-SAVE "BASIC_Win_file"
```

```
Num_points=200
20
     ALLOCATE INTEGER Int_array(1:Num_points*2)
30
40
     DEG
     FOR I=1 TO Num_points*2 STEP 2
50
60
       Int array(I)=INT(32767*(SIN(I*360/Num points)))
70
     NEXT I
80
     FOR I=2 TO Num_points*2 STEP 2
90
       Int_array(I)=INT(32767*(COS(I*360/Num_points)))
100
     NEXT I
     PRINT "Data Generated"
110
     Nbytes=4*Num_points
120
130
     ASSIGN @PSG TO 719
     ASSIGN @PSGb TO 719; FORMAT MSB FIRST
140
     Nbytes$=VAL$(Nbytes)
150
     Ndigits=LEN(Nbytes$)
160
     Ndigits$=VAL$(Ndigits)
170
180
     WAIT 1
     OUTPUT @PSG USING "#,K";":MMEM:DATA ""WFM1:data_file"",#"
190
     OUTPUT @PSG USING "#,K";Ndigits$
200
     OUTPUT @PSG USING "#,K";Nbytes$
210
     WAIT 1
220
230
     OUTPUT @PSGb;Int_array(*)
240
     OUTPUT @PSG; END
250
     ASSIGN @PSG TO *
     ASSIGN @PSGb TO *
260
     PRINT
270
     PRINT "*END*"
280
290
     END
```

Program Comments

10:	Program file name
20:	Sets the number of points in the waveform.
30:	Allocates integer data array for I and Q waveform points.
40:	Sets HP BASIC to use degrees for cosine and sine functions.

Program Comments (Continued)

50:	Sets up first loop for I waveform points.
60:	
60:	Calculate and interleave I waveform points.
70:	End of loop
80	Sets up second loop for Q waveform points.
90:	Calculate and interleave Q waveform points.
100:	End of loop.
120:	Calculates number of bytes in I/Q waveform.
130:	Opens an IO path to the signal generator using GPIB. 7 is the address of the GPIB card in the computer, and 19 is the address of the signal generator. This IO path is used to send ASCII data to the signal generator.
140:	Opens an IO path for sending binary data to the signal generator.
150:	Creates an ASCII string representation of the number of bytes in the waveform.
160 to 170:	Finds the number of digits in Nbytes.
190:	Sends the first part of the SCPI command, MEM:DATA along with the name of the file, data_file, that will receive the waveform data. The name, data_file, will appear in the signal generator's memory catalog.
200 to 210:	Sends the rest of the ASCII header.
230:	Sends the binary data. Note that PSGb is the binary IO path.
240:	Sends an End-of-Line to terminate the transmission.
250 to 260:	Closes the connections to the signal generator.
290:	End the program.

Creating and Downloading Waveform Data Using HP BASIC for UNIX

On the documentation CD, this programming example's name is "hpbasicUx.txt."

The following program shows you how to download waveforms using HP Basic for UNIX. The code is similar to that shown for HP BASIC for Windows, but there is a formatting difference in line 130 and line 140.

To download into non-volatile memory, replace line 190 with:

190 OUTPUT @PSG USING "#,K";":MMEM:DATA ""NVWFM:testfile"", #"

As discussed at the beginning of this section, I and Q waveform data is interleaved into one file in 2's compliment form and a marker file is associated with this I/Q waveform file.

In the Output commands, USING "#,K" formats the data. The pound symbol (#) suppresses the automatic EOL (End of Line) output. This allows multiple output commands to be concatenated as if they were a single output. The "K" instructs HP BASIC to output the following numbers or strings in the default format.

```
10 ! RE-SAVE "UNIX_file"
20
      Num_points=200
      ALLOCATE INTEGER Int array(1:Num points*2)
30
40
      DEG
50
      FOR I=1 TO Num points*2 STEP 2
        Int_array(I)=INT(32767*(SIN(I*360/Num_points)))
60
70
      NEXT I
      FOR I=2 TO Num points*2 STEP 2
80
90
        Int_array(I)=INT(32767*(COS(I*360/Num_points)))
      NEXT I
100
      PRINT "Data generated "
110
120
      Nbytes=4*Num points
      ASSIGN @PSG TO 719; FORMAT ON
130
      ASSIGN @PSGb TO 719; FORMAT OFF
140
150
      Nbytes$=VAL$(Nbytes)
160
      Ndigits=LEN(Nbytes$)
170
      Ndigits$=VAL$(Ndigits)
180
      WAIT 1
190
      OUTPUT @PSG USING "#,K";":MMEM:DATA ""WFM1:data_file"",#"
      OUTPUT @PSG USING "#,K";Ndigits$
200
210
      OUTPUT @PSG USING "#,K";Nbytes$
220
      WAIT 1
      OUTPUT @PSGb; Int array(*)
230
240
      WAIT 2
      OUTPUT @PSG; END
241
250
      ASSIGN @PSG TO *
      ASSIGN @PSGb TO *
260
270
      PRINT
      PRINT "*END*"
280
```

290 END

Program Comments

10:	Program file name
20: Sets the number of points in the waveform.	
30:	Allocates integer data array for I and Q waveform points.
40:	Sets HP BASIC to use degrees for cosine and sine functions.
50:	Sets up first loop for I waveform points.
60:	Calculate and interleave I waveform points.
70:	End of loop
80	Sets up second loop for Q waveform points.
90:	Calculate and interleave Q waveform points.
100: End of loop.	
120:	Calculates number of bytes in I/Q waveform.
130:	Opens an IO path to the signal generator using GPIB. 7 is the address of the GPIB card in the computer, and 19 is the address of the signal generator. This IO path is used to send ASCII data to the signal generator.
140:	Opens an IO path for sending binary data to the signal generator.
150:	Creates an ASCII string representation of the number of bytes in the waveform.
160 to 170:	Finds the number of digits in Nbytes.
190:	Sends the first part of the SCPI command, MEM:DATA along with the name of the file, data_file, that will receive the waveform data. The name, data_file, will appear in the signal generator's memory catalog.
200 to 210:	Sends the rest of the ASCII header.
230:	Sends the binary data. Note that PSGb is the binary IO path.
240:	Sends an End-of-Line to terminate the transmission.
250 to 260:	Closes the connections to the signal generator.
290:	End the program.

Creating and Downloading E443xB Waveform Data Using HP BASIC for Windows

The following program shows you how to download waveforms using HP Basic for Windows into volatile ARB memory. This program is similar to the following program example as well as the previous examples. The difference between BASIC for UNIX and BASIC for Windows is the way the formatting, for the most significant bit (MSB) on lines 110 and 120, is handled.

To download into non-volatile ARB memory, replace line 160 with:

160 OUTPUT @ESG USING "#,K";":MMEM:DATA ""NVARBI:testfile"", #"

and replace line 210 with:

210 OUTPUT @ESG USING "#,K";":MMEM:DATA ""NVARBQ:testfile"", #"

First, the I waveform data is put into an array of integers called Iwfm_data and the Q waveform data is put into an array of integers called Qwfm_data. The variable Nbytes is set to equal the number of bytes in the I waveform data. This should be twice the number of integers in Iwfm_data, since an integer is 2 bytes. Input integers must be between 0 and 16383.

In the Output commands, USING "#,K" formats the data. The pound symbol (#) suppresses the automatic EOL (End of Line) output. This allows multiple output commands to be concatenated as if they were a single output. The "K" instructs HP Basic to output the following numbers or strings in the default format.

```
! RE-SAVE "ARB_IQ_Win_file"
10
20
      Num points=200
30
      ALLOCATE INTEGER
Iwfm_data(1:Num_points), Qwfm_data(1:Num_points)
      DEG
40
50
      FOR I=1 TO Num points
        Iwfm_data(I)=INT(8191*(SIN(I*360/Num_points))+8192)
60
70
        Qwfm_data(I)=INT(8191*(COS(I*360/Num_points))+8192)
      NEXT I
80
      PRINT "Data Generated"
90
100
      Nbytes=2*Num points
      ASSIGN @Esg TO 719
110
120
      !ASSIGN @Esgb TO 719; FORMAT MSB FIRST
      Nbytes$=VAL$(Nbytes)
130
      Ndigits=LEN(Nbytes$)
140
150
      Ndigits$=VAL$(Ndigits)
160
      OUTPUT @Esg USING "#,K";":MMEM:DATA ""ARBI:file_name_1"",#"
      OUTPUT @Esg USING "#,K";Ndigits$
170
180
      OUTPUT @Esg USING "#,K"; Nbytes$
190
      OUTPUT @Esgb; Iwfm data(*)
      OUTPUT @Esg; END
200
210
      OUTPUT @Esg USING "#,K";":MMEM:DATA ""ARBQ:file_name_1"",#"
220
      OUTPUT @Esg USING "#,K";Ndigits$
230
      OUTPUT @Esg USING "#,K";Nbytes$
```

```
OUTPUT @Esgb;Qwfm_data(*)
OUTPUT @Esg;END
OUTPUT @Esg;END
ASSIGN @Esg TO *
ASSIGN @Esgb TO *
PRINT
PRINT "*END*"
BND
```

Program Comments

10:	Program file name.	
20	Sets the number of points in the waveform.	
30:	Defines arrays for I and Q waveform points. Sets them to be integer arrays.	
40:	Sets HP BASIC to use degrees for cosine and sine functions.	
50:	Sets up loop to calculate waveform points.	
60:	Calculates I waveform points.	
70:	Calculates Q waveform points.	
80:	End of loop.	
160 and 210:	The I and Q waveform files have the same name	
90 to 300:	See the table on page 309 for program comments.	

Creating and Downloading E443xB Waveform Data Using HP Basic for UNIX

This programming example's name is "e443xb_hpbasicUx2.txt." This example is not included on the Documentation CD.

The following program shows you how to download waveforms using HP BASIC for UNIX. It is similar to the previous program example. The difference is the way the formatting for the most significant bit (MSB) on lines is handled.

First, the I waveform data is put into an array of integers called Iwfm_data and the Q waveform data is put into an array of integers called Qwfm_data. The variable Nbytes is set to equal the number of bytes in the I waveform data. This should be twice the number of integers in Iwfm_data, since an integer is represented 2 bytes. Input integers must be between 0 and 16383.

In the Output commands, USING "#, K" formats the data. The pound symbol (#) suppresses the automatic EOL (End of Line) output. This allows multiple output commands to be concatenated as if they were a single output. The "K" instructs HP BASIC to output the following numbers or strings in the default format.

```
10 ! RE-SAVE "ARB IQ file"
```

```
Num points=200
20
30
      ALLOCATE INTEGER
Iwfm_data(1:Num_points), Qwfm_data(1:Num_points)
40
      DEG
50
      FOR I=1 TO Num_points
60
        Iwfm data(I)=INT(8191*(SIN(I*360/Num points))+8192)
70
        Qwfm_data(I)=INT(8191*(COS(I*360/Num_points))+8192)
80
      NEXT I
90
      PRINT "Data Generated"
100
      Nbytes=2*Num points
      ASSIGN @Esg TO 719; FORMAT ON
110
      ASSIGN @Esgb TO 719; FORMAT OFF
120
      Nbytes$=VAL$(Nbytes)
130
      Ndigits=LEN(Nbytes$)
140
150
      Ndigits$=VAL$(Ndigits)
      OUTPUT @Esg USING "#,K";":MMEM:DATA ""ARBI:file_name_1"",#"
160
170
      OUTPUT @Esg USING "#,K";Ndigits$
180
      OUTPUT @Esg USING "#,K"; Nbytes$
190
      OUTPUT @Esgb; Iwfm data(*)
200
      OUTPUT @Esg; END
210
      OUTPUT @Esg USING "#,K";":MMEM:DATA ""ARBQ:file_name_1"",#"
220
      OUTPUT @Esg USING "#,K";Ndigits$
      OUTPUT @Esg USING "#,K"; Nbytes$
230
      OUTPUT @Esgb; Qwfm_data(*)
240
250
      OUTPUT @Esg; END
      ASSIGN @Esg TO *
260
      ASSIGN @Esgb TO *
270
      PRINT
280
290
      PRINT "*END*"
300
      END
```

Program Comments

10:	Program file name.
20	Sets the number of points in the waveform.

Creating and Downloading Waveform Files Programming Examples

Program Comments (Continued)


30:	Defines arrays for I and Q waveform points. Sets them to be integer arrays.	
40:	Sets HP BASIC to use degrees for cosine and sine functions.	
50:	Sets up loop to calculate waveform points.	
60:	Calculates I waveform points.	
70:	Calculates Q waveform points.	
80:	End of loop.	
160 and 210:	The I and Q waveform files have the same name	
90 to 300	See the table on page 312 for program comments.	

Troubleshooting Waveform Files

Symptom	Possible Cause	
ERROR 224, Text file busy	Attempting to download a waveform that has the same name as the waveform currently being played by the signal generator.	
ERROR 224, Text Tile busy	To solve the problem, either change the name of the waveform being downloaded or turn off the ARB.	
ERROR 628, DAC over range	The amplitude of the signal exceeds the DAC input range. The typical causes are unforeseen overshoot (DAC values within range) or the input values exceed the DAC range.	
	To solve the problem, scale or reduce the DAC input values. For more information, see "DAC Input Values" on page 209.	
	This error can also occur if an encrypted file (.securewave) is being downloaded to the signal generator from a PC or USB Media with a different suffix (i.e. not .SECUREWAVE).	
	To solve the problem, use the Use as or Copy File to Instrument softkey menus to download the encrypted file to the instrument. For more information, see "Encrypted I/Q Files and the Securewave Directory" on page 226.	
ERROR 629, File format invalid	The signal generator requires a minimum of 60 samples to build a waveform and the same number of I and Q data points.	
FDD0D 001 0 1 (There is not enough space in the ARB memory for the waveform file being downloaded.	
ERROR -321, Out of memory	To solve the problem, either reduce the file size of the waveform file or delete unnecessary files from ARB memory. Refer to "" on page 220.	
No RF Output	The marker RF blanking function may be active. To check for and turn RF blanking off, refer to "Configuring the Pulse/RF Blank" on page 318. This problem occurs when the file header contains unspecified settings and a previously played waveform used the marker RF blanking function.	
	For more information on the marker functions, see the User's Guide.	
Undesired output signal	Check for the following:	
	 The data was downloaded in little endian order. See "Little Endian and Big Endian (Byte Order)" on page 207 for more information. 	
	 The waveform contains an odd number of samples. An odd number of samples can cause waveform discontinuity. See "Waveform Phase Continuity" on page 217 for more information. 	

Creating and Downloading Waveform Files Troubleshooting Waveform Files

Configuring the Pulse/RF Blank

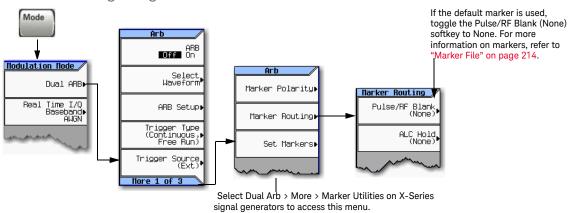

SCPI commands:

[:SOURce]:RADio[1]:ARB:MDEStination:PULSe NONE|M1|M2|M3|M4 [:SOURce]:RADio[1]:ARB:MDEStination:PULSe?

For details on each key, use the key help. Refer to "Getting Key Help" on page 30 and the User's Guide. For additional SCPI command information, refer to the SCPI Command Reference.

Keysight Technologies X-Series Signal Generators

Programming Guide

6 Creating and Downloading User-Data Files

NOTE

The following sections and procedures contain remote SCPI commands. For front panel key commands, refer to the Key Help in the signal generator.

This chapter explains the requirements and processes for creating and downloading user data, and contains the following sections:

- User File Data (Bit/Binary) Downloads on page 327
- Pattern RAM (PRAM) Data Downloads on page 346
- FIR Filter Coefficient Downloads on page 360
- Using the Equalization Filter on page 364
- Save and Recall Instrument State Files on page 365
- User Flatness Correction Downloads Using C++ and VISA on page 379
- Data Transfer Troubleshooting on page 384



Overview

User data is a generic term for various data types created by the user and stored in the signal generator. This includes the following data (file) types:

Bit This file type lets the user download payload data for

use in streaming or framed signals. It lets the user determine how many bits in the file the signal generator

uses.

Binary This file type provides payload data for use in streaming

or framed signals. It differs from the bit file type in that you cannot specify a set number of bits. Instead the signal generator uses all bits in the file for streaming data and all bits that fill a frame for framed data. If there are not enough bits to fill a frame, the signal generator

truncates the data and repeats the file from the

beginning.

PRAM With this file type, the user provides the payload data

along with the bits to control signal attributes such as bursting. This file type is available for only the real-time

Custom and TDMA modulation formats.

FIR Filter This file type stores user created custom filters.

State This file type lets the user store signal generator

settings, which can be recalled. This provides a quick method for reconfiguring the signal generator when

switching between different signal setups.

User Flatness

Correction This file type lets the user store amplitude corrections

for frequency.

Prior to creating and downloading files, you need to take into consideration the file size and the amount of remaining signal generator memory. For more information, see "Signal Generator Memory" on page 321

Signal Generator Memory

The signal generator provides two types of memory, volatile and non-volatile.

NOTE

User FIR references are only applicable to vector signal generator models with an installed baseband generator option.

Volatile

Random access memory that does not survive cycling of the signal generator power. This memory is commonly referred to as waveform memory (WFM1) or pattern RAM (PRAM). Refer to Table 6-1 for the file types that share this memory:

Table 6-1 Signal Generators and Volatile Memory File Types

Volatile Memory Type	Signal Generator Model	
	N5166B and N5172B with Option 653 or 655	N5182B with Option 656 or 657
1/Q	Х	Х
Marker	Х	Х
File header	Х	Х
User PRAM	-	_
User Binary	Х	Х
User Bit	-	_
Waveform Sequences (multiple I/Q files played together)	n/a ^a	n/a ^a

a. Waveform sequences are always in non-volatile memory.


Non-volatile

Storage memory where files survive cycling of the signal generator power. Files remain until overwritten or deleted. Refer to **Table on page 322** for the file types that share this memory:

Table 6-2 Signal Generators and Non-Volatile Memory Types

Non-Volatile Memory Type	Signal Generator Mod	Signal Generator Model	
	N5166B and N5172B with Option 653 or 655	N5182B with Option 656 or 657	
1/Q	Х	Х	
Marker	Х	Х	
File header	Х	Х	
Sweep List	Х	Х	
User PRAM	-	Х	
User Binary	Х	Х	
User Bit	-	Х	
User FIR	Х	Х	
Instrument State	Х	Х	
Waveform Sequences	Х	Х	
(multiple I/Q files played together)			

The following figure shows the signal generator's directory structure for the user-data files.

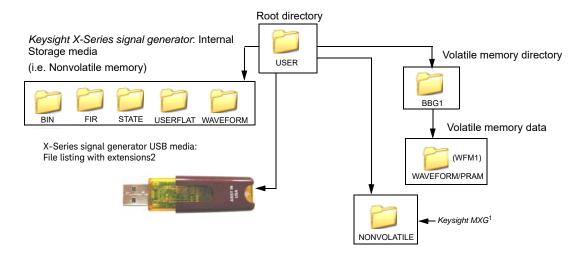

^{1.} This NONVOLATILE directory shows the files with the same extensions as the USB media and is useful with ftp.

^{2.} The Keysight X-Series signal generator can use optional "USB media" to store non-volatile waveform data.

Memory Allocation

Volatile Memory

The signal generator allocates volatile memory in blocks of 1024 bytes. For example, a user-data file with 60 bytes uses 1024 bytes of memory. For a file that is too large to fit into 1024 bytes, the signal generator allocates additional memory in multiples of 1024 bytes. For example, the signal generator allocates 3072 bytes of memory for a file with 2500 bytes.

 3×1024 bytes = 3072 bytes of memory

As shown in the examples, files can cause the signal generator to allocate more memory than what is actually used, which decreases the amount of available memory.

User-data blocks consist of 1024 bytes of memory. Each user-data file has a file header that uses 512 bytes for the Keysight X-Series signal generator, or 256 bytes for the ESG/PSG in the first data block for each user-data file.

Non-Volatile Memory

Non-volatile files are stored on the non-volatile internal signal generator memory (i.e. internal storage) or to the USB media, if available. The Keysight X-Series signal generator non-volatile internal memory is allocated according to a Microsoft compatible file allocation table (FAT) file system. The signal generator allocates non-volatile memory in clusters according to the drive size (see Table 6-3). For example, referring to Table 6-3, if the drive size is 15 MB and if the file is less than or equal to 4k bytes, the file uses only one 4 KB cluster of memory. For files larger than 4 KB, and with a drive size of 15 MB, the signal generator allocates additional memory in multiples of 4KB clusters. For example, a file that has 21,538 bytes consumes 6 memory clusters (24,000 bytes).

On the Keysight X-Series signal generators, the non-volatile memory is **also** referred to as internal storage and USB media. The Internal and USB media files /USERS/NONVOLATILE Directory contains file names with full extensions (i.e. .marker, .header, etc.).

For more information on default cluster sizes for FAT file structures, refer to Table 6-3 and to http://support.microsoft.com/.

Table 6-3 Drive Size and Non-volatile Memory Clusters

Drive Size (logical volume)	Cluster Size (Bytes) (Minimum Allocation Size)
0 MB – 15 MB	4K
16 MB – 127 MB	2K
128 MB – 255 MB	4K
256 MB – 511 MB	8K

Table 6-3 Drive Size and Non-volatile Memory Clusters

Drive Size (logical volume)	Cluster Size (Bytes) (Minimum Allocation Size)
512 MB – 1023 MB	16k
1024 MB – 2048 MB	32K
2048 MB - 4096 MB	64K
4096 MB – 8192 MB	128K
8192 MB – 16384 MB	256K

Memory Size

The amount of available memory, volatile and non-volatile, varies by signal generator option and the size of the other files that share the memory. The baseband generator (BBG) options contain the volatile memory. Table 6-4 shows the maximum available memory assuming that there are no other files residing in memory.

Table 6-4 Maximum Signal Generator Memory

Volatile (WFM	1/PRAM) Memory		Non-Volatile (NVWFM) Memory			
Option	Size		Option	Size		
		N	I5166B			
653, 655 (BBG)	32 MSa (160 MB)		Standard 009	600 MSa (3 GB) 7.5 GSa (30 GB)		
022	512 MSa (2.5 GB)		USB Flash Drive (UFD)	user determined		
	N517	72E	and N5182B			
653, 655, 656, 657 (BBG)	32 MSa (160 MB)		Standard 006 009	600 MSa (3 GB) 2 GSa (8 GB) 7.5 GSa (30 GB)		
021 (72B only) 022 023 (82B only)	256 MSa (1.25 GB) 512 MSa (2.5 GB) 1024 MSa (5 GB)		USB Flash Drive (UFD)	user determined		

Checking Available Memory

Whenever you download a user-data file, you must be aware of the amount of remaining signal generator memory. Table 6-5 shows to where each user-data file type is downloaded and from which memory type the signal generator accesses the file data. Information on downloading a user-data file is located within each user-data file section.

NOTE

The FIR filter (file) types only apply to vector signal generator models with an installed baseband generator option.

Table 6-5 User-Data File Memory Location

User-Data File Type	Download Memory	Access Memory
Bit	Non-volatile	Volatile
Binary	Non-volatile	Volatile
PRAM	Volatile	Volatile
Instrument State	Non-volatile	Non-volatile
FIR	Non-volatile	Non-volatile
Flatness	Non-volatile	Non-volatile

Bit and binary files increase in size when the signal generator loads the data from non-volatile to volatile memory. For more information, see "User File Size" on page 332.

Use the following SCPI commands to determine the amount of remaining memory:

Volatile Memory :MMEM:CAT? "WFM1"

The query returns the following information:

<memory used>,<memory
remaining>,<"file_names">

Non-Volatile Memory : MEM: CAT: ALL?

The query returns the following information:

<memory used>,<memory
remaining>,<"file_names">

NOTE

The signal generator calculates the memory values based on the number of bytes used by the files residing in volatile or non-volatile memory, and not on the memory block allocation. To accurately determine the available memory, you must calculate the number of blocks of memory used by the files. For more information on memory block allocation, see "Memory Allocation" on page 323.

User File Data (Bit/Binary) Downloads

NOTE

If you encounter problems with this section, refer to "Data Transfer Troubleshooting" on page 384.

To verify the SCPI parser's responsiveness when remotely using the :MEM:DATA SCPI command to upload files, the file's upload should be verified using the *STB? command. Refer to the SCPI Command Reference.

The signal generator accepts externally created and downloaded user file data for real-time modulation formats that have user file as a data selection (shown as <"file_name"> in the data selection SCPI command). When you select a user file, the signal generator incorporates the user file data (payload data) into the modulation format's data fields. You can create the data using programs such as MATLAB or Mathcad.

The signal generator uses two file types for downloaded user file data: bit and binary. With a bit file, the signal generator views the data up to the number of bits specified when the file was downloaded. For example, if you specify to use 153 bits from a 160 bit (20 bytes) file, the signal generator transmits 153 bits and ignores the remaining 7 bits. This provides a flexible means in which to control the number of transmitted data bits. It is the preferred file type and the easiest one to use.

With a binary file, the signal generator sees all bytes (bits) in a downloaded file and attempts to use them. This can present challenges especially when working with framed data. In this situation, your file needs to contain enough bits to fill a frame or timeslot, or multiple frames or timeslots, to end on the desired boundary. To accomplish this, you may have to remove or add bytes. If there are not enough bits remaining in the file to fill a frame or timeslot, the signal generator truncates the data causing a discontinuity in the data pattern.

You download a user file to either the Bit or Binary memory catalog (directory). Unlike a PRAM file (covered later in this chapter), user file data does not contain control bits, it is just data. The signal generator adds control bits to the user file data when it generates the signal. There are two ways that the signal generator uses the data, either in a continuous data pattern (unframed) or within framed boundaries. Real-time Custom uses only unframed data.

NOTE

For unframed data transmission, the signal generator requires a minimum of 60 symbols. For more information, see "Determining Memory Usage for Custom User File Data" on page 333.

You create the user file to either fill a single timeslot/frame or multiple timeslots/frames. To create multiple timeslots/frames, simply size the file with enough data to fill the number of desired timeslots/frames

User File Bit Order (LSB and MSB)

The signal generator views the data from the most significant bit (MSB) to the least significant bit (LSB). When you create your user file data, it is important that you organize the data in this manner. Within groups (strings) of bits, a bit's value (significance) is determined by its location in the string. The following shows an example of this order using two bytes.

Most Significant Bit (MSB)

This bit has the highest value (greatest weight) and is located at the far left of

the bit string.

Least Significant Bit (LSB)

This bit has the lowest value (bit position zero) and is located at the far right of


the bit string.



Bit File Type Data

The bit file is the preferred file type and the easiest to use. When you download a bit file, you designate how many bits in the file the signal generator can modulate onto the signal. During the file download, the signal generator adds a 10-byte file header that contains the information on the number of bits the signal generator is to use.


Although you download the data in bytes, when the signal generator uses the data, it recognizes only the bits of interest that you designate in the SCPI command and ignores the remaining bits. This provides greater flexibility in designing a data pattern without the concern of using an even number of bytes as is needed with the binary file data format. The following figure illustrates this concept. The example in the figure shows the bit data SCPI command formatted to download three bytes of data, but only 23 bits of the three bytes are designated as the bits of interest. (For more information on the bit data SCPI command format, see "Downloading User Files" on page 334 and "Commands for Bit File Downloads" on page 338.)

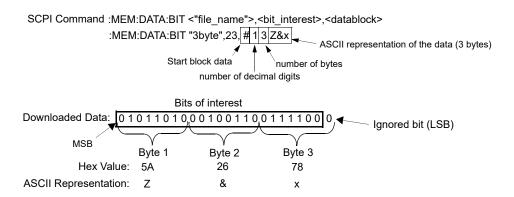


The following figure shows the same downloaded data from the above example as viewed in the signal generator's bit file editor (see the User's Guide for more information) and with using an external hex editor program.

SCPI command to download the data :MEM:DATA:BIT "3byte",23,#13Z&x

As Seen in the Signal Generator's Bit File Editor

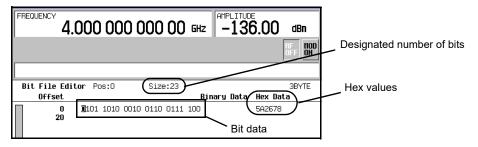

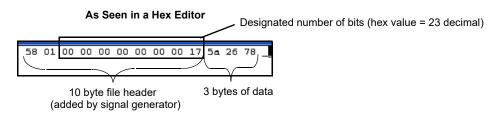


In the bit editor, notice that the ignored bit of the bit-data is not displayed, however the hex value still shows all three bytes. This is because bits 1 through 7 are part of the first byte, which is shown as ASCII character x in the SCPI command line. The view from the hex editor program confirms that the downloaded three bytes of data remains unchanged. To view a downloaded bit file with an external hex editor program, FTP the file to your PC/UNIX workstation. For information on how to FTP a file, see "FTP Procedures" on page 342.

Even though the signal generator views the downloaded data on a bit basis, it groups the data into bytes, and when the designated number of bits is not a multiple of 8 bits, the last byte into one or more 4-bit nibbles. To make the last nibble, the signal generator adds bits with a value of zero. The signal generator does not show the added bits in the bit editor and ignores the added bits when it modulates the data onto the signal, but these added bits do appear in the hex value displayed in the bit file editor. The following example, which uses the


Creating and Downloading User-Data Files User File Data (Bit/Binary) Downloads


same three bytes of data, further demonstrates how the signal generator displays the data when only two bits of the last byte are part of the bits of interest.

SCPI command to download the data :MEM:DATA:BIT "3byte",18,#13Z&x

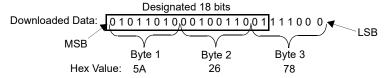

As Seen in the Signal Generator's Bit File Editor

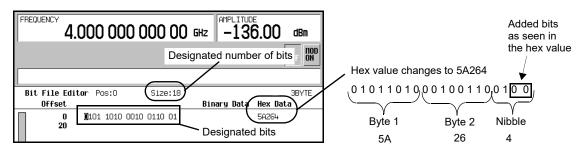

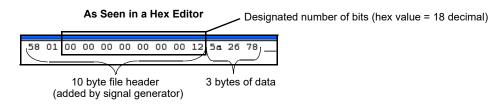

Notice that the bit file editor shows only two bytes and one nibble. In addition, the signal generator shows the nibble as hex value 4 instead of 7 (78 is byte 3–ASCII character x in the SCPI command line). This is because the signal generator sees bits 17 and 18, and assumes bits 19 and 20 are 00. As viewed by the signal generator, this makes the nibble 0100. Even though the signal generator extrapolates bits 19 and 20 to complete the nibble, it ignores these bits along with bits 21 through 24. As seen with the hex editor program, the signal generator does not actually change the three bytes of data in the downloaded file.

For information on editing a file after downloading, see "Modifying User File Data" on page 341.

Binary File Type Data

With the Binary file type, the signal generator sees all of the bytes within the downloaded file and attempts to use all of the data bits. When using this file type, the biggest challenge is creating the data so that the signal generator uses all of the bits (bytes) contained within the file. This is referred to as using an even number of bytes. The method of creating the user file data pattern depends on whether you are using unframed or framed data. The following two sections illustrate the complexities of using the binary file format. You can eliminate these complexities by using the bit file format (see "Bit File Type Data" on page 328).

Unframed Binary Data

When creating unframed data, you must think in terms of bits per symbol; so that your data pattern begins and ends on the symbol boundary, with an even number of bytes. For example, to use 16QAM modulation, the user file needs to contain 32 bytes:


- enough data to fill 16 states 4 times
- end on a symbol boundary
- create 64 symbols (the signal generator requires a minimum of 60 symbols for unframed data)

To do the same with 32QAM, requires a user file with 40 bytes.

When you do *not* use an even number of bytes, the signal generator repeats the data in the same symbol where the data stream ends. This means that your data would not end on the symbol boundary, but during a symbol. This makes it harder to identify the data content of a symbol. The following figure illustrates the use of an uneven number of bytes and an even number of bytes.




Uneven Number of Bytes

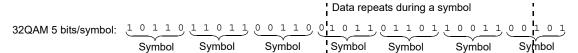

Using an uneven number of bytes makes it harder to identify the data within a symbol.


Even Number of Bytes

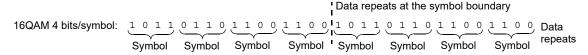

Framed Binary Data

When using framed data, ensure that you use an even number of bytes and that the bytes contain enough bits to fill the data fields within a timeslot or frame. When there are not enough bits to fill a single timeslot or frame, the signal generator replicates the data pattern until it fills the timeslot/frame.

The signal generator creates successive timeslots/frames when the user file contains more bits than what it takes to fill a single timeslot or frame. When there are not enough bits to completely fill successive timeslots or frames, the signal generator truncates the data at the bit location where there is not enough bits remaining and repeats the data pattern. This results in a data pattern discontinuity. For example, a frame structure that uses 348 data bits requires a minimum file size of 44 bytes (352 bits), but uses only 43.5 bytes (348 bits). In this situation, the signal generator truncates the data from bit 3 to bit 0 (bits in the last byte). Remember that the signal generator views the data from MSB to LSB. For this example to have an even number of bytes and enough bits to fill the data fields, the file needs 87 bytes (696 bits). This is enough data to fill two frames while maintaining the integrity of the data pattern, as illustrated in the following figure.

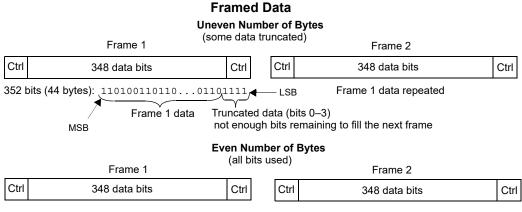

696 bits (87 bytes): 011101100110110110101101101...01101111

Data fills both frames (348 bits per frame) with no truncated bits

For information on editing a file after downloading, see "Modifying User File Data" on page 341.

User File Size

For Custom, when the signal generator creates the signal, it loads the data from non-volatile memory into volatile memory, which is also the same memory that the signal generator uses for Arb-based waveforms. For user data files, volatile memory is commonly referred to as pattern ram memory (PRAM). Because Custom user files use volatile memory, their maximum file size depends on the baseband generator (BBG) option and the amount of available PRAM (volatile memory that resides on the BBG). Table 6-6 shows the maximum user file size for each baseband generator memory option.

Table 6-6 Maximum User File Size

Modulation	Baseband Generator Memory Option					
Format	Standard	021	022	023		
Custom ^a	32 MB	256 MB	512 MB	1024 MB		

a. File size with no other files residing in volatile memory.

For more information on signal generator memory, see "Signal Generator Memory" on page 321. To determine how much memory is remaining in non-volatile and volatile memory, see "Checking Available Memory" on page 325.

Determining Memory Usage for Custom User File Data

For Custom user files, the signal generator uses both non-volatile and volatile (PRAM/waveform) memory: you download the user file to non-volatile memory. To determine if there is enough non-volatile memory, check the available non-volatile memory and compare it to the size of the file to be downloaded.

After you select a user file and turn the format on, the signal generator loads the file into volatile memory for processing:

- It translates each data bit into a 32-bit word (4 bytes).
 The 32-bit words are not saved to the original file that resides in non-volatile memory.
- It creates an expanded data file named AUTOGEN_PRAM_1 in volatile memory while also maintaining a copy of the original file in volatile memory.
 It is the AUTOGEN_PRAM_1 file that contains the 32-bit words and accounts for most of the user file PRAM memory space.
- If the transmission is using unframed data and there are not enough bits in the data file to create 60 symbols, the signal generator replicates the data pattern until there is enough data for 60 symbols. For example, GSM uses 1 bit per symbol. If the user file contains only 24 bits, enough for 24 symbols, the signal generator replicates the data pattern two more times to create a file with 72 bits. The expanded AUTOGEN_PRAM_1 file size would show 288 bytes (72 bits x 4 bytes/bit).

Calculating Volatile Memory (PRAM) Usage for Unframed Data

Use this procedure to calculate the memory size for either a bit or binary file. To properly demonstrate this process, the procedure employs a user file that contains 70 bytes (560 bits), with the bit file using only 557 bits.

1. Determine the AUTOGEN PRAM 1 file size:

The signal generator creates a 32-bit word for each user file bit (1 bit equals 4 bytes).

Binary file 4 bytes x (70 bytes x 8 bits) = 2240 bytes

Bit file 4 bytes x 557 bits= 2228 bytes

2. Calculate the number of memory blocks that the AUTOGEN_PRAM_1 file will occupy:

Volatile memory allocates memory in blocks of 1024 bytes.

Binary file 2240 / 1024 = 2.188 blocks Bit file 2228 / 1024 = 2.176 blocks

3. Round the memory block value to the next highest integer value.

For this example, the AUTOGEN_PRAM_1 file will use three blocks of memory for a total of 3072 bytes.

4. Determine the number of memory blocks that the copy of the original file occupies in volatile memory.

For this example the bit and binary file sizes are shown in the following list:

- Binary file = 70 bytes < 1024 bytes = 1 memory block
- Bit file = 80 bytes < 1024 bytes = 1 memory block

Remember that a bit file includes a 10-byte file header.

5. Calculate the total volatile memory occupied by the user file data:

AUTOGEN_PRAM _1	Original File
3 blocks	1 block
1024 (3 + 1) =	4096 bytes

Downloading User Files

The signal generator expects bit and binary file type data to be downloaded as block data (binary data in bytes). The IEEE standard 488.2–1992 section 7.7.6 defines block data.

This section contains two examples to explain how to format the SCPI command for downloading user file data. The examples use the binary user file SCPI command, however the concept is the same for the bit file SCPI command:

- Command Format
- "Command Format in a Program Routine" on page 335

Command Format

This example conceptually describes how to format a data download command (#ABC represents the block data):

:MEM:DATA <"file_name">,#ABC

<"file name"> the data file path and name indicates the start of the block data the number of decimal digits present in B Α a decimal number specifying the number of data bytes В to follow in C the file data in bytes C file location file name the location of the file within the signal generator file bin: system the data file name as it will appear in the signal my_file generator's memory catalog # indicates the start of the block data 3 B has three decimal digits 240 240 bytes (1,920 bits) of data to follow in C 12%S!4&07#8g*Y9@7... the ASCII representation of some of the block data (binary data) downloaded to the signal generator, however not all ASCII values are printable

In actual use, the block data is not part of the command line as shown above, but instead resides in a binary file on the PC/UNIX. When the program executes the SCPI command, the command line notifies the signal generator that it is going to receive block data of the stated size and to place the file in the signal generator file directory with the indicated name. Immediately following the command execution, the program downloads the binary file to the signal generator. This is shown in the following section, "Command Format in a Program Routine"

Some commands are file location specific and do not require the file location as part of the file name. An example of this is the bit file SCPI command shown in "Commands for Bit File Downloads" on page 338.

Command Format in a Program Routine

This section demonstrates the use of the download SCPI command within the confines of a C++ program routine. The following code sends the SCPI command and downloads user file data to the signal generator's Binary memory catalog (directory).

Line Code-Download User File Data

```
1
     int bytesToSend;
2
     bytesToSend = numsamples;
3
     char s[20];
4
    char cmd[200];
5
     sprintf(s, "%d", bytesToSend);
6
     sprintf(cmd, ":MEM:DATA \"BIN:FILE1\", #%d%d", strlen(s),
7
    bytesToSend);
8
     iwrite(id, cmd, strlen(cmd), 0, 0);
9
     iwrite(id, databuffer, bytesToSend, 0, 0);
     iwrite(id, "\n", 1, 1, 0);
```

Line	Code Description-Download User File Data
1	Define an integer variable (<i>bytesToSend</i>) to store the number of bytes to send to the signal generator.
2	Calculate the total number of bytes, and store the value in the integer variable defined in line 1.
3	Create a string large enough to hold the <i>bytesToSend</i> value as characters. In this code, string s is set to 20 bytes (20 characters—one character equals one byte)
4	Create a string and set its length (cmd[200]) to hold the SCPI command syntax and parameters. In this code, we define the string length as 200 bytes (200 characters).
5	Store the value of <i>bytesToSend</i> in string s. For example, if bytesToSend = 2000; s = "2000".
	sprintf() is a standard function in C++, which writes string data to a string variable.
6	Store the SCPI command syntax and parameters in the string cmd . The SCPI command prepares the signal generator to accept the data.
	 strlen() is a standard function in C++, which returns length of a string.
	 If bytesToSend = 2000, then s = "2000", strlen(s) = 4, so cmd = :MEM:DATA "BIN:FILE1\" #42000.
7	Send the SCPI command stored in the string <i>cmd</i> to the signal generator contained in the variable <i>id</i> .
	 iwrite() is a SICL function in Keysight IO library, which writes the data (block data) specified in the string cmd to the signal generator.
	 The third argument of iwrite(), strlen(cmd), informs the signal generator of the number of bytes in the command string. The signal generator parses the string to determine the number of data bytes it expects to receive.
	 The fourth argument of iwrite(), 0, means there is no END of file indicator for the string. This lets the session remain open, so the program can download the user file data.

Line	Code Description-Download User File Data
8	Send the user file data stored in the array (databuffer) to the signal generator.
	 iwrite() sends the data specified in databuffer to the signal generator (session identifier specified in id).
	 The third argument of iwrite(), bytesToSend, contains the length of the databuffer in bytes. In this example, it is 2000.
	 The fourth argument of iwrite(), 0, means there is no END of file indicator in the data.
	In many programming languages, there are two methods to send SCPI commands and data:
	 Method 1 where the program stops the data download when it encounters the first zero (END indicator) in the data.
	 Method 2 where the program sends a fixed number of bytes and ignores any zeros in the data. This is the method used in our program.
	For your programming language, you must find and use the equivalent of method two. Otherwise you may only achieve a partial download of the user file data.
9	Send the terminating carriage (\n) as the last byte of the waveform data.
	 iwrite() writes the data "\n" to the signal generator (session identifier specified in id).
	— The third argument of <i>iwrite()</i> , 1, sends one byte to the signal generator.
	 The fourth argument of iwrite(), 1, is the END of file indicator, which the program uses to terminate the data download.
	To verify the user file data download, see "Commands for Bit File Downloads" on page 338 and "Commands for Binary File Downloads" on page 339.

Commands for Bit File Downloads

Because the signal generator adds a 10-byte file header during a bit file download, you must use the SCPI command shown in Table 6-7. If you FTP or copy the file for the initial download, the signal generator does not add the 10-byte file header, and it does recognize the data in the file (no data in the transmitted signal).

Bit files enable you to control how many bits in the file the signal generator modulates onto the signal. Even with this file type, the signal generator requires that all data be contained within bytes. For more information on bit files, see "Bit File Type Data" on page 328.

Table 6-7 Bit File Type SCPI Commands

Туре	Command Syntax				
Command	:MEM:DATA:BIT <"file_name">, <bit_count>,<block_data></block_data></bit_count>				
	This downloads the file to the signal generator.				
Query	:MEM:DATA:BIT? <"file_name">				
	Within the context of a program this query extracts the user file data. Executing the query in a command window causes it to return the following information: <b< td=""></b<>				
Query	:MEM:CAT:BIT?				
	This lists all of the files in the bit file directory and shows the remaining non-volatile memory:				
	<pre><bytes bit="" by="" files="" used="">,<available memory="" non-volatile="">,<"file_names"></available></bytes></pre>				

Command Syntax Example

The following command downloads a file that contains 17 bytes:

```
:MEM:DATA:BIT "new_file",131,#21702%S!4&07#8g*Y9@7
```

Since this command is file specific (BIT), there is no need to add the file path to the file name.

After execution of this command, the signal generator creates a file in the bit directory (memory catalog) named "new_file" that contains 27 bytes. Remember that the signal generator adds a 10-byte file header to a bit file. When the signal generator uses this file, it will recognize only 131 of the 136 bits (17 bytes) contained in the file.

For information on downloading block data, see "Downloading User Files" on page 334.

Commands for Binary File Downloads

To download a user file as a binary file type means that the signal generator, when the file is selected for use, sees all of the data contained within the file. For more information on binary files, see "Binary File Type Data" on page 331. There are two ways to download the file: to be able to extract the file or not. Each method uses a different SCPI command, which is shown in Table 6-8.

Table 6-8 Binary File Type Commands

Command Type		Command Syntax				
For	SCPI	:MEMory:DATA:UNPRotected "bin:file_name", <datablock></datablock>				
Extraction		This downloads the file to the signal generator. You can extract the file within the context of a program.				
	FTP ^a	<pre>put <file_name> /user/bin/file_name</file_name></pre>				
No		:MEM:DATA "bin:file_name", <block data=""></block>				
extraction		This downloads the file to the signal generator. You cannot extract the file.				
Query		:MEM:DATA? "bin:file_name"				
		This returns information on the named file: <bit_count>, <block_data>. Within the context of a program, this query extracts the user file, provided it was download with the proper command.</block_data></bit_count>				
Query		:MEM:CAT:BIN?				
		This lists all of the files in the bit file directory and shows the remaining non-volatile memory:				
		<pre><bytes bit="" by="" files="" used="">,<available memory="" non-volatile="">,<"file_names"></available></bytes></pre>				

a. See "FTP Procedures" on page 342.

File Name Syntax

There are three ways to format the file name, which must also include the file path:

- "BIN:file_name"
- "file_name@BIN"
- "/user/BIN/file_name"

Command Syntax Example

The following command downloads a file that contains 34 bytes:

```
:MEM:DATA
```

"BIN:new_file",#2347^%S!4&07#8g*Y9@7.?:*Ru[+@y3#_^,>1

Creating and Downloading User-Data Files User File Data (Bit/Binary) Downloads

After execution of this command, the signal generator creates a file in the Binary (Bin) directory (memory catalog) named "new_file" that contains 34 bytes.

For information on downloading block data, see "Downloading User Files" on page 334.

Selecting a Downloaded User File as the Data Source

This section describes how to format SCPI commands for selecting a user file using commands from the Custom modulation formats. While the commands shown come from only two formats, the concept remains the same when making the data selection for any of the other real-time modulation formats that accept user data. To find the data selection commands for both framed and unframed data for the different modulation formats, see the signal generator's SCPI Command Reference.

1. Select the user file:

Unframed Data

```
:RADio:CUSTom:DATA "BIT:file_name"
:RADio:CUSTom:DATA "BIN:file name"
```

- 2. Configure the remaining signal parameters.
- 3. Turn the modulation format on:

```
:RADio:CUSTom:STATe On
```

Modulating and Activating the Carrier

Use the following commands to modulate the carrier and turn on the RF output. For a complete listing of SPCI commands, refer to the SCPI Command Reference.

```
:FREQuency:FIXed 2.5GHZ
:POWer:LEVel -10.0DBM
:OUTPut:MODulation:STATe ON
:OUTPut:STATe ON
```

Modifying User File Data

There are two ways to modify a file after downloading it to the signal generator:

- Use the signal generator's bit file editor. This works for both bit and binary files, but it converts a binary file to a bit file and adds a 10-byte file header. For more information on using the bit file editor, see the signal generator's User's Guide. You can also access the bit editor remotely using the signal generator's web server. For web server information, refer to the Programming Guide.
- Use a hex editor program on your PC or UNIX workstation, as described below.

Modifying a Binary File with a Hex Editor

1. FTP the file to your PC/UNIX.

For information on using FTP, see FTP Procedures. Ensure that you use binary file transfers during FTP operations.

- 2. Modify the file using a hex editor program.
- **3.** FTP the file to the signal generator's BIN memory catalog (directory).

Modifying a Bit File with a Hex Editor

1. FTP the file to your PC/UNIX.

For information on using FTP, see FTP Procedures. Ensure that you use binary file transfers during FTP operations.

2. Modify the file using a hex editor program.

If you need to decrease or increase the number of bits of interest, change the file header hex value.

80 Byte File From Signal Generator

- 02 80 hex = 640 bits designated as bits of interest 58 01 00 00 00 00 00 00 02 80 5a 26 78 5b 2b 37 47 37 20 23 2f 34 61 63 39 3f 25 2e 69 52 33 22 00000020: 40 2e 74 59 75 76 3a 3e 36 26 24 46 47 6a 3c 7b 00000030: 5c 4b 6c 2d 2b 20 2e 68 47 3f 22 60 7e 75 2a 39 6b 5f 21 60 7e 2c 3a 37 5e 6c 6e 2e 2c 3f 6e

Modified File (80 Bytes to 88 Bytes)

_ 02 bd hex = 701 bits designated as bits of interest

58	01	00	00	00	00	00	00	02	Ьd	5a	26	78	5b	2Ь	37
47	37	20	23	2f	34	61	63	39	3£	25	2e	69	52	33	22
40	2e	74	59	75	76	3а	Зе	36	26	24	46	47	6а	3с	7Ь
5c	4b	бс	2d	2Ь	20	2e	68	47	3£	22	60	7e	75	2а	39
6b	5£	21	60	7e	2c	3а	37	5e	бс	бе	2e	2c	3£	бе	74
23	26	3с	6Ь	2а	76	3£	бе	_							
															,
									$\overline{}$	_					
										_	Ac	ide	d b	/tes	3
	47 40 5c 6b	47 37 40 2e 5c 4b 6b 5f	47 37 20 40 2e 74 5c 4b 6c 6b 5f 21	47 37 20 23 40 2e 74 59 5c 4b 6c 2d 6b 5f 21 60	47 37 20 23 2f 40 2e 74 59 75 5c 4b 6c 2d 2b 6b 5f 21 60 7e	47 37 20 23 2f 34 40 2e 74 59 75 76 5c 4b 6c 2d 2b 20 6b 5f 21 60 7e 2c	47 37 20 23 2f 34 61 40 2e 74 59 75 76 3a 5c 4b 6c 2d 2b 20 2e 6b 5f 21 60 7e 2c 3a	47 37 20 23 2f 34 61 63 40 2e 74 59 75 76 3a 3e 5c 4b 6c 2d 2b 20 2e 68 6b 5f 21 60 7e 2c 3a 37	47 37 20 23 2f 34 61 63 39 40 2e 74 59 75 76 3a 3e 36 5c 4b 6c 2d 2b 20 2e 68 47	47 37 20 23 2f 34 61 63 39 3f 40 2e 74 59 75 76 3a 3e 36 26 5c 4b 6c 2d 2b 20 2e 68 47 3f 6b 5f 21 60 7e 2c 3a 37 5e 6c	47 37 20 23 2f 34 61 63 39 3f 25 40 2e 74 59 75 76 3a 3e 36 26 24 5c 4b 6c 2d 2b 20 2e 68 47 3f 22 6b 5f 21 60 7e 2c 3a 37 5e 6c 6e 23 26 3c 6b 2a 76 3f 6e	47 37 20 23 2f 34 61 63 39 3f 25 2e 40 2e 74 59 75 76 3a 3e 36 26 24 46 5c 4b 6c 2d 2b 20 2e 68 47 3f 22 60 6b 5f 21 60 7e 2c 3a 37 5e 6c 6e 2e 23 26 3c 6b 2a 76 3f 6e	47 37 20 23 2f 34 61 63 39 3f 25 2e 69 40 2e 74 59 75 76 3a 3e 36 26 24 46 47 5c 4b 6c 2d 2b 20 2e 68 47 3f 22 60 7e 6b 5f 21 60 7e 2c 3a 37 5e 6c 6e 2e 2c 23 26 3c 6b 2a 76 3f 6e	47 37 20 23 2f 34 61 63 39 3f 25 2e 69 52 40 2e 74 59 75 76 3a 3e 36 26 24 46 47 6a 5c 4b 6c 2d 2b 20 2e 68 47 3f 22 60 7e 75 6b 5f 21 60 7e 2c 3a 37 5e 6c 6e 2e 2c 3f 23 26 3c 6b 2a 76 3f 6e	58 01 00 00 00 00 00 00 02 bd 5a 26 78 5b 2b 47 37 20 23 2f 34 61 63 39 3f 25 2e 69 52 33 40 2e 74 59 75 76 3a 3e 36 26 24 46 47 6a 3c 5c 4b 6c 2d 2b 20 2e 68 47 3f 22 60 7e 75 2a 6b 5f 21 60 7e 2c 3a 37 5e 6c 6e 2e 2c 3f 6e 23 26 3c 6b 2a 76 3f 6e Added bytes

3. FTP the file to the signal generator's BIT memory catalog (directory).

FTP Procedures

00000000:

00000040: 00000050:

CAUTION

Avoid using the *OPC? or *WAI commands to verify that the FTP process has been completed. These commands can potentially hang up due to the processing of other SCPI parser operations. Refer to the SCPI Command Reference.

NOTE

If you are remotely FTPing files and need to verify the completion of the FTP process, then query the instrument by using SCPI commands such as: ':MEM:DATA:', ':MEM:CAT', '*STB?', 'FREQ?', '*IDN?', 'OUTP:STAT?'. Refer to the SCPI Command Reference.

There are three ways to FTP a file:

- use the Microsoft Internet Explorer FTP feature
- use the signal generator's internal web server
- use the PC or UNIX command window

Using Microsoft's Internet Explorer

 Enter the signal generator's hostname or IP address as part of the FTP URL.

ftp://<host name> or <IP address>

- **2.** Press **Enter** on the keyboard or **Go** from the Internet Explorer window. The signal generator files appear in the Internet Explorer window.
- 3. Drag and drop files between the PC and the Internet Explorer window

Using the Signal Generator's Internal Web Server

1. Enter the signal generator's hostname or IP address in the URL.

http://<host name> or <IP address>

2. Click the **Signal Generator FTP Access** button located on the left side of the window.

The signal generator files appear in the web browser's window.

3. Drag and drop files between the PC and the browser's window

For more information on the web server feature, refer to the Programming Guide.

Using the Command Window (PC or UNIX)

- 1. From the PC command prompt or UNIX command line, change to the proper directory:
 - When downloading from the signal generator, the directory in which to place the file.
 - When downloading to the signal generator, the directory that contains the file.
- 2. From the PC command prompt or UNIX command line, type ftp <instrument, name>.

Where instrument name is the signal generator's hostname or IP address.

- 3. At the User: prompt, press Enter (no entry is required).
- **4.** At the Password: prompt, press **Enter** (no entry is required).

5. At the ftp prompt, type the desired command:

To Get a File From the Signal Generator

get /user/<directory>/<file_name1> <file_name>

To Place a File in the Signal Generator

put <file_name> /user/<directory>/<file_name1>

- <file_name1> is the name of the file as it appears in the signal generator's directory.
- <file_name> is the name of the file as it appears in the PC/UNIX current directory.
- <directory> is the signal generator's BIT or BIN directory.
- 6. At the ftp prompt, type: bye
- 7. At the command prompt, type: exit

Real-Time Custom High Data Rates


Custom has two modes for processing data: serial and parallel. When the data bit rate exceeds 50 Mbps, the signal generator processes data in parallel mode, which means processing the data symbol by symbol versus bit by bit (serial). This capability exists in only the Custom format when using a continuous data stream. This means that it does not apply to a downloaded PRAM file type (covered later in this chapter).


In parallel mode, for a 256QAM modulation scheme, Custom has the capability to reach a data rate of up to 400 Mbps. The FIR filter width is what determines the data rate. The following table shows the maximum data rate for each modulation type. Because the signal generator's maximum symbol rate is 50 Msps, a modulation scheme that has only 1 bit per symbol is always processed in serial mode.

Modulation Type	Bit Rate Range for Internal Data (bit rate = symbol rate x bits per symbol)						
	16 Symbol Wide FIR Filter	32 Symbol Wide FIR Filter	64 Symbol Wide FIR Filter				
BPSK, 2FSK, MSK	1bps-50Mbps	1bps-25 Mbps	1bps-12.5Mbps				

Modulation Type	Bit Rate Range for Internal	Data (bit rate = symbol rat	a (bit rate = symbol rate x bits per symbol)			
C4FM, OQPSK, 4FSK	2bps-100Mbps	2bps-50Mbps	2bps-25Mbps			
IS95 OQPSK, QPSK						
P4DQPSK, IS95 QPSK						
GRAYQPSK, 4QAM						
D8PSK, EDGE, 8FSK, 8PSK	3bps-150Mbps	3bps-75Mbps	3bps-37.5Mbps			
16FSK, 16PSK, 16QAM	4bps-200Mbps	4bps-100Mbps	4bps-50Mbps			
Q32AM	5bps-250Mbps	5bps-125Mbps	5bps-62.5Mbps			
64QAM	6bps-300Mbps	6bps-150Mbps	6bps-75Mbps			
128QAM	7bps-350Mbps	7bps-175Mbps	7bps-87.5Mbps			
256QAM	8bps-400Mbps	8bps-200Mbps	8bps-100Mbps			

The only external effect of the parallel mode is in the EVENT 1 output signal. In serial and parallel mode, the signal generator outputs a narrow pulse at the EVENT 1 connector. But in parallel mode, the output pulse width increases by a factor of bits-per-symbol wide, as shown in the following figure.

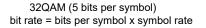

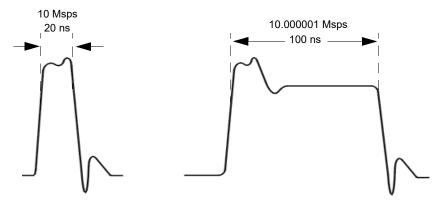

NOTE: The pulse widths values are only for example purposes. The actual width may vary from the above values.

Pattern RAM (PRAM) Data Downloads

NOTE

Refer to Table on page 322 for a list of applicable signal generators.

If you encounter problems with this section, refer to "Data Transfer Troubleshooting" on page 384.

To verify the SCPI parser's responsiveness when remotely using the :MEM:DATA SCPI command to upload files, the file's upload should be verified using the *STB? command. Refer to the SCPI Command Reference.

This section contains information to help you transfer user-generated PRAM data from a system controller to the signal generator's PRAM. It explains how to download data directly into PRAM and modulate the carrier signal with the data.

The control bits included in the PRAM file download, control the following signal functions:

- bursting
- timing signal at the EVENT 1 rear panel connector
- data pattern reset

PRAM data downloads apply to only real-time Custom modulation formats.

PRAM files differ from bit and binary user files. Bit and binary user files (see page 327) download to non-volatile memory and the signal generator loads the user file data into PRAM (volatile/waveform memory) for use. The signal generator adds the required control bits when it generates the signal.

A PRAM file downloads directly into PRAM, and it includes seven of the required control bits for each data bit. The signal generator adds the remaining control bits when it generates the signal. You download the file using either a list or block data format. Programs such as MATLAB or MathCad can generate the data.

This type of signal control enables you to design experimental or proprietary framing schemes.


After selecting the PRAM file, the signal generator builds the modulation scheme by reading data stored in PRAM, and constructing framing protocols according to the PRAM file data and the modulation format. You can manipulate PRAM data by changing the standard protocols for a modulation format such as the symbol rate, modulation type, and filter either through the front panel interface or with SCPI commands.

Understanding PRAM Files

The term PRAM file comes from earlier Keysight products (E443xB ESG). PRAM is another term for waveform memory (WFM1), which is also known as volatile memory. This means that PRAM files and waveform files occupy the same

memory location. The signal generator's volatile memory (waveform memory) storage path is /user/BBG1/waveform. For more information on memory, see "Signal Generator Memory" on page 321.

The following figure shows a PRAM byte and illustrates the difference between it and a bit/binary user file byte. Notice the control bits in the PRAM byte.

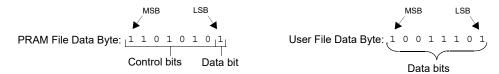

Only three of the seven control bits elicit a response from the signal generator. The other four bits are reserved. Table 6-9 describes the bits for a PRAM byte.

Table 6-9 PRAM Data Byte

Bit	Function	Value	Comments
0	Data	0/1	This is the data bit. It is "unspecified" when burst (bit 2) is set to 0.
1	Reserved	0	Always 0
2	Burst	0/1	1 = RF on 0 = RF off For non-bursted, non-TDMA systems, to have a continuous signal, set this bit to 1 for all bytes. For framed data, set this bit to 1 for on timeslots and 0 for off timeslots.
3	Reserved	0	Always 0
4	Reserved	1	Always 1
5	Reserved	0	Always 0
6	EVENT1 Output	0/1	To have the signal generator output a single pulse at the EVENT 1 connector, set this bit to 1. Use this output for functions such as a triggering external hardware to indicate when the data pattern begins and restarts, or creating a data–synchronous pulse train by toggling this bit in alternate bytes.
7	Pattern Reset	0/1	0 = continue to next sequential memory address. 1 = end of memory and restart memory playback. This bit is set to 0 for all bytes except the last byte of PRAM. To restart the pattern, set the last byte of PRAM to 1.

As seen in Table 6-9, only four bits, shown in the following list, can change state:

- bit 0—data
- bit 2-bursting
- bit 6—EVENT 1 rear panel output
- bit 7—pattern reset

Because a PRAM byte has only four bits that can change states, there are only 15 possible byte patterns as shown in Table 6-10. The table also shows the decimal value for each pattern, which is needed for downloading data using the list format shown on page 351.

Table 6-10 PRAM Byte Patterns and Bit Positions

Bit Function	Pattern Reset	EVENT 1 Output	Reserved (Bit = 0)	Reserved (Bit = 1)	Reserved (Bit = 0)	Burst	Reserved (Bit = 0)	Data	Bit Pattern Decimal Value
Bit Position	7	6	5	4	3	2	1	0	
Bit Pattern	1	1	0	1	0	1	0	1	213
	1	1	0	1	0	1	0	0	212
	1	1	0	1	0	0	0	1	209
	1	1	0	1	0	0	0	0	208
	1	0	0	1	0	1	0	1	149
	1	0	0	1	0	0	0	1	145
	1	0	0	1	0	0	0	0	144
	0	1	0	1	0	1	0	1	85
	0	1	0	1	0	1	0	0	84
	0	1	0	1	0	0	0	1	81
	0	1	0	1	0	0	0	0	80
	0	0	0	1	0	1	0	1	21
	0	0	0	1	0	1	0	0	20
	0	0	0	1	0	0	0	1	17
	0	0	0	1	0	0	0	0	16

Viewing the PRAM Waveform

After the waveform data is written to PRAM, the data pattern can be viewed using an oscilloscope. There is approximately a 12-symbol delay between a state change in the burst bit and the corresponding effect at the RF out. This delay varies with symbol rate and filter settings, and requires compensation to advance the burst bit in the downloaded PRAM file.

PRAM File Size

Because volatile memory resides on the baseband generator (BBG), the maximum PRAM file size depends on the installed baseband generator option.

After downloading, the signal generator translates each downloaded data bit into a 32-bit word:

- 1 downloaded data bit
- 7 downloaded control bits as shown in Table on page 347
- 24 bits added by the signal generator

To properly size a PRAM file, you must determine the file size after the 32-bit translation process. The signal generator measures a PRAM file size in units of bytes; each 32-bit word equals 4 bytes.

Determining the File Size

The following example shows how to calculate a downloaded file size using a PRAM file that contains 89 bytes (data bits plus 7 control bits per data bit):

$$89 \text{ bytes} + [(89 \times 24 \text{ bits}) / 8] = 356 \text{ bytes}$$

Because the file downloads one fourth of the translated 32-bit word, another method to calculate the file size is to multiply the downloaded file size by four:

89 bytes x
$$4 = 356$$
 bytes


See also "Signal Generator Memory" on page 321 and "Checking Available Memory" on page 325.

Minimum File Size

A PRAM file requires a minimum of 60 bytes to create a signal. If the downloaded file contains less than 60 bytes, the signal generator replicates the file until the file size meets the 60 byte minimum. This replication process occurs after you select the file and turn the modulation format on. The following example shows this process using a downloaded 14-byte file:

 During the file download, the 14 bytes are translated into 56 bytes (fourteen 32-bit words).

14 bytes x 4 = 56 bytes

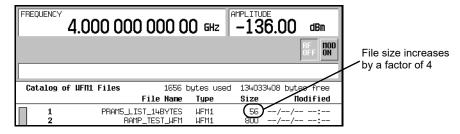


 After selecting and turning the format on, the signal generator replicates the file contents to create the 60 byte minimum file size 60 bytes / 14 bytes = 4.29 file replications

The signal generator rounds this real value up to the next highest integer. In this example, the signal generator replicates the fourteen 32-bit words (56 bytes) by a factor of 5, which makes the final file size 280 bytes. This equates to a 70 byte file.

14 bytes x 5 = 70 bytes 70 + [(70 x 24) / 8] = 280 bytes Or

56 bytes x 5 = 280 bytes

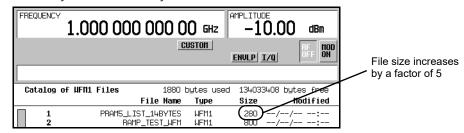

SCPI Command for a List Format Download

Using the list format, enter the data in the command line using comma separated decimal values. This file type takes longer to download because the signal generator must parse the data. When creating the data, remember that the signal generator requires a minimum of 60 bytes. For more information on file size limits, see "PRAM File Size" on page 349.

Command Syntax

```
:MEMory:DATA:PRAM:FILE:LIST
<"file_name">,<uint8>[,<uint8>,<...>]
```

uint8

The decimal equivalent of an unsigned 8-bit integer value. For a list of usable decimal values and their meaning with respect to the generated signal, see Table on page 348.

Command Syntax Example

The following example, when executed, creates a new file in volatile (waveform) memory with the following attributes:

- creates a file named new_file
- outputs a single pulse at the EVENT 1 connector
- bursts the data pattern 1100 seven times over 28 bytes
- transmits 32 non-bursted bytes
- resets the data pattern so it starts again

The following list defines the meaning of the different bytes seen in the command line:

- Send a pulse to the EVENT 1 output, and burst the signal with a data bit of 1.
- 21 Burst the signal with a data bit of 1.
- 20 Burst the signal with a data bit of 0.
- Do not burst the signal (RF output off), and set the data bit to 0.
- Reset the data pattern, do not burst the signal (RF output off), and set the data bit to 0.

SCPI Command for a Block Data Download

The IEEE standard 488.2–1992 section 7.7.6 defines block data. The signal generator is able to download block data significantly faster than list formatted data (see page 351), because it does not have to parse the data. When

creating the data, remember that the signal generator requires a minimum of 60 bytes. For more information on file size limits, see "PRAM File Size" on page 349.

Command Syntax

:MEMory:DATA:PRAM:FILE:BLOCk <"file_name">,<blockdata>

The following sections explain how to format the SCPI command for downloading block data:

- Command Syntax Example
- Command Syntax in a Program Routine

Command Syntax Example

This example conceptually describes how to format a block data download command (#ABC represents the block data):

:MEMory:DATA:PRAM:FILE:BLOCk <"file_name">,#ABC

<"file_name"> the file name as it will appear in the signal generator


indicates the start of the block data

A the number of decimal digits present in B

B a decimal number specifying the number of data bytes

to follow in C

C the PRAM file data in bytes

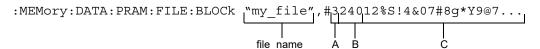

 my_file the PRAM file name as it will appear in the signal

generator's WFM1 memory catalog

indicates the start of the block data

3 B has three decimal digits

240 240 bytes of data to follow in C

12%S!4&07#8g*Y9@7... the ASCII representation of some of the block data (binary data) downloaded to the signal generator, however not all ASCII values are printable

In actual use, the block data is not part of the command line as shown above, but instead resides in a binary file on the PC/UNIX. When the program executes the SCPI command, the command line notifies the signal generator that it is going to receive block data of the stated size, and to place the file in the signal generator file directory with the indicated name. Immediately

following the command execution, the program downloads the binary file to the signal generator. This is shown in the following section, "Command Syntax in a Program Routine"

Command Syntax in a Program Routine

This section demonstrates the use of the download SPCI command within the confines of a C++ program routine. The following code sends the SCPI command and downloads a 240 byte PRAM file to the signal generator's WFM1 (waveform) memory catalog. This program assumes that there is a char array, **databuffer**, that contains the 240 bytes of PRAM data and that the variable **numbytes** stores the length of the array.

Line Code-Download PRAM File Data

```
1
     int bytesToSend;
2
     bytesToSend = numbytes;
3
     char s[4];
     char cmd[200];
     sprintf(s, "%d", bytesToSend);
6
     sprintf(cmd, ":MEM:DATA:PRAM:FILE:BLOCk \"FILE1\", #%d%d",
7
     strlen(s),bytesToSend);
8
     iwrite(id, cmd, strlen(cmd), 0, 0);
     iwrite(id, databuffer, bytesToSend, 0, 0);
     iwrite(id, "\n", 1, 1, 0);
```

Line	Code Description-Download PRAM File Data
1	Define an integer variable (<i>bytesToSend</i>) to store the number of bytes to send to the signal generator.
2	Store the total number of PRAM bytes in the integer variable defined in line 1. numbytes contains the length of the databuffer array referenced in line 8.
3	Create a string large enough to hold the <i>bytesToSend</i> value as characters plus a null character value. In this code, string s is set to 4 bytes (3 characters for the bytesToSend value and one null character—one character equals one byte).
4	Create a string and set its length (cmd[200]) to hold the SCPI command syntax and parameters. In this code, we define the string length as 200 bytes (200 characters).
5	Store the value of <i>bytesToSend</i> in string s. For this example, bytesToSend = 240; s = "240"
6	Store the SCPI command syntax and parameters in the string cmd . The SCPI command prepares the signal generator to accept the data.
	 sprintf() is a standard function in C++, which writes string data to a string variable.
	 strlen() is a standard function in C++, which returns length of a string.
	 bytesToSend = 240, then s = "240" plus the null character, strlen(s) = 4, so cmd = :MEM:DATA:PRAM:FILE:BLOCk "FILE1\" #3240.

Line	Code Description-Download PRAM File Data
7	Send the SCPI command stored in the string <i>cmd</i> to the signal generator contained in the variable <i>id</i> .
	 iwrite() is a SICL function in Keysight IO library, which writes the data (block data) specified in the string cmd to the signal generator.
	 The third argument of iwrite(), strlen(cmd), informs the signal generator of the number of bytes in the command string. The signal generator parses the string to determine the number of data bytes it expects to receive.
	 The fourth argument of iwrite(), 0, means there is no END of file indicator for the string. This lets the session remain open, so the program can download the PRAM file data.
8	Send the PRAM file data stored in the array, databuffer, to the signal generator.
	 iwrite() sends the data specified in databuffer (PRAM data) to the signal generator (session identifier specified in id).
	 The third argument of iwrite(), bytesToSend, contains the length of the databuffer in bytes. In this example, it is 240.
	 The fourth argument of iwrite(), 0, means there is no END of file indicator in the data.
	In many programming languages, there are two methods to send SCPI commands and data:
	 Method 1 where the program stops the data download when it encounters the first zero (END indicator) in the data.
	 Method 2 where the program sends a fixed number of bytes and ignores any zeros in the data. This is the method used in our program.
	For your programming language, you must find and use the equivalent of method two. Otherwise you may only achieve a partial download of the user file data.
9	Send the terminating carriage (\n) as the last byte of the waveform data.
	 iwrite() writes the data "\n" to the signal generator (session identifier specified in id).
	- The third argument of <i>iwrite()</i> , 1, sends one byte to the signal generator.
	 The fourth argument of iwrite(), 1, is the END of file indicator, which the program uses to terminate the data download.

Selecting a Downloaded PRAM File as the Data Source

The following steps show the process for selecting a PRAM file using commands from the Custom modulation format.

1. Select the data type:

:RADio:CUSTom:DATA PRAM

2. Select the PRAM file:

Creating and Downloading User-Data Files Pattern RAM (PRAM) Data Downloads

:RADio:CUSTom:DATA:PRAM <"file_name">

Because the command is file specific (PRAM), there is no need to include the file path with the file name.

- 3. Configure the remaining signal parameters.
- **4.** Turn the modulation format on:

:RADio:CUSTom:STATe On

Modulating and Activating the Carrier

Use the following commands to modulate the carrier and turn on the RF output. For a complete listing of SPCI commands, refer to the SCPI Command Reference.

```
:FREQuency:FIXed 1.8GHZ
:POWer:LEVel -10.0DBM
:OUTPut:MODulation:STATe ON
:OUTPut:STATe ON
```

Storing a PRAM File to Non-Volatile Memory and Restoring to Volatile Memory

After you download the file to volatile memory (waveform memory), you can then save it to non-volatile memory. Remember that a PRAM file downloads to waveform memory. Conversely, when you store a PRAM file to non-volatile memory, it uses the same directory as waveform files. When storing or restoring a file, you must include the file path as part of the file_name variable.

Command Syntax

The first file_name variable is the current location of the file and its name; the second file_name variable is the destination to store the file and its name.

There are three ways to format the file_name variable to include the file path:

Volatile Memory to Non-Volatile Memory

```
:MEMory:COPY "WFM1:file_name","NVWFM:file_name"
:MEMory:COPY "file_name@WFM1","file_name@NVWFM"
:MEMory:COPY
"/user/bbg1/waveform/file_name","/user/waveform/file_name"
```

Non-Volatile Memory to Volatile Memory

```
:MEMory:COPY "NVWFM:file_name","WFM1:file_name"
:MEMory:COPY "file_name@NVWFM","file_name@WFM1"
:MEMory:COPY
"/user/waveform/file_name","/user/bbg1/waveform/file_name"
```

Extracting a PRAM File

When you extract a PRAM file, you are extracting the translated 32-bit word-per-byte file. You cannot extract just the downloaded data. Extracting a PRAM file is similar to extracting a waveform file in that you use the same commands, and the PRAM file resides in either volatile memory (waveform memory) or the waveform directory for non-volatile memory. After extraction, you can

Creating and Downloading User-Data Files Pattern RAM (PRAM) Data Downloads

download the file to the same signal generator or to another signal generator with the proper option configuration that supports the downloaded file. There are two ways to download a file after extraction:

- with the ability to extract later
- with no extraction capability

CAUTION

Ensure that you do not use the :MEMory:DATA:PRAM:FILE:BLOCk command to download an extracted file. If you use this command, the signal generator will treat the file as a new PRAM file and translate the LSB of each byte into a 32-bit word, corrupting the file data.

Command Syntax

This section lists the commands for extracting PRAM files and downloading extracted PRAM files. To download an extracted file, you must use block data. For information on block data, see "SCPI Command for a Block Data Download" on page 351. In addition, there are three ways to format the file_name variable, which must also include the file path, as shown in the following tables.

There are two commands for file extraction:

```
- :MEM:DATA? <"file_name">
- :MMEM:DATA? <"filename">
```

The following table uses the first command to illustrate the command format, however the format is the same if you use the second command.

Table 6-11 Extracting a PRAM File

Extraction Method/Memory Type	Command Syntax Options
SCPI/volatile memory	:MEM:DATA? "WFM1:file_name" :MEM:DATA? "file_name@WFM1" :MEM:DATA? "/user/bbg1/waveform/file_name"
SCPI/non-volatile memory	:MEM:DATA? "NVWFM:file_name" :MEM:DATA? "file_name@NVWFM" :MEM:DATA? "/user/waveform/file_name"
FTP/volatile memory ^a	get /user/bbg1/waveform/file_name
FTP/non-volatile memory ^a	get /user/waveform/file_name

a. See "FTP Procedures" on page 342.

Table 6-12 Downloading a File for Extraction

Download Method/ Memory Type	Command Syntax Options
SCPI/volatile memory	:MEM:DATA:UNPRotected "WFM1:file_name", <blockdata> :MEM:DATA:UNPRotected "file_name@WFM1", <blockdata> :MEM:DATA:UNPRotected "/user/bbg1/waveform/file_name", <blockdata></blockdata></blockdata></blockdata>
SCPI/non-volatile memory	:MEM:DATA:UNPRotected "NVWFM:file_name", <blockdata> :MEM:DATA:UNPRotected "file_name@NVWFM", <blockdata> :MEM:DATA:UNPRotected "/user/waveform/file_name", <blockdata></blockdata></blockdata></blockdata>
FTP/volatile memory ^a	<pre>put <file_name> /user/bbg1/waveform/file_name</file_name></pre>
FTP/non-volatile memory ^a	<pre>put <file_name> /user/waveform/file_name</file_name></pre>

a. See "FTP Procedures" on page 342.

There are two commands that download a file for no extraction:

- :MEM:DATA <"file_name">, <blockdata>
- :MMEM:DATA <"filename">, <blockdata>

The following table uses the first command to illustrate the command format, however the format is the same if you use the second command.

Table 6-13 Downloading a File for No Extraction

Download Method/ Memory Type	Command Syntax Options
SCPI/volatile memory	:MEM:DATA "WFM1:file_name", <blockdata> :MEM:DATA "file_name@WFM1",<blockdata> :MMEM:DATA "user/bbg1/waveform/file_name",<blockdata></blockdata></blockdata></blockdata>
SCPI/non-volatile memory	:MEM:DATA "NVWFM:file_name", <blockdata> :MEM:DATA "file_name@NVWFM",<blockdata> :MEM:DATA /user/waveform/file_name",<blockdata></blockdata></blockdata></blockdata>

Modifying PRAM Files

The only way to change PRAM file data is to modify the original file on a computer and download it again. The signal generator does not support viewing and editing PRAM file contents. Because the signal generator

Creating and Downloading User-Data Files Pattern RAM (PRAM) Data Downloads

translates the data bit into a 32-bit word, the file contents are not recognizable, and therefore not editable using a hex editor program, as shown in the following figure.

60 byte PRAM file prior to downloading

00000000:	85	15	15	15	15	14	15	14	15	14	14	15	15	15	14	14
00000010:	14	15	15	15	14	15	14	14	15	14	14	15	15	14	14	15
00000020:	15	14	14	14	14	14	15	15	14	14	15	15	14	15	15	14
00000030:	14	14	15	14	14	15	15	15	15	15	14	90	_			

60 byte PRAM file after downloading

00000000:	00	01	01	40	00	01	00	40	00	01	00	40	00	01	00	40
00000010:	00	01	00	40	00	00	00	40	00	01	00	40	00	00	00	40
00000020:	00	01	00	40	00	00	00	40	00	00	00	40	00	01	00	40
00000030:	00	01	00	40	00	01	00	40	00	00	00	40	00	00	00	40
00000040:	00	00	00	40	00	01	00	40	00	01	00	40	00	01	00	40
00000050:	00	00	00	40	00	01	00	40	00	00	00	40	00	00	00	40
00000060:	00	01	00	40	00	00	00	40	00	00	00	40	00	01	00	40
00000070:	00	01	00	40	00	00	00	40	00	00	00	40	00	01	00	40
00000080:	00	01	00	40	00	00	00	40	00	00	00	40	00	00	00	40
00000090:	00	00	00	40	00	00	00	40	00	01	00	40	00	01	00	40
000000a0:	00	00	00	40	00	00	00	40	00	01	00	40	00	01	00	40
000000ь0:	00	00	00	40	00	01	00	40	00	01	00	40	00	00	00	40
000000c0:	00	00	00	40	00	00	00	40	00	01	00	40	00	00	00	40
: 0b000000	00	00	00	40	00	01	00	40	00	01	00	40	00	01	00	40
000000e0:	00	01	00	40	00	01	00	40	00	00	00	40	00	00	00	00
000000£0:	_															

FIR Filter Coefficient Downloads

NOTE

If you encounter problems with this section, refer to "Data Transfer Troubleshooting" on page 384.

The signal generator accepts finite impulse response (FIR) filter coefficient downloads. After downloading the coefficients, these user-defined FIR filter coefficient values can be selected as the filtering mechanism for the active digital communications standard.

Data Requirements

There are two requirements for user-defined FIR filter coefficient files:

1. Data must be in ASCII format.

The signal generator processes FIR filter coefficients as floating point numbers.

2. Data must be in List format.

FIR filter coefficient data is processed as a list by the signal generator's firmware. See Sample Command Line.

Data Limitations

NOTE

Modulation filters are real and have an oversample ratio (OSR) of two or greater.

On the N5166B, N5172B, and N5182B with Options 653, 655, or 656, 657, respectively, equalization filters are typically complex and must have an OSR of one (refer to "Using the Equalization Filter" on page 364 and to the User's Guide).

The X-Series signal generators support both Real and Complex filters. Complex filters can only be used with equalization filters. Refer to **Table** and to **Table**. For more on equalization filters, refer to **"Using the Equalization Filter"** on page 364.

Type of Filter	Description
Real	The I and Q samples are independently filtered by a single set of real coefficients.
Complex	The samples are treated as complex $(I+jQ)$ and convolved with the filter coefficients which are specified as $(I+jQ)$ in the time domain.
Г	Filter langths of up to 100% taps are allowed. The aversample ratio (OCD) is the

Filter lengths of up to 1024 taps are allowed. The oversample ratio (OSR) is the number of filter taps per symbol. Oversample ratios from 1 through 32 are possible.

The sampling period (Δt) is equal to the inverse of the sampling rate (FS). For modulation filters, the sampling rate is equal to the symbol rate multiplied by the oversample ratio. For example, the GSM symbol rate is 270.83 ksps. With an oversample ratio of 4, the sampling rate is 1083.32 kHz and Δt (inverse of FS) is 923.088 nsec.

Filter Type	Oversampling Ratio (OSR)	Number of Taps (Maximum)	Symbols/Coefficients (Maximum)
Equalization ^a	1	256	
ARB Custom Modulation ^b	≥ 2		512/1024
Dual ARB Real-Time Modulation ^c	≥2		32/1024

- a. When I/Q timing skew, I/Q delay, or the ACP internal I/Q channel optimization features are active, the effective number of taps for the equalization filter are reduced.
- b. The filter may be sampled to a higher or lower OSR.
- c. The filter will be decimated to a 16 or lower OSR depending on the symbol rate.

Downloading FIR Filter Coefficient Data

The signal generator stores the FIR files in the FIR (/USER/FIR) directory, which utilizes non-volatile memory (see also "Signal Generator Memory" on page 321). Use the following SCPI command line to download FIR filter coefficients (file) from the PC to the signal generator's FIR directory:

```
:MEMory:DATA:FIR <"file_name">,[REAL,]osr,coefficient
:MEMory:DATA:FIR
<"file_name">,COMPlex,osr,realCoefficient,imaginaryCoefficient,...
```

Use the following SCPI command line to guery list data from the FIR file:

```
:MEMory:DATA:FIR? <"file_name">
```

Sample Command Line

The following SCPI command will download a typical set of real modulation FIR filter coefficient values and name the file "FIR1":

```
:MEMory:DATA:FIR
"FIR1",4,0,0,0,0,0,000001,0.000012,0.000132,0.001101,
0.006743,0.030588,0.103676,0.265790,0.523849,0.809508,1,1,0.809508,0.523849,
```

Creating and Downloading User-Data Files FIR Filter Coefficient Downloads

```
0.265790,0.103676,0.030588,0.006743,0.001101,0.000132,0.0000
12,0.000001,0,
0,0,0,0

FIR1 assigns the name FIR1 to the associated OSR (over sample ratio) and coefficient values (the file is then represented with this name in the FIR File catalog)

4 specifies the oversample ratio

0,0,0,0,0,
0.000001,... the FIR filter coefficients
```

Selecting a Downloaded User FIR Filter as the Active Filter

NOTE

For information on manual key presses for the following remote procedures, refer to the User's Guide.

FIR Filter Data for Custom Modulation

The following remote command selects user FIR filter data as the active filter for a custom modulation format.

```
:RADio:CUSTom:FILTer <"file_name">
```

This command selects the user FIR filter, specified by the file name, as the active filter for the custom modulation format. After selecting the file, activate the TDMA format with the following command:

:RADio:CUSTom:STATe On

Modulating and Activating the Carrier

The following commands set the carrier frequency and power, and turns on the modulation and the RF output.

1. Set the carrier frequency to 2.5 GHz:

:FREQuency:FIXed 2.5GHZ

2. Set the carrier power to -10.0 dBm:

:POWer:LEVel -10.0DBM

3. Activate the modulation:

:OUTPut:MODulation:STATe ON

4. Activate the RF output:

:OUTPut:STATe ON

Using the Equalization Filter

NOTE

This section applies to vector models with an installed baseband generator option.

An equalization FIR file can be created externally, uploaded via SCPI, and subsequently selected from the file system (refer to the User's Guide). For information related to downloading FIR file coefficients, refer to the "FIR Filter Coefficient Downloads" on page 360. For information regarding working with FIR file coefficients manually, refer to the User's Guide. For more information on equalization filters, refer to the User's Guide.

This filter can be used to correct and/or impair the RF and External I/Q outputs for the internal I/Q source. This filter will be convolved with the ACP Internal I/Q Channel Optimization filter if that filter is selected, the result of which will be truncated to the center 256 taps. The equalization filter operates at 125MHz (200MHz for N5166B/72B/82B), so all equalization filters must be resampled to 125MHz (200MHz for N5166B/72B/82B) prior to selection, if they are sampled at some other rate.

The signal generator supports equalization filters—either Complex or Real—that are programmable FIR filters with two inputs (I, Q) and two outputs (I, Q) per sample. This 256-tap filter has two modes of operation:

NOTE

The maximum number of taps is 256 (with 2 coefficients per tap for a complex filter) for equalization filters. The minimum number of taps is 2.

Equalization filters can also be referred to as predistortion filters or correction filters.

Type of Filter	Description
Real	The I and Q samples are independently filtered by a single set of real coefficients.
Complex	The samples are treated as complex $(I+jQ)$ and convolved with the filter coefficients which are specified as $(I+jQ)$ in the time domain.

The equalization filter can be turned on and off.

Save and Recall Instrument State Files

NOTE

References to waveform files and some of the other data file types mentioned in the following sections are not available for all models and options of signal generator. Refer to the instrument's Data Sheet for the signal generator and options being used.

The signal generator can save instrument state settings to memory. An instrument state setting includes any instrument state that does not survive a signal generator preset or power cycle such as frequency, amplitude, attenuation, and other user-defined parameters. The instrument state settings are saved in memory and organized into sequences and registers. There are 10 sequences with 100 registers per sequence available for instrument state settings. These instrument state files are stored in the USER/STATE directory. See also, "Signal Generator Memory" on page 321.

The save function does not store data such as Arb waveforms, table entries, list sweep data, and so forth. The save function saves a reference to the waveform or data file name associated with the instrument state. Use the store commands or store softkey functions to store these data file types to the signal generator's memory catalog.

Before saving an instrument state that has a data file or waveform file associated with it, store the file. For example, if you are editing a multitone arb format, store the multitone data to a file in the signal generator's memory catalog (multitone files are stored in the USER/MTONE directory). Then save the instrument state associated with that data file. The settings for the signal generator such as frequency and amplitude and a reference to the multitone file name will be saved in the selected sequence and register number. Refer to the signal generator's User's Guide, Key and Data Field Reference, or the signal generator's Help hardkey for more information on the save and recall functions.

Save and Recall SCPI Commands

The following command sequence saves the current instrument state, using the *SAV command, in register 01, sequence 1. A comment is then added to the instrument state.

```
*SAV 01,1
:MEM:STAT:COMM 01,1,"Instrument state comment"
```

If there is a waveform or data file associated with the instrument state, there will be a file name reference saved along with the instrument state. However, the waveform/data file must be stored in the signal generator's memory

Creating and Downloading User-Data Files Save and Recall Instrument State Files

catalog as the *SAV command does not save data files. For more information on storing file data such as modulation formats, arb setups, and table entries refer to the signal generator's User's Guide.

NOTE

If a saved instrument state contains a reference to a waveform file, ensure that the waveform file resides in volatile memory before recalling the instrument state. For more information, see the User's Guide.

The recall function recalls a saved instrument state. If there is a data file associated with the instrument state, the file will be loaded along with the instrument state. The following command recalls the instrument state saved in register 01, sequence 1.

*RCL 01,1

Save and Recall Programming Example Using VISA and C#

The following programming example uses VISA and C# to save and recall signal generator instrument states. Instruments states are saved to and recalled from your computer. This console program prompts the user for an action: Backup State Files, Restore State Files, or Quit.

The Backup State Files choice reads the signal generator's state files and stores it on your computer in the same directory where the State_Files.exe program is located. The Restore State Files selection downloads instrument state files, stored on your computer, to the signal generator's State directory. The Quit selection exists the program. The figure below shows the console interface and the results obtained after selecting the Restore State Files operation.

The program uses VISA library functions. Refer to the Keysight VISA User's Manual available on Keysight's website: http://www.keysight.com for more information on VISA functions.

The program listing for the State_Files.cs program is shown below. It is available on the CD-ROM in the programming examples section under the same name.

C# and Microsoft .NET Framework

The Microsoft .NET Framework is a platform for creating Web Services and applications. There are three components of the .NET Framework: the common language runtime, class libraries, and Active Server Pages, called ASP.NET. Refer to the Microsoft website for more information on the .NET Framework.

The .NET Framework must be installed on your computer before you can run the State_Files program. The framework can be downloaded from the Microsoft website and then installed on your computer.

Perform the following steps to run the State_Files program.

- 1. Copy the State_Files.cs file from the CD-ROM programming examples section to the directory where the .NET Framework is installed.
- 2. Change the TCPIPO address in the program from TCPIPO::000.000.000.000 to your signal generator's address.
- 3. Save the file using the .cs file name extension.
- 4. Run the Command Prompt program. Start > Run > "cmd.exe". Change the directory for the command prompt to the location where the .NET Framework was installed.
- **5.** Type csc.exe State_Files.cs at the command prompt and then press the Enter key on the keyboard to run the program. The following figure shows the command prompt interface.



The State_Files.cs program is listed below. You can copy this program from the examples directory on the signal generator's Documentation CD-ROM.

NOTE

The State_Files.cs example uses the ESG in the programming code but can be used with X-Series signal generators.

```
// FileName: State_Files.cs
// This C# example code saves and recalls signal generator
instrument states. The saved
// instrument state files are written to the local computer
directory computer where the
// State_Files.exe is located. This is a console application that
uses DLL importing to
// allow for calls to the unmanaged Keysight IO Library VISA DLL.
//
// The Keysight VISA library must be installed on your computer for
this example to run.
// Important: Replace the visaOpenString with the IP address for
your signal generator.
using System;
using System.IO;
using System.Text;
using System.Runtime.InteropServices;
using System.Collections;
using System.Text.RegularExpressions;
namespace State_Files
{
   class MainApp
      // Replace the visaOpenString variable with your instrument's
address.
       static public string visaOpenString =
"TCPIP0::000.000.000.000"; //"GPIB0::19";
        //"TCPIP0::ESG3::INSTR";
```

```
public const uint DEFAULT_TIMEOUT = 30 * 1000;// Instrument
timeout 30 seconds.
        public const int MAX READ DEVICE STRING = 1024; // Buffer
for string data reads.
      public const int TRANSFER_BLOCK_SIZE = 4096;// Buffer for
byte data.
        // The main entry point for the application.
        [STAThread]
static void Main(string[] args)
        {
       uint defaultRM;// Open the default VISA resource manager
    if (VisaInterop.OpenDefaultRM(out defaultRM) == 0) // If no
errors, proceed.
     {
         uint device;
         // Open the specified VISA device: the signal generator
     if (VisaInterop.Open(defaultRM,
visaOpenString,VisaAccessMode.NoLock,
                          DEFAULT_TIMEOUT, out device) == 0)
           // if no errors proceed.
       {
       bool quit = false;
         while (!quit)// Get user input
          Console.Write("1) Backup state files\n" +
                        "2) Restore state files\n" +
                        "3) Quit\nEnter 1,2,or 3. Your choice: ");
             string choice = Console.ReadLine();
           switch (choice)
                {
```

```
case "1":
               BackupInstrumentState(device); // Write instrument
state
               break;
                                        // files to the computer
                 }
                            case "2":
                  {
                RestoreInstrumentState(device); // Read instrument
state
                break;// files to the sig gen
                  }
              case "3":
               quit = true;
               break;
                  }
               default:
               break;
                  }
                 }
               }
            VisaInterop.Close(device);// Close the device
               }
             else
               {
             Console.WriteLine("Unable to open " + visaOpenString);
                }
                VisaInterop.Close(defaultRM); // Close the default
resource manager
            }
             else
               {
          Console.WriteLine("Unable to open the VISA resource
manager");
                }
```

```
}
       /* This method restores all the sequence/register state files
located in
         the local directory (identified by a ".STA" file name
extension)
         to the signal generator.*/
static public void RestoreInstrumentState(uint device)
   {
    DirectoryInfo di = new DirectoryInfo(".");// Instantiate object
class
    FileInfo[] rgFiles = di.GetFiles("*.STA"); // Get the state
files
    foreach(FileInfo fi in rgFiles)
      {
     Match m = Regex.Match(fi.Name, @"^(\d)_(\d\d)");
      if (m.Success)
        {
        string sequence = m.Groups[1].ToString();
        string register = m.Groups[2].ToString();
        Console.WriteLine("Restoring sequence #" + sequence +
                                      ", register #" + register);
/* Save the target instrument's current state to the specified
sequence/
register pair. This ensures the index file has an entry for the
specified
sequence/register pair. This workaround will not be necessary in
future
revisions of firmware.*/
        WriteDevice(device, "*SAV " + register + ", " + sequence +
"\n",
                                true); // << on SAME line!
        // Overwrite the newly created state file with the state
        // file that is being restored.
```

```
WriteDevice(device, "MEM:DATA \"/USER/STATE/" + m.ToString()
+ "\",",
                                false); // << on SAME line!</pre>
        WriteFileBlock(device, fi.Name);
        WriteDevice(device, "\n", true);
                 }
              }
        }
/* This method reads out all the sequence/register state files from
the signal
generator and stores them in your computer's local directory with a
   extension */
static public void BackupInstrumentState(uint device)
   {
   // Get the memory catalog for the state directory
     WriteDevice(device, "MEM:CAT:STAT?\n", false);
      string catalog = ReadDevice(device);
      /* Match the catalog listing for state files which are named
         (sequence#)_(register#) e.g. 0_01, 1_01, 2_05*/
     Match m = Regex.Match(catalog, "\"(\\d_\\d\\d),");
     while (m.Success)
         {
        // Grab the matched filename from the regular expresssion
        string nextFile = m.Groups[1].ToString();
       // Retrieve the file and store with a .STA extension
       // in the current directory
       Console.WriteLine("Retrieving state file: " + nextFile);
         WriteDevice(device, "MEM:DATA? \"/USER/STATE/" + nextFile +
"\"\n", true);
       ReadFileBlock(device, nextFile + ".STA");
       // Clear newline
       ReadDevice(device);
```

```
// Advance to next match in catalog string
       m = m.NextMatch();
        }
   }
/* This method writes an ASCII text string (SCPI command) to the
signal generator.
If the bool "sendEnd" is true, the END line character will be sent
at the
   conclusion of the write. If "sendEnd is false the END line will
not be sent.*/
static public void WriteDevice(uint device, string scpiCmd, bool
sendEnd)
   {
    byte[] buf = Encoding.ASCII.GetBytes(scpiCmd);
    if (!sendEnd) // Do not send the END line character
     {
    VisaInterop.SetAttribute(device, VisaAttribute.SendEndEnable,
0);
     }
    uint retCount;
    VisaInterop.Write(device, buf, (uint)buf.Length, out retCount);
    if (!sendEnd) // Set the bool sendEnd true.
     {
    VisaInterop.SetAttribute(device, VisaAttribute.SendEndEnable,
1);
     }
   }
// This method reads an ASCII string from the specified device
static public string ReadDevice(uint device)
   {
    string retValue = "";
    byte[] buf = new byte[MAX READ DEVICE STRING]; // 1024 bytes
maximum read
```

```
uint retCount:
    if (VisaInterop.Read(device, buf, (uint)buf.Length -1, out
retCount) == 0)
     {
     retValue = Encoding.ASCII.GetString(buf, 0, (int)retCount);
      }
   return retValue;
   }
/* The following method reads a SCPI definite block from the signal
generator
and writes the contents to a file on your computer. The trailing
newline character is NOT consumed by the read.*/
static public void ReadFileBlock(uint device, string fileName)
    // Create the new, empty data file.
    FileStream fs = new FileStream(fileName, FileMode.Create);
    // Read the definite block header:
#{lengthDataLength}{dataLength}
    uint retCount = 0;
    byte[] buf = new byte[10];
    VisaInterop.Read(device, buf, 2, out retCount);
   VisaInterop.Read(device, buf, (uint)(buf[1]-'0'), out retCount);
     uint fileSize = UInt32.Parse(Encoding.ASCII.GetString(buf, 0,
(int)retCount));
    // Read the file block from the signal generator
    byte[] readBuf = new byte[TRANSFER BLOCK SIZE];
    uint bytesRemaining = fileSize;
    while (bytesRemaining != 0)
       uint bytesToRead = (bytesRemaining < TRANSFER BLOCK SIZE) ?</pre>
       bytesRemaining : TRANSFER BLOCK SIZE;
       VisaInterop.Read(device, readBuf, bytesToRead, out retCount);
```

```
fs.Write(readBuf, 0, (int)retCount);
       bytesRemaining -= retCount;
     }
    // Done with file
   fs.Close();
   }
/* The following method writes the contents of the specified file to
specified file in the form of a SCPI definite block. A newline is
NOT appended to the block and END is not sent at the conclusion of
the
write.*/
static public void WriteFileBlock(uint device, string fileName)
    // Make sure that the file exists, otherwise sends a null block
    if (File.Exists(fileName))
    {
    FileStream fs = new FileStream(fileName, FileMode.Open);
     // Send the definite block header:
#{lengthDataLength}{dataLength}
     string fileSize = fs.Length.ToString();
     string fileSizeLength = fileSize.Length.ToString();
    WriteDevice(device, "#" + fileSizeLength + fileSize, false);
     // Don't set END at the end of writes
    VisaInterop.SetAttribute(device, VisaAttribute.SendEndEnable,
0);
     // Write the file block to the signal generator
    byte[] readBuf = new byte[TRANSFER_BLOCK_SIZE];
     int numRead = 0;
    uint retCount = 0;
    while ((numRead = fs.Read(readBuf, 0, TRANSFER_BLOCK_SIZE)) !=
0)
        {
```

```
VisaInterop.Write(device, readBuf, (uint)numRead, out
retCount);
        }
       // Go ahead and set END on writes
    VisaInterop.SetAttribute(device, VisaAttribute.SendEndEnable,
1);
     // Done with file
    fs.Close();
     }
    else
     {
     // Send an empty definite block
    WriteDevice(device, "#10", false);
    }
    }
   }
// Declaration of VISA device access constants
public enum VisaAccessMode
    {
        NoLock = 0,
        ExclusiveLock = 1,
        SharedLock = 2,
        LoadConfig = 4
    }
// Declaration of VISA attribute constants
public enum VisaAttribute
    {
        SendEndEnable = 0x3FFF0016,
       TimeoutValue = 0x3FFF001A
    }
// This class provides a way to call the unmanaged Keysight IO
Library VISA C
```

```
// functions from the C# application
public class VisaInterop
    {
        [DllImport("agvisa32.dll", EntryPoint="viClear")]
        public static extern int Clear(uint session);
        [DllImport("agvisa32.dll", EntryPoint="viClose")]
        public static extern int Close(uint session);
        [DllImport("agvisa32.dll", EntryPoint="viFindNext")]
        public static extern int FindNext(uint findList, byte[]
desc);
        [DllImport("agvisa32.dll", EntryPoint="viFindRsrc")]
        public static extern int FindRsrc(
            uint session,
            string expr,
            out uint findList,
            out uint retCnt,
            byte[] desc);
        [DllImport("agvisa32.dll", EntryPoint="viGetAttribute")]
public static extern int GetAttribute(uint vi, VisaAttribute
attribute, out uint attrState);
        [DllImport("agvisa32.dll", EntryPoint="viOpen")]
        public static extern int Open(
            uint session,
            string rsrcName,
            VisaAccessMode accessMode,
            uint timeout,
            out uint vi);
```

```
[DllImport("agvisa32.dll", EntryPoint="viOpenDefaultRM")]
        public static extern int OpenDefaultRM(out uint session);
        [DllImport("agvisa32.dll", EntryPoint="viRead")]
        public static extern int Read(
            uint session,
            byte[] buf,
            uint count,
            out uint retCount);
        [DllImport("agvisa32.dll", EntryPoint="viSetAttribute")]
public static extern int SetAttribute(uint vi, VisaAttribute
attribute, uint attrState);
        [DllImport("agvisa32.dll", EntryPoint="viStatusDesc")]
        public static extern int StatusDesc(uint vi, int status,
byte[] desc);
        [DllImport("agvisa32.dll", EntryPoint="viWrite")]
        public static extern int Write(
            uint session,
            byte[] buf,
            uint count,
            out uint retCount);
    }
}
```


User Flatness Correction Downloads Using C++ and VISA

This sample program uses C++ and the VISA libraries to download user–flatness correction values to the signal generator. The program uses the LAN interface but can be adapted to use the GPIB interface by changing the address string in the program.

You must include header files and resource files for library functions needed to run this program. Refer to "Running C++ Programs" on page 63 for more information.

The FlatCal program asks the user to enter a number of frequency and amplitude pairs. Frequency and amplitude values are entered through the keyboard and displayed on the console interface. The values are then downloaded to the signal generator and stored to a file named flatCal_data. The file is then loaded into the signal generator's memory catalog and corrections are turned on. The figure below shows the console interface and several frequency and amplitude values. Use the same format, shown in the figure below, for entering frequency and amplitude pairs (for example, 12ghz, 1.2db).

Figure 6-1 FlatCal Console Application

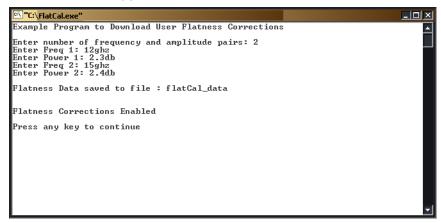

The program uses VISA library functions. The non-formatted viWrite VISA function is used to output data to the signal generator. Refer to the Keysight VISA User's Manual available on Keysight's website:

http:\\www.keysight.com for more information on VISA functions.

The program listing for the FlatCal program is shown below. It is available on the **Documentation CD-ROM** in the programming examples section as flatcal.cpp.

```
// PROGRAM NAME:FlatCal.cpp
//
// PROGRAM DESCRIPTION:C++ Console application to input frequency
and amplitude
// pairs and then download them to the signal generator.
//
// NOTE: You must have the Keysight IO Libraries installed to run
this program.
//
// This example uses the LAN/TCPIP interface to download frequency
and amplitude
// correction pairs to the signal generator. The program asks the
operator to enter
// the number of pairs and allocates a pointer array listPairs[]
sized to the number
// of pairs.The array is filled with frequency nextFreq[] and
amplitude nextPower[]
// values entered from the keyboard.
//
// IMPORTANT: Replace the 000.000.000 IP address in the
instOpenString declaration
// in the code below with the IP address of your signal generator.
#include <stdlib.h>
#include <stdio.h>
#include "visa.h"
#include <string.h>
    IMPORTANT:
//
    Configure the following IP address correctly before compiling
and running
char* instOpenString ="TCPIP0::000.000.000.000::INSTR";//your PSG's
IP address
```

```
const int MAX_STRING_LENGTH=20;//length of frequency and power
strings
const int BUFFER SIZE=256;//length of SCPI command string
int main(int argc, char* argv[])
{
   ViSession defaultRM, vi;
   ViStatus status = 0;
    status = viOpenDefaultRM(&defaultRM);//open the default
resource manager
    //TO DO: Error handling here
    status = viOpen(defaultRM, instOpenString, VI_NULL, VI_NULL,
&vi);
    if (status)//if any errors then display the error and exit the
program
    {
        fprintf(stderr, "viOpen failed (%s)\n", instOpenString);
           return -1;
    }
   printf("Example Program to Download User Flatness
Corrections\n\n");
   printf("Enter number of frequency and amplitude pairs: ");
    int num = 0;
    scanf("%d", &num);
    if (num > 0)
        int lenArray=num*2;//length of the pairsList[] array. This
array
```

```
//will hold the frequency and amplitude arrays
        char** pairsList = new char* [lenArray]; //pointer array
        for (int n=0; n < lenArray; n++)//initialize the pairsList</pre>
array
                                           //pairsList[n]=0;
        for (int i=0; i < num; i++)
          char* nextFreq = new char[MAX_STRING_LENGTH+1];
//frequency array
          char* nextPower = new
char[MAX STRING LENGTH+1];//amplitude array
          //enter frequency and amplitude pairs i.e 10ghz .1db
          printf("Enter Freq %d: ", i+1);
          scanf("%s", nextFreq);
              printf("Enter Power %d: ",i+1);
              scanf("%s", nextPower);
          pairsList[2*i] = nextFreq;//frequency
             pairsList[2*i+1]=nextPower;//power correction
           }
    unsigned char str[256];//buffer used to hold SCPI command
       //initialize the signal generator's user flatness table
       sprintf((char*)str,":corr:flat:pres\n"); //write to buffer
       viWrite(vi, str,strlen((char*str),0);
                                               //write to PSG
       char c = ',';//comma separator for SCPI command
       for (int j=0; j< num; j++) //download pairs to the PSG
       sprintf((char*)str,":corr:flat:pair %s %c
%s\n",pairsList[2*j], c,
                                     pairsList[2*j+1]); // << on</pre>
SAME line!
          viWrite(vi, str,strlen((char*)str),0);
        }
```

```
//store the downloaded correction pairs to PSG memory
      const char* fileName = "flatCal_data";//user flatness file
name
       //write the SCPI command to the buffer str
        sprintf((char*)str, ":corr:flat:store \"%s\"\n", fileName);
//write to buffer
      viWrite(vi,str,strlen((char*)str),0);//write the command to
the PSG
      printf("\nFlatness Data saved to file : %s\n\n", fileName);
      //load corrections
      sprintf((char*)str,":corr:flat:load \"%s\"\n", fileName);
//write to buffer
      viWrite(vi,str,strlen((char*)str),0); //write command to the
PSG
      //turn on corrections
      sprintf((char*)str, ":corr on\n");
      viWrite(vi,str,strlen((char*)str),0");
      printf("\nFlatness Corrections Enabled\n\n");
   for (int k=0; k< lenArray; k++)</pre>
     {
      delete [] pairsList[k];//free up memory
        }
      delete [] pairsList;//free up memory
    }
    viClose(vi);//close the sessions
    viClose(defaultRM);
    return 0;
}
```

Data Transfer Troubleshooting

NOTE

This section applies to vector models with an installed baseband generator option.

This section is divided by the following data transfer methods:

"User File Download Problems" on page 384

"PRAM Download Problems" on page 385

"User FIR Filter Coefficient File Download Problems" on page 387

Each section contains the following troubleshooting information:

- a list of symptoms and possible causes of typical problems encountered while downloading data to the signal generator
- reminders regarding special considerations and file requirements
- tips on creating data, transferring data, data application and memory usage

User File Download Problems

Table 6-14 Use–File Download Trouble – Symptoms and Causes

Symptom	Possible Cause
	Data does not completely fill an integer number of timeslots.
At the RF output, some data modulated, some data missing	If a user file fills the data fields of more than one timeslot in a continuously repeating framed transmission, the user file will be restarted after the last timeslot containing completely filled data fields. For example, if the user file contains enough data to fill the data fields of 3.5 timeslots, firmware will load 3 timeslots with data and restart the user file after the third timeslot. The last 0.5 timeslot worth of data will never be modulated.

Data Requirements

- The user file selected must entirely fill the data field of each timeslot.
- The user file must be a multiple of 8 bits, so that it can be represented in ASCII characters.
- Available volatile memory must be large enough to support both the data field bits and the framing bits.

Requirement for Continuous User File Data Transmission

"Integer Number of Timeslots" Requirement for Multiple-Timeslots

If a user file fills the data fields of more than one timeslot in a continuously repeating framed transmission, the user file is restarted after the last timeslot containing completely filled data fields. For example, if the user file contains enough data to fill the data fields of 3.5 timeslots, the firmware loads 3 timeslots with data and restart the user file after the third timeslot. The last 0.5 timeslot worth of data is never modulated.

To solve this problem, add or subtract bits from the user file until it completely fills an integer number of timeslots

"Multiple-of-8-Bits" Requirement

For downloads to bit and binary memory, user file data must be downloaded in multiples of 8 bits (bytes), since SCPI specifies data in bytes. Therefore, if the original data pattern's length is not a multiple of 8, you need to:

- add bits to complete the ASCII character
- replicate the data pattern to generate a continuously repeating pattern with no discontinuity
- truncate the excess bits

NOTE

The "multiple-of-8-bits" data length requirement is in addition to the requirement of completely filling the data field of an integer number of timeslots.

Using Externally Generated, Real-Time Data for Large Files

When the data fields must be continuous data streams, and the size of the data exceeds the available PRAM, real-time data and synchronization can be supplied by an external data source to the front panel DATA, DATA CLOCK, and SYMBOL SYNC connectors. This data can be continuously transmitted, or can be framed by supplying a data-synchronous burst pulse to the EXT1 INPUT connector on the front panel. Additionally, the external data can be multiplexed into internally generated framing

PRAM Download Problems

Table 6-15 PRAM Download – Symptoms and Causes

Symptom	Possible Cause
The transmitted pattern is interspersed with random, unwanted data.	Pattern reset bit not set. Insure that the pattern reset bit (bit 7, value 128) is set on the last byte of your downloaded data.

Table 6-15 PRAM Download – Symptoms and Causes

Symptom	Possible Cause
	PRAM download exceeds the size of PRAM memory.
ERROR -223, Too much data	Either use a smaller pattern or get more memory by ordering the appropriate hardware option.

Data Requirements

- The signal generator requires a file with a minimum of 60 bytes
- For every data bit (bit 0), you must provide 7 bits of control information (bits 1-7).

Table 6-16 PRAM Data Byte

Bit	Function	Value	Comments
0	Data	0/1	This is the data bit. It is "unspecified" when burst (bit 2) is set to 0.
1	Reserved	0	Always 0
2	Burst	0/1	1 = RF on 0 = RF off For non-bursted, non-TDMA systems, to have a continuous signal, set this bit to 1 for all bytes. For framed data, set this bit to 1 for on timeslots and 0 for off timeslots.
3	Reserved	0	Always 0
4	Reserved	1	Always 1
5	Reserved	0	Always 0
6	EVENT1 Output	0/1	To have the signal generator output a single pulse at the EVENT 1 connector, set this bit to 1. Use this output for functions such as a triggering external hardware to indicate when the data pattern begins and restarts, or creating a data-synchronous pulse train by toggling this bit in alternate bytes.
7	Pattern Reset	0/1	0 = continue to next sequential memory address. 1 = end of memory and restart memory playback. This bit is set to 0 for all bytes except the last byte of PRAM. To restart the pattern, set the last byte of PRAM to 1.

User FIR Filter Coefficient File Download Problems

Table 6-17 User FIR File Download Trouble – Symptoms and Causes

Symptom	Possible Cause
ERROR -321, Out of memory	There is not enough memory available for the FIR coefficient file being downloaded.
ERROR 521, out of monory	To solve the problem, either reduce the file size of the FIR file or delete unnecessary files from memory.
	User FIR filter has too many coefficients.
ERROR –223, Too much data	The filter specification cannot have more than 1024 taps (2048 coefficients for a complex filter).

Data Requirements

- Data must be in ASCII format.
- Downloads must be in list format.
- Filters containing more symbols than the hardware allows (32 for real-time modulation filters, 512 for Arb Custom Modulation filters, and 256 for Equalization filters) will not be selectable for the configuration.

Creating and Downloading User-Data Files Data Transfer Troubleshooting

Symbols	FM signals, generating internally applied 93 reading the service request interrupt 110
.NET framework 365	Sockets LAN, programming 120 states, saving and recalling 101
Numerics	C and VISA
2's complement data format 211	GPIB
2 0 00mptomont data format 211	queries 85
A	GPIB, interface check 75 C/C++ 22
abort function 68	C#
address	programming examples 64
GPIB address 38	remote control 22
IP address 43	VISA, example 366
ARB waveform file downloads	C++
data requirements waveform 205	programming examples 63, 254
download utilities 204	VISA, generating a step-swept signal <mark>96</mark> C++ and VISA
waveform download utilities 250	generating a step-swept signal 96
ASCII, data 71	cable
Auto-IP 45	USB <mark>60</mark>
AUXILIARY INTERFACE, See RS-232	carrier
	activating, FIR filters 363
В	modulating, FIR filters 363
BASIC	Checking Available Memory 325 clear
ABORT 68	command 71
CLEAR 71 ENTER 72	function 71
LOCAL 70, 71	CLS command 176
LOCAL LOCKOUT 70	command
OUTPUT 71	CLS 176
REMOTE 69	format programming, user file data 335
See HP BASIC	format user file, downloading 334
big-endian	prompt 46, 150
byte order, interleaving and byte swapping 237	window PC, using <mark>343</mark> window UNIX, using <mark>343</mark>
changing byte order 208 example, programming 301	commands
binary	downloads, binary file 339
data	downloads, bit file 338
framed 332	GPIB 68, 69, 70, 71, 72
unframed 331	Keysight X-Series, menu path 30
file	computer interface 15
downloads commands 339	computer-to-instrument communication VISA
modifying hex editor 342 bit	configuration, automatic 19
file	VISA configuration, (manual) 19
downloads and commands 338	condition registers, description 181
modifying hex editor 342	Configuration
order, user file 328	IO Libraries 18
status, monitoring 173	configuring, VXI-11 50
values 172	connection wizard <mark>16</mark> controller <mark>39</mark>
bits and bytes 206	creating waveform data
byte order byte swapping 208	C++, using 235
changing byte order 208	saving to a text file for review 237
interleaving I/Q data 237	creating waveform files overview 203
C	crossover cable, private LAN 45
C	csc.exe <mark>365</mark>
AC-coupled FM signals	custom
generating externally applied 91	modulation data, FIR filter <mark>362</mark> real-time, high data rates <mark>344</mark>
CW signals, generating 88	user file data, memory usage 333
data questionable	asor the data, memory usage ood
status register, reading 104	

D	unencrypted files for no extraction 358
DAC input values 209	user flatness <mark>365</mark>
data	utilities
binary, framed 332	IntuiLink for signal generators 204
binary, unframed <mark>331</mark>	Keysight Signal Studio, Toolkit 204
encryption 225	Waveform Download Assistant 204
format, e443xb signal generator <mark>252</mark>	waveform data
requirements, waveform 205	advanced programming languages 243
data questionable	commands 225
See also data questionable registers	e443xb signal generator files 210, 251
filters	encrypted files for extraction 230
BERT transition 200	FTP procedures 231
calibration transition 197	memory locations 225
frequency transition 194	overview 203, 241 simulation software 241
power transition 191	unencrypted files for extraction 228
transition 189	unencrypted files for no extraction 228
groups	user-data files, using 319
BERT status 199	download libraries 21
calibration status 196	download tibraries 21
frequency status 193	data sources 354
power status 190	downloading
status 187	block data
status register	SCPI command 351
reading, using VISA and C 104	SCPI command, programming syntax 353
data questionable registers	C++, using 254
BERT event 201	MATLAB 289
BERT event enable 201	Visual Basic 304
BERT, condition 200	downloads, PRAM data
calibration condition 197	e4438c 346
calibration event 197	e8267d <mark>346</mark>
calibration event enable 198 condition 187	
event 189	E
event enable 189	e443xb
frequency condition 194	files
frequency event 194	downloading 251, 252
frequency event enable 195	formatting 210, 252
power condition 191	programming examples 275
power event 191	edit VISA config 20
power event enable 192	EnableRemote 69
data rates, high	encryption
custom, real-time 344	downloading
data requirements, FIR filter downloads 360	for extraction 230
data types	extracting waveform data 229, 230
binary 320	I/Q files 225
bit 320	securewave directory
defined 320	esg <mark>225</mark>
FIR filter states 320	psg <mark>225</mark>
PRAM 320	waveform data 225
user flatness correction 320	enter function <mark>72</mark>
decryption 225	equalization
developing programs <mark>62</mark>	filter <mark>364</mark>
device, add <mark>20</mark>	filter, user <mark>364</mark>
DHCP 23, 45	errors <mark>32, 47</mark>
directory, root 322	ESE commands 176
DNS 46	even number of samples 216
documentation 11	event enable register
download	description 181
binary file data <mark>331</mark>	event registers
bit file data 328	description 181
user file data	examples
FTP procedures 342	save and recall 366
unencrypted files for extraction 358	Telnet <mark>56</mark>

external media	global settings
See USB media	Keysight X-Series 30, 318
external memory	GPIB
See USB media	address 38, 115
externally applied AC-coupled FM signals	configuration 38
generate, using VISA and C <mark>91</mark>	controller <mark>39</mark>
extract user file data 358	interface 15, 38
extracting	interface cards 36, 67
PRAM files 356	IO libraries <mark>21</mark>
	Keysight X-Series, setting address 38
F	listener <mark>39</mark>
file size	overview 36, 67
determining	program examples 40, 68, 75, 85
PRAM 349	SCPI commands 39
minimum	talker <mark>39</mark>
PRAM 349	troubleshooting <mark>38</mark>
PRAM 349	using VISA and C 75
file types	verifying operation 38
See data types	guides, content of 11
files	
decryption 225	Н
encryption 225	hardware
error messages 32	layers, remote programming 14
extraction commands and file paths 227	status, monitoring 173
header information 214, 225	help mode
large, generating real-time data 385	setting
PRAM, modifying 358	Keysight X-Series 30
transfer methods 226	hex editor
transferring <mark>56</mark>	binary file, modifying 342
waveform download utilities 250	bit file, modifying 342
waveform structure 214	hexadecimal data <mark>301</mark>
filter	hostname 43, 115
equalization 364	hostname, setting
user, equalization 364	DHCP/Auto I/P LAN, Keysight mxg 45
filters	Keysight mxg 44
See transition filters	Keysight mxg menus 43
FIR	HP BASIC 22
filter data	HP Basic
custom modulation 362	local lockout <mark>76</mark>
filters	queries <mark>80</mark>
carrier, activating <mark>363</mark>	
carrier, modulating <mark>363</mark>	1
data limitations 360	I/O libraries
firmware	See IO libraries
loading older versions, caution 13	I/Q data
firmware status, monitoring 173	creating, advanced programming languages 235
front panel	encryption 225
USB	interleaving
connector, Type-A <mark>60</mark>	big endian and little endian 237
flash memory sticks 60	byte swapping 237
media <mark>60</mark>	little endian, byte swapping 237
USB media <mark>60</mark>	waveform data, creating 212
FTP	memory locations 221, 239
commands for downloading and extracting files 358	saving to a text file for review 237
downloading and extracting files, commands 229-230	scaling 210
internet explorer, using 343	waveform structure 216
methods 226	iabort 68
procedures for downloading files 231, 342	ibloc <mark>70, 71</mark>
using <mark>56</mark>	ibstop <mark>68</mark>
web server procedure 233, 343	ibwrt <mark>71</mark>
	iclear <mark>71</mark>
G	IEEE standard 36, 67
Getting Started Wizard 38	igpibllo <mark>70</mark>

iloc 70	Suite 16
input values, DAC 209	Suite, using interactive IO 47
installation guide content 11	version 15.0 17
instrument	version J 50
communication 17, 19	version M 19, 50, 59
state files	psg
overview 365	memory allocation, volatile memory 323
SCPI commands, recalling 365	volatile memory types 321
SCPI commands, saving 365	Waveform Download Assistant 250
instrument status, monitoring 168	Signal Studio 250
interactive IO 16, 47	Signal Studio Toolkit 204
interface	VISA 21, 40, 59, 68
cards 36 , 67	VISA COM Resource Manager 1.0 64
GPIB 38	X-Series
LAN 15	global settings, configuration 30
RS-232 15	global settings, configuring 318
USB (Keysight mxg only) 15	memory allocation, volatile memory 323
, , , , , , , , , , , , , , , , , , , ,	
interleaving, See I/Q data 212	setting GPIB address 38
internal	volatile memory types 321
web server	Waveform Download Assistant 250
FTP procedure 343	web server, on 26
internal storage	Keysight VISA <mark>22</mark>
See storage	
internally applied FM signals	L
generate, using VISA and C 93	LabView <mark>22</mark>
IO Config	LAN
computer-to-instrument communication 19	Auto-IP configuration 45
Keysight IO libraries Suite 16	config 48
VISA, manual 20	configuration
IO Configure	Keysight mxg 44, 45
Using VISA Assistant 48	menu, Keysight mxg <mark>43</mark>
IO interface 17, 19	summary, Keysight mxg 29
IO libraries	web server 23
GPIB interface, installing 36	DHCP configuration 45
GPIB, installing interface cards 67	establishing a connection 242, 243
GPIB, selecting for 21	hostname 43
GPIB, verifying 38	interface 15
interactive IO, using 47	IO libraries <mark>21</mark>
program languages, overview <mark>16</mark>	LXI
signal generator, remote control 14	interface protocols 42
suite, overview 16	manual configuration 44
USB, selecting for 59	Matlab 161
VISA LAN, troubleshooting 48	Matlab, using 156, 161, 163
IP address	overview 42
LAN interface 43	private <mark>45</mark>
LAN, assigning 43	program examples 65, 115, 150, 153, 156, 161, 163
setting 43, 45	programming
setting Keysight mxg 44	using JAVA <mark>65, 150</mark>
iremote 69	queries using sockets 124
	sockets 115
J	sockets LAN 42
JAVA 65, 150	Telnet 52
	troubleshooting 46
Java example 65, 150	· · · · · · · · · · · · · · · · · · ·
example 65, 150	verifying operation 46
V	VXI-11
K	examples, using 115
Keysight	interface protocols 42
BASIC, See HP BASIC	perl, using 153
esg	programming examples, LAN 115
memory allocation, volatile memory 323	sockets, programming 65, 150
volatile memory types 321	LAN Ping Responses 46
Waveform Download Assistant 250	libraries
IO Libraries	GPIB functionality, verifying 38

GPIB I/O libraries, selecting 21	size 224, 324
IO, Keysight 14, 16	volatile and non-volatile 321
selecting, for computer 21	memory usage
USB <mark>59</mark>	user file data
list format, downloading	custom <mark>333</mark>
SCPI command 351	TDMA <mark>333</mark>
list, error messages 32	Microsoft .NET Framework
listener 39	overview 367
little-endian	Mini-B (5-pin)
byte order, interleaving and byte swapping 237	Rear panel connector 60
loading waveforms 247	MSB 207
local	MSB and LSB 328
echo, telnet <mark>54</mark>	MS-DOS Command Prompt 46
function 70	multiple-of-8-bits requirement
local lockout	user file data 385
function 70	multiple-timeslots
HP Basic, using <mark>76</mark>	integer number of timeslots 385
location user-data file type	mxg
binary 325	See Keysight X-Series
LSB 207	MXG ATE
LSB and MSB 328	web-enabled, accessing 24
LSB/MSB 301	
LXI	N
class B, mxg <mark>15, 23</mark>	National Instruments
	NI-488.2 <mark>40, 68</mark>
M	VISA 21, 22, 40, 59, 68
manual 44	negative transition filter, description 181
manual operation 69	NI libraries
manuals, content of 11	SICL
marker file 214, 225	GPIB I/O libraries, selecting 21
MATLAB 22	NI-488.2
download utility <mark>250</mark>	EnableRemote 69
downloading data <mark>241</mark>	functions 21
programming examples 284	GPIB I/O libraries, selecting 21
programming, introduction 22	ibler <mark>71</mark>
Matlab	ibloc <mark>70, 71</mark>
example 156, 161	ibrd <mark>72</mark>
media	ibstop <mark>68</mark>
external	ibwrt <mark>71</mark>
flash memory sticks 60	LAN I/O libraries, selecting 21, 22
front panel USB 60	queries using C++ 82
non-volatile memory, Keysight X-Series 321	SetRWLS 70
waveform memory 220	USB I/O libraries, selecting 59
internal	VISA 21
non-volatile memory, Keysight X-Series 321	non-volatile memory
waveform memory 220	available
USB	SCPI query 326
non-volatile memory, Keysight X-Series 321	external media, Keysight X-Series 321
memory Con also states	internal media, Keysight X-Series 321
See also media	internal storage, Keysight X-Series 321
allocation 222, 323	USB media 60
checking, available 325	USB media, Keysight X-Series 321
defined 220, 321	waveform 220
location user-data file type	8
available memory, checking 325	0
bit 325	OPC commands 176
FIR 325	output command 71
flatness 325	output function 71
instrument state 325	_
PRAM 325 locations 220, 321	Р
· · · · · · · · · · · · · · · · · · ·	PC 301
non-volatile (NVWFM) 225 signal generator, maximum 325	PCI-GPIB 40, 68
Signat generator, maximum 323	PERL

example 153, 163	R
phase discontinuity	real-time
avoiding 218	data files, generating large 385
samples 218	rear panel connector
waveform 217	Mini-B <mark>60</mark>
phase distortion 217	recall states 365
ping	references, content of 11
program 46	register system overview 168
playing waveforms 247	data questionable
polling method (status registers) 174	See also data questionable registers
ports 120	registers
positive transition filter, description 181	See also data questionable registers
PRAM	See also status registers
as data sources 354	condition, description 181
bit positions 347	mxg overall system 170, 171
byte patterns 347 data extracting SCPI command, syntax 357	standard event
downloads, problems 385	bits 182
e4438c, data downloads 346	status 182
e8267d, data downloads 346	status enable 183
file size 349	standard operation
minimum 349	condition 185
file size, determining 349	event 186
files	event enable 186
command syntax, for restoring 356	status groups, register type descriptions 181
command syntax, for storing 356	remote function HP Basic <mark>69</mark>
extracting 356	
modifying 358	setting Keysight X-Series <mark>30</mark>
non-volatile memory, storing 356	remote interface
understanding 346	programming 14
volatile memory, restoring 356	USB 58
volatile memory	remote programming
unframed data, usage 333	hardware layers <mark>14</mark>
waveform, viewing 348	software layers 14
private LAN, using 45	RS-232
problems	interfaces 15
user	
file downloads 384	S
FIR filter downloads 387	samples
programming	even number 216
creating waveform data 235	waveform 216
downloading waveform data 241	save and recall 365
little endian order, byte swapping 237	scaling I/Q data 210
user file data	SCPI
command format 335	error queue 32
programming examples	file transfer methods 226
C# 64, 367	GPIB, overview 36
C++ 63, 254 e443xb	programming languages, common 22
files 275	reference content 11
MATLAB 284	register model <mark>168</mark>
using 62	web server control 23
using GPIB 40, 68, 75, 85	SCPI command, programming syntax
using LAN 65, 115, 150, 153, 156, 161, 163	block data, downloading 353
Visual Basic 301 , 304	SCPI command, syntax
VXI-11 115	PRAM files, extracting 357
programming guide content 11	SCPI commands
h 9	block data, downloading 351
Q	command line structure 227
	download e443xb files 252
queries HP Basic, using 80	encrypted files 230
queue, error 32	extraction 225, 227, 228, 230, 358
quous, 61101 <mark>02</mark>	for status registers
	IEEE 488.2 common commands 176

GPIB function statements 39	register 182
instrument state files, recalling 365	standard operation
instrument state files, saving 365	condition register 185
list format, downloading 351	event enable register 186
no extraction 227	event register 186
unencrypted files 228, 358	transition filters 185
user FIR file downloads	state files 365
sample command line 361	states
securewave directory	saving and recalling, using VISA and C 101
decryption, file 225	status byte
downloading encrypted files 230	group 179
downloads, file 225	mxg overall register system 170, 171
encryption, file 225	status groups
extracting waveform data 229, 230	data questionable
extraction, file 225	BERT 199
sequences	calibration 196
waveforms, building 248	frequency 193
service	overview 187
guide content 11	power 190
service request	registers 181
interrupt	standard
reading, using VISA and C 110	event 182
method	status byte 179
status registers 174	status registers
using 174	See also registers
SetRWLS 70	accessing information 173
setting	bit values 172
help mode	hierarchy 168
Keysight X-Series 30	in status groups 181
SICL 21, 22, 40, 59, 68	monitoring 173
GPIB examples 40, 68	mxg overall system 170, 171
iabort 68	programming 167
iclear 71	SCPI commands 176
igpibllo 70	SCPI model 168
iloc 70	setting and querying 176
iprintf <mark>71</mark>	system overview 168
iremote 69	using 172
iscanf <mark>72</mark>	STB command 176
NI libraries <mark>21</mark>	storage
USB, using 59	internal
VXI-11, programming 116	non-volatile memory, Keysight X-Series 321
signal generator	system requirements 62
monitoring status 168	
volatile memory types <mark>321</mark>	T
Waveform Download Assistant 250	talker <mark>39</mark>
Signal Studio Toolkit 204, 250	TCP/IP 23
simulation software 241	TCPIP 17, 19, 115
sockets	TDMA
example 120, 124	user file data, memory usage 333
Java <mark>65, 150</mark>	Telnet
LAN 51, 115, 120	example <mark>56</mark>
Matlab 156	PC 53
PERL 153, 163	UNIX <mark>54, 56</mark>
UNIX 121	using <mark>52</mark>
Windows 122	Windows 2000 53
software	Windows XP 53
layers, remote programming 14	timeslots, integer number of
libraries, IO 16	multiple-timeslots requirement 385
SRE commands 176	Toolkit, Signal Studio 204, 250
SRQ command 174	transition filters
SRQ method, status registers 174	data questionable
standard event status	BERT 200
enable register 183	negative and positive 189
group 182	

power 191	selecting a downloaded user FIR file 362
data questionable calibration 197	user flatness <mark>365</mark>
data questionable frequency 194	user-data file type
description 181	binary, memory location 325
negative transition, description 181	bit, memory location 325
positive transition, description 181	FIR, memory location 325
standard operation 185	flatness, memory location 325
troubleshooting	instrument state, memory location 325
GPIB 38	memory location 325
LAN 46	PRAM, memory location 325
ping	user-data files
response errors 47	See user data
PRAM downloads 385	Using Connection Expert
USB 60	configuring and running 18
user file downloads 384	
user FIR filter downloads 387	V
VISA assistant 48	-
Type-A front panel USB connector 60	verifying waveforms 247
7,60	Version M
U	IO Libraries, Keysight 19
	version M
unencrypted files	IO Libraries, Keysight 16
downloading for extraction 228, 358	viPrintf 71
downloading for no extraction 228, 358	VISA 18, 22, 59
extracting I/Q data 357	C++, generating a step-swept signal 96
unframed data, usage	COM IO Library 64
volatile memory, PRAM 333	computer-to-instrument communication 19
USB	configuration
cable 60	automatic 17, 20
functionality, verification 60	manual 18, 20
interface 15	CW signals, generating 88
IO libraries 59	data questionable status register, reading 104
setting up 59	FM signals, generating internally applied 93
using, Keysight mxg 58	generating externally applied AC-coupled FM signals 91
verifying operation 60	I/O libraries 21
usb media	LAN client 47
file extensions 223	LAN, using 21
user	library 40, 68, 301
documentation content 11	NI-488.2 21
user data	scanf 72
file, modifying 341	service request interrupt, reading 110
files, creating 319	states, saving and recalling 101
files, downloading 319	USB, using 59
memory 321	viPrintf 71
root directory 322	Visual C++, generating a swept signal 98
user file data, continuous transmission	viTerminate 68
requirements 385	VXI-11 115
user files	CW signals
bit order 328	See VISA and C
bit order, LSB and MSB 328	VISA and C
data	CW signals, generating 88
binary, downloads 327	GPIB
bit, downloads 327	interface check for 75
multiple-of-8-bits requirement 385	queries 85
downloading	VISA Assistant
as the data source 354	GPIB functionality, verifying 38
carrier, activating 356	IO Config 17, 19
carrier, modulating 356	IO, Using interactive 47
command format 334	troubleshooting 48
modulating and activating the carrier 341	verifying instrument communication 47
selecting the user file as the data source 341	Visual Basic
size 332	IDE 64
user FIR file downloads	programming examples 301
non-volatile memory <mark>361</mark>	programming language <mark>22</mark>

references 64	waveform generation
Visual C++	C++ 254
NI-488.2, queries using <mark>82</mark>	MATLAB, using 284
VISA, generating a swept signal <mark>98</mark>	Visual Basic 6.0, using 301
Visual C++ and VISA	waveforms
generating a swept signal <mark>98</mark>	loading <mark>247</mark>
viTerminate 68	playing <mark>247</mark>
volatile memory	sequences, building 248
file, decryption 225	verifying 247
file, encryption <mark>225</mark>	viewing, PRAM 348
memory allocation 222	web server
Keysight esg 323	communicating with 23
Keysight psg 323	internal <mark>343</mark>
securewave directory 225	Keysight
memory, volatile (WFM1) 225	X-Series 26
signal generator 321	Windows
types, signal generators 321	2000 <mark>53</mark>
waveform 220	2000 Professional 17
volatile memory available, SCPI query 326	98 16
VXI-11 115	ME 16
configuration 50	NT 16, 19
programming 115	Vista Business 17
programming interface examples 115	XP 17 , 53
SICL, using 116	WriteIEEEBlock 304
using 50	
VISA, using 118	
W	
waveform data	
2's complement data format 211	
bits and bytes 206	
byte order 208	
byte swapping 208	
commands for downloading and extracting 225-233, 334-344	
creating 235	
DAC input values 209	
data requirements 205	
·	
encrypted data 223	
encryption 225–230	
explained 206	
extracting 225, 228–229	
I and Q interleaving 212 LSB and MSB 207	
saving to a text file for review 237	
waveform download	
utilities differences 250	
waveform downloads	
advanced programming languages, using 243	
download utilities, using 250	
HP BASIC, using 308–314	
memory 220	
allocation 222, 323 size 224, 324	
volatile and non-volatile 220	
samples 216	
simulation software, using 241	
structure 216	
using advanced programming languages 243	
with Visual Basic 6.0 304	
waveform files	
creating 203 downloading 203	
uuwiiluduiiiy 200	



This information is subject to change without notice.

© Keysight Technologies 2012-2019

Edition 1, July 2019

N5180-90074

www.keysight.com