

Wasp WDT950 Handheld Terminal (38 Keys)





User's Manual

Preface

About This Manual

This manual explains how to install, operate and maintain our product. No part of this publication may be reproduced or used in any form, or by any electrical or mechanical means, such as photocopying, recording, or information storage and retrieval systems, without permission in writing from the manufacturer. The material in this manual is subject to change without notice.

Regulatory Compliance Statements

FCC Warning Statement

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.
- 1. This transmitter must not be co-located or operating in conjunction with

- any other antenna or transmitter.
- This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. To maintain compliance with FCC RF exposure requirements, avoid direct contact to the transmitting antenna during transmitting.
- 3. Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

FCC Label Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference.
- 2. This device must accept any interference received, including interference that may cause undesired operation.

RF Radiation Exposure Statement

For body contact during operation, this device has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.0 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Canadian Compliance Statement

This device complies with Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

- the device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
- (ii) for devices with detachable antenna(s), the maximum antenna gain permitted for devices in the bands 5250-5350 MHz and 5470-5725 MHz shall be such that the equipment still complies with the e.i.r.p. limit;
- (iii) for devices with detachable antenna(s), the maximum antenna gain

- permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits as appropriate; and
- (iv) where applicable, antenna type(s), antenna models(s), and worst-case tilt angle(s) necessary to remain compliant with the e.i.r.p. elevation mask requirement set forth in section 6.2.2.3 shall be clearly indicated.

Canada, avis d'Industry Canada (IC)

Cet appareil est conforme avec Industrie Canada exemptes de licence RSS standard(s).

Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas causer d'interférence et (2) cet appareil doit accepter toute interférence, notamment les interférences qui peuvent affecter son fonctionnement.

- (i) les dispositifs fonctionnant dans la bande de 5 150 à 5 250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;
- (ii) ii.pour les dispositifs munis d'antennes amovibles, le gain maximal d'antenne permis pour les dispositifs utilisant les bandes de 5 250 à 5 350 MHz et de 5 470 à 5 725 MHz doit être conforme à la limite de la p.i.r.e;
- (iii) iii.pour les dispositifs munis d'antennes amovibles, le gain maximal d'antenne permis (pour les dispositifs utilisant la bande de 5 725 à 5 850 MHz) doit être conforme à la limite de la p.i.r.e. spécifiée, selon le cas;
- (iv) lorsqu'il y a lieu, les types d'antennes (s'il y en a plusieurs), les numéros de modèle de l'antenne et les pires angles d'inclinaison nécessaires pour rester conforme à l'exigence de la p.i.r.e. applicable au masque d'élévation, énoncée à la section 6.2.2.3, doivent être clairement indiqués.

RF Radio Frequency Exposure Information

The radiated output power of the Wireless Device is below the Industry Canada (IC) radio frequency exposure limits. The Wireless Device should be used in such a manner such that the potential for human contact during normal

operation is minimized.

This device has been evaluated for and shown compliant with the IC Specific Absorption Rate ("SAR") limits when operated in portable exposure conditions.

Informations concernant l'exposition aux fréquences radio (RF)

La puissance de sortie émise par l'appareil de sans fil est inférieure à la limite d'exposition aux fréquences radio d'Industry Canada (IC). Utilisez l'appareil de sans fil de façon à minimiser les contacts humains lors du fonctionnement normal. Ce dispositif a été évalué pour et démontré conforme à la Taux IC d'absorption spécifique ("SAR") des limites lorsqu'il est utilisé dans des conditions d'exposition portatifs.

European Conformity Statement

Wasp Barcode Technologies herewith declares that the Wasp product is in compliance with the essential requirements and all other provisions of the RED 2014/53/EU directive.

The declaration of conformity is available for download here.

CE RF Exposure Compliance

For body-worn operation, this device has been tested and meets the ICNIRP guidelines and the European Standard EN 62209-2, for use with dedicated accessories, SAR is measured with this device at a separation of 0.5 cm to the body, while transmitting at the highest certified output power level in all frequency bands of this device. Use of other accessories which contain metals may not ensure compliance with ICNIRP exposure guidelines.

CE Mark Warning



RoHS Statement

This device conforms to RoHS (Restriction of Hazardous Substances) European Union regulations that set maximum concentration limits on hazardous materials used in electrical and electronic equipment.

Waste electrical and electronic equipment (WEEE)



Wasp has set up a policy and process to meet the 2012/19/EU concerning electronic waste disposal.

For more detailed information of the electronic waste disposal of the products you have purchased from Wasp directly or via Wasp's resellers, you shall either contact your local supplier or visit here.

Taiwan NCC Warning Statement

低功率電波輻射性電機管理辦法

第十二條: 經型式認證合格之低功率射頻電機, 非經許可, 公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條: 低功率射頻電機之使用不得影響飛航安全及干擾合法通信; 經發現有干擾現象時, 應立即停用, 並改善至無干擾時方得繼續使用。

前項合法通信,指依電信法規定作業之無線電通信。

低功率射頻電機需忍受合法通信或工業、科學及醫療用電波輻射性電機設備 之干擾。

SAR標準值2.0W/KG, 送測產品實測值為: 0.395 (W/KG)

注意事項:

- 1. 使用過度恐傷害視力。
- 2. 使用30分鐘請休息10分鐘;未滿2歲幼兒不看螢幕,2歲以上每天看螢幕不要超過

1小時。

- 3. 減少電磁波影響,請妥適使用。
- 4. 因應各地區/國家開放頻道不同,請依據當地主管機關與電信業者實際公告資訊 為主,如服務細則有所變更,請自行洽詢電信業者,恕不另通知。
- 5. 無線資訊傳輸設備避免影響附近雷達系統之操作

Note:

Within the 5.25-5.35 GHz band, U-NII devices will be restricted to indoor operations to reduce any potential for harmful interference to co-channel MSS operations.

Laser Information

The Wasp product is certified in the U.S. to conform to the requirements of DHHS/CDRH 21CFR Subchapter J and to the requirements of IEC 60825-1. Class II and Class 2 products are not considered to be hazardous. The Wasp product contains internally a Visible Laser Diode (VLD) whose emissions do not exceed the maximum limits as set forth in the above regulations. The scanner is designed so that there is no human access to harmful laser light during normal operation, user maintenance or prescribed service operations.

The laser safety warning label required by the DHHS/IEC for the Wasp product's optional laser scanner module is located on the memory compartment cover, on the back of the unit.

* Laser information only applies to the products with laser components.

CAUTION! Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser light. Use of optical instruments with the scanner, including binoculars, microscopes, and magnifying glasses, will increase eye damage. This does not include eyeglasses worn by the user.

LED Information

The Wasp product contains LED indicator(s) or LED ring whose luminance is not harmful to human eyes during normal operation, user maintenance or prescribed service operations.

*LED information only applies to the products with LED components.

Battery Notice

- 1. To guarantee optimal performance, it is recommended that rechargeable batteries be replaced every year, or after 500 charging cycles are completed. It is normal for the battery to balloon or expand after one year or 500 cycles. Although it does not cause damage, it cannot be used again and must be disposed of according to the location's safe battery disposal procedures.
- 2. If a battery performance decreases more than 20%, the battery is at the end of its life cycle. Stop use and ensure the battery is disposed of properly.
- 3. The length of time that a battery lasts depends on the battery type and how the device is used. Conserve the battery life by doing the following:
 - Avoid fully uncharging the battery because this places additional strain on it. Several partial uncharges with frequent charges are better than a fully uncharged battery. Charging a partially charged battery does not cause harm to the unit.
 - DO NOT leave the battery pack or the device in a hot condition such as in a car with the doors closed on a hot day or similar environment, and/or under direct sunlight for an extended period of time. High-temperature conditions might cause battery damaged for further safe usage. Keep the device with the battery within acceptable operating temperatures (please refer to the "specification" section for further details).

To guarantee optimal battery performance, we generally recommend you replace your rechargeable batteries every two years, or after 500 charging cycles. Failure to comply with the above warnings and using the battery neglectfully may lead to critical consequences.

Do not leave the battery uncharged and unused for an extended

period of time, the battery will wear out and the longevity of the battery will be at least half of one with frequent charges.

- 4. Protect battery life by not over or under charging the battery.
- 5. Please do not leave battery unused for a long time without charging it. Despite Wasp's safety precautions, the battery pack may begin to change shape. If so, stop using it immediately. Please check to see if you are using a proper power adapter to charge the battery or contact your service provider for service.
- 6. If you cannot charge the battery after it has been idle for an extended period of time and it begins to heat up, please do not try to charge it. It may not be functional anymore.
- 7. Please only use the original battery from Wasp. Using a third-party battery can damage our products. Please note that when such damage occurs, it is not covered by Wasp's warranty policy.

CAUTION!

- RISK OF EXPLOSION IF BATTERY IS REPLACED INCORRECTLY.
 DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
- 如果更換不正確之電池行事會有爆炸的風險 請依製造商說明書處理用過之電池
- 如果更换不正确之电池行事会有爆炸的风险 请依制造商说明书处理用过之电池

Battery charge notice

It is important to consider temperature when the battery pack is charging. Charging is most efficient at normal room temperature or in a slightly cooler environment. It is essential that batteries are charged within the stated range of 0°C to 40°C. Charging batteries outside of the specified range could damage the batteries and shorten their life cycle.

CAUTION! Do not charge batteries at a temperature lower than 0°C. This will make the batteries unstable and dangerous. Please use a battery temperature detecting device for a charger to ensure a safe charging temperature range.

CAUTION! To ensure the unit works properly, please keep all connectors away from contaminants such as dust, grease, mud, and water. Negligence may cause the unit to lose communication, short circuit, overheat, and so on.

CAUTION! If the connector is damaged, please ensure the connector is fully repaired before use to avoid causing a short circuit.

Storage and safety notice

Although charged batteries may be left unused for several months, their capacity may be depleted due to buildup of internal resistance. If this happens, they will require recharging prior to use. Batteries may be stored at temperatures between -20°C to 60°C, however they may deplete more rapidly at higher temperatures. It is recommended to store batteries at room temperature.

* The message above only applies to the usage of the removable batteries.

For the products with non-removable batteries / without batteries, please refer to the specification of each product.

Product Operation and Storage Notice

The Wasp product has applicable operation and storage temperature conditions. Please follow the limitation of suggested temperature conditions to avoid failure, damage or malfunction.

*For applicable temperature conditions, please refer to the specification of each product.

Adapter Notice

- 1. Please do not leave the power adapter in the socket when it is not connected to your Wasp product for charging.
- 2. Please remove the power adapter when the battery is fully recharged.
- The bundled power adapter that comes with your Wasp product is not meant to be used outdoors. An adapter exposed to water or rain, or a very humid environment can cause damage to both the adapter and the product.
- 4. Please only use the bundled power adapter or same specification of adapter to charge your Wasp product. Using the wrong power adapter can damage your Wasp product.

^{*} The message above only applies to the product connected to the adapter.

For the products without using the adapters, please refer to the specification of each product.

Hearing Damage Warning

To prevent possible hearing damage, do not listen at high volume levels for long periods.



Figure 1 – Warning label (IEC 60417-6044)

Technical Support

Wasp's professional support team is available to quickly answer questions or assist with technical-related issues. Should an equipment problem occur, please contact Wasp technical service.

For more information, visit https://support.waspbarcode.com.

Warranty Policy

The following items covered under the Wasp Limited Warranty are free from defects during normal use:

The warranty period is varied from each country. Please consult with your supplier or Wasp local office for actual length of warranty period to your purchased product.

Warranty becomes void if equipment is modified, improperly installed or used, damaged by accident or neglect, or if any parts are improperly installed or replaced by the user.

Table of Contents

	i
Regulatory Compliance Statements	i
Laser Information	vii
LED Information	vii
Battery Notice	X
Adapter Notice	X
Hearing Damage Warning	xi
Worldwide Support	xii
Warranty Policy	xiii
Chapter 1 - Overview	1
1.1 Package	1
1.2 Product Detail	
1.3 Specifications	
1.4 Getting Started	
1.5 Keypad Definition	
Chapter 2 – Installation & Operation	
2.1 Barcode Setting	24
2.2 HF Setting	
-	
2.3 WWAN Setting	
2.3 WWAN Setting	
2.4 WLAN Setting	32
2.4 WLAN Setting	32 37
2.4 WLAN Setting	32 37 38
2.4 WLAN Setting 2.6 PAN Setting 2.7 GPS Setting 2.8 PC Setting	32 37 38
2.4 WLAN Setting 2.6 PAN Setting 2.7 GPS Setting 2.8 PC Setting 2.9 Camera Setting	32 37 38 39
2.4 WLAN Setting 2.6 PAN Setting 2.7 GPS Setting 2.8 PC Setting 2.9 Camera Setting 2.10 Performing a Hardware Reset	
2.4 WLAN Setting 2.6 PAN Setting 2.7 GPS Setting 2.8 PC Setting 2.9 Camera Setting 2.10 Performing a Hardware Reset 2.11 Performing Factory data reset	
2.4 WLAN Setting 2.6 PAN Setting 2.7 GPS Setting 2.8 PC Setting 2.9 Camera Setting 2.10 Performing a Hardware Reset 2.11 Performing Factory data reset 2.12 KeyRemap	
2.4 WLAN Setting 2.6 PAN Setting 2.7 GPS Setting 2.8 PC Setting 2.9 Camera Setting 2.10 Performing a Hardware Reset 2.11 Performing Factory data reset	32 37 38 39 40 44 45 47
2.4 WLAN Setting 2.6 PAN Setting 2.7 GPS Setting 2.8 PC Setting 2.9 Camera Setting 2.10 Performing a Hardware Reset 2.11 Performing Factory data reset 2.12 KeyRemap 2.13 Split Screen	32 37 38 39 40 44 45 50

Chapter 3 – Introduction to Applications	55	
3.1 USS (scan service)	55	
3.2 File Manager	59	
3.3 Software Update	60	
3.4 StageGO	61	
3.5 MoboLink	63	



Chapter 1 - Overview

1.1 Package

Please make sure the following items are in the WDT950 box. If something is missing or damaged, please contact your Wasp representative.

The basic package contents

- WDT950
- Battery
- Hand Strap
- Quick Start Guide
- Regulatory Compliance Statements

Optional accessories

- Terminal Power Adapter
- Cradle + Cradle Adapter
- 1-slot Terminal & Battery Charging Cradle
- 1-slot Ethernet & Battery Cradle
- 1-slot USB & Battery Cradle
- Glass Screen Protector
- USB Type C Cable



1.2 Product Detail



1	Scanner Window	6	Receiver
2	13m Camera & LED	7	Pogo pin
	Flashlight		
3	LED Indicator	8	USB Type C Port
4	Scanner Trigger Key	9	Battery Release Latch
5	Keypad	10	Battery Cover



1.3 Specifications

System Features				
CPU	Qcta-core 2.3 GHz,			
	Qualcomm 720G (SM7125)			
Memory	4 GB RAM			
	64 GB Flash			
Expanded slot	Micro SD/TF x 1 (maximum of 128 GB)			
os	Android™ 10			
Languages support	English, Simplified Chinese, Traditional Chinese, Japanese, Spanis			
	German, French and multiple languages			
Display				
4"TFT-LCD WVGA (480	0x800) color screen (400 nits)			
Touch Panel				
Ultra-sensitive capacitiv	ve touch screen, compatible with gloves and support wet resistance			
Keypad				
Numeric and Function ((Default) / Numeric keypad			
Hard silicon keypad with backlight				
Indicator				
LED, Speaker, Vibrator				
Engines				
2D	N3603			
	N6703			
	EX30			



Audio					
One speaker (8 ohm / 2W output), One receiver (32 ohm), MIC and Headset interface					
connect to Type-C connector					
Regulatory Approvals					
CE, RED, FCC, NCC, VCCI, 7	TELEC, CCC, SRRC				
I/O Interfaces					
USB	USB Type-C				
	Support USB OTG				
POGO PIN	Custom IO connector (include USB Host)				
SIM Slot	Nano-SIMx 2				
Communication					
Camera	13 MP Rear and Flashlight				
Bluetooth®	Bluetooth® 5.1				
WLAN	802.11a/b/g/n, 802.11ax-ready, 802.11ac Wave 2(Dual				
Antenna, MIMO 2X2 support)					
WWAN	LTE Advanced Support Up to CAT4				
	LTE (FDD) – Bands 1, 2, 3, 4, 5, 7, 8, 17, 20, 28				
	LTE (TDD) – Bands 38, 39, 40, 41				
	UMTS/HSPA+ (3G) – Bands 1, 2, 5, 8				
	GSM/GPRS/EDGE Quad-Band (850/900/1800/1900 MHz)				
GPS	GPS, GLONASS, Galileo, BeiDou				
RFID					
UHF	Frequency: 865~868MHz, 902~928MHz				
	Protocol: EPC global Class 1 Gen 2 ISO 18000-6C/6B				
	Antenna gain: 3dbi				
Output Power: 1-30dbm adjustable					
Data Capture Range: 6~8 meters"					
HF	Frequency 13.56Mhz				
	ISO14443A/B, ISO15693 standard, NFC, MIFARE, Felica"				
Power Source					
Standard Battery	3.7V 6700mAh				
Hot Swap Battery	Keep applications active up to 1 minute				
Enclosure					



Wasp WDT950 (38 keys) User's Manual

Weight	395g (with battery)		
Dimension	195 mm x 72 mm x 34 mm		
Environmental			
Operating Temperature	-4°F to 122°F (-20°C to 50°C)		
Storage Temperature	-22°F to 140°F (-30°C to 60°C)		
Charging Temperature	32°F to 113°F (0°C to 45°C)		
Relative Humidity	5% ~ 95% (non-condensing)		
Drop test to Concrete	1.8m		
	2.4m (with Bumper)		
ESD	+/-8KV direct discharge, +/-15KV air discharge		
Environmental Sealing	IP65 / IP67		

Note:

The device is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range.

	AT	BE	BG	HR	CY	CZ	DK
	EE	FI	FR	DE	EL	HU	ΙE
	IT	LV	LT	LU	MT	NL	PL
	PT	RO	SK	SI	ES	SE	UK
	IS	LI	NO	CH	TR		



1.4 Getting Started

1.4.1 Install / Remove the Battery Cover

- Install the battery pack and the battery cover
- 1. Slide and position the battery pack, making sure the battery contacts are aligned with the contacts in the battery compartment.



2. Make sure the battery release latch is in the unlocked position.



3. Insert the battery cover up to 45 degrees (45°), from bottom to top. Press the battery cover down to secure in place and then slide the battery release latch to the locked position.







Remove the battery cover and the battery

There are two ways to remove the battery, the following is the first method.

1. Make sure the battery release latch is in the unlocked position.



2. Grab the battery cover from the two recesses and lift gently upward to remove the battery cover.



 There are two ways to remove the battery. First one is by pulling the pull tab in the battery compartment to remove the battery.
 Make sure the pull tab stays inside of the battery compartment when closing the cover.





WARNING! There is a risk of fire and burns if the battery is handled improperly. DO NOT disassemble, crush, puncture, short external contacts, or dispose the battery pack in fire or water. DO NOT attempt to open or service the battery. Dispose of used batteries according to local recycling guidelines in your area.

NOTE: After installing the battery, make sure the battery cover is securely closed.



The second way to remove the battery is shown as follows:

1. Make sure the battery release latch is in the unlocked position.



2. Grab the battery cover from the two recesses and gently lift upward, stop when you feel a resistive force. Press the battery cover against the battery and lift the battery upwards until you remove the battery. (The process follows the principle of lever).









1.4.2 Charging the Battery

Using the terminal for the first time, you need to charge it for about 24 hours. For the regular use, you can charge the terminal with the USB type-C cable. It takes within 4 hours to charge the terminal with the cradle to full capacity.

Connect the type C USB cable to the USB port on WDT950 and connect the other end of the USB cable to AC power adapter. Then plug into the electrical outlet. It is highly recommended that using the USB type-C cable and AC power adapter to charge the terminal.

The charging LED indicator on WDT950 turns red when it is in charging state. The green light is on after the battery is fully charged.





1.4.3 Turning on the terminal for the first time

It is recommended to fully charge WDT950 before first use. You can now start up your device to set up the languages, WLAN setting, and date and time.

Power Button

Turn ON your device by pressing the power button on the terminal.



1.4.4 Checking the LED status

	LED	Description		
	Red Light	■ Battery Charging		
		■ Twinkling together to indicate battery low status (less		
		than 15%) when power on.		
Tamainal		■ Twinkling alternate to indicate battery is not installed or		
Terminal		not installed well when battery charger was plugged in.		
	Green Light	■ Battery Fully charged		
		■ Barcode scan good read		
	Blue Light	Message		
	No LED (Red and Green) display when battery is out.			

Checking the Battery Status

If the battery level becomes low in the course of normal use, a status icon appears on the device screen indicating low or very low battery status. In both cases, please back up your data, and then recharge your device as soon as possible.



1.4.5 Using the Micro SD/ Nano SIM Card

The WDT950 has 1 x micro SD and 2 x nano SIM card slots inside the battery compartment.

Note: Please <u>TURN OFF</u> the terminal, before inserting or removing micro SD card or nano SIM card.

Inserting Micro SD/ Nano SIM Card

1. Make sure the battery release latch is in the unlocked position.



2. Grab the battery cover from the two recesses and lift gently upward to remove it. Remove the battery by pulling the pull tab.







3.



SIM 1 & 2 Card Slot

Push down SIM card holder to unlock and lift the card holder to insert SIM card. Close the card holder and slide up to lock position. Ensure that it is installed properly.



MicroSD Card Slot

Push up MicroSD card holder to unlock and lift the card holder to insert MicroSD card. Close the card holder and slide down to lock position. Ensure that it is installed properly.



4. Replace the battery back and the battery cover and lock the cover. Make sure the battery cover is securely closed.




Checking WDT950 storage

Settings

Please go to **Settings**

and tap **Storage** to check the WDT950 storage.

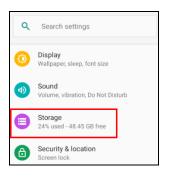

1.4.6 Battery Status

The WDT950 provides battery info for users to check the battery status, history view and also set up user preferences.


1. On the main screen, scroll the screen from down to top to reach the APPS,

and tap Settings and then tap BatteryInfo.

2. BatteryInfo shows the details of the battery use.



Wasp WDT950 (38 keys) User's Manual

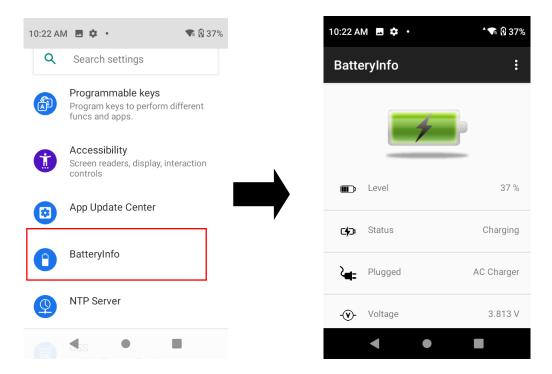

1.4.7 BatteryInfo Health Service


BatteryInfo health service information will display on both WDT950 lock screen and the notification bar.

■ When the battery health is higher than 80%:




■ When the battery health is higher than 60%:



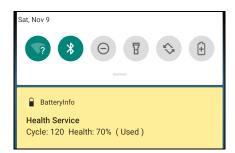

■ When the battery health is lower than 60% : (Battery should be replaced)

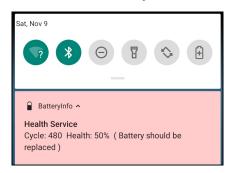

Note: If the battery is stored for the long term, it might result in accelerated battery health lower. Please try to charge and discharge your batteries several times and check the battery health is at a steady rate. If the battery health is still lower than 60%, the battery should be replaced



1.4.8 How To Enable Dark Theme


Dark mode is a feature that allows you to switch to the dark theme of an app or an entire desktop operating system.

1. On the main screen, scroll the screen from down to top to reach the APPS,




and tap Settings and then tap Display.

Tap **Dark theme** or tap the button on the right to enable the dark mode. 2.

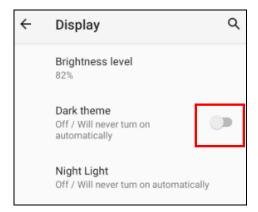

OR

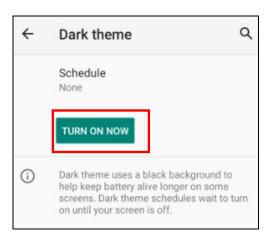




1.4.9 How To Enable Night Light


Night Light is a feature that allows you to activate night light in order to reduce your eyestrain.

On the main screen, scroll the screen from down to top to reach the APPS, and



tap Settings and then tap Display.

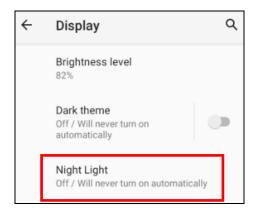

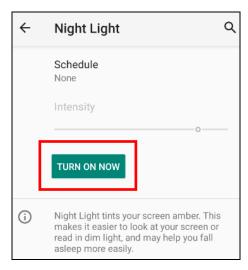



1.5 Keypad Definition



Key	Description
	Power key
	Press the yellow alpha key to access the alternate alpha characters. Toggle between numeric and alphabetic entry modes. The icon appears on the Status bar. Press and release the orange alpha key again to return to the default keypad functions.
P1 F11 F12 P2	Programmable key
	Scan key
$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	Moves right, up, down, or left from one item to another.



Wasp WDT950 (38 keys) User's Manual

Key	Description
7 8 9 4 5 6 1 2 3 , 0 .	Numeric/Alpha keys Press the yellow alpha key to access the alternate alpha characters. Toggle between numeric and alphabetic entry modes.
F1 F2 F3 F6 F7 F8 F9 F10	Special function keys
CTRL	CTRL key
BS	Backspace key
SHIFT	SHIFT key
ENT	Enter key
ALT	ALT key
TAB	TAB key
ESC	ESC key




Key	Description
·	Produces a period symbol
, N	Produces a comma symbol



1.5.1 Using Keypad Combination

Press the yellow key, it will appear as symbol A in the status bar at the top of the screen. Then you can refer to the following table to execute the desired function or input.

When it's alpha mode, LED indicates solid yellow light.

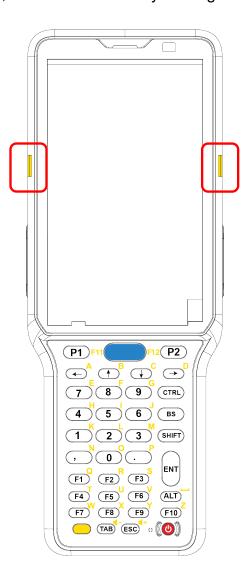



Key	Yellow Key + Key
P1	F11
P2	F12
Left Arrow	Α
Up Arrow	В
Down Arrow	С
Right Arrow	D
ESC	4 +
TAB	4 -
ALT	Space
CTRL	CTRL
ENT	ENT
7	E
8	F
9	G
BS	BS
4	Н



Key	Yellow Key + Key
5	
6	J
1	K
2	L
3	M
,	N
0	0
	Р
F1	Q
F2	R
F3	S
F4	Т
F5	U
F6	V
F7	W
F8	X
F9	Υ
F10	Z



Chapter 2 - Installation & Operation


2.1 Barcode Setting

On the main screen, scroll the screen from down to top to reach the APPS,



and tap Settings and then tap USS (scan service).

Or from the notification bar tap USS (scan service).

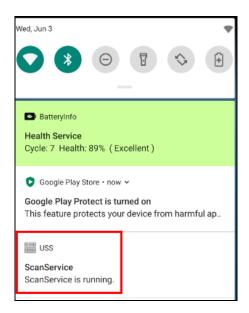


2. You now enter the scan service application.



2.1.1 Settings


1. Please tap on the screen to see all the settings of **USS**.

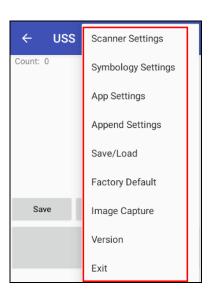




2.1.2 Barcode Scan

1. Please tap **Start Scan** to get ready for barcodes scan service.

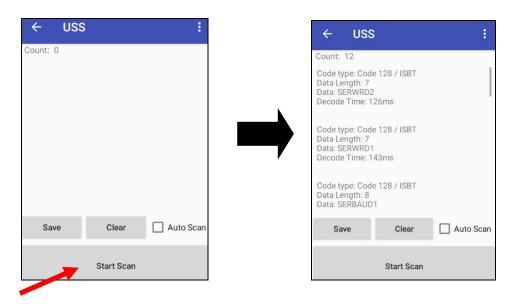

2. For Save / Load Settings, and Factory Default,

Please tap and then tap Save / Load Settings, and Factory Default.

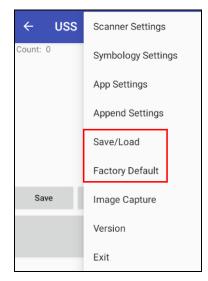





3. To save settings, you can also tap **Save** on the screen and input path then tap **OK**.



The saved data is stored in File Manager. (Please see 3.2 File Manager)






2.2 HF Setting


1. On the main screen, scroll the screen from down to top to reach the APPS,



Settings and then tap Connected devices.

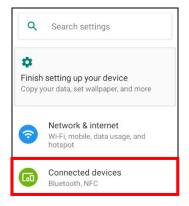

2. Tap Connection Preferences to enable NFC

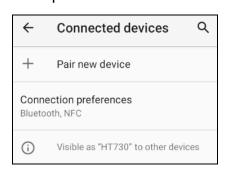








3. Make sure that both devices are unlocked and have NFC turned on. Also make sure that the NFC antenna area of WDT950 and the other devices' NFC area are close to one another. Slightly moving the phones until a connection is made. Tap the screen.





2.3 WWAN Setting

- 1. Turn off the terminal to insert the SIM card. **Note :** ■ For the instruction, please refer to <u>1.4.5 Using the Micro SD/ Nano SIM Card</u>.
- 2. Turn on the terminal, 4G signal will show at the top of the screen.

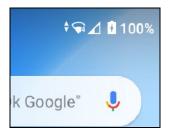


2.3.1 Mobile Network Settings

1. On the main screen, scroll the screen from down to top to reach the APPS,



and tap Settings and then tap Network & internet.

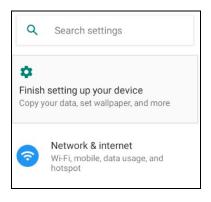






2. Tap **Mobile network** for more network settings.



3. To choose different network type, please tap **Preferred network type.**

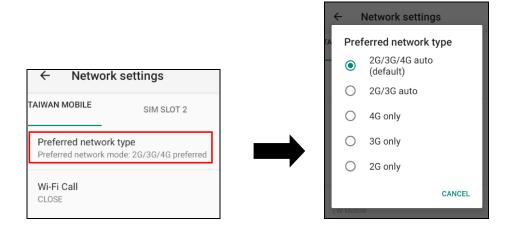




2.4 WLAN Setting


1. On the main screen, scroll the screen from down to top to reach the APPS,



and tap Settings and then tap Network & internet.

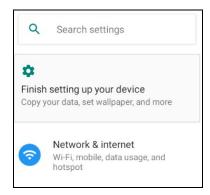

2. To see available networks, turn WLAN **ON**. And tap to choose the available networks.

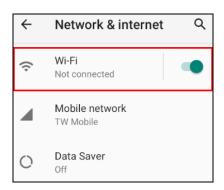



3. Choose the available networks, and enter the Password and tap Connect.



- 4. If the wireless network that you want is not listed, tap **+ Add network** to manually add it.
- 5. When enabled, the icon is displayed on the status bar.





2.5.1 WLAN Advanced

WLAN advanced can enhance the roaming behavior when the device is in areas of particularly low coverage or losing its connection to the network infrastructure and provides the power save mode to control the power consumption setting.

WLAN advanced will help users to manage the seamless roaming.

1. On the main screen, scroll the screen from down to top to reach the APPS,

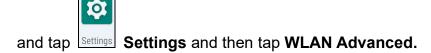

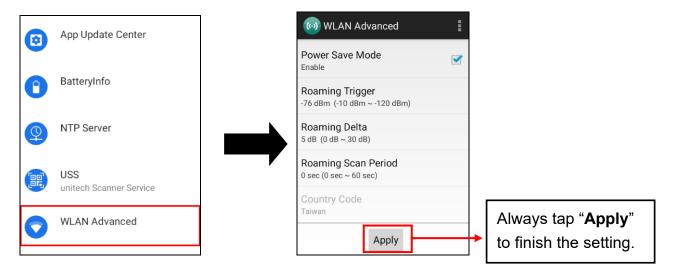




Power Save Mode

Tap to enable the power save mode to set the WLAN module to its optimum power consumption setting.

• Roaming Trigger (Default : -76 dBm, Range : -10 dBm ~ - 120 dBm)

Roaming trigger will help users to look for a better and stronger signal strength (in dBm) by scanning many access points. When the signal strength is lower than roaming trigger value, roaming trigger will start to look for better access points.

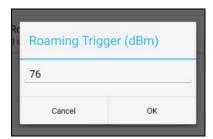


• Roaming Delta (Default : 5 dB, Range : 0 dB ~ 30 dB)

Based on roaming delta value, the device will roam to a better signal strength access point.



• Roaming Scan Period (Default : 0 sec, Range : 0 sec ~ 60 sec)

The device will stay with the current AP based on the roam period value before it roams to a different AP.

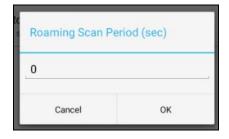




2.5.1.1 Other options

Tap for more options to import / export the current data from the device.

Initialize can restore the default settings.

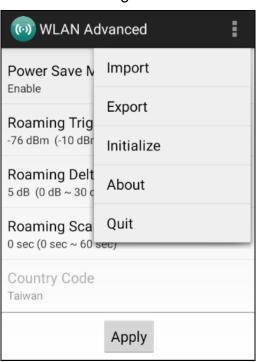




2.6 PAN Setting


1. On the main screen, scroll the screen from down to top to reach the APPS,



nd tap Settings and then tap Connected devices.

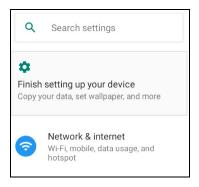

2. Tap Connection Preferences to enable Bluetooth

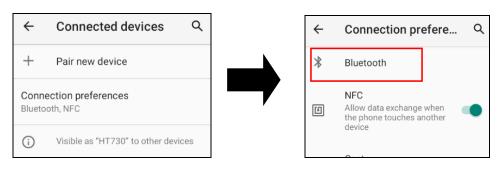

Tap ON / OFF to enable / disable Bluetooth[®].
 To pair the available device, turn Bluetooth[®] ON to choose the available device.






2.7 GPS Setting


1. On the main screen, scroll the screen from down to top to reach the APPS,



Settings and then tap Location.

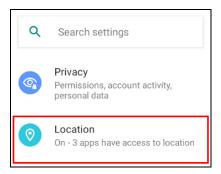

2. Tap the bar for the permission to use your location information.

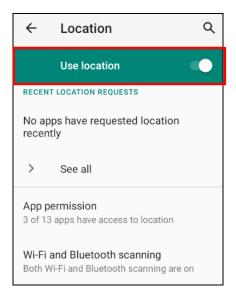




2.8 PC Setting

1. Connect WDT950 to your computer with the USB type C cable. Your computer will recognize it is USB charging.



2. Slide down from top, the system will show the following picture, then you can select File transfers.

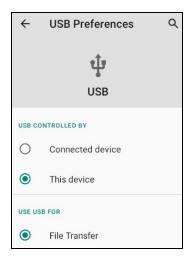



2.9 Camera Setting


1. Scroll the screen from down to top to reach the APPS,






2.9.1 Camera Settings

For the first time turn on, the screen will show a brief introduction about camera settings.

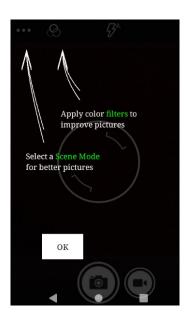



2.9.2 Scene Mode Setting

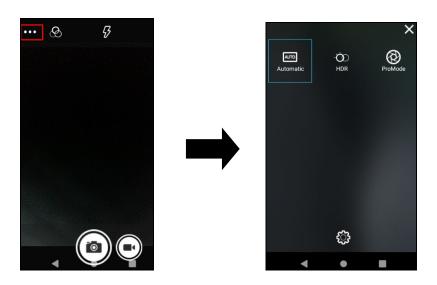


2.9.3 Camera filter effects





2.9.4 Settings


Please tap to enter the settings section.

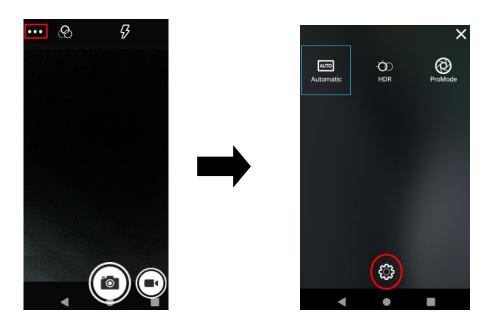



2.9.5 Record Videos

Once tap the record button, it will start recording.

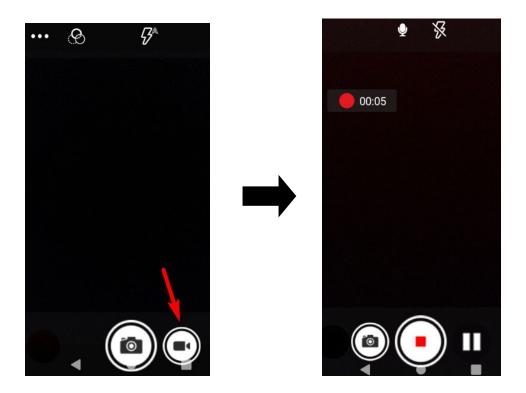



2.10 Performing a Hardware Reset

You may have to perform a reset if the device freezes (i.e., the terminal no longer responds to the buttons or tapping on the screen).

Long press and hold the **Power button** around 10 seconds to shut down the system and then press the **Power button** again to turn on the device.





2.11 Performing Factory data reset

1. On the main screen, scroll the screen from down to top to reach the APPS,





and tap

Settings and then tap System.



2. Tap Advanced for more options, and then tap Reset options.

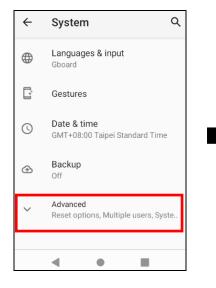

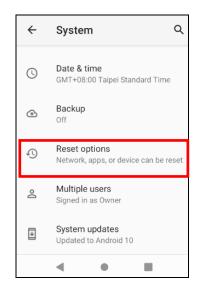



You can reset the system on Reset options.
 When you select Erase all data (factory reset), it will erase all folders.





2.12 KeyRemap

The WDT950's keys can be programmed for users to be able to perform different functions or applications.


Six options to use key remap functions: SCAN_LEFT, SCAN_RIGHT, SCAN_KEY, PROG_1, PROG_2 and TRIGGER_GUN

2.12.1 Remap a key

On the main screen, scroll the screen from down to top to reach the APPS, and



tap KeyRemap. Select the keys to remap and enable key.

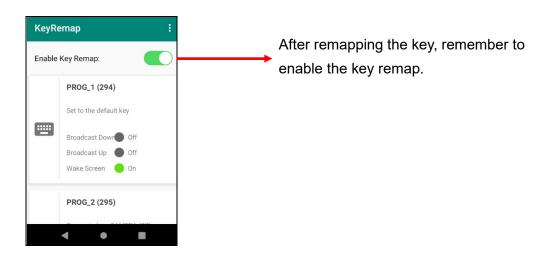




2.12.2 Export / Import a remap Key Configuration file

■ Export file




2. Select Export

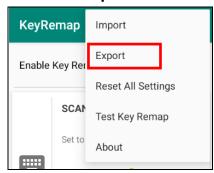

The remap Key configuration can be exported to a text file or imported into WDT950.

Note: The configuration file (keys_config.txt) is saved in File Manager.

(For File Manager setting, please refer to 3.2 File Manager)

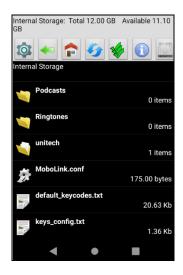




■ Import file

Before importing the file, please make sure the configuration file (keys_config.txt) is in File Manager.




2. Select Import

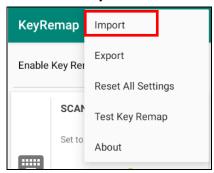

■ Reset all settings

- 1. Tap
- 2. Select Reset all settings

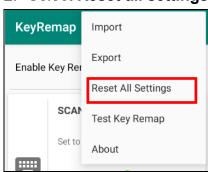



2.13 Split Screen

Split screen function allows you to have two apps work side by side on the same screen. Please follow the steps to enable split screen multitasking.


Note: Some apps may not work with split-screen.

1. Tap **Background APP button** until you see those background apps on the screen.






2. Tap and hold the thumbnail and then select "Split screen." First APP "Split screen" will be on top of the screen. For another APP to show on the bottom half of the screen, simply tap on the APP thumbnail.

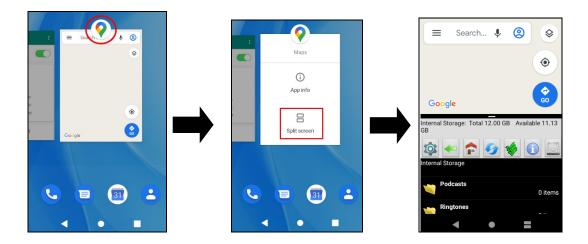

3. To cancel split screen, simply drag up or down the black bar in the middle of the two APPs to expand the app that you would like to keep in full screen.

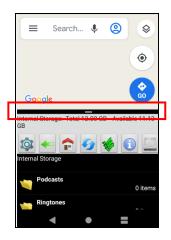



2.14 Network Time Protocol (NTP)

Server


The Network Time Protocol is used to synchronize the clocks over the Internet. Allow the users to set the clock by using NTP Server.

1. On the main screen, scroll the screen from down to top to reach the APPS,



and tap Settings and then tap NTP (Network Time Protocol)


Server.

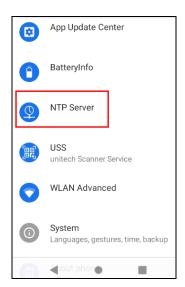





2. On NTP Server, choose the system preferences to set up network time.

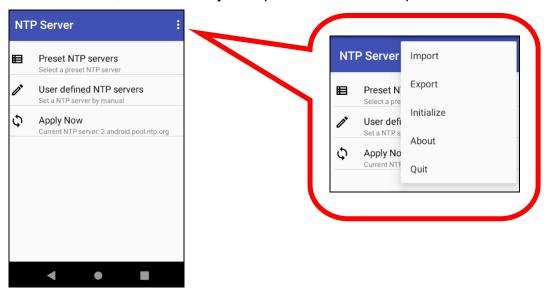



2.15 Battery Swap

Please follow the steps for the battery swap.

1. When the battery release latch switches to the unlocked position, the screen will show the countdown window (within 59 secs) for the users to change the battery.



2. When the battery swap is done, you can start to use the terminal without restarting it again.

Note :Please see <u>1.4.1 Installing the Battery</u> for more battery change information.



Chapter 3 – Introduction to Applications


3.1 USS (scan service)

On the main screen, scroll the screen from down to top to reach the APPS,



and tap Settings and then tap USS (scan service).

Or from the notification bar to tap USS (scan service).

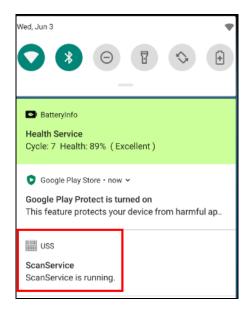

You are now using the scan service application.



3.1.1 How to scan

- There are 3 ways to scan the barcodes: Trigger keys on the sides, Scan key on the keyboard or tap **Start Scan** on this App.
- 2. Aim the Barcode Scan Engine to the barcode.
- 3. After scanning the barcodes, the barcode information is as shown below.
- 4. To save the scanned data, tap **Save** and enter the path and filename, then tap **OK**.






3.1.2 Multi Decode Scan Mode

Multi decode scan function allows users to scan multiple barcodes at once.

- 1. Tap i, Choose Scanner Settings
- 2. Enable **Multi Decode Mode**, and input the barcode decode count (up to 10 counts) and start multi decode scan.

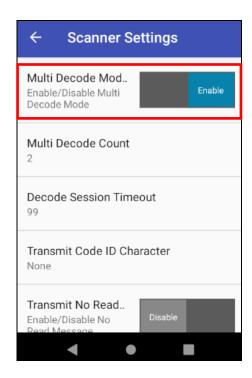




3.1.3 Picklist Mode

Picklist mode enables WDT950 to decode only barcodes that are aligned under the laser crosshair or LED aiming dot.

For picklist mode demonstration, please click on the this YouTube channel for more information: https://www.youtube.com/watch?v=QjT2E6hxD k

- 1. Tap i, Choose Scanner Settings
- 2. Enable **Picklist Mode** and allows users to easily select and scan a single or specific barcode from a field of barcodes.

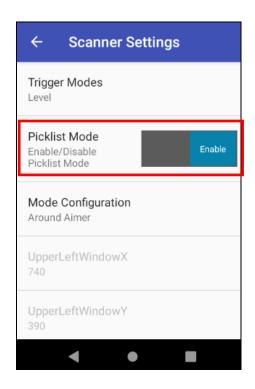

3.1.4 More information about USS

For more information about USS, please download the document from the below link:

http://w3.tw.ute.com/pub/cs/manual/uss/USS-RA-1-MANUAL en20210326.pdf



3.2 File Manager

On the main screen, scroll the screen from down to top to reach the APPS, and



File Manager.



:Settings

🔲 : Return to the previous page

: Main page

: Refresh

: Folder arrangement

: Folder Information

: Flash Storage




3.3 Software Update

1. On the main screen, scroll the screen from down to top to reach the APPS,



2. To update or check the latest version of each application, please tap **CHECK UPDATE.**

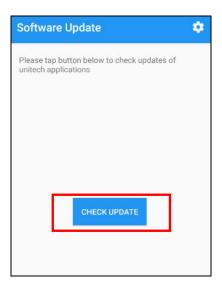

3. Tap for more settings on Software Update.





3.4 StageGO

StageGO is a configuration staging solution for Wasp mobile devices. StageGO helps IT admins use the 1-click auto configure feature to set up and initialize a device quickly. Devices configure themselves by using configuration scripts and barcodes prepared by the IT admins, the StageGO app, currently available for Android devices, uses Wasp devices' barcode scanning capabilities to load the script barcode into the device and start the self-configuration process.

■ Using StageGO to configure a device in 3 simple steps:



Step 1. Edit Script:

IT admins can prepare a configuration script by using StageGO's web-based script editor. For more information, please visit : https://www.ute.com/en/products/detail/stagego

Step 2. Print Barcodes:

Upon completion of editing a script, IT admins may either download the script file or generate barcodes that represent the entire script. The script file or the barcode printouts can then be handed over to the device users for scanning.



Step 3. Scan Barcodes:

When device users receive the barcode printouts (or the script file) from the IT admins, they can then run the StageGO app on the terminals, scan all the barcodes on the printouts (or load the script file). When all barcodes are scanned, StageGO is ready to begin self-configuration. StageGO can also be configured for 1-click auto configuration. On the main screen, scroll the screen



from down to top to reach the APPS, and tap

StageGO

Please visit the StageGo website for more information : https://apps.ute.com/StageGO2/



3.5 MoboLink


MoboLink is a software platform that helps customers to remote manage their purchased devices and applications. The core of the MoboLink platform provides functionalities in the MDM (Mobile Device Management) and MAM (Mobile Application Management) domains, and then further extends into other management functions such as alert notification management and account management.

On the main screen, scroll the screen from down to top to reach the APPS, and



tap

MoboLink.

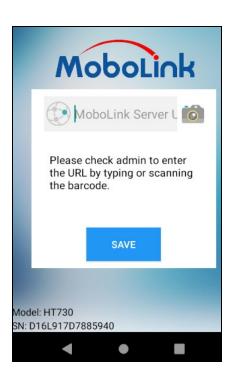

3.5.1 More about MoboLink

For detailed operation, solution and usage, please refer to the website: https://www.ute.com/en/products/detail/MoboLink