



Aquifer Series Manual

For model numbers;

AF-200-DC

AF-360-DC

AF-200-PPS



Katadyn Desalination, LLC
Spectra Watermakers
PH 415.526.2780
FX 415.526.2787
www.spectrawatermakers.com
Revised March 2020

Table of Contents

Installation	<u>Page Number</u>
Getting Started	4
Introduction	5
Feed Side Piping Schematic	7
Product Piping Schematic	8
Setting Up the Aquifer 200	9
Electrical.....	10
Operation	
New Systems Start Up and Testing	11
Normal Operation	12
Maintenance	18
Service & Maintenance	
Short Term Storage Procedures	15
Introduction to Spectra Chemicals.....	16
Long Term Storage	17
Winterizing	18
Maintenance.....	19
Membrane Cleaning	20
Suggested Spares.....	22
Troubleshooting.....	23
Poor Water Quality.....	24
Flow Test	25
Service Bulletins	26
Plastic Tube Fitting Instructions.....	30
High Pressure Tube Fitting Assembly Instructions.....	31
Parts breakdown for Aquifer systems	32

Getting Started

Unpack the system and inspect it to make sure that it has not been damaged in shipment.


Refer to the shipping list for your system to make sure you have received all of the components listed. Do not discard any packaging until you have found and identified all of the parts. The small installation parts are listed on the kit list.

Study the system layout diagram, component photos and descriptions before beginning your installation. This will assist you in understanding the function of each component.

Aquifer Shipping List

Aquifer Portable Watermaker in Hard Case with wheels, including;

1. Suction hose (25') with strainer and quick connector
 2. Brine discharge hose (25') with quick connector
 3. 1/4 product tubing (10')
 4. Solar panel cable extender (Power Pack Solar models only)
- Not shown: Hand held Salinity monitor, SC-1 storage chemical

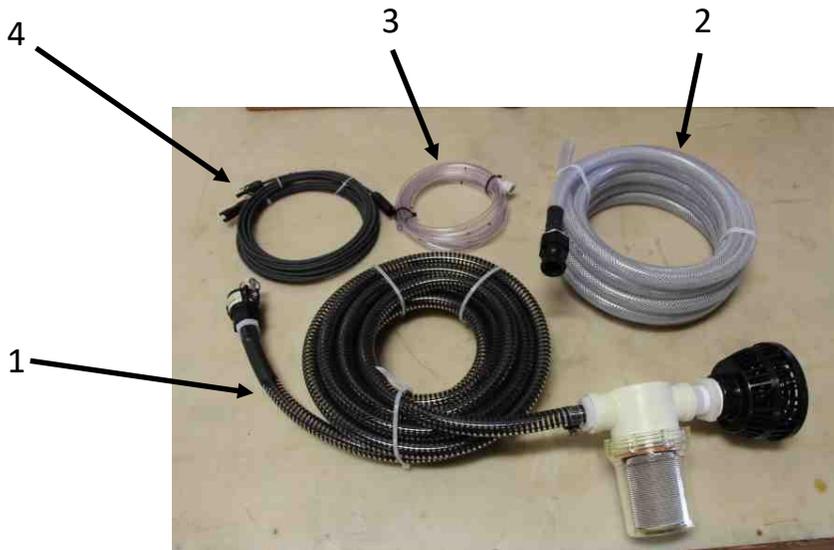


Introduction to the Aquifer 200/360

Originally developed for ocean voyaging yachts, the **Spectra Aquifer 200/360 Portable Watermaker** is both a desalinator and a water purifier. It is capable of producing high quality, good tasting drinking water from a variety of water sources including sea water, river water, lake water, or water from a brackish or contaminated well. It will effectively separate out salts, organic chemicals, insecticides and pesticides, parasites, cysts, bacteria, and viruses. It does not remove non-ionized heavy metals.

The Aquifer 200 pumps approximately 1.5 gallons (6 liters) of feed water per minute to the reverse osmosis membrane (the 360 is double this amount). Ten percent of this water passes through the membrane(s) as purified product water and the remaining water is returned to the feed water source as concentrated brine. The brine contains whatever was separated from the product water by the membrane and nothing is retained inside the machine.

Feed water is filtered using a three-stage process. A strainer first keeps out large debris, and keeps the suction hose several inches off the bottom, then the water passes through an 80 mesh screen, then a 5 micron pre-filter protects the Clark pump from silt, algae and abrasive particles.

The Aquifer 200 and 360 units are configured to run directly from a DC power source (12 or 24 Volt depending on how it is ordered).

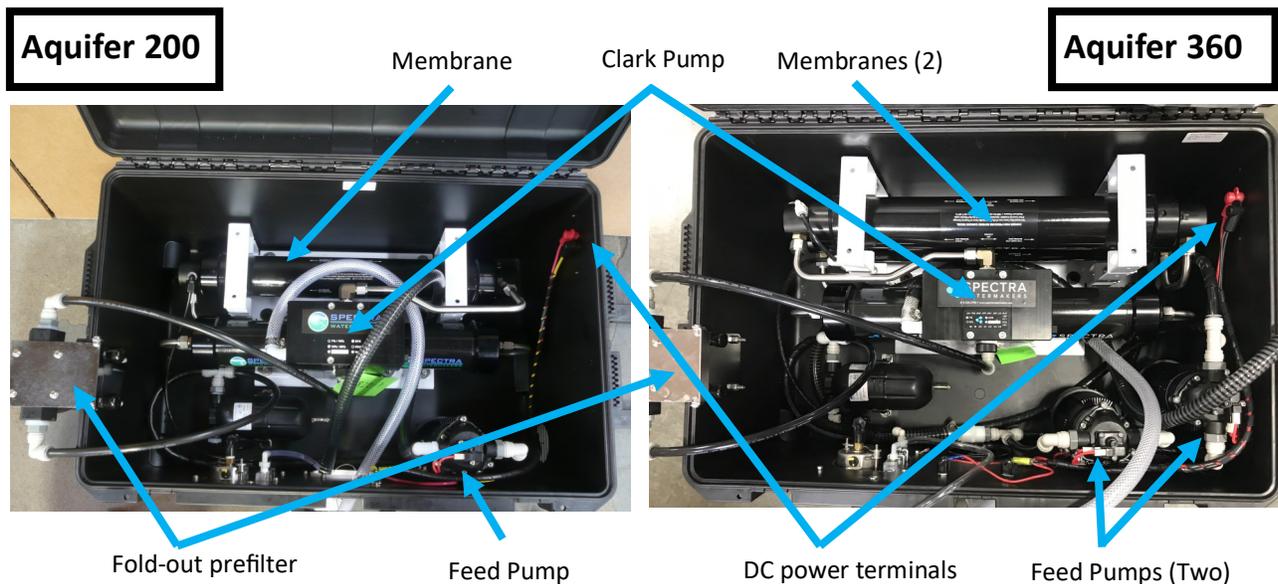


In order to prevent damage to the watermaker, the feed water should never contain chlorine, bleach, or any other strong oxidizer, which will damage the membrane. Oil in the feed water will also damage the membrane. The watermaker can be operated on feed water up to about 45,000 ppm TDS sea water.


Introduction to the Aquifer Power Pack Solar

Aquifer Power Pack Solar versions are equipped with a battery and battery charger, which can be connected to any AC power source (100-240vac 50-60hZ) and will also run from a 12vdc source. Aquifer Power Pack Solar versions also come with a collapsible solar panel and if the battery is fresh and fully charged the watermaker can be operated directly from the battery for two or more hours without an external power source.

In order to prevent damage to the watermaker, the feed water should never contain chlorine, bleach, or any other strong oxidizer, which will damage the membrane. Oil in the feed water will also damage the membrane. The watermaker can be operated on feed water up to about 45,000 ppm TDS sea water.

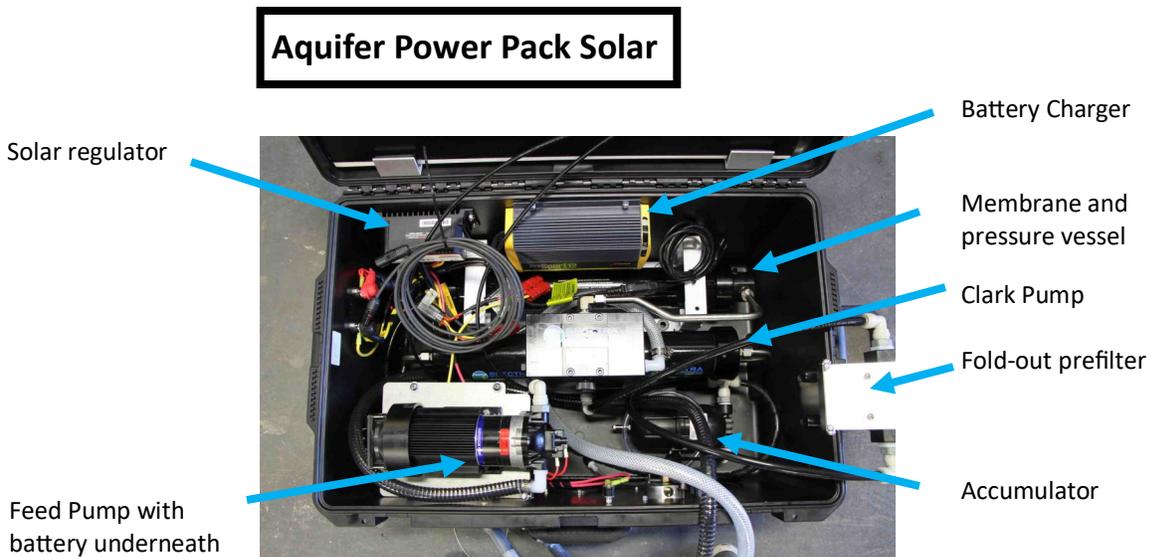

Aquifer Feed Plumbing Schematic

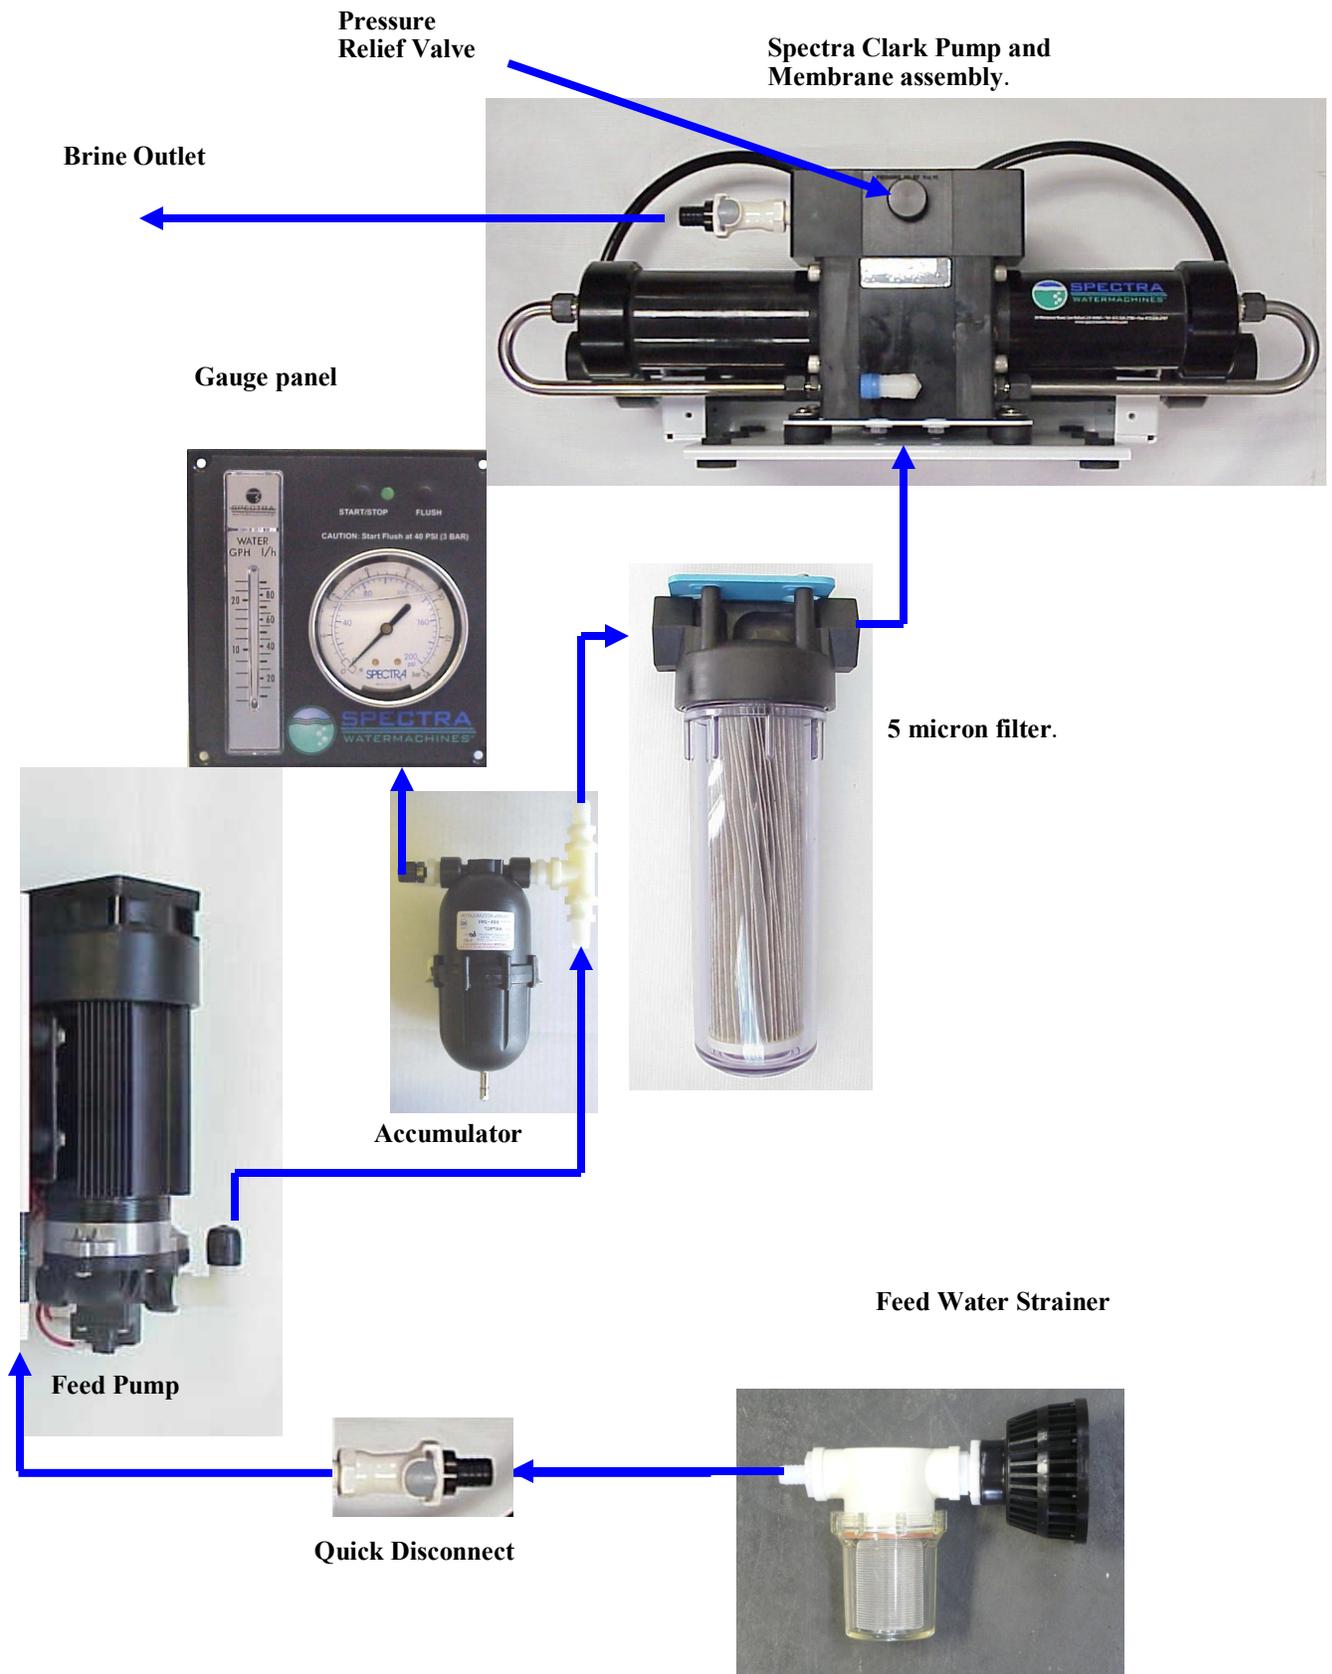


Product Water Flow Path

Product Outlet

Warning

Pressure in the product tubing must never exceed 5psi (0.3bar) at any time or the membrane will be permanently damaged. The product water should fall into the storage tank through an air gap so there is no back pressure on it. **DO NOT!** feed the product into a manifold or the bottom of a tank. Make sure that there is no possible restriction in this piping.

Note: The product flow meter displays the flow per hour. In normal operation the flow will go up and down as the Clark Pump Shifts. It is a good idea to record the flow rate so you have a record of historical performance, which will inform any future maintenance or service requirements.

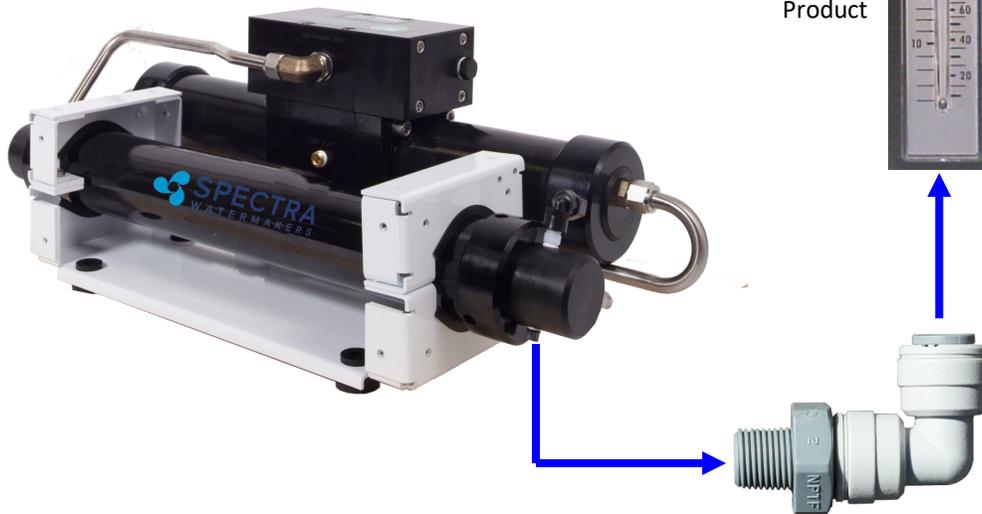

Setting up the Aquifer 200/360

CHOOSING A SITE

Your water source should be as free of suspended sand, silt, algae etc., as possible for longer pre-filter life. If making water from a bay, lake, or stream choose a location as deep as possible. Avoid areas with surf or chop. The Aquifer Feed Pump is capable of lifting the feed water not more than 10 vertical feet (3m). When setting up the watermaker choose a spot as near the water as possible, but do not place the case in the water. It is better to run a long extension cord from your power source than to run long hoses to the feed water source. When making water on a sandy beach a small pit can often be dug in the sand which will fill with clean water. The water flowing into the pit can be used as feed water and the water will be quite clean after the system has been running for a short time.

SETTING UP


Note: When connecting the suction hose fittings be sure they are clean and free of sand or debris so the seals on the fittings are not damaged!

Using the quick connect fittings attach the three hoses: Suction hose with strainer and filter basket, brine discharge, and product hose.

You can run the system as shown below into a bucket to check operation. In this case the service hoses will be long enough to reach the bucket without attaching the hose extensions.

Aquifer access port and hoses


Note: the access port may be in a different location on your unit.

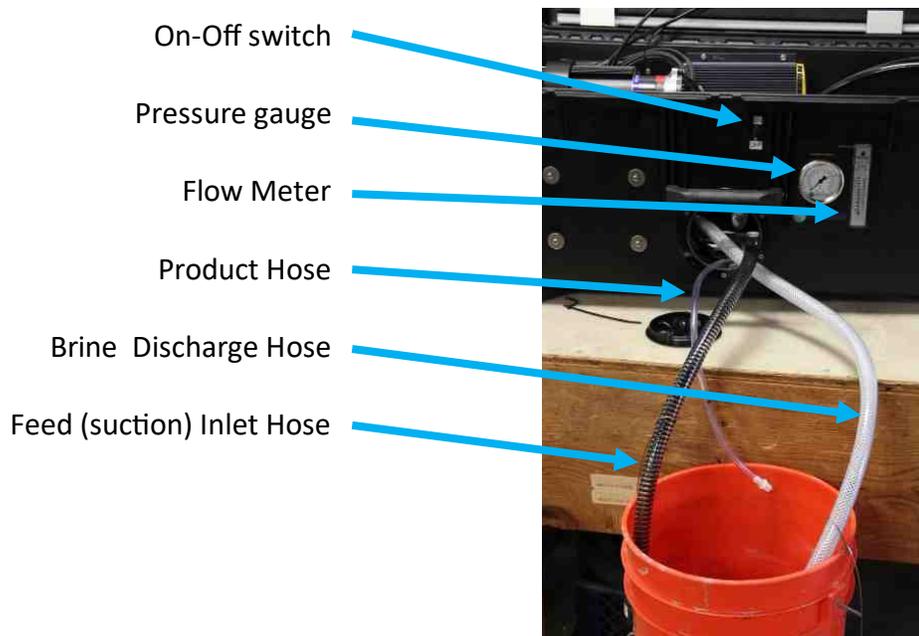

Electrical Connections

Aquifer DC Systems

DC powered units will have a terminal block for connecting to your power source. Terminals extend through the case and power can be connected on either side.

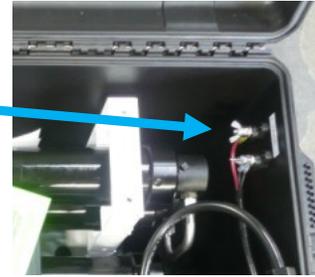

Aquifer Power Pack Solar (PPS) Systems


Solar Power Pack models have a solar panel that fits into the lid of the case. Unfold the Panel and connect it to the charge control with the black connectors.



The AC Power cord for the battery charger is supplied with a US-style plug though it will accept any input voltage from 100-260 Volts AC, 50/60Hz.



Aquifer Power Pack models are shipped with the battery disconnected. Connect the battery using the large red connectors.

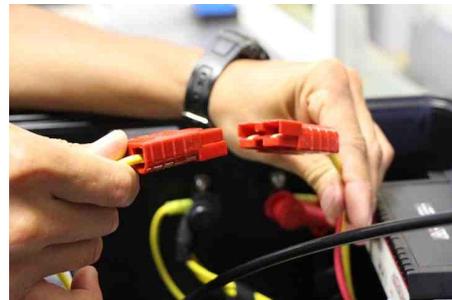

Note; The best way to store the unit is to leave the battery charger plugged in to properly maintain the battery, or the Battery can be fully charged and disconnected prior to storage. Leaving the battery connected will drain it in about 30 days.

On Power Pack models there is a 15-Amp fuse, in a water-tight holder, along the positive battery wire.



Aquifer New System Start-Up and Testing

Warning! Your watermaker shipped from the factory with a non-toxic potable water system preservative. **Damage may occur if this preservative is not flushed out and the membrane is pressurized with preservative in it.**

DO NOT OPERATE the Aquifer system if the feed water could contain oil.


1. First:

- You will need at least 50 gallons (200 liters) of salt, brackish, or fresh water. **If the water has been chlorinated** or chemically treated, **replace the 5 micron filter with a Spectra Watermakers Charcoal Filter element** during the flush.
- Install the feed , brine, and product Hoses. Place the strainer end of the Feed Water Hose into the feed water source far enough below the surface to prevent air from being pulled in. Place the end of the brine hose so that the brine does not mix directly back in with the feed water.
- Install the product hose and place the end of it so that any product will be discarded
- **Ensure that the pressure relief valve is open 1/2 turn.**
- Connect to a DC power source, the solar panel or plug into AC source or depending on which unit you have

Remove Tag and Washer!



Open 1/2 Turn and Purge Preservative!

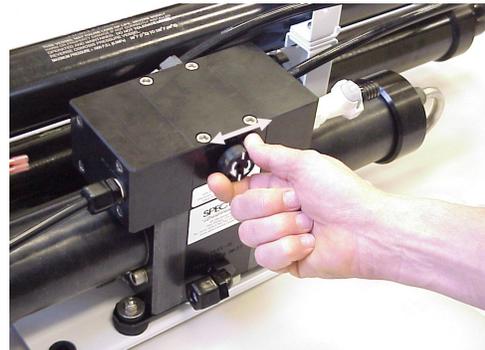

2. Turn on the feed water pump. Check that it is primed by inspecting the brine discharge. About 1.5 gpm (6 lpm) of water should be being discharged with a pulsation every few seconds.

3. Run the system without pressure for 20 minutes to purge the storage chemicals, or at least an **hour if stored with propylene glycol**. The system should have an open flow pressure on the gauge of about 20 PSI (1.2 bar). Note that water may drip from the product tube.

4. Close the pressure relief valve and the pressure will increase. After several minutes, water should begin to flow out of the product water tube.


5. Allow the system to run for 5-10 minutes to purge the product water of preservative, and then test the product with your handheld salinity tester. When the product is below 750 PPM it is considered potable and may be diverted to the water container for human consumption.

Aquifer 200/360 Operation

Normal Operation From a Large Body of Water

If the system has been pickled or stored or contains cleaning compounds, use the “New System Startup” procedure.

1. Any source of oil-free feed water not saltier than sea water may be used. Do not use water containing large amounts of heavy metals, such as mine tailing runoff.
2. Set up the product tubing so that the product can be sampled.
3. Start the feed pump and check for flow by inspecting the brine discharge or checking for pressure on your pressure gauge. If there is no flow, open the pressure relief valve one turn to bleed the air out of the feed pump, when there is good flow close the valve
4. Check the product water with your handheld salinity tester. When it is below 750 ppm, you may divert it into your container, the water quality will improve as the system runs.
5. Run the system until you have filled your container or have made enough to meet your requirements.
6. Monitor the feed water pressure. Make a note of the feed pressure with a clean filter element and change the filter if the pressure rises more than 5 psi (0.3 bar).

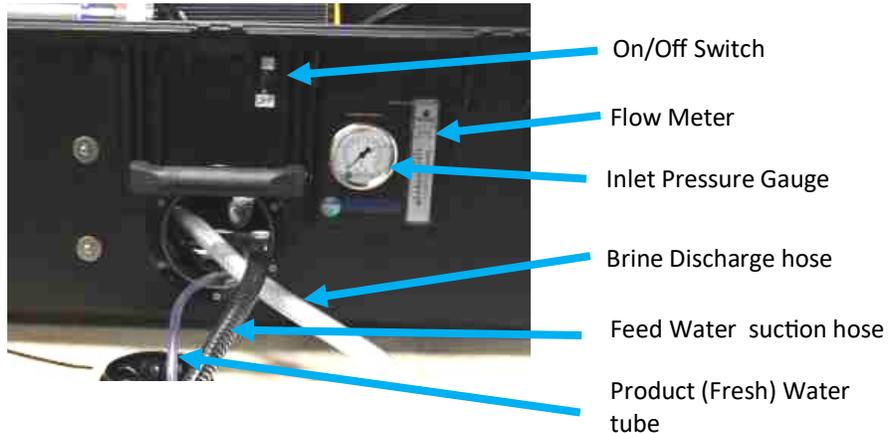

Shutting Down

1. You will need 3 gallons (11 liters) of water in a container, which will be used to flush the salt water out of the watermaker. **Use only water directly from the watermaker or unchlorinated water for flushing**
2. Install the intake service hose and place it in the bucket. Start the feed pump.
3. Flush until the container is empty, note that the pressure will drop on the gauge indicating that the membrane is flooded with fresh water. Stop the feed pump.
4. Disconnect and stow the hoses, connecting them together so water does not leak into the case.

You may now leave the system unattended for up to five days without further attention.

We recommend operating the system for longer periods as you need to run the system almost a half an hour to make enough water to flush the system, and the system should be flushed after every use. You may notice that the system output is higher while charging your batteries, as the machine is voltage sensitive.

For the Power Pack Solar units, the battery should be fully charged (if possible) after the watermaker is shut down to extend battery life. Battery life is extended significantly when they are kept fully charged. The solar controller will drain the battery over time if left connected so either disconnect the fully charged battery or plug the charger into a 110v source for extended storage.

Aquifer Operation continued...

Purifying Fresh or Brackish Water From a Tank or Well

If the system has been pickled or stored or contains cleaning compounds, use the “New System Startup” procedure.

1. Fill the tank if necessary. Extremely hard water may cause scale buildup, requiring more frequent cleaning. Do not use water containing large amounts of heavy metals, such as mine tailing runoff.
2. Set up the product tubing so that the product is being discarded and can be sampled.
3. Place the feed hose into the tank or well and identify a suitable location for the brine discharge hose.
4. Start the feed pump and check for flow by inspecting the brine discharge or checking for pressure on your pressure gauge. If there is no flow open the pressure relief valve on the Clark Pump and bleed the air out of the feed pump (this may take a few minutes).
5. Check the product water with your hand held salinity tester. When it is below 750 PPM, you may divert it into your fresh water container.

Shutting Down

1. Make about 3 gallons of water into a bucket. This water will be used to flush the salt water out of the watermaker. **Use only unchlorinated water for flushing**
2. Install the intake service hose and place it in the bucket. Start the feed pump.
3. Flush until container is empty, note the pressure will drop on the gauge indicating that the membrane is flooded with fresh water. Stop the feed pump.
4. Disconnect and stow the hoses connecting them together so water will not drip into the case.

You may now leave the system unattended for up to five days without further attention. We recommend operating the system for longer periods and effecting a fresh water flush rather than running the machine every day and not flushing the system. Remember that you need to run the system almost a half an hour to make the flushing water. You may notice that the system output is higher while charging your batteries as the machine is voltage sensitive.

For the Power Pack Solar units, the battery should be fully charged (if possible) after the watermaker is shut down to extend battery life. Battery life is extended significantly when they are kept fully charged. The solar controller will drain the battery over time if left connected so either disconnect the fully charged battery or plug the charger into a 110v source for extended storage.

Aquifer Operation continued...

Purifying Salt Water From a Container or Tank

If the system has been pickled or stored or contains cleaning compounds, use the “New System Startup” procedure.

1. Set up a system to supply feed water to the container.
2. Set up the product tubing so that the product is being discarded and can be sampled.
3. Place the feed hose into the tank or well and identify a suitable location for the brine discharge hose.
4. Start the feed pump and check for flow by inspecting the brine discharge or checking for pressure on your pressure gauge. If there is no flow open the pressure relief valve on the Clark Pump and bleed the air out of the feed pump (this may take a few minutes).
5. Check the product water with your hand held salinity tester. When it is below 750 PPM, you may divert it into your fresh water container.

Shutting Down

1. Make about 3 gallons of water into a bucket. This water will be used to flush the salt water out of the watermaker. **Use only unchlorinated water for flushing**
2. Install the intake service hose and place it in the bucket. Start the feed pump.
3. Flush until container is empty, note the pressure will drop on the gauge indicating that the membrane is flooded with fresh water. Stop the feed pump.
4. Disconnect and stow the hoses connecting them together so water will not drip into the case.

You may now leave the system unattended for up to five days without further attention. We recommend operating the system for longer periods and effecting a fresh water flush rather than running the machine every day and not flushing the system. Remember that you need to run the system almost a half an hour to make the flushing water. You may notice that the system output is higher while charging your batteries as the machine is voltage sensitive.

For the Power Pack Solar units, the battery should be fully charged (if possible) after the watermaker is shut down to extend battery life. Battery life is extended significantly when they are kept fully charged. The solar controller will drain the battery over time if left connected so either disconnect the fully charged battery or plug the charger into a 110v source for extended storage.

Short Term Storage

Fresh Water Flush

The purpose of the fresh water flush is to replace the raw water in the watermaker with fresh water whenever the system is not operating. The watermaker will last longer and operate better if it is always filled with fresh water between uses. If the watermaker is not used for more than five days it should be flushed again to ensure that the water inside stays fresh and oxygenated. In this way, the water maker can be kept ready for immediate use indefinitely.

After five days, if the watermaker has not been used repeat the flush process using unchlorinated water. A charcoal (carbon) filter can be used to remove chlorine.

Put the feed service hose in the bucket and the brine and product hoses to drain.

Turn on the feed pump and run the watermaker until all the water has been pumped out of the bucket.

Charge the battery if possible. The solar panel can stay connected to the unit indefinitely to keep the battery charged and the charge controller will manage the process.

When the flush is complete connect the feed and the drain hoses together so water does not drip into the case.

Introduction to Storage Chemicals

We use four types of chemicals: SC-1, SC-2, SC-3, and propylene glycol antifreeze. SC-1 and propylene glycol are for system storage, while SC-2 and SC-3 are for membrane cleaning.

Note: Never use any chemicals with the system pressurized! Always open the pressure relief valve 1/2 turn. Always follow the instructions for purging the chemicals as shown in the New System Startup section of your owner's manual.

Storage: SC-1 prevents biological growth when your system is idle. It should not be used as a cleaning chemical, nor will it protect your system from freezing. A jar of SC-1 is mixed with 2 gallons (8 ltr.) of product or un-chlorinated fresh water in a bucket and circulated through the system for 10 minutes. This treatment will protect the system for six months, after which the SC-1 treatment must be repeated.

Spectra systems should be stored with propylene glycol if freezing is likely to occur. This is a food grade antifreeze used to winterize RV's, boats, and cabins. Propylene glycol also works very well for preventing biological growth in warm climates and is good for one year. See **Winterizing with Antifreeze** (OP-1 document on the Spectra website).

Note: Do not use Sodium Metabisulfite (SBS), Citric Acid, or any other storage chemical not supplied by Spectra. These chemicals, used to store other watermaker brands and will damage the Clark Pump and void the warranty.

Cleaners: Avoid unnecessary cleaning, and avoid cleaning as a diagnostic tool.

SC-2 is an alkaline cleaner used to remove light oil, grime and biological growth. It is most effective if heated to 100 deg. F (38C). In most cases the water quality will increase in PPM (salinity) after an SC-2 cleaning. After a few hours it should recover to near the level it produced before the cleaning.

SC-3 is an acid cleaner used to remove mineral and scale deposits. In most cases this is used first and if there is no improvement, go on to the SC-2. SC-3 will in most cases lower the product PPM and overall pressures. Scaling is a slow process that may take several months or years.

For cleaning with either SC-2 or SC-3, see the **Cleaning Procedure**.

Long Term Storage Procedures

Watermakers are best run continuously. When not in use, biological growth in the membrane is the leading cause of membrane fouling. A warm environment will cause more growth than a cold environment. If the system is to be left unused for more than five days, perform the following storage procedure. The procedure introduces a chemical compound into the system that prevents biological growth. This procedure requires de-chlorinated water. Spectra SC-1 a special storage compound, formulated to be compatible with the modern engineering plastics and composites in the Spectra pumps. **Do not use any substitute except** propylene glycol. If you wish to use glycol for storage, follow the winterizing instructions. SC-1 storage compound must be mixed at a ratio 2 gallons (8 L) of fresh water to have the proper solution for up to six months storage.




Caution! Avoid contact with skin, eyes, or lungs with the storage chemical.

Aquifer 200/360 Storage Procedure

The watermaker can be stored for periods up to six months using this procedure.

1. Make or buy 4 gallons (16 ltrs.) of chlorine-free water and put it in a bucket.
2. Place the end of the feed hose in the bucket and the brine hose to drain.
3. Start and run the feed pump until you have one gallon (4 ltrs.) of fresh water left in the bucket.
4. Mix 1 container of SC-1 storage compound with the water in the bucket, let it sit for one hour so it dissolves and then place the end of the brine service hose in the bucket.
5. **Make sure the pressure relief valve on the Clark Pump is OPEN (unpressurized) by turning $\frac{1}{2}$ turn counterclockwise**
6. Turn on the feed pump. Circulate the storage chemical in the system for approximately 10 minutes. Turn off the feed pump when finished.

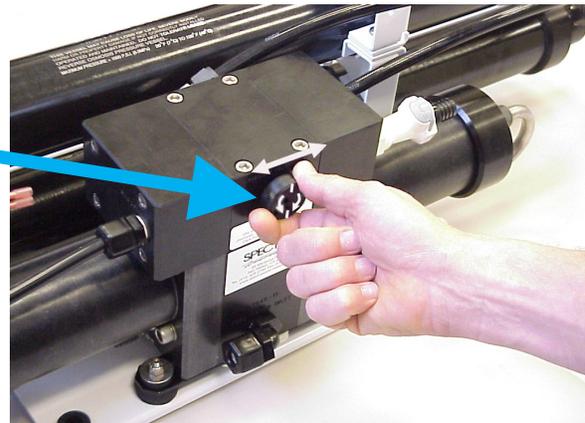

Clean Up


- Remove the 5 micron filter element from its housing and put in a new filter.
- Rinse and dry the inside of the case, being careful not to get water inside the pump motor.
- Remove the hoses, drain them, and stow them away in the case. Insert the hose connection plugs in the hose fittings.

For the Power Pack Solar units, the battery should be fully charged (if possible) after the watermaker is shut down to extend battery life. Battery life is extended significantly when they are kept fully charged. The solar controller will drain the battery over time if left connected so either disconnect the fully charged battery or plug the charger into a 110v source for extended storage.

Storage and Winterizing with Antifreeze

The watermaker can be stored for up to one year in most climates using this procedure.

1. With at least 3 gallons (12 ltrs.) of chlorine-free fresh water in a bucket, perform a fresh water flush as described in the normal operation section. Run the feed pump until the bucket is empty.
2. Use only **Propylene Glycol** potable water antifreeze without additives (no Ethyl Alcohol) in the amount specified by the manufacturer. There is a gallon of water in the watermaker so add the appropriate amount of antifreeze required for your area. Note that exceeding a 25% solution may require a cleaning with SC-2 in order to clear out the antifreeze prior to use. **Please contact Spectra tech support if you have any questions about which antifreeze to use.**
3. **Make sure the pressure relief valve is OPEN (unpressurized) by turning it $1\frac{1}{2}$ turn counterclockwise.**
4. Start and run the feed pump until antifreeze begins to come out of the brine discharge hose.
5. Stop the feed pump. Direct the brine output into the bucket.
6. Start the Feed pump and circulate the remaining antifreeze for a few minutes until well mixed.
7. Stop the feed pump and discard any antifreeze remaining in the bucket.
8. Blow out or drain the product tubing, as it will not contain antifreeze.
9. **Leave the pressure relief valve open.**

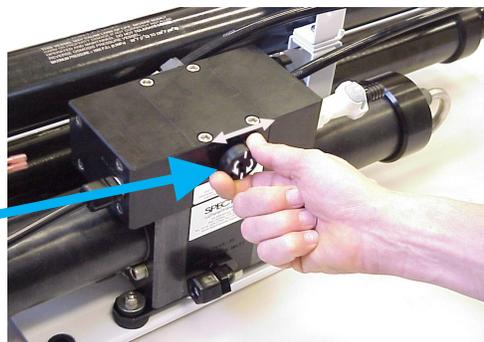

Clean Up

- Remove the pre-filter from its housing and replace with a clean dry filter element.
- Clean and dry the inside of the Aquifer case to prevent corrosion. Do not get the Feed pump motor wet.
- Remove and drain the service hoses and stow them away in the case. Insert the hose connection plugs in the hose fittings.
- Charge or remove the battery for storage.

Recommissioning

Propylene glycol can be difficult to flush from a membrane, especially if the PG concentration is too high after extended storage periods. This results in high salinity water (high PPM) and residual flavor in the product water. We recommend flushing the system **WITH THE PRESSURE RELIEF VALVE OPEN** for 4-6 hours after storage with propylene glycol—the longer the better. If, after extended flushing, you still experience low product water quality, cleaning with SC-2 usually removes all traces of propylene glycol and returns the salinity to the level it was before storage with propylene glycol. See the **Cleaning Procedure** on page 20.

Maintenance

General

Periodically inspect the entire system for leakage and chafe on the tubing and hoses. Repair any leaks you find as soon as practical. Some crystal formation around the Clark Pump blocks is normal. Wipe down any salt encrusted areas with a damp cloth. If any rust appears at the stainless steel fittings, clean them up promptly. Keep the inside of the case dry and salt free to protect the electrical components inside.

The Seawater Strainer

The sea water strainer's stainless steel element should be inspected, opened, and cleaned as needed. Check frequently during operation.

The Pre-filter

Service the pre-filter on a regular basis. The pressure will rise on the pressure gauge when the filter becomes dirty. Extremely dirty filters will harm system performance and may cause the feed pump to cycle on the high pressure cut-out switch. Do not leave dirty filters in the machine during long idle periods, as biological contamination will result.

To service the filter, swing it out of the case, open the housing, and discard the old filter. Clean out the housing bowl, reassemble the housing with a new 5 micron filter element. Leave dry until next startup.

Use only Spectra approved filters or you may void your warranty. Occasionally, lightly lube the filter housing O-ring with silicone grease.

The Feed Pump and Clark Pump

The feed water pump and the Clark Pump require no routine maintenance except inspection for leaks. Tighten any hose clamps or fittings that show signs of leakage. The high pressure fittings threaded into the Clark Pump have O-ring seals with a straight thread. These should never leak and should never be over tightened. If one of the tube nuts starts to leak, it can be un-threaded, sealed with a bit of silicone grease or silicone seal, and tightened with two wrenches very tightly.

Maintenance Continued...

The Membranes

The membranes need to be cleaned only when feed pressure begins to rise due to fouling or the product quality degrades. The primary causes of fouling are biological growth and scaling. Biological growth occurs when the system is left unused without flushing or pickling. Fouling from mineral scaling will form when the feed water is “hard” or high in carbonates. Very small “colloidal metal” and metal oxide particles can also plug the pores in the membrane. Monitor the product salinity and feed pressure for higher than normal readings for the existing conditions. Other conditions can cause high pressure such as cold feed water or clogged filters. Low product flow is usually due to low voltage, damaged or worn feed pump or Clark Pump. Look for all other causes before cleaning the membrane. Membrane life can be shortened by excessive cleaning.

There are two types of cleaners: acid and alkaline. The acid cleaner (SC-3) will remove mineral scaling. The alkaline cleaner (SC-2) is used to remove biological by-products, oil, and dirt particles that get past the pre-filters. If membrane performance is reduced and it has not been “pickled” recently, cleaning with both chemicals is recommended. The acid cleaner should be used first. Colloidal Metals and Metal Oxides are very difficult to remove. If the membrane fails to respond to both cleanings, this is an indication of another problem with the system, or that it is time to replace the membrane. Contact Spectra Watermakers before removing a membrane.

Membrane Cleaning

For normal cleaning, the SC-3 Acid Cleaning Compound is used first, then the SC-2 Alkaline Cleaning Compound. If known bio-fouling is present, the SC-2 may be used first. Using hot water if possible, up to 100° (38C) is recommended, as it greatly enhances the ability of the cleaners to do their jobs. **Do not exceed 113F (45C) or the membrane may be damaged.**

If the history of the system is unknown or it has been left “un-pickled” for an extended length of time and biological growth is present, it is recommended that the system is cleaned with SC-2, using an alternate source of unchlorinated fresh water before the system is run under pressure. A simple test can be performed to see if biological growth has occurred. Before running the system, remove the pre-filter and examine its condition. If the housing is full of smelly discolored water, the system was not properly stored. Install a clean pre-filter if it was bad. Next check the membrane. Attach the feed and brine service hoses and lead them to a bucket of clean de-chlorinated water. Open the pressure relief valve one turn, and manually run the system for 30 seconds. Examine the brine water: if it’s discolored and smells bad, perform an SC-2 cleaning with an alternate source of unchlorinated water before running the system pressurized. If the brine is fairly clean, the system can be purged, run normally, and checked for performance. Clean the membranes only if performance is reduced.

Heating the water is preferable. One way to do this is to find a camp stove and use a large stainless steel pot to heat the solution in. The cleaning solution throughout the system will heat as it circulates in and out of the pot. An alternative is to heat the one or two gallons of initial water to 100°F (38C) on a stove before mixing in the cleaner and circulating it into the system. Periodically stop and reheat the solution.

Maintenance Continued...

Spectra cleaning compound (SC-2 or SC-3) must be mixed with fresh water at a ratio of 1 container of compound to 3 gallons (12L) of unchlorinated water to have the proper solution. About two gallons (8L) of water is already present inside an Aquifer system. This water has to be figured into the mixture. An Aquifer system will use one container of compound.

Note: Procedures are the same for the SC-2 and SC-3 cleaners

Cleaning Procedure:

1. Make 4 gallons of water into a bucket or obtain 4 gallons of chlorine-free fresh water.
2. Flush the system as shown in the Normal Operation Section. Leave one Gallon of water in the bucket.
3. Place the inlet service hose, brine discharge service hose, and product hose in the bucket.
4. **Make sure that the pressure relief valve is OPEN** (un-pressurized).
5. Mix the cleaning chemical in the bucket.
6. Start the system and circulate the chemical through the system for 20 minutes.
7. Allow the system to soak for an hour; more if the chemicals are cold.
8. Run the pump for another 20 minutes.
9. Stop the pump, replace the brine discharge hose and start the pump until the bucket is empty.
10. Flush the system using the instructions for “New System Startup.”

Suggested Spares

Short term use, weekends etc.

We suggest an Aquifer Support Kit, which consists of six 5 micron filters, and two each of storage and cleaning chemicals.

Use for 2 to 6 months at a time

Two Aquifer Support Kits and one replacement feed pump head.

Longer than 6 months

Additional filters, Offshore Cruising Kit consisting of; Clark Pump seals, O-rings, tools and membrane cleaning chemicals.

Spectra Watermakers parts list:

	Part Number
SC-1 STORAGE COMPOUND	KIT-CHEM-SC1
SC-2 ALKALINE CLEANING COMPOUND	KIT-CHEM-SC2
SC-3 SCID CLEANING COMPOUND	KIT-CHEM-SC3
SUPPORT KIT 6EA 5M FILTERS, 2EA OF SC-1,2 & 3	KIT-AF-SPK
5 MICRON FILTER ELEMENT	FT-FTC-5
SHURFLO PUMP HEAD ASSEMBLY	PL-PMP-SFPH
FILTER HOUSING O-RING	SO-FHS-10H
5" STRAINER SEAL	SO-STN-5SS
5" STRAINER SCREEN	FT-STN-5S
OFFSHORE KIT FOR 7% & 10%	KIT-OFFSH
20" HIGH REJECTION MEMBRANE (FILMTEC)	KIT-MB-20
10% CLARK PUMP REBUILD KIT	KIT-HP-10UD
SEAL & O-RING KIT	KIT-HP-S&O



Troubleshooting

Symptom	Cause	Remedy
----------------	--------------	---------------

Feed pump runs but no pressure	Feed pump air locked Pressure relief valve open	Open pressure relief valve to bleed the air then close to start Close valve
Feed pump starts but shuts down on high pressure	Prefilter excessively clogged Closed valve or blockage in flow	Change filter Check flow path for closed valve or kink in hose
Low water production High amperage High feed pressure	Strainer or prefilter clogged	Service prefilter and strainer
Low water production, Low pressure	Pressure relief valve partially open Worn pump head	Close valve Check flow, should be 1.4 GPM Replace pump head.
Water production normal, but high feed pressure and/or high amperage	Cold seawater temperature Fouled membrane	Normal condition Clean membrane
Water production normal, but lower pressure, and lower amperage	Warm sea water or brackish water.	Normal condition
Asymmetrical pressure and flow readings between pump shifts	Check valve leaking Failed annular ring Shaft seal leaking	Contact dealer or see the Clark Pump repair manual.



Poor Product Water Quality

With any product water quality issue, you must ensure accurate calibration if you are using a salinity meter. For general quality evaluation, your taste is always good enough.

Membranes are not an exact science and two identical systems can have different product quality. World health standards deem water of up to 1000 PPM of total dissolved solids acceptable for drinking consumption. We consider any thing below 750 PPM acceptable but not ideal, and anything below 500 PPM excellent. Factors that could affect water quality are addressed below.

LOW SYSTEM FLOW OR PRESSURE will equate to lower product quality (higher PPM). Aquifer systems, which have a higher feed to output pressure ratio (See nominal pressures under Flow Test), as well as a higher feed flow/membrane area ratio, will produce water in the 150-200 PPM range.

DAMAGE TO THE MEMBRANE by chlorine contamination. Flushing the system with chlorinated water will irreparably damage the membrane. Charcoal filters are used to absorb any chlorine which might be present in flush water. They must be of proper specification to be suitable. There is no test for chlorine damage except the process of elimination of other causes.

DIRTY OR SCALED membranes. A dirty (foreign material), scaled (mineral deposits), or contaminated (bacterial growth) membrane can result in poor water quality and abnormal operating pressures. If operating pressures are above normal, then cleaning is indicated. If the system pressures are within operating normal range, cleaning may have little result. Avoid cleaning as a diagnostic tool. Low water quality after storage with propylene glycol can usually be remedied by extended flushing or an SC-2 cleaning.

MECHANICAL LEAKAGE within the membrane pressure vessel. This is an unlikely but possible cause of poor water quality with old style Codeline pressure vessels (white). The Spectra pressure vessel has a double O-ring arrangement that includes a telltale hole between them so that any salt water leaking past an O-ring will drip into the case and not go into the product water.

If system flow (product plus brine) is 1.5 GPM or above, the membrane is clean, the product flows are consistent with the system flow and the water quality is still not acceptable, then replacement of the membrane is indicated.



Aquifer Flow Test

The flow test is the most useful diagnostic test for system performance, and should be done before replacing or cleaning your membrane. Changes in production or water quality are normally caused by something **other than** the membrane, unless the system has been left unused for a long time.

Before the flow test, change the filter and clean the sea strainer. Carefully check for water or air leaks, as air in the system will cause low production and erratic salinity. Look for air bubbles in the product flow meter, feed water hoses, and brine overboard hose.

Run the system and watch the pressures very closely. If the feed pressure to the Clark Pump is asymmetrical from one stroke to another, this could be part of the problem. A difference of a few PSI is acceptable, but anything over that is an issue. If the pump is asymmetrical, Clark Pump repairs should be done before continuing with these tests.

If no asymmetry is noted, continue with this test.

Make sure the ShurFlo overpressure cutout switch (PL-PMP-SFPH) is set to 125 PSI (8.6 bar). With the pump running, close the brine service valve. The feed pressure should rise to 125 PSI (8.6 bar), then the pump should shut off. If the pump shuts off at a lower pressure see [“Adjust ShurFlo Pressure Switch” bulletin](#) later in this manual.

You will need a graduated bucket and a stopwatch. Measurements must be very accurate, as errors of just a few percent will skew the results. Log the voltage at the feed pump at the same time. Confirm at least 12.5 volts at the pump on 12-volt systems.

1. First divert the product flow into the bucket and record how long it takes to accumulate a given amount. Product flow is usually expressed in Gallons Per Hour or Liters Per Hour, so it's easiest and most accurate to collect the flow for exactly ten minutes, then multiply the quantity by six to get GPH or LPH. Alternatively, you can collect exactly one gallon or four liters then calculate GPH or LPH as follows:

$3600/\text{time in seconds} \times \text{quantity of water} = \text{GPH or LPH}$

There are 3600 seconds in an hour.

Example: It took 9 minutes, 45 seconds to collect 1 gallon of product water, so $3600/585 \times 1 = 6.15$ GPM (9 times 60 seconds is 540 plus 45 equals 585 seconds).

Aquifer Flow Test, continued.....

- Divert the brine discharge, and the product water, both into the bucket. Feed flow (brine discharge and product combined) is usually expressed in Gallons Per Minute or Liters Per Minute. For the simplest and most accurate measurement, divert exactly 5 gallons or 20 liters, record the time, and calculate GPM or LPM as follows:

60/time in seconds x quantity of water = GPM or LPM

Example:

If it takes 3 minutes (180 seconds) to collect 5 gallons of feed flow, so $60/180 \times 5 = 1.67$ GPM

System	Feed Pressure	Static * Pressure	Total Flow/Feed Flow				Product Flow			
			Flow		MIN	MIN	Flow	Flow	MIN	MIN
	psi (bar)	psi (bar)	GPM	LPM	GPM	LPM	GPH	LPH	GPH	LPH
Aquifer 200 & Expedition	80-90 (5.5-6.2)	20-25 (1.4-1.7)	1.7	6.4	1.6	6.0	8.3	31.4	7.7	29.1
Aquifer 360 High (2 pumps)	90-100 (6.2-6.9)	30-35 (2-2.4)	2.8	10.6	2.7	10.2	15	56.7	14.5	54.8
Aquifer 360 Low (1 pump)	60-80 (4.2 to 5.5)	20-25 (1.4-1.7)	1.7	6.4	1.6	6.0	8.7	32.9	8	30.2

* pressure relief valve open 1/2 turn

In order to make good water, you need the proper amount of feed water flow, as in the table above. Compare the product flow to the total feed flow. Product flow should be 9.5% of total flow for an Aquifer 200 or 360. If product percentage is low, you may have an internal leak in the Clark Pump.

For every $1/10^{\text{th}}$ of a GPM feed water flow loss, we will lose about $1/2$ gallon per hour of product flow and the salinity will go up 100 PPM.

Low feed flow combined with low system pressures is most frequently due to a worn ShurFlo pump head (PL-PMP-SFPH).

9.1.16



Technical Bulletins

The following pages include Spectra's most commonly used technical bulletins, covering tests, adjustments, troubleshooting, and common points of confusion.

DWYER FLOW METER SERVICE

The mechanical flow meter, PL-FMT-10 (AF-200 Series) or PL-FMT-20 (AF-360) can be opened for cleaning if it becomes difficult to read or if the little ball gets stuck.

The flow meter will come completely apart for cleaning. First remove the meter from the panel. Remove the four small screws that hold the stainless steel bracket in place. Carefully pry off the bracket. On the very top of the meter is a clear plastic slide-off cover over an Allen screw. Use a flat bladed screwdriver to push the cover off. Holding the meter upright, remove the Allen screw with a ¼" Allen wrench. Invert the flow meter and catch the ball as it falls out. You can use tooth paste or plastic window polish to polish the inside using a small bottle brush. Clean the ball and give it a few coats of wax. If the o-rings are damaged or the unit has been leaking, install new o-rings using a little silicone grease to ease assembly. These are standard o-rings and should be available at most larger auto parts or bearing stores. Reassemble in reverse.

ACCUMULATOR PRESSURE

Your Spectra Watermakers is supplied with a pressure accumulator tank (PL-ACC-TK), which should be installed in the feed water line between the prefilters and the Clark Pump.

The purpose of the feed line accumulator is to reduce the spikes in the feed pressure caused by the cycling of the Clark Pump. If the accumulator is not properly charged it can lead to problems with the ShurFlo Pump pressure cutout switches. The accumulators have an air valve on top similar to those found on car tires. This allows the internal air bladder of the accumulator to be pre-charged. The accumulator should be pumped up to about 65 psi (4.5 bar) for best results. Add air using a tire pump or air compressor. You can experiment with the exact pressure that will give the best pulsation dampening on your installation.



PREFILTERS

An Aquifer system uses a single 5 micron filter to clean the feed water of abrasive materials while the system is in operation. A carbon filter may be used to prevent the entrance of chlorine during fresh water flushing.

During normal operation, the feed water is filtered in two stages. First it passes through a fine mesh metal sea strainer, which protects the Feed Pump from foreign materials and larger sea creatures. After passing through the Feed Pump, the feed water passes the filter housing containing 5 micron element, removing very fine particles that could damage the Clark Pump and shorten membrane life.

Cleaning schedules will vary widely depending on how and where the system is used. If large amounts of feed water are run through the system over a relatively short period of time in biologically fertile near-shore waters, the prefilters will plug up, water production and quality will drop, and the system pressure will change dramatically. If the pressure gauge was installed before the prefilters, as pictured in this manual, the pressure will increase. If the pressure gauge was installed after the prefilters the pressure will drop

When operated for only an hour or two a day in inland or near-shore waters, the trapped plankton will begin to decay in the filters long before the elements plug up. The decaying plankton and bacteria will cause a "rotten egg" smell in the product water. This decay will set in overnight in tropical waters, or after a week or two in higher latitudes. If handled gently and changed regularly before they get too smelly, filters can be cleaned several times. In crystal clear blue water conditions, the filters may need to be cleaned much less frequently.

If a charcoal filter is used for fresh water flushing the system it will not plug up unless you have some incredibly dirty domestic water in your supply tank. About six months after installation the charcoal filter element will lose its effectiveness and must be replaced. This is purely a function of time.



SHURFLO PUMP WON'T RUN

If the pump has power to it (the fan runs), but the pump won't run, first check the pressure switch. The pressure switch (EL-FP-PS) is located on the wet end of the pump and has two red wires plugged into it. Jump the two red wires together and see if the pump runs. You can safely run the system with the pressure switch jumped, just keep an eye on the pressure gauge and don't let system pressure exceed 110 PSI. Replace the switch when a spare is available. The pressure switch should never open unless there is a problem with the system or it is incorrectly adjusted. Check the accumulator pressure, the operating feed pressure, and the switch cut-out setting - bulletins: Misc-3, Misc-4, and SF-2.

If the pump will not run with the pressure switch jumped then it is most likely a problem with the brushes or overheat protection switch inside the motor. The motor will come completely apart by removing the two screws on the end of the motor. Remove the rear cover and paper insulator. Pull out the plastic brush holder. The thermal switch is located on one of the brush leads. With an ohmmeter, check for continuity through the switch. If it is open, you can make temporary repairs by wiring around it, being careful that your new wiring doesn't chafe on the moving parts, nor resist the springs that push the brushes on to the commutator. The overheat switch is unlikely to fail unless the motor has overheated and shut down. Consider relocating the pump or improving ventilation if the overheat protection has failed.

If any corrosion is apparent the brushes may be sticking. Once apart clean all the carbon dust from all the parts. Clean the commutator with light sandpaper. Make sure to clean the small grooves on the commutator with a small sharp tool to remove the carbon in between the segments. Adjust the springs on the brush holders so the brushes slide smoothly in and out. If the bearings are rough and binding, remove the rubber dust cover and clean the best you can, grease them, and work them free by hand. Don't service the bearing unless absolutely necessary. Reassemble in reverse order. You can hold the carbon brushes back with papers clips inserted through the slots in the brush holder so they don't hang up on the bearing during assembly. Make sure the corrugated bearing shim doesn't push out, if it does, push it back into place.

This may keep you going until the motor can be replaced.

5/23/14

ADJUST SHURFLO PRESSURE SWITCH

The Shurflo feed pumps are equipped with a high pressure cut out switch (EL-FP-PS). This is the small black unit on the end of the wetted end of the pump head (PL-PMP-SFPH) where the two red wires connect. If the pressure switch is not properly adjusted the pump may cut out each time the Clark pump cycles and the feed pressure spikes. When this happens the production will drop and an unusual noise will be heard when operating on two pumps, but the system will function normally during one pump operation on either pump. The points in the switch will fail fairly fast if set too low because of the constant arcing from cutting out each time the Clark pump shifts.

For all systems except the Gulfstream the feed pump pressure switches should be set as follows. On the very center of the switch is a small 5/64" Allen screw. Run the system on pump one and close the brine discharge valve (1/2 way 90 deg), or kink the discharge hose, to block the flow. Watch the pressure gauge and adjust the pressure switch to shut off at 125 psi. Repeat for pump two. Turn the Allen screw clockwise to increase the cut off set point.

Gulfstream models could experience seal failures in the manifold if pressurized too high. For this reason the pump should be removed from the system and the switch adjusted using a separate pressure gauge. If replacing a feed pump or pump head for a Gulfstream model arrange to preset the switch before installation.

5/23/14



Pressure Switch
Adjusting Screw

How Super Speedfit Works

To make a connection, the tube is simply pushed in by hand; the unique patented John Guest collet locking system then holds the tube firmly in place without deforming it or restricting flow.

Materials of construction

Super Speedfit fittings are made up of three components:

Bodies are produced in an acetal copolymer or polypropylene.

'O' rings are Nitrile rubber or EPDM.

Collets are produced in acetal copolymer or polypropylene with stainless steel teeth.


How to make a connection

Cut the tube square




Cut the tube square and remove burrs and sharp edges. Ensure the outside diameter is free of score marks. For soft or thin walled tube we recommend the use of a tube insert

Push up to tube stop

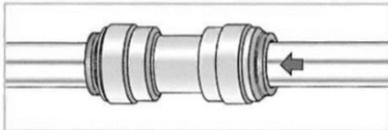

Push the tube into the fitting, to the tube stop.

Pull to check secure

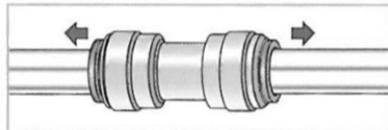

Pull on the tube to check it is secure. Test the system before use.

Grips before it seals

'O' ring provides a leakproof seal


The Collet (gripper) has stainless steel teeth which hold the tube firmly in position while the 'O' ring provides a permanent leakproof seal.

Stainless steel teeth grips the pipe

Collet

To disconnect

Push in collet and remove tube

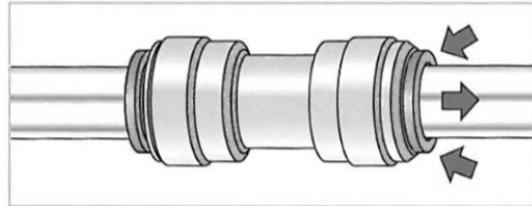

To disconnect, ensure the system is depressurized, push the collet square against the fitting. With the collet held in this position the tube can be removed.


Spectra High Pressure Tube Fitting Assembly Instructions

The Aquifer has eight high pressure fittings, two on each cylinder on the Clark Pump, two on the pressure vessel end caps, and two 90-degree elbows on the back of the Clark Pump. As the compression fitting is tightened, it compresses a ferrule onto the stainless tubing, fixing the ferrule permanently to the tube and holding the compression nut captive.

The body of the fitting seals to the underlying component with an O-ring. On the Clark Pump cylinders and the end caps this O-ring is compressed by tightening the entire fitting. The O-rings on the 90-degree fittings on the back of the Clark Pump have captive nuts and washers, which compress the O-rings without turning the entire fitting.

If a tube fitting leaks it can sometimes be resealed by just tightening. You must use two wrenches, a 13/16-inch wrench to hold the base, and a 7/8-inch wrench to turn the compression nut. The 13/16-inch wrench will need to be thin so as not to interfere with the compression nut. If this doesn't work, disassemble the fitting, grease liberally with silicone grease (the ferrule and the threads) and re-tighten firmly.

The base O-rings should be **gently** compresses to achieve a good seal, and may be damaged by overtightening.

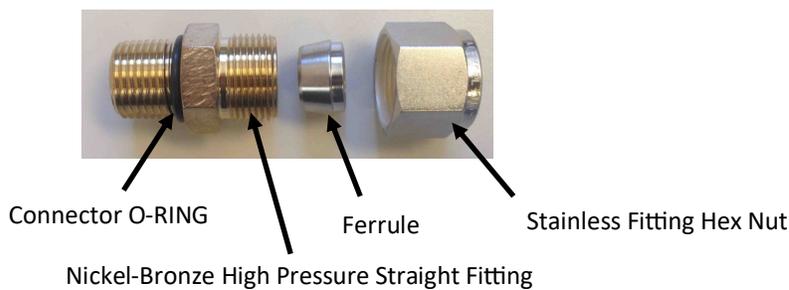

Aquifer Part Numbers

Front View



Pump to Pressure Vessel
Upper SS Tube:
PL-TB-HPTPVUS

**CLARK PUMP
KIT-HP-10**

**STAINLESS STEEL HIGH
PRESSURE ELBOW
PL-MTE-3/4SX1/2B**


**PRODUCT OUTLET
FITTING
PL-SWF-1/8X1/4J**



**Plate Bracket End Cap
FM-PVB-PBE**

**STAINLESS STEEL HIGH PRESSURE
STRAIGHT FITTING
PL-MTS-3/8X1/2B**

Rear View

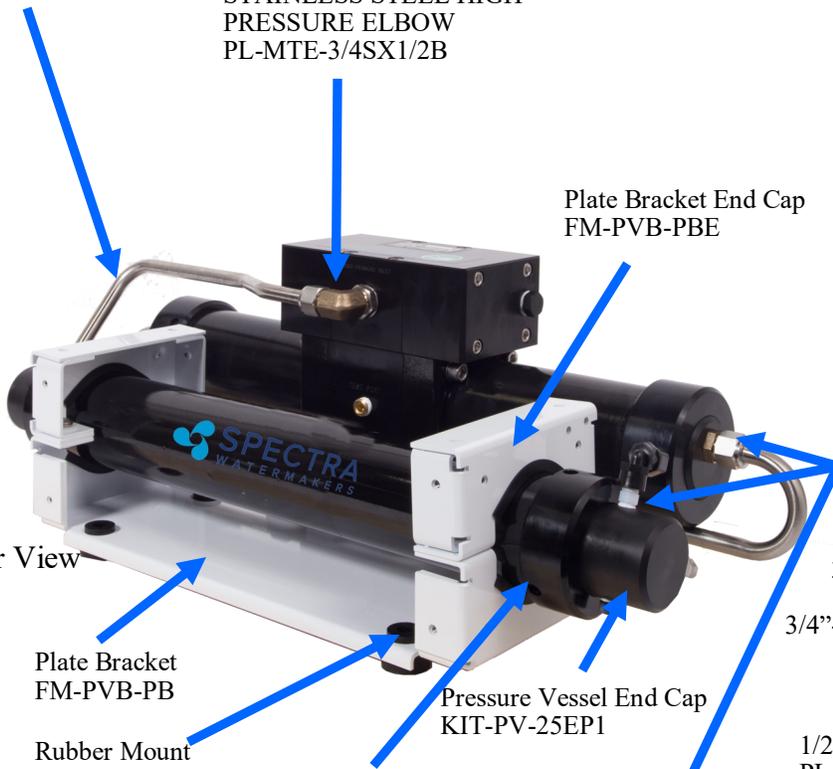

**Plate Bracket
FM-PVB-PB**

**Rubber Mount
HD-RBP-RM
Plastic Spacer
HD-SPN-MKINS**

**Pressure Vessel End Ring
FT-PV-ER**

**Pressure Vessel End Cap
KIT-PV-25EP1**

**3/4"-16 Straight Thread O-RING
SO-FT-STF
3/4"-16S x 1/2" Tube 90 deg bronze
PL-MTE-3/4S1/2B**

**1/2" Stainless Ferrule
PL-HWR-1/2FR**

**Note: Aquifer 360 has two membranes
and pressure vessels. Only one is pictured
above.**



**Connector O-RING
SO-HPP-CT**



**Stainless Fitting Hex Nut
PL-HWR-1/2HN**

Aquifer Part Numbers, continued...


EL-BAT-AQB
AQUIFER BATTERY



EL-BAT-AQCG
AQUIFER BATTERY CHARGER

PL-HP-1/8
1/8" HEX PLUG NYLON

PL-MTS-3/8X1/2B
3/8"NPT X 1/2" TUBE
FITTING ST.

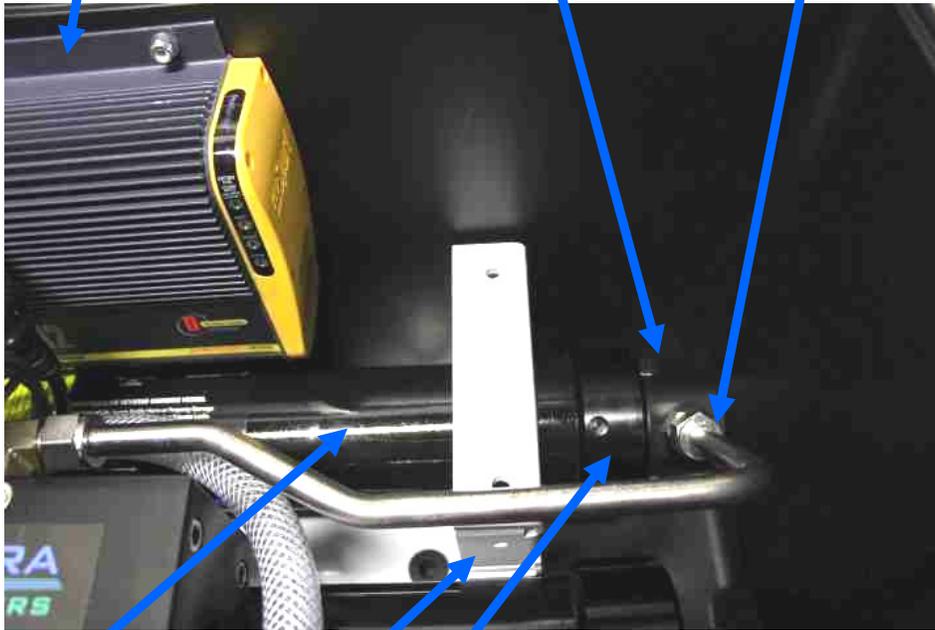

FT-PV-20
20" HIGH PRESSURE
VESSEL

FM-PVB-PBE
PLATE BRACKET
END

FT-PV-ER
MEMBRANE END RING

Aquifer Part Numbers, continued...

FT-FTH-10H
HIGH PRESSURE FILTER
HOUSING(BLACK)

PL-BSH-3/4X1/2N
3/4" X 1/2" HEX BUSHING
REDUCER NYL

PL-SWF-1/2X1/2
1/2"NPT X 1/4" TUBE
SWIVEL FITT ELL

FM-PVB-PBE
PLATE BRACKET
END

EL-BAT-AQCC
AQUIFER BATTERY
CHARGER



FM-AQ-FBF
FILTER BRACKET FIXED
(FASTEN TO CASE)

FM-AQ-FBH
FILTER BRACKET HINGE
(FASTEN TO FILTER HOUSING)

FT-FTC-5
5 MICRON FILTER
ELEMENT (INSIDE)

PL-NLT-1/2LP
1/2" LOW PRESSURE
TUBE (PARKER)


PL-HBE-1/8X1/4
1/8" NPT X 1/4" HOSE BARB
ELL NYLON

PL-MTE-3/8x1/4J
3/8"NPT x 1/4" TUBE
FITTING ELL JG


PL-BSH-1/2X1/4N
1/2" X 1/4" HEX BUSHING
REDUCER NYL

PL-ACC-TK
ACCUMULATOR
TANK

PL-SWF-1/2x1/2T
1/2"NPT x 1/2" TUBE
SWIVEL TEE POLY

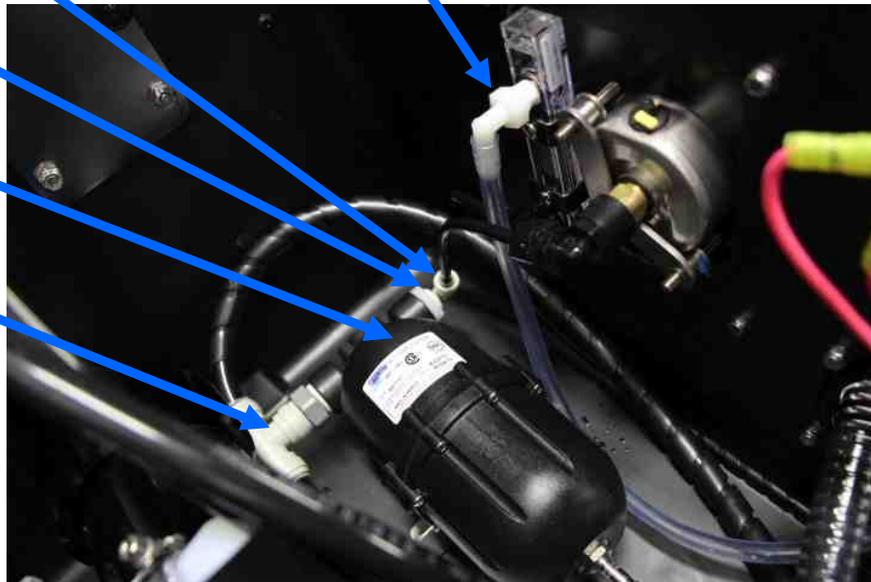

Aquifer Part Numbers, continued...

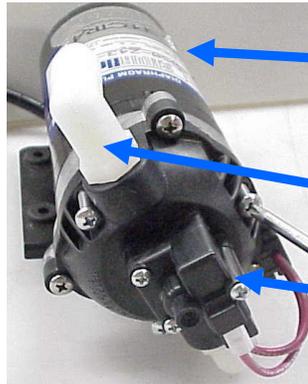


Feed Pump 12Volt,
EL-FP-12V

Feed Pump 24Volt
EL-FP-24V

3/8"NPT X 5/8" Hose Barb El.
PL-HBE-3/8X5/8


Feed Pump Pressure Switch
EL-FP-PS

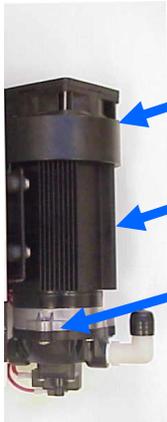

Cooling Fan 12V, 24V
KIT-FK-12,24

Feed Pump Heat Sink
EL-FP-FPHS

Pump Head Assembly W/Press. Switch
PL-PMP-SFPH

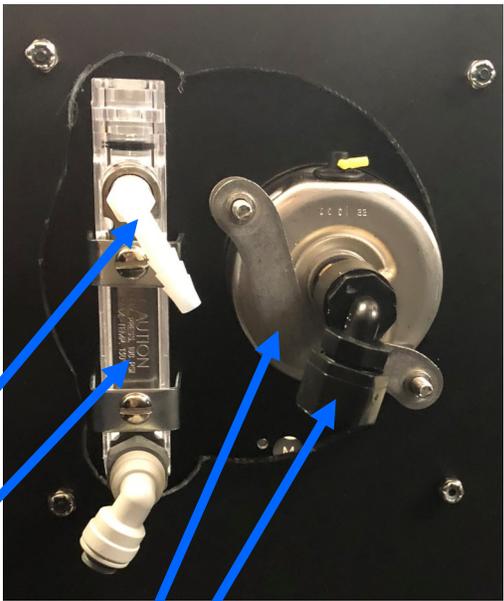

1/8MPT X 1/4 TUBE EL
PL-HBE-1/8X1/4

PRODUCT FLOW METER
(Aquifer 200) PL-FMT-10
(Aquifer 360) PL-FMT-20


PRESSURE GAUGE
PL-PSG-2.5L


1/4FPT X 1/4 TUBE EL
PL-FTE-1/4X1/4P

ACCUMULATOR
PL-ACC-TK




SEA STRAINER
KIT-AQ-STNASSEM

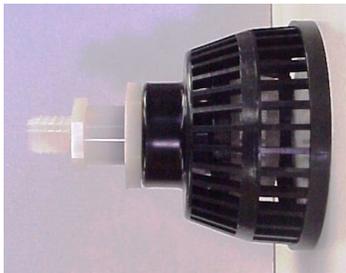

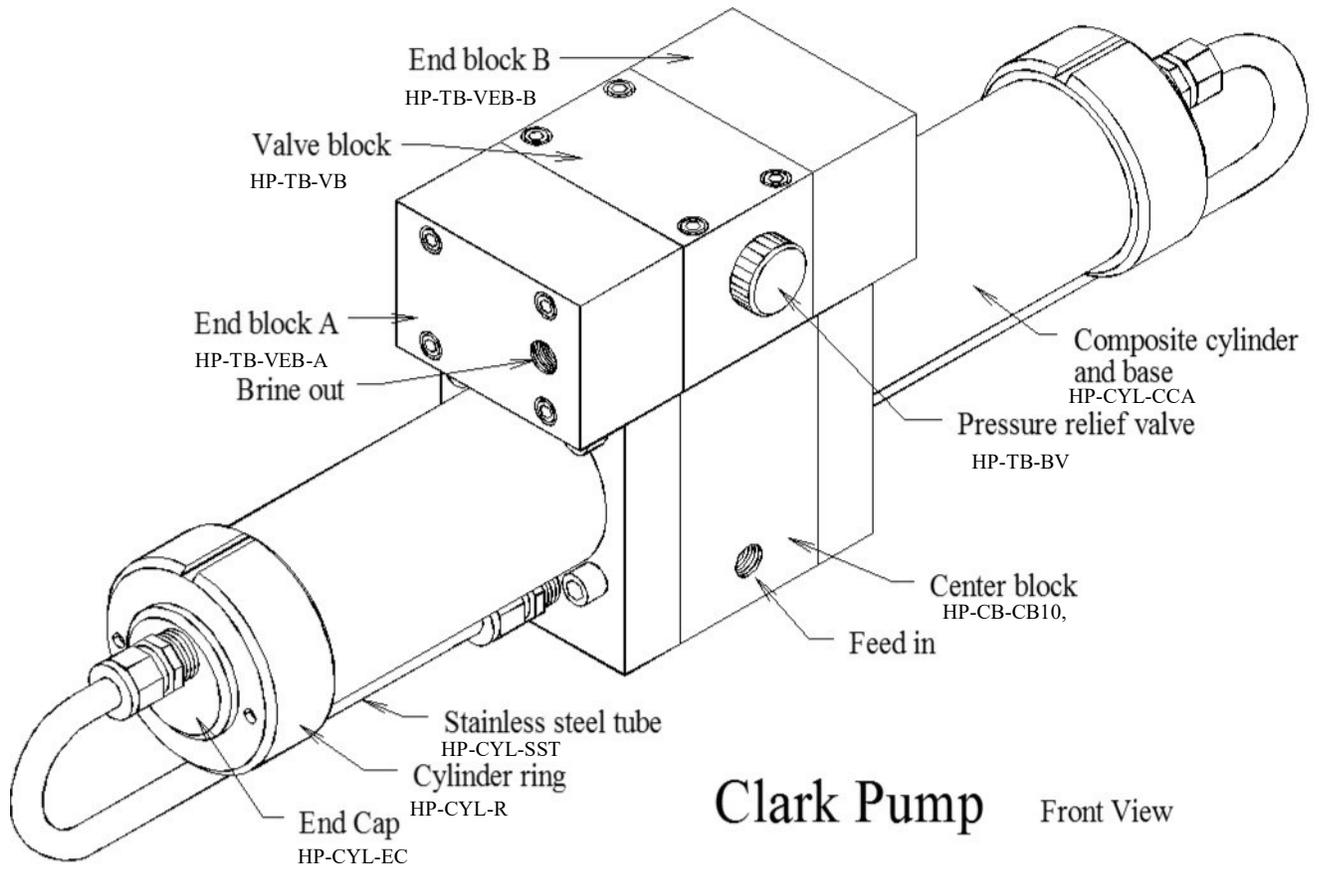


Clark Pump Front View

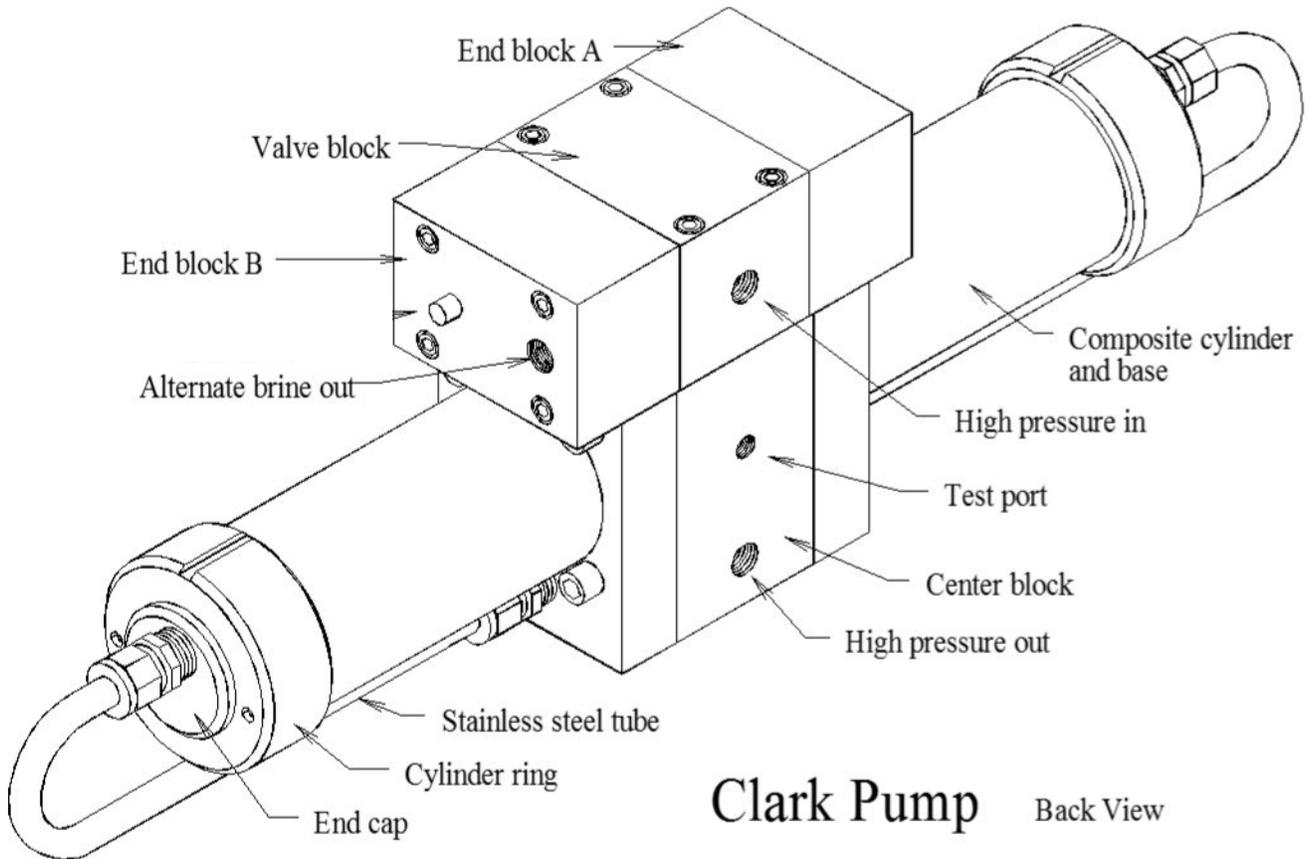


Clark Pump Back View

Spool Assembly Exploded View

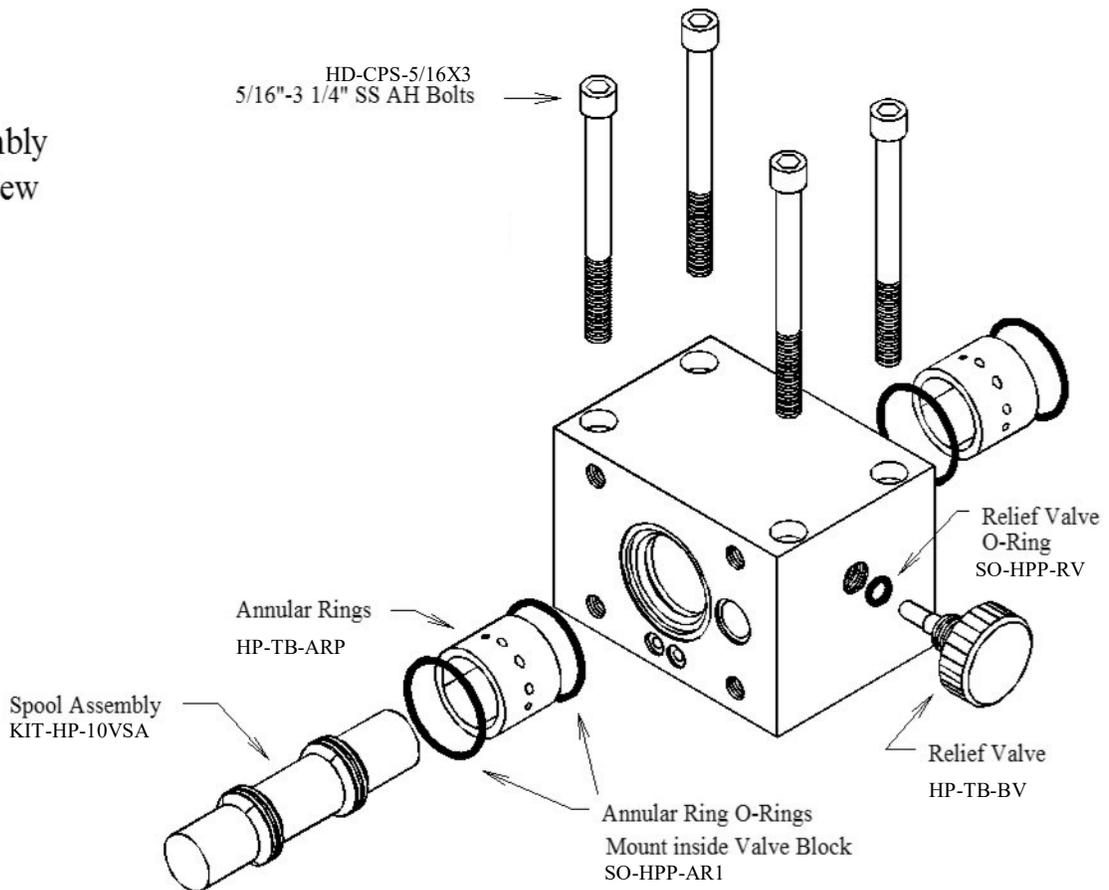


Valve Block

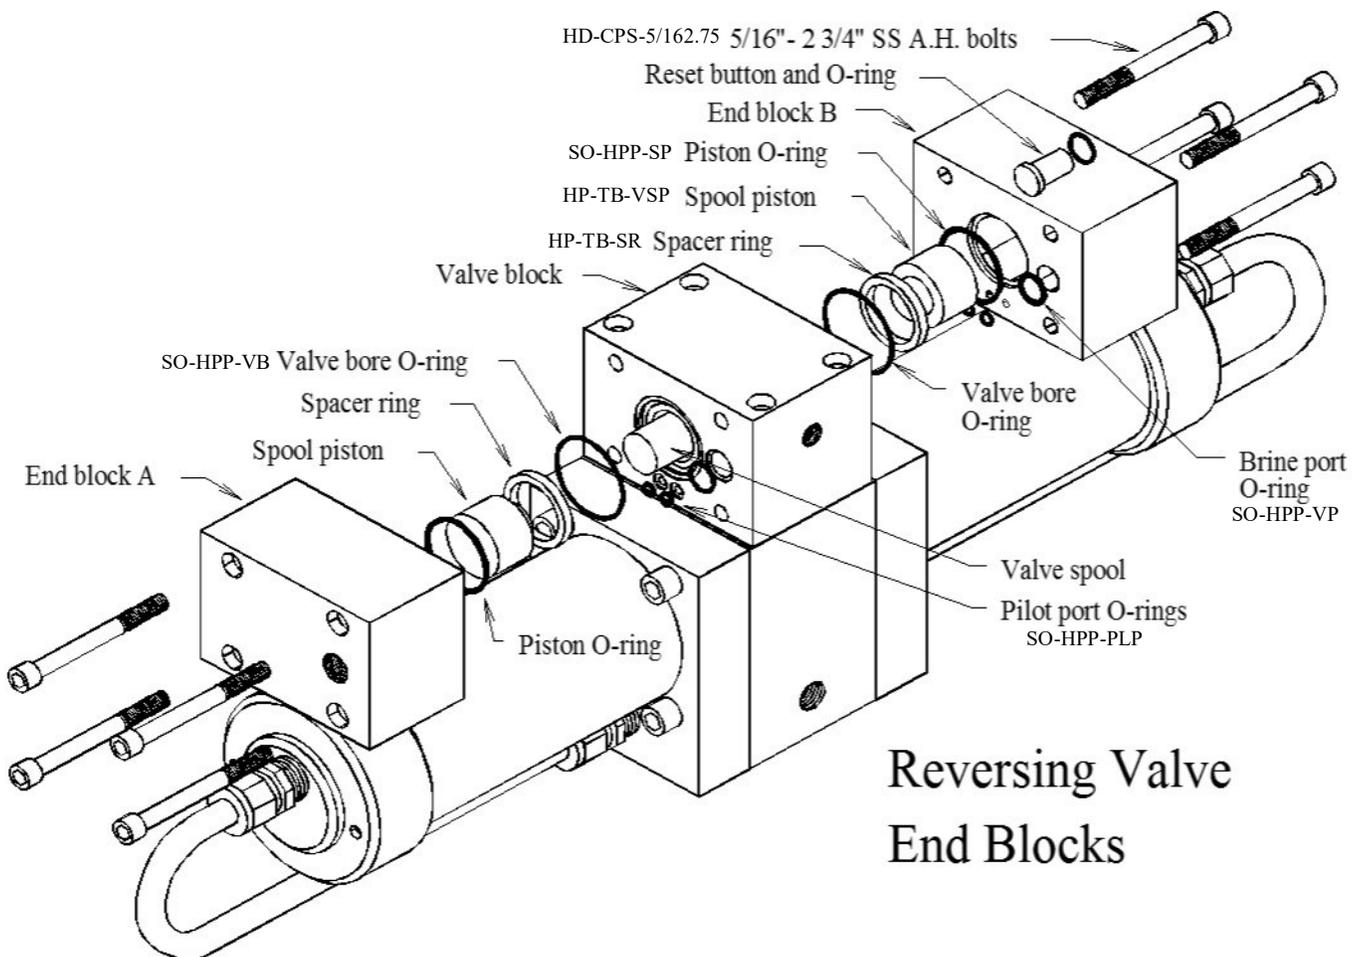

Reversing Valve End Blocks

Parts

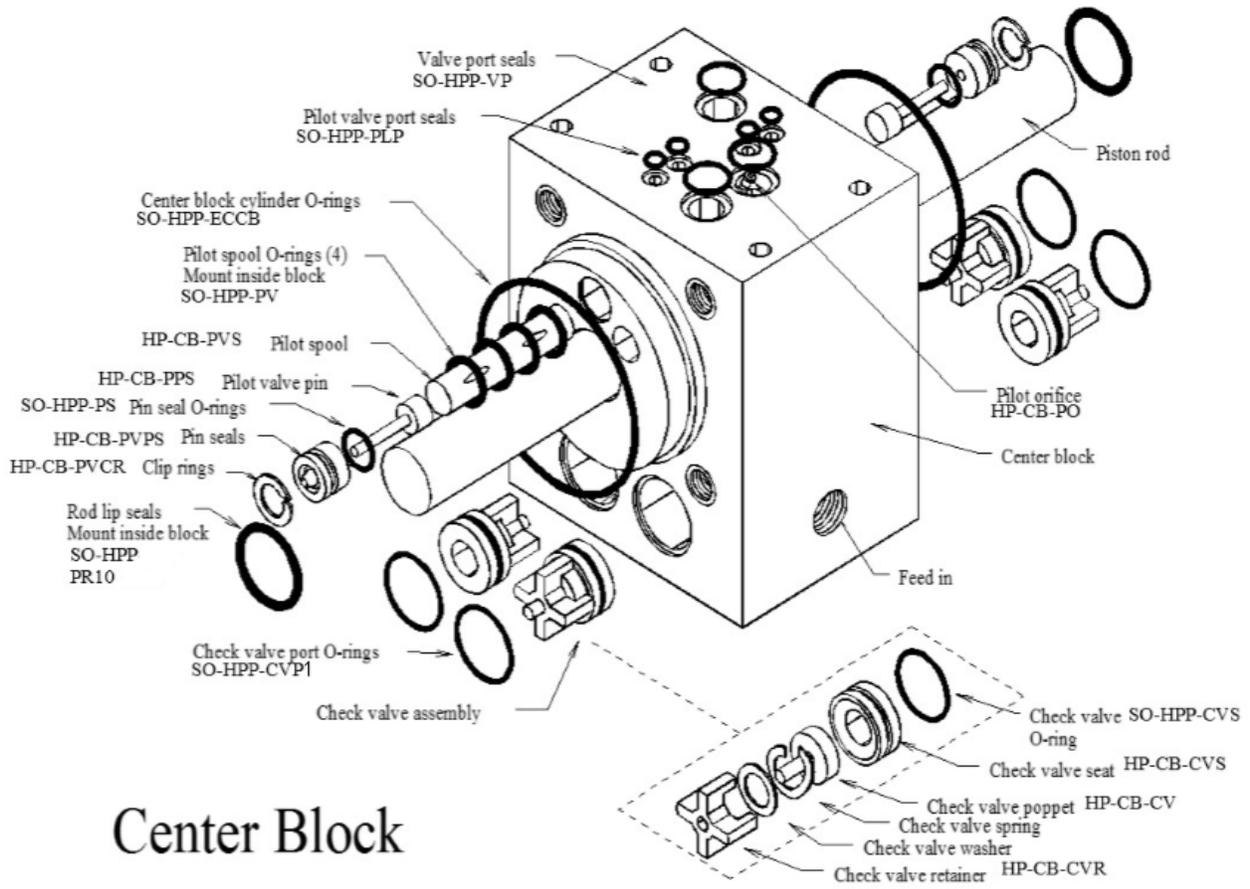

Center Block

Parts

