



SR30

ISO Spectrally Flat Class A (Secondary
Standard) Pyranometer



Table of contents

1. Introduction	1
2. Precautions	1
3. Initial inspection	1
4. QuickStart	2
4. Overview	4
5. Specifications	5
6. Installation	6
6.1 Wiring	6
6.2 Programming	7
6.2.1 CRBasic programming	7
6.3 Siting	8
6.4 Mounting procedure	8
7. Operation	9
7.1 RS-485 default configuration	9
7.2 Modbus map	9
8. Maintenance and troubleshooting	10
Appendix A. Importing Short Cut code into CRBasic Editor	12

1. Introduction

The SR30, an ISO 9060:2018 spectrally flat Class A (secondary standard) pyranometer manufactured by Hukseflux, features recirculating ventilation and heating (RVH™) technology. As a standalone unit, the SR30 is fully compliant with IEC 61724-1 standards, whereas other pyranometers require external ventilation/heating units to be compliant. The SR30 is an ideal instrument for solar resource and photovoltaic (PV) performance monitoring.

2. Precautions

- READ AND UNDERSTAND the [Safety](#) section at the back of this manual.
- Although the SR30 is rugged, it should be handled as a precision scientific instrument.

3. Initial inspection

- Upon receipt of the SR30, inspect the packaging and contents for damage. File damage claims with the shipping company.
- The model number and cable length are printed on a label at the connection end of the cable. Check this information against the shipping documents to ensure the correct product and cable length are received.


4. QuickStart

A video that describes data logger programming using *Short Cut* is available at:

www.campbellsci.com/videos/cr1000x-datalogger-getting-started-program-part-3 . *Short Cut* is an easy way to program your data logger to measure the sensor and assign data logger wiring terminals. *Short Cut* is available as a download on www.campbellsci.com . It is included in installations of *LoggerNet*, *RTDAQ*, or *PC400*.

The following procedure shows using *Short Cut* to program the SR30.

1. Open *Short Cut* and click **Create New Program**.
2. Double-click the data logger model.
3. In the **Available Sensors and Devices** box, type SR30. You can also locate the sensor in the **Sensors > Meteorological > Solar Radiation** folder. Double click the sensor model. Type the **RS-485 address**; default address is 1. The address must be unique and may need to be changed if another sensor on the terminal has the same address. Change the address using Modbus commands. For more information, refer to the [Modbus map](#) (p. 9).

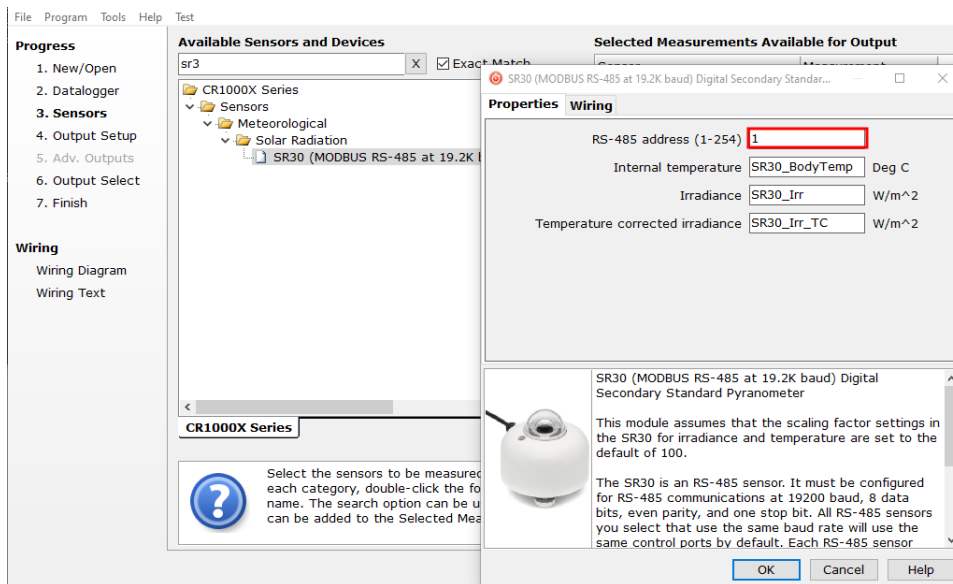

- Click on the **Wiring** tab to see how the sensor is to be wired to the data logger. Click **OK** after wiring the sensor.

Properties **Wiring**

SR30 (19.2K)	CR1000X Series
Red	12V
Green	C5
White	C6
Clear	G
Black	G

Click a CR1000X Series terminal name to change a wire's location.



SR30 (MODBUS RS-485 at 19.2K baud) Digital Secondary Standard Pyranometer

This module assumes that the scaling factor settings in the SR30 for irradiance and temperature are set to the default of 100.

The SR30 is an RS-485 sensor. It must be configured for RS-485 communications at 19200 baud, 8 data bits, even parity, and one stop bit. All RS-485 sensors you select that use the same baud rate will use the same control ports by default. Each RS-485 sensor using the same control ports must have a unique RS-485 address. If you use the same control ports for multiple sensors, you must use different RS-485 addresses.

OK Cancel Help

- Repeat steps three and four for other sensors you want to measure. Click **Next**.
- In **Output Setup**, type the scan rate, a meaningful table name, and the **Data Output Storage Interval**.

Short Cut (CR1000X Series) C:\Campbellsci\SCWin\untitled.scw

File Program Tools Help Test

Progress

- New/Open
- Datalogger
- Sensors
- Output Setup**
- Adv. Outputs
- Output Select
- Finish

Wiring

Wiring Diagram
Wiring Text

How often should the CR1000X Series measure its sensor(s)? 60 Seconds

Data is processed by the datalogger and then stored in an output table. Two tables are defined by default; up to 10 tables can be added. Add New Table

1 Hourly 2 Daily

Table Name: Hourly Delete Table

Data Output Storage Interval
Makes 60 measurements per output interval based upon the chosen measurement interval of 60 Seconds. 60 Minutes


Copy to External Storage
☐ SC115 Flash Memory Drive
☒ Memory Card

☐ Advanced Outputs (all tables)

? Specify how often measurements are to be made and how often outputs are to be stored. Note that multiple output intervals can be specified, one for each output table. By default, an output table is set up to send data to memory based on time. Select the Advanced Output option to send data to memory based on one or more of the following conditions: time, the state of a flag, or the value of a measurement.

Previous Next Finish Help

7. Select the measurement and its associated output option.

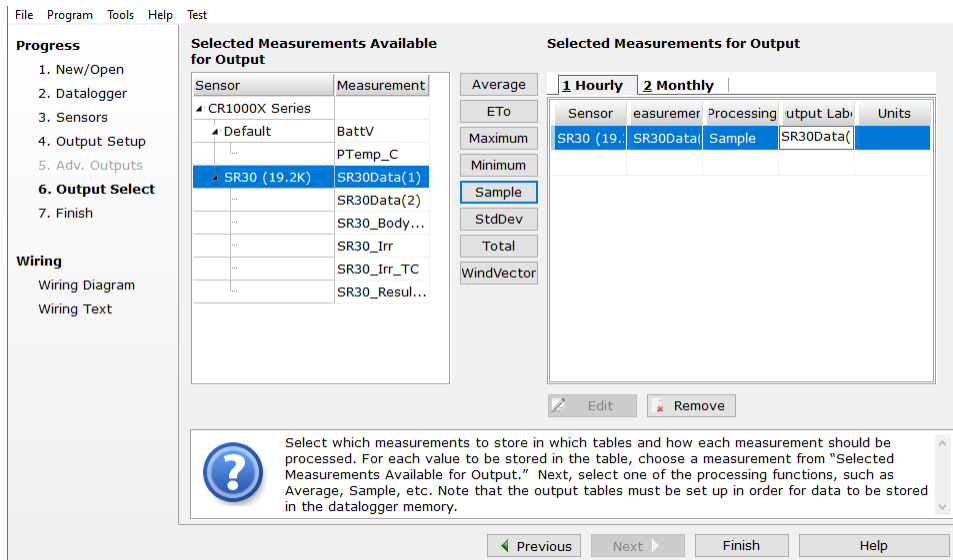

8. Click **Finish** and save the program. Send the program just created to the data logger if the data logger is connected to the computer.
9. If the sensor is connected to the data logger, check the output of the sensor in the data logger support software data display in **LoggerNet**, **RTDAQ**, or **PC400** to make sure it is making reasonable measurements.

4. Overview

The SR30 measures solar radiation with a high-quality blackened thermopile protected by two glass domes. It has an anodized aluminum body and a white sun shield that reduces the sensor temperature. The glass domes are heated by ventilating the area between the inner and outer dome using recirculating ventilation and heating (RVH™) technology. A bubble level and adjustable leveling screws enable leveling the sensor without using a leveling base.

Communications to on-site RTUs, SCADA systems, or other data acquisition systems are simplified with the industry-standard Modbus RTU communications protocol.

Features

- Heated for high data availability, featuring RVH™ technology
- Compliant with IEC 61724-1:2017 Class A
- Remote sensor diagnostics

5. Specifications

Sensor:	High-quality blackened thermopile protected by two glass domes with integrated heater and ventilation
Measurement description:	Monitors solar radiation for the full solar spectrum range
ISO classification:	Spectrally flat class A (secondary standard) ISO 9060:2018
IEC 61724-1:2017 compliance:	Class A
Calibration uncertainty:	< 1.2 % (k = 2)
Heating:	Included
Ventilation:	Included
Technology employed:	Recirculating ventilation and heating (RVH™)
Operating condition	
Standard mode:	Heated and ventilated
Low-power mode:	Heater and ventilator [OFF]
Power consumption @ 12 VDC	
Standard mode:	< 2.3 W
Low power mode:	< 0.1 W
Zero offset A:	< 5 W/m ² (unventilated, low-power mode), 2 W/m ² (ventilated)
Calibration:	Traceable to WRR; calibration registers accessible to users
Spectral range:	285 to 3000 nm
Operating temperature range:	–40 to 80 °C
Temperature response:	< ±0.4 % (–30 to 50 °C)
Operating voltage range:	8 to 30 VDC
Tilt measurement uncertainty:	±1° (0 to 90 °)

Output:	Modbus RS-485 Irradiance in W/m ² Instrument body temperature in °C Tilt angle in ° Internal humidity in % Ventilator speed in RPM
Communications protocol:	Modbus over 2-wire RS-485
Compliance:	View compliance documents at: www.campbellsci.com/sr30-I

6. Installation

When programming with *Short Cut*, skip [Wiring](#) (p. 6) and [CRBasic programming](#) (p. 7). *Short Cut* does this work for you. See [QuickStart](#) (p. 2) for a *Short Cut* tutorial.

6.1 Wiring

Table 6-1: Pin-out, wire color, function, and data logger connection

Wire color		Pin out		Function	Data logger connection ¹
Campbell Scientific	Huskeflux	-PT	-PW		
Green	Gray	5	2	RS-485 (A-)	A-, C (odd)
White	White	7	4	RS-485 (B+)	B+, C (even)
Red	Brown	2	1	Power in (8 to 30 VDC)	12V
Black	Black	6	3	Power ground	G
Clear	Yellow	9	5	Shield	G
--	Blue	no function			

¹ Assumes the sensor directly connects to the data logger.

6.2 Programming

Short Cut is the best source for up-to-date programming code for Campbell Scientific data loggers. If your data acquisition requirements are simple, you can probably create and maintain a data logger program exclusively with **Short Cut**. If your data acquisition needs are more complex, the files that **Short Cut** creates are a great source for programming code to start a new program or add to an existing custom program.

NOTE:

Short Cut cannot edit programs after they are imported and edited in **CRBasic Editor**.

A **Short Cut** tutorial is available in [QuickStart](#) (p. 2). If you wish to import **Short Cut** code into **CRBasic Editor** to create or add to a customized program, follow the procedure in [Importing Short Cut code into CRBasic Editor](#) (p. 12). Programming basics for CRBasic data loggers are provided in the following section.

6.2.1 CRBasic programming

The RS-485 output can be directly read by a MeteoPV, CR6-series, CR1000X, or Modbus RTU RS-485 network. Other Campbell Scientific data loggers can use an MD485 multidrop interface to read the RS-485 output (refer to the MD485 manual). Refer to

www.campbellsci.com/videos/meteopv  for information about using the MeteoPV.

A CR6 or CR1000X data logger programmed as a Modbus client can retrieve the values stored in the input registers. To do this, the CRBasic program requires a **SerialOpen()** instruction followed by the **ModbusClient()** instruction.

NOTE:

ModbusClient() was formerly **ModbusMaster()**. Campbell Scientific, in conjunction with the Modbus Organization, is now using "client-server" to describe Modbus communications. The Modbus client(s) initiates communications and makes requests of server device(s). Server devices process requests and return an appropriate response (or error message). See <https://modbus.org> for more information. Existing programs that use the old Modbus terminology will still compile in the data logger.

The **SerialOpen** instruction has the following syntax:

SerialOpen (ComPort, Baud, Format, TXDelay, BufferSize, Mode)

The **Format** is typically set to logic 1 low; even parity, one stop bit, 8 data bits. The **Mode** parameter should configure the ComPort as RS-485 half-duplex, transparent. The **ModbusMaster()** instruction has the following syntax:

```
ModbusMaster (Result, ComPort, Baud, Addr, Function, Variable, Start, Length, Tries, TimeOut, [ModbusOption])
```

The **Addr** parameter must match the sensor Modbus address. To collect all of the values, the **Start** parameter needs to be 1 and the **Length** parameter needs to correspond with the register count (see [Modbus map](#) [p. 9]). **ModbusOption** is an optional parameter described in the *CRBasic Editor* Help. A downloadable example program is available at www.campbellsci.com/downloads/sr30-example-program .

6.3 Siting


The solar radiation sensor is usually installed horizontally, but can also be installed at any angle, including an inverted position. Site the sensor to allow easy access for maintenance, but avoid locations with obstructions or reflections above the plane of the sensing element. It is important to mount the sensor such that a shadow or a reflection will not be cast on it at any time. If this is not possible, try to choose a site where any obstruction over the azimuth range between earliest sunrise and latest sunset has an elevation not exceeding 5°. Diffuse solar radiation is less influenced by obstructions near the horizon. The sensor should be mounted with the cable pointing towards the nearest magnetic pole. For example, in the northern hemisphere, point the cable toward the North Pole.

6.4 Mounting procedure

Required tools:

- Diopter
 - Solar compass
 - 8 mm (5/16-inch) open-end wrench or hex key wrench for U-bolt nuts
 - CM256 mounting bracket
1. On a level surface, level the solar radiation sensor using the leveling feet on the sensor.
 2. Secure the solar radiation sensor to the mounting bracket.
 3. Using a diopter in combination with a solar compass, install and orient the crossarm on the tripod or the mast. If installing the mounting bracket on a vertical pole, ensure the pole is truly vertical.

4. Use the two set screws to secure the bracket to the crossarm or pole as shown in the following figure. For pyranometers mounted horizontally, ensure the mounting bracket is horizontal in two dimensions. For pyranometers mounted at an angle, set the mounting bracket angle to the desired angle prior to tightening the mounting hardware.

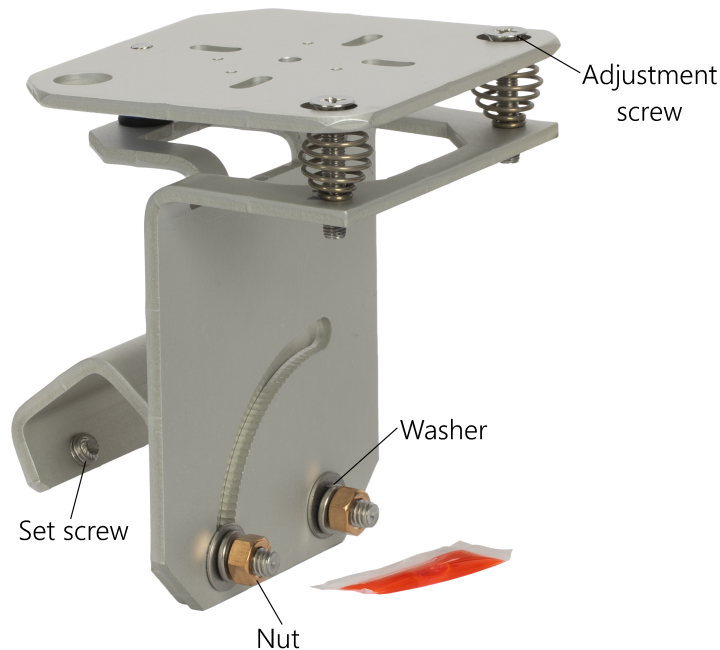

5. Verify mounting hardware is firmly tightened, and that the mounting bracket is at the desired angle.

7. Operation

7.1 RS-485 default configuration

The default RS-485 settings are: 19200 baud rate, 8 data bits, even parity, one stop bit. This configuration is used for most Modbus networks.

7.2 Modbus map

[Table 7-1](#) (p. 10) provides the Modbus register map for the most commonly used values. A comprehensive register map is available in the Hukseflux manual.

Table 7-1: Modbus register map				
Starting register number	Register count	Data format	Units	Description
1	1	Signed 16 bit integer		Modbus address
3	2	Signed 32 bit integer	mW/m ²	Irradiance (temperature compensated signal)
5	2	Signed 32 bit integer	mW/m ²	Irradiance (temperature uncompensated signal)
7	1	Signed 16 bit integer	0.01 °C	Sensor body temperature
8	1	Signed 16 bit integer	x 0.1 Ω	Sensor electrical resistance
9	1	Signed 16 bit integer		Scaling factor irradiance
10	1	Signed 16 bit integer		Scaling factor temperature
11	2	Signed 32 bit integer	nV	Sensor voltage output
41	1	Signed 16 bit integer		Serial number
42	2	Float	μV/W/m ²	Sensor sensitivity
47	2	Signed 32 bit integer		Calibration date
99	1	Signed 16 bit integer	x 0.01 %	Humidity

8. Maintenance and troubleshooting

The SR30 has no service items that require scheduled replacement. There is no accessible desiccant cartridge to maintain. Use pure alcohol or distilled water and a lint-free cloth to clean the dome, removing smears and deposits. Local conditions and application dictate a cleaning interval. Sophisticated research applications require daily cleaning. For typical PV applications, clean once per week, bi-monthly, or monthly. The SR30 should be recalibrated following industry-standard best practices such as ASTM G167, ISO 9846, ASTM E824 or ASTM G207 by an accredited lab. The recommended recalibration interval is two years. Contact Campbell Scientific for more information.

Unexpected results typically occur because of improper wiring or programming, electromagnetic radiation, or damaged cables. Ensure that the data logger program includes the correct parameters for the measurement instructions. Check for the presence of strong sources of electromagnetic radiation. Check the cable for damage and ensure that it is properly connected to the data logger.

Appendix A. Importing *Short Cut* code into *CRBasic Editor*

Short Cut creates a .DEF file that contains wiring information and a program file that can be imported into *CRBasic Editor*. By default, these files reside in the C:\campbellsci\SCWin folder.

Import *Short Cut* program file and wiring information into *CRBasic Editor*:

1. Create the *Short Cut* program, then save it. Click the **Advanced** tab then the **CRBasic Editor** button. Your program file will open in CRBasic with a generic name. Provide a meaningful name and save the CRBasic program. This program can now be edited for additional refinement.

NOTE:

Once the file is edited with *CRBasic Editor*, *Short Cut* can no longer be used to edit the program.

2. To add the *Short Cut* wiring information into the new CRBasic program, open the .DEF file located in the C:\campbellsci\SCWin folder. Copy the wiring information found at the beginning of the .DEF file.
3. Go into the CRBasic program and paste the wiring information at the beginning of the program.
4. In the CRBasic program, highlight the wiring information, right-click, and select **Comment Block**. This adds an apostrophe (') to the beginning of each of the highlighted lines, which instructs the data logger compiler to ignore those lines when compiling. The **Comment Block** feature is demonstrated at about 5:10 in the [CRBasic | Features](#) video .

Limited warranty

Products manufactured by Campbell Scientific are warranted by Campbell Scientific to be free from defects in materials and workmanship under normal use and service for five years from the date of shipment unless otherwise specified on the corresponding product webpage. See Product Details on the Ordering Information pages at www.campbellsci.com. Other manufacturer's products, that are resold by Campbell Scientific, are warranted only to the limits extended by the original manufacturer.

Refer to www.campbellsci.com/terms#warranty for more information.

CAMPBELL SCIENTIFIC EXPRESSLY DISCLAIMS AND EXCLUDES ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Campbell Scientific hereby disclaims, to the fullest extent allowed by applicable law, any and all warranties and conditions with respect to the Products, whether express, implied or statutory, other than those expressly provided herein.

Assistance

Products may not be returned without prior authorization.

Products shipped to Campbell Scientific require a Returned Materials Authorization (RMA) or Repair Reference number and must be clean and uncontaminated by harmful substances, such as hazardous materials, chemicals, insects, and pests. Please complete the required forms prior to shipping equipment.

Campbell Scientific regional offices handle repairs for customers within their territories. Please see the back page for the Global Sales and Support Network or visit www.campbellsci.com/contact  to determine which Campbell Scientific office serves your country.

To obtain a Returned Materials Authorization or Repair Reference number, contact your CAMPBELL SCIENTIFIC regional office. Please write the issued number clearly on the outside of the shipping container and ship as directed.

For all returns, the customer must provide a "Statement of Product Cleanliness and Decontamination" or "Declaration of Hazardous Material and Decontamination" form and comply with the requirements specified in it. The form is available from your CAMPBELL SCIENTIFIC regional office. Campbell Scientific is unable to process any returns until we receive this statement. If the statement is not received within three days of product receipt or is incomplete, the product will be returned to the customer at the customer's expense. Campbell Scientific reserves the right to refuse service on products that were exposed to contaminants that may cause health or safety concerns for our employees.

Safety

DANGER — MANY HAZARDS ARE ASSOCIATED WITH INSTALLING, USING, MAINTAINING, AND WORKING ON OR AROUND TRIPODS, TOWERS, AND ANY ATTACHMENTS TO TRIPODS AND TOWERS SUCH AS SENSORS, CROSSARMS, ENCLOSURES, ANTENNAS, ETC. FAILURE TO PROPERLY AND COMPLETELY ASSEMBLE, INSTALL, OPERATE, USE, AND MAINTAIN TRIPODS, TOWERS, AND ATTACHMENTS, AND FAILURE TO HEED WARNINGS, INCREASES THE RISK OF DEATH, ACCIDENT, SERIOUS INJURY, PROPERTY DAMAGE, AND PRODUCT FAILURE. TAKE ALL REASONABLE PRECAUTIONS TO AVOID THESE HAZARDS. CHECK WITH YOUR ORGANIZATION'S SAFETY COORDINATOR (OR POLICY) FOR PROCEDURES AND REQUIRED PROTECTIVE EQUIPMENT PRIOR TO PERFORMING ANY WORK.

Use tripods, towers, and attachments to tripods and towers only for purposes for which they are designed. Do not exceed design limits. Be familiar and comply with all instructions provided in product manuals. Manuals are available at www.campbellsci.com. You are responsible for conformance with governing codes and regulations, including safety regulations, and the integrity and location of structures or land to which towers, tripods, and any attachments are attached. Installation sites should be evaluated and approved by a qualified engineer. If questions or concerns arise regarding installation, use, or maintenance of tripods, towers, attachments, or electrical connections, consult with a licensed and qualified engineer or electrician.

General

- Protect from over-voltage.
- Protect electrical equipment from water.
- Protect from electrostatic discharge (ESD).
- Protect from lightning.
- Prior to performing site or installation work, obtain required approvals and permits. Comply with all governing structure-height regulations.
- Use only qualified personnel for installation, use, and maintenance of tripods and towers, and any attachments to tripods and towers. The use of licensed and qualified contractors is highly recommended.
- Read all applicable instructions carefully and understand procedures thoroughly before beginning work.
- Wear a **hardhat** and **eye protection**, and take **other appropriate safety precautions** while working on or around tripods and towers.
- **Do not climb** tripods or towers at any time, and prohibit climbing by other persons. Take reasonable precautions to secure tripod and tower sites from trespassers.
- Use only manufacturer recommended parts, materials, and tools.

Utility and Electrical

- **You can be killed** or sustain serious bodily injury if the tripod, tower, or attachments you are installing, constructing, using, or maintaining, or a tool, stake, or anchor, come in **contact with overhead or underground utility lines**.
- Maintain a distance of at least one-and-one-half times structure height, 6 meters (20 feet), or the distance required by applicable law, **whichever is greater**, between overhead utility lines and the structure (tripod, tower, attachments, or tools).
- Prior to performing site or installation work, inform all utility companies and have all underground utilities marked.
- Comply with all electrical codes. Electrical equipment and related grounding devices should be installed by a licensed and qualified electrician.
- Only use power sources approved for use in the country of installation to power Campbell Scientific devices.

Elevated Work and Weather

- Exercise extreme caution when performing elevated work.
- Use appropriate equipment and safety practices.
- During installation and maintenance, keep tower and tripod sites clear of un-trained or non-essential personnel. Take precautions to prevent elevated tools and objects from dropping.
- Do not perform any work in inclement weather, including wind, rain, snow, lightning, etc.

Maintenance

- Periodically (at least yearly) check for wear and damage, including corrosion, stress cracks, frayed cables, loose cable clamps, cable tightness, etc. and take necessary corrective actions.
- Periodically (at least yearly) check electrical ground connections.

Internal Battery

- Be aware of fire, explosion, and severe-burn hazards.
- Misuse or improper installation of the internal lithium battery can cause severe injury.
- Do not recharge, disassemble, heat above 100 °C (212 °F), solder directly to the cell, incinerate, or expose contents to water. Dispose of spent batteries properly.

WHILE EVERY ATTEMPT IS MADE TO EMBODY THE HIGHEST DEGREE OF SAFETY IN ALL CAMPBELL SCIENTIFIC PRODUCTS, THE CUSTOMER ASSUMES ALL RISK FROM ANY INJURY RESULTING FROM IMPROPER INSTALLATION, USE, OR MAINTENANCE OF TRIPODS, TOWERS, OR ATTACHMENTS TO TRIPODS AND TOWERS SUCH AS SENSORS, CROSSARMS, ENCLOSURES, ANTENNAS, ETC.

Global Sales and Support Network

A worldwide network to help meet your needs



Campbell Scientific Regional Offices

Australia

Location: Garbutt, QLD Australia
Phone: 61.7.4401.7700
Email: info@campbellsci.com.au
Website: www.campbellsci.com.au

Brazil

Location: São Paulo, SP Brazil
Phone: 11.3732.3399
Email: vendas@campbellsci.com.br
Website: www.campbellsci.com.br

Canada

Location: Edmonton, AB Canada
Phone: 780.454.2505
Email: dataloggers@campbellsci.ca
Website: www.campbellsci.ca

China

Location: Beijing, P. R. China
Phone: 86.10.6561.0080
Email: info@campbellsci.com.cn
Website: www.campbellsci.com.cn

Costa Rica

Location: San Pedro, Costa Rica
Phone: 506.2280.1564
Email: info@campbellsci.cc
Website: www.campbellsci.cc

France

Location: Montrouge, France
Phone: 0033.0.1.56.45.15.20
Email: info@campbellsci.fr
Website: www.campbellsci.fr

Germany

Location: Bremen, Germany
Phone: 49.0.421.460974.0
Email: info@campbellsci.de
Website: www.campbellsci.de

India

Location: New Delhi, DL India
Phone: 91.11.46500481.482
Email: info@campbellsci.in
Website: www.campbellsci.in

South Africa

Location: Stellenbosch, South Africa
Phone: 27.21.8809960
Email: sales@campbellsci.co.za
Website: www.campbellsci.co.za

Spain

Location: Barcelona, Spain
Phone: 34.93.2323938
Email: info@campbellsci.es
Website: www.campbellsci.es

Thailand

Location: Bangkok, Thailand
Phone: 66.2.719.3399
Email: info@campbellsci.asia
Website: www.campbellsci.asia

UK

Location: Shepshed, Loughborough, UK
Phone: 44.0.1509.601141
Email: sales@campbellsci.co.uk
Website: www.campbellsci.co.uk

USA

Location: Logan, UT USA
Phone: 435.227.9120
Email: info@campbellsci.com
Website: www.campbellsci.com