Dell™ M110 Projector User's Guide

Notes, Cautions, and Warnings



NOTE: A NOTE indicates important information that helps you make better use of your projector.



▲ CAUTION: A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.



N WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Information in this document is subject to change without notice. © 2011 Dell Inc. All rights reserved.

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: Dell and the DELL logo are trademarks of Dell Inc.; DLP and DLP logo are trademarks of TEXAS INSTRUMENTS INCORPORATED; Microsoft and Windows are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Model M110

October 2011 Rev. A00

Contents

1	Your Dell Projector	6
	About Your Projector	8
2	Connecting Your Projector 1	0
	Connecting to a Computer	1
	Connecting a Computer Using a VGA Cable 1	1
	Connecting a Computer by USB Cable 1	2
	Connecting a Computer Using Wireless	
	Dongle (Optional) 1	3
	Connecting a DVD Player	4
	Connecting a DVD Player Using a A/V to RCA Cable	4
	Connecting a DVD Player Using a HDMI Cable 1	5
	Connecting to Multi-Media	6
	Connecting Multi-Media Using a USB Flash Disk . 1	6
	Connecting Multi-Media Using a MicroSD Card 1	17
3	Using Your Projector1	8
	Turning Your Projector On	8
	Turning Your Projector Off	8
	Adjusting the Projected Image	9
	Raising the Projector Height 1	9
	Lowering the Projector Height 1	9


	Adjusting the Projector Focus	20
	Adjusting Projection Image Size	21
	Using the Control Panel	23
	Installing the Remote Control Battery (Optional) \ldots .	27
	Operating Range with Remote Control	28
	Using the On-Screen Display	29
	INPUT SOURCE	29
	AUTO ADJUST	30
	VIDEO MODE	31
	VOLUME	31
	AUDIO INPUT	31
	ADVANCED SETTINGS	32
	LANGUAGE	42
	Multi-Media Introduction	43
	How to set-up File Type for Multi-Media with USB	44
	How to set-up File Type for Multi-Media with MicroSD	46
	How to set-up File Type for Multi-Media with Internal Memory	48
	Multi-Media SETUP for USB, Micro SD, and	
	Internal Memory	50
	PHOTO SETUP	50
	VIDEO SETUP	51
	MUSIC SETUP	51
	FIRMWARE UPDATE	52
4	Troubleshooting Your Projector	53
	Guiding Signals	56

5	Specifications	57
6	Contacting Dell	61
7	Appendix: Glossary	62

1

Your Dell Projector

Your projector comes with all the items shown below. Ensure that you have all the items, and contact $Dell^{TM}$ if anything is missing.

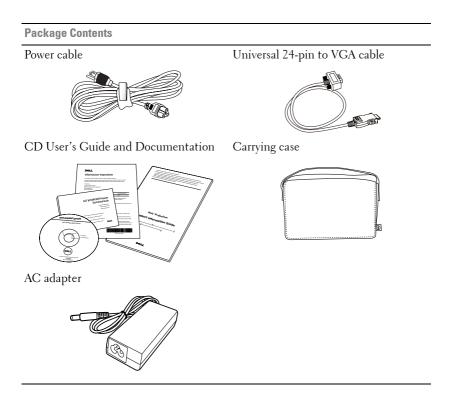

Optional Contents


Remote control




1.2 m HDMI cable




 $1.2\ \mathrm{m}$ USB cable (USB-A to USB-A)




Mini tripod



3.5 mm jack A/V to RCA cable



3.5 mm jack A/V cable.




Universal 24-pin to VGA and Audio out cable



Wireless dongle



About Your Projector

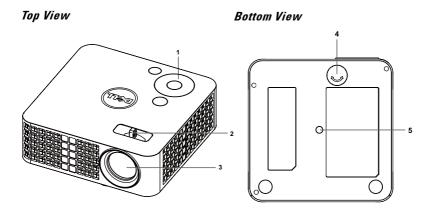

1	Control panel
2	Focus ring
3	Lens
4	Tilt adjusting wheel
5	Mounting hole for tripod: Insert nut 1/4"*20 UNC

CAUTION: Safety Instructions

- 1 Do not use the projector near appliances that generate a lot of heat.
- **2** Do not use the projector in areas where there is an excessive amount of dust. The dust may cause the system to fail and the projector will automatically shut down.
- 3 Ensure that the projector is mounted in a well-ventilated area.
- 4 Do not block the ventilation slots and openings on the projector.
- **5** Ensure the projector operates between ambient temperatures (5 °C to 35 °C).
- **6** Do not try to touch the ventilation outlet as it can become very hot after the projector has been turned on or immediately after it is turned off.
- **7** Do not look into the lens while the projector is on as it may cause injury to your eyes.
- **8** Do not place any objects near or in front of the projector or cover its lens while the projector is on as the heat may cause the object to melt or burn.
- 9 Do not use alcohol to wipe the lens.
- 10 Do not use the wireless projector near cardiac pacemakers.

11 Do not use the wireless projector near medical equipment.


12 Do not use the wireless projector near microwave ovens.



- Recommended Projector Tripod Kit (VXJN3). For more information, see the Dell Support website at **support.dell.com**.
- For more information, see the *Safety Information* that shipped with your projector.

2

Connecting Your Projector

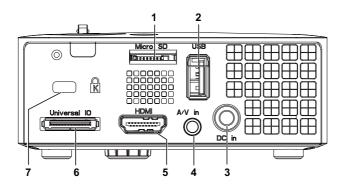


1	MicroSD card slot for multi- media playback (Video/Audio/Photo) and supporting media and image processor firmware upgrade	5	HDMI connector
2	USB Type A connector for USB display, multi-media playback (Video/Audio/Photo), USB memory storage access (USB flash drive/internal memory), projector firmware upgrade, and supporting optional wireless dongle and mobishow	6	Universal I/O connector for VGA input and Audio output
3	DC input connector	7	Security cable slot
4	Audio/Video input connector		

CAUTION: Before you begin any of the procedures in this section, follow the Safety Instructions as described on page 8.

Connecting to a Computer


Connecting a Computer Using a VGA Cable

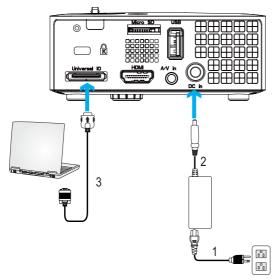

1	Power cord
2	AC adapter
3	Universal 24-pin to VGA cable

NOTE: Only one universal 24-pin to VGA cable is shipped with your projector. An additional universal 24-pin to VGA cable or 24-pin to VGA and Audio out cable can be purchased on the Dell website at **www.dell.com**.

Connecting a Computer by USB Cable

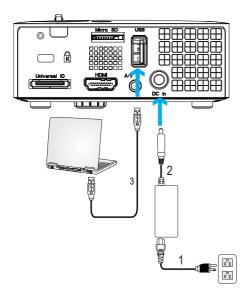


1	Power cord
2	AC adapter
3	USB-A to USB-A cable

NOTE: Plug and Play. The USB (USB A to A) cable is not shipped with your projector. You can purchase the USB (USB A to A) cable on the Dell website at **www.dell.com**.

Connecting a Computer Using Wireless Dongle (Optional)



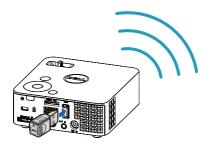




NOTE: Your computer should be equipped with a wireless connector and properly configured to detect another wireless connection. Refer to your computer's documentation on how to configure a wireless connection.



NOTE: Your projector must be installed with a wireless dongle if you want to use the wireless display. The wireless dongle is not shipped with your projector. You can purchase it on the Dell website at www.dell.com.

Connecting a DVD Player

Connecting a DVD Player Using a A/V to RCA Cable

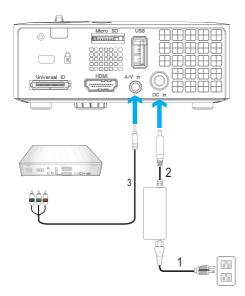

1	Power cord
2	AC adapter
3	3.5 mm jack A/V to RCA cable

NOTE: The 3.5 mm jack A/V to RCA cable is not shipped with your projector. You can purchase the 3.5 mm jack A/V to RCA cable on the Dell website at **www.dell.com**.

Micro SD US R \bigcirc ne

3

Connecting a DVD Player Using a HDMI Cable

1	Power cord
2	AC adapter
3	HDMI cable



000 0 0


NOTE: The HDMI cable is not shipped with your projector. You can purchase the HDMI cable on the Dell website at www.dell.com.

2

1 00

Connecting to Multi-Media

Connecting Multi-Media Using a USB Flash Disk

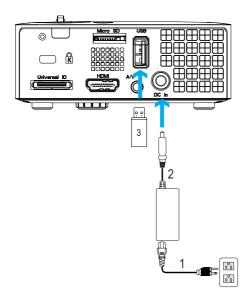


1	Power cord
2	AC adapter
3	USB flash disk



NOTE: The USB flash disk is not shipped with your projector.

Connecting Multi-Media Using a MicroSD Card

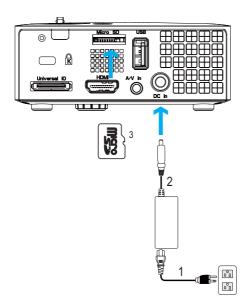

1	Power cord
2	AC adapter
3	MicroSD card



NOTE: The microSD card is not shipped with your projector.

Using Your Projector

Turning Your Projector On



NOTE: Turn on the projector before you turn on the source (computer, DVD) player, etc.). The **Power** button light blinks blue until pressed.

- 1 Connect the power cord with AC adapter and appropriate signal cables to the projector. For information about connecting the projector, see "Connecting Your Projector" on page 10.
- 2 Press the Power button (see "Using the Control Panel" on page 23 to locate the Power button).
- **3** Turn on your source (computer, DVD player, etc).
- 4 Connect your source to the projector using the appropriate cable. See "Connecting Your Projector" on page 10 for instructions to connect your source to the projector.
- **5** By default, the input source of the projector is set to VGA. Change the input source of the projector if necessary.
- **6** If you have multiple sources connected to the projector, press the **Source** button on the remote control or control panel to select the desired source. See "Using the Control Panel" on page 23 and "Using the Remote Control (Optional)" on page 25 to locate the Source button.

Turning Your Projector Off



CAUTION: Unplug the projector after properly shutting down as explained in the following procedure.

1 Press the **Power** button. Follow the instruction displayed on screen to properly turn off the projector.



NOTE: The "Press Power Button to Turn off Projector" message will appear on the screen. The message disappears after 5 seconds or you can press the Menu button to clear it.

2 Press the **Power** button again. The cooling fans continue to operate for 120 seconds.

3 To power off the projector quickly, press the Power button and hold for 1 second while the projector's cooling fans are still running.



NOTE: Before you turn on the projector again, wait for 60 seconds to allow the internal temperature to stabilize.

4 Disconnect the power cord and AC adapter from the electrical outlet and the projector.


Adjusting the Projected Image

Raising the Projector Height

1 Raise the projector to the desired display angle, and use the front tilt adjustment wheel to fine-tune the display angle.

Lowering the Projector Height


1 Lower the projector, and use the front tilt adjustment wheel to fine-tune the display angle.

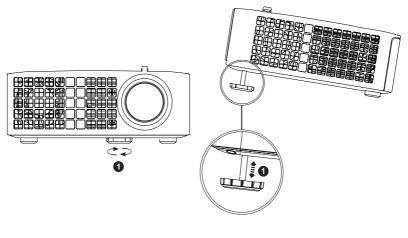


1	Front tilt adjustment wheel
	(Angle of tilt: 0 to 6 degrees)

Adjusting the Projector Focus

- **CAUTION:** To avoid damaging the projector, ensure that the adjustment wheels are fully retracted before moving the projector or placing the projector in its carrying case.
- **1** Rotate the focus tab until the image is clear. The projector focuses at distances ranging between 3.18 ft to 8.48 ft (97 cm to 258 cm).

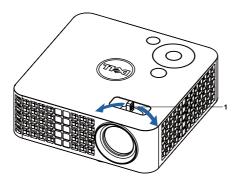


1 Focus tab

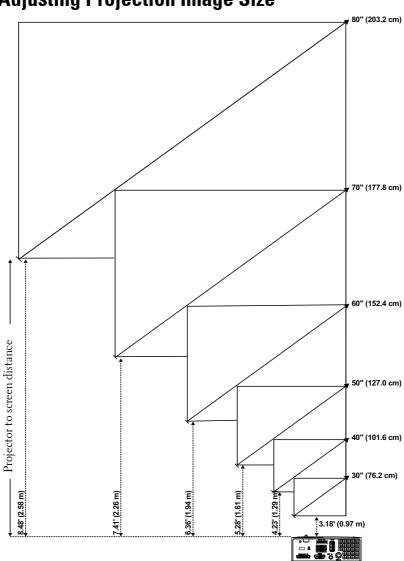


Adjusting Projection Image Size

Screen (Diagonal)	30"	40"	50"	60"	70"	80"
	(76.2 cm)	(101.6 cm)	(127.0 cm)	(152.4 cm)	(177.8 cm)	(203.2 cm)
Screen Size	25.59" X	33.86" X	42.13" X	50.79" X	59.45" X	67.72" X
	15.75"	21.26"	26.38"	31.89"	37.01"	42.52"
	(65 cm X	(86 cm X	(107 cm X	(129 cm X	(151 cm X	(172 cm X
	40 cm)	54 cm)	67 cm)	81 cm)	94 cm)	108 cm)
Hd	15.75"	21.26"	26.38"	31.89"	37.01"	42.52"
	(40 cm)	(54 cm)	(67 cm)	(81 cm)	(94 cm)	(108 cm)
Distance	3.18"	4.23'	5.28'	6.36'	7.41'	8.48'
	(0.97 m)	(1.29 m)	(1.61 m)	(1.94 m)	(2.26 m)	(2.58 m)
* This graph is for user reference only.						

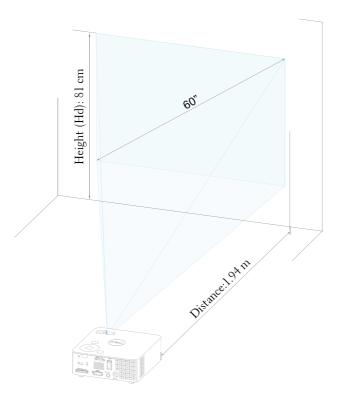


Using the Control Panel

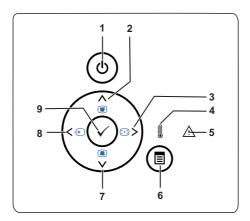

1	Power	Turns the projector on or off. For more information, see "Turning Your Projector On" on page 18 and "Turning Your Projector Off" on page 18.	
2	Up 📐 / Keystone adjustment	Press to navigate through the On-Screen Display (OSD) Menu items.	
		Press to adjust image distortion caused by tilting the projector (+/-40 degrees).	
3	Right > / Auto Adjust	Press to navigate through the On-Screen Display (OSD) Menu items.	
		Press to synchronize the projector to the input source.	
		NOTE: Auto Adjust does not operate if the on-screen display (OSD) is displayed.	
4	TEMP LED	If the TEMP amber indicator is on or blinking, one of the following problems could be occurring:Internal temperature of the projector is too high	
		For more information, see "Troubleshooting Your Projector" on page 53 and "Guiding Signals" on page 56.	

5	Error LED	Error LED is blinking amber, one of the fans has failed. The projector will automatically shut down.
6	Menu 🔳	Press to activate the OSD. Use the directional keys and the Menu button to navigate through the OSD.
7	Down 🔽 / Keystone adjustment	Press to navigate through the On-Screen Display (OSD) Menu items.
		Press to adjust image distortion caused by tilting the projector (+/-40 degrees).
8	Left < / Source	Press to navigate through the On-Screen Display (OSD) Menu items.
		Press to toggle through Analog RGB, Composite, and HDMI sources when multiple sources are connected to the projector.
9	Enter 🗸	Press to confirm the selection item.

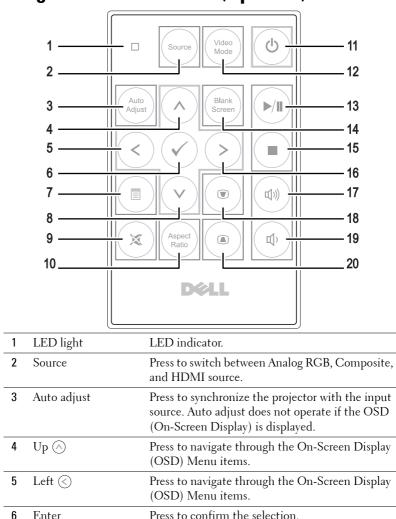

Press to activate the OSD.

(OSD) Menu items.

Press to navigate through the On-Screen Display

Press to mute or un-mute the projector speaker.

7

8

9

Menu

Mute

Down (v)

Using the Remote Control (Optional)

10	Aspect ratio	Press to change aspect ratio of a displayed image.
11	Power	Turns the projector on and off. For more information, see "Turning Your Projector On" on page 18 and "Turning Your Projector Off" on page 18.
12	Video mode	The projector has preset configurations that are optimized for displaying data (presentation slides) or video (movies, games, etc.).
		Press the Video Mode button to toggle between Presentation mode, Bright mode, Movie mode, sRGB, or Custom mode.
		Pressing the Video Mode button once will show the current display mode. Pressing the Video Mode button again will switch between modes.
13	Play/Pause 🕅	Press to play/pause media file.
14	Blank screen	Press to hide/unhide the image.
15	Stop 🔳	Press to stop playing media file.
16	Right 📎	Press to navigate through the On-Screen Display (OSD) Menu items.
17	Volume up	Press to increase the volume.
18	Keystone adjustment	Press to adjust image distortion caused by tilting the projector (+/-40 degrees).
19	Volume down	Press to decrease the volume.
20	Keystone adjustment	Press to adjust image distortion caused by tilting the projector (+/-40 degrees).

Installing the Remote Control Battery (Optional)

 Remove the battery holder by holding down the side release firmly and pulling out the battery holder.


- **2** Insert a CR2032 coin cell battery and align the polarity correctly according to the marking in the battery holder.
- **NOTE:** When you use the remote control for the first time, there is a plastic sheet between the battery and its contact. Remove the sheet before use.





3 Replace the battery holder.

Operating Range with Remote Control

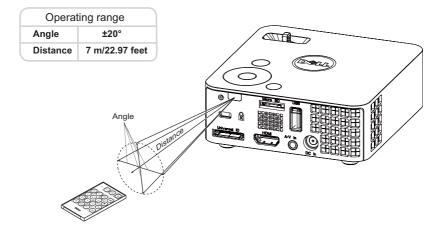

NOTE: Actual operating range may slightly differ from the diagram. Weak battery will also prevent the remote control from properly operating the projector.

Using the On-Screen Display

- The projector has a multi-language On-Screen Display (OSD) Menu that can be displayed with or without an input source.
- Press the Menu button on the control panel or the remote control to enter the Main Menu.
- To select an option, press the \bigcirc or \bigcirc buttons on your projector's control panel or remote control.
- Use the \bigcirc or \bigcirc buttons on the control panel or remote control to adjust the settings.
- To exit the OSD, press the Menu button directly on the control panel or the remote control.

INPUT SOURCE

The Input Source menu allows you to select your projector's input source.



AUTO SOURCE—If you select and press to activate, the Auto Source option will automatically find the next available input source.

VGA—Press 🕢 to detect a VGA signal.

DoUSB—Allows you to display the computer/laptop screen to your projector via the USB cable.

NOTE: When you connect the projector and computer via the USB cable, a USB Connected message will pop up and allow you to select input sources as DoUSB or Storage.

The USB Connected Screen shown below appears:



STORAGE MODE—Allows you to execute copy, delete, move, and more instructions from your computer (only supports microSD and internal memory).

HDMI—Press 🕢 to detect a HDMI signal.

A/V IN—Allows you to display the Audio/Video source to your projector via the A/V cable.

USB—Allows you to playback the photo, Audio, or Video files from your USB flash disk. See "Multi-Media Introduction" on page 43.

MICROSD—Allows you to playback the photo, Audio, or Video files from your microSD card. See "Multi-Media Introduction" on page 43.

INTERNAL MEMORY—Allows you to playback the photo, Audio, or Video files from internal memory of the projector. See "Multi-Media Introduction" on page 43.


AUTO ADJUST

Auto Adjust automatically adjusts the projector's Horizontal, Vertical, Frequency, and Tracking in PC mode.



VIDEO MODE

The Video Mode menu allows you to optimize the display image. The options are: **Presentation, Bright, Movie, sRGB** (provides more accurate color representation), and **Custom** (set your preferred settings) mode.

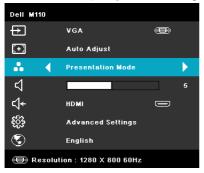

VOLUME

The Volume menu allows you adjust the volume setting of your projector.



VOLUME—Press \bigcirc to decrease the volume and \bigcirc to increase the volume.

AUDIO INPUT

The Audio Input menu allows you to select your audio input source. The options are: Auto Source, Multimedia, A/V In, and HDMI.



ADVANCED SETTINGS

The Advanced Settings menu allows you to change settings for Image, Display, Projector, Menu, Power, and Information.



IMAGE SETTINGS (IN PC MODE)—Select and press 🖉 to activate image settings.

The image settings menu provides the following options:

Advanced Settings			Dell M110)
Image Settings	Brightness	►	50	
Display Settings	Contrast		50	
Projector Settings	Color Temperature		Mid	
Menu Settings	White Intensity		10	
Power Settings				
Information				
€ Resolution : 1280 x 800 60Hz				

BRIGHTNESS—Press \bigcirc and \bigcirc to adjust the brightness of the image.

CONTRAST—Press \bigcirc and \bigcirc to adjust the display contrast.

COLOR TEMPERATURE—Allows you to adjust the color temperature. The screen appears cooler at higher color temperatures and warmer at lower color temperatures.

WHITE INTENSITY—Press \oslash and use \bigotimes and \bigodot to display white intensity.

NOTE: If you adjust the settings for **Brightness**, **Contrast**, **Color Temperature**, and **White Intensity** the projector automatically switches to Custom mode.

IMAGE SETTINGS (IN VIDEO MODE)—Select and press () to activate image settings.

Advanced Settings			Dell M110	
Image Settings	Brightness		50	
Display Settings	Contrast		50	
Projector Settings	Color Temperature		Mid	
Menu Settings	Saturation		50	
Power Settings	Sharpness		50	
Information	Tint		50	
	White Intensity		10	
🕞 Resolution : 1280 x 800 60Hz				

The image settings menu provides the following options:

BRIGHTNESS—Press \land and \bigtriangledown to adjust the brightness of the image.

CONTRAST—Press \bigcirc and \bigcirc to adjust the display contrast.

COLOR TEMPERATURE—Allows you to adjust the color temperature. The screen appears cooler at higher color temperatures and warmer at lower color temperatures.

SATURATION—Allows you to adjust the video source from black and white to fully saturated color. Press (A) to increase the amount of color in the image and (V) to decrease the amount of color in the image.

SHARPNESS—Press \bigcirc to increase the sharpness and \bigcirc to decrease the sharpness.

TINT—Press \bigcirc to increase the amount of green in the image and \bigcirc to decrease the amount of green in the image (available for NTSC only).

```
White Intensity—Press \oslash and use \bigotimes and \bigotimes to display white intensity.
```

🖉 NOTE:

- If you adjust the settings for Brightness, Contrast, Color Temperature, Saturation, Sharpness, Tint, and White Intensity the projector automatically switches to Custom mode.
- **2** Saturation, Sharpness, and Tint are only available when input source is from A/V in.

DISPLAY SETTINGS (IN PC MODE)—Select and press 🗸 to activate display settings.

Advanced Settings		Dell M110	
Image Settings	Horizontal Position	5 0	
Display Settings	Vertical Position	5 0	
Projector Settings	Frequency	5 0	
Menu Settings	Tracking	5 0	
Power Settings	Aspect Ratio	🕨 Origin	
Information	Zoom	▶ хз	
	Zoom Navigation	🕨 Press 🖌	
🕞 Resolution : 1280 x 800 60Hz			

The display settings menu provides the following options:

HORIZONTAL POSITION—Press \bigcirc to move the image right and \bigcirc to move the image left.

VERTICAL POSITION—Press \bigcirc to move the image up and \bigcirc to move the image down.

FREQUENCY—Allows you to change the display data clock frequency to match the frequency of your computer's graphics card. If you see a vertical flickering wave, use the Frequency control to minimize the bars. This is a coarse adjustment.

TRACKING—Synchronize the phase of the display signal with the graphic card. If you experience an unstable or flickering image, use the Tracking to correct it. This is a fine adjustment.

ASPECT RATIO—Allows you to select the aspect ratio to adjust how the image appears. Options are: Origin, 16:9, and 4:3.

- Original Select Origin to maintain the aspect ratio of the image projector according to the input source.
- 16:9 The input source scales to fit the width of the screen to project a 16:9 screen image.

• 4:3 — The input source scales to fit the screen and projects a 4:3 image. **ZOOM**—Press (A) and (V) to zoom and view the image.



DISPLAY SETTINGS (IN VIDEO MODE)—Select and press \checkmark to activate display settings. The display settings menu provides the following options:



ASPECT RATIO—Allows you to select the aspect ratio to adjust how the image appears. Options are: Origin, 16:9, and 4:3.

- Original Select Origin to maintain the aspect ratio of the image projector according to the input source.
- 16:9 The input source scales to fit the width of the screen to project a 16:9 screen image.
- 4:3 The input source scales to fit the screen and projects a 4:3 image.

ZOOM—Press \land and \bigtriangledown to zoom and view the image.



ZOOM NAVIGATION—Press \bigcirc to activate the **Zoom** Navigation menu. Use \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc to navigate the projection screen.

PROJECTOR SETTINGS—Select and press 🖉 to activate projector settings. The

projector settings menu provides the following options:



PROJECTOR MODE—Allows you to select the projector mode, depending upon how the projector is mounted.

- Rear Projection-Desktop The projector reverses the image so that you can project from behind a translucent screen.
- Front Projection-Desktop This is the default option.

SPEAKER-Select On to enable speaker. Select Off to disable speaker.

CLOSED CAPTION—Select **On** to enable close caption and activate the closed caption menu. Select appropriate closed caption options: CC1, CC2, CC3, and CC4.

NOTE: Closed caption option is available for NTSC only.

TEST PATTERN—Test Pattern is used to test focus and resolution.

You can enable or disable the **Test Pattern** by selecting **O**ff, 1, or **2**. You can also invoke the **Test Pattern** 1 by pressing and holding down seconds. You can also invoke the test pattern 2 by pressing and holding down (a) and (<) buttons on the control panel simultaneously for 2 seconds. Test Pattern 1:





Test Pattern 2:



FACTORY RESET—Select and press () to reset all settings to its factory default. The below warning message appears:

Resetting to factory default

Reset items include both computer sources and Video source settings.

MENU SETTINGS—Select and press \oslash to activate the menu settings. The menu settings consists of the following options:

Advanced Settings		Dell M110
Image Settings	Menu Position	▶ Top Left
Display Settings	Menu Timeout	▶ 20 Sec.
Projector Settings	Menu Transparency	20
Menu Settings	Menu Lock	▶ orr
Power Settings	Password	▶ Disable
Information	Change Password	🕨 Press 🖌
🗐 Resolution : 1280 x 800 (60Hz	

MENU POSITION—Allows you to change the position of the OSD menu on the screen.

MENU TIMEOUT—Allows you to adjust the time for an OSD timeout. By default, the OSD disappears after 20 seconds of non-activity.

MENU TRANSPARENCY—Select to change the transparency level of the OSD background.

MENU LOCK—Select **On** to enable Menu Lock and hide the OSD menu. Select **OFF** to disable the Menu Lock. If you want to disable the Menu Lock function and have the OSD disappear, press the **Menu** button on the control panel or remote control for 15 seconds, then disable the function.

PASSWORD—When Password Protect is enabled, a Password Protect screen requesting you to enter a password will be displayed when the power plug is inserted into the electrical outlet and the power for the projector is first turned on. By default, this function is disabled. You can enable this feature by selecting **Enabled**. If the password has been set before, key in the password first and select the function. This password security feature will be activated the next time you turn on the projector. If you enable this feature, you will be asked to enter the projector's password after you turn on the projector:

1 First time password input request:

a Go to Menu Settings, press () and then select Password to Enable the password settings.

Advanced Settings		Dell M110
Image Settings	Menu Position	🗸 Disable
Display Settings	Menu Timeout	Enable
Projector Settings	Menu Transparency	Delete
Menu Settings	Menu Lock	
Power Settings	Password	
Information	Change Password	
🗐 Resolution : 1280 x 800 (OHz	

b Enabling the Password function will pop up a change screen. Key in a 4-digit number from the screen and press \checkmark .

Pas	sworu	(4 618	racter	code):	^ ^	^ ^			
						+	Enter		xit
			< <u> </u>	/		•		Select	

- c To confirm, enter the password again.
- **d** If the password verification is successful, you may resume with accessing the projector's functions and its utilities.
- 2 If you have entered an incorrect password, you will be given another two chances. After three invalid attempts, the projector will automatically turn off.



- **NOTE:** If you forget your password, contact DELL[™] or a qualified service personnel.
- **3** To disable the password function, select the **Disable** option to close the function
- **4** To delete the password, select the **Delete** option.



CHANGE PASSWORD—Key in the original password. Then, enter the new password and confirm the new password again.

Power Settings—Select and press \checkmark to activate power settings. The power settings menu provides the following options:



POWER SAVING—Select Off to disable Power Saving mode. By default, the projector is set to enter power saving mode after 120 minutes of no activity. A warning message appears on screen showing a 60 seconds countdown before switching to power saving mode. Press any button during the countdown period to stop the power-saving mode.

You can also set a different delay period to enter power saving mode. The delay period is the time you want the projector to wait without an input signal. Power saving can be set to 30, 60, 90, or 120 minutes.

If an input signal is not detected during the delay period, the projector turns off. To turn on the projector, press the Power button.

LED MODE—Allows you to select between Normal or ECO mode.

Normal mode operates at full power level. ECO mode operates at a lower power level which may provide longer LED life, quieter operation, and dimmer luminance output on the screen.

INFORMATION—The information menu displays the current M110 projector settings.

Advanced Settings			Dell M110
Image Settings	Model Name	:	M110
Display Settings	Operating Hour		10 hours
Projector Settings	PPID : CN-0P3K	V2-S(081-46B-0208
Menu Settings			
Power Settings			
Information			
🗐 Resolution : 1280 x 800 (60Hz		

LANGUAGE

Allows you to set the language for the OSD. Press \bigcirc and \bigcirc to select different languages and press \bigcirc to change the language.



Multi-Media Introduction

Multi-media format supported:

Photo Format

Image Type (Ext Name)	Sub Type	Encode Type	Max Pixels	Max Size
Less / Les		YUV420		2GB
	Baseline	YUV422	- - No Limitation	
		YUV440		
		YUV444	_	
Jpeg / Jpg	progressive	YUV420	64x panel	2GB
		YUV422		
		YUV440	resolution	
		YUV444	_	
BMP			64x panel	
D1V11			resolution	

Video Format

File Format	Video Format	Profile & Level	MAX Res	MAX Bit Rate (bps)	Audio Format
MOV, MP4, AVI, MKV, DIVX	H264	less than 4 reference frames	1080P	20Mbps	AC3, DTS, MP1, MP2, MP3, PCM, ADPCM
MOV, MP4	MPEG4		1080P	20Mbps	AMR, PCM, ADPCM
WMV	WMV3		1080P	20Mbps	WMA2, WMA3

Audio Format

Music Type (Ext Name)	Sample Rate (KHz)	Bit Rate (Kbps)
MP1	8-48	8-320
MP2	8-48	8-320
MP3	8-48	8-320
WMA	22-48	5-320


How to set-up File Type for Multi-Media with USB




NOTE: A USB flash disk must be plugged into the projector if you want to use the multimedia USB function.

Follow these steps to playback the Photo, Video, or Music files on your projector:

1 Connect the power cable with AC adapter and turn on the projector by pressing the power button.

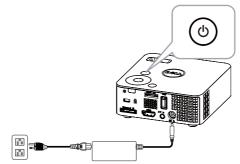

2 Plug in a USB flash disk to your projector.

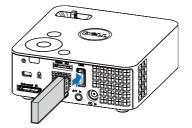

3 Access the Input Source menu, select the USB option and press the button. The image input source will automatically switch to Multimedia Menu when USB option is selected in this step.



The USB Screen shown below appears:

File Type	Dell M110
Photos	
Video	
Music	
Setup	
• USB	


How to set-up File Type for Multi-Media with MicroSD



NOTE: A microSD card must be plugged into the projector if you want to use the multimedia microSD function.

Follow these steps to playback the Photo, Video, or Music files on your projector:

Connect the power cable with AC adapter and turn on the projector by 1 pressing the power button.

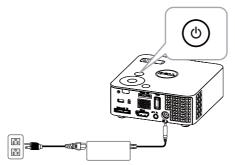

2 Plug in a MicroSD card to your projector. The image input source will be automatically switched to microSD screen when you plug in a microSD card.



3 Access the Input Source menu, select the MicroSD option and press the ✓ button. The image input source will automatically switch to MicroSD screen when MicroSD option is selected in this step.



The Micro SD Screen Screen shown below appears:


File Type	Dell M110
Photos	
Micro SD	

4 Select the multi-media files: Photo, Video, or Music, and then press the of start playing. Or select the SETUP option to change settings for Photo, Video, or Music. See "Multi-Media Setup" on page 50.


How to set-up File Type for Multi-Media with Internal Memory

Follow these steps to playback the Photo, Video, or Music files on your projector:

1 Connect the power cable with AC adapter and turn on the projector by pressing the power button.

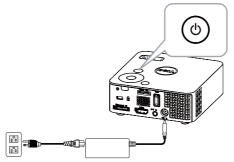

2 Access the Input Source menu, select the Internal Memory option and press the
button. The image input source will be automatically switched to Internal Memory screen when Internal Memory option is selected in this step.

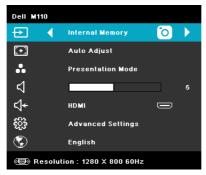

The Internal Memory Screen shown below appears:



3 Select the multi-media files: Photo, Video, or Music, and then press the ✓ to start playing. Or select the SETUP option to change settings for Photo, Video, or Music. See "Multi-Media Setup" on page 50.

Multi-Media SETUP for USB, Micro SD, and Internal Memory

The multi-media setup menu allows you to change settings for Photo, Video, and Music



NOTE: Multi-media setup menu and set are the same for the USB, Micro SD, and Internal Memory.

PHOTO SETUP

Select and press (v) to activate photo setup menu. The photo setup menu provides the following options:

🔅 Setup	1		Dell M110
Photo Setup >	Display Mode		
Video Setup	Display Ratio		
Music Setup	Slideshow Duration		
Firmware Update	Slideshow Repeat		
	Slideshow Effect		
USB			

DISPLAY MODE—Press (\land) or (\lor) to select the display mode of the photo on the screen. Options are: File List, Browse Mode, Thumbnail, and Slideshow.

DISPLAY RATIO—Press (\land) or (\lor) to select the display ratio of the photo as Auto (original ratio) or Full (full screen).

SLIDESHOW DURATION—Press (\land) or (\lor) to select the slideshow duration. The image will automatically switch to the next photo after the time out. Options are: 5 sec, 15 sec, 30 sec, 1 min, 5 min, and 15 min.

SLIDESHOW REPEAT—Select On to repeat slideshow always. Or select "Off" to stop slideshow when it goes to the last page.

SLIDESHOW EFFECT—Press (\land) or (\lor) to select what slideshow effect you want. Options are: Random, Rect., Off, Snake, Partition, Erase, Blinds, Lines, GridCross, Cross, and Spiral.



NOTE: Slideshow Duration, Slideshow Repeat, and Slideshow Effect function only support Slideshow mode.

VIDEO SETUP

Select and press \bigcirc to activate video setup menu. The video setup menu provides the following options:

🔅 Setup		Dell M110
Photo Setup	Display Ratio	
Video Setup >		
Music Setup		
Firmware Update		
usb		

DISPLAY RATIO—Press \bigcirc or \bigcirc to select the display ratio of the Video.

AUTO—Keep original aspect ratio.

ORIGINAL SIZE—Display video in original size of the content.

PLAY MODE—Press (A) or (V) to select the video play mode. Options are: Once, Repeat Once, Repeat, and Random.

AUTO PLAY—Select **On** to play the video automatically while entering the video list.

MUSIC SETUP

Select and press \oslash to activate music setup menu. The music setup menu provides the following options:

🔅 Setup		Dell M110
Photo Setup	Play Mode	
Video Setup	Show Spectrum	
Music Setup >	Auto Play	
Firmware Update		
Kar 🔝 USB		

PLAY MODE—Press (\land) or (\lor) to select the music play mode. Options are: Once, Repeat Once, Repeat, and Random.

Show Spectrum—Select **On** to show the spectrum plot while music is playing.

AUTO PLAY—Select **On** to play the music automatically while entering the music list.

FIRMWARE UPDATE

Select and press () to activate firmware update menu. The firmware update menu provides the following options:



MEDIA—Select "Yes" to enter firmware update screen, and then select Confirm option to update your media firmware by micro SD card.

IMAGE PROCESSOR—Select "Yes" to enter firmware update screen, and then select Confirm option to update your Video decoder firmware by micro SD card.



NOTE: Media and Image Processor firmware update only supports micro SD interface, firmware files must be stored in the micro SD card.



NOTE: You can download the "media and image processor" firmware files from the Dell Support site at support.dell.com.

4

Troubleshooting Your Projector

If you experience problems with your projector, see the following troubleshooting tips. If the problem persists, contact Dell[™] (see Contacting Dell[™] on page 61).

Problem

No image appears on the screen



Possible Solution

- Ensure that the projector is turned on.
- Ensure that you have chosen the correct input source on the INPUT SOURCE menu.
- Ensure the external graphics port is enabled. If you are using a Dell[™] laptop computer, press m m m (Fn+F8). For other computers, see your respective documentation. If images are not displayed properly, please upgrade the video driver of your computer. For Dell computers, see support.dell.com.
- Ensure that all the cables are securely connected. See "Connecting Your Projector" on page 10.
- Ensure that the pins of the connectors are not bent or broken.
- Use Test Pattern in the Projector Settings of the Advanced Settings menu. Ensure that the colors of the test pattern are correct.

Problem <i>(continued)</i>	Possible Solution (continued)		
Partial, scrolling, or incorrectly displayed image	1 Press the Auto Adjust button on the remote control or the control panel.		
	2 If you are using a Dell [™] portable computer, set the resolution of the computer to WXG4 (1280 x 800):		
	 a Right-click the unused portion of your Microsoft[®] Windows[®] desktop, click Properties, and then select Settings tab. 		
	 b Verify that the setting is 1280 x 800 pixels for the external monitor port. c Press c Fress 		
	If you experience difficulty in changing resolutions, or if your monitor freezes, restart all the equipment and the projector.		
	If you are not using a Dell [™] portable computer, see your documentation. If images are not displayed properly, please upgrade the video driver of your computer. For a Dell computer, see support.dell.com.		
The screen does not display your presentation	If you are using a portable computer, press If you are using a portable computer, press If you are using a portable computer, press		
Image is unstable or flickering	Adjust the tracking in the OSD Display Settings of the Advanced Settings menu (in PC Mode only).		
Image has vertical flickering bar	Adjust the frequency in the OSD Display Settings of the Advanced Settings menu (in PC Mode only).		
Image color is incorrect	• If the display receives the wrong signal output from the graphics card, please set t signal type to RGB in the OSD Display Settings of the Advanced Settings menu		
	• Use Test Pattern in the Projector Settings of the Advanced Settings menu. Ensure that the colors of the test pattern are correct.		

Problem <i>(continued)</i>	Possible Solution (continued)
Image is out of focus	 1 Adjust the focus ring on the projector lens. 2 Ensure that the projection screen is within the required distance from the projector (3.18 ft [97 cm] to 8.48 ft [258 cm]).
The image is stretched when displaying a 16:9 DVD	The projector automatically detects the input signal format. It will maintain the aspect ratio of the projected image according to input signal format with an Original setting.
	If the image is still stretched, adjust the aspect ratio in the Display Settings of the Advanced Settings menu in the OSD.
Image is reversed	Select Projector Settings of the Advanced Settings from the OSD and adjust the projector mode.
Error LED is blinking amber	A projector fan has failed and the projector will automatically shut down.
TEMP LED is solid amber	The projector has overheated. The display automatically shuts down. Turn the display on again after the projector cools down. If the problem persists, contact Dell [™] .
TEMP LED is blinking amber	If the projector fan fails, the projector will automatically shut down. Clear the projector mode by pressing and holding the POWER button for 10 seconds. Please wait for about 5 minutes and try to power up again. If the problem persists, contact Dell [™] .
The OSD does not appear on the screen	Press the Menu button on the panel for 15 seconds to unlock the OSD. Check the Menu Lock on page 38.
The remote control is not operating smoothly or works only within a limited range	The battery may be low. Check if the LED indication from the remote is too dim. If so, replace with a new CR2032 battery.

Guiding Signals


Projector Description Status		Control Buttons	Indi	Indicator	
		Power (Blue/Amber)	TEMP (Amber)	(Amber)	
Standby mode	Projector in Standby mode. Ready to power on.	BLUE Flashing	OFF	OFF	
Warming up mode	Projector takes some time to warm up and power on.	BLUE	OFF	OFF	
LED on	Projector in Normal mode, ready to display an image. Mote: The OSD menu is not accessed.	BLUE	OFF	OFF	
Cooling mode	Projector is cooling to shutdown.	BLUE	OFF	OFF	
Projector overheated	Air vents might be blocked or ambient temperature may be above 35 °C. The projector automatically shuts down. Ensure that the air vents are not blocked and that the ambient temperature is within operational range. If the problem persists, contact Dell.	OFF	AMBER	OFF	
Fan breakdown	One of the fans has failed. The projector automatically shuts down. If the problem persists, contact Dell.	OFF	AMBER Flashing	OFF	
LED failure	LED shutdown.	OFF	OFF	AMBER	

5

Specifications

Light Valve	0.45" WXGA S450 DMD, DarkChip3™		
Brightness	300 ANSI Lumens (Max.)		
Contrast Ratio	10000:1 Typical (Full On/Full Off)		
Uniformity	80% Typical (Japan Standard - JBMA)		
Number of Pixels	1280 x 800 (WXGA)		
Internal Flash	l GB Memory (Max.)		
Displayable Color	1.073 billion colors		
Projection Lens	F-Stop: F/ 2.0 f=14.95 mm Fixed Lens Throw ratio =1.5 wide and tele Offset ratio: 100%		
Projection Screen Size	30~80 inches (diagonal)		
Projection Distance	3.18~8.48 ft (97 cm ~ 258 cm)		
Video Compatibility	Composite Video: NTSC (M, 3.58, 4.43), PAL (B, D, G, H, I, M, N, 4.43), SECAM (B, D, G, K, K1, L, 4.25, 4.4)		
	Component Video input via VGA: 1080i (50/60 Hz), 720p (50/60 Hz), 576i/p, 480i/p		
	HDMI input: 1080p, 720p, 576i/p, 480i/p		
Power Supply	Universal AC 100-240 50-60 Hz with 65 W power adapter		
Power Consumption	Normal mode: 44 W ± 10% @ 110 Vac		
	Eco mode: 36 W ± 10% @ 110 Vac		
	Power saving mode: <10 W (Fan speed at minimum)		
	Standby mode: $< 0.5 \text{ W} (\text{VGA_OUT Off})$		

Audio Noise Level Weight Dimensions (W x H x D) 1 speaker x 1 watt RMS 36 dB(A) in Normal mode, 32 dB(A) in Eco mode 0.8 lb ± 0.05 lb (0.36 kg ± 22.7 g) 4.14 x 1.43 x 4.09 inches (105.3 x 36.5 x 104 mm)

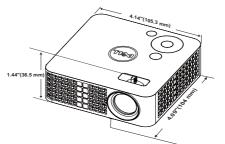

Environmental

I/O Connectors

Operating temperature: 5 °C - 35 °C (41 °F- 95 °F) Humidity: 80% maximum

Storage temperature: 0 $^{\rm o}{\rm C}$ to 60 $^{\rm o}{\rm C}$

(32 °F to 140 °F) Humidity: 90% maximum

Shipping temperature: -20 °C to 60 °C (-4 °F to 140 °F) Humidity: 90% maximum

Power: One DC power jack

VGA input: One 24-pin universal connector (Black) for analog RGB input signals and supporting Audio output.

HDMI input: One HDMI connector for supporting HDMI 1.3. HDCP compliant.

AV input: One 3.5 mm connector for supporting Audio/Video input.

USB (type A) port: One USB connector for supporting USB display, multimedia playback (Video/Audio/Photo), and USB Memory storage access (USB flash drive/internal memory), and supporting optional wireless dongle.

MicroSD card slot: One microSD connector for supporting multimedia playback (Video/Audio/Photo) and supporting media and image processor firmware upgrade.
Wireless Standard: IEEE802.11b/g/n
Wireless: One USB (type A) connector for supporting wireless dongle (USB interface, optional) and mobishow.
OS environment: Windows 7/Vista/XP/2000, MAC OS X
OSTAR Q6WP LED (up to 20000 hours in Normal mode)

NOTE: The LED life rating for any projector is a measure of brightness degradation only, and is not a specification for the time it takes a LED to fail and cease light output. LED life is defined as the time it takes for more than 50 percent of a LED sample population to have brightness decrease by approximately 50 percent of the rated lumens for the specified LED. The LED life rating is not guaranteed in any way. The actual operating life span of a projector LED will vary according to operating conditions and usage patterns. Usage of a projector in stressful conditions which may include dusty environments, under high temperatures, many hours per day, and abrupt powering-off will most likely result in a LED's shortened operating life span or possible LED failure.

Compatibility Modes (Analog/Digital)

Resolution	Refresh Rate (Hz)	Hsync Frequency (KHz)	Pixel Clock (MHz)
640 x 350	70.087	31.469	25.175
640 x 480	59.940	31.469	25.175
720 x 480 p60	59.940	31.469	27.000
720 x 576 p50	50.000	31.250	27.000
720 x 400	70.087	31.469	28.322
640 x 480	75.000	37.500	31.500
640 x 480	85.008	43.269	36.000
800 x 600	60.317	37.879	40.000
800 x 600	75.000	46.875	49.500
800 x 600	85.061	53.674	56.250
1024 x 768	60.004	48.363	65.000
1280 x 720 p50	50.000	37.500	74.250
1280 x 720 p60	60.000	45.000	74.250
1920 x 1080 i50	50.000	28.125	74.250
1920 x 1080 i60	60.000	33.750	74.250
1280 x 720	59.855	44.772	74.500
1024 x 768	75.029	60.023	78.750
1280 x 800	59.810	49.702	83.500
1366 x 768	59.790	47.712	85.500
1360 x 768	60.015	47.712	85.500
1024 x 768	84.997	68.677	94.500
1440 x 900	59.887	55.935	106.500
1280 x 1024	60.020	63.981	108.000
1400 x 1050	59.978	65.317	121.750
1280 x 800	84.880	71.554	122.500
1280 x 1024	75.025	79.976	135.000
1440 x 900	74.984	70.635	136.750
1680 x 1050	59.954	65.290	146.250
1280 x 960	85.002	85.938	148.500
1920 x 1080	60.000	67.500	148.500

Contacting Dell

For customers in the United States, call 800-WWW-DELL (800-999-3355).



NOTE: If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell[™] provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

- Visit Support.dell.com. 1
- Verify your country or region in the Choose A Country/Region drop-2 down menu at the bottom of the page.
- Click Contact Us on the left side of the page. 3
- Select the appropriate service or support link based on your need. 4
- Choose the method of contacting Dell that is convenient for you. 5

Appendix: Glossary

ANSI Lumens — A standard for measuring the brightness. It is calculated by dividing a square meter image into nine equal rectangles, measuring the lux (or brightness) reading at the center of each rectangle, and averaging these nine points.

Aspect Ratio — The most popular aspect ratio is 4:3 (4 by 3). Early television and computer video formats are in a 4:3 aspect ratio, which means that the width of the image is 4/3 times the height.

Brightness — The amount of light emitted from a display or projection display or projection device. The brightness of projector is measured by ANSI lumens.

Color Temperature — The color appearance of white light. Low color temperature implies warmer (more yellow/red) light while high color temperature implies a colder (more blue) light. The standard unit for color temperature is Kelvin (K).

Component Video — A method of delivering quality video in a format that consists of the luminance signal and two separate chrominance signals and are defined as Y'Pb'Pr' for analog component and Y'Cb'Cr' for digital component. Component video is available on DVD players.

Composite Video — A video signal that combines the luma (brightness), chroma (color), burst (color reference), and sync (horizontal and vertical synchronizing signals) into a signal waveform carried on a single wire pair. There are three kinds of formats, namely, NTSC, PAL, and SECAM.

Compressed Resolution — If the input images are of higher resolution than the native resolution of the projector, the resulting image will be scaled to fit the native resolution of the projector. The nature of compression in a digital device means that some image content is lost.

Contrast Ratio — Range of light and dark values in a picture, or the ratio between their maximum and minimum values. There are two methods used by the projection industry to measure the ratio:

- **1** *Full On/Off* measures the ratio of the light output of an all white image (full on) and the light output of an all black (full off) image.
- **2** ANSI measures a pattern of 16 alternating black and white rectangles. The average light output from the white rectangles is divided by the average light output of the black rectangles to determine the ANSI contrast ratio.

Full On/Off contrast is always a larger number than ANSI contrast for the same projector.

dB — decibel — A unit used to express relative difference in power or intensity, usually between two acoustic or electric signals, equal to ten times the common logarithm of the ratio of the two levels.

Diagonal Screen — A method of measuring the size of a screen or a projected image. It measures from one corner to the opposite corner. A 9 FT high, 12 FT wide, screen has a diagonal of 15 FT. This document assumes that the diagonal dimensions are for the traditional 4:3 ratio of a computer image as per the example above.

DLP[®] — Digital Light Processing[™] — Reflective display technology developed by Texas Instruments, using small manipulated mirrors. Light passing through a color filter is sent to the DLP mirrors which arrange the RGB colors into a picture projected onto screen, also known as DMD.

DMD — Digital Micro-Mirror Device — Each DMD consists of thousands of tilting, microscopic aluminum alloy mirrors mounted on a hidden yoke.

Focal Length — The distance from the surface of a lens to its focal point.

Frequency — It is the rate of repetition in cycles per seconds of electrical signals. Measured in Hz (Hertz).

HDCP — High-Bandwidth Digital-Content Protection — A specification developed by Intel[™] Corporation to protect digital entertainment across digital interface, such as DVI, HDMI.

HDMI — High-Definition Multimedia Interface — HDMI carries both uncompressed high definition video along with digital audio and device control data in a single connector.

Hz (Hertz) — Unit of frequency.

Keystone Correction — Device that will correct an image of the distortion (usually a wide-top narrow-bottom effect) of a projected image caused by improper projector to screen angle.

Maximum Distance — The distance from a screen the projector can be to cast an image that is usable (bright enough) in a fully darkened room.

Maximum Image Size — The largest image a projector can throw in a darkened room. This is usually limited by focal range of the optics.

Minimum Distance — The closest position that a projector can focus an image onto a screen.

NTSC — National Television Standards Committee. North American standard for video and broadcasting, with a video format of 525 lines at 30 frames per second.

PAL — Phase Alternating Line. A European broadcast standard for video and broadcasting, with a video format of 625 lines at 25 frames per second.

Reverse Image — Feature that allows you to flip the image horizontally. When used in a normal forward projection environment text, graphics, etc. are backwards. Reverse image is used for rear projection.

RGB — Red, Green, Blue — typically used to describe a monitor that requires separate signals for each of the three colors.

SECAM — A French and international broadcast standard for video and broadcasting, closely related to PAL but with a different method of sending color information.

SVGA — Super Video Graphics Array — 800 x 600 pixels count.

SXGA — Super Extended Graphics Array, — 1280 x 1024 pixels count.

UXGA — Ultra Extended Graphics Array — 1600 x 1200 pixels count.

VGA — Video Graphics Array — 640 x 480 pixels count.

XGA — Extended Video Graphics Array — 1024 x 768 pixels count.

WXGA — Wide Extended Graphics Array — 1280 x 800 pixels count.

Zoom Lens — Lens with a variable focal length that allows the operator to move the view in or out making the image smaller or larger.

Zoom Lens Ratio — Is the ratio between the smallest and largest image a lens can project from a fixed distance. For example, a 1.4:1 zoom lens ratio means that a 10 foot image without zoom would be a 14 foot image with full zoom.

Index

A

Adjusting the Projected Image 19 Adjusting the Projector Height 19 lower the projector Front tilt adjustment wheel 19

Adjusting the Projector Zoom and Focus 20 Focus ring 20

C

Connecting the Projector 3.5 mm jack A/V to RCA cable 14 AC adaptor 11, 12, 15 Connecting with an HDMI Cable 15 HDMI cable 15 Power cord 11, 12, 14, 15, 16, 17 To Computer 11 Universal 24-pin to VGA cable 11 USB-A to USB-A cable 12 **Connection Ports** A/V In connector 10 HDMI connector 10 MicroSD card slot 10 Universal I/O connector for VGA input and Audio

input/output 10 USB Type A connector 10 VGA-A output (monitor loop-through) 10 Contact Dell 6, 55 Control Panel 23

D

Dell contacting 61

Μ

Main Unit 8 Control panel 8 Focus ring 8 Lens 8 Tilt adjusting wheel 8 Menu Position 38 Menu Settings 38 Menu Timeout 38 Menu Transparency 38

0

On-Screen Display 29 Input Source 29

Ρ

Password 38 phone numbers 61 Power Saving 41 Power Settings 41 Powering On/Off the Projector Powering Off the Projector 18 Powering On the Projector 18

R

Remote Control 25 Reset, Factory 37

S

Specifications Audio 58 Brightness 57 Contrast Ratio 57 **Dimensions** 58 Displayable Color 57 Environmental 58 I/O Connectors 58 Internal Flash 57 Light Valve 57 Noise Level 58 Number of Pixels 57 Power Consumption 57 Power Supply 57 Projection Distance 57 Projection Lens 57 Projection Screen Size 57 Uniformity 57

Video Compatibility 57 Weight 58 support contacting Dell 61

Т

telephone numbers 61 Test Pattern 36 Troubleshooting 53 Contact Dell 53