



# Divar MR Digital Video Recorder

Type numbers DVR-8K, DVR-16K, DVR-8L, DVR-16L



# BOSCH

en Operation Manual\_en



# Table of contents

<b>1</b>	<b>Safety</b>	<b>3</b>
1.1	Important safety instructions	3
1.2	Safety precautions	4
1.3	Important Notices	4
<b>2</b>	<b>Introduction</b>	<b>9</b>
2.1	Features	9
2.2	Accessories	10
2.3	Front panel	11
2.4	Back panel	13
2.5	Remote Control	14
<b>3</b>	<b>Connections and settings</b>	<b>17</b>
3.1	Basic connection overview	17
3.2	Camera connections	18
3.3	Monitor connections	18
3.4	Connecting the RS-232C (COM 1) Port	18
3.5	CCTV keyboard connections	19
3.6	Network connection	19
3.7	Connecting the USB device	19
3.8	Connecting a RS-422/485 device	20
3.9	Connecting the BIPHASE port	21
3.10	Connecting the ALARM I/O port	22
3.11	System operation	23
3.12	Selecting the main monitor type	24
3.13	General explanation of the live screen on the main monitor	25
3.14	Selecting live screen mode	27
3.15	PTZ camera control	28
3.16	Viewing System Information	31
3.17	Viewing the System Log List	32
3.18	Configuration Menu	33
3.19	Camera settings	35
3.20	Schedule settings	43
3.21	Display settings	49
3.22	Event settings	51
3.23	Network settings	54
3.24	System settings	59
<b>4.</b>	<b>Recording</b>	<b>71</b>
4.1	Instant Recording	71
<b>5.</b>	<b>Search and playback</b>	<b>73</b>
5.1	Playback	73
5.2	Search	73
5.3	Functions available during playback	79

5.4	EXPORT	79
<b>6.</b>	<b>Control Center</b>	<b>81</b>
6.1	PC minimum Requirements	81
6.2	Control Center installation	81
6.3	Connecting to the DVR	81
6.4	Main screen of DVR Control Center Program	84
6.5	Live Mode	86
6.6	Search mode	91
6.7	Remote Setup mode	95
<b>7.</b>	<b>Additional programs</b>	<b>105</b>
7.1	Alarm Notifier program	105
7.2	Main Screen of Alarm Notifier program	106
7.3	Archive Player program	108
7.4	Web Viewer program	111
<b>8</b>	<b>REFERENCE</b>	<b>115</b>
8.1	Troubleshooting	115
8.2	Recommended devices	118
8.3	Time zones	120
8.4	Factory default configuration settings	121
8.5	Recording Time Table (500GB HDD)	124
8.6	Recording Time Table (160GB HDD)	126
8.7	Specifications	129

# 1 Safety

## 1.1 Important safety instructions

Read, follow, and retain for future reference all of the following safety instructions. Heed all warnings on the unit and in the operating instructions before operating the unit.

1. **Cleaning** - Unplug the unit from the outlet before cleaning. Follow any instructions provided with the unit. Generally, using a dry cloth for cleaning is sufficient, but a moist fluff-free cloth or leather shammy may also be used. Do not use liquid cleaners or aerosol cleaners.
2. **Heat Sources** - Do not install the unit near any heat sources such as radiators, heaters, stoves, or other equipment (including amplifiers) that produce heat.
3. **Ventilation** - Any openings in the unit enclosure are provided for ventilation to prevent overheating and ensure reliable operation. Do not block or cover these openings. Do not place the unit in an enclosure unless proper ventilation is provided, or the manufacturer's instructions have been adhered to.
4. **Water** - Do not use this unit near water, for example near a bathtub, washbowl, sink, laundry basket, in a damp or wet basement, near a swimming pool, in an outdoor installation, or in any area classified as a wet location. To reduce the risk of fire or electrical shock, do not expose this unit to rain or moisture.
5. **Object and liquid entry** - Never push objects of any kind into this unit through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electrical shock. Never spill liquid of any kind on the unit. Do not place objects filled with liquids, such as vases or cups, on the unit.
6. **Lightning** - For added protection during a lightning storm, or when leaving this unit unattended and unused for long periods, unplug the unit from the wall outlet and disconnect the cable system. This will prevent damage to the unit from lightning and power line surges.
7. **Controls adjustment** - Adjust only those controls specified in the operating instructions. Improper adjustment of other controls may cause damage to the unit. Use of controls or adjustments, or performance of procedures other than those specified, may result in hazardous radiation exposure.
8. **Overloading** - Do not overload outlets and extension cords. This can cause fire or electrical shock.
9. **Power cord and plug protection** - Protect the plug and power cord from foot traffic, being pinched by items placed upon or against them at electrical outlets, and its exit from the unit. For units intended to operate with 230 VAC, 50 Hz, the input and output power cord must comply with the latest versions of *IEC Publication 227* or *IEC Publication 245*.
10. **Power disconnect** - Units with or without ON/OFF switches have power supplied to the unit whenever the power cord is inserted into the power source. The power cord is the main power disconnect device for switching off the voltage for all units.
11. **Power sources** - Operate the unit only from the type of power source indicated on the label. Before proceeding, be sure to disconnect the power from the cable to be installed into the unit.
12. **Servicing** - Do not attempt to service this unit yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
13. **Damage requiring service** - Unplug the unit from the main AC power source and refer servicing to qualified service personnel when any damage to the equipment has occurred, such as:
  - the power supply cord or plug is damaged;
  - exposure to moisture, water, and/or inclement weather (rain, snow, etc.);
  - liquid has been spilled in or on the equipment;
  - an object has fallen into the unit;
  - unit has been dropped or the unit cabinet is damaged;
  - unit exhibits a distinct change in performance;

- unit does not operate normally when the user correctly follows the operating instructions.
- 14. **Replacement parts** - Be sure the service technician uses replacement parts specified by the manufacturer, or that have the same characteristics as the original parts. Unauthorized substitutions could void the warranty and cause fire, electrical shock, or other hazards.
- 15. **Safety check** - Safety checks should be performed upon completion of service or repairs to the unit to ensure proper operating condition.
- 16. **Installation** - Install in accordance with the manufacturer's instructions and in accordance with applicable local codes.
- 17. **Attachments, changes or modifications** - Only use attachments/accessories specified by the manufacturer. Any change or modification of the equipment, not expressly approved by Bosch, could void the warranty or, in the case of an authorization agreement, authority to operate the equipment.

## 1.2 Safety precautions



**DANGER!** High risk:

This symbol indicates an imminently hazardous situation such as "Dangerous Voltage" inside the product. If not avoided, this will result in an electrical shock, serious bodily injury, or death.



**WARNING!** Medium risk:

Indicates a potentially hazardous situation. If not avoided, this could result in serious bodily injury or death.



**CAUTION!** Medium risk:

Indicates a potentially hazardous situation. If not avoided, this may result in minor or moderate injury. Alerts the user to important instructions accompanying the unit.

**CAUTION!** Low risk: (without safety alert symbol)

Indicates a potentially hazardous situation. If not avoided, this may result in property damage or risk of damage to the unit.



**NOTICE!**

This symbol indicates information or a company policy that relates directly or indirectly to the safety of personnel or protection of property.

## 1.3 Important Notices



**Accessories** - Do not place this unit on an unstable stand, tripod, bracket, or mount. The unit may fall, causing serious injury and/or serious damage to the unit. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer. When a cart is used, use caution and care when moving the cart/apparatus combination to avoid injury from tip-over. Quick stops, excessive force, or uneven surfaces may cause the cart/unit combination to overturn. Mount the unit per the manufacturer's instructions.

**All-pole power switch** - Incorporate an all-pole power switch, with a contact separation of at least 3 mm in each pole, into the electrical installation of the building. If it is needed to open the housing for servicing and/or other activities, use this all-pole switch as the main disconnect device for switching off the voltage to the unit.

**Battery replacement** - A lithium battery is located inside the unit enclosure. To avoid danger of explosion, replace the battery as per instructions. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of the replaced battery in an environmentally friendly way. Refer all servicing to qualified service personnel.

**CAUTION!****Class I Laser Product**

Invisible laser radiation when open. Avoid exposure to beam.

This warning is applicable only to those models that contain an internal DVD burner which uses a certified Class I laser.

**Coax grounding:**

- Ground the cable system if connecting an outside cable system to the unit.
- Connect outdoor equipment to the unit's inputs only after this unit has had its grounding plug connected to a grounded outlet or its ground terminal is properly connected to a ground source.
- Disconnect the unit's input connectors from outdoor equipment before disconnecting the grounding plug or grounding terminal.
- Follow proper safety precautions such as grounding for any outdoor device connected to this unit.

U.S.A. models only - *Section 810 of the National Electrical Code, ANSI/NFPA No.70*, provides information regarding proper grounding of the mount and supporting structure, grounding of the coax to a discharge unit, size of grounding conductors, location of discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

**NOTICE!**

This device is intended for use in public areas only.  
U.S. federal law strictly prohibits surreptitious recording of oral communications.



**Disposal** - Your Bosch product was developed and manufactured with high-quality material and components that can be recycled and reused. This symbol means that electronic and electrical appliances, which have reached the end of their working life, must be collected and disposed of separately from household waste material. Separate collecting systems are usually in place for disused electronic and electrical products. Please dispose of these units at an environmentally compatible recycling facility, per *European Directive 2002/96/EC*.

**Environmental statement** - Bosch has a strong commitment towards the environment. This unit has been designed to respect the environment as much as possible.

**Electrostatic-sensitive device** - Use proper CMOS/MOS-FET handling precautions to avoid electrostatic discharge.

NOTE: Wear required grounded wrist straps and observe proper ESD safety precautions when handling the electrostatic-sensitive printed circuit boards.

**Fuse rating** - For security protection of the device, the branch circuit protection must be secured with a maximum fuse rating of 16A. This must be in accordance with NEC800 (CEC Section 60).

**Grounding and polarization** - This unit may be equipped with a polarized alternating current line plug (a plug with one blade wider than the other blade). This safety feature allows the plug to fit into the power outlet in only one way. If unable to insert the plug fully into the outlet, contact a locally certified electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.

Alternately, this unit may be equipped with a 3-pole grounding plug (a plug with a third pin for earth grounding). This safety feature allows the plug to fit into a grounded power outlet only. If unable to insert the plug into the outlet, contact a locally certified electrician to replace the obsolete outlet. Do not defeat the safety purpose of the grounding plug.

**Moving** - Disconnect the power before moving the unit. Move the unit with care. Excessive force or shock may damage the unit and the hard disk drives.

**Outdoor signals** - The installation for outdoor signals, especially regarding clearance from power and lightning conductors and transient protection, must be in accordance with *NEC725* and *NEC800* (*CEC Rule 16-224* and *CEC Section 60*).

**Permanently connected equipment** - Incorporate a readily accessible disconnect device in the building installation wiring.

**Pluggable equipment** - Install the socket outlet near the equipment so it is easily accessible.

**Power disconnect** - Units have power supplied whenever the power cord is inserted into the power source. The power cord is the main power disconnect for all units.

#### **Rack-mount**

- Ventilation - Do not place this unit in a built-in installation or rack without proper ventilation or adhering to the manufacturer's instructions. The equipment must not exceed its maximum operating temperature requirements.
- Mechanical loading - Properly mount the equipment in a rack to prevent a hazardous condition due to uneven mechanical loading.

**SELV** - All the input/output ports are Safety Extra Low Voltage (SELV) circuits. SELV circuits should only be connected to other SELV circuits.

**Video loss** - Video loss is inherent to digital video recording; therefore, Bosch Security Systems cannot be held liable for any damage that results from missing video information. To minimize the risk of lost digital information, Bosch Security Systems recommends multiple, redundant recording systems, and a procedure to back up all analog and digital information.

#### **FCC & ICES Information** (residential applications)

*(U.S.A. and Canadian Models Only)*

This equipment has been tested and found to comply with the limits for a **Class B** digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient or relocate the receiving antenna;
- increase the separation between the equipment and receiver;
- connect the equipment into an outlet on a circuit different from that to which the receiver is connected;
- consult the dealer or an experienced radio/TV technician for help.

Intentional or unintentional modifications, not expressly approved by the party responsible for compliance, shall not be made. Any such modifications could void the user's authority to operate the equipment. If necessary, the user should consult the dealer or an experienced radio/television technician for corrective action.

The user may find the following booklet, prepared by the Federal Communications Commission, helpful: *How to Identify and Resolve Radio-TV Interference Problems*. This booklet is available from the U.S. Government Printing Office, Washington, DC 20402, Stock No. 004-000-00345-4.

#### **Disclaimer**

Underwriter Laboratories Inc. ("UL") has not tested the performance or reliability of the security or signaling aspects of this product. UL has only tested fire, shock and/or casualty hazards as outlined in *UL's Standard(s) for Safety for Information Technology Equipment, UL 60950-1*. UL Certification does not cover the performance or reliability of the security or signaling aspects of this product.

UL MAKES NO REPRESENTATIONS, WARRANTIES, OR CERTIFICATIONS WHATSOEVER REGARDING THE PERFORMANCE OR RELIABILITY OF ANY SECURITY OR SIGNALING-RELATED FUNCTIONS OF THIS PRODUCT.

#### **Copyright**

This user guide is the intellectual property of Bosch Security Systems and is protected by copyright. All rights reserved.



**Trademarks**

All hardware and software product names used in this document are likely to be registered trademarks and must be treated accordingly.

**NOTICE!**

This operation manual has been compiled with great care and the information it contains has been thoroughly verified. The text was complete and correct at the time of printing. The ongoing development of the products may mean that the content of the user guide can change without notice. Bosch Security Systems accepts no liability for damage resulting directly or indirectly from faults, incompleteness or discrepancies between the user guide and the product described.

**More information**

For additional information, please contact the Bosch Security Systems location nearest you or visit our web site at [www.boschsecurity.com](http://www.boschsecurity.com)



# 2 Introduction

## 2.1 Features


- Stable embedded Linux operating system.
- Small file sizes with MPEG-4 compression.
- Internal storage capacity to 2TB.
- NTSC and PAL selectable video format.
- Full realtime recording:
  - Up to 480IPS@352 X 240: DVR-16K, DVR-16L NTSC
  - Up to 400IPS@352 X 288: DVR-16K, DVR-16L PAL
  - Up to 240IPS@352 X 240: DVR-8K, DVR-8L NTSC
  - Up to 200IPS@352 X 288: DVR-8K, DVR-8L PAL
- Various recording resolutions and quality levels:
  - 4CIF (704x480), 2CIF (704x240), CIF(352x240) : NTSC
  - 4CIF (704x576), 2CIF (704x288), CIF(352x288) : PAL.
  - 5 step quality level (Lowest, Low, Normal, High, Best).
- Easy operation using various user interface & user friendly GUI:
  - Optical mouse, Full function IR remote controller, Jog/Shuttle
- Powerful multiplex functions:
  - Simultaneous live display, recording, playback, network transmission, back-up.
- Various search functions:
  - Date/time search, event search, bookmark search, smart search.
- Event data protection by event partition recording.
- Pre-alarm recording (up to 1 minute).
- Motion event recording and preview test function of motion sensitivity.
- Recording image rate & quality adjustment per individual camera.
- Powerful record scheduling.
- Instant playback in live mode.
- Perfect audio/video synchronization.
- Automatic backup by schedule.
- Image authentication (Watermark).
- Three USB 2.0 ports for backup interface.
- Setup configuration export/import with USB memory stick or network.
- Easy system software update with USB memory stick or network.
- Control Center PC software can manage max 100 DVR.
- Max five clients can access one DVR server simultaneously.
- Network bandwidth throttle:
  - Automatically adjust a bandwidth according to network speed status of unit.
- Remote alarm notification via PC software or e-mail.
- Time and date sync from NTP server.
- Daylight saving mode.

- Covert camera protection.
- User management (User level control).
- PTZ Control:
  - For more details see "8.2.4 Supported PTZ camera list".
  - Dome camera telemetry control (Dome OSD control).




**Note:**  
**Model DVR-16L (16 Channel) is used for the description, operation and details provided in this operation manual.**


## 2.2 Accessories

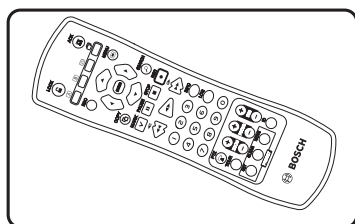


Remote Control

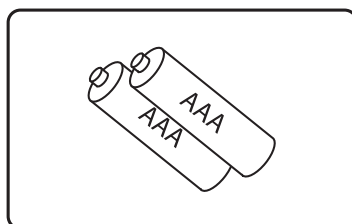


AAA Type Batteries for Remote Control

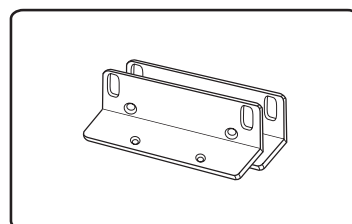


Rack Mount Bracket

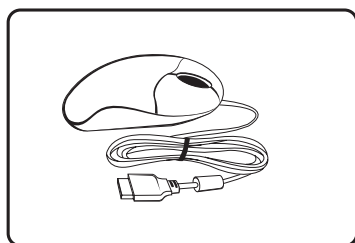


Mouse

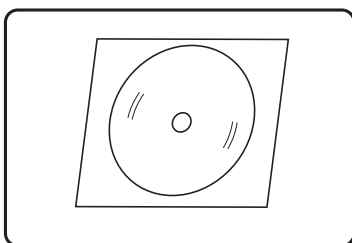


Divar MR PC software

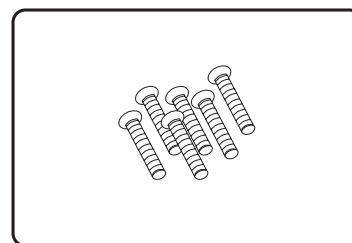

Screws for rack mount bracket

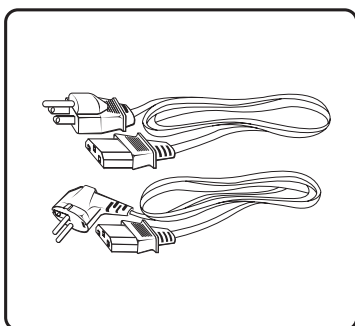


Power plugs

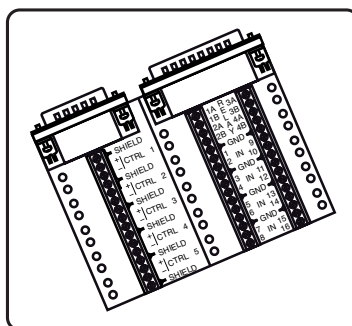

Connection board for Alarm I/O and Biphase

**Figure 2.1** Accessories

## 2.3 Front panel

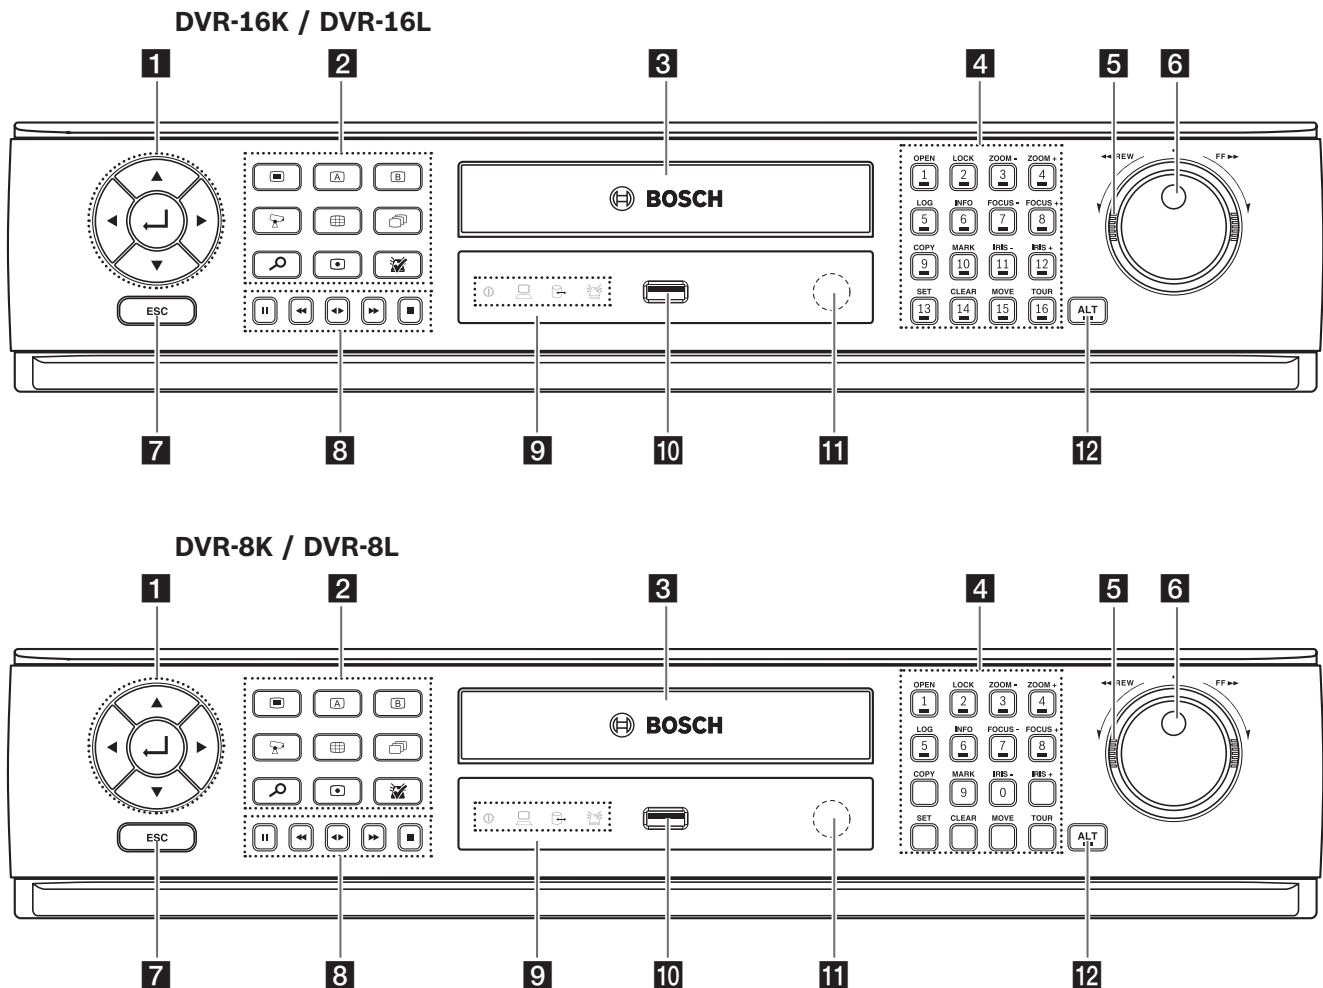

**Figure 2.2** Front panel

**1** **Arrow Buttons (◀ ▶ ▲ ▼):** Select or move between the menu options.

↵ **(ENTER):** Confirms menu selections.

**2** **Function Buttons**

: Displays the setup menu.

: Display the monitor A control menu to set the screen mode to full, 4, 6, 8, 9 or 16 screens. Set the video output signal to VGA mode.

: Display the monitor B control menu. Set the video output signal to MON A mode.

: Switches the unit to PTZ mode to control the connected PTZ camera.

: Press to see different multiscreen modes.

: View all channels in sequence.

: Displays the search menu.

: Starts or stops instant recording of the selected camera (yellow border).

: Cancels alarm activation and returns the system to the condition before the alarm was activated.

**3 Disc Tray** (DVR-8L and DVR-16L only)

Insert a disc here.

**4 Channel Buttons**






You can input a number with the channel buttons. You can also use the channel buttons for sub-function with ALT button (The COPY, IRIS +, SET, CLEAR, MOVE and TOUR buttons of 8 channel DVR are used for subfunction without ALT button.).

- The LED in the button indicates the status as follows:
  - Off: The current status is for live mode.
  - Red: Recording mode.
- Blinks when an event occurs.
- (1) OPEN: Opens or closes the disc tray (DVR-8L and DVR-16L only).
- (2) LOCK: Displays the lock menu to change the user type or disable the system operation.
- (3) ZOOM - / (4) ZOOM +: Adjusts the zoom level of the PTZ camera.
- (5) LOG: Displays or removes the System Log List.
- (6) INFO: Displays or removes system information.
- (7) FOCUS - / (8) FOCUS +: Adjusts focus position of the PTZ camera.
- (9) COPY: Copies the recording data to an external device.
- (10) MARK: Sets the mark point for recording search. You can set the mark point during the single channel playback of recorded data.
- (11) IRIS - / (12) IRIS +: Adjusts iris position of the PTZ camera.
- (13) SET: Registers the PTZ camera's preset position.
- (14) CLEAR: Deletes a memorized preset position of the PTZ camera.
- (15) MOVE: Moves the PTZ camera to the preset position.
- (16) TOUR: Tours all registered preset positions in the PTZ camera.

**5 Shuttle Ring:** Fast forward or reverse picture search when the dial is rotated.**6 JOG Dial:** Allows a forward or reverse frame search.

In pause mode, plays recorded images frame by frame through rotation. Increases or decreases the options value.


**7 ESC:** Use to return to previous level or to exit menu system without saving.**8 Playback Control Buttons**

- : Pauses playback.
- : Reverse search the recorded images.
- : Playback or reverse playback of recorded images.
- : Forward search the recorded images.
- : Stops playback.

**9 Indicators**

 : Lights when the DVR is powered.

 : Blinks when the HDD is accessed.

 : Lights when the alarm is active.

 : Lights when a network cable is connected.

**10 USB Port**

Connect an external USB device for back up or playback.


**11 Remote Sensor**

Point the remote control here.

**12 ALT**

Activate if you use the Sub-function of the channel button.

## 2.4 Back panel

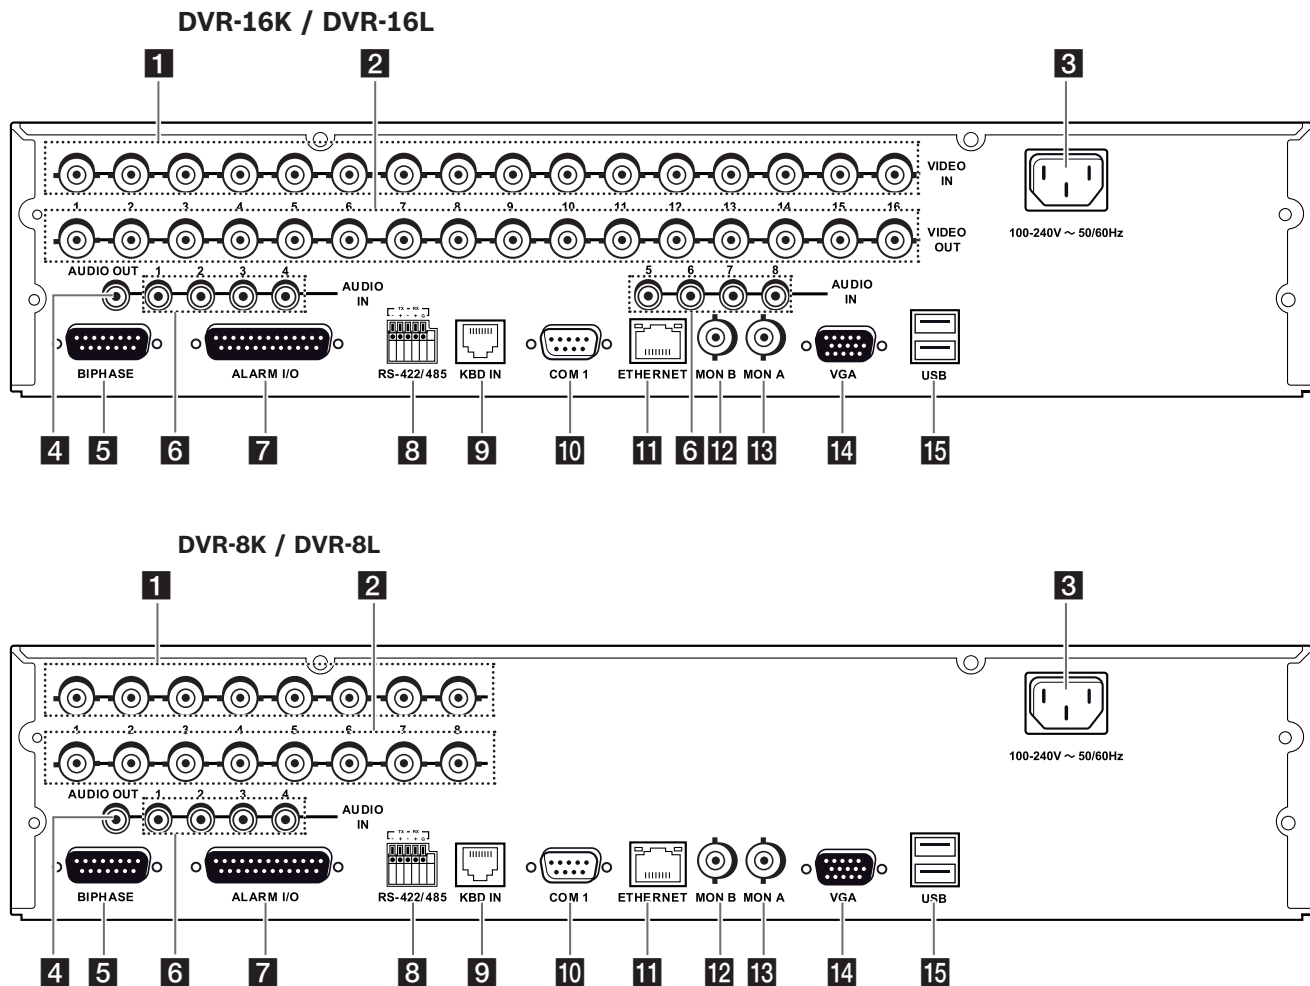


**Figure 2.3** Back panel

- 1 VIDEO INPUT:** Connect the camera's video output to these BNC connectors.
- 2 LOOP OUT:** The signal from VIDEO INPUT connector is looped out to this connector.
- 3 Power Cord Inlet (AC IN):** Connect the power plug.
- 4 AUDIO OUT:** Connect the audio input signal of an external device.
- 5 BIPHASE:** Connect a pan/tilt/zoom control unit via the supplied 15-pole D-type connector board.
- 6 AUDIO IN:** Connect the audio output of an external device.
- 7 ALARM I/O:** Connect up to 16 alarm inputs via the supplied 25-pin D-type connector board. Connect up to 8 alarm output relays via the supplied 25-pin D-type connector board.
- 8 RS-422/485 Terminals:** Connect RS422/485 compatible cameras.
- 9 KBD IN:** Connect a Bosch CCTV keyboard unit to the KBD IN socket.
- 10 COM1:** Use to connect to a host device equipped with RS-232C connector (such as a personal computer).
- 11 ETHERNET Port:** Connect the ethernet 10/100Mbps network cable for controlling this unit via a PC network.
- 12 MON B (BNC Type Connector):** Connect to spot monitor or display device.

- 13 MON A (BNC Type Connector):** Connect to main monitor or display device.
- 14 VGA:** Connect a VGA monitor.
- 15 USB Ports:** Connect optional extension USB devices (e.g. mouse, memory stick).

## 2.5 Remote Control

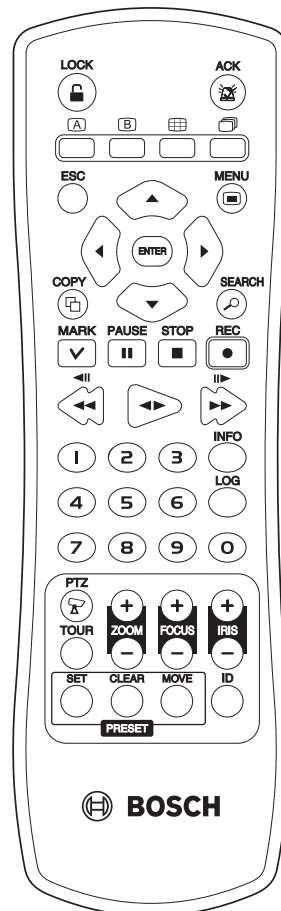

**Figure 2.4** Remote control.

- **LOCK:** Displays the lock menu to change user type or disable system operation.
- **ACK:** Cancels alarm activation and returns the system to the condition before the alarm was activated.
- **[A]** : Display the monitor A control menu to set the screen mode to full, 4, 6, 8, 9 or 16 screens.
- **[B]** : Display the monitor B control menu to allow spot monitor control.
- **[Grid]** : Press to see different multiscreen modes.
- **[Document]** : View all channels in sequence.
- **ESC:** Use to return to previous level or to exit menu system without saving.
- **MENU:** Displays the setup menu.
- **Arrow Buttons (◀ ▶ ▲ ▼):** Selects or moves between the menu options.



- **ENTER:** Confirms menu selections or go to full screen of a selected camera in multiscreen. Pressing this key again to return from full screen to multiscreen.
- **COPY:** Copies the recorded data to an external device.
- **SEARCH:** Displays the search menu.
- **MARK:** Sets the mark point for recording search. You can set the mark point during the single channel playback of recorded data.
- **PAUSE (II):** Pauses playback.
- **STOP(■):** Stops playback.
- **REC (●):** Starts or stops recording.
- **◀◀ / ◀II:** Reverse search; Searches the recorded images in reverse sequence.
- **◀▶:** Playback or reverse playback of recorded images.
- **▶▶ / II▶:** Forward search; Searches the recorded images in forward sequence.
- **Number Buttons (0, 1-9):** To select the PTZ preset number, ID, or channel.
- **INFO:** Displays or removes the system information window.
- **LOG:** Displays or removes the System Log List window.
- **PTZ:** Switches this unit to PTZ mode to control the connected PTZ camera.
- **TOUR:** Tours all registered preset positions in the PTZ camera.
- **ZOOM + / -:** Adjusts the zoom level of the PTZ camera.
- **FOCUS + / -:** Adjusts the focus of the PTZ camera.
- **IRIS + / -:** Adjusts the iris of the PTZ camera.
- **PRESET**
  - **SET:** Registers the PTZ camera's preset positions.
  - **CLEAR:** Deletes a memorized preset position.
  - **MOVE:** Moves the camera to the preset position.
- **ID:** Set the appropriate DVR system ID to operate via the IR Remote Controller when using multiple DVRs. Press the ID button, then press the number button within 2 seconds to select the system ID of the DVR. If you set the system ID to "0", you can control multiple DVR at the same time.




# 3 Connections and settings

## Precautions

- There are various ways to connect the unit, depending on the camera and other equipment. Please refer to the camera manual or the manuals for other devices as necessary for additional connection information.
- Be sure to switch off the camera before installation and connection.

## 3.1 Basic connection overview

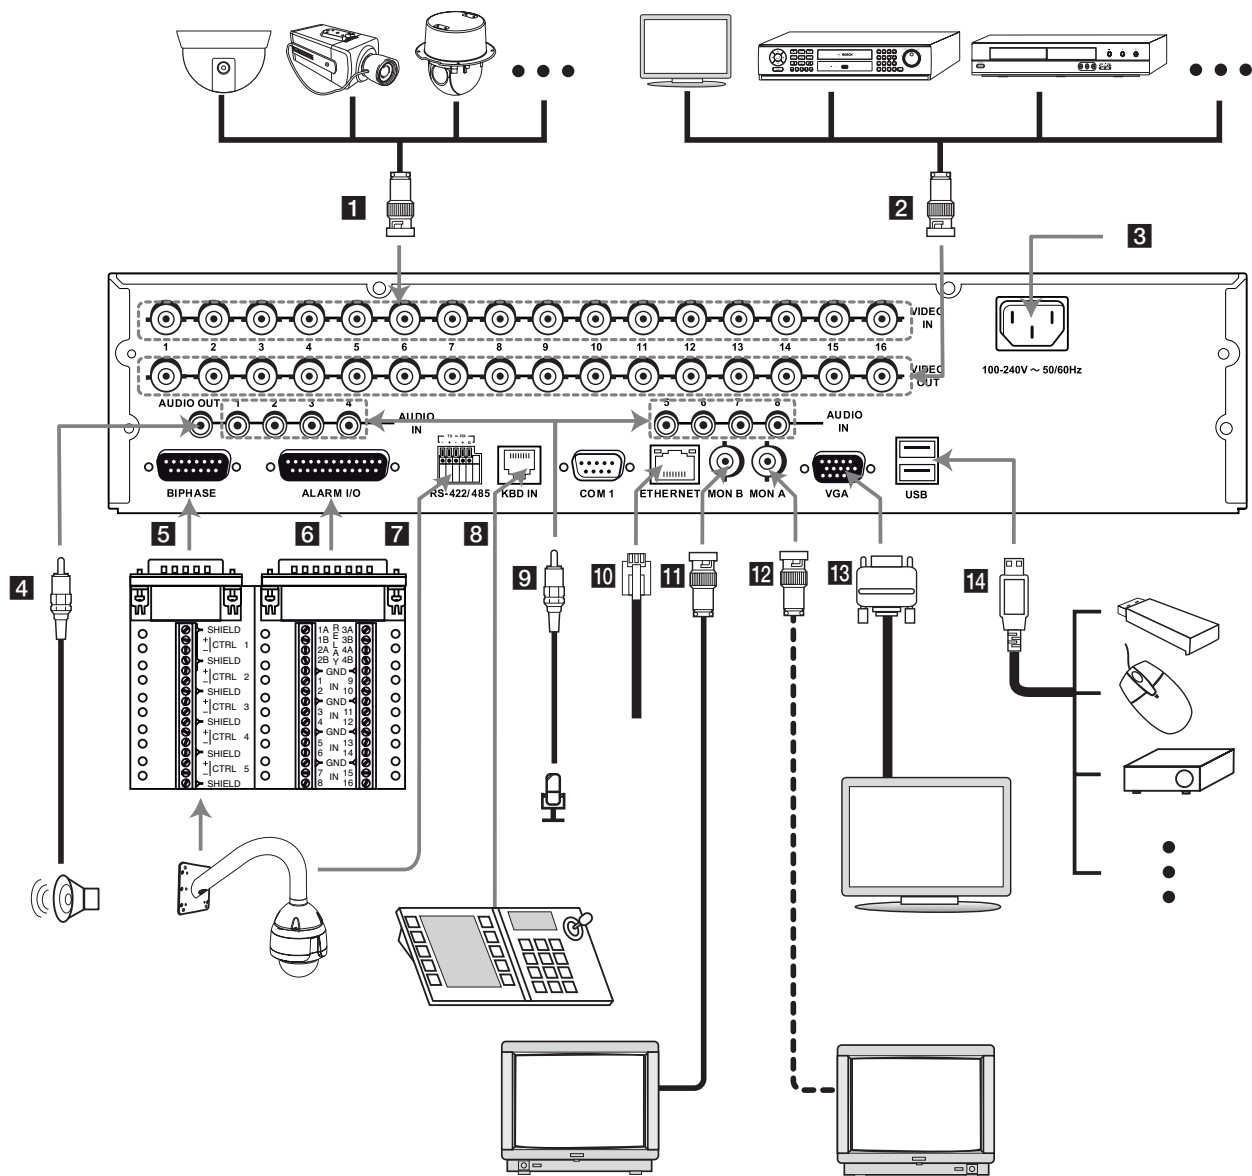

**Figure 3.1** Basic connection overview

- 1** Connect the cameras to the BNC loop-through camera inputs (automatically terminated).
- 2** Connect the Monitor, DVR, VCR, or others to the video out BNC.
- 3** Connect the power cord to the unit.
- 4** Connect an audio amplifier.
- 5** Connect a pan/tilt/zoom control unit via the supplied 15-pole D-type connector board.
- 6** Connect up to 16 (alarm) inputs or connect up to 8 alarm output relays via the supplied 25-pin D-type connector board.
- 7** Connect PTZ cameras or DVRs.
- 8** Connect a Bosch CCTV keyboard unit to the KBD IN socket.
- 9** Connect audio (line input).
- 10** Connect to your network via the Ethernet port or use the RS232 connector to connect directly to a PC serial port (for service purposes).
- 11** Connect monitor B to the BNC output MON B.
- 12** Connect monitor A to the BNC output MON A.
- 13** Connect a VGA monitor.
- 14** Connect optional extension USB devices (e.g. mouse, memory stick).

## 3.2 Camera connections

Connect cameras to the unit using 75-ohm video coaxial cables with BNC connectors. There are two BNC connectors for each camera. Either connector can receive a camera's signal. This signal is looped-through (directly connected) to the other connector, so that you can send the camera's signal to other equipment. The camera input connectors are auto-terminating, so you do not need to add a terminator to the output connector if no additional equipment is connected.

If the camera signal is looped-through to additional equipment, make sure that the end of the video line is terminated with a 75-ohm terminator.

## 3.3 Monitor connections

Connect the unit to the monitors via 75-ohm video coaxial cables with BNC connectors. The unit provides a 1Vpp CVBS signal.

If the monitor has a loop-through connection and you are not using the loopthrough output, then select the 75-ohm impedance setting on the monitor. If the monitor's loop-through output is connected to an additional device, the device's termination is set to 75 ohms and the monitor's termination is set to high impedance (note that this is not necessary on devices with automatic termination).

## 3.4 Connecting the RS-232C (COM 1) Port

The serial RS232 console port connector is used to connect a PC to the unit for service purposes. Use a null-modem cable to connect the serial port of the PC to the unit. This terminal is compliant with the RS-232C standard.

## **3.5 CCTV keyboard connections**

The keyboard input connector is used to connect an external CCTV keyboard to the unit. Connect the keyboard to the KBD IN connector.

For short distances (up to 30m), standard 6-core telecom flat cable can be used to supply power and signal connections for the keyboard.

For distances over 30m between keyboard and Divar MR, the Keyboard Extension Kit (LTC 8557) must be used. This kit provides junction boxes, cables and the appropriate power supply for the external keyboards. The recommended cable type is Belden 9841 or equivalent.

## **3.6 Network connection**

### **3.6.1 LAN connection**

Connect the LAN port to an available 10/100 base-T port with a straight ethernet cable (not supplied).

### **3.6.2 Automatic network configuration**

The DVR can automatically obtain and configure the network interface via DHCP.

### **3.6.3 Manually configure network**

The DVR may be manually configured by assigning an IP address, subnet mask, gateway DNS.

## **3.7 Connecting the USB device**

### **3.7.1 USB memory device**

Insert the memory device into the USB port. The system automatically recognizes the device.

Using a USB memory device the system software can be easily upgraded.

### **3.7.2 USB backup device**

Connect the USB cable of the USB backup device to the USB port on the rear panel of the unit. (Example: HDD or other external storage).

### **3.7.3 Mouse**

Connect the USB mouse for function control of the unit.


### 3.8 Connecting a RS-422/485 device

Use this port to connect PTZ cameras or DVRs, for example, when the PTZ camera is connected. Connect the PTZ serial communication lines to the RS-422/485 terminal.

#### Notes:



- When connecting lines, connect the TX- of the DVR to RX- of the PTZ unit and TX+ of the DVR to RX+ of the PTZ unit correctly.
- Recommended initial data are 9600 Baud Rate, 8 Data bits, 1 Stop bit and No parity.
- When connecting PTZ cameras to DVRs it is necessary to set the setup menu for this unit according to the RS-485 settings of the camera and DVRs.

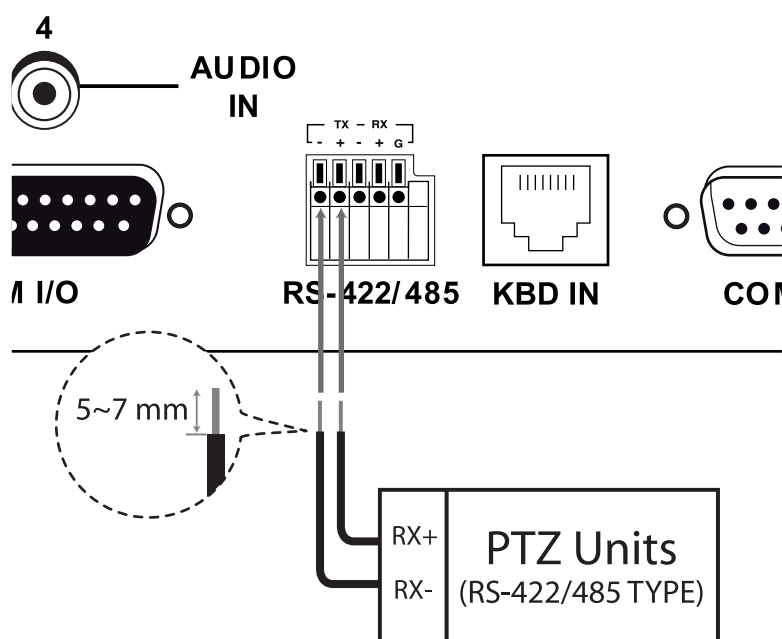

**Figure 3.2** RS-422/485 connections


RS-422/485 Terminal	Description
TX- (DATA -)	Data Transmission
TX+ (DATA +)	Data Transmission
RX- (DATA -)	Data Reception
RX+ (DATA +)	Data Reception
GND	Shield

**Table 3.1** RS-422-485 connections

### 3.9 Connecting the BIPHASE port

The Biphase port is used for connecting cameras that use Bosch Biphase communications to control camera positioning. Five Biphase outputs are provided for dome camera and pan, tilt and zoom control. The screw terminal connection board supplied with the unit simplifies all Biphase connections to the unit.

Maximum cable length per Biphase output is 1.5 kilometers (0.9 miles). Maximum number of controllable cameras is 4 per Biphase output.

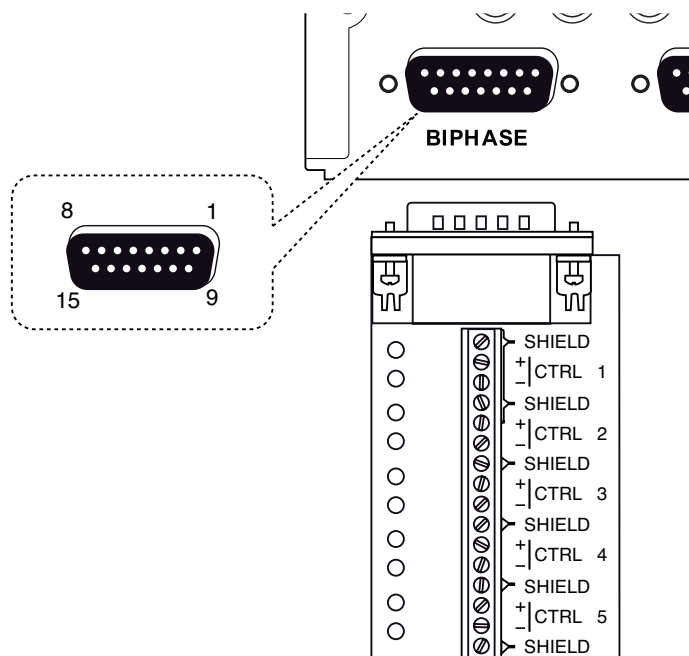

**Figure 3.3** Biphase port connector


#### BIPHASE port - 15-pole D-type socket

Signal name:	Pin no.	Description
Code 1 -	1	Biphase control ch. 1 (minus)
Code 1 +	2	Biphase control ch. 1 (plus)
Shield	3	System ground/cable shield.
Code 2 -	4	Biphase control ch. 2 (minus)
Code 2 +	5	Biphase control ch. 2 (plus)
Shield	6	System ground/cable shield.
Code 3 -	7	Biphase control ch. 3 (minus)
Code 3 +	8	Biphase control ch. 3 (plus)
Shield	9	System ground/cable shield.
Code 4 -	10	Biphase control ch. 4 (minus)
Code 4 +	11	Biphase control ch. 4 (plus)
Shield	12	System ground/cable shield.
Code 5 -	13	Biphase control ch. 5 (minus)
Code 5 +	14	Biphase control ch. 5 (plus)
Shield	15	System ground/cable shield.

**Table 3.2** Biphase pin configuration

## 3.10 Connecting the ALARM I/O port

Alarm inputs and outputs are supplied via a 25-pole D-type socket. The screw terminal input/output connection board supplied with the unit simplifies all alarm connections to the unit.

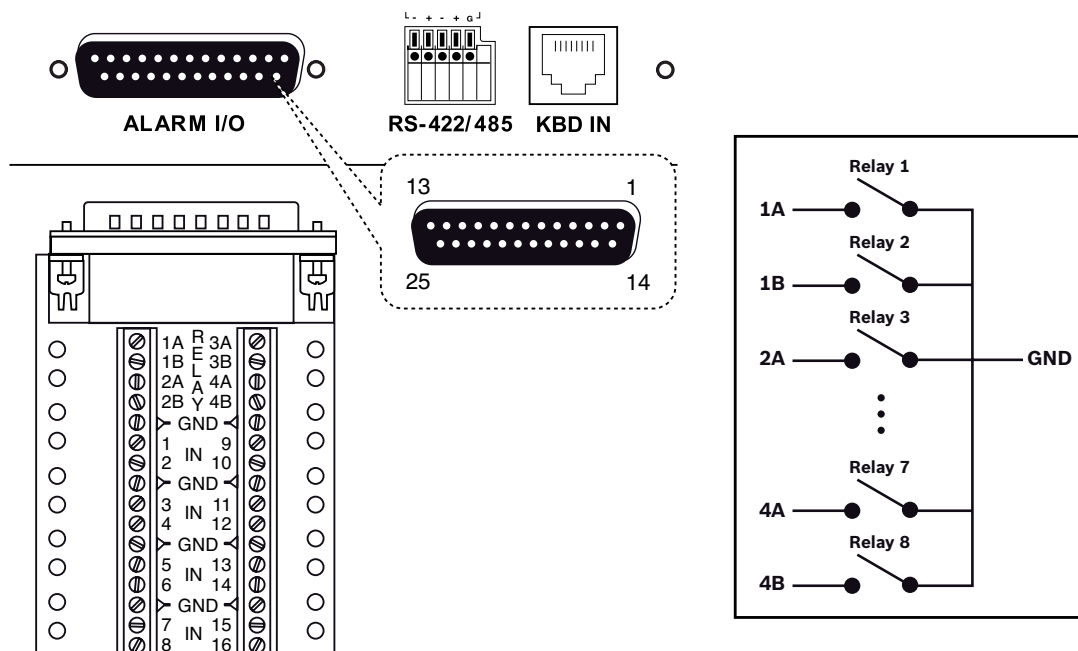

**Figure 3.4** Alarm I/O port connector

### 3.10.1 Connecting the Inputs

Each (alarm) input line can be switched by a relay contact from devices such as pressure pads, passive infra red detectors, smoke detectors and similar devices.

Wire them as either N/O (Normally Open) or N/C (Normally Closed). You can configure the alarm inputs as N/O or N/C in the menu system. The default is N/O.

### 3.10.2 Connecting the Alarm Outputs

The eight alarm output relays respond to input alarms and triggers. You can configure the alarm outputs as N/O or N/C in the menu system. The relays are active for the duration of the driving event. Connect the application to the alarm output relays (resistive loads only). Do not exceed 1A 30V DC, 0.3A 125V AC on an alarm output relay's contacts. The contacts must not be used at AC line voltages.

#### ALARM I/O - 25-pole D-type socket

Signal name	Pin no.	Description
Alarm_in_1	1	Alarm input 1
Alarm_in_2	2	Alarm input 2
Alarm_in_3	3	Alarm input 3
Alarm_in_4	4	Alarm input 4
Alarm_in_5	5	Alarm input 5
Alarm_in_6	6	Alarm input 6
Alarm_in_7	7	Alarm input 7
Alarm_in_8	8	Alarm input 8
Alarm_in_9	9	Alarm input 9
Alarm_in_10	10	Alarm input 10



Alarm_in_11	11	Alarm input 11
Alarm_in_12	12	Alarm input 12
Alarm_in_13	13	Alarm input 13
Alarm_in_14	14	Alarm input 14
Alarm_in_15	15	Alarm input 15
Alarm_in_16	16	Alarm input 16
Relay1_A	17	Relay 1 output pole 1
Relay1_B	18	Relay 2 output pole 1
Relay2_A	19	Relay 3 output pole 1
Relay2_B	20	Relay 4 output pole 1
Relay3_A	21	Relay 5 output pole 1
Relay3_B	22	Relay 6 output pole 1
Relay4_A	23	Relay 7 output pole 1
Relay4_B	24	Relay 8 output pole 1
System Ground	25	Chassis Ground

**Table 3.3** Alarm I/O pin configuration

## 3.11 System operation

### Default monitor setting is VGA.

1. Turn on the unit. System booting will commence. The BOSCH logo image will be displayed on the main monitor during the system booting.
2. When booting is complete, the login window will be displayed. Select a user ID by using the mouse or arrow, then the ENTER button on the remote control or front panel.

**Figure 3.5** Login window

- ADMINISTRATOR: Unlimited operation of the unit.
  - Advanced User: Use of the limited functions of the system (the setup configuration is not allowed to change).
  - Normal User: Use of the limited functions of the system (multiscreen monitor and live image view are available).
3. Enter the password by using the virtual keyboard. (Initial password is "000000".)
  4. Press LOCK or click the OK (LOCK) icon.  
You can see the live screen and operate the system.

- It is not possible to connect the VGA monitor and the composite monitor simultaneously. Consequently, the user is obliged to choose either the composite monitor or the VGA monitor. When set to composite monitor there is no VGA output. When set to VGA monitor there is no composite output. Monitor B is unaffected by the monitor setting.
- This DVR is based on a VGA monitor using OSD. We recommend using the VGA monitor with this unit. If you use a composite monitor, the OSD quality may lower to read it.
- User access rights:


User Level	Administrator	Advanced User	Normal User
View Live Video	YES	YES	YES
Alarm Off	YES	YES	NO
PTZ	YES	YES	NO
Instant Record	YES	YES	NO
Export	YES	YES	NO
Search/Play	YES	YES	NO
Setup	YES	NO	NO


**Table 3.4** User access rights

## 3.12 Selecting the main monitor type

You can select the main monitor type to display the main screen during power on.


### 3.12.1 Using the VGA monitor


1. Connect the VGA monitor to the VGA connector on the back of the DVR.
2. Turn on the VGA monitor.
3. Press and hold the A (  ) button on the front panel until the beep sounds to display the main screen. The DVR will restart and then the VGA monitor is set as a main monitor.

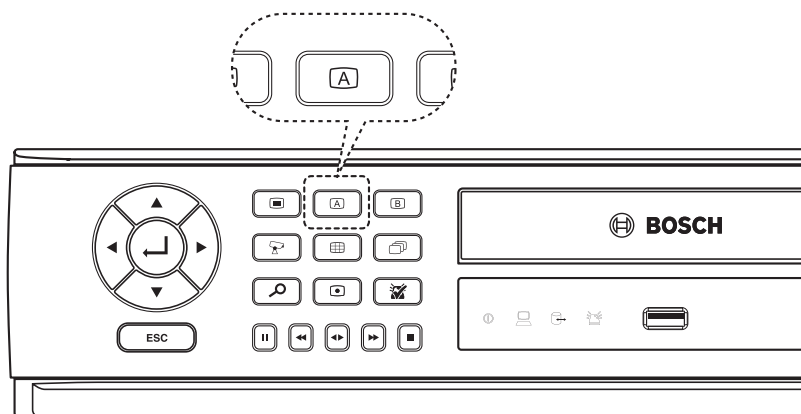

**Figure 3.6** The A button on the front panel

### 3.12.2 CCTV (composite video type) monitor



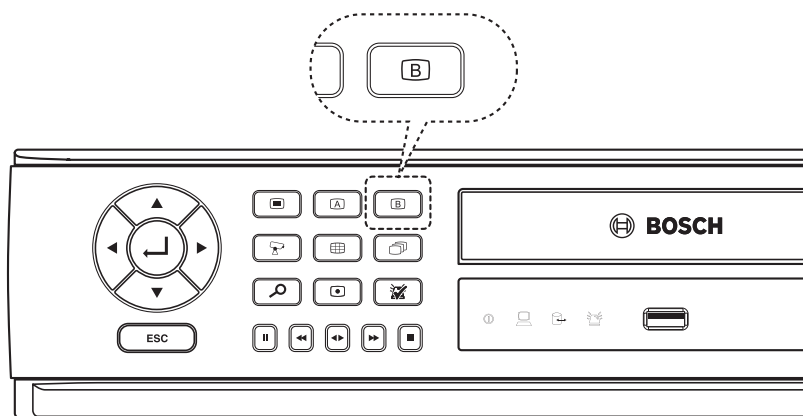1. Connect the CCTV monitor to the MON A connector on the back of the DVR.
2. Turn on the CCTV monitor.
3. Press and hold the B (  ) button on the front panel until the beep sounds to display the main screen. The DVR will restart and the CCTV monitor is then set as main monitor.



**Figure 3.7** The B button on the front panel




**Note:**







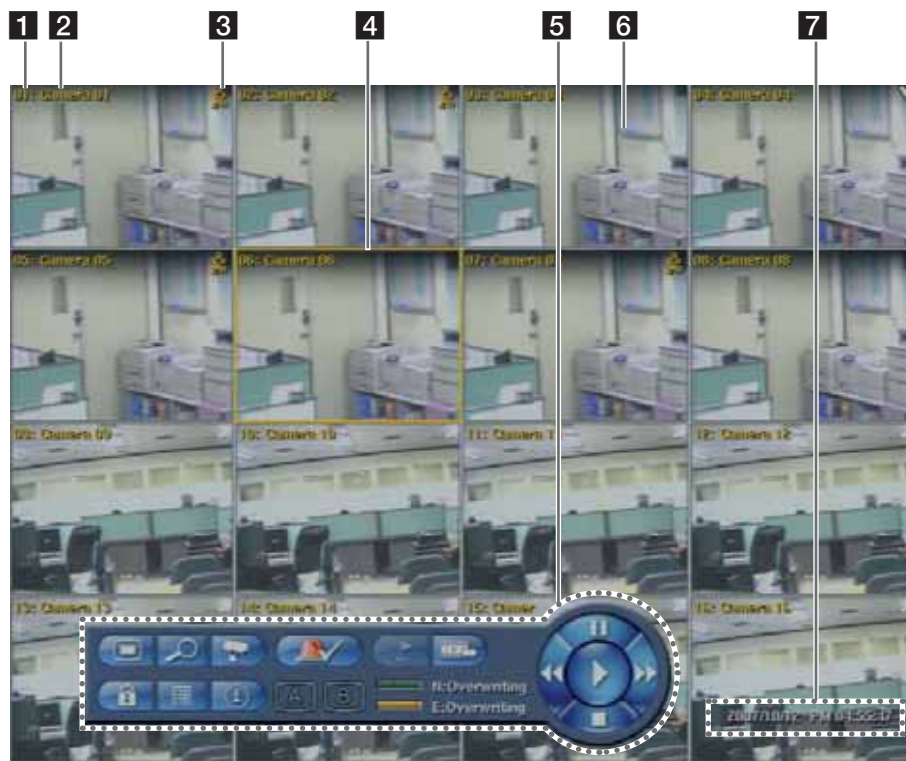









You can select the monitor type by using the A (  ) or B (  ) button at any time. If you change the monitor type, the system will be rebooted automatically.

### 3.13 General explanation of the live screen on the main monitor

#### Main monitor screen



**Figure 3.8** Main monitor screen

- 1** Channel Number: Displays the channel number.
- 2** Camera Name: Displays the edited camera name.
- 3** Recording status icon: Displays the recording status.
  - Red “Dot icon” indicates Instant recording.
  - Yellow “Running man icon” indicates motion detection recording.
  - Red “Alarm bell icon” indicates input triggered recording.
- 4** Selected Channel: Displays the selected channel with yellow box.
- 5** System Control Bar
  -  : Displays the setup menu.
  -  : Displays the search menu.
  -  : Displays the PTZ remote control window.
  -  : Displays the lock menu to change the user type or disable system operation.
  -  : Displays the system log list window.
  -  : Displays the system information window.
  -  : Turns the alarm off.
  -  : Displays the screen division selection window for the monitor A.
  -  : Displays the screen division selection window for the monitor B.
  -  : Click at a desired point to be marked during playback. Up to 15 points can be marked.
  -  : Display copy (export) menu.
  -  : Displays the remaining HDD status.
    - N (Normal partition): Used size/total size.
    - E (Event partition): Used size/total size.
  -  : Pause playback.
  -  : Select the required scanning speed.
  -  : Starts instant playback in selected channel.
  -  : Stop playback.
- 6** Live Screen: Displays the current surveillance live screen.
- 7** Displays the current date and time.



**Note:**


Click the right button on the mouse to display / remove the system control bar displayed on-screen.

## 3.14 Selecting live screen mode

### 3.14.1 Monitor A

You can select the live screen mode to display a full, 4-view, 6-view, 8-view, 9-view or 16-view screens on the main monitor.

1. Press A (  ) button or click the  icon in the system control bar.  
The screen mode select menu of monitor A is displayed on the monitor A.
2. Select screen mode.

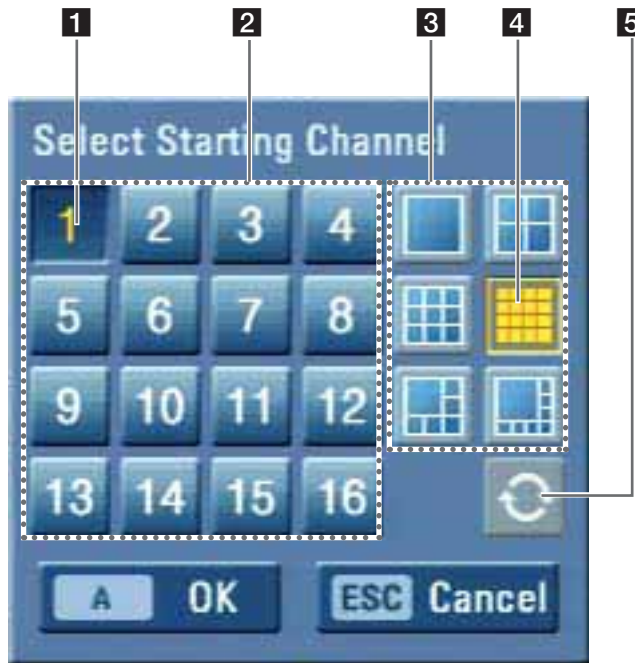

**Figure 3.9** The screen mode select menu of monitor A.

- 1 Selected channel of the monitor A.
  - 2 Channel buttons: Press the 1 to 16 channel button to see the current camera images in selected live screens on the monitor A.
  - 3 Screen mode
    - Full Screen Mode: When you see the selected channel on the full screen.
    - 4, 6, 8, 9 and 16 view Mode: Displays selected multi screens on the monitor A.
  - 4 Selected view mode.
  - 5 Sequence: Views the all channels in sequence.
3. Select [OK (A)] and press ENTER to confirm your selection.




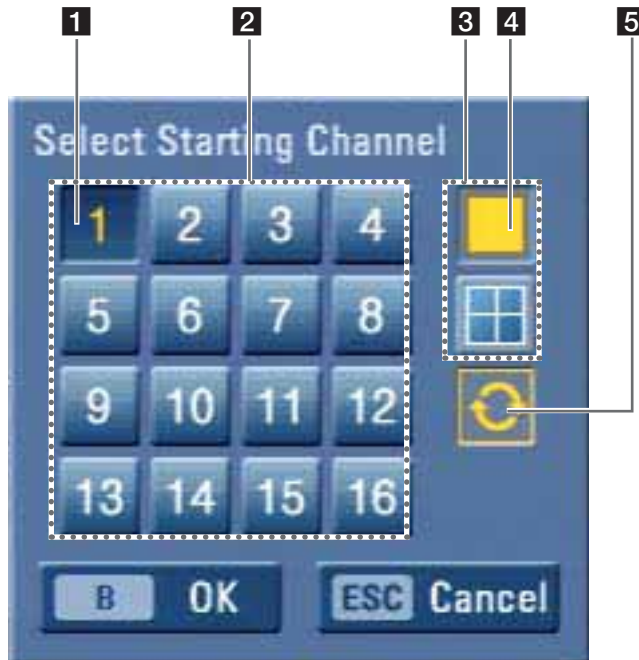
**Note:**

To display the screen you desire to watch in full screen mode, double click the desired channel.

### 3.14.2 Monitor B

You can select the live screen mode to full or 4-view screens on the monitor B.

1. Press B ( **B** ) button or click the  icon in the system control bar. The screen mode select menu of monitor B is displayed on the monitor A.
2. Select screen mode.



**Figure 3.10** The screen mode select menu of monitor B.

- 1** Selected channel of the monitor B.
  - 2** Channel buttons: Press a 1 to 16 channel button to see the current camera image on the monitor B.
  - 3** Screen mode
    - Full Screen Mode: When you see the selected channel on the full screen.
    - 4 view Mode: Displays 4 view screens on the monitor B.
  - 4** Selected view mode.
  - 5** Sequence: View all channels in sequence.
3. Select [OK (B)] and press ENTER to confirm your selection.

## 3.15 PTZ camera control

You can control the cameras connected via the biphasic port and data port RS-422/485 terminal. You must set the configuration between the PTZ camera and the DVR.

1. Select the PTZ camera channel on monitor A you want to control.
2. Press PTZ or click the PTZ icon in the system control bar. PTZ virtual remote control is displayed on monitor A.
3. Use each item to control the PTZ camera.

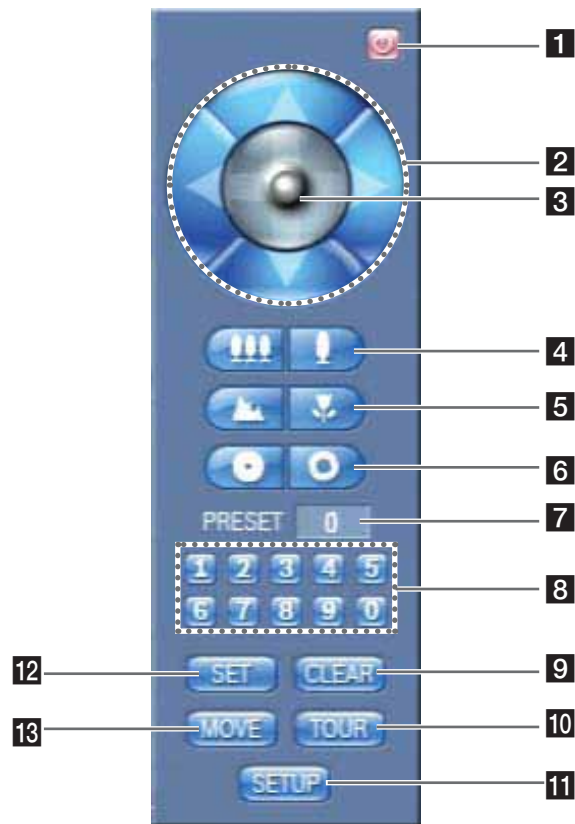


Figure 3.11 The PTZ virtual remote control.

Button		Function
1		Remove the PTZ virtual remote control.
2		Use to pan/tilt the camera.
3		Confirm the preset position.
4		Adjust the camera zoom.
5		Manually adjust the focus of a camera.
6		Manually adjust the iris of a camera.
7		Displays the Selected Preset Number
8		Input the preset number.
9		Delete a memorized preset position.
10		Start a preset tour.
11		Display the setup menu of the PTZ camera.
12		Register preset positions.
13		Move the camera to the preset position.

Table 3.5 The PTZ virtual remote control button function table



### 3.15.1 Preset settings


Preset position is the function to program camera monitoring positions (preset positions) associated with position numbers.

By entering the position numbers, you can move cameras to the preset positions.

**Note:**

To activate this function, you need to register the preset positions of the PTZ camera.

### 3.15.2 To program preset positions


1. Move the camera to a point you wish by using the ▲/▼/◀/▶.
2. Press SET or click the [SET] icon.
3. Select the preset number you wish to register.
4. Press ENTER or click the  icon.  
The position and its number are memorized.
5. Repeat steps 1-4 to add additional positions.

**Note:**

Preset numbers from 0 to 255 are available on this unit but the actual preset range differs depending on PTZ cameras.


### 3.15.3 Changing to a preset position

The following function is available only with cameras provided with the preset function. The preset function makes the PTZ camera move to the programmed preset position. It is necessary to program preset positions for the PTZ camera beforehand.

1. Press the MOVE button or click the [MOVE] icon.
2. Use number buttons to enter the memorized preset position's index number then press ENTER or click the  icon. The camera moves to the preset position and the picture of the camera in that position appears on the monitor.

### 3.15.4 To clear the preset position

You can clear a memorized preset position.

1. Press the CLEAR button or Click the [CLEAR] icon.
2. Use number buttons to enter the memorized preset index number, then press ENTER or Click the  icon to clear the preset positions.

**Note:**

This function may not be available depending on PTZ cameras.



### 3.15.5 To tour the preset positions

You can tour all preset positions.

1. Press the TOUR button or Click the [TOUR] icon.  
All registered preset positions in the camera will be selected. The camera position image will be switched on the active monitor.
2. You can stop the tour by pressing the TOUR button or clicking the [TOUR] icon.

### 3.15.6 Setup for PTZ cameras

You can adapt the camera to your requirements by setting up the respective items in menus.

1. Click the [SETUP] icon.  
The setup menu appears in the selected window of the main monitor.
2. Use arrows, ZOOM +/- and ENTER buttons to set the options.




#### Notes:

- Refer to the manuals of the PTZ camera for more details.
- Some PTZ cameras may not operate correctly with this unit.
- You cannot control the other functions when the PTZ virtual remote control is displayed.

## 3.16 Viewing System Information

To view system information:

1. Press INFO or click the INFO icon in the system control bar. The system information window is displayed on the main monitor.

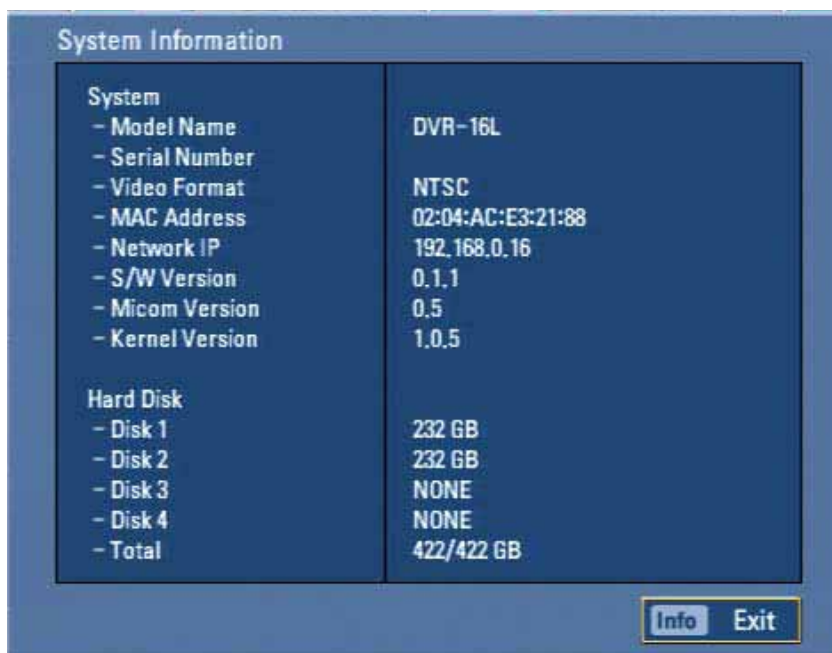


**Figure 3.12** System information window

2. Press INFO or click the [Exit(Info)] button to exit the window.

## 3.17 Viewing the System Log List

To view the system log list:

1. Press LOG or click the LOG icon in the system control bar. The system log list window is displayed on the main monitor.

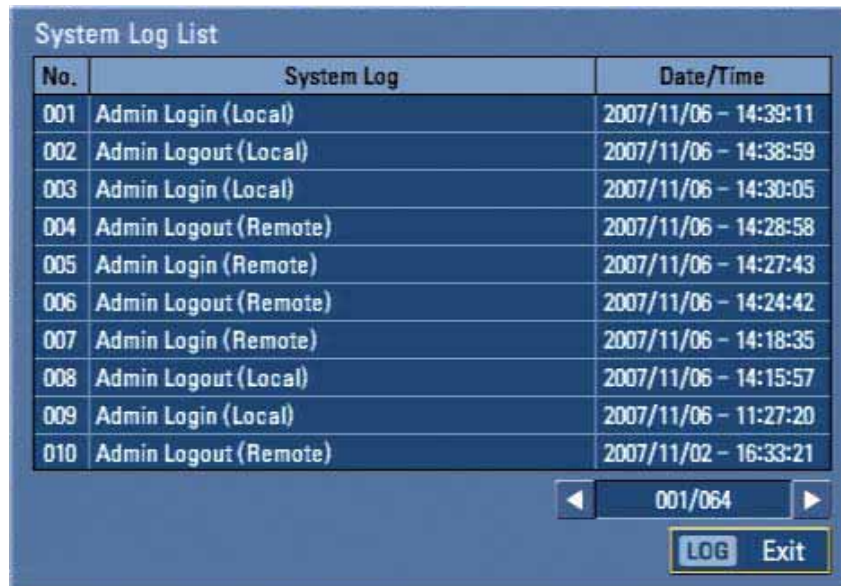

**Figure 3.13** System log window

2. Use ◀ / ▶ to see the previous or next log list.
3. Press LOG or click the [Exit(LOG)] button to exit the window.
  - The system log list:


No.	Log Message	No.	Log Message
1	Power On	24	Export Failed
2	Power Off	25	S/W Updated
3	Power Recovery	26	HDD Added (HDD1)
4	Admin Login (Remote)	27	HDD Added (HDD2)
5	Admin Logout (Remote)	28	HDD Added (HDD3)
6	Advanced User Login (Remote)	29	HDD Added (HDD4)
7	Advanced User Logout (Remote)	30	HDD Removed (HDD1)
8	Normal User Login (Remote)	31	HDD Removed (HDD2)
9	Normal User Logout (Remote)	32	HDD Removed (HDD3)
10	Admin Login (Local)	33	HDD Removed (HDD4)
11	Admin Logout (Local)	34	HDD Formatted (HDD1)
12	Advanced User Login (Local)	35	HDD Formatted (HDD2)
13	Advanced User Logout (Local)	36	HDD Formatted (HDD3)
14	Normal User Login (Local)	37	HDD Formatted (HDD4)
15	Normal User Logout (Local)	38	HDD Changed (HDD1)
16	Configuration Changed	39	HDD Changed (HDD2)
17	Configuration Imported	40	HDD Changed (HDD3)
18	Factory Default Set	41	HDD Changed (HDD4)
19	Backup Started	42	HDD Damaged (HDD1)
20	Backup Finished	43	HDD Damaged (HDD2)
21	Backup Failed	44	HDD Damaged (HDD3)
22	Export Started	45	HDD Damaged (HDD4)
23	Export Finished	46	System Fan Failure

**Table 3.6** System log list

## 3.18 Configuration Menu

The features and options of the DVR are configured through the menu. The operations of this unit can be set via a menu displayed on the main monitor. You can select and set the operational conditions by using the buttons on the front panel, the remote control, or using a USB Mouse connected to the unit.

Only administrator-level users have permission to access the Setup menu and configure the DVR.

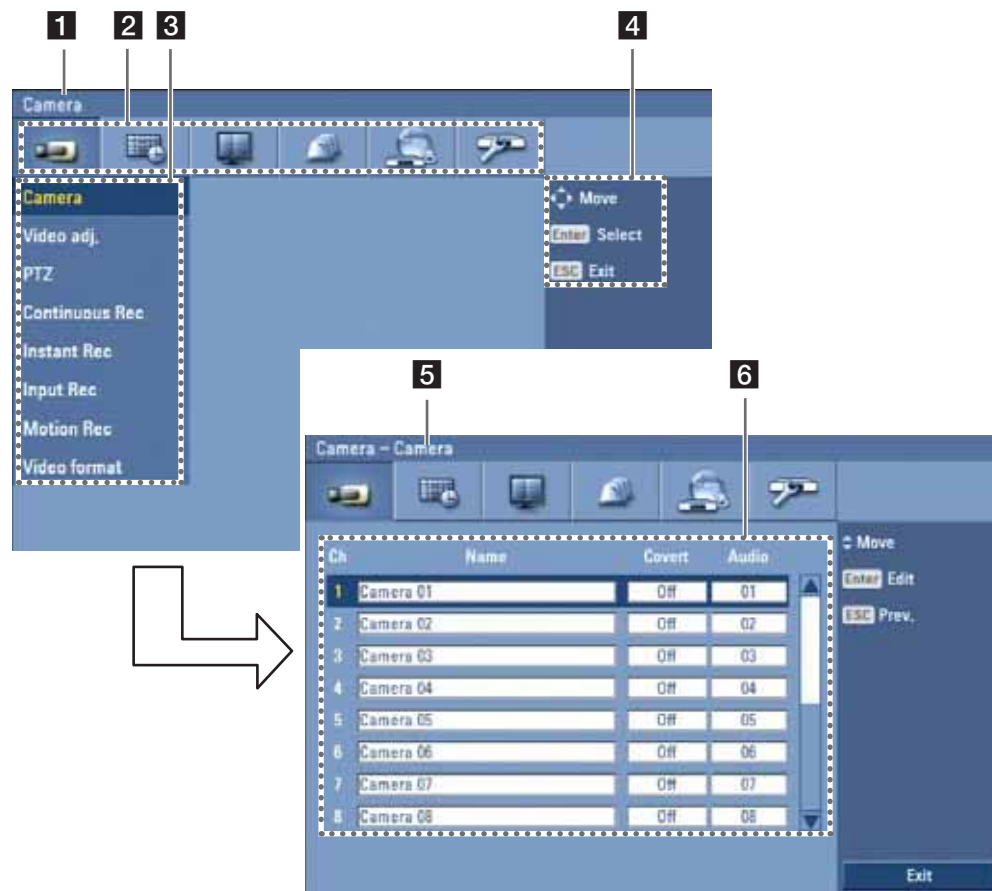


**Figure 3.14** DVR setup menu

- 1** Displays the selected main menu title.
- 2** Displays the main menu icons.
- 3** Displays the submenu options.
- 4** Displays the help menu.
- 5** Displays the selected submenu title.
- 6** Displays the detail options for selected submenu.


### 3.18.1 Using a mouse to set a menu

Use the left and right mouse buttons to set the menu.

- Left button: Use to select a required item or decrease the options value.
- Right button: Use to increase the options value.

1. Click the  icon on the bottom of the on-screen display with the left mouse button to display a setup menu.
2. Click the desired menu icon with the left mouse button to display the submenu.
3. Click the desired submenu item with the left mouse button.
4. Set the selected options value.
5. Click the Exit icon to exit setup menu. If the save message appears, click [OK] with the left mouse button to save the settings.

### 3.18.2 Setting the menu using the front panel buttons or remote control buttons

- **Arrow Buttons (▲/▼/◀/▶):** Use these buttons to select the menu options or adjust the options value.
  - **ENTER:** Select the option or confirm the setting.
  - **ESC:** Return to the previous menu or level.
1. Press SETUP(  ) to display the setup menu.
  2. Use ◀/▶ to select the desired menu icon.
  3. Use ▲/▼ to select the desired submenu item, then press ENTER to display the setting options.
  4. Use ▲/▼/◀/▶ to select the desired option, then press ENTER to set the value.
  5. Use ◀/▶ to select the desired setting then press ENTER to confirm your selection.
  6. Press ESC to exit the Setup menu. If the Save message appears, press ENTER to save the settings.

**Note:**

When you operate the function menu by using the remote control and front panel buttons, both buttons are operated in the same way to control the function menu.

To use other functions of number buttons on the front panel as shown below:


1. Press ALT. The button indicator turns green.
2. Select the function button you want.

All the operation explanations are based on using the remote control.

## 3.19 Camera settings

### 3.19.1 Camera

The camera name, covert and input audio channel settings are configured.

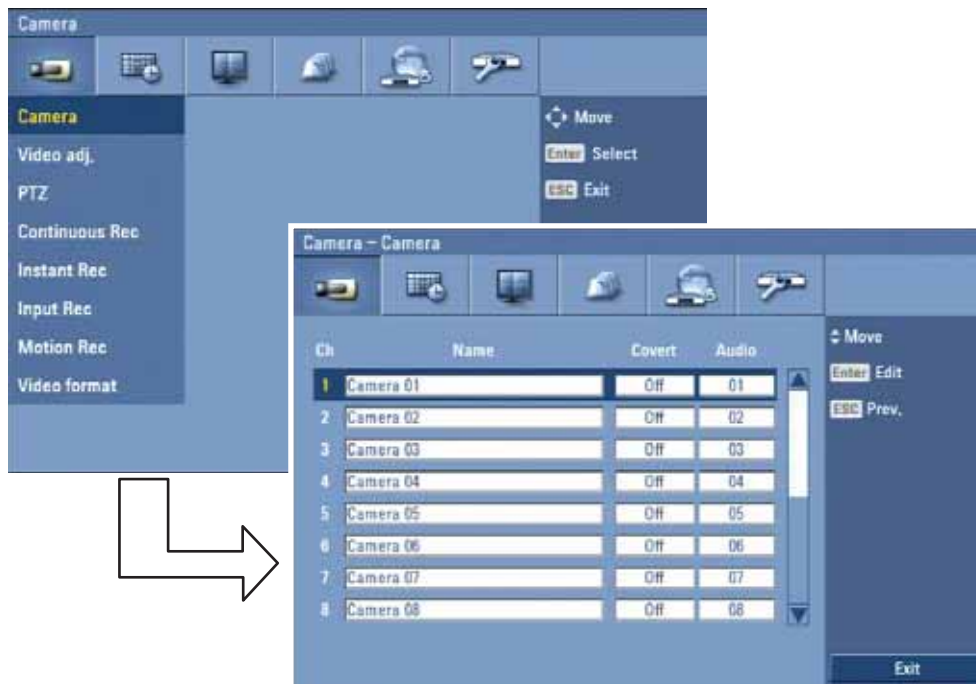


**Figure 3.15** Camera setup menu

- Ch: Displays the channel number.
- Name: Enter the camera name using up to 12 characters.
  - ◀/▶/▲/▼: Select a character.
  - ENTER: Confirms your selection.
  - ESC: Exits the virtual keyboard menu.
- Covert: You can set the camera conditions to prevent operation by other users.
- Audio: You can hear from the selected input audio channel.

### 3.19.2 Video adjustment

Adjust the brightness, contrast and color settings of each camera channel. You can see the settings screen from the preview windows.

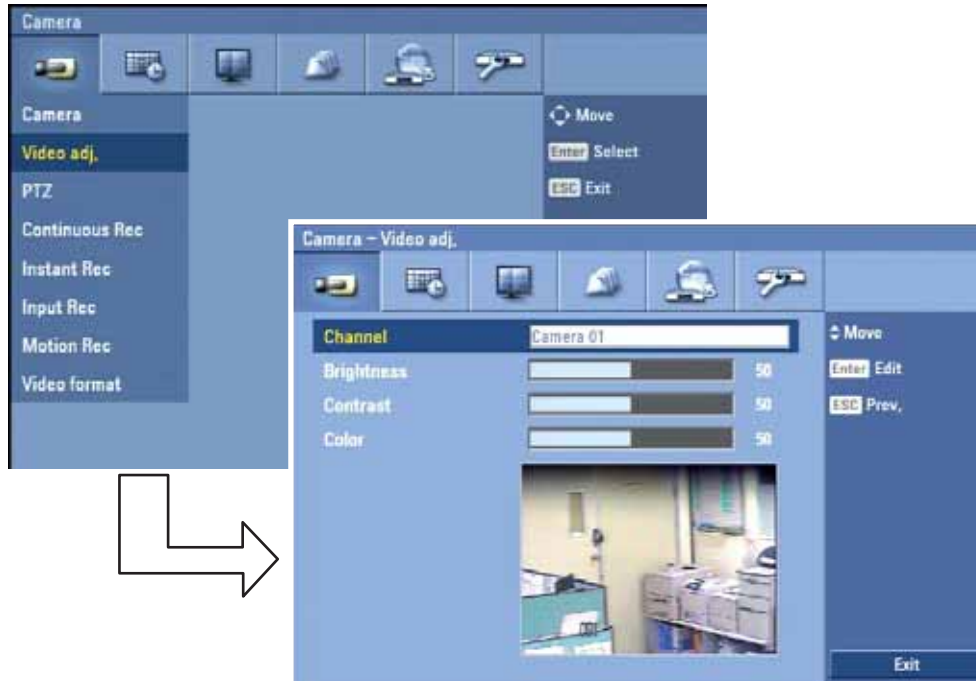


**Figure 3.16** Video adjustment setup menu

- Channel: Selects the desired channel to adjust.
- Brightness: Adjust the brightness value from 00 to 100 for the selected channel.
- Contrast: Adjust the contrast value from 00 to 100 for the selected channel.
- Color: Adjust the color value from 00 to 100 for the selected channel.

### 3.19.3 PTZ

Settings for the PTZ cameras connected via the data port of the biphase connector or RS-422/485 terminal.

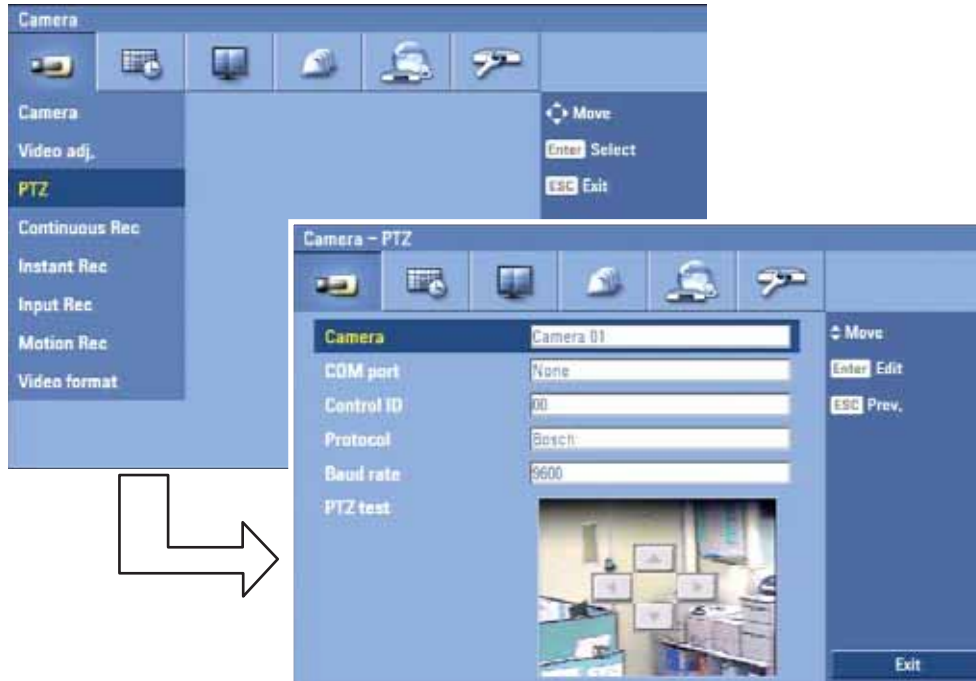


**Figure 3.17** PTZ setup menu.

- **Camera:** Selects the desired camera to set the connected PTZ camera.
- **COM port:** Selects the connected data port of the biphase connector, or RS-422/485 terminal on the rear panel.
- **Control ID:** Selects the PTZ camera ID from 00 to 255. Make the same settings as the PTZ camera.
- **Protocol:** Selects the protocol supported by PTZ camera.
- **Baud rate:** Selects the communication speed (1200, 2400, 4800, 9600, 19200 or 38400).
- **PTZ test:** After the PTZ setting, you can test the pan/tilt function for the selected PTZ camera. You can see the test screen from the preview windows on the right side of the PTZ test option.
  - ◀/▶: Test the pan direction.
  - ▲/▼: Test the tilt direction.

### 3.19.4 Continuous recording

Settings concerning continues recording.

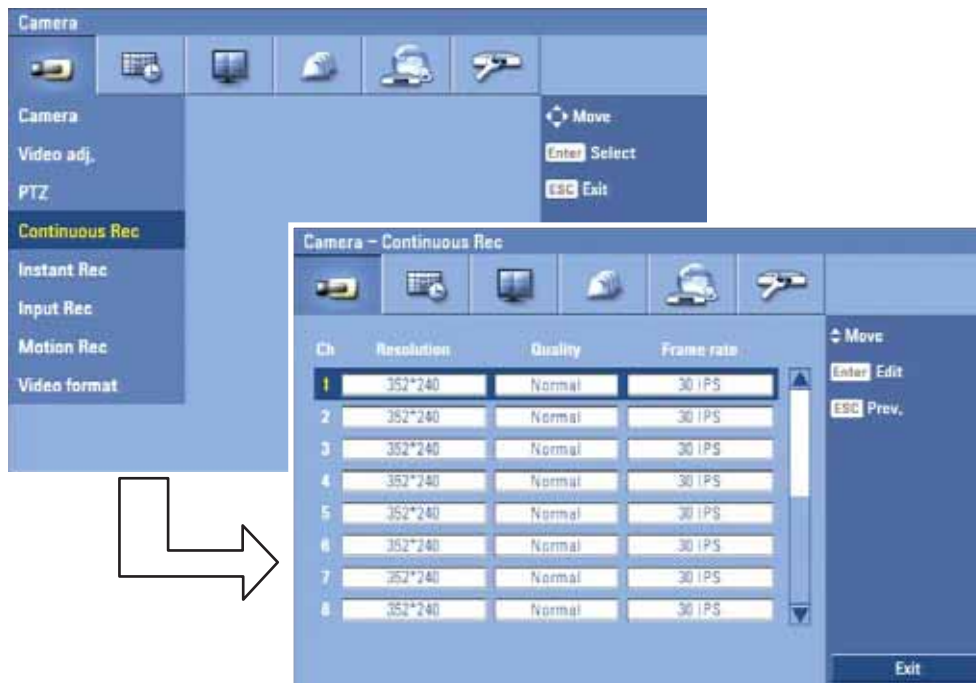

**Figure 3.18** Continuous recording setup menu

- Ch: Displays the channel number.
- Resolution: Selects the recording resolution.
- Quality: Selects the recording picture quality (Lowest, Low, Normal, High or Best).
- Frame rate: Selects the frame rate. The frame rate is the number of recorded frames per second. According to resolution, the frame rate is set automatically. If you wish to set manually, refer to the below table.


Resolution		Frame rate
NTSC	352*240	1, 3, 5, 7.5, 15, 20, 30
	704*240	1, 3, 5, 7.5, 15
	704*480	1, 3, 5, 7.5
PAL	352*288	1, 3, 5, 6, 12.5, 20, 25
	704*288	1, 3, 5, 6, 12.5
	704*576	1, 3, 5, 6

**Table 3.7** Frame rate table



### 3.19.5 Instant recording

Settings concerning instant recording.

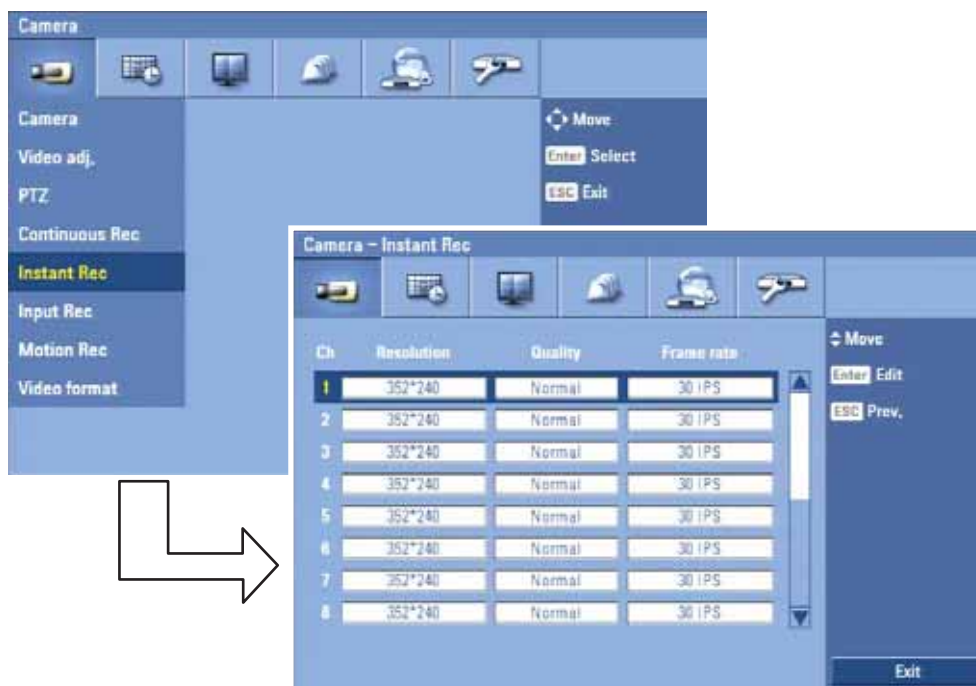

**Figure 3.19** Instant recording setup menu


- Ch: Displays the channel number.
- Resolution: Selects the recording resolution.
- Quality: Selects the recording picture quality (Lowest, Low, Normal, High or Best).
- Frame rate: Selects the frame rate. The frame rate is the number of recorded frames per second. According to resolution, the frame rate is set automatically. If you wish to set manually, refer to the below table.

Resolution		Frame rate
NTSC	352*240	1, 3, 5, 7.5, 15, 20, 30
	704*240	1, 3, 5, 7.5, 15
	704*480	1, 3, 5, 7.5
PAL	352*288	1, 3, 5, 6, 12.5, 20, 25
	704*288	1, 3, 5, 6, 12.5
	704*576	1, 3, 5, 6

**Table 3.8** Frame rate table

### 3.19.6 Input recording

Settings concerning input recording.

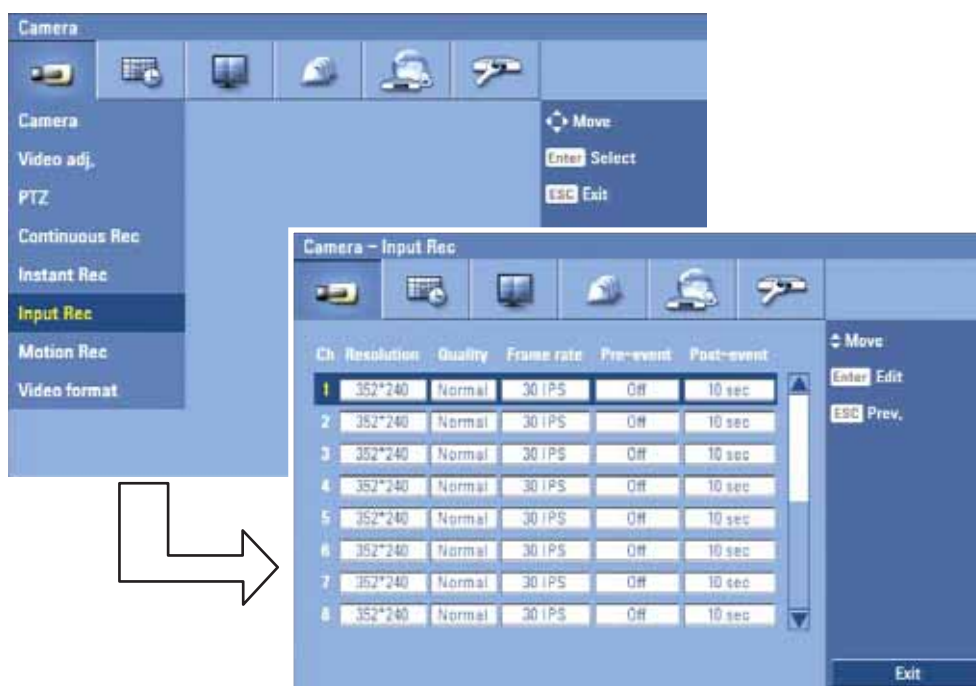

**Figure 3.20** Input recording setup menu

- Ch: Displays the channel number.
- Resolution: Selects the recording resolution.
- Quality: Selects the recording picture quality (Lowest, Low, Normal, High or Best).
- Frame rate: Selects the frame rate. The frame rate is the number of recorded frames per second. According to resolution, the frame rate is set automatically. If you wish to set manually, refer to the below table.

Resolution		Frame rate
NTSC	352*240	1, 3, 5, 7.5, 15, 20, 30
	704*240	1, 3, 5, 7.5, 15
	704*480	1, 3, 5, 7.5
PAL	352*288	1, 3, 5, 6, 12.5, 20, 25
	704*288	1, 3, 5, 6, 12.5
	704*576	1, 3, 5, 6

**Table 3.9** Frame rate table

- Pre-event: Specify the pre-event recording time that records the situation until the input has been detected. (Off, 5, 10, 20, 30, 40, 50 sec or 1 min)
- Post-event: Specify the post-event recording time that records the situation after the input has been detected. (10, 20, 30, 40, 50 sec or 1, 2, 3, 5, 10 min)




**Note:**

Pre-event times given are only a rough guide. Actual times are dependent upon resolution, quality, and frame rate settings, as well as the number of channels selected for pre-event recording.

### 3.19.7 Motion recording

Settings concerning motion recording.

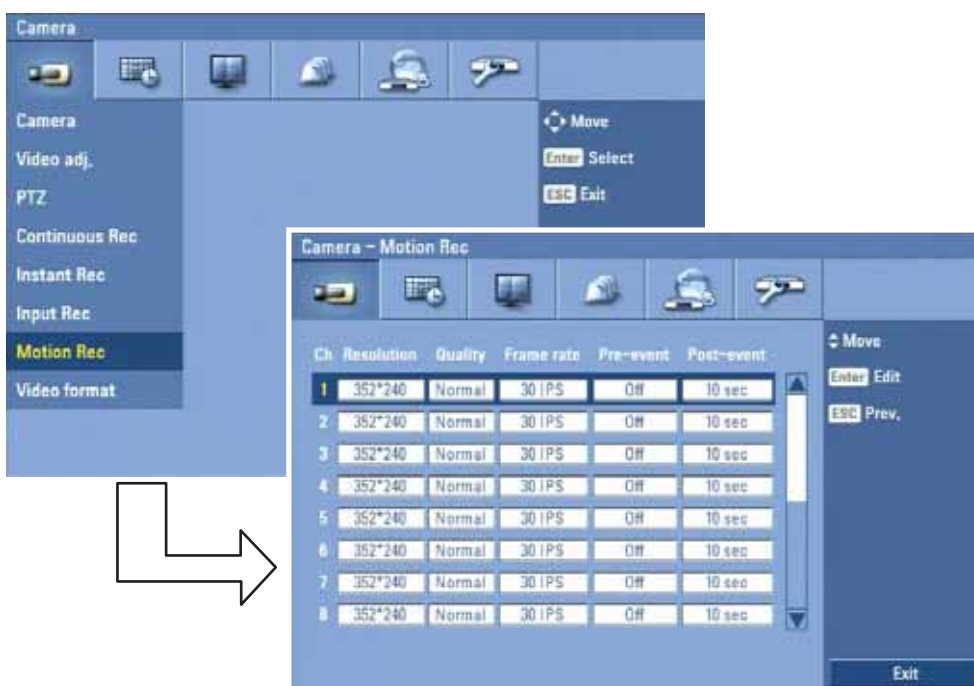

**Figure 3.21** Motion recording setup menu

- Ch: Displays the channel number.
- Resolution: Selects the recording resolution.
- Quality: Selects the recording picture quality (Lowest, Low, Normal, High or Best).
- Frame rate: Selects the frame rate. The frame rate is the number of recorded frames per second. According to resolution, the frame rate is set automatically. If you wish to set manually, refer to the below table.

Resolution		Frame rate
NTSC	352*240	1, 3, 5, 7.5, 15, 20, 30
	704*240	1, 3, 5, 7.5, 15
	704*480	1, 3, 5, 7.5
PAL	352*288	1, 3, 5, 6, 12.5, 20, 25
	704*288	1, 3, 5, 6, 12.5
	704*576	1, 3, 5, 6

**Table 3.10** Frame rate table

- Pre-event: Specify the pre-event recording time that records the situation until motion has been detected. (Off, 5, 10, 20, 30, 40, 50 sec or 1 min)
- Post-event: Specify the post-event recording time that records the situation after motion has been detected. (10, 20, 30, 40, 50 sec or 1, 2, 3, 5, 10 min)




**Note:**

Pre-event times given are only a rough guide. Actual times are dependent upon resolution, quality, and frame rate settings, as well as the number of channels selected for pre-event recording.

### 3.19.8 Video format

Selects the video format to NTSC or PAL according to your video system format.

1. Select the video format.  
The confirmation message is displayed.
2. Select [OK] and press ENTER.  
After the HDD has been formatted, the system will reboot.

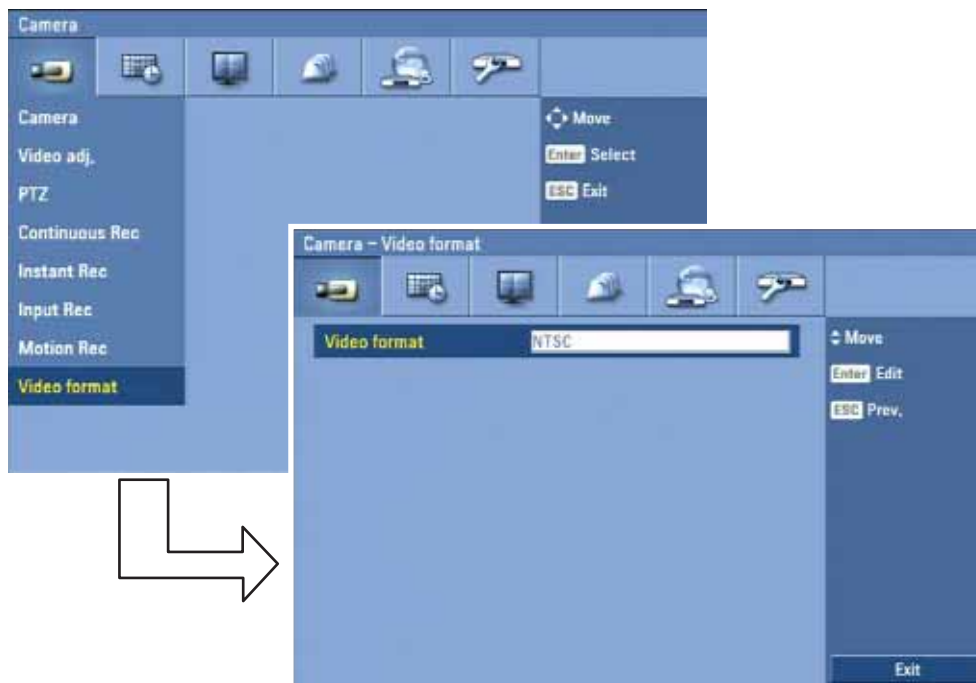


**Figure 3.22** Video format setup menu

## 3.20 Schedule settings

The DVR can record according to a schedule set by the user. It can also record manually regardless of date and time. The recording can be made either continuously or triggered by events (input and motion detection).

The recording schedule screen displays one day of the week showing the schedule of all channels over a 24-hour period.


For each 1-hour cell block the recording method can be specified. The recording method for each block is shown in color for easy viewing.

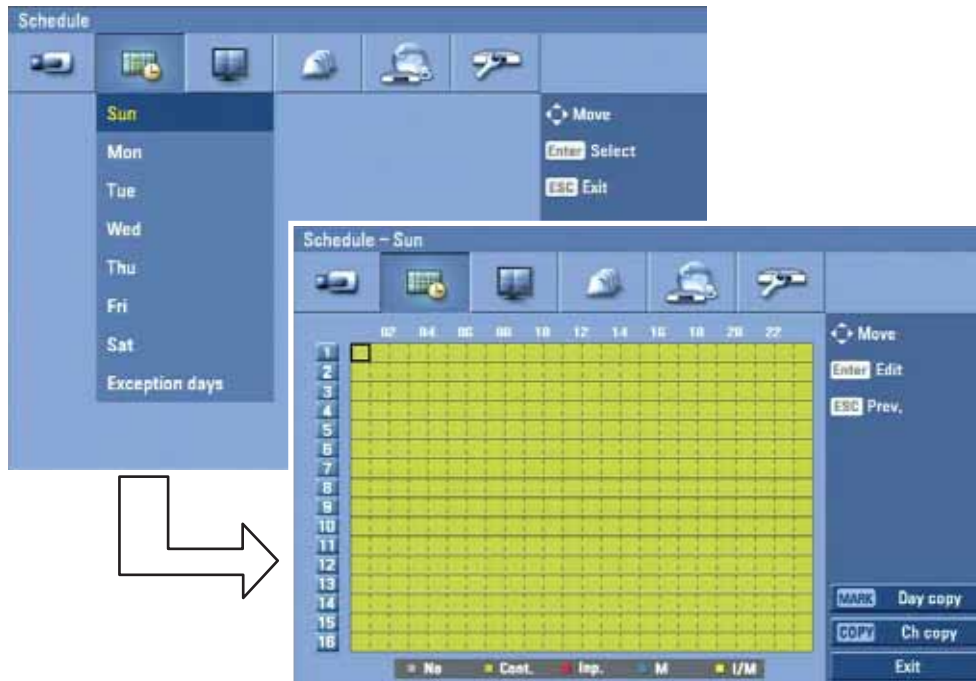

**Figure 3.23** Schedule setup menu


### 3.20.1 To set the Recording Schedule for a typical day of the week

1. Select a day of the week. (Sun, Mon, Tue, Wed, Thu, Fri or Sat)
2. Select the desired channel to schedule recording.
3. Select the time cell block for the start time.

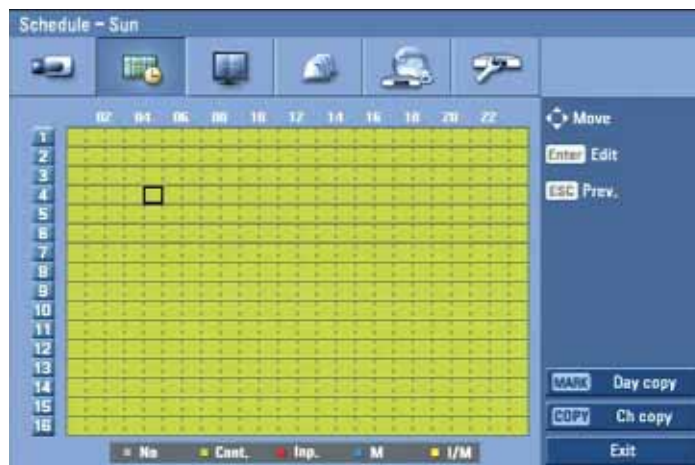


**Figure 3.24** Schedule setup menu

4. Press ENTER or click the left mouse button to select a recording mode. The color of the cell blocks will change automatically.
  - Gray: No scheduled recording
  - Green (Continuous recording): Recording starts automatically from the preset time.
  - Red (Input event recording): Recording starts automatically when the input is activated within a designated time.
  - Blue (Motion event recording): Recording starts automatically when motion is detected within a designated time.
  - Yellow (Input+Motion recording): Recording starts automatically when the input is activated or motion has been detected.
5. Select the next time cell block of schedule time cell blocks to confirm the schedule time.

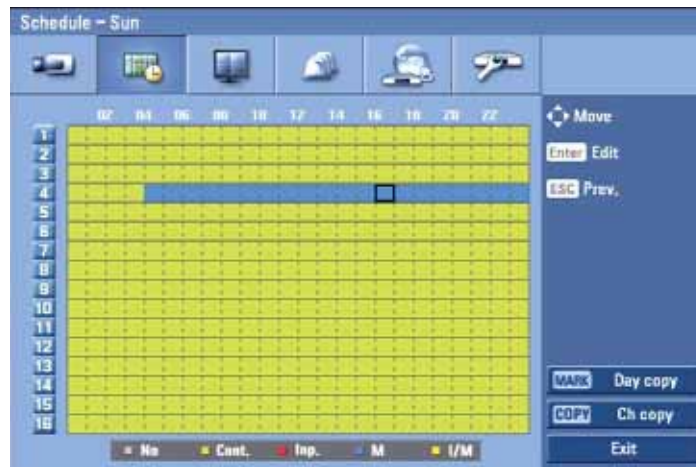

**Figure 3.25** Schedule setup menu

6. Press ENTER or click the left mouse button repeatedly to select gray to set the time for the end of the schedule. The settings cell block is highlighted.

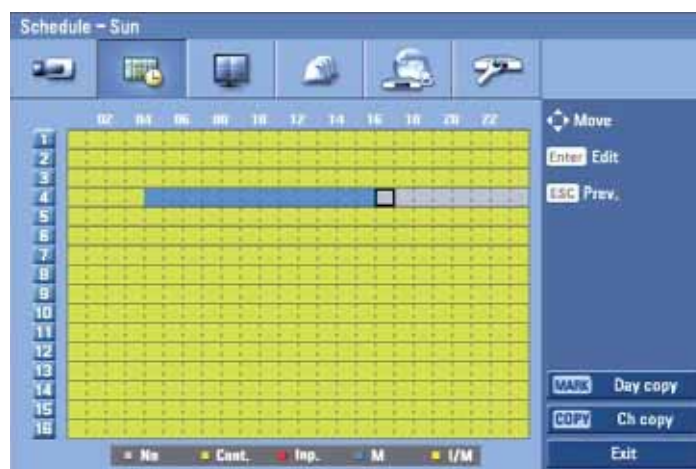

**Figure 3.26** Schedule setup menu


7. Press MENU to confirm your settings. The confirmation window is displayed.
8. Select OK and press ENTER to save the new settings.
  - Press ESC to exit the specific date selection menu.



### 3.20.2 To set a recording schedule for an Exception days


In addition to the weekly schedule, up to 10 specific date/time periods can be defined. To configure the specific recording schedule select Specific Dates.

1. Select the [Exception days] option.

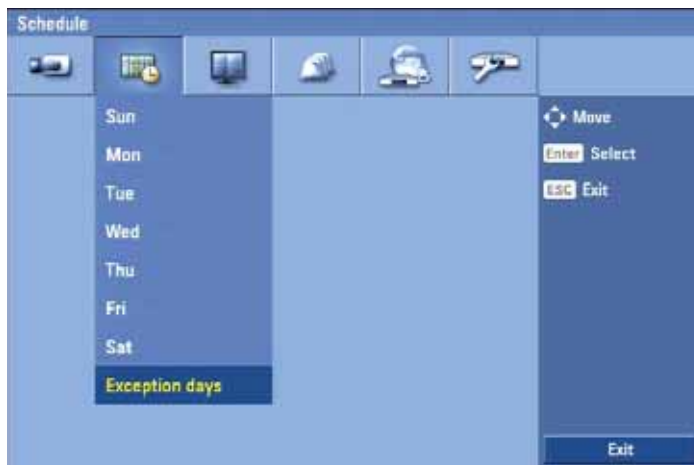

**Figure 3.27** Exception days setup menu

2. Select a cell block.

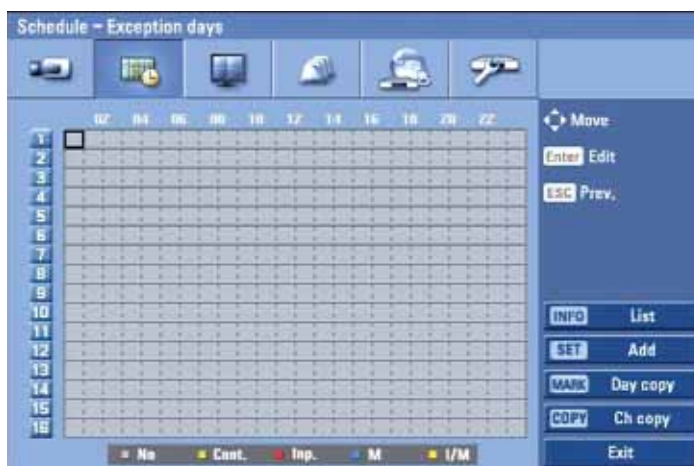

**Figure 3.28** Exception days setup menu

3. Press the SET button or click the **SET Add** icon on the exception days setting menu. The specific date selection menu appears.





### 3.20.3 Checking the Exception days schedule list

1. Press INFO when the "Exception days" option is selected.  
The exception days scheduled list appears.



**Figure 3.31** Exception days scheduled list

2. Select a exception day title on the list and press ENTER.  
The title color turns orange.
3. Select the [Edit] icon, press ENTER to edit the exception day or press CLEAR to delete the exception day schedule.
4. Press ESC to exit the exception day schedule list.



**Note:**

If the exception day recording schedule is duplicated with the other recordings, only the exception day recording is possible.

### 3.20.4 Copying the recording schedule

#### Copying from the scheduled data of the channel

You can copy the schedule data of the channel to the other channel(s) within the selected day of the week.

1. Select the day of the week and press ENTER.
2. Select channel that you want to copy.
3. Press COPY then the channel selection menu appears.



**Figure 3.32** Channel copy menu

4. Use ◀/▶ to move to the left or right column then press ENTER to select the target channel(s). You can cancel the selected channel by pressing ENTER.
5. Use ▲/▼ to select [OK] then press ENTER to confirm your selection.

### Copying from the Scheduled Data of the day

You can copy the scheduled day of the week to another day of the week, weekday and weekend using the MARK button.

1. Select the day of week that you want to copy.
2. Press MARK then the select date(s) menu appears.




**Figure 3.33** Day copy menu

3. Use ◀/▶ to select the target date(s).
4. Use ▲/▼ to select [OK] then press ENTER to confirm your selection.

## 3.21 Display settings


### 3.21.1 OSD

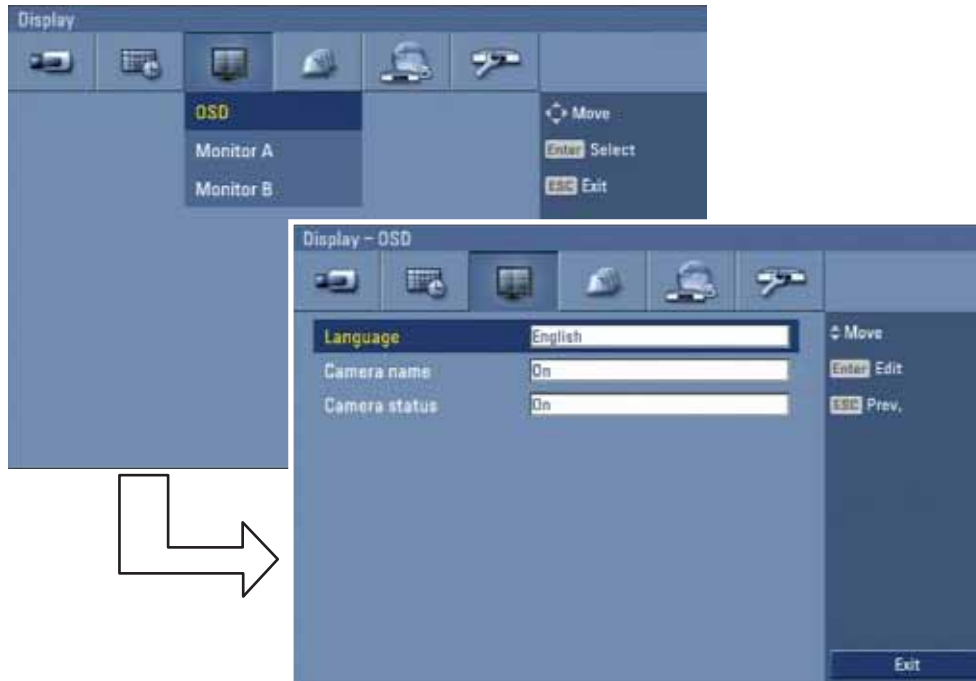

**Figure 3.34** OSD setup menu

- Language: Select a language for the setup menu and information display.
- Camera name
  - On: Displays the title of the camera.
  - Off: Displays the live picture without the title of the camera.
- Camera status
  - On: The current camera recording status is displayed.
  - Off: Remove the current camera recording status.


### 3.21.2 Monitor A

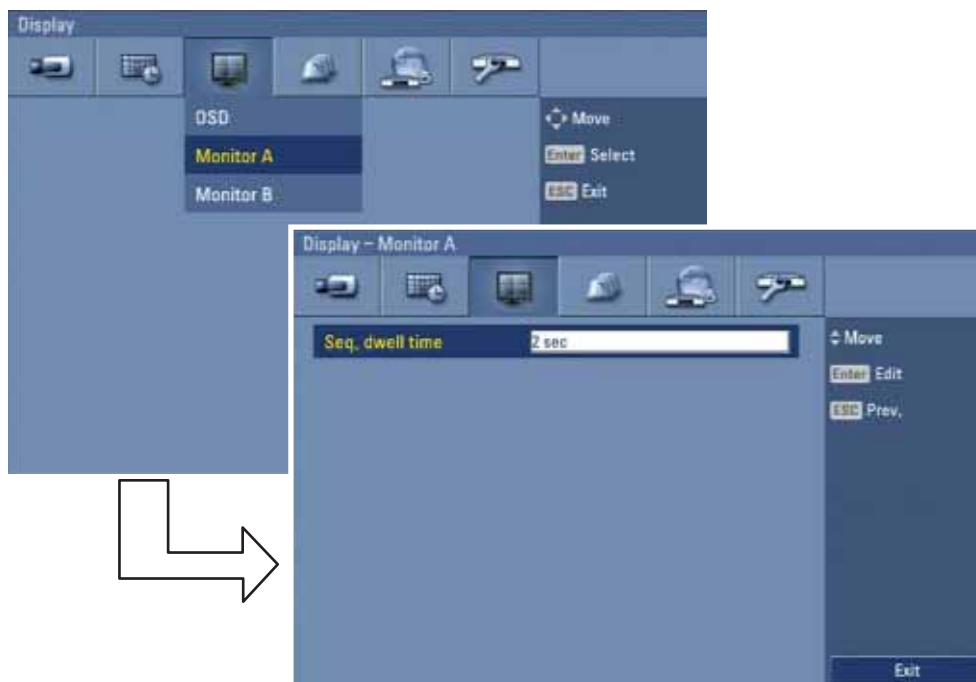

**Figure 3.35** Monitor A setup menu

- Seq. dwell time: You can set the camera sequence time to 2 sec, 5 sec, 10 sec, 20 sec, 30 sec, 40 sec, 50 sec, 60 sec, 70 sec, 80 sec or 90 sec.

### 3.21.3 Monitor B

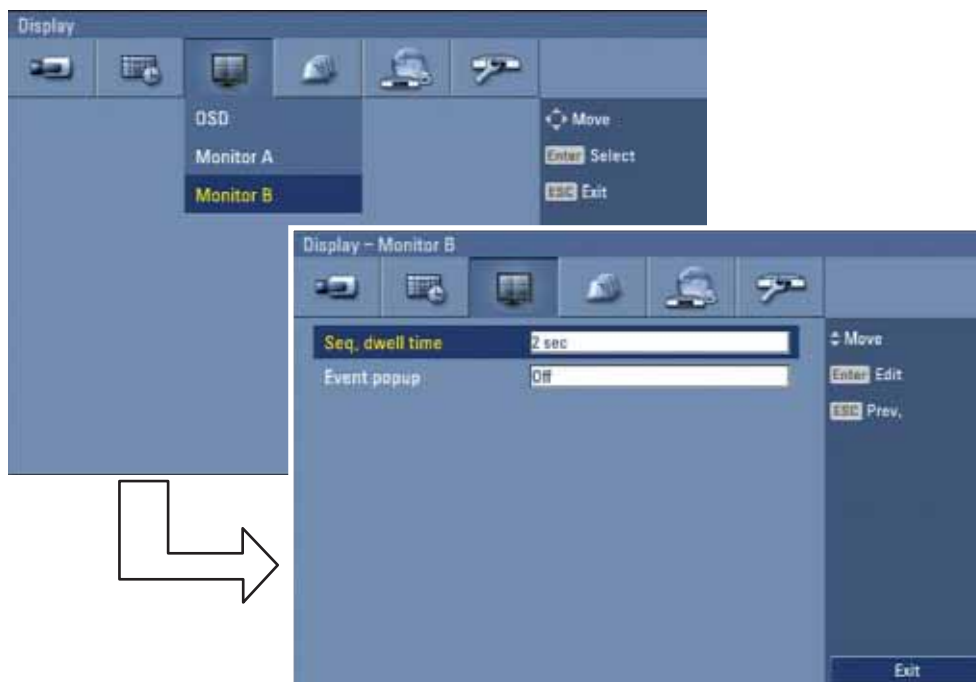


**Figure 3.36** Monitor B setup menu

- Seq. dwell time: You can set the camera sequence time to 2 sec, 5 sec, 10 sec, 20 sec, 30 sec, 40 sec, 50 sec, 60 sec, 70 sec, 80 sec or 90 sec.
- Event popup: Displays an event popup on the monitor B if motion, input or all (motion or input) occur.

## 3.22 Event settings


### 3.22.1 Input

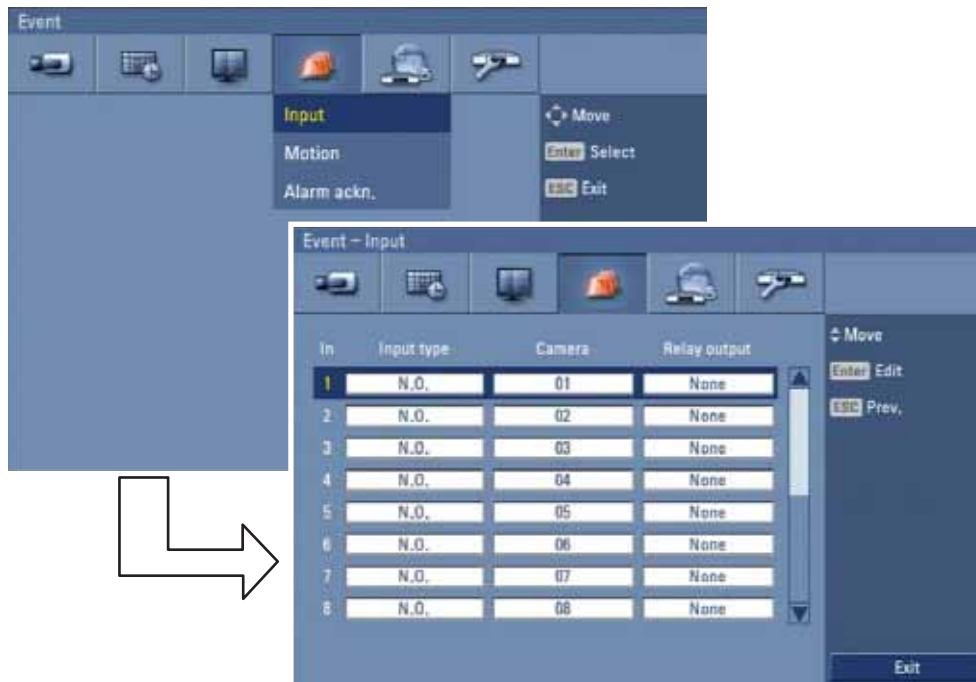

**Figure 3.37** Input setup menu

- In: Displays the number of inputs.
- Input type: The input state can be set to either N.O. (Normally Open) or N.C. (Normally Closed).
- Camera: Select the connected camera channel to the input.
- Relay output: Select the relay output number for the selected input.

### 3.22.2 Motion

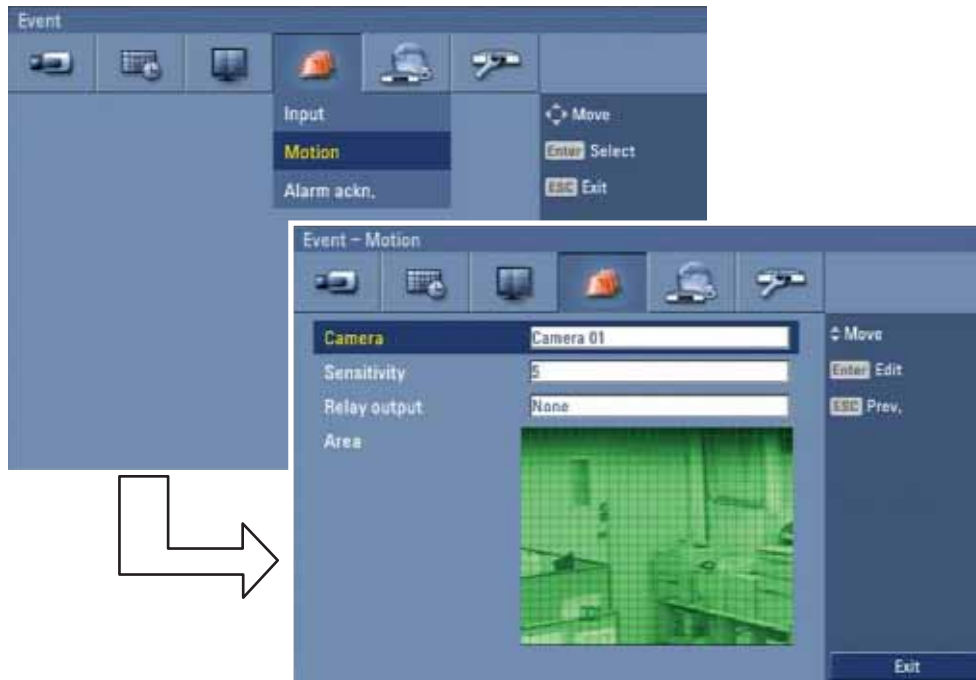

**Figure 3.38** Motion setup menu


- Camera: Select the camera to set motion detection.
- Sensitivity: Set the level of sensitivity for the created motion detection area. Sensitivity can be set from level 01 to 10 or Off.
- Relay output: Select the number of the output relay when motion is detected.
- Area: Select the desired motion detection area on the preview window screen.
  - ◀ / ▶ / ▲ / ▼: Moves the yellow cell box to another cell zone.
  - ENTER: Selects or cancels the motion detection area at the current cell position.
  - Press ESC to exit the settings.
- You can select the motion detection area by using the mouse.
  - To select the area: Drag & drop a cell to the right to select the motion detection area.
  - To cancel area: Drag & drop a cell point of a selected cell area to the left to cancel the motion detection area.




**Note:**

In situations where illumination is low and the outline of object is not clear enough to see, regardless of sensitivity, Motion Event might not activate. You must check Motion Event before setting.

### 3.22.3 Alarm acknowledgement

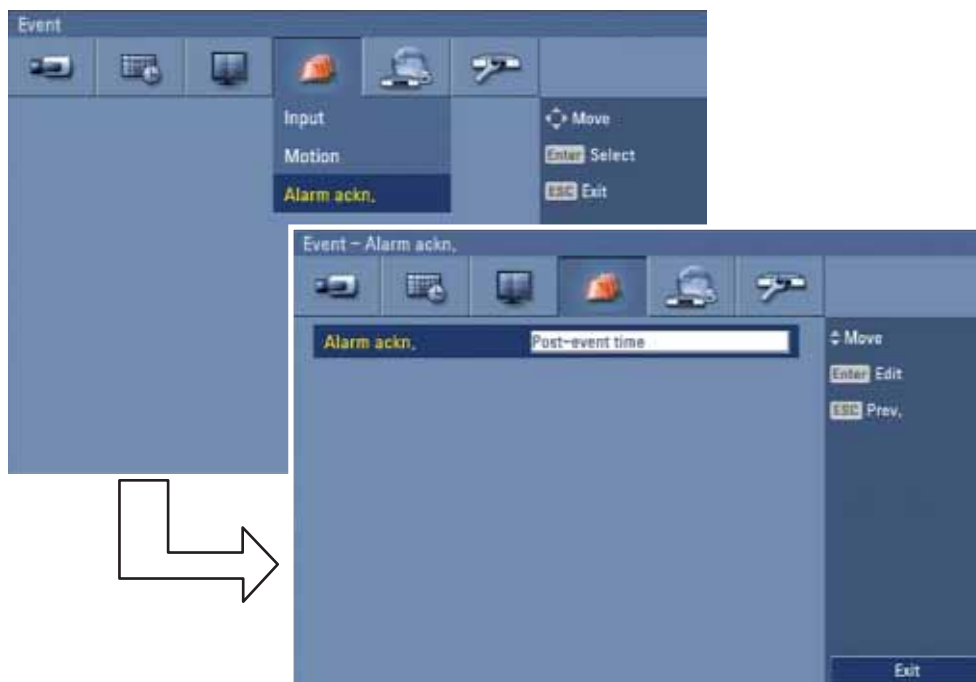

**Figure 3.39** Alarm acknowledgement setup menu

- Alarm ackn.
  - Manual: Use the ACK button on the remote control or  button on the front panel to stop alarm.
  - Post-event time: The alarm is stopped after the programmed post-event time.

## 3.23 Network settings

### 3.23.1 TCP/IP



**Figure 3.40** TCP/IP setup menu

- DHCP: DHCP stands for Dynamic Host Configuration Protocol.
  - On: Network settings of this unit are configured automatically by the DHCP server. If you set to ON, the [IP Address], [Subnet Mask], [Gateway], [Primary DNS] and [Secondary DNS] options are dimmed and these options can not be set.
  - Off: Enter the network settings manually.
- IP address: Enter an IP address using the virtual keyboard.
- Subnet mask: Enter a subnet mask address using the virtual keyboard.
- Gateway: Enter the gateway address using the virtual keyboard.
- Primary DNS: Enter the Main DNS server address using the virtual keyboard.
- Secondary DNS: Enter the Sub DNS server address using the virtual keyboard.
- Remote client port no.: Enter the remote client port number using the virtual keyboard. You can watch the live surveillance image over the network with the Control Center program. The factory default port for transmission of video and audio data is 9001. However in some cases it is better to change this port number for added flexibility or security. If desired change the port number (1025 ~ 65535).
- HTTP port no.: Enter the HTTP port number using the virtual keyboard. You can watch the live surveillance image over the network with a web browser. Typically the TCP port used by HTTP is 80. However in some cases it is better to change this port number for added flexibility or security. If desired change the port number (80 or 1025~ 65535).
- Bandwidth limit: Enter the Bandwidth to adjust the data traffic.




**Note:**

When you change the Remote client port or HTTP port number, all connections with the Control Center programs or web browser will be disconnected.



### 3.23.2 DDNS (Dynamic Domain Name System)

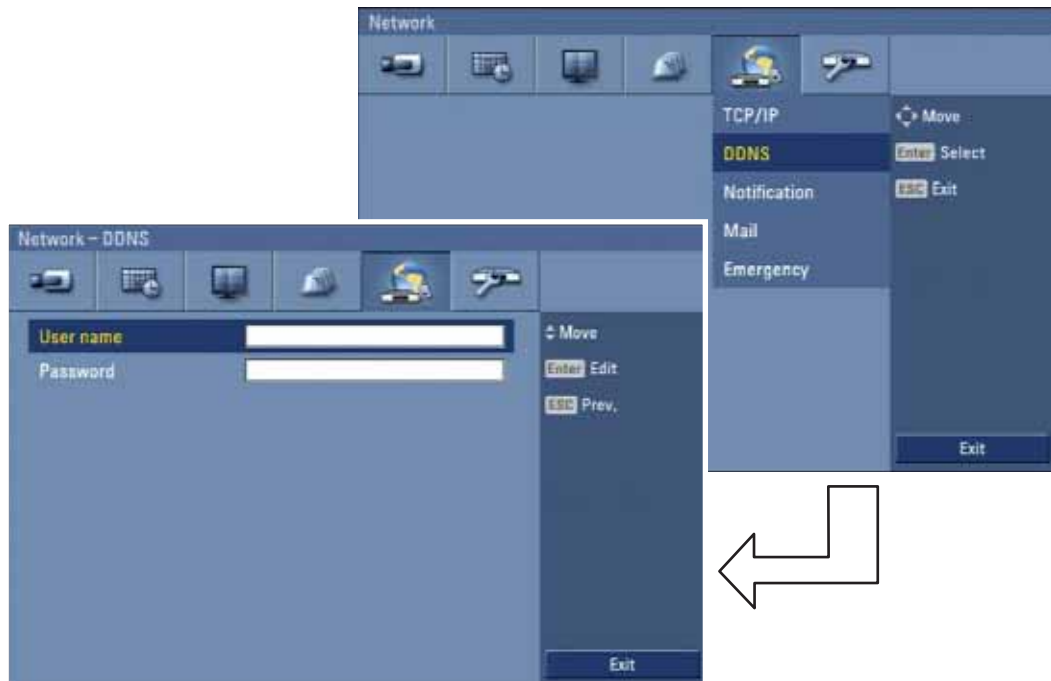

**Figure 3.41** DDNS setup menu

- User name: Enter the DDNS registered user name using the virtual keyboard.
- Password: Enter the user password in [User name] using the virtual keyboard.




**Note:**

The DDNS function is serviced using a TCP 8245 port by “No-IP” (<http://www.no-ip.com/>).

In case the DVR is used in the network system with a firewall, open the TCP 8245 port so that DDNS data can get into firewall. For more detail on firewall setup, ask your network administrator and/or network service provider.

### 3.23.3 Notification

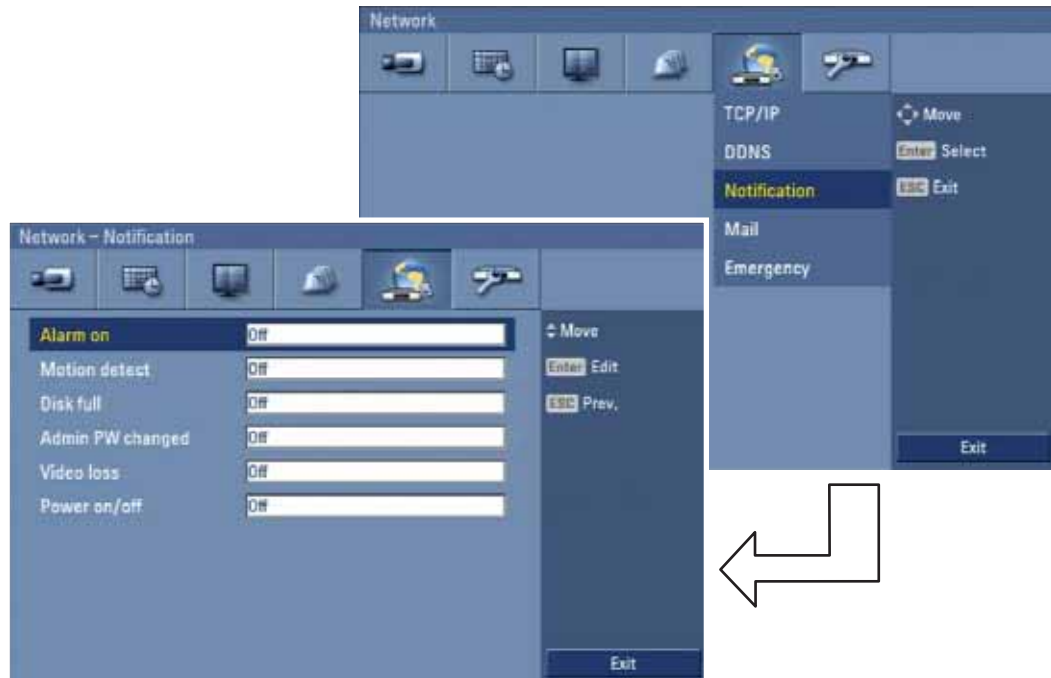

**Figure 3.42** Notification setup menu

- Alarm on:
  - On: Sends an e-mail when an input has been activated.
  - Off: Not used.
- Motion detect:
  - On: Sends an e-mail when motion detection has been activated.
  - Off: Not used.
- Disk full:
  - On: Sends an e-mail when the HDD has fully recorded.
  - Off: Not used.
- Admin PW changed:
  - On: Sends an e-mail when the administrator password has changed.
  - Off: Not used.
- Video loss:
  - On: Sends an e-mail when a video signal from the camera has stopped because of a cable disconnection or malfunction of a camera.
  - Off: Not used.
- Power on/off:
  - On: Sends an e-mail when power is on or off.
  - Off: Not used.

### 3.23.4 Mail



**Figure 3.43** Mail setup menu

- Notification
  - On: Notifies the user by e-mail of unit operating information, according to notification settings.
  - Off: The notification function is not used.  
The mail options are dimmed.
- SMTP server: Enter the SMTP Server address using the virtual keyboard.  
If notification is set to On and the SMTP server option is empty, the SMTP port no., user name, and password options are dimmed and the options are not set.
- SMTP port no.: Enter the SMTP port number using the virtual keyboard. Typically the port used for SMTP is 25. However, in some cases it is better to change this port number for added flexibility or security. If desired change the port number (1 ~ 65535).
- User name: Enter the user name using the virtual keyboard.
- Password: Enter the password using the virtual keyboard.
- TLS: Set to On when using the TLS (Transport Layer Security) function. By default, TLS is Off.
- Mail address (1-3): Enter the mail address using the virtual keyboard.  
You can input up to 3 e-mail addresses.
- E-mail test: Select [E-mail test] to test sending an e-mail.



**Note:**

The SMTP server, SMTP port no., user name or password settings are optional. The DVR can send e-mail directly without the use of an SMTP server or MTA (message transfer agent). In certain cases all e-mail should be forwarded to a specific SMTP server. Specify the server host name or IP address in such a case. For more detail on SMTP setup, ask your network administrator and/or mail service provider.

### 3.23.5 Emergency



**Figure 3.44** Emergency setup menu

- Notification:
  - On: Notifies the Alarm notifier program about unit operating information according to your notification settings.
  - Off: Notification function is not used.
- IP address/Port no.: Enter the IP address/port number of the Alarm notifier program using the virtual keyboard. The factory default port for this function is 9002. However, in some cases it is better to change this port number for added flexibility or security. If desired, change the port number (1025 ~ 65535). You can set up to 9 IP address/port numbers.

## 3.24 System settings


### 3.24.1 Date/Time



**Figure 3.45** Date/Time setup menu

- Date: Enter the current date.
- Time: Enter the current time. (24 HR or 12 HR)
- Date format: Select the date display format.
- Time format: Select the time display format.
- Time zone: Select your Time zone (for more details see "8.3 Time zones").
- Daylight saving: Set to On to use the daylight saving function.
- Daylight saving start: Select the Daylight saving start time.
- Daylight saving end: Select the Daylight saving end time.


### 3.24.2 NTP

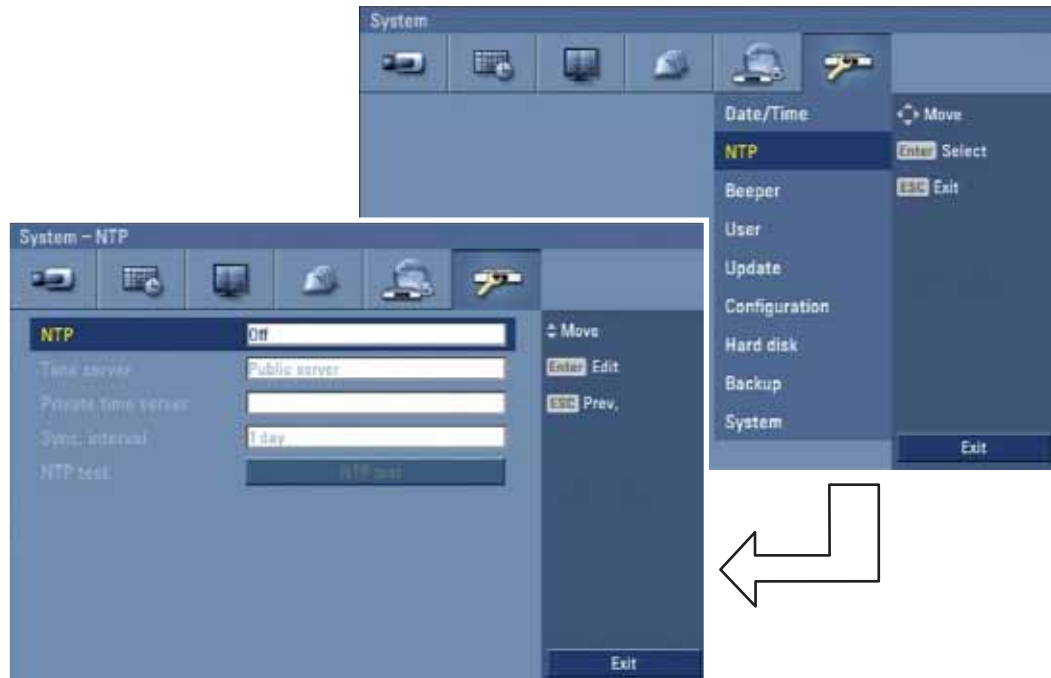

**Figure 3.46** NTP setup menu

- NTP: Set to On when using the NTP (Network Time Protocol) server for time adjustment. If the NTP is set to Off, the time settings should be entered manually and the [Time server], [Private time server], [Sync. interval] and [NTP test] options are deactivated.
- Time server: For most cases select public. The DVR will obtain the average time among 5 public servers (time.nist.gov, time-a.nist.gov, time-b.nist.gov, ntp.nasa.gov, clock.isc.org).
- Private time server: Enter the private time server's IP address or host name using the virtual keyboard.
- Sync. interval: You can set synchronized intervals with the NTP time server to 1 day, 1 hour, 1 month and 1 week.
- NTP test: Select [NTP test] to test the NTP server.

### 3.24.3 Beeper

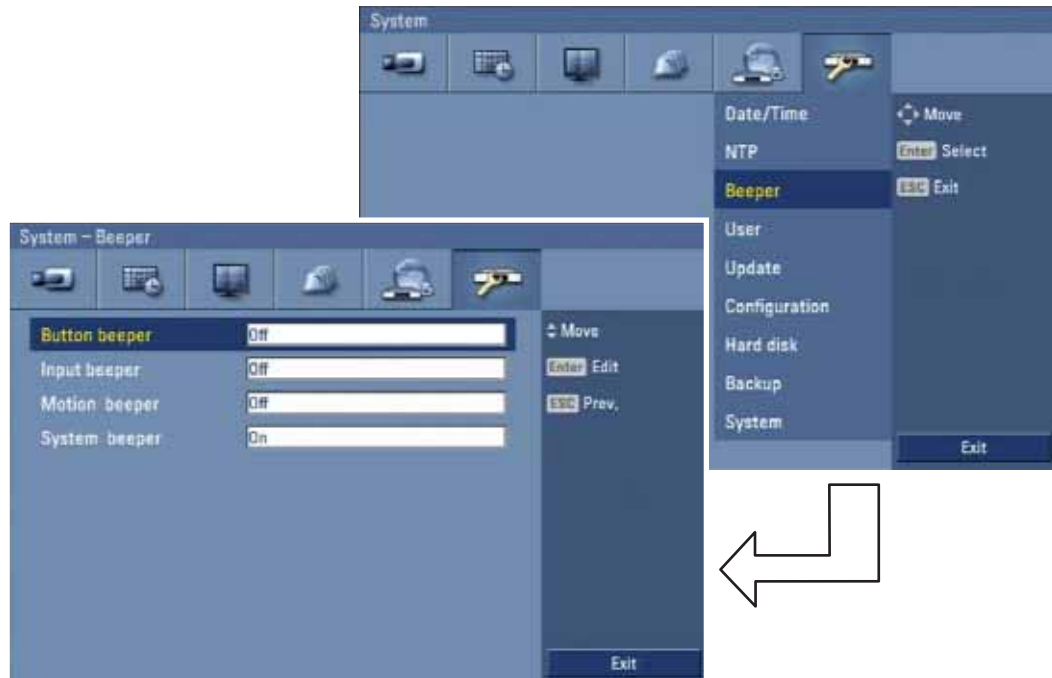

**Figure 3.47** Beeper setup menu

- Button beeper
  - On: Makes a sound when using the buttons.
  - Off: Turns off the button beep.
- Input beeper
  - On: Makes a sound when a input is activated.
  - Off: Turns off the input beeper.
- Motion beeper
  - On: Makes a sound when a motion is detected.
  - Off: Turns off the motion beeper.
- System beeper
  - On: Makes a sound when a cooling fan is not activated or the HDD has a bad sector.
  - Off: Turns off the system beeper.




**Note:**

The beeper is a low sound on this unit. If you want to make a loud sound, connect an external alarming device to the output connector (ext. siren).

### 3.24.4 User

You can register a new user with various access rights to the DVR or Control Center.

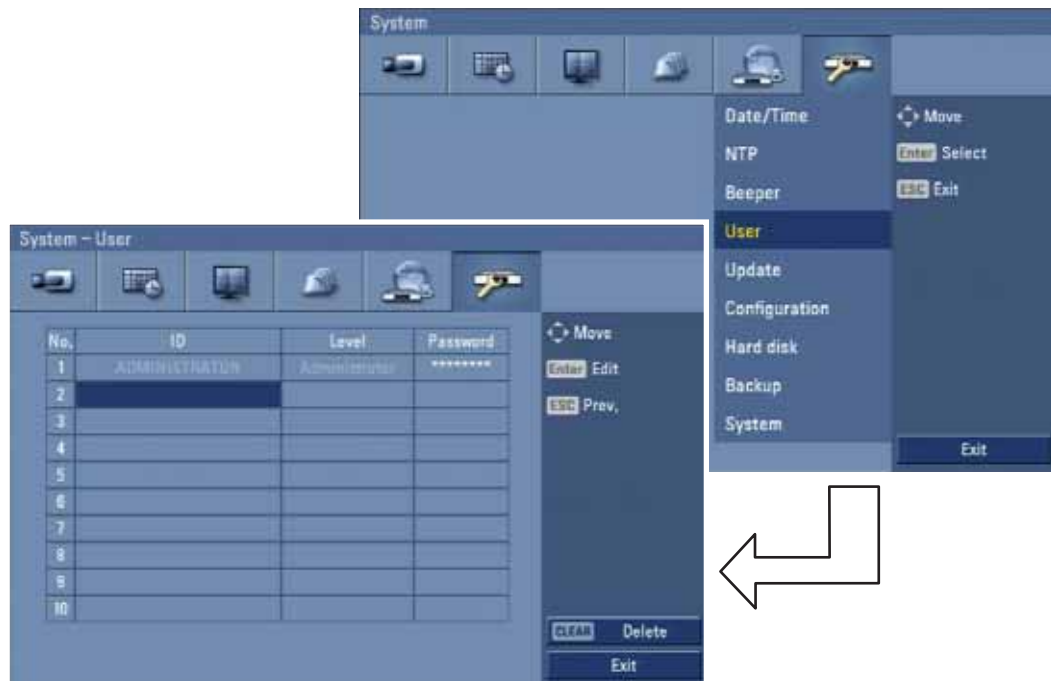

**Figure 3.48** User setup menu

- No.: Displays the user number.
- ID: Enter the new user ID using the virtual keyboard.
- Level: Select the level of the new user.
- Password: Enter or change the password for the user using the virtual keyboard. You can use the password with number, special character or characters. (minimum length 4, maximum length 8).




**Note:**

Remember the password. If you forget the password please contact an authorized service center or the dealer you purchased the system.



### 3.24.5 Update


The update feature allows you to upgrade DVR software and add/upgrade PTZ protocols. In this case, the current DVR settings are not deleted or replaced during the update process.

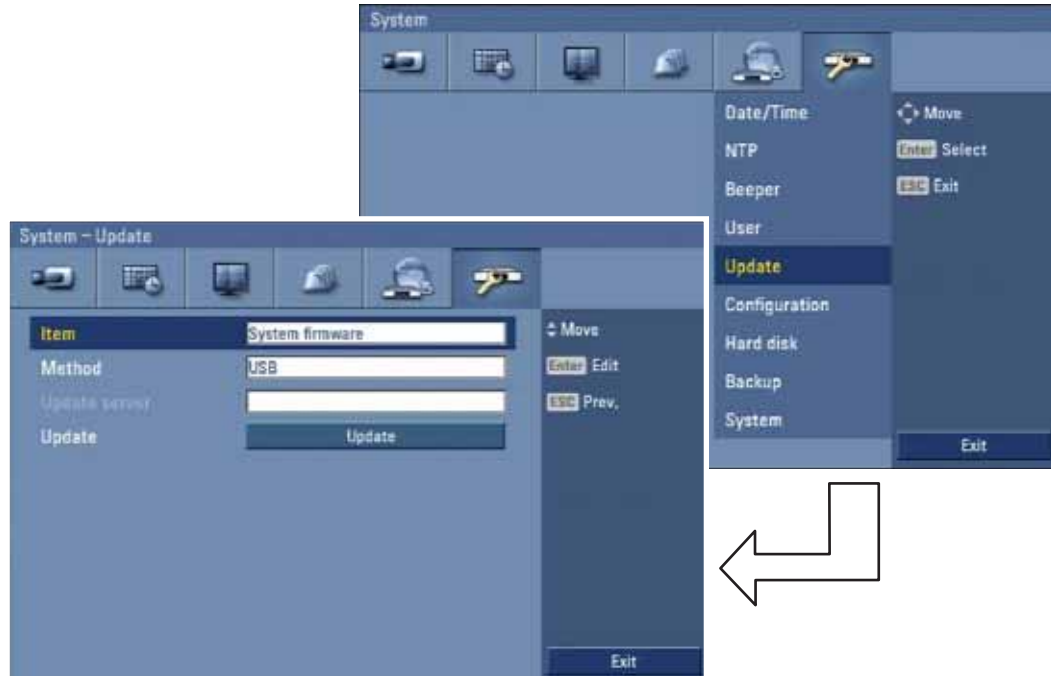

**Figure 3.49** Update setup menu

1. Select one of the following:
  - Select System firmware to upgrade DVR system software.
  - Select PTZ protocol to update the DVR protocols.
2. Choose the media from which to perform the update:
  - USB: Select USB, and then insert the USB drive into the DVR. All USB devices must be disconnected before you can use the USB drive.
  - Network: Select Network, and then do the following:
    - a. Select the update server settings box. The virtual keyboard is displayed.
    - b. Enter the update server IP address. The DVR network settings must be configured and you must know the update server's IP address.
3. Select Update to start the update process.
4. Select OK to begin the update process or click Cancel to stop and exit. After the update process is completed, the system displays the Restart the system dialog box.
5. Click OK to restart the DVR.

### 3.24.6 Configuration

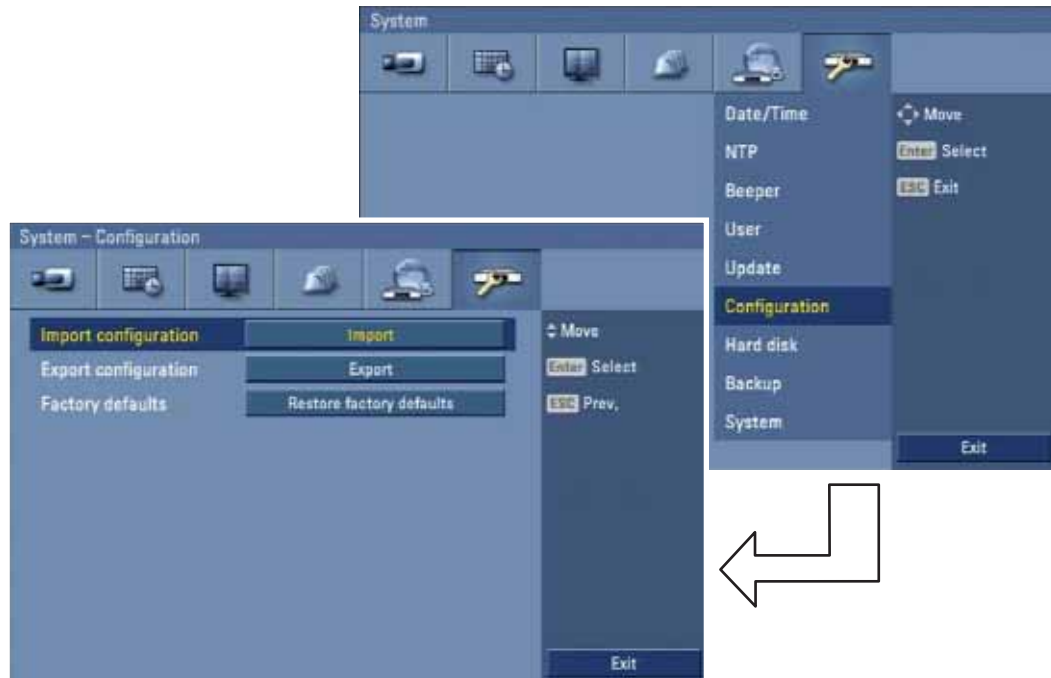

**Figure 3.50** Configuration setup menu


- Import configuration: Import the DVRs configuration data from the USB memory stick.
- Export configuration: Export the configuration data from this DVR to the USB memory stick.
- Factory defaults: You can reset the DVR to its original factory settings. Some options cannot be reset (Video format, Date, Time, Time zone, Daylight saving, Daylight saving start, Daylight saving end, User settings, Event partition settings).



**Notes:**

- Configuration data import is available when the configuration data of a DVR is the same kind as this unit's data.
- If you use a USB memory stick for configuration export, you must disconnect the other external USB devices.

### 3.24.7 Hard disk

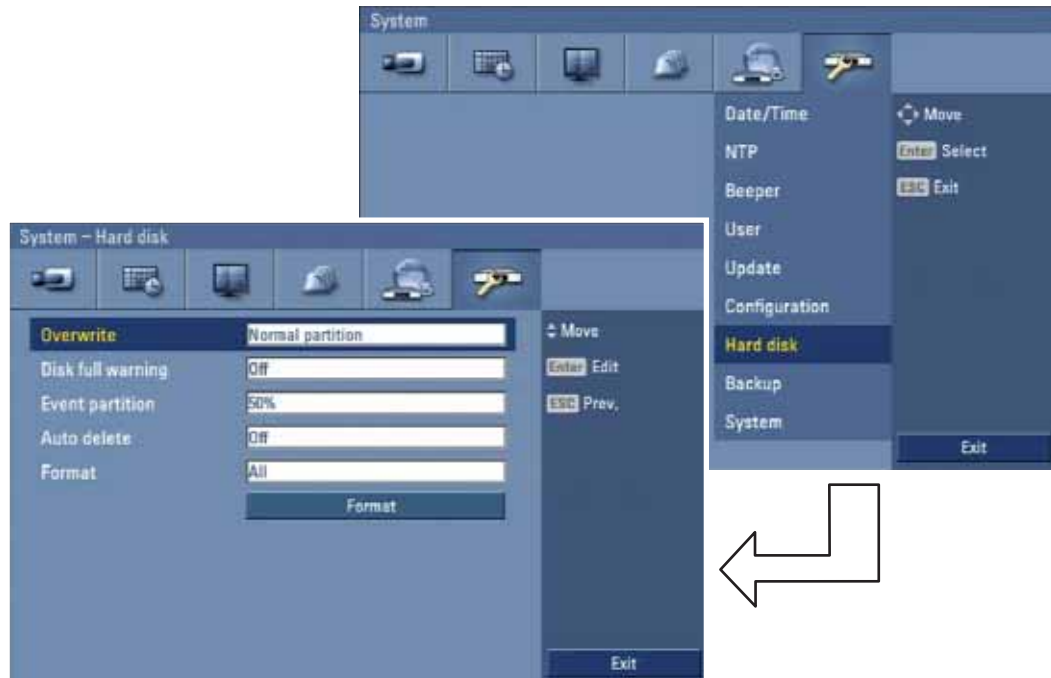

**Figure 3.51** Hard disk setup menu


- Overwrite:
  - All: Overwrite recording is possible when the normal partition and event partition of HDD have fully recorded.
  - Normal partition: Overwrite recording is possible for normal partition of HDD when the normal partition of HDD has fully recorded.
  - Event partition: Overwrite recording is possible for event partition of HDD when the event partition of HDD has fully recorded.
  - Off: Do not use overwriting.
- Disk full warning: When the HDD has overflowed a warning message is displayed.
- Event partition: Set the space of event partition for event recording.
- Auto delete: Set the auto delete date (Off, 1 day, 2 days, 5 days, 10 days, 20 days, 30 days, 40 days, 50 days or 60 days). If you set the auto delete date, the recorded data will be deleted except the data within the selected date period of time. The Auto delete function is activated every 35 minutes.
- Format: Initializes the HDD (Hard Disk Drive). All data on the selected HDD will be erased.



**Notes:**

If you change the value of event partition, the current recorded data of HDD is deleted and the partition is reset. The partitions will be formatted automatically and the system will be restarted.

### 3.24.8 Backup

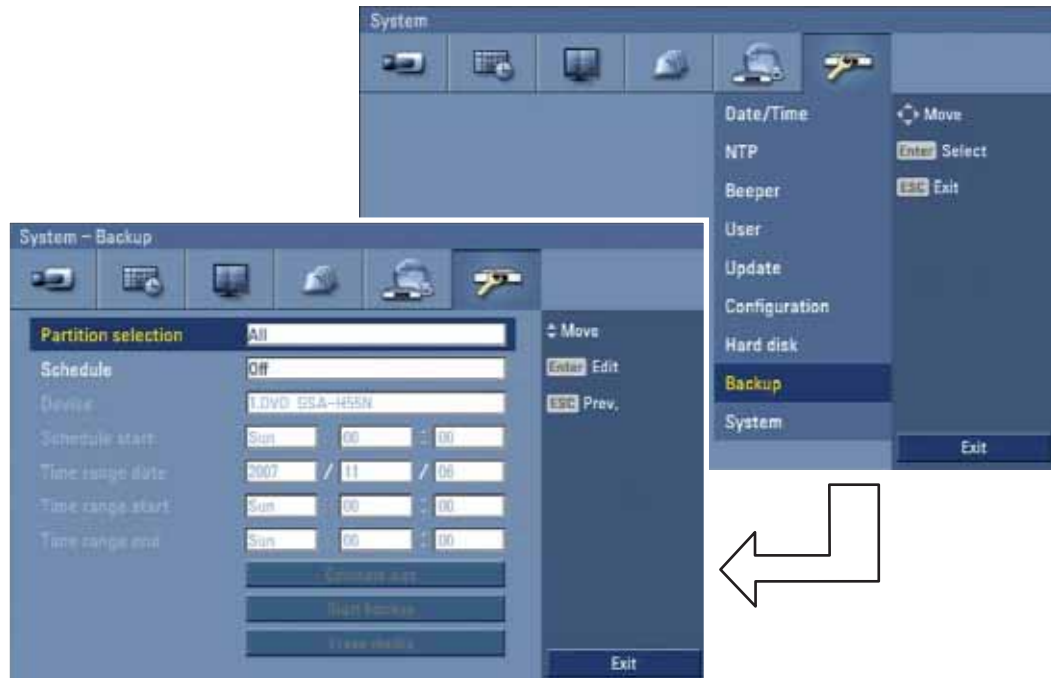

**Figure 3.52** Backup setup menu


- Partition selection: Select a backup partition.
- Schedule: You can set the backup schedule.
  - Off: All options are disabled.
  - Instant: The backup data is saved manually.
  - Weekly or daily: The backup data will be automatically saved according to the setting.
- Device: Select a backup device.
- Schedule start: Set the schedule start date (a day of the week and time).
- Time range date: Enter the backup time range. Enter the date you want to backup.
- Time range start: Enter the start day of the week or time.
- Time range end: Enter the end day of the week or time.
- Estimate size: Displays the size of backup data and the free space of external devices.
- Start backup: To start backup.
- Erase media: To erase the media.

**Notes:**

- The backup function is not supported on the external USB CD-ROM drive.
- Backup to external USB HDD is supported with maximum 250 GB.
- Use the recommended external USB devices for preventing malfunction (See “8.2.1 Supported USB memory list”).
- The CD-R, DVD-R or DVD+R discs cannot be formatted.
- An external media has to be formatted on this unit to prevent malfunction.
- DVD+RW and DVD-RW discs have to be initialized before using.
- You cannot use the [Estimate size], [Start backup] and [Erase media] options in backup progressing.
- Do not remove the USB device while the backup is in progress, it may cause a malfunction. If you reuse the removed device, you must format the media by using Erase media options.
- If you format the external media by using a PC with FAT32, the media may not be used on this unit.

**Instant Backup**


1. Connect the backup USB device or insert a recordable disk to the disc driver for backup.
2. Select the partition you want to backup.
3. Select INSTANT from the schedule options.
4. Select the backup device.
5. Select the Time range date, Time range start time, and Time range end time for backup.
6. Select the [Estimate size] icon and press ENTER.
7. Check the size of the selected data and free space. If the device does not have enough space, create space on the device or erase the previously stored data.
8. Select the [Start backup] icon and press ENTER to start backup.
9. Exit the setup menu.  
You can check the backup status on the system control bar in backup progress.

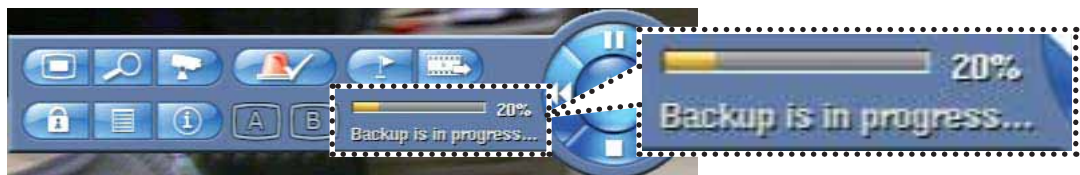**Note:**

You cannot stop the backup while in progress.

- The warning message will appear for the conditions listed below.
  - When the start time and end time are the same value.
  - When the start time is later than the end time.
  - A media does not have enough space.
  - When you set the time for data that does not exist.
- The disc burning is carried out by a single session closed format.
- If you use the CD/DVD writer device for backup, the backup status will be displayed as shown below.

- 1st. Status of making ISO image

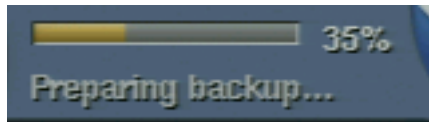

- 2nd. Status of writing



### Daily/Weekly backup

1. Connect the USB device for backup.  
You cannot use the CD or DVD writer for daily or weekly backup.
2. Select Weekly or Daily on the schedule options.
3. Select the backup device.
4. Enter the date and/or time to start backup on the schedule start option.
5. Enter the day of week and/or time on the Time Range Start option.
6. Enter the day of week and/or time on the Time Range End option.
7. Select [Estimation size] icon and press ENTER.
8. Check the size of selected data and free space of USB device. If the USB device does not have enough space, change the USB device of enough space or erase the connected USB device.




#### Note:

You cannot stop the backup while in progress.

- The warning message will appear for the conditions listed below.
  - When the start time and end time setting are wrong.
  - A media does not have enough space.
  - When you set the time for data that does not exist.
  - When the selected USB device is disconnected.
- The estimated size of backup data is only the approximate size. Be sure to allocate sufficient space on the media to accommodate the backup task.
- You can check the backup status on the system control bar.
- The scheduled backup will not start if there is an export or a search of the external USB device in progress. After the export or backup search is finished, scheduled backup will be restarted.
- When you set the schedule backup, the backup data size is estimated from the recording settings of the Setup menu. If the actual recorded data size is larger than the estimated recording data size, the schedule backup may not be activated.

### 3.24.9 System

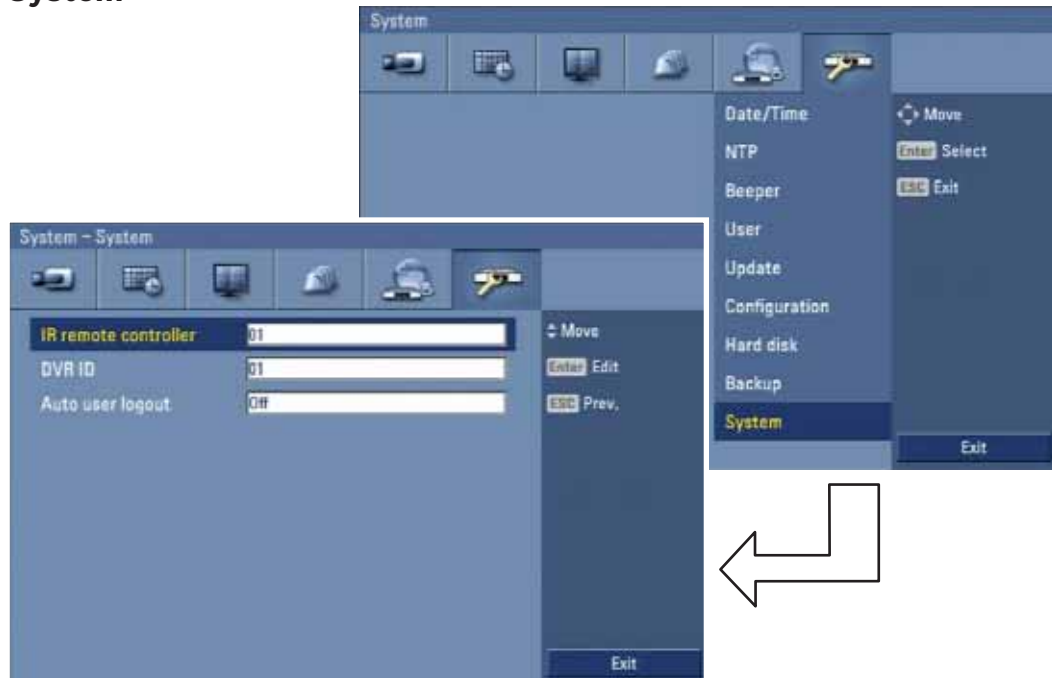

**Figure 3.53** System setup menu

- IR remote controller: Select the IR remote ID for this unit (01~09). If you use multi systems set the IR remote ID for each DVR unit.
- DVR ID: Select the DVR ID for this unit (01~16). If you use multi systems set the DVR ID for each DVR unit.
- Auto user logout: Logout is automatic at fixed intervals. You can set auto logout time to 5 min, 10 min, 30 min, 60 min or Off.





# 4 Recording

Images from a camera will be recorded on the built-in hard disk.




## Note:


External recording devices can be used as copy areas for images recorded on the hard disk. It is impossible to record images on the external recording devices directly.

## 4.1 Instant Recording


Ensure all the cameras are connected and that time and date have been set correctly.

Before you start recording, first **SETUP** the recording settings in the instant recording menu of the system setup.

1. Select the desired channel for instant recording.
2. Press the REC button on the remote control or press  button on the front panel to start record.  
The red dot is blinking on the selected channel screen of the main monitor.

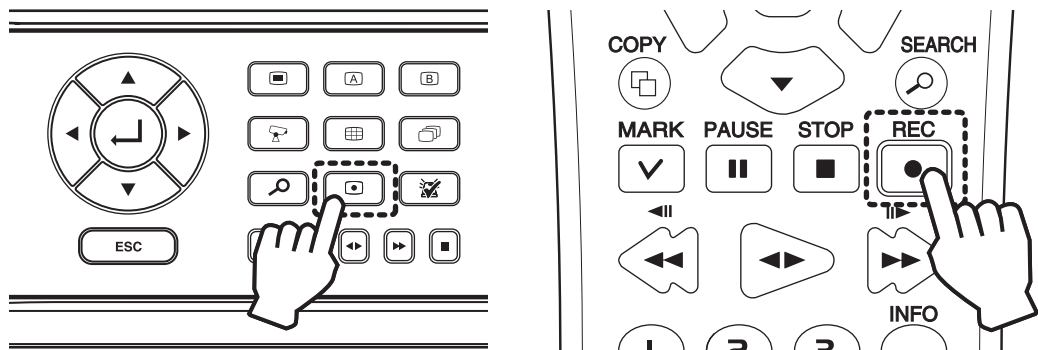

**Figure 4.1** Rec buttons

3. Press the REC button on the remote control or press  button on the front panel to stop recording. If you stop instant recording, the recording mode will be changed into the scheduled recording mode and the red dot disappears.



**Figure 4.2** Selected channel screen of the main monitor, showing the red dot.

**Notes:**

- You can not record the Instant and Continuous recording under the following conditions.
  - A HDD is not formatted.
  - The channel has no video input for display.
  - Overwrite is set to “Off” or “Event Partition”, and normal partition is full.
  - On the HDD setting, the event partition is set to 100%.
- You can not record the Input and Motion recording under the following conditions.
  - A HDD is not formatted.
  - The channel has no video input for display.
  - Overwrite is set to “Off” or “Normal Partition”, and event partition is full.
  - On the HDD setting, the event partition is set to 0%.
  - The schedule (Input/Motion) record is not set.
- HDD partition according to a recording type.
  - Normal Partition: It is the space in the HDD that stores the continuous and instant recorded data. Once the normal partition is set to 0% (the event partition is 100%), you can not record the continuous or instant recordings.
  - Event Partition: It is the space on the HDD that stores input and motion recorded data. Once the event partition is set to 0%, you can not record the alarm and motion recording.
- Priority of record.  
Instant record > Input record > Motion record > Continuous record.

# 5 Search and playback

## 5.1 Playback

It is possible to play a recorded image without stopping recording.

1. Select a channel you want to playback.
2. Press ◀▶ to play a recorded image of the previous 2 minutes of recording. The playback image will be displayed on the selected channel window.



**Figure 5.1** Playback window

3. Press ■ (STOP) to stop the playback.



**Note:**

The playback window is fixed and only in selected channel.


## 5.2 Search

The various search functions of this unit can be used to go to the beginning of the desired picture. This unit is equipped with 4 search functions.

### 5.2.1 Select source device

This item is used to set the playback or search device.

1. Press SEARCH button, the search menu is displayed.
2. Press ESC to move to the Title menu tab.

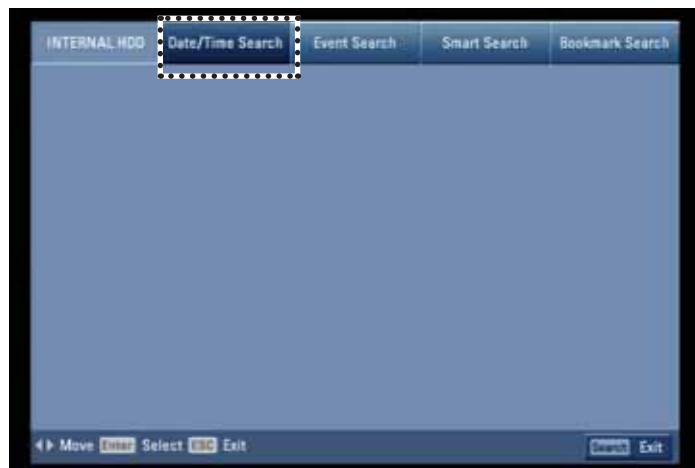

**Figure 5.2** Search menu tab

3. Use ◀/▶ to select [INTERNAL HDD] then press ENTER.



**Figure 5.3** Source device select menu

4. Use ◀/▶ to select the desired source device.
  - INTERNAL HDD: Plays back or searches recorded contents of the internal HDD device.
  - Source device: Plays back or searches backup contents of the source device.
5. Press ENTER to confirm your selection.



**Notes:**

- While the backup is in progress, you can not search the data on the backup device.
- Do not remove the external USB device while the backup search is in progress from the USB device. It may cause a malfunction.

## 5.2.2 Date/time search

Use to search recorded pictures by specifying date, hour and minute.



**Figure 5.4** Date/time search menu

1. Select the [Date/time search] menu.
2. Use ▲/▼/◀/▶ to select the year, month, date, hour or minute column, then press ENTER.
3. Use ◀/▶ to input the date or time.
4. Press ENTER to confirm it.
5. Select the [Update] icon then press ENTER.  
The search result is displayed in the time table of the search menu.
6. Use the channel buttons on the front panel to select the channel(s) you want to play back.
7. Press ◀▶ or Click the [Play (▶)] icon to start playback.  
The picture(s) is (are) displayed in the main monitor.



**Figure 5.5** Playback showing system control bar

8. Press STOP (■) to stop playback and return to the search menu.
9. Press SEARCH or ESC to exit the menu.

**Notes:**

- Recorded data shown on the time graph will be displayed in different colors depending on the recording type.
  - Green: Continuous/Instant recording.
  - Red: Input recording.
  - Blue: Motion-detection recording.
  - Gray: No recording.
- Use the ZOOM + button to view the detailed time by 6 hour intervals.

### 5.2.3 Event Search

Search a recorded picture by date and type of event.



**Figure 5.6** Event search menu

- Select the [Event Search] menu.
- Set the year, month, day and time.
  - ▲/▼/◀/▶: Moves to the previous or next column or changes the setting at the current position.
  - ENTER: Selects the column or confirms the setting.
- Select the channel for event search using ENTER.
- Use ▲/▼/◀/▶ to select the [Event type] then press ENTER.
- Select the [Search] icon then press ENTER.  
The event list menu appears.



**Figure 5.7** Event list

6. Select the recording data on the event list then press ◀▶, click [Play (▶)] or double click the selected data to start playback.  
The picture is displayed on the monitor A.
7. Press STOP (■) to stop playback and return to the event list menu.
8. Press ESC repeatedly to exit the event search menu.

## 5.2.4 Smart Search

Pictures recorded via motion detection can be searched by specifying the motion detection conditions.



**Figure 5.8** Smart search menu

1. Select the [Smart search] menu.
2. Set the channel number, start time, end time and sensitivity options.
  - ◀▶/▲/▼: Moves to the options or sets the selected option.
  - ENTER: Selects option or confirms the setting.



### Note:

The time between the start time and the end time is automatically set at 1hour.

3. Select the [Set] in the [Area] option, then press ENTER.  
The picture from the selected camera is displayed.
4. Set the motion mask setting.  
The area switches between active and inactive each time you press ENTER.  
Click the one point and drag & drop the end point, to the right, to select the motion using the mouse. Click the one point and drag & drop the end point, to the left, to unselect the motion using the mouse.  
The active areas are indicated in red.
5. Press ESC to exit the mask setting.
6. Select [Search] then press ENTER.  
The motion detect list menu is displayed.





**Figure 5.9** Motion detect list

7. Select the recording data on the motion detect list then press ◀▶, click [Play (▶)] or double click the selected data to start playback.  
The picture is displayed in the main monitor.
8. Press STOP (■) to the stop playback and return to motion detect list menu.
9. Press ESC repeatedly to exit the smart search menu.

### 5.2.5 Bookmark Search

Search the desired picture with a bookmark registered by the bookmark function.

1. Select [Bookmark Search] menu.



**Figure 5.10** Bookmark search menu

2. Select the recording data on the list then press ◀▶, click [Play (▶)] or double click the selected data to start playback.  
The picture is displayed in the main monitor.
3. Press STOP (■) to stop playback and return to the bookmark list menu.
4. Press ESC to exit the bookmark search menu.



**Notes:**

- If you want to delete the bookmark on the list, press the CLEAR button.
- Backup data can not be played back by a bookmark search.
- You can register a bookmark only in the single channel playback.
- You can not register a bookmark during instant playback

## 5.3 Functions available during playback


Button			Function
System Control Bar	Remote Control	Front panel	
	STOP 		Stop playback.
	PAUSE 		Pause playback.
			Press repeatedly to select the required scan speed. (▶▶, ▶▶▶, ▶▶▶▶, ▶▶▶▶▶ or ◀◀, ◀◀◀, ◀◀◀◀, ◀◀◀◀◀)
			Press repeatedly to play frame-by-frame in pause mode.
			Press to play reverse or normal playback.
	MARK 		Press MARK at a desired point to be marked during playback. Up to 15 points can be marked.

**Notes:**



- You can play back the backup or export data in normal speed only.
- If you use the reverse frame skip function, a frame may be skipped.
- Multi channel play works only in the date/time search function.

## 5.4 EXPORT

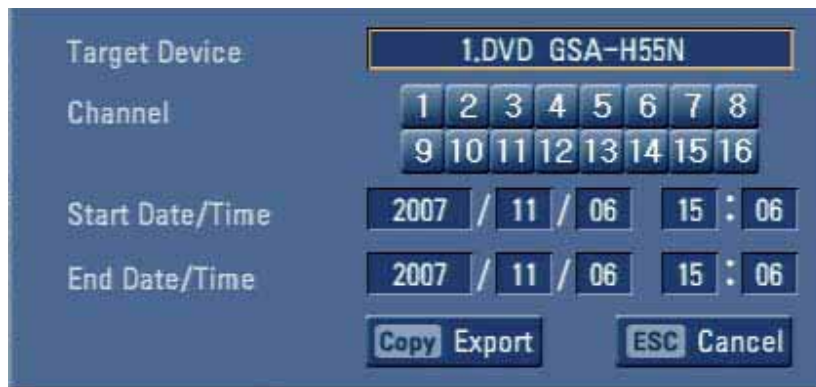This unit can manually copy recorded images and audio from built-in HDD to the external recording devices.



**Figure 5.11** Export menu window

1. Press COPY or click . The export menu window appears.
2. Select a target device to export.
3. Select the channel number(s).
4. Set the start date/time and end date/time to copy.
5. Press COPY or Click  icon to start exporting. The exported data will be authorized by the unit before saving and it can only be played back with the Archive player.



#### Notes:

- You can also use the COPY button on the front panel for export function.
  - DVR-16K/DVR-16L: Press ALT and then COPY button.
  - DVR-8K/DVR-8L: Press COPY button only.
- You can export the recorded data only in the live mode.
- If you use the external USB memory device, the external USB memory device has to be formatted on this unit.
- Check the export device before you proceed.
- Export can not be executed while the backup is in progress.
- You can view the exported data with the supplied Archive player software.
- When you export the recorded data, the audio data will also be exported.
- When you export the recorded data the Archive player program will also be exported in the [ArchivePlayer] folder of the device. The exported data file name is made automatically as the [Channel name\_export date\_export time.exp] type.
- Do not remove the USB device while the export is in progress, it may cause a malfunction. If you reuse the removed device, you must format the media by using erase media options.
- The warning message appears for the conditions listed below.
  - When the start date/time and end date/time are the same value.
  - When the start date/time is later than the end date/time.
  - The export media does not have enough space.
  - When you set the time for data that does not exist.
- An external media has to be formatted on this unit to prevent a malfunction.
- DVD+RW and DVD-RW discs have to be initialized before using.
- You can format the external media with the backup tab in the setup menu.

# 6 Control Center

Control Center is the network program of the DVR-8K/DVR-8L and DVR-16K/DVR-16L. This manual is written based on DVR-16L (16 channels).

The description pictures may differ from your OS (Operating System) type. The pictures used in this manual are based on Windows XP.

**Note:**

Do not use other applications with this Control Center program. This can cause memory shortage and Client program malfunction.

## 6.1 PC minimum Requirements

- OS (Operating System): Windows 2000 or above, DirectX 8.1 or above.
- CPU: Intel Pentium III or above, AMD Athlon with 800 MHz or above.
- RAM: 512 MB or above.
- Graphics Card: AGP VGA with 64 MB Video RAM or above.

**Recommended PC Requirements**

- OS: Windows XP
- CPU: Intel Pentium IV
- RAM: 512 MB
- Graphics Card: AGP VGA with 128 MB Video RAM

## 6.2 Control Center installation

1. Insert the Divar MR PC software CD which will be started automatically. If the disc does not run automatically on your PC, open the Divar MR PC software CD and install the program manually.
2. Run the install file and install the programs to your computer following the InstallShield Wizard displayed.
3. After installation finishes you will find the programs in the start menu of the computer.

**Note:**

The [Divar MR Alarm Notifier] and [Divar MR Archive player] programs will be installed with the Control Center installation.


## 6.3 Connecting to the DVR

### 6.3.1 Register the Site Name

You should register a site name to control DVR by the Control Center.


1. Double-Click the [Divar MR Control Center] icon to start the Control Center. The menu is displayed.
2. Select [Tools] > [Connection Information].

The connection list menu is displayed.

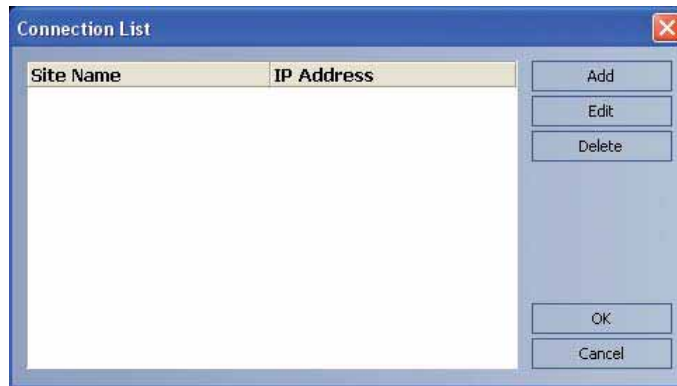


**Figure 6.1** Connection list window

3. Select [Add] and the connection setup menu is displayed.

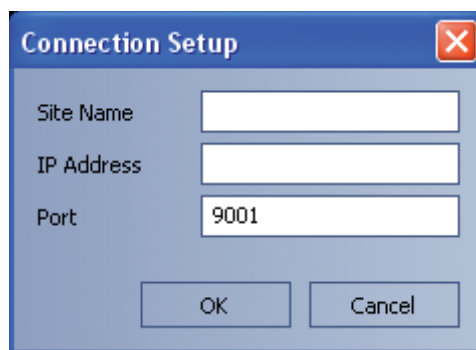

**Figure 6.2** Connection setup window

4. Enter the site name, IP address and port.
  - Site Name: Enter the description of the site.
  - IP Address: Enter the IP Address or URL of the DVR.
  - Port: Enter the Port number of the DVR. If it isn't entered, the port number is set by default.
5. Select [OK].

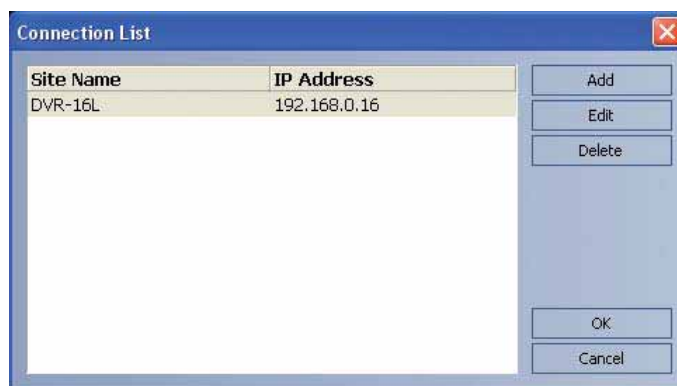

**Figure 6.3** Connection list window


6. Select [OK] to confirm the settings.  
The registered site name is displayed.

**Note:**

In the case of entering the server name instead of the IP Address, set up the DDNS configuration properly in the server.

### 6.3.2 User log on

1. Select the registered site name and right click the mouse.
2. Select [User Log on].
3. Enter the user ID and enter the password.
  - ADMINISTRATOR: Operates the unit without limitations.
  - Advanced User: Uses the live and search mode functions.
  - Normal User: Shows the live image only.

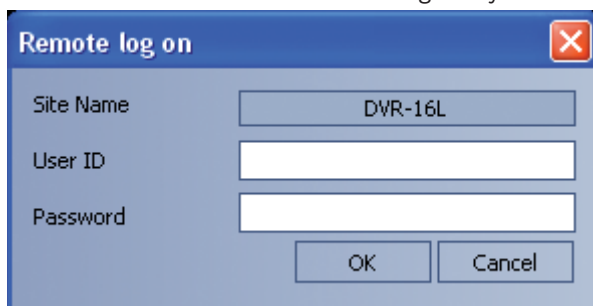


**Figure 6.4** Remote log on window

4. Select [OK] and the [Divar MR Control Center] main window is activated.
- If someone is logged on to the DVR using the Admin ID, you can not log on using the Admin ID.
  - If you want to log off, right click the mouse on the site name and select [User log off].
  - Up to 5 users can connect to the DVR system using the Control Center program as shown below.

User	User 1	User2	User3	User4	User5
Case 1	Admin	Advanced	Normal	Normal	Normal
Case 2	Advanced	Advanced	Normal	Normal	Normal
Case 3	Normal	Normal	Normal	Normal	Normal
Case 4	Admin	Normal	Normal	Normal	Normal
Case 5	Advanced	Normal	Normal	Normal	Normal

## 6.4 Main screen of DVR Control Center Program

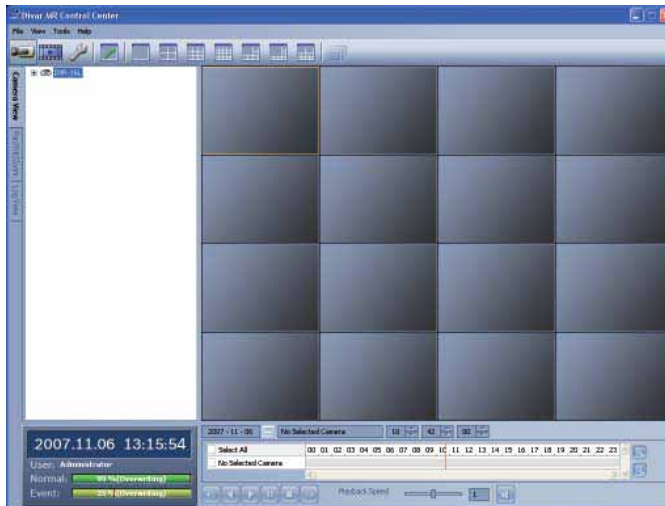

**Figure 6.5** Main screen of DVR Control Center Program

### 1. Program Menu

- File
  - Exit: Exit the program.
- View
  - OSD
    - > Channel Number: Displays or removes the channel number in the channel window.
    - > Site Name: Displays or removes the site name in the channel window.
    - > Camera Name: Displays or removes the camera name in the channel window.
    - > Playback Time: Displays or removes the date/time of playback data in the channel window.
    - > Select All: Displays all OSD options in the channel window.
  - Sequence (Dwell Time): Select the sequence to 5 seconds, 10 seconds, 15 seconds or 20 seconds.
  - Video Size: Select the video size from 100%, 150% or 200%.
  - Language: Select the language for Control Center program.
- Tools
  - Connection Information: To register a site name.
- Help
  - Control Center Information: Displays Control Center Version Information.

### 2. Mode Selection Icons



- **Live Mode**
  - Camera View: You can see the surveillance camera's images in the window(s) and the camera information.
  - Pan/Tilt/Zoom: You can control the PTZ cameras.
  - Log View: Displays system log list.



- **Search Mode**

You can search the recorded data as shown below.

- Date/Time Search (See "6.6.1 Using the Date/Time Search function")
- Event Search (See " 6.6.2 Using the Event Search function")
- Bookmark Search (See "6.6.3 Using the Bookmark Search function")
- Smart Search (See " 6.6.4 Using the Smart Search function")



- **Remote Setup Mode**

You can set the configuration of the unit.

- Camera / Display (See "6.7.1 Camera/Display setup")
- Schedule (See "6.7.2 Schedule setup")
- Event (See "6.7.3 Event setup")
- Network (See "6.7.4 Network setup")
- System (See "6.7.5 System setup")

### 3. Screen Mode Selection Icons



When the icon is clicked, the screen will be changed to multiscreen view. If the icon is clicked again, the screen will be changed by sequence.



You can view the live window(s) in full screen view. To return to the normal screen, right click the mouse.

### 4. Sequence Icon



View all the channels in sequence. You cannot use sequence mode with the 16 multiscreen view.

### 5. Information Display Window

Displays current date and time, user information, and the remaining HDD status of the selected site name.



**Figure 6.6** Information Display Window

## 6.5 Live Mode

### 6.5.1 Using the Camera View

1. Select the [Camera View] tab in the live mode.
2. Select the registered site name and double click the left mouse button or click the plus mark of the registered site name.
3. Select [Cameras] and double click the left mouse button or click the plus mark.



**Figure 6.7** Divar MR Control Center Window

4. Select the channel number you want to view.
5. Click the channel number and drag and drop to live window position. If you select [Cameras] and drag and drop to a live window then all channels are displayed.
6. Live image is displayed in the selected window.



**Figure 6.8** Camera View window

7. Repeat steps 3-5 to set the other live windows.




**Note:**

Configuration of camera view is set the first time only. This configuration setup is memorized for the next time and displayed as it is.



## 6.5.2 Using the live window

### Playback of Recorded Data

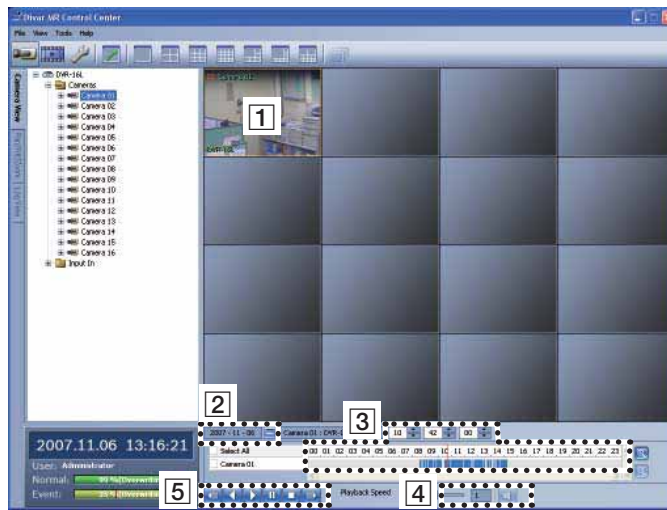

**Figure 6.9** Camera View window

1. Select the camera's display window.
2. Select the date.  
The day is displayed in a blue text when recorded data exists.
3. Select playback start time.  
When using timeline to search a start time, use the zoom in/out icons for more detailed searches (4 step).
4. Select playback speed and mute speaker icon.
5. Start playback using these control buttons.



#### Notes:

- If you don't want to play with sound click the speaker icon to mute.
- You can not use the playback function when you log in with the Normal User ID.













## 6.5.3 Using the Pan/Tilt/Zoom function

You can control the PTZ cameras via the network.



**Figure 6.10** The Pan/Tilt/Zoom window

1. Select the PTZ camera channel window in the camera view mode.
2. Select Pan/Tilt/Zoom tab.
3. Use virtual remote control buttons to control the PTZ camera.

Button	Function
	Use to Pan/Tilt the camera.
	To confirm the preset position and set a menu option in the PTZ camera.
 (ZOOM)	To adjust the camera zoom.
 (FOCUS)	To manually adjust the focus of a camera.
 (IRIS)	To manually adjust the iris of a camera.
	Displays selected preset numbers
	To input the preset number.
	To register preset positions.
	To move the camera to the preset position.
	To delete a memorized preset position.
	To start a preset tour.
	To displays the setup menu of the PTZ camera.


**Table 6.1** Virtual remote control button table



**Notes:**

- If someone is controlling a PTZ camera using the DVR, you cannot use the PTZ function and vice versa.
- You can not use the PTZ function when you log in with a normal user ID.

**To Register preset positions**

1. Move the camera to the point you wish by using the ▲/▼/◀/▶.
2. Click the [SET] icon.
3. Select preset the number you wish to register.
4. Click the  icon.  
The position and its numbers are memorized.
5. Repeat steps 1-4 to add additional positions.

**Note:**

The preset range is available from 0 to 255 on this unit. However the actual preset range differs depending on the PTZ cameras.


**Changing to a picture in a preset position**

The following function is available only with cameras equipped with the preset function.

The preset function makes the PTZ camera move to the programmed preset position.

It is necessary to program preset positions for the PTZ camera beforehand.

1. Click the [MOVE] icon.


2. Use number icons to enter the memorized preset position's index number, Click the  icon.

The camera moves to the preset position and the picture from the camera in that position appears on the monitor.

**To clear the preset position**

You can delete a memorized preset position.

1. Click the [CLEAR] icon.

2. Use number icons to enter the memorized preset index number, Click the  icon.

The preset position will be deleted.


**To tour the preset positions**

You can tour all preset positions.

1. Click the [TOUR] icon.  
All registered preset positions in the camera will be selected and the camera position image will be switched on to the active window.
2. You can stop the tour by clicking the [TOUR] icon.

**Setup for PTZ camera**

You can change the setting of PTZ camera using each item in the menu.

1. Click the [SETUP] icon.  
SETUP MENU appears in the windows.
2. Use the arrow and  icons to set the options.


**Note:**

Refer to the manuals of the PTZ camera for more details.

## 6.5.4 Using the Log View function


You can see the system log list of selected site names in the remote setup tab via the network.

1. Select the log view tab.  
Log search menu appears.

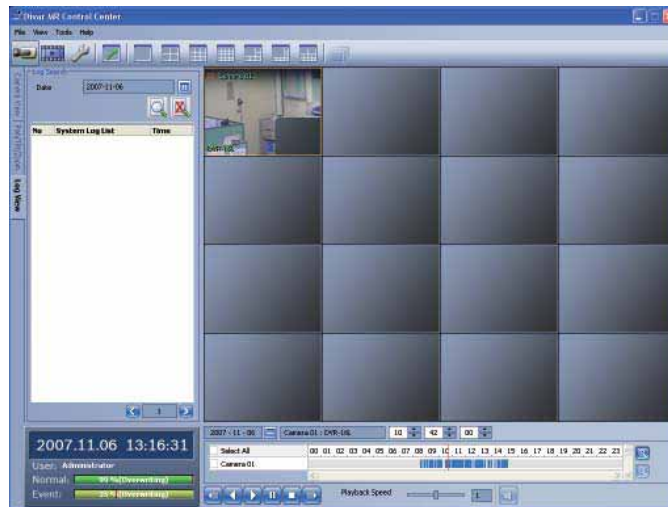


**Figure 6.11** The log search menu window

2. Click the date icon and select the day for the log search.  
(The selectable days are displayed in blue text color.)

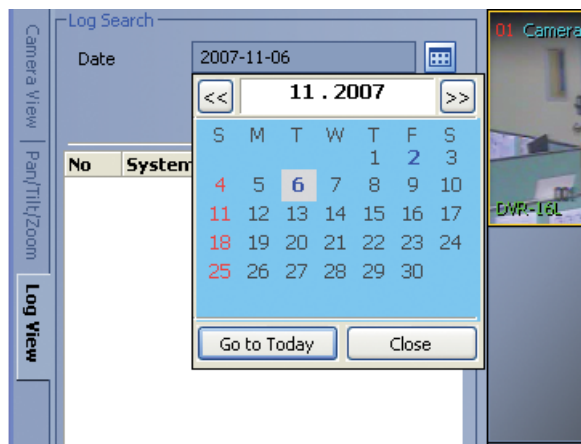

**Figure 6.12** The day select window

3. Click the search icon.  
The system log is displayed in the list.

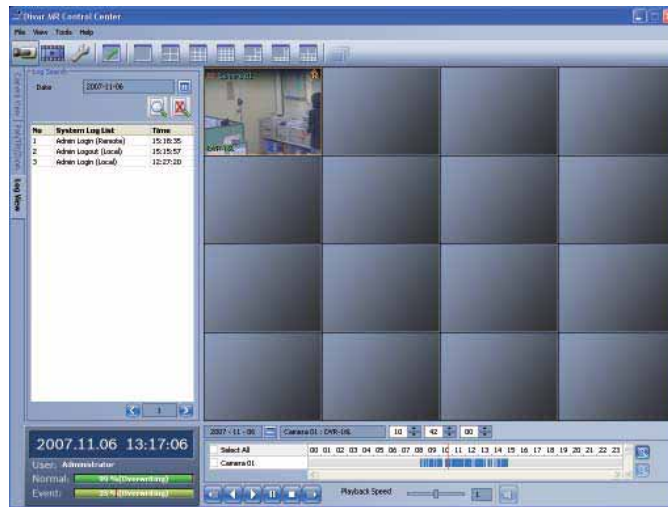


**Figure 6.13** The system log list window

## 6.6 Search mode

You can search the data of a selected site name in the remote setup tab via the network.


### 6.6.1 Using the Date/Time Search function

Use to search a recorded picture by specifying date, hour and minute.

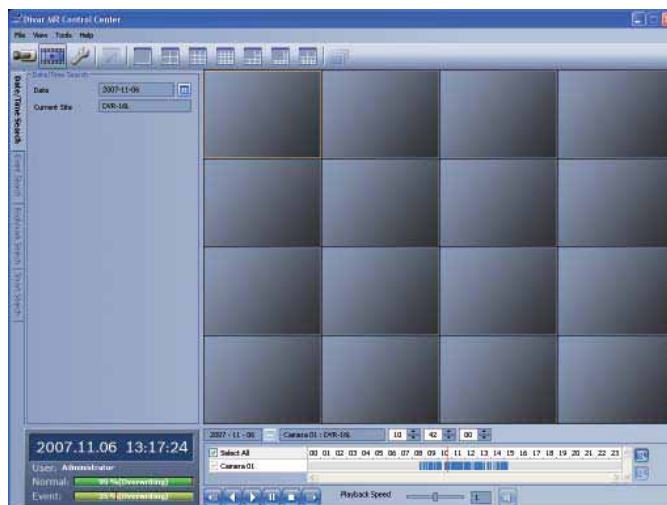


**Figure 6.14** The Date/Time search window

1. Select the date/time search tab.
2. Click the date icon and select the day (the selectable days are displayed in blue color).
3. Select the channel window you want to view.

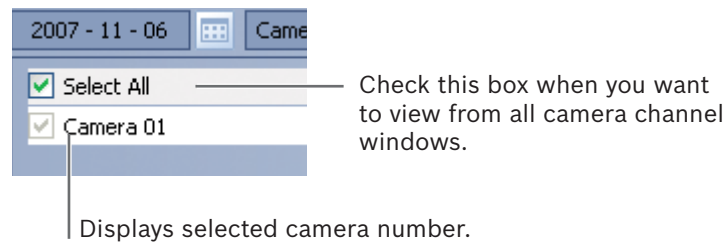

**Figure 6.15** Camera channel select window

4. Use the timeline and time input column to search recorded data.

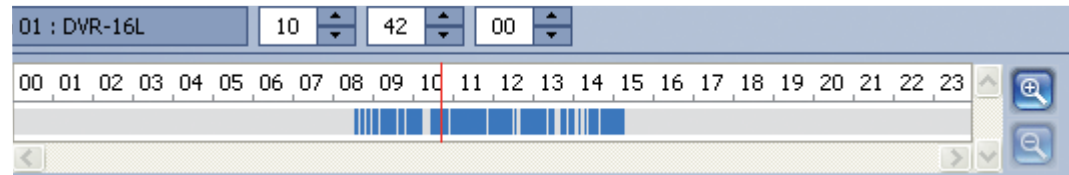

**Figure 6.16** Recorded data search window


5. Playback the searched data using the playback control buttons.



**Figure 6.17** The playback control buttons

## 6.6.2 Using the Event search function

Search a recorded picture by date and event type.

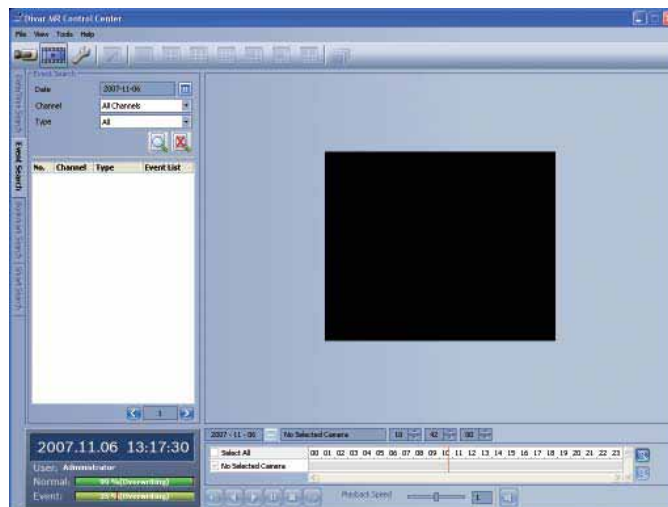

**Figure 6.18** The Event search window


1. Select the event search tab.
2. Click the date icon and select the day.  
(The selectable days are displayed in blue color.)
3. Select the camera channel for event search.
4. Select the event type.
5. Click the search icon.

The event list is displayed.

6. Select the event from the event list.
7. You can play the searched data using the playback control buttons.

### 6.6.3 Using the Bookmark search function

Search the desired picture with a registered bookmark using the bookmark function.

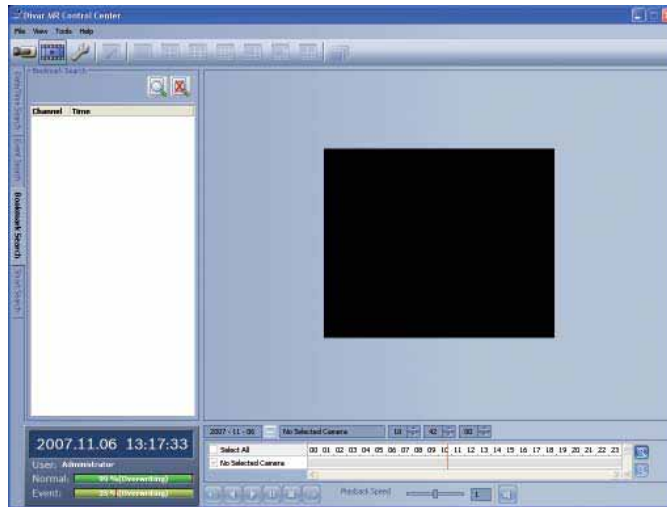


**Figure 6.19** The Bookmark search window

1. Select the bookmark search tab.
2. Click the search icon.  
All bookmark data is displayed in the list.
3. Select the data in the list.
4. Play the searched data using the playback control buttons.

### 6.6.4 Using the Smart search function

Picture recorded via motion detection can be searched by specifying the motion detection conditions.

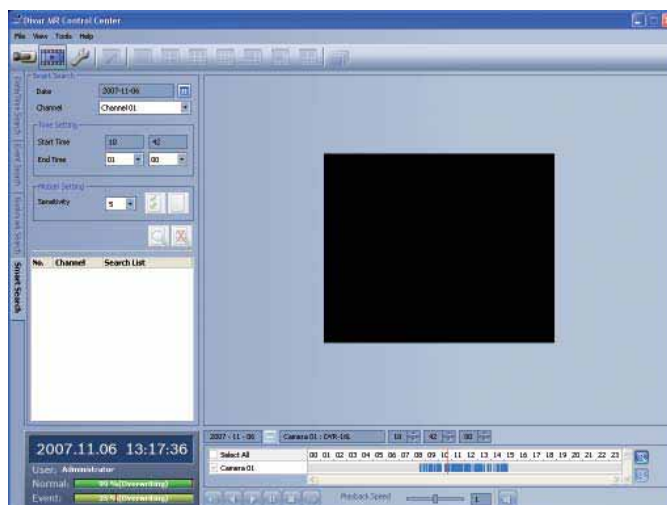

**Figure 6.20** The Smart search window




1. Select the Smart Search tab.
2. Click the date icon and select the day.  
(The selectable days are displayed in blue color.)
3. Select the camera channel.
4. Select the start time using the timeline.



**Figure 6.21** Selected start time

5. Select the end time.
6. Select the motion sensitivity level and motion area on the display window using the mouse.

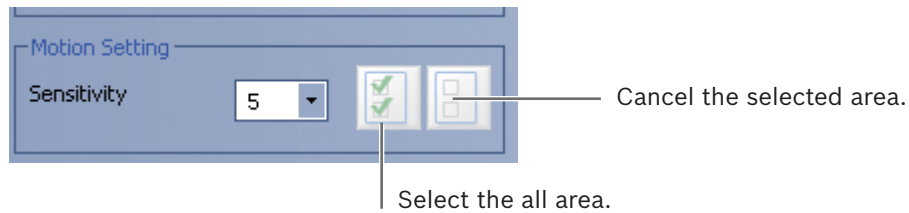

**Figure 6.22** The sensitivity level setting window



**Figure 6.23** Selected motion area

7. Click the search icon.  
The smart search data is displayed.






**Figure 6.24** The searched data list

8. Select the channel from the list.
9. You can play the searched data using the playback control buttons.

## 6.7 Remote Setup mode

You can set the DVR of a selected site name in the remote setup tab via the network.

### 6.7.1 Camera / Display setup

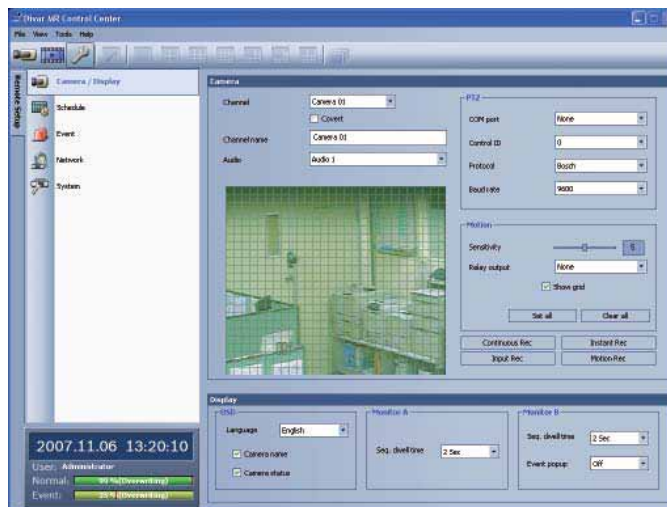

**Figure 6.25** The Camera/Display setup window

## Camera Setting



**Figure 6.26** The Camera setting window

1. Select a channel for settings.  
If you want to block a channel from other users, mark up the convert option.
2. Enter the new channel name.
3. Select input audio channel.
4. Set the PTZ control options.
  - COM port: Select the connected data port of the RS-422/485 terminal on the rear panel.
  - Control ID: Select the PTZ camera ID from 0 to 255. Make the same settings as the PTZ camera.
  - Protocol: Select the protocol supported by PTZ camera.
  - Baud rate: Select the communication speed (1200, 2400, 4800, 9600, 19200 or 38400).
5. Set the motion options.
  - Sensitivity: Set the sensitivity level for the created motion detection area. Sensitivity can be set from 0 to 10.
  - Relay output: Select the number of the ALARM I/O port for the output alarm signal when motion is detected.
  - Area: Select the desired motion detection area on the preview window screen using the mouse. Click the one point and drag & drop the end point to select the motion area.




### Notes:

- If you want to display the grid, mark up the [Show grid] option.
- If you want to select the entire area, click the [Set all] button or click the [Clear all] button to cancel the selected area.

### Continuous recording settings

1. Click the [Continuous Rec] button.  
The continuous recording setting window appears.

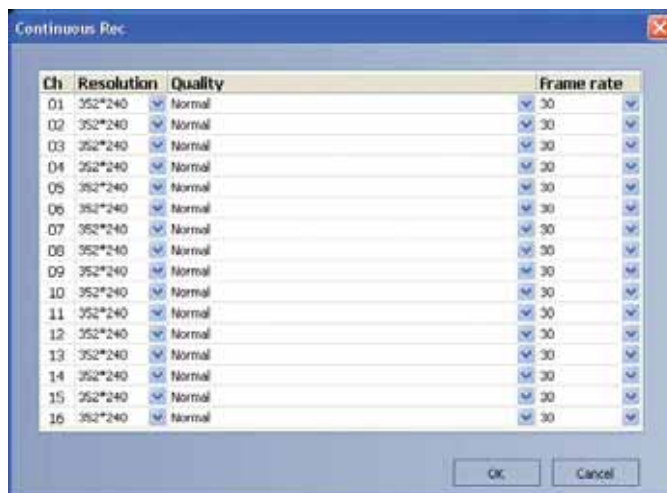


**Figure 6.27** The Continuous recording setting window

2. Set each option using the mouse (see "3.19.4 Continuous recording").
3. Click the [OK] button to confirm the settings.

### Instant recording settings

1. Click the [Instant Rec] button.  
The instant recording setting window appears.

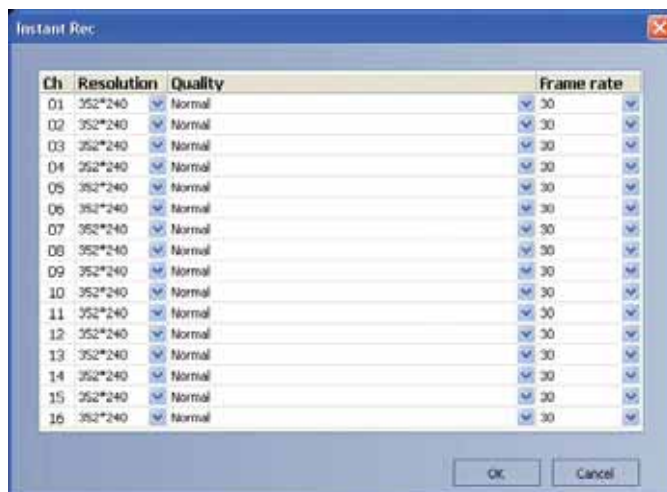


**Figure 6.28** The Instant recording setting window

2. Set each option using the mouse (see "3.19.5 Instant recording").
3. Click the [OK] button to confirm the settings.

### Input recording settings

1. Click the [Input Rec] button.  
The instant recording setting window appears.

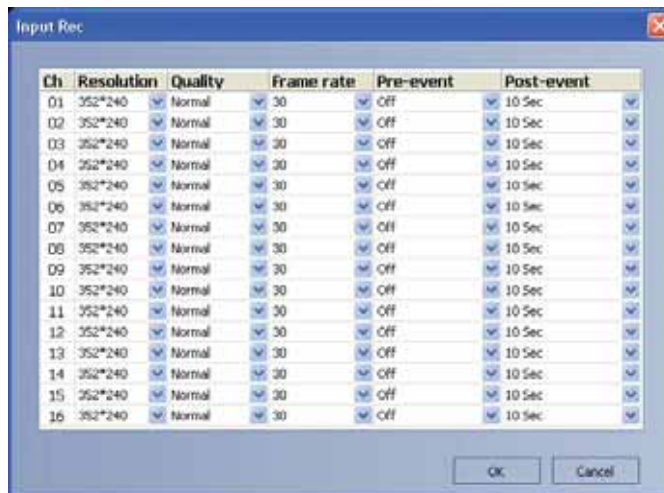


**Figure 6.29** The Input recording setting window

2. Set each option using the mouse (see "3.19.6 Input recording").
3. Click the [OK] button to confirm the settings.

### Motion recording settings


1. Click the [Motion Rec] button.  
The instant recording setting window appears.

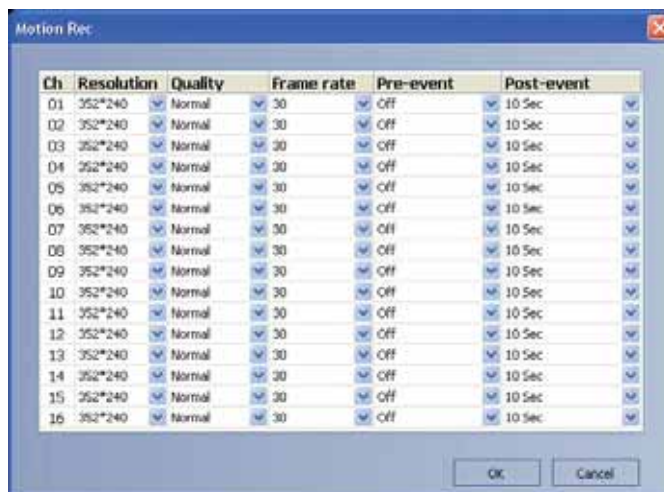

**Figure 6.30** The Motion recording setting window

2. Set each option using the mouse (see "3.19.7 Motion recording").
3. Click the [OK] button to confirm the settings.

## Display settings

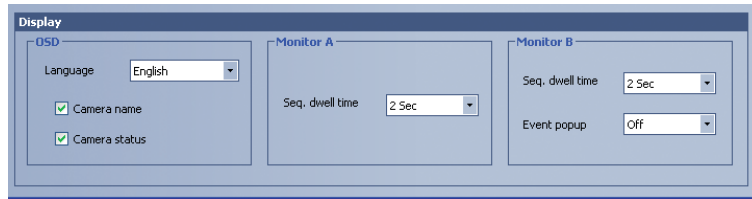

**Figure 6.31** The Display setting window

1. Set the OSD options.
2. Set the monitor A option.
3. Set the monitor B options.

## 6.7.2

## Schedule setup



**Figure 6.32** The Schedule setup window


1. Select a day of the week.
2. Mark up the desired recording option.
  - No record: Do not schedule recording.
  - Continuous: Recording starts automatically at the preset time.
  - Input: Recording starts automatically when an input is activated within a designated time.
  - Motion: Recording starts automatically when motion is detected within a designated time.
  - Input+Motion: Recording starts automatically when input and motion detection occur within a designated time.
3. Select the channel to set the schedule.
4. Click the start time cell block and drag & drop to select a time period cell block.

**or**

Click the start time cell block of a channel and drag & drop across the channels to select the time period block for multi-channel setting at the same time.

The color of the cell blocks will change.


## Schedule Copy settings

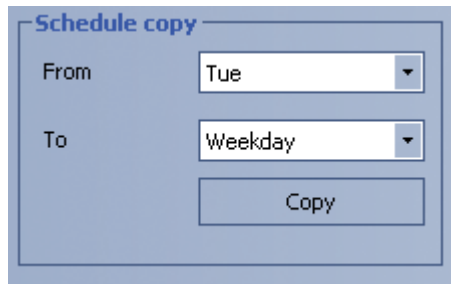

**Figure 6.33** The Schedule copy setting window

1. Select the source day to copy.
2. Select the destination day from the day of the week, weekday or weekend options.
3. Click the copy button to copy the schedule data.

## Exception day settings

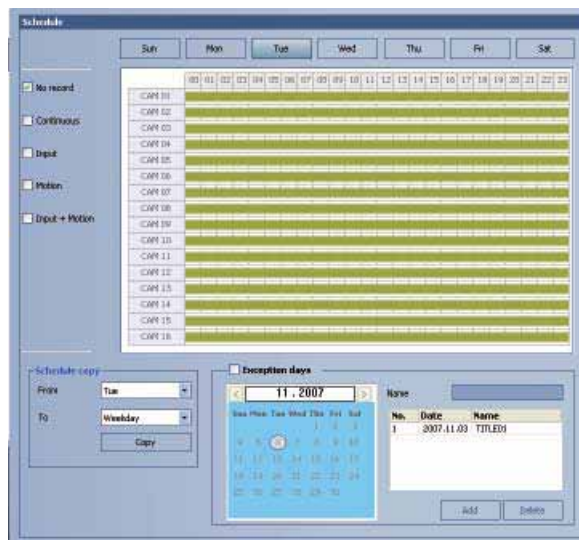

**Figure 6.34** The Exception day setting window

1. Mark up the exception day option.
2. Select the date to set the exception day schedule.
3. Mark up the desired recording option.
4. Select the channel to set the schedule.
5. Click the start time cell block and drag & drop to select a time period cell block.


**or**

Click the start time cell block of a channel and drag & drop across the channels to select the time period block for multi channel setting at the same time.

The color of the cell block will change.

6. Enter the name of the exception day.
7. Click the add button to add the special day settings.  
The exception day is added to the list.  
If you want to cancel the registered exception day, select the exception day in the list and click the delete button.


### 6.7.3 Event setup

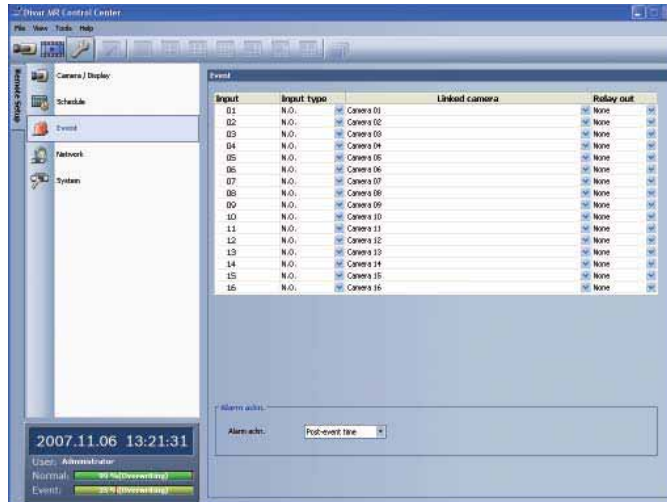

**Figure 6.35** The Event setup window

- Set the event options.
  - Input: Displays the number of the ALARM I/O port.
  - Input type: The alarm state can be set to either N.O. (Normally Open) or N.C. (Normally Closed).
  - Linked camera: Select the connected camera channel with the ALARM I/O port.
  - Relay out: Select the alarm output number of the RELAY-OUT terminal for the output alarm signal.
- Setting [Alarm ackn.] options.
  - Alarm ackn.: Set the “Manual” or “Post-event time” option to off.

### 6.7.4 Network setup

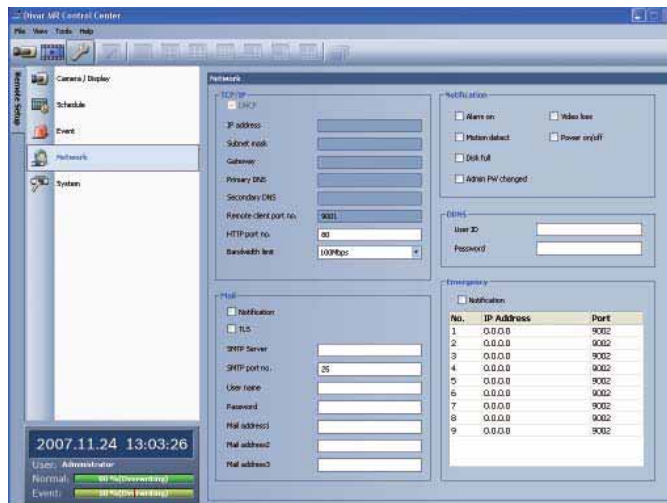

**Figure 6.36** The Network setup window

#### TCP/IP settings

The [DHCP], [IP address], [Subnet mask], [Gateway], [Primary DNS], [Secondary DNS] and [Remote client port no.] option settings are not available in the client program. You can set these options in the system menu of the DVR.



- HTTP port no.: Enter the HTTP port number.
- Bandwidth limit: Enter the bandwidth to adjust the data traffic.

### Mail settings

Set the mail options.

- Notification: When you mark up the notification option, notify the user about unit operating information by e-mail according to your notification settings.
- TLS: Mark up when using the TLS (Transport Layer Security) function.
- SMTP server: Enter the SMTP server address.
- SMTP port no.: Enter the SMTP port number. Typically the TCP port used for SMTP is 25. However, in some cases it is better to change this port number for added flexibility or security. If desired, change the port number (1 ~ 65535).
- User name: Enter the user name.
- Password: Enter the password.
- Mail address (1~3): Enter the mail address. You can input up to 3 e-mail addresses.

**Note:**

The [SMTP server], [SMTP port no.], [User name] or [Password] settings are optional. The DVR can send e-mail directly without the use of an SMTP server or an MTA (message transfer agent). In certain cases all e-mail should be forwarded to a specific SMTP server. Specify the server host name or IP address in such cases. For more detail on SMTP setup, ask your network administrator and/or mail service provider.

### Notification

Set the notification options.

- Alarm on: Sends an e-mail when an input has been activated.
- Video loss: Sends an e-mail when a video signal from the camera has stopped because of a cable disconnection or malfunction of a camera.
- Motion detect: Sends an e-mail when motion detection has occurred.
- Power on/off: Sends an e-mail when power is on or off.
- Disk full: Sends an e-mail when the HDD has fully recorded.
- Admin PW changed: Sends an e-mail when the administrator password has changed.

### DDNS

- User ID: Enter the DDNS registered user name.
- Password: Enter the user password in [User ID].

**Note:**

The DDNS function is serviced using a TCP 8245 port by “No-IP” (<http://www.no-ip.com/>).


In case the DVR is used in the network system with a firewall, open the TCP 8245 port so that DDNS data can get into firewall. For more detail on firewall setup, ask your network administrator and/or network service provider.



## Emergency

- Notification: Notify the Alarm Notifier about unit operating information according to your notification settings.
- IP Address, Port: Enter the IP Address and port number of the Alarm Notifier program installed on the PC. The factory default port for this function is 9002. However, in some cases it is better to change this port number for added flexibility or security. If desired, change the port number (1025 ~ 65535). You can set up to 9 IP address and port numbers.

## 6.7.5 System setup

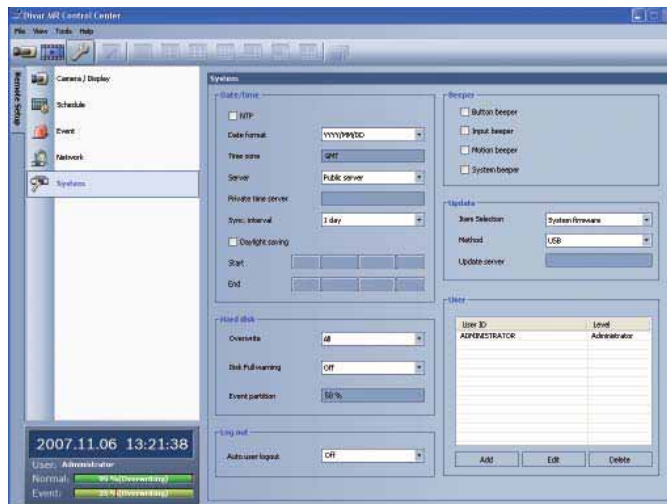

**Figure 6.37** The System setup window

### Date/Time settings

Set the date/time options.

- NTP: Mark up when using the NTP (Network Time Protocol) server for time adjustment.
- Date format: Select the date display format.
- Time zone: This option setting is not available in the Control Center program.
- Server: Select your time server.  
The DVR will obtain the average time among 5 public servers (time.nist.gov, time-a.nist.gov, time-b.nist.gov, ntp.nasa.gov, clock.isc.org).
- Private time server: Enter the private time server's IP address or host name.
- Sync. interval: You can set synchronized interval with the NTP time server to 1 day, 1 hour, 1 week and 1 month.
- Daylight saving: Mark up when you use the daylight saving function.
  - Start: Select the Daylight Saving start time.
  - End: Select the Daylight Saving end time.

### Hard Disk

- Overwrite: Select the overwrite recording type (Off, Normal partition, Event partition or All). This function is possible when the selected HDD type has fully recorded.
- Disk full warning: When the HDD has overflowed the warning message is displayed.
- Event partition: Sets the space of event partitions for event recording.

## Log Out

- Auto user logout: Setting the logout time. You can set the auto logout time to 5 minutes, 10 minutes, 30 minutes or 60 minutes.

## Sound settings

Select the beeper options.

- Button beeper: Makes a sound when using the buttons.
- Input beeper: Makes a sound when an input occurs.
- Motion beeper: Makes a sound when motion is detected.
- System beeper: Makes a sound when a cooling fan is not activated or the HDD has bad sector.

## Update settings

Set the update options.

- Item Selection: Select the items for updating.
  - PTZ Protocol: Set to PTZ Protocol update.
  - System firmware: Set to System software update.
- Method: Select the update method.
  - USB: Update from USB memory stick.
  - Network: Update from the update server.
- Update server: Enter the IP address of the update server.



### Note:

If you can not update from the update server, check the TCP/IP options and the IP address of the update server.

## User settings

### Add User

You can add user.

1. Click the “Add” button. User Setting window is displayed.
2. Enter the User ID and Password.
3. Enter the password again to verify.
4. Select the user level and then click “OK” to confirm your selection.

### Edit the registered User

You can change the User ID, password or user level.

1. Choose the user ID and then click the “Edit” button.
2. Change the ID, Password or User level, then click “OK” to confirm your selection.

### Delete registered User

1. Choose the user ID you want to delete
2. Click the “Delete” button.

# 7 Additional programs

## 7.1 Alarm Notifier program


If you set the notification in the emergency option to On, the system sends a message according to the settings of the notification options in the setup menu. (See “3.23.3 Notification”).

1. Double-click the [Divar MR Alarm Notifier] icon to start the emergency agent program. The Alarm Notifier icon is displayed in the system tray on the bottom right of the screen.



**Figure 7.1** The Alarm Notifier icon in the system tray

2. Whenever a notification function occurs, a message box is displayed on the bottom right of the screen. The message box is displayed for 5 seconds.

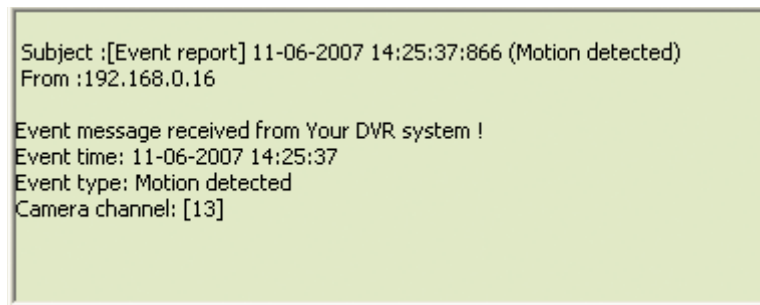


**Figure 7.2** The message box window


3. Check the message.
4. Click the message box within 5 seconds to display the [Divar MR Alarm Notifier-Received Messages] window.

**or**

Right click the mouse on the program icon in the system tray and select the [Check Message Box] option to display the [Divar MR Alarm Notifier-Received Messages] window.

5. You can check all the subjects of received messages.
6. Click the  button to close the [Divar MR Alarm Notifier-Received Messages] window.


## 7.2 Main Screen of Alarm Notifier program

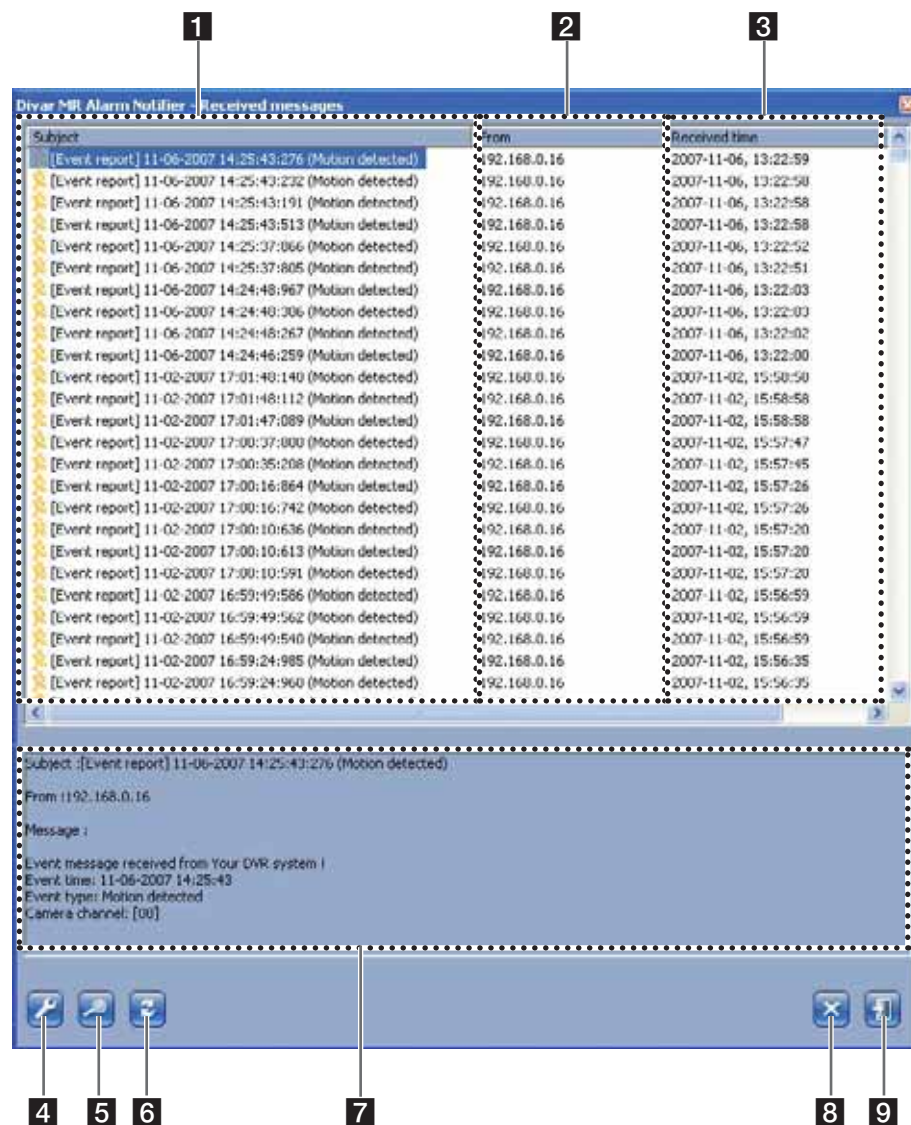


**Figure 7.3** Main Screen of Emergency Agent

- 1** Displays message type.
- 2** Displays IP Address.
- 3** Displays received date and time.
- 4** Displays the port settings window.
- 5** Displays the search window.
- 6** Refreshes the received message on the list.
- 7** Detailed view of the received message.
- 8** Deletes the selected message from the list.
- 9** Closes the [Divar MR Alarm Notifier-Received Messages] window.


## 7.2.1 Port setting

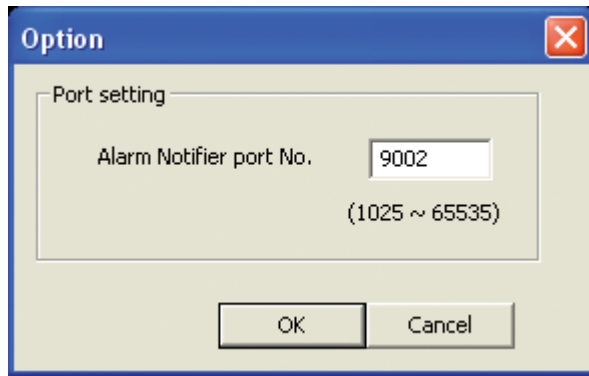


**Figure 7.4** Port setting window

1. Click the  button.  
The option window is displayed.
2. Enter the port number of the emergency agent listening port. The factory default port is 9002. However in some cases it is better to change this port number for added flexibility or security. If desired change the port number (1025 ~ 65535).
3. Click the OK button to exit.


## 7.2.3 Message search

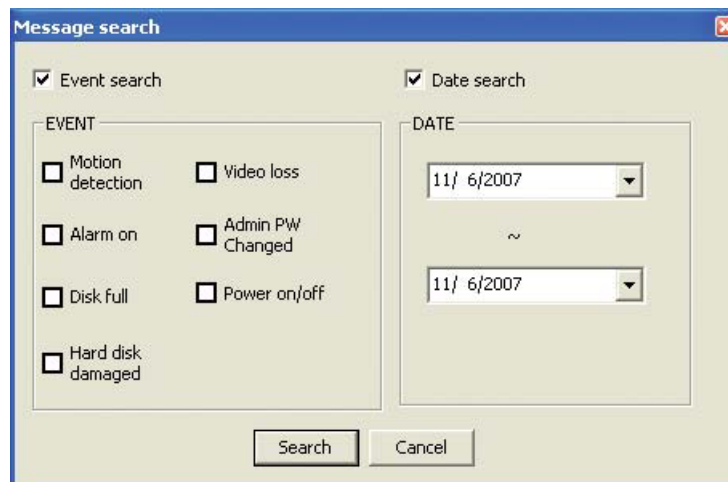


**Figure 7.5** Message search window

1. Click the  button.  
The message search window is displayed.
2. Select the search method.
  - Event search: Search by selected type of event for the message.
  - Date search: Search by selected date.
3. Click the Search button.  
The search message is displayed on the [Divar MR Alarm Notifier-Received Messages] window.

### 7.2.4 Delete the message from the list

1. Select the message(s) you want to delete.
2. Click the  button.  
The confirmation window is displayed.

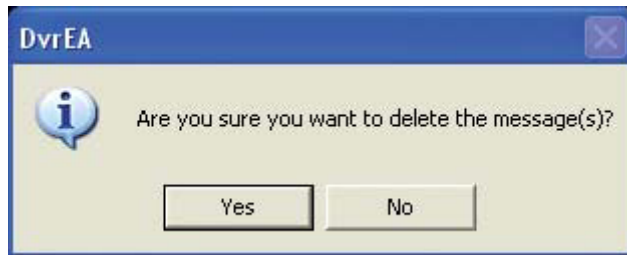


**Figure 7.6** The confirmation window

3. Click [Yes] to delete the message.

## 7.3 Archive Player program




You can playback from the archived data on the PC using this program. The Archive Player program is saved automatically when you install the Control center program or archive the data.
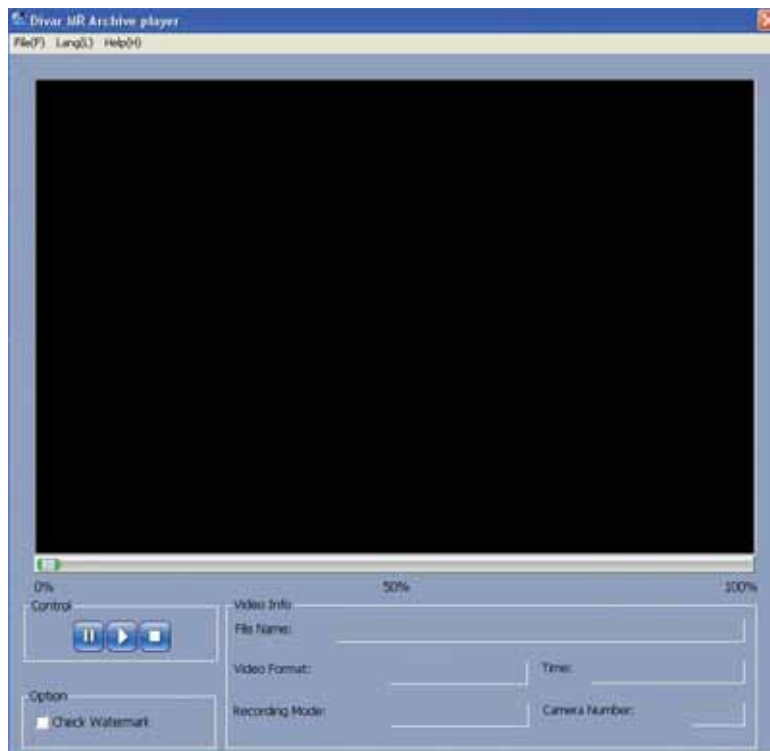
### 7.3.1 Main screen of Archive Player



**Figure 7.7** The Archive Player window


- Program Menu.
  - File(F)
    - > Open: Open the archived file.
    - > Print: Print image in window of Archive Player.

- > Exit: Exit the program.
  - Lang(L): Select the language for Archive Player program.
  - Help(H)
    - > About Archive Player: Displays Archive Player information.
- Control Icons
  -  : Pauses playback.
  -  : Starts playback.
  -  : Stops playback.
- Watermark Setting
 

Check the option "Check watermark". If the file which is in playback differs from the file that is originally recorded, a warning window will appear.
- Video Information
  - File Name: Displays the file name.
  - Video Format: Displays the video type of the data.
  - Time: Displays the recorded date and time of data.
  - Recording Mode: Displays the save mode of the data. (continuous, motion or other).
  - Camera Number: Displays the camera channel number of recorded data.

### 7.3.2 Playing data

1. Double-Click the [Divar MR Archive Player] icon on the PC or [Archive Player] folder of the external USB device. If you insert the exported data CD or DVD disc, the Archive Player program run automatically.  
The Archive Player window is displayed.
2. Select [File(F)] > [Open].  
The open window is displayed.

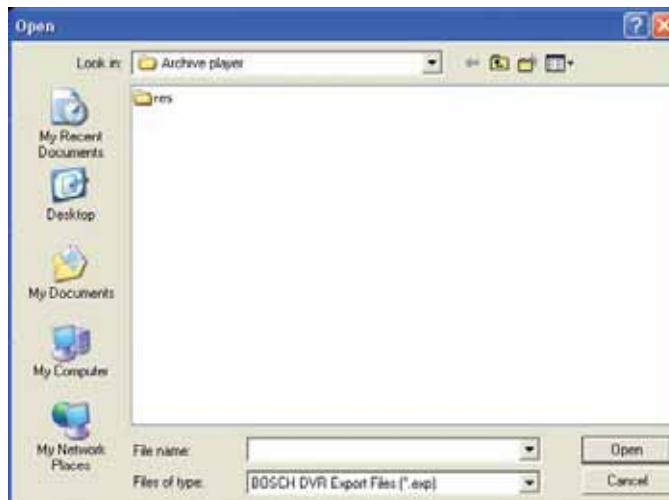


**Figure 7.8** The open window

3. Select the root directory of the USB device and select the desired file.  
An example of playable file format is "Channel name\_date\_time.exp".
4. Click the [Open] button.  
The selected data is played back automatically.



**Figure 7.9** The Archive Player window


5. Click the  button to stop playback.




## 7.4 Web Viewer program

### 7.4.1 Logging into the Web Viewer

1. Start the web browser.
2. In the Address Box, enter "HTTP://" and the IP Address of the DVR.



3. Press ENTER, then the Web Viewer and the Remote log on menu will be displayed.

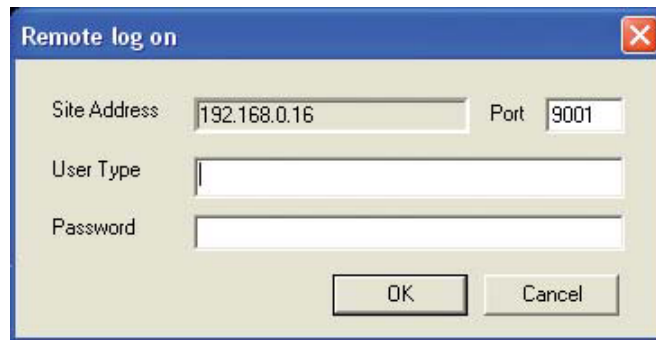

**Figure 7.10** The Remote log on menu

4. Enter the User Type and Password.
5. Click [OK].



**Notes:**




- If the web viewer is not displayed, check the TCP/IP settings of the DVR.
- If you connect the DVR for the first time, the Security Warning window is displayed. You must click [Install] on the Security Warning window to install the program for using the Web Viewer. If you click [Don't Install], the Web Viewer program is not available.

7.4.2 Using the Web Viewer

You can control the live image using the Web Viewer.




Figure 7.11 The Web Viewer window

	Mode select icon. Click to change the PTZ View mode or Live View mode.
	Multiscreen selection icons.
	Live screen display window.

7.4.3 Live screen control

- Left mouse button: Select the channel. If you want to set to full screen, double click the selected channel. To return to the previous screen, double click again.
- Right mouse button: If you want to exit full screen mode, right click the mouse to return to the normal screen.

### 7.4.4 PTZ View control

- Click the  icon to change the PTZ view mode. The PTZ virtual remote control is displayed.



**Figure 7.12** The PTZ virtual remote control window

- Use virtual remote control buttons to control the PTZ camera. For more details, refer to “6.5.3 Using the Pan/Tilt/Zoom function”.



# 8 REFERENCE

## 8.1 Troubleshooting

Check the following guide for the possible cause of a problem before contacting service.

Symptoms	Resolutions
The system power does not turn on.	Check that the power cable is connected correctly.
	Check that the input voltage is correct.
	If the system power does not turn on even if the power cable is connected correctly, please contact the service center.
The system power is turned on but no video data is displayed on the monitor.	Check that the monitor power cable is connected properly.
	Make sure the monitor is turned on.
	Check the video output cable of the DVR is properly connected to the monitor.
	Check the selected monitor type (see “3.12 Selecting the main monitor type”).
	Unplug the power cable and plug in again.
The camera numbers are displayed on the screen but the camera images are not displayed.	Check that the camera video output is connected to the DVR system correctly.
	Check that the power cable on the camera is connected correctly.
	Check the video cable connection from the camera to the DVR system.
	Turn off the DVR system and turn it on again.
The camera video is shown on the screen but the system does not record the video.	Check the recording mode in the record setting menu.
	Check the HDD detection status in the System Information window. If the HDD detection status is abnormal, check the HDD formatting.
	Check the recordable disk space in the HDD.
	Check the overwrite option in the setup menu for overwrite recording.
It is impossible to search through the recorded video.	Check if there is recorded video data for the time that you are trying to search on the table.
	If there is no recorded video data, check the recording mode in the record setting menu.
	Check the HDD detection status in the system information window. If the HDD detection status is abnormal, check the HDD formatting.
	Check the user type. The search function is not available for a normal user.

Symptoms	Resolutions
Audio data recorded with video data is not playing.	Check that the audio recording option is correctly set for the camera you wish to record audio.
	Check that the speaker and audio (line input) on the rear of system are connected correctly.
	Check that the connected speaker is working properly.
The colors of some camera videos are strange or videos are displayed abnormally.	If the camera connected to the system has a problem, check that the camera is not damaged by connecting another camera into a working video output.
	Check video format setting of the unit is the same as the connected camera's video format. Depending on your region, the camera's video format can support either PAL or NTSC. Depending on the camera's video format, the video process can differ greatly, therefore it can be difficult to recognize the video data if the video format setting is different from the camera's video format.
There is a lot of (screen) noise accompanying the image.	Check if the video signal output from the camera has a problem. Ensure the camera is not damaged by trying another camera with a working video output.
	Check if the video cable connection between the camera and the DVR is cut, crosswired, or shorted.
	Check if there is a high voltage wire around the video cable connection between camera and DVR system. It can cause interference and affect video quality.
	Check that the video cable connection between the camera and the DVR system is the correct video cable. When a normal power-supplying cable is used instead of the video cable, screen noise can be generated.
The connected input is not operating.	Check that the type of input in the camera setting is the same as with the connected input.
	Check that the system is set to use the input in the recording schedule window in the recording setting menu.
	Check that the input is properly connected to the ALARM-I/O.
The connected PTZ camera is not operating.	Check that the system is set to use the PTZ camera in the camera setting menu.
	Check that the power cable of the PTZ camera is properly connected.
	Check that the signal cable of the PTZ camera is properly connected.
	Check that the selected channel to control the PTZ camera.
	Check the user type. The PTZ camera control is not available for a normal user.

Symptoms	Resolutions
An e-mail sent from this product was not received.	<p>E-mail reception failed without SMTP server setting.</p> <ul style="list-style-type: none"> <li>• Make sure the network is correctly set.</li> <li>• Make sure the mail address is input correctly.</li> <li>• Check the spam mail setting of the inputted mail address. (If you set the spam mail, some mails are deleted automatically or classified in the spam mail box)</li> <li>• Some of SMTP mail services do not support e-mails from private SMTP servers. In this case, use the public SMTP server.</li> </ul>
	<p>E-mail reception failed even if the SMTP server was set.</p> <ul style="list-style-type: none"> <li>• When the [Please check the SMTP information or internet cable] message is displayed. <ul style="list-style-type: none"> <li>- Check the SMTP server address.</li> <li>- Check the SMTP port number. (Default setting is 25).</li> <li>- Check the network settings.</li> </ul> </li> <li>• When the [Please check the authentication information] message is displayed. <ul style="list-style-type: none"> <li>- Check the user name.</li> <li>- Check the password.</li> </ul> </li> <li>• The mail reception failed without error message. <ul style="list-style-type: none"> <li>- Check the receiver's mail address.</li> <li>- Check that your e-mail is not classified as spam on the receiver's mail setting.</li> </ul> </li> </ul>
The remote control does not work properly.	Check the batteries in the remote control.
	Check the ID setting for the remote control (See "3.24.9 System").

**Note:****If you observe any of the following symptoms:**

- Some of the front panel LEDs do not light.
- The DVR does not operate normally.

**You can reboot the DVR as follows:**

- Turn off the DVR and turn it on again after a few seconds.

When the recorder does not work normally after rebooting, contact the service center.

## 8.2 Recommended devices

### 8.2.1 Supported USB Memory list

No.	Maker	Model Name	Capacity	USB Version
1	Sandisk	Cruzer Micro	256MB / 512MB / 1GB	Ver 2.0
2	Sony	Ultra Mini USM	256MB / 512MB / 1GB	Ver 2.0
3	Transcend	JF 120 2.0	256MB / 512MB / 1GB	Ver 2.0
4	Imation	Mini Drive	256MB / 512MB / 1GB	Ver 2.0

### 8.2.2 Supported CD/DVD Media list

Maker	CD-R	CD-RW	DVD-R	DVD-RW	DVD+R	DVD+RW
Mitsubishi	Yes	Yes	Yes	Yes	Yes	Yes
Imation	Yes	Yes	Yes	Yes	Yes	Yes
Taiyoyuden	Yes	No	Yes	No	Yes	No
TDK	Yes	No	Yes	Yes	Yes	Yes



**Note:**

8cm 1.4G mini DVD is not supported.

### 8.2.3 Supported function list for device

Device	Instant backup	Schedule backup	Export	Configuration Import/Export
CD/DVD	Yes	No	Yes	No
USB memory	Yes	Yes	Yes	Yes
USB HDD	Yes	Yes	Yes	Yes



**Note:**

If you use a USB memory stick or USB HDD for configuration import/export, you must disconnect the other external USB devices.



## 8.2.4 Supported PTZ camera list

Protocol Name	Maker	Pan/ Tilt	Zoom	Focus	Iris	Preset	Tour	Setup
BOSCH	BOSCH	YES	YES	YES	YES	YES	YES	YES
PELCO D	PELCO	YES	YES	YES	YES	YES	YES	YES
PELCO P	PELCO	YES	YES	YES	YES	YES	YES	YES
GANZ_DSCP	CBC	YES	YES	YES	YES	YES	YES	YES
GANZ_P360V1	CBC	YES	YES	YES	YES	YES	YES	NO
LG_MULTIX	LG	YES	YES	YES	YES	YES	YES	YES
LG_SD168	LG	YES	YES	YES	YES	YES	YES	YES
KALATEL_ CYBERDOM	KALATEL	YES	YES	YES	YES	YES	YES	NO
PANASONIC_ CS850	PANASONIC	YES	YES	YES	YES	YES	YES	YES
SAMSUNG_SCC	SAMSUNG	YES	YES	YES	YES	YES	YES	YES

## 8.3 Time zones

Timezone name	Timezone Abbreviation	Timezone	DST
Eniwetok, Kwajalein	EK	-12:00	
Midway Island, Samoa	MIS	-11:00	
Hawaii	HAW	-10:00	
Alaska	ALA	-09:00	-08:00
Pacific Time (US and Canada); Tijuana	PST	-08:00	-07:00
Mountain Time (US and Canada), Chihuahua, La Paz, Mazatlan, Arizona	MST	-07:00	-06:00
Central Time (US and Canada), Saskatchewan, Guadalajara, Mexico City, Monterrey, Central America	CST	-06:00	-05:00
Eastern Time (US and Canada), Indiana (East), Bogota, Lima, Quito	EST	-05:00	-04:00
Atlantic Time (Canada), Caracas, La Paz, Santiago	AST	-04:00	
Newfoundland	NWF	-03:30	-02:30
Brasilia, Buenos Aires, Georgetown, Greenland	BBA	-03:00	
Mid-Atlantic	MAT	-02:00	
Azores, Cape Verde Islands	AZO	-01:00	
Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London, Casablanca, Monrovia	GMT	0	+01:00
Amsterdam, Belgrade, Bratislava, Budapest, Ljubljana, Prague, Sarajevo, Skopje, Warsaw, Zagreb, Brussels, Copenhagen, Madrid, Paris, Berlin, Bern, Rome, Stockholm, Vienna, West Central Africa	AMS	+01:00	+02:00
Athens, Istanbul, Minsk	AIM	+02:00	+03:00
Bucharest, Cairo, Pretoria, Jerusalem, Harare, Pretoria	BCP	+02:00	+03:00
Helsinki, Riga, Israel, Kyiv, Sofia, Tallinn, Vilnius	HRI	+02:00	+03:00
Baghdad, Kuwait, Riyadh, Nairobi	BKR	+03:00	+04:00
Moscow, St.Petersburg, Volgograd	MSV	+03:00	+04:00
Tehran	THE	+03:30	+04:30
Abu Dhabi, Muscat, Baku, Tbilisi, Yerevan	ABT	+04:00	
Kabul	KAB	+04:30	
Ekaterinburg, Islamabad, Karachi, Tashkent	EIK	+05:00	
Bombay, Calcutta, Madras, New Delhi, Chennai, Kolkata	BCD	+05:30	
Almaty, Dhaka, Colombo, Astana, Sri Jayawardenepura, Novosibirsk	ADC	+06:00	
Bangkok, Hanoi, Jakarta, Krasnoyarsk	BHJ	+07:00	
Beijing, Changqing, Hong Kong, Urumqi	BHU	+08:00	
Perth, Singapore, Taipei, Beijing, Chongqing, Hong Kong SAR, Urumqi, Kuala Lumpur, Irkutsk, Ulaan Bataar	SST	+08:00	
Osaka, Sapporo, Tokyo	OST	+09:00	
Seoul, Yakutsk	SYA	+09:00	
Adelaide, Darwin	ADA	+09:30	
Brisbane, Guam, Port Moresby	BGP	+10:00	
Canberra, Melbourne, Sydney	CMS	+10:00	
Hobart, Vladivostok	HVL	+10:00	
Magadan, Solomon Islands, New Caledonia	MSN	+11:00	+12:00
Auckland, Wellington	AWE	+12:00	
Fiji Islands, Kamchatka, Marshall Islands	FKM	+12:00	

## 8.4 Factory default configuration settings

Classification	Detailed Items		Default Setting		Factory Default
1st level	2nd level	3rd level	DVR-16K/ DVR-16L	DVR-8K/ DVR-8L	
Camera	Camera	Ch			
		Name	Camera 1 ~ Camera 16	Camera 1 ~ Camera 8	Yes
		Covert	Off		Yes
		Audio	01 ~ 08, None	01 ~ 04, None	Yes
	Video adj.	Channel	01:Name		
		Brightness	50		Yes
		Contrast	50		Yes
		Color	50		Yes
	PTZ	Camera	01:Name		
		COM port	None		Yes
		Control ID	00		Yes
		Protocol	Bosch		Yes
		Baud rate	9600		Yes
		PTZ test			
	Continuous Rec	Ch			
		Resolution	352X240 (NTSC), 352X288 (PAL)		Yes
		Quality	Normal		Yes
		Frame rate	30 IPS (NTSC), 25 IPS (PAL)		Yes
	Instant Rec	Ch			
		Resolution	352X240 (NTSC), 352X288 (PAL)		Yes
		Quality	Normal		Yes
		Frame rate	30 IPS (NTSC), 25 IPS (PAL)		Yes
	Input Rec	Ch			
		Resolution	352X240 (NTSC), 352X288 (PAL)		Yes
		Quality	Normal		Yes
		Frame rate	30 IPS (NTSC), 25 IPS (PAL)		Yes
		Pre-event	Off		Yes
		Post-event	10sec		Yes
	Motion Rec	Ch			
		Resolution	352X240 (NTSC), 352X288 (PAL)		Yes
		Quality	Normal		Yes
		Frame rate	30 IPS (NTSC), 25 IPS (PAL)		Yes
		Pre-event	Off		Yes
		Post-event	10sec		Yes
	Video format	Video format	PAL to EMEA/APR, NTSC to US		No
Schedule	Sun		Continuous		Yes
	Mon		Continuous		Yes
	Tue		Continuous		Yes
	Wed		Continuous		Yes
	Thu		Continuous		Yes
	Fri		Continuous		Yes
	Sat		Continuous		Yes
	Exception days		Continuous		Yes

Classification	Detailed Items		Default Setting		Factory Default
1st level	2nd level	3rd level	DVR-16K/ DVR-16L	DVR-8K/ DVR-8L	
Display	OSD	Language	English		Yes
		Camera name	On		Yes
		Camera status	On		Yes
	Monitor A	Seq. dwell time	2 sec		Yes
	Monitor B	Seq. dwell time	2 sec		Yes
		Event popup	Off		Yes
Event	Input	In			
		Input type	N.O.		Yes
		Camera	01~16	01~08	Yes
		Relay output	None		Yes
	Motion	Camera	01:Name		
		Sensitivity	5		Yes
		Relay output	None		Yes
		Area	On		Yes
	Alarm ackn.	Alarm ackn.	Post-event time		Yes
Network	TCP/IP	DHCP	On		Yes
		IP address	NULL		Yes
		Subnet mask	NULL		Yes
		Gateway	NULL		Yes
		Primary DNS	NULL		Yes
		Secondary DNS	NULL		Yes
		Remote client port no.	9001		Yes
		HTTP port no.	80		Yes
		Bandwidth limit	100 Mbps		Yes
	DDNS	User name	NULL		Yes
		Password	NULL		Yes
	Notification	Alarm on	Off		Yes
		Motion detect	Off		Yes
		Disk full	Off		Yes
		Admin PW changed	Off		Yes
		Video loss	Off		Yes
		Power on/off	Off		Yes
		Notification	Off		Yes
	Mail	SMTP server	NULL		Yes
		SMTP port no.	25		Yes
		User name	NULL		Yes
		Password	NULL		Yes
		TLS	Off		Yes
		Mail address 1	NULL		Yes
		Mail address 2	NULL		Yes
		Mail address 3	NULL		Yes
	Emergency	Notification	Off		Yes
		IP address	NULL		Yes
		Port no.	9002		Yes

Classification	Detailed Items		Default Setting		Factory Default
1st level	2nd level	3rd level	DVR-16K/ DVR-16L	DVR-8K/ DVR-8L	
System	Date/Time	Date	2007.01.01		No
		Time	0:00		No
		Date format	YYYY/MM/DD		Yes
		Time format	12 hr		Yes
		Time zone	GMT		No
		Daylight saving	Off		No
		Daylight saving start	Jan / 1st / Sun / 00		No
		Daylight saving end	Jan / 1st / Sun / 00		No
	NTP	NTP	Off		Yes
		Time server	Public server		Yes
		Private time server	NULL		Yes
		Sync. interval	1 day		Yes
	Beeper	Button beeper	Off		Yes
		Input beeper	Off		Yes
		Motion beeper	Off		Yes
		System beeper	On		Yes
	User	No.			
		ID	NULL		No
		Level	Normal user		No
		Password	000000		No
	Update	Item	System firmware		Yes
		Method	USB		Yes
		Update server	NULL		Yes
	Configuration	Import configuration			
		Export configuration			
		Factory defaults			
	Hard disk	Overwrite	Normal partition		Yes
		Disk full warning	Off		Yes
		Event partition	20%		No
		Auto delete	Off		Yes
		Format	All		Yes
	Backup	Partition selection	All		Yes
		Schedule	Off		Yes
		Device			
		Schedule start	0		Yes
		Time range date	0		Yes
		Time range start	0		Yes
		Time range end	0		Yes
	System	IR remote controller	01		Yes
		DVR ID	01		Yes
		Auto user logout	Off		Yes

## 8.5 Recording Time Table (500GB HDD)

Resolution (NTSC/PAL)	Quality	IPS (NTSC/PAL)	Recording Time (Hr)			
			Video (NTSC/PAL)		Video+Audio (NTSC/PAL)	
			DVR-8K/ DVR-8L	DVR-16K/ DVR-16L	DVR-8K/ DVR-8L	DVR-16K/ DVR-16L
352x240/ 352x288	Lowest	30/25	550/440	275/220	501/401	251/201
		20/20	571/457	285/228	518/415	259/207
		15/12.5	833/666	416/333	726/581	363/290
		7.5/6	1185/948	593/474	979/784	490/392
		5/5	1427/1141	713/571	1139/911	569/455
		3/3	1712/1370	856/685	1313/1051	657/525
		1/1	2703/2162	1352/1081	1828/1462	914/731
	Low	30/25	481/385	241/193	444/355	222/177
		20/20	541/432	270/216	493/395	247/197
		15/12.5	700/560	350/280	623/498	312/249
		7.5/6	963/770	481/385	823/658	411/329
		5/5	1048/838	524/419	884/707	442/354
		3/3	1185/948	593/474	979/784	490/392
		1/1	1926/1541	963/770	1436/1149	718/574
	Normal	30/25	321/257	160/128	304/243	152/121
		20/20	342/274	171/137	323/258	161/129
		15/12.5	550/440	275/220	501/401	251/201
		7.5/6	717/573	358/287	636/509	318/254
		5/5	815/652	408/326	712/570	356/285
		3/3	875/700	438/350	758/606	379/303
		1/1	1401/1121	700/560	1122/898	561/449
	High	30/25	241/193	120/96	231/185	115/92
		20/20	278/222	139/111	265/212	132/106
		15/12.5	385/308	193/154	361/288	180/144
		7.5/6	541/432	270/216	493/395	247/197
		5/5	642/514	321/257	576/461	288/231
		3/3	770/616	385/308	678/542	339/271
		1/1	1141/913	571/457	949/759	475/380
	Best	30/25	151/121	76/60	147/118	74/59
		20/20	180/144	90/72	175/140	87/70
		15/12.5	257/205	128/103	246/196	123/98
		7.5/6	376/301	188/150	352/282	176/141
		5/5	471/377	236/188	435/348	217/174
		3/3	535/428	267/214	489/391	244/195
		1/1	820/656	410/328	716/572	358/286

Resolution (NTSC/PAL)	Quality	IPS (NTSC/PAL)	Recording Time (Hr)			
			Video (NTSC/PAL)		Video+Audio (NTSC/PAL)	
			DVR-8K/ DVR-8L	DVR-16K/ DVR-16L	DVR-8K/ DVR-8L	DVR-16K/ DVR-16L
704x240/ 704x288	Lowest	15/15	642/514	321/257	576/461	288/231
		7.5/7.5	906/725	453/363	781/625	390/312
		5/5	1141/913	571/457	949/759	475/380
		3/3	1284/1027	642/514	1046/837	523/418
		1/1	2266/1813	1133/906	1617/1293	808/647
	Low	15/15	593/474	296/237	536/429	268/215
		7.5/7.5	833/666	416/333	726/581	363/290
		5/5	885/708	443/354	765/612	383/306
		3/3	951/761	476/380	814/651	407/326
		1/1	1572/1258	786/629	1230/984	615/492
	Normal	15/15	428/342	214/171	398/318	199/159
		7.5/7.5	571/457	285/228	518/415	259/207
		5/5	634/507	317/254	570/456	285/228
		3/3	700/560	350/280	623/498	312/249
		1/1	1101/880	550/440	921/737	460/368
	High	15/15	358/287	179/143	337/270	168/135
		7.5/7.5	481/385	241/193	444/355	222/177
		5/5	541/432	270/216	493/395	247/197
		3/3	593/474	296/237	536/429	268/215
		1/1	923/738	461/369	793/634	396/317
	Best	15/15	208/167	104/83	201/161	100/80
		7.5/7.5	314/252	157/126	298/238	149/119
		5/5	395/316	198/158	369/295	185/148
		3/3	433/346	216/173	402/322	201/161
		1/1	744/595	372/298	658/526	329/263
704x480/ 704x576	Lowest	7.5/7.5	428/342	214/171	398/318	199/159
		5/5	552/442	276/221	503/402	252/201
		3/3	642/514	321/257	576/461	288/231
		1/1	1133/906	566/453	943/755	472/377
	Low	7.5/7.5	390/312	195/156	365/292	182/146
		5/5	463/370	231/185	428/342	214/171
		3/3	507/405	253/203	465/372	233/186
		1/1	786/629	393/314	690/552	345/276
	Normal	7.5/7.5	280/224	140/112	267/214	133/107
		5/5	302/242	151/121	287/229	143/115
		3/3	335/268	167/134	316/253	158/126
		1/1	499/399	249/199	458/367	229/183

Resolution (NTSC/PAL)	Quality	IPS (NTSC/PAL)	Recording Time (Hr)			
			Video (NTSC/PAL)		Video+Audio (NTSC/PAL)	
			DVR-8K/ DVR-8L	DVR-16K/ DVR-16L	DVR-8K/ DVR-8L	DVR-16K/ DVR-16L
704x480/ 704x576	High	7.5/7.5	220/176	110/88	212/169	106/85
		5/5	263/211	132/105	252/201	126/101
		3/3	291/233	145/116	276/221	138/111
		1/1	440/352	220/176	408/327	204/163
	Best	7.5/7.5	162/130	81/65	158/126	79/63
		5/5	198/158	99/79	191/153	95/76
		3/3	220/176	110/88	212/169	106/85
		1/1	320/256	160/128	303/242	151/121

## 8.6 Recording Time Table (160GB HDD)

Resolution (NTSC/PAL)	Quality	IPS (NTSC/PAL)	Recording Time (Hr)			
			Video (NTSC/PAL)		Video+Audio (NTSC/PAL)	
			DVR-8K/ DVR-8L	DVR-16K/ DVR-16L	DVR-8K/ DVR-8L	DVR-16K/ DVR-16L
352x240/ 352x288	Lowest	30/25	176/141	88/70	160/128	80/64
		20/20	183/146	91/73	166/133	83/66
		15/12.5	267/213	133/107	232/186	116/93
		7.5/6	379/303	190/152	313/251	157/125
		5/5	457/365	228/183	364/292	182/146
		3/3	548/438	274/219	420/336	210/168
		1/1	865/692	432/346	585/468	292/234
	Low	30/25	154/123	77/62	142/114	71/57
		20/20	173/138	86/69	158/126	79/63
		15/12.5	224/179	112/90	199/159	100/80
		7.5/6	308/247	154/123	263/211	132/105
		5/5	335/268	168/134	283/226	141/113
		3/3	379/303	190/152	313/251	157/125
		1/1	616/493	308/247	459/368	230/184
	Normal	30/25	103/82	51/41	97/78	49/39
		20/20	110/88	55/44	103/83	52/41
		15/12.5	176/141	88/70	160/128	80/64
		7.5/6	229/183	115/92	203/163	102/81
		5/5	261/209	130/104	228/182	114/91
		3/3	280/224	140/112	243/194	121/97
		1/1	448/359	224/179	359/287	180/144



Resolution (NTSC/PAL)	Quality	IPS (NTSC/PAL)	Recording Time (Hr)			
			Video (NTSC/PAL)		Video+Audio (NTSC/PAL)	
			DVR-8K/ DVR-8L	DVR-16K/ DVR-16L	DVR-8K/ DVR-8L	DVR-16K/ DVR-16L
352x240/ 352x288	High	30/25	77/62	39/31	74/59	37/30
		20/20	89/71	44/36	85/68	42/34
		15/12.5	123/99	62/49	115/92	58/46
		7.5/6	173/138	86/69	158/126	79/63
		5/5	205/164	103/82	184/148	92/74
		3/3	247/197	123/99	217/174	108/87
		1/1	365/292	183/146	304/243	152/122
	Best	30/25	48/39	24/19	47/38	24/19
		20/20	58/46	29/23	56/45	28/22
		15/12.5	82/66	41/33	79/63	39/31
		7.5/6	120/96	60/48	113/90	56/45
		5/5	151/121	75/60	139/111	70/56
		3/3	171/137	86/68	156/125	78/63
		1/1	262/210	131/105	229/183	114/92
704x240/ 704x288	Lowest	15/15	205/164	103/82	184/148	92/74
		7.5/7.5	290/232	145/116	250/200	125/100
		5/5	365/292	183/146	304/243	152/122
		3/3	411/329	205/164	335/268	167/134
		1/1	725/580	363/290	517/414	259/207
	Low	15/15	190/152	95/76	172/137	86/69
		7.5/7.5	267/213	133/107	232/186	116/93
		5/5	283/227	142/113	245/196	122/98
		3/3	304/243	152/122	260/208	130/104
		1/1	503/402	252/201	393/315	197/157
	Normal	15/15	137/110	68/55	127/102	64/51
		7.5/7.5	183/146	91/73	166/133	83/66
		5/5	203/162	101/81	182/146	91/73
		3/3	224/179	112/90	199/159	100/80
		1/1	352/282	176/141	295/236	147/118
	High	15/15	115/92	57/46	108/86	54/43
		7.5/7.5	154/123	77/62	142/114	71/57
		5/5	173/138	86/69	158/126	79/63
		3/3	190/152	95/76	172/137	86/69
		1/1	295/236	148/118	254/203	127/101
	Best	15/15	67/53	33/27	64/51	32/26
		7.5/7.5	101/80	50/40	95/76	48/38
		5/5	126/101	63/51	118/95	59/47
		3/3	138/111	69/55	129/103	64/51
		1/1	238/191	119/95	210/168	105/84

Resolution (NTSC/PAL)	Quality	IPS (NTSC/PAL)	Recording Time (Hr)			
			Video (NTSC/PAL)		Video+Audio (NTSC/PAL)	
			DVR-8K/ DVR-8L	DVR-16K/ DVR-16L	DVR-8K/ DVR-8L	DVR-16K/ DVR-16L
704x480/ 704x576	Lowest	7.5/7.5	137/110	68/55	127/102	64/51
		5/5	177/141	88/71	161/129	80/64
		3/3	205/164	103/82	184/148	92/74
		1/1	363/290	181/145	302/242	151/121
	Low	7.5/7.5	125/100	62/50	117/93	58/47
		5/5	148/118	74/59	137/109	68/55
		3/3	162/130	81/65	149/119	74/60
		1/1	252/201	126/101	221/177	110/88
	Normal	7.5/7.5	90/72	45/36	85/68	43/34
		5/5	97/77	48/39	92/73	46/37
		3/3	107/86	54/43	101/81	51/40
		1/1	160/128	80/64	147/117	73/59
	High	7.5/7.5	70/56	35/28	68/54	34/27
		5/5	84/67	42/34	81/64	40/32
		3/3	93/74	47/37	88/71	44/35
		1/1	141/113	70/56	131/105	65/52
	Best	7.5/7.5	52/42	26/21	50/40	25/20
		5/5	63/51	32/25	61/49	31/24
		3/3	70/56	35/28	68/54	34/27
		1/1	102/82	51/41	97/77	48/39

**Note:**

This recording time table is for reference only.  
The recording time can be different depending on your surveillance environment.

## 8.7 Specifications

Model			DVR-8K/DVR-8L	DVR-16K/DVR-16L
Video	Input		8	16
			Composite video 0.5-2Vpp, 75 ohm, automatic termination.	
	Output	Loop Through	8	16
		Mon A (CVBS)	1	1
			1.0Vpp±0.1V, 75 Ω	
		Mon A (VGA)	1	1
			Analog RGB 800x600	
		Mon B (CVBS)	1	1
1.0Vpp±0.1V, 75 Ω				
Audio	Input		4	8
			Line In, 30KΩ	
	Output		1	1
			Line, 100 KΩ	
Alarm	Input		8	16
			Opto-coupled alarm input (Max. 5V)	
	Output		4	8
			1A 30V DC, 0.3A 125V AC	
	Pre-Alarm Recording		Up to 60 sec	
Recording	Frame Rate (/sec)	NTSC	Up to 240 IPS @ 352x240 Up to 120 IPS @ 704x240 Up to 60 IPS @ 704x480	Up to 480 IPS @ 352x240 Up to 240 IPS @ 704x240 Up to 120 IPS @ 704x480
		PAL	Up to 200 IPS @ 352x288 Up to 100 IPS @ 704x288 Up to 50 IPS @ 704x576	Up to 400 IPS @ 352x288 Up to 200 IPS @ 704x288 Up to 100 IPS @ 704x576
Search	Playback Function		FF, FB, Frame Advance	
	Search Mode		Date/Time, Event (Motion, Input), Bookmark, Smart	
Display	Frame Rate (/sec)	NTSC	240 IPS (Real time per each channel)	480 IPS (Real time per each channel)
		PAL	200 IPS (Real time per each channel)	400 IPS (Real time per each channel)
	Multiscreen Mode		1, 4, 9, 1+5	1, 4, 9, 16, 1+5, 1+7
Internal HDD	Max Capacity		2TB (Up to 4 HDDs)	
Backup	Backup Interface		USB 2.0 (x3), Network	
	Supportable Devices		USB Memory, CD-RW, DVD-RW, HDD	
Serial I/F	PTZ Control Interface		RS-485/ RS-422	
	Serial Interface		RS-232C (D-SUB9)	
	Biphase		1 connector (5 outputs)	
Network	Network Connection		Ethernet 10/100BaseT (RJ-45)	
	Network Transmission Speed		Up to120 IPS @ 352x240	
	Bandwidth Control		Yes	
Security	Password Protection		Yes	
	Image Authentication		Yes	

Model		DVR-8K/DVR-8L	DVR-16K/DVR-16L
Power		100~240VAC, 50/60Hz	
Power consumption		Max. 80 W (with 1x HDD) / Max. 120 W (with 4x HDD)	
Dimension (WxDxH)		430 x 425 x 88 mm / 16.9 x 16.7 x 3.5 inch	
Net Weight (with 4x HDD)		9 Kg / 19.8lbs	
Operation Temp. / Humidity		0 °C ~ 40 °C (32 °F ~ 104 °F) / 0%RH ~ 80%RH	
Bi-phase	Impedance	128 ohm. max	
	Overvoltage protection	±40V	
	Max. cable length	1.5 Km (0.9 miles)	
Keyboard Output		Conform RS485 max. signal voltage ±12V	
DVD writer		DVD+R / DVD+RW, DVD-R / DVD-RW, CD-R / CD-RW	







**Bosch Security Systems**

[www.boschsecurity.com](http://www.boschsecurity.com)

© Bosch Security Systems, 2007