



VD-R
使用手冊
User Manual

Winning Perfect Limited

目錄

1. 安全須知.....	6
2. 熟悉 VD-R.....	6
2.1 瞭解功能.....	6
2.2 遙控器.....	7
2.3 機背	9
2.4 前面板顯示	11
3. 連線（安裝）說明.....	12
3.1 天線連接	12
3.2 HDMI 高清電視機連接	13
3.3 複合視頻連接.....	13
3.4 S 端子連接	13
3.5 分量視頻連接	14
3.6 連接音訊	14
3.7 連接擴音機	15
3.8 連接其它音視頻輸入源	15

3.9	其它設定選項	17
3.10	電源連接	18
4.	初始化配置	18
4.1	選擇語言	18
4.2	頻道搜索	19
5.	功能介紹	20
5.1	電視收看	20
5.2	錄影.....	23
6.	VD-R 設定	30
6.1	用戶設定	30
6.2	頻道.....	32
6.3	VDIGI 設定.....	34
6.4	產品資訊	34
7.	故障排除	34

1. Safety Warnings.....	36
2. Understanding VD-R.....	36
2.1 Features of VD-R	37
2.2 Using the Remote Control.....	37
2.3 Rear Panel	39
2.4 Front Panel Display	41
3. Connection and Installation.....	42
3.1 Antenna Connections	42
3.2 HDMI Television Connection.....	43
3.3 Composite Video Connection	44
3.4 S-Video Connection	44
3.5 Component Video Connection.....	44
3.6 Audio Connection	45
3.7 Amplifier Connection.....	45
3.8 Other Options for Audio & Video Input Source	46
3.9 Other Setup Options	48
3.10 Power Connection.....	49

4. Initialization and Configuration	49
4.1 Language Setting	49
4.2 Channel Scanning	49
5. Features of VD-R	51
5.1 Viewing TV	51
5.2 Recording	54
6. Setting	61
6. 1 User Setting	61
6.2 Channel	64
6.3 VDIGI Setting	65
6.4 Product information	66
7. Troubleshooting	66

1. 安全須知

在操作高清電視錄影機前，請細心閱讀本使用手冊，並請注意以下事項：

- 清潔外殼時，請先拔出電源插頭。請不要用濕手接觸電源線。
請用不起毛的布混合少許暖水清洗。請不要使用含有苯、酒精、汽油溶劑等化學物。
- 如果有不正常現象出現（冒煙、聲音異常、有異味等），請立即停止使用，並切斷電源，拔出電源插頭。
- 在有雷電的情況下，請拔出電源插頭。
- 請不要把重物放在高清電視錄影機上，並避免劇烈碰撞。
- 請水平擺放高清電視錄影機，並安放在通風環境中，不要拿桌布等物體覆蓋接收器上面的所有通風口。
- 請安放在遠離熱源、無直接光線的環境中，不要讓高清電視錄影機接近火源。
- 請安放在遠離強磁場和強電場設備的環境中。

2. 熟悉 VD-R

瞭解功能

VD-R 高清硬碟錄影機可以接收多種不同類型的音視訊訊號，並具有強大的錄影功能：

- 可以接收地面數位高清信號（DMBT-H），收看高清數碼廣播節目。
- 可以錄製高清數碼廣播節目。
- 可以接收並錄製模擬電視節目。
- 可以接收並錄製模擬視訊訊號。

遙控器


VD-R 的遙控器可以靈活的控制各種操作。爲了使用戶可以儘量容易地使用遙控器，遙控器上的三個按鍵可以通過學習控制您的電視機。

插入電池

- 水平向下推壓電池蓋前端的開啓部分，打開電池蓋。
- 將隨機的兩個 AAA 電池放入電池匣，電池的正負極與電池匣上標誌的正負極相匹配。
- 蓋上電池蓋。

如果電池本身工作正常，而且安裝正確的話，無論您按遙控器上的任意鍵，LED 指示燈都將閃爍。


遙控器的按鍵說明如下圖所示：

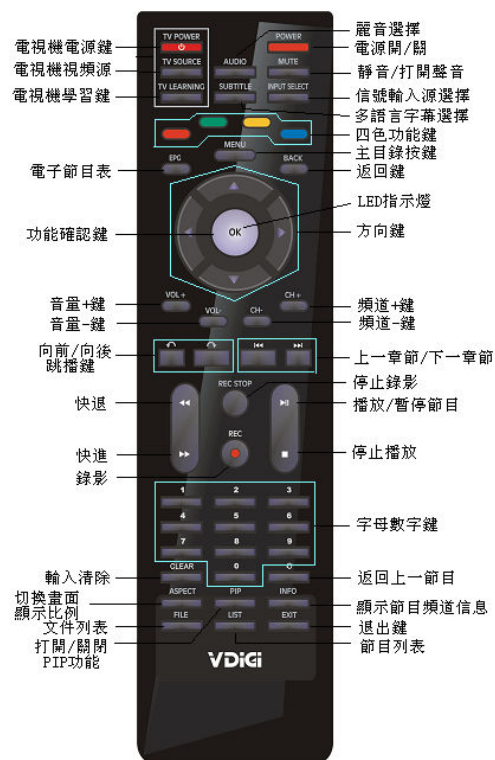

設定遙控器的學習功能

第一步：

將 VD-R 遙控器和電視遙控器放在一個平面上，距離 3 釐米，兩個遙控器的信號發射器相互正對方。



第二步：

按壓並保持 **TV LEARNING** 按鍵 2 秒鐘，直到 LED 指示燈開始緩慢閃爍。

這時，遙控器處於學習模式。

第三步：

按壓您要設定學習的按鍵（比如 ）。LED 指示燈將點亮。

第四步：


按壓並保持您電視機遙控器的相應按鍵（如電視機電源按鍵），直到 LED 指示燈熄滅。

第五步：


兩秒鐘後，LED 將會再次緩慢閃爍。請為每個學習按鍵重複第三步和第四步。

第六步：

結束後，按壓  按鍵退出學習模式。

如果您想將這些按鍵恢復出廠設定，按壓並保持  和左下方的紅色按鍵兩秒鐘，直到 LED 指示燈開始緩慢閃爍，然後按壓 OK 鍵。

機背

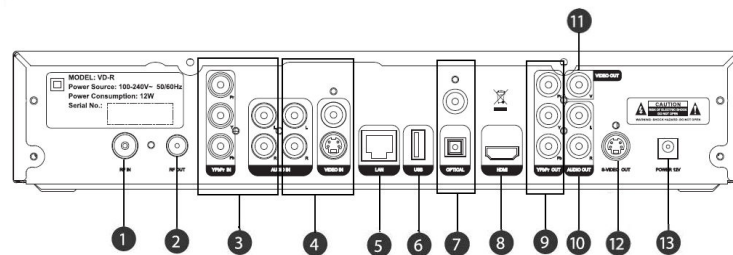

1 天線輸入

使用同軸射頻電纜將大廈天線或獨立天線連接到這個輸入端子，以便 VD-R

可以接收新的數碼地面電視廣播信號。

2 天線環路

如果您要保持其他設備（如您的電視機）的電視接收功能，請通過這個端子將隨機的天線延長線連接到其他設備。

3 Input1 音視頻輸入（YPbPr/ Audio L/R）

VD-R 從這裡可以接收從其它設備輸出的高清類比音視訊訊號，並進行錄製；

4 Input2 音視頻輸入

VD-R 從這裡可以接收從其它設備輸出的標清類比音視訊訊號，並進行錄製；

5 乙太網端子

使用這個端子將 VD-R 連接到網路，預留配合日後可能加入的網路功能使用

6 USB 端子

VD-R 可以通過 USB 端子外接存放裝置，擴展其錄製能力，並可通過 USB 進行系統軟體升級。

7 數位音訊輸出

VD-R 通過光纖或同軸端子，將高品質的數位音訊輸出到的環繞音響系統。

8 HDMI

HDMI 可以通過 HDMI 線為高清視頻和音訊提供純數碼連接，用於連接具備 HDMI 介面高清電視機。

9 色差視頻輸出輸出（YPbPr）

色差視頻可以提供一條高品質的高清類比視頻連接通道，用於連接不具備 HDMI 而具有 YPbPr 介面電視機。

10 音訊輸出


11 複合視頻輸出


12 S-Video 輸出

13 直流電源輸入

將隨機的 100-240 伏交流電源適配器接入這個端子。在接入之前首先閱讀“安全須知”

前面板顯示

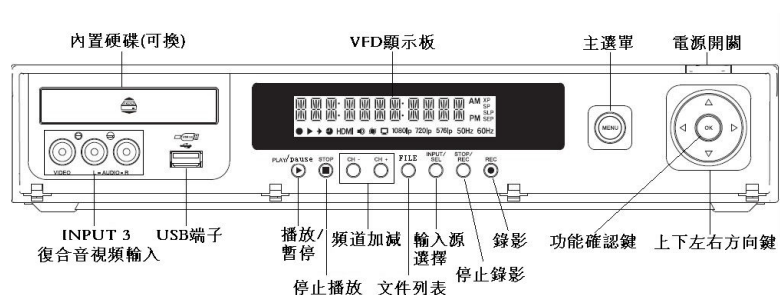

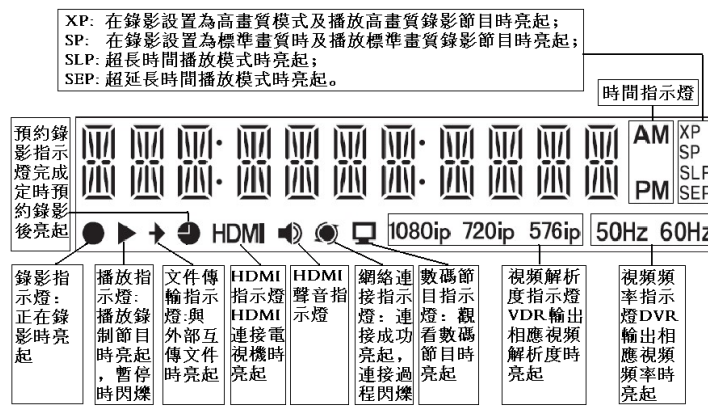


3. 連線（安裝）說明

3.1 天線連接

3.1.1 天線連接


將天線插頭插入 VD-R 的 Ant.IN 接頭，為了能夠使接收效果達到最好，建議您使用安裝在房頂或大廈公共天線。

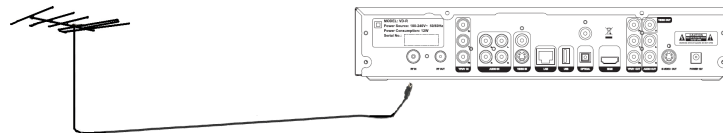

3.1.2 天線環路輸出連接


VD-R 支援天線環路輸出功能，如果想保留電視機（或者其它帶有電視調諧器的設備，如錄影機或者 DVD 錄影機）的類比電視接收功能，只需將 VD-R 的 Loop OUT 接頭與電視機或其它設備的 Ant.IN 接頭連接即可。為了保證收看數位電視的信號品質，我們推薦使用 VD-R 作為天線環路的第

一台設備，而將電視機作為最後一台電視機。

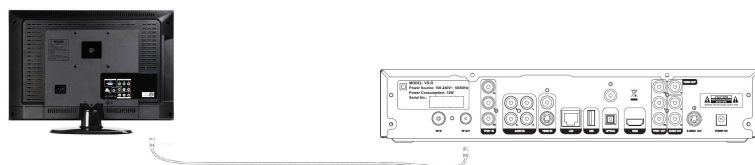


3.2 HDMI 高清電視機連接

HDMI 是 VD-R 最高品質的輸出端子。VD-R 支援高清視頻輸出，使用 HDMI 線，將 VD-R HDMI（含視頻及音訊）輸出端子和電視機的 HDMI 輸入端子連接即可。

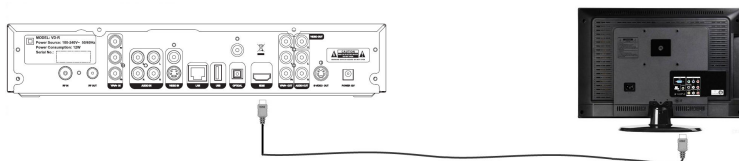


3.3 複合視頻連接

在沒有 HDMI 和 YPbPr 端子的情況下，將 VD-R 複合視頻輸出端子與您電視機複合視頻輸入端子連接。連接 VD-R Video/L/R 輸出端子和電視機 Video/L/R 輸入端子即可。

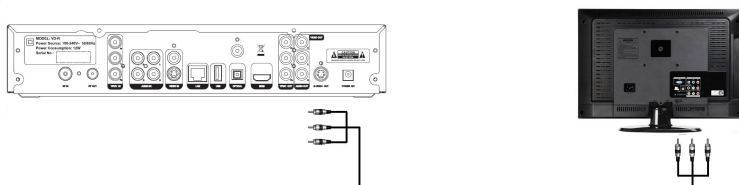


3.4 S 端子連接

S-Video 為類比視頻傳輸，在沒有 HDMI 端子的情況下，將 VD-R 的 S-Video 輸出端子與您電視機的 S-Video 輸入端子連接，S-Video 端子不能傳送音訊，所以需要一條單獨的連線來傳送音訊。使用 S-Video 線連接 VD-R 輸出端子和電視機 S-Video 輸入端子即可。

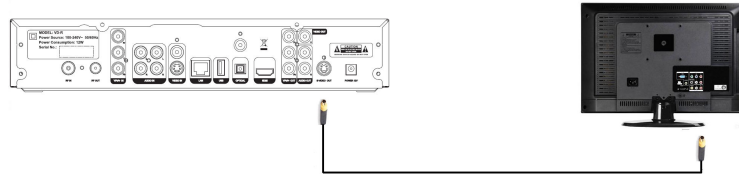


3.5 分量視頻連接

對於沒有 HDMI 端子的高清電視機，為了得到 VD-R 的高清視頻，須使用色差視頻（YPbPr）端子，色差視頻端子不能傳送音訊，所以需要一條單獨的連線來傳送音訊。連接 VD-R YPbPr 輸出端子和電視機 YPbPr 輸入端子即可。

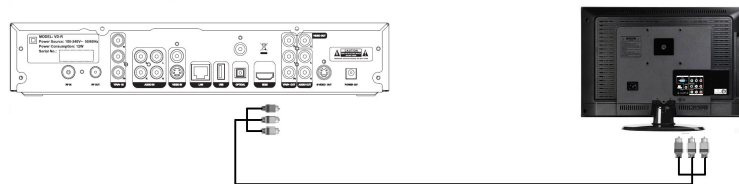

3.6 連接音訊

使用音訊線（L/R），將 VD-R 音訊輸出端子（Audio out）和電視機音訊輸入端子連接即可。

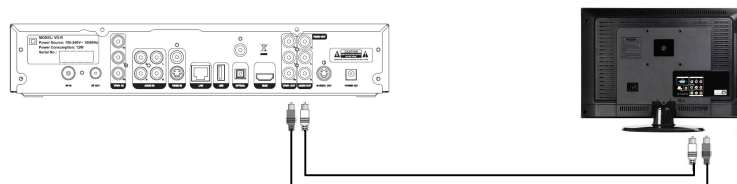


3.7 連接擴音機

VD-R 具有同軸和光纖數碼音訊輸出，您可以從中選擇最合適的。


3.7.1 連接擴音機--同軸

使用同軸線，將 VD-R COAXIAL 輸出端子到擴音機 COAXIAL 輸入端子連接即可。

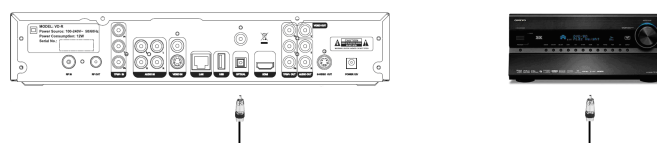


3.7.2 連接擴音機--光纖

使用光纖，將 VD-R 光纖輸出端子到擴音器光纖輸入端子連接即可。

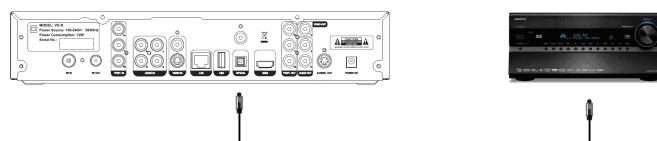


3.8 連接其它音視頻輸入源


後面板的 YPbPr、Audio IN、Video IN 為 VD-R 特有的音視頻輸入端子，輸入端子分為兩組，左邊為分量視頻端子和音訊 L/R 為組一，如圖：

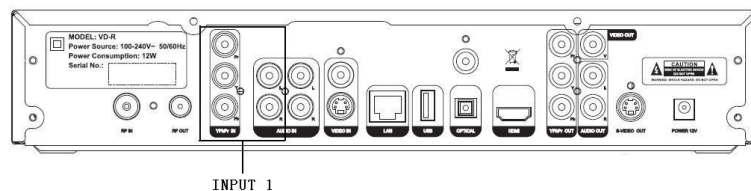

右邊為 S-Video/V（視頻）和 L/R（音訊）為組二，如圖：

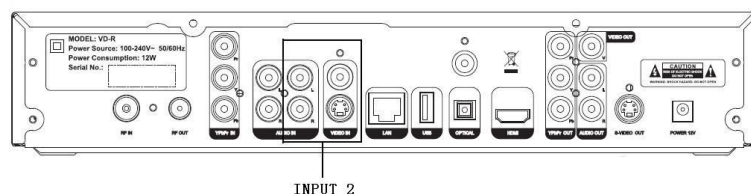


前面板為 Video（視頻）和 L/R（音訊）為組三，如圖：

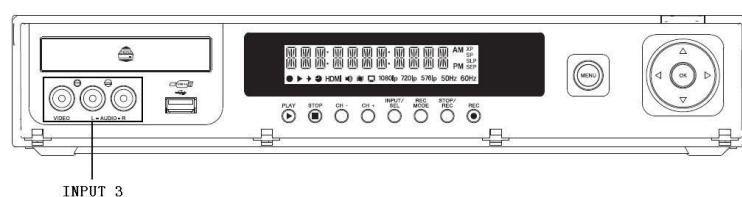

如果您想要通過 VD-R 的輸入端子錄製其它設備的音視頻輸入源（比如其它收費機頂盒），可以使用下面三種方式實現。

3.8.1 S 端子連接（組二）

連接其它設備 S-Video 輸出端子與 VD-R 輸入端子（S-V）。S-Video 輸入端子不能傳送音訊，所以需要一條單獨的連線與同組 VD-R 音訊輸入（L/R）連接來傳送音訊。




其它輸入源(機頂盒)

VD-R

3.8.2 複合視頻連接（組三）

連接 VD-R 複合視頻輸入端子（V）和其它設備複合視頻輸出端子。複合視頻端子不能傳送音訊，所以需要一條單獨的連線與同組 VD-R 音訊輸入（L/R）連接來傳送音訊。




其它輸入源(機頂盒)

VD-R

3.8.3 分量視頻連接（組一）

連接色差視頻（YPbPr）輸入端子和和其它設備色差視頻（YPbPr）輸出端子。色差視頻端子不能傳送音訊，所以需要一條單獨的連線與同組 VD-R 音訊輸入（L/R）連接來傳送音訊。

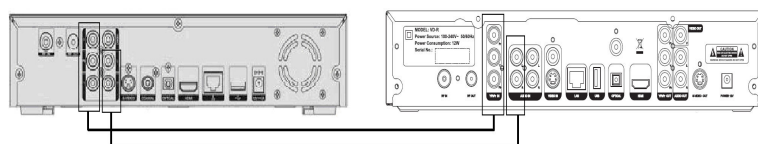

其它輸入源(機頂盒)


VD-R

3.9 其它設定選項

網路連接

進階 MHEG-5 互動服務廣播的某些功能可能需要互聯網連接（比如比賽報名、投票、定購和購買等），所以您的家中需要有現成的乙太網路連

接。你只需要簡單地用一條 5 類網線連接 VD-R 的網口和交換機或路由器網口即可。

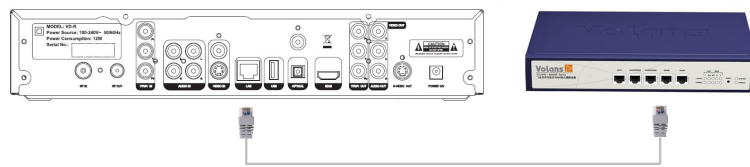

3.10 電源連接


將電源線插入合適的電源插座，並將 12V 直流電源插頭插入 VD-R。
在所有連接工作完成之前，請關閉電源插座或者拔去 VD-R 的電源插頭。

4. 初始化配置

VD-R 第一次開機後需要進行簡單的配置，以便能夠正常工作，下面是所需的配置流程

4.1 選擇語言


首先進行語言選擇，選定後，所有的介面將以所選擇的語言進行呈現

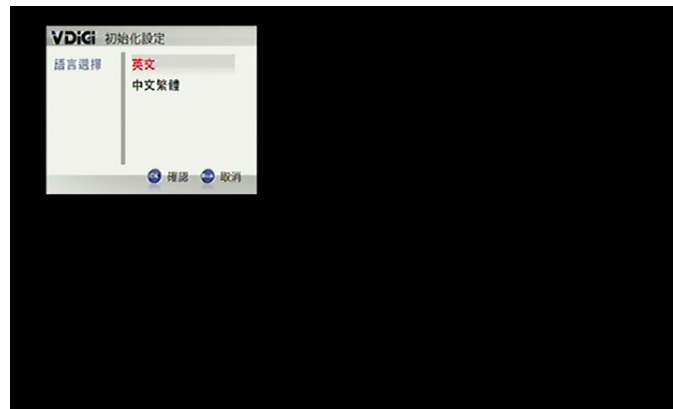


4.2 頻道搜索

設置完語言後，將進行頻道搜索，採取數碼廣播頻道自動搜索和類比電視頻道手動搜索的方式：

- 首先開始搜索數碼廣播頻道，採用自動搜索的模式，對 OFTA 規範的頻點先進行搜索，然後再掃描其它頻點；在搜索過程中，您可選擇跳過數碼廣播搜索（例如發現已經搜索到所有的數碼頻道後，可直接跳出）

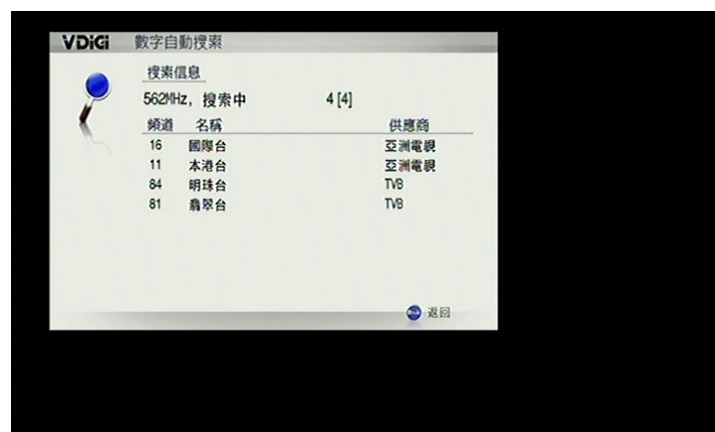

- 完成數碼廣播搜索後，直接進行類比電視頻道的搜索，搜索從 47MHz 開始，直到搜索到第一個頻道時，將暫停下來讓您對畫質進行微調，直到達到理想的效果；之後的搜索將改為自動進行，以加快搜索進度。

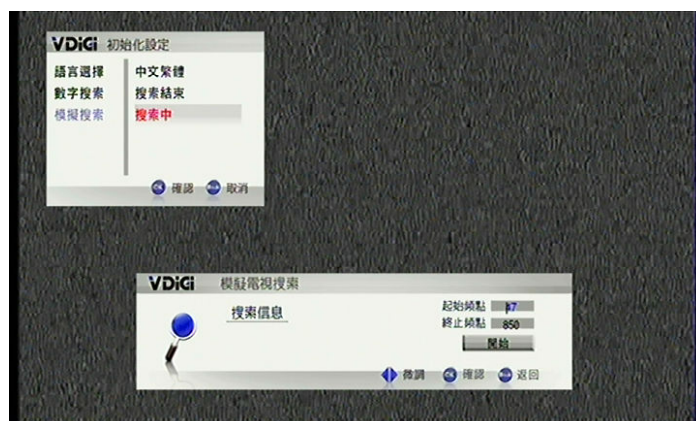

- 搜索到的類比頻道號從 101 開始。

搜索完成後，直接進入頻道觀看

注：搜索完成後，使用 list 顯示當前的所有頻道信息，並進行修改；

5. 功能介紹


5.1 電視收看

5.1.1 收看方法

-  使用頻道 CH+ 、CH-按鍵快速切換頻道；



- 如果已知道頻道號碼，直接輸入，可切換頻道


-  使用內置的電子節目表流覽並選擇頻道；

5.1.2 電子節目表 (EPG)


電子節目表又稱為電子節目指南，對於隨後幾天 VD-R 將要播出的節目，提供一個簡單易懂的嚮導。



在 EPG 中按藍色鍵將顯示當前播放頻道節目的信息；

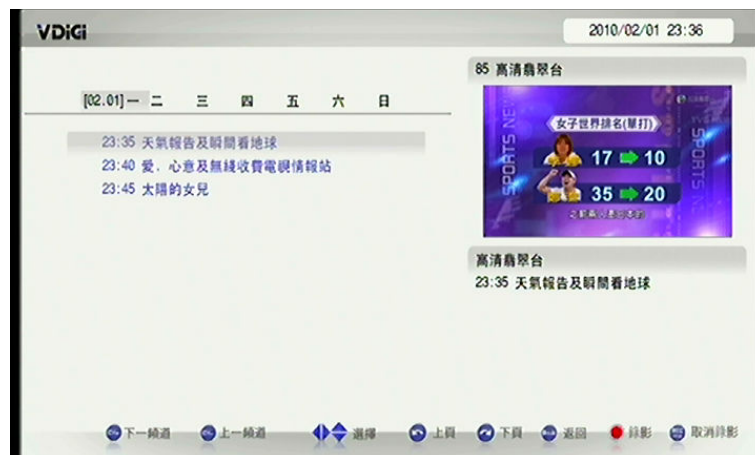

在 EPG 節目表狀態下，通過遙控器按鍵可實現諸多功能：

-  打開/關閉 EPG 介面
-   節目切換
-   查看前一天/後一天的頻道節目資訊
-   在 EPG 模式時上下切換頻道
-  確認頻道的切換
-  在節目列表中翻到上一頁
-  在節目列表中翻到下一頁
-  當選中某個節目後，按壓此鍵可以添加錄影，同時在這個節目的清單前面會顯示錄影標誌。
-  取消錄影
-  關閉 EPG 介面

5.1.3 節目資訊

-  您收看節目時，如果想瞭解正在收看的節目的資訊，可以按此鍵。



5.2 錄影

使用 VD-R 您可以採用多種簡單易用的方式錄影電視節目：可以即時錄影正在觀看的節目，可以在主選單中新增錄影任務，還可以在電子節目表中添加錄影。

5.2.1 即時錄影

要錄影正在收看的節目非常簡單-只要按遙控器上的  就可以了。系統

將會顯示下列選項，供您選擇，可通過再次按  直接錄影當前節目。




5.2.2 從電子節目表中設定錄影

錄影未來播出節目的最快方法是在電子節目表中找到並選中這些節目，然

後按遙控上的  按鍵。一個錄製標識將會被顯示在設定了預約錄影的節目旁邊。


如果您想取消錄影，您只需要選中該節目並按遙控上的  按鍵就可以了。

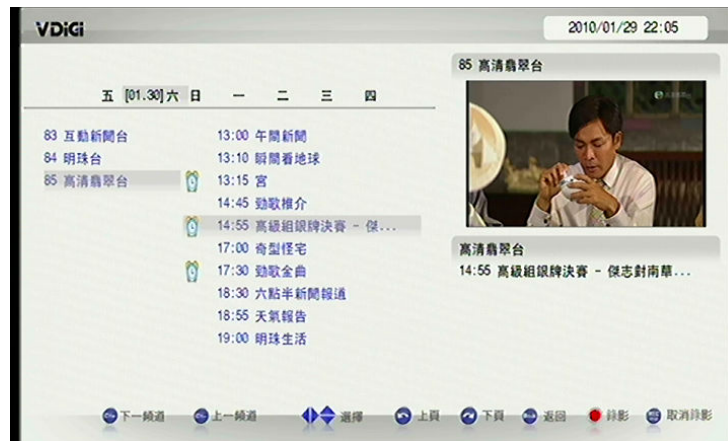

5.2.3 從主選單預約錄影

選擇主選單 > 錄影管理 > 新增錄影任務，可以新增一個錄影任務，預約錄影不僅可以錄製數碼廣播節目，也可以錄製類比電視節目和從其它設備輸入的類比音視頻節目。

通過介面可以選擇頻道，日期，時間，錄影長度，存儲模式，錄影畫質，錄影模式和影片類型。

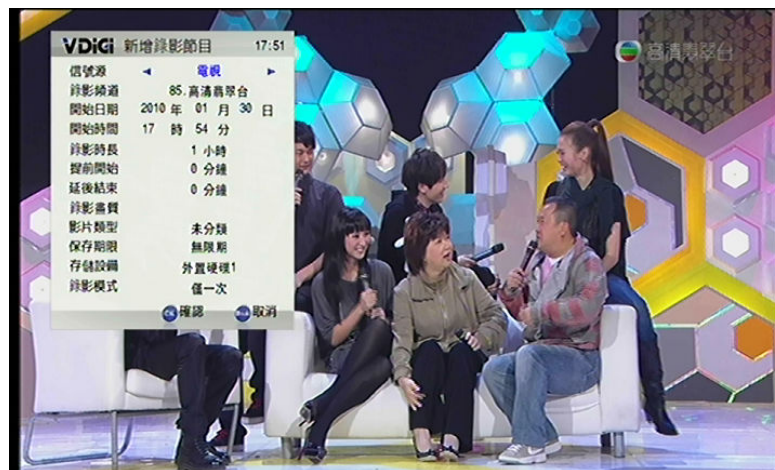

註：



1) 在錄影過程中，您可以按終止錄影。



2) 在 info 顯示中，按（紅色鍵）顯示錄影進度資訊

5.2.4 修改錄影設置

修改錄影設置：在 MENU 主選單 > 錄影管理 > 修改錄影節目 中可以對已經配置的錄影任務進行修改。



您可以選擇某個錄影任務，然後對其進行修改，修改的主要選項包括：輸入源，錄影頻道，開始日期，開始時間，錄影時長，提前開始時間，延後結束時間，錄影畫質，影片類型，保存期限，存放裝置和錄影模式。同時也可以對列表中的錄影任務進行刪除操作。修改結束後，可以選擇退回到上一頁面繼續操作，或直接退出到直播視頻。



5.2.5 錄影衝突處理

因為 VD-R 在某一特定的時間只能錄影有限的頻道，本設備將檢查新的錄影設定或已經設定的預約錄影進行的更改會否導致重疊。如果 VD-R 檢測到這類重疊或衝突時，系統會要求彈出如下介面，讓您作出選擇處理。



衝突處理完成後，按壓 BACK 鍵退回到前一頁面。

5.2.6 錄影所需的其它提示

- 錄影設備的檢測

在即時錄影和預約錄影開始前 5 分鐘，VD-R 將檢測用戶設置的錄影設備，如果發現錄影設備不存在，VD-R 將給出提示，請用戶插入設備或者取消錄影。

- 硬盤移除

在拔出內置硬碟或外置硬碟前，需要先行硬盤移除，以防止對錄影機或硬碟本身造成損壞。

- 硬碟格式化

在初次使用硬碟時，需先行對硬碟進行格式化。

5.2.7 錄影播放

選擇主選單 > 錄影播放，進入錄影播放介面，選擇需要播放的節目進行播放。



5.2.8 錄影設定

錄影設定中包含錄影相關選項的設置值。

- 定時開機錄影

在這裡打開或關閉定時開機錄影功能

- 輸入
在這裡根據您的視訊訊號接入源進行設定，包括 DIGITAL（數位信號輸入）、ANALOG（類比信號輸入）、INPUT1（色差音視頻輸入 YPbPr）、INPUT2（S-Video 或後面板分量音視頻輸入）和 INPUT3（前面板音視頻輸入）。
- 品質
對於類比信號的錄影，VD-R 支持四種不同畫質：XP 表示高畫質模式，SP 表示標準畫質模式，SLP 表示超長時間播放模式，SEP 表示超延長時間播放模式，可以設定相關的錄影畫質模式。
- 時長
這裡可以設定錄影的時長。
- 硬碟 HDD
VD-R 內置了一個硬碟，主要用於錄影功能，預設狀態下選擇內置硬碟，同時 VD-R 有兩個 USB 介面，可以外接外部存放裝置，如果您需要外置硬碟進行錄製節目時，可以選擇設定相關的錄影硬碟。
- 模式
可以根據自己的需要選擇缺省的錄影頻率模式。
- 類型
可以設置缺省的錄製節目的類型。
- 錄影結束關機
這裡當選擇開啓選項，在錄影結束後，系統會自動關機，或者選擇關閉選項，在錄影結束後，系統仍然處於開機狀態。
- REC 按鍵處理
這裡包括兩個選項：一按即錄 和 錄影管理 。選擇一按即錄，按 REC 鍵後立即錄影；選擇錄影管理，按 REC 鍵後修改錄影選項。

6. VD-R 設定

選擇 MENU 主選單 > 設定，進入設定選項，在這裡您可以完成 VD-R 大部份的功能設定及查看產品資料，包括產品資訊、關於 V Digi、使用者設定、頻道搜索。

在設定狀態下，遙控器的主要功能按鍵如下：

-   按壓這兩個按鍵在上一級頁面和下一級頁面之間進行切換
-   按壓這兩個按鍵在不同的功能選項之間進行選擇以及完成功能選項的設定
-  按壓這個按鍵對所選的功能選項進行確認選擇

6.1 用戶設定

6.1.1 視頻輸出

■ 解晰度設定

香港數位地面廣播的廣播頻率為 50Hz，所以我們推薦選擇上面選項清單中頻率為 50Hz 的視頻制式。但是，某些電視機（可能來自日本或美國）可能不能正確接收 50Hz 的信號。這種情況下，請選擇頻率為 60Hz 的選項。

-**S-Video** 和複合視頻輸出端子都是只能支援標清輸出，如果您使用的是這兩個輸出端子，您可以選擇 NTSC 制式。

-色差視頻輸出端子最高輸出格式為 1080i，所以如果您選用的是色差視頻輸出端子，推薦選擇 1080i_50Hz 或 1080i_60Hz。

-HDMI 最低輸出格式為 480p 或 576p，如果您選用的是 HDMI，推薦選擇 1080P_50Hz 或 1080P_60Hz

■ 高清分量設定

高清分量格式包括 RGB 和 YPbPr 兩個選項，如果您使用的電視機採用色差視頻輸出方式，推薦設定為 YPbPr，如果是其他輸出方式，如分量視頻輸出，可以設定為 RGB。

■ 亮度設定

可以使用這個選項調整到滿意的亮度。

■ 對比度設定

可以使用這個選項調整到滿意的畫面對比度。

■ 色彩設定

可以使用這個選項調整到滿意的畫面色彩。

■ 顯示比例

顯示方法包括 AUTO、ZOOM、BOX、PANSCAN 和 FULLSCREEN 幾個選項。

香港數位地面電視頻道通常是以 16:9 闊屏格式進行廣播，如果節目是 4:3 的格式，則節目畫面的兩側將會出現黑邊。

這時您可以使用這個選項調整去除這些黑邊，以獲得滿意效果。或者使用按鍵 ASPECT 在這幾種顯示方式之間切換。

6.1.2 音訊輸出

■ HDMI 音訊

HDMI 可以用一根線傳輸高品質的視頻和音訊，所以它既方便使用，又能夠提供高品質的音視頻輸出，是很多追求高清用戶的理想選擇。這裡您可以選擇 PCM 或 Bitstream(連接含 hdmi 輸入端子的擴音機使用)格式。

■ SPDIF 音訊

如果您打算通過數碼音訊輸出端子將音訊信號單獨發送到 AV 擴音機，您可以使用 S/PDIF 音訊輸出。預設情況下，為保持與電視機的

最大相容性，數碼音訊以 PCM 格式輸出。當然您可以根據自己的喜好採用不同的格式。這裡有 PCM 和 Bitstream 可供選擇。

6.1.3 介面

■ 語言選擇

在這裡選擇介面語言選項，可以根據需要設定不同的語言類型，有英語（ENGLISH）、繁體中文（CHI）可供選擇。

■ 介面透明度

這裡您可以根據自己的喜好設定介面的透明度。

■ 無操作停留

選擇無操作停留選項，設定介面停留時間，無操作停留是操作介面在沒有遙控器輸入和沒有按壓前面板按鍵的情況下，在視頻上停留的時間。有 0 秒、5 秒、10 秒、15 秒、20 秒、25 秒和 30 秒幾種選擇。

6.1.4 顯示板

■ 背光燈

選擇這個選項設定背光燈的顯示方式，有始終開啓、始終關閉和在操控 VD-R 時亮起。

■ 背光燈待機時

選擇這個選項設定 VD-R 在待機時是否開啓（ON/OFF）。

■ 待機時間顯示

選擇這個選項設定 VD-R 待機時 VFD 是否有提示時間資訊。

6.1.5 出廠設定

選擇這個選項恢復 VD-R 出廠時的參數。

6.2 頻道

6.2.1 數碼電視自動搜索

選擇這個選項後，VD-R 將自動對數碼廣播頻道進行搜索，搜索從

474MHz 到 858MHz 範圍內的所有頻道，待搜索完畢後，按 EXIT 鍵直接退出 MENU 主選單介面，視頻將直播剛剛搜索到的電視頻道。

6.2.2 數碼電視手動搜索

選擇手動搜索選項，進入手動搜索介面，焦點將停留在起始頻點選框，輸入您想要搜索的頻點，然後按開始按鈕開始搜索，搜索到的頻道資訊會顯示在介面的清單方塊中。

6.2.3 類比電視手動搜索

搜索從 47MHz 開始，直到搜索到第一個頻道時，將暫停下來讓您對畫質進行微調，直到達到理想的效果；之後的搜索將改為自動進行，以加快搜索進度。

6.2.4 頻道表設定

選擇頻道表設定選項，進入頻道清單介面，您可以根據介面下方的提示資訊對頻道清單中的頻道進行管理。

頻道清單介面的按鍵主要功能包括：

-  （紅色鍵）列出搜索到的所有頻道資訊，並顯示在頻道清單方塊中
-  （綠色鍵）列出所有標注為喜愛的頻道資訊，並顯示在頻道清單方塊中
-  （黃色鍵）選中某個頻道，確定是否標注為喜愛的頻道，如果標注為喜愛的頻道，該頻道後面會顯示 Y 的標記
-  （藍色鍵）修改頻道號

您也可以按遙控器 LIST 鍵進入頻道清單介面，然後可以流覽頻道資訊。再次按 LIST 鍵退出頻道清單介面。

6.3 VDigi 設定

6.3.1 升級方式

首先要到 VD-R 官方網站上 (www.vdigi.com.hk) 下載升級檔到 USB 中，然後插到 VD-R 前、後面板的 USB 埠上，最後啟動 VD-R 並按壓 VD-R 前面板的 PLAY/PAUSE 鍵，即可啟動升級。

6.3.2 網站

進入這個介面顯示的是 VD-R 的官方主頁。

6.3.3 服務中心

進入這個介面顯示的是 VD-R 的服務電話。

6.4 產品資訊

選擇這個選項可以查看 VD-R 的產品資訊。

7. 故障排除

- i) VD-R 前面板背光燈及 VFD 熄滅並不能透過按電源鍵開啓 VD-R:
檢查是否已接駁並開啓相關電源
- ii) 沒有影像:
 - a) 檢查影像連接線有沒有正確和牢牢地接上
 - b) 檢查有沒有開啓 VD-R 電源
 - c) 檢查有沒有開啓電視並選擇了適當的信號源
- iii) 沒有聲音:
 - a) 檢查聲音連接線有沒有正確和牢牢地接上
 - b) 調整電視機和 VD-R 到適當的音量
- iv) 畫面影像不好:
 - a) 檢查是否正確接上天線

- b) 檢查天線是否牢牢地接上
- c) 檢查由牆身連接到 VD-R 的天線是否過長
- d) 更換一條質量較好的天線連接牆身到 VD-R
- e) 與大廈管理聯絡及查詢大廈天線質量
- v) 遙控器不能使用:
 - a) 檢查電池是否正確裝上
 - b) 更換電池
 - c) 在 7 米範圍內使用遙控器
 - d) 檢查遙控器與 VD-R 前面板上有沒有障礙物

註: 如果問題持續或有其他問題, 請聯絡 VDigi (28611109)或與零售商聯絡

1. Safety Warnings

Please read the user manual before operating and pay attention to the following items:

- Make sure the power adaptor is disconnected before cleaning the unit. Do not touch the power cord with wet hand. Use a slightly damp, lint-free cloth to clean the unit. Do not use chemicals like benzene, alcohol, gasoline.
- When abnormal phenomena such as smoke, abnormal sound, smell occur, stop using the unit. Switch off the device and unplug the power adaptor immediately.
- To prevent lightning damage, disconnect the AC power plug when there is an electrical storm.
- Do not place heavy objects on the unit. Avoid heavy collisions.
- Place the unit horizontally on smooth surface in a well-ventilated area. Do not block the ventilation openings with objects such as tablecloth.
- Keep the unit away from heat radiation objects such as fire or direct sunlight.
- Keep the unit away from strong magnetic and electric field.

2. Understanding VD-R

2.1 Features of VD-R

VD-R is capable of processing and recording various audio and video signals. It is also equipped with comprehensive recording functions:

- processes Digital Multimedia Broadcast – Terrestrial (DMB-T) signals and enables viewing of High Definition (HD) Digital Terrestrial Television (DTT) programmes
- allows recording of HD DTT programmes
- allows viewing and recording of analogue TV programmes
- allows viewing and recording of analogue video signals

2.2 Using the Remote Control


The VD-R remote control enables you to enjoy smart and prompt operation. 3 units of the buttons on the remote control can enhance full use of the device by learning to control your TV set.

Inserting the Batteries into the Remote Control

- Push in the ridged area of the battery cover and slide the cover down.
- Insert 2 AAA batteries (supplied) by matching the + and – marks on the batteries to the + and – marks in the battery compartment.
- Replace the battery cover.

If the batteries are working and are inserted correctly, the LED indicator will flash when any button on the device is pressed.


The buttons on the remote control:

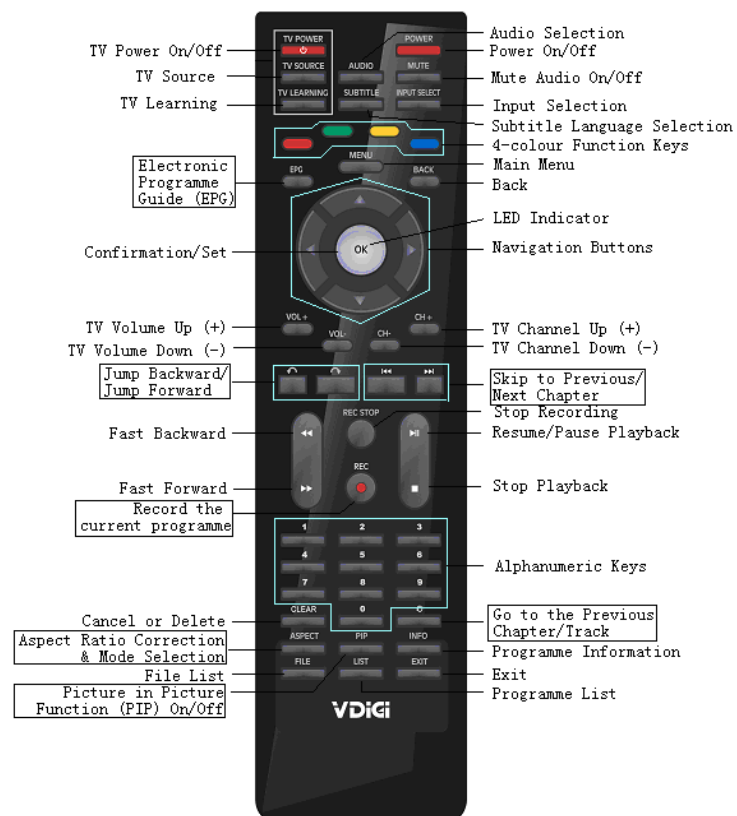

Programming the Remote Control

Step 1:

Place the VD-R Remote Control and the TV remote control on the same surface, 3cm apart and with the emitters facing each other.



Step 2:

Press and hold the **TV LEARNING** button for 2 seconds until the LED Indicator flashes

slowly.

The VD-R Remote Control is now in Learning Mode.

Step 3:

Press the button you want to programme (the  for example) and the LED Indicator will light.

Step 4:

Press and hold the corresponding button on your TV remote control (the power button in this case) until the LED Indicator turns off.

Step 5:


After 2 seconds, the LED Indicator will flash slowly again. Repeat steps 3 and 4 for each button you want to programme.

Step 6:

When finish programming the VD-R Remote Control, press the  button to exit Learning Mode.

To restore factory setting of the buttons, press and hold the  button and the Red button on the lower left corner for 2 seconds until the LED Indicator flashes slowly, then press the OK button.

2.3 Rear Panel

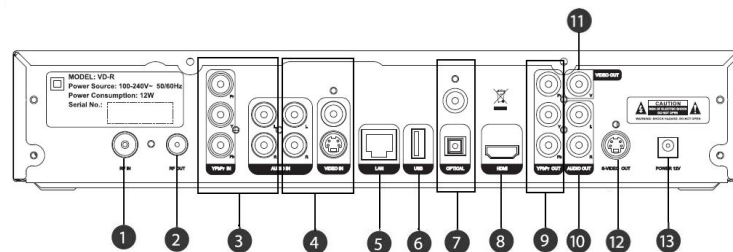

1 Antenna In

Connect this input with a coaxial RF cable to allow VD-R to receive DTT and analogue signals.

2 Antenna Out (Loop Out)

Link this output to another device with the Aerial/Antenna extension cable if you wish to retain analogue TV reception (on your TV for example).

3 Audio & Video Input1 (YPbPr/ Audio L/R)

This allows VD-R to receive, play and record analogue signals.

4 Audio & Video Input2

This allows VD-R to receive, play and record analogue signals.

5 Ethernet Network

This connection links VD-R to your home network (reserve for future's use)

6 USB

This supports exporting recordings on an external USB hard disk and can update VD-R to the latest software.

7 Digital Audio Output

Provides Multi-channel digital audio to your surround sound system

8 HDMI

This provides a pure digital connection for HD video and audio all in one cable.

9 YPbPr Output

This output provides an excellent quality analogue video connection (connect to the TV has no HDMI interface)

10 Analogue Stereo Audio Output

Connect the left/right audio cables to this output for analogue stereo sound.

11 Composite Video Output

This output is the most basic video connections and is Standard Definition only.


12 S-Video Output

This output offers a higher quality signal than composite for Compatible equipment but is Standard Definition only.


13 DC Power Input

This input should be attached with the included 100-240V AC auto-ranging power adaptor. See "Safety Warnings" before operating the unit.

2.4 Front Panel Display

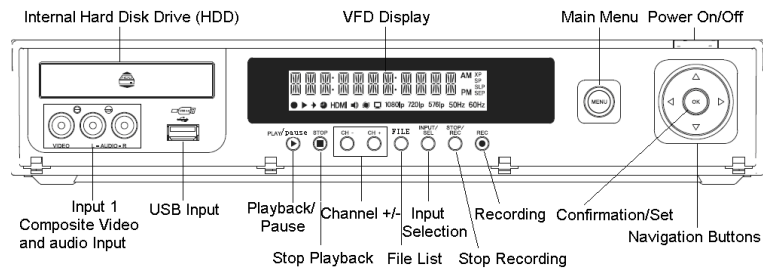

XP: Lights up when High Picture Quality recording mode is registered or a High Picture Quality recording is being played.
 SP: Lights up when Standard Play mode is activated or a Standard Play Quality recording is being played.
 SLP: Lights up when Super Long Play Mode is set.
 SEP: Lights up when Super Extended Play Mode is activated.

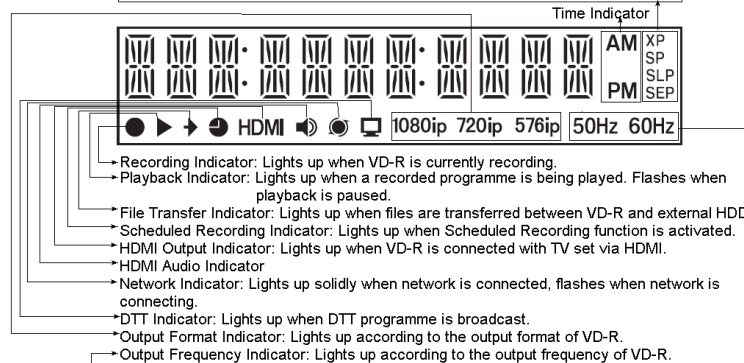


3. Connection and Installation

3.1 Antenna Connections


3.1.1 Direct Antenna Connection

Connect VD-R to your antenna using the Ant. In connector. A roof-mounted antenna is recommended for best reception.

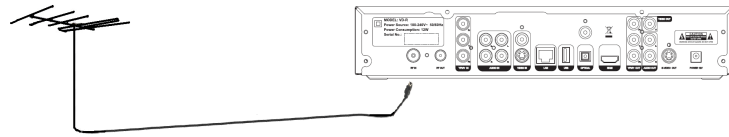


3.1.2 Antenna Loopthrough Connection

VD-R supports antenna loopthrough connection. To retain analogue TV reception on TV or on any other devices with a TV tuner (VCR or DVD recorder for example), connect the extension cable to the loop out connector of VD-R and to the Antenna In on your other device. VD-R is recommended as the first component on the chain and TV as the last component.

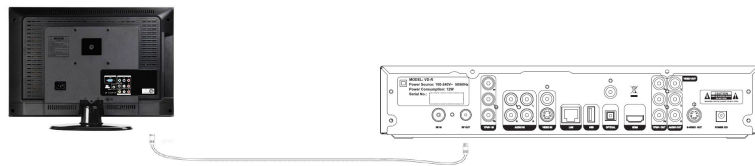


3.2 HDMI Television Connection

VD-R supports HDMI Output which is the highest quality video output. Simply connect the HDMI Output from VD-R directly to one of the TV's HDMI Input.

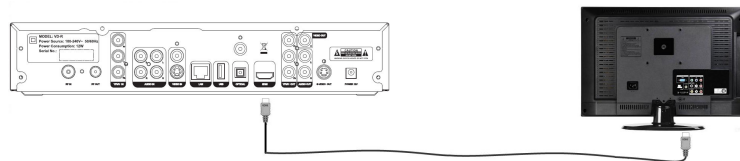


3.3 Composite Video Connection

In order to get Standard Definition video from VD-R without HDMI and YPbPr, Composite Video must be used. Simply connect the Composite Out from VD-R directly to one of the TV's Composite Inputs. As Composite does not convey audio signal, a separate connection is needed to connect the Video/L/R Output from VD-R to the TV's Video/L/R Input.

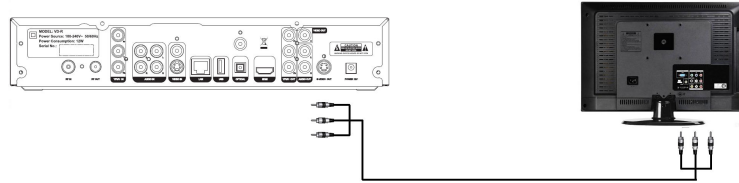


3.4 S-Video Connection

S-Video is an analogue signal. In order to get Higher Definition video from VD-R without HDMI, simply connect S-Video Output from VD-R directly to one of the TV's S-Video Inputs. As S-Video does not convey audio signal, a separate connection is needed to connect the Audio/L/R Output from VD-R to the TV's Audio/L/R Input.

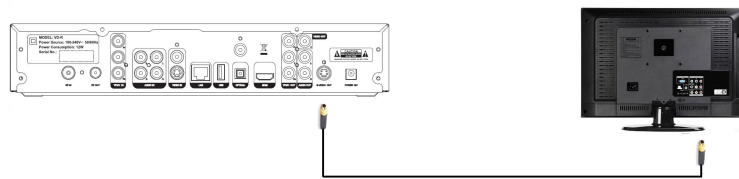


3.5 Component Video Connection

To obtain a very high quality High Definition image from VD-R without HDMI, Component is needed. Simply connect the YPbPr Output from VD-R to one of the TV's Component or YPbPr Inputs. As Component does not convey audio signal, a separate connection is needed to connect the Audio/L/R Output from VD-R to the TV's Audio/L/R Input.

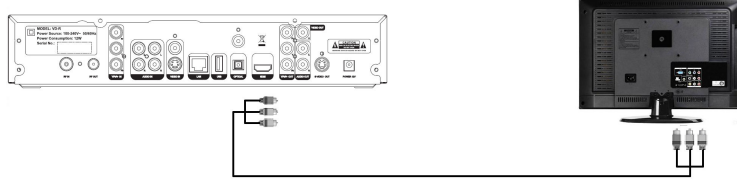

3.6 Audio Connection

Simply connect the Stereo Audio Output from VD-R directly to one of the TV's Audio Inputs.

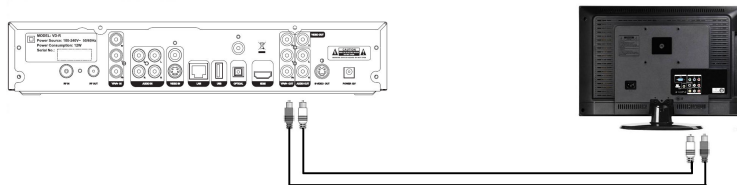


3.7 Amplifier Connection

VD-R provides both Coaxial and Optical Digital Audio Outputs. Use whichever is more convenient.


3.7.1 Connecting to Amplifier – Coaxial Audio Output

Connect the Coaxial Output from VD-R to the Coaxial Input of the amplifier with the Coaxial Audio Cable.

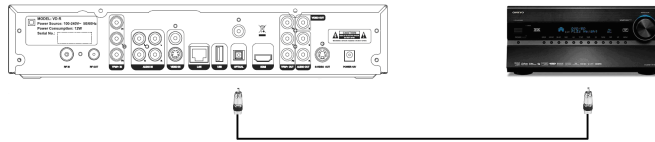

3.7.2 Connecting to Amplifier – Optical Digital Audio Output


Connect the Optical Digital Audio Output from VD-R to the Optical Digital Audio Input of the amplifier with the Optical Digital Audio Cable.

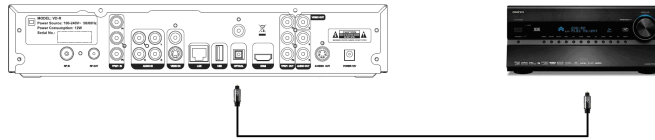


3.8 Other Options for Audio & Video Input Source

YPbPr, Audio IN and Video IN on the rear panel are for VD-R's Audio/Video Input. They are separated into 2 groups.


Component Video and Audio L/R Inputs are in 1 group on the left namely Input 1:

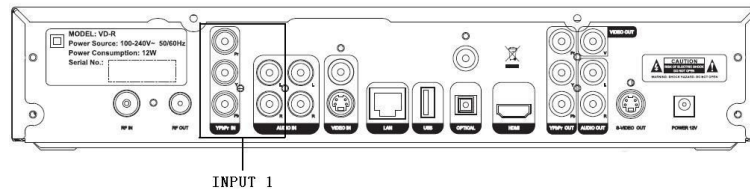

S-Video/V and L/R Inputs are in 1 group on the right namely Input 2:

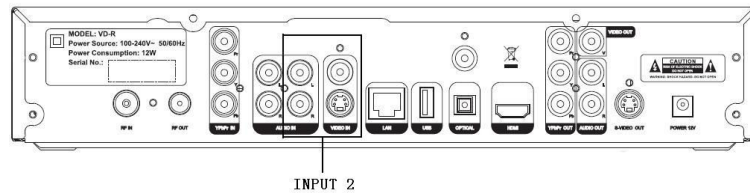


V and L/R Inputs are in 1 group on the front namely Input 3:

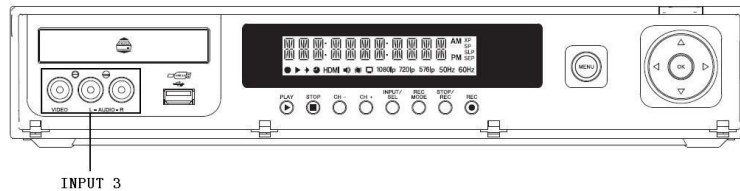

There are 3 ways to record the Audio/Video signals from other external devices (HDTV decoder for example):

3.8.1 S-Video Connection (Input 2)

Connect S-Video Output of other external device to S-V Input of VD-R. As S-video does not convey audio signal, a separate connection is needed to connect the Audio/L/R Input from VD-R to the external device's Audio/L/R Output.




Other external device (HDTV decoder)

VD-R

3.8.2 Composite Video Connection (Input 3)

Connect the Composite Video Input from VD-R (V) to the Composite Video Output of other external device. As Composite Video does not convey audio signal, a separate connection is needed to connect the Audio/L/R Input from VD-R to the external device's Audio/L/R Output.




Other external device (HDTV decoder)

VD-R

3.8.3 Component Video Connection (Input 1)

Connect the Component Video Input from VD-R YPbPr to the YPbPr Output of other external device. As Component Video does not convey audio signal, a separate connection is needed to connect the Audio/L/R Input from VD-R to the external device's Audio/L/R Output.




Other external device (HDTV decoder)

VD-R

3.9 Other Setup Options

Network Connection for Interactive Services

Some of the features present in the new MHEG-5 Interactive Services broadcasts require an internet connection (competition entries, voting, subscribing and purchasing for example). An existing Ethernet Network is needed. Simply use a CAT-5 cable to connect the Network Port of VD-R to the network router or hub.

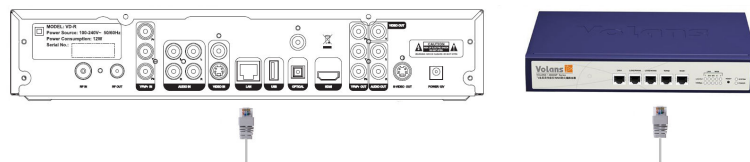

3.10 Power Connection

Connect the power cable to the suitable A.C. power socket and plug 12V D.C. power into VD-R. Do not unplug or cut off power supply or before all the connections are made.

4. Initialization and Configuration

Simple configuration is required upon VD-R's startup to ensure smooth operation. Configuration sequences are shown below.


4.1 Language Setting

Select the preferred language and the interface language will change immediately according to the setting.

4.2 Channel Scanning

Channel scanning starts right after language setting. This can be done by auto DTT channel scan or manual analogue channel scan.


DTT channels are scanned automatically. OFTA frequencies are searched prior to other frequencies. The scan can be stopped at any time and any found channels will be available to view (if all the channels are scanned, you can choose to quit the process).

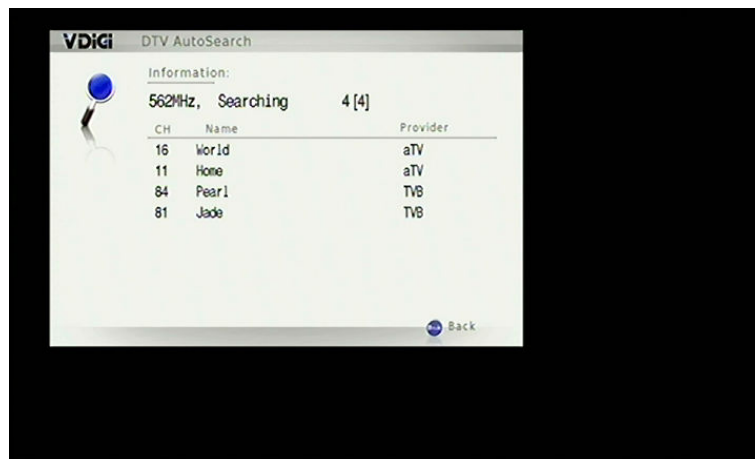

Analogue channel scan starts right after DTT channel scan. It starts at frequency 47MHz and pauses when the first channel is scanned for the fine-tuning of picture quality. The process then resumes and switches to auto mode in order to speed up the process.

Manual analogue channel scan starts at frequency 101.

Enter the channels after the channel scan.

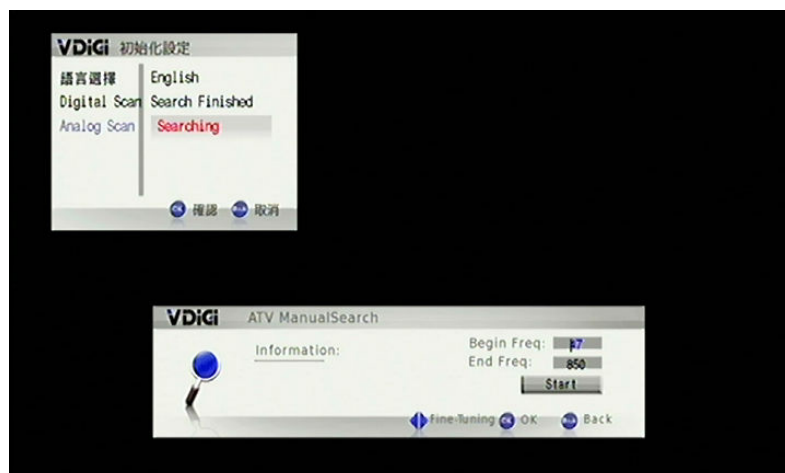

Note: Select “list” to display all the scanned channels. Adjustments can be made.

5. Features of VD-R

5.1 Viewing TV


5.1.1 Simple Operations



Press the CH+/CH- buttons on the Remote Control to change channel quickly.



Enter the channel number directly if known.




Use the built-in Electronic Programme Guide (EPG) to browse and select a channel.

5.1.2 EPG

The EPG provides an easily understandable guide to what's showing on VD-R over the next few days.



On the EPG Menu, press the Blue button to display the information on the current channel.

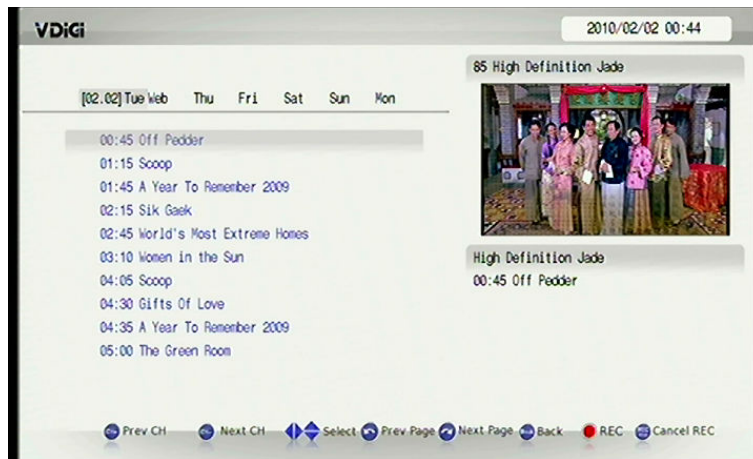

On the EPG Menu, various functions can be performed by the Remote Control.

-  Open/Close EPG interface
-   Channel Switch

-  Browsing channel information on the previous and the coming days
-  Channel up/down on the EPG Menu
-  Confirm Channel Switch
-  Go to the previous page of the Programme List
-  Go to the next page of the Programme List
-  Press and record the selected programme. The Record Indicator will be displayed on the programme list.
-  Stop Recording.
-  Close EPG Interface.

5.1.3 Channel Information

 To view the current programme information, press .



5.2 Recording

With VD-R, you can easily record a programme by Instant recording, adding Scheduled Recording task on Main Menu or EPG Menu.

5.2.1 Instant Recording

To record the programme currently being viewed, simply press . Various

options will be displayed, press  again will record the current programme directly.




5.2.2 Scheduling Recording on the EPG Menu

To record a future programme, the easiest way is to select the preferred

programme on the EPG Menu and press . A Recording Sign will be displayed next to the selected programme.

To cancel a Scheduled Recording, simply press

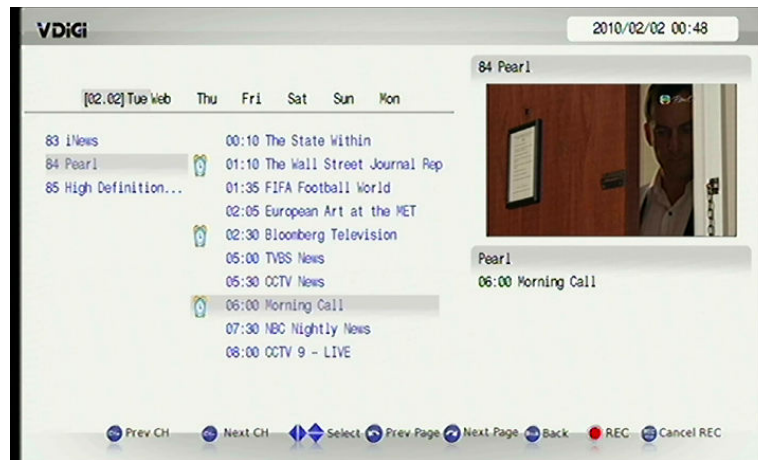

5.2.3 Scheduling Recording on the Main Menu

Main Menu>REC Management >Add REC Prog. Scheduled Recording can be applied to both DTT and analogue TV programmes. Programmes input from other external devices can also be recorded. On different interfaces, you can decide the channel, recording date and time, length of recording, storing options, image quality, recording mode and video format.



Note:




1) Press  to cancel recording while recording .

2) On the "Info" interface, press  (Red button) for Recording details.

5.2.4 Editing Recording Settings

Main Menu> REC Management> **Amend Pre-REC Prog**

The settings of the Scheduled Recordings can be modified.

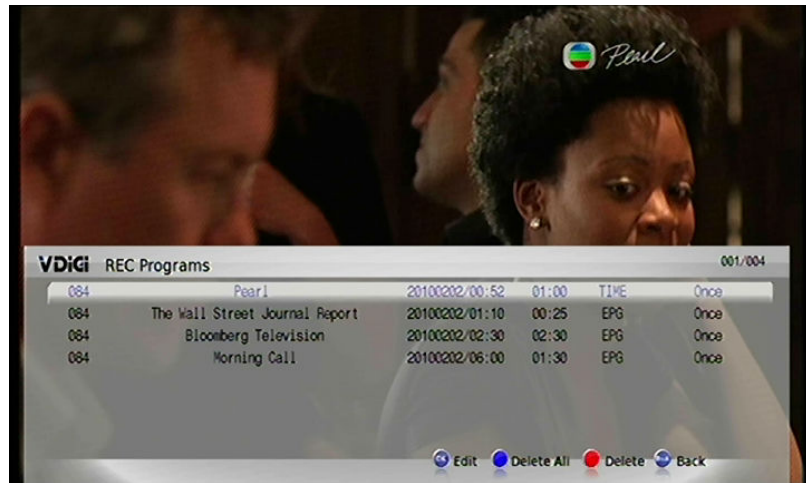


Selected Scheduled Recordings can be modified. These modifications include input source, channel, start time, length of recording, extend start time, delay end time, image quality, video format, length of time for keeping recordings, storage options and recording mode. Selected Scheduled Recording can be cancelled. You can either go back to the previous page or to the TV Live View interface upon confirmation of modifications.



5.2.5 Recording Priorities and Conflicts

VD-R can process limited number of recording tasks at a time. The Recording Conflicts Manager will check if any new recordings or changes to a Scheduled Recording cause an overlap. If an overlap or conflict is detected, a message will appear asking you to set the priority for that programme.

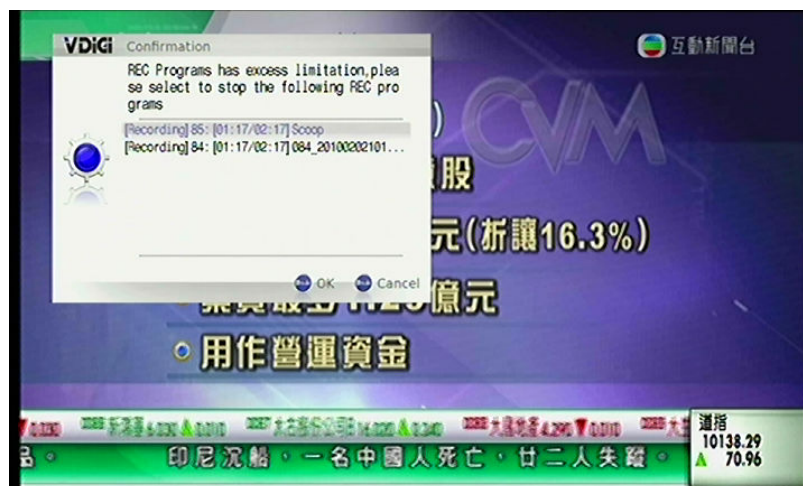

Press “BACK” upon the confirmation of modifications.

5.2.5 Other Reminders for Recording

- Checking the Recording Devices

5 Minutes before Instant and Scheduled Recording, VD-R will automatically check the settings of recording device. If there is an absence of recording device, a message will appear asking you to insert the necessary device or cancel the Recording.

- Remove HDD

To prevent any damages to VD-R or the HDD itself, unload the HDD before removing the internal or external HDD.

- Format HDD

HDD formatting is required upon the first use.

5.2.6 Play Program

Main Menu > Play Program. Enter the Recording Playback interface and select a recorded programme you wish to play.



5.2.7 REC Setting

All the Recording-related settings can be made on this interface,

- **Auto On For REC**
Activate or deactivate the Timer function on this interface.
- **Input Source**
On this interface, you can decide different video input including Digital, Analogue, Input 1 (Component Audio/Video Input YPbPr), Input 2 (S-Video or Composite Audio/Video Input on the rear panel) and Input 3 (Composite Audio/Video Input on the front panel).
- **Picture Quality**
For analogue TV recording, VD-R supports four different types of recording mode with different picture quality. XP represents High Picture Quality recording mode, SP represents Standard Play mode, SLP represents Super Long Play Mode and SE represents Super Extended Play mode.
- **Interval**
Length of Recording can be set on this interface.
- **HDD**
VD-R is equipped with an internal HDD for recording storage and is the default storage driver. There are two USB terminals for external HDD. If you want to record programmes on an external HDD, please select the related storage device in the REC Setting
- **Mode**
You can choose the Recording Mode according to your needs.
- **Format**
You can choose the Recording Format according to your needs.
- **Auto Off After REC**

If Auto Standby is switched on, VD-R will automatically turn to stand-by after a recording has been made.

REC Key Management

The REC button can either be set as a shortcut to Instant Recording or Recording Manager. If it is a shortcut to Instant Recording, Recording starts immediately when it is pressed. And if it is a shortcut to REC Management, the Recording settings can be modified once it is pressed.

6. Setting

On the Main Menu > Setting, and enter the configuration interface. Most of the function config can be made on this interface. You can also browse the product information including product updates, details of V Digi, user configuration and channel scanning.

On the Configuration interface, the Remote Control performs these functions:

-   Press these buttons to go to the previous page or the next page.
-   Press these buttons to select different the options on the menu.
-  Press this button to confirm modification or selection.

6.1 User Setting

6.1.1 Video Output

■ Resolution

The DTT frequency in Hong Kong is 50Hz and is recommended as the default setting. However, some TV sets (maybe imported from Japan or the

United States) cannot support 50Hz broadcast. 50Hz broadcast frequency is widely used among HongKong. We recommend user to set its frequency at 50 Hz. Some Television do not work at its best at 50 Hz (Imported Television from Japan or North America). Under this circumstance, it is advised to adjust the frequency to 60 Hz

S-Video and Composite Video Output only support Standard Definition Output. Please select NTSC mode if you are using either one of these Outputs.

Component Video Output only supports Recording format up to 1080i. It is recommended to select 1080i_50Hz or 1080i_60Hz.

HDMI Output format is least with 480p or 576p. It is recommend to choose 1080p_50Hz or 1080p_60 Hz

■ Color Space

HD Component format includes RGB and YPbPr Outputs. If the TV is working with Component Video In, it is recommended to select YPbPr as the format.

■ Brightness

Adjust the brightness according to your preference.

■ Contrast

Adjust the contrast according to your preference.

■ Colours

Adjust the image colours according to your preference.

■ Aspect Ratio

You can select different Playback Modes including Auto, Zoom, Box, Panscan and Fullscreen. 16:9 widescreen format is commonly used for DTT broadcast in Hong Kong. If 4:3 format is selected, the black bars will

be included in the image on the side of the screen.

in order to obtain the best view, the Aspect Ratio Correction can be used to remove these black bars or you can simply press the ASPECT button for the change of aspect ratio.

6.1.2 Audio Output

■ HDMI Audio

HDMI is unique that it can transmit both video and audio along the same cable. It is very commonly used among HDTV users as it offers high quality audio output and is convenient to use.

You can choose either PCM or Bitstream format (connected to an amplifier with HDMI input).

■ S/PDIF Audio

S/PDIF Audio Output can be used for connecting the Digital Audio Output to an amplifier. By default the digital audio is transmitted in PCM format (Bitstream off) for maximum compatibility with TVs.

6.1.3 Interface

■ Language

This menu allows you to choose the language for the VD-R Menu. There are options include English and Traditional Chinese..

■ Transparency

The level of transparency of the Menu can be set here.

■ Menu Time Out

On this interface, you can decide how much time the screen remains ON even the Remote Control is not active or the front panel is laid idle. Options include 0, 5 10, 15, 20 ,25 or 30 seconds.

6.1.4 Front VFD

- Backlight

You can decide whether the backlight of the Front Panel is AlwaysOn, AlwaysOff or only On when VD-R is operating.

- Backlight Standby

You can decide whether the backlight is On or Off when the VD-R is standing-by.

- Time Display

You can decide whether the time display are displayed on VFD when VD-R is standing by.

6.1.5 Factory Default

Resetting all options to the VD-R factory defaults.

6.2 Channel

6.2.1 DTV Auto Search

After entering DTV Auto Search, VD-R will begin scanning for DTT channels. Frequency range from 474MHz to 858 MHz will be scanned. Press the Exit button to quit the Main Menu when scanning is done. The scanned channel will be broadcast automatically.

6.2.2 DTV Manual Search

After entering DTV Manual Search, enter the desired frequency channel and then press "Start", VD-R will list the number and details of channels found.

6.2.3 ATV Manual Search

It starts at frequency 47MHz and pauses when the first channel is scanned for the fine-tuning of picture quality. The process then resumes and switches to auto mode in order to speed up the process.

Buttons used for Manual Channel Scan Interface

-     Navigation Buttons
-  Clear Channel Information
-  Press to Start the Scanning
-  Quit the Scan Interface, Jump to Live TV.

6.2.4 Channel List

Select the Channel List Setup and enter the Channel List Interface. Manage the channels with reference to the following tips:

Main Functions on Channel List Interface

-  (RED) Display all scanned channels.
-  (GREEN) Display favorite channels in the table
-  (YELLOW) Press this button to mark the channel as favorite. A "Y" mark will be displayed next to the selected channel.
-  (BLUE) Channel Editing

Press the button "List" on the Channel List Interface to view the channel information. Press "List" again to quit the Interface.

6.3 VDigi Setting

6.3.1 System Update

To do so, download the new firmware file from www.vdigi.com.hk. Then

insert the USB disk into the rear panel of VD-R when it is switched off.

Switch on VD-R, press and hold the Play/Pause button on the front panel.

Firmware update will begin.

6.3.2 Website

Enter this Interface to enter VD-R's official website.

6.3.3 Customer Services

Enter this Interface to obtain VD-R's customer service hotline number.

6.4 Product information

Enter this Interface to view product information.

7. Troubleshooting

i) Front Panel backlight and VFD is off and VD-R does not power on by pressing the Power Key:

Check if the power supply is connected properly.

ii) No video:

- a) Check whether the video cable is connected correctly and firmly
- b) Check whether VD-R is powered on
- c) Check whether TV is turned on, and TV input mode is correct

iii) No Audio:

- a) Check whether the audio cable is connected correctly and firmly.
- b) Adjust the sound volume of TV and receiver to appropriate.

iv) Video picture is not good:

- a) Check whether the antenna installed properly.
- b) Check whether the antenna is connected correctly and firmly to Antenna In port of the receiver.

- c) Check whether the antenna cable to VD-R is too long.
- d) Change an antenna cable with better quality.
- e) Check with building service agent if needed
- v) Remote Control does not work:
 - a) Check whether batteries are mounted correctly.
 - b) Change the exhausted batteries.
 - c) USE RCU within workable distance (7 meters)
 - d) Remove the hinder between RCU and the receiver.

Note: If the problem remains or if you have problem not listed above, please contact V Digi(28611109) or your sell agent for help.

弘毅有限公司
Winning Perfect Ltd.

香港九龍長沙灣道 833 號長沙灣廣場二期 506 室
Room 506, 5/f, Tower 2, Cheung Sha Wan Plaza,
833 Cheung Sha Wan Rd,
Kowloon, Hong Kong
Tel: 852-28611109
Fax: 852-24116625
Email: info@vdigi.com.hk
Web site: www.vdigi.com.hk