

DENON

AM-FM STEREO/DAB TUNER

TU-1800DAB

OPERATING INSTRUCTIONS

SAFETY PRECAUTIONS



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

DECLARATION OF CONFORMITY
 We declare under our sole responsibility that this product, to which this declaration relates, is in conformity with the following standards: EN60065, EN55013, EN55020, EN61000-3-2 and EN61000-3-3. Following the provisions of 73/23/EEC, 89/336/EEC and 93/68/EEC Directive.

A NOTE ABOUT RECYCLING:
 This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with the local recycling regulations. When discarding the unit, comply with local rules or regulations. Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning chemical waste. This product and the accessories packed together constitute the applicable product according to the WEEE directive except batteries.



Whenever the power switch is in the STANDBY state, the apparatus is still connected on AC line voltage. Please be sure to turn off the power switch or unplug the cord when you leave home for, say, a vacation.

CAUTION:
 To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet. When setting up this product, make sure that the AC outlet you are using is easily acceptable.

NOTE ON USE

 <ul style="list-style-type: none"> Avoid high temperatures. Allow for sufficient heat dispersion when installed in a rack. 	 <ul style="list-style-type: none"> Keep the apparatus free from moisture, water, and dust. 	 <ul style="list-style-type: none"> Do not let foreign objects into the apparatus.
 <ul style="list-style-type: none"> Handle the power cord carefully. Hold the plug when unplugging the cord. 	 <ul style="list-style-type: none"> Unplug the power cord when not using the set for long periods of time. 	 <ul style="list-style-type: none"> Do not let insecticides, benzene, and thinner come in contact with the set.
<p>CAUTION:</p> <ul style="list-style-type: none"> Minimum distances around the apparatus for sufficient ventilation. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.. 	 <p>* (For apparatuses with ventilation holes)</p> <ul style="list-style-type: none"> Do not obstruct the ventilation holes. 	 <ul style="list-style-type: none"> Never disassemble or modify the apparatus in any way.

- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- The use of apparatus in tropical and/or moderate climates.

Getting Started

Contents

Getting Started	
Accessories	3
Before using	3
Cautions on installation	4
Inserting the batteries	4
Operating range of the remote control unit	5
Part names and functions	
Front panel	6
Remote control unit	7
Connections	
Connecting the antenna terminals	8
Cable indications	9
Connecting the amplifier	9
Connecting the power supply cord and RDI	9
Operation	
Listening to FM/AM	
FM Auto preset memory	10
Auto tuning (FM/AM)	11
Manual tuning (FM/AM)	11
Preset stations (FM/AM)	12
Recalling preset stations (FM/AM)	13
RDS (Radio Data System)	13
RDS search	14
PTY search	15
TP search	15
RT (Radio Text)	16
Switching RDS information display	16
Registering station names (FM/AM only)	17
Listening to DAB broadcasts	
About DAB (Digital Audio Broadcasting)	18
Tuning in DAB (Digital Audio Broadcasting) broadcasts	19
Preset stations	20
Recalling preset stations	20
Search mode	
Sorted list search mode	20
Preset search mode	21
Tuning aid	21
Sort mode (Sorting components)	
Alphanumeric	22
S. component	22
PTY	23
Switching the DAB information display	23
DRC (Dynamic Range Control)	24
Last function memory	24
Initialization of the microprocessor	24
Troubleshooting	
Specifications	
DAB frequency table	

Accessories

- Check that the following parts are included in addition to the main unit:

① Operating instructions	1	⑥ R03/AAA batteries	2
② Service station list	1	⑦ AM loop antenna	1
③ Pin-plug cable	1	⑧ FM indoor antenna	1
④ Power supply cord	1	⑨ DAB indoor antenna	1
⑤ Remote control unit (RC-1013)	1		

Before using

As this product is provided with an immense array of features, we recommend that before you begin hookup and operation that you review the contents of this manual before proceeding.

Pay attention to the following before using this unit:

• Moving the set

To prevent short circuits or damaged wires in the connection cords, always unplug the power supply cord and disconnect the connection cords between all other audio components when moving the set.

- **Before turning the Power ON/STANDBY operation switch on**
Check once again that all connections are proper and that there are not problems with the connection cords. Always set the power switch to the standby position before connecting and disconnecting connection cords.

• Store these instructions in a safe place

After reading, store these instructions along with the warranty in a safe place.

- **Note that the illustrations in these instructions may differ from the actual set for explanation purposes.**

Getting Started

Cautions on installation

Noise or disturbance of the picture may be generated if this unit or any other electronic equipment using microprocessors is used near a tuner or TV.



If this happens, take the following steps:

- Install this unit as far as possible from the tuner or TV.
- Set the antenna wires from the tuner or TV away from this unit's power supply cord and input/output connection cables.
- Noise or disturbance tends to occur particularly when using indoor antennas or 300 Ω /ohms feeder wires.

We recommend using outdoor antennas and 75 Ω /ohms coaxial cables.


Note:

For heat dispersal, do not install this equipment in a confined space such as a book case or similar unit.

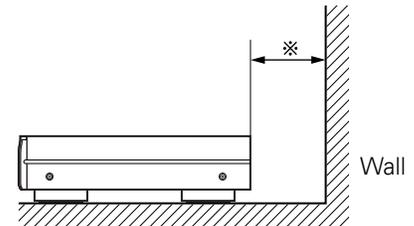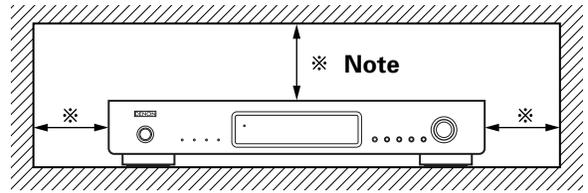


Inserting the batteries


- ① Remove the remote control unit's rear cover.

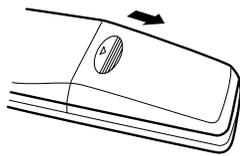

- ② Set two R03/AAA batteries in the battery compartment in the indicated direction.

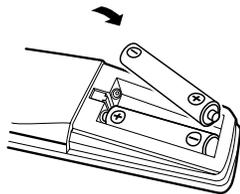


- ③ Put the rear cover back on.

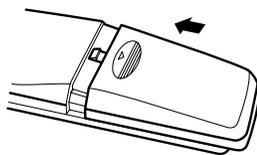

Notes on batteries:

- Replace the batteries with new ones if the set does not operate even when the remote control unit is operated nearby the set. (The included battery is only for verifying operation.)
- When inserting the batteries, be sure to do so in the proper direction, following the " \oplus " and " \ominus " marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
 - Do not use a new battery together with an old one.
 - Do not use two different types of batteries.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- When replacing the batteries, have the new batteries ready and insert them as quickly as possible.

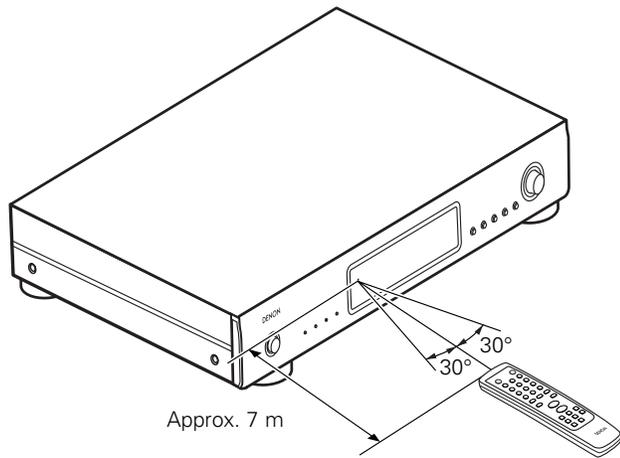Operating range of the remote control unit


- Point the remote control unit at the remote sensor on the main unit as shown on the diagram.
- The remote control unit can be used from a straight distance of approximately 7 meters from the main unit, but this distance will be shorter if there are obstacles in the way or if the remote control unit is not pointed directly at the remote sensor.
- The remote control unit can be operated at a horizontal angle of up to 30 degrees with respect to the remote sensor.

NOTE:

- It may be difficult to operate the remote control unit if the remote sensor is exposed to direct sunlight or strong artificial light.
- Do not press buttons on the main unit and remote control unit simultaneously. Doing so may result in malfunction.
- Neon signs or other devices emitting pulse-type noise nearby may result in malfunction, so keep the set as far away from such devices as possible.

Front panel

- For details on the functions of these parts, refer to the pages given in parenthesis (☞ page 10 ~ 24).

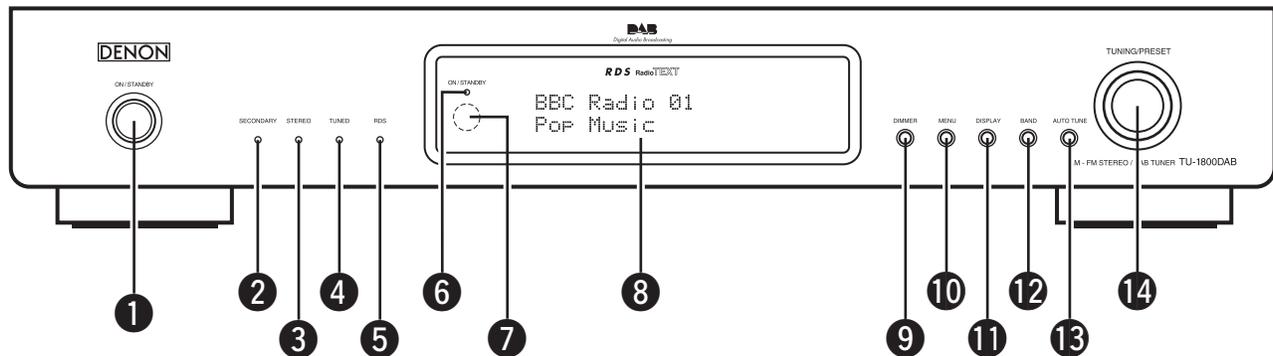

1 Power ON/STANDBY operation switch

The unit works 2 ~ 3 seconds after this switch is turned on. Whenever the **Power ON/STANDBY operation switch** is in the STANDBY state, the apparatus is still connected on AC line voltage. Please be sure to unplug the cord when you leave home for, say, a vacation.

2 SECONDARY indicator

Indicates when a secondary service is available (☞ page 19).

3 STEREO indicator

This lights when receiving stereo broadcasts. It remains off when receiving FM monaural and AM broadcasts.

4 TUNED indicator

This lights when a station is properly tuned in.

5 RDS indicator

This lights when receiving RDS broadcasts, and flashes during the RDS search.

6 ON/STANDBY indicator

This lights when the units status is on and stand by.

7 Remote control sensor

This sensor receives the infrared light transmitted from the wireless remote control unit. For remote control, point the wireless remote control unit to the sensor. Some of the functions can be operated with the remote control unit (RC-1013).

8 Display

9 DIMMER button

The display's brightness switches (in three levels) each time this button is pressed.

10 MENU button

This button to enter/exit menu mode. The unit times out if no operation is performed for about 5 seconds after the menu mode is set.

11 DISPLAY button

This button is used to select the display mode (☞ page 13, 16, 23).

12 BAND button

Selects DAB, FM or MW (AM).

13 AUTO TUNE button

Press to active auto location of all available DAB services. Press once for UK service or hold for longer than 2 seconds to activate an inter national search.

14 TUNING/PRESET knob

Each pass of this knob toggles the operation mode of the TUNING / PRESET knob.

This knob is used in conjunction with the TUNING/PRESET knob.

In the tuning mode the reception frequency is tuned up or down. Turning the control in the clockwise direction tunes the frequency up. Tuning the control in the counterclockwise direction tunes the reception frequency down.

In the preset mode the selection of the preset channel is moved up or down. The auto tuning operation cannot be used when in this mode.


When writing station names, use this control to select the letters (☞ page 17)

MEMO

- Whenever the **Power ON/STANDBY operation switch** is in the STANDBY position, the unit is still connected on AC line voltage. Please be sure to unplug the cord when you leave home for, say, a vacation.
- Noise may be generated if a near-by television set is on during MW (AM), FM, DAB broadcasting reception. The tuner should be used as far away from a television as possible.
- Effective period of memory back-up is about a month under normal temperature.

Remote control unit

- For details on the functions of these parts, refer to the pages given in parenthesis (☞ page 10 ~ 24).

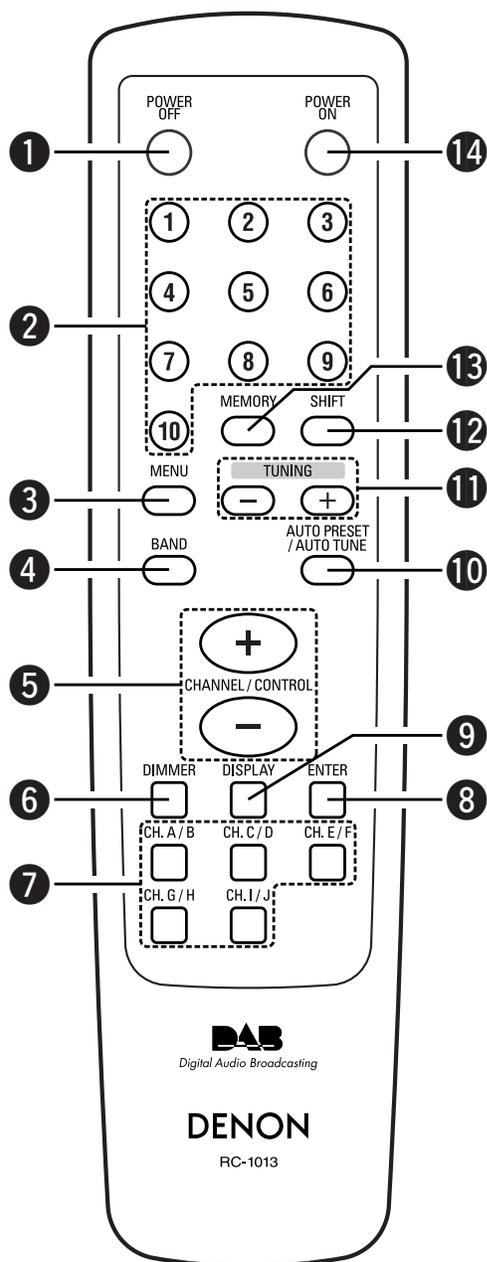

- 1 POWER OFF button**
Press this button to switch from the operating mode to the standby mode.
- 2 Preset channel buttons (1 ~ 10)**
Use these when presenting and recalling stations. Also use these with the **SHIFT**, **MEMORY BLOCK** button to use a total of 200 preset channels (FM/AM 100, DAB 100), A (1 ~ 10), B (1 ~ 10), ... J (1 ~ 10).
- 3 MENU button**
This button to enter/exit menu mode.
- 4 BAND button**
Selects DAB, FM or MW (AM).
- 5 CHANNEL/CONTROL button**
This button is used to select radio presets or select stations and menu options.
- 6 DIMMER button**
The display's brightness switches (in three levels) each time this button is pressed.
- 7 Preset channel range buttons (CH A/B, C/D, E/F, G/H, I/J)**
Use these buttons to switch the preset channel's shift mode directly.
- 8 ENTER button**
This button is used to set the menu.
- 9 DISPLAY button**
This button is used to select the display mode (☞ page 13, 16, 23).
- 10 AUTO PRESET/AUTO TUNE button**
Press this button in the DAB mode to perform a local scan (UK band III). (UK stations are in the range 11B ~ 12D.)
When the button is held in, the full scan operation (Full band and L-band) is conducted.
When pressed in the FM mode, receivable FM stations are automatically stored in the preset memory in order starting from preset channel A1.
- 11 TUNING buttons**
Use these to change the received frequency to a higher frequency (+) or a lower frequency (-).
- 12 SHIFT button**
Use this button to select the memory blocks, A (1 ~ 10), B (1 ~ 10), ... J (1 ~ 10).
- 13 MEMORY button**
Frequencies and station names can be stored in the memory. When this button is pressed, the "MEMO" and "CH" indicator on the display flashes for 10 seconds. Use the **SHIFT** button and the **Preset channel** buttons during this time to designate the desired preset channel.
- 14 POWER ON button**
Press this button to switch from the standby mode to the operating mode.

Connections


Connecting the antenna terminals

■ Connecting an DAB outdoor antenna


- If good reception cannot be achieved with the included DAB indoor antenna, use an DAB outdoor antenna. Connect an F male type connector to the coaxial cable and connect the antenna to the DAB COAX 75 Ω/ohms terminal.

■ Installing the DAB indoor antenna

- ① DAB station reception (👉 page 18).
- ② Use "Tuning aid" to set position at which reception sensitivity is optimum (👉 page 21).

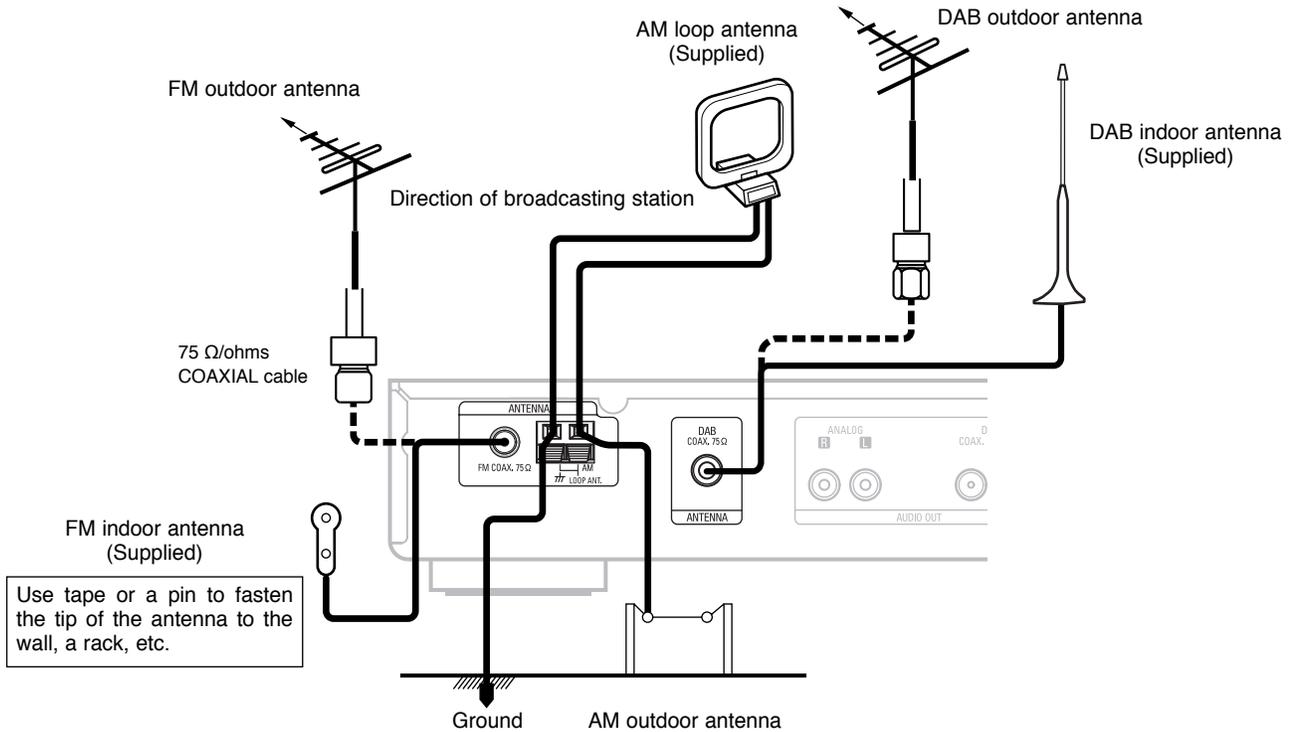


■ AM loop antenna assembly

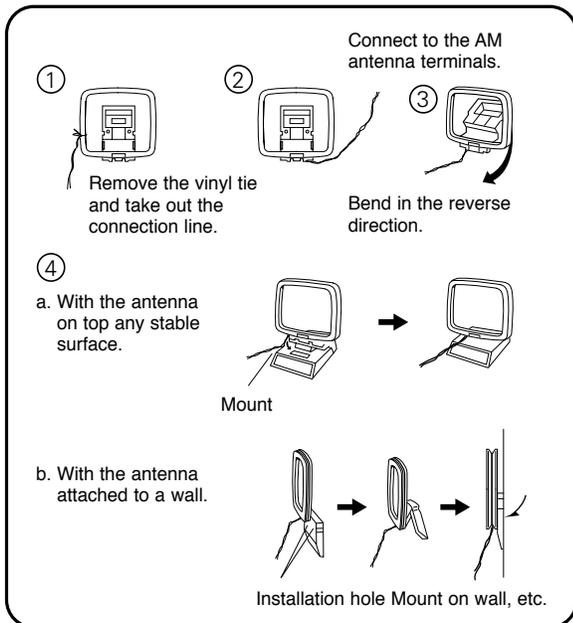

Connection of AM antennas


- ① Push the lever.
- ② Insert the conductor.
- ③ Return the lever.

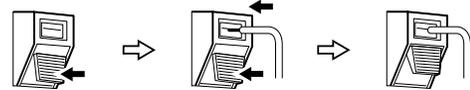

NOTE:


- Do not connect two FM antennas simultaneously.
- Even if an external AM antenna is used, do not disconnect the AM loop antenna.
- Make sure AM loop antenna lead terminals do not touch metal parts of the panel.
- There is a magnetic on the bottom surface of the DAB indoor antenna. Keep it away from monitors, etc.

■ DAB indoor antenna assembly

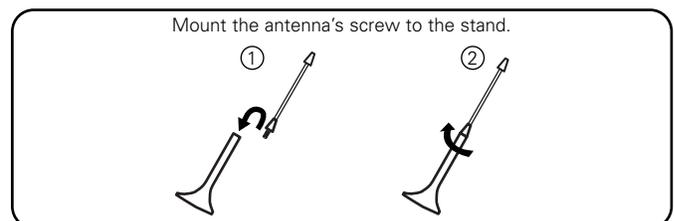


Cable indications

- The hookup diagrams on the subsequent pages assume the use of the following optional and coaxial connection cables (not supplied).

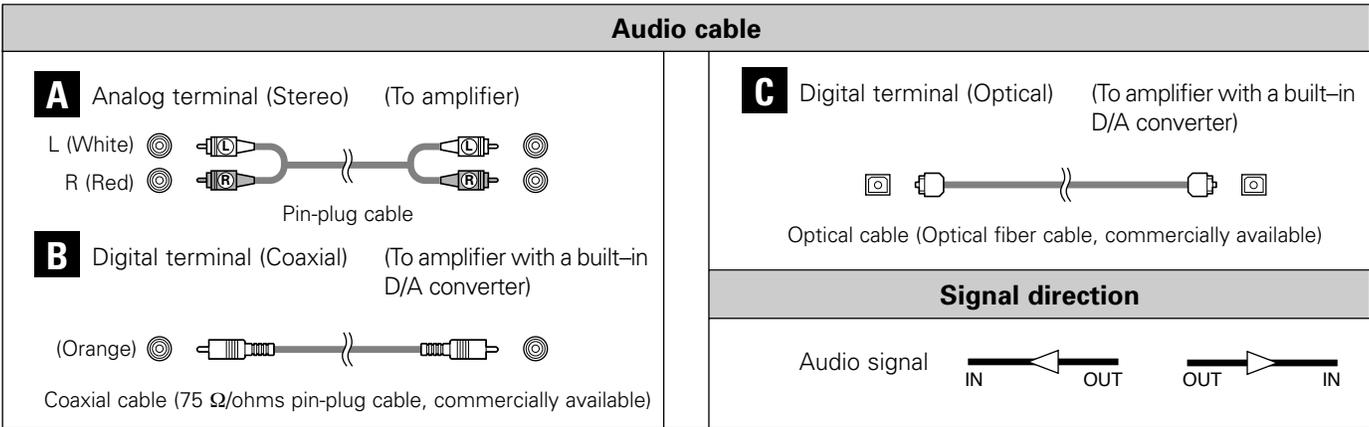


Connecting the amplifier

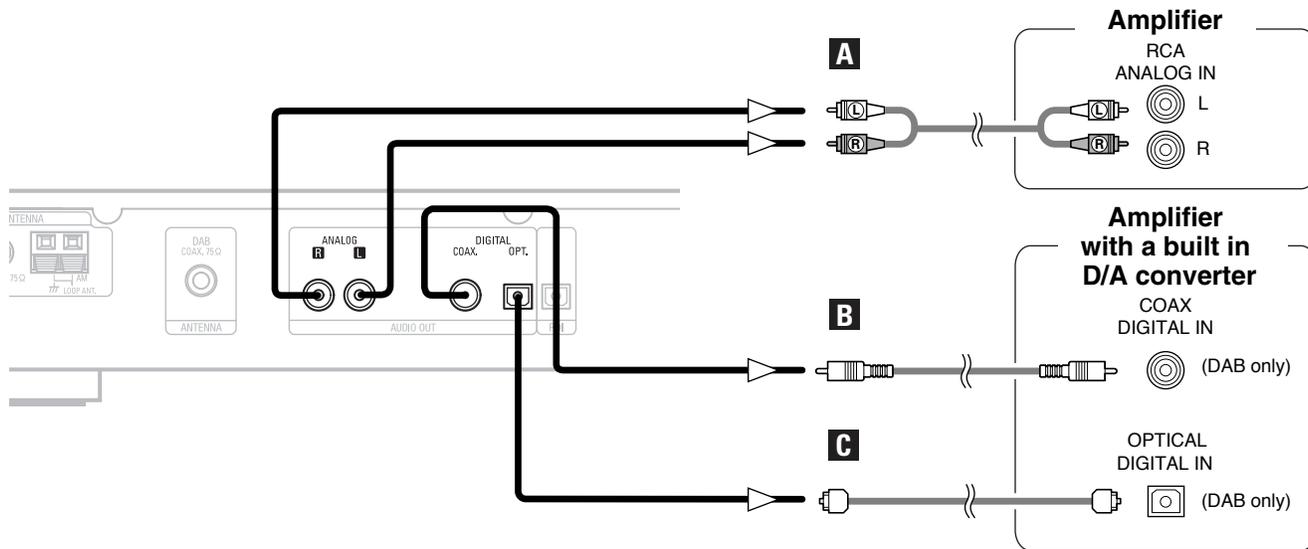


- If you want to enjoy listening to the digital output audio of the DAB, connect to an amplifier outfitted with a digital coaxial or optical input.
- DIGITAL AUDIO OUT** : Connections with equipment having a digital input such as the amplifier or the MD recorder. The digital audio output terminal of this unit (either DIGITAL OUT OPTICAL or DIGITAL OUT COAXIAL) should be connected with the digital input terminals of the amplifier or the MD recorder or other equipment (OPTICAL or COAXIAL).

Connecting the power supply cord and RDI

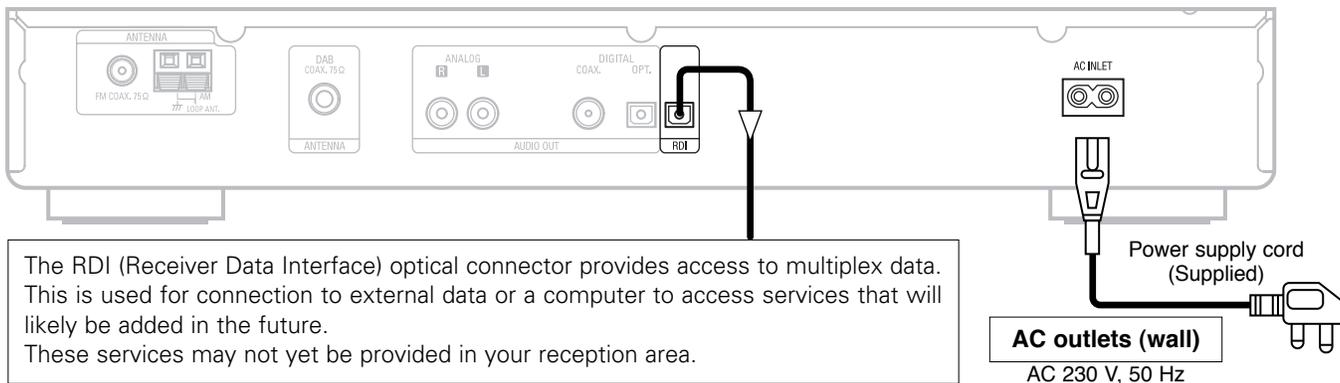

Operation

Listening to FM/AM

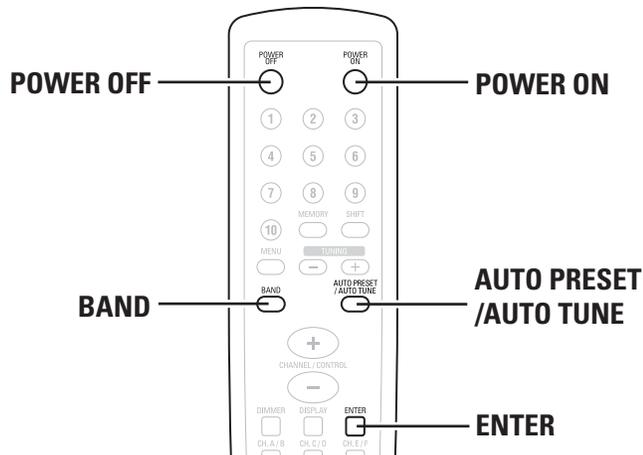

- If an FM station cannot be preset automatically due to poor reception, use the "Manual tuning" operation to tune in the station, then preset it using the manual "Preset memory" operation.
- To interrupt this function, press the **POWER OFF** button.
- Does not operate with the AUTO TUNE button on the front panel.
- Perform this operation from the remote control unit.


■ DEFAULT VALUE

Auto tuner presets	
A1 ~ A10	87.5 / 89.1 / 98.1 / 108 / 90.1 / 90.1 / 90.1 / 90.1 / 90.1 / 90.1 MHz
B1 ~ B10	522 / 603 / 999 / 1404 / 1611 kHz, 90.1 / 90.1 / 90.1 / 90.1 / 90.1 MHz
C1 ~ C10	90.1 MHz
D1 ~ D10	90.1 MHz
E1 ~ E10	90.1 MHz
F1 ~ F10	90.1 MHz
G1 ~ G10	90.1 MHz
H1 ~ H10	90.1 MHz
I1 ~ I10	90.1 MHz
J1 ~ J10	90.1 MHz

FM Auto preset memory

1 Press the **POWER/ON** button to turn on the power.

2 Watching the display, press the **BAND** button to select the FM band.

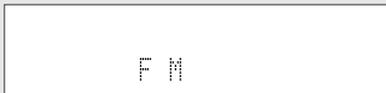

3 Press the **AUTO PRESET/AUTO TUNE** button.





4 Press the **ENTER** button.

- The unit automatically begins searching for FM broadcast stations.




- ※ When the first FM broadcast station is found, that station is stored in the preset memory at channel A1. Subsequent stations are automatically stored in order at preset channels A1 to A10, B1 to B10, C1 to C10, D1 to D10, E1 to E10, F1 to F10, G1 to G10, H1 to H10, I1 to I10 and J1 to J10 for a maximum of 100 stations.
- ※ Channel A1 is tuned in after the auto preset memory operation is completed.

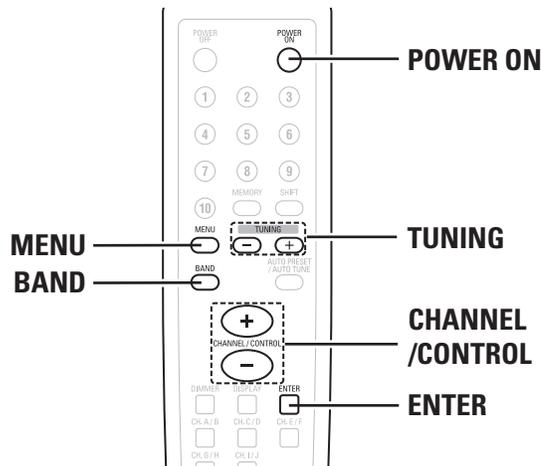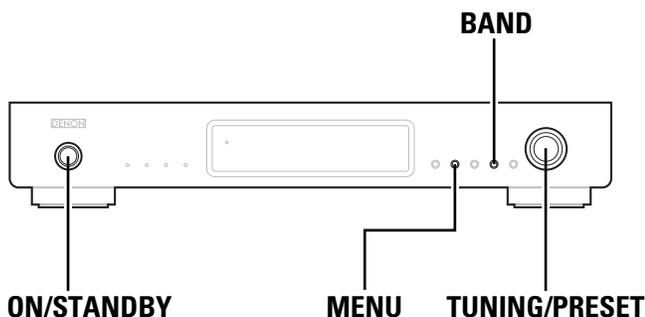


Auto tuning (FM/AM)

1 Press the **ON/STANDBY** switch or **POWER ON** button to turn on the power.


2 Watching the display, press the **BAND** button to select the desired band (AM or FM).

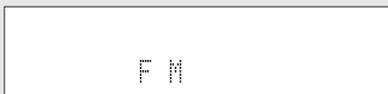

3 Press the **MENU** button to select menu. And either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to display the Search mode selection screen.

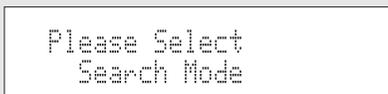

4 Press the **TUNING/PRESET** knob or **ENTER** button to set the search mode. And either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to display the "Auto" mode selection screen.

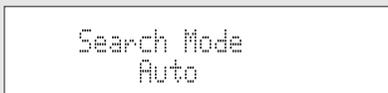

5 Press the **TUNING/PRESET** knob or **ENTER** button to set the auto tuning mode.



6 Either turn the **TUNING/PRESET** knob or press the **TUNING** button.

- Automatic searching begins, then stops when a station tuned in.




- When in the auto tuning mode on the FM band, the "STEREO" indicator lights on the panel when the stereo broadcast is tuned in. At open frequencies, the noise is muted and the "TUNED" and "STEREO" indicators tuned off.


Manual tuning (FM/AM)

1 Perform steps 1 to 3 under "Auto tuning (FM/AM)".

2 Press the **TUNING/PRESET** knob or **ENTER** button to set the search mode. And either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to display the "Manual" mode selection screen.

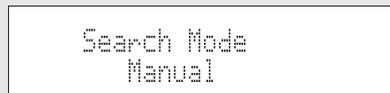

3 Press the **TUNING/PRESET** knob or **ENTER** button to set the manual tuning mode.

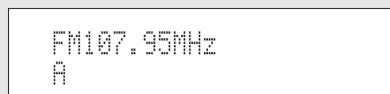



4 Either turn the **TUNING/PRESET** knob or press the **TUNING** button to tune in the desired station.

- The frequency changes continuously when the **TUNING** button on the remote control unit is held in.



- When in the manual tuning modes is set, FM stereo broadcasts are received in manual and the "STEREO" indicator turns off.

Operation

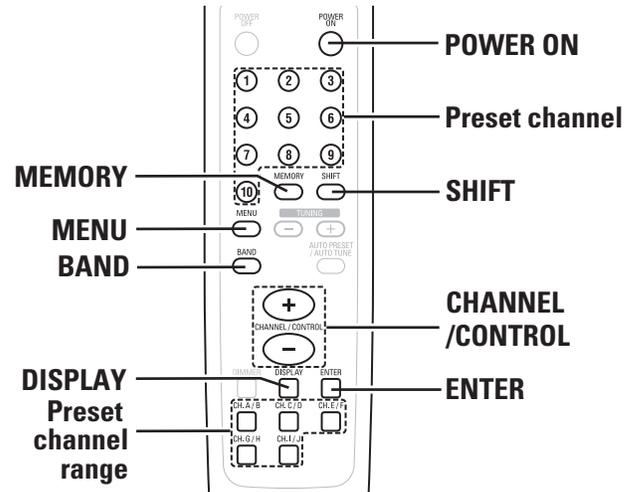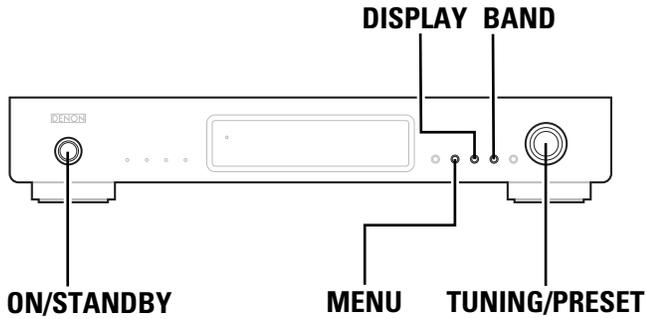

Preset stations (FM/AM)

1 Use the “Auto tuning” or “Manual tuning” operation to tune in the station to be preset in the memory.

2 Press the **MENU** button to select menu.

3 Either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to select “Memory”.

Please Select
Memory

4 Press the **TUNING/PRESET** knob or **ENTER** button to set the preset mode and make the preset channel number flash.

AM 100.0kHz AUTO
110

- ※ Steps 1 to 4 can be skipped when using the **MEMORY** button.
- When this button is pressed, the preset memory standby mode is set, regardless of the menu setting at that time.

5 While the preset channel number is flashing, either press the **SHIFT** button to select the desired memory block (A to J) or press a **Preset channel range** (A to J) button.

6 While the preset channel number is flashing, either turn the **TUNING/PRESET** knob, press the **CHANNEL/CONTROL** or **Preset channel** button to select the desired preset channel (1 to 10).

7 While the preset channel number is flashing, either press the **TUNING/PRESET** knob or the **MEMORY** button to store the station in the preset memory.


- ※ To preset other channels, repeat steps 2 to 6.
- ※ A total of 100 broadcast stations can be preset — 10 stations (channels 1 to 10) in each of blocks A to J.

Recalling preset stations (FM/AM)

1 Press the **ON/STANDBY** switch or **POWER ON** button to turn on the power.


2 Watching the display, press the **BAND** button to select the desired band (AM or FM).

3 Press the **MENU** button to set the search mode. And either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to display the Search mode selection screen.

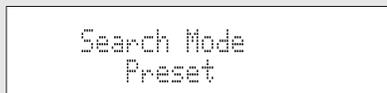

4 Press the **TUNING/PRESET** knob or **ENTER** button to set the search mode. And either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to display the “Preset” mode selection screen.

5 Press the **TUNING/PRESET** knob or **ENTER** button to set the preset mode.

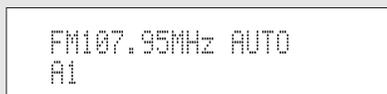

6 Watching the display, turn the **TUNING/PRESET** knob, or press the **CHANNEL/CONTROL -1** button to select the desired preset channel.

6 Press the **SHIFT** button and select the desired memory block (A to J) or press the **Preset -2** channel range (A to J) button.

6 Press the **Preset channel** button to select the desired preset channel (1 to 10).
-3



- Steps 1 to 5 can be skipped when using the **CHANNEL/CONTROL**, **SHIFT**, **Preset channel range** (A to J) and **Preset channel** buttons.

The preset mode is set when any of these buttons is pressed, regardless of the menu setting at that time.

RDS (Radio Data System)

- RDS (works only on the FM band) is a broadcasting service which allows station to send additional information along with the regular radio programme signal.
- The following three types of RDS information can be received on this unit:

■ Programme Type (PTY)

- PTY identifies the type of RDS programme.
- The programme types and their displays are as follows:

NEWS	News	OTHER M	Other Music
AFFAIRS	Current Affairs	WEATHER	Weather
INFO	Information	FINANCE	Finance
SPORT	Sports	CHILDREN	Children's Programmes
EDUCATE	Education	SOCIAL	Social Affairs
DRAMA	Drama	RELIGION	Religion
CULTURE	Culture	PHONE IN	Phone In
SCIENCE	Science	TRAVEL	Travel
VARIED	Varied	LEISURE	Leisure
POP M	Pop Music	JAZZ	Jazz Music
ROCK M	Rock Music	COUNTRY	Country Music
EASY M	Easy Listening Music	NATION M	National Music
LIGHT M	Light Classical	OLDIES	Oldies Music
CLASSICS	Serious Classical	FOLK M	Folk Music
		DOCUMENT	Documentary

■ Traffic Programme (TP)

- TP identifies programmes that carry traffic announcements.
- This allows you to easily find out the latest traffic conditions in your area before you leaving home.



■ Radio Text (RT)

- RT allows the RDS station to send text messages that appear on the display.



- The operations described below pressing the **DISPLAY** button will not function in areas in which there are no RDS broadcasts.

Operation

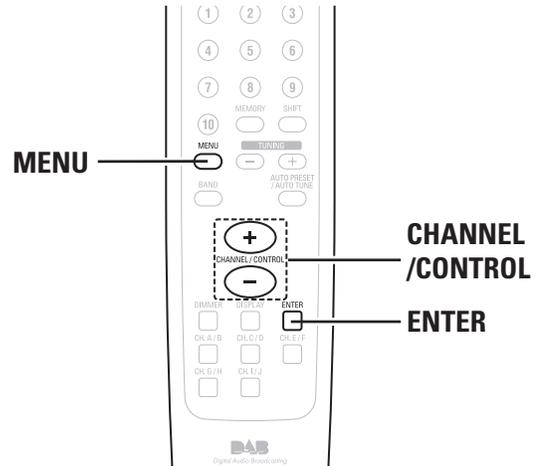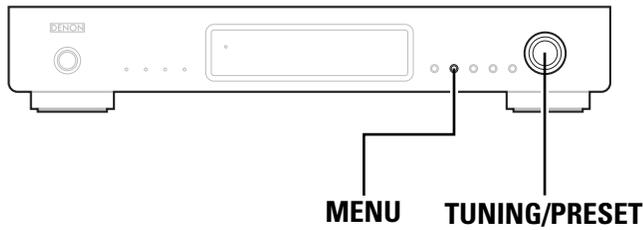

RDS search

Use this function to automatically tune to FM stations that provide RDS service.

- 1 Press the **MENU** button to select menu.

Please Select
Search Mode

- 2 Turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to display "RDS".

Please Select
RDS

- 3 Press the **TUNING/PRESET** knob or **ENTER** button to set the RDS search selection mode.

- 4 Either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to display "RDS Search".

RDS Search

- 5 Press the **TUNING/PRESET** knob or **ENTER** button to set the RDS search standby mode.

<Search Start>

- 6 Either turn the **TUNING/PRESET** knob, press the **CHANNEL/CONTROL** button.

- To automatically begin the RDS search operation.
 - The RDS LED flashes.
- ※ If no RDS station is found with above operation, all the reception band are searched.
- ※ When the broadcast station is found, that station's name appears on the display.

7

NO RDS

- ※ If no other RDS station is found when all the frequencies are searched, "NO RDS" is displayed.

PTY search

- Use this function to find RDS stations broadcasting a designated programme type (PTY).
- For a description of each programme type, refer to "Programme Type (PTY)".

1 Press the **MENU** button to select menu.

2 Either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to display "RDS".

3 Press the **TUNING/PRESET** knob or **ENTER** button to set the RDS search selection mode.

4 Either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to display "PTY Search".

PTY Search

5 Press the **TUNING/PRESET** knob or **ENTER** button to set the PTY search selection mode.

6 Watching the display, turn the **TUNING/PRESET** knob or press **CHANNEL/CONTROL** button to call out the desired programme type.

PTY NEWS

- ※ When receiving an RDS station, its programme type is displayed first.
- When not receiving an RDS station, "PTY" flashes.

7 Press the **TUNING/PRESET** knob or **ENTER** button to set the PTY search standby mode.

<Search Start>

8 Either turn the **TUNING/PRESET** knob, press the **CHANNEL/CONTROL** button.

- To automatically begin the PTY search operation.
- The RDS LED flashes.

- ※ If there is no station broadcasting the designated programme type above operation, all the reception bands are searched.
- ※ The station name is displayed on the display after searching stops.

9

NO Programme

- ※ If no other station broadcasting the designated programme type is found when all the frequencies are searched, "NO Programme" is displayed.

TP search

Use this function to find RDS stations broadcasting traffic programme (TP).

1 Press the **MENU** button to select menu.

2 Either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to display "RDS".

3 Press the **TUNING/PRESET** knob or **ENTER** button to set the RDS search selection mode.

4 Either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to display "TP Search".

TP Search

5 Press the **TUNING/PRESET** knob or **ENTER** button to set the TP search standby mode.

<Search Start>

6 Either turn the **TUNING/PRESET** knob, press the **CHANNEL/CONTROL** button.

- To automatically begin the TP search operation.
- The RDS LED flashes.



- ※ If no TP station is found with above operation, all the reception bands are searched.
- ※ The station name is displayed on the display after searching stops.

7

NO Programme

- ※ If no other TP station is found when all the frequencies are searched, "NO Programme" is displayed.

Operation

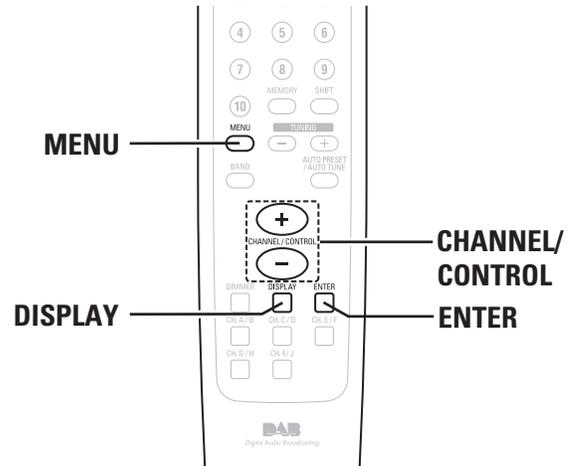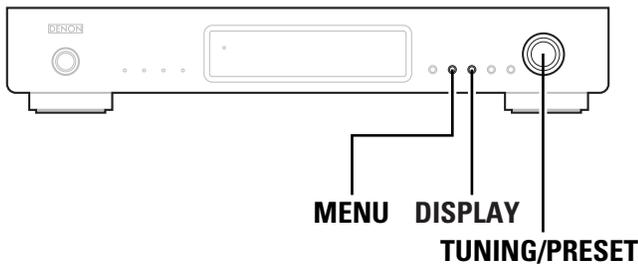

RT (Radio Text)

- 1** Press the **MENU** button to select menu.
- 2** Either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to display “RDS”.
- 3** Press the **TUNING/PRESET** knob or **ENTER** button to set the RDS search selection mode.
- 4** Either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to display “RT ON/OFF”.

RT ON/OFF
- 5** Press the **TUNING/PRESET** knob or **ENTER** button to set the RT ON/OFF selection mode.
- 6** Either turn the **TUNING/PRESET** knob, press the **CHANNEL/CONTROL** button to choose the “RT ON” or “RT OFF”.


RT ON
- 7** Press the **TUNING/PRESET** knob or **ENTER** button to set whether to enable or stop the **RADIO TEXT** function.

※ If no text data is being broadcast, “NO TEXT DATA” is displayed.

Switching RDS information display

- 1** Use the procedure described at “Auto tuning”, “Manual tuning” or “Recalling preset stations” to tune in a frequency with an RDS station.
- 2** Press the **DISPLAY** button to switch the RDS reception information.

※ The display switches as shown below each time the **DISPLAY** button is pressed.

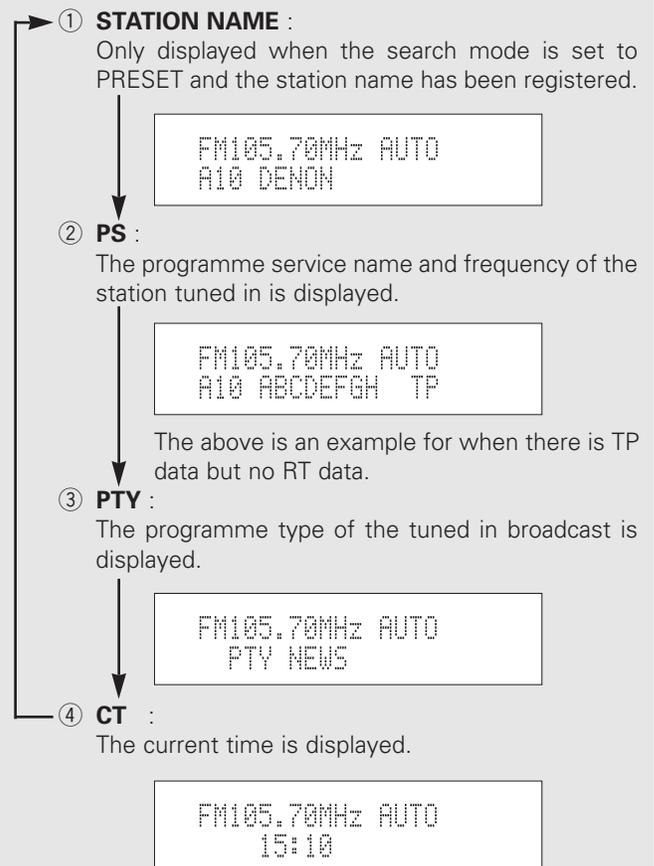

- When the “STATION NAME” is not registered, ① is not displayed.

Registering station names (FM/AM only)

1 Use the procedure described at “Auto tuning”, “Manual tuning” or “Recalling preset stations” to tune in the desired frequency.

Example: To register “DENON” as the FM station name at preset channel “A2”.

2 Press the **MENU** button to select menu.

```

Please Select
Search Mode
    
```

3 Either turn the **TUNING/PRESET** knob or **CHANNEL/CONTROL** button to display “Station Name”.

```

Please Select
Station Name
    
```

4 Press the **TUNING/PRESET** knob or **ENTER** button to display the Station Name setting.

```

FM107.95MHz AUTO
A2 _
    
```

5 While “_” is flashing, either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to display “D”.

6 The “_” moves to the right when the **TUNING/PRESET** knob or **ENTER** button is pressed. Use the same procedure to display “E”, “N”, “O” and “N”, in that order.

```

FM107.95MHz AUTO
A2 DENON
    
```

7 Press the **TUNING/PRESET** knob or **ENTER** button for at least 2 seconds.

- The station name is set.

8 Use the procedure described at “Preset stations (FM/AM)” step 5 ~7 (☞ page 12) to register the displayed station name at “A2”.

- ※ This procedure can be used to registered station names with up to 8 digits for up to 100 AM/FM stations at random.
- ※ The 63 characters below can be selected.

```

A B C D E F G H I J K L M N O P Q R S T U V W
X Y Z 0 1 2 3 4 5 6 7 8 9 [ \ ] ^ _ ! " # $ % & ' ( ) *
+ , - . / : ; < = > ? (space)
    
```


Listening to DAB broadcasts



About DAB (Digital Audio Broadcasting)

- Since the DAB system is broadcasted in digital format, DAB system can supply crystal-clear audio and stable reception even in mobile objects. DAB is a new generation radio which can provide data service and supplementary multi-media services.
- DAB broadcasts multiple services under one Ensemble that are called service components.
- Each component contains inherent programmes; news, music, sports, and many more.
- Each Ensemble and service component has its label, and users can recognize a current broadcasting station and service contents by using the label.
- The main service component is broadcast as Primary while the others are broadcast as Secondary.
- Also rich character information is serviced through Dynamic Labels; song title, artist composer etc.

DAB Service Diagram

DAB Signal

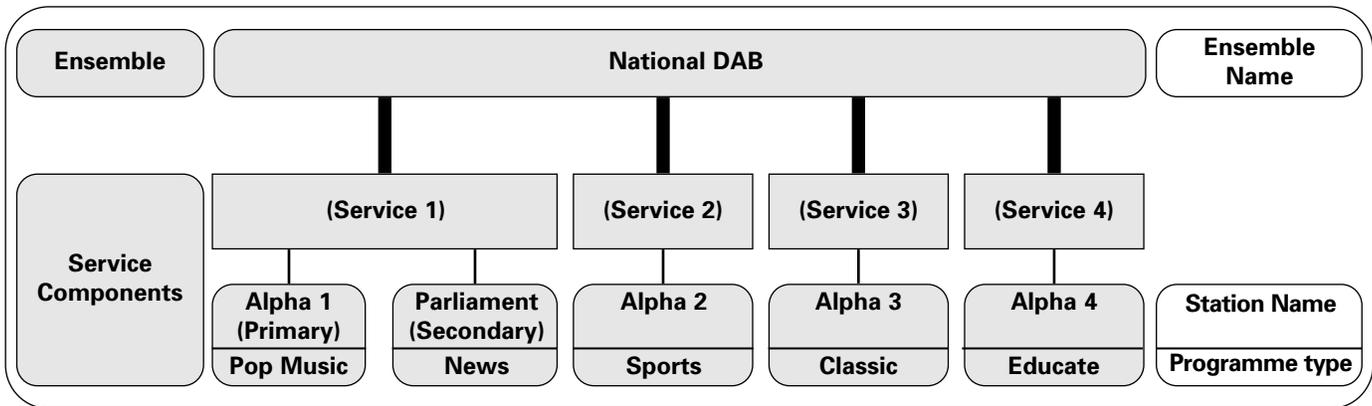


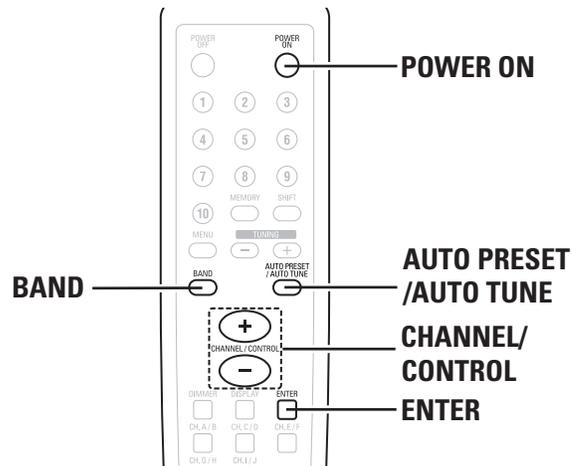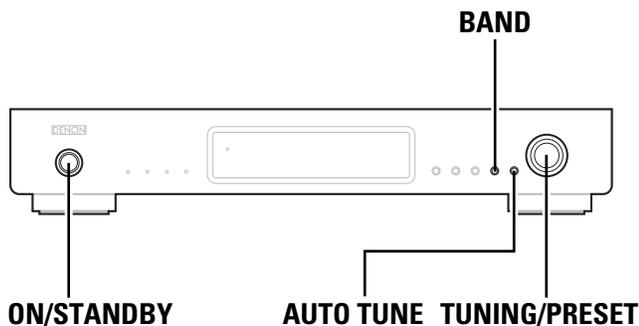


Tuning in DAB (Digital Audio Broadcasting) broadcasts

1 Press the **ON/STANDBY** switch or **POWER ON** button to turn on the power.


2 Watching the display, press the **BAND** button to select the desired band (DAB).

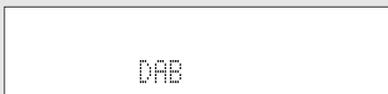

3 Watching the display, press the **AUTO TUNE** or **AUTO PRESET/AUTO TUNE** button to start automatically scanning.

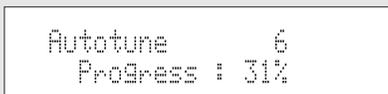

Tune in the first broadcast station.

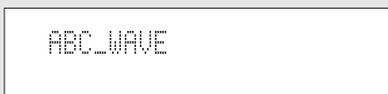

※ **Using the DAB for the first time**

When you first switch on the unit and select DAB, the Auto Tuning function scans the Band III and L-band frequencies. After the scanning, the first scanned component will be selected.

Press the button and release it in less than 2 seconds to perform a local scan (UK band III).

(UK stations are in the range 11B to 12D) (☞ page 27). Press the button for over 2 seconds then release it to perform the full scan operation (Full band III and L-band: 5A to LW) (☞ page 27).

Once auto scanning is completed, the number of broadcast stations is displayed, then the first station is tuned in.

If "Station not available" is displayed, check the antenna's connection (☞ page 8).

You may want to re-tune at a later date if you move the TU-1800DAB or if you want to receive a newly introduced ensemble.

Press the **AUTO TUNE** or **AUTO PRESET/AUTO TUNE** button.

4 Either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to select the station.

- If the station you select is in stereo, the "STEREO" indicator will light up.

※ **About secondary service**

When receiving a Secondary service, "<< >>" are indicated to the right of "Channel and Frequency".



When either the **TUNING/PRESET** knob or **ENTER** button is pressed, the Secondary service Component is received and the Secondary indicator lights.

Press **TUNING/PRESET** knob or **ENTER** button to go back to the primary service again.

5 Press the **TUNING/PRESET** knob or press the **ENTER** button to listen to the selected station.

- After "Now tuning..." is displayed, the tuned in station appears.

Operation

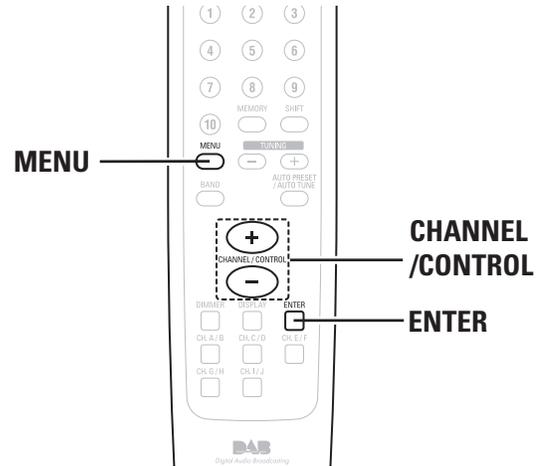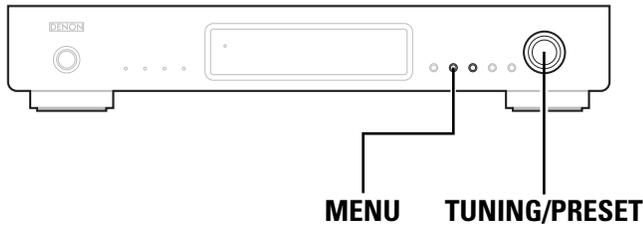

Preset stations

- 1** Follow steps 1 to 4 under “Tuning in DAB (Digital Audio Broadcasting) broadcasts” (☞ page 19) to tune in the station to be preset.
- 2** Perform steps 2 to 7 under “Preset stations (FM/AM)” (☞ page 12).

※ Up to 100 “S. Component” can be preset (DAB alone).

Recalling preset stations

The same procedure as for FM/AM stations.

- 1** Perform steps 1 to 6 under “Preset stations (FM/AM)” (☞ page 12).
- 2** Press the **TUNING/PRESET** knob or press the **ENTER** button to listen to the selected station.
 - After “Now tuning...” is displayed, the tuned in station appears.

Search mode

Sorted list search mode

- You can select any component for listening from the list of sorted components.
- The sorted components are set in the sort mode (☞ page 22).

- 1** Press the **MENU** button to select menu.

- 2** Either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to display the search mode selection screen.

Please Select
Search Mode

- 3** Press the **TUNING/PRESET** knob or **ENTER** button to set the search mode.

- 4** Either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to select “Search Mode (Sorted List)”.

Search Mode
Sorted List

- 5** Press the **TUNING/PRESET** knob or **ENTER** button to display the first channel on the Sorted List.



ABC_WAVE

※ You can select any component from the sorted list.

Operation

Sort mode (Sorting components)

- You can sort and list scanned components by Alphanumeric, S. component or programme type.
- You can then select the component you want to listen to from the list.

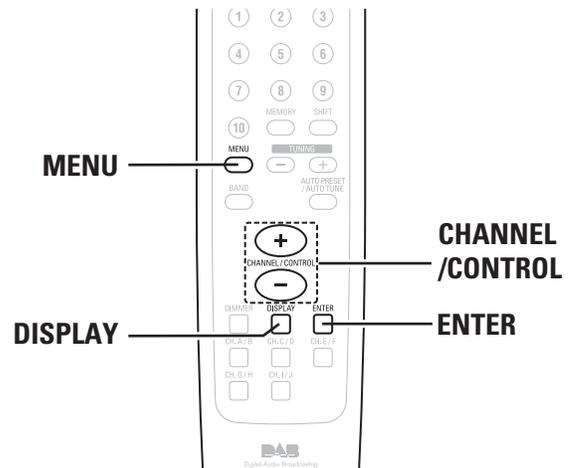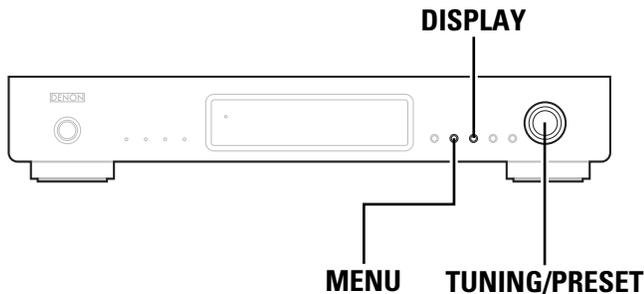

Alphanumeric

The "S. Component" is sorted in alphanumerical order.

1 Press the **MENU** button to select menu.

2 Either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to display the sort mode selection screen.

```
Please Select  
Sort Mode
```

3 Press the **TUNING/PRESET** knob or **ENTER** button to set the sort mode.

4 Either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to select "Sort Mode (Alphanumeric)".

```
Sort Mode  
Alphanumeric
```

5 Press the **TUNING/PRESET** knob or **ENTER** button to set the sort mode to "Sort Mode (Alphanumeric)".

```
ABC_WAVE
```

※ You can select any component from the sorted list.

S. component

- You can select a S.component for listening from the list of scanned S.components produced by using the "Tuning in DAB broadcasts" (page 19).
- The "S. Component" is sorted in the order of the Service component frequencies.

1 Press the **MENU** button to select menu.

2 Either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to display the sort mode selection screen.

3 Press the **TUNING/PRESET** knob or **ENTER** button to set the sort mode.

4 Either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to select "Sort Mode (S. Component)".

```
Sort Mode  
S.Component
```

5 Press the **TUNING/PRESET** knob or **ENTER** button to set the sort mode to "Sort Mode (S. Component)".

※ You can select any component from the sorted list.

PTY

The "S. Component" is sorted in the order of the programme Type.

- 1** Press the **MENU** button to select menu.

- 2** Either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to display the sort mode selection screen.

- 3** Press the **TUNING/PRESET** knob or **ENTER** button to set the sort mode.

- 4** Either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to select "Sort Mode (PTY)".

Sort Mode
PTY

- 5** Press the **TUNING/PRESET** knob or **ENTER** button to set the sort mode to "Sort Mode (PTY)".

※ You can select any component from the sorted list.

Switching the DAB information display

- 1** Follow steps 1 to 4 under "Tuning in DAB (Digital Audio Broadcasting) broadcasts" (☞ page 19) to tune in a DAB station.

- 2** Press the **DISPLAY** button to switch the DAB reception information.

※ The display switches as shown below each time the DISPLAY button is pressed.

 - ① **DLS** (Dynamic Label Segment) :
The text data included in the broadcast scrolls.

BBC Radiol
*This Program wa
 - ② **Ensemble Name** :
The ensemble name is displayed.

BBC Radiol
BBC National DAB
 - ③ **PTY** (Programme Type) :
The category of the broadcast being received is displayed.

BBC Radiol
Pop Music
 - ④ **Channel and Frequency** :
The frequency is displayed.



BBC Radiol
12C 227.36MHz
 - ⑤ **Audio Information** :
The bit rate and mode of the broadcast being received is displayed.

BBC Radiol
192kbps Stereo
 - ⑥ **Time and Date** :
The current time and date are displayed.

BBC Radiol
14:41 18-11-2005
 - ⑦ **Bit Error Rate** :
Noise may be generated and reception quality may become poor at bit error rates above 0.05. If a rate above 0.05 is displayed, move the antenna in different directions to find a position where the rate displayed is less 0.05.

BBC Radiol
BER:0.00210

Operation

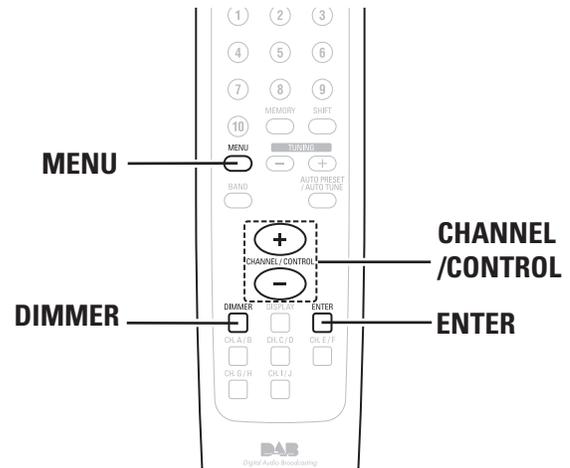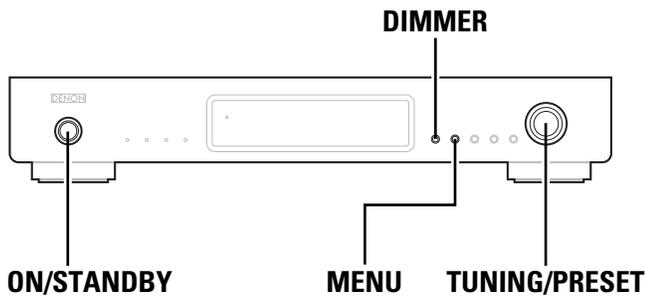

DRC (Dynamic Range Control)

- The DRC (Dynamic Range Control) function lets you change the dynamic range of the received sound depending on the content of the broadcast so that the sound is easier to hear even when the volume is low.
- The dynamic range can be fine-adjusted in three steps.

1 Press the **MENU** button to select menu.


2 Either turn the **TUNING/PRESET** knob or press the **CHANNEL/CONTROL** button to display the DRC value mode selection screen.

3 Press the **TUNING/PRESET** knob or **ENTER** button to set the DRC value mode.

4 Either turn the **TUNING/PRESET** knob clockwise or press the **CHANNEL/CONTROL** button.



- ※ The display changes as follows each time the **TUNING/PRESET** knob is turned clockwise or the **CHANNEL/CONTROL** button is pressed.

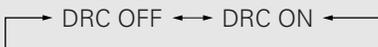

- DRC OFF: DRC is switched off. Any DRC level broadcast will be ignored. This is the default setting.
- DRC ON: Applies DRC level as sent with the broadcast.

- ※ This is effective when in a noisy environment and in quiet sections of broadcast programmes. The broadcast's DRC level is set at the broadcast station. The DRC can be changed to achieve the optimum level.

Last function memory

- This unit is equipped with a last function memory which stores the input and output setting conditions as they were immediately before the power is switched off. This function eliminates the need to perform complicated resettings when the power is switched on.
- The unit is also equipped with a back-up memory. This function provides approximately one week of memory storage when the main unit's power switch is off and with the power cord disconnected.

Initialization of the microprocessor

- When the indication of the display is not normal or when the operation of the unit does not show the reasonable result, the initialization of the microprocessor is required by the following procedure.

1 Unplug the power cord from the power outlet after pressing the **ON/STANDBY** button and setting the standby mode.

2 Hold the **DIMMER** button and **MENU** button, and plug the power cord into the power outlet.

3 Check that the entire display is flashing with an interval of about 1 second, and release your fingers from the 2 buttons and the microprocessor will be initialized.



- If step 3 does not work, start over from step 1.
- If the microprocessor has been reset, all the button settings are reset to the default values (the values set upon shipment from the factory).

Troubleshooting

If a problem should arise, first check the following.

1. Are the connections correct?

2. Have you operated the receiver according to the operating instructions?

3. Are the speakers and other components operating property?

If this unit is not operating properly, check the items listed in the table below. Should the problem persist, there may be a malfunction. Disconnect the power immediately and contact your store of purchase.

Symptom	Cause	Measures	Page
Power does not turn on when ON/STANDBY switch is pressed.	<ul style="list-style-type: none"> Power supply cord's plug is not plugged in to wall outlet. 	<ul style="list-style-type: none"> Plug the power supply cord in properly. 	9
Hissing noise is heard on FM broadcasts.	<ul style="list-style-type: none"> Antenna cable is not properly connected. Antenna is not pointing in the right direction. Radio waves are weak. 	<ul style="list-style-type: none"> Connect the leads properly. Point the antenna in the right direction. Install an outdoor antenna. 	8 8 8
Hissing or buzzing sound is heard on AM broadcasts.	<ul style="list-style-type: none"> Noise from a TV or interference in the signals sent from the broadcast station. 	<ul style="list-style-type: none"> Turn off the TV. Change the position of the loop antenna. Install an outdoor antenna. 	8 8 8
Booming sound (humming) is heard in AM broadcasts.	<ul style="list-style-type: none"> Signals transmitted over the power supply cord are modulated by the power source frequency. 	<ul style="list-style-type: none"> Insert the plug in the opposite direction. Install an outdoor antenna. 	9 8
Nothing happens when remote control buttons are pressed.	<ul style="list-style-type: none"> Are the batteries dead? Is the remote control unit too far away? Is there an obstacle between the remote control unit and the main unit? You have pressed the wrong button. Batteries are not set in their proper direction (⊕ and ⊖). 	<ul style="list-style-type: none"> Replace the batteries with new ones. Operate from closer to the main unit. Remove the obstacle. Press the desired button. Set the batteries in the proper direction. 	4 5 7 4
I can not get any sound.	<ul style="list-style-type: none"> Power connected amplifier not turned on. 	<ul style="list-style-type: none"> Connection leads to amplifier not made correctly. 	9
Display says "Station not Available".	<ul style="list-style-type: none"> Ensure that DAB coverage exists in your area. 	<ul style="list-style-type: none"> Check that antenna is connected. 	8
I can not access secondary services.	<ul style="list-style-type: none"> At the time of publishing this manual not many secondary services are available, this will increase as more DAB stations start broadcasting. 	<ul style="list-style-type: none"> If a secondary service station is available, the secondary indicator <<, >> will be displayed next to the station name. 	19
I hear a burbling sound on some stations.	<ul style="list-style-type: none"> DAB like other digital media is good at producing quality audio from a low level signal, however if this signal, level is too low a "burbling" sound can sometimes be heard. 	<ul style="list-style-type: none"> To reduce this try repositioning your antenna to gain maximum signal strength, alternatively available to the TU-1800DAB. 	8

Specifications

■ FM tuner section

- **Frequency range:** 87.5 MHz ~ 108.0 MHz
- **Antenna terminals:** 75 Ω/ohm Unbalanced
- **Usable sensitivity:** 1.0 μV (11.2 dBf)
1.2 μV (IHF)
- **S/N 50 dB sensitivity:**
 - Monaural:** 1.6 μV (15.3 dBf)
 - Stereo**
(μV is at 75 Ω/ohm, 0 dB = 10⁻¹⁵ W): 23 μV (37.2 dBf)
- **Image interference ratio:** 80 dB
- **IF interference ratio:** 100 dB
- **AM suppression ratio:** 50 dB
- **Effective selectivity:** 50 dB (±400 kHz)
- **Capture ratio:** 2.0 dB
- **Frequency characteristics:** 20 Hz ~ 15 kHz ^{+0.5}_{-1.0} dB
- **Signal-to-noise ratio:**
 - Monaural:** 77 dB (IHF), 73 dB (DIN)
 - Stereo:** 72 dB (IHF), 68 dB (DIN)
- **Total harmonic distortion:**
 - Mono 1 kHz (at 75 kHz dev.):** 0.15 %
 - Stereo 1 kHz (at 67.5 kHz dev.):** 0.3 %
- **Stereo separation 1 kHz (WIDE):** 43 dB

■ DAB tuner section

- **Frequency range:** 174.928 (5A) ~ 239.200 (13F) MHz (BAND III)
1452.960 (LA) ~ 1490.624 (LW) MHz (L-BAND)
- **Sensitivity:** -99 dBm
- **Signal-to-noise ratio:** 103 dB
- **THD+N:** 0.007 % (1 kHz)
- **Channel separation:** 87 dB (1 kHz)
- **Selectivity:** 40 dB (at adjacent channel)
- **Frequency response:** +0.5/-0.5 dB (5 Hz ~ 20 kHz)
- **Digital output:** Optical, Coaxial
Sampling frequency: 48 kHz
- **Aerial terminal:** 75 Ω/ohm, F female
- **Analog output level:** 2 Vrms

■ AM (MW) tuner section

- **Frequency range:** 522 kHz ~ 1611 kHz
- **Antenna terminals:** Terminal type with loop antenna
- **Usable sensitivity:** 18 μV
- **Signal-to-noise ratio:** 53 dB

■ Others

- **Power supply:** AC 230 V, 50 Hz
- **Power consumption:** 14 W
- **Maximum external dimensions:** 434 (W) x 74 (H) x 286 (D) mm
- **Mass:** 3.8 kg

■ Remote control unit (RC-1013)

- **Batteries:** 3 V DC, R03/AAA type (two batteries)
- **External dimensions:** 46 (W) x 180 (H) x 29 (D) mm
- **Mass:** 115 g (including batteries)

* For purposes of improvement, specifications and design are subject to change without notice.

■ DAB frequency table

Band III (174 to 240 MHz)

Frequency	Level	Frequency	Level
174.928 MHz	5A	211.648 MHz	10B
176.640 MHz	5B	213.360 MHz	10C
178.352 MHz	5C	215.072 MHz	10D
180.064 MHz	5D	216.928 MHz	11A
181.936 MHz	6A	218.640 MHz	11B
183.648 MHz	6B	220.352 MHz	11C
185.360 MHz	6C	222.064 MHz	11D
187.072 MHz	6D	223.936 MHz	12A
188.928 MHz	7A	225.648 MHz	12B
190.640 MHz	7B	227.360 MHz	12C
192.352 MHz	7C	229.072 MHz	12D
194.064 MHz	7D	230.784 MHz	13A
195.936 MHz	8A	232.496 MHz	13B
197.648 MHz	8B	234.208 MHz	13C
199.360 MHz	8C	235.776 MHz	13D
201.072 MHz	8D	237.488 MHz	13E
202.928 MHz	9A	239.200 MHz	13F
204.640 MHz	9B		
206.352 MHz	9C		
208.064 MHz	9D		
209.936 MHz	10A		

L-Band (1452 to 1490 MHz)

Frequency	Level	Frequency	Level
1452.960 MHz	LA	1473.504 MHz	LM
1454.672 MHz	LB	1475.216 MHz	LN
1456.384 MHz	LC	1476.928 MHz	LO
1458.096 MHz	LD	1478.640 MHz	LP
1459.808 MHz	LE	1480.352 MHz	LQ
1461.520 MHz	LF	1482.064 MHz	LR
1463.232 MHz	LG	1483.776 MHz	LS
1464.944 MHz	LH	1485.488 MHz	LT
1466.656 MHz	LI	1487.200 MHz	LU
1468.368 MHz	LJ	1488.912 MHz	LV
1470.080 MHz	LK	1490.624 MHz	LW
1471.792 MHz	LL		

DENON
TOKYO, JAPAN
www.denon.com

Denon Brand Company, D&M Holdings Inc.
Printed in China 00D 511 4368 206