

Package contents

- Universal transfer cable
- *Quick Setup Guide*

Features

- High-speed data transfer
- Windows-to-Windows compatibility
- Mac-to-Mac compatibility
- Windows-to-Mac (and Mac-to-Windows) compatibility
- Auto-launching software built into the cable; no CDs or downloads required

System requirements


- Windows® 8 (not including Windows RT), Windows® 7, Windows Vista®, Windows® XP, or Windows® 2000 SP3
- Mac OS X v10.5 or later
- Intel® Pentium® II or higher/PowerPC G4 processor or later
- 512 MB RAM or higher
- At least 100 MB hard drive space available
- Available USB port on both computers

Getting Started

Follow the steps below to launch the software on **each** Windows or Mac computer that you are connecting. For instance, if you connect a PC to a Mac, follow the PC setup steps on your PC and the Mac setup steps on your Mac.

Launching the Software on Windows PCs (EasySuite Software)

- Connect the USB cable from one computer to the other. The software detects the connection.
 - **Windows XP and Windows 2000:** The EasySuite software opens. If it does not open, open **My Computer**, select the drive letter of the EasySuite cable/software and double-click the *EasySuite* icon.
 - **Windows 8, Windows 7, and Windows Vista:** The *Autoplay* menu opens. Click **Run EasySuite.exe**, then click **Yes** to allow the program to make changes. If *Autoplay* does not open, open **My Computer**, select the drive letter of the EasySuite cable/software and double-click the *EasySuite* icon.

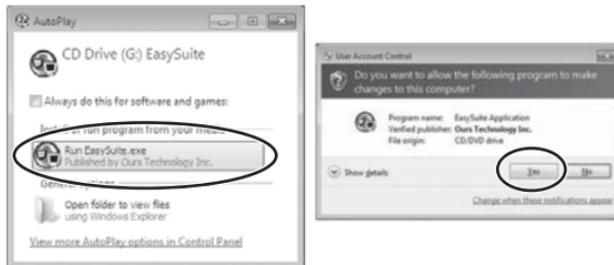


Launching the Software on Mac Computers (GO!Bridge Software)

- 1 Connect the USB cable from one computer to the other. The software detects the connection.
- 2 Click the EasySuite disc icon on the desktop of your Mac. If the EasySuite CD icon is not on your desktop, launch Finder and select the EasySuite CD from the list of drives and folders on the left.



- 3 Click the Go!Bridge software icon to launch the Mac version of the software.

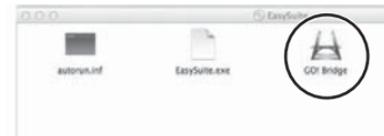

Note: "Bridge is not running" will be displayed if GO!Bridge (for Mac OS) or EasySuite (for Windows OS) is not open on both computers.



Transferring Files Between Computers

When the EasySuite or GO!Bridge software opens, there will be two windows, Local Host and Remote Host. Local Host is the computer you are currently using. Remote Host is the computer you are connected to via the cable. Both the EasySuite Software and GO!Bridge software allow you to transfer files using the same techniques. There are two ways to transfer files with EasySuite or GO!Bridge:

- **Option 1:** Select the file to be transferred on either the local or remote computer, then drag and drop it into the destination directly.



OR

- **Option 2:** You can Copy and Paste the files to be transferred by selecting the files using Ctrl+C, then pasting the files in the destination folder using Ctrl+V, or by using the same commands on the *Edit* menu.

Note: If you get an error message on your Mac system stating that you can not write files to a specific folder, then choose another folder that does not have user restrictions. Or you may consult your operating system documentation on how to modify write permissions on a certain folder.

