

Quasar 900 Open-Path Gas Detection System User's and Maintenance Manual



Factory Mutual

Class I Div. 1 Groups B, C, D Class II Div. 1 Groups E, F, G

ATEX, IECEX

Ex II 2 (2) GD,

Ex d e ib [ib Gb] IIB+H2 T4 Gb Ex tb IIIC T135°C Db

Document Ref: TM 888200, Rev. K, January 2015



218 Little Falls Rd., Cedar Grove, NJ 07009 USA;

Phone: +1 (973) 239 8398 Fax: +1 (973) 239 7614

Web-Site: www.spectrex.net; Email: spectrex@spectrex.net;

Legal Notice

The SafEye monitoring system described in this document is the property of Spectrex, Inc.

No part of the hardware, software or documentation may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without prior written permission of Spectrex, Inc.

While great efforts have been made to assure the accuracy and clarity of this document, Spectrex, Inc. assumes no liability resulting from any omissions in this document, or from misuse of the information obtained herein. The information in this document has been carefully checked and is believed to be entirely reliable with all of the necessary information included. Spectrex Inc. reserves the right to make changes to any products described herein to improve reliability, function, or design, and reserves the right to revise this document and make changes from time to time in content hereof with no obligation to notify any persons of revisions or changes. Spectrex, Inc. does not assume any liability arising out of the application or any use of any product or circuit described herein; neither does it convey license under its patent rights or the rights of others.



Warning: This manual should be carefully read by all individuals who have or will have responsibility for using, maintaining or servicing the product.

The Source and Detector are not field-repairable due to the meticulous alignment and calibration of the sensors and the respective circuits. Do not attempt to modify or repair the internal circuits or change their settings, as this will impair the system's performance and void the Spectrex, Inc. Product warranty.

Legal Notice iii

Release History

Rev	Date	Revision History	Prepared by	Approved by
F	February	First Release	Ian Buchanan	Eric Zinn
G	June 2013	Second release	Ian Buchanan	Eric Zinn
Н	August 2013	Third Release	Ian Buchanan	Eric Zinn
1	January 2014	Fourth Release	Ian Buchanan	Eric Zinn
J	August 2014	Fifth Release	Ian Buchanan	Eric Zinn
K	January 2015	Sixth Release	Ian Buchanan	Eric Zinn

iv Release History

About this Guide

This manual describes the Quasar 900 Open-Path Gas Detection System and its features and provides instructions on the installation, operation and maintenance.

This guide includes the following chapters and appendices:

- **Chapter 1, Scope**, provides a general introduction and overview of the product and the guide, with a brief description of its content.
- Chapter 2, Technical Description, describes the Detector's theory of operation.
- Chapter 3, Operation Mode, describes the Detector's operation modes, user interface and indications.
- Chapter 4, Technical Specifications, describes the Detector's electrical, mechanical and environmental specifications.
- **Chapter 5, Installation Instructions**, describes how to install the Detector, including wiring and mode settings.
- **Chapter 6, Operating Instructions**, describes the operating instructions and power-up procedures.
- **Chapter 7, Maintenance Instructions**, contains the maintenance and support procedures.
- **Chapter 8, Troubleshooting**, describes the solutions to problems that may arise with the Detector.
- **Appendix A, Wiring Option Configurations**, provides wiring diagrams for installation.
- **Appendix B, Accessories**, provides a list of accessories available for the Quasar 900 Open-Path Gas Detection System.
- **Appendix C, SIL-2 Features**, details the special conditions to comply with the requirements of EN 61508 for SIL-2.

About this Guide v

Abbreviations and Acronyms

Abbreviation Meaning		
ATEX	Atmosphere Explosives	
AWG	American Wire Gauge	
BIT	Built In Test	
EMC	Electromagnetic Compatibility	
EOL	End of Line	
FOV	Field of View	
HART	Highway Addressable Remote Transducer- communication protocol	
IAD	Immune at Any Distance	
IECEx	International Electrotechnical Commission Explosion	
IPA	Isopropyl Alcohol	
IR	Infrared	
JP5	Jet Fuel	
Latching	Refers to relays remaining in the ON state even after the ON condition has been removed	
LED	Light Emitting Diode	
LPG	Liquefied Petroleum Gas	
mA	MilliAmps (0.001 amps)	
MODBUS	Master-slave messaging structure	
N.C.	Normally Closed	
N.O.	Normally Open	
N/A	Not Applicable	
NFPA	National Fire Protection Association	
NPT	National Pipe Thread	
SIL	Safety Integrity Level	
UNC	Unified Coarse Thread	
VAC	Volts Alternating Current	

Table of Contents

Quasar 90	0 Open-Path Gas Detection System User's and Maintenance Manual i
Legal Not	iceiii
Release F	Historyiv
About this	s Guidev
Abbreviat	ions and Acronymsvi
1 Scope.	
1.1 Pro	oduct Overview
2 Techni	cal Description3
2.1 Fe	atures
2.2 Ap	plications
2.3 Pri	nciple of Operation
2.3.1	Definitions of Terms
2.3.2	Spectral Finger Print
2.3.3	Optical Path
2.3.4	Microprocessor Based
2.3.5	Gas Sensitivity 5
2.3.6	Gas Calibration
2.3.7	Flash Source
2.3.8	Heated Optics
2.3.9	HART Protocol
2.3.10	Handheld Unit6
2.3.11	Modbus RS-485 7
2.3.12	Tilt Mount
2.4 Pro	oduct Certification
2.4.1	ATEX, IECEx8
2.4.2	FM / FMC 8
2.4.3	SIL-28
2.4.4	Functional Test
2.5 Mc	odels and Types
2.6 De	scription10
2.6.1	Flash Source Unit
2.6.2	Detector Unit

3	Operat	ing Modes	13
	3.1 Op	erational Modes	13
	3.1.1	Normal Mode	13
	3.1.2	Maintenance Call Mode (3mA Output)	13
	3.1.3	Fault Mode	14
	3.1.4	Zero Calibration Mode (1mA Output)	14
	3.2 Vis	ual Indicators	15
	3.3 Ou	tput Signals	15
	3.3.1	0-20mA Current Output	15
	3.3.2	RS-485 Interface	16
	3.4 Sys	stem Setup	16
	3.4.1	Detection Function Programming	16
	3.4.2	Detection Setup Function	17
	3.4.3	Detector Default Setup	18
4	Technic	cal Specifications	19
	4.1 Gei	neral Specifications	19
	4.2 Ele	ctrical Specifications	20
	4.2.1	Power Consumption	20
	4.2.2	Electrical input protection	20
	4.2.3	Electrical outputs	20
	4.3 Me	chanical Specifications	21
	4.4 Env	vironmental Specifications	22
	4.4.1	High Temperature	22
	4.4.2	Low Temperature	22
	4.4.3	Humidity	22
	4.4.4	Salt and Fog	22
	4.4.5	Water and Dust	22
	4.4.6	Shock and Vibration	22
	4.4.7	Electromagnetic Compatibility (EMC)	23
5	Installa	ation Instructions	25
	5.1 Int	roduction	25
	5.2 Gei	neral Considerations	
	5.2.1	Personnel	25
	5.2.2	Required Tools	
	5.2.3	Site Requirements	26

F 0 :	TI C	<i>~</i> .
5.2.4	The Source and Detector	
5.2.5	Guidance Tips for Gas Detector Locations	
5.2.6	Wiring	
5.3 F	reparations for Installation	27
5.3.1	General	
5.3.2	Equipment	27
5.3.3	Unpacking the Product	28
5.4	ertification Instructions	29
5.5 C	onduit/Cable Installation	30
5.6	Petector/Source Mounting	30
5.6.1	Tilt Kit P/N 888270	30
5.6.2	Detector/Source Installation	30
5.7 E	Detector Wiring	31
5.8 D	Detector Terminal Wiring	35
5.9 F	lash Source Wiring	35
5.9.1	Wiring	35
5.9.2	Terminal Wiring	36
5 Oper	ating Instructions	. 37
6.1 S	afEye Operation	37
6.2 A	lignment of Unit	37
6.3 P	owering up the System	38
6.4	afety Precautions	39
6.5	ignal Verification	39
6.5.1	Signal Values Limitation	39
6.6 Z	ero Calibration	40
6.7 F	unctional Check of Unit	41
7 Maint	enance Instructions	. 43
7.1	General Maintenance	43
7.2 F	eriodic Maintenance	43
7.2.1	Routine Optical Surface Cleaning	44
7.2.2	Signal Verification	44
7.2.3	Function Check of Unit	44
R Troul	pleshooting	45

Appen	ndices	47
A Wi	iring Configurations	49
A.1	RS-485 Communication Network	53
В Ас	cessories	55
B.1	Tilt Mount P/N 888270	55
B.2	Pole Mount (U-Bolt 5 inch) P/N 799225	55
B.3	Commissioning Kit P/N 888247	55
B.4	RS485 Hand-Held Diagnostic Unit P/N 799810	56
B.5	HART Hand-Held Diagnostic Unit P/N 888810	56
B.6	HART Hand-Held Harness Kit P/N 888815	56
B.7	USB/RS485 Harness Converter Kit P/N 794079-8	56
B.8	Mini Laptop Kit P/N 777820	56
B.9	Sunshade P/N 888263	57
C SI	L-2 Features	59
C.1	Safety Relevant Parameters for the Quasar 900 Open Path Gas Detector	59
C.2	General Conditions for Safe Use	60
Techn	ical Support	61

Table of Contents

List of Figures

Figure 1: P/N Definition of Quasar 900	9
Figure 2: Flash Source	10
Figure 3: Detector	11
Figure 4: Tilt Mount	32
Figure 5: Detector and Tilt Mount Assembly	33
Figure 6: Detector with Cover Removed	34
Figure 7: Source with Cover Removed	36
Figure 8: Magnetic Mode Selector	40
Figure 9: Detector Wiring Terminal	49
Figure 10: Source Wiring Terminal	50
Figure 11: 0-20mA Sink 4-Wire	51
Figure 12: 0-20mA Non-isolated Sink 3-Wire	51
Figure 13: 0-20mA Source 3-Wire	52
Figure 14: RS-485 Networking for Wiring Option 3	53

List of Figures xi



List of Tables

Table 1: Gas Concentrations Measurement Terms	4
Table 2: Model Numbers and Installation Distances	9
Table 3: Detector LED Indications	. 15
Table 4: Source LED Indications	. 15
Table 5: Standard (default) 0-20mA Current for the Gas Channel	.16
Table 6: Detector Default Set Up	.18
Гable 7: Source Default Set Up	.18
Fable 8: Detection Distance Range	.19
Fable 9: Detector and Source Maximum Power Consumption	. 20
Table 10: Tools	.26
Гable 11: Tilt Mount Kit	.30
Гable 12: Wiring Options	.35
Table 13: Flash Source Wiring Options	.36
Table 14: Maintenance Channels Limit Values	.39
Fable 15: Troubleshooting	. 45

xii List of Tables

1 Scope

> In this chapter...

Product Overview

page 1

1.1 Product Overview

The SafEye Quasar 900 IR Open-Path Gas Detector employs an advanced Xenon Flash Source and integrated electronics package, both housed in improved, Stainless steel housings to provide high quality and performance, fast response, line of sight gas monitoring. This high quality is backed by 3 years warranty for the complete SafEye system and 10 years for the Xenon Flash source bulb.

Quasar 900 detects ambient combustible gases over a path length of up to 660ft. (200 m), even in harsh environments where dust, fog, rain, snow or vibration can cause a high reduction of signal. The SafEye Quasar 900 can maintain operation in up to 90% signal obscuration and ± 0.5 degree of misalignment.

Quasar 900 is manufactured only in stainless steel with heated optical window to improve performance in icing, snow, and condensation conditions. The programmable functions are available through a RS 485 or HART port used with Host software supplied by Spectrex and a standard PC or an LS handheld unit.

The Quasar Source and Detector unit enclosures are ATEX and IECEx approved Exd flameproof with an integral segregated rear, Exe terminal compartment which avoids exposure of the sensors and electronics to surrounding environment. The Detector also has a plug interface for connection to handheld PC or HART handheld, which is intrinsically safe. Hence the combined approval: Ex II 2(2)G D

Ex d e ib [ib Gb] IIB+H2 T4 Gb, Ex tb IIIC T135°C Db IP66.

Ta=-55°C to +65°C

This manual consists of a full description of the Detector and its features. It contains instructions on the installation, operation and maintenance.

- To use the WinHost software to change the required functions and for maintenance, refer to Manual TM 888050 for instructions
- To use the I.S Handheld Unit to change the required functions and for maintenance, refer to Manual TM 799060 for instructions.
- To use HART Protocol to change the required functions and for maintenance refer to Manual TM 888030. The HART can be connected on the 0-20mA line or through the IS port for setting

Product Overview 1

2 Product Overview

2 Technical Description

> In this chapter...

Features	page 3
Applications	page 4
Principle of Operation	page 4
Product Certification	page 7
Models and Types	page 9
Description	page 10

2.1 Features

- Long Range Gas Detection up to 660ft (200m)
- Simultaneous detection of C1-C8 flammable gases
- High Sensitivity and fast response to Hydrocarbon gases
- Heated optics to improve performance in icing, condensation and snow conditions
- Continuous operation in extreme and harsh environmental
- Conditions
- Solar blind and immune to industrial environments.
- Withstands extreme vibration conditions
- Standard 0-20 mA Output
- "Maintenance Call" (3mA)
- HART Protocol: Communication Protocol
- RS-485 Output Modbus compatible for PC Communication Network for a maximum of 247 systems
- Simple one person installation, alignment, and calibration
 ATEX & IECEx per Ex II 2(2)G D, Ex d e ib [ib Gb] IIB+H2 T4 Gb,

Ex tb IIIC T135°C Db IP66

Ta=-55°C to +65°C

- TUV approved per SIL2 requirements
- FM / FMC approved per: Class I Div. 1 Group B, C and D;

Class II/III Div. 1 Group E, F and G

- Functional tested by FM per EN60079-29-4 and approved per FM 6325
- · Programmable configuration via the handheld unit
- Fast connection to I.S. approved handheld diagnostic/calibration unit
- Warranty 3 years for the complete SafEye system
- Warranty 10 years for Xenon Flash bulb

Features 3

2.2 Applications

The Quasar 900 system may be used to monitor flammable gas concentration in various applications, such as:

- Petrochemical, pharmaceutical and other chemical storage and production areas.
- Flammable and toxic chemical storage sites and hazardous waste disposal areas.
- Refineries, oil platforms, pipelines, refueling stations and fuel storage facilities.
- Hazardous loading docks, transportation depots and shipping warehouses
- Engine rooms
- Compressor and pumping stations
- Test cells
- LNG-LPG Systems
- Offshore Floating Production Storage and Shipping vessels (FPSO), and fixed oil rigs.

2.3 Principle of Operation

The Quasar system detects gases through a dual spectral range monitoring, analyzing the absorption of radiation caused by gases in the atmosphere and comparing it (ratio) to background atmospheric absorption.

2.3.1 Definitions of Terms

The following list defines gas concentrations measurement terms that are used in this manual:

Table 1: Gas Concentrations Measurement Terms

Term	Description	
LEL	Lower Explosive Limit: The minimum concentration of a substance (gas/vapor) in air mixture that can be ignited. This mixture is different for every gas/vapor, measured in % of LEL.	
LEL.m	Integral of Concentration in LEL units (1 LEL = 100% LEL) and the operation distance in meters (m).	

2.3.2 Spectral Finger Print

Each hazardous material is detected at a specific wavelength selected according to its specific spectral absorption or "finger print". The detection process involves two separate filters, one transmitting radiation that is absorbed by a particular gas and one that is not sensitive to it.

4 Applications

2.3.3 Optical Path

The presence of hazardous airborne vapors, gases, or aerosols in a monitored area is detected when the defined substance crosses/enters the optical path between the radiation source unit and the detector.

Hazardous gases /vapors present in the atmosphere cause absorption of the radiation pulse in the optical path between the radiating source and the detector unit at some specific wavelengths. This causes a change in the signal intensity received by the detector, which is translated into an output related to the detector's measuring scale.

The system analyzes the defined open path at the spectral bands specific to the materials being monitored. The Automatic Gain Control (AGC) unit compensates for environmental disturbances such as fog, rain, etc., through a constant comparison with its dual spectral beam.

2.3.4 Microprocessor Based

The incoming signals are analyzed by the built in microprocessor. A sophisticated mathematical algorithm calculates between the various functions of the detected signal thresholds. Statistics, ratio algorithms, data communications, diagnostics and other functions are performed.

2.3.5 Gas Sensitivity

The SafEye Quasar 900 Model uses wavelengths around 2.3μ spectral band to measure air flammability potential between the source and detector. At this wavelength, all hydrocarbon materials have an absorption peak. This enables the detector to achieve both regular sensitivity of 0-5 LEL.m.

The Quasar 900 detects hydrocarbon gases including methane, ethylene, propane, ethane, butane, and so on.

2.3.6 Gas Calibration

The Quasar 900 has three calibrations that can be changed by function Setup:

- Gas 1 100% methane
- Gas 2 100% propane
- Gas 3 100% ethylene

The full scale of methane and propane is 5 LEL.m.

The full scale of ethylene is 8 LEL.m.

2.3.7 Flash Source

The Xenon Flash Source was originally introduced in the first SafEye development and was designed to overcome false alarms, which were experienced by early generations of the open path system. The new SafEye Quasar 900 employs the latest generation of flash bulbs to provide even more power and extended operation life (10 years).

2.3.8 Heated Optics

SafEye Quasar includes heated optics for the Detector and source. The heater increases the temperature of the optical surface by 5-8°F (3-5°C) above the ambient temperature to improve performance in icing, condensation and snow conditions. The heated optics is configured to automatically operate when the change in temperature requires the heating (default).

However, the heated optics can be defined as one of the following modes:

- 1 Not operated (not an option on source unit)
- **2** On continuously
- **3** Automatic, per temperature change (default)

See System Setup, page 16.

When operated 'per temperature change', the user can define the start temperature below which the window will be heated (default 41°F (5°C)). This temperature can be defined between 32°F (0°C) to 122°F (50°C). The heating will stop when the temperature is 27°F (15°C) above the start temperature.

2.3.9 HART Protocol

The Quasar 900 uses the HART Protocol.

HART Communication is a bi-directional industrial field communication protocol used to communicate between intelligent field instruments and host systems. HART is the global standard for smart instrumentation and the majority of smart field devices installed in plants worldwide are HART-enabled.

HART technology is easy to use and very reliable.

Through the HART connection, the SafEye is able to perform:

- Detector set-up
- Detector troubleshooting
- Detector health and status

For more details, refer to the HART Manual TM 888030.

The HART communication can be connected on the 0-20mA line or through the IS connection with a standard Handheld loaded with our host software and a special harness.

2.3.10 Handheld Unit

The I.S.-approved handheld diagnostics unit (Part no. 799810) is available to make installation and maintenance easier. This is an all-on-one diagnostic / calibration / interrogation plug-in unit that allows for one-person installation and maintenance.

The handheld unit can be used:

- **1** For on-site function programming and set up changes to the Detector.
- **2** During installation, the handheld unit will display all the detector's parameters and confirm that the installation has been completed successfully. It is also required to perform the necessary Zero calibration function
- **3** For Maintenance and Trouble Shooting The handheld unit will provide recommendation of maintenance action to overcome and optimize the **Detector's performance.**

For more details, refer to Manual TM 799060.

2.3.11 Modbus RS-485

For more advanced communications, the Quasar 900 has a RS-485 Modbus-compatible output that provides data communication from a network (up to 247 Detectors) to a host computer or universal controller for central monitoring. This feature enables easy maintenance, local and remote diagnostic tools.

2.3.12 Tilt Mount

The new design stainless steel tilt mount provides a smaller installation footprint that can conform to limited space constraints, while the sturdy construction maintains alignment even in constant vibration. The improved 'X' and 'Y' axis worm-gear adjustments provide quick and easy alignment for installation and maintenance procedures.

2.4 Product Certification

The open path Quasar 900 is approved for the following certification:

- ATEX, IECEx, page 8
- FM / FMC, page 8
- SIL-2, page 8
- Functional Test, page 8

Product Certification 7

2.4.1 ATEX, IECEx

The Quasar 900 is ATEX approved per SIRA 12ATEX1212X and IECEx per IECEx SIR 12.0086X per:

• ATEX Ex II 2(2)G D

Ex d e ib [ib Gb] IIB+H2 T4 Gb Ex tb IIIC T135°C Db IP66

• T Ambient -55°C to +65°C

This product is suitable to use in hazardous zones 1 and 2 with IIB+H2 group vapors present, and zones 21 and 22 with IIIC combustible dust types.

2.4.2 FM / FMC

The Quasar 900 is approved to FM / FMC Explosion Proof per:

- Class I, Div. 1 Group B, C and D, T6 -58°F (-50°C) ≤ Ta ≤ 149°F (65°C)
- Dust Ignition Proof Class II/III Div. 1, Group E, F and G.
- Ingress Protection IP66 & IP68, NEMA 250 Type 6P.

IP68 is rated for 2 meter depth for 45 minutes.

2.4.3 SIL-2

The Quasar 900 is TUV approved for SIL2 requirements per IEC 61508.

The alert condition according to SIL-2 can be implemented by alert signal via 0-20mA current loop.

For more details and guidelines on configuring, installing, operating and servicing, see SIL-2 Features, page 59, and TUV report no. 968/EZ 619.00/13.

2.4.4 Functional Test

The Quasar 900 was functional approved per FM 6325

The Quasar 900 was functional tested by FM per EN60079-29-4

2.5 Models and Types

The Quasar 900 includes 4 models with the same detector and different source. That gives the ability to get detection at distances of 7-200m.

Table 2: Model Numbers and Installation Distances

Model No.	Detector	Source	Min. Installation Distance	Max. Installation Distance
901	QR-X-11X	QT-X-11X	23 ft. (7 m)	66 ft. (20 m)
902	QR-X-11X	QT-X-21X	50 ft. (15 m)	132 ft. (40 m)
903	QR-X-11X	QT-X-31X	115 ft. (35 m)	330 ft. (100m)
904	QR-X-11X	QT-X-41X	265 ft. (80 m)	660 ft. (200 m)

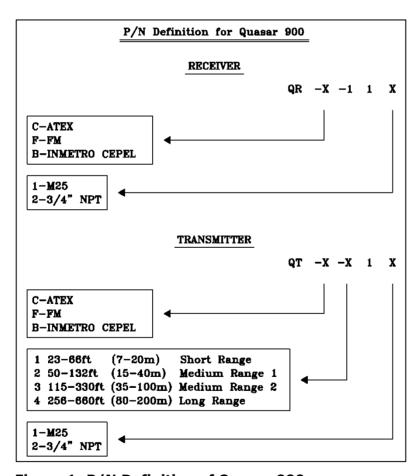


Figure 1: P/N Definition of Quasar 900

Models and Types 9

2.6 Description

The SafEye comprises two main units:

- The Flash Infrared Source (Transmitter)
- The Infrared Detector (Receiver)


Quasar 900 detects gases over an open path transmitted from the Flash Source to the Detector.

2.6.1 Flash Source Unit

The Flash Source unit emits IR radiation pulses at the rate of two pulses per second. The pulse width (5-10µsec) is very powerful. The front of the source SafEye has a lens that collimates the IR beam for maximum intensity. The front window is heated to improve performance in icing, condensation and snow conditions.

There are four source types:

- For Short Range -901 source P/N QT-X-11X
- For Medium Range 1- 902 source P/N QT-X-21X
- For Medium Range 2- 903 source P/N QT-X-31X
- For Long Range 904 source P/N QT-X-41X

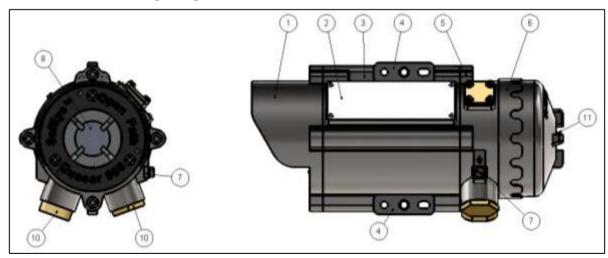

1	Front Window Section	6	Back Cover
2	Label	7	Earth Terminal
3	Main Housing	8	Front Window
4	Mounting Plate	10	Cable Inlet
5	Junction Box	11	Indication Led

Figure 2: Flash Source

10 Description

The sources for models 901, 902 and 903 are the same electronically and optically. The only difference is in the apparatus


The source for model 904 has different optics with different XENON lamp source.

2.6.2 Detector Unit

The Detector receives the transmitted pulsed radiation signals from the Flash Source. The signals are then amplified and fed into an analog to digital signal converter to be processed by the internal microprocessor. When the signals drop below a prescribed level, the internal microprocessor will compensate for them. This will allow the signal to be maintained even in severe weather conditions. The data is sent to the output interface section.

The front window of the Detector is heated to improve performance in icing, condensation and snow conditions.

There is one detector type that is suitable for all Quasar models 901, 902, 903 and 904 – P/N QR-X-11X.

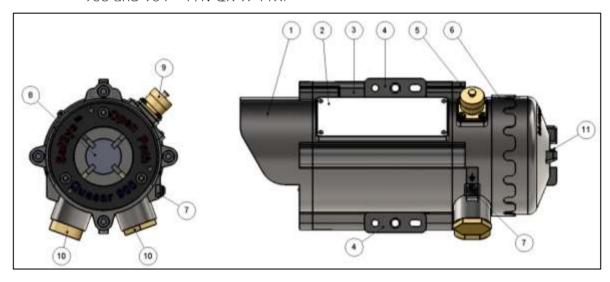

1	Front Window Section	7	Earth Terminal
2	Label	8	Front Window
3	Main Housing	9	Handheld Fast Connection
4	Mounting Plate	10	Cable Inlet
5	Junction Box	11	Indication Led
6	Back Cover		

Figure 3: Detector

Description 11

12 Description

3 Operating Modes

> In this chapter...

Operational Modes	page 13
Visual Indicators	page 15
Output Signals	page 15
System Setup	page 16

3.1 Operational Modes

The Quasar 900 has four operational modes:

- Normal Mode, page 13
- Maintenance Call Mode (3mA Output), page 13
- Fault Mode, page 14
- Zero Calibration Mode (1mA Output), page 14

3.1.1 Normal Mode

This mode is used for gas detection. In normal mode, the following statuses are possible:

- Normal Signal received from gas detection is at safe levels.
- Warning* Gases have been detected at warning levels.
- Alarm* Gases have been detected at alarm levels.

Note: For the standard 0-20mA output, the Warning and Alarm levels are not relevant. The user chooses these alarm levels at the controller. The output Detector will be 4mA at zero reading and 20mA for full-scale reading.

Warning and Alarm states can be seen through the LED, RS485 and HART.

If the RS485 output is used, the Detector changes its status from 'N' to 'W' at Warning level and to 'A' at Alarm.

3.1.2 Maintenance Call Mode (3mA Output)

This mode indicates low signal or low signal ratio that may be caused by a dirty window; misalignment; poor source or that one of the Detectors parameters is at the 'limit' value.

The Detector **continues** to function and reads any gas present, but provides a (3mA) pre-warning signal that a maintenance procedure is required.

Operational Modes 13

3.1.3 Fault Mode

In the Fault status, there are three fault types. In all Fault types, the LED flashes yellow at 4Hz:

Misalignment (2.5mA) - Non critical

This occurs due to poor alignment. **Detection is no longer possible.**

• Fault 1 (2mA Output) - Non critical

If this occurs, it is due to blockage, very low signal or in the case of partial obscuration or full beam block and **detection is no longer possible**. The Detector's proper operation can be restored (Auto reset) during operation if the condition causing the problem is removed or resolved. This mode occurs after a delay of 60 sec. from the moment of the fault. This delay is important to eliminate momentary obscuration due to passing through the beam.

• Fault 2 (1mA Output) - Critical

In this case, the **detection is disabled** due to electrical / software operational failure, central device (memory, processor) fault or low voltage. Such fault causes the Detector to cease operation.

If there is a fault in 0-20mA loop, the output is 0mA.

3.1.4 Zero Calibration Mode (1mA Output)

This mode zeros the base level from which the Detector will read gas.

It should only be performed when there are:

- No combustible gases present
- Clear path between the Flash Source and Detector
- Clear weather conditions.

Zero calibration must be done after installation, re-alignment and window cleaning, using the handheld unit (or Host software on PC).

14 Operational Modes

3.2 Visual Indicators

One 3-color LED indicator is located in the back side of the detector/source and can be seen through the back cover window. See Figure 2 and Figure 3, item 11.

The detector statuses are listed in Table 3.

Table 3: Detector LED Indications

Detector Status	LED Color	LED Mode
Fault	Yellow	4Hz - flashing
Alignment / Standby	Yellow	1Hz - flashing
Zero Calibration	Yellow Constant	
Normal	Green	1Hz - flashing
Warning	Red	2Hz - flashing
Alarm	Red	Constant

The source statuses are listed in Table 4.

Table 4: Source LED Indications

Source Status	LED Color	LED Mode	
Fault	Yellow	4Hz - flashing	
Normal	Green	1Hz - flashing	

3.3 Output Signals

The SafEye system provides the following outputs:

- 0-20mA Current Output, page 15
- RS-485 Interface, page 16

3.3.1 0-20mA Current Output

The 0-20mA output provides the detector status measurement showing a continuous reading of exact gas concentration.

The 0-20mA functions as current sink, but it can be configured as Source (see Appendix A).

The maximum permitted load resistance for the 0-20mA output is 500Ω .

Visual Indicators 15

Table 5: Standard (default) 0-20mA Current for the Gas Channel

Current Reading	Status and Description		
0mA +0.2mA	Fault in 0-20mA loop		
1mA ±0.2mA	Zero Calibration (In Progress), Fault 2		
2mA ±0.2mA	Fault 1 (non-Critical)		
$2.5\text{mA} \pm 0.2\text{mA}$	Misalignment fault		
3mA ±0.2mA	"Maintenance Call"		
4mA±0.2mA	No gas present		
4-20mA	Continuous measuring of gas concentration at a range between 0 and full scale. For methane and propane This translates to 3.2mA per LEL.m and for ethylene to 2mA per LEL.m.		
21mA	Concentration is over the range limit (more than full-scale concentration).		

3.3.2 RS-485 Interface

The RS-485 input/output sends complete data information to a PC and receives data or control commands from the PC. The protocol is Modbus compatible. The communication with the PC that is operated through the interface is executed only when used with appropriate host software.

3.4 System Setup

This section includes the following topics:

- Detection Function Programming, page 16
- Detection Setup Function, page 17
- Detector Default Setup, page 18

3.4.1 Detection Function Programming

The SafEye Quasar 900 incorporates several functions that can be set by the customer using:

- Host software. Refer to manual TM 888050 for programming instructions.
- Handheld unit (P/N 799810). Refer to manual TM 799060 for programming instructions. The connection of the handheld to the detector is fast and intrinsically safe and allows function change with no need to open the detector.

16 System Setup

3.4.2 Detection Setup Function

See Detector Default Setup, page 18 for default settings.

Setup includes the following options:

- Gas Calibration, page 17
- Automatic BG Calibration, page 17
- Address Setup, page 17
- Heated Optic Operation, page 17

3.4.2.1 Gas Calibration

Three gas types can be selected for maximum compatibility to the required measured gas(es).

Gas Types:

- Methane full scale 5 LEL.m.
- Propane full scale 5 LEL.m.
- Ethylene full scale 8 LEL.m.

These three calibrations are standard calibrations.

3.4.2.2 Automatic BG Calibration

When Automatic BG Calibration is enabled, the detector automatically zero calibrates the background changes such as electronic drift, dust on the window, to keep the detector accurate. This is done in very slow changes that do not affect the gas reading.

- Enable: Automatic BG calibration is performed according to background
- **Disable**: The Detector is not updated due to change in background

3.4.2.3 Address Setup

The Detector provides up to 247 addresses that can be used in RS-485 communication link.

3.4.2.4 Heated Optic Operation

The heated optics for the Detector unit can be defined as one of the following modes:

- OFF -Not operated
- ON -Operated continuously
- AUTO On, per temperature change (**default**)

When operated per temperature change, the user can define the start temperature below which the window will be heated between 0 to 50°C. The Detector will stop heating the window when the temperature will be 15°C above the defined temperature.

This feature relates to the Detector only.

System Setup 17

The Source heated optic must be defined with the order in two options:

- Heated continuously.
- Start heating below 41°F (5°C). (**default**)

3.4.3 Detector Default Setup

The Detector has 4 functions that can be programmed according to the customer requirement at factory or at customer facility using a software Host or a handheld unit. The standard set up is as follows:

Table 6: Detector Default Set Up

Function	Setup
Gas Type	1
Automatic BG Calibration	Enabled
Heat mode	Auto
Heat on	5

Table 7: Source Default Set Up

Function	Setup	
Heat mode	Auto	
Heat on	5	

The Source default can be changed with the same Host.

18 System Setup

4 Technical Specifications

> In this chapter...

General Specifications	page 19
Electrical Specifications	page 20
Mechanical Specifications	page 21
Environmental Specifications	page 22

4.1 General Specifications

Detected Gases: Simultaneous detection of C1-C8

flammable gases

Detection Distance range: Table 8

Table 8: Detection Distance Range

Model No.	Detector	Source	Min. Installation Distance	Max. Installation Distance
901	QR-X-11X	QT-X-11X	23 ft. (7 m)	66 ft. (20 m)
902	QR-X-11X	QT-X-21X	50 ft. (15 m)	132 ft. (40 m)
903	QR-X-11X	QT-X-31X	115 ft. (35 m)	330 ft. (100m)
904	QR-X-11X	QT-X-41X	265 ft. (80 m)	660 ft. (200m)

Response Time: 3 sec to T90 **Spectral Response:** 2.0 - 3.0 micron

Sensitivity Range:			Full Scale LEL.m.	Warning LEL.m.	Alarm LEL.m.
	Gas 1	Methane	5	1	3
	Gas 2	Propane	5	1	3
	Gas 3	Ethylene	8	1.6	4.8

Field of View: Line of Sight

Alignment $\pm 0.5^{\circ}$

Tolerance:

Drift: \pm 7.5% of the reading or \pm 4% of the full scale

(whichever is greater)

Minimum Detectable 0.15 LEL.m

Level:

Temperature Range: $-67^{\circ}F$ ($-55^{\circ}C$) to $+149^{\circ}F$ ($+65^{\circ}C$)

Immunity to false alarm:

Does not produce false alarm and is not influenced by Solar Radiation, Hydrocarbon Flames and other external IR Radiation Sources.

4.2 Electrical Specifications

Operating Voltage: 18-32 VDC

4.2.1 Power Consumption

Table 9: Detector and Source Maximum Power Consumption

	Without Heated Optic (Max.)	With Heated Optic (Max.)
Detector	200mA	250mA
Source	200mA	250mA

4.2.2 Electrical input protection

The input circuit is protected against voltage-reversed polarity, voltage transients, surges and spikes according to EN50270.

4.2.3 Electrical outputs

4.2.3.1 0-20mA Current Output

The 0-20mA is isolated sink option. This output can be configured as Source (see Appendix A).

The maximum permitted load resistance is 500 ohm.

4.2.3.2 Communication Network

The Detector is equipped with an RS 485-communication link that can be used in installations with computerized controllers.

Communication is compatible with the Modbus protocol:

- This protocol is a standard and is widely used.
- It enables continuous communication between a single standard Modbus controller (Master device) and a serial Network of up to 247 Detectors.
- It enables connection between different types of Spectrex Detectors or other Modbus devices to the same Network.

4.2.3.3 HART Protocol

The HART Protocol is a digital communication signal at low level on top of the 0-20mA.

This is a bi-directional field communications protocol used to communicate between intelligent field instruments and the Host System.

Through the HART Protocol the detector can:

- Display set-up
- Reconfigure set-up
- Display detector status and definition
- Perform detector diagnostic
- Troubleshooting

4.3 Mechanical Specifications

Enclosure: The Detector, Source and tilt mount are St. St. 316

Electro chemical and passivized coating.

Explosion Proof: ATEX & EX II 2(2) GD,

IECEX Ex d e ib [ib Gb] IIB+H2 T4 Gb

Ex tb IIIC T135°C Db Ta=-55°C to +65°C

FM/FMC Class I Div. 1 Groups B, C, and D

Class II/III Div. 1 Groups E, F, and G T6 -58°F (-50°C) \leq Ta \leq 149°F (65°C)

Functional Approved per FM 6325

Testing: Tested by FM per EN60079-29-4

Water and Dust IP 66 and IP 68

Tight: IP68 is rated for 2 meter depth for 45 minutes.

NEMA 250 type 6p

Electrical Conformal coated

Modules:

Electrical (Two options - specified at time of order)

Connection: 2 X M25 (ISO)

2 X 3/4" - 14NPT conduits

Dimensions: Detector 10.5 x 5.1 x 5.1 in (267 x 130 x 130mm)

Source 10.5 x 5.1 x 5.1 in (267 x 130 x 130mm)

Tilt Mount $4.7 \times 4.7 \times 5.5$ in $(120 \times 120 \times 40 \text{mm})$

Weight: Detector 11 lb. (5 kg)

Source 11 lb. (5 kg) Tilt Mount 4.2 lb. (1.9 kg)

4.4 Environmental Specifications

The SafEye system is designed to withstand harsh environmental conditions. The source and detector units compensate for adverse conditions while maintaining accuracy.

4.4.1 High Temperature

Designed to meet MIL-STD-810C, method 501.1 procedure II.

Operating Temperature: $+149 \, ^{\circ}\text{F} \, (+65 \, ^{\circ}\text{C})$ Storage Temperature: $+149 \, ^{\circ}\text{F} \, (+65 \, ^{\circ}\text{C})$

4.4.2 Low Temperature

Designed to meet MIL-STD-810C, method 502.1, procedure I

Operating Temperature: -67 °F (-55 °C) **Storage Temperature:** -67 °F (-55 °C)

4.4.3 Humidity

Designed to meet MIL-STD-810C, method 507.1, procedure IV relative humidity of up to 95% for the operational temperature range.

4.4.4 Salt and Fog

Designed to meet MIL-STD-810C, method 509.1 procedure I. Exposure to a 5% salt solution for 48 hours.

4.4.5 Water and Dust

• IP66 per EN60529

• IP68 per EN60529

Dust: Totally protected against dust

Liquids: Protected against immersion between 15 cm and 1m in depth. Protected against

cm and 1m in depth. Protected against

all water jets from all directions.

4.4.6 Shock and Vibration

Vibration: Designed to meet MIL-STD-810C,

method 514.2, procedure VIII.

Mechanical Shock: Designed to meet MIL-STD-810C,

method 516.1, procedure I.

4.4.7 Electromagnetic Compatibility (EMC)

This product is in conformance with EMC per EN50270:

Radiated Emission: EN55022 **Conducted Emission:** EN55022 **Radiated Immunity:** EN61000-4-3 **Conducted Immunity:** EN61000-4-6 ESD: EN61000-4-2 **Burst:** EN61000-4-4 Surge: EN61000-4-5 **Magnetic Field:** EN61000-4-8

To fully comply with EMC directive 2004/108/EC and protect against interference caused by RFI and EMI, the cable to the detector must be shielded and the detector must be grounded. The shield should be grounded at the detector end.

5 Installation Instructions

> In this chapter...

Introduction	page 25
General Considerations	page 25
Preparations for Installation	page 27
Certification Instructions	page 29
Conduit/Cable Installation	page 30
Detector/Source Mounting	page 30
Detector Wiring	page 31
Detector Terminal Wiring	page 35
Flash Source Wiring	page 35

5.1 Introduction

The Detector and Flash Source units can be installed and maintained with the use of general-purpose common tools and equipment. The installation procedure has to be performed by suitably qualified personnel.

This section does not attempt to cover all of the standard practices and codes of installation. Rather, it emphasizes specific points of consideration and provides some general rules for suitably qualified personnel. Special safety precautions are stressed wherever applicable.

5.2 General Considerations

5.2.1 Personnel

Only suitably qualified personnel, familiar with the local codes and practices, trained for gas detection maintenance should be employed. Wiring should only be performed or supervised by someone with knowledge of electronics and in particular wiring installation.

Introduction 25

5.2.2 Required Tools

The detector can be installed using general-purpose common tools and equipment. Table 10 lists the specific tools required to install the detector.

Table 10: Tools

Tools	Function		
Hex Key 10 mm	Mount the detector on the tilt mount		
Hex Key 3/16 inch	Align the detector		
Flat Screw Driver 4 mm	Connect ground terminal		
Flat Screw Driver 2.5 mm	Connect wires to the terminal blocks		

5.2.3 Site Requirements

The installation position of the SafEye system must take into account if the gas being monitored is heavier or lighter than air, and the individual site requirements. The site selected must give the Detector a direct view to the Source. The mounting point for each item should be secure and stable with minimal vibrations. Equipment should be either mounted in a position where it cannot be knocked out of alignment, or guarded from physical impact.

5.2.4 The Source and Detector

The appropriate Detector should be selected for the length of open path to be monitored. To allow for ageing of the Source and a reduction of the IR signal due to adverse weather we recommend using a Detector that is not at the limit of its operating range.

The open path between the Source and Detector and the immediate surroundings should be kept clear of obscuration that might hinder the free movement of air in the protected area or block the infrared beam.

5.2.5 Guidance Tips for Gas Detector Locations

Guidance Tips for Gas Detector locations in order to provide the best detection coverage:

- Below potential leak source for heavier than air gases
- Above potential leak sources for lighter than air gases
- Near to leak sources along the expected leak trajectory, taking into account prevailing wind directions
- Between leak source and potential ignition sources
- In area with expected heavy fog, rain or snow, consider the effect of long range installation and install the Detector at shorter range with the maximum intensity model available.

5.2.6 Wiring

- For wiring, use color-coded conductors or suitable wire markings or labels. The wire cross-section must be between 1 mm² to 2.5 mm² (18 14 AWG).
- The selected wire gauge should be based on the number of Detectors used on the same loop, and the distance from the control unit. The maximum number of wire connections in one terminal is two (2) wire cross-sections, each of 1 mm².
- To fully comply with EMC directive and protect against interference caused by RFI and EMI, the cable to the detector must be shielded and the detector must be grounded. The shield should be grounded at the detector end.

5.3 Preparations for Installation

5.3.1 General

Installation should comply with local, national and international regulations and norms as applicable to gas Detectors and approved electrical devices installed in hazardous areas. The Detectors can be installed with general-purpose common tools and equipment.

5.3.2 Equipment

The System should include the following (in addition to this manual):

- Detector unit QR-X-11X (See Models and Types, page 9)
- Source unit QT-X-X1X (See Models and Types, page 9)
- Two Tilt Mount Bases P/N 888270
 - 1 base is used for the Detector
 - 1 base is used for the Flash Source
- Commissioning Kit there are three commissioning kit options:
 - 888247-1 for methane calibration
 - 888247-2 for propane calibration
 - 888247-3 for ethylene calibration

The Commissioning kit includes:

- Telescope Kit P/N 888210
- Function Check Filters P/N 888260-1÷6
- Other accessories are available (per the customer request):
 - Handheld Unit P/N 799810
 - Pole Mount (U-Bolt 5 inch) P/N 799225
 - HART Hand-Held Diagnostic Unit P/N 888810

- HART Hand-Held Harness Kit P/N 888815
- USB/RS485 Harness Converter Kit P/N 794079-8
- Mini Laptop Kit P/N 777820
- Sunshade P/N 888263

See details in Appendix B.

5.3.3 Unpacking the Product

Upon receipt of your detector, check and record the following:

- 1 Verify the appropriate Purchase Order. Record the Part No. and the Serial No. of the detectors and source units and the installation date in the appropriate log book.
- **2** Open the container package immediately prior to detector installation and visually inspect the detectors; sources and accessories.
- **3** Verify that all components required for the detector installation are readily available before commencing the installation. In the event that the installation is not completed in a single session, secure and seal detectors and conduits.

5.4 Certification Instructions



Warning: Do not open the detector, even when isolated, when flammable atmosphere is present.

Use the following certification instructions:

- The cable entry point may exceed 182°F (83°C) suitable precautions should be taken when selecting the cable.
- The equipment may be used with flammable gases and vapors with apparatus groups IIA and IIB +H2 T4 in the ambient temperature range -67°F (-55°C) to +149°F (+65°C).
- Installation shall be carried out by suitably trained personnel in accordance with the applicable code of practice e.g. EN 60079-14:1997.
- Inspection and maintenance of this equipment shall be carried out by suitably trained personnel in accordance with the applicable code of practice e.g. EN 60079-17.
- Repair of this equipment shall be carried out by suitably trained personnel in accordance with the applicable code of practice e.g. EN 60079-19.
- The certification of this equipment relies upon the following materials used in its construction:

• Enclosure: 316L Stainless Steel

• Window: Sapphire Glass

Seals: EPDM

- If the equipment is likely to come into contact with aggressive substances, then it is the responsibility of the user to take suitable precautions that prevent it from being adversely affected, thus ensuring that the type of protection provided by the equipment is not compromised.
 - Aggressive substances: For example, acidic liquids or gases that may attack metals, or solvents that may affect polymeric materials.
 - Suitable precautions: For example, regular checks as part of routine inspections or establishing from the material's data sheets that it is resistant to specific chemicals.
- Special Conditions for safe use: The Quasar 900 Open Path Gas
 Detectors & Flash Source Units shall not be used as safety related
 devices in accordance with directive 94/9/EC.

5.5 Conduit/Cable Installation

The conduit and cable installation must comply with the following guidelines:

- **1** To avoid water condensation in the detector, it should be installed with the conduits/cable entries facing downwards.
- **2** Use flexible conduits/cables for the last portion connecting to the detector.
- **3** When pulling the cables through the conduits, ensure that they are not tangled or stressed. Extend the cables about 12 inches (30cm) beyond the Detector location to accommodate wiring after installation.
- **4** After the conductor cables have been pulled through the conduits, perform a continuity test.

5.6 Detector/Source Mounting

The Detector Source should be mounted with the Tilt Mount Kit, Model 888270. The Tilt enables the Detector to be rotated up to 60° in all directions and fine alignment of up to 10°.

5.6.1 Tilt Kit P/N 888270

The following contents are included with the Tilt Mount Kit:

Table 11: Tilt Mount Kit

Item	Qty	Type/Model
Tilt Mount	1	888269
Screw	1	M10 x 1.5
Spring Washer	1	No. 10

5.6.2 Detector/Source Installation

(Figure 4 and Figure 5)

The detector and the source can be installed in two ways with the same Tilt Mount.

> To install the Detector/Source:

1 Place the Tilt Mount holding plate (item 1) in its designated location and secure it with (4) fasteners through four (4) holes dia. 8.5mm.

Notes:


- Skip this step if the Tilt Mount is already installed.
- Detector removal for maintenance purpose does not require Tilt Mount removal.

- 2 Place the Detector, with its conduit/cable inlets pointing downwards on the Detector holding plate of the Tilt Mount (item 2). Secure the Detector with M10 x 1.5 screws with No. M10 spring washers (9,10). Secure the detector to the Tilt Mount using Hex Key No. 7 for M10 x 1.5 screws (item 9).
- **3** Repeat steps 1 2 to install the Source.

5.7 Detector Wiring


> To install the Detector wiring:

- 1 Release the back cover secure bolt (item 15, Figure 5), and open the detector back cover (item 14, Figure 5). The chamber is now revealed.
- 2 Remove the protective plug mounted on the Detector conduit/cable entry inlet; pull the wires through the Detector inlet (item 4, Figure 6). Use a 3/4" 14NPT or M25x1.5 explosion-proof conduit connection / cable gland to assemble the cable / explosion-proof conduit to the Detector.
- **3** Connect the wires to the required terminals (item 2, Figure 6) according to the wiring diagram. See paragraph 5.8 and figures 8, 10, 11, and 12 Appendix A.
- **4** Connect the grounding wire to the ground screw outside Detector (item 3. Figure 6). The Detector must be well grounded to Earth Ground.
- **5** Place and secure the Detector back cover by screwing the cover and securing it using the secure bolt (item 15, Figure 5).

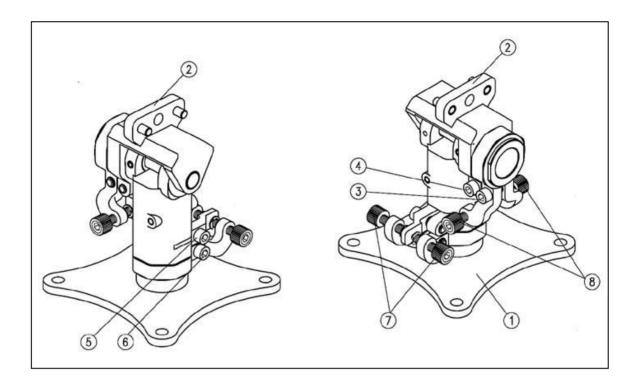


1	Tilt Mount Holding Plate	5	Vertical Fine Alignment Tightening Screw
2	Detector/Source Holding Plate	6	Vertical Crude Alignment Tightening Screw
3	Horizontal Crude Alignment Tightening Screw	7	Vertical Find Alignment Screw
4	Horizontal Fine Alignment Tightening Screw	8	Horizontal Fine Alignment Screw

Figure 4: Tilt Mount

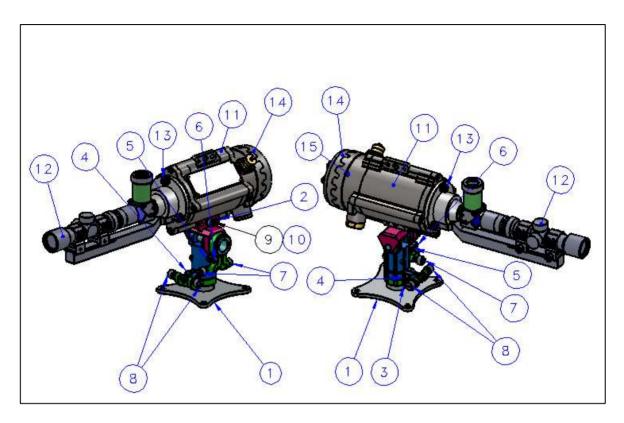

1	Tilt Mount Holding Plate	9	Detector Tightening Screw
2	Detector/Source Holding Plate	10	Detector Tightening Washer
3	Horizontal Crude Alignment Tightening Screw	11	Detector
4	Horizontal Fine Alignment Tightening Screw	12	Telescope
5	Vertical Fine Alignment Tightening Screw	13	Telescope Tightening Bolt
6	Vertical Crude Alignment Tightening Screw	14	Detector Back Cover
7	Vertical Fine Alignment Screw	15	Detector Back Cover Secure Bolt
8	Horizontal Fine Alignment Screw		

Figure 5: Detector and Tilt Mount Assembly

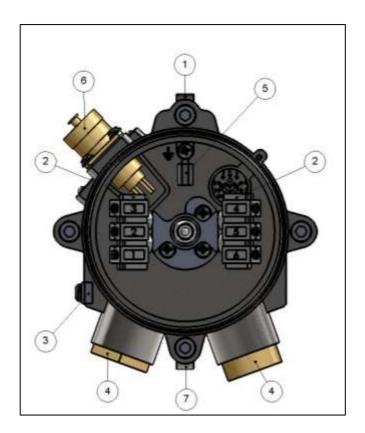

1	Housing	5	Internal Earth Connection
2	Terminal Board	6	Connection to Handheld Unit
3	Earth Terminal	7	Detector Holding Plate
4	Inlet Conduit		

Figure 6: Detector with Cover Removed

5.8 Detector Terminal Wiring

The Detector has six wiring terminals.

The following describes the function of each electrical terminal of the detectors.

Table 12: Wiring Options

Terminal No.	Function
1	Power +24V DC
2	Return +24V DC
3	0-20mA (Input)
4	0-20mA (Output)
5	RS-485 (+)
6	RS-485 (-)

5.9 Flash Source Wiring

5.9.1 Wiring

> To install the wiring:


- 1 Release the back screw bolt (item 15, Figure 5), and open the source back cover (item 14, fig. 4). The chamber is now revealed.
- 2 Remove the protective plug mounted on the source conduit/cable entry inlet; pull the wires through the source inlet (item 4, Figure 7). Use a 3/4" 14NPT or M25x1.5 explosion-proof conduit connection / cable gland to assemble the cable / explosion-proof conduit to the Detector.
- **3** Connect the wires to the required terminals (item 2, Figure 7) according to the wiring diagram. See paragraph Terminal Wiring, page 36 and Figure 11 Appendix A.
- **4** Connect the grounding wire to the ground screw outside Detector (item 3, Figure 7). The source must be well grounded to Earth Ground.
- **5** Place and secure the source back cover by screwing the cover and secure the back screw bolt.

5.9.2 Terminal Wiring

The Flash Source contains six wiring terminals.

Table 13: Flash Source Wiring Options

Terminal No.	Function
1	Power +24V DC
2	Return +24V DC
3	Spare
4	Spare
5	RS-485 (+)
6	RS-485 (-)

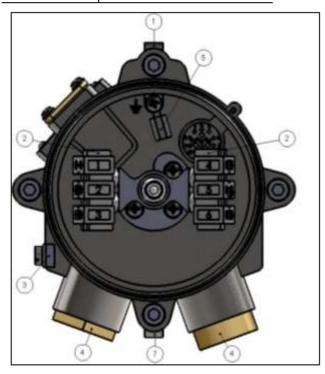

1	Housing	5	Internal Earth Connection
2	Terminal Board	6	N/A
3	Earth Terminal	7	Detector Holding Plate
4	Inlet Conduit		

Figure 7: Source with Cover Removed

6 Operating Instructions

> In this chapter...

SafEye Operation	page 37
Alignment of Unit	page 37
Powering up the System	page 38
Safety Precautions	page 39
Signal Verification	page 39
Zero Calibration	page 40
Functional Check of Unit	page 41

6.1 SafEye Operation

Once the system is positioned, it will monitor for possible specified gases automatically sending signals to a standard control panel or a PC. This section describes the alignment, calibration and operation.

Important! Accurate Alignment is essential for proper operation of the SafEye system.

6.2 Alignment of Unit

Using the Telescope performs full alignment.

Alignment procedure should be performed in two stages: Crude alignment and fine adjustment.

The Telescope includes a Periscope that consists of a prism and an ocular located vertical to the Telescope assembly. This allows the user to observe into the opposite unit perpendicularly to the alignment when access from the rear of the unit is impossible. For installations where rear access is possible the Periscope is not necessary. In this case it can be removed by releasing the Periscope Fastening Screw.

Important Notes:

- 1 Prior To Telescope Installation, verify that the Telescope and Its Sight Mounting are free from any dirt to ensure proper alignment according to factory calibration.
- **2** Do not attempt to change any factory calibration at the Telescope or its mounting. This may prevent optimal alignment.

> To align the unit (see Figure 4):

- **1** Make sure that the Detector and the Flash Source are installed properly. Installation instructions are described in section 5 of this document.
- **2** Remove the front shield using the two captive screws.

SafEye Operation 37

- 3 Install the Telescope Assembly (12) on the detector/source front. Fasten the Telescope with Fastening Screws (13).
- 4 Crude Alignment
 - a Use ¼" Allen screw driver for all alignment screws
 - **b** Loosen screws 5, 6
 - **c** Approximately aim the source horizontally toward the detector
 - **d** Tighten screw 6
 - e Loosen screws 3, 4
 - **f** Approximately aim the source vertically toward the detector
 - g Tighten screw 3
- 5 Repeat step 4 for the Detector
- **6** Fine Alignment
 - **a** Aim the Source to the Detector within horizontal axis using screws 7. Aim the cross to the detector or source center of the front window (see figure 1 & 2 item 8).
 - **b** Tighten screw 5
 - c Aim within the vertical axis using screw 8
 - **d** Tighten screw 4
 - Make sure the telescope cross is pointing to the detector and source center of the window
- **7** Repeat step 6 for the Detector alignment
- **8** Remove the telescope. Install the front shield.

6.3 Powering up the System

Important! Prior to any operation or maintenance, follow the Safety Precautions, page 39.

> To power up the system:

- **1** Make sure that the Source and Detector are connected to power.
- **2** Make sure that the 4-20mA meter is connected to the Detector.
- **3** Power up the system 18-32VDC.
- **4** After 60 seconds, the current meter will indicate 4mA.

Note: Zero calibration should be performed after powering up the system (see Zero Calibration, page 40).

6.4 Safety Precautions

After powering up, the Detector requires minimal attention in order to function properly, but the following should be noted:

- **1** Follow the instructions in the Manual; refer to the drawings and specifications issued by the manufacturer.
- **2** Do not open the detector/source housing while power is supplied.
- **3** Disconnect external devices, such as automatic extinguishing systems before carrying out any maintenance task warranty.

6.5 Signal Verification

The signal verification can be done through Host software supplied by Spectrex. Refer to Manual TM 888050 or by Handheld unit refer to Manual TM 799060

6.5.1 Signal Values Limitation

Table 14 describes the maintenance data channels limitation limits.

Table 14: Maintenance Channels Limit Values

	Installation Distance				
Channel	Min	Med Max		Maintenance	
Reference	1V Gain1			The minimum signal allowed is 2V at Gain9	
Signal	1V Gain1	1V Gain2 1V Gain5		The minimum signal allowed is 2V at Gain9	
Ratio	0.6-1.4	4 0.6-1.4 0.6-1.4		0.5-3	
NQRat	0.98 - 1.02		Must be 0.98 - 1.02		
LEL	0 LEL x m		0 LEL x m		
Temp.	Up to 25° C	°C beyond room temp.		Up to 25° C beyond room temp.	
Voltage	32VDC > V > 18VDC		32VDC > V > 18VDC		

Note: The installation information refers to the installation distance.

- Min: The minimum distance as defined on the model no.
- Med: Half of the maximum distance as defined on the model no.
- Max: The maximum distance defined on the model no.

Safety Precautions 39

6.6 Zero Calibration

Zero calibration must be done after:

- Installation.
- Realignment.
- Window Cleaning.
- Any change in Detector or Source position.

Precise alignment must be performed prior to the zero calibration procedure. Zero calibration should be performed in good weather conditions with insignificant gas concentrations in the surrounding environment or indoors.

> To perform the zero calibration procedure:

- **1** Switch from Normal to Alignment mode indication.
- 2 Switch from Alignment to Standby mode.
- **3** Switch from Standby to Zero Calibration mode.
 - The 0-20mA output should now be at 1mA.
- **4** Wait up to 60 seconds until it switches to Normal mode. The Detector reading is now set to normal. The 0-20mA output should now indicate 4mA.

Switching from each position (above first three instructions) can be done by HOST HART (refer to TM888030) or RS485 (refer to TM888050 or TM799060), or by moving the magnetic mode selector above the magnetic switch (see Figure 8).

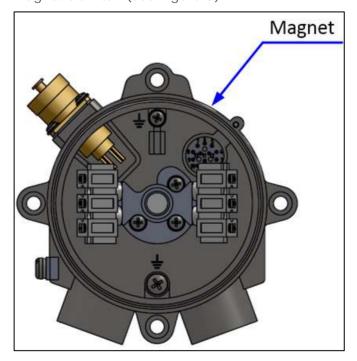


Figure 8: Magnetic Mode Selector

40 Zero Calibration

6.7 Functional Check of Unit

The SafEye system has been calibrated at the factory for the User's specific gas or vapor detection requirements. The following procedure validates the functional operation of the system. The Functional Check Filter is a convenient operational check used to confirm that response has not changed from previous readings. The filter is not used for calibration, which is unnecessary, nor does it equate to a particular quantity of gas.

Caution: Automatic activation or any external device that should not be activated during the calibration check should be disconnected.

Notes:

- 1 This functional verification procedure is for a standard 0-20mA output.
- **2** Prior to starting the functional check, verify that the power to the units is on and that the current of the 0-20mA channel is stable. Record the reading.

> To perform the functional check:

- **1** Position the Functional Check filter in front of the SafEye Detector.
- **2** The functional check filter's window must be centered over the viewing window of the Detector.
- **3** Wait 20 seconds.
- **4** Read the 0-20mA current. Determine the difference between the reading taken with and without the Functional Check Filter. This difference is the 0-20mA current variance.
- **5** Record the 0-20mA current variance in the Maintenance Logbook. If the variance is more than a 30% change when compared to the previous check (see delivery form), repeat the alignment.

7 Maintenance Instructions

> In this chapter...

General Maintenance page 43
Periodic Maintenance page 43

7.1 General Maintenance

The SafEye Quasar 900 requires only simple periodic maintenance to provide satisfactory service and achieve maximum performance. The Detector and Source units can be maintained with the use of common tools and equipment. Record the periodic test results in Maintenance Logbook with a copy of the delivery form inside.

7.2 Periodic Maintenance

Recommended cleaning of optical surfaces to be performed periodically.

Note: The frequency of cleaning operations is ultimately dependent upon the existing environmental conditions and the applications used.

> To perform periodic maintenance:

- **1** Proper maintenance will allow the SafEye system to retain maximum performance and reliability.
- **2** The optical surfaces of the Source and Detector viewing windows should be kept as clean as possible as it is an active device.
- **3** Alignment procedures must be performed each time that the Source or the Detector unit has been opened or moved for any reason.
- **4** The Signal Verification Check corroborates the current signals from the Flash Source compared to that of previous alignments. It is recommended to perform this check every 6-12 months. The signal should be checked according to threshold levels (see Signal Verification, page 39).
- **5** The functional check should be performed every 6 months (see Functional Check of Unit, page 41)
- **6** Alignment procedure should be performed only if the signals are below Threshold value (see Signal Verification, page 39)
- **7** Zero calibration (see Zero Calibration, page 40) must be done every time the Detector or Source is realigned or windows cleaned.

General Maintenance 43

7.2.1 Routine Optical Surface Cleaning

The SafEye system, being an optical device, must be kept as clean as possible. The optical surfaces concerned are the Source and Detector viewing windows.

> To clean the optical window, proceed as follows:

- **1** Turn off the power to the SafEye detector and source.
- 2 In places where dust or dirt has accumulated on the optical surface, clean the surface with a small, soft-bristle brush.
- **3** The surfaces must then be washed thoroughly with water and a mild non-abrasive detergent.
- **4** Thoroughly rinse the glass surface with clean water; ensuring no residue is left behind.
- **5** Dry the glass with a clean dry soft cloth.
- **6** Enter in the Maintenance Logbook: Date, name of person and company who performed the maintenance service.
- **7** Turn on power to the SafEye detector and source.
- **8** Perform signal verification (see Signal Verification, page 39).
- **9** Perform zero calibration (see Zero Calibration, page 40).
- 10 Perform functional check (see Functional Check of Unit, page 41)

7.2.2 Signal Verification

The signal verification check determines the proper operation of the open path. It checks the alignment and cleanliness of the window or any problem in Source or Detector. Use the PC Host software to measure the signal verification.

Refer to Manual TM 888050 or use I.S handheld unit. Refer to Manual TM 799060 for non I.S Handheld Unit.

7.2.3 Function Check of Unit

The SafEye Quasar has been calibrated at the factory per the user's specific gas or vapor detection requirements. This procedure validates the functional operation. The functional check must be done periodically. Refer to 6.7 for instructions.

Caution: Automatic activation or any external device that should not be activated during the calibration check should be disconnected.

44 Periodic Maintenance

8 Troubleshooting

Table 15: Troubleshooting

Fault Indication	Problem	Cause	Solution
Host status- "C"	"Maintenance call" status	Poor alignment	Perform alignment
0-20= 3mA	or R and S are below 2 V DC at Gain 9	Dirt on the window	Clean the window
	LED- Green blinking 1Hz.	Poor light source	Replace the light source
		Detector fault	Replace/repair Detector
Host status- "O"	The detector is in	Poor alignment	Perform alignment
or "I" 0-20= 2mA	constant Obscuration mode.	Dirt on the window	Clean the window
LED- Yellow blinking		Poor light source	Replace the light source
		Detector fault	Replace/repair Detector
	The detector is in constant Saturation mode.	Installation distance is lower than allowed	Use different model
		Detector fault	Replace/repair Detector
Host status- "M" 0-20= 2.5mA	The detector is in constant Misalignment	Poor alignment	Perform alignment
LED- Yellow blinking	mode.	Detector fault	Replace/repair Detector
Host status- "V" 0-20= 1mA LED- Yellow	The Detector at "V" fault	Low/High input voltage	Check the power supply and installation
blinking "		Detector fault	Replace/repair Detector
Host status- "F" 0-20= 1mA LED- Yellow blinking	Internal Fault	Internal Fault	Replace the detector
	NQRat below the permitted limit	Gas in the path	Make sure that the path is clean and the weather conditions are good

Troubleshooting 45

Fault Indication	Problem	Cause	Solution
	NQRat above the permitted limit	Poor alignment	Perform alignment
	Ratio1 and Ratio2 out of the limit	Poor alignment	Perform alignment
		Dirt on the window	Clean the window
		Detector fault	Replace/repair Detector
Yellow LED blinking at the Source	Source Fault	Low/High input voltage	Check the power supply and installation
		Internal Fault	Replace the Source

46 Troubleshooting

Appendices

Appendices 47

48 Appendices

A Wiring Configurations

> In this appendix...

RS-485 Communication Network

page 53

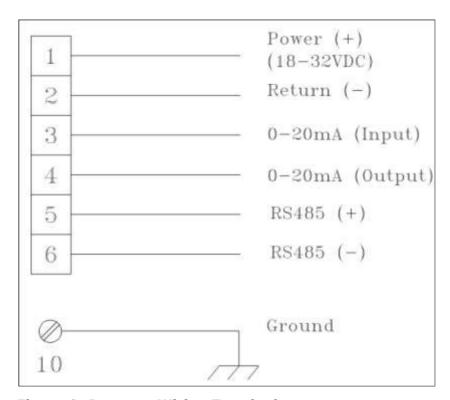


Figure 9: Detector Wiring Terminal

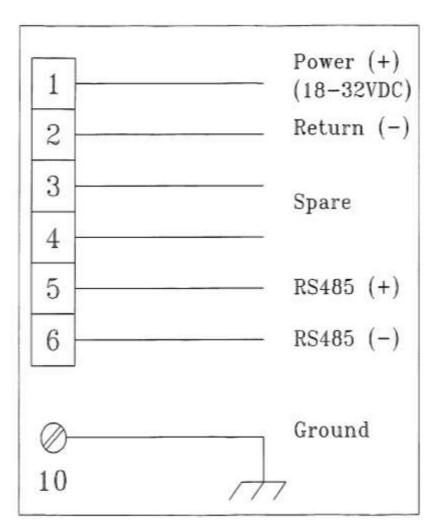


Figure 10: Source Wiring Terminal

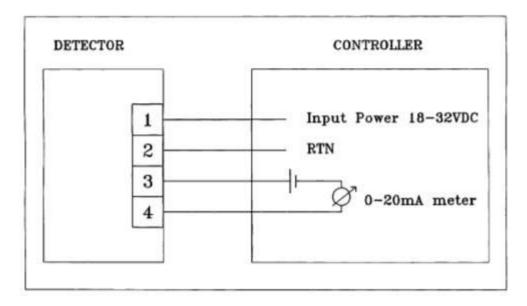


Figure 11: 0-20mA Sink 4-Wire

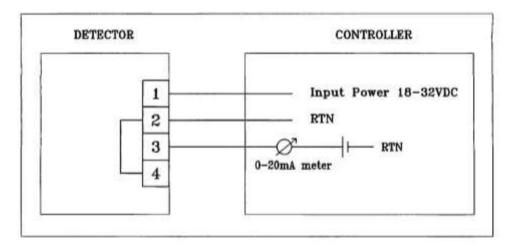


Figure 12: 0-20mA Non-isolated Sink 3-Wire

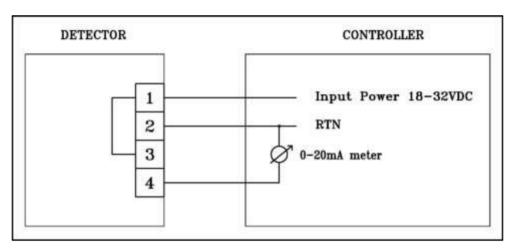


Figure 13: 0-20mA Source 3-Wire

A.1 RS-485 Communication Network

By using the RS-485 network capability of the SafEye Quasar 900 detector and additional software, it is possible to connect up to 32 Detectors in an addressable system with four (4) wires only (2 for power and 2 for communication). Using repeaters, the number of Detectors can be much larger (32 Detectors for each repeater) up to 247 on the same four (4) wires. When using the RS-485 network, it is possible to read each Detector status (FAULT, WARNING, and ALARM).

For more details, consult the factory.

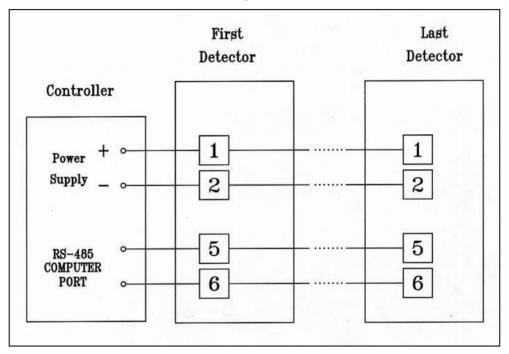


Figure 14: RS-485 Networking for Wiring Option 3

B Accessories

> In this appendix...

Tilt Mount P/N 888270	page 55
Pole Mount (U-Bolt 5 inch) P/N 799225	page 55
Commissioning Kit P/N 888247	page 55
RS485 Hand-Held Diagnostic Unit P/N 799810	page 56
HART Hand-Held Diagnostic Unit P/N 888810	page 56
HART Hand-Held Harness Kit P/N 888815	page 56
USB/RS485 Harness Converter Kit P/N 794079-8	page 56
Mini Laptop Kit P/N 777820	page 56
Sunshade P/N 888263	page 57

B.1 Tilt Mount P/N 888270

The Tilt Mounting Brackets allow accurate alignment of the detector/source for proper operation of the open path. The brackets give crude alignment of $\pm 60^{\circ}$ and fine alignment of $\pm 10^{\circ}$.

B.2 Pole Mount (U-Bolt 5 inch) P/N 799225

The U-bolt mount is available to facilitate 5" pipe mounting.

B.3 Commissioning Kit P/N 888247

The Commissioning/Alignment Kit unit is required for commissioning and future maintenance checks. Only one kit is required per site.

There are three commissioning kit options:

- 888247-1 for methane calibration
- 888247-2 for propane calibration
- 888247-3 for ethylene calibration

The kit includes an Alignment Telescope P/N 888210, a Magnetic Mode Selector P/N 790285, two different Functional Check Filters are in each set P/N 888260-1÷6 for system installation and periodical functional testing along with socket keys for access to units.

B.4 RS485 Hand-Held Diagnostic Unit P/N 799810

RS485 Hand-Held diagnostic unit, fitted with harness and converter to the quick plug connection which provides easy and economical connection, will provide verification, status and instructions for correcting the detector's parameters.

This is an I.S. approved Hand-Held with I.S. harness and converter to suit the detector and programmed with a special host for maintenance and commissioning.

B.5 HART Hand-Held Diagnostic Unit P/N 888810

HART Hand-Held diagnostic unit fitted with harness to the quick plug connection which provides easy and economical connection. The HART Hand-Held will provide verification, status and instructions for correcting the detector's parameters.

This is an I.S. approved Hand-Held with a special harness to suit the detector and a host for maintenance and commissioning.

B.6 HART Hand-Held Harness Kit P/N 888815

A quick plug connection with harness which is connected on one side to a standard HART Hand-Held unit and includes Spectrex host software that can be uploaded to an existing Hand-Held (does not include the Hand-Held).

B.7 USB/RS485 Harness Converter Kit P/N 794079-8

The USB RS485 Harness Kit with RS485/USB converter, used with Spectrex Host software, enables the user to connect to any available PC or laptop to re-configure settings or perform diagnostics on the Quasar 900 gas detector.

Refer to manual TM 888050 for programming instructions when using the USB RS485 Harness Kit.

B.8 Mini Laptop Kit P/N 777820

The mini laptop, pre-loaded with Spectrex software, enables the user to reconfigure settings or perform diagnostics on all flame and gas detectors series.

Refer to manual TM777070 for programming instructions when using the Mini Laptop Kit. The kit includes cable harness with RS485/USB converter. The mini laptop is programmed with maintenance WinHost for all detectors' type.

B.9 Sunshade P/N 888263

The Sunshade is designed to protect the detector from the heat of the sun.

C SIL-2 Features

> In this appendix...

Safety Relevant Parameters for the Quasar page 59 900 Open Path Gas Detector

General Conditions for Safe Use page 60

This appendix details the special conditions to comply with the requirements of EN 61508 for SIL-2.

The SafEye Quasar 900 IR Open-Path Gas Detector can be used in low and high demand mode applications, see IEC 61508-4: 2010, Chapter 3.5.16.

C.1 Safety Relevant Parameters for the Quasar 900 Open Path Gas Detector

Type: B

Structure: 1001 HFT: 0

Main time to repair: 72 h

Ambient temperature: max. 65°C Proof-Test-Interval: 52 weeks

 $\lambda_S = 2056.1 \cdot \text{fit}$

 $\lambda_D = 1976.1 \cdot \text{fit}$

 $\lambda_{DIJ} = 114.8 \cdot \text{fit}$

 $\lambda_{SD} = 1933.4 \cdot \text{fit}$

 $\lambda_{DD} = 1861.4 \cdot \text{fit}$

SFF = 97.% DC = 94%

 $PFD_{avq} = 6.45 \times 10^{-4}$ $PFD_{\%_SIL2} = 6.4 \%$ $PFH = 1.15 \times 10^{-7} 1/h$ $PFH_{\%_SIL2} = 11.5 \%$

C.2 General Conditions for Safe Use

- The SafEye Quasar 900 IR Open-Path Gas Detector shall consist only of the approved hardware and software modules.
- The application advice and the limitations of the manual must be taken into consideration. For calibration and maintenance, the regional and national regulations have to be taken into consideration.
- The 24V power supply must fulfill the requirements for PELV / SELV of FN 60950.
- The HART and RS 485 interfaces are not allowed to be used for the transmission of safety related data.
- The alert conditions according to SIL-2 can be implemented by an Alert signal via the 20mA current loop.
- After installation and configuration the set-up parameters must be verified and the function of the SafEye Quasar 900 IR Open-Path Gas Detector must be checked completely.
- The alarm conditions of the transmitter must be checked periodically together with the typical gas calibration checks. The SafEye Quasar 900 IR Open-Path Gas Detector must be switched OFF and ON.
- The connected controller must monitor the 0-20mA signal current for values below 4mA and above 20mA.
- A defect on the SafEye Quasar 900 IR Open-Path Gas Detector must be repaired within 72 hours.

Technical Support

For all technical assistance or support, contact:



218 Little Falls Road Cedar Grove, NJ 07009, USA

Tel: +1 (973) 239 8398 Fax: +1 (973) 239 7614 Email: spectrex@spectrex.net Web-site: www.spectrex.net

Your Local Office: SPECTREX INC.

USA (Texas)

Mr. Jay Cooley, Regional Sales Manager 16203 Park Row, Suite 150 Houston, Texas 77084 USA

Phone: +1 (832) 321 5229 Email: jay@spectrex.net

Europe

Mr. Ian Buchanan, Regional Manager 6 Applecross Road Glasgow G66 3TJ United Kingdom

Phone: +44 (0) 141 578 0693

Email: ian@spectrex.net

Far East

Mr. Deryk Walker, Regional Sales Manager 59 Fen Ji Hu, Danshui Taipei County 25163

Taiwan (ROC)

Phone: +886 2 8626 2893 Mobile: +886 926 664 232 Email: deryk@spectrex.net

Technical Support 61

62 Technical Support