

Analytical Sensors



THORNTON

Leading Pure Water Analytics

Sensors for M300 Instruments

Conductivity / Resistivity

pH / ORP

Dissolved Oxygen

Dissolved Ozone



Comprehensive Liquid Analysis Sensors
for Pure Water Treatment

METTLER TOLEDO

M300 Analytical Sensors

provide reliable measurements

The METTLER TOLEDO THORNTON M300 series of process analytical instrumentation provides reliable, accurate measurements of conductivity/resistivity, pH/ORP, dissolved oxygen, ozone and flowrate.

Sensor Features and Benefits

- Convenient electrical and process connections for easy maintenance and calibration
- Advanced METTLER TOLEDO sensor technology for high performance and long life
- Integral temperature sensing for accurate measurement and compensation
- On-line pH sensor diagnostics for assurance of process surveillance
- Direct sensor inputs for all parameters for simplified installation

Applications

Pure water treatment for ultrapure semiconductor rinsing, critical power/steam makeup and pharmaceutical waters.

Semiconductor processing in rinsers and wet benches with precise resistivity measurement and temperature compensation.

Power plant cycle chemistry and stator cooling monitoring with especially accurate temperature compensation for specific and cation conductivity and pH and very low maintenance dissolved oxygen measurement.

Pharmaceutical water monitoring to meet USP and EP conductivity requirements.

Reclaim, recycle and wastewater treatment for the above industry applications for contaminant detection, diversion and neutralization.

Contents by Parameter

Parameter	Page
Conductivity/Resistivity Sensors	3-5
pH/ORP Sensors	6-7
pHure Sensors™	8-9
High Performance Dissolved Oxygen Sensors	10-11
Long Life Dissolved Oxygen Sensors	12-13
Dissolved Ozone Sensors	14-15
Flow	see separate flow sensor data sheet ML0116

Conductivity/Resistivity Sensors for M300

Sensor Selection Criteria

- **Conductivity or resistivity range – resistivity (Mohm-cm) = 1/conductivity (µS/cm)**
- **Mounting type – Insertion, retractable or submersion**
- **Pipe connection type and size**
- **Suspended solids – four-electrode sensors have flat surfaces which are less likely to accumulate solids and are easier to clean than others**
- **Chemical compatibility, including cleaning and disinfection processes. Rely on process experience or consult Thornton for unusual process composition. PEEK is compatible with ozone and other oxidizers. Monel is recommended for exposure to hydrofluoric acid.**
- **Temperature requirements, including steam and/or hot chemical cleaning**

Specifications

Cell Constant Accuracy	± 1% except ± 5% system accuracy for 244-Series
Cell Constant Repeatability	± 0.25% except ± 2% for 244-Series
Temperature Sensor	PT1000 RTD, IEC 746, Class A
Temperature Accuracy	± 0.1 °C at 25 °C, except 4-E sensors
Cable Jacket Material	240-Series – PVC, 80 °C rating; 243-Series – Teflon, 200 °C rating
Maximum Sensor Distance	200 ft (60 m) except 50 ft (15 m) for 244-Series
Finish (Sanitary 0.1cm ⁻¹ Sensors)	Ra 8 microinches (0.2 micrometers), 316L SS is electropolished

Fitting	Insertion Length "X" in (mm)	Cable Length ft (m)/ Connector	Fitting Material	Range (µS/cm)*	Cell Const. (cm ⁻¹)	Electrode Material	Insulator Material	Max Pressure/Temp Psig (bar) at °F (°C)	Part No.
3/4" NPTM	1.35 (34)	1.5 (0.5)/S	Teflon/SS	0.02-2,000	0.1	Titanium	PEEK	250 (17) at 200 (93)	240-201
3/4" NPTM	5.19 (132)	1.5 (0.5)/S	Teflon/SS	0.02-2,000	0.1	Titanium	PEEK	250 (17) at 200 (93)	240-202
3/4" NPTM	1.35 (34)	1.5 (0.5)/S	Teflon/SS	0.02-2,000	0.1	Monel	PEEK	250 (17) at 200 (93)	240-203
3/4" NPTM	5.19 (132)	1.5 (0.5)/S	Teflon/SS	0.02-2,000	0.1	Monel	PEEK	250 (17) at 200 (93)	240-204
3/4" NPTM	1.15 (29)	None/S	PVDF	0.02-2,000	0.1	Titanium	PEEK	100 (7) at 203 (95) & 500 (34) at 77 (25)	240-207
Retractable for 1000-4X Housing†††	2.75 (70)	None/VP	SS	0.02-2,000	0.1	316L SS	PEEK	58 (4) at 268 (131) & 100 (7) at 203 (95) & 250 (17) at 77 (25)	240-222
1/2" NPTM	1.14 (29)	1.5 (0.5)/S	Noryl	0.02-2,000	0.1	Titanium	PEEK	250 (17) at 200 (93)	240-213
3/4" NPTM	1.14 (29)	1.5 (0.5)/S	Noryl	0.02-2,000	0.1	Titanium	PEEK	250 (17) at 200 (93)	240-214
3/4" NPTM	1.35 (34)	10 (3)/S	Teflon/SS	0.02-2,000	0.1	Titanium	PEEK	250 (17) at 200 (93)	240-215
1/2" NPTM	1.14 (29)	1.5 (0.5)/S	Teflon/SS	0.02-2,000	0.1	Titanium	PEEK	250 (17) at 200 (93)	240-216
3/4" NPTM	1.35 (34)	20 (6.1)***	Teflon/SS	0.02-2,000	0.1	Titanium	PEEK	250 (17) at 200 (93)	240-217
1/2" NPTM	1.14 (29)	10 (3)***	Teflon/SS	0.02-2,000	0.1	Titanium	PEEK	250 (17) at 200 (93)	240-218
3/4" NPTM	1.35 (34)	30 (9)***	Teflon/SS	0.02-2,000	0.1	Titanium	PEEK	250 (17) at 200 (93)	240-220
3/4" NPTM	2.38 (60)	1.5 (0.5)/S	Teflon/SS	0.002-200	0.01	Titanium	PEEK	250 (17) at 200 (93)	240-101
1.5" Tri-Clamp	3.38 (86)	1.5 (0.5)/S	Titanium	0.02-2,000	0.1	Titanium	PEEK		243E221†
1.5" Tri-Clamp	3.38 (86)	1.5 (0.5)/S	316L SS	0.02-2,000	0.1	316L SS	PEEK	150 (10) at 311 (155) &	243E223†
2" Tri-Clamp	4.13 (105)	1.5 (0.5)/S	316L SS	0.02-2,000	0.1	316L SS	PEEK	450 (31) at 77 (25)	243E227†
DN25BBS	4.13 (105)	1.5 (0.5)/S	316L SS	0.02-2,000	0.1	316L SS	PEEK		243E301†
3/4" NPTM	3.38 (86)	1.5 (0.5)/S	Teflon/SS	10-40,000	10	Graphite	Noryl	250 (17) at 200 (93)	240-401
3/4" NPTM	1.35 (34)	1.5 (0.5)/VP	Teflon/SS	0.02-2,000	0.1	Titanium	PEEK	250 (17) at 200 (93)	240-231
3/4" NPTM	5.19 (132)	1.5 (0.5)/VP	Teflon/SS	0.02-2,000	0.1	Titanium	PEEK	250 (17) at 200 (93)	240-236
1.5" Tri-Clamp	3.35 (85)	None/VP	316L SS	0.02-2,000	0.1	316L SS	PEEK	150 (10) at 311 (155) &	243E233†
2" Tri-Clamp	4.10 (104)	None/VP	316L SS	0.02-2,000	0.1	316L SS	PEEK	450 (31) at 77 (25)	243E237†
1.5" Tri-Clamp	1.00 (25)	None/VP	PEEK	10-650,000	4-E††	316L SS†	PEEK		244-633
2" Tri-Clamp	1.00 (25)	None/VP	PEEK	10-650,000	4-E††	316L SS†	PEEK	200 (14) at 122 (50) &	244-634
1.5" Tri-Clamp	1.00 (25)	None/VP	PEEK	10-650,000	4-E††	Hastelloy C†	PEEK	70 (5) at 302 (150)	244-636
1.5" Tri-Clamp	0.5 (12)	None/VP	PEEK	10-650,000	4-E††	316L SS†	PEEK		244-638
1" NPTM	1.1 (28)	None/VP	PEEK	10-650,000	4-E††	Hastelloy C†	PEEK	100 (7) at 200 (93) & 200 (14) at 77 (25)	244-630
1" NPTM	1.1 (28)	None/VP	CPVC	10-650,000	4-E††	316L SS†	CPVC	50 (3.5) at 176 (80) &	244-631
1" NPTM	1.1 (28)	None/VP	CPVC	10-650,000	4-E††	Hastelloy C†	CPVC	100 (7) at 77 (25)	244-635

* Megohm-cm=1/(µS/cm)

** 1" NPTM insertion and 1" NPTM submersion

*** tinned leads—no patch cord required

S = Standard connector used with 1XXX-67 patch cords only.

† includes material certification to meet EN10204 3.1B.

†† 4-Electrode Sensor, maximum patch cord length 50 ft (15 m).


††† See pages 6-7 for 1000-4X Series retractable housing (also used for pH & ORP)

VP = Vario Pin sealed connector used with 58 080 20X patch cords only.


(58 080 101 3-ft adapter cable can connect an existing 1XXX-67 patch cord to a VP sensor.)

Conductivity/Resistivity Sensors for M300


NPT 0.01 and 0.1 Constant

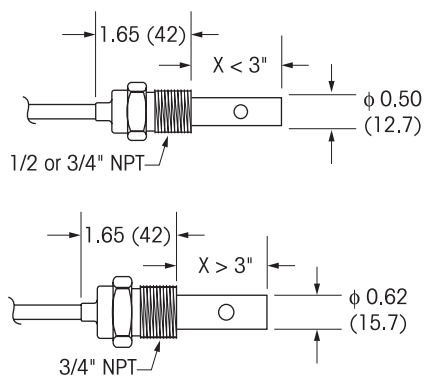


Sanitary 243E22X

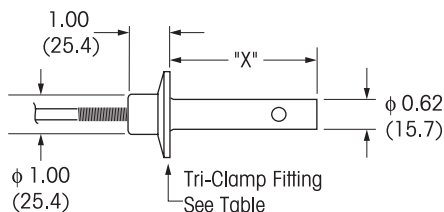


Sanitary 243E23X

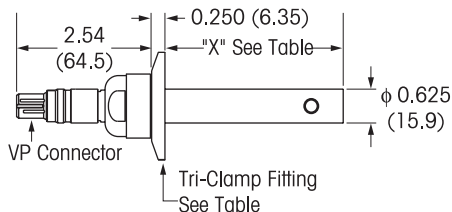


316SS Flow Housing 1000-30

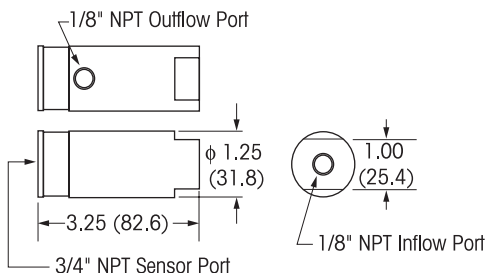


PVDF Flow Housing 1000-31

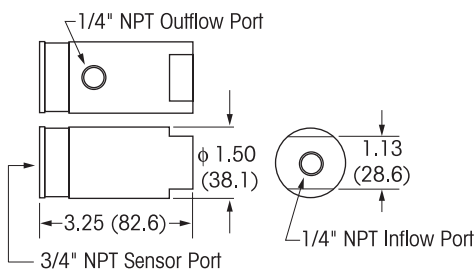


10 Constant 240-401

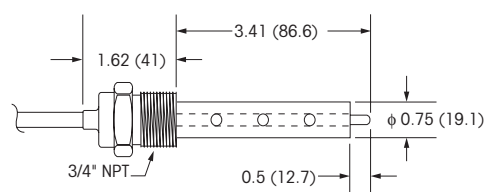


Submersion 0.1 Constant

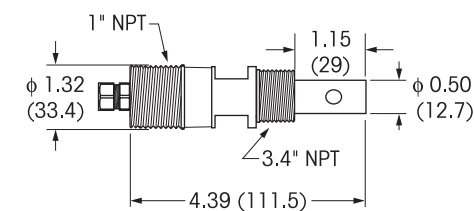


NPT 4-Electrode 244-631, -635

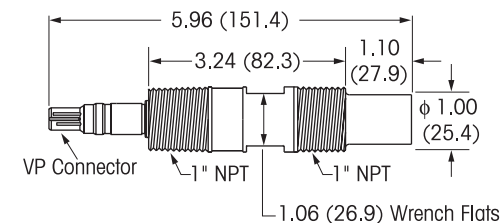

NPT 4-Electrode 244-630

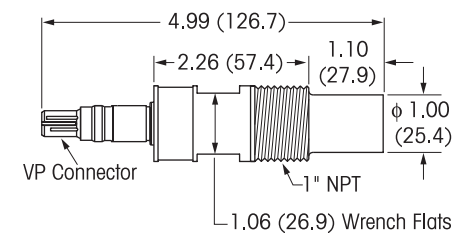

Sanitary 4-Electrode 244-633, -634, -636, -638

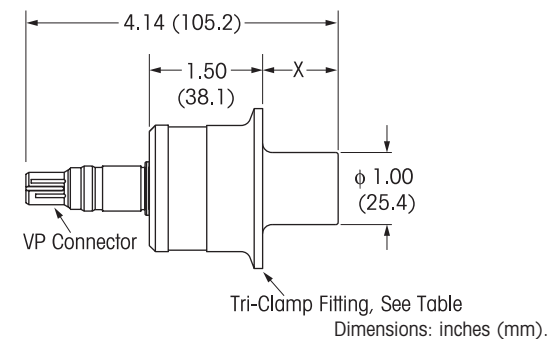

Dimensions: inches (mm).

Conductivity/Resistivity Sensor Patch Cords

For connections between sensors and instruments, use patch cord type (standard or VP) depending on sensor connector type. See sensor specification table, page 3, column 3.

Description	Standard Part No.	VP* Part No.
1 ft (0.3 m)	1001-67	-
5 ft (1.5 m)	1005-67	58 080 201
10 ft (3 m)	1010-67	58 080 202
15 ft (4.5 m)	1015-67	58 080 203
15 ft (4.5 m)	1025-67	58 080 204
50 ft (15.2 m)	1050-67	58 080 205
75 ft (23 m)	-	58 080 206
100 ft (30.5 m)	1110-67	58 080 207
150 ft (45.7 m)	1115-67	58 080 208
200 ft (61 m)	1120-67	58 080 209

One cord is required for each sensor except 240-217, -218, -220.
4-electrode conductivity sensors are limited to 50 ft (15.2 m).

* For VP Conductivity sensors only. NOT for pH, ORP or dissolved oxygen sensors.



58 080 20X*
VP Patch Cord



1XXX-67
Std. Patch Cord

Conductivity Standard Solutions

Provided for sensor verification and recalibration, conductivity standards are produced, analyzed, and documented in the METTLER TOLEDO THORNTON ISO 9001 certified facility with processes similar to those used to calibrate high accuracy Thornton conductivity sensors. They are provided with label and certificate with lot number, certified value, expiration date, plus ASTM and NIST traceability data. These standards are analyzed and used at equilibrium with the atmosphere.

Standard	Accuracy	Shelf Life	Part No.
25 μ S/cm, 500 mL, HCl	$\pm 3\%$	6 mo	58 078 001
100 μ S/cm, 500 mL, KCl	$\pm 1\%$	12 mo	58 078 002
1000 μ S/cm, 500 mL, KCl	$\pm 1\%$	12 mo	58 078 003
10,000 μ S/cm, 500 mL, KCl	$\pm 1\%$	12 mo	58 078 004
100,000 μ S/cm, 500 mL, KCl	$\pm 1\%$	12 mo	58 078 005



pH and ORP Sensors for M300

Thornton offers detachable pH and ORP sensors with an electrical connector directly on the electrode body to allow convenient maintenance and calibration. A variety of housings are available.

Specifications

Measuring Electrode	Glass pH, platinum ORP
Reference Electrode	Silver-silver chloride with double junction or equivalent
Temperature Compensator	Pt1000 included in all pH sensors; not in ORP sensors
pH Range	0-14, except 52 000 512 which is 2-12
Maximum Flow	10 ft/s (3 m/s)
Maximum Cable Lengths	33 ft. (10 m)

A complete pH or ORP installation requires **1** an electrode, **2** a housing and **3** a VP or AS9 cable, from each of the tables below. No preamp is required. Each installation requires an M300 instrument. Heavy lines divide groups of compatible electrodes and housings.

Electrode (1)				Housing (2)	
Application	Rating	Fitting / Material / Connection	Part No. Ref. No.	Connection / Material / Rating	Part No.
pH, general purpose, low cost	0-60 °C 30 psi (2 bar) at 60 °C & 75 psi (5 bar) at 45 °C	Pg 13.5 / polysulfone & glass / VP	52 000 512 4010-120-Pt1000	3/4" NPT insertion or submersion** / CPVC 100 psi (7 bar) at 20 °C & 30 psi (2 bar) at 80 °C	53 300 021
pH, general purpose, high pressure	See housing limits	Pg 13.5 / glass / VP	52 001 146 4250-120-Pt1000		
pH, general purpose, & moderately pure water*	0-100 °C 60 psi (4 bar)	Pg 13.5 / glass / VP	52 002 559 3250SG-120-Pt1000	3/4" NPT insertion or submersion** / PVDF 87 psi (6 bar) at 20 °C & 15 psi (1 bar) at 100 °C	52 401 520
pH, HF-Resistant	See housing limits	Pg 13.5 / glass / VP	52 005 353 4252-120-Pt1000-VP		
ORP, general purpose, & moderately pure water	0-100 °C 36 psi (2.5 bar)	Pg 13.5 / glass & Pt / S8	10 505 3339 Pt4805-DPA-S8-120	1" weld tee / PVC / 50 psi (3.5 bar) at 60 °C	41 722 3001
ORP, general purpose, high pressure	See housing limits	Pg 13.5 / glass & Pt / S8	10 505 3288 Pt4805-DXK-S8-120		
pH, general purpose, high chemical resistance	0-100 °C 100 psi (7 bar) at 65 °C & 50 psi (3.5 bar) at 100 °C	1" NPT insertion or 1" NPT submersion / PVDF & glass / VP	41 453 3102 4501-VP-Pt1000-SG	User's 1-1/2" tee & reducing bushing for insertion, or 1" coupling & pipe for submersion	none required
pH, Retractable	See housing limits	Pg 13.5 retractable / glass / VP	52 002 147 4250-225-Pt1000	Retractable 1-1/2" NPT / CPVC / 75 psi (5 bar), 80 °C	1000-40
ORP, Retractable	See housing limits	Pg 13.5 retractable / glass & Pt / S8	10 505 3255 Pt4805-DXK-S8-225	Retractable 1-1/2" NPT / PVDF / 75 psi (5 bar), 100 °C	1000-41
				Retractable 1" NPT / 316 SS / 100 psi (7 bar), 100 °C	1000-42


* For use with moderately pure waters (conductivity 5-50 µS/cm) use 53 300 021 housing in 3/4" NPT earth-grounded metal pipe tee with flow <100 mL/min and discharge to open drain. For higher purity and/or higher accuracy in pure water see the pHure Sensor™, pages 8-9.

** For insertion in plastic pipe, use 3/4 x 1" reducing bushing and 1" pipe tee. For submersion w/plastic pipe, use 3/4 x 1" reducing coupling and 1" pipe.





pH/ORP Cable (3)

	Connector	Cable Length	Part No.
pH	VP	3 ft (1 m)	52 300 107
	VP	10 ft (3 m)	52 300 108
	VP	16 ft (5 m)	52 300 109
	VP	33 ft (10 m)	52 300 110
ORP	AS9	3 ft (1 m)	10 001 0102
	AS9	10 ft (3 m)	10 001 0302
	AS9	16 ft (5 m)	10 001 0502
	AS9	33 ft (10 m)	10 001 1002

AS9 connector mates with S8 electrode connector.

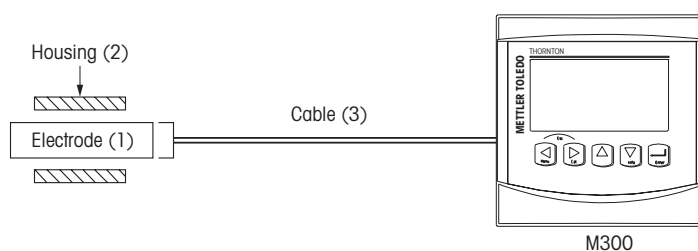

pH and ORP Sensors for M300

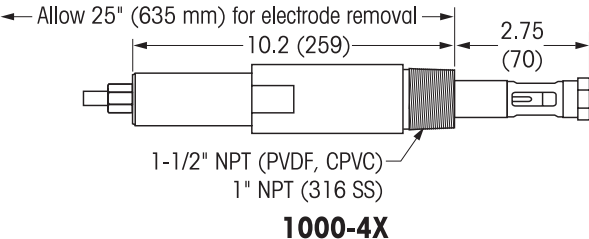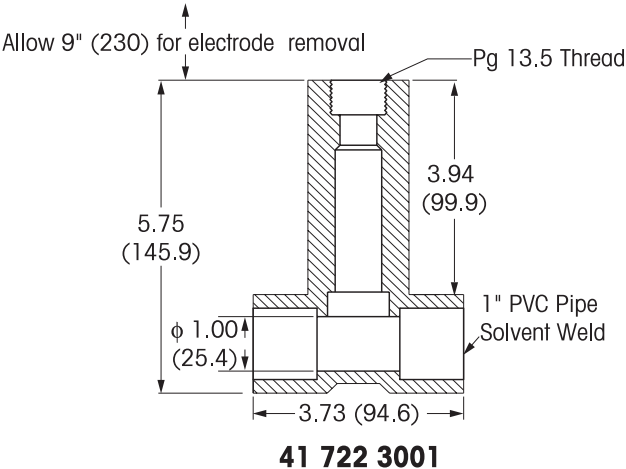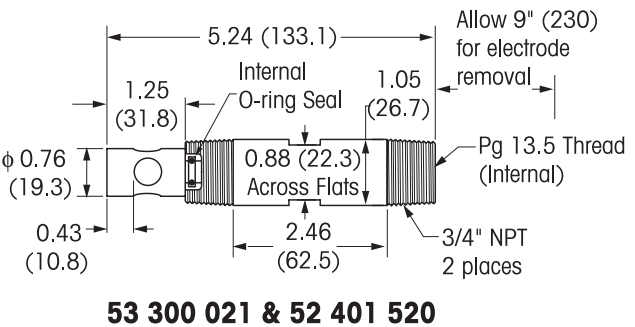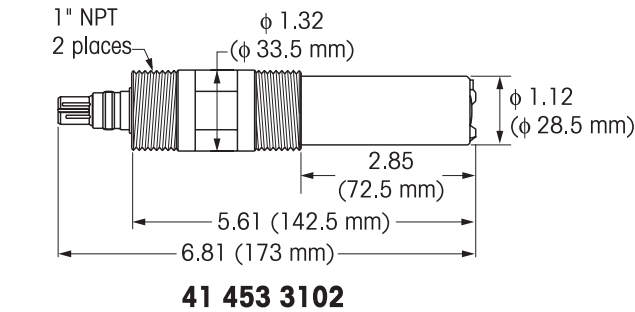

Electrodes



Housings



pHure Sensor™ for M300

Applications for pure water pH measurement

Reverse osmosis – pH adjustment of clean recycle water or between membranes in two pass systems to optimize rejection rates.

Power plant cycle chemistry – monitoring and controlling pH levels to comply with guidelines and minimize corrosion and scaling.

pH measurement in low conductivity waters requires special precautions. It must be made on a side-stream sample in a closed, metal, flow-through chamber with low flowrate and discharge to open drain. This assures a sample uncontaminated by carbon dioxide from the air, low and constant sample pressure at the reference electrode, and electrical shielding to promote stability. The sample line should be short and small in diameter to minimize sample delays and to minimize waste of pure water. Additional stability is obtained with a dual high-impedance measuring circuit that includes a solution ground.

Key to pure water pH measurements has been the use of a flowing-junction type of reference electrode which forces electrolyte through the reference junction to provide the same conditions in various samples. The flowing junction produces nearly the same potential in pure water as in the much more conductive calibrating buffer solutions. However, a flowing junction requires some form of electrolyte reservoir that can make installation, service and calibration more cumbersome and increases cost.

The METTLER TOLEDO THORNTON pHure Sensor™ uses a special internally-pressurized gel electrolyte reference electrode to produce similar results to a flowing junction but with much more convenient installation and maintenance. The electrode also includes a low resistance pH glass membrane, an integral, fast-responding RTD, and VP connection. The mating M300 instrument provides a dual high-input impedance measuring circuit with solution ground to maximize stability. The flow housing provides a controlled flow path with minimum volume to encourage power plant corrosion particles to flush through instead of accumulating as with a large flow bowl.

All components of the pHure Sensor™ have been optimized for performance and value and conform to ASTM Standard D5128. Various lengths of cable can be selected to provide flexibility in locating the sensor. No preamplifier is required.


Specifications

Wetted Materials	316 SS, glass, silicone rubber
Process Connections	1/4" NPTF in/out
Flow Housing Volume	5 mL with electrode in place
Maximum Pressure	Atmospheric pressure for optimum stability; operational 0-35 psig (0-2.5 bar); can safely withstand 100 psig (7 bar)
Sample Temperature	32-176 °F (0-80 °C), short term to 212 °F (100 °C)
Sample pH	1-11
Sample Flowrate	50-150 mL/min
Sample Conductivity	> 0.8 µS/cm for highest accuracy
Connection	VP cable from sensor directly to instrument, included
Components Included	52 002 447 combination pH electrode, 02385 flow housing and VP cable


Description	Part No.
pHure Sensor™ with 3 ft (1 m) VP cable	58 032 236
pHure Sensor™ with 10 ft (3 m) VP cable	58 032 237
pHure Sensor™ with 16 ft (5 m) VP cable	58 032 238
pHure Sensor™ with 33 ft (10 m) VP cable	58 032 239
Replacement combination electrode with RTD	52 002 447

pHure Sensor™ for M300

pHure Sensor™ Features

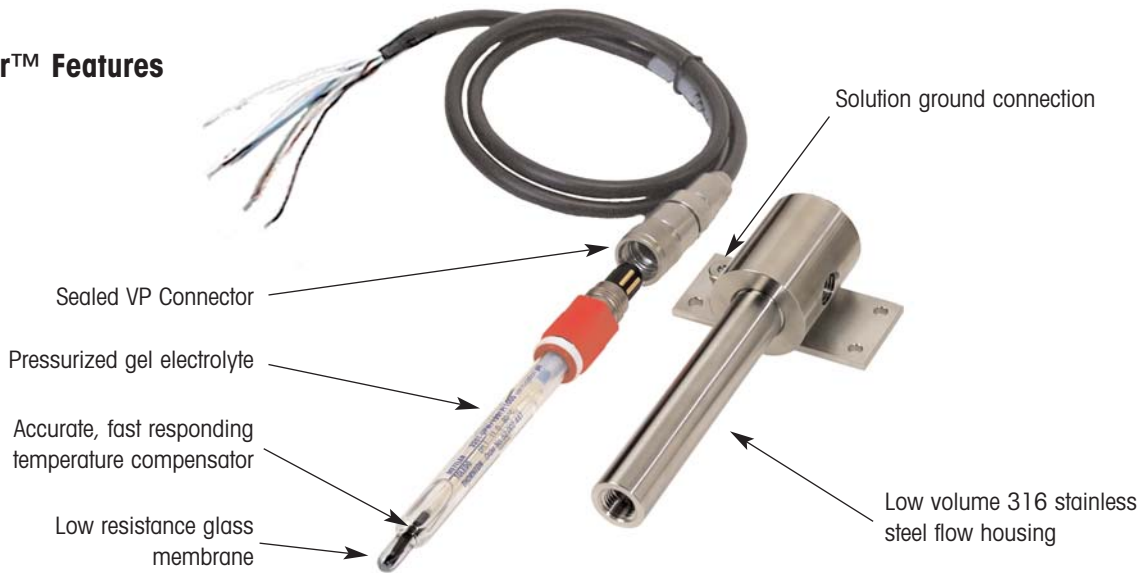

pHure Sensor™ Dimensions

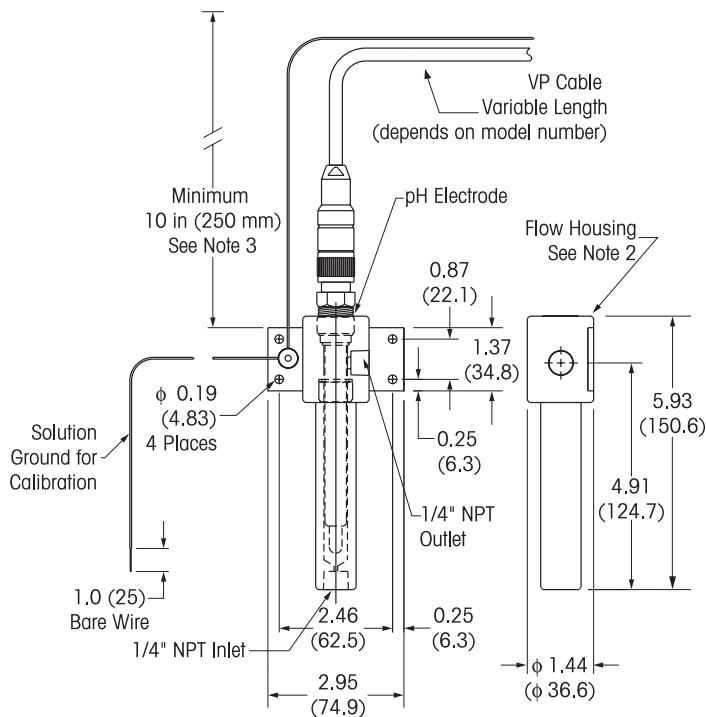

- Notes:
1. Dimensions: inches (mm)
 2. Electrode/Flow housing assembly must be in upright position as shown.
 3. Allow at least 10 in. (250 mm) clearance to remove sensor.
 4. Allow at least 4.5 in. (115 mm) clearance for patch cord connection.

pH and ORP Accessories

pH and ORP (Redox) Standard Buffer Solutions	Part No.
pH Buffer, 4.01, 250 mL	51 340 057
pH Buffer, 7.00, 250 mL	51 340 059
pH Buffer, 9.21, 250 mL	51 300 193
pH Buffer, 10.00, 250 mL	51 340 056
ORP Buffer, 468 mV, 6 x 30 mL	51 319 058
ORP Buffer, 220 mV, 6 x 250 mL	51 340 081



High Performance Dissolved Oxygen Sensor for M300

Thornton's High Performance ppb-level dissolved oxygen measurement capability excels in the demanding low ppb-level applications. It provides a precise zero and a highly accurate response over the entire range of measurement. This allows it to perform well at any level as well as providing very fast response to changes from one level to another.



Features

- Very fast response
- High accuracy
- Low maintenance with drop-in modular membrane
- Excellent long-term stability

The polarographic probe uses a gas-permeable membrane through which oxygen passes to produce an electrochemical reaction and current flow in direct proportion. The membrane is stainless steel mesh-reinforced Teflon for exceptional durability. Behind that membrane is the platinum cathode where oxygen reacts to produce the measurement signal. The cathode is surrounded by a guard electrode which prevents stray oxygen from the sides of the membrane or inside of the probe from adding to the signal. The guard ring is the key to the very rapid downscale response. The electrochemical reaction is completed at the silver cathode.

Specifications

Sample Flowrate	50-1,000 mL/min
Sample Temperature	0-60 °C (32-140 °F) for temperature compensation; can tolerate 100 °C
Sample Pressure	0-5 bar (72 psig)
Sample Connections	1/4" NPT
Wetted Materials	Polyacetal flow housing, polyphenylene sulfide probe body, Teflon membrane reinforced with stainless steel and silicone rubber, Viton and silicone rubber o-rings.
Cable Length	Probe to instrument, 3 to 33 ft (1 to 10 m)
Weight	1 kg (2 lb) with flow housing
Response Time	98% response in 90 seconds
Operating Range	0-10,000 ppb (µg/L)
System Accuracy	± 1% of reading or 1 ppb, whichever is greater; ± 0.5 °C
Components Included	52 201 067 DO Probe with spare electrolyte, 17490 Housing, 52 300 1XX VP Cable

Full temperature compensation accounts for effects on both membrane permeability and solubility of oxygen in water.

Applications


Power plant cycle chemistry monitoring of DO enables control of oxygen scavenger with phosphate, caustic or all-volatile treatment. With oxygenated treatment it can be used to regulate oxygen feed. Compliance with cycle chemistry guidelines and specifications for DO can be assured with this very accurate and responsive measuring system. Cycling plants can benefit from its rapid downscale response, assuring real-time reporting of even the fastest deoxygenation during startup.

Semiconductor ultrapure water for some processes requires low DO levels to prevent oxidation of wafer surfaces between stages. The M300 can provide a solid ppb-level DO measurement plus a simultaneous resistivity measurement in the same instrument.

Pure water treatment systems with deaerators to produce water for the above applications can be reliably monitored with the M300 system. The second measurement channel is available for conductivity, resistivity, pH or ORP monitoring.

Description	Part No.
DO probe, flow housing & 3 ft (1 m) cable	58 037 204
DO probe, flow housing & 10 ft (3 m) cable	58 037 205
DO probe, flow housing & 16 ft (5 m) cable	58 037 206
DO probe, flow housing & 33 ft (10 m) cable	58 037 207
Replacement DO Probe	52 201 067
Maintenance kit (electrolyte & 4 membranes)	52 200 024
Polarization module (for portable use)	52 200 893

High Performance Dissolved Oxygen Sensor for M300

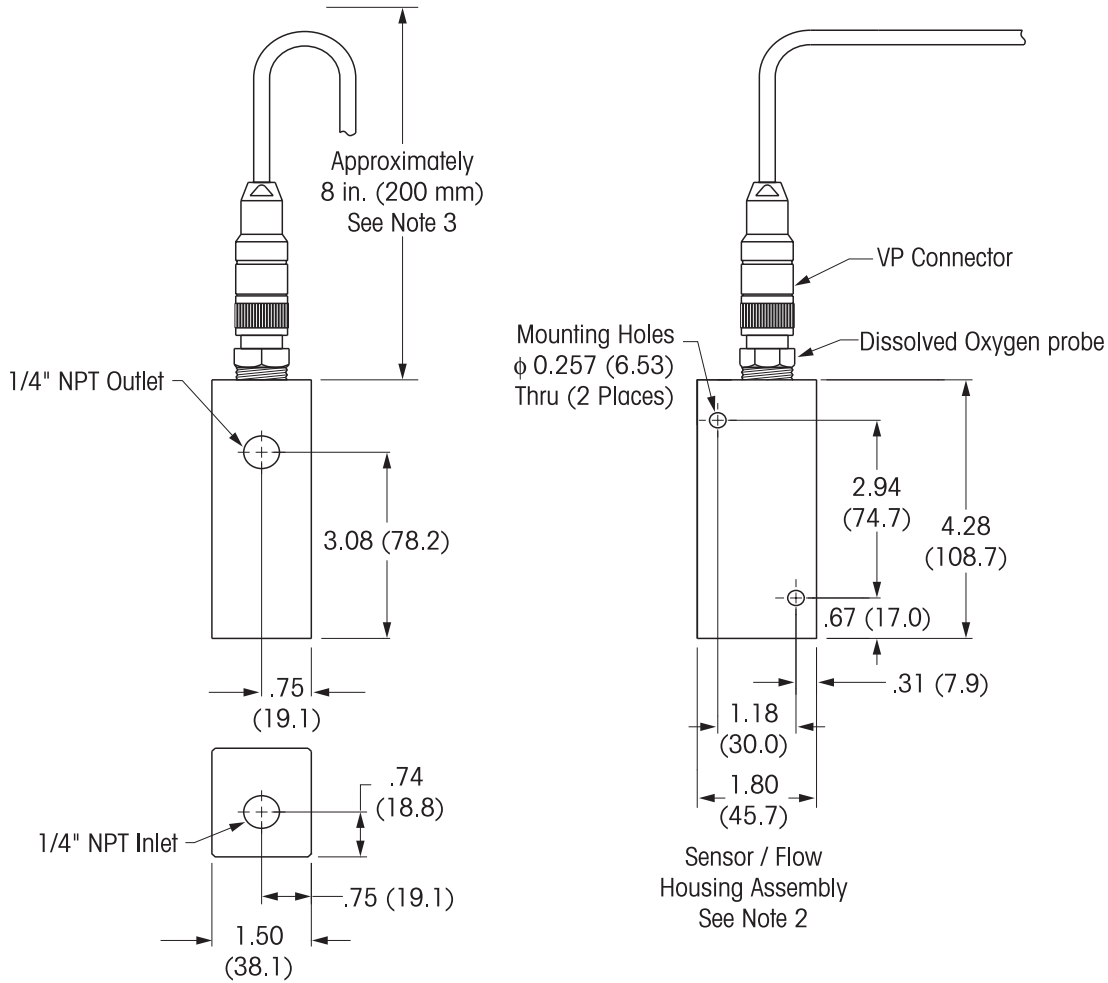

Notes:

1. Dimensions: inches (mm) unless noted otherwise.
2. Sensor/Flow housing assembly must be in upright position as shown.
3. Allow approximately 8 in. (200 mm) clearance to remove sensor.

Long-Life Dissolved Oxygen Sensor for M300

Thornton's long-life dissolved oxygen measurement capability uses an industry-proven sensor design with major improvements in longevity. An especially durable membrane and controlled internal electrochemistry allow many years of operation with no internal maintenance.



Features

- Very low maintenance
- Excellent long-term stability
- Industry-proven sensor technology
- No interference from hydrogen in stator cooling applications

Self-polarized electrodes minimize upsets from power interruption. Full temperature compensation accounts for effects on both membrane permeability and solubility of oxygen in water.

Applications

Power plant cycle chemistry monitoring of DO enables control of oxygen scavenger with phosphate, caustic or all-volatile treatment. With oxygenated treatment it can be used to regulate oxygen feed. Its immunity to interference from dissolved hydrogen and non-Teflon membrane, make it ideal for stator cooling and some nuclear plant applications.

Semiconductor ultrapure water for some processes requires low DO levels to prevent oxidation of wafer surfaces between stages. The M300 system can provide a solid ppb-level DO measurement plus a simultaneous resistivity measurement in the same instrument.



Pure water treatment systems with deaerators to produce water for the above applications can be reliably monitored with the M300 system. The second measurement channel is available for conductivity, resistivity, pH or ORP monitoring.

Specifications

Sample Flowrate:	50-2,000 mL/min
Sample Temperature:	5-50 °C (41-122 °F)
Sample Pressure:	Normal operation, atmospheric; can withstand 3 bar (45 psig)
Sample Connections:	1/8" NPT
Wetted Materials:	Polyacetal flow chamber, 316 stainless steel and polyacetal probe, HDPE membrane.
Cable Length:	Probe to preamp, 1.5 ft (0.5 m); preamp to instrument, 5 to 200 ft (1.6 to 61 m) with patch cord ordered separately
Weight:	1.5 kg (3 lb) with flow chamber
Response Time:	Within range, 20 seconds for 90% response; from air calibration, dependent on air exposure time
Operating Range:	0-10,000 ppb (µg/L) with auto-ranging
System Accuracy:	± 2% of reading or 1 ppb, whichever is greater; ± 0.5 °C
Spare Parts:	Maintenance kit of 7 membranes, and replacement electrolyte, Part No. 91008 included.

Description	Part No.
ppb DO probe/preamp & flow chamber	58 037 221
Patch cord, ordered separately (page 5)	1XXX-67

Long-Life Dissolved Oxygen Sensor for M300

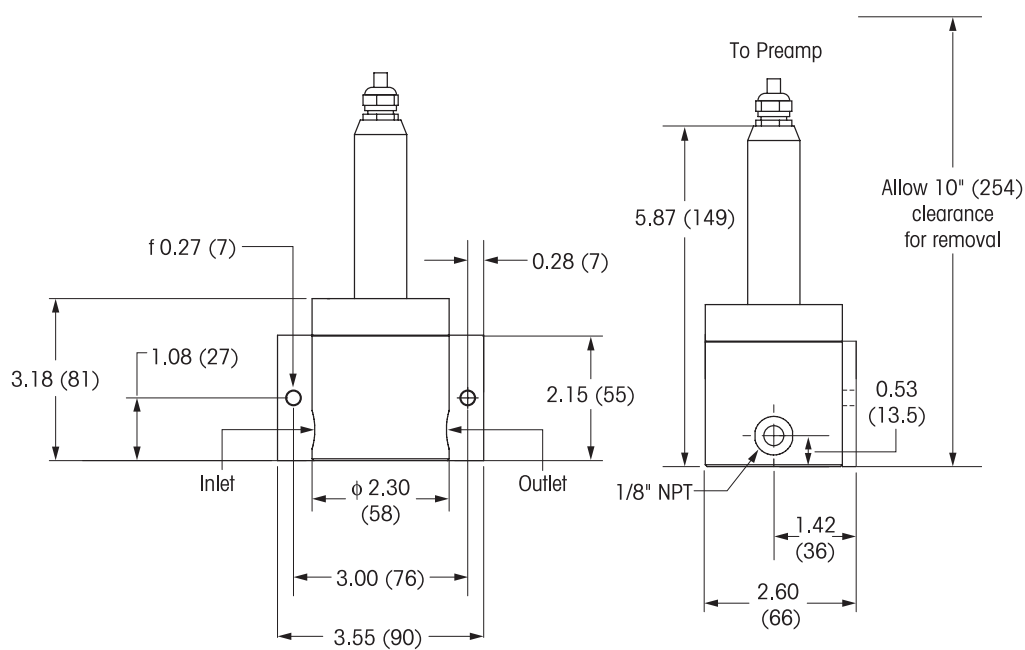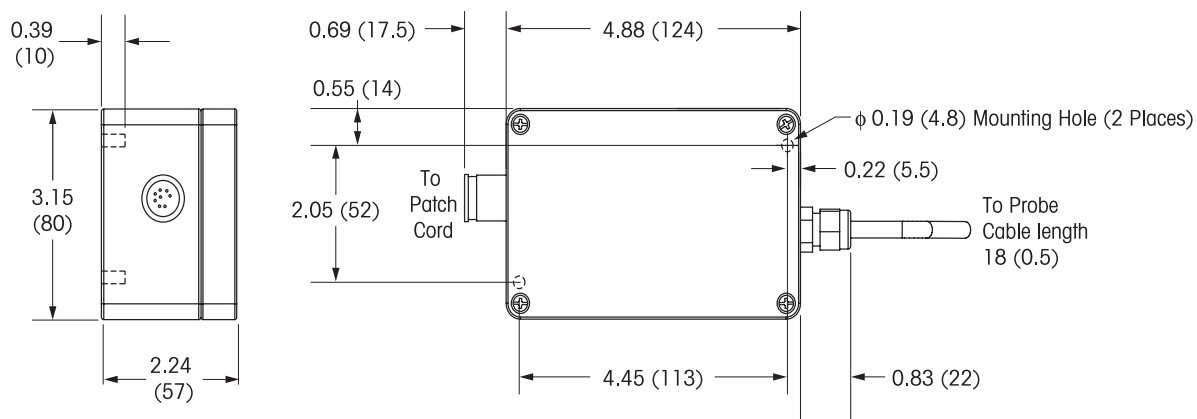

Dimensions: inches (mm).

Dissolved Ozone Sensor for M300

Thornton's highly reliable dissolved ozone measurement capability uses a proven sensor design with rapid and accurate response to ozone concentrations. At the low end, its excellent sensitivity gives positive detection of zero ozone after destruction by UV light.



Features

- Rapid, accurate response
- Positive zero detection
- Low maintenance with drop-in modular membrane
- Additional parameters available

The polarographic probe uses a gas-permeable membrane through which ozone passes to produce an electrochemical reaction and current flow in direct proportion. The membrane is reinforced silicone for exceptional durability. Behind the membrane is the platinum cathode where ozone reacts to produce the measurement signal. The electrochemical reaction is completed at the silver anode. Full temperature compensation accounts for effects of both membrane permeability and solubility of ozone in water.

The probe design includes a membrane cartridge which allows exceptionally easy replacement of electrolyte and membrane when necessary. The probe uses a VP electrical connector and an o-ring seal to the flow-through housing for easy installation and removal.

Applications

Pharmaceutical water systems can assure complete sanitization by controlling ozonation based on an ozone measurement downstream of the storage tank. To guarantee removal of all ozone downstream of UV destruc-


tion (and satisfy the 'no added substances' requirement), a second ozone measurement can confirm a zero level. When the entire distribution system is ozonated with the UV lights off, a third measurement at the return of the distribution piping can show when an adequate ozone level has been achieved throughout the loop. Thornton M300 instrumentation can monitor two points for ozone and/or conductivity with the same instrument.

Semiconductor ultrapure water ozone sanitization can be controlled by monitoring the ozone concentration downstream of the ozonator and UPW storage tank. To be sure all ozone has been decomposed after UV lights, a second ozone measurement can confirm a zero level. Thornton multiparameter capability can provide solid ppb-level ozone measurements plus simultaneous resistivity measurements in the same instrument.

Bottled Water Systems monitor ozonation levels to be sure of proper sanitization of the water, which in turn sanitizes the bottle and seal. Continuous measurement and control to proper ozone levels is a key quality practice that promotes consistent good taste and long shelf life. Thornton equipment can provide this measurement continuously at minimal cost.

Beverage Systems frequently use ozonated water in place of chemicals for the clean-in-place (CIP) operations when changing between flavors. Instead of using acids, caustic or chlorine, ozone can provide the cleaning and disinfection without risk of objectionable residuals or byproducts. Ozone monitoring and control are essential to enable repeatable CIP operations. Thornton instrumentation meets these requirements cost effectively.

Dissolved Ozone Sensor for M300

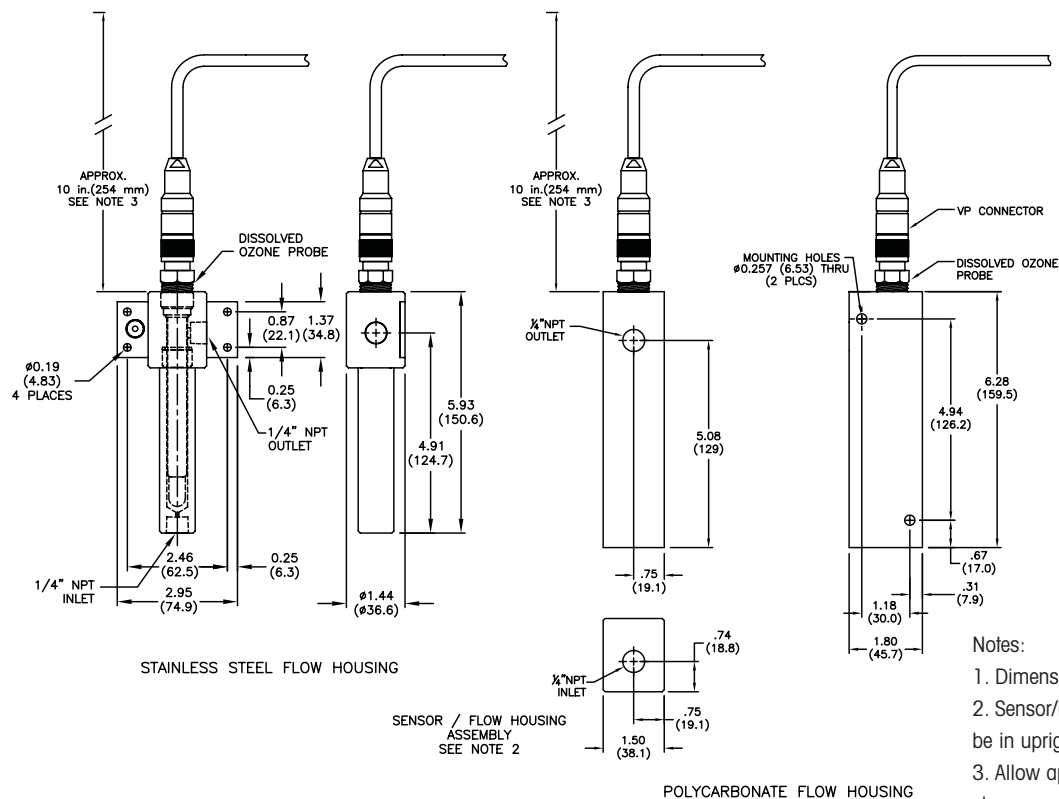

Specifications

Sample Flowrate	100 - 500 mL/min with housing; 0.5-3 ft/s (0.15-1 m/s) without housing
Sample Temperature	5-50 °C (41-122 °F) for measurement, probe can withstand 100 °C (212 °F)
Sample Pressure	Normal operation, atmospheric; can withstand 3 bar (45 psig)
Sample Connections	1/4" NPT
Wetted Materials	Polycarbonate or 316 SS flow housing, 316 SS probe, silicone rubber membrane
Cable Lengths	3 ft (1 m) to 33 ft (10 m) with VP cable
Weight	0.5 kg (1 lb) with flow chamber
Response Time	60 seconds for 90% response
Operating Range	0-5,000 ppb (mg/L); 0-5.00 ppm (mg/L)
System Accuracy	± 2% reading or 3 ppb, whichever is greater; ± 0.5 °C
Included Parts	52 201 178 probe with spare electrolyte, 17743 Polycarbonate or 02385 SS flow housing and cable as specified

Description	Part Number
Ozone sensor with PC housing, 1 m cable	58 041 231
Ozone sensor with PC housing, 3 m cable	58 041 232
Ozone sensor with PC housing, 5 m cable	58 041 233
Ozone sensor with PC housing, 10 m cable	58 041 234
Ozone sensor with SS housing, 1 m cable	58 041 241
Ozone sensor with SS housing, 3 m cable	58 041 242
Ozone sensor with SS housing, 5 m cable	58 041 243
Ozone sensor with SS housing, 10 m cable	58 041 244
Ozone sensor without housing, 1 m cable	58 041 251
Ozone sensor without housing, 3 m cable	58 041 252
Ozone sensor without housing, 5 m cable	58 041 253
Ozone sensor without housing, 10 m cable	58 041 254
Maintenance Kit (4 membranes & electrolyte)	52 201 179

Sensors described in this data sheet are used with the comprehensive series of M300 Transmitters which are available in both ¼ DIN panel mount and ½ DIN wall/panel/pipe mount configurations. Single-channel, multichannel and multiparameter models meet the requirements of diverse monitoring applications.



Features:

- Four-line back-lit display
- Direct sensor input for all parameters
- On-line pH sensor diagnostics
- Universal AC/DC power supplies
- Menus available in English, French, German, Italian & Spanish
- Internal PID control
- Plug-in terminals for easy wiring

www.mt.com/thornton

Visit for more information

Mettler-Toledo Thornton, Inc.
36 Middlesex Turnpike
Bedford, MA 01730 USA
Tel. +1-781-301-8600
Fax +1-781-301-8701
Toll Free +1-800-510-PURE
thornton.info@mt.com

Subject to technical changes
© Mettler-Toledo Thornton, Inc.
ML0123 Rev.A 02/07



Quality certificate.
Development, production and testing to ISO 9001.



A certified ServiceXXL provider.