

Thank you for purchasing our Treasure House private container with mechanical combination lock. Please read this User's Manual carefully before using this product.

It is a new type of private container developed meticulously by Shanghai Diebold, being succinct in appearance, reliable in structure and easy to operate. It is one of the best choices for your family.



**TreasureHouse**

*This User's Manual applies to model JJB-202, JJB-212, JJB-222, JJB-232, JJB-242, JJB-252, JJB-252S private containers.*

No. : B-05017

**Non CCC Certified Chests**

---



---


**CONTENTS**

Private Containers with Mechanical Combination Lock .....	1
Mechanical Combination Lock .....	3
To Open .....	4
To Close .....	7
Useful Items .....	9
Accessory List .....	9
Customer Support .....	10
Maintenance Guarantee .....	11


---



**PRIVATE CONTAINERS WITH MECHANICAL COMBINATION LOCK**

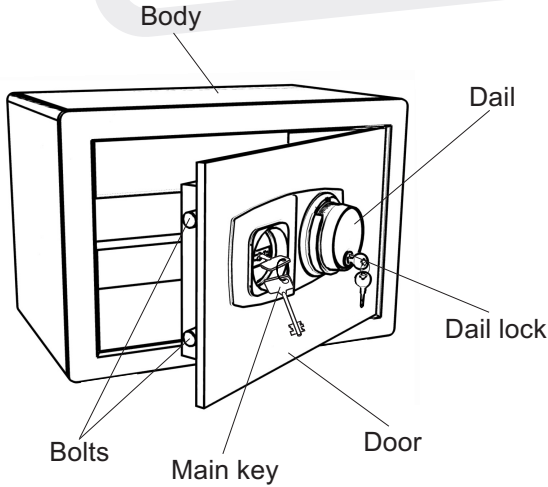


**Figure 1**

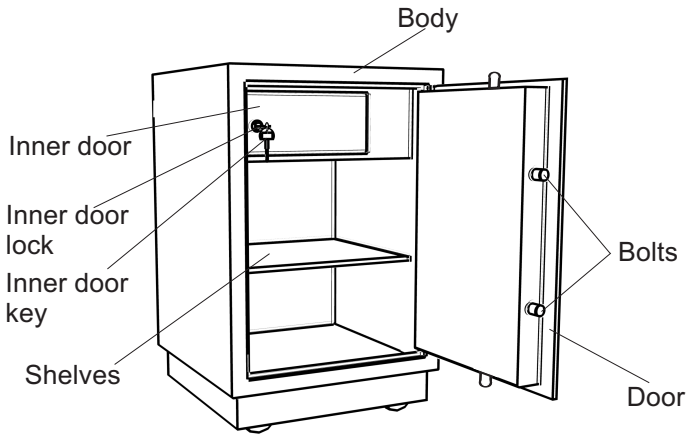


**Figure 2**

**PRIVATE CONTAINERS WITH MECHANICAL COMBINATION LOCK**

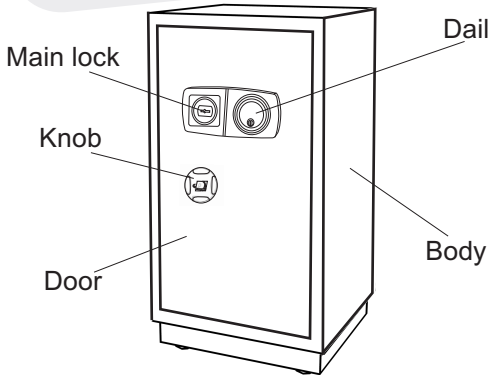

**Figure 3**


▼ **Hint:** JJB-252S private container (double doors) operates the same as the single door model.

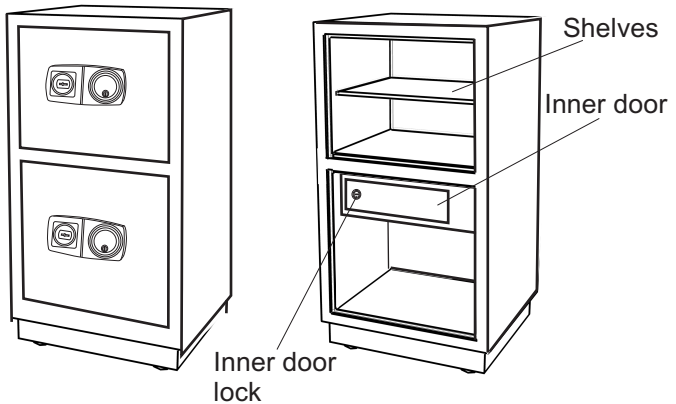

**Figure 4**




**MECHANICAL COMBINATION LOCK**

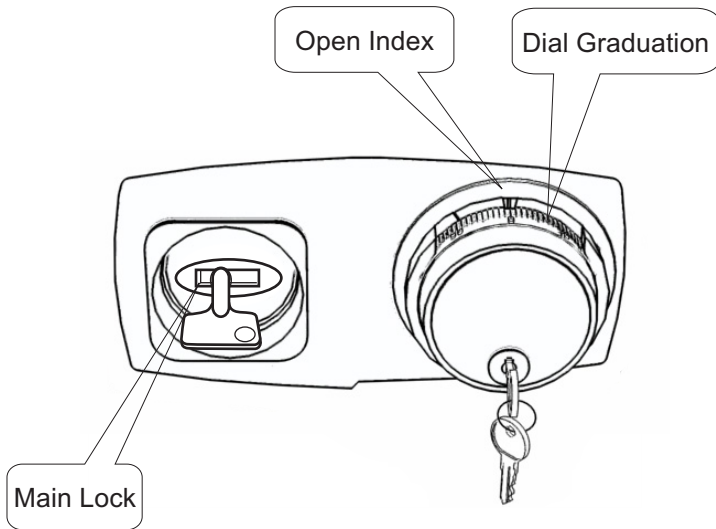

COPY

## TO OPEN

- Step 1

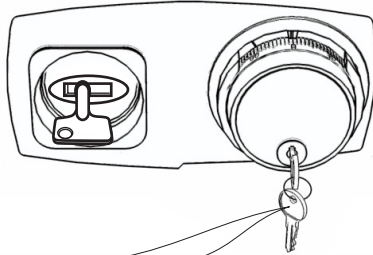


Insert the dial lock key into its keyhole and turn it clockwise ↻ by 180 degrees to unlock the dial lock.

! The combination to this mechanical combination lock you purchased is consisted of three numbers:


\_\_\_\_, \_\_\_\_ , \_\_\_\_.

**The following unlocking steps are illustrated with combination 46, 22, 51 as an example.**

- Step 2

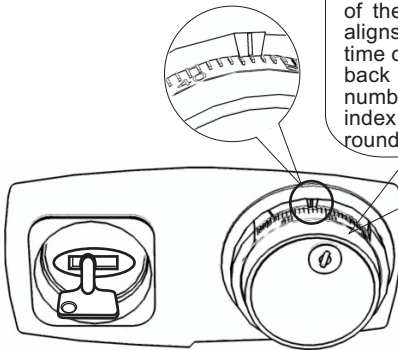


Turn the dial counterclockwise ↺ and stop turning it when the graduation of the combination first number '46' aligns with the open index third time or above. (Note: Don't turn the dial back to regain proper alignment. If the number is turned beyond the open index, you can turn the dial one more round to align with it.)

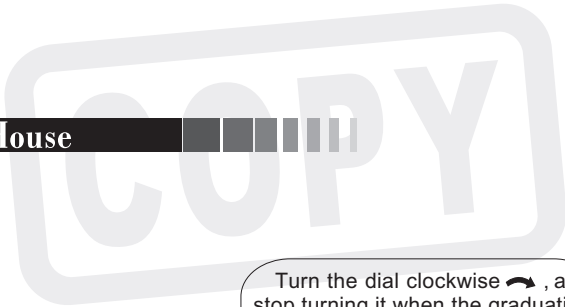


**TO OPEN**

- Step 3

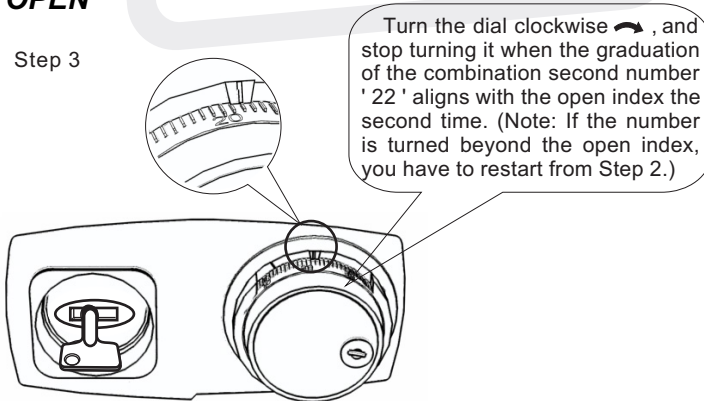

**!** *It will be counted as one time when the dial is turned from the first combination number to the second combination number.*

- Step 4

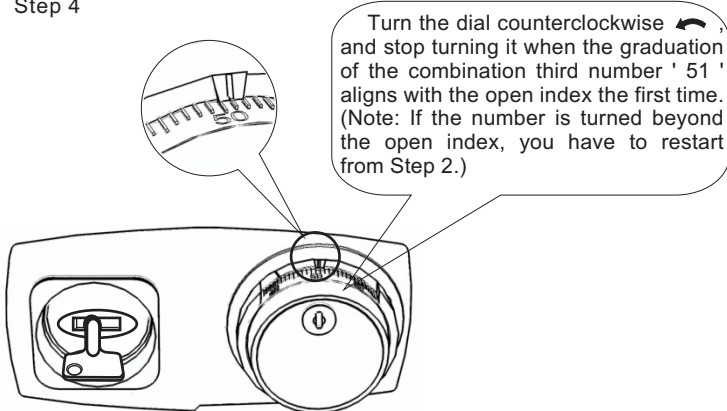


**!** *It will be counted as one time when the dial is turned from the second combination number to the third combination number.*



**TO OPEN**


- Step 5

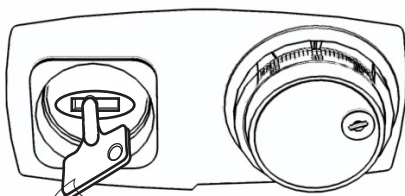

Turn the main lock key clockwise ↻ by 135 degrees to open the door.



*For model JJB-232, JJB-242, JJB-252 private container, need to further turn the handle (See Figure 3) clockwise ↻ to open the door.*

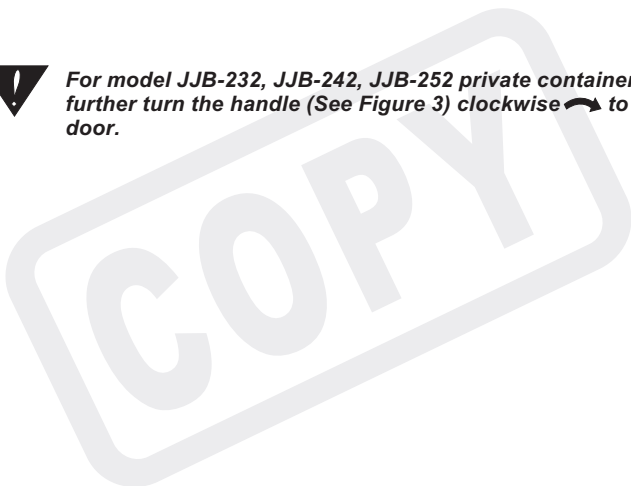






## TO CLOSE

Step 1 Close the private container door.

▼ For model JJB-232, JJB-242, JJB-252 private container, first turn the knob (See Figure 3) counterclockwise ↶.


Step 2

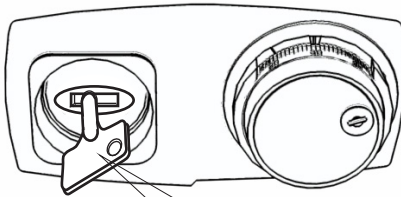

Turn the main lock key counterclockwise ↶ by 135 degrees until it assumes a horizontal position.


Step 3

Turn the dial counterclockwise ↶ for at least three rounds.

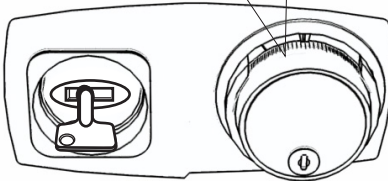

## TO CLOSE

- Step 4

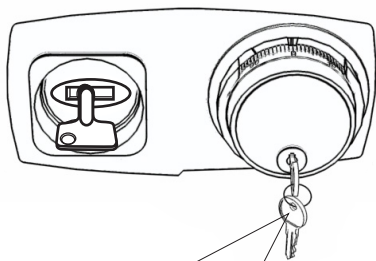

Turn the dial to align the graduation of '0' with the open index. Then insert the dial lock key into its keyhole and turn it counterclockwise ↶ by 180 degrees to lock the dial.



**Hint:** *JJB-252S private container (double doors) operates the same as the single door model.*



**Note:** *Be sure to remove the dial lock key after locking the private container according to the above steps.*



**The combination of this private container cannot be changed, but it's very safe for you to use it as it was generated at random.**



---

## **USEFUL ITEMS**



**With the following items provided to our customer support people, you will get assistance from us sooner.**

- Product Factory Number (On the label posted at one side of the product)
- Product Model
- Product Sales Invoice
- Maintenance Guarantee

---

## **ACCESSORY LIST**

- User's Manual                    1 piece
- Main key                            2 pieces
- Conformity Certificate        1 piece
- Dial lock key                    2 piece
- Inner door key                2 piece (*Applicable for JJB-212, JJB-222, JJB-232, JJB-242, JJB-252 and JJB-252S models*)



## ***CUSTOMER SUPPORT***

### ***HOW TO OBTAIN ASSISTANCE***



If you have any question that this User's Manual cannot answer when using this product, please take one of the following approaches to obtain assistance:

- To call SDSEC Technical Advisory Service at  
86 21 6480 9355
- To send questions through SDSEC's fax response system to get product specifications.  
Fax: 86 21 6480 3291  
Service hot line: 13386290300 ext 6320, 6321, 6322 or 6323.
- To contact our local dealers or distributors.
- To visit our website for diebold:

[Http://www.diebold.cn](http://www.diebold.cn)




---

**MAINTENANCE GUARANTEE**

- This product is guaranteed for one year from the date when it is purchased.
- This guarantee only applies to the product quality problems occurring under normal operating conditions except man-made damages (e.g. damages incurred from improper operation or carelessness or damages incurred from assemble or disassemble, repair and improper installation without permission), and damages incurred from force majeure.
- The original invoice that was issued when this product was purchased must be presented when guaranteed maintenance service is provided.

<b>Maintenance Record</b>				
<b>Calling Date</b>	<b>Service Date</b>	<b>Trouble &amp; Cause</b>	<b>Action &amp; Result</b>	<b>Repairer</b>



---

***TO AFFIX THE INVOICE***

 Please affix the invoice (or copy)

for this product in this place in

order to present it to our customer

support personnel and get assistance

without delay.

