
Panasonic

Nose & Ear Hair Trimmer Operating Instructions

Model No. ER430

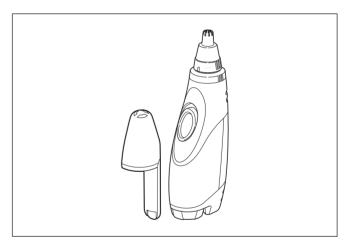



Service · Assistance · Accessories 800-338-0552 panasonic.com/personalcare

IN USA CONTACT: Panasonic Consumer Electronics Company Division of Panasonic Corporation of America One Panasonic Way 2F-3 Secaucus, NJ 07094

Printed in China

Before operating this unit, please read these instructions completely. Thank you for purchasing the Panasonic Nose & Ear Hair Trimmer Model No. ER430

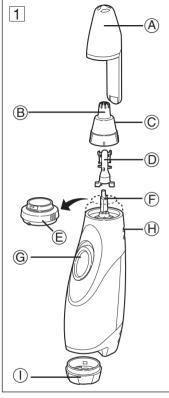

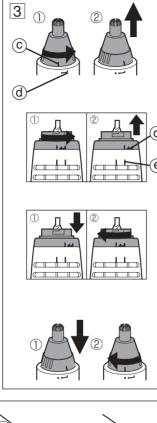

Parts identification

- (See fig. 1)
- A Protective cap with mirror
- [®] Outer blade
- © Outer blade frame
- Dinner blade
- € Filter
- (F) Joint
- G On/off switch Slide the switch upward to turn

the trimmer on.

- $\textcircled{H}{\textbf{Vent}}$
- \blacksquare Battery cover

READ ALL INSTRUCTIONS BEFORE USE.

Replacing battery

(See fig. 2)

Turn the battery cover

counterclockwise and match the line (a) with (b) and pull to remove. Insert one AA (LR6) battery. To replace the battery cover, reverse the above procedure.

Using your trimmer

Take care not to cover the vent, then turn on the switch and carefully insert the tip of the outer blade into your nostril or an ear hole to trim the nose and ear hairs.

Maintenance

Be sure that the switch is turned off before removing, replacing or cleaning the blades.

To remove the outer blade frame, turn it and match the line ⓒ with ⓓ and pull upward. (See fig. 3) Detach the inner blade from the outer blade. Wipe the blades with a tissue to remove any cut hairs, dust, etc. Then to remove the filter, turn it and match the line (1) with (2). Shake off the hair clippings. THE WHOLE UNIT CAN BE WASHED IN WATER. DO NOT USE BOILED WATER. After cleaning, replace the filter, the inner blade and the outer blade. If used once a week for approx. 1 min. at a time, the life of the blades is approx. 3 years.

Caution

To avoid the risk of personal injury, follow these instructions:

- Keep this device away from the reach of children. This is not a toy.
- Insert this device gently into your nose or outer ear. Do not insert it deep into your nose or your outer ear.
- Before each use, check the blades for damage. Do not use this device if the outer blade frame or blades are deformed or damaged.
- The blades have been precision manufactured. Do not subject them to mechanical force, impact, drop, etc. Place the protective cap over the outer blade frame after each use.
- This trimmer is designed only for cutting nose and ear hairs. Do not use it for any other purpose.
- Ensure that the switch is turned off before cleaning the blades.
- Do not wipe it with thinner, benzine or alcohol. Clean it by cloth with soapy water.
- Do not attempt to modify or disassemble and repair the product yourself.

