

# Skimmer Lid w/Thermometer Assembly Instructions

## Important Notice




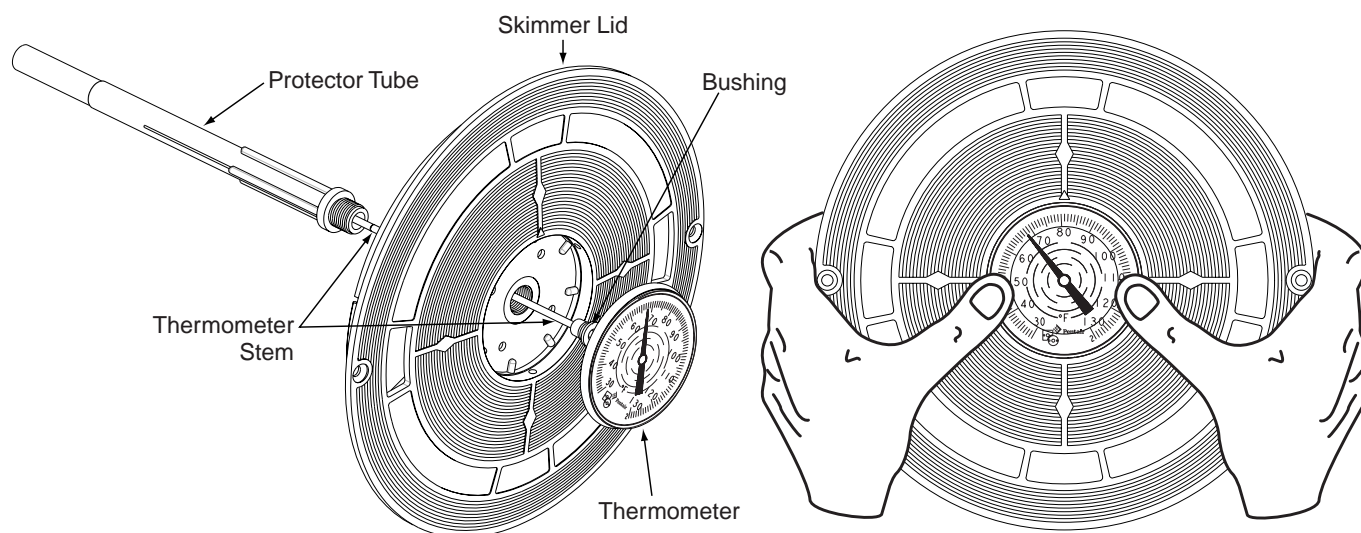
Attention Installer.

This manual contains important information about the installation, operation and safe use of this product. This information should be given to the owner/operator of this equipment.

Call (800) 831-7133 for additional free copies of this manual.

## INSTRUCTIONS FOR ASSEMBLY

1. Screw protector tube into bottom of skimmer lid.
2. Insert thermometer in top of skimmer lid. Bushing should always be on thermometer when assembling.
3. Line up the 80° mark with the arrow and press in by placing both thumbs firmly on face of dial.
4. To disassemble, unscrew protector tube counter-clockwise  and remove completely. Now place unthreaded end of tube over stem and push thermometer out.



## CAUTION

Do not bend stem of thermometer.

### **Pentair Pool Products**

1620 Hawkins Ave., Sanford, NC 27330 • (919) 774-4151

10951 West Los Angeles Ave., Moorpark, CA 93021 • (805) 523-2400



**Pentair**  
*Pool Products®*

Because *reliability* matters most