

# **Mitsubishi**

## **Netcom 2**

### **User Manual**

**Version 5.1**



## Table of Contents

1. What is a Netcom? .....	3
2. Who do I Contact For Technical Support? .....	3
3. What are the System Requirements for Netcom? .....	3
3.1 Operating System Requirements.....	3
3.2 UPSMAN WINDOWS Solution: .....	4
3.3 UPSMAN UNIX Solution: .....	4
3.4 APPLE MAC X Solution:.....	4
3.5 UNMS II Solution :.....	4
3.6 RCCMD Solution (shut downs):.....	4
3.7 No longer supported UPSMAN versions (please choose RCCMD instead) : .....	6
3.8 Web Browser Requirements .....	6
3.9 Special Requirements for Web Browsers .....	6
3.10 Special Requirements for Firewall Access .....	6
4. How do I Configure the Netcom? .....	7
4.1 Installing the Netcom Utilities .....	7
4.2 Configuring the Netcom .....	7
4.2.1 HyperTerminal Setup example (serial cable) .....	7
4.2.2 Configuring the IP address with Window XP .....	8
4.2.3 Configuring the IP address with Windows 7 .....	13
5. How do I Update the Netcom Firmware? .....	17
6. Netcom Web Server .....	19
7.1 Login Page .....	20
7.2 UPS Status Page/ UPS/ Overview .....	21
7.3 Identification/UPS Identification Page .....	23
7.4 Variables/Variables Page .....	24
7.5 Event Log/View Events Page .....	25
7.6 Agent Setup/UPS/Configuration Page.....	26
7.7 Nominal Values/UPS Nominal Values Page .....	27
7.8 Nominal Values/UPS Nominal Values Setup.....	28
7.9 Shutdown/UPS Shutdown Setup Page.....	29
7.10 Overview/Network Setup Page.....	32
7.12 IP Config/Setup/IP Configuration Page.....	33
7.13 HTTP/HTTP Setup Page .....	34
7.14 LDAP Servers/Setup/LDAP Servers Page.....	35
7.15 SNMP NMS/Setup SNMP Page .....	36
7.16 SNMP Rec's/SNMP Receivers Page.....	37
7.17 Event Notification/Event Notification .....	38
7.19 Users/Setup/Users .....	43
7.20 Email Alerts/ Setup/ Email Alerts.....	44
7.21 Time Setting/ Setup/ Time Settings .....	45
7.22 Syslog Servers/ Setup/ Syslog Servers .....	46
7.23 Events/ View/ Events.....	47

7.24 Preferences/ Preferences Page .....	48
7.25 Restart/Restart Page .....	49
APPENDIX A RJ45 to DB9 pin out.....	50
APPENDIX B 9700 and 2033A connection.....	51
APPENDIX C SEC connections.....	52
APPENDIX D MIBS .....	53

## 1. What is a Netcom?

A Netcom is a standalone UPS peripheral used for UPS monitoring, event management, SNMP interfacing, and critical event notification. It consists of a small computer with a serial interface for connecting to and communicating with a UPS, and an Ethernet interface for connecting to your local network. The Netcom has its own embedded web server to allow you to monitor the status of the UPS using a Web browser. Event management is also configured and performed on the Web Server. It supports the Simple Network Management Protocol (SNMP) for integration with a Network Management System and Telnet for configuration.

You can configure the Netcom to perform appropriate actions when an event is detected including email and remote computer shutdown. The optional **Remote shutdown agent** runs on one or more remote computers and communicates with the Netcom to allow remote shutdown of up to 500 computers powered by the UPS.

## 2. Who do I Contact For Technical Support?

Contact the Technical  
Support group for help configuring and using Netcom or any Mitsubishi UPS product  
Phone 724-778-5111  
Fax 724-778-3146

## 3. What are the System Requirements for Netcom?

The Netcom runs as a standalone unit. It includes a 120-volt AC power source plug, and a DE9 to RJ45 communications cable for connecting to the UPS. A standard network cable for connecting to the local Ethernet network must be provided. The 9900, 2033G and 9800AE UPS have an optional internal power supply that can be purchased, please contact your local Sales Representative for more details.

### 3.1 Operating System Requirements

Installation procedure for the shut down codes are located on the CD provided with the Netcom in a file named "Shut Down Manual". The user will need a copy of their sales order for the serial number of each shut down code.

The remote shutdown agents will run on the following operating systems:

### **3.2 UPSMAN WINDOWS Solution:**

WINDOWS 7 (Professional or higher) x86/x64 CPU

WINDOWS Server 2008 CORE x64 CPU

WINDOWS Server 2008 R 2 (Standard, Enterprise, Datacenter, Webserver) x64 CPU

WINDOWS Server 2008 (Standard, Enterprise, Datacenter, Webserver) x64 CPU  
(Standard, Enterprise, Datacenter, Webserver)

WINDOWS VISTA (Business or higher) x86/x64 CPU

WINDOWS 2003 Server X86/X64 CPU

WINDOWS XP (Professional or higher) x86/x64 CPU

WINDOWS 2000 Server

WINDOWS 2000 SP4 x86 CPU

### **3.3 UPSMAN UNIX Solution:**

SUN SOLARIS 8, 9, 10, 11 X86, X64 X32 & X64 & SPARC CPU

IBM AIX V. 5.3 RS 6000 RISC and PowerPC CPU

HP UNIX V 10.20, 11.0-11i HP PA-RISC CPU (not Itanium - only RCCMD !)

LINUX X86 - all X86/x64 CPU based LINUX versions, eg. United 1.x /SCO  
Linux

Server 4, LINUX SUSE 7-10.x & SLES, Fedora Linux, GENTOO Linux, RedHat  
7.0-

9.0, RH 4, RH5.4x x32/x64, TurboLinux 6.1-6.5, 7.x, Debian 4-5.x, Caldera Open  
Linux 2.3, Open Linux 3.1.x, Ubuntu, CentOS X86/x64 and all other x86/x64  
kernel 2 based LINUX, NOVELL OES-Linux

### **3.4 APPLE MAC X Solution:**

MAC OS X 10.4x, 10.5x Leopard, 10.6 Snow Leopard

### **3.5 UNMS II Solution :**

WINDOWS XP from Service Pack 2, WINDOWS Server 2003 SP2

#### **Multiple network shutdowns**

**An RCCMD installation keycode opens access to RCCMD clients for all OS mentioned above.**

### **3.6 RCCMD Solution (shut downs):**

**Additional to the above listed OS, the following listed RCCMD versions are available**

**From Mitsubishi. Please contact Mitsubishi for the following;**

VMWARE Sphere ESX 4 i

VMWARE ESX Server 3.5x / 4 (VMWare certified)

CITRIX XEN Server 4.5 and 5.5 and higher (Citrix certified)

MICROSOFT HYPER-V 2008

CENTOS INTEL x86, x64 & IA64 CPU

LINUX PowerPC CPU

LINUX ITANIUM X64 CPU

LINUX SUSE 6.3x APX ALPHA CPU

HP UNIX 9 PA-RISC CPU

HP UNIX V 11.2x, 11.3x SPARC & ITANIUM 64 CPU

QNX 4 and QNX 6 on X86

MAC OS X 10.1-10.3

APPLE MAC OS 9.x or higher

NOVELL NetWare 3.10, 3.11, 3.20 ,4.10-4.20, 5.0, 5.1, 6.0, 6.1, 6.5

IBM OS/2 Version WARP 3.0, 4.0, LAN SERVER 3.0, 4.0, 5.0 X86 CPU

IBM AIX V. 3.25, 4.1, 4.3, 5.1, 5.2, 5.3 RS 6000 RISC and PowerPC CPU

IBM AIX V. 6 on PowerPC4, 970, Power5, Power 6 CPU

IBM AIX L (Linux) V. 6 on Power 6 CPU

SIEMENS SINIX 5.41 MX 300 Z X86 CPU

SCO OpenServer 5.x u. 6.x 4 X86 CPU

SILICON GRAPHICS IRIX V. 6.5x RISC MIPS CPU

WINDOWS 2008 X86/X64 Virtualserver HYPERVISOR

WINDOWS 2003 Server ITANIUM 64 CPU

WINDOWS 2000 SP4 x86 CPU

WINDOWS NT 4 SVP 6

WINDOWS NT 3.51 and NT 4 SVP3-6a X86 CPU

WINDOWS NT 3.51 ALPHA CPU

WINDOWS NT 3.15 MIPS CPU

WINDOWS 98SE & ME X86 CPU

DEC UNIX SVR 3 OSF/1 ALPHA CPU

DATA GENERAL UNIX X 86 CPU

DATA GENERAL UNIX MOTOROLA M88 CPU

MOTOROLA UNIX M88 CPU

SUN SOLARIS 7 (5.7) SPARC CPU

SUN OS 4 SPARC CPU

UNIXWARE 2, 7 on X86 CPU, UNIXWARE 7.x SVR 4 compatible X86 CPU

INTERACTIVE UNIX 3.2 X86 CPU

SIEMENS SINIX 5.41 – 5.45, RELIANT UNIX 5.45x RM RISC

HP/COMPAQ TRU64 V 5.x ALPHA CPU, Digital UNIX V 4.0-5.1 ALPHA CPU

FREE BSD UNIX SVR 4 X86 V 4.4x and 6.x

### 3.7 No longer supported UPSMAN versions (please choose RCCMD instead) :

DEC ULTRIX, HP UNIX 9 PA-RISC CPU, IBM OS/2 Version WARP 4.0 X86 CPU, IBM OS/2 Version LAN SERVER 3.0, 4.0, 5.0 INTEL CPU, IBM OS/2 SNMP sub-agent, IBM AIX V 3.25, IBM AIX 4.1, WINDOWS NT 3.51 INTEL CPU, WINDOWS NT 3.51 ALPHA CPU, NOVELL NetWare 3.11 and 3.12 INTEL CPU, INTERACTIVE UNIX 3.2, VMS 5.5 for VAX or ALPHA, SUN SOLARIS 2.5, LINUX SUSE 5.x and 6.x. WINDOWS NT 4.0 ALPHA CPU, DEC OPEN VMS on VAX CPU, V.5x, V.6x, V. 7x - UPSMAN V3, DEC OPEN VMS on ALPHA AXP CPU V.6x; APPLE MAC OS 9.4, DEC OPEN VMS on ALPHA CPU V 7.x, SIEMENS SINIX 5.41 – 5.45, RELIANT UNIX 5.45x RM RISC HP/COMPAQ TRUE 64 V 5.x ALPHA CPU, Digital UNIX V 4.0-5.1 ALPHA CPU,

### 3.8 Web Browser Requirements

Supported web browsers include:

Internet Explorer 6.0 or higher

The Netcom requires Macromedia Flash 6.0 or higher.

### 3.9 Special Requirements for Web Browsers

In some instances, the caching on a Web Browser can cause the current page not to be updated while navigating on the Netcom user interface. For example, while viewing the Event Log Page you might click on the **Variables** menu option but still see the **Event Log** page. If this happens, follow the steps to correctly configure the caching for your Web Browser to reload each page upon each visit. Below is the example procedure for Internet Explorer v6:

- . Open Internet Explorer and select the **Tools** menu option.
- . Select the **Internet Options** submenu.
- . Under the **Temporary Internet files** section, click the **Settings** button.
- . Click the **Every visit to the page** radio button.
- . Click the **OK** button.
- . Close the **Internet Options** dialog box.

### 3.10 Special Requirements for Firewall Access

Firewalls installed on the network must allow for the Netcom communication. Ensure that the web server port and all SNMP ports are allowed. When Windows XP

Service Pack 2 is installed on a computer it will turn on the personal firewall. Below are the steps to open up the web port for Netcom in Windows XP Firewall:

- . Select **Start Menu > Control Panel**.
- . Select **Network Connections** and right click on the connection that is being used.
- . Click on **Properties** and click the **Advanced** tab in the Properties dialogue.
- . Press the **Settings...** button to bring up the Firewall dialogue.
- . Go to the **Exceptions** tab and click the **Add Port** button.

. For **Name** enter *Netcom Web Port* and for **Port Number** enter *80*. Press the **OK** button.

. You now will be able to access the Netcom web port through the Windows XP Firewall.

## 4. How do I Configure the Netcom?

### 4.1 Installing the Netcom Utilities

The Netcom CD contains the following:

- . SNMP MIB
- . Netcom User Manual (PDF)
- . Shut down installation procedure
- . Netcom FAQ
- . Firmware

To install the Netcom Utilities or access any of the documents, place the Netcom CD in the CD

drive. The Netcom Utilities CD should automatically start. Follow the instructions provided on your screen.

### 4.2 Configuring the Netcom

The initial network settings can be made by connecting the Netcom to a serial communication program using the included configuration cable or cross over cable and laptop.

#### 4.2.1 HyperTerminal Setup example (serial cable)


1. Connect the 9 pin connector to the PC and the 9 pin receptacle labeled “Serial RS232” on the Netcom.


2. Open a HyperTerminal session by selecting (*Installed location may vary*)  
**Start > All Programs > Accessories > Communications > HyperTerminal.**
3. Select an available communications port from the drop-down list.
4. Select the following port settings:
  - . Bits per second: 19200
  - . Data bits: 8
  - . Parity: None
  - . Stop bits: 1
  - . Flow Control: None
5. Cycle power from the Netcom by pulling out the power connector and reinserting.
6. Wait for > and type **test**, this must be done within five seconds. This will disable the time out function and allow the IP address to be changed.
7. Type **setup** and enter.
8. The default IP address, IP mask, and IP gateway will be displayed.
9. Enter your IP address and press enter.
10. Enter your sub net mask and press enter.
11. Enter your IP gateway and press enter.
12. After the IP gateway is entered it will ask to save the changes, enter **y**.
13. When connecting to a 9700 or 2033A the protocol must be change, this is accomplished by typing “ups m”. After entering ups m the user will see “Mitsubishi protocol selected”, the user must type in “commit” to save the change.
14. System will now reboot and is ready for Internet connectivity.


### **4.2.2 Configuring the IP address with Window XP.**

1. Connect the cross over cable provided with the Netcom2 to your PC and the “Network” RJ45 port of the Netcom2.
2. Plug in the power supply included in the Netcom2 box to the +12VDC.




3. On the PC that the cross over cable is connected to, select , “**Control Panel**”, “**Network Connections**”. Right click on “**Local Area Connection**” and select “**Properties**”.
4. Double click “**Internet Protocol (TCP/IP)**”.

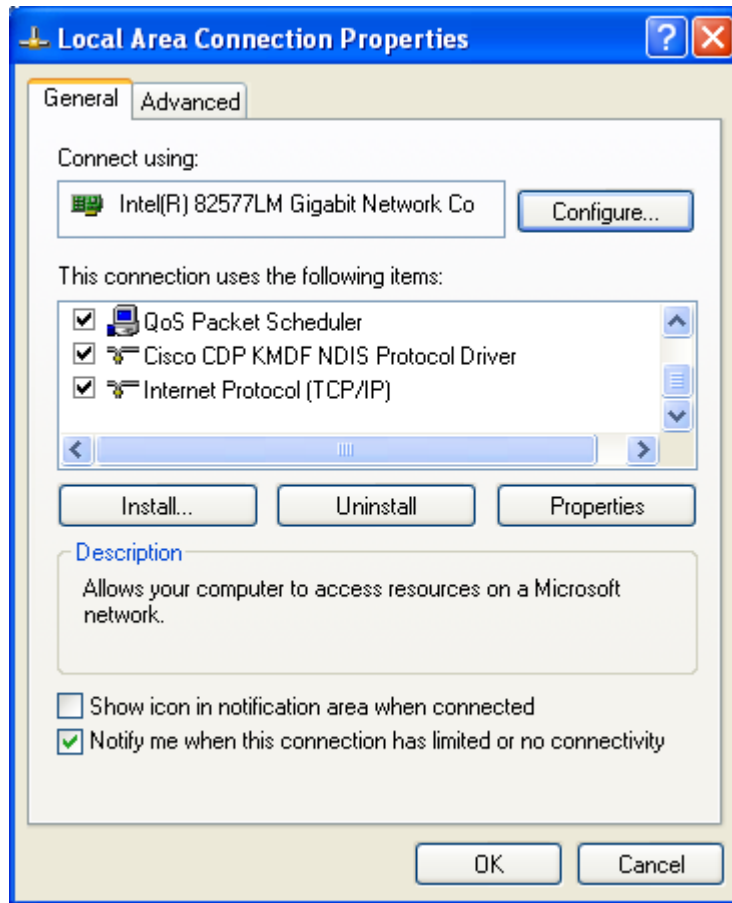

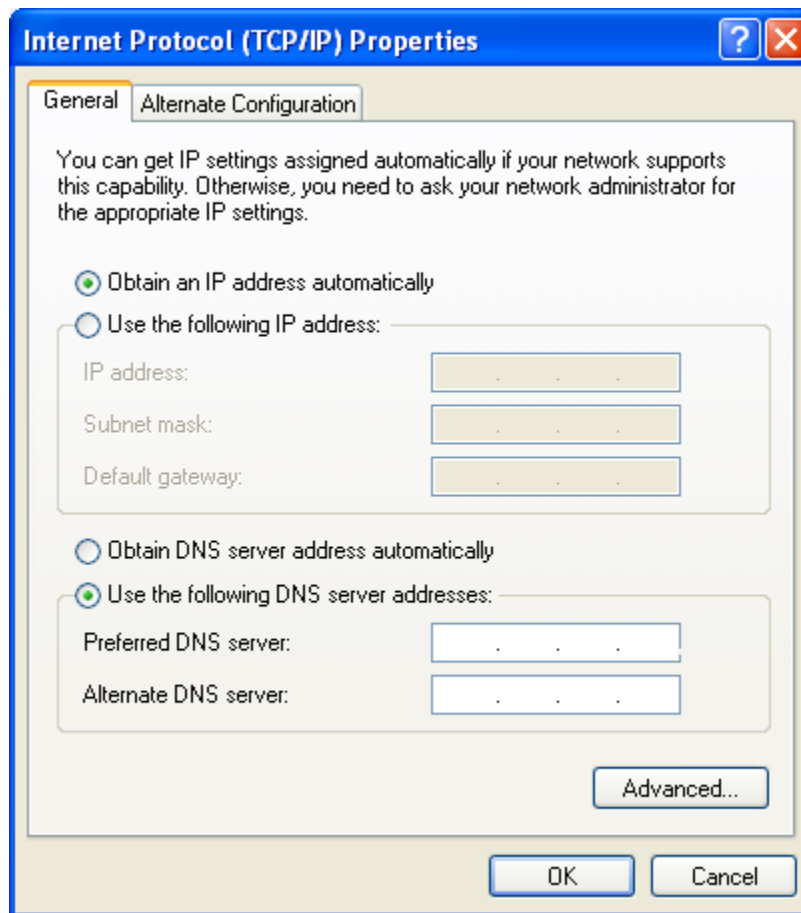

5. Select **"Use the Following IP address:"**
6. Enter; IP address: 192.168.0.1  
Subnet mask: 255.255.255.0  
Default gateway: 192.168.0.253

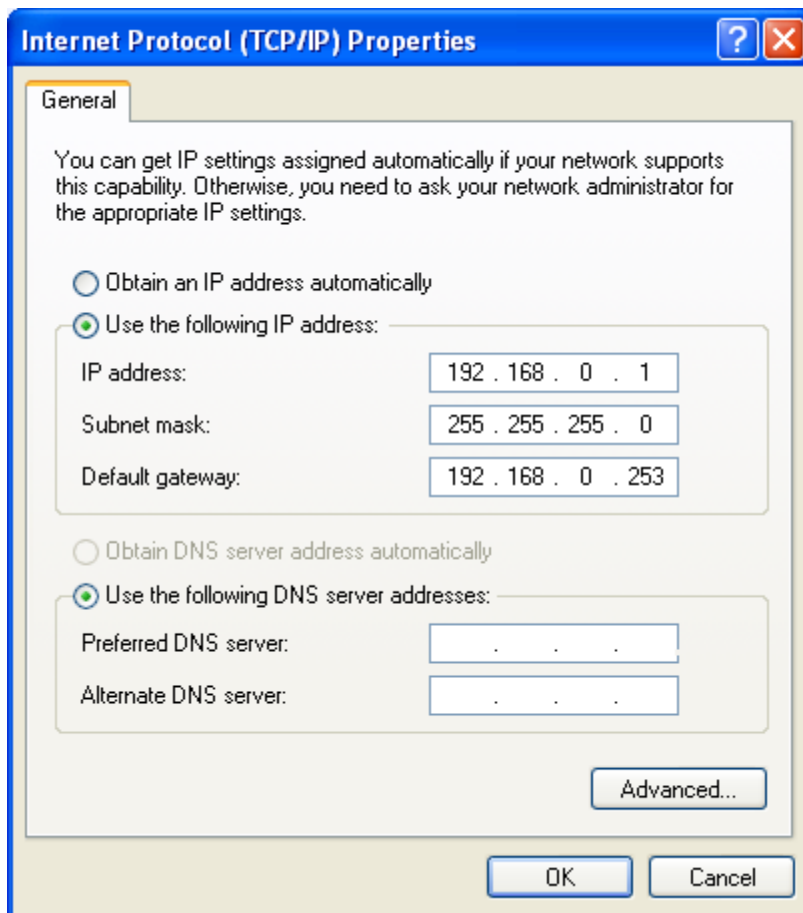


7. Click  on the “**Internet Protocol (TCP/IP) Properties**” screen.

8. Click  on the “**Local Area Connection Properties**” screen.

9. Click on .

10. Select .

11. Enter: `http://192.168.0.253`,

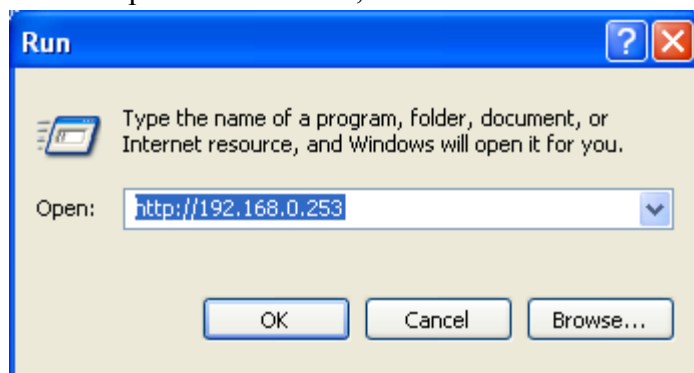


and click OK.

12. The Netcom2 log in screen will appear.

13. If the Netcom log in screen does not appear perform the following;
  - a. Verify the cross over cable is connected to the Netcom2 port labeled **“Network”**
  - b. Verify the power light on the Netcom2 is green and the status light is blinking.
  - c. Ping the entered IP address in the DOS prompt.
  - d. Verify the “local area connection” is connected in the Network connections screen
14. The default login and password of a Netcom is;  
Username: admin  
Password: admin
15. From the home screen of the Netcom2 select **“IP config”**.
16. The user will be able to change the IP information from this screen. After the IP information has been entered the “Save” button must be selected for the information to be saved.


The screenshot shows a Windows Internet Explorer browser window displaying the Mitsubishi Electric DiamondLink NetCom web interface. The browser's address bar shows the URL `http://192.168.0.253/Start.html`. The page header includes the Mitsubishi Electric logo, the text "Mitsubishi Power Products, Inc", and "DiamondLink NetCom". On the right side of the header, it says "Logged In: admin ( Administrator )", "System Name: sysName", and a "Logout" link. Below the header, there are two tabs: "Setup" (highlighted in red) and "UPS". A left-hand navigation menu lists various settings: Overview, IP Config (highlighted in red), HTTP, LDAP Servers, SNMP NMS, SNMP Rec's, Event, Notification, Users, Email Alerts, Time Settings, Syslog Servers, Events, Preferences, and Restart. The main content area is titled "Setup / IP Configuration" and contains the text: "Network settings for this unit are set here. This will be the IP address that is used to access the web management interface and by a Network Management Station." Below this text are several input fields: "System Name" (containing "sysName"), "System Location" (containing "sysLocation"), "Contact Name" (containing "sysContact"), "IP Address" (containing "192.168.0.253"), "Subnet Mask" (containing "255.255.255.0"), "Gateway" (containing "192.168.0.1"), and "Config. Protocol" (a dropdown menu set to "Static"). A red rectangular box highlights the entire "Setup / IP Configuration" section. At the bottom right of this section is a "Save" button.


17. Once the **“Save”** button is selected you will be presented with the following screen. Selecting OK will write the IP address to the memory of the Netcom. You will no longer be able to communicate with the Netcom at the default IP address.

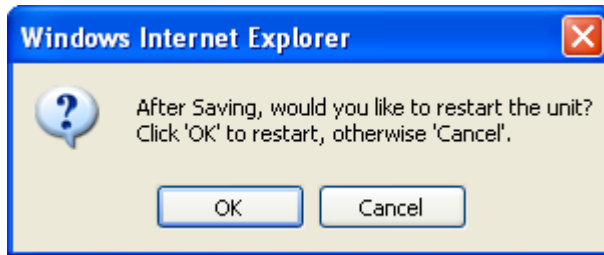



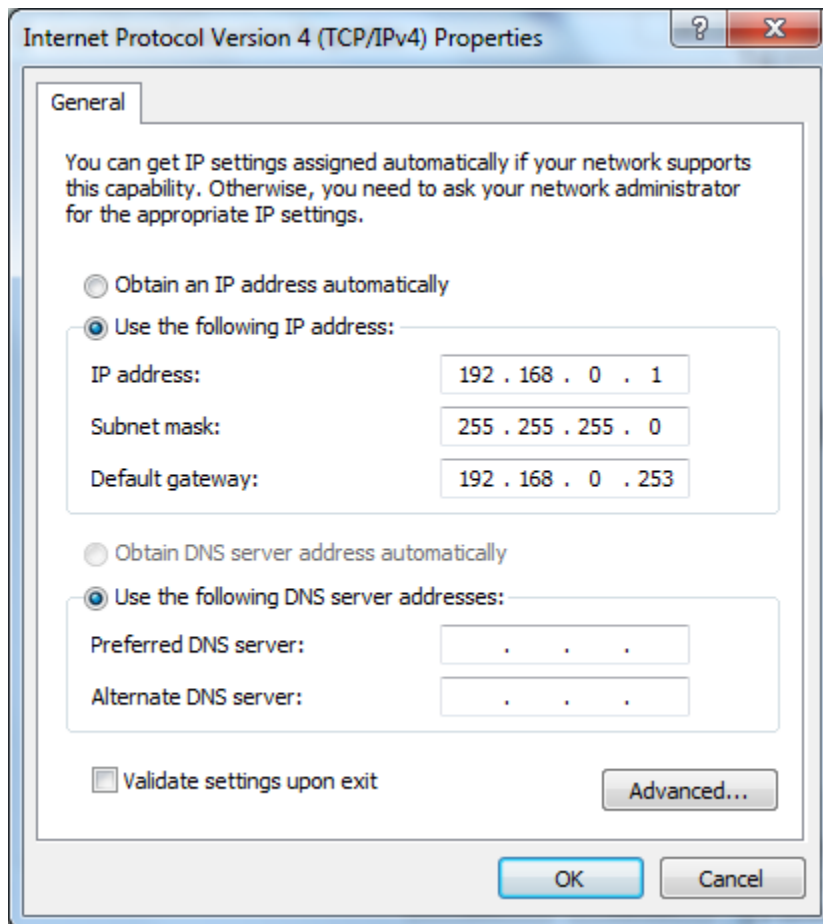
**\*\*If the Netcom2 is going to be connected to a 2033A or 9700 the protocol will have to be changed using the DB9 connector supplied with the Netcom2. Please refer to the step 4.2.1.**


### **4.2.3 Configuring the IP address with Windows 7**

1. Connect the cross over cable provided with the Netcom2 to your PC and the RJ45 port labeled “Network” on the Netcom2.
2. Plug the power supply included with the Netcom2 into a wall outlet and the port labeled +12VDC.
3. On the PC that the cross over cable is connected to the Netcom, select , and in the **“Search programs and files”** type in “Control Panel”.

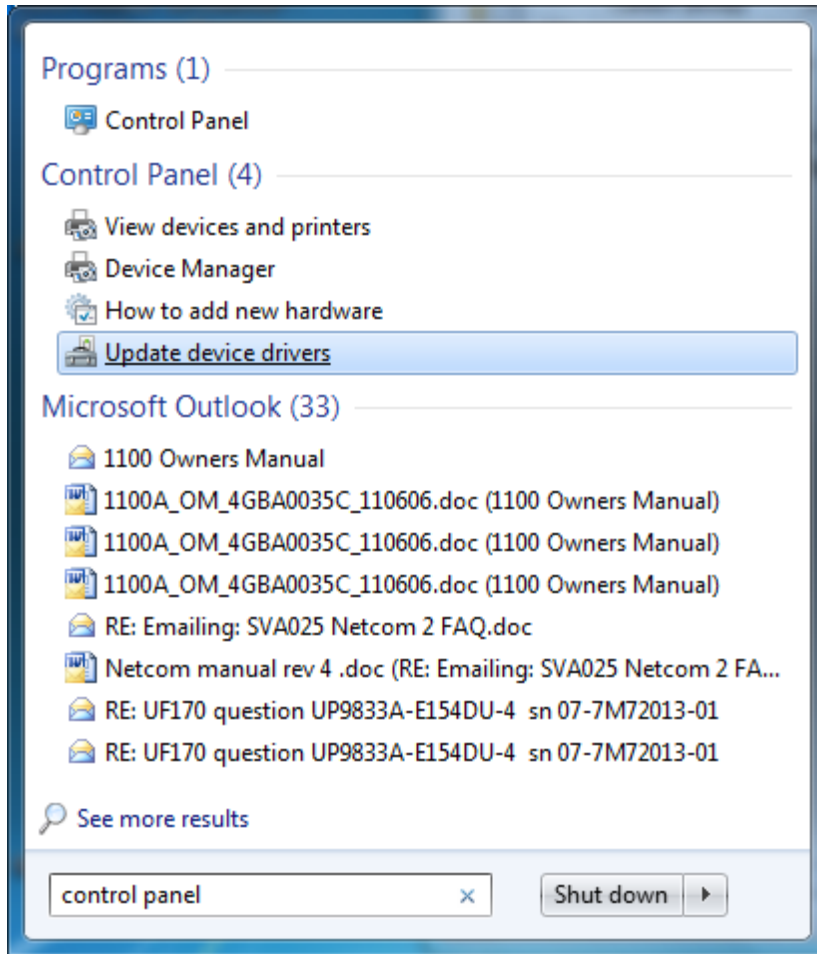


4. Select Control Panel.
5. Under “Network and Internet” select “view network and status tasks”.
6. In the “Network and sharing center” double click on the “local Area Connection”.
7. In the “local Area Connection Status” select .
8. Double click on ☒  Internet Protocol Version 4 (TCP/IPv4).
9. Select the “Use the Following IP address” radio button.
10. Enter the following information;  
IP Address: 192.168.0.1  
Subnet Masks: 255.255.255.0  
Default gateway: 192.168.0.253




11. Click ok.
12. Click ok, on the Local Area Connection Properties.
13. Select , in the “Search programs and files” enter “run”.
14. Select run.
15. Enter: <http://192.168.0.253>
16. If the Netcom log in screen is present skip to step 17, if the screen does not appear perform the following;
  - e. Verify the cross over cable is connected to the Netcom2 port labeled “Network”
  - f. Verify the power light on the Netcom2 is green and the status light is blinking.
  - g. Ping the entered IP address in the DOS prompt
  - h. Verify the “local area connection” is connected in the Network connections screen
17. The default login and password of a Netcom is;
  - Username: admin
  - Password: admin
18. From the home screen of the Netcom2 select “IP config”

19. The user will be able to change the IP information from this screen. After the IP information has been entered the **“Save”** button must be selected for the information to be saved.

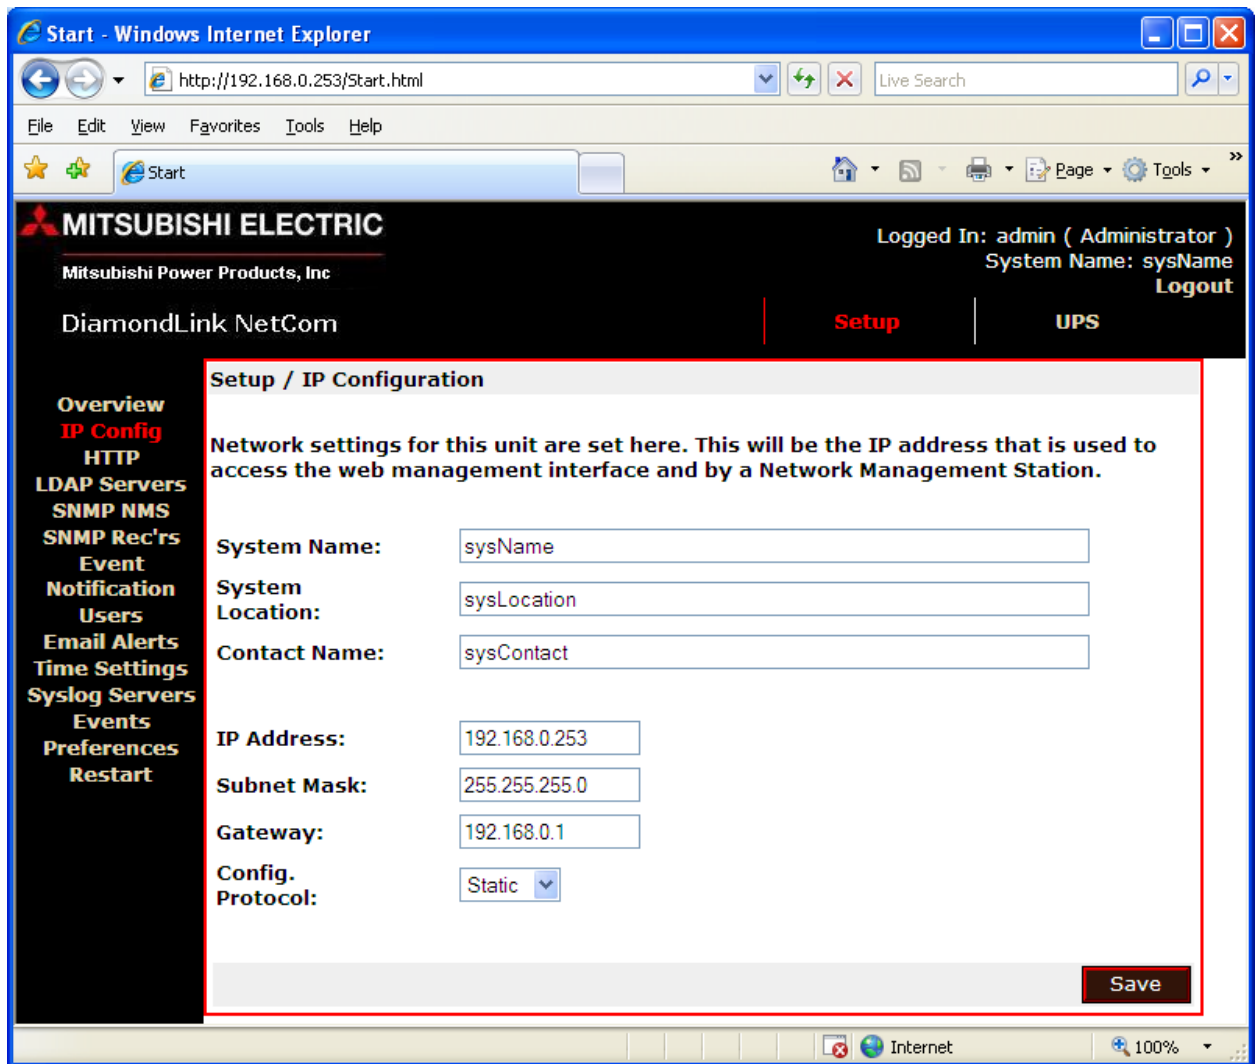

20. Once the **“Save”** button is selected you will be presented with the following screen. Selecting OK will write the IP address to the memory of the Netcom. You will no longer be able to communicate with the Netcom at the default IP address.

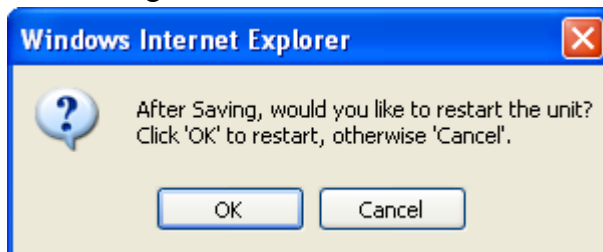

21. If the Netcom2 is going to be connected to a 2033A or 9700 the protocol will have to be changed using the DB9 connector supplied with the Netcom2. Please refer to the step XX.



## 5. How do I Update the Netcom Firmware?


### Configuration Upgrade

The Netcom2 is shipped with firmware installed, if needed the latest firmware version is available for download at;

[www.meppi.com/Products/UninterruptiblePowerSupplies/Communication](http://www.meppi.com/Products/UninterruptiblePowerSupplies/Communication).

The firmware version installed in the Netcom2 can be found in the log in screen under the user name and password.

5.1. Open “SineticaTFTPclient.exe” on the Netcom CD.

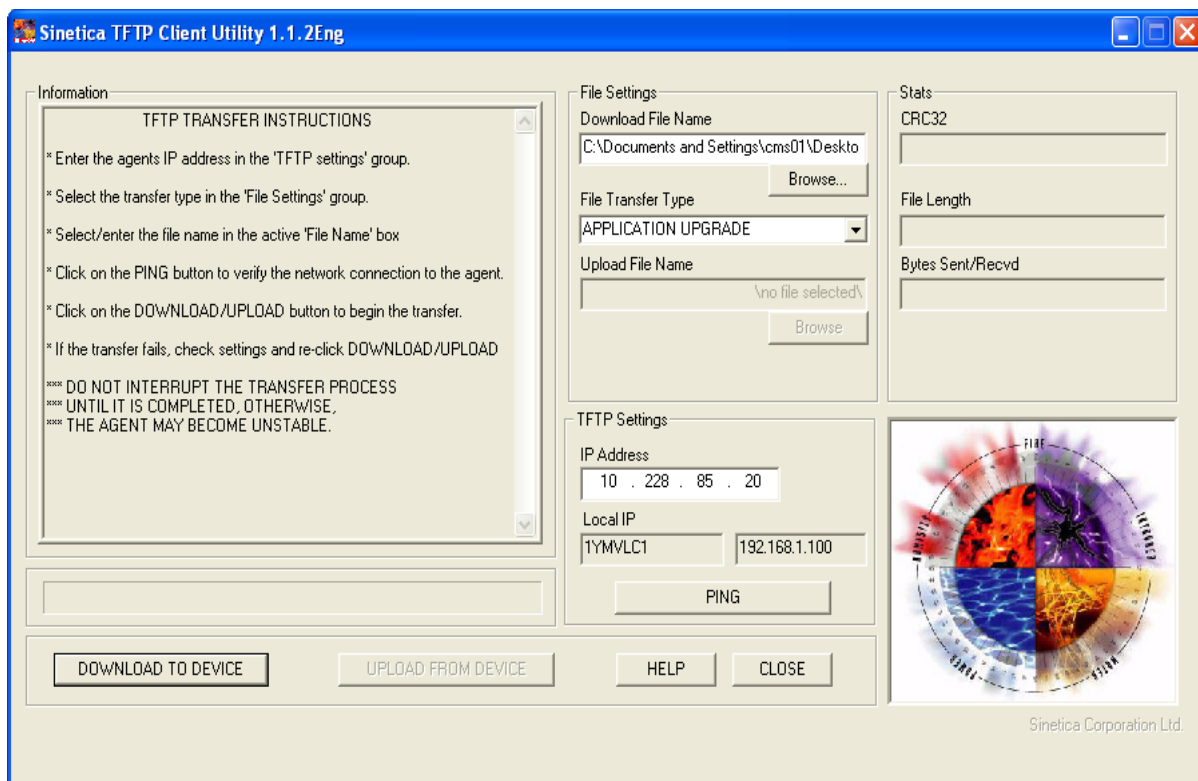

**Figure 5.1**


- 5.2. In the '**File Settings**' group select '**APPLICATION UPGRADE**' from the 'File Transfer Type' drop down list.
- 5.3. In the '**Download File Name**' edit box select the name of the file, XX.XX.X.bin, supplied on the Netcom 2 CD.
- 5.4. In the 'TFTP Settings' group enter the required IP address of the unit to be upgraded in the 'IP Address' box.
- 5.5. Click the 'DOWNLOAD TO DEVICE' button. A blue task bar will flow from left to right and data information will be displayed in the information box. When "connection closed" appears the firmware installation will be complete.
- 5.6. The new configuration data will be written to the EEPROM in the Netcom2 unit
- 5.7. If the Netcom is going to be communicating with a 2033A or 9700 the protocol will have to be selected. This is done in the HyperTerminal session in section

## 6. Netcom Web Server

Before attempting to connect to the Netcom2 for the first time check the following;

1. An IP address has been assigned
2. The supplied RJ45 to DB9 cable is connected to the port labeled UPS and connected to the UPS communication port (contact Mitsubishi or your local service group)
3. The intranet cable is connected to the Network plug and the amber and green lights are flashing
4. Power is applied to the Netcom and the power and status lights are on.
5. The proper protocol has been selected; 9700 and 2033A UPS require MIT all other require SEC.

## 7.1 Login Page

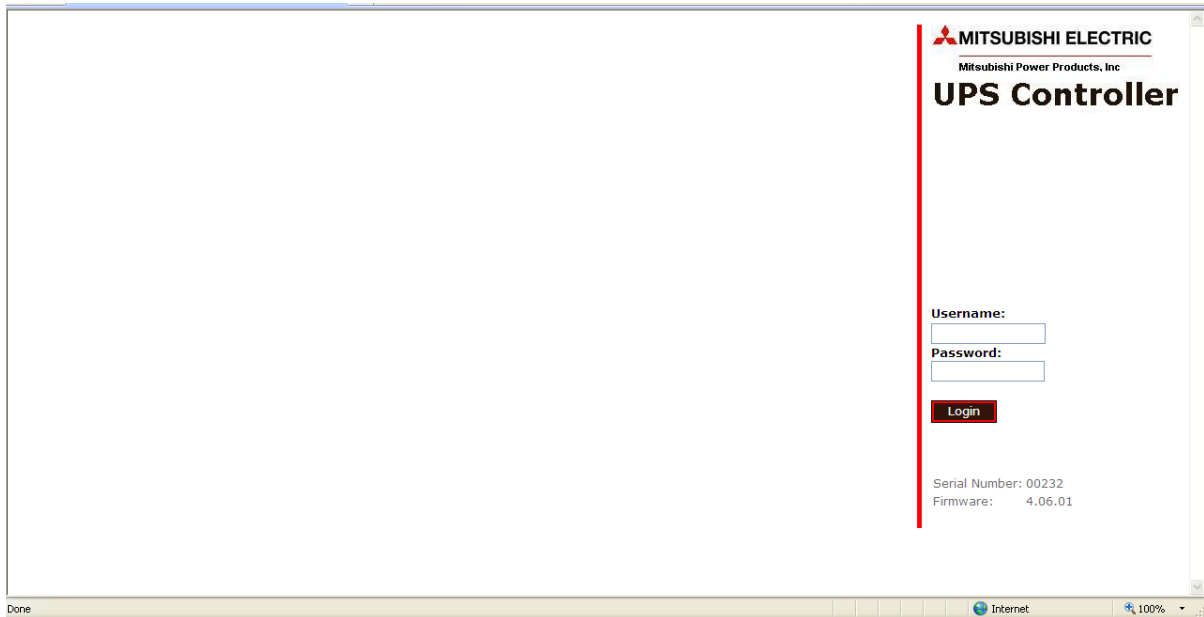

**Figure 7**

After connecting to the Netcom Figure 2 will be displayed, the default password for the Netcom is:

Username: **admin**

Password: **admin**

The Netcom2 Firmware version is located under the Serial number; the most current software version can be downloaded at [Meppi.com](http://Meppi.com).

The default password and login for the Netcom is admin, admin. If the password is changed and lost the following steps will need to be completed to reset the password;

1. Establish a Hyper-terminal session as described in Section 4 of this manual.
2. Connect a terminal to the serial port.
3. Reboot the Netcom.
4. At the serial prompt enter "test" within 5s.
5. At the serial prompt enter "pwdrst".
6. At the serial prompt enter "x".
7. When the system starts (status indicator flashing at 4Hz) login using "admin"/"admin"
8. Change and save system user configuration as needed.
9. Reboot

## 7.2 UPS Status Page/ UPS/ Overview

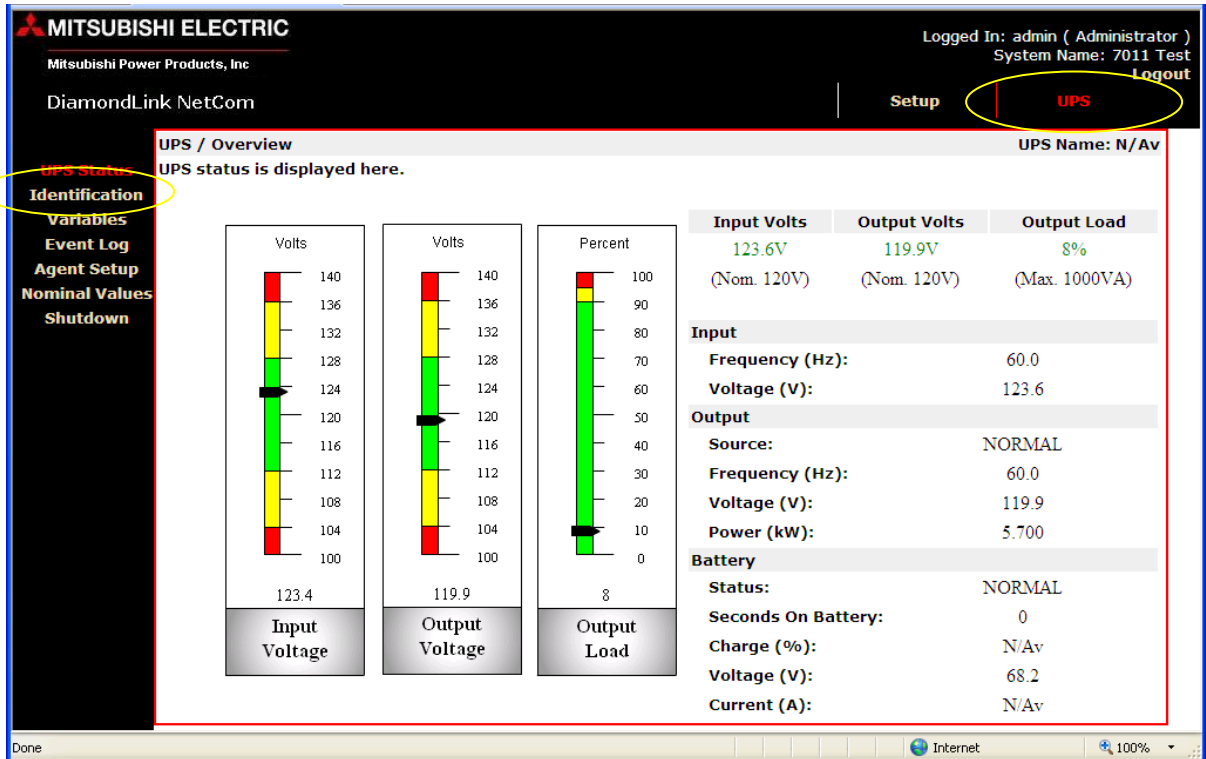


Figure 7.1

When the Netcom is initially powered on the user will be taken to the over view screen, pictured below in figure 7.2. The user must select **Setup** at the top of the screen and select **Preferences** on the left side of the screen to be directed to figure 7.2.

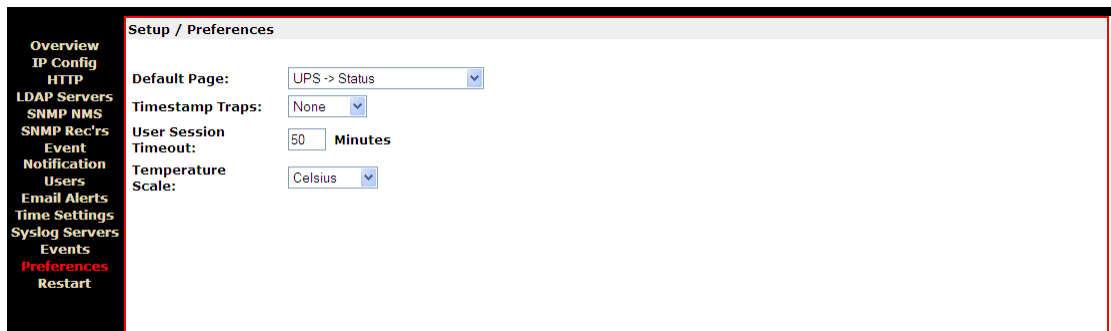


Figure 7.2

Under the default, select **UPS ->Status** this will set the status page to default. The user can also select the time before the Netcom2 times out by selecting the **User Session Timeout:** drop down.

If the **Input Volts, Output volts, or Output load** is any color other than green the values are out of limits. This can be corrected by entering the correct values in the **Nominal Values** page or the values are out of the UPS's operating range.

If the **Input Volts, Output volts, or Output load** graphs are to the max this also is an indication of incorrect values entered in the **Nominal Values** page.

## 7.3 Identification/UPS Identification Page

**MITSUBISHI ELECTRIC**  
Mitsubishi Power Products, Inc.  
DiamondLink NetCom

Logged In: admin ( Administrator )  
System Name: 7011 Test  
Logout

Setup | **UPS**

**UPS Status**  
**Identification**  
Variables  
Event Log  
Agent Setup  
Nominal Values  
Shutdown

UPS / Identification UPS Name: N/Av

UPS identification values are displayed here.

UPS Serial Number:	08-7M71234-05
Battery Installation Date:	25/07/2006
Battery Age (Years):	2.39
Contact Name:	Joe Smith
Contact Number:	724-778-1234
Contact Email Address:	<a href="mailto:Joe.smith@meppi.com">Joe.smith@meppi.com</a>

Internet 100%

**Figure 7.3**

Click on the **Identification** menu option to display the UPS serial number, contact name, contact email, contact phone number and battery information. This information is input at the **Agent Setup** menu (see figure 7.7).

## 7.4 Variables/Variables Page

The screenshot shows the Mitsubishi Electric DiamondLink NetCom web interface. The top header includes the Mitsubishi Electric logo, company name, and user login information (admin / Administrator). The main navigation menu on the left lists various system pages, with 'Variables' highlighted. The main content area is titled 'UPS / Variables' and displays a table of system variables. The variables are categorized into Input, Output, and Battery sections. The 'UPS Name' is listed as 'N/Av'.


UPS / Variables		UPS Name: N/Av
Variable values are displayed here.		
<b>Input</b>		
Frequency (Hz)	60.0	
Voltage (V)	123.6	
<b>Output</b>		
Source	NORMAL	
Frequency (Hz)	60.0	
Voltage (V)	119.9	
Current (A)	0.3	
Power (kW)	5.500	
Load (%)	8	
<b>Battery</b>		
Status	NORMAL	
State	FLOATING	
Seconds On Battery	0	
System Time	14:49:27	
Card Upime	0 days, 6 hours, 10 mins, 49 secs	
Manufacturer	MITSUBISHI ELECTRIC CORPORATION	
Model	7011A-1.0K	
Firmware Version	7081D	
UPS Name	N/Av	
UPS Serial Number	08-7M71234-05	
UPS Protocol	SEC	
Contact Name	Joe Smith	
Contact Number	724-778-1234	

**Figure 7.4**

Click the **Variables** page to display the variables page. This page displays a list of the available UPS variables. The variables displayed may vary depending on the unit that is being monitored.



## 7.5 Event Log/View Events Page

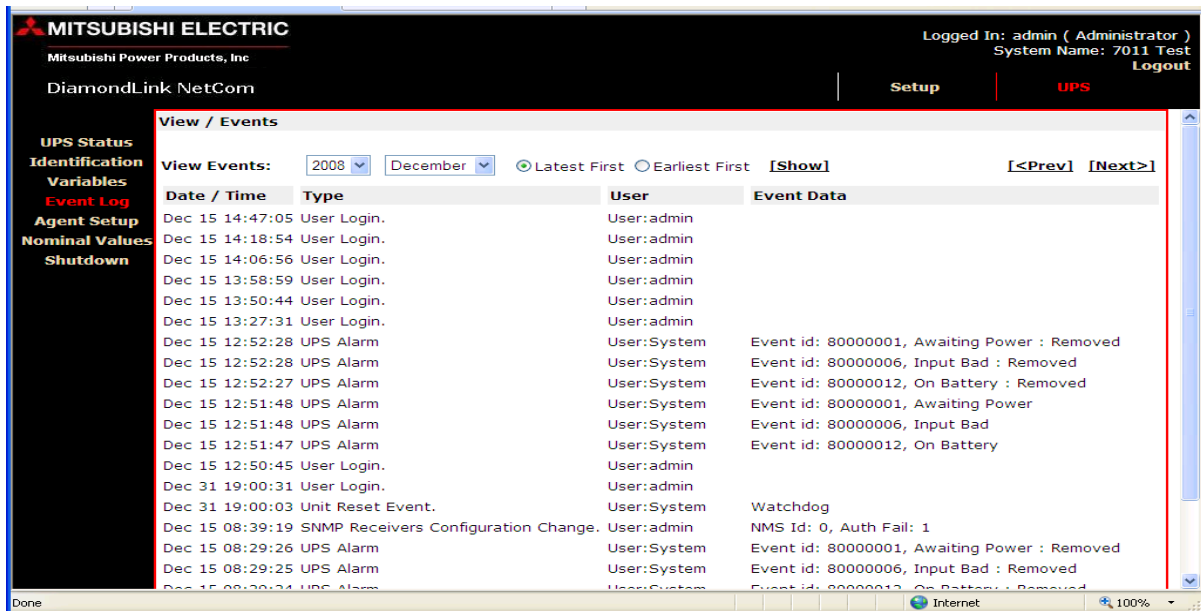

**Figure 7.5**

Click on the **Event Log** menu option to display the **View/Events** page. The event log will hold the latest events received from the UPS. The events can be sorted by month, year and order of occurrence by selecting the **View Event**.

When an event occurs, it will be written to the event log with a date/time stamp. When the event is cleared (alarm removed), it will be written to the event log in the format “*event* removed”, where *event* is the name of the event being cleared. Click the **Clear Log** button to clear the event log.

## 7.6 Agent Setup/UPS/Configuration Page

**MITSUBISHI ELECTRIC**  
Mitsubishi Power Products, Inc  
DiamondLink NetCom

Logged In: admin ( Administrator )  
System Name: 7011 Test  
Logout

Setup | UPS

UPS / Configuration UPS Name: N/Av

Agent parameters are set up here.

UPS Name: 7011 Test

UPS Serial Number: 08-7M71234-05

Contact Name: Joe Smith

Contact Email: Joe.smith@meppi.com

Contact Number: 724-778-1234

Battery Install Date Year: 2008 Month: 11 Day: 1

☐ Reboot Agent on Save

Undo All Save

**Figure 7.6**

The **Agent Setup** (Netcom) page is where the UPS name, serial number, contact name, contact email, and contact phone number can be inserted. The battery install date is inserted into this field for battery age calculation that is available on the **UPS/Identification page**. The battery install date will also vary depending on the date that is selected in the **SETUP/ Time Settings** page.

The **UPS Name** that is inputted in this screen is the name that will appear on email alerts.

## 7.7 Nominal Values/UPS Nominal Values Page

The screenshot shows the Mitsubishi Electric DiamondLink NetCom web interface. The top header includes the Mitsubishi Electric logo, the company name, and the system name 'UPS netcom testing'. The left sidebar contains navigation links: UPS Status, Identification, Variables, Event Log, Agent Setup, Nominal Values (highlighted), and Shutdown. The main content area is titled 'UPS / Nominal Values' and displays the following information:

UPS / Nominal Values			UPS Name: UPS in the cube
Nominal values are displayed here.			
<b>Input</b>			
Voltage (V)	120		
Frequency (Hz)	60		
<b>Output</b>			
Voltage (V)	120		
Frequency (Hz)	60		
Rated Load (kVA)	1		
<b>Battery</b>			
Voltage (V)	24		
Life (years)	2		

At the bottom of the main content area, there is a link: [Change Nominal Values](#).

**Figure 7.7**

The **UPS/Nominal Values** page is where the UPS nominal values can be changed. This information can be found in the UPS Owners/Technical for nominal values. If these values are not set to the current UPS values the **UPS Status** values will not read correctly and the bar graphs will not indicate proper voltage.

When the words **Change Nominal Values** is selected the user is directed to figure 7.8. The UPS nominal values are entered into this screen and saved.

*\*The battery voltage is a preset value and can not be changed.\**

## 7.8 Nominal Values/UPS Nominal Values Setup

**MITSUBISHI ELECTRIC**  
Mitsubishi Power Products, Inc.  
DiamondLink NetCom

Logged In: admin ( Administrator )  
System Name: UPS netcom testing  
Logout

Setup | **UPS**

UPS / Nominal Values Setup UPS Name: UPS in the cube

Nominal values are set up here.

Input	Value
Voltage (V)	120
Frequency (Hz)	60
Output	Value
Voltage (V)	120
Frequency (Hz)	60
Rated Load (kVA)	1
Battery	Value
Voltage (V)	24
Life (years)	2

Undo All Save

**Figure 7.8**

## 7.9 Shutdown/UPS Shutdown Setup Page

**MITSUBISHI ELECTRIC**  
Mitsubishi Power Products, Inc.  
DiamondLink NetCom

Logged In: admin ( Administrator )  
System Name: UPS netcom testing  
Logout

Setup | **UPS**

UPS / Shutdown Configuration UPS Name: UPS in the cube

Shutdown configuration parameters are set here.

Send Shutdown Message		Shutdown on Low Battery	
<input type="checkbox"/> Enable		<input type="checkbox"/> Enable	
<input type="radio"/> Battery Capacity	< 5 (%)	Shutdown Delay	20 (sec)
<input type="radio"/> Estimated Runtime	< 10 (min)		
<input checked="" type="radio"/> On Battery	after 5 (sec)		

Shutdown Event	Enable	Delay (sec)
Battery Discharged	<input type="checkbox"/>	5
Battery Failure	<input type="checkbox"/>	5
Bypass ON Auto	<input type="checkbox"/>	5
Input Out of Range	<input type="checkbox"/>	5
Output Out of Range	<input type="checkbox"/>	5
Overload	<input type="checkbox"/>	5
Temperature Out of Range	<input type="checkbox"/>	5

[Configure Shutdown Agents](#)

Undo All Save

**Figure 7.9**

Figure 7.9 is an example of the **UPS/Shutdown Configuration** page. In this page the user can select the UPS activity that will trigger a shut down message, by enabling a parameter the user can send a shut down on;

1. Battery Capacity percentage, when the UPS detects the percentage of battery remaining a shutdown will be initiated after the time limit has elapsed.
2. Estimated Runtime, when the UPS detects the estimated run time has been reached a shut down message will be initiated after the time limit has elapsed.
3. On Battery, when the UPS is on batteries for the preset duration a shutdown message will be sent after the preset time has elapsed.
4. Low Battery Alarm, when the low battery alarm has been detected by the UPS a shut down message will be sent after the preset time limit has elapsed.
5. Battery Discharge, when the unit is discharging the battery string a shut down message will be sent after the present time has elapsed
6. Battery Failure, when the UPS has detected a battery failure a shut down message will be sent.
7. Bypass ON Auto, when the UPS is transferred to bypass either manually or automatically a shut down message will be sent after the preset time limit has elapsed.
8. Output Out of Range, when the UPS Output voltage deviates from the UPS's operating parameters a shut down message will be sent after the preset time limit has elapsed.

9. Input Out of Range, when the UPS input voltage deviates from the UPS's operating parameters a shut down message will be sent after the preset time limit has been reached.
10. Overload, when the unit is overload and the preset timer has expired a shut down message will be sent.
11. Temperature Out of Range, when the UPS experiences temperature that exceed the operating standards and the timer has elapsed a shut down message will be sent.

Each parameter has a time limit or percentage attached to it. If the parameter is reached but does not remain for the duration of the time or percentage limit a shutdown will NOT be initiated.

The [Configure Shutdown Agents](#) when selected.

The screenshot shows the 'UPS / Shutdown Agent Configuration' page in the Mitsubishi Electric DiamondLink NetCom interface. The page title is 'UPS / Shutdown Agent Configuration' and the subtitle is 'Shutdown agent configuration parameters are set here.' The page is divided into two main sections: 'Agent Name' and 'IP Address'. The 'Agent Name' section contains a table with 10 rows, each with a unique ID (001 to 010) and a name (e.g., 'test computer 1', 'John Smith', 'Joann Smith', 'John John', 'Larry', 'Tom', 'Dave', 'Dave S'). The 'IP Address' section contains a table with 10 rows, each with a unique ID (011 to 020) and a name (e.g., 'Gary', 'Oscar', 'Tommy', 'Eric', '1', '2', '3', '4', '5', '6'). Each row has a 'Delay (min)' column with a dropdown menu. At the bottom of the page, there are buttons for 'Test', 'Upload', 'Browse', 'Download', 'Undo All', 'Clear All', and 'Save'. The 'Upload' button is highlighted with a yellow circle.

**Figure 7.10**

The **UPS/Shutdown** setup can be accessed by selecting **Configure Shutdown Agents**. Figure 7.10 is an example of the page. In this page the user can input up to 500 devices.

The user will input the devices IP address, name and time delay that is selectable in minutes. The **Agent IP Address** is the IP address of the item that will be shut down when the shut down message is sent. The computer/server must have a shut down agent installed prior to testing the shut down.


After the user enters the devices that are going to be shut down by the Netcom a test can be performed by selecting the test button (THIS WILL SHUT DOWN ALL DEVICES ENTERED). The user can also download the shutdown entries to a CSV file. This file can be modified and uploaded back into the device using the update feature on the bottom left of the page.



***Note: Not all UPS support the estimated runtime variable.***

-On Battery – Click the **On Battery** radio button. When the UPS goes on battery, a shutdown message will be sent to all listed systems.

## 7.11 Overview/Network Setup Page

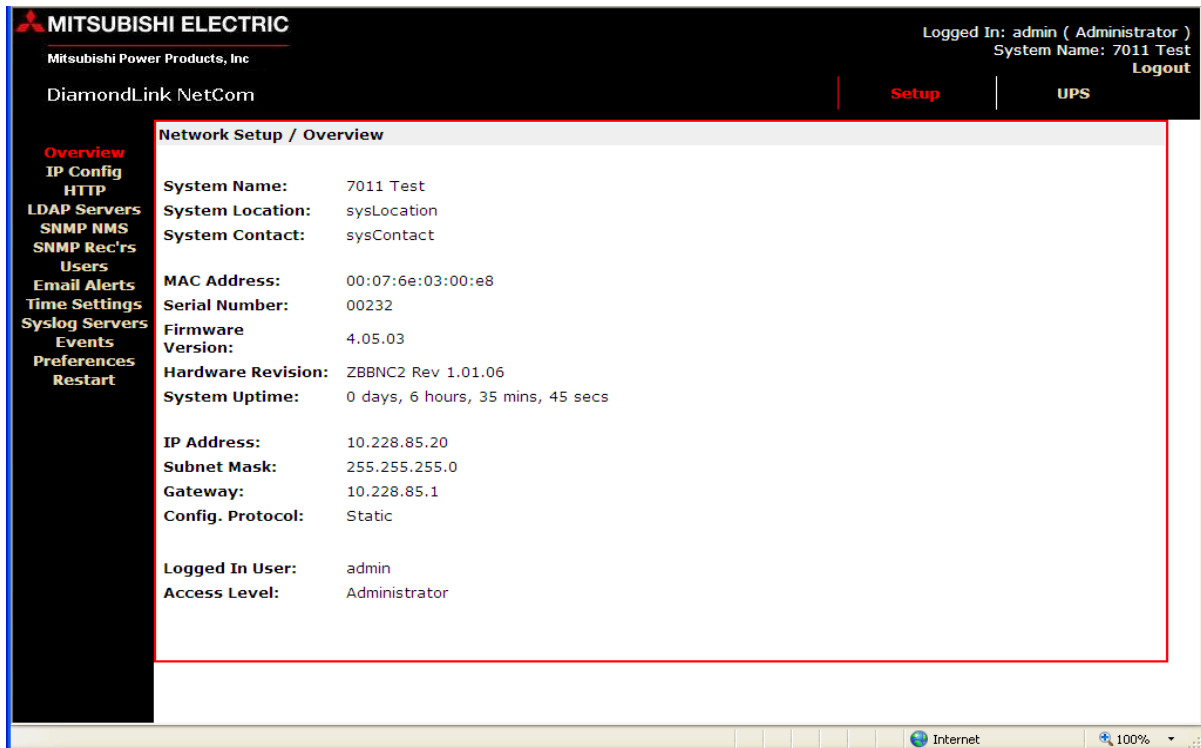

**Figure 7.11**

The Network **Setup/Overview** page displays the systems name, MAC address, serial number, firmware version, System uptime, IP information and user information.



## 7.12 IP Config/Setup/IP Configuration Page

MITSUBISHI ELECTRIC  
Mitsubishi Power Products, Inc.  
DiamondLink NetCom

Logged In: admin ( Administrator )  
System Name: UPS netcom testing  
Logout

Setup | UPS

Overview  
IP Config  
HTTP  
LDAP Servers  
SNMP RMS  
SNMP Rec'rs  
Event  
Notification  
Users  
Email Alerts  
Time Settings  
Syslog Servers  
Events  
Preferences  
Restart

Setup / IP Configuration

Network settings for this unit are set here. This will be the IP address that is used to access the web management interface and by a Network Management Station.

System Name:

System Location:

Contact Name:

IP Address:

Subnet Mask:

Gateway:

Config. Protocol:

Save

**Figure 7.12**

At the **Setup/ IP Configuration** page the System name, IP address, Subnet Mask, Gateway, and Config Protocol can be change. The name that will appear in the upper right hand of ALL screens is set in the **System Name** box. Check with your IT administrator for recommended settings. The Config Protocol can be set to static, Dynamic Host Configuration Protocol (DHCP) or Bootstrap Protocol (Bootp) by using the drop down box. The IP address can be set from this screen, however once the IP address is set and any screen is saved the user will not be able to access the Netcom2 from the set IP address, the Netcom2 will be set to the new IP address.

## 7.13 HTTP/HTTPS Setup Page

**MITSUBISHI ELECTRIC**  
Mitsubishi Power Products, Inc.  
DiamondLink NetCom

Logged In: admin ( Administrator )  
System Name: 7011 Test  
Logout

Setup / HTTP

Access method for the web management interface is selected here. HTTP or HTTPS access methods can be used. Only one type of access method can be selected for use at any time. Use of HTTPS is recommended for security.

Protocol & Port:

☒ HTTP (Unsecured) Port:

☐ HTTPS (Secured) Port: 443

Save

Done

Internet 100%

**Figure 7.13**

The HTTP protocol function can be set by selecting the radio button. The unsecured port can be changed, but check with your IT administration and Network firewalls for proper settings.

## 7.14 LDAP Servers/Setup/LDAP Servers Page

**MITSUBISHI ELECTRIC**  
Mitsubishi Power Products, Inc.  
DiamondLink NetCom

Logged In: admin ( Administrator )  
System Name: 7011 Test  
Logout

**Setup** | **UPS**

**Setup / LDAP Servers**

Overview  
IP Config  
HTTP  
**LDAP Servers**  
SNMP NMS  
SNMP Rec'rs  
Users  
Email Alerts  
Time Settings  
Syslog Servers  
Events  
Preferences  
Restart

Enabled:  Minutes (Timeout)

Credential Cache:  Minutes (Timeout)

**Primary LDAP Server**

Display Name:

IP Address:

Unit Base DN:

Users Base DN 1:

Users Base DN 2:

**Secondary LDAP Server**

Display Name:

IP Address:

Unit Base DN:

Users Base DN 1:

Users Base DN 2:

**Figure 7.14**

Lightweight Directory Access Protocol (LDAP) has four options that are enabled by the drop down box and two optional servers. The drop down box has Disable, Primary, Secondary, and both. Your IT administration will be able to provide the necessary information for this function to be used if needed.

## 7.15 **SNMP NMS**/Setup SNMP Page

**MITSUBISHI ELECTRIC**  
Mitsubishi Power Products, Inc.  
DiamondLink NetCom

Logged In: admin ( Administrator )  
System Name: UPS netcom testing  
Logout

Setup | UPS

### Setup / SNMP (Network Management Stations)

The IP address, community string and access permissions are specified here for up to 5 Network Management Stations. Any machine which must access this unit's SNMP functions must be entered here.  
Read Only access permits the NMS to use only GET commands.  
Read / Write access permits the NMS to use both GET and SET commands.

	NMS IP Address:	Community String:	NMS Access:
NMS 1	<input type="text"/>	<input type="text"/>	Read Only
NMS 2	<input type="text"/>	<input type="text"/>	Read Only
NMS 3	<input type="text"/>	<input type="text"/>	Read Only
NMS 4	<input type="text"/>	<input type="text"/>	Read Only
NMS 5	<input type="text"/>	<input type="text"/>	Read Only

Save

**Figure 7.15**

The **Setup/SNMP NMS** function is used to set up the network management station that will be viewing the UPS information using GETs and SETs. The Get operation is used by the NMS to obtain the necessary information and the SETs command are used to configure the management device for the information. The network management stations that must access the units SNMP function must be entered at this page. For each Network Management Station the following must be entered.

- NMS IP Address- Enter the IP address for the NMS
- Community – Enter the SNMP community string the NMS will use. Contact your system administrator for details
- NMS- The read only access permits the network management station to use only GET commands. The Read/Write access permits the network management station to use both GET and SET commands.



**Note:** A copy of the Netcom MIB files can be found on the Netcom CD, [www.meppi.com](http://www.meppi.com), or in Appendix B of this manual.

## 7.16 **SNMP Rec'rs**/SNMP Receivers Page

MITSUBISHI ELECTRIC

Mitsubishi Power Products, Inc

Logged In: admin ( Administrator )  
System Name: UPS netcom testing  
[Logout](#)

DiamondLink NetCom

Setup

UPS

Overview

IP Config

HTTP

LDAP Servers

SNMP NMS

SNMP Rec'rs

Event Notification

Users

Email Alerts

Time Settings

Syslog Servers

Events

Preferences

Restart

Setup / SNMP (Receivers)

Trap Community String:

Enabled	Event Cat.	Trap Receiver Addresses		Delay (secs)
Disabled	Critical			0
Disabled	Warning			0
Disabled	Information			0
Disabled				0
Disabled				0

Test All

Save

**Figure 7.16**

The **Setup/SNMP Rec's** page is used to set up the community receivers. The IP address, community string and access permissions are specified here for up to ten Network Management Stations. Any machine which will be required to receive SNMP traps sent from this unit must be entered here. **This page will change be changed if entries are made on the Event Notification page.**

Receive traps Enabled setting allows the specified NMS to receive the units standard range of traps. The Test All function will allow the user to test the setup.

## 7.17 Event Notification/Event Notification

**MITSUBISHI ELECTRIC**  
Mitsubishi Power Products, Inc.  
DiamondLink NetCom

Logged In: admin ( Administrator )  
System Name: UPS netcom testing  
Logout

**Setup** | **UPS**

UPS / Event Notifications UPS Name: UPS in the cube

Event Notification configuration parameters are set here. Click headings to configure categories.

[Critical](#) [Warning](#) [Information](#)

[E-Mail](#)

[SNMP](#)

[Configure Event Text](#)


Category	Name	Severity
User Defined 1		Critical
User Defined 2		Warning

[Undo All](#) [Save](#)

**Figure 7.17**

The **UPS/Event Notifications** screen can be customized by the user in several ways. The user can build their own categories in the **User Defined 1** and **User Defined 2** fields. Once a name/group is entered in the selected user define field and the page is saved the name/group will populate next to the information box.

When a name/group is selected the user will be directed to figure 7.18.

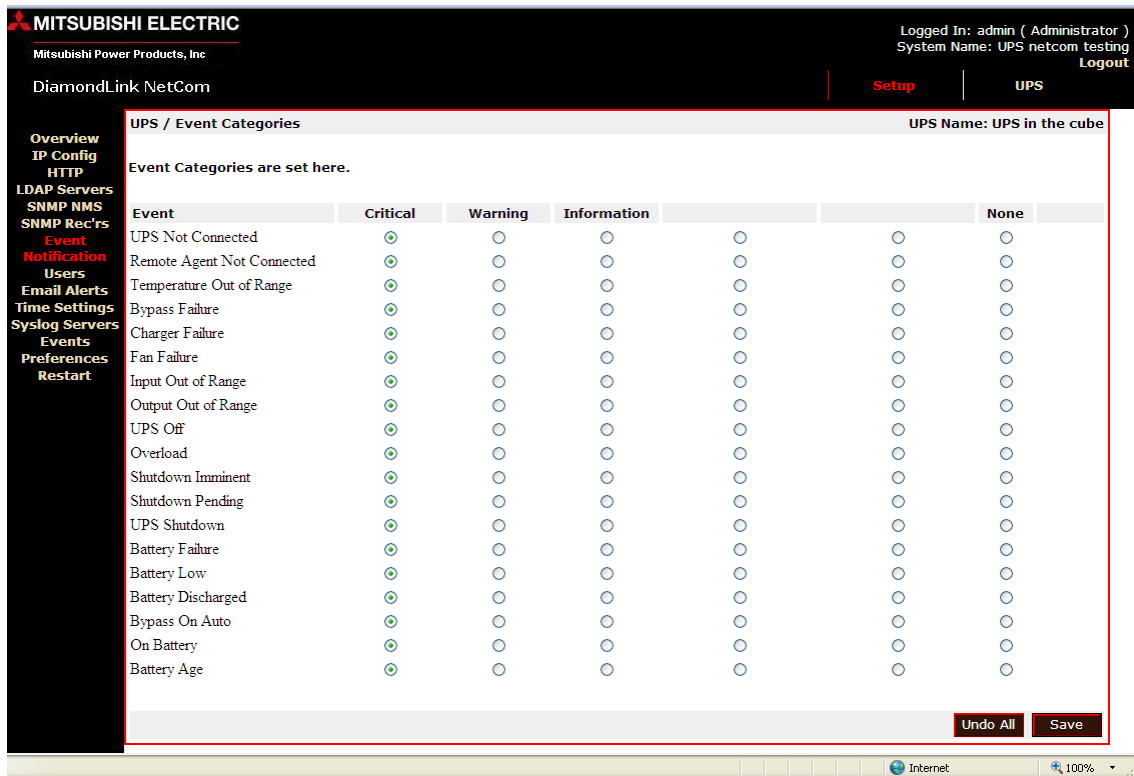

**Figure 7.18**

In this screen the user can assign event codes to one group by selecting the radio buttons. An event can only be assigned to one group, if the **None** is selected the alarm will not be sent out to any group. After assigning an event to a group click the save button.

If the word **E-mail** is selected the user will be directed to the Setup Email Alerts page displayed in figure 7.19.

**MITSUBISHI ELECTRIC**  
Mitsubishi Power Products, Inc.  
DiamondLink NetCom

Logged In: admin ( Administrator )  
System Name: UPS netcom testing  
Logout

Setup | UPS

**Setup / Email Alerts**

SMTP Relay Server: 10.228.86.31

From Address: upstest@meppi.com

Reply-To Address: ups.test@meppi.com

Enable	Event Cat.	E-mail Recipient Addresses	Delay (secs)
<input checked="" type="checkbox"/>	Critical		2
<input checked="" type="checkbox"/>	Warning		2
<input checked="" type="checkbox"/>	Information		2
<input checked="" type="checkbox"/>			2
<input checked="" type="checkbox"/>			2

Test All Save

**Figure 7.19**

In this screen the user can enter the email addresses of the individual/groups emails. Any changes made to this screen will affect the **Email Alerts** and **SNMP (receivers)** pages. The SMTP server address must be entered and the Enable check box must be selected for e-mails. The delay timer will start when an e-mail able event occurs; if the event clears before the timer expires an email will NOT be sent.

The **Test All** button on the bottom right will send a test email to all email addresses added to the screen.

When the user selects the word **SNMP** they will be directed to figure 7.20.



**MITSUBISHI ELECTRIC**  
Mitsubishi Power Products, Inc.  
DiamondLink NetCom

Logged In: admin ( Administrator )  
System Name: UPS netcom testing  
Logout

Overview  
IP Config  
HTTP  
LDAP Servers  
SNMP NMS  
SNMP Rec's  
**Event Notification**  
Users  
Email Alerts  
Time Settings  
Syslog Servers  
Events  
Preferences  
Restart

Setup / SNMP (Receivers)

Trap Community String:

Enabled	Event Cat.	Trap Receiver Addresses		Delay (secs)
Disabled	Critical			0
Disabled	Warning			0
Disabled	Information			0
Disabled				0
Disabled				0

Test All
Save

**Figure 7.20**

In figure 7.20 the user has the ability to input 10 trap receivers per event category. The trap community string must be entered for messages to be transmitted. The categories are selected in figure one of this section and an event can only be used in one category. After all receivers are entered, enabled and saved a test call can be made by selecting the **Test All** button. The delay timer will start when an e-mail able event occurs; if the event clears before the timer expires an email will NOT be sent.

When the user selects the word **Configure Event Text** they will be directed to figure 7.21.



## 7.19 Users/Setup/Users

**MITSUBISHI ELECTRIC**  
Mitsubishi Power Products, Inc.

Logged In: admin ( Administrator )  
System Name: UPS netcom testing  
Logout

DiamondLink NetCom

Setup | UPS

Setup / Users

Administrator: Configuration settings can be viewed and modified.  
Controller and Viewer: Configuration settings can only be viewed.

	Username:	Password:	Level:
User 1	admin		Administrator
User 2			Administrator
User 3			Administrator
User 4			Administrator
User 5			Administrator
User 6			Administrator
User 7			Administrator
User 8			Administrator
User 9			Administrator
User 10			Administrator
User 11			Administrator
User 12			Administrator
User 13			Administrator
User 14			Administrator
User 15			Administrator
User 16			Administrator
User 17			Administrator
User 18			Administrator
User 19			Administrator
User 20			Administrator

Save

**Figure 7.22**

The Netcom has three security levels that can be selected; Administrator, controller, and viewer.

Administrator allows the user full access to the Netcom and the ability to make changes and send test emails and shutdowns.

Controller and Viewer allow the user to view the information only.

## 7.20 Email Alerts/ Setup/ Email Alerts

**MITSUBISHI ELECTRIC**  
Mitsubishi Power Products, Inc.  
DiamondLink NetCom

Logged In: admin ( Administrator )  
System Name: UPS netcom testing  
Logout

Setup | UPS

**Setup / Email Alerts**

SMTP Relay Server: 10.228.86.31

From Address: upstest@meppi.com

Reply-To Address: ups.test@meppi.com

Enable	Event Cat.	E-mail Recipient Addresses	Delay (secs)
<input checked="" type="checkbox"/>	Critical		2
<input checked="" type="checkbox"/>	Warning		2
<input checked="" type="checkbox"/>	Information		2
<input checked="" type="checkbox"/>			2
<input checked="" type="checkbox"/>			2

Test All Save

**Figure 7.23**

In this screen the user can enter the email addresses of the individual/groups emails. Any changes made to this screen will affect the **Email Alerts** and **SNMP (receivers)** pages. The SMTP server address must be entered and the Enable check box must be selected for e-mails. The delay timer will start when an e-mail able event occurs; if the event clears before the timer expires an email will NOT be sent.

The **Test All** button on the bottom right will send a test email to all email addresses added to the screen.

## 7.21 Time Setting/ Setup/ Time Settings

**MITSUBISHI ELECTRIC**  
Mitsubishi Power Products, Inc.  
DiamondLink NetCom

Logged In: admin ( Administrator )  
System Name: UPS netcom testing  
Logout

Setup | UPS

**Setup / Time Settings**

Overview  
IP Config  
HTTP  
LDAP Servers  
SNMP NMS  
SNMP Rec'rs  
Event  
Notification  
Users  
Email Alerts  
**Time Settings**  
Syslog Servers  
Events  
Preferences  
Restart

Date: 24 May 2013  
Local Time: 14 : 19 : 34 ☐ Update time

**Time Adjustments**

Timezone: (GMT-06:00) Central Time  
Daylight Saving: ☐ Enabled  
Start the 4th Sunday in March  
Stop the 4th Sunday in October  
Date Format: mm/dd/yyyy

**NTP Servers**

Primary Server: 0.0.0.0 ☐ Enabled  
Secondary Server: 0.0.0.0 ☐ Enabled  
NTP Update Freq.: 1 Hours

Save

**Figure 7.24**

This screen is used to set the time and date.

## 7.22 Syslog Servers/ Setup/ Syslog Servers

The screenshot shows the 'Setup / Syslog Servers' configuration page in the Mitsubishi Electric NetCom interface. The page is titled 'Setup / Syslog Servers' and is part of the 'DiamondLink NetCom' system. The user is logged in as 'admin (Administrator)' with the system name 'UPS netcom testing'. The page is divided into a left sidebar with navigation links and a main content area for configuration.

**MITSUBISHI ELECTRIC**  
Mitsubishi Power Products, Inc.  
DiamondLink NetCom

Logged In: admin ( Administrator )  
System Name: UPS netcom testing  
Logout

Setup | UPS

**Setup / Syslog Servers**

Overview  
IP Config  
HTTP  
LDAP Servers  
SNMP NMS  
SNMP Rec's  
Event Notification  
Users  
Email Alerts  
Time Settings  
**Syslog Servers**  
Events  
Preferences  
Restart

Enabled:

**Primary Syslog Server**

Display Name:

IP Address:

Port:

Log Event Types: ☐ System ☐ Network ☐ Input Config ☐ Logging  
☐ Service

**Secondary Syslog Server**

Display Name:

IP Address:

Port:

Log Event Types: ☐ System ☐ Network ☐ Input Config ☐ Logging  
☐ Service

**Figure 7.25**

The Syslog Servers it not currently used in the Netcom2 and is not currently supported by Mitsubishi.

## 7.23 Events/ View/ Events

**MITSUBISHI ELECTRIC**  
Mitsubishi Power Products, Inc.

DiamondLink NetCom

Logged In: admin ( Administrator )  
System Name: UPS netcom testing  
Logout

Setup | UPS

**View / Events**

View Events: 2013 May Latest First Earliest First [Show] [Prev] [Next]

Date / Time	Type	User	Event Data
May 28 07:00:12	User Login.	User:admin	
May 26 07:32:36	User Login.	User:admin	
May 26 07:30:12	Unit Reset Event.	User:System	Watchdog
May 26 07:13:34	Application Image Updated.	User:System	
May 25 13:00:47	UPS Alarm	User:System	Event id: 1000000E, UPS Communications Restored
May 25 12:59:57	UPS Alarm	User:System	Event id: 10000000, UPS Communications Lost
May 25 12:58:39	UPS Alarm	User:System	Event id: 80000012, On Battery : Removed
May 25 12:58:32	UPS Alarm	User:System	Event id: 80000001, Awaiting Power : Removed
May 25 12:58:31	UPS Alarm	User:System	Event id: 80000006, Input Bad : Removed
May 25 12:58:12	UPS Alarm	User:System	Event id: 80000001, Awaiting Power
May 25 12:58:11	UPS Alarm	User:System	Event id: 80000006, Input Bad
May 25 12:58:09	UPS Alarm	User:System	Event id: 80000012, On Battery
May 25 12:56:57	UPS Alarm	User:System	Event id: 1000000E, UPS Communications Restored
May 25 12:53:57	UPS Alarm	User:System	Event id: 10000000, UPS Communications Lost
May 25 12:51:17	UPS Alarm	User:System	Event id: 1000000E, UPS Communications Restored
May 25 12:48:28	UPS Alarm	User:System	Event id: 10000000, UPS Communications Lost
May 25 12:47:45	Change email configuration.	User:admin	E-mail Entry: 0, Repetition Time: 0
May 25 12:46:39	UPS Alarm	User:System	Event id: 80000012, On Battery : Removed
May 25 12:46:34	UPS Alarm	User:System	Event id: 80000001, Awaiting Power : Removed
May 25 12:46:31	UPS Alarm	User:System	Event id: 80000006, Input Bad : Removed

Clear

**Figure 7.26**

In the events page the user can view the past UPS events that were recorded by the Netcom. The user has the ability to view a specific month in a year by using the drop down boxes.

## 7.24 Preferences/ Preferences Page

The screenshot displays the 'Setup / Preferences' configuration page of the Mitsubishi Electric DiamondLink NetCom interface. The top header includes the Mitsubishi Electric logo, the text 'Mitsubishi Power Products, Inc.', and 'DiamondLink NetCom'. On the right, it shows the user is logged in as 'admin ( Administrator )' for 'System Name: 7011 Test', with a 'Logout' link. Below the header, there are two tabs: 'Setup' (active) and 'UPS'. The left sidebar contains a list of menu items: Overview, IP Config, HTTP, LDAP Servers, SNMP NMS, SNMP Rec's, Users, Email Alerts, Time Settings, Syslog Servers, Events, Preferences (highlighted in red), and Restart. The main content area is titled 'Setup / Preferences' and contains the following settings:

- Default Page:** A dropdown menu set to 'Network -> Overview'.
- Timestamp Traps:** A dropdown menu set to 'None'.
- User Session Timeout:** A text input field with '5' and a 'Minutes' label.
- Temperature Scale:** A dropdown menu set to 'Celsius'.

A 'Save' button is located at the bottom right of the configuration area. The browser's address bar at the bottom shows 'Internet' and a 100% zoom level.


**Figure 7.27**

The **Setup/Preferences** page is used to set the default page of the Netcom. This page allows the user to set the page that will be displayed after the initial log in session. The default page and user session timeout options are set using the drop down box.

***The temperature scale option is a function not used by the UPS.***



## 7.25 Restart/Restart Page

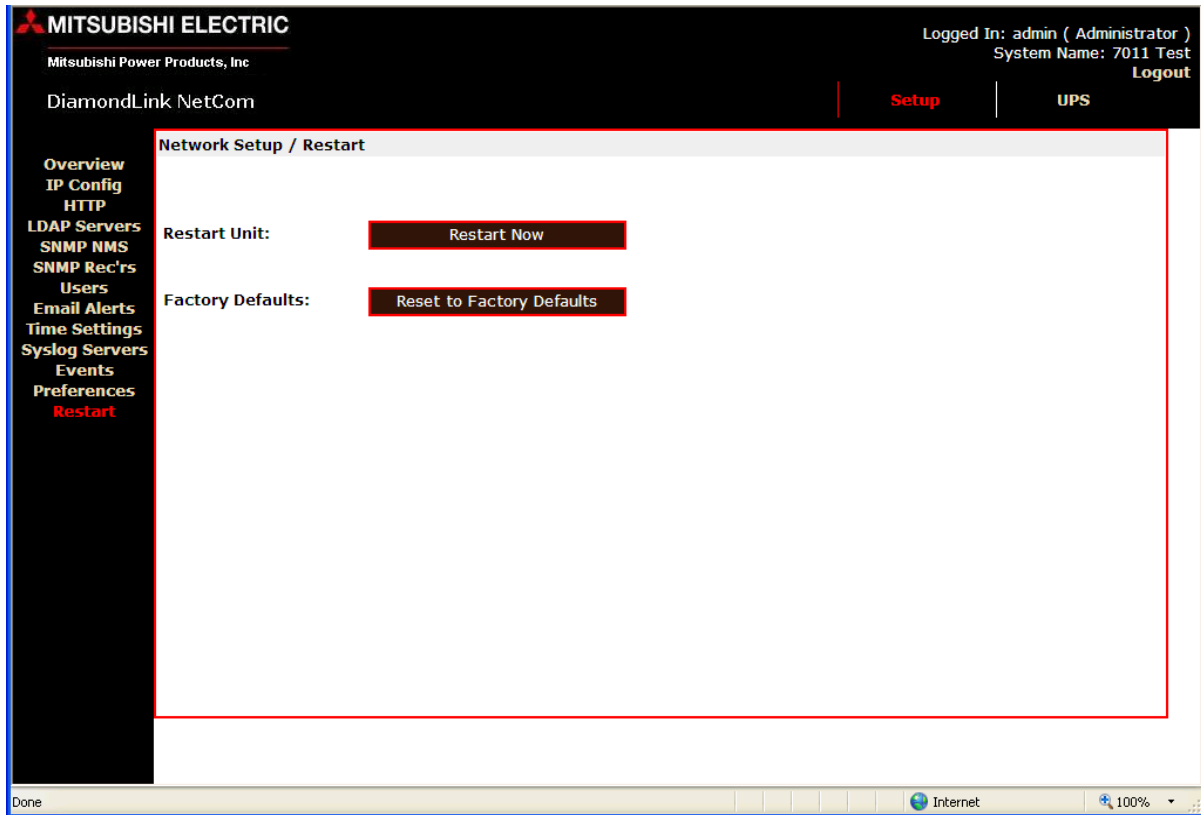

**Figure 7.28**

The restart function will reset the unit's runtime and will restart the Netcom. The *reset to factory defaults* will reset many of the Netcom's setting, if this option must be performed record all values. The IP address will have to be reset when resetting to factory defaults, but the Netcom will allow access one time after the reset to set the IP information.

## APPENDIX A RJ45 to DB9 pin out


Appendix A: RJ45 to DE9 connection

### RS232 Wiring Connections: Netcom-2 to PC Com Port.

<b>Netcom-2</b>				<b>PC</b>
<b>RJ45</b>				<b>D sub</b>
Ground	<b>1</b>	< ----- >	<b>5</b>	
RS232 RxD (i/p)	<b>2</b>	< -----	<b>3</b>	TxD (o/p) RS232
Do Not Connect	<b>3</b>			
Do Not Connect	<b>4</b>			
Do Not Connect	<b>5</b>			
Do Not Connect	<b>6</b>			
RS232 TxD (o/p)	<b>7</b>	----- >	<b>2</b>	RxD (i/p) RS232
Ground	<b>8</b>	< ----- >	<b>5</b>	


## APPENDIX B 9700 and 2033A connection

9700 and 2033A Netcom 2 connections

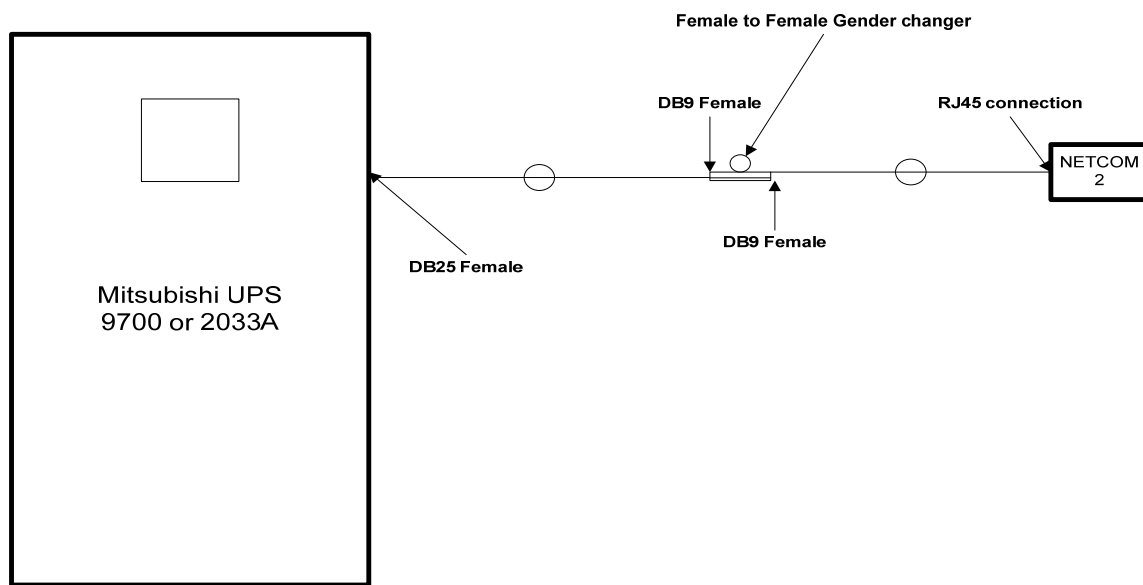

# APPENDIX C SEC connections

9800, 9900, 2033G,  
2033C, 2033D, and 7011  
Netcom 2 connections

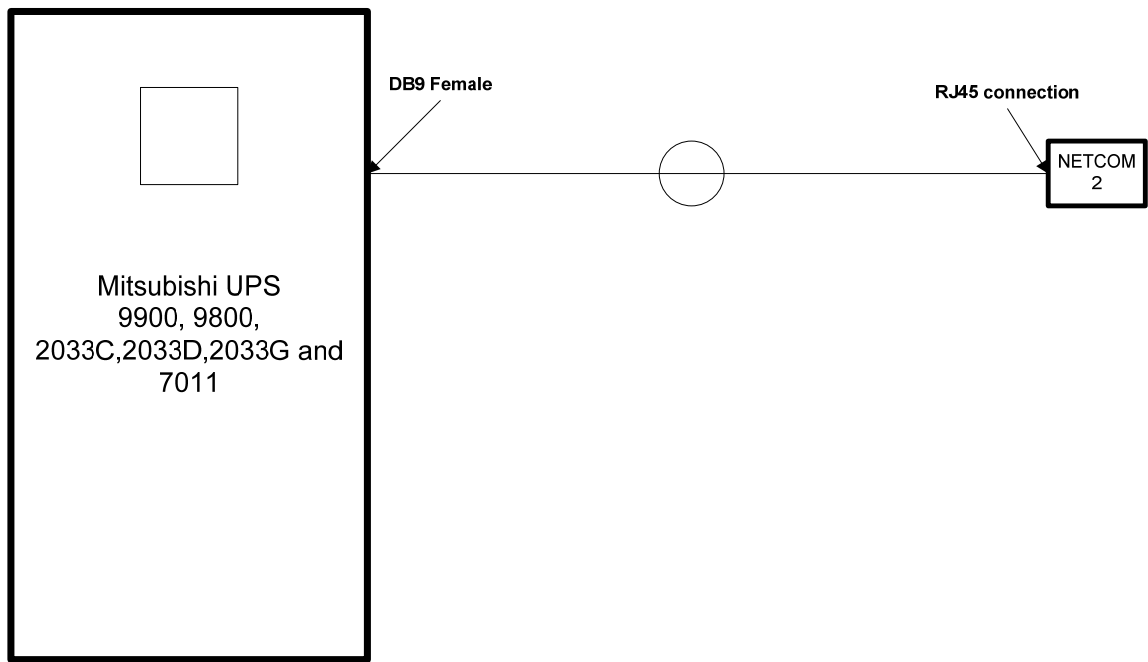

## APPENDIX D MIBS

### Appendix B: MIB file

```
-- Mitsubishi.mib - MIB file for Mitsubishi UPSs

UPS-MIB DEFINITIONS ::= BEGIN

IMPORTS
    TRAP-TYPE
        FROM RFC-1215
    DisplayString
        FROM RFC1213-MIB
    OBJECT-TYPE
        FROM RFC-1212
    Gauge, Counter, TimeTicks, mgmt
        FROM RFC1155-SMI
    ;

PositiveInteger      ::= INTEGER
NonNegativeInteger   ::= INTEGER
TimeStamp            ::= TimeTicks
TimeInterval         ::= INTEGER (0..2147483647)
TestAndIncr          ::= INTEGER (0..2147483647)
AutonomousType       ::= DisplayString

Tag                  OBJECT IDENTIFIER ::= { enterprises 13891 }
MitsubishiUPS        OBJECT IDENTIFIER ::= { Tag 101 }

upsIdent OBJECT IDENTIFIER ::= { MitsubishiUPS 1 }

upsIdentManufacturer OBJECT-TYPE
    SYNTAX  DisplayString
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The name of the UPS manufacturer."
    ::= { upsIdent 1 }

upsIdentModel OBJECT-TYPE
    SYNTAX  DisplayString
    ACCESS  read-only
    STATUS  mandatory
```

```

DESCRIPTION
    "The UPS Model designation."
::= { upsIdent 2 }

upsIdentUPSSoftwareVersion OBJECT-TYPE
    SYNTAX  DisplayString
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The UPS firmware/software version(s).  This variable
        may or may not have the same value as
        upsIdentAgentSoftwareVersion in some implementations."
    ::= { upsIdent 3 }

upsIdentAgentSoftwareVersion OBJECT-TYPE
    SYNTAX  DisplayString
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The UPS agent software version.  This variable may or may
        not have the same value as upsIdentUPSSoftwareVersion in
        some implementations."
    ::= { upsIdent 4 }

upsIdentName OBJECT-TYPE
    SYNTAX  DisplayString
    ACCESS  read-write
    STATUS  mandatory
    DESCRIPTION
        "A string identifying the UPS.  This object should be
        set by the administrator."
    ::= { upsIdent 5 }

upsIdentAttachedDevices OBJECT-TYPE
    SYNTAX  DisplayString
    ACCESS  read-write
    STATUS  mandatory
    DESCRIPTION
        "A string identifying the devices attached to the output
        of the UPS.  This object should be set by the
        administrator."
    ::= { upsIdent 6 }

upsBattery OBJECT IDENTIFIER ::= { MitsubishiUPS 2 }

upsBatteryStatus OBJECT-TYPE
    SYNTAX  INTEGER
    {
        unknown(1),
        batteryNormal(2),
        batteryLow(3),
        batteryDepleted(4)
    }
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION

```

batteries. "The indication of the capacity remaining in the UPS  
 condition. A value of batteryNormal indicates a normal battery  
 time A value of batteryLow indicates the remaining battery run-  
 time. will not maintain the output load for an extended period of  
 unable A value of batteryDepleted indicates that the UPS will be  
 is lost." to sustain the present load when and if the utility power  
 ::= { upsBattery 1 }

upsSecondsOnBattery OBJECT-TYPE  
 SYNTAX NonNegativeInteger -- UNITS seconds  
 ACCESS read-only  
 STATUS mandatory  
 DESCRIPTION  
 seconds "If the unit is on battery power, the elapsed time in  
 since since the UPS last switched to battery power, or the time  
 is less. the network management system was last restarted, whichever  
 power." Zero shall be returned if the unit is not on battery  
 ::= { upsBattery 2 }

upsEstimatedMinutesRemaining OBJECT-TYPE  
 SYNTAX PositiveInteger -- UNITS minutes  
 ACCESS read-only  
 STATUS mandatory  
 DESCRIPTION  
 depleted "An estimate of the time in minutes until the battery is  
 off and under the present load conditions if the utility power is  
 remains off, or if it were to be lost and remain off."  
 ::= { upsBattery 3 }

upsEstimatedChargeRemaining OBJECT-TYPE  
 SYNTAX INTEGER -- UNITS percent  
 ACCESS read-only  
 STATUS mandatory  
 DESCRIPTION  
 "An estimate of the battery charge remaining expressed as a  
 percent of full charge."  
 ::= { upsBattery 4 }

upsBatteryVoltage OBJECT-TYPE  
 SYNTAX NonNegativeInteger -- UNITS 0.1 Volt DC  
 ACCESS read-only  
 STATUS mandatory  
 DESCRIPTION  
 "The magnitude of the present battery voltage (0.1 Volt  
 DC). "

```

::= { upsBattery 5 }

upsBatteryCurrent OBJECT-TYPE
    SYNTAX  INTEGER (-2147483648..2147483647)    -- UNITS 0.1 Amp DC
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The present battery current (0.1 Amp DC)."
```

```

::= { upsBattery 6 }

upsBatteryTemperature OBJECT-TYPE
    SYNTAX  INTEGER (-2147483648..2147483647)    -- UNITS degrees
Centigrade
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The ambient temperature at or near the UPS Battery casing
(degrees Centigrade)."
```

```

::= { upsBattery 7 }

upsInput OBJECT IDENTIFIER ::= { MitsubishiUPS 3 }

upsInputLineBads OBJECT-TYPE
    SYNTAX  Counter
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "A count of the number of times the input entered an
out-of-tolerance condition as defined by the manufacturer.
This count is incremented by one each time the input
transitions from zero out-of-tolerance lines to one or more
input lines out-of-tolerance."
```

```

::= { upsInput 1 }

upsInputNumLines OBJECT-TYPE
    SYNTAX  NonNegativeInteger
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The number of input lines utilized in this device. This
variable indicates the number of rows in the input table."
```

```

::= { upsInput 2 }

upsInputTable OBJECT-TYPE
    SYNTAX  SEQUENCE OF UpsInputEntry
    ACCESS  not-accessible
    STATUS  mandatory
    DESCRIPTION
        "A list of input table entries. The number of entries
is given by the value of upsInputNumLines."
```

```

::= { upsInput 3 }

upsInputEntry OBJECT-TYPE
    SYNTAX  UpsInputEntry
    ACCESS  not-accessible
    STATUS  mandatory
    DESCRIPTION

```



```

        "An entry containing information applicable to a
        particular input line."
INDEX    { upsInputLineIndex }
::= { upsInputTable 1 }

UpsInputEntry ::=
SEQUENCE
{
    upsInputLineIndex PositiveInteger,
    upsInputFrequency NonNegativeInteger,
    upsInputVoltage    NonNegativeInteger,
    upsInputCurrent    NonNegativeInteger,
    upsInputTruePower  NonNegativeInteger
}

upsInputLineIndex OBJECT-TYPE
SYNTAX PositiveInteger
ACCESS read-only
STATUS mandatory
DESCRIPTION
    "The input line identifier."
::= { upsInputEntry 1 }

upsInputFrequency OBJECT-TYPE
SYNTAX NonNegativeInteger -- UNITS 0.1 Hertz
ACCESS read-only
STATUS mandatory
DESCRIPTION
    "The present input frequency (0.1 Hertz)."
::= { upsInputEntry 2 }

upsInputVoltage OBJECT-TYPE
SYNTAX NonNegativeInteger -- UNITS 0.1 RMS Volt
ACCESS read-only
STATUS mandatory
DESCRIPTION
    "The magnitude of the present input voltage (0.1 RMS Volt)."
::= { upsInputEntry 3 }

upsInputCurrent OBJECT-TYPE
SYNTAX NonNegativeInteger -- UNITS 0.1 RMS Amp
ACCESS read-only
STATUS mandatory
DESCRIPTION
    "The magnitude of the present input current (0.1 RMS Amp)."
::= { upsInputEntry 4 }

upsInputTruePower OBJECT-TYPE
SYNTAX NonNegativeInteger -- UNITS Watts
ACCESS read-only
STATUS mandatory
DESCRIPTION
    "The magnitude of the present input true power (watts)."
::= { upsInputEntry 5 }

upsOutput OBJECT IDENTIFIER ::= { MitsubishiUPS 4 }

```

```

upsOutputSource OBJECT-TYPE
    SYNTAX  INTEGER
    {
        other(1),
        none(2),
        normal(3),
        bypass(4),
        battery(5),
        booster(6),
        reducer(7)
    }
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The present source of output power.  A value of none (2)
indicates
        there is no source of output power (and therefore no output
power),
        for example, the system has opened the output breaker."
    ::= { upsOutput 1 }

upsOutputFrequency OBJECT-TYPE
    SYNTAX  NonNegativeInteger  -- UNITS 0.1 Hertz
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The present output frequency (0.1 Hertz).".
    ::= { upsOutput 2 }

upsOutputNumLines OBJECT-TYPE
    SYNTAX  NonNegativeInteger
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The number of output lines utilized in this device.  This
variable indicates the number of rows in the output table."
    ::= { upsOutput 3 }

upsOutputTable OBJECT-TYPE
    SYNTAX  SEQUENCE OF UpsOutputEntry
    ACCESS  not-accessible
    STATUS  mandatory
    DESCRIPTION
        "A list of output table entries.  The number of
entries is given by the value of upsOutputNumLines."
    ::= { upsOutput 4 }

upsOutputEntry OBJECT-TYPE
    SYNTAX  UpsOutputEntry
    ACCESS  not-accessible
    STATUS  mandatory
    DESCRIPTION
        "An entry containing information applicable to a
particular output line."
    INDEX  { upsOutputLineIndex }
    ::= { upsOutputTable 1 }

```

```

UpsOutputEntry ::=
    SEQUENCE
    {
        upsOutputLineIndex      PositiveInteger,
        upsOutputVoltage        NonNegativeInteger,
        upsOutputCurrent        NonNegativeInteger,
        upsOutputPower          NonNegativeInteger,
        upsOutputPercentLoad    INTEGER
    }

upsOutputLineIndex OBJECT-TYPE
    SYNTAX  PositiveInteger
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The output line identifier."
    ::= { upsOutputEntry 1 }

upsOutputVoltage OBJECT-TYPE
    SYNTAX  NonNegativeInteger  -- UNITS 0.1 RMS Volts
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The present output voltage (0.1 RMS Volt)."
    ::= { upsOutputEntry 2 }

upsOutputCurrent OBJECT-TYPE
    SYNTAX  NonNegativeInteger  -- UNITS 0.1 RMS Amp
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The present output current (0.1 RMS Amp)."
    ::= { upsOutputEntry 3 }

upsOutputPower OBJECT-TYPE
    SYNTAX  NonNegativeInteger  -- UNITS Watts
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The present output true power (watts)."
    ::= { upsOutputEntry 4 }

upsOutputPercentLoad OBJECT-TYPE
    SYNTAX  INTEGER  -- UNITS percent
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The percentage of the UPS power capacity presently being
        used on this output line (the greater of the percent load
        of true power capacity and the percent load of VA."
    ::= { upsOutputEntry 5 }

upsBypass OBJECT IDENTIFIER ::= { MitsubishiUPS 5 }

upsBypassFrequency OBJECT-TYPE
    SYNTAX  NonNegativeInteger  -- UNITS 0.1 Hertz
    ACCESS  read-only

```

```

STATUS    mandatory
DESCRIPTION
    "The present bypass frequency."
::= { upsBypass 1 }

upsBypassNumLines OBJECT-TYPE
    SYNTAX  NonNegativeInteger
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The number of bypass lines utilized in this device.  This
        entry indicates the number of rows in the bypass table."
    ::= { upsBypass 2 }

upsBypassTable OBJECT-TYPE
    SYNTAX  SEQUENCE OF UpsBypassEntry
    ACCESS  not-accessible
    STATUS  mandatory
    DESCRIPTION
        "A list of bypass table entries.  The number of entries
        is given by the value of upsBypassNumLines."
    ::= { upsBypass 3 }

upsBypassEntry OBJECT-TYPE
    SYNTAX  UpsBypassEntry
    ACCESS  not-accessible
    STATUS  mandatory
    DESCRIPTION
        "An entry containing information applicable to a
        particular bypass input."
    INDEX   { upsBypassLineIndex }
    ::= { upsBypassTable 1 }

UpsBypassEntry ::=
    SEQUENCE
    {
        upsBypassLineIndex      PositiveInteger,
        upsBypassVoltage        NonNegativeInteger,
        upsBypassCurrent        NonNegativeInteger,
        upsBypassPower          NonNegativeInteger
    }

upsBypassLineIndex OBJECT-TYPE
    SYNTAX  PositiveInteger
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The bypass line identifier."
    ::= { upsBypassEntry 1 }

upsBypassVoltage OBJECT-TYPE
    SYNTAX  NonNegativeInteger  -- UNITS 0.1 RMS Volts
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The present bypass voltage (0.1 RMS Volt)."
    ::= { upsBypassEntry 2 }

```

```

upsBypassCurrent OBJECT-TYPE
    SYNTAX  NonNegativeInteger  -- UNITS 0.1 RMS Amp
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The present bypass current (0.1 RMS Amp)."
```

::= { upsBypassEntry 3 }

```

upsBypassPower OBJECT-TYPE
    SYNTAX  NonNegativeInteger  -- UNITS Watts
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The present true power conveyed by the bypass (watts)."
```

::= { upsBypassEntry 4 }

```

upsAlarm OBJECT IDENTIFIER ::= { MitsubishiUPS 6 }
```

```

upsAlarmsPresent OBJECT-TYPE
    SYNTAX  Gauge
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The present number of active alarm conditions."
```

::= { upsAlarm 1 }

```

upsAlarmTable OBJECT-TYPE
    SYNTAX  SEQUENCE OF UpsAlarmEntry
    ACCESS  not-accessible
    STATUS  mandatory
    DESCRIPTION
        "A list of alarm table entries. Alarms are named by
        an OBJECT IDENTIFIER, upsAlarmDescr, to allow a single
        table to reflect well known alarms plus alarms defined
        by a particular implementation, i.e., as documented in
        the private enterprise MIB definition for the device.
        No two rows will have the same value of upsAlarmDescr,
        since alarms define conditions. In order to meet this
        requirement, care should be taken in the definition of
        alarm conditions to insure that a system cannot enter
        the same condition multiple times simultaneously.

        The number of rows in the table at any given time is
        reflected by the value of upsAlarmsPresent."
```

::= { upsAlarm 2 }

```

upsAlarmEntry OBJECT-TYPE
    SYNTAX  UpsAlarmEntry
    ACCESS  not-accessible
    STATUS  mandatory
    DESCRIPTION
        "An entry containing information applicable to a
        particular alarm."
```

INDEX { upsAlarmId }

::= { upsAlarmTable 1 }

```

UpsAlarmEntry ::=
    SEQUENCE
    {
        upsAlarmId          PositiveInteger,
        upsAlarmDescr       AutonomousType,
        upsAlarmTime         TimeStamp
    }

upsAlarmId OBJECT-TYPE
    SYNTAX PositiveInteger
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "A unique identifier for an alarm condition. This
        value must remain constant."
    ::= { upsAlarmEntry 1 }

upsAlarmDescr OBJECT-TYPE
    SYNTAX AutonomousType
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "A reference to an alarm description object. The object
        referenced should not be accessible, but rather be used
        to provide a unique description of the alarm condition."
    ::= { upsAlarmEntry 2 }

upsAlarmTime OBJECT-TYPE
    SYNTAX TimeStamp
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The value of sysUpTime when the alarm condition was
        detected. If the alarm condition was detected at the
        time of agent startup and presumably existed before
        agent startup, the value of upsAlarmTime shall equal 0."
    ::= { upsAlarmEntry 3 }

upsAlarmID OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "A unique identifier for an alarm condition. This
        value must remain constant."
    ::= { upsAlarm 4 }

upsAlarmDESCR OBJECT-TYPE
    SYNTAX DisplayString (SIZE(0..63))
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "A reference to an alarm description object. The object
        references should not be accessible, but rather be used
        to provide a unique description of the alarm condition."
    ::= { upsAlarm 5 }

```

```

upsWellKnownAlarms OBJECT IDENTIFIER ::= { upsAlarm 3 }

upsAlarmBatteryBad OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "One or more batteries have been determined to require
        replacement."
    ::= { upsWellKnownAlarms 1 }

upsAlarmOnBattery OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The UPS is drawing power from the batteries."
    ::= { upsWellKnownAlarms 2 }

upsAlarmLowBattery OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The remaining battery run-time is less than or equal
        to upsConfigLowBattTime."
    ::= { upsWellKnownAlarms 3 }

upsAlarmDepletedBattery OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The UPS will be unable to sustain the present load
        when and if the utility power is lost."
    ::= { upsWellKnownAlarms 4 }

upsAlarmTempBad OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "A temperature is out of tolerance."
    ::= { upsWellKnownAlarms 5 }

upsAlarmInputBad OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "An input condition is out of tolerance."
    ::= { upsWellKnownAlarms 6 }

upsAlarmOutputBad OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory

```

```

        DESCRIPTION
            "An output condition (other than OutputOverload) is
            out of tolerance."
        ::= { upsWellKnownAlarms 7 }

upsAlarmOutputOverload OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The output load exceeds the UPS output capacity."
    ::= { upsWellKnownAlarms 8 }

upsAlarmOnBypass OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The Bypass is presently engaged on the UPS."
    ::= { upsWellKnownAlarms 9 }

upsAlarmBypassBad OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The Bypass is out of tolerance."
    ::= { upsWellKnownAlarms 10 }

upsAlarmOutputOffAsRequested OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The UPS has shut down as requested, i.e., the output
        is off."
    ::= { upsWellKnownAlarms 11 }

upsAlarmUpsOffAsRequested OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The entire UPS has shutdown as commanded."
    ::= { upsWellKnownAlarms 12 }

upsAlarmChargerFailed OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "An uncorrected problem has been detected within the
        UPS charger subsystem."
    ::= { upsWellKnownAlarms 13 }

upsAlarmUpsOutputOff OBJECT-TYPE
    SYNTAX INTEGER

```



```

ACCESS read-only
STATUS mandatory
DESCRIPTION
    "The output of the UPS is in the off state."
::= { upsWellKnownAlarms 14 }

upsAlarmUpsSystemOff OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The UPS system is in the off state."
    ::= { upsWellKnownAlarms 15 }

upsAlarmFanFailure OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The failure of one or more fans in the UPS has been
        detected."
    ::= { upsWellKnownAlarms 16 }

upsAlarmFuseFailure OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The failure of one or more fuses has been detected."
    ::= { upsWellKnownAlarms 17 }

upsAlarmGeneralFault OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "A general fault in the UPS has been detected."
    ::= { upsWellKnownAlarms 18 }

upsAlarmDiagnosticTestFailed OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The result of the last diagnostic test indicates a
        failure."
    ::= { upsWellKnownAlarms 19 }

upsAlarmCommunicationsLost OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "A problem has been encountered in the
        communications between the agent and the UPS."
    ::= { upsWellKnownAlarms 20 }

```

```

upsAlarmAwaitingPower OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The UPS output is off and the UPS is awaiting the
        return of input power."
    ::= { upsWellKnownAlarms 21 }

upsAlarmShutdownPending OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "A upsShutdownAfterDelay countdown is underway."
    ::= { upsWellKnownAlarms 22 }

upsAlarmShutdownImminent OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The UPS will turn off power to the load in less than
        5 seconds; this may be either a timed shutdown or a
        low battery shutdown."
    ::= { upsWellKnownAlarms 23 }

upsAlarmTestInProgress OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "A test is in progress, as initiated and indicated by
        the Test Group. Tests initiated via other
        implementation-specific mechanisms can indicate the
        presence of the testing in the alarm table, if
        desired, via a OBJECT-TYPE macro in the MIB
        document specific to that implementation and are
        outside the scope of this OBJECT-TYPE."
    ::= { upsWellKnownAlarms 24 }

upsTest OBJECT IDENTIFIER ::= { MitsubishiUPS 7 }

upsTestId OBJECT-TYPE
    SYNTAX OBJECT IDENTIFIER
    ACCESS read-write
    STATUS mandatory
    DESCRIPTION
        "The test named by an OBJECT IDENTIFIER which
        allows a standard mechanism for the initiation of
        a test, including the well known tests identified in
        this document."
    ::= { upsTest 1 }

upsTestSpinLock OBJECT-TYPE
    SYNTAX TestAndIncr
    ACCESS read-write

```

```

STATUS    mandatory
DESCRIPTION
    "A spin lock on the test subsystem."
::= { upsTest 2 }

upsTestResultsSummary OBJECT-TYPE
    SYNTAX  INTEGER
    {
        donePass(1),
        doneWarning(2),
        doneError(3),
        aborted(4),
        inProgress(5),
        noTestsInitiated(6)
    }
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The results of the current or last UPS diagnostics
        test performed.  The values for donePass(1),
        doneWarning(2), and doneError(3) indicate that the
        test completed either successfully, with a warning, or
        with an error, respectively.  The value aborted(4) is
        returned for tests which are aborted by setting the
        value of upsTestId to upsTestAbortTestInProgress.
        Tests which have not yet concluded are indicated by
        inProgress(5).  The value noTestsInitiated(6)
        indicates that no previous test results are available,
        such as is the case when no tests have been run since
        the last reinitialization of the network management
        subsystem and the system has no provision for non-
        volatile storage of test results."
    ::= { upsTest 3 }

upsTestResultsDetail OBJECT-TYPE
    SYNTAX  DisplayString
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "Additional information about upsTestResultsSummary.
        If no additional information available, a zero length
        string is returned."
    ::= { upsTest 4 }

upsTestStartTime OBJECT-TYPE
    SYNTAX  TimeStamp
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The value of sysUpTime at the time the test in
        progress was initiated, or, if no test is in progress,
        the time the previous test was initiated.  If the
        value of upsTestResultsSummary is noTestsInitiated(6),
        upsTestStartTime has the value 0."
    ::= { upsTest 5 }

upsTestElapsedTime OBJECT-TYPE

```

```

SYNTAX TimeInterval
ACCESS read-only
STATUS mandatory
DESCRIPTION
    "The amount of time, in TimeTicks, since the test in
    progress was initiated, or, if no test is in progress,
    the previous test took to complete. If the value of
    upsTestResultsSummary is noTestsInitiated(6),
    upsTestElapsedTime has the value 0."
::= { upsTest 6 }

upsWellKnownTests OBJECT IDENTIFIER ::= { upsTest 7 }

upsTestNoTestsInitiated OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "No tests have been initiated and no test is in progress."
    ::= { upsWellKnownTests 1 }

upsTestAbortTestInProgress OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The test in progress is to be aborted / the test in
        progress was aborted."
    ::= { upsWellKnownTests 2 }

upsTestGeneralSystemsTest OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The manufacturer's standard test of UPS device systems."
    ::= { upsWellKnownTests 3 }

upsTestQuickBatteryTest OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "A test that is sufficient to determine if the battery
        needs replacement."
    ::= { upsWellKnownTests 4 }

upsTestDeepBatteryCalibration OBJECT-TYPE
    SYNTAX INTEGER
    ACCESS read-only
    STATUS mandatory
    DESCRIPTION
        "The system is placed on battery to a discharge level,
        set by the manufacturer, sufficient to determine
        battery replacement and battery run-time with a high
        degree of confidence. WARNING: this test will leave
        the battery in a low charge state and will require

```

```

        time for recharging to a level sufficient to provide
        normal battery duration for the protected load."
::= { upsWellKnownTests 5 }

upsControl OBJECT IDENTIFIER ::= { MitsubishiUPS 8 }

upsShutdownType OBJECT-TYPE
    SYNTAX  INTEGER
    {
        output(1),
        system(2)
    }
    ACCESS  read-write
    STATUS  mandatory
    DESCRIPTION
        "This object determines the nature of the action to be
        taken at the time when the countdown of the
        upsShutdownAfterDelay and upsRebootWithDuration
        objects reaches zero.

        Setting this object to output(1) indicates that
        shutdown requests should cause only the output of the
        UPS to turn off. Setting this object to system(2)
        indicates that shutdown requests will cause the entire
        UPS system to turn off."
    ::= { upsControl 1 }

upsShutdownAfterDelay OBJECT-TYPE
    SYNTAX  INTEGER      -- UNITS seconds
    ACCESS  read-write
    STATUS  mandatory
    DESCRIPTION
        "Setting this object will shutdown (i.e., turn off)
        either the UPS output or the UPS system (as determined
        by the value of upsShutdownType at the time of
        shutdown) after the indicated number of seconds, or
        less if the UPS batteries become depleted. Setting
        this object to 0 will cause the shutdown to occur
        immediately. Setting this object to -1 will abort the
        countdown. If the system is already in the desired
        state at the time the countdown reaches 0, then
        nothing will happen. That is, there is no additional
        action at that time if upsShutdownType = system and
        the system is already off. Similarly, there is no
        additional action at that time if upsShutdownType =
        output and the output is already off. When read,
        upsShutdownAfterDelay will return the number of
        seconds remaining until shutdown, or -1 if no shutdown
        countdown is in effect. On some systems, if the agent
        is restarted while a shutdown countdown is in effect,
        the countdown may be aborted. Sets to this object
        override any upsShutdownAfterDelay already in effect."
    ::= { upsControl 2 }

upsStartupAfterDelay OBJECT-TYPE
    SYNTAX  INTEGER      -- UNITS seconds
    ACCESS  read-write

```

STATUS mandatory

DESCRIPTION

"Setting this object will start the output after the indicated number of seconds, including starting the UPS, if necessary. Setting this object to 0 will cause the startup to occur immediately. Setting this object to -1 will abort the countdown. If the output is already on at the time the countdown reaches 0, then nothing will happen. Sets to this object override the effect of any upsStartupAfterDelay countdown or upsRebootWithDuration countdown in progress. When read, upsStartupAfterDelay will return the number of seconds until startup, or -1 if no startup countdown is in effect. If the countdown expires during a utility failure, the startup shall not occur until the utility power is restored. On some systems, if the agent is restarted while a startup countdown is in effect, the countdown is aborted."

::= { upsControl 3 }

upsRebootWithDuration OBJECT-TYPE

SYNTAX INTEGER -- UNITS seconds

ACCESS read-write

STATUS mandatory

DESCRIPTION

"Setting this object will immediately shutdown (i.e., turn off) either the UPS output or the UPS system (as determined by the value of upsShutdownType at the time of shutdown) for a period equal to the indicated number of seconds, after which time the output will be started, including starting the UPS, if necessary. If the number of seconds required to perform the request is greater than the requested duration, then the requested shutdown and startup cycle shall be performed in the minimum time possible, but in no case shall this require more than the requested duration plus 60 seconds. When read, upsRebootWithDuration shall return the number of seconds remaining in the countdown, or -1 if no countdown is in progress. If the startup should occur during a utility failure, the startup shall not occur until the utility power is restored."

::= { upsControl 4 }

upsAutoRestart OBJECT-TYPE

SYNTAX INTEGER

{  
    on(1),  
    off(2)  
}

ACCESS read-write

STATUS mandatory

DESCRIPTION

"Setting this object to 'on' will cause the UPS system to restart after a shutdown if the shutdown occurred during a power loss as a result of either a

```

        upsShutdownAfterDelay or an internal battery depleted
        condition. Setting this object to 'off' will prevent
        the UPS system from restarting after a shutdown until
        an operator manually or remotely explicitly restarts
        it. If the UPS is in a startup or reboot countdown,
        then the UPS will not restart until that delay has
        been satisfied."
 ::= { upsControl 5 }

upsConfig OBJECT IDENTIFIER ::= { MitsubishiUPS 9 }

upsConfigInputVoltage OBJECT-TYPE
    SYNTAX  NonNegativeInteger  -- UNITS RMS Volts
    ACCESS  read-write
    STATUS  mandatory
    DESCRIPTION
        "The magnitude of the nominal input voltage (RMS Volts).
        On those systems which support read-write access to this
        object, if there is an attempt to set this variable to
        a value that is not supported, the request must be
        rejected and the agent shall respond with an
        appropriate error message, i.e., badValue for SNMPv1,
        or inconsistentValue for SNMPv2."
 ::= { upsConfig 1 }

upsConfigInputFreq OBJECT-TYPE
    SYNTAX  NonNegativeInteger  -- UNITS 0.1 Hertz
    ACCESS  read-write
    STATUS  mandatory
    DESCRIPTION
        "The nominal input frequency (0.1 Hertz). On those systems
        which support read-write access to this object, if there is
        an attempt to set this variable to a value that is not
        supported, the request must be rejected and the agent
        shall respond with an appropriate error message, i.e.,
        badValue for SNMPv1, or inconsistentValue for SNMPv2."
 ::= { upsConfig 2 }

upsConfigOutputVoltage OBJECT-TYPE
    SYNTAX  NonNegativeInteger  -- UNITS RMS Volts
    ACCESS  read-write
    STATUS  mandatory
    DESCRIPTION
        "The magnitude of the nominal output voltage (RMS Volts).
        On those systems which support read-write access to this
        object, if there is an attempt to set this variable to
        a value that is not supported, the request must be
        rejected and the agent shall respond with an
        appropriate error message, i.e., badValue for SNMPv1,
        or inconsistentValue for SNMPv2."
 ::= { upsConfig 3 }

upsConfigOutputFreq OBJECT-TYPE
    SYNTAX  NonNegativeInteger  -- UNITS 0.1 Hertz
    ACCESS  read-write
    STATUS  mandatory
    DESCRIPTION

```

```

        "The nominal output frequency (0.1 Hertz). On those systems
        which support read-write access to this object, if there is
        an attempt to set this variable to a value that is not
        supported, the request must be rejected and the agent
        shall respond with an appropriate error message, i.e.,
        badValue for SNMPv1, or inconsistentValue for SNMPv2."
 ::= { upsConfig 4 }

upsConfigOutputVA OBJECT-TYPE
    SYNTAX  NonNegativeInteger  -- UNITS Volt-Amps
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The magnitude of the nominal Volt-Amp rating (Volt-Amps)."
```

```

 ::= { upsConfig 5 }

upsConfigOutputPower OBJECT-TYPE
    SYNTAX  NonNegativeInteger  -- UNITS Watts
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "The magnitude of the nominal true power rating (watts)."
```

```

 ::= { upsConfig 6 }

upsConfigLowBattTime OBJECT-TYPE
    SYNTAX  NonNegativeInteger  -- UNITS minutes
    ACCESS  read-write
    STATUS  mandatory
    DESCRIPTION
        "The value of upsEstimatedMinutesRemaining at which a
        lowBattery condition is declared. For agents which
        support only discrete (discontinuous) values, then the
        agent shall round up to the next supported value. If
        the requested value is larger than the largest
        supported value, then the largest supported value
        shall be selected."
```

```

 ::= { upsConfig 7 }

upsConfigAudibleStatus OBJECT-TYPE
    SYNTAX  INTEGER
    {
        disabled(1),
        enabled(2),
        muted(3)
    }
    ACCESS  read-write
    STATUS  mandatory
    DESCRIPTION
        "The requested state of the audible alarm. When in
        the disabled state, the audible alarm should never
        sound. The enabled state is self-describing. Setting
        this object to muted(3) when the audible alarm is
        sounding shall temporarily silence the alarm. It will
        remain muted until it would normally stop sounding and
        the value returned for read operations during this
        period shall equal muted(3). At the end of this
        period, the value shall revert to enabled(2). Writes
```



```

        of the value muted(3) when the audible alarm is not
        sounding shall be accepted but otherwise shall have no
        effect."
    ::= { upsConfig 8 }

upsConfigLowVoltageTransferPoint OBJECT-TYPE
    SYNTAX  NonNegativeInteger  -- UNITS RMS Volts
    ACCESS  read-write
    STATUS  mandatory
    DESCRIPTION
        "The minimum input line voltage (RMS Volts) allowed before
        the UPS system transfers to battery backup."
    ::= { upsConfig 9 }

upsConfigHighVoltageTransferPoint OBJECT-TYPE
    SYNTAX  NonNegativeInteger  -- UNITS RMS Volts
    ACCESS  read-write
    STATUS  mandatory
    DESCRIPTION
        "The maximum line voltage (RMS Volts) allowed before the UPS
        system transfers to battery backup."
    ::= { upsConfig 10 }

-- UPS trap information group
upsTrapInfo OBJECT IDENTIFIER ::= { MitsubishiUPS 10 }

trapCode OBJECT-TYPE
    SYNTAX  Unsigned32
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "A number identifying the event for that last trap that was
        sent."
    ::= { upsTrapInfo 1 }

trapDescription OBJECT-TYPE
    SYNTAX  DisplayString (SIZE (0..63))
    ACCESS  read-only
    STATUS  mandatory
    DESCRIPTION
        "A string identifying the event for that last trap that was
        sent."
    ::= { upsTrapInfo 2 }

-- UPS Traps
-- upsTraps OBJECT IDENTIFIER ::= { Tag 101 }

alarmCritical TRAP-TYPE
    ENTERPRISE MitsubishiUPS
    VARIABLES { trapCode, trapDescription }
    DESCRIPTION
        "Critical alarm."
    ::= 1

alarmWarning TRAP-TYPE
    ENTERPRISE MitsubishiUPS
    VARIABLES { trapCode, trapDescription }

```

```

        DESCRIPTION
            "Warning alarm."
        ::= 2

alarmInformation TRAP-TYPE
    ENTERPRISE MitsubishiUPS
    VARIABLES { trapCode, trapDescription }
    DESCRIPTION
        "Information alarm."
    ::= 3

upsAlarmCleared TRAP-TYPE
    ENTERPRISE MitsubishiUPS
    VARIABLES { trapCode, trapDescription }
    DESCRIPTION
        "Alarm cleared."
    ::= 4

upsTrapInitialization TRAP-TYPE
    ENTERPRISE MitsubishiUPS
    VARIABLES { upsIdentName }
    DESCRIPTION
        "This trap is sent each time a NetCom device is
initialized."
    ::= 5

END

```