

**KW9M
Eco-POWER METER
User's Manual**

Cautions for Your Safety

Read the manual carefully before installing, running and maintenance for proper operation. Before using, master the knowledge of the equipment, safety information and all of other notes.

This manual uses two safety flags to indicate different levels of danger.



WARNING

A handling error could cause serious physical injury to an operator and in the worst case could even be fatal.

- Always take precautions to ensure the overall safety of your system, so that the whole system remains safe in the event of failure of this product or other external factor.
- Do not use this product in areas with inflammable gas. It could lead to an explosion.
- Exposing this product to excessive heat or open flames could cause damage to the lithium battery or other electronic parts.
- Do not open the secondary side of CT during power on the primary side current. It might cause electric shock or CT breakdown.



CAUTION

A handling error could cause serious physical injury to an operator or damage to the equipment.

- To prevent abnormal exothermic heat or smoke generation, use this product at the values less than the maximum of the characteristics and performance that are assured in these specifications.
- Do not dismantle or remodel the product. It could lead to abnormal exothermic heat or smoke generation.
- Do not touch the terminal while turning on electricity. It could lead to an electric shock.
- Use the external devices to function the emergency stop and interlock circuit.
- Connect the wires or connectors securely. The loose connection might cause abnormal exothermic heat or smoke generation.
- Do not allow foreign matters such as liquid, flammable materials, metals to go into the inside of the product. It might cause exothermic heat or smoke generation.
- Do not undertake construction (such as connection and disconnection) while the power supply is on.
- Never remove the terminal block under applying current to load. It might cause electric shock or CT breakdown.
- Do not use at secondary side circuit of inverter. It might cause exothermic heat or damage.

Copyright and trademark

- Panasonic Industrial Devices SUNX Co., Ltd. owns the copyright of this manual.
- We stiffly refuse the reproduction of without permission from this manual.
- Modbus Protocol is a communication protocol that the Modicon Inc. developed for PLC and Modbus is the registered trademark of Schneider Electric.
- Other company names and the product names are the trademarks or registered trademarks of each company.

Introduction

Thank you very much indeed for purchasing
“KW9M Eco-POWER METER”.

In this manual, we explain the usage of “KW9M
Eco-POWER METER” in detail.

Please use it correctly after understanding the content
enough.

Table of Contents

| | |
|---------------------------------------------------------------|----|
| Cautions before using | i |
| Chapter 1 Unit's Outline | 1 |
| 1.1 Measurement outline | 1 |
| 1.2 Measurement items | 1 |
| 1.3 Logging items..... | 2 |
| Chapter 2 Parts Name and Working | 3 |
| 2.1 Parts Names | 3 |
| 2.2 Key's functions..... | 4 |
| 2.3 Indication on KW9M Eco-POWER METER..... | 5 |
| Chapter 3 Wiring..... | 6 |
| 3.1 Main unit terminal arrangement | 6 |
| 3.2 Wiring Diagrams | 7 |
| 3.3 How to attach the Current Transformer (CT)..... | 9 |
| 3.4 RS485 Communication..... | 11 |
| 3.5 Low Voltage Directive | 12 |
| Chapter 4 Settings..... | 13 |
| 4.1 Setting Flow | 15 |
| 4.2 Password entry | 16 |
| 4.3 Password initialize | 17 |
| 4.4 How to Set | 18 |
| 4.4.1 Settings for power measurement | 18 |
| 4.4.2 Settings for demand measurement | 20 |
| 4.4.3 Settings for communication | 22 |
| 4.4.4 Settings for optional functions | 24 |
| 4.4.5 Password setting | 28 |
| 4.4.6 Confirmation window | 29 |
| Chapter 5 Various Functions..... | 30 |
| 5.1 Demand function | 30 |
| 5.1.1 Block interval demand | 30 |
| 5.1.2 Current Demand | 31 |
| 5.1.3 Max. demand value | 31 |
| 5.1.4 Working at power failure and at recovery..... | 31 |
| Chapter 6 Display of each Value..... | 32 |
| 6.1 Working of Monitor display | 32 |
| 6.2 Working of Monitor Display..... | 33 |
| 6.2.1 Instantaneous power | 41 |
| 6.2.2 Instantaneous power of each phase / each circuit..... | 42 |
| 6.2.3 Total integral power..... | 42 |
| 6.2.4 Total integral export power..... | 43 |
| 6.2.5 Integral power of each phase / each circuit..... | 44 |
| 6.2.6 Integral export power of each phase / each circuit..... | 45 |
| 6.2.7 Current..... | 46 |
| 6.2.8 Voltage | 46 |
| 6.2.9 Power factor | 47 |
| 6.2.10 Frequency..... | 47 |
| 6.2.11 Current THD | 47 |
| 6.2.12 Voltage THD | 47 |
| 6.2.13 Conversion value for integral active power | 48 |
| 6.2.14 Conversion value for integral export power..... | 48 |
| 6.2.15 Temperature | 49 |
| 6.3 Working of Logging Mode..... | 50 |
| 6.3.1 Max. demand value | 50 |
| 6.4 Working of Demand Mode | 51 |
| 6.4.1 Block Interval Demand (Sliding block, fixed block)..... | 51 |

| | |
|---------------------------------------------------------------|----|
| Chapter 7 Communications..... | 53 |
| 7.1 Communication Procedures | 53 |
| 7.2 Communication timing | 53 |
| 7.3 MEWTOCOL Communication..... | 54 |
| 7.3.1 Overview of MEWTOCOL-COM (RS485) | 54 |
| 7.3.2 Data Register List..... | 55 |
| 7.3.3 Error Codes | 61 |
| 7.3.4 Command | 62 |
| 7.4 MODBUS (RTU) Communication | 64 |
| 7.4.1 Overview of MODBUS (RTU)..... | 64 |
| 7.4.2 Data Register List (MODBUS communication) | 67 |
| 7.5 DL/T645-2007 communication..... | 73 |
| 7.5.1 Overview of DL/T645-2007 | 73 |
| 7.5.2 Data list..... | 79 |
| Chapter 8 How to update the firmware | 81 |
| 8.1 How to install USB driver | 81 |
| 8.2 How to update the firmware..... | 82 |
| 8.2.1 Connect PC and Eco-POWER METER | 82 |
| 8.2.2 Prepare Eco-POWER METER to update..... | 82 |
| 8.2.3 Update the firmware using KW Version Upgrade Tool | 82 |
| Chapter 9 Specifications | 86 |
| 9.1 Main unit | 86 |
| 9.2 Input Specifications..... | 87 |
| 9.3 Communication Specifications..... | 88 |
| 9.4 Self-diagnostic function..... | 89 |
| 9.5 Power Failure Memory..... | 89 |
| Chapter 10 Mounting..... | 90 |
| 10.1 Dimensions | 90 |
| 10.1.1 Main unit..... | 90 |
| 10.2 Panel mounting | 90 |

Cautions before using

■ About this product

Eco-POWER METER is designed chiefly to manage saving energy.
It is neither nor can it be legally used for billing.

■ Installation environment

◇Do not use the Unit in the following environments.

- Where the unit will be exposed to direct sunlight and where the ambient temperature is outside the range of -25 to 55 °C.
- Where the ambient humidity is outside the range of 30 to 85 % RH (at 20°C), non-condensing and where condensation might occur by sudden temperature changes
- Where inflammable or corrosive gas might be produced
- Where the unit will be exposed to excessive airborne dust or metal particles
- Where the unit will be exposed to water, oil or chemicals
- Where organic solvents such as benzene, paint thinner, alcohol, or strong alkaline solutions such as ammonia or caustic soda might adhere to the product
- Where direct vibration or shock might be transmitted to the product, and where water might wet the product
- Where the place near high-voltage cable, high-voltage device, power line, power device.
- Where the place near a machinery with transmission function such as amateur radio.
- Where the place near a machinery which occurs the big switching surge

◇Please use the Unit according to the specifications described in this manual. Otherwise, it may malfunction or cause fire and an electric shock.

- Connect to the power supply in compliance with the rating.
- Refer to the wiring diagram to ensure proper wiring for the power supply, input and output.
- Do not perform wiring or installation with a live line. It may also lead to circuit burnout or fire by way of the secondary CT side opening.

■ Installation

- Eco-POWER METER is designed to be used in a control panel.
- The power supply terminal and voltage input terminal of the main unit is common. Therefore if additional noise effects the power supply line, incorrect measurements may result.
- Installation and wiring must be performed by expert personnel for electrical work or electric piping.
- Never remove the terminal block under applying current to load.
It might cause electric shock or CT breakdown.
- Do not add an excess power to the display. It might break the inner liquid crystal.
- Although the case is made from fireproof resin, do not mount it next to flammable materials. Also, avoid placing it directly on top of materials that catch fire easily.
- If the operating power supply surge exceeds the following value, the internal circuit could be destroyed, so be sure to use a surge absorption element.


| | |
|---------------|--------|
| Surge voltage | 6,000V |
|---------------|--------|

Standard surge waveform

The above value is the surge-voltage resistance at $\pm (1.2/50) \mu\text{s}$ of single-polarity full-wave voltage.

Surge wave form

$[\pm (1.2/50) \mu\text{s}$ single-polarity full-wave voltage]

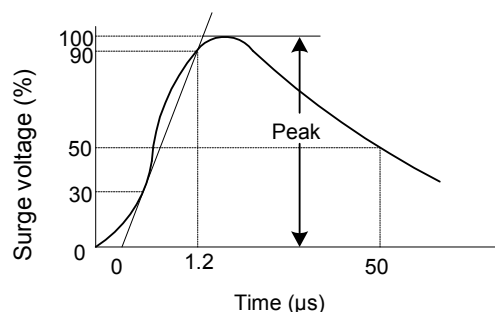

- External noise up to the level shown below is treated as noise voltage, but levels higher than this could lead to malfunctioning or damage to the internal circuit. Although the case is made from fireproof resin, do not mount it next to flammable materials.

| | |
|---------------|------------------------------------------|
| | Between operating power supply terminals |
| Noise voltage | 1,500V |

Noise wave form (noise simulator)
 Rise time: Pulse width: 1 μ s, 50 ns
 Polarity: Cycle: 10 ms

Note) Accurate measurement may not be possible if excessive noise gets added to the input line.

- This product is designed to be used only with our options.
 Options from other companies are not compatible.

■ As to measurement

- If there is some distortion by harmonic or waveform, it may not measure correctly.
 Please check with the actual system before adopts it.
- It might not measure an instantaneous current such as an inrush current or an welding machine.
- When measuring the below loads, it might not satisfy with the accuracy guarantee.
 Out of rating current, Load with low power factor,
 Load with winding current, Load with ferromagnetic field
- Power factor operation is a method assuming balanced load. The error might be big when it measures unbalanced load.

■ Static electricity

- Discharge static electricity touching the grounded metal etc. when you touch the unit.
- Excessive static electricity might be generated especially in a dry place.

■ Cleaning

- Wipe dirt of the main unit with soft cloth etc. When thinner is used, the unit might deform or be discolored.

■ Power supply

- Connect a breaker to the voltage input part for safety reasons and to protect the device.
 The breaker that connects to the voltage input part must arrange at the position easily reached, and display shows it is the breaker of the equipment.
- Do not turn on the power supply or input until all wiring is completed.

■ Before power on

Please note the following points when turning on power at the first time.

- Confirm there are neither wiring rubbish nor especially an electrical conduction when installed.
- Confirm neither the power supply wiring, the I/O wiring nor the power-supply voltage are wrong.
- Tighten the installation screw and the terminal screw surely.
- Use an electric wire applicable to the rated current.

■ Before change the setup

Set the password carefully.

In order to avoid unexpected change the settings, it can set password. However, if you forget the password you can't change the settings.

We recommend you to note the password when you set and change the password.

Chapter 1 Unit's Outline

With KW9M Eco-POWER METER, electrical power (voltage, current, etc.), power factor, frequency, etc are measured using AC voltage and AC current input via one of the following systems: single-phase two-wire system, single-phase three-wire system, three-phase three-wire system or three-phase four-wire system.

This has built-in thermistor to measure the temperature of installation place such as inside the panel board for your reference.

■Eco-POWER METER is designed chiefly to manage saving energy. It is neither intended nor can it be legally used for billing.

| | |
|--------------|------------------------------------|
| Model number | AKW91110 |
| Model name | KW9M Eco-POWER METER Standard type |

1.1 Measurement outline

| | |
|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| Phase/Wire system | Single-phase two-wire (1P2W) Single-phase three-wire (1P3W) Three-phase three wire (3P3W) Three-phase four-wire (3P4W) (common) |
| Applicable power system | 100V system, 200V system, 400V system |
| Measurement circuit | 1-circuit (when measuring 1P2W: max. 3-circuit) |
| Input measurement voltage | 0 to 500VAC |
| Input measurement current | 1 to 65,535A |
| Applicable current sensor | Secondary side current: 1A or 5A |

1.2 Measurement items

| Item | | Unit | Display data range |
|-----------------------------------------|------------|----------|-----------------------------------------------------------------------|
| Integral power (import) | Active | kWh | 0.000 to 9999999.9 *Total integral power (import) 0 to 29999999 |
| | Reactive | kvarh | |
| | Apparent | kVAh | |
| Integral power (export) | Active | kWh | 0.000 to 9999999.9 *Total integral power (export) 0 to 29999999 |
| | Reactive | kvarh | |
| Instantaneous power | Active | kW | -99999 to 0.000 to 99999 |
| | Reactive | kvar | |
| | Apparent | kVA | |
| Current | | A | 0.000 to 8000.0 *1 |
| Voltage (phase / line) | | V | 0.00 to 99999 *1 |
| Power factor | | | -1.000 to 0.000 to 1.000 (Fixed 3 places of decimal) |
| Frequency | | Hz | 0.00 to 99.99 *1 (Fixed 2 places of decimal) |
| Conversion value | | | 0.000 to 9999999.9 |
| Temperature | | degree C | -100.0 to 0.0 to 100.0 *1 (Fixed 1 place of decimal) |
| Current THD (total harmonic distortion) | Each phase | % | 0.000 to 400.00 |
| Voltage THD (total harmonic distortion) | Each phase | % | 0.000 to 400.00 |

*1 'Display data range' is the range to be able to indicate with the main unit display, it is not a range that can be measured.

•Demand

| Item | | Unit | Display data range |
|----------------|-------------------|------|--------------------|
| Present demand | Active | kW | 0.000 to 99999 |
| | Reactive | kvar | |
| | Apparent | kVA | |
| | Active (export) | kW | |
| | Reactive (export) | kvar | |
| | Current | A | |

* Please use this demand function as your standard.

The demand value calculated with this function is not guaranteed.

1.3 Logging items

| Item | Record |
|--------------------------------------------------------------------------------------------------------------------------|----------------------------------|
| Max. demand value (active power, reactive power, apparent power, export active power, export reactive power, current) | 1 record for each, Max. value |


<Glossary>

Eco-POWER METER defines as below.

| | | |
|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| THD (total harmonic distortion) | Ratio of harmonic distortion (voltage or current) for the fundamental frequency. Lower the value shows that the distortion is less. | |
| Demand by IEC61557-12 | Based on IEC61557-12 Performance measuring and monitoring devices (PMD) | |
| Sliding block interval demand | It calculates by measured power via CT with setting interval. Set power interval by 1 to 60(min.) (every 1-min.). It calculates demand during latest finished interval and displays. One interval is started every setting time. | |
| fixed block interval demand | It calculates by measured power via CT with setting interval. Set power interval by 1 to 60 (min.) (every 1-min.) It calculates demand during latest finished interval and displays. After one interval finishes, the next interval starts. | |
| Current demand | It calculates based on a thermal demand meter. It measures an average current (current demand) within setting interval and the max. value is considered as max. current demand. | |

Chapter 2 Parts Name and Working

2.1 Parts Names

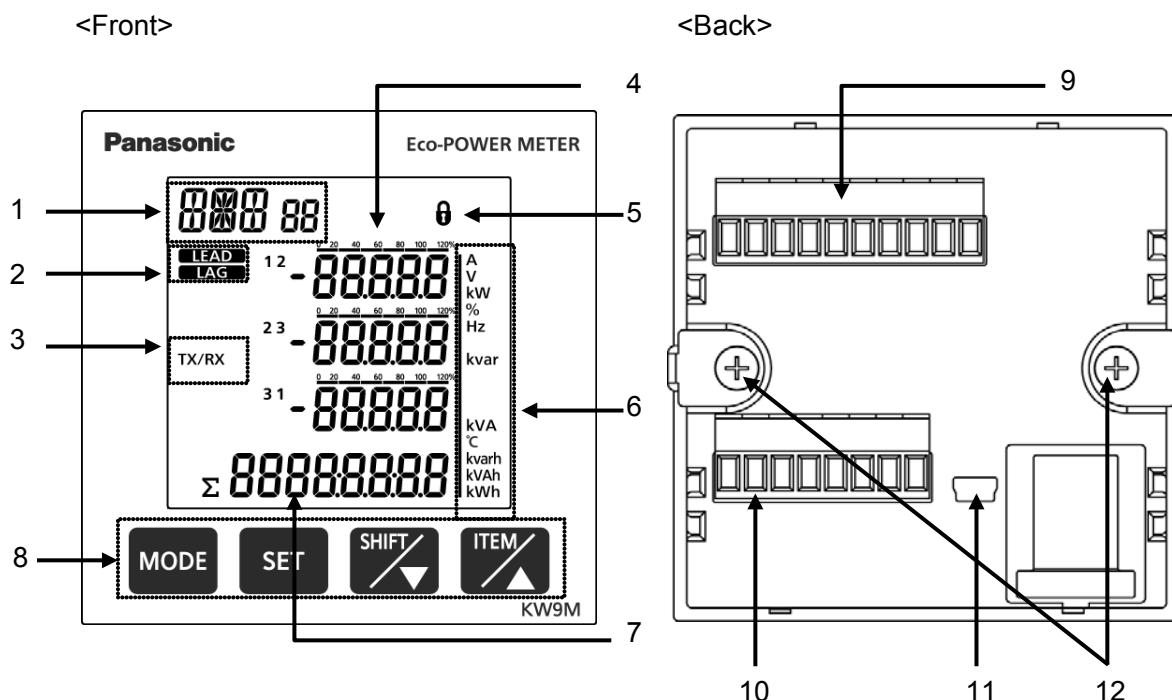

| | | | |
|----|----------------------|----------------------------------------|-----------------------------------------------------|
| 1 | Item indicator | Measuring mode | Indicate the measuring item |
| | | Setting mode | Indicate the setting item |
| 2 | Auxiliary mark | Measuring mode | Indicate the power condition *1 |
| 3 | TX/RX mark | Measuring mode | Blinking while communication |
| 4 | Load ratio indicator | Measuring mode | Indicate the ratio of load (current) for the rating |
| 5 | Lock mark | Measuring mode | Lighting while in lock mode |
| 6 | Unit mark | Measuring mode | Indicate the measuring unit |
| 7 | Measurement value | Measuring mode | Indicate the measuring value |
| | | Setting mode | Indicate the setting value |
| 8 | Keys | Use to operate the unit | |
| 9 | Terminal block A | | |
| 10 | Terminal block B | | |
| 11 | USB port | USB communication port | |
| 12 | Mounting clip | Use to panel mounting (screws:M4x10mm) | |

*1 Auxiliary mark [LEAD] [LAG] indicates the phase difference between voltage and current.
 When current phase delays to voltage phase, [LAG] is indicated.
 When current phase leads to voltage phase, [LEAD] is indicated.
 When power factor is '1', '0' and '-1', it doesn't display [LEAD] nor [LAG].

2.2 Key's functions

| Key | Functions | |
|-----------------------------|-----------------------------------------------|-------------------------------------------------------|
| <MODE> | Measuring mode | Shift to setting mode |
| | Setting mode | Shift to setting confirmation mode and measuring mode |
| | Logging mode Demand mode | Shift to setting mode |
| <SET> | Setting mode | Set setting items and setting values |
| <SET> (continuous 3-sec) | Measuring mode Logging mode Demand mode | All keys locked |
| | Lock mode | Release the lock mode |
| <SHIFT/▽> | Measuring mode | Select measuring item to display |
| | Setting mode | Select a setting value |
| | Demand mode | Select demand item to display |
| <ITEM/△> | Measuring mode | Select measuring item to display |
| | Setting mode | Select a setting value |
| | Logging mode | Select logging item to display |
| | Demand mode | Select demand item to display |
| <MODE>+<SHIFT/▽> | Measuring mode | Shift to logging mode |
| | Logging mode | Shift to demand mode |
| | Demand mode | Shift to measuring mode |

● Lock mode

It is the mode makes all keys unable. In this mode, you can not input by any keys.

When you press <SET> continuously for about 3sec., lock mark is displayed.



















Press <SET> continuously for about 3sec. again to release Lock mode.



















When it set to use auto-display functions, the display items are changed automatically.






Refer to 4.4.3 setting for optional functions for auto-display functions.

2.3 Indication on KW9M Eco-POWER METER

The alphabet is shown as below.

| | A | B | C | D | E | F | G | H | I | J | K |
|----------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|---|-------------------------------------------------------------------------------------|
| Value display |  |  |  |  |  |  |  |  |  | |  |
| Item indicator Top left | | |  |   |  |  |  |  |  | | |


| | L | M | N | O | P | Q | R | S | T | U | V |
|----------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Value display |  |  |  |  |  | |  |  |  |  |  |
| Item indicator Top left | |  |  |  |  |  | |  |  |  | |

| | W | X | Y | Z |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|---|
| Value display |  |  |  | |
| Item indicator Top left |   | | | |

Chapter 3 Wiring

Be sure to wire correctly according to the terminal arrangement and wiring diagrams.
Please connect a fuse or a breaker to power supply part for safety reasons and to protect the device.
This has no built-in power switch, circuit breaker or fuse for measured voltage input parts.
Therefore it is necessary to install them in the circuit near this unit.
Do not turn on the power supply or input until all wiring is completed.

3.1 Main unit terminal arrangement

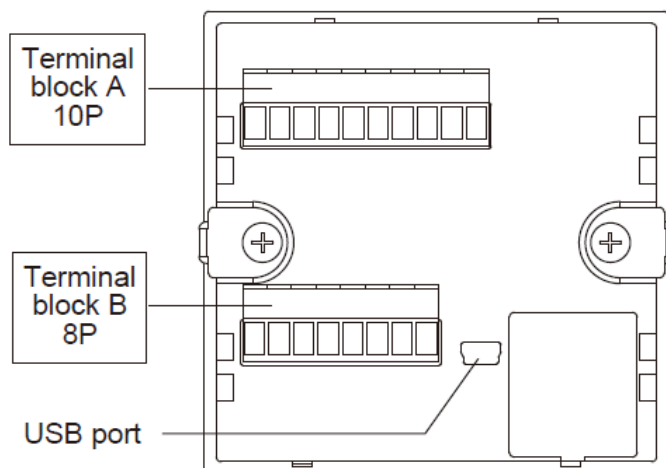

- ◆ Common for terminal block A, B
- Screw size: M2.5
- Tightening torque: 0.4 to 0.5Nm
- Applicable wire:
 - (Crimp-type terminal is recommended.)
 - single wire / stranded wire
0.5 to 4mm² (AWG20 to 12)
 - for 2 pcs.
single wire / stranded wire
2pcs.x0.5 to 2 mm² (AWG20 to 14)

Stripping length: 7 to 8 mm

● Terminal block A (upper) 10P

| Terminal number | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
|-----------------|-----------------------|-----|------------------------|----|----|----|--------|-------|-----|-----|
| Functions | L + | N - | V1 | V2 | V3 | Vn | NC | SG | A + | B - |
| | AUX (Power supply) | | Measured voltage input | | | | vacant | RS485 | | |

● Terminal block B (lower) 8P

| Terminal number | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|-----------------|------------------------|---|-----|---|-----|---|----|--------|
| Functions | K | L | K | L | K | L | NC | NC |
| | CT1 | | CT2 | | CT3 | | | |
| | Measured current input | | | | | | | vacant |

⚠ The input voltage to each terminal is as follows.

| Terminal | Phase and wire system | Terminal No. | Input voltage |
|------------------------|-------------------------|--------------------------------|----------------------------------------------------------------|
| Power supply | Single-phase two-wire | 1 - 2 (L+ - N-) | 85-264V AC [85-264V ~] 100-300V DC [100-300V =] |
| Measured voltage input | Single-phase two-wire | 3 - 6 (V1-Vn) | 0-500VAC [0-500V ~] (L-L) |
| | Single-phase three-wire | 3 - 5 - 6 (V1-V3-Vn) | 0-500VAC [0-500V ~ :3W] (L-L) 0-250VAC [0-250V ~ :3W] (L-N) |
| | Three-phase three-wire | 3 - 5 - 6 (V1-V3-Vn) | 0-500VAC [0-500V 3 ~] (L-L) |
| | Three-phase four-wire | 3 - 4 - 5 - 6 (V1-V2-V3-Vn) | 0-500VAC [0-500V 3 ~] (L-L) 0-289VAC [0-289V 3N ~] (L-N) |

3.2 Wiring Diagrams

Please connect a breaker or a fuse to the power supply and voltage input part for safety reasons and to protect the device.

- Recommended breaker: 3 to 15A
- Recommended fuse : Time-lag fuse rated current 2A


Grounding the secondary side of VT (Voltage transformer) and CT (Current transformer) is not necessary with low-voltage circuit.

*When using several CTs, set each CT approximately 1m apart. If the two CTs are set too close each other, it may not measure accurately due to magnetic field interference.

◆When measuring a load with rated input voltage


Single-phase two-wire system

- *One CT is needed to measure single-phase two-wire system.
- *2 CTs are needed to measure 2-circuit and 3 CTs are needed to measure 3-circuit.
- *To measure 2-circuit, wire 3 and 4. To measure 3-circuit, wire 3 and 4 and 5.

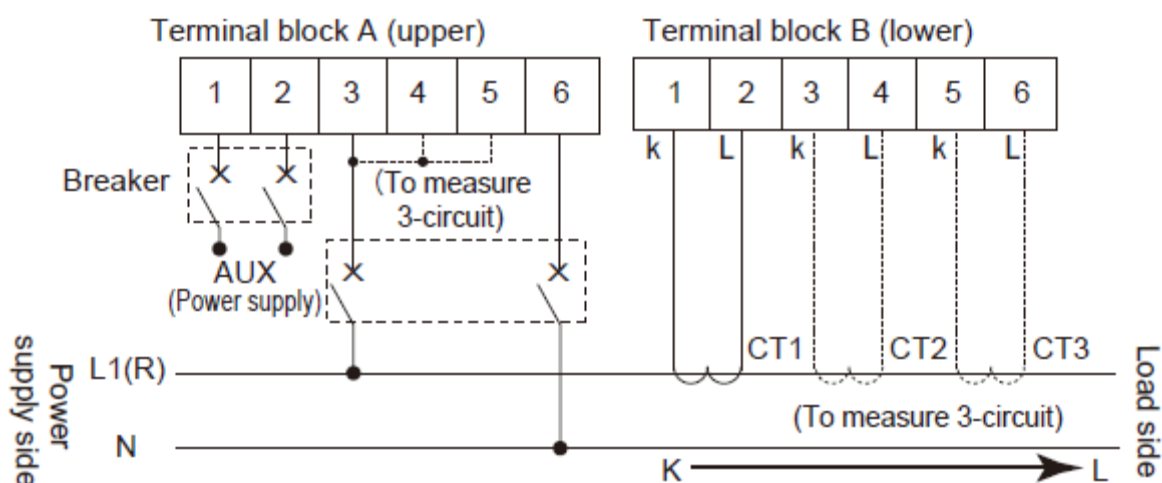


Single-phase three-wire/Three-phase three-wire

- *2 CTs are needed to measure single-phase three-wire system, three-phase three-wire system.

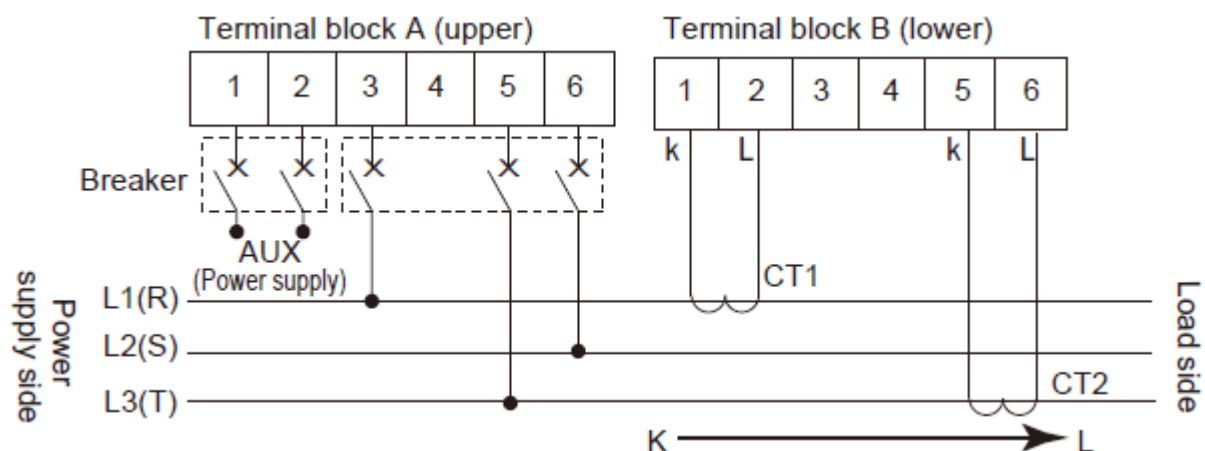

Three-phase four-wire system

*3 CTs are needed to measure three-phase four-wire system.

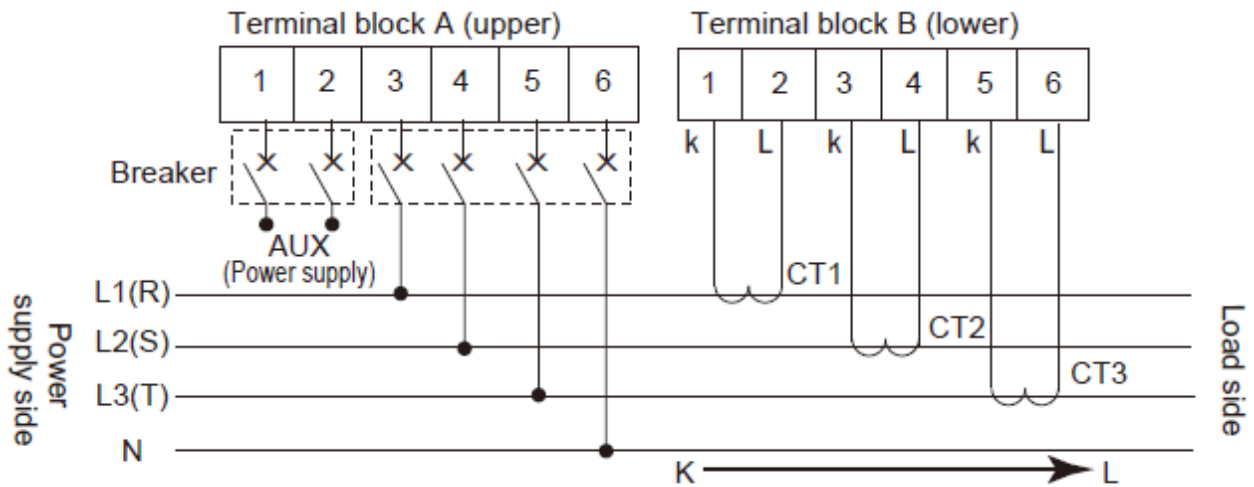


Vn terminal should be connected to N-phase which is grounded.

◆When measuring a load with exceed input voltage

Voltage transformer (VT) is needed when you measure a load with over input voltage.

Use a VT, those secondary voltage rating is 110V.

Grounding the secondary side of VT and CT is not necessary with low-voltage circuit.

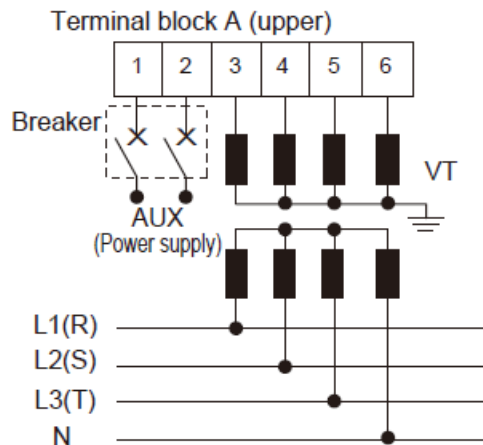

3.3 How to attach the Current Transformer (CT)



DANGER


- Never open the secondary circuit of CT under applying current to load.
 - Never remove the terminal block under applying current to load.
- Will cause electric shock or breakdown CT**

- Use CT that the secondary side current is 5A or 1A, the rated burden 0.5VA or more.
- One CT is needed for 1 unit when measuring 1P2W (2 CTs for 2-circuit, 3CTs for 3-circuit). Two CTs are needed when measuring 1P3W/3P3W. Three CTs are needed when measuring 3P4W. Using all CTs for one unit should be the same.
- Use the applicable wire, or it might cause a breakdown, burnout or electric shock.
- When connecting CT, connect the secondary side to the terminal of the main unit first, and after that wire the primary side to a load electric wire. Incorrect order might cause an electric shock or break CT.
- The CT has polarity. Wire correctly according to the K and L marks. **Wrong direction can't measure correctly.**
- If there is some distortion by harmonic or waveform, it may not measure correctly. Please check with the actual system before adopts it.
- Separate the wiring (strong electric part) of the measured voltage input terminal (operating power supply terminal) from the CT cable. It may not satisfy the accuracy due to noise.

◆How to connect CT

- (1) Power off the measured devices.
- (2) Install applicable CT.
- (3) Remove terminal block of KW9M.
- (4) Connect CT to the terminal block.
- (5) Insert terminal stand surely.
- (6) After confirm all wiring correct, turn on the power of the load and KW9M.

(Connection example)

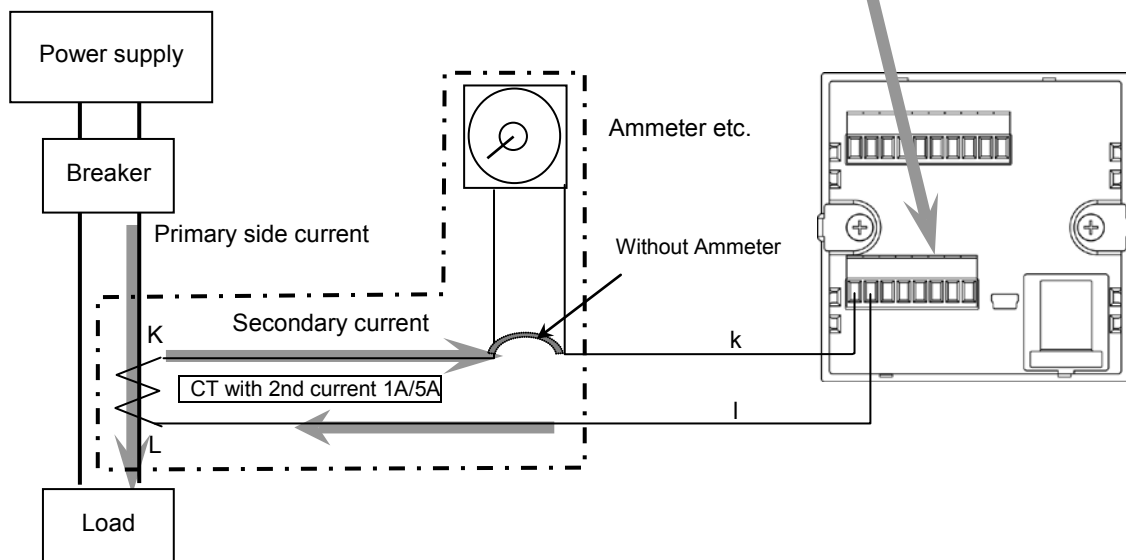

- * Connect CT wiring and terminal block surely.
It will cause CT breakdown.
- * Never remove the terminal block under applying current to load. It will cause electric shock or breakdown CT.


◆How to set the parameters for CT

- (1) Select CT type (CT-T) according to the using CT.
(Select '5A' if secondary side current of using CT is 5A. Select '1A' if secondary side current of using CT is 1A.)
- (2) Set the primary current of measured CT at primary side current of CT setting mode (CT-1).
< ex > If the measured CT is 400A/1A or 400A/5A, set to "400".
- (3) Connect CT according to the CT direction, power side (K) to load side (L).


3.4 RS485 Communication

- When using shielded cable for the RS485 transmission line, ground one end. Use a class D dedicated earth for grounding. Do not share a ground with other earth lines. (Fig. 1)
- For terminal stations of both side including the upper device, termination resistors should be connected. KW9M Eco-POWER METER doesn't have any built-in termination resistors. Connect 120Ω, 1/2W or more termination resistor between [A+] and [B-] of Eco-POWER METER that is connected the end of RS485 transmission line. The RS485 transmission line shielded cable should be grounded at the end KW9M Eco-POWER METER. (Fig. 1)
- Be sure to connect with daisy chain the RS485 transmission line between each unit. Do not use a splitter. (Fig. 2)
- To avoid noise, separate the transmission line from high-voltage line (power supply, voltage line).


(Fig.1)

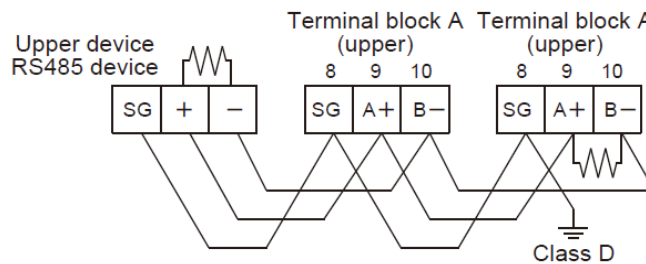

(Fig.2)

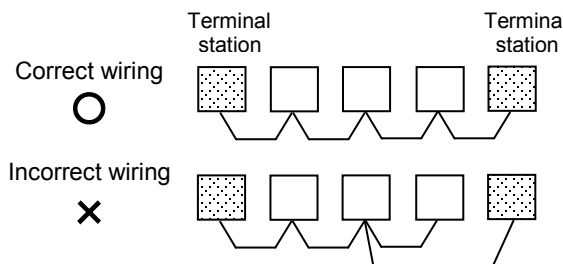

◆How to connect KW9M and the other devices with 2-wire system

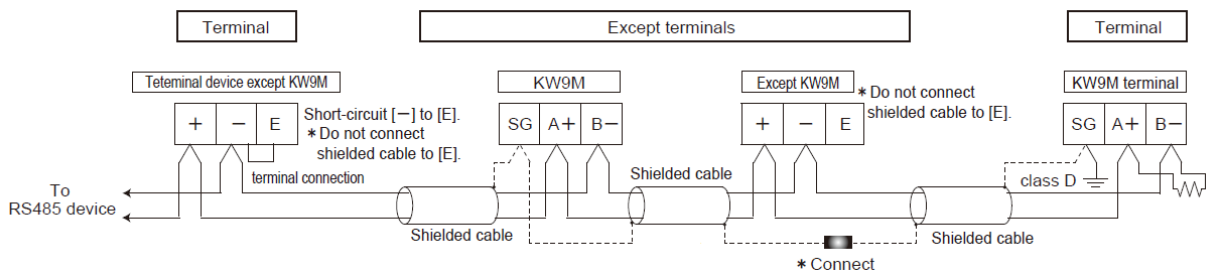

3.5 Low Voltage Directive

For using under the measurement category III, install varistors or SPD between the lines of power supply and the measured voltage input. Use the varistors or SPD which is complied with European standard and specifications to meet power supply and added current.

When using in the application conforming to EN61010-1/IEC61010-1, make sure to satisfy the following conditions.

- 1) Pulse output part secure only basic insulation. In order to secure reinforced (double) insulation demanded by EN 61010-1/ IEC61010-1, secure basic insulation or more with load side and reinforced (double) insulation with RS485 communication system side.
- 2) Provide the voltage input part with an EN60947-1 or EN60947-3 compliant circuit breaker.
- 3) Use a wire with basic insulation or more for a wire cramped (or connected) CT.
- 4) Vn terminal should be connected to N-phase which is grounded.

【Environmental conditions】

- Overvoltage category II, Pollution degree 2
- Indoor use
- An ambient temperature of -25 to +55°C
- An ambient non-condensing humidity of 30 to 85%RH (at 20°C)
- Altitude of 2000m or less

【Mount the product in a place with】

- A minimum of dust, and an absence of corrosive gases
- No flammable, explosive gasses
- Few mechanical vibrations or shocks
- No exposure to direct sunlight
- No large capacity electromagnetic switches or cables through which large current is flowing

Chapter 4 Settings

You can set parameters for measuring and the other functions using the keys on Eco-POWER METER. After wiring Eco-POWER METER and CT, power on and set the parameter for power measurement, Eco-POWER Meter can measure the electric power. In order to use the other functions, set other parameters according to your use.

◆Keys' functions at setting mode

| | |
|---------------------|--------------------------------|
| <MODE> | Shift to setting mode |
| <SET> | Set the items and values |
| <SHIFT/▽>, <ITEM/△> | Select items and change values |

◆Parameters for power measurement

| Item | Range | Initial value |
|----------------------------|-----------------------|---------------|
| Phase/Wire system | 1P2W, 1P3W, 3P3W 3P4W | 1P2W |
| CT type | 1, 5 [A] | 5A |
| Primary side current of CT | 1 to 65535 [A] | 5A |
| VT ratio | 1.00 to 600.00 | 1.00 |
| Conversion rate (P) | 0.00 to 99.99/1kWh | 10.00 |
| Conversion rate (-P) | 0.00 to 99.99/1kWh | 10.00 |

◆Parameters for demand measurement

| Item | Range | Initial value |
|---------------------------|------------------------------------------------|---------------|
| Power demand type | Slide (Sliding block), Fixed (Fixed block), | Peak |
| Power demand interval 1 | 1 to 60 [min.] | 15 |
| Power demand interval 2 | 1 to 60 [min.] | 1 |
| Current interval | 1 to 60 [min.] | 15 |
| Demand measurement status | Start, Stop | Stop |

◆Parameters for communication

| Item | Range | Initial value |
|---------------------|-------------------------------------------------------|---------------|
| Protocol | MEWTOCOL, MODBUS(RTU), DL/T645-2007 | MEWTOCOL |
| Device number | MEWTOCOL 1 to 99 | 1 |
| | MODBUS(RTU) 1 to 247 | |
| | DL/T645-2007 0 to 9999 | |
| Transmission speed | 38400, 19200, 9600, 4800, 2400, 1200 [bps] | 19200 |
| Transmission format | 8b-o(8bit odd), 8b-n(8bit none), 8bit-E(8bit even) | 8b-o |
| Stop bit | 1,2 | 1 |
| Response time | 1 to 99 [ms] | 5 |

◆Parameters for optional functions

| Item | Range | Initial value |
|--------------------------|------------------------------------|---------------|
| Auto-off | 0 to 99 [min.] | 1 |
| Luminance | 1, 2, 3, 4, 5 (1: dark to 5:light) | 3 |
| Update cycle | 100 to 1000 [ms] | 100 |
| Auto display start | 0 to 99 [min.] | 10 |
| Display cycle | 1 to 99 [sec.] | 5 |
| Temperature correction | -100.0 to 100.0 | 0.0 |
| Reset all integral value | YES, NO | NO |
| Reset integral value 1 | YES, NO | NO |
| Reset integral value 2 | YES, NO | NO |
| Reset integral value 3 | YES, NO | NO |
| Reset logging data | YES, NO | NO |
| Version | | |

◆Password


| Item | Range | Initial value |
|-----------------|--------------|---------------|
| Password change | 0000 to 9999 | 0000 |

4.1 Setting Flow

Arrow mark means press each key

.....> <MODE>
 —> <SET>

➡ <ITEM/Δ>
 ⇨ <SHIFT/▽>

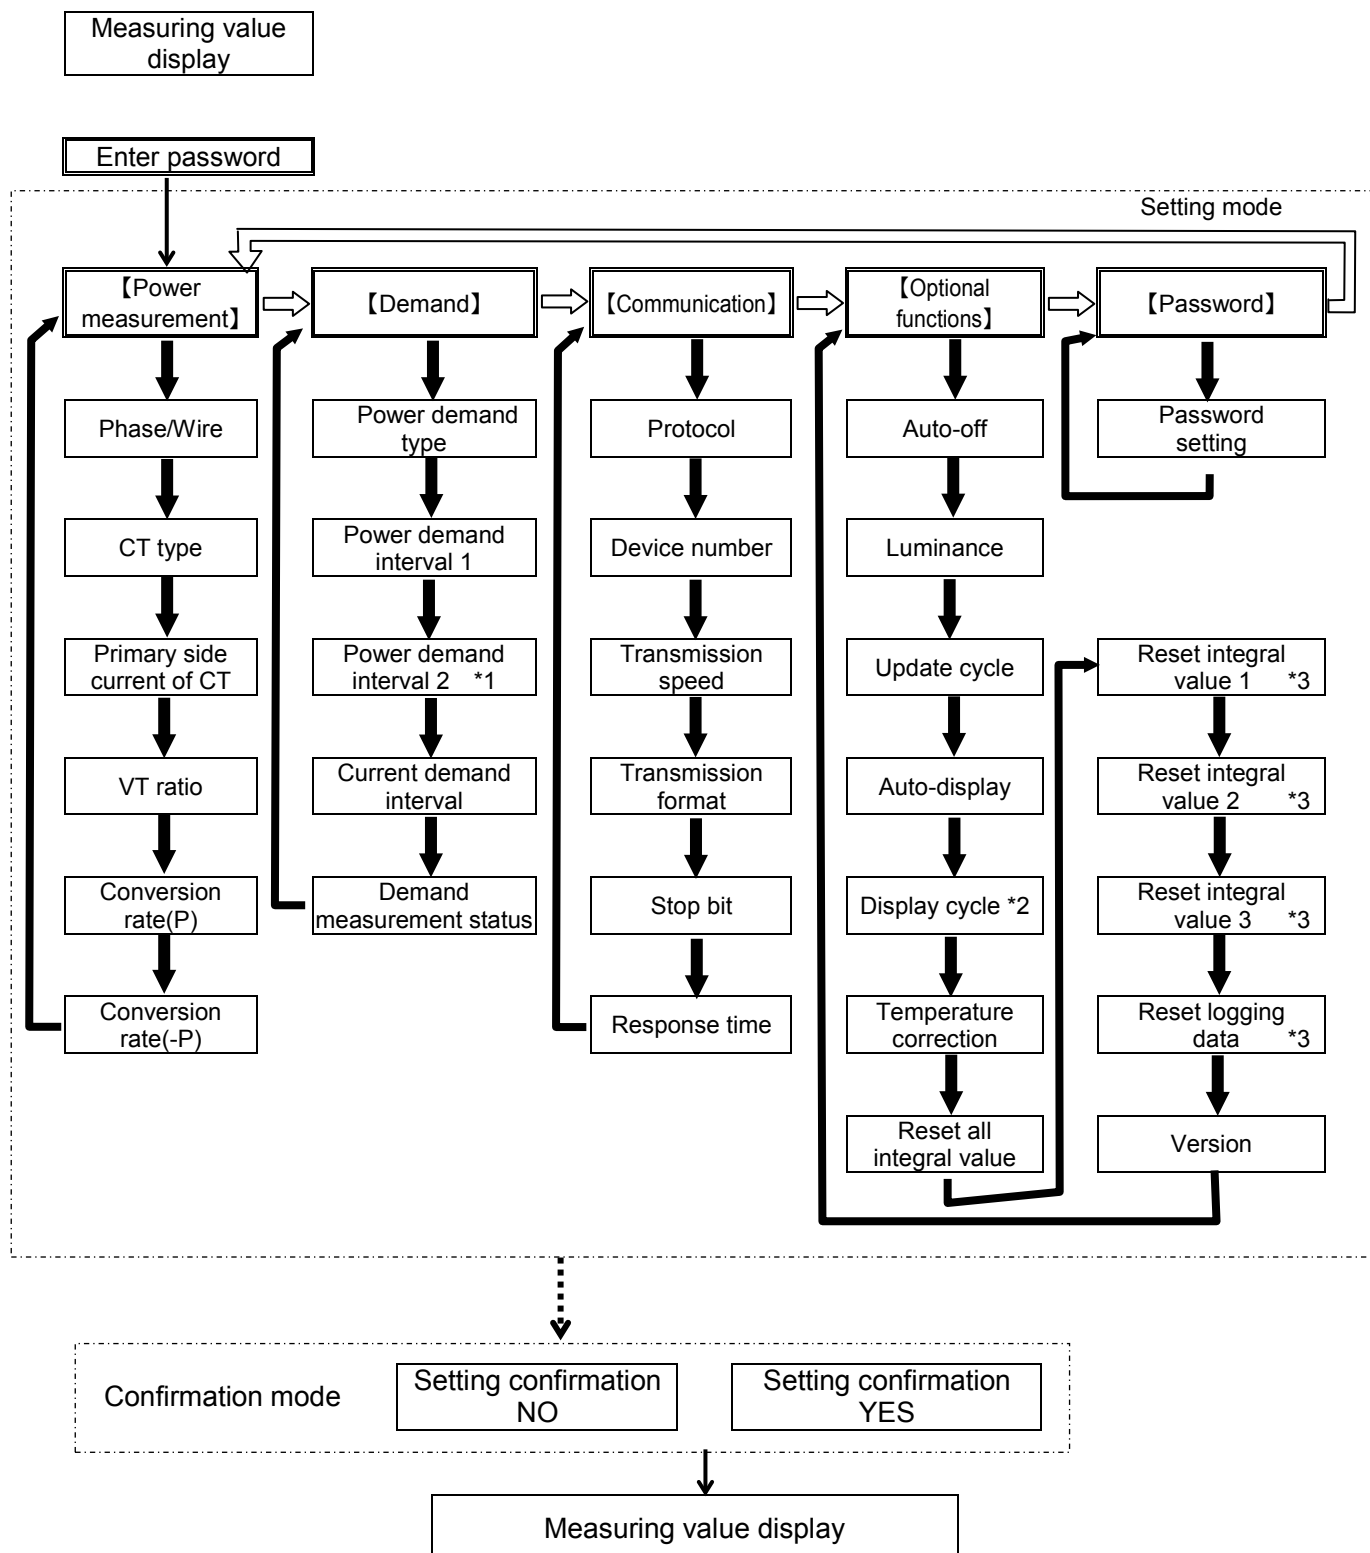

Press <SET> during each item is displayed to change the setting value.

Press <MODE> to display the confirmation window. Select [YES] and press <SET> to decide the setting value. However no value is changed, the confirmation window is skipped and it displays the measuring value display.

*1 It skips when [Fixed] is set at power demand type.

*2 It skips when [0] is set at auto-display setting.

*3 It skips when [YES] is selected at reset all integral value.

4.2 Password entry


It is necessary to enter password to shift to setting mode.

Enter [0000] and shift to password setting mode when you set password at the first time.

*When setting password, be careful for handling and note it.

Measuring value display

Press <MODE> and it shifts to password entry window.

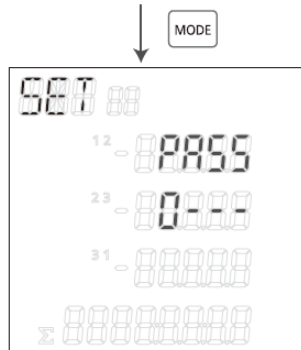


Enter password from left to right using <ITEM/Δ>, <SHIFT/▽>.



Increase



Shift entered digit to the right

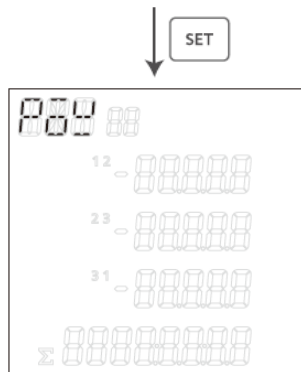

Press <SET> after enter the password.

If the password is correct, it shift to setting mode of power measurement.


If the password is wrong, [FAIL] is displayed and it returns to the password entry window.

*If you make wrong password 5 times, you can't set 1-hour after.



4.3 Password initialize

When you forget the password, initialize it in the following procedures. (Initial: [0000])
It is impossible to decode the set password.

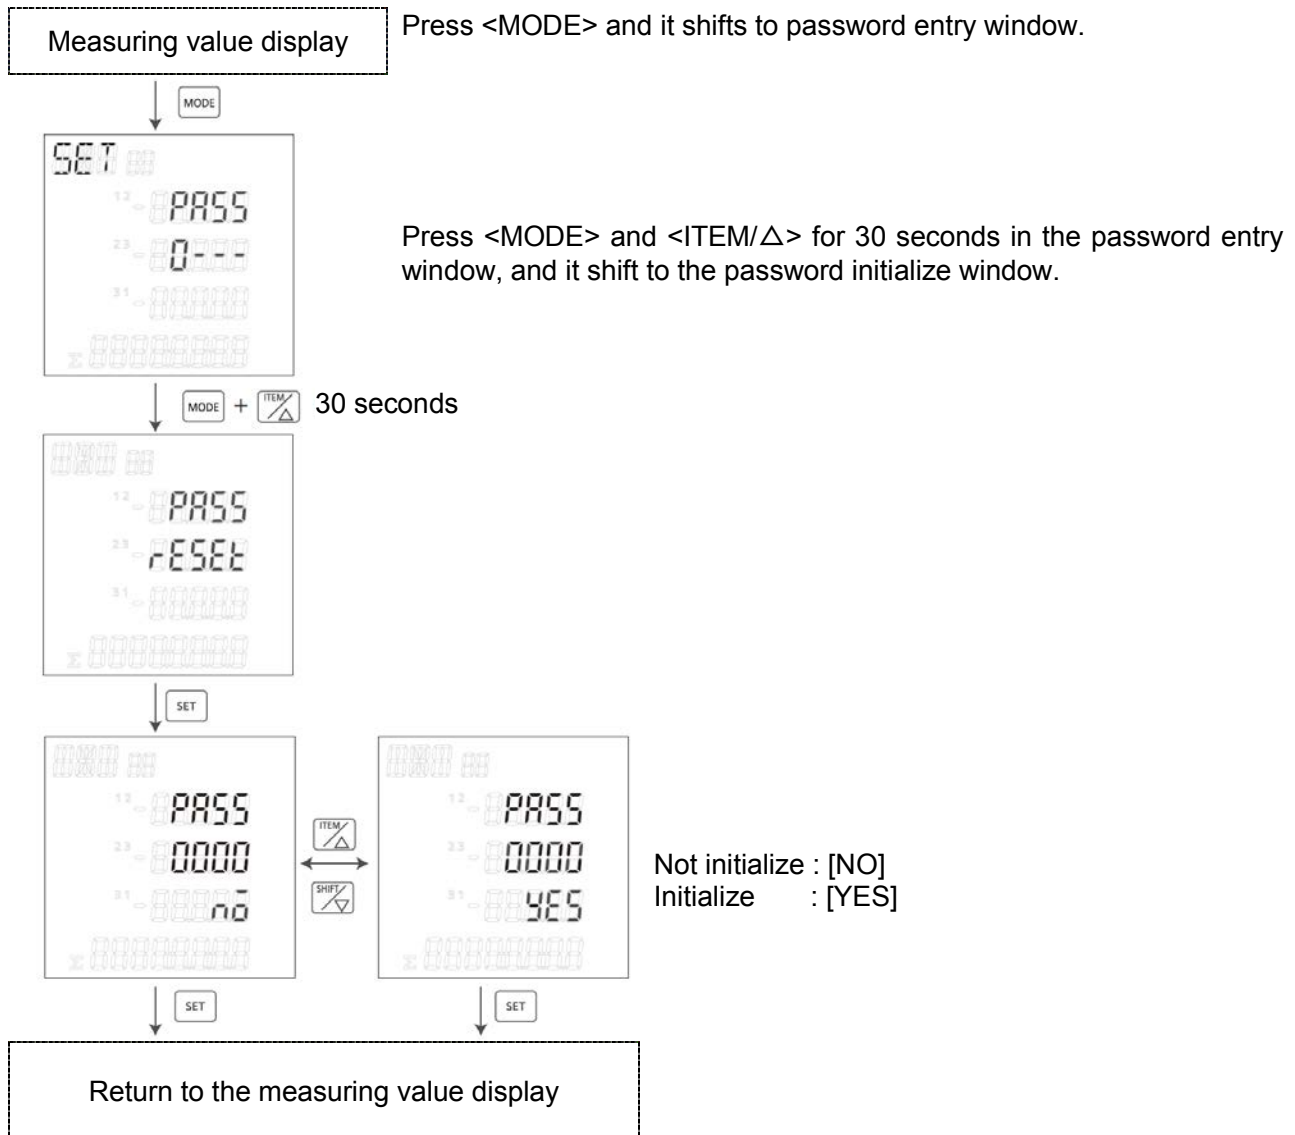

4.4 How to Set

■ Set before measuring.

Select setting item with <ITEM/Δ> and press <SET>, and the value will be blinking.

Set with <ITEM/Δ> and <SHIFT/▽>.


When you select [YES] with the confirmation window and press <SET>, the setting values are settled.

4.4.1 Settings for power measurement

Phase/Wire system

Select phase/wire system to measure.

Press <ITEM/Δ>, <SHIFT/▽> to select phase/wire system.

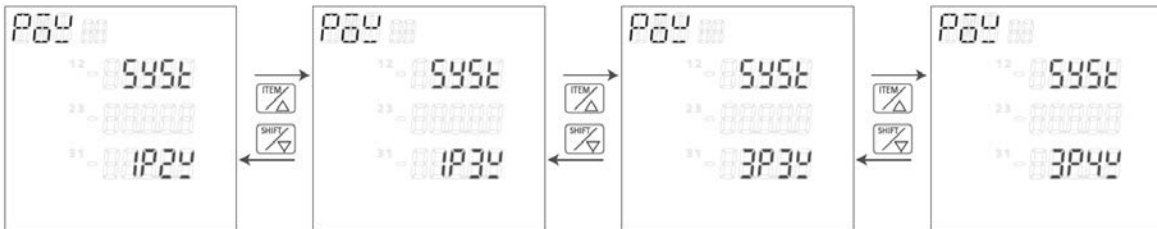


[Set list] 1P2W, 1P3W, 3P3W, 3P4W (initial: 1P2W)

* When the system is not matched with the measure system, it doesn't measure correctly.

CT type

Select using CT type (secondary side current).

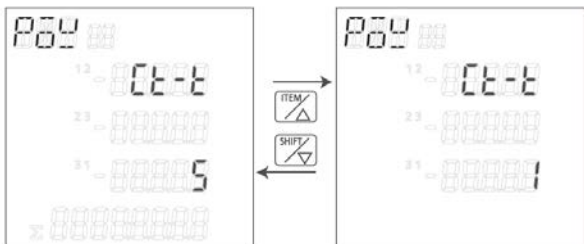

Press <ITEM/Δ>, <SHIFT/▽> to select CT type.

[Set list] 5 (5A), 1 (1A) (initial: 5)

To use CT with secondary side current 5A; [5]

To use CT with secondary side current 1A: [1]

Primary side current of CT

Set the primary side current of using CT.

Enter the primary side current of CT that is set at CT type setting.



Press <ITEM/Δ>, <SHIFT/▽> to set.

[Set range] 1 to 65535 (initial:5)



Increase



decrease

Primary side current of using CT is 400A: [400]

VT ratio

Select the voltage input method, input voltage directly or uses a voltage transformer (VT: secondary side rating 110V) and set VT ratio.



Press <ITEM/Δ>, <SHIFT/▽> to set.
[Set range] 1.00 to 600.00 (initial:1.00)



increase



decrease

Input directly without VT: [1.00]

Use VT : [1.01 to 600.00]

*When input voltage is under 3V (VT ratio = 1), [0.0] is displayed and it doesn't measure.

Conversion rate (P)

Set the conversion rate per integral active power 1 kWh.



Press <ITEM/Δ>, <SHIFT/▽> to set.

[set range] 0.00 to 99.99/1kWh (initial:10.00)




increase



decrease

Conversion rate (-P)

Set the conversion rate per integral export power (-P) 1kWh.

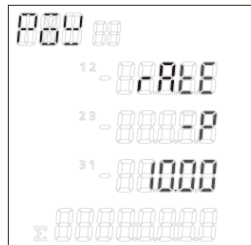

Press <ITEM/Δ>, <SHIFT/▽> to set.

[set range] 0.00 to 99.99/1kWh (initial:10.00)



increase




decrease

4.4.2 Settings for demand measurement

Power demand type

Select type of power demand measurement.

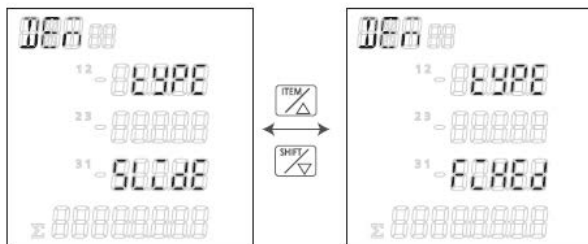

Press <ITEM/Δ>, <SHIFT/▽> to select power demand type.

[Set list]

Slide (sliding block),
Fixed (fixed block)

(initial: Slide)

Power demand interval 1

Set interval time to use for sliding block and fixed block for power demand measurement.



Press <ITEM/Δ>, <SHIFT/▽> to set.

[Set range] 1 to 60 min. (initial: 15)



Increase



Decrease

Power demand interval 2

* It is only when [Slide] is selected for power demand type.

Set slide time to use for sliding block for power demand measurement.



Press <ITEM/Δ>, <SHIFT/▽> to set.

[Set range] 1 to 60 min. (initial: 1)



Increase



decrease

Current demand interval

Set interval to use for current demand calculation.



Press <ITEM/Δ>, <SHIFT/▽> to set.

[Set range] 1 to 60 min. (initial: 15)



Increase




Decrease

Demand measurement status

Set the timing to start demand measurement.

When you select [Start] with this window and set [YES] with confirmation mode, it start demand measuring.

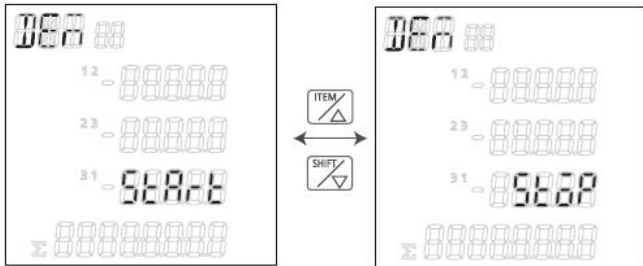

Press <ITEM/Δ>, <SHIFT/∇> to select Demand measurement status.

[Set list]

Start, Stop

(initial: Stop)


4.4.3 Settings for communication

Protocol

Select protocol for of main unit via serial communication (RS485).

*When protocol is changed, device number, transmission speed (baud rate), transmission format, stop bit and response time will be initialized.


Press <ITEM/Δ>, <SHIFT/▽> to select.

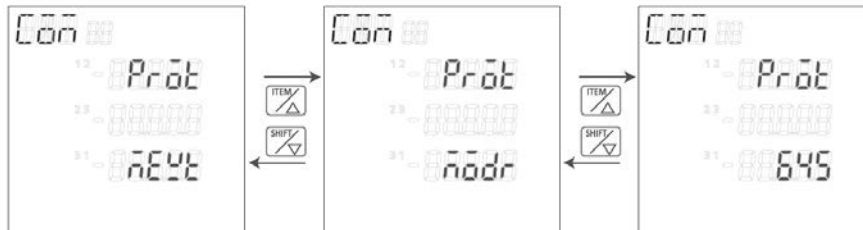

[Set list] MEWT(MEWTOCOL), MODr (MODBUS(RTU)), 645(DL/T645-2007)
(initial: MEWT)

Device number

Set an individual device number for each unit when two or more units are connected to communicate via serial communication (RS485).

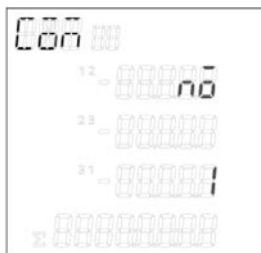

Press <ITEM/Δ>, <SHIFT/▽> to set.
The setting range differs according to the protocol.

[Set range] MEWTOCOL: 1 to 99
 MODBUS(RTU): 1 to 247
 DL/T645-2007: 0 to 9999 (initial:1)



increase




decrease

Transmission speed (Baud rate)

Select the serial communication (RS485) transmission speed.

Define the transmission speed according to the master's (PLC etc.).

Press <ITEM/Δ>, <SHIFT/▽> to select.

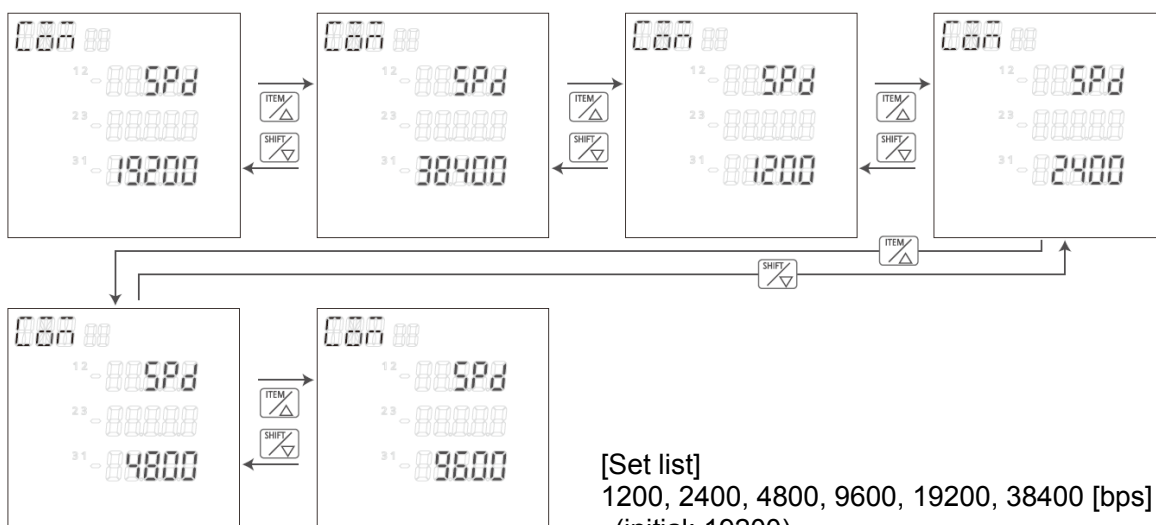


[Set list]
1200, 2400, 4800, 9600, 19200, 38400 [bps]
(initial: 19200)

Transmission format

*Select [8b-E] when [645] is set for the protocol.

Select serial communication (RS485) transmission format (Data length, Parity).
Define the transmission format according to the master's (PLC etc.).

Press <ITEM/Δ>, <SHIFT/▽> to select.

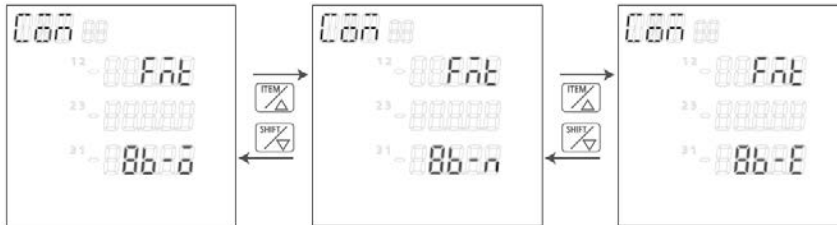


[Set list] 8b-o (8bit odd), 8b-n (8bit none), 8b-E (8bit even) (initial: 8b-o)

Stop bit

*Select [1] when [645] is set for the protocol.

Select serial communication (RS485) stop bit.

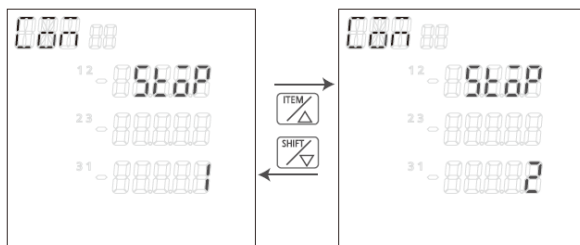

Press <ITEM/Δ>, <SHIFT/▽> to select.

[Set list] 1, 2 (initial: 1)

Response time


*Select 50 or more when [645] is set for the protocol.

Set serial communication (RS485) response time of main unit.
When command is received, it sends response after setting response time passes.



Press <ITEM/Δ>, <SHIFT/▽> to set.

[Set range] 1 to 99 ms (initial: 5)

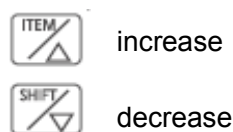

Auto-display

It shifts items of each integral value automatically.

When it passes the setting time after key operation, the integral value is shifted automatically.



Press <ITEM/Δ>, <SHIFT/▽> to set.

[Set range] 0 to 99 min. (initial:10)



increase



decrease

Not change automatically : [0]

Change automatically after the setting time: [1 to 99]

*Any key operation during auto-display makes the display shift to instantaneous active power.

Display cycle

*It skips this item when [0] is set for auto-display.

Set each display cycle during auto-display.



Press <ITEM/Δ>, <SHIFT/▽> to set.

[Set range] 1 to 99 sec (initial:5)



increase



decrease

Shift every 1second: [1]

*Any key operation during auto-display makes the display shift to instantaneous active power.

Temperature correction

The measured temperature can be corrected to display.



Press <ITEM/Δ>, <SHIFT/▽> to set.

[Set range] -100.0 to 100.0 (initial: 0.0)




increase



decrease

Reset all integral value

Integral power (active, reactive, apparent) and logging data can be reset at one time.

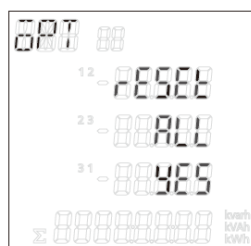

Press <ITEM/Δ>, <SHIFT/▽> to select.

[Set list] YES, NO (initial: NO)


Reset all : [YES]

Not reset : [NO]

Reset integral value 1

*It skips this item when [YES] is selected for reset all integral value.

Reset the integral power of 1CH/1-phase (active, reactive, apparent) and integral export power of 1CH/1-phase (active, reactive).

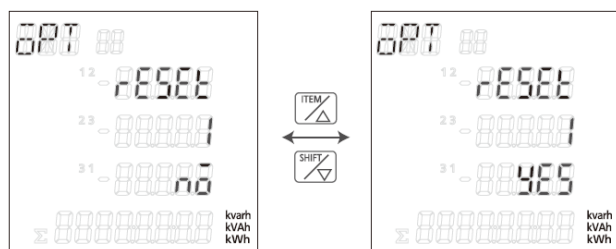

Press <ITEM/Δ>, <SHIFT/▽> to select.

[Set list] YES, NO (initial: NO)


Reset : [YES]

Not reset : [NO]

Reset integral value 2

*It skips this item when [YES] is selected for reset all integral value.

Reset the integral power of 2CH/2-phase (active, reactive, apparent) and integral export power of 2CH/2-phase (active, reactive).

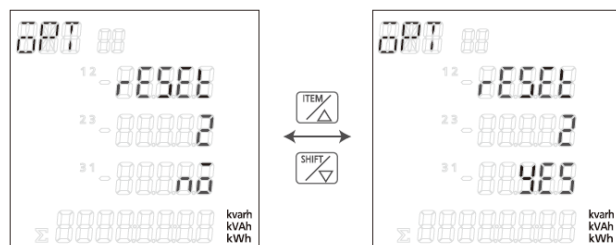

Press <ITEM/Δ>, <SHIFT/▽> to select.

[Set list] YES, NO (initial: NO)


Reset : [YES]

Not reset : [NO]

Reset integral value 3

*It skips this item when [YES] is selected for reset all integral value.

Reset the integral power of 3CH/3-phase (active, reactive, apparent) and integral export power of 3CH/3-phase (active, reactive).

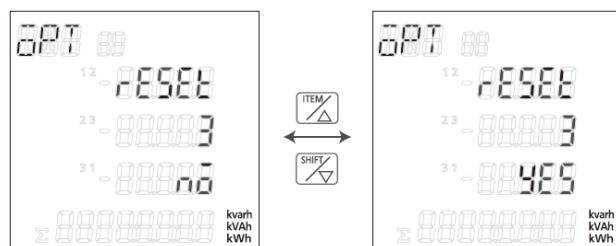

Press <ITEM/Δ>, <SHIFT/▽> to select.

[Set list] YES, NO (initial: NO)


Reset : [YES]

Not reset : [NO]

Reset logging data

*It skips this item when [YES] is selected for reset all integral value.

Reset logging data (max. demand value).

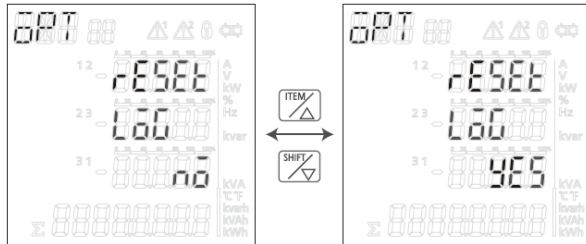

Press <ITEM/Δ>, <SHIFT/▽> to select.

[Set list] YES, NO (initial: NO)

Reset : [YES]

Not reset : [NO]

Version

You can check the software version.



It displays the software version.

4.4.5 Password setting

Password setting

You can set password for changing the settings.

It is necessary to enter the password before moving the setting mode.

We recommend you to set password to avoid unexpected change.



Press <SET> and [0] on the left is blinking.
Set password using <ITEM/Δ>, <SHIFT/▽>.



Increase



Shift entered digit to the right

Set from left to right. Make the digit to set blink.

[Set range] 0000 to 9999 (initial: 0000)



Set 4-digit password and press <SET>
After that the confirm window is displayed.




[Set range] YES, NO (initial: NO)



Confirm: [YES]

Not confirm: [NO]

4.4.6 Confirmation window

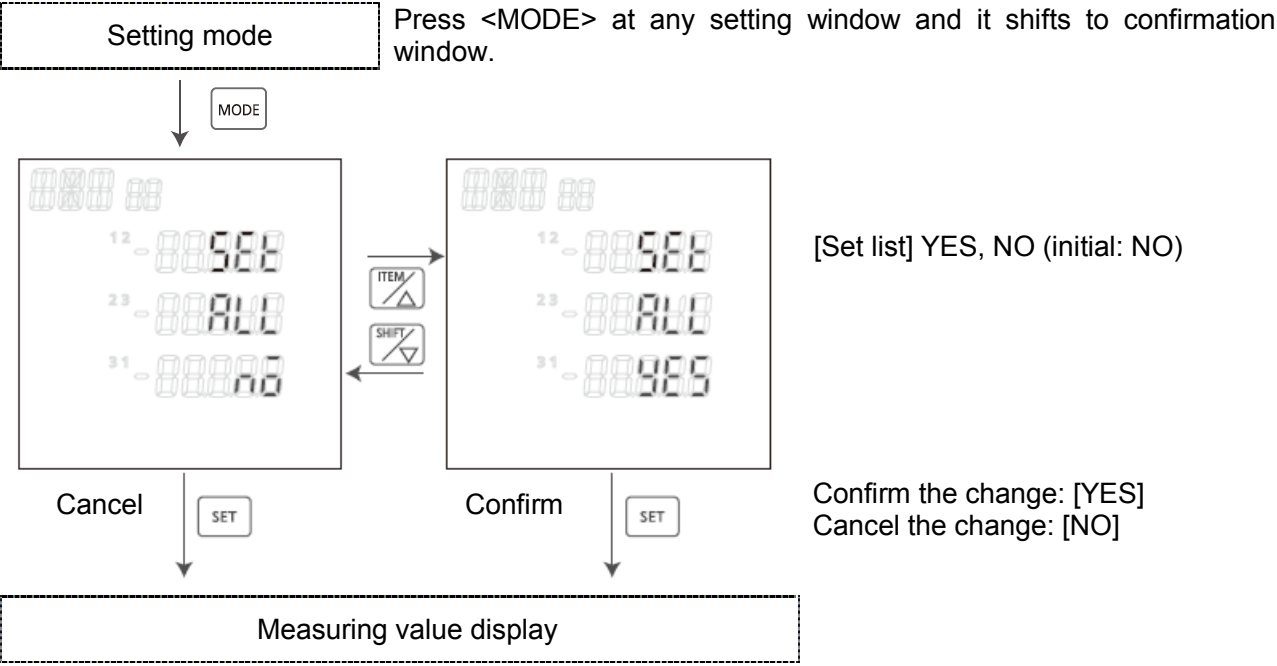

Chapter 5 Various Functions

5.1 Demand function

You can select demand calculation methods for KW9M Eco-POWER METER from the below.

- According to IEC61557-12
 1. Sliding block interval demand
 2. Fixed block interval demand
 3. Current demand

Please use this simple demand function as your standard. The value is not guaranteed.

Caution

(1)Definition of Demand

It is demand measurement in order to use by yourself as your standard.

5.1.1 Block interval demand

It calculates demand by setting interval and displays.

You can select sliding block or fixed block for interval.


It output demand alarm according to the setting conditions.

Sliding block

Set power interval by 1 to 60(min.) (every 1-min.). It calculates demand during latest finished interval and displays.


One interval is started every time that set for 'power demand interval 2'.

Ex.) Power demand interval: 15 min. Power demand interval 2: 1 min.

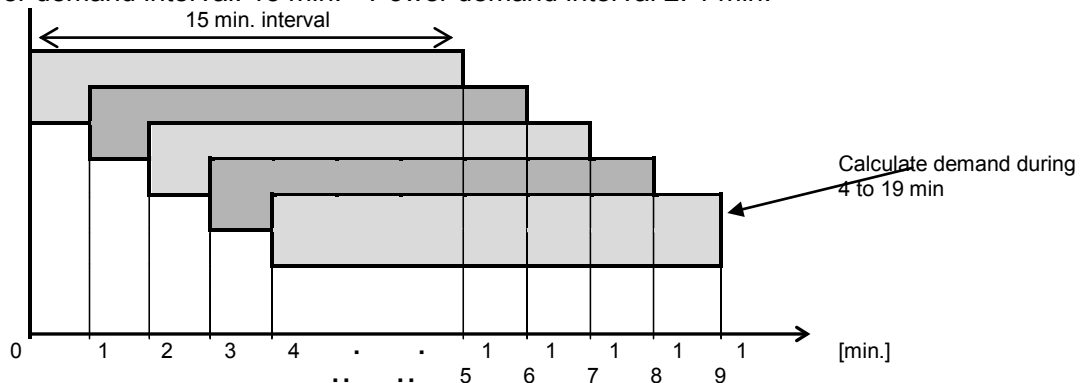

Fixed block

Set power interval by 1 to 60 (min.) (every 1-min.) It calculates demand during latest finished interval and displays. After one interval finishes, the next interval starts.

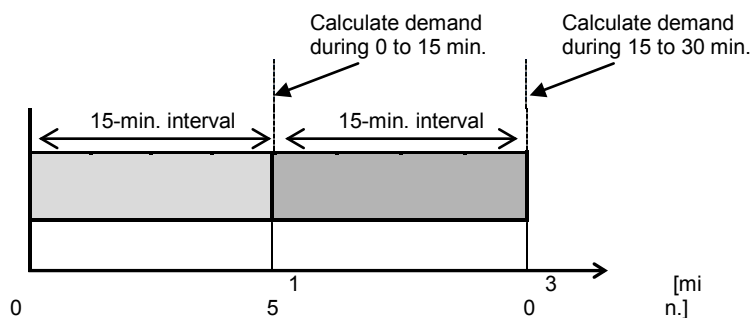


5.1.2 Current Demand

Current demand calculates the demand based on a thermal demand meter.

Current demand =

$(\text{Average of current} - \text{last current demand value}) \times 90\%(\text{fixed}) + \text{Last current demand value}$

In case of that a stable current flows for interval time, 90% of current value is displayed.

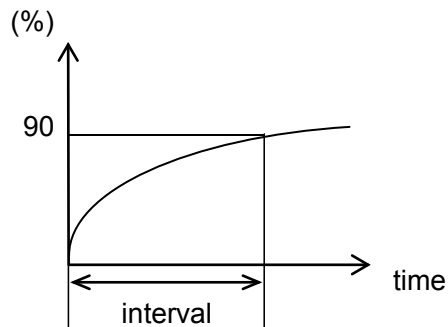

5.1.3 Max. demand value

Maximum value of measured demand value (active, reactive, apparent, active (export), reactive (export), current)) are considered to the max. demand value.

It records the max. demand value of each.

5.1.4 Working at power failure and at recovery

<At power failure>

- It stops the demand measurement.
- It records max. demand value in the internal memory.

<At recovery>

- It will start demand measuring with new span.


Chapter 6 Display of each Value

6.1 Working of Monitor display

【Shift the display mode】

Press <SHIFT/▽> during pressing <MODE>, it shifts measuring mode, logging mode and demand mode.

Press <MODE> to shift the setting mode.

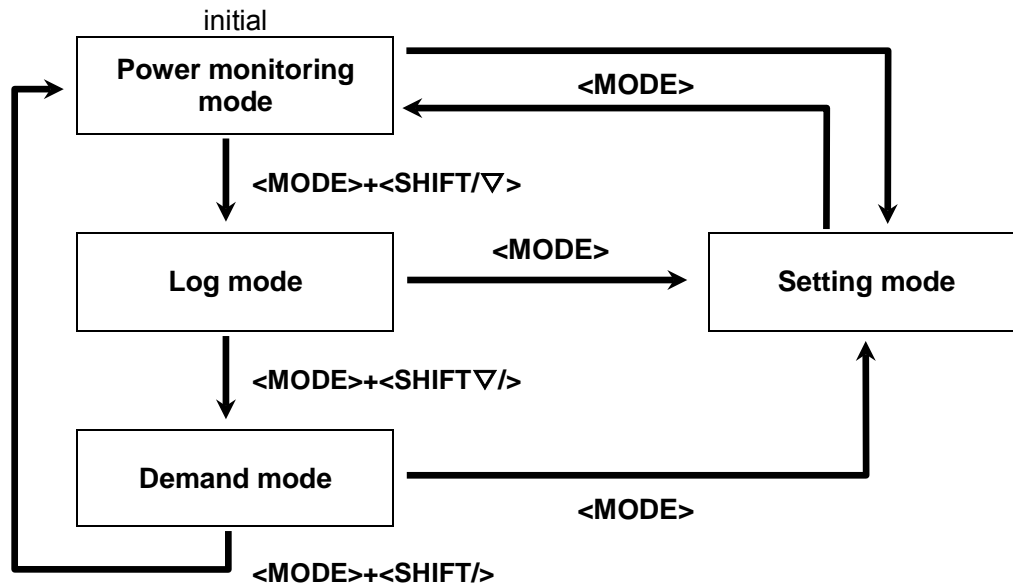



6.2 Working of Monitor Display

Arrow mark shows to press each key.

➡ <ITEM/Δ> ➡ SHIFT/▽>

<Single-phase two-wire system>

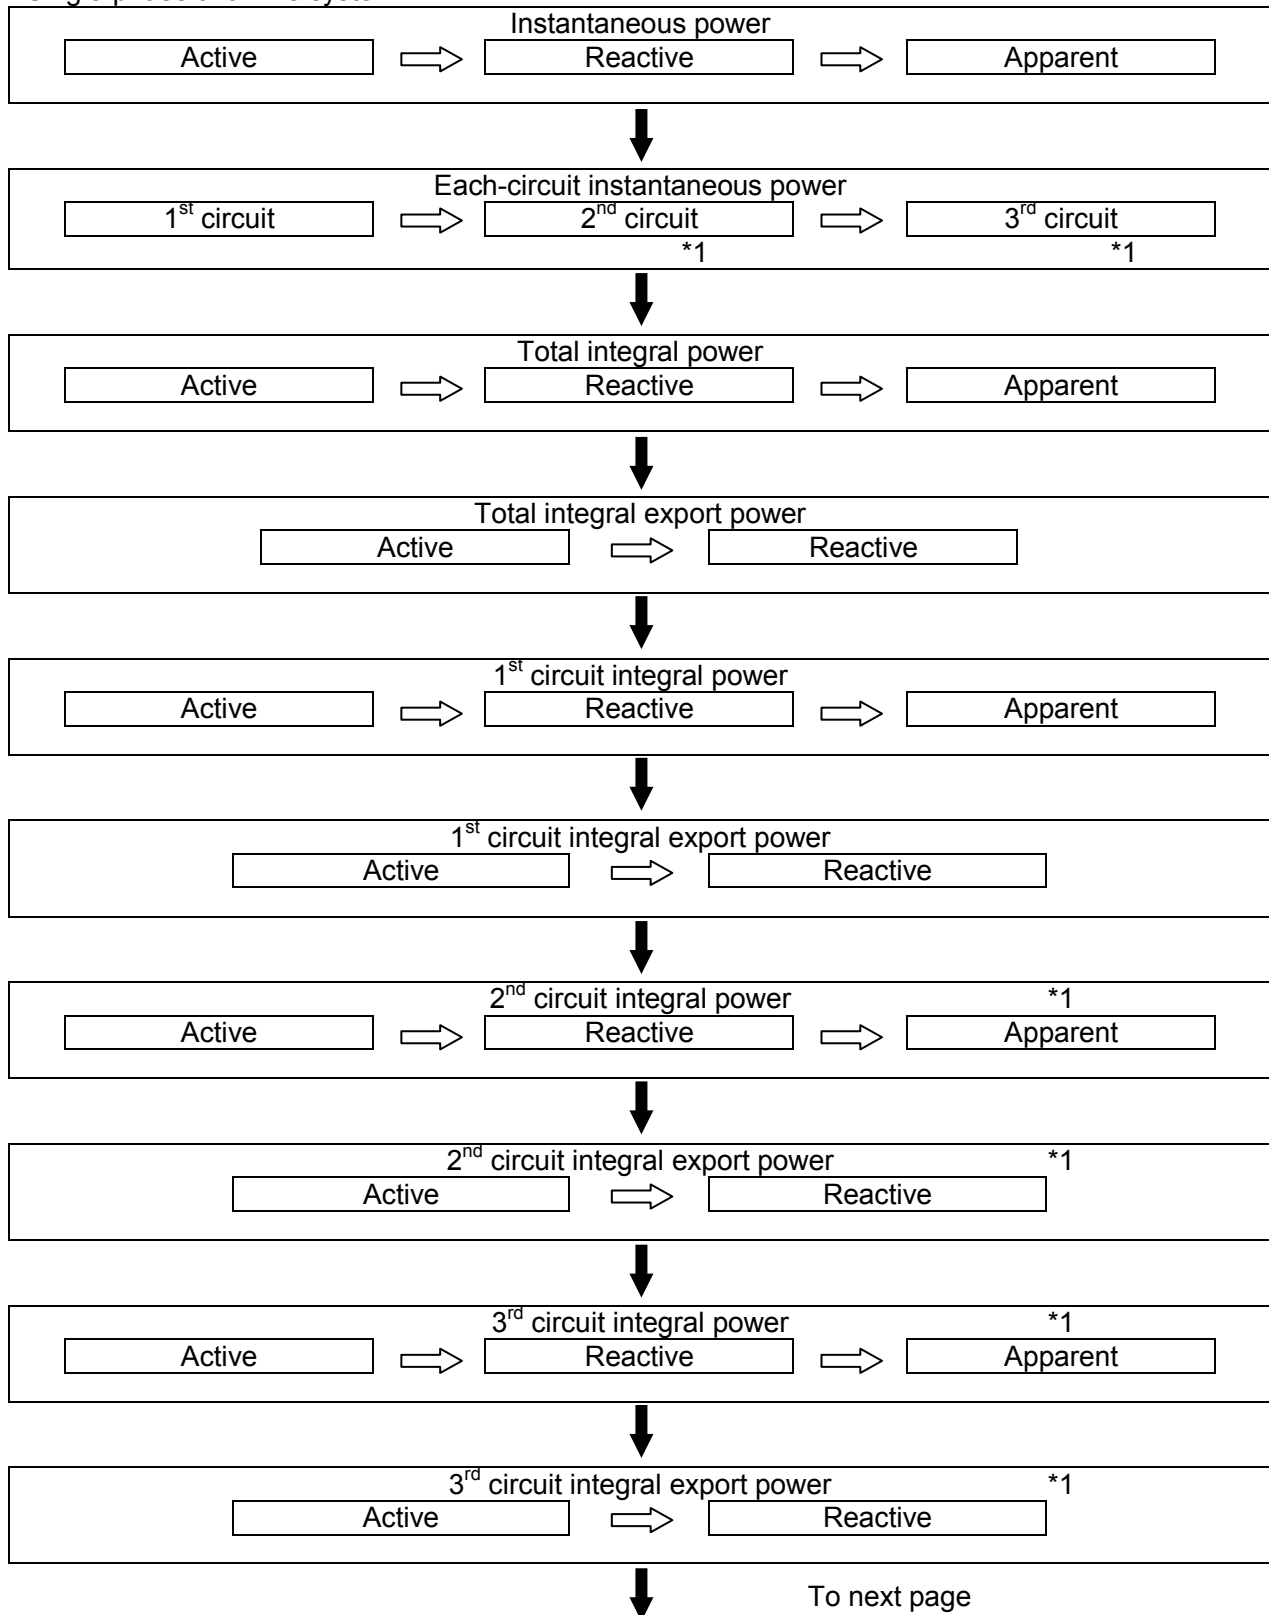

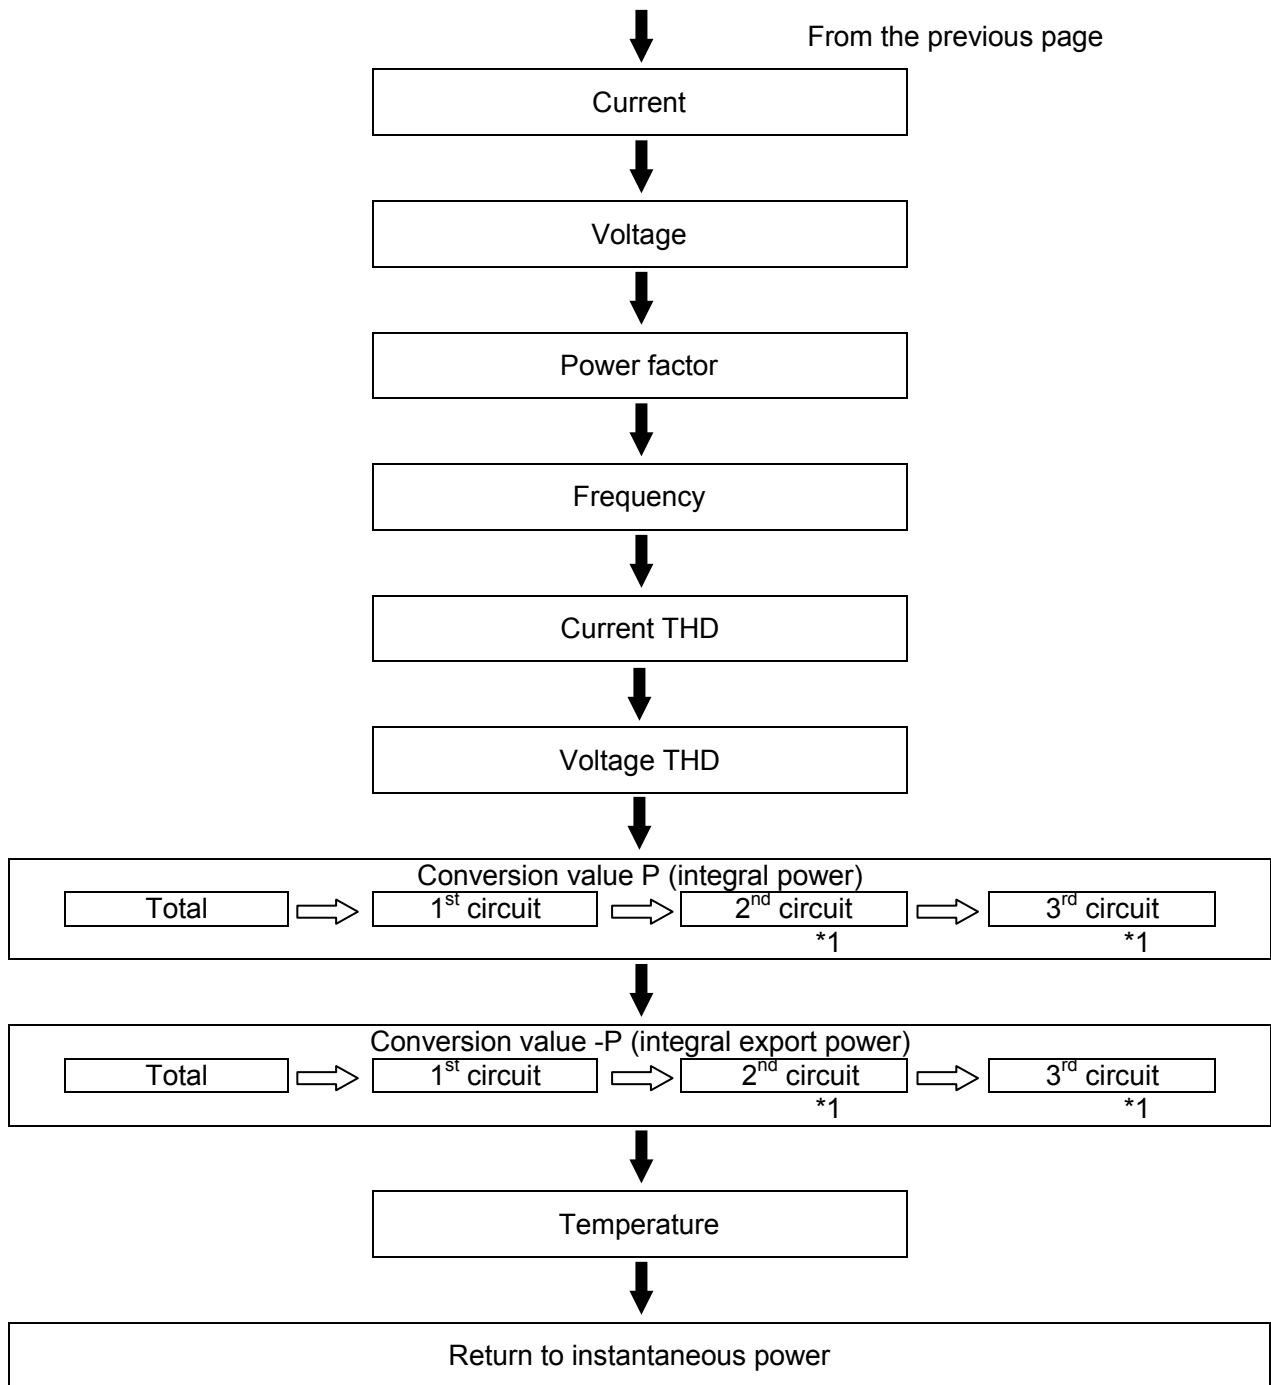


*1) When 2nd circuit and 3rd circuit are not measured, [0] are displayed.


Arrow mark shows to press each key.

➡ <ITEM/Δ>

⇨ <SHIFT/▽>

<Single-phase three-wire system>

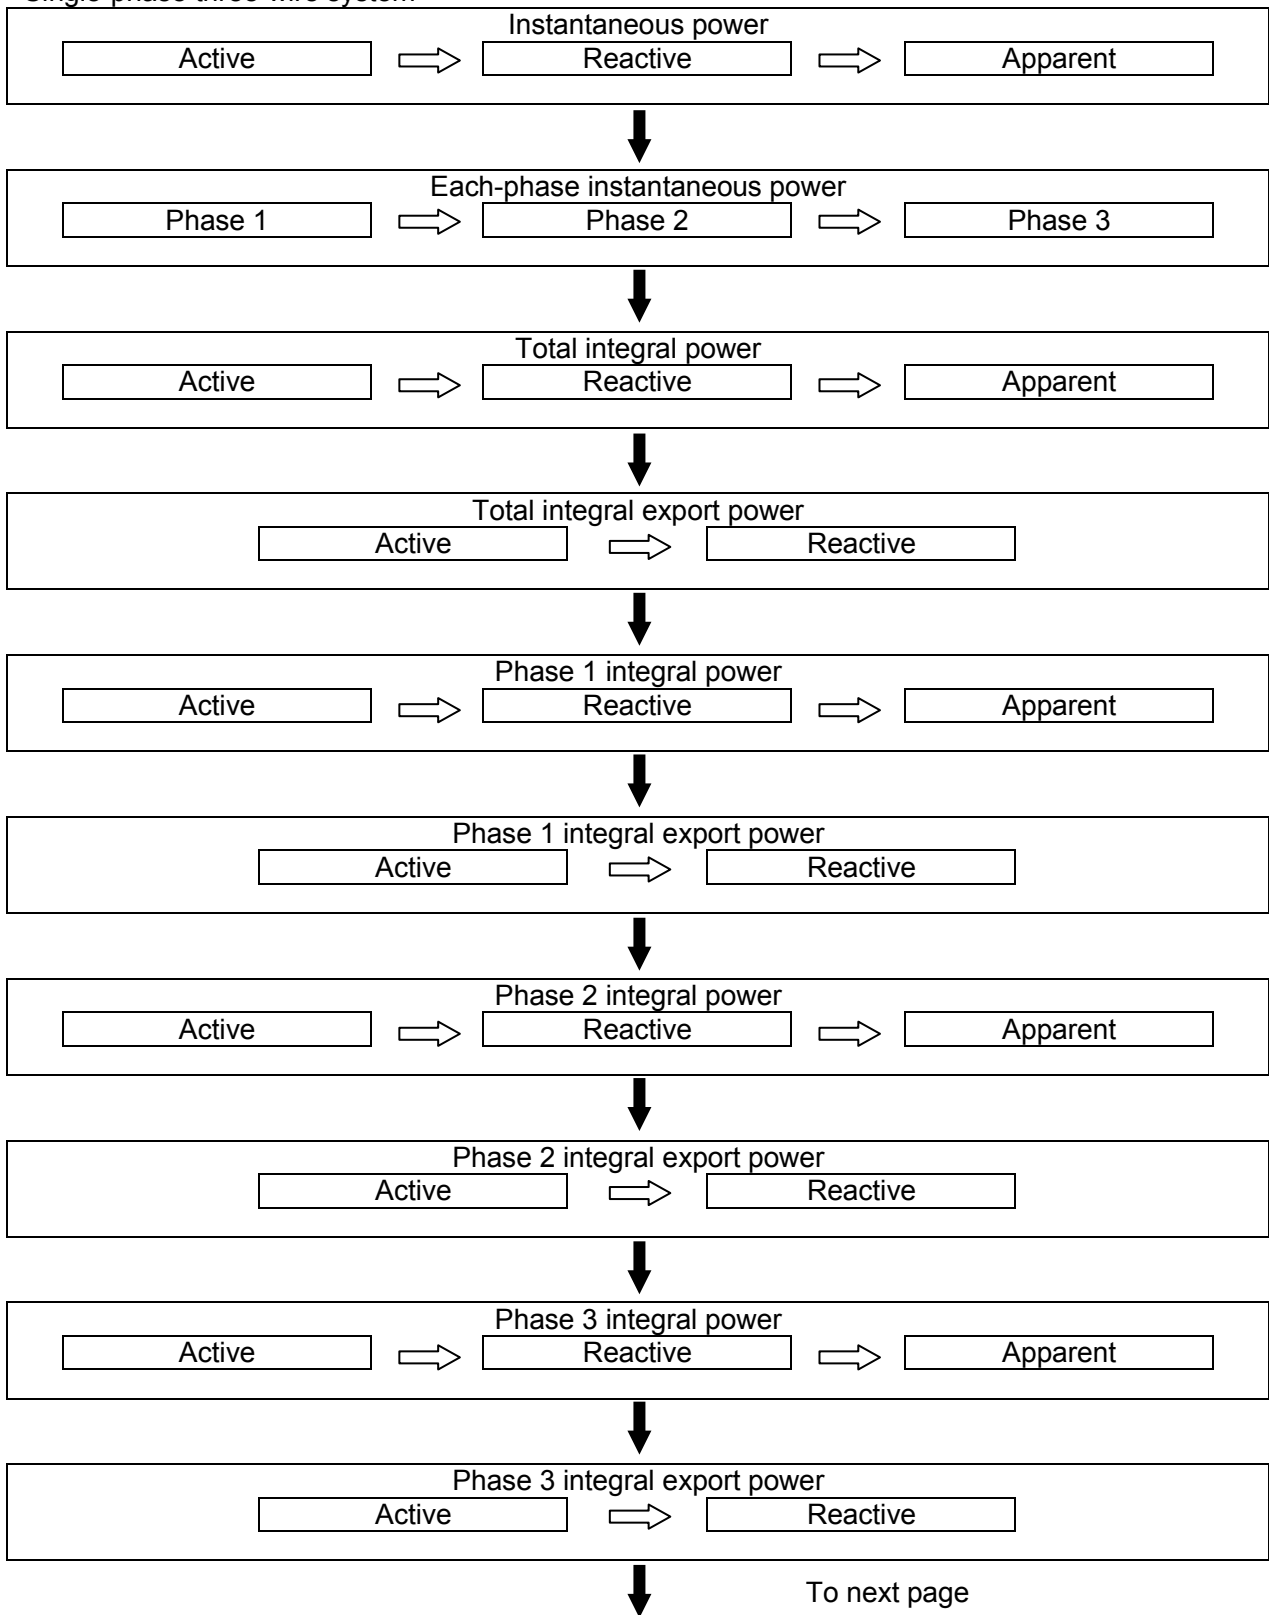

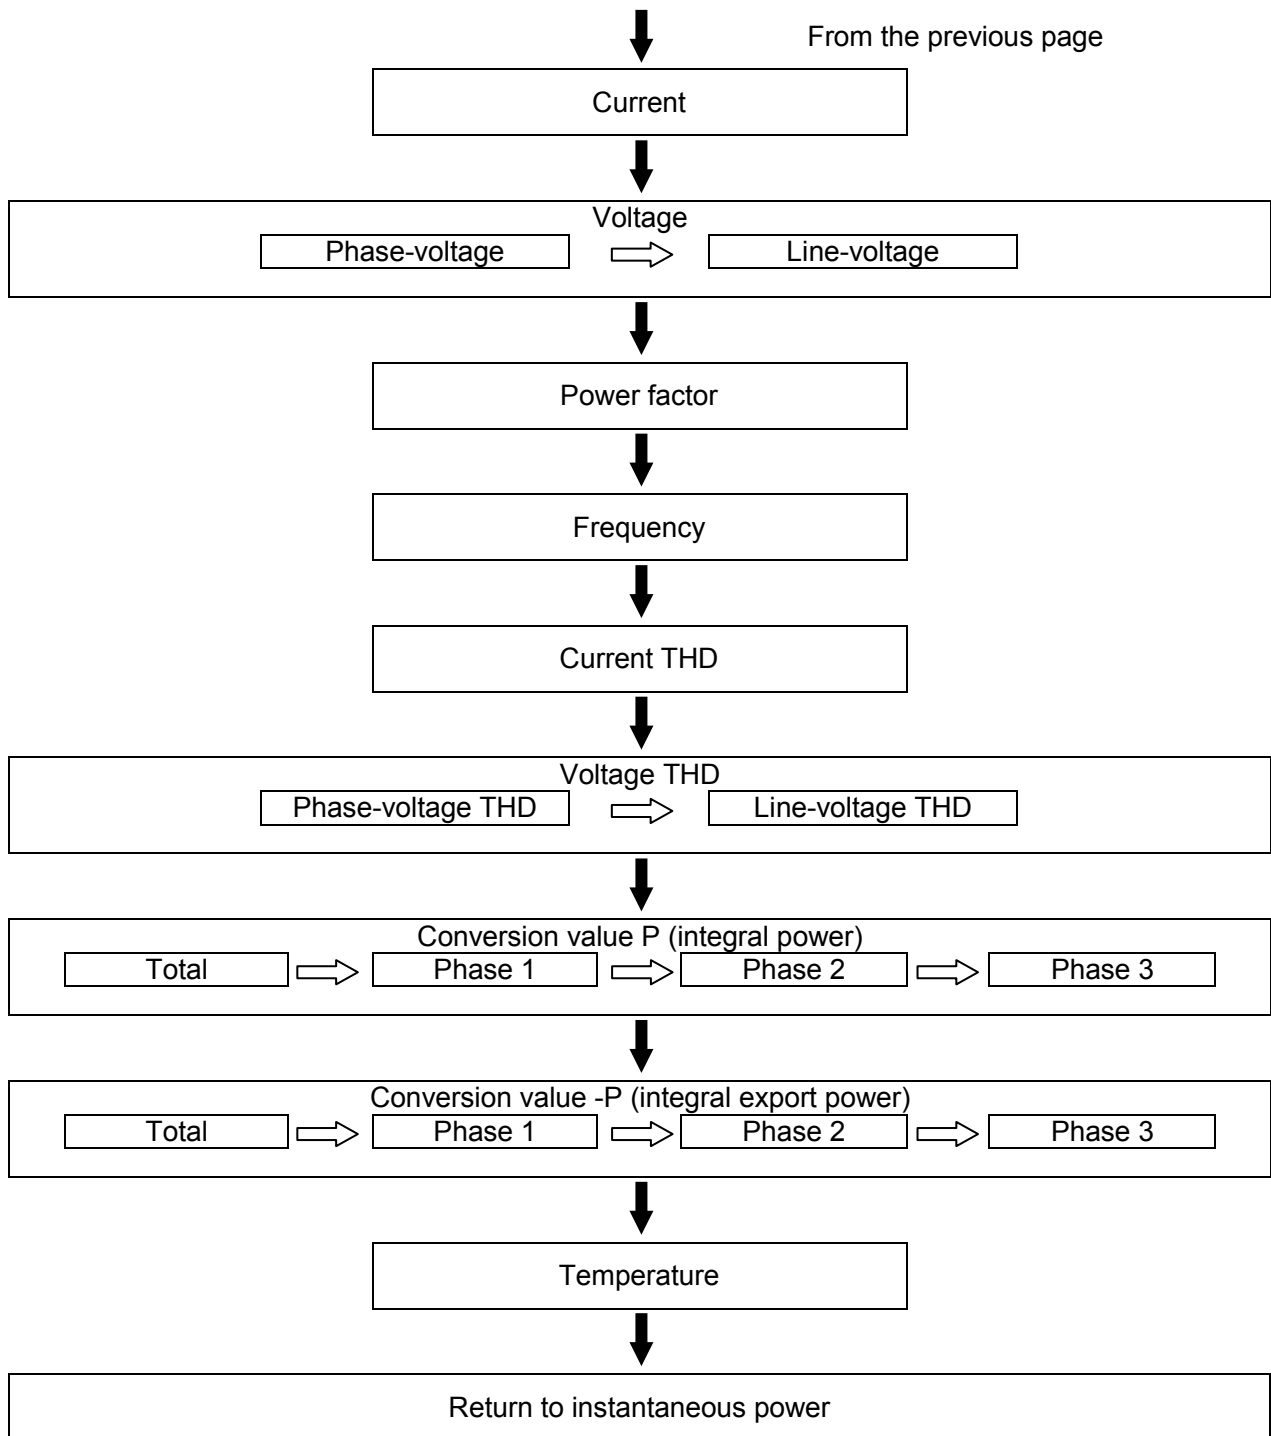


Arrow mark shows to press each key.

➡ <ITEM/Δ>

⇨ <SHIFT/▽>

<Three-phase three-wire system>

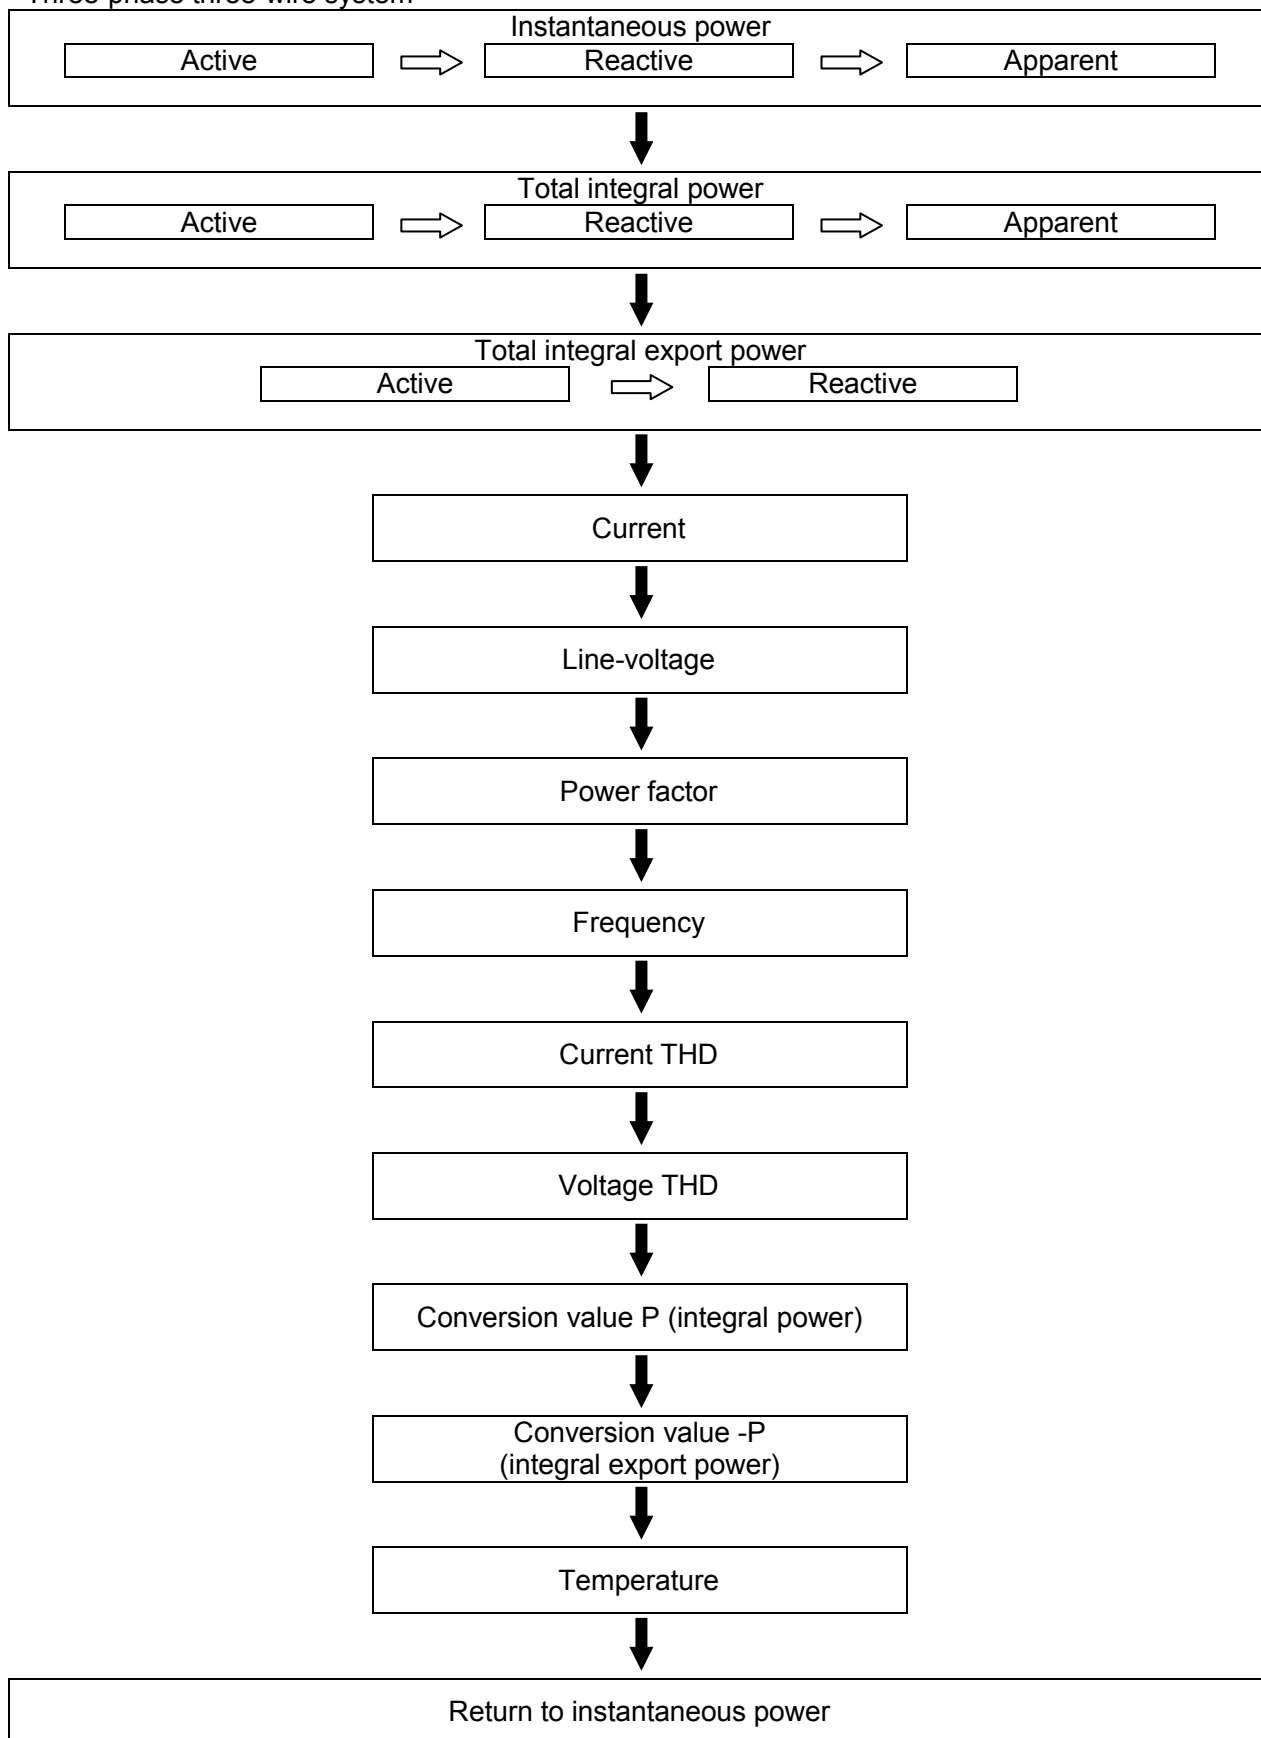



Arrow mark shows to press each key.

➡ <ITEM/Δ>

⇨ <SHIFT/▽>


<Three-phase four-wire system>

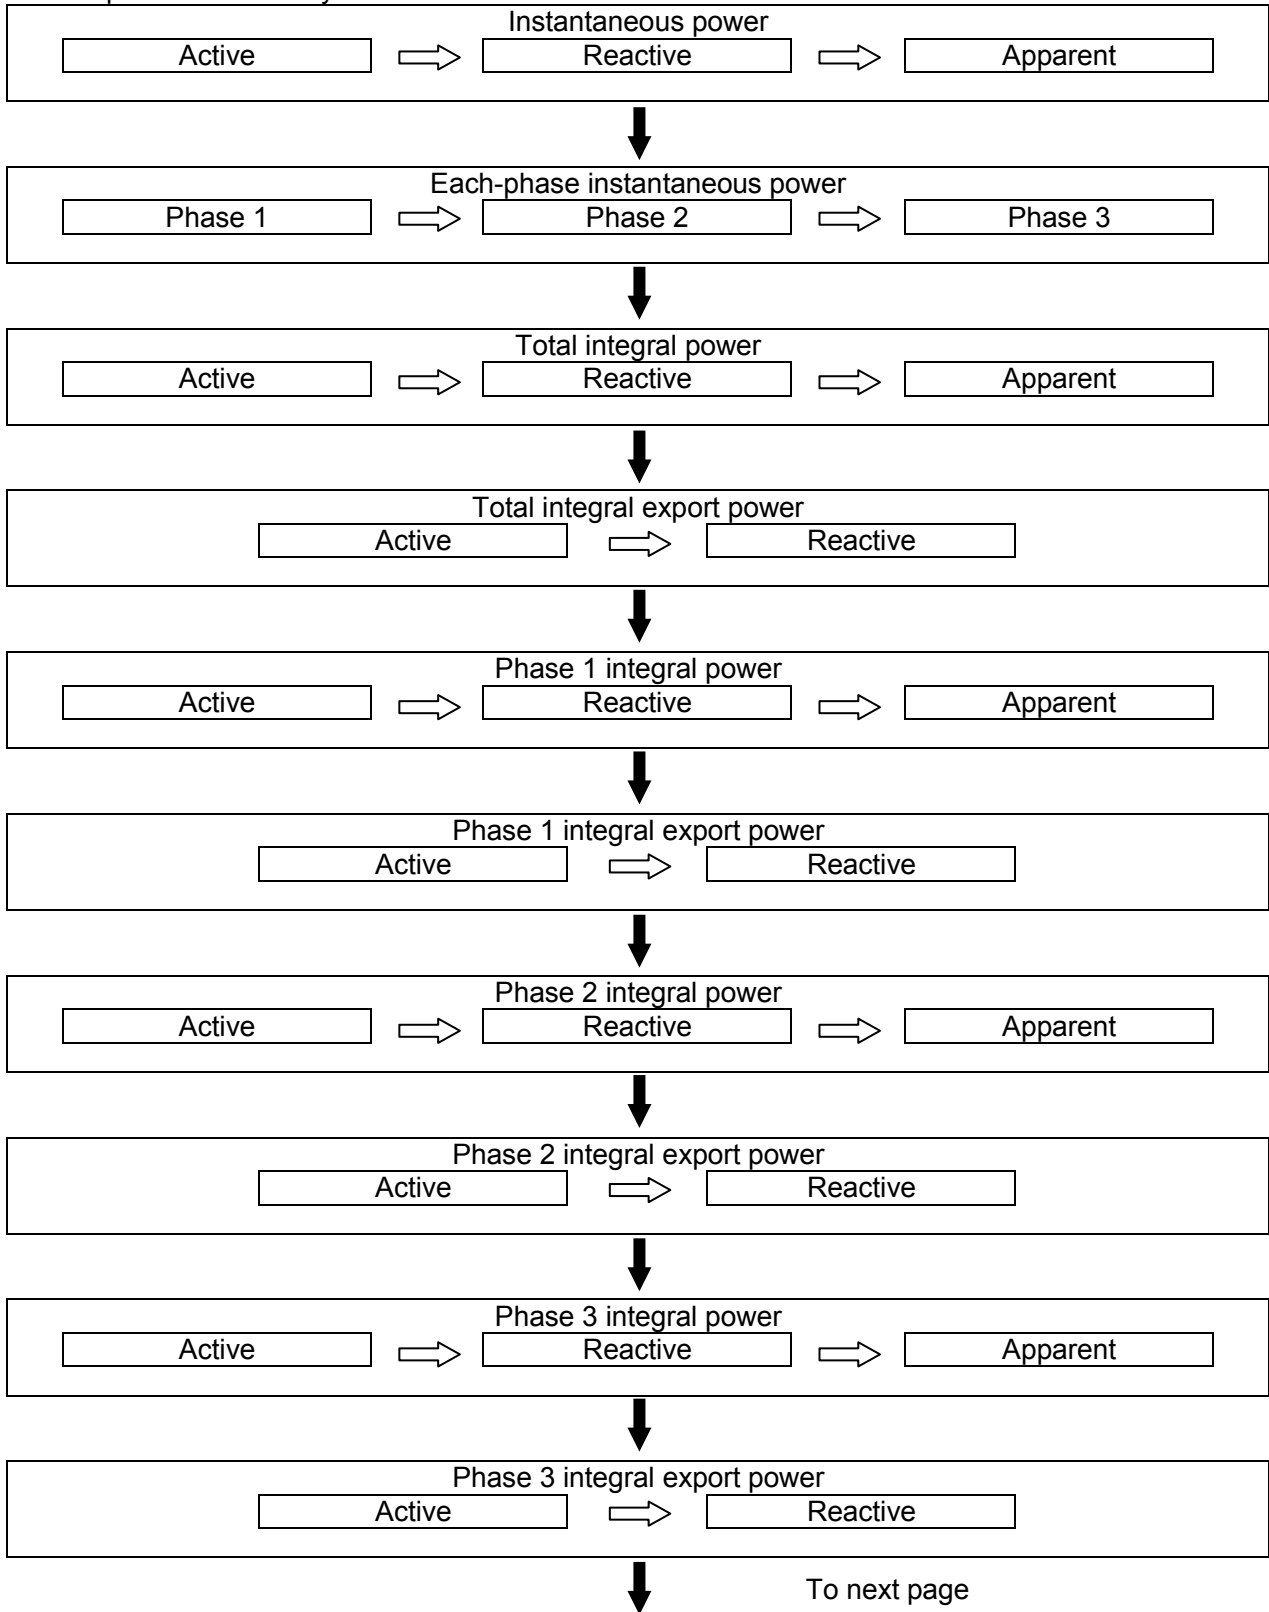

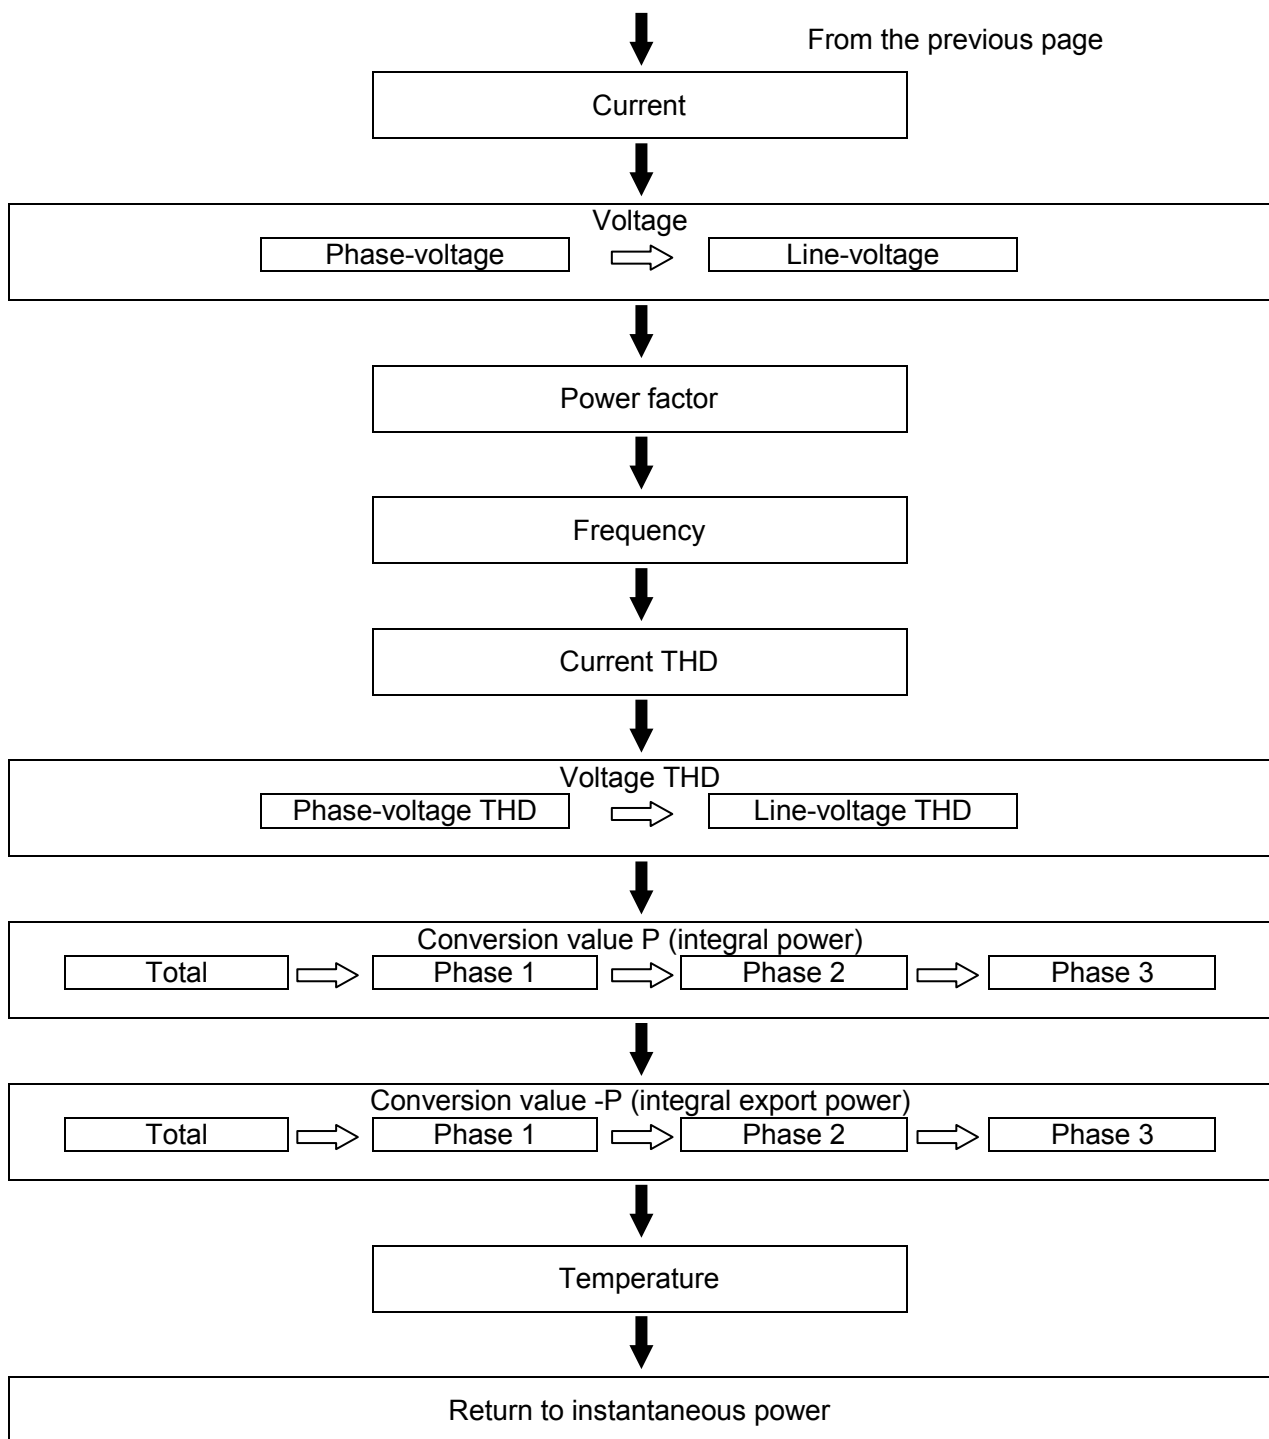

● Items that are displayed during the auto-display mode

When some value is set at auto-display setting, each integral value display is shifted automatically. If you press any key during auto-display mode, it returns the instantaneous power display. Items, which are not displayed according to the phase/wire system, are skipped

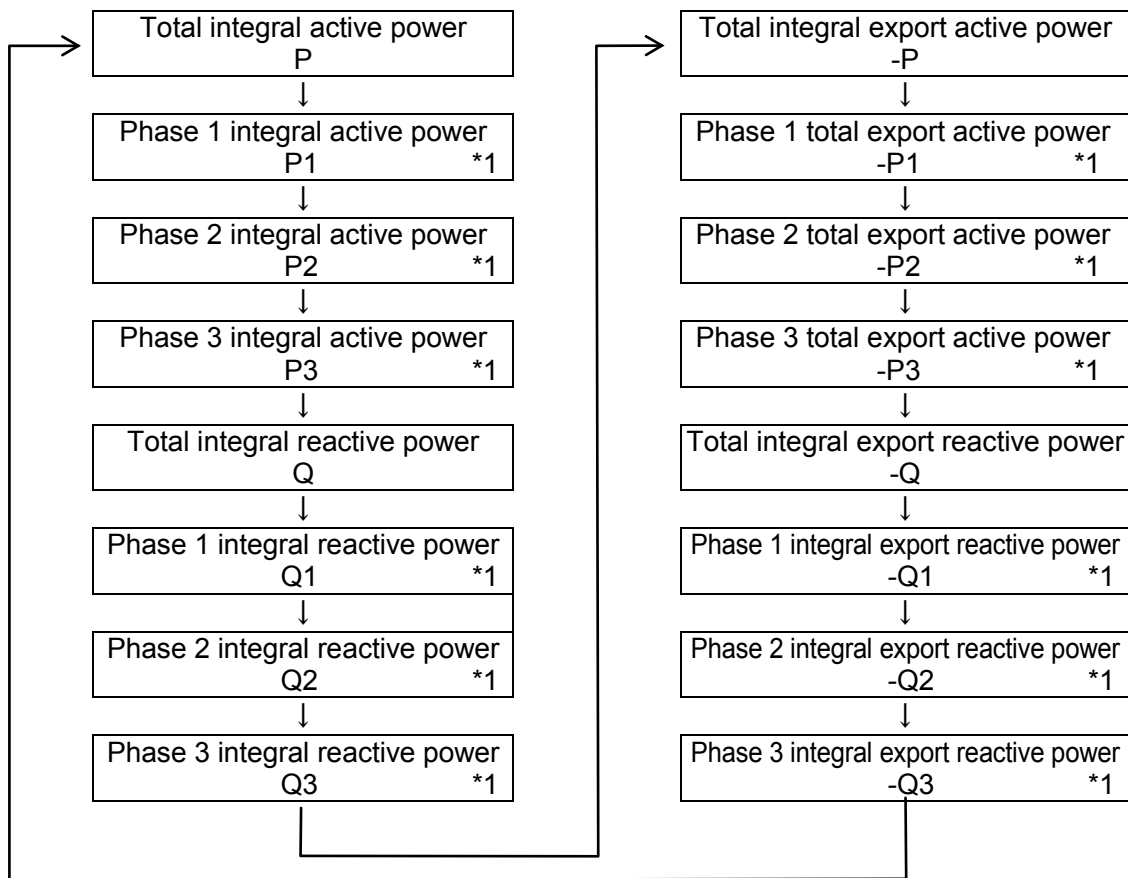


*1 Those are skipped when it set to three-phase three-wire system.

6.2.1 Instantaneous power


- The present instantaneous power of all phases or all circuits is displayed.
- Press <SHIFT/▽> to change active, reactive and apparent.

<1P2W/1P3W/3P4W>


Active

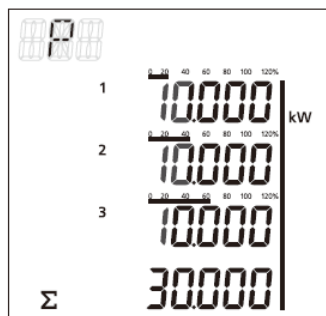

Reactive

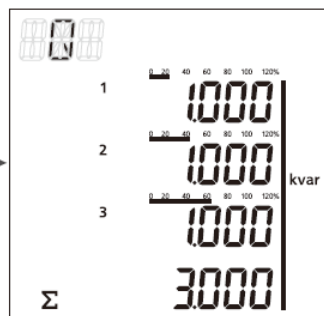

Apparent

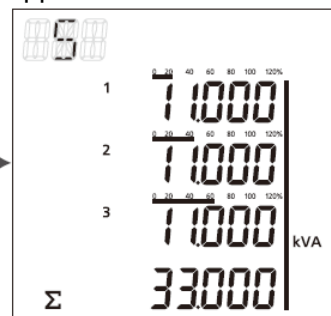


- Eco-POWER METER displays the power as below.


| Display | 1P2W | 1P3W | 3P4W |
|---------|-------------------------|---------|---------|
| 1 | 1 st circuit | R-phase | R-phase |
| 2 | 2 nd circuit | --- | S-phase |
| 3 | 3 rd circuit | T-phase | T-phase |

<3P3W>


Active

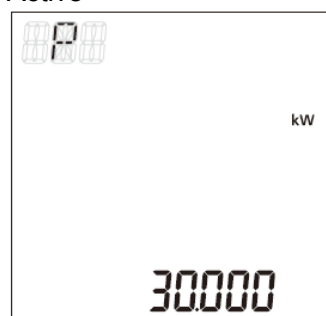

Reactive

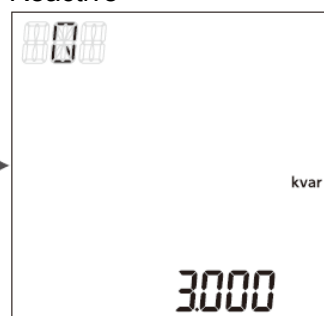

Apparent

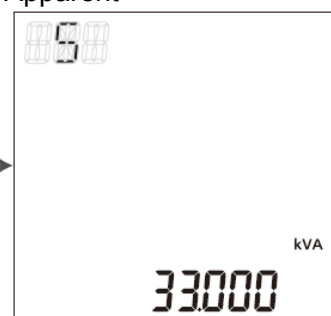


6.2.2 Instantaneous power of each phase / each circuit


- The present instantaneous power of each phase or each circuit is displayed.
(It doesn't display for 3P3W system.)
- Press <SHIFT/▽> to change phase 1 (1st circuit), phase 2 (2nd circuit) and phase 3 (3rd circuit).

<1P2W/1P3W/3P4W>


Phase 1/ 1st circuit

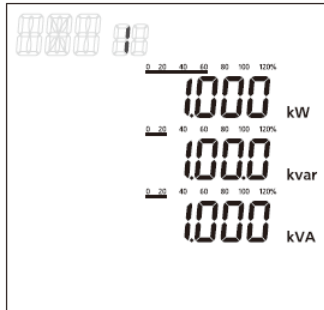

Phase 2/ 2nd circuit

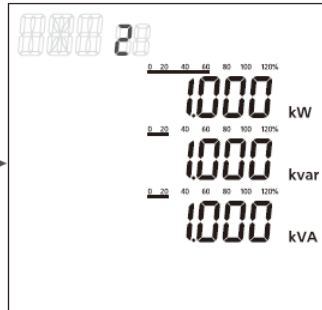

Phase 3/ 3rd circuit

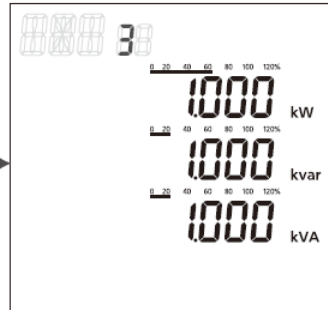


6.2.3 Total integral power


- The present total integral power is displayed.
- Press <SHIFT/▽> to change active, reactive and apparent.

<1P2W/1P3W/3P4W>

Active

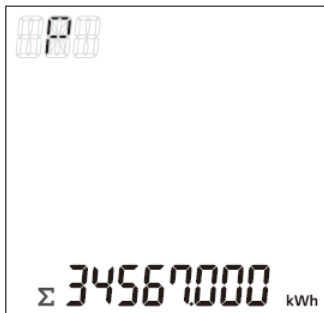

Reactive

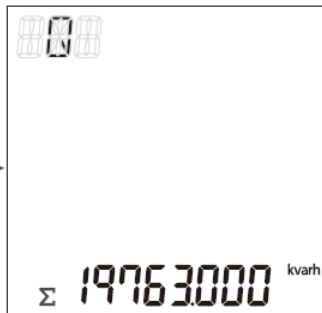

Apparent




<3P3W>

Active




Reactive

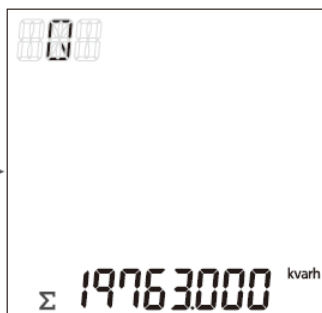

Apparent



- Total integral power is measured and displayed from 0.000 to 29999999 (kWh/kvarh/kVAh).
- The decimal point is changed automatically.



(After reach the full scale, 29999999, the value reverts to 0.000 but continues to measure.)


*At this window, present total integral power is displayed even if integral powers of each phase/ each circuit return to '0' after measuring to full-scale or reset. Therefore the total value of displayed integral power of each phase/each circuit is different from the value at this window.

6.2.4 Total integral export power


- The present total export power is displayed.
- Press <SHIFT/▽> to change active, reactive and apparent.

<1P2W/1P3W/3P4W>

Active

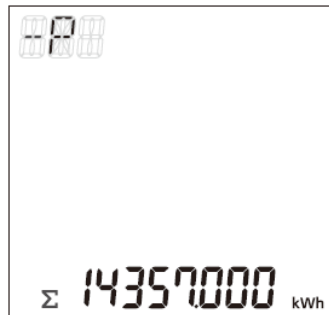

Reactive

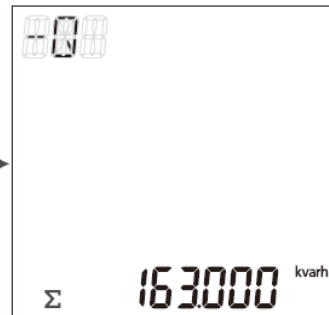


<3P3W>


Active



Reactive

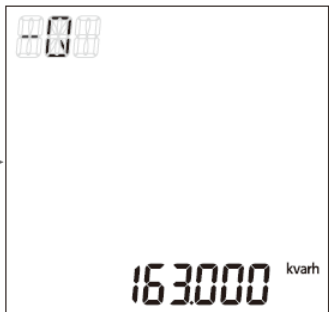

- Total integral power is measured and displayed from 0.000 to 29999999 (kWh/kvarh/kVAh).
- the decimal point is changed automatically.



(After reach the full scale, 29999999, the value reverts to 0.000 but continues to measure.)

*At this window, present total export power is displayed even if integral powers of each phase/ each circuit return to '0' after measuring to full-scale or reset. Therefore the total value of displayed integral power of each phase/each circuit is different from the value at this window.

6.2.5 Integral power of each phase / each circuit

- The present integral power of each phase or each circuit is displayed.
(It doesn't display for 3P3W system.)
- Press <SHIFT/▽> to change active, reactive and apparent.


<1P2W/1P3W/3P4W>

Phase 1/ 1st circuit


Active



Reactive

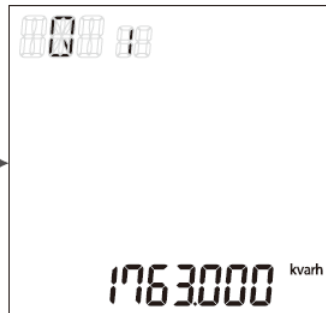

Apparent

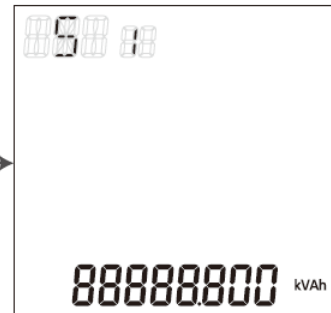


Phase 2/ 2nd circuit


Active



Reactive

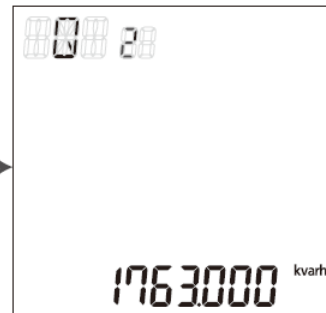


Apparent

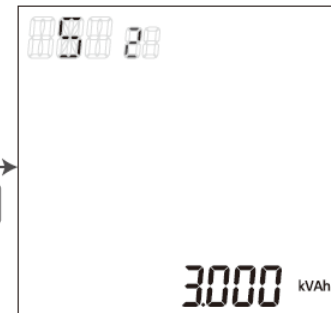


Phase 3/ 3rd circuit


Active

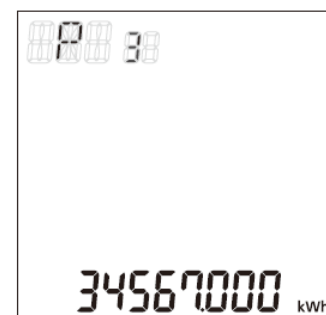

Reactive

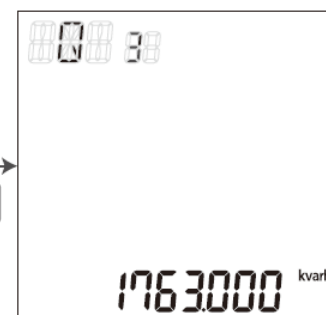

Apparent

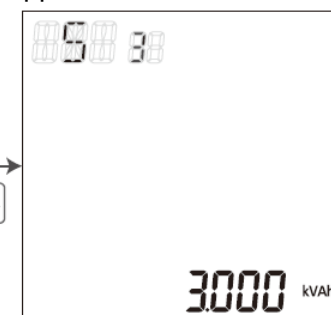

- Integral power is measured and displayed from 0.000 to 9999999.9 (kWh/kvarh/kVAh).
- The decimal points is changed automatically.

➤ 0.000 ➔ 99999.999 ➔ 100000.00 ➔ 999999.99 ➔ 9999999.9 ➔

(After reach the full scale, 9999999.9, the value reverts to 0.000 but continues to measure.)


6.2.6 Integral export power of each phase / each circuit

- The present integral export power of each phase or each circuit is displayed.
(It doesn't display for 3P3W system.)
- Press <SHIFT/▽> to change active, reactive and apparent.


<1P2W/1P3W/3P4W>

Phase 1/ 1st circuit

Active

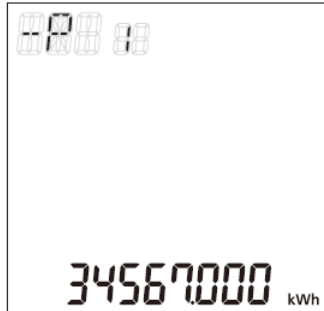

Reactive

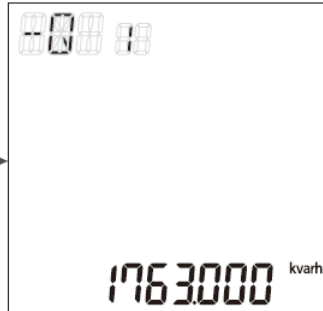


Phase 2/ 2nd circuit

Active



Reactive

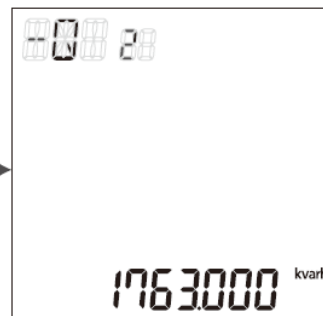


Phase 3/ 3rd circuit


Active



Reactive

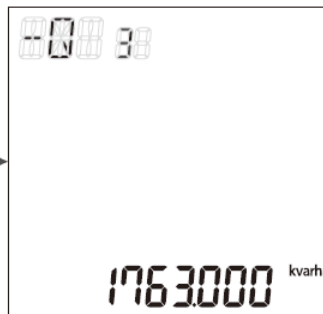

- Integral power is measured and displayed from 0.000 to 9999999.9 (kWh/kvarh).
- The decimal points is changed automatically.




(After reach the full scale, 9999999.9, the value reverts to 0.000 but continues to measure.)

How to reset integral power (active/reactive/apparent) and integral export power (active/reactive)

- You can reset the value at the optional functions settings.
Refer to 4.4.3 setting for optional functions in detail.

6.2.7 Current

- The present current value is displayed.

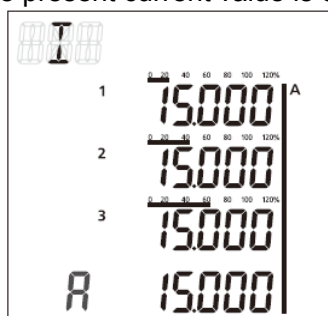

- It measures from 0.1% of CT secondary current.
- When input current exceeds 200% or the display range, it displays “- - - -”.
- Check and confirm the measurement environment.
- Current measuring points


Eco-POWER METER measures the current as below.

| Display | 1P2W | 1P3W | 3P3W 3P4W |
|---------|-----------------------------------|-----------|--------------|
| 1 | 1 st circuit R-current | R-current | R-current |
| 2 | 2 nd circuit R-current | N-current | S-current |
| 3 | 3 rd circuit R-current | T-current | T-current |


6.2.8 Voltage

- The present voltage is displayed.
 - Press <SHIFT/▽> to change phase voltage and line voltage.
- (Line voltage is not displayed for 1P2W system. Phase voltage is not displayed for 3P3W system.)

Phase voltage

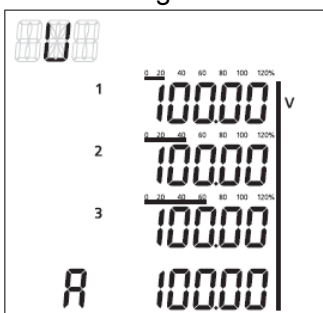

Line voltage

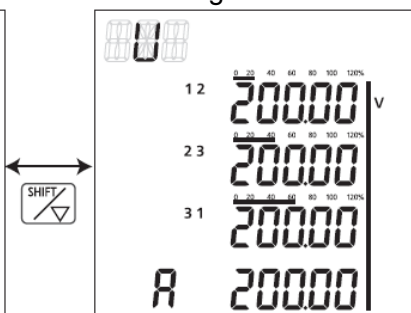

- When input voltage is under 3V (when VT ratio is 1.), it displays “0.0” and doesn’t measure.
- When input voltage exceeds 600V or the display range, it displays “- - - -”.
- Check and confirm the measurement environment.

- Voltage measuring points


Eco-POWER METER measures the voltage as below.

| Display | 1P2W | 1P3W | 3P3W | 3P4W |
|---------|----------------------------------------------------------|--------------------|--------------------|--------------------|
| 1 | R-voltage (L1-N) or 1 st circuit R-voltage | R-voltage (L1-N) | No display | R-voltage (L1-N) |
| 2 | None or 2 nd circuit R-voltage | None | | S-voltage (L2-N) |
| 3 | None or 3 rd circuit R-voltage | T-voltage (L3-N) | | T-voltage (L3-N) |
| 1 2 | No display | R-voltage (L1-N) | RS-voltage (L1-L2) | RS-voltage (L1-L2) |
| 2 3 | | T-voltage (L3-N) | ST-voltage (L2-L3) | ST-voltage (L2-L3) |
| 3 1 | | TR-voltage (L3-L1) | TR-voltage (L3-L1) | TR-voltage (L3-L1) |

6.2.9 Power factor

- The present power factor of the load is displayed.

<1P2W/1P3W/3P4W>

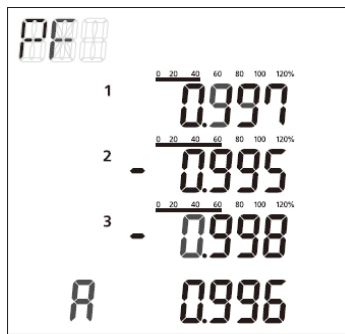

<3P3W>




*Power factor operation is a method assuming balanced load. The error might be big when it measures unbalanced load.

6.2.10 Frequency

- The present frequency is displayed.

<1P2W/1P3W/3P4W>

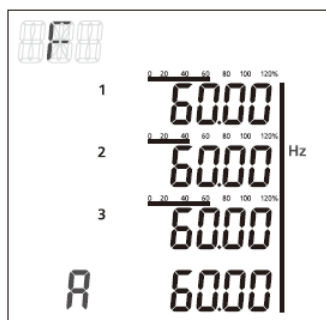

<3P3W>



6.2.11 Current THD


- The present THD for current is displayed.




6.2.12 Voltage THD

The present THD for voltage displayed.

<Phase-voltage THD>

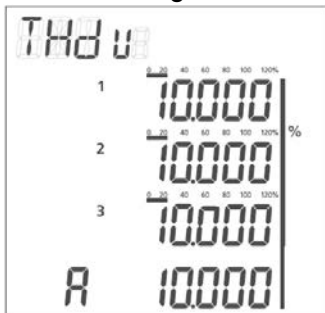


<Line-voltage THD>

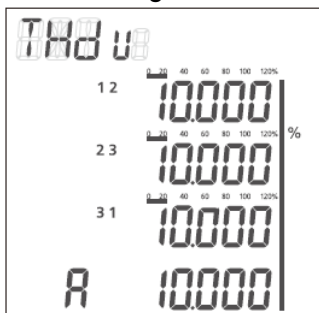


6.2.13 Conversion value for integral active power

- The conversion value for the present integral active power (P) is displayed.
(Only total conversion value is displayed for 3P3W system.)
- Press <SHIFT/▽> to change total, phase 1 (1st circuit), phase 2 (2nd circuit) and phase 3 (3rd circuit).

<1P2W/1P3W/3P4W>

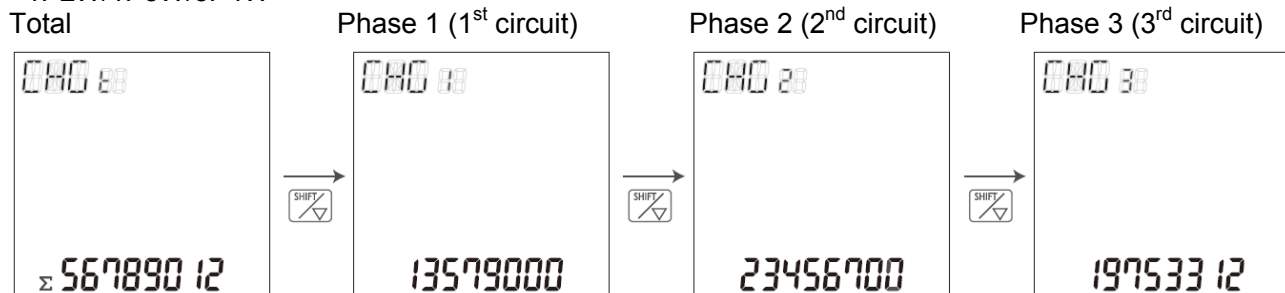

<3P3W>

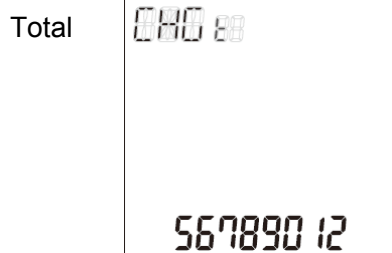


*The conversion value exceeds "99999999", "—" is displayed.
Check and confirm the measurement environment.

6.2.14 Conversion value for integral export power

- The conversion value for the present integral export active power (-P) is displayed.
(Only total conversion value is displayed for 3P3W.)
- Press <SHIFT/▽> to change total, phase 1 (1st circuit), phase 2 (2nd circuit) and phase 3 (3rd circuit).

<1P2W/1P3W/3P4W>

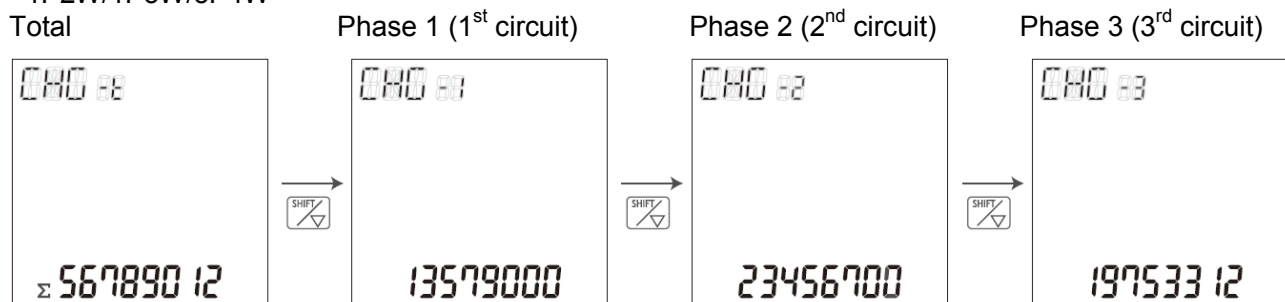


<3P3W>



*The conversion value exceeds "99999999", "—" is displayed.
Check and confirm the measurement environment.

6.2.15 Temperature

- The present temperature is displayed.

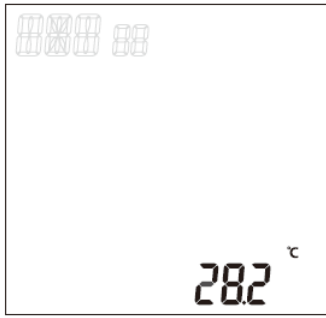


- Temperature measuring function is the simple function Use this only to check temperature trend and do not use for control.
- It measures by built-in thermistor, therefore it differs the measuring value according to the internal circuit conditions (communication, input current). Use it for your reference.
- When the temperature of the front is much different from the temperature of installed panel, when it cools inside the panel, it is impossible to measure correctly. Use the temperature correction function in order to adjust the temperature and use only to check temperature trend.

6.3 Working of Logging Mode


Each measured value is displayed as below. It differs according to the selected phase/wire system.
Arrow mark shows to press each key.

➡ <ITEM/Δ>

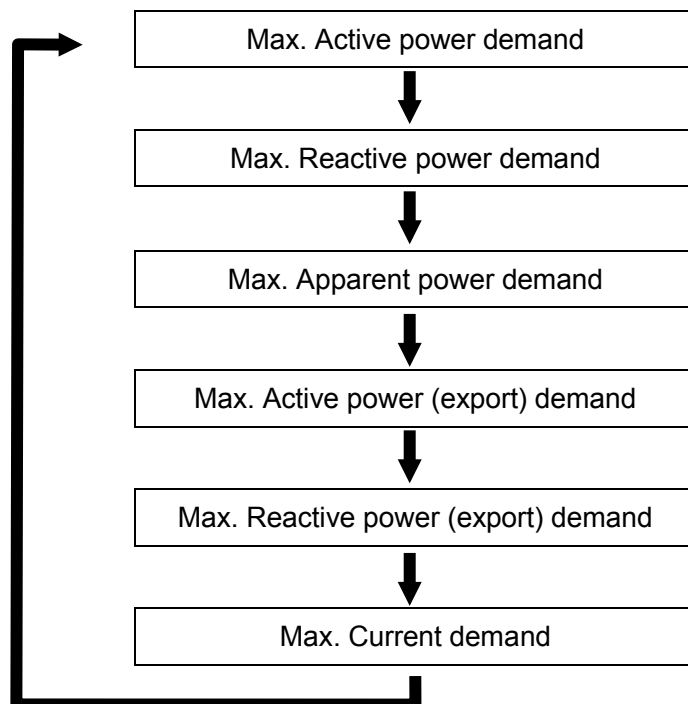

6.3.1 Max. demand value

Log data of peak demand is displayed.

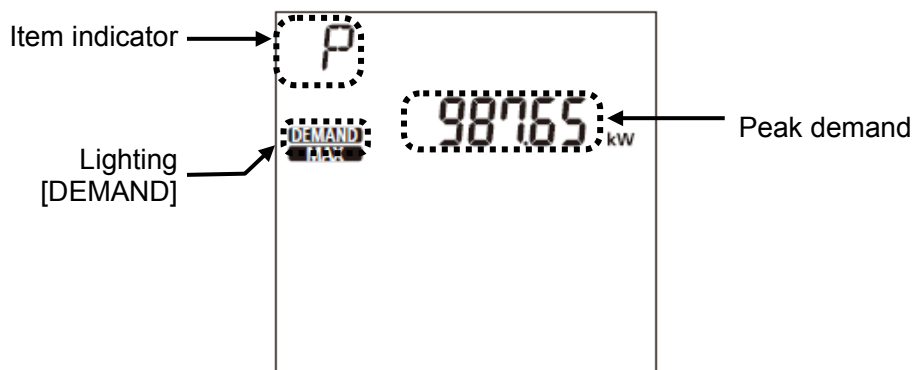

• Press <ITEM/Δ> to change items to display.

| Item | Display | |
|-------------------------------------|-----------|------|
| | Indicator | unit |
| Active power Peak demand | P | kW |
| Reactive power Peak demand | Q | kvar |
| Apparent power Peak demand | S | kVA |
| Active power (export) Peak demand | -P | kW |
| Reactive power (export) Peak demand | -Q | kvar |
| Current Peak demand | I | A |


6.4 Working of Demand Mode

Each measured value is displayed as below. It differs according to the selected demand type.

6.4.1 Block Interval Demand (Sliding block, fixed block)

Arrow mark shows to press each key.


➡ <ITEM/Δ> ⇨ <SHIFT/▽>

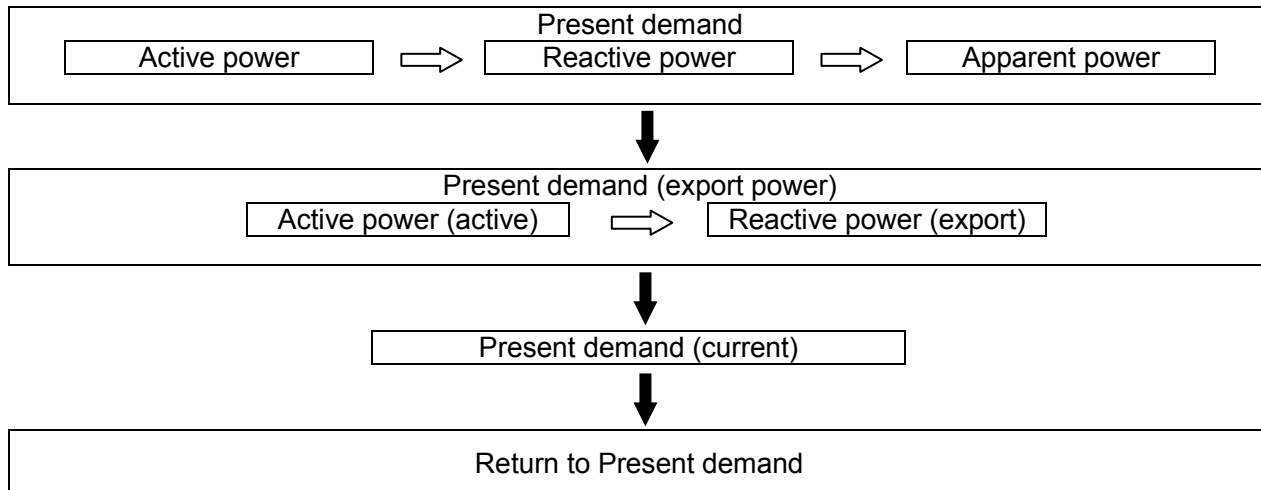


Present power demand

- Each demand value is displayed.
- Press <SHIFT/▽> to change active power, reactive power, apparent power.


Active power
present demand

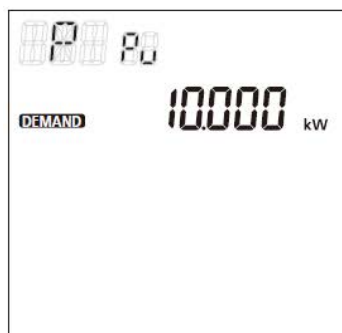

Reactive power
present demand

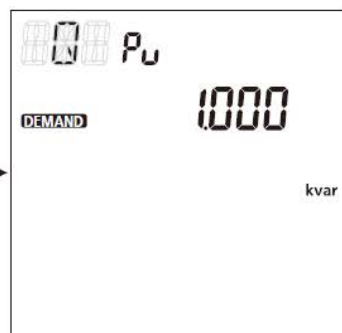

Apparent power
present demand

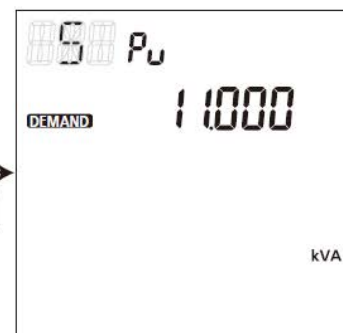


* [— — — — —] is displayed during the following cases.

- Until passing the setting time to start monitoring demand
- Demand value exceeds the display range
- Demand measurement status is set to 'Stop'.


Present export power demand

- Each demand value is displayed.
- Press <SHIFT/▽> to change active power (export), reactive power (export).

Active power (export)
present demand

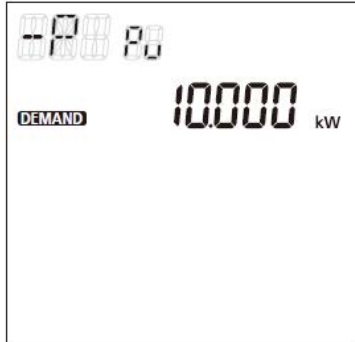

Reactive power (export)
present demand

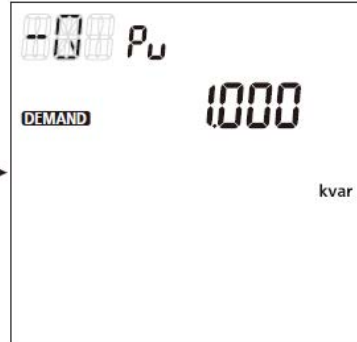


* [— — — — —] is displayed during the following cases.

- Until passing the setting time to start monitoring demand
- Demand value exceeds the display range
- Demand measurement status is set to 'Stop'.

Present current demand

- Present value of current demand is displayed.

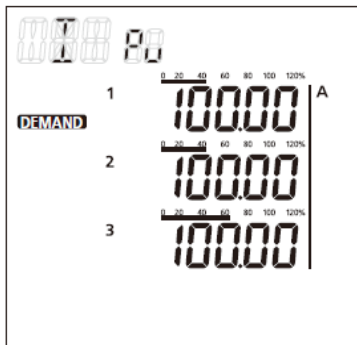


* [— — — — —] is displayed during the following cases.

- Until passing the setting time to start monitoring demand
- Demand value exceeds the display range
- Demand measurement status is set to 'Stop'.

Chapter 7 Communications

7.1 Communication Procedures

Communication starts with command transmission from the host computer (hereafter Master) and ends with the response of Eco-POWER METER (hereafter Slave).

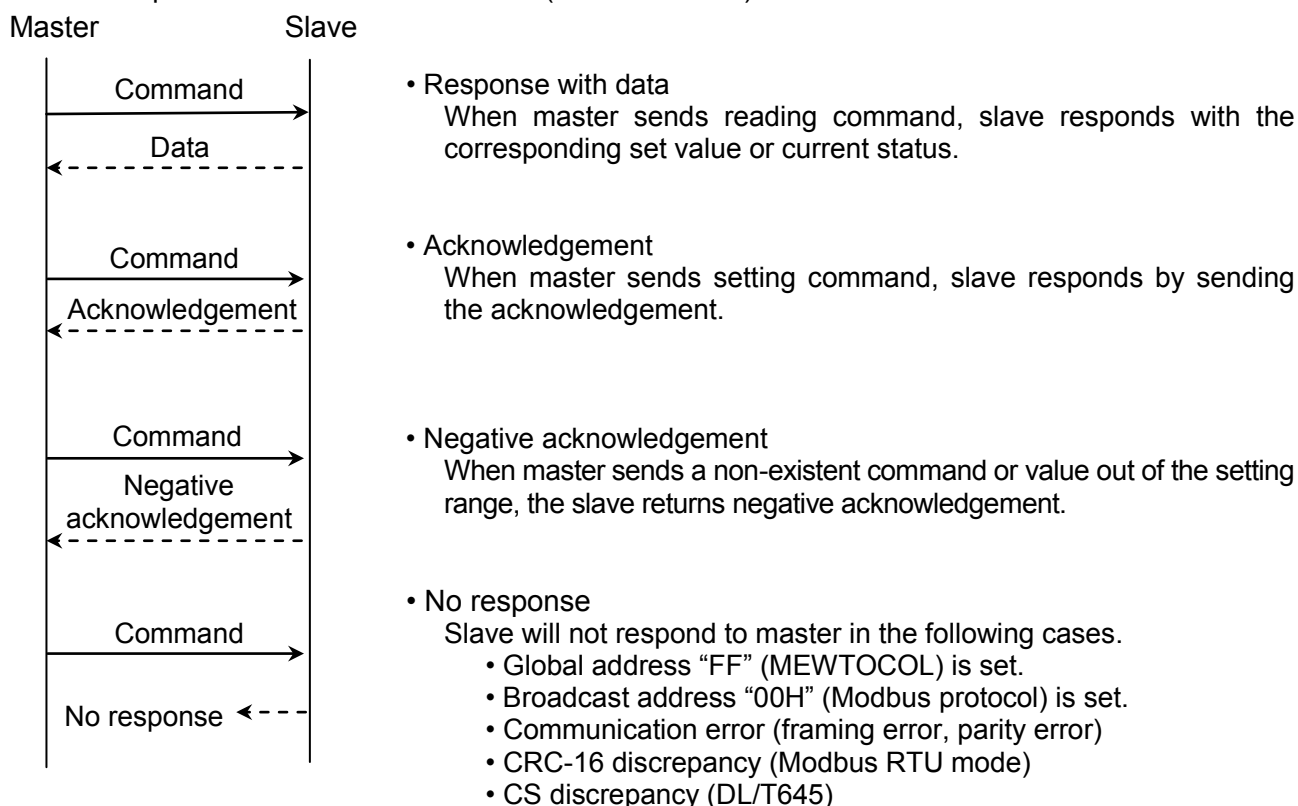

7.2 Communication timing

- ◆ The minimum access time from the master is 1 sec. (Minimum time for update the data)
Eco-POWER METER may not response due to noise and so on, be sure to check that it receives the response from Eco-POWER METER.
- ◆ In order to improve the communication quality, we recommend to send the transmission again.

Communication timing of RS485

◇Eco-POWER METER (Slave) side

When Eco-POWER METER (Slave) starts transmission to RS485 communication line, it is arranged so as to provide an idle status transmission period of about 1 to 99ms (setting available) before sending the response to ensure the synchronization on the receiving side. After sending the response, master can disconnect the transmitter from the communication line within transmission period 20ms.

◇Master side (Cautions of setting a program)

At communication, keep the following conditions.


- 1) Set the program so that the master can disconnect the transmitter from the communication line within the transmission period of about 20ms after sending the command in preparation for reception of the response from Eco-POWER METER (Slave).
- 2) To avoid collision of transmissions between the master and Eco-POWER METER (Slave), send a next command after checking that the master received the response.

7.3 MEWTOCOL Communication


7.3.1 Overview of MEWTOCOL-COM (RS485)

◆ Command and response functions

The computer sends commands (instructions) to Eco-POWER METER, and receives responses in return. This enables the computer and Eco-POWER METER to converse with each other, so that various kinds of information can be obtained and provided.

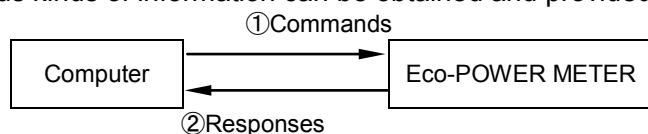

◆ Command and response formats

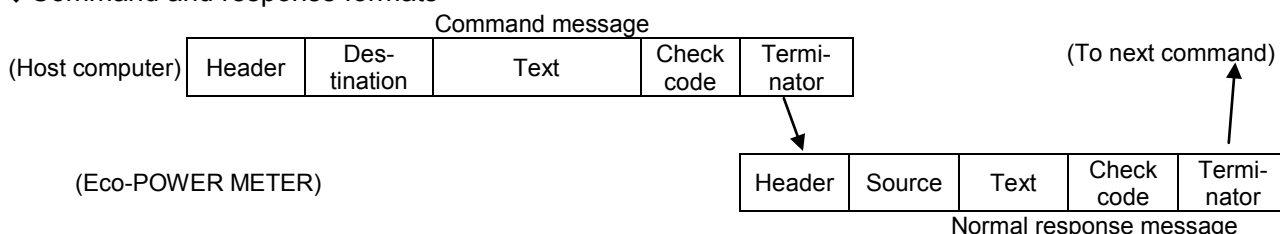

◇ Control codes

| Name | Character | ASCII code | Explanation |
|-----------------|-----------|------------|----------------------------------------------------------------------------|
| Header | % | 25H | Indicates the beginning of a message. |
| Command | # | 23H | Indicates that the data comprises a command message. |
| Normal response | \$ | 24H | Indicates that the data comprises a normal response message. |
| Error response | ! | 21H | Indicates that the data comprises a response message when an error occurs. |
| Terminator | CR | 0DH | Indicates the end of a message. |

◇ Destination and source AD (H), (L)

Two-digit decimal 01 to 99 (ASCII codes)

Command messages contain a station number for Eco-POWER METER that receives the message. When FF (ASCII code table) is used, however, the transmission is a global transmission (sent to all stations at once).

Note) When a global transmission is sent, no response to the command message is returned.

◇ Block check code Bcc (H), (L)

Two-digit hexadecimal 00 to FF (ASCII codes)

These are codes (horizontal parity) that are used to detect errors in the transmitted data.

If “**” is entered instead of “Bcc”, however, messages can be transmitted without the Bcc. In this case, the Bcc is included with the response

◇ Error code Err (H), (L)


Two-digit hexadecimal 00 to FF (ASCII codes)

These indicate the content if an error occurs.

◆ Bcc (Block Check Code)

-The Bcc is a code that carries out an error check using horizontal parity, to improve the reliability of the data being sent.

-The Bcc uses an exclusive OR from the header (%) to the final character of the text, and converts the 8-bit data into a 2-character ASCII code.

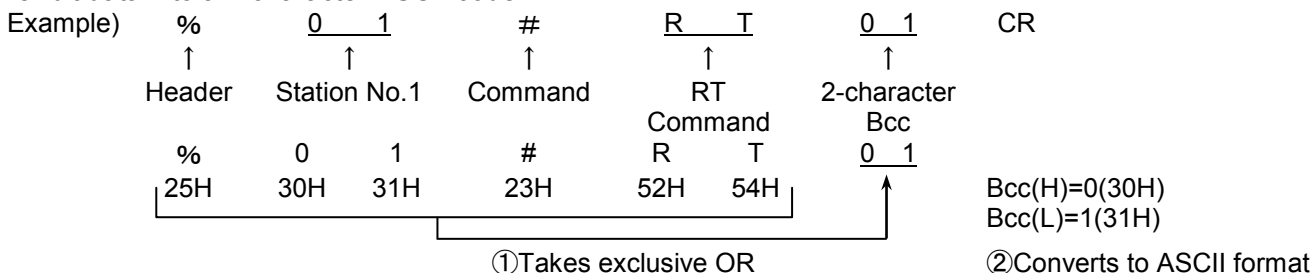

7.3.2 Data Register List

| Data register | Name | Unit | Kind of data | Range | R/W |
|---------------|------------------------------|---------------|----------------|-------------------------------------------------------------|-----|
| DT00050 | RS485 Device number | — | Unsigned 16bit | Mewtocol: 1 to 99 Modbus: 1 to 247 DL/T645: 0 to 9999 | R/W |
| DT00051 | RS485 Transmission speed | — | Unsigned 16bit | 0: 1200 1: 2400 2: 4800 3: 9600 4: 19200 5: 38400 | R/W |
| DT00052 | RS485 Transmission format | — | Unsigned 16bit | 0: 8bit-o 1: 8bit-n 2: 8bit-E | R/W |
| DT00053 | RS485 Stop bit | — | Unsigned 16bit | 1, 2 | R/W |
| DT00054 | RS485 Response time | 1ms | Unsigned 16bit | 1 to 99 | R/W |
| DT00055 | Phase/Wire | — | Unsigned 16bit | 0: 1P2W 1: 1P3W 2: 3P3W 3: 3P4W | R/W |
| DT00056 | CT type (2 nd) | Rated A (rms) | Unsigned 16bit | 1, 5 | R/W |
| DT00057 | Primary side current of CT | 1A | Unsigned 16bit | 1 to 65535 | R/W |
| DT00058 | VT ratio | 0.01 | Unsigned 16bit | 100 to 60000 | R/W |
| DT00059 | Temperature correction value | 0.1°C | Signed 16bit | -100.0 to 100.0 | R/W |
| DT00065 | Update cycle | 100ms | Unsigned 16bit | 1 to 10 | R/W |
| DT00070 | Auto-off | 1min | Unsigned 16bit | 0 to 99 (0: always ON) | R/W |
| DT00087 | Conversion rate (-P) | 0.01 | Unsigned 16bit | 0 to 9999 | R/W |
| DT00093 | Conversion rate (P) | 0.01 | Unsigned 16bit | 0 to 9999 | R/W |
| DT00094 | Password | — | Unsigned 16bit | 0 to 9999 | R/W |
| DT00095 | Auto display start | 1min | Unsigned 16bit | 0 to 99 (0: fix display item) | R/W |
| DT00096 | Display cycle | 1sec | Unsigned 16bit | 1 to 99 | R/W |
| DT00097 | Luminance | — | Unsigned 16bit | 1 to 5 (dark to light) | R/W |
| DT00098 | Protocol | — | Unsigned 16bit | 0: MEWTOCOL 1: MODBUS 2: DL/T645 | R/W |
| DT30108 | Power demand type | — | Unsigned 16bit | 1:sliding block, 2:fixed block | R/W |
| DT30109 | Power demand interval1 | 1min, | Unsigned 16bit | 1 to 60 | R/W |
| DT30110 | Power demand interval2 | 1min, | Unsigned 16bit | 1 to 60 | R/W |
| DT30111 | Current demand interval | 1min, | Unsigned 16bit | 1 to 60 | R/W |
| DT30200 | Demand measurement status | — | Unsigned 16bit | 0: Stop, 1: Start | R/W |
| DT30300 | Reset all integral value | — | Unsigned 16bit | 0:No 1:Yes | R/W |
| DT30301 | Reset integral value 1 | — | Unsigned 16bit | 0:No 1:Yes | R/W |
| DT30302 | Reset integral value 2 | — | Unsigned 16bit | 0:No 1:Yes | R/W |
| DT30303 | Reset integral value 3 | — | Unsigned 16bit | 0:No 1:Yes | R/W |
| DT30306 | Reset logging data | — | Unsigned 16bit | 0:No 1:Yes | R/W |

| Data register | Name | Unit | Kind of data | Range | R/W |
|---------------|--------------------------------------|-----------|----------------|---------------------------|-----|
| DT00100 | Integral active power (1) | 0.01kWh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00101 | | | | | |
| DT00102 | Integral active power (2) | 0.01kWh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00103 | | | | | |
| DT00104 | Integral active power (3) | 0.01kWh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00105 | | | | | |
| DT00106 | Total integral active power | 0.01kWh | Unsigned 32bit | 0 to 2999999997 | R |
| DT00107 | | | | | |
| DT00108 | Integral reactive power (1) | 0.01kvarh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00109 | | | | | |
| DT00110 | Integral reactive power (2) | 0.01kvarh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00111 | | | | | |
| DT00112 | Integral reactive power (3) | 0.01kvarh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00113 | | | | | |
| DT00114 | Total integral reactive power | 0.01kvarh | Unsigned 32bit | 0 to 2999999997 | R |
| DT00115 | | | | | |
| DT00116 | Integral apparent power (1) | 0.01kVAh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00117 | | | | | |
| DT00118 | Integral apparent power (2) | 0.01kVAh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00119 | | | | | |
| DT00120 | Integral apparent power (3) | 0.01kVAh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00121 | | | | | |
| DT00122 | Total integral apparent power | 0.01kVAh | Unsigned 32bit | 0 to 2999999997 | R |
| DT00123 | | | | | |
| DT00124 | Integral export active power (1) | 0.01kWh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00125 | | | | | |
| DT00126 | Integral export active power (2) | 0.01kWh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00127 | | | | | |
| DT00128 | Integral export active power (3) | 0.01kWh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00129 | | | | | |
| DT00130 | Total integral export active power | 0.01kWh | Unsigned 32bit | 0 to 2999999997 | R |
| DT00131 | | | | | |
| DT00132 | Integral export reactive power (1) | 0.01kvarh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00133 | | | | | |
| DT00134 | Integral export reactive power (2) | 0.01kvarh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00135 | | | | | |
| DT00136 | Integral export reactive power (3) | 0.01kvarh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00137 | | | | | |
| DT00138 | Total integral export reactive power | 0.01kvarh | Unsigned 32bit | 0 to 2999999997 | R |
| DT00139 | | | | | |
| DT00140 | Instantaneous active power (1) | 0.01kW | Signed 32bit | -999999999 to 999999999 | R |
| DT00141 | | | | | |
| DT00142 | Instantaneous active power (2) | 0.01kW | Signed 32bit | -999999999 to 999999999 | R |
| DT00143 | | | | | |
| DT00144 | Instantaneous active power (3) | 0.01kW | Signed 32bit | -999999999 to 999999999 | R |
| DT00145 | | | | | |
| DT00146 | Total instantaneous active power | 0.01kW | Signed 32bit | -2999999997 to 2999999997 | R |
| DT00147 | | | | | |
| DT00148 | Instantaneous reactive power (1) | 0.01kvar | Signed 32bit | -999999999 to 999999999 | R |
| DT00149 | | | | | |
| DT00150 | Instantaneous reactive power (2) | 0.01kvar | Signed 32bit | -999999999 to 999999999 | R |
| DT00151 | | | | | |
| DT00152 | Instantaneous reactive power (3) | 0.01kvar | Signed 32bit | -999999999 to 999999999 | R |
| DT00153 | | | | | |
| DT00154 | Total instantaneous reactive power | 0.01kvar | Signed 32bit | -2999999997 to 2999999997 | R |
| DT00155 | | | | | |
| DT00156 | Instantaneous apparent power (1) | 0.01kVA | Unsigned 32bit | 0 to 999999999 | R |
| DT00157 | | | | | |
| DT00158 | Instantaneous apparent power (2) | 0.01kVA | Unsigned 32bit | 0 to 999999999 | R |
| DT00159 | | | | | |
| DT00160 | Instantaneous apparent power (3) | 0.01kVA | Unsigned 32bit | 0 to 999999999 | R |
| DT00161 | | | | | |
| DT00162 | Total instantaneous apparent power | 0.01kVA | Unsigned 32bit | 0 to 2999999997 | R |
| DT00163 | | | | | |

| Data register | Name | Unit | Kind of data | Range | R/W |
|---------------|------------------------------------|-------------|----------------|-----------------|-----|
| DT00164 | Voltage 1 | 0.1V | Unsigned 32bit | 0 to 999999999 | R |
| DT00165 | | | | | |
| DT00166 | Voltage 2 | 0.1V | Unsigned 32bit | 0 to 999999999 | R |
| DT00167 | | | | | |
| DT00168 | Voltage 3 | 0.1V | Unsigned 32bit | 0 to 999999999 | R |
| DT00169 | | | | | |
| DT00170 | Voltage average | 0.1V | Unsigned 32bit | 0 to 999999999 | R |
| DT00171 | | | | | |
| DT00172 | Line voltage 1-2 | 0.1V | Unsigned 32bit | 0 to 999999999 | R |
| DT00173 | | | | | |
| DT00174 | Line voltage 2-3 | 0.1V | Unsigned 32bit | 0 to 999999999 | R |
| DT00175 | | | | | |
| DT00176 | Line voltage 3-1 | 0.1V | Unsigned 32bit | 0 to 999999999 | R |
| DT00177 | | | | | |
| DT00178 | Line voltage average | 0.1V | Unsigned 32bit | 0 to 999999999 | R |
| DT00179 | | | | | |
| DT00180 | Current (1) | 0.01A | Unsigned 32bit | 0 to 999999999 | R |
| DT00181 | | | | | |
| DT00182 | Current (2) | 0.01A | Unsigned 32bit | 0 to 999999999 | R |
| DT00183 | | | | | |
| DT00184 | Current (3) | 0.01A | Unsigned 32bit | 0 to 999999999 | R |
| DT00185 | | | | | |
| DT00188 | Current average | 0.01A | Unsigned 32bit | 0 to 999999999 | R |
| DT00189 | | | | | |
| DT00190 | Frequency (1) | 0.1Hz | Unsigned 16bit | 0 to 1000 | R |
| DT00191 | Frequency (2) | 0.1Hz | Unsigned 16bit | 0 to 1000 | R |
| DT00192 | Frequency (3) | 0.1Hz | Unsigned 16bit | 0 to 1000 | R |
| DT00193 | Frequency average | 0.1Hz | Unsigned 16bit | 0 to 1000 | R |
| DT00194 | PF (1) | 0.001 | Signed 16bit | -1000 to 1000 | R |
| DT00195 | PF (2) | 0.001 | Signed 16bit | -1000 to 1000 | R |
| DT00196 | PF (3) | 0.001 | Signed 16bit | -1000 to 1000 | R |
| DT00197 | PF average | 0.001 | Signed 16bit | -1000 to 1000 | R |
| DT00198 | Integral active power (1) | 0.001 kWh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00199 | | | | | |
| DT00200 | Integral active power (2) | 0.001 kWh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00201 | | | | | |
| DT00202 | Integral active power (3) | 0.001 kWh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00203 | | | | | |
| DT00204 | Total integral active power | 0.001 kWh | Unsigned 32bit | 0 to 2999999997 | R |
| DT00205 | | | | | |
| DT00206 | Integral reactive power (1) | 0.001 kvarh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00207 | | | | | |
| DT00208 | Integral reactive power (2) | 0.001 kvarh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00209 | | | | | |
| DT00210 | Integral reactive power (3) | 0.001 kvarh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00211 | | | | | |
| DT00212 | Total integral reactive power | 0.001 kvarh | Unsigned 32bit | 0 to 2999999997 | R |
| DT00213 | | | | | |
| DT00214 | Integral apparent power (1) | 0.001 kVAh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00215 | | | | | |
| DT00216 | Integral apparent power (2) | 0.001 kVAh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00217 | | | | | |
| DT00218 | Integral apparent power (3) | 0.001 kVAh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00219 | | | | | |
| DT00220 | Total integral apparent power | 0.001 kVAh | Unsigned 32bit | 0 to 2999999997 | R |
| DT00221 | | | | | |
| DT00222 | Integral export active power (1) | 0.001 kWh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00223 | | | | | |
| DT00224 | Integral export active power (2) | 0.001 kWh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00225 | | | | | |
| DT00226 | Integral export active power (3) | 0.001 kWh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00227 | | | | | |
| DT00228 | Total integral export active power | 0.001 kWh | Unsigned 32bit | 0 to 2999999997 | R |
| DT00229 | | | | | |

| Data register | Name | Unit | Kind of data | Range | R/W |
|---------------|--------------------------------------|-------------|----------------|---------------------------|-----|
| DT00230 | Integral export reactive power (1) | 0.001 kvarh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00231 | | | | | |
| DT00232 | Integral export reactive power (2) | 0.001 kvarh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00233 | | | | | |
| DT00234 | Integral export reactive power (3) | 0.001 kvarh | Unsigned 32bit | 0 to 999999999 | R/W |
| DT00235 | | | | | |
| DT00236 | Total integral export reactive power | 0.001 kvarh | Unsigned 32bit | 0 to 2999999997 | R |
| DT00237 | | | | | |
| DT00238 | Instantaneous active power (1) | 0.001 kW | Signed 32bit | -999999999 to 999999999 | R |
| DT00239 | | | | | |
| DT00240 | Instantaneous active power (2) | 0.001 kW | Signed 32bit | -999999999 to 999999999 | R |
| DT00241 | | | | | |
| DT00242 | Instantaneous active power (3) | 0.001 kW | Signed 32bit | -999999999 to 999999999 | R |
| DT00243 | | | | | |
| DT00244 | Total instantaneous active power | 0.001 kW | Signed 32bit | -2999999997 to 2999999997 | R |
| DT00245 | | | | | |
| DT00246 | Instantaneous reactive power (1) | 0.001 kvar | Signed 32bit | -999999999 to 999999999 | R |
| DT00247 | | | | | |
| DT00248 | Instantaneous reactive power (2) | 0.001 kvar | Signed 32bit | -999999999 to 999999999 | R |
| DT00249 | | | | | |
| DT00250 | Instantaneous reactive power (3) | 0.001 kvar | Signed 32bit | -999999999 to 999999999 | R |
| DT00251 | | | | | |
| DT00252 | Total instantaneous reactive power | 0.001 Kvar | Signed 32bit | -2999999997 to 2999999997 | R |
| DT00253 | | | | | |
| DT00254 | Instantaneous apparent power (1) | 0.001 kVA | Unsigned 32bit | 0 to 999999999 | R |
| DT00255 | | | | | |
| DT00256 | Instantaneous apparent power (2) | 0.001 kVA | Unsigned 32bit | 0 to 999999999 | R |
| DT00257 | | | | | |
| DT00258 | Instantaneous apparent power (3) | 0.001 kVA | Unsigned 32bit | 0 to 999999999 | R |
| DT00259 | | | | | |
| DT00260 | Total instantaneous apparent power | 0.001 kVA | Unsigned 32bit | 0 to 2999999997 | R |
| DT00261 | | | | | |
| DT00262 | Voltage 1 | 0.01V | Unsigned 32bit | 0 to 999999999 | R |
| DT00263 | | | | | |
| DT00264 | Voltage 2 | 0.01V | Unsigned 32bit | 0 to 999999999 | R |
| DT00265 | | | | | |
| DT00266 | Voltage 3 | 0.01V | Unsigned 32bit | 0 to 999999999 | R |
| DT00267 | | | | | |
| DT00268 | Voltage average | 0.01V | Unsigned 32bit | 0 to 999999999 | R |
| DT00269 | | | | | |
| DT00270 | Line voltage 1-2 | 0.01V | Unsigned 32bit | 0 to 999999999 | R |
| DT00271 | | | | | |
| DT00272 | Line voltage 2-3 | 0.01V | Unsigned 32bit | 0 to 999999999 | R |
| DT00273 | | | | | |
| DT00274 | Line voltage 3-1 | 0.01V | Unsigned 32bit | 0 to 999999999 | R |
| DT00275 | | | | | |
| DT00276 | Line voltage average | 0.01V | Unsigned 32bit | 0 to 999999999 | R |
| DT00277 | | | | | |
| DT00278 | Current (1) | 0.001A | Unsigned 32bit | 0 to 999999999 | R |
| DT00279 | | | | | |
| DT00280 | Current (2) | 0.001A | Unsigned 32bit | 0 to 999999999 | R |
| DT00281 | | | | | |
| DT00282 | Current (3) | 0.001A | Unsigned 32bit | 0 to 999999999 | R |
| DT00283 | | | | | |
| DT00286 | Current average | 0.001A | Unsigned 32bit | 0 to 999999999 | R |
| DT00287 | | | | | |
| DT00288 | Frequency (1) | 0.01Hz | Unsigned 16bit | 0 to 10000 | R |
| DT00289 | Frequency (2) | 0.01Hz | Unsigned 16bit | 0 to 10000 | R |
| DT00290 | Frequency (3) | 0.01Hz | Unsigned 16bit | 0 to 10000 | R |
| DT00291 | Frequency average | 0.01Hz | Unsigned 16bit | 0 to 10000 | R |
| DT00418 | Temperature | 0.1°C | Signed 16bit | -1000 to 1000 | R |

| Data register | Name | Unit | Kind of data | Range | R/W |
|---------------|---------------------------------------------|----------------|----------------|--------------------------|-----|
| DT00305 | Present demand (active power) | 0.001kW | Unsigned 32bit | 0 to 999999999 | R |
| DT00306 | | | | | |
| DT00307 | Present demand (reactive power) | 0.001kvar | Unsigned 32bit | 0 to 999999999 | R |
| DT00308 | | | | | |
| DT00309 | Present demand (apparent power) | 0.001kVA | Unsigned 32bit | 0 to 999999999 | R |
| DT00310 | | | | | |
| DT00311 | Present demand (active power (export)) | 0.001kW | Unsigned 32bit | 0 to 999999999 | R |
| DT00312 | | | | | |
| DT00313 | Present demand (reactive power(export)) | 0.001kvar | Unsigned 32bit | 0 to 999999999 | R |
| DT00314 | | | | | |
| DT00315 | Present demand (current①) | 0.001A | Unsigned 32bit | 0 to 999999999 | R |
| DT00316 | | | | | |
| DT00317 | Present demand (current②) | 0.001A | Unsigned 32bit | 0 to 999999999 | R |
| DT00318 | | | | | |
| DT00319 | Present demand (current③) | 0.001A | Unsigned 32bit | 0 to 999999999 | R |
| DT00320 | | | | | |
| DT00324 | PF status | — | Unsigned 16bit | 0: even, 1: Lag, 2: Lead | R |
| DT00325 | Total integral active power | 0.01kWh | Unsigned 32bit | 0 to 999999999 | R |
| DT00326 | | | | | |
| DT00327 | Total integral reactive power | 0.01kvarh | Unsigned 32bit | 0 to 999999999 | R |
| DT00328 | | | | | |
| DT00329 | Total integral apparent power | 0.01kVAh | Unsigned 32bit | 0 to 999999999 | R |
| DT00330 | | | | | |
| DT00331 | Total integral export active power | 0.01kWh | Unsigned 32bit | 0 to 999999999 | R |
| DT00332 | | | | | |
| DT00333 | Total integral export reactive power | 0.01kvarh | Unsigned 32bit | 0 to 999999999 | R |
| DT00334 | | | | | |
| DT00335 | Total integral active power | 0.001 kWh | Unsigned 32bit | 0 to 999999999 | R |
| DT00336 | | | | | |
| DT00337 | Total integral reactive power | 0.001 kvarh | Unsigned 32bit | 0 to 999999999 | R |
| DT00338 | | | | | |
| DT00339 | Total integral apparent power | 0.001 kVAh | Unsigned 32bit | 0 to 999999999 | R |
| DT00340 | | | | | |
| DT00341 | Total integral export active power | 0.001 kWh | Unsigned 32bit | 0 to 999999999 | R |
| DT00342 | | | | | |
| DT00343 | Total integral export reactive power | 0.001 kvarh | Unsigned 32bit | 0 to 999999999 | R |
| DT00344 | | | | | |
| DT00418 | Temperature | 0.1℃ | Signed 16bit | -1000 to 1000 | R |
| DT00664 | Phase voltage THD① | 0.001% | Signed 32bit | -400000 to 400000 | R |
| DT00665 | | | | | |
| DT00666 | Phase voltage THD② | 0.001% | Signed 32bit | -400000 to 400000 | R |
| DT00667 | | | | | |
| DT00668 | Phase voltage THD③ | 0.001% | Signed 32bit | -400000 to 400000 | R |
| DT00669 | | | | | |
| DT00670 | Phase voltage THD average | 0.001% | Signed 32bit | -400000 to 400000 | R |
| DT00671 | | | | | |
| DT00672 | Line voltage THD 1-2 | 0.001% | Signed 32bit | -400000 to 400000 | R |
| DT00673 | | | | | |
| DT00674 | Line voltage THD 2-3 | 0.001% | Signed 32bit | -400000 to 400000 | R |
| DT00675 | | | | | |
| DT00676 | Line voltage THD 3-1 | 0.001% | Signed 32bit | -400000 to 400000 | R |
| DT00677 | | | | | |
| DT00678 | Line voltage THD average | 0.001% | Signed 32bit | -400000 to 400000 | R |
| DT00679 | | | | | |
| DT00680 | Current THD① | 0.001% | Signed 32bit | -400000 to 400000 | R |
| DT00681 | | | | | |
| DT00682 | Current THD② | 0.001% | Signed 32bit | -400000 to 400000 | R |
| DT00683 | | | | | |
| DT00684 | Current THD③ | 0.001% | Signed 32bit | -400000 to 400000 | R |
| DT00685 | | | | | |
| DT00686 | Current THD average | 0.001% | Signed 32bit | -400000 to 400000 | R |
| DT00687 | | | | | |
| DT05040 | Export power conversion value (1) | 0.01 | Unsigned 32bit | 0 to 999999999 | R |
| DT05041 | | | | | |

| Data register | Name | Unit | Kind of data | Range | R/W |
|---------------|-------------------------------------------|-----------|----------------|-----------------|-----|
| DT05042 | Export power conversion value (2) | 0.01 | Unsigned 32bit | 0 to 999999999 | R |
| DT05043 | | | | | |
| DT05044 | Export power conversion value (3) | 0.01 | Unsigned 32bit | 0 to 999999999 | R |
| DT05045 | | | | | |
| DT05046 | Total export power conversion value | 0.01 | Unsigned 32bit | 0 to 2999999997 | R |
| DT05047 | | | | | |
| DT05090 | Conversion value (1) | 0.01 | Unsigned 32bit | 0 to 999999999 | R |
| DT05091 | | | | | |
| DT05092 | Conversion value (2) | 0.01 | Unsigned 32bit | 0 to 999999999 | R |
| DT05093 | | | | | |
| DT05094 | Conversion value (3) | 0.01 | Unsigned 32bit | 0 to 999999999 | R |
| DT05095 | | | | | |
| DT05096 | Total conversion value | 0.01 | Unsigned 32bit | 0 to 2999999997 | R |
| DT05097 | | | | | |
| DT31903 | Max. demand value active power | 0.001kW | Unsigned 32bit | 0 to 2999999997 | R |
| DT31904 | | | | | |
| DT31908 | Max. demand value reactive power | 0.001kvar | Unsigned 32bit | 0 to 2999999997 | R |
| DT31909 | | | | | |
| DT31913 | Max. demand value apparent power | 0.001kVA | Unsigned 32bit | 0 to 2999999997 | R |
| DT31914 | | | | | |
| DT31918 | Max. demand value active power (export) | 0.001kW | Unsigned 32bit | 0 to 2999999997 | R |
| DT31919 | | | | | |
| DT31923 | Max. demand value reactive power (export) | 0.001kvar | Unsigned 32bit | 0 to 2999999997 | R |
| DT31924 | | | | | |
| DT31928 | Max. demand value current1 | 0.001A | Unsigned 32bit | 0 to 999999999 | R |
| DT31929 | | | | | |
| DT31933 | Max. demand value current2 | 0.001A | Unsigned 32bit | 0 to 999999999 | R |
| DT31934 | | | | | |
| DT31938 | Max. demand value current3 | 0.001A | Unsigned 32bit | 0 to 999999999 | R |
| DT31939 | | | | | |

* 'Range' is not the measurement range, it shows the data range.

Note1) R: Read W: Write

2) Data register except specified is 0.

3) If each setting value is wrote by communication, it memories to internal memory at the same time. Therefore, change setting frequently makes the internal memory's life short. Avoid to usage like this.

4) Write a data within the range when you write it.

7.3.3 Error Codes

◇Basic procedure errors

| Error code | Error name | Explanation |
|------------|------------------|----------------------------------------------------------------------------------------|
| 40H | Bcc error | • A Bcc error occurred in the command data. |
| 41H | Format error | • A command message was sent that does not fit the transmission format. |
| 42H | No support error | • A command was sent that is not supported. |
| 43H | Procedure error | • Delimiter with multiple frames was sent. • The response shall be multiple frames. |

◇Application error

| Error code | Error name | Explanation |
|------------|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 60H | Parameter error | • The data code is not "D". |
| 61H | Data error | • Word No. is specified without decimal. (0000F etc.) • The starting word No. is bigger than the ending word No. • Writing data has a code that is not hexadecimal. |
| 62H | Registration error | • Too many registrations have been entered (more than 17). • "MD" command was sent when some registration has been exist. • "MG" command was sent when registration has not been entered. |

◇Self-diagnostic error

| Error code | Error name | Explanation |
|------------|-----------------|-------------------------------------------------------------------------|
| 45H | Operation error | • At "WD" command, writing data is exceeded the range of data register. |

7.3.4 Command

Eco-POWER METER has 5 kinds of commands.

| Command name | Code | Explanation |
|----------------------------------|------|--------------------------------------------------------------------------------|
| Read data area | RD | Reads the contents of data area. |
| Write data to data area | WD | Writes data to a data area. |
| Register or Reset data monitored | MD | Registers the data to be monitored. |
| Monitoring start | MG | Monitors a registered data. |
| Read status | RT | Reads the specifications of Eco-POWER METER and error code if an error occurs. |

◆[RD]: Read data area (Reads the contents of data area.)

◇Command

| % | Destination $\times 10^1$ $\times 10^0$ | # | R | D | D | Starting word No. 5 characters $\times 10^4$ $\times 10^3$ $\times 10^2$ $\times 10^1$ $\times 10^0$ | | | | | Ending word No. 5 characters $\times 10^4$ $\times 10^3$ $\times 10^2$ $\times 10^1$ $\times 10^0$ | | | | | Bcc $\times 16^1$ $\times 16^0$ | CR |
|---|----------------------------------------------|---|---|---|---|--------------------------------------------------------------------------------------------------------------------|--|--|--|--|------------------------------------------------------------------------------------------------------------------|--|--|--|--|--------------------------------------|----|
|---|----------------------------------------------|---|---|---|---|--------------------------------------------------------------------------------------------------------------------|--|--|--|--|------------------------------------------------------------------------------------------------------------------|--|--|--|--|--------------------------------------|----|

◇Normal response (Read successful)

| | | | | | | | | | | | | | | | | |
|---|---------------------------------------|--|----|---|---|----------------------------------------------------------------------------------------------------|--|---------------|--|---------------------------------------------------------------------------------------------------|--|---------------|--|------------------------------------|--|----|
| % | Source $\times 10^1$ $\times 10^0$ | | \$ | R | D | First register contents 4 characters $\times 16^1$ $\times 16^0$ $\times 16^3$ $\times 16^2$ | | | | Last register contents 4 characters $\times 16^1$ $\times 16^0$ $\times 16^3$ $\times 16^2$ | | | | Bcc $\times 16^1$ $\times 16^0$ | | CR |
| | | | | | | (lower word) | | (higher word) | | (lower word) | | (higher word) | | | | |

◇ Error response

◇Error response

| % | Source | | ! | Error code | | Bcc | | CR |
|---|---------------|---------------|---|---------------|---------------|---------------|---------------|--------------------------|
| | $\times 10^1$ | $\times 10^0$ | | $\times 16^1$ | $\times 16^0$ | $\times 16^1$ | $\times 16^0$ | (Common to each command) |

◆[WD]: Write data area (Writes data to a data area.)

◇Command

| % | Destination | | # | W | D | D | Starting word No. 5 characters | | | | | Ending word No. 5 characters | | | | | First writing data 4 characters | | | | ⇒ |
|---|---------------|---------------|---|---|---|---|-----------------------------------|---------------|---------------|---------------|---------------|---------------------------------|---------------|---------------|---------------|---------------|------------------------------------|---------------|---------------|---------------|---|
| | $\times 10^1$ | $\times 10^0$ | | | | | $\times 10^4$ | $\times 10^3$ | $\times 10^2$ | $\times 10^1$ | $\times 10^0$ | $\times 10^4$ | $\times 10^3$ | $\times 10^2$ | $\times 10^1$ | $\times 10^0$ | $\times 16^1$ | $\times 16^0$ | $\times 16^3$ | $\times 16^2$ | |
| | | | | | | | | | | | | | | | | | (lower word) | | (higher word) | | |


◇Normal response (Write successful)

◇Normal response (Write successful)


| | | | | | | | | |
|---|---------------|---------------|----|---|---|---------------|---------------|----|
| % | Source | | \$ | W | D | Bcc | | CR |
| | $\times 10^1$ | $\times 10^0$ | | | | $\times 16^1$ | $\times 16^0$ | |

| | | | | |
|-------------------|---------------|---------------|---------------|-----------------------------|
| Last writing data | | Bcc | | CR |
| 4 characters | | | | |
| $\times 16^1$ | $\times 16^0$ | $\times 16^3$ | $\times 16^2$ | $\times 16^1$ $\times 16^0$ |
| (lower word) | | (higher word) | | |

◆[MD]: Register or Reset data monitored (Registers the data to be monitored.) *Up to 16 points can be registered for one unit.



◇Command (Register reset)




◇Normal response (Registration successful)




◆[MG]: Monitoring start (Monitors a registered data.)

◇Command




◇Normal response (Monitoring successful)

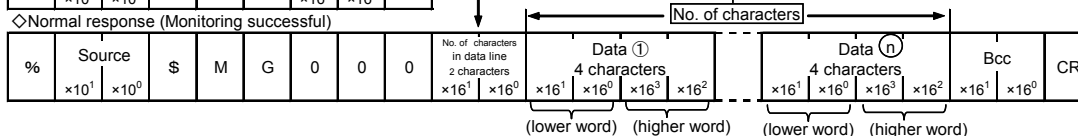


◆[RT]: Read the status of Eco-POWER METER (Reads the specifications of Eco-POWER METER and error codes if an error occurs.)

◇Command



◇Normal response (Read successful)

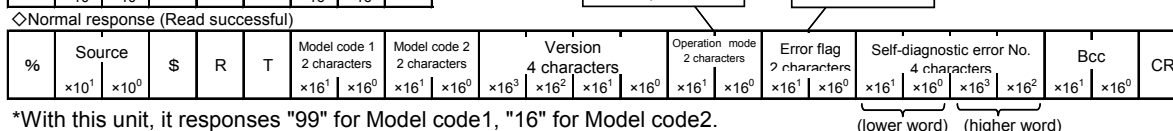

*With this unit, it responses "99" for Model code1, "16" for Model code2.

Note) The maximum number of reading slaves is 26 (57 bytes), the maximum number of writing slaves is 23 (55 bytes).

7.4 MODBUS (RTU) Communication

7.4.1 Overview of MODBUS (RTU)

◆8-bit binary data in command is transmitted as it is.

| | | |
|-------------|-----------------|-------------------------------------------------|
| Data format | Start bit | : 1 bit |
| | Data bit | : 8 bits (Fixed) |
| | Parity | : No parity, Even parity, Odd parity Selectable |
| | Stop bit | : 1-bit, 2-bit Selectable |
| | Error detection | : CRC-16 (Cyclic Redundancy Check) |
| | Data interval | : 3.5 character transmission time or less |

◆Message configuration

RTU mode is configured to start after idle time processing of more than 3.5 character transmissions and end after idle time processing of more than 3.5 character transmissions.

| | | | | | |
|---------------------|---------------|---------------|---------|--------------------|---------------------|
| 3.5 idle characters | Slave address | Function code | Data | Error check CRC-16 | 3.5 idle characters |
| | 8-bit | 8-bit | xx bits | 16-bit | |

Master judges the transmission complete after no command for 4-characters idle time and process the command.

*Transmission speed and judgment time to complete transmission

| Transmission speed (bps) | Judgment time to complete (ms) |
|--------------------------|--------------------------------|
| 38,400 | about 1 |
| 19,200 | about 2 |
| 9,600 | about 4 |
| 4,800 | about 8 |
| 2,400 | about 16 |
| 1,200 | About 32 |

◇Slave address:

Slave address is an individual instrument number on the slave side and is set within the range 1 to 247 (01H to F7H) for Modbus communication. Master identifies slaves by the slave address of the requested message.

Slave informs master which slave is responding to master by placing its own address in the response message. Slave address 0 (00H, broadcast address) can identify all slaves connected. However slaves do not respond.

◇Function code: Function code is command code for the slave to undertake the following action types.

| Function code | Contents |
|---------------|-----------------------|
| 03(03H) | DT Read |
| 06(06H) | DT1 word write |
| 16(10H) | DT several data write |

Function code is used to discern whether the response is normal (acknowledgement) or if any error (negative acknowledgement) has occurred when slave returns response message to master.

When acknowledgement is returned, slave simply returns original function code. When negative acknowledgement is returned, MSB of original function code is set as 1 for response.

For example, when the master sends request message setting 00H to function code by mistake, slave returns 80H by setting MSB to 1, because the former is an illegal function.

For negative acknowledgement, the exception codes below are set to data of response message and returned to master in order to inform it of what kind of error has occurred.

| Exception code | Contents |
|----------------|------------------------------------------------------|
| 1(01H) | Illegal Function (Non-existent function) |
| 3(03H) | Illegal data value (Value out of the device numbers) |

note1) Even if it commands to write (06H.10H) to non-existent data address, slave response with acknowledgement. However, it doesn't write.

note2) Even if it commands to write the value out of the setting range, slave response with acknowledgement. However, it doesn't write.

note3) The maximum number of reading slaves is 26 (57-byte), the maximum number of writing slaves is 23 (55-byte).

◇Data: Data depends on the function code.

A request message from the master side is composed of data item, number of data and setting data.

A response message from the slave side is composed of number of bytes, data and exception code in negative acknowledgement.

◇Error check: 16-bit data to detect communication errors. Refer to the next.

◇Acknowledgement response

When command is to write 1 point, same message of command is responded.

When command is to write several points, part of command message (6-byte) is responded.

◆Error check

After calculating CRC-16 (Cyclic Redundancy Check) from slave address to the end of data, the calculated 16-bit data is appended to the end of message in sequence from low order to high order.

<How to calculate CRC>

In CRC system, the information is divided by the polynomial series. The remainder is added to the end of the information and transmitted. The generation of polynomial series is as follows.

(Generation of polynomial series: $X^{16} + X^{15} + X^2 + 1$)

- 1) Initialize the CRC-16 data (assumed as X) (FFFFH).
- 2) Calculate exclusive OR (XOR) with the 1st data and X. This is assumed as X.
- 3) Shift X one bit to the right. This is assumed as X.
- 4) When a carry is generated as a result of the shift, XOR is calculated by X of 3) and the fixed value (A001H). This is assumed as X. If a carry is not generated, go to step 5).
- 5) Repeat steps 3) and 4) until shifting 8 times.
- 6) XOR is calculated with the next data and X. This is assumed as X.
- 7) Repeat steps 3) to 5).
- 8) Repeat steps 3) to 5) up to the last data.
- 9) Set X as CRC-16 to the end of message in sequence from low order to high order.

◆Message example

<1> Reading conversion rate (P) (005DH) of address 1

•Command

| | | | | | | |
|---------------------|---------------------|---------------------|-------------------|------------------------|----------------------------|---------------------|
| 3.5 idle characters | Slave address (01H) | Function code (03H) | Data item (005DH) | Number of data (0001H) | Error check CRC-16 (15D8H) | 3.5 idle characters |
| | 1 | 1 | 2 | 2 | 2 | ←character number |

•Response message from slave in normal status (When Rate=1000(10.00) [03E8H])

| | | | | | | |
|---------------------|---------------------|---------------------|-------------------------------|------------------------|----------------------------|---------------------|
| 3.5 idle characters | Slave address (01H) | Function code (03H) | Number of response byte (02H) | Number of data (03E8H) | Error check CRC-16 (B8FAH) | 3.5 idle characters |
| | 1 | 1 | 1 | 2 | 2 | ←character number |

<2> Setting conversion rate (P) (005DH) of address 1 (When rate is set to 20.00(2000) [07D0H])

•Command


| | | | | | | |
|---------------------|---------------------|---------------------|-------------------|------------------------|----------------------------|---------------------|
| 3.5 idle characters | Slave address (01H) | Function code (06H) | Data item (005DH) | Number of data (07D0H) | Error check CRC-16 (1BB4H) | 3.5 idle characters |
| | 1 | 1 | 2 | 2 | 2 | ←character number |

•Response message from slave in normal status


| | | | | | | |
|---------------------|---------------------|---------------------|-------------------|------------------------|----------------------------|---------------------|
| 3.5 idle characters | Slave address (01H) | Function code (06H) | Data item (005DH) | Number of data (07D0H) | Error check CRC-16 (1BB4H) | 3.5 idle characters |
| | 1 | 1 | 2 | 2 | 2 | ←character number |

<3> Reset integral active power (0064H, 0065H: 2-word) of address 1
(When setting to 0 [0000, 0000H])

• Command

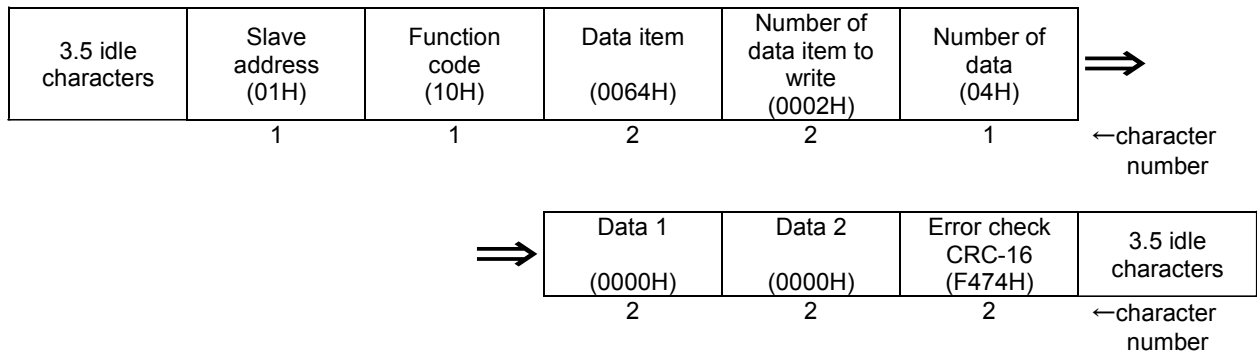

• Response message from slave in normal status

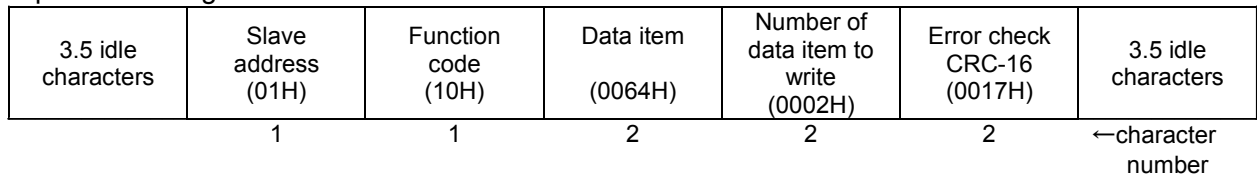


• A response message from the slave in exception (error) status


(When number of data has been mistaken.)

Function code MSB is set to 1 for the response message in exception (error) status (90H).
The exception code 03H (Value out of the device numbers) is returned as contents of error.

<Mistaken message example (Command)>

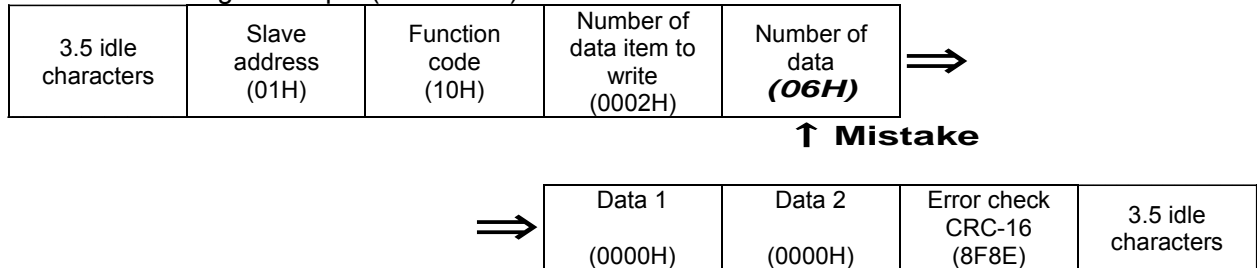

<Response message from slave to mistaken command
(Response message in exception (error) status)>



7.4.2 Data Register List (MODBUS communication)

| Data register | Name | Unit | Kind of data | Range: Hexadecimal | Function code |
|---------------|------------------------------|---------------|----------------|------------------------------------------------------------------|-----------------|
| 0032H | RS485 Device number | — | Unsigned 16bit | Mewtocol: 1H to 64H Modbus: 1H to F7H DL/T645: 0H to 270FH | 03H/ 06H/10H |
| 0033H | RS485 Transmission speed | — | Unsigned 16bit | 0H: 1200 1H: 2400 2H: 4800 3H: 9600 4H: 19200 5H: 38400 | 03H/ 06H/10H |
| 0034H | RS485 Transmission format | — | Unsigned 16bit | 0H: 8bit-o 1H: 8bit-n 2H: 8bit-E | 03H/ 06H/10H |
| 0035H | RS485 Stop bit | — | Unsigned 16bit | 1H, 2H | 03H/ 06H/10H |
| 0036H | RS485 Response time | 1ms | Unsigned 16bit | 1H to 63H | 03H/ 06H/10H |
| 0037H | Phase/Wire | — | Unsigned 16bit | 0H: 1P2W 1H: 1P3W 2H: 3P3W 3H: 3P4W | 03H/ 06H/10H |
| 0038H | CT type (2 nd) | Rated A (rms) | Unsigned 16bit | 1H, 5H | 03H/ 06H/10H |
| 0039H | Primary side current of CT | 1A | Unsigned 16bit | 1H to FFFFH | 03H/ 06H/10H |
| 003AH | VT ratio | 0.01 | Unsigned 16bit | 64H to EA60H | 03H/ 06H/10H |
| 003BH | Temperature correction value | 0.1°C | Signed 16bit | FC18H to 3E8H | 03H/ 06H/10H |
| 0041H | Update cycle | 100ms | Unsigned 16bit | 1H to AH | 03H/ 06H/10H |
| 0046H | Auto-off | 1min | Unsigned 16bit | 0H to 63H (0H: always ON) | 03H/ 06H/10H |
| 0057H | Conversion rate (-P) | 0.01 | Unsigned 16bit | 0H to 270FH | 03H/ 06H/10H |
| 005DH | Conversion rate (P) | 0.01 | Unsigned 16bit | 0H to 270FH | 03H/ 06H/10H |
| 005EH | Password | — | Unsigned 16bit | 0H to 270FH | 03H/ 06H/10H |
| 005FH | Auto display start | 1min | Unsigned 16bit | 0H to 63H (0H: fix display item) | 03H/ 06H/10H |
| 0060H | Display cycle | 1sec | Unsigned 16bit | 1H to 63H | 03H/ 06H/10H |
| 0061H | Luminance | — | Unsigned 16bit | 1H to 5H | 03H/ 06H/10H |
| 0062H | Protocol | — | Unsigned 16bit | 0H: MEWTOCOL, 1H: MODBUS, 2H: DL/T645 | 03H/ 06H/10H |
| 759CH | Power demand type | — | Unsigned 16bit | 1H:sliding block, 2H:fixed block, | 03H/ 06H/10H |
| 759DH | Power demand interval1 | 1min, | Unsigned 16bit | 0H to 3CH | 03H/ 06H/10H |
| 759EH | Power demand interval2 | 1min, | Unsigned 16bit | 0H to 3CH | 03H/ 06H/10H |
| 759FH | Current demand interval | 1min, | Unsigned 16bit | 0H to 3CH | 03H/ 06H/10H |
| 75F8H | Demand measurement status | — | Unsigned 16bit | 0H: Start 1H: Stop | 03H/ 06H/10H |
| 765CH | Reset all integral value | — | Unsigned 16bit | 0H:No 1H:Yes | 03H/ 06H/10H |
| 765DH | Reset integral value 1 | — | Unsigned 16bit | 0H:No 1H:Yes | 03H/ 06H/10H |
| 765EH | Reset integral value 2 | — | Unsigned 16bit | 0H:No 1H:Yes | 03H/ 06H/10H |
| 765FH | Reset integral value 3 | — | Unsigned 16bit | 0H:No 1H:Yes | 03H/ 06H/10H |
| 7662H | Reset logging data | — | Unsigned 16bit | 0H:No 1H:Yes | 03H/ 06H/10H |

| Data register | Name | Unit | Kind of data | Range: Hexadecimal | Function code |
|---------------|--------------------------------------|-----------|----------------|------------------------|---------------|
| 0064H <LSB> | Integral active power (1) | 0.01kWh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 0065H <MSB> | | | | | |
| 0066H <LSB> | Integral active power (2) | 0.01kWh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 0067H <MSB> | | | | | |
| 0068H <LSB> | Integral active power (3) | 0.01kWh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 0069H <MSB> | | | | | |
| 006AH <LSB> | Total integral active power | 0.01kWh | Unsigned 32bit | 0H to B2D05DFDH | 03H |
| 006BH <MSB> | | | | | |
| 006CH <LSB> | Integral reactive power (1) | 0.01kvarh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 006DH <MSB> | | | | | |
| 006EH <LSB> | Integral reactive power (2) | 0.01kvarh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 006FH <MSB> | | | | | |
| 0070H <LSB> | Integral reactive power (3) | 0.01kvarh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 0071H <MSB> | | | | | |
| 0072H <LSB> | Total integral reactive power | 0.01kvarh | Unsigned 32bit | 0H to B2D05DFDH | 03H |
| 0073H <MSB> | | | | | |
| 0074H <LSB> | Integral apparent power (1) | 0.01kVAh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 0075H <MSB> | | | | | |
| 0076H <LSB> | Integral apparent power (2) | 0.01kVAh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 0077H <MSB> | | | | | |
| 0078H <LSB> | Integral apparent power (3) | 0.01kVAh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 0079H <MSB> | | | | | |
| 007AH <LSB> | Total integral apparent power | 0.01kVAh | Unsigned 32bit | 0H to B2D05DFDH | 03H |
| 007BH <MSB> | | | | | |
| 007CH <LSB> | Integral export active power (1) | 0.01kWh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 007DH <MSB> | | | | | |
| 007EH <LSB> | Integral export active power (2) | 0.01kWh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 007FH <MSB> | | | | | |
| 0080H <LSB> | Integral export active power (3) | 0.01kWh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 0081H <MSB> | | | | | |
| 0082H <LSB> | Total integral export active power | 0.01kWh | Unsigned 32bit | 0H to B2D05DFDH | 03H |
| 0083H <MSB> | | | | | |
| 0084H <LSB> | Integral export reactive power (1) | 0.01kvarh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 0085H <MSB> | | | | | |
| 0086H <LSB> | Integral export reactive power (2) | 0.01kvarh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 0087H <MSB> | | | | | |
| 0088H <LSB> | Integral export reactive power (3) | 0.01kvarh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 0089H <MSB> | | | | | |
| 008AH <LSB> | Total integral export reactive power | 0.01kvarh | Unsigned 32bit | 0H to B2D05DFDH | 03H |
| 008BH <MSB> | | | | | |
| 008CH <LSB> | Instantaneous active power (1) | 0.01kW | Signed 32bit | FA0A1F01H to 5F5E0FFH | 03H |
| 008DH <MSB> | | | | | |
| 008EH <LSB> | Instantaneous active power (2) | 0.01kW | Signed 32bit | FA0A1F01H to 5F5E0FFH | 03H |
| 008FH <MSB> | | | | | |
| 0090H <LSB> | Instantaneous active power (3) | 0.01kW | Signed 32bit | FA0A1F01H to 5F5E0FFH | 03H |
| 0091H <MSB> | | | | | |
| 0092H <LSB> | Total instantaneous active power | 0.01kW | Signed 32bit | EE1E5D03H to 11E1A2FDH | 03H |
| 0093H <MSB> | | | | | |
| 0094H <LSB> | Instantaneous reactive power (1) | 0.01kvar | Signed 32bit | FA0A1F01H to 5F5E0FFH | 03H |
| 0095H <MSB> | | | | | |
| 0096H <LSB> | Instantaneous reactive power (2) | 0.01kvar | Signed 32bit | FA0A1F01H to 5F5E0FFH | 03H |
| 0097H <MSB> | | | | | |
| 0098H <LSB> | Instantaneous reactive power (3) | 0.01kvar | Signed 32bit | FA0A1F01H to 5F5E0FFH | 03H |
| 0099H <MSB> | | | | | |
| 009AH <LSB> | Total instantaneous reactive power | 0.01kvar | Signed 32bit | EE1E5D03H to 11E1A2FDH | 03H |
| 009BH <MSB> | | | | | |
| 009CH <LSB> | Instantaneous apparent power (1) | 0.01kVA | Unsigned 32bit | 0H to 5F5E0FFH | 03H |
| 009DH <MSB> | | | | | |
| 009EH <LSB> | Instantaneous apparent power (2) | 0.01kVA | Unsigned 32bit | 0H to 5F5E0FFH | 03H |
| 009FH <MSB> | | | | | |
| 00A0H <LSB> | Instantaneous apparent power (3) | 0.01kVA | Unsigned 32bit | 0H to 5F5E0FFH | 03H |
| 00A1H <MSB> | | | | | |

* 'Range' is not the measurement range, it shows the data range.

| Data register | Name | Unit | Kind of data | Range: Hexadecimal | Function code |
|---------------|------------------------------------|-------------|----------------|--------------------|---------------|
| 00A2H <LSB> | Total instantaneous apparent power | 0.01kVA | Unsigned 32bit | 0H to 11E1A2FDH | 03H |
| 00A3H <MSB> | | | | | |
| 00A4H <LSB> | Voltage 1 | 0.1V | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 00A5H <MSB> | | | | | |
| 00A6H <LSB> | Voltage 2 | 0.1V | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 00A7H <MSB> | | | | | |
| 00A8H <LSB> | Voltage 3 | 0.1V | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 00A9H <MSB> | | | | | |
| 00AAH <LSB> | Voltage average | 0.1V | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 00ABH <MSB> | | | | | |
| 00ACH <LSB> | Line voltage 1-2 | 0.1V | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 00ADH <MSB> | | | | | |
| 00AEH <LSB> | Line voltage 2-3 | 0.1V | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 00AFH <MSB> | | | | | |
| 00B0H <LSB> | Line voltage 3-1 | 0.1V | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 00B1H <MSB> | | | | | |
| 00B2H <LSB> | Line voltage average | 0.1V | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 00B3H <MSB> | | | | | |
| 00B4H <LSB> | Current (1) | 0.01A | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 00B5H <MSB> | | | | | |
| 00B6H <LSB> | Current (2) | 0.01A | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 00B7H <MSB> | | | | | |
| 00B8H <LSB> | Current (3) | 0.01A | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 00B9H <MSB> | | | | | |
| 00BCH <LSB> | Current average | 0.01A | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 00BDH <MSB> | | | | | |
| 00BEH | Frequency (1) | 0.1Hz | Unsigned 16bit | 0H to 3E8H | 03H |
| 00BFH | Frequency (2) | 0.1Hz | Unsigned 16bit | 0H to 3E8H | 03H |
| 00C0H | Frequency (3) | 0.1Hz | Unsigned 16bit | 0H to 3E8H | 03H |
| 00C1H | Frequency average | 0.1Hz | Unsigned 16bit | 0H to 3E8H | 03H |
| 00C2H | PF (1) | 0.001 | Signed 16bit | FC18H to 3E8H | 03H |
| 00C3H | PF (2) | 0.001 | Signed 16bit | FC18H to 3E8H | 03H |
| 00C4H | PF (3) | 0.001 | Signed 16bit | FC18H to 3E8H | 03H |
| 00C5H | PF average | 0.001 | Signed 16bit | FC18H to 3E8H | 03H |
| 00C6H <LSB> | Integral active power (1) | 0.001 kWh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 00C7H <MSB> | | | | | |
| 00C8H <LSB> | Integral active power (2) | 0.001 kWh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 00C9H <MSB> | | | | | |
| 00CAH <LSB> | Integral active power (3) | 0.001 kWh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 00CBH <MSB> | | | | | |
| 00CCH <LSB> | Total integral active power | 0.001 kWh | Unsigned 32bit | 0H to B2D05DFDH | 03H |
| 00CDH <MSB> | | | | | |
| 00CEH <LSB> | Integral reactive power (1) | 0.001 kvarh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 00CFH <MSB> | | | | | |
| 00D0H <LSB> | Integral reactive power (2) | 0.001 kvarh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 00D1H <MSB> | | | | | |
| 00D2H <LSB> | Integral reactive power (3) | 0.001 kvarh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 00D3H <MSB> | | | | | |
| 00D4H <LSB> | Total integral reactive power | 0.001 kvarh | Unsigned 32bit | 0H to B2D05DFDH | 03H |
| 00D5H <MSB> | | | | | |
| 00D6H <LSB> | Integral apparent power (1) | 0.001 kVAh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 00D7H <MSB> | | | | | |
| 00D8H <LSB> | Integral apparent power (2) | 0.001 kVAh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 00D9H <MSB> | | | | | |
| 00DAH <LSB> | Integral apparent power (3) | 0.001 kVAh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 00DBH <MSB> | | | | | |
| 00DCH <LSB> | Total integral apparent power | 0.001 kVAh | Unsigned 32bit | 0H to B2D05DFDH | 03H |
| 00DDH <MSB> | | | | | |

* 'Range' is not the measurement range, it shows the data range.

| Data register | Name | Unit | Kind of data | Range: Hexadecimal | Function code |
|----------------------------|--------------------------------------|-------------|----------------|------------------------|---------------|
| 00DEH <LSB> 00DFH <MSB> | Integral export active power (1) | 0.001 kWh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 00E0H <LSB> 00E1H <MSB> | Integral export active power (2) | 0.001 kWh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 00E2H <LSB> 00E3H <MSB> | Integral export active power (3) | 0.001 kWh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 00E4H <LSB> 00E5H <MSB> | Total integral export active power | 0.001 kWh | Unsigned 32bit | 0H to B2D05DFDH | 03H |
| 00E6H <LSB> 00E7H <MSB> | Integral export reactive power (1) | 0.001 kvarh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 00E8H <LSB> 00E9H <MSB> | Integral export reactive power (2) | 0.001 kvarh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 00EAH <LSB> 00EBH <MSB> | Integral export reactive power (3) | 0.001 kvarh | Unsigned 32bit | 0H to 3B9AC9FFH | 03H/10H |
| 00ECH <LSB> 00EDH <MSB> | Total integral export reactive power | 0.001 kvarh | Unsigned 32bit | 0H to B2D05DFDH | 03H |
| 00EEH <LSB> 00EFH <MSB> | Instantaneous active power (1) | 0.001 kW | Signed 32bit | FA0A1F01H to 5F5E0FFH | 03H |
| 00F0H <LSB> 00F1H <MSB> | Instantaneous active power (2) | 0.001 kW | Signed 32bit | FA0A1F01H to 5F5E0FFH | 03H |
| 00F2H <LSB> 00F3H <MSB> | Instantaneous active power (3) | 0.001 kW | Signed 32bit | FA0A1F01H to 5F5E0FFH | 03H |
| 00F4H <LSB> 00F5H <MSB> | Total instantaneous active power | 0.001 kW | Signed 32bit | EE1E5D03H to 11E1A2FDH | 03H |
| 00F6H <LSB> 00F7H <MSB> | Instantaneous reactive power (1) | 0.001 kvar | Signed 32bit | FA0A1F01H to 5F5E0FFH | 03H |
| 00F8H <LSB> 00F9H <MSB> | Instantaneous reactive power (2) | 0.001 kvar | Signed 32bit | FA0A1F01H to 5F5E0FFH | 03H |
| 00FAH <LSB> 00FBH <MSB> | Instantaneous reactive power (3) | 0.001 kvar | Signed 32bit | FA0A1F01H to 5F5E0FFH | 03H |
| 00FCH <LSB> 00FDH <MSB> | Total instantaneous reactive power | 0.001 kvar | Signed 32bit | EE1E5D03H to 11E1A2FDH | 03H |
| 00FEH <LSB> 00FFH <MSB> | Instantaneous apparent power (1) | 0.001 kVA | Unsigned 32bit | 0H to 5F5E0FFH | 03H |
| 0100H <LSB> 0101H <MSB> | Instantaneous apparent power (2) | 0.001 kVA | Unsigned 32bit | 0H to 5F5E0FFH | 03H |
| 0102H <LSB> 0103H <MSB> | Instantaneous apparent power (3) | 0.001 kVA | Unsigned 32bit | 0H to 5F5E0FFH | 03H |
| 0104H <LSB> 0105H <MSB> | Total instantaneous apparent power | 0.001 kVA | Unsigned 32bit | 0H to 11E1A2FDH | 03H |
| 0106H <LSB> 0107H <MSB> | Voltage 1 | 0.01V | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 0108H <LSB> 0109H <MSB> | Voltage 2 | 0.01V | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 010AH <LSB> 010BH <MSB> | Voltage 3 | 0.01V | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 010CH <LSB> 010DH <MSB> | Voltage average | 0.01V | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 010EH <LSB> 010FH <MSB> | Line voltage 1-2 | 0.01V | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 0110H <LSB> 0111H <MSB> | Line voltage 2-3 | 0.01V | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 0112H <LSB> 0113H <MSB> | Line voltage 3-1 | 0.01V | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 0114H <LSB> 0115H <MSB> | Line voltage average | 0.01V | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |

* 'Range' is not the measurement range, it shows the data range.

| Data register | Name | Unit | Kind of data | Range: Hexadecimal | Function code |
|---------------|------------------------------------------|-------------|----------------|-----------------------------|---------------|
| 0116H <LSB> | Current (1) | 0.001A | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 0117H <MSB> | | | | | |
| 0118H <LSB> | Current (2) | 0.001A | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 0119H <MSB> | | | | | |
| 011AH <LSB> | Current (3) | 0.001A | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 011BH <MSB> | | | | | |
| 011EH <LSB> | Current average | 0.001A | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 011FH <MSB> | | | | | |
| 0120H | Frequency (1) | 0.01Hz | Unsigned 16bit | 0H to 2710H | 03H |
| 0121H | Frequency (2) | 0.01Hz | Unsigned 16bit | 0H to 2710H | 03H |
| 0122H | Frequency (3) | 0.01Hz | Unsigned 16bit | 0H to 2710H | 03H |
| 0123H | Frequency average | 0.01Hz | Unsigned 16bit | 0H to 2710H | 03H |
| 0131H<LSB> | Present demand (active power) | 0.001kW | Unsigned 32bit | 0H to 5F5E0FFH | 03H |
| 0132H<MSB> | | | | | |
| 0133H<LSB> | Present demand (reactive power) | 0.001kvar | Unsigned 32bit | 0H to 5F5E0FFH | 03H |
| 0134H<MSB> | | | | | |
| 0135H<LSB> | Present demand (apparent power) | 0.001kVA | Unsigned 32bit | 0H to 5F5E0FFH | 03H |
| 0136H<MSB> | | | | | |
| 0137H<LSB> | Present demand (active power (export)) | 0.001kW | Unsigned 32bit | 0H to 5F5E0FFH | 03H |
| 0138H<MSB> | | | | | |
| 0139H<LSB> | Present demand (reactive power (export)) | 0.001kvar | Unsigned 32bit | 0H to 5F5E0FFH | 03H |
| 013AH<MSB> | | | | | |
| 013BH<LSB> | Present demand (current①) | 0.001A | Unsigned 32bit | 0H to 5F5E0FFH | 03H |
| 013CH<MSB> | | | | | |
| 013DH<LSB> | Present demand (current②) | 0.001A | Unsigned 32bit | 0H to 5F5E0FFH | 03H |
| 013EH<MSB> | | | | | |
| 013FH<LSB> | Present demand (current③) | 0.001A | Unsigned 32bit | 0H to 5F5E0FFH | 03H |
| 0140H<MSB> | | | | | |
| 0144H | PF status | — | Unsigned 16bit | 0H: even, 1H: Lag, 2H: Lead | 03H |
| 0145H<LSB> | Total integral active power | 0.01kWh | Unsigned 32bit | 0H~3B9AC9FFH | 03H |
| 0146H<MSB> | | | | | |
| 0147H<LSB> | Total integral reactive power | 0.01kvarh | Unsigned 32bit | 0H~3B9AC9FFH | 03H |
| 0148H<MSB> | | | | | |
| 0149H<LSB> | Total integral apparent power | 0.01kVAh | Unsigned 32bit | 0H~3B9AC9FFH | 03H |
| 014AH<MSB> | | | | | |
| 014BH<LSB> | Total integral export active power | 0.01kWh | Unsigned 32bit | 0H~3B9AC9FFH | 03H |
| 014CH<MSB> | | | | | |
| 014DH<LSB> | Total integral export reactive power | 0.01kvarh | Unsigned 32bit | 0H~3B9AC9FFH | 03H |
| 014EH<MSB> | | | | | |
| 014FH<LSB> | Total integral active power | 0.001 kWh | Unsigned 32bit | 0H~3B9AC9FFH | 03H |
| 0150H<MSB> | | | | | |
| 0151H<LSB> | Total integral reactive power | 0.001 kvarh | Unsigned 32bit | 0H~3B9AC9FFH | 03H |
| 0152H<MSB> | | | | | |
| 0153H<LSB> | Total integral apparent power | 0.001 kVAh | Unsigned 32bit | 0H~3B9AC9FFH | 03H |
| 0154H<MSB> | | | | | |
| 0155H<LSB> | Total integral export active power | 0.001 kWh | Unsigned 32bit | 0H~3B9AC9FFH | 03H |
| 0156H<MSB> | | | | | |
| 0157H<LSB> | Total integral export reactive power | 0.001 kvarh | Unsigned 32bit | 0H~3B9AC9FFH | 03H |
| 0158H<MSB> | | | | | |
| 01A2H | Temperature | 0.1℃ | Signed 16bit | FC18H to 3E8H | 03H |
| 0298H<LSB> | Phase voltage THD① | 0.001% | Signed 32bit | FFF9E580H to 61A80H | 03H |
| 0299H<MSB> | | | | | |
| 029AH<LSB> | Phase voltage THD② | 0.001% | Signed 32bit | FFF9E580H to 61A80H | 03H |
| 029BH<MSB> | | | | | |
| 029CH<LSB> | Phase voltage THD③ | 0.001% | Signed 32bit | FFF9E580H to 61A80H | 03H |
| 029DH<MSB> | | | | | |

| Data register | Name | Unit | Kind of data | Range: Hexadecimal | Function code |
|---------------|-------------------------------------------|------------|----------------|---------------------|---------------|
| 029EH<LSB> | Phase voltage THD average | 0.001% | Signed 32bit | FFF9E580H to 61A80H | 03H |
| 029FH<MSB> | | | | | |
| 02A0H<LSB> | Line voltage THD 1-2 | 0.001% | Signed 32bit | FFF9E580H to 61A80H | 03H |
| 02A1H<MSB> | | | | | |
| 02A2H<LSB> | Line voltage THD 2-3 | 0.001% | Signed 32bit | FFF9E580H to 61A80H | 03H |
| 02A3H<MSB> | | | | | |
| 02A4H<LSB> | Line voltage THD 3-1 | 0.001% | Signed 32bit | FFF9E580H to 61A80H | 03H |
| 02A5H<MSB> | | | | | |
| 02A6H<LSB> | Line voltage THD average | 0.001% | Signed 32bit | FFF9E580H to 61A80H | 03H |
| 02A7H<MSB> | | | | | |
| 02A8H<LSB> | Current THD① | 0.001% | Signed 32bit | FFF9E580H to 61A80H | 03H |
| 02A9H<MSB> | | | | | |
| 02AAH<LSB> | Current THD② | 0.001% | Signed 32bit | FFF9E580H to 61A80H | 03H |
| 02ABH<MSB> | | | | | |
| 02ACH<LSB> | Current THD③ | 0.001% | Signed 32bit | FFF9E580H to 61A80H | 03H |
| 02ADH<MSB> | | | | | |
| 02AEH<LSB> | Current THD average | 0.001% | Signed 32bit | FFF9E580H to 61A80H | 03H |
| 02AFH<MSB> | | | | | |
| 13B0H <LSB> | Export power conversion value (1) | 0.01 | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 13B1H <MSB> | | | | | |
| 13B2H <LSB> | Export power conversion value (2) | 0.01 | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 13B3H <MSB> | | | | | |
| 13B4H <LSB> | Export power conversion value (3) | 0.01 | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 13B5H <MSB> | | | | | |
| 13B6H <LSB> | Total export power conversion value | 0.01 | Unsigned 32bit | 0H to B2D05DFDH | 03H |
| 13B7H <MSB> | | | | | |
| 13E2H <LSB> | Conversion value (1) | 0.01 | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 13E3H <MSB> | | | | | |
| 13E4H <LSB> | Conversion value (2) | 0.01 | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 13E5H <MSB> | | | | | |
| 13E6H <LSB> | Conversion value (3) | 0.01 | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 13E7H <MSB> | | | | | |
| 13E8H <LSB> | Total conversion value | 0.01 | Unsigned 32bit | 0H to B2D05DFDH | 03H |
| 13E9H <MSB> | | | | | |
| 7C9FH<LSB> | Max. demand value active power | 0.001 kW | Unsigned 32bit | 0H to B2D05DFDH | 03H |
| 7CA0H<MSB> | | | | | |
| 7CA4H<LSB> | Max. demand value reactive power | 0.001 kvar | Unsigned 32bit | 0H to B2D05DFDH | 03H |
| 7CA5H<MSB> | | | | | |
| 7CA9H<LSB> | Max. demand value apparent power | 0.001 kVA | Unsigned 32bit | 0H to B2D05DFDH | 03H |
| 7CAAH<MSB> | | | | | |
| 7CAEH<LSB> | Max. demand value active power (export) | 0.001 kW | Unsigned 32bit | 0H to B2D05DFDH | 03H |
| 7CAFH<MSB> | | | | | |
| 7CB3H<LSB> | Max. demand value reactive power (export) | 0.001 kvar | Unsigned 32bit | 0H to B2D05DFDH | 03H |
| 7CB4H<MSB> | | | | | |
| 7CB8H<LSB> | Max. demand value current1 | 0.001A | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 7CB9H<MSB> | | | | | |
| 7CBDH<LSB> | Max. demand value current2 | 0.001A | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 7CBEH<MSB> | | | | | |
| 7CC2H<LSB> | Max. demand value current3 | 0.001A | Unsigned 32bit | 0H to 3B9AC9FFH | 03H |
| 7CC3H<MSB> | | | | | |

* 'Range' is not the measurement range, it shows the data range.

<LSB>: Least Significant Byte

<MSB>: Most Significant Byte

note 1) 03H: Read 06H/10H: Write

2) Data register except specified is "0".

3) If each setting value is wrote by communication, it memories to internal memory at the same time. Therefore, change setting frequently makes the internal memory's life short. Avoid to usage like this.

4) Write a data within the range when you write it.

7.5 DL/T645-2007 communication

7.5.1 Overview of DL/T645-2007

Only 2007 version of DL/T645 is supported. Other version is not supported.

◆DL/T645-2007 transmission settings are as below.

| | |
|------------------------|---------------|
| Transmission format | 8bit |
| Parity | Even (fixed) |
| Stop bit | 1bit (fixed) |
| Response time | 50ms (fixed) |
| Stop time between byte | 500ms or more |

◆Frame format

| | |
|--------------------|------|
| Frame start number | 68H |
| Address field | A0 |
| | A1 |
| | A2 |
| | A3 |
| | A4 |
| | A5 |
| Frame start symbol | 68H |
| Control code | C |
| Data field length | L |
| Data field | DATA |
| Check code | CS |
| End symbol | 16H |

Address field (A0 to A5)

Address (device number) is consisted of 6-byte (12-digit), but the range is 0 to 9999.

(When the number of digit is not filled, it fills it up with '0'.)

Transmission address '999999999999H' is not supported.

Address field supports wild card. It fills it up with AA from the lower to upper without any value.

When it transmits address field, it transmits from lower to upper. (A0 A1 A2 A3 A4 A5)

Ex.) In case of that the address is 55H.

•Correct address field

| | |
|-------------------|---------------------|
| | Transmission format |
| Without wild card | 55 00 00 00 00 00 |
| With wild card | 55 00 AA AA AA AA |

•Case that is NG with wild card

| | |
|-------------------|--------------------------------------|
| Address field | Reason |
| 55 00 00 AA 00 AA | There is '00' between 'AA' and 'AA'. |
| 55 00 00 A0 AA AA | A3 of address field is not 'AA'. |

Control code (C)

| C | | | | | | | |
|------------------------|---------------------|-----------------------|---------------|----|----|----|----|
| D7 | D6 | D5 | D4 | D3 | D2 | D1 | D0 |
| Transmission direction | Slave response flag | Subsequent frame flag | Function code | | | | |

| Item | | Contents |
|-----------------------------|-------|-----------------------------------------------|
| Transmission direction (D7) | 0 | Command frame from master |
| | 1 | Response frame from slave |
| Slave response flag (D6) | 0 | Slave response is correct. |
| | 1 | Slave response is wrong. |
| Subsequent frame flag (D5) | 0 | No subsequent data |
| | 1 | With subsequent data |
| Function code (D4 to D0) | 00000 | Vacant |
| | 01000 | Not support |
| | 10001 | Read out data |
| | 10010 | Not support |
| | 10011 | Read out transmission address (device number) |
| | 10100 | Write data |
| | 10101 | Write transmission address (device number) |
| | 10110 | Not support |
| | 10111 | Change transmission speed |
| | 11000 | Change password |
| | 11001 | Not support |
| | 11010 | Reset integral power |
| | 11011 | Not support |

Data field length (L)

It is byte count of data field.

Read : $L \leq 200$, Write: $L \leq 50$ $L=0$ means no data field.

Data field (DATA)

Data field is consisted of 'data type', 'password', 'workers code', 'frame number' and so on.

The content differs according to the control code.

When data is transmitted, 33H is added to each byte. When data is received, 33H is subtracted from each byte.

Ex.) Transmission in case of that data identification is '04 03 FF 00 (DI3, DI2, DI1, DI0)'

| Code | Value | Calculation |
|------|-------|-----------------------------------------------------------------|
| DI3 | 37 | = 04 + 33 |
| DI2 | 36 | = 03 + 33 |
| DI1 | 32 | = FF + 33 (FF + 33 equal 132. But it makes 1 byte data, 32.) |
| DI0 | 33 | = 00 + 33 |

It transmits from the lower, data field is '33 32 36 37 (DI0 DI1 DI2 DI3)'.

Ex.) In case of the receiving data is '45 34 (N1 N0)'. (Receive voltage 112V)

| Code | Value | Calculation |
|------|-------|-------------|
| N1 | 12 | = 45-33 |
| N0 | 01 | = 34-33 |

It receives from the lower, it is 'N0 N1' and the voltage is 112V.

(It receives with hexadecimal but it doesn't convert the value subtract 33 to decimal.)

Check code (CS)

It is lower 1 byte in total of all byte from frame start symbol to data field.

Ex.) In case of that the transmission command is '68 01 00 00 00 00 00 68 11 04 33 33 34 33 CS 16',

Check code (CS) is as below.

$$68 + 01 + 00 + 00 + 00 + 00 + 00 + 68 + 11 + 04 + 33 + 33 + 34 + 33 = 1B3$$

CS = B3 (CS is lower 1 byte.)

End symbol (16H)

There is 16H at the end of frame.

◆ Command for each control code

Read out data

Data read out by the data identifications.

• Command from master; Control code 11H

| | | | | | | | | | | |
|-----|-------------------------------------------|----|----|----|----|----|-----|--------------|-------------|---------------|
| 68H | A0 | A1 | A2 | A3 | A4 | A5 | 68H | 11H | 04H | ⇒ continue |
| | Transmission address (A0 to A5 or AAH) | | | | | | | Control code | Data length | |

| | | | | | | |
|---------------|---------------------------------------------------------------|-----|-----|-----|----|-----|
| ⇒ continue | DI0 | DI1 | DI2 | DI3 | CS | 16H |
| | Data identification (Add 33H to data identification value) | | | | | |

• Response from slave (normal)

| | | | | | | | | | | |
|-----|------------------------------------|----|----|----|----|----|-----|-----|----------------------------------------------------------|---------------|
| 68H | A0 | A1 | A2 | A3 | A4 | A5 | 68H | 91H | L | ⇒ continue |
| | Transmission address (A0 to A5) | | | | | | | | Data length (Data identification byte + data byte) | |

| | | | | | | | | | |
|---------------|---------------------------------------------------------------|-----|-----|-----|--------------------------------------------------------|-----|----|----|-----|
| ⇒ continue | DI0 | DI1 | DI2 | DI3 | N1 | ... | Nm | CS | 16H |
| | Data identification (Add 33H to data identification value) | | | | Data (Add 33H to measuring value and setting value) | | | | |

Read out transmission address

It read out the transmission address (device number).

It is available only when master and slave is 1:1.

• Command from master; Control code 13H

| | | | | | | | | | | | |
|-----|--------------------------------|-----|-----|-----|-----|-----|-----|--------------|-----|----|-----|
| 68H | AAH | AAH | AAH | AAH | AAH | AAH | 68H | 13H | 00H | CS | 16H |
| | Transmission address (AAH fix) | | | | | | | Control code | | | |

• Response from slave (normal)

| | | | | | | | | | | |
|-----|------------------------------------------|----|----|----|----|----|-----|-----|-----|---------------|
| 68H | A0 | A1 | A2 | A3 | A4 | A5 | 68H | 93H | 06H | ⇒ continue |
| | Transmission address read out from slave | | | | | | | | | |

| | | | | | | | | |
|---------------|------------------------------------------|----|----|----|----|----|----|-----|
| ⇒ continue | A0 | A1 | A2 | A3 | A4 | A5 | CS | 16H |
| | Transmission address read out from slave | | | | | | | |

*No response when slave is abnormal.

Write data

It is available only with pressing <MODE> key (programming key).


Without pressing programming key, it doesn't response.

For data writing, authorization level (PA0) should be designated, but only '0' is supported.

For workers code, it doesn't record and the code is fixed to '0'.

• Command from master; Control code 14H

Data length (L); Byte count of data identification + Byte count of password authorization level +
Byte count of password + Byte count of workers code + Byte count of data to write

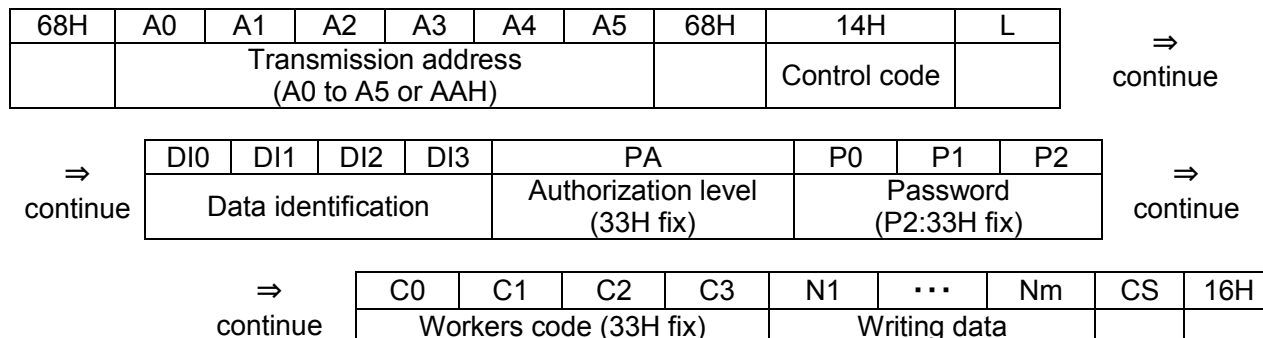

• Response from slave (normal)


| | | | | | | | | | | | |
|-----|----|----|----|----|----|----|-----|-----|-----|----|-----|
| 68H | A0 | A1 | A2 | A3 | A4 | A5 | 68H | 94H | 00H | CS | 16H |
|-----|----|----|----|----|----|----|-----|-----|-----|----|-----|

Write transmission address

It writes the transmission address (device number). It is available only when master and slave is 1:1.

Without pressing programming key, it doesn't response.

• Command from master; Control code 15H

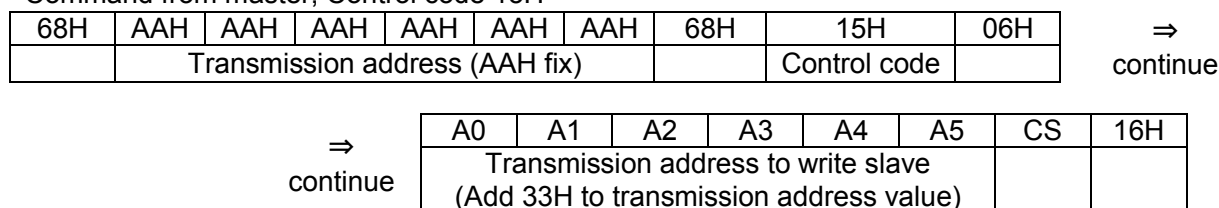

• Response from slave (normal)

| | | | | | | | | | | | |
|-----|--------------------------|----|----|----|----|----|-----|-----|-----|----|-----|
| 68H | A0 | A1 | A2 | A3 | A4 | A5 | 68H | 95H | 00H | CS | 16H |
| | New transmission address | | | | | | | | | | |

*No response when slave is abnormal.

Change transmission speed

It changes the transmission speed after it returns the response.

• Command from master; Control code 17H

| | | | | | | | | | | | | |
|-----|----------------------|----|----|----|----|----|-----|--------------|-----|----------------------------------|----|-----|
| 68H | A0 | A1 | A2 | A3 | A4 | A5 | 68H | 17H | 01H | Z | CS | 16H |
| | Transmission address | | | | | | | Control code | | Transmission speed (bit flag) | | |

| Transmission speed (bit flag) | bit | Transmission speed [bps] |
|----------------------------------|-------|--------------------------|
| | Bit 7 | 38400 |
| | Bit 6 | 19200 |
| | Bit 5 | 9600 |
| | Bit 4 | 4800 |
| | Bit 3 | 2400 |
| | Bit 2 | 1200 |
| | Bit 1 | vacant |
| | Bit 0 | vacant |

• Response from slave (normal)

| | | | | | | | | | | | | |
|-----|----------------------|----|----|----|----|----|-----|-----|-----|----------------------------------|----|-----|
| 68H | A0 | A1 | A2 | A3 | A4 | A5 | 68H | 97H | 01H | Z | CS | 16H |
| | Transmission address | | | | | | | | | Transmission speed (bit flag) | | |

Change password

It changes password.

It is available only with pressing <MODE> key (programming key).

Without pressing programming key, it doesn't response.

For changing password, authorization level (PA0) should be designated, but only '0' is supported.

• Command from master; Control code 18H

| | | | | | | | | | | |
|-----|----------------------|----|----|----|----|----|-----|--------------|-----|---------------|
| 68H | A0 | A1 | A2 | A3 | A4 | A5 | 68H | 18H | 0CH | ⇒ continue |
| | Transmission address | | | | | | | Control code | | |

| | | | | | | | | | |
|---------------|---------------------------------------------------------------------|-----|-----|-----|--------------------------------------------|-------------------------------------------------|----|----|---------------|
| ⇒ Continue | DI0 | DI1 | DI2 | DI3 | PA | P0 | P1 | P2 | ⇒ continue |
| | 34 3F 33 37 (Add 33H to 01 0C 00 04) (Only "0" is supported.) | | | | Designate authorization level (33H fix) | Designate the present password (P2: 33H fix) | | | |

| | | | | | | | | | |
|---------------|---------------------------------------------------------|--|--|--|--------------------------------|-----|-----|----|-----|
| ⇒ continue | PAn | | | | P0n | P1n | P2n | CS | 16H |
| | Authorization level for password to change (33H fix) | | | | New password (P2n: 33H fix) | | | | |

• Response from slave (normal)

| | | | | | | | | | | |
|-----|----------------------|----|----|----|----|----|-----|-----|-----|---------------|
| 68H | A0 | A1 | A2 | A3 | A4 | A5 | 68H | 18H | 04H | ⇒ continue |
| | Transmission address | | | | | | | | | |

| | | | | | | | | |
|-------------------------------------------------------|--|--|--|------------------------------------|-----|-----|----|-----|
| PAn | | | | P0n | P1n | P2n | CS | 16H |
| Authorization level for changed password (33H fix) | | | | Changed password (P2n: 33H fix) | | | | |

Reset integral power

It reset all integral power.

For reset integral power, workers code should be designated, but it doesn't record and the code is fixed to '0'. It is available only with pressing <MODE> key (programming key).

• Command from master; control code 1AH

| | | | | | | | | | | | | |
|----------------------|-------------------------------|----|----|----|----|----|------------------------|------------------------|-----|----------|----------|-----|
| 68H | A0 | A1 | A2 | A3 | A4 | A5 | 68H | 1AH | 08H | ⇒ | | |
| Transmission address | | | | | | | | Control code | | continue | | |
| ⇒ | PA | | | | | | | P0 | P1 | P2 | ⇒ | |
| continue | Authorization level (33H fix) | | | | | | | Password (P2: 33H fix) | | | continue | |
| ⇒ | | | | | | | C0 | C1 | C2 | C3 | CS | 16H |
| continue | | | | | | | Workers code (33H fix) | | | | | |

• Response from slave (normal)

| | | | | | | | | | | | |
|-----|----|----|----|----|----|----|-----|-----|-----|----|-----|
| 68H | A0 | A1 | A2 | A3 | A4 | A5 | 68H | 9AH | 00H | CS | 16H |
|-----|----|----|----|----|----|----|-----|-----|-----|----|-----|

Abnormal command from slave

Control code (C); C0H (Response from slave is abnormal.)

+ Control code when error occurs.

| | | | | | | | | | | | |
|-----|----|----|----|----|----|----|--------------|---|-----|--------------------------|-----|
| 68H | A0 | A1 | A2 | A3 | A4 | A5 | 68H | C | 01H | ERR | 16H |
| | | | | | | | Control code | | | Error code (bit flag) | |

| Contents of error code | Bit flag | Contents |
|------------------------|----------|-----------------------------------------|
| | Bit 7 | Not support |
| | Bit 6 | Not support |
| | Bit 5 | Not support |
| | Bit 4 | Not support |
| | Bit 3 | Impossible to change transmission speed |
| | Bit 2 | Password mistake |
| | Bit 1 | No request data |
| | Bit 0 | Other errors |

Conditions for no response

With the below conditions, slave doesn't response.

- Parity error
- CS error
- Data length (L) doesn't match byte count.
- Error at write or read of transmission address
- Not press programming key (<MODE> key)

Programming key

Programming key is <MODE> key.

With every display, it is possible to change the settings only when pressing <MODE> key.

7.5.2 Data list

| Data identification | | | | Name | Data format | unit | byte | range | R/W |
|---------------------|-----------------|-----------------|-----------------|--------------------------------------|-------------|-------|------|----------------------------------------|-----|
| DI ₃ | DI ₂ | DI ₁ | DI ₀ | | | | | | |
| 04 | 05 | 00 | 00 | Transmission protocol | X | — | 1 | 0:Mewtocol, 1:Modbus 2:DL/T645 | R/W |
| | | | 01 | Transmission format | X | — | 1 | 0:8bit-Odd, 1:8bit-None 2:8bit-Even | R/W |
| | | | 02 | Stop bit | X | — | 1 | 1, 2 | R/W |
| | | | 03 | Response time | XX | ms | 1 | 1 to 99 | R/W |
| 04 | 05 | 01 | 01 | CT type (2 nd) | X | A | 1 | 1, 5 | R/W |
| | | | 02 | Primary side current of CT | XXXXXX | A | 2 | 1 to 65535 | R/W |
| | | | 03 | VT ratio | XXX.XX | — | 3 | 100 to 60000 | R/W |
| | | | 09 | Conversion rate (P) | XX.XX | — | 2 | 0 to 9999 | R/W |
| | | | 0F | Conversion rate (-P) | XX.XX | — | 2 | 0 to 9999 | R/W |
| 04 | 05 | 03 | 00 | Auto-off | XX | min | 1 | 0 to 99 (0: always ON) | R/W |
| | | | 01 | Luminance | X | — | 1 | 1 to 5 | R/W |
| | | | 02 | Auto display start | XX | min | 1 | 0 to 99 (0: fix display item) | R/W |
| | | | 03 | Display cycle | XX | min | 1 | 1 to 99 | R/W |
| | | | 04 | Temperature correction value | XXX.X | °C | 2 | -100.0 to 100.0 | R/W |
| | | | 05 | Update cycle | XX | 100ms | 1 | 1 to 10 | R/W |
| 04 | 05 | 05 | 00 | Power demand type | X | — | 1 | 1:sliding block 2:fixed block | R/W |
| | | | 01 | Power demand interval1 | XX | 1min, | 1 | 1 to 60 | R/W |
| | | | 02 | Power demand interval2 | XX | 1min, | 1 | 1 to 60 | R/W |
| | | | 03 | Current demand interval | XX | 1min, | 1 | 1 to 60 | R/W |
| 00 | 01 | 00 | 00 | Total integral active power | XXXXXXX.XX | kWh | 4 | 0 to 999999.99 | R |
| | 15 | | | Integral active power (1) | XXXXXXX.XX | kWh | 4 | 0 to 999999.99 | R |
| | 29 | | | Integral active power (2) | XXXXXXX.XX | kWh | 4 | 0 to 999999.99 | R |
| | 3D | | | Integral active power (3) | XXXXXXX.XX | kWh | 4 | 0 to 999999.99 | R |
| 00 | 0B | 00 | 00 | Total integral reactive power | XXXXXXX.XX | kvarh | 4 | 0 to 999999.99 | R |
| | 1F | | | Integral reactive power (1) | XXXXXXX.XX | kvarh | 4 | 0 to 999999.99 | R |
| | 33 | | | Integral reactive power (2) | XXXXXXX.XX | kvarh | 4 | 0 to 999999.99 | R |
| | 47 | | | Integral reactive power (3) | XXXXXXX.XX | kvarh | 4 | 0 to 999999.99 | R |
| 00 | 09 | 00 | 00 | Total integral apparent power | XXXXXXX.XX | kVAh | 4 | 0 to 999999.99 | R |
| | 1D | | | integral apparent power (1) | XXXXXXX.XX | kVAh | 4 | 0 to 999999.99 | R |
| | 31 | | | integral apparent power (2) | XXXXXXX.XX | kVAh | 4 | 0 to 999999.99 | R |
| | 45 | | | integral apparent power (3) | XXXXXXX.XX | kVAh | 4 | 0 to 999999.99 | R |
| 00 | 02 | 00 | 00 | Total integral export active power | XXXXXXX.XX | kWh | 4 | 0 to 999999.99 | R |
| | 16 | | | Integral export active power (1) | XXXXXXX.XX | kWh | 4 | 0 to 999999.99 | R |
| | 2A | | | Integral export active power (2) | XXXXXXX.XX | kWh | 4 | 0 to 999999.99 | R |
| | 3E | | | Integral export active power (3) | XXXXXXX.XX | kWh | 4 | 0 to 999999.99 | R |
| 00 | 0C | 00 | 00 | Total integral export reactive power | XXXXXXX.XX | kvarh | 4 | 0 to 999999.99 | R |
| | 20 | | | Integral export reactive power (1) | XXXXXXX.XX | kvarh | 4 | 0 to 999999.99 | R |
| | 34 | | | Integral export reactive power (2) | XXXXXXX.XX | kvarh | 4 | 0 to 999999.99 | R |
| | 48 | | | Integral export reactive power (3) | XXXXXXX.XX | kvarh | 4 | 0 to 999999.99 | R |

| Data identification | | | | Name | Data format | unit | byte | range | R/W |
|---------------------|-----------------|-----------------|-----------------|-----------------------------------------|-------------|------|------|-------------------|-----|
| DI ₃ | DI ₂ | DI ₁ | DI ₀ | | | | | | |
| 02 | 03 | 00 | 00 | Total instantaneous active power | XX.XXXX | kW | 3 | -79.999 to 79.999 | R |
| | | 01 | | Instantaneous active power (1) | XX.XXXX | kW | 3 | -79.999 to 79.999 | R |
| | | 02 | | Instantaneous active power (2) | XX.XXXX | kW | 3 | -79.999 to 79.999 | R |
| | | 03 | | Instantaneous active power (3) | XX.XXXX | kW | 3 | -79.999 to 79.999 | R |
| | | FF | | Instantaneous active power data block | | | 12 | | |
| 02 | 04 | 00 | 00 | Total instantaneous reactive power | XX.XXXX | kvar | 3 | -79.999 to 79.999 | R |
| | | 01 | | Instantaneous reactive power (1) | XX.XXXX | kvar | 3 | -79.999 to 79.999 | R |
| | | 02 | | Instantaneous reactive power (2) | XX.XXXX | kvar | 3 | -79.999 to 79.999 | R |
| | | 03 | | Instantaneous reactive power (3) | XX.XXXX | kvar | 3 | -79.999 to 79.999 | R |
| | | FF | | Instantaneous reactive power data block | | | 12 | | R |
| 02 | 05 | 00 | 00 | Total instantaneous apparent power | XX.XXXX | KVA | 3 | 0 to 99.9999 | R |
| | | 01 | | Instantaneous apparent power (1) | XX.XXXX | KVA | 3 | 0 to 99.9999 | R |
| | | 02 | | Instantaneous apparent power (2) | XX.XXXX | KVA | 3 | 0 to 99.9999 | R |
| | | 03 | | Instantaneous apparent power (3) | XX.XXXX | KVA | 3 | 0 to 99.9999 | R |
| | | FF | | Instantaneous apparent power data block | | | 12 | | R |
| 02 | 01 | 01 | 00 | Voltage 1 | XXX.X | V | 2 | 0 to 999.9 | R |
| | | 02 | | Voltage 2 | XXX.X | V | 2 | 0 to 999.9 | R |
| | | 03 | | Voltage 3 | XXX.X | V | 2 | 0 to 999.9 | R |
| | | FF | | Voltage data block | | | 6 | | R |
| 02 | 0C | 01 | 00 | Line voltage 1-2 | XXX.X | V | 2 | 0 to 999.9 | R |
| | | 02 | | Line voltage 2-3 | XXX.X | V | 2 | 0 to 999.9 | R |
| | | 03 | | Line voltage 3-1 | XXX.X | V | 2 | 0 to 999.9 | R |
| | | FF | | Line voltage data block | | | 6 | | R |
| 02 | 02 | 01 | 00 | Current 1 | XXX.XXX | A | 3 | 0 to 999.999 | R |
| | | 02 | | Current 2 | XXX.XXX | A | 3 | 0 to 999.999 | R |
| | | 03 | | Current 3 | XXX.XXX | A | 3 | 0 to 999.999 | R |
| | | FF | | Current data block | | | 9 | | R |
| 02 | 06 | 00 | 00 | Power factor (average) | X.XXX | | 2 | -1.000 to 1.000 | R |
| | | 01 | | Power factor 1 | X.XXX | | 2 | -1.000 to 1.000 | R |
| | | 02 | | Power factor 2 | X.XXX | | 2 | -1.000 to 1.000 | R |
| | | 03 | | Power factor 3 | X.XXX | | 2 | -1.000 to 1.000 | R |
| | | FF | | Power factor data block | | | 8 | | R |
| 02 | 80 | 00 | 02 | Frequency (average) | XX.XX | Hz | 2 | 0 to 99.99 | R |
| | | | 07 | Temperature | XX.X | °C | 2 | -99.9 to 99.9 | R |

*For signed data, the upper bit shows the sign. '0' shows plus and '1' shows minus.

Chapter 8 How to update the firmware


The firmware of Eco-POWER METER can be upgraded via USB communication. KW Upgrade Tool and USB cable is necessary to upgrade the firmware. Use the latest KW Version Upgrade Tool.

8.1 How to install USB driver

It is necessary to install USB driver (kw9musb_vxxx.inf) for connecting KW9M Eco-POWER METER via USB communication.

- * Once installing USB driver, it is not necessary to install from the second time.
- * When you change the using port, install the driver again.

Turn on KW9M and connect KW9M and PC via USB cable.
After that, install USB driver according to your OS.

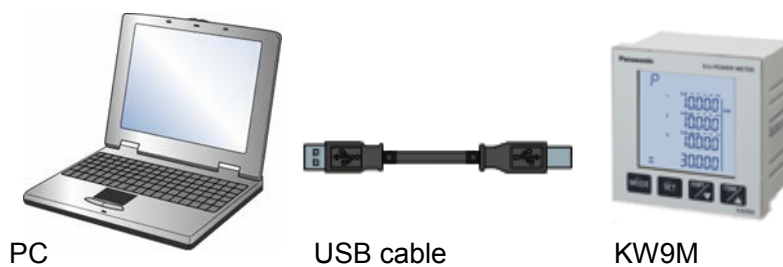

8.2 How to update the firmware

8.2.1 Connect PC and Eco-POWER METER

Connect a PC via USB with Eco-POWER METER.


8.2.2 Prepare Eco-POWER METER to update

Shift the device to update mode according to the below procedures.

- 1) Press 2 keys of <MODE> and <ITEM/▲> for 10 seconds.
- 2) Password entry window will be displayed. Enter the password.

[PROG] on the upper line and the current version [x.xx] on the middle line are displayed.


This is ready to update the firmware of Eco-POWER METER.

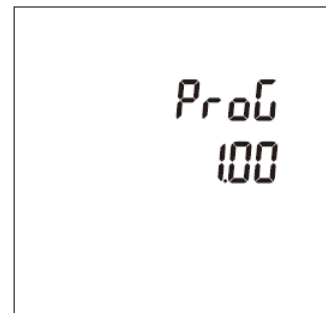


8.2.3 Update the firmware using KW Version Upgrade Tool

Connect Eco-POWER METER to PC via USB cable.


- 1) Start "KW Version Upgrade Tool".
- 2) Select "KW9M" at Type, it changes the window for KW9M.

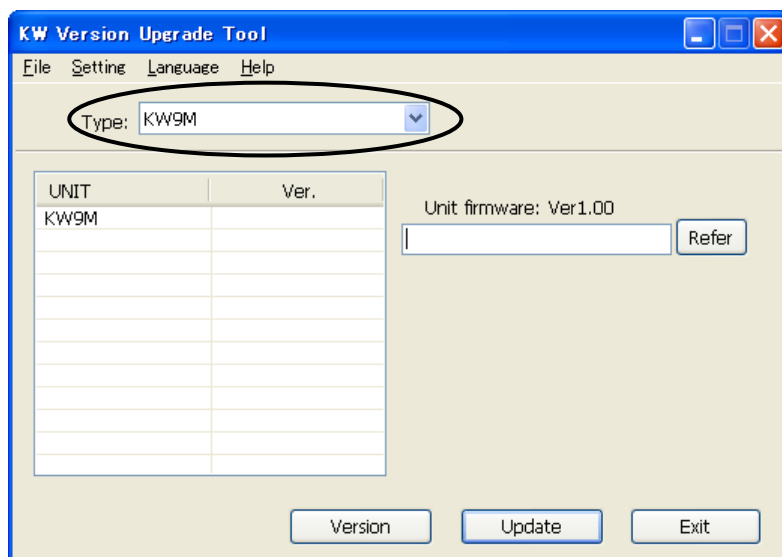


- 3) Set using port and timeout with [Communication settings].

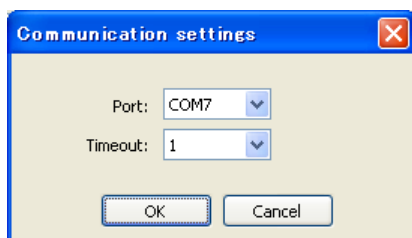

- 4) Click [Refer] and it opens the window to select firmware.
Select file to update “kw9m_verxxx_verup.kw9” and click [Open].
*You can download from our website the latest firmware.

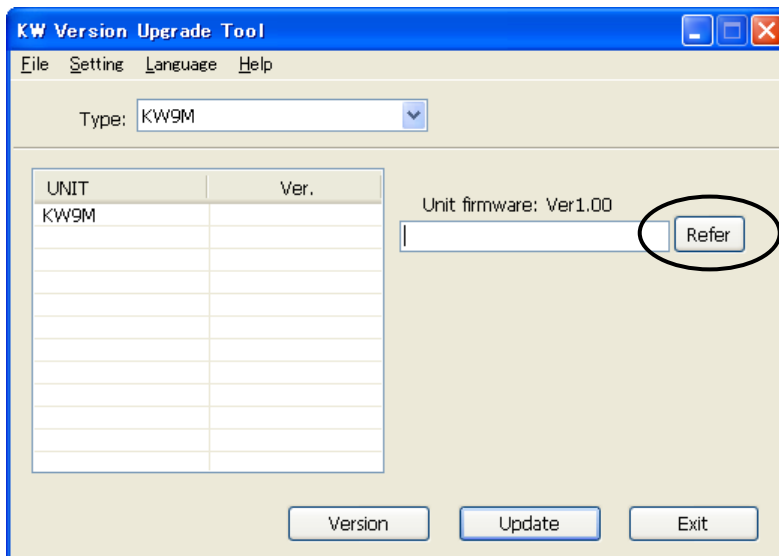


- 5) When selected file name is displayed, click [Update].

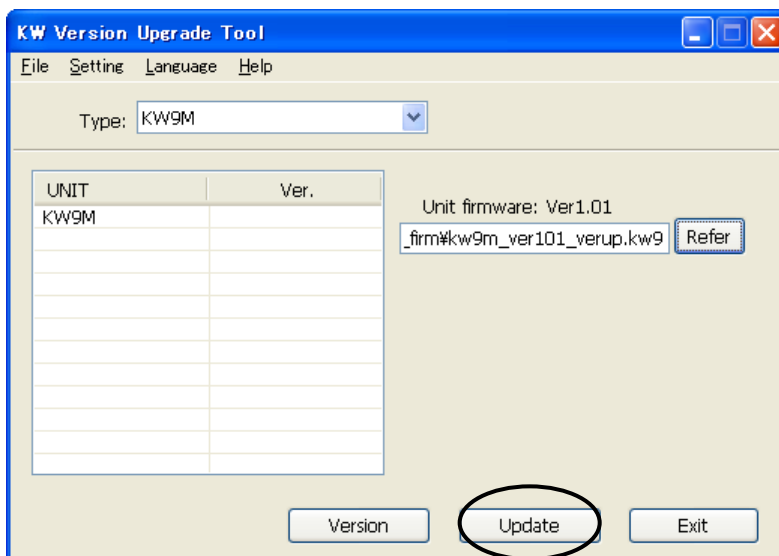


When timed out error is occurred, check the below.

- Is Eco-POWER METER ready to update?
- Is USB cable connected correctly?
- Are communication port and timeout value conformed?

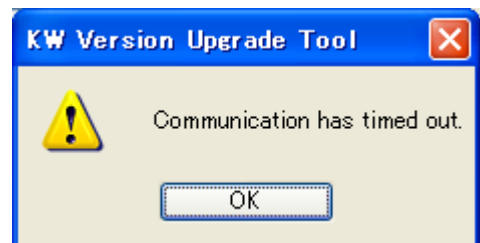






Click [Version] and it displays the current version. After it shows the version, you need to update the firmware if it is not necessary. If not, Eco-POWER METER can't be used.

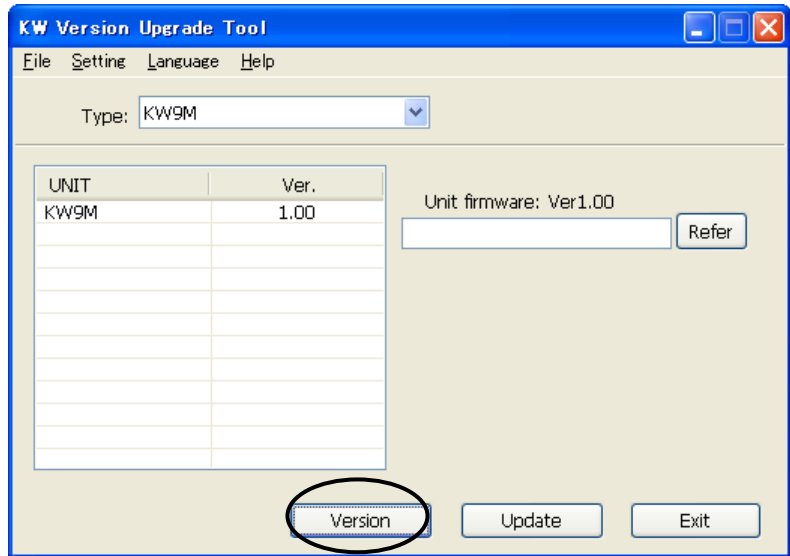

When you have used KW Version Upgrade Tool before, it displays the last updated firmware. If the firmware was moved, the error window will be appeared. Select firmware again and update it.

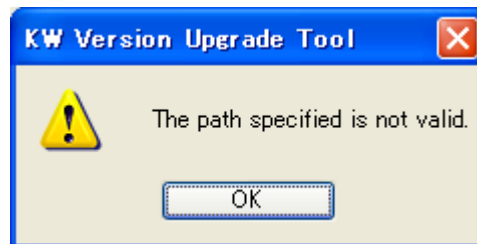


6) When it starts updating, the indicator is appeared and it updates to the selected firmware.

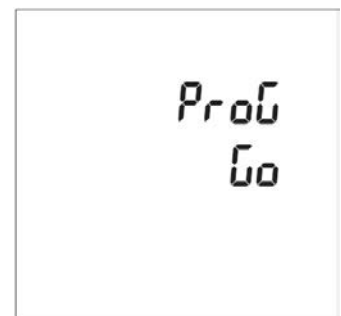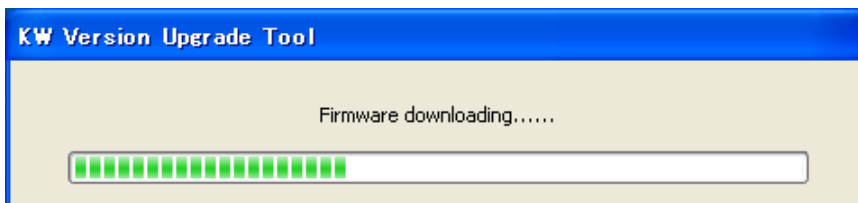


Do not turn off Eco-POWER METER.

- 7) When it completes updating the firmware, the complete window will be appeared.
Click [OK].

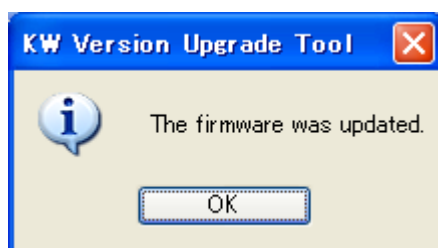

- 8) Cell of unit that its firmware is updated correctly is blue.
You can confirm with the display of Eco-POWER METER and the display will return to measuring.


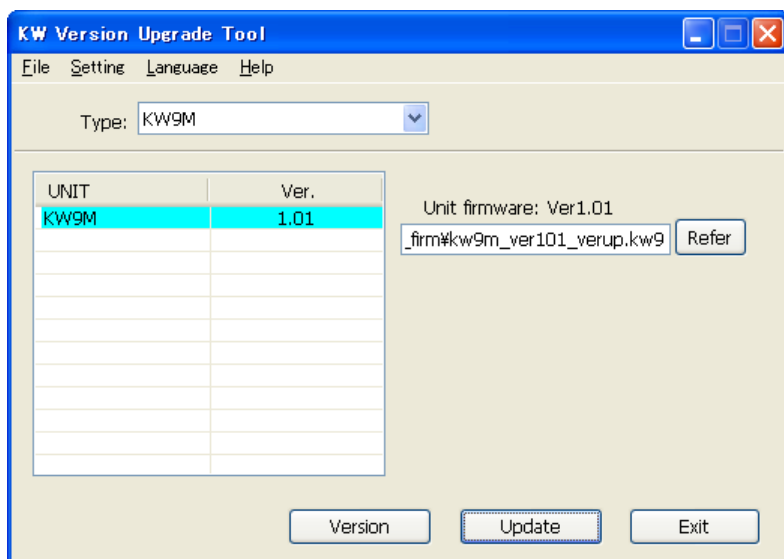


[When it doesn't update correctly]

After completing download, cell of unit that updating is failure is red.

On the display of Eco-POWER METER, [PROG] is displayed on the upper line and [- - - -] is displayed on the middle line.

Check and confirm the wiring of Eco-POWER METER and so on and update again.

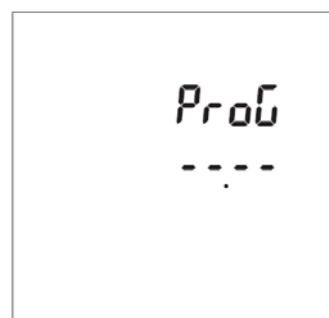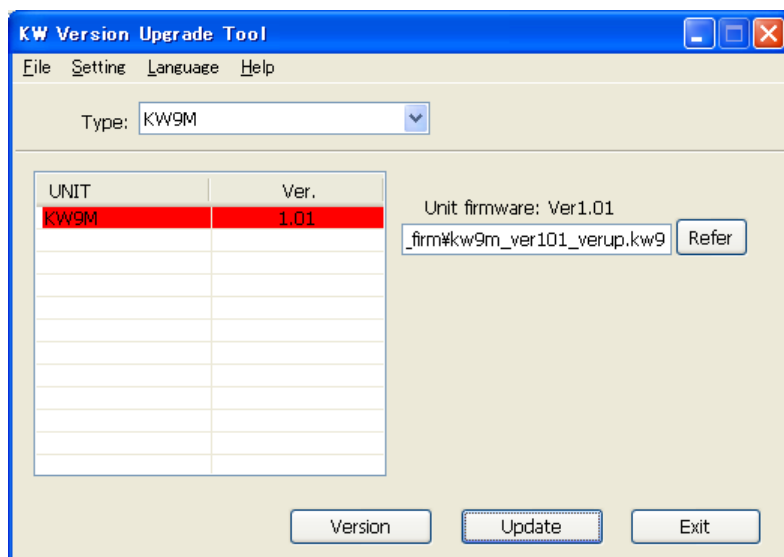

- 9) Click [Exit] to close KW Version Upgrade Tool.
You can use Eco-POWER METER as it is.

Chapter 9 Specifications

9.1 Main unit

| | | |
|------------------------------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| Rated supply voltage | 100 to 240V AC 100 to 300V DC | |
| Rated frequency | 50/60Hz | |
| Nominal power consumption | Approx. 5VA (240V AC at 25°C) Approx. 3W (240V DC at 25°C) | |
| Inrush current | 30A or less (240V AC/DC at 25°C) | |
| Allowable supply voltage | 85 to 264V AC (85 to 110% of rated supply voltage) | |
| Allowable momentary power-off time | 10ms | |
| Ambient temperature | Accuracy guarantee | -10 to + 55°C |
| | Operation | -25 to + 55°C |
| | Storage | -25 to + 70°C |
| Ambient humidity | 30 to 85%RH (at 20°C) non-condensing | |
| Breakdown voltage (initial) | Between the isolated circuits: 2000V/1min | a) enclosure ⇔ all terminals b) between insulated circuits • power supply terminals ⇔ other terminals |
| Insulation resistance (initial) | Between the isolated circuits: 100 MΩ or more | • RS485 terminals ⇔ other terminals • measured current input terminals ⇔ other terminals |
| Vibration resistance | 10 to 150Hz (7.5 minutes/cycle) single amplitude:0.075mm (1h on 3 axes) | |
| | 10 to 55Hz (1 minute/cycle) single amplitude:0.375mm (1h on 3 axes) | |
| Shock resistance | Min. 294m/s ² (5 times on 3 axes) | |
| Display method | LCD with backlight | |
| Display updated cycle | 100 to 1000ms (set with setting mode) | |
| Power failure memory method | Internal memory (overwrite 10 ¹⁰ or more) | |
| Degree of protection | Front: IP51 Back: IP20 | |
| Sea level altitude | Under 2,000m | |
| Dimensions W/H/D | 96 x 96 x 56 mm (without terminal block) 96 x 96 x 68 mm (with terminal block) | |
| Weight | Approx. 450g | |
| Terminal connection | Cable conductor cross section | |
| | Single wire / stranded cable 1pc. 0.5 to 4mm ² (AWG20to 12) | |
| | Single wire/ stranded cable 2pcs. 0.5 to 2 mm ² (AWG20 to 14) | |
| | Stripping length | 7-8mm |
| | Connection method | Screw M2.5 |
| | Tightening torque | 0.4 to 0.5 N m |

9.2 Input Specifications

| | | | | |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|----------------------------------|
| Measured data | | AC sine | | |
| Phase/wire system | | Single-phase two-wire (1P2W) (max.3-circuit) Single-phase three-wire (1P3W) Three-phase three wire (3P3W) Three-phase four-wire (3P4W) (common) | | |
| Applicable power system | | 100V system, 200V system, 400V system | | |
| Measured frequency | | 50/60Hz | | |
| Sampling rate | | Sampling | | 1.024MHz (approx.1.0 μ s) |
| | | Data update | | 100ms 2.25s for Harmonics |
| Voltage | Input voltage | 1P2W | L-L | 0-500V AC |
| | | 1P3W | L-L | 0-500V AC |
| | | | L-N | 0-250V AC |
| | | 3P3W | L-L | 0-500V AC |
| | | 3P4W | L-L | 0-500V AC |
| | | | L-N | 0-289V AC |
| | Impedance | 2 MΩ or more (L-N; V1/V2/V3 - Vn) | | |
| | Resolution | 0.01V | | |
| | Power consumption | Approx. 0.2VA (L-N; V1/V2/V3 - Vn) | | |
| | Accuracy *1 | 0.2% *0.5% for 3-1 voltage of 1P3W, 3P3W and line voltage of 3P4W. | | |
| VT ratio | 1.00 to 600.00 (set with setting mode) *Voltage transformer (VT) is required when you measure a load with voltage over rated voltage. (Rated secondary voltage of VT is 110V.) *When it input direct, VT ratio is set to 1.00. | | | |
| Current | Input current (with CT) | Primary current | | 65535A or less |
| | | Secondary current | | 1A or 5A (set with setting mode) |
| | Max. current | 10A (200% of the rating) | | |
| | Overload capacity | 1000% of the rating for 3s | | |
| | Resolution | 0.001A | | |
| | Power consumption | Approx. 0.2VA | | |
| | Accuracy *1 | 0.2% *0.5% for 2(N)-phase of 1P3W and 2(S)-phase of 3P3W. | | |
| Power | Accuracy *1 | 0.5% | | |
| | | Active power | Class 0.5S (IEC 62053-22) | |
| | | Reactive power | Class 2 (IEC 62053-23) | |
| Temperature | Accuracy | ±5.0°C (after ambient temperature correction with setting mode) Passing 2 hours or more after energized | | |

*1 Without error of current transformers (CT) and voltage transformers (VT)

•It measures from 0.1% of CT secondary current.

9.3 Communication Specifications

<RS485>

| | | |
|--------------------------|-------------|------------------------------------------------------------------------|
| Interface | | Conforming to RS485 |
| Communication method | | Half-duplex |
| Synchronous system | | Synchronous communication method |
| Isolation status | | Isolated with the internal circuits |
| Protocol | | MEWTOCOL, MODBUS(RTU), DL/T645-2007 *1 (select with setting mode) |
| Number of connected unit | | 99 (max.) *2 |
| Transmission distance | | 1200m *3 |
| Transmission speed | | 38400, 19200, 9600, 4800, 2400, 1200bps (select with setting mode) |
| Transmission format | Data length | 8bit (fixed) |
| | Parity | Not available / odd number / even number (select with setting mode) |
| | Stop bit | 1bit, 2bit (select with setting mode) |

*1 MEWTOCOL is the protocol for PLC from Panasonic.

DL/T645 is the China power-meter standard. Only DL/T645-2007 is supported.

*2 For RS485 converter on the computer side, we recommend SI-35 and SI-35USB (from LINE EYE Co.,Ltd.). When using SI-35,SI-35USB or PLC from our company (which can be connected up to 99 units), up to 99 can be connected. In case using this system with the other devices, up to 31 can be connected.

*3 Please check with the actual devices when some commercial devices with RS485 interface are connected. The number of connected devices, transmission distance, and transmission speed may be different according to using transmission line.

< USB >

| | |
|------------------------|-------------------------------|
| Electric specification | Conform to USB2.0 standard |
| Connector shape | USB series MiniB |
| Insulation method | Insulated to internal circuit |
| Transmission speed | 12Mbps(Full-Speed) |
| Transmission function | Computer link (MEWTOCOL) |

*Install the dedicated USB driver before using USB port.

*Do not ground the signal wire of USB communication.

9.4 Self-diagnostic function

If an error occurs, the following indication will be given.

When several errors occur, [1] are indicated for the designated digits.

| Indicator | Meaning | To recover | After recovery |
|-----------|-----------------------------|----------------------------------------------------|-------------------------------|
| 00000001 | Hardware breakdown | Change main unit due to the end of hardware | |
| 00000100 | Firmware update failure | Update again | Start with updating firmware. |
| 00100000 | Internal program error | Power on again | Before the abnormal |
| 10000000 | Memory breakdown or crash * | Change main unit due to the end of internal memory | |

*Includes the possibility that the internal memory life has expired.

9.5 Power Failure Memory

Eco-POWER METER memories integrated electric power and working status to internal memory until when power supply is off. (Power failure guarantee)


And every time to change each setting, each setting value is memorized to internal memory at the same time. Rewritable times are limited. Especially be careful if you set by communication.

Chapter 10 Mounting

10.1 Dimensions

10.1.1 Main unit


(Unit: mm)
(Clearance: ± 1.0)

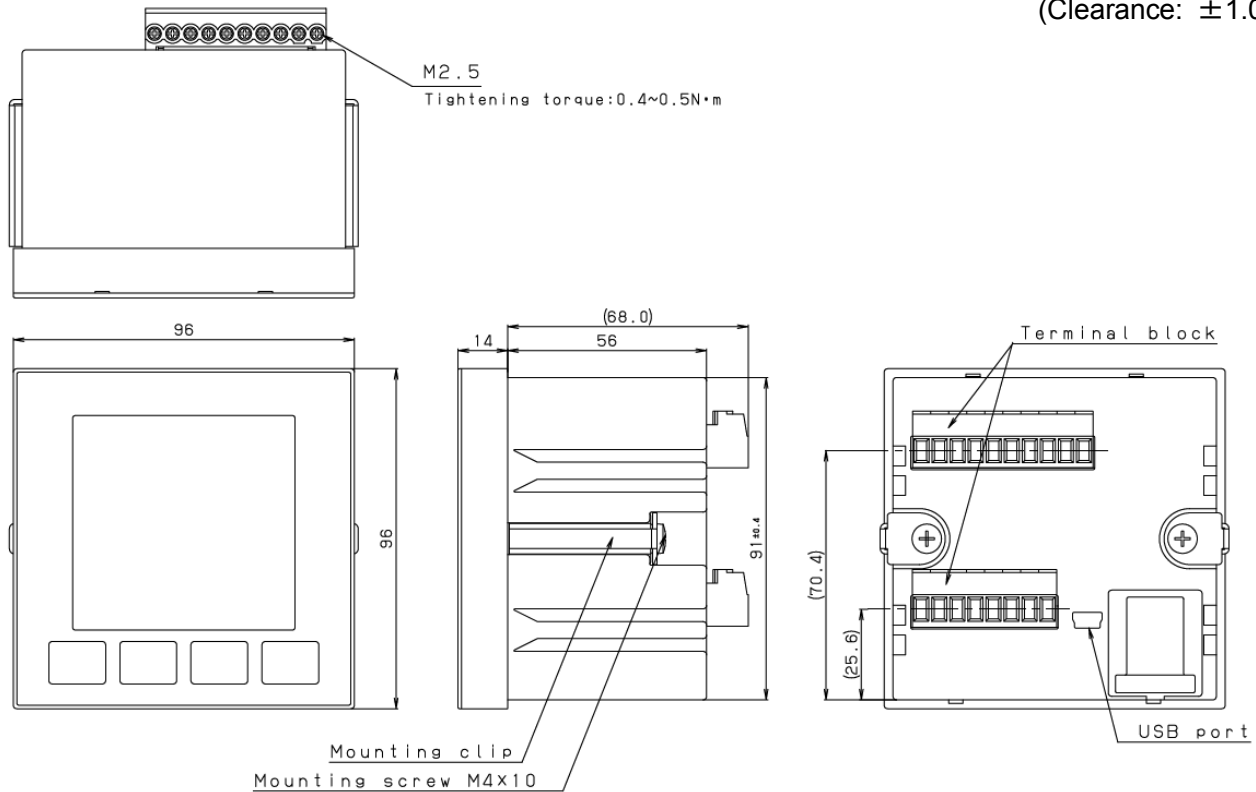

10.2 Panel mounting

(Unit: mm)


◆ Panel cut-out

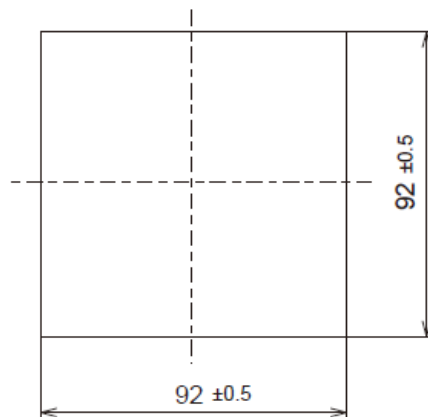

Keep enough space for several mountings.
recommended space:
130mm the left, right, top and bottom
from center of the unit

◆ Panel mounting

- 1) Remove the mounting clips from the unit.
 - 2) Insert the unit from the front of the panel.
 - 3) Attach the mounting clips at the both side of the case and secure in place with the screws.
(Tightening torque: approx. 0.2 to 0.3N·m)
- Applicable panel thickness: 1 to 5mm

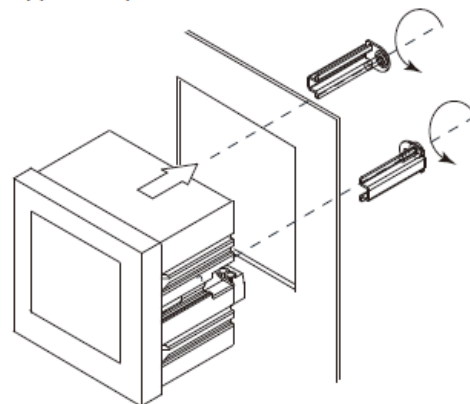

Revision History

| Issue Date | Manual No. | Content of revision |
|-----------------|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| November, 2012 | WUME-KW9M-01 | First edition |
| February, 2013 | WUME-KW9M-02 | 2 nd edition -Correct the errors -Add 3.5 Low Voltage Directive |
| April, 2013 | WUME-KW9M-03 | 3 rd edition -Add How to update the firmware |
| September, 2013 | WUME-KW9M-04 | 4 th edition -Add note for three-phase four-wire system wiring -Add condition for Low voltage directive |
| February, 2014 | WUME-KW9M-05 | 5 th edition <Change specs> -Maximum value of primary side current of CT <Add functions> - Demand measurement - Measurement of current THD and voltage THD - Display updated cycle setting - Readout power factor status lead / lag |
| July, 2014 | WUME-KW9M-06 | 6 th edition <Change specs> Accuracy of power measurement - Power: 1.0% to 0.5% - Current, voltage: 0.5% to 0.2% <Add functions> - Add registers for reset function |
| | | |