



SERVICE STATION MANUAL

854366



BELLAGIO



SERVICE STATION MANUAL

BELLAGIO

THE VALUE OF SERVICE

Only the mechanics of the Official Moto Guzzi Service Network know this vehicle well, thanks to constant technical professional development and Moto Guzzi specific training programmes, and have the tools needed to carry out maintenance and repair operations correctly.

The reliability of the vehicle also depends on its mechanical conditions. Checking the vehicle before setting off, carrying out routine maintenance and using only Moto Guzzi Original Spare parts is fundamental!

For information about the nearest Official Dealer and/or Service Centre, consult the Yellow Pages or search directly on the inset map in our Official Website:

www.motoguzzi.it

Only by purchasing Moto Guzzi Original Spare Parts will you get a product designed and tested during the bike designing phase. Moto Guzzi Original Spare Parts are subject to systematic quality control procedures so that their reliability and performance over time is guaranteed.

The descriptions and illustrations given in this publication are not binding; While the basic features as described and illustrated in this booklet remain unchanged, Moto Guzzi reserves the right, at any time and without being required to update this publication beforehand, to make any changes to components, parts or accessory supplies, which it deems necessary to improve the product or which are required for manufacturing or commercial reasons.

Not all versions shown in this publication are available in all Countries. The availability of individual versions should be checked with the Official Moto Guzzi sales network.

© Copyright 2007- Moto Guzzi. All rights reserved. Reproduction of this publication in whole or in part is prohibited. Moto Guzzi - After sales service.

SERVICE STATION MANUAL

BELLAGIO

This manual provides the main information to carry out regular maintenance operations on your vehicle. This manual is intended to **Moto Guzzi Dealers** and their qualified mechanics; several concepts have been deliberately omitted as they are considered unnecessary. As it is not possible to include complete mechanical notions in this manual, users should have basic mechanical knowledge or minimum knowledge about the procedures involved when repairing scooters. Without this knowledge, repairing or checking the vehicle may be inefficient or even dangerous. As the vehicle repair and check procedures are not described in detail, be extremely cautious so as not to damage components or injure individuals. In order to optimise customer satisfaction when using our vehicles, **Moto Guzzi s.p.a.** commits itself to continually improve its products and the relative documentation. The main technical modifications and changes in repair procedures are communicated to all **Moto Guzzi Sales Outlets and its International Subsidiaries**. These changes will be introduced in the subsequent editions of the manual. In case of need or further queries on repair and check procedures, consult **Moto Guzzi CUSTOMER DEPARTMENT**, which will be prepared to provide any information on the subject and any further communications on updates and technical changes related to the vehicle.

NOTE Provides key information to make the procedure easier to understand and carry out.

CAUTION Refers to specific procedures to carry out for preventing damages to the vehicle.

WARNING Refers to specific procedures to carry out to prevent injuries to the repairer.



Personal safety Failure to completely observe these instructions will result in serious risk of personal injury.



Safeguarding the environment Sections marked with this symbol indicate the correct use of the vehicle to prevent damaging the environment.



Vehicle intactness The incomplete or non-observance of these regulations leads to the risk of serious damage to the vehicle and sometimes even the invalidity of the guarantee



INDEX OF TOPICS

CHARACTERISTICS

CHAR

SPECIAL TOOLS

S-TOOLS

MAINTENANCE

MAIN

ELECTRICAL SYSTEM

ELE SYS

ENGINE FROM VEHICLE

ENG VE

ENGINE

ENG

POWER SUPPLY

P SUPP

SUSPENSIONS

SUSP

CHASSIS

CHAS

BRAKING SYSTEM

BRAK SYS

BODYWORK

BODYW

PRE-DELIVERY

PRE DE

INDEX OF TOPICS

CHARACTERISTICS

CHAR

Rules

Safety rules

Carbon monoxide

If you need to keep the engine running while working on the vehicle, please ensure that you do so in an open or very well ventilated area. Never run the engine in an enclosed area. If you do work in an enclosed area, make sure to use a fume extraction system.

CAUTION



EXHAUST EMISSIONS CONTAIN CARBON MONOXIDE, A POISONOUS GAS WHICH CAN CAUSE LOSS OF CONSCIOUSNESS AND EVEN DEATH.

Fuel

CAUTION



THE FUEL USED TO POWER INTERNAL COMBUSTION ENGINES IS HIGHLY FLAMMABLE AND MAY BE EXPLOSIVE UNDER CERTAIN CONDITIONS. IT IS THEREFORE RECOMMENDED TO CARRY OUT REFUELLING AND MAINTENANCE PROCEDURES IN A VENTILATED AREA WITH THE ENGINE SWITCHED OFF. DO NOT SMOKE DURING REFUELLING AND NEAR FUEL VAPOURS, AVOIDING ANY CONTACT WITH NAKED FLAMES, SPARKS OR OTHER SOURCES WHICH MAY CAUSE THEM TO IGNITE OR EXPLODE. DO NOT DISPERSE FUEL IN THE ENVIRONMENT. KEEP OUT OF THE REACH OF CHILDREN

Hot components

The engine and the exhaust system components become very hot and remain hot for some time after the engine has been switched off. When handling these components, wear insulating gloves or wait until the engine and the exhaust system have cooled down.

Used engine oil and transmission oil

CAUTION



IT IS ADVISABLE TO WEAR PROTECTIVE IMPERMEABLE GLOVES WHEN SERVICING THE VEHICLE. THE ENGINE OR GEARBOX OIL MAY CAUSE SERIOUS INJURIES TO THE SKIN IF HANDLED FOR PROLONGED PERIODS OF TIME AND ON A REGULAR BASIS. WASH YOUR HANDS CAREFULLY AFTER HANDLING OIL. HAND THE OIL OVER TO OR HAVE IT COLLECTED BY THE NEAREST USED OIL RECYCLING COMPANY OR THE SUPPLIER. DO NOT DISPOSE OF OIL IN THE ENVIRONMENT. KEEP OUT OF THE REACH OF CHILDREN

Brake and clutch fluid

BRAKE AND CLUTCH FLUIDS CAN DAMAGE THE PLASTIC OR RUBBER PAINTED SURFACES. WHEN SERVICING THE BRAKING SYSTEM OR THE CLUTCH SYSTEM, PROTECT THESE COMPONENTS WITH A CLEAN CLOTH. ALWAYS WEAR PROTECTIVE GOGGLES WHEN SERVICING THESE SYSTEMS. BRAKE AND CLUTCH FLUIDS ARE EXTREMELY HARMFUL FOR YOUR EYES. IN THE EVENT OF ACCIDENTAL CONTACT WITH THE EYES, RINSE THEM IMMEDIATELY WITH ABUNDANT COLD, CLEAN WATER AND SEEK MEDICAL ADVICE. KEEP OUT OF THE REACH OF CHILDREN

Battery electrolyte and hydrogen gas**CAUTION**

THE BATTERY ELECTROLYTE IS TOXIC, CORROSIVE AND AS IT CONTAINS SULPHURIC ACID, IT CAN CAUSE BURNS WHEN IN CONTACT WITH THE SKIN. WHEN HANDLING BATTERY ELECTROLYTE, WEAR TIGHT-FITTING GLOVES AND PROTECTIVE APPAREL. IN THE EVENT OF SKIN CONTACT WITH THE ELECTROLYTIC FLUID, RINSE WELL WITH PLENTY OF CLEAN WATER. IT IS PARTICULARLY IMPORTANT TO PROTECT YOUR EYES BECAUSE EVEN TINY AMOUNTS OF BATTERY ACID MAY CAUSE BLINDNESS. IF THE FLUID GETS IN CONTACT WITH YOUR EYES, WASH WITH ABUNDANT WATER FOR FIFTEEN MINUTES AND CONSULT AN EYE SPECIALIST IMMEDIATELY. THE BATTERY RELEASES EXPLOSIVE GASES; KEEP IT AWAY FROM FLAMES, SPARKS, CIGARETTES OR ANY OTHER HEAT SOURCES. ENSURE ADEQUATE VENTILATION WHEN SERVICING OR RECHARGING THE BATTERY. KEEP OUT OF THE REACH OF CHILDREN BATTERY LIQUID IS CORROSIVE. DO NOT POUR IT OR SPILL IT, PARTICULARLY ON PLASTIC COMPONENTS. ENSURE THAT THE ELECTROLYTIC ACID IS COMPATIBLE WITH THE BATTERY TO BE ACTIVATED.

Maintenance rules**GENERAL PRECAUTIONS AND INFORMATION**

When repairing, dismantling and reassembling the vehicle, follow the recommendations given below carefully.

BEFORE DISASSEMBLING COMPONENTS

- Before dismantling components, remove dirt, mud, dust and foreign bodies from the vehicle. Use the special tools designed for this bike, as required.

COMPONENTS REMOVAL

- Do not loosen and/or tighten screws and nuts using pliers or any other tools than the specific wrench.
- Mark positions on all connection joints (pipes, cables etc.) before separating them, and identify them with distinctive symbols.
- Each component needs to be clearly marked to enable identification during reassembly.
- Clean and wash the dismantled components carefully using a low-flammability detergent.
- Keep mated parts together since they have "adjusted" to each other due to normal wear.

- Some components must be used together or replaced completely.
- Keep away from heat sources.

REASSEMBLING COMPONENTS

CAUTION

BEARINGS MUST ROTATE FREELY, WITHOUT JAMMING AND/OR NOISE, OTHERWISE, THEY NEED TO BE REPLACED.

- Only use ORIGINAL Moto Guzzi SPARE PARTS.
- Comply with lubricant and consumables use guidelines.
- Lubricate parts (whenever possible) before reassembling them.
- When tightening nuts and screws, start from the ones with the largest section or from the internal ones, moving diagonally. Tighten nuts and screws in successive steps before applying the tightening torque.
- Always replace self-locking nuts, washers, sealing rings, circlips, O-rings (OR), split pins and screws with new ones if their tread is damaged.
- When assembling the bearings, make sure to lubricate them well.
- Check that each component is assembled correctly.
- After a repair or routine maintenance procedure, carry out pre-ride checks and test the vehicle on private grounds or in an area with low traffic density.
- Clean all coupling surfaces, oil guard rims and gaskets before refitting them. Smear a light layer of lithium-based grease on the oil guard rims. Reassemble oil guards and bearings with the brand or lot number facing outward (visible side).

ELECTRICAL CONNECTORS

Electric connectors must be disconnected as described below; failure to comply with this procedure causes irreparable damage to both the connector and the wiring harness:

Press the relative safety clips, if applicable.

- Grip the two connectors and disconnect them by pulling them in opposite directions.
- If any signs of dirt, rust, moisture, etc. are noted, clean the inside of the connector carefully with a jet of compressed air.
- Ensure that the cables are correctly fastened to the internal connector terminals.
- Then connect the two connectors, ensuring that they couple correctly (if fitted with clips, you will hear them "click" into place).

CAUTION

DO NOT DISCONNECT CONNECTORS BY PULLING THE CABLES.

NOTE

THE TWO CONNECTORS CAN ONLY BE CONNECTED IN ONE DIRECTION: CONNECT THEM THE RIGHT WAY ROUND.

TIGHTENING TORQUES

CAUTION

REMEMBER THAT THE TIGHTENING TORQUES FOR ALL FASTENING ELEMENTS ON WHEELS, BRAKES, WHEEL AXLES AND ANY OTHER SUSPENSION COMPONENTS PLAY A KEY ROLE IN ENSURING VEHICLE SAFETY AND MUST COMPLY WITH SPECIFIED VALUES. CHECK THE

TIGHTENING TORQUES OF FASTENING ELEMENTS ON A REGULAR BASIS AND ALWAYS USE A TORQUE WRENCH TO REASSEMBLE THESE COMPONENTS. FAILURE TO COMPLY WITH THESE RECOMMENDATIONS MAY CAUSE ONE OF THESE COMPONENTS TO LOOSEN OR EVEN DETACH, CAUSING A WHEEL TO LOCK OR COMPROMISING VEHICLE HANDLING. THIS MAY LEAD TO FALLS, WITH THE RISK OF SERIOUS INJURY OR DEATH.

Running-in

Running the engine in correctly is essential for ensuring engine longevity and functionality. Twisty roads and gradients are ideal for running in the engine, brakes and suspension effectively. Vary your riding speed during the running in period. This ensures that components operate in "loaded" conditions and then "unloaded" conditions, allowing the engine components to cool.

CAUTION

THE CLUTCH MAY EMIT A SLIGHT BURNING SMELL WHEN FIRST USED. THIS PHENOMENON SHOULD BE CONSIDERED NORMAL AND WILL DISAPPEAR AS SOON AS THE CLUTCH PLATES GET ADAPTED.

IT IS IMPORTANT TO STRAIN ENGINE COMPONENTS DURING RUN-IN, HOWEVER, MAKE SURE NOT TO OVERDO THIS.

CAUTION

THE FULL PERFORMANCE OF THE VEHICLE IS ONLY AVAILABLE AFTER THE SERVICE AT THE END OF THE RUNNING IN PERIOD.

Follow the guidelines detailed below:

- Do not fully open the throttle grip abruptly at low engine speeds, either during or after the running in period.
- During the first 100 Km (62 miles) use the brakes gently, avoiding sudden or prolonged braking. That is to permit the adequate adjustment of the pad friction material to the brake discs.



AFTER THE SPECIFIED MILEAGE, TAKE THE VEHICLE TO AN OFFICIAL Moto Guzzi DEALER FOR THE CHECKS INDICATED IN THE "AFTER RUN-IN" TABLE IN THE SCHEDULED MAINTENANCE SECTION TO AVOID INJURING YOURSELF, OTHERS AND /OR DAMAGING THE VEHICLE.

- Between 1000 km (625 miles) and 2000 km (1250 miles) travelled, ride more vigorously, vary speeds and twist throttle fully for some short periods for best coupling of the components; do not exceed 6000 rpm.
- After 2000 km (1250 miles) a better engine performance may be expected, but without exceeding the engine maximum rpm allowed (7600 rpm).

Vehicle identification

SERIAL NUMBER LOCATION

These numbers are necessary for vehicle registration.

NOTE

ALTERING IDENTIFICATION NUMBERS MAY BE SERIOUSLY PUNISHABLE BY LAW. IN PARTICULAR, MODIFYING THE FRAME NUMBER IMMEDIATELY VOIDS THE WARRANTY.

This number is composed by numbers and letters, as in the example shown below.

ZGULY0000YMXXXXXX

KEY:

ZGU: WMI (World manufacturer identifier) code;

LY: model;

000: version variation;

0: digit free


Y year of manufacture

M: production plant (M= Mandello del Lario);

XXXXXX: progressive number (6 digits);


CHASSIS NUMBER

The chassis number is stamped on the right side of the headstock.

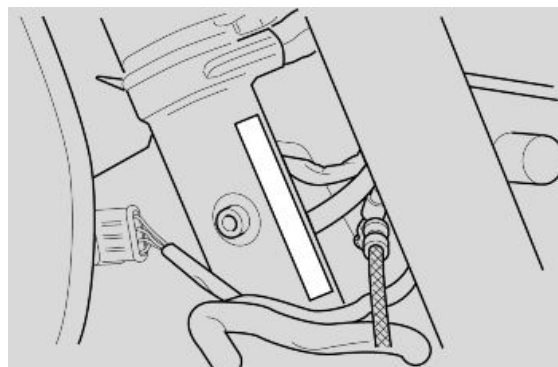

ENGINE NUMBER

The engine number is stamped on the left side, close to the engine oil level check cap.

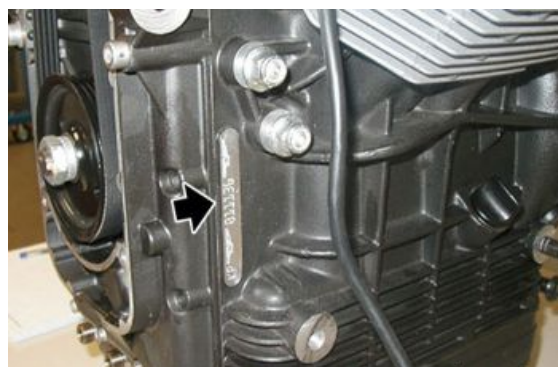

Dimensions and mass

WEIGHT AND DIMENSIONS

Specification	Desc./Quantity
Length	2253 mm (88.70 in)
Length (Luxury)	2276 mm (89.60 in)
Width (to the brake / clutch levers)	820 mm (32.30 in)
Height (to the brake pumps / clutch)	1130 mm (44.50 in)
Height (to the brake pumps / clutch) (Luxury)	1110 mm (43.70 in)
Saddle height	780 mm (30.71 in)
Saddle height (Luxury)	760 mm (29.92 in)
Minimum ground clearance	150 mm (5.9 in)
Minimum ground clearance (Luxury)	105 mm (4.13 in)
Wheelbase	1560 mm (61.42 in)
Wheelbase (Luxury)	1565 mm (61.61 in)
Kerb weight	237 kg (522 lb)

Engine

ENGINE

Specification	Desc./Quantity
Type	traverse-mounted twin-cylinder four-stroke V 90°
No. of cylinders	2
Cylinder arrangement	V 90°
Cubic capacity	935.6 cm ³ (57.09 cu.in)
Bore / stroke	95 x 66 mm (3.74 x 2.66 cu.in)
Compression ratio	10:1
Electric	starter
Engine idle speed	1100 ± 100 rpm
Clutch	dry, twin disc with hydraulic control
Lubrication	Pressure-fed, controlled by valves and trochoidal pump
Air filter	cartridge-type dry filter
Cooling	air
Timing system diagram:	2 rod valves and rocking levers
Valid values with checking clearance between rocking levers and valve	inlet: 0.10 mm (0.0039 in) outlet: 0.15 mm (0.0059 in)

Transmission

TRANSMISSION

Specification	Desc./Quantity
Gear ratio	Primary gears 24/35
Gearbox	Mechanical, 6 speeds with foot lever on the left hand side of the engine
Gear ratios:	1st gear : 17/38 = 1 :2.2353 2nd gear : 20/34 = 1:1.7 3rd gear : 23/31 = 1:1.3478 4th gear : 26/29 = 1:1.1154 5th gear : 31/30 = 1:0.9677 6th gear : 29/25 = 1:0.8621
Final drive	with U-joint
Ratio	12/44 = 1:3.6667

Capacities

CAPACITY

Specification	Desc./Quantity
Engine oil sump	3000 cm ³ (183 cu.in)
Gearbox oil	500 cm ³ (30.5 cu.in)
Transmission oil	380 cm ³ (23.2 cu.in)
Fuel (reserve included)	19 +/- 0.5 l (5.02 +/- 0.13 US gal)
Fuel reserve	4 l (1.056 US gal)
Adjustable telescopic fork oil (per fork leg)	0.485 l (0.128 US gal)
Seats	2
Vehicle maximum load	210 kg (463 lb) (rider + passenger + luggage)

Electrical system

ELECTRICAL SYSTEM

Specification	Desc./Quantity
Spark plugs - inner	long life, NGK PMR8B
Outer spark plug	NGK BPR6ES
Electrode gap	0.6 - 0.7 mm (0.024 - 0.028 in)
Battery	12 V - 18 Ampere/hour

Specification	Desc./Quantity
Generator - alternator	Output power: 350 W at 5000 rpm (12V - 25A)
Main fuses	30 A
Auxiliary fuses	3 A - 15 A
Daylight running light	12V - 5 W
Low/High beam headlight (halogen)	12 V - 55 W / 60 W H4
Turn indicators	12V - 10 W
Rear tail light /stop light	12 V - 5 / 21 W
Dashboard lighting	LED
License plate light	12V - 5 W
Turn indicator warning light	LED
Neutral gear warning light	LED
Side stand down warning light	LED
Low fuel warning light	LED
High beam warning light	LED
Oil pressure warning light	LED
General alarm warning light	LED


Frame and suspensions

CHASSIS - SUSPENSIONS

Specification	Desc./Quantity
Chassis	Double cradle, high strength steel tube chassis
Headstock angle	28°
Trail	92 mm (3.62 in)
Front suspension	MARZOCCHI hydraulic telescopic fork, □ 45 mm (1.77 in) with separate adjustment for rebound and compression damping.
Front wheel travel	140 mm (5.5 in)
Rear suspension - type	single arm suspension with progressive rising-rate leverage, single shock absorber with adjustable rebound and with ergonomic knob for preloading adjustment.
Rear wheel travel	120 mm (4.7 in)
Rear wheel travel (Luxury)	61 mm (2.4 in)

SIZES A AND B

Specification	Desc./Quantity
Size A	764.74 mm (30.1 in)
Size B	404.25 mm (15.91 in)

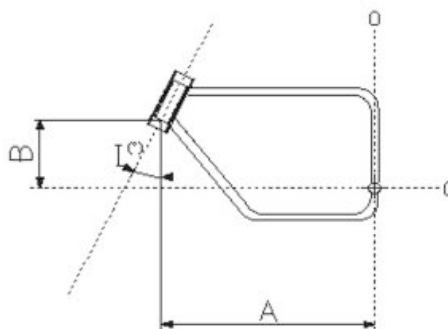

Brakes

BRAKES

Specification	Desc./Quantity
Front	stainless steel Ø 320 mm (12.6 in) twin floating disc, Brembo floating callipers with 2 parallel plungers
Rear	stainless steel Ø 282 mm (11.1 in) fixed disc, Brembo floating calliper with 2 parallel pistons

Wheels and tyres

WHEELS AND TYRES

Specification	Desc./Quantity
Wheel rims	with spokes
Front wheel rim	3.5" x 18"
Rear wheel rim	5.50 x 17
Tyres - Front size	120/70 - ZR 18" M/C 59 W
Tyres - Rear size	180/55 - ZR 17" M/C 73 W
Tyres	METZELER Roadtec Z6 Pirelli Angel ST Dunlop Sportmax Roadsmart
Inflation pressure (front)	2.3 bar (230 kPa) (33.4 PSI)
Inflation pressure with passenger (front)	2.3 bar (230 kPa) (33.4 PSI)
Inflation pressure (rear)	2.5 bar (250 kPa) (36.3 PSI)
Inflation pressure with passenger (rear)	2.7 bar (270 kPa) (39.1 PSI)

Supply

SUPPLY

Specification	Desc./Quantity
Supply	MAGNETI MARELLI IAW MULTIPOINT electronic phased sequential fuel injection, ALFA-N System.
Diffuser	diameter: 40 mm (1.57 in)
Fuel	Premium unleaded petrol, minimum octane rating 95 (NORM) and 85 (NOMM)

Tightening Torques

HEADS

Name	Torque in Nm
Oil cap (2)	25 Nm (18.44 lbf ft)
Exhaust system stud bolt (4)	10 Nm (7.38 lbf ft) - Loctite 648
Rocking lever support nut - M10x1.5 (8)	15 Nm (11.06 lbf ft) + 90° + 90°
Rocking lever nut (4)	10 Nm (7.38 lbf ft)
Set screw - TE M6x16 (4)	10 Nm (7.38 lbf ft)
Head cover screw - M6x25 (16)	10 Nm (7.38 lbf ft)
Head fixing screw (4)	15 Nm (11.06 lbf ft) + 90°
Oil temperature sensor	11 Nm (8.11 lbf ft) - Loctite 243
Oil temperature sensor container	11 Nm (8.11 lbf ft) - Loctite 601
Outer Spark plugs	30 Nm (22.13 lbf ft) - Molikote
Inner spark plugs	15 Nm (11.06 lbf ft) - Molikote

CRANKCASE

Name	Torque in Nm
Crankcase stud bolt - cylinder (8)	25 Nm (18.44 lbf ft)
Transmission side flange stud bolt - M8x66 (3)	35 Nm (25.81 lbf ft)
Transmission side flange stud bolt - M8x75 (2)	35 Nm (25.81 lbf ft)
Crankshaft flange screw - TE M8x25 (14)	25 Nm (18.44 lbf ft)
Timing system cover screw - TCEI M8x55 (4)	25 Nm (18.44 lbf ft)
Timing system cover screw - TCEI M6x30 (10)	10 Nm (7.38 lbf ft)
Oil vapour union screw - TCEI M6x20 (2)	10 Nm (7.38 lbf ft)
Timing system outer cover screw - TCEI M6x16 (4)	10 Nm (7.38 lbf ft)
Screw TSPEI M4x8 (2)	5 Nm (3.69 lbf ft) - Loctite 243
TCEI M6x40 Screw (2)	10 Nm (7.38 lbf ft)
Timing sensor - TCEI M5x12 (2)	6 Nm (4.42 lbf ft)
Crankcase stud bolts - chassis (4)	40 Nm (29.5 lbf ft) - Loctite 601

OIL SUMP

Name	Torque in Nm
Oil sump centre lower screws - TE M6x90 (4)	10 Nm (7.38 lbf ft)
Oil sump screw - TCEI M6x25 (14)	10 Nm (7.38 lbf ft)
Oil drainage plug - M10x1 (1)	20 Nm (14.75 lbf ft)
Oil filter (1)	15 Nm (11.06 lbf ft)
Oil filter fitting (1)	40 Nm (29.5 lbf ft) - Loctite 243
Pressure-relief plug	40 Nm (29.5 lbf ft)
Oil intake filter fixing screw - TCEI M6x16 (1)	10 Nm (7.38 lbf ft) - Loctite 648

OIL PUMP

Name	Torque in Nm
Oil pump fixing screw - TBEI M6x30 (3)	10 Nm (7.38 lbf ft) - Loctite 243
Oil pump gear nut - M10x1.25 (1)	20 Nm (14.75 lbf ft)
Oil delivery pipe screw (1)	17 Nm (12.54 lbf ft)
Oil pressure sensor	45 Nm (33.19 lbf ft)

TIMING SYSTEM

Name	Torque in Nm
Camshaft flange screw - TE M6x20 (3)	10 Nm (7.38 lbf ft)
Timing system gear nut on camshaft - M18 (1)	150 Nm (110.63 lbf ft)
Alternator locking nut - M16x1.5 (1)	80 Nm (59 lbf ft) - Loctite 243
Camshaft support screw on timing system cover - TCEI M4x10 (4)	5 Nm (3.69 lbf ft) - Loctite 243

CRANKSHAFT - FLYWHEEL

Name	Torque in Nm
Start-up crown fixing screw on flywheel (8)	18 Nm (13.28 lbf ft) - Loctite 243
Connecting rod screw (4) - pre-tightening	40 Nm (29.5 lbf ft)
Connecting rod screw (4) - final tightening	80 Nm (59 lbf ft)
Flywheel fixing screw on crankshaft - M8x25 (6)	42 Nm (30.98 lbf ft) - Loctite 243

GEAR

Name	Torque in Nm
Gear shift cable lever nut	10 Nm (7.38 lbf ft)
Gear shift tie rod lever nut on gear pre-selector	10 Nm (7.38 lbf ft)
Gearbox to crankcase fixing nut - M8 (5)	20 Nm (14.75 lbf ft)
TE flanged screw fixing gearbox to crankcase - M8x45 (1)	20 Nm (14.75 lbf ft)
Oil cap M18x1.5 (1)	28 Nm (20.65 lbf ft)
Breather cap (1)	8 Nm (5.9 lbf ft)
Gear in neutral sensor (1)	10 Nm (7.38 lbf ft)
Oil drainage plug - M10x1 (1)	24 Nm (17.7 lbf ft)
Transmission shaft ring nut (1)	100 Nm (73.76 lbf ft)

CHASSIS

Name	Torque in Nm
Electronic control unit lower retainer - M6x20 (2)	10 Nm (7.38 lbf ft)
Electronic control unit upper retainer - M6x35 (2)	10 Nm (7.38 lbf ft) - Loctite 243
Tank to chassis support rubber rings retainer - M8x18 (2)	25 Nm (18.44 lbf ft)
Gearbox to chassis retainer - M12 (1+1)	50 Nm (36.88 lbf ft)
Engine support front plate retainer - M12x50 (2)	80 Nm (59 lbf ft)
Rider left and right footrest to chassis support retainer - M8x65 (4)	25 Nm (18.44 lbf ft)
Passenger left and right footrest to chassis support retainer - M8x25 (4)	25 Nm (18.44 lbf ft)
Filter box holding rear bracket to chassis retainer - M8x16 (2)	15 Nm (11.06 lbf ft)
Rider heel rest to footrest support plate retainer - M5x15 (6)	6 Nm (4.42 lbf ft)
Stud bolt for fixing front bulkheads on the steering sleeve - M6x1 (2)	10 Nm (7.38 lbf ft)

FOOTRESTS AND LEVERS

Name	Torque in Nm
Footrest rubber retainer - M6x12 (8)	10 Nm (7.38 lbf ft)
Gear shift lever cable retainer (nut) - M6x1 (2)	10 Nm (7.38 lbf ft)
Gear shift lever / brake pin retainer - M6x16 (1+1)	10 Nm (7.38 lbf ft)
Gear shift lever pin retainer - M8 (1)	15 Nm (11.06 lbf ft) - Loctite 243
Preselector lever retainer - M6x20 (1)	10 Nm (7.38 lbf ft)

SIDE STAND

Name	Torque in Nm
Stand plate to engine retainer - M12x35 (2)	80 Nm (59 lbf ft)
Side stand retainer bolt - M10x1.25 (1)	10 Nm (7.38 lbf ft)
Switch retainer - M5x16 (2)	6 Nm (4.42 lbf ft)
Pin lock nut - M10x1.25 (1)	30 Nm (22.13 lbf ft)

SWING ARM

Name	Torque in Nm
Swingarm clamp on bushing retainer - M6x25 (2)	10 Nm (7.38 lbf ft)
Fork on cardan shaft housing retainer - M10x35 (4)	50 Nm (36.88 lbf ft)
Torque arm to cardan shaft housing retainer - M10x55 (1)	50 Nm (36.88 lbf ft)
Brake torque arm to chassis retainer - M10x55 (1)	50 Nm (36.88 lbf ft)
Fork pin to fork retainer - M20x1.5 (1)	60 Nm (44.25 lbf ft)
Preloading bushing to fork pin retainer - M25x1.5 (1)	10 Nm (7.38 lbf ft)

FRONT SUSPENSION

Name	Torque in Nm
Fork stem on lower/upper plate retainer - M8x30 (6)	25 Nm (18.44 lbf ft)
Headstock nut - M23x1 (1)	50 Nm (36.88 lbf ft)
Headstock ring nut - M25x1 (1)	7 Nm (5.16 lbf ft) - the headstock should turn freely
Fork stem cap (2)	25 Nm (18.44 lbf ft)
Fork hub closing - M6x40 (2+2)	10 Nm (7.38 lbf ft)

REAR SUSPENSION

Name	Torque in Nm
Shock absorber to chassis retainer - 8.8 M10x80 (1)	50 Nm (36.88 lbf ft)
Double connecting rod / shock absorber retainer 10.9 M10x47 (1)	40 Nm (29.5 lbf ft)
Single connecting rod / double connecting rod retainer 10.9 M10x95 (1)	50 Nm (36.88 lbf ft)
Single connecting rod to chassis retainer - 8.8 M10x85 (1)	50 Nm (36.88 lbf ft)
Double connecting rod / fork retainer 10.9 M10x82 (1)	50 Nm (36.88 lbf ft)

FILTER CASING

Name	Torque in Nm
Filter casing cover retainer - M5x30 (3)	6 Nm (4.42 lbf ft)
Filter casing to chassis bracket retainer - M6x12 (1)	10 Nm (7.38 lbf ft)

EXHAUST

Name	Torque in Nm
Exhaust pipe to engine retainer - M8x1.25 (4)	25 Nm (18.44 lbf ft)
Exhaust pipe to compensator retainer (clamp) - M6 (2)	10 Nm (7.38 lbf ft)
Compensator to plate retainer - M10 (2)	25 Nm (18.44 lbf ft)
Compensator to muffler retainer (clamp) - M6 (2)	10 Nm (7.38 lbf ft)
Lambda probe retainer - M18x1.5 (1)	38 Nm (28.03 lbf ft)
Mufflers to support retainer - M8x25 (4)	25 Nm (18.44 lbf ft) - Loctite 601
Muffler support to chassis retainer - M8 (1)	25 Nm (18.44 lbf ft)

FRONT WHEEL

Name	Torque in Nm
Brake disc retainer - M8x20 (12)	30 Nm (22.13 lbf ft) - Loctite 243

Name	Torque in Nm
Wheel pin - M18x1.5 (1)	80 Nm (59 lbf ft)

REAR WHEEL

Name	Torque in Nm
Brake disc retainer - M8x20 (6)	30 Nm (22.13 lbf ft) - Loctite 243
Rear wheel retainer - 10.9 M12x65 (4)	110 Nm (81.13 lbf ft)

FRONT BRAKING SYSTEM

Name	Torque in Nm
Front brake right and left calliper retainer - M10x30 (2+2)	50 Nm (36.88 lbf ft)

REAR BRAKING SYSTEM

Name	Torque in Nm
Rear calliper retainer - M10x30 (2)	50 Nm (36.88 lbf ft)
Rear brake lever pin - M8 (1)	15 Nm (11.06 lbf ft) - Loctite 243
Rear brake fluid reservoir retainer - SWP 5x20 (1)	3 Nm (2.21 lbf ft)
Rear brake fluid reservoir on plate support retainer - M6x16 (1)	10 Nm (7.38 lbf ft)
Rear brake rod lock nut - M6 (1)	manual
Brake pump retainer - M6x20 (2)	10 Nm (7.38 lbf ft) - Loctite 243

HANDLEBAR AND CONTROLS

Name	Torque in Nm
Handlebar on steering plate retainer - M10x60 (2)	50 Nm (36.88 lbf ft)
Clutch and brake pump u-bolt retainer - M6 (2+2)	10 Nm (7.38 lbf ft)
Right and left light switch retainer - M5 (2)	1.5 Nm (1.11 lbf ft)
Clutch pump to transmission retainer - M6 (3)	10 Nm (7.38 lbf ft)
Mirror - M10 (1+1)	Manual

ELECTRICAL SYSTEM

Name	Torque in Nm
Horn retainer screw + nut - M8x20 (1)	15 Nm (11.06 lbf ft)
Coil retainer - AT M4x25 (4)	3 Nm (2.21 lbf ft)
Odometer sensor on cardan shaft housing retainer - M4x10 (2)	3 Nm (2.21 lbf ft)

INSTRUMENT PANEL AND LIGHTS

Name	Torque in Nm
Instrument panel support to light support retainer - M6x20 (4)	10 Nm (7.38 lbf ft)
Front light supports to fork plate retainer - M6x18 (4)	10 Nm (7.38 lbf ft)
Headlamp retainer - M8x30 (2)	15 Nm (11.06 lbf ft)
Front and rear turn indicator retainer (screw + nut) - M6 (2+2)	5 Nm (3.69 lbf ft)
Rear light to tail retainer - M5x18 (3)	4 Nm (2.95 lbf ft)

FUEL PUMP FLANGE

Name	Torque in Nm
Pump support to tank retainer - M5x16 (6)	6 Nm (4.42 lbf ft)

FUEL TANK

Name	Torque in Nm
Filler to tank retainer - M4x16 (5)	3 Nm (2.21 lbf ft)
Tank rear retainer - M8x45 (1)	25 Nm (18.44 lbf ft)

CHASSIS/ FAIRINGS (FRONT)

Name	Torque in Nm
Stabilisation plate to fork retainer - M8x35 (4)	15 Nm (11.06 lbf ft) - Loctite 243
Front mudguard to stabilisation plate retainer - M6x22 (4)	10 Nm (7.38 lbf ft) - Loctite 243
Engine closing plate to chassis front retainer - M5x12 (2)	4 Nm (2.95 lbf ft)
Engine closing plate to chassis rear retainer - M5x20 (2)	4 Nm (2.95 lbf ft)

CHASSIS / FAIRINGS (CENTRE)

Name	Torque in Nm
Right and left throttle body cover upper retainer - M5x20 (2)	4 Nm (2.95 lbf ft) - Loctite 243
Right and left throttle body cover lower retainer - M5x20 (2)	manual
Right and left side fairing retainer - M5x9 (4)	4 Nm (2.95 lbf ft)

CHASSIS/ FAIRINGS (REAR)

Name	Torque in Nm
Tail section / battery holder mudflap / license plate holder retainer - M5x9 (12)	4 Nm (2.95 lbf ft)
Retroreflector to support retainer - M5 (1)	4 Nm (2.95 lbf ft)
Retroreflector support on license plate holder retainer - M5x12 (1)	4 Nm (2.95 lbf ft)
License plate lamp, license plate holder, retroreflector support retainer - M5x22 (1)	4 Nm (2.95 lbf ft)

FINISHING

Name	Torque in Nm
Ignition lock retainer - shear head screw - M8x15 (1)	at the point of failure
Ignition lock retainer - M8x16 (1)	25 Nm (18.44 lbf ft)

Overhaul data**Assembly clearances****Cylinder - piston assy.**


Measurement of the cylinder diameter must be done at three heights, turning the dial gauge 90°.


Check the clearance between the cylinders and pistons; if it exceeds the value specified, it is necessary to replace cylinders and pistons.

The pistons of an engine must be balanced; a weight difference of up to 1.5 (0.0033 lb) is admitted.

ADMITTED MEASUREMENTS

Specification	Desc./Quantity
cylinder diameter	95.000 - 95.020 mm (3.7401 - 3.7409 in)
piston diameter	94.942 - 94.972 mm (3.7379 - 3.7390 in)
fitting clearance	0.048 - 0.068 mm (0.00189 - 0.00268 in)

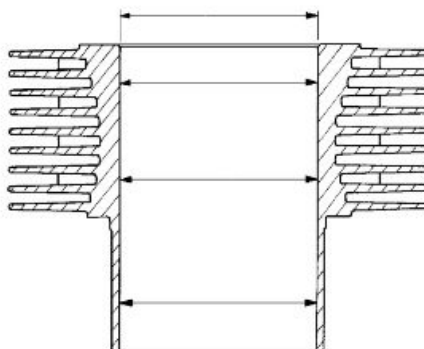

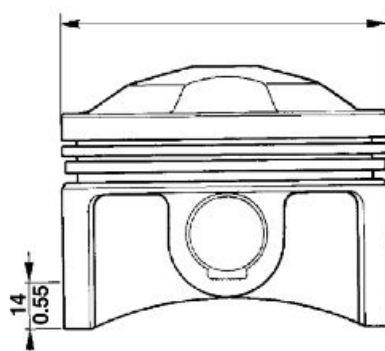

Piston rings

Check the sealing piston rings and the oil scraper.

On each piston there are:

1 top piston ring;

1 middle stepped piston ring;

1 oil scraper piston ring.

The ends of the fitted piston rings are out of phase.

Fitting backlash detected between the ring thickness and seats on the piston:

Sealing rings and oil scraper 0.030 - 0.065 mm (0.00118 - 0.00256 in)

Gap between the end of the piston rings inserted in the cylinder:

Upper sealing ring and stepped ring 0.40 - 0.65 mm (0.00158 - 0.00255 in)

Oil scraper ring 0.30 - 0.60 mm (0.00118 - 0.00236 in).

Turn the rings so that the coupling ends are 120 degrees from each other.

Crankcase - crankshaft - connecting rod

CAMSHAFT (CAM) SUPPORT DIAMETER AND THEIR SEATS ON THE CRANKCASE (TIMING SYSTEM SIDE)

Specification	Desc./Quantity
Shaft support diameter	47.000 - 46.984 mm (1.85039 ÷ 1.84976 inch)
Seat diameter on base	47.025 - 47.050 mm (1.85137 ÷ 1.85236 inch)
fitting clearance	0.025 - 0.066 mm (0.00098 ÷ 0.00260 inch)

CAMSHAFT (CAM) SUPPORT DIAMETER AND THEIR SEATS ON THE CRANKCASE (FLYWHEEL SIDE)

Specification	Desc./Quantity
Shaft support diameter	32.000 - 31.984 mm (1.25984 ÷ 1.25921 inch)
Seat diameter on base	32.025 - 32.050 mm (1.26082 ÷ 1.26181 inch)
fitting clearance	0.025 - 0.066 mm (0.00098 ÷ 0.00260 inch)

TAPPET-SEAT COUPLING ON CRANKCASE DATA (PRODUCTION)

Specification	Desc./Quantity
Seats diameter	22.021 - 22.000 mm (0.86697 ÷ 0.86614 inch)
Tappet external diameter	21.996 - 21.978 mm (0.86598 ÷ 0.86527 inch)
Fitting clearances	0.004 - 0.043 mm (0.00016 ÷ 0.00169 in.)

Recommended products chart**RECOMMENDED PRODUCTS**

Product	Description	Specifications
ENI i-RIDE PG 10W-60	Lubricant formulated with advanced synthetic technology and high performance additives to cater specifically for 4-stroke engines with high specific power outputs.	JASO MA, MA2 - API SG
AGIP GEAR SAE 80 W 90	Transmission oil	API GL-4
AGIP GEAR MG/S SAE 85 W-90	Gearbox oil	API GL-5
AGIP FORK 7.5W	Fork oil	SAE 5W / SAE 20W
AGIP GREASE SM2	Lithium grease with molybdenum for bearings and other points needing lubrication	NLGI 2
Neutral grease or petroleum jelly.	Battery poles	
AGIP BRAKE 4	Brake fluid	SAE J 1703 - FMVSS 116 - DOT 3/4 - ISO 4925 - CUNA NC 956 DOT 4 synthetic fluid
AGIP BRAKE 5.1	Clutch fluid	FMVSS 116 - DOT 5.1 Non-silicone synthetic fluid

NOTE





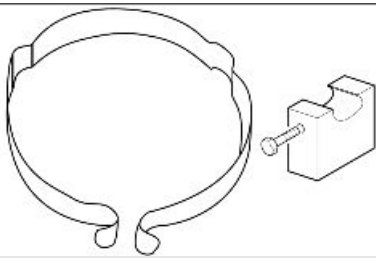
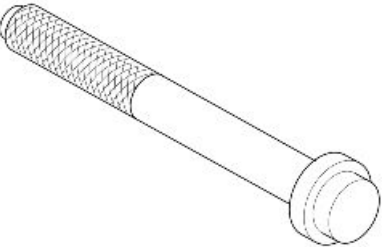
USE ONLY NEW BRAKE FLUID. DO NOT MIX DIFFERENT BRANDS OR TYPES OF OIL WITHOUT CHECKING THEIR BASE COMPATIBILITY.


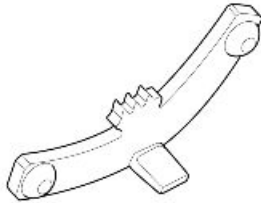
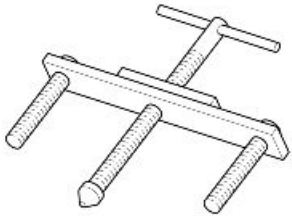
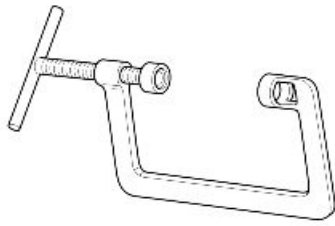
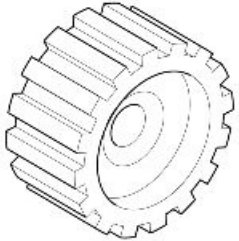
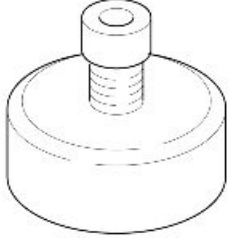
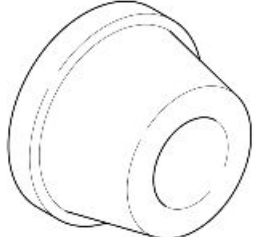
INDEX OF TOPICS








SPECIAL TOOLS






S-TOOLS

SPECIAL TOOLS

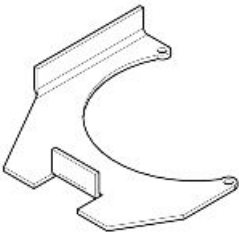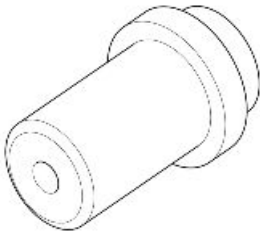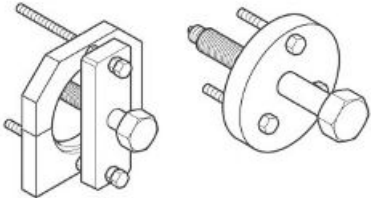Stores code	Description	
05.90.25.30	Gearbox support	
14.92.72.00	Tool for fitting the sealing ring on the timing system cover	
05.91.25.30	Gearbox opening	
05.90.19.30	Inner spark plug removal	
05.92.80.30	Piston ring clamp	
14.92.91.00	Punch for pressing the sealing ring on the front fork sleeve and sealing ring inside the gearbox.	

Stores code	Description	
19.92.96.00	Graduated dial to control ignition timing	
12.91.18.01	Tool to lock the flywheel and the starting ring gear	
12.91.36.00	Tool to remove the flywheel-side flange	
10.90.72.00	Tool for valve removal and refitting	
30.90.65.10	Tool for clutch fitting	
14.92.71.00	Tool to fit the sealing ring on the flywheel-side flange	
12.91.20.00	Tool to fit the flywheel-side flange together with seal ring on the crankshaft	

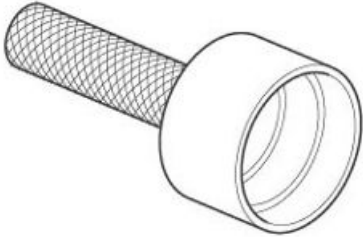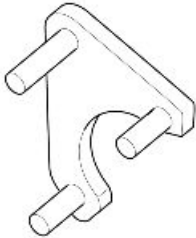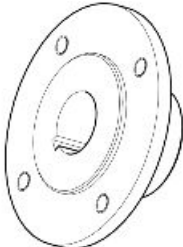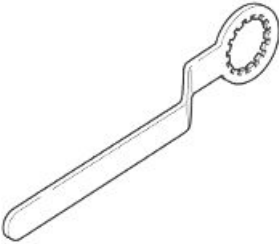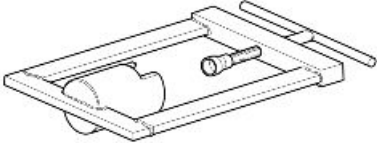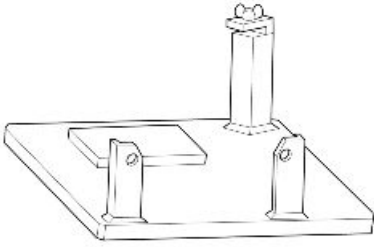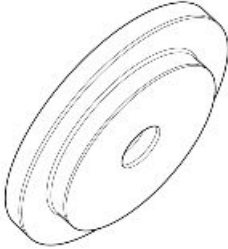Stores code	Description	
19.92.71.00	Tool to fit the seal ring on the flywheel-side flange	
14.92.73.00	Tool for camshaft gear sealing	
981001	Graduated dial hub	
30.91.28.10	Clutch body locking	
000019663300	Tool for clutch shaft removal	
05.90.27.30	Gearbox support	
05.90.27.31	Gearbox oil seal buffer	

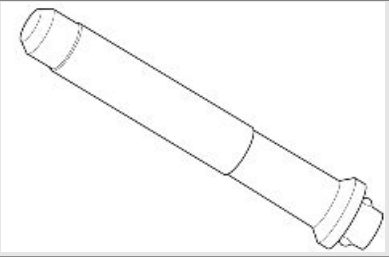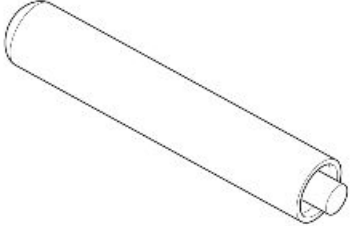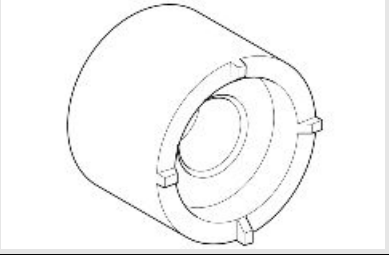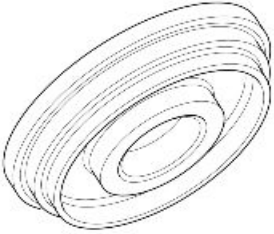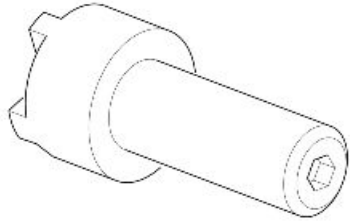Stores code	Description	
05.90.27.32	Buffer handgrip	
05.90.27.33	Ball joint sealing buffer	
05.90.27.34	Wrench for pinion ring nut	
05.90.27.35	Pinion oil seal buffer	
GU14912603	Hook spanner for fixing ring nut of the clutch shaft internal body	

INDEX OF TOPICS

MAINTENANCE

MAIN

Maintenance chart

NOTE

CARRY OUT MAINTENANCE OPERATIONS AT HALF THE INTERVALS SPECIFIED IF THE VEHICLE IS USED IN PARTICULAR RAINY OR DUSTY CONDITIONS, OFF ROAD OR FOR TRACK USE.

AT EVERY START-UP

Action

Engine oil pressure warning light - check and clean, adjust, grease or replace if necessary

BEFORE EACH RIDE AND EVERY 2000 KM (1250 MI)

Action

Tyre pressure - Adjust

Brake pad wear - Check and clean, adjust or replace if necessary

AFTER RUN-IN (1,500 KM (932 MI)

Action

Exhaust pipe flange bolts - Check and clean, adjust, grease or replace if necessary

Transmission cables and controls - Check and clean, adjust, grease or replace if necessary

Steering bearings and steering clearance - Check and clean, adjust, grease or replace if necessary.

Disc brakes - Check and clean, adjust or replace if necessary

Engine oil filter - Replace

Fork - Check and clean, adjust and lubricate

General vehicle operation - Check and clean, adjust, grease or replace if necessary.

Braking systems - Check and clean, adjust, grease or replace if necessary

Light circuit - Check and clean, adjust or replace if necessary

Safety switches - Check and clean, adjust, grease or replace if necessary

Gearbox oil - Change

Engine oil - Change

Final transmission oil - Change

Tyres - Check and clean, adjust, grease or replace if necessary

Tyre pressure - Adjust

Engine revs at idle speed - Adjustment.

Valve clearance adjustment - Adjust

Wheels - Check and clean, adjust, grease or replace if necessary

Bolts, nuts and screws tightening - Check and clean, adjust, grease or replace if necessary

Battery terminals tightening - Check and clean, adjust, grease or replace if necessary

Cylinder synchronisation - Check and clean, adjust, grease or replace if necessary

Suspensions and setting - Check and clean, adjust, grease or replace if necessary

Brake pad wear - Check and clean, adjust or replace if necessary

EVERY 4 YEARS

Action

Fuel pipes - Replace

Brake pipes - Replacement

EVERY 5000 KM (3125 MI) - IF THE VEHICLE IS USED FOR RACING

Action

Outer spark plugs - Replace

Engine oil filter - Replace

Engine oil - Change

Purge fluid present in oil drainage pipe from the filter housing - Clean

Clutch wear - Check and clean, adjust, grease or replace if necessary

EVERY 10,000 KM (6250 MILES) OR 12 MONTHS

Action

Outer spark plugs - Replace

Idle mixture (CO) - Check and clean, adjust, grease or replace if necessary

Transmission cables and controls - Check and clean, adjust, grease or replace if necessary

Action

Steering bearings and steering clearance - Check and clean, adjust, grease or replace if necessary.
Wheel bearings - Check and clean, adjust, grease or replace if necessary
Disc brakes - Check and clean, adjust or replace if necessary
Air filter - Check and clean, adjust, grease or replace if necessary
Engine oil filter - Replace
General vehicle operation - Check and clean, adjust, grease or replace if necessary.
Braking systems - Check and clean, adjust, grease or replace if necessary
Gearbox oil - Change
Engine oil - Change
Final transmission oil - Change
Valve clearance adjustment - Adjust
Wheels - Check and clean, adjust, grease or replace if necessary
Bolts, nuts and screws tightening - Check and clean, adjust, grease or replace if necessary
Cylinder synchronisation - Check and clean, adjust, grease or replace if necessary
Purge fluid present in oil drainage pipe from the filter housing - Clean
Fuel pipes - Check and clean, adjust, grease or replace if necessary
Brake pipes - Check and clean, adjust, grease or replace if necessary
Clutch wear - Check and clean, adjust, grease or replace if necessary

AFTER THE FIRST 10,000 KM (6,250 MILES) AND THEN AFTER EVERY 20,000 KM (12,500 MILES)**Action**

Fork oil - Change
Fork oil seals - Replace

EVERY 20000 KM (12500 MILES) OR 24 MONTHS**Action**

Inner spark plugs - Replace
Alternator belt - Adjust; EVERY 50,000 km (31,050 mi)
Air filter - Replace
Fork - Check and clean, adjust and lubricate
Brake fluid - change
Suspensions and setting - Check and clean, adjust, grease or replace if necessary
Brake pad wear - Check and clean, adjust or replace if necessary

Transmission fluid**Check**

- Keep the vehicle upright with both wheels on the ground.
- Unscrew and remove the cap/dipstick (1).
- The level is correct if the oil is close to the hole of the cap/dipstick (1).
- If the oil is lower than specified, top-up until it reaches the cap/dipstick hole (1).

CAUTION

DO NOT ADD ADDITIVES OR ANY OTHER SUBSTANCE TO THE FLUID. WHEN USING A FUNNEL OR ANY OTHER ELEMENT, MAKE SURE IT IS PERFECTLY CLEAN.



Replacement

CAUTION

THE UNIT MUST BE HOT WHEN THE OIL IS CHANGED AS UNDER SUCH CONDITIONS OIL IS FLUID AND THEREFORE EASY TO DRAIN.

NOTE

RIDE SOME km (miles) TO WARM UP ENGINE OIL

- Place a container with + 400 cm³ (25 cu in) capacity under the drainage plug (3).
- Unscrew and remove the drainage plug (3).
- Unscrew and remove the breather cap (2).
- Drain the oil into the container; allow several minutes for oil to drain out completely.
- Check and if necessary, replace the sealing washer of drainage plug (3).
- Remove any metal scrap attached to the drainage plug (3) magnet.
- Screw and tighten the drainage plug (3).
- Pour new oil through the fill opening (1) until it reaches the cap/dipstick hole (1).

CAUTION

DO NOT ADD ADDITIVES OR ANY OTHER SUBSTANCE TO THE FLUID. WHEN USING A FUNNEL OR ANY OTHER ELEMENT, MAKE SURE IT IS PERFECTLY CLEAN.

- Screw and tighten the caps (1 - 2).



Engine oil

Check

CAUTION

ENGINE MUST BE WARM TO CHECK ENGINE OIL LEVEL.

NOTE

DO NOT LET THE ENGINE IDLE WITH THE VEHICLE AT STANDSTILL TO WARM UP THE ENGINE OIL AND REACH THE OPERATING TEMPERATURE OF ENGINE OIL. OIL IS BEST CHECKED AFTER RUNNING FOR ABOUT 15 KM (10 miles).

- Shut off the engine.
- Keep the vehicle upright with the two wheels on the ground.
- Unscrew and remove the dipstick (1).
- Clean the dipstick (1).
- Reinsert the dipstick (1) into the opening but do not screw it.

- Remove the dipstick (1).
- Check oil level on the dipstick (1).
- The oil level is correct when it close to the "MAX" mark.

MAX = maximum level


MIN = minimum level

Add engine oil if required:

- Unscrew and remove the dipstick (1).
- Top-up with engine oil until it goes above the minimum level marked "MIN".

CAUTION

DO NOT ADD ADDITIVES OR ANY OTHER SUBSTANCE TO THE FLUID. WHEN USING A FUNNEL OR ANY OTHER ELEMENT, MAKE SURE IT IS PERFECTLY CLEAN.

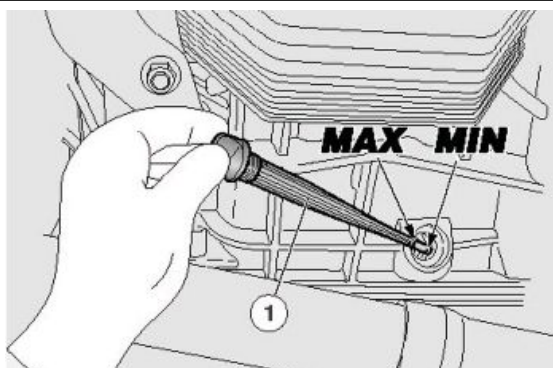


Replacement


NOTE

HOT OIL IS MORE FLUID AND WILL DRAIN OUT MORE EASILY AND COMPLETELY.

- Place a container with + 4000 cm³ (245 cu in) capacity under the drainage plug (2).
- Unscrew and remove the drainage plug (2).

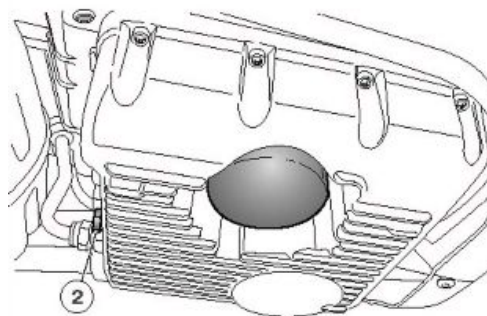

- Unscrew and remove the filler plug (3).
- Drain the oil into the container; allow several minutes for oil to drain out completely.
- Check and if necessary, replace the sealing washers of drainage plug (2).
- Remove any metal scrap attached to the drainage plug (2) magnet.

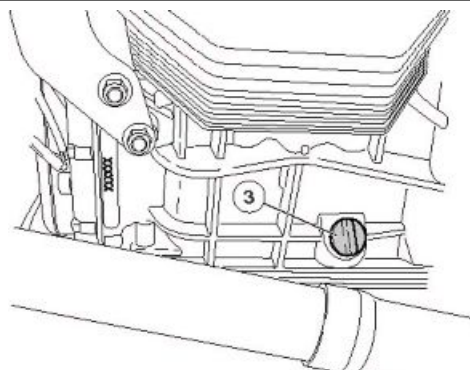

- Screw and tighten the drainage plug (2).
- Pour new oil until it goes above the minimum level marked "MIN".

Gearbox Oil

Inspection

CHECKING AND TOPPING UP


CAUTION

ENGINE MUST BE WARM TO CHECK GEARBOX OIL LEVEL.

NOTE

DO NOT LET THE ENGINE IDLE WITH THE VEHICLE AT STANDSTILL TO WARM UP THE ENGINE OIL AND REACH THE OPERATING TEMPERATURE OF ENGINE OIL. OIL IS BEST CHECKED AFTER RUNNING FOR ABOUT 15 KM (10 miles).

- Shut off the engine.
- Keep the vehicle upright with both wheels on the ground.
- Undo and remove the dipstick opening (1) located on the right side of the gearbox.
- The level is correct if the oil is close to the hole of the dipstick (1).

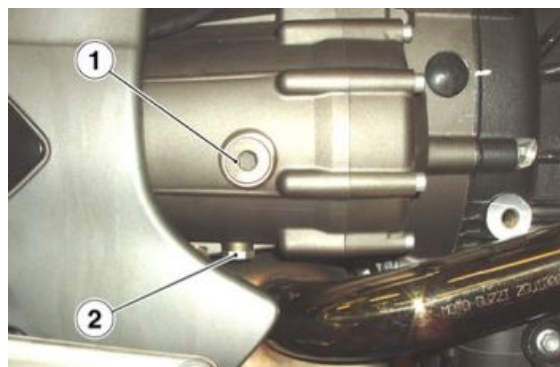

If necessary:

- Top-up with oil until it reaches the dipstick opening (1).

CAUTION


DO NOT ADD ADDITIVES OR ANY OTHER SUBSTANCE TO THE FLUID. WHEN USING A FUNNEL OR ANY OTHER ELEMENT, MAKE SURE IT IS PERFECTLY CLEAN.

Replacement

NOTE

HOT OIL IS MORE FLUID AND WILL DRAIN OUT MORE EASILY AND COMPLETELY.

- Place a container with suitable capacity under the drainage plug (2).
- Unscrew and remove the drainage plug (2).
- Unscrew and remove the filler cap (1).
- Drain the oil into the container; allow several minutes for oil to drain out completely.
- Check and replace, if necessary, the sealing washers of drainage plug (2).
- Remove any metal scrap attached to the drainage plug (2) magnet.
- Screw and tighten the drainage plug (2).
- Pour in new oil until it reaches the dipstick opening (1).
- Tighten the filler cap (1).

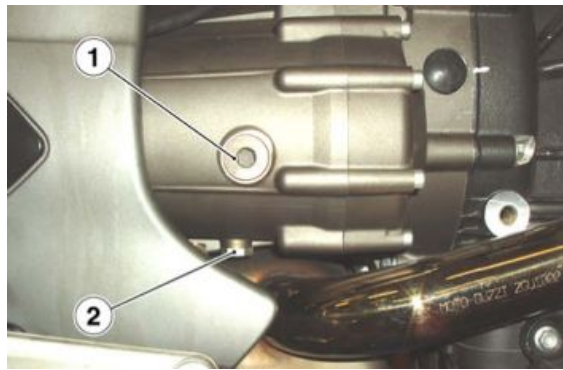**CAUTION**

DO NOT ADD ADDITIVES OR ANY OTHER SUBSTANCE TO THE FLUID. WHEN USING A FUNNEL OR ANY OTHER ELEMENT, MAKE SURE IT IS PERFECTLY CLEAN.

Air filter

- Remove the fuel tank.
- Undo and remove the three screws from the filter casing cover.



- Remove the filter casing cover from the clamps.
- Remove the air filter.

NOTE

DO NOT START THE ENGINE WITHOUT THE AIR FILTER. TO CLEAN THE FILTERING ELEMENT, USE A PRESSURE AIR JET FROM THE INSIDE TO THE OUTSIDE.

**See also**

Fuel tank

Checking the valve clearance

If the timing system is very noisy, check the clearance between valves and rocking levers.

NOTE

ADJUST WITH COLD ENGINE, WITH PISTON AT TOP DEAD CENTRE (TDC) IN COMPRESSION STROKE (VALVES CLOSED).

- Remove the fuel tank.
- Unscrew and remove the two screws.
- Remove the spark plugs protection.
- Disconnect both spark plug tubes.




- Unscrew and remove the eight screws.
- Remove the head cover.



- loosen the nut (1);
- use a screwdriver on the set screw (2) until the following clearances are obtained:

- inlet valve: 0.10 mm (0.0039 in)
- outlet valve: 0.15 mm (0.0059 in).

- The measurement must be done using a thickness gauge (3).

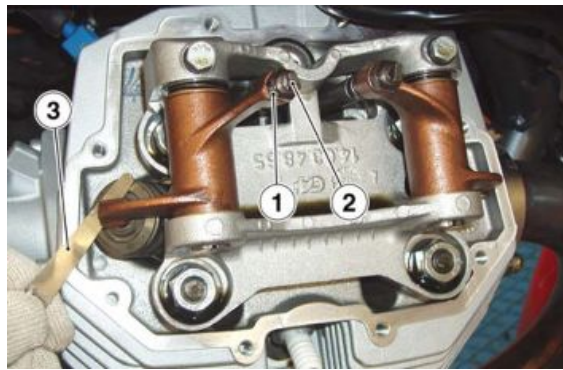**CAUTION**

IF CLEARANCE IS LARGER THAN RECOMMENDED, THE TAPPET WILL BE NOISY. OTHERWISE, THE VALVES DO NOT CLOSE CORRECTLY, WHICH CAN LEAD TO PROBLEMS SUCH AS:

- PRESSURE DROP;
- ENGINE OVERHEAT;
- VALVE BURNOUT, ETC.

Braking system

Level check

Brake fluid check

- Rest the vehicle on its stand.
- For the front brake, turn the handlebar fully to the right.
- For the rear brake, keep the vehicle upright so that the fluid in the reservoir is at the same level with the plug.
- Make sure that the fluid level in the reservoir is above the "MIN" reference mark:

MIN = minimum level

MAX = maximum level


If the fluid does not reach at least the "**MIN**" reference mark:

- Check brake pads and disc for wear.
 - If the pads and/or the disc do not need replacing, top-up the fluid.
-

Top-up


Front brake:

- Unscrew the two screws (1) of the brake fluid reservoir (2) using a Phillips screwdriver.
- Lift and remove the cover (3) and screws (1) as well.
- Remove the gasket (4).

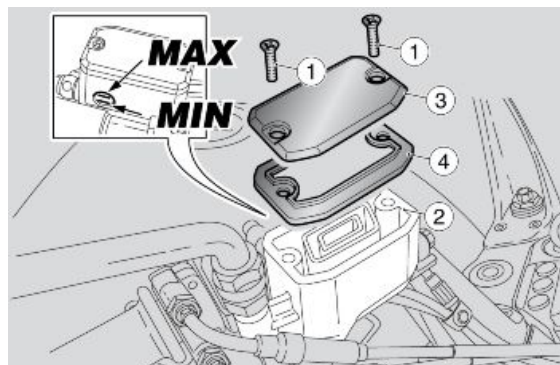

Rear brake:

- Unscrew and remove the cap (5).
- Remove the gasket (6).
- Top-up the reservoir with brake fluid to the correct level, which is between the two "MIN" and "MAX" reference marks.

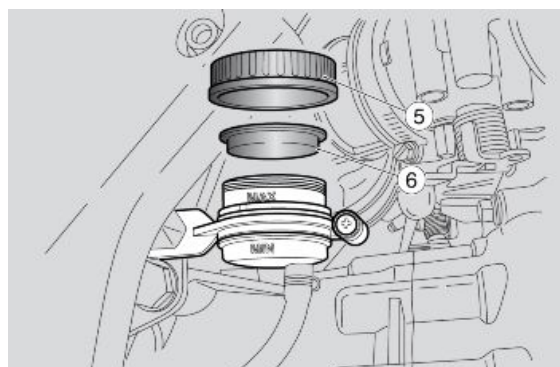

RISK OF BRAKE FLUID SPILLS. DO NOT OPERATE THE BRAKE LEVER WITH BRAKE FLUID RESERVOIR CAP LOOSENED OR REMOVED.

CAUTION



AVOID PROLONGED AIR EXPOSURE OF THE BRAKE FLUID. BRAKE FLUID IS HYGROSCOPIC AND ABSORBS MOISTURE WHEN IN CONTACT WITH AIR. LEAVE THE BRAKE FLUID RESERVOIR OPEN ONLY FOR THE TIME NEEDED TO COMPLETE THE TOPPING UP PROCEDURE.



TO AVOID SPILLING FLUID WHILE TOPPING-UP, KEEP THE TANK PARALLEL TO THE RESERVOIR EDGE (IN HORIZONTAL POSITION).

DO NOT ADD ADDITIVES OR ANY OTHER SUBSTANCE TO THE FLUID.

WHEN USING A FUNNEL OR ANY OTHER ELEMENT, MAKE SURE IT IS PERFECTLY CLEAN.



DO NOT EXCEED THE "MAX" LEVEL MARK WHEN TOPPING UP.

TOP-UP TO "MAX" LEVEL MARK ONLY WHEN BRAKE PADS ARE NEW. WHEN TOPPING UP DO NOT EXCEED THE "MAX" LEVEL MARK WHEN BRAKE PADS ARE WORN AS YOU RISK SPILLING FLUID WHEN CHANGING THE BRAKE PADS.


CHECK BRAKING EFFICIENCY. IN CASE OF EXCESSIVE TRAVEL OF THE BRAKE LEVER OR POOR PERFORMANCE OF THE BRAKING SYSTEM, TAKE YOUR VEHICLE TO AN Official Moto Guzzi Dealer, AS IT MAY BE NECESSARY TO PURGE THE AIR IN THE SYSTEM.

INDEX OF TOPICS

ELECTRICAL SYSTEM

ELE SYS

Components arrangement

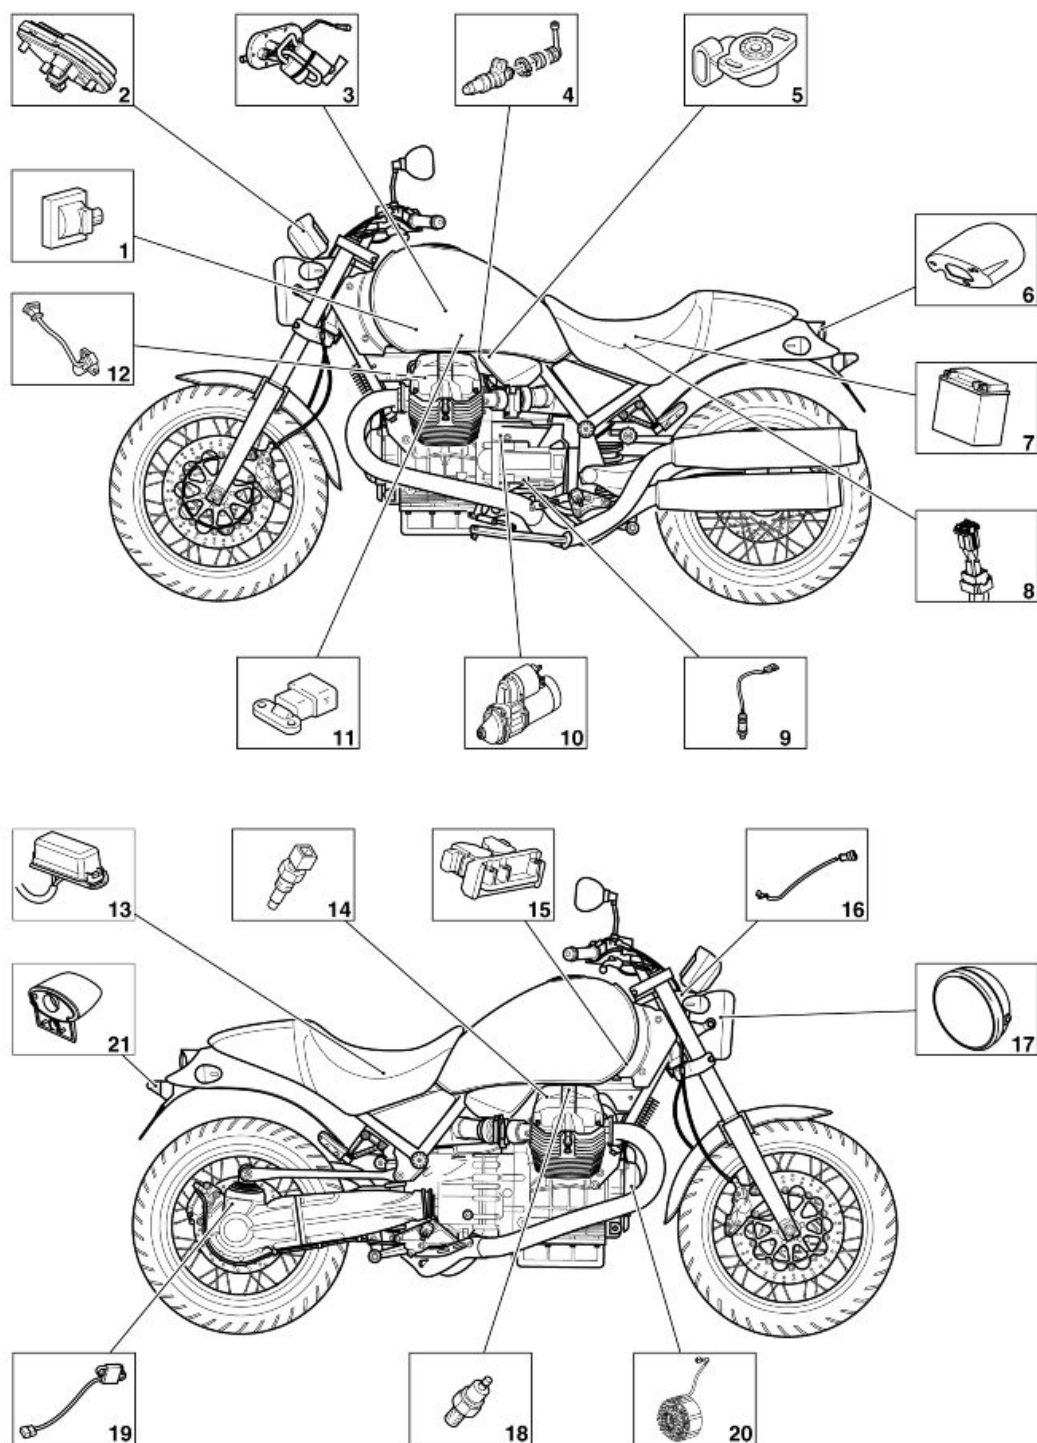
**Key:**

- 1. Coil
- 2. Instrument panel
- 3. Fuel pump

4. Injector
5. Throttle valve potentiometer
6. Rear light
7. Battery
8. Main fuses
9. Lambda Probe
10. Starter motor
11. Intake air temperature sensor
12. Engine revolution sensor
13. Secondary fuses
14. Head temperature sensor
15. Engine control unit
16. Instrument panel air temperature sensor
17. Front headlamp
18. Oil pressure sensor
19. Speed sensor
20. Alternator
21. License plate light

Electrical system installation

General wiring diagram

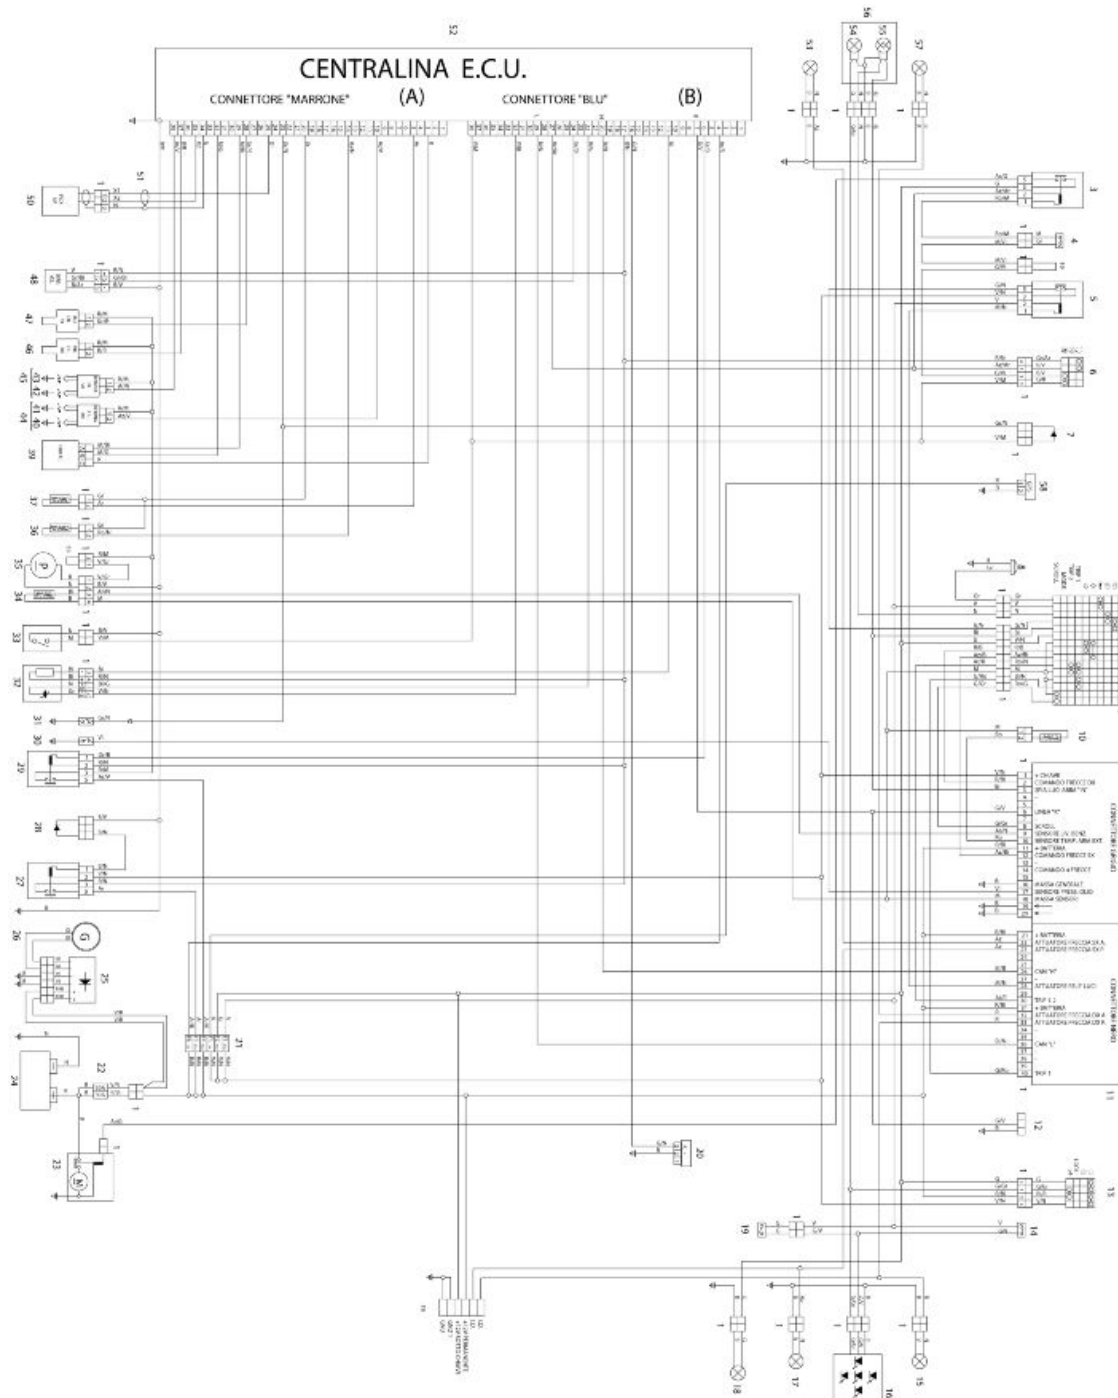

Key:

1. Multiple connectors
2. -
3. Start-up relay
4. Clutch switch

5. Light relay
6. Right light switch
7. Safety diode
8. Horn
9. Left light switch
10. Instrument panel air temperature thermistor
11. Instrument panel
12. Instrument panel diagnosis
13. Key switch
14. Front stop switch
15. Right rear turn indicator
16. Rear light (LED)
17. Left rear turn indicator
18. License plate light
19. Rear stop switch
20. (ECU) Diagnosis connector
21. Secondary fuses
22. Main fuses
23. Starter motor
24. Battery
25. Voltage regulator
26. 350 W alternator
27. Main injection relay
28. Injection diode
29. Secondary injection relay
30. Oil pressure sensor
31. Gear in neutral switch
32. Lambda Probe
33. Side stand switch
34. Fuel reserve sensor
35. Fuel pump
36. Intake air temperature thermistor
37. Head temperature sensor
38. -
39. Throttle sensor
40. Right cylinder inner spark plug
41. Right cylinder outer spark plug
42. Left cylinder inner spark plug

- 43.Left cylinder outer spark plug
- 44.Right cylinder double coil
- 45.Left cylinder double coil
- 46.Right injector
- 47.Left injector
- 48.Speed sensor
- 49.Fall sensor
- 50.Flywheel pick up
- 51.Pick-up wire shielding
- 52.ECU
- 53.Left front turn indicator
- 54.Tail light bulb
- 55.High - low-beam bulb
- 56.Front headlamp
- 57.Right front turn indicator
- 58.GPS coupling
- 59.Antitheft coupling

Cable colour:

Ar orange

Az sky blue

B blue

Bi white

G yellow

Gr grey

M brown

N black

R red

Ro pink

V green

Vi purple

Checks and inspections

Dashboard

Diagnosis

Changing the CODE

If you know the code, just enter it and then a new code that will be automatically stored in the memory.

If the vehicle is new, the user code is: 00000

Resetting the CODE

This function is used to set a new code when the old one is not available; in this case, at least two of the programmed keys have to be inserted in the ignition lock.

After the first key has been inserted, the second one is requested with the following message:

INSERT KEY II

If the second key is not inserted within 20 seconds, the operation is finished.

After recognising the second key, the new code is required with the message:

ENTER NEW CODE

Once the operation is finished, the instrument panel goes back to the SET-UP menu.

DIAGNOSIS

Access to this menu (diagnosis functions), for the technical service only, after requesting a service code.

It will read: ENTER SERVICE CODE

For this vehicle the SERVICE CODE is: **21959**

The functions in this menu are

- Exit
- ECU errors
- Instrument Panel Errors
- Delete errors
- Reset Service
- Update
- Change Keys

ECU ERRORS

The instrument panel receives only the current errors from the control unit.

Description - Error code

Throttle Valve Error DC Vdc - ECU 10

Throttle Valve Error DC Gnd - ECU 11

Engine Temperature Error DC Vdc - ECU 14

Engine Temperature Error DC Gnd - ECU 15

Air Temperature Error DC Vdc - ECU 16

Air Temperature Error DC Gnd - ECU 17

Low Battery Error - ECU 20

Lambda Probe Error - ECU 21

Coil 1 Error DC Vdc - ECU 22

Coil 1 Error DC Gnd - ECU 23

Coil 2 Error DC Vdc - ECU 24

Coil 2 Error DC Gnd - ECU 25

Injector 1 Error DC Vdc - ECU 26
Injector 1 Error DC Gnd - ECU 27
Injector 2 Error DC Vdc - ECU 30
Pump Relay Error - ECU 36
Local Loop-back Error - ECU 37
DC Start-up Remote control Error Vdc - ECU 44
Remo. Error DC Start-up Gnd - ECU 45
Canister Error DC Vdc - ECU 46
Canister Error DC Gnd - ECU 47
Battery Error Hig - ECU 50
Generic ECU Error - ECU 51
Signal panel Error - ECU 54
Self-adaptability Value Error - ECU 55
Vehicle Speed Error - ECU 56
Not recognised error - ECU 00

INSTRUMENT PANEL ERRORS

In this mode a chart is displayed showing potential errors in the immobilizer and its sensors.

This is the error decoding chart:

Description - Error code

Fuel sensor failure - DSB 05 Air temperature sensor failure - DSB 06 Oil sensor failure - DSB 07 Oil pressure failure - DSB 08

The instrument panel keeps all previous errors stored in its **memory**.

DELETE ERRORS


This option deletes instrument panel errors only, a further confirmation is requested.

INSTRUMENT PANEL SOFTWARE UPGRADE

This function is used to program the instrument panel again with a new software through Axone. The Display reads: "Instrument panel disconnected. Now connect the diagnosis instrument"; the instrument panel will connect normally after the key is extracted-inserted.

The white connector is placed under the saddle, beside the fuse box, close to the diagnosis connector for the injection system.

Use the Ditech connector in the Axone 2000 **Aprilia-Moto Guzzi** package to connect to the Axone cable.

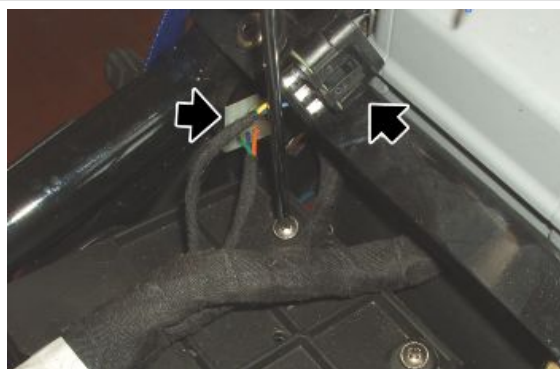


Battery recharge circuit

Checking the stator



INVERTED CONNECTION WILL CAUSE IRREPARABLE DAMAGE TO THE REGULATOR.
MAKE SURE THAT THE REGULATOR HAS A CORRECT GROUND CONNECTION.
POSSIBLE CHECKS TO BE CARRIED OUT ON THE ALTERNATOR AND ON THE REGULATOR IN CASE THAT THE BATTERY IS RECHARGED OR THAT VOLTAGE IS NO LONGER REGULATED.

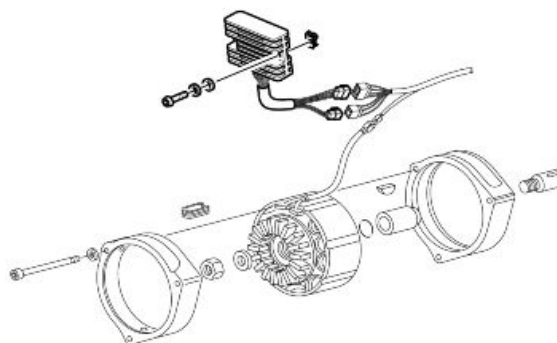

With engine off disconnect the two generator yellow cables from the rest of the system and, with an Ohm meter, carry out the following checks:

WINDING TOWARD THE GROUND INSULATION CHECK

Connect an Ohm meter lead to one of the two yellow cables and the other lead to the ground connection (reed valve). The Ohm meter should indicate a value above 10 MOhm.

WINDING CONTINUITY CHECK

Connect the Ohm meter to the ends of the two yellow cables.

The Ohm meter should indicate a value between 0.2 and 0.3 Ohm.

OUTPUT VOLTAGE CHECK

Connect a voltmeter set to 200 V alternating current capacity to the ends of the two yellow cables.

Start up the engine and check that the output voltages are within the values indicated in the table.

ALTERNATOR CHECK

	Specification	Desc./Quantity
1	Alternating current voltage at 1000 rpm	15V or above
2	Alternating current voltage at 3000 rpm	40V or above
3	Alternating current voltage at 6000 rpm	80V or above
4	Direct current intensity at 1000 rpm	9.50 Amp
5	Direct current intensity at 1200 rpm	13.0 Amp
6	Direct current intensity at 1500 rpm	16.50 Amp
7	Direct current intensity at 2000 rpm	20.0 Amp
8	Direct current intensity at 3000 rpm	23.50 Amp
9	Direct current intensity at 4000 rpm	25.0 Amp
10	Direct current intensity at 6000 rpm	26.50 Amp
11	Direct current intensity at 10000 rpm	27.50 Amp

Voltage regulator check


The regulator is calibrated to keep battery voltage between 14 and 14.6 V.

Regulator checks

Regular tools in the shop are not enough to carry out the regulator check, therefore, there follow some indications for effectively detecting a faulty regulator.

A regulator is faulty if:


After being disconnected from the rest of the system, it has a short circuit between the ground connection (aluminium sheath) and any output cable.

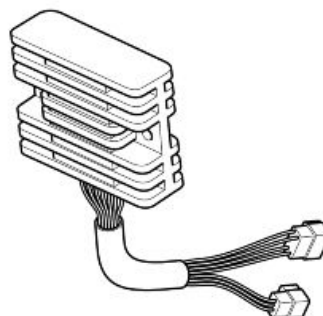

See also

[Checking the stator](#)

Start-up system check

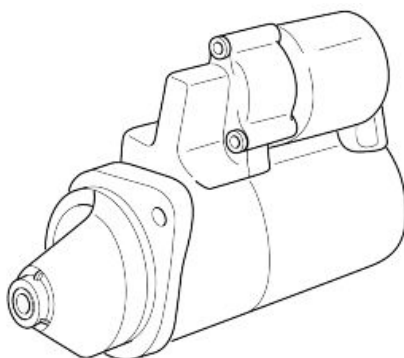


GENERAL CHARACTERISTICS

	Specification	Desc./Quantity
1	Voltage	12 V
2	Power	1.2 kW
3	Torque at idle speed	11 Nm
4	Torque when loading	4.5 Nm
5	Pinion	z = 9 module 2.5
6	Rotation (pinion side)	Anticlockwise
7	Speed	1750 rpm
8	Current at idle speed	600 A
9	Current when loading	230 A
10	Weight	2.8 kg (61.73 lb)

Lights list

ELECTRICAL SYSTEM


Specification	Desc./Quantity
Daylight running light	12V - 5 W
Low/High beam headlight (halogen)	12 V - 55 W / 60 W H4
Rear tail light /stop light	12 V - 5 / 21 W
License plate light	12V - 5 W

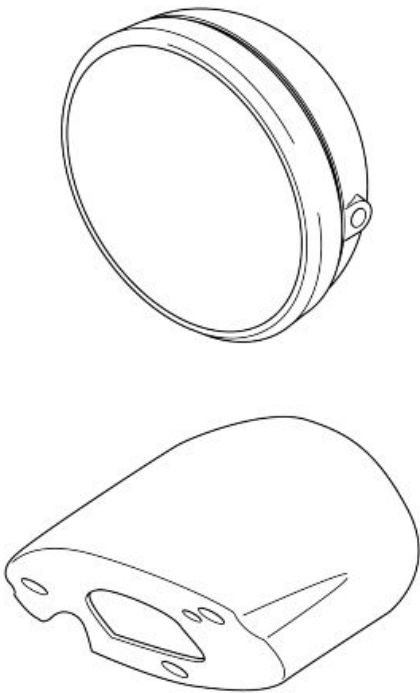

Fuses

SECONDARY FUSES

- A - Stop, horn, coil, light relay (15 A).
- B - Tail lights, license plate light, passing, ignition relay (15 A).
- C - Positive live lead, "Tom - Tom" GPS (3A)
- D - Fuel pump, coils, injectors (15 A).
- D - Lambda burner, secondary injection relay coil, ignition relay coil, speed sensor power supply, engine kill, ECU power supply (15 A).
- F- Permanent positive, ECU power supply (3A).

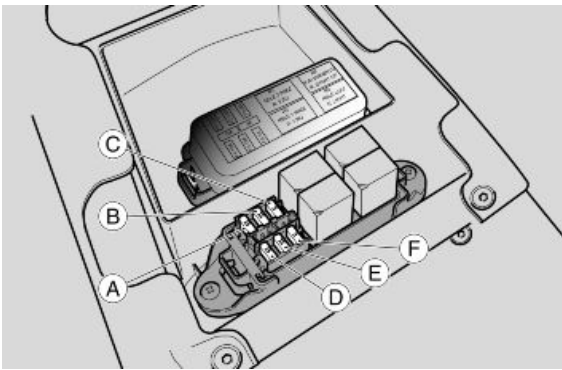


NOTE
THERE ARE TWO SPARE FUSES.

MAIN FUSES

- 1 - From battery to voltage regulator (30 A).
- 2 - From battery to key and auxiliary fuses C - D (30 A).


NOTE

THERE IS ONE SPARE FUSE.

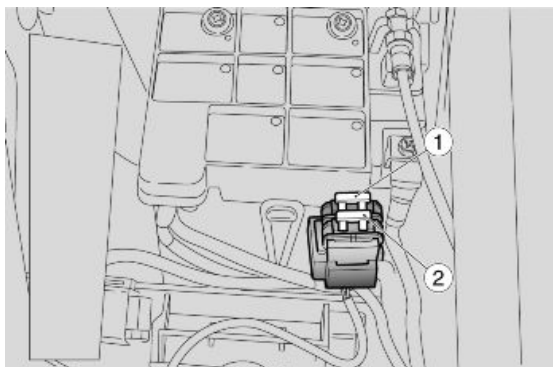**Control unit**

Model: Magneti Marelli IAW 5 AM

The control unit structure has ground connection

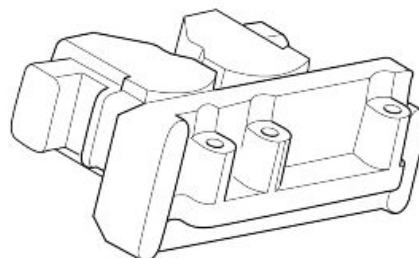**MARELLI CONTROL UNIT****Function**

It manages injection/ignition, the system safety checks and the self-diagnosis function.

Location:

- central, under the tank.

Pin-out: see the CONNECTORS section

THE CONNECTION DIAGRAMS ARE IN THE ELECTRICAL SYSTEM SECTIONS; PAY ATTENTION TO THESE DIAGRAMS AS THEY SHOW THE CONNECTOR/COMPONENT AS VIEWED FROM THE CABLE HARNESS SIDE, THAT IS LOOKING AT THE CABLES WHEN GOING OUT OF THE "MAIN" CABLE HARNESS AND INTO THE CONNECTOR/COMPONENT.

CAUTION

BEFORE CARRYING OUT ANY TROUBLESHOOTING, CAREFULLY READ THE GENERAL TROUBLESHOOTING CONCEPTS FOR ELECTRICAL DEVICES AT THE BEGINNING OF THE CHECK AND CONTROL SECTION IN THE ELECTRICAL SYSTEM CHAPTER.

AXONE: FUEL INJECTION SYSTEM

PARAMETERS

Target engine revs

STATUSES

Engine status

Example value: ON/run/power-latch/stopped.

Ignition

Example value: Enabled/Disabled

Indicates whether the control unit will enable start-up when requested: in case these safety measures are not respected (correct position of side stand, neutral sensor and clutch), the status is NO.

AXONE: ACTIVATIONS**Error clearing****AXONE: ELECTRICAL ERRORS**

RAM Memory - ROM Memory - Microprocessor - Checksum EEPROM.

Error cause

- Possible internal control unit error. Also check the control unit supply and ground connections.

Troubleshooting


- If the power supply and ground connections are connected correctly, replace the injection control unit.

NEW CONTROL UNIT ACTIVATION PROCEDURE

- After installing a new control unit, it is necessary to carry out the Throttle positioner auto-detection function using the diagnosis instrument

Battery

12 V - 18 Ampere/hour

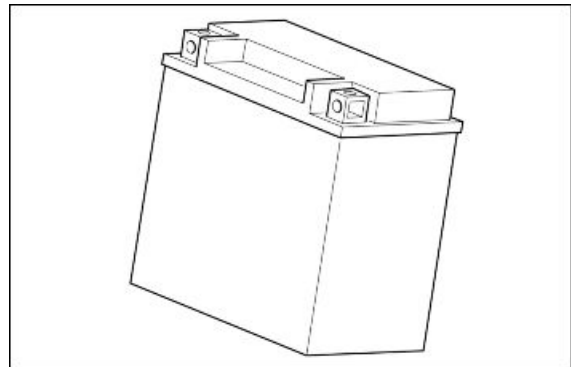


Speed sensor

Function

To indicate the vehicle speed by reading the rear wheel turning speed.

Operation / Operating principle

HALL effect sensor: a square-wave pulse is generated with voltage between 12 V and 0.3-0.4V approx.

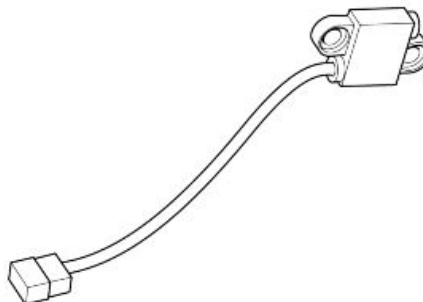

Level in wiring diagram:

Speed sensor

Location:

- sensor: on swingarm, right side, near the rear brake calliper
- connector: under the saddle, next to the right fairing

Pin-out:

- PINS 1-3 Voltage: approx. 12 V
- PINS 2-3 Voltage: variable 0.4V-12V (by turning the rear wheel)

PIN:

1. Supply voltage (green)
2. Output signal (grey/white)
3. Ground (blue/orange)

AXONE: ELECTRICAL ERRORS

Speed sensor - invalid signal.

Error cause

- Error signal if a speed below the default value set by the manufacturer for the running vehicle is detected. Possibly shorted to ground, to battery or speed sensor circuit open: lack of supply from the control unit also possible.

Troubleshooting

CARRY OUT THE CASCADE OPERATIONS UNTIL THE FAILURE IS FOUND

- Check correct position of the sensor in its fitting.
- Check voltage between PINS 1-3 of the sensor. In case of null voltage, check continuity between PIN 1 of the sensor and PIN 17 of the ECU BLUE connector.
- Check PIN 17 of the blue connector.
- Check continuity to ground of PIN 3 of the sensor.

- Check continuity of the cable between PIN 2 of the sensor and PIN 24 of the ECU blue connector.
- Check PIN 24 of the blue connector.
- If after all these checks the failure is not found, replace the sensor.

Speed sensor - over the maximum limit.

Error cause

- Error signal if a speed above the default value set by the manufacturer for the running vehicle is detected.

Troubleshooting

- if over the maximum limit: replace the sensor.

Engine rpm sensor

Function

It informs crankshaft position and speed to the Marelli control unit.

Operation / operating principle

Inductive sensor: sinusoidal-type generated voltage; two teeth are missing on the flywheel for the reference position.

Level in wiring diagram:revolution sensor

Location:


- Sensor: front left side of the engine, under the generator
- Connector: under the fuel tank, right side

Electrical characteristics:

- Winding resistance: $650\ \Omega \pm 15\%$ Output alternating voltage, value range: minimum: 0.5 V - maximum: 5 V

Pin-out:

- PIN 1: Engine revolution sensor positive signal
- PIN 2: Engine revolution sensor negative signal
- PIN 3: Revolution sensor anti-jamming cable

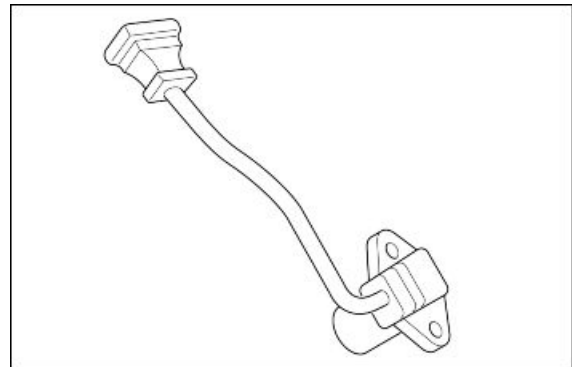

NAVIGATOR: PARAMETERS

Target engine revs

Example value: 1100 +/- 100 rpm

Parameter valid at idle, setting depends especially on engine temperature: the ECU unit will try to keep the engine running at this revs, acting on the ignition advance.

NAVIGATOR: STATUSES**Synchronisation**

Example value: Synchronised / Not synchronised

Indicates if the control unit detects the engine speed sensor signal correctly

DIAGNOSIS**Engine revolution sensor**

An interruption in the sensor circuit has been detected, from PIN 25 to PIN 35 of connector A (BROWN). Check the sensor connector and the injection control unit connector A (BROWN): if they are not OK, restore. If OK, check continuity of the two cables leading to PINS 25 and 35 of the control unit connector: if there is not continuity, restore the cable harness; if there is continuity, check the interruption on the sensor and replace it.

WARNING If the electric circuit is short-circuited, no error is displayed. Check the sensor electrical specifications: If they are not correct, replace the sensor. If correct, check supply insulation and ground connection insulation of both cables. Perform the tests from the sensor connector towards the sensor. If they are not OK, restore the cable harness or replace the sensor. If OK, perform the tests for pins 25 and 35 of the Marelli control unit connector A (BROWN) towards the cable harness.

Air gap value:

Place the sensor plus the corresponding spacers; the air gap should be between 0.7 and 0.9 mm (0.027 - 0.035 in).

Throttle position sensor**Function**

In charge of telling the control unit the position of the throttle valves.


Operation / Operating principle

The throttle valve position sensor works as a variable resistance according to the throttle rotation.

Level in electrical circuit diagram: Throttle and idle motor

Location:

- sensor: on the right cylinder throttle body
- connector: on the potentiometer

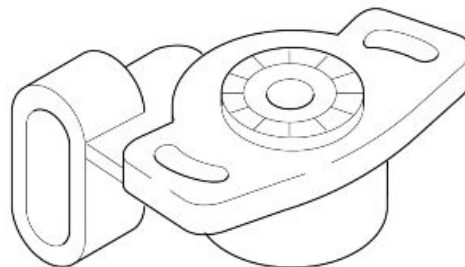


Electrical characteristics:

- PINS A-C: throttle closed approx. 2.5 kOhm; throttle open approx. 1.5 kOhm.
- PINS A-B: approx. 1.1 kOhm

Pin-out:

- PIN A: ground connection
- PIN B: supply voltage +5V
- PIN C: potentiometer signal

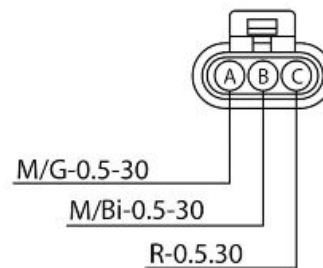

THE CONNECTION DIAGRAMS ARE IN THE ELECTRICAL SYSTEM SECTIONS; PAY ATTENTION TO THESE DIAGRAMS AS THEY SHOW THE CONNECTOR/COMPONENT AS VIEWED FROM THE CABLE HARNESS SIDE, THAT IS LOOKING AT THE CABLES WHEN GOING OUT OF THE "MAIN" CABLE HARNESS AND INTO THE CONNECTOR/COMPONENT.

CAUTION

BEFORE CARRYING OUT ANY TROUBLESHOOTING, CAREFULLY READ THE GENERAL TROUBLESHOOTING CONCEPTS FOR ELECTRICAL DEVICES AT THE BEGINNING OF THE CHECK AND CONTROL SECTION IN THE ELECTRICAL SYSTEM CHAPTER.

AXONE: FUEL INJECTION SYSTEM**AXONE: PARAMETERS****Throttle**

Example value: 4.9°

AXONE: STATUSES**Throttle position**

Example value: Released/Pressed/Full load

Indicates if the throttle potentiometer is open or closed in the released position.

AXONE: ELECTRICAL ERRORS**Throttle actuator position sensor P0120**

Example value: open circuit, shorted to positive / shorted to negative.

Error cause

- If the circuit is open, shorted to positive: excessive voltage has been detected at PIN 3 of connector A (BROWN).
- If shorted to negative: voltage equal to zero has been detected.

Troubleshooting

- Circuit is open, shorted to positive: check the injection control unit connector and the sensor connector: if they are not OK, restore; if they are OK, check continuity between PIN 3 of connector A (BROWN) and PIN C of the sensor (red cable): if there is not continuity, restore the cable harness; if there is continuity, check continuity of the sensor between PIN A and PIN C: if there is not continuity, replace the potentiometer; if there is continuity, check the

resistance. If resistance is over 2.5 kOhm, it means the red cable is shorted to positive and the cable harness should be restored

- shorted to negative: disconnect the sensor connector and check the ground insulation of the red cable (from throttle sensor connector or control unit connector): if there is continuity to ground, restore the cable harness; if it is ground insulated, the resistance between PIN A and PIN C is below 1.3 kOhm; therefore, the throttle body should be replaced

AXONE: ADJUSTABLE PARAMETERS

Throttle position autodetection: It allows the control unit to detect the closed throttle position; just press the Enter key.

Self-adjustable parameters reset: Lambda probe self-adaptability parameters reset: operation to be carried out after the throttle body is cleaned or in the case a new engine, a new lambda probe or a new injector is fitted, or the correct operation of the injection system or the valves is restored.

AXONE: RESET PROCEDURE

Once the throttle body or the injection control unit is replaced, it is necessary to connect to the diagnosis instrument selecting FUEL INJECTION and carry out the operation: Throttle positioner autodetection.

Engine temperature sensor

Function

tells the engine temperature to the control unit so as to optimise its operation.

Operation / Operating principle

NTC type sensor (resistance sensor, inversely variable with temperature).

Level in electrical circuit diagram: Temperature sensors


Location:

- Sensor: within the engine "V"
- Connector: on the sensor

Electrical specifications:

ENGINE TEMPERATURE SENSOR RESISTANCE

	Specification	Desc./Quantity
1	Resistance at -40 °C (-40 °F)	100.950 kOhm
2	Resistance at -30 °C (-22 °F)	53.100 kOhm
3	Resistance at -20 °C (-4 °F)	29.120 kOhm
4	Resistance at -10 °C (14 °F)	16.600 kOhm
5	Resistance at 0 °C (32 °F)	9.750 kOhm
6	Resistance at +10 °C (50 °F)	5.970 kOhm
7	Resistance at +20 °C (68 °F)	3.750 kOhm
8	Resistance at +30 °C (86 °F)	2.420 kOhm
9	Resistance at +40 °C (104 °F)	1.600 kOhm
10	Resistance at +50 °C (122 °F)	1.080 kOhm

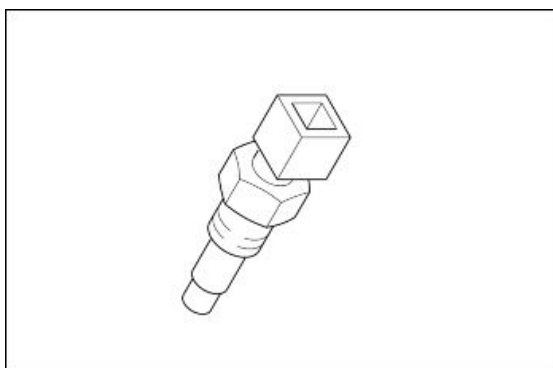

	Specification	Desc./Quantity
11	Resistance at +60 °C (140 °F)	0.750 kOhm
12	Resistance at +70 °C (158 °F)	0.530 kOhm
13	Resistance at +80 °C (176 °F)	0.380 kOhm
14	Resistance at +90 °C (194 °F)	0.280 kOhm
15	Resistance at +100 °C (212 °F)	0.204 kOhm
16	Resistance at +110 °C (230 °F)	0.153 kOhm
17	Resistance at +120 °C (257 °F)	0.102 kOhm

Pin-out:

- PIN 1: Ground connection
- PIN 2: 0-5 V signal

THE CONNECTION DIAGRAMS ARE IN THE ELECTRICAL SYSTEM SECTIONS; PAY ATTENTION TO THESE DIAGRAMS AS THEY SHOW THE CONNECTOR/COMPONENT AS VIEWED FROM THE CABLE HARNESS SIDE, THAT IS LOOKING AT THE CABLES WHEN GOING OUT OF THE "MAIN" CABLE HARNESS AND INTO THE CONNECTOR/COMPONENT.

CAUTION

BEFORE CARRYING OUT ANY TROUBLESHOOTING, CAREFULLY READ THE GENERAL TROUBLESHOOTING CONCEPTS FOR ELECTRICAL DEVICES AT THE BEGINNING OF THE CHECK AND CONTROL SECTION IN THE ELECTRICAL SYSTEM CHAPTER.

AXONE: FUEL INJECTION SYSTEM**AXONE: PARAMETERS****Engine temperature**

In case of recovery, this value is set by the control unit.

AXONE: ELECTRICAL ERRORS

engine temperature sensor P0115 - open circuit, shorted to positive / shorted to negative.

Error cause

- If the circuit is open, shorted to positive: excessive voltage has been detected at PIN 5 of connector A (BROWN).
- If shorted to negative: voltage equal to zero has been detected at PIN 5 of the BROWN connector.

Troubleshooting

- If the circuit is open, shorted to positive: check the sensor connector and the Marelli control unit connector. If they are not OK, restore the cable harness; if OK, check the continuity of the sensor; if it is not OK, replace the sensor; if it is OK, check continuity between PIN 5 of the BROWN connector and PIN 2 of sensor: restore cable harness if there is not continuity; if it is OK, reconnect the control unit connector and, with key set to key ON, check the continuity between the sensor connector PIN 1 and the vehicle ground connection: if there is not continuity, restore the cable harness; if there is continuity, it means that the cause of the error is that the cable is shorted to positive and now the cable harness between the BROWN PIN 5 and PIN 2 of the sensor should be restored. If the air temperature sensor

error is displayed at the same time, this means that the grey cable common for both sensors is shorted to positive.

- If shorted to negative, check sensor correct resistance: if resistance is null, replace the sensor; if resistance is correct, it means that the orange cable has ground connection: restore the cable harness.

NOTES No error is detected if the sensor does not work correctly or the control unit connector or sensor terminals are rusty: then check through Navigator if the temperature indicated is the same as the engine temperature. Check also that the sensor electrical characteristics are observed: replace the sensor if not OK; if it is OK, check the sensor connector and the Marelli control unit connector


Air temperature sensor

Function

It tells the control unit the intake air temperature in order to calculate oxygen presence so as to optimise the petrol quantity necessary for correct combustion.

Operation / operating principle

NTC type sensor (resistance sensor, inversely variable with temperature).

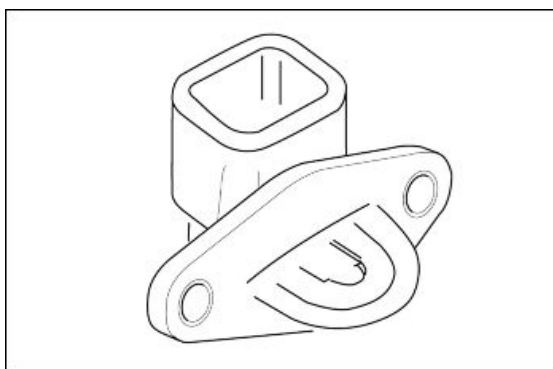

Level in wiring diagram: Temperature sensors

Location:

- sensor: in front of the filter casing
- connector: on the sensor

Electrical characteristics:

AIR TEMPERATURE SENSOR RESISTANCE

	Specification	Desc./Quantity
1	Resistance at -40 °C (-40 °F)	100.950 kOhm
2	Resistance at 0 °C (32 °F)	9.750 kOhm
3	Resistance at 10 °C (50 °F)	5.970 kOhm
4	Resistance at 20 °C (68 °F)	3.750 kOhm
5	Resistance at 30 °C (86 °F)	2.420 kOhm
6	Resistance at 40 °C (104 °F)	1.600 kOhm
7	Resistance at 90 °C (194 °F)	0.280 kOhm

Pin-out:

- PIN 1: Ground connection
- PIN 2: 0-5 V signal

THE CONNECTION DIAGRAMS ARE IN THE ELECTRICAL SYSTEM SECTIONS; PAY ATTENTION TO THESE DIAGRAMS AS THEY SHOW THE CONNECTOR/COMPONENT AS VIEWED FROM

THE CABLE HARNESS SIDE, THAT IS LOOKING AT THE CABLES WHEN GOING OUT OF THE "MAIN" CABLE HARNESS AND INTO THE CONNECTOR/COMPONENT.

CAUTION

BEFORE CARRYING OUT ANY TROUBLESHOOTING, CAREFULLY READ THE GENERAL TROUBLESHOOTING CONCEPTS FOR ELECTRICAL DEVICES AT THE BEGINNING OF THE CHECK AND CONTROL SECTION IN THE ELECTRICAL SYSTEM CHAPTER.

AXONE: FUEL INJECTION SYSTEM**AXONE: PARAMETERS****Air temperature**

In case of failure, 25°C is set as temperature

AXONE: ELECTRICAL ERRORS

air temperature sensor P0110 - open circuit, shorted to positive / shorted to negative.

Error cause

- If the circuit is open, shorted to positive: excessive voltage has been detected at PIN 14 of the BROWN connector.
- If shorted to negative: voltage equal to zero has been detected at PIN 14 of the BROWN connector

Troubleshooting

- If the circuit is open, shorted to positive: check the sensor connector and the Marelli control unit connector. If they are not OK, restore the cable harness; if OK, check the continuity of the sensor; if it is not OK, replace the sensor; if it is OK, check continuity between PIN 14 of the BROWN connector and PIN 2 of sensor: restore cable harness if there is not continuity; if it is OK, reconnect the control unit connector and, with key set to key ON, check the continuity between the sensor connector PIN 1 and the vehicle ground connection: if there is not continuity, restore the cable harness; if there is continuity, it means that the cause of the error is that the cable is shorted to positive and now the cable harness between the BROWN PIN 14 and PIN 2 of the sensor should be restored. If the engine temperature sensor error is displayed at the same time, this means that the grey cable common for both sensors is shorted to positive.
- If shorted to negative, check sensor correct resistance: if resistance = 0, replace the sensor; if resistance is correct, it means that the pink/black cable has ground connection: restore the cable harness

NOTES No error is detected if the sensor does not work correctly or the control unit connector or sensor terminals are rusty: then check through Navigator if the temperature indicated is plausible in relation to the ambient temperature. Check also that the sensor electrical characteristics are observed: replace the sensor if not OK; if it is OK, check the sensor connector and the Marelli control unit connector.

Lambda sensor

Function

In charge of telling the control unit whether the mixture is lean or rich.

Operation / Operating principle

The Marelli injection control unit reads and interprets a voltage generated by the difference in oxygen content between the exhaust fumes and the ambient. It does not require an external supply source but, in order to work properly, it should reach a high operating temperature: that is why there is a heating circuit inside.

Level in electrical circuit diagram: Oxygen sensor

Location:

- sensor: exhaust pipe
- Connector: near the probe

Electrical characteristics:

Heater circuit: 12 -14 Ω at 20 °C (68 °F)

Pin-out:

1. Sensor signal + (black wire)
2. Sensor signal - (grey wire)
3. Heater ground connection (white)
4. Heater power supply (white)

AXONE: PARAMETERS

Lambda probe

Example value: 0 - 1000 mV

If there is a short circuit at + 5 V or above, the value read is approx. 5.000 mV. If there is a short circuit to ground instead, the value read is equal to 0 mV and the Lambda Sensor Correction parameter shows 25%: no error is displayed, though.


Lambda sensor correction

example value: 1.00

In closed loop, the value must be close to 0 % (values not within the +10 % and -10 % range may indicate a fault): In an open circuit, the lambda probe signal is too low. Therefore, the control unit takes it as a lean mixture condition and will try to enrich it. The value read will be +25%.

NAVIGATOR: STATUSES

Lambda check

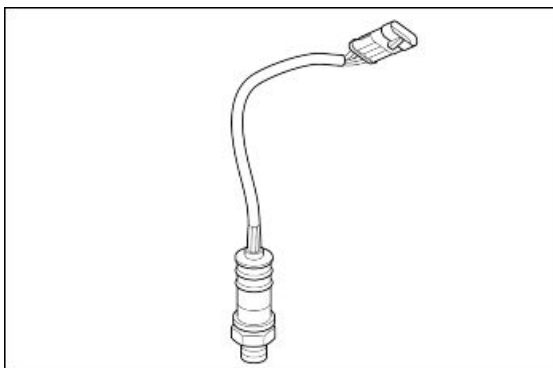

Example value: Open loop / Closed loop

Closed loop indicates that the control unit is using the lambda probe signal to keep the combustion as close as possible to the stoichiometric value.

AXONE: ELECTRICAL ERRORS

Lambda probe P0130 - Shorted to positive.

Error cause

- Excessive voltage (battery voltage) has been detected at PINS 32 and 22 of the BLUE connector.

Troubleshooting

- shorted to positive: with the key set to ON, disconnect the sensor connector and measure voltage at PIN 1 on the cable harness side (white/yellow cable): if there is voltage (5 or 12 V), restore the cable harness; if there is no voltage, measure voltage at PIN 2, cable harness side, (green/white cable) and if there is voltage, restore the cable harness; if there is no voltage, replace the lambda probe

Lambda probe heating P0135 - shorted to positive / open circuit, shorted to negative.

Error cause

- If shorted to positive: excessive voltage has been detected at PIN 11 of the BLUE connector.
- If the circuit is open, shorted to negative: voltage equal to zero has been detected at PIN 11 of the BLUE connector

Troubleshooting

- shorted to positive: disconnect the probe connector and check the sensor correct resistance: replace the sensor if not OK; if it is OK, restore the cable harness.
 - if the circuit is open, shorted to negative: check the continuity from probe connector (PIN 3 and 4) towards the probe: if not OK, replace the probe; if it is correct, check the sensor connector and the Marelli control unit connector. If not OK, restore. If OK, and with key set to ON and sensor connector disconnected, check if there is battery voltage at PIN 4: if not OK, check the red/black cable (cable harness side) between the probe connector and the auxiliary injection relay (No. 29 in the wiring diagram, placed under the saddle, rear side, in the auxiliary fuses/relays box, close to the fuses, in the row towards the rear; CHECK, however, the identification of the relay with the colour of the cables). If there are also coil and injector errors, check that relay and its excitation and power line; if there is voltage at PIN 4, check the white cable ground insulation, cable harness side (PIN 3): if it is not OK, restore the cable harness. If OK, check continuity of the white cable, cable harness side (between PIN 3 of the sensor connector PIN 3 and PIN 11 of the BLUE connector) and restore the cable harness.
-

Injector

Function

To supply the correct amount of petrol at the right timing.

Operation / Operating principle

Injector coil is excited for the petrol passage to open.

Level in wiring diagram: Coils and injectors

Location:


- on the throttle bodies
- connector: on injector

Electrical characteristics: 14.8 Ohm +/- 5% (at 20 °C)

Pin-out:

"+": Supply:

"-": Ground connection

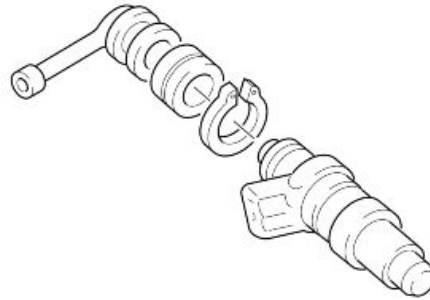

THE CONNECTION DIAGRAMS ARE IN THE ELECTRICAL SYSTEM SECTIONS; PAY ATTENTION TO THESE DIAGRAMS AS THEY SHOW THE CONNECTOR/COMPONENT AS VIEWED FROM THE CABLE HARNESS SIDE, THAT IS LOOKING AT THE CABLES WHEN GOING OUT OF THE "MAIN" CABLE HARNESS AND INTO THE CONNECTOR/COMPONENT.

CAUTION

BEFORE CARRYING OUT ANY TROUBLESHOOTING, CAREFULLY READ THE GENERAL TROUBLESHOOTING CONCEPTS FOR ELECTRICAL DEVICES AT THE BEGINNING OF THE CHECK AND CONTROL SECTION IN THE ELECTRICAL SYSTEM CHAPTER.

AXONE: FUEL INJECTION SYSTEM

AXONE: PARAMETERS

Injection time

AXONE: ACTIVATIONS

Left injector: operation for 4 ms, 5 times

The auxiliary injection relay (No. 29 in the wiring diagram, placed under the saddle in the fuse box) is energised for 5 seconds and the grey/red cable of the injector is closed to ground for 4 ms per second. Disconnect the four-way connector of the fuel pump to be able to hear the relay and injector activation. The continuity of the wiring is necessary for correct activation: no error indications are displayed in case of lack of activation

AXONE: ELECTRICAL ERRORS

Left cylinder injector P0201 - shorted to positive / shorted to negative / open circuit.

Error cause

- If shorted to positive: excessive voltage has been detected at PIN 28 of the BROWN connector.
- If shorted to negative: no voltage has been detected.
- If the circuit is open: an interruption has been detected.

Troubleshooting

- Shorted to positive: disconnect the injector connector, take the key to ON and check if there is voltage on the grey/red cable: if there is voltage, restore the cable harness. If there is no voltage, replace the injector.
- Shorted to negative: disconnect the injector connector, take the key to ON and check if the grey/red cable has continuity to the ground connection: if there is continuity to ground, restore the cable harness; if there is not continuity, replace the injector
- the circuit is open: check the component correct electrical characteristic: if it is not the correct one, replace the component; if it is correct, check the connector on the component and the Marelli control unit connector: If they are not OK, restore. If OK, check cable continuity between PIN 28 of the BROWN connector and the component PIN - and restore the cable harness.

AXONE: ACTIVATIONS

Right injector: operation for 4 ms, 5 times

The auxiliary injection relay (No. 29 in the wiring diagram, placed under the saddle in the fuse box) is energised for 5 seconds and the blue/red cable of the injector is closed to ground for 4 ms per second. Disconnect the four-way connector of the fuel pump to be able to hear the relay and injector activation. The continuity of the wiring is necessary for correct activation: no error indications are displayed in case of lack of activation

AXONE: ELECTRICAL ERRORS

Right injector - shorted to positive / shorted to negative / open circuit.

Error cause

- If shorted to positive: excessive voltage has been detected at PIN 37 of the (BROWN) connector.
- If shorted to negative: no voltage has been detected.
- If the circuit is open: an interruption has been detected.

Troubleshooting

- Shorted to positive: disconnect the injector connector, take the key to ON and check if there is voltage on the blue/red cable: if there is voltage, restore the cable harness. If there is no voltage, replace the injector.
- Shorted to negative: disconnect the injector connector, take the key to ON and check if the blue/red cable has continuity to the ground connection: if there is continuity to ground, restore the cable harness; if there is not continuity, replace the injector.


- the circuit is open: check the component correct electrical characteristic: if it is not the correct one, replace the component; if it is correct, check the connector on the component and the Marelli control unit connector: If they are not OK, restore. If OK, check cable continuity between PIN 37 of the BROWN connector and the component PIN - and restore the cable harness.

Fuel pump

Petrol pump:

Input: 3.5 A (to be measured between pins 1 and 2 with 12V voltage)

The low fuel warning light turns on with values over 230 Ohm.

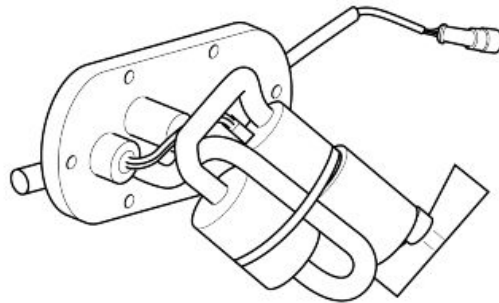

Coil

Function

It controls the ignition spark plug in order to generate the fuel ignition spark.

Operation / operating principle

With inductive discharge: 2 coils with double secondary circuit (Twin spark)

Level in wiring diagram: Coils and injectors

Location:

- Under the tank, right and left side
- connector: on the coil


Electrical characteristics:

- Primary winding resistance: 570 mOhm \pm 50 mOhm
- Secondary winding resistance: 7330 Ohm \pm 500 Ohm

Measured at 23°C \pm 5°

Pin-out:

- PIN 1: Circuit earthing
- PIN 2: Power (battery voltage)

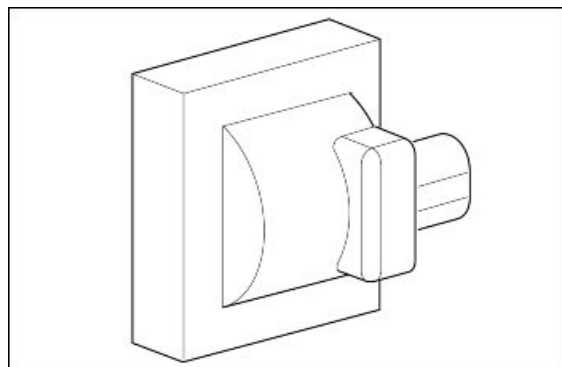

THE CONNECTION DIAGRAMS ARE IN THE ELECTRICAL SYSTEM SECTIONS; PAY ATTENTION TO THESE DIAGRAMS AS THEY SHOW THE CONNECTOR/COMPONENT AS VIEWED FROM THE CABLE HARNESS SIDE, THAT IS LOOKING AT THE CABLES WHEN GOING OUT OF THE "MAIN" CABLE HARNESS AND INTO THE CONNECTOR/COMPONENT.

CAUTION

BEFORE CARRYING OUT ANY TROUBLESHOOTING, CAREFULLY READ THE GENERAL TROUBLESHOOTING CONCEPTS FOR ELECTRICAL DEVICES AT THE BEGINNING OF THE CHECK AND CONTROL SECTION IN THE ELECTRICAL SYSTEM CHAPTER.

AXONE: ACTIVATIONS**Left coil:**

The auxiliary injection relay (No. 29 in the wiring diagram, placed under the saddle, rear side, in the auxiliary fuses/relays box, in the rear row close to the fuses; CHECK, however, the identification of the relay with the colour of the cables) is energised for 5 seconds and the green/orange cable of the coil is closed to ground for 2 ms per second. Disconnect the 4-way connector of the fuel pump to be able to hear the relay and injector activation. The continuity of the wiring is necessary for correct activation: no error indications are displayed in case of lack of activation

AXONE: ELECTRICAL ERRORS

Left coil - shorted to positive / open circuit, shorted to negative

Error cause

- Shorted to positive: excessive voltage has been detected at PIN 38 of the BROWN connector.
- If the circuit is open, shorted to negative: voltage equal to zero has been detected at PIN 38 of the BROWN connector.

Troubleshooting

- Shorted to positive: disconnect the coil connector, set the key to ON, activate the coil with Axone and check voltage at connector PIN 2: if there is voltage, restore the cable harness; if voltage = 0, replace the coil.
- If the circuit is open, shorted to negative: check the coil connector and the Marelli control unit connector. If not OK, restore; if everything is OK, check cable continuity between the two cable terminals. If there is no continuity, restore the cable harness; if there is cable continuity, with key set to ON, check the cable earth insulation (from coil connector or control unit connector). If not OK, restore the cable harness.

AXONE: ACTIVATIONS**Right coil:**

The auxiliary injection relay (No. 29 in the wiring diagram, placed under the saddle, rear side, in the auxiliary fuses/relays box, in the rear row close to the fuses; CHECK, however, the identification of the relay with the colour of the cables) is energised for 5 seconds and the sky blue/green cable of the coil is closed to ground for 2 ms per second. Disconnect the 4-way connector of the fuel pump to be able

to hear the relay and injector activation. The continuity of the wiring is necessary for correct activation: no error indications are displayed in case of lack of activation

AXONE: ELECTRICAL ERRORS

Right coil - shorted to positive / open circuit, shorted to negative.

Error cause

- If shorted to positive: excessive voltage has been detected at PIN 10 of the BROWN connector.
- If the circuit is open, shorted to negative: voltage equal to zero has been detected at PIN 10 of the BROWN connector.

Troubleshooting

- Shorted to positive: disconnect the coil connector, set the key to ON, activate the coil with Axone and check voltage at connector PIN 2: if there is voltage, restore the cable harness; if voltage = 0, replace the coil.
- If the circuit is open, shorted to negative: check the coil connector and the Marelli control unit connector. If not OK, restore; if everything is OK, check cable continuity between the two cable terminals. If there is no continuity, restore the cable harness; if there is cable continuity, with key set to ON, check the cable earth insulation (from coil connector or control unit connector). If not OK, restore the cable harness.

Engine oil pressure sensor

Function: Indicates the instrument panel if there is enough oil pressure (0.35 +/- 0.2 bar) (5.1 +/- 2.9 PSI) in the engine.

Operation / Operating principle: normally closed switch. With oil pressure above 0.35 +/- 0.2 bar (5.1 +/- 2.9 PSI), open circuit.

Level in wiring diagram: fuel reserve and oil pressure.

Location:

- Sensor: in between the engine "V", a little to the left
- connector: on the sensor.

Electrical characteristics:

- With engine off: closed circuit (continuity).



- With engine started: open circuit (infinite resistance).

Pin-out:

- PIN 1: voltage 12V

Instrument panel**Oil sensor failure DSB 07**Error cause

- An oil sensor failure is signalled when, with engine off, it is detected that the sensor circuit is open. The test is performed only once when the key is set to ON. This error is signalled by the bulb icon and the general warning light turns on as well.

Troubleshooting

- Check the sensor connector and the instrument panel connector (PIN 17): If not OK, restore. If OK, check the continuity of the purple cable between the sensor connector and the instrument panel connector PIN 17: if not OK, restore the cable harness; if OK, replace the sensor.

Oil pressure failure DSB 08Error cause

- An oil sensor failure is signalled when, with engine running, it is detected that the sensor circuit is closed. This error is signalled by the bulb icon and the general warning light turns on as well.

Troubleshooting

- Detach the sensor connector and check the purple cable is ground insulated: if there is continuity to ground, restore the cable harness; if it is ground insulated, replace the switch. If this error persists, use a pressure gauge to check the pressure of the oil in the engine circuit

Neutral sensor**Function**

it tells the gear position to the control unit: in neutral or in gear.

Operation / Operating principle

for gear in neutral, the circuit is closed to ground connection: then, via CAN, the control unit sends the signal to the instrument panel which turns on the neutral speed warning light.

Level in electrical circuit diagram: start-up enabling switches

Location:

- Sensor: rear / upper side of the gearbox

- Connector: on the sensor

Electrical characteristics:

- Gear in neutral: closed circuit (0 V on wire from control unit to sensor / switch in continuity).
- Gearshift engaged: open circuit (12 V on wire from control unit to sensor / open switch, infinite resistance)

Pin-out:

- PIN 1: Voltage 12V

NAVIGATOR: STATUSES**Gear in neutral**

Example value:yes/no

DIAGNOSIS

- Indication on the instrument panel always gear engaged: check the control unit connector and the sensor connector: if they are not OK, restore the cable harness; if OK, disconnect the connector and, with gear in neutral, check continuity to ground of the terminal, sensor side: if there is not continuity, replace the sensor (after checking cable harness continuity on the sensor side and the correct mechanical position); if there is, check cable continuity between the sensor connector and PIN 23 of the BROWN connector: if there is no continuity, restore the cable harness. If there is, replace the instrument panel if the vehicle performance is correct (the engine starts with gear in neutral but the neutral warning light is off) or replace the control unit if the vehicle performance is not correct (the engine does not start with gear in neutral).
- Indication on the instrument panel always gear in neutral: disconnect the terminals from the sensor and check if there is continuity with ground connection at PIN toward the sensor, with gear engaged: if there is continuity, replace the sensor. If it is ground insulated, it means that the grey/black cable from PIN 1 of the sensor to PIN 23 of the BROWN connector is shorted to ground: restore the cable harness.

Clutch lever sensor**Function**

It tells the clutch lever position to the control unit.

Operation / operating principle

In order to start the engine, pull the clutch also with the gear in neutral.

Level in wiring diagram:Start-up enabling switches.

Location:

- sensor: under clutch lever
- connector: on the sensor

Electrical characteristics:

- Clutch pulled: closed circuit (continuity)
- Clutch released: open circuit (infinite resistance)

Pin-out:

1. Voltage 12V
 2. Ground connection
-

Side stand sensor**Function**

It tells the side stand position to the control unit.

Operation / Operating principle

If the gear is engaged and the side stand is unfolded, and therefore the circuit is open, the control unit does not enable vehicle start-up or shuts off the engine if it is rotating.

Level in electrical circuit diagram: Start-up enabling switches

Location:

- sensor: on side stand supporting plate
- Connector: left side, near the starter motor

Electrical characteristics:

- Side Stand Up: closed circuit (continuity)
- Side Stand Down: open circuit (infinite resistance)

Pin-out:

1. Ground connection
2. Voltage 12 V (brown, sensor side)

AXONE: STATUSES**Side stand**

Example value: retracted / extended

DIAGNOSIS

- Indication on Axone always EXTENDED: check the side stand sensor connector and the ECU connector: if they are not OK, restore; if OK, disconnect both terminals from the sensor and check continuity to ground of PIN 1 (blue/green, cable harness side): if there is not continuity, restore the cable harness; if there is, check continuity of the green/brown cable: if it is not OK, restore; if OK, replace the sensor.
- Indication on Axone always RETRACTED: disconnect the terminals from the sensor and check if there is continuity between the two PINS, with stand down: if there is continuity, replace the sensor; if the circuit is open, it means that the brown/green cable (cable harness side) from PIN 2 of the sensor to PIN 38 of the BLUE connector is shorted to ground: restore the cable harness

Air temperature sensor - instrument panel

Function

It tells the ambient air temperature to the instrument panel.

Operation / operating principle

NTC type sensor (resistance sensor, inversely variable with temperature).

Level in wiring diagram: Temperature sensors

Location:


- sensor: on the front headlamp support, right side
- connector: under the instrument panel

Electrical characteristics:

- Resistance at 0°C: 32.5 kOhm +/- 5%
- Resistance at 25°C: 10.0 kOhm +/- 5%

Pin-out:

1. Voltage 5V
2. Ground connection

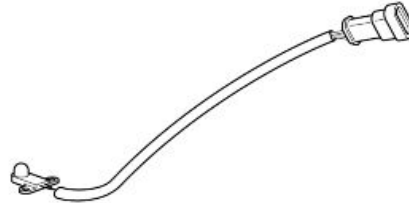

THE CONNECTION DIAGRAMS ARE IN THE ELECTRICAL SYSTEM SECTIONS; PAY ATTENTION TO THESE DIAGRAMS AS THEY SHOW THE CONNECTOR/COMPONENT AS VIEWED FROM THE CABLE HARNESS SIDE, THAT IS LOOKING AT THE CABLES WHEN GOING OUT OF THE "MAIN" CABLE HARNESS AND INTO THE CONNECTOR/COMPONENT.

CAUTION

BEFORE CARRYING OUT ANY TROUBLESHOOTING, CAREFULLY READ THE GENERAL TROUBLESHOOTING CONCEPTS FOR ELECTRICAL DEVICES AT THE BEGINNING OF THE CHECK AND CONTROL SECTION IN THE ELECTRICAL SYSTEM CHAPTER.

Instrument panel

Air temperature sensor failure DSB 06

Error cause

- An oil sensor failure is signalled when it is detected that the sensor circuit is open or shorted to positive

Troubleshooting

- Check the sensor connector and the instrument panel connector (PINS 10 and 18): If they are not OK, restore. If OK, check continuity of the pink cable between the sensor connector and the instrument panel connector PIN 10: if it is not OK, restore the cable harness; if OK, check the correct sensor resistance: if it is not OK, replace the sensor; if it is OK, check continuity of the brown cable between the sensor connector and PIN 18 of the instrument

panel connector: If not OK, restore the cable harness; if OK, with key set to ON, check if there is voltage at the sensor connector PIN 1: if there is no voltage, replace the instrument panel; if there is approximately 12V, restore the cable harness (there is a short circuit in the battery). If there is 5V voltage, connect a 10 kOhm resistance to PIN 1 of the sensor connector and to the vehicle ground connection: if, with key set to KEY ON, the voltage measured upstream the resistance decreases, replace the instrument panel. If voltage continues to be approximately 5V, restore the pink cable (there is a short circuit at + 5V).

Notes

If a short circuit to ground is detected at PIN 10 of the instrument panel connector, the display will show a full scale temperature indication of 60°C

Check the ground insulation of the sensor connector pink cable: if there is a connection, restore the cable harness; if it is earth insulated, check that sensor resistance is correct: if it is not OK, replace the sensor; if it is OK, replace the instrument panel.

RUN/STOP switch

Function

It tells the control unit if the driver wishes to enable engine start-up or to keep the engine running.

Operation / Operating principle

If the driver wants to shut off the engine or to disable engine start-up, the switch should be open, i.e. the Marelli control unit should not detect voltage at PIN 27 of the BLUE connector

Level in wiring diagram: Start-up enabling switches.


Location:

- Switch: right light switch
- Connector: next to the headstock, right side

Electrical characteristics:

- STOP position: the circuit is open
- RUN position: closed circuit (continuity)

Pin-out:

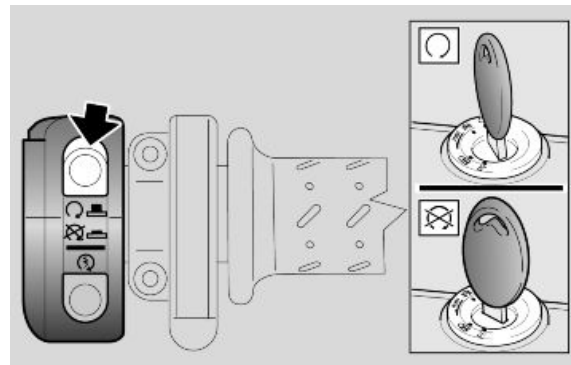

- Sky blue/orange cable (cable harness side): 0V voltage if engine kill in STOP; 12V if engine kill in RUN.
- Red/black cable (cable harness side): always 12 V voltage

CAUTION

BEFORE CARRYING OUT ANY TROUBLESHOOTING, CAREFULLY READ THE GENERAL TROUBLESHOOTING CONCEPTS FOR ELECTRICAL DEVICES AT THE BEGINNING OF THE CHECK AND CONTROL SECTION IN THE ELECTRICAL SYSTEM CHAPTER.

NAVIGATOR: PARAMETERS

-

AXONE: STATUSES**Run / stop switch**

Example value:Run/Stop

DIAGNOSIS

- Indication on Axone always STOP: disconnect the connector and, with the switch set to RUN, check if there is continuity between the blue/green (PIN 1) cable and the grey/sky blue (PIN 4) cable (sensor side): if there is not continuity, replace the sensor; if there is, check the connector. If it is not OK, restore the cable harness; if it is OK, with the key set to ON, check if there is voltage on the red/black cable (cable harness side). If there is no voltage, restore the cable harness; if there is, check the ground insulation of the sky blue/orange cable (cable harness side). if there is continuity to ground, restore the cable harness; if it is OK, take the key to OFF and check that the BLUE connector is in good conditions and if there is continuity of the sky blue/orange cable between the connector in question and PIN 27 of the BLUE connector: if not OK, restore the cable harness; if OK, replace the Marelli control unit
- Indication on Axone always RUN: disconnect the connector and, with the switch set to STOP, check if there is continuity between the two cables of the switch, PIN 1 and PIN 4 (sensor side). If there is continuity, replace the switch; if there is not, it means that, with the key set to KEY ON, the sky blue/orange cable is shorted to positive: restore the cable harness

Connectors

ECU

The connectors on the control unit are both black. For the following pin explanation, the cable harness connectors are the reference:

Engine connector pins (brown)

Pin Use

- 1 Not used
- 2 Not used
- 3 Ignition potentiometer signal
- 4 Not used
- 5 Engine temperature signal
- 6 Not used
- 7 Not used
- 8 Not used
- 9 Not used
- 10 Right cylinder coil control
- 11 Not used
- 12 Not used
- 13 Not used
- 14 Air temperature signal
- 15 Not used
- 16 Not used
- 17 Not used
- 18 Not used
- 19 Not used
- 20 5V power supply (NTC sensors)
- 21 Not used
- 22 Not used
- 23 Neutral sensor signal
- 24 Not used
- 25 Engine revolution sensor signal
- 26 Not used
- 27 Not used
- 28 Left cylinder injector control
- 29 Ignition potentiometer power supply
- 30 Not used
- 31 Not used
- 32 Ignition potentiometer negative
- 33 Not used
- 34 Revolution sensor anti-jamming cable
- 35 Engine revolution sensor signal
- 36 Not used
- 37 Right cylinder injector control
- 38 Left cylinder coil control

Vehicle connector pins (blue)

Pin Use

- 1 Not used
- 2 Not used
- 3 Not used
- 4 Power supply protected from instrument panel
- 5 Not used
- 6 Pin 86 auxiliary relay control
- 7 Immobilizer line
- 8 Not used
- 9 Not used
- 10 Not used
- 11 Oxygen probe negative control
- 12 Not used
- 13 Not used
- 14 Not used
- 15 Not used
- 16 K line (diagnosis)
- 17 Power supply from main relay
- 18 Not used
- 19 Not used
- 20 CAN - H line (ccm/instrument panel)
- 21 Not used
- 22 Oxygen probe signal
- 23 Not used
- 24 Vehicle speed signal input
- 25 Not used
- 26 Not used
- 27 "Engine stop" signal input
- 28 Not used
- 29 CAN - L line (ccm/instrument panel)
- 30 Not used
- 31 Not used
- 32 Oxygen probe power supply
- 33 Not used
- 34 Not used
- 35 Not used
- 36 Not used

37 Not used

38 Side stand sensor signal

Dashboard

PIN USE

1 + KEY

2 RIGHT TURN INDICATOR CONTROL

3 HIGH-BEAM LIGHT INPUT

4 -

5 -

6 K LINE

7 -

8 SCROLL

9 FUEL LEVEL SENSOR

10 EXTERNAL AIR TEMPERATURE SENSOR

11 + BATTERY

12 LEFT TURN INDICATOR CONTROL

13 -

14 HAZARD

15 -

16 GENERAL EARTH CONNECTION

17 OIL PRESSURE SENSOR

18 SENSORS EARTH CONNECTION

19 GENERAL EARTH CONNECTION

20 GENERAL EARTH CONNECTION

21 + BATTERY

22 FRONT LEFT TURN INDICATOR ACTUATOR

23 REAR LEFT TURN INDICATOR ACTUATOR

24 -

25 -

26 CAN H LINE


27 -

28 LIGHT RELAY ACTUATOR

29 -

30 TRIP 1 - 2

31 + BATTERY

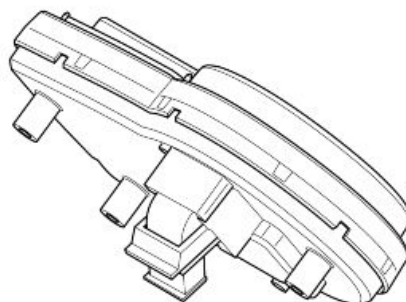

32 FRONT RIGHT TURN INDICATOR ACTUA-
TOR
33 REAR RIGHT TURN INDICATOR ACTUATOR
34 -
35 -
36 CAN L LINE
37 -
38 -
39 -
40 TRIP 1

INDEX OF TOPICS

ENGINE FROM VEHICLE

ENG VE

Vehicle preparation

- Drain off the engine oil.
 - Remove the tank.
 - Remove the exhaust system.
 - Remove the fork.
 - Remove the shock absorber.
 - Remove the air filter casing.
 - Remove the battery.
-
- Operating from both sides, undo and remove the lower screw.



-
- Operating from both sides, remove the throttle body covers by sliding them off from above.



-
- Operating from both sides, undo and remove the two screws.





- Operating from both sides, remove the side plate.
- Remove the throttle body.



Removing the engine from the vehicle

- Operating from both sides, undo and remove the two screws.




- Disconnect the spark plug tubes.



- Disconnect the engine temperature sensor connector.



- Undo and remove the two screws.
- Remove the timing sensor.

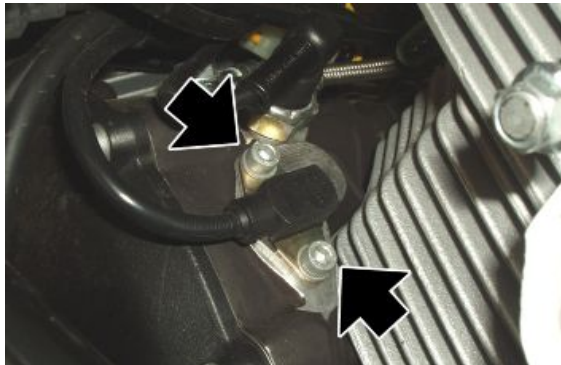


- Disconnect the oil pressure sensor.



- Remove the clamp.



- Disconnect the generator connector.

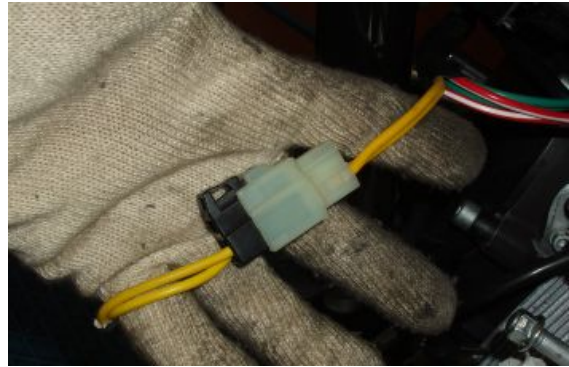

- Operating on both sides, release the clamp.
- Disconnect the oil vapour recovery pipe.

NOTE

UPON REFITTING, ALWAYS REPLACE WITH A NEW CLAMP.



- Release the clamp and disconnect the crankcase / timing system vapour recovery pipe.



- Slide off the transmission oil breather pipe.



- Disconnect the gear in neutral sensor connector.



- Unscrew and remove the two screws.
- Remove the starter motor protection.




- Disconnect the side stand sensor connector.




- Unscrew and remove the screw.
- Disconnect the earth leads.




- Disconnect the starter motor connectors.

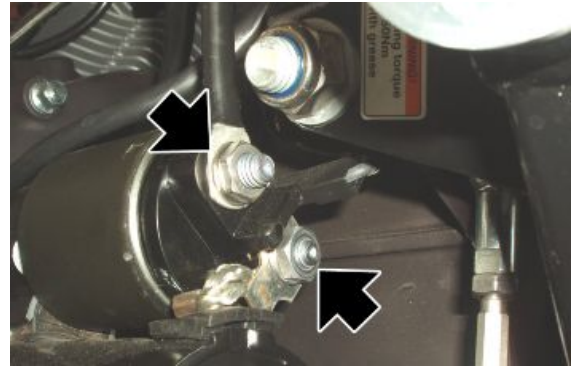

- Undo and remove the screw.
- Remove the gear transmission lever.

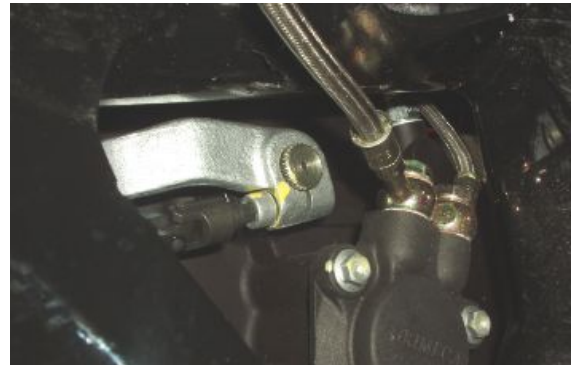

- Unscrew and remove the three screws.
- Remove the clutch control cylinder.
- Lock the plunger using a clamp.

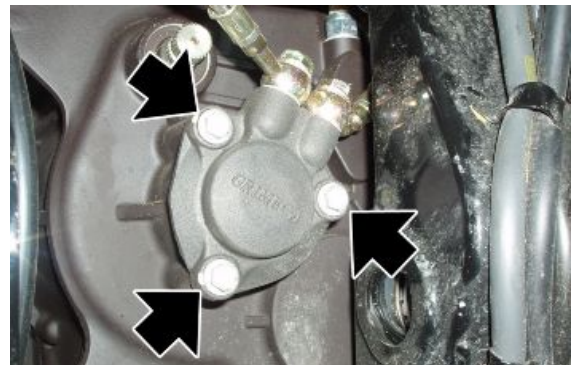

- Undo and remove the brake control fixing screw.
- Turn the footrest to operate on the engine pin.



- Undo and remove the lower rear pin.
- Slide off the pin from the right side.



- Undo and remove the two rear brake control screws.



- Working from both sides, undo and remove the engine front fixing screw.



- Unscrew and remove the upper rear pin nut.
- Remove the pin from the opposite side.



- Lift the chassis.

Installing the engine to the vehicle

For refitting, follow the operations in reverse order observing the tightening torque.


INDEX OF TOPICS

ENGINE

ENG

Gearbox

Diagram

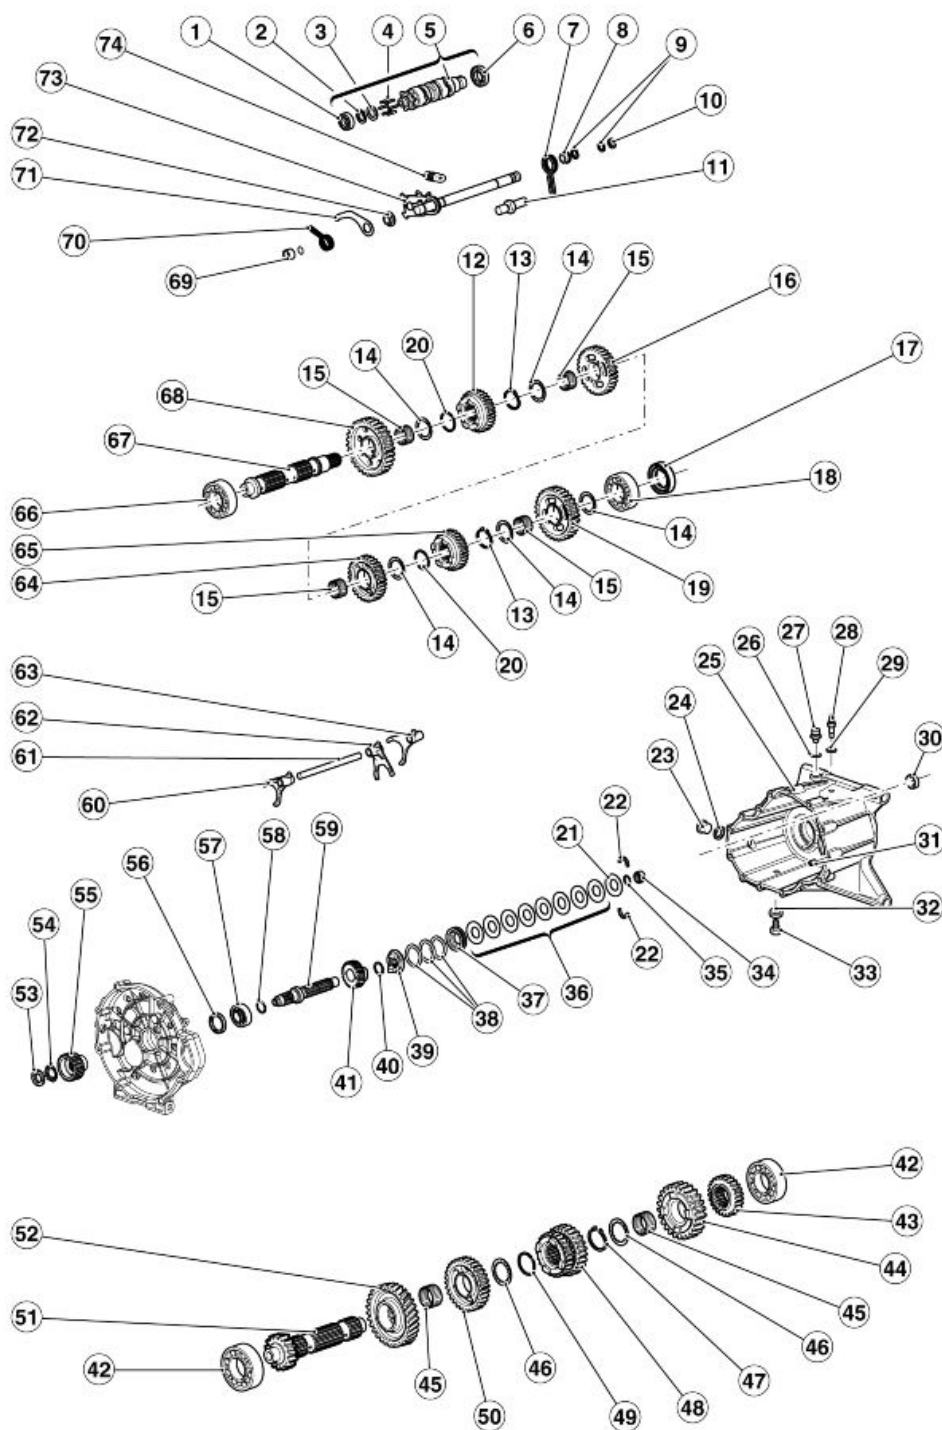**KEY:**

- 1. Ball bearing
- 2. Circlip

3. Shim washer
4. Pin
5. Desmodromic compl.
6. Ball bearing
7. Spring
8. Spacer
9. Circlip
10. Fifth wheel
11. Linking pin
12. Gear
13. Circlip
14. Shoulder washer
15. Ball bearing cage
16. Gear
17. Sealing ring
18. Ball bearing
19. Gear
20. Circlip
21. Washer
22. Half ring
23. Oil cap
24. Washer
25. Gearbox
26. Aluminium gasket
27. Bleed cap
28. Neutral sensor
29. Gasket
30. Sealing ring
31. Bushing
32. Gasket
33. Oil drainage cap
34. Roller bearing
35. Circlip
36. Belleville spring
37. Pressure plate
38. Shaped washers
39. Sleeve
40. Circlip

- 41. Transmission gear
- 42. Ball bearing
- 43. Gear
- 44. Gear
- 45. Ball bearing cage
- 46. Shoulder washer
- 47. Circlip
- 48. Gear
- 49. Circlip
- 50. Gear
- 51. Main shaft
- 52. Transmission gear
- 53. Ring nut
- 54. Washer
- 55. Clutch internal body
- 56. Sealing ring
- 57. Ball bearing
- 58. O-Ring
- 59. Clutch shaft
- 60. Fork
- 61. Fork shaft
- 62. Fork
- 63. Fork
- 64. Gear
- 65. Gear
- 66. Ball bearing
- 67. Secondary shaft
- 68. Gear
- 69. Spacer
- 70. Spring
- 71. Index lever
- 72. Bushing
- 73. Pre-selector compl.
- 74. Spring

Gearbox

Removing the gearbox


- Remove the starter motor.
- Make sure the transmission is in idle.
- Unscrew and remove the breather pipe.



- Place a container of suitable capacity under it, unscrew and remove the cap and then bleed all gearbox oil.



- Unscrew and remove the three screws.

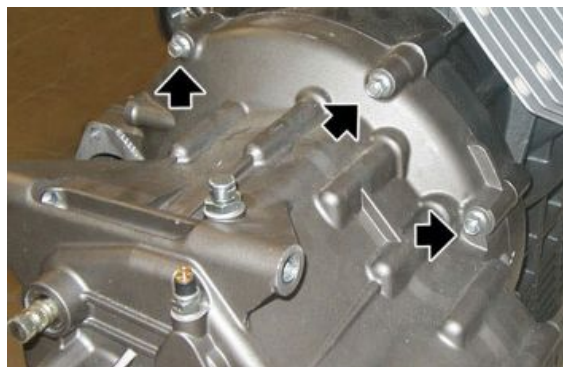

- Unscrew and remove the two screws.



- Unscrew and remove the screw.



- Remove the gearbox.



See also

[Removing the
starter motor
Replacement](#)

Gearbox shafts

Disassembling the gearbox

- Remove the gearbox.



- Place the gearbox on the specific gearbox support tool and on a vice.

Specific tooling

05.90.25.30 Gearbox support


- From the outside, slide off the thrust cylinder and collect the O-Ring and the washer.



- Remove the thrust bearing and the washer.



- Slide off the two bushings (1) and remove the rod (2), collect the bushing (3).

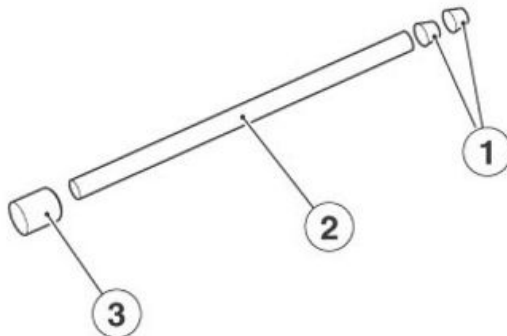

- Fold the washer fins.



- Using the adequate ring nut spanner and the clutch body locking tool, unscrew and remove the ring nut, and collect the clutch internal body.

Specific tooling

GU14912603 Hook spanner for fixing ring nut of the clutch shaft internal body

30.91.28.10 Clutch body locking

- Open the gearbox using the specific tool.

Specific tooling**05.91.25.30 Gearbox opening**


- Release the spring.



- Pressing the selector, slide off the whole transmission lever.



- Unscrew and remove the threaded reference pin.

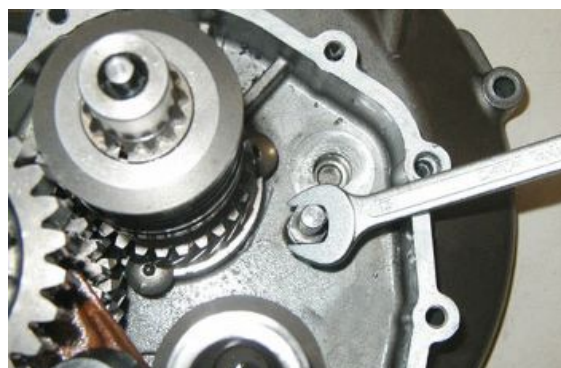

- Use rubber bands to tie down the transmission shaft unit and extract it.



- Remove the bearings from the gearbox if necessary.



- Once the transmission shaft unit is in on a bench, remove the rubber bands, being careful with the group.
- Detach the shafts and label the forks before removal.



- Remove the forks and collect the shaft.





-
- Replace bearings if necessary and remove the clutch shaft.



Removing the primary shaft

- Remove the main shaft.
- Operate on the main shaft from the second gear side.



- Remove the gear of the second gear and collect the ball bearing cage.



- Remove the gear of the sixth gear and collect the shoulder washer.



- Remove the circlip.



- Remove the gear of the third and fourth gears.



- Remove the circlip and collect the shoulder washer.



- Remove the gear of the fifth gear and collect the ball bearing cage.



- Heat the shaft with a specific heater and remove the helical transmission gear.



Removing the secondary shaft

- Remove the transmission shaft.
- Operate on the shaft from the grooved side.



- Remove the shoulder washer.



- Remove the gear of the second gear and collect the ball bearing cage and the shoulder washer.



- Remove the circlip.



- Remove the gear of the sixth gear.



- Remove the circlip and collect the shoulder washer.



- Remove the gear of the fourth gear and collect the ball bearing cage.



- Remove the gear of the third gear and collect the ball bearing cage and the shoulder washer.



- Remove the circlip.



- Remove the gear of the fifth gear.



- Remove the circlip, the shoulder washer and remove the gear of the first gear, collect the ball bearing cage.
- Remove the bearing if necessary.




See also

[Disassembling the gearbox](#)

Disassembling the clutch shaft

- Remove the gearbox from the engine block.
- Remove the gearbox.
- Insert the clutch shaft in the special tool for removal.

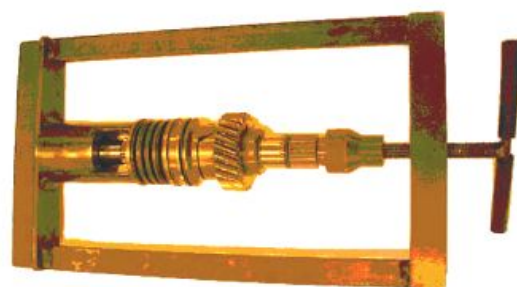


Specific tooling

000019663300 Tool for clutch shaft removal

- Compress the Belleville springs (10) until releasing the two half-rings (12).

- Remove the Belleville springs (10).
- Remove the washer (11).
- Remove the shaped washers (8).
- Remove the sleeve (7).
- Remove the circlip (6).
- Remove the transmission gear (5).
- Collect the clutch shaft (4).

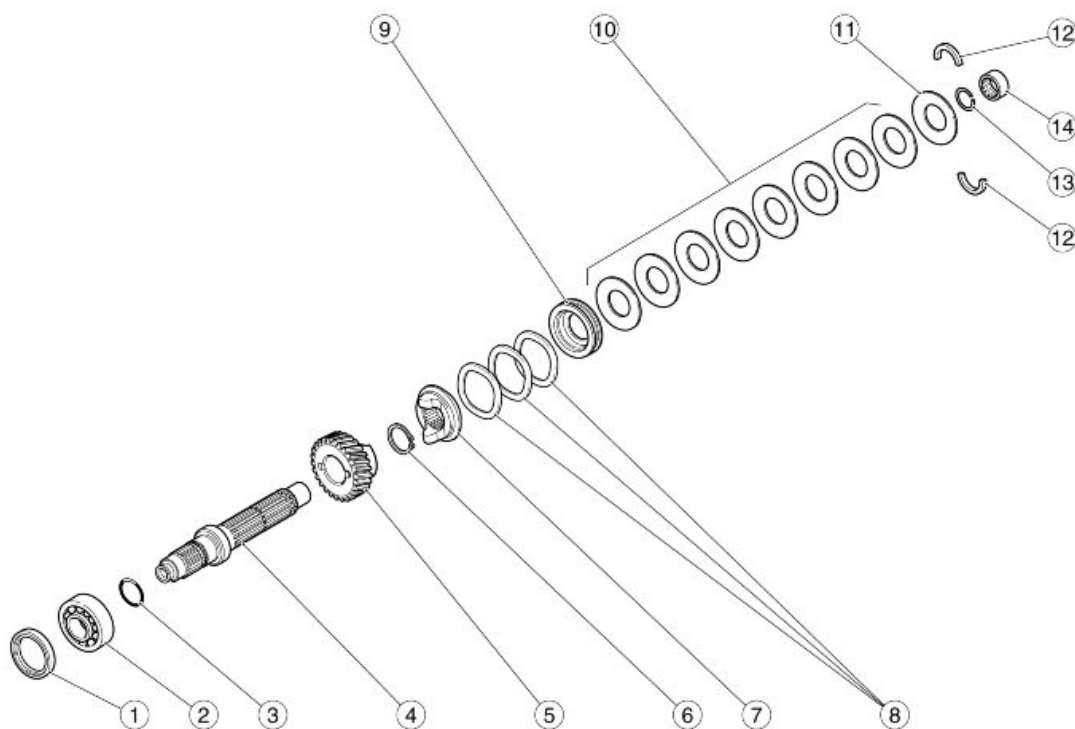


Checking the primary shaft

Measure coaxiality of the main shaft with a dial gauge and a centring device and replace it if not complying with specifications.

Characteristic

Shaft coaxiality limit

0.08 mm (0.0031 in)

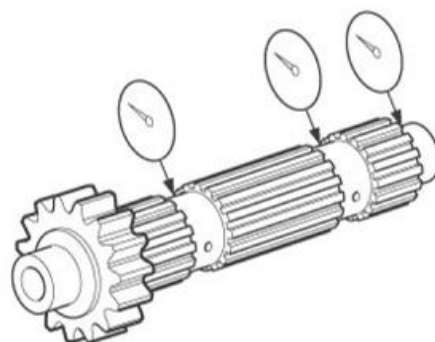

Check transmission gears for signs of pitting and wear and replace damaged gears if necessary.
Check the gear fitting teeth for cracks, damage and wear and replace those damaged if necessary.
Check the transmission gears movement and, if it is not regular, replace the damaged part.


Checking the secondary shaft

Measure the coaxiality of the transmission shaft with a dial gauge and a centring device and replace it if not complying with specifications.

Characteristic

Shaft coaxiality limit

0.08 mm (0.0031 in)

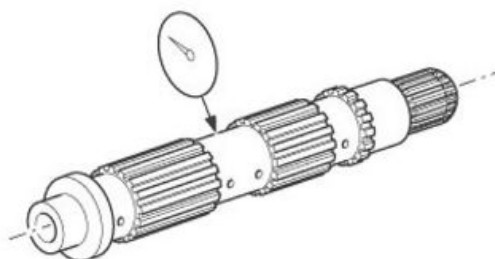

Check transmission gears for signs of pitting and wear and replace damaged gears if necessary.
Check the gear fitting teeth for cracks, damage and wear and replace those damaged if necessary.
Check the transmission gears movement and, if it is not regular, replace the damaged part.

Checking the desmodromic drum

Check gear drum for damage, scratches and wear and replace the desmodromic control rod if necessary.

Check the desmodromic segment «3» for damage and wear and replace it if necessary.

Check the desmodromic bearing «4» for damage and cracks and replace it if necessary.



Checking the forks


NOTE

THE FOLLOWING PROCEDURE IS VALID FOR ALL GEARBOX FORKS.

- Check the transmission fork cam roller «1» and the transmission fork tooth «2» for damage, deformation and wear.
- Replace the transmission fork if necessary.



- Check the transmission fork movement and if it is not regular, replace the transmission forks.

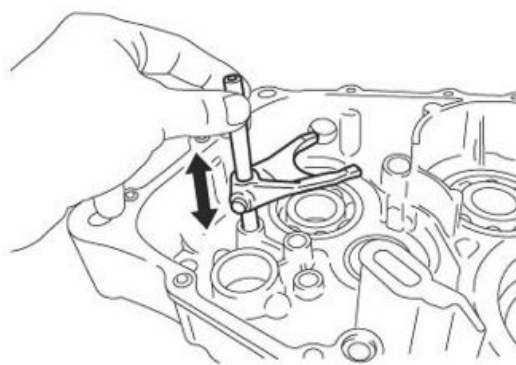

See also

[Disassembling the gearbox](#)

Fitting the primary shaft

NOTE

TO REFIT, FOLLOW THE SAME INSTRUCTIONS AS FOR REMOVAL BUT IN REVERSE ORDER. REMEMBER TO REPLACE ALL SEALING RINGS, CIRCLIPS AND SAFETY RINGS PREVIOUSLY REMOVED.

See also

[Removing the primary shaft](#)

Fitting the secondary shaft

NOTE

TO REFIT, FOLLOW THE SAME INSTRUCTIONS AS FOR REMOVAL BUT IN REVERSE ORDER. REMEMBER TO REPLACE ALL SEALING RINGS, CIRCLIPS AND SAFETY RINGS PREVIOUSLY REMOVED.

See also

[Removing the secondary shaft](#)

Assembling the clutch shaft

NOTE

TO REFIT, FOLLOW THE SAME INSTRUCTIONS AS FOR REMOVAL BUT IN REVERSE ORDER. REMEMBER TO REPLACE ALL SEALING RINGS, CIRCLIPS AND SAFETY RINGS PREVIOUSLY REMOVED.

See also

[Disassembling the clutch shaft](#)

Assembling the gearbox

NOTE

TO REFIT, FOLLOW THE SAME INSTRUCTIONS AS FOR REMOVAL BUT IN REVERSE ORDER. REMEMBER TO REPLACE ALL SEALING RINGS, CIRCLIPS AND SAFETY RINGS PREVIOUSLY REMOVED.

See also[Disassembling the gearbox](#)

Flywheel

Removing the flywheel

- Remove the clutch.
- Position the locking tool on the flywheel and loosen the six flywheel fixing screws operating diagonally and in stages.
- Remove the locking tool.

**Specific tooling**

12.91.18.01 Tool to lock the flywheel and the starting ring gear

- Remove the flywheel.

**See also**[Disassembling the clutch](#)

Checking

- Check that the flywheel surface that contacts the plate is not scratched.
 - Check that the contact faces on the crankshaft are not distorted; if they are, replace the flywheel.
-

Installing the flywheel


- Position the flywheel.

NOTE

RESPECT THE FLYWHEEL POSITIONING REFERENCES.

CAUTION

THE SCREWS MUST BE REPLACED WITH NEW ONES AT THE FOLLOWING REFITTING AS THEY ARE SUBJECT TO HIGH LOADS AND STRESS.

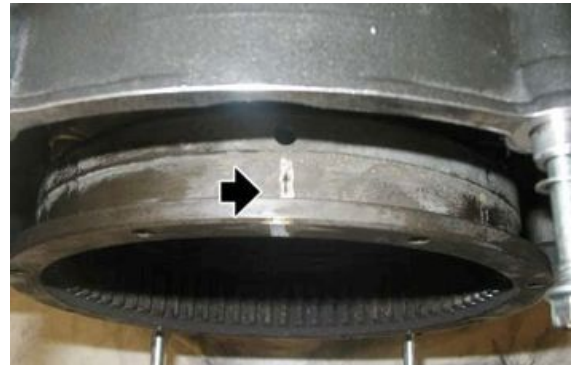

- Position the locking tool on the flywheel and tighten the six flywheel sealing screws operating diagonally and in stages.
- Fit the clutch.

**Specific tooling**

12.91.18.01 Tool to lock the flywheel and the starting ring gear

See also


[Assembling the clutch](#)

Generator


Removing the generator

The alternator is made of two elements:

The stator that is fixed on the timing system cover and the rotor that is fitted on the crankshaft.

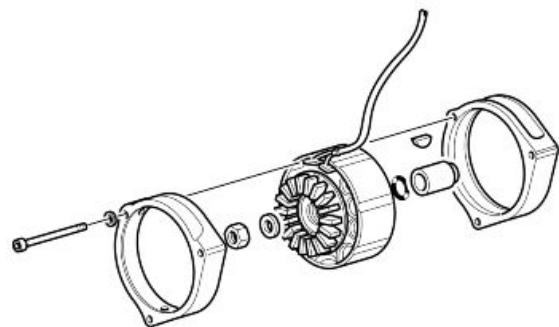

- Unscrew the four screws and remove the alternator cover.

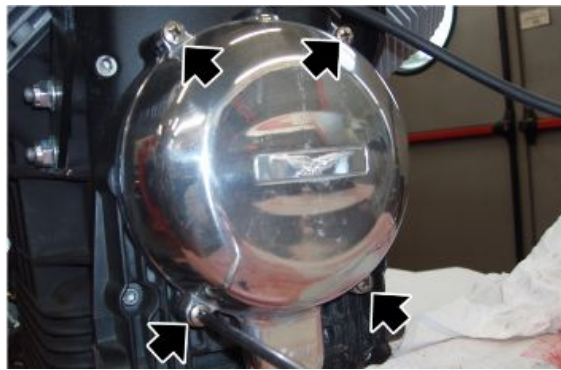

- Remove the gearbox.
- Lock the rotation of the engine flywheel using the appropriate locking tool.

Specific tooling

12.91.18.01 Tool to lock the flywheel and the starting ring gear



- Remove the rotor centre sealing nut.



- Remove the stator unscrewing the three fixing screws.



- Remove the washer and take out the rotor.



**IN ORDER TO PREVENT DEMAGNETISATION INTRO-
DUCE THE ROTOR AGAIN ON THE STATOR PREVIOUSLY
REMOVED.**



- Remove the cotter.



Starter motor

Removing the starter motor

- Undo and remove the two screws and collect the washers.



- Slide off the starter motor.



Clutch side

Disassembling the clutch

- Remove the gearbox from the engine.
- Remove the pressure plate disc cover.



- Use the locking tool and the clutch spring compression tool on the flywheel.

Specific tooling

30.90.65.10 Tool for clutch fitting

12.91.18.01 Tool to lock the flywheel and the starting ring gear



- Undo and remove the eight sealing screws from the crown gear fitted on the engine flywheel, collecting the washers.



- Remove the start-up sprocket gear.



Extract from the inside of the engine flywheel:

- the clutch plate.



- The intermediate plate.



- The second clutch plate.



- Remove the tool used to compress the clutch springs.

Specific tooling

30.90.65.10 Tool for clutch fitting

- The pressure plate disc with springs.



Checking the clutch plates

Driven plates

Check that the supporting surfaces with the driven plates are perfectly smooth and even and that the external toothing that works inside the flywheel is not damaged, otherwise, replace the plate.

Crown gear for start-up

Check that the supporting surface with the driven plate is perfectly smooth and even.

Also check that the toothing where the starter motor pinion works is not chipped or scratched; otherwise, replace it.

Checking the clutch housing

Check that the teeth do not show any marks on the plate faying areas and that the toothing inside the clutch bell is in good conditions.

Checking the pusher plate


Pressure plate

Check that the plate does not show signs of wear on the opening where the control cap works, and that the supporting surfaces with the driven plate are perfectly even.

Checking the springs

Check that the springs are still flexible and are not deformed:

- Springs compressed at 22 mm (0.8661 in) must bear a load of 11.25 ÷ 11.70 kg (24.80 ÷ 25.79 pounds);
- Springs compressed at 20 mm (0.7874 in) must bear a load of 14.75 ÷ 15.30 kg (32.52 ÷ 33.73 pounds).

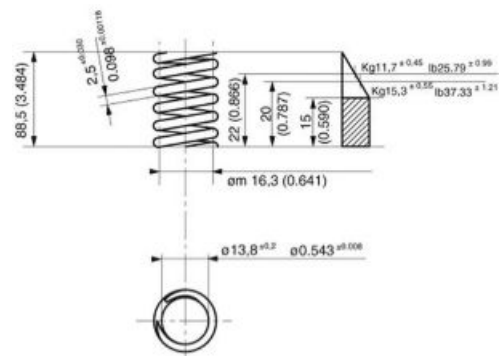

Assembling the clutch

Insert the components in the clutch bell in the following order:

- the pressure plate with springs.



- Make sure that the reference marked on the pressure plate tooth is aligned with the reference on the flywheel.




- Use the locking tool and the clutch spring compression tool on the flywheel.

Specific tooling

30.90.65.10 Tool for clutch fitting

12.91.18.01 Tool to lock the flywheel and the starting ring gear

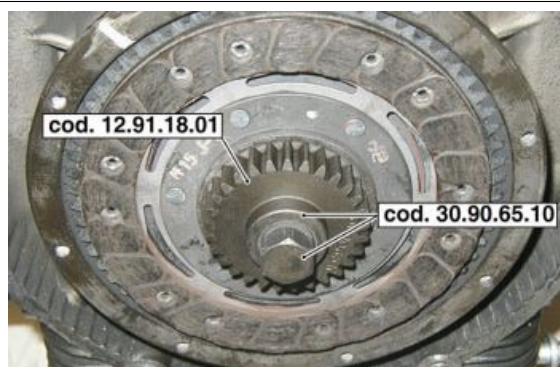

- Remove the locking tool.
- Fit the clutch disc.

Specific tooling

12.91.18.01 Tool to lock the flywheel and the starting ring gear



- The intermediate disc.



- The clutch disc.



- Place the crown gear aligning its reference with that on the flywheel.



- Tighten the eight screws sealing the crown gear to the flywheel to the prescribed torque
- Remove the special tool for clutch spring compression.

Specific tooling

30.90.65.10 Tool for clutch fitting



- Insert the pressure plate disc cover.
- Install the gearbox unit.




Head and timing

Removing the head cover

NOTE

THE FOLLOWING OPERATIONS REFER TO REMOVING ONLY ONE COVER BUT APPLY TO BOTH COVERS.

- Unscrew and remove the eight screws.

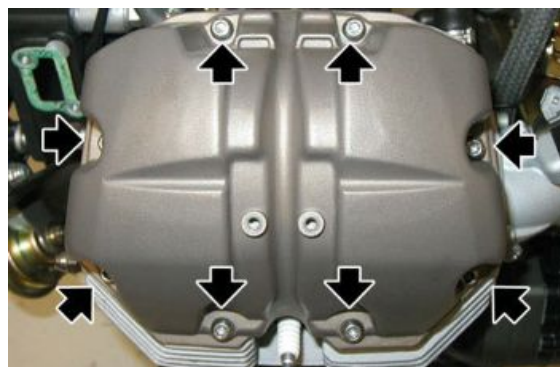


- Remove the head cover and collect the gasket.



Removing the cylinder head

- Remove the rocker rods.
- Unscrew and remove the outer spark plug.

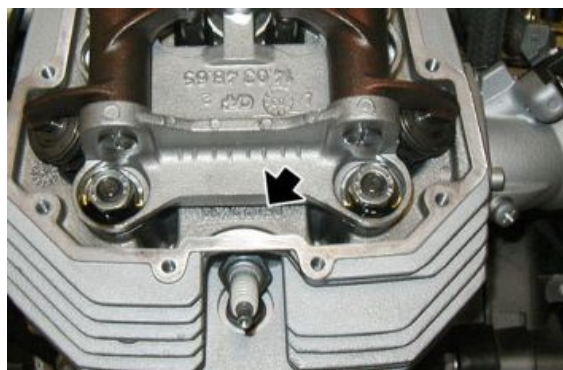

- Loosen the nut and disconnect the pipes that deliver oil to the head.



- Unscrew and remove the threaded cap.



- Unscrew and remove the joint of the pipe that delivers oil to the head and collect the washer.



- Using the suitable special tool, unscrew and remove the inner spark plug.

Specific tooling


05.90.19.30 Inner spark plug removal



- Undo and remove the two screws and collect the two washers.



- Slightly detach the cylinder head and remove the four O-rings.

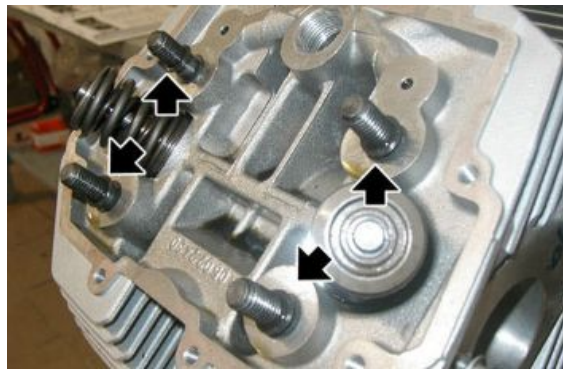

- Remove the head and collect the gasket.



Cylinder head

Removing the rocker arms

NOTE

THE FOLLOWING OPERATIONS REFER TO REMOVING ONLY ONE HEAD BUT APPLY TO BOTH HEADS.

- Remove the head cover.
- Rotate the crankshaft to TDC position in combustion phase (closed valves) for the left cylinder.
- Unscrew and remove the two screws.



- Remove the rocking lever shafts.



- Remove the rocking levers and collect the three washers.



See also

[Removing the head cover](#)

Removing the valves


- Remove the head.
- Place the special tool on the upper cap and at the centre of the head of the valve to be removed.

Specific tooling

10.90.72.00 Tool for valve removal and refitting



- Tighten the tool screw until fitted, and then hit the tool head (where the upper retainer works) with a mallet so that the two cotters (1) get detached from the upper retainer (2).
- Once the two cotters (1) are detached, screw these cotters until they can be

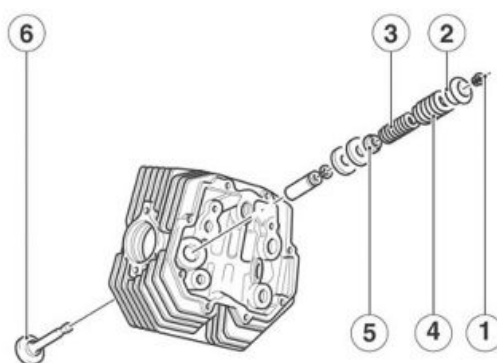

slid off the valve seats; unscrew the tool and remove it from the head.

- Remove the upper retainer (2).
- Remove the internal spring (3).
- Remove the external spring (4).
- Remove the lower retainer (5) and the shimming washers if necessary.
- Remove the valve (6) from inside the head.

Checking the valve guides

Use a punch to extract the valve guides from the heads.


The valve guides should be replaced only if the clearance between them and the stem cannot be eliminated by simply replacing the valves.

To refit the valve guides on the head, follow this procedure:

- Heat the head in an oven at approximately 60°C (140°F).
- Lubricate the valve guide.
- Fit the circlips.
- Press a punch with the valve guides.
- Use a reamer to bore the holes the valve stems slide through so that the inside diameter is at the prescribed value. The interference between the seat on the head and the valve guide must be 0.046 - 0.075 mm (0.0018 - 0.0030 in)

VALVE AND GUIDES COUPLING DATA CHART (INLET)

Specification	Desc./Quantity
Valve guide inside diameter mm (in)	8.000 ÷ 8.022 (0.3150 ÷ 0.3158)
Valve stem diameter	7.972 ÷ 7.987 (0.3139 ÷ 0.3145)
Fitting clearance mm (in)	0.013 ÷ 0.050 (0.0005 ÷ 0.0020)

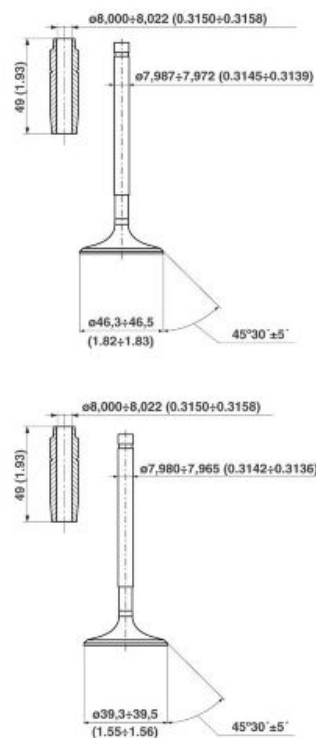

VALVE AND GUIDES COUPLING DATA CHART (OUTLET)


Specification	Desc./Quantity
Valve guide inside diameter mm (in)	8.005 ÷ 8.022 (0.3152 ÷ 0.3158)
Valve stem diameter mm (in)	7.965 ÷ 7.980 (0.3136 ÷ 0.3142)
Fitting clearance mm (in)	0.025 ÷ 0.057 (0.0010 ÷ 0.0022)

Checking the cylinder head

Check that:

- The planes of contact with the cover and with the cylinder are not scored or damaged so as to compromise a perfect seal.
- Check that the clearance between the valve guide holes and valve stanchions is within the prescribed limits.
- Check the status of the valve seats.

The valve seats should be reamed with a mill. The seat inclination angle is $45^\circ \pm 5'$. After milling, it is necessary to grind them to ensure a good coupling and a perfect sealing between the ring nuts and the valve heads.

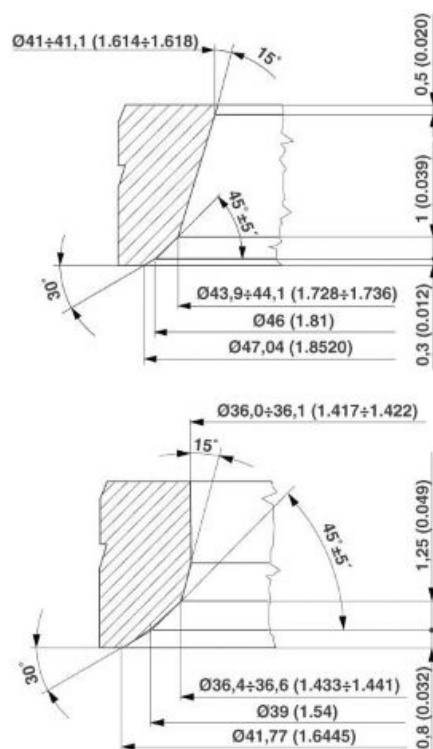


Installing the valves

NOTE

THE FOLLOWING OPERATIONS REFER TO REMOVING ONLY ONE HEAD BUT APPLY TO BOTH HEADS.

- Place the valve (6) inside the head.
- Place the lower retainer (5) and the shimming washers.
- Place the external spring (4).
- Place the internal spring (3).
- Insert the upper retainer (2).
- Place the two cotters (1) on the seats on the valves.
- Compressing the spring with the special valve tool, install the valve cotters.

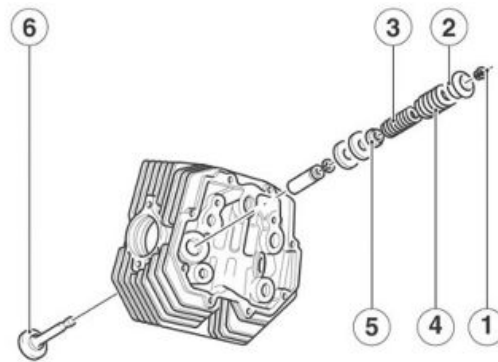

Specific tooling

10.90.72.00 Tool for valve removal and refitting

NOTE

UPON REFITTING, PLACE THE O-RING CORRECTLY ON THE VALVE.



- Remove the special tool




Installing the rocker arms

CAUTION

UPON REFITTING, ALWAYS REPLACE THE O-RINGS

**CAUTION**

UPON REFITTING, DO NOT INVERT THE POSITION OF THE ROCKING LEVER SUPPORTS SO AS NOT TO COMPROMISE LUBRICATION.

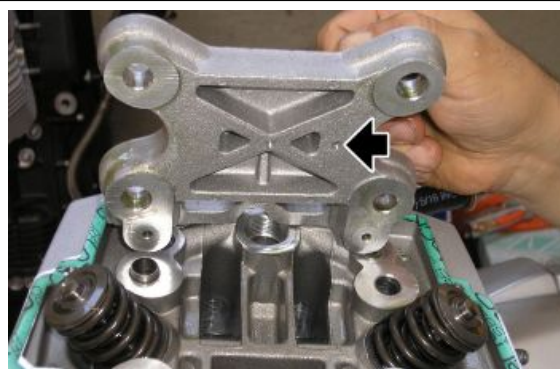


- Install the rocking lever rods if they have been previously removed.
- Install the rocking lever support and replace the four O-rings.



- Place the four washers and screw the four nuts.



- Place the six washers and install the rocking levers.

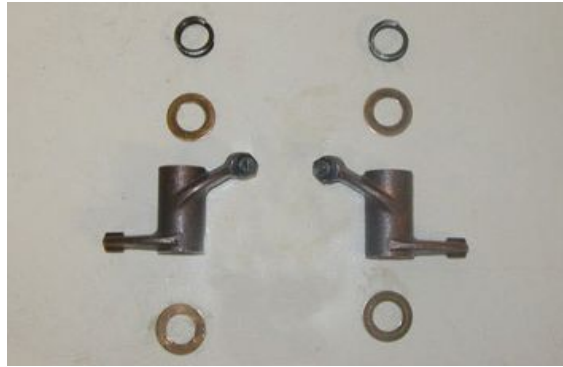

- Insert the rocking lever shafts.



- Rotate the crankshaft to TDC position in combustion phase (closed valves) for the left cylinder.
- Tighten the two screws.

**See also**

[Installing the rods](#)

Timing

Chain removal

- Remove the engine assembly.
- Remove the alternator.
- Unscrew the fourteen screws (1 - 2 - 3).



- Remove the timing system cover.
- Collect the gasket.



- Clearly indicate the distribution timing marks that should be restored at the next refitting (left cylinder TDC).



- Using the adequate tool, lock the ignition crown.

Specific tooling

12.91.18.01 Tool to lock the flywheel and the starting ring gear



- Unscrew the central sealing nut of the camshaft gear and collect the washer.



- Slide off the spacer from the crankshaft.



- Unscrew and remove the central sealing nut of the timing system control gear on the crankshaft and collect the washer.




- Unscrew and remove the oil pump gear nut and collect the washer.



- Remove the chain tensioner and collect the spring.
- Slide off the three gears together with the chain.

CAUTION

BE CAREFUL WITH THE OIL PUMP PULLING COTTER.

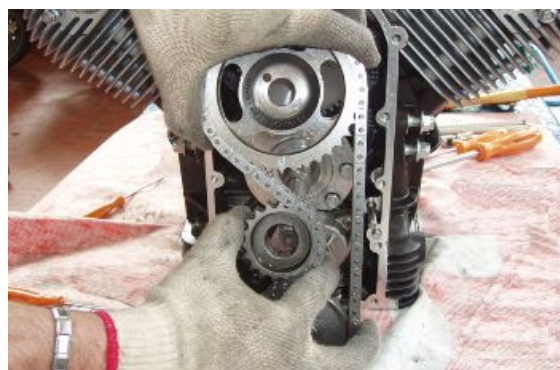**See also**

[Removing the engine from the vehicle](#)

Removing the rods

- Remove the rocking levers.
- Unscrew and remove the four nuts and collect their washers.



- Remove the rocking lever support.



- Remove the two rocking lever rods

**See also**

[Removing the rocker arms](#)

Removing the tappets

- Remove the engine assembly.
- Remove both heads.
- Slide off and remove the tappets from their seat on both sides.

**See also**

[Removing the engine from the vehicle](#)

Removing the phonic wheel

- Remove the timing chain.
- Slide off the tone wheel and collect the plug.

**See also**

Chain removal

Removing the camshaft

- Remove the timing chain.
 - Remove the tone wheel.
 - Remove the tappets.
 - Remove the rods.
-
- Unscrew and remove the three screws and collect the washers.



-
- Remove the flange.



-
- Remove the camshaft.



See also

Chain removal

[Removing the phonic wheel](#)

[Removing the tappets](#)

[Removing the rods](#)

Installing the camshaft


NOTE

FOR TIMING SYSTEM REFITTING, IT IS NECESSARY TO HEAT THE ENGINE WITH A SUITABLE HEATER IN ORDER TO INSERT THE CAMSHAFT CORRECTLY AND WITHOUT DAMAGING IT.

Follow the camshaft removal instructions but in reverse order.

Installing the rods

- Install the head if it has been previously removed.
- Replace the four O-rings.

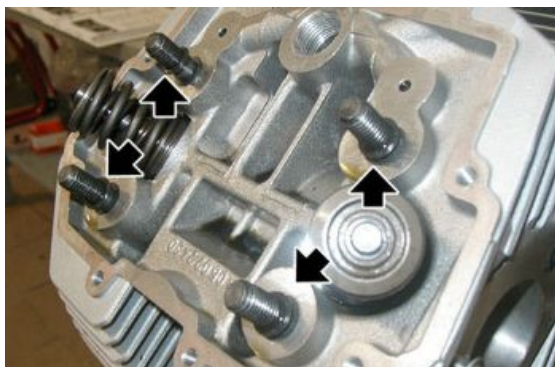

- Install the two rocking lever rods.




Installing the chain

For the installation of the three gears and of the timing chain carry out the operations indicated in section "Timing".

Cam timing

- On the crankcase, fit the crankshaft and the camshaft.
- Fit the cylinders and the heads.
- Fit the rods.
- Do not fit the rocking levers before carrying out engine timing so as not to damage the valves during the rotation of the camshaft.

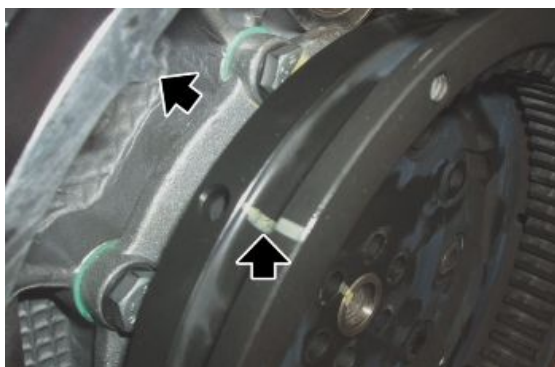

- Turn the crankshaft until the left cylinder piston reaches the top dead centre (TDC).
- Fit the flywheel on the crankshaft aligning the stamp arrow on the flywheel with the fixed reference on the crankcase.

- Position the locking tool on the flywheel and tighten the six flywheel sealing screws operating diagonally and in stages.
- Fit the clutch.



Specific tooling


12.91.18.01 Tool to lock the flywheel and the starting ring gear

- Fit the plug on the camshaft.
- Introduce the tone wheel with the smooth side facing outward.



- Place the shim washer adequately so that the timing chain do not wear out the crankcase.
- Fit the three timing system gears and the chain aligning the references on the camshaft and crankshaft gears.



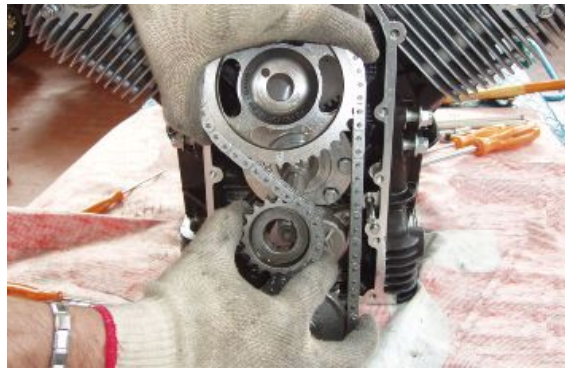

- Introduce the belleville spring and the nut to fasten the camshaft gear.



- Introduce the washer and the nut to fasten the crankshaft gear.



- Turn the oil pump shaft and introduce the gear pulling woodruff key.



- Introduce the chain tensioner.



- Remove the flywheel locking tool.
- Check the crankshaft rotation.
- Fit the rocking levers.


Specific tooling

12.91.18.01 Tool to lock the flywheel and the starting ring gear

Timing

To check distribution timing, follow these instructions:

- Obtain a clearance between rockers and valves of 1.5 mm (0.059 in);
- Place the hub for graduated dial and the relative graduated dial on the crankshaft slot, inserting the spacer and fixing it to the shaft with the nut.

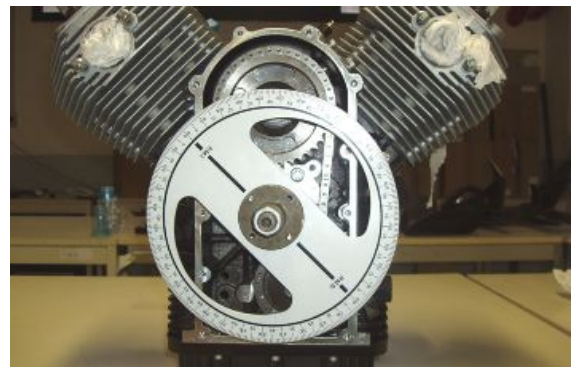


Specific tooling


981001 Graduated dial hub

19.92.96.00 Graduated dial to control ignition timing


- With a screw, fasten the specific arrow to the threaded hole to the left of the crankcase.

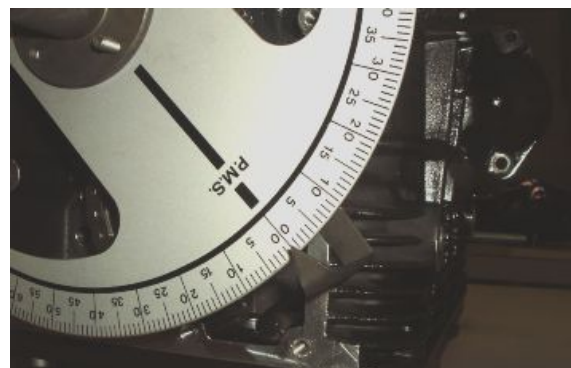

- Fit the dial gauge support and then the gauge itself on the left outer spark plug hole.

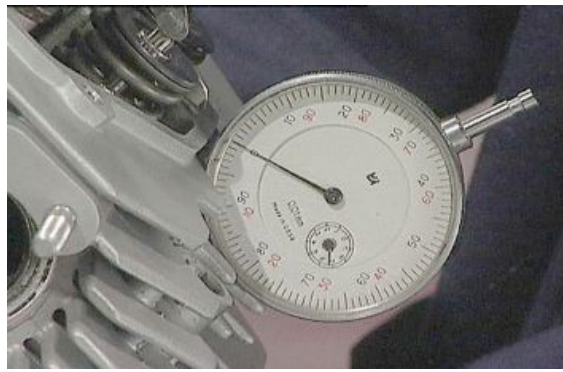

- Rotate the crankshaft until the left cylinder piston is actually at the top dead centre (with valves closed).
- Reset the dial gauge and make sure the references (on the timing system gears and the engine pinion) are perfectly aligned, so that looking through the checking hole on the gearbox, the reference line marked 'S' is perfectly aligned with the reference marked at the centre of the hole.
- Align the arrow point with the TDC zero on the graduated dial.

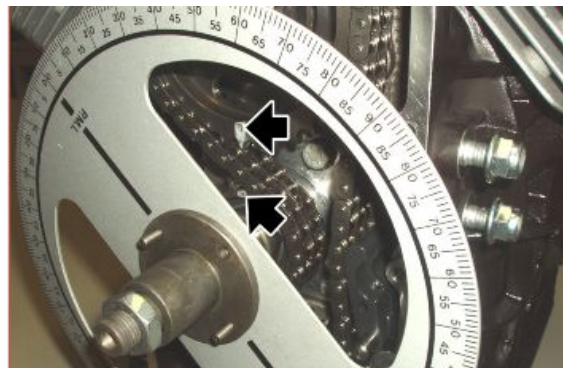


- Observing the timing system diagram, check timing considering that:

A - intake start opens 22° before TDC

B - exhaust end closes 24° after TDC

C - exhaust start opens 52° before BDC

D - intake end closes 54° after BDC

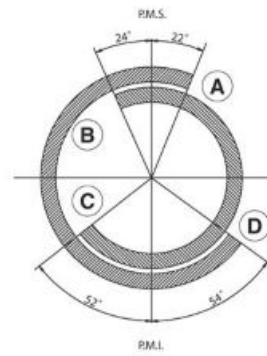

- Screw the dial gauge support and then the gauge itself on the right cylinder outer spark plug hole.
- With a screw, fix the arrow to the threaded hole to the right of the crankcase.
- Turn the disc clockwise until the reference marked with letter 'D' is aligned with the reference at the centre of the checking hole on the gearbox (valves closed).
- Repeat the operations described above for the left cylinder.



- After the check and if everything is correct, operate as follows to restore the operation clearance between rockers and valves (intake 0.10 mm (0.0039 in), exhaust 0.15 mm (0.0059 in)).
- Remove the graduated dial hub, the graduated dial, the arrow, the dial gauge support and the gauge itself.
- Refit the spark plugs and finish the refit.

Specific tooling

981001 Graduated dial hub

19.92.96.00 Graduated dial to control ignition timing

Measuring air gap

- Undo and remove the two screws and remove the sensor.



- Insert a suitable plain washer on the sensor and note its thickness.



- Place the sensor on the timing system cover and cause it to make contact with the tone wheel.



- Measure the clearance between the fixing plate and the cover with a feeler gauge. Subtract the plain washer value from this measurement to obtain the clearance between the sensor and the tone wheel.



- Remove the washer and fit the sensor after applying adequate sealing paste on the fixing plate, then tighten the screws to the prescribed torque.

Cylinder-piston assembly

Removing the cylinder

NOTE

THE OPERATIONS DESCRIBED BELOW REFER TO ONE HEAD REMOVING ONLY BUT APPLY TO BOTH HEADS.

- Remove the head.
- Slide off the gasket.



- Slide off the cylinder from the stud bolts, paying attention not to damage the piston.



See also

[Removing the cylinder head](#)

Disassembling the piston

NOTE

THE OPERATIONS DESCRIBED BELOW REFER TO ONE HEAD REMOVING ONLY BUT APPLY TO BOTH HEADS.

- Remove the cylinder.
- Cover the crankcase opening with a clean cloth.
- Release the snap ring.



- Remove the pin.



- Mark the piston crown on the exhaust side so as to remember the refitting position.
- Remove the piston.



See also

[Removing the cylinder](#)

Fitting the piston

NOTE

THE OPERATIONS DESCRIBED BELOW REFER TO REMOVING ONLY ONE HEAD BUT APPLY TO BOTH HEADS.

- Fit the piston.

NOTE

CHECK THE ORIENTATION OF THE PISTON ACCORDING TO THE REFERENCES AT THE TOP. DO NOT ASSEMBLE PISTONS AND CYLINDERS OF DIFFERENT SELECTOR TYPES.



- Insert the pin.



- Insert the pin clip.



Installing the cylinder

- Fit the piston.
- Remove the cloth used to prevent foreign bodies coming into the crankcase.
- Turn the rings so that the junction ends are 120 degrees from each other.
- Lubricate piston and cylinder.
- Using a specific tool for piston ring clamps, place the cylinder.

CAUTION

DURING THIS OPERATION, PAY ATTENTION NOT TO DAMAGE THE PISTON.

Specific tooling

05.92.80.30 Piston ring clamp

- Remove the piston ring clamp tool and finish positioning the cylinder.


Specific tooling

05.92.80.30 Piston ring clamp



CAUTION

UPON REFITTING DO NOT INVERT THE POSITION OF THE CYLINDER GASKET SO AS NOT TO COMPROMISE LUBRICATION.

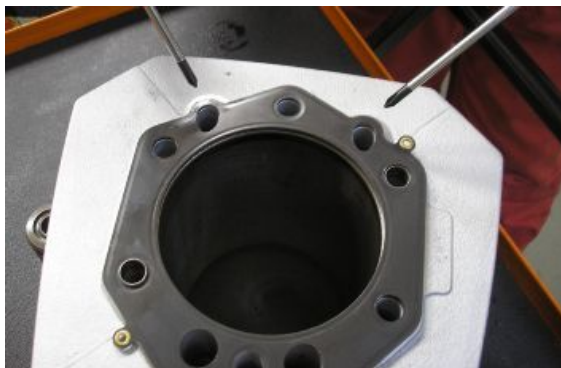

- Place the gasket on the cylinder base.



- Fit the head.

See also

[Fitting the piston](#)
[Installing the
cylinder head](#)

Installing the cylinder head

- Fit the valves if they have been previously removed.
- Replace the gasket between head and cylinder.
- Fit the head.



- Place the two washers and tighten the two screws.



- Using the suitable special tool, screw the inner spark plug.

Specific tooling

05.90.19.30 Inner spark plug removal



- Insert the washer and screw the joint of the pipe that delivers oil to the head .




- Screw the threaded cap.



- Connect the pipes that deliver oil to the head and screw the nut.



- Install the outer spark plug.

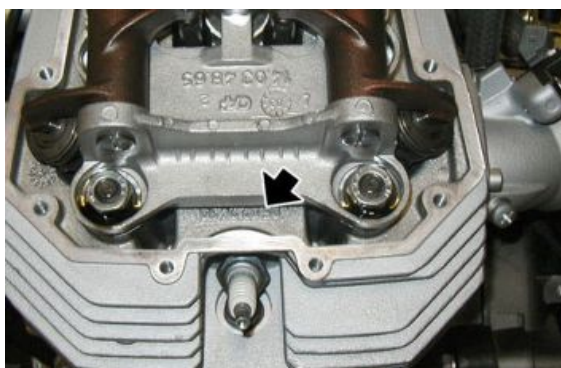

- Replace the gasket and install the head cover.


**See also**[Installing the valves](#)[Installing the head cover](#)

Installing the head cover

- Replace the gasket and install the head cover.



- Tighten the eight screws operating diagonally.

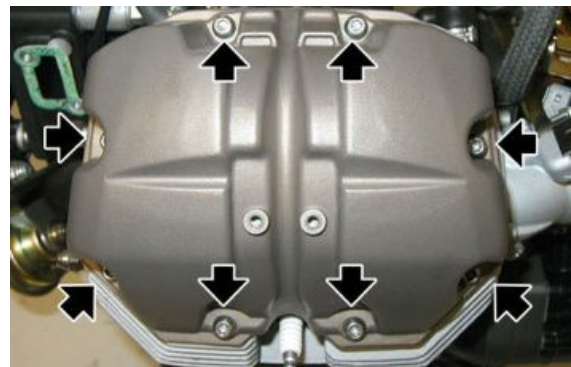

Crankcase - crankshaft


Removing the crankshaft

- Remove the connecting rods.

- Undo and remove the eight fixing screws and collect the washers.



- Hold the crankshaft during flange removal.
- Using the suitable special tool, remove the crankshaft flange.
- Remove the sealing ring from the flange, if necessary.

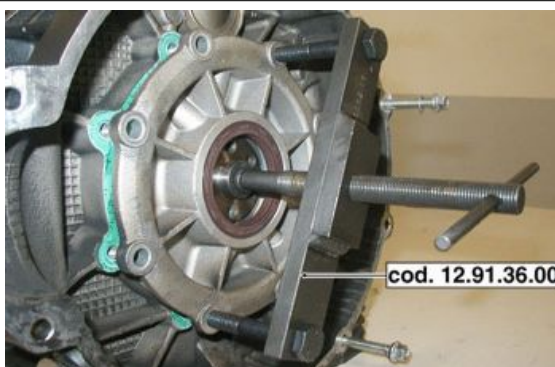

Specific tooling

12.91.36.00 Tool to remove the flywheel-side flange

- Remove the crankshaft afterwards.




See also

[Disassembling the connecting rod](#)

Disassembling the connecting rod

- Remove the heads.
- Remove the cylinders and the pistons.
- Remove the clutch.
- Remove the flywheel.
- Remove the timing system.
- Remove the oil sump.

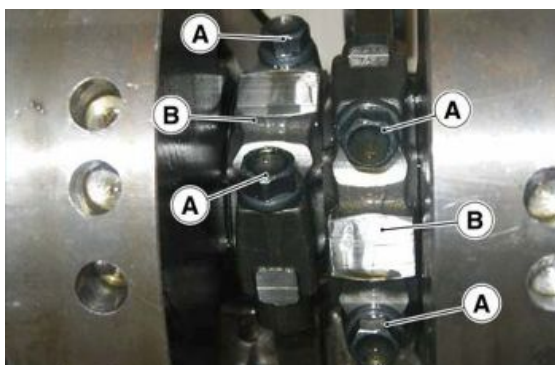

- Loosen the coupling screws 'A' from inside the crankcase and remove the connecting rods 'B'.

See also


[Removing the flywheel](#)
[Disassembling the piston](#)
[Removing the cylinder](#)
[Removing the cylinder head](#)

Inspecting the crankshaft components

Check the surfaces of the main journals; if they are scored or oval-shaped, reface them (observing the undersize charts), and replace the flanges and the main journals.

FITTING CLEARANCES

Specification	Desc./Quantity
Between the bearing and the main journal on the timing system side	0.028 ÷ 0.060 mm (0.00110 ÷ 0.00236 in);
Between the bearing and the main journal on the flywheel side	0.040 ÷ 0.075 mm (0.00157 ÷ 0.00295 in)
Between the bearing and the connecting rod pin	0.022 ÷ 0.064 mm (0.00087 ÷ 0.00252 in)

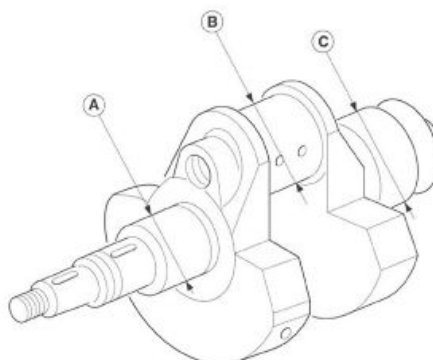

MAIN JOURNAL DIAMETER ON THE TIMING SYSTEM SIDE (A)

Specification	Desc./Quantity
Main journal regular production	37.975 mm (1.49507 inch) 37.959 mm (1.49444 inch)

CRANKPIN DIAMETER (B)

Specification	Desc./Quantity
Regular production	44.008 ÷ 44.020 mm - (1.73259 ÷ 1.73307 in)
'Blue' bushing half-shell regular production	44.008 ÷ 44.014 mm (1.73259 ÷ 1.73283 in)
'Red' bushing half-shell regular production	44.014 ÷ 44.020 mm (1.73283 ÷ 1.73307 in)

FLYWHEEL SIDE MAIN JOURNAL DIAMETER (C)

Specification	Desc./Quantity
Regular production	52.970 mm (2.08542 inch) 53.951 mm (2.12405 inch)

Checking the connecting rod

CONNECTING RODS

When examining the connecting rods, check that:

- Bushings are in good conditions, their clearance and the pins;
- Shaft parallelism;
- Connecting rod bearings.

These are thin shell bearings, anti-friction alloy that does not allow for any adaptation; replace them immediately if seizing or wear marks are found.

Upon replacing the bearings it may be necessary to ream the crankshaft pin.


Before reaming the crankpin, measure the pin diameter comparing it with the maximum wear allowed, as indicated in the figure; this defines what kind of undersizing the bearing should have and to which diameter the pin should be reamed.

Checking shaft parallelism

Check shafts for squaring before fitting them.

It is therefore necessary to check that the head holes and the rod small end are parallel and on the same plane.

The maximum parallelism and plane error of the two shafts of the head and rod small end, measured at 200 mm (7.873 inch) should be +/- 0.10 mm (0.00393 inch).

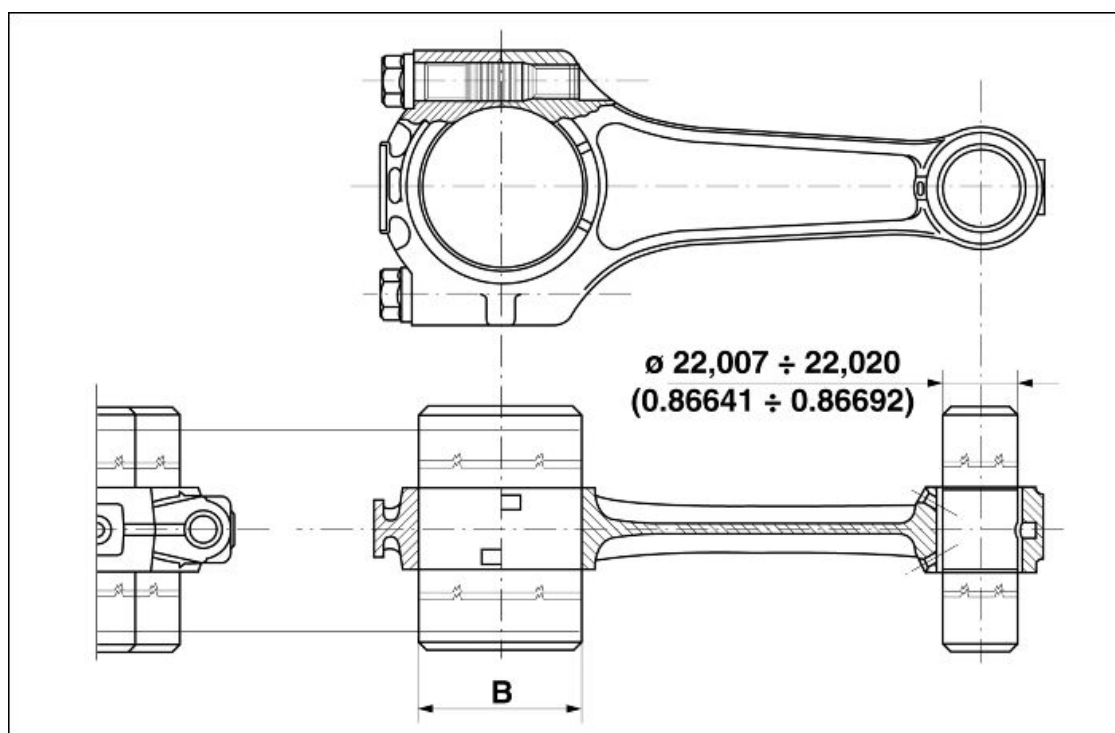

CONNECTING ROD BEARING THICKNESS

Specification	Desc./Quantity
Connecting rod bearing regular (production)	1.535 - 1.544 mm (0.06043 - 0.06079 in)
Regular 'Blue' connecting rod bearing (production)	1.539 - 1.544 mm (0.06059 - 0.06079 in)
Regular 'Red' connecting rod bearing (production)	1.535 - 1.540 mm (0.06043 - 0.06063 in)

CRANKPIN DIAMETER (B)

Specification	Desc./Quantity
Regular production	44.008 ÷ 44.020 mm - (1.73259 ÷ 1.73307 in)
'Blue' bushing half-shell regular production	44.008 ÷ 44.014 mm (1.73259 ÷ 1.73283 in)
'Red' bushing half-shell regular production	44.014 ÷ 44.020 mm (1.73283 ÷ 1.73307 in)

PIN-BUSHING COUPLING DATA


Specification	Desc./Quantity
fitted and machined bushing inside Ø mm (inch)	22.007 mm (0.86641 inch) - 22.020 mm (0.86692 inch)
pin Ø mm (inch)	21.994 mm (0.86590 inch) - 21.998 mm (0.86606 inch)
Clearance between pin and bushing mm (inch)	0.009 ÷ 0.026 mm (0.000354 ÷ 0.001024 inch)

Assembling the connecting rod

- The references on the connecting rods should be facing the flywheel.
- Do not interchange left and right connecting rods.



- Place the connecting rods and the caps (B) on the crankshaft and fasten them with new screws (A).
- Remember these recommendations:

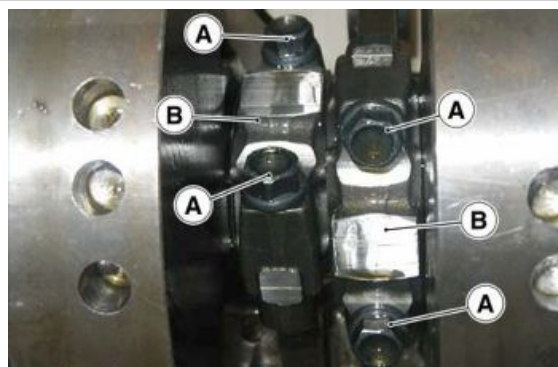

- The screws fixing the connecting rods to the crankshaft must be replaced with new ones at the following refitting as they are subject to high loads and stress;
- The fitting clearance between bearing and connecting rod pin is 0.028 mm (0.0011 inch) minimum and 0.052 mm (0.0020 inch) maximum;
- The clearance between the shim washers of the connecting rod and those of the crankshaft is comprised between 0.30 mm (0.01181 in) and 0.50 mm (0.01968 in);
- Lock the screws (A) on the caps (B) with a torque wrench at the prescribed torque.

Installing the crankshaft

- Use the sealing ring fitting tool on the flywheel-side flange to fit the sealing ring on the flange.


Specific tooling

19.92.71.00 Tool to fit the seal ring on the flywheel-side flange

- Fit a new gasket between the crankcase and the crankshaft flange, flywheel side.
-
- Introduce the crankshaft.
 - Place the flywheel side crankshaft support flange, taking into account the fitting order indicated by the holes.

Specific tooling**19.92.71.00 Tool to fit the seal ring on the flywheel-side flange**

- Apply Teflon tape on the two lower fixing screws at the back in order to prevent oil leaks.
- Screw the eight flange screws on the flywheel side proceeding diagonally.

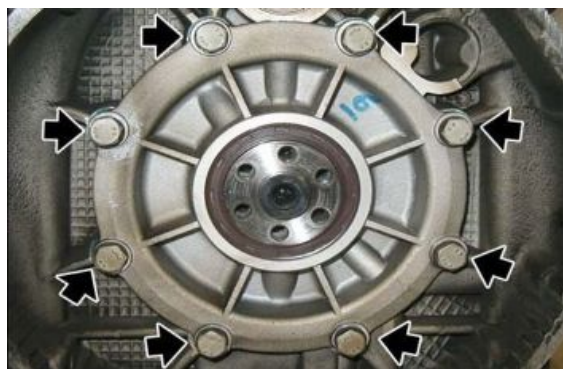

Lubrication


Oil pump

Removing

- Drain all the engine oil.
- Remove the alternator.
- Remove the timing system.
- Remove the shim washer.




- Unscrew and remove the three screws fixing the oil pump.
- Remove the oil pump.

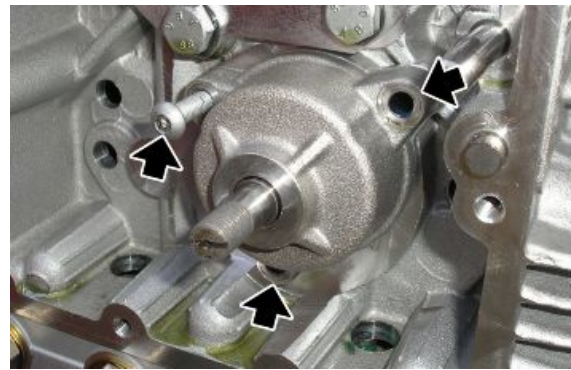

Installing

- Fit the oil pump.
- Tighten the three oil pump fixing screws.

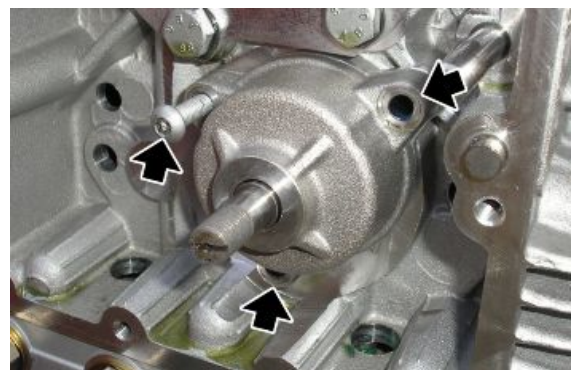

- Place the shim washer adequately so that the timing chain do not wear out the crankcase.
- Fit the timing system.
- Fit the alternator.
- Top-up with engine oil.



Removing the oil sump


NOTE

TO REMOVE THE OIL SUMP, PLACE A SUITABLE CONTAINER UNDER IT TO COLLECT THE USED OIL AND DRAIN OUT ALL OIL.

- Unscrew and remove the oil level plug and collect the O-Ring.




- Undo and remove the fourteen screws fixing the oil sump to the engine crankcase.

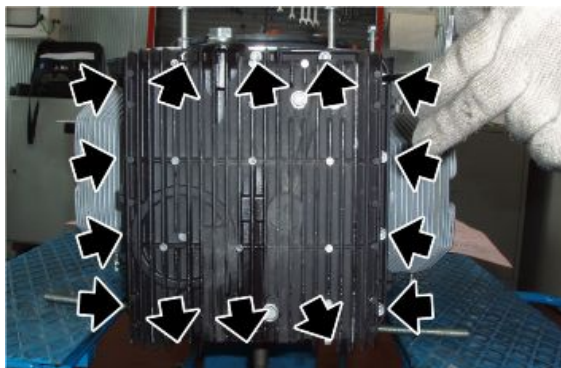


- Unscrew and remove the four screws and remove the engine oil sump.
- Collect the gasket.



DURING REFITTING REPLACE THE GASKET WITH A NEW ONE OF THE SAME TYPE.

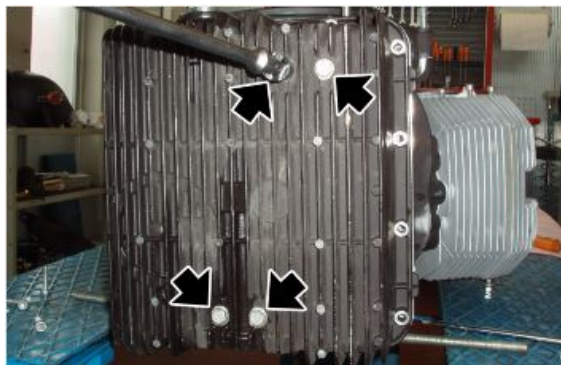

- If necessary, it is possible to remove the components shown on the figure.

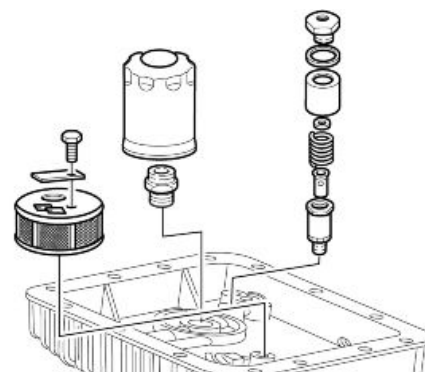


INDEX OF TOPICS

POWER SUPPLY

P SUPP

Circuit diagram

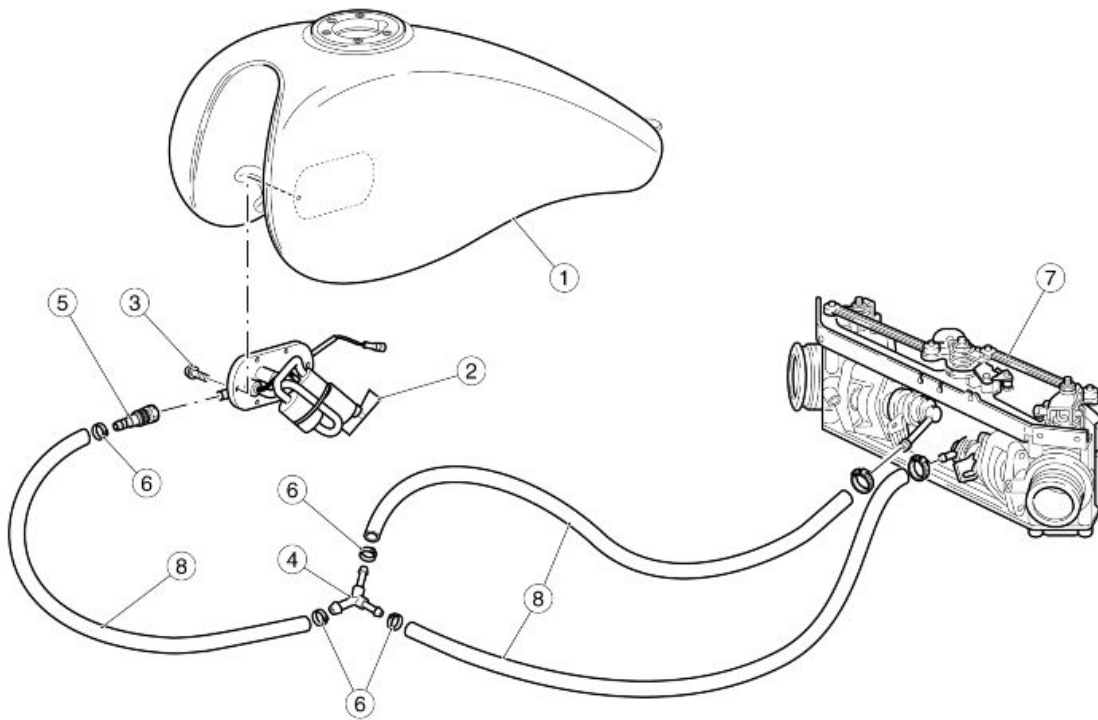**Key:**

1. Fuel tank
2. Complete fuel pump
3. Flanged screw
4. Three-way joint
5. Joint
6. Clamp
7. Throttle body
8. Fuel pipe

Injection

Removing the throttle body

- Remove the air filter casing.


- Remove the injector connectors.




- Remove the TPS connector from the left throttle body.



- Operating on both sides, undo and remove the three screws from the intake manifold.

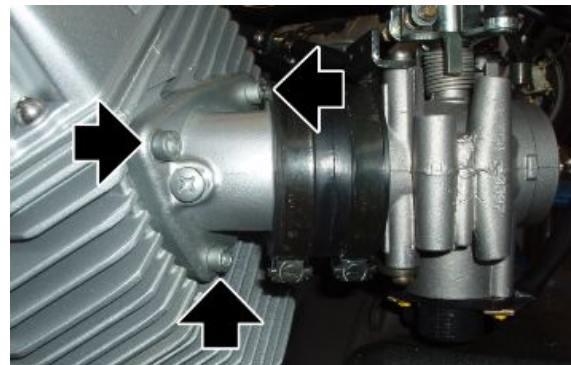

- Remove the throttle cable and starter.

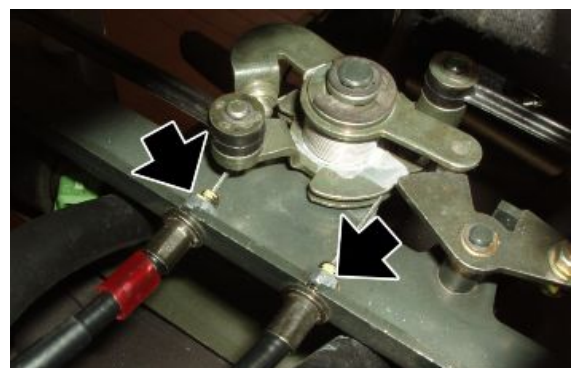

- Remove the throttle body from one side of the vehicle.



Cylinders synchronisation

Procedure to control and set the throttle body

ENGINE OFF - KEY OFF

- Connect the vacuumeter.
- Connect the diagnosis instrument to the diagnosis connector and the battery.
- Disconnect the throttle body dipstick (1) from the left (on the potentiometer side).
- On the left throttle body, using the throttle adjustment dowel, adjust the throttle potentiometer to 3.6° ($\pm 0.1^{\circ}$).


Note: this value corresponds to a reading of 536 mV (± 20 mV)

BEFORE DISCONNECTING THE POTENTIOMETER, TURN THE KEY TO "OFF".



ENGINE ON (take the engine temperature at least 50°C / 122°F)

- KEY ON - COMPLETELY CLOSE the BY-PASS screws.
- Level the depression in the right cylinder by the throttle adjustment dowel (2) (WITH DIPSTICK (1) DISCONNECTED).
- Connect the throttle body dipstick (1), then check OUT-OF-IDLE (2000/3000 RPM) the balance of both cylinders de-

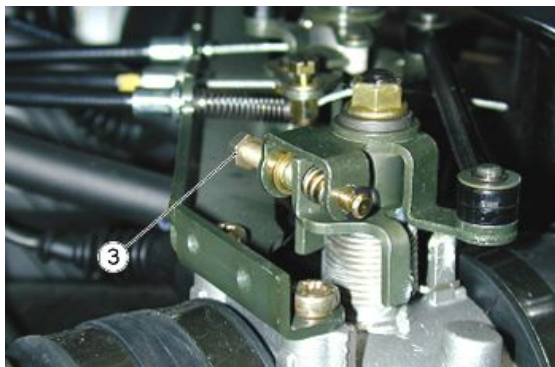

pression. If they are not balanced, adjust the balance screw (3) (left side) to level both cylinders.

DISCONNECT THE VACUOMETER (IMPORTANT)

ENGINE TEMPERATURE SHOULD RANGE BETWEEN 70 °C (158 °F) AND 80 °C (176 °F)

- By means of the by-pass screws, adjust idle at 1100 +/- 80 rpm paying attention to the value on the diagnosis instrument.
- Check upstream of the exhaust ends that the CO value of the two cylinders is between 0.7 and 1.2%. If one of the two values is slightly off the range, it is possible to carry out small adjustments using the cylinder by-pass, keeping the minimum idle rpm at the prescribed value.

NOTE: if after this procedure, idle is not within the indicated range, check potentiometer connected to the digital tester, completely closing the throttle on the duct (throttle angle 0°). The value on the tester must be 150 mV +/-15 mV; if not, refit the potentiometer to find value 150 mV.

SETTING SUMMARY CHART

Specification	Desc./Quantity
Throttle minimum position	3.6° +/- 0.1° (value in mV: 536 +/- 20 mV)
By-pass adjustment	Balance both cylinders, approximately 1 turn (the value may vary from vehicle to vehicle).
Nominal rpm	1100 +/- 80 rpm with engine temperature of at least 80 °C (176 °F).


Co rate adjustment

- Remove the saddle.
- Connect a vacuumeter to the sockets on the intake manifolds.
- Using the appropriate cables, connect the AXONE diagnosis instrument to the diagnosis socket and to the vehicle battery (not to another battery).
- Always connect the positive clamp first and then the negative one.
- Turn on the AXONE pushing the button 'ON/OFF'
- Using the side arrows select the menu 'Self-diagnosis'.

CAUTION

IN ORDER TO ACCESS THE 'SELF-DIAGNOSIS' FUNCTIONS THE OBD MODULE MUST BE FITTED ON THE BACK OF THE AXONE.

- On the next screens select: vehicle brand (MOTOGUZZI), model (if the model Bellagio is not available, choose Brevia V1100 avoiding throttle position autodetection), engine, system type (injection system software), chassis initial numbers, type of electronic control unit fitted.
- Turn the ignition to "ON", AXONE is connected to the control unit.
- Select the throttle potentiometer parameter.
- Disconnect the stem (1) from the left side throttle body releasing the snap ring (2).
- On the left throttle body, using the throttle adjustment dowel (3), adjust the throttle potentiometer to 3.6° ($\pm 0.1^{\circ}$) visible on AXONE.

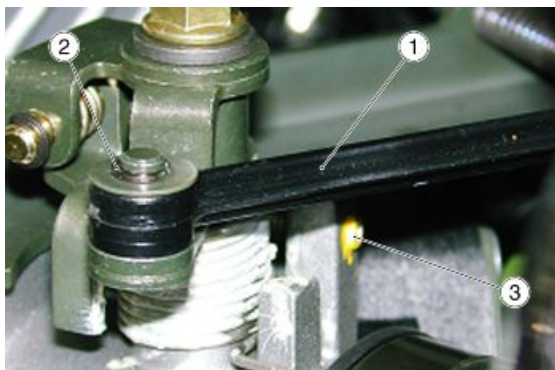

This value corresponds to a reading of 536 mV (± 20 mV)




USE AN ALLEN WRENCH TO WORK ON THE ADJUSTMENT DOWEL (3).

CAUTION

BEFORE DISCONNECTING THE POTENTIOMETER, TURN THE KEY TO "OFF".


- Connect the stem (1) of the left side throttle body.
- Start the engine and let the temperature reach 50°C (122°F) (visible on AXONE) after selecting the engine temperature parameter.
- Close by-passes (4) completely on both sides.
- Disconnect the stem (1) from the left side throttle body.

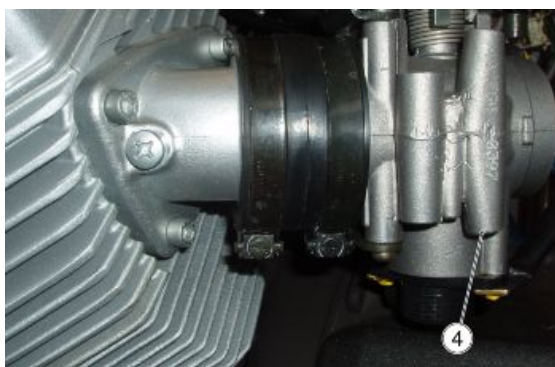

- Balance the depression on the right cylinder using the throttle adjustment dowel (5).
- Connect the stem (1) of the left side throttle body.



- Check the depression balance between the two cylinders twisting the throttle grip a little (approximately 2000/3000 RPM). In case of imbalance, use the adjustment screw (6) to level the depression.

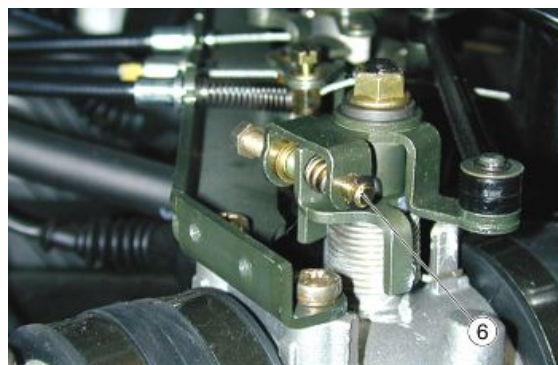

- Disconnect the vacuumeter.
- Engine temperature should range between 70 °C (158 °F) and 80 °C (176 °F).
- Open both by-passes (4) gradually so as to take the minimum idle rpm to 1100 +/- 80, visible on AXONE after selecting the engine revs parameter, keeping depression balanced.
- Check upstream of the two outlet terminals that the CO value of the two cylinders is between 0.7 and 1.2%. If one of the two values is slightly off the range, it is possible to carry out small adjustments using the relative cylinder by-pass, keeping the minimum idle rpm at the prescribed value.
- Turn off and disconnect Axone.


CAUTION

AXONE MAY GET LOCKED DURING OPERATION.

IN THIS CASE TURN THE IGNITION KEY TO 'OFF', TURN OFF AXONE PUSHING 'ON/OFF', DISCONNECT THE UPPER CONNECTOR AND WAIT SOME SECONDS BEFORE CONNECTING IT TO THE CONTROL UNIT AGAIN.

If after this procedure the idle value is not within the indicated range, check the potentiometer using a tester proceeding as follows:

- set the throttle completely closed on the duct (throttle angle 0°);
- turn the ignition key to "ON";
- place the tester leads on the potentiometer connector between the poles (Q) and (R) and check

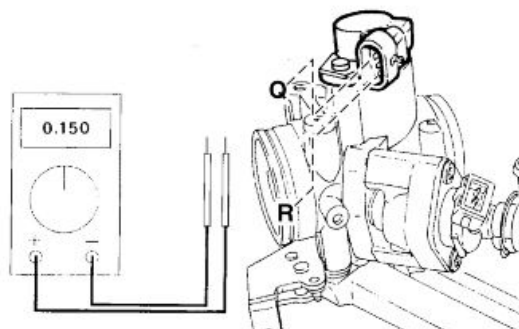

that the voltage value measured is 150mV +/- 15mV.

- In case the potentiometer reading does not match the above mentioned value, loosen the two potentiometer fixing screws and place it again correctly.

Using axone for injection system

Injection

Iso screen page

ISO

This screen page shows general data regarding the control unit, for example software type, mapping, control unit programming date




ISO DISPLAY

Specification	Desc./Quantity
Mapping	-

Engine parameter reading screen page

ENGINE PARAMETER READING

This screen page shows the parameters measured by the several sensors (engine revs, engine temperature, etc.) or values set by the control unit (injection time, ignition advance, etc.)

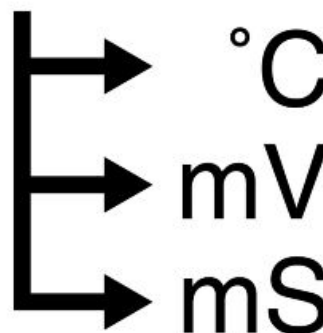

ENGINE PARAMETER READING SCREEN PAGE


Specification	Desc./Quantity
Engine rpm	Engine revolutions per minute: the minimum value is set by the control unit cannot be adjusted
Injection time	- ms
Ignition advance	- °
Air temperature	°C

Specification	Desc./Quantity
	Temperature of the air taken in by the engine, measured by the sensor in the filter casing. This is not the temperature indicated by the instrument panel
Engine temperature	°C
Battery voltage	V
Throttle	Value corresponding to the throttle when closed (approximate value between 4.5 and 4.9°) (left throttle supported by the end of stroke screw). If a different value is read, it is necessary to activate the parameter "Throttle positioner autodetection" and obtain this value.
Atmospheric pressure	1015 mPa (approximate values) The sensor is inside the instrument panel
Lambda probe	100 - 900 mV (approximate values) Signal when energised that the control unit receives from the lambda probe: inversely proportional to the presence of oxygen
Lambda integrator	When the control unit uses the lambda probe signal (see the 'Lambda' parameter on the 'Device status' display) this value should be close to 0%
Vehicle speed	- km/h
Target engine revs	1150 rpm (approximate values) Parameter valid at idle, setting depends especially on the engine temperature: the control unit will try to keep the engine running at this revs, acting on the ignition advance and the Stepper motor
Stepper base	70 - 100 (approximate values) Steps corresponding to the Stepper motor reference position
CL Stepper	70 - 150 (approximate values) Steps set by the control unit for the Stepper motor. At idle, steps so that the engine keeps the target engine revs set by the control unit
Stepper regulator	Difference between current steps of motor at idle and those at the reference position
Virtual throttle angle from Stepper	0° With engine not at idle speed, this value indicates the throttle degrees corresponding to the Stepper motor air flow

Device status screen page

DEVICE STATUS

This screen page shows the status (usually ON/OFF) of the vehicle devices or the operation condition of some vehicle systems (for example, lambda probe functioning status).

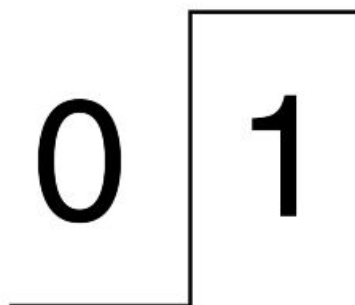

DEVICE STATUS

Specification	Desc./Quantity
Engine status	ON/run/power-latch/stopped operation conditions
Throttle position	Released / pressed indicates if the throttle potentiometer is open or closed
Stand	Retracted / extended indicates the position of the side stand (only with gear engaged)
Ignition	Enabled / disabled indicates if the control unit consents engine start-up
RUN / STOP switch	Run / stop indicates the position of the safety switch

Specification	Desc./Quantity
Clutch	No / Yes indicates the clutch sensor status
Gear engaged	No / Yes indicates the gear sensor status
fall sensor	Normal / Tip over indicates the vehicle fall sensor status
Lambda	Open loop / Closed loop Indicates if the control unit is using (CLOSED) the lambda probe signal to keep the stoichiometric combustion. At idle CLOSED only if: Air T over 20°C (68°F) and engine T over 30°C (86°F) and engine on for at least 2-3 minutes
Synchronisation	Synchronised / Not synchronised Indicates if the control unit detects the revolution sensor signal correctly

Devices activation screen page

DEVICES ACTIVATION

This screen page is used to delete errors in the control unit memory and to activate some systems controlled by the control unit.



DEVICES ACTIVATION

Specification	Desc./Quantity
Left coil	operation for 2.5 m, 5 times
Right coil	operation for 2.5 m, 5 times
Left injector	Operation for 4 m, 5 times
Right injector	Operation for 4 m, 5 times
Error clearing	By pressing the 'enter' button, the stored errors (MEM) become part of the historical data (STO). In the next connection between the Navigator and the control unit, the historical errors (STO) are no longer shown
Fuel pump	Operation for 30"
Stepper control	For 4" advancement command of 32 steps, for the next 4" retrocession command of 32 steps and so on for 30"

Errors display screen page

ERRORS DISPLAY

This screen page shows potential errors detected in the vehicle (ATT) or stored in the control unit (MEM) and it allows to check error clearing (STO).




ERRORS DISPLAY

Specification	Desc./Quantity
Pressure sensor	Possible short circuit in the earth lead, battery or open circuit: recovery function noticeable for customer. Careful with the air pressure sensor in the instrument panel
Air temperature	Possible short circuit in the earth lead, battery or open circuit: recovery function hardly noticeable for customer.
Engine temperature	Possible short circuit in the earth lead, battery or open circuit: recovery function.
Throttle actuator position sensor	Possible short circuit in the earth lead, battery or open circuit: recovery function noticeable for customer.
Lambda probe	Possible short circuit on the earth lead, battery or open circuit or plausibility: recovery function hardly noticeable for customer.
Left injector	Possible short circuit in the earth lead, battery or open circuit. If both injectors do not work, the engine does not work
Right injector	Possible short circuit in the earth lead, battery or open circuit. If both injectors do not work, the engine does not work
Fuel pump relay	Possible short circuit in the earth lead, battery or open circuit: the engine does not start.
Left coil	Possible short circuit in the earth lead, battery or open circuit. If both coils do not work, the engine does not work.
Right coil	Possible short circuit in the earth lead, battery or open circuit. If both coils do not work, the engine does not work.
Idle regulator	Possible short circuit in the earth lead, battery or open circuit: recovery function noticeable for the customer due to no idle management
Battery voltage	Battery voltage detected is too low (7V) or too high (16V) for a certain period
Starter diagnosis	Possible short circuit in the earth lead, battery or open circuit.
Engine revolution sensor	Possible open circuit.
Lambda heater	Possible short circuit in the earth lead, battery or lambda probe heating circuit open.
SPEED SENSOR	
CAN line diagnosis	Possible error on line CAN: short circuit or line break or no signal or plausibility error detected.
RAM memory	Possible internal control unit error. Also check the control unit supply and earth connections
ROM memory	Possible internal control unit error. Also check the control unit supply and earth connections
Microprocessor	Possible internal control unit error. Also check the control unit supply and earth connections
Checksum EPROM	Possible internal control unit error. Also check the control unit supply and earth connections

Adjustable parameters screen page

ADJUSTABLE PARAMETERS

This screen page is used to adjust some control unit parameters.

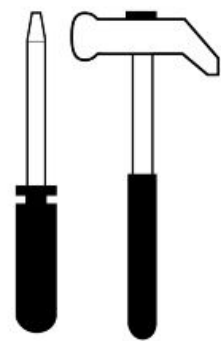

ADJUSTABLE PARAMETERS

Specification	Desc./Quantity
Throttle positioner autodetection	Allows the control unit to detect the closed throttle position: just press the enter button

INDEX OF TOPICS

SUSPENSIONS	SUSP
-------------	------

Front

Removing the front wheel

- Remove both brake callipers.
- Loosen the screws on the wheel axle clamps.




- Unscrew and remove the pin.



- Remove the wheel.
- If required, collect the spacers.

Front fork

Diagram

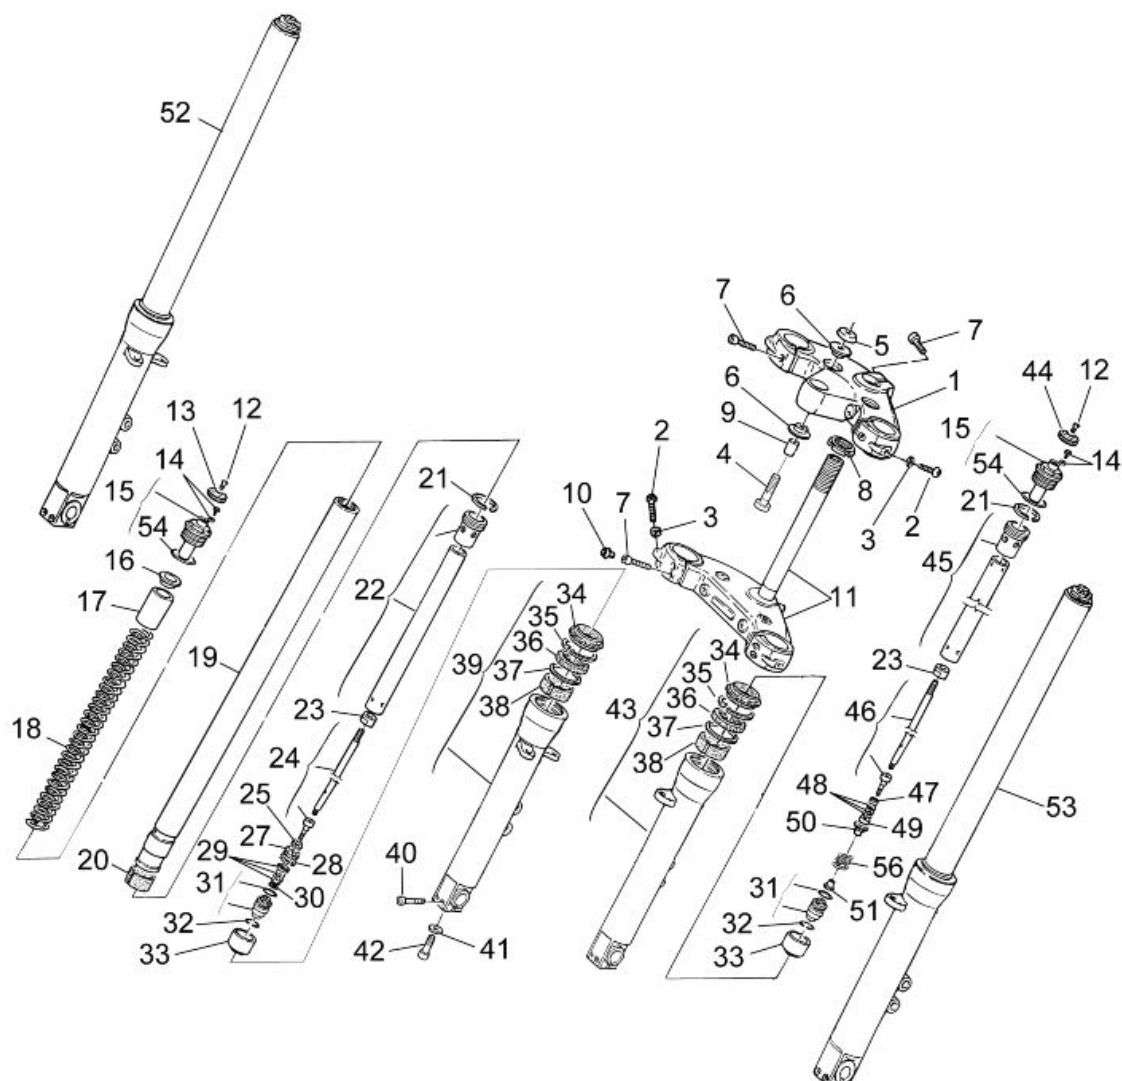**Key:**

1. Fork upper plate
2. TBEI screw
3. Washer
4. Screw
5. Cap
6. Rubber ring
7. Screw
8. Ring nut
9. Spacer
10. Chrome-plated cap
11. Base with headstock
12. Screw

- 13.Right adjustment ring nut
- 14.Screw with OR
- 15.Complete cap
- 16.Cap
- 17.Preload tube
- 18.Spring
- 19.Stem
- 20.Lower bushing
- 21.Ring
- 22.Right tube (extension)
- 23.Lock nut
- 24.Right pumping member rod (extension)
- 25.Counter spring
- 26.Right piston (extension)
- 27.Right piston ring (extension)
- 28.Right pin (extension)
- 29.Calibration tab
- 30.Nut
- 31.Bottom valve unit
- 32.O-ring
- 33.Adaptor
- 34.Dust guard
- 35.Snap ring
- 36.Sealing ring
- 37.Cap
- 38.Upper bushing
- 39.Right sleeve
- 40.Screw
- 41.Washer
- 42.Screw
- 43.Left sleeve
- 44.Left adjustment ring nut (compression)
- 45.Left pipe (compression)
- 46.Left pumping member rod (compression)
- 47.Cap
- 48.Calibration tab
- 49.Left pin (compression)
- 50.Left piston (compression)

- 51.Nut
 - 52.Complete right stem
 - 53.Complete left stem
 - 54.O-ring
 - 55.Spring
-

Removing the fork legs

- Hold the front part of the vehicle with a belt and a hoist.
 - Remove the front wheel.
-
- Unscrew the screws fixing the front mudguard and remove it.



- Support the stanchion and loosen the screws on the upper and then the lower plate.



- Remove the fork stem.
-

Draining oil

The vehicle is equipped with a hydraulic telescopic fork with separated shock absorber damping adjustment in extension and compression:

The left stem works in extension while the right one in compression.

Although the two stems work in a different mode, their internal components are similar; therefore, oil drainage and topping up are carried out following the same operations; that is why the following operations apply to both stems.

CAUTION


DURING OIL DRAINAGE AND REFILLING OPERATIONS, THE STEM AND ITS INNER PARTS SHOULD BE LOCKED IN A VICE; BE VERY CAREFUL NOT TO DAMAGE THEM BY EXERTING AN EXCESSIVE FORCE; ALWAYS USE ALUMINIUM JAW CAPS.

Outlet:

- Remove the stem from the fork.
- Place the stem in a vice equipped with jaws covered in aluminium so as not to damage the stem.
- With an hexagonal spanner, unscrew the upper closing cap. Be careful not to damage the O-ring during removal. Push the carrying tube inside the wheel carrier.
- Holding the upper cap with the spanner used before, loosen the lock nut, using an hexagonal spanner. Unscrew the upper cap completely and remove it from the shock absorber rod end.
- Using an appropriate container, drain as much as possible the oil contained in the stem.
- Hold the stem in the vice again and, holding the preloading tube, loosen the lock nut partially for discharging the internal spring.



- Remove the open washer for releasing the preloading tube and the spring.

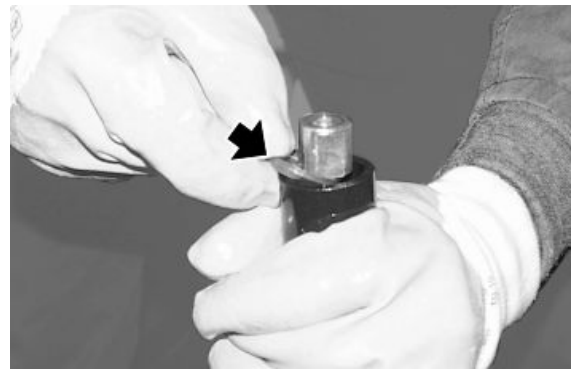

- Remove the preload tube and the spring.



- Drain the oil from the stem again and for easy drainage of the oil inside the shock absorber unit more easily, push the shock absorber rod to pump oil out.



BY PUMPING OIL OUT OF THE SHOCK ABSORBER USING THE ROD, AN OIL JET WILL FLOW FROM THE ROD END DUE TO THE PRESSURE. THEREFORE, IN ORDER TO AVOID DAMAGE OR INJURIES, POINT THE ROD END TO AN APPROPRIATE CONTAINER.



- Carefully check each part of the stem and make sure that there are no damaged elements.
- If there are no damaged or worn elements, refill the stem; otherwise, replace the damaged elements.

Disassembling the fork

- Drain out all the oil in the stem.
- Block the wheel holder sleeve with a vice.
- Unscrew the bottom screw and remove it together with its gasket.



- Remove the dust scraper using a screwdriver as a lever.

CAUTION

BE CAREFUL NOT TO DAMAGE THE SLEEVE RIM AND THE DUST SCRAPER.



- Remove the locking ring inside the sleeve using a thin screwdriver.

CAUTION


BE CAREFUL NOT TO DAMAGE THE SLEEVE RIM.



- Slide the stem from the wheel holder sleeve together with the sealing ring (1), the cap (2), the upper bushing on the fork leg (3), the lower bushing (4) on the pipe.

NOTE

WHEN REMOVING THE STEM FROM THE WHEEL HOLDER SLEEVE SOME PARTS MAY REMAIN INSIDE THE SLEEVE. IF THIS OCCURS, THESE PARTS MUST BE REMOVED AFTERWARDS, BEING CAREFUL NOT TO DAMAGE THE SLEEVE RIM AND THE UPPER BUSHING SEAT

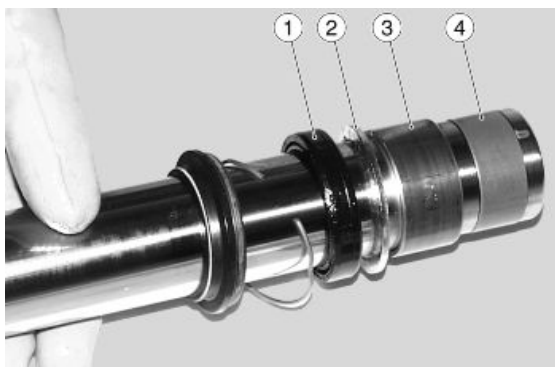

- Slide off the pumping member unit from the holding tube.



- Remove the bottom buffer; this could remain fitted on the wheel holder fork leg; in this case remove it from inside.



- With the fingers, push the bottom valve inside the shock absorber sleeve.




- Using a screwdriver, remove the snap ring.




- With the shock absorber rod outside the sleeve, push the bottom valve.



- Check the bottom valve and its O-Ring, replace them if they are damaged.

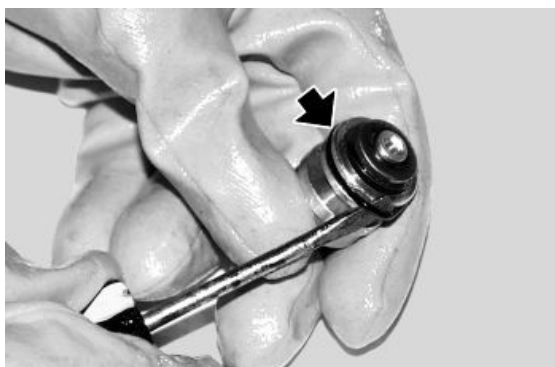

- Slide off the shock absorber rod together with the pumping member unit from the sleeve after unscrewing the lock nut on the rod end.
- Unscrew the nut (6) fixing the adjustment unit and slide off all the components. Carry out the appropriate checks and/or replacements, and refit according to order:

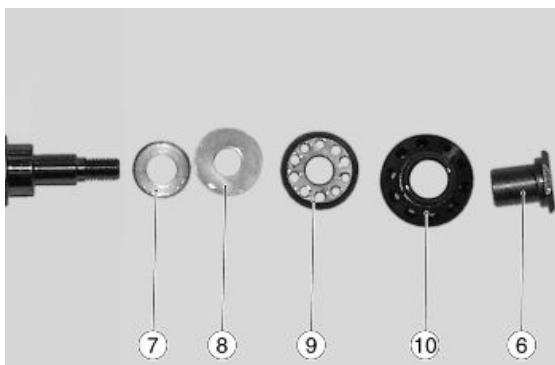

- cap (7);
- reed valve (8);
- cap (9);
- piston (10);
- fixing nut (6).




DURING SEALING UNIT REMOVAL, TAKE NOTE OF THE EXACT POSITION OF THE REEDS (8)



HOLDING THE SHOCK ABSORBER ROD IN A VICE WITHOUT ANY SUPPORTS, IT IS POSSIBLE TO CRUSH IT SINCE IT IS HOLLOW.

The removal procedure is similar to that of shock absorber "COMPRESSION" but the components of the pumping member unit fixed to the shock absorber rod are different:

- pos. 11, counter spring;
- pos. 12, piston;
- pos. 13, ring for piston;
- pos. 14, right pin;
- pos. 15, calibration tabs;
- pos. 16, fixing nut.

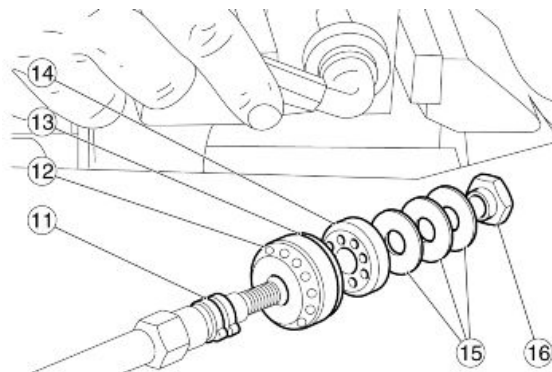

See also

[Draining oil](#)

Checking the components

Stem

Check the sliding surface for scorings and/or scratches.

These scorings can be eliminated by rubbing them with wet sandpaper (grain 1).

If the scorings are deep, replace the stem.

Use a dial gauge to check that the stem bending is below the limit value.

If over the value, replace the stem.

CAUTION

A BENT STEM SHOULD NEVER BE STRAIGHTENED BECAUSE ITS STRUCTURE WOULD BE WEAKENED AND USING THE VEHICLE MAY BECOME DANGEROUS.

Characteristic

Bending limit:

0.2 mm (0.00787 in)

Sleeve

Check that there are no damages and/or cracks; otherwise, replace it.

Spring

Check the spring is in good conditions.

Check that the following components are in good conditions:

- upper bushing;
- lower bushing;
- piston.

If there are signs of excessive wear or damage, replace the affected component.

CAUTION

REMOVE ANY IMPURITY IN THE BUSHINGS, TAKING CARE NOT TO SCRATCH THEIR SURFACE.

Replace the following components with new ones:

- seal ring;
- dust gaiter;




- O-Ring on the cap.



Filling oil

- Place the sleeve upright in a vice fitted with protection jaws.
- Compress the sleeve in the stem.
- Pour part of the fork oil into the sleeve.
- Wait some minutes until the oil fills all the ducts.
- Pour the remaining oil.
- Pump out oil a few times.
- Measure the air gap between the oil level and the rim.

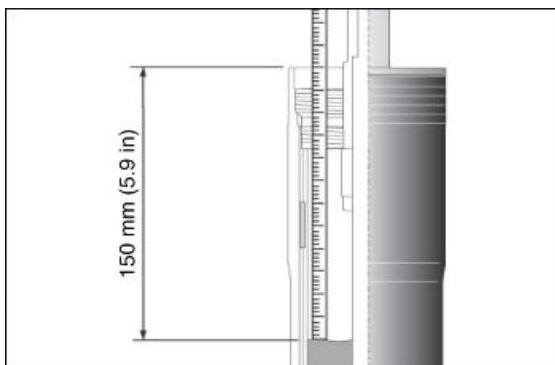

THE SLEEVE MUST BE PERFECTLY UPRIGHT IN ORDER TO MEASURE THE CORRECT OIL LEVEL. THE OIL LEVEL MUST BE THE SAME IN BOTH STANCHIONS.

Characteristic

Adjustable telescopic fork oil (per fork leg)

0.485 l (0.128 US gal)


Oil level (from sleeve rim, without the spring and with stem at the end of the stroke)

150 mm (5.9 in)

- Introduce the spring and the preload tube.



- Place the open washer locking the pre-loading tube and the spring.

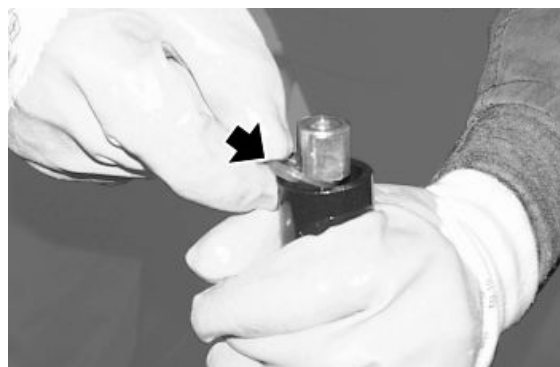

- Screw the lock nut on the pumping member rod. So as to compress the spring.



- Fix the fork upper cap to the pumping member rod.
- Place the upper cap on the holding tube being careful not to damage the OR.
- Screw the upper cap to the prescribed torque.



Steering bearing

Adjusting play

- Operating from both sides, remove the screw fixing the fork stems to the upper plate.



- Loosen the upper plate back screw.



- Remove the chrome-plated cap.



- Unscrew and remove the head fixing nut.



- Unscrew and remove the two screws fixing the light support to the steering upper plate.



- Undo and remove the two handlebar fixing screws.



- Collect the two chrome-plate washers.



- Slide off the fork upper plate moving it towards the instrument panel.
- Screw the ring nut to the prescribed torque.

Locking torques (N*m)

Headstock ring nut - M25x1 (1) 7 Nm (5.16 lbf ft) - the headstock should turn freely



Rear

Removing the rear wheel

- Remove the exhaust terminals.
 - Slide off the rear calliper from the disc.
 - Lift the rear part of the vehicle with a belt and a hoist.
-
- Engage the first gear.
 - Undo and remove the four screws, collect the spacers and the dust-protection ring.
 - Remove rear wheel.




Shock absorbers

Removing

- Remove the exhaust terminals.
- Unscrew and remove the single connecting rod fixing bolt.



-
- Operating from the right side, unscrew and remove the shock absorber lower screw.

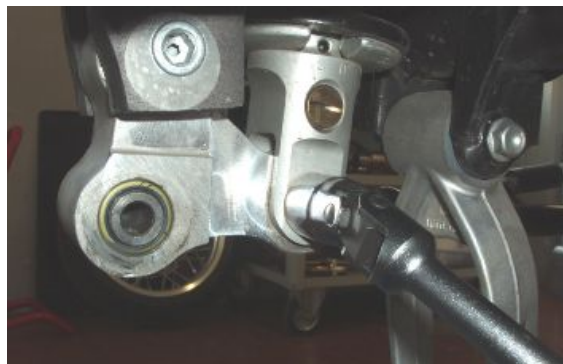

- Place a shim washer between the chassis and the rear wheel.
- Operating from the right side, unscrew and remove the shock absorber upper screw.
- Turn and remove the shock absorber from the left side of the vehicle.

**See also**

[Removing the tail pipe](#)

INDEX OF TOPICS

CHASSIS	CHAS
---------	------

Swinging arm

Removing

- Remove the rear wheel.
- Unscrew and remove the two screws.
- Remove the speed sensor from the fork.



- Unscrew and remove the fixing nut of the connecting rod assembly and collect the screw.




- Undo and remove the two screws.
- Remove the rider left footrest protection.



- Unscrew and remove the nut fixing the reaction rod.
- Remove the screw.
- Fix the reaction rod to the chassis with a clamp.



- Remove the clamp from the dust guard cap.

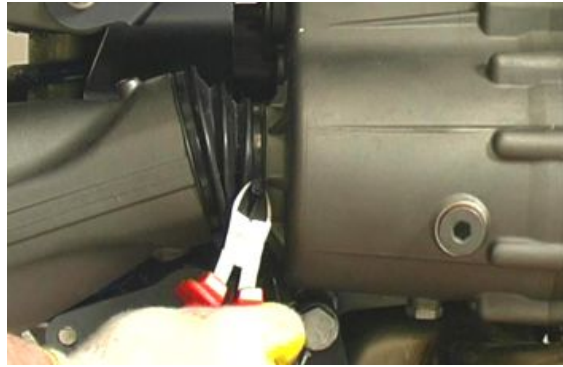

- Loosen the two swingarm terminal screws.



- Loosen the ring nut.

Specific tooling

GU14912603 Hook spanner for fixing ring nut of the clutch shaft internal body



- Helped by a second operator, remove the pin and remove the swingarm together with the cardan shaft.



Checking

- Check that the universal joint is not damaged, the gear teeth inserting in the sleeve grooves and the grooves on the joint are not deformed or damaged; otherwise, replace the joint.
- Check that the rubber bellows are not cut or pierced; otherwise, replace it.
- Check that the fork pin threads and the fork fixing nuts are not damaged, deformed or flattened; otherwise, replace them.
- Check that the sleeve grooves are not damaged, deformed or deteriorated; otherwise, replace the sleeve.
- Check that the sleeve outer toothing and grooves are not damaged.



Installing

- Spread a thin layer of lubricating grease all along the swingarm pin.
- Fit the ring nut in the swingarm pin and screw it manually.



- Working from both sides, grease the cardan shaft cables with the recommended product from the recommended products table.
- Block the swingarm, insert the universal joint, align the holes and, at the same time, helped by a second operator, insert the pin completely.
- Tighten the swingarm pin.



- Use the suitable box-spanner to tighten the ring nut.

Specific tooling

GU14912603 Hook spanner for fixing ring nut of the clutch shaft internal body



- Tighten the two screws of the swing-arm clamp.



- Place the rider left footrest protection.
- Tighten the two screws.



- Fit the dust guard cap in the gearbox.
- Lock the dust guard cap with a new clamp.



- Place the reaction rod into its seat.
- Insert the screw.
- Screw the nut fixing the reaction rod.



- Place the connecting rod assembly on the swingarm.
- Insert the screw.
- Tighten the fixing nut of the connecting rod assembly.



- Place the dust-protection ring between the rim and the cardan shaft taking care to mount it with the collar facing the transmission unit.



- Place the speed sensor on the fork and screw the two screws.
- Fit the rear wheel.
- Place the rear brake calliper on the disc and the brake pipe on the fork.



Bevel gears

Removing

- Remove the rear wheel.
- Unscrew and remove the two screws.
- Remove the speed sensor from the fork.



- Unscrew and remove the nut fixing the reaction rod.
- Remove the screw.
- Fasten the reaction rod to the chassis with a clamp.



- Undo and remove the four screws.




- Remove the transmission casing sliding off the universal joint.



Checking

Support unit

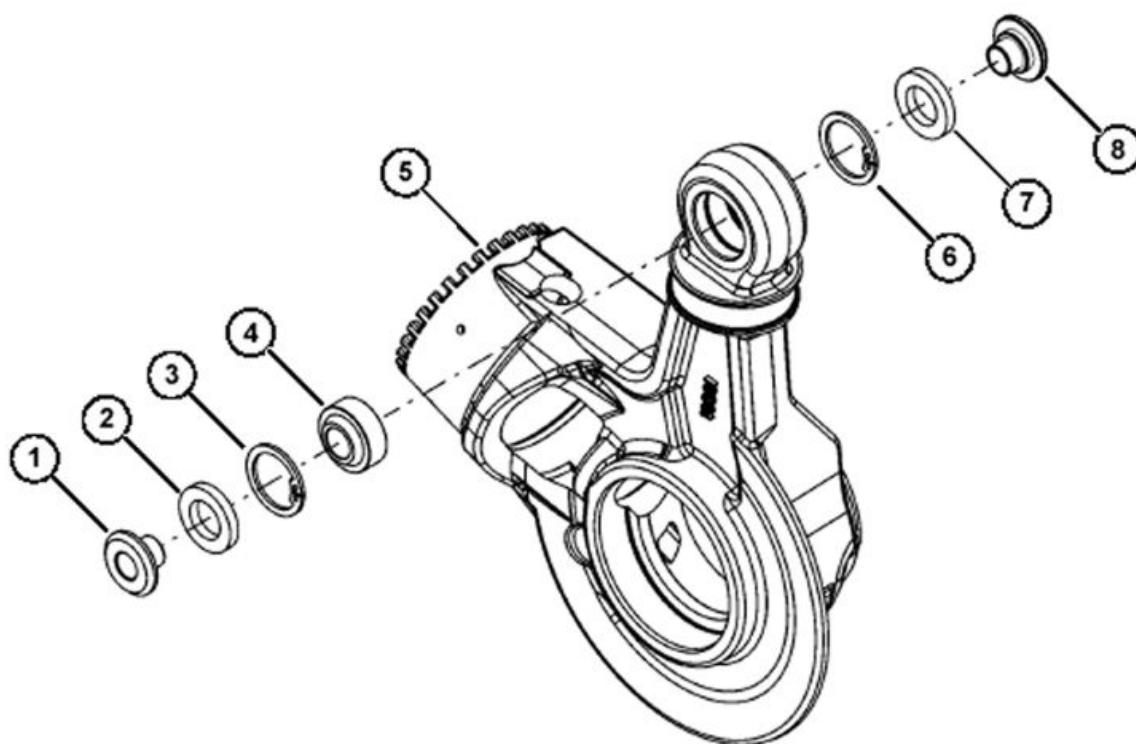

Support unit

Removal

Remove the bushing (1) with a punch.

Turn the support (5) over and remove the other bushing (8).




Remove the sealing rings (2) and (7) with a screwdriver.

Remove the stop rings (3) and (6) from the support (5) with suitable pliers.

NOTE

THIS OPERATION DESTROYS THE SEALING RING.

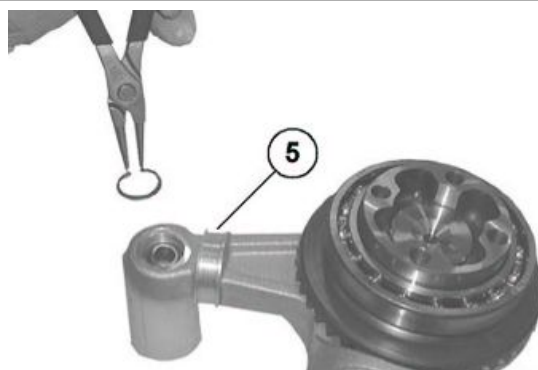


Remove the ball joint (4) with a suitable buffer and a rubber hammer.




FITTING

Fit the stop ring (6) in the support (5) with suitable pliers.

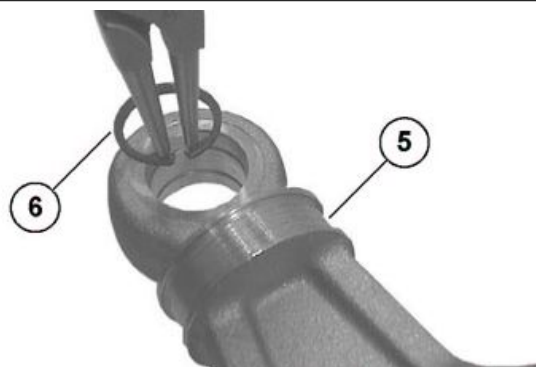


Turn the support (5) over.

Assemble the ball joint (4) with the buffer and a rubber hammer.

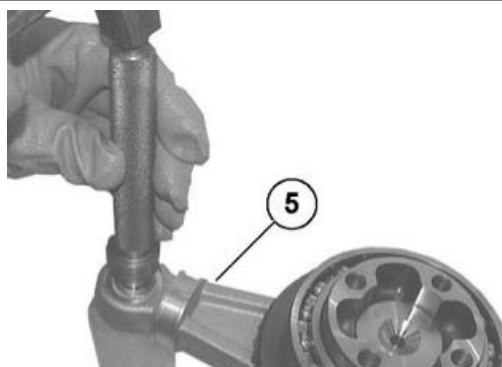

Fit the stop ring (3) in the support (5) with suitable pliers.

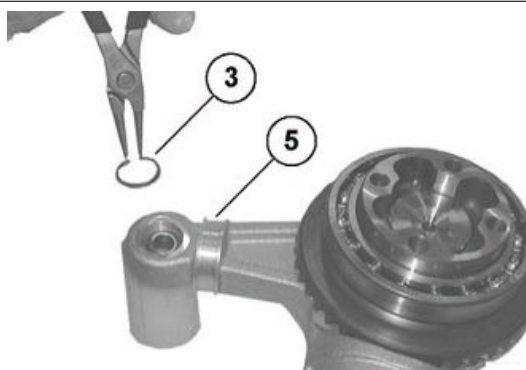

Manually assemble the new sealing rings (2) and (7).

Assemble the bushing (1).



Drive the bushing (1) in with a plastic hammer.

Turn the support (5) over and assemble the other bushing (8).




Pinion unit


Pinion unit

Removal

Remove the stop ring (1) from the ring nut.

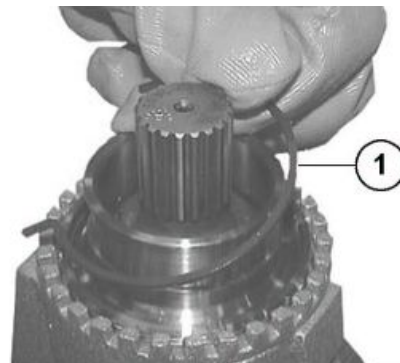


Unscrew the ring nut (2) with the special spanner (s4).

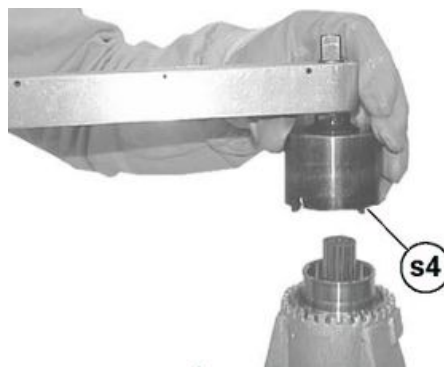


Remove the ring nut (2) and remove the sealing ring from the ring nut.

NOTE

THIS OPERATION DESTROYS THE SEALING RING.

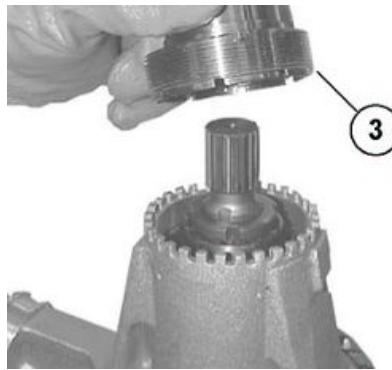

Assemble the sealing ring (3) to the ring nut (2) with the buffer CA715855 (see Fig.1) and a hammer.

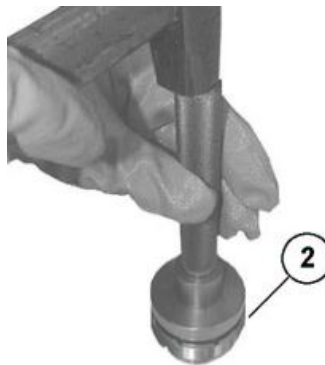


Lubricate the sealing ring (3).




Assemble the ring nut (2).




Tighten the ring nut (2) with the special spanner (s4) to the prescribe torque.

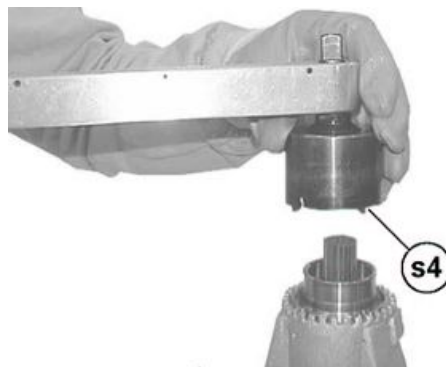


Insert the stop ring (1) in the ring nut (2) in the indicated direction.

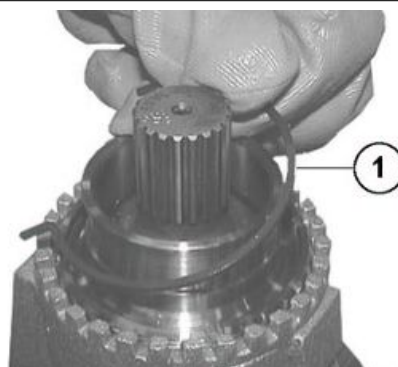

Assembly position of the stop ring (1).

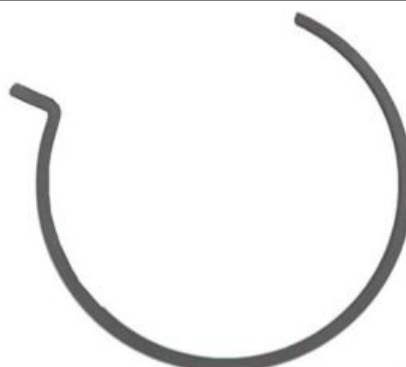**CAUTION**

MAKE SURE THE STOP RING IS IN ITS SEAT.

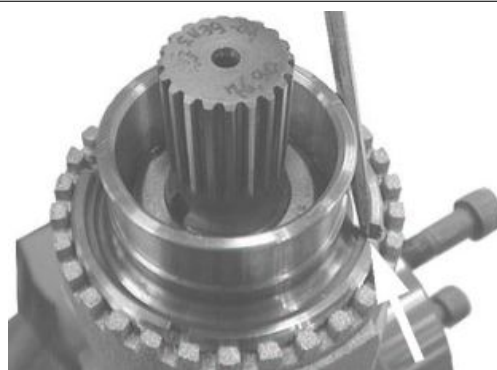

Wheel axle unit

Gruppo asse ruota**Removal**

Remove the bearing from the wheel axle with a suitable extractor.



Turn the unit over.

Remove the bearing from the wheel axle with a suitable extractor.

**FITTING**

Heat the bearings to 100°C (212 °F).



Assemble the bearings to the wheel axle.



Turn the unit over.


Assemble the bearings to the wheel axle.



Casing unit fitting


Casing unit fitting

Assemble the dowel pins to the casing with the buffer and a hammer.

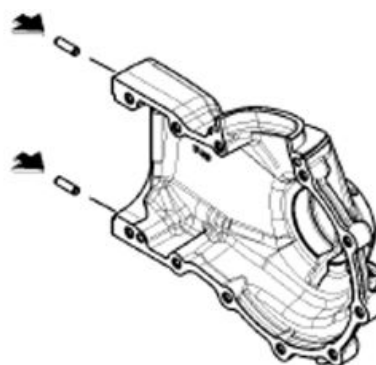

Assemble the casing to the special fastening tool.

Clean the casing faying surfaces carefully.

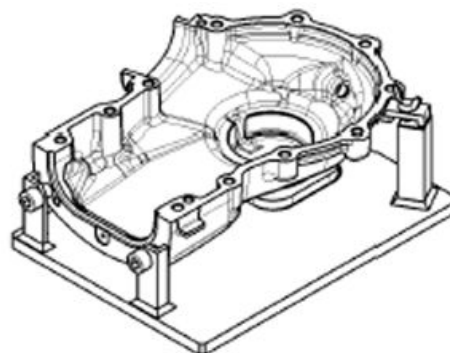

Heat the casing.



Insert the support group in the casing.



Assemble the cap and the ring.



Fit the cap on the support.
Fit the clamp.



Screw the clamp with the specific pliers.



Apply the prescribed sealant to the casing.



Fit a new sealing ring using the buffer.
Lubricate the sealing ring.



Assemble two centring stud bolts with M8 thread
in the threaded holes of the casing as shown in the
picture.



Fit the casing.
Remove the two dowel pins.



Assemble the fixing screws (7).
Tighten the screws (7) to the prescribed torque.
Remove excessive sealant.



Assemble the ring to the casing.




Tighten the fixing screws to the prescribed torque.



Fit the cap with the washer.
Screw the cap to the prescribed torque.




Fit the breather with the washer.
Screw the breather to the prescribed torque.

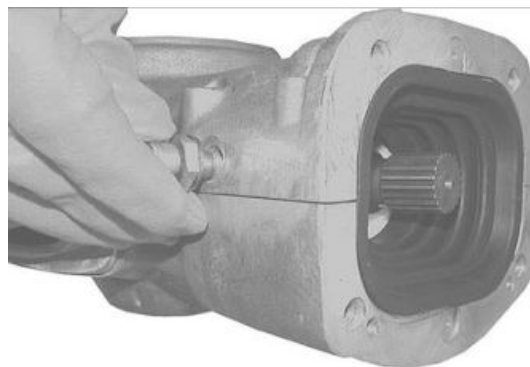


Fill the transmission with the prescribed oil.
Fit the cap with the washer.
Screw the cap to the prescribed torque.




Assemble the cap with the clamps.

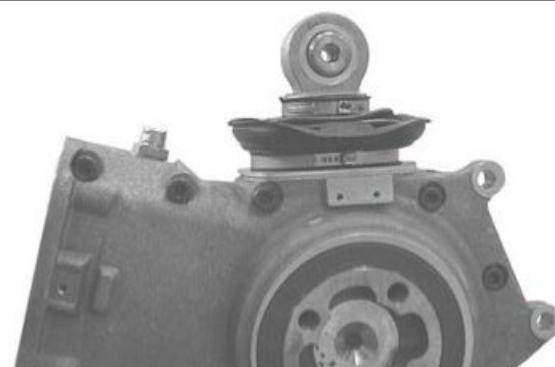

Fit the cap in its seat.

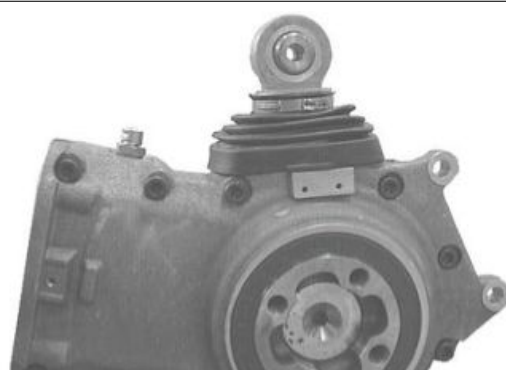

Casing unit removal

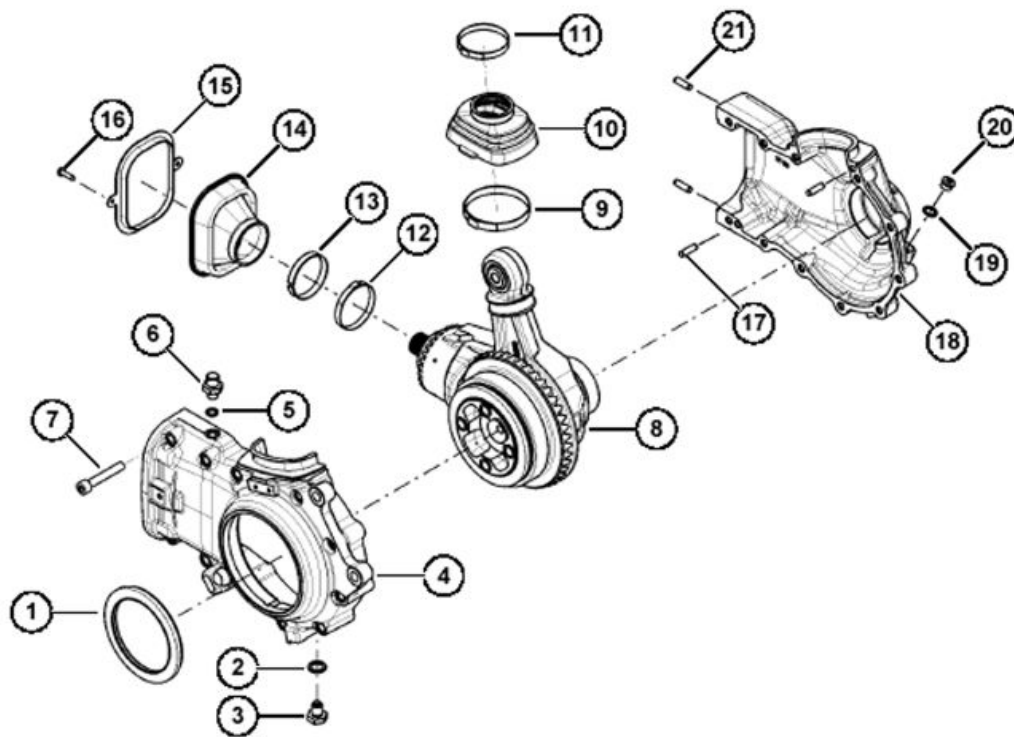

Casing unit removal

Remove the cover (20).

Remove the plug (3) to drain out the oil.



Lift the cap (10).



Remove the clamps (9) and (11).

Remove the cap (14).



Remove the screws (16).




Collect the ring (15).



Remove the screws (7).


Remove the casing (4).

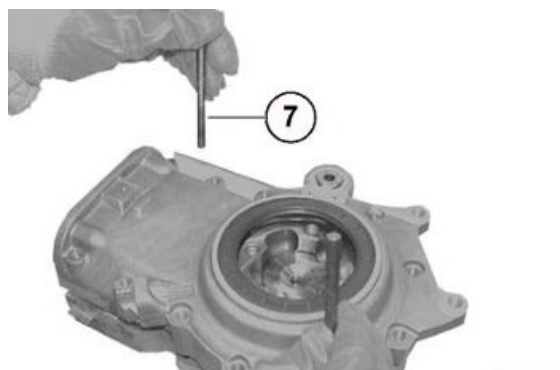

Remove the clamp (12).



Remove the cap (14).

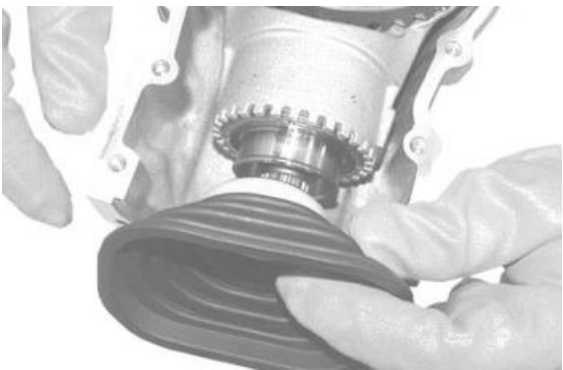

Collect the ring (13).



Remove the support unit (8).



TROUBLESHOOTING

Possible Cause	Operation
1. Fitting error of the radial seal or seal damaged 2. Sliding surface of the wheel axle seal spoiled or damaged	1. Replace the sealing ring and fit it correctly with the suitable tool 2. Replace the wheel axle

Possible Cause	Operation
1. Casing not sealed 2. Closing screws of the casing shells not tightened to the prescribed torque	1. Open the casing shells, clean the surfaces, seal and reassemble the casing shells 2. Tighten the closing screws to the correct torque
1. Dirt between the sealing ring and the casing 2. A used sealing ring has been fitted 3. Plug not tightened to the prescribed torque	1. Clean and tighten to the correct torque 2. Replace the sealing ring 3. Tighten the plug to the correct torque
1. Cap damaged 2. Retaining clamp or closing cover loose 3. Fitting error of the radial seal or seal damaged 4. Sliding surface of the wheel spacer spoiled or damaged	1. Replace the cap 2. Screw the clamp with suitable pliers 3. Replace the sealing ring and fit it correctly with the suitable tool 4. Replace the spacer
1. Cap damaged 2. Internal retaining clamp or external closing clamp loose	1. Replace the cap 2. Screw the internal or external clamp with suitable pliers
1. Bevel gear pair fitting error 2. Bevel gear pair toothing spoiled or damaged	1. Replace the bevel gear pair
1. Ball bearings on the wheel axle damaged	1. Replace the wheel bearings

Installing

- Insert the transmission casing on the swingarm making sure that the universal joint engages correctly.



- Tighten the four screws to the prescribed torque operating diagonally.



- Place the reaction rod into its seat.
- Insert the screw.
- Screw the nut fixing the reaction rod.



- Place the dust-protection ring between the rim and the cardan shaft taking care to mount it with the collar facing the transmission unit.



- Place the speed sensor on the fork and screw the two screws.
- Fit the rear wheel.
- Place the rear brake calliper on the disc and the brake pipe on the fork.



Exhaust

Removing the tail pipe

- Loosen the fixing clamps.



- Undo and remove the internal screw collecting the two washers.



- Undo and remove the external screw collecting the nut and the washer.



Removing the exhaust manifold

OPERATIONS VALID FOR BOTH MANIFOLDS

- Loosen the fixing clamps.



- Unscrew and remove the nuts from the head stud bolts.




- Remove the exhaust manifolds.
- Disconnect the lambda sensor connector.



-
- Cut the clamp.



-
- Slide off the manifold - terminal coupling mounting brackets from the vibration-damping rubber rings.

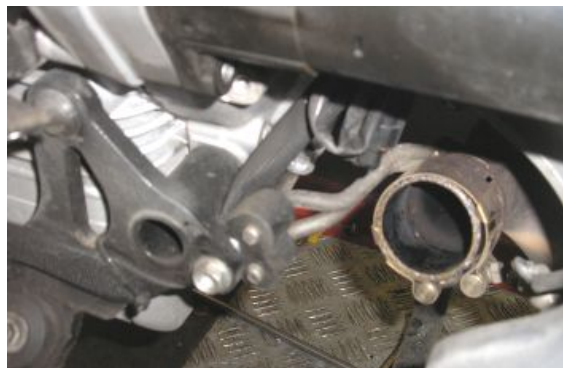

-
- Remove the manifold - terminal coupling.



INDEX OF TOPICS

BRAKING SYSTEM

BRAK SYS

Removal

OPERATIONS VALID FOR BOTH CALLIPERS

- Undo and remove the two screws and collect the spacers.



- Remove the front brake calliper.



Front brake pads

Removal

- Remove the front brake calliper.

- Remove the split pin.



- Slide off the pin.



- Extract one pad at a time.

CAUTION

AFTER REMOVING THE PADS, DO NOT OPERATE THE BRAKE LEVER OR THE CALLIPER PLUNGERS COULD GO OUT OF THEIR SEATS RESULTING IN BRAKE FLUID LEAKS.



Rear brake pads

Removal

- Remove the rear brake calliper.

- Remove the lock.



- Remove the pin.



- Extract one pad at a time.

CAUTION

AFTER REMOVING THE PADS, DO NOT OPERATE THE BRAKE LEVER OR THE CALLIPER PLUNGERS COULD GO OUT OF THEIR SEATS RESULTING IN BRAKE FLUID LEAKS.




INDEX OF TOPICS

BODYWORK

BODYW

Air box

- Remove the air filter.
- Undo and remove the three lower screws from the bracket.

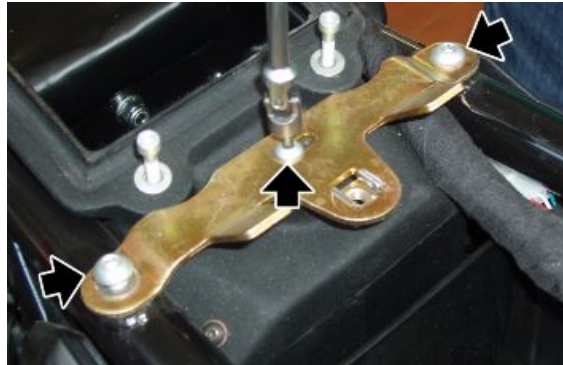

- Slide off the oil vapour recovery pipe from the blow-by tank.



- Loosen the clamps on the throttle bodies and slide off the manifolds.



- Slide off the filter casing breather pipe.



- Lift the filter casing slightly.
- Operating inside the filter slightly, unscrew and remove the oil vapour recovery joint.
- Collect the gasket.
- Remove the filter casing by lifting it.



See also

Air filter

Fuel tank

- Unscrew and remove the rear screw.



- Disconnect the fuel pipe.



- Lift the fuel tank partially.
- Disconnect the two connectors.



- Slide off the fuel breather pipe.
- Remove the fuel tank.

Battery

REMOVAL

- Remove the saddle.
- Disconnect the connector.



- Slide off the fuse boxes.




- Undo and remove the two screws.



- Disconnect the elastic and remove the battery cover.



- Undo and remove the screws fixing the terminals.

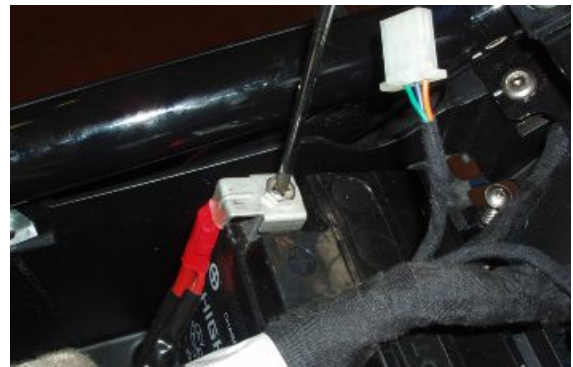

- Remove the battery.
-

INDEX OF TOPICS

PRE-DELIVERY

PRE DE

Carry out the listed checks before delivering the motorcycle.

WARNING

HANDLE FUEL WITH CARE.

Aesthetic inspection

- Paintwork
 - Fitting of Plastic Parts
 - Scratches
 - Dirt
-

Tightening torques inspection

- Safety fasteners:
 - front and rear suspension unit
 - front and rear brake calliper retainer unit
 - front and rear wheel unit
 - engine - chassis retainers
 - steering assembly
 - Plastic parts fixing screws
-

Electrical system

- Main switch
 - Headlamps: high beam lights, low beam lights, tail lights (front and rear) and their warning lights
 - Headlight adjustment according to regulations in force
 - Front and rear stop light switches and their bulbs
 - Turn indicators and their warning lights
 - Instrument panel lights
 - Instrument panel: fuel and temperature indicator (if present)
 - Instrument panel warning lights
 - Horn
 - Electric starter
 - Engine stop via emergency stop switch and side stand
 - Helmet compartment electrical opening switch (if present)
-

- Through the diagnosis tool, check that the last mapping version is present in the control unit/s and, if required, program the control unit/s again: consult the technical service website to know about available upgrades and details regarding the operation.

CAUTION

TO ENSURE MAXIMUM PERFORMANCE, THE BATTERY MUST BE CHARGED BEFORE USE. INADEQUATE CHARGING OF THE BATTERY WITH A LOW LEVEL OF ELECTROLYTE BEFORE IT IS FIRST USED SHORTENS BATTERY LIFE.

CAUTION

UPON INSTALLING THE BATTERY, ATTACH THE POSITIVE LEAD FIRST AND THEN THE NEGATIVE ONE, AND PERFORM THE REVERSE OPERATION UPON REMOVAL.

WARNING

THE BATTERY ELECTROLYTE IS POISONOUS AS IT MAY CAUSE SERIOUS BURNS. IT CONTAINS SULPHURIC ACID. AVOID CONTACT WITH YOUR EYES, SKIN AND CLOTHING. IN CASE OF CONTACT WITH YOUR EYES OR SKIN, WASH WITH ABUNDANT WATER FOR APPROX. 15 MIN. AND SEEK MEDICAL ATTENTION IMMEDIATELY. IF ACCIDENTALLY SWALLOWED, IMMEDIATELY DRINK LARGE QUANTITIES OF WATER OR VEGETABLE OIL. SEEK MEDICAL ATTENTION IMMEDIATELY. BATTERIES PRODUCE EXPLOSIVE GASES; KEEP CLEAR OF NAKED FLAMES, SPARKS OR CIGARETTES. VENTILATE THE AREA WHEN RECHARGING INDOORS. ALWAYS WEAR EYE PROTECTION WHEN WORKING IN THE PROXIMITY OF BATTERIES. KEEP OUT OF THE REACH OF CHILDREN.

CAUTION

NEVER USE FUSES WITH A CAPACITY HIGHER THAN THE RECOMMENDED CAPACITY. USING A FUSE OF UNSUITABLE RATING MAY SERIOUSLY DAMAGE THE VEHICLE OR EVEN CAUSE A FIRE.

Levels check

- Hydraulic braking system fluid level
- Clutch system fluid level (if present)
- Gearbox oil level (if present)
- Transmission oil level (if present)
- Engine coolant level (if present)
- Engine oil level
- Mixer oil level (if present)

Road test

- Cold start
- Instrument panel operation

- Response to throttle control
 - Stability when accelerating and braking
 - Front and rear brake efficiency
 - Front and rear suspension efficiency
 - Abnormal noise
-

Static test

Static check after test drive:

- Restarting when warmed up
 - Starter operation (if present)
 - Minimum holding (turning the handlebar)
 - Uniform turning of the steering
 - Possible leaks
 - Radiator electric fan operation (if present)
-

Functional inspection

- Hydraulic braking system
- Stroke of brake and clutch levers (if present)
- Clutch - Check for correct operation
- Engine - Check for correct general operation and absence of abnormal noise
- Other
- Documentation check:
- Chassis and engine numbers check
- Supplied tools check
- License plate fitting
- Locks checking
- Tyre pressure check
- Installation of mirrors and any possible accessories



NEVER EXCEED THE RECOMMENDED INFLATION PRESSURES AS TYRES MAY BURST.

CAUTION



CHECK AND ADJUST TYRE PRESSURE WITH TYRES AT AMBIENT TEMPERATURE.

A

Air filter: 32, 207

Air temperature sensor: 56, 68

Alternator:

B

Battery: 45, 49, 208

Brake: 202, 203

Brake pads: 202, 203

C

Chain: 121, 124–126

Clutch: 66, 98, 101–103, 106, 108, 109

Coil: 62

Connectors: 70

Crankcase: 19, 139

Crankshaft: 19, 139, 141, 143

Cylinder: 18, 112, 114, 117, 133–137, 141

D

Desmodromic drum: 100

Display: 157

E

ECU: 70

Electrical system: 12, 38, 39, 211

Engine oil: 29

Engine temperature sensor: 54

Exhaust: 198, 199

Exhaust manifold: 199

F

Fairings:

Fork: 160, 163, 165

Forks: 100

Front wheel: 160

Fuel: 33, 62, 207

Fuel pump: 62

Fuses: 47

G

Gearbox oil: 31

H

Handlebar:

Head cover: 111, 115, 139

I

Identification: 10

Instrument panel: 68

M

Maintenance: 8, 27

O

Oil pressure sensor: 64

Oil sump: 145

P

Primary shaft: 94, 99, 101

R

Rear wheel: 174

Recommended products: 20

Run/Stop switch: 69

S

Secondary shaft: 96, 100, 101

Shock absorbers: 174

Side stand: 67

Side stand sensor: 67

Speed sensor: 50

Stand: 67

Start-up: 46

Starter motor: 89, 105

T

Tank: 33, 207

Throttle body: 148

Transmission: 12, 28

Tyres: 14

V

Voltage regulator: 46

W

Wiring diagram: 40