



**BMW
MOTORRAD**

RIDER'S MANUAL

S 1000 R



MAKE LIFE A RIDE

Vehicle data

Model

Vehicle Identification Number

Colour code

Date of first registration

Registration number

Dealership details

Person to contact in Service department

Ms/Mr

Phone number

Dealership address/phone number (company stamp)

YOUR BMW.

We congratulate you on your choice of a vehicle from BMW Motorrad and welcome you to the community of BMW riders. Familiarise yourself with your new vehicle so that you can ride it safely and confidently in all traffic situations.

About this rider's manual

Read this rider's manual carefully before starting to use your new BMW. It contains important information on how to operate the controls and how to make the best possible use of all your BMW's technical features.

In addition, it contains information on maintenance and care to help you maintain your vehicle's reliability and safety, as well as its value.

If the time comes to sell your BMW, please remember to hand over this rider's manual to the new owner. It is an important part of the vehicle.

We hope you will enjoy riding your BMW and that all your journeys will be pleasant and safe

BMW Motorrad.

01 GENERAL INSTRUCTIONS	2	03 STATUS INDICATORS	26
Overview	4	Indicator and warning lights	28
Abbreviations and symbols	4	TFT display in Pure Ride view	29
Equipment	5	TFT display in Menu view	30
Technical data	5	Warning indicators	31
Currency	6		
Additional sources of information	6	04 OPERATION	60
Certificates and operating licences	6	Ignition switch/steering lock	62
Data memory	6	Ignition with Keyless Ride	63
Intelligent emergency call system	11	Electronic immobiliser (EWS)	66
		Emergency-off switch (kill switch)	67
02 GENERAL VIEWS	16	Intelligent emergency call	67
General view, left side	18	Lighting	70
General view, right side	19	Dynamic Traction Control (DTC)	74
Under the rider's seat	20	Electronic Suspension Adjustment (DDC)	75
Multifunction switch, left	21	Riding mode	78
Multifunction switch, right	22	Riding mode PRO	79
Multifunction switch, right	23	Adaptive cruise control	80
Instrument cluster	24	Hill Start Control	83
		Shift light	86
		Anti-theft alarm (DWA)	86
		Tyre pressure control (RDC)	89
		Heated grips	89
		Front and rear seats	90

05 TFT DISPLAY	92	Securing motorcycle for transportation	143
General notes	94		
Principle	95		
Pure Ride view	101	08 ON THE RACE TRACK	146
General settings	102		
Bluetooth	103	Status indicators for racing	148
My vehicle	106	LAPTIMER	151
Navigation	109	Vehicle settings for racing	152
Media	111	Launch Control	153
Telephone	111	Pit Lane Limiter	155
Display software version	112	Removing and installing number-plate carrier	156
Display licence information	112	Removing and installing front turn indicators	159
		M Cover Kit	161
06 ADJUSTMENT	114	Deactivating intelligent emergency call when riding on the race track	162
Mirrors	116	Gearshift-pattern reverser	164
Headlight	116	Removing/installing mirrors	165
Brakes	117		
Clutch	118	09 ENGINEERING DETAILS	166
Footrest system	118		
Spring preload	120	General notes	168
Damping	124	Antilock Brake System (ABS)	168
		Dynamic traction control (DTC)	172
07 RIDING	128		
Safety information	130		
Regular check	132		
Starting	133		
Running in	136		
Shifting gear	137		
Brakes	138		
Parking your motorcycle	141		
Refuelling	141		

Dynamic engine brake control	173
Dynamic Damping Control (DDC)	174
Riding mode	174
Dynamic Brake Con- trol	177
Tyre pressure control (RDC)	178
Gear Shift Assistant	179
Hill Start Control	181
Adaptive Headlight	182

10 MAINTENANCE 184

General notes	186
Toolkit	187
Front-wheel stand	188
Rear-wheel stand	188
Engine oil	189
Brake system	190
Clutch	195
Coolant	197
Tyres	198
Wheel rims	199
Wheels	199
Chain	207
Lighting	210
Trim panel compon- ents	211
Jump-starting	215
Battery	216
Fuses	220
Diagnostic connector	221

11 ACCESSORIES 224

General notes	226
Connector for op- tional accessories	226
USB charging socket	228

12 CARE 230

Care products	232
Washing the vehicle	232
Cleaning easily dam- aged components	233
Care of paintwork	234
Paintwork preserva- tion	235
Laying up motorcycle	235
Restoring motorcycle to use	235

13 TECHNICAL DATA 236

Troubleshooting chart	238
Threaded fasteners	240
Fuel	242
Engine oil	243
Coolant	243
Engine	243
Clutch	244
Transmission	244
Final drive	245
Frame	245
Chassis and suspension	245
Brakes	246
Wheels and tyres	246
Electrical system	248
Anti-theft alarm	249

Dimensions	249	Declaration of con-	
Weights	250	formity for tyre pres-	
Performance figures	251	sure control (RDC)	292
<hr/>		Certificate for tyre	
14 SERVICE	252	pressure control	
		(RDC)	298
Reporting safety-rel-		Declaration of con-	
evant defects	254	formity for TFT in-	
BMW Motorrad		strument cluster	299
Service	255	Certificate for TFT	
BMW Motorrad		instrument cluster	305
Service history	255	Declaration of con-	
BMW Motorrad mo-		formity for intelligent	
bility services	256	emergency call	308
Maintenance work	256	Declaration of con-	
BMW Motorrad		formity for anti-theft	
Service	256	alarm system	314
Maintenance sched-		<hr/>	
ule	258	INDEX	320
Maintenance confirm-			
ations	259		
Service confirmations	271		
<hr/>			
APPENDIX	274		
Declaration of con-			
formity for electronic			
immobiliser	275		
Certificate for elec-			
tronic immobiliser	281		
Declaration of			
conformity for			
Keyless Ride	283		
Certificate for Key-			
less Ride	288		

GENERAL INSTRUCTIONS

01


OVERVIEW	4
ABBREVIATIONS AND SYMBOLS	4
EQUIPMENT	5
TECHNICAL DATA	5
CURRENCY	6
ADDITIONAL SOURCES OF INFORMATION	6
CERTIFICATES AND OPERATING LICENCES	6
DATA MEMORY	6
INTELLIGENT EMERGENCY CALL SYSTEM	11


4 GENERAL INSTRUCTIONS


OVERVIEW


Chapter 2 of this rider's manual will provide you with an initial overview of your motorcycle. All maintenance and servicing work on the motorcycle is documented in the "Service" section. The record of the maintenance work you have had performed on your vehicle is a precondition for generous treatment of goodwill claims. If the time comes to sell your BMW, please remember to hand over this rider's manual to the new owner. It is an important part of the motorcycle.

ABBREVIATIONS AND SYMBOLS


 **CAUTION** Low-risk hazard. Non-avoidance can lead to slight or moderate injury.


 **WARNING** Medium-risk hazard. Non-avoidance can lead to fatal or severe injury.


 **DANGER** High-risk hazard. Non-avoidance leads to fatal or severe injury.

 **ATTENTION** Special notes and precautionary measures. Non-compliance can lead to damage to the vehicle or ac-

cessory and, consequently, to voiding of the warranty.

 **NOTICE** Specific instructions on how to operate, control, adjust or look after items of equipment on the vehicle.

- Instruction.
- » Result of an activity.
-  Reference to a page with more detailed information.
- ◁ Indicates the end of a passage relating to specific accessories or items of equipment.

 Tightening torque.

 Technical data.

NV National-market version.

OE Optional equipment. The vehicles are assembled complete with all the BMW Motorrad optional equipment originally ordered.

OA	Optional accessories. You can obtain BMW Motorrad optional accessories through your authorised BMW Motorrad dealer; optional accessories have to be retrofitted to the vehicle.
ABS	Anti-lock brake system.
DDC	Dynamic Damping Control.
DTC	Dynamic Traction Control.
DWA	Anti-theft alarm.
EWS	Electronic immobiliser.
RDC	Tyre pressure monitoring.

EQUIPMENT

When you ordered your BMW Motorrad, you chose various items of custom equipment. These operating instructions describe the optional equipment (OE) offered by BMW and selected optional accessories (OA). This explains why the manual may also contain descriptions of equipment that you might

not have selected. Please note, too, that on account of country-specific differences, your motorcycle might not be exactly as illustrated. If your motorcycle contains equipment that has not been described, its description can be found in a separate manual.

TECHNICAL DATA

All dimensions, weights and power ratings stated in the operating instructions are quoted to the standards and comply with the tolerance requirements of the Deutsches Institut für Normung e.V. (DIN). Technical data and specifications in this rider's manual serve as reference points. The vehicle-specific data may deviate from these, for example as a result of selected optional equipment, the national-market version or country-specific measuring procedures. Detailed values can be taken from the vehicle registration documents, or can be obtained from your authorised BMW Motorrad retailer or another qualified service partner or specialist workshop. The specifications in the vehicle documents always have priority over the inform-

6 GENERAL INSTRUCTIONS

ation provided in this rider's manual.

CURRENCY

The high safety and quality standards of BMW motorcycles are maintained by constant development work on designs, equipment and accessories. Because of this, your motorcycle may differ from the information supplied in the Rider's Manual. Nor can BMW Motorrad entirely rule out errors and omissions. We hope you will appreciate that no claims can be entertained on the basis of the data, illustrations or descriptions in these operating instructions.

ADDITIONAL SOURCES OF INFORMATION

Authorised BMW Motorrad retailer

Your authorised BMW Motorrad retailer will be happy to answer any questions you may have.

Internet

The operating instructions for your vehicle, operating and installation instructions for accessories and general information about BMW Motorrad, in relation to

technology, for example, are available for download from www.bmw-motorrad.com/manuals.

CERTIFICATES AND OPERATING LICENCES

The certificates for the vehicle and the official operating licences for accessories can be downloaded from bmw-motorrad.com/certification.

DATA MEMORY

General

Control units are installed in the vehicle. Control units process data that they receive, for example, from vehicle sensors, or that they generate themselves or exchange between each other. Some control units are required for the vehicle to function safely or provide assistance during riding, for example assistance systems. In addition, control units enable comfort or infotainment functions.

Information on data that has been stored or exchanged can be obtained from the manufacturer of the vehicle, for example via a separate booklet.

Personal reference

Each vehicle is identified with a clear vehicle identification number. Depending on the country, the vehicle identification number, the number plate and the corresponding authorities can be referenced to ascertain the vehicle owner. There are also other ways to use data obtained from the vehicle to trace the rider or vehicle owner, for example using the Connected-Drive user account.

Data protection rights

In accordance with applicable data protection laws, vehicle users have certain rights in relation to the manufacturer of the vehicle or in relation to companies which collect or process personal data. Vehicle users have the right to obtain full information at no cost from persons or entities storing personal data of the vehicle user.

These entities may include:

- Manufacturer of the vehicle
- Qualified service partners
- Specialist workshops
- Service providers

Vehicle users have the right to request information on what personal data has been stored, for what purpose the data

is used, and where the data comes from. To obtain this information, proof of ownership or use is required.

The right to information also includes information about data that has been shared with other companies or entities. The website of the vehicle manufacturer contains the applicable data protection information. This data protection information includes information on the right to have data deleted or corrected. The manufacturer of the vehicle also provides their contact details and those of the data protection officer on their website.

The vehicle owner can also request that a BMW Motorrad retailer or another qualified service partner or specialist workshop read out the data that is stored in the vehicle for a charge.

The vehicle data is read out using the legally prescribed socket for on-board diagnosis (OBD) in the vehicle.

8 GENERAL INSTRUCTIONS

Legal requirements for the disclosure of data

As part of its legal responsibilities, the manufacturer of the vehicle is obligated to make its stored data available to the relevant authorities. This data is provided in the required scope in individual cases, for example to clarify a criminal offence. In the context of applicable laws, public agencies are entitled in individual cases to read out data from the vehicle themselves.

Operating data in the vehicle

Control units process data to operate the vehicle.

This includes, for example:

- Status reports of the vehicle and its individual components, for example wheel revolutions, wheel speed, deceleration
- Environmental conditions, for example temperature

The data is only processed in the vehicle itself and is generally non-permanent. The data is not stored beyond the operating period.

Electronic components, for example control units, contain components for storing technical information. Information can be temporarily or permanently stored on the vehicle con-

dition, component loads, incidents or errors.

This information is generally used to document the condition of a component, a module, a system or the surrounding area, for example:

- Operating conditions of system components, for example filling levels, tyre pressure
- Malfunctions and faults in important system components, for example light and brakes
- Response of the vehicle in special riding situations, for example engagement of the driving dynamics systems
- Information on incidents resulting in damage to the vehicle

The data is necessary for the provision of control unit functions. Furthermore, the data is used to detect and rectify malfunctions and to enable the vehicle manufacturer to optimise vehicle functions.

The vast majority of this data is non-permanent and is only processed in the vehicle itself. Only a small amount of the data is stored in incident or fault memories as required by events.

If services are accessed, for example repairs, service pro-

cesses, warranty cases and quality assurance measures, this technical information can be read out of the vehicle together with the vehicle identification number.

The information can be read out by a BMW Motorrad retailer or another qualified service partner or specialist workshop. The legally stipulated socket for on-board diagnosis (OBD) in the vehicle is used to read out the data. The data is obtained, processed and used by the relevant parts of the retailer network. The data is used to document the technical conditions of the vehicle, to help with error localization, to comply with warranty obligations and to improve quality.

In addition, the manufacturer has various product monitoring obligations arising from product liability legislation. To meet these obligations, the vehicle manufacturer requires technical data from the vehicle. The data from the vehicle can also be used to check warranty claims from the customer. Error and incident memories in the vehicle can be reset during

servicing or repair work by a BMW Motorrad retailer or another qualified service partner or specialist workshop.

Data input and data transfer in the vehicle

General

Depending on the equipment, comfort and customised settings can be stored in the vehicle and can be changed or reset at any time.

This includes, for example:

- Settings of the windscreen position
- Chassis and suspension settings

If required, data can be entered in the entertainment and communication system of the vehicle, for example using a smartphone.

Depending on the individual equipment, this includes:

- Multimedia data, such as music for playback
- Contacts data for use in connection with a communication system or an integrated navigation system
- Entered destinations
- Data on the use of internet services. This data can be stored locally in the vehicle or is located on a device that is connected to the vehicle,

10 GENERAL INSTRUCTIONS

for example smartphone, USB stick, MP3 player. If this data is stored in the vehicle, the data can be deleted at any time.

This data is transferred to third parties only if personally requested within the context of using online services. This depends on the selected settings when using the services.

Incorporation of mobile devices

Depending on the equipment, mobile devices connected to the vehicle, for example smartphones, can be controlled using the operating elements of the vehicle.

The image and sound of the mobile device can then be output via the multimedia system. At the same time, specific information is transferred to the mobile device. Depending on the type of integration, this includes, for example, position data and additional general vehicle information. This enables optimal use of the selected apps, for example navigation or music playback.

The type of additional data processing is determined by the provider of the respective app. The scope of the possible set-

tings depends on the corresponding app and the operating system of the mobile device.

Services

General

If the vehicle has a wireless connection, this enables the exchange of data between the vehicle and other systems. The wireless connection is enabled by the vehicle's own transmitter and receiver unit or using personally integrated mobile devices, for example smartphones. Online functions can be used using this wireless connection. These include online services and apps that are provided by the vehicle manufacturer or by other providers.

Services of the vehicle manufacturer

For online services of the vehicle manufacturer, the individual functions are described at suitable points, for example rider's manual, website of the manufacturer. At the same time, information is also provided on the relevant data protection law. Personal data may be used to provide online services. Data is exchanged using a secure connection, for example with

the IT systems provided by the vehicle manufacturer.

Obtaining, processing and using personal data outside of the normal provision of services requires legal permission, contractual agreement or consent. It is also possible to have the entire data connection activated or deactivated. Statutory functions are excluded from this.

Services from other providers

When using online services from other providers, these services are subject to the responsibility and the data protection and operating conditions of the individual provider. The vehicle manufacturer has no influence on the content that is exchanged in this instance. Information on the type, scope and purpose of the data capture and use of personal data as part of the services of third parties can be ascertained from the individual provider.

INTELLIGENT EMERGENCY CALL SYSTEM

—with intelligent emergency call^{OE}

Principle

The intelligent emergency call system enables manual or automatic emergency calls, for example in the event of an accident.

The emergency calls are received by an emergency call centre that is commissioned by the vehicle manufacturer.

For information on operating the intelligent emergency call system and its functions, please refer to "Intelligent emergency call".

Legal basis

Processing of personal data using the intelligent emergency call system is in line with the following regulations:

—Protection of personal data:

Directive 95/46/EC of the European Parliament and of the Council.

—Protection of personal data:

Directive 2002/58/EC of the European Parliament and of the Council.

The legal basis for the activation and function of the intelli-

12 GENERAL INSTRUCTIONS

gent emergency call system is the concluded ConnectedRide contract for this function, as well as the corresponding laws, ordinances and directives of the European Parliament and of the European Council.

The relevant ordinances and directives regulate the protection of natural persons during the processing of personal data.

The processing of personal data by the intelligent emergency call system satisfies the European directives for the protection of personal data. The intelligent emergency call system processes personal data only with the agreement of the vehicle owner.

The intelligent emergency call system and other services with additional benefits can process personal data only with the express permission of the person affected by the data processing, for example the vehicle owner.

SIM card

The intelligent emergency call system operates via the mobile phone network using the SIM card installed in the vehicle. The SIM card is permanently logged into the mobile phone

network to enable rapid connection setup. Data is sent to the vehicle manufacturer in the event of an emergency.

Improving quality

The data that is transferred in an emergency is also used by the manufacturer of the vehicle to improve product and service quality.

Location determination

The position of the vehicle can be determined exclusively by the mobile phone network provider based on the mobile phone site locations. It is not possible for the provider to trace a connection between the vehicle's VIN and the phone number of the installed SIM card. Only the manufacturer of the vehicle can link a VIN and the phone number of the SIM card installed in a particular vehicle.

Log data of emergency calls

The log data of emergency calls is stored in a memory of the vehicle. The oldest log data is regularly deleted. The log data includes, for example, information on when and where an emergency call was made. In exceptional cases, the log data can be read out of the

vehicle memory. As a rule, log data is only read out following a court order, and this is only possible if the corresponding devices are connected directly to the vehicle.

Automatic emergency call

The system is designed so that, following a sufficiently serious accident, which is detected by sensors in the vehicle, an emergency call is automatically activated.

Sent information

When making an emergency call using the intelligent emergency call system, the system forwards the same information to the designated emergency call centre as is forwarded to the public emergency operations centre by the statutory emergency call system eCall. In addition, the intelligent emergency call system sends the following additional information to an emergency call centre commissioned by the vehicle manufacturer and, if required, to the emergency services:

- Accident data, for example the direction of impact detected by the vehicle sensors, to assist the emergency services response.
- Contact details, for example the phone number of the installed SIM card and the phone number of the rider, if available, to enable rapid contact with those involved in the accident if required.

Data storage

The data for an activated emergency call is stored in the vehicle. The data contains information on the emergency call, for example the location and time of the emergency call. The voice recordings of the emergency call are stored at the emergency call centre. The voice recordings of the customer are stored for 24 hours in case details of the emergency call need to be analysed. After this, the voice recordings are deleted. The voice recordings of the employee of the emergency call centre are stored for 24 hours for quality assurance purposes.

14 GENERAL INSTRUCTIONS

Information on personal data

The data that is processed as part of the intelligent emergency call is processed exclusively to carry out the emergency call. As part of its statutory obligation, the manufacturer of the vehicle provides information about the data that it has processed and any data that it still has stored.


GENERAL VIEWS

02


GENERAL VIEW, LEFT SIDE	18
GENERAL VIEW, RIGHT SIDE	19
UNDER THE RIDER'S SEAT	20
MULTIFUNCTION SWITCH, LEFT	21
MULTIFUNCTION SWITCH, RIGHT	22
MULTIFUNCTION SWITCH, RIGHT	23
INSTRUMENT CLUSTER	24

18 GENERAL VIEWS

GENERAL VIEW, LEFT SIDE

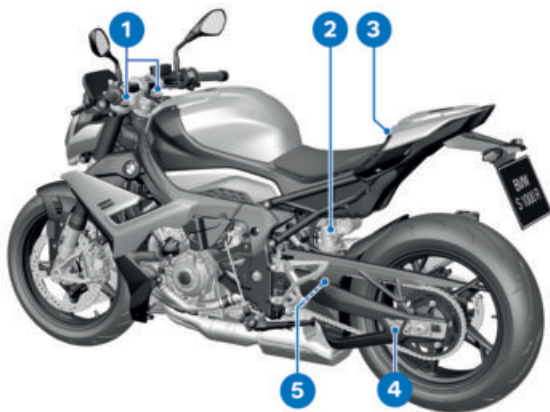


- | | |
|---|---|
| <p>1 Rebound-stage damping, front wheel (➡ 125)
Spring preload at front wheel (➡ 120)
Compression-stage damping, front wheel (➡ 125)</p> <p>2 Compression-stage damping, rear wheel (➡ 126)
Spring preload at rear wheel (➡ 122)
—with Dynamic Damping Control (DDC)^{OE}
Adjust the suspension damping (➡ 76).</p> <p>3 Lock for tail-hump cover (➡ 90)</p> <p>4 Tyre pressures table
Chain settings</p> | <p>5 Rebound-stage damping, rear wheel (➡ 127)</p> |
|---|---|

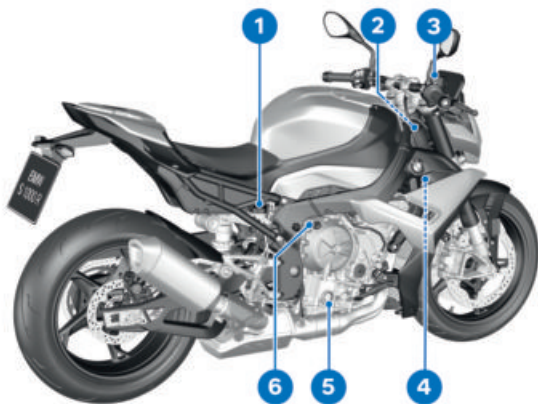GENERAL VIEW, RIGHT SIDE


- 1** Brake-fluid reservoir, rear
(194)
- 2** Vehicle identification
number (on steering-head
bearing)
Type plate (on steering-
head bearing)
- 3** Brake-fluid reservoir, front
(193)
- 4** Coolant expansion tank
(197)
- 5** Engine oil level indicator
(189)
- 6** Oil filler opening (190)

20 GENERAL VIEWS

UNDER THE RIDER'S SEAT

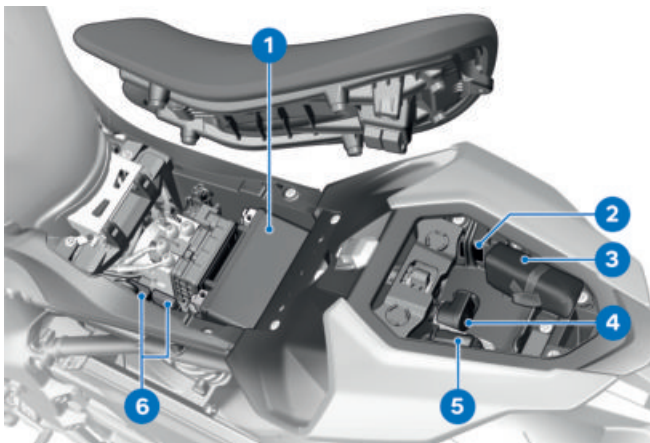

- 1 Battery (➡ 216)
- 2 Payload table
- 3 Toolkit (➡ 187)
- 4 USB charging socket
(➡ 228)
- 5 Diagnostic connector
(➡ 221)
- 6 Fuses (➡ 220)

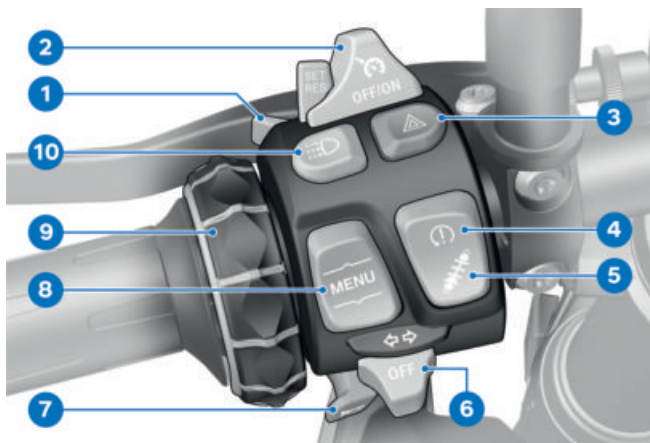MULTIFUNCTION SWITCH, LEFT

- | | |
|--|---------------------------------------|
| 1 High-beam headlight and headlight flasher (➡ 70) | 10 Manual daytime riding light (➡ 71) |
| 2 Adaptive cruise control (➡ 81) | |
| 3 Hazard warning lights (➡ 73) | |
| 4 Dynamic Traction Control (DTC) (➡ 74) | |
| 5 Dynamic Damping Control (DDC) (➡ 75) | |
| 6 Turn indicators (➡ 73) | |
| 7 Horn | |
| 8 MENU rocker button (➡ 95) | |
| 9 Multi-Controller Controls (➡ 95) | |

22 GENERAL VIEWS

MULTIFUNCTION SWITCH, RIGHT



—with intelligent emergency
call^{OE}

- 1 Heated grips (➡ 89)
- 2 Riding mode (➡ 78)
- 3 Emergency-off switch (kill switch) (➡ 67)
- 4 Starter button (➡ 133)
- 5 SOS button
Intelligent emergency call
(➡ 68)


MULTIFUNCTION SWITCH, RIGHT

—without intelligent emergency
call^{OE}

- 1** Heated grips (▮▮▮ 89)
- 2** Riding mode (▮▮▮ 78)
- 3** Emergency-off switch (kill
switch) (▮▮▮ 67)
- 4** Starter button (▮▮▮ 133)

24 GENERAL VIEWS

INSTRUMENT CLUSTER

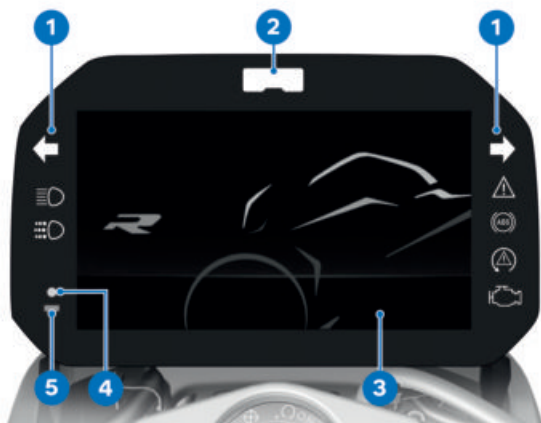

- 1** Indicator and warning lights (➡ 28)
- 2** Shift light (➡ 138)
- 3** TFT display (➡ 29)
- 4** Indicator light
DWA (➡ 87)
Keyless Ride (➡ 63)
- 5** Photosensor (for adapting the brightness of the instrument lighting)


STATUS INDICATORS

03

INDICATOR AND WARNING LIGHTS	28
TFT DISPLAY IN PURE RIDE VIEW	29
TFT DISPLAY IN MENU VIEW	30
WARNING INDICATORS	31


28 STATUS INDICATORS

INDICATOR AND WARNING LIGHTS

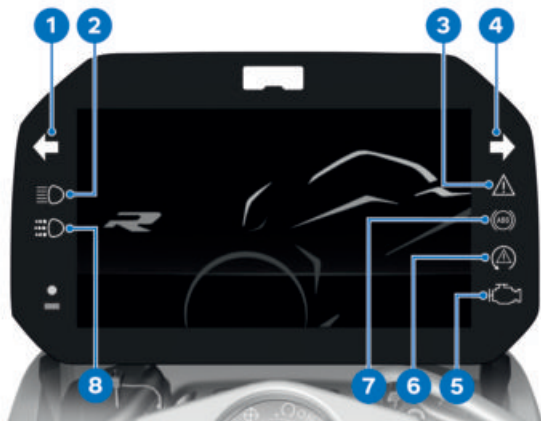

- 1 Turn indicators, left
(73)
- 2 High-beam headlight
(70)
- 3 General warning light
(31)
- 4 Turn indicators, right
(73)
- 5 Warning light, drive mal-
function (44)
- 6 DTC (53)
- 7 ABS
- 8 Manual daytime riding
light (71)


TFT DISPLAY IN PURE RIDE VIEW

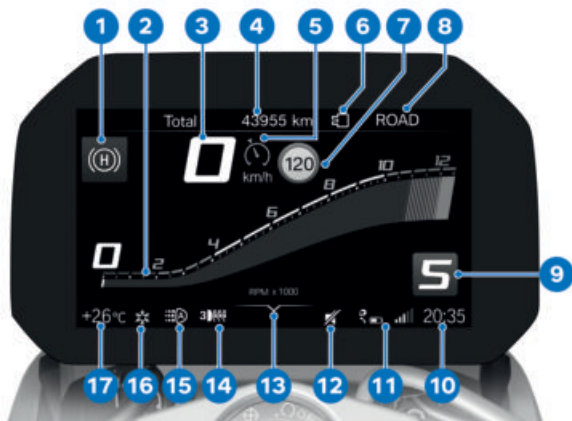

- | | |
|---|--|
| 1 Hill Start Control (➡ 55) | 14 Heating stages, handlebar grips (➡ 89) |
| 2 Rev. counter (➡ 101) | 15 Automatic daytime riding light (➡ 72) |
| 3 Speedometer | 16 Outside temperature warning (➡ 38) |
| 4 Status line, top (➡ 99) | 17 Ambient temperature |
| 5 Adaptive cruise control (➡ 81) | |
| 6 Riding mode DYNAMIC PRO (➡ 79) | |
| 7 Speed Limit Info (➡ 100) | |
| 8 Riding mode (➡ 78) | |
| 9 Gear indicator; "N" indicates neutral. | |
| 10 Clock (➡ 102) | |
| 11 Connection status (➡ 104) | |
| 12 Muting (➡ 102) | |
| 13 Operating help | |

30 STATUS INDICATORS

TFT DISPLAY IN MENU VIEW

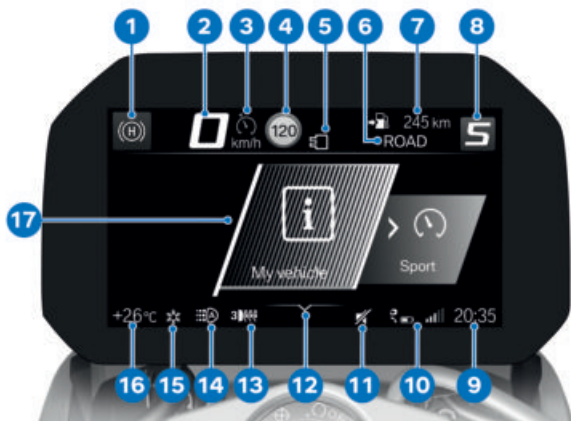

- | | |
|---|--|
| 1 Hill Start Control (➡ 55) | 13 Heating stages, handlebar grips (➡ 89) |
| 2 Speedometer | 14 Automatic daytime riding light (➡ 72) |
| 3 Adaptive cruise control (➡ 81) | 15 Outside temperature warning (➡ 38) |
| 4 Speed Limit Info (➡ 100) | 16 Ambient temperature |
| 5 Riding mode DYNAMIC PRO (➡ 79) | 17 Menu section |
| 6 Riding mode (➡ 78) | |
| 7 Status line, top (➡ 99) | |
| 8 Gear indicator; "N" indicates neutral. | |
| 9 Clock (➡ 102) | |
| 10 Connection status (➡ 104) | |
| 11 Muting (➡ 102) | |
| 12 Operating help | |

WARNING INDICATORS


Mode of presentation

Warnings are indicated by the corresponding warning lights. Warnings are indicated by the 'General' warning light showing in combination with a dialogue in the TFT display. The 'General' warning light shows yellow or red, depending on the urgency of the warning.



The status of the 'General' warning light matches the most urgent warning. The possible warnings are listed on the next pages.

- Green CHECK OK **1**: no message, optimum values.
- White circle with small "i" **2**: information.
- Yellow warning triangle **3**: warning, value not ideal.
- Red warning triangle **3**: warning, value critical

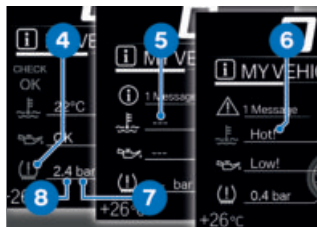

Values display

Symbols **4** differ in how they show on the display. The colours used differ and reflect the urgency of the message. Along with numerical values **8** with units **7**, texts **6** are displayed as well:

Colour of the symbol

- Green: (OK) Current value is ideal.
- Blue: (Cold!) Current temperature is too low.
- Yellow: (Low! / High!) Current value is too low or too high.
- Red: (Hot! / High!) Current temperature or value is too high.




Check Control display


The messages differ in how they show on the display. Different colours and symbols are used depending on priority:


32 STATUS INDICATORS

–White: (---) No valid value available. Dashes **5** are displayed instead of a numerical value.

 The assessment of some values is only possible from a certain journey duration or speed. If a measured value is still not being displayed because the conditions for measurement have not been met, dashes are displayed instead as a placeholder. If there are no valid measured values, there will be no assessment in the form of a coloured symbol.

ledged by tilting the Multi-Controller to the left.

–Check Control messages are dynamically attached as additional tabs on the pages in the menu *My vehicle* ( 97). You can go to the message again as long as the fault persists.

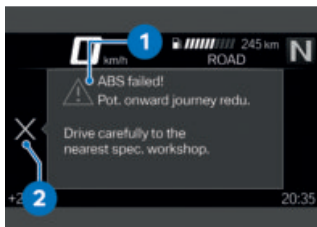























Check Control dialogue

Messages are output as Check Control dialogues **1**.




















–If there are two or more Check Control messages of equal priority, the messages keep changing in the order of their occurrence until they are acknowledged.



















–If symbol **2** is actively displayed, it can be acknow-

Warnings, overview






















Indicator and warning lights	Display text	Meaning
	 appears on the display.	Outside temperature warning (➡ 38)
 lights up yellow.	 Remote key not in range.	Radio-operated key out of range (➡ 38)
 lights up yellow.	 Remote key battery at 50%.	Replace battery of radio-operated key (➡ 39)
	 Remote key battery weak.	
 lights up yellow.	 Keyless Ride failure	Keyless Ride failed (➡ 39)
	 is displayed in yellow.	Voltage of the vehicle electrical system too low (➡ 39)
	 Vehicle voltage low.	
 lights up yellow.	 is displayed in yellow.	Voltage of the vehicle electrical system critical (➡ 40)
	 Vehicle voltage critical!	
 flashes yellow.	 is displayed in yellow.	Charging voltage critical (➡ 40)
	 Battery voltage critical!	
 lights up yellow.	 The faulty bulb is displayed.	Bulb faulty (➡ 41)
 flashes yellow.	 The faulty bulb is displayed.	
 lights up yellow.	 Light control failure!	Light control failed (➡ 42)













34 STATUS INDICATORS

Indicator and warning lights	Display text	Meaning
	 Alarm system batt. capacity weak.	Anti-theft alarm battery weak (▮▮▮▮➔ 42)
	 Alarm system battery empty.	Anti-theft alarm battery flat (▮▮▮▮➔ 43)
	 Alarm system failure	DWA failed (▮▮▮▮➔ 43)
 lights up yellow.	 Coolant temperature too high!	Coolant temperature too high (▮▮▮▮➔ 43)
 lights up.	 Engine!	Drive malfunction (▮▮▮▮➔ 44)
 flashes red.	 Serious fault in the engine control!	Serious drive malfunction (▮▮▮▮➔ 44)
 flashes.		
 flashes red.	 Serious fault in the engine control!	Severe fault in the engine control (▮▮▮▮➔ 45)
 lights up yellow.	 No communication with engine control.	Engine control failed (▮▮▮▮➔ 45)
 lights up.		
 lights up yellow.	 Fault in the engine control.	Engine in emergency-operation mode (▮▮▮▮➔ 45)
 lights up yellow.	 is displayed in yellow.	Tyre pressure close to limit of permitted tolerance (▮▮▮▮➔ 47)

Indicator and warning lights	Display text	Meaning
	 Tyre pressure does not match setpoint	Tyre pressure close to limit of permitted tolerance (▮▮▮ 47)
 flashes red.	 is displayed in red.	Tyre pressure outside permitted tolerance (▮▮▮ 48)
	 Tyre pressure does not match setpoint	
	 Tyre press. control. Loss of pressure.	
	 "----"	Transmission fault (▮▮▮ 49)
 lights up yellow.	 RDC sensor battery weak.	Battery for tyre pressure sensor weak (▮▮▮ 49)
 lights up yellow.	 "----"	Sensor faulty or system fault (▮▮▮ 50)
 lights up yellow.	 Tyre pressure check failure!	Tyre pressure control (RDC) failed (▮▮▮ 50)
	 Drop sensor faulty.	Drop sensor defective (▮▮▮ 50)
	 Cannot start engine.	Motorcycle dropped (▮▮▮ 50)
 lights up yellow.	 Emergency call failure.	Emergency call function restricted (▮▮▮ 51)
 lights up yellow.	 Side stand monitoring faulty.	Side stand monitoring is faulty (▮▮▮ 51)

36 STATUS INDICATORS

Indicator and warning lights	Display text	Meaning
 flashes.		ABS self-diagnosis not completed (▬▬▬ 51)
 lights up yellow.	 Limited ABS availability!	ABS fault (▬▬▬ 52)
 lights up.		
 lights up yellow.	 ABS failure!	ABS failed (▬▬▬ 52)
 lights up.		
 lights up yellow.	 ABS Pro failure!	ABS Pro failed (▬▬▬ 52)
 lights up.		
 quick-flashes.		DTC intervention (▬▬▬ 53)
 slow-flashes.		DTC self-diagnosis not completed (▬▬▬ 53)
 lights up.	 Off!	DTC switched off (▬▬▬ 53)
	 Traction control deactivated.	
 lights up yellow.	 Traction control failure!	DTC fault (▬▬▬ 53)
 lights up.		
 lights up yellow.	 Traction control limited!	DTC restricted (▬▬▬ 54)
 lights up.		

Indicator and warning lights	Display text	Meaning
 lights up yellow.	 Spring strut adjustment faulty!	DDC fault (▮▮▮ 55)
	 lights up.	Fuel down to reserve (▮▮▮ 55)
	 shows green.	Hill Start Control active (▮▮▮ 55)
	 flashes yellow.	Hill Start Control automatically deactivated (▮▮▮ 56)
	 is displayed.	Hill Start Control cannot be activated (▮▮▮ 56)
	 The gear indicator flashes.	Gear not taught (▮▮▮ 56)
 flashes green.		Hazard warning lights system is switched on (▮▮▮ 56)
 flashes green.		
Shift light lights up or flashes.	L-Con not available. Clutch too hot. is displayed.	Launch Control not ready (▮▮▮ 57)
	 is displayed in white. Service due!	Service due (▮▮▮ 57)
 lights up yellow.	 is displayed in yellow. Service overdue!	Service-due date has passed (▮▮▮ 57)

38 STATUS INDICATORS

Ambient temperature

The ambient temperature is displayed status line of the TFT display.

When the vehicle is at a standstill, the heat of the engine can falsify the ambient-temperature reading. If the heat of the engine is affecting it too much, dashes are temporarily shown in place of the value.



There is a risk of black ice if the ambient temperature falls below the following limit value.



Limit value for the ambient temperature

approx. 3 °C

The first time the temperature drops below this value, the ambient-temperature reading and the ice crystal symbol flash in the status line of the TFT display.

Outside temperature warning



appears on the display.

Possible cause:



The air temperature measured at the vehicle is lower than:

approx. 3 °C



WARNING

Risk of black ice also applicable at over 3 °C

Risk of accident

- Always take extra care when temperatures are low; remember that there is particular danger of black ice forming on bridges and where the road is in shade.

- Ride carefully and think well ahead.

Radio-operated key out of range

—with Keyless Ride^{OE}



lights up yellow.



Remote key not in range. Not possible to switch on ignition again.

Possible cause:

Communication between radio-operated key and engine electronics is disrupted.

- Check the battery in the radio-operated key.
- with Keyless Ride^{OE}
- Replace the battery of the radio-operated key (▮▮▮▮ 65).
- Use the spare key to continue your journey.

—with Keyless Ride^{OE}

- Loss of the radio-operated key (➡ 65).
- Remain calm if the Check Control dialogue appears on the display while you are riding. You can continue your journey, the engine will not switch off.
- Have the faulty radio-operated key replaced by an authorised BMW Motorrad retailer.

Replace battery of radio-operated key



lights up yellow.



Remote key battery at 50%. No functional impairment.



Remote key battery weak. Limited central locking function. Change battery.

Possible cause:

- The integral battery in the radio-operated key has lost a significant proportion of its original capacity. There is no assurance of how long the radio-operated key can remain operational.

—with Keyless Ride^{OE}

- Replace the battery of the radio-operated key (➡ 65).

Keyless Ride failed

—with Keyless Ride^{OE}



lights up yellow.



Keyless Ride failure
Do not stop the engine. It may not be possible to restart the engine.

Possible cause:

The Keyless Ride control unit has diagnosed a communication fault.

- Do not switch off the engine. Proceed as directly as possible to an authorised workshop, preferably an authorised BMW Motorrad retailer.
- » Engine start with Keyless Ride can no longer be initiated.
- » DWA can no longer be activated.

Voltage of the vehicle electrical system too low



is displayed in yellow.



Vehicle voltage low.
Switch off unnecessary consumers.

The voltage of the vehicle electrical system is too low. If you continue to ride the motorcycle the on-board electronics will drain the battery.

40 STATUS INDICATORS

Possible cause:

Consumers with high power consumption are in operation (such as heated body warmers), too many consumers are in operation at one time, or battery faulty.

- Switch off non-essential consumers or disconnect them from the vehicle's electrical system.
- If the fault persists or occurs without consumers connected, have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Voltage of the vehicle electrical system critical



lights up yellow.



is displayed in yellow.



Vehicle voltage critical! Consumers were switched off. Check battery condition.



WARNING

Failure of the vehicle systems

Risk of accident

- Do not continue your journey.

The voltage of the vehicle electrical system is critical. If you continue to ride the motorcycle the on-board electronics will drain the battery.

Possible cause:


Consumers with high power consumption are in operation (such as heated body warmers), too many consumers are in operation at one time, or battery faulty.


- Switch off non-essential consumers or disconnect them from the vehicle's electrical system.
- If the fault persists or occurs without consumers connected, have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Charging voltage critical



flashes yellow.

 is displayed in yellow.

 Battery voltage critical! Accident risk. Stop driving.



WARNING

Failure of the vehicle systems

Risk of accident

- Do not continue your journey.


The battery is not being charged. If you continue to ride the motorcycle the on-board electronics will drain the battery.


Possible cause:


Alternator or alternator drive faulty, battery faulty or fuse has blown.


- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.


Bulb faulty


 lights up yellow.


 The faulty bulb is displayed:


 High beam faulty!


 Front left turn indicator faulty! or Front right turn indicator faulty!


 Low-beam headlight faulty!


 Front side light faulty!

—with daytime riding light^{OE}
 Daytime riding light faulty!◀


 Tail light faulty!


 Brake light faulty!


 Rear left turn indicator faulty! or Rear right turn indicator faulty!

 Number plate light faulty!

—Have it checked by a specialist workshop.

 flashes yellow.

 The faulty bulb is displayed:

 Active headlight faulty. Have it checked by a specialist workshop.

42 STATUS INDICATORS



WARNING

Vehicle overlooked in traffic due to failure of the lights on the vehicle

Safety risk

- Always replace a faulty bulb at the earliest possible opportunity. Consult a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Possible cause:

One or more bulbs faulty.

- Identify faulty bulb or bulbs by visual check.
- Have LED light sources completely replaced; consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Possible cause:

Plug connection disconnected.

- Identify disconnected plug connection.
- Connect disconnected plug connection.

Light control failed



lights up yellow.



Light control failure! Have it checked by a specialist workshop.



WARNING

Vehicle overlooked in traffic on account of failure of the vehicle lighting

Safety risk

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

The vehicle lighting has partially or completely failed.

Possible cause:

Light control has diagnosed a communication fault.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Anti-theft alarm battery weak —with anti-theft alarm (DWA)^{OE}



Alarm system batt. capacity weak. No restrictions. Make an appointment at a specialist workshop.



This error message shows briefly only after the Pre-Ride-Check completes.


Possible cause:


The integral battery in the anti-theft alarm has lost a significant proportion of its original capacity. There is no assurance of how long the anti-theft alarm can remain operational if the vehicle's battery is disconnected.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Anti-theft alarm battery flat

—with anti-theft alarm (DWA)^{OE}

 Alarm system battery empty. No independent alarm. Make an appointment at a specialist workshop.

 This error message shows briefly only after the Pre-Ride-Check completes.


Possible cause:

The integral battery in the anti-theft alarm has lost its entire original capacity. There is no assurance that the anti-theft alarm will be operational if the motorcycle's battery is disconnected.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

DWA failed

—with anti-theft alarm (DWA)^{OE}


 Alarm system failure
Have it checked by a specialist workshop.


Possible cause:

The DWA control unit has diagnosed a communication fault.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.
- » DWA can no longer be activated or deactivated.
- » False alarm possible.

Coolant temperature too high

 lights up yellow.

 Coolant temperature too high! Check coolant level. Continue driving in part. load to cool down.



ATTENTION

Riding with overheated engine

Engine damage

- Compliance with the information set out below is essential.

44 STATUS INDICATORS

Possible cause:

The coolant level is too low.

- Check the coolant level (197).

If the coolant level is too low:

- Allow the engine to cool down.
- Check the coolant level (197).
- Have the cooling system checked by a specialist workshop, preferably by a BMW Motorrad partner.

Possible cause:

The coolant temperature is too high.

- If possible, ride in the part-load range to cool down the engine.
- If the coolant temperature is frequently too high, have the fault rectified as soon as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Drive malfunction



lights up.



Engine! Have it checked by a specialist workshop.

Possible cause:

The engine control unit has diagnosed a fault that affects pollutant emissions and/or reduces power.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.
- » You can continue riding; pollutant emissions are higher than the threshold values.

Serious drive malfunction



flashes red.



flashes.



Serious fault in the engine control! Riding at mod. speed pos. Damage possible. Have checked by workshop.

Possible cause:

The engine control unit has diagnosed a fault that can lead to damage to the exhaust system.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.
- » It is possible to continue to ride but not recommended.

Severe fault in the engine control



flashes red.



Serious fault in the engine control! Riding at mod. speed pos. Damage possible. Have checked by workshop.



WARNING

Engine damage when running in emergency-operation mode

Risk of accident

- Ride slowly, avoid accelerating sharply and overtaking.
- If possible, have the vehicle picked up and have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Possible cause:

The engine control unit has diagnosed a fault which may cause severe secondary faults. The engine is in emergency-operation mode.

- It is possible to continue to ride but not recommended.
- Avoid high load and rpm ranges if possible.
- Have the fault rectified as quickly as possible by a spe-

cialist workshop, preferably an authorised BMW Motorrad retailer.

Engine control failed



lights up yellow.



lights up.



No communication with engine control. Multiple sys. affected. Ride carefully to the next specialist workshop.

Engine in emergency-operation mode



lights up yellow.



Fault in the engine control. Onward journey possible Ride carefully to next specialist workshop.



WARNING

Unusual ride characteristics when engine running in emergency-operation mode

Risk of accident

- Avoid accelerating sharply and overtaking.

46 STATUS INDICATORS

Possible cause:


The engine control unit has diagnosed a fault. In exceptional cases, the engine stops and refuses to start. Otherwise, the engine runs in emergency operating mode.

- You can continue to ride, but bear in mind that the usual engine power or the full range of engine rpm might not be available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Tyre pressure

—with tyre pressure control (RDC)^{OE}

In addition to the MY VEHICLE menu screen and the Check Control messages, there is also the TYRE PRESSURE screen for showing the tyre pressures:

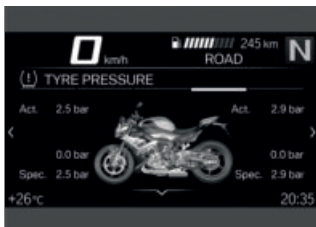

The values on the left are for the front wheel; those on the right are for the rear wheel.

Actual and specified tyre pressures and the difference between them are displayed for each wheel.

Immediately after the ignition is switched on, only dashes are displayed. The sensors do not start transmitting tyre pressure signals until the first time the vehicle accelerates to more than the minimum speed stated below:



RDC sensor is not active

min 30 km/h (The RDC sensor does not transmit its signal to the vehicle until a certain minimum speed has been reached.)



The tyre pressures are shown in the TFT display as temperature compensated and always refer to the following tyre air temperature:

20 °C



If the tyre symbol appears as well, showing yellow or red, this is a warning. The pressure difference is highlighted with an exclamation point in the same colour.



If the value in question is close to the limit of the permissible tolerance range, the reading is accompanied by the 'General' warning light showing yellow.



The 'General' warning light flashes red if the tyre pressure registered by the sensor is outside the permissible tolerance range.

For further information about BMW Motorrad RDC, see the section entitled "Engineering details" (178).

Tyre pressure close to limit of permitted tolerance

—with tyre pressure control (RDC)^{OE}



lights up yellow.



is displayed in yellow.



Tyre pressure does not match setpoint
Check tyre pressure.

Possible cause:

Measured tyre pressure is close to the limit of permitted tolerance.

- Correct tyre pressure.
- Before adjusting tyre pressure, read the information on temperature compensation and adjusting pressure in the section entitled "Engineering details":

» Temperature compensation (178)

» Pressure adaptation (179)

» Find the correct tyre pressures in the following places:

- Back cover of the rider's manual
- Instrument cluster in the TYRE PRESSURE view
- Sign on the rear wheel swinging arm

48 STATUS INDICATORS

Tyre pressure outside permitted tolerance

—with tyre pressure control (RDC)^{OE}



flashes red.



is displayed in red.



Tyre pressure does not match setpoint

Stop immediately! Check tyre pressure.



Tyre press. control. Loss of pressure.

Stop immediately! Check tyre pressure.



WARNING

Tyre pressure outside the permitted tolerance.

Risk of accident, degradation of the vehicle's driving characteristics.

- Adapt your style of riding accordingly.

Possible cause:

Measured tyre pressure is outside permitted tolerance.

- Check the tyre for damage and to ascertain whether the vehicle can be ridden with the tyre in its present condition.

If the vehicle can be ridden with the tyre in its present condition:

- Correct the tyre pressure at the earliest possible opportunity.
- Before adjusting tyre pressure, read the information on temperature compensation and adjusting pressure in the section entitled "Engineering details":

» Temperature compensation (178)

» Pressure adaptation (179)

» Find the correct tyre pressures in the following places:

- Back cover of the rider's manual
- Instrument cluster in the TYRE PRESSURE view
- Sign on the rear wheel swinging arm

- Have the tyre checked for damage by a specialist workshop, preferably an authorised BMW Motorrad retailer.

If you are unsure whether the vehicle can be ridden with the tyre in its present condition:

- Do not continue your journey.
- Notify the breakdown service.

Transmission fault

—with tyre pressure control (RDC) ^{OE}



"---"

Possible cause:

The vehicle has not reached the minimum speed (→ 178).



RDC sensor is not active

min 30 km/h (The RDC sensor does not transmit its signal to the vehicle until a certain minimum speed has been reached.)

- Increase speed above this threshold and observe the RDC readings.



Assume that a permanent fault has not occurred unless the 'General' warning light comes on to accompany the symptoms.

Under these circumstances:

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Possible cause:

Wireless communication with the RDC sensors has been disrupted. Radio systems are located in the surrounding area which are interfering with the

transmission between the RDC control unit and the sensors.

- Move to another location and observe the RDC readings.



Assume that a permanent fault has not occurred unless the 'General' warning light comes on to accompany the symptoms.

Under these circumstances:

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Battery for tyre pressure sensor weak

—with tyre pressure control (RDC) ^{OE}



lights up yellow.



RDC sensor battery weak. Function limited. Have it checked by a specialist workshop.



This error message shows briefly only after the Pre-Ride-Check completes.

Possible cause:

The integral battery in the tyre-pressure sensor has lost a significant proportion of its original capacity. There is no assurance of how long the tyre pressure monitoring system can remain operational.

50 STATUS INDICATORS

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Sensor faulty or system fault

—with tyre pressure control (RDC)^{OE}



lights up yellow.



"----"

Possible cause:

Vehicle is fitted with wheels not equipped with RDC sensors.

- Fit wheels and tyres equipped with RDC sensors.

Possible cause:

1 or 2 RDC sensors have failed or there is a system fault.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Tyre pressure control (RDC) failed

—with tyre pressure control (RDC)^{OE}



lights up yellow.



Tyre pressure check failure! Function limited. Have it checked by a specialist workshop.

Possible cause:

The tyre pressure control (RDC) control unit has diagnosed a communication fault.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.
- » Tyre pressure warnings not available.

Drop sensor defective



Drop sensor faulty.

Have it checked by a specialist workshop.

Possible cause:

The drop sensor is not available.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Motorcycle dropped



Cannot start engine.

Stand motorcycle upright. Switch ignition on/off. Start the engine.

Possible cause:

The drop sensor has detected a drop and has cut out the engine.

- Hold the vehicle upright and check it for damage.
- Switch the ignition off and then on again or switch the kill switch on and then off again.

Emergency call function restricted

—with intelligent emergency call^{OE}



lights up yellow.



Emergency call failure. Make an appointment at a specialist workshop.

Possible cause:

The emergency call cannot be made automatically or via BMW.

- Consult the information on operating the intelligent emergency call on page (162 68).
- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Possible cause:

Plug connection disconnected.

- Connect disconnected plug connection. (162 162)

Side stand monitoring is faulty



lights up yellow.



Side stand monitoring faulty. Onward journey possible. Engine stop. when stationary! Have checked by workshop.

Possible cause:



Side-stand switch or wiring damaged

The engine will switch off when speed drops below the minimum threshold. You cannot resume your journey.

min 5 km/h

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

ABS self-diagnosis not completed



flashes.

Possible cause:



ABS self-diagnosis not completed

The ABS function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel sensors to be checked: min 5 km/h)

- Pull away slowly. Bear in mind that the ABS function is not available until self-diagnosis has completed.

52 STATUS INDICATORS

ABS fault



lights up yellow.



lights up.



Limited ABS availability! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The ABS control unit has detected a fault. The partially integral function and the Dynamic Brake Control function have failed. The ABS function is available, subject to restrictions.

- You can continue to ride.
Bear in mind the more detailed information on certain situations that can lead to an ABS fault message (170).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

ABS failed



lights up yellow.



lights up.



ABS failure! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The ABS control unit has detected a fault. The ABS function is not available.

- You can continue to ride.
Bear in mind the more detailed information on certain situations that can lead to an ABS fault message (170).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

ABS Pro failed



lights up yellow.



lights up.



ABS Pro failure! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

Monitoring of the ABS Pro function has detected a fault. The ABS Pro function is not available. The ABS function is still available. ABS provides

support only for braking in straight-ahead driving.

- You can continue to ride. Bear in mind the more detailed information on certain situations that can lead to an ABS Pro fault message (► 170).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

DTC intervention



quick-flashes.

The DTC has detected impending instability at the rear wheel and reduces the torque. The indicator light flashes for longer than the DTC intervention lasts. This affords the rider visual feedback on control intervention even after the critical situation has been dealt with.

DTC self-diagnosis not completed



slow-flashes.

Possible cause:



DTC self-diagnosis not completed

The DTC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel sensors to be checked: min 5 km/h)

- Pull away slowly. Bear in mind that the DTC function is not available until self-diagnosis has completed.

DTC switched off



lights up.



Off!



Traction control deactivated.

Possible cause:

The rider has switched off the DTC system.

- Switch on DTC (► 75).

DTC fault



lights up yellow.



lights up.

54 STATUS INDICATORS



Traction control failure! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The DTC control unit has detected a fault.



ATTENTION

Damaged components

Damage to sensors, for example, which causes malfunctions

- Do not transport any objects underneath the driver or passenger seat.
 - Secure the toolkit.
-
- Do not damage the angular rate sensor.
 - Bear in mind that the DTC function and dynamic engine brake control are not available.
 - You can continue to ride. Bear in mind the more detailed information on situations that can lead to a DTC fault (➡ 172).
 - Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

DTC restricted



lights up yellow.



lights up.



Traction control limited! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The DTC control unit has detected a fault.



ATTENTION

Damaged components

Damage to sensors, for example, which causes malfunctions

- Do not transport any objects underneath the driver or passenger seat.
 - Secure the toolkit.
-
- Do not damage the angular rate sensor.
 - Bear in mind that the DTC function and dynamic engine brake control are restricted.
 - You can continue to ride. Bear in mind the more detailed information on situations that can lead to a DTC fault (➡ 172).
 - Have the fault rectified as quickly as possible by a spe-

cialist workshop, preferably an authorised BMW Motorrad retailer.

DDC fault

–with Dynamic Damping Control (DDC)^{OE}



lights up yellow.



Spring strut adjustment faulty! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The DDC control unit has detected a fault.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

» In this condition, the motorcycle may have too much damping and is uncomfortable to drive, especially on roads in poor condition.

Possible cause:

A DDC sensor fault has been detected.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

» The semi-active functionality is deactivated.

Fuel down to reserve



lights up.



WARNING

Irregular engine operation or engine shutdown due to lack of fuel

Risk of accident, damage to catalytic converter

- Do not run the fuel tank dry.

Go to a filling station soon.

Possible cause:

The fuel tank contains no more than the reserve quantity of fuel.



Fuel reserve

approx. 4 l

- Refuelling (111111 142).

Hill Start Control active



shows green.

Possible cause:

Hill Start Control (111111 181) has been activated by the rider.

- Switch off Hill Start Control.
–with riding modes Pro^{OE}
- Operate the Hill Start Control Pro (111111 84).

56 STATUS INDICATORS

Hill Start Control automatically deactivated



flashes yellow.

Possible cause:

Hill Start Control has been automatically deactivated.

- Side stand has been extended.
 - » Hill Start Control is deactivated when the side stand is extended.
- Engine has been switched off.
 - » Hill Start Control is deactivated when the engine is switched off.
- with riding modes Pro^{OE}
- Operate the Hill Start Control Pro (1111 84).

Hill Start Control cannot be activated



is displayed.

Possible cause:

Hill Start Control cannot be activated.

- Retract the side stand.
 - » Hill Start Control is operational only with the side stand retracted.
- Start the engine.
 - » Hill Start Control is operational only while the engine is running.

Gear not taught



The gear indicator flashes.

The Pro shift assistant is not available.

Possible cause:

The gearbox sensor is not fully trained.

- Select neutral N and allow the engine to idle for at least 10 seconds to teach the neutral position.
- Use clutch control to engage each gear in turn and ride for a minimum of 10 seconds in each gear.
 - » The gear indicator stops flashing when the gearbox sensor has been trained successfully.
- When the gearbox sensor has been taught successfully, Gear Shift Assistant Pro works as described (1111 179).
- If teaching is not successful, have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Hazard warning lights system is switched on



flashes green.



flashes green.

Possible cause:

The driver has switched on the hazard warning lights system.

- Operating hazard warning flashers (➡ 73).

Launch Control not ready

Shift light lights up or flashes.

L-Con not available.

Clutch too hot. is displayed.

Possible cause:

The number of racing starts possible with Launch Control has been exceeded.

- Allow the clutch to cool.
—with riding modes Pro^{OE}
- Operate the Launch Control (➡ 154).

Service display



If service is overdue, the due date or the odometer reading at which service was due is accompanied by the general warning light showing yellow.

If the service is overdue, a yellow CC message is displayed. Exclamation marks also draw your attention to the displays for service, service appointment and countdown distance in the MY VEHICLE and SERVICE REQUIREMENTS menu screens.



If the service-due indicator appears more than a month before the service date, the current date has to be corrected. This situation can occur if the battery was disconnected.

Service due



is displayed in white.

Service due! Have service performed by a specialist workshop.

Possible cause:

Service is due, because of either distance covered or time expired.

- Have your motorcycle serviced regularly by a specialist workshop, preferably by an authorised BMW Motorrad retailer.

» The vehicle remains operationally reliable and road-worthy.

» The vehicle retains its value.

Service-due date has passed



lights up yellow.



is displayed in yellow.

Service overdue! Have service performed by a specialist workshop.

58 STATUS INDICATORS

Possible cause:

Service is overdue because of the driving performance or the date.

- Have your motorcycle serviced regularly by a specialist workshop, preferably by an authorised BMW Motorrad retailer.
- » The vehicle remains operationally reliable and road-worthy.
- » The vehicle retains its value.

OPERATION

04

IGNITION SWITCH/STEERING LOCK	62
IGNITION WITH KEYLESS RIDE	63
ELECTRONIC IMMOBILISER (EWS)	66
EMERGENCY-OFF SWITCH (KILL SWITCH)	67
INTELLIGENT EMERGENCY CALL	67
LIGHTING	70
DYNAMIC TRACTION CONTROL (DTC)	74
ELECTRONIC SUSPENSION ADJUSTMENT (DDC)	75
RIDING MODE	78
RIDING MODE PRO	79
ADAPTIVE CRUISE CONTROL	80
HILL START CONTROL	83
SHIFT LIGHT	86
ANTI-THEFT ALARM (DWA)	86
TYRE PRESSURE CONTROL (RDC)	89
HEATED GRIPS	89
FRONT AND REAR SEATS	90

62 OPERATION


IGNITION SWITCH/STEERING LOCK

Keys

You receive 2 vehicle keys. If a key is lost or mislaid, consult the notes on the electronic immobiliser (EWS) (▮▮▮ 66). Ignition switch/steering lock, fuel filler cap lock and lock for the tail-hump cover are all operated with the same key.


Engaging steering lock

- Turn the handlebars all the way to the left.

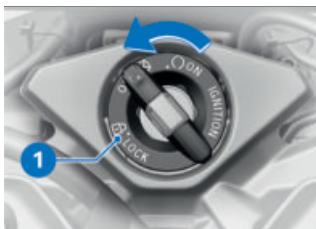

- Turn the ignition key to position 1, while moving the handlebars slightly.
 - » Ignition, lights and all function circuits switched off.
 - » Steering lock engaged.
 - » Vehicle key can be removed.

Switching on ignition

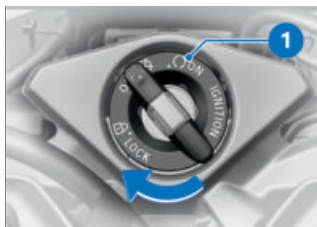


- Turn the ignition key to position 1.
 - » Side lights and all function circuits switched on.
 - » Engine can be started.
 - » Pre-Ride-Check is performed. (▮▮▮ 134)
 - » ABS self-diagnosis is in progress. (▮▮▮ 135)
 - » DTC self-diagnosis is in progress. (▮▮▮ 135)

Welcome lights

—with daytime riding light^{OE}

- Switch on the ignition (▮▮▮ 62).
 - » The side lights briefly light up.
 - » The daytime riding lights briefly light up.

Switching off ignition

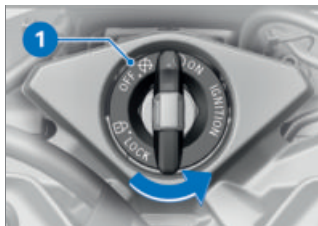


- Turn the ignition key to position **1**.
 - » Lights switched off.
 - » Handlebars not locked.
 - » Vehicle key can be removed.

IGNITION WITH KEYLESS RIDE


—with Keyless Ride^{OE}

Radio-operated key

 The telltale light for the radio-operated key flashes while the search for the radio-operated key is in progress. The light goes out as soon as the radio-operated key or the emergency key is found. The light goes out briefly if the search times out without the radio-operated key or the emergency key being found.

You receive one radio-operated key and one spare key. If a key is lost or mislaid, consult the notes on the electronic immobiliser (EWS) (► 66).

Ignition and anti-theft alarm system work with the radio-operated key. Lock of the tail-hump cover and fuel filler cap are locked and unlocked manually.

 The vehicle cannot be started while the radio-operated key is out of range. If the radio-operated key remains out of range the ignition is switched off after about 1.5 minutes to protect the battery. It is advisable to keep the radio-operated key on your person (e.g. in a jacket pocket) and to have the emergency key with you as an alternative.



Range of the Keyless Ride radio-operated key

—with Keyless Ride^{OE}

approx. 1 m

Locking the steering lock Requirement

Handlebars are turned to the left. Radio-operated key is within range.

64 OPERATION



- Press and hold down button 1.
 - » The steering lock engages with an audible click.
 - » Ignition, lights and all function circuits switched off.
- To unlock the steering lock, briefly press button 1.

Switching on ignition Requirement

Radio-operated key is within range.



- The steering lock can be unlocked once the ignition is switched on.

Steering lock is engaged:

- Press and hold down button 1.
 - » The steering lock disengages.
 - » Side lights and all function circuits are switched on.
 - with daytime riding light^{OE}
 - » Daytime riding light is switched on.<
 - » Pre-Ride-Check is performed. (134)
 - » ABS self-diagnosis is in progress. (135)
 - » DTC self-diagnosis is in progress. (135)

The steering lock is disengaged:

- Short-press button 1.
 - » Side lights and all function circuits are switched on.
 - with daytime riding light^{OE}
 - » Daytime riding light is switched on.<
 - » Pre-Ride-Check is performed. (134)
 - » ABS self-diagnosis is in progress. (135)
 - » DTC self-diagnosis is in progress. (135)

Switching off ignition Requirement

Radio-operated key is within range.



- The steering lock can be locked once the ignition is switched off.

To switch off the ignition and engage the steering lock:

- Turn the handlebars all the way to the left.
- Press and hold down button 1.
 - » Light is switched off.
 - » The steering lock engages.

To switch off the ignition and do not engage the steering lock:

- Short-press button 1.
 - » Light is switched off.
 - » The steering lock does not engage.
- Locking the steering lock (▮▮▮ 63).


Loss of the radio-operated key



Consult the information on the electronic immobiliser (EWS) if a key is lost or mislaid.

If the radio-operated key is lost

or mislaid while you are on a journey, you can use the spare key to start the vehicle.

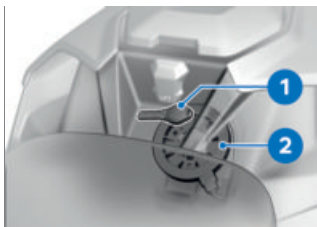

- Hold spare key 1 close to the trim panel behind the rider's seat, with the spare key positioned above aerial 2.



Time during which the engine has to be started. The unlocking procedure has to be repeated if this time is allowed to expire.

30 s

- » Pre-Ride-Check is performed.
- Spare key has been recognised.
- Engine can be started.
- Spare key can be removed.
- Start the engine (▮▮▮ 133).

Replacing battery of radio-operated key

If the radio-operated key does not react when you short-press or long-press a button:

- Battery of the radio-operated key is not at full capacity.

66 OPERATION



Remote key battery weak. Limited central locking function. Change battery.



- Press button **1**.
 - » Key bit flips out.
- Push battery cover **2** up.
- Remove battery **3**.
- Dispose of the old battery in accordance with all applicable laws and regulations; do not attempt to dispose of batteries as domestic waste.



ATTENTION

Unsuitable or incorrectly inserted batteries

Component damage

- Use a battery compliant with the manufacturer's specifications.
 - When inserting the battery, always make sure polarity is correct.
-
- Insert the new battery with the positive terminal up.



Battery type

For Keyless Ride radio-operated key

CR 2032

- Install battery cover **2**.
 - » Red LED in the instrument cluster flashes.
 - » The radio-operated key is again ready for use.

ELECTRONIC IMMOBILISER (EWS)

The on-board electronics access the data saved in the ignition key via a ring aerial. The engine control unit will not permit the engine to be started unless the key is identified as "authorised".



A second ignition key attached to the same ring as the ignition key used to start the engine could "irritate" the electronics, in which case the enabling signal for starting is not issued.

Always keep the ignition keys separate from each other.

If you lose an ignition key, you can have it barred by your authorised BMW Motorrad retailer.

If you wish to do this, you will need to bring all other keys for

the motorcycle with you. The engine cannot be started by a barred key, but a key that has been barred can subsequently be reactivated.

You can obtain spare keys only through an authorised BMW Motorrad retailer. The keys are part of an integrated security system, so the retailer is under an obligation to check the legitimacy of all applications for replacement/extra keys.

EMERGENCY-OFF SWITCH (KILL SWITCH)



- 1** Emergency-off switch (kill switch)



WARNING

Operation of the kill switch while riding

Risk of fall due to rear wheel locking

- Do not operate the kill switch when riding.

The emergency off switch is a kill switch for switching off the engine quickly and easily.



- A** Engine switched off
B Normal operating position (run)

INTELLIGENT EMERGENCY CALL

—with intelligent emergency call^{OE}

68 OPERATION

Emergency call via BMW

Press the SOS button in an emergency only.


Even if an emergency call using BMW is not possible, the system may make an emergency call to a public emergency call number. This depends on the respective mobile phone network and the national regulations.

The emergency call is not able to be ensured because of technical reasons due to unfavourable conditions, e.g. in areas where there is no mobile phone reception.

In order to prevent the motorcycle automatically establishing an emergency call connection in race track sessions with medical supervision, the plug connection to the intelligent emergency call must be disconnected (► 162).

Language for emergency call


Each vehicle has a language assigned to it depending on the market for which it is intended. The BMW Call Center answers in this language.

 The language for the emergency call can only be changed by the BMW Motorrad partner. The language assigned to the


vehicle differs from the display languages that can be selected by the rider in the TFT display.

Manual emergency call Requirement

An emergency call has occurred. The vehicle is at a standstill. The ignition is switched on.

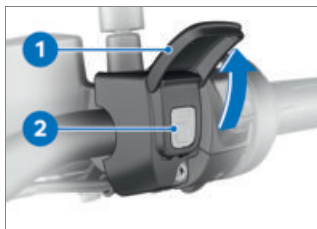


- Open cover 1.
- Short-press SOS button 2.

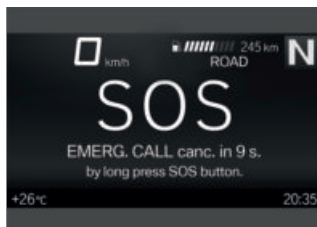


The time until transmission of the emergency call is displayed. During that time, it is possible to cancel the emergency call.

- Operate the emergency-off switch to stop the engine.

- Remove helmet.
- » After expiry of the timer, a voice contact to the BMW Call Center is established.

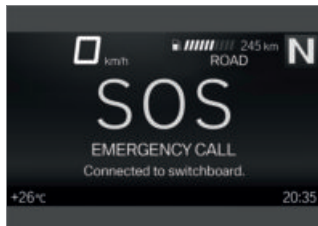

The connection was established.

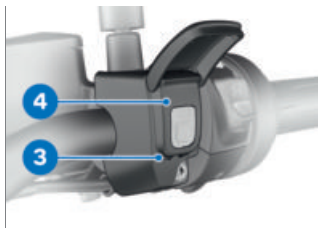


- Provide information to the emergency services using the microphone **3** and speaker **4**.

Automatic emergency call

The intelligent emergency call is active after the ignition is switched on and reacts if a fall or crash occurs.


Emergency call in the event of a light fall

- A minor fall or a crash is detected.
- » An acoustic signal is sounded.

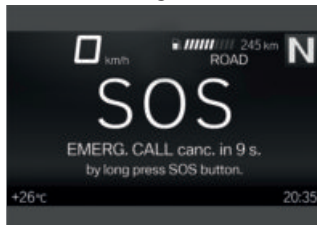


The time until transmission of the emergency call is displayed. During that time, it is possible to cancel the emergency call.

- If possible, remove helmet and stop engine.
- » A voice contact connection to the BMW Call Center is established.

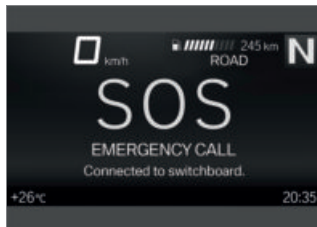

The connection was established.

70 OPERATION

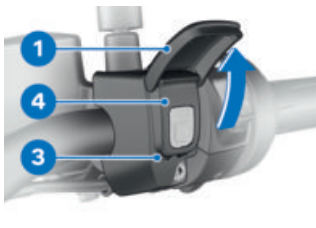

- Open cover **1**.
- Provide information to the emergency services using the microphone **3** and speaker **4**.

Emergency call in the event of a severe fall

- A severe fall or a crash is detected.
 - » The emergency call is placed automatically without delay.

LIGHTING

Switching on low-beam headlight

- Switch on the ignition.
- Start the engine.



- Alternatively: pull switch **1** when ignition switched on.

Side light

The side lights switch on automatically when the ignition is switched on.



The side lights place a strain on the battery. Do not switch the ignition on for longer than absolutely necessary.

High-beam headlight and headlight flasher

- Switch on the ignition (➡ 62).



- Push switch **1** forward to switch on the high-beam headlight.
- Pull switch **1** back to operate the headlight flasher.

Headlight courtesy delay feature

- Switch off the ignition.



- Immediately after switching off the ignition, pull switch **1** back and hold it in that position until the headlight courtesy delay feature comes on.
 - » The vehicle's lights come on for one minute and then switch off automatically.
- This can be used to light up the path to the house door after the vehicle has been parked, for example.

Parking lights

- Switch off the ignition (➡ 63).



- Immediately after switching off the ignition, push button **1** to the left and hold it

in that position until the parking lights come on.

- Switch the ignition on and off again to switch off the parking lights.

Manual daytime riding light

–with daytime riding light^{OE}

Requirement

Automatic daytime riding light is switched off.



WARNING

Switching on the daytime riding light in the dark.

Risk of accident

- Do not use the daytime riding light in the dark.



By comparison with the low-beam headlight, the daytime running light makes the vehicle more visible to on-coming traffic. This improves daytime visibility.

- Start the engine (➡ 133).
- Navigate to Settings, Vehicle settings, Lights and switch off the Auto. daytime light function.

72 OPERATION



- Press button **1** to switch on the daytime riding light.



lights up.

- » The low-beam headlight and the front side lights are switched off.
- In the dark or in tunnels: Press button **1** again to switch off the daytime riding light and switch on the low-beam headlight and front side light.



If the high-beam headlight is switched on while the daytime riding light is on, the daytime riding light is switched off after approx. 2 seconds and the high-beam headlight, low-beam headlight and front side light are switched on. If the high beam headlight is switched off again, the daytime running light is not automatically reactivated, but must be switched on again if required.

Automatic daytime riding light —with daytime riding light^{OE}



The changeover between daytime riding light and low-beam headlight including front side lights can be effected automatically.



WARNING

The automatic daytime riding light is not a substitute for the rider's personal judgement of the light conditions

Risk of accident

- Switch off the automatic daytime riding light in poor light conditions.

- Navigate to **Settings**, **Vehicle settings**, **Lights** and switch on the **Auto. daytime light** function.



lights up.

- » If the ambient brightness decreases below a certain value, the low beam headlight is automatically switched on (e.g. in a tunnel). When sufficient ambient brightness is detected, the daytime riding light is switched back on.



shows when daytime riding light is active.

Manual operation of the light when the automatic system is switched on

—with daytime riding light^{OE}

—If you press the button for the daytime riding light, the automatic daytime riding light is switched off and the low-beam headlight and front side lights are switched on (e. g. when you ride into a tunnel, and the response of the automatic daytime riding light to the change in ambient brightness is delayed). The auxiliary headlight switches on again when the daytime riding light is switched off.

—If you press the button again the automatic daytime riding light is reactivated, in other words the daytime riding light is switched on again when ambient light is bright enough.

Operating hazard warning flashers

• Switch on the ignition (➡ 62).



The hazard warning flashers place a strain on the battery. Do not use the hazard warning flashers for longer than absolutely necessary.



• Press button **1** to switch on the hazard warning lights system.

» Ignition can be switched off.

• To switch off the hazard warning lights system, switch on the ignition if necessary and press button **1** again.

Operating turn indicators

• Switch on the ignition (➡ 62).



• Push button **1** to the left to switch on the left turn indicators.

• Push button **1** to the right to switch on the right turn indicators.

• Centre button **1** to cancel the turn indicators.

74 OPERATION

Comfort turn indicator



If button **1** has been pressed to the right or left, the turn indicators are automatically switched off under the following circumstances:

- Speed below 30 km/h: after 50 m distance covered.
- Speed between 30 km/h and 100 km/h: after a speed-dependent distance covered or in case of acceleration.
- Speed over 100 km/h: after five flashes.

If button **1** is pressed to the right or left slightly longer, the turn indicators only switch off automatically once the speed-dependent distance covered is reached.

DYNAMIC TRACTION CONTROL (DTC)

Switching off DTC

- Switch on the ignition (➡ 62).



Dynamic Traction Control (DTC) can also be switched off when the motorcycle is in motion.



- Press and hold down button **1** until the DTC indicator light changes status.

The DTC system status **ON** is displayed immediately after pressing the button **1**.



lights up.

Possible DTC system status **OFF!** is displayed.

- Release button **1** once the status has changed.

The new DTC system status **OFF!** is displayed.



remains lit.

» The DTC function is switched off.

Switching on DTC



- Press and hold down button **1** until the DTC indicator light changes status.

The DTC system status **OFF!** is displayed immediately after pressing the button **1**.



goes out; if self-diagnosis has not completed it starts flashing.

Possible DTC system status **ON** is displayed.

- Release button **1** once the status has changed.



remains off or continues to flash.

The new DTC system status **ON** appears briefly on the display.

» The DTC function is switched on.

- In **RAIN**, **ROAD** and **DYNAMIC** riding modes, you also have the option of switching the

ignition off and then on again. In **DYNAMIC PRO** riding mode, the most recently selected DTC status is retained when the ignition is switched on again.



A DTC fault has occurred if the DTC indicator light shows when the motorcycle accelerates to a speed in excess of the minimum stated below after the ignition was switched off and then on again.

min 5 km/h

- For more information on Dynamic Traction Control, see the section entitled "Engineering details" (► 172).

ELECTRONIC SUSPENSION ADJUSTMENT (DDC)

—with Dynamic Damping Control (DDC) ^{OE}

Possibilities for adjustment, Dynamic Damping Control

Dynamic Damping Control (DDC) automatically adapts the suspension to the characteristics of the terrain.

For more information on Dynamic Damping Control (DDC) see the section entitled "Engineering details" (► 174).


76 OPERATION

Viewing suspension settings

- Switch on the ignition (▮▮▮▮▶ 62).



- Short-press button **1** to view the current setting.

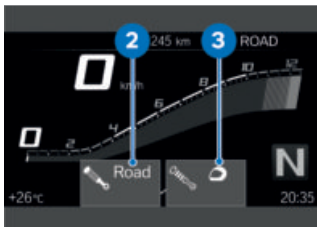

The settings for damping **2** and load **3** are displayed. The setting shows briefly, then disappears automatically.

Adjusting suspension damping



WARNING

Incorrect spring-preload and spring-strut damping settings.

Impaired handling.

- Adapt spring preload and spring strut damping to the payload carried by the motorcycle.

- Switch on the ignition (▮▮▮▮▶ 62).



- Short-press button **1** to view the current setting.
- Repeatedly short-press button **1** until the setting you want to use is displayed.



You can adjust the damping characteristic while the motorcycle is on the move.



Selection arrow **4** appears and subsequently disappears after the change of status.

The following settings are available:

- Road: Damping for comfortable on-road riding
- Dynamic: Damping for dynamic on-road riding

» The setting shown on the display is automatically accepted as the setting for suspension damping if you allow a certain length of time to pass without pressing button **1**.

Adjusting for loaded state



WARNING

Incorrect spring-preload and spring-strut damping settings.

Impaired handling.

- Adapt spring preload and spring strut damping to the payload carried by the motorcycle.



Adjustment of the loaded-state setting with the aid of Dynamic Damping Control is not a substitute for manual adaptation of spring preload to suit the gross weight of rider, passenger and items carried on the vehicle.

- Adjust the spring preload for front wheel (▮▮▮▮ 120).
–without Dynamic Damping Control (DDC)^{OE}
- Adjust the spring preload for rear wheel (▮▮▮▮ 122).
- Switch on the ignition (▮▮▮▮ 62).

78 OPERATION



- Short-press button **1** to view the current setting.
- Repeatedly long-press button **1** until the setting you want to use is displayed.



Selection arrow **4** appears and subsequently disappears after the change of status.

The following settings are available:



One-up riding



Two-up (with luggage)

» The setting shown on the display is automatically accepted as the setting for load

if you allow a certain length of time to pass without pressing button **1**.

RIDING MODE

Using riding modes

BMW Motorrad has developed operational scenarios for your motorcycle from which you can select the scenario suitable for your situation:

- RAIN: Riding on rain-wet roads.
- ROAD: Riding on dry roads.
- DYNAMIC: Dynamic riding on dry roads.

–with riding modes Pro^{OE}

- DYNAMIC PRO: Dynamic riding with provision for the rider's custom settings.

The respective optimum interplay of engine characteristic, ABS control and DTC control is provided for each of these scenarios.

Selecting riding mode

- Switch on the ignition (➡ 62).



- Press button 1.



The riding mode currently active **2** is sent to the back and is displayed in the pop-up **3**. The guide **4** indicates how many riding modes are available.



- Repeatedly press button 1 until the riding mode you want is displayed.

- The following steps must be taken to change the riding mode:
 - Close the throttle twistgrip.
 - Release the brake levers.
 - Deactivate adaptive cruise control.

RIDING MODE PRO

–with riding modes Pro^{OE}

Adjustment option

The DYNAMIC PRO riding mode can be set up to suit the rider's preferences.

Setting up PRO riding mode


- Switch on the ignition (➡ 62).
- Navigate to Settings, Vehicle settings.
- Select Pro riding mode and activate.

Setting up Dynamic Pro

–with riding modes Pro^{OE}

- Setting up PRO riding mode (➡ 79).
- Select DYNAMIC PRO riding mode and confirm.

80 OPERATION

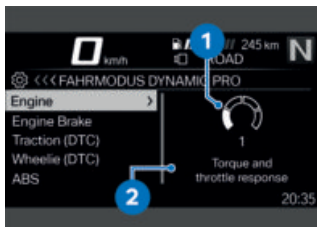

The Engine system has been selected. The current setting is displayed as a diagram **1** with explanatory texts relating to the system **2**.

- Select system and confirm.



You can browse through the available settings **3** and the corresponding explanations **4**.

- Set up the system.
 - » The Engine Brake, Traction (DTC), Wheelie (DTC) and ABS systems can be set up in the same way.
 - » The settings selected for the various systems are retained in memory when the ignition is switched off.

- For more information on all these systems, see the section entitled "Engineering details" (► 174).
- The settings can be reset to the factory settings:
- Resetting riding mode settings (► 80).

Resetting riding mode settings

- Setting up PRO riding mode (► 79).
- Select **Reset** and confirm.

ADAPTIVE CRUISE CONTROL

—with cruise control^{OE}

Display when adjusting settings (Speed Limit Info not active)



The symbol **1** for adaptive cruise control is displayed in the Pure Ride view and in the top status line.

Display when adjusting settings (Speed Limit Info active)



The symbol **1** for adaptive cruise control is displayed in the Pure Ride view and in the top status line.

Switching on adaptive cruise control




- Slide switch **1** to the right.
- » Button **2** is enabled for operation.

Setting road speed



- Short-push button **1** forward.

 Adjustment range for adaptive cruise control


20...210 km/h



is displayed.

- » The motorcycle maintains your current cruising speed and the setting is saved.

Accelerating

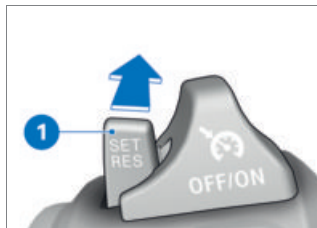


- Short-push button **1** forward.
- » Speed is increased by approx. 1 km/h each time you push the button.
- Push button **1** forward and hold it in this position.

82 OPERATION

- » The motorcycle accelerates smoothly.
- » The current speed is maintained and saved if button **1** is not pushed again.


Decelerating

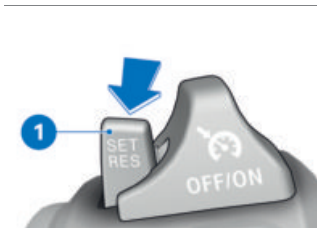


- Short-push button **1** back.
 - » Speed is reduced by approx. 1 km/h each time you push the button.
- Push button **1** back and hold it in this position.
 - » The motorcycle decelerates smoothly.
 - » The current speed is maintained and saved if button **1** is not pushed again.

Deactivating adaptive cruise control


- Brake, pull the clutch lever or turn the throttle grip (close the throttle by turning the grip back past the idle position) to deactivate adaptive cruise control.

 For safety reasons, adaptive cruise control is automatically deactivated when Gear Shift Assistant Pro downshifts.


 For safety reasons, adaptive cruise control is automatically deactivated whenever ABS or DTC intervention occurs. If DTC is deactivated by the rider, adaptive cruise control is deactivated as well.

- » Indicator light for adaptive cruise control goes out.

Resuming former cruising speed

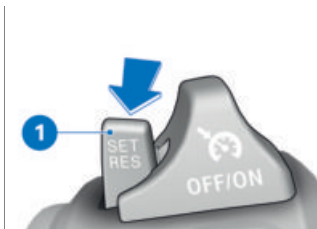

- Short-push button **1** back to return to the speed saved beforehand.

 Opening the throttle does not deactivate cruise control. When the twistgrip is released the motorcycle decelerates only to the speed saved in memory, even if the rider intended slowing to a lower speed.



is displayed.

Switching off adaptive cruise control




- Slide switch **1** to the left.
» The system is deactivated.
- » Button **2** is disabled.

HILL START CONTROL

Activating and deactivating Hill Start Control

- Switch on the ignition (→ 62).
- Navigate to Settings, Vehicle settings and activate or deactivate Hill Start Control.

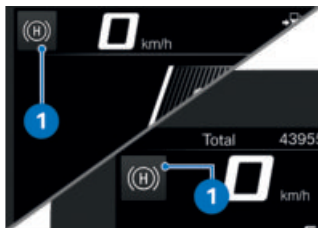

Symbol **1** for Hill Start Control is displayed in the Pure Ride view and in the top status line.

Operating Hill Start Control Requirement

Vehicle stationary and upright, engine running.



ATTENTION

Failure of Hill Start Control

Risk of accident

- Apply the brakes manually to hold the vehicle.




Hill Start Control is purely a comfort system to facilitate holding the machine and pulling way on uphill gradients and should not be confused with a parking brake.



See the section entitled "Engineering details" for more information on Hill Start Control.

84 OPERATION

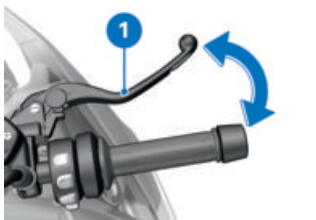

- Apply firm pressure to hand-brake lever **1** or to the foot-brake lever and then quickly release the lever.



shows green.

» Hill Start Control is activated.

- To switch off the Hill Start Control, operate the brake lever **1** or footbrake lever again.



disappears.

- Alternatively, ride off in 1st or 2nd gear.



Hill Start Control is deactivated automatically when the motorcycle pulls away.



disappears as soon as the brake is fully released.

» Hill Start Control is deactivated.

- For more information on Hill Start Control, see the section entitled "Engineering details" (181).

Operating Hill Start Control Pro

—with riding modes Pro^{OE}

Requirement

Vehicle stationary and upright, engine running.



ATTENTION

Failure of Hill Start Control

Risk of accident


- Apply the brakes manually to hold the vehicle.



The drive-off assistant Hill Start Control Pro is only a comfort system to enable easier riding off on gradients and should not be confused with an electromechanical holding brake.



The Hill Start Control Pro drive-off assistant should not be used on inclines of over 40%.

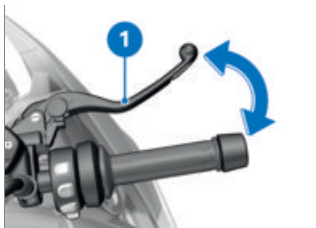

- Apply firm pressure to hand-brake lever **1** or to the foot-

brake lever and then quickly release the lever.

- Alternatively, apply the brake for about one second beyond the vehicle reaching a standstill on an incline of at least 3%.



shows green.

» Hill Start Control Pro is activated.

- To switch off the Hill Start Control Pro, operate the brake lever **1** or footbrake lever again.



If Hill Start Control Pro has been deactivated by means of the handbrake lever, automatic Hill Start Control is deactivated for the next 4 m.



disappears.

- Alternatively, ride off in 1st or 2nd gear.



When riding off, Hill Start Control Pro is automatically deactivated.



disappears as soon as the brake is fully released.

- » Hill Start Control Pro is deactivated.
- For more information on Hill Start Control Pro, see the sec-

tion entitled "Engineering details" (181).

Setting up Hill Start Control Pro


—with riding modes Pro^{OE}

- Switch on the ignition (62).
- Navigate to **Settings**, **Vehicle settings**, **HSC Pro**.
- To switch off Hill Start Control Pro, select **Off**.
- » Hill Start Control Pro is deactivated.
- To switch on manual Hill Start Control Pro, select **Manual**.
- » Hill Start Control Pro can be activated by forcefully operating the handbrake or footbrake lever.
- To switch on automatic Hill Start Control Pro, select **Auto**.
- » Hill Start Control Pro can be activated by forcefully operating the handbrake or footbrake lever.
- » If the brake is actuated for approximately one second after the vehicle has come to a standstill and the motorcycle is on a gradient of at least 3%, Hill Start Control Pro is automatically activated.
- » The selected setting remains stored even after the ignition is switched off.

86 OPERATION

SHIFT LIGHT

Switching shift light on and off

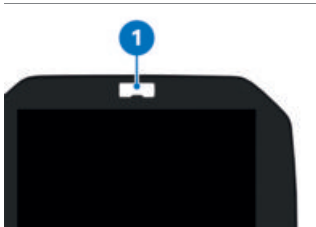

- Navigate to Settings, Vehicle settings.
- Switch Shift light on or off.

Setting shift light

- Switch on the Shift light function.
- Navigate to Settings, Vehicle settings, Configuration (under Shift light).
- » The following settings are available:
 - Start RPM
 - End RPM
 - Brightness
 - Frequency. A flashing frequency of 0 Hz corresponds to steady light.
- » Changes to brightness and the flashing frequency are demonstrated by the shift light with it briefly lighting up or flashing.

ANTI-THEFT ALARM (DWA)

–with anti-theft alarm (DWA)^{OE}

Activation

- Switch on the ignition (➡ 62).
 - Customise the anti-theft alarm settings (➡ 88).
 - Switch off the ignition.
 - » If the anti-theft alarm system (DWA) is activated, the alarm system is armed automatically when you switch the ignition off.
 - » Activation takes approximately 30 seconds to complete.
 - » Turn indicators flash twice.
 - » Confirmation tone sounds twice (if programmed).
 - » Anti-theft alarm (DWA) is active.
- with Keyless Ride^{OE}



- Switch off the ignition.
- Press button 1 on the radio-operated key twice.
- » Activation takes approximately 30 seconds to complete.
- » Turn indicators flash twice.

- » Confirmation tone sounds twice (if programmed).
- » Anti-theft alarm (DWA) is active.



- To deactivate the motion sensor (for example if you are about to transport the motorcycle on a train and the swaying movement of the moving train could trip the alarm), press button **1** on the radio-operated key again during the activation phase.
- » Turn indicators flash three times.
- » Confirmation tone sounds three times (if programmed).
- » Motion sensor has been deactivated.◀

Alarm signal

A DWA alarm can be triggered by:

- Motion sensor
- Switch-on attempt with an unauthorised vehicle key.
- Disconnection of the DWA anti-theft alarm from the motorcycle's battery (DWA internal battery in the anti-theft alarm provides power - alarm tone only, the turn indicators do not flash)

All functions are sustained even if the internal battery of the DWA anti-theft alarm system is flat; the only difference is that an alarm cannot be triggered if the system is disconnected from the motorcycle's battery.

An alarm lasts for approximately 26 seconds. While an alarm is in progress an alarm tone sounds and the turn indicators flash. The type of alarm tone can be set by an authorised BMW Motorrad retailer.

88 OPERATION

—with Keyless Ride^{OE}



You can cancel an alarm at any time by pressing button **1** on the radio-operated key; this does not deactivate the DWA.

If an alarm was triggered while the motorcycle was unattended, the rider is notified accordingly by an alarm tone sounding once when the ignition is switched on. The DWA LED then indicates the reason for the alarm for one minute.

Light signals issued by the indicator light:

- Flashes 1x: Motion sensor 1
- Flashes 2x: Motion sensor 2
- Flashes 3x: Ignition switched on with unauthorised ignition key
- Flashes 4x: Disconnection of the DWA anti-theft alarm from the motorcycle's battery
- Flashes 5x: Motion sensor 3

Deactivating DWA

- Switch on the ignition.
 - » Turn indicators flash once.
 - » Confirmation tone sounds once (if programmed).
 - » Anti-theft alarm (DWA) is deactivated.

Customising anti-theft alarm settings

- Switch on the ignition (→ 62).
- Navigate to *Settings*, *Vehicle settings*, *Alarm system*.
 - » The following adaptation settings are available:
 - Adapt Warning signal
 - Switch Tilt sensor on and off
 - Switch Arming tone on and off
 - Switch Arm automatically on and off

Possibilities for adjustment

Warning signal: Set the increasing and decreasing or intermittent alarm tone.

Tilt sensor: Activate tilt sensor to monitor the inclination of the vehicle. The anti-theft alarm is tripped if any attempt is made to steal a wheel or lift the vehicle for towing, for example.



When the vehicle is going to be transported, deactivate the tilt sensor to pre-

vent the anti-theft alarm (DWA) from being triggered.

Arming tone: In addition to turn indicators flashing, alarm tone sounds as confirmation of activation/deactivation of the DWA.

Arm automatically: Automatic activation of the alarm function after the ignition is switched off.

TYRE PRESSURE CONTROL (RDC)

—with tyre pressure control (RDC)^{OE}


Switching specified-pressure warning on or off

- The system can be set to issue a specified-pressure warning when tyre pressure drops to the defined minimum.
- Navigate to Settings, Vehicle settings, RDC.
- Switch Target pressure warn. on or off.


HEATED GRIPS

—with heated grips^{OE}

Operating heated handlebar grips

 The heating in the heated handlebar grips can be

activated only when the engine is running.

 The increase in power consumption caused by having the heated handlebar grips switched on can drain the battery if you are riding at low engine speeds. If the charge level is low, the heated handlebar grips are switched off to ensure the battery's starting capability.

- Start the engine (➡ 133).



- Repeatedly press button **1** until desired heating stage **2** appears in front of heated grip symbol **3**.

The handlebar grips can be heated to three levels.



Low heating power



Medium heating power



High heating power

90 OPERATION

- » High heating power is for heating the grips quickly: it is advisable to switch back to a lower heating power as soon as the grips are warm.
- » The selected heating stage will be saved if you allow a certain length of time to pass without making further changes.
- To switch off the heated grips, repeatedly press button **1** until heated grip symbol **3** disappears.

FRONT AND REAR SEATS

Removing tail-hump cover

- Make sure the ground is level and firm and place the motorcycle on its stand.



- Flip open lock cap **1** and use the ignition key to unlock the lock for tail-hump cover **2**.
- Remove tail-hump cover **3**; to do so, unhook fixing **4**.

Installing tail-hump cover



- Position tail-hump cover **1**; hook in fixing **2** while doing so.
- Press tail-hump cover **1** downwards and lock.

Removing passenger seat

—with two-up riding package^{OE}

- Make sure the ground is level and firm and place the motorcycle on its stand.



- Flip open lock cap **1** and use the ignition key to unlock the lock for passenger seat **2**.
- Remove passenger seat **3**; to do so, unhook fixing **4**.
- Remove the ignition key from the lock and place the pas-

senger seat, upholstered side down, on a clean surface.

Installing passenger seat

—with two-up riding package ^{OE}



- Position passenger seat **1**; hook in fixing **2** while doing so.
- Press passenger seat **1** downwards and lock.

Removing rider's seat



- Push the rider's seat cover **1** forward slightly on the seat cushion surface and expose tab **2**.
- Using the tool from the on-board toolkit, remove screw **3**.

- Lift up the rider's seat **1** at the rear and unhook fixing **4**.
- Place the seat, upholstered side down, on a clean surface.

Installing rider's seat



- Insert rider's seat **1** into the fixing **4** at the front and position it.
- Push the rider's seat cover **1** forward slightly on the seat cushion surface and expose tab **2**.
- Position and install bolt **3**.

TFT DISPLAY

05

GENERAL NOTES	94
PRINCIPLE	95
PURE RIDE VIEW	101
GENERAL SETTINGS	102
BLUETOOTH	103
MY VEHICLE	106
NAVIGATION	109
MEDIA	111
TELEPHONE	111
DISPLAY SOFTWARE VERSION	112
DISPLAY LICENCE INFORMATION	112

GENERAL NOTES

Warnings



WARNING

Using a smartphone while riding or while the engine is running

Risk of accident

- Always comply with the road traffic regulations in force where you are riding.
- No use (with the exception of applications without operation, such as hands-free telephony) while riding.



WARNING

Distraction from the road and loss of control

Operating the integrated information system and communication devices while driving results in a risk of accident

- Operate those systems or devices only when the traffic situation allows for it.
- If necessary, stop and operate the systems or devices when stationary.

Connectivity functions

Connectivity functions include media, telephony and navigation. Connectivity functions can be used if the TFT display is connected to a mobile device and a helmet (104). For more information on the Connectivity functions go to **bmw-motorrad.com/connectivity**




If the fuel tank is between the mobile device and the TFT display, the Bluetooth connection may be restricted. BMW Motorrad recommends storing the device above the fuel tank (e.g. in your jacket pocket).



Depending on the mobile device, the scope of the Connectivity functions may be restricted.

BMW Motorrad Connected app

The BMW Motorrad Connected app contains usage and vehicle information. For some functions, such as navigation, the app must be installed on the mobile device and connected to the TFT display. The app is used to start route guidance and adjust the navigation.


 On some mobile devices, e.g. those with iOS operating systems, the BMW Motorrad Connected App must be opened before use.

Currency

The TFT display may be updated after the publication date. Because of this, your motorcycle may differ from the information supplied in the Rider's Manual. Up-to-date information is available at: **bmw-motorrad.com/service**

PRINCIPLE

Controls

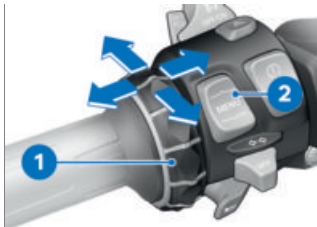

All display content is controlled by means of Multi-Controller **1** and MENU rocker button **2**. Depending on the context, the following functions are possible.

Multi-Controller functions Turn the Multi-Controller upward:

- Move the cursor upwards in lists.
- Adjust settings.
- Increase volume.

Turn the Multi-Controller downward:

- Move the cursor downwards in lists.
- Adjust settings.
- Decrease volume.

Tilt the Multi-Controller to the left:

- Activate the function in accordance with the operation feedback.
- Activate the function to the left or back.
- Go back to the Menu view after making the settings.
- In the Menu view: Change up one level.
- In the My vehicle menu: Advance one menu screen.


Tilt the Multi-Controller to the right:

- Activate the function in accordance with the operation feedback.
- Confirm selection.
- Confirm settings.
- Advance a menu step.
- Scroll to the right in lists.

96 TFT DISPLAY

- In the `My vehicle` menu:
Advance one menu screen.

MENU rocker button functions

 Instructions given by the navigation system are displayed in a dialogue box if the `Navigation` menu has not been called up. Operation of the MENU rocker button is temporarily restricted.

Short-press the top section of the MENU button:

- In the Menu view: Change up one level.
- In Pure Ride view: Change the display for rider info. status line.

Long-press the top section of the MENU button:

- In Menu view: Call up Pure Ride view.
- In Pure Ride view: Change operating focus to the Navigator.


Short-press the bottom section of the MENU button:

- Change down a level.
- No function if the lowest hierarchical level has been reached.


Long-press the bottom section of the MENU button:

- Change back to the last menu after a previous menu change effected by long-pressing the top section of the MENU rocker button.

Operating pointers in the main menu

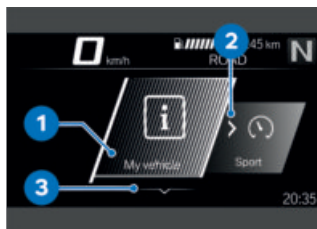

Operating pointers show whether interactions are possible, and which ones.

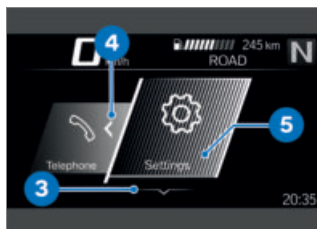


Meaning of the operating pointers:

- Operating pointer **1**: Left end reached.
- Operating pointer **2**: You can scroll to the right.

- Operating pointer **3**: You can scroll down.
- Operating pointer **4**: You can scroll to the left.
- Operating pointer **5**: Right end reached.

Operating pointers in submenus

In addition to the operating pointers in the main menu, there are additional operating pointers in the submenus.

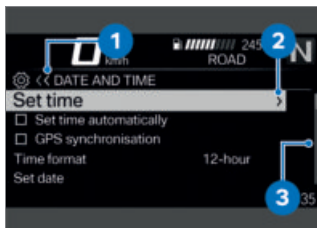

Meaning of the operating pointers:


- Operating pointer **1**: The current display is in a hierarchical menu. One symbol represents one submenu level. Two symbols represent two or more submenu levels. The colour of the symbol changes, depending on whether you can return to a higher level.
- Operating pointer **2**: One more submenu level can be accessed.

- Operating pointer **3**: There are more entries than can be displayed.

Display Pure Ride view

- Long-press the top section of the MENU rocker button.

Switching functions on and off

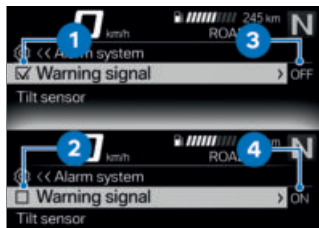


Some menu items have a check box in front of them. The check box shows whether the function is on or off. Action symbols after the menu items indicate what action you can trigger by short-tilting the Multi-Controller to the right.

Examples for switching on and off:

- Symbol **1** shows that the function is switched on.
- Symbol **2** shows that the function is switched off.
- Symbol **3** shows that the function can be switched off.
- Symbol **4** shows that the function can be switched on.

98 TFT DISPLAY

Calling up menu

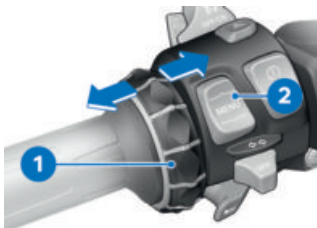


- Display Pure Ride view (▢▢▢▢ 97).
- Short-press the bottom section of button **2**.


The following menus can be called up:

- My vehicle
- Sport
- Navigation
- Media
- Telephone
- Settings

- Repeatedly short-push Multi-Controller **1** to the right until the menu item you want is highlighted.
- Short-press the bottom section of button **2**.


 The Settings menu can only be called up when the vehicle is stationary.

Moving cursor in lists

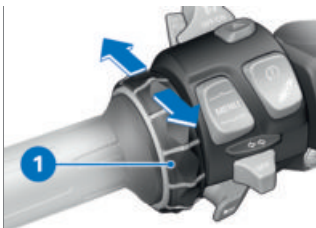

- Call up the menu (▢▢▢▢ 98).
- To move the cursor down in a list, turn Multi-Controller **1** down until the entry you want is highlighted.
- To move the cursor up in a list, turn Multi-Controller **1** up until the entry you want is highlighted.

Confirming selection

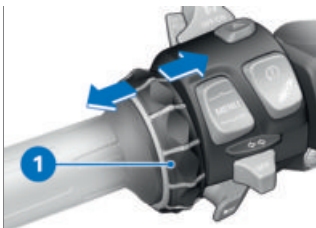


- Select the desired entry.
- Short-push Multi-Controller **1** to the right.

Call up the last menu used

- In Pure Ride view: press and hold the MENU rocker button.
- » The last menu used is called up. The last entry highlighted is selected.

System status displays

The system status is displayed in the lower area of the menu if a function is switched on or off.

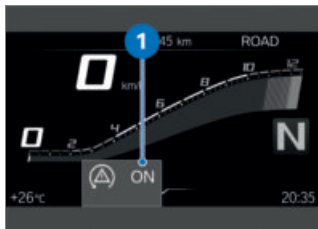

Examples of what the system statuses mean:

- System status 1: DTC function is switched on.

Selecting display of the top status line

Requirement

The vehicle is at a standstill.
The Pure Ride view is displayed.

- Switch on the ignition (III 62).
- » The TFT display shows all the information necessary for riding on public roads from the on-board computer (e.g. TRIP 1) and the trip com-

puter (e.g. TRIP 2). The information can be displayed in the top status line.

- with tyre pressure control (RDC) ^{OE}

» Information from the tyre pressure control can also be displayed. <

- Select the content of the top status line (III 100).



- Long-press button 1 to obtain the Pure Ride view.
- Repeatedly short-press button 1 to select the value in the top status line 2.

The following values can be displayed:



Total distance

–Current distance 1

–Current distance 2



Consumption 1 (Average)



Consumption 2 (Average)

100 TFT DISPLAY



Riding time 1



Riding time 2



Break 1



Break 2



Speed 1 (Average)



Speed 2 (Average)



Tyre pressure



Fuel tank level




Range

Selecting content of the top status line

- Navigate to Settings, Display, Status line content.
- Switch on the desired displays.
- » You can switch between the selected displays in the top status line. If no displays are selected, only the range will be displayed.

Adjust settings

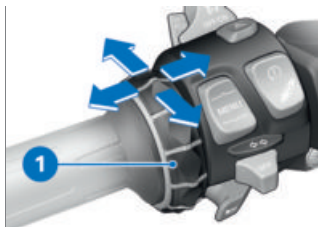

- Select and confirm the desired settings menu.
- Turn Multi-Controller 1 down until the setting you want is highlighted.
- If an operating pointer shows, tilt Multi-Controller 1 to the right.
- If no operating pointer shows, tilt Multi-Controller 1 to the left.
- » The setting is saved.


Switching Speed Limit Info on or off

Requirement

Vehicle is connected to a compatible mobile device. The BMW Motorrad Connected app is installed on the mobile device.

- Speed Limit Info shows the maximum speed permitted at the time, if this information is made available by the publisher of the map material in the navigation system.

- Navigate to Settings, Display.
- Switch Speed Limit Info on or off.


 The Speed Limit Info is not available if Settings, Racetrack is activated.

PURE RIDE VIEW

Rev. counter




- 1 Scale
- 2 Low engine speed range
- 3 Upper/red engine speed range
- 4 Needle
- 5 Secondary indicator
- 6 Unit for engine speed display:
1000 revolutions per minute

 The red engine speed range changes depending on the coolant temperature: The colder the engine, the lower the engine speed at which the red engine speed range starts.

The warmer the engine, the higher the speed at which the red engine speed range starts. When operating temperature is reached, the display of the red engine speed range no longer changes.

Range

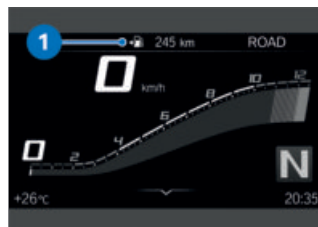

The range readout **1** indicates how far you can ride with the fuel remaining in the tank. This distance is calculated on the basis of average consumption and the quantity of fuel on board.

—When the vehicle is propped on its side stand the slight angle of inclination means that the sensor cannot register the fuel level correctly.

This is the reason why the range is recalculated only when the side stand is in the retracted position.

—The range is shown together with a warning once the fuel reserve has been reached.

102 TFT DISPLAY

- After a refuelling stop, range is recalculated if the amount of fuel in the tank is greater than the reserve quantity.
- The calculated range is only an approximate figure.

GENERAL SETTINGS

Adjusting volume

- Connect rider's and passenger's helmet (▣▣▣ 105).
- Increase volume: turn the multi-controller upwards.
- Decrease volume: turn the multi-controller downwards.
- Mute: turn the multi-controller all the way down.

Setting the date

- Switch on the ignition (▣▣▣ 62).
- Navigate to Settings, System settings, Date and time, Set date.
- Set Day, Month and Year.
- Confirm setting.

Set date format

- Navigate to Settings, System settings, Date and time, Date format.
- Select the desired setting.
- Confirm setting.

Setting clock

- Switch on the ignition (▣▣▣ 62).
- Navigate to Settings, System settings, Date and time, Set time.

- Set Hour and Minute.

Setting time format

- Navigate to Settings, System settings, Date and time, Time format.
- Select the desired setting.
- Confirm setting.

Setting units of measurement

- Navigate to Settings, System settings, Units.
- The following units of measurement can be set:
- Distance covered
 - Pressure
 - Temperature
 - Speed
 - Consumption

Setting language

- Navigate to Settings, System settings, Language.
- The following languages can be set:
- German
 - English (UK)
 - English (US)
 - Spanish
 - French
 - Italian
 - Dutch
 - Polish
 - Portuguese
 - Turkish
 - Russian
 - Ukrainian
 - Chinese
 - Japanese

- Korean
- Thai

Adjusting brightness

- Navigate to `Settings`, `Display`, `Brightness`.
- Adjust display brightness.
- » When ambient brightness drops below a defined threshold, the display is dimmed to the brightness set here.

Resetting all settings

- All the settings in the `Settings` menu can be reset to the factory settings.
- Call up the `Settings` menu.
- Select `Reset all` and confirm.

The settings in the following menus are reset:

- Vehicle settings
- System settings
- Connections
- Display
- Information

- » Existing Bluetooth connections are not deleted.

BLUETOOTH

Short-range wireless technology

Bluetooth is a short-range wireless technology. Bluetooth devices are short-range devices transmitting on the license-free ISM band (Industrial, Scientific, Medical) between 2.402 GHz and 2.480 GHz. They can be operated anywhere in the world without a licence being required.

Although Bluetooth is designed to establish and sustain robust connections over short distances, as with every other wireless technology disruptions are possible. Interference can affect connections or connections can sometimes fail. Particularly when multiple devices operate in a Bluetooth network, with wireless technology of this nature it is not possible to ensure fault-free communications in every situation.

Possible sources of interference:


- interference zones due to transmission masts and similar.
- devices with non-compliant Bluetooth implementations.

104 TFT DISPLAY

–proximity of other Bluetooth-compatible devices.

Pairing

Two Bluetooth devices have to recognise each other before they can communicate. This process of mutual recognition is known as pairing. When two devices have paired they remember each other, so the pairing process is conducted only once, on initial contact.

 On some mobile devices, e.g. those with iOS operating systems, the BMW Motorrad Connected App must be opened before use.

During the pairing process, the TFT display searches for other Bluetooth-compatible devices within its reception range. The conditions that have to be satisfied before the audio system can recognise another device are as follows:

- The device's Bluetooth function must be active
- The device must be "visible" to others
- The device must support the A2DP profile
- Other Bluetooth-compatible devices must be OFF (e.g. mobile phones and navigation systems).

Please consult the operating instructions for your communication system.


Pairing

- Call up the **Settings, Connections** menu.
- » Bluetooth connections can be established, managed and deleted in the **CONNECTIONS** menu. The following Bluetooth connections are displayed:

- Mobile device
- Rider's helmet
- Passenger helm.

The connection status for mobile devices is displayed.

Connect mobile device

- Pairing ( 104).
- Activate the mobile device's Bluetooth function (see mobile device's operating instructions).
- Select **Mobile device** and confirm.
- Select **Pair new mobile device** and confirm.

Mobile devices are being searched for.



The Bluetooth symbol flashes in the bottom status line during pairing.

Mobile devices found are displayed.

- Select and confirm mobile device.
- Follow the instructions on the mobile device.
- Confirm that the code matches.
- » The connection is established and the connection status updated.
- » If the connection is not established, consult the troubleshooting chart in the section entitled "Technical data". (►►► 238)
- » Depending on the mobile device, telephone data is transferred to the vehicle automatically.
- » Telephone data (►►► 112)
- » If the telephone book is not displayed, consult the troubleshooting chart in the section entitled "Technical data". (►►► 239)
- » If the Bluetooth connection does not work as expected, consult the troubleshooting chart in the section entitled "Technical data". (►►► 239)

Connect rider's and passenger's helmet

- Pairing (►►► 104).
- Select Rider's helmet or Passenger helm. and confirm.

- Make the helmet's communication system visible.
- Select Pair new rider's helmet or Pair new passenger helmet and confirm. Helmets are searched for.



The Bluetooth symbol flashes in the bottom status line during pairing.

Helmets found are displayed.

- Select and confirm helmet.
- » The connection is established and the connection status updated.
- » If the connection is not established, consult the troubleshooting chart in the section entitled "Technical data". (►►► 238)
- » If the Bluetooth connection does not work as expected, consult the troubleshooting chart in the section entitled "Technical data". (►►► 239)


Deleting connections

- Call up the Settings, Connections menu.
- Select Delete connections.
- To delete an individual connection, select the connection and confirm.
- To delete all connections, select Delete all connections and confirm.

106 TFT DISPLAY


MY VEHICLE

Start screen

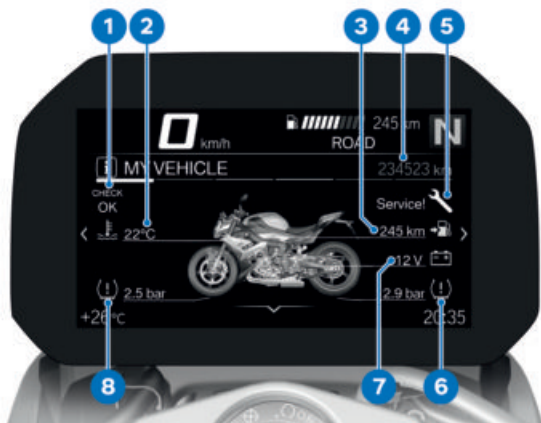


- 1 Check Control display
(31)
- 2 Coolant temperature
(43)
- 3 Range (101)
- 4 Odometer
- 5 Service display (57)
- 6 Tyre pressure, rear
(46)
- 7 On-board voltage
(216)
- 8 Tyre pressure, front
(46)

Operating pointers

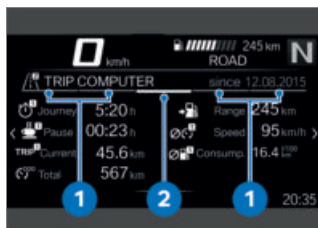

- Operating pointer 1: Indicators showing how far you can scroll to the left or right.
- Operating pointer 2: Indicator showing the position of the current menu screen.


Scrolling through menu screens

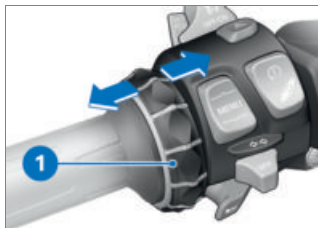

- Call up the **My vehicle** menu.
- To scroll to the right, short-press Multi-Controller 1 to the right.
- To scroll to the left, short-press Multi-Controller 1 to the left.

The **My vehicle** menu contains the following screens:

- MY VEHICLE
- ON-BOARD COMPUTER
- TRIP COMPUTER
- with tyre pressure control (RDC) OE
- TYRE PRESSURE<
- SERVICE REQUIREMENTS
- CC MESSAGE (if available)
- For more information on tyre pressures and Check Control messages, see the section entitled "Check Control display" (► 31).

 Check Control messages are attached dynamically to the menu screens as additional tabs in the **My vehicle** menu.

On-board computer and trip computer

The **ON-BOARD COMPUTER** and **TRIP COMPUTER** menu screens display vehicle and trip data, such as average values.

Operating on-board computer

Operating principle of the controls (► 95)

Calling up on-board computer

- Call up the **My vehicle** menu.

108 TFT DISPLAY

- Scroll to the right until the ON-BOARD COMPUTER menu screen is displayed.

Resetting on-board computer

- Call up the on-board computer (107).
- Press down the MENU rocker button.
- Select Reset all values or Reset individual values and confirm.

The following values can be reset:

- Break
- Journey
- Current (TRIP 1)
- Speed
- Consump.

Calling up trip computer


- Call up the on-board computer (107).
- Scroll to the right until the TRIP COMPUTER menu screen is displayed.

Resetting trip computer

- Call up the trip computer (108).
 - Press down the MENU rocker button.
 - Select Autom. reset or Reset all values and confirm.
- » If Autom. reset is selected, the trip computer is automatically reset when a minimum

of 6 hours have passed and the date has changed since the ignition was switched off.

Service requirements

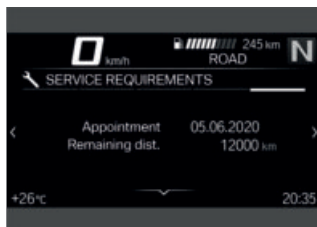

When the next service is due within less than a month or within 1000 km, a white Check Control message is displayed.

NAVIGATION

Warnings



WARNING

Using a smartphone while riding or while the engine is running

Risk of accident

- Always comply with the road traffic regulations in force where you are riding.
- No use (with the exception of applications without operation, such as hands-free telephony) while riding.



WARNING

Distraction from the road and loss of control

Operating the integrated information system and communication devices while driving results in a risk of accident

- Operate those systems or devices only when the traffic situation allows for it.
- If necessary, stop and operate the systems or devices when stationary.

Precondition

The vehicle is connected via Bluetooth to a compatible mobile device.

The BMW Motorrad Connected app is installed on the connected mobile device.



On some mobile devices, e.g. those with iOS operating systems, the BMW Motorrad Connected App must be opened before use.

Entering destination address

- Connect mobile device (➡ 104).
- Call up the BMW Motorrad Connected app and start the route guidance.
- Call up the Navigation menu in the TFT display.
 - » Active route guidance is displayed.
 - » If active route guidance is not displayed, consult the troubleshooting chart in the section entitled "Technical data". (➡ 239)

Selecting destination from recent destinations

- Call up the Navigation, Recent destinations menu.
- Select and confirm destination.

110 TFT DISPLAY

- Select Start route guidance.

Selecting destination from favourites

- The FAVOURITES menu displays all destinations which have been saved as favourites in the BMW Motorrad Connected app. You cannot use the TFT display to add favourites to the list.
- Call up the Navigation, Favourites menu.
- Select and confirm destination.
- Select Start guidance.

Entering special destinations

- Special destinations, such as points of interest, can be displayed on the map.
- Call up the Navigation, POIs menu.

The following locations can be selected:

- At current location
- At destination
- Along the route
- Select where the special destinations should be looked for. e.g. the following special destination can be selected:
 - Filling station
- Select and confirm the special destination.
- Select Start route guidance and confirm.

Setting route criteria

- Call up the Navigation, Route criteria menu. The following criteria can be selected:
 - Route type
 - Avoid
- Select desired Route type.
- Switch desired Avoid on or off.

The number of avoidances activated is displayed in brackets.

Ending route guidance

- Call up the Navigation, Active route guidance menu.
- Select End route guidance and confirm.

Switching spoken instructions on or off

- Connect rider's and passenger's helmet (105).
- The navigation can be read out by a computer voice. For this purpose, Spoken instruction must be switched on.
- Call up the Navigation, Active route guidance menu.
- Switch Spoken instruction on or off.

Repeating last spoken instruction


- Call up the Navigation, Active route guidance menu.
- Select Current instruction and confirm.



MEDIA

Precondition


The vehicle is connected to a compatible mobile device and helmet.

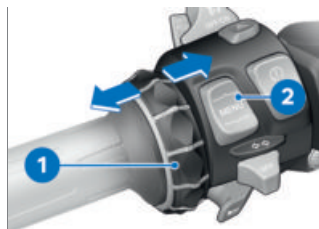Control music playback



- Call up the Media menu.
-  BMW Motorrad recommends setting the volume on the mobile end device for media and calls to maximum before setting off.
- Adjust the volume ( 102).
- Next track: Short-tilt Multi-Controller **1** to the right.
- Last track or start of the current track: Short-tilt Multi-Controller **1** to the left.

- Fast forward: Long-tilt Multi-Controller **1** to the right.
- Rewind: Long-tilt Multi-Controller **1** to the left.
- Call up context menu: Press bottom section of button **2**.

 Depending on the mobile device, the scope of the Connectivity functions may be restricted.

- » The following functions can be used in the context menu:
- Playback or Pause.
 - Select the Now playing, All artists, All albums or All tracks category for search and playback.
 - Select Playlists.

You can make the following adjustments in the Audio settings submenu:

- Switch Shuffle on or off.
- Select Repeat: Off, One (current track) or All.


TELEPHONE

Precondition

The vehicle is connected to a compatible mobile device and helmet.

112 TFT DISPLAY

Telephone calls

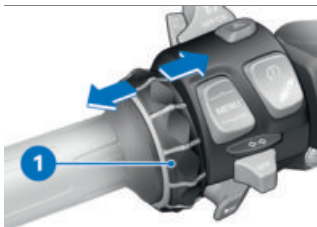

- Call up the Telephone menu.
- Accept call: Tilt Multi-Controller 1 to the right.
- Reject call: Tilt Multi-Controller 1 to the left.
- End call: Tilt Multi-Controller 1 to the left.

Muting

During active phone calls, the microphone in the helmet can be muted.

Phone calls with multiple participants

While a phone call is in progress, a second call can be accepted. The first phone call is put on hold. The number of active calls is shown in the Telephone menu. It is possible to switch between two phone calls.

Telephone data

Depending on the mobile device, when pairing (104) completes telephone data are automatically sent to the vehicle.

Phone book: List of contacts saved on the mobile device

Call list: List of calls with the mobile device

Favourites: List of favourites saved on the mobile device

DISPLAY SOFTWARE VERSION

- Navigate to Settings, Information, Software version.

DISPLAY LICENCE INFORMATION

- Navigate to Settings, Information, Licences.

ADJUSTMENT

06

MIRRORS	116
HEADLIGHT	116
BRAKES	117
CLUTCH	118
FOOTREST SYSTEM	118
SPRING PRELOAD	120
DAMPING	124

116 ADJUSTMENT


MIRRORS

Adjusting mirrors



- Turn the mirror to the desired position.

Adjusting mirror arm

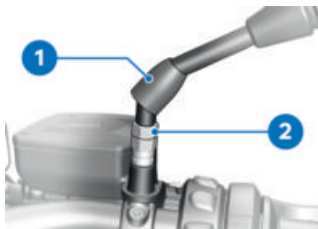

- Push protective cap **1** up the mirror arm to expose the threaded fastener.
- Loosen lock nut **2**.
- Turn the mirror arm to the appropriate position.
- Tighten the locknut to the specified tightening torque, while holding the mirror arm to ensure that it does not move out of position.



Mirror with lock nut to adapter

22 Nm (Left-hand thread)

- Push protective cap **1** over the threaded fastener.

HEADLIGHT

Headlight adjustment for right-hand or left-hand traffic

This motorcycle has a symmetric-beam low-beam headlight. If the motorcycle is ridden in a country where the opposite rule of the road applies, its symmetric low-beam headlight means that no measures are necessary to prevent the headlight beam from dazzling oncoming traffic.

Headlight beam throw and spring preload

Headlight beam throw is generally kept constant when spring preload is adjusted to suit load. Headlight beam throw is set correctly ex-works.



If there are doubts about the correct headlight beam throw, have the setting checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

BRAKES

Adjusting brake lever



WARNING

Relocated brake fluid tank

Air in the brake system

- Do not turn the handlebars or the handlebar fitting on the handlebar.




WARNING


Adjusting the handbrake lever while riding

Risk of accident

- Do not attempt to adjust the handbrake lever unless the motorcycle is at a standstill.

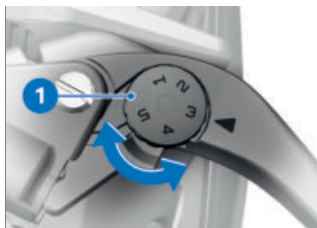


- Applying light pressure from behind, turn adjusting screw **1** to the desired position.

 The adjusting screw is easier to turn when the handbrake lever is pushed forward.

» Adjustment options:

- Position 1: Narrowest span between handlebar grip and brake lever
- Position 5: Widest span between handlebar grip and brake lever

–with Billet pack^{OE}

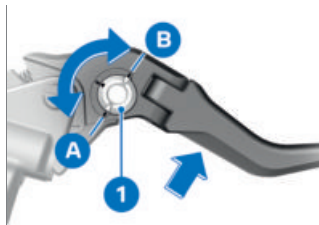

- Turn adjustment lever **1** to the desired position.



The adjuster is easier to turn if you push the brake lever forward.

» Adjustment options:

- From position **A**: Narrowest span between handlebar grip and handbrake lever.
- In 4 steps toward position **B** to increase the span between handlebar grip and handbrake lever.◀

118 ADJUSTMENT

CLUTCH

Adjusting clutch lever



WARNING


Adjusting the clutch lever while riding

Risk of accident

- Adjust the clutch lever only when the motorcycle is at a standstill.




- Turn adjuster knob **1** to the desired position.

 The adjuster is easier to turn if you push the clutch lever forward.


» Adjustment options:

- Position 1: Narrowest span between handlebar grip and clutch lever
- Position 5: Widest span between handlebar grip and clutch lever

–with Billet pack^{OE}

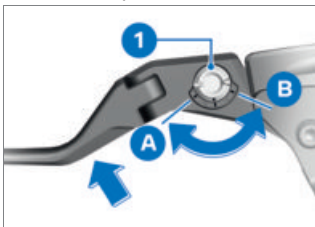

- Turn adjustment lever **1** to the desired position.

 The adjuster is easier to turn if you push the clutch lever forward.

» Adjustment options:


- From position **A**: Narrowest span between handlebar grip and clutch lever.
- In 4 steps in direction of position **B** for enlarging the distance between handlebar grip and clutch lever.◁

FOOTREST SYSTEM

–with Billet pack^{OE}

Adjusting rotor

- Setting of the rotor is the same on the right and left.
- The position of the rotor must be set identically on the right and left.

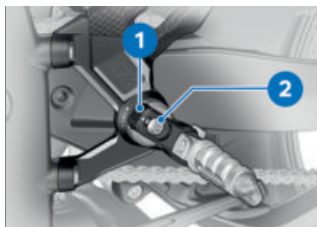

- Rotor **1** enables foot clearance and foot position to be adjusted.
- Slacken screw **2**.
 - » Angle of rotor **1** can be adjusted to any of 3 positions around its axis of rotation.
 - » Rotor **1** can be moved to any of 3 positions around its axis of rotation.
- Set rotor **1** to the desired position and tighten screw **2**.



Rotor to base plate

28 Nm



WARNING

Incorrectly adjusted footrest as a result of movement of the rotor.


Risk of falling

- The footrest setting must be adjusted accordingly if the rotor has moved.

- The footrest may only fold upwards and slightly towards the rear.

Adjusting footrest hinge

- Setting of the footrest joint is the same on the right and left.

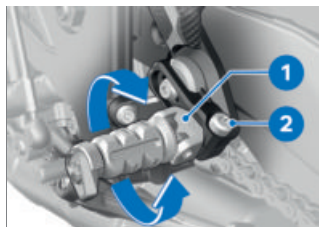

- Slacken screw **2**.
 - » Footrest joint **1** can be turned.
- Position footrest joint **1** so that the footrest can be flipped up and slightly to the rear.
- Tighten screw **2**.




Footrest hinge to rotor

28 Nm

120 ADJUSTMENT

Adjusting footbrake lever peg

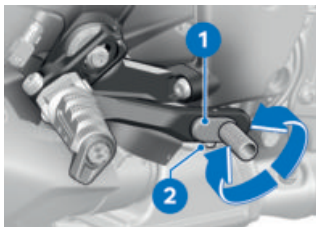

- Foot clearance and height relative to peg **1** can be adjusted by turning to different positions.
- Slacken screw **2**.
- Turn peg **1** to the desired position.
- Tighten screw **2**.



Peg to footbrake lever

Thread-locking compound:
micro-encapsulated

9 Nm

SPRING PRELOAD

Adjustment



WARNING

Incorrect spring-preload and spring-strut damping settings.

Impaired handling.

- Adapt spring preload and spring strut damping to the payload carried by the motorcycle.

Spring preload has to be adjusted to suit the weight of rider, passenger and luggage. Increase spring preload for heavy loads, decrease spring preload for light loads.


Lifting the motorcycle

To adjust the spring preload, an engine lifter is required; however this subject will not be dealt with in detail. If you are not sure whether this work is within your capability, contact a specialist workshop, preferably an authorised BMW Motorrad retailer.

Adjusting spring preload for front wheel

- Make sure the ground is level and firm and place the motorcycle on its stand.

- Lift the motorcycle with an engine lifter until there is no load on the front wheel.

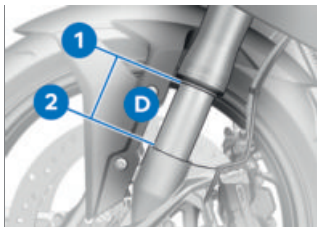


- Measure distance **D** between points **1** and **2**.
- Remove the engine lifter.
- Make sure the ground is level and firm and place the motorcycle on its stand.
- Apply the rider's weight to the motorcycle.
- With the assistance of a second person, measure the distance **D** between the points **1** and **2** again and calculate the difference (compression) between the measured values.



Load-dependent adjustment of spring preload

Negative spring displacement of front wheel

50 mm (with rider 85 kg)

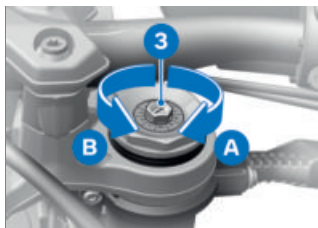

WARNING

Spring preload setting and spring-strut damping setting not matched.

Impaired handling.


- Adjust spring-strut damping to suit spring preload.
- To reduce compression (increase spring preload), use the tool from the on-board toolkit to turn adjusting screw **3** in direction **A**. The toolkit includes an appropriate adapter that protects the screw from scratches.
- To increase compression (reduce spring preload), use the tool from the on-board toolkit to turn adjusting screw **3** in direction **B**. The toolkit includes an appropriate adapter that protects the screw from scratches.

122 ADJUSTMENT

Adjusting spring preload for rear wheel

—without Dynamic Damping Control (DDC)^{OE}

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Use the engine lifter to raise the vehicle until the weight is completely off the rear wheel.

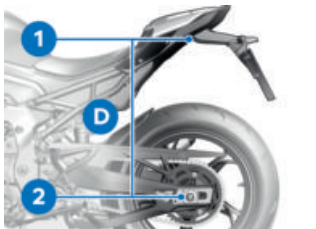


- Measure distance **D** between number plate carrier **1** and axle **2**.
- Remove the engine lifter.
- Make sure the ground is level and firm and place the motorcycle on its stand.
- Subject the motorcycle to load with a rider, and possibly with luggage.
- With the assistance of a second person, measure the distance **D** between the points **1** and **2** again and calculate the difference (compression) between the measured values.



Load-dependent adjustment of spring preload

Suspension compression at rear wheel

40 mm (with rider 85 kg)

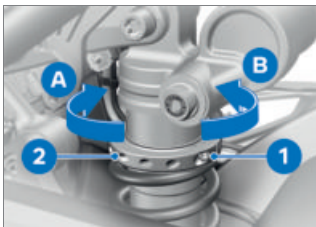

WARNING

Spring preload setting and spring-strut damping setting not matched.

Impaired handling.

- Adjust spring-strut damping to suit spring preload.
- Loosen screw **1** with toolkit.
- To reduce compression (increase spring preload), use the tool from the on-board toolkit to turn adjusting ring **2** in direction **A**.
- To increase compression (reduce spring preload), use the tool from the on-board toolkit to turn adjusting ring **2** in direction **B**.

- Tighten screw **1** to the specified tightening torque.




Screw in adjusting ring


3 Nm

Adjusting spring preload for rear wheel

—with Dynamic Damping Control (DDC)^{OE}

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Use the engine lifter to raise the vehicle until the weight is completely off the rear wheel.
- Switch on the ignition.
- Start the engine to avoid discharging the battery.

 Adjustments to the DDC system are possible only with the ignition switched on, because only then are the electric valves active.

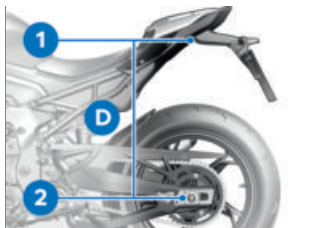

- Measure distance **D** between number plate carrier **1** and axle **2**.
- Remove the engine lifter.
- Make sure the ground is level and firm and place the motorcycle on its stand.
- Subject the motorcycle to load with a rider, and possibly with luggage.
- With the assistance of a second person, measure the distance **D** between the points **1** and **2** again and calculate the difference (compression) between the measured values.




Load-dependent adjustment of spring preload

Suspension compression at rear wheel

40 mm (with rider 85 kg)

124 ADJUSTMENT

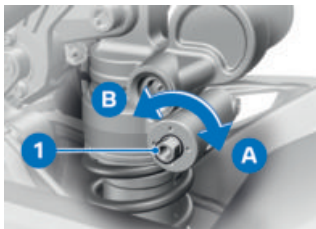

WARNING

Spring preload setting and spring-strut damping setting not matched.

Impaired handling.

- Adjust spring-strut damping to suit spring preload.
- To reduce compression (increase of spring preload), turn screw **1** using toolkit in the direction **A**.
- To increase compression (reduction of spring preload), turn screw **1** using toolkit in the direction **B**.

DAMPING

Correct setting for the damping characteristic



WARNING

Incorrect spring-preload and spring-strut damping settings.

Impaired handling.

- Adapt spring preload and spring strut damping to the payload carried by the motorcycle.

Damping must be adapted to suit the surface on which the motorcycle is ridden and to suit spring preload.

—An uneven surface requires softer damping than a smooth surface.


—An increase in spring preload requires firmer damping, a reduction in spring preload requires softer damping.

—with Dynamic Damping Control (DDC)^{OE}

Electronic Suspension Adjustment (DTC) (► 75)

Adjusting compression-stage damping for front wheel


—without Dynamic Damping Control (DDC)^{OE}

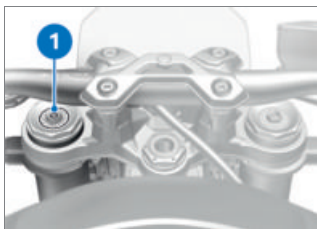

- Adjust compression-stage damping using the adjusting screw **1** and the yellow scale on the left fork leg.



- To increase damping: Use the tool from the on-board toolkit to turn the adjusting screw so that mark **2** points to a higher value on the scale.
- To reduce damping: Use the tool from the on-board toolkit to turn the adjusting screw so that mark **2** points to a lower value on the scale.

 Compression stage, basic setting, front

Position 4 (Road use with rider 85 kg)

Adjusting rebound-stage damping for front wheel

—without Dynamic Damping Control (DDC)^{OE}



- Adjust rebound-stage damping using the adjusting screw **1** and red scale on the right fork leg.



- To increase damping: Use the tool from the on-board toolkit to turn the adjusting screw so

126 ADJUSTMENT

that mark **2** points to a higher value on the scale.

- To reduce damping: Use the tool from the on-board toolkit to turn the adjusting screw so that mark **2** points to a lower value on the scale.



Rebound stage, basic setting, front

Position 4 (Road use with rider 85 kg)

Adjusting compression-stage damping for rear wheel

—without Dynamic Damping Control (DDC)^{OE}

- Make sure the ground is level and firm and place the motorcycle on its stand.



- Adjust the compression-stage damping by using the adjusting screw **1**.



- To increase damping: Use the tool from the on-board toolkit to turn the adjusting screw clockwise in the **+** direction.
- To reduce damping: Use the tool from the on-board toolkit to turn the adjusting screw counter-clockwise in the **-** direction.



Compression stage, basic setting, rear

Turn adjusting screw **1** to the limit position in direction **+**, then turn it 6 clicks in direction **-**. (Road use with rider 85 kg)

Turn adjusting screw **1** to the limit position in direction **+**, then turn it 5 clicks in direction **-**. (Two-up with luggage)

Adjusting rebound-stage damping for rear wheel

—without Dynamic Damping Control (DDC)^{OE}



CAUTION


Hot exhaust system

Risk of burn injury

- Do not touch a hot exhaust system.
- Make sure the ground is level and firm and place the motorcycle on its stand.



- Adjust rebound-stage damping using the adjusting screw **1**.

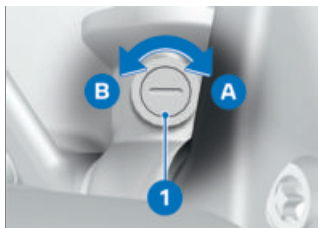

- To increase damping: turn the adjusting screw **1** in the direction **A** with the toolkit.
- To reduce damping: turn the adjusting screw **1** in the direction **B** with the toolkit.



Rebound stage, basic setting, rear

Turn adjuster knob to the limit position in direction **A**, then turn it 6 clicks in direction **B**. (Road use with rider 85 kg)

Turn adjusting screw **1** to the limit position in direction **+**, then turn it 5 clicks in direction **-**. (Two-up with luggage)

RIDING

07

SAFETY INFORMATION	130
REGULAR CHECK	132
STARTING	133
RUNNING IN	136
SHIFTING GEAR	137
BRAKES	138
PARKING YOUR MOTORCYCLE	141
REFUELLING	141
SECURING MOTORCYCLE FOR TRANSPORTATION	143

SAFETY INFORMATION

Rider's equipment

Do not ride without the correct clothing! Always wear

- Helmet
- Suit
- Gloves
- Boots

This applies even to short journeys, and to every season of the year. Your authorised BMW Motorrad retailer will be happy to advise you on the correct clothing for every purpose.



WARNING

Loose textiles, items of luggage or straps snagged by open rotating parts of the vehicle (wheels, drive shaft)

Risk of accident

- Make sure that loosely worn or carried textiles cannot be snagged by openly rotating parts of the vehicle.
- Keep all items of luggage and straps well clear of openly rotating parts of the vehicle.

Loading



WARNING

Handling adversely affected by overloading and imbalanced loads

Risk of falling

- Do not exceed the permissible gross weight and be sure to comply with the instructions on loading.



ATTENTION

Luggage securing not in compliance with correct procedure

Component damage

- Do not use openings in the rear trim panel for lashing luggage to the vehicle.
- Adjusting spring preload setting and damping to the total weight.

Speed

If you ride at high speed, always bear in mind that various boundary conditions can adversely affect the handling of your motorcycle:

- Settings of the spring-strut and shock-absorber system
- Imbalanced load
- Loose clothing
- Insufficient tyre pressure
- Poor tyre tread
- Etc.

Risk of poisoning

Exhaust fumes contain carbon monoxide, which is colourless and odourless but highly toxic.



WARNING

Exhaust gases adversely affecting health

Risk of asphyxiation

- Do not inhale exhaust fumes.
- Do not run the engine in an enclosed space.



WARNING

Inhalation of harmful vapours

Health hazard

- Do not inhale vapours from operating fluid and plastics.
- Use the vehicle only out-doors.

Risk of burn injury



CAUTION

Engine and exhaust system become very hot when the vehicle is in use

Risk of burn injury

- When you park the vehicle make sure that no-one and no objects can come into contact with the hot engine and exhaust system.

Catalytic converter

If misfiring causes unburned fuel to enter the catalytic converter, there is a danger of overheating and damage.

The following guidelines must be observed:

- Do not run the fuel tank dry.
- Do not attempt to start or run the engine with a spark-plug cap disconnected.
- Stop the engine immediately if it misfires.
- Use only unleaded fuel.
- Comply with all specified maintenance intervals.



ATTENTION

Unburned fuel in catalytic converter

Damage to catalytic converter

- Note the points listed for protection of the catalytic converter.

Risk of overheating



ATTENTION

Engine running for prolonged period with vehicle at standstill

Overheating due to insufficient cooling; in extreme cases vehicle fire

- Do not allow the engine to idle unnecessarily.
- Ride away immediately after starting the engine.

Tampering



ATTENTION

Tampering with the motorcycle (e.g. engine management ECU, throttle valves, clutch)

Damage to the affected parts, failure of safety-relevant functions, voiding of warranty

- Do not tamper with the vehicle in any way that could result in tuned performance.

REGULAR CHECK

Comply with checklist

At regular intervals, use the checklist below to check your motorcycle.

When load status changes:

- Adjust the spring preload for front wheel (120).
- Adjust the spring preload for the rear wheel (122).
- Adjust the damping characteristic for the front wheel (124).
- Adjust the damping for the rear wheel (126).

- with Dynamic Damping Control (DDC)^{OE}
- Adjust for loaded state (▮▮▮ 77).

Always before riding off

- Check operation of the brake system (▮▮ 190).
- Check operation of the lights and signalling equipment.
- Check operation of the clutch (▮▮▮ 195).
- Check the tyre tread depth (▮▮▮ 198).
- Check the tyre pressures (▮▮▮ 198).



ATTENTION

Luggage securing not in compliance with correct procedure

Component damage

- Do not use openings in the rear trim panel for lashing luggage to the vehicle.

- Check security of luggage.

Every 3rd refuelling stop

- Check the engine oil level (▮▮▮ 189).
- Check the brake pad thickness, front brakes (▮▮▮ 191).
- Check the brake pad thickness, rear brakes (▮▮▮ 192).
- Check the brake-fluid level, front brakes (▮▮▮ 193).

- Check the brake-fluid level, rear brakes (▮▮▮ 194).
- Check the coolant level (▮▮▮ 197).
- Lubricate the chain (▮▮▮ 207).
- Check chain sag (▮▮▮ 208).
- Check chain wear (▮▮▮ 210).

STARTING

Starting engine

- Switch on the ignition.
 - » Pre-Ride-Check is performed. (▮▮▮ 134)
 - » ABS self-diagnosis is in progress. (▮▮▮ 135)
 - » DTC self-diagnosis is in progress. (▮▮▮ 135)
- Select neutral or, if a gear is engaged, pull the clutch lever.



You cannot start the motorcycle with the side stand extended and a gear engaged. The engine will switch itself off if you start it with the gearbox in neutral and then engage a gear before retracting the side stand.



To ensure rapid operational readiness of the catalytic converter, idle speed is increased for a short time after engine start.


- with M Lightweight battery^{OE}
 - » Low temperatures can impact on the starting response. Repeated, brief application of

134 RIDING

load on the battery causes battery temperature to rise, so more battery power is available for starting the engine.◁



- Press starter button 1.

 The start attempt is automatically interrupted if battery voltage is too low. Recharge the battery before you start the engine, or use jump leads and a donor battery to start. See the subsection on jump starting in "Maintenance" for more details.

- » The engine starts.
- » Consult the troubleshooting chart below if the engine refuses to start. (▮▮▮ 238)

Pre-Ride-Check

The instrument cluster runs a test of the instruments and the indicator and warning lights when the ignition is switched on. This test is known as the Pre-Ride-Check. The check is

aborted if you start the engine before it completes.

Phase 1

All indicator and warning lights are switched on.

After a longer vehicle stand-still period, an animation is displayed when the system starts up.

Phase 2

The 'General' warning light changes from red to yellow.

Phase 3

All the indicator and warning lights switched on in the initial phase are switched off in reverse sequence.

The malfunction indicator lamp (MIL) does not go out until 15 seconds have elapsed.

If one of the indicator and warning lights did not switch on:

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

ABS self-diagnosis

BMW Motorrad Integral ABS performs self-diagnosis to ensure its operability. Self-diagnosis starts automatically when you switch on the ignition.

Phase 1

» Test of the diagnosis-compatible system components with the vehicle at a standstill.



flashes.

Phase 2

» Test of the wheel-speed sensors as the vehicle pulls away from rest.



flashes.

ABS self-diagnosis completed

» The ABS indicator and warning light goes out.



ABS self-diagnosis not completed

The ABS function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel sensors to be checked: min 5 km/h)

If an indicator showing an ABS fault appears when ABS self-diagnosis completes:

- You can continue to ride.
Bear in mind that neither the ABS function nor the integral braking function is available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

DTC self-diagnosis

BMW Motorrad DTC performs self-diagnosis to ensure its operability. Self-diagnosis is performed automatically when you switch on the ignition.

Phase 1

» Test of the diagnosis-compatible system components with the vehicle at a standstill.



slow-flashes.

Phase 2

» Pullaway test of the system components with diagnostic capability.



slow-flashes.

136 RIDING

DTC self-diagnosis completed

» The DTC symbol no longer shows.

- Observe all the indicator and warning lights.



DTC self-diagnosis not completed

The DTC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel sensors to be checked: min 5 km/h)

If an indicator showing a DTC fault appears when DTC self-diagnosis completes:

- You can continue to ride.
Bear in mind that the DTC function is not available or the functionality might be subject to certain restrictions.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

RUNNING IN

Engine

- Until the running-in check, vary the throttle opening and engine-speed range frequently; avoid riding at constant engine rpm for prolonged periods.
- Try to do most of your riding during this initial period on twisting, fairly hilly roads.
- Comply with the running-in speeds.



Running-in speed

$<7000 \text{ min}^{-1}$ (Odometer reading 0...300 km)

No full load (Odometer reading 0...1000 km)

- Note the mileage after which the running-in check should be carried out.



Mileage until the running-in check

500...1200 km

Brake pads

New brake pads have to bed down before they can achieve their optimum friction levels. You can compensate for this initial reduction in braking efficiency by exerting greater pressure on the levers.

**WARNING****New brake pads**

Longer stopping distance, risk of accident

- Apply the brakes in good time.

Tyres

New tyres have a smooth surface. This must be roughened by riding in a restrained manner at various heel angles until the tyres are run in. This running in procedure is essential if the tyres are to achieve maximum grip.

**WARNING****New tyres losing grip on wet roads and at extreme bank angles**

Risk of accident

- Ride carefully and avoid extremely sharp inclines.

SHIFTING GEAR**Gear Shift Assistant Pro**


—with shift assistant Pro^{OE}



See the section entitled "Engineering details" for more information on Gear Shift Assistant Pro.



For safety reasons, adaptive cruise control is automatically deactivated when Gear Shift Assistant Pro downshifts.

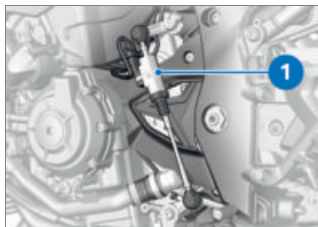

- You select the gear in the usual way by means of the foot-operated shift lever.
- » The sensor **1** on the gearshift rod registers the gearshift request and triggers shift assistance.
- » When riding at a steady speed in a low gear at high engine rpm, an attempt to shift gear without pulling the clutch can cause a severe load-change reaction. BMW Motorrad recommends disengaging the clutch for shifts in these circumstances. It is advisable to avoid using the shift assistant at engine speeds close to the limits at which the governor cuts in to limit engine rpm.

138 RIDING

- » Shift assistance is not available in the following situations:
 - With clutch lever pulled
 - Gearshift lever not in its initial position
 - Upshifts with the throttle valve closed (engine overrun) and when slowing
 - Downshifts with throttle valve open and when accelerating.
- After a gearshift, the shift lever has to be fully released before another gearshift with the shift assistant can take place.

Shift light



- Shift light **1** indicates that the engine speed at which the rider should upshift is approaching.
- Shift light flashes at preset frequency: Approaching upshift rpm
 - Shift light goes out: Engine revving at upshift rpm

The engine-speed thresholds and the way in which the shift light indicates the various states can be customised by navigating to **Settings**, **Vehicle settings**, also see the section on operation (▮▮▮ 86).

BRAKES

How can stopping distance be minimised?

Each time the brakes are applied, a load distribution shift takes place with the load shifting forward from the rear to the front wheel. The sharper the motorcycle decelerates, the more load is shifted to the front wheel. The higher the wheel load, the more braking force can be transmitted without the wheel locking. To optimise stopping distance, apply the front brakes rapidly and keep steadily increasing the force you apply to the brake lever. This makes the best possible use of the dynamic increase in load at the front wheel. Remember to pull the clutch at the same time. BMW Motorrad ABS prevents the front wheel from locking up.

In the "emergency braking situations" that are trained so frequently, braking force is applied as rapidly as possible and with the rider's full force applied to the brake levers; under these circumstances the dynamic shift in load distribution cannot keep pace with the increase in deceleration and the tyres cannot transmit the full braking force to the surface of the road. In the absence of load on the wheel the ABS has to intervene to prevent the front wheel from locking even if the brakes are applied only very lightly. This leads to a reduced braking effect.

Emergency braking

If you brake sharply from a speed in excess of 50 km/h, the brake light flashes rapidly as a warning for road users behind you.

If you brake until your speed is less than 15 km/h, the hazard warning lights start to flash as well. The hazard warning lights switch off automatically as soon as you start to accelerate and vehicle speed reaches 20 km/h.

Descending mountain passes



WARNING

Braking mostly with the rear brake on mountain descents

Brake fade, destruction of the brakes due to overheating

- Use both front and rear brakes, and make use of the engine's braking effect as well.

Wet and dirty brakes

Wetness and dirt on the brake discs and the brake pads diminish braking efficiency. Delayed braking action or poor braking efficiency must be reckoned with in the following situations:

- Riding in the rain or through puddles of water.
- After the vehicle has been washed.
- Riding on salted or gritted roads.
- After work has been carried on the brakes, due to traces of oil or grease.
- Riding on dirt-covered surfaces or off-road.

**WARNING****Wetness and dirt result in diminished braking efficiency**

Risk of accident

- Apply the brakes lightly while riding to remove wetness and dirt, or dismount and clean the brakes.
- Think ahead and brake in good time until full braking efficiency is restored.

ABS Pro**Physical limits applicable to motorcycling****WARNING****Braking when cornering**

Risk of crash despite ABS Pro

- Invariably, it remains the rider's responsibility to adapt riding style to riding conditions.
- Do not take risks that would negate the additional safety offered by this system.




ABS Pro is activated in the RAIN, ROAD and DYNAMIC riding modes.

Possibility of a fall not precluded

Although ABS Pro and Dynamic Brake Control provide the rider with valuable assistance and constitute a huge advance in safety for braking with the motorcycle banked for cornering, they cannot under any circumstances be considered as re-defining the physical limits that apply to motorcycling. It is still possible for these limits to be overshoot due to misjudgement or rider error. In extreme cases this can result in a crash.

Use on public roads

ABS Pro and Dynamic Brake Control help make the motorcycle even safer for riding on public roads. When the brakes are applied because of an unforeseen hazard when the motorcycle is banked for cornering, within the physical limits that apply to motorcycling the ABS Pro system prevents the wheels from locking and skidding away. In emergency braking, Dynamic Brake Control increases the braking effect and intervenes if the throttle grip is accidentally turned during braking.

 ABS Pro was not developed to enhance individual braking performance with the motorcycle banked into corners.

PARKING YOUR MOTORCYCLE

Side stand

- Switch off the engine.
- On a gradient, the motorcycle should always face uphill; select 1st gear.



ATTENTION

Poor ground underneath the stand

Risk of damage to parts if vehicle topples

- Always check that the ground under the stand is level and firm.

- Extend the side stand and prop the motorcycle on the stand.



ATTENTION

Additional weight placing strain on the side stand

Risk of damage to parts if vehicle topples

- Do not sit or lean on the vehicle while it is propped on the side stand.

- If the camber of the roadway permits, turn the handlebars all the way to the left.

REFUELLING

Fuel grade

Requirement

For optimum fuel consumption, fuel should be sulphur-free or as low-sulphur as possible.



ATTENTION

Engine operation with leaded fuel

Damage to catalytic converter

- Do not attempt to run the vehicle on leaded fuel or fuel with metallic additives (e.g. manganese or iron).

- Observe the maximum ethanol content of the fuel.



Fuel additives clean the fuel injection system and the combustion zone. It is advisable to use fuel additives when the engine is operated with low-grade fuel or if the vehicle is to be out of use for a lengthy period of time. More information is available from your authorised BMW Motorrad retailer.

142 RIDING



Recommended fuel grade



Premium, unleaded
(maximum 5% ethanol,
E5)
98 ROZ/RON
93 AKI



Alternative fuel grade



Premium unleaded
(power- and consump-
tion-related restrictions)
(max. 10% ethanol,
E10)
95 ROZ/RON
90 AKI



» Pay attention to the following symbols in the fuel filler cap and on the fuel pump:



Refuelling



WARNING

Fuel is highly flammable

Risk of fire and explosion

- Do not smoke. Never bring a naked flame near the fuel tank.



WARNING

Escape of fuel due to heat-induced expansion if fuel tank is overfilled

Risk of falling

- Do not overfill the fuel tank.



ATTENTION

Wetting of plastic surfaces by fuel

Damage to the surfaces (surfaces become unsightly or dull)

- Clean plastic surfaces immediately after contact with fuel.

- Make sure the ground is level and firm and place the motor-cycle on its stand.



- Open protective flap **1**.
- Unlock fuel tank cap **2** by turning the ignition key clockwise and pop the cap open.



- Refuel with fuel of the grade stated above; do not fill the tank past the bottom edge of the recess of the filler neck.

i When refuelling after running on reserve, make sure that you top up the tank to a level above reserve, so that the new level is detected and the fuel reserve indicator light is switched off.

i The "usable fuel capacity" specified in the technical data is the quantity that the fuel tank could hold if refilled after it had been run dry and the engine had cut out due to a lack of fuel.



Usable fuel capacity

approx. 16.5 l



Fuel reserve

approx. 4 l

- Press the fuel tank cap down firmly to close.
- Remove the ignition key and close the protective cap.

SECURING MOTORCYCLE FOR TRANSPORTATION

- Make sure that all components that might come into contact with tensioning straps used to secure the motorcycle are adequately protected against scratching. Use adhesive tape or soft cloths, for example, for this purpose.



ATTENTION

Vehicle topples to side when being lifted on to stand

Risk of damage to parts if vehicle topples

- Secure the vehicle to prevent it toppling, preferably with the assistance of a second person.

144 RIDING

- Push the motorcycle onto the transportation flat and hold it in position: do not place it on the side stand.



- At the rear, secure the straps to the rear frame on both sides and tighten the straps.
- Tighten all the straps uniformly; the vehicle's suspension should be compressed as tightly as possible front and rear.



ATTENTION

Trapping of components

Component damage

- Do not trap components such as brake lines or cable legs.
- At the front, loop a strap over the bottom fork bridge on each side.
- Pull the straps down and tight.

ON THE RACE TRACK


08

STATUS INDICATORS FOR RACING	148
LAPTIMER	151
VEHICLE SETTINGS FOR RACING	152
LAUNCH CONTROL	153
PIT LANE LIMITER	155
REMOVING AND INSTALLING NUMBER-PLATE CAR- RIER	156
REMOVING AND INSTALLING FRONT TURN INDICATORS	159
M COVER KIT	161
DEACTIVATING INTELLIGENT EMERGENCY CALL WHEN RIDING ON THE RACE TRACK	162
GEARSHIFT-PATTERN REVERSER	164
REMOVING/INSTALLING MIRRORS	165

148 ON THE RACE TRACK

STATUS INDICATORS FOR RACING

TFT display in Sport view

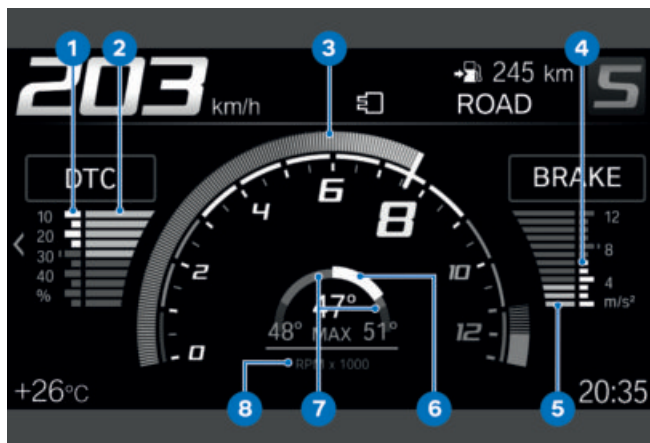

- 1 Maximum DTC torque reduction
- 2 Current DTC torque reduction
- 3 Rev. counter
- 4 Maximum braking deceleration
- 5 Current braking deceleration
- 6 Current lean angle
- 7 Maximum lean angle
- 8 Unit for rpm display: 1000 revolutions per minute


TFT display in Sport 2 view



- 1 Maximum DTC torque reduction
- 2 Current DTC torque reduction
- 3 Rev. counter
- 4 Difference between the last lap time and reference time or difference between current lap time and reference time
- 5 Reference time: fastest of the currently saved laps or all-time fastest saved lap
- 6 Current lap time (11111111 151)
- 7 Unit for rpm display: 1000 revolutions per minute
- 8 Operating help

150 ON THE RACE TRACK

TFT display in Sport 3 view

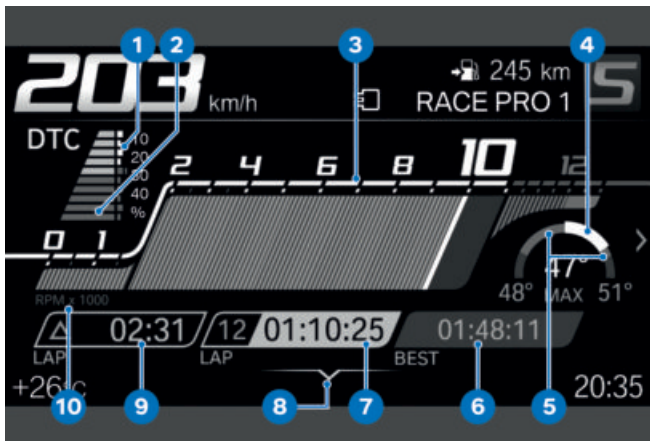

—with M Package^{OE}

- 1 Maximum DTC torque reduction
- 2 Current DTC torque reduction
- 3 Rev. counter
- 4 Current lean angle
- 5 Maximum lean angle
- 6 Reference time: fastest of the currently saved laps or all-time fastest saved lap (151)
- 7 Current lap time
- 8 Operating help

- 9 Difference between the last lap time and reference time or difference between current lap time and reference time
- 10 Unit for rpm display: 1000 revolutions per minute

LAPTIMER

Starting timing

- Call up the **Sport** menu and change to the **Sport 2** or **Sport 3** display.
- Start the engine.



- Press button **1**.
 - » Time recording is running.
- Every time you cross the start/finish line, press button **1** again to start recording for the next lap.
 - » The data of the preceding lap are written into memory.
 - » The time for the current lap starts again from 00:00:00.
 - » The stopped time for a lap is displayed for an adjustable **Disp. duration time** before the display switches to elapsed time for the current lap.
- » Recording continues even if you exit the display mode during recording.

Ending time recording and managing times

Requirement

Sport 2 or **Sport 3** display is shown.

- Press down the **MENU** rocker button.
 - » The **LAPTIMER** menu is displayed.
- Timing in progress can be ended with **Stop recording**.
- You can go to the current lap times and riding data by using **Laps**. 99 laps can be saved. If the laps have not been deleted in the meantime, additional laps overwrite the first laps.
- All laps can be deleted with **Delete all laps**.
- You can use **Reset Best Ever** to reset the all-time best lap (**Best Ever**).

Setting up laptimer

- Navigate to **Settings**, **Vehicle settings**, **Laptimer**. The following settings are available:
 - » **Debounce time**: If the headlight flasher has been actuated, the headlight flasher can be actuated again within this time without affecting lap time measurement.

152 ON THE RACE TRACK

- with M GPS-Laptrigger^{OE}
- » **Trigger:** Change of actuation. **Manual:** Actuation by headlight flasher. **External:** Actuation by M GPS-Laptrigger. Automatic signalling of each new lap and evaluation of the logged data require the optional M Datalogger accessory including GPS-Laptrigger.◀
 - » **Disp. duration:** Within this time, the stopped lap time is displayed before the current lap time is shown.
 - » **Reference:** Selection of which best time is displayed as a reference. **Best:** Best time of the current recording session or **Best Ever:** Best-ever measured time.
 - » **Best lap in progress:** When this function is activated, the difference between the current lap time and the reference time is displayed instead of the difference between the last lap time and the reference time.

Best-ever lap

The best-ever lap (**Best Ever**) is the fastest of all recorded laps and is updated once a faster lap has been recorded. The best-ever lap remains stored in memory even if the

recorded laps are deleted. This means that other races can subsequently be timed and the lap times of those races compared with the best-ever lap from earlier races. The best-ever lap can be deleted in the **LAPTIMER** menu. If the best-ever lap is from a saved recording, it is accompanied on the display by the relevant lap number. If the best-ever lap shows without a lap number, this means that it comes from a recording that has been deleted.

VEHICLE SETTINGS FOR RACING

Activating configuration for the race track

- Call up the **Settings** menu and activate **Racetrack**.
- Acknowledge the **In racetrack mode**, all **Connectivity functions** are deactivated. message.



The **Connectivity functions** **Media**, **Telephone** and **Navigation** are **deactivated** by switching on the race track functions.

- **Select Configuration.**

Configuration menu



Light warnings: If the turn indicators or number plate carrier are removed in preparation for a race-track session, the vehicle electronics detect a bulb failure and the appropriate warning message is displayed. If **Light warnings** is deactivated, the warning message is suppressed.

The rpm of the Pit Lane Limiter can be adjusted (155).

LAUNCH CONTROL

—with riding modes Pro^{OE}

Racing start with Launch Control

Launch Control assists the rider by revving the engine to the ideal speed for a racing start.



Engine rpm after activation of Launch Control with throttle fully open

9000 min⁻¹

When Launch Control is active engine torque is reduced so that forward propulsion is maximised on the flat with the front wheel just starting to lift off the ground. Torque is temporarily reduced slightly when the electronics detect front-wheel lift. Engine rpm limitation is deactivated when the motorcycle reaches a specified speed.



Speed at which rpm limitation for Launch Control is deactivated

approx. 70 km/h

Launch Control is turned off in the following circumstances:

- The third gear is engaged.
- The angle of inclination is greater than 30°.
- The engine or the ignition is switched off.

The number of consecutive starts using Launch Control is limited in order to protect the clutch. The number of possible starts remaining appears on the display, e.g. **Launch Control: 3 starts still avail..**

154 ON THE RACE TRACK

Operating Launch Control



CAUTION

Launch Control permits maximum acceleration, so unfamiliar riding situations can occur.

Risk of accident through increased acceleration.

- Use Launch Control only on race tracks.
- Bring vehicle to starting position.
 - » Vehicle is stationary, engine is running.



- Press and hold down starter button **1** until the display shows the number of starts with Launch Control still permitted.
 - » If no more starts are possible, L-Con not available. Clutch too hot. is displayed.
- Allow the clutch to cool.



Clutch cooling time

approx. 3 min (with engine running)

approx. 20 min (with engine stopped)

- Proceed in the normal way when starting; open the throttle only as far as necessary to reach the rpm limit.
- After engaging the clutch, open the throttle completely.
 - » Shift light lights up or flashes.
 - » Launch Control controls the optimum torque on the rear wheel and keeps the engine speed constant up to the speed specified below.
- Keep the throttle twistgrip fully open.



Speed at which rpm limitation for Launch Control is deactivated

approx. 70 km/h

- » As soon as rpm limitation ceases, engine rpm increases because the throttle twistgrip is in the full-throttle position.
- » Throttle-twistgrip reaction is normal again.
- Depending on the racing circuit, upshift and lean into the bends.


- » If in third gear or leaning further than 30°, the shift light disappears.
- » The racing start with Launch Control is concluded.

PIT LANE LIMITER

—with riding modes Pro^{OE}

Limiting the speed with the Pit Lane Limiter

The Pit Lane Limiter helps you to comply with a speed limit, e.g. in the pit lane. To do so, a maximum rpm is specified for the engine when riding in 1st gear.

 The speed resulting from the maximum rotational speed is dependent on the ratio and tyre size.

Range of values

—3500 to 8000 rpm in increments of 100

Setting up Pit Lane Limiter

- Call up the **Settings** menu and activate **Racetrack**.
- Select **Configuration**.
- Activate **Pit Lane Limiter**.
- Select **Configuration**.
- Adjust **RPM**.

Operating Pit Lane Limiter



- Ride in 1st gear.
- Press and hold down starter button **1**.
- Open throttle grip until the set maximum rpm has been reached.
- » The ignition is interrupted to limit engine speed.



WARNING

As soon as the starter button is released the vehicle accelerates in accordance with the position of the throttle twistgrip.

Risk of crashing due to severe jerk forward if throttle twistgrip in full load position.

- Do not fully open the throttle twistgrip; instead, turn it only to the position at which the engine reaches its speed-limit rpm.

- Release starter button **1**.
- » The vehicle accelerates at the maximum rate.

156 ON THE RACE TRACK

REMOVING AND INSTALLING NUMBER-PLATE CARRIER

Removing number plate carrier




ATTENTION

Removal of the number plate carrier

Voiding of homologation for riding on public roads


- With the number-plate carrier removed, do not ride the motorcycle on public roads.
- Make sure the ground is level and firm and place the motorcycle on its stand.
- Removing tail-hump trim panel (➡ 213).

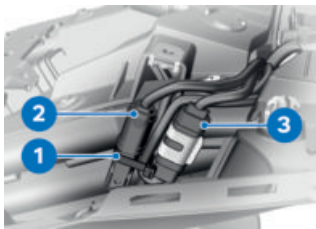


- Remove cable strap **1**.
- Disconnect connector for number plate light **2** and left turn indicator **3**.



If the license-plate carrier is removed in preparation for a race-track session, the electronics interpret this as a defective light and the corresponding warning appears on the display. Deactivating the Light warnings function in the RACETRACK CONFIGURATION menu suppresses this warning.

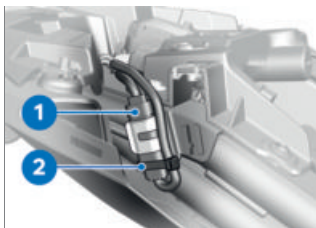


- Remove cable strap **2**.
- Disconnect connector for right turn indicator **1**.

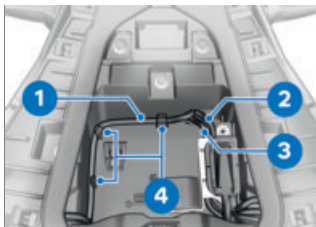



- Disengage cable for right turn indicator **1** from holders **4** and remove.

- Remove cables for left turn indicator **2** and number plate light **3**.

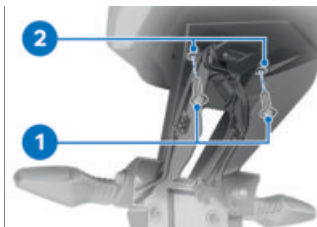

- Remove screws **1**, noting collared bushes **2**.

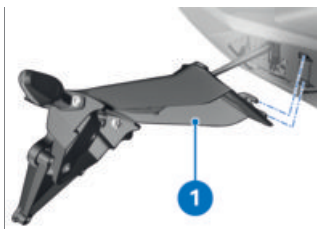

- Unhook number plate carrier **1** and remove downwards.
 - Carefully thread out cable.
-  Use the M Cover Kit from BMW Motorrad to cover the threaded holes for the screws so that the parts can subsequently be re-installed. The M Cover Kit also includes blanking plugs to prevent moisture from making its


way into the vehicle electrical system.

- Prevent moisture from making its way into open plug connections, preferably by inserting the corresponding blanking plugs from the BMW Motorrad M Cover Kit.
- Installing tail-hump trim panel (➡ 214).

Installing number plate carrier


—with M Cover Kit^{OA}

- Remove the M Cover Kit (➡ 162).<
- Make sure the ground is level and firm and place the motorcycle on its stand.
- Removing tail-hump trim panel (➡ 213).

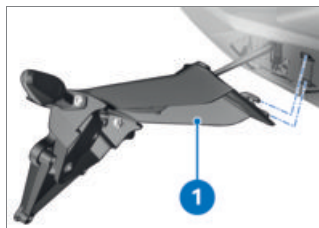

- Position number plate carrier **1** and carefully thread in cable.
- Hook in number plate carrier **1**.

158 ON THE RACE TRACK

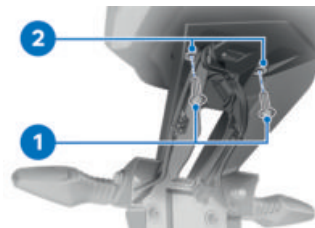


- Install screws **1** through collared bushes **2**.




Number plate carrier on rear frame


2 Nm

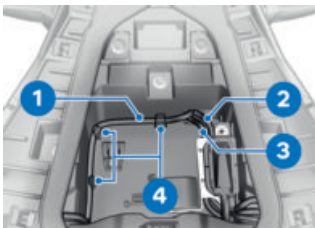

- Work cable for right turn indicator **1** into position and secure it in holders **4**.
- Work cables for left turn indicator **2** and number plate light **3** into position.

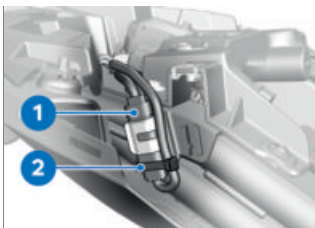

- Connect connector for right turn indicator **1**.
- Install cable strap **2**.

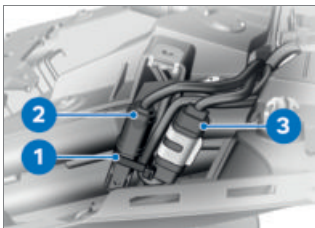

- Connect connector for number plate light **2** and left turn indicator **3**.
- Install cable strap **1**.
- Check operation of the light and the turn indicators.
- Installing tail-hump trim panel (▮▮▮▮ 214).

REMOVING AND INSTALLING FRONT TURN INDICATORS

Removing front turn indicators




ATTENTION


Removal of the turn indicators

Voiding of homologation for riding on public roads


- With the turn indicators removed, do not ride the motorcycle on public roads.

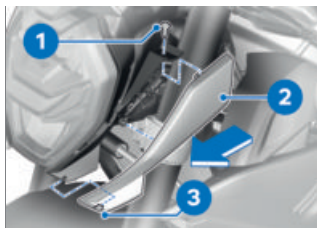

- Remove screw **1** on left and right.
- Ease covers **2** left and right in the direction indicated by the arrow to remove, noting lug **3**.

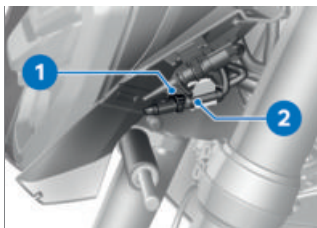

- Remove cable strap **1**.
- Disconnect connector for left turn indicator **2**.

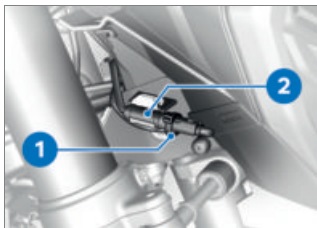


- Remove cable strap **1**.
- Disconnect connector for right turn indicator **2**.


 The M Cover Kit includes blanking plugs to prevent moisture from making its way into the vehicle electrical system.

- Prevent moisture from making its way into open plug connections, preferably by inserting the corresponding blanking plugs from the BMW Motorrad M Cover Kit.

160 ON THE RACE TRACK

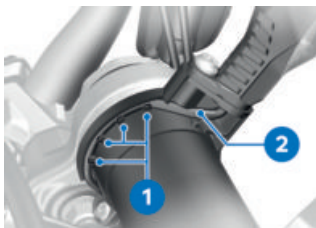


- Remove cables for turn indicators **2** left and right from cable guide **1**.

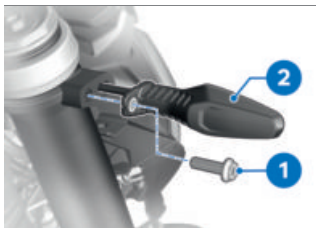

- Remove screw **1** on left and right.
- Remove turn indicators **2** left and right and carefully work the cables clear.

Installing front turn indicators

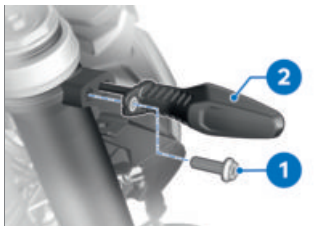


- Work the cables into position and hold turn indicators **2** left and right in position.
- Install screw **1** on left and right.




Threaded fastener, front turn indicator


3 Nm

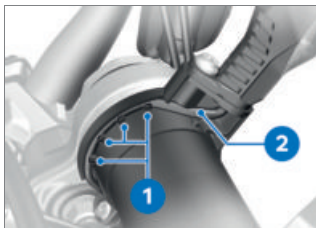


- Secure cables for turn indicators **2** left and right in cable guide **1**.

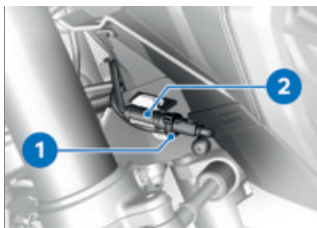

- Connect connector for right turn indicator **2**.
- Install cable strap **1**.

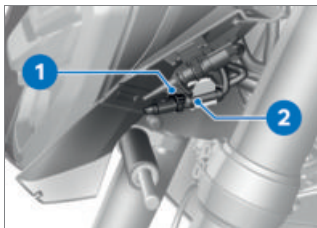

- Connect connector for left turn indicator **2**.
- Install cable strap **1**.

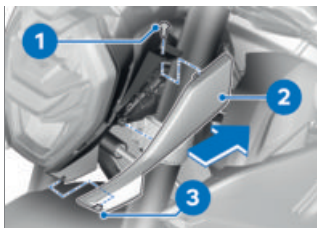

- Ease covers **2** left and right into position in the direction

indicated by the arrow, noting lug **3**.

- Install screw **1** on left and right.

M COVER KIT

—with M Cover Kit^{OA}


Covering body openings

Requirement

The M Cover Kit is for professional closing of the body-panel opening left when the number plate carrier is removed.

- Remove the number plate carrier (▮▮▮ 156).
- Install the M Cover Kit (▮▮▮ 161).
- After removing the M Cover Kit, be sure to re-install the number plate carrier.
- Install the number plate carrier (▮▮▮ 157).

Installing M Cover Kit

 Comply with the installation instructions supplied with the optional accessory or racing accessory.



- Hook in and position number plate carrier cover **1**.




- Unhook number plate carrier cover **1** and remove downwards.
- Install the number plate carrier (→ 157).



- Install screws **1**.

Removing M Cover Kit

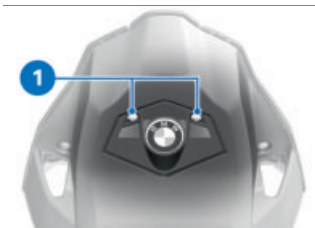


- Remove screws **1**.

DEACTIVATING INTELLIGENT EMERGENCY CALL WHEN RIDING ON THE RACE TRACK

—with intelligent emergency call^{OE}


Preventing emergency calls

In order to prevent an emergency call connection from being established in the event of falls on race tracks with medical care, the intelligent emergency call control unit must be removed.


 The intelligent emergency call control unit may only be removed for when riding on the race track. The intelligent emergency call control unit must be reinstalled before returning to public road traffic at the latest.

Removing intelligent emergency call control unit

- Disconnecting battery from motorcycle (➡ 217).
- Removing tail-hump trim panel (➡ 213).

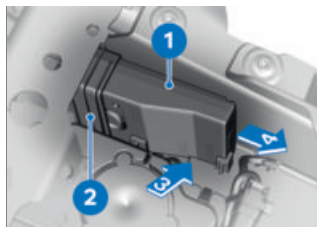

- Press intelligent emergency call control unit **1** out of the lock **3** and carefully remove **4** from the holder **2**.

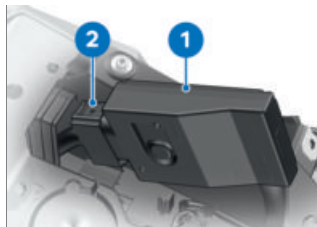


- Disconnect plug connection **2** and store intelligent emergency call control unit **1** in a place that is dry and free of dust.
- Connecting battery to motorcycle (➡ 218).


- Installing tail-hump trim panel (➡ 214).

Installing intelligent emergency call control unit

- Disconnecting battery from motorcycle (➡ 217).
- Removing tail-hump trim panel (➡ 213).

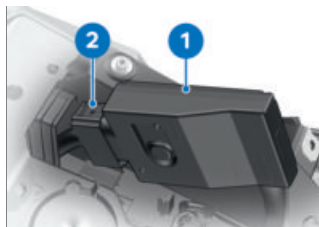

- Connect intelligent emergency call control unit **1** with connector **2**.

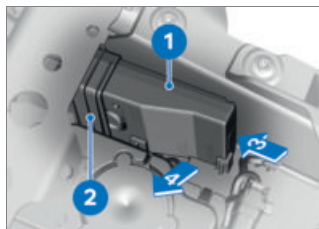

- Insert **3** intelligent emergency call control unit **1** into the holder **2** and allow it to engage in lock **4**.
- Connecting battery to motorcycle (➡ 218).

164 ON THE RACE TRACK

- Installing tail-hump trim panel (214).

GEARSHIFT-PATTERN REVERSER

Shift pattern for racing

The shift pattern can be reversed for racing by changing the position of the selector rod. Reversing the shift pattern means that the gearshift lever is lifted up for 1st gear and pressed down for all the other gears. This is the reverse of the arrangement for riding on public roads.

Reversing shift pattern




ATTENTION


Riding with shift pattern reversal on public roads

Voiding of homologation for riding on public roads

- Do not install the gearshift-pattern reverser for riding on public roads.

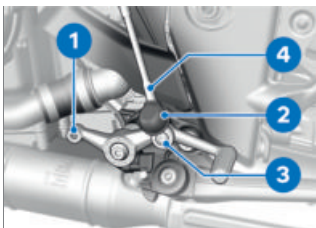

- Clean thread **1**.
- Pull off protective cap **2** and slide on the gearshift rod **4**.
- Remove bolt **3** with washer.
- Transfer the gearshift rod **4** to the thread for the inverted gearshift pattern **1**.

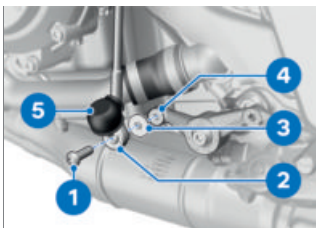

- Insert bolt **1** through ball joint **2** and washer **3**.
- Install bolt **1** in thread for inverted gearshift pattern **4**.



Selector rod to gearshift lever

Thread-locking compound:
micro-encapsulated

8 Nm

- Install protective cap **5**.

- » The gearshift-pattern reverser for racing is set up.

REMOVING/INSTALLING MIRRORS

Removing mirrors



ATTENTION


Removal of the mirrors

Voiding of homologation for riding on public roads

- With the mirrors removed, do not ride the motorcycle on public roads.




The procedure described here for the left mirror applies by analogy for the right mirror as well.

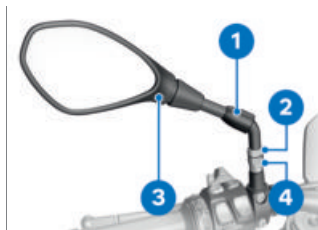

- Push cover cap **1** up.
- Slacken nut **2**.
- Remove **3** and left/right adapter **4**.

Installing mirrors

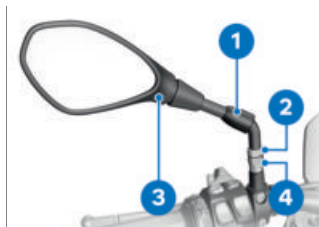

- Install left/right adapter **4**.



Adapter to clamping block

25 Nm

- Install mirror **3** and adjust to correct position.
- Tighten nut **2**.



Mirror with lock nut to adapter

22 Nm (Left-hand thread)

- Push cover cap **1** into position.

ENGINEERING DETAILS

09

GENERAL NOTES	168
ANTILOCK BRAKE SYSTEM (ABS)	168
DYNAMIC TRACTION CONTROL (DTC)	172
DYNAMIC ENGINE BRAKE CONTROL	173
DYNAMIC DAMPING CONTROL (DDC)	174
RIDING MODE	174
DYNAMIC BRAKE CONTROL	177
TYRE PRESSURE CONTROL (RDC)	178
GEAR SHIFT ASSISTANT	179
HILL START CONTROL	181
ADAPTIVE HEADLIGHT	182

GENERAL NOTES

To find out more about engineering go to:

bmw-motorrad.com/technology

ANTILOCK BRAKE SYSTEM (ABS)

Partially integral brakes

Your motorcycle is equipped with partially integral brakes. Both front and rear brakes are applied when you pull the handbrake lever. The foot-brake lever acts only on the rear brake.



ATTENTION

Attempted burn-out despite integral braking function

Damage to rear brake and clutch

- Do not attempt a burn-out unless the vehicle is at a complete standstill. A burn-out is not use of the vehicle as intended by the manufacturer and can, therefore, lead to fault memory entries.

How does ABS work?

The amount of braking force that can be transferred to the road depends on factors that include the coefficient of friction of the road surface. Loose stones, ice and snow or a wet road all have much lower coefficients of friction than a clean and dry asphalt surface. The lower the coefficient of friction, the longer the stopping distance.

If the rider increases braking pressure to the extent that braking force exceeds the maximum transferable limit, the wheels start to lock and the motorcycle loses its directional stability; a fall is imminent. Before this situation can occur, ABS intervenes and adapts braking pressure to the maximum transferable braking force. The wheels continue to turn and the driving stability is retained irrespective of the road condition.

What are the effects of surface irregularities?

Humps and surface irregularities can cause the wheels to lose contact temporarily with the road surface; if this happens the braking force that can be transmitted to the road

can drop to zero. If the brakes are applied under these circumstances the ABS has to reduce braking force to ensure that directional stability is maintained when the wheels regain contact with the road surface. At this instant the ABS must assume an extremely low coefficient of friction, so that the wheels will continue to rotate under all imaginable circumstances, because this is the precondition for ensuring directional stability. As soon as it registers the actual circumstances, the system reacts instantly and adjusts braking force accordingly to achieve optimum braking.

What feedback does the rider receive from the BMW Motorrad ABS Pro?

If the ABS has to reduce braking force on account of the circumstances described above, vibration is perceptible through the brake lever.

When the brake lever is pulled, brake pressure is also built up at the rear wheel by the integral function. If the brake pedal is depressed after the brake lever is pulled, the brake pressure built up beforehand is perceptible as counter-pres-

sure sooner than is the case when the brake pedal is depressed either before or at the same time as the brake lever is pulled.

Rear wheel lift

Under very severe and sudden deceleration, however, under certain circumstances it is possible that the ABS will be unable to prevent the rear wheel from lifting clear of the ground. If this happens the outcome can be a highsiding situation in which the motorcycle can flip over.



WARNING

Rear wheel lift due to severe braking

Risk of falling

- When you brake sharply, bear in mind that ABS control cannot always be relied on to prevent the rear wheel from lifting clear of the ground.

What is the design baseline for ABS?

Within the limits imposed by physics, the ABS ensures directional stability on any surface. The system is not optimised for special requirements that apply under extreme competit-

170 ENGINEERING DETAILS

ive situations on the track. The driving behaviour should be adapted to actual driving skills and the road conditions.

Special situations

The speeds of the front and rear wheels are compared as one means of detecting a wheel's incipient tendency to lock. If the system registers implausible values for a lengthy period the ABS function is deactivated for safety reasons and an ABS fault message is issued. Self-diagnosis has to complete before fault messages can be issued. In addition to problems with the BMW Motorrad ABS Pro, exceptional riding conditions can lead to a fault message being issued.

Exceptional riding conditions:

- Heating up with the motor-cycle on an auxiliary stand, in neutral or with a gear engaged.
- Rear wheel locked by the engine brake for a lengthy period, for example while descending steep gradients.

If a fault message is issued on account of exceptional riding conditions, you can reactivate

the ABS function by switching the ignition off and on again.

What significance devolves on regular servicing?



WARNING

Brake system not regularly serviced.

Risk of accident

- In order to ensure that the ABS is always maintained in optimum condition, it is essential for you to comply strictly with the specified inspection intervals.

Safety reserves

The potentially shorter braking distances which ABS permits must not be used as an excuse for careless riding. The system is primarily a means of ensuring a safety margin in genuine emergencies.



WARNING

Braking when cornering

Risk of accident despite ABS

- Invariably, the rider bears responsibility for assessing road and traffic conditions and adopting his or her style of riding accordingly.
- Do not take risks that would negate the additional margin of safety offered by this system.

ABS Pro

ABS Pro increases safety, particularly when braking in bends. ABS Pro prevents the wheels from locking even under sharp braking. ABS Pro reduces abrupt changes in steering force, particularly in shock-braking situations, counteracting the vehicle's otherwise natural but undesirable tendency to straighten up.

ABS intervention

Technically speaking, depending on the riding situation ABS Pro adapts ABS intervention to the motorcycle's bank angle. Signals for rate of roll and rate of yaw and lateral acceleration are used

to calculate bank angle. They come from the angular rate sensor, an integral component of Dynamic Traction Control DTC.

As the motorcycle is heeled over more and more as it banks into a corner, an increasingly strict limit is imposed on the brake-pressure gradient for the start of brake application. This slows the build-up of brake pressure to a corresponding degree. Additionally, pressure modulation is more uniform across the range of ABS intervention.

Advantages for the rider

The advantages of ABS Pro for the rider are sensitive response and high braking and directional stability combined with best-case deceleration of the motorcycle, even when cornering.



ABS Pro is activated in the RAIN, ROAD and DYNAMIC riding modes.

DYNAMIC TRACTION CONTROL (DTC)

How does traction control work?

Traction control compares the front and rear wheel circumferential velocities. The differential is used to compute slip as a measure of the reserves of stability available at the rear wheel. If slip exceeds a certain limit, the engine management system intervenes and adapts engine torque accordingly. BMW Motorrad DTC is designed as an assistant system for the rider and for use on public roads. The extent to which the rider affects DTC control can be considerable (weight shifts when cornering, items of luggage loose on the motorcycle), especially when the style of riding takes rider and machine close to the limits imposed by physics. The system is not optimised for special requirements that apply under extreme competitive conditions off-road or on the track. The BMW Motorrad DTC can be deactivated in these cases.



WARNING

Risky riding

Risk of accident despite DTC

- Invariably, the rider bears responsibility for assessing road and traffic conditions and adopting his or her style of riding accordingly.
- Do not take risks that would negate the additional safety offered by this system.

Special situations

In accordance with the laws of physics, the ability to accelerate is restricted more and more as the angle of heel increases. Consequently, there can be a perceptible reduction in acceleration out of very tight bends.

With DTC, the speeds of the front and rear wheels are compared and the angle of heel taken into account as one means of detecting the rear wheel's incipient tendency to spin or slip sideways.

If the lean angle values are identified as implausible over an extended period of time, a substitute value is used for the lean angle or the DTC is switched off. Under these circumstances the indicator for

a DTC fault shows. Self-diagnosis has to complete before fault messages can be issued. The BMW Motorrad Traction Control can shut down automatically under the exceptional riding conditions outlined below.

Exceptional riding conditions:

- Riding for a lengthy period with the front wheel lifted off the ground (wheelie).
- Rear wheel rotating with the vehicle held stationary by applying the front brake (burn-out).
- Heating up with the motor-cycle on an auxiliary stand, in neutral or with a gear engaged.

DYNAMIC ENGINE BRAKE CONTROL

–with riding modes Pro^{OE}

How does dynamic engine brake control work?

–with riding modes Pro^{OE}
The purpose of dynamic engine brake control is to prevent the unstable riding states that can be produced by excessive engine braking moment acting on the rear wheel. Depending on the road condition and riding dynamic, excessive braking torque can produce

a sharp rise in rear-wheel slip and impair directional stability. Dynamic engine brake control limits this slip at the rear wheel to a safe mode-dependent and bank-angle-dependent regulated slip.

Causes for excessive slip at the rear wheel:

- Riding with engine overrun on a surface with a low coefficient of friction (e.g. wet leaves).
- Rear-wheel hop when rider downshifts.
- Sharp braking during sporty riding.

In the same way as DTC traction control, dynamic engine brake control compares the wheel circumferential velocities of the front and rear wheels. Additional information on the bank angle enables dynamic engine brake control to calculate slip and the reserve of stability at the rear wheel. If slip overshoots the applicable limit, the throttle valves are opened very slightly to increase engine torque. Slip is reduced and the vehicle is stabilised.

174 **ENGINEERING DETAILS**

Effect of dynamic engine brake control

- In RAIN and ROAD riding modes: Maximum stability.
- In DYNAMIC and DYNAMIC PRO riding modes: High stability.
- In the DYNAMIC PRO riding mode additionally: Maximum performance. On a poor road surface or with unsuitable tyres, stability might be impaired.

DYNAMIC DAMPING CONTROL (DDC)

How does DDC work?

- with Dynamic Damping Control (DDC)^{OE}

Dynamic Damping Control (DDC) is a semi-active suspension-adaptation system that reacts automatically to riding manoeuvres and to road conditions. By interpreting ride height sensor signals, DDC detects movements in the chassis and suspension and responds by adjusting the damper valves. This enables the suspension to adapt to the terrain.

Possibilities for adjustment **Damping modes**

- Road: Damping for comfortable on-road riding
- Dynamic: Damping for dynamic on-road riding

Load settings

- One-up riding
- Two-up (with luggage)

RIDING MODE

Selection

To adjust the motorcycle to the road condition and the desired driving experience, the following riding modes can be selected:

- RAIN
- ROAD
- DYNAMIC

- with riding modes Pro^{OE}
- DYNAMIC PRO

There are matched settings for the Engine, Engine Brake, Traction (DTC), Wheelie (DTC) and ABS systems in each riding mode.

In the DYNAMIC PRO riding mode, the settings for the Engine, Engine Brake, Traction (DTC), Wheelie (DTC) and ABS systems can be varied to suit the rider's individual needs and preferences.

Torque and throttle response

- In RAIN riding mode: Gentle throttle response, reduced torque in low gears.
- In the ROAD and DYNAMIC riding modes: Optimum throttle response, reduced torque in low gears.
- with riding modes Pro^{OE}
- In DYNAMIC PRO riding mode: Optimum throttle response, maximum torque.

In the DYNAMIC PRO riding mode additionally: Gentle throttle response.

Braking effect of the engine

- In the RAIN and ROAD riding modes: Maximum braking effect of the engine and maximum stability.
- In DYNAMIC riding mode: Medium braking effect of the engine and high stability.
- with riding modes Pro^{OE}
- In DYNAMIC PRO riding mode: Medium braking effect of the engine and high stability.
- In DYNAMIC PRO riding mode additionally: Minimum braking effect of the engine and reduced stability.

Traction control (DTC)

- In RAIN riding mode: Maximum stability on wet roads. Acceleration on dry roads might be reduced.
- In ROAD riding mode: High stability on dry roads. Acceleration on dry roads might be slightly reduced.
- In DYNAMIC riding mode: High performance on dry roads. If road conditions are poor, optimum stability cannot be ensured.
- with riding modes Pro^{OE}
- In DYNAMIC PRO riding mode: Maximum performance. On a poor road surface or with unsuitable tyres, stability might be impaired.

Wheelie (DTC) - front wheel lifted clear of the ground

- In RAIN riding mode: Maximum stability. Efforts are made to suppress a Wheelie.
- In the ROAD and DYNAMIC riding modes: Shallow Wheelie possible, optimum forward acceleration.

176 ENGINEERING DETAILS

- with riding modes Pro^{OE}
- In the DYNAMIC PRO riding mode: System is deactivated.
- In the DYNAMIC PRO riding mode additionally: High Wheelie possible. The rider has to slow the rear wheel to keep the motorcycle from flipping over backwards. The system only intervenes late.

ABS

- The rear wheel lift-off assistant is active in the RAIN, ROAD and DYNAMIC riding modes.
- In RAIN, ROAD and DYNAMIC riding modes, the ABS is set up for on-road riding.
- with riding modes Pro^{OE}
- In DYNAMIC PRO riding mode, the ABS is set up for on-road riding.
- In the DYNAMIC PRO riding mode additionally: ABS intervention can be tuned to suit rider preference.

Dynamic Damping Control (DDC)

- In RAIN and ROAD riding modes: Damper characteristic set up for comfortable riding.
- In RAIN and ROAD riding modes additionally: Damper

characteristic set up for dynamic riding.

- In DYNAMIC riding mode: Damper characteristic set up for dynamic riding.
- In DYNAMIC riding mode additionally: Damper characteristic set up for comfortable riding.
- with riding modes Pro^{OE}
- In DYNAMIC PRO riding mode: Damper characteristic set up for dynamic riding.
- In DYNAMIC PRO riding mode additionally: Damper characteristic set up for comfortable riding.

Mode changes

The riding mode can be changed while the vehicle is stationary with the ignition on. Under the following precondition, it is also possible to change modes while riding:

- No drive torque on the rear wheel.
- No brake pressure in the brake system.

The following steps must be taken to change the riding mode:

- Close the throttle twistgrip.
- Release the brake levers.
- Deactivate adaptive cruise control.

The desired riding mode is initially preselected. The mode change does not take place until the systems in question are all in the appropriate state. The selection menu does not disappear from the display until the mode change has taken place.

DYNAMIC BRAKE CONTROL

–with riding modes Pro^{OE}

How Dynamic Brake Control works



The Dynamic Brake Control function is active in all riding modes. It can be deactivated in the DYNAMIC PRO riding mode only, by custom parametrisation of the ABS.

The Dynamic Brake Control function assists the rider in emergency braking situations.

Detection of emergency braking

- Sudden, sharp application of the front brake is interpreted as emergency braking.

Behaviour in emergency braking

- If emergency braking occurs at a speed in excess of 10 km/h, the ABS function is further assisted by Dynamic Brake Control.
- When partially integral braking at a high brake pressure gradient is initiated, Dynamic Brake Control increases the integral brake pressure at the rear wheel. The stopping distance shortens and controlled braking is possible.

Behaviour during accidental actuation of the throttle grip

- If the throttle is accidentally opened (throttle grip position > 5%) during emergency braking, Dynamic Brake Control ensures the desired braking effect by ignoring actuation of the throttle grip. The effectiveness of emergency braking is ensured.
- If the throttle is closed (throttle grip position < 5%) while Dynamic Brake Control is in action, the engine torque requested by the ABS brake system is restored.
- If emergency braking ceases and the rider still has not changed the po-

178 ENGINEERING DETAILS

sition of the throttle grip, Dynamic Brake Control steadily ramps engine torque back to the rider's requested level.

TYRE PRESSURE CONTROL (RDC)

—with tyre pressure control (RDC)^{OE}

Function

A sensor integrated into each tyre measures the air temperature and the air pressure inside the tyre and transmits this information to the control unit. Each sensor has a centrifugal-force tripswitch that does not enable transmission of the measured values until the motorcycle has accelerated to a defined minimum speed for the first time.



Minimum speed for transmission of the RDC measured values:

min 30 km/h

The display shows -- for each tyre until the tyre-pressure signal is received for the first time. The sensors continue to transmit the measured-value signals for some time after the vehicle comes to a stop.



Time for transmission of measured values after vehicle comes to a stop:

min 15 min

An error message is issued if wheels without sensors are fitted to a vehicle equipped with an RDC control unit.

Tyre pressure ranges

The RDC control unit distinguishes between three tyre pressure ranges matched to the vehicle:

- Filling pressure within the permissible tolerance
- Filling pressure in the limit range of the permissible tolerance
- Filling pressure outside permitted tolerance

Temperature compensation

Tyre pressure is a temperature-dependent variable: pressure increases as tyre air temperature rises and decreases as tyre air temperature drops. Tyre-air temperature depends on ambient temperature as well as on the style of riding and the duration of the ride.



The tyre pressures are shown in the TFT display as temperature compensated and always refer to the following tyre air temperature:

20 °C

The air lines available to the public in petrol stations and motorway service areas have gauges that do not compensate for temperature; the reading shown by a gauge of this nature is the temperature-dependent tyre-air pressure. As a result, the values displayed there usually do not correspond to the values displayed in the TFT display.

Pressure adaptation

Compare the RDC value on the TFT display with the value in the table on the back cover of the Rider's Manual. Then use the air-line gauge at a service station to compensate for the difference between the RDC reading and the value in the table.



Example

According to the operating instructions, the tyre pressure should be:



Example

2.5 bar

The following display is shown in the TFT display:

2.3 bar

So pressure is low by:

0.2 bar

The gauge on the air line shows:

2.4 bar

You must now increase tyre pressure until the value is:

2.6 bar

GEAR SHIFT ASSISTANT

—with shift assistant Pro^{OE}

Gear Shift Assistant Pro

Your vehicle is equipped with a shift assistant, a system originally developed for racing and now adapted for riding on public roads. It permits upshifts and downshifts without de-clutching or closing the throttle in virtually all load and rpm ranges.

Advantages

- 70-80% of all gearshifts on a trip can be done without using the clutch.
- Less relative movement between rider and passenger

180 ENGINEERING DETAILS

because the shift pauses are shorter.

- It is not necessary to close the throttle valve when shifting under acceleration.
- When braking and downshifting (throttle valve closed), engine speed is adjusted by blipping the throttle.
- Shift time is shorter than a gearshift with clutch actuation.

In order for the system to identify a request for a gearshift, the rider has to move the shift lever from its idle position in the desired direction against the force of the spring through a certain "overtravel" at ordinary speed or rapidly and keep the shift lever in this position until the gearshift is completed. It is not necessary to increase the force applied to the gearshift lever while shifting is in progress. Once the gearshift has completed the shift lever has to be fully released before another gearshift with the Pro shift assistant can take place. When shifting gears with the Gear Shift Assistant Pro, the rider has to keep load state (throttle twistgrip position) constant before and during the gearshift.

A change in the position of the throttle twistgrip during a gearshift can cause the function to abort and/or lead to a missed shift. Gear Shift Assistant Pro provides no assistance for the gearshift if the rider declutches.

Downshifting

- Downshifting is assisted until maximum rpm for the target gear to be selected is reached. This prevents over-revving.



Maximum engine speed

max 12000 min⁻¹

Upshifting

- The shift assistant provides no assistance if engine speed drops below idle during an upshift.



Idle speed

1270 \pm 50 min⁻¹ (Engine at regular operating temperature)

HILL START CONTROL

Hill Start Control function

Hill Start Control is a pullaway assistant that operates on the partially integral ABS system to prevent the vehicle from rolling back on a gradient, without the rider having to keep pressure applied to the brake lever. When Hill Start Control is activated, pressure is built up in the rear brake system to keep the machine at a standstill on a gradient. The brake pressure in the brake system is dependent on the gradient.

Effect of an incline on brake pressure and drive-off behaviour

- If the motorcycle is stopped on a gentle incline, only low brake pressure is built up. In this case, the brakes are quickly released when driving off. The motorcycle can be moved off more gently. It is not necessary to turn the throttle grip again.
- If the motorcycle is stopped on a steep incline, high brake pressure is built up. In this case, the brakes take longer to release when driving off. More torque is required for driving off which also requires

the rider to turn the throttle grip again.

Behaviour when the motorcycle rolls or slips

- If the motorcycle starts to roll while Hill Start Control is active, brake pressure is increased.
- If the rear wheel slips, the brake is released again after approx. 1 m. This prevents the vehicle slipping with a locked rear wheel, for example.

–with riding modes Pro^{OE}

Hill Start Control Pro

Hill Start Control Pro enables automatic activation of the holding function.

Releasing brake when stopping the engine or time-out


Hill Start Control is deactivated if the rider stops the engine by hitting the emergency-off switch (kill switch) or when the side stand is extended, or after time-out (10 minutes).

In addition to the indicator and warning lights, the rider should be made aware that Hill Start Control has been deactivated by the following behaviour:

182 ENGINEERING DETAILS

Brake warning jolt

- The brake is released briefly and reactivated immediately.
- This creates a jolt which the rider feels.
- The partially integral ABS brake system limits the speed of movement to approx. 1-2 km/h.
- The rider must brake the motorcycle manually.
- After two minutes, or when the brake is actuated, speed control is completely deactivated.

 The holding pressure is released immediately without a brake warning jolt as soon as the ignition is switched off.

–with riding modes Pro^{OE} **Hill Start Control Pro**
Hill Start Control Pro enables automatic activation of the holding function.

ADAPTIVE HEADLIGHT

–with adaptive head light^{OE}

Function

In addition to the bulbs for low beam, high beam and, if applicable, daytime riding light or side light, the headlight has separate LED elements complete with their own reflect-

ors. The LED elements are activated as a function of bank angle in addition to the low-beam headlight, enabling the headlight to illuminate the inside of the bend as the motorcycle banks for cornering. The adaptive cornering headlight is optimised for slight to moderate bank angles.

The adaptive cornering headlight is activated under the following conditions:

- Cornering at a slight to moderate bank angle.
- Speed is higher than 10 km/h.
- The low-beam headlight is switched on.

MAINTENANCE

10

GENERAL NOTES	186
TOOLKIT	187
FRONT-WHEEL STAND	188
REAR-WHEEL STAND	188
ENGINE OIL	189
BRAKE SYSTEM	190
CLUTCH	195
COOLANT	197
TYRES	198
WHEEL RIMS	199
WHEELS	199
CHAIN	207
LIGHTING	210
TRIM PANEL COMPONENTS	211
JUMP-STARTING	215
BATTERY	216
FUSES	220
DIAGNOSTIC CONNECTOR	221

GENERAL NOTES

The Maintenance chapter describes straightforward procedures for checking and replacing certain wear parts.

Microencapsulated screws

The microencapsulation is a chemical thread-locker. An adhesive compound creates a secure connection between bolt and nut or between screw and component. Consequently, microencapsulated screws are for once-only use and are not intended for re-installation after being slackened.

After removal of the screw, clean the internal thread to remove all traces of thread-locking compound. Always use new microencapsulated screws when re-assembling. Consequently, prior to disassembly make sure that you have suitable tools for cleaning the threads and a new replacement for each screw to be removed. If the job is not done correctly there is no guarantee that the screw will remain secure, which means that you would be putting yourself at risk!


Further information

Special tightening torques are listed as applicable. The tightening torques for the threaded fasteners on your vehicle are listed in the section entitled "Technical data".

You will find information on more extensive maintenance and repair work in the repair manual on DVD for your vehicle, available from your authorised BMW Motorrad retailer.

Some of the work calls for special tools and a thorough knowledge of the technology involved. If you are in doubt, consult a specialist workshop, preferably your authorised BMW Motorrad retailer.

TOOLKIT

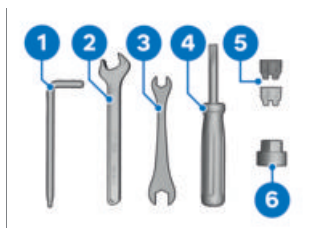

- 1** Lever
 - without Dynamic Damping Control (DDC)^{OE}
 - Adjust the spring preload for rear wheel (▮▮▮ 122).
- 2** Open-ended spanner
Width across flats 14 mm
 - Adjust the mirror arm (▮▮▮ 116).
 - Adjust the chain sag (▮▮▮ 209).
- 3** Open-ended spanner
Width across flats 10/13
 - Removing battery (▮▮▮ 219).
 - Adjust the spring preload for front wheel (▮▮▮ 120).
 - with Dynamic Damping Control (DDC)^{OE}
 - Adjust the spring preload for rear wheel (▮▮▮ 123).
 - Adjust the chain sag (▮▮▮ 209).
- 4** Reversible screwdriver blade
Slotted bit and Torx T25
 - Remove the rider's seat (▮▮▮ 91).
 - without Dynamic Damping Control (DDC)^{OE}
 - Adjust the compression-stage damping for front wheel (▮▮▮ 125).
 - without Dynamic Damping Control (DDC)^{OE}
 - Adjust the rebound-stage damping for front wheel (▮▮▮ 125).
 - without Dynamic Damping Control (DDC)^{OE}
 - Adjust the rebound-stage damping for rear wheel (▮▮▮ 127).
 - without Dynamic Damping Control (DDC)^{OE}
 - Adjust the compression-stage damping for rear wheel (▮▮▮ 126).
- 5** Reserve fuses
Miniature fuses, 7.5 A and 15 A
- 6** Plastic cap
 - Adjust the spring preload for front wheel (▮▮▮ 120).

FRONT-WHEEL STAND

Installing front-wheel stand



ATTENTION

Use of the BMW Motorrad front wheel stand without accompanying use of centre stand or auxiliary stand

Risk of damage to parts if vehicle topples

- Place the motorcycle on its centre stand or another auxiliary stand before lifting the front wheel with the BMW Motorrad front-wheel stand.
- Make sure the motorcycle is standing firmly.
- Place the motorcycle on an auxiliary stand; BMW Motorrad recommends the BMW Motorrad rear-wheel stand.
- Install the rear-wheel stand (111111 188).



- See the instructions issued with the front-wheel stand for the details of the correct procedure for installation.
- BMW Motorrad offers an auxiliary stand suitable for every vehicle. Your BMW Motorrad retailer will be happy to help you with the selection of a suitable auxiliary stand.

REAR-WHEEL STAND

Installing rear-wheel stand



- The description of how to fit the rear-wheel stand correctly will be found in the instructions for the stand.
- BMW Motorrad offers an auxiliary stand suitable for every

vehicle. Your BMW Motorrad retailer will be happy to help you with the selection of a suitable auxiliary stand.

ENGINE OIL

Checking engine oil level



ATTENTION


Misinterpretation of oil level reading, because oil level is temperature-dependent (the higher the temperature, the higher the oil level)

Engine damage

- Check the oil level only after a lengthy ride or when the engine is at operating temperature.
- Make sure the engine is at operating temperature and hold the motorcycle upright.
- Allow the engine to idle for one minute.
- Switch off the ignition.
- Wait five minutes for the oil to drain into the oil pan.



To protect the environment, BMW Motorrad recommends occasionally checking the engine oil after a journey of at least 50 km.

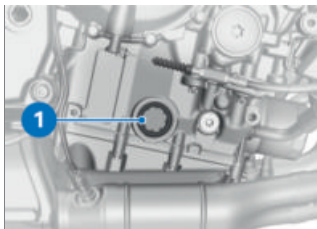


ATTENTION

Vehicle toppling sideways

Risk of damage to parts if vehicle topples

- Secure the vehicle, preferably with the assistance of a second person, so that it cannot topple sideways.
- Check the oil level in the display 1.

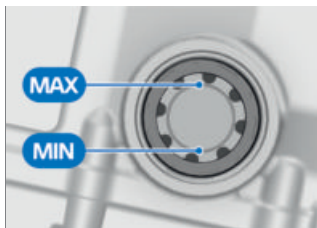

Engine oil, specified level

Between **MIN** and **MAX** marks

190 MAINTENANCE



Engine oil, quantity for topping up

max 1.3 l (Difference between **MIN** and **MAX**)

If the oil level is below the **MIN** mark:

- Top up the engine oil (11111 190).

If the oil level is above the **MAX** mark:

- Have the oil level corrected by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Topping up engine oil

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Wipe the area around the oil filler opening clean.



- Remove cap **1** of the oil filler opening.



ATTENTION

Use of insufficient engine oil or too much engine oil

Engine damage

- Always make sure that the oil level is correct.

- Top up the engine oil to the specified level.
- Check the engine oil level (11111 189).
- Install cap of oil filler opening **1**.

BRAKE SYSTEM

Checking operation of the brakes

- Operate the brake lever.
 - » The pressure point must be clearly perceptible.
- Press the footbrake lever.
 - » The pressure point must be clearly perceptible.

If pressure points are not clearly perceptible:

**ATTENTION**


Work on brake system not in compliance with correct procedure

Risk to operational reliability of the brake system

- Have all work on the brake system undertaken by trained and qualified specialists.
 - Have the brakes checked by a specialist workshop, preferably an authorised BMW Motorrad retailer.
- Checking brake pad thickness, front brakes**
- Make sure the ground is level and firm and place the motorcycle on its stand.
 - Turn the handlebars to the full-lock position.



- Visually inspect the left and right brake pads to ascertain their thickness. Viewing direction: from the front toward brake pads **1**.

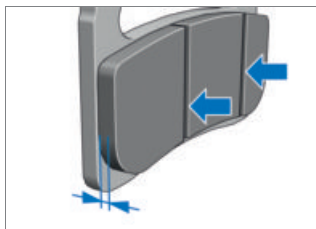

Brake-pad wear limit, front

min 1.0 mm (Friction pad only, without backing plate. The wear indicators (grooves) must be clearly visible.)

If the brake pads are worn:



WARNING

Brake-pad thickness less than permissible minimum


Diminished braking effect, damage to the brakes

- In order to ensure the dependability of the brake system, do not permit the brake pads to wear past the minimum permissible thickness.


- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Checking brake pad thickness, rear brakes

- Make sure the ground is level and firm and place the motorcycle on its stand.

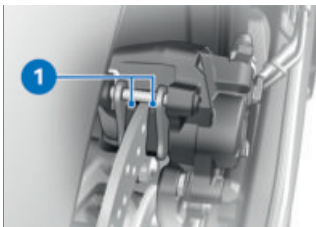

- Visually inspect the brake pads to ascertain their thickness. Viewing direction: from the rear toward brake pads **1**.

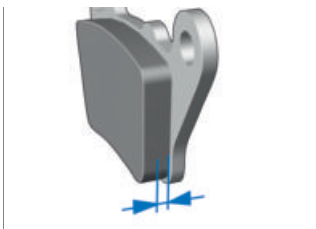

Brake-pad wear limit, rear

min 1.0 mm (Friction pad only, without backing plate.)

If the brake pads are worn:

**WARNING****Brake-pad thickness less than permissible minimum**

Diminished braking effect, damage to the brakes

- In order to ensure the dependability of the brake system, do not permit the brake pads to wear past the minimum permissible thickness.

- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Checking brake-fluid level, front brakes

- Make sure the ground is level and firm and hold the motorcycle upright.
- Turn the handlebars to a position in which the brake fluid reservoir is horizontal.



- Check the brake fluid level in brake fluid reservoir for front wheel brake **1**.



Wear of the brake pads causes the brake fluid level in the reservoir to sink.



Brake fluid level, front

Brake fluid, DOT4

It is not permissible for the brake fluid level to be below the **MIN** mark (Brake fluid reservoir horizontal)

194 MAINTENANCE

If the brake fluid level drops below the permitted level:



WARNING


Not enough brake fluid in brake fluid reservoir, or contaminants in brake fluid

Considerably reduced braking power due to presence of air, contaminants or water in the brake system

- Cease operation of the vehicle immediately and do not ride it until the fault has been rectified.
 - Check the brake-fluid levels at regular intervals.
 - Always make sure that the lid of the brake fluid reservoir and the area around the lid are cleaned before opening.
 - Make sure that only fresh brake fluid from a sealed container is used.
-
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Checking brake-fluid level, rear brakes


- Make sure the ground is level and firm and hold the motorcycle upright.

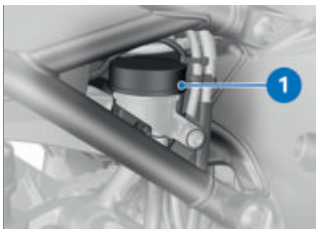

ATTENTION

Vehicle toppling sideways

Risk of damage to parts if vehicle topples

- Secure the vehicle, preferably with the assistance of a second person, so that it cannot topple sideways.
-
- Check the brake fluid level in brake fluid reservoir for rear wheel brake **1**.
-  Wear of the brake pads causes the brake fluid level in the reservoir to sink.



Brake fluid level, rear

Brake fluid, DOT4

It is not permissible for the brake fluid level to be below the **MIN** mark (Brake fluid reservoir horizontal)

If the brake fluid level drops below the permitted level:



WARNING

Not enough brake fluid in brake fluid reservoir, or contaminants in brake fluid

Considerably reduced braking power due to presence of air, contaminants or water in the brake system

- Cease operation of the vehicle immediately and do not ride it until the fault has been rectified.
 - Check the brake-fluid levels at regular intervals.
 - Always make sure that the lid of the brake fluid reservoir and the area around the lid are cleaned before opening.
 - Make sure that only fresh brake fluid from a sealed container is used.
-
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

CLUTCH

Checking operation of the clutch

- Pull the clutch lever.

196 MAINTENANCE

» An increase in force with increasing actuation must be perceptible.

If no increase in force with increasing actuation is perceptible:


- Have the clutch checked by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Checking clutch-lever play

Requirement

Engine is cold.

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Move the handlebars to the straight-ahead position.

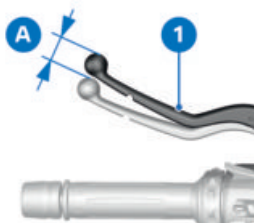

- Repeatedly pull clutch lever **1** tight against the grip.
- Pull clutch lever **1** gently until resistance is perceptible, observing the clutch play **A**.




Clutch-lever play

3...5 mm (measured at the outer end of the clutch lever, handlebars in straight-ahead position, engine cold)

Clutch play is out of tolerance:

- Adjust the clutch play (→ 196).

Adjusting clutch play

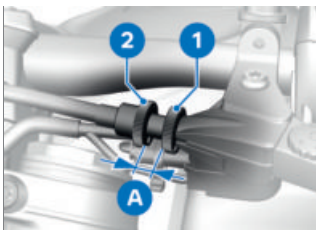

- Loosen lock nut **1**.
- To increase clutch play: Tighten adjusting screw **2** into the handlebar fitting.
» Clearance **A** is reduced.
- To reduce clutch play: Back off adjusting screw **2** in the handlebar fitting.
» Clearance **A** is increased.
- Note clearance **A** between adjusting screw and handlebar fitting.



If it is not possible to adjust clutch play within the stated intervals consult a specialist workshop, preferably an

authorised BMW Motorrad retailer.



Distance between adjusting screw and handlebar fitting (clutch-cable setting)

3 ± 1.5 mm

- Check the clutch-lever play (196).
- Tighten lock nut **1** while holding adjusting screw **2**.

COOLANT

Checking coolant level

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Turn the handlebars all the way to the left.



- Check the coolant level in expansion tank **1**. Viewing direction: From in front toward the inside of the right side panel.



Coolant, specified level

Between **MIN** and **MAX** marks on the expansion tank (engine cold)

If the coolant drops below the permitted level:

- Top up the coolant.

Topping up coolant

- Remove the fairing side panel (211).



- Open cap **1** of expansion tank **2**.
- Top up coolant to specified level.

198 MAINTENANCE



Coolant top-up quantity

0.15 l (Difference between **MIN** and **MAX**)

2.4 l (Coolant circuit, total)

Coolant FROSTOX HT-12

- Check the coolant level (▮▮▮ 197).
- Close cap **1** of expansion tank **2**.
- Installing side panel (▮▮▮ 212).

TYRES

Checking tyre pressures



WARNING

Incorrect tyre pressure

Impaired handling characteristics of the motorcycle, shorter useful tyre life

- Always check that the tyre pressures are correct.



WARNING

Tendency of valve inserts to open by themselves at high riding speeds

Sudden loss of tyre pressure

- Install valve caps fitted with rubber sealing rings and tighten firmly.

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Check tyre pressures against the data below.



Tyre pressure, front

2.5 bar (with cold tyre; one-up and two-up)



Tyre pressure, rear

2.9 bar (with cold tyre; one-up and two-up)

If tyre pressure is too low:

- Correct tyre pressure.

Checking tyre tread depth



WARNING


Riding with badly worn tyres

Risk of accident due to impaired handling

- If applicable, have the tyres changed in good time before they wear to the minimum tread depth permitted by law.

- Make sure the ground is level and firm and place the motorcycle on its stand.

- Measure the tyre tread depth in the main tread grooves with wear marks.

 Wear indicators are built into the main profile grooves on each tyre. The tyre is worn out when the tyre tread has worn down to the level of the marks. The locations of the marks are indicated on the edge of the tyre, e.g. by the letters TI, TWI or by an arrow. If the tyre tread is worn to minimum:

- Replace tyre or tyres, as applicable.

WHEEL RIMS

Checking rims

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Visually inspect the rims for defects.
- Have damaged rims checked and, if necessary, replaced by a specialist workshop, preferably an authorised BMW Motorrad retailer.

WHEELS

Effect of wheel size on chassis and suspension control systems

Wheel size is very important as a parameter for the running-gear control systems such as DTC, for example. In particular, the diameter and the width of a vehicle's wheels are programmed into the control unit and are fundamental to all calculations. Any change in these influencing variables, caused for example by a switch to wheels other than those installed ex-works, can have serious effects on the performance of the control systems.


The sensor rings are essential for correct road-speed calculation, and they too must match the motorcycle's control systems and consequently cannot be changed.

If you decide that you would like to fit non-standard wheels to your motorcycle, it is very important to consult a specialist workshop beforehand, preferably an authorised BMW Motorrad retailer. In these cases, the data programmed into the control units has to be changed to suit the new wheel sizes.

200 MAINTENANCE

Removing front wheel

- Place the motorcycle on an auxiliary stand; BMW Motorrad recommends the BMW Motorrad rear-wheel stand.
- Install the rear-wheel stand (► 188).
- Mask off the parts of the wheel rim that could be scratched in the process of removing the brake calipers.

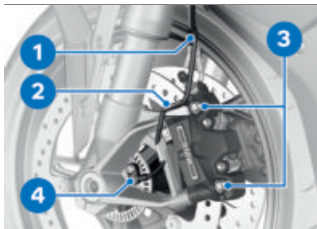

- Disengage the cable for the wheel speed sensor from holding clips **1** and **2**.
- Remove screw **4** and remove the wheel speed sensor from its bore.




ATTENTION

Unwanted inward movement of the brake pads

Component damage on attempt to install the brake caliper or because brake pads have to be forced apart


- Do not operate the brakes with a brake caliper not correctly secured.

- Remove mounting bolts **3** of the left and right brake calipers.

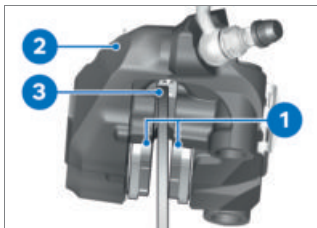

- Force brake pads **1** slightly apart by rocking brake caliper **2** back and forth against brake disc **3**.
- Carefully pull the brake calipers back and out until clear of the brake discs.

- Lift the front of the motor-cycle until the front wheel is clear of the ground, preferably using a BMW Motorrad front-wheel stand.
- Install the front-wheel stand (118).

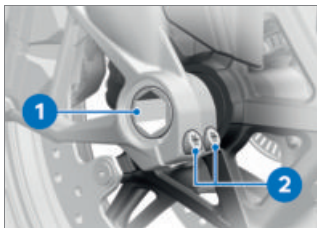

ATTENTION

Incorrect gap between sensor ring and wheel speed sensor due to misaligned threaded bush in front suspension

Damage to wheel speed sensor. ABS malfunction

- Left clamp locates the threaded bush; do not loosen or remove this clamp.
- Loosen clamping screws **2**.
- Support the wheel and remove quick-release axle **1**.
- Roll the front wheel forward to remove.

Installing front wheel

WARNING

Use of a non-standard wheel
Malfunctions in operation of ABS and DTC

- See the information on the effect of wheel size on the ABS and DTC systems at the start of this chapter.

ATTENTION

Tightening threaded fasteners to incorrect tightening torque

Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.


ATTENTION

Front wheel installed wrong way round

Risk of accident

- Note direction-of-rotation arrows on tyre or rim.
- Roll the front wheel into position in the front suspension.

202 MAINTENANCE

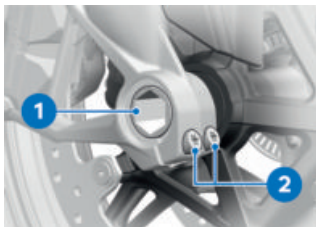

- Lubricate quick-release axle **1**.



Lubricant

Optimoly TA


- Raise the front wheel, install quick-release axle **1** and tighten to specified torque.



Quick-release axle in threaded bush

50 Nm

- Tighten clamping screws **2** to the specified tightening torque.

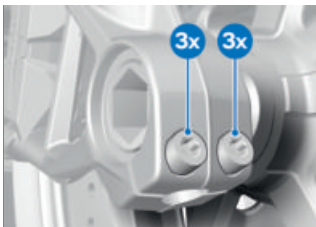


Clamping screws in axle holder

Tightening sequence: Tighten screws six times in alternate sequence

19 Nm

- Ease the brake calipers on to the brake discs.

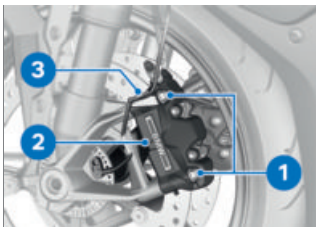

- Place brake caliper **2** on left and position cable routing **3**.
- Install bolts **1** and tighten to the specified torque.



Radial brake caliper to axle holder

38 Nm




- Secure cable for wheel speed sensor in holder **1**.
- Insert wheel speed sensor in the bore hole and secure with bolt **2**.



Wheel speed sensor,
front, to fork leg

Thread-locking compound:
micro-encapsulated

8 Nm

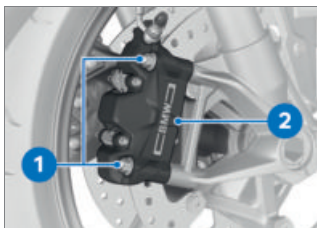

- Place brake caliper **2** on the right and install bolts **1** to specified torque.




Radial brake caliper to
axle holder

38 Nm

- Remove the adhesive tape from the wheel rim.
- Firmly pull the brake lever until the pressure point is perceptible, and repeat this operation several times.
- Remove the front-wheel stand and the auxiliary stand.


Removing rear wheel

- Lift the motorcycle, preferably with a BMW Motorrad rear-wheel stand.
- Install the rear-wheel stand (→ 188).
- Slip wooden chocks or similar under the rear wheel to prevent it from dropping out after the quick-release axle has been removed.

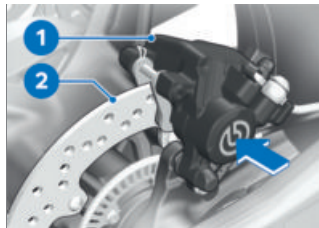


- Press the brake caliper **1** against the brake disc **2**.
» Brake pistons are pushed back.


204 MAINTENANCE

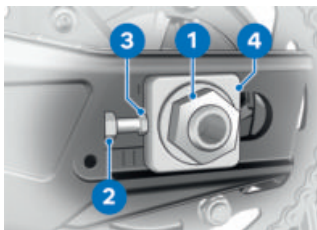

- Remove axle nut **1** with washer.
- Loosen lock nuts **2** on left and right.
- Loosen adjusting screws **3** on left and right.
- Remove adjustment plate **4** and push the axle forward as far as it will go to slacken the chain.

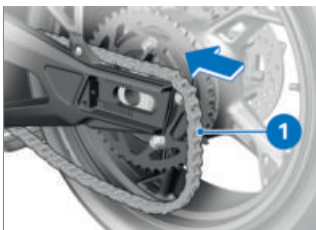

- Roll the rear wheel as far forward as possible and disengage chain **1** from the chain sprocket.

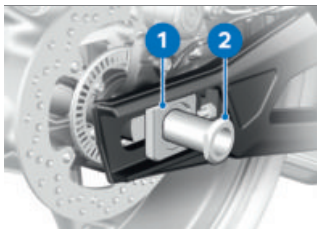

- Remove quick-release axle **2** and remove adjustment plate **1**.



- Pull out brake-caliper support **1** to the front and hang to the side.
- Roll the rear wheel back until it is clear of the swinging arm.



The sprocket and the spacer bushes on left and right are loose fits in the wheel. Make sure that these parts are not damaged or get lost on removal.

Install the rear wheel



ATTENTION

Change in tyre size

Effect on control systems

- Have the new parameters encoded by a specialist workshop, preferably by an authorised BMW Motorrad Retailer.



ATTENTION

Tightening threaded fasteners to incorrect tightening torque

Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.



- Check judder damping elements **2** for damage, deform-

ation and wear; replace if necessary.



The adaptation values have to be reset with the BMW Motorrad diagnostic system after replacement of the judder-damper elements. Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

- Lubricate judder damping elements **2** and install.



Installation tool


Silicone spray

- Install chain sprocket carrier **1**.




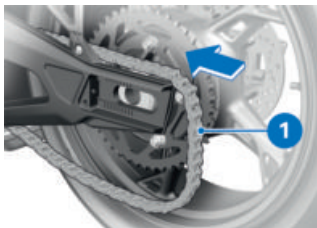
- Roll rear wheel on the support into the swinging arm.

206 MAINTENANCE

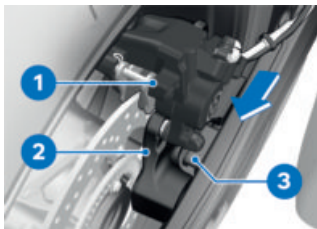


- Insert brake caliper **1** with brake-caliper support **2** into the guide **3** of the swinging arm.

 Make sure that brake line and ABS sensor cable are correctly positioned. The brake line and the ABS sensor cable must be seated in their guides to prevent contact with the rear wheel or the exhaust system.



- Roll the rear wheel as far forward as possible and loop chain **1** over the chain sprocket.

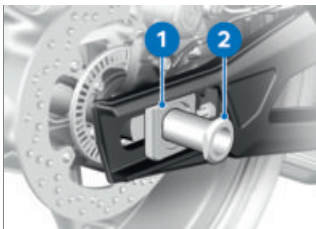

- Install adjustment plate on the right **1** in the swinging arm.
- Lubricate quick-release axle **2**.



Lubricant

Optimoly TA

- Lift the rear wheel and work quick-release axle **2** through the adjustment plate in the brake-caliper carrier and the rear wheel.
- Make sure that the quick-release axle fits into the recess for the flats.



- Insert left adjustment plate **1**.

- Install axle nut **2** with washer, but do not tighten it at this point.
- Remove the rear-wheel stand.



WARNING

Brake pads not lying against the brake disc

Risk of accident due to delayed braking effect.

- Before driving, check that the brakes respond without delay.
- Operate the brake several times until the brake pads are bedded.
- Adjust the chain sag (➡ 209).

CHAIN

Lubricating chain

- Switch the ignition off and select neutral.
- If applicable, place the motorcycle on an auxiliary stand; BMW Motorrad recommends the BMW Motorrad rear-wheel stand.
- Clean the drive chain with a suitable cleaning product, dry it and apply chain lubricant.
- Apply chain lubricant also to the sealing rings between chain rollers and chain links.



ATTENTION

Inadequate cleaning and lubrication of the drive chain

Accelerated wear

- Clean and lubricate the drive chain at regular intervals.
- Lubricate the chain more frequently if the motorcycle is ridden in wet, dusty or dirty conditions.



Lubricate the drive chain at regular intervals.

min 800 km

- To prolong chain life, BMW Motorrad recommends the use of BMW Motorrad chain lubricant or:



Lubricant

Chain spray, O-ring compatible

- Wipe off excess lubricant.

Lubricating and caring for low-maintenance chain

—with M Endurance chain^{OE}



ATTENTION

Inadequate cleaning and lubrication of the drive chain

Accelerated wear

- Clean and lubricate the drive chain at regular intervals.



The low-maintenance drive chain is cleaned and lubricated as part of the annual service. For optimum durability, the low-maintenance chain can also be lubricated at intervals by application of a chain lubricant suitable for low-maintenance chains. If riding involves above-average wear and tear due to exposure to salt or dust and dirt, carry out lubrication at correspondingly more frequent intervals.

- Switch the ignition off and select neutral.
- If applicable, place the motorcycle on an auxiliary stand; BMW Motorrad recommends the BMW Motorrad rear-wheel stand.
- Clean the drive chain with a suitable cleaning product, dry it and apply chain lubricant. To prolong chain life, BMW Motorrad recommends the use of BMW Motorrad chain lubricant or:



Lubricant

Chain spray, O-ring compatible

- Wipe off excess lubricant.

Checking chain sag

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Turn the rear wheel until it reaches the position of least chain sag.



- Use a screwdriver to push the chain up and down at a point midway between the pinion and sprocket and measure chain sag **A**.



Chain deflection


35...45 mm (Motorcycle with no weight applied, supported on its side stand)

If chain deflection is outside permitted tolerance:

- Adjust the chain sag (➡ 209).

Adjusting chain sag

- Make sure the ground is level and firm and place the motorcycle on its stand.

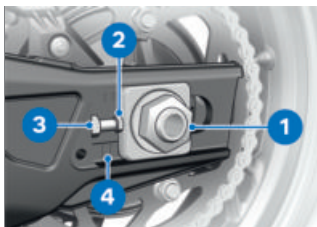

- Loosen quick-release axle nut **1**.
- Loosen lock nuts **3** on left and right.
- Use the adjusting screws **2** on left and right to adjust chain sag.
- Check chain sag (➡ 208).



ATTENTION

Rear wheel skewed at a slight angle because tensioning screws not adjusted to same setting

Accelerated wear at rear wheel and chain drive

- Make sure that the rear wheel is aligned to track correctly (same scale reading on both sides of the rear wheel swinging arm).

- Set to the same scale value **4** on both sides.
- Tighten lock nuts **3** on left and right to the specified tightening torque.



Locknut of the final-drive chain tensioning screw

19 Nm

- Tighten quick-release axle nut **1** to the specified tightening torque.



Rear quick-release axle in swinging arm

Thread-locking compound: mechanical

125 Nm

- Check chain sag (➡ 208).


210 MAINTENANCE

Checking chain wear

Requirement

Chain tension is set correctly.

- Make sure the ground is level and firm and place the motor-cycle on its stand.
- Engage 1st gear.
- Turn the rear wheel in the normal direction of travel until the chain is tensioned.
- Determine the length of the chain underneath the rear wheel swinging arm above the middle of 10 rivets in 3 different places.

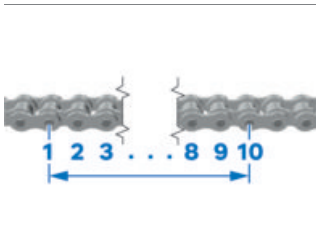


Permissible chain length

max 144 mm (measured from the **centre** of 10 rivets, chain pulled taut)

If the chain has stretched to the maximum permissible length:

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

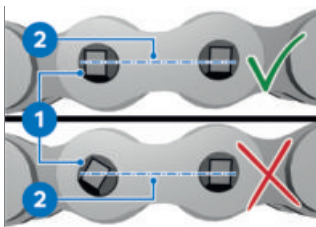

- Check whether a rivet head **1** has twisted out of line. Rivet heads are parallel to the chain centreline **2**.
- Chain riveting is OK.

If one or more rivet heads have twisted out of line:

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

LIGHTING

Replacing LED light sources



WARNING

Vehicle overlooked in traffic due to failure of the lights on the vehicle


Safety risk

- Always replace a faulty bulb at the earliest possible opportunity. Consult a specialist workshop, preferably an authorised BMW Motorrad Retailer.


All light sources of the vehicle are LED light sources. The service life of the LED light sources is longer than the presumed vehicle service life. If an LED light source is faulty, please contact a specialist workshop, preferably an authorised BMW Motorrad retailer.

TRIM PANEL COMPONENTS

Removing fairing side panel

 The procedure described here for the right side panel applies by analogy to the left side as well.

- Make sure the ground is level and firm and place the motorcycle on its stand.

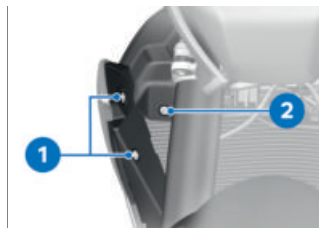


- Remove screws **1** (3 mm with collar).
- Remove screw **2** (25 mm without collar).




- Disengage trim cover **1** from securing clips **2** and remove.

–with engine spoiler^{OE}

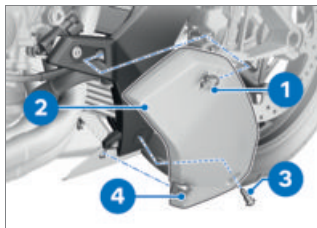


- Remove screw **3**.
- Disengage engine spoiler **2** from securing clip **4**.
- Ease engine spoiler **2** to the rear to remove, noting hook **1**.◀

212 MAINTENANCE

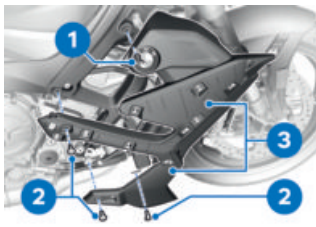


- Remove screws **2** (9 mm with collar).
- Disengage fairing side panel **3** from grommet **1** and remove.

Installing side panel

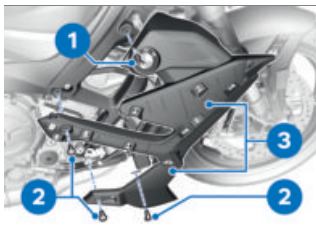


- Hold fairing side panel **3** in position and engage it in grommet **1**.
- Install screws **2** (9 mm with collar).


—with engine spoiler^{OE}

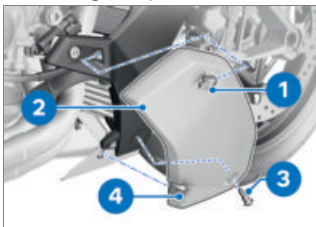

- Hold engine spoiler **2** in position, noting hook **1**.
- Install engine spoiler **2** in securing clip **4**.
- Install screw **3**.<

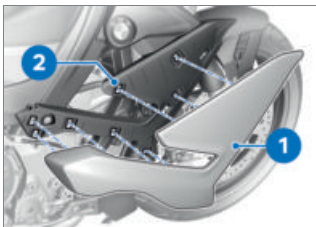

- Hold trim cover **1** in position and install in securing clips **2**.

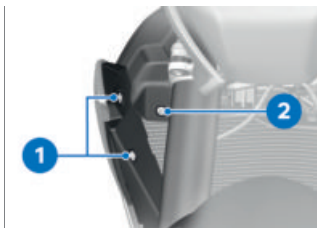

- Install screws **1** (3 mm with collar).
- Install screw **2** (25 mm without collar).

Removing tail-hump trim panel

—with two-up riding package^{OE}


- Remove the passenger seat (→ 90).
- Remove the tail-hump cover (→ 90).
- Remove the rider's seat (→ 91).




- Remove screws **1**.



- Remove screws **1**.

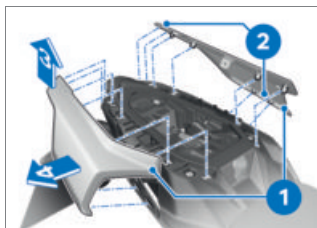

- Begin by carefully unclipping rear trim panels **1** on left and right vertically **3**, then carefully disengage lugs **2** from holders **4**.

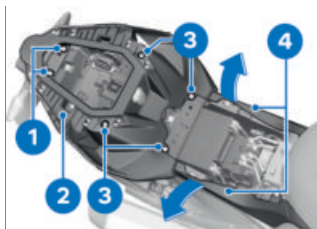


- Remove screws **3** (3 mm with collar) and screws **1** (6 mm)

214 MAINTENANCE


with collar) from tail-hump trim 2.

- Carefully unclip panels 4 in the **direction of arrow**.

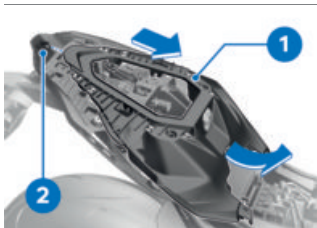


- Lift tail-hump trim panel 1 in the **direction of arrow** and remove from retaining tab 2.


Installing tail-hump trim panel

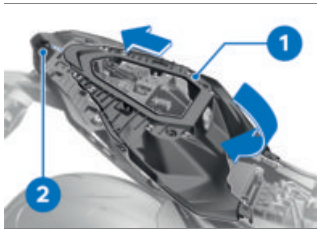

- Position tail-hump trim panel 1 at retaining tab 2.

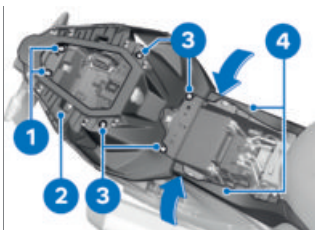


- Carefully clip in panels 4 in the **direction of arrow** to the tail-hump trim panel 2.
- Install screws 3 (3 mm with collar) and screws 1 (6 mm with collar).

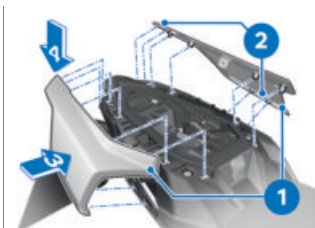

- Begin by carefully easing rear trim panels 1 left and right vertically into position and clipping them in 4, then engage lugs 2 in holders 3.



- Install screws **1**.

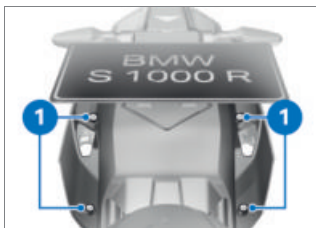

- Install screws **1**.
- with two-up riding package ^{OE}
- Install the passenger seat (→ 91).◁
- Install the tail-hump cover (→ 90).
- Install the rider's seat (→ 91).

JUMP-STARTING



CAUTION

Touching live parts of the ignition system when the engine is running

Electric shock

- Do not touch parts of the ignition system when the engine is running.



ATTENTION

Contact between crocodile clips of jump leads and vehicle

Risk of short-circuit

- Use jump leads fitted with fully insulated crocodile clips at both ends.



ATTENTION

Jump-starting with a voltage greater than 12 V

Damage to the on-board electronics

- Make sure that the battery of the donor vehicle does not exceed a voltage of 12 V.

- When jump-starting the engine, do not disconnect the battery from the on-board electrical system.

216 MAINTENANCE

- Remove the rider's seat (🔧 91).
- Run the engine of the donor vehicle during jump-starting.
- Begin by connecting one end of the red jump lead to the positive terminal of the discharged battery and the other end to the positive terminal of the donor battery.
- Then connect one end of the black jump lead to the negative terminal of the donor battery, and the other end to the negative terminal of the discharged battery.
- Start the engine of the vehicle with the discharged battery in the usual way; if the engine does not start, wait a few minutes before repeating the attempt in order to protect the starter motor and the donor battery.
- Allow both engines to idle for a few minutes before disconnecting the jump leads.
- Disconnect the jump lead from the negative terminals first, then disconnect the second lead from the positive terminals.
- Install the rider's seat (🔧 91).

BATTERY

Maintenance instructions

Correct upkeep, recharging and storage will prolong the life of the battery and are essential if warranty claims are to be considered.

Compliance with the points below is important in order to maximise battery life:

- Keep the surface of the battery clean and dry.
- Do not open the battery.
- Do not top up with water.
- Be sure to read and comply with the instructions for charging the battery on the following pages.
- Do not turn the battery upside down.



ATTENTION

On-board electronics (e.g. clock) draining connected battery

Battery is deep-discharged; this voids the guarantee

- Connect a float charger to the battery if the motorcycle is to remain out of use for more than four weeks.




BMW Motorrad has developed a float charger specially designed for compatibility with the electronics

of your motorcycle. Using this charger, you can keep the battery charged during long periods of disuse, without having to disconnect the battery from the motorcycle's on-board systems. You can obtain additional information from your authorised BMW Motorrad dealer.

Disconnecting battery from motorcycle

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Remove the rider's seat (► 91).
- with anti-theft alarm (DWA)^{OE}
- If applicable, switch off the DWA.<

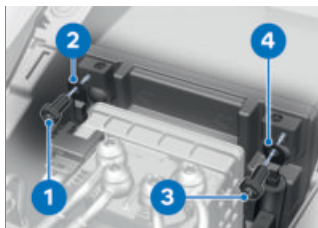

ATTENTION

Battery not disconnected in accordance with correct procedure

Risk of short-circuit

- Always proceed in compliance with the specified disconnection sequence.
- Remove bolt **1** and wiring harness negative terminal **2**, then push forward.
- Remove bolt **3** and wiring harness positive terminal **4**.

218 MAINTENANCE

—with M Lightweight battery^{OE}




ATTENTION

Battery not disconnected in accordance with correct procedure

Risk of short-circuit

- Always proceed in compliance with the specified disconnection sequence.
- Remove bolt **1** and wiring harness negative terminal **2**, then push forward.
- Remove bolt **3** and wiring harness positive terminal **4**.◁

Connecting battery to motorcycle

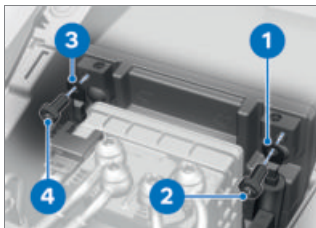

ATTENTION

Battery not connected in accordance with correct procedure

Risk of short-circuit

- Always proceed in compliance with specified installation sequence.
- Position wiring harness positive terminal **1** and install bolt **2**.
- Position wiring harness negative terminal **3** and install bolt **4**.

—with M Lightweight battery^{OE}



ATTENTION

Battery not connected in accordance with correct procedure

Risk of short-circuit

- Always proceed in compliance with specified installation sequence.

- Position wiring harness positive terminal **1** and install bolt **2**.
- Position wiring harness negative terminal **3** and install bolt **4**.<
- Install the rider's seat (➡ 91).
- with anti-theft alarm (DWA)^{OE}
- Switch on DWA if necessary.<

Recharging battery

- Disconnecting battery from motorcycle (➡ 217).
- Charge the battery using a suitable charger.
- Comply with the operating instructions of the charger.

- Once the battery is fully charged, disconnect the charger's terminal clips from the battery terminals.



The battery has to be recharged at regular intervals in the course of a lengthy period of disuse. See the instructions for caring for your battery. Always fully recharge the battery before restoring it to use.

- Connecting battery to motorcycle (➡ 218).

Removing battery

- Remove the rider's seat (➡ 91).
- Disconnecting battery from motorcycle (➡ 217).
- Lift the battery up and out; work it slightly back and forth if it is difficult to remove.

Installing battery



If the vehicle has been disconnected from the battery for a significant time, the current date will have to be entered in the instrument cluster to guarantee correct operation of the service display.

220 MAINTENANCE

- Place the battery in the battery compartment; positive terminal on the left in the direction of travel.
- Connecting battery to motorcycle (► 218).
- Set the clock (► 102).

FUSES

Replacing fuses

- Switch off the ignition.
- Remove the rider's seat (► 91).




ATTENTION

Jumpering of blown fuses

Risk of short-circuit and fire

- Never attempt to jumper a blown fuse.
 - Always replace a defective fuse with a new fuse of the same amperage.
- Replace faulty fuse in accordance with the fuse allocation diagram.



- Remove the faulty fuse **2** upwards out of the slot.
 - To replace the two fuses in fuse box **1**, pull the fuse box up and out of its holder. To do so, squeeze the retaining lugs on the left and right of the fuse box inward.
-  If fuse defects recur frequently have the electric circuits checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.
- Install fuse box **1** in the holder.
 - Install the rider's seat (► 91).

Fuse assignment



- 1** 15 A
Instrument cluster
Anti-theft alarm (DWA)
Ignition switch
Diagnostic connector
Ignition coil
- 2** 7.5 A
Multifunction switch, left
Tyre pressure control (RDC)
Sensor box
- 3** 40 A
Alternator regulator
Isolating relay
ABS
BMS-O
BCL

DIAGNOSTIC CONNECTOR

Disengaging diagnostic socket



CAUTION

Incorrect disconnection of the diagnostic socket for on-board diagnosis


Malfunctions of the vehicle

- Do not disconnect the diagnostic socket or allow it to be disconnected except in the course of a BMW Motorrad service by a specialist workshop or by other authorised persons.
- Have the work carried out by appropriately trained personnel.
- Comply with the stipulations of the vehicle manufacturer.

—with two-up riding package^{OE}

- Remove the passenger seat (→ 90).
- Remove the tail-hump cover (→ 90).

222 MAINTENANCE

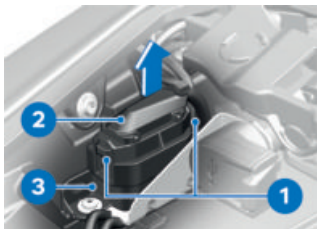


- Install the tail-hump cover (III ➔ 90).

- Press locks 1.
 - Disengage diagnostic socket 2 from holder 3.
- » The interface to the diagnosis and information system can be connected to the diagnostic connector 2.

Securing diagnostic socket

- Disconnect the interface for the diagnosis and information system.

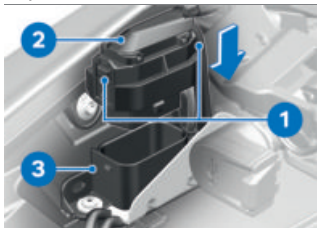

- Insert diagnostic socket 2 into holder 3.
- » The locks 1 engage.
- with two-up riding package^{OE}
- Install the passenger seat (III ➔ 91).

ACCESSORIES

11

GENERAL NOTES	226
CONNECTOR FOR OPTIONAL ACCESSORIES	226
USB CHARGING SOCKET	228

GENERAL NOTES



CAUTION

Use of other-make products

Safety risk

- BMW Motorrad cannot examine or test each product of outside origin to ensure that it can be used on or in connection with BMW vehicles without constituting a safety hazard. Country-specific official authorisation does not suffice as assurance. Tests conducted by these instances cannot make provision for all operating conditions experienced by BMW vehicles and, consequently, they are not sufficient in some circumstances.
- Use only parts and accessories approved by BMW for your vehicle.

BMW has conducted extensive testing of the parts and accessory products to establish that they are safe, functional and suitable. Consequently, BMW accepts responsibility for the products. BMW accepts no liability whatsoever for parts and accessories that it has not approved.

All modifications must be in compliance with legal requirements. Make sure that the vehicle does not infringe the national road-vehicle construction and use regulations applicable in your country. Your BMW Motorrad retailer can offer expert advice on the choice of genuine BMW parts, accessories and other products. To find out more about accessories go to: **bmw-motorrad.com/equipment**

CONNECTOR FOR OPTIONAL ACCESSORIES

Equipment

The vehicle is fitted with the following plugs for optional accessories and racing accessories:

- Spring-travel sensor
- M data logger
- Optional accessories


Underneath the left side panel



- 1 Plug for optional accessories and racing accessories: Voltage supply and LIN Spring travel sensor for front forks (racing accessory)

Under the tail-hump trim panel


—with anti-theft alarm (DWA)^{OE}

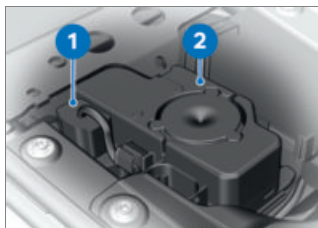

- 1 Connector for DWA and M data logger
- 2 DWA


Under the tail-hump cover

—without anti-theft alarm (DWA)^{OE}

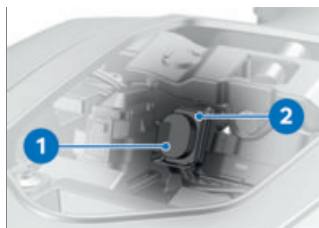

- 1 Terminating resistor
- 2 Connector for DWA and M data logger

Under the tail-hump cover

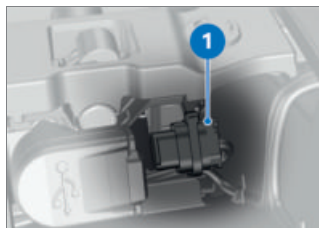

- 1 Connector for optional accessories, rear


228 ACCESSORIES


Connecting optional accessories and racing accessories

Requirement

Remove the side panel, rear seat or tail-hump cover, as applicable, to gain access to the plugs.

- Remove the fairing side panel (▮▮▮ 211).
—with two-up riding package^{OE}
- Remove the passenger seat (▮▮▮ 90).
- Remove the tail-hump cover (▮▮▮ 90).
- Removing tail-hump trim panel (▮▮▮ 213).
- Unlock the protective cap or terminating resistor, as applicable, and disconnect it from the plug.
- Connect the optional accessory or racing accessory, as applicable.

 Comply with the installation instructions supplied with the optional accessory or racing accessory.

 Tightening the cable ties has to be the last step in the process; this is in order to ensure that the wiring harness can be positioned correctly and that there is no strain on the cable legs with plugs.



ATTENTION

Dirt and damp penetrating inside open connectors

Malfunctions

- Reinstall the cap or terminating resistor, as applicable, after removing the plug.

- After removing the accessory: Reinstall the cap or terminating resistor, as applicable.
- Installing side panel (▮▮▮ 212).
—with two-up riding package^{OE}
- Install the passenger seat (▮▮▮ 91).
- Install the tail-hump cover (▮▮▮ 90).
- Installing tail-hump trim panel (▮▮▮ 214).

USB CHARGING SOCKET

—with USB charging interface^{OE}

Notes on use:

Charge current

This is a 5 V USB charging interface that provides a maximum charge current of 2.4 A.

Automatic shutdown

The USB charging socket is shut down automatically under the following circumstances:

- If battery charge state is too low, to maintain the vehicle's start capability.
- If the maximum load capacity as stated in the technical data is exceeded.
- During the starting operation.

Connection of electrical devices

You can start using electrical devices connected to the USB charging socket only when the ignition is switched on. The power supply to the sockets is switched off no more than 15 minutes after the ignition is switched off, in order to prevent overloading of the on-board electrics.

BMW Motorrad recommends using the BMW Motorrad pouch for smartphone to protect your smartphone against water and vibration. To prevent dirtying, keep the protective cover of the USB charging interface closed when no device is connected.

Cable routing

Make sure that cables are routed in such a way that they cannot be trapped.

CARE

12

CARE PRODUCTS	232
WASHING THE VEHICLE	232
CLEANING EASILY DAMAGED COMPONENTS	233
CARE OF PAINTWORK	234
PAINTWORK PRESERVATION	235
LAYING UP MOTORCYCLE	235
RESTORING MOTORCYCLE TO USE	235

CARE PRODUCTS

BMW Motorrad recommends that you use the cleaning and care products you can obtain from your authorised BMW Motorrad retailer. The substances in BMW Care Products have been tested in laboratories and in practice; they provide optimised care and protection for the materials used in your vehicle.



ATTENTION

Use of unsuitable cleaning and care products

Damage to vehicle parts

- Do not use solvents such as cellulose thinners, cold cleaners, fuel or the like, and do not use cleaning products that contain alcohol.



ATTENTION

Use of strongly acidic or strongly alkaline cleaning agents

Damage to vehicle parts

- Dilute in accordance with the dilution ratio stated on the packaging of the cleaning agent.
- Do not use strongly acidic or strongly alkaline cleaning agents.

WASHING THE VEHICLE

BMW Motorrad recommends that you use BMW insect remover to soften and wash off insects and stubborn dirt on painted parts prior to washing the vehicle.

To prevent stains, do not wash the motorcycle immediately after it has been exposed to strong sunlight and do not wash it in the sun.

Remove dirt from the fork legs at regular intervals.

Make sure that the vehicle is washed frequently, especially during the winter months.

To remove road salt, clean the motorcycle with cold water immediately after every trip.

**WARNING**

Wet brake discs and brake pads after vehicle wash, after riding through water and in rainy conditions

Diminished braking effect, risk of accident

- Apply the brakes in good time to allow the friction and heat to dry the brake discs and brake pads.

**ATTENTION**

Effect of road salt intensified by warm water

Corrosion

- Use only cold water to wash off road salt.

**ATTENTION**

Damage due to high water pressure from high pressure cleaners or steam cleaners

Corrosion or short circuit, damage to labels, seals, hydraulic brake system, electrical system and the motorcycle seat

- Exercise restraint when using a steam jet or high pressure cleaning equipment.

CLEANING EASILY DAMAGED COMPONENTS

Plastics

**ATTENTION**

Use of unsuitable cleaning agents

Damage to plastic surfaces

- Do not use cleaning agents that contain alcohol, solvents or abrasives.
- Do not use insect-remover pads or cleaning pads with hard, scouring surfaces.

Trim panel components

Clean trim panel components with water and BMW Motorrad solvent cleaner.

Plastic windscreens and headlight lenses

Remove dirt and insects with a soft sponge and plenty of water.



Soften stubborn dirt and insects by covering the affected areas with a wet cloth.



Clean with water and sponge only.



Do not use any chemical cleaning agents.

234 CARE

Carbon parts

Clean Carbon parts with water and a microfibre cloth.

TFT display

Clean the TFT display with warm water and washing-up liquid. Then dry it with a clean cloth, e.g. a paper towel.

Chrome

Carefully clean chrome parts with plenty of water and motorcycle cleaner from the BMW Motorrad Care Products range. This is particularly important to counter the effects of road salt. For an additional treatment, use BMW Motorrad metal polish.

Radiator

Clean the radiator regularly to prevent overheating of the engine due to inadequate cooling. For example, use a garden hose with low water pressure.



ATTENTION

Bending of radiator fins

Damage to radiator fins

- Take care not to bend the radiator fins when cleaning.

Rubber

Treat rubber components with water or BMW rubber-care products.



ATTENTION

Application of silicone sprays to rubber seals

Damage to the rubber seals

- Do not use silicone sprays or care products that contain silicon.

CARE OF PAINTWORK

Washing the vehicle regularly will help counteract the long-term effects of substances that can damage the paint, especially if your vehicle is ridden in areas with high air pollution or natural sources of dirt, for example tree resin or pollen. Remove particularly aggressive substances immediately, however, as otherwise the paint can be affected or become discoloured. Substances of this nature include spilt fuel, oil, grease, brake fluid and bird droppings. For this, we recommend BMW Motorrad solvent cleaner followed by BMW Motorrad gloss polish for preservation. Marks on the paintwork are particularly easy to see after

the motorcycle has been washed. Remove stains of this kind at the earliest possible opportunity, using benzine or petroleum spirit on a clean cloth or ball of cotton wool. BMW Motorrad recommends using BMW tar remover for removing specks of tar. Then apply preserving agent to the areas treated in this way.

PAINTWORK PRESERVATION

If water no longer rolls off the paint, the paint must be preserved.

For paint preservation, BMW Motorrad recommends the use of BMW Motorrad gloss polish or agents containing carnauba wax or synthetic wax.

LAYING UP MOTORCYCLE

- Fill the motorcycle's fuel tank.



Fuel additives clean the fuel injection system and the combustion zone. It is advisable to use fuel additives when the engine is operated with low-grade fuel or if the vehicle is to be out of use for a lengthy period of time. More information is available from your authorised BMW Motorrad retailer.

- Clean the motorcycle.
- Remove the battery (▮▮▮ 219).
- Spray the brake and clutch lever pivots and the side stand pivot mounts with a suitable lubricant.
- Coat bright metal and chrome-plated parts with an acid-free grease (e.g. Vaseline).
- Stand the motorcycle in a dry room in such a way that there is no load on either wheel.

RESTORING MOTORCYCLE TO USE

- Remove the protective wax coating.
- Clean the motorcycle.
- Install the battery (▮▮▮ 220).
- Note the checklist (▮▮▮ 132).

TECHNICAL DATA

13

TROUBLESHOOTING CHART	238
THREADED FASTENERS	240
FUEL	242
ENGINE OIL	243
COOLANT	243
ENGINE	243
CLUTCH	244
TRANSMISSION	244
FINAL DRIVE	245
FRAME	245
CHASSIS AND SUSPENSION	245
BRAKES	246
WHEELS AND TYRES	246
ELECTRICAL SYSTEM	248
ANTI-THEFT ALARM	249
DIMENSIONS	249
WEIGHTS	250
PERFORMANCE FIGURES	251

TROUBLESHOOTING CHART

Engine does not start or is difficult to start.

Possible cause	Rectification
Side stand extended and gear engaged	Retract the side stand.
Gear engaged and clutch not disengaged	Select neutral or pull the clutch lever.
No fuel in tank	Refuelling (▮▮▮ 142).
Battery flat	Recharging battery (▮▮▮ 219).
Starter motor overheating protection has tripped. The starter motor can be operated for a limited time only.	Allow the starter motor to cool down for approximately 1 minute before trying again.

The Bluetooth connection is not established.

Possible cause	Rectification
The steps required for pairing were not carried out.	Check the necessary steps for pairing in the operating instructions for the communication system.
The communication system was not connected automatically despite successful pairing.	Switch off the helmet's communication system and reconnect it after a minute or two.
Too many Bluetooth devices are saved on the helmet.	All pairing entries on the helmet are deleted (see the communication system operating instructions).
There are other vehicles with Bluetooth-capable devices in the vicinity.	Avoid simultaneously pairing with more vehicles.

Bluetooth connection is interrupted.

Possible cause	Rectification
The Bluetooth connection to the mobile device is interrupted.	Switch off energy saving mode.
The Bluetooth connection to the helmet is interrupted.	Switch off the helmet's communication system and reconnect it after a minute or two.
The volume in the helmet cannot be adjusted.	Switch off the helmet's communication system and reconnect it after a minute or two.

The telephone book is not displayed in the TFT display.

Possible cause	Rectification
The phone book was not transmitted to the vehicle.	Confirm transmission of the phone data (☎ 112) when pairing the mobile device.

Active route guidance is not displayed in the TFT display.

Possible cause	Rectification
Navigation from the BMW Motorrad Connected app was not transmitted.	The BMW Motorrad Connected app is opened on the connected mobile device prior to departure.
The route guidance cannot be started.	Secure the mobile device's data connection and check the map data on the mobile device.

240 TECHNICAL DATA

THREADED FASTENERS




Front wheel	Value	Valid
Quick-release axle in threaded bush		
M24 x 1.5	50 Nm	
Clamping screws in axle holder		
M8 x 35	Tightening sequence: Tighten screws six times in alternate sequence	
	19 Nm	
Radial brake caliper to axle holder		
M10 x 65	38 Nm	

Rear wheel	Value	Valid
Locknut of the final-drive chain tensioning screw		
M8	19 Nm	
Nut on swinging arm axle		
M18 x 1.5, Replace nut mechanical	100 Nm	
Rear quick-release axle in swinging arm		
M24 x 1.5 mechanical	125 Nm	
Swinging-arm adapter to rear wheel swinging arm		
M8 x 30	20 Nm	

Rear wheel	Value	Valid
Spring strut at deflection lever		
M12 x 1.5 x 75 - 10.9 micro-encapsulated	100 Nm	
Mirrors	Value	Valid
Mirror with lock nut to adapter		
M10 x 1.25	Left-hand thread, 22 Nm	
Adapter to clamping block		
M10 x 14 - 4.8	25 Nm	
Footrest system	Value	Valid
Rotor to base plate		
M8 x 35	28 Nm	–with Billet pack ^{OE}
Footrest hinge to rotor		
M8 x 30	28 Nm	–with Billet pack ^{OE}
Peg to footbrake lever		
M6 x 25 micro-encapsulated	9 Nm	–with Billet pack ^{OE}

242 TECHNICAL DATA

FUEL

Recommended fuel grade	 Premium, unleaded (maximum 5% ethanol, E5) 98 ROZ/RON 93 AKI
Alternative fuel grade	  Premium unleaded (power- and consumption-related restrictions) (max. 10% ethanol, E10) 95 ROZ/RON 90 AKI
Usable fuel capacity	approx. 16.5 l
Fuel reserve	approx. 4 l
Fuel consumption	6.2 l/100 km, in accordance with WMTC
CO2 emission	144 g/km, in accordance with WMTC
Exhaust emissions standard	EU 5
–with Canada export ^{NV}	TIER 2, measured in accordance with FTP75

ENGINE OIL

Engine oil, capacity	approx. 4.0 l, with filter change
Specification	SAE 5W-40, API SJ / JASO MA2, Additives (e.g. molybdenum-based) are not permissible because they can attack coated components of the engine, BMW Motorrad recommends BMW Motorrad ADVANTEC Ultimate oil.
Engine oil, quantity for topping up	max 1.3 l, Difference between MIN and MAX

BMW recommends  **ADVANTEC**
ORIGINAL BMW ENGINE OIL

COOLANT

Coolant top-up quantity	0.15 l, Difference between MIN and MAX
	2.4 l, Coolant circuit, total
	Coolant FROSTOX HT-12

ENGINE

Engine number location	Crankcase, bottom part, right
Engine type	A11A10A
Engine design	Oil/liquid-cooled 4-cylinder, 4-stroke in-line engine, four valves per cylinder
Displacement	999 cm ³
Cylinder bore	80 mm
Piston stroke	49.7 mm
Compression ratio	12.5:1

244 TECHNICAL DATA

Nominal capacity	121 kW, at engine speed: 11000 min ⁻¹
–with power reduction ^{OE}	79 kW, at engine speed: 7500 min ⁻¹
Torque	114 Nm, at engine speed: 9250 min ⁻¹
–with power reduction ^{OE}	104 Nm, at engine speed: 7000 min ⁻¹
Maximum engine speed	max 12000 min ⁻¹
Idle speed	1270 ^{±50} min ⁻¹ , Engine at regular operating temperature

CLUTCH

Clutch type	Multi-plate oil-bath (anti-hopping) with self-reinforcement
-------------	---

TRANSMISSION

Type of transmission	Claw-shift 6-speed gearbox, integrated into engine block
Gearbox transmission ratios	1.652 (76:46 teeth), Primary transmission ratio 2.647 (45:17 teeth), 1st gear 2.091 (46:22 teeth), 2nd gear 1.727 (38:22 teeth), 3rd gear 1.476 (31:21 teeth), 4th gear 1.304 (30:23 teeth), 5th gear 1.167 (28:24 teeth), 6th gear

FINAL DRIVE

Type of final drive	Chain drive
Chain deflection	35...45 mm, Motorcycle with no weight applied, supported on its side stand
Permissible chain length	max 144 mm, measured from the centre of 10 rivets, chain pulled taut
Final drive, number of teeth (Pinion / sprocket)	17/45
Secondary transmission ratio	2.647

FRAME

Frame type	Aluminium composite bridge frame, load-bearing engine
Type plate location	Frame, front right on steering head
Position of the vehicle identification number	Frame, front right on steering head

CHASSIS AND SUSPENSION

Front wheel

Type of front suspension	Upside-down telescopic fork
Spring travel, front	120 mm, at front wheel

Rear wheel

Type of rear suspension	Two-arm aluminium swinging arm
Design of the rear-wheel suspension	Central spring strut with coil spring, adjustable rebound-stage and compression-stage damping and spring preload
Spring travel, rear	117 mm, at rear wheel

246 TECHNICAL DATA

BRAKES

Front wheel

Type of front brake	Twin disc brake, diameter 320 mm, 4-piston fixed caliper
Brake-pad material, front	Sintered metal
Brake disc thickness, front	4.5 mm, When new min 4.0 mm, Wear limit
–with M forged wheels ^{OE}	min 5 mm, When new min 4.5 mm, Wear limit
–with M carbon wheels ^{OE}	min 5 mm, When new min 4.5 mm, Wear limit
Play of brake controls (Front brake)	0.6...1.4 mm, at piston

Rear wheel

Type of rear brake	Single-disc brake, diameter 220 mm, 1-piston floating caliper
Brake-pad material, rear	Organic material
Brake disc thickness, rear	5 mm, When new min 4.5 mm, Wear limit
Blow-by clearance of the foot-brake lever	2...3 mm, between the foot-brake lever and footrest plate

WHEELS AND TYRES

Recommended tyre combinations	An overview of currently approved tyres is available from your authorised BMW Motorrad retailer or on the Internet at bmw-motorrad.com .
Speed category, front/rear tyres	W, required at least: 270 km/h

Front wheel

Front-wheel type	Aluminium cast wheel
–with M forged wheels ^{OE}	Forged aluminium wheels
–with M carbon wheels ^{OE}	Carbon wheel
Front-wheel rim size	3.50" x 17"
Tyre designation, front	120/70 ZR 17
Load index, front tyre	min. 58
Permissible front-wheel imbalance	max 5 g

Rear wheel

Rear-wheel type	Aluminium cast wheel
–with M forged wheels ^{OE}	Forged aluminium wheels
–with M carbon wheels ^{OE}	Carbon wheel
Rear wheel rim size	6.0" x 17"
Tyre designation, rear	190/55 ZR 17
–with M forged wheels ^{OE} or –with M carbon wheels ^{OE}	200/55 ZR 17
Load index, rear tyre	min. 75
Permissible rear-wheel imbalance	max 5 g

Tyre pressure

Tyre pressure, front	2.5 bar, with cold tyre; one-up and two-up
Tyre pressure, rear	2.9 bar, with cold tyre; one-up and two-up

248 TECHNICAL DATA

ELECTRICAL SYSTEM

Fuses

Main fuse	40 A, Alternator regulator, isolating relay, BCL, BMS-O, ABS, SAF
Fuse 1	15 A, Instrument cluster, anti-theft alarm system (DWA) ignition switch, diagnostic socket, ignition coil isolating relay
Fuse 2	7.5 A, Multifunction switch left, RDC control unit, sensor box
Electrical rating of on-board sockets	max 5 A, Total for all sockets

Battery

Battery type	AGM (Absorbent Glass Mat)
–with M Lightweight battery ^{OE}	Lithium-ion
Battery rated voltage	12 V
Battery rated capacity	9 Ah
–with anti-theft alarm (DWA) ^{OE} or –with Keyless Ride ^{OE}	12 Ah
–with M Lightweight battery ^{OE}	5 Ah

Spark plugs

Spark plugs, manufacturer and designation	NGK LMAR9FI-10G
---	-----------------

Lighting

Bulb for high-beam headlight	LED
Bulbs for the low-beam headlight	LED
Bulb for parking light	LED
Bulb for tail light/brake light	LED
Bulbs for turn indicators	LED
Light source for the number plate light	LED

ANTI-THEFT ALARM

Activation time on arming	approx. 30 s
Alarm duration	approx. 26 s
Battery type (For Keyless Ride radio-operated key)	CR 2032

DIMENSIONS

Length of motorcycle	2090 mm, over rear wheel
Height of motorcycle	1234 mm, over mirrors, at DIN vehicle kerb weight
	1051 mm, without mirrors, at DIN vehicle kerb weight
–with Sport windscreen ^{OE}	1115 mm, without mirrors, at DIN vehicle kerb weight
Width of motorcycle	812 mm, without mounted parts
	802 mm, over handlebar weights
–with Billet pack ^{OE}	853 mm, over handlebar lever protectors

250 TECHNICAL DATA

Height of rider's seat	830 mm, without rider, at DIN vehicle kerb weight
–with rider's seat, low ^{OE}	810 mm, without rider, at DIN vehicle kerb weight
–with rider's seat, high ^{OE}	850 mm, without rider, at DIN vehicle kerb weight
Rider's inside-leg arc, heel to heel	1835 mm, without rider, at DIN vehicle kerb weight
–with rider's seat, low ^{OE}	1815 mm, without rider, at DIN vehicle kerb weight
–with rider's seat, high ^{OE}	1858 mm, without rider, at DIN vehicle kerb weight

WEIGHTS

Vehicle kerb weight	199 kg, DIN vehicle kerb weight, ready for road, 90% load of fuel, without optional extras (OE)
Wheel load, front, at unladen weight	104 kg
Permissible wheel load, front	max 180 kg
Wheel load, rear, at unladen weight	95 kg
Permissible wheel load, rear	max 270 kg
Permissible gross vehicle weight	407 kg
Maximum payload	208 kg
Payload of topcase	max 5 kg

PERFORMANCE FIGURES

Top speed	>200 km/h
–with power reduction ^{OE}	>200 km/h

SERVICE

14

REPORTING SAFETY-RELEVANT DEFECTS	254
BMW MOTORRAD SERVICE	255
BMW MOTORRAD SERVICE HISTORY	255
BMW MOTORRAD MOBILITY SERVICES	256
MAINTENANCE WORK	256
BMW MOTORRAD SERVICE	256
MAINTENANCE SCHEDULE	258
MAINTENANCE CONFIRMATIONS	259
SERVICE CONFIRMATIONS	271

REPORTING SAFETY-RELEVANT DEFECTS

—with Canada export^{NV}

If you think that your motorcycle has a fault which may cause an accident, injury or death, you must inform the NHTSA (National Highway Traffic Safety Administration) immediately and BMW of North America, LLC.

If the NHTSA receives other similar complaints, it may open an investigation. If it finds that a safety defect exists in a group of vehicles, the NHTSA may order the manufacturer to perform a recall and remedy campaign. However, the NHTSA cannot become involved in individual problems between you, your retailer, or BMW of North America, LLC.

You can contact the NHTSA by calling the Vehicle Safety hotline on 1-888-327-4236 (teletypewriter TTY for the hearing impaired: 1-800-424-9153) for free, by visiting the website at [http:// www.safercar.gov](http://www.safercar.gov) or by writing to Administrator, NHTSA, 400 Seventh Street, SW., Washington, DC 20590. Further information on vehicle safety is available at [http:// www.safercar.gov](http://www.safercar.gov).

Canadian customers who wish to report a safety-related defect to Transport Canada, Defect Investigations and Recalls can call the toll-free hotline 1-800-333-0510. You can also obtain other information about motor vehicle safety from [http:// www.tc.gc.ca/roadsafety](http://www.tc.gc.ca/roadsafety).

BMW MOTORRAD SERVICE

BMW Motorrad has an extensive network of retailers in place to look after you and your motorcycle in more than 100 countries. Authorised BMW Motorrad retailers have the technical information and the technical know-how to carry out reliably all maintenance and repair work on your BMW.

You can locate the nearest authorised BMW Motorrad retailer by visiting our website: **bmw-motorrad.com**



WARNING

Maintenance and repair work not in compliance with correct procedure

Risk of accident due to consequential damage

- BMW Motorrad recommends having work of this nature carried out on the vehicle by a specialist workshop, preferably an authorised BMW Motorrad dealer.

In order to help ensure that your BMW is always in optimum condition, BMW Motorrad recommends compliance with the maintenance intervals specified for your motorcycle.

Have all maintenance and repair work carried out confirmed in the "Service" chapter in this manual. Evidence of regular maintenance is essential for generous treatment of claims submitted after the warranty period has expired.

Your authorised BMW Motorrad retailer can provide information on BMW Motorrad services and the work undertaken as part of each service.

BMW MOTORRAD SERVICE HISTORY

Entries

Maintenance work that has been carried out is entered in the proof of maintenance. The entries are like a Service Booklet and provide proof of regular maintenance.

When an entry is made in the electronic service booklet of the vehicle, service-relevant data is saved in the central IT

256 SERVICE

systems of BMW AG, Munich, Germany.

If there is a change in vehicle ownership, the data saved in the electronic service booklet can also be viewed by the new vehicle owner. A BMW Motorrad retailer or a specialist workshop can also view data that is stored in the electronic service booklet.

Objection

The vehicle owner can object to entries being made by the BMW Motorrad retailer or a specialist workshop in the electronic service booklet along with the corresponding storage of data in the vehicle and transfer of data to the vehicle manufacturer for the period of time that they are the vehicle owner. In this instance, no entry is made in the electronic service booklet of the vehicle.

BMW MOTORRAD MOBILITY SERVICES

As owner of a new BMW vehicle, in circumstances in which assistance is required you can benefit from the protection afforded by the various BMW Motorrad mobility services (e.g. Mobile

Service, breakdown service, vehicle recovery service). Your authorised BMW Motorrad retailer will be happy provide information about the mobility services available to you.

MAINTENANCE WORK

BMW pre-delivery check

Your authorised BMW Motorrad retailer conducts the BMW pre-delivery check before handing over the vehicle to you.

BMW Running-in Check

The BMW running-in check has to be performed when the motorcycle has covered between 500 km and 1200 km.

BMW MOTORRAD SERVICE

The BMW Motorrad Service is carried out once a year; the extent of servicing can vary, depending on the age of the vehicle and the distance it has covered. Your authorised BMW Motorrad retailer confirms that the service work has been carried out and enters the date when the next service will be due.

Riders who cover long distances in a year might have to bring in their vehicles for

service before the next scheduled date. It is to allow for these cases that a maximum odometer reading is entered as well in the confirmation of service. Servicing has to be brought forward if this odometer reading is reached before the next scheduled date for the service.

The service display is a service-due indicator that appears on the TFT display to remind you about one month or 1000 km in advance when the time for a service is approaching, on the basis of the programmed values.

To find out more about service go to:

bmw-motorrad.com/service

The maintenance tasks necessary for your vehicle are set out in the maintenance schedule below:

MAINTENANCE SCHEDULE

	500 -1200 km 300 - 750 mls	10 000 km 6 000 mls	20 000 km 12 000 mls	30 000 km 18 000 mls	40 000 km 24 000 mls	50 000 km 30 000 mls	60 000 km 36 000 mls	70 000 km 42 000 mls	80 000 km 48 000 mls	90 000 km 54 000 mls	100 000 km 60 000 mls	12 months	24 months
1	X												
2												X	
3		X	X	X	X	X	X	X	X	X	X	X ^a	
4				X			X			X			
5				X			X			X			
6				X			X			X			
7		X	X	X	X	X	X	X	X	X	X		
8				X			X			X			
9												X ^b	X ^b

- 1 BMW Motorrad running-in check (including oil change)
- 2 BMW Motorrad Service, standard scope
- 3 Engine-oil change, with filter
- 4 Check valve clearances
- 5 Check timing
- 6 Replace all spark plugs
- 7 Replace air-filter element
- 8 Oil change in the telescopic forks
- 9 Change brake fluid, entire system

- ^a annually or every 10000 km (whichever comes first)
- ^b for the first time after one year, then every two years

MAINTENANCE CONFIRMATIONS

BMW Service standard scope

The repair tasks in the BMW Service standard scope are listed below. The actual scope of maintenance work applicable for your vehicle may vary.

- Performing vehicle test with BMW Motorrad diagnosis system
- Visual inspection of the brake lines, brake hoses and connections
- Checking front brake pads and brake discs for wear
- Checking brake-fluid level, front wheel brake
- Checking rear brake pads and brake disc for wear
- Checking brake-fluid level, rear wheel brake
- Checking steering-head bearing
- Checking coolant level
- Checking clutch cable and clutch-lever play
- Checking and lubricating the chain drive
- Checking tyre pressure and tread depth
- Check the side stand's ease of movement
- Check lighting and signalling system
- Function test, engine start suppression
- Final inspection and check for road safety
- Setting service-due date and countdown distance with BMW Motorrad diagnosis system
- Checking battery state of charge
- Confirming BMW Motorrad service in on-board literature

260 SERVICE

BMW pre-delivery check
carried out

at _____

Stamp, signature

BMW Running-in Check
carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Stamp, signature

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

	Yes	No
BMW Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change, engine, with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Renewing air cleaner insert	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in telescopic front forks	<input type="checkbox"/>	<input type="checkbox"/>
Change brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

	Yes	No
BMW Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change, engine, with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Renewing air cleaner insert	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in telescopic front forks	<input type="checkbox"/>	<input type="checkbox"/>
Change brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

	Yes	No
BMW Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change, engine, with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Renewing air cleaner insert	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in telescopic front forks	<input type="checkbox"/>	<input type="checkbox"/>
Change brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

	Yes	No
BMW Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change, engine, with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Renewing air cleaner insert	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in telescopic front forks	<input type="checkbox"/>	<input type="checkbox"/>
Change brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

	Yes	No
BMW Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change, engine, with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Renewing air cleaner insert	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in telescopic front forks	<input type="checkbox"/>	<input type="checkbox"/>
Change brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

	Yes	No
BMW Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change, engine, with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Renewing air cleaner insert	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in telescopic front forks	<input type="checkbox"/>	<input type="checkbox"/>
Change brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

	Yes	No
BMW Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change, engine, with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Renewing air cleaner insert	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in telescopic front forks	<input type="checkbox"/>	<input type="checkbox"/>
Change brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

	Yes	No
BMW Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change, engine, with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Renewing air cleaner insert	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in telescopic front forks	<input type="checkbox"/>	<input type="checkbox"/>
Change brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

	Yes	No
BMW Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change, engine, with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Renewing air cleaner insert	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in telescopic front forks	<input type="checkbox"/>	<input type="checkbox"/>
Change brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

	Yes	No
BMW Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change, engine, with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Renewing air cleaner insert	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in telescopic front forks	<input type="checkbox"/>	<input type="checkbox"/>
Change brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

272 SERVICE

[illegible]

DECLARATION OF CONFORMITY FOR ELECTRONIC IMMOBILISER	275
CERTIFICATE FOR ELECTRONIC IMMOBILISER	281
DECLARATION OF CONFORMITY FOR KEYLESS RIDE	283
CERTIFICATE FOR KEYLESS RIDE	288
DECLARATION OF CONFORMITY FOR TYRE PRESSURE CONTROL (RDC)	292
CERTIFICATE FOR TYRE PRESSURE CONTROL (RDC)	298
DECLARATION OF CONFORMITY FOR TFT INSTRUMENT CLUSTER	299
CERTIFICATE FOR TFT INSTRUMENT CLUSTER	305
DECLARATION OF CONFORMITY FOR INTELLIGENT EMERGENCY CALL	308
DECLARATION OF CONFORMITY FOR ANTI-THEFT ALARM SYSTEM	314

Declaration of Conformity

Radio equipment electronic immobiliser (EWS)

Simplified EU Declaration of Conformity acc. Radio Equipment Directive 2014/53/EU after 12.06.2016 and during transition period



Technical information

Frequency Band: 134 kHz
(Transponder: TMS37145 /
TypeDST80, TMS3705
Transponder Base Station IC)
Output Power: 50 dBμV/m

Manufacturer and Address

Manufacturer: BECOM Electronics GmbH
Address: Technikerstraße 1,
A-7442 Hochstraß

Austria

Hiermit erklärt BECOM Electronics GmbH, dass der Funkanlagentyp EWS4 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <http://www.becom.at/de/download/>

Belgium

Le soussigné, BECOM Electronics GmbH, déclare que l'équipement radioélectrique du type EWS4 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <http://www.becom.at/de/download/>

Bulgaria

С настоящото BECOM Electronics GmbH декларира, че този тип радиосъоръжение EWS4 е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: <http://www.becom.at/de/download/>

Cyprus

Με την παρούσα ο/η BECOM Electronics GmbH, δηλώνει ότι ο ραδιοεξοπλισμός EWS4 πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <http://www.becom.at/de/download/>

Czech Republic

Tímto BECOM Electronics GmbH prohlašuje, že typ rádiového zařízení EWS4 je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

<http://www.becom.at/de/download/>

Germany

Hiermit erklärt BECOM Electronics GmbH, dass der Funkanlagentyp EWS4 der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <http://www.becom.at/de/download/>

Denmark

Hermed erklærer BECOM Electronics GmbH, at radioudstyrstypen EWS4 er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: <http://www.becom.at/de/download/>

Estonia

Käesolevaga deklareerib BECOM Electronics GmbH, et käesolev raadioseadme tüüp EWS4 vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: <http://www.becom.at/de/download/>

Spain

Por la presente, BECOM Electronics GmbH declara que el tipo de equipo radioeléctrico EWS4 es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: <http://www.becom.at/de/download/>

Finland

BECOM Electronics GmbH vakuuttaa, että radiolaitetyypin EWS4 on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutus on täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
<http://www.becom.at/de/download/>

France

Le soussigné, BECOM Electronics GmbH, déclare que l'équipement radioélectrique du type EWS4 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante : <http://www.becom.at/de/download/>

United Kingdom

Hereby, BECOM Electronics GmbH declares that the radio equipment type EWS4 is in compliance with Directive 2014/53/EU
The full text of the EU declaration of conformity is available at the following internet address: <http://www.becom.at/de/download/>

Greece

Με την παρούσα ο/η BECOM Electronics GmbH, δηλώνει ότι ο ραδιοεξοπλισμός EWS4 πληροί την οδηγία 2014/53/ΕΕ.
Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <http://www.becom.at/de/download/>

Croatia

BECOM Electronics GmbH ovime izjavljuje da je radijska oprema tipa EWS4 u skladu s Direktivom 2014/53/EU.
Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: <http://www.becom.at/de/download/>

Hungary

BECOM Electronics GmbH igazolja, hogy a EWS4 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.
Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: <http://www.becom.at/de/download/>

Ireland

Hereby, BECOM Electronics GmbH declares that the radio equipment type EWS4 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <http://www.becom.at/de/download/>

Italy

Il fabbricante, BECOM Electronics GmbH, dichiara che il tipo di apparecchiatura radio EWS4 è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: <http://www.becom.at/de/download/>

Lithuania

Aš, BECOM Electronics GmbH, patvirtinu, kad radijo įrenginių tipas EWS4 atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: <http://www.becom.at/de/download/>

Luxembourg

Le soussigné, BECOM Electronics GmbH, déclare que l'équipement radioélectrique du type EWS4 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <http://www.becom.at/de/download/>

Latvia

Ar šo BECOM Electronics GmbH deklarē, ka radioiekārta EWS4 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: <http://www.becom.at/de/download/>

Malta

B'dan, BECOM Electronics GmbH, niddikjara li dan it-tip ta' tagħmir tar-radju EWS4 huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: <http://www.becom.at/de/download/>

Netherlands

Hierbij verklaar ik, BECOM Electronics GmbH, dat het type radioapparatuur EWS4 conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: <http://www.becom.at/de/download/>

Poland

BECOM Electronics GmbH niniejszym oświadcza, że typ urządzenia radiowego EWS4 jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: <http://www.becom.at/de/download/>

Portugal

O(a) abaixo assinado(a) BECOM Electronics GmbH declara que o presente tipo de equipamento de rádio EWS4 está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: <http://www.becom.at/de/download/>

Romania

Prin prezenta, BECOM Electronics GmbH declară că tipul de echipamente radio EWS4 este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: <http://www.becom.at/de/download/>

Sweden

Härmed försäkrar BECOM Electronics GmbH att denna typ av radioutrustning EWS4 överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: <http://www.becom.at/de/download/>

Slovenia

BECOM Electronics GmbH potrjuje, da je tip radijske opreme EWS4 skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: <http://www.becom.at/de/download/>

Slovakia

BECOM Electronics GmbH týmto vyhlasuje, že rádiové zariadenie typu EWS4 je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

<http://www.becom.at/de/download/>

FCC Approval

Ring aerial in the ignition switch



To verify the authorization of the ignition key, the electronic immobilizer exchanges information with the ignition key via the ring aerial.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. ◀

Approbation de la FCC

Antenne annulaire présente dans le commutateur d'allumage



Pour vérifier l'autorisation de la clé de contact, le système d'immobilisation électronique échange des informations avec la clé de contact via l'antenne annulaire.

Le présent dispositif est conforme à la partie 15 des règles de la FCC. Son utilisation est soumise aux deux conditions suivantes :

- (1) Le dispositif ne doit pas produire d'interférences nuisibles, et
- (2) le dispositif doit pouvoir accepter toutes les interférences extérieures, y compris celles qui pourraient provoquer une activation inopportune.



Toute modification qui n'aurait pas été approuvée expressément par l'organisme responsable de l'homologation peut annuler l'autorisation accordée à l'utilisateur pour utiliser le dispositif. ◀

Declaration of Conformity

Radio equipment Keyless Ride

Simplified EU Declaration of Conformity acc. Radio Equipment Directive 2014/53/EU after 12.06.2016 and during transition period



Technical information

Frequency band: 434,42 MHz
Maximum Transmission Power:
10 mW

Manufacturer and Address

Manufacturer: Huf Hülsbeck & Fürst GmbH & Co. KG
Address: Steeger Str. 17, 42551 Velbert, Germany

Bългарски

С настоящото Huf Hülsbeck & Fürst GmbH & Co. KG декларира, че този тип радиосъоръжение HUF5750 е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: <http://www.huf-group.com/eudoc/>

Česky

Tímto Huf Hülsbeck & Fürst GmbH & Co. KG prohlašuje, že typ rádiového zařízení HUF5750 je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: <http://www.huf-group.com/eudoc>

Dansk

Hermed erklærer Huf Hülsbeck & Fürst GmbH & Co. KG, at radioudstyrstypen HUF5750 er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: <http://www.huf-group.com/eudoc>

Germany

Hiermit erklärt Huf Hülsbeck & Fürst GmbH & Co. KG, dass der Funkanlagentyp HUF5750 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <http://www.huf-group.com/eudoc>

Eesti

Käesolevaga deklareerib Huf Hülsbeck & Fürst GmbH & Co. KG, et käesolev raadioseadme tüüp HUF5750 vastab direktiivi 2014/53/EL nõuetele. Eli vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: <http://www.huf-group.com/eudoc>

English

Hereby, Huf Hülsbeck & Fürst GmbH & Co. KG declares that the radio equipment type HUF5750 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://www.huf-group.com/eudoc>

Español

Por la presente, Huf Hülsbeck & Fürst GmbH & Co. KG declara que el tipo de equipo radioeléctrico HUF5750 es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: <http://www.huf-group.com/eudoc>

Français

Le soussigné, Huf Hülsbeck & Fürst GmbH & Co. KG, déclare que l'équipement radioélectrique du type HUF5750 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <http://www.huf-group.com/eudoc>

Hrvatski

Huf Hülsbeck & Fürst GmbH & Co. KG ovime izjavljuje da je radijska oprema tipa HUF5750 u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: <http://www.huf-group.com/eudoc>

Íslenska

Hér Hülsbeck & Fürst GmbH & Co. KG að radióbúnaður gerð HUF5750 tilskipunar 2014/53/EB samsvarandi.

The fullur texti af ESB-samræmisýfirlýsing er í boði á eftirfarandi veffang: <http://www.huf-group.com/eudoc>

Italiano

Il fabbricante, Huf Hülsbeck & Fürst GmbH & Co. KG, dichiara che il tipo di apparecchiatura radio HUF5750 è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: <http://www.huf-group.com/eudoc>

Latviski

Ar šo Huf Hülsbeck & Fürst GmbH & Co. KG deklarē, ka radioiekārta HUF5750 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: <http://www.huf-group.com/eudoc>

Lietuvių

Aš, Huf Hülsbeck & Fürst GmbH & Co. KG, patvirtinu, kad radijo įrenginių tipas HUF5750 atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: <http://www.huf-group.com/eudoc>

Magyar

Huf Hülsbeck & Fürst GmbH & Co. KG igazolja, hogy a HUF5750 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: <http://www.huf-group.com/eudoc>

Malti

B'dan, Huf Hülsbeck & Fürst GmbH & Co. KG, niddikjara li dan it-tip ta' tagħmir tar-radju HUF5750 huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: <http://www.huf-group.com/eudoc>

Nederlands

Hierbij verklaar ik, Huf Hülsbeck & Fürst GmbH & Co. KG, dat het type radioapparatuur HUF5750 conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: <http://www.huf-group.com/eudoc>

Norsk

Herved Huf Hülsbeck & Fürst GmbH & Co. KG at radioustyrstype HUF5750 i direktiv 2014/53/EU tilsvarende. Den fullstendige teksten i EU-erklæring er tilgjengelig på følgende internettsadresse: <http://www.huf-group.com/eudoc>

Polski

Huf Hülsbeck & Fürst GmbH & Co. KG niniejszym oświadcza, że typ urządzenia radiowego HUF5750 jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: <http://www.huf-group.com/eudoc>

Português

O(a) abaixo assinado(a) Huf Hülsbeck & Fürst GmbH & Co. KG declara que o presente tipo de equipamento de rádio HUF5750 está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: <http://www.huf-group.com/eudoc>

Românesc

Prin prezenta, Huf Hülsbeck & Fürst GmbH & Co. KG declară că tipul de echipamente radio HUF5750 este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: <http://www.huf-group.com/eudoc>

Slovensko

Huf Hülsbeck & Fürst GmbH & Co. KG potrjuje, da je tip radijske opreme HUF5750 skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: <http://www.huf-group.com/eudoc>

Slovensky

Huf Hülsbeck & Fürst GmbH & Co. KG týmto vyhlasuje, že rádiové zariadenie typu HUF5750 je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: <http://www.huf-group.com/eudoc>

Suomi

Huf Hülsbeck & Fürst GmbH & Co. KG vakuuttaa, että radiolaitetyyppi HUF5750 on direktiivin 2014/53/EU mukainen. EU-

vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: <http://www.huf-group.com/eudoc>

Svenska

Härmed försäkrar Huf Hülsbeck & Fürst GmbH & Co. KG att denna typ av radioutrustning HUF5750 överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: <http://www.huf-group.com/eudoc>

Ελληνική

Με την παρούσα ο/η Huf Hülsbeck & Fürst, δηλώνει ότι ο ραδιοεξοπλισμός HUF5750 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <http://www.huf-group.com/eudoc>

Certifications

BMW Keyless Ride ID Device



USA, Canada:

Product name: BMW Keyless Ride ID
Device FCC ID: YGOHUF5750
IC: 4008C-HUF5750



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Canada:

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

USA:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Argentina:

CNC COMISIÓN NACIONAL
DE COMUNICACIONES

H-17115

Declaration Of Conformity

We declare under our responsibility that the product

BMW Keyless Ride ID Device (Model: HUF5750)

complies with the appropriate essential requirements of the article 3 of the R&TIE and the other relevant provisions, when used for its intended purpose. Applied Standards:

1. Health and safety requirements contained in article 3 (1) a)
 - EN 60950-1:2006+A11:2009+A1:2010+A12:2011; Information technology equipment-Safety
2. Protection requirements with respect to electromagnetic compatibility article 3 (1) b)
 - EN 301 489-1 (V1 .9.2, 09/2011), Electromagnetic compatibility and radio spectrum matters (ERM); Electromagnetic compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements
 - EN 301 489-3 (V1.4.1, 08/2002) Electromagnetic compatibility and radio spectrum matters (ERM); Electromagnetic compatibility (EMC) standard for radio equipment and services; Part 3: Specific conditions for short range devices (SRD) operating on frequencies between 9 kHz and 40 GHz
3. Means of the efficient use of the radio frequency spectrum article 3 (2)
 - EN 300 220-1 & -2 (V2.4.1, 05/2012), electromagnetic compatibility and radio spectrum matters (ERM); Short range devices (SRD); Radio equipment to be used in the 25 MHz to 1000 MHz frequency range with power levels ranging up to 500 mW; Part 1: Technical characteristics and test methods. Part 2: Harmonized EN covering essential requirements under article 3.2 of the R&TIE directive

The product is labeled with the CE marking:



Velbert, October 15th, 2013

A handwritten signature in black ink, appearing to read 'Ben A. Müller', is written over a horizontal line.

Benjamin A. Müller

Product Development Systems
Car Access and Immobilization -
Electronics Huf Hülsbeck & Fürst
GmbH & Co. KG
Steegeer Straße 17, D-42551
Velbert

Declaration of Conformity

Radio equipment tyre pressure control (RDC)

Simplified EU Declaration of Conformity acc. Radio Equipment Directive 2014/53/EU after 12.06.2016 and during transition period



Technical information

Frequency Band: 433.895 - 433.945 MHz
Output Power: <10 mW e.r.p.

Manufacturer and Address

Manufacturer: Schrader Electronics Ltd.
Address: Technology Park, Antrim, N. Ireland BT41 1QS,
United Kingdom

Austria

Hiermit erklärt Schrader Electronics Ltd., dass der Funkanlagentyp BC5A4 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:
http://www.tpmseuroshop.com/documents/declaration_conformities

Belgium

Le soussigné, Schrader Electronics Ltd., déclare que l'équipement radioélectrique du type BC5A4 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
http://www.tpmseuroshop.com/documents/declaration_conformities

Cyprus

Με την παρούσα ο/η Schrader Electronics Ltd., δηλώνει ότι ο ραδιοεξοπλισμός BC5A4 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:
http://www.tpmseuroshop.com/documents/declaration_conformities

Czech Republic

Tímto Schrader Electronics Ltd. prohlašuje, že typ rádiového zařízení BC5A4 je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:
http://www.tpmseuroshop.com/documents/declaration_conformities

Germany

Hiermit erklärt Schrader Electronics Ltd., dass der Funkanlagentyp BC5A4 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:
http://www.tpmseuroshop.com/documents/declaration_conformities

Denmark

Hermed erklærer Schrader Electronics Ltd., at radioudstyrstypen BC5A4 er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:
http://www.tpmseuroshop.com/documents/declaration_conformities

Estonia

Käesolevaga deklareerib Schrader Electronics Ltd., et käesolev raadioseadme tüüp BC5A4 vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:
http://www.tpmseuroshop.com/documents/declaration_conformities

Spain

Por la presente, Schrader Electronics Ltd. declara que el tipo de equipo radioeléctrico BC5A4 es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:
http://www.tpmseuroshop.com/documents/declaration_conformities

Finland

Schrader Electronics Ltd.
vakuuttaa, että radiolaitetyyppi
BC5A4 on direktiivin 2014/53/EU
mukainen.

EU-
vaatimustenmukaisuusvakuutukse
n täysimittainen teksti on saatavilla
seuraavassa internetosoitteessa:
[http://www.tpmseuroshop.com/
documents/
declaration_conformities](http://www.tpmseuroshop.com/documents/declaration_conformities)

France

Le soussigné, Schrader
Electronics Ltd., déclare que
l'équipement radioélectrique du
type BC5A4 est conforme à la
directive 2014/53/UE.
Le texte complet de la déclaration
UE de conformité est disponible à
l'adresse internet suivante:
[http://www.tpmseuroshop.com/
documents/
declaration_conformities](http://www.tpmseuroshop.com/documents/declaration_conformities)

United Kingdom

Hereby, Schrader Electronics Ltd.
declares that the radio equipment
type BC5A4 is in compliance with
Directive 2014/53/EU.
The full text of the EU declaration
of conformity is available at the
following internet address: [http://
www.tpmseuroshop.com/
documents/
declaration_conformities](http://www.tpmseuroshop.com/documents/declaration_conformities)

Greece

Με την παρούσα ο/η Schrader
Electronics Ltd., δηλώνει ότι ο
ραδιοεξοπλισμός BC5A4 πληροί
την οδηγία 2014/53/ΕΕ.
Το πλήρες κείμενο της δήλωσης
συμμόρφωσης ΕΕ διατίθεται στην
ακόλουθη ιστοσελίδα στο
διαδίκτυο:
[http://www.tpmseuroshop.com/
documents/
declaration_conformities](http://www.tpmseuroshop.com/documents/declaration_conformities)

Croatia

Schrader Electronics Ltd. ovime
izjavljuje da je radijska oprema
tipa BC5A4 u skladu s Direktivom
2014/53/EU.
Cjeloviti tekst EU izjave o
sukladnosti dostupan je na
sljedećoj internetskoj adresi:
[http://www.tpmseuroshop.com/
documents/
declaration_conformities](http://www.tpmseuroshop.com/documents/declaration_conformities)

Hungary

Schrader Electronics Ltd. igazolja,
hogy a BC5A4 típusú
rádióberendezés megfelel a
2014/53/EU irányelvnek.
Az EU-megfelelőségi nyilatkozat
teljes szövege elérhető a
következő internetes címen:
[http://www.tpmseuroshop.com/
documents/
declaration_conformities](http://www.tpmseuroshop.com/documents/declaration_conformities)

Ireland

Hereby, Schrader Electronics Ltd. declares that the radio equipment type BC5A4 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: http://www.tpmseuroshop.com/documents/declaration_conformities

Italy

Il fabbricante, Schrader Electronics Ltd., dichiara che il tipo di apparecchiatura radio BC5A4 è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://www.tpmseuroshop.com/documents/declaration_conformities

Lithuania

Aš, Schrader Electronics Ltd., patvirtinu, kad radijo įrenginių tipas BC5A4 atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://www.tpmseuroshop.com/documents/declaration_conformities

Luxembourg

Le soussigné, Schrader Electronics Ltd., déclare que l'équipement radioélectrique du type BC5A4 est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://www.tpmseuroshop.com/documents/declaration_conformities

Latvia

Ar šo Schrader Electronics Ltd. deklarē, ka radioiekārta BC5A4 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://www.tpmseuroshop.com/documents/declaration_conformities

Malta

B'dan, Schrader Electronics Ltd., niddikjara li dan it-tip ta' tagħmir tar-radju BC5A4 huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://www.tpmseuroshop.com/documents/declaration_conformities

Netherlands

Hierbij verklaar ik, Schrader Electronics Ltd., dat het type radioapparatuur BC5A4 conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://www.tpmseuroshop.com/documents/declaration_conformities

Poland

Schrader Electronics Ltd. niniejszym oświadcza, że typ urządzenia radiowego BC5A4 jest zgodny z dyrektywą 2014/53/EU. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://www.tpmseuroshop.com/documents/declaration_conformities

Portugal

O(a) abaixo assinado(a) Schrader Electronics Ltd. declara que o presente tipo de equipamento de rádio BC5A4 está em conformidade com a Diretiva 2014/53/EU. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://www.tpmseuroshop.com/documents/declaration_conformities

Romania

Prin prezenta, Schrader Electronics Ltd. declară că tipul de echipamente radio BC5A4 este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://www.tpmseuroshop.com/documents/declaration_conformities

Sweden

Härmed försäkrar Schrader Electronics Ltd. att denna typ av radioutrustning BC5A4 överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://www.tpmseuroshop.com/documents/declaration_conformities

Slovenia

Schrader Electronics Ltd. potrjuje, da je tip radijske opreme BC5A4 skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: http://www.tpmseuroshop.com/documents/declaration_conformities

Slovakia

Schrader Electronics Ltd. týmto vyhlasuje, že rádiové zariadenie typu BC5A4 je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

[http://www.tpmseuroshop.com/
documents/
declaration_conformities](http://www.tpmseuroshop.com/documents/declaration_conformities)

Bulgaria

С настоящото Schrader Electronics Ltd. декларира, че този тип радиосъоръжение BC5A4 е в съответствие с Директива 2014/53/ЕС.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:

[http://www.tpmseuroshop.com/
documents/
declaration_conformities](http://www.tpmseuroshop.com/documents/declaration_conformities)

Certification Tire Pressure Control (TPC)

FCC ID: MRXBC54MA4
IC: 2546A-BC54MA4

FCC ID: MRXBC5A4
IC: 2546A-BC5A4

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Declaration of Conformity

Radio equipment TFT instrument cluster

Simplified EU Declaration of Conformity acc. Radio Equipment Directive 2014/53/EU after 12.06.2016 and during transition period



Technical information

BT operating frq. Range:
2402 – 2480 MHz
BT version: 4.2 (no BTLE)
BT output power: < 4 dBm
WLAN operating frq. Range:
2412 – 2462 MHz
WLAN standards:
IEEE 802.11 b/g/n
WLAN output power: < 20 dBm

Manufacturer and Address

Manufacturer:
Robert Bosch Car Multimedia GmbH
Address: Robert Bosch Str. 200,
31139 Hildesheim, GERMANY

Austria

Hiermit erklärt Robert Bosch Car Multimedia GmbH, dass der Funkanlagentyp ICC6.5in der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <http://cert.bosch-carmultimedia.net>

Belgium

Le soussigné, Robert Bosch Car Multimedia GmbH, déclare que l'équipement radioélectrique du type ICC6.5in est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <http://cert.bosch-carmultimedia.net>

Bulgaria

С настоящото Robert Bosch Car Multimedia GmbH декларира, че този тип радиосъоръжение ICC6.5in е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: <http://cert.bosch-carmultimedia.net>

Cyprus

Με την παρούσα ο/η Robert Bosch Car Multimedia GmbH, δηλώνει ότι ο ραδιοεξοπλισμός ICC6.5in πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <http://cert.bosch-carmultimedia.net>

Czech Republic

Tímto Robert Bosch Car Multimedia GmbH prohlašuje, že typ rádiového zařízení ICC6.5in je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: <http://cert.bosch-carmultimedia.net>

Germany

Hiermit erklärt Robert Bosch Car Multimedia GmbH, dass der Funkanlagentyp ICC6.5in der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <http://cert.bosch-carmultimedia.net/>

Denmark

Hermed erklærer Robert Bosch Car Multimedia GmbH, at radioudstyrstypen ICC6.5in er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: <http://cert.bosch-carmultimedia.net>

Estonia

Käesolevaga deklareerib Robert Bosch Car Multimedia GmbH, et käesolev raadioseadme tüüp ICC6.5in vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: <http://cert.bosch-carmultimedia.net>

Spain

Por la presente, Robert Bosch Car Multimedia GmbH declara que el tipo de equipo radioeléctrico ICC6.5in es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: <http://cert.bosch-carmultimedia.net>

Finland

Robert Bosch Car Multimedia GmbH vakuuttaa, että radiolaitetyyppi ICC6.5in on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutukseen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: <http://cert.bosch-carmultimedia.net>

France

Le soussigné, Robert Bosch Car Multimedia GmbH, déclare que l'équipement radioélectrique du type ICC6.5in est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <http://cert.bosch-carmultimedia.net>

United Kingdom

Hereby, Robert Bosch Car Multimedia GmbH declares that the radio equipment type ICC6.5in is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://cert.bosch-carmultimedia.net>

Greece

Με την παρούσα ο/η Robert Bosch Car Multimedia GmbH, δηλώνει ότι ο ραδιοεξοπλισμός ICC6.5in πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <http://cert.bosch-carmultimedia.net>

Croatia

Robert Bosch Car Multimedia GmbH ovime izjavljuje da je radijska oprema tipa ICC6.5in u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: <http://cert.bosch-carmultimedia.net>

Hungary

Robert Bosch Car Multimedia GmbH igazolja, hogy a ICC6.5in típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: <http://cert.bosch-carmultimedia.net>

Ireland

Hereby, Robert Bosch Car Multimedia GmbH declares that the radio equipment type ICC6.5in is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://cert.bosch-carmultimedia.net>

Italy

Il fabbricante, Robert Bosch Car Multimedia GmbH, dichiara che il tipo di apparecchiatura radio ICC6.5in è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: <http://cert.bosch-carmultimedia.net>

Lithuania

Aš, Robert Bosch Car Multimedia GmbH, patvirtinu, kad radijo įrenginių tipas ICC6.5in atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: <http://cert.bosch-carmultimedia.net>

Luxembourg

Le soussigné, Robert Bosch Car Multimedia GmbH, déclare que l'équipement radioélectrique du type ICC6.5in est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <http://cert.bosch-carmultimedia.net>

Latvia

Ar šo Robert Bosch Car Multimedia GmbH deklarē, ka radioiekārta ICC6.5in atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: <http://cert.bosch-carmultimedia.net>

Malta

B'dan, Robert Bosch Car Multimedia GmbH, niddikjara li dan it-tip ta' tagħmir tar-radju ICC6.5in huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: <http://cert.bosch-carmultimedia.net>

Netherlands

Hierbij verklaar ik, Robert Bosch Car Multimedia GmbH, dat het type radioapparatuur ICC6.5in conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: <http://cert.bosch-carmultimedia.net>

Poland

Robert Bosch Car Multimedia GmbH niniejszym oświadcza, że typ urządzenia radiowego ICC6.5in jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: <http://cert.bosch-carmultimedia.net>

Portugal

O(a) abaixo assinado(a) Robert Bosch Car Multimedia GmbH declara que o presente tipo de equipamento de rádio ICC6.5in está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: <http://cert.bosch-carmultimedia.net>

Romania

Prin prezenta, Robert Bosch Car Multimedia GmbH declară că tipul de echipamente radio ICC6.5in este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: <http://cert.bosch-carmultimedia.net>

Sweden

Härmed försäkrar Robert Bosch Car Multimedia GmbH att denna typ av radioutrustning ICC6.5in överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: <http://cert.bosch-carmultimedia.net>

Slovenia

Robert Bosch Car Multimedia GmbH potrjuje, da je tip radijske opreme ICC6.5in skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: <http://cert.bosch-carmultimedia.net>

Slovakia

Robert Bosch Car Multimedia
GmbH týmto vyhlasuje, že rádiové
zariadenie typu ICC6.5in je v
súlade so smernicou 2014/53/EÚ.
Úplné EÚ vyhlásenie o zhode je k
dispozícii na tejto internetovej
adrese: [http://cert.bosch-
carmultimedia.net](http://cert.bosch-carmultimedia.net)

Declaration of Conformity

Radio equipment TFT instrument cluster

For all Countries without EU

Technical information

BT operating frq. Range:

2402 – 2480 MHz

BT version: 4.2 (no BTLE)

BT output power: < 4 dBm

WLAN operating frq. Range:

2412 – 2462 MHz

WLAN standards:

IEEE 802.11 b/g/n

WLAN output power: < 20 dBm

Manufacturer and Address

Manufacturer:

Robert Bosch Car Multimedia GmbH

Address: Robert Bosch Str. 200,
31139 Hildesheim, GERMANY

Turkey

Robert Bosch Car Multimedia

GmbH, ICC6.5in tipi telsiz

sisteminin 2014/53/EU

nolu yönetmeliğe uygun olduğunu

beyan eder. AB Uygunluk

Beyanı'nın tam metni, aşağıdaki

internet adresinden görülebilir:

[http://cert.bosch-](http://cert.bosch-carmultimedia.net)

[carmultimedia.net](http://cert.bosch-carmultimedia.net)

Brazil

Este equipamento opera em caráter secundário, isto é, não tem direito a proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário.

Canada

This device complies with Industry Canada's licence-exempt RSSs and part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Korea

적합성평가에 관한 고시
R-CMM-RBR-ICC65IN
상호 : Robert Bosch Car
Multimedia GmbH모델명 :
ICC6.5in
기자재명칭 : 특정소출력 무선기기
(무선데이터통신시스템용 무선기기)
제조사 및 제조국가 : Robert
Bosch Car Multimedia GmbH /
포르투갈
제조년월 : 제조년월로 표기
이 기기는 업무용 환경에서 사용
할 목적으로 적합성평가를 받은
기기로서 가정용 환경에
서 사용하는 경우 전파간섭의 우
려가 있습니다.

Mexico

La operación de este equipo está sujeta a las siguientes dos condiciones:

- (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y
- (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Taiwan, Republic of

根據 NCC 低功率電波輻射性電機
管理辦法 規定: 第十二條
經型式認證合格之低功率射頻電
機, 非經許可, 公司、商號或使用
者均不得擅自變更頻率、加大功率
或變更原設計之特性及功能。
第十四條
低功率射頻電機之使用不得影響飛
航安全及干擾合法通信; 經發現有
干擾現象時, 應立即停用, 並改善
至無干擾時方得繼續使用。
前項合法通信,
指依電信法規定作業之無線電通
信。
低功率射頻電機須忍受合法通信或
工業、科學及醫療用電波輻射性電
機設備之干擾。

Thailand

เครื่องโทรคมนาคมและอุปกรณ์นี้

มีความสอดคล้องตามข้อกำหนดของ กทช.

(This telecommunication equipments is in compliance with NTC requirements)

United States (USA)

This device complies with Industry Canada's licence-exempt RSSs and part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Declaration of Conformity

Radio equipment intelligent emergency call

Simplified EU Declaration of Conformity acc. Radio Equipment Directive 2014/53/EU after 12.06.2016 and during transition period



Technical information

Antenna internal:
Frequency Band: 880 MHz - 915 MHz
Radiated Power [TRP]: < 22 dBm
Not accessible by user:
Frequency Band:
1710 MHz - 1785 MHz
Radiated Power [TRP]: < 26 dBm
Frequency Band:
1920 MHz - 1980 MHz
Radiated Power [TRP]: < 22 dBm
Frequency Band:
880 MHz - 915 MHz
Radiated Power [TRP]: < 23 dBm

Manufacturer and Address

Manufacturer:
Robert Bosch Car Multimedia GmbH
Address: Robert Bosch Str. 200,
31139 Hildesheim, GERMANY

Austria

Hiermit erklärt Robert Bosch Car Multimedia GmbH, dass der Funkanlagentyp TPM E-CALL EU der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <http://cert.bosch-carmultimedia.net/>

Belgium

Le soussigné, Robert Bosch Car Multimedia GmbH, déclare que l'équipement radioélectrique du type TPM E-CALL EU est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <http://cert.bosch-carmultimedia.net>

Bulgaria

С настоящото Robert Bosch Car Multimedia GmbH декларира, че този тип радиосъоръжение TPM E-CALL EU е в съответствие с Директива 2014/53/ЕС.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: <http://cert.bosch-carmultimedia.net/>

Cyprus

Με την παρούσα ο/η Robert Bosch Car Multimedia GmbH, δηλώνει ότι ο ραδιοεξοπλισμός TPM E-CALL EU πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <http://cert.bosch-carmultimedia.net/>

Czech Republic

Tímto Robert Bosch Car Multimedia GmbH prohlašuje, že typ rádiového zařízení TPM E-CALL EU je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: <http://cert.bosch-carmultimedia.net>

Germany

Hiermit erklärt Robert Bosch Car Multimedia GmbH, dass der Funkanlagentyp TPM E-CALL EU der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <http://cert.bosch-carmultimedia.net>

Denmark

Hermed erklærer Robert Bosch Car Multimedia GmbH, at radioudstyrstypen TPM E-CALL EU er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: <http://cert.bosch-carmultimedia.net>

Estonia

Käesolevaga deklareerib Robert Bosch Car Multimedia GmbH, et käesolev raadioseadme tüüp TPM E-CALL EU vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: <http://cert.bosch-carmultimedia.net>

Spain

Por la presente, Robert Bosch Car Multimedia GmbH declara que el tipo de equipo radioeléctrico TPM E-CALL EU es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: <http://cert.bosch-carmultimedia.net>

Finland

Robert Bosch Car Multimedia GmbH vakuuttaa, että radiolaitetyyppi TPM E-CALL EU on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutukseen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: <http://cert.bosch-carmultimedia.net>

France

Le soussigné, Robert Bosch Car Multimedia GmbH, déclare que l'équipement radioélectrique du type TPM E-CALL EU est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <http://cert.bosch-carmultimedia.net>

United Kingdom

Hereby, Robert Bosch Car Multimedia GmbH declares that the radio equipment type TPM E-CALL EU is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <http://cert.bosch-carmultimedia.net>

Greece

Με την παρούσα ο/η Robert Bosch Car Multimedia GmbH, δηλώνει ότι ο ραδιοεξοπλισμός TPM E-CALL EU πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <http://cert.bosch-carmultimedia.net>

Croatia

Robert Bosch Car Multimedia GmbH ovime izjavljuje da je radijska oprema tipa TPM E-CALL EU u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: <http://cert.bosch-carmultimedia.net>

Hungary

Robert Bosch Car Multimedia GmbH igazolja, hogy a TPM E-CALL EU típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: <http://cert.bosch-carmultimedia.net>

Ireland

Hereby, Robert Bosch Car Multimedia GmbH declares that the radio equipment type TPM E-CALL EU is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <http://cert.bosch-carmultimedia.net>

Italy

Il fabbricante, Robert Bosch Car Multimedia GmbH, dichiara che il tipo di apparecchiatura radio TPM E-CALL EU è conforme al direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: <http://cert.bosch-carmultimedia.net>

Lithuania

Aš, Robert Bosch Car Multimedia GmbH, patvirtinu, kad radijo įrenginių tipas TPM E-CALL EU atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: <http://cert.bosch-carmultimedia.net>

Luxembourg

Le soussigné, Robert Bosch Car Multimedia GmbH, déclare que l'équipement radioélectrique du type TPM E-CALL EU est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <http://cert.bosch-carmultimedia.net>

Latvia

Ar šo Robert Bosch Car Multimedia GmbH deklarē, ka radioiekārta TPM E-CALL EU atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: <http://cert.bosch-carmultimedia.net>

Malta

B'dan, Robert Bosch Car Multimedia GmbH, niddikjara li dan it-tip ta' tagħmir tar-radju TPM E-CALL EU huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: <http://cert.bosch-carmultimedia.net>

Netherlands

Hierbij verklaar ik, Robert Bosch Car Multimedia GmbH, dat het type radioapparaat TPM E-CALL EU conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: <http://cert.bosch-carmultimedia.net>

Poland

Robert Bosch Car Multimedia GmbH niniejszym oświadczam, że typ urządzenia radiowego TPM E-CALL EU jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: <http://cert.bosch-carmultimedia.net>

Portugal

O(a) abaixo assinado(a) Robert Bosch Car Multimedia GmbH declara que o presente tipo de equipamento de rádio TPM E-CALL EU está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: <http://cert.bosch-carmultimedia.net>

Romania

Prin prezenta, Robert Bosch Car Multimedia GmbH declară că tipul de echipamente radio TPM E-CALL EU este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: <http://cert.bosch-carmultimedia.net>

Sweden

Härmed försäkrar Robert Bosch Car Multimedia GmbH att denna typ av radioutrustning TPM E-CALL EU överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: <http://cert.bosch-carmultimedia.net>

Slovenia

Robert Bosch Car Multimedia GmbH potrjuje, da je tip radijske opreme TPM E-CALL EU skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: <http://cert.bosch-carmultimedia.net>

Slovakia

Robert Bosch Car Multimedia GmbH týmto vyhlasuje, že rádiové zariadenie typu TPM E-CALL EU je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: <http://cert.bosch-carmultimedia.net>

Declaration of Conformity

Radio equipment anti-theft alarm (DWA)

Simplified EU Declaration of Conformity acc. Radio Equipment Directive 2014/53/EU after 12.06.2016 and during transition period



Technical information

Frequency Band:

433.05-434.79 MHz

Output Power: 10 mW e.r.p.

Manufacturer and Address

Manufacturer: Meta System S.p.A.

Address: Via Galimberti 5 42124
Reggio Emilia - Italy

Austria

Hiermit erklärt Meta System S.p.A., dass der Funkanlagentyp TXBMWMR der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <https://docs.metasystem.it/>

Belgium

Le soussigné, Meta System S.p.A., déclare que l'équipement radioélectrique du type TXBMWMR est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <https://docs.metasystem.it/>

Bulgaria

С настоящото Meta System S.p.A. декларира, че този тип радиосъоръжение TXBMWMR е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: <https://docs.metasystem.it/>

Cyprus

Με την παρούσα ο/η Meta System S.p.A., δηλώνει ότι ο ραδιοεξοπλισμός TXBMWMR πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <https://docs.metasystem.it/>

Czech Republic

Tímto Meta System S.p.A. prohlašuje, že typ rádiového zařízení TXBMWMR je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: <https://docs.metasystem.it/>

Germany

Hiermit erklärt Meta System S.p.A., dass der Funkanlagentyp TXBMWMR der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <https://docs.metasystem.it/>

Denmark

Hermed erklærer Meta System S.p.A., at radioudstyrstypen TXBMWMR er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: <https://docs.metasystem.it/>

Estonia

Käesolevaga deklareerib Meta System S.p.A., et käesolev raadioseadme tüüp TXBMWMR vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: <https://docs.metasystem.it/>

Spain

Por la presente, Meta System S.p.A. declara que el tipo de equipo radioeléctrico TXBMWMR es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: <https://docs.metasystem.it/>

Finland

Meta System S.p.A. vakuuttaa, että radiolaitetyyppi TXBMWMR on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: <https://docs.metasystem.it/>

France

Le soussigné, Meta System S.p.A., déclare que l'équipement radioélectrique du type TXBMWMMR est conforme à la directive 2014/53/EU.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante : <https://docs.metasystem.it/>

United Kingdom

Hereby, Meta System S.p.A. declares that the radio equipment type TXBMWMMR is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://docs.metasystem.it/>

Greece

Με την παρούσα ο/η Meta System S.p.A., δηλώνει ότι ο ραδιοεξοπλισμός TXBMWMMR πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <https://docs.metasystem.it/>

Croatia

Meta System S.p.A. ovime izjavljuje da je radijska oprema tipa TXBMWMMR u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: <https://docs.metasystem.it/>

Hungary

Meta System S.p.A. igazolja, hogy a TXBMWMMR típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: <https://docs.metasystem.it/>

Ireland

Hereby, Meta System S.p.A. declares that the radio equipment type TXBMWMMR is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://docs.metasystem.it/>

Italy

Il fabbricante, Meta System S.p.A., dichiara che il tipo di apparecchiatura radio TXBMWMMR è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: <https://docs.metasystem.it/>

Lithuania

Aš, Meta System S.p.A., patvirtinu, kad radijo įrenginių tipas TXBMWMR atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: <https://docs.metasystem.it/>

Luxembourg

Le soussigné, Meta System S.p.A., déclare que l'équipement radioélectrique du type TXBMWMR est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <https://docs.metasystem.it/>

Latvia

Ar šo Meta System S.p.A. deklarē, ka radioiekārta TXBMWMR atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: <https://docs.metasystem.it/>

Malta

B'dan, Meta System S.p.A., niddikjara li dan it-tip ta' tagħmir tar-radju TXBMWMR huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: <https://docs.metasystem.it/>

Netherlands

Hierbij verklaar ik, Meta System S.p.A., dat het type radioapparatuur TXBMWMR conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: <https://docs.metasystem.it/>

Poland

Meta System S.p.A. niniejszym oświadcza, że typ urządzenia radiowego TXBMWMR jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: <https://docs.metasystem.it/>

Portugal

O(a) abaixo assinado(a) Meta System S.p.A. declara que o presente tipo de equipamento de rádio TXBMWMR está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: <https://docs.metasystem.it/>

Romania

Prin prezenta, Meta System S.p.A. declară că tipul de echipamente radio TXBMWMR este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: <https://docs.metasystem.it/>

Sweden

Härmed försäkrar Meta System S.p.A. att denna typ av radioutrustning TXBMWMR överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: <https://docs.metasystem.it/>

Slovenia

Meta System S.p.A. potrjuje, da je tip radijske opreme TXBMWMR skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: <https://docs.metasystem.it/>

Slovakia

Meta System S.p.A. týmto vyhlasuje, že rádiové zariadenie typu TXBMWMR je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: <https://docs.metasystem.it/>

320 INDEX

A

Abbreviations and symbols, 4

ABS

Engineering details, 168

Self-diagnosis, 135

Status indicators, 51

Accessories

Connector for optional accessories, 226

general notes, 226

M Cover Kit, 161

Adaptive Headlight, 182

Engineering details, 182

Ambient temperature

Outside temperature

warning, 38

Reading, 38

Anti-theft alarm

Indicator light, 24

operating, 86

Warning light, 43

B

Battery

charging, 219

connecting to motor-cycle, 218

disconnecting from

motorcycle, 217

Indicator light for vehicle

voltage, 39, 40

installing, 219

Maintenance instructions, 216

Position on the vehicle, 20

removing, 219

Technical data, 248

Best-ever lap, 152

Bluetooth, 103

Pairing, 104

Brake fluid

Checking fluid level,
front, 193

Checking fluid level, rear, 194

Reservoir, front, 19

Reservoir, rear, 19

Brake pads

checking front, 191

checking rear, 192

Running in, 136

Brakes

ABS Pro, 171

ABS Pro depending on riding
mode, 140

Adjusting handlebar
levers, 117

Checking operation, 190

Dynamic Brake Control
depending on riding

mode, 140

Safety information, 138

Technical data, 246

C

Care

Chrome, 234

Paintwork preservation, 235

Chain

Adjusting sag, 209

Checking tension, 208

Checking wear, 210

Lubricating, 207

Chassis and suspension

Technical data, 245

Check control

Dialogue, 31

Display, 31

Checklist, 132

Clock

adjusting, 102

Clutch
 Adjusting handlebar levers, 118
 Adjusting play, 196
 Checking operation, 195
 Checking play, 196
 Technical data, 244

Coolant
 Checking fill level, 197
 Indicator light for overheating, 43
 Technical data, 243

Cruise control, 21
 operating, 80

Currency, 6

D

Damping, 76, 77
 Adjuster, front, 18
 Adjuster, rear, 18
 adjusting, 124
 adjusting, without DDC, 125

Daytime riding lights
 automatic daytime riding light, 72
 manual daytime riding light, 71

DDC
 Engineering details, 174
 operating, 75

Diagnostic connector
 disengaging, 221
 securing, 222

Dimensions
 Technical data, 249

Drop sensor
 Indicator light, 50

DTC, 21
 Engineering details, 172
 Indicator light, 53

operating, 74
 Self-diagnosis, 135
 switching off, 74
 switching on, 75

DWA, 43
 Technical data, 249

Dynamic Brake Control, 177
 Engineering details, 177

Dynamic engine brake control, 173

E

Electrical system
 Technical data, 248

Emergency call, 162, 163
 Automatically in the event of a light fall, 69
 Automatically in the event of a severe fall, 70
 Button, 22
 deactivating, 153
 Language, 68
 manual, 68
 Notes, 11
 operating, 68

Emergency off switch (kill switch), 22, 23
 operating, 67

Engine, 44
 Indicator light for engine control unit, 45
 Indicator light for engine electronics, 45
 parking, 63
 starting, 133
 Technical data, 243
 Warning light, drive malfunction, 44

322 INDEX

Engine oil

- Checking fill level, 189
- Filler neck, 19
- Fill-level indicator, 19
- Technical data, 243
- topping up, 190

Equipment, 5

F

Final drive

- Technical data, 245

Frame

- Technical data, 245

Front-wheel stand

- installing, 188

Fuel

- Fuel grade, 141
- refuelling, 142
- Technical data, 242

Fuel reserve

- Range, 101
- Warning light, 55

Fuses

- Position on the vehicle, 20
- replacing, 220
- Technical data, 248

G

General views

- Indicator and warning lights, 28
- Instrument cluster, 24
- Left multifunction switch, 21
- left side of vehicle, 18
- My vehicle, 106
- Right multifunction switch, 22, 23
- right side of vehicle, 19
- TFT display, 29, 30
- Under the rider's seat, 20

H

Hazard warning flashers

- Control, 21
- operating, 70

Headlight

- Adjustment for right-hand/left-hand traffic, 116
- Headlight beam throw and spring preload, 116

Headlight courtesy delay

- feature, 70

Heated handlebar grips

- Control, 22, 23
- operating, 89

Hill Start Control, 83, 181

- cannot be activated, 56
- Engineering details, 181
- Indicator and warning lights, 55, 56
- operating, 83
- switching on and off, 83

Hill Start Control Pro

- adjusting, 85
- Engineering details, 181
- operating, 84

Horn, 21

I

Ignition

- switching off, 63
- switching on, 62

Immobiliser

- Spare key, 66

Indicator lights, 24

- Overview, 28

Instrument cluster

- Ambient-light brightness sensor, 24
- Overview, 24

J

Jump-starting, 215

K

Keyless Ride, 39

Locking the steering lock, 63

Loss of the radio-operated key, 65

Switching off ignition, 64

Switching on ignition, 64

Warning, 38, 39

Keys, 62, 63

L

Laptimer

adjusting, 151

Ending timing, 151

operating, 151

Starting timing, 151

Launch control, 153

Racing start, 154

Light warnings

deactivating, 153

Lighting

Indicator light for faulty bulb, 41

Replacing LED light

sources, 210

Technical data, 249

Lights

Adaptive Headlight, 182

automatic daytime riding light, 72

Control, 21

Headlight courtesy delay feature, 70

Headlight flasher, operating, 70

High-beam headlight, operating, 70

Low-beam headlight, 70

manual daytime riding light, 71

Parking lights, 71

Side light, 70

Luggage

Instructions for loading, 130

M

Maintenance

Maintenance schedule, 258

Maintenance confirmations, 259

Maintenance intervals, 256

Media

operating, 111

Menu

calling up, 98

Mirrors

adjusting, 116

Removing and installing, 165

Mobility services, 256

Motorcycle

care, 230

cleaning, 230

laying up, 235

parking, 141

restoring to use, 235

securing, 143

Multi-Controller, 21

Multifunction display, 149, 150

Status indicators for racing, 148

Multifunction switch

Overview, left side, 21

Overview, right side, 22, 23

N

Navigation

operating, 109

324 INDEX

Number-plate carrier
Removing and installing, 156

O

On-board computer, 107
On-board voltage
Warning light, 39, 40

P

Pairing, 104
Parking, 141
Parking light, 71
Phone
operating, 111
Pit Lane Limiter, 155
adjusting, 155
Pit-lane speed limiter
Maximum rpm, setting, 155
operating, 155
Pre-Ride-Check, 134
Pure Ride
Overview, 29

R

Race track, 153
Pit-lane speed limiter, 155
Racing start with Launch
Control, 154
Status indicators for
racing, 146
Radio-operated key
Replacing battery, 65
RDC
Engineering details, 178
Warning indicators, 47, 50
Rear-wheel stand
installing, 188
Refuelling, 142
Fuel grade, 141
Rev. counter, 101

Riding mode, 78
Control, 22, 23
Engineering details, 174
Setting up riding mode
PRO, 79
Running in, 136

S

Safety instructions
for brakes, 138
for riding, 130
Seats
Lock, 18
Removing and installing, 90
Service, 255
Reporting safety-relevant
defects, 254
Service history, 255
Service-due indicator, 57
Shift assistant, 137, 179
Engineering details, 179
Gear not taught, 56
Riding, 137
Shift lever
Gearshift-pattern re-
verser, 164
Shift light, 86, 137
adjusting, 86
switching on/off, 86
Shifting gear
Shift light, 138
Spark plugs, 248
Speed Limit Info
Switching on or off, 100
Spring preload
Adjuster, front, 18
Adjuster, rear, 18
adjusting, 120
Starting, 133
Control, 22, 23

Status line, top
adjusting, 99, 100

Steering lock
Locking, 62

T

Tail-hump trim panel
installing, 214
removing, 213

Technical data
Anti-theft alarm, 249
Battery, 248
Brakes, 246
Chassis and suspension, 245
Clutch, 244
Coolant, 243
Dimensions, 249
Electrical system, 248
Engine, 243
Engine oil, 243
Final drive, 245
Frame, 245
Fuel, 242
Fuses, 248
General notes, 5
Lighting, 249
Performance figures, 251
Spark plugs, 248
Standards, 5
Transmission, 244
Weights, 250
Wheels and tyres, 246

TFT display, 24
Control, 21
operating, 98, 99
Overview, 29, 30
Selecting display, 95

Toolkit
Contents, 187
Position on the vehicle, 20

Torques, 240

Traction control
DTC, 172

Transmission
Technical data, 244

Trim panels
Installing side panel, 212
Installing tail-hump trim
panel, 214
Removing fairing side
panel, 211
Removing tail-hump trim
panel, 213

Troubleshooting chart, 238

Turn indicators
Control, 21
operating, 70
Removing and installing, 159

Type plate
Position on the vehicle, 19

Tyre pressure monitoring RDC
Display, 46

Tyres
Checking tread depth, 198
Checking tyre pressure, 198
Pressures, 247
Running in, 137
Table of tyre pressures, 18
Technical data, 246

U

USB charging socket
Under the rider's seat, 20

V

Value
Display, 31

326 INDEX

Vehicle Identification Number
Position on the vehicle, 19

W

Warning indicator lights, 44

ABS, 51

Anti-theft alarm, 43

Bulb faulty, 41

Coolant temperature, 43

Drop sensor, 50

DTC, 53

DWA, 43

Engine control unit, 45

Engine electronics, 45

Fuel reserve, 55

Gear not taught, 56

Hill Start Control, 55, 56

Keyless Ride, 39

Light control failed, 42

Mode of presentation, 31

My vehicle, 106

On-board voltage, 39, 40

Outside temperature

warning, 38

RDC, 47, 50

Warning light, drive

malfunction, 44

Warning light, drive malfunction, 44

Warning lights, 24

Overview, 28

Warnings, overview, 33

Weights

Payload table, 20

Technical data, 250

Wheels

Change of size, 199

Checking rims, 199

Installing front wheel, 201

Installing rear wheel, 205

Removing front wheel, 200

Removing rear wheel, 203

Technical data, 246

Details described or illustrated in this booklet may differ from the vehicle's actual specification as purchased, the accessories fitted or the national-market specification. No claims will be entertained as a result of such discrepancies.

Dimensions, weights, fuel consumption and performance data are quoted to the customary tolerances.




The right to modify designs, equipment and accessories is reserved.

Errors and omissions excepted.

© 2020 Bayerische Motoren
Werke Aktiengesellschaft
80788 Munich, Germany
Not to be reproduced by any
means whatsoever, wholly or in
part, without the written per-
mission of BMW Motorrad,
After Sales.
Original rider's manual, printed
in Germany.

Important data for refuelling:

Fuel

Recommended fuel grade	 Premium, unleaded (maximum 5% ethanol, E5) 98 ROZ/RON 93 AKI
Alternative fuel grade	 Premium unleaded (power- and consumption-related restrictions) (max. 10% ethanol, E10)  95 ROZ/RON 90 AKI
Usable fuel capacity	approx. 16.5 l
Fuel reserve	approx. 4 l
Tyre pressure	
Tyre pressure, front	2.5 bar, with cold tyre; one-up and two-up
Tyre pressure, rear	2.9 bar, with cold tyre; one-up and two-up

You can find further information on all aspects of your vehicle at:
bmw-motorrad.com

BMW recommends **ADVANTEC**
ORIGINAL BMW ENGINE OIL

Order No.: 01 40 9 831 101
10.2020, 1st edition, 01

