

AXIS SWITCH

POSISwitch[®] AX 5000

for POSIDRIVE[®] MDS 5000

Mounting and Commissioning Guidelines

Be sure to read and adhere to this mounting and commissioning instructions before mounting and commissioning!

MANAGEMENTSYSTEM



certified by DQS according to
DIN EN ISO 9001, DIN EN ISO 14001
Reg-No. 000780 UM/QM

COMMISSIONING CONNECTION MOUNTING



SV 5.1

GB 02/2005



TABLE OF CONTENTS

1. Notes on Safety	1
2. Technical Data	2
2.1 Electrical	2
2.2 Mechanical	3
3. Mechanical Installation	4
3.1 Installation Location	4
3.2 Mounting	4
4. Electrical Installation	5
4.1 EMC	5
4.2 Connection of POSISwitch® to MDS 5000	5
4.3 Connection of POSISwitch® to Position Encoder	5
4.4 Connection of Temperature Sensors and Braking Contacts	5
4.5 Connection of Power and Relays/Contactors	5
4.6 Connection of Motors	5
5. Connection Allocation	6
5.1 Terminal Overview	6
5.2 Terminal Allocation	6
6. Configuration	9
7. Examples	10
8. Accessories	11
 STÖBER ANTRIEBSTECHNIK - Germany	 12
STÖBER ANTRIEBSTECHNIK - International	14

1. Notes on Safety

1 NOTES ON SAFETY



Before mounting and commissioning, be sure to read these mounting and commissioning instructions to prevent the occurrence of avoidable problems during commissioning and/or operation.

POSISWITCH® AX 5000 of the MDS family is a supplemental module for **POSIDRIVE®** of the MDS family. In the sense of DIN EN 50178 (earlier VDE 0160), it is an electrical resource of power electronics (BLE) for the regulation of energy flow in high-voltage systems. It is exclusively intended for powering servo machines. Handling, mounting, operation and maintenance must be performed in adherence to valid regulations and/or legal specifications, applicable standards and this technical documentation. This is a restricted marketing class product in accordance with IEC 61800-3. In residential areas, this product may cause high-frequency interference for which the user may be called on to provide suitable countermeasures.

Strict adherence to all rules and regulations must be ensured by the user.

The safety notes and specifications contained in further sections (items) must be adhered to by the user.

Caution! High touch voltage! Danger of shock! Hazardous to life!

When power is applied, the connections may not become disconnected under any circumstances. **POSISwitch® AX 5000** may not be opened. Prerequisite for the correct **POSISwitch® AX 5000** function is the correct configuration and mounting of the inverter drive. The device may only be transported, installed, commissioned and controlled by specialized personnel who are qualified for this task.

Pay particular attention to:

- Permissible protection class: Protective ground. Operation is only permitted with regulation connection of the protective conductor. Direct operation of the devices on IT networks is not possible.
- Installation work may only be performed when the power is disconnected. When work must be performed on the drive, inhibit the enable of the inverter and disconnect the entire drive from the power network. (Adhere to the 5 safety rules.)
- Discharge time of the DC link capacitors on the inverter > 5 minutes
- Do not penetrate the inside of the device with any kind of object.
- When performing mounting or any other work in the switching cabinet, protect the device from falling objects (pieces of wire, leads, metal parts, and so on). Parts with conductive properties can cause a short circuit on the connections (terminal strips, sockets) and device failure
- Before commissioning, make sure that the plug connectors are positioned correctly and the connections are secured tightly with screws.

POSISwitch® AX 5000 must be installed in a switching cabinet in which the maximum ambient temperature is not exceeded (see technical data). Avoid humidity. Only copper wires may be used. The line cross sections to be used are listed in table 310-16 of standard NEC at 60 °C or 75 °C.

STÖBER ANTRIEBSTECHNIK GmbH + Co. KG accepts no liability for damages caused by non-adherence to the instructions or the applicable regulations.

The motors must be equipped with integrated temperature monitoring or external motor overload protection must be used.

POSISwitch® AX 5000 is only certified for operation on **POSIDRIVE®** of the MDS family.

Notes:

Subject to technical changes to improve the devices without prior notice. This documentation is purely a product description. It is not a promise of properties in the sense of warranty law.



2. Technical Data

2 TECHNICAL DATA

Model key

POSISwitch® AX 5000/4
 Designation 5. Generation Number of axes

2.1 Electrical

Device Type	POSI Switch® AX 5000/4
-------------	-------------------------------

General	
ID no.	44573
Voltage	24 V ±20% (protected against polarity reversal)
Current consumption (without encoder and contactor)	<100 mA
Ambient temperature	0 – 45 °C
Encoder system	EnDat®

EnDat® Port	
Input level	TIA/EIA 485 / 422
Connection, encoder input	Sub D 15-pole (STÖBER contact allocation)
Connection, encoder output	SUB D 15-pin (STÖBER contact allocation – see connection cable in chap. 8)
Output level	TIA/EIA 485
EnDat® version	EnDat® 2.1
Max. clock pulse frequency	2 MHz
Switchover time	< 200 µsec
Galvanic isolation EnDat® input to EnDat® input	No
Galvanic isolation EnDat® input to 24 V supply	500 V
Max. cable length between POSI Switch® and inverter	80 m ¹
Max. cable length between POSI Switch® and encoder	20 m ¹
Voltage for encoder	5.25 V
Max. output current for encoder	200 mA


Power protection	
Number of protective connections	4
Max. output current	800 mA (limitation 900 mA)
Output voltage	min. 22 V at 600 mA
Connection	Screw-type terminal (max. 1.5 mm²)
Galvanic isolation to EnDat®	Yes

¹ Only valid in connection with STÖBER cables

2. Technical Data

2.2 Mechanical

Specifications in mm

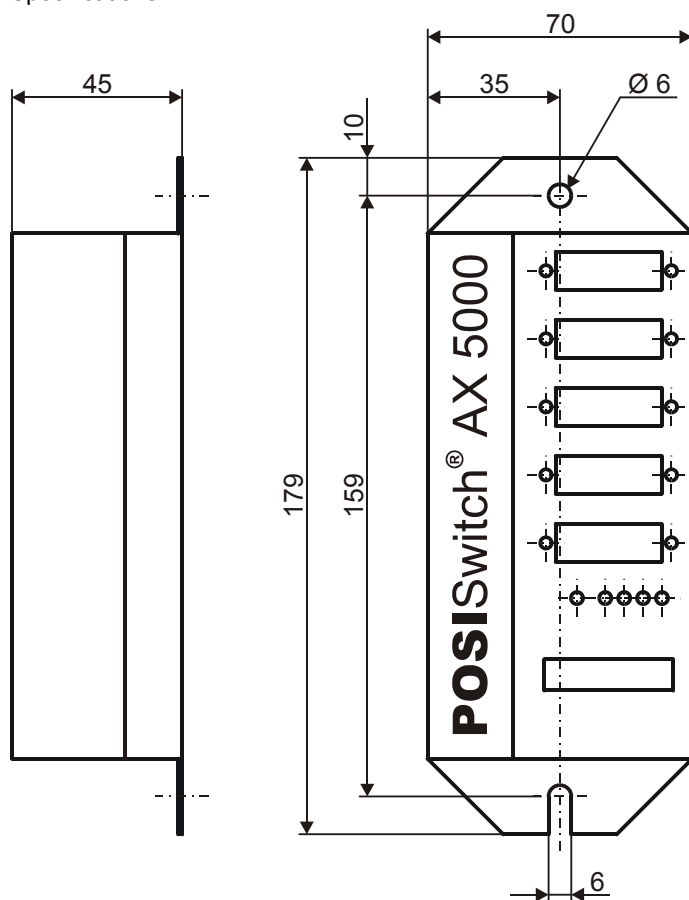

3. Mechanical Installation

3 MECHANICAL INSTALLATION


This chapter gives you complete information on the subject of mechanical installation.
Only specialized personnel qualified for this task may install, commission and control the device.

3.1 Installation Location


- Operate only in closed switching cabinet.
- Avoid installation above heat-generating devices.
- Ensure sufficient air circulation in the switching cabinet.
(The installation site of **POSISwitch® AX 5000** may not hinder the air circulation of the inverter.)
- The installation site must be free of dust, corrosive fumes and all liquids (in accordance with soil degree 2 as per EN 60204 / EN 50178).
- Avoid humidity.
- Avoid condensation (e.g., due to anti-condensation heaters).
- To satisfy EMC requirements, use mounting plates with conductive surfaces (e.g., unpainted).

3.2 Mounting

Drilling jig

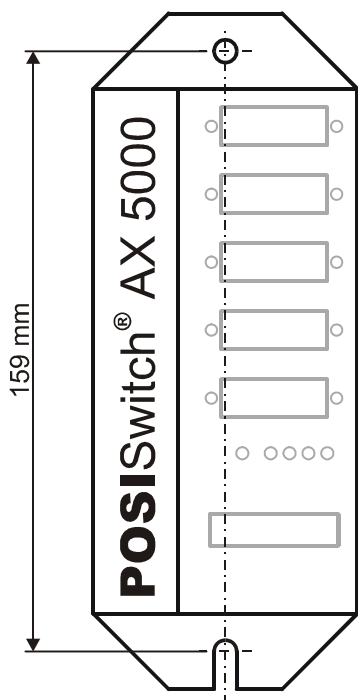

Possible arrangement

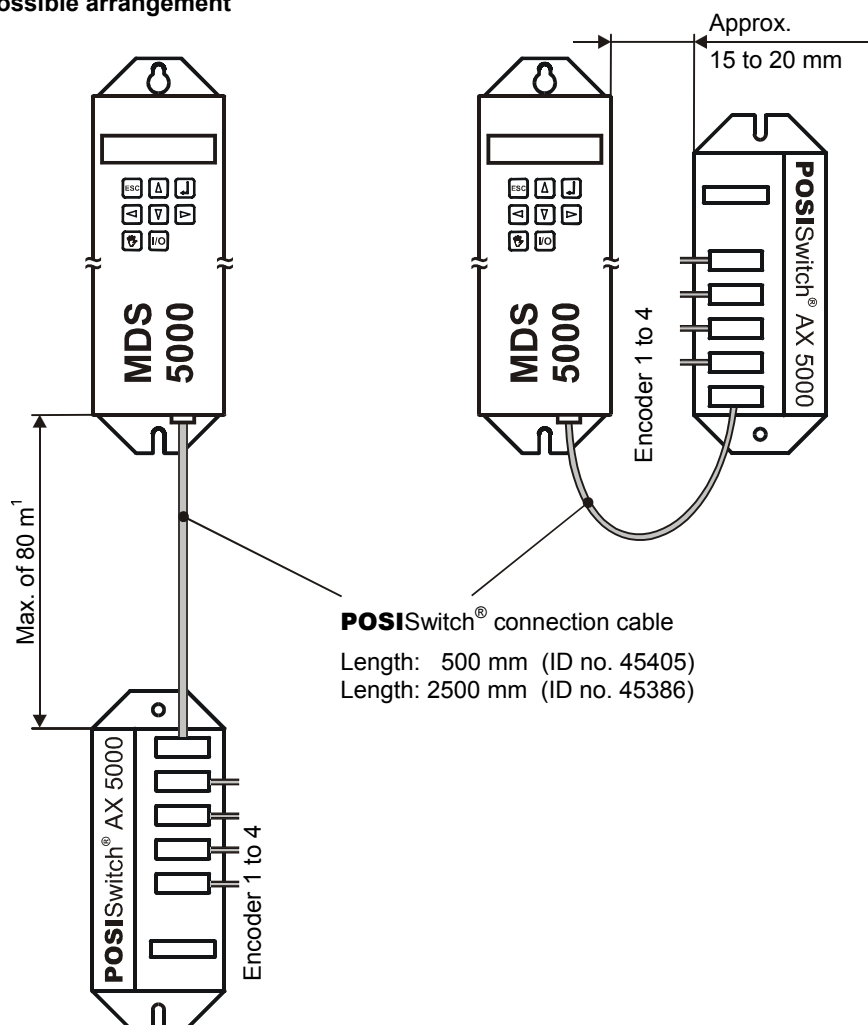

¹ Valid only in connection with STÖBER cables

4. Electrical Installation

4 ELECTRICAL INSTALLATION

This chapter gives you complete information on the subject of electrical installation. Only specialized personnel qualified for this task may install, commission and control the device.

4.1 EMC

This chapter gives you general information on EMC-suitable installation. These are only recommendations. Depending on the application, the ambient conditions and the legal requirements, measures in addition to the following recommendations may be necessary.

- Mount device on conductive surface (unpainted).
- Motor cables must be installed in separate space from the encoder cables.
- Use only shielded cables for motor and encoder lines (corresponding cables can be ordered from STÖBER ANTRIEBSTECHNIK.).
- Apply shield of the motor cable on both sides.
- The circuit breakers may not interrupt the shield lines.
- Output derating must be used for motor lines > 50 m.
- When an additional transmission plug connector is installed in the motor cable, the shield may not be interrupted and the plug connection may not be opened when the motor is electrified.
- When the braking line is installed in the motor cable, the braking line must be shielded separately.

4.2 Connection of POSI Switch® AX 5000 to MDS 5000

POSISwitch® AX 5000 is controlled by **POSIDRIVE® MDS 5000**. A connection via socket X4 on the MDS 5000 to plug X500 on the AX 5000 enables the switching of the axes. Completely prefabricated cables are available in the lengths 500 mm (ID no. 45405) and 2500 mm (ID no. 45386). Cf. chap. 8.

POSISwitch® AX 5000 is usually installed in the immediate vicinity of the inverter (see chap. 3.1 and 3.2). However, if this is not possible or desirable, a cable of up to 80 m¹ in length can be used.

4.3 Connection of POSI Switch® AX 5000 to Position Encoder

The encoders of the individual servo motors are connected to **POSISwitch® AX 5000** with the normal STÖBER encoder cable. The encoder of the first motor is connected with the socket Enc. 1. The encoder of the second motor is connected with the socket Enc. 2 and so on.

The length of the encoder cable may not exceed 20 m¹.

4.4 Connection of Temperature Sensors and Braking Contacts

Activation of a halting brake and the evaluation of the temperature sensors on the motors is handled with *braking module for 24 V brake* (BRM 5000). The brakes or temperature sensors (positor lines) allocated to the motors are activated and deactivated via auxiliary contacts of the applicable power relays/contactors. Chapter 7 contains examples of correct wiring.

4.5 Connection of Power and Relays/Contactors

POSISwitch® AX 5000 is powered with 24 V via the screw-type terminal strip X501 (terminals 1 and 2). Power consumption is a maximum of 1 A. The power relays/contactors are controlled via the AX 5000 on terminals X501.6 to X501.9. The contactors are powered via terminals X501.4 and X501.5. Chapter 7 contains examples of correct wiring.

4.6 Connection of Motors

The motors are activated and deactivated via power relays/contactors. **POSISwitch® AX 5000** controls and checks the power relays/contactors. Chapter 7 contains examples of correct wiring. Please adhere to the EMC recommendations.



Use to switch the motor temperature sensor relay contacts for low currents/voltages (gold contacts).


¹ Only valid in connection with STÖBER cables

5. Connection Allocation

5 CONNECTION ALLOCATION

This section explains the position, designation and allocation of the terminals.

5.1 Terminal Overview

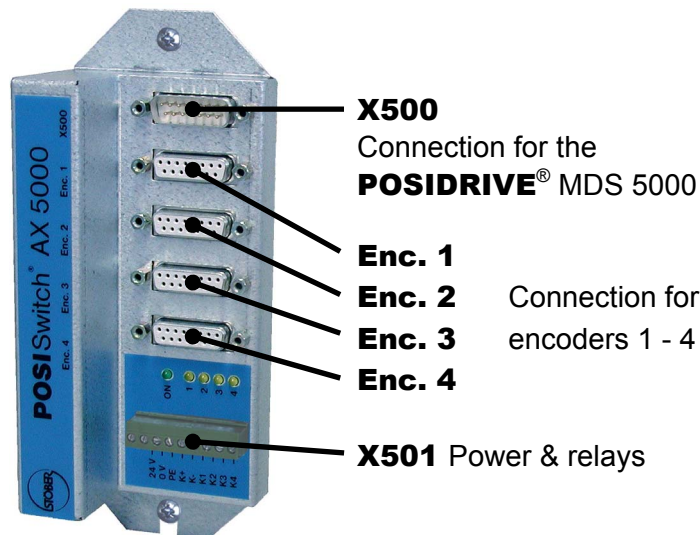

5.2 Terminal Allocation

This section presents and describes all interfaces. The exact position is given in chap. 5.1.

X500 – connection for POSIDRIVE® MDS 5000

PIN ¹¹	Signal / Function	Description	Circuiting
1	NC	Not connected	POSISwitch® cable MDS 5000 X4 POSISwitch® X500
2	GND	Reference potential Digital ground	
3	NC	Not connected	
4	VCC	Power supply 5 V_{DC} Is jumpered internally with pin 12	
5	DATA+	Differential input / output For data signal	
6	NC	Not connected	
7	ERROR+	Differential output For error signal	
8	CLK+	Differential input For clock pulse signal	
9	NC	Not connected	
10	NC	Not connected	
11	NC	Not connected	
12	Sense	Sense connection Is jumpered internally with pin 4	
13	DATA-	Differential input / output (inverse) For data signal	
14	ERROR-	Differential output (inverse) For error signal	
15	CLK -	Differential input (inverse) For clock pulse signal	

¹¹ View of terminal/sub D

5. Connection Allocation


X501 – voltage supply and relays

PIN ¹	Signal / Function	Description	Circuiting
	1	+24V _{DC} Voltage supply Powers POSISwitch® AX 5000 and the motor encoder	
	2	0V Reference potential For voltage supply / PIN 1	
	3	PE Protective conductor Connection to housing	
	4	K+ Power for the relays + Potential for powering power relays/contactors $U_{min} = 5 \text{ V}; U_{max} = 30 \text{ V}$	
	5	K- Reference potential For terminal 4	
	6	K1 OUT Relay output 1 For first axis I_{max} with 24 V = 0.5 A Internal safety circuit with free-wheeling diode for relay coil.	
	7	K2 OUT Relay output 2 For second axis I_{max} with 24 V = 0.5 A Internal safety circuit with free-wheeling diode for relay coil.	
	8	K3 OUT Relay output 3 For third axis I_{max} with 24 V = 0.5 A Internal safety circuit with free-wheeling diode for relay coil.	
	9	K4 OUT Relay output 4 For fourth axis I_{max} with 24 V = 0.5 A Internal safety circuit with free-wheeling diode for relay coil.	


¹ View of terminal/sub D

5. Connection Allocation

Enc. 1; Enc. 2; Enc 3; Enc. 4 – connection for encoders 1 - 4

PIN ¹	Signal / Function	Description	Circuiting
1	NC	Not connected	
2	GND	Reference potential Digital ground	
3	NC	Not connected	
4	VCC	Power supply 5 V_{DC} Is jumpered internally with pin 12	
5	DATA+	Differential input / output For data signal	
6	NC	Not connected	
7	NC	Not connected	
8	CLK+	Differential output For clock pulse signal	
9	NC	Not connected	
10	NC	Not connected	
11	NC	Not connected	
12	Sense	Sense connection Is jumpered internally with pin 4	
13	DATA-	Differential input / output (inverse) For data signal	
14	NC	Not connected	
15	CLK -	Differential output (inverse) For clock pulse signal	

Connection of the encoder to POSI Switch® AX 5000

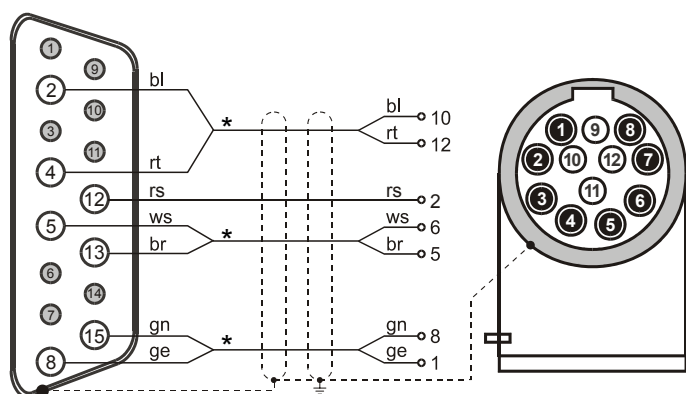

Terminal, enc. 1 to 4 on
POSISwitch®

Encoder connection
Bracket flange socket
motor

Signal	Clock+	Sense	DATA-	DATA+	Clock-	UB+	DGND
Enc. 1-4	8	12	13	5	15	4	2
Motor ¹	1	2	5	6	8	12	10
Cable ²	ge	rs	br	ws	gn	rt	bl

1) PIN number of 12-pin encoder plug for STÖBER ED/EK motor
2) Color when STÖBER encoder cable is used

ge = yellow, rs = pink, br = brown, ws = white, gn = green, rt = red, bl = blue

* Cables twisted in pairs


¹ View of terminal/sub D

6. Configuration

6 CONFIGURATION

This chapter describes the configuration of **POSISwitch® AX 5000**.

The user decides whether **POSISwitch®** will be used in the configuration assistants during the step “inverter selection”. An appropriate selection is offered here (see figure).

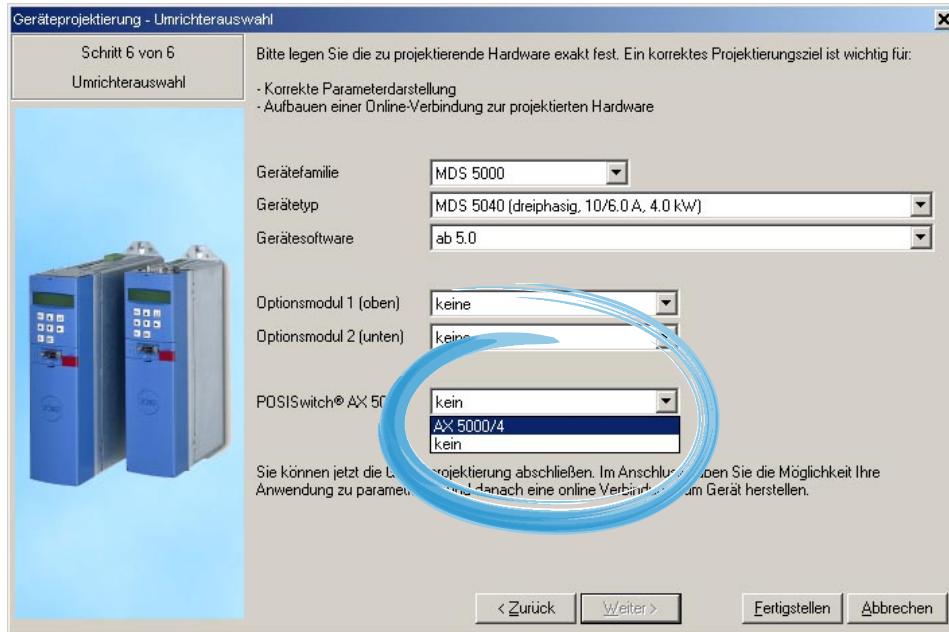


When **POSISwitch® AX 5000** is configured, the device is adjusted to the application via the following parameters.

Par.	Description	Fieldbus Address	
F90 Global r=2, w=3	Release time axis-switch: Specifies the release time of the contactor used for the axis switchover. This minimum time is waited before the inverter lets the next contactor be applied. <i>Value range in msec: 0 ... 20 ... 32767</i> Fieldbus: 1LSB=1-msec; type: I16; ; USS address: 06 16 80 00 hex	2A5Ah	0h
F91 Global r=2, w=3	Set time axis-switch: Specifies the set time of the contactor used for the axis switchover. This time is at least waited before the inverter lets the axis be electrified. <i>Value range in msec: 0 ... 20 ... 32767</i> Fieldbus: 1LSB=1-msec; type: I16; ; USS address: 06 16 C0 00 hex	2A5Bh	0h
H08 Achse, OFF r=2, w=2	PosiSwitch® encoder selector: Available as an option, the POSISwitch® control module permits the connection of several motors to one inverter. In H08 it can be set separately for each of the four (software) axes which connection on the POSISwitch® (i.e., which motor) is allocated to the particular axis configuration. This routine permits two or more applications to be run together on separate (software) axes with a single motor. Note: Following a change in parameter H08 , correct evaluation of the electronic nameplate is not ensured until after a device new start. <i>0: Enc1; 1: Enc2; 2: Enc3; 3: Enc4;</i> Field bus: 1LSB=1; Typ: U8; USS-Adr: 08 02 00 00 hex 👁 Only when a POSISwitch® was detected on X4.	2E08h	0h
H18 Global, OFF read (2)	Posi-switch® port-status: Indicates as a binary word the POSISwitch® ports to which encoders are connected. This is determined by the inverter during startup. Fieldbus: 1LSB=1; type: U8; ; USS address: 08 04 80 00 hex 👁 Only when a POSISwitch® was detected on X4	2E12h	0h
U12 Global r=3, w=3	Level motor connection: When the axis switch via POSISwitch® is utilized, the inverter can test during switching whether the contactor of the motor to be switched off has actually broken contact (opened). In addition, under certain circumstances, it can be determined that no motor is connected. <i>0: inactive</i> <i>3: fault</i> Fieldbus: 1LSB=1; type: U8; ; USS address: 15 03 00 00 hex	480Ch	0h

8. Accessories

8 ACCESSORIES

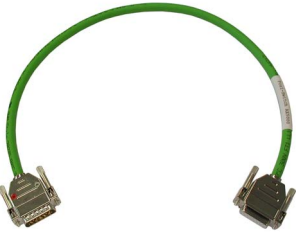	ID No.	Designation	Remarks
	45405	POSISwitch® connection cable (0.5 m) Connection cable POSISwitch® AX 5000 to POSIDRIVE® MDS 5000 Length: 0.5 m (fabricated)	Chap. 3
	45386	POSISwitch® connection cable (2.5 m) Connection cable POSISwitch® AX 5000 to POSIDRIVE® MDS 5000 Length: 2.5 m (fabricated)	Chap. 3
	44989	Product CD " STÖBER ELECTRONICS 5000" This CD-ROM contains: • POSITool (PC program for programming, operator control and monitoring of the inverter) • Documentation • Fieldbus files	Download POSITool Also via: http://www.stoeber.de

STÖBER ANTRIEBSTECHNIK - Deutschland



STÖBER ANTRIEBSTECHNIK

Hauptverwaltung:

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Postfach 910103
75091 Pforzheim

Kieselbronner Straße 12
75177 Pforzheim

Fon 07231 582-0
Fax 07231 582-1000
eMail sales@stoeber.de

24-Stunden-Service-Nr.

0180 5 786323

Vanity-No:

0180 5 STOEBER

Vertriebsgebiet Nordwest:

Zentrale

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Friedrich-Ebert-Str. 85
58454 Witten

Fon 02302 98494-0
Fax 02302 98494-50
eMail TB_DO@stoeber.de

Zugehörige Technische Büros:

Norddeutschland

20000 - 23919
24000 - 29999

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Stefan Hildebrandt
Bei den roten Höfen 4
21698 Harsefeld

Fon 04164 811904
Fax 04164 811905
eMail TB_ND@stoeber.de

Münster

33000 - 33599
33600 - 33899
33900 - 33999
48000 - 49999
59200 - 59329
59470 - 59699

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Markus Merker
Grottenkamp 28
48565 Steinfurt

Fon 02552 610271
Fax 02552 610272
eMail TB_MS@stoeber.de

Dortmund West

40000 - 41999
46000 - 47999
50000 - 50999
52000 - 53999

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Jürgen Volkmuth
Friedrich-Ebert-Str. 85
58454 Witten

Fon 02302 98494-0
Fax 02302 98494-50
eMail TB_DO@stoeber.de

Dortmund Ost

42000 - 45999
51000 - 51999
57000 - 59199
59330 - 59469
59700 - 59999

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Detlef Mock
Friedrich-Ebert-Str. 85
58454 Witten

Fon 02302 98494-0
Fax 02302 98494-50
eMail TB_DO@stoeber.de

Hannover

30000 - 32999
34330 - 34549
37000 - 37199
37400 - 38799

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Arne Hülsmeier
Holbeinstraße 43
49525 Lengerich

Fon 05481 903946
Fax 05481 903974
eMail TB_H@stoeber.de

Vertriebsgebiet Mitte:

Zentrale

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Postfach 910103, 75091 Pforzheim
Kieselbronner Straße 12, 75177 Pforzheim

Fon 07231 582-0
Fax 07231 582-1000
eMail sales@stoeber.de

Zugehörige Technische Büros:

Saar-Pfalz

54000 - 56999
65000 - 66919
67200 - 67319
67500 - 67999

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Roland Dillmann
Black & Decker-Str. 1
65510 Idstein

Fon 06126 989406
Fax 06126 55499
eMail TB_ID@stoeber.de

Wiesbaden

34000 - 34329
34550 - 36399
37200 - 37299
60000 - 64999

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Jens Thomas
Black & Decker-Str. 1
65510 Idstein

Fon 06126 989405
Fax 06126 55499
eMail TB_ID@stoeber.de

Vertriebsgebiet Süd:

Zentrale

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Postfach 910103, 75091 Pforzheim
Kieselbronner Straße 12, 75177 Pforzheim

Fon 07231 582-0
Fax 07231 582-1000
eMail sales@stoeber.de

STÖBER ANTRIEBSTECHNIK - Deutschland



STÖBER ANTRIEBSTECHNIK

Zugehörige Technische Büros:

Pforzheim Süd

71000 - 71299
75100 - 75399

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Günter Großmann
Postfach 910103, 75091 Pforzheim
Kieselbronner Straße 12, 75177 Pforzheim

Fon 07231 582-1229
Fax 07231 582-1349
eMail TB_PFSued@stoeber.de

Pforzheim Nord

70000 - 70999
71300 - 71499
71600 - 71999
74000 - 74172
74300 - 74399
75400 - 75999

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Philipp Gerstner
Postfach 910103, 75091 Pforzheim
Kieselbronner Straße 12, 75177 Pforzheim

Fon 07231 582-1217
Fax 07231 582-1349
eMail TB_PFNord@stoeber.de

Nordbaden

66920 - 67199
67320 - 67499
68000 - 69999
74173 - 74299
74600 - 75099
76600 - 76999
97860 - 97999

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Stefan Rotterdam
Postfach 910103, 75091 Pforzheim
Kieselbronner Straße 12, 75177 Pforzheim

Fon 07231 582-1149
Fax 07231 582-1349
eMail TB_NB@stoeber.de

Südbaden

72190 - 72299
76000 - 76599
77000 - 77999
78090 - 78149
79000 - 79999

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Daniel Lohse
Postfach 910103, 75091 Pforzheim
Kieselbronner Straße 12, 75177 Pforzheim

Fon 07231 582-1114
Fax 07231 582-1349
eMail TB_SB@stoeber.de

Reutlingen

72000 - 72189
72300 - 72999
78000 - 78089
78150 - 78999
88000 - 89299
89570 - 89999

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Wilhelm Haydt
Gerh.-Hauptmann-Str. 53
72793 Pfullingen

Fon 07121 994035
Fax 07121 994036
eMail TB_RT@stoeber.de

Württemberg Nord-Ost

71500 - 71599
73000 - 73999
74400 - 74599
89500 - 89569

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Klaus Buschko
Meisenweg 25
72589 Westerheim

Fon 07333 950773
Fax 07333 950774
eMail TB_WNO@stoeber.de

München

80000 - 84999
85200 - 87999
89300 - 89499
94000 - 94999

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Udo Cyrol
Industriestraße 20 a
91353 Hausen

Fon 09191 616890
Fax 09191 734538
eMail TB_M@stoeber.de

Nürnberg

85000 - 85199
90000 - 93999
95000 - 96499
97000 - 97859

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Wolfgang Lukas
Industriestraße 20 a
91353 Hausen

Fon 09191 734537
Fax 09191 734538
eMail TB_N@stoeber.de

Vertriebsgebiet Ost:

Zentrale

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Postfach 910103, 75091 Pforzheim
Kieselbronner Straße 12, 75177 Pforzheim

Fon 07231 582-0
Fax 07231 582-1000
eMail sales@stoeber.de

Zugehörige Technische Büros:

Berlin / Brandenburg

06000 - 06599
06730 - 07299
10000 - 19999
23920 - 23999
38800 - 39999

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Bernd Weise
Werneuchener Weg 9
15345 Altlandsberg

Fon 033438 5731
Fax 033438 5732
eMail TB_BR@stoeber.de

Lichtenstein

00000 - 05999
06600 - 06729
07300 - 09999
36400 - 36999
37300 - 37399
96500 - 96999
98000 - 99999

STÖBER ANTRIEBSTECHNIK GmbH & Co. KG

Jürgen Stolper
Günsbacher Straße 4
09350 Lichtenstein

Fon 037204 2985
Fax 037204 2986
eMail TB_LI@stoeber.de

STÖBER ANTRIEBSTECHNIK - International



STÖBER ANTRIEBSTECHNIK

Austria	STÖBER ANTRIEBSTECHNIK GmbH Fabrikplatz 1 4662 Steyrermühl	Phone +43 7613 76000 Fax +43 7613 76009 eMail office@stoeber.at
France	STÖBER S.a.r.l. 47, rue Maurice Flandin 69003 Lyon	Phone +33 4 72132438 Fax +33 4 72132457 eMail mail@stoer.fr
Great Britain	STOBER DRIVES LTD. Unit 9, Abbeymead Industrial Park Brooker Road, Waltham Abbey Essex EN9 1HU	Phone +44 1992 709710 Fax +44 1992 714111 eMail mail@stoer.co.uk
Italy	STÖBER TRASMISSIONI S. r. l. Via Risorgimento, 8 20017 Mazzo di Rho (Milano)	Phone +39 02 93909-570 Fax +39 02 93909-325 eMail info@stoeber.it
Korea	DAE KWANG STOEBER CO. LTD. 2 Ma 301-3 Sihwa Industrial Complex, 1704-3 Jungwang dong, Siheung city, Gyunggi do, Korea Postcode 429-845	Phone +82 31 4347047 Fax +82 31 4347048 eMail dkstoeber@stoeber.co.kr
Poland	STOEBER POLSKA ul.H.Kamienskiego 201-219 51-126 Wrocław	Phone +48 71 3207417 Fax +48 71 3207417 eMail biuro@stoeber.pl
USA	STOBER DRIVES INC. 1781 Downing Drive Maysville, KY 41056	Phone +1 606 7595090 Fax +1 606 7595045 eMail sales@stoer.com
Belgium	VAN DOREN - PILLE N. V. Industrieterrein De Prijckels Venecoweg 25 9810 Nazareth	Phone +32 9 2521309 Fax +32 9 2522374 eMail info@vandorenpille.be
Brasil	FRAPHE INDUSTRIA E COMERCIO Rua Bairro Da Ponte Alta S/N 37640-000 Extrema - MG	Phone +55 35 34355965 Fax +55 35 34353887 eMail fraphe@fraphe.com.br
Bulgaria	Z & M PRIVATE COMPANY 5, Angel Kantchev Str. 1000 Sofia	Phone +359 2 9865855 Fax +359 2 9865916 eMail zandm@techno-link.com
China	WK-INTERSALES BEIJING German Centre Unit 0525-0530, Landmark Tower 2 8 North Dongsanhuan Road Chaoyang District Beijing 100004	Phone +86 10 65906425 + 26 Fax +86 10 65906785 eMail stoeber@wk-intersales.com
Colombia	SOCOMEX LTDA. Apdo. Aereo 11606 Santafe de Bogota D. C.	Phone +57 2856105 / +57 2856496 +57 2856336 Fax +57 13350487
Denmark	EEGHOLM A/S Grundtvigs Allé 165-169 P. O. Box 190 6400 Sønderborg	Phone +45 73 121212 Fax +45 73 121213 eMail eegholm@eegholm.dk

STÖBER ANTRIEBSTECHNIK - International



STÖBER ANTRIEBSTECHNIK

Finland	EIE MASKIN OY PL 80 10600 Tammisaari	Phone +358 19 2461642 Fax +358 19 2461643 eMail eie@eie.fi
Hungary	BDI Hungary Ltd. Fóti Street 141, Bldg 37. 1046 Budapest	Phone +36 1 2311010 Fax +36 1 2311030 eMail bdi-hun@elender.hu
the Netherlands	MIJNSBERGEN B. V. Postbus 166 3640 AD Mijdrecht	Phone +31 297 285821 Fax +31 297 272326 eMail info@mijnsbergen.nl
Norway	ELMEKO AS Postbox 80 1306 Baerum Postterminal	Phone +47 67 572270 Fax +47 67 572280 eMail elmeko@elmeko.no
Peru	POWERMATIC S. A. Av. Los Ingenieros 333 Ate-Vitarte, Lima 3	Phone +51 1 3490184 / 3494011 Fax +51 1 4370073 eMail powermatic@terra.com.pe
Philippines	LEELENG COMMERCIAL, INC. 387 - 393 Dasmariñas St. P. O. Box 480 Manila	Phone +63 2 2418901 to 05 Fax +63 2 2414060 eMail leeleng@manila.vasia.com
South Africa	BEARING MAN LTD. P. O. Box 33431 Jeppestown 2043	Phone +27 11 6201500 Fax +27 11 6201775 eMail sales@bearing_man.co.za
Spain	TAHFER COMERCIAL, S. A. Jesus, 27 28917 - LA FORTUNA	Phone +34 91 6193424 Fax +34 91 6197792 eMail tahfercom@tahfer.com
	S.p.i.t. KOOM s. l. Camino Caserio Parada, 25 20015 San Sebastián	Phone +34 94 3297809 Fax +34 94 3297810 eMail koom@spitkoom.com
Sweden	EIE MASKIN AB Postfach 7 12421 Bandhagen	Phone +46 8 7278800 Fax +46 8 7278899 eMail eie@eie.se
Switzerland	INDUR ANTRIEBSTECHNIK AG Margarethenstraße 87 4008 Basel	Phone +41 61 2792900 Fax +41 61 2792910 eMail info@indur.ch
Thailand	GERMAN ENGINEERING & MACHINERY CO., LTD. 399 Moo 17 Bangna Trad Rd. Km 23 Bangsaothong Sub District 10540 Samutprakarn	Phone +66 2 3153331 / 3153332 Fax +66 2 3153663 eMail sale-ge@mweb.co.th
Turkey	HARTEK Sanayigi Ticaret Ltd. Sti Y. Dudullu Mah. Alptekin Sk. No: 2 Kat: 2 34775 ÜMRANIYE - ISTANBUL	Phone +90 216 5406026 Fax +90 216 5406030 eMail o.aydin@hartek.net

**Additional information under:
<http://www.stoeber.de>**

STÖBER . . . The Drive for your Automation



STÖBER ANTRIEBSTECHNIK
GmbH + Co. KG

GERMANY
Kieselbronner Strasse 12 · 75177 Pforzheim
Postfach 910103 · 75091 Pforzheim
Fon +49 (0) 7231 582-0, Fax +49 (0) 7231 582-1000
Internet: <http://www.stoeber.de> / e-mail: mail@stoeber.de

Presented by: