# 7VM400M-RZ

AMD Sempron<sup>™</sup>/Athlon<sup>™</sup> XP/Duron<sup>™</sup> Socket A Processor Motherboard

# User's Manual

Rev. 1005 12ME-VM400MRZ-1005

#### Copyright

© 2005 GIGABYTE TECHNOLOGY CO., LTD

Copyright by GIGA-BYTE TECHNOLOGY CO., LTD. ("GBT"). No part of this manual may be reproduced or transmitted in any from without the expressed, written permission of GBT.

#### Trademarks

Third-party brands and names are the property of their respective owners.

#### Notice

Please do not remove any labels on motherboard, this may void the warranty of this motherboard.

Due to rapid change in technology, some of the specifications might be out of date before publication of this booklet.

The author assumes no responsibility for any errors or omissions that may appear in this document nor does the author make a commitment to update the information contained herein.

	Name :Timmy Huang	Date : Feb. 20, 2004	(Stamp)
Date: Feb. 20, 2004	Signature : Finnny Huang	Manufacturer/Importer	
Signature: Eric Lu	General and Safety requirements for uninterruptible power systems (UPS)	Safety of household and similar  electrical appliances	□ EN 60335
Representative Person's Name: FRIC 111	Safety for information technology equipment including electrical business equipment	Safety requirements for mains operated EN 60950 electronic and related apparatus for household and similar general use	□ EN 60065
cause harmful and (2) this device must accept any inference received,	ve mentioned product 2e with LVD 73/23 EEC	The manufacturer also declares the conformity of above mentioned product with the actual required safety standards in accordance with LVD 73/23 EEC	
subject to the following two conditions: (1) This device may not	(EC conformity marking)	S (EC o	⊠ CE marking
This device complies with part 15 of the FCC Rules. Operation is		part 12 sound and television signals part 12 sound and television signals	part 12
Supplementary Information:		Cabled distribution systems; Equipment	DIN VDE 0855
(a), Class B Digital Device		Limits and methods of measurement of radio disturbance characteristics of information technology equipment	X EN 55022
FCC Part 15, Subpart B, Section 15.107(a) and Section 15.109	EM- requirements for uninterruptione power systems (UPS)	Immunity from radio interference or Li EN DVD91- 2 broadcast receivers and associated equipment	
Conforms to the following specifications:			
Model Number: 7VM400M-RZ	Immunity requirements for household applications and similar apparatus	Limits and methods of measurement	🗆 EN 55015
Product Name: Motherboard	Generic immunity standard Part 2: Industrial environment	apparatus and similar electrical EN 50082-2	
hereby declares that the product	Generic immunity standard Part 1: Residual, commercial and light industry	Limits and methods of measurement  of radio disturbance characteristics of boundary and anotacone	🗆 EN 55014-1
Phone/Fax No: (818) 854-9338/ (818) 854-9339	equipment-Immunity characteristics-Limits and methods of measurement	of radio disturbance characteristics of broadcast receivers and associated equipment	
City of fillutstry, CA 91/40	Information Technology	Limits and methods of measurement IN EN 55024	🗆 EN 55013
Address: 17358 Railroad Street	Disturbances in supply systems caused by household appliances and similar electrical equipment "Voltage fluctuations"	industrial, scientific and medical (ISM) I I EN 61000-3-3 high frequency equipment	
Responsible Party Name: G.B.T. INC. (U.S.A.)	Disturbances in supply systems caused	Limits and methods of measurement IN EN 61000-3-2	🗆 EN 55011
(1	nity is declared) rective	/YMI4UUW-KZ is in conformity with (reference to the specification under which conformity is declared) in accordance with 89/336 EEC-EMC Directive	
ך ז	o which it refers)	(description of the apparatus, system, installation to which it refers) Mother Board	
	Gemany	Ausschlager Weg 41, 1F 20537 Hamburg, Gemany	
Per FCC Part 2 Section 2.1077(a)	-	VVe, Manufacturer/Importer (full address) G B T Technology Trading GMbH	
DECLARATION OF CONFORMITY	nity	Declaration of Conformity	

#### **Preparing Your Computer**

Computer motherboards and expansion cards contain very delicate Integrated Circuit (IC) chips. To protect them against damage from static electricity, you should follow some precautions whenever you work on your computer.

- 1. Unplug your computer when working on the inside.
- Use a grounded wrist strap before handling computer components. If you do not have one, touch both of your hands to a safely grounded object or to a metal object, such as the power supply case.
- 3. Hold components by the edges and try not touch the IC chips, leads or connectors, or other components.
- 4. Place components on a grounded antistatic pad or on the bag that came with the components whenever the components are separated from the system.
- 5. Ensure that the ATX power supply is switched off before you plug in or remove the ATX power connector on the motherboard.



#### Installing the motherboard to the chassis

If the motherboard has mounting holes, but they don't line up with the holes on the base and there are no slots to attach the spacers, do not become alarmed you can still attach the spacers to the mounting holes. Just cut the bottom portion of the spacers (the spacer may be a little hard to cut off, so be careful of your hands). In this way you can still attach the motherboard to the base without worrying about short circuits. Sometimes you may need to use the plastic springs to isolate the screw from the motherboard PCB surface, because the circuit wire may be near by the hole. Be careful, don't let the screw contact any printed circuit write or parts on the PCB that are near the fixing hole, otherwise it may damage the board or cause board malfunctioning.

# **Table of Contents**


Chapter 1 Introduction	. 5
Features Summary	5
7VM400M-RZ Motherboard Layout	6
Block Diagram	7
Hardware Installation Process	8
Step 1: Set System Jumper (JP1)	8
Step 2: Install the Central Processing Unit (CPU)	9
Step 2-1: CPU Installation	9
Step 2-2: CPU Cooling Fan Installation	9
Step 3: Install Memory Modules	10
Step 4: Install AGP Card	11
Step 5: Install I/O Peripherals Cabels	11
Step 5-1: I/O Back Panel Introduction	11
Step 5-2: Connectors Introduction	12
Chapter 2 BIOS Setup	19
The Main Menu (For example: BIOS Ver. : F5)	19
Standard CMOS Features	21
Advanced BIOS Features	23
Integrated Peripherals	24
Power Management Setup	26
PnP/PCI Configurations	27
PC Health Status	28
Frequency/Voltage Control	29
Load Fail-Safe Defaults	
Load Optimized Defaults	30
Set Supervisor/User Password	
Save & Exit Setup	32
Exit Without Saving	
Chapter 3 Driver Installation	33

# Chapter 1 Introduction

## Features Summary


CPU	<ul> <li>Socket A for AMD Sempron<sup>™</sup> / Athlon<sup>™</sup> XP / Athlon<sup>™</sup> / Duron<sup>™</sup> processor</li> </ul>
	• 200/266/333MHz FSB
	Supports 1.4GHz and faster
Chipset	Northbridge : VIA KM400
	Southbridge : VIA VT8235 / VT8237R
Memory	2 184-pin DDR DIMM sockets, supports up to 2GB DRAM (Max)
	Supports DDR333/DDR266/DDR200 DIMM
	Supports only 2.5V DDR SDRAM
Slots	<ul> <li>1 AGP slot supports 8X/4X(1.5V) mode</li> </ul>
	<ul> <li>3 PCI slots support 33MHz &amp; PCI 2.2 compliant</li> </ul>
On-Board IDE	• 2 IDE controller provide IDE HDD/CD-ROM(IDE1, IDE2) with PIO, Bus
	Master (Ultra DMA33/ATA66/ATA100/ATA133) operation modes
	Can connect up to 4 IDE devices
On-Board Floppy	• 1 Floppy port supports 2 FDD with 360K, 720K,1.2M, 1.44M and 2.88M bytes
On-Board Peripherals	1 Parallel port supports Normal/EPP/ECP mode
	<ul> <li>1 Serial port (COMA), 1 VGA port, COMB on-board</li> </ul>
	<ul> <li>6 USB 2.0/1.1 ports (2 x Rear, 4 x Front by cable)</li> </ul>
	1 Front Audio connector
	<ul> <li>1 PS/2 Keyboard</li> </ul>
	1 PS/2 Mouse
On-Board VGA	Built-in VIA KM400
On-Board LAN	Builit-in VIA VT6103 chipset
	1 RJ45 port
On-Board Sound	• VIA VT1617
	Supports 2/4/6-channel
	Line Out / Line In / Mic In
	SPDIF Out
	CD In / Game connector
BIOS	Licensed AWARD BIOS
	<ul> <li>Supports Q-Flash<sup>™</sup></li> </ul>
I/O Control	• ITE8705
Hardware Monitor	CPU/System fan revolution detect
	CPU/System temperature detect
	System voltage detect
	CPU/System fan fail warning
Additional Features	<ul> <li>Supports @BIOS<sup>™</sup></li> </ul>
	Supports EasyTune
Overclocking	Over clock (CPU/DDR) by BIOS
	Over voltage (DDR/AGP) br BIOS
Form Factor	<ul> <li>Micro ATX size form factor, 24.4cm x 22.3cm</li> </ul>

### 7VM400M-RZ Motherboard Layout

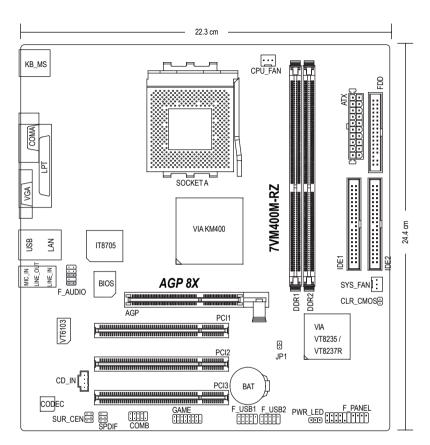

English


### **Block Diagram**

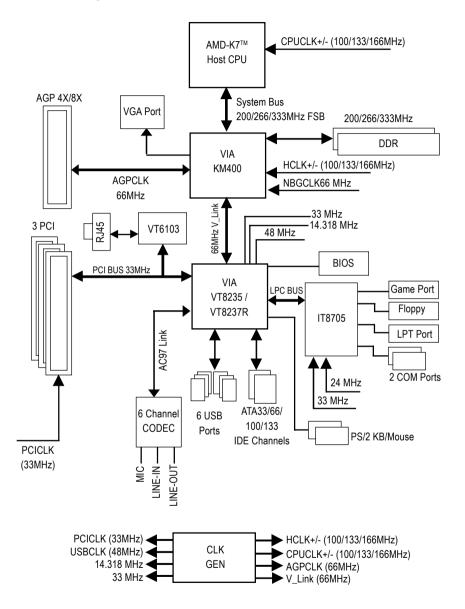

### Hardware Installation Process


To set up your computer, you must complete the following steps:

- Step 1- Set System Jumper (JP1)
- Step 2- Install the Central Processing Unit (CPU)
- Step 3- Install Memory Modules
- Step 4- Install Expansion Cards
- Step 5- Install I/O Peripherals Cables

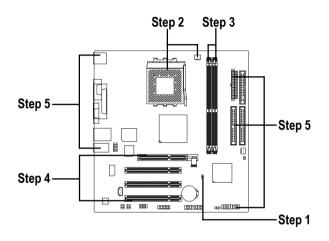

### Step 1: Set System Jumper (JP1)

The system bus frequency can be switched at 100/133/166MHz by adjusting system jumper (JP1). (The internal frequency depend on CPU.)

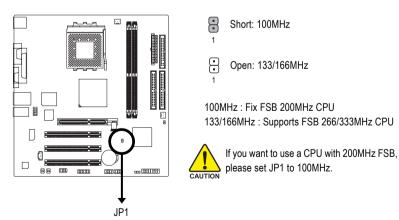

### Step 2: Install the Central Processing Unit (CPU)



Before installing the processor, adhere to the following warning:

Please make sure the CPU type is supported by the motherboard. 1.



- 2. The processor will overheat without the heatsink and/or fan, resulting in permanent irreparable damage.
- 3. If you do not match the CPU socket Pin 1 and CPU cut edge well, it will cause improper installation. Please change the insert orientation.
- 4. Apply thermal grease between the processor and cooling fan.
- 5. Never run the processor without the heatsink properly and firmly attached. Permanent damage will result
- 6. Please set the CPU host frequency in accordance with your processor's specifications. We don't recommend you to set the system bus frequency over the CPU's specification because these specific bus frequencies are not the standard specifications for CPU, chipset and most of the peripherals. Whether your system can run under these specific bus frequencies properly will depend on your hardware configurations, including CPU, Memory, Cards...etc.

### Step 2-1: CPU Installation




Figure 1.

Pull the rod to the 90-degree directly.




Figure 2.

Locate Pin 1 in the socket and look for a cut edge on the CPU upper corner. Insert the CPU into the

socket. (Do not force the CPU into the socket.) Then move the socket lever to the locked position while holding pressure on the center of the CPU.

### Step 2-2: CPU Cooling Fan Installation



Figure 1. Apply the thermal tape(or grease) to provide better heat conduction between your CPU and cooling fan.




Figure 2. Fasten the cooling fan supporting-base onto the CPU socket on the motherboard




Figure 3. Make sure the CPU fan is plugged to the CPU fan connector, than the install completely.


### Step 3: Install Memory Modules



Before installing the memory modules, adhere to the following warning:Please note that the DIMM module can only fit in one direction due to the one notch. Wrong orientation will cause improper installation. Please change the insert orientation.

The motherboard has 2 dual inline memory module (DIMM) sockets. The BIOS will automatically detects memory type and size. To install the memory module, just push it vertically into the DIMM socket. The DIMM module can only fit in one direction due to the notch. Memory size can vary between sockets.

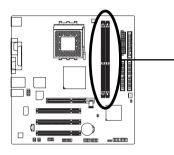

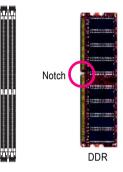

1. The DIMM socket has a notch, so the DIMM memory module can only fit in one direction.







2. Insert the DIMM memory module vertically into the DIMM socket. Then push it down.

 Close the plastic clip at both edges of the DIMM sockets to lock the DIMM module. Reverse the installation steps when you wish to remove the DIMM module.

### Step 4: Install AGP Card

- 1. Read the relate AGP card's instruction document before install the AGP card into the computer.
- If your AGP card has "AGP 4X/8X(1.5V) notch"(show below), please make sure your AGP card is AGP 4X/8X(1.5V).




3. Please carefully pull out the small white-drawable bar at the end of the AGP slot when you try to install/ uninstall the AGP card. Please align the AGP card to the onboard AGP slot and press firmly down on the slot. Make sure your AGP card is locked by the small white-drawable bar.



### Step 5: Install I/O Peripherals Cables

### Step 5-1: I/O Back Panel Introduction



#### PS/2 Keyboard and PS/2 Mouse connector

This connector supports standard PS/2 keyboard and PS/2 mouse.

#### Parallel port (LPT)

Device like printer can be connected to Parallel port.

#### • Serial port (COMA)

Mouse and modem etc. can be connected to Serial port.

#### O VGA port

Monitor can be connected to VGA port.

#### LAN port

LAN is fast Ethernet with 10/100Mbps speed.

#### USB port

Before you connect your device(s) into USB connector(s), please make sure your device(s) such as USB keyboard, mouse, scanner, zip, speaker...etc. Have a standard USB interface. Also make sure your OS supports USB controller. If your OS does not support USB controller, please contact OS vendor for possible patch or driver upgrade. For more information please contact your OS or device(s) vendors.

#### Line Out jack

Connect the stereo speakers or earphone to this connector.

#### S Line In jack


Devices like CD-ROM, walkman etc. can be connected to Line In jack.

#### MIC In jack

Microphone can be connect to MIC In jack.

After installation of the audio driver, you are able to use 2/4/6-channel audio feature by software selection. You can connect "Front speaker" to "Line Out" jack, Connect "Rear speaker" to "Line In" jack and connect "Center/Subwoofer" to "MIC In" jack.


### Step 5-2: Connectors Introduction

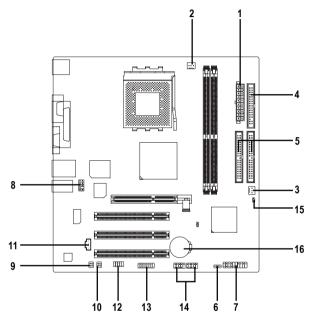

1) ATX	9)	SUR_CEN
2) CPU_FA	N 10)	SPDIF
3) SYS_FA	N 11)	CD_IN
4) FDD	12)	СОМВ
5) IDE1 / ID	DE2 13)	GAME
6) PWR_LE	ED 14)	F_USB1 / F_USB2
7) F_PANE	L 15)	CLR_CMOS
8) F_AUDI	0 16)	BAT

### 1) ATX (ATX Power)


AC power cord should only be connected to your power supply unit after ATX power cable and other related devices are firmly connected to the mainboard.

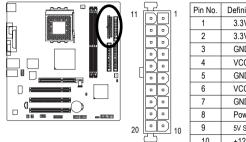

1	Pin No.	Definition	Pin No.	Definition
	1	3.3V	11	3.3V
	2	3.3V	12	-12V
	3	GND	13	GND
	4	VCC	14	PS_ON(soft on/off)
	5	GND	15	GND
	6	VCC	16	GND
	7	GND	17	GND
	8	Power Good	18	-5V
10	9	5V SB (stand by +5V)	19	VCC
	10	+12V	20	VCC

### 2) CPU\_FAN (CPU Fan Connector)

Please note, a proper installation of the CPU cooler is essential to prevent the CPU from running under abnormal condition or damaged by overheating. The CPU fan connector supports Max. current up to 600 mA.

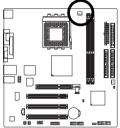


1		
· ·	_	

Pin No.	Definition	
1	GND	
2	+12V	
3	Sense	

### 3) SYS\_FAN (System Fan Connector)

This connector allows you to link with the cooling fan on the system case to lower the system temperature.

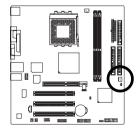


	1
5	•
- 11	· 1
Ľ	•

Pin No.	Definition
1	GND
2	+12V
3	Sense

#### 4) FDD (Floppy Connector)


Please connect the floppy drive ribbon cables to FDD. It supports 360K, 1.2M, 720K, 1.44M and 2.88M bytes floppy disk types.

The red stripe of the ribbon cable must be the same side with the Pin1.

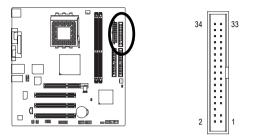


#### 5) IDE1 / IDE2 (IDE1 / IDE2 Connector)

Please connect first hard disk to IDE1 and connect CD-ROM to IDE2. The red stripe of the ribbon cable must be the same side with the Pin1.

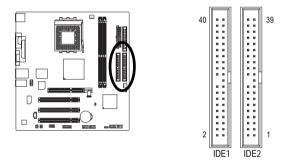

#### 6) PWR\_LED

PWR\_LED is connect with the system power indicator to indicate whether the system is on/off. It will blink when the system enters suspend mode.

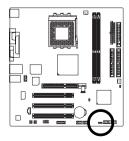


1 ....

Pin No.	Definition
1	MPD+
2	MPD-
3	MPD-

### 7) F\_PANEL (2 x 10 pins Connector)


Please connect the power LED, PC speaker, reset switch and power switch etc. of your chassis front panel to the F\_PANEL connector according to the pin assignment below.

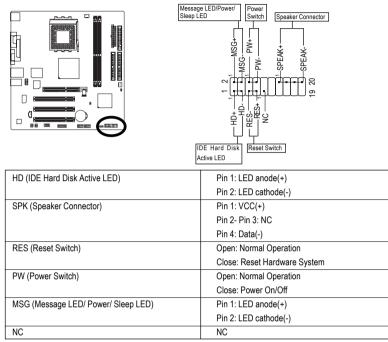

### 8) F\_AUDIO (Front Audio Connector)

If you want to use Front Audio connector, you must remove 5-6, 9-10 Jumper.

In order to utilize the front audio header, your chassis must have front audio connector. Also please make sure the pin assignment on the cable is the same as the pin assignment on the MB header. To find out if the chassis you are buying support front audio connector, please contact your dealer. Please note, you can have the alternative of using front audio connector or of using rear audio connector to play sound.

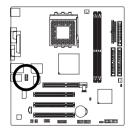




Pin No.	Definition
1	MIC
2	GND
3	MIC_BIAS
4	Power
5	Front Audio (R)
6	Rear Audio (R)
7	Reserved
8	No Pin
9	Front Audio (L)
10	Rear Audio (L)

#### 9) SUR\_CEN (Surround Center Connector)

Please contact your nearest dealer for optional SUR\_CEN cable.

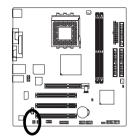




Pin No.	Definition
1	SUR OUTL
2	SUR OUTR
3	GND
4	No Pin
5	CENTER_OUT
6	BASS_OUT

#### 10) SPDIF (SPDIF Out Connector)

The SPDIF output is capable of providing digital audio to external speakers or compressed AC3 data to an external Dolby Digital Decoder. Use this feature only when your stereo system has digital input function. Be careful with the polarity of the SPDIF connector. Check the pin assignment carefully while you connect the SPDIF cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional SPDIF cable, please contact your local dealer.

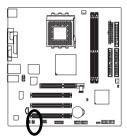




Pin No.	Definition
1	VCC
2	No Pin
3	SPDIF
4	NC
5	GND
6	GND

#### 11) CD\_IN (CD In Connector)

Connect CD-ROM or DVD-ROM audio out to the connector.

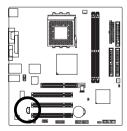




Pin No.	Definition
1	CD-L
2	GND
3	GND
4	CD-R

### 12) COMB (COM B Connector)

Be careful with the polarity of the COMB connector. Check the pin assignment carefully while you connect the COMB cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional COMB cable, please contact your local dealer.

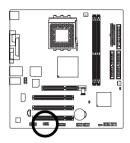




Pin No.	Definition
1	NDCDB-
2	NSINB
3	NSOUTB
4	NDTRB-
5	GND
6	NDSRB-
7	NRTSB-
8	NCTSB-
9	NRIB-
10	No Pin

### 13) GAME (Game Connector)

This connector supports joystick, MIDI keyboard and other relate audio devices. Check the pin assignment while you connect the game cables. Please contact your nearest dealer for optional game cables.

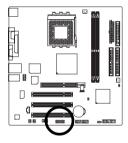




Pin No.	Definition	Pin No.	Definition
1	VCC	9	GPSA1
2	GRX1_R	10	GND
3	GND	11	GRY1_R
4	GPSA2	12	VCC
5	VCC	13	GPSB1
6	GRX2_R	14	MSO_R
7	GRY2_R	15	GPSB2
8	MSI_R	16	No Pin

### 14) F\_USB1 / F\_USB2 (Front USB Connector)

Be careful with the polarity of the front USB connector. Check the pin assignment carefully while you connect the front USB cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional front USB cable, please contact your local dealer.

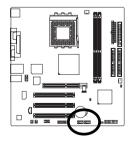




Pin No.	Definition
1	Power
2	Power
3	USB Dx-
4	USB Dy-
5	USB Dx+
6	USB Dy+
7	GND
8	GND
9	No Pin
10	NC


#### 15) CLR\_CMOS (Clear CMOS)

You may clear the CMOS data to its default values by this jumper. To clear CMOS, temporarily short 1-2 pin. Default doesn't include the "Shunter" to prevent from improper use this jumper.

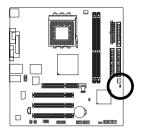

Close: Clear CMOS
Close: Clear CMOS
Open: Normal

#### 16) BAT (Battery)

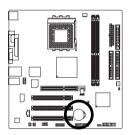



#### CAUTION

- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to the manufacturer's instructions.

If you want to erase CMOS ...

- 1. Turn OFF the computer and unplug the power cord.
- 2. Remove the battery, wait for 30 seconds.
- 3. Re-install the battery.
- 4. Plug the power cord and turn ON the computer.

# Chapter 2 BIOS Setup

BIOS Setup is an overview of the BIOS Setup Program. The program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

#### ENTERING SETUP

Powering ON the computer and pressing <Del> immediately will allow you to enter Setup. If you require more advanced BIOS settings, please go to "Advanced BIOS" setting menu. To enter Advanced BIOS setting menu, press "Ctrl+F1" key on the BIOS screen.

••••••		
$\overline{<\!\!\uparrow\!\!>\!\!<\!\!\downarrow\!\!>\!\!<\!\!\leftrightarrow\!\!>\!\!<\!\!\rightarrow\!\!>}$	Move to select item	
<enter></enter>	Select Item	
<esc></esc>	Main Menu - Quit and not save changes into CMOS Status Page Setup Menu	
	and Option Page Setup Menu - Exit current page and return to Main Menu	
<+/PgUp>	Increase the numeric value or make changes	
<-/PgDn>	Decrease the numeric value or make changes	
<f1></f1>	General help, only for Status Page Setup Menu and Option Page Setup Menu	
<f2></f2>	Item Help	
<f5></f5>	Restore the previous CMOS value from CMOS, only for Option Page Setup Menu	
<f6></f6>	Load the file-safe default CMOS value from BIOS default table	
<f7></f7>	F7> Load the Optimized Defaults	
<f8></f8>	F8> Q-Flash utility	
<f9></f9>	System Information	
<f10></f10>	Save all the CMOS changes, only for Main Menu	

#### CONTROL KEYS

#### Main Menu

The on-line description of the highlighted setup function is displayed at the bottom of the screen.

#### Status Page Setup Menu / Option Page Setup Menu

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc>.

### The Main Menu (For example: BIOS Ver. : F5)

Once you enter Award BIOS CMOS Setup Utility, the Main Menu (as figure below) will appear on the screen. The Main Menu allows you to select from eight setup functions and two exit choices. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

•	Standard CMOS Features	Load Fail-Safe Defaults
▶	Advanced BIOS Features	Load Optimized Defaults
▶	Integrated Peripherals	Set Supervisor Password
▶	Power Management Setup	Set User Password
▶	PnP/PCI Configurations	Save & Exit Setup
▶	PC Health Status	Exit Without Saving
•	Frequency/Voltage Control	
ESC	: Quit	↑↓→←: Select Item
F8:	Q-Flash	F10: Save & Exit Setup
Time, Date, Hard Disk Type		

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software



If you can't find the setting you want, please press "Ctrl+F1" to search the advanced option hidden.

• Standard CMOS Features

This setup page includes all the items in standard compatible BIOS.

Advanced BIOS Features

This setup page includes all the items of Award special enhanced features.

- Integrated Peripherals
   This setup page includes all onboard peripherals.
- Power Management Setup This setup page includes all the items of Green function features.
- PnP/PCI Configuration This setup page includes all the configurations of PCI & PnP ISA resources.
- PC Health Status

This setup page is the System auto detect Temperature, voltage, fan, speed.

Frequency/Voltage Control

This setup page is control CPU clock and frequency ratio.

Load Fail-Safe Defaults

Fail-Safe Defaults indicates the value of the system parameters which the system would be in safe configuration.

Load Optimized Defaults

Optimized Defaults indicates the value of the system parameters which the system would be in best performance configuration.

#### Set Supervisor Password

Change, set, or disable password. It allows you to limit access to the system and Setup, or just to Setup.

Set User Password

Change, set, or disable password. It allows you to limit access to the system.

Save & Exit Setup

Save CMOS value settings to CMOS and exit setup.

• Exit Without Saving

Abandon all CMOS value changes and exit setup.

### **Standard CMOS Features**

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software Standard (MOS Features

		Staluaru CMOS Features	
	Date (mm:dd:yy)	Tue, Nov 2 2004	Item Help
	Time (hh:mm:ss)	22:31:24	Menu Level
			Change the day, month,
▶	IDE Primary Master	[None]	year
	IDE Primary Slave	[None]	
▶	IDE Secondary Master	[None]	<week></week>
▶	IDE Secondary Slave	[None]	Sun. to Sat.
	Drive A	[1.44M, 3.5"]	<month></month>
	Drive B	[None]	Jan. to Dec.
	Floppy 3 Mode Suport	[Disabled]	
			<day></day>
	Halt On	[All, But Keyboard]	1 to 31 (or maximum
			allowed in the month)
	Base Memory	640K	
	Extended Memory	127M	<year></year>
	Total Memory	128M	1999 to 2098
Ţ.		+/-/PU/PD: Value F10: Save ESC F6: Fail-Safe Defaults F7:	: Exit F1: General Help Optimized Defaults

#### ං Date

The date format is <week>, <month>, <day>, <year>.

- Week The week, from Sun to Sat, determined by the BIOS and is display only
- Month The month, Jan. Through Dec.
- Day The day, from 1 to 31 (or the maximum allowed in the month)

#### ං Time

The times format in <hour> <minute> <second>. The time is calculated base on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00.

#### ○ IDE Primary Master, Slave / IDE Secondary Master, Slave

The category identifies the types of hard disk from drive C to F that has been installed in the computer. There are two types: auto type, and manual type. Manual type is user-definable; Auto type which will automatically detect HDD type.

Note that the specifications of your drive must match with the drive table. The hard disk will not work properly if you enter improper information for this category.

If you select User Type, related information will be asked to enter to the following items. Enter the information directly from the keyboard and press <Enter>. Such information should be provided in the documentation form your hard disk vendor or the system manufacturer.

- Cylinder Number of cylinders
- ➡ Head Number of heads
- ▶ Precomp Write precomp
- ▶ Landing Zone Landing zone
- ➡ Sector Number of sectors

If a hard disk has not been installed, select NONE and press <Enter>.

#### Drive A / Drive B

The category identifies the types of floppy disk drive A or drive B that has been installed in the computer.

➡ None	No floppy drive installed
➡ 360K, 5.25"	5.25 inch PC-type standard drive; 360K byte capacity.
▶ 1.2M, 5.25"	5.25 inch AT-type high-density drive; 1.2M byte capacity
	(3.5 inch when 3 Mode is Enabled).
₱ 720K, 3.5"	3.5 inch double-sided drive; 720K byte capacity
▶ 1.44M, 3.5"	3.5 inch double-sided drive; 1.44M byte capacity.
▶ 2.88M. 3.5"	3.5 inch double-sided drive: 2.88M byte capacity.

#### ☞ Floppy 3 Mode Support (for Japan Area)

- Disabled Normal Floppy Drive. (Default value)
- Drive A Drive A is 3 mode Floppy Drive.
- Drive B Drive B is 3 mode Floppy Drive.
- ➡ Both Drive A & B are 3 mode Floppy Drives.

#### つ Halt on

The category determines whether the computer will stop if an error is detected during power up.

The system boot will not stop for any error that may be detected and you
will be prompted.
Whenever the BIOS detects a non-fatal error the system will be stopped.
The system boot will not stop for a keyboard error; it will stop for all other errors. (Default value)
The system boot will not stop for a disk error; it will stop for all other errors.
The system boot will not stop for a keyboard or disk error; it will stop for all other errors.

#### Memory

The category is display-only which is determined by POST (Power On Self Test) of the BIOS.

#### 

The POST of the BIOS will determine the amount of base (or conventional) memory installed in the system.

The value of the base memory is typically 512K for systems with 512K memory installed on the motherboard, or 640K for systems with 640K or more memory installed on the motherboard.

#### **>>** Extended Memory

The BIOS determines how much extended memory is present during the POST. This is the amount of memory located above 1 MB in the CPU's memory address map.

#### 

This item displays the memory size that used.

### **Advanced BIOS Features**

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software Advanced BIOS Features

	Auvanceu BIOS Features	
First Boot Device	[Floppy]	Item Help
Second Boot Device	[HDD-0]	Menu Level
Third Boot Device	[CDROM]	Select Boot Device
Password Check	[Setup]	priority
		[Floppy]
		Boot from floppy
		[LS120]
		Boot from LS120
		2000 110 10110
		[HDD-0]
		Boot from First HDD
		[HDD-1]
		Boot from Second HDD
↑↓→←: Move Enter: Select	+/-/PU/PD: Value F10: Save	ESC: Exit F1: General Help
F5: Previous Values	F6: Fail-Safe Defaults	F7: Optimized Defaults

#### ∽ First / Second / Third Boot Device

CP

➡ Floppy	Select your boot device priority by Floppy.	
▶ LS120	Select your boot device priority by LS120.	
➡ HDD-0~3	Select your boot device priority by HDD-0~3.	
➡ SCSI	Select your boot device priority by SCSI.	
➡ CDROM	Select your boot device priority by CDROM.	
➡ ZIP	Select your boot device priority by ZIP.	
➡ USB-FDD	Select your boot device priority by USB-FDD.	
➡ USB-ZIP	Select your boot device priority by USB-ZIP.	
➡ USB-CDROM	Select your boot device priority by USB-CDROM.	
➡ USB-HDD	Select your boot device priority by USB-HDD.	
▶ LAN	Select your boot device priority by LAN.	
Disabled	Select your boot device priority by Disabled.	
Password Check		

# System The system can not boot and can not access to Setup page will be denied if the correct password is not entered at the prompt.

✤ Setup The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt. (Default value)

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software Integrated Peripherals

	integrated peripherals	
OnChip IDE Channel0	[Enabled]	Item Help
OnChip IDE Channell	[Enabled]	Menu Level)
AC97 Audio	[Auto]	
VIA Onboard LAN	[Enabled]	If a hard disk
USB 1.1 Controller	[Enabled]	controller card is
USB 2.0 Controller	[Enabled]	used, set at Disabled
USB Keyboard Support	[Disabled]	
USB Mouse Support	[Disabled]	[Enabled]
On-Chip LAN Boot ROM	[Disabled]	Enable onboard IDE
Onboard Serial Port 1	[3F8/IRQ4]	channel
Onboard Serial Port 2	[2F8/IRQ3]	
Onboard Parallel Port	[378/IRQ7]	[Disabled]
Parallel Port Mode	[SPP]	Disable onboard IDE
Game Port Address	[201]	channel
Midi Port Address	[Disabled]	
x Midi Port IRQ	10	
↑↓→←: Move Enter: Select	+/-/PU/PD: Value F10: Save ESC:	Exit F1: General Help
F5: Previous Values		Optimized Defaults

#### ∽ OnChip IDE Channel0

When set at "Enabled", it allows you to use the onboard primary PCI IDE. If a hard disk controller card is used, please set at "Disabled".

- ➡ Enabled Enable onboard 1st channel IDE port. (Default value)
- Disabled Disable onboard 1st channel IDE port.

#### OnChip IDE Channel1

When set at "Enabled", it allows you to use the onboard secondary PCI IDE. If a hard disk controller card is used, please set at "Disabled".

- ✤ Enabled Enable onboard 2nd channel IDE port. (Default value)
- Disabled Disable onboard 2nd channel IDE port.

#### 🗢 AC97 Audio

Enabled	Enable onboard AC'97 audio function. (Default value)
Disabled	Disable this function.

#### ☞ VIA Onboard LAN

Enabled Enable onboard LAN function. (Default value)Disabled Disable this function.

#### ☞ USB 1.1 Controller

Disable this function if you are not using the onboard USB feature.

- ➡ Enabled Enable USB 1.1 controller. (Default value)
- Disabled Disable USB 1.1 controller.

#### USB 2.0 Controller

Disable this function if you are not using the onboard USB feature.

- Enabled Enable USB 2.0 controller. (Default value)
- Disabled Disable USB 2.0 controller.

#### ☞ USB Keyboard Support

Disabled
 Disable USB keyboard support. (Default value)

••

#### ☞ USB Mouse Support

- Enabled Enable USB mouse support.
- Disabled Disable USB mouse support. (Default value)

#### ∽ On-Chip LAN Boot ROM

This function decide whether to invoke the boot ROM of the onboard LAN chip.

- Disabled Disable this function. (Default Value)
- Enabled Enable this function.

#### Onboard Serial Port 1

- ➡ Auto BIOS will automatically setup the port 1 address.
- ▶ 3F8/IRQ4 Enable onboard Serial port 1 and address is 3F8. (Default value)
- ▶ 2F8/IRQ3 Enable onboard Serial port 1 and address is 2F8.
- ➡ 3E8/IRQ4 Enable onboard Serial port 1 and address is 3E8.
- ▶ 2E8/IRQ3 Enable onboard Serial port 1 and address is 2E8.
- Disabled Disable onboard Serial port 1.

#### ∽ Onboard Serial Port 2

- ➡ Auto BIOS will automatically setup the port 2 address.
- ➡ 3F8/IRQ4 Enable onboard Serial port 2 and address is 3F8.
- ▶ 2F8/IRQ3 Enable onboard Serial port 2 and address is 2F8. (Default value)
- ➡ 3E8/IRQ4 Enable onboard Serial port 2 and address is 3E8.
- ▶ 2E8/IRQ3 Enable onboard Serial port 2 and address is 2E8.
- Disabled Disable onboard Serial port 2.

#### ∽ Onboard Parallel port

This feature allows you to select from a given set of parameters if the parallel port uses the onboard I/O controller.

- ▶ 378/IRQ7 Enable onboard LPT port and address is 378/IRQ7. (Default value)
- ▶ 278/IRQ5 Enable onboard LPT port and address is 278/IRQ5.
- Disabled Disable onboard LPT port.
- ▶ 3BC/IRQ7 Enable onboard LPT port and address is 3BC/IRQ7.

#### ☞ Parallel Port Mode

- ▶ SPP Using Parallel port as Standard Parallel Port. (Default value)
- ▶ EPP Using Parallel port as Enhanced Parallel Port.
- ➡ ECP Using Parallel port as Extended Capabilities Port.
- ▶ ECP+EPP Using Parallel port as ECP & EPP mode.

#### ☞ Game Port Address

- ▶ 201 Set Game Port Address to 201. (Default value)
- ▶ 209 Set Game Port Address to 209.
- Disabled Disable this function.

#### Midi Port Address

- ➡ 300 Set Midi Port Address to 300.
- ➡ 330 Set Midi Port Address to 330.
- Disabled Disable this function. (Default value)

#### Midi Port IRQ

- ➡ 5 Set Midi Port IRQ to 5.
- ▶ 10 Set Midi Port IRQ to 10. (Default value)

### Power Management Setup

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software

Power Management Setup			
ACPI Suspend Type	[S1 (POS)]	Item Help	
x USB Device Wake-Up from S3	Disabled	Menu Level)	
Power LED in S1 state	[Blinking]	[S1]	
Soft-Off by PWRBIN	[Instant-Off]	Set suspend type to	
AC BACK Function	[Soft-Off]	Power On Suspend under	
Keyboard Power On	[Disabled]	ACPI OS	
Mouse Power On	[Disabled]		
PME Event Wake Up	[Enabled]	[S3]	
ModemRingOn/WakeOnLan	[Enabled]	Set suspend type to	
Resume by Alarm	[Disabled]	Suspend to RAM under	
x Date (of Month) Alarm	Everyday	ACPI OS	
x Time (hh:mm:ss) Alarm	0 : 0 : 0		
↑↓→←: Move Enter: Select	+/-/PU/PD: Value F10: Save ESC:	Exit F1: General Help	
F5: Previous Values	F6: Fail-Safe Defaults F7:	Optimized Defaults	

#### CPI Suspend Type

- ➡ S1(POS) Set ACPI suspend type to S1. (Default value)
- ➡ S3(STR) Set ACPI suspend type to S3.

#### ○ USB Device Wake-Up From S3

This function will available when "ACPI Suspend Type" set at "S3/STR".

- Disabled USB device can't wake up system from S3.
- ▶ Enabled USB device can wake up system from S3. (Default value)

#### ∽ Power LED in S1 state

- Blinking In standby mode(S1), power LED will blink. (Default value)
- ➡ Dual/Off In standby mode(S1):
  - a. If you use single color LED, power LED will ture off.
  - b. If you use dual color LED, power LED will ture to another color.

#### Soft-off by PWR-BTTN

Instant-off
 Press power button then Power off instantly. (Default value)
 Delay 4 Sec.
 Press power button 4 sec to Power off. Enter suspend if button is pressed less than 4 sec.

#### → AC BACK Function

- Soft-Off Always in Off state when AC back to the system. (Default value)
- ✤ Full-On Always power on the system when AC back.
- Memory System power on depends on the status before AC lost.

#### ☞ Keyboard Power On

- ✤ Disabled Disable this function. (Default value)
- Password Enter from 1 to 5 characters to set the keyboard power on password.
- Keyboard 98 If your keyboard has a "POWER Key" button, you can press the key to power on your system.

#### Mouse Power On

Disabled Disabled this function. (Default value)
 Enabled Power on system by mouse event.

#### ☞ PME Event Wake Up

When set at Enabled, any PCI-PM event can awake the system from a PCI-PM controlled stated. This feature requires an ATX power supply that provides at least 1A on the +5VSB lead.

- Disabled Disable this function.
- ▶ Enabled Enable PME as wake up event. (Default value)

#### ModemRingOn/WakeOnLan

An incoming call via modem or an input signal comes from the other client server on the LAN can awake the system from any suspend state.

- Disabled Disable Modem Ring on function.
- ✤ Enabled Enable Modem Ring on function. (Default value)

#### ☞ Resume by Alarm

You can set "Resume by Alarm" item to enabled and key in Data/time to power on system.

- Disabled
   Disable this function. (Default Value)
- Enabled Enable alarm function to POWER ON system.

If RTC Alarm Lead To Power On is Enabled.

 Date (of Month) Alarm :
 Everyday, 1~31

 Time (hh: mm: ss) Alarm :
 (0~23) : (0~59) : (0~59)

#### ∽ KB Power ON Password

➡ Enter

Input password (from 1 to 5 characters) and press Enter to set the keyboard power on password.

### **PnP/PCI** Configurations

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software PnP/PCI Configurations

	THE/TET CONFIGURACIONS	
PCI 1 IRQ Assignment	[Auto]	Item Help
PCI 2 IRQ Assignment	[Auto]	Menu Level
PCI 3 IRQ Assignment	[Auto]	
		Device(s) using this
		INT:
		Display Cntrlr
		-Bus 1 Dev 0 Func 0
↑↓→←: Move Enter: Select	+/-/PU/PD: Value F10: Save	ESC: Exit F1: General Help
F5: Previous Values	F6: Fail-Safe Defaults	F7: Optimized Defaults

~	PCI 1 IRQ Assignment	
	<ul> <li>➤ Auto</li> <li>➤ 3,4,5,7,9,10,11,12,14,15</li> </ul>	Auto assign IRQ to PCI 1. (Default value) Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 1.
Ċ	PCI 2 IRQ Assignment → Auto → 3,4,5,7,9,10,11,12,14,15	Auto assign IRQ to PCI 2. (Default value) Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 2.
Ċ	PCI 3 IRQ Assignment → Auto → 3,4,5,7,9,10,11,12,14,15	Auto assign IRQ to PCI 3. (Default value) Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 3.

### **PC Health Status**

CMOS	Setup	Utility-Copyrigh	t (C)	1984-2004	Award	Software	
		PC Heal	th St	atus			

	PC Health Status	
Vcore	0K.	Item Help
25VSTR	CK	Menu Level
+3.3V	CK	
+12V	CK	
Current System Temperature	32 °C	
Current CPU Temperature	45 °C	
Current CPU FAN Speed	4687 RPM	
Current SYSTEM FAN Speed	0 RPM	
CPU FAN Fail Warning	[Disabled]	
SYSTEM FAN Fail Warning	[Disabled]	
↑↓→←: Move Enter: Select	+/-/PU/PD: Value F10: Save	ESC: Exit F1: General Help
F5: Previous Values		F7: Optimized Defaults

#### ∽ Current Voltage (V) Vcore / 25VSTR / +3.3V / +12V

➡ Detect system's voltage status automatically.

#### ∽ Current System/CPU Temperature

▶ Detect system/CPU temperature automatically.

#### ∽ Current CPU/SYSTEM FAN Speed (RPM)

➡ Detect CPU/system Fan speed status automatically.

#### ∽ CPU FAN Fail Warning

Disabled Fan warning function disable. (Default value)
 Enabled Fan warning function enable.

#### ∽ SYSTEM FAN Fail Warning

- ✤ Disabled Fan warning function disable. (Default value)
- ➡ Enabled Fan warning function enable.

### Frequency/Voltage Control

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software Frequency/Voltage Control

	JJ	
Auto Detect PCI/DIMM Clk	[Enabled]	Item Help
Spread Specturm	[Enabled]	Menu Level)
CPU Host Clock Control	[Disabled]	
x CPU Clock	133MHz	
DRAM Clock (MHz)	[By SPD]	
AGP OverVoltage Control	[Auto]	
DIMM OverVoltage Control	[Auto]	
↑↓→←: Move Enter: Select	+/-/PU/PD: Value F10: Save H	SC: Exit F1: General Help
F5: Previous Values	F6: Fail-Safe Defaults I	7: Optimized Defaults

Incorrect using these features may cause your system broken. For power End-User use only!

#### ∽ Auto Detect PCI/DIMM Clk

- Disabled Disable this function.
- Enabled Auto detect PCI/DIMM clock. (Default value)

#### ∽ Spread Spectrum

- Disabled Disable this function.
- ✤ Enabled Enable clock spread spectrum. (Default value)

#### ∽ CPU Host Clock Control

Note: If system hangs up before enter CMOS setup utility, wait for 20 sec for times out reboot. When time out occur, system will reset and run at CPU default Host clock at next boot.

- Disabled
   Disable CPU Host Clock Control. (Default value)
   Enabled
   Enable CPU Host Clock Control.
- Enabled Enable CPU Host (

#### CPU Clock

▶ 133MHz ~ 165MHz Set CPU Host Clock from 100MHz to 165MHz.

#### ☞ DRAM Clock (MHz)

Wrong frequency may make system can't boot, clear CMOS to overcome wrong frequency issue.

- ▶ By SPD Set memory frequency by DRAM SPD data. (Default value)
- ▶ 133-DDR266 If you use DDR266 DRAM module, please set at "133-DDR266".
- ▶ 166-DDR333 If you use DDR333 DRAM module, please set at "166-DDR333".

#### GP OverVoltage Control

Increase AGP voltage may get stable for over-clock. But it may damage to AGP card when enable this feature.

Muto	Supply voltage as AGP required. (Default value)
+0.1V	Increase AGP voltage +0.1V.
▶ +0.2V	Increase AGP voltage +0.2V.
+0.3∨	Increase AGP voltage +0.3V.

#### ∽ DIMM OverVoltage Control

Increase DIMM voltage may get stable for over-clock. But it may damage to memory module when enable this feature.

 ▶ Auto
 Supply voltage as DIMM required. (Default value)

 ▶ +0.1V
 Increase DIMM voltage +0.1V.

 ▶ +0.2V
 Increase DIMM voltage +0.2V.

 ▶ +0.3V
 Increase DIMM voltage +0.3V.

### Load Fail-Safe Defaults

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software

<ul> <li>Standard CMOS Features</li> <li>Advanced BIOS Features</li> <li>Integrated Peripherals</li> <li>Power Mag.</li> </ul>	Load Fail-Safe Defaults Load Optimized Defaults Set Supervisor Password	
PnP/PCI Load Fail-Safe Defaults (Y/N)? N     PC Health Sectors     Frequency/Voltage Control		
ESC: Quit     ↑↓→←: Select Item       F8: Q-Flash     F10: Save & Exit Setup		
Load Fail-Safe Defaults		

Fail-Safe defaults contain the most appropriate values of the system parameters that allow minimum system performance.

### Load Optimized Defaults

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software

> > >	Standard CMOS Features Advanced BIOS Features Integrated Peripherals Power May	Load Fail-Safe Defaults Load Optimized Defaults Set Supervisor Password	
) ) )	Prover Ma     Prequency/Voltage Control     Prequency/Voltage Control		
	ESC: Quit     ↑↓→←: Select Item       F8: Q-Flash     F10: Save & Exit Setup		
Load Optimized Defaults			

Selecting this field loads the factory defaults for BIOS and Chipset Features which the system automatically detects.

### Set Supervisor/User Password

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software

<ul> <li>Standard CMOS Features</li> <li>Advanced BIOS Features</li> <li>Integrated Peripherals</li> <li>Power Magnetic Contemporation</li> </ul>	Load Fail-Safe Defaults Load Optimized Defaults Set Supervisor Password	
PnP/PCI     Enter Password:       PC Health     Enter Password:       Frequency/Voltage Control     Enter Password:		
ESC: Quit F8: Q-Flash	↑↓→←: Select Item F10: Save & Exit Setup sable Password	

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

Type the password, up to eight characters, and press <Enter>. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable password, just press <Enter> when you are prompted to enter password. A message "PASSWORD DISABLED" will appear to confirm the password being disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

The BIOS Setup program allows you to specify two separate passwords:

SUPERVISOR PASSWORD and a USER PASSWORD. When disabled, anyone may access all BIOS Setup program function. When enabled, the Supervisor password is required for entering the BIOS Setup program and having full configuration fields, the User password is required to access only basic items.

If you select "System" at "Password Check" in Advance BIOS Features Menu, you will be prompted for the password every time the system is rebooted or any time you try to enter Setup Menu.

If you select "Setup" at "Password Check" in Advance BIOS Features Menu, you will be prompted only when you try to enter Setup.

### Save & Exit Setup

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software

*	Standard CMOS Features Advanced BIOS Features Integrated Peripherals	Load Fail-Safe Defaults Load Optimized Defaults Set Supervisor Password
, , ,	Power Ma     Cover Ma       PnP/PCI     Save to GMOS and EXIT (Y/N)? Y       PC Health     Cover Ma       Frequency/Voltage Control     Cover Ma	
	Q-Flash	↑↓→←: Select Item F10: Save & Exit Setup
Save & Exit Setup		

Type "Y" will quit the Setup Utility and save the user setup value to RTC CMOS. Type "N" will return to Setup Utility.

### **Exit Without Saving**

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software			
Standard OMOS Features     Advanced BIOS Features     Integrated Peripherals     Power Ma     PhP/PCI     DC Health communication	Quit Without S	Load Fail-Safe Defaults Load Optimized Defaults Set Supervisor Password Aving (Y/N)? N	
Frequency/Voltage Control			
ESC: Quit		↑↓→←: Select Item	
F8: Q-Flash		F10: Save & Exit Setup	
Abandon all Data			

Type "Y" will quit the Setup Utility without saving to RTC CMOS. Type "N" will return to Setup Utility.

# Chapter 3 Install Drivers

#### **Install Drivers**



#### Pictures below are shown in Windows XP

Insert the driver CD-title that came with your motherboard into your CD-ROM drive, the driver CD-title will auto start and show the installation guide. If not, please double click the CD-ROM device icon in "My computer", and execute the setup.exe.

#### **Install Chipset Drivers**

This page shows the drivers that need to be installed for the system. Click each item to install the driver manually or switch to the *Marcer* to install the drivers automatically.



The "Xpress Install" uses the "Click and Go" technology to install the drivers automatically. Just select the drivers you want then click the "GO" button. The *Mercer* will finish the installation for you automatically.





#### Driver install finished ! You have to reboot system !

#### Item Description

- VIA 4IN1 Driver
   For INF, AGP, IDE and DMA driver.
- VIA KM400 VGA Driver
   For KM400 drvier.
- USB Patch for WinXP
   This patch driver can help you to resolve the USB device wake up S3 hang up issue in XP.
- VIA Lan Driver
   For VIA Phy family Lan driver.
- VIA AC97 Audio Driver Audio driver for VIA codec chipset.
- VIA USB 2.0 Controller
   For VIA VT8233 (VT6203) / VIA VT8235 / VIA VT8237 / VIA VT8237R south bridge.



For USB2.0 driver support under Windows XP operating system, please use Windows Service Pack. After install Windows Service Pack, it will show a question mark "?" in "Universal Serial Bus controller" under "Device Manager". Please remove the question mark and restart the system (System will auto-detect the right USB2.0 driver).



Taiwan (Headquarters)
GIGA-BYTE TECHNOLOGY CO., LTD.

Address: No.6, Bau Chiang Road, Hsin-Tien, Taipei Hsien, Taiwan. TEL: +886 (2) 8912-4888 FAX: +886 (2) 8912-4003 Tech. Support : http://tw.giga-byte.com/TechSupport/ServiceCenter.htm Non-Tech. Support(Sales/Marketing) : http://ggts.gigabyte.com.tw/nontech.asp WEB address (English): http://www.gigabyte.com.tw

WEB address (Chinese): http://chinese.giga-byte.com

#### • U.S.A.

G.B.T. INC.

Address: 17358 Railroad St, City of Industry, CA 91748.

TEL: +1 (626) 854-9338 FAX: +1 (626) 854-9339

Tech. Support :

http://www.giga-byte.com/TechSupport/ServiceCenter.htm Non-Tech. Support(Sales/Marketing) :

http://ggts.gigabyte.com.tw/nontech.asp

WEB address : http://www.giga-byte.com

#### Germany

G.B.T. TECHNOLOGY TRADING GMBH

Address: Friedrich-Ebert-Damm 112 22047 Hamburg Deutschland

TEL: +49-40-2533040 (Sales)

+49-1803-428468 (Tech.)

FAX: +49-40-25492343 (Sales)

+49-1803-428329 (Tech.)

Tech. Support :

http://de.giga-byte.com/TechSupport/ServiceCenter.htm Non-Tech. Support(Sales/Marketing) :

http://ggts.gigabyte.com.tw/nontech.asp

WEB address : http://www.gigabyte.de

#### Japan

NIPPON GIGA-BYTE CORPORATION WEB address : http://www.gigabyte.co.jp

#### Singapore

GIGA-BYTE SINGAPORE PTE. LTD.

Tech. Support :

http://tw.giga-byte.com/TechSupport/ServiceCenter.htm Non-Tech. Support(Sales/Marketing) :

http://ggts.gigabyte.com.tw/nontech.asp

#### U.K.

G.B.T. TECH. CO., LTD.

Address: GUnit 13 Avant Business Centre 3 Third Avenue, Denbigh West Bletchley Milton Keynes, MK1 1DR, UK, England TEL: +44-1908-362700 FAX: +44-1908-362709 Tech. Support : http://uk.giga-byte.com/TechSupport/ServiceCenter.htm Non-Tech. Support(Sales/Marketing) : http://ggts.gigabyte.com.tw/nontech.asp WEB address : http://uk.giga-byte.com

#### The Netherlands

GIGA-BYTE TECHNOLOGY B.V. TEL: +31 40 290 2088 NL Tech.Support: 0900-GIGABYTE (0900-44422983) BE Tech.Support: 0900-84034 FAX: +31 40 290 2089 Tech. Support : http://nz.giga-byte.com/TechSupport/ServiceCenter.htm Non-Tech. Support(Sales/Marketing) : http://ggts.gigabyte.com.tw/nontech.asp WEB address : http://www.giga-byte.nl

China	Australia	
NINGBO G.B.T. TECH. TRADING CO., LTD.	GIGABYTE TECHNOLOGY PTY. LTD.	
Tech. Support :	Tech. Support :	
http://cn.giga-byte.com/TechSupport/ServiceCenter.htm	http://www.giga-byte.com.au/TechSupport/ServiceCenter.http://www.giga-byte.com.au/TechSupport/ServiceCenter.http://www.giga-byte.com.au/TechSupport/ServiceCenter.http://www.giga-byte.com.au/TechSupport/ServiceCenter.http://www.giga-byte.com.au/TechSupport/ServiceCenter.http://www.giga-byte.com.au/TechSupport/ServiceCenter.http://www.giga-byte.com.au/TechSupport/ServiceCenter.http://www.giga-byte.com.au/TechSupport/ServiceCenter.http://www.giga-byte.com.au/TechSupport/ServiceCenter.http://www.giga-byte.com.au/TechSupport/ServiceCenter.http://www.giga-byte.com.au/TechSupport/ServiceCenter.http://www.giga-byte.com.au/TechSupport/ServiceCenter.http://www.giga-byte.com.au/TechSupport/ServiceCenter.http://www	
Non-Tech. Support(Sales/Marketing) :	Non-Tech. Support(Sales/Marketing) :	
http://ggts.gigabyte.com.tw/nontech.asp	http://ggts.gigabyte.com.tw/nontech.asp WEB address : http://www.giga-byte.com.au	
WEB address : http://www.gigabyte.com.cn		
Shanghai	France	
TEL: +86-021-63410999	GIGABYTE TECHNOLOGY FRANCES S.A.R.L.	
FAX: +86-021-63410100	Tech. Support :	
Beijing	http://tw.giga-byte.com/TechSupport/ServiceCenter.htm	
TEL: +86-010-82886651	Non-Tech. Support(Sales/Marketing) :	
FAX: +86-010-82888013	http://ggts.gigabyte.com.tw/nontech.asp	
Wuhan	WEB address : http://www.gigabyte.fr	
TEL: +86-027-87851061	• Russia	
FAX: +86-027-87851330	Moscow Representative Office Of Giga-Byte Technology C	
GuangZhou	Ltd.	
TEL: +86-020-87586074	Tech. Support :	
FAX: +86-020-85517843	http://tw.giga-byte.com/TechSupport/ServiceCenter.htm	
Chengdu	Non-Tech. Support(Sales/Marketing) :	
TEL: +86-028-85236930	http://ggts.gigabyte.com.tw/nontech.asp	
FAX: +86-028-85256822	WEB address : http://www.gigabyte.ru	
Xian	Poland	
TEL: +86-029-85531943	Representative Office Of Giga-Byte Technology Co., Ltd.	
FAX: +86-029-85539821	POLAND	
Shenyang	Tech. Support :	
TEL: +86-024-23960918	http://tw.giga-byte.com/TechSupport/ServiceCenter.htm	
FAX: +86-024-23960918-809	Non-Tech. Support(Sales/Marketing) :	
	http://ggts.gigabyte.com.tw/nontech.asp	
	WEB address : http://www.gigabyte.pl	

LTD. nSupport/ServiceCenter.htm ing) : ch.asp yte.com.au NCES S.A.R.L. ort/ServiceCenter.htm ing) : ch.asp /te.fr Giga-Byte Technology Co.,