

# GA-K8NF-9

AMD Socket 939 Processor Motherboard

## User's Manual

Rev. 1005

12ME-K8NF9-1005

## Declaration of Conformity

(for access)

G.B.T. Technology, Inc. d/b/a **GA-K8NF**  
Ausschleiger Weg 41, 4F 20327 Hamburg, Germany

(description of the apparatus, system, installation to which it refers)  
declare that the product

### Motherboard

GA-K8NF-9

is in conformity with conformity is declared)  
(reference to the specification and standard to which it conforms)  
in accordance with 90/338 EEC EMC Directive

<input type="checkbox"/> EN 55011	Limits and methods of measurement of radio disturbance characteristics of industrial, scientific and medical (ISM) high frequency equipment	<input checked="" type="checkbox"/> EN 61000-3-2	Disturbances in supply systems caused by household appliances and similar electrical equipment "Voltage fluctuations"
<input type="checkbox"/> EN 55013	Limits and methods of measurement of radio disturbance characteristics of household appliances and associated equipment	<input checked="" type="checkbox"/> EN 55024	Information Technology equipment immunity requirements
<input type="checkbox"/> EN 55014-1	Limits and methods of measurement of radio disturbance characteristics of portable tools and similar electrical apparatus	<input type="checkbox"/> EN 50082-1	Generic immunity standard Part 1: Radiated, electromagnetic and light voltage
<input type="checkbox"/> EN 55015	Limits and methods of measurement of radio disturbance characteristics of fluorescent lamps and luminaires	<input type="checkbox"/> EN 50082-2	Generic immunity standard Part 2: Industrial environment
<input type="checkbox"/> EN 55020	Immunity from radio interference of household appliances and associated equipment	<input type="checkbox"/> EN 55014-2	Immunity requirements for household appliances tools and similar apparatus
<input checked="" type="checkbox"/> EN 55022	Limits and methods of measurement of radio disturbance characteristics of information technology equipment	<input type="checkbox"/> EN 50081-2	EMC requirements for uninterruptible power systems (UPS)
<input type="checkbox"/> DIN VDE 0885 Part 12	Cabled distribution systems: Equipment for signal and data transmission from sound and television signals		

### CE marking



(EC conformity marking)

The manufacturer also declares the conformity of above mentioned product with the actual required safety standards in accordance with LVD 7323 EEC

<input type="checkbox"/> EN 60085	Safety requirements for mains operated household and similar general use electrical appliances	<input type="checkbox"/> EN 60950	Safety for information technology equipment including electrical business equipment
<input type="checkbox"/> EN 60335	Safety of household and similar electrical appliances	<input type="checkbox"/> EN 50081-1	General and Safety requirements for uninterruptible power systems (UPS)

### Manufacturer/Importer

(Stamp)

Date: Dec. 24, 2004

Signature: Jimmy Huang  
Name: Timmy Huang

## DECLARATION OF CONFORMITY

Per FCC Part 2, Section 2.1077(a)



Responsible Party Name: G.B.T. INC. (U.S.A.)

Address: 17358 Railroad Street

City of Industry, CA 91748

Phone/Fax No: (818) 854-9338/ (818) 854-9339

hereby declares that the product

Product Name: **Motherboard**

Model Number: GA-K8NF-9

Conforms to the following specifications:

FCC Part 15, Subpart B, Section 15.107(a) and Section 15.109

(a), Class B Digital Device

### Supplementary Information:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful and (2) this device must accept any interference received, including that may cause undesired operation.

Representative Person's Name: ERIC LU

Signature: Eric Lu

Date: Dec. 24, 2004

## Copyright

© 2005 GIGA-BYTE TECHNOLOGY CO., LTD. All rights reserved.

The trademarks mentioned in the manual are legally registered to their respective companies.

## Notice

The written content provided with this product is the property of Gigabyte.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without Gigabyte's prior written permission. Specifications and features are subject to change without prior notice.

## Product Manual Classification

In order to assist in the use of this product, Gigabyte has categorized the user manual in the following:

- For quick installation, please refer to the "Hardware Installation Guide" included with the product.
- For detailed product information and specifications, please carefully read the "Product User Manual".
- For detailed information related to Gigabyte's unique features, please go to the "Technology Guide" section on Gigabyte's website to read or download the information you need.


For more product details, please click onto Gigabyte's website at [www.gigabyte.com.tw](http://www.gigabyte.com.tw)

# Table of Contents


GA-K8NF-9 Motherboard Layout .....	6
Block Diagram .....	7
 Chapter 1 Hardware Installation .....	 9
1-1 Considerations Prior to Installation .....	9
1-2 Feature Summary .....	10
1-3 Installation of the CPU and Fan Heat Sink .....	12
1-3-1 Installation of the CPU .....	12
1-3-2 Installation of the Fan Heat Sink .....	13
1-4 Installation of Memory .....	14
1-5 Installation of Expansion Cards .....	16
1-6 I/O Back Panel Introduction .....	17
1-7 Connectors Introduction .....	18
 Chapter 2 BIOS Setup .....	 29
The Main Menu (For example: BIOS Ver. : F9) .....	30
2-1 Standard CMOS Features .....	32
2-2 Advanced BIOS Features .....	34
2-3 Integrated Peripherals .....	35
2-4 Power Management Setup .....	39
2-5 PnP/PCI Configurations .....	40
2-6 PC Health Status .....	41
2-7 MB Intelligent Tweaker(M.I.T.) .....	43
2-8 Top Performance .....	44
2-9 Load Optimized Defaults .....	45
2-10 Set Supervisor/User Password .....	45
2-11 Save & Exit Setup .....	46
2-12 Exit Without Saving .....	46

Chapter 3 Drivers Installation .....	47
3-1 Install Chipset Drivers .....	47
3-2 Software Application .....	48
3-3 Software Information .....	48
3-4 Hardware Information .....	49
3-5 Contact Us .....	49
Chapter 4 Appendix .....	51
4-1 Unique Software Utilities .....	51
4-1-1 EasyTune 5 Introduction .....	51
4-1-2 Xpress Recovery2 Introduction .....	52
4-1-3 Flash BIOS Method Introduction .....	54
4-1-4 Serial ATA BIOS Setting Utility Introduction .....	63
4-1-5 2- / 4- / 6- / 8- Channel Audio Function Introduction .....	69
4-2 Troubleshooting .....	75

# GA-K8NF-9 Motherboard Layout

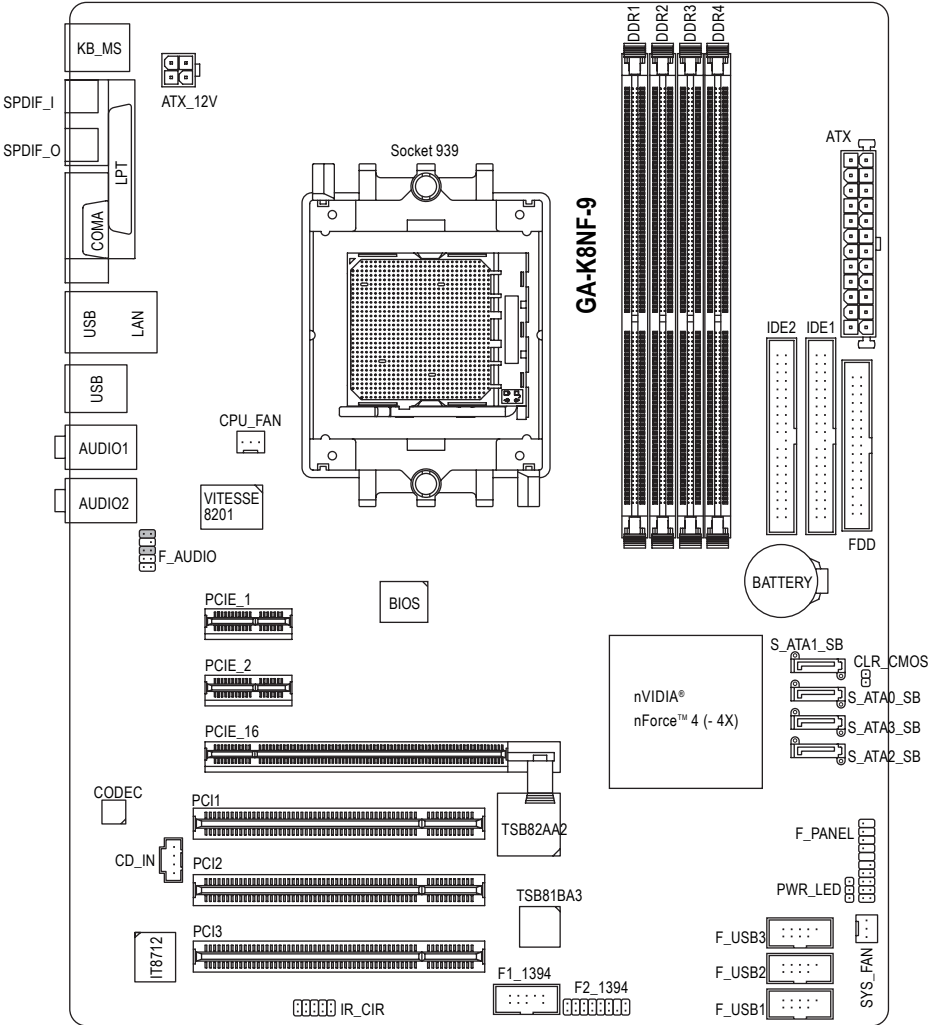

# Block Diagram

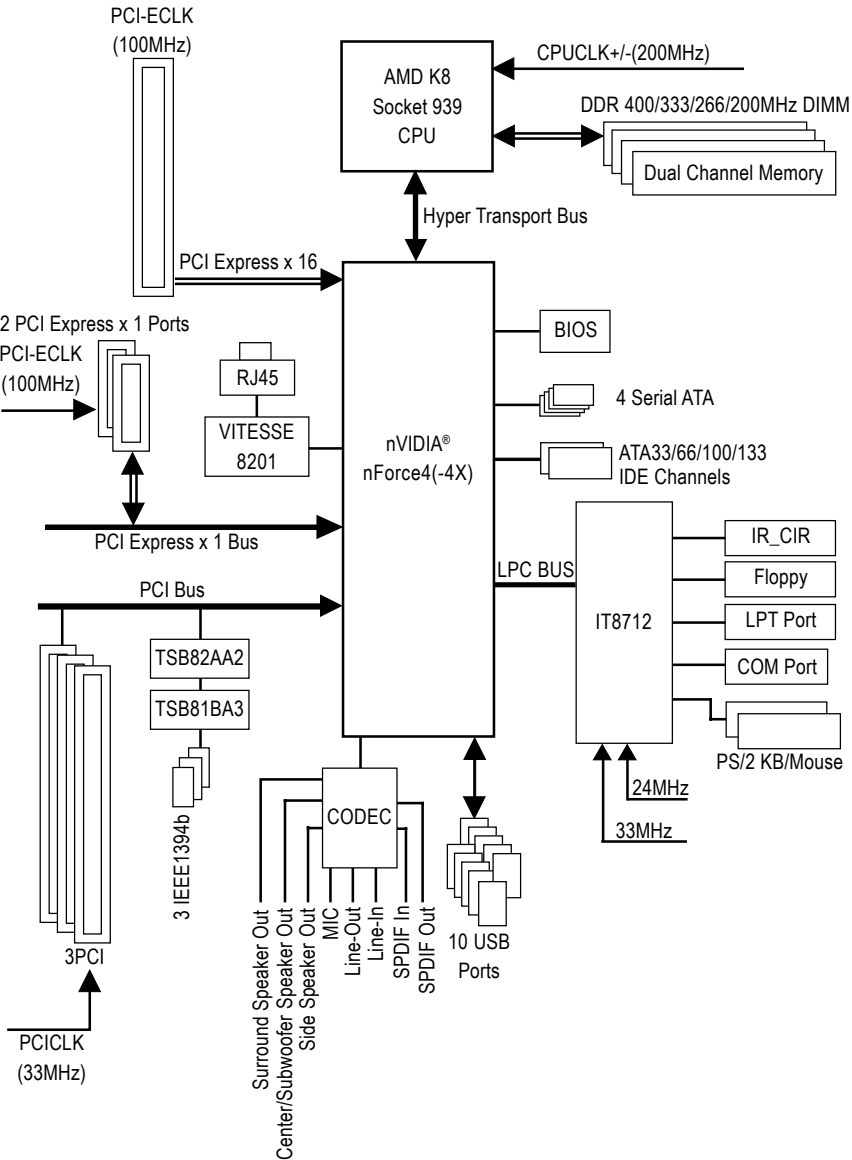

[illegible]

# Chapter 1 Hardware Installation

## 1-1 Considerations Prior to Installation

### Preparing Your Computer

The motherboard contains numerous delicate electronic circuits and components which can become damaged as a result of electrostatic discharge (ESD). Thus, prior to installation, please follow the instructions below:

1. Please turn off the computer and unplug its power cord.
2. When handling the motherboard, avoid touching any metal leads or connectors.
3. It is best to wear an electrostatic discharge (ESD) cuff when handling electronic components (CPU, RAM).
4. Prior to installing the electronic components, please have these items on top of an antistatic pad or within a electrostatic shielding container.
5. Please verify that the power supply is switched off before unplugging the power supply connector from the motherboard.

### Installation Notices

1. Prior to installation, please do not remove the stickers on the motherboard. These stickers are required for warranty validation.
2. Prior to the installation of the motherboard or any hardware, please first carefully read the information in the provided manual.
3. Before using the product, please verify that all cables and power connectors are connected.
4. To prevent damage to the motherboard, please do not allow screws to come in contact with the motherboard circuit or its components.
5. Please make sure there are no leftover screws or metal components placed on the motherboard or within the computer casing.
6. Please do not place the computer system on an uneven surface.
7. Turning on the computer power during the installation process can lead to damage to system components as well as physical harm to the user.
8. If you are uncertain about any installation steps or have a problem related to the use of the product, please consult a certified computer technician.

### Instances of Non-Warranty

1. Damage due to natural disaster, accident or human cause.
2. Damage as a result of violating the conditions recommended in the user manual.
3. Damage due to improper installation.
4. Damage due to use of uncertified components.
5. Damage due to use exceeding the permitted parameters.
6. Product determined to be an unofficial Gigabyte product.

## 1-2 Feature Summary

CPU	<ul style="list-style-type: none"> <li>♦ Socket 939 for AMD Sempron™ / Althlon™ 64 / Althlon™ 64 FX / Althlon™ 64 X2 Dual-Core processor (K8)</li> <li>♦ 1600MHz system bus</li> <li>♦ Supports core frequencies in excess of 3000+ and faster</li> </ul>
Chipset	<ul style="list-style-type: none"> <li>♦ nVIDIA® nForce4(-4X) Chipset</li> <li>♦ Supported on the Win 2000/XP operating systems</li> </ul>
Memory	<ul style="list-style-type: none"> <li>♦ 4 DDR DIMM memory slots (supports up to 4GB memory) <sup>(Note 1)</sup></li> <li>♦ Supports dual channel DDR 400/333/266/200 DIMM</li> </ul>
Slots	<ul style="list-style-type: none"> <li>♦ 1 PCI Express x 16 slot</li> <li>♦ 2 PCI Express x 1 slots</li> <li>♦ 3 PCI slots</li> </ul>
IDE Connections	<ul style="list-style-type: none"> <li>♦ 2 IDE connection (UDMA 33/ATA 66/ATA 100/ATA 133), allows connection of 4 IDE devices</li> <li>♦ Supported on the Win 2000/XP operating systems</li> </ul>
FDD Connections	<ul style="list-style-type: none"> <li>♦ 1 FDD connection, allows connection of 2 FDD devices</li> </ul>
Onboard SATA	<ul style="list-style-type: none"> <li>♦ 4 Serial ATA ports from nVIDIA® nForce4(-4X) controller (S_ATA0_SB, S_ATA1_SB, S_ATA2_SB, S_ATA3_SB)</li> <li>♦ Supported on the Win 2000/XP operating systems</li> </ul>
Peripherals	<ul style="list-style-type: none"> <li>♦ 1 parallel port supporting Normal/EPP/ECP mode</li> <li>♦ 1 serial port (COMA)</li> <li>♦ 10 USB 2.0/1.1 ports (rear x 4, front x 6 via cable)</li> <li>♦ 3 IEEE1394b ports (requires cable)</li> <li>♦ 1 front audio connector</li> <li>♦ 1 IR/CIR connector</li> <li>♦ 1 PS/2 keyboard port</li> <li>♦ 1 PS/2 mouse port</li> </ul>
Onboard LAN	<ul style="list-style-type: none"> <li>♦ VITESSE 8201 phy (10/100/1000 Mbit)</li> <li>♦ 1 RJ 45 port</li> <li>♦ Supported on the Win 2000/XP operating systems</li> </ul>
Onboard Audio	<ul style="list-style-type: none"> <li>♦ ALC850 CODEC</li> <li>♦ Supports Jack Sensing function</li> <li>♦ Supports 2 / 4 / 6 / 8 channel audio</li> <li>♦ Supports Line In ; Line Out (Front Speaker Out) ; MIC ; Surround Speaker Out (Rear Speaker Out) ; Center/Subwoofer Speaker Out ; Side Speaker Out connection</li> <li>♦ SPDIF In/Out connection</li> <li>♦ CD In connection</li> <li>♦ Supported on the Win 2000/XP operating systems</li> </ul>

(Note 1) Due to standard PC architecture, a certain amount of memory is reserved for system usage and therefore the actual memory size is less than the stated amount.

For example, 4 GB of memory size will instead be shown as 3.xxGB memory during system startup.

I/O Control	♦ IT8712F
Hardware Monitor	<ul style="list-style-type: none"> <li>♦ System voltage detection</li> <li>♦ CPU temperature detection</li> <li>♦ CPU / System fan speed detection</li> <li>♦ CPU warning temperature</li> <li>♦ CPU / System fan failure warning</li> <li>♦ CPU smart fan control</li> </ul>
Onboard SATA RAID	<ul style="list-style-type: none"> <li>♦ Onboard nForce4(-4X) chipset (S_ATA0_SB, S_ATA1_SB, S_ATA2_SB, S_ATA3_SB) <ul style="list-style-type: none"> <li>- supports data striping (RAID 0) or mirroring (RAID 1) function or striping + mirroring (RAID 0+1)</li> <li>- supports data transfer rate of up to 150 MB/s</li> <li>- supports hot plugging function</li> <li>- supports a maximum of 4 SATA connections</li> </ul> </li> <li>♦ Supported on the Win 2000/XP operating systems</li> </ul>
BIOS	<ul style="list-style-type: none"> <li>♦ Use of licensed AWARD BIOS</li> <li>♦ Supports Q-Flash</li> </ul>
Additional Features	<ul style="list-style-type: none"> <li>♦ Supports @BIOS</li> <li>♦ Supports EasyTune <sup>(Note 2)</sup></li> </ul>
Overclocking	♦ Over Voltage via BIOS (CPU/ DDR/ HT-Link/ Core Power)
Form Factor	♦ ATX form factor; 30.5cm x 24.4cm

(Note 2) EasyTune functions may vary depending on different motherboards.

## 1-3 Installation of the CPU and Fan Heat Sink



Before installing the CPU, please comply with the following conditions:

1. Please make sure that the motherboard supports the CPU.
2. Please take note of the one indented corner of the CPU. If you install the CPU in the wrong direction, the CPU will not insert properly. If this occurs, please change the insert direction of the CPU.
3. Please add an even layer of heat sink paste between the CPU and heatsink.
4. Please make sure the heatsink is installed on the CPU prior to system use, otherwise overheating and permanent damage of the CPU may occur.
5. Please set the CPU host frequency in accordance with the processor specifications. It is not recommended that the system bus frequency be set beyond hardware specifications since it does not meet the required standards for the peripherals. If you wish to set the frequency beyond the proper specifications, please do so according to your hardware specifications including the CPU, graphics card, memory, hard drive, etc.

### 1-3-1 Installation of the CPU

Check the processor pins to see that none are bent. Move the socket lever to the unlocked position as shown in Figure 1.(90° to the plane of the motherboard) prior to inserting the processor. The pin 1 location is designated on the processor by a copper triangle that matches up to a triangle on the socket as shown in Figure 2. Align the processor to the socket and gently lower it into place. Do not force the processor into the socket.

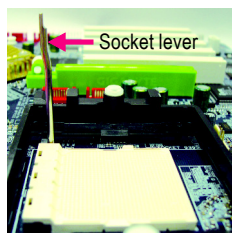


Fig.1  
Position lever at a 90 degree angle.

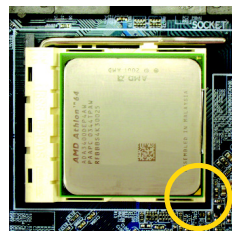


Fig.2  
A gold-colored triangle is marked one edge of the CPU. Please align this edge with the socket edge closest to the CPU lever. Gently place the CPU into position making sure that the CPU pins fit perfectly into their holes. Once the CPU is positioned into it socket, place one finger down on the middle of the CPU and gently press the metal lever back into its original position.



Please use extra care when installing the CPU. The CPU will not fit if positioned incorrectly. Rather than applying force, please change the positioning of the CPU.

### 1-3-2 Installation of the Fan Heat Sink

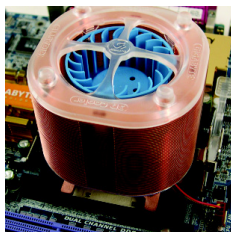


Fig.1

Before installing the heat sink, please first add an even layer of heat sink paste on the surface of the CPU. Install all the heat sink components (Please refer to the heat sink manual for detailed installation instructions).

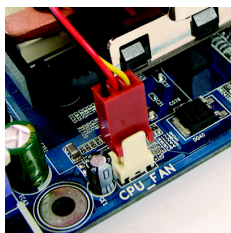


Fig.2

Please connect the heat sink power connector to the CPU\_FAN connector located on the motherboard so that the heat sink can properly function to prevent CPU overheating.



The heat sink may adhere to the CPU as a result of hardening of the heat sink paste. To prevent such an occurrence, it is suggested that either thermal tape rather than heat sink paste be used for heat dissipation or using extreme care when removing the heat sink.

## 1-4 Installation of Memory



Before installing the memory modules, please comply with the following conditions:

1. Please make sure that the memory used is supported by the motherboard. It is recommended that memory of similar capacity, specifications and brand be used.
2. Before installing or removing memory modules, please make sure that the computer power is switched off to prevent hardware damage.
3. Memory modules have a foolproof insertion design. A memory module can be installed in only one direction. If you are unable to insert the module, please switch the direction.

The motherboard supports DDR memory modules, whereby BIOS will automatically detect memory capacity and specifications. Memory modules are designed so that they can be inserted only in one direction. The memory capacity used can differ with each slot.

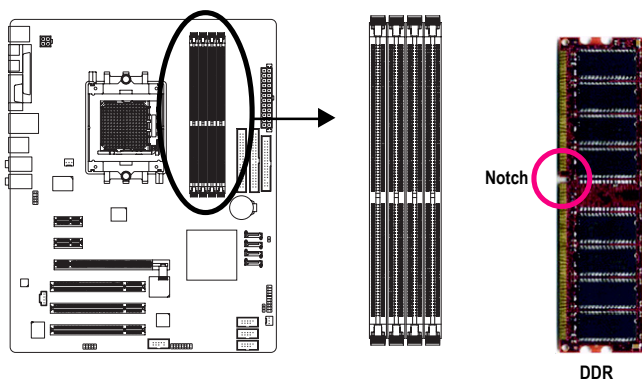


Fig.1

The DIMM socket has a notch, so the DIMM memory module can only fit in one direction. Insert the DIMM memory module vertically into the DIMM socket. Then push it down.



Fig.2

Close the plastic clip at both edges of the DIMM sockets to lock the DIMM module.

Reverse the installation steps when you wish to remove the DIMM module.

## Dual Channel DDR

GA-K8NF-9 supports the Dual Channel Technology. After operating the Dual Channel Technology, the bandwidth of Memory Bus will double.

GA-K8NF-9 includes 4 DIMM sockets, and each Channel has two DIMM sockets as following:

▶▶ Channel A : DDR 1, DDR 3

▶▶ Channel B : DDR 2, DDR 4

If you want to operate the Dual Channel Technology, please note the following explanations due to the limitation of nVIDIA chipset specifications.

1. Dual channel memory cannot be used if one DDR memory module is installed.
2. If two DDR memory modules are installed (same storage capacity), one must be added to a Channel A slot and the other in a Channel B slot in order to use dual channel memory.  
You can simply install the memory modules into slots of the same color but we recommend slotting them into DDR1 and DDR2. Dual channel memory cannot function if both DDR memory modules are installed on the same channel.
3. If four DDR memory modules are installed, please use memory of the same storage capacity in order to use dual channel memory and for BIOS to detect all the DDR memory modules.

The following table is for Dual Channel Technology combination: (DS: Double Side, SS: Single Side)

	DDR 1	DDR 2	DDR 3	DDR 4
2 memory modules	DS/SS	DS/SS	X	X
	X	X	DS/SS	DS/SS
4 memory modules	DS/SS	DS/SS	DS/SS	DS/SS



CAUTION


The GA-K8NF-9 doesn't support 3 memory modules. If 3 memory modules are installed, the system will not boot.

## 1-5 Installation of Expansion Cards

You can install your expansion card by following the steps outlined below:


1. Read the related expansion card's instruction document before install the expansion card into the computer.
2. Remove your computer's chassis cover, screws and slot bracket from the computer.
3. Press the expansion card firmly into expansion slot in motherboard.
4. Be sure the metal contacts on the card are indeed seated in the slot.
5. Replace the screw to secure the slot bracket of the expansion card.
6. Replace your computer's chassis cover.
7. Power on the computer, if necessary, setup BIOS utility of expansion card from BIOS.
8. Install related driver from the operating system.

Installing a PCI Express x 16 expansion card:

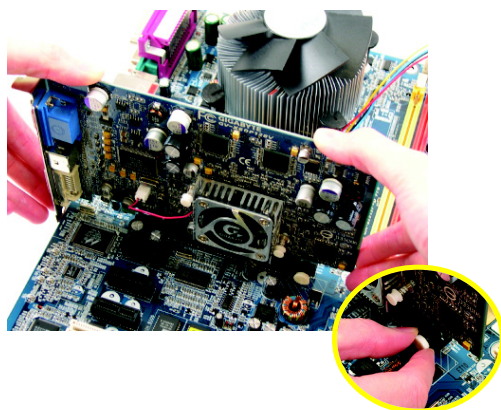

Please carefully pull out the small white-drawable bar at the end of the PCI Express x 16 slot when you try to install/uninstall the VGA card. Please align the VGA card to the onboard PCI Express x 16 slot and press firmly down on the slot. Make sure your VGA card is locked by the small white-drawable bar.

## 1-6 I/O Back Panel Introduction

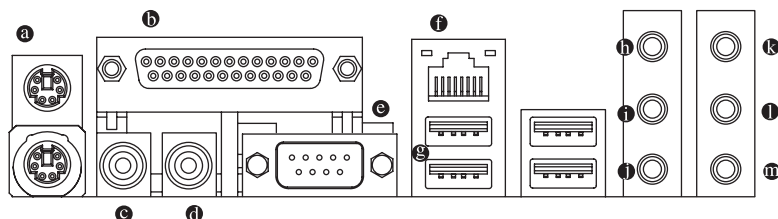

### ❶ PS/2 Keyboard and PS/2 Mouse Connector

To install a PS/2 port keyboard and mouse, plug the mouse to the upper port (green) and the keyboard to the lower port (purple).

### ❷ Parallel Port

The parallel port allows connection of a printer, scanner and other peripheral devices.

### ❸ SPDIF\_I (SPDIF In)

Use SPDIF In feature only when your device has digital output function.

### ❹ SPDIF\_O (SPDIF Out)

The SPDIF output is capable of providing digital audio to external speakers or compressed AC3 data to an external Dolby Digital Decoder.

### ❺ COMA (Serial Port)

Connects to serial-based mouse or data processing devices.

### ❻ LAN Port

The provided Internet connection is Gigabit Ethernet, providing data transfer speeds of 10/100/1000Mbps.

### ❼ USB port

Before you connect your device(s) into USB connector(s), please make sure your device(s) such as USB keyboard, mouse, scanner, zip, speaker...etc. have a standard USB interface. Also make sure your OS supports USB controller. If your OS does not support USB controller, please contact OS vendor for possible patch or driver upgrade. For more information please contact your OS or device(s) vendors.

### ❽ Line In

Devices like CD-ROM, walkman etc. can be connected to Line In jack.

### ❾ Line Out (Front Speaker Out)

Connect the stereo speakers, earphone or front surround speakers to this connector.

### ❿ MIC In

Microphone can be connected to MIC In jack.

### ⓫ Center/Subwoofer Speaker Out

Connect the Center/Subwoofer speakers to this connector.

### ⓬ Rear Speaker Out

Connect the rear surround speakers to this connector.


## ⑩ Side Speaker Out

Connect the side surround speakers to this connector.



You can use audio software to configure 2-/4-/6-/8-channel audio functioning.

## 1-7 Connectors Introduction

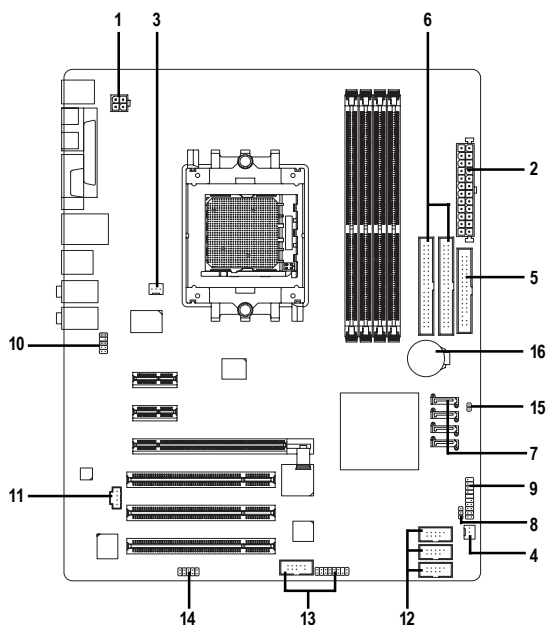

1) ATX_12V	9) F_PANEL
2) ATX (Power Connector)	10) F_AUDIO
3) CPU_FAN	11) CD_IN
4) SYS_FAN	12) F_USB1 / F_USB2 / F_USB3
5) FDD	13) F1_1394 / F2_1394
6) IDE1 / IDE2	14) IR_CIR
7) S_ATA0/1/2/3_SB	15) CLR_CMOS
8) PWR_LED	16) BATTERY

## 1/2 ATX\_12V/ATX (Power Connector)



With the use of the power connector, the power supply can supply enough stable power to all the components on the motherboard. Before connecting the power connector, please make sure that all components and devices are properly installed. Align the power connector with its proper location on the motherboard and connect tightly.

The ATX\_12V power connector mainly supplies power to the CPU. If the ATX\_12V power connector is not connected, the system will not start.


Caution!

Please use a power supply that is able to handle the system voltage requirements. It is recommended that a power supply that can withstand high power consumption be used (300W or greater). If a power supply is used that does not provide the required power, the result can lead to an unstable system or a system that is unable to start.

If you use a 24-pin ATX power supply, please remove the small cover on the power connector on the motherboard before plugging in the power cord; otherwise, please do not remove it.

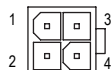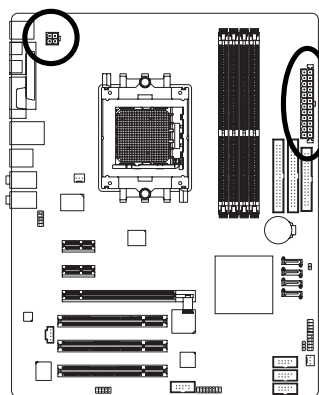

Pin No.	Definition
1	GND
2	GND
3	+12V
4	+12V

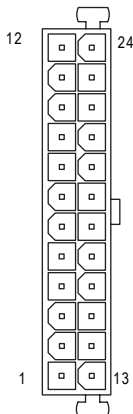

Pin No.	Definition
1	3.3V
2	3.3V
3	GND
4	+5V
5	GND
6	+5V
7	GND
8	Power Good
9	5V SB(stand by +5V)
10	+12V
11	+12V(Only for 24-pin ATX)
12	3.3V(Only for 24-pin ATX)
13	3.3V
14	-12V
15	GND
16	PS_ON(soft On/Off)
17	GND
18	GND
19	GND
20	-5V
21	+5V
22	+5V
23	+5V(Only for 24-pin ATX)
24	GND(Only for 24-pin ATX)

### 3/4) CPU\_FAN / SYS\_FAN (Cooler Fan Power Connector)



The cooler fan power connector supplies a +12V power voltage via a 3-pin power connector and possesses a foolproof connection design.

Most coolers are designed with color-coded power connector wires. A red power connector wire indicates a positive connection and requires a +12V power voltage. The black connector wire is the ground wire (GND).

Please remember to connect the power to the cooler to prevent system overheating and failure.

Caution!



Please remember to connect the power to the CPU fan to prevent CPU overheating and failure.

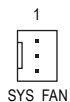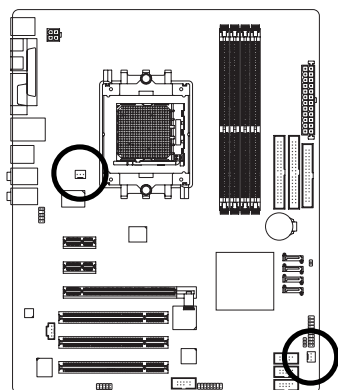

Pin No.	Definition
1	GND
2	+12V
3	Sense



## 5) FDD (FDD Connector)

The FDD connector is used to connect the FDD cable while the other end of the cable connects to the FDD drive. The types of FDD drives supported are: 360KB, 720KB, 1.2MB, 1.44MB and 2.88MB. Please connect the red power connector wire to the pin1 position.

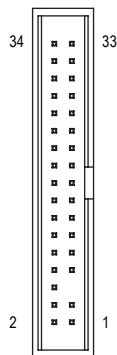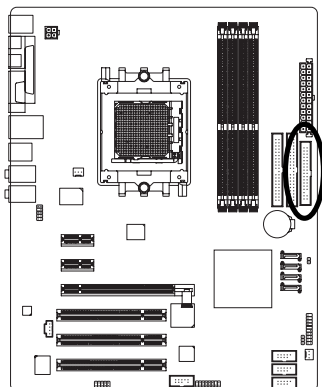



## 6) IDE1 / IDE2 (IDE Connector)

An IDE device connects to the computer via an IDE connector. One IDE connector can connect to one IDE cable, and the single IDE cable can then connect to two IDE devices (hard drive or optical drive). If you wish to connect two IDE devices, please set the jumper on one IDE device as Master and the other as Slave (for information on settings, please refer to the instructions located on the IDE device).

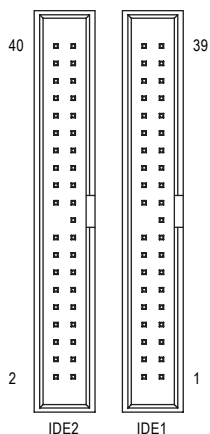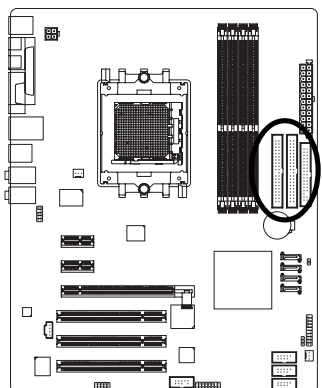

## 7) S\_ATA0/1/2/3\_SB (Serial ATA Connectors, Controlled by nForce4(-4X))


Serial ATA can provide up to 150MB/s transfer rate. Please refer to the BIOS setting for the Serial ATA and install the proper driver in order to work properly.

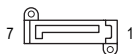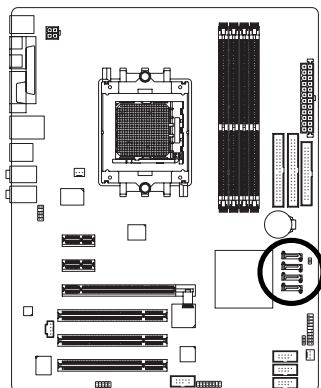

Pin No.	Definition
1	GND
2	TXP
3	TXN
4	GND
5	RXN
6	RXP
7	GND

## 8) PWR\_LED


PWR\_LED is connect with the system power indicator to indicate whether the system is on/off. It will blink when the system enters suspend mode.

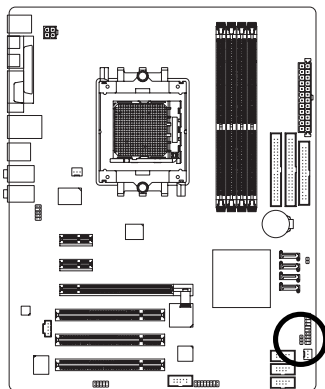

Pin No.	Definition
1	MPD+
2	MPD-
3	MPD-

## 9) F\_PANEL (Front Panel Jumper)

Please connect the power LED, PC speaker, reset switch and power switch etc. of your chassis front panel to the F\_PANEL connector according to the pin assignment below.

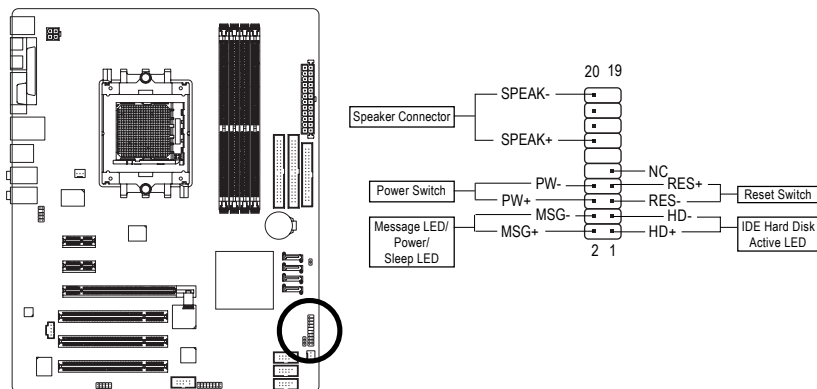


SPEAK (Speaker Connector) (Amber)	Pin 1: VCC(+) Pin 2- Pin 3: NC Pin 4: Data(-)
PW (Power Switch) (Red)	Open: Normal Operation Close: Power On/Off
MSG (Message LED/Power/Sleep LED) (Yellow)	Pin 1: LED anode(+) Pin 2: LED cathode(-)
RES (Reset Switch) (Green)	Open: Normal Operation Close: Reset Hardware System
HD (IDE Hard Disk Active LED) (Blue)	Pin 1: LED anode(+) Pin 2: LED cathode(-)
NC (Purple)	NC

## 10) F\_AUDIO (Front Audio Panel Connector)

If you want to use Front Audio connector, you must remove 5-6, 9-10 Jumper.


In order to utilize the front audio header, your chassis must have front audio connector. Also please make sure the pin assignments for the cable are the same as the pin assignments for the front audio header. To find out if the chassis you are buying support front audio connector, please contact your dealer. Please note, you can have the alternative of using front audio connector or of using rear audio connector to play sound.

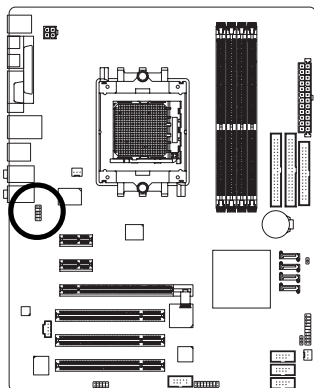

Pin No.	Definition
1	MIC
2	GND
3	MIC_BIAS
4	Power
5	FrontAudio(R)
6	Rear Audio(R)/Return R
7	NC
8	No Pin
9	FrontAudio(L)
10	Rear Audio(L)/Return L

## 11) CD\_IN (CD In Connector)



Connect CD-ROM or DVD-ROM audio out to the connector.

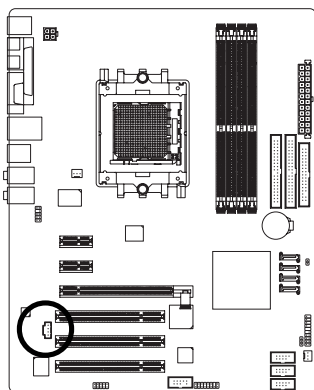

Pin No.	Definition
1	CD-L
2	GND
3	GND
4	CD-R

## 12) F\_USB1 / F\_USB2 / F\_USB3 (Front USB Connector)



Be careful with the polarity of the front USB connector. Check the pin assignment carefully while you connect the front USB cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional front USB cable, please contact your local dealer.

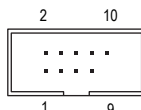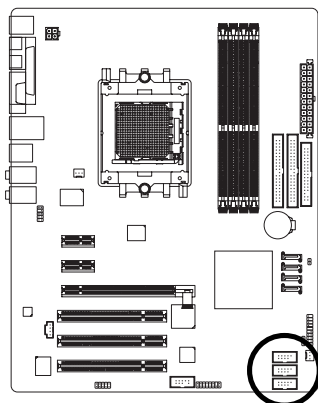


Pin No.	Definition
1	Power
2	Power
3	USB DX-
4	USB Dy-
5	USB DX+
6	USB Dy+
7	GND
8	GND
9	No Pin
10	NC

## 13) F1\_1394 / F2\_1394 (Front IEEE 1394 Connectors)

Serial interface standard set by Institute of Electrical and Electronics Engineers, which has features like high speed, high bandwidth and hot plug. Be careful with the polarity of the IEEE1394 connector. Check the pin assignment carefully while you connect the IEEE1394 cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional IEEE1394 cable, please contact your local dealer.

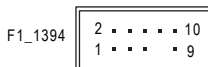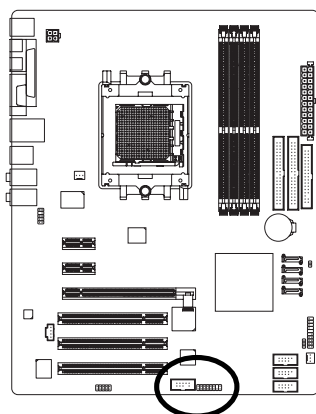


Pin No.	Definition
1	TPA0+
2	TPA0-
3	GND
4	GND
5	TPB0+
6	TPB0-
7	No Pin
8	Power
9	Power
10	GND

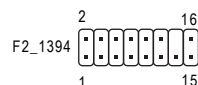

Pin No.	Definition
1	Power
2	Power
3	TPA1+
4	TPA1-
5	GND
6	GND
7	TPB1+
8	TPB1-
9	Power
10	Power
11	TPA2+
12	TPA2-
13	GND
14	No Pin
15	TPB2+
16	TPB2-

#### 14) IR\_CIR


Make sure the pin 1 on the IR device is align with pin one the connector. To enable the IR/CIR function, you are required to purchase an optional IR/CIR module. To use IR function only, please connect IR module to Pin1 to Pin5. Be careful with the polarity of the the IR/CIR connector. Check the pin assignment carefully while you connect the IR/CIR cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional IR/CIR cable, please contact your local dealer.

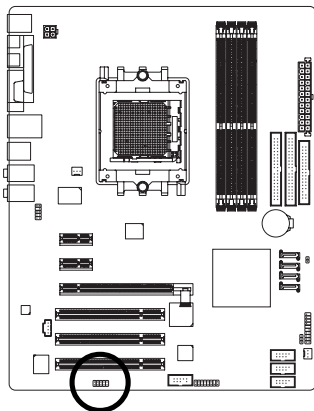

Pin No.	Definition
1	Power
2	NC
3	IRRX
4	GND
5	IRTX
6	NC
7	CIRRX
8	+5VSB
9	CIRTX
10	NC

#### 15) CLR\_CMOS (Clear CMOS)

You may clear the CMOS data to its default values by this jumper. To clear CMOS, temporarily short 1-2 pin. Default doesn't include the "Shunter" to prevent from improper use this jumper.


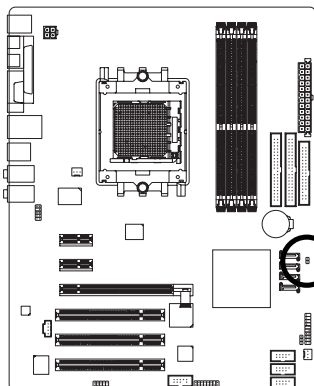


Open: Normal



Short: Clear CMOS

## 16) BATTERY

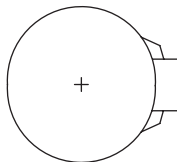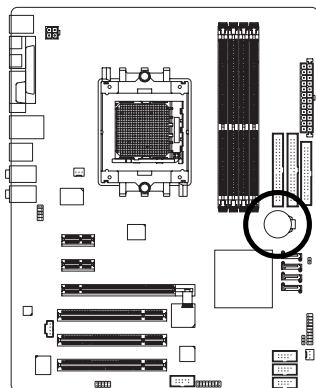

- ❖ Danger of explosion if battery is incorrectly replaced.
- ❖ Replace only with the same or equivalent type recommended by the manufacturer.
- ❖ Dispose of used batteries according to the manufacturer's instructions.

If you want to erase CMOS...

1. Turn off the computer and unplug the power cord.
2. Take out the battery gently and put it aside for about 10 minutes (Or you can use a metal object to connect the positive and negative pins in the battery holder to make them short for one minute).
3. Re-install the battery.
4. Plug the power cord and turn on the computer.



## Chapter 2 BIOS Setup

BIOS (Basic Input and Output System) includes a CMOS SETUP utility which allows user to configure required settings or to activate certain system features.

The CMOS SETUP saves the configuration in the CMOS SRAM of the motherboard.

When the power is turned off, the battery on the motherboard supplies the necessary power to the CMOS SRAM.

When the power is turned on, pushing the <Del> button during the BIOS POST (Power-On Self Test) will take you to the CMOS SETUP screen. You can enter the BIOS setup screen by pressing "Ctrl + F1".

When setting up BIOS for the first time, it is recommended that you save the current BIOS to a disk in the event that BIOS needs to be reset to its original settings. If you wish to upgrade to a new BIOS, either GIGABYTE's Q-Flash or @BIOS utility can be used.

Q-Flash allows the user to quickly and easily update or backup BIOS without entering the operating system. @BIOS is a Windows-based utility that does not require users to boot to DOS before upgrading BIOS but directly download and update BIOS from the Internet.

### CONTROL KEYS

<↑> <↓> <←> <→>	Move to select item
<Enter>	Select Item
<Esc>	Main Menu - Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu - Exit current page and return to Main Menu
<Page Up>	Increase the numeric value or make changes
<Page Down>	Decrease the numeric value or make changes
<F1>	General help, only for Status Page Setup Menu and Option Page Setup Menu
<F2>	Item Help
<F5>	Restore the previous CMOS value from CMOS, only for Option Page Setup Menu
<F7>	Load the Optimized Defaults
<F8>	Q-Flash utility
<F9>	System Information
<F10>	Save all the CMOS changes, only for Main Menu

### Main Menu

The on-line description of the highlighted setup function is displayed at the bottom of the screen.

### Status Page Setup Menu / Option Page Setup Menu

Press <F1> to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc>.




CAUTION

Because BIOS flashing is potentially risky, please do it with caution and avoid inadequate operation that may result in system malfunction.


**<F12> : For Boot Menu**

Select boot sequence for onboard (or add-on cards) device.

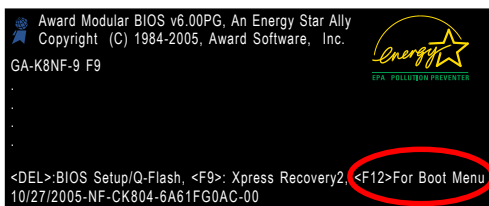


- **<F12> For Boot Menu**


Use <↑> or <↓> to select a device, then press enter to accept . Press <ESC> to exit this menu.

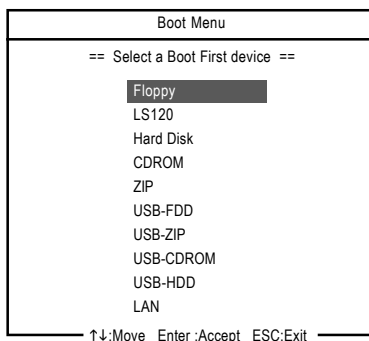

## The Main Menu (For example: BIOS Ver. : F9)

Once you enter Award BIOS CMOS Setup Utility, the Main Menu (as figure below) will appear on the screen. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

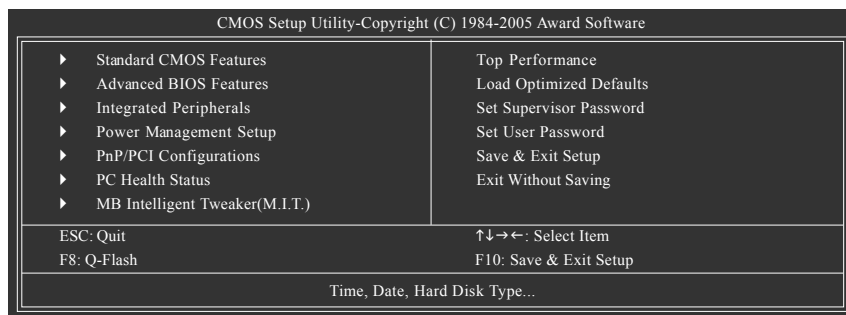

 **NOTE** If you can't find the setting you want, please press "Ctrl+F1" to search the advanced option hidden.

Please Load Optimized Defaults in the BIOS when somehow the system works not stable as usual. This action makes the system reset to the default for stability.

The BIOS Setup menus described in this chapter are for reference only and may differ from the exact settings for your motherboard.

**■ Standard CMOS Features**

This setup page includes all the items in standard compatible BIOS.

**■ Advanced BIOS Features**

This setup page includes all the items of Award special enhanced features.

**■ Integrated Peripherals**

This setup page includes all onboard peripherals.

**■ Power Management Setup**

This setup page includes all the items of Green function features.

**■ PnP/PCI Configuration**

This setup page includes all the configurations of PCI & PnP ISA resources.

**■ PC Health Status**

This setup page is the System auto detect Temperature, voltage, fan, speed.

**■ MB Intelligent Tweaker(M.I.T.)**

This setup page is control CPU clock and frequency ratio.

**■ Top Performance**

If you wish to maximize the performance of your system, set "Top Performance" as "Enabled".

**■ Set Supervisor Password**

Change, set, or disable password. It allows you to limit access to the system and Setup, or just to Setup.

**■ Set User Password**

Change, set, or disable password. It allows you to limit access to the system.

**■ Save & Exit Setup**

Save CMOS value settings to CMOS and exit setup.

**■ Exit Without Saving**

Abandon all CMOS value changes and exit setup.

## 2-1 Standard CMOS Features

Date (mm:dd:yy) Time (hh:mm:ss)	Thu, Dec 8 2005 22:31:24	Item Help Menu Level▶
► IDE Channel 0 Master	[None]	Change the day, month, year  <Week> Sun. to Sat.  <Month> Jan. to Dec.
► IDE Channel 0 Slave	[None]	
► IDE Channel 1 Master	[None]	
► IDE Channel 1 Slave	[None]	
► IDE Channel 2 Master	[None]	
► IDE Channel 3 Master	[None]	
► IDE Channel 4 Master	[None]	
► IDE Channel 5 Master	[None]	
Drive A	[1.44M, 3.5"]	<Day>
Drive B	[None]	1 to 31 (or maximum allowed in the month)
Halt On	[All, But Keyboard]	
Floppy 3 Mode Suport	[Disabled]	<Year> 1999 to 2098
↑↓→←: Move    Enter: Select    +/-/PU/PD: Value    F10: Save    ESC: Exit    F1: General Help F5: Previous Values                          F7: Optimized Defaults		

 **Date**

The date format is <week>, <month>, <day>, <year>.

- » Week The week, from Sun to Sat, determined by the BIOS and is display only
- » Month The month, Jan. Through Dec.
- » Day The day, from 1 to 31 (or the maximum allowed in the month)
- » Year The year, from 1999 through 2098

 **Time**

The times format in <hour> <minute> <second>. The time is calculated base on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00.

 **IDE Channel 0 Master/Slave : IDE Channel 1 Master/Slave**

- ▶ IDE HDD Auto-Detection Press "Enter" to select this option for automatic device detection.
  - ▶ IDE Channel 0 Master/Slave ; IDE Channel 1 Master/Slave
- IDE devices setup. You can use one of three methods:
- Auto Allows BIOS to automatically detect IDE devices during POST. (Default value)
  - None Select this if no IDE devices are used and the system will skip the automatic detection step and allow for faster system start up.
  - Manual User can manually input the correct settings.
- ▶ Access Mode Use this to set the access mode for the hard drive. The four options are: CHS/LBA/Large/Auto(default:Auto)
  - ▶ Capacity Capacity of currently installed hard drive.

 IDE Channel 2/3/4/5 Master

- ▶ IDE HDD Auto-Detection Press "Enter" to select this option for automatic device detection.
- ▶ Extended IDE Drive You can use one of the two methods:
  - Auto Allows BIOS to automatically detect IDE devices during POST(default)
  - None Select this if no IDE devices are used and the system will skip the automatic detection step and allow for faster system start up.

- » Access Mode      Use this to set the access mode for the hard drive. The two options are:  
Large/Auto(default:Auto)
- » Capacity      Capacity of currently installed hard drive.  
Hard drive information should be labeled on the outside drive casing. Enter the appropriate option based on this information.
- » Cylinder      Number of cylinders
- » Head      Number of heads
- » Precomp      Write precomp
- » Landing Zone      Landing zone
- » Sector      Number of sectors

### Drive A / Drive B

The category identifies the types of floppy disk drive A or drive B that has been installed in the computer.

- » None      No floppy drive installed
- » 360K, 5.25"      5.25 inch PC-type standard drive; 360K byte capacity.
- » 1.2M, 5.25"      5.25 inch AT-type high-density drive; 1.2M byte capacity  
(3.5 inch when 3 Mode is Enabled).
- » 720K, 3.5"      3.5 inch double-sided drive; 720K byte capacity
- » 1.44M, 3.5"      3.5 inch double-sided drive; 1.44M byte capacity.
- » 2.88M, 3.5"      3.5 inch double-sided drive; 2.88M byte capacity.

### Halt on


The category determines whether the computer will stop if an error is detected during power up.

- » No Errors      The system boot will not stop for any error that may be detected and you will be prompted.
- » All Errors      Whenever the BIOS detects a non-fatal error the system will be stopped.
- » All, But Keyboard      The system boot will not stop for a keyboard error; it will stop for all other errors. (Default value)
- » All, But Diskette      The system boot will not stop for a disk error; it will stop for all other errors.
- » All, But Disk/Key      The system boot will not stop for a keyboard or disk error; it will stop for all other errors.

### Floppy 3 Mode Support (for Japan Area)

- » Disabled      Normal Floppy Drive. (Default value)
- » Drive A      Drive A is 3 mode Floppy Drive.
- » Drive B      Drive B is 3 mode Floppy Drive.
- » Both      Drive A & B are 3 mode Floppy Drives.

## 2-2 Advanced BIOS Features

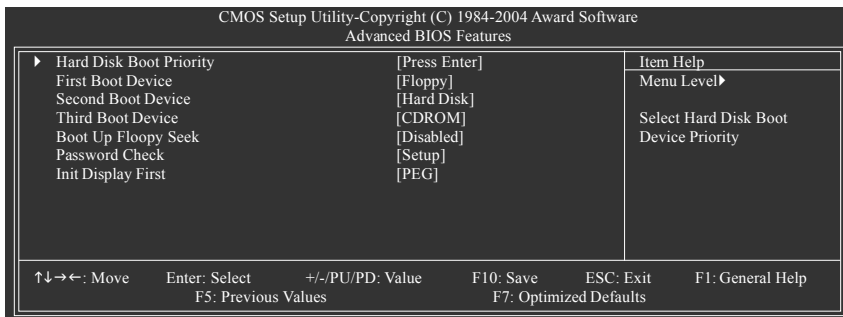

### ☞ Hard Disk Boot Priority

Select boot sequence for onboard(or add-on cards) SCSI, RAID, etc.

Use <↑> or <↓> to select a device, then press<+> to move it up, or <-> to move it down the list. Press <ESC> to exit this menu.

### ☞ First / Second / Third Boot Device

- ▶ Floppy      Select your boot device priority by Floppy.
- ▶ LS120      Select your boot device priority by LS120.
- ▶ Hard Disk      Select your boot device priority by Hard Disk.
- ▶ CDROM      Select your boot device priority by CDROM.
- ▶ ZIP      Select your boot device priority by ZIP.
- ▶ USB-FDD      Select your boot device priority by USB-FDD.
- ▶ USB-ZIP      Select your boot device priority by USB-ZIP.
- ▶ USB-CDROM      Select your boot device priority by USB-CDROM.
- ▶ USB-HDD      Select your boot device priority by USB-HDD.
- ▶ LAN      Select your boot device priority by LAN.
- ▶ Disabled      Disable this function.

### ☞ Boot Up Floppy Seek

During POST, BIOS will determine the floppy disk drive installed is 40 or 80 tracks. 360K type is 40 tracks 720K, 1.2M and 1.44M are all 80 tracks.

- ▶ Enabled      BIOS searches for floppy disk drive to determine it is 40 or 80 tracks. Note that BIOS can not tell from 720K, 1.2M or 1.44M drive type as they are all 80 tracks.
- ▶ Disabled      BIOS will not search for the type of floppy disk drive by track number. Note that there will not be any warning message if the drive installed is 360K.(Default value)

### ☞ Password Check

- ▶ System      The system can not boot and can not access to Setup page will be denied if the correct password is not entered at the prompt.
- ▶ Setup      The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt. (Default value)

### ☞ Init Display First

This feature allows you to select the first initiation of the monitor display from which card when you install a PCI card and a PCI Express VGA card on the motherboard.

- ▶ PEG      Set Init display first to PCI Express VGA card. (Default value)
- ▶ PCI slot      Set Init display first to PCI.

## 2-3 Integrated Peripherals

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software  
Integrated Peripherals

On-Chip IDE Channel0	[Enabled]	↑ ↓	Item Help Menu Level▶
On-Chip IDE Channel1	[Enabled]		
IDE DMA transfer access	[Enabled]		
On-Chip MAC Lan	[Auto]		
On-Chip LAN BOOT ROM	[Enabled]		
NV IDE/SATA RAID function	[Disabled]		
x IDE Primary Master RAID	Disabled		
x IDE Primary Slave RAID	Disabled		
x IDE Secndry Master RAID	Disabled		
x IDE Secndry Slave RAID	Disabled		
NV Serial-ATA 1	[Enabled]		
x NV SATA 1 class code	0101		
x NV SATA 1 Primary RAID	Disabled		
x NV SATA 1 Secondary RAID	Disabled		
NV Serial-ATA 2	[Enabled]		
x NV SATA 2 class code	0101		
x NV SATA 2 Primary RAID	Disabled		
x NV SATA 2 Secondary RAID	Disabled		
IDE Prefetch Mode	[Enabled]		

↑↓→←: Move    Enter: Select    +/-/PU/PD: Value    F10: Save    ESC: Exit    F1: General Help  
F5: Previous Values    F7: Optimized Defaults

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software  
Integrated Peripherals

USB Memory Type	[SHADOW]	↑ ↓	Item Help Menu Level▶
AC97 Audio	[Auto]		
Onboard 1394	[Enabled]		
Onboard Serial Port 1	[3F8/IRQ4]		
Onboard IrDA Port	[2F8/IRQ3]		
Onboard Parallel Port	[378/IRQ7]		
Parallel Port Mode	[SPP]		
x ECP Mode Use DMA	3		
CIR Port Address	[Disabled]		
x CIR Port IRQ	11		
On-Chip USB	[V1.1+V2.0]		
Legacy USB Keyboard/storage	[Disabled]		
Legacy(DOS) USB mouse	[Disabled]		
Legacy USB Storage detect	[Enabled]		

↑↓→←: Move    Enter: Select    +/-/PU/PD: Value    F10: Save    ESC: Exit    F1: General Help  
F5: Previous Values    F7: Optimized Defaults



### On-Chip IDE Channel0

- ▶▶ Enabled      Enable onboard 1st channel IDE port. (Default value)
- ▶▶ Disabled      Disable onboard 1st channel IDE port.



### On-Chip IDE Channel1

- ▶▶ Enabled      Enable onboard 2nd channel IDE port. (Default value)
- ▶▶ Disabled      Disable onboard 2nd channel IDE port.



### IDE DMA transfer access

- ▶▶ Enabled      Enable IDE DMA transfer access. (Default value)
- ▶▶ Disabled      Disable this function.

- ☞ **On-Chip MAC Lan (controlled by VITESSE 8201 phy)**
  - » Auto Auto-detect onboard LAN chip function. (Default value)
  - » Disabled Disable onboard LAN chip function.
- ☞ **On-Chip LAN BOOT ROM**

This function decide whether to invoke the boot ROM of the onboard LAN chip.

  - » Enabled Enable this function. (Default value)
  - » Disabled Disable this function.
- ☞ **NV IDE/SATA RAID function**
  - » Enabled Enable IDE/SATA RAID function.
  - » Disabled Disable this function. (Default value)
- ☞ **IDE Primary Master RAID**
  - » Enabled Enable 1st master channel IDE RAID function.
  - » Disabled Disable this function. (Default value)
- ☞ **IDE Primary Slave RAID**
  - » Enabled Enable 1st slave channel IDE RAID function.
  - » Disabled Disable this function. (Default value)
- ☞ **IDE Secndry Master RAID**
  - » Enabled Enable 2nd master channel IDE RAID function.
  - » Disabled Disable this function. (Default value)
- ☞ **IDE Secndry Slave RAID**
  - » Enabled Enable 2nd slave channel IDE RAID function.
  - » Disabled Disable this function. (Default value)
- ☞ **NV Serial-ATA 1**
  - » Enabled Enable Serial ATA 1 supported. (Default value)
  - » Disabled Disable Serial ATA 1 supported.
- ☞ **NV SATA 1 class code** <sup>(Note)</sup>
  - » 0101 Set NV SATA 1 class code to 0101. (Default value)
  - » 0104 Set NV SATA 1 class code to 0104.
- ☞ **NV SATA 1 Primary RAID**
  - » Enabled Enable 1st SATA primary RAID function.
  - » Disabled Disable this function. (Default value)
- ☞ **NV SATA 1 Secondary RAID**
  - » Enabled Enable 1st SATA secondary RAID function.
  - » Disabled Disable this function. (Default value)
- ☞ **NV Serial-ATA 2**
  - » Enabled Enable Serial ATA 2 supported. (Default value)
  - » Disabled Disable Serial ATA 2 supported.
- ☞ **NV SATA 2 class code** <sup>(Note)</sup>
  - » 0101 Set NV SATA 2 class code to 0101. (Default value)
  - » 0104 Set NV SATA 2 class code to 0104.

### **NV SATA 2 Primary RAID**

- » Enabled      Enable 2nd SATA primary RAID function.
- » Disabled     Disable this function. (Default value)

### **NV SATA 2 Secondary RAID**

- » Enabled      Enable 2nd SATA secondary RAID function.
- » Disabled     Disable this function. (Default value)

### **IDE Prefetch Mode**

- » Enabled      Enable IDE Prefetch mode. (Default value)
- » Disabled     Disable IDE Prefetch mode.

### **USB Memory Type**

- » SHADOW      Set USB memory type to SHADOW. (Default value)
- » Base Memory(640K) Set USB memory type to base memory(640K).

### **AC97 Audio**

- » Auto          Enable onboard AC'97 audio function. (Default value)
- » Disabled     Disable this function.

### **Onboard 1394**

- » Enabled      Enable onboard IEEE1394 function. (Default value)
- » Disabled     Disable onboard IEEE1394 function.

### **Onboard Serial Port 1**

- » Auto          BIOS will automatically setup the port 1 address.
- » 3F8/IRQ4     Enable onboard Serial port 1 and address is 3F8/IRQ4. (Default value)
- » 2F8/IRQ3     Enable onboard Serial port 1 and address is 2F8/IRQ3.
- » 3E8/IRQ4     Enable onboard Serial port 1 and address is 3E8/IRQ4.
- » 2E8/IRQ3     Enable onboard Serial port 1 and address is 2E8/IRQ3.
- » Disabled     Disable onboard Serial port 1.

### **Onboard IrDA Port**

- » Auto          BIOS will automatically setup the IrDA port address.
- » 3F8/IRQ4     Enable onboard IrDA port and address is 3F8/IRQ4.
- » 2F8/IRQ3     Enable onboard IrDA port and address is 2F8/IRQ3. (Default value)
- » 3E8/IRQ4     Enable onboard IrDA port and address is 3E8/IRQ4.
- » 2E8/IRQ3     Enable onboard IrDA port and address is 2E8/IRQ3.
- » Disabled     Disable onboard IrDA port .

### **Onboard Parallel Port**

- » Disabled     Disable onboard LPT port.
- » 378/IRQ7     Enable onboard LPT port and address is 378/IRQ7. (Default value)
- » 278/IRQ5     Enable onboard LPT port and address is 278/IRQ5.
- » 3BC/IRQ7     Enable onboard LPT port and address is 3BC/IRQ7.

(Note) When using driver version 1.2, please enable "NV IDE/SATA RAID function" if you wish to create RAID data drive or install O.S. on the RAID drive.  
And manually set "NV SATA1/NV SATA 2 class code" from 0101 to 0104. If your SATA hard drive is connected to the SATA0 or SATA1 connector , please set "NV SATA1 class code" to 0104. If your SATA hard drive is connected to the SATA2 or SATA3 connector, please set "NV SATA2 class code" to 0104.

### 🔑 **Parallel Port Mode**

- » SPP Using Parallel port as Standard Parallel Port. (Default value)
- » EPP Using Parallel port as Enhanced Parallel Port.
- » ECP Using Parallel port as Extended Capabilities Port.
- » ECP+EPP Using Parallel port as ECP and EPP mode.

### 🔑 **ECP Mode Use DMA**

- » 3 Set ECP Mode Use DMA to 3. (Default value)
- » 1 Set ECP Mode Use DMA to 1.

### 🔑 **CIR Port Address**

- » 310 Set CIR Port Address to 310.
- » 320 Set CIR Port Address to 320.
- » Disabled Disable this function. (Default value)

### 🔑 **CIR Port IRQ**

- » 5 Set CIR Port IRQ to 5.
- » 11 Set CIR Port IRQ to 11. (Default value)

### 🔑 **On-Chip USB**

- » Disabled Disable this function if you are not using onboard USB function.
- » V1.1+V2.0 Enable USB 1.1 and USB 2.0 controller. (Default value)
- » V1.1 Enable only USB 1.1 controller.

### 🔑 **Legacy USB Keyboard/Storage**

- » Enabled Enable USB keyboard support in the MS-DOS environment.
- » Disabled Disable this function. (Default value)

### 🔑 **Legacy (DOS) USB Mouse**

- » Enabled Enable USB mouse support in the MS-DOS environment.
- » Disabled Disable this function. (Default value)

### 🔑 **Legacy USB storage detect**

- » Enabled Enable USB storage detect function. (Default value)
- » Disabled Disable this function.

## 2-4 Power Management Setup

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software Power Management Setup		
ACPI Suspend Type	[S1(POS)]	Item Help
Soft-Off by Power button	[Instant-off]	Menu Level▶
PME Event Wake Up	[Disabled]	
Modem Ring On	[Disabled]	
USB Resume from Suspend	[Disabled]	
Power-On by Alarm	[Disabled]	
x Day of Month Alarm	Everyday	
x Time (hh:mm:ss) Alarm	0 : 0 : 0	
Power On by Mouse	[Disabled]	
Power On by Keyboard	[Disabled]	
x KB Power ON Password	Enter	
AC BACK Function	[Soft-Off]	

↑↓←→: Move	Enter: Select	+/-/PU/PD: Value	F10: Save	ESC: Exit	F1: General Help
	F5: Previous Values		F7: Optimized Defaults		

### ACPI Suspend Type

- ▶▶ S1(POS) Set ACPI suspend type to S1/POS(Power On Suspend). (Default value)
- ▶▶ S3(STR) Set ACPI suspend type to S3/STR(Suspend To RAM).

### Soft-Off by Power button

- ▶▶ Instant-off Press power button then Power off instantly. (Default value)
- ▶▶ Delay 4 Sec Press power button 4 seconds to Power off. Enter suspend if button is pressed less than 4 seconds.

### PME Event Wake Up

This feature requires an ATX power supply that provides at least 1A on the 5VSB lead.

- ▶▶ Disabled Disable this function.
- ▶▶ Enabled Enable PME as wake up event. (Default value)

### Modem Ring On

An incoming call via modem can awake the system from any suspend state.

- ▶▶ Disabled Disable Modem Ring on function. (Default value)
- ▶▶ Enabled Enable Modem Ring on function.

### USB Resume from Suspend

- ▶▶ Disabled Disable this function. (Default value)
- ▶▶ Enable Enable USB device wake up system from suspend type.

### Power-On by Alarm

You can set "Resume by Alarm" item to enabled and key in Date/Time to power on system.

- ▶▶ Disabled Disable this function. (Default value)
- ▶▶ Enabled Enable alarm function to POWER ON system.

If RTC Alarm Lead To Power On is Enabled.

- ▶▶ Day of Month Alarm : Everyday, 1~31
- ▶▶ Time (hh: mm: ss) Alarm : (0~23) : (0~59) : (0~59)

☞ **Power On by Mouse**

- » Disabled      Disabled this function. (Default value)
- » Double Click      Double click on PS/2 mouse left button to power on the system.

☞ **Power On by Keyboard**

- » Disabled      Disabled this function. (Default value)
- » Password      Enter from 1 to 5 characters to set the keyboard power on password.
- » Any KEY      Press any key to power on the system.
- » Keyboard 98      If your keyboard have "POWER Key" button, you can press the key to power on the system.


☞ **KB Power ON Password**

- When "Power On by Keyboard" set at Password, you can set the password here.
- » Enter      Input password(from 1 to 5 characters) and press Enter to set the password.

☞ **AC BACK Function**

- » Soft-Off      When AC-power back to the system, the system will be in "Off" state. (Default value)
- » Full-On      When AC-power back to the system, the system always in "On" state.

**2-5 PnP/PCI Configurations**

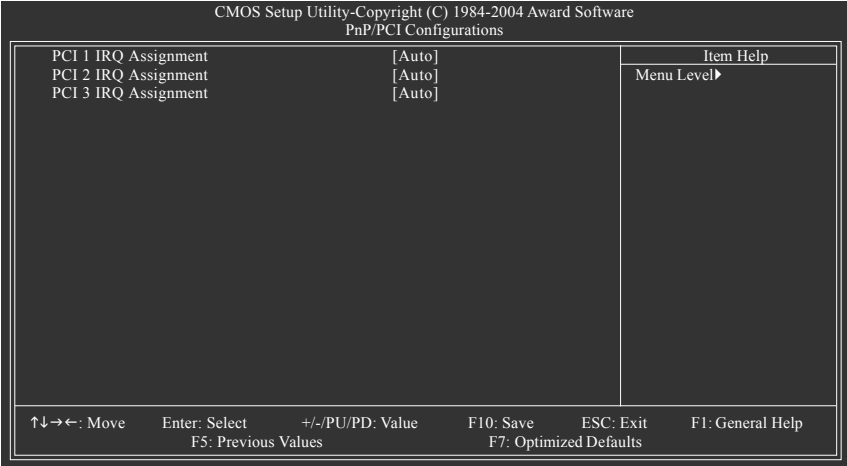

☞ **PCI 1 IRQ Assignment**

- » Auto      Auto assign IRQ to PCI 1. (Default value)
- » 3,4,5,7,9,10,11,12,14,15      Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 1.

☞ **PCI 2 IRQ Assignment**

- » Auto      Auto assign IRQ to PCI 2. (Default value)
- » 3,4,5,7,9,10,11,12,14,15      Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 2.

☞ **PCI 3 IRQ Assignment**

- » Auto      Auto assign IRQ to PCI 3. (Default value)
- » 3,4,5,7,9,10,11,12,14,15      Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 3.



## ☞ CPU FAN Manual Control

**CPU Smart Fan Control** will become disabled when this item is enabled.

- » Enabled      Enable the CPU fan manual control function.
- » Disabled      Disable the CPU fan manual control function. (Default value)

## ☞ CPU FAN: Low Speed

- » Set the parameter of the CPU fan speed.

The CPU FAN: Low Speed option configures the speed of the CPU fan when the CPU temperature is below the temperature set in Temp Limit of Mid Speed. The parameter can be adjusted from 0~127. Higher parameter means faster CPU fan speed. (Default parameter: 8)

## ☞ CPU FAN: Mid Speed

- » Set the parameter of the CPU fan speed.

The CPU FAN: Mid Speed option configures the speed of the CPU fan when the CPU temperature exceeds the temperature set in Temp Limit of Mid Speed. The parameter can be adjusted from 0~127. Higher parameter means faster CPU fan speed. (Default parameter: 12)

## ☞ CPU FAN: High Speed

- » Set the parameter of the CPU fan speed.

The CPU FAN: High Speed option configures the speed of the CPU fan when the CPU temperature exceeds the temperature set in Temp Limit of High Speed. The parameter can be adjusted from 0~127. Higher parameter means faster CPU fan speed. (Default parameter: 80)

## ☞ Temp of FAN turn off (Default temperature: 0°C)

- » When the CPU temperature is below the value set in this option, the CPU fan will stop spinning.

## ☞ Temp Limit of Low Speed (Default temperature: 20°C)

- » The CPU fan will stop spinning when the CPU temperature is below the value set in Temp of FAN turn off option. The CPU fan will start to spin again with the parameter set in CPU FAN: Low Speed when the CPU temperature exceeds the value set in Temp Limit of Low Speed.

## ☞ Temp Limit of Mid Speed (Default temperature: 50°C)

- » When the CPU temperature exceeds the value set in this option, the CPU fan spins with the parameter specified in CPU FAN: Mid Speed. For example, by default, when the CPU temperature exceeds 50°C, CPU fan runs with parameter 12.

## ☞ Temp Limit of High Speed (Default temperature: 60°C)

- » When the CPU temperature exceeds the value set in this option, the CPU fan rotates with the parameter specified in CPU FAN: High Speed. For example, by default, when the CPU temperature exceeds 60°C, CPU fan runs with parameter 80.

## ☞ Temp of full FAN Speed (Default temperature: 70°C)

- » When the CPU temperature exceeds the value set in this option, the CPU fan runs at full speed.

## 2-7 MB Intelligent Tweaker(M.I.T.)

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software MB Intelligent Tweaker(M.I.T.)		
HT Frequency ratio	[Auto]	Item Help
CPU Frequency	[200]	Menu Level▶
K8 CPU Clock Ratio	[Default]	
Current DDR speed	400	
CPU Spread Spectrum	[Center Spread]	
PCIE Clock	[100Mhz]	
Robust Graphics Booster	[Auto]	
CPU Voltage Control	[Normal]	
Normal CPU Vcore	1.500V	
Chipset core PCI-E voltage	[Normal]	
HT-Link voltage control	[Normal]	
DDR voltage control	[Normal]	

↑↓←→: Move	Enter: Select	+/-/PU/PD: Value	F10: Save	ESC: Exit	F1: General Help
	F5: Previous Values		F7: Optimized Defaults		



Incorrect using these features may cause your system broken. For power end-user use only.

### HT Frequency Ratio

This setup option will automatically assign by CPU detection. (Default value: Auto)

### CPU Frequency

▶ 200.0 ~ 400.0 Set CPU frequency from 200Mhz to 400Mhz.

### K8 CPU Clock Ratio

▶ Default Set K8 CPU Clock Ratio to CPU factory default. (Default value)  
 ▶ x4 800Mhz ~ x11 2000Mhz. Set K8 CPU Clock Ratio from x4 800Mhz to x11 2000Mhz.

### Current DDR speed

▶ Displays the current DDR speed.

### CPU Spread Spectrum

▶ Disabled Disable CPU Spread Spectrum.  
 ▶ Center Spread Set CPU Spread Spectrum to Center Spread. (Default value)

### PCIE Clock

▶ 100Mhz ~ 150Mhz Set PCI-E clock from 100Mhz to 150Mhz.

### Robust Graphics Booster

Select the options can enhance the VGA graphics card bandwidth to get higher performance.

▶ Auto Set Robust Graphics Booster to Auto. (Default value)  
 ▶ Fast Set Robust Graphics Booster to Fast.  
 ▶ Turbo Set Robust Graphics Booster to Turbo.

### CPU Voltage Control

▶ Supports adjustable CPU Vcore from 0.800V to 1.750V by 0.025V step. (Default value: Normal)

### ☞ Normal CPU Vcore

» Displays your CPU Vcore voltage.

### ☞ Chipset core PCI-E voltage

- » Normal      Set Chipset core PCI-E voltage as PCI-E required. (Default value)
- » +0.1v      Increase Chipset core PCI-E voltage +0.1V.
- » +0.2v      Increase Chipset core PCI-E voltage +0.2V.
- » +0.3v      Increase Chipset core PCI-E voltage +0.3V.


### ☞ HT-Link voltage control

- » Normal      Supply HT-Link voltage as HT-Link required. (Default value)
- » +0.1v      Increase HT-Link voltage +0.1V.
- » +0.2v      Increase HT-Link voltage +0.2V.
- » +0.3v      Increase HT-Link voltage +0.2V.

### ☞ DDR voltage control

- » Normal      Supply DDR voltage as DDR required. (Default value)
- » +0.1v      Increase DDR voltage +0.1V.
- » +0.2v      Increase DDR voltage +0.2V.

## 2-8 Top Performance

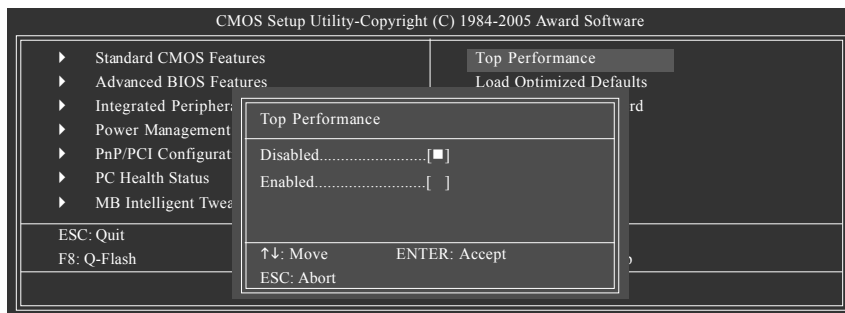


If you wish to maximize the performance of your system, set "Top Performance" as "Enabled".

- » Disabled    Disable this function. (Default Value)
- » Enabled    Enable Top Performance function.


"Top Performance" will increase hardware working speed. Different system configuration (both hardware component and OS) will effect the result. For example, the same hardware configuration might not run properly with Windows XP, but works smoothly with Windows NT. Therefore, if your system is not perform enough, the reliability or stability problem will appear sometimes, and we will recommend you disabling the option to avoid the problem as mentioned above.

## 2-9 Load Optimized Defaults

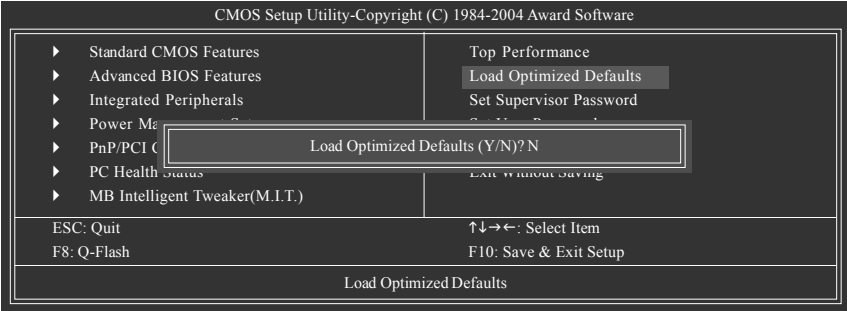

Selecting this field loads the factory defaults for BIOS and Chipset Features which the system automatically detects.

## 2-10 Set Supervisor/User Password

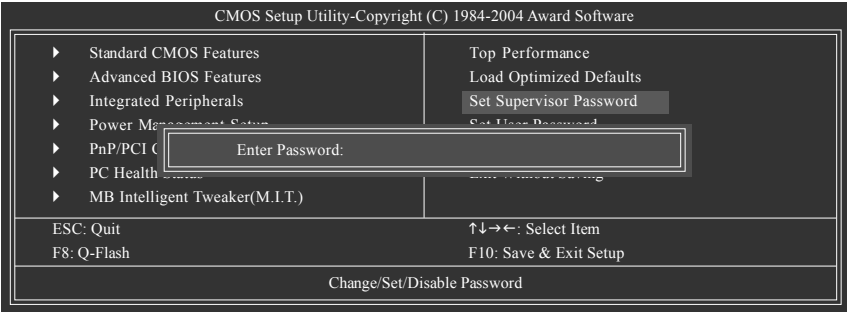

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

Type the password, up to eight characters, and press <Enter>. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.


To disable password, just press <Enter> when you are prompted to enter password. A message "PASSWORD DISABLED" will appear to confirm the password being disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

The BIOS Setup program allows you to specify two separate passwords: SUPERVISOR PASSWORD and a USER PASSWORD. When disabled, anyone may access all BIOS Setup program function. When enabled, the Supervisor password is required for entering the BIOS Setup program and having full configuration fields, the User password is required to access only basic items.

If you select "System" at "Password Check" in Advance BIOS Features Menu, you will be prompted for the password every time the system is rebooted or any time you try to enter Setup Menu.

If you select "Setup" at "Password Check" in Advance BIOS Features Menu, you will be prompted only when you try to enter Setup.


## 2-11 Save & Exit Setup

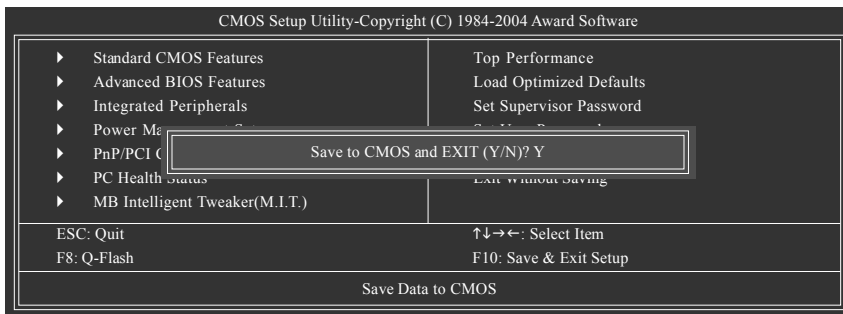

Type "Y" will quit the Setup Utility and save the user setup value to RTC CMOS.

Type "N" will return to Setup Utility.

## 2-12 Exit Without Saving

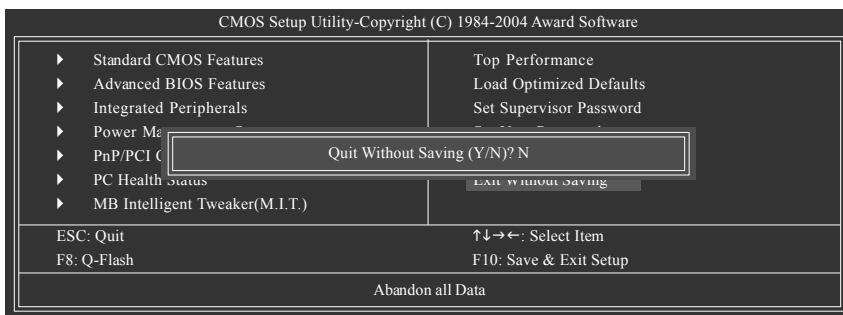

Type "Y" will quit the Setup Utility without saving to RTC CMOS.

Type "N" will return to Setup Utility.

## Chapter 3 Drivers Installation




Pictures below are shown in Windows XP.

Insert the driver CD-title that came with your motherboard into your CD-ROM drive, the driver CD-title will auto start and show the installation guide. If not, please double click the CD-ROM device icon in "My computer", and execute the Setup.exe.

### 3-1 Install Chipset Drivers

After insert the driver CD, "Xpress Install" will scan automatically the system and then list all the drivers that recommended to install. The "Xpress Install" uses the "Click and Go" technology to install the drivers automatically. Just select the drivers you want then click the "GO" button. The "Xpress Install" will execute the installation for you automatically.

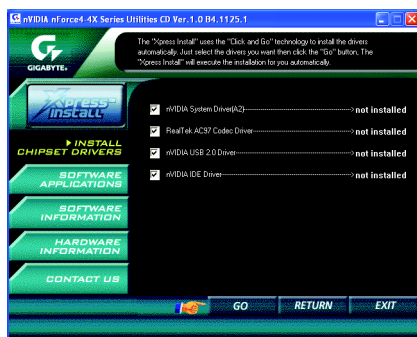

Some device drivers will restart your system automatically. After restarting your system the "Xpress Install" will continue to install other drivers.

System will reboot automatically after install the drivers, afterward you can install others application.



For USB2.0 driver support under Windows XP operating system, please use Windows Service Pack. After install Windows Service Pack, it will show a question mark "?" in "Universal Serial Bus controller" under "Device Manager". Please remove the question mark and restart the system (System will auto-detect the right USB2.0 driver).


## 3-2 Software Application

This page displays all the tools that GIGABYTE developed and some free software. You can click an item to install it.




## 3-3 Software Information

This page lists the contents of software and drivers in this CD-title.

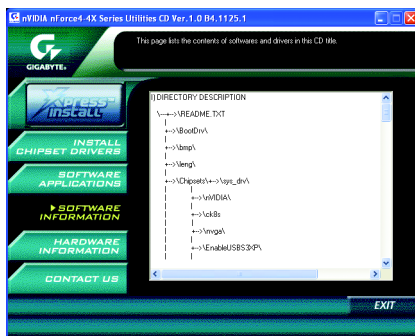

### 3-4 Hardware Information

This page lists all device you have for this motherboard.

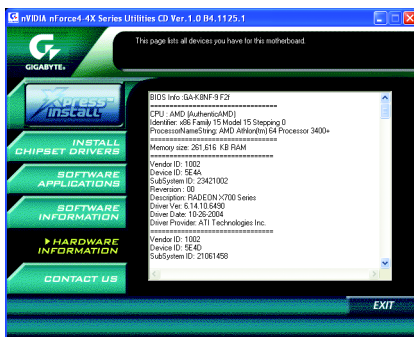

### 3-5 Contact Us

Please see the last page for details.





## Chapter 4 Appendix

### 4-1 Unique Software Utilities

#### 4-1-1 EasyTune 5 Introduction

EasyTune 5 presents the most convenient Windows based system performance enhancement and manageability utility. Featuring several powerful yet easy to use tools such as 1) Overclocking for enhancing system performance, 2) C.I.A. and M.I.B. for special enhancement for CPU and Memory, 3) Smart-Fan control for managing fan speed control of both CPU cooling fan and North-Bridge Chipset cooling fan, 4) PC health for monitoring system status.<sup>(Note)</sup>

#### User Interface Overview



	Button / Display	Description
1.	Overclocking	Enters the Overclocking setting page
2.	C.I.A./C.I.A.2 and M.I.B./M.I.B.2	Enters the C.I.A./2 and M.I.B./2 setting page
3.	Smart-Fan	Enters the Smart-Fan setting page
4.	PC Health	Enters the PC Health setting page
5.	GO	Confirmation and Execution button
6.	"Easy Mode" & "Advance Mode"	Toggles between Easy and Advance Mode
7.	Display screen	Display panel of CPU frequency
8.	Function display LEDs	Shows the current functions status
9.	GIGABYTE Logo	Log on to GIGABYTE website
10.	Help button	Display EasyTune™ 5 Help file
11.	Exit or Minimize button	Quit or Minimize EasyTune™ 5 software

(Note) EasyTune 5 functions may vary depending on different motherboards.

## 4-1-2 Xpress Recovery2 Introduction



Xpress Recovery2 is designed to provide quick backup and restoration of hard disk data. Supporting Microsoft operating systems including Windows XP/2000/NT/98/Me and DOS, and file systems including FAT16, FAT32, and NTFS, Xpress Recovery2 is able to back up data on hard disks on PATA and SATA IDE controllers. After Xpress Recovery2 is executed from CD-ROM for the first time, it will stay permanent in your hard disk. If you wish to run Xpress Recovery2 later, you can simply press F9 during system startup to enter Xpress Recovery2 without the CD-ROM.

### System requirements:

1. Intel x86 platforms
2. At least 64M bytes of system memory
3. VESA-supported VGA cards

### How to use the Xpress Recovery2


Initial access by booting from CD-ROM and subsequent access by pressing the F9 key:

Steps: After entering BIOS Setup, go to **Advanced BIOS Feature** and set to boot from CD-ROM. Save the settings and exit the BIOS Setup. Insert the provided driver CD into your CD-ROM drive. Upon system restart, the message which says "Boot from CD/DVD:" will appear in the bottom left corner of the screen. Press any key to enter Xpress Recovery2.

After the steps above are completed, subsequent access to Xpress Recovery2 can be made by simply pressing the <F9> key during system power-on.



**Boot from CD/DVD:**

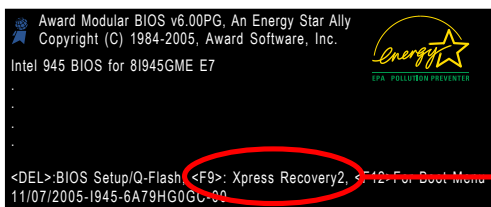

**<F9> Xpress Recovery2**



NOTE

1. If you have already entered Xpress Recovery2 by booting from the CD-ROM, you can enter Xpress Recovery2 by pressing the <F9> key in the future.
2. System storage capacity and the reading/writing speed of the hard disk will affect the data backup speed.
3. It is recommended that Xpress Recovery2 be immediately installed once you complete installations of OS and all required drivers as well as software.

## The Main Screen of Xpress Recovery2



### 1. RESTORE:

Restore the backed-up data to your hard disk.  
(This button will not appear if there is no backup file.)

### 2. BACKUP:

Back up data from hard disk.

### 3. REMOVE:

Remove previously-created backup files to release disk space.

(This button will not appear if there is no backup file.)

### 4. REBOOT:

Exit the main screen and restart the system.

### Limitations:

1. Not compatible to Xpress Recovery.
2. For the use of Xpress Recovery2, a primary partition must be reserved.
3. Xpress Recovery2 will store the backup file at the end of the hard disk, so free space available on the hard disk for the backup file must be allocated in advance. (A minimum 4GB is recommended but the actual space is dependent on the size of the data to be backed up)
4. Capable of backing up hard disks installed with Windows operating systems including DOS and Windows XP/2000/NT/9x/Me.
5. USB hard disks are currently not supported.
6. Does not support RAID/AHCI (class code 0104/0106) hard disks.
7. Capable of backing up and restoring only the first physical hard disk.

Hard disks detection sequence is as follows:

- a. PATA IDE primary channel
- b. PATA IDE secondary channel
- c. SATA IDE channel 1
- d. SATA IDE channel 2
- e. SATA IDE channel 3
- f. SATA IDE channel 4

### Precautions:

1. When using hard disks with more than 128G under Windows 2000, be sure to execute the EnableBigLba.exe program from the driver CD before data backup.
2. It is normal that data backup takes longer time than data restoration.
3. Xpress Recovery2 is compliant with the GPL regulations.
4. On a few motherboards based on Nvidia chipsets, BIOS update is required for Xpress Recovery2 to correctly identify RAID and SATA IDE mode. Please contact your motherboard manufacturer.
5. Xpress Recovery2 supports only PATA hard disks and not SATA hard disks on the following motherboards (As this is a BIOS-related issue, it can be solved by BIOS update)

GA-K8U	GA-K8NXP-9	GA-8N-SLI Royal
GA-K8U-9	GA-K8N Ultra-9	GA-8N-SLI Pro
GA-K8NXP-SLI	GA-K8NF-9 (PCB Ver. 1.0)	GA-8N-SLI
GA-K8N Ultra-SLI	GA-K8NE (PCB Ver. 1.0)	
GA-K8N Pro-SLI	GA-K8NMF-9	

### 4-1-3 Flash BIOS Method Introduction



#### Method 1 : Q-Flash™ Utility

Q-Flash™ is a BIOS flash utility embedded in Flash ROM. With this utility, users only have to stay in the BIOS menu when they want to update BIOS. Q-Flash™ allows users to flash BIOS without any utility in DOS or Windows. Using Q-Flash™ indicating no more fooling around with any complicated instructions and operating system since it is in the BIOS menu.



Please note that because updating BIOS has potential risk, please do it with caution!! We are sorry that Gigabyte Technology Co., Ltd is not responsible for damages of system because of incorrect manipulation of updating BIOS to avoid any claims from end-users.

#### Before You Begin:

Before you start updating BIOS with the Q-Flash™ utility, please follow the steps below first.

1. Download the latest BIOS for your motherboard from Gigabyte's website.
2. Extract the BIOS file downloaded and save the BIOS file (the one with model name.Fxx. For example, 8KNXPJ.Fba) to a floppy disk.
3. Reboot your PC and press **Del** to enter BIOS menu.

The BIOS upgrading guides below are separated into two parts.

If your motherboard has dual-BIOS, please refer to **Part One**.

If your motherboard has single-BIOS, please refer to **Part Two**.


#### Part One:

#### Updating BIOS with Q-Flash™ Utility on Dual BIOS Motherboards.

Some of Gigabyte motherboards are equipped with dual BIOS. In the BIOS menu of the motherboards supporting Q-Flash and Dual BIOS, the Q-Flash utility and Dual BIOS utility are combined in the same screen. This section only deals with how to use Q-Flash utility.


**In the following sections, we take GA-8KNXP Ultra as the example to guide you how to flash BIOS from an older version to the latest version. For example, from Fa3 to Fba.**

The BIOS file is Fa3  
before updating

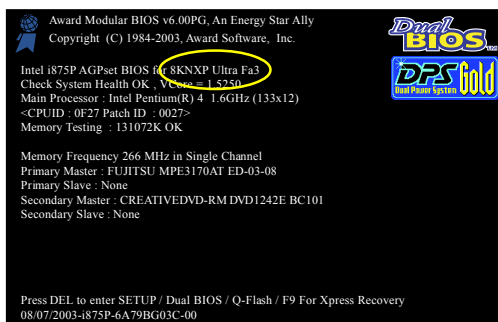

Entering the Q-Flash™ utility:


Step1: To use Q-Flash utility, you must press **Del** in the boot screen to enter BIOS menu.

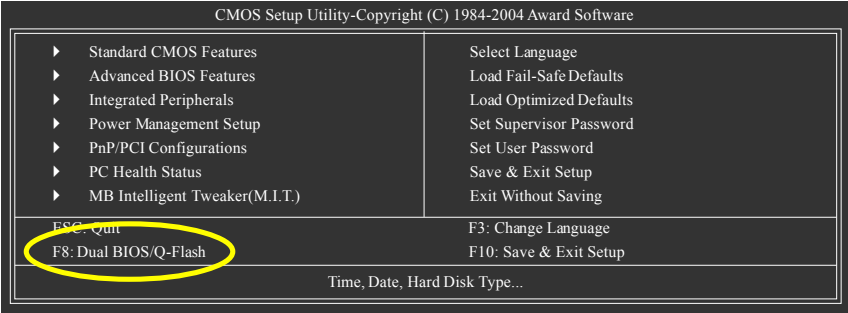

Step 2: Press **F8** button on your keyboard and then **Y** button to enter the Dual BIOS/Q-Flash utility.

Exploring the Q-Flash™ / Dual BIOS utility screen

The Q-Flash / Dual BIOS utility screen consists of the following key components.

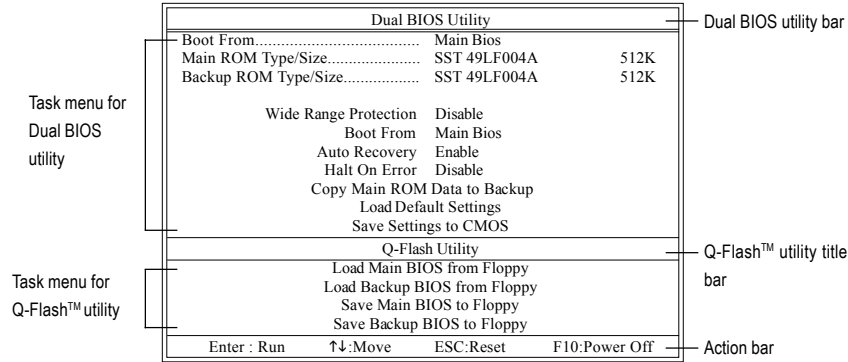

Task menu for Dual BIOS utility:

Contains the names of eight tasks and two item showing information about the BIOS ROM type. Blocking a task and pressing Enter key on your keyboard to enable execution of the task.

Task menu for Q-Flash utility:

Contains the names of four tasks. Blocking a task and pressing Enter key on your keyboard to enable execution of the task.

Action bar:

Contains the names of four actions needed to operate the Q-Flash/Dual BIOS utility. Pressing the buttons mentioned on your keyboards to perform these actions.

### Using the Q-Flash™ utility:

This section tells you how to update BIOS using the Q-Flash utility. As described in the "Before you begin" section above, you must prepare a floppy disk having the BIOS file for your motherboard and insert it to your computer. If you have already put the floppy disk into your system and have entered the Q-Flash utility, please follow the steps below to flash BIOS.

### Steps:

1. Press arrow buttons on your keyboard to move the light bar to "Load Main BIOS from Floppy" item in the Q-Flash menu and press Enter button.

Later, you will see a box pop up showing the BIOS files you previously downloaded to the floppy disk.



If you want to save the current BIOS for backup purpose, you can begin Step 1 with "Save Main BIOS to Floppy" item.

2. Move to the BIOS file you want to flash and press **Enter**.

In this example, we only download one BIOS file to the floppy disk so only one BIOS file, 8KNXPU.Fba, is listed.



Please confirm again you have the correct BIOS file for your motherboard.

Dual BIOS Utility			
Boot From.....	Main Bios		
Main ROM Type/Size.....	SST 49LF004A		512K
Backup ROM Type/Size.....	SST 49LF004A		512K
Wide Range Protection Disabled			
8KNXPJ.Fba		1 file(s) found	512K
Total size : 1.39M		Free size : 911.50K	
F5 : Refresh		DEL : Delete	
Save Settings to CMOS			
Q-Flash Utility			
Load Main BIOS from Floppy			
Load Backup BIOS from Floppy			
Save Main BIOS to Floppy			
Save Backup BIOS to Floppy			
Enter : Run	↑↓:Move	ESC:Reset	F10:Power Off

- BIOS file in the floppy disk.

After pressing **Enter**, you'll then see the progress of reading the BIOS file from the floppy disk.

<b>Dual BIOS Utility</b>			
Boot From.....	Main Bios		
Main ROM Type/Size.....	SST 49LF004A		512K
Backup ROM Type/Size.....	SST 49LF004A		512K
<b>Wide Range Protection</b>		Disable	
Reading BIOS file from floppy ...			
>>>>>>>>>>>> .....			
Don't Turn Off Power or Reset System			
Save Settings to CMOS			
<b>Q-Flash Utility</b>			
Load Main BIOS from Floppy			
Load Backup BIOS from Floppy			
Save Main BIOS to Floppy			
Save Backup BIOS to Floppy			
Enter : Run	↑↓:Move	ESC:Reset	F10:Power Off



- Do not turn off power or reset your system at this stage!!

After BIOS file is read, you'll see a confirmation dialog box asking you "Are you sure to update BIOS?"

3. Press Y button on your keyboard after you are sure to update BIOS.

Then it will begin to update BIOS. The progress of updating BIOS will be displayed.



Please do not take out the floppy disk when it begins flashing BIOS.

4. Press any keys to return to the Q-Flash menu when the BIOS updating procedure is completed.

Dual BIOS Utility		
Boot From.....	Main Bios	
Main ROM Type/Size.....	SST 49LF004A	512K
Backup ROM Type/Size.....	SST 49LF004A	512K
Wide Range Protection    Disable		
<b>!! Copy BIOS completed - Pass !!</b> <b>Please press any key to continue</b>		
Save Settings to CMOS		
Q-Flash Utility		
Load Main BIOS from Floppy		
Load Backup BIOS from Floppy		
Save Main BIOS to Floppy		
Save Backup BIOS to Floppy		
Enter : Run	↑↓:Move	ESC:Reset    F10:Power Off





You can repeat Step 1 to 4 to flash the backup BIOS, too.

5. Press Esc and then Y button to exit the Q-Flash utility. The computer will restart automatically after you exit Q-Flash.


Dual BIOS Utility		
Boot From.....	Main Bios	
Main ROM Type/Size.....	SST 49LF004A	512K
Backup ROM Type/Size.....	SST 49LF004A	512K
Wide Range Protection    Disable		
<b>Are you sure to RESET ?</b> <b>[Enter] to continue or [Esc] to abort...</b>		
Save Settings to CMOS		
Q-Flash Utility		
Load Main BIOS from Floppy		
Load Backup BIOS from Floppy		
Save Main BIOS to Floppy		
Save Backup BIOS to Floppy		
Enter : Run	↑↓:Move	ESC:Reset    F10:Power Off

After system reboots, you may find the BIOS version on your boot screen becomes the one you flashed.

The BIOS file becomes Fba after updating.


Award Modular BIOS v6.00PG, An Energy Star Ally Copyright (C) 1984-2003, Award Software, Inc.		 
Intel i875P AGPset BIOS (4: 8KNXP Ultra Fba) Check System Health OK, VC OK = 1.525V Main Processor : Intel Pentium(R) 4 1.6GHz (133x12) <CPUID> 0F27 Patch ID : 0027<- Memory Testing : 131072K OK  Memory Frequency 266 MHz in Single Channel Primary Master : FUJITSU MPE3170AT ED-03-08 Primary Slave : None Secondary Master : CREATIVEDVD-RM DVD1242E BC101 Secondary Slave : None		
Press DEL to enter SETUP / Dual BIOS / Q-Flash / F9 For Xpress Recovery 09/23/2003-i875P-6A79BG03C-00		

6. Press **Del** to enter BIOS menu after system reboots. When you are in BIOS menu, move to **Load Fail-Safe Defaults** item and press **Enter** to load BIOS Fail-Safe Defaults. Normally the system redetects all devices after BIOS has been upgraded. Therefore, we highly recommend reloading the BIOS defaults after BIOS has been upgraded.

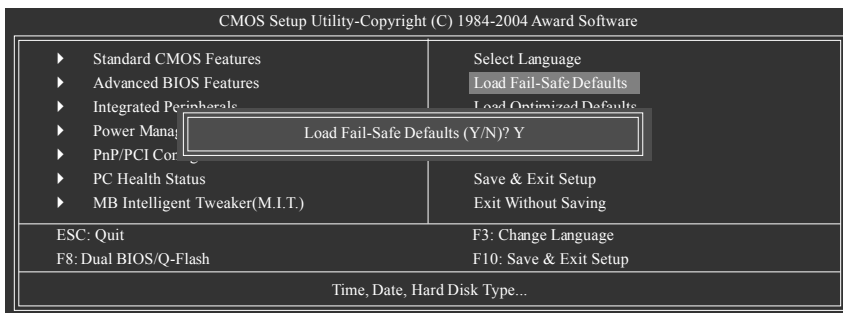

Press **Y** on your keyboard to load defaults.

7. Select **Save & Exit Setup** item to save the settings to CMOS and exit the BIOS menu. System will reboot after you exit the BIOS menu. The procedure is completed.

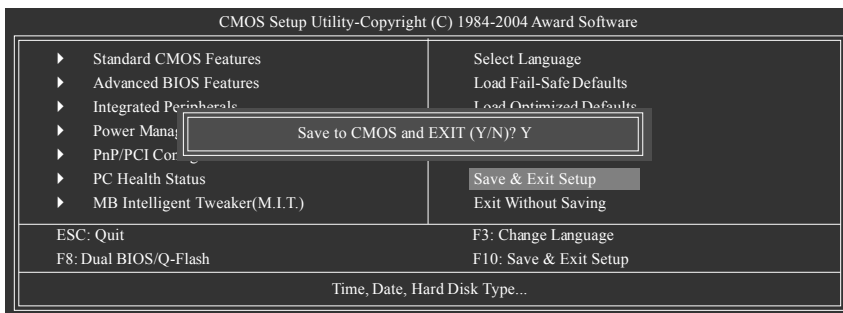


Press **Y** on your keyboard to save and exit.

## Part Two:


### Updating BIOS with Q-Flash™ Utility on Single-BIOS Motherboards.

This part guides users of single-BIOS motherboards how to update BIOS using the Q-Flash™ utility.

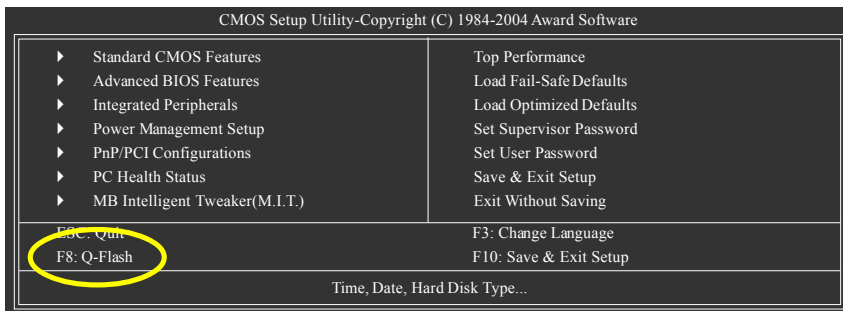

### Exploring the Q-Flash™ utility screen

The Q-FlashBIOS utility screen consists of the following key components.

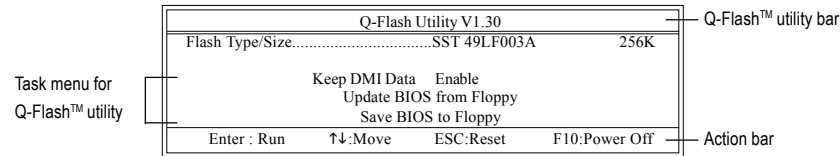

#### Task menu for Q-Flash utility:

Contains the names of three tasks. Blocking a task and pressing Enter key on your keyboard to enable execution of the task.

#### Action bar:


Contains the names of four actions needed to operate the Q-Flash utility. Pressing the buttons mentioned on your keyboards to perform these actions.

#### Using the Q-Flash™ utility:


This section tells you how to update BIOS using the Q-Flash utility. As described in the "Before you begin" section above, you must prepare a floppy disk having the BIOS file for your motherboard and insert it to your computer. If you have already put the floppy disk into your system and have entered the Q-Flash utility, please follow the steps below to flash BIOS.


#### Steps:

1. Press arrow buttons on your keyboard to move the light bar to "Update BIOS from Floppy" item in the Q-Flash menu and press Enter button.  
Later, you will see a box pop up showing the BIOS files you previously downloaded to the floppy disk.

 **NOTE** If you want to save the current BIOS for backup purpose, you can begin Step 1 with "Save BIOS to Floppy" item.

2. Move to the BIOS file you want to flash and press Enter.  
**In this example, we only download one BIOS file to the floppy disk so only one BIOS file, 8GE800.F4, is listed.**


 **CAUTION** Please confirm again you have the correct BIOS file for your motherboard.

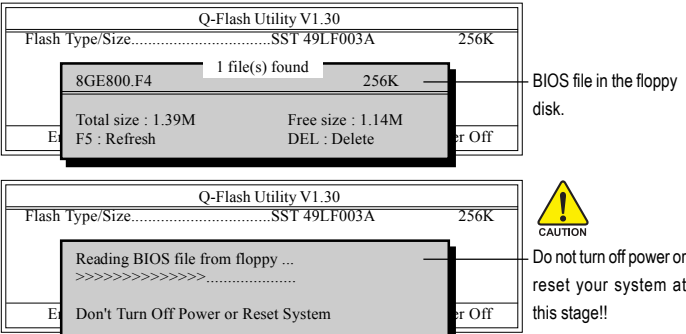

After BIOS file is read, you'll see a confirmation dialog box asking you "Are you sure to update BIOS?"


 **CAUTION** Please do not take out the floppy disk when it begins flashing BIOS.

- Press Y button on your keyboard after you are sure to update BIOS.  
Then it will begin to update BIOS. The progress of updating BIOS will be shown at the same time.

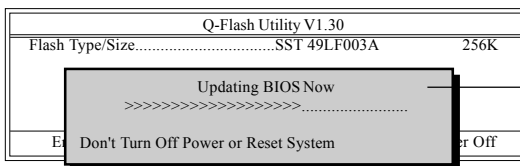


Do not turn off power or reset your system at this stage!!

- Press any keys to return to the Q-Flash menu when the BIOS updating procedure is completed.

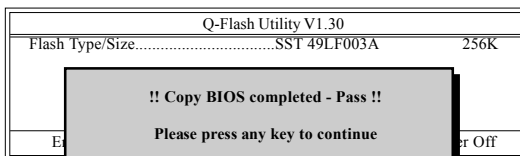


- Press Esc and then Y button to exit the Q-Flash utility. The computer will restart automatically after you exit Q-Flash.

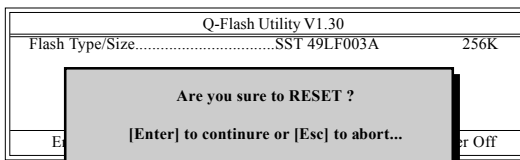

After system reboots, you may find the BIOS version on your boot screen becomes the one you flashed.

The BIOS file becomes F4 after updating

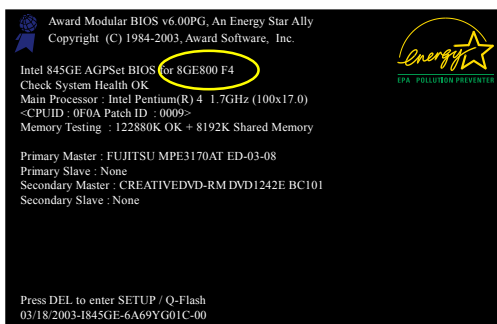

- Press Del to enter BIOS menu after system reboots and "Load BIOS Fail-Safe Defaults". See how to Load BIOS Fail-Safe Defaults, please kindly refer to Step 6 to 7 in **Part One**.

**Congratulation!! You have updated BIOS successfully!!**



## Method 2 : @BIOS™ Utility

If you do not have a DOS startup disk, we recommend that you use the new @BIOS utility. @BIOS allows users to update their BIOS under Windows. Just select the desired @BIOS server to download the latest version of BIOS.

Fig 1. Installing the @BIOS utility

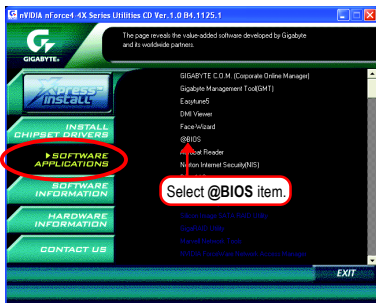


Fig 2. Installation complete and run @BIOS

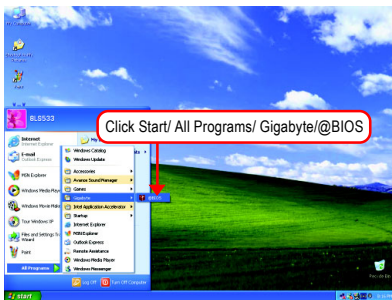


Fig 3. The @BIOS utility

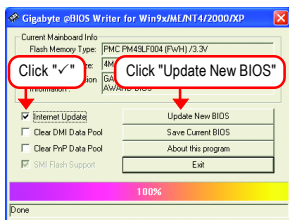


Fig 4. Select the desired @BIOS server



## 1. Methods and steps:

### I. Update BIOS through Internet:

- Click "Internet Update" icon.
- Click "Update New BIOS" icon.
- Select @BIOS™ sever.
- Select the exact model name on your motherboard.
- System will automatically download and update the BIOS.

### II. Update BIOS NOT through Internet:

- Do not click "Internet Update" icon.
- Click "Update New BIOS".
- Please select "All Files" in dialog box while opening the old file.
- Please search for BIOS unzip file, downloading from internet or any other methods (such as: K8NF9.F9).
- Complete update process following the instruction.

### III. Save BIOS:

In the very beginning, there is "Save Current BIOS" icon shown in dialog box. It means to save the current BIOS version.

### IV. Check out supported motherboard and Flash ROM:

In the very beginning, there is "About this program" icon shown in dialog box. It can help you check out which kind of motherboard and which brand of Flash ROM are supported.

## 2. Note:

- I. In method I, if it shows two or more motherboard's model names to be selected, please make sure your motherboard's model name again. Selecting wrong model name will cause the system unbooted.
- II. In method II, be sure that motherboard's model name in BIOS unzip file are the same as your motherboard's. Otherwise, your system won't boot.
- III. In method I, if the BIOS file you need cannot be found in @BIOS™ server, please go onto Gigabyte's website for downloading and updating it according to method II.
- IV. Please note that any interruption during updating will cause system unbooted.
- V. Do not use @BIOS and C.O.M. (Corporate Online Management) at the same time.

## 4-1-4 Serial ATA BIOS Setting Utility Introduction

### RAID Levels

RAID (Redundant Array of Independent Disks) is a method of combining two hard disk drives into one logical unit. The advantage of an Array is to provide better performance or data fault tolerance. Fault tolerance is achieved through data redundant operation, where if one drives fails, a mirrored copy of the data can be found on another drive. This can prevent data loss if the operating system fails or hangs. The individual disk drives in an array are called members. The configuration information of each member is recorded in the reserved sector that identifies the drive as a member. All disk members in a formed disk array are recognized as a single physical drive to the operating system.

Hard disk drives can be combined together through a few different methods. The different methods are referred to as different RAID levels. Different RAID levels represent different performance levels, security levels and implementation costs. The RAID levels which the nVIDIA® nForce4(-4X) chipset supports are RAID 0, RAID 1, RAID 0+RAID 1 and JBOD.

#### RAID 0 (Striping)

RAID 0 reads and writes sectors of data interleaved between multiple drives. If any disk member fails, it affects the entire array. The disk array data capacity is equal to the number of drive members times the capacity of the smallest member. The striping block size can be set from 4KB to 128KB. RAID 0 does not support fault tolerance.

#### RAID 1 (Mirroring)

RAID 1 writes duplicate data onto a pair of drives and reads both sets of data in parallel. If one of the mirrored drives suffers a mechanical failure or does not respond, the remaining drive will continue to function. Due to redundancy, the drive capacity of the array is the capacity of the smallest drive. Under a RAID 1 setup, an extra drive called the spare drive can be attached. Such a drive will be activated to replace a failed drive that is part of a mirrored array. Due to the fault tolerance, if any RAID 1 drive fails, data access will not be affected as long as there are other working drives in the array.

#### RAID 0+1 (Striping + Mirroring)

RAID 0+1 combines the performance of data striping (RAID 0) and the fault tolerance of disk mirroring (RAID 1). Data is striped across multiple drives and duplicated on another set of drives.

#### JBOD (Spanning)

A spanning disk array is equal to the sum of the all drives when the drives used are having different capacities. Spanning stores data onto a drive until it is full, then proceeds to store files onto the next drive in the array. When any disk member fails, the failure affects the entire array. JBOD is not really a RAID and does not support fault tolerance.

Please follow the steps below to construct a complete RAID array:

- 1) Have ready your hard drives for RAID construction.  
Note: To achieve best performance, it is recommended that the hard drives used are of similar make and storage capacity.
- 2) Please attach the hard drive connectors to their appropriate location on the motherboard ie. IDE, SCSI, or SATA.
- 3) Enter the motherboard BIOS and locate RAID setup (Please refer to the section on Integrated Peripherals).
- 4) Enter RAID setup in the BIOS and select the RAID type (For instance, enter F10 to select NVIDIA RAID; Ctrl + S to select Silicon Image).
- 5) Complete driver installation.
- 6) Complete RAID utility installation.


More information on steps 4 and 5 is provided. (For more detailed setup information, please visit our website at <http://www.gigabyte.com.tw> to read or download the information you need.)

Configuring the NVIDIA RAID BIOS

The NVRAID BIOS setup lets you choose the RAID array type and which hard drives you want to make part of the array.


Entering the RAID BIOS Setup

- 1. After rebooting your computer, wait until you see the RAID software prompting you to press **F10**. The RAID prompt appears as part of the system POST and boot process prior to loading the OS. You have a few seconds to press **F10** before the window disappears.

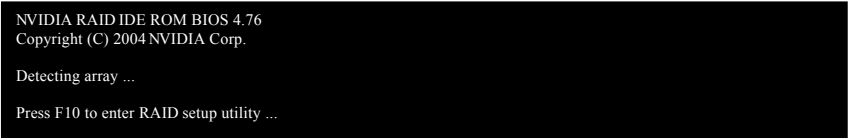

Press **F10**.

The NVIDIA RAID Utility - **Define a New Array** window appears (as Figure below).

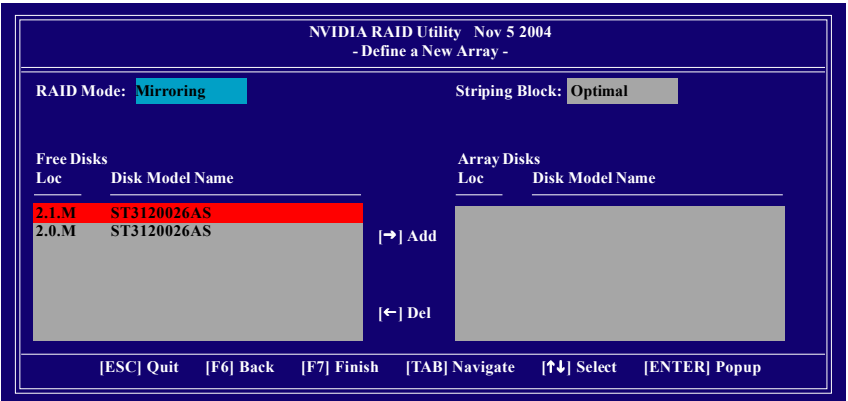

## Using the "Define a New Array" Window

If necessary, press the tab key to move from field to field until the appropriate field is highlighted.

### Selecting the RAID Mode

By default, this is set to Mirroring. To change to a different RAID mode, press the down arrow key until the mode that you want appears in the RAID Mode box - either Mirroring, Striping, Spanning, or Stripe Mirroring.

### Selecting the Striping Block Size

Striping block size is given in kilobytes, and affects how data is arranged on the disk. It is recommended to leave this value at the default Optimal, which is 64KB, but the values can be between 4 KB and 128 KB.

### Assigning the Disks

The disks that you enabled from the RAID Config BIOS setup page appear in the Free Disks block. These are the drives that are available for use as RAID array disks. To designate a free disk to be used as a RAID array disk,

1. Tab to the Free Disks section. The first disk in the list is selected.
2. Move it from the Free Disks block to the Array Disks block by pressing the rightarrow key (→). The first disk in the list is moved, and the next disk in the list is selected and ready to be moved.
3. Continue pressing the right-arrow key (→) until all the disks that you want to use as RAID array disks appear in the Array Disks block.

**NVIDIA RAID Utility - Nov 5 2004**  
- Define a New Array -


RAID Mode: **Mirroring**      Striping Block: **Optimal**

Free Disks			Array Disks	
Loc	Disk Model Name		Loc	Disk Model Name
<div style="position: relative;"> <div style="position: absolute; bottom: 0; right: 0; padding: 5px;"> [→] Add </div> <div style="position: absolute; bottom: 0; left: 0; padding: 5px;"> [←] Del </div> </div>			2.1.M	ST3120026AS
			2.0.M	ST3120026AS

[ESC] Quit    [F6] Back    [F7] Finish    [TAB] Navigate    [↑↓] Select    [ENTER] Popup


## Completing the RAID BIOS Setup

After assigning your RAID array disks, press F7. The **Clear disk data** prompt appears.

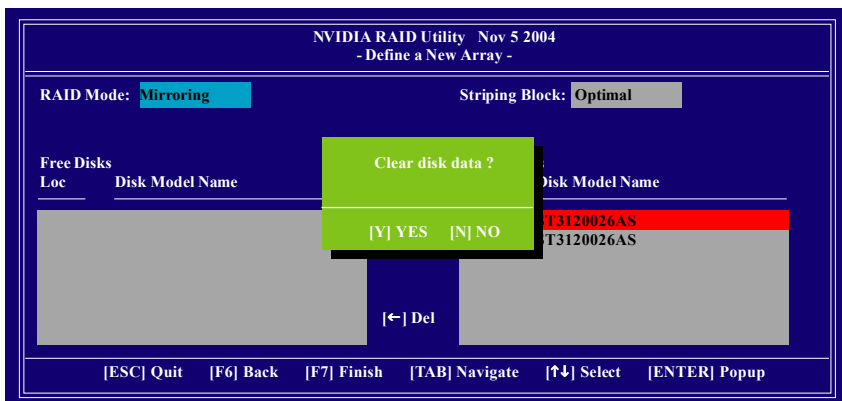

Press **Y** if you want to wipe out all the data from the RAID array, otherwise press **N**. You must choose **Yes** if the drives were previously used as RAID drives. The **Array List** window appears, where you can review the RAID arrays that you have set up.

You can select a disk array as boot device if you want to boot operating system from an array. Use the arrow keys to select the array, then press **B** to specify the array as bootable.

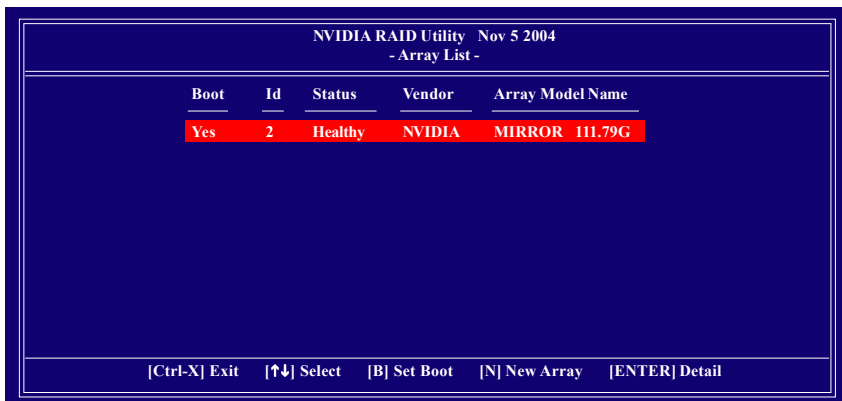

Press **Enter** to view and verify details. The **Array Detail** screen appears.  
The Array Detail screen shows various information about the array that you selected, such as Striping Block used, RAID Mode, Striping Width, Disk Model Name, and disk capacity.

Array 2 : NVIDIA MIRROR 111.79G - Array Detail -					
RAID Mode: Mirroring Striping Width : 1			Striping Block: 64K		
Adapt	Channel	M/S	Index	Disk Model Name	Capacity
2	1	Master	0	ST3120026AS	111.79GB
2	0	Master	1	ST3120026AS	111.79GB
[R] Rebuild    [D] Delete    [C] Clear Disk    [ENTER] Return					

If you want to mark this disk as empty and wipe out all its contents, press **C**.  
At the prompt, press Y to wipe out all the data, otherwise press **N**.  
Press **Enter** again to go back to the previous screen and then press **Ctrl + X** to exit the RAID setup.

Now that the RAID setup has been configured from the RAID BIOS, the next step is to configure and load drivers under Windows.

## Installing the RAID drivers

To install operating system onto a serial ATA hard disk successfully, you need to install the SATA controller driver during OS installation. Without the driver, the hard disk may not be recognized during the Windows setup process. First of all, copy the driver for the SATA controller from the motherboard driver CD-ROM to a floppy disk. See the instructions below about how to copy the driver in MS-DOS mode<sup>(Note 1)</sup>. Prepare a startup disk that has CD-ROM support and a blank formatted floppy disk.

Step 1: Insert the prepared startup disk and motherboard driver CD-ROM in your system. Boot from the startup disk. Once at the A:\> prompt, change to the CD-ROM drive (example: D:\>). At the D:\> prompt, type the following two commands. Press ENTER after each command (Fig.1):

```
cd bootdrv
menu
```

Step 2: When the controller menu (Fig.2) appears, remove the startup disk and insert the blank formatted disk. Select the controller driver by pressing the corresponding letter from the menu. Your system will then automatically zip and transfer this driver file to the floppy disk. Press 0 to exit when finished.

```
10:00/2002 12:51 PM D:\bootdrv
06/15/2004 06:19 AM 94,208 D:\bootdrv\all
04/29/2005 09:43 AM <DIR> Drivers
06/24/2004 06:56 AM 2,792 HIDEWIN.TXT
08/21/2002 03:11 PM 53,248 HIDEWIN.DLL
02/03/2004 03:48 AM 21,294 TD.LOG
04/29/2005 09:46 AM <DIR> Net
04/29/2005 09:43 AM <DIR> Net\Net
10/06/2002 12:51 PM 38,857 OREGUTUP.INF
04/29/2005 09:46 AM <DIR> Other
04/29/2005 09:46 AM <DIR> PDS\atl
04/29/2005 08:09 AM 4,602 Readme.txt
04/29/2005 08:42 AM 405,394 Setup.exe
02/11/2004 10:50 AM 2,613 TIF.INI
02/11/2005 10:27 AM 192,532 Testd.exe
04/29/2005 09:46 AM <DIR> Utility
03/20/2003 06:45 AM 13 UERR16.TIC
02/23/2005 03:01 AM 7,449 Xacd.txt
04/25/2005 11:17 AM 61,440 VCC.DLL
17 File(s) 920,000 bytes
10 Dir(s) 0 bytes free
```

Fig.1

```
02/23/2005 03:01 AM 7,449 Read.txt
04/25/2005 11:17 AM 61,440 VCC.DLL
17 File(s) 920,000 bytes
10 Dir(s) 0 bytes free

D:\>cd bootdrv
D:\bootdrv\menu
1) Boot Menu
2) GIGABYTE
3) I
4) IAA_RAID
5) SCSI
6) Promise
7) RAID
8) Promise
9) Promise
10) Promise
11) Promise
12) Promise
13) Promise
14) Promise
15) Promise
16) Promise
17) Promise
18) Promise
19) Promise
20) Promise
21) Promise
22) Promise
23) Promise
24) Promise
25) Promise
26) Promise
27) Promise
28) Promise
29) Promise
30) Promise
31) Promise
32) Promise
33) Promise
34) Promise
35) Promise
36) Promise
37) Promise
38) Promise
39) Promise
40) Promise
41) Promise
42) Promise
43) Promise
44) Promise
45) Promise
46) Promise
47) Promise
48) Promise
49) Promise
50) Promise
51) Promise
52) Promise
53) Promise
54) Promise
55) Promise
56) Promise
57) Promise
58) Promise
59) Promise
60) Promise
61) Promise
62) Promise
63) Promise
64) Promise
65) Promise
66) Promise
67) Promise
68) Promise
69) Promise
70) Promise
71) Promise
72) Promise
73) Promise
74) Promise
75) Promise
76) Promise
77) Promise
78) Promise
79) Promise
80) Promise
81) Promise
82) Promise
83) Promise
84) Promise
85) Promise
86) Promise
87) Promise
88) Promise
89) Promise
90) Promise
91) Promise
92) Promise
93) Promise
94) Promise
95) Promise
96) Promise
97) Promise
98) Promise
99) Promise
100) Promise
101) Promise
102) Promise
103) Promise
104) Promise
105) Promise
106) Promise
107) Promise
108) Promise
109) Promise
110) Promise
111) Promise
112) Promise
113) Promise
114) Promise
115) Promise
116) Promise
117) Promise
118) Promise
119) Promise
120) Promise
121) Promise
122) Promise
123) Promise
124) Promise
125) Promise
126) Promise
127) Promise
128) Promise
129) Promise
130) Promise
131) Promise
132) Promise
133) Promise
134) Promise
135) Promise
136) Promise
137) Promise
138) Promise
139) Promise
140) Promise
141) Promise
142) Promise
143) Promise
144) Promise
145) Promise
146) Promise
147) Promise
148) Promise
149) Promise
150) Promise
151) Promise
152) Promise
153) Promise
154) Promise
155) Promise
156) Promise
157) Promise
158) Promise
159) Promise
160) Promise
161) Promise
162) Promise
163) Promise
164) Promise
165) Promise
166) Promise
167) Promise
168) Promise
169) Promise
170) Promise
171) Promise
172) Promise
173) Promise
174) Promise
175) Promise
176) Promise
177) Promise
178) Promise
179) Promise
180) Promise
181) Promise
182) Promise
183) Promise
184) Promise
185) Promise
186) Promise
187) Promise
188) Promise
189) Promise
190) Promise
191) Promise
192) Promise
193) Promise
194) Promise
195) Promise
196) Promise
197) Promise
198) Promise
199) Promise
200) Promise
201) Promise
202) Promise
203) Promise
204) Promise
205) Promise
206) Promise
207) Promise
208) Promise
209) Promise
210) Promise
211) Promise
212) Promise
213) Promise
214) Promise
215) Promise
216) Promise
217) Promise
218) Promise
219) Promise
220) Promise
221) Promise
222) Promise
223) Promise
224) Promise
225) Promise
226) Promise
227) Promise
228) Promise
229) Promise
230) Promise
231) Promise
232) Promise
233) Promise
234) Promise
235) Promise
236) Promise
237) Promise
238) Promise
239) Promise
240) Promise
241) Promise
242) Promise
243) Promise
244) Promise
245) Promise
246) Promise
247) Promise
248) Promise
249) Promise
250) Promise
251) Promise
252) Promise
253) Promise
254) Promise
255) Promise
256) Promise
257) Promise
258) Promise
259) Promise
260) Promise
261) Promise
262) Promise
263) Promise
264) Promise
265) Promise
266) Promise
267) Promise
268) Promise
269) Promise
270) Promise
271) Promise
272) Promise
273) Promise
274) Promise
275) Promise
276) Promise
277) Promise
278) Promise
279) Promise
280) Promise
281) Promise
282) Promise
283) Promise
284) Promise
285) Promise
286) Promise
287) Promise
288) Promise
289) Promise
290) Promise
291) Promise
292) Promise
293) Promise
294) Promise
295) Promise
296) Promise
297) Promise
298) Promise
299) Promise
300) Promise
301) Promise
302) Promise
303) Promise
304) Promise
305) Promise
306) Promise
307) Promise
308) Promise
309) Promise
310) Promise
311) Promise
312) Promise
313) Promise
314) Promise
315) Promise
316) Promise
317) Promise
318) Promise
319) Promise
320) Promise
321) Promise
322) Promise
323) Promise
324) Promise
325) Promise
326) Promise
327) Promise
328) Promise
329) Promise
330) Promise
331) Promise
332) Promise
333) Promise
334) Promise
335) Promise
336) Promise
337) Promise
338) Promise
339) Promise
340) Promise
341) Promise
342) Promise
343) Promise
344) Promise
345) Promise
346) Promise
347) Promise
348) Promise
349) Promise
350) Promise
351) Promise
352) Promise
353) Promise
354) Promise
355) Promise
356) Promise
357) Promise
358) Promise
359) Promise
360) Promise
361) Promise
362) Promise
363) Promise
364) Promise
365) Promise
366) Promise
367) Promise
368) Promise
369) Promise
370) Promise
371) Promise
372) Promise
373) Promise
374) Promise
375) Promise
376) Promise
377) Promise
378) Promise
379) Promise
380) Promise
381) Promise
382) Promise
383) Promise
384) Promise
385) Promise
386) Promise
387) Promise
388) Promise
389) Promise
390) Promise
391) Promise
392) Promise
393) Promise
394) Promise
395) Promise
396) Promise
397) Promise
398) Promise
399) Promise
400) Promise
401) Promise
402) Promise
403) Promise
404) Promise
405) Promise
406) Promise
407) Promise
408) Promise
409) Promise
410) Promise
411) Promise
412) Promise
413) Promise
414) Promise
415) Promise
416) Promise
417) Promise
418) Promise
419) Promise
420) Promise
421) Promise
422) Promise
423) Promise
424) Promise
425) Promise
426) Promise
427) Promise
428) Promise
429) Promise
430) Promise
431) Promise
432) Promise
433) Promise
434) Promise
435) Promise
436) Promise
437) Promise
438) Promise
439) Promise
440) Promise
441) Promise
442) Promise
443) Promise
444) Promise
445) Promise
446) Promise
447) Promise
448) Promise
449) Promise
450) Promise
451) Promise
452) Promise
453) Promise
454) Promise
455) Promise
456) Promise
457) Promise
458) Promise
459) Promise
460) Promise
461) Promise
462) Promise
463) Promise
464) Promise
465) Promise
466) Promise
467) Promise
468) Promise
469) Promise
470) Promise
471) Promise
472) Promise
473) Promise
474) Promise
475) Promise
476) Promise
477) Promise
478) Promise
479) Promise
480) Promise
481) Promise
482) Promise
483) Promise
484) Promise
485) Promise
486) Promise
487) Promise
488) Promise
489) Promise
490) Promise
491) Promise
492) Promise
493) Promise
494) Promise
495) Promise
496) Promise
497) Promise
498) Promise
499) Promise
500) Promise
501) Promise
502) Promise
503) Promise
504) Promise
505) Promise
506) Promise
507) Promise
508) Promise
509) Promise
510) Promise
511) Promise
512) Promise
513) Promise
514) Promise
515) Promise
516) Promise
517) Promise
518) Promise
519) Promise
520) Promise
521) Promise
522) Promise
523) Promise
524) Promise
525) Promise
526) Promise
527) Promise
528) Promise
529) Promise
530) Promise
531) Promise
532) Promise
533) Promise
534) Promise
535) Promise
536) Promise
537) Promise
538) Promise
539) Promise
540) Promise
541) Promise
542) Promise
543) Promise
544) Promise
545) Promise
546) Promise
547) Promise
548) Promise
549) Promise
550) Promise
551) Promise
552) Promise
553) Promise
554) Promise
555) Promise
556) Promise
557) Promise
558) Promise
559) Promise
560) Promise
561) Promise
562) Promise
563) Promise
564) Promise
565) Promise
566) Promise
567) Promise
568) Promise
569) Promise
570) Promise
571) Promise
572) Promise
573) Promise
574) Promise
575) Promise
576) Promise
577) Promise
578) Promise
579) Promise
580) Promise
581) Promise
582) Promise
583) Promise
584) Promise
585) Promise
586) Promise
587) Promise
588) Promise
589) Promise
590) Promise
591) Promise
592) Promise
593) Promise
594) Promise
595) Promise
596) Promise
597) Promise
598) Promise
599) Promise
600) Promise
601) Promise
602) Promise
603) Promise
604) Promise
605) Promise
606) Promise
607) Promise
608) Promise
609) Promise
610) Promise
611) Promise
612) Promise
613) Promise
614) Promise
615) Promise
616) Promise
617) Promise
618) Promise
619) Promise
620) Promise
621) Promise
622) Promise
623) Promise
624) Promise
625) Promise
626) Promise
627) Promise
628) Promise
629) Promise
630) Promise
631) Promise
632) Promise
633) Promise
634) Promise
635) Promise
636) Promise
637) Promise
638) Promise
639) Promise
640) Promise
641) Promise
642) Promise
643) Promise
644) Promise
645) Promise
646) Promise
647) Promise
648) Promise
649) Promise
650) Promise
651) Promise
652) Promise
653) Promise
654) Promise
655) Promise
656) Promise
657) Promise
658) Promise
659) Promise
660) Promise
661) Promise
662) Promise
663) Promise
664) Promise
665) Promise
666) Promise
667) Promise
668) Promise
669) Promise
670) Promise
671) Promise
672) Promise
673) Promise
674) Promise
675) Promise
676) Promise
677) Promise
678) Promise
679) Promise
680) Promise
681) Promise
682) Promise
683) Promise
684) Promise
685) Promise
686) Promise
687) Promise
688) Promise
689) Promise
690) Promise
691) Promise
692) Promise
693) Promise
694) Promise
695) Promise
696) Promise
697) Promise
698) Promise
699) Promise
700) Promise
701) Promise
702) Promise
703) Promise
704) Promise
705) Promise
706) Promise
707) Promise
708) Promise
709) Promise
710) Promise
711) Promise
712) Promise
713) Promise
714) Promise
715) Promise
716) Promise
717) Promise
718) Promise
719) Promise
720) Promise
721) Promise
722) Promise
723) Promise
724) Promise
725) Promise
726) Promise
727) Promise
728) Promise
729) Promise
730) Promise
731) Promise
732) Promise
733) Promise
734) Promise
735) Promise
736) Promise
737) Promise
738) Promise
739) Promise
740) Promise
741) Promise
742) Promise
743) Promise
744) Promise
745) Promise
746) Promise
747) Promise
748) Promise
749) Promise
750) Promise
751) Promise
752) Promise
753) Promise
754) Promise
755) Promise
756) Promise
757) Promise
758) Promise
759) Promise
760) Promise
761) Promise
762) Promise
763) Promise
764) Promise
765) Promise
766) Promise
767) Promise
768) Promise
769) Promise
770) Promise
771) Promise
772) Promise
773) Promise
774) Promise
775) Promise
776) Promise
777) Promise
778) Promise
779) Promise
780) Promise
781) Promise
782) Promise
783) Promise
784) Promise
785) Promise
786) Promise
787) Promise
788) Promise
789) Promise
790) Promise
791) Promise
792) Promise
793) Promise
794) Promise
795) Promise
796) Promise
797) Promise
798) Promise
799) Promise
800) Promise
801) Promise
802) Promise
803) Promise
804) Promise
805) Promise
806) Promise
807) Promise
808) Promise
809) Promise
810) Promise
811) Promise
812) Promise
813) Promise
814) Promise
815) Promise
816) Promise
817) Promise
818) Promise
819) Promise
820) Promise
821) Promise
822) Promise
823) Promise
824) Promise
825) Promise
826) Promise
827) Promise
828) Promise
829) Promise
830) Promise
831) Promise
832) Promise
833) Promise
834) Promise
835) Promise
836) Promise
837) Promise
838) Promise
839) Promise
840) Promise
841) Promise
842) Promise
843) Promise
844) Promise
845) Promise
846) Promise
847) Promise
848) Promise
849) Promise
850) Promise
851) Promise
852) Promise
853) Promise
854) Promise
855) Promise
856) Promise
857) Promise
858) Promise
859) Promise
860) Promise
861) Promise
862) Promise
863) Promise
864) Promise
865) Promise
866) Promise
867) Promise
868) Promise
869) Promise
870) Promise
871) Promise
872) Promise
873) Promise
874) Promise
875) Promise
876) Promise
877) Promise
878) Promise
879) Promise
880) Promise
881) Promise
882) Promise
883) Promise
884) Promise
885) Promise
886) Promise
887) Promise
888) Promise
889) Promise
890) Promise
891) Promise
892) Promise
893) Promise
894) Promise
895) Promise
896) Promise
897) Promise
898) Promise
899) Promise
900) Promise
901) Promise
902) Promise
903) Promise
904) Promise
905) Promise
906) Promise
907) Promise
908) Promise
909) Promise
910) Promise
911) Promise
912) Promise
913) Promise
914) Promise
915) Promise
916) Promise
917) Promise
918) Promise
919) Promise
920) Promise
921) Promise
922) Promise
923) Promise
924) Promise
925) Promise
926) Promise
927) Promise
928) Promise
929) Promise
930) Promise
931) Promise
932) Promise
933) Promise
934) Promise
935) Promise
936) Promise
937) Promise
938) Promise
939) Promise
940) Promise
941) Promise
942) Promise
943) Promise
944) Promise
945) Promise
946) Promise
947) Promise
948) Promise
949) Promise
950) Promise
951) Promise
952) Promise
953) Promise
954) Promise
955) Promise
956) Promise
957) Promise
958) Promise
959) Promise
960) Promise
961) Promise
962) Promise
963) Promise
964) Promise
965) Promise
966) Promise
967) Promise
968) Promise
969) Promise
970) Promise
971) Promise
972) Promise
973) Promise
974) Promise
975) Promise
976) Promise
977) Promise
978) Promise
979) Promise
980) Promise
981) Promise
982) Promise
983) Promise
984) Promise
985) Promise
986) Promise
987) Promise
988) Promise
989) Promise
990) Promise
991) Promise
992) Promise
993) Promise
994) Promise
995) Promise
996) Promise
997) Promise
998) Promise
999) Promise
1000) Promise
```

Fig. 2

Step 3: After completing the steps, boot from the Windows installation disk to install the RAID drivers. Press **F6** as soon as you see the "Press F6 if you need to install a third party SCSI or RAID driver" message, then supply serial ATA controller driver by this floppy disk. Follow the on-screen instructions to complete the installation.

(Each time you add a new hard drive to a RAID array, the RAID driver will have to be installed under Windows once for that hard drive. After that, the driver will not have to be installed.)

(Note 1) For users without a startup disk.

Use an alternative system and insert the GIGABYTE motherboard drive CD-ROM. From the CD-ROM drive (example: D:\) double click the **MENU.exe** file in the **BootDrv** folder. A command prompt window will open similar to that in Fig. 2.

(Note2) In the menu list, Intel IAA\_RAID is Intel ICH5R chipset.



## 4-1-5 2-/4-/6-/8- Channel Audio Function Introduction

This motherboard provides 6 audio connectors. You are able to use 2-/4-/6-/8-channels audio feature by audio software selection.

### Introduction of audio connectors:

You may connect CD-ROM/DVD-ROM, walkman or others audio input to Line In.

The front channels or earphone can be connected to Line Out (Front Speaker Out).


Connect microphone to Mic In.

Connect the rear channels to Rear Speaker Out.

Connect the Center/Subwoofer channels to Center/Subwoofer Speaker Out.

Connect the side channels to Side Speaker Out.

The installation of audio software is very simple. Please follow the steps to install the function. (Following pictures are in Windows XP.)

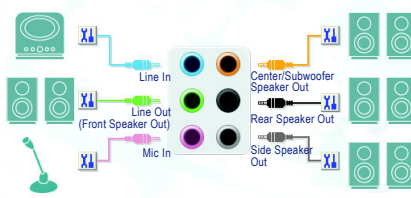


### Stereo Speakers Connection and Settings:


We recommend that you use the speaker with amplifier to acquire the best sound effect if the stereo output is applied.

#### STEP 1:

Connect the stereo speakers or earphone to "Line Out".

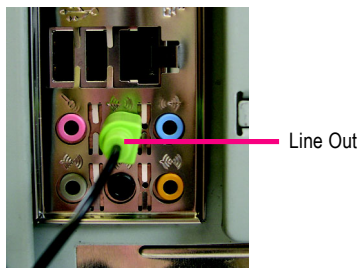



#### STEP 2:

Following installation of the audio driver, you'll find a Sound Effect  icon on the lower right hand taskbar. Click the icon to select the function.




**STEP 3:**

Click "Speaker Configuration" then click on the left selection bar and select "2CH Speaker" to complete 2 channel audio configuration.

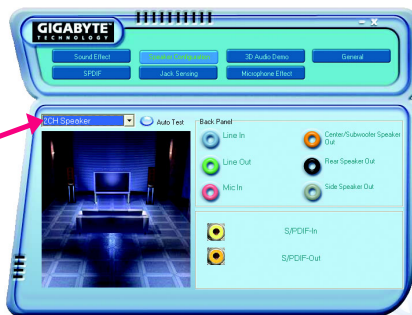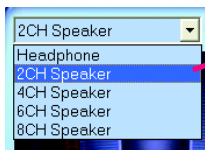**4 Channel Audio Setup****STEP 1:**

Connect the front channels to "Front Speaker Out", the rear channels to "Rear Speaker Out".

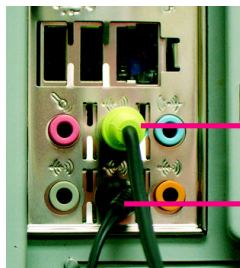

Front Speaker Out


Rear Speaker Out

**STEP 2:**

Following installation of the audio driver, you'll find a Sound Effect icon on the lower right hand taskbar. Click the icon to select the function.

**STEP 3:**


Click "Speaker Configuration" then click on the left selection bar and select "4CH Speaker" to complete 4 channel audio configuration.

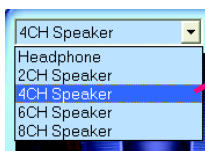

## 6 Channel Audio Setup


### STEP 1 :

Connect the front channels to "Front Speaker Out", the rear channels to "Rear Speaker Out", and the Center/Subwoofer channels to "Center/Subwoofer Speaker Out".

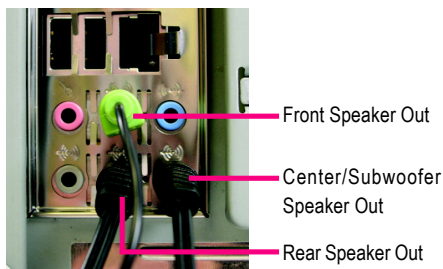


### STEP 2:

Following installation of the audio driver, you'll find a Sound Effect icon on the lower right hand taskbar. Click the icon to select the function.

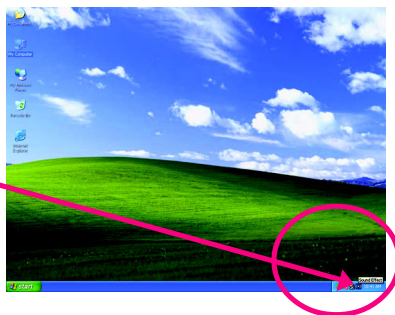

### STEP 3:


Click "Speaker Configuration" then click on the left selection bar and select "6CH Speaker" to complete 6 channel audio configuration.

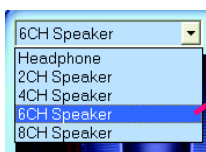

## 8 Channel Audio Setup

### STEP 1 :

Connect the front channels to "Front Speaker Out", the rear channels to "Rear Speaker Out", the Center/Subwoofer channels to "Center/Subwoofer Speaker Out", and the side channels to "Side Speaker Out".

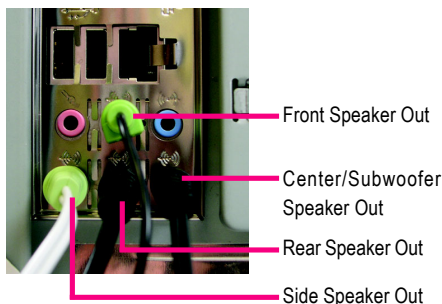


### STEP 2 :

Following installation of the audio driver, you'll find a Sound Effect icon on the lower right hand taskbar. Click the icon to select the function.




### STEP 3:

Click "Speaker Configuration" then click on the left selection bar and select "8CH Speaker" to complete 8 channel audio configuration.

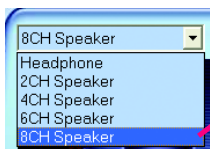

### Sound Effect Configuration:

At the sound effect menu, users can adjust sound option settings as desired.

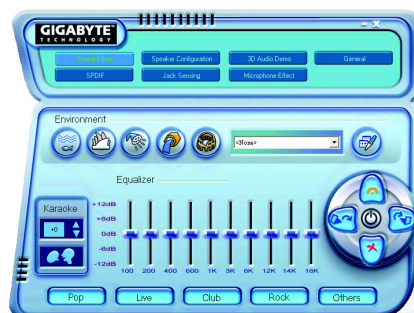

## Jack-Sensing Introduction

Jack-Sensing provides audio connectors error-detection function. (Note)




Install Microsoft DirectX8.1 or later version before to enable Jack-Sensing support for Windows 2000.

Jack-Sensing includes 2 parts: AUTO and MANUAL. Following pictures are in Windows XP:

### Introduction of audio connectors


You may connect CDROM, Walkman or others audio input devices to Line In jack, speakers, earphone or others output devices to Line Out jack, and microphone to MIC In jack.

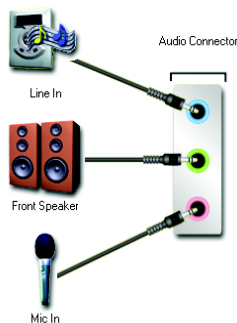

### Auto-detecting:

Please connect the devices to the right jacks as above. A window will appear as right picture if you setup the devices properly.

Please note that 3D audio function will only appear when 3D audio inputs.

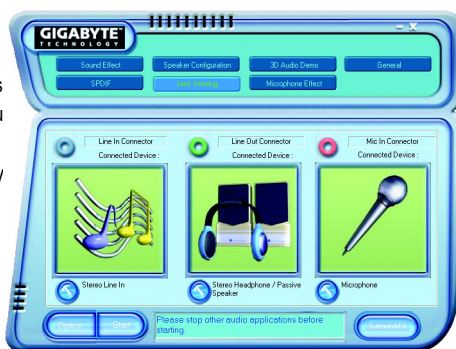



(Note) Only Line In jack, Line Out jack and Mic In jack support Jack-Sensing function.

If you set wrong with the connectors, the warning message will come out as right picture.



### Manual setting:

If the device picture shows different from what you set, please press "Manual Selection" to set.

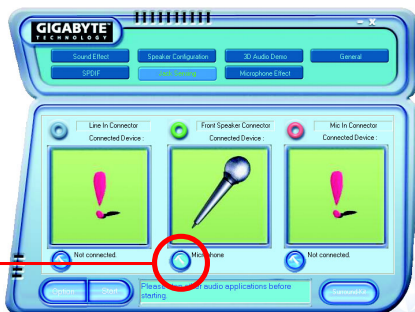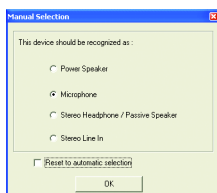

## 4-2 Troubleshooting

Below is a collection of general asked questions. To check general asked questions based on a specific motherboard model, please log on to <http://www.gigabyte.com.tw>

Question 1: I cannot see some options that were included in previous BIOS after updating BIOS. Why?

Answer: Some advanced options are hidden in new BIOS version. Please press Ctrl and F1 keys after entering BIOS menu and you will be able to see these options.

Questions 2: Why is the light of my keyboard/optical mouse still on after computer shuts down?

Answer: In some boards, a small amount of electricity is kept on standby after computer shuts down and that's why the light is still on.

Question 3: How do I clear CMOS?

Answer: If your board has a Clear CMOS jumper, please refer to the Clear CMOS steps in the manual. If your board doesn't have such jumper, you can take off the on-board battery to leak voltage to clear CMOS. Please refer to the steps below:

Steps:

1. Turn off power.
2. Disconnect the power cord from MB.
3. Take out the battery gently and put it aside for about 10 minutes (Or you can use a metal object to connect the positive and negative pins in the battery holder to makethem short for one minute).
4. Re-insert the battery to the battery holder.
5. Connect power cord to MB again and turn on power.
6. Press Del to enter BIOS and load Fail-Safe Defaults(or load Optimized Defaults).
7. Save changes and reboot the system.

Question 4: Why do I still get a weak sound after turning up the speaker to the maximum volume?

Answer: Please make sure the speaker you are using is equipped with an internal amplifier. If not, please change another speaker with power/amplifier and try again later.

Question 5: Sometimes I hear different continuous beeps from computer after system boots up. What do these beeps usually stand for?

Answer: The beep codes below may help you identify the possible computer problems. However, they are only for reference purposes. The situations might differ from case to case.

### → AMI BIOS Beep Codes

\*Computer gives 1 short beep when system boots successfully.

\*Except for beep code 8, these codes are always fatal.

- 1 beep Refresh failure
- 2 beeps Parity error
- 3 beeps Base 64K memory failure
- 4 beeps Timer not operational
- 5 beeps Processor error
- 6 beeps 8042 - gate A20 failure
- 7 beeps Processor exception interrupt error
- 8 beeps Display memory read/write failure
- 9 beeps ROM checksum error
- 10 beeps CMOS shutdown register read/write error
- 11 beeps Cache memory bad

### → AWARD BIOS Beep Codes

1 short: System boots successfully

2 short: CMOS setting error

1 long 1 short: DRAM or M/B error

1 long 2 short: Monitor or display card error

1 long 3 short: Keyboard error

1 long 9 short: BIOS ROM error

Continuous long beeps: DRAM error

Continuous short beeps: Power error



[illegible]





## Contact Us

---

- **Taiwan (Headquarters)**

GIGA-BYTE TECHNOLOGY CO., LTD.

Address: No.6, Bau Chiang Road, Hsin-Tien, Taipei 231,  
Taiwan

TEL: +886-2-8912-4888

FAX: +886-2-8912-4003

Tech. Support :

<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address (English): <http://www.gigabyte.com.tw>

WEB address (Chinese): <http://chinese.giga-byte.com>

---

- **U.S.A.**

G.B.T. INC.

TEL: +1-626-854-9338

FAX: +1-626-854-9339

Tech. Support :

<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://www.giga-byte.com>

---

- **Germany**

G.B.T. TECHNOLOGY TRADING GMBH

Tech. Support :

<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://www.gigabyte.de>

---

---

- **Japan**

NIPPON GIGA-BYTE CORPORATION

WEB address : <http://www.gigabyte.co.jp>

---

- **Singapore**

GIGA-BYTE SINGAPORE PTE. LTD.

Tech. Support :

<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address: <http://www.gigabyte.com.sg>

---

- **U.K.**

G.B.T. TECH. CO., LTD.

Tech. Support :

<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://uk.giga-byte.com>

---

- **The Netherlands**

GIGA-BYTE TECHNOLOGY B.V.

Tech. Support :

<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://www.giga-byte.nl>

---

---

**• China**

NINGBO G.B.T. TECH. TRADING CO., LTD.

Tech. Support :

<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://www.gigabyte.com.cn>

**Shanghai**

TEL: +86-021-63410999

FAX: +86-021-63410100

**Beijing**

TEL: +86-10-62102838

FAX: +86-10-62102848

**Wuhan**

TEL: +86-27-87851061

FAX: +86-27-87851330

**GuangZhou**

TEL: +86-20-87586074

FAX: +86-20-85517843

**Chengdu**

TEL: +86-28-85236930

FAX: +86-28-85256822

**Xian**

TEL: +86-29-85531943

FAX: +86-29-85539821

**Shenyang**

TEL: +86-24-23960918

FAX: +86-24-23960918-809

---

**• Australia**

GIGABYTE TECHNOLOGY PTY. LTD.

Tech. Support :

<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://www.giga-byte.com.au>

---

**• France**

GIGABYTE TECHNOLOGY FRANCE S.A.R.L.

Tech. Support :

<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://www.gigabyte.fr>

---

**• Russia**

Moscow Representative Office Of GIGA-BYTE Technology Co., Ltd.

Tech. Support :

<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://www.gigabyte.ru>

---

**• Poland**

Office of GIGA-BYTE TECHNOLOGY Co., Ltd. in POLAND

Tech. Support :

<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://www.gigabyte.pl>

---

**• Serbia & Montenegro**

Representative Office Of GIGA-BYTE Technology Co., Ltd. in SERBIA & MONTENEGRO

Tech. Support :

<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://www.gigabyte.co.yu>

---

**• Czech Republic**

Representative Office Of GIGA-BYTE Technology Co., Ltd. in CZECH REPUBLIC

Tech. Support :

<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://www.gigabyte.cz>

---

**• Romania**

Representative Office Of GIGA-BYTE Technology Co., Ltd. in Romania

Tech. Support :

<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://www.gigabyte.com.ro>