图形点阵液晶显示模块使用手册

CM24064-18SLYB

广州市瑞通科技有限公司

广州新赛格电子城三楼Ｂ３３１３档

ＴＥＬ：０２０－８８４０３２６８

ＦＡＸ：０２０－８７５８０４８０

ｈｔｔｐ：ｗｗｗ．ｒｔｌｃｄ．ｃｏｍ

Ｅ-ｍａｉｌ：ｘｉｅｚｈｏｎｇ２@１６３．ｃｏｍ

CM24064-18 是一种图形点阵液晶显示器，它由控制器 T6963C、行驱动器/列驱动器及 240×64 全点阵液晶显示器组成.可完成图形显示,也可以显示 15×4 个(16×16 点阵)汉字主要技术参数和性能：

1.电源：VDD：+5V±10%； 模块内自带-15V 负压，用于 LCD 的驱动电压。
2.显示内容：240(列)×64(行)点
3.全屏幕点阵
4. 带 8K 外部数据存储器(其地址由软件设定)
5.其接口适配 8080 系列和 Z80 系列 MPU 的控制时序
6. 驱动方式：1/64 DUTY,1/9 BIAS
7.工作温度：-10℃∽+60℃，存储温度：-20℃∽+70℃
8.显示模式：黄绿膜、灰膜、蓝膜、黑白膜
9.背光特性：LED 或 EL 背光（黄绿色、蓝色、白色、红色）
10.模块封装方式：SMT
11.视角方向：6:00
12.功耗：模块自带负压

二、外形尺寸图

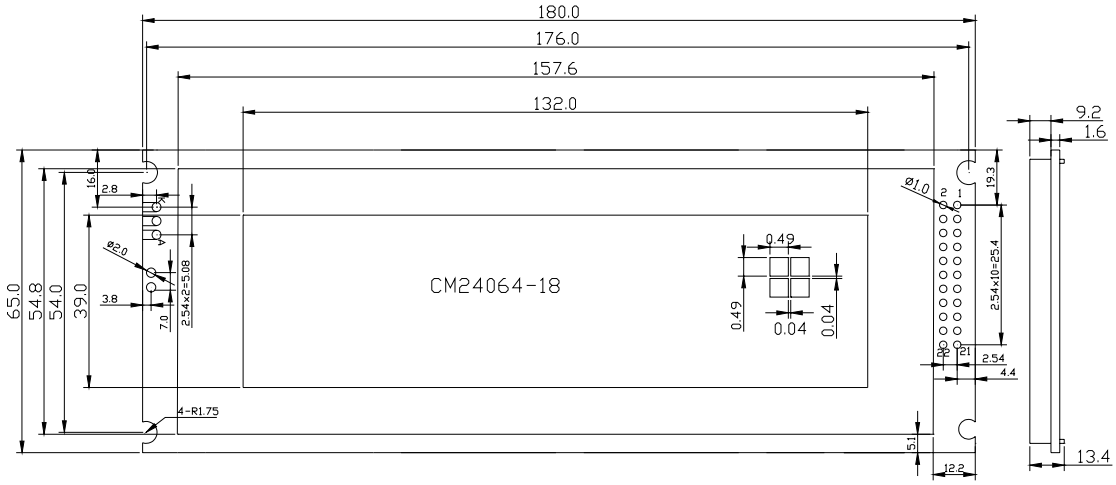

外形尺寸一览

ITEM	NOMINAL DIMEN	UNIT
模块体积	180×65×13.4	mm
视域	132×39	mm
行列点阵数	240×64	DOTS
点距离	0.04×0.04	mm
点大小	0.49×0.49	mm

三、硬件结构图

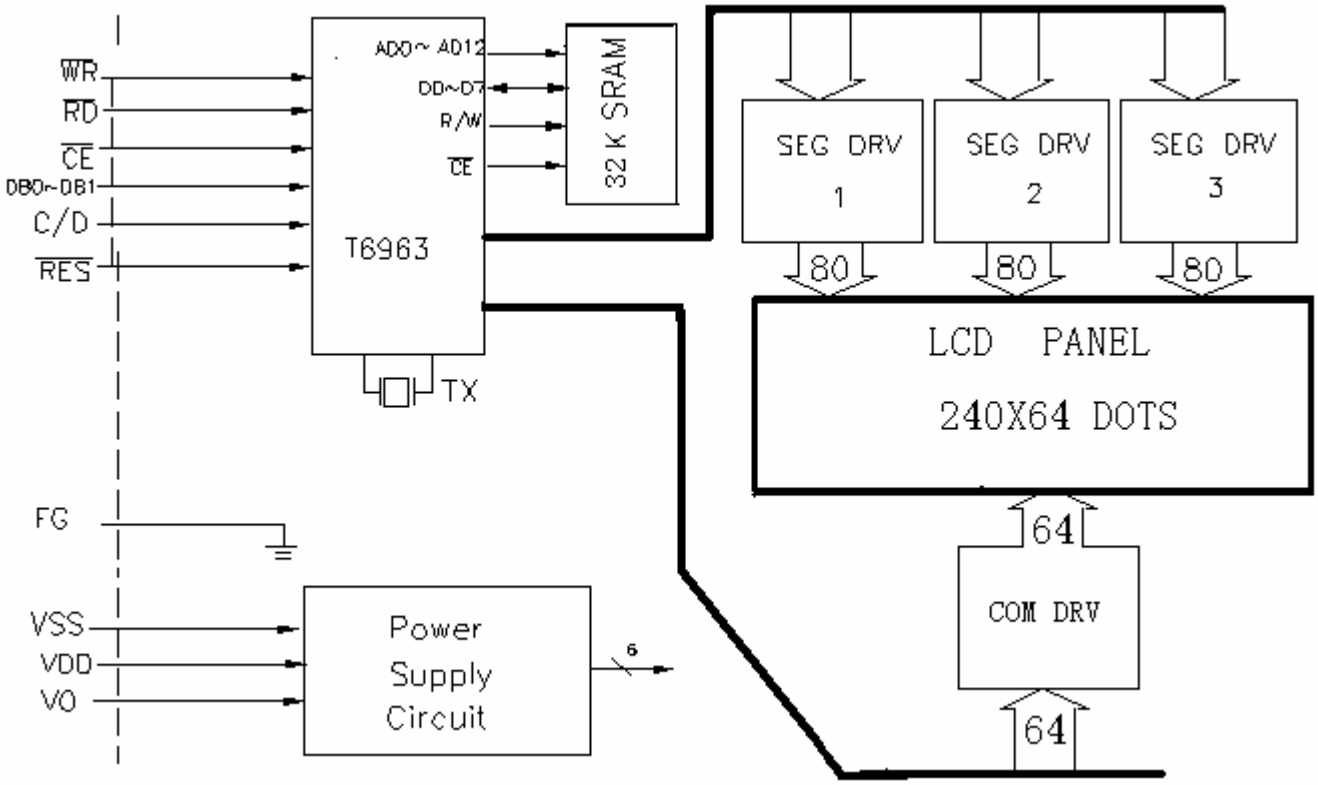

四、模块的外部接口

Pin no	Symbol	Level	Function
1	FG	0V	Frame ground
2	Vss	0V	Ground
3	VDD	5.0V	Supply voltage for logic
4	V0	-	Operating voltage for LCD drive（-10∽15V）
5	/WR	L	Write signal
6	/RD	L	Read signal
7	/CE	L	Chip enable signal
8	C/D	H/L	H: Instruction code L: Data
9	NC	--	No connection
10	/RESET	L	Reset signal
11	DB0	H/L	Data bit 0
12	DB1	H/L	Data bit 1
13	DB2	H/L	Data bit 2
14	DB3	H/L	Data bit 3
15	DB4	H/L	Data bit 4
16	DB5	H/L	Data bit 5
17	DB6	H/L	Data bit 6
18	DB7	H/L	Data bit 7
19	FS	H/L	Font select signal (H:5X8 dots; L:8X8 dots)
20	VEE	--	-15V
21	LED+	5V	LED Backlight
22	LED-	--	LED Backlight

五、IC 说明及指令表

T6963C is LCD controller designed to be used for control LCD driver LCD driver LSIs and display data Memory, It has an 8 bit parallel data bus
And control lines for reading or writing through a MPU I/F.
It has 128 words character generator ROM with the capability to control External display RAM of up to 128K bytes. Allocation of text, graphics And external generator RAM can be easily made and the display window can Be freely moved within the allocated memory range.

It supports a very board range of LCD formats by selecting different Combinations on a set of programmable inputs. It can be used in text,graphic
Modes and has various attribute functions.

指令表：

COMMAND	CODE	D1	D2	FUNCTION
Register Set	00100001	X address	Y address	Cursor pointer set
	00100010	Data	00H	Off register
	00100100	Low address	High address	Address pointer set
Control Word set	01000000	Low address	High address	Text home address set
	01000001	Columns	00H	Text area set
	01000010	Low address	High address	Graphic home address set
	01000011	Columns	00H	Graphic area set
Mode set	1000x000	-	-	"OR" mode
	1000x001	-	-	"EXOR" mode
	1000x011	-	-	"AND" mode
	1000x100	-	-	"Text attribute" mode
	10000xxx	-	-	Internal CGROM mode
	10001xxx	-	-	External CGRAM mode
Display Mode	10010000	-	-	Display off
	1001xx10	-	-	Cursor on, blink off
	1001xx11	-	-	Cursor on, blink on
	100101xx	-	-	Text on, graphic off
	100110xx	-	-	Text off, graphic on
	100111xx	-	-	Text on, graphic on
Cursor Pattern Select	10100000	-	-	1 line cursor
	10100001	-	-	2 line cursor
	10100010	-	-	3 line cursor
	10100011	-	-	4 line cursor
	10100100	-	-	5 line cursor
	10100101	-	-	6 line cursor
	10100110	-	-	7 line cursor
	10100111	-	-	8 line cursor
Data auto Read/write	10110000	-	-	Data auto write set
	10110001	-	-	Data auto read set
	10110010	-	-	Auto reset
Data read Write	11000000	Data	-	Data write and ADP increment
	11000001	-	-	Data read and ADP increment
	11000010	Data	-	Data write and ADP decrement
	11000011	-	-	Data read and ADP decrement
	11000100	Data	-	Data write and ADP no variable
	11000101	-	-	Data read and ADP no variable
Screen peek	11100000	-	-	Screen peek
Screen copy	11101000	-	-	Screen copy
Bit Set/Reset	11110XX	-	-	Bit reset
	11111XXX	-	-	Bit set
	1111X000	-	-	Bit 0(LSB)
	1111X001	-	-	Bit 1
	1111X010	-	-	Bit 2
	1111X011	-	-	Bit 3
	1111X100	-	-	Bit 4
	1111X101	-	-	Bit 5
	1111X110	-	-	Bit 6
	1111X111	-	-	Bit 7(MSB)

六、电气参数

1. ABSOLUTE MAXIMUM RATING

Item	Symbol	Condition	Min	Typ	Max	Unit
Supply Voltage(logic)	VDD-VSS	-	-0.3	-	7	V
Supply Voltage(LCD Drive)	VDD-VO	-	VDD+0.3	-	VDD-0.3	V
Input Voltage	VI	-	-0.3	-	VDD+0.3	V
Operating Temperature	Topr	-	-10	-	+55	° C
Storage Temperature	Tstg	-	-20	-	+60	° C

2. OPTICAL DATA Ta=25° C

Item	Symbol	Condition		Standard Value			Unit
				min	typ	max	
Supply voltage(Logic)	VDD-VSS	-		4.75	5	5.25	V
Supply voltage(LCD Drive)	VDD-VO	-		-	-	-	V
Supply current	IDD	-		-	12.0	17.0	mA
	IO	-		-	1.8	2.5	mA
EL Backlight current	IEL	-		-	100	-	mA
Input high voltage	VIH	High level		0.7VDD	-	VDD	V
Input low voltage	VIL	Low level		0	-	0.3VDD	V
Supply voltage for LCD Drive (1/80 duty)	VDD-VO	Ta=0° C		14.2	14.5	14.8	V
		Ta=25° C		13.3	13.6	13.9	V
		Ta=50° C		12.3	12.6	12.9	V
Contrast Ratio	CR			-	4	-	-
Viewing Angle	-	CR≥2	θ	-10	-	20	deg
			θ	60	-	120	deg
Response Time (rise)	Tr	Note 1	Ta=25°	-	130	200	ms
Response Time (delay)	Td	Note 2	Ta=25°	-	150	230	ms

NOTE 1: Required time for blackening ratio of segment goes up from 0% to 90% when Wave from is switched from one selected one (θ =10° , ϕ=90°)

Note 2: Required time for blackening ratio of segment goes down from 100% to 10% When wave from is switched from one selected one (θ =10° , ϕ=90°)

3. TIMING CHARACTERISICS

Item	Symbol	Min	Max	Unit
Operating frequency	fSCP	-	2.75	MHZ
SCP pulse width	Tcwh, Tcwl	150		ns
SCP rise/fall time	Tr	-	30	ns
LP set up time	Tlsu	150	290	ns
LP hold time	Tlhd	5	40	ns
Data set up time	Tdsu	170	-	ns
Data hold time	Tdhd	80	-	ns
FR delay time	Td	0	90	ns
CDATA set up time	Tcsu	450	850	ns
CDATA hold time	Tchd	450	950	ns

Condition: DV=+5.0V±10%, Ta=-10∽+70° C

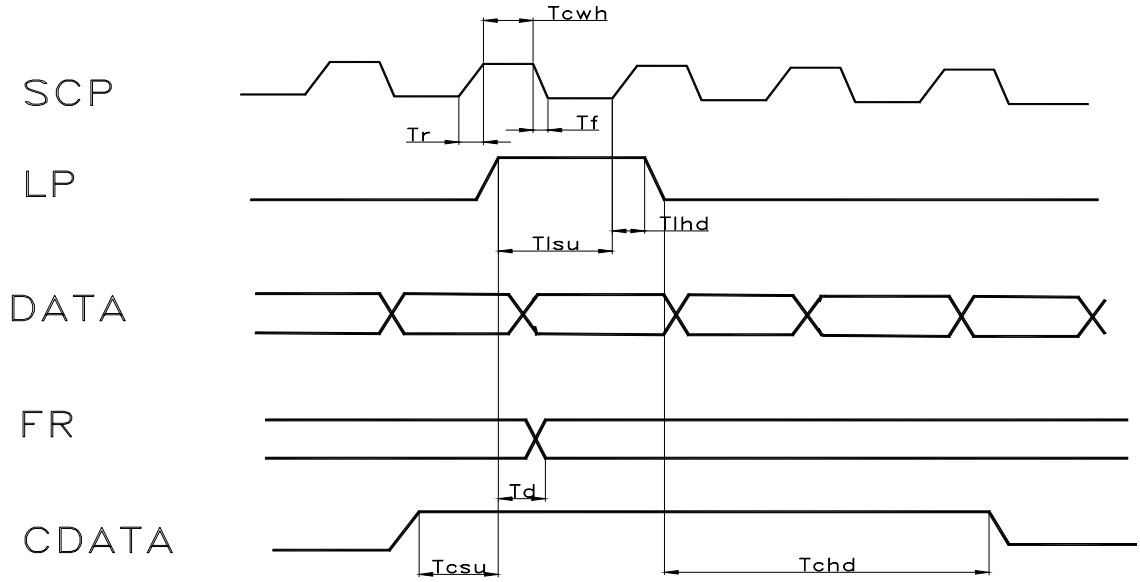

驱动波形图

4. INTERFACE TIMING

Item	Symbol	Min	Max	Unit
C/D set up time	Tcds	100	-	ns
C/D hold time	Tcdh	10	-	ns
CE,RD,WR pulse width	Tce,Trd,Twr	80	-	ns
DATA set up time	Tds	80	-	ns
DATA hold time	Tdh	40	-	ns
Access time	Tacc	-	150	ns
Output hold time	Toh	10	50	ns

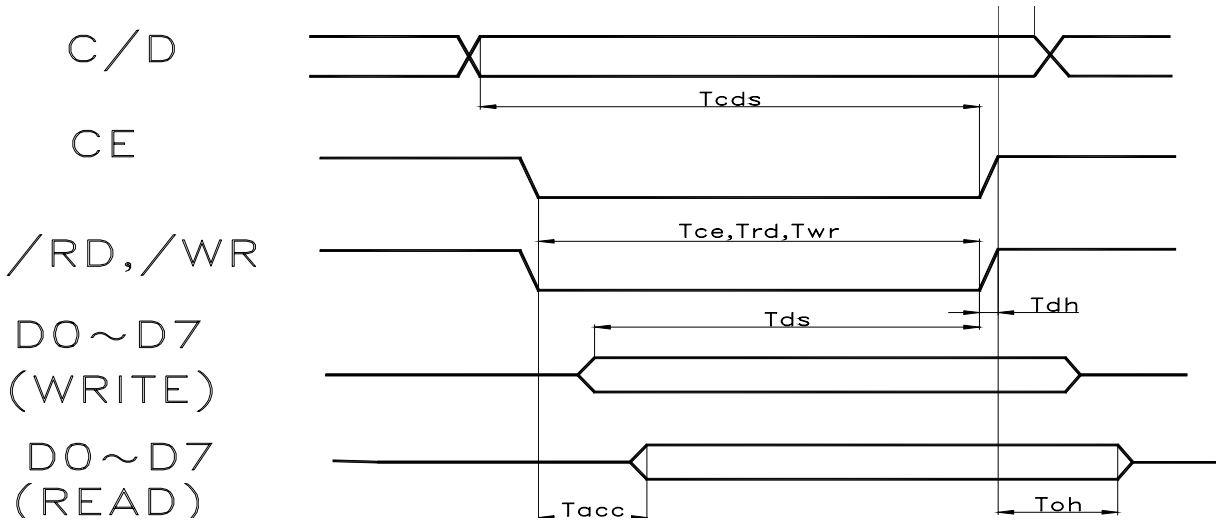

读写时序图

5.EL Backlight Electrical Characteristics

Ta=25° C VDD=5V

Symbol	Parameter	Min	Type	Max	Units
IIN	VDD supply current	10		150	mA
VA-B	Output voltage across lamp	37	40	43	V
		75	80	85	V
FEL	VA-B output drive frequency	600	800	1000	V
VDD	Supply voltage	4.5		12	V
CL	Load capacitance	0		25	nF
TA	Operating temperature	0		50	° C

Note: EL Backlight with white lamp.

七、功能描述

7.1 STATUS READ

Before sending data(read/write),command it is necessary to check the Status.

Status check

Status of T6963c can read from data lines.

/RD L

/WR H

/CE L

C/D H

D0∽D7 Status word

T6963C status word format is following

MSB LSB

STA7	STA6	STA5	STA4	STA3	STA2	STA1	STA0
D7	D6	D5	D4	D3	D2	D1	D0

STA0	Check capability of command execution	0:Disable 1:Enable
STA1	Check capability of data read/write	0:Disable 1:Enable
STA2	Check capability of auto mode data read	0:Disable 1:Enable
STA3	Check capability of auto mode data write	0:Disable 1:Enable
STA4	Not use	
STA5	Check capability of controller operation	0:Disable 1:Enable
STA6	Error flag. Using screen peek/copy command	0:No error 1:error
STA7	Check the condition blink	0:Disable 1:Enable

Note 1:It is necessary to check STA0 and STA1 at the same time, The error Is happened by sending data at executing command.

2:The status check will be enough to check STA0/STA1.

3:STA2/STA3 are valid in auto mode STA0/STA1 are invalid.

Status checking flow:

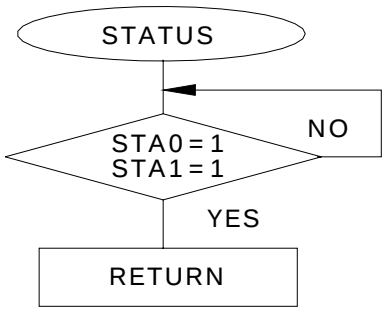

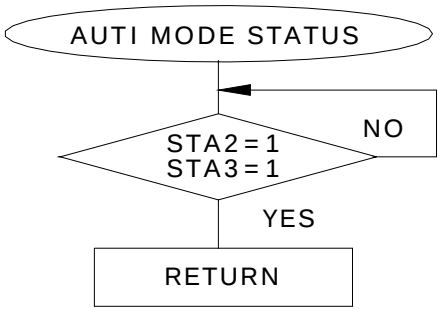

7.2 DATA SET
In T6963C,the data have been set and command executes.
The order of procedure of command sending

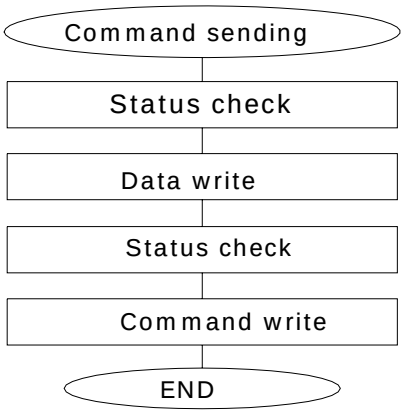

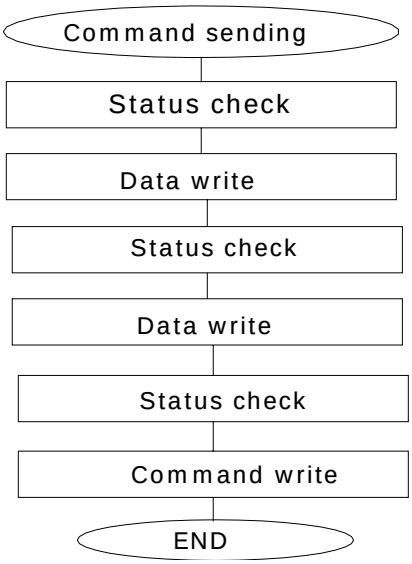

Note:In case of over 2 data sending,

valid).

7.31 Description of command

1. Register set

CODE	HEX	FUNCTION	D1	D2
00100001	21H	Cursor pointer set	X address	Y address
00100010	22H	Offset register set	Data	00H
00100100	24H	Address pointer set	Low address	High address

(1) Cursor pointer set

The position of cursor is specified by X address. The cursor position Is moved only by this command. The cursor pointer doesn't have the Function of increment and decrement. The shift of cursor set by this Command. X address, Y address are specified following.
X address 00H - - - - 4FH(Low 7bits are valid)
Y address 00H - - - - 1FH(Low 5bits are valid)
1 Screen drive
X address 00H - - - - 4FH
Y address 00H - - - - 0FH

(2) Offset register set

The offset register is used to determine external character generator RAM area.
T6963C has 16 bits address lines as follow:

MSB LSB

Ad15	Ad14	Ad13	Ad12	Ad11	Ad10	Ad9	Ad8	Ad7	Ad6	Ad5	Ad4	Ad3	Ad2	Ad1	Ad0

The upper 5 bits (ad15 - ad11) are determined by offset register. The Middle 8 bits (ad10 - ad3) are determined by character code. The Lower 3 bit (ad2 - ad10) are determined by vertical counter. The Lower 5 bit of D1(data) are valid. The data format of external character Generator RAM.

(3) Address pointer set

The address pointer set command is used to indication the start address For writing (or reading) to external RAM.

The flow chart address pointer set command

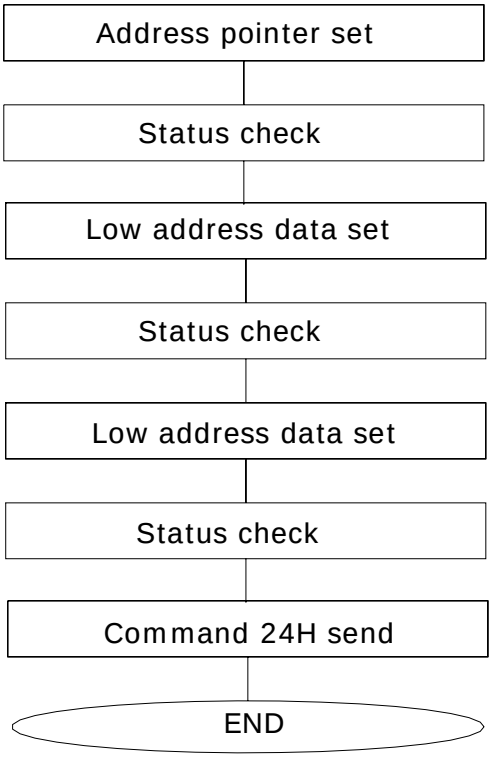

Address pointer set command send

7.32 Control word set

CODE	HEX	FUNCTION	D1	D2
01000000	40H	Text home address set	Low address	High address
01000001	41H	Text area set	Columns	00H
01000010	42H	Graphic home address set	Low address	High address
01000011	43H	Graphic area set	Columns	00H

The home address and column size are defined by this command

(1) Text home address and area set

The starting address of external display RAM for text display is Defined by this command. The text home address shows the left end and Most upper position .

The relationship of external display RAM address and display position

Example:

Text home address: 0000H

Text area: 00A0H

MD2=0, MD3=0: 80 COLUMN

DUAL=0, MDS=1, MD0=1, MD1=0: 28 LINES

Display plane:

0000H	0001H	- - - - -	004EH	004FH	1 Line
00A0H	00A1H	- - - - -	00EEH	00EFH	2 Line
:	:	:	:	:	:
:	:	:	:	:	:
:	:	:	:	:	:
10E0H	10E1H	- - - - -	112EH	112FH	28 Lines

(2) Graphic home address and area set

The starting address of external display RAM for Graphic display is

Defined by this command. The graphic home address shows the left end most Upper line.
The relationship of external display RAM address and display position.
Example:
Graphic home address: 0000H
Graphic area: 0020H
MD2=H, MD3=H: 32 COLUMNS
DUAL=H, MDS=L, MD0=H, MD1=H: 2 LINES
Example:
Display plane:

0000H	0001H	- - - - -	001EH	001FH
0020H	0021H	- - - - -	003EH	003FH
:	:	:	:	:
01E0H	01E1H		01FEH	01FFH

7.33 MODE SET

The display mode is defined by this command. The display mode don't have changed until to send next this command. Logically "OR","EXOR","AND" of text and graphic display can be displayed.
When internal character generator mode is selected, character code 00H - 7FH are selected from built-in character generator ROM. The character code 80H-FFH are automatically selected external character generator RAM.
NOTE: Only text display is attributed, because attributed data is located.
Attribute function
"Reverse display", "Character blink" and "Inhibit" are called "Attribute".The attribute data is written in the graphic area defined by control word set command. The mode set command selects text display only and graphic the mode set command selects text display only and graphic display cannot be displayed. The attribute data of the 1st character in text area
Is written at the IST 1 byte in graphic area, and attribute data of n-th 1byte in graphic area. Attribute function is defined as follow.
Attribute RAM 1byte

X	X	X	X	D3	D2	D1	D0

X: don't care

D3	D2	D1	D0	FUNCTION
0	0	0	0	Normal display
0	1	0	1	Reverse display
0	0	1	1	Inhibit display
1	0	0	0	Blink of normal display
1	1	0	0	Blink of reverse display
1	0	1	1	Blink of inhibit display

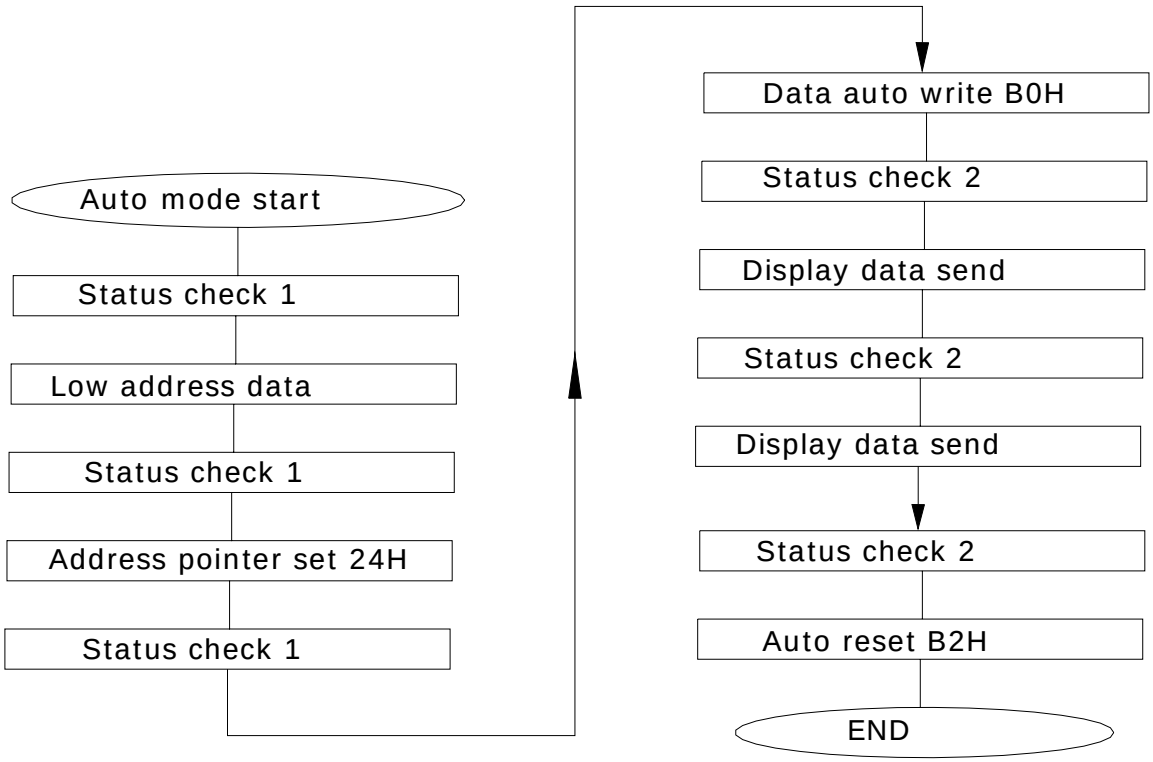

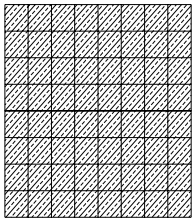
GRAPHIC

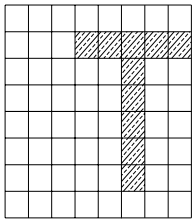
TEXT

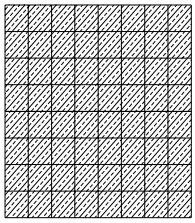
"OR"

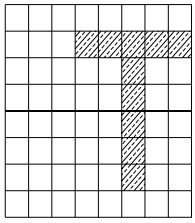
"AND"

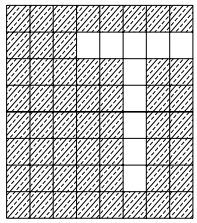
"EXOR"

7.34 DATA AUTO READ/WRITE

CODE	HEX	FUNCTION	OPERAND
10110000	B0H	Data auto write set	-
10110001	B1H	Data auto read set	-
10110010	B2H	Auto reset	-

This command is convenient to send full screen data from external display RAM. After setting auto mode , "Data write(or read)" command is not necessary between each data. "Data auto write (or read)" command should follow the "Address pointer set" and address pointer is automatically increment by + 1 after each data. After sending (or receiving) all data
"Auto reset" is necessary to return normal operation because all data is regarded "Display data" and no command can be accepted in the auto mode.
Note: status check for auto mode(STA2,STA3 should be checked between each Data. Auto reset should be performed after checking (STA3=1 STA2=1)

7.35 DATA READ WRITE

CODE	HEX	FUNCTION	OPERAND
11000000	C0H	Data write and ADP increment	Data
11000001	C1H	Data read and ADP increment	Data
11000010	C2H	Data write and ADP decrement	Data
11000011	C3H	Data read and ADP decrement	Data
11000100	C4H	Data write and ADP nonvariable	Data
11000101	C5H	Data read and ADP nonvariable	Data

This command is used for data write from MPU to external display RAM, AND data read external display RAM to MPU. Data write/data read should be executed after setting address by address pointer set command. Address Pointer can be automatically increment by setting this command.
Note: this command is necessary for each 1 byte data.
Please refer following flow chart.

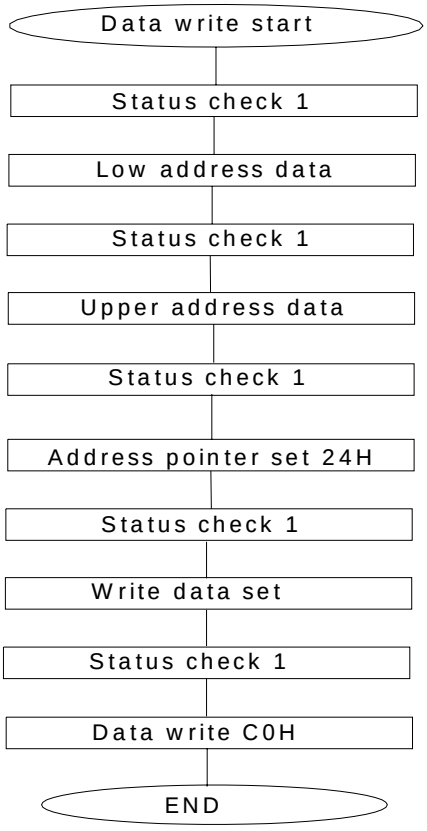

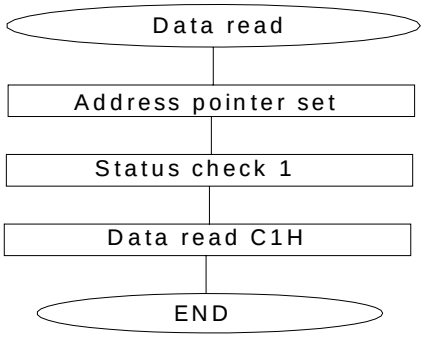

NOTE:

(1) After power on, it is necessary to reset. /RESET is kept "L" between 5 CLOCK up(oscillation clock).
(2) When /HALT has been "L", the oscillation is stopped. It is necessary To turn off power supply for LCD, because LCD goes down by DC bias.
(3) The HALF function contains the RESET function.
(4) After state of RESET/HALT.

TERMINAL	HALT	RESET
D0-D7	F	F
D0-d7	F	F
R/w	H	H
/ce	H (NOTE 1)	H (NOTE 1)
Ad0-ad15	H (NOTE 2)	H (NOTE 2)
/ce0,/ce1	H (NOTE 1)	H (NOTE 1)
ED,HOD	Final Data	Final Data
HSCP	L	L
LP	L	L
CDATA	H	H
FR	H	H
CH1	L	K0
CH2	L	VEND
DSPON	L	L
XO	H	OSC CLOCK

H: Level H
L: Level L
F: Floating (High impedance)
KO: Internal state (TEXT data access) normally open
VEND: End signal of V-counter(Line count) if MDS=H, T2=L,
HEND (end signal of H-count) normally open.
Note 1: In Attribute mode, H or L by state of Graphinc pointer.
Note 2: In Attribute mode, DATA of Graphinc pointer.

八、应用举例

CM24064-18 与单片机 8031 的一种接口如下图.所示：

注:V0 为液晶驱动电压。此图为模块内自带负压的示例

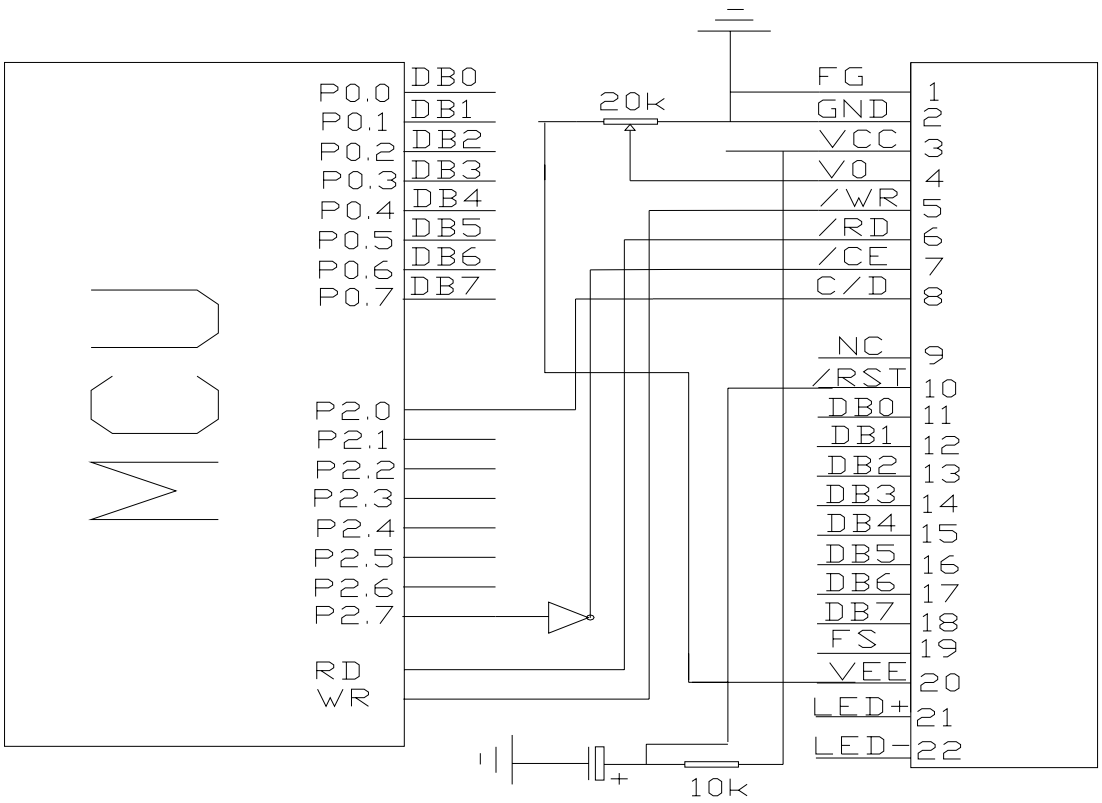


```
        ORG     0000H
    AJMP    MAIN
    ORG     0003H
    AJMP    ZHONGDUAN
    ORG     0035H
ZHONGDUAN:
    HERE:   SJMP  HERE
    RET

;*********************************************
    DATA1   EQU     30H     ;第一参数单元
    DATA2   EQU     31H     ;第二参数/数据单元
```

```
COMMAND     EQU     32H         ;指令代码单元
C_ADD       EQU     8100H       ;指令通道地址
D_ADD       EQU     8000H       ;数据通道地址
LI1         EQU     33H
LI2         EQU     34H
;*********************************************
BUSY1:
        PUSH    DPH
        PUSH    DPL
        MOV     DPTR,#C_ADD
        MOVX    A,@DPTR
        POP     DPL
        POP     DPH
        RET
;*********************************************
BUSY:   LCALL   BUSY1
        JNB     ACC.0, BUSY1
        JNB     ACC.1, BUSY1
        RET
;*************************************
WRITE_COMMAND:PUSH      DPH
              PUSH      DPL
              LCALL     BUSY
              MOV       A,COMMAND
              MOV       DPTR,#C_ADD
              MOVX      @DPTR,A
              POP       DPL
              POP       DPH
              RET
WRITE_DATA:
```

```
                PUSH    DPH
                PUSH    DPL
                LCALL   BUSY
                MOV     A,DATA2
                MOV     DPTR,#D_ADD
                MOVX    @DPTR,A
                POP     DPL
                POP     DPH
                RET

MS40:   MOV     R7,#0E8H
MS2:    MOV     R6,#0FFH
MS1:    DJNZ    R6,MS1
        DJNZ    R7,MS2
        RET
DELAY:  MOV     R5,#05H
DELAY1: LCALL   MS40
        DJNZ    R5,DELAY1
        RET
;************************************************
MAIN:
        MOV     SP,#20H
        MOV     P3,#0FFH
        SETB    EA
        SETB    EX0
        SETB    IT0
        MOV     COMMAND,#90H
        LCALL   WRITE_COMMAND
        LCALL   MS40
        MOV     DATA2,#00H
```

```
LCALL   WRITE_DATA
MOV     DATA2,#00H
LCALL   WRITE_DATA
MOV     COMMAND,#40H    ;文本显示区首地址设置
LCALL   WRITE_COMMAND
MOV     DATA2,#20H
LCALL   WRITE_DATA
MOV     DATA2,#00H
LCALL   WRITE_DATA
MOV     COMMAND,#41H    ;文本显示区宽度设置
LCALL   WRITE_COMMAND

MOV     DATA2,#00H
LCALL   WRITE_DATA
MOV     DATA2,#08H
LCALL   WRITE_DATA
MOV     COMMAND,#42H    ;图形显示区首地址设置
LCALL   WRITE_COMMAND

MOV     DATA2,#1EH
LCALL   WRITE_DATA
MOV     DATA2,#00H
LCALL   WRITE_DATA
MOV     COMMAND,#43H    ;图形显示宽度设置
LCALL   WRITE_COMMAND

MOV     COMMAND,#80H    ;逻辑或,用 CGROM
LCALL   WRITE_COMMAND
```

```
        MOV     COMMAND,#9CH    ;       启动文本.图形.光标显示
        LCALL   WRITE_COMMAND

;*************************************888
        ;显示全屏
          MOV     DATA2,#00H
          LCALL   WRITE_DATA
          MOV     DATA2,#00H
          LCALL   WRITE_DATA
          MOV     COMMAND,#24H
          LCALL   WRITE_COMMAND
          MOV     R3,#00H
          MOV     COMMAND,#0B0H
          LCALL   WRITE_COMMAND
          MOV     R4,#20H
   YY1:
          NOP
   YY:    MOV     A,#0FFH
          MOV     DATA2,A
          LCALL   WRITE_DATA
          DJNZ    R3,YY
          DJNZ    R4,YY1
          MOV     COMMAND,#0B2H
          LCALL   WRITE_COMMAND
          LCALL   MS40

      ;*****************************************
          CLEAR1:
          MOV     DATA2,#00H
          LCALL   WRITE_DATA
```

```
        MOV     DATA2,#00H
        LCALL   WRITE_DATA
        MOV     COMMAND,#24H        ;显示地址设置
        LCALL   WRITE_COMMAND
        MOV     R3,#00H
        MOV     R4,#20H
        MOV     COMMAND,#0B0H       ;自动写入
        LCALL   WRITE_COMMAND
M1:
        NOP
M:      MOV     A,#00H
        MOV     DATA2,A
        LCALL   WRITE_DATA
        DJNZ    R3,M
        DJNZ    R4,M1
        MOV     COMMAND,#0B2H       ;推出自动写入
        LCALL   WRITE_COMMAND

;       ****************************************


;显示字库

        MOV     R3,#00H
        MOV     R4,#7FH
        MOV     COMMAND,#0B0H       ;自动写入
        LCALL   WRITE_COMMAND
        MOV     A,#0FFH             ;写入英文字库
L:      INC     A
        MOV     DATA2,A
```

```
        LCALL   WRITE_DATA
        DJNZ    R4,L
        MOV     COMMAND,#0B2H       ;退出自动写入
        LCALL   WRITE_COMMAND
        LCALL   DELAY

;##########################################

        ;  写 CGROM  80H

        MOV     DATA2,#03H
        LCALL   WRITE_DATA
        MOV     DATA2,#00H
        LCALL   WRITE_DATA
        MOV     COMMAND,#22H
        LCALL   WRITE_COMMAND

        MOV     DATA2,#00H
        LCALL   WRITE_DATA
        MOV     DATA2,#1CH
        LCALL   WRITE_DATA
        MOV     COMMAND,#24H
        LCALL   WRITE_COMMAND

        MOV     R2,#2
        MOV     R0,#0FFH
        MOV     COMMAND,#0B0H
        LCALL   WRITE_COMMAND
```

```
        MOV     DPTR,#TEST
LL2:    NOP
 LL:    CLR     A
        MOVC    A, @A+DPTR
        MOV     DATA2,A
        LCALL   WRITE_DATA
        INC     DPTR
        SETB    P1.5
        DJNZ    R0,LL
        DJNZ    R2,LL2
        MOV     DATA2,#0B2H
        LCALL   WRITE_DATA
        SETB    P1.4

;###########################################
        MOV     DATA2,#00H
        LCALL   WRITE_DATA
        MOV     DATA2,#00H
        LCALL   WRITE_DATA
        MOV     COMMAND,#24H        ;显示地址设置€
        LCALL   WRITE_COMMAND



        MOV     COMMAND,#0B0H
        LCALL   WRITE_COMMAND
        MOV     R2,#2
TIAO1:  MOV     R1,#255
MMM:    MOV     DATA2,#80H
        LCALL   WRITE_DATA
```

```
        DJNZ    R1,MMM
        DJNZ    R2,TIAO1
        MOV     COMMAND,#0B2H
        LCALL   WRITE_COMMAND
        LCALL   DELAY



        MOV     COMMAND,#0B0H
        LCALL   WRITE_COMMAND
        MOV     DATA2,#00H
        LCALL   WRITE_DATA
        MOV     DATA2,#00H
        LCALL   WRITE_DATA
        MOV     COMMAND,#24H        ;显示地址设置€
        LCALL   WRITE_COMMAND
        MOV     R2,#2
TIAO2:  MOV     R1,#255
MMM1:   MOV     DATA2,#81H
        LCALL   WRITE_DATA
        DJNZ    R1,MMM1
        DJNZ    R2,TIAO2
        MOV     COMMAND,#0B2H
        LCALL   WRITE_COMMAND
        LCALL   DELAY



        MOV     COMMAND,#0B0H
        LCALL   WRITE_COMMAND
        MOV     DATA2,#00H
```

```
        LCALL   WRITE_DATA
        MOV     DATA2,#00H
        LCALL   WRITE_DATA
        MOV     COMMAND,#24H        ;显示地址设置€
        LCALL   WRITE_COMMAND
        MOV     R2,#2
TIAO3:  MOV     R1,#255
MMM2:   MOV     DATA2,#82H
        LCALL WRITE_DATA
        DJNZ    R1,MMM2
        DJNZ    R2,TIAO3
        MOV     COMMAND,#0B2H
        LCALL   WRITE_COMMAND
        LCALL   DELAY


        MOV     COMMAND,#0B0H
        LCALL   WRITE_COMMAND
        MOV     DATA2,#00H
        LCALL   WRITE_DATA
        MOV     DATA2,#00H
        LCALL   WRITE_DATA
        MOV     COMMAND,#24H        ;显示地址设置€
        LCALL   WRITE_COMMAND
        MOV     R2,#2
TIAO4:  MOV     R1,#255
NN:     MOV     DATA2,#83H
        LCALL WRITE_DATA
        DJNZ    R1,NN
        DJNZ    R2,TIAO4
```

```
        MOV     COMMAND,#0B2H
        LCALL   WRITE_COMMAND
        LCALL   DELAY

        MOV     COMMAND,#0B0H
        LCALL   WRITE_COMMAND
        MOV     DATA2,#00H
        LCALL   WRITE_DATA
        MOV     DATA2,#00H
        LCALL   WRITE_DATA
        MOV     COMMAND,#24H        ;显示地址设置€
        LCALL   WRITE_COMMAND
        MOV     R2,#2
TIAO5:  MOV     R1,#255
NN1:    MOV     DATA2,#84H
        LCALL WRITE_DATA
        DJNZ    R1,NN1
        DJNZ    R2,TIAO5
        MOV     COMMAND,#0B2H
        LCALL   WRITE_COMMAND
        LCALL   DELAY

        MOV     COMMAND,#0B0H
        LCALL   WRITE_COMMAND
        MOV     DATA2,#00H
        LCALL   WRITE_DATA
        MOV     DATA2,#00H
        LCALL   WRITE_DATA
        MOV     COMMAND,#24H        ;显示地址设置€
```

```
        LCALL   WRITE_COMMAND
        MOV     R2,#2
TIAO6:  MOV     R1,#255
NN2:    MOV     DATA2,#85H
        LCALL WRITE_DATA
        DJNZ    R1,NN2
        DJNZ    R2,TIAO6
        MOV     COMMAND,#0B2H
        LCALL   WRITE_COMMAND
        LCALL   DELAY


        MOV     DATA2,#00H
        LCALL   WRITE_DATA
        MOV     DATA2,#00H
        LCALL   WRITE_DATA
        MOV     COMMAND,#24H        ;显示地址设置
        LCALL   WRITE_COMMAND
        MOV     R3,#00H
        MOV     R4,#20H
        MOV     COMMAND,#0B0H       ;自动写入
        LCALL   WRITE_COMMAND
MM1:    MOV     R4,#20H
MM:     MOV     A,#00H
        MOV     DATA2,A
        LCALL   WRITE_DATA
        DJNZ    R4,MM
        DJNZ    R3,MM1
        MOV     COMMAND,#0B2H       ;推出自动写入
        LCALL   WRITE_COMMAND
```

```
;#####################################################
        TIAN:
         MOV     DATA2,#00H          ;显示地址
         LCALL   WRITE_DATA
         MOV     DATA2,#08H
         LCALL   WRITE_DATA
         MOV     COMMAND,#24H
         LCALL   WRITE_COMMAND

         MOV     COMMAND,#0B0H
         LCALL   WRITE_COMMAND
         MOV     R2,#10H
         MOV     R1,#000H
         MOV     DPTR,#TIANSHI
    SSS:   NOP
    SSS1:  CLR     A
         MOVC    A,@A+DPTR
         MOV     DATA2,A
         LCALL   WRITE_DATA
         INC     DPTR
```

```
        DJNZ    R1,SSS1
        DJNZ    R2,SSS
        MOV     COMMAND,#0B2H
        LCALL   WRITE_COMMAND
        LCALL   DELAY
        LJMP    MAIN

;#############################


TEST: DB 0FFH,00H,0FFH,00H,0FFH,00H,0FFH,00H
      DB 00H,0FFH,00H,0FFH,00H,0FFH,00H,0FFH
      DB 0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH
      DB 55H,55H,55H,55H,55H,55H,55H,55H
      DB 0AAH,55H,0AAH,55H,0AAH,55H,0AAH,55H
      DB 55H,0AAH,55H,0AAH,55H,0AAH,55H,0AAH


  TIANSHI:
DB  0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH
DB  0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH
DB  0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH
DB  0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0C0H,000H,000H,000H
DB  000H,000H,000H,000H,000H,000H,000H,000H,000H,000H,000H,000H,000H,000H,000H,000H
DB  000H,000H,000H,000H,000H,000H,000H,000H,000H,003H,0C0H,000H,000H,000H,000H,000H
DB  000H,000H,000H,000H,000H,000H,000H,000H,000H,000H,000H,000H,000H,000H,000H,000H
DB  000H,000H,000H,000H,000H,000H,000H,003H,0C0H,000H,000H,000H,000H,000H,000H,000H
DB  000H,000H,000H,000H,000H,000H,000H,000H,000H,000H,000H,000H,000H,000H,000H,000H
DB  000H,000H,000H,000H,000H,003H,0C8H,000H,000H,000H,000H,080H,003H,0C0H,000H,000H
DB  001H,082H,004H,008H,000H,040H,000H,000H,000H,000H,000H,000H,080H,080H,000H,000H
```

```
DB   000H, 000H, 000H, 003H, 0C4H, 0FFH, 0C2H, 040H, 080H, 040H, 03EH, 002H, 003H, 0FCH, 01EH, 022H
DB   004H, 008H, 000H, 040H, 03EH, 0FEH, 002H, 020H, 03FH, 0FCH, 040H, 040H, 01FH, 0E0H, 03FH, 0E0H
DB   07FH, 0E3H, 0C4H, 080H, 082H, 048H, 0BFH, 0FFH, 084H, 043H, 002H, 004H, 002H, 012H, 004H, 008H
DB   01FH, 0FFH, 0A4H, 082H, 003H, 020H, 000H, 004H, 04FH, 0FCH, 010H, 020H, 020H, 020H, 000H, 003H
DB   0C0H, 024H, 002H, 048H, 080H, 040H, 012H, 064H, 003H, 0FCH, 002H, 012H, 03FH, 07FH, 080H, 080H
DB   024H, 0FEH, 002H, 020H, 000H, 004H, 012H, 040H, 01FH, 0E0H, 03FH, 0E0H, 000H, 003H, 0D0H, 023H
DB   01FH, 0C8H, 080H, 040H, 00AH, 088H, 002H, 004H, 03FH, 082H, 004H, 008H, 001H, 000H, 028H, 082H
DB   004H, 010H, 07FH, 0E5H, 012H, 040H, 010H, 020H, 020H, 020H, 000H, 003H, 0CAH, 0C1H, 002H, 048H
DB   087H, 0FEH, 009H, 011H, 003H, 0FCH, 006H, 022H, 005H, 008H, 003H, 0FCH, 028H, 082H, 004H, 008H
DB   000H, 004H, 0A4H, 0F8H, 01FH, 0E0H, 03FH, 0E1H, 0FFH, 0FBH, 0CAH, 008H, 002H, 048H, 084H, 042H
DB   002H, 001H, 082H, 004H, 007H, 012H, 006H, 07FH, 006H, 004H, 024H, 0FEH, 008H, 00CH, 000H, 004H
DB   0A4H, 088H, 010H, 020H, 008H, 080H, 004H, 003H, 0C2H, 008H, 002H, 048H, 084H, 042H, 03FH, 0E2H
DB   000H, 000H, 00AH, 092H, 00CH, 042H, 00AH, 004H, 022H, 0A0H, 011H, 007H, 03FH, 0C4H, 02DH, 050H
DB   000H, 000H, 008H, 080H, 004H, 003H, 0C4H, 0FFH, 082H, 048H, 084H, 042H, 002H, 005H, 01FH, 09FH
DB   08AH, 003H, 0B4H, 022H, 013H, 0FCH, 022H, 092H, 021H, 082H, 020H, 044H, 057H, 030H, 0FCH, 0FCH
DB   088H, 090H, 044H, 083H, 0C4H, 008H, 002H, 048H, 084H, 042H, 007H, 009H, 090H, 090H, 092H, 01EH
DB   004H, 024H, 022H, 004H, 02AH, 094H, 001H, 000H, 020H, 044H, 044H, 0A0H, 084H, 084H, 048H, 090H
DB   044H, 043H, 0D8H, 01CH, 007H, 048H, 084H, 042H, 006H, 081H, 01FH, 09FH, 0A2H, 0E2H, 004H, 018H
DB   002H, 004H, 024H, 088H, 002H, 010H, 03FH, 0C5H, 0C4H, 040H, 0FCH, 0FCH, 028H, 0A0H, 084H, 023H
DB   0C8H, 02BH, 018H, 088H, 084H, 042H, 00AH, 062H, 010H, 090H, 082H, 002H, 004H, 018H, 003H, 0FCH
DB   020H, 088H, 004H, 008H, 020H, 044H, 044H, 060H, 084H, 084H, 028H, 0C1H, 004H, 033H, 0C8H, 0C9H
DB   0C0H, 088H, 084H, 04AH, 012H, 044H, 010H, 090H, 082H, 002H, 004H, 024H, 002H, 004H, 020H, 084H
DB   008H, 0FCH, 020H, 004H, 044H, 0A0H, 084H, 084H, 008H, 082H, 004H, 013H, 0CBH, 008H, 081H, 000H
DB   084H, 044H, 022H, 018H, 01FH, 09FH, 082H, 002H, 004H, 043H, 082H, 024H, 020H, 0A3H, 09FH, 08CH
DB   000H, 014H, 045H, 010H, 0FCH, 0FDH, 0FFH, 0FCH, 004H, 003H, 0C8H, 008H, 002H, 000H, 080H, 040H
DB   002H, 060H, 010H, 090H, 082H, 002H, 015H, 081H, 002H, 01CH, 020H, 0C1H, 008H, 008H, 000H, 008H
DB   046H, 01CH, 084H, 084H, 000H, 000H, 014H, 003H, 0C8H, 008H, 000H, 000H, 000H, 040H, 002H, 000H
DB   000H, 000H, 002H, 002H, 008H, 000H, 002H, 008H, 020H, 080H, 000H, 000H, 000H, 000H, 044H, 008H
DB   000H, 000H, 000H, 000H, 008H, 003H, 0C0H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
```

```
DB   000H, 000H, 000H, 003H, 0C0H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 003H, 0C8H, 000H, 000H, 000H, 000H, 080H, 003H, 0C0H, 000H, 000H, 001H, 082H, 004H, 008H
DB   000H, 040H, 000H, 000H, 000H, 000H, 000H, 000H, 080H, 080H, 000H, 000H, 000H, 000H, 000H, 003H
DB   0C4H, 0FFH, 0C2H, 040H, 080H, 040H, 03EH, 002H, 003H, 0FCH, 01EH, 022H, 004H, 008H, 000H, 040H
DB   03EH, 0FEH, 002H, 020H, 03FH, 0FCH, 040H, 040H, 01FH, 0E0H, 03FH, 0E0H, 07FH, 0E3H, 0C4H, 080H
DB   082H, 048H, 0BFH, 0FFH, 084H, 043H, 002H, 004H, 002H, 012H, 004H, 008H, 01FH, 0FFH, 0A4H, 082H
DB   003H, 020H, 000H, 004H, 04FH, 0FCH, 010H, 020H, 020H, 020H, 000H, 003H, 0C0H, 024H, 002H, 048H
DB   080H, 040H, 012H, 064H, 003H, 0FCH, 002H, 012H, 03FH, 07FH, 080H, 080H, 024H, 0FEH, 002H, 020H
DB   000H, 004H, 012H, 040H, 01FH, 0E0H, 03FH, 0E0H, 000H, 003H, 0D0H, 023H, 01FH, 0C8H, 080H, 040H
DB   00AH, 088H, 002H, 004H, 03FH, 082H, 004H, 008H, 001H, 000H, 028H, 082H, 004H, 010H, 07FH, 0E5H
DB   012H, 040H, 010H, 020H, 020H, 020H, 000H, 003H, 0CAH, 0C1H, 002H, 048H, 087H, 0FEH, 009H, 011H
DB   003H, 0FCH, 006H, 022H, 005H, 008H, 003H, 0FCH, 028H, 082H, 004H, 008H, 000H, 004H, 0A4H, 0F8H
DB   01FH, 0E0H, 03FH, 0E1H, 0FFH, 0FBH, 0CAH, 008H, 002H, 048H, 084H, 042H, 002H, 001H, 082H, 004H
DB   007H, 012H, 006H, 07FH, 006H, 004H, 024H, 0FEH, 008H, 00CH, 000H, 004H, 0A4H, 088H, 010H, 020H
DB   008H, 080H, 004H, 003H, 0C2H, 008H, 002H, 048H, 084H, 042H, 03FH, 0E2H, 000H, 000H, 00AH, 092H
DB   00CH, 042H, 00AH, 004H, 022H, 0A0H, 011H, 007H, 03FH, 0C4H, 02DH, 050H, 000H, 000H, 008H, 080H
DB   004H, 003H, 0C4H, 0FFH, 082H, 048H, 084H, 042H, 002H, 005H, 01FH, 09FH, 08AH, 003H, 0B4H, 022H
DB   013H, 0FCH, 022H, 092H, 021H, 082H, 020H, 044H, 057H, 030H, 0FCH, 0FCH, 088H, 090H, 044H, 083H
DB   0C4H, 008H, 002H, 048H, 084H, 042H, 007H, 009H, 090H, 090H, 092H, 01EH, 004H, 024H, 022H, 004H
DB   02AH, 094H, 001H, 000H, 020H, 044H, 044H, 0A0H, 084H, 084H, 048H, 090H, 044H, 043H, 0D8H, 01CH
DB   007H, 048H, 084H, 042H, 006H, 081H, 01FH, 09FH, 0A2H, 0E2H, 004H, 018H, 002H, 004H, 024H, 088H
DB   002H, 010H, 03FH, 0C5H, 0C4H, 040H, 0FCH, 0FCH, 028H, 0A0H, 084H, 023H, 0C8H, 02BH, 018H, 088H
DB   084H, 042H, 00AH, 062H, 010H, 090H, 082H, 002H, 004H, 018H, 003H, 0FCH, 020H, 088H, 004H, 008H
DB   020H, 044H, 044H, 060H, 084H, 084H, 028H, 0C1H, 004H, 033H, 0C8H, 0C9H, 0C0H, 088H, 084H, 04AH
DB   012H, 044H, 010H, 090H, 082H, 002H, 004H, 024H, 002H, 004H, 020H, 084H, 008H, 0FCH, 020H, 004H
DB   044H, 0A0H, 084H, 084H, 008H, 082H, 004H, 013H, 0CBH, 008H, 081H, 000H, 084H, 044H, 022H, 018H
DB   01FH, 09FH, 082H, 002H, 004H, 043H, 082H, 024H, 020H, 0A3H, 09FH, 08CH, 000H, 014H, 045H, 010H
DB   0FCH, 0FDH, 0FFH, 0FCH, 004H, 003H, 0C8H, 008H, 002H, 000H, 080H, 040H, 002H, 060H, 010H, 090H
DB   082H, 002H, 015H, 081H, 002H, 01CH, 020H, 0C1H, 008H, 008H, 000H, 008H, 046H, 01CH, 084H, 084H
```

```
DB  000H, 000H, 014H, 003H, 0C8H, 008H, 000H, 000H, 000H, 040H, 002H, 000H, 000H, 000H, 002H, 002H
DB  008H, 000H, 002H, 008H, 020H, 080H, 000H, 000H, 000H, 000H, 044H, 008H, 000H, 000H, 000H, 000H
DB  008H, 003H, 0C0H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB  000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 003H
DB  0C0H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB  000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 003H, 0C8H, 000H
DB  000H, 000H, 000H, 080H, 003H, 0C0H, 000H, 000H, 001H, 082H, 004H, 008H, 000H, 040H, 000H, 000H
DB  000H, 000H, 000H, 000H, 080H, 080H, 000H, 000H, 000H, 000H, 000H, 003H, 0C4H, 0FFH, 0C2H, 040H
DB  080H, 040H, 03EH, 002H, 003H, 0FCH, 01EH, 022H, 004H, 008H, 000H, 040H, 03EH, 0FEH, 002H, 020H
DB  03FH, 0FCH, 040H, 040H, 01FH, 0E0H, 03FH, 0E0H, 07FH, 0E3H, 0C4H, 080H, 082H, 048H, 0BFH, 0FFH
DB  084H, 043H, 002H, 004H, 002H, 012H, 004H, 008H, 01FH, 0FFH, 0A4H, 082H, 003H, 020H, 000H, 004H
DB  04FH, 0FCH, 010H, 020H, 020H, 020H, 000H, 003H, 0C0H, 024H, 002H, 048H, 080H, 040H, 012H, 064H
DB  003H, 0FCH, 002H, 012H, 03FH, 07FH, 080H, 080H, 024H, 0FEH, 002H, 020H, 000H, 004H, 012H, 040H
DB  01FH, 0E0H, 03FH, 0E0H, 000H, 003H, 0C0H, 023H, 01FH, 0C8H, 080H, 040H, 00AH, 088H, 002H, 004H
DB  03FH, 082H, 004H, 008H, 001H, 000H, 028H, 082H, 004H, 010H, 07FH, 0E5H, 012H, 040H, 010H, 020H
DB  020H, 020H, 000H, 003H, 0CAH, 0C1H, 002H, 048H, 087H, 0FEH, 009H, 011H, 003H, 0FCH, 006H, 022H
DB  005H, 008H, 003H, 0FCH, 028H, 082H, 004H, 008H, 000H, 004H, 0A4H, 0F8H, 01FH, 0E0H, 03FH, 0E1H
DB  0FFH, 0FBH, 0CAH, 008H, 002H, 048H, 084H, 042H, 002H, 001H, 082H, 004H, 007H, 012H, 006H, 07FH
DB  006H, 004H, 024H, 0FEH, 008H, 00CH, 000H, 004H, 0A4H, 088H, 010H, 020H, 008H, 080H, 004H, 003H
DB  0C2H, 008H, 002H, 048H, 084H, 042H, 03FH, 0E2H, 000H, 000H, 00AH, 092H, 00CH, 042H, 00AH, 004H
DB  022H, 0A0H, 011H, 007H, 03FH, 0C4H, 02DH, 050H, 000H, 000H, 008H, 080H, 004H, 003H, 0C4H, 0FFH
DB  082H, 048H, 084H, 042H, 002H, 005H, 01FH, 09FH, 08AH, 003H, 0B4H, 022H, 013H, 0FCH, 022H, 092H
DB  021H, 082H, 020H, 044H, 057H, 030H, 0FCH, 0FCH, 088H, 090H, 044H, 083H, 0C4H, 008H, 002H, 048H
DB  084H, 042H, 007H, 009H, 090H, 090H, 092H, 01EH, 004H, 024H, 022H, 004H, 02AH, 094H, 001H, 000H
DB  020H, 044H, 044H, 0A0H, 084H, 084H, 048H, 090H, 044H, 043H, 0C8H, 01CH, 007H, 048H, 084H, 042H
DB  006H, 081H, 01FH, 09FH, 0A2H, 0E2H, 004H, 018H, 002H, 004H, 024H, 088H, 002H, 010H, 03FH, 0C5H
DB  0C4H, 040H, 0FCH, 0FCH, 028H, 0A0H, 084H, 023H, 0C8H, 02BH, 018H, 088H, 084H, 042H, 00AH, 062H
DB  010H, 090H, 082H, 002H, 004H, 018H, 003H, 0FCH, 020H, 088H, 004H, 008H, 020H, 044H, 044H, 060H
DB  084H, 084H, 028H, 0C1H, 004H, 033H, 0C8H, 0C9H, 0C0H, 088H, 084H, 04AH, 012H, 044H, 010H, 090H
DB  082H, 002H, 004H, 024H, 002H, 004H, 020H, 084H, 008H, 0FCH, 020H, 004H, 044H, 0A0H, 084H, 084H
```

```
DB   008H, 082H, 004H, 013H, 0CBH, 008H, 081H, 000H, 084H, 044H, 022H, 018H, 01FH, 09FH, 082H, 002H
DB   004H, 043H, 082H, 024H, 020H, 0A3H, 09FH, 08CH, 000H, 014H, 045H, 010H, 0FCH, 0FDH, 0FFH, 0FCH
DB   004H, 003H, 0C8H, 008H, 002H, 000H, 080H, 040H, 002H, 060H, 010H, 090H, 082H, 002H, 015H, 081H
DB   002H, 01CH, 020H, 0C1H, 008H, 008H, 000H, 008H, 046H, 01CH, 084H, 084H, 000H, 000H, 014H, 003H
DB   0C8H, 008H, 000H, 000H, 000H, 040H, 002H, 000H, 000H, 000H, 002H, 002H, 008H, 000H, 002H, 008H
DB   020H, 080H, 000H, 000H, 000H, 000H, 044H, 008H, 000H, 000H, 000H, 000H, 008H, 003H, 0C0H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 003H, 0C0H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 003H, 0C0H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 003H, 0C0H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 003H, 0C0H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 003H, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH
DB   0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH
DB   0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH
DB   0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH, 0FFH
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
```

```
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
```

```
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
```

```
DB  000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
```

```
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H
DB   000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H, 000H

        END
```