


Introduction

The Tandem X20 is a pioneering dual-band radio transmitter, it drew on feedback and experience with previous radios and adds many new features such as color touch screen, an ergonomic design that provides unprecedented comfort in the hand. On the RF side, we have given it the powerful RF system, the TD dual RF system, which does not simply reiterate the combined features of the FRISKY900MHz and 2.4GHz RF systems. The TD is characterized by its true simultaneous dual-band remote control with telemetry, enabling incredible and unmatched end-to-end 4ms latency. This radio ships with Ethos, a completely new system that provides users with a powerful, intuitive, and flexible experience that maximizes the fun of the hobby.

Layout

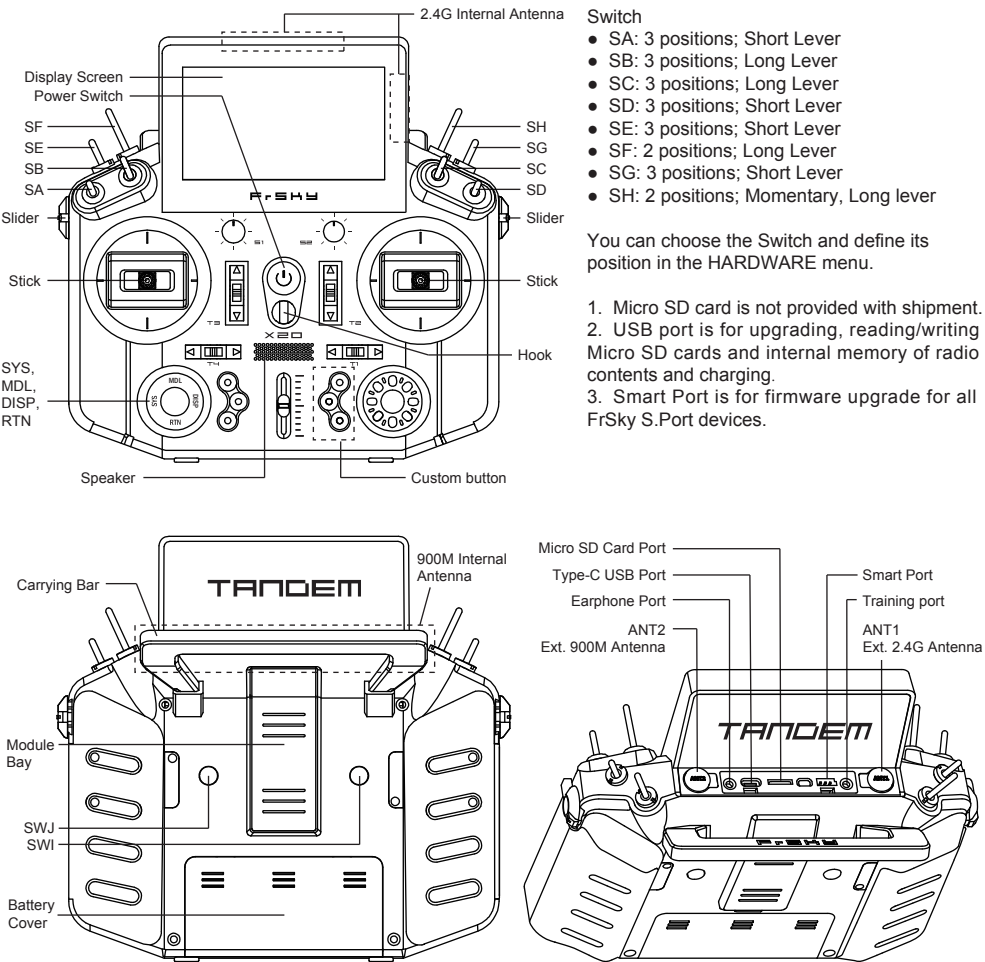


FrSky Electronic Co., Ltd. www.frsky-rc.com Contact us: frsky@frsky-rc.com
Add: F-4, Building C, Zhongxiu Technology Park, No.3 Yuanxi Road, Wuxi, 214125, Jiangsu, China Technical Support: sales4tech@gmail.com

01140134


Infinity 24 Antenna

Recommended 2.4GHz optional high-gain antenna for achieving higher performance and further range.

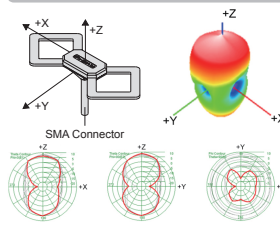

Zipp9 (868MHz) / Zipp9 (915MHz) Antenna

Recommended 900MHz optional high-gain antenna for achieving higher performance and further range.

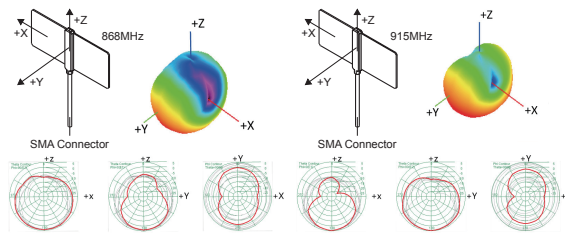

Note: Please keep the aircraft in the optimal radiation range of the directional antenna at all times.

Specifications

- Dimension: 212*200*95 mm (L*W*H)
- Weight: 809g (without battery)
- Operating system: ETHOS
- Internal RF module: TANDEM
- Number of Channels: Up to 24 channels
- Operating Voltage Range: 6.5 ~ 8.4V (2S Li-battery)
- Operating Temperature: -10°C~60°C (14°F~140°F)
- USB Adaptor Voltage: 5V+0.2V
- USB Adaptor Current: >2.0A
- Backlit touchable LCD resolution: 800*480
- Compatibility: ACCST D16 & ACCESS receivers

Features

- Built-in TD 900M/2.4G Dual-Band Internal RF Module
- Supports Multiple Working Modes
 - 2.4G ACCST D16 Mode (Compatible with ACCST Receivers with D16 V2 or later FW)
 - 2.4G ACCESS Mode (Compatible with ACCESS Receivers)
 - 900M ACCESS Mode (Compatible with ACCESS R9 868/915MHz Receivers)
 - *Capable of simultaneous working under ACCESS mode
 - 2.4G&900M TD Mode ^{NEW} (Compatible with TD Receivers)
 - Super-low latency and long-range control with telemetry
 - *Up to 50 to 100KM range and down to 4ms end-to-end latency
- 800*480 Color Touch-Screen Displays
- 6 Quick-Mode Custom Buttons (Front) and 2 Momentary Buttons (Rear)
- Lite Type External Module Bay
- Built-in 6-axis Gyroscope Sensor
- All CNC Metal Trims, Knobs
- Haptic Vibration Alerts and Voice Speech Outputs
- External Antenna Supports SWR indicator warning
- Supports Recharge System for 2S Li-ion Battery (USB Type-C Interface)
- High-speed PARA Wireless Training System (Compatible with FreeLink App3.0)
- High-Precision Hall-Sensor Gimbals with All-CNC Metal Panel
- ETHOS: The more powerful, Flexible and Intuitive OS for your radio.
 - Clear and Intuitive UI Design
 - Supports Dual Operation Modes of Radio Display (Touch and Non-Touch)
 - Supports Multi-Language Switching
 - Hardware/Software Version and Factory Version Detection
 - Supports running LUA Scripts (in progress)

FrSky Electronic Co., Ltd. www.frsky-rc.com Contact us: frsky@frsky-rc.com
Add: F-4, Building C, Zhongxiu Technology Park, No.3 Yuanxi Road, Wuxi, 214125, Jiangsu, China Technical Support: sales4tech@gmail.com

01140134

2S Li-battery balance charging via USB-C:


The Green LED indicator states:

Led on: in Charging/Led off: end of charge/flash: charge fault
Battery compartment size: 84*41.5*20mm (L*W*H)

Note: 1. Charge the battery with the USB adapter (Voltage: 5V+0.2V Current: >2.0A) when you use the USB charging function.
2. The lower the initial charging voltage, the better the charging effect is when the voltage difference cells exceed 50 mV between the two.

Navigation Controls


The left navigation control does RTN, SYS, MDL, DISP and Page UP/Down. The right navigation control does scroll and enter. Both navigation controls and touch screen can be used to control the system.

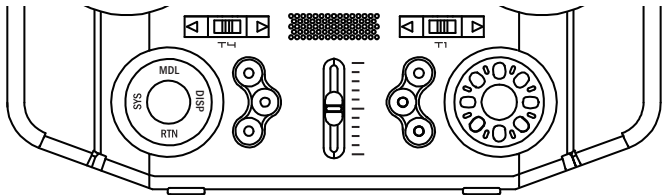


ETHOS Operating System

Create the model

Step 1: First go to System Settings, then click Model Select to select the model type.

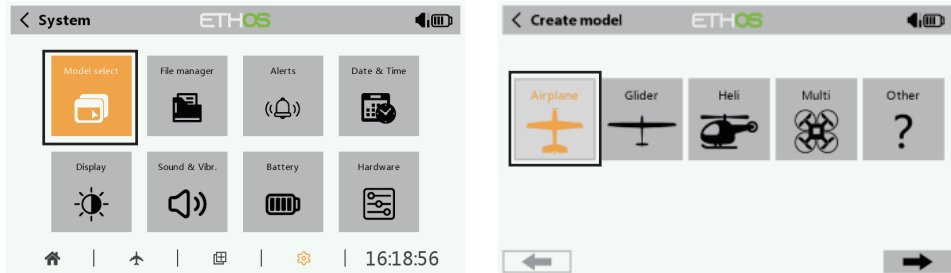

Step 2: Configure the model channel and create the model name.

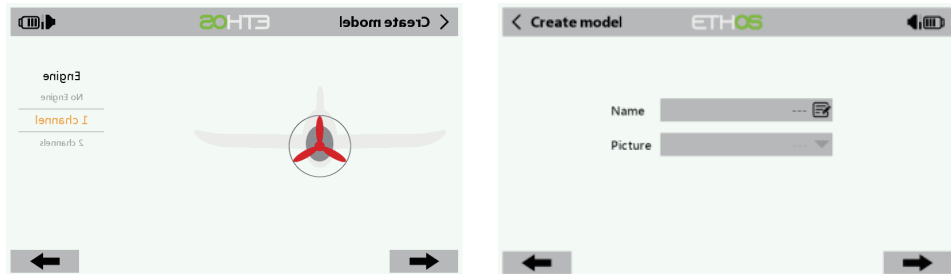

FrSky Electronic Co., Ltd. www.frsky-rc.com Contact us: frsky@frsky-rc.com
Add: F-4, Building C, Zhongxiu Technology Park, No.3 Yuanxi Road, Wuxi, 214125, Jiangsu, China Technical Support: sales4tech@gmail.com

01140134

Model Setup Procedure-Internal Module


Step 1:



Touch the screen or use the navigation keys to enter the RF system menu.


Choose the INT MODULE. Then turn ON INTERNAL RF, select the OUTSIDE or INSIDE ANTENNA (Dual internal antennas and external antenna work simultaneously while selecting the OUTSIDE ANTENNA.)

Set the Mode for TANDEM X20 internal RF corresponding to your receiver (ACCESS, ACCST D16).

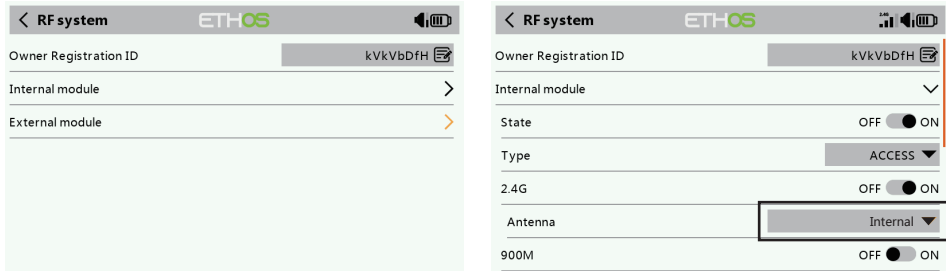

Step 2: Set the Channel Range

The TANDEM RF module supports 24 channels. the channel range is configurable, and it needs to be double checked before use.

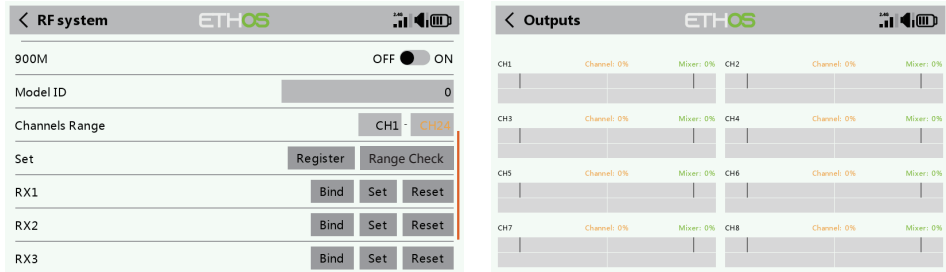

FrSky Electronic Co., Ltd. www.frsky-rc.com Contact us: frsky@frsky-rc.com
Add: F-4, Building C, Zhongxiu Technology Park, No.3 Yuanxi Road, Wuxi, 214125, Jiangsu, China Technical Support: sales4tech@gmail.com

01140134

FrSky TANDEM X20 Manual

Version 1.0

Step 3: Set the Receiver Number

RF system

ETHOS

Set

Type

ACCESS

2.4G

OFF

ON

Antenna

Internal

900M

OFF

ON

Model ID

1

Channels Range

CH1

CH24

Set

Register

Range Check

The system will assign you the receiver a number automatically, when you create a new model, and this can be easily changed. The range of the Model ID is 00-63, with the default number being 01. Once the receiver is set to the desired number and is bound to the TANDEM X20, the bind procedure will not need to be repeated unless the receiver number is changed. At this point, set the receiving number to your preferred number and repeat the binding operation.

Step 4 : Registration

In ACCESS model, select the STATE [Register] into Registration status on radio side. Then Press the F/S button and power on your receiver, and select the “RX Name XX” and [REGISTER] to complete the Registration process then power down the receiver.

Register

ETHOS

Receiver connected

Registration ID

RX Name

Archer

UID

1

Register

RF system

ETHOS

Registration

Registration OK

OK

Set

Bind

Set

Reset

Step 5: Automatic binding (Smart Match)

Move the cursor to Rx1[BIND],and select it, power your receiver, select the RX, and complete the process, the system will confirm "Bind succeed". (Pressing the "F/S" button is not required in ACCESS to Bind. Please the receivers manual for details).

RF system

ETHOS

Select device

Archer1

Archer2

Model ID

0

Channels Range

CH1

CH24

Set

Register

Range Check

RX1

Bind

Set

Reset

RF system

ETHOS

Bind

Bind OK

OK

Set

Bind

Set

Reset

Step 6: Set Failsafe mode

There are 3 failsafe modes when enable: No Pulse, Hold, Custom.

FrSky Electronic Co., Ltd.

www.frsky-rc.com

Contact us: frsky@frsky-rc.com

Add: F-4,Building C, Zhongxiu Technology Park, No.3 Yuanxi Road, Wuxi, 214125, Jiangsu, China

Technical Support: sales4tech@gmail.com

01140134

FrSky TANDEM X20 Manual

Version 1.0

RF system

ETHOS

Set

Set Failsafe

Not Set

Bind

Set

Reset

RX1

Hold

Bind

Set

Reset

RX2

Custom

Bind

Set

Reset

RX3

No Pulses

Bind

Set

Reset

Set Failsafe

Receiver

Not Set

Options

Set

External Module

No Pulse: on loss of signal the receiver produces no pulses on any channel. To use this type, select it in the menu and wait 9 seconds for the failsafe to take effect.

Hold: the receiver continues to output the last positions before signal was lost. To use this type, select it in the menu and wait 9 seconds for the failsafe to take effect.

Custom: pre-set to required positions on lost signal. Move the cursor to the failsafe mode of channel and press Encoder, then choose the Custom mode. Move the cursor to the channel you want to set failsafe on, and press Encoder.

Then rotate the Encoder to set your failsafe for each channel and short press Encoder to finish the setting. Wait 9 seconds before the failsafe takes effect.

Notice:

When failsafe is disabled on TANDEM X20 side, the failsafe set on receiver side will be used.

SBUS port does not support the No Pulse failsafe mode and always outputs. Set "Hold" or "Custom" for SBUS port.

Step 7: Range

Range refers to TANDEM X20 range check mode. A pre-flight range check should be done before each flying session. Move the cursor to "STATE", scroll the Encoder to select "RANGE" mode and press Encoder. In range check mode, the effective distance will be decreased to 1/30. Press the Encoder again, turn to normal state.

RF system

ETHOS

900M

OFF

ON

Model ID

0

Channels Range

CH1

CH8

Set

Register

Range Check

RX1

Bind

Set

Reset

RX2

Bind

Set

Reset

RX3

Bind

Set

Reset

RF system

ETHOS

Range

RSSI : 0dB

Set

Reset

Set failsafe

Not Set

External module

Model Setup for TANDEM X20 External RF Module

RF system

ETHOS

External module

State

OFF

ON

Type

XJT Lite

D16

Model ID

0

Channels Range

CH1

CH8

Set

Bind

Range Check

Set failsafe

Not Set

The external RF module can be powered on or off by software. The setup process is the same as that for the internal RF. External modules should be closed when not in use.

FrSky Electronic Co., Ltd.

www.frsky-rc.com

Contact us: frsky@frsky-rc.com

Add: F-4,Building C, Zhongxiu Technology Park, No.3 Yuanxi Road, Wuxi, 214125, Jiangsu, China

Technical Support: sales4tech@gmail.com

01140134

FrSky TANDEM X20 Manual

Version 1.0

FCC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules

CE

The product may be used freely in these countries: Germany, UK, Italy, Spain, Belgium, Netherlands, Portugal, Greece, Ireland, Denmark, Luxembourg, Austria, Finland, Sweden, Norway, France and Iceland.

FLYING SAFETY

Warning:

To ensure the safety of yourself and others, please observe the following precautions.

Have regular maintenance performed.

Although your TANDEM X20 protects the model memories with non-volatile EEPROM memory (which does not require periodic replacement) and of a battery, it still should have regular check-ups for wear and tear. We recommend sending your system to your FrSky Service Center annually during your non-flying-season for a complete check-up and service.

Battery

Using a fully charged battery (DC 6.5~8.4V). A low battery will soon die, causing loss of control and a crash. When you begin your flying session, reset your transmitter's built-in timer, and during the session pay attention to the duration of usage. Also, if your model used a separate receiver battery, make sure it is fully charged before each flying session.

Stop flying long before your batteries become over discharged. Do not rely on your radio's low battery warning systems, intended only as a precaution, to tell you when to recharge. Always check your transmitter and receiver batteries prior to each flight.

Where to Fly

We recommend that you fly at a recognized model airplane flying field. You can find model clubs and fields by asking your nearest hobby dealer.

Always pay particular attention to the flying field's rules, as well as the presence and location of spectators, the wind direction, and any obstacles on the field. Be very careful flying in areas near power lines, tall buildings, or communication facilities as there may be radio interference in their vicinity.

At the flying field

To prevent possible damage to your radio gear, turn the power switches on and off in the proper sequence:

1. Pull throttle stick to idle position, or otherwise disarm your motor/engine.

2. Turn on the transmitter power and allow your transmitter to reach its home screen.

3. Confirm the proper model memory has been selected.

4. Turn on your receiver power.

5. Test all controls. If a servo operates abnormally, don't attempt to fly until you determine the cause of the problem.

6. Start your engine.

7. Complete a full range check.

8. After flying, bring the throttle stick to idle position, engage any kill switches or otherwise disarm your motor/engine.

If you do not turn on your system on and off in this order, you may damage your servos or control surfaces, flood your engine, or in the case of electric-powered or gasoline-powered models, the engine may unexpectedly turn on and cause a severe injury.

FrSky Electronic Co., Ltd.

www.frsky-rc.com

Contact us: frsky@frsky-rc.com

Add: F-4,Building C, Zhongxiu Technology Park, No.3 Yuanxi Road, Wuxi, 214125, Jiangsu, China

Technical Support: sales4tech@gmail.com

01140134

FrSky TANDEM X20 Manual

Version 1.0

Make sure your transmitter can't tip it over.

If it is knocked over, the throttle stick may be accidentally moved, causing the engine to speed up. Also, damage to your transmitter may occur.

In order to maintain complete control of your aircraft it is important that it remains visible at all times. Flying behind large objects such as buildings, grain bins, etc. must be avoided. Doing so may interrupt the radio frequency link to the model, resulting in loss of control.

Do not grasp the transmitter's antenna during flight. Doing so may degrade the quality of the radio frequency transmission and could result in loss of control.

As with all radio frequency transmissions, the strongest area of signal transmission is from the sides of the transmitter's antenna. As such, the antenna should not be pointed directly at the model. If your flying style creates this situation, easily move the antenna to correct this situation.

Before taxiing, be sure to extend the transmitter antenna to its full length.

A collapsed antenna will reduce your flying range and cause a loss of control. It is a good idea to avoid pointing the transmitter antenna directly at the model, since the signal is weakest in that direction.

Don't fly in the rain!

Water or moisture may enter the transmitter through the antenna or stick openings and cause erratic operation or loss of control. If you must fly in wet weather during a contest, be sure to cover your transmitter with a plastic bag or waterproof barrier. Never fly if lightning is expected.

Updates

FrSky is continuously adding features and improvements to our radio systems. Updating (via USB Port or the Micro SD card) is easy and free. To get the most from your new transmitter, please check the download section of the FrSky website for the latest update firmware and guide for adjusting your sticks. (www.frsky-rc.com)

FrSky is continuously adding features and improvements to our products. To get the most from your product, please check the download section of the FrSky website www.frsky-rc.com for the latest update firmware and manuals

FrSky Electronic Co., Ltd.

www.frsky-rc.com

Contact us: frsky@frsky-rc.com

Add: F-4,Building C, Zhongxiu Technology Park, No.3 Yuanxi Road, Wuxi, 214125, Jiangsu, China

Technical Support: sales4tech@gmail.com

01140134