









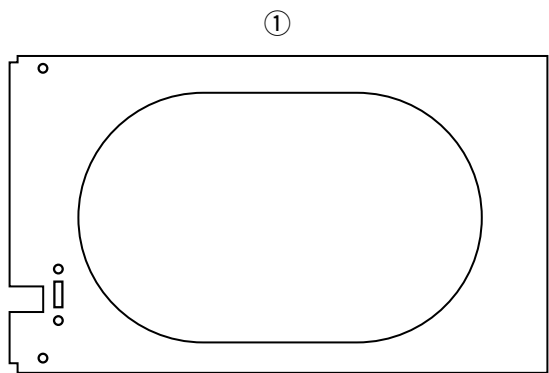

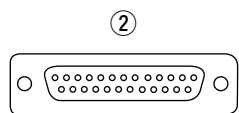







Thank you for choosing the **IC-A220/IC-A220E** VHF AIR BAND TRANSCEIVER with Icom's state of the art technology. Carefully read this installation guide and the transceiver's instruction manual before installing and operating your transceiver.

## 1 SUPPLIED ACCESSORIES

The following accessories are supplied with the transceiver. Carefully check the quantity of each part.


① Mounting bracket.....	1	⑪ Screw (No. 6 × 1/2) .....	1
② D-Sub 25 pin connector .....	1	⑫ Nut (No. 6) .....	1
③ Connector pins (M39029/63-368).....	25	⑬ Crimp nuts (No. 6) .....	6
④ Screws Bind UNC (No. 4 × 3/8).....	2	⑭ Speed nut UNC (No. 6) .....	4
⑤ K-Lock Nut (No. 4) .....	2	⑮ Screws (No. 6 × 1/2) .....	6
⑥ BNC-LP .....	1	⑯ COMM1 sticker .....	1
⑦ Washer (Icom washer V) .....	1	⑰ COMM2 sticker .....	1
⑧ C-shaped ring .....	1	⑱ Voltage sticker (For only IC-A220E) .....	1
⑨ Antenna cable clip .....	1		
⑩ Self crimping nut (No. 6) .....	1		

The following items are required for installation but are **NOT** supplied with the transceiver.

- VHF antenna for the air communication band
- Various cables
- An antenna cable with a BNC connectors (50 Ω)
- Switches to be mounted on the aircraft yoke
- Headphones. (500 Ω)
- Low-impedance carbon or dynamic microphone
- Preamplifier for a dynamic microphone

### ◇ COMM1 and COMM2 stickers


When two transceivers are installed, attach the supplied COMM1 and COMM2 stickers to distinguish one from the another.

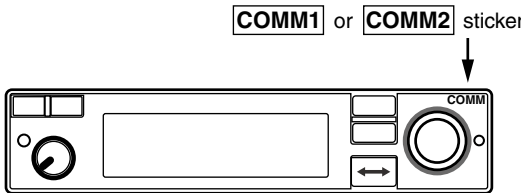

### ◇ Voltage sticker

(For only IC-A220E)


When you install the transceiver in the optional MB-53, attach the supplied voltage sticker on the MB-53.

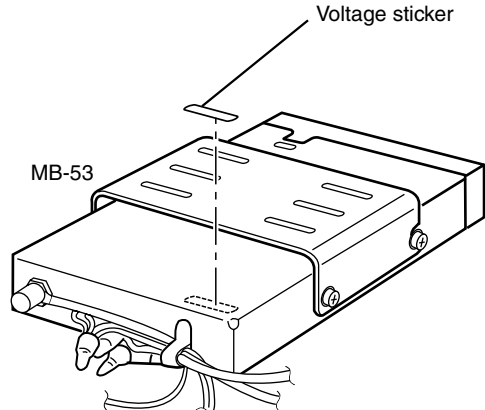

Icom, Icom Inc. and Icom logo are registered trademarks of Icom Incorporated (Japan) in Japan, the United States, the United Kingdom, Germany, France, Spain, Russia, Australia, New Zealand, and/or other countries.

## 6 CONNECTOR INFORMATION


### ◇ D-sub 25-pin

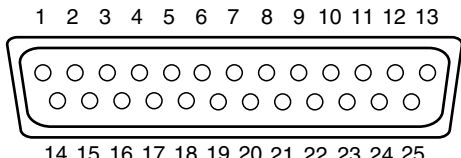	Rear view
1 2 3 4 5 6 7 8 9 10 11 12 13	
14 15 16 17 18 19 20 21 22 23 24 25	

Pin	I/O	Description	Pin	I/O	Description
1	In	Memory Channel Switch*	14	–	Aircraft ground
2	In	Transmit/receive Interlock	15	–	Aircraft ground
3	In	Frequency Exchange Switch*	16	In	PTT*
4	In	DC power ⊕ (13.8/27.5 V)	17	In	Intercom switch*
5	In	DC power ⊕ (13.8/27.5 V)	18	Out	External speaker (4 Ω/5 W)
6	–	RS-232C Serial data (GND)	19	–	External speaker (GND)
7	Out	RS-232C Serial data (TXD)	20	Out	Headphones audio (500 Ω/60 mW)
8	In	RS-232C Serial data (RXD)	21	In	External Dimmer control
9	–	Microphone (GND)	22	–	Headphones audio (GND)
10	In	Microphone 1 (600 Ω)	23	In	Auxiliary audio 3
11	In	Microphone 2 (600 Ω)	24	–	(reserved)
12	In	Auxiliary audio 1	25	–	(reserved)
13	In	Auxiliary audio 2			

\*Ground to activate.

### ◇ Card edge connector (For optional MBA-3)

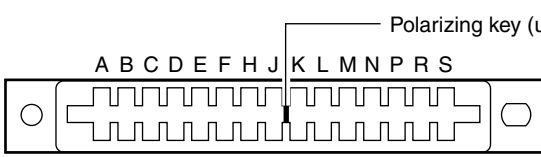	Polarizing key (user supplied)	Rear view
A B C D E F H J K L M N P R S		
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15		

Pin	I/O	Description	Pin	I/O	Description
A	I	External Dimmer Control	1	Out	RS-232C Serial data (TXD)
B	–	(reserved)	2	In	RS-232C Serial data (RXD)
C	In	Auxiliary audio 2	3	In	Auxiliary audio 3
D	In	Auxiliary audio 1	4	–	Auxiliary audio 1/2/3 (GND)
E	Out	External speaker (4 Ω/5 W)	5	–	External speaker (GND)
F	–	Aircraft ground	6	–	Aircraft ground
H	Out	Headphones audio (500 Ω/60 mW)	7	–	Headphones audio (GND)
J	In	Microphone 1 (600 Ω)	8	–	Microphone (GND)
K	In	Microphone 2 (600 Ω)	9	In	PTT*
L	In	Memory channel switch*	10	In	Intercom switch*
M	–	(reserved)	11	–	(reserved)
N	I	Transmit/receive interlock	12	In	Frequency exchange switch*
P	–	(reserved)	13	–	(reserved)
R	In	DC power ⊕ (13.8/27.5 V)	14	In	DC power ⊕ (13.8/27.5 V)
S	–	Aircraft ground	15	–	Aircraft ground

\*Ground to activate.

## 2 IMPORTANT

**READ THIS INSTALLATION GUIDE CAREFULLY** before install the transceiver. This installation guide contains important safety instructions.

**NEVER** install the transceiver where normal navigation of the aircraft may be hindered.

**NEVER** install an antenna near any aircraft projection, engine, or propeller.

Install a circuit breaker between the aircraft battery and the transceiver.

Check operation after installation. Install the transceiver according to the procedures of this installation guide.

The antenna should be spaced at least 40 cm (1.3 feet) from any position occupied by any person on board the aircraft or the vehicle.

## 3 INSTALLATION PROCEDURES


- Check the quantity of parts.  
Refer to **1 SUPPLIED ACCESSORIES**.
- Prepare miscellaneous items required for installation.  
Refer to miscellaneous items in **1 SUPPLIED ACCESSORIES**.
- Prepare the required wiring.  
Refer to **6 CONNECTOR INFORMATION** and **7 CONNECTING THE CABLES FOR D-SUB 25 PIN**.
  - If you want to use the MBA-3 connector, refer to **5 USING THE MBA-3** and **8 CONNECTING THE CABLES FOR CARD EDGE CONNECTOR**.
- Assemble supplied mounting bracket and other parts.  
Refer to **9 MOUNTING BRACKET ASSEMBLY**.
- Cut the mounting hole.  
Refer to **10 MARKING A MOUNTING HOLE**.
- Mount the transceiver into the mounting bracket.  
Refer to **11 MOUNTING TO THE BRACKET**.
- Check the transceiver operation.  
Refer to **12 OPERATION CHECK**.

## 5 USING THE MBA-3


When installing the transceiver with card edge connector, use the optional MBA-3 as described below.

### ◇ Attachment

- Unscrew the 10 bottom screws, then remove the bottom cover from the transceiver.
- Unscrew the four rear plate screws.
- Disconnect the I/O cable connectors J3, J4, and coaxial J6, and then remove the rear plate from the transceiver.

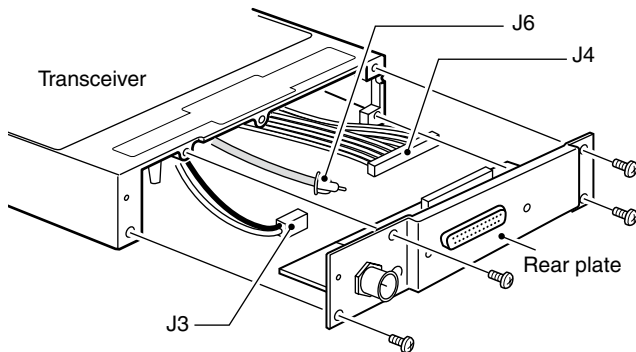

- Connect the I/O cable connectors and coaxial onto the MBA-3 as illustrated below.

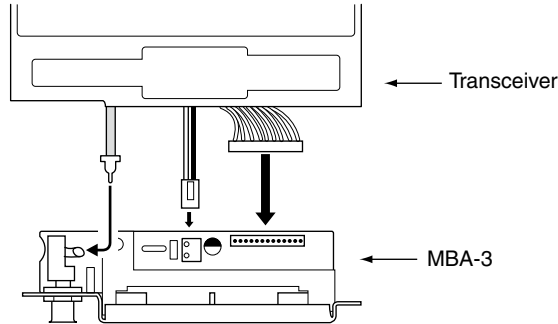


- Attach the MBA-3 to the transceiver with the five rear plate screws.
- Replace the removed bottom cover and 10 screws.

## 7 CONNECTING THE CABLES FOR D-SUB 25 PIN

### ◇ Power cable wiring

Use two pairs of #20 AWG wire for the power and power grounding connections.

#### Rear view

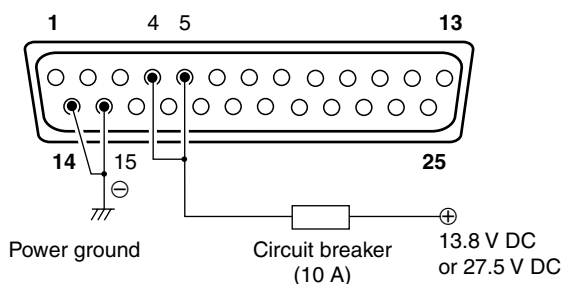

#### • Circuit breaker

To prevent physical damage, a 10 A circuit breaker **MUST** be installed in the DC power line in the aircraft. Install the circuit breaker in the aircraft breaker panel or instrument panel to ensure easy access during flight.


#### • Power Ground

Connect the transceiver power ground to the aircraft ground.

### ◇ Yoke-mounted memory and frequency exchange switches

For the yoke-mounted memory and frequency exchange switches, use a two-position spring loaded rocker switch or two separate momentary push switches.

#### Rear view

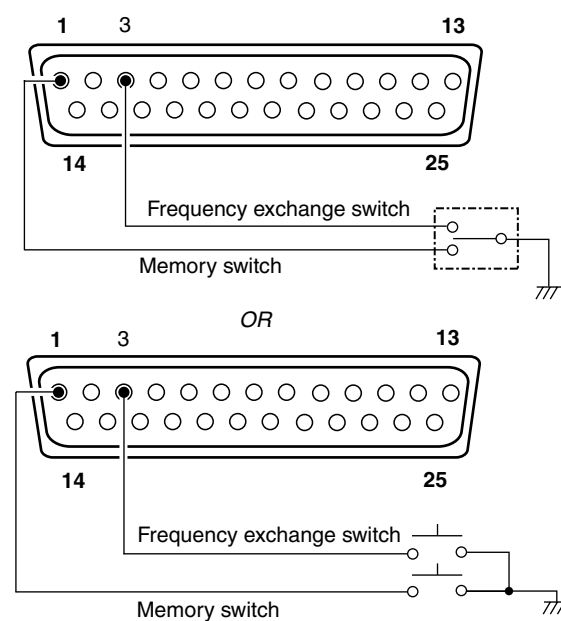

### ◇ Transmit/receive interlock connections

When two transceivers are installed, connect pin 2 to the other transceiver's PTT line, and connect pin 16 to the other transceiver's interlock line to prevent both transceivers from simultaneously transmitting.


However, when two transceivers are installed through a dual audio panel, the connections are not necessary.

### ◇ Audio line connections


Use #20 ~ #24 AWG wires for connections.

#### Rear view

- Two headsets with intercom

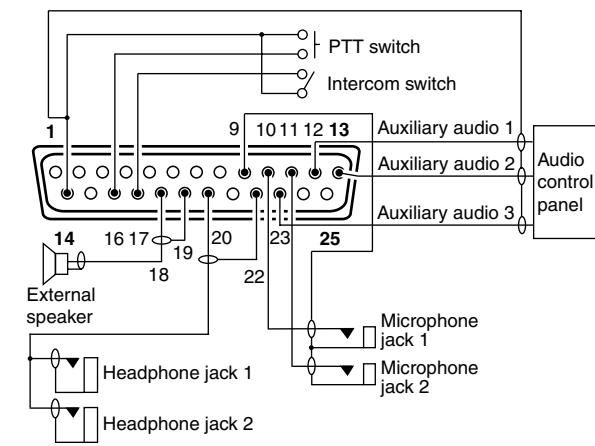


- One headset

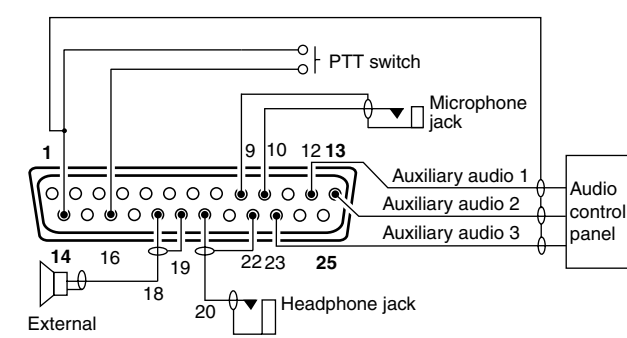

### ◇ GPS receiver connection

Connect the GPS receiver's input terminal to the pin 7, and output terminal to pin 8.

#### Rear view

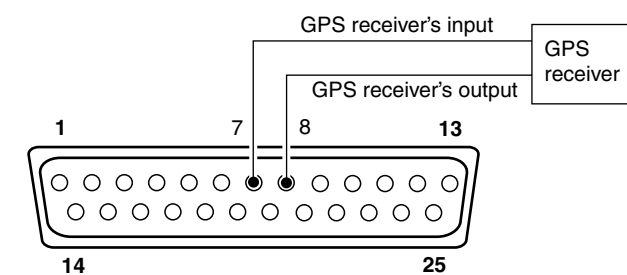


8 CONNECTING THE CABLES FOR CARD EDGE CONNECTOR (MBA-3)

◇ Power cable wiring

Use two pairs of #18 AWG wire for the power and power connections.

Rear view

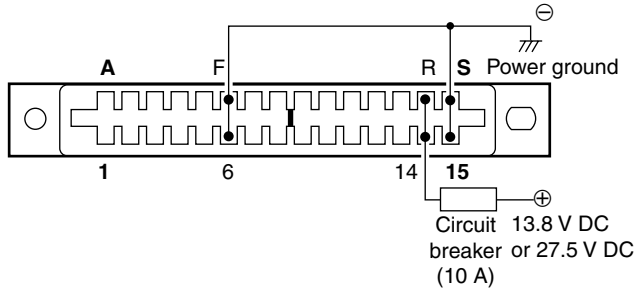

• Circuit breaker

To prevent physical damage, a 10 A circuit breaker **MUST** be installed in the DC power line in the aircraft. Install the circuit breaker in the aircraft breaker panel or instrument panel to ensure easy access during flight.


• Power Ground

Connect the transceiver power ground to the aircraft ground.

◇ Yoke-mounted memory and frequency exchange switches

For the yoke-mounted memory and frequency exchange switches, use a two-position spring loaded rocker switch or two separate momentary push switches.

Rear view

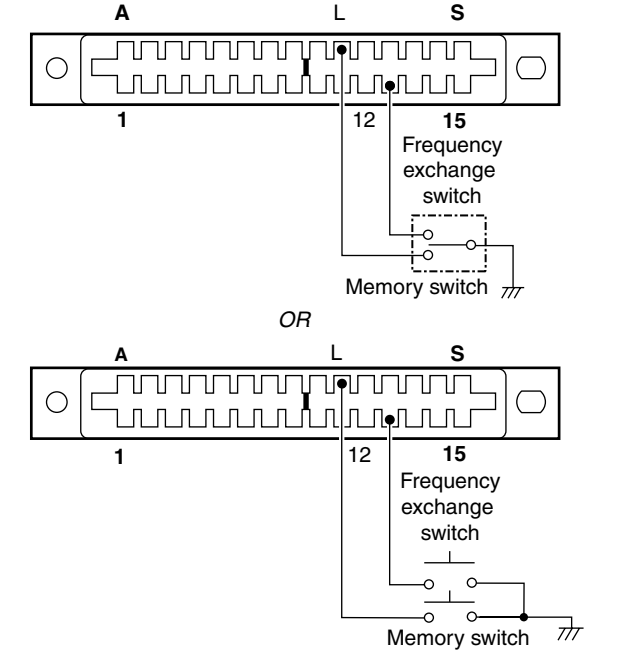

◇ Transmit/receive interlock connections


When two transceivers are installed, connect pin N to the other transceiver's PTT line, and connect pin 9 to the other transceiver's interlock line to prevent both transceivers from simultaneously transmitting.

However, when two transceivers are installed through a dual audio panel, the connections are not necessary.


◇ Audio line connection

Use #24 AWG wire for the connections.

- Two headsets with intercom

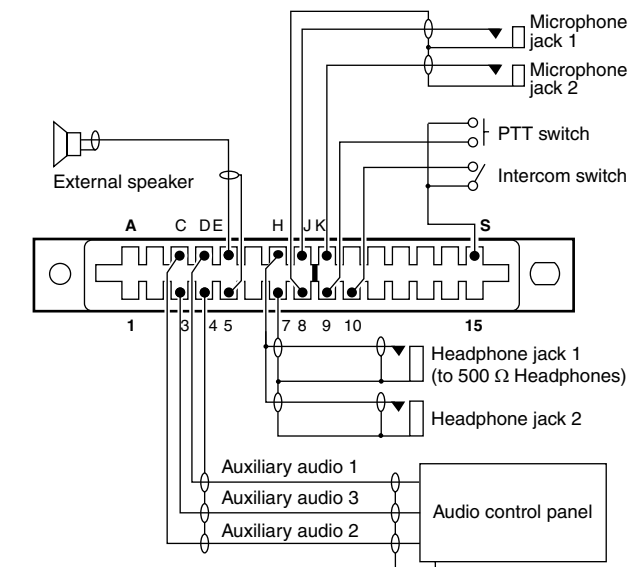


- One headset

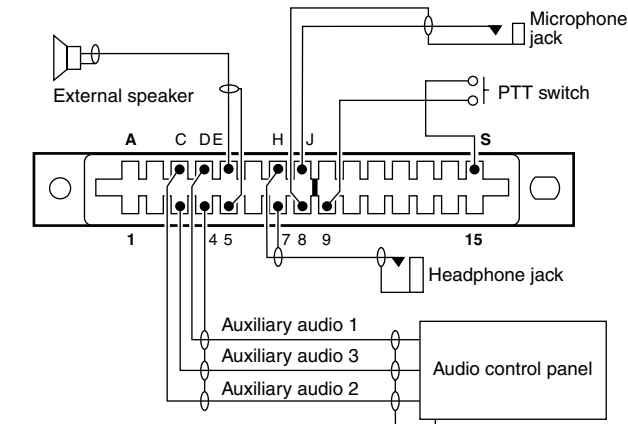


◇ GPS receiver connection

Connect the GPS receiver's input terminal to the pin 1, and output terminal to pin 2.

Rear view

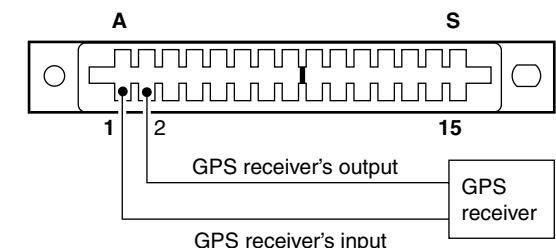

9 MOUNTING BRACKET ASSEMBLY

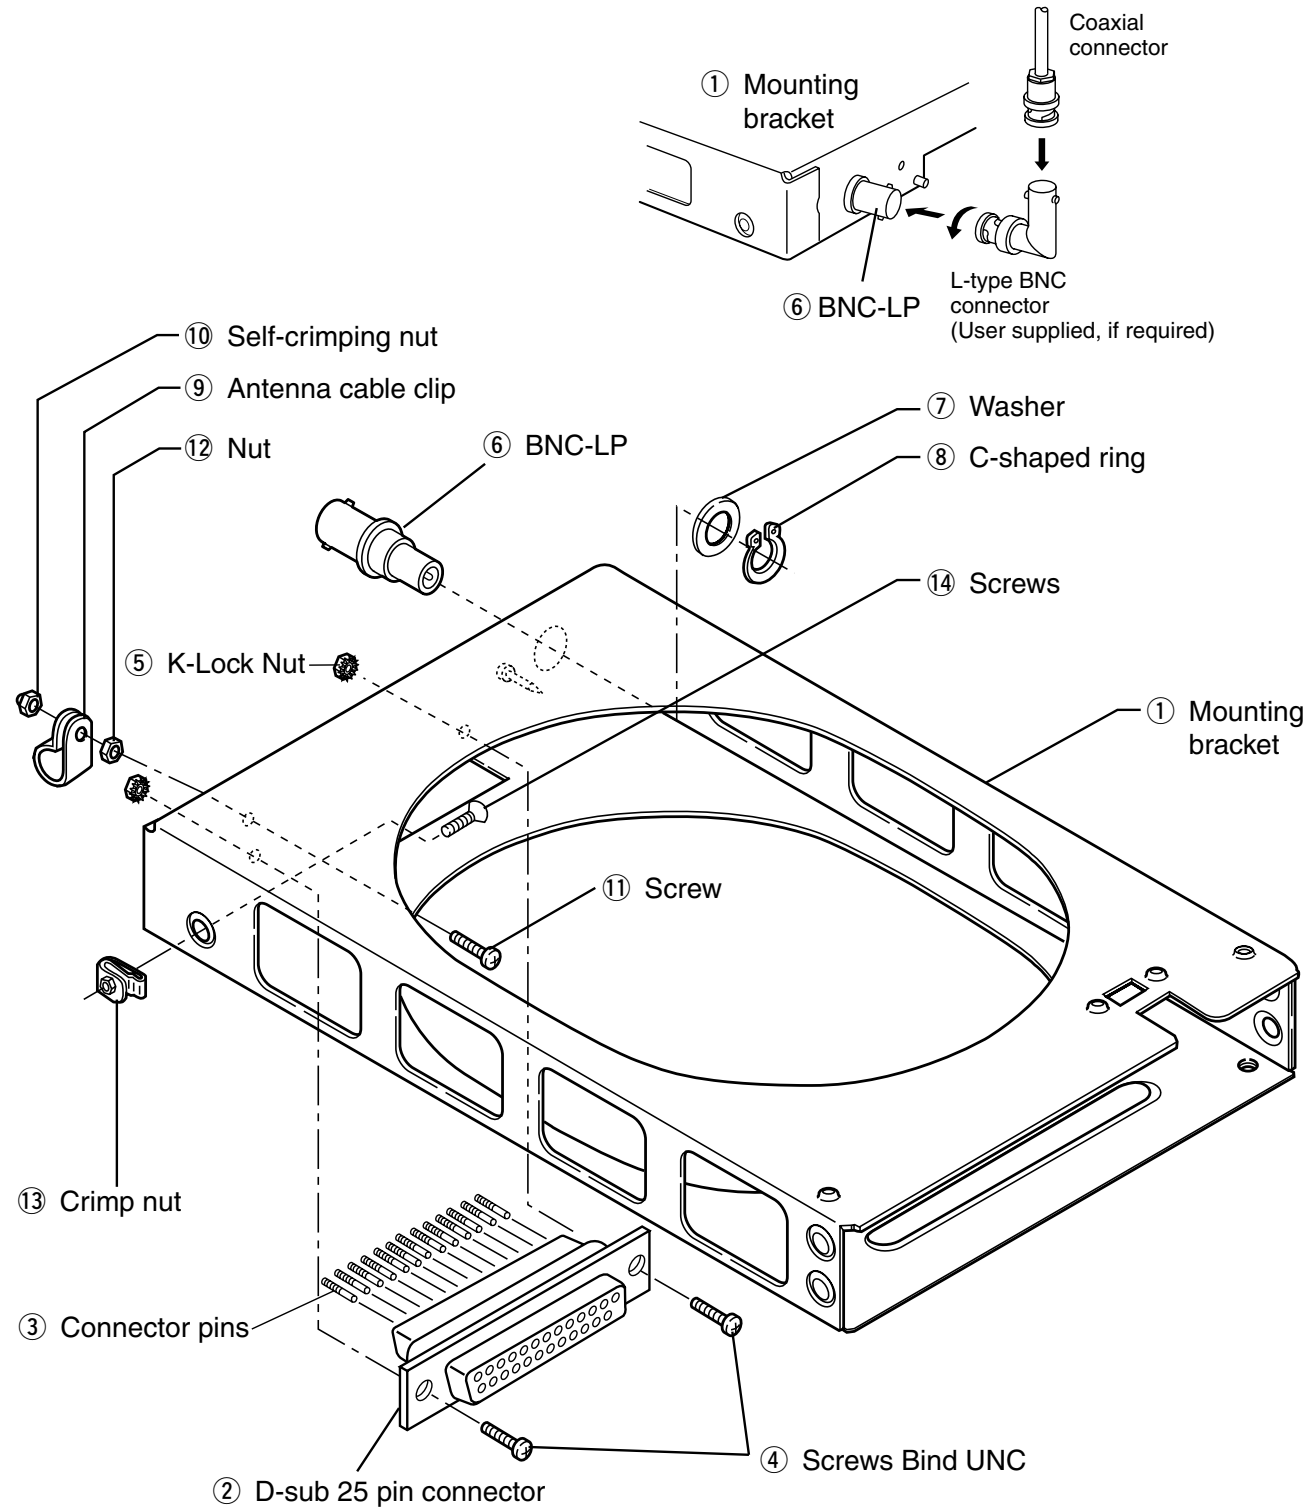


10 MARKING A MOUNTING HOLE

◇ Notes for making the mounting hole


The transceiver can be mounted securely in the supplied mounting bracket. Remember to allow adequate space for installation of cables and connectors. When installing two or more transceivers in a stack, the mounting bracket should be 1.3 mm (0.05") apart.

The mounting bracket has 0.6 mm (0.024") dimples in the top, bottom, and both sides for proper spacing. Mark and cut the mounting holes. To support the mounting bracket, the rear mounting bosses should be attached to the airframe.

◇ Mounting bracket dimensions

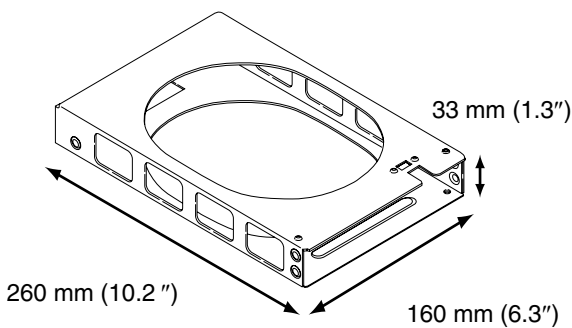


◇ Front panel dimensions

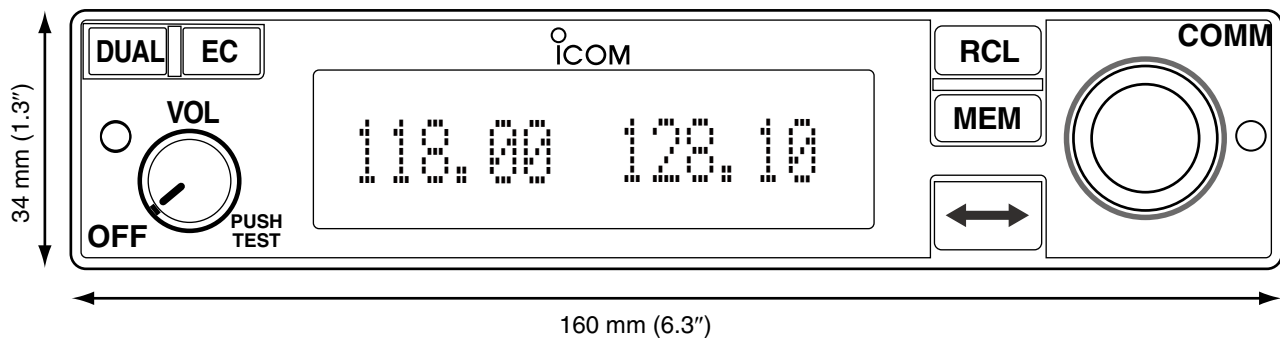

Allow space for the front panel as shown above.

◇ Template

Cut out dimensions for the mounting bracket as follows.

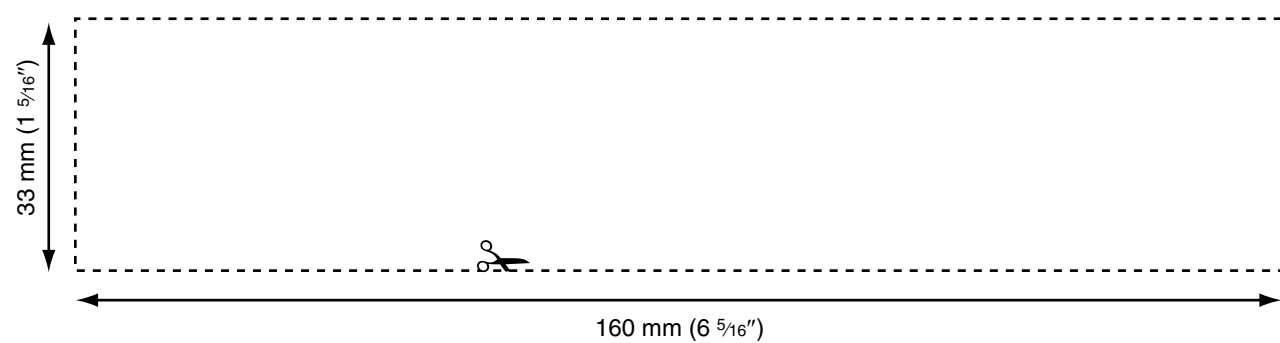

11 MOUNTING TO THE BRACKET


◇ Transceiver installation

- 1 Remove the front panel from the transceiver's main unit.
  - Use a 3/32" allen wrench.
  - Carefully disconnect the cable from the front panel.(Fig. 1)
- 2 Insert a 3/32" allen wrench into the hole of the main unit and unscrew the inside lock screw until the metal catch touches the chassis hole. (Fig. 2)

- 6 Connect the cable. (Fig. 7)
- 7 Attach the front panel and tighten the allen screws. (Fig. 7)

**CAUTION:** Make sure that the cable between the transceiver and front panel is securely connected. The transceiver may not function properly when loose or when a wrong connection is made. Improper cable connection can cause damage and result in severe non-warranty repair.

Main unit front view



- 3 Rotate the lock screw clockwise four revolutions (Fig. 3), and then rotate counterclockwise a quarter revolution. (Fig. 4)
- 4 Insert the main unit (transceiver) into the mounting bracket. (Fig. 5)
- 5 Screw the lock screw to fix the main unit (transceiver) to the bracket. (Fig. 6)

◇ Transceiver removal

The transceiver can be easily removed from the mounting bracket, if required.

- 1 Remove the front panel from the transceiver's main unit.
  - Use a 3/32" allen wrench.
  - Carefully disconnect the cable from the front panel.
- 2 Insert a 3/32" allen wrench into the hole of the main unit and unscrew the inside lock screw.
- 3 Slowly pull the transceiver out from the mounting bracket.
- 4 Connect the cable to the front panel.
- 5 Attach the front panel and tighten the allen screws.

Fig. 1

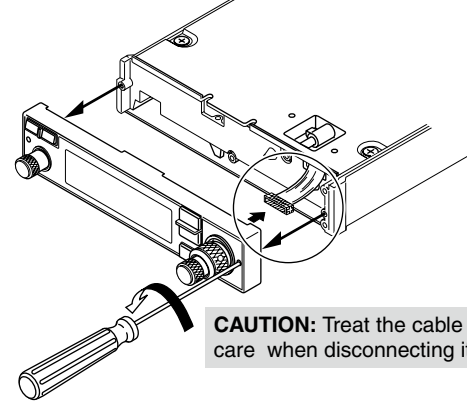


Fig. 2

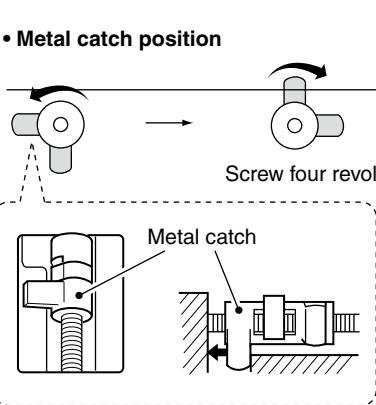


Fig. 3

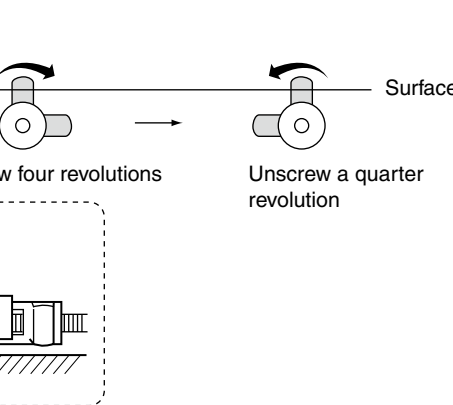


Fig. 4

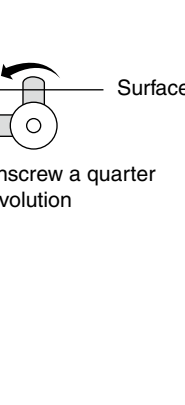


Fig. 5

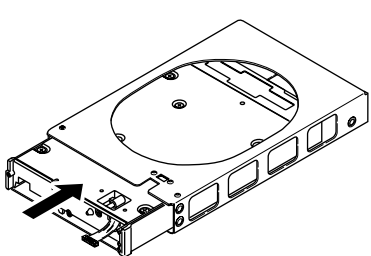


Fig. 6


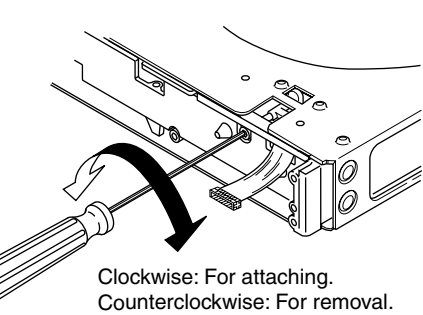


Fig. 7

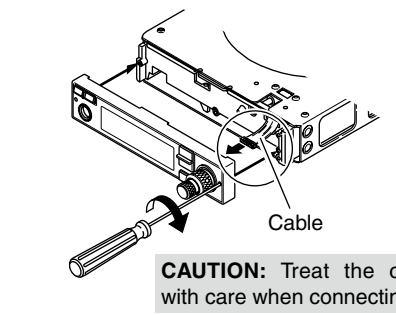

12 OPERATION CHECK

Check the following points after transceiver installation.

- Polarity of the power supply.
- **NO** interference caused to other equipment.
- **NO** noise or interference from other equipment.

- VSWR is less than 2.5:1.
- Communication capability on both the highest and lowest communication frequencies, if possible.