

# **TOSHIBA**

---

**BATTERY CABINET SYSTEM  
SINGLE PHASE – 3.6/6.0 kVA**

---

## **1600EP SERIES BATTERY CABINET OPERATION MANUAL**

---

March 2008  
Part# 55339-001



**TOSHIBA**

---

# **1600EP SERIES**

**SINGLE PHASE- 3.6/6.0 kVA**

**BATTERY CABINET SYSTEM**

**OPERATION MANUAL**



**TOSHIBA INTERNATIONAL CORPORATION**

**INDUSTRIAL DIVISION**

13131 West Little York Rd.  
Houston, Texas 77041

## IMPORTANT NOTICE

The instructions contained in this manual are not intended to cover all of the details or variations in equipment, or to provide for every possible contingency to be met in connection with installation, operation, or maintenance. Should further information be desired or particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the local Toshiba sales office.

The contents of this instruction manual shall not become a part of or modify any prior or existing agreement, commitment, or relationship. The sales contract contains the entire obligation of Toshiba International Corporation's UPS Division. The warranty contained in the contract between the parties is the sole warranty of Toshiba International Corporation's UPS Division and any statements contained herein do not create new warranties or modify the existing warranty.

***Any electrical or mechanical modifications to this equipment, without prior written consent of Toshiba International Corporation, will void all warranties and may void UL/CUL listing. Unauthorized modifications also can result in personal injury, death, or destruction of the equipment.***

## UNINTERRUPTIBLE POWER SYSTEM - BATTERY CABINET SYSTEM

If additional information or technical assistance is required call Toshiba's Customer Support Center toll free at 1-877-867-8773 or write to: Toshiba International Corporation, 13131 W. Little York Rd., Houston, TX 77041-9990.

Please complete the following information for your records and keep this manual with the equipment:

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Date of Installation: \_\_\_\_\_

Inspected By: \_\_\_\_\_

## TABLE OF CONTENTS

<b>TABLE OF CONTENTS</b>	<b>i</b>
<b>GENERAL SAFETY INSTRUCTIONS</b>	<b>1</b>
<b>IMPORTANT SAFETY INSTRUCTIONS</b>	<b>2</b>
<b>IMPORTANT BATTERY SAFETY INSTRUCTIONS</b>	<b>3</b>
<b>INSTRUCTIONS IMPORTANTES CONCERNANT LA SÉCURITÉ</b>	<b>4</b>
<b>1.0 Inspection/Storage/Disposal</b>	<b>5</b>
1.1 Inspection of the New Battery System	5
1.2 Storage of Battery Equipment	5
1.3 Disposal	5
<b>2.0 Precautions</b>	<b>6</b>
2.1 Installation Precautions	6
2.2 Prestart Precautions	6
2.3 Operating Precautions	6
<b>3.0 UPS Power Connections</b>	<b>7</b>
3.1 UPS Input Voltage	7
3.2 Connecting Multiple Battery Cabinets	7
3.3 Battery Cabinet Cabling	7
<b>4.0 Connection Instructions and Diagrams 3.6/6.0 kVA</b>	<b>8</b>
4.1 Battery Connections	8
4.2 3.6/6.0 kVA Illustration	8
4.3 Connection Procedure	8
4.4 Charger Connection	8
<b>5.0 Preventive and Scheduled Maintenance / Part Replacement</b>	<b>9</b>
5.1 Preventive Maintenance	9
5.2 Parts Replacement	9
5.3 Power Cables	10
<b>6.0 Emergency Power Off (EPO)</b>	<b>10</b>
6.1 Shunt Trip	10
6.2 EPO Connection Diagram	10
<b>7.0 External Layouts / Dimensions / Shipping Weights</b>	<b>11</b>
7.1 External Layouts	11
7.2 Dimensions	11
7.3 Shipping Weights	11
<b>8.0 1600EP System Backup Runtime</b>	<b>12</b>



## GENERAL SAFETY INSTRUCTIONS

Warnings in this manual appear in any of four ways:

- 1) *Danger-* The danger symbol is a lightning bolt mark enclosed in a triangle which precedes the 3/16-inch high letters spelling the word "DANGER". The danger symbol is used to indicate imminently hazardous situations, locations, and conditions which, if not avoided, WILL result in death, serious injury, and/or severe property damage.



**DANGER**

- 2) *Warning-* The warning symbol is an exclamation mark in a triangle which precedes the 3/16-inch high letters spelling the word "WARNING". The warning symbol is used to indicate potentially hazardous situations and conditions which, if not avoided COULD result in serious injury or death. Severe property damage COULD also occur.



**WARNING**

- 3) *Caution-* The caution symbol is an exclamation mark enclosed in a triangle which precedes the 3/16-inch high letters spelling the word "CAUTION". The caution symbol is used to indicate potentially hazardous situations and conditions which, if not avoided may result in injury. Equipment damage may also occur.



**CAUTION**

- 4) *Attention warnings-* The attention warning symbol is an exclamation mark enclosed in a triangle which precedes the 3/16-inch high letters spelling the word "ATTENTION". The Attention warning symbol is used to indicate situations and conditions that can cause operator injury and/or equipment damage.



**ATTENTION**

Other warning symbols may appear along with the *Danger* and *Caution* symbol and are used to specify special hazards. These warnings describe particular areas where special care and/or procedures are required in order to prevent serious injury and possible death:

- 1) *Electrical warnings-* The electrical warning symbol is a lightning bolt mark enclosed in a triangle. The Electrical warning symbol is used to indicate high voltage locations and conditions may cause serious injury or death if the proper precautions are not observed:



- 2) *Explosion warnings-* The explosion warning symbol is an explosion mark enclosed in a triangle. The Explosion warning symbol is used to indicate locations and conditions where molten, exploding parts may cause serious injury or death if the proper precautions are not observed:



## IMPORTANT SAFETY INSTRUCTIONS

### SAVE THESE INSTRUCTIONS

This manual contains important instructions that should be followed during installation and maintenance of the Battery System model **UE31-BC-0650**.

The maximum ambient temperature in which a Battery System should be operated is 104 °F (40 °C).

The nominal battery voltage for the battery cabinet is as follows:

Model	Voltage
<b>UE31-BC-0650</b>	<b>216 VDC</b>

Battery Pack Information:

Battery Packs	Designed for battery acid leakage containment with (6) batteries per pack.
Battery Pack Size HxWxD (max)	5 in. (127 mm) x 7.3 in. (185 mm) x 18.2 in. (462 mm)
Battery Pack Quantity	6
Battery Manufacturer	Energysys
Battery Type	NPX-35
Toshiba Part Number for Battery Pack	51896



### CAUTION

Misuse of this equipment could result in human injury and equipment damage. In no event will Toshiba Corporation be responsible or liable for either indirect or consequential damage or injury that may result from the use of this equipment.



### CAUTION

Do not dispose of the batteries in a fire. The batteries may explode.



### CAUTION

Do not open or mutilate the batteries. Released electrolyte is harmful to the eyes and skin and could also be toxic.



### WARNING

This unit contains sealed lead acid batteries. Lack of preventative maintenance could result in batteries exploding and emitting gasses and/or flame. An authorized, trained technician must perform annual preventative maintenance.



### WARNING

Failure to replace a battery before it becomes exhausted may cause the case to crack, possibly releasing electrolytes from inside the battery, and resulting in secondary faults such as odor, smoke, and fire.



### WARNING

Installation and servicing of batteries should be performed by personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from the batteries.



## IMPORTANT BATTERY SAFETY INSTRUCTIONS



### WARNING

Proper maintenance to the battery system of this unit must be done by a qualified service technician. This is essential to the safety and reliability of your UPS system. Refer to service manual.



### DANGER

***A battery can present a risk of electrical shock and high short circuit current.*** The following precautions should be observed when working with batteries.

- 1) Verify that the UPS is off and that the power cord is disconnected from the power source.
- 2) Remove watches, rings or other metal objects.
- 3) Use tools with insulated handles to prevent inadvertent shorts.
- 4) Wear rubber gloves and boots.
- 5) Do not lay tools or metal parts on top of batteries.
- 6) Determine if the battery is inadvertently grounded. If inadvertently grounded, remove source of ground. ***Contact with any part of a grounded battery can result in electrical shock.*** The likelihood of such shock will be reduced if such grounds are removed during installation and maintenance.
- 7) Verify circuit polarities prior to making connections.
- 8) Disconnect charging source and load prior to connecting or disconnecting terminals.
- 9) VRLA batteries contain an explosive mixture of hydrogen gas. Do not smoke, cause a flame or spark in the immediate area of the batteries. This includes static electricity from the body.
- 10) Do not attempt to open the batteries in order to add water or sample the specific gravity of the electrolyte. The batteries are valve regulated lead acid type and such servicing is not possible without damaging the battery.
- 11) Use proper lifting means when moving batteries and wear all appropriate safety clothing and equipment.
- 12) Do not dispose of lead acid batteries except through channels in accordance with local, state and federal regulations.

## INSTRUCTIONS IMPORTANTES CONCERNANT LA SÉCURITÉ

### CONSERVER CES INSTRUCTIONS

Cette notice contient des instructions importantes concernant la sécurité



### ATTENTION

Un battery peut présenter un risque de choc électrique, de brûlure par transfert d'énergie.

### ATTENTION

Pour le remplacement, utiliser le même nombre de batteries du modèle suivant.

Model Capacity	Manufacturer	Type	Quantity
UE31-BC-0650	ENERSYS	NPX-35	36



### ATTENTION

L'élimination des batteries est réglementée. Consulter les codes locaux à cet effet.

## 1.0 Inspection/Storage/Disposal

### 1.1 Inspection of the New Battery System

Upon receipt of the Battery System, a careful inspection for shipping damage should be made.

- 1) Check the unit for loose, broken, bent or otherwise damaged parts. If damage has occurred during shipment, keep all original crating and packing materials for return to the shipping agent. The equipment warranty will not apply to units, which are damaged during shipment.
- 2) Check to see that the rated capacity and the model number specified on the nameplate conform to the order specifications.

### 1.2 Storage of Battery Equipment

If the Battery System is to be subjected to long or short term storage the following guidelines should be used.

#### **Avoid:**

- 1) Storage in sites subject to extreme changes in temperature or high humidity.
- 2) Storage in sites subject to exposure of high levels of dust or metal particles
- 3) Storage on inclined floor surfaces or in sites subject to excessive vibration.

#### **Before storing:**

- 1) Charge the system's batteries.
- 2) Place the Battery System's input switch (MCCB-C) in the OFF position.

#### **Storing:**

- 1) Store within a temperature range of -4 to 104 °F (-20 to 40 °C).
- 2) For best results, store the Battery System in the original shipping container and place on a wood or metal pallet.
- 3) The optimum storage temperature is 70 °F (21 °C). Higher ambient temperatures cause UPS batteries to need recharging more frequently.
- 4) If stored in an ambient temperature under 68 °F (20 °C); recharge the batteries every 9 months.
- 5) If stored in an ambient temperature of 68 to 86 °F (20 to 30 °C); recharge the batteries every 6 months.
- 6) If stored in an ambient temperature of 86 to 104 °F (30 to 40 °C); recharge the batteries every 3 months.

### 1.3 Disposal

Please contact your state environmental agency for details on disposal of electrical components and packaging in your particular area.

***It is illegal to dump lead-acid batteries in landfills or dispose of improperly.***

Please help our Earth by contacting the environmental protection agencies in your area, the battery manufacturer, or call Toshiba toll-free at (877) 867-8773 for more information about recycling.

## 2.0 Precautions

### 2.1 Installation Precautions



- 1) Install the unit in a well ventilated location; allow at least 4 inches (10 cm) on all sides for air ventilation and maintenance.
- 2) Install the unit in a stable, level, and upright position, which is free of vibration.
- 3) Install the unit where the ambient temperature is within the correct operating range.
- 4) Do not install the Battery System in a location that is subject to high humidity.
- 5) Do not install the unit at sites that are exposed to direct sunlight.
- 6) Do not install Battery System in areas which are subject to high levels of contamination by airborne dust, metal particles, or flammable gases.
- 7) Avoid installation near sources of electrical noise. Always make sure that the unit ground is intact to prevent electrical shock and to help reduce electrical noise.
- 8) Do not install where water or any foreign objects/substances may get inside the Battery System.

### 2.2 Prestart Precautions



- 1) Before connecting the Battery System to the UPS verify that the two are compatible by comparing them to the following chart.

UPS Model Number	Battery Cabinet Model Number	Battery Voltage
UE3G2L036C61T	UE31-BC-0650	216VDC
UE3G2L060C61T		



**WARNING** **DO NOT** attempt to connect if the Model numbers do not match the above chart. This will result in damage to the UPS, the Battery System, or both. Call your Toshiba representative if you should have any questions.

- 2) Before connecting the Battery System to the UPS; switch the ON/OFF switch MCCB2, located on the rear panel of the battery system to the **OFF** position. (See Sections 4 & 5)


### 2.3 Operating Precautions



- 1) The UPS should not be powered up until the entire operation manual has been reviewed.

## 3.0 UPS Power Connections

The following illustration shows the wiring connections from the power distribution panel (not part of the UPS) to the UPS, and from the UPS to the battery cabinet. This connection diagram is to be used with the UE31-BC-0650 Battery Unit.

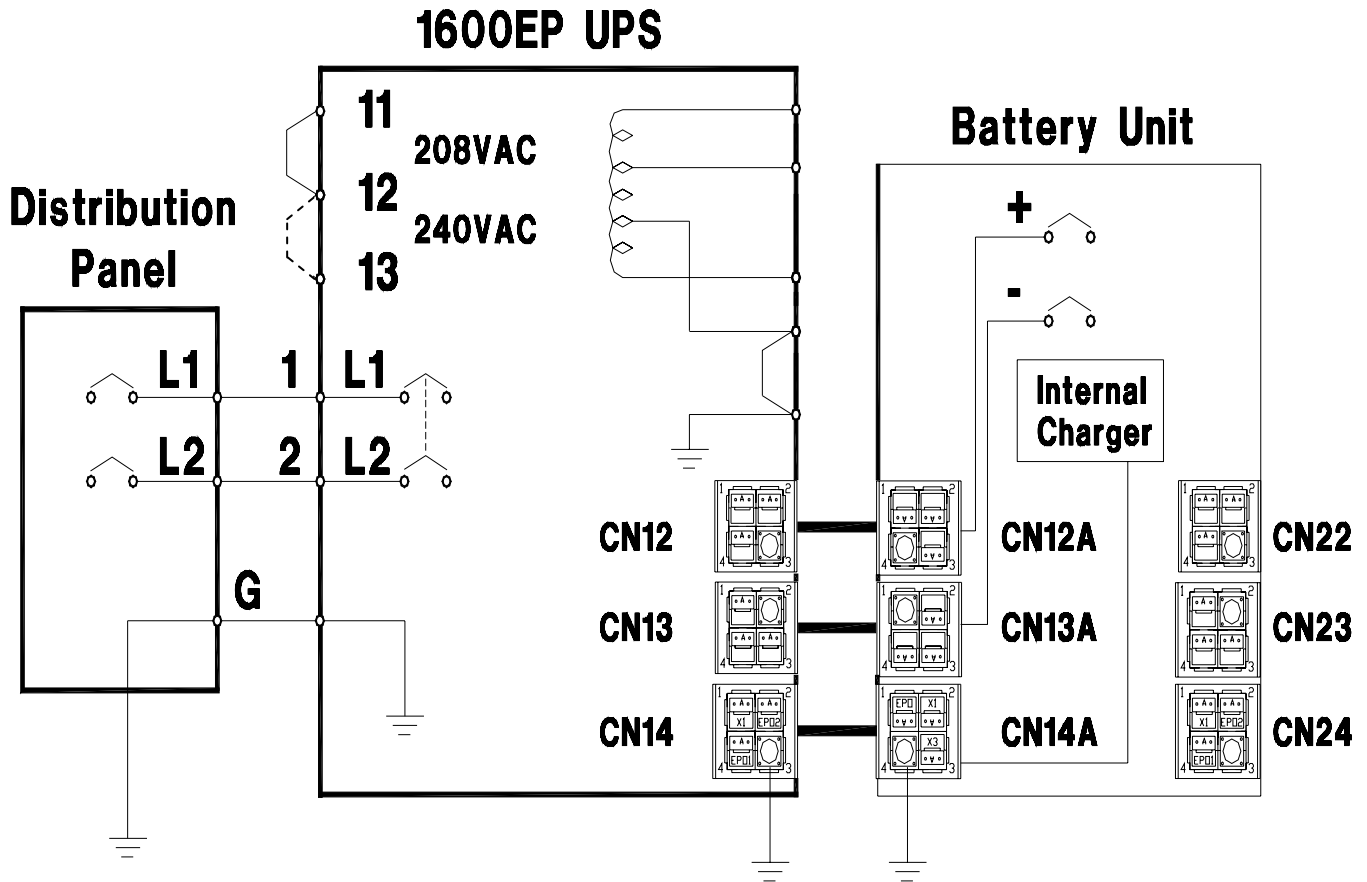

### 3.1 UPS Input Voltage

If the UPS AC input power is 208 V rated connect a jumper wire between terminals 11 and 12 on the UPS terminal block. DO NOT jumper terminal 13 to 11 or 12. The UPS ships from the factory with the jumper in the 208 V position.

If the UPS AC input power is 240 V rated connect a jumper wire between terminals 12 and 13 on the UPS terminal block. DO NOT jumper terminal 11 to 12 or 13.

### 3.2 Connecting Multiple Battery Cabinets

Up to two battery cabinets may be connected in parallel to the UPS. To connect two battery cabinets to the UPS,

1. Connect the first battery cabinet to the UPS as shown in the illustration above.
2. Connect cabinet 2 CN12A to cabinet 1 CN22,
3. Connect cabinet 2 CN13A to cabinet 1 CN23,
4. Connect cabinet 2 CN14A to cabinet 1 CN24.

### 3.3 Battery Cabinet Cabling

The battery cabinets ship with a set of six-foot long cables. Contact Toshiba Customer Support at 1-877-867-8773 if longer cables are required for your application, or if additional cables or connectors are required.

## 4.0 Connection Instructions and Diagrams 3.6/6.0 kVA

### 4.1 Battery Connections

The following illustration shows the wiring connections between the UPS and the battery cabinet.




## DANGER

Contacts are not rated with interrupting capacity.  
Ensure the MCCB switch on the rear panel of the Battery Unit is set to the **OFF** position before connecting the UPS to the battery cabinet.

### 4.2 3.6/6.0 kVA Illustration

The following diagram shows the rear view of the UPS and battery cabinet.

**NOTE:** Use only **compatible** cabinets! See page 6.

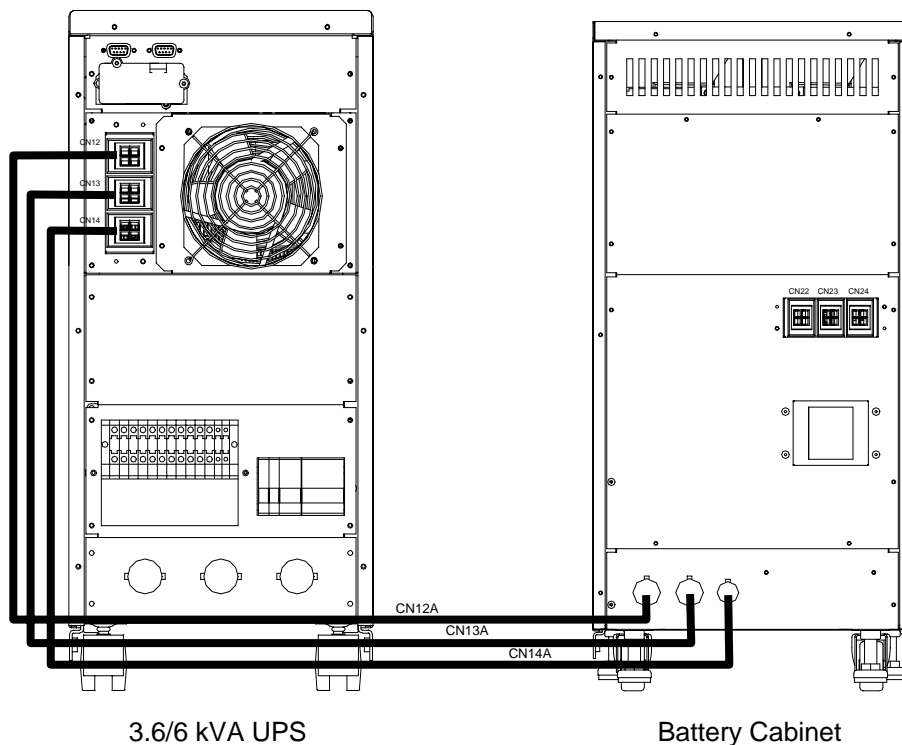

3.6/6 kVA UPS

Battery Cabinet

### 4.3 Connection Procedure

- 1) Ensure all power is locked and tagged out.
- 2) Remove the battery connector cover mounted on the UPS back panel next to the exhaust fan.
- 3) Plug the DC Connectors of the battery cabinet into the DC Connector socket on the UPS unit (see section 3.0 UPS Power Connections).

### 4.4 Charger Connection

Battery cabinet model UE31-BC-0650 requires a 216 Vac connection between the UPS and battery cabinet for battery charging. This connection is made from CN14A of the battery cabinet to CN14 of the UPS (and CN14A of battery cabinet 2 to CN24 of battery cabinet 1 if paralleling two cabinets). **NOTE: Without this connection the battery cabinet will not be able to charge its batteries.**

## 5.0 Preventive and Scheduled Maintenance / Part Replacement

### 5.1 Preventive Maintenance

Toshiba's 1600EP Series of UPS battery cabinets have been designed to provide years of trouble-free operation requiring a minimum of preventive maintenance.

The best preventive measure that the battery cabinet user can take is to keep the area around the unit, particularly the air inlet vents, clean and free of moisture and dust accumulations. If the atmosphere of the installation site is very dusty, use a vacuum cleaner to periodically remove dust accumulations from the air inlet vents. Schedule authorized service centers to perform internal parts inspections annually.



### CAUTION

**Before performing any maintenance, the technician should become familiar with and follow the important safety instructions on pages 1 – 3.**



### WARNING

Proper maintenance of the battery system of this unit by factory authorized personnel is essential to the safety and reliability of your battery cabinet system. Refer to service manual.

### 5.2 Parts Replacement

The following list shows intervals for periodic maintenance and replacement of certain UPS parts.

**Batteries:** VRLA batteries are maintenance free with respect to electrolyte only. The charging voltage, temperature, performance, and connection resistance must be checked periodically. Conditions that require corrective action must be corrected in order to assure safe reliable power is supplied by the battery cabinet. Charging voltage, storage/operating temperature, charging cycles, and connection resistance all affect battery life.

The recommended battery replacement interval is 3 to 5 years. All of the batteries must be replaced at the same time.

#### Monthly Maintenance

- A. Visual Checks:
  - 1) Leakage
  - 2) Corrosion
- B. Measure and record the system float charging voltage.
- C. Measure and record the individual unit's battery tray voltage.

#### Semi-Annual maintenance

- A. Repeat the monthly checks.
- B. Perform a 10-second high rate (e.g. 100 amp) load test on the individual batteries.
- C. Re-torque all inter-battery connecting hardware (if applicable).
- D. Perform inter-battery connector resistance checks.

Component*	Function	Rating	Part No.
FU1, FU2	Control Power Fuses	500 V, 5 A	00648
Battery Tray Fuse	Internal Battery tray Fuse	500 V, 40 A	00637
Battery Pack	Replaceable Battery Pack	-	51896

\* Field Service replaceable parts only.

## 5.3 Power Cables

The three battery cabinet connector cables (battery positive, battery negative, and battery charger) are each equipped with individually keyed Anderson connectors to prevent cross connecting the battery cabinet and UPS circuitry.


## 6.0 Emergency Power Off (EPO)

### 6.1 Shunt Trip

A shunt trip for the DC breaker on the battery cabinet is provided. This device is operated with an applied voltage of 120 Vac (**supplied from the UPS**). When this voltage is applied, the shunt trip will cause the breaker to switch to the OFF position disabling the battery cabinet.

### 6.2 EPO Connection Diagram

The EPO is achieved by completing the circuit between 14 & 15 on terminal block TB1 of the UPS. By completing the circuit, the shunt trip will cause the breaker on the battery cabinet as well as the one on the UPS to switch to the OFF position disabling both the battery cabinet and the UPS.

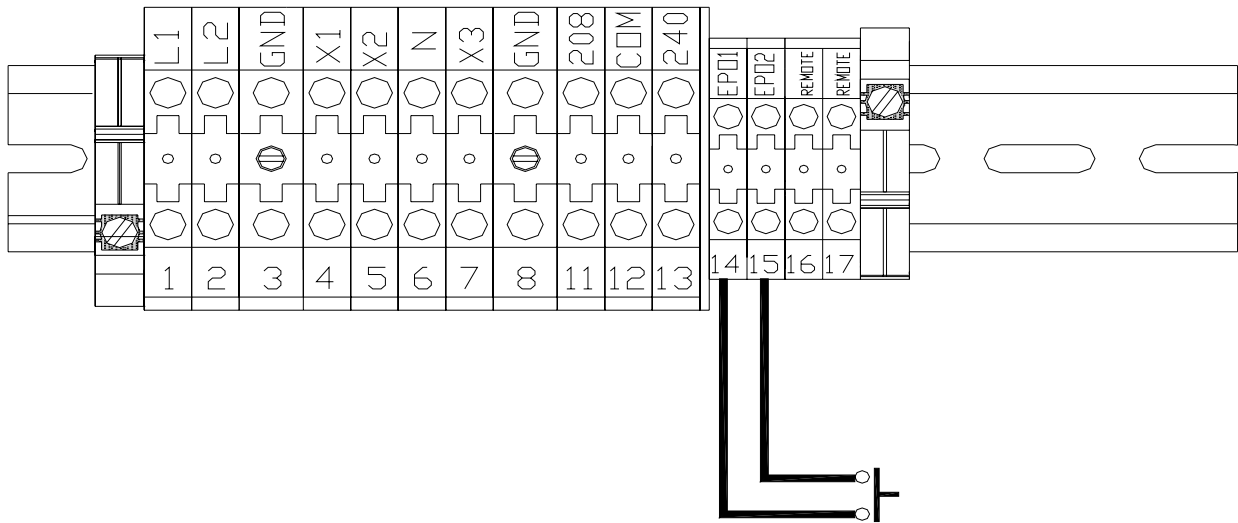


Terminal Block TB1 on the 1600EP UPS



## 7.0 External Layouts / Dimensions / Shipping Weights

### 7.1 External Layouts

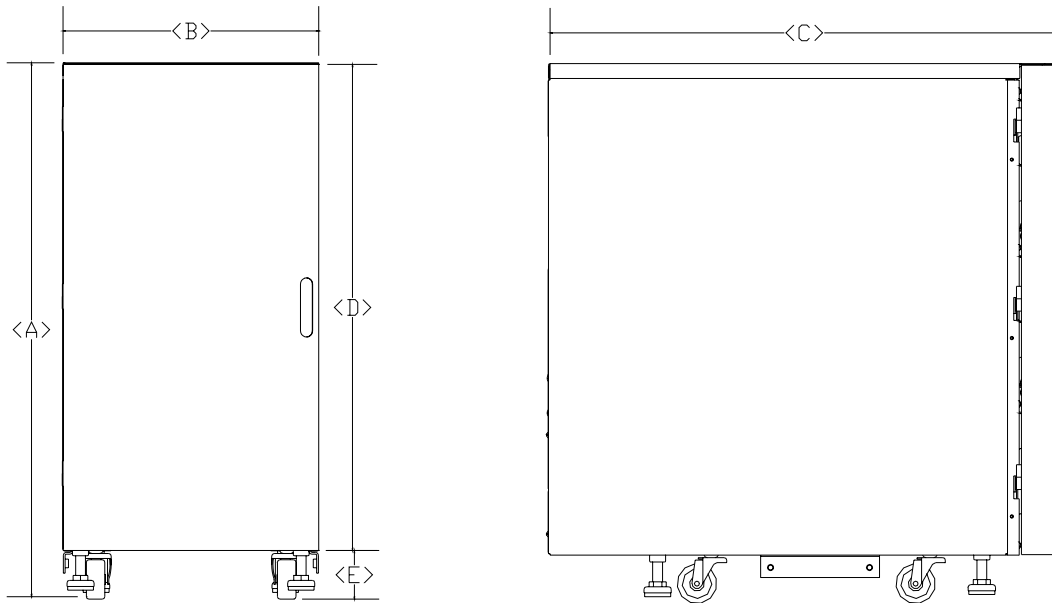

### 7.2 Dimensions

Model	A	B	C	D	E
UE31-BC-0650	27.12 in. (688.8 mm)	12.90 in. (327.7 mm)	25.70 in. (652.8 mm)	24.70 in. (627.4 mm)	2.50 in. (63.5 mm)

### 7.3 Shipping Weights

Model	Pounds	Kilograms
UE31-BC-0650	380 lbs.	172.4 kg

## 8.0 1600EP System Backup Runtime

The following runtime table gives the approximate combined backup runtime in minutes at different load levels for 1600EP UPS models equipped with one and two battery cabinets.

**NOTE:** These values are approximate and are dependent on many variables including operating environment, age of the batteries, battery temperature, and discharge history.

The load levels are given as a percent of rated load with a 0.7 power factor.

**Table 1: Estimated Runtime of UPS with Battery Cabinet at Various Loads**

	Rated Load	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%
UPS plus One Battery Cabinet	1600EP 3.6 kVA	60	65	70	80	90	105	120	150	180	300
	1600EP 6 kVA	35	40	45	50	60	70	85	105	135	180
UPS plus Two Battery Cabinets	1600EP 3.6 kVA	90	95	110	120	135	150	180	240	300	<300*
	1600EP 6 kVA	60	65	70	80	90	105	120	150	180	300

\* Estimated Runtime Exceeds 300 minutes.







# **TOSHIBA**

**TOSHIBA INTERNATIONAL CORPORATION**

**INDUSTRIAL DIVISION**

13131 West Little York Rd., Houston, TX 77041

Tel: 713/466-0277 Fax 713/466-8773

US 877/867-8773 Canada 800/872-2192 Mexico 01/800/527-1204

[www.toshiba.com/ind](http://www.toshiba.com/ind)

Printed in the U.S.A.