

GS-5424PLC V2/ GS-5216PLC/GS-5210PL

User Manual

08-2021 / v1.1

Edimax Technology Co., Ltd.

No. 278, Xinhua 1st Rd., Neihu Dist., Taipei City, Taiwan

Email: support@edimax.com.tw

Edimax Technology Europe B.V.

Fijenhof 2, 5652 AE Eindhoven, The Netherlands

Email: support@edimax.nl

Edimax Computer Company

530 Technology Drive Suite 100, Irvine, CA 92618, USA

Email: support@edimax.us

Contents

I. Product Information.....	1
I-1. Package Contents	2
I-2. Hardware Overview	2
I-3. LED Status.....	4
II. Getting Started the Configuration Utility	6
III. Web-based Switch Configuration.....	8
III-1. Status.....	8
III-1-1. System Information	8
III-1-2. Logging Message.....	10
III-1-3. Port.....	11
III-1-3-1. Statistics.....	11
III-1-3-2. Error Disabled	14
III-1-3-3. Bandwidth Utilization.....	14
III-1-4. Link Aggregation	15
III-1-5. MAC Address Table	16
III-2. Network.....	17
III-2-1. IP Address	17
III-2-2. System Time	19
III-3. Port.....	22
III-3-1. Port Setting.....	22
III-3-2. Long Range Mode	24
III-3-3. Error Disable	25
III-3-4. Link Aggregation	26
III-3-4-1. Group.....	26
III-3-4-2. Port Setting	28
III-3-4-3. LACP.....	30
III-3-4-4. EEE	31
III-3-5. Jumbo Frame	32
III-4. PoE.....	32

III-4-1.	Global Setting	33
III-4-2.	PoE On/Off.....	35
III-4-3.	PD Alive Check	36
III-5.	VLAN	37
III-5-1.	VLAN	37
III-5-1-1.	Create VLAN.....	37
III-5-1-2.	VLAN Configuration.....	39
III-5-1-3.	Membership.....	40
III-5-1-4.	Port Setting	42
III-5-2.	Voice VLAN	43
III-5-2-1.	Property	44
III-5-2-2.	Voice OUI	45
III-5-3.	MAC VLAN	47
III-5-3-1.	MAC Group	47
III-5-3-2.	Group Binding	48
III-5-4.	Surveillance VLAN	49
III-5-4-1.	Property	50
III-5-4-2.	Surveillance OUI.....	51
III-6.	MAC Address Table.....	51
III-6-1.	Dynamic Address	52
III-6-2.	Static Address	52
III-6-3.	Filtering Address	53
III-7.	Spanning Tree.....	53
III-7-1.	Property.....	53
III-7-2.	Port Setting.....	56
III-7-3.	MST Instance	58
III-7-4.	MST Port Setting.....	60
III-7-5.	Statistics	62
III-8.	Discovery	63
III-8-1.	LLDP.....	63
III-8-1-1.	Property	64
III-8-1-2.	Port Setting	65
III-8-1-3.	Packet View.....	67
III-8-1-4.	Local Information.....	70
III-8-1-5.	Neighbor	72
III-8-1-6.	Statistics.....	76

III-9.	Multicast.....	77
III-9-1.	General	77
III-9-1-1.	Property	77
III-9-1-2.	Group Address	78
III-9-1-3.	Router Port	80
III-9-2.	IGMP Snooping	82
III-9-2-1.	Property	82
III-9-2-2.	Querier.....	85
III-9-2-3.	Statistics.....	87
III-9-3.	MVR.....	88
III-9-3-1.	Property	88
III-9-3-2.	Port Setting	89
III-9-3-3.	Group Address	90
III-10.	Security.....	92
III-10-1.	RADIUS	92
III-10-2.	Management Access	95
III-10-2-1.	Management VLAN	95
III-10-2-2.	Management Service	95
III-10-2-3.	Management ACL.....	97
III-10-2-4.	Management ACE	98
III-10-3.	Authentication Manager.....	101
III-10-3-1.	Property.....	101
III-10-3-2.	Port Setting.....	106
III-10-3-3.	Sessions	109
III-10-4.	Port Security	111
III-10-5.	Traffic Segmentation.....	112
III-10-6.	Storm Control	114
III-10-7.	DoS	116
III-10-7-1.	Property	116
III-10-7-2.	Port Setting	118
III-10-8.	DHCP Snooping	119
III-10-8-1.	Property	120
III-10-8-2.	Statistics.....	122
III-10-8-3.	Option82 Property	123
III-10-8-4.	Option82 Circuit ID.....	125
III-10-9.	IP Source Guard	126
III-10-9-1.	Port Setting	126
III-10-9-2.	IMPV Binding.....	127
III-10-9-3.	Save Database.....	129

III-11. ACL.....	130
III-11-1. MAC ACL	130
III-11-2. MAC ACE.....	131
III-11-3. IPv4 ACL	133
III-11-4. IPv4 ACE.....	134
III-11-5. ACL Binding.....	137
III-12. QoS	138
III-12-1. General	138
III-12-1-1. Property	139
III-12-1-2. Queue Scheduling	141
III-12-1-3. CoS Mapping	142
III-12-1-4. IP Precedence Mapping.....	143
III-12-2. Rate Limit.....	144
III-12-2-1. Ingress/Egress Port	144
III-13. Diagnostics	145
III-13-1. Logging	146
III-13-1-1. Property	146
III-13-1-2. Remote Server	147
III-13-2. Mirroring	148
III-13-3. Ping.....	150
III-13-4. Traceroute	151
III-13-5. Copper Test	152
III-13-6. Fiber Module	153
III-13-7. UDLD.....	154
III-13-7-1. Property	154
III-13-7-2. Neighbor	156
III-14. Management	157
III-14-1. User Account	157
III-14-2. Fireware.....	159
III-14-2-1. Upgrade / Backup	159
III-14-2-2. Active Image	163
III-14-3. Configuration.....	164
III-14-3-1. Upgrade / Backup	164
III-14-3-2. Save Configuration	168
III-14-4. SNMP.....	168
III-14-4-1. View	168
III-14-4-2. Group.....	169

III-14-4-3. Community	171
III-14-4-4. User	173
III-14-4-5. Engine ID	176
III-14-4-6. Trap Event.....	178
III-14-4-7. Notification	178
III-14-5. Time Range	182

IV. Surveillance Mode.....183

IV-1. Home Page	183
IV-1-1. Overview.....	184
IV-1-2. Port Info.....	185
IV-1-3. IP Camera Info	186
IV-1-4. NVR Info.....	187
IV-1-5. PoE Info	187
IV-1-6. Status.....	188
IV-2. PoE Scheduling	189
IV-3. Time.....	191
IV-3-1. Clock Settings.....	191
IV-3-2. SNTP Settings.....	192
IV-4. Surveillance Settings.....	193
IV-5. Mail Alert.....	196
IV-6. Powered Device Monitor	198
IV-7. ONVIF	200
IV-7-1. IPC Discover	200
IV-7-2. NVR Discover	200
IV-8. E-map Management	201
IV-8-1. Image Upload.....	201
IV-8-2. Image Settings	202
IV-8-3. E-map View.....	203
IV-9. Tools	203
IV-9-1. Firmware Information.....	203
IV-9-2. Firmware Upgrade & Backup	204

IV-9-3. Configuration Restore & Backup 204

IV-9-4. Reset..... 205

IV-9-5. Reboot System..... 205

V. Config Reload Button(Firmware version V1.0.8).....206

V-1. ONVIF Compliant Devices Enrollment (Standard Mode) 208

V-2. Non-ONVIF Compliant Devices Enrollment (Standard Mode) 208

V-3. ONVIF Compliant Devices Enrollment (Surveillance Mode)... 210

V-4. Non-ONVIF Compliant Devices Enrollment (Surveillance Mode) . 210

I. Product Information

The EDIMAX Pro GS-5424PLC V2/ GS-5216PLC/GS-5210PL Surveillance VLAN Long-range PoE+ Web-Smart Switches come with a web-based user interface, The Gigabit connectivity fully utilizes the power of your office networking for demanding tasks, such as data backup, video conferencing, IP surveillance, high volume transaction processing, large file transferring, and more. EDIMAX Surveillance VLAN Long-range PoE Web-Smart Switches Support ONVIF Profile Q standard which is compatible with working ONVIF compliant Profiles G/Q/S/A/C/T/M devices to provide fast and easy system settings, device discovery, and use authentication.

You can find all supporting documents from the link below or via QR Code:

<https://www.edimax.com/download>




(Once you've visited the Edimax official website, please enter the model #. into the search box to search for your product.)

Download

To select your product and find related download materials, enter the model number into the search box on the right side or follow the simple steps below:

*Feel free to contact us anytime if you need help or if you can't find your product.

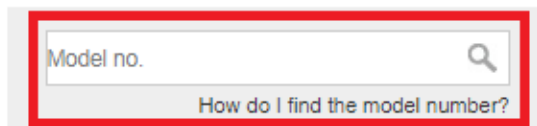A screenshot of a web search interface. It features a search box with the placeholder text "Model no." and a magnifying glass icon on the right. Below the search box is a link that reads "How do I find the model number?". The entire search area is highlighted with a red rectangular border.


I-1. Package Contents

Before start using this product, please check if there is anything missing in the package, and contact your dealer to claim the missing item(s):


Model#	Surveillance VAN Web-Smart Switch	Quick Installatio n Guide	Rack-Mount Kit	Power Cord	Console Cable
GS-5424PLC V2	V	V	V	V	V
GS-5216PLC	V	V	V	V	
GS-5210PL	V	V	V	V	

I-2. Hardware Overview


GS-5424PLC V2:

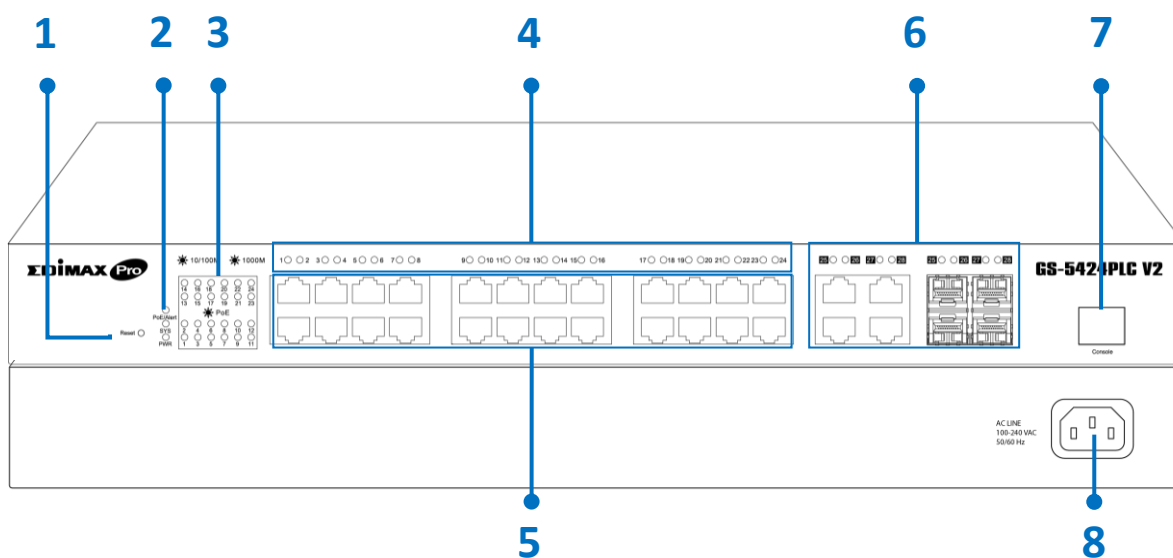

GS-5216PLC:

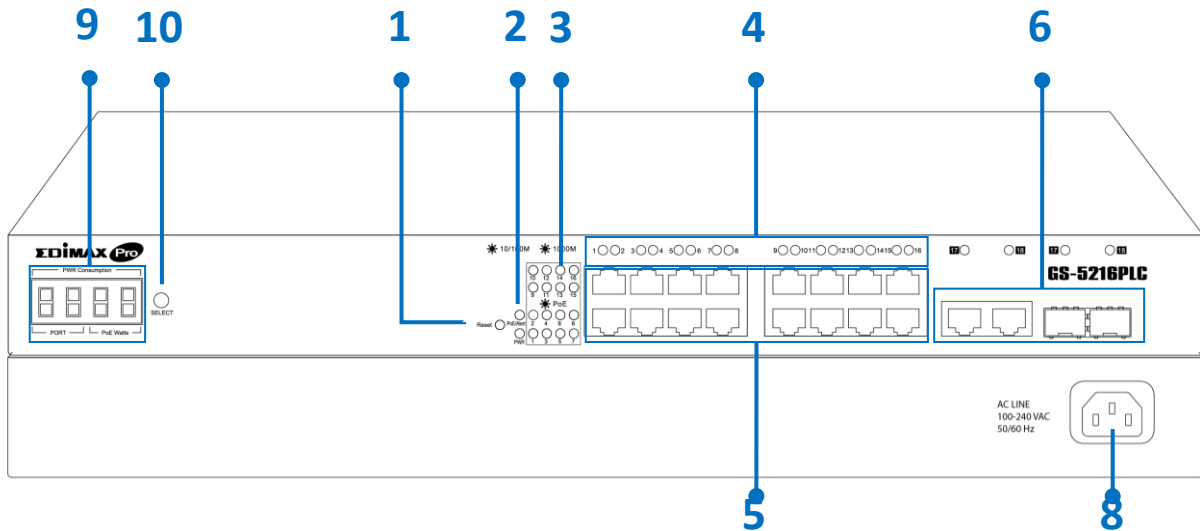

GS-5210PL:

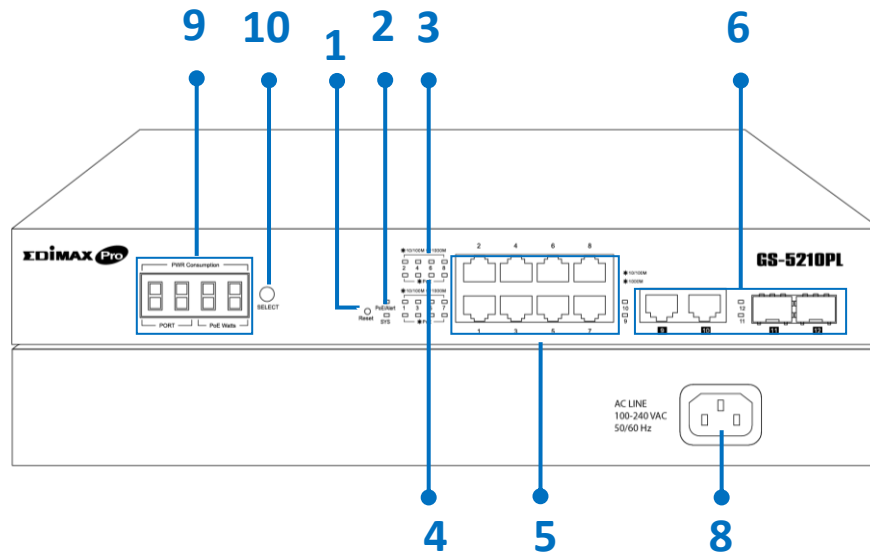


No.	GS-5424PLC V2	GS-5216PLC	GS-5210PL
1.	Reset Button	Reset Button	Reset Button
2.	LED (PoE/Alert, SYS PWR)	LED (PoE/Alert, PWR)	LED (PoE/Alert, SYS)
3.	LED PoE	LED PoE	LED Link/Act
4.	LED Link/Act	LED Link/Act	LED PoE
5.	PoE Port 1~24	PoE Port 1~16	PoE Port 1~8
6.	Combo Ports (RJ45/SFP) 25~28	Combo Ports (RJ45/SFP) 17~18	RJ45 Port 9~10 SFP Port 11~12
7.	Console Port	N/A	N/A
8.	Power Socket	Power Socket	Power Socket
9.	N/A	PWR Consumption: PORT, PoE Watts	PWR Consumption: PORT, PoE Watts
10.	Selection Button	PWR Consumption Status SELECT Button	PWR Consumption Status SELECT Button

I-3. LED Status

Function	Status	Description
Data Rate: 10/100/1000M	On (Amber)	Port is connected, Link at 10/100M
	On (Green)	Port is connected, Link at 1000M
	Off	Port is disconnected or link failure
	Flashing (Amber or Green)	Sending or receiving data
PoE	On	Feeding power to PoE devices
	Off	PoE function is not active
SFP	On (Green)	Port is connected, Link at 1000M
	On (Amber)	Port is connected, Link at 100M
	Flashing (Amber or Green)	Sending or receiving data
PoE/Alert	On	Total PoE power consumed is exceeding PoE power budget
	Off	Total PoE power consumed is under PoE power budget
SYS PWR	On (Green)	System Power on
	Off	System Power off

7-Segment LED Power Consumption Status (GS-5216PLC & GS-5210PL ONLY)

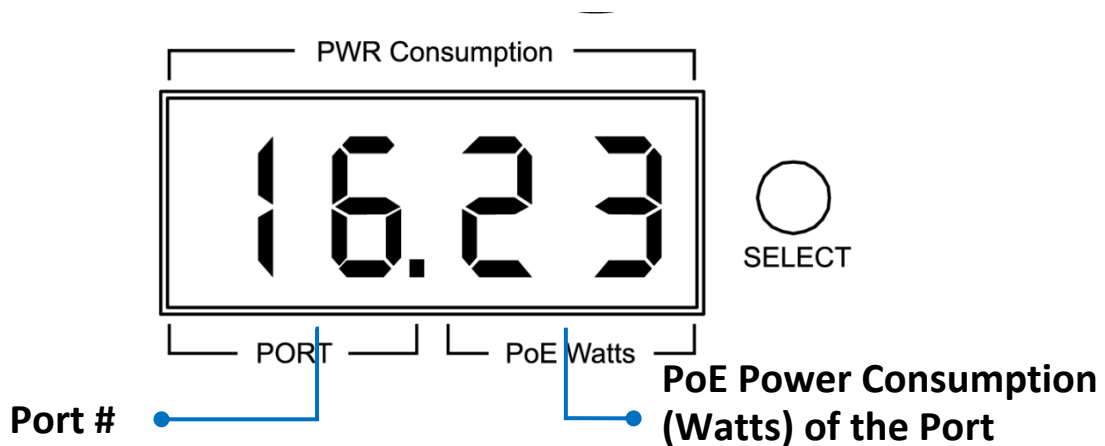


Note: The LED indicator shows you the status of “Total PoE Power Budget” or “PoE Power Budget Left” when only 3 LED indicators are lighted on

NOTE:

Please press the “Selection Button” to change the power LED status indicator.


- Without pressing the selection button:

The LED status indicator shows the total power budget.

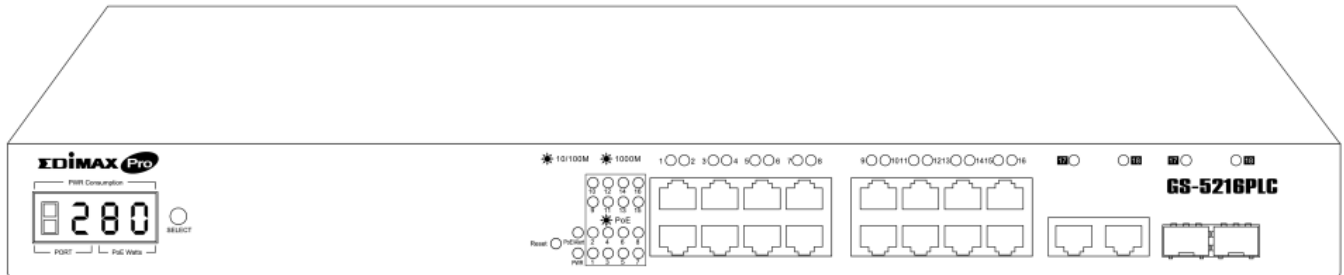


- Press the selection button twice:

The LED status indicator shows the total power budget left.

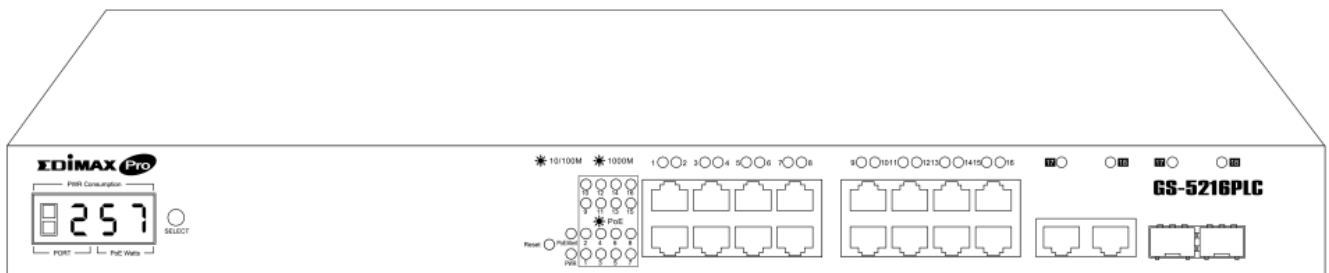

If you want to see power consumption of each port, each time the button is pressed, the power consumption is displayed as follows.

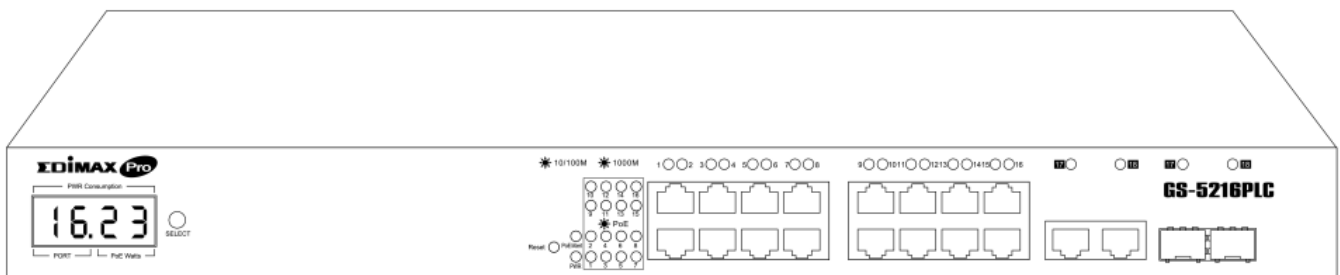

II. Getting Started the Configuration Utility

This section describes how to navigate the web-based switch configuration utility. Be sure to disable any pop-up blocker.

Launching the Configuration Utility:


To open the web-based configuration utility:

1. Open a Web browser.
2. Enter the IP address of the device you are configuring in the address bar on the browser (factory default IP address is **192.168.2.1**) and then press Enter.
3. The default username is **admin** and the default password is **1234**.



The screenshot shows the login interface for the EDIMAX Pro web-based configuration utility. At the top, the logo "EDIMAX Pro" is displayed, with "EDIMAX" in white and "Pro" in white text inside a red oval. Below the logo, the "Model Name" is listed as "GS-5216PLC". The login form includes three fields: "Username:" with a user icon, "Password:" with a lock icon, and "Language" with a dropdown menu currently set to "English". A large "LOGIN" button is positioned at the bottom of the form.

4. The first time that you log in with the default username and password, you are required to enter a New Password and Confirm Password

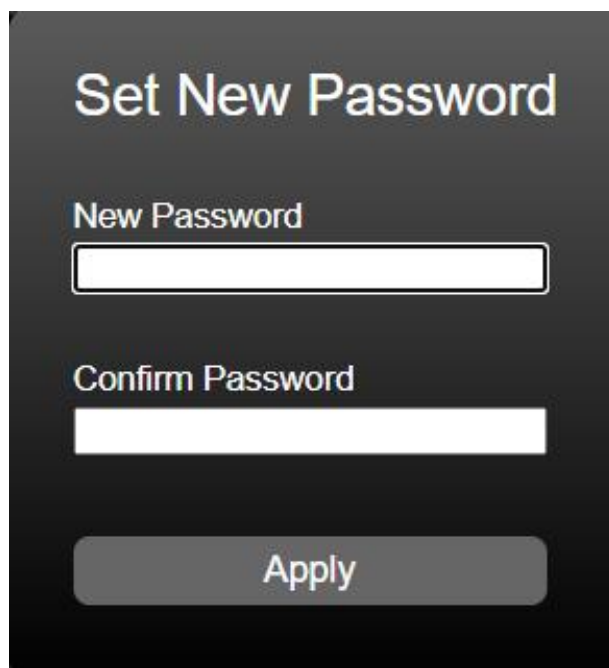A screenshot of a web-based configuration utility window titled "Set New Password". The window has a dark background. It contains two text input fields: "New Password" and "Confirm Password". Below these fields is a grey button labeled "Apply".

Set New Password

New Password

Confirm Password

Apply

5. For more information about Web-based Configuration Utility, please download User Manual from EDIMAX Download Center:

<https://www.edimax.com/download>



NOTE: Your computer's IP address must be in the same subnet as the switch. For example, if the switch is using the factory default IP address, your computer's IP address can be in the following range: 192.168.2.x (whereas x is a number from 2 to 254).


After a successful connection, the login window displays.

III. Web-based Switch Configuration

The Surveillance VLAN PoE+ Web Smart switches provide rich functionalities. This chapter describes how to use the web-based management interface (Web UI) to configure the switch's features.

For the purposes of this manual of GS-5424PLC V2/GS-5216PLC/GS-5210PL, the user interface is separated into five sections, as shown in the following figure:

Status >> System Information

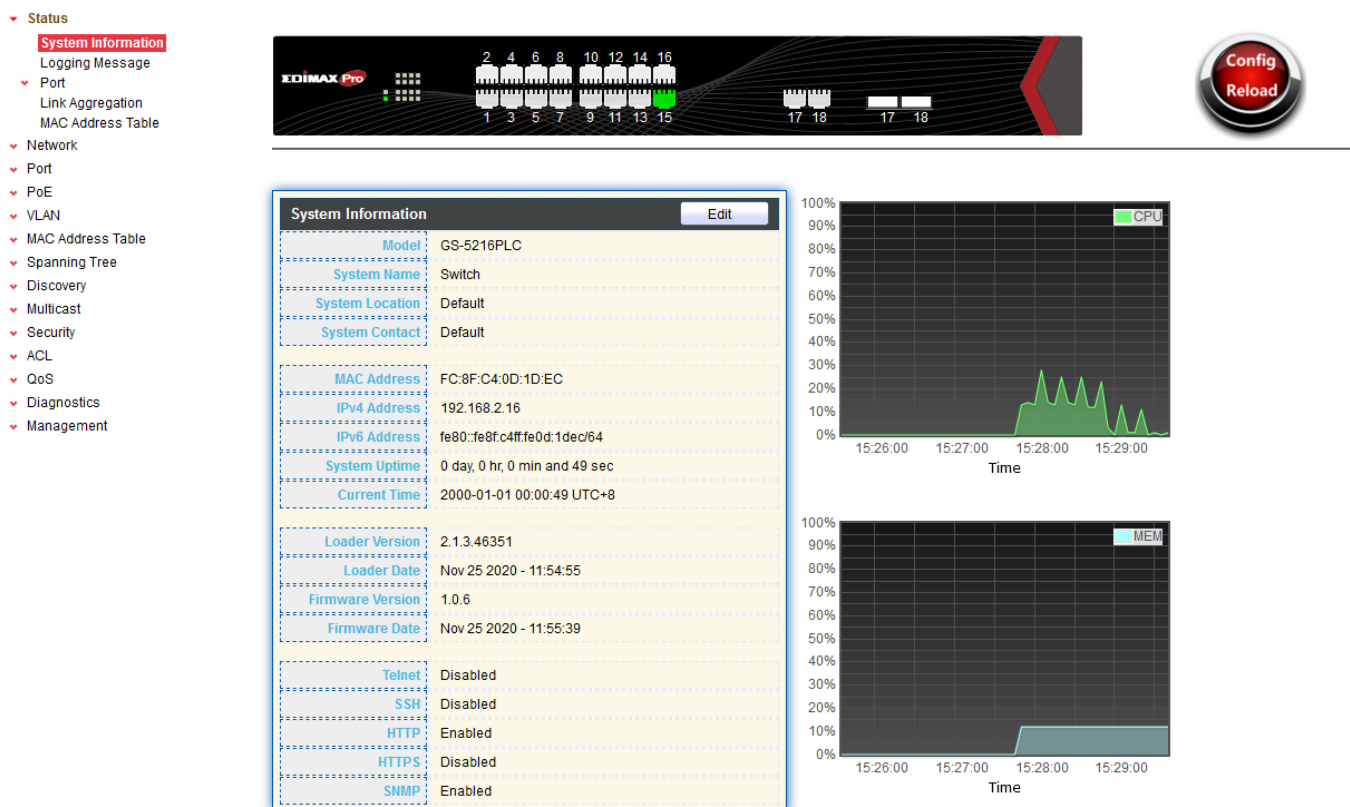

III-1. Status

Use the Status pages to view system information and status.

III-1-1. System Information

This page shows switch panel, CPU utilization, Memory utilization and other system current information. It also allows user to edit some system information.

To display the Device Information web page, click **Status > System Information**.

▼ Status

System Information

Logging Message

▼ Port

Link Aggregation

MAC Address Table

▼ Network

▼ Port

▼ PoE

▼ VLAN

▼ MAC Address Table

▼ Spanning Tree

▼ Discovery

▼ Multicast


▼ Security

▼ ACL

▼ QoS

▼ Diagnostics

▼ Management



System Information		Edit
Model	GS-5216PLC	
System Name	Switch	
System Location	Default	
System Contact	Default	
MAC Address	FC:8F:C4:0D:1D:EC	
IPv4 Address	192.168.2.16	
IPv6 Address	fe80::fe8f:c4ff:fe0d:1dec/64	
System Uptime	0 day, 0 hr, 0 min and 49 sec	
Current Time	2000-01-01 00:00:49 UTC+8	
Loader Version	2.1.3.46351	
Loader Date	Nov 25 2020 - 11:54:55	
Firmware Version	1.0.6	
Firmware Date	Nov 25 2020 - 11:55:39	
Telnet	Disabled	
SSH	Disabled	
HTTP	Enabled	
HTTPS	Disabled	
SNMP	Enabled	

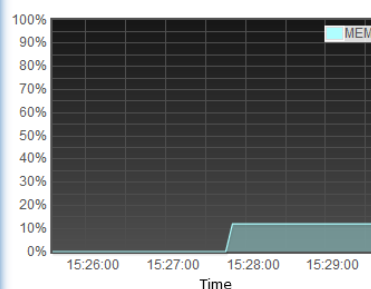
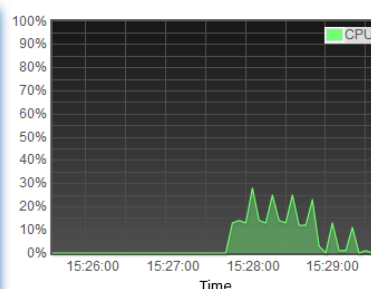


Figure 12 - Status > System Information

Item	Description
Model	Model name of the switch.
System Name	System name of the switch. This name will also use as CLI prefix of each line. ("Switch>" or "Switch#").
System Location	Location information of the switch.
System Contact	Contact information of the switch.
MAC Address	Base MAC address of the switch.
IPv4 Address	Current system IPv4 address.
IPv6 Address	Current system IPv6 address.
System Uptime	Total elapsed time from booting.
Current Time	Current system time.
Loader Version	Boot loader image version.
Loader Date	Boot loader image build date.
Firmware Version	Current running firmware image version.
Firmware Date	Current running firmware image build date.
Telnet	Current Telnet service enable/disable state.
SSH	Current SSH service enable/disable state.
HTTP	Current HTTP service enable/disable state.
HTTPS	Current HTTPS service enable/disable state.
SNMP	Current SNMP service enable/disable state.

Click “Edit” button on the table title to edit following system information.

Edit System Information

System Name: Switch

System Location: Default

System Contact: Default

Apply Close

Figure 13 - Status > System Information > Edit System Information

Item	Description
System Name	System name of the switch. This name will also use as CLI prefix of each line. (“Switch>” or “Switch#”).
System Location	Location information of the switch.
System Contact	Contact information of the switch.

III-1-2. Logging Message

To view the logging messages stored on the RAM and Flash, click **Status > Logging Message**.

Logging Message Table

Viewing RAM

Showing All entries Showing 1 to 4 of 4 entries

Log ID	Time	Severity	Description
1	Jan 01 2000 00:01:19	notice	New http connection for user admin, source 192.168.2.22 ACCEPTED
2	Jan 01 2000 00:01:01	notice	GigabitEthernet28 link up
3	Jan 01 2000 00:00:58	notice	RESTART: System restarted - Cold Start
4	Jan 01 2000 00:00:58	notice	Logging is enabled

Clear Refresh First Previous 1 Next Last

Figure 14 - Status > Logging Message

Item	Description
Log ID	The log identifier.
Time	The time stamp for the logging message.
Severity	The severity for the logging message.
Description	The description of logging message.

Viewing	The logging view including: <ul style="list-style-type: none"> ● RAM: Show the logging messages stored on the RAM. ● Flash: Show the logging messages stored on the Flash.
Clear	Clear the logging messages.
Refresh	Refresh the logging messages.

III-1-3. Port

III-1-3-1. Statistics

This page displays standard counters on network traffic from the Interfaces, Ethernet-like and RMONMIB. Interfaces and Ethernet-like counters display errors on the traffic passing through each port. RMON counters provide a total count of different frame types and sizes passing through each port. The “Clear” button will clear MIB counter of current selected port.

To display the Port Flow Chart web page, click **Status > Port > Statistics**.

Port	GE1 ▼
MIB Counter	<input checked="" type="radio"/> All <input type="radio"/> Interface <input type="radio"/> Etherlike <input type="radio"/> RMON
Refresh Rate	<input type="radio"/> None <input type="radio"/> 5 sec <input checked="" type="radio"/> 10 sec <input type="radio"/> 30 sec

Clear

Interface

ifInOctets	0
ifInUcastPkts	0
ifInNUcastPkts	0
ifInDiscards	0
ifOutOctets	0
ifOutUcastPkts	0
ifOutNUcastPkts	0
ifOutDiscards	0
ifInMulticastPkts	0
ifInBroadcastPkts	0
ifOutMulticastPkts	0
ifOutBroadcastPkts	0

Etherlike

dot3StatsAlignmentErrors	0
dot3StatsFCSErrors	0
dot3StatsSingleCollisionFrames	0
dot3StatsMultipleCollisionFrames	0
dot3StatsDeferredTransmissions	0
dot3StatsLateCollisions	0
dot3StatsExcessiveCollisions	0

dot3StatsSymbolErrors	0
dot3ControlInUnknownOpCodes	0
dot3InPauseFrames	0
dot3OutPauseFrames	0
RMON	
etherStatsDropEvents	0
etherStatsOctets	0
etherStatsPkts	0
etherStatsBroadcastPkts	0
etherStatsMulticastPkts	0
etherStatsCRCAlignErrors	0
etherStatsUnderSizePkts	0
etherStatsOverSizePkts	0
etherStatsFragments	0
etherStatsJabbers	0
etherStatsCollisions	0
etherStatsPkts64Octets	0
etherStatsPkts65to127Octets	0
etherStatsPkts128to255Octets	0
etherStatsPkts256to511Octets	0
etherStatsPkts512to1023Octets	0
etherStatsPkts1024to1518Octets	0

Figure 15 - Status > Port > Statistics

Item	Description
Port	Select one port to show counter statistics.
MIB Counter	Select the MIB counter to show different counter type <ul style="list-style-type: none"> ● All: All counters. ● Interface: Interface related MIB counters. ● Etherlike: Ethernet-like related MIB counters. ● RMON: RMON related MIB counters.
Refresh Rate	Refresh the web page every period of seconds to get new counter of specified port.

III-1-3-2. Error Disabled

To display the Error Disabled web page, click **Status > Port > Error Disabled**.

Error Disabled Table

	Port	Reason	Time Left (sec)
<input type="checkbox"/>	GE1	--	--
<input type="checkbox"/>	GE2	--	--
<input type="checkbox"/>	GE3	--	--
<input type="checkbox"/>	GE4	--	--
<input type="checkbox"/>	GE5	--	--
<input type="checkbox"/>	GE6	--	--
<input type="checkbox"/>	GE7	--	--
<input type="checkbox"/>	GE8	--	--
<input type="checkbox"/>	GE9	--	--
<input type="checkbox"/>	GE10	--	--
<input type="checkbox"/>	GE11	--	--
<input type="checkbox"/>	GE12	--	--
<input type="checkbox"/>	GE13	--	--
<input type="checkbox"/>	GE14	--	--
<input type="checkbox"/>	GE15	--	--
<input type="checkbox"/>	GE16	--	--
<input type="checkbox"/>	GE17	--	--
<input type="checkbox"/>	GE18	--	--
<input type="checkbox"/>	GE19	--	--
<input type="checkbox"/>	GE20	--	--
<input type="checkbox"/>	GE21	--	--
<input type="checkbox"/>	GE22	--	--
<input type="checkbox"/>	GE23	--	--
<input type="checkbox"/>	GE24	--	--
<input type="checkbox"/>	XGE1	--	--
<input type="checkbox"/>	XGE2	--	--
<input type="checkbox"/>	XGE3	--	--
<input type="checkbox"/>	XGE4	--	--
<input type="checkbox"/>	LAG1	--	--
<input type="checkbox"/>	LAG2	--	--
<input type="checkbox"/>	LAG3	--	--
<input type="checkbox"/>	LAG4	--	--
<input type="checkbox"/>	LAG5	--	--
<input type="checkbox"/>	LAG6	--	--
<input type="checkbox"/>	LAG7	--	--
<input type="checkbox"/>	LAG8	--	--

Figure 16 - Status > Port > Error Disabled

Item	Description
<input type="checkbox"/>	Select one or more port to operate.
Port	Interface or port number.
Reason	Port will be disabled by one of the following error reason: <ul style="list-style-type: none">● BPDU Guard● UDLD● Self Loop● Broadcast Flood● Unknown Multicast Flood● Unicast Flood● ACL● Port Security Violation● DHCP rate limit● ARP rate limit
Time Left (sec)	The time left in second for the error recovery.
Refresh	Refresh the current page.
Recover	Recover the selected port status.

III-1-3-3. Bandwidth Utilization

This page allow user to browse ports' bandwidth utilization in real time. This page will refresh automatically in every refresh period.

To display Bandwidth Utilization web page, click **Status > Port > Bandwidth Utilization**.

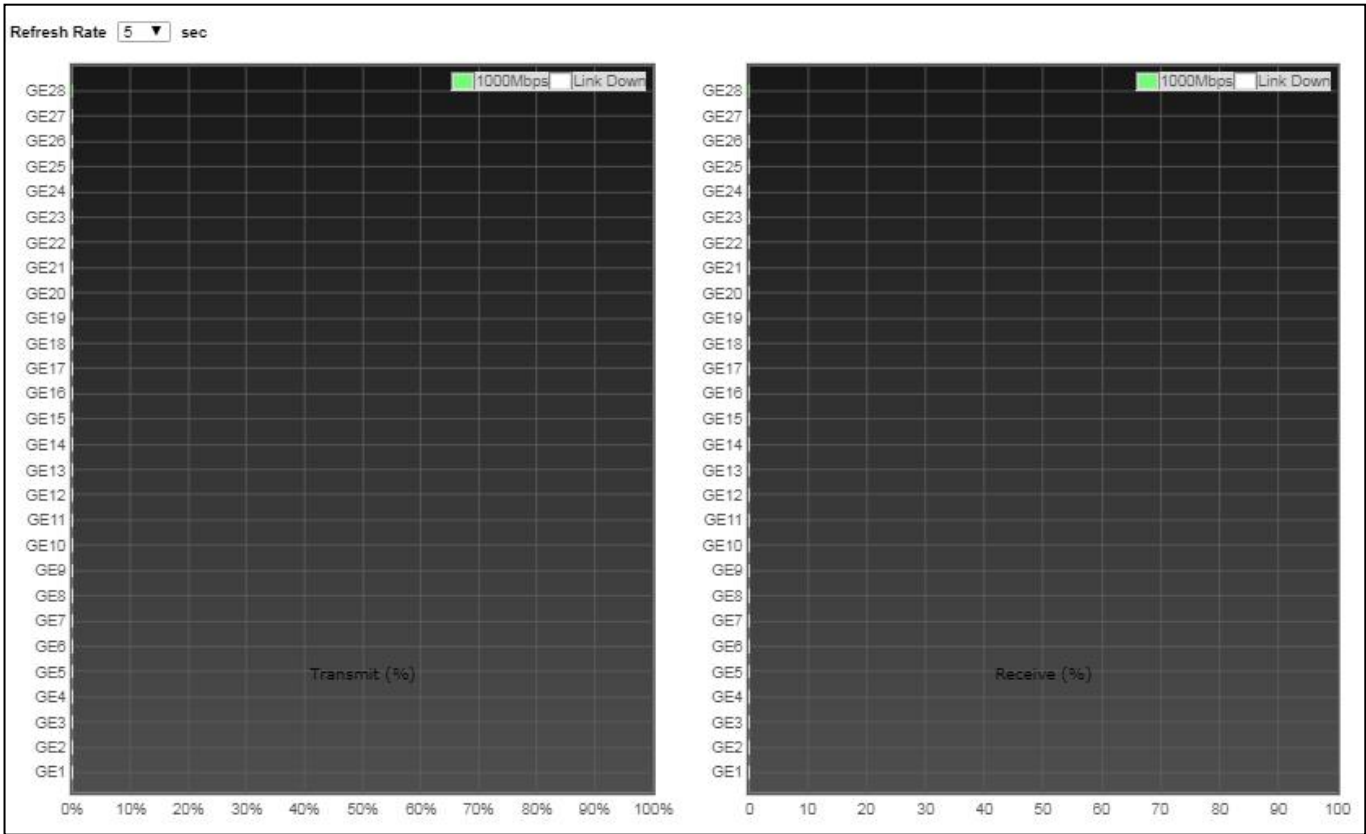


Figure 17 - Status > Port > Bandwidth Utilization

Item	Description
Refresh Rate	Refresh the web page every period of seconds to get new bandwidth utilization data.

III-1-4. Link Aggregation

To display the Link Aggregation web page, click **Status > Link Aggregation**.

Link Aggregation Table					
LAG	Name	Type	Link Status	Active Member	Inactive Member
LAG 1		---	---		
LAG 2		---	---		
LAG 3		---	---		
LAG 4		---	---		
LAG 5		---	---		
LAG 6		---	---		
LAG 7		---	---		
LAG 8		---	---		

Figure 18 - Status > Link Aggregation

Item	Description
LAG	LAG Name.
Name	LAG port description.
Type	<p>The type of the LAG.</p> <ul style="list-style-type: none"> ● Static: The group of ports assigned to a static LAG are always active members. ● LACP: The group of ports assigned to dynamic LAG are candidate ports. LACP determines which candidate ports are active member ports.
Link Status	LAG port link status.
Active Member	Active member ports of the LAG.
Inactive Member	Inactive member ports of the LAG.

III-1-5. MAC Address Table

The MAC address table page displays all MAC address entries on the switch including static MAC address created by administrator or auto learned from hardware. The “Clear” button will clear all dynamic entries and “Refresh” button will retrieve latest MAC address entries and show them on page.

To display the MAC Address Table web page, click **Status > MAC Address Table**.

VLAN	MAC Address	Type	Port
1	74:DA:38:17:6E:7A	Management	CPU
1	B8:6B:23:6D:C1:14	Dynamic	GE28

Figure 19 - Status > MAC Address Table

Item	Description
VLAN	VLAN ID of the mac address.
MAC Address	MAC address.
Type	<p>The type of MAC address</p> <ul style="list-style-type: none"> ● Management: DUT’s base mac address for management Purpose. ● Static: Manually configured by administrator ● Dynamic: Auto learned by hardware.
Port	<p>The type of Port</p> <ul style="list-style-type: none"> ● CPU: DUT’s CPU port for management purpose. ● Other: Normal switch port.

III-2. Network

Use the Network pages to configure settings for the switch network interface and how the switch connects to a remote server to get services.

III-2-1. IP Address

This section allows you to edit the IP address, Netmask, Gateway and DNS server of the switch.

To view the IP Address menu, navigate to **Network > IP Address**.

IPv4 Address	
Address Type	<input checked="" type="radio"/> Static <input type="radio"/> Dynamic
IP Address	192.168.2.1
Subnet Mask	255.255.255.0
Default Gateway	192.168.2.254
DNS Server 1	168.95.1.1
DNS Server 2	168.95.192.1

IPv6 Address	
Auto Configuration	<input checked="" type="checkbox"/> Enable
DHCPv6 Client	<input type="checkbox"/> Enable
IPv6 Address	
Prefix Length	0 (0 - 128)
IPv6 Gateway	
DNS Server 1	
DNS Server 2	

Operational Status	
IPv4 Address	192.168.2.1
IPv4 Default Gateway	192.168.2.254
IPv6 Address	fe80::76da:38ff:fe17:6e7a/64
IPv6 Gateway	::
Link Local Address	fe80::76da:38ff:fe17:6e7a/64

Apply

Figure 20 - Network > IP Address

Item	Description
Address Type	The address type of switch IP configuration including <ul style="list-style-type: none"> ● Static: Static IP configured by users will be used. ● Dynamic: Enable the DHCP to obtain the IP address from a DHCP server.
IP Address	Specify the switch static IP address on the static configuration.
Subnet Mask	Specify the switch subnet mask on the static configuration.
Default Gateway	Specify the default gateway on the static configuration. The default gateway must be in the same subnet with switch IP address configuration.
DNS Server 1	Specify the primary user-defined IPv4 DNS server configuration.
DNS Server 2	Specify the secondary user-defined IPv4 DNS server configuration.
Table 3-2: IPv6 Address fields	
IPv4 Address	The operational IPv4 address of the switch.
IPv4 Gateway	The operational IPv4 gateway of the switch.
IPv6 Address v6	The operational IPv6 address of the switch.
IPv6 Gateway	The operational IPv6 gateway of the switch.
Link Local Address	The IPv6 link local address for the switch.

III-2-2. System Time

This page allow user to set time source, static time, time zone and daylight saving settings. Time zone and daylight saving takes effect both static time or time from SNTP server.

To display System Time page, click **Network > System Time**.

Source	<input type="radio"/> SNTP <input type="radio"/> From Computer <input checked="" type="radio"/> Manual Time	
Time Zone	UTC +8:00 ▼	

SNTP

Address Type	<input checked="" type="radio"/> Hostname <input type="radio"/> IPv4	
Server Address		
Server Port	123	(1 - 65535, default 123)

Manual Time

Date	2000-01-01	YYYY-MM-DD
Time	00:15:47	HH:MM:SS

Daylight Saving Time

Type	<input checked="" type="radio"/> None <input type="radio"/> Recurring <input type="radio"/> Non-recurring <input type="radio"/> USA <input type="radio"/> European	
Offset	60	Min (1 - 1440, default 60)
Recurring	From: Day Sun ▼ Week First ▼ Month Jan ▼ Time	
	To: Day Sun ▼ Week First ▼ Month Jan ▼ Time	
Non-recurring	From:	YYYY-MM-DD HH:MM
	To:	YYYY-MM-DD HH:MM

Operational Status

Current Time	2000-01-01 00:15:47 UTC+8
--------------	---------------------------

Apply

Figure 21 - Network > System Time

Item	Description
Source	Select the time source. <ul style="list-style-type: none"> ● SNTP: Time sync from NTP server. ● From Computer: Time set from browser host. ● Manual Time: Time set by manually configure.
Time Zone	Select a time zone difference from listing district.
SNTP	
Address Type	Select the address type of NTP server. This is enabled when time source is SNTP.
Server Address	Input IPv4 address or hostname for NTP server. This is enabled when time source is SNTP.
Server Port	Input NTP port for NTP server. Default is 123. This is enabled when time source is SNTP.
Manual Time	
Date	Input manual date. This is enabled when time source is manual.
Time	Input manual time. This is enabled when time source is manual.
Daylight Saving Time	
Type	Select the mode of daylight saving time. <ul style="list-style-type: none"> ● Disable: Disable daylight saving time. ● Recurring: Using recurring mode of daylight saving time. ● Non-Recurring: Using non-recurring mode of daylight saving time. ● USA: Using daylight saving time in the United States that starts on the second Sunday of March and ends on the first Sunday of November. ● European: Using daylight saving time in the Europe that starts on the last Sunday in March and ending on the last Sunday in October.
Offset	Specify the adjust offset of daylight saving time.
Recurring From	Specify the starting time of recurring daylight saving time. This field available when selecting "Recurring" mode.
Recurring To	Specify the ending time of recurring daylight saving time. This field available when selecting "Recurring" mode.
Non-recurring From	Specify the starting time of non-recurring daylight saving time. This field available when selecting "Non-Recurring" mode.
Non-recurring To	Specify the ending time of recurring daylight saving time. This field available when selecting "Non-Recurring" mode.
Non-recurring From	Specify the starting time of non-recurring daylight saving time. This field available when selecting "Non-Recurring" mode.
Non recurring To	Specify the ending time of recurring daylight saving time. This field available when selecting "Non-Recurring" mode.


III-3. Port

Use the Port pages to configure settings for switch port related features.

III-3-1. Port Setting

This page shows port current status and allow user to edit port configurations. Select port entry and click **“Edit”** button to edit port configurations.

To display Port Setting web page, click **Port > Port Setting**.

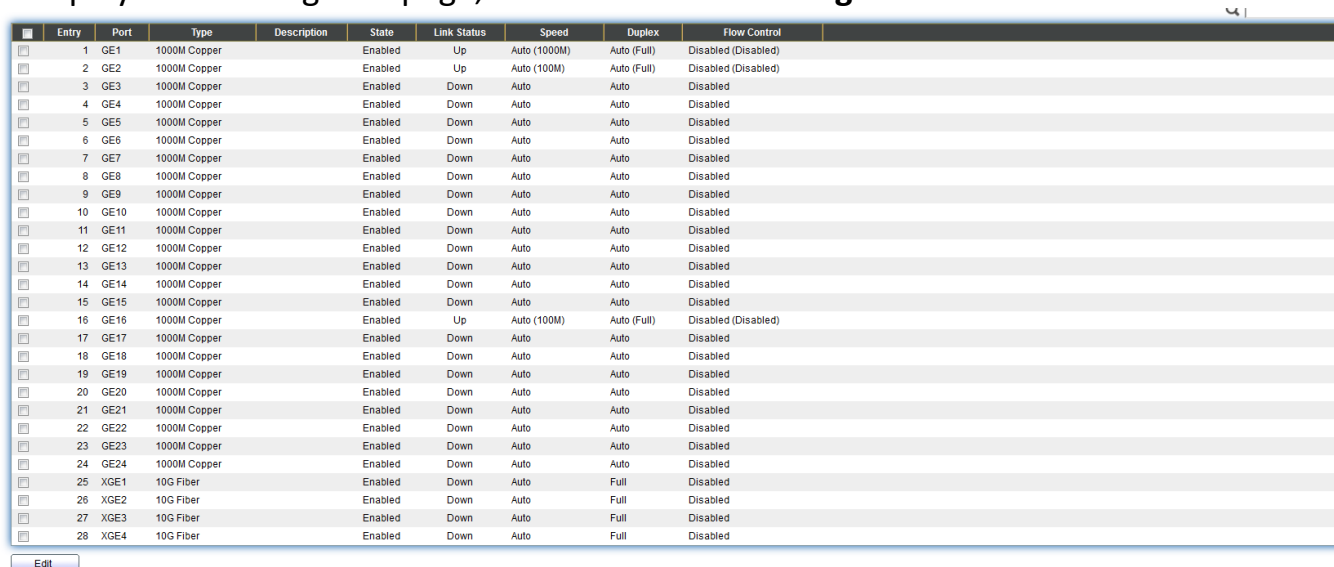

Entry	Port	Type	Description	State	Link Status	Speed	Duplex	Flow Control
<input type="checkbox"/>	1	GE1	1000M Copper	Enabled	Up	Auto (1000M)	Auto (Full)	Disabled (Disabled)
<input type="checkbox"/>	2	GE2	1000M Copper	Enabled	Up	Auto (100M)	Auto (Full)	Disabled (Disabled)
<input type="checkbox"/>	3	GE3	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	4	GE4	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	5	GE5	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	6	GE6	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	7	GE7	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	8	GE8	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	9	GE9	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	10	GE10	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	11	GE11	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	12	GE12	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	13	GE13	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	14	GE14	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	15	GE15	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	16	GE16	1000M Copper	Enabled	Up	Auto (100M)	Auto (Full)	Disabled (Disabled)
<input type="checkbox"/>	17	GE17	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	18	GE18	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	19	GE19	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	20	GE20	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	21	GE21	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	22	GE22	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	23	GE23	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	24	GE24	1000M Copper	Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	25	XGE1	10G Fiber	Enabled	Down	Auto	Full	Disabled
<input type="checkbox"/>	26	XGE2	10G Fiber	Enabled	Down	Auto	Full	Disabled
<input type="checkbox"/>	27	XGE3	10G Fiber	Enabled	Down	Auto	Full	Disabled
<input type="checkbox"/>	28	XGE4	10G Fiber	Enabled	Down	Auto	Full	Disabled

Edit

Figure 22 - Port > Port Setting

Item	Description
Port	Port Name.
Type	Port media type.
Description	Port Description.
State	Port admin state <ul style="list-style-type: none">● Enabled: Enable the port.● Disabled: Disable the port.
Link Status	Current port link status <ul style="list-style-type: none">● Up: Port is link up.● Down: Port is link down.
Speed	Current port speed configuration and link speed status.
Duplex	Current port duplex configuration and link duplex status.
Flow Control	Current port flow control configuration and link flow control status.

Click “**Edit**” button to edit Port Setting menu

Port

GE1

Description

State

☒ Enable

Speed

☒ Auto
 ☐ 10M
 ☐ 100M
 ☐ 1000M
 ☐ Auto - 10M
 ☐ Auto - 100M
 ☐ Auto - 1000M
 ☐ Auto - 10M/100M

Duplex

☒ Auto
 ☐ Full
 ☐ Half

Flow Control

☐ Auto
 ☐ Enable
 ☒ Disable

Apply

Close

Figure 23 - Port > Port Setting > Port Setting

Item	Description
Port	Selected Port list.
Description	Port media type.
State	Port admin state. <ul style="list-style-type: none"> ● Enabled: Enable the port. ● Disabled: Disable the port.
Speed	Port speed capabilities. <ul style="list-style-type: none"> ● Auto: Auto speed with all capabilities. ● Auto-10M: Auto speed with 10M ability only. ● Auto-100M: Auto speed with 100M ability only. ● Auto-1000M: Auto speed with 1000M ability only. ● Auto-10M/100M: Auto speed with 10M/100M abilities. ● 10M: Force speed with 10M ability. ● 100M: Force speed with 100M ability. ● 1000M: Force speed with 1000M ability.
Duplex	Port duplex capabilities. <ul style="list-style-type: none"> ● Auto: Auto duplex with all capabilities. ● Half: Auto speed with 10M and 100M ability only. ● Full: Auto speed with 10M/100M/1000M ability only.
Flow Control	Port flow control.

- Auto: Auto flow control by negotiation.
- Enabled: Enable flow control ability.
- Disabled: Disable flow control ability.

III-3-2. Long Range Mode

This page shows port current status and Enable long range mode will double the cabling distance but reduce the speed to 10Mbps.

To display Long Range Mode web page, click **Port > Long Range Mode Setting**.

Port	State
GE1	Disable ▼
GE2	Disable ▼
GE3	Disable ▼
GE4	Disable ▼
GE5	Disable ▼
GE6	Disable ▼
GE7	Disable ▼
GE8	Disable ▼
GE9	Disable ▼
GE10	Disable ▼
GE11	Disable ▼
GE12	Disable ▼
GE13	Disable ▼
GE14	Disable ▼
GE15	Disable ▼
GE16	Disable ▼
GE17	Disable ▼
GE18	Disable ▼
GE19	Disable ▼
GE20	Disable ▼
GE21	Disable ▼
GE22	Disable ▼
GE23	Disable ▼
GE24	Disable ▼

Apply

Figure 24 - Port > Long Range Mode

III-3-3. Error Disable

To display Error Disabled web page, click **Port > Error Disabled**

Recovery Interval 300 Sec (30 - 86400)

BPDU Guard	<input type="checkbox"/> Enable
UDLD	<input type="checkbox"/> Enable
Self Loop	<input type="checkbox"/> Enable
Broadcast Flood	<input type="checkbox"/> Enable
Unknown Multicast Flood	<input type="checkbox"/> Enable
Unicast Flood	<input type="checkbox"/> Enable
ACL	<input type="checkbox"/> Enable
Port Security	<input type="checkbox"/> Enable
DHCP Rate Limit	<input type="checkbox"/> Enable
ARP Rate Limit	<input type="checkbox"/> Enable

Apply

Figure 25 - Port > Error disable

Item	Description
Recover Interval	Auto recovery after this interval for error disabled port.
BPDU Guard	Enabled to auto shutdown port when BPDU Guard reason occur. This reason caused by STP BPDU Guard mechanism.
UDLD	Enabled to auto shutdown port when UDLD violation occur.
Self Loop	Enabled to auto shutdown port when Self Loop reason occur.
Broadcast Flood	Enabled to auto shutdown port when Broadcast Flood reason occur. This reason caused by broadcast rate exceed broadcast storm control rate.
Unknown Multicast Flood	Enabled to auto shutdown port when Unknown Multicast Flood reason occur. This reason caused by unknown multicast rate exceed unknown multicast storm control rate.
Unicast Flood	Enabled to auto shutdown port when Unicast Flood reason occur. This reason caused by unicast rate exceed unicast storm control rate.
ACL	Enabled to auto shutdown port when ACL shutdown port reason occur. This reason caused packet match the ACL shutdown port action.
Port Security	Enabled to auto shutdown port when Port Security Violation

	reason occur. This reason caused by violation port security rules.
DHCP rate limit	Enabled to auto shutdown port when DHCP rate limit reason occur. This reason caused by DHCP packet rate exceed DHCP rate limit.
ARP rate limit	Enabled to auto shutdown port when ARP rate limit reason occur. This reason caused by DHCP packet rate exceed ARP rate limit.

III-3-4. Link Aggregation

III-3-4-1. Group

This page allow user to configure link aggregation group load balance algorithm and group member.

To view the Group menu, navigate to **Port > Link Aggregation > Group**.

Load Balance Algorithm

☒ MAC Address
☐ IP-MAC Address

Apply

Link Aggregation Table

LAG	Name	Type	Link Status	Active Member	Inactive Member
LAG 1					
LAG 2					
LAG 3					
LAG 4					
LAG 5					
LAG 6					
LAG 7					
LAG 8					

Edit

Figure 26 - Port > Link Aggregation > Group

Item	Description
Load Balance Algorithm	LAG load balance distribution algorithm <ul style="list-style-type: none"> ● src-dst-mac: Based on MAC address. ● src-dst-mac-ip: Based on MAC address and IP address.
LAG	LAG Name.
Name	LAG port description.

Type	<p>The type of the LAG</p> <ul style="list-style-type: none"> ● Static: The group of ports assigned to a static LAG are always active members. ● LACP: The group of ports assigned to dynamic LAG are candidate ports. LACP determines which candidate ports are active member ports.
Link Status	LAG port link status
Active Member	Active member ports of the LAG.
Inactive Member	Inactive member ports of the LAG.

Click “**Edit**” to edit Link Aggregation Group menu.

Edit Link Aggregation Group

LAG

1

Name

Type

☒ Static
☐ LACP

Member

Available Port

GE1
GE2
GE3
GE4
GE5
GE6
GE7
GE8

>
<

Selected Port

Apply

Close

Figure 27 - Port > Link Aggregation > Group > Edit Link Aggregation Group

Item	Description
LAG	Selected LAG group ID.
Name	LAG port description.
Type	<p>The type of the LAG</p> <ul style="list-style-type: none"> ● Static: The group of ports assigned to a static LAG are always active members. ● LACP: The group of ports assigned to dynamic LAG are candidate ports. LACP determines which candidate ports are active member ports.
Member	Select available port to be LAG group member port.

III-3-4-2. Port Setting

This page shows LAG port current status and allow user to edit LAG port configurations. Select LAG entry and click “**Edit**” button to edit LAG port configurations.

To display LAG Port Setting web page, click **Port > Link Aggregation > Port Setting**.

Port Setting Table

<input type="checkbox"/>	LAG	Type	Description	State	Link Status	Speed	Duplex	Flow Control
<input type="checkbox"/>	LAG 1			Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	LAG 2			Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	LAG 3			Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	LAG 4			Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	LAG 5			Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	LAG 6			Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	LAG 7			Enabled	Down	Auto	Auto	Disabled
<input type="checkbox"/>	LAG 8			Enabled	Down	Auto	Auto	Disabled

Edit

Figure 28 - Port > Link Aggregation > Port Setting

Item	Description
LAG	LAG Port Name.
Type	LAG Port media type.
Description	LAG Port description.
State	LAG Port admin state ● Enabled: Enable the port. ● Disabled: Disable the port.
Link Status	Current LAG port link status ● Up: Port is link up. ● Down: Port is link down.
Speed	Current LAG port speed configuration and link speed status.
Duplex	Current LAG port duplex configuration and link duplex status.
Flow Control	Current LAG port flow control configuration and link flow control status.

Click “**Edit**” to view Edit Port Setting menu.

Port

LAG1

Description

State

☒ Enable

Speed

☒ Auto
 ☐ 10M
☐ Auto - 10M
 ☐ 100M
☐ Auto - 100M
 ☐ 1000M
☐ Auto - 1000M
☐ Auto - 10M/100M

Flow Control

☐ Auto
☐ Enable
☒ Disable

Apply

Close

Figure 29 - Port > Link Aggregation > Port Setting > Edit Port Setting

Item	Description
Port	Selected Port list.
Description	Port description.
State	Port admin state ● Enabled: Enable the port. ● Disabled: Disable the port.
Speed	Port speed capabilities ● Auto: Auto speed with all capabilities. ● Auto-10M: Auto speed with 10M ability only. ● Auto-100M: Auto speed with 100M ability only. ● Auto-1000M: Auto speed with 1000M ability only. ● Auto-10M/100M: Auto speed with 10M/100M abilities. ● 10M: Force speed with 10M ability. ● 100M: Force speed with 100M ability. ● 1000M: Force speed with 1000M ability.
Flow Control	Port flow control ● Auto: Auto flow control by negotiation. ● Enabled: Enable flow control ability. ● Disabled: Disable flow control ability.

III-3-4-3. LACP

This page allow user to configure LACP global and port configurations. Select ports and click **"Edit"** button to edit port configuration.

To display the LACP Setting web page , click **Port > Link Aggregation > LACP**.




Entry	Port	Port Priority	Timeout
1	GE1	1	Long
2	GE2	1	Long
3	GE3	1	Long
4	GE4	1	Long
5	GE5	1	Long
6	GE6	1	Long
7	GE7	1	Long
8	GE8	1	Long
9	GE9	1	Long
10	GE10	1	Long
11	GE11	1	Long
12	GE12	1	Long
13	GE13	1	Long
14	GE14	1	Long
15	GE15	1	Long
16	GE16	1	Long
17	GE17	1	Long
18	GE18	1	Long
19	GE19	1	Long
20	GE20	1	Long
21	GE21	1	Long
22	GE22	1	Long
23	GE23	1	Long
24	GE24	1	Long
25	XGE1	1	Long
26	XGE2	1	Long
27	XGE3	1	Long
28	XGE4	1	Long

Edit

Figure 30 - Port > Link Aggregation > LACP

Item	Description
System Priority	Configure the system priority of LACP. This decides the system priority field in LACP PDU.
Port	Port Name.
Port Priority	LACP priority value of the port.
Timeout	The periodic transmissions type of LACP PDUs. <ul style="list-style-type: none">● Long: Transmit LACP PDU with slow periodic (30s).● Short: Transmit LACPP DU with fast periodic (1s).

Click **"Edit"** button to view Edit LACP Port Setting menu.

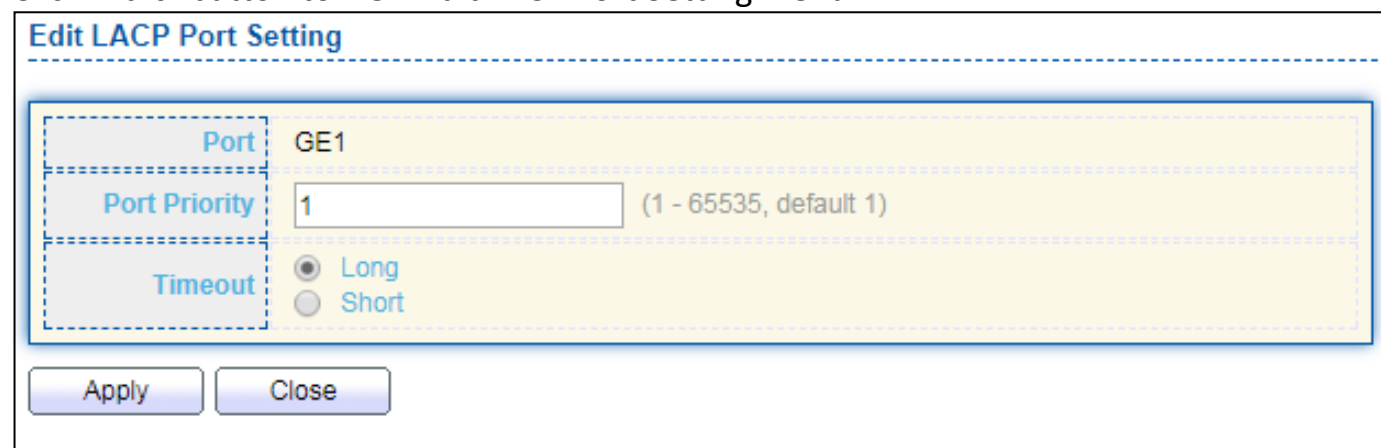

Edit LACP Port Setting

Port	GE1
Port Priority	1 (1 - 65535, default 1)
Timeout	<input checked="" type="radio"/> Long <input type="radio"/> Short

Apply Close

Figure 31 - Port > Link Aggregation > LACP > Edit LACP Port Setting

Item	Description
Port	Selected port list.
Port Priority	Enter the LACP priority value of the port
Timeout	<p>The periodic transmissions type of LACP PDUs.</p> <ul style="list-style-type: none"> ● Long: Transmit LACP PDU with slow periodic (30s). ● Short: Transmit LACPP DU with fast periodic (1s).

III-3-4-4. EEE

This page allow user to configure Energy Efficient Ethernet settings.

To display the EEE web page, click **Port > EEE**.



Entry	Port	State	Operational Status
<input type="checkbox"/>	1 GE1	Enabled	Disabled
<input type="checkbox"/>	2 GE2	Enabled	Disabled
<input type="checkbox"/>	3 GE3	Enabled	Disabled
<input type="checkbox"/>	4 GE4	Enabled	Disabled
<input type="checkbox"/>	5 GE5	Enabled	Disabled
<input type="checkbox"/>	6 GE6	Enabled	Disabled
<input type="checkbox"/>	7 GE7	Enabled	Disabled
<input type="checkbox"/>	8 GE8	Enabled	Disabled
<input type="checkbox"/>	9 GE9	Enabled	Disabled
<input type="checkbox"/>	10 GE10	Enabled	Disabled
<input type="checkbox"/>	11 GE11	Enabled	Disabled
<input type="checkbox"/>	12 GE12	Enabled	Disabled
<input type="checkbox"/>	13 GE13	Enabled	Disabled
<input type="checkbox"/>	14 GE14	Enabled	Disabled
<input type="checkbox"/>	15 GE15	Enabled	Disabled
<input type="checkbox"/>	16 GE16	Enabled	Disabled
<input type="checkbox"/>	17 GE17	Enabled	Disabled
<input type="checkbox"/>	18 GE18	Enabled	Disabled
<input type="checkbox"/>	19 GE19	Enabled	Disabled
<input type="checkbox"/>	20 GE20	Enabled	Disabled
<input type="checkbox"/>	21 GE21	Enabled	Disabled
<input type="checkbox"/>	22 GE22	Enabled	Disabled
<input type="checkbox"/>	23 GE23	Enabled	Disabled
<input type="checkbox"/>	24 GE24	Enabled	Disabled

Figure 32 - Port > EEE

Item	Description
Port	Port Name.
State	<p>Port EEE admin state</p> <ul style="list-style-type: none"> ● Enabled: EEE is enabled. ● Disabled: EEE is disabled.
Operational Status	<p>Port EEE operational status</p> <ul style="list-style-type: none"> ● Enabled: EEE is operating. ● Disabled: EEE is no operating.

Click **“Edit”** to edit the EEE menu.

Figure 33 - Port > EEE > Edit EEE Setting

Item	Description
Port	Port Name
State	Port EEE admin state <ul style="list-style-type: none"> ● Enabled: EEE is enabled. ● Disabled: EEE is disabled.

III-3-5. Jumbo Frame

This page allow user to configure switch jumbo frame size.

To display Jumbo Frame web page, click **Port > Jumbo Frame**.

Figure 34 - Port > Jumbo Frame

Item	Description
Jumbo Frame	Enable or disable jumbo frame. When jumbo frame is enabled, switch max frame size is allowed to configure. When jumbo frame is disabled, default frame size 1522 will be used.

III-4. PoE

Port security can set port isolation and specific behavior.

III-4-1. Global Setting

To display the Global web page, click **PoE > Global Setting**.

Nominal Power

400 W

Consuming Power

0 W

Remaining Power

400 W

Schedule Status

Disable ▼

Apply

PoE Schedule Table

Q

<input type="checkbox"/>	Index	Name	Port List	Schedule Status
<input type="checkbox"/>	1	Index_01		Disable
<input type="checkbox"/>	2	Index_02		Disable
<input type="checkbox"/>	3	Index_03		Disable
<input type="checkbox"/>	4	Index_04		Disable
<input type="checkbox"/>	5	Index_05		Disable
<input type="checkbox"/>	6	Index_06		Disable
<input type="checkbox"/>	7	Index_07		Disable
<input type="checkbox"/>	8	Index_08		Disable
<input type="checkbox"/>	9	Index_09		Disable
<input type="checkbox"/>	10	Index_10		Disable
<input type="checkbox"/>	11	Index_11		Disable
<input type="checkbox"/>	12	Index_12		Disable
<input type="checkbox"/>	13	Index_13		Disable
<input type="checkbox"/>	14	Index_14		Disable
<input type="checkbox"/>	15	Index_15		Disable
<input type="checkbox"/>	16	Index_16		Disable
<input type="checkbox"/>	17	Index_17		Disable
<input type="checkbox"/>	18	Index_18		Disable
<input type="checkbox"/>	19	Index_19		Disable
<input type="checkbox"/>	20	Index_20		Disable
<input type="checkbox"/>	21	Index_21		Disable
<input type="checkbox"/>	22	Index_22		Disable
<input type="checkbox"/>	23	Index_23		Disable
<input type="checkbox"/>	24	Index_24		Disable

Edit

Figure 35 - PoE > Global Setting

Item	Description
Nominal Power	Maximum supply power.
Consuming Power	Current consumed power.
Remaining Power	Remaining available power.
Schedule Status	Schedule status global switch.
Name	PoE Schedule Name.
Port List	The ports provide power in designated schedule index.
Schedule Status	The current schedule status.

Click “**Edit**” to view PoE Schedule List menu.

PoE Schedule Edit

Index
Schedule Status
Name
Date
Port List

1
☐ Enable
Index_01

☒ Mon
☒ Tue
☒ Wed
☒ Thu
☒ Fri
☒ Sat
☒ Sun

From 00:00 to 23:30

2 4 6 8 10 12 14 16 18 20 22 24

1 3 5 7 9 11 13 15 17 19 21 23

☒ Enable
☐ Disable

☐ Port No Select
☒ Port Select

Apply
Close

Figure 36 - PoE > Priority Setting > Edit PoE Schedule Edit

Item	Description
Index	The serial number of schedule list.
Schedule Status	Schedule Status <ul style="list-style-type: none"> ● Checked: Schedule status is enabled. ● Unchecked: Schedule status is disabled.
Name	Enter the PoE schedule name.
Date	Select a valid time for this schedule.
Port List	Select the port provide power.

III-4-2. PoE On/Off

To display the PoE Status web page, click **PoE > Power On/Off**.

2	4	6	8	10	12	14	16	18	20	22	24
1	3	5	7	9	11	13	15	17	19	21	23

Enable
 Disable

Disabled
 Enabled

Power Table

Index	Name	Status	Consuming Power	Maximum Power
1	GE1	Off	0 mW	0 mW
2	GE2	Off	0 mW	0 mW
3	GE3	Off	0 mW	0 mW
4	GE4	Off	0 mW	0 mW
5	GE5	Off	0 mW	0 mW
6	GE6	Off	0 mW	0 mW
7	GE7	Off	0 mW	0 mW
8	GE8	Off	0 mW	0 mW
9	GE9	Off	0 mW	0 mW
10	GE10	Off	0 mW	0 mW
11	GE11	Off	0 mW	0 mW
12	GE12	Off	0 mW	0 mW
13	GE13	Off	0 mW	0 mW
14	GE14	Off	0 mW	0 mW
15	GE15	Off	0 mW	0 mW
16	GE16	Off	0 mW	0 mW
17	GE17	Off	0 mW	0 mW

Figure 40 - PoE > Power On/off

Per Port PoE Status

Checked: Port PoE status is enabled.

Unchecked: Port PoE status is disabled.

III-4-3. PD Alive Check

This page shows the information of each ports, including mode, ping PD IP Address, interval time, retry count, action, reboot time and connect status.

PD Alive Check Table

	Entry	Port	Mode	ping PD IP Address	Interval Time	Retry Count	Action	Reboot Time	Connect Status
<input type="checkbox"/>	1	GE1	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	2	GE2	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	3	GE3	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	4	GE4	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	5	GE5	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	6	GE6	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	7	GE7	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	8	GE8	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	9	GE9	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	10	GE10	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	11	GE11	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	12	GE12	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	13	GE13	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	14	GE14	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	15	GE15	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	16	GE16	Disable	0.0.0.0	30	2	None	90	Off

Edit

To display port setting page, please click the “Edit” button.

PD Alive Check Table

Port List	GE3
Status	<input type="checkbox"/> Enable
ping PD IP Address	<input type="text" value="0.0.0.0"/>
Interval Time	<input type="text" value="30"/> Sec (10 - 300, default 30)
Retry Count	<input type="text" value="2"/> (1 - 5, default 2)
Action	<input type="text" value="None"/>
Reboot Time	<input type="text" value="90"/> Sec (30 - 180, default 90)

Apply

Close

Item	Description
Port list	Display the interface of port entry.
Status	Enable/Disable
Ping PD IP Address	Input IP address of the PD
Internal Time	The default setting about Interval (30 seconds) will make switch detect the PD status by performing ping requests every 30 seconds.
Retry Count	If there is no ping reply from the PD, retry count starts to count from 1. Once retry count is reached to 2 times, the switch will perform the action in which you defined.
Action	The Action including none, PD reboot, Reboot & Alarm and Alarm
Reboot Time	Set the switch reboot time

III-5. VLAN

A virtual local area network, virtual LAN or VLAN, is a group of hosts with a common set of requirements that communicate as if they were attached to the same broadcast domain, regardless of their physical location. A VLAN has the same attributes as a physical local area network (LAN), but it allows for end stations to be grouped together even if they are not located on the same network switch. VLAN membership can be configured through software instead of physically relocating devices or connections.

III-5-1. VLAN

Use the VLAN pages to configure settings of VLAN.

III-5-1-1. Create VLAN

This page allows user to add or delete VLAN ID entries and browser all VLAN entries that add statically or dynamic learned by GVRP. Each VLAN entry has a unique name, user can edit VLAN name in edit page.

To display Create VLAN page, click **VLAN > VLAN > Create VLAN**.

VLAN

Available VLAN

VLAN 2
VLAN 3
VLAN 4
VLAN 5
VLAN 6
VLAN 7
VLAN 8
VLAN 9

Created VLAN

VLAN 1

Apply

VLAN Table

Showing All entries Showing 1 to 1 of 1 entries

<input type="checkbox"/>	VLAN	Name	Type
<input type="checkbox"/>	1	default	Default

Edit Delete

First Previous 1 Next Last

Figure 41 - VLAN > VLAN > Create VLAN

Item	Description
Available VLAN	VLAN has not created yet. Select available VLANs from left box then move to right box to add.
Created VLAN	VLAN had been created. Select created VLANs from right box then move to left box to delete
VLAN	The VLAN ID.
Name	The VLAN Name.
Type	The VLAN Type. <ul style="list-style-type: none"> ● Static: Port base VLAN. ● Dynamic: 802.1q VLAN.

Click **"Edit"** button to view Edit VLAN Name menu.

Edit VLAN Name

Name VLAN0002

Apply Close

Figure 42 - VLAN > VLAN > Create VLAN > Edit VLAN Name

Item	Description
Name	Input VLAN name.

III-5-1-2. VLAN Configuration

This page allow user to configure the membership for each port of selected VLAN.

To display VLAN Configuration page, click **VLAN > VLAN > VLAN Configuration**.

VLAN Configuration Table

VLAN

Q

Entry	Port	Mode	Membership				PVID
1	GE1	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
2	GE2	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
3	GE3	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
4	GE4	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
5	GE5	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
6	GE6	Hybrid	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input type="checkbox"/>
7	GE7	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
8	GE8	Hybrid	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
9	GE9	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
10	GE10	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
11	GE11	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
12	GE12	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
13	GE13	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
14	GE14	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
15	GE15	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
16	GE16	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
17	GE17	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
18	GE18	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
19	GE19	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
20	GE20	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
21	GE21	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
22	GE22	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
23	GE23	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
24	GE24	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>
25	XGE1	Trunk	<input type="radio"/> Excluded	<input type="radio"/> Forbidden	<input type="radio"/> Tagged	<input checked="" type="radio"/> Untagged	<input checked="" type="checkbox"/>

Figure 43 - VLAN > VLAN > VLAN Configuration

Item	Description
VLAN	Select specified VLAN ID to configure VLAN configuration.
Port	Display the interface of port entry.
Mode	Display the interface VLAN mode of port.
Membership	Select the membership for this port of the specified VLAN ID. <ul style="list-style-type: none">● Forbidden: Specify the port is forbidden in the VLAN.● Excluded: Specify the port is excluded in the VLAN.● Tagged: Specify the port is tagged member in the VLAN.● Untagged: Specify the port is untagged member in the VLAN.
PVID	Display if it is PVID of interface.

III-5-1-3. Membership

This page allow user to view membership information for each port and edit membership for specified interface.

To display Membership page, click **VLAN > VLAN > Membership**.

Membership Table



The screenshot shows a web interface for the 'Membership Table'. At the top right, there is a search icon and a search input field. Below this is a table with the following columns: Entry, Port, Mode, Administrative VLAN, and Operational VLAN. The table contains 22 rows of data, each representing a port configuration. The 'Entry' column ranges from 1 to 22. The 'Port' column lists interfaces from GE1 to GE22. The 'Mode' column shows 'Trunk' for ports 1-19 and 'Hybrid' for ports 20-22. The 'Administrative VLAN' and 'Operational VLAN' columns show the configured and active VLANs for each port.

Entry	Port	Mode	Administrative VLAN	Operational VLAN
1	GE1	Trunk	1UP	1UP
2	GE2	Trunk	1UP	1UP
3	GE3	Trunk	1UP	1UP
4	GE4	Trunk	1UP	1UP
5	GE5	Trunk	1UP	1UP
6	GE6	Hybrid	1U, 3UP	1U, 3UP
7	GE7	Trunk	1UP	1UP
8	GE8	Hybrid	1UP	1UP
9	GE9	Trunk	1UP	1UP
10	GE10	Trunk	1UP	1UP
11	GE11	Trunk	1UP	1UP
12	GE12	Trunk	1UP	1UP
13	GE13	Trunk	1UP	1UP
14	GE14	Trunk	1UP	1UP
15	GE15	Trunk	1UP	1UP
16	GE16	Trunk	1UP	1UP
17	GE17	Trunk	1UP	1UP
18	GE18	Trunk	1UP	1UP
19	GE19	Trunk	1UP	1UP
20	GE20	Trunk	1UP	1UP
21	GE21	Trunk	1UP	1UP
22	GE22	Trunk	1UP	1UP

Figure 44 - VLAN > VLAN > Membership

Item	Description
Port	Display the interface of port entry.
Mode	Display the interface VLAN mode of port.
Administrative VLAN	Display the administrative VLAN list of this port.
Operational VLAN	Display the operational VLAN list of this port. Operational VLAN means the VLAN status that really runs in device. It may different to administrative VLAN.

Click "**Edit**" button to view the Edit Port Setting menu

Port

GE1

Mode

Trunk

Membership

2

1UP

>

<

☐ Forbidden

☐ Excluded

☒ Tagged

☐ Untagged

☐ PVID

Apply

Close

Figure 45 - VLAN > VLAN > Membership > Edit Port Setting

Item	Description
Port	Display the interface.
Mode	Display the VLAN mode of interface.
Membership	<p>Select VLANs of left box and select one of following membership then move to right box to add membership. Select VLANs of right box then move to left box to remove membership. Tagging membership may not choose in differ VLAN port mode. Select the time source.</p> <ul style="list-style-type: none"> ● Forbidden: Set VLAN as forbidden VLAN. ● Excluded: This option is always disabled. ● Tagged: Set VLAN as tagged VLAN. ● Untagged: Set VLAN as untagged VLAN. ● PVID: Check this checkbox to select the VLAN ID to be the port-based VLAN ID for this port. PVID may auto select or can't select in differ settings.

III-5-1-4. Port Setting

This page allow user to configure ports VLAN settings such as VLAN port mode, PVID etc...The attributes depend on different VLAN port mode.

To display Port Setting page, click **VLAN > VLAN > Port Setting**.

Port Setting Table

Q

<div><div></div></div>	Entry	Port	Mode	PVID	Accept Frame Type	Ingress Filtering
<div><div></div></div>	1	GE1	Trunk	1	All	Enabled
<div><div></div></div>	2	GE2	Trunk	1	All	Enabled
<div><div></div></div>	3	GE3	Trunk	1	All	Enabled
<div><div></div></div>	4	GE4	Trunk	1	All	Enabled
<div><div></div></div>	5	GE5	Trunk	1	All	Enabled
<div><div></div></div>	6	GE6	Hybrid	3	All	Enabled
<div><div></div></div>	7	GE7	Trunk	1	All	Enabled
<div><div></div></div>	8	GE8	Hybrid	1	All	Enabled
<div><div></div></div>	9	GE9	Trunk	1	All	Enabled
<div><div></div></div>	10	GE10	Trunk	1	All	Enabled
<div><div></div></div>	11	GE11	Trunk	1	All	Enabled
<div><div></div></div>	12	GE12	Trunk	1	All	Enabled
<div><div></div></div>	13	GE13	Trunk	1	All	Enabled
<div><div></div></div>	14	GE14	Trunk	1	All	Enabled
<div><div></div></div>	15	GE15	Trunk	1	All	Enabled
<div><div></div></div>	16	GE16	Trunk	1	All	Enabled
<div><div></div></div>	17	GE17	Trunk	1	All	Enabled
<div><div></div></div>	18	GE18	Trunk	1	All	Enabled
<div><div></div></div>	19	GE19	Trunk	1	All	Enabled
<div><div></div></div>	20	GE20	Trunk	1	All	Enabled
<div><div></div></div>	21	GE21	Trunk	1	All	Enabled
<div><div></div></div>	22	GE22	Trunk	1	All	Enabled

Figure 46 - VLAN > VLAN > Port Setting

Item	Description
Port	Display the interface.
Mode	Display the VLAN mode of interface.
PVID	Display the Port-based VLAN ID of port.
Accept Frame Type	Display accept frame type of port.
Ingress Filtering	Display ingress filter status of port.
Uplink	Display uplink status.
TPID	Display TPID used of interface.

Click **“Edit”** button to Edit Port Setting menu.

Edit Port Setting

Port

Mode

PVID

Accept Frame Type

Ingress Filtering

Uplink

TPID

GE1

☐ Hybrid

☐ Access

☒ Trunk

☐ Tunnel

1 (1 - 4094)

☒ All

☐ Tag Only

☐ Untag Only

☒ Enable

☐ Enable

0x8100

Apply
Close

Figure 47 - VLAN > VLAN > Port Setting > Edit Port Setting

Item	Description
Port	Display selected port to be edited.
Mode	Select the VLAN mode of the interface. <ul style="list-style-type: none"> ● Forbidden: Set VLAN as forbidden VLAN. ● Hybrid: Support all functions as defined in IEEE 802.1Q specification. ● Access: Accepts only untagged frames and join an untagged VLAN. ● Trunk: An untagged member of one VLAN at most, and is a tagged member of zero or more VLANs.
PVID	Specify the port-based VLAN ID (1-4094). It's only available with Hybrid and Trunk mode.
Accepted Type	Specify the acceptable-frame-type of the specified interfaces. It's only available with Hybrid mode.
Ingress Filtering	Set checkbox to enable/disable ingress filtering. It's only available with Hybrid mode.
Uplink	Set checkbox to enable/disable uplink mode. It's only available with trunk mode.
TPID	Select TPID used of interface. It's only available with trunk mode.

III-5-2. Voice VLAN

Use the Voice VLAN pages to configure settings of Voice VLAN.

III-5-2-1. Property

This page allow user to configure global and per interface settings of voice VLAN.

To display Property Web page, click **VLAN> Voice VLAN> Property**.

State ☒ Enable

VLAN:

Cos/802.1p ☒ Enable

Remarking:

Port Aging Time: Min (30 - 65536, default 1440)
Note: Aging Time = Port Aging Time + OUI Aging Time(30 mins)

Apply

Port Setting Table

Entry	Port	State	Mode	QoS Policy
<input type="checkbox"/>	1 GE1	Disabled	Auto	Voice Packet
<input type="checkbox"/>	2 GE2	Disabled	Auto	Voice Packet
<input type="checkbox"/>	3 GE3	Disabled	Auto	Voice Packet
<input type="checkbox"/>	4 GE4	Disabled	Auto	Voice Packet
<input type="checkbox"/>	5 GE5	Disabled	Auto	Voice Packet
<input type="checkbox"/>	6 GE6	Disabled	Auto	Voice Packet
<input type="checkbox"/>	7 GE7	Disabled	Auto	Voice Packet
<input type="checkbox"/>	8 GE8	Disabled	Auto	Voice Packet
<input type="checkbox"/>	9 GE9	Disabled	Auto	Voice Packet
<input type="checkbox"/>	10 GE10	Disabled	Auto	Voice Packet
<input type="checkbox"/>	11 GE11	Disabled	Auto	Voice Packet
<input type="checkbox"/>	12 GE12	Disabled	Auto	Voice Packet
<input type="checkbox"/>	13 GE13	Disabled	Auto	Voice Packet
<input type="checkbox"/>	14 GE14	Disabled	Auto	Voice Packet
<input type="checkbox"/>	15 GE15	Disabled	Auto	Voice Packet
<input type="checkbox"/>	16 GE16	Disabled	Auto	Voice Packet
<input type="checkbox"/>	17 GE17	Disabled	Auto	Voice Packet
<input type="checkbox"/>	18 GE18	Disabled	Auto	Voice Packet
<input type="checkbox"/>	19 LAG1	Disabled	Auto	Voice Packet

Figure 48 - VLAN > Voice VLAN > Property

Item	Description
State	Set checkbox to enable or disable voice VLAN function.
VLAN	Select Voice VLAN ID. Voice VLAN ID cannot be default VLAN.
Cos/802.1p	Select a value of VPT. Qualified packets will use this VPT value as inner priority.
Remarking	Set checkbox to enable or disable 1p remarking. If enabled, qualified packets will be remark by this value.
Aging Time	Input value of aging time. Default is 1440 minutes. A voice VLAN entry will be age out after this time if without any packet pass through.
Port Setting Table	
Port	Display port entry.
State	Display enable/disabled status of interface.
Mode	Display voice VLAN mode.
QoS Policy	Display voice VLAN remark will effect which kind of packet.

Click **“Edit”** button to view Edit Port Setting menu.

Edit Port Setting

Port	GE1
State	<input type="checkbox"/> Enable
Mode	<input checked="" type="radio"/> Auto <input type="radio"/> Manual
QoS Policy	<input checked="" type="radio"/> Voice Packet <input type="radio"/> All

Apply Close

Figure 49 - VLAN > Voice VLAN > Property > Edit Port Setting

Item	Description
Port	Display selected port to be edited.
State	Set checkbox to enable/disabled voice VLAN function of interface.
Mode	Select port voice VLAN mode <ul style="list-style-type: none"> ● Auto: Voice VLAN auto detect packets that match OUI table and add received port into voice VLAN ID tagged member. ● Manual: User need add interface to VLAN ID tagged member manually.
QoS Policy	Select port QoS Policy mode <ul style="list-style-type: none"> ● Voice Packet: QoS attributes are applied to packets with OUIs in the source MAC address. ● All: QoS attributes are applied to packets that are classified to Voice VLAN.

III-5-2-2. Voice OUI

This page allow user to add, edit or delete OUI MAC addresses. Default has 8 pre-defined OUI MAC.

To display the Voice OUI Web page, click **VLAN > Voice VLAN > Voice OUI**.

Voice OUI Table

Showing All entries Showing 1 to 8 of 8 entries

<input type="checkbox"/>	OUI	Description
<input type="checkbox"/>	00:E0:BB	3COM
<input type="checkbox"/>	00:03:6B	Cisco
<input type="checkbox"/>	00:E0:75	Veritel
<input type="checkbox"/>	00:D0:1E	Pingtel
<input type="checkbox"/>	00:01:E3	Siemens
<input type="checkbox"/>	00:60:B9	NEC/Philips
<input type="checkbox"/>	00:0F:E2	H3C
<input type="checkbox"/>	00:09:6E	Avaya

Figure 50 - VLAN > Voice VLAN > Voice OUI

Item	Description
OUI	Display OUI MAC address.
Description	Display description of OUI entry.

Click “Add” or “Edit” button to Add/Edit Voice OUI menu.

Add Voice OUI

: :

Edit Voice OUI

: :

Figure 51 - VLAN > Voice VLAN > Voice OUI > Add/Edit Voice OUI

Item	Description
OUI	Input OUI MAC address. Can't be edited in edit dialog.
Description	Input description of the specified MAC address to the voice VLAN OUI table.

III-5-3. MAC VLAN

Use the MAC VLAN pages to configure settings of MAC VLAN.

III-5-3-1. MAC Group

This page allow user to add or edit groups settings of MAC VLAN.

To display the MAC page , click **VLAN > MAC VLAN > MAC Group**.

MAC Group Table

Showing All entries

Showing 0 to 0 of 0 entries

Q

Group ID

MAC Address

Mask

0 results found.

Add

Edit

Delete

First

Previous

1

Next

Last

Figure 52 - VLAN > MAC VLAN > MAC Group

Item	Description
Group ID	Display group ID of entry.
MAC Address	Display mac address of entry.
Mask	Display mask of mac address for classified packet.

Click **“Add”** button or **"Edit"** button to view Add/Edit MAC menu.

Add MAC Group

Group ID

(1 - 2147483647)

MAC Address

Mask

(9 - 48)

Apply

Close

Edit MAC Group

Group ID	undefined
MAC Address	<input type="text"/>
Mask	<input type="text"/> (9 - 48)

Apply Close

Figure 53 - VLAN > MAC VLAN > MAC Group > Add/Edit MAC

Item	Description
Group ID	Input group ID that is a unique ID of mac group entry. The range from 1 to 2147483647. Only available on Add Dialog.
MAC Address	Input mac address for classifying packets.
Mask	Input mask of mac address.

III-5-3-2. Group Binding

This page allow user to bind MAC VLAN group to each port with VLAN ID.

To display Group Binding page, click **VLAN> MAC VLAN > Group Binding**.

Group Binding Table

Showing All entries Showing 0 to 0 of 0 entries

	Port	Group ID	VLAN
0 results found.			

Add Edit Delete

First Previous 1 Next Last

Figure 54 - VLAN > MAC VLAN > Group Binding

Item	Description
Port	Display port ID that binding with MAC group entry.
Group ID	Display group ID that port binding with.
VLAN	Display VLAN ID that assign to packets which match MAC group.

Click **“Add”** or **“Edit”** button to view the Add/Edit Group Binding menu.

Add Group Binding

Port

Available Port

Selected Port

Group ID

None ▼

VLAN

(1 - 4094)

Note: Only VLAN Hybrid port can be set MAC VLAN

Apply

Close

Edit Group Binding

Port

Group ID

VLAN

(1 - 4094)

Apply

Close

Figure 55 - VLAN > MAC VLAN > Add/Edit Group Binding

Item	Description
Port	Select ports in left box then move to right to binding with MAC group. Or select ports in right box then move to left to unbind with MAC group. Only interface has hybrid VLAN mode can be selected and bound with protocol group. Only available on Add dialog.
Group ID	Select a Group ID to associate with port. Only available on Add dialog.
VLAN	Input VLAN ID that will assign to packets which match MAC group.

III-5-4. Surveillance VLAN

Use the Surveillance VLAN pages to configure settings of Surveillance VLAN.

49

III-5-4-1. Property

State

☒ Enable

VLAN

surveillance vlan

Priority

6

Port Aging Time

1440

Min (30 - 65536, default 1440)

Note: Aging Time = Port Aging Time + OUI Aging Time(30 mins)

Apply

Port Setting Table

q

Entry	Port	State	Mode
<input type="checkbox"/>	1 GE1	Enabled	Auto
<input type="checkbox"/>	2 GE2	Enabled	Auto
<input type="checkbox"/>	3 GE3	Enabled	Auto
<input type="checkbox"/>	4 GE4	Enabled	Auto
<input type="checkbox"/>	5 GE5	Enabled	Auto
<input type="checkbox"/>	6 GE6	Enabled	Auto
<input type="checkbox"/>	7 GE7	Enabled	Auto
<input type="checkbox"/>	8 GE8	Enabled	Auto
<input type="checkbox"/>	9 GE9	Enabled	Auto
<input type="checkbox"/>	10 GE10	Enabled	Auto
<input type="checkbox"/>	11 GE11	Enabled	Auto
<input type="checkbox"/>	12 GE12	Enabled	Auto
<input type="checkbox"/>	13 GE13	Enabled	Auto
<input type="checkbox"/>	14 GE14	Enabled	Auto
<input type="checkbox"/>	15 GE15	Enabled	Auto
<input type="checkbox"/>	16 GE16	Enabled	Auto
<input type="checkbox"/>	17 GE17	Enabled	Auto
<input type="checkbox"/>	18 GE18	Enabled	Auto
<input type="checkbox"/>	19 LAG1	Enabled	Auto
<input type="checkbox"/>	20 LAG2	Enabled	Auto
<input type="checkbox"/>	21 LAG3	Enabled	Auto

Item	Description
State	Enable/Disable
VLAN	Choose none or indicate VLAN
Priority	The 802.1p standard defines seven levels of CoS from 0 through to 7 (highest priority). 802.1p is a sub-set of the 802.1q standard which added additional fields into the header of a standard Ethernet frame allowing it to contain VLAN identifiers as well as the priority values.
Port Aging Time	When aging is configured on an interface that's using port security, all the dynamically learned secure addresses age out when the aging time expire

To display Port Setting page, click the “Edit” button.

Edit Port Setting

Port

GE1

State

☐ Enable

Mode

☒ Auto

☐ Manual

QoS Policy

☒ Video Packet

☐ All

Apply

Close

Item	Description
Port	Display port entry.
State	Display enable/disabled status of interface.
Mode	Display voice VLAN mode.
QoS Policy	Display voice VLAN remark will effect which kind of packet.

III-5-4-2. Surveillance OUI

Surveillance OUI Table

Showing **All** entries Showing 1 to 2 of 2 entries

<input type="checkbox"/>	Description	OUI	OUI Mask
<input type="checkbox"/>	DAHua	74:DA:38:00:00:00	FF-FF-FF-00-00-00
<input type="checkbox"/>	DH IP cam	50:DE:19:00:00:00	FF-FF-FF-00-00-00

First Previous 1 Next Last

Item	Description
OUI	An organizationally unique identifier (OUI) is a 24-bit number that uniquely identifies a vendor, manufacturer, or other organization. ... In MAC addresses, the OUI is combined with a 24-bit number (assigned by the assignee of the OUI) to form the address.
OUI Mask	Specifies a set of MAC addresses using a bit mask to indicate the bits of the MAC addresses that must fit to the specified MAC address attribute.

To change the description of your IP camera, click the “Edit” button.

Edit Surveillance OUI

OUI	74:DA:38:00:00:00
Description	DAHua <input type="text"/>

III-6. MAC Address Table

Use the MAC Address Table pages to show dynamic MAC table and configure settings for static MAC entries.

III-6-1. Dynamic Address

To display the Dynamic Address web page, click **MAC Address Table > Dynamic Address**.

Aging Time: 300 Sec (10 - 630, default 300)

Apply

Dynamic Address Table

Showing All entries Showing 1 to 1 of 1 entries

	VLAN	MAC Address	Port
<input type="checkbox"/>	1	B8:6B:23:6D:C1:14	GE28

First Previous 1 Next Last

Clear Refresh Add Static Address

Figure 56 - MAC Address Table > Dynamic Address

Item	Description
Aging Time	The time in seconds that an entry remains in the MAC address table. Its valid range is from 10 to 630 seconds, and the default value is 300 seconds.

III-6-2. Static Address

To display the Static Address web page, click **MAC Address Table > Static Address**.

Static Address Table

Showing All entries Showing 0 to 0 of 0 entries

	VLAN	MAC Address	Port
0 results found.			

First Previous 1 Next Last


Add Edit Delete

Figure 57 - MAC Address Table > Static Address.

Item	Description
MAC Address	The MAC address to which packets will be statically forwarded.
VLAN	Specify the VLAN to show or clear MAC entries.
Port	Interface or port number.

III-6-3. Filtering Address

To display the Filtering Address web page, click **MAC Address Table > Filtering Address**.

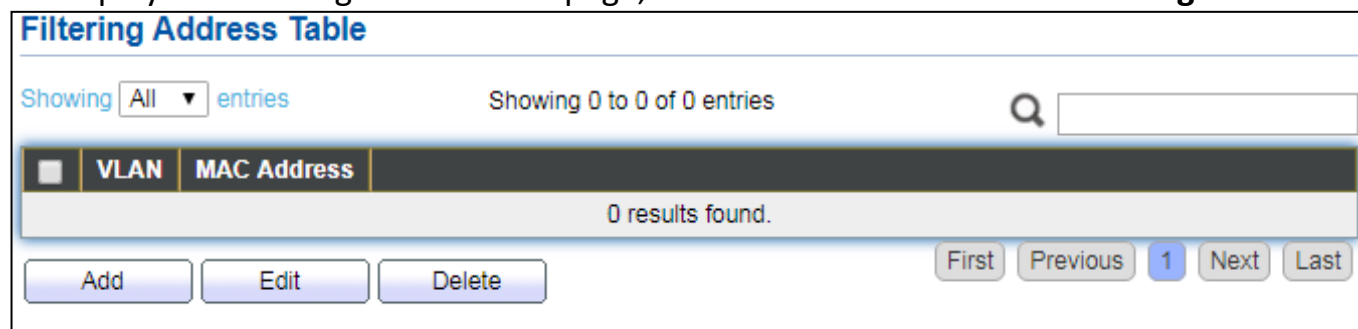

Filtering Address Table

Showing All entries Showing 0 to 0 of 0 entries

Q

VLAN	MAC Address
0 results found.	

Add Edit Delete

First Previous 1 Next Last

Figure 58 - MAC Address Table > Filtering Address.

Item	Description
MAC Address	Specify unicast MAC address in the packets to be dropped.
VLAN	Specify the VLAN to show or clear MAC entries.

III-7. Spanning Tree

The Spanning Tree Protocol (STP) is a network protocol that ensures a loop-free topology for any bridged Ethernet local area network.

III-7-1. Property

To display the Property web page, click **Spanning Tree > Property**.

State	<input type="checkbox"/> Enable	
Operation Mode	<input type="radio"/> STP <input checked="" type="radio"/> RSTP <input type="radio"/> MSTP	
Path Cost	<input checked="" type="radio"/> Long <input type="radio"/> Short	
BPDU Handling	<input type="radio"/> Filtering <input checked="" type="radio"/> Flooding	
Priority	<input type="text" value="32768"/>	(0 - 61440, default 32768)
Hello Time	<input type="text" value="2"/>	Sec (1 - 10, default 2)
Max Age	<input type="text" value="20"/>	Sec (6 - 40, default 20)
Forward Delay	<input type="text" value="15"/>	Sec (4 - 30, default 15)
Tx Hold Count	<input type="text" value="6"/>	(1 - 10, default 6)
Region Name	<input type="text" value="74:DA:38:17:6E:7A"/>	
Revision	<input type="text" value="0"/>	(0 - 65535, default 0)
Max Hop	<input type="text" value="20"/>	(1 - 40, default 20)
Operational Status		
Bridge Identifier	32768-74:DA:38:17:6E:7A	
Designated Root Bridge	0-00:00:00:00:00:00	
Root Port	N/A	
Root Path Cost	0	
Topology Change Count	0	
Last Topology Change	0D/0H/0M/0S	
<input type="button" value="Apply"/>		

Figure 59 - Spanning Tree > Property

Item	Description
State	Enable/disable the STP on the switch.
Operation Mode	Specify the STP operation mode. <ul style="list-style-type: none"> ● STP: Enable the Spanning Tree (STP) operation. ● RSTP: Enable the Rapid Spanning Tree (RSTP) operation. ● MSTP: Enable the Multiple Spanning Tree (MSTP) operation.
Path Cost	Specify the path cost method. <ul style="list-style-type: none"> ● Long: Specifies that the default port path costs are within the range: 1-200,000,000. ● Short: Specifies that the default port path costs are within the

	range: 1-65,535.
BPDU Handling	Specify the BPDU forward method when the STP is disabled. <ul style="list-style-type: none"> ● Filtering: Filter the BPDU when STP is disabled. ● Flooding: Flood the BPDU when STP is disabled.
Priority	Specify the bridge priority. The valid range is from 0 to 61440, and the value should be the multiple of 4096. It ensures the probability that the switch is selected as the root bridge, and the lower value has the higher priority for the switch to be selected as the root bridge of the topology.
Hello Time	Specify the STP hello time in second to broadcast its hello message to other bridges by Designated Ports. Its valid range is from 1 to 10 seconds.
Max Age	Specify the time interval in seconds for a switch to wait the configuration messages, without attempting to redefine its own configuration.
Forward Delay	Specify the STP forward delay time, which is the amount of time that a port remains in the Listening and Learning states before it enters the Forwarding state. Its valid range is from 4 to 10 seconds.
TX Hold Count	Specify the tx-hold-count used to limit the maximum numbers of packets transmission per second. The valid range is from 1 to 10.
Region Name	The MSTP instance name. Its maximum length is 32 characters. The default value is the MAC address of the switch.
Revision	The MSTP revision number. Its valid range is from 0 to 65535.
Max Hop	Specify the number of hops in an MSTP region before the BPDU is discarded. The valid range is 1 to 40.
Operational Status	
Bridge Identifier	Bridge identifier of the switch.
Designated Root Identifier	Bridge identifier of the designated root bridge.
Root Port	Operational root port of the switch.
Root Path Cost	Operational root path cost.
Topology Change Count	Numbers of the topology changes.
Last Topology Change	The last time for the topology change.

III-7-2. Port Setting

To configure and display the STP port settings, click **STP > Port Setting**.

Port Setting Table

Entry	Port	State	Path Cost	Priority	BPDU Filter	BPDU Guard	Operational Edge	Operational Point-to-Point	Port Role	Port State	Designated Bridge	Designated Port ID	Designated Cost
<input type="checkbox"/>	1 GE1	Enabled	20000	128	Disabled	Disabled	Disabled	Enabled	Root	Forwarding	32768-2C:FA:A2:5C:2D:62	128-1	20000
<input type="checkbox"/>	2 GE2	Enabled	200000	128	Disabled	Disabled	Disabled	Enabled	Designated	Forwarding	32768-FC:8F:C4:0D:1A:B5	128-2	200000
<input type="checkbox"/>	3 GE3	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-3	20000
<input type="checkbox"/>	4 GE4	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-4	20000
<input type="checkbox"/>	5 GE5	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-5	20000
<input type="checkbox"/>	6 GE6	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-6	20000
<input type="checkbox"/>	7 GE7	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-7	20000
<input type="checkbox"/>	8 GE8	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-8	20000
<input type="checkbox"/>	9 GE9	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-9	20000
<input type="checkbox"/>	10 GE10	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-10	20000
<input type="checkbox"/>	11 GE11	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-11	20000
<input type="checkbox"/>	12 GE12	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-12	20000
<input type="checkbox"/>	13 GE13	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-13	20000
<input type="checkbox"/>	14 GE14	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-14	20000
<input type="checkbox"/>	15 GE15	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-15	20000
<input type="checkbox"/>	16 GE16	Enabled	200000	128	Disabled	Disabled	Disabled	Enabled	Designated	Forwarding	32768-FC:8F:C4:0D:1A:B5	128-16	200000
<input type="checkbox"/>	17 GE17	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-17	20000
<input type="checkbox"/>	18 GE18	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-18	20000
<input type="checkbox"/>	19 GE19	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-19	20000
<input type="checkbox"/>	20 GE20	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-20	20000
<input type="checkbox"/>	21 GE21	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-21	20000
<input type="checkbox"/>	22 GE22	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-22	20000

Figure 60 - Spanning Tree > Port Setting

Item	Description
Port	Specify the interface ID or the list of interface IDs.
State	The operational state on the specified port.
Path Cost	STP path cost on the specified port.
Priority	STP priority on the specified port.
BPDU Filter	The states of BPDU filter on the specified port.
BPDU Guard	The states of BPDU guard on the specified port.
Operational Edge	The operational edge port status on the specified port.
Operational Point-to-Point	The operational point-to-point status on the specified port.
Port Role	The current port role on the specified port. The possible values are: "Disabled", "Master", "Root", "Designated", "Alternative", and "Backup".
Port State	The current port state on the specified port. The possible values are: "Disabled", "Discarding", "Learning", and "Forwarding".
Designated Bridge	The bridge ID of the designated bridge.
Designated Port ID	The designated port ID on the switch.
Designated Cost	The path cost of the designated port on the switch.
Protocol Migration Check	Restart the Spanning Tree Protocol (STP) migration process (re-negotiate with its neighborhood) on the specific interface.

Click "**Edit**" button to view Edit Port Setting menu.

Edit Port Setting

Port
GE1

State
☒ Enable

Path Cost
0
(0 - 200000000) (0 = Auto)

Priority
128 ▼

Edge Port
☐ Enable

BPDU Filter
☐ Enable

BPDU Guard
☐ Enable

Point-to-Point
☒ Auto
☐ Enable
☐ Disable

Port State
Disabled

Designated Bridge
0-00:00:00:00:00:00

Designated Port ID
128-1

Designated Cost
20000

Operational Edge
False

Operational Point-to-Point
False

Apply

Close

Figure 61 - Spanning Tree > Port Setting > Edit Port Setting

Item	Description
Port	Selected port ID.
State	Enable/Disable the STP on the specified port.
Path Cost	Specify the STP path cost on the specified port.
Priority	Specify the STP path cost on the specified port.
Edge Port	Specify the edge mode. <ul style="list-style-type: none"> ● Enable: Force to true state (as link to a host). ● Disable: Force to false state (as link to a bridge). In the edge mode, the interface would be put into the Forwarding state immediately upon link up. If the edge mode is enabled for the interface and there are BPDUs received on the interface, the loop might be occurred in the short time before the STP state change.
BPDU Filter	The BPDU Filter configuration avoids receiving / transmitting BPDU from the specified ports. <ul style="list-style-type: none"> ● Enable: Enable BPDU filter function.

	<ul style="list-style-type: none"> ● Disable: Disable BPDU filter function.
BPDU Guard	<p>The BPDU Guard configuration to drop the received BPDU directly.</p> <ul style="list-style-type: none"> ● Enable: Enable BPDU guard function. ● Disable: Disable BPDU guard function.
Point-to-Point	<p>Specify the Point-to-Point port configuration:</p> <ul style="list-style-type: none"> ● Auto: The state is depended on the duplex setting of the port ● Enable: Force to true state. ● Disable: Force to false state

III-7-3. MST Instance

To configure MST instance setting, click **STP > MST Instance**.

MST Instance Table								
<div> <input type="text"/> </div>								
	MSTI	Priority	Bridge Identifier	Designated Root Bridge	Root Port	Root Path Cost	Remaining Hop	VLAN
<input type="radio"/>	0	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0	1-4094
<input type="radio"/>	1	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0	
<input type="radio"/>	2	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0	
<input type="radio"/>	3	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0	
<input type="radio"/>	4	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0	
<input type="radio"/>	5	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0	
<input type="radio"/>	6	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0	
<input type="radio"/>	7	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0	
<input type="radio"/>	8	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0	
<input type="radio"/>	9	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0	
<input type="radio"/>	10	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0	
<input type="radio"/>	11	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0	
<input type="radio"/>	12	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0	
<input type="radio"/>	13	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0	
<input type="radio"/>	14	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0	
<input type="radio"/>	15	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0	
<div>Edit</div>								

Figure 62 - Spanning Tree > MST Instance

Item	Description
MSTI	Designated port number.
Priority	The bridge priority on the specified MSTI.
Bridge Identifier	The bridge identifier on the specified MSTI.
Designated Root Bridge	The designated root bridge identifier on the specified MSTI.
Root Port	The designated root port on the specified MSTI.
Root Path Cost	The designated root path cost on the specified MSTI.
Remaining Hop	The configuration of remaining hop on the specified MSTI.
VLAN	The VLAN configuration on the specified MSTI.

Click "**Edit**" button to view Edit MST Instance menu.

Edit MST Instance Setting

MSTI

1

VLAN

Available VLAN

1

2

3

4

5

6

7

8

Selected VLAN

>

<

Priority

32768

(0 - 61440, default 32768)

Bridge Identifier

32768-74:DA:38:17:6E:7A

Designated Root Bridge

0-00:00:00:00:00:00

Root Port

Root Path Cost

0

Remaining Hop

0

Apply

Close

Figure 63 - Spanning Tree > MST Instance > Edit MST Instance Setting

Item	Description
VLAN	Select the VLAN list for the specified MSTI.
Priority	Specify the bridge priority on the specified MSTI. The valid range is from 0 to 61440, and the value must be the multiple of 4096. It ensures the probability that the switch is selected as the root bridge, and the lower values has the higher priority for the switch to be selected as the root bridge of the STP topology.

III-7-4. MST Port Setting

To configure and display MST port setting, click **STP > MST Port Setting**.

Entry	Port	Path Cost	Priority	Port Role	Port State	Mode	Type	Designated Bridge	Designated Port ID	Designated Cost	Remaining Hop
<input type="checkbox"/>	1 GE1	20000	128	Root	Forwarding	RSTP	Boundary	32768-2CFA-A25C-2D62	128-1	20000	20
<input type="checkbox"/>	2 GE2	200000	128	Designated	Forwarding	RSTP	Boundary	32768-FC8F-C40C-1A-B5	128-2	200000	20
<input type="checkbox"/>	3 GE3	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-3	20000	20
<input type="checkbox"/>	4 GE4	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-4	20000	20
<input type="checkbox"/>	5 GE5	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-5	20000	20
<input type="checkbox"/>	6 GE6	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-6	20000	20
<input type="checkbox"/>	7 GE7	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-7	20000	20
<input type="checkbox"/>	8 GE8	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-8	20000	20
<input type="checkbox"/>	9 GE9	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-9	20000	20
<input type="checkbox"/>	10 GE10	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-10	20000	20
<input type="checkbox"/>	11 GE11	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-11	20000	20
<input type="checkbox"/>	12 GE12	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-12	20000	20
<input type="checkbox"/>	13 GE13	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-13	20000	20
<input type="checkbox"/>	14 GE14	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-14	20000	20
<input type="checkbox"/>	15 GE15	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-15	20000	20
<input type="checkbox"/>	16 GE16	200000	128	Designated	Forwarding	RSTP	Boundary	32768-FC8F-C40C-1A-B5	128-16	200000	20
<input type="checkbox"/>	17 GE17	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-17	20000	20
<input type="checkbox"/>	18 GE18	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-18	20000	20
<input type="checkbox"/>	19 GE19	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-19	20000	20
<input type="checkbox"/>	20 GE20	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-20	20000	20
<input type="checkbox"/>	21 GE21	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-21	20000	20
<input type="checkbox"/>	22 GE22	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-22	20000	20
<input type="checkbox"/>	23 GE23	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-23	20000	20
<input type="checkbox"/>	24 GE24	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-24	20000	20
<input type="checkbox"/>	25 XGE1	2000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-25	2000	20
<input type="checkbox"/>	26 XGE2	2000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-26	2000	20
<input type="checkbox"/>	27 XGE3	2000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-27	2000	20
<input type="checkbox"/>	28 XGE4	2000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-28	2000	20
<input type="checkbox"/>	29 LAG1	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-29	20000	20
<input type="checkbox"/>	30 LAG2	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-30	20000	20
<input type="checkbox"/>	31 LAG3	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-31	20000	20
<input type="checkbox"/>	32 LAG4	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-32	20000	20
<input type="checkbox"/>	33 LAG5	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-33	20000	20
<input type="checkbox"/>	34 LAG6	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-34	20000	20
<input type="checkbox"/>	35 LAG7	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-35	20000	20
<input type="checkbox"/>	36 LAG8	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-36	20000	20

Figure 64 - Spanning Tree > MST Port Setting

Item	Description
MSTI	Specify the port setting on the specified MSTI.
Port	Specify the interface ID or the list of interface IDs.
Path Cost	The port path cost on the specified MSTI.
Priority	The port priority on the specified MSTI.
Port Role	The current port role on the specified port. The possible values are: “Disabled”, “Master”, “Root”, “Designated”, “Alternative”, and “Backup”.
Port State	The current port state on the specified port. The possible values are: “Disabled”, “Discarding”, “Learning”, and “Forwarding”.
Mode	The operational STP mode on the specified port.
Type	The possible value for the port type are: <ul style="list-style-type: none"> ● Boundary: The port attaching an MST Bridge to a LAN that is not in the same region. ● Internal: The port attaching an MST Bridge to a LAN that is not in the same region.
Designated Bridge	The bridge ID of the designated bridge.
Designated Port ID	The designated port ID on the switch.
Designated Cost	The path cost of the designated port on the switch.

Remaining Hop	The remaining hops count on the specified port.
---------------	---

Click "**Edit**" button to view Edit MST Port Setting menu.

Edit MST Port Setting


MSTI	0
Port	GE1
Path Cost	<input type="text" value="0"/> (0 - 200000000) (0 = Auto)
Priority	<input type="text" value="128"/> ▼
Port Role	Disabled
Port State	Disabled
Mode	RSTP
Type	Boundary
Designated Bridge	0-00:00:00:00:00:00
Designated Port ID	128-1
Designated Cost	20000
Remaining Hop	20

Figure 65 - Spanning Tree > MST Port Setting > Edit MST Port Setting

Item	Description
Path Cost	Specify the STP port path cost on the specified MSTI.
Priority	Specify the STP port priority on the specified MSTI.

III-7-5. Statistics

To display the STP statistics, click **STP > Statistics**.

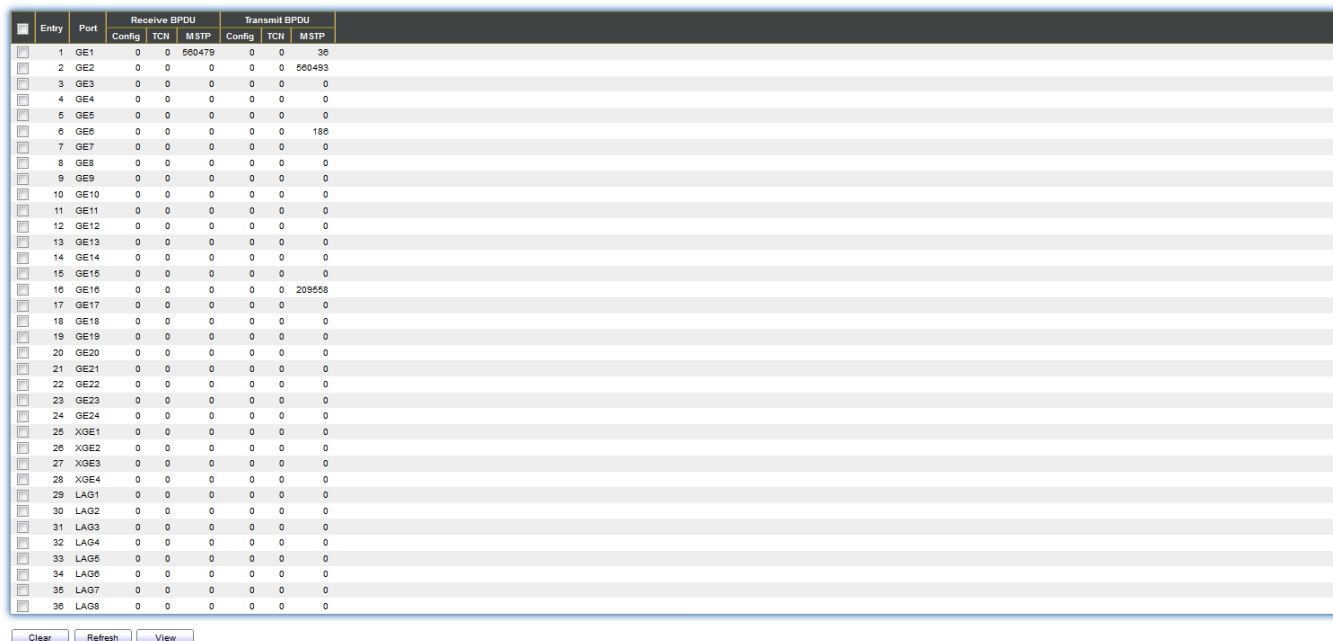

Entry	Port	Receive BPDU			Transmit BPDU		
		Config	TCN	MSTP	Config	TCN	MSTP
<input type="checkbox"/>	1 GE1	0	0	560479	0	0	36
<input type="checkbox"/>	2 GE2	0	0	0	0	0	560493
<input type="checkbox"/>	3 GE3	0	0	0	0	0	0
<input type="checkbox"/>	4 GE4	0	0	0	0	0	0
<input type="checkbox"/>	5 GE5	0	0	0	0	0	0
<input type="checkbox"/>	6 GE6	0	0	0	0	0	186
<input type="checkbox"/>	7 GE7	0	0	0	0	0	0
<input type="checkbox"/>	8 GE8	0	0	0	0	0	0
<input type="checkbox"/>	9 GE9	0	0	0	0	0	0
<input type="checkbox"/>	10 GE10	0	0	0	0	0	0
<input type="checkbox"/>	11 GE11	0	0	0	0	0	0
<input type="checkbox"/>	12 GE12	0	0	0	0	0	0
<input type="checkbox"/>	13 GE13	0	0	0	0	0	0
<input type="checkbox"/>	14 GE14	0	0	0	0	0	0
<input type="checkbox"/>	15 GE15	0	0	0	0	0	0
<input type="checkbox"/>	16 GE16	0	0	0	0	0	209558
<input type="checkbox"/>	17 GE17	0	0	0	0	0	0
<input type="checkbox"/>	18 GE18	0	0	0	0	0	0
<input type="checkbox"/>	19 GE19	0	0	0	0	0	0
<input type="checkbox"/>	20 GE20	0	0	0	0	0	0
<input type="checkbox"/>	21 GE21	0	0	0	0	0	0
<input type="checkbox"/>	22 GE22	0	0	0	0	0	0
<input type="checkbox"/>	23 GE23	0	0	0	0	0	0
<input type="checkbox"/>	24 GE24	0	0	0	0	0	0
<input type="checkbox"/>	25 XGE1	0	0	0	0	0	0
<input type="checkbox"/>	26 XGE2	0	0	0	0	0	0
<input type="checkbox"/>	27 XGE3	0	0	0	0	0	0
<input type="checkbox"/>	28 XGE4	0	0	0	0	0	0
<input type="checkbox"/>	29 LAG1	0	0	0	0	0	0
<input type="checkbox"/>	30 LAG2	0	0	0	0	0	0
<input type="checkbox"/>	31 LAG3	0	0	0	0	0	0
<input type="checkbox"/>	32 LAG4	0	0	0	0	0	0
<input type="checkbox"/>	33 LAG5	0	0	0	0	0	0
<input type="checkbox"/>	34 LAG6	0	0	0	0	0	0
<input type="checkbox"/>	35 LAG7	0	0	0	0	0	0
<input type="checkbox"/>	36 LAG8	0	0	0	0	0	0

Clear Refresh View

Figure 66 - Spanning Tree > Statistics

Item	Description
Refresh Rate	The option to refresh the statistics automatically.
Receive BPDU (Config)	The counts of the received CONFIG BPDU.
Receive BPDU (TCN)	The counts of the received TCN BPDU.
Receive BPDU (MSTP)	The counts of the received MSTP BPDU.
Transmit BPDU (Config)	The counts of the transmitted CONFIG BPDU.
Transmit BPDU (TCN)	The counts of the transmitted TCN BPDU.
Transmit BPDU (MSTP)	The counts of the transmitted MSTP BPDU.
Clear	Clear the statistics for the selected interfaces
View	View the statistics for the interface.

Click "**View**" button to view the STP Port Statistic menu.

STP Port Statistic

Port

GE1

Refresh Rate

☒ None
☐ 5 sec
☐ 10 sec
☐ 30 sec

Receive BPDU

Config	0
TCN	0
MSTP	0

Transmit BPDU

Config	0
TCN	0
MSTP	0

Refresh

Clear

Close

Figure 67 - Spanning Tree > Statistics > STP Port Statistic

Item	Description
Refresh Rate	The option to refresh the statistics automatically.
Clear	Clear the statistics for the selected interfaces.

III-8. Discovery

Use this section to configure LLDP.

III-8-1. LLDP

LLDP is a one-way protocol; there are no request/response sequences. Information is advertised by stations implementing the transmit function, and is received and processed by stations implementing the receive function. The LLDP category contains LLDP and LLDP-MED pages.

III-8-1-1. Property

To display LLDP Property Setting web page, click **Discovery > LLDP > Property**.

LLDP

State ☒ Enable

LLDP Handling

☐ Filtering

☐ Bridging

☒ Flooding

TLV Advertise Interval Sec (5 - 32767, default 30)

Hold Multiplier (2 - 10, default 4)

Reinitializing Delay Sec (1 - 10, default 2)

Transmit Delay Sec (1 - 8191, default 2)

LLDP-MED

Fast Start Repeat Count (1 - 10, default 3)

Apply

Figure 68 - Discovery > LLDP > Property

Item	Description
State	Enable/ Disable LLDP protocol on this switch.
LLDP Handling	<p>Select LLDP PDU handling action to be filtered, bridging or flooded when LLDP is globally disabled.</p> <ul style="list-style-type: none"> ● Filtering: Deletes the packet. ● Bridging: (VLAN-aware flooding) Forwards the packet to all VLAN members. ● Flooding: Forwards the packet to all ports
TLV Advertise Interval	Select the interval at which frames are transmitted. The default is 30 seconds, and the valid range is 5–32767 seconds.
Holdtime Multiplier	Select the multiplier on the transmit interval to assign to TTL (range 2–10, default = 4).
Reinitialization Delay	Select the delay before a re-initialization (range 1–10 seconds, default = 2).
Transmit Delay	Select the delay after an LLDP frame is sent (range 1–8191 seconds, default = 3).
Fast Start Repeat Count	Select fast start repeat count when port link up (range 1–10, default = 3).

III-8-1-2. Port Setting

To display LLDP Port Setting, click **Discovery > LLDP > Port Setting**.

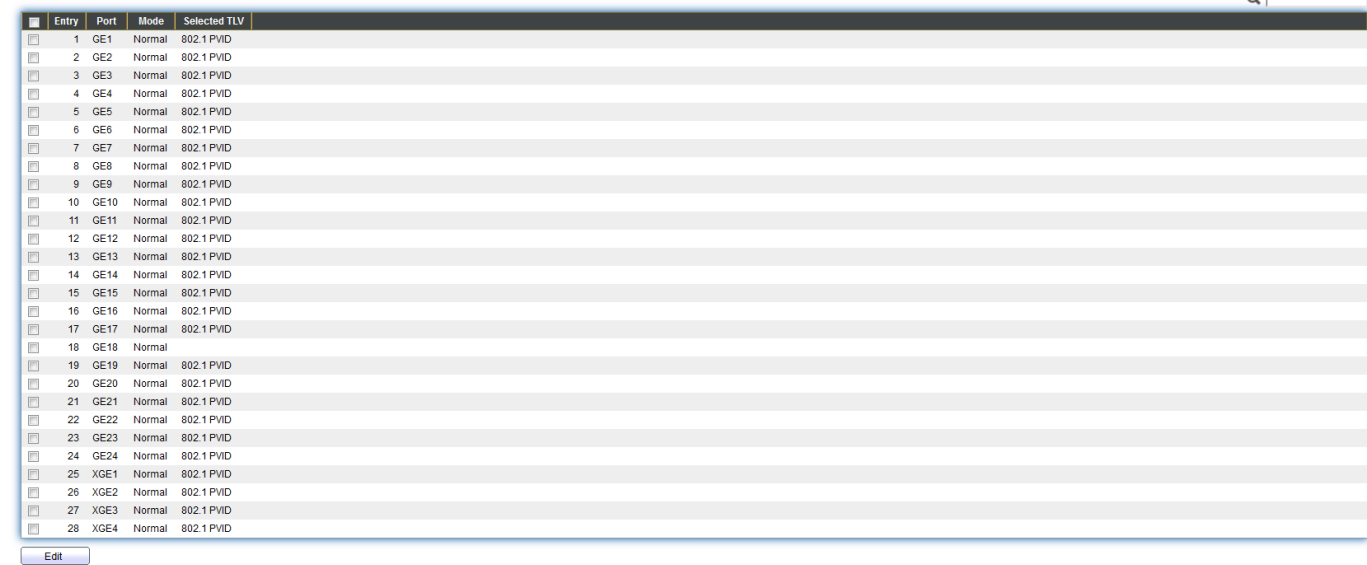


Figure 69 - Discovery > LLDP > Port Setting

Item	Description
Port	Port Name.
Mode	The port LLDP mode.
Selectde TLV	The Selected LLDP TLV.

Click "**Edit**" button to view Edit Port Setting menu.

Port

GE1

Mode

☐ Transmit
☐ Receive
☒ Normal
☐ Disable

Optional TLV

Available TLV

Port Description
System Name
System Description
System Capabilities
802.3 MAC-PHY

Selected TLV
802.1 PVID

802.1 VLAN Name

Available VLAN

VLAN 1
VLAN 2

Selected VLAN

Apply


Close

Figure 70 - Discovery > LLDP > Port Setting > Edit Port Setting

Item	Description
Port	Select specified port or all ports to configure LLDP state.
Mode	Select the transmission state of LLDP port interface. <ul style="list-style-type: none"> ● Disable: Disable the transmission of LLDP PDUs. ● RX Only: Receive LLDP PDUs only. ● TX Only: Transmit LLDP PDUs only. ● TX And RX: Transmit and receive LLDP PDUs both.
Optional TLV	Select the LLDP optional TLVs to be carried (multiple selection is allowed). <ul style="list-style-type: none"> ● System Name ● Port Description ● System Description ● System Capability ● 802.3 MAC-PHY ● 802.3 Link Aggregation ● 802.3 Maximum Frame Size ● Management Address ● 802.1 PVID.
802.1 VLAN Name	Select the VLAN Name ID to be carried (multiple selection is allowed).

III-8-1-3. Packet View

To display LLDP Overloading, click **Discovery > LLDP > Packet View**.

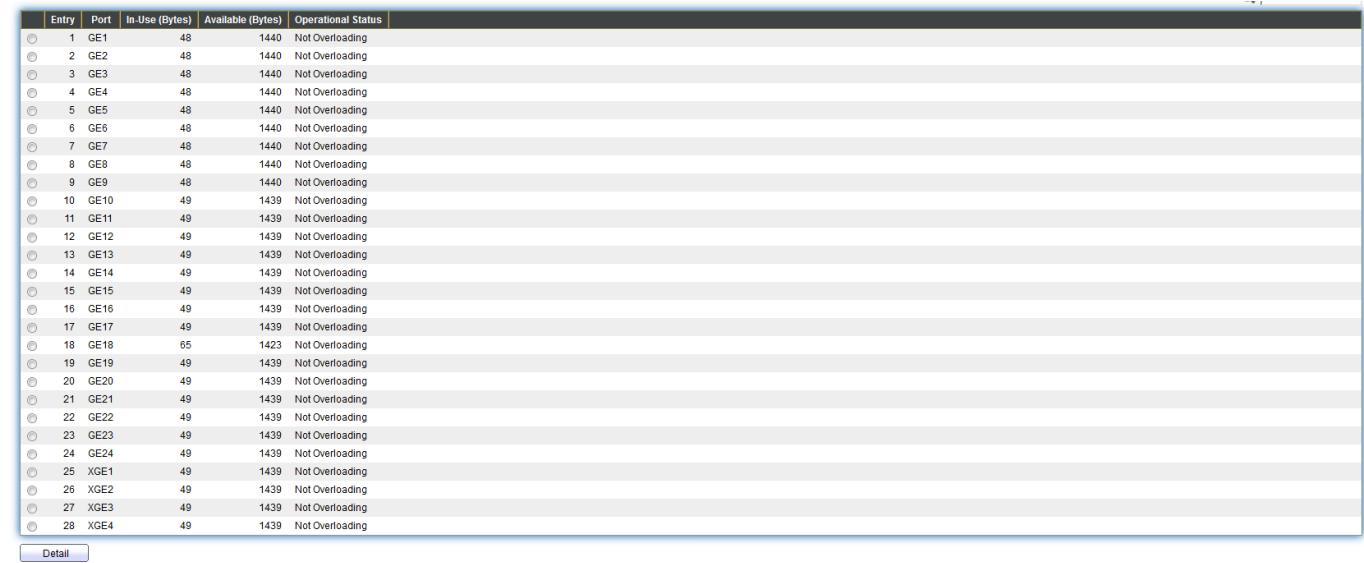

Entry	Port	In-Use (Bytes)	Available (Bytes)	Operational Status
1	GE1	48	1440	Not Overloading
2	GE2	48	1440	Not Overloading
3	GE3	48	1440	Not Overloading
4	GE4	48	1440	Not Overloading
5	GE5	48	1440	Not Overloading
6	GE6	48	1440	Not Overloading
7	GE7	48	1440	Not Overloading
8	GE8	48	1440	Not Overloading
9	GE9	48	1440	Not Overloading
10	GE10	49	1439	Not Overloading
11	GE11	49	1439	Not Overloading
12	GE12	49	1439	Not Overloading
13	GE13	49	1439	Not Overloading
14	GE14	49	1439	Not Overloading
15	GE15	49	1439	Not Overloading
16	GE16	49	1439	Not Overloading
17	GE17	49	1439	Not Overloading
18	GE18	65	1423	Not Overloading
19	GE19	49	1439	Not Overloading
20	GE20	49	1439	Not Overloading
21	GE21	49	1439	Not Overloading
22	GE22	49	1439	Not Overloading
23	GE23	49	1439	Not Overloading
24	GE24	49	1439	Not Overloading
25	XGE1	49	1439	Not Overloading
26	XGE2	49	1439	Not Overloading
27	XGE3	49	1439	Not Overloading
28	XGE4	49	1439	Not Overloading

Detail

Figure 71 - Discovery > LLDP > Packet View

Item	Description
Port	Port Name.
In-Use (Bytes)	Total number of bytes of LLDP information in each packet.
Available (Bytes)	Total number of available bytes left for additional LLDP information in each packet.
Operational Status	Overloading or not.

Click "**Detail**" button to view Packet View Detail menu.

Packet View Detail

Port GE1

Mandatory TLVs

Size (Bytes) 21

Operational Status Transmitted

MED Capabilities

Size (Bytes) 9

Operational Status Transmitted

MED Location

Size (Bytes) 0

Operational Status Transmitted

MED Network Policy

Size (Bytes) 10

Operational Status Transmitted

MED Inventory

Size (Bytes) 0

Operational Status Transmitted

MED Extended Power via MDI

Size (Bytes) 0

Operational Status Transmitted

802.3 TLVs

Size (Bytes) 0

Operational Status Transmitted

Optional TLVs	
Size (Bytes)	0
Operational Status	Transmitted
802.1 TLVs	
Size (Bytes)	8
Operational Status	Transmitted
Total	
In-Use (Bytes)	48
Available (Bytes)	1440

Figure 72 - Discovery > LLDP > Packet View > Packet View Detail

Item	Description
Port	Port Name.
Mandatory TLVs	Total mandatory TLV byte size. Status is sent or overloading.
MED Capabilities	Total MED Capabilities TLV byte size. Status is sent or overloading.
MED Location	Total MED Location byte size. Status is sent or overloading.
MED Network Policy	Total MED Network Policy byte size. Status is sent or overloading.
MED Inventory	Total MED Inventory byte size. Status is sent or overloading.
MED Extended Power via MDI	Total MED Extended Power via MDI byte size. Status is sent or overloading.
802.3 TLVs	Total 802.3 TLVs byte size. Status is sent or overloading.
Optional TLVs	Total Optional TLV byte size. Status is sent or overloading.
802.1 TLVs	Total 802.1 TLVs byte size. Status is sent or overloading.
Total	Total number of bytes of LLDP information in each packet.

III-8-1-4. Local Information

Use the LLDP Local Information to view LLDP local device information.

To display LLDP Local Device, click **Discovery > LLDP > Local Information**.

Device Summary

Chassis ID Subtype	MAC address
Chassis ID	FC:8F:C4:0D:1D:EC
System Name	Switch
System Description	GS-5216PLC
Supported Capabilities	Bridge
Enabled Capabilities	Bridge
Port ID Subtype	Local

Entry	Port	LLDP State
1	GE1	Normal
2	GE2	Normal
3	GE3	Normal
4	GE4	Normal
5	GE5	Normal
6	GE6	Normal
7	GE7	Normal
8	GE8	Normal
9	GE9	Normal
10	GE10	Normal
11	GE11	Normal
12	GE12	Normal
13	GE13	Normal
14	GE14	Normal
15	GE15	Normal
16	GE16	Normal
17	GE17	Normal
18	GE18	Normal
19	GE19	Normal
20	GE20	Normal
21	GE21	Normal
22	GE22	Normal
23	GE23	Normal
24	GE24	Normal
25	XGE1	Normal
26	XGE2	Normal
27	XGE3	Normal
28	XGE4	Normal

Detail

Figure 73 - Discovery > LLDP > Local Information

Item	Description
Chassis ID Subtype	Type of chassis ID, such as the MAC address.
Chassis ID	Identifier of chassis. Where the chassis ID subtype is a MAC address, the MAC address of the switch is displayed.
System Name	Name of switch.
System Description	Description of the switch.
Capabilities Supported	Primary functions of the device, such as Bridge, WLAN AP, or Router.
Capabilities Enabled	Primary enabled functions of the device.
Port ID Subtype	Type of the port identifier that is shown.

LLDP Status	LLDP Tx and Rx abilities.
LLDP Med Status	LLDP MED enable state.

Click “**Detail**” button on the page to view detail information of the selected port.

Local Information Detail

Chassis ID Subtype	MAC address
Chassis ID	74:DA:38:17:6E:7A
System Name	Switch
System Description	24-Port Gigabit PoE+ Smart Managed Switch with 4 RJ45/SFP Combo Ports
Supported Capabilities	Bridge
Enabled Capabilities	Bridge
Port ID	GE1
Port ID Subtype	Local
Port Description	

Management Address Table

Address Subtype	Address	Interface Subtype	Interface Number
0 results found.			

MAC/PHY Detail

Auto-Negotiation Supported	N/A
Auto-Negotiation Enabled	N/A
Auto-Negotiation Advertised Capabilities	N/A
Operational MAU Type	N/A

802.3 Detail

802.3 Maximum Frame Size	N/A
--------------------------	-----

802.3 Link Aggregation

Aggregation Capability	N/A
Aggregation Status	N/A
Aggregation Port ID	N/A

MED Detail	
Capabilities Supported	Capabilities , Network policy
Current Capabilities	Capabilities , Network policy
Device Class	Network Connectivity
PoE Device Type	N/A
PoE Power Source	N/A
PoE Power Priority	N/A
PoE Power Value	N/A
Hardware Revision	N/A
Firmware Revision	N/A
Software Revision	N/A
Serial Number	N/A
Manufacturer Name	N/A
Model Name	N/A
Asset ID	N/A

Location Information	
Civic	N/A
Coordinate	N/A
ECS ELIN	N/A

Network Policy Table				
Application Type	VLAN	VLAN Type	Priority	DSCP
0 results found.				

Close

Figure 74 - Discovery > LLDP > Local Information > Detail

III-8-1-5. Neighbor

Use the LLDP Neighbor page to view LLDP neighbors information.

To display LLDP Remote Device, click **Discovery > LLDP > Neighbor**.

Neighbor Table							
Showing All entries		Showing 0 to 0 of 0 entries			<input type="text"/>		
<input type="checkbox"/>	Local Port	Chassis ID Subtype	Chassis ID	Port ID Subtype	Port ID	System Name	Time to Live
0 results found.							
Clear		Refresh		Detail		First Previous 1 Next Last	

Figure 75 - Discovery > LLDP > Neighbor

Item	Description
Local Port	Number of the local port to which the neighbor is connected.
Chassis ID Subtype	Type of chassis ID (for example, MAC address).
Port ID Subtype	Type of the port identifier that is shown.
Port ID	Identifier of port.
System Name	Published name of the switch.
Time to Live	Time interval in seconds after which the information for this neighbor is deleted.

Click “**detail**” to view selected neighbor detail information

Neighbor Information Detail

Local Port

Basic Detail

Chassis ID Subtype Unknown

Chassis ID

Port ID Subtype Unknown

Port ID

Port Description

System Name

System Description

Supported Capabilities N/A

Enabled Capabilities N/A

Management Address Table

Address Subtype	Address	Interface Subtype	Interface Number
-----------------	---------	-------------------	------------------

0 results found.

MAC/PHY Detail

Auto-Negotiation Supported N/A

Auto-Negotiation Enabled N/A

Auto-Negotiation Advertised Capabilities N/A

Operational MAU Type N/A

802.3 Power via MDI

MDI Power Support Port Class N/A

PSE MDI Power Support N/A

PSE MDI Power State N/A

PSE Power Pair Control Ability N/A

PSE Power Pair N/A

PSE Power Class N/A

Power Type N/A

Power Source N/A

Power Priority N/A

PD Request Power Value N/A

PSE Allocated Power Value N/A

802.3 Detail

802.3 Maximum Frame Size N/A

802.3 Link Aggregation	
Aggregation Capability	N/A
Aggregation Status	N/A
Aggregation Port ID	N/A

802.1 VLAN and Protocol	
PVID	
VLAN Name	N/A

MED Detail	
Capabilities Supported	N/A
Current Capabilities	N/A
Device Class	N/A
PoE Device Type	N/A
PoE Power Source	N/A
PoE Power Priority	N/A
PoE Power Value	N/A
Hardware Revision	N/A
Firmware Revision	N/A
Software Revision	N/A
Serial Number	N/A
Manufacturer Name	N/A
Model Name	N/A
Asset ID	N/A

Location Information	
Civic	N/A
Coordinate	N/A
ECS ELIN	N/A

Network Policy Table				
Application Type	VLAN	VLAN Type	Priority	DSCP
0 results found.				

Close

Figure 76 LLDP Neighbor Detail Page

III-8-1-6. Statistics

The Link Layer Discovery Protocol (LLDP) Statistics page displays summary and per-port information for LLDP frames transmitted and received on the switch.

To display LLDP Statistics status, click **Discovery > LLDP > Statistics**.

Global Statistics

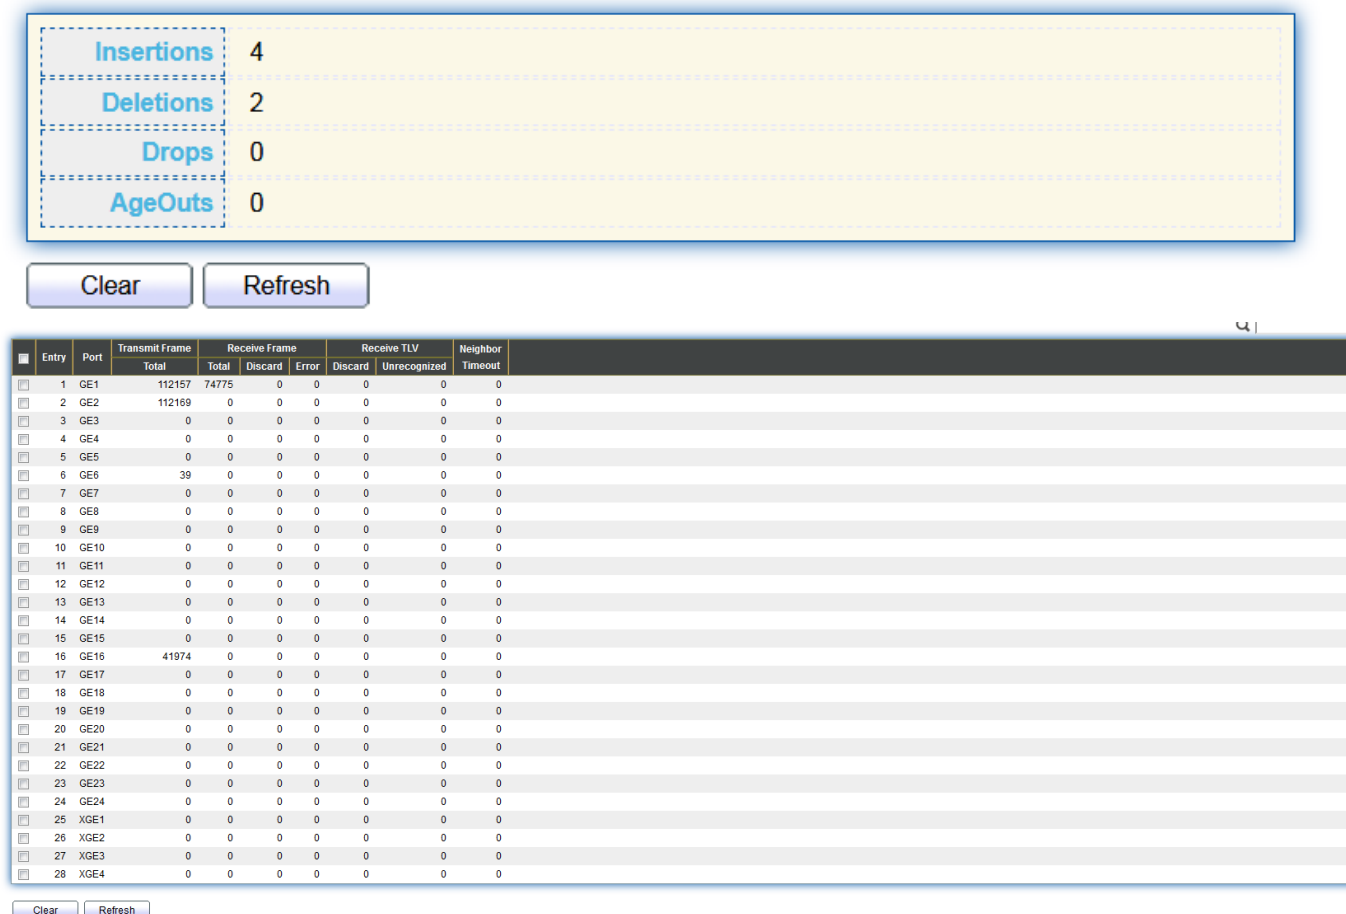


Figure 77 - Discovery > LLDP > Statistics

Item	Description
Insertions	The number of times the complete set of information advertised by a particular MAC Service Access Point (MSAP) has been inserted into tables associated with the remote systems.
Deletions	The number of times the complete set of information advertised by MSAP has been deleted from tables associated with the remote systems.
Drops	The number of times the complete set of information advertised by MSAP could not be entered into tables associated with the remote systems because of insufficient resources.
Age Outs	The number of times the complete set of information advertised

	by MSAP has been deleted from tables associated with the remote systems because the information timeliness interval has expired.
Statistics Table	
Port	Interface or port number.
Transmit Frame Total	Number of LLDP frames transmitted on the corresponding port.
Receive Frame Total	Number of LLDP frames received by this LLDP agent on the corresponding port, while the LLDP agent is enabled.
Receive Frame Discard	Number of LLDP frames discarded for any reason by the LLDP agent on the corresponding port.
Receive Frame Error	Number of invalid LLDP frames received by the LLDP agent on the corresponding port, while the LLDP agent is enabled.
Receive TLV Discard	Number of TLVs of LLDP frames discarded for any reason by the LLDP agent on the corresponding port.
Receive TLV Unrecognized	Number of TLVs of LLDP frames that are unrecognized while the LLDP agent is enabled.
Neighbor Timeout	Number of age out LLDP frames.

III-9. Multicast

Use this section to configure Multicast.

III-9-1. General

Use the General pages to configure settings of IGMP and MLD common function.

III-9-1-1. Property

To display multicast general property Setting web page, click **Multicast> General> Property**.

The screenshot shows a configuration interface for Multicast settings. It is divided into two main sections: 'Unknown Multicast Action' and 'Multicast Forward Method'.

Unknown Multicast Action: This section has three radio button options: 'Flood' (selected), 'Drop', and 'Forward to Router Port'.

Multicast Forward Method: This section is divided into two sub-sections, one for IPv4 and one for IPv6. Each sub-section has two radio button options: 'DMAC-VID' (selected) and 'DIP-VID'.

At the bottom left, there is an 'Apply' button.

Figure 78 - Multicast > General > Property

Item	Description
Unknown Multicast Action	Set the unknown multicast action <ul style="list-style-type: none"> ● Flood: flood the unknown multicast data. ● Drop: drop the unknown multicast data. ● Router port: forward the unknown multicast data to router port.
IPv4	Set the ipv4 multicast forward method. <ul style="list-style-type: none"> ● MAC-VID: forward method dmac+vid. ● DIP-VID: forward method dip+vid.
IPv6	Set the ipv6 multicast forward method. <ul style="list-style-type: none"> ● MAC-VID: forward method dmac+vid. ● DIP-VID: forward method dip+vid(dip is ipv6 low 32 bit).

III-9-1-2. Group Address

This page allow user to browse all multicast groups that dynamic learned or statically added.

To display Multicast General Group web page, click **Multicast> General > Group Address**.

The screenshot shows the 'Group Address Table' web page. At the top, there is a dropdown menu for 'IP Version' set to 'IPv4'. Below it, there is a 'Showing' dropdown set to 'All' and a search bar. The table has columns: 'VLAN', 'Group Address', 'Member', 'Type', and 'Life (Sec)'. Below the table, it says '0 results found.' At the bottom, there are buttons for 'Add', 'Edit', 'Delete', and 'Refresh'. On the right side, there are pagination buttons: 'First', 'Previous', '1' (selected), 'Next', and 'Last'.

Figure 79 - Multicast > General > Group Address

Item	Description
IP Version	IP Version <ul style="list-style-type: none"> ● IPv4: ipv4 multicast group ● IPv6: ipv6 multicast group
VLAN	The VLAN ID of group.
Group Address	The group IP address.
Member	The member ports of group.
Type	The type of group. Static or Dynamic.
Life(Sec)	The life time of this dynamic group.

Click “Add” or “Edit” button to view Add or Edit Group Address menu.

Add Group Address

VLAN

1 ▼

IP Version

IPv4 ▼

Group Address

Member

Available Port

GE1
GE2
GE3
GE4
GE5
GE6
GE7
GE8

>
<

Selected Port

Apply

Close

Edit Group Address

VLAN

1

Group Address

225.0.0.1

Member

Available Port

GE2
GE3
GE4
GE5
GE6
GE7
GE8
GE9

>
<

Selected Port

GE1

Apply

Close

Figure 80 - Multicast > General > Group Address > Add/Edit Group Address

Item	Description
VLAN	The VLAN ID of group.
IP Version	IP Version <ul style="list-style-type: none"> ● IPv4: ipv4 multicast group ● IPv6: ipv6 multicast group
Group Address	The group IP address.
Member	The member ports of group. <ul style="list-style-type: none"> ● Available Port: Optional port member ● Selected Port: Selected port member

III-9-1-3. Router Port

This page allow user to browse all router port information. The static and forbidden router port can set by user.

To display multicast router port table web page, click **Multicast > General > Router Port**.

Figure 81 - Multicast > General > Router Port

Item	Description
IP Version	IP Version <ul style="list-style-type: none"> ● IPv4: ipv4 multicast router ● IPv6: ipv6 multicast router
VLAN	The VLAN ID router entry.
Member	Router Port member (include static and learned port)
Static Port	Static router port member.
Forbidden Port	Forbidden router port member.
Life (Sec)	The expiry time of the router entry.

Click "**Add**" or "**Edit**" button to view Add/Edit Router Port menu.

Add Router Port

VLAN

Available VLAN

1

Selected VLAN

IP Version

IPv4 ▼

Type

☒ Static
 ☐ Forbidden

Port

Available Port

GE1
GE2
GE3
GE4
GE5
GE6
GE7
GE8

Selected Port

Apply

Close

Edit Router Port

VLAN

1

IP Version

IPv4

Type

☒ Static
 ☐ Forbidden

Port

Available Port

GE2
GE3
GE4
GE5
GE6
GE7
GE8
GE9

Selected Port

GE1

Apply

Close

Figure 82 - Multicast > General > Router Port > Add/Edit Router Port

Item	Description
VLAN	The VLAN ID for router entry <ul style="list-style-type: none"> ● Available VLAN: Optional VLAN member ● Selected VLAN: Selected VLAN member.
IP Version	IP Version <ul style="list-style-type: none"> ● IPv4: ipv4 multicast router ● IPv6: ipv6 multicast router
Type	The router port type <ul style="list-style-type: none"> ● Static: static router port ● Forbidden: forbidden router port, can't learn dynamic router port member
Port	The member ports of router entry. <ul style="list-style-type: none"> ● Available Port: Optional router port member ● Selected Port: Selected router port member

III-9-2. IGMP Snooping

Use the IGMP Snooping pages to configure settings of IGMP snooping function.

III-9-2-1. Property

This page allow user to configure global settings of IGMP snooping and configure specific VLAN settings of IGMP Snooping.

To display IGMP Snooping global setting and VLAN Setting web page, click **Multicast > IGMP Snooping > Property**.

State ☒ Enable

Version ☒ IGMPv2 ☐ IGMPv3

Report Suppression ☒ Enable

Apply

VLAN Setting Table

VLAN	Operational Status	Router Port Auto Learn	Query Robustness	Query Interval	Query Max Response Interval	Last Member Query Counter	Last Member Query Interval	Immediate Leave
1	Disabled	Enabled	2	125	10	2	1	Disabled

Edit

Figure 83 - Multicast > IGMP Snooping > Property

Item	Description
State	Set the enabling status of IGMP Snooping functionality Enable: If Checked Enable IGMP Snooping, else is Disabled IGMP Snooping.
Version	Set the igmp snooping version <ul style="list-style-type: none"> ● IGMPv2: Only support process igmp v2 packet. ● IGMPv3: Support v3 basic and v2.
Report Suppression	Set the enabling status of IGMP v2 report suppression Enable: If Checked Enable IGMP Snooping v2 report suppression, else Disable the report suppression function.
VLAN	The IGMP entry VLAN ID.
Operation Status	The enable status of IGMP snooping VLAN functionality.
Router Port Auto Learn	The enabling status of IGMP snooping router port auto learning.
Query Robustness	The Query Robustness allows tuning for the expected packet loss on a subnet.
Query Interval	The interval of querier to send general query.
Query Max Response Interval	In Membership Query Messages, it specifies the maximum allowed time before sending a responding report in units of 1/10 second.
Last Member Query count	The count that Querier-switch sends Group-Specific Queries when it receives a Leave Group message for a group.
Last Member Query Interval	The interval that Querier-switch sends Group-Specific Queries when it receives a Leave Group message for a group.
Immediate leave	The immediate leave status of the group will immediate leave when receive IGMP Leave message.

Click "**Edit**" button to Edit VLAN Setting menu.

Edit VLAN Setting

VLAN	1
State	<input type="checkbox"/> Enable
Router Port Auto Learn	<input checked="" type="checkbox"/> Enable
Immediate leave	<input type="checkbox"/> Enable

Query Robustness	2 (1 - 7, default 2)
Query Interval	125 Sec (30 - 18000, default 125)
Query Max Response Interval	10 Sec (5 - 20, default 10)

Last Member Query Counter	2 (1 - 7, default 2)
Last Member Query Interval	1 Sec (1 - 25, default 1)

Operational Status

Status	Disabled
Query Robustness	2
Query Interval	125 (Sec)
Query Max Response Interval	10 (Sec)
Last Member Query Counter	2
Last Member Query Interval	1 (Sec)

Apply
Close

Figure 84 - Multicast > IGMP Snooping > Property >Edit VLAN Setting

Item	Description
VLAN	The selected VLAN List.
State	Set the enabling status of IGMP Snooping VLAN functionality Enable: If Checked Enable IGMP Snooping VLAN, else is Disabled IGMP Snooping VLAN.
Router Port Auto Learn	Set the enabling status of IGMP Snooping router port learning Enable: If checked Enable learning router port by query and PIM, DVRMP, else Disable the learning router port.
Immediate leave	Immediate Leave the group when receive IGMP Leave message. Enable: If checked Enable immediate leave, else disable immediate leave.
Query	The Admin Query Robustness allows tuning for the expected

Robustness	packet loss on a subnet.
Query Interval	The Admin interval of querier to send general query.
Query Max Response Interval	The Admin query max response interval , In Membership Query Messages, it specifies the maximum allowed time before sending a responding report in units of 1/10 second.
Last Member Query Counter	The Admin last member query count that Querier-switch sends Group-Specific Queries when it receives a Leave Group message for a group.
Last Member Query Interval	The Admin last member query interval that Querier-switch sends Group-Specific Queries when it receives a Leave Group message for a group.
Operational Status	
Status	Operational IGMP snooping status , must both IGMP snooping global and IGMP snooping enable the status will be enable.
Query Robustness	Operational Query Robustness.
Query Interval	Operational Query Interval.
Query Max Response Interval	Operational Query Max Response Interval
Last Member Query Counter	Operational Last Member Query Count.
Last Member Query Interval	Operational Last Member Query Interval.

III-9-2-2. Querier

This page allow user to configure querier settings on specific VLAN of IGMP Snooping.

To display IGMP Snooping Querier Setting web page, click **Multicast > IGMP Snooping > Querier**.

Querier Table

Q

<input type="checkbox"/>	VLAN	State	Operational Status	Version	Querier Address
<input type="checkbox"/>	1	Disabled	Disabled		

Figure 85 - Multicast > IGMP Snooping > Querier

Item	Description
VLAN	IGMP Snooping querier entry VLAN ID.
State	The IGMP Snooping querier Admin State.
Operational Status	The IGMP Snooping querier operational status.
Querier Version	The IGMP Snooping querier operational version.
Querier IP	The operational Querier IP address on the VLAN.

Click "**Edit**" button to view Edit Querier menu.

Edit Querier

VLAN	1
State	<input type="checkbox"/> Enable
Version	<input checked="" type="radio"/> IGMPv2 <input type="radio"/> IGMPv3

Figure 86 - Multicast > IGMP Snooping > Querier > Edit Querier

Item	Description
VLAN	The Selected Edit IGMP Snooping querier VLAN List.
State	Set the enabling status of IGMP Querier Election on the chose VLANs Enabled: if checked Enable IGMP Querier else Disable IGMP Querier.
Version	Set the query version of IGMP Querier Election on the chose VLANs <ul style="list-style-type: none"> ● IGMPv2: Querier version 2. ● IGMPv3: Querier version 3. (IGMP Snooping version should be IGMPv3)

III-9-2-3. Statistics

This page allow user to clear igmp snooping statics.

To display IGMP Snooping Statistics, click **Multicast > IGMP Snooping > Statistics**.

Receive Packet		
Total	91	
Valid	8	
InValid	83	
Other	0	
Leave	0	
Report	0	
General Query	0	
Special Group Query	0	
Source-specific Group Query	0	
Transmit Packet		
Leave	0	
Report	0	
General Query	0	
Special Group Query	0	
Source-specific Group Query	0	
<div>Clear</div> <div>Refresh</div>		

Figure 87 - Multicast > IGMP Snooping > Statistics

Item	Description
Receive Packet	
Total	Total RX igmp packet, include ipv4 multicast data to CPU.
Valid	The valid igmp snooping process packet.
InValid	The invalid igmp snooping process packet.
Other	The ICMP protocol is not 2, and is not ipv4 multicast data packet.
Leave	IGMP leave packet.
Report	IGMP join and report packet.
General Query	IGMP General Query packet.
Special Group Query	IGMP Special Group General Query packet.

Source-specific Group Query	IGMP Special Source and Group General Query packet.
Transmit Packet	
Leave	IGMP leave packet
Report	IGMP join and report packet
General Query	IGMP general query packet include querier transmit general query packet.
Special Group Query	IGMP special group query packet include querier transmit special group query packet.
Source-specific Group Query	IGMP Special Source and Group General Query packet.

III-9-3. MVR

Use the MVR pages to configure settings of MVR function.

III-9-3-1. Property

To display multicast MVR property Setting web page, click **Multicast > MVR > Property**.

The screenshot displays the 'Multicast > MVR > Property' configuration page. It features a table-like layout for configuration options:

- State:** A checkbox labeled 'Enable' is currently unchecked.
- VLAN:** A dropdown menu is set to '1'.
- Mode:** Two radio buttons are present; 'Compatible' is selected, and 'Dynamic' is unselected.
- Group Start:** A text input field contains '0.0.0.0'.
- Group Count:** A text input field contains '1', with a range '(1 - 128)' indicated to the right.
- Query Time:** A text input field contains '1', with a unit 'Sec (1 - 10)' indicated to the right.

Below the configuration fields is a section titled 'Operational Group' with a dark header. It contains two rows:

- Maximum:** The value is '128'.
- Current:** The value is '0'.

At the bottom left of the page is an 'Apply' button.

Figure 88 - Multicast > MVR > Property

Item	Description
State	Enable: if checked enable the MVR state, else disable the MVR state.
VLAN	The MVR VLAN ID.
Mode	Set the MVR mode <ul style="list-style-type: none"> ● Compatible: compatible mode. ● Dynamic: learn group member on source port.
Group Start	MVR group range start.
Group Count	MVR group continue count.
Query Time	MVR query time when receive MVR leave MVR group packet.
Maximum	The max number of MVR group database.
Current	The learned MVR group current time

III-9-3-2. Port Setting

This page allow user to configure port role and port immediate leave.

To display MVR port role and immediate leave state setting web page, click **Multicast > MVR > Port Setting**.

Entry	Port	Role	Immediate Leave
1	GE1	None	Disabled
2	GE2	None	Disabled
3	GE3	None	Disabled
4	GE4	None	Disabled
5	GE5	None	Disabled
6	GE6	None	Disabled
7	GE7	None	Disabled
8	GE8	None	Disabled
9	GE9	None	Disabled
10	GE10	None	Disabled
11	GE11	None	Disabled
12	GE12	None	Disabled
13	GE13	None	Disabled
14	GE14	None	Disabled
15	GE15	None	Disabled
16	GE16	None	Disabled
17	GE17	None	Disabled
18	GE18	None	Disabled
19	GE19	None	Disabled
20	GE20	None	Disabled
21	GE21	None	Disabled
22	GE22	None	Disabled
23	GE23	None	Disabled
24	GE24	None	Disabled
25	XGE1	None	Disabled
26	XGE2	None	Disabled
27	XGE3	None	Disabled
28	XGE4	None	Disabled
29	LAG1	None	Disabled
30	LAG2	None	Disabled
31	LAG3	None	Disabled
32	LAG4	None	Disabled
33	LAG5	None	Disabled
34	LAG6	None	Disabled
35	LAG7	None	Disabled
36	LAG8	None	Disabled

Figure 89 - Multicast > MVR > Port Setting

Item	Description
Entry	Entry of number.
Port	Port Name.
Role	Port Role for MVR, the type is None/Receiver/Source.
Immediate Leave	Status of immediate leave.

Click **"Edit"** button to view Edit Port Setting menu.

Figure 90 - Multicast > MVR > Port Setting > Edit Port Setting

Item	Description
Port	Display the selected port list.
Role	MVR port role <ul style="list-style-type: none"> ● None: port role is none. ● Receiver: port role is receiver. ● Source: port role is source.
Immediate Leave	MVR Port immediate leave Enable: if checked is enable immediate leave, else disable immediate leave.

III-9-3-3. Group Address

This page allow user to browse all multicast MVR groups that dynamic learned or statically added.

To display Multicast MVR Group web page, click **Multicast > MVR > Group Address**.

Figure 91 - Multicast > MVR > Group Address

Item	Description
VLAN	The VLAN ID of MVR group.
Group Address	The MVR group IP address.
Member	The member ports of MVR group.
Type	The type of MVR group. Static or Dynamic.
Life(Sec)	The life time of this dynamic MVR group.

Click "**Add**" button to view Add/Edit Group Address Table menu.

The screenshot shows a web-based configuration interface for adding an MVR group address. The interface is titled "Add Group Address". It contains three primary configuration areas:

- VLAN:** A field containing the value "1".
- Group Address:** An input field for the IP address, followed by the range "(0.0.0.0 - 0.0.0.0)".
- Member:** A section with two port lists. The "Available Port" list is on the left, and the "Selected Port" list is on the right. Between these lists are two buttons: a right-pointing arrow (>) and a left-pointing arrow (<), used for moving ports between the two lists.

 At the bottom of the window are two buttons: "Apply" and "Close".

Figure 92 - Multicast > MVR > Group Address > Add Group Address

Item	Description
VLAN	The VLAN ID of MVR group.
Group Address	The MVR group IP address.
Member	<p>The member ports of MVR group.</p> <ul style="list-style-type: none"> ● Available Port: Optional port member, it is only receiver port when MVR mode is compatible, it include source port when mode is dynamic. ● Selected Port: Selected port member

III-10. Security

Use the Security pages to configure settings for the switch security features.

III-10-1. RADIUS

This page allow user to add, edit or delete RADIUS server settings and modify default parameter of RADIUS server.

To display RADIUS web page, click **Security > RADIUS**.

Use Default Parameter

Retry: 3 (1 - 10, default 3)

Timeout: 3 Sec (1 - 30, default 3)

Key String:

Apply

RADIUS Table

Showing All entries Showing 0 to 0 of 0 entries

Server Address	Server Port	Priority	Retry	Timeout	Usage
0 results found.					

Add Edit Delete First Previous 1 Next Last

Figure 93 - Security > RADIUS

Item	Description
Retry	Set default retry number.
Timeout	Set default timeout value.
Key String	Set default RADIUS key string
RADIUS Table	
Server Address	RADIUS server address.
Server Port	RADIUS server port.
Priority	RADIUS server priority (smaller value has higher priority). RADIUS session will try to establish with the server setting which has highest priority. If failed, it will try to connect to the server with next higher priority.
Retry	RADIUS server retry value. If it is fail to connect to server, it will keep

	trying until timeout with retry times.
Timeout	RADIUS server timeout value. If it is fail to connect to server, it will keep trying until timeout.
Usage	RADIUS server usage type Login: For login authentication. 802.1x: For 802.1x authentication. All: For all types.

Click "**Add**" or "**Edit**" button to view Add/Edit RADIUS Server menu.

Add RADIUS Server

Address Type

☒ Hostname
☐ IPv4
☐ IPv6

Server Address

Server Port

1812 (0 - 65535, default 1812)

Priority

(0 - 65535)

Key String

☒ Use Default

Retry

☒ Use Default

3 (1 - 10, default 3)

Timeout

☒ Use Default

3 Sec (1 - 30, default 3)

Usage

☐ Login
☐ 802.1X
☒ All

Apply

Close

Edit RADIUS Server

Server Address

undefined

Server Port

0

(0 - 65535, default 1812)

Priority

-1

(0 - 65535)

Key String

☐ Use Default

Retry

☐ Use Default

0

(1 - 10, default 3)

Timeout

☐ Use Default

0

Sec (1 - 30, default 3)

Usage

☒ Login
☐ 802.1X
☐ All

Apply

Close


Figure 94 - Security > RADIUS > Add/Edit RADIUS Server

Item	Description
Address Type	In add dialog, user need to specify server Address Type <ul style="list-style-type: none"> ● Hostname: Use domain name as server address. ● IPv4: Use IPv4 as server address. ● IPv6: Use IPv6 as server address.
Server Address	In add dialog, user need to input server address based on address type. In edit dialog, it shows current edit server address.
Server Port	Set RADIUS server port.
Priority	Set RADIUS server priority (smaller value has higher priority). RADIUS session will try to establish with the server setting which has highest priority. If failed, it will try to connect to the server with next higher priority.
Retry	Set RADIUS server retry value. If it is fail to connect to server, it will keep trying until timeout with retry times.
Timeout	Set RADIUS server timeout value. If it is fail to connect to server, it will keep trying until timeout.
Usage	Set RADIUS server usage type <ul style="list-style-type: none"> ● Login: For login authentifation. ● 802.1x: For 802.1x authentication. ● All: For all types.

III-10-2. Management Access

Use the Management Access pages to configure settings of management access.

III-10-2-1. Management VLAN

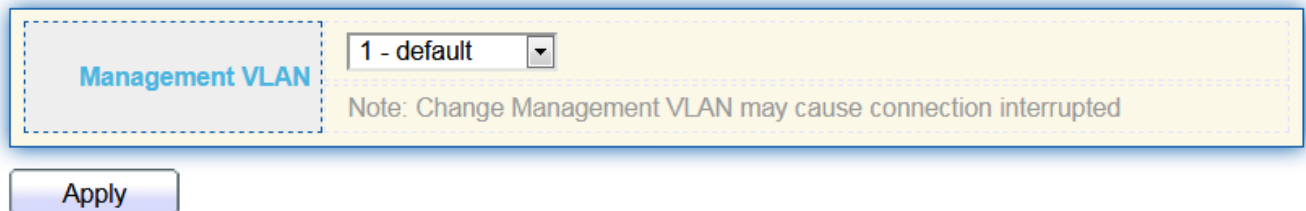

The image shows a configuration interface for the Management VLAN. It features a light yellow background with a dashed blue border. On the left, there is a label 'Management VLAN' in blue text. To its right is a dropdown menu currently showing '1 - default'. Below the dropdown, a note in grey text reads: 'Note: Change Management VLAN may cause connection interrupted'. At the bottom left of the interface is a blue 'Apply' button.

Note: Change Management VLAN may cause connection interrupted

III-10-2-2. Management Service

This page allow user to change management services related configurations.

To display Management Service click **Security > Management Access > Management Service**.

Management Service		
Telnet	<input type="checkbox"/>	Enable
SSH	<input type="checkbox"/>	Enable
HTTP	<input checked="" type="checkbox"/>	Enable
HTTPS	<input type="checkbox"/>	Enable
SNMP	<input checked="" type="checkbox"/>	Enable

Session Timeout		
Console	<input type="text" value="10"/>	Min (0 - 65535, default 10)
Telnet	<input type="text" value="10"/>	Min (0 - 65535, default 10)
SSH	<input type="text" value="10"/>	Min (0 - 65535, default 10)
HTTP	<input type="text" value="10"/>	Min (0 - 65535, default 10)
HTTPS	<input type="text" value="10"/>	Min (0 - 65535, default 10)

Password Retry Count		
Console	<input type="text" value="3"/>	(0 - 120, default 3)
Telnet	<input type="text" value="3"/>	(0 - 120, default 3)
SSH	<input type="text" value="3"/>	(0 - 120, default 3)

Silent Time		
Console	<input type="text" value="0"/>	Sec (0 - 65535, default 0)
Telnet	<input type="text" value="0"/>	Sec (0 - 65535, default 0)
SSH	<input type="text" value="0"/>	Sec (0 - 65535, default 0)

Figure 95 - Security > Management Access > Management Service

Item	Description
Management Service	Management service admin state. <ul style="list-style-type: none"> ● Telnet: Connect CLI through telnet. ● SSH: Connect CLI through SSH. ● HTTP: Connect WEBUI through HTTP. ● HTTPS: Connect WEBUI through HTTPS. ● SNMP: Manage switch through SNMP.
Session Timeout	Set session timeout minutes for user access to user interface. 0 minutes means never timeout.
Password Retry Count	Retry count is the number which CLI password input error tolerance count. After input error password exceeds this count, the CLI will freeze after silent time.
Silent Time	After input error password exceeds password retry count, the CLI will freeze after silent time.

III-10-2-3. Management ACL

This page allow user to add or delete management ACL rule. A rule cannot be deleted if under active.

To display Management ACL page, click **Security > Management Access > Management ACL**.

Figure 96 - Security > Management Access > Management ACL

Item	Description
ACL Name	Input MAC ACL name.
Management ACL	
ACL Name	Display Management ACL name.
State	Display Management ACL whether active.
Rule	Display the number Management ACE rule of ACL.

III-10-2-4. Management ACE

This page allow user to add, edit or delete ACE rule. An ACE rule cannot be edited or deleted if ACL under active. New ACE cannot be added if ACL under active

To display Management ACE page, click **Security > Management Access > Management ACE**.

Management ACE Table

ACL Name manage ▼

Showing All ▼ entries Showing 0 to 0 of 0 entries

	Priority	Action	Service	Port	Address / Mask
0 results found.					

Add Edit Delete First Previous 1 Next Last

Figure 97 - Security > Management Access > Management ACE

Item	Description
ACL Name	Select the ACL name to which an ACE is being added.
Priority	Display the priority of ACE.
Action	Display the action of ACE.
Service	Display the service ACE
Port	Display the port list of ACE
Address / Mask	Display the source IP address and mask of ACE.

Click "Add" or "Edit" button to view Add/Edit Management ACE menu.

Add Managemet ACE

ACL Name	manage		
Priority	1	(1 - 65535)	
Service	<input type="radio"/> All <input type="radio"/> Http <input type="radio"/> Https <input checked="" type="radio"/> Snmp <input type="radio"/> SSH <input type="radio"/> Telnet		
Action	<input type="radio"/> Permit <input checked="" type="radio"/> Deny		
Port	<div>Available PortSelected Port</div> <div>GE1GE2GE3GE4GE5GE6GE7GE8</div> <div>><</div> <div></div>		
IP Version	<input checked="" type="radio"/> All <input type="radio"/> IPv4 <input type="radio"/> IPv6		
IPv4	<div></div> / <div>255.255.255.255</div>		
IPv6	<div></div> / <div>128</div> (1 - 128)		

Apply

Close

Edit Managemet ACE

ACL Name

manage

Priority

1

Service

☐ All
☐ Http
☐ Https
☒ Snmp
☐ SSH
☐ Telnet

Action

☐ Permit
☒ Deny

Port

Available Port

GE2
GE3
GE4
GE5
GE6
GE7
GE8
GE9

Selected Port

GE1

IP Version

☒ All
☐ IPv4
☐ IPv6

IPv4

/ 255.255.255.255

IPv6

/ 128 (1 - 128)

Apply

Close

Figure 98 - Security > Management Access > Add/Edit Management ACE

Item	Description
ACL Name	Display the ACL name to which an ACE is being added.
Priority	Specify the priority of the ACE. ACEs with higher sequence are processed first (1 is the highest priority). Only available on Add Dialog.
Service	Select the type service of rule. <ul style="list-style-type: none"> ● All: All services. ● HTTP: Only HTTP service. ● HTTPS: Only HTTPS service ● SNMP: Only SNMP service. ● SSH: Only SSH service. ● Telnet: Only Telnet service
Action	Select the action after ACE match packet. <ul style="list-style-type: none"> ● Permit: Forward packets that meet the ACE criteria.

	<ul style="list-style-type: none"> ● Deny: Drop packets that meet the ACE criteria.
Port	Select ports which will be matched.
IP Version	Select the type of source IP address. <ul style="list-style-type: none"> ● All: All IP addresses can access. ● IPv4: Specify IPv4 address ca access. ● IPv6: Specify IPv6 address ca access.
IPv4	Enter the source IPv4 address value and mask to which will be matched.
IPv6	Enter the source IPv6 address value and mask to which will be matched.

III-10-3. Authentication Manager

III-10-3-1. Property

This page allow user to edit authentication global settings and some port mods' configurations.

To display authentication manager Property web page, click **Security > Authentication Manager > Property**.

Authentication Type

☒ 802.1x

Guest VLAN

☐ Enable

MAC-Based User ID Format

Apply

Port Mode Table

Entry	Port	Authentication Type	Host Mode	Method	Guest VLAN	VLAN Assign Mode
		802.1x				
<input type="checkbox"/>	1 GE1	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	2 GE2	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	3 GE3	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	4 GE4	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	5 GE5	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	6 GE6	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	7 GE7	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	8 GE8	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	9 GE9	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	10 GE10	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	11 GE11	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	12 GE12	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	13 GE13	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	14 GE14	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	15 GE15	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	16 GE16	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	17 GE17	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	18 GE18	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	19 GE19	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	20 GE20	Enabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	21 GE21	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	22 GE22	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	23 GE23	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	24 GE24	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	25 XGE1	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	26 XGE2	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	27 XGE3	Disabled	Multiple Authentication	RADIUS	Disabled	Static
<input type="checkbox"/>	28 XGE4	Disabled	Multiple Authentication	RADIUS	Disabled	Static

Figure 99 - Security > Authentication Manager > Property

Item	Description
Authentication Type	Set checkbox to enable/disable following authentication types <ul style="list-style-type: none"> ● 802.1x: Use IEEE 802.1x to do authentication ● MAC-Based: Use MAC address to do authentication ● WEB-Based: Prompt authentication web page for user to do authentication
Guest VLAN	Set checkbox to enable/disable guest VLAN, if guest VLAN is enabled, you need to select one available VLAN ID to be guest VID.
MAC-Based User ID Format	Select mac-based authentication RADIUS username/password ID format. <ul style="list-style-type: none"> ● XXXXXXXXXXXXX ● Xxxxxxxxxxxxxx ● XX:XX:XX:XX:XX:XX ● xx:xx:xx:xx:xx:xx ● XX-XX-XX-XX-XX-XX ● xx-xx-xx-xx-xx-xx ● XX.XX.XX.XX.XX.XX ● xx.xx.xx.xx.xx.xx ● XXXX:XXXX:XXXX ● xxxx:xxxx:xxxx ● XXXX-XXXX-XXXX ● XXXX-XXXX-XXXX ● XXXX.XXXX.XXXX ● XXXX.XXXX.XXXX ● XXXXXX:XXXXXX ● XXXXXX:XXXXXX ● XXXXXX-XXXXXX ● XXXXXX-XXXXXX
Port Mode Table	
Port	Port Name.
Authentication Type (802.1X)	802.1X authentication type state <ul style="list-style-type: none"> ● Enabled: 802.1X is enabled. ● Disabled: 802.1X is disabled.
Authentication Type (MAC-Based)	MAC-Based authentication type state <ul style="list-style-type: none"> ● Enabled: MAC-Based authentication is enabled ● Disabled: MAC-Based authentication is disabled
Authentication Type (WEB-Based)	WEB-Based authentication type state <ul style="list-style-type: none"> ● Enabled: WEB-Based authentication is enabled ● Disabled: WEB-Based authentication is disabled
Host Mode	Authenticating host mode

	<ul style="list-style-type: none"> ● Multiple Authentication: In this mode, every client need to pass authenticate procedure individually. ● Multiple Hosts: In this mode, only one client need to be authenticated and other clients will get the same access accessibility. Web-auth cannot be enabled in this mode. ● Single Host: In this mode, only one host is allowed to be authenticated. It is the same as Multi-auth mode with max hosts number configure to be 1.
Order	<p>Support following authentication type order combinations. Web Authentication should always be the last type. The authentication manager will go to next type if current type is not enabled or authenticated fail.</p> <ul style="list-style-type: none"> ● 802.1x ● MAC-Based ● WEB-Based ● 802.1x MAC-Based ● 802.1x WEB-Based ● MAC-Based 802.1x ● WEB-Based 802.1x ● 802.1x MAC-Based WEB-Based ● 802.1x WEB-Based MAC-Based
Method	<p>Support following authentication method order combinations. These orders only available on MAC-Based authentication and WEB-Based authentication. 802.1x only support Radius method.</p> <ul style="list-style-type: none"> ● Local: Use DUT's local database to do authentication ● Radius: Use remote RADIUS server to do authentication ● Local Radius ● Radius Local
Guest VLAN	<p>Port guest VLAN enable state</p> <ul style="list-style-type: none"> ● Enabled: Guest VLAN is enabled on port. ● Disabled: Guest VLAN is disabled on port.
VLAN Assign Mode	<p>Support following VLAN assign mode and only apply when source is RADIUS</p> <ul style="list-style-type: none"> ● Disable: Ignore the VLAN authorization result and keep original VLAN of host. ● Reject: If get VLAN authorized information, just use it. However, if there is no VLAN authorized information, reject the host and make it unauthorized. ● Static: If get VLAN authorized information, just use it. If there is no VLAN authorized information, keep original VLAN of host.

Click “**Edit**” button to view the Edit Port Mode menu.

Port

GE1

Authentication Type

☐ 802.1x
☐ MAC-Based
☐ WEB-Based

Host Mode

☒ Multiple Authentication
☐ Multiple Hosts
☐ Single Host

Order

Available Type

MAC-Based

WEB-Based

Select Type

802.1x

Method

Available Method

Local

Select Method

RADIUS

Guest VLAN

☐ Enable
☐ Disable
☐ Reject
☒ Static

VLAN Assign Mode

Apply

Close

Figure 100 - Security > Authentication Manager > Property > Edit Port Mode

Item	Description
Port	Selected port list.
Authentication Type	Set checkbox to enable/disable authentication types.
Host Mode	Select authenticating host mode <ul style="list-style-type: none"> Multiple Authentication: In this mode, every client need to pass authenticate procedure individually. Multiple Hosts: In this mode, only one client need to be authenticated and other clients will get the same access accessibility. Web-auth cannot be enabled in this mode. Single Host: In this mode, only one host is allowed to be

	authenticated. It is the same as Multi-auth mode with max hosts number configure to be 1.
Order	<p>Support following authentication type order combinations. Web Authentication should always be the last type. The authentication manager will go to next type if current type is not enabled or authenticated fail.</p> <ul style="list-style-type: none"> ● 802.1x ● MAC-Based ● WEB-Based ● 802.1x MAC-Based ● 802.1x WEB-Based ● MAC-Based 802.1x ● WEB-Based 802.1x ● 802.1x MAC-Based WEB-Based ● 802.1x WEB-Based MAC-Based
Method	<p>Support following authentication method order combinations. These orders only available on MAC-Based authentication and WEB-Based authentication. 802.1x only support Radius method.</p> <ul style="list-style-type: none"> ● Local: Use DUT's local database to do authentication. ● Radius: Use remote RADIUS server to do authentication. ● Local Radius. ● Radius Local.
Guest VLAN	Set checkbox to enable/disable guest VLAN.
VLAN Assign Mode	<p>Support following VLAN assign mode and only apply when source is RADIUS</p> <ul style="list-style-type: none"> ● Disable: Ignore the VLAN authorization result and keep original VLAN of host. ● Reject: If get VLAN authorized information, just use it. However, if there is no VLAN authorized information, reject the host and make it unauthorized. ● Static: If get VLAN authorized information, just use it. If there is no VLAN authorized information, keep original VLAN of host.

III-10-3-2. Port Setting

This page allow user to configure authentication manger port settings

To display the authentication manager Port Setting web page, click **Security > Authentication Manager > Port Setting**.

Port Setting Table

Entry	Port	Port Control	Reauthentication	Max Hosts	Common Timer			802.1x Parameters			
					Reauthentication	Inactive	Quiet	TX Period	Supplicant Timeout	Server Timeout	Max Request
<input type="checkbox"/>	1 GE1	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	2 GE2	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	3 GE3	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	4 GE4	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	5 GE5	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	6 GE6	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	7 GE7	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	8 GE8	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	9 GE9	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	10 GE10	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	11 GE11	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	12 GE12	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	13 GE13	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	14 GE14	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	15 GE15	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	16 GE16	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	17 GE17	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	18 GE18	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	19 GE19	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	20 GE20	Force Authorized	Enabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	21 GE21	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	22 GE22	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	23 GE23	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	24 GE24	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	25 XGE1	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	26 XGE2	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	27 XGE3	Disabled	Disabled	256	3600	60	60	30	30	30	2
<input type="checkbox"/>	28 XGE4	Disabled	Disabled	256	3600	60	60	30	30	30	2

Figure 101 - Security > Authentication Manager > Port Setting

Item	Description
Port	Port
Port Control	Support following authentication port control types. <ul style="list-style-type: none"> ● Disable: Disable authentication function and all clients have network accessibility. ● Force Authorized: Port is force authorized and all clients have network accessibility. ● Force Unauthorized: Port is force unauthorized and all clients have no network accessibility. ● Auto: Need passing authentication procedure to get network accessibility.
Reauthentication	Reauthenticate state <ul style="list-style-type: none"> ● Enabled: Host will be reauthenticated after reauthentication period. ● Disabled: Host will not be reauthenticated after reauthentication period.
Max Hosts	In Multiple Authentication mode, total host number cannot not exceed max hosts number.
Common Timer	After re-authenticate period, host will return to initial state

(Reauthentication)	and need to pass authentication procedure again.
Common Timer (Inactive)	If no packet from the authenticated host, the inactive timer will increase. After inactive timeout, the host will be unauthorized and corresponding session will be deleted. In multi-host mode, the packet is counting on the authorized host only.
Common Timer (Quiet)	When port is in Locked state after authenticating fail several times, the host will be locked in quiet period. After this quiet period, the host is allowed to authenticate again.
802.1X Params (TX Period)	Number of seconds that the device waits for a response to an Extensible Authentication Protocol (EAP) request/identity frame from the supplicant (client) before resending the request.
802.1X Params (Supplicant Timeout)	The maximum number of EAP requests that can be sent. If a response is not received after the defined period (supplicant timeout), the authentication process is restarted.
802.1X Params (Server Timeout)	Number of seconds that lapses before EAP requests are resent to the supplicant.
802.1X Params (Max Request)	Number of seconds that lapses before the device resends a request to the authentication server.
Web-Based Param (Max Login)	Allow user login fail number. After login fail number exceed, the host will enter Lock state and is not able to authenticate until quiet period exceed.

Click "**Edit**" button to view Edit Port Setting menu.

Port

GE1

Port Control

☒ Disabled
☐ Force Authorized
☐ Force Unauthorized
☐ Auto

Reauthentication

☐ Enable

Max Hosts

(1 - 256, default 256)

Common Timer

Reauthentication

Sec (300 - 4294967294, default 3600)

Inactive

Sec (60 - 65535, default 60)

Quiet

Sec (0 - 65535, default 60)

802.1x Parameters

TX Period

Sec (1 - 65535, default 30)

Supplicant Timeout

Sec (1 - 65535, default 30)

Server Timeout

Sec (1 - 65535, default 30)

Max Request

(1 - 10, default 2)

Web-Based Parameters

Max Login

☐ Infinite
 (3 - 10, default 3)

Apply

Close

Figure 102 - Security > Authentication Manager > Port Setting > Edit Port Setting

Item	Description
Port	Port Name.
Port Control	Support following authentication port control types. <ul style="list-style-type: none"> ● Disable: Disable authentication function and all clients have network accessibility. ● Force Authorized: Port is force authorized and all clients have network accessibility. ● Force Unauthorized: Port is force unauthorized and all clients have no network accessibility. ● Auto: Need passing authentication procedure to get network accessibility.
Reauthentication	Set checkbox to enable/disable reauthentication.

Max Hosts	In Multiple Authentication mode, total host number cannot not exceed max hosts number.
Common Timer	
Reauthentication	After re-authenticate period, host will return to initial state and need to pass authentication procedure again.
Inactive	If no packet from the authenticated host, the inactive timer will increase. After inactive timeout, the host will be unauthorized and corresponding session will be deleted. In multi-host mode, the packet is counting on the authorized host only and not all packets on the port.
Quiet	When port is in Locked state after authenticating fail several times, the host will be locked in quiet period. After this quiet period, the host is allowed to authenticate again.
802.1X Params	
TX Period	Number of seconds that the device waits for a response to an Extensible Authentication Protocol (EAP) request/identity frame from the supplicant (client) before resending the request.
Supplicant Timeout	The maximum number of EAP requests that can be sent. If a response is not received after the defined period (supplicant timeout), the authentication process is restarted.
Server Timeout	Number of seconds that lapses before EAP requests are resent to the supplicant.
Max Request	Number of seconds that lapses before the device resends a request to the authentication server.
Web-Based Param	
Max Login	Set checkbox to set max login number to be infinite or specify max login number.

III-10-3-3. Sessions

This page show all detail information of authentication sessions and allow user to select specific session to delete by clicking “**Clear**” button.

To display Sessions web page, click **Security > Authentication Manger > Sessions**.

Sessions Table

Showing All entries

Showing 0 to 0 of 0 entries

	Session ID	Port	MAC Address	Current Type	Status	Operational Information				Authorized Information			
						VLAN	Session Time	Inactive Time	Quiet Time	VLAN	Reauthentication Period	Inactive Timeout	
0 results found.													

Clear

Refresh

First

Previous

1

Next

Last

Figure 103 - Security > Authentication Manager > Sessions

Item	Description
Session ID	Session ID is unique of each session.
Port	Port name which the host located.
MAC Address	Host MAC address.
Current Type	<p>Show current authenticating type</p> <ul style="list-style-type: none"> ● 802.1x: Use IEEE 802.1X to do authenticating ● MAC-Based: Use MAC-Based authentication to do authenticating. ● WEB-Based: Use WEB-Based authentication to do authenticating.
Status	<p>Show host authentication session status</p> <p>IP version (IPv4, IPv6)</p> <ul style="list-style-type: none"> ● Disable: This session is ready to be deleted ● Running: Authentication process is running ● Authorized: Authentication is passed and getting network accessibility. ● Unauthorized: Authentication is not passed and not getting network accessibility. ● Locked: Host is locked and do not allow to do authenticating until quiet period. ● Guest: Host is in the guest VLAN.
Operational (VLAN)	Shows host operational VLAN ID.
Operational (Session Time)	In “Authorized” state, it shows total time after authorized.
Operational (Inactived)	In “Authorized” state, it shows how long the host do not send any packet.
Operational (Quiet Time)	In “Locked” state, it shows total time after locked.
Authorized (VLAN)	Shows VLAN ID given from authorized procedure.
Authorized (Reauthentication Period)	Shows reauthentication period given from authorized procedure.
Authorized (Inactive Timeouts)	Shows inactive timeout given from authorized procedure.

III-10-4. Port Security

This page allow user to configure port security settings for each interface. When port security is enabled on interface, action will be perform once learned MAC address over limitation.

To display Port Security web page, click **Security > Port Security**.

Port Security Table



Entry	Port	State	MAC Address	Action
1	GE1	Disabled	1	Discard
2	GE2	Disabled	1	Discard
3	GE3	Disabled	1	Discard
4	GE4	Disabled	1	Discard
5	GE5	Disabled	1	Discard
6	GE6	Disabled	1	Discard
7	GE7	Disabled	1	Discard
8	GE8	Disabled	1	Discard
9	GE9	Disabled	1	Discard
10	GE10	Disabled	1	Discard
11	GE11	Disabled	1	Discard
12	GE12	Disabled	1	Discard
13	GE13	Disabled	1	Discard
14	GE14	Disabled	1	Discard
15	GE15	Disabled	1	Discard
16	GE16	Disabled	1	Discard
17	GE17	Disabled	1	Discard
18	GE18	Disabled	1	Discard
19	GE19	Disabled	1	Discard
20	GE20	Disabled	1	Discard
21	GE21	Disabled	1	Discard
22	GE22	Disabled	1	Discard
23	GE23	Disabled	1	Discard
24	GE24	Disabled	1	Discard
25	XGE1	Disabled	1	Discard
26	XGE2	Disabled	1	Discard
27	XGE3	Disabled	1	Discard
28	XGE4	Disabled	1	Discard
29	LAG1	Disabled	1	Discard
30	LAG2	Disabled	1	Discard
31	LAG3	Disabled	1	Discard
32	LAG4	Disabled	1	Discard
33	LAG5	Disabled	1	Discard
34	LAG6	Disabled	1	Discard
35	LAG7	Disabled	1	Discard
36	LAG8	Disabled	1	Discard

Edit

Figure 104 - Security > Port Security

Item	Description
State	Enable/Disable the port security function.
Port	Select one or multiple ports to configure.
State	Select the status of port security <ul style="list-style-type: none">● Disable: Disable port security function.● Enable: Enable port security function.
MAC Address	Specify the number of how many mac addresses can be learned.
Action	Select the action if learned mac addresses <ul style="list-style-type: none">● Forward: Forward this packet whose SMAC is new to system and exceed the learning-limit number.● Discard: Discard this packet whose SMAC is new to system and exceed the learning-limit number.● Shutdown: Shutdown this port when receives a packet whose SMAC is new to system and exceed the learning limit number.

Click "**Edit**" button to view Edit Port Security menu.

Edit Port Security

Port

GE1

State

☐ Enable

MAC Address

(0 - 255, default 1)

Action

☐ Forward
☒ Discard
☐ Shutdown

Apply

Close

Figure 105 - Security > Port Security > Edd Port Security

Item	Description
Port	Select one or multiple ports to configure.
State	Select the status of port security Disable: Disable port security function. Enable: Enable port security function.
MAC Address	Specify the number of how many mac addresses can be learned.
Action	Select the action if learned mac addresses <ul style="list-style-type: none"> ● Forward: Forward this packet whose SMAC is new to system and exceed the learning-limit number. ● Discard: Discard this packet whose SMAC is new to system and exceed the learning-limit number. ● Shutdown: Shutdown this port when receives a packet whose SMAC is new to system and exceed the learning limit number.

III-10-5. Traffic Segmentation

Traffic Segmentation prohibits ports to communicate with each other directly, on other manufacturers' switches

Traffic Segmentation Settings

Port List (e.g. GE1,GE2-5,XGE1-2)

☐ All Ports

Forward Port List (e.g. GE1,GE2-5,XGE1-2)

☐ All Ports

Apply

Traffic Segmentation Table

q

Entry	Port	Forward Port List
1	GE1	GE21-24,XGE1-4
2	GE2	GE21-24,XGE1-4
3	GE3	GE21-24,XGE1-4
4	GE4	GE21-24,XGE1-4
5	GE5	GE21-24,XGE1-4
6	GE6	GE21-24,XGE1-4
7	GE7	GE21-24,XGE1-4
8	GE8	GE21-24,XGE1-4
9	GE9	GE21-24,XGE1-4
10	GE10	GE21-24,XGE1-4
11	GE11	GE21-24,XGE1-4
12	GE12	GE21-24,XGE1-4
13	GE13	GE21-24,XGE1-4
14	GE14	GE21-24,XGE1-4
15	GE15	GE21-24,XGE1-4
16	GE16	GE21-24,XGE1-4
17	GE17	GE21-24,XGE1-4
18	GE18	GE21-24,XGE1-4
19	GE19	GE21-24,XGE1-4
20	GE20	GE21-24,XGE1-4
21	GE21	GE1-20
22	GE22	GE1-20
23	GE23	GE1-20
24	GE24	GE1-20
25	XGE1	GE1-20
26	XGE2	GE1-20
27	XGE3	GE1-20
28	XGE4	GE1-20

III-10-6. Storm Control

To display Storm Control global setting web page, click **Security > Storm Control**.

Mode

☐ Packet / Sec
☒ Kbits / Sec

IFG

☒ Exclude
☐ Include

Port Setting Table

Entry	Port	State	Broadcast		Unknown Multicast		Unknown Unicast		Action	
			State	Rate (Kbps)	State	Rate (Kbps)	State	Rate (Kbps)		
<input type="checkbox"/>	1	GE1	Disabled	Disabled	10000	Disabled	10000	Disabled	10000	Drop
<input type="checkbox"/>	2	GE2	Disabled	Disabled	10000	Disabled	10000	Disabled	10000	Drop
<input type="checkbox"/>	3	GE3	Disabled	Disabled	10000	Disabled	10000	Disabled	10000	Drop
<input type="checkbox"/>	4	GE4	Disabled	Disabled	10000	Disabled	10000	Disabled	10000	Drop
<input type="checkbox"/>	5	GE5	Disabled	Disabled	10000	Disabled	10000	Disabled	10000	Drop
<input type="checkbox"/>	6	GE6	Disabled	Disabled	10000	Disabled	10000	Disabled	10000	Drop
<input type="checkbox"/>	7	GE7	Disabled	Disabled	10000	Disabled	10000	Disabled	10000	Drop
<input type="checkbox"/>	8	GE8	Disabled	Disabled	10000	Disabled	10000	Disabled	10000	Drop
<input type="checkbox"/>	9	GE9	Disabled	Disabled	10000	Disabled	10000	Disabled	10000	Drop
<input type="checkbox"/>	10	GE10	Disabled	Disabled	10000	Disabled	10000	Disabled	10000	Drop
<input type="checkbox"/>	11	GE11	Disabled	Disabled	10000	Disabled	10000	Disabled	10000	Drop
<input type="checkbox"/>	12	GE12	Disabled	Disabled	10000	Disabled	10000	Disabled	10000	Drop
<input type="checkbox"/>	13	GE13	Disabled	Disabled	10000	Disabled	10000	Disabled	10000	Drop
<input type="checkbox"/>	14	GE14	Disabled	Disabled	10000	Disabled	10000	Disabled	10000	Drop
<input type="checkbox"/>	15	GE15	Disabled	Disabled	10000	Disabled	10000	Disabled	10000	Drop
<input type="checkbox"/>	16	GE16	Disabled	Disabled	10000	Disabled	10000	Disabled	10000	Drop
<input type="checkbox"/>	17	GE17	Disabled	Disabled	10000	Disabled	10000	Disabled	10000	Drop
<input type="checkbox"/>	18	GE18	Disabled	Disabled	10000	Disabled	10000	Disabled	10000	Drop
<input type="checkbox"/>	19	GE19	Disabled	Disabled	10000	Disabled	10000	Disabled	10000	Drop

Figure 108 - Security > Storm Control

Item	Description
Mode(Unit)	Select the unit of storm control <ul style="list-style-type: none"> ● Packet / Sec: storm control rate calculates by packet-based ● Kbits / Sec: storm control rate calculates by octet-based.
IFG	Select the rate calculates w/o preamble & IFG (20 bytes) <ul style="list-style-type: none"> ● Excluded: exclude preamble & IFG (20 bytes) when count ingress storm control rate. ● Included: include preamble & IFG (20 bytes) when count ingress storm control rate.

Click "**Edit**" button to view Edit Port Setting menu.

Item	Description
Port	Select the setting ports.
State	Select the state of setting Enable: Enable the storm control function.
Broadcast	Enable: Enable the storm control function of Broadcast packet. Value of storm control rate, Unit: pps (packet per-second, range 1- 262143) or Kbps (Kbits per-second, range 16 - 1000000) depends on global mode setting.
Unknown Multicast	Enable: Enable the storm control function of Unknown multicast packet. Value of storm control rate, Unit: pps (packet per-second, range 1- 262143) or Kbps (Kbits per-second, range 16 - 1000000) depends on global mode setting.
Unknown Unicast	Enable: Enable the storm control function of Unknown unicast packet. Value of storm control rate, Unit: pps (packet per-second, range 1 - 262143) or Kbps (Kbits per-second, range 16 - 1000000) depends on global mode setting.
Action	Select the state of setting <ul style="list-style-type: none"> ● Drop: Packets exceed storm control rate will be dropped. ● Shutdown: Port will be shutdown when packets exceed storm control rate.

Figure 109 - Security > Storm Control > Edit Port Setting

Item	Description
Port	Select the setting ports.
State	Select the state of setting Enable: Enable the storm control function.
Broadcast	Enable: Enable the storm control function of Broadcast packet. Value of storm control rate, Unit: pps (packet per-second, range 1- 262143) or Kbps (Kbits per-second, range 16 - 1000000) depends on global mode setting.
Unknown Multicast	Enable: Enable the storm control function of Unknown multicast packet. Value of storm control rate, Unit: pps (packet per-second, range 1- 262143) or Kbps (Kbits per-second, range 16 - 1000000) depends on global mode setting.
Unknown Unicast	Enable: Enable the storm control function of Unknown unicast packet. Value of storm control rate, Unit: pps (packet per-second, range 1 - 262143) or Kbps (Kbits per-second, range 16 - 1000000) depends on global mode setting.
Action	Select the state of setting <ul style="list-style-type: none"> ● Drop: Packets exceed storm control rate will be dropped. ● Shutdown: Port will be shutdown when packets exceed storm control rate.

III-10-7. DoS

A Denial of Service (DoS) attack is a hacker attempt to make a device unavailable to its users. DoS attacks saturate the device with external communication requests, so that it cannot respond to legitimate traffic. These attacks usually lead to a device CPU overload.

The DoS protection feature is a set of predefined rules that protect the network from malicious attacks. The DoS Security Suite Settings enables activating the security suite.

III-10-7-1. Property

To display Dos Global Setting web page, click **Security > Dos > Property**.

POD	<input checked="" type="checkbox"/> Enable
Land	<input checked="" type="checkbox"/> Enable
UDP Blat	<input checked="" type="checkbox"/> Enable
TCP Blat	<input checked="" type="checkbox"/> Enable
DMAC = SMAC	<input checked="" type="checkbox"/> Enable
Null Scan Attack	<input checked="" type="checkbox"/> Enable
X-Mas Scan Attack	<input checked="" type="checkbox"/> Enable
TCP SYN-FIN Attack	<input checked="" type="checkbox"/> Enable
TCP SYN-RST Attack	<input checked="" type="checkbox"/> Enable
ICMP Fragment	<input checked="" type="checkbox"/> Enable
TCP-SYN	<input checked="" type="checkbox"/> Enable Note: Source Port < 1024
TCP Fragment	<input checked="" type="checkbox"/> Enable Note: Offset = 1
Ping Max Size	<input checked="" type="checkbox"/> Enable IPv4 <input checked="" type="checkbox"/> Enable IPv6 <input type="text" value="512"/> Byte (0 - 65535, default 512)
TCP Min Hdr size	<input checked="" type="checkbox"/> Enable <input type="text" value="20"/> Byte (0 - 31, default 20)
IPv6 Min Fragment	<input checked="" type="checkbox"/> Enable <input type="text" value="1240"/> Byte (0 - 65535, default 1240)
Smurf Attack	<input checked="" type="checkbox"/> Enable <input type="text" value="0"/> Netmask Length (0 - 32, default 0)

Apply


Figure 110 - Security > DoS > Property

Item	Description
POD	Avoids ping of death attack.
Land	Drops the packets if the source IP address is equal to the destination IP address.
UDP Blat	Drops the packets if the UDP source port equals to the UDP destination port.
TCP Blat	Drops the packages if the TCP source port is equal to the TCP

	destination port.
DMAC = SMAC	Drops the packets if the destination MAC address is equal to the source MAC address.
Null Scan Attack	Drops the packets with NULL scan.
X-Mas Scan Attack	Drops the packets if the sequence number is zero, and the FIN, URG and PSH bits are set.
TCP SYN-FIN Attack	Drops the packets with SYN and FIN bits set.
TCP SYN-RST Attack	Drops the packets with SYN and RST bits set
ICMP Fragment	Drops the fragmented ICMP packets.
TCP SYN (SPORT<1024)	Drops SYN packets with sport less than 1024.
TCP Fragment (Offset = 1)	Drops the TCP fragment packets with offset equals to one.
Ping Max Size	Specify the maximum size of the ICMPv4/ICMPv6 ping packets. The valid range is from 0 to 65535 bytes, and the default value is 512 bytes.
IPv6 Min Fragment	Checks the minimum size of IPv6 fragments, and drops the packets smaller than the minimum size. The valid range is from 0 to 65535 bytes, and default value is 1240 bytes.
Smurf Attack	Avoids smurf attack. The length range of the netmask is from 0 to 323 bytes, and default length is 0 bytes.

III-10-7-2. Port Setting

To configure and display the state of DoS protection for interfaces, click **Security > DoS > Port Setting**.

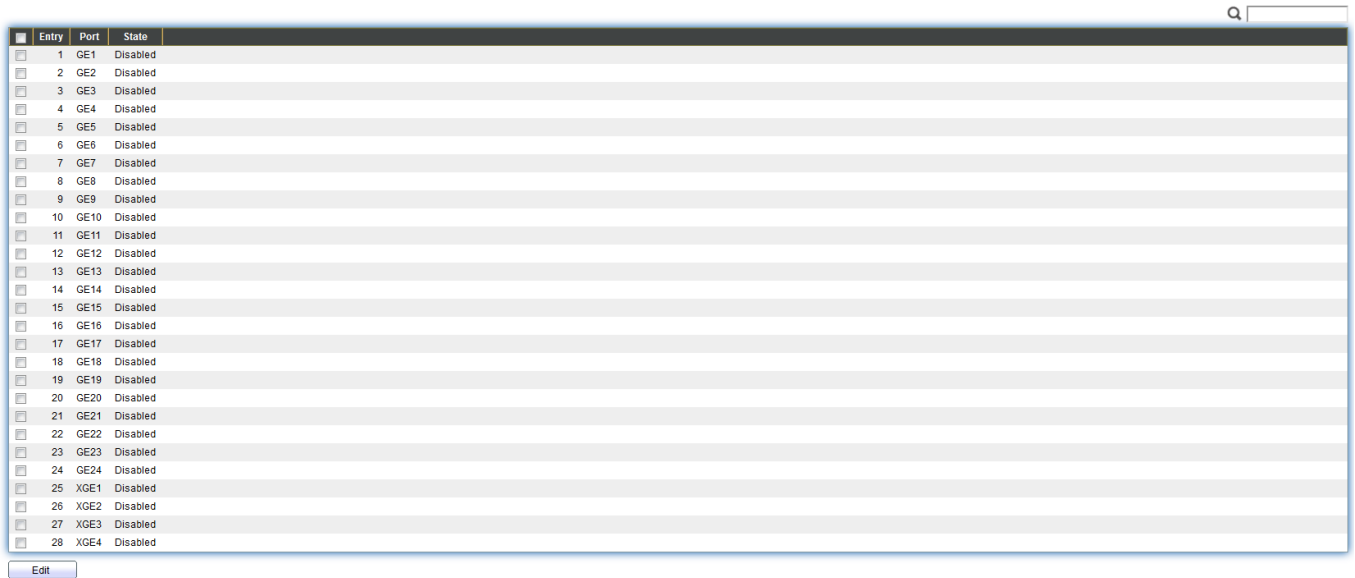

Entry	Port	State
<input type="checkbox"/>	1 GE1	Disabled
<input type="checkbox"/>	2 GE2	Disabled
<input type="checkbox"/>	3 GE3	Disabled
<input type="checkbox"/>	4 GE4	Disabled
<input type="checkbox"/>	5 GE5	Disabled
<input type="checkbox"/>	6 GE6	Disabled
<input type="checkbox"/>	7 GE7	Disabled
<input type="checkbox"/>	8 GE8	Disabled
<input type="checkbox"/>	9 GE9	Disabled
<input type="checkbox"/>	10 GE10	Disabled
<input type="checkbox"/>	11 GE11	Disabled
<input type="checkbox"/>	12 GE12	Disabled
<input type="checkbox"/>	13 GE13	Disabled
<input type="checkbox"/>	14 GE14	Disabled
<input type="checkbox"/>	15 GE15	Disabled
<input type="checkbox"/>	16 GE16	Disabled
<input type="checkbox"/>	17 GE17	Disabled
<input type="checkbox"/>	18 GE18	Disabled
<input type="checkbox"/>	19 GE19	Disabled
<input type="checkbox"/>	20 GE20	Disabled
<input type="checkbox"/>	21 GE21	Disabled
<input type="checkbox"/>	22 GE22	Disabled
<input type="checkbox"/>	23 GE23	Disabled
<input type="checkbox"/>	24 GE24	Disabled
<input type="checkbox"/>	25 XGE1	Disabled
<input type="checkbox"/>	26 XGE2	Disabled
<input type="checkbox"/>	27 XGE3	Disabled
<input type="checkbox"/>	28 XGE4	Disabled

Edit

Figure 111 - Security > DoS > Port Setting

Item	Description
Port	Interface or port number.
State	Enable/Disable the DoS protection on the interface.

III-10-8. DHCP Snooping

Use the DHCP Snooping pages to configure settings of DHCP Snooping.

III-10-8-1. Property

This page allow user to configure global and per interface settings of DHCP Snooping.

To display property page, click **Security > DHCP Snooping > Property**.

State ☐ Enable

Available VLAN **Selected VLAN**

VLAN 1

Apply

Port Setting Table

Q

<input type="checkbox"/>	Entry	Port	Trust	Verify Chaddr	Rate Limit
<input type="checkbox"/>	1	GE1	Disabled	Disabled	Unlimited
<input type="checkbox"/>	2	GE2	Disabled	Disabled	Unlimited
<input type="checkbox"/>	3	GE3	Disabled	Disabled	Unlimited
<input type="checkbox"/>	4	GE4	Disabled	Disabled	Unlimited
<input type="checkbox"/>	5	GE5	Disabled	Disabled	Unlimited
<input type="checkbox"/>	6	GE6	Disabled	Disabled	Unlimited
<input type="checkbox"/>	7	GE7	Disabled	Disabled	Unlimited
<input type="checkbox"/>	8	GE8	Disabled	Disabled	Unlimited
<input type="checkbox"/>	9	GE9	Disabled	Disabled	Unlimited
<input type="checkbox"/>	10	GE10	Disabled	Disabled	Unlimited
<input type="checkbox"/>	11	GE11	Disabled	Disabled	Unlimited
<input type="checkbox"/>	12	GE12	Disabled	Disabled	Unlimited
<input type="checkbox"/>	13	GE13	Disabled	Disabled	Unlimited
<input type="checkbox"/>	14	GE14	Disabled	Disabled	Unlimited
<input type="checkbox"/>	15	GE15	Disabled	Disabled	Unlimited
<input type="checkbox"/>	16	GE16	Disabled	Disabled	Unlimited
<input type="checkbox"/>	17	GE17	Disabled	Disabled	Unlimited
<input type="checkbox"/>	18	GE18	Disabled	Disabled	Unlimited
<input type="checkbox"/>	19	GE19	Disabled	Disabled	Unlimited

Figure 112 - Security > DHCP Snooping > Property

Item	Description
------	-------------

State	Set checkbox to enable/disable DHCP Snooping function.
VLAN	Select VLANs in left box then move to right to enable DHCP Snooping. Or select VLANs in right box then move to left to disable DHCP Snooping.
Port Setting Table	
Port	Display port ID.
Trust	Display enable/disabled trust attribute of interface.
Verify Chaddr	Display enable/disabled chaddr validation attribute of interface.
Rate Limit	Display rate limitation value of interface.

Click "**Edit**" button to view Edit Port Setting menu.

Edit Port Setting

Port: GE1

Trust: ☐ Enable

Verify Chaddr: ☐ Enable

Rate Limit: 0 pps (0 - 300, default 0), 0 is Unlimited

Apply Close


Figure 113 - Security > DHCP Snooping > Property > Edit Port Setting

Item	Description
Port	Display selected port to be edited
Trust	Set checkbox to enable/disabled trust of interface. All DHCP packet will be forward directly if enable trust. Default is disabled.
Verify Chaddr	Set checkbox to enable or disable chaddr validation of interface. All DHCP packets will be checked whether client hardware mac address is same as source mac in Ethernet header if enable chaddr validation. Default is disabled.
Rate Limit	Input rate limitation of DHCP packets. The unit is pps. 0 means unlimited. Default is unlimited.

III-10-8-2. Statistics

This page allow user to browse all statistics that recorded by DHCP snooping function.

To view the Statistics menu, navigate to **Security > DHCP Snooping > Statistics**.

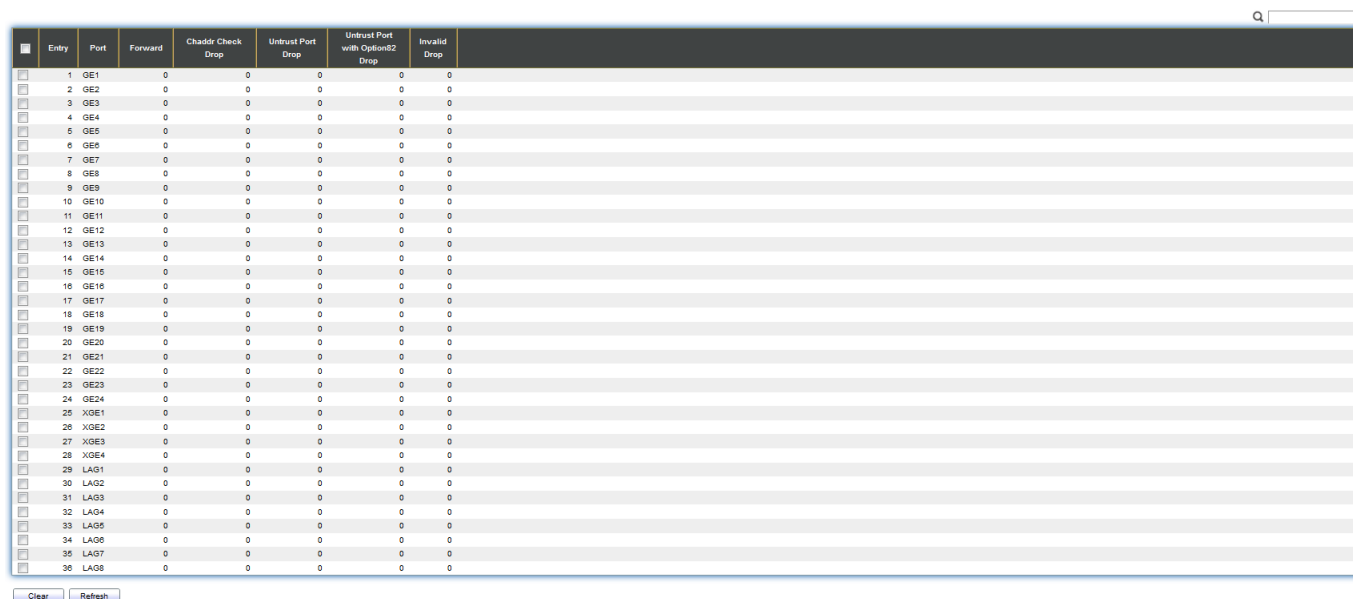

Entry	Port	Forward	Chaddr Check Drop	Untrust Port Drop	Untrust Port with Option82 Drop	Invalid Drop
1	GE1	0	0	0	0	0
2	GE2	0	0	0	0	0
3	GE3	0	0	0	0	0
4	GE4	0	0	0	0	0
5	GE5	0	0	0	0	0
6	GE6	0	0	0	0	0
7	GE7	0	0	0	0	0
8	GE8	0	0	0	0	0
9	GE9	0	0	0	0	0
10	GE10	0	0	0	0	0
11	GE11	0	0	0	0	0
12	GE12	0	0	0	0	0
13	GE13	0	0	0	0	0
14	GE14	0	0	0	0	0
15	GE15	0	0	0	0	0
16	GE16	0	0	0	0	0
17	GE17	0	0	0	0	0
18	GE18	0	0	0	0	0
19	GE19	0	0	0	0	0
20	GE20	0	0	0	0	0
21	GE21	0	0	0	0	0
22	GE22	0	0	0	0	0
23	GE23	0	0	0	0	0
24	GE24	0	0	0	0	0
25	XGE1	0	0	0	0	0
26	XGE2	0	0	0	0	0
27	XGE3	0	0	0	0	0
28	XGE4	0	0	0	0	0
29	LAG1	0	0	0	0	0
30	LAG2	0	0	0	0	0
31	LAG3	0	0	0	0	0
32	LAG4	0	0	0	0	0
33	LAG5	0	0	0	0	0
34	LAG6	0	0	0	0	0
35	LAG7	0	0	0	0	0
36	LAG8	0	0	0	0	0

Clear Refresh

Figure 114 - Security > DHCP Snooping > Statistics

Item	Description
Port	Display port ID.
Forwarded	Display how many packets forwarded normally.
Chaddr Check Drop	Display how many packets dropped by chaddr validation.
Untrusted Port Drop	Display how many DHCP server packets that are received by untrusted port dropped.
Untrusted Port with Option82 Drop	Display how many packets dropped by untrusted port with option82 checking.
Invalid Drop	Display how many packets dropped by invalid checking.

III-10-8-3. Option82 Property

This page allow user to set string of DHCP option82 remote ID filed. The string will attach in option82 if option inserted.

To display Option82 Property page, click **Security > DHCP Snooping > Option82 Property**.

Remote ID ☐ User Defined

Operational Status

Remote ID 74:da:38:17:6e:7a (Switch Mac in Byte Order)

Apply

Port Setting Table

Q

<input type="checkbox"/>	Entry	Port	State	Allow Untrust
<input type="checkbox"/>	1	GE1	Disabled	Drop
<input type="checkbox"/>	2	GE2	Disabled	Drop
<input type="checkbox"/>	3	GE3	Disabled	Drop
<input type="checkbox"/>	4	GE4	Disabled	Drop
<input type="checkbox"/>	5	GE5	Disabled	Drop
<input type="checkbox"/>	6	GE6	Disabled	Drop
<input type="checkbox"/>	7	GE7	Disabled	Drop
<input type="checkbox"/>	8	GE8	Disabled	Drop
<input type="checkbox"/>	9	GE9	Disabled	Drop
<input type="checkbox"/>	10	GE10	Disabled	Drop
<input type="checkbox"/>	11	GE11	Disabled	Drop
<input type="checkbox"/>	12	GE12	Disabled	Drop
<input type="checkbox"/>	13	GE13	Disabled	Drop
<input type="checkbox"/>	14	GE14	Disabled	Drop
<input type="checkbox"/>	15	GE15	Disabled	Drop
<input type="checkbox"/>	16	GE16	Disabled	Drop
<input type="checkbox"/>	17	GE17	Disabled	Drop
<input type="checkbox"/>	18	GE18	Disabled	Drop
<input type="checkbox"/>	19	GE19	Disabled	Drop
<input type="checkbox"/>	20	GE20	Disabled	Drop
<input type="checkbox"/>	21	GE21	Disabled	Drop
<input type="checkbox"/>	22	GE22	Disabled	Drop

Figure 115 - Security > DHCP Snooping > Option82 Property

Item	Description
User Defined	Set checkbox to enable user-defined remote-ID. By default, remote ID is switch mac in byte order.
Remote ID	Input user-defined remote ID. Only available when enable user-define remote ID.
Port Setting Table	
Port	Display port ID.
State	Display option82 enable/disable status of interface.
Allow untrusted	Display allow untrusted action of interface.

Click "**Edit**" button to view Edit Port Setting menu.

The screenshot shows the 'Edit Port Setting' dialog box. It contains the following elements:

- Port:** A text field displaying 'GE1'.
- State:** A checkbox labeled 'Enable'.
- Allow Untrust:** Three radio buttons labeled 'Keep', 'Drop' (selected), and 'Replace'.
- Buttons:** 'Apply' and 'Close' buttons at the bottom.

Figure 116 DHCP Snooping > Option82 Property > Edit Port Setting

Item	Description
Port	Display selected port to be edited
State	Set checkbox to enable/disable option82 function of interface.
Allow untrusted	Select the action perform when untrusted port receive DHCP packet has option82 filed. Default is drop. <ul style="list-style-type: none"> ● Keep: Keep original option82 content. ● Replace: Replace option82 content by switch setting ● Drop: Drop packets with option82

III-10-8-4. Option82 Circuit ID

This page allow user to set string of DHCP option82 circuit ID filed. The string will attach in option82 if option inserted.

To display Option82 Circuit ID page, click **Security > DHCP Snooping > Option82 Circuit ID**.

Option82 Circuit ID Table

Showing All entries

Showing 0 to 0 of 0 entries

	Port	VLAN	Circuit ID
0 results found.			

Add

Edit

Delete

First

Previous

1

Next

Last

Figure 117 - Security > DHCP Snooping > Option82 Circuit ID

Item	Description
Port	Display port ID of entry.
VLAN	Display associate VLAN of entry.
Circuit ID	Display circuit ID string of entry.

Click “**Add**” button or “**Edit**” button to view the Add/Edit Option82 Circuit ID menu.

Add Option82 Circuit ID

Port

GE1

VLAN

(1 - 4094) (Keep empty to set without VLAN)

Circuit ID

Apply

Close

Edit Option82 Circuit ID

Port

VLAN

Circuit ID

Apply

Close

Figure 118 - Security > DHCP Snooping > Option82 Circuit ID > Add/Edit Option82 Circuit ID

Item	Description
Port	Select port from list to associate to CID entry. Only available on Add dialog.
VLAN	Input VLAN ID to associate to circuit ID entry. VLAN ID is not mandatory. Only available on Add dialog.
Circuit ID	Input String as circuit ID. Packets match port and VLAN will be inserted circuit ID.


III-10-9. IP Source Guard

Use the IP Source Guard pages to configure settings of IP Source Guard.

III-10-9-1. Port Setting

Use the IP Source Guard pages to configure settings of IP Source Guard.

To display Port Setting page, click **Security > IP Source Guard > Port Setting**.

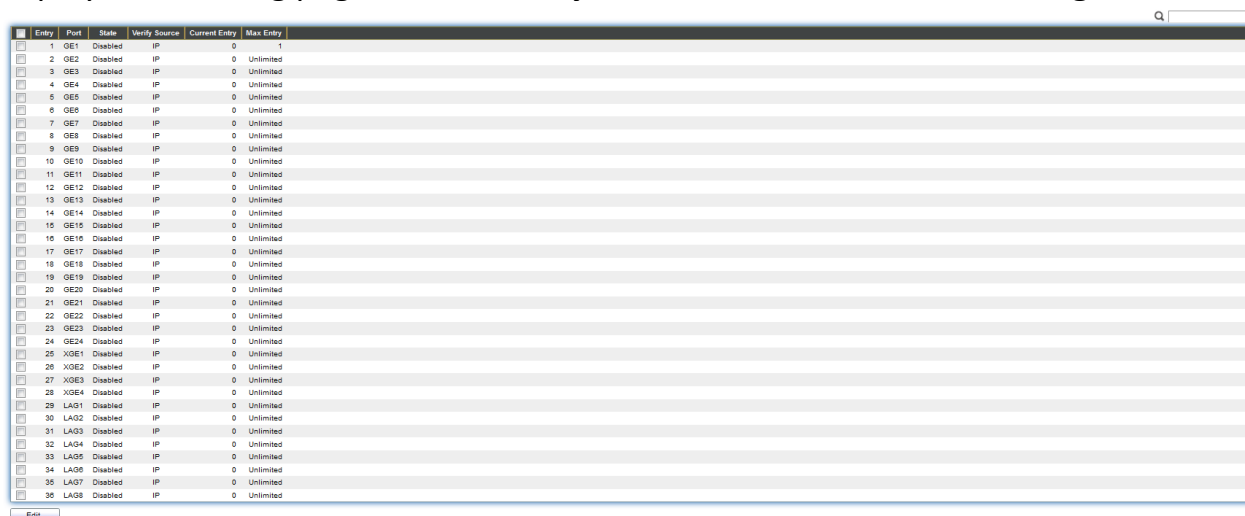

	Entry	Port	State	Verify Source	Current Entry	Max Entry
<input type="checkbox"/>	1	GE1	Disabled	IP	0	1
<input type="checkbox"/>	2	GE2	Disabled	IP	0	Unlimited
<input type="checkbox"/>	3	GE3	Disabled	IP	0	Unlimited
<input type="checkbox"/>	4	GE4	Disabled	IP	0	Unlimited
<input type="checkbox"/>	5	GE5	Disabled	IP	0	Unlimited
<input type="checkbox"/>	6	GE6	Disabled	IP	0	Unlimited
<input type="checkbox"/>	7	GE7	Disabled	IP	0	Unlimited
<input type="checkbox"/>	8	GE8	Disabled	IP	0	Unlimited
<input type="checkbox"/>	9	GE9	Disabled	IP	0	Unlimited
<input type="checkbox"/>	10	GE10	Disabled	IP	0	Unlimited
<input type="checkbox"/>	11	GE11	Disabled	IP	0	Unlimited
<input type="checkbox"/>	12	GE12	Disabled	IP	0	Unlimited
<input type="checkbox"/>	13	GE13	Disabled	IP	0	Unlimited
<input type="checkbox"/>	14	GE14	Disabled	IP	0	Unlimited
<input type="checkbox"/>	15	GE15	Disabled	IP	0	Unlimited
<input type="checkbox"/>	16	GE16	Disabled	IP	0	Unlimited
<input type="checkbox"/>	17	GE17	Disabled	IP	0	Unlimited
<input type="checkbox"/>	18	GE18	Disabled	IP	0	Unlimited
<input type="checkbox"/>	19	GE19	Disabled	IP	0	Unlimited
<input type="checkbox"/>	20	GE20	Disabled	IP	0	Unlimited
<input type="checkbox"/>	21	GE21	Disabled	IP	0	Unlimited
<input type="checkbox"/>	22	GE22	Disabled	IP	0	Unlimited
<input type="checkbox"/>	23	GE23	Disabled	IP	0	Unlimited
<input type="checkbox"/>	24	GE24	Disabled	IP	0	Unlimited
<input type="checkbox"/>	25	XGE1	Disabled	IP	0	Unlimited
<input type="checkbox"/>	26	XGE2	Disabled	IP	0	Unlimited
<input type="checkbox"/>	27	XGE3	Disabled	IP	0	Unlimited
<input type="checkbox"/>	28	XGE4	Disabled	IP	0	Unlimited
<input type="checkbox"/>	29	LAG1	Disabled	IP	0	Unlimited
<input type="checkbox"/>	30	LAG2	Disabled	IP	0	Unlimited
<input type="checkbox"/>	31	LAG3	Disabled	IP	0	Unlimited
<input type="checkbox"/>	32	LAG4	Disabled	IP	0	Unlimited
<input type="checkbox"/>	33	LAG5	Disabled	IP	0	Unlimited
<input type="checkbox"/>	34	LAG6	Disabled	IP	0	Unlimited
<input type="checkbox"/>	35	LAG7	Disabled	IP	0	Unlimited
<input type="checkbox"/>	36	LAG8	Disabled	IP	0	Unlimited

Figure 119 - Security > IP Source Guard > Port Setting

Item	Description
Port	Display port ID.
State	Display IP Source Guard enable/disable status of interface.
Verify Source	Display mode of IP Source Guard verification
Current Binding Entry	Display current binding entries of a interface.
Max Binding Entry	Display the number of maximum binding entry of interface.

Click "**Edit**" button to view the Edit Port Setting menu.

Figure 120 - Security > IP Source Guard > Port Setting > Edit Port Setting

Item	Description
Port	Display selected port to be edited.
Status	Set checkbox to enable or disable IP Source Guard function. Default is disabled.
Verify Source	Select the mode of IP Source Guard verification <ul style="list-style-type: none"> ● IP: Only verify source IP address of packet. ● IP-MAC: Verify source IP and source MAC address of packet.
Max Entry	Input the maximum number of entries that a port can be bounded. Default is un-limited on all ports. No entry will be bound if limitation reached.

III-10-9-2. IMPV Binding

This page allow user to add static IP source guard entry and browse all IP source guard entries that learned by DHCP snooping or statically create by user.

To display IPMV Binding page, click **Security > IP Source Guard > IMPV Binding**.

Figure 121 - Security > IP Source Guard > IMPV Binding

Item	Description
Port	Display port ID of entry.
VLAN	Display VLAN ID of entry.
MAC Address	Display MAC address of entry. Only available of IP-MAC binding entry.
IP Address	Display IP address of entry. Mask always to be 255.255.255.255 for IP-MAC binding. IP binding entry display user input.
Binding	Display binding type of entry.
Type	Type of existing binding entry <ul style="list-style-type: none"> ● Static: Entry added by user. ● Dynamic: Entry learned by DHCP snooping.
Lease Time	Lease time of DHCP Snooping learned entry. After lease time entry will be deleted. Only available of dynamic entry.

Click "**Add**" or "**Edit**" button to view the Add/Edit IP-MAC-Port-VLAN Binding menu.

Add IP-MAC-Port-VLAN Binding

Port

GE1 ▼

VLAN

(1 - 4094)

Binding

☒ IP-MAC-Port-VLAN
☐ IP-Port-VLAN

MAC Address

IP Address

/

Apply

Close

Edit IP-MAC-Port-VLAN Binding

Port

GE1 ▼

VLAN

20

Binding

IP-MAC-Port-VLAN

MAC Address

00:11:22:33:44:55

IP Address

/

Apply

Close

Figure 122 - Security > IP Source Guard > Add/Edit IP-MAC-Port-VLAN Binding

Item	Description
Port	Select port from list of a binding entry.
VLAN	Specify a VLAN ID of a binding entry.
Binding	Select matching mode of binding entry IP-MAC-Port-VLAN: packet must match IP address 、 MAC address 、 Port and VLAN ID. IP-Port-VLAN: packet must match IP address or subnet 、 Port and VLAN ID.
MAC Address	Input MAC address. Only available on IP-MAC-Port-VLAN mode.
IP Address	Input IP address and mask. Mask only available on IP-MAC-Port mode.

III-10-9-3. Save Database

This page allow user to configure DHCP snooping database which can backup and restore dynamic DHCP snooping entries.

To display Save Database page, click **Security > DHCP Snooping > Save Database**.

Figure 123 - Security > IP Source Guard > Save Database

Item	Description
Type	Select the type of database agent. <ul style="list-style-type: none"> ● None: Disable database agent service. ● Flash: Save DHCP dynamic binding entries to flash. ● TFTP: Save DHCP dynamic binding entries to remote TFTP server.

Filename	Input filename for backup file. Only available when selecting type “flash” and “TFTP”.
Address Type	Select the type of TFTP server. <ul style="list-style-type: none"> ● Hostname: TFTP server address is hostname. ● IPv4: TFTP server address is IPv4 address
Server Address	Input remote TFTP server hostname or IP address. Only available when selecting type “TFTP”
Write Delay	Input delay timer for doing backup after change happened. Default is 300 seconds.
Timeout	Input aborts timeout for doing backup failure. Default is 300 seconds.

III-11. ACL

Use the ACL pages to configure settings for the switch ACL features..

III-11-1. MAC ACL

This page allow user to add or delete ACL rule. A rule cannot be deleted if under binding.

To display MAC ACL page, click **ACL > MAC ACL**.

Figure 124 - ACL > MAC ACL

Item	Description
ACL Name	Input MAC ACL name.
ACL Name	Display MAC ACL name.
Rule	Display the number ACE rule of ACL.
Port	Display the port list that bind this ACL.

III-11-2. MAC ACE

This page allow user to add, edit or delete ACE rule. An ACE rule cannot be edited or deleted if ACL under binding. New ACE cannot be added if ACL under binding.

To display MAC ACE page, click **ACL > MAC ACE**.

ACE Table

ACL Name None ▾

Showing All ▾ entries Showing 0 to 0 of 0 entries

	Sequence	Action	Source MAC		Destination MAC		Ethertype	VLAN	802.1p		
			Address	Mask	Address	Mask			Value	Mask	
0 results found.											

First Previous 1 Next Last

Figure 125 - ACL > MAC ACE

Item	Description
ACL Name	Select the ACL name to which an ACE is being added.
Sequence	Display the sequence of ACE.
Action	Display the action of ACE.
Source MAC	Display the source MAC address and mask of ACE.
Destination MAC	Display the destination MAC address and mask of ACE.
Ethertype	Display the Ethernet frame type of ACE.
VLAN ID	Display the VLAN ID of ACE.
802.1p Value	Display the 802.1p value of ACE.
802.1p Mask	Display the 802.1p mask of ACE.

Click “**Edit**” button to view the Edit ACE menu.

Edit ACE

ACL Name	666
Sequence	555
Action	<input checked="" type="radio"/> Permit <input type="radio"/> Deny <input type="radio"/> Shutdown
Source MAC	<input checked="" type="checkbox"/> Any <input type="text"/> / <input type="text"/> (Address / Mask)
Destination MAC	<input checked="" type="checkbox"/> Any <input type="text"/> / <input type="text"/> (Address / Mask)
Ethertype	<input checked="" type="checkbox"/> Any 0x <input type="text"/> (0x600 ~ 0xFFFF)
VLAN	<input checked="" type="checkbox"/> Any <input type="text"/> (1 - 4094)
802.1p	<input checked="" type="checkbox"/> Any <input type="text"/> / <input type="text"/> (Value / Mask) (0 - 7)

Apply Close

Figure 126 - ACL > Edit ACE

Item	Description
ACL Name	Display the ACL name to which an ACE is being added..
Sequence	Specify the sequence of the ACE. ACEs with higher sequence are processed first (1 is the highest priority). Only available on Add Dialog.
Action	Select the action after ACE match packet. <ul style="list-style-type: none"> ● Permit: Forward packets that meet the ACE criteria. ● Deny: Drop packets that meet the ACE criteria. ● Shutdown: Drop packets that meet the ACE criteria, and disable the port from where the packets were received. Such ports can be reactivated from the Port Settings page.
Source MAC	Select the type for source MAC address. <ul style="list-style-type: none"> ● Any: All source addresses are acceptable. ● User Defined: Only a source address or a range of source addresses which users define are acceptable. Enter the source MAC address and mask to which will be matched.

Destination MAC	<p>Select the type for Destination MAC address.</p> <ul style="list-style-type: none"> Any: All destination addresses are acceptable. User Defined: Only a destination address or a range of destination addresses which users define are acceptable. Enter the destination MAC address and mask to which will be matched.
Ethertype	<p>Select the type for Ethernet frame type.</p> <ul style="list-style-type: none"> Any: All Ethernet frame type is acceptable. User Defined: Only an Ethernet frame type which users define is acceptable. Enter the Ethernet frame type value to which will be matched.
VLAN	<p>Select the type for VLAN ID.</p> <ul style="list-style-type: none"> Any: All VLAN ID is acceptable. User Defined: Only a VLAN ID which users define is acceptable. Enter the VLAN ID to which will be matched.
802.1p	<p>Select the type for 802.1p value.</p> <ul style="list-style-type: none"> Any: All 802.1p value is acceptable. User Defined: Only an 802.1p value or a range of 802.1p value which users define is acceptable. Enter the 802.1p value and mask to which will be matched.

III-11-3. IPv4 ACL

This page allow user to add or delete IPv4 ACL rule. A rule cannot be deleted if under binding.

To display IPv4 ACL page, click **ACL > IPv4 ACL**.

ACL Name

Apply

ACL Table

Showing All entries Showing 0 to 0 of 0 entries

ACL Name	Rule	Port
0 results found.		

Delete

First Previous 1 Next Last

Figure 127 - ACL > IPv4 ACL

Item	Description
ACL Name	Input IPv4 ACL name.
ACL Name	Display IPv4 ACL name.
Rule	Display the number ACE rule of ACL.
Port	Display the port list that bind this ACL.

III-11-4. IPv4 ACE

This page allow user to add, edit or delete ACE rule. An ACE rule cannot be edited or deleted if ACL under binding. New ACE cannot be added if ACL under binding.

To display IPv4 ACE page, click **ACL > IPv4 ACE**.

Figure 128 - ACL > IPv4 ACE

Item	Description
ACL Name	Select the ACL name to which an ACE is being added.
Sequence	Display the sequence of ACE.
Action	Display the action of ACE.
Protocol	Display the protocol value of ACE.
Source IP	Display the source IP address and mask of ACE.
Destination IP	Display the destination IP address and mask of ACE.
Source Port	Display single source port or a range of source ports of ACE. Only available when protocol is TCP or UDP.
Destination Port	Display single destination port or a range of destination ports of ACE. Only available when protocol is TCP or UDP.
TCP Flags	Display the TCP flag value if ACE. Only available when protocol is TCP.
Type of Service	Display the ToS value of ACE which could be DSCP or IP Precedence.
ICMP	Display the ICMP type and code of ACE. Only available when protocol is ICMP.

Click "Add" or "Edit" button to view the Add/Edit ACE menu.

Edit ACE

ACL Name	777
Sequence	888
Action	<input checked="" type="radio"/> Permit <input type="radio"/> Deny <input type="radio"/> Shutdown
Protocol	<input checked="" type="radio"/> Any <input type="radio"/> Select <input type="text" value="ICMP"/> <input type="radio"/> Define <input type="text" value=""/> (0 - 255)
Source IP	<input checked="" type="checkbox"/> Any <input type="text" value=""/> / <input type="text" value=""/> (Address / Mask)
Destination IP	<input checked="" type="checkbox"/> Any <input type="text" value=""/> / <input type="text" value=""/> (Address / Mask)
Type of Service	<input checked="" type="radio"/> Any <input type="radio"/> DSCP <input type="text" value=""/> (0 - 63) <input type="radio"/> IP Precedence <input type="text" value=""/> (0 - 7)
Source Port	<input checked="" type="radio"/> Any <input type="radio"/> Single <input type="text" value=""/> (0 - 65535) <input type="radio"/> Range <input type="text" value=""/> - <input type="text" value=""/> (0 - 65535)
Destination Port	<input checked="" type="radio"/> Any <input type="radio"/> Single <input type="text" value=""/> (0 - 65535) <input type="radio"/> Range <input type="text" value=""/> - <input type="text" value=""/> (0 - 65535)
TCP Flags	Urg: <input type="radio"/> Set <input type="radio"/> Unset <input checked="" type="radio"/> Don't care Ack: <input type="radio"/> Set <input type="radio"/> Unset <input checked="" type="radio"/> Don't care Psh: <input type="radio"/> Set <input type="radio"/> Unset <input checked="" type="radio"/> Don't care Rst: <input type="radio"/> Set <input type="radio"/> Unset <input checked="" type="radio"/> Don't care Syn: <input type="radio"/> Set <input type="radio"/> Unset <input checked="" type="radio"/> Don't care Fin: <input type="radio"/> Set <input type="radio"/> Unset <input checked="" type="radio"/> Don't care
ICMP Type	<input checked="" type="radio"/> Any <input type="radio"/> Select <input type="text" value="Echo Reply"/> <input type="radio"/> Define <input type="text" value=""/> (0 - 255)
ICMP Code	<input checked="" type="radio"/> Any <input type="radio"/> Define <input type="text" value=""/> (0 - 255)

Apply
Close

Figure 129 - ACL > Add/Edit ACE

Item	Description
ACL Name	Display the ACL name to which an ACE is being added.
Sequence	Specify the sequence of the ACE. ACEs with higher sequence are processed first (1 is the highest sequence). Only available on Add dialog.
Action	<p>Select the action for a match.</p> <ul style="list-style-type: none"> ● Permit: Forward packets that meet the ACE criteria. ● Deny: Drop packets that meet the ACE criteria. ● Shutdown: Drop packets that meet the ACE criteria, and disable the port from where the packets were received. Such ports can be reactivated from the Port Settings page.
Protocol	<p>Select the type of protocol for a match.</p> <ul style="list-style-type: none"> ● Any (IP): All IP protocols are acceptable. ● Select from list: Select one of the following protocols from the drop-down list. ICMP/IPinIP/TCP/EGP/IGP/UDP/HMP/RDP/IPV6/IPV6:ROUT/IPV6:FRAG/RSVP/IPV6:ICMP/OSPF/PIM/L2TP ● Protocol ID to match: Enter the protocol ID.
Source IP	<p>Select the type for source IP address.</p> <ul style="list-style-type: none"> ● Any: All source addresses are acceptable. ● User Defined: Only a source address or a range of source addresses which users define are acceptable. Enter the source IP address value and mask to which will be matched.
Destination IP	<p>Select the type for destination IP address.</p> <ul style="list-style-type: none"> ● Any: All destination addresses are acceptable. ● User Defined: Only a destination address or a range of destination addresses which users define are acceptable. Enter the destination IP address value and mask to which will be matched.
Source Port	<p>Select the type of protocol for a match. Only available when protocol is TCP or UDP.</p> <ul style="list-style-type: none"> ● Any: All source ports are acceptable. ● Single: Enter a single TCP/UDP source port to which packets are matched. ● Range: Select a range of TCP/UDP source ports to which the packet is matched. There are eight different port ranges that can be configured (shared between source and destination ports). TCP and UDP protocols each have eight port ranges.
Destination Port	<p>Select the type of protocol for a match. Only available when protocol is TCP or UDP.</p> <ul style="list-style-type: none"> ● Any: All source ports are acceptable. ● Single: Enter a single TCP/UDP source port to which packets are matched.

	<ul style="list-style-type: none"> ● Range: Select a range of TCP/UDP source ports to which the packet is matched. There are eight different port ranges that can be configured (shared between source and destination ports). TCP and UDP protocols each have eight port ranges.
TCP Flags	Select one or more TCP flags with which to filter packets. Filtered packets are either forwarded or dropped. Filtering packets by TCP flags increases packet control, which increases network security. Only available when protocol is TCP.
Type of Service	Select the type of service for a match. <ul style="list-style-type: none"> ● Any: All types of service are acceptable. ● DSCP to match: Enter a Differentiated Services Code Point (DSCP) to match. ● IP Precedence to match: Enter a IP Precedence to match.
ICMP Type	Either select the message type by name or enter the message type number. Only available when protocol is ICMP. <ul style="list-style-type: none"> ● Any: All message types are acceptable. ● Select from list: Select message type by name. ● Protocol ID to match: Enter the number of message type.
ICMP Code	Select the type for ICMP code. Only available when protocol is ICMP. <ul style="list-style-type: none"> ● Any: All codes are acceptable. ● User Defined: Enter an ICMP code to match.

III-11-5. ACL Binding

This page allow user to bind or unbind ACL rule to or from interface. IPv4 and Ipv6 ACL cannot be bound to the same port simultaneously.

To display ACL Binding page, click **ACL > ACL Binding**.

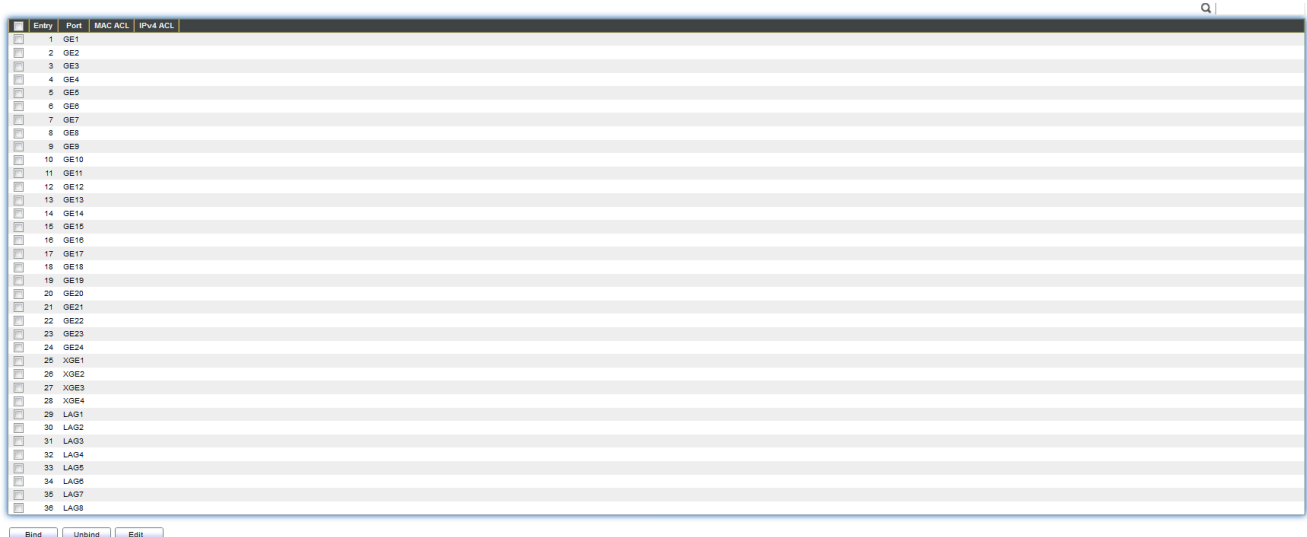


Figure 130 - ACL > ACL Binding

Item	Description
Port	Display port entry ID.
MAC ACL	Display mac ACL name that bound of interface. Empty means no rule bound.
IPv4 ACL	Display ipv4 ACL name that bound of interface. Empty means no rule bound.
IPv6 ACL	Display ipv6 ACL name that bound of interface. Empty means no rule bound.

Click “**Edit**” button to view the Edit ACL Binding menu.

Add ACL Binding

Port	GE1
MAC ACL	None ▼
IPv4 ACL	None ▼
IPv6 ACL	None ▼

Note: ACL without any rules cannot be bound

Apply Close

Figure 131 - ACL > Edit ACL Binding

Item	Description
Port	Display port entry ID.
MAC ACL	Select mac ACL name from list to bind.
IPv4 ACL	Select IPv4 ACL name from list to bind.
IPv6 ACL	Select IPv6 ACL name from list to bind.

III-12. QoS

Use the QoS pages to configure settings for the switch QoS interface.

III-12-1. General

Use the QoS general pages to configure settings for general purpose.

III-12-1-1. Property

To display Property web page, click **QoS > General > Property**.

State

☐ Enable

Trust Mode

☒ CoS

☐ IP Precedence

Entry	Port	CoS	Trust	CoS	IP Precedence	Remark
1	GE1	0	Enabled	Disabled	Disabled	
2	GE2	0	Enabled	Disabled	Disabled	
3	GE3	0	Enabled	Disabled	Disabled	
4	GE4	0	Enabled	Disabled	Disabled	
5	GE5	0	Enabled	Disabled	Disabled	
6	GE6	0	Enabled	Disabled	Disabled	
7	GE7	0	Enabled	Disabled	Disabled	
8	GE8	0	Enabled	Disabled	Disabled	
9	GE9	0	Enabled	Disabled	Disabled	
10	GE10	0	Enabled	Disabled	Disabled	
11	GE11	0	Enabled	Disabled	Disabled	
12	GE12	0	Enabled	Disabled	Disabled	
13	GE13	0	Enabled	Disabled	Disabled	
14	GE14	0	Enabled	Disabled	Disabled	
15	GE15	0	Enabled	Disabled	Disabled	
16	GE16	0	Enabled	Disabled	Disabled	
17	GE17	0	Enabled	Disabled	Disabled	
18	GE18	0	Enabled	Disabled	Disabled	
19	GE19	0	Enabled	Disabled	Disabled	
20	GE20	0	Enabled	Disabled	Disabled	
21	GE21	0	Enabled	Disabled	Disabled	
22	GE22	0	Enabled	Disabled	Disabled	
23	GE23	0	Enabled	Disabled	Disabled	
24	GE24	0	Enabled	Disabled	Disabled	
25	XGE1	0	Enabled	Disabled	Disabled	
26	XGE2	0	Enabled	Disabled	Disabled	
27	XGE3	0	Enabled	Disabled	Disabled	
28	XGE4	0	Enabled	Disabled	Disabled	
29	LAG1	0	Enabled	Disabled	Disabled	
30	LAG2	0	Enabled	Disabled	Disabled	
31	LAG3	0	Enabled	Disabled	Disabled	
32	LAG4	0	Enabled	Disabled	Disabled	
33	LAG5	0	Enabled	Disabled	Disabled	
34	LAG6	0	Enabled	Disabled	Disabled	
35	LAG7	0	Enabled	Disabled	Disabled	
36	LAG8	0	Enabled	Disabled	Disabled	

Figure 132 - QoS > General > Property

Item	Description
State	Set checkbox to enable/disable QoS.
Trust	Select QoS trust mode <ul style="list-style-type: none"> CoS: Traffic is mapped to queues based on the CoS field in the VLAN tag, or based on the per-port default CoS value (if there is no VLAN tag on the incoming packet), the actual mapping of the CoS to queue can be configured on port setting dialog. CoS-DSCP: Uses the trust CoS mode for non-IP traffic and trust DSCP mode for IP traffic. IP Precedence: Traffic is mapped to queues based on the IP precedence. The actual mapping of the IP precedence to queue can be configured on the IP Precedence mapping page.
Port Setting Table	
Port	Port name
CoS	Port default CoS priority value for the selected ports.

Trust	Port trust state <ul style="list-style-type: none"> ● Enabled: Traffic will follow trust mode in global setting ● Disabled: Traffic will always use best efforts
Remarking (CoS)	Set checkbox to enable/disable port CoS remarking. <ul style="list-style-type: none"> ● Enabled: CoS remarking is enabled ● Disabled: CoS remarking is disabled
Remarking (IP Precedence)	Set checkbox to enable/disable port IP Precedence remarking. <ul style="list-style-type: none"> ● Enabled: DSCP remarking is enabled ● Disabled: DSCP remarking is disabled

Click "**Edit**" button to view the Edit Port Setting menu.

Figure 133 - Qos > General > Property

Item	Description
Port	Selected port list.
CoS	Set default CoS/802.1p priority value for the selected ports.
Trust	Set checkbox to enable/disable port trust state.
Remarking (CoS)	Set checkbox to enable/disable port CoS remarking.
Remarking (IP Precedence)	Set checkbox to enable/disable port IP Precedence remarking.

III-12-1-2. Queue Scheduling

The switch supports eight queues for each interface. Queue number 8 is the highest priority queue.

Queue number 1 is the lowest priority queue. There are two ways of determining how traffic in queues is handled, Strict Priority (SP) and Weighted Round Robin (WRR).

- **Strict Priority (SP)**—Egress traffic from the highest priority queue is transmitted first. Traffic from the lower queues is processed only after the highest queue has been transmitted, which provide the highest level of priority of traffic to the highest numbered queue.
- **Weighted Round Robin (WRR)**—In WRR mode the number of packets sent from the queue is proportional to the weight of the queue (the higher the weight, the more frames are sent).

The queuing modes can be selected on the Queue page. When the queuing mode is by Strict Priority, the priority sets the order in which queues are serviced, starting with queue_8 (the highest priority queue) and going to the next lower queue when each queue is completed.

When the queuing mode is Weighted Round Robin, queues are serviced until their quota has been used up and then another queue is serviced. It is also possible to assign some of the lower queues to WRR, while keeping some of the higher queues in Strict Priority. In this case traffic for the SP queues is always sent before traffic from the WRR queues. After the SP queues have been emptied, traffic from the WRR queues is forwarded. (The relative portion from each WRR queue depends on its weight).

To display Queue Scheduling web page, click **QoS > General > Queue Scheduling**

Queue Scheduling Table

Queue	Method			
	Strict Priority	WRR	Weight	WRR Bandwidth (%)
1	<input checked="" type="radio"/>	<input type="radio"/>	1	
2	<input checked="" type="radio"/>	<input type="radio"/>	2	
3	<input checked="" type="radio"/>	<input type="radio"/>	3	
4	<input checked="" type="radio"/>	<input type="radio"/>	4	
5	<input checked="" type="radio"/>	<input type="radio"/>	5	
6	<input checked="" type="radio"/>	<input type="radio"/>	9	
7	<input checked="" type="radio"/>	<input type="radio"/>	13	
8	<input checked="" type="radio"/>	<input type="radio"/>	15	

Figure 134 - QoS > General > Queue Scheduling

Item	Description
Queue	Queue ID to configure.
Strict Priority	Set queue to strict priority type.
WRR	Set queue to Weight round robin type.
Weight	If the queue type is WRR, set the queue weight for the queue.
WRR Bandwidth	Percentage of WRR queue bandwidth.

III-12-1-3. CoS Mapping

The CoS to Queue table determines the egress queues of the incoming packets based on the 802.1p priority in their VLAN tags. For incoming untagged packets, the 802.1p priority will be the default CoS/802.1p priority assigned to the ingress ports. Use the Queues to CoS table to remark the CoS/802.1p priority for egress traffic from each queue.

To display CoS Mapping web page, click **QoS > General > CoS Mapping**.

CoS to Queue Mapping

CoS	Queue
0	2 ▼
1	1 ▼
2	3 ▼
3	4 ▼
4	5 ▼
5	6 ▼
6	7 ▼
7	8 ▼

Apply

Queue to CoS Mapping

Queue	CoS
1	1 ▼
2	0 ▼
3	2 ▼
4	3 ▼
5	4 ▼
6	5 ▼
7	6 ▼
8	7 ▼

Apply

Figure 135 - QoS > General > Cos Mapping

Item	Description
CoS to Queue Mapping	
CoS	CoS value.
Queue	Select queue id for the CoS value.
Queue to CoS Mapping	
Queue	Queue ID
CoS	Select CoS value for the queue id.

III-12-1-4. IP Precedence Mapping

This page allow user to configure IP Precedence to Queue mapping and Queue to IP Precedence mapping.

To display IP Precedence Mapping web page, click **QoS > General > IP Precedence Mapping**.

IP Precedence to Queue Mapping

IP Precedence	Queue
0	1 ▼
1	2 ▼
2	3 ▼
3	4 ▼
4	5 ▼
5	6 ▼
6	7 ▼
7	8 ▼

Apply

Queue to IP Precedence Mapping

Queue	IP Precedence
1	0 ▼
2	1 ▼
3	2 ▼
4	3 ▼
5	4 ▼
6	5 ▼
7	6 ▼
8	7 ▼

Apply

Figure 136 - QoS > General > IP Precedence Mapping

Item	Description
IP Precedence to Queue Mapping	
IP Precedence	IP Precedence value.
Queue	Queue value which IP Precedence is mapped.
Queue to IP Precedence Mapping	
Queue	Queue ID.
IP Precedence	IP Precedence value which queue is mapped.

III-12-2. Rate Limit

Use the Rate Limit pages to define values that determine how much traffic the switch can receive and send on specific port or queue.

III-12-2-1. Ingress/Egress Port

This page allow user to configure ingress port rate limit and egress port rate limit. The ingress rate limit is the number of bits per second that can be received from the ingress interface. Excess bandwidth above this limit is discarded.

To display Ingress / Egress Port web page, click **QoS > Rate Limit > Ingress / Egress Port**.

Entry	Port	Ingress		Egress	
		State	Rate (Kbps)	State	Rate (Kbps)
<input type="checkbox"/>	1 GE1	Enabled	10000	Enabled	10000
<input type="checkbox"/>	2 GE2	Disabled		Disabled	
<input type="checkbox"/>	3 GE3	Disabled		Disabled	
<input type="checkbox"/>	4 GE4	Disabled		Disabled	
<input type="checkbox"/>	5 GE5	Disabled		Disabled	
<input type="checkbox"/>	6 GE6	Disabled		Disabled	
<input type="checkbox"/>	7 GE7	Disabled		Disabled	
<input type="checkbox"/>	8 GE8	Disabled		Disabled	
<input type="checkbox"/>	9 GE9	Disabled		Disabled	
<input type="checkbox"/>	10 GE10	Disabled		Disabled	
<input type="checkbox"/>	11 GE11	Disabled		Disabled	
<input type="checkbox"/>	12 GE12	Disabled		Disabled	
<input type="checkbox"/>	13 GE13	Disabled		Disabled	
<input type="checkbox"/>	14 GE14	Disabled		Disabled	
<input type="checkbox"/>	15 GE15	Disabled		Disabled	
<input type="checkbox"/>	16 GE16	Disabled		Disabled	
<input type="checkbox"/>	17 GE17	Disabled		Disabled	
<input type="checkbox"/>	18 GE18	Disabled		Disabled	
<input type="checkbox"/>	19 GE19	Disabled		Disabled	
<input type="checkbox"/>	20 GE20	Disabled		Disabled	
<input type="checkbox"/>	21 GE21	Disabled		Disabled	
<input type="checkbox"/>	22 GE22	Disabled		Disabled	
<input type="checkbox"/>	23 GE23	Disabled		Disabled	
<input type="checkbox"/>	24 GE24	Disabled		Disabled	
<input type="checkbox"/>	25 XGE1	Disabled		Disabled	
<input type="checkbox"/>	26 XGE2	Disabled		Disabled	
<input type="checkbox"/>	27 XGE3	Disabled		Disabled	
<input type="checkbox"/>	28 XGE4	Disabled		Disabled	

Edit

Figure 137 - QoS > Rate Limit > Ingress / Egress Port

Item	Description
Port	Port name.
Ingress (State)	Port ingress rate limit state <ul style="list-style-type: none"> ● Enabled: Ingress rate limit is enabled ● Disabled: Ingress rate limit is disabled
Ingress (Rate)	Port ingress rate limit value if ingress rate state is enabled.
IP Precedence	IP Precedence value which queue is mapped.
Egress (State)	Port egress rate limit state <ul style="list-style-type: none"> ● Enabled: Egress rate limit is enabled ● Disabled: Egress rate limit is disabled
Egress (Rate)	Port egress rate limit value if egress rate state is enabled.

Click "**Edit**" button to view the Ingress / Egress Port menu.

Figure 138 - QoS > Rate Limit > Ingress / Egress Port

Item	Description
Port	Select port list.
Ingress	Set checkbox to enable/disable ingress rate limit. If ingress rate limit is enabled, rate limit value need to be assigned.
Egress	Set checkbox to enable/disable egress rate limit. If egress rate limit is enabled, rate limit value need to be assigned.

III-13. Diagnostics

Use the Diagnostics pages to configure settings for the switch diagnostics feature or operating diagnostic utilities.

III-13-1. Logging

III-13-1-1. Property

To enable/disable the logging service, click **Diagnostic > Logging > Property**.

The screenshot shows the 'Logging Property' configuration window. It is divided into four main sections: Global Logging, Console Logging, RAM Logging, and Flash Logging. Each section has a 'State' checkbox and a 'Minimum Severity' dropdown menu. The 'State' checkboxes for Global, Console, and RAM logging are checked, while the 'Flash Logging' checkbox is unchecked. All 'Minimum Severity' dropdowns are set to 'Notice'. A note below each dropdown lists the severity levels: Emergency, Alert, Critical, Error, Warning, Notice. An 'Apply' button is at the bottom left.

Section	State	Minimum Severity	Note
Global Logging	<input checked="" type="checkbox"/> Enable	Notice	Note: Emergency, Alert, Critical, Error, Warning, Notice
Console Logging	<input checked="" type="checkbox"/> Enable	Notice	Note: Emergency, Alert, Critical, Error, Warning, Notice
RAM Logging	<input checked="" type="checkbox"/> Enable	Notice	Note: Emergency, Alert, Critical, Error, Warning, Notice
Flash Logging	<input type="checkbox"/> Enable	Notice	Note: Emergency, Alert, Critical, Error, Warning, Notice

Apply

Figure 139 - Diagnostics > Logging > Property

Item	Description
State	Enable/Disable the global logging services. When the logging service is enabled, logging configuration of each destination rule can be individually configured. If the logging service is disabled, no messages will be sent to these destinations.
Console Logging	
State	Enable/Disable the console logging service
Minimum Severity	The minimum severity for the console logging.
RAM Logging	
State	Enable/Disable the RAM logging service.
Minimum Severity	The minimum severity for the RAM logging.
Flash Logging	
State	Enable/Disable the flash logging service.
Minimum Severity	The minimum severity for the flash login.

III-13-1-2. Remote Server

To configure the remote logging server, click **Diagnostic > Logging > Remote Server**.

Remote Server Table

Search:

Entry	Server Address	Server Port	Facility	Minimum Severity
0 results found.				

Figure 140 - Diagnostics > Logging > Remote Server

Item	Description
Server Address	The IP address of the remote logging server.
Server Ports	The port number of the remote logging server.
Facility	The facility of the logging messages. It can be one of the following values: local0, local1, local2, local3, local4, local5, local6, and local7.
Minimum Severity	<ul style="list-style-type: none">● Emergence: System is not usable.● Alert: Immediate action is needed.● Critical: System is in the critical condition.● Error: System is in error condition● Warning: System warning has occurred● Notice: System is functioning properly, but a system notice has occurred.● Informational: Device information.● Debug: Provides detailed information about an event.

III-13-2. Mirroring

To display Port Mirroring web page, click **Diagnostics > Mirroring**.

Mirroring Table

Q

	Session ID	State	Monitor Port	Ingress Port	Egress Port
<input type="radio"/>	1	Disabled	---	---	---
<input type="radio"/>	2	Disabled	---	---	---
<input type="radio"/>	3	Disabled	---	---	---
<input type="radio"/>	4	Disabled	---	---	---

*** Allow the monitor port to send or receive normal packets

Figure 141 - Diagnostics > Mirroring

Item	Description
Session ID	Select mirror session ID.
State	Select mirror session state : port-base mirror or disable <ul style="list-style-type: none">● Enabled: Enable port based mirror● Disabled: Disable mirror.
Monitor Port	Select mirror session monitor port, and select whether normal packet could be sent or received by monitor port.
Ingress port	Select mirror session source rx ports.
Egress port	Select mirror session source tx ports.

Click "**Edit**" button to view the Edit Mirroring menu.

Edit Mirroring

Session ID: 1

State: ☐ Enable

Monitor Port: GE1 ▼

☐ Send or Receive Normal Packet

Ingress Port

Available Port: GE1, GE2, GE3, GE4, GE5, GE6, GE7, GE8

Selected Port:

Egress Port

Available Port: GE1, GE2, GE3, GE4, GE5, GE6, GE7, GE8

Selected Port:

Apply Close

Figure 142 - Diagnostics > Mirroring > Edit Mirroring

Item	Description
Session ID	Selected mirror session ID.
State	Select mirror session state : port-base mirror or disable <ul style="list-style-type: none"> ● Enabled: Enable port based mirror ● Disabled: Disable mirror.
Monitor Port	Select mirror session monitor port, and select whether normal packet could be sent or received by monitor port.
Ingress port	Select mirror session source rx ports.
Egress port	Select mirror session source tx ports.

III-13-3. Ping

For the ping functionality, click **Diagnostic > Ping**.

Address Type

☒ Hostname
☐ IPv4
☐ IPv6

Server Address

Count

Sec (1 - 65535)

Ping Result

Packet Status	
Status	N/A
Transmit Packet	0
Receive Packet	0
Packet Lost	0%

Round Trip Time	
Min	0.0 ms
Max	0.0 ms
Average	0.0 ms

Figure 143 - Diagnostics > Ping

Item	Description
Address Type	Specify the address type to “Hostname” or “IPv4”.
Server Address	Specify the Hostname/IPv4 address for the remote logging server.
Count	Specify the numbers of each ICMP ping request.

III-13-4. Traceroute

For trace route functionality, click **Diagnostic > Traceroute**.

Address Type

☒ Hostname
☐ IPv4

Server Address

Time to Live

☐ User Defined

(2 - 255, default 30)

Apply

Stop


Traceroute Result

Figure 144 - Diagnostics > Traceroute

Item	Description
Address Type	Specify the address type to “Hostname” or “IPv4”.
Server Address	Specify the Hostname/IPv4 address for the remote logging server.
Time to Live	Specify the max hops of hosts for traceroute.

III-13-5. Copper Test

For copper length diagnostic, click **Diagnostic > Copper Test**.

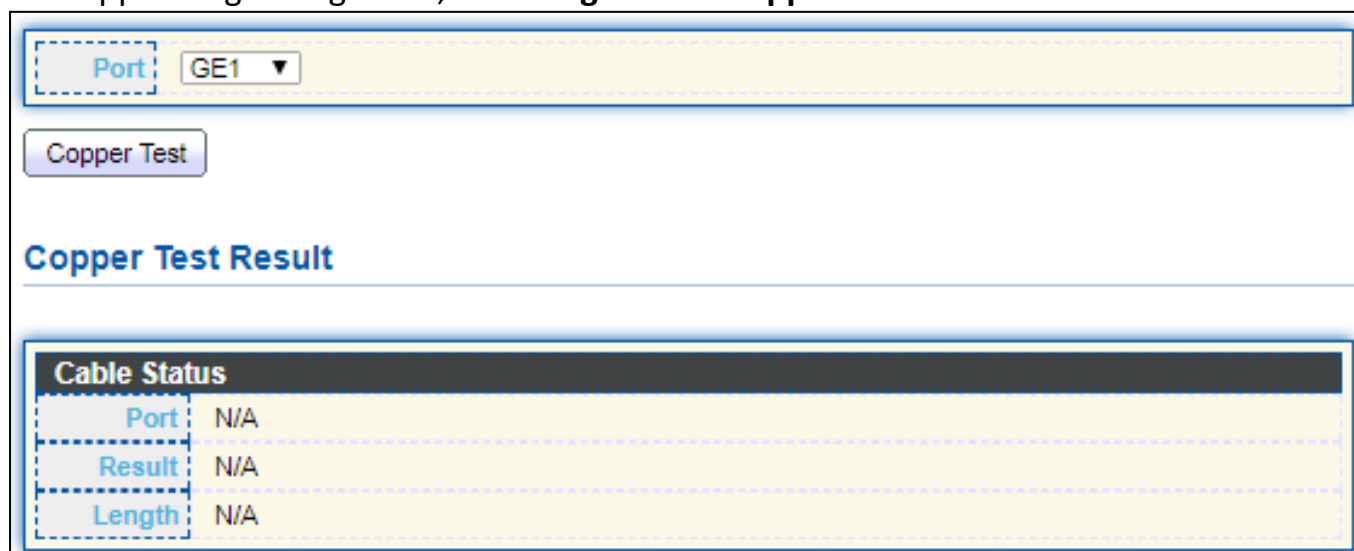

Cable Status	
Port	N/A
Result	N/A
Length	N/A

Figure 145 - Diagnostics > Logging>Copper Test

Item	Description
Port	Specify the interface for the copper test.
Copper Test Result	
Port	The interface for the copper test.
Result	The status of copper test. It include: <ul style="list-style-type: none">● OK: Correctly terminated pair.● Short Cable: Shorted pair.● Open Cable: Open pair, no link partner.● Impedance Mismatch: Terminating impedance is not in the reference range.
Length	Distance in meter from the port to the location on the cable where the fault was discovered.

III-13-6. Fiber Module

The Optical Module Status page displays the operational information reported by the Small Form-factor Pluggable (SFP) transceiver. Some information may not be available for SFPs without the supports of digital diagnostic monitoring standard SFF-8472.

To display the Optical Module Diagnostic page, click **Diagnostic > Fiber Module**.

Fiber Module Table								
<div>Q <input type="text"/></div>								
	Port	Temperature (C)	Voltage (V)	Current (mA)	Output Power (mW)	Input Power (mW)	OE Present	Loss of Signal
<input type="radio"/>	GE25	N/A	N/A	N/A	N/A	N/A	Remove	Loss
<input type="radio"/>	GE26	N/A	N/A	N/A	N/A	N/A	Remove	Loss
<input type="radio"/>	GE27	N/A	N/A	N/A	N/A	N/A	Remove	Loss
<input type="radio"/>	GE28	N/A	N/A	N/A	N/A	N/A	Remove	Loss
<div>Refresh Detail</div>								

Figure 146 - Diagnostics > Logging>Fiber Module

Item	Description
Port	Interface or port number.
Temperature	Internally measured transceiver temperature.
Voltage	Internally measured supply voltage.
Current	Measured TX bias current.
Output Power	Measured TX output power in milliwatts.
Input Power	Measured RX received power in milliwatts.
Transmitter Fault	State of TX fault.
OE Present	Indicate transceiver has achieved power up and data is ready.
Loss of Signal	Loss of signal.
Refresh	Refresh the page.
Detail	The detail information on the specified port.

Click "**Detail**" button to view the Fiber Module Status menu

Fiber Module Status	
Port	GE25
OE Present	N/A
Loss of Signal	N/A
Transceiver Type	N/A
Connector Type	N/A
Ethernet Compliance Code	N/A
Transmission Media	N/A
Wavelength	N/A
Bitrate	N/A
Vendor OUI	N/A
Vendor Name	N/A
Vendor PN	N/A
Vendor Revision	N/A
Vendor SN	N/A
Date Code	N/A
Temperature (C)	N/A
Voltage (V)	N/A
Current (mA)	N/A
Output Power (mW)	N/A
Input Power (mW)	N/A

Refresh

Close

Figure 147 - Diagnostics > Logging>Fiber Module>Fiber Module Status

III-13-7. UDLD

Use the UDLD pages to configure settings of UDLD function.

III-13-7-1. Property

This page allow user to configure global and per interface settings of UDLD.

To display Property page, click **Diagnostics > UDLD > Property**.

Message Time

Sec (1 - 90, default 15)

Entry	Port	Mode	Bidirectional State	Operational Status	Neighbor
<input type="checkbox"/>	1	GE1	Disabled	Unknown	0
<input type="checkbox"/>	2	GE2	Disabled	Unknown	0
<input type="checkbox"/>	3	GE3	Disabled	Unknown	0
<input type="checkbox"/>	4	GE4	Disabled	Unknown	0
<input type="checkbox"/>	5	GE5	Disabled	Unknown	0
<input type="checkbox"/>	6	GE6	Disabled	Unknown	0
<input type="checkbox"/>	7	GE7	Disabled	Unknown	0
<input type="checkbox"/>	8	GE8	Disabled	Unknown	0
<input type="checkbox"/>	9	GE9	Disabled	Unknown	0
<input type="checkbox"/>	10	GE10	Disabled	Unknown	0
<input type="checkbox"/>	11	GE11	Disabled	Unknown	0
<input type="checkbox"/>	12	GE12	Disabled	Unknown	0
<input type="checkbox"/>	13	GE13	Disabled	Unknown	0
<input type="checkbox"/>	14	GE14	Disabled	Unknown	0
<input type="checkbox"/>	15	GE15	Disabled	Unknown	0
<input type="checkbox"/>	16	GE16	Disabled	Unknown	0
<input type="checkbox"/>	17	GE17	Disabled	Unknown	0
<input type="checkbox"/>	18	GE18	Disabled	Unknown	0
<input type="checkbox"/>	19	GE19	Normal	Link down	0
<input type="checkbox"/>	20	GE20	Normal	Link down	0
<input type="checkbox"/>	21	GE21	Disabled	Unknown	0
<input type="checkbox"/>	22	GE22	Disabled	Unknown	0
<input type="checkbox"/>	23	GE23	Disabled	Unknown	0
<input type="checkbox"/>	24	GE24	Disabled	Unknown	0
<input type="checkbox"/>	25	XGE1	Disabled	Unknown	0
<input type="checkbox"/>	26	XGE2	Disabled	Unknown	0
<input type="checkbox"/>	27	XGE3	Disabled	Unknown	0
<input type="checkbox"/>	28	XGE4	Disabled	Unknown	0

Figure 148 - Diagnostics > UDLD>Property

Item	Description
Message Time	Input the interval for sending message. Range is 1 -90 seconds.
Port	Display port ID of entry.
Mode	Display UDLD running mode of interface.
Bidirectional State	Display bidirectional state of interface.
Operational Status	Display operational status of interface.
Neighbor	Display the number of neighbor of interface.

Click **"Edit"** button to view the Fiber Module Status menu

Edit Port Setting

Port

Mode

GE1

☒ Disabled
 ☐ Normal
 ☐ Aggressive

Figure 149 - Diagnostics > UDLD>Property>Edit

Item	Description
Port	Display selected port to be edited.
Mode	Select UDLD running mode of interface. <ul style="list-style-type: none"> ● Disabled: Disable UDLD function. ● Normal: Running on normal mode that port goes to Link Up One phase after last neighbor ages out. ● Aggressive: Running on aggressive mode that port goes to Re-Establish phase after last neighbor ages out.

III-13-7-2. Neighbor

To display Neighbor page, click **Diagnostics > UDLD > Neighbor**

Neighbor Table

Search:

Entry	Expiration Time	Current Neighbor State	Device ID	Device Name	Port ID	Message Interval	Timeout Interval
0 results found.							

Figure 150 - Diagnostics > UDLD> Neighbor

Item	Description
Entry	Display entry index.
Expiration Time	Display expiration time before age out.
Current Neighbor State	Display neighbor current state.
Device ID	Display neighbor device ID.
Device Name	Display neighbor device name.
Port ID	Display neighbor port ID that connected.
Message Interval	Display neighbor message interval.
Timeout Interval	Display neighbor timeout interval.

III-14. Management

Use the Management pages to configure settings for the switch management features.

III-14-1. User Account

The default username/password is admin/admin. And default account is not able to be deleted.

Use this page to add additional users that are permitted to manage the switch or to change the passwords of existing users.

To display User Account web page, click **Management > User Account**.

User Account

Showing entries Showing 1 to 1 of 1 entries

<input type="checkbox"/>	Username	Privilege
<input type="checkbox"/>	admin	Admin

Figure 151 - Management > User Account

Item	Description
Username	User name of the account.
Privilege	Select privilege level for new account. <ul style="list-style-type: none">● Admin: Allow to change switch settings. Privilege value equals to 15.● User: See switch settings only. Not allow to change it. Privilege level equals to 1.

Click **"Add"** or **"Edit"** button to view the Add/Edit User Account menu.

Add User Account

☒ Admin ☐ User

Edit User Account

Username
admin

Password

Confirm Password

Privilege
☒ Admin
☐ User

Apply
Close

Figure 152 - Management > User Account > Add/Edit User Account

Item	Description
Username	User name of the account.
Password	Set password of the account.
Confirm Password	Set the same password of the account as in “Password” field.
Privilege	Select privilege level for new account. <ul style="list-style-type: none"> ● Admin: Allow to change switch settings. Privilege value equals to 15. ● User: See switch settings only. Not allow to change it. Privilege level equals to 1.

III-14-2. Firewall

III-14-2-1. Upgrade / Backup

This page allow user to upgrade or backup firmware image through HTTP or TFTP server.

To display firmware upgrade or backup web page, click **Management > Firmware > Upgrade/Backup**.

The screenshot shows a web interface for firmware operations. It features a yellow background with a blue border. The interface is divided into three main sections by dashed lines: 'Action', 'Method', and 'Filename'. In the 'Action' section, there are two radio buttons: 'Upgrade' (which is selected) and 'Backup'. In the 'Method' section, there are two radio buttons: 'TFTP' and 'HTTP' (which is selected). In the 'Filename' section, there is a 'Choose File' button and a text box that currently displays 'No file chosen'. Below these sections, there is an 'Apply' button.

Figure 153 - Management > Firewall > Upgrade/Backup

Item	Description
Action	Firmware operations <ul style="list-style-type: none">● Upgrade: Upgrade firmware from remote host to DUT.● Backup: Backup firmware image from DUT to remote host.
Method	Firmware upgrade / backup method. <ul style="list-style-type: none">● TFTP: Using TFTP to upgrade/backup firmware.● HTTP: Using WEB browser to upgrade/backup firmware.
Filename	Use browser to upgrade firmware, you should select firmware image file on your host PC.

To display firmware upgrade or backup web page, click **Management > Firmware > Upgrade/Backup**.

Active Image

☐ Image0
☒ Image1

Note: the image was selected for the next boot

Active Image

Firmware	Image1
Version	1.00.07
Name	Edimax_PG28CB_V1.00.07_r380_vmlinux_web.bix
Size	6417775 Bytes
Created	2017-11-21 14:54:59

Backup Image

Firmware	Image0
Version	1.00.06
Name	Edimax_PG28CB_V1.00.06_r373_vmlinux_web.bix
Size	6413996 Bytes
Created	2017-11-08 20:00:06

Apply

Figure 154 - Management > Fireware > Upgrade/Backup

Item	Description
Action	Firmware operations <ul style="list-style-type: none"> ● Upgrade: Upgrade firmware from remote host to DUT ● Backup: Backup firmware image from DUT to remote host
Method	Firmware upgrade / backup method <ul style="list-style-type: none"> ● TFTP: Using TFTP to upgrade/backup firmware. ● HTTP: Using WEB browser to upgrade/backup firmware.
Address Type	Specify TFTP server address type <ul style="list-style-type: none"> ● Hostname: Use domain name as server address ● IPv4: Use IPv4 as server address ● IPv6: Use IPv6 as server address
Server Address	Specify TFTP server address.
Filename	Firmware image file name on remote TFTP server

To display firmware upgrade or backup web page, click **Management > Firmware > Upgrade/Backup**.

Action

☐ Upgrade

☒ Backup

Method

☐ TFTP

☒ HTTP

Firmware

☒ Image0

☐ Image1

Apply

Figure 155 - Management > Fireware > Upgrade/Backup

Item	Description
Action	Firmware operations <ul style="list-style-type: none">● Upgrade: Upgrade firmware from remote host to DUT● Backup: Backup firmware image from DUT to remote host
Method	Firmware upgrade / backup method <ul style="list-style-type: none">● TFTP: Using TFTP to upgrade/backup firmware.● HTTP: Using WEB browser to upgrade/backup firmware.
Firmware	Firmware partition need to backup <ul style="list-style-type: none">● Image0: Firmware image in flash partition 0● Image1: Firmware image in flash partition 1

To display the Fireware Upgrade/Backup web page, click **Management > Fireware > Upgrade/Backup**.

Action

☐ Upgrade

☒ Backup

Method

☒ TFTP

☐ HTTP

Firmware

☒ Image0

☐ Image1

Address Type

☒ Hostname

☐ IPv4

☐ IPv6

Server Address

Filename

Apply

Figure 156 - Management > Fireware > Upgrade/Backup

Item	Description
Action	Firmware operations <ul style="list-style-type: none"> ● Upgrade: Upgrade firmware from remote host to DUT ● Backup: Backup firmware image from DUT to remote host
Method	Firmware upgrade / backup method <ul style="list-style-type: none"> ● TFTP: Using TFTP to upgrade/backup firmware. ● HTTP: Using WEB browser to upgrade/backup firmware.
Firmware	Firmware partition need to backup <ul style="list-style-type: none"> ● Image0: Firmware image in flash partition 0. ● Image1: Firmware image in flash partition 1.
Address Type	Specify TFTP server address type <ul style="list-style-type: none"> ● Hostname: Use domain name as server address. ● IPv4: Use IPv4 as server address. ● IPv6: Use IPv6 as server address.
Server Address	Specify TFTP server address address.
Filename	File name saved on remote TFTP server.

III-14-2-2. Active Image

This page allow user to select firmware image on next booting and show firmware information on both flash partitions.

To display the Active Image web page, click **Management > Firmware > Active Image**.

The screenshot shows a web interface for managing firmware images. At the top, there's a section titled 'Active Image' with two radio buttons: 'Image0' and 'Image1'. 'Image1' is selected. Below this, a note states: 'Note: the image was selected for the next boot'. The main content area is divided into two sections: 'Active Image' and 'Backup Image'. Each section contains a table of details for the selected image.

Active Image	
Firmware	Image1
Version	1.00.07
Name	Edimax_PG28CB_V1.00.07_r380_vmlinux_web.bix
Size	6417775 Bytes
Created	2017-11-21 14:54:59

Backup Image	
Firmware	Image0
Version	1.00.06
Name	Edimax_PG28CB_V1.00.06_r373_vmlinux_web.bix
Size	6413996 Bytes
Created	2017-11-08 20:00:06

At the bottom of the form is an 'Apply' button.

Figure 157 - Management > Fireware > Active Image

Item	Description
Active Image	Select firmware image to use on next booting
Firmware	Firmware flash partition name.
Version	Firmware version.
Name	Firmware name.
Size	Firmware image size.
Created	Firmware image created date.

III-14-3. Configuration

III-14-3-1. Upgrade / Backup

This page allow user to upgrade or backup configuration file through HTTP or TFTP server.

To display firmware upgrade or backup web page, click **Management > Configuration > Upgrade/Backup**.

The screenshot shows a web interface for configuration management. It features a yellow background with a blue border. The interface is divided into four main sections, each with a label and a list of options:

- Action:** Radio buttons for 'Upgrade' (selected) and 'Backup'.
- Method:** Radio buttons for 'TFTP' and 'HTTP' (selected).
- Configuration:** Radio buttons for 'Running Configuration' (selected), 'Startup Configuration', 'Backup Configuration', 'RAM Log', and 'Flash Log'.
- Filename:** A 'Choose File' button and a text box displaying 'No file chosen'.

An 'Apply' button is located at the bottom left of the form.

Figure 158 - Management > Configuration > Upgrade/Backup

Item	Description
Action	Configuration operations <ul style="list-style-type: none">● Upgrade: Upgrade firmware from remote host to DUT● Backup: Backup firmware image from DUT to remote host
Method	Configuration upgrade / backup method <ul style="list-style-type: none">● TFTP: Using TFTP to upgrade/backup firmware● HTTP: Using WEB browser to upgrade/backup firmware
Configuration	Configuration types <ul style="list-style-type: none">● Running Configuration: Merge to current running configuration file● Startup Configuration: Replace startup configuration file● Backup Configuration: Replace backup configuration file
Filename	Use browser to upgrade configuration, you should select configuration file on your host PC.

To display firmware upgrade or backup web page, click **Management > Configuration > Upgrade/Backup**.

The screenshot shows a web interface for configuration management. It features a sidebar on the left with a tree structure containing 'Management', 'Configuration', and 'Upgrade/Backup'. The main content area is titled 'Upgrade/Backup' and contains several sections, each with a set of radio buttons or text inputs. The 'Action' section has 'Upgrade' and 'Backup'. The 'Method' section has 'TFTP' and 'HTTP'. The 'Configuration' section has 'Running Configuration', 'Startup Configuration', 'Backup Configuration', 'RAM Log', and 'Flash Log'. The 'Address Type' section has 'Hostname', 'IPv4', and 'IPv6'. The 'Server Address' and 'Filename' sections each have a text input field. An 'Apply' button is located at the bottom left of the main content area.

Figure 159 - Management > Configuration > Upgrade/Backup

Item	Description
Action	Configuration operations <ul style="list-style-type: none"> ● Upgrade: Upgrade firmware from remote host to DUT ● Backup: Backup firmware image from DUT to remote host
Method	Configuration upgrade / backup method <ul style="list-style-type: none"> ● TFTP: Using TFTP to upgrade/backup firmware ● HTTP: Using WEB browser to upgrade/backup firmware
Configuration	Configuration types <ul style="list-style-type: none"> ● Running Configuration: Merge to current running configuration file ● Startup Configuration: Replace startup configuration file ● Backup Configuration: Replace backup configuration file
Address Type	Specify TFTP server address type <ul style="list-style-type: none"> ● Hostname: Use domain name as server address ● IPv4: Use IPv4 as server address ● IPv6: Use IPv6 as server address
Server Address	Specify TFTP server address address
Filename	File name saved on remote TFTP server

To display firmware upgrade or backup web page, click **Management > Configuration > Upgrade/Backup**.

The screenshot shows a web interface for configuration management. It is divided into three main sections: Action, Method, and Configuration. Each section contains a list of radio buttons for selection. The 'Action' section has 'Upgrade' and 'Backup' (selected). The 'Method' section has 'TFTP' and 'HTTP' (selected). The 'Configuration' section has 'Running Configuration' (selected), 'Startup Configuration', 'Backup Configuration', 'RAM Log', and 'Flash Log'. An 'Apply' button is located at the bottom left of the form.

Figure 160 - Management > Configuration > Upgrade/Backup

Item	Description
Action	<p>Configuration operations</p> <ul style="list-style-type: none"> ● Upgrade: Upgrade firmware from remote host to DUT ● Backup: Backup firmware image from DUT to remote host
Method	<p>Configuration upgrade / backup method</p> <ul style="list-style-type: none"> ● TFTP: Using TFTP to upgrade/backup firmware ● HTTP: Using WEB browser to upgrade/backup firmware
Configuration	<p>Configuration types</p> <ul style="list-style-type: none"> ● Running Configuration: Backup running configuration file. ● Startup Configuration: Backup start configuration file. ● Backup Configuration: Backup backup configuration file. ● RAM Log: Backup log file stored in RAM. ● Flash Log: Backup log files store in Flash.

To display firmware upgrade or backup web page, click **Management > Configuration > Upgrade/Backup**

The screenshot shows a web interface for configuring firmware upgrade or backup. It includes the following fields:

- Action:** Radio buttons for Upgrade (selected) and Backup.
- Method:** Radio buttons for TFTP (selected) and HTTP.
- Configuration:** Radio buttons for Running Configuration (selected), Startup Configuration, Backup Configuration, RAM Log, and Flash Log.
- Address Type:** Radio buttons for Hostname (selected), IPv4, and IPv6.
- Server Address:** A text input field.
- Filename:** A text input field.
- Apply:** A button at the bottom left.

Figure 161- Management > Configuration > Upgrade/Backup

Item	Description
Action	Configuration operations <ul style="list-style-type: none"> ● Upgrade: Upgrade firmware from remote host to DUT ● Backup: Backup firmware image from DUT to remote host
Method	Configuration upgrade / backup method <ul style="list-style-type: none"> ● TFTP: Using TFTP to upgrade/backup firmware ● HTTP: Using WEB browser to upgrade/backup firmware
Configuration	Configuration types <ul style="list-style-type: none"> ● Running Configuration: Backup running configuration file. ● Startup Configuration: Backup start configuration file. ● Backup Configuration: Backup backup configuration file. ● RAM Log: Backup log file stored in RAM. ● Flash Log: Backup log files store in Flash.
Address Type	Specify TFTP server address type <ul style="list-style-type: none"> ● Hostname: Use domain name as server address ● IPv4: Use IPv4 as server address ● IPv6: Use IPv6 as server address
Server Address	Specify TFTP server address address.
Filename	File name saved on remote TFTP server.

III-14-3-2. Save Configuration

This page allow user to manage configuration file saved on DUT and click “**Restore Factory Default**” button to restore factory defaults.

To display the Save Configuration web page, click **Management > Configuration > Save Configuration**.

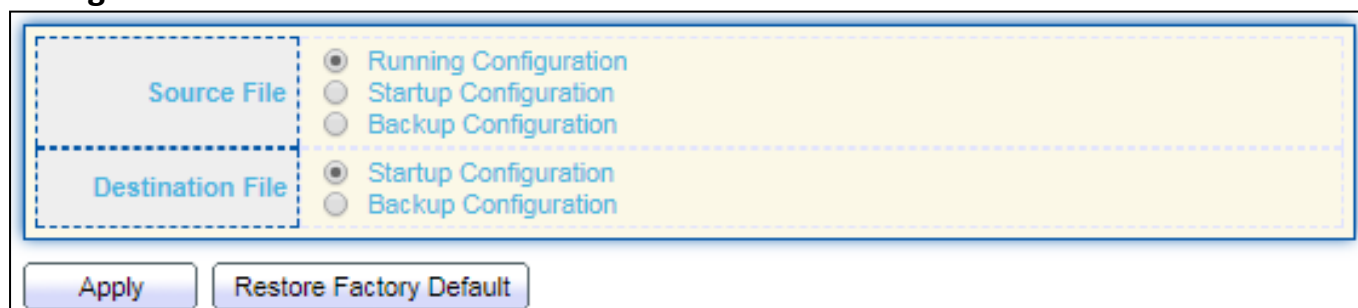


Figure 162 - Management > Configuration > Save Configuration

Item	Description
Source File	Source file types <ul style="list-style-type: none">● Running Configuration: Copy running configuration file to destination.● Startup Configuration: Copy startup configuration file to destination.● Backup Configuration: Copy backup configuration file to destination
Destination File	Destination file <ul style="list-style-type: none">● Startup Configuration: Save file as startup configuration.● Backup Configuration: Save file as backup configuration.

III-14-4. SNMP

III-14-4-1. View

To configure and display the SNMP view table, click **Management > SNMP > View**.

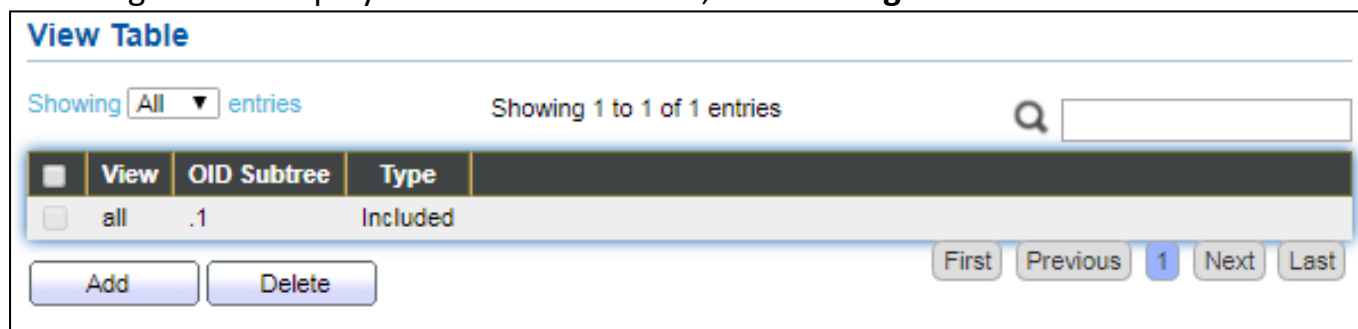


Figure 163 - Management > SNMP > View

Item	Description
View	The SNMP view name. Its maximum length is 30 characters
OID Subtree	Specify the ASN.1 subtree object identifier (OID) to be included or excluded from the SNMP view
Type	Include or exclude the selected MIBs in the view

III-14-4-2. Group

To configure and display the SNMP group settings, click **Management > SNMP > Group**.

Group Table

Showing **All** entries Showing 0 to 0 of 0 entries

	Group	Version	Security Level	View		
				Read	Write	Notify
0 results found.						

First Previous **1** Next Last

Configure [SNMP View](#) to associate a non-default view with a group.

Add **Edit** **Delete**

Figure 164 - Management > SNMP > Group

Item	Description
Group	Specify SNMP group name, and the maximum length is 30 characters.
Version	Specify SNMP version <ul style="list-style-type: none"> ● SNMPv1: SNMP Version 1. ● SNMPv2: Community-based SNMP Version 2. ● SNMPv3: User security model SNMP version 3.
Security Level	Specify SNMP security level <ul style="list-style-type: none"> ● No Security: Specify that no packet authentication is performed. ● Authentication: Specify that no packet authentication without encryption is performed. ● Authentication and Privacy: Specify that no packet authentication with encryption is performed.
View	
Read	Group read view name.
Write	Group write view name.
Notify	The view name that sends only traps with contents that is included in SNMP view selected for notification.

Click "Add" or "Edit" button to view the Add/Edit Group menu.

Add Group

Group

Version

☒ SNMPv1

☐ SNMPv2

☐ SNMPv3

Security Level

☒ No Security

☐ Authentication

☐ Authentication and Privacy

View

☒ Read

all

▼

☐ Write

all

▼

☐ Notify

all

▼

Apply

Close

Edit Group

Group

1

Version

☒ SNMPv1

☐ SNMPv2

☐ SNMPv3

Security Level

☒ No Security

☐ Authentication

☐ Authentication and Privacy

View

☒ Read

all

▼

☐ Write

all

▼

☐ Notify

all

▼

Apply

Close

Figure 165 - Management > SNMP > Group > Add/Edit Group

Item	Description
Group	Specify SNMP group name, and the maximum length is 30 characters.
Version	Specify SNMP version <ul style="list-style-type: none"> ● SNMPv1: SNMP Version 1. ● SNMPv2: Community-based SNMP Version 2. ● SNMPv3: User security model SNMP version 3.
Security Level	Specify SNMP security level <ul style="list-style-type: none"> ● No Security : Specify that no packet authentication is performed. ● Authentication: Specify that no packet authentication without encryption is performed. ● Authentication and Privacy: Specify that no packet authentication with encryption is performed.
View	
Read	Select read view name if Read is checked.
Write	Select write view name, if Write is checked.
Notify	Select notify view name, if Notify is checked.

III-14-4-3. Community

To configure and display the SNMP community settings, click **Management > SNMP > Community**.

Community Table

Showing **All** entries Showing 1 to 1 of 1 entries

<input type="checkbox"/>	Community	Group	View	Access
<input type="checkbox"/>	public	all		Read-Write

First Previous **1** Next Last

The access right of a community is defined by a group under advanced mode.
Configure [SNMP Group](#) to associate a group with a community.

Figure 166 - Management > SNMP > Community

Item	Description
Community	The SNMP community name. Its maximum length is 20 characters.
Group	Specify the SNMP group configured by the command snmp group to define the object available to the community.
View	Specify the SNMP view to define the object available to the community.
Access	SNMP access mode <ul style="list-style-type: none"> ● Read-Only: Read only. ● Read-Write: Read and write.

Click "**Add**" or "**Edit**" button to view the Add/Edit Community menu.

Add Community

Community

Type

View

Access

Group

☒ Basic
☐ Advanced

all ▼

☒ Read-Only
☐ Read-Write

1 ▼

Apply

Close

Edit Community

Community

Type

View

Access

Group

public

☒ Basic
☐ Advanced

all ▼

☐ Read-Only
☒ Read-Write

1 ▼

Apply

Close

Figure 167 - Management > SNMP > Group > Add/Edit Community

Item	Description
Community	The SNMP community name. Its maximum length is 20 characters.
Type	SNMP Community mode <ul style="list-style-type: none"> ● Basic: SNMP community specifies view and access right. ● Advanced: SNMP community specifies group.
View	Specify the SNMP view to define the object available to the community.
Access	SNMP access mode <ul style="list-style-type: none"> ● Read-Only: Read only. ● Read-Write: Read and write.
Group	Specify the SNMP group configured by the command snmp group to define the object available to the community.

III-14-4-4. User

To configure and display the SNMP users, click **Management > SNMP > User**.

User Table

Showing **All** entries Showing 0 to 0 of 0 entries

0 results found.

First Previous 1 Next Last

Configure **SNMP Group** to associate an SNMPv3 group with an SNMPv3 user.

Add **Edit** **Delete**

Figure 168 - Management > SNMP > User

Item	Description
User	Specify the SNMP user name on the host that connects to the SNMP agent. The max character is 30 characters. For the SNMP v1 or v2c, the user name must match the community name.
Group	Specify the SNMP group to which the SNMP user belongs.
Security Level	SNMP privilege mode <ul style="list-style-type: none">● No Security: Specify that no packet authentication is performed.● Authentication: Specify that no packet authentication without encryption is performed.● Authentication and Privacy: Specify that no packet authentication with encryption is performed.
Authentication Method	Authentication Protocol which is available when Privilege Mode is Authentication or Authentication and Privacy. <ul style="list-style-type: none">● None: No authentication required.● MD5: Specify the HMAC-MD5-96 authentication protocol.● SHA: Specify the HMAC-SHA-96 authentication protocol
Privacy Method	Encryption Protocol <ul style="list-style-type: none">● None: No privacy required.● DES: DES algorithm

Click "Add" or "Edit" button to view Add/Edit User menu.

Add User

User

Group

Security Level

11 ▼

☒ No Security

☐ Authentication

☐ Authentication and Privacy

Authentication

Method

None

MD5

SHA

Password

Privacy

Method

☒ None

☐ DES

Password

Apply

Close

Edit User

User

Group

Security Level

22

11 ▼

☒ No Security

☐ Authentication

☐ Authentication and Privacy

Authentication

Method

☒ None

☐ MD5

☐ SHA

Password

Privacy

Method

☒ None

☐ DES

Password

Apply

Close

Figure 169 - Management > SNMP > User > Add/Edit User

Item	Description
User	Specify the SNMP user name on the host that connects to the SNMP agent. The max character is 30 characters.
Group	Specify the SNMP group to which the SNMP user belongs.
Security Level	SNMP privilege mode <ul style="list-style-type: none"> ● No Security: Specify that no packet authentication is performed. ● Authentication: Specify that no packet authentication without encryption is performed. ● Authentication and Privacy: Specify that no packet authentication with encryption is performed.
Authentication	
Method	Authentication Protocol which is available when Privilege Mode is Authentication or Authentication and Privacy. <ul style="list-style-type: none"> ● None: No authentication required. ● MD5: Specify the HMAC-MD5-96 authentication protocol. ● SHA: Specify the HMAC-SHA-96 authentication protocol.
Password	The authentication password, The number of character range is 8 to 32 characters.
Privacy	
Method	Encryption Protocol <ul style="list-style-type: none"> ● None: No privacy required. ● DES: DES algorithm
Password	The privacy password, The number of character range is 8 to 64 characters.

III-14-4-5. Engine ID

To configure and display SNMP local and remote engine ID, click Management > SNMP > Engine ID.

Local Engine ID

☐ User Defined

Engine ID: (10 - 64 Hexadecimal Characters)

Apply

Remote Engine ID Table

Showing **All** entries Showing 0 to 0 of 0 entries

Server Address	Engine ID
0 results found.	

Add Edit Delete First Previous 1 Next Last

Figure 170 - Management > SNMP > Engine ID

Item	Description
Local Engine ID	
Engine ID	If checked “User Defined”, the local engine ID is configure by user, else use the default Engine ID which is made up of MAC and Enterprise ID. The user defined engine ID is range 10 to 64 hexadecimal characters, and the hexadecimal number must be divided by 2.
Remote Engine ID	
Server Address	Remote host.
Engine ID	Specify Remote SNMP engine ID. The engine ID is range10 to 64 hexadecimal characters, and the hexadecimal number must be divided by 2.

Click "**Add**" button to view Add Remote Engine ID menu.

Add Remote Engine ID

Address Type: ☒ Hostname, ☐ IPv4, ☐ IPv6

Server Address:

Engine ID: (10 - 64 Hexadecimal Characters)

Apply Close

Figure 171 - Management > SNMP > Add Engine ID

Item	Description
Address Type	Remote host address type for Hostname/IPv4/IPv6.
Server Address	Remote host.
Engine ID	Specify Remote SNMP engine ID. The engine ID is range 10 to 64 hexadecimal characters, and the hexadecimal number must be divided by 2.

Click "**Edit**" button to view Edit Remote Engine ID menu.

Edit Remote Engine ID

Server Address: 123.4.5.6

Engine ID: 12345abcde (10 - 64 Hexadecimal Characters)


Apply Close

Figure 172 - Management > SNMP > Edit Engine ID

Item	Description
Server Address	Edit Remote host address
Engine ID	Specify Remote SNMP engine ID. The engine ID is range 10 to 64 hexadecimal characters, and the hexadecimal number must be divided by 2.

III-14-4-6. Trap Event

To configure and display SNMP trap event, click **Management > SNMP > Trap Event**.

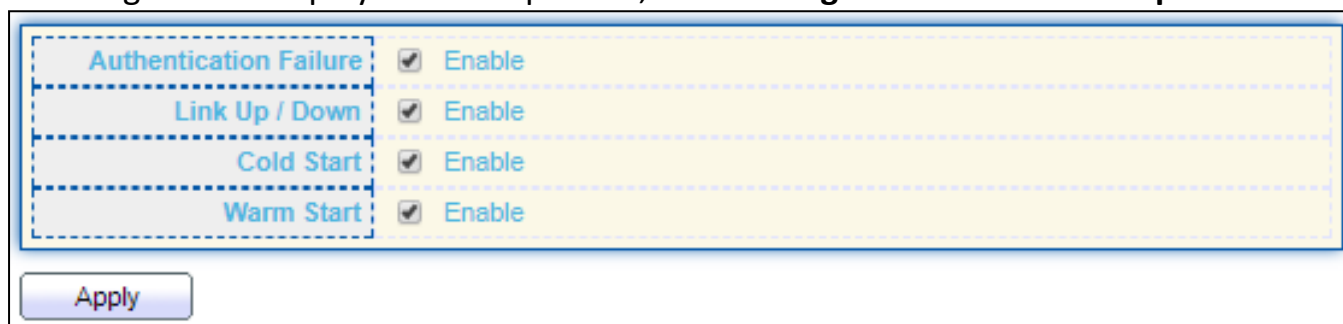

Authentication Failure	<input checked="" type="checkbox"/>	Enable
Link Up / Down	<input checked="" type="checkbox"/>	Enable
Cold Start	<input checked="" type="checkbox"/>	Enable
Warm Start	<input checked="" type="checkbox"/>	Enable


Apply

Figure 173 - Management > SNMP > Trap Event

Item	Description
Authentication Failure	SNMP authentication failure trap, when community not match or user authentication password not match.
Link Up/Down	Port link up or down trap.
Cold Start	Device reboot configure by user trap.
Warm Start	Device reboot by power down trap.

III-14-4-7. Notification

To configure the hosts to receive SNMPv1/v2/v3 notification, click **Management > SNMP > Notification**.

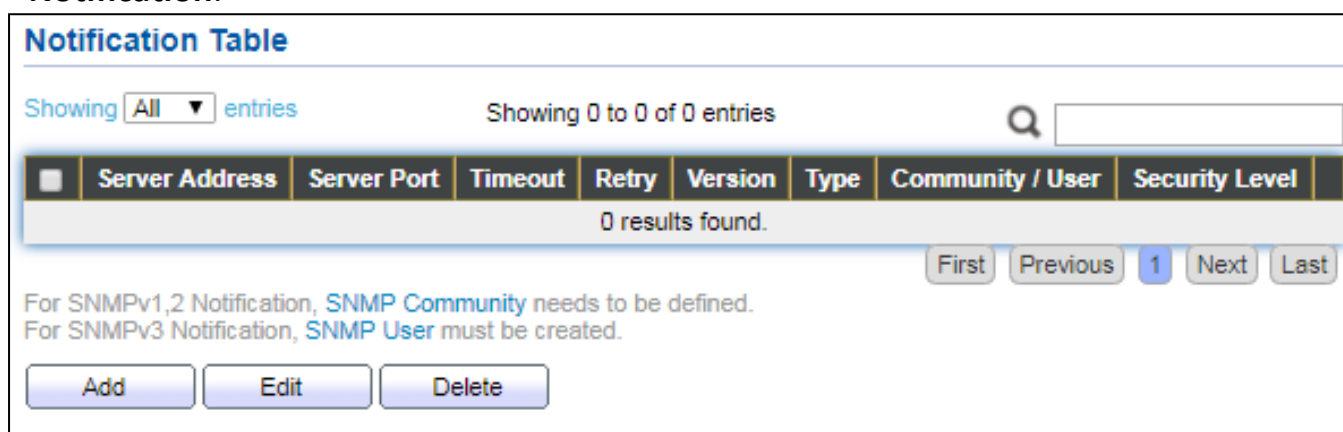

Notification Table

Showing All entries Showing 0 to 0 of 0 entries

Server Address	Server Port	Timeout	Retry	Version	Type	Community / User	Security Level
0 results found.							

First Previous 1 Next Last

For SNMPv1,2 Notification, [SNMP Community](#) needs to be defined.
For SNMPv3 Notification, [SNMP User](#) must be created.

Add Edit Delete

Figure 174 - Management > SNMP > Notification

Item	Description
Server Address	IP address or the hostname of the SNMP trap recipients.
Server Port	Recipients server UDP port number.
Timeout	Specify the SNMP informs timeout.
Retry	Specify the retry counter of the SNMP informs.
Version	Specify SNMP notification version

	<ul style="list-style-type: none"> ● SNMPv1: SNMP Version 1 notification. ● SNMPv2: SNMP Version 2 notification. ● SNMPv3: SNMP Version 3 notification.
Type	Notification Type <ul style="list-style-type: none"> ● Trap: Send SNMP traps to the host. ● Inform: Send SNMP informs to the host.
Community/User	SNMP community/user name for notification. If version is SNMPv3 the name is user name, else is community name.
UDP Port	Specify the UDP port number.
Timeout	Specify the SNMP informs timeout.
Security Level	SNMP trap packet security level <ul style="list-style-type: none"> ● No Security: Specify that no packet authentication is performed. ● Authentication: Specify that no packet authentication without encryption is performed. ● Authentication and Privacy: Specify that no packet authentication with encryption is performed.

Click "**Add**" button to view the Notification menu.

Add Notification

Address Type

☒ Hostname
☐ IPv4
☐ IPv6

Server Address

Version

☒ SNMPv1
☐ SNMPv2
☐ SNMPv3

Type

☒ Trap
☐ Inform

Community / User

Security Level

☒ No Security
☐ Authentication
☐ Authentication and Privacy

Server Port

☒ Use Default
 (1 - 65535, default 162)

Timeout

☒ Use Default
 Sec (1 - 300, default 15)

Retry

☒ Use Default
 (1 - 255, default 3)

Figure 175 - Management > SNMP > Notification > Add Notification

Item	Description
Address Type	Notify recipients host address type.
Server Address	IP address or the hostname of the SNMP trap recipients.
Version	Specify SNMP notification version <ul style="list-style-type: none"> ● SNMPv1: SNMP Version 1 notification. ● SNMPv2: SNMP Version 2 notification. ● SNMPv3: SNMP Version 3 notification.
Type	Notification Type <ul style="list-style-type: none"> ● Trap: Send SNMP traps to the host. ● Inform: Send SNMP informs to the host.(version 1 have no inform)
Community/User	SNMP community/user name for notification. If version is SNMPv3 the name is user name, else is community name.
Security Level	SNMP notification packet security level, the security level must less than or equal to the community/user name <ul style="list-style-type: none"> ● No Security: Specify that no packet authentication is performed. ● Authentication: Specify that no packet authentication without encryption is performed. ● Authentication and Privacy: Specify that no packet authentication with encryption is performed.
Server Port	Recipients server UDP port number, if “use default” checked the value is 162, else user configure.
Timeout	Specify the SNMP informs timeout, if “use default” checked the value is 15, else user configure.
Retry	Specify the SNMP informs retry count, if “use default” checked the value is 3, else user configure.

Click "**Edit**" button to view the Edit Notification menu.

Figure 176 - Management > SNMP > Notification > Edit Notification

Item	Description
Server Address	Edit SNMP notify recipients address
Version	Specify SNMP notification version <ul style="list-style-type: none"> ● SNMPv1: SNMP Version 1 notification. ● SNMPv2: SNMP Version 2 notification. ● SNMPv3: SNMP Version 3 notification.
Type	Notification Type <ul style="list-style-type: none"> ● Trap: Send SNMP traps to the host. ● Inform: Send SNMP informs to the host.(version 1 have no inform)
Community/User	SNMP community/user name for notification. If version is SNMPv3 the name is user name, else is community name.
Community Level	SNMP notification packet security level, the security level must less than or equal to the community/user name <ul style="list-style-type: none"> ● No Security: Specify that no packet authentication is performed. ● Authentication: Specify that no packet authentication

	without encryption is performed. ● Authentication and Privacy: Specify that no packet authentication with encryption is performed.
Server Port	Recipients server UDP port number, if “use default” checked the value is 162, else user configure.
Timeout	Specify the SNMP informs timeout, if “use default” checked the value is 15, else user configure.
Retry	Specify the SNMP informs retry count, if “use default” checked the value is 3, else user configure.

III-14-5. Time Range

This page shows the information of days, start time and end time of the time range.

Time Range

Range Name	Days	Start Time	End Time
<input type="checkbox"/> time-1	Mon, Tue, Wed, Thu, Fri, Sat, Sun	01:00	11:30
<input type="button" value="Add"/> <input type="button" value="Edit"/> <input type="button" value="Delete"/>			

To view the Time Range Edit page, please click the ‘Edit’ button.

Time Range Edit


Range Name	<input type="text" value="time-1"/>		
Date	<input checked="" type="checkbox"/> Mon <input checked="" type="checkbox"/> Tue <input checked="" type="checkbox"/> Wed <input checked="" type="checkbox"/> Thu <input checked="" type="checkbox"/> Fri <input checked="" type="checkbox"/> Sat <input checked="" type="checkbox"/> Sun		
	From <input type="text" value="01:00"/>	to <input type="text" value="11:30"/>	
<input type="button" value="Apply"/> <input type="button" value="Close"/>			

IV. Surveillance Mode

The simple and intuitive GUI of Surveillance Mode provides real-time device and network information


IV-1. Home Page

The figure below shows the user interface.

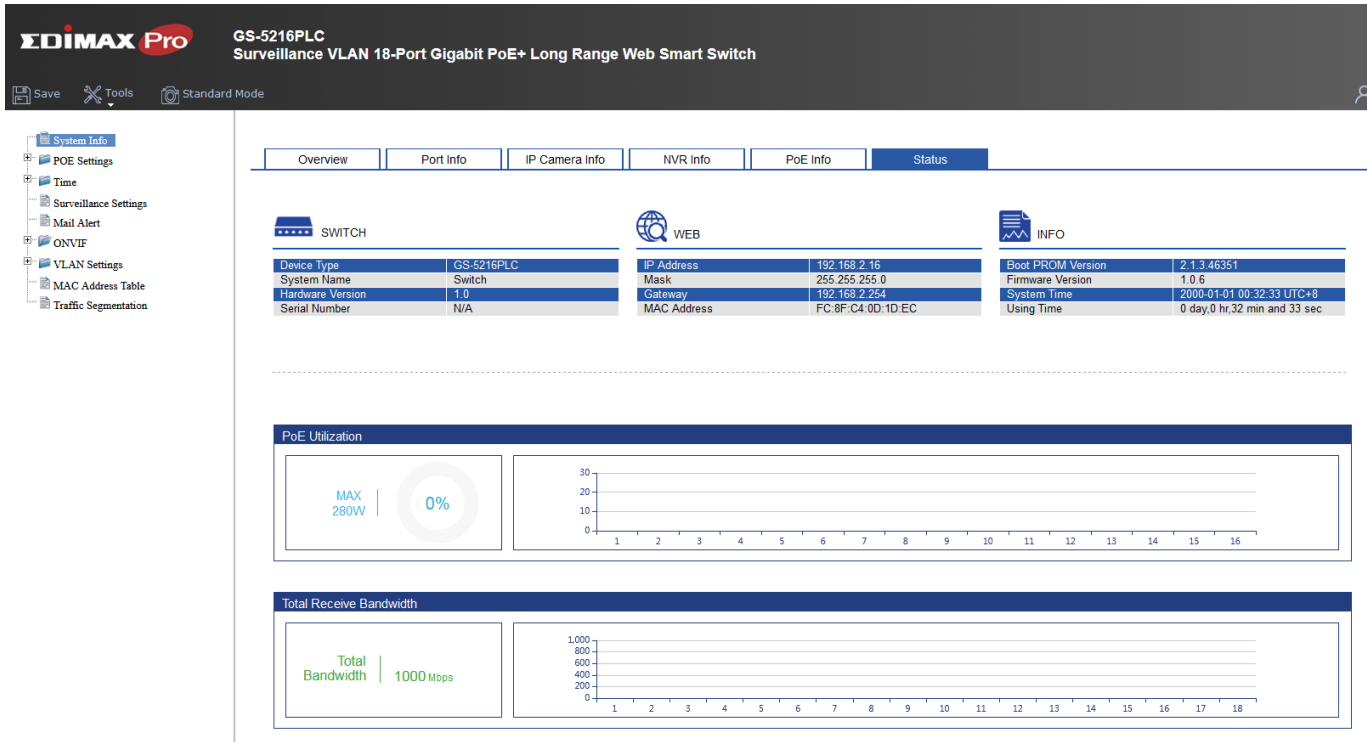

IV-1-1. Overview

This page displays information and configuration options for the switch. It contains a diagram of the switch, including an overview of the devices connected to the switch.



PoE+ Smart Surveillance Switch

2

4

6

8

10

12

14

16

18

20

22

24

1

3

5

7

9

11

13

15

17

19

21

23


25


26


27


28


Note: System scans IP cameras every 30s.


 x 0

 x 0

 x 1

 x 0

 x 0


 x 1

There is a device count at the bottom of the page, listing the number of connected IP-Cameras, NVRs and other (unrecognized devices).

NOTE: System scans IP camera every 30s.

You can remote control the PoE port by clicking the power button  on the switch




6





Disable the PoE of Port 2 ?

OK

Cancel


Item	Description
	The total number of IP-Cameras connected to the switch.
	The total number of NVRs connected to the switch.
	The number of unknown devices connected to the switch.





Item	Description
	PoE is enabled on the port.
	PoE is disabled on the port.


IV-1-2. Port Info

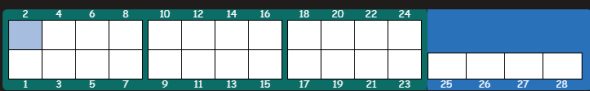In this page you can check the status of PoE port, loopback detection and the range of the distance.

PoE+ Smart Surveillance Switch



 x 1
 x 0
 x 0
 x 1


 2



Loopback Detection: OFF
Distance: < 0.5m

Item	Description
PoE port	Shows the PoE port is connected with IP camera, NVR or others
loopback detection	Loopback Detection (LBD) provides protection against loops by transmitting loop protocol packets out of ports on which loop protection has been enabled. When the switch sends out a loop protocol packet, and then receives the same packet, it shuts down the port that received the packet.
Distance	It shows the cable length (in meters)

IV-1-3. IP Camera Info

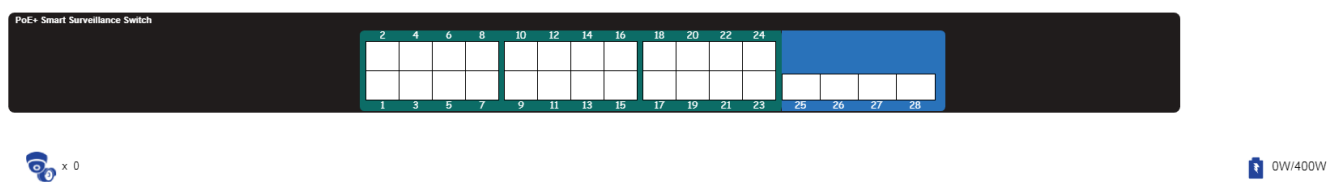
The IP-Camera Information section provides information on each camera connected to the switch.




Item	Description
	The PoE consumption of the switch. This is listed as one negative integer and one positive integer. The negative integer is the power being consumed by the PoE devices connected to the switch. The positive integer is the total PoE budget for the ports currently using PoE, based on the type of PoE in use.
	The total number of ONVIF IP-Cameras connected to the switch.

IV-1-4. NVR Info


The NVR Information section provides information on each NVR connected to the switch.

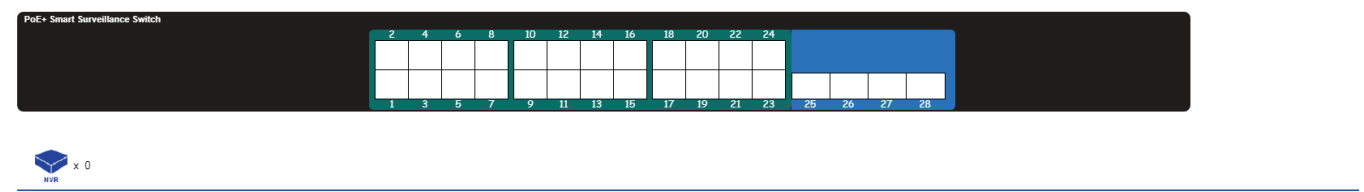

Item	Description
	The total number of NVRs connected to the switch.




IV-1-5. PoE Info

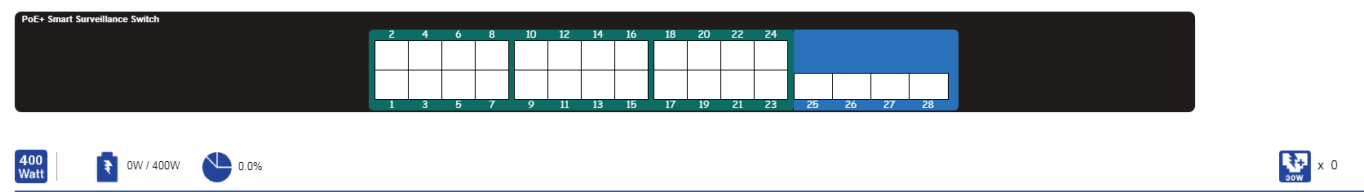The PoE Information section provides information on the PoE usage of each port.



PoE On/Off: On
PoE Status: Delivering
PoE Budget: Up to 30W
Power Consumption: 4W


There is a PoE status at the bottom of the page, listing the PoE status, budget and consumption.

Item	Description
	The total power budget.
	The PoE consumption of the switch. This is listed as one negative integer and one positive integer. The negative integer is the power being consumed by the PoE devices connected to the switch. The positive integer is the total PoE budget for the ports currently using PoE, based on the type of PoE in use.
	The current utilization of PoE total power budget.

IV-1-6. Status


This is the main page on the Surveillance page and is divided into 3 areas, device information section, PoE utilization section and bandwidth usage section.

And the device information section is sub-divided into 3 sections, switch information, web information and system information.




SWITCH

Device Type	GS-5424PLX
System Name	Switch
Hardware Version	1.0
Serial Number	N/A






WEB

IP Address	192.168.2.1
Mask	255.255.255.0
Gateway	192.168.2.254
MAC Address	FC:8F:C4:0D:1A:5E




INFO

Boot PROM Version	3.6.1.1
Firmware Version	1.0.3
System Time	1970-01-04 23:56:35 UTC+8
Using Time	3 day,23 hr,56 min and 35 sec

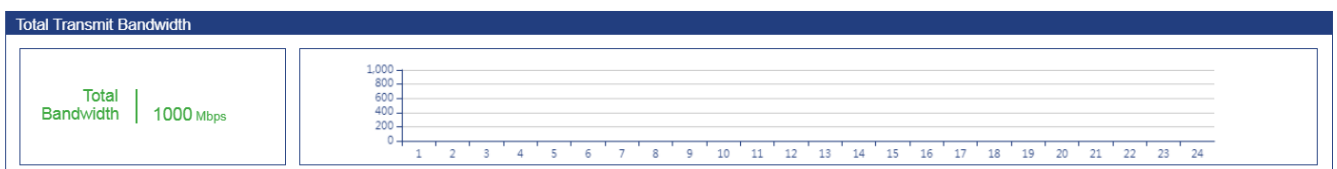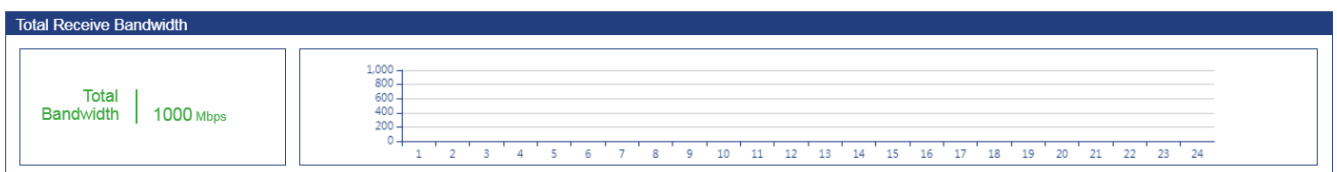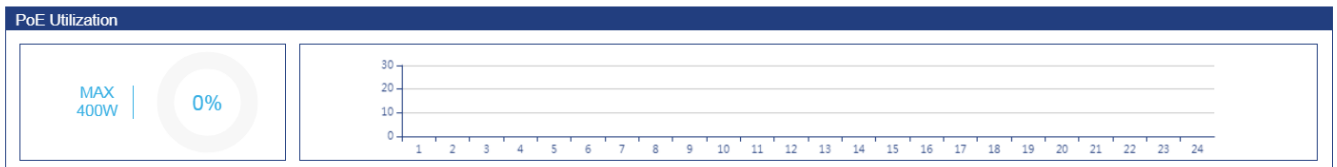


PoE Utilization:

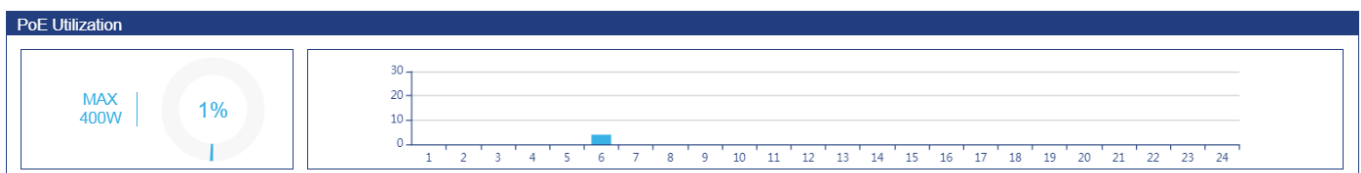

The PoE Utilization area contains PoE utilization statistics for the switch. On the left is the total PoE utilization, with the total power budget and overall utilization shown. On the right is a per-port usage graph, showing the PoE utilization for each individual port.

Total Receive/Transmit Bandwidth:

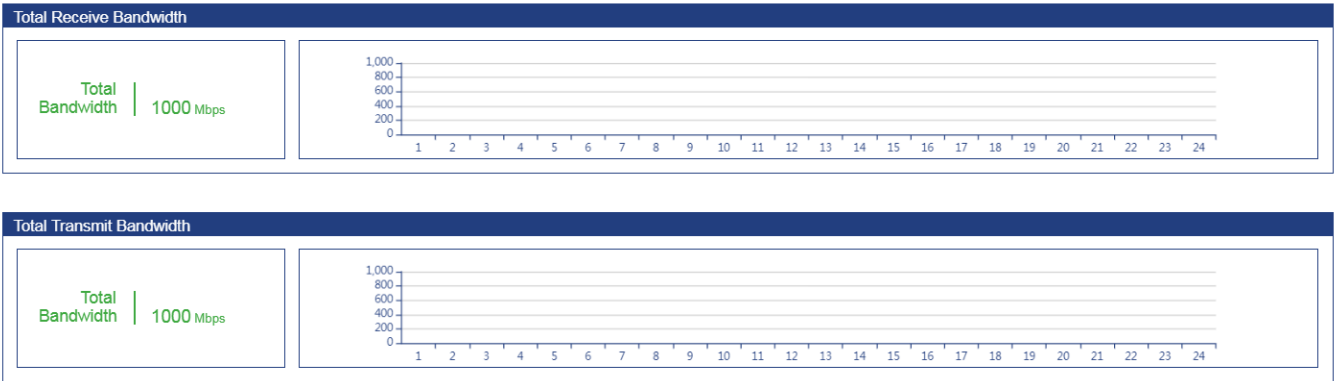

The bandwidth usage section contains bandwidth utilization for the switch. On the left the total bandwidth shows the total inbound traffic on all ports. There is also a per-port bandwidth utilization graph on the right, showing the inbound traffic for each individual port.

IV-2. PoE Scheduling

PoE Scheduling which allows you to specify the amount of time that power is delivered to a PoE port. This can be used to save power when devices are not in use, or as a security feature to prevent wireless access from being available outside of business hours.

Click "Add" button to view the "Time Range Edit" menu.

Time Range		Scheduling		
■	Range Name	Days	Start Time	End Time
<input type="checkbox"/>	Edimax	Mon, Tue,	01:00	23:00
<div>AddEditDelete</div>				

You can name your PoE schedule and choose date/time from Mon ~ Sun.

Time Range Edit

Range Name	Edimax	
Date	<input checked="" type="checkbox"/> Mon <input checked="" type="checkbox"/> Tue <input type="checkbox"/> Wed <input type="checkbox"/> Thu <input type="checkbox"/> Fri <input type="checkbox"/> Sat <input type="checkbox"/> Sun From 01:00 to 23:00	

Apply

Close

To view the following page, click on the “**Scheduling**” link in the menu:

Time Range	Scheduling
------------	------------

Power Budget	400 W
Consuming Power	4 W
Remaining Power	396 W
Schedule Status	Enable ▼

Apply

PoE Schedule Table

	Index	Name	Port List	Schedule Status
<input type="checkbox"/>	1		GE2	Enable
<input type="checkbox"/>	2	None		Disable
<input type="checkbox"/>	3	None		Disable
<input type="checkbox"/>	4	None		Disable
<input type="checkbox"/>	5	None		Disable
<input type="checkbox"/>	6	None		Disable
<input type="checkbox"/>	7	None		Disable
<input type="checkbox"/>	8	None		Disable
<input type="checkbox"/>	9	None		Disable
<input type="checkbox"/>	10	None		Disable
<input type="checkbox"/>	11	None		Disable
<input type="checkbox"/>	12	None		Disable
<input type="checkbox"/>	13	None		Disable
<input type="checkbox"/>	14	None		Disable
<input type="checkbox"/>	15	None		Disable
<input type="checkbox"/>	16	None		Disable
<input type="checkbox"/>	17	None		Disable
<input type="checkbox"/>	18	None		Disable
<input type="checkbox"/>	19	None		Disable
<input type="checkbox"/>	20	None		Disable
<input type="checkbox"/>	21	None		Disable
<input type="checkbox"/>	22	None		Disable
<input type="checkbox"/>	23	None		Disable
<input type="checkbox"/>	24	None		Disable

Edit

Click **"Edit"** button to view the “PoE Schedule Edit” menu.
In this page you can enable/disable the PoE ports from the port list.

PoE Schedule Edit

Index	1
Schedule Status	<input checked="" type="checkbox"/> Enable
Name	
Port List	<div><div><div>24</div><div>23</div><div>22</div><div>21</div><div>20</div><div>19</div><div>18</div><div>17</div><div>16</div><div>15</div><div>14</div><div>13</div><div>12</div><div>11</div><div>10</div><div>9</div><div>8</div><div>7</div><div>6</div><div>5</div><div>4</div><div>3</div><div>2</div><div>1</div></div><div><div><div><div></div><div>Enable</div></div><div><div></div><div>Disable</div></div></div><div><div><div></div><div>Port No Select</div></div><div><div><div></div><div>Port Select</div></div></div></div></div></div>

Apply

Close

IV-3. Time

In this section you can configure the setting of the clock and SNTP Server.

IV-3-1. Clock Settings

The fields that can be configured for the **Clock Settings** are described below:

Clock Setting

Manual Time	
Date	<div><div>1970-01-05</div><div>YYYY-MM-DD</div></div>
Time	<div><div>02:51:24</div><div>HH:MM:SS</div></div>
Time Zone	<div><div>UTC +8:00</div><div></div></div>
Current Time	1970-01-05 02:51:24 UTC+8

Apply

Item	Description
Date	Set the date in the format (DD / MM / YYYY).
Time	Set the system time in the format (HH:MM:SS).
Time Zone	Set the time zone for your switch.
Current Time	It shows the current time for the switch.

IV-3-2. SNTP Settings

Simple Network Time Protocol (SNTP) is a lightweight version of the NTP protocol and can be used to keep the system clock in-sync by using a network-based time source.

SNTP Server Settings	
Source	Manual Time
SNTP State	Disabled ▼
Address Type	<input checked="" type="radio"/> Hostname <input type="radio"/> IPv4
Server Address	<input type="text"/>
Server Port	<input type="text" value="123"/> (1 - 65535, default 123)
Daylight Saving Time	
Type	<input checked="" type="radio"/> None <input type="radio"/> Recurring <input type="radio"/> Non-recurring <input type="radio"/> USA <input type="radio"/> Europe
Offset	<input type="text" value="60"/> Min (1 - 1440, default 60)
Recurring	From: Day <input type="text" value="Sun"/> Week <input type="text" value="First"/> Month <input type="text" value="Jan"/> Time <input type="text"/>
	To: Day <input type="text" value="Sun"/> Week <input type="text" value="First"/> Month <input type="text" value="Jan"/> Time <input type="text"/>
Non-recurring	From: <input type="text"/> YYYY-MM-DD <input type="text"/> HH:MM
	To: <input type="text"/> YYYY-MM-DD <input type="text"/> HH:MM
Operational Status	
Current Time	1970-01-05 02:57:23 UTC+8

Apply

Item	Description
SNTP State	Enable/Disable
Address Type	Choose Hostname or IPv4
Server Address	Enter the IP address of the SNTP server you would like to synchronize with.
Server Port	Enter the server port (1-65535)
Daylight Saving Time	
Type	Choose the daylight saving type in none, recurring, non-recurring, USA or Europe
Offset	Enter the offset in minute (1-1440)
Operational Status	
Current Time	It shows the current time for the switch.

NOTE:

- **Recurring (always occurs, with no defined stopping point).**

For example, the United States started using recurring daylight savings rules in 2007.

- **Nonrecurring (defined for a specific period of time).**

IV-4. Surveillance Settings

The Surveillance Settings page is used to configure the settings for the Surveillance IP, SNMP host, log server and password.

IP Settings	
Address Type	Static ▾
IP Address	192.168.2.1
Subnet Mask	255.255.255.0
Default Gateway	192.168.2.254
DNS Server 1	168.95.1.1
DNS Server 2	168.95.192.1

Apply

SNMP Host Settings	
Server Address	<input type="text"/>
Version	<input checked="" type="radio"/> SNMPv1 <input type="radio"/> SNMPv2 <input type="radio"/> SNMPv3
Type	<input checked="" type="radio"/> Trap <input type="radio"/> Inform
Community / User	public ▾
Security Level	<input checked="" type="radio"/> No Security <input type="radio"/> Authentication <input type="radio"/> Authentication and Privacy
Server Port	<input checked="" type="checkbox"/> Use Default <input type="text" value="162"/> (1 - 65535, default 162)
Timeout	<input checked="" type="checkbox"/> Use Default <input type="text" value="15"/> Sec (1 - 300, default 15)
Retry	<input checked="" type="checkbox"/> Use Default <input type="text" value="3"/> (1 - 255, default 3)

■	Server Address	Server Port	Timeout	Retry	Version	Type	Community / User	Security Level	
0 results found.									
<input type="button" value="Add"/> <input type="button" value="Delete"/> <input type="button" value="Edit"/> <input type="button" value="Apply"/>									

Log Server	
Server Address	<input type="text"/>
Server Port	514 (1 - 65535, default 514)
Facility	Local 7 ▾
Minimum Severity	Notice ▾ Note: Emergency, Alert, Critical, Error, Warning, Notice

■	Entry	Server Address	Server Port	Facility	Minimum Severity	
0 results found.						
<input type="button" value="Add"/> <input type="button" value="Delete"/> <input type="button" value="Edit"/> <input type="button" value="Apply"/>						

Password Settings	
Password	<input type="password"/>
Confirm Password	<input type="password"/>

Item	Description
Address Type	The address type of switch IP configuration including, Static: Static IP configured by users will be used. Dynamic: Enable the DHCP to obtain the IP address from a DHCP server.
IP Address	Specify the switch static IP address on the static configuration.
Subnet Mask	Specify the switch subnet mask on the static configuration.
Default Gateway	Specify the default gateway on the static configuration. The default gateway must be in the same subnet with switch IP address configuration.
DNS Server 1	Specify the primary user-defined IPv4 DNS server configuration.
DNS Server 2	Specify the secondary user-defined IPv4 DNS server configuration.
SNMP Host Settings	
Server Address	Enter the IP address of the SNMP Network Management Server which will receive SNMP Traps from this device.
Version	The principal SNMP protocol versions including, SNMPv1: This is the initial version of SNMP. SNMPv2: This version uses a community-based form of security, just like SNMPv1, replacing the Party-based Administrative and Security Framework of SNMPv2. SNMPv3: This is an interoperable standards-based protocol defined in RFC2273, 2274, and 2275. It provides secure access to devices by authenticating and encrypting packets over the network. Due to the security vulnerabilities of other versions of SNMP, it is recommended to use SNMPv3.
Type	SNMP Agent devices translate information into a format that can be interpreted by the SNMP manager. The notifications are to the SNMP manager, and are called Trap notifications or Inform requests. - Trap: The notifications are sent by the SNMP agent device when a specific parameter is reached by the device and the trap messages can be improper user authentication, CPU usage, link status, and other significant events. This helps the administrator address network issues. - Inform: Inform is only available on SNMPv2 and v3.

Security Level	<p>The security level of SNMP including,</p> <ul style="list-style-type: none"> - No security: Unsecured SNMP requests - Authentication: Confirmation of the sender's identity and of the timeliness of the request, with the content of the request visible to the network. - Authentication and privacy: With the content of the request encrypted.
Server Port	Enter the server port (1-65535)
Timeout	Set default timeout value.
Retry	Set default retry number.
Log Server	
Server Address	Enter the server address
Server Port	Enter the server port (1-65535)
Facility	The Facility value is a way of determining which process of the machine created the message.
Minimum Severity	The system log SNMP severity command sets the minimum severity level of log events sent as SNMP traps. Log events of lower severity are not sent.
Password Settings	
Password	Configure the password that will be used to restrict access to the device via the Web UI.
Confirm Password	Confirm the password that will be used to restrict access to the device via the Web UI.

IV-5. Mail Alert

SMTP stands for Simple Mail Transfer Protocol. It handles the sending of emails. The ability to support email services. This allows the user to send outgoing mail and retrieve incoming mail, respectively.

IP Settings	
State	Disable ▾
SMTP Server	<input type="text"/>
SMTP Port	<input type="text" value="0"/>
User Name	<input type="text"/>
Password	<input type="password"/>
State	Disable ▾
Sender	<input type="text"/>
Receiver	<input type="text"/>
Alert Type	<input type="checkbox"/> Powered Device Monitor

Apply

Send Test

Item	Description
State	Enable or disable.
SMTP Server	This is the domain name or IP address of your external e-mail serve.
SMTP Port	This is the port used by your e-mail provided for sending email.
User Name	This is your username for your email account.
Password	This is the password for your email account.
State	This needs to be enabled if your email provider requires TLS authentication.
Sender	This is your email address.
Receiver	This is the e-mail address of recipient for the SMTP server.
Alert Type	Enable/disable Powered Device Monitor.

IV-6. Powered Device Monitor

■	Entry	Port	Mode	ping PD IP Address	Interval Time	Retry Count	Action	Reboot Time	Connect Status
<input type="checkbox"/>	1	GE1	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	2	GE2	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	3	GE3	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	4	GE4	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	5	GE5	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	6	GE6	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	7	GE7	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	8	GE8	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	9	GE9	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	10	GE10	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	11	GE11	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	12	GE12	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	13	GE13	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	14	GE14	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	15	GE15	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	16	GE16	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	17	GE17	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	18	GE18	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	19	GE19	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	20	GE20	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	21	GE21	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	22	GE22	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	23	GE23	Disable	0.0.0.0	30	2	None	90	Off
<input type="checkbox"/>	24	GE24	Disable	0.0.0.0	30	2	None	90	Off

Note: PD and switch are in the same network segment.

[Edit](#)

Click “Edit” to view the Powered Device Monitor page.

Port List	GE1	
Status	<input checked="" type="checkbox"/> Enable	
ping PD IP Address	<input type="text" value="0.0.0.0"/>	
Interval Time	<input type="text" value="30"/>	Sec (10 - 300, default 30)
Retry Count	<input type="text" value="2"/>	(1 - 5, default 2)
Action	<input type="text" value="None"/> ▼	
Reboot Time	<input type="text" value="90"/>	Sec (30 - 180, default 90)

Item	Description
Status	Enable/Disable
Ping PD IP Address	Input IP address of the PD
Interval Time	The default setting about Interval (30 seconds) will make switch detect the PD status by performing ping requests every 30 seconds.
Retry Count	If there is no ping reply from the PD, retry count starts to count from 1. Once retry count is reached to 2 times, the switch will perform the action in which you defined.
Action	The Action including none, PD reboot, Reboot & Alarm and Alarm
Reboot Time	Set the reboot time from 30-180 seconds (default is 90 seconds)

IV-7. ONVIF

The ONVIF page including two sections,

- IPC Discover
- NVR Discover

IV-7-1. IPC Discover

It shows the information of device name, IP address, Mac address, port ID and status of IPC.

<input checked="" type="checkbox"/>	Device Name	IP Address	MAC Address	Port ID	Status
0 results found.					

Edit

Auth

Account

IV-7-2. NVR Discover

It shows the information of device name, IP address, Mac address, port ID, group ID and group number of NVR.

<input type="checkbox"/>	Device Name	IP Address	MAC Address	Port ID	Group ID	Group Number
0 results found.						

Edit

IPC List

IV-8. E-map Management

The E-map management will allow you to import a layout of your building to graphically layout your switches.

IV-8-1. Image Upload

In this page you can upload the image for your E-map.

<input type="checkbox"/>	Name	Bind Num
0 results found.		

Add

Delete

Image Upload Add

Filename	<div>Choose File</div> <div>No file chosen</div>
----------	--

Apply

Close

NOTE: Images are automatically scaled when uploaded. The image formats are JPG and PNG. Maximum file size for images is 1.5MB. The recommended resolution for images is 1024 x 768 pixels.

IV-8-2. Image Settings

In this page you can view and edit the location name.

<input type="checkbox"/>	Entry	Location name	Map Image
<input type="checkbox"/>	1	Edimax	empty
<input type="checkbox"/>	2		empty
<input type="checkbox"/>	3		empty
<input type="checkbox"/>	4		empty

Edit

Click the Edit button to view the Image Setting page,


Entry	1
Location name	<input type="text" value="Edimax"/>
Map Image	<input type="text" value="empty"/> ▾

Apply

Close


IV-8-3. E-map View

You can view E-Maps of multiple locations.

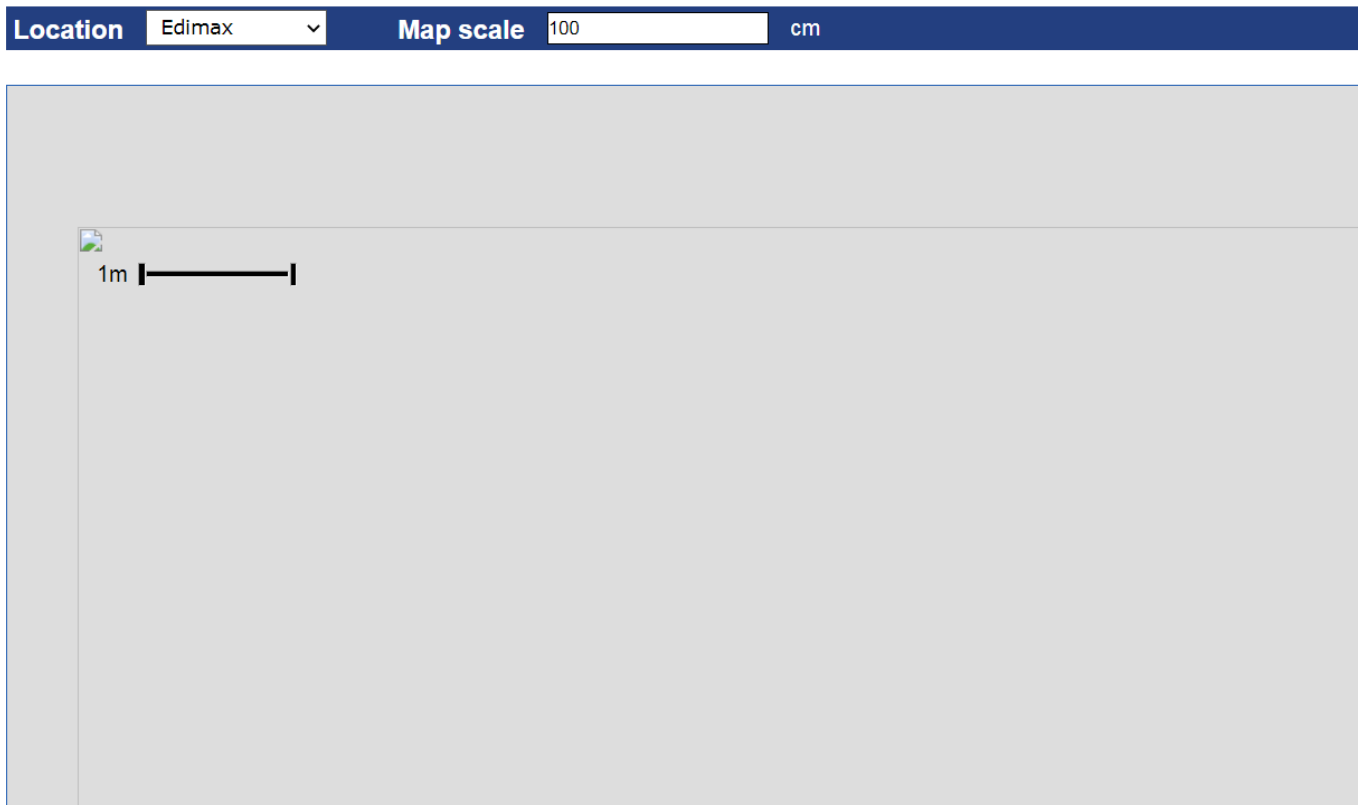

IV-9. Tools

In this section you can check if you have the latest version on your switch or backup/restore the configuration etc...



IV-9-1. Firmware Information

In this page you can check the firmware version, size or update time.

Version	1.0.3
Size(Byte)	9761472
Update Time	Aug 22 2020 - 14:36:05

IV-9-2. Firmware Upgrade & Backup

Firmware upgrades can be done via either Trivial FileTransfer Protocol (TFTP) or Hypertext Transfer Protocol/with Secure Sockets (HTTP/HTTPS).

Action	<input checked="" type="radio"/> Upgrade <input type="radio"/> Backup
Method	<input type="radio"/> TFTP <input checked="" type="radio"/> HTTP
Filename	<input type="button" value="Choose File"/> No file chosen

Item	Description
TFTP	TFTP is an unsecure file transfer protocol typically used to distribute software upgrades and configuration files. When using the TFTP client, the file will be downloaded from a TFTP server on your network.
HTTP	HTTP is an application protocol that runs on top of the TCP/IP suite of protocols (the foundation protocols for the Internet)

IV-9-3. Configuration Restore & Backup

You can restore or backup the configuration from HTTP/TFTP in this page.

Action	<input checked="" type="radio"/> Upgrade <input type="radio"/> Backup
Method	<input type="radio"/> TFTP <input checked="" type="radio"/> HTTP
Configuration	<input checked="" type="radio"/> Running Configuration <input type="radio"/> Startup Configuration <input type="radio"/> Backup Configuration <input type="radio"/> RAM Log <input type="radio"/> Flash Log
Filename	<input type="button" value="Choose File"/> No file chosen

Item	Description
TFTP	TFTP is an unsecure file transfer protocol typically used to distribute software upgrades and configuration files. When using the TFTP client, the file will be downloaded from a TFTP server on your network.
HTTP	HTTP is an application protocol that runs on top of the TCP/IP suite of protocols (the foundation protocols for the Internet)

IV-9-4. Reset

This page allows users to restore the switch to factory default.

Warning :	The Switch will be reset to its factory defaults including IP address.
<input type="button" value="Restore Factory Default"/>	


IV-9-5. Reboot System

You can reboot the switch via the web UI.

Warning :	Reboot the system and unsaved changes in the configuration will be lost.
<input type="button" value="Reboot"/>	

V. Config Reload Button(Firmware version V1.0.8)

You can easily create Surveillance VLAN by pressing the “Config Button” on System Information page.

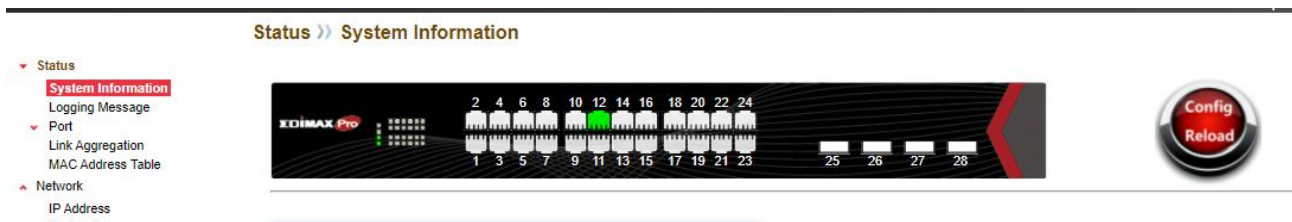

Please follow the steps below to load default Surveillance VLAN configurations:

1. Click  and Tab OK to continue.

Restore to factory defaults except IP. You need to reboot the device to take effect. Do you want to continue?

OK

Cancel

2. Tab OK to continue.


Reboot the device to take effect now. Do you want to continue?

OK

Cancel


NOTE: 1.The IP address won't be changed after system restarted.
2. Surveillance VLAN 10 has been created.

3. Enter your new password and confirm password

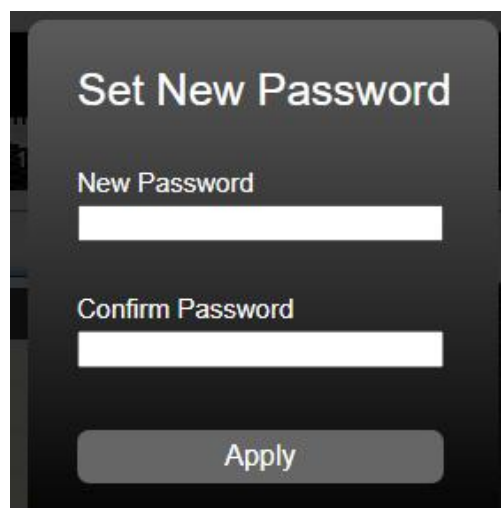

A dark-themed form titled "Set New Password". It contains two input fields: "New Password" and "Confirm Password". Below the fields is a grey button labeled "Apply".

You can check out the differences after "Config Reload".

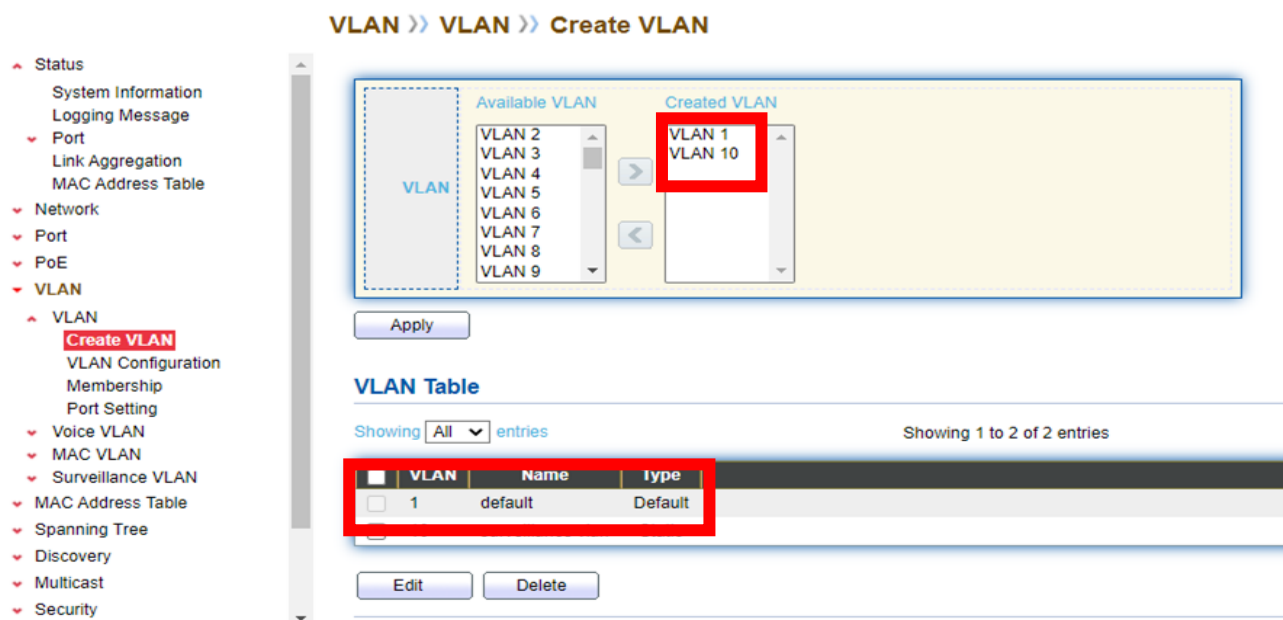

The interface shows the "VLAN >> VLAN >> Create VLAN" configuration page. On the left is a navigation menu with options like Status, System Information, Port, Network, PoE, and VLAN. The "VLAN" section is expanded, and "Create VLAN" is highlighted. The main area contains two lists: "Available VLAN" (VLAN 2-9) and "Created VLAN" (VLAN 1, VLAN 10). A red box highlights the "Created VLAN" list. Below these lists is an "Apply" button. Further down is a "VLAN Table" section with a dropdown set to "All" and "Showing 1 to 2 of 2 entries". A table with 4 columns (checkbox, VLAN, Name, type) contains one entry: VLAN 1, default, Default. A red box highlights this table entry. At the bottom are "Edit" and "Delete" buttons.

VLAN >> VLAN >> Create VLAN

Available VLAN

- VLAN 2
- VLAN 3
- VLAN 4
- VLAN 5
- VLAN 6
- VLAN 7
- VLAN 8
- VLAN 9

Created VLAN

- VLAN 1
- VLAN 10

Apply

VLAN Table


Showing All entries Showing 1 to 2 of 2 entries

	VLAN	Name	type
<input type="checkbox"/>	1	default	Default

Edit Delete

V-1. ONVIF Compliant Devices Enrollment (Standard Mode)

ONVIF Compliant devices will be enrolled in VLAN10 automatically after “Config Reload” procedures.

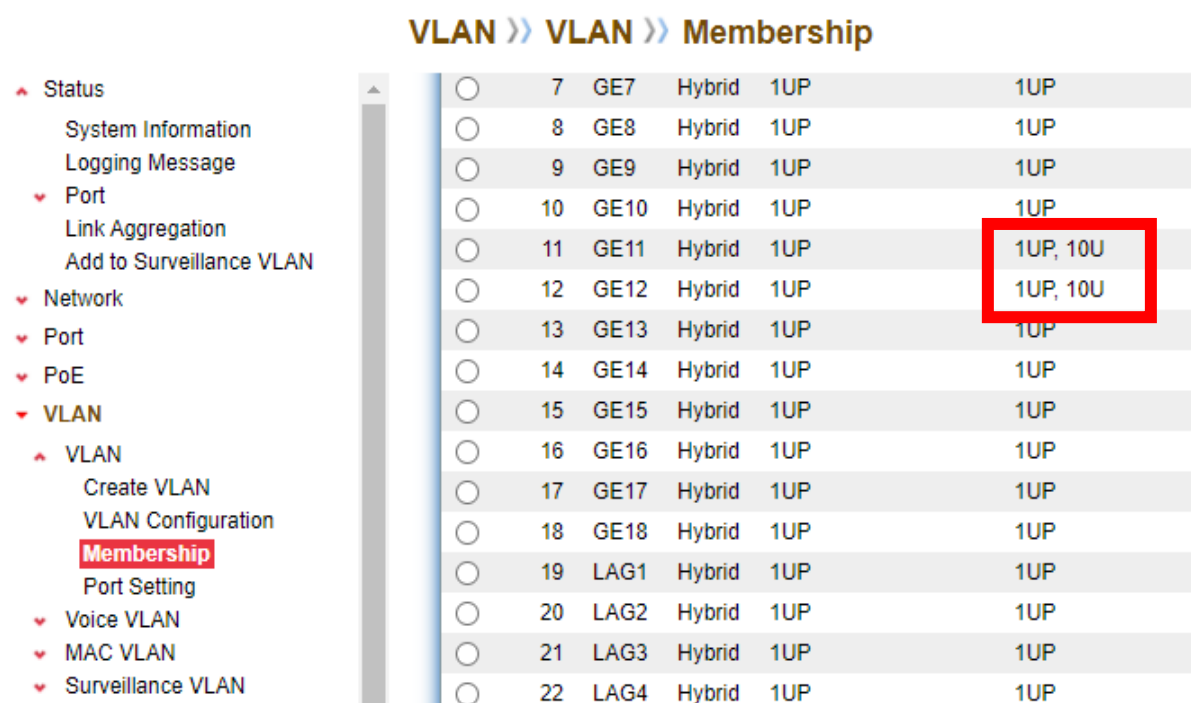

<input type="radio"/>	7	GE7	Hybrid	1UP	1UP
<input type="radio"/>	8	GE8	Hybrid	1UP	1UP
<input type="radio"/>	9	GE9	Hybrid	1UP	1UP
<input type="radio"/>	10	GE10	Hybrid	1UP	1UP
<input type="radio"/>	11	GE11	Hybrid	1UP	1UP, 10U
<input type="radio"/>	12	GE12	Hybrid	1UP	1UP, 10U
<input type="radio"/>	13	GE13	Hybrid	1UP	1UP
<input type="radio"/>	14	GE14	Hybrid	1UP	1UP
<input type="radio"/>	15	GE15	Hybrid	1UP	1UP
<input type="radio"/>	16	GE16	Hybrid	1UP	1UP
<input type="radio"/>	17	GE17	Hybrid	1UP	1UP
<input type="radio"/>	18	GE18	Hybrid	1UP	1UP
<input type="radio"/>	19	LAG1	Hybrid	1UP	1UP
<input type="radio"/>	20	LAG2	Hybrid	1UP	1UP
<input type="radio"/>	21	LAG3	Hybrid	1UP	1UP
<input type="radio"/>	22	LAG4	Hybrid	1UP	1UP

Note:

- All ports are belong to VLAN1 (VID=1) by default
- 1UP means : VID=1; PVID=1
- 1UP, 10U means : VID=1, 10; PVID=1

V-2. Non-ONVIF Compliant Devices Enrollment (Standard Mode)

Non-ONVIF compliant devices can be enrolled in Surveillance VLAN manually. Please follow the blow step to add the Non-ONVIF compliant devices (including Non-ONVIF compliant IP camera, Standalone NVR/CMS and PC with NVR/CMS) into Surveillance VLAN 10.

Only 1 STEP:

Choose the Non-ONVIF compliant device(s) and Click the “Add “ button. The Non-ONVIF Compliant device(s) will be added in Surveillance VLAN10.

Status >> Add to Surveillance VLAN

Status

System Information
Logging Message

Port

Link Aggregation

Add to Surveillance VLAN

Network

Port

PoE

VLAN

MAC Address Table

Spanning Tree

Discovery

Multicast

Security

ACL

Add to Surveillance VLAN

Showing **All** entries

<input type="checkbox"/>	VLAN	MAC Address	Type	Port
<input type="checkbox"/>	1	FC:8F:C4:0D:1B:70	Management	CPU
<input type="checkbox"/>	10	00:1F:1F:00:00:0E	Dynamic	GE13
<input type="checkbox"/>	10	00:1F:1F:BD:6E:64	Dynamic	GE14
<input type="checkbox"/>	1	08:62:66:E6:48:30	Dynamic	GE18
<input type="checkbox"/>	10	08:62:66:E6:48:30	Dynamic	GE18
<input checked="" type="checkbox"/>	1	08:BE:AC:0A:1C:86	Dynamic	GE18
<input type="checkbox"/>	10	50:BE:19:00:18:5A	Dynamic	GE12

Clear

Refresh

Add

1

Success.

The Non-ONVIF Compliant device(s) has been added in SurveillanceVLAN10.

VLAN >> VLAN >> Membership

Status

System Information
Logging Message

Port

Link Aggregation

Add to Surveillance VLAN

Network

Port

PoE

VLAN

VLAN

Create VLAN

VLAN Configuration

Membership

Port Setting

Voice VLAN

MAC VLAN

Surveillance VLAN

MAC Address Table

Spanning Tree

Discovery


Multicast

	Entry	Port	Mode	Administrative VLAN	Operational VLAN
<input type="radio"/>	1	GE1	Hybrid	1UP	1UP
<input type="radio"/>	2	GE2	Hybrid	1UP	1UP
<input type="radio"/>	3	GE3	Hybrid	1UP	1UP
<input type="radio"/>	4	GE4	Hybrid	1UP	1UP
<input type="radio"/>	5	GE5	Hybrid	1UP	1UP
<input type="radio"/>	6	GE6	Hybrid	1UP	1UP
<input type="radio"/>	7	GE7	Hybrid	1UP	1UP
<input type="radio"/>	8	GE8	Hybrid	1UP	1UP
<input type="radio"/>	9	GE9	Hybrid	1UP	1UP
<input type="radio"/>	10	GE10	Hybrid	1UP	1UP
<input type="radio"/>	11	GE11	Hybrid	1UP	1UP
<input type="radio"/>	12	GE12	Hybrid	1UP	1UP
<input type="radio"/>	13	GE13	Hybrid	1UP	1UP
<input type="radio"/>	14	GE14	Hybrid	1UP	1UP
<input type="radio"/>	15	GE15	Hybrid	1UP	1UP
<input type="radio"/>	16	GE16	Hybrid	1UP	1UP
<input type="radio"/>	17	GE17	Hybrid	1UP	1UP
<input checked="" type="radio"/>	18	GE18	Hybrid	1UP	1UP, 10U

You can Configure ONVIF Compliant Device(s) and Non-ONVIF Compliant Device(s) in **Surveillance Mode**, too.

V-3. ONVIF Compliant Devices Enrollment (Surveillance Mode)

ONVIF Compliant devices will be enrolled in VLAN10 automatically after “Config Reload” procedures.

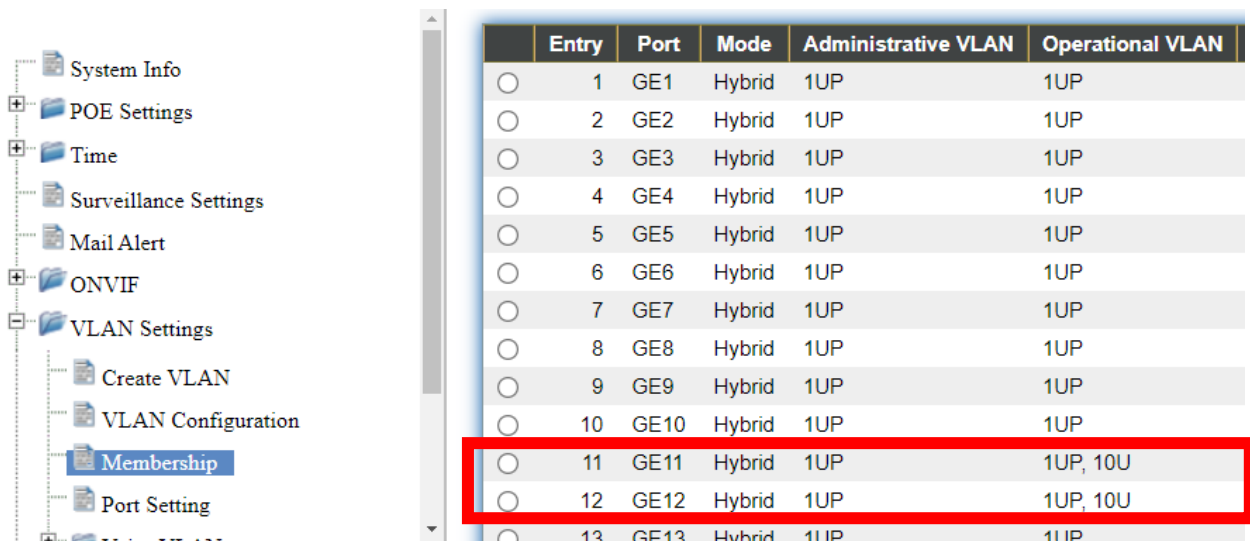

	Entry	Port	Mode	Administrative VLAN	Operational VLAN
<input type="radio"/>	1	GE1	Hybrid	1UP	1UP
<input type="radio"/>	2	GE2	Hybrid	1UP	1UP
<input type="radio"/>	3	GE3	Hybrid	1UP	1UP
<input type="radio"/>	4	GE4	Hybrid	1UP	1UP
<input type="radio"/>	5	GE5	Hybrid	1UP	1UP
<input type="radio"/>	6	GE6	Hybrid	1UP	1UP
<input type="radio"/>	7	GE7	Hybrid	1UP	1UP
<input type="radio"/>	8	GE8	Hybrid	1UP	1UP
<input type="radio"/>	9	GE9	Hybrid	1UP	1UP
<input type="radio"/>	10	GE10	Hybrid	1UP	1UP
<input type="radio"/>	11	GE11	Hybrid	1UP	1UP, 10U
<input type="radio"/>	12	GE12	Hybrid	1UP	1UP, 10U
<input type="radio"/>	13	GE13	Hybrid	1UP	1UP

Note:

- All ports are belong to VLAN1 (VID 1) by default
- 1UP means : VID=1; PVID=1
- 1UP, 10U means : VID=1, 10; PVID=1

V-4. Non-ONVIF Compliant Devices Enrollment (Surveillance Mode)

Only 1 STEP:

Choose the Non-ONVIF compliant device(s) and Click the “Add “ button. Non-ONVIF Compliant device(s) will be added in Surveillance VLAN10.

- System Info
- POE Settings
- Time
- Surveillance Settings
- Mail Alert
- ONVIF
 - IPC Discover
 - Add to Surveillance VLAN
 - E-map Management
- VLAN Settings
 - Create VLAN

Add to Surveillance VLAN

Showing All entries Showing 1

<input type="checkbox"/>	VLAN	MAC Address	Type	Port
<input type="checkbox"/>	1	EC:8E:C4:0D:1D:5C	Management	GPU
<input type="checkbox"/>	10	8C:04:BA:0C:37:79	Dynamic	GE18

1

Success.

The Non-ONVIF Compliant device(s) has been added in SurveillanceVLAN10.

- System Info
- POE Settings
- Time
- Surveillance Settings
- Mail Alert
- ONVIF
 - IPC Discover
 - Add to Surveillance VLAN
 - E-map Management
- VLAN Settings
 - Create VLAN
 - VLAN Configuration
 - Membership
 - Port Setting
- Voice VLAN
- MAC VLAN
- Surveillance VLAN
- Traffic Segmentation

Membership Table

	Entry	Port	Mode	Administrative VLAN	Operational VLAN
<input type="radio"/>	1	GE1	Hybrid	1UP	1UP
<input type="radio"/>	2	GE2	Hybrid	1UP	1UP
<input type="radio"/>	3	GE3	Hybrid	1UP	1UP
<input type="radio"/>	4	GE4	Hybrid	1UP	1UP
<input type="radio"/>	5	GE5	Hybrid	1UP	1UP
<input type="radio"/>	6	GE6	Hybrid	1UP	1UP
<input type="radio"/>	7	GE7	Hybrid	1UP	1UP
<input type="radio"/>	8	GE8	Hybrid	1UP	1UP
<input type="radio"/>	9	GE9	Hybrid	1UP	1UP
<input type="radio"/>	10	GE10	Hybrid	1UP	1UP
<input type="radio"/>	11	GE11	Hybrid	1UP	1UP, 10U
<input type="radio"/>	12	GE12	Hybrid	1UP	1UP, 10U
<input type="radio"/>	13	GE13	Hybrid	1UP	1UP
<input type="radio"/>	14	GE14	Hybrid	1UP	1UP
<input type="radio"/>	15	GE15	Hybrid	1UP	1UP
<input type="radio"/>	16	GE16	Hybrid	1UP	1UP
<input type="radio"/>	17	GE17	Hybrid	1UP	1UP
<input checked="" type="radio"/>	18	GE18	Hybrid	1UP	1UP, 10U

COPYRIGHT

Copyright © Edimax Technology Co., Ltd. all rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission from Edimax Technology Co., Ltd.

Edimax Technology Co., Ltd. makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability, or fitness for any particular purpose. Any software described in this manual is sold or licensed as is. Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Edimax Technology Co., Ltd. reserves the right to revise this publication and to make changes from time to time in the contents hereof without the obligation to notify any person of such revision or changes.

The product you have purchased and the setup screen may appear slightly different from those shown in this QIG. The software and specifications are subject to change without notice. Please visit our website www.edimax.com for updates. All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

R&TTE Compliance Statement

This equipment complies with all the requirements of DIRECTIVE 2014/30/EU OF THE EUROPEAN PARLIAMENT AND THE COUNCIL of March 9, 1999 on radio equipment and telecommunication terminal equipment and the mutual recognition of their conformity (R&TTE). The R&TTE Directive repeals and replaces in the directive 98/13/EEC (Telecommunications Terminal Equipment and Satellite Earth Station Equipment) As of April 8, 2000.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

EU Countries Intended for Use

The ETSI version of this device is intended for home and office use in Austria, Belgium, Bulgaria, Cyprus, Czech, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Turkey, and United Kingdom. The ETSI version of this device is also authorized for use in EFTA member states: Iceland, Liechtenstein, Norway, and Switzerland.

EU Countries Not Intended for Use

None

EU Declaration of Conformity

- English:** This equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/30/EU.
- Français:** Cet équipement est conforme aux exigences essentielles et autres dispositions de la directive 2014/30/EU.
- Čeština:** Toto zařízení je v souladu se základními požadavky a ostatními příslušnými ustanoveními směrnic 2014/30/EU.
- Polski:** Urządzenie jest zgodne z ogólnymi wymaganiami oraz szczególnymi warunkami określonymi Dyrektywą UE 2014/30/EU.
- Română:** Acest echipament este în conformitate cu cerințele esențiale și alte prevederi relevante ale Directivei 2014/30/EU.
- Русский:** Это оборудование соответствует основным требованиям и положениям Директивы 2014/30/EU.
- Magyar:** Ez a berendezés megfelel az alapvető követelményeknek és más vonatkozó irányelveknek (2014/30/EU).
- Türkçe:** Bu cihaz 2014/30/EU. direktifleri zorunlu istekler ve diğer hükümlerle ile uyumludur.
- Українська:** Обладнання відповідає вимогам і умовам директиви 2014/30/EU.
- Slovenčina:** Toto zariadenie spĺňa základné požiadavky a ďalšie príslušné ustanovenia smerníc 2014/30/EU.
- Deutsch:** Dieses Gerät erfüllt die Voraussetzungen gemäß den Richtlinien 2014/30/EU.
- Español:** El presente equipo cumple los requisitos esenciales de la Directiva 2014/30/EU.
- Italiano:** Questo apparecchio è conforme ai requisiti essenziali e alle altre disposizioni applicabili della Direttiva 2014/30/EU.
- Nederlands:** Dit apparaat voldoet aan de essentiële eisen en andere van toepassing zijnde bepalingen van richtlijn 2014/30/EU.
- Português:** Este equipamento cumpre os requisitos essenciais da Directiva 2014/30/EU.
- Norsk:** Dette utstyret er i samsvar med de viktigste kravene og andre relevante regler i Direktiv 2014/30/EU.
- Svenska:** Denna utrustning är i överensstämmelse med de väsentliga kraven och övriga relevanta bestämmelser i direktiv 2014/30/EU.
- Dansk:** Dette udstyr er i overensstemmelse med de væsentligste krav og andre relevante forordninger i direktiv 2014/30/EU.
- suomen kieli:** Tämä laite täyttää direktiivien 2014/30/EU. oleelliset vaatimukset ja muut asiaankuuluvat määräykset.



WEEE Directive & Product Disposal



At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

Declaration of Conformity

We, Edimax Technology Co., Ltd., declare under our sole responsibility, that the equipment described below complies with the requirements of the European R&TTE directives.

Equipment: 16-Port Gigabit PoE Switch, 2 RJ45/2 SFP combo ports
Model No.: GS-5210PL

The following European standards for essential requirements have been followed:

Directives 2014/30/EU

EMC : EN 55032:2015+AC:2016
EN 61000-3-2:2014
EN 61000-3-3:2013+A1:2019
EN 55035:2017

Directives 2014/35/EU

Safety (LVD) : IEC 62368-1:2014 (2nd Edition) and/or EN 62368-1:2014+A11:2017

Edimax Technology Europe B.V.
Fijenhof 2,
5652 AE Eindhoven,
The Netherlands

a company of:
Edimax Technology Co., Ltd.
No. 278, Xinhua 1st Rd.,
Neihu Dist., Taipei City,
Taiwan

Printed Name: David Huang
Title: Director
Edimax Technology Europe B.V.



Date of Signature: Nov., 2020

Signature:

A handwritten signature in black ink, appearing to read 'Albert Chang', written over a horizontal line.

Printed Name:

Albert Chang

Title:

Director

Edimax Technology Co., Ltd.

Declaration of Conformity

We, Edimax Technology Co., Ltd., declare under our sole responsibility, that the equipment described below complies with the requirements of the European R&TTE directives.

Equipment: 18-Port Gigabit PoE Switch, 2 RJ45/2 SFP combo ports
Model No.: GS-5216PLC

The following European standards for essential requirements have been followed:

Directives 2014/30/EU

EMC : EN 55032:2015+AC:2016
EN 61000-3-2:2014
EN 61000-3-3:2013+A1:2019
EN 55035:2017

Directives 2014/35/EU

Safety (LVD) : IEC 62368-1:2014 (2nd Edition) and/or EN 62368-1:2014+A11:2017

Edimax Technology Europe B.V.
Fijenhof 2,
5652 AE Eindhoven,
The Netherlands

a company of:
Edimax Technology Co., Ltd.
No. 278, Xinhua 1st Rd.,
Neihu Dist., Taipei City,
Taiwan

Printed Name: David Huang
Title: Director
Edimax Technology Europe B.V.



Date of Signature: Nov., 2020

Signature:

A handwritten signature in black ink, appearing to read 'Albert Chang', written over a horizontal line.

Printed Name: Albert Chang

Title:

Director
Edimax Technology Co., Ltd.

Declaration of Conformity

We, Edimax Technology Co., Ltd., declare under our sole responsibility, that the equipment described below complies with the requirements of the European R&TTE directives.

Equipment: 28-Port Gigabit PoE Switch, 4 RJ45/4 SFP combo ports
Model No.: GS-5424PLC V2

The following European standards for essential requirements have been followed:

Directives 2014/30/EU

EMC : EN 55032:2015+AC:2016
EN 61000-3-2:2014
EN 61000-3-3:2013+A1:2019
EN 55035:2017

Directives 2014/35/EU

Safety (LVD) : IEC 62368-1:2014 (2nd Edition) and/or EN 62368-1:2014+A11:2017

Edimax Technology Europe B.V.
Fijenhof 2,
5652 AE Eindhoven,
The Netherlands

a company of:
Edimax Technology Co., Ltd.
No. 278, Xinhua 1st Rd.,
Neihu Dist., Taipei City,
Taiwan

Printed Name: David Huang
Title: Director
Edimax Technology Europe B.V.



Date of Signature: Nov., 2020

Signature:

A handwritten signature in black ink, appearing to read 'Albert Chang', written over a horizontal line.

Printed Name: Albert Chang

Title: Director

Edimax Technology Co., Ltd.