


# H3-EM-68-100 Electronic Swinghandle Operating Instructions

## Package Contents

- H3-EM-68-x00 Electronic Swinghandle with Proximity Reader (qty1)
- EM-0-45827 M3x25 Long Mounting Screws (qty 4)
- EM-0-47151 M3x14 Long Mounting Screw (qty 1)
- EM-0-45825 Rotation Limiter (qty 1)
- E5-C-04 Pawl Screw (qty 1)
- EM-0-45826 Top Mounting Bracket (qty 1)
- EM-0-45822 Bottom Mounting Bracket (qty 1)
- Operating Instructions (qty 1)

## H3-EM-68-x00 Electronic Swinghandle with Proximity Reader

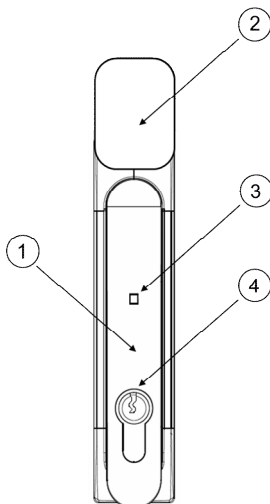

1. Handle
2. Prox Reader
3. Tri-Color Status LED
4. Lock Plug

## Features

- Installed 125kHz proximity reader module with Wiegand data output
- Remote lock and unlock capability
- Single or multi-point lock actuation
- Momentary or continuous lock actuation
- Tri-color LED (blue/magenta/red) to indicate lock and handle status
- High security DIN lock manual override
- Accommodates both left and right doors
- For indoor use only

## Specifications

### Actuator Module

Supply Voltage ( $V_{SUPPLY}$ ): 12VDC to 24VDC (**NOTE:** Status LED will blink red if the supply voltage is out of range.)  
 Standby Current: 50mA maximum at 12VDC  
 Operating Current: 200mA maximum at 12VDC (with no external mechanical load applied to handle)  
 Stall Current: 1A maximum (at 12VDC, limited to 2 seconds)

Operating Transit Time: 1 second maximum (**NOTE:** Power must be present during transit times. If power is removed while the lock slide is moving to the unlock position, then the control input signal must be asserted again. If power is removed while the lock slide is moving to the lock position, it will complete it's cycle when power is restored.)  
 Electronic Unlock Time: 3 seconds minimum  
 Open Collector Outputs: Rated for  $V_{SUPPLY}$ , 200mA maximum load

### Proximity Reader Module

Supply Voltage ( $V_{CC}$ ): 12VDC to 24VDC  
 Operating Current: 20mA maximum (no external devices attached)  
 Transmit Frequency: 125kHz FSK  
 DATA Signal Voltage: 5VDC  
 DATA Pulse Interval Time: 40 $\mu$ s  
 DATA Signal Delay: 2ms


## Mounting and Installation

Please refer to Southco trade drawing J-H3-EM-68-100 for mounting and installation details.

## Wiring Diagrams

The H3-EM-68-x00 contains two separate functional modules: the actuator module and proximity reader module. The actuator module controls and monitors the locking function of the swinghandle. The proximity module reads the contents of a compatible proximity card and converts it to Wiegand format.


These two modules operate independently of each other and require connection to an access control unit (**not provided**), as illustrated below, for the entire product to be fully functional.

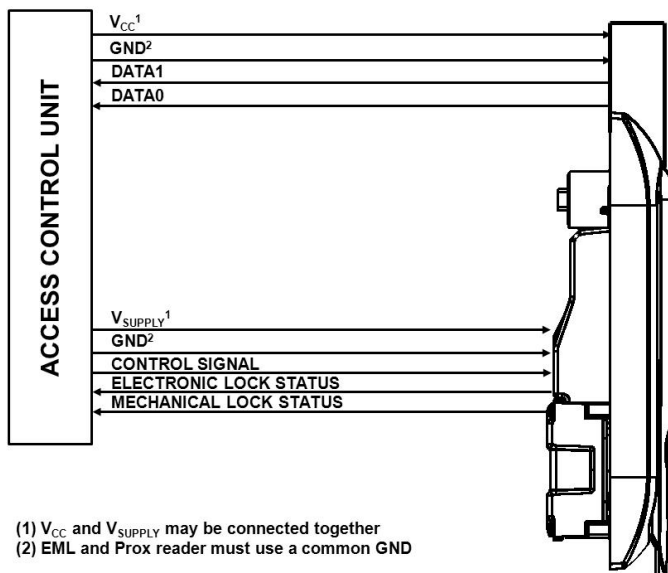

- (1)  $V_{CC}$  and  $V_{SUPPLY}$  may be connected together  
 (2) EML and Prox reader must use a common GND


# H3-EM-68-100 Electronic Swinghandle Operating Instructions

The actuator module of the swinghandle is accessed with a six-position connector on the rear of the unit, shown below.

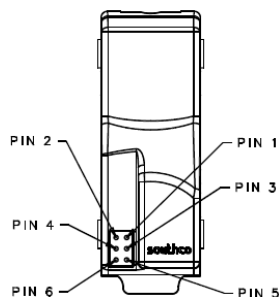

Pin	Description	Note
1	V <sub>GND</sub>	ground (must be same as proximity reader module)
2	V <sub>SUPPLY</sub>	12 to 24 VDC power supply input (may be connected to prox reader V <sub>CC</sub> input)
3	N/C	no connect
4	Control Signal	command input (9VDC up to supply voltage, 50 milliseconds minimum)
5	Electronic Lock Status	open collector output (rated for V <sub>SUPPLY</sub> , 200mA max. load)
6	Mechanical Lock Status	open collector output (rated for V <sub>SUPPLY</sub> , 200mA max. load)

The proximity reader module of the swinghandle is accessed with a four-position connector attached to a harness connected to the module's circuit board. The module's connector pinout is:

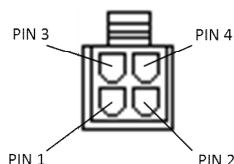

Pin	Wire Color	Description	Note
1	Black	GND	ground (must be same as actuator module)
2	Red	VCC	12 to 24VDC power supply input (may be connected to EML V <sub>SUPPLY</sub> input)
3	Green	DATA0	DATA0 output
4	White	DATA1	DATA1 output

**NOTE:** The mating connectors/harnesses are not provided with the H3-EM-68-x00. Refer to Southco trade drawing J-H3-EM-68-100 for mating connector/harness requirements.

## Control Input Signal

This signal is used to control the electronic lock slide position.

- for UNLOCKED position: Supply 9VDC minimum (do not exceed supply voltage) for at least 50 milliseconds. The lock will remain unlocked for as long as the signal is present, or a minimum of 3 seconds. Signal timing can typically be adjusted at the access control device. The control signal current draw is less than 10mA.
- for LOCKED position: Supply an open contact or 0VDC (0 to 0.5V)

## Electronic Lock Status Output and Mechanical Lock Status Output Signals

### Electronic Lock Status Output Signal

This output will be LOW (GND) when the lock slide is electromechanically moved to the unlocked position. It will be in the open collector state (high-impedance) when in the locked position.

### Mechanical Lock Status Output Signal

This output will be LOW (GND) when the handle is in the open position or when the keylock in the actuator is manually unlocked. It will be in the open collector state (high-impedance) when in the secured position.

**NOTE:** These outputs are open collector outputs rated for V<sub>SUPPLY</sub> with a maximum load of 200mA. To avoid damage to the H3-EM, do not exceed voltage and current ratings.


## Status LED and Output Signals

The latch is equipped with a tri-color (blue/magenta/red) LED visible from the front of the latch. This LED provides a visible notification of the latch status. The different latch states are described below. Please refer to the **Control Input Signal**, **Electronic Lock Status Output Signal**, and **Mechanical Lock Status Output Signal** sections for further details on these signals.

### Secured

The latch is securely closed, prohibiting access.

- The Status LED will be solid blue.
- The electronic lock status output is at its open collector state.
- The mechanical lock status output is at its open collector state.

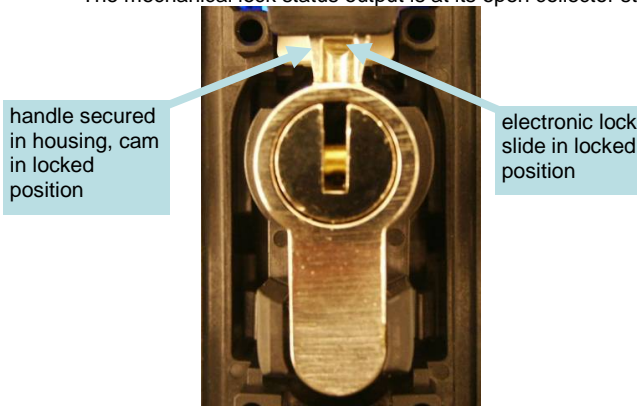


"Secured" State

## H3-EM-68-100 Electronic Swinghandle Operating Instructions

### Electronically Released

The electronic lock slide is in the unlocked position and the handle can be pulled open.

- The Status LED will alternate flashing blue/magenta.
- The electronic lock status output is 0V while the lock slide is in the unlocked position.
- The mechanical lock status output is at its open collector state.

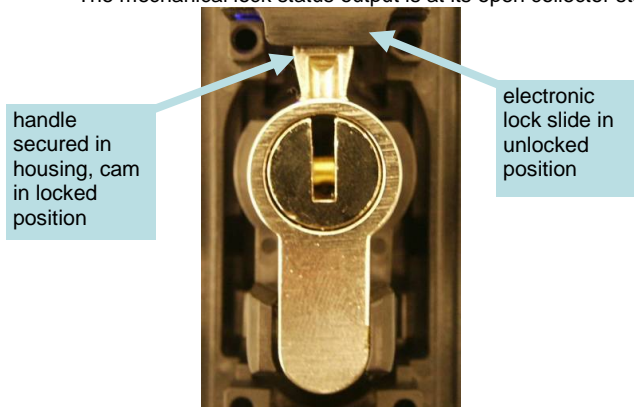


*"Electronically Released" State*

### Mechanically Released

The latch is released by opening the handle or moving the cam from its lock position.

- The Status LED will flash blue.
- The electronic lock status output will be at its open collector state if the electronic lock slide is in the locked position. It will be 0V if the lock slide is in the unlocked position.
- The mechanical lock status output is 0V.

**NOTE:** The lock sensor is an optical device that senses the presence of the lock pawl. Reflectivity of the lock pawl material can affect sensing. Use only Southco-supplied locks.

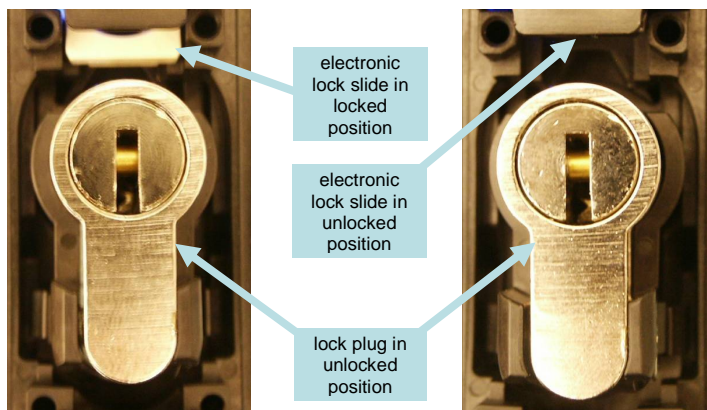


*"Mechanically Released" State*

### Handle not Fully Closed

This is an interim state and may occur while closing the handle when the cam is not secured by the electronic lock slide. The latch is not fully secured during this state.

- The Status LED will alternate flashing blue/red if the cam is not detected. It will flash blue/red/red if the cam is detected, but the lock plate is not in the right position. This could be due to mechanical failure or tampering.
- The electronic lock status output is 0V if the lock slide is in the unlocked position. It will be at its open collector state if it is in the lock position.
- The mechanical lock status output is 0V if the cam is not detected. It will be at its open collector state if it is detected.

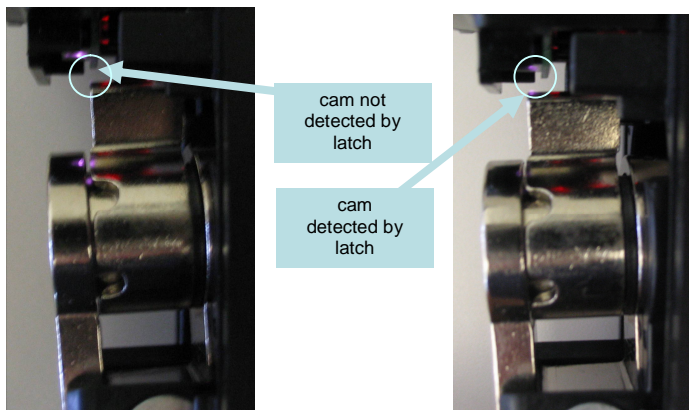

*"Handle not Fully Closed" State*

### Electronic Lock Slide Error

The electronic lock slide does not respond to the command input signal.

- The Status LED will flash magenta if the latch is secured. It will alternate flashing red/magenta if the latch is mechanically released.
- The electronic lock status output is at its open collector state.
- The mechanical lock status output will be at its open collector state if the cam is in its lock position. It will be 0V if the mechanical key is moved from its lock position.

For technical support of this product contact: [info@southco.com](mailto:info@southco.com) or visit: [www.southco.com](http://www.southco.com)

## H3-EM-68-100 Electronic Swinghandle Operating Instructions

### **FCC Compliance Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Warning: The equipment complies with RF exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

### **Industry Canada Compliance Statement**

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of Industry Canada.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques," NMB-003 édictée par l'Industrie.