



# **BEETLE /i8A-3**

(D425/D525-Motherboard)

Modular POS System

User Manual

## **We would like to know your opinion on this publication.**

Please send us a copy of this page if you have any constructive criticism.

We would like to thank you in advance for your comments.

With kind regards,

---

### **Your opinion:**

Wincor Nixdorf International GmbH  
Documentation RD HWD01  
Wohlrabedamm 31  
D-13629 Berlin

E-Mail: [retail.documentation@wincor-nixdorf.com](mailto:retail.documentation@wincor-nixdorf.com)

Order No.: **01750220871C**

# **BEETLE /i8A-3**

**(D425/D525 Motherboard)**

Modular POS System



All brand and product names mentioned in this document are trademarks of their respective owners.

---

**Copyright© Wincor Nixdorf International GmbH, 2012**

The reproduction, transmission or use of this document or its contents is not permitted without express authority.

Offenders will be liable for damages.

All rights, including rights created by patent grant or registration of a utility model or design, are reserved.

Delivery subject to availability; technical modifications possible.

# Contents

<b>Manufacturer's Certification.....</b>	<b>7</b>
Tested Safety.....	7
FCC-Class A Declaration.....	7
Important notes.....	7
 <b>Introduction.....</b>	 <b>10</b>
About this manual.....	11
Care of the BEETLE /i8A-3.....	11
Recycling the BEETLE /i8A-3.....	12
Warranty.....	13
 <b>BEETLE /i8A-3- the POS System.....</b>	 <b>14</b>
Overview.....	14
Before switching on the System.....	15
Unpacking and checking the System.....	15
Setting up the device.....	15
Cabling of the BEETLE /i8A-3.....	18
Basic settings.....	19
 <b>The System BEETLE /i8A-3.....</b>	 <b>20</b>
Front Side View.....	20
ON Button.....	21
Light-emitting Diode (LED).....	21
USB (Universal Serial Bus)- A, USB 2.0.....	21
Interior view.....	22
 <b>Power Supply.....</b>	 <b>23</b>
Connector Panel.....	23
Power Connector.....	24
DC24V (Modular Printer).....	24
RJ12 (CASHDR).....	24
 <b>System Unit.....</b>	 <b>26</b>
12V DC Jack.....	27
4-pin 12V LCD Out.....	27
D- Sub- Jack power supplied (COM2*-COM5*).....	27
USB (Universal Serial Bus)- A, USB 2.0.....	28
Mini-DIN (KYBD).....	28
D- Sub Plug (COM1).....	28

Jack Plug 3.5 mm (IN, OUT, MIC) .....	28
D- Sub, 25 pin (LPT1, Modular Printer).....	29
D- Sub, 15 pin (VGA) .....	29
LAN (RJ45) .....	29
<b>Disconnecting cables.....</b>	<b>30</b>
<b>Storage Media .....</b>	<b>32</b>
Change of the Data Store .....	32
<b>P- USB- Hub (optional).....</b>	<b>36</b>
<b>COM6*, COM7*- Interfaces (optional).....</b>	<b>37</b>
<b>CF- Card Adapter (optional) .....</b>	<b>38</b>
<b>Starting up the system .....</b>	<b>39</b>
<b>Appendix .....</b>	<b>41</b>
Technical Data BEETLE /i8A-3 .....	41
Interfaces .....	42
Total Current Consumption Of Interfaces .....	43
Glossary.....	44
Abbreviations .....	46

# Manufacturer's Certification



The device complies with the requirements of the EEC directive 2004/108/EC with regard to 'Electromagnetic compatibility' and 2006/95/EG "Low Voltage Directive".

Therefore, you will find the CE mark on the device or packaging.

## Tested Safety



The BEETLE has received the UL symbol and cUL symbol.

## FCC-Class A Declaration

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. Modifications not authorized by the manufacturer may void users authority to operate this device. This class A digital apparatus complies with Canadian ICES-003.

*Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.*

## Important notes

The modular POS system BEETLE /i8A-3 conforms to the current safety standards for data processing equipment.

- If this device is taken from a cold environment into the operating room, moisture condensation may form. The device must be absolutely dry before being put into service; an acclimatization period of at least two hours must therefore be observed.
- This device is equipped with a safety-tested power cable and may be connected only to a prescribed grounded-contact power socket.
- When setting up the device, ensure that the power socket on the device and the grounded-contact power socket are easily accessible.
- To disconnect the device from the supply voltage completely, switch off the device and disconnect the power plug of the power supply.
- Ensure that no foreign objects (e.g. office clips) find their way into the device, as this may lead to electric shocks or short-circuits.
- Never plug in or unplug data communication lines during thunderstorms.
- Protect devices from vibrations, dust, moisture and heat.
- Always dispose of used parts, such as batteries, in an environmentally safe manner.
- The ventilation slots must remain unobstructed to ensure sufficient ventilation of the equipment. If the equipment is to be fitted, you must ensure that the specified minimum distances are maintained and constant ventilation is provided.
- In emergencies (e.g. damaged housing or damaged power cable, penetration by liquids or foreign bodies), the device must be switched off immediately, the power plug disconnected and the Customer Service of Wincor Nixdorf or your dealer must be notified.
- The lithium battery must be disposed of in accordance with local regulations for special waste. In case of an improper change of the lithium battery it exist an explosion risk.
- The device may only be repaired by authorized qualified personnel. Unauthorized opening of the device and inexpertly carried-out repairs may not only seriously jeopardize the safety of the user, but also cancel all warranty and liability agreements.



- Your BEETLE system is the result of modern technical innovation. So please see for according structural and technical surroundings to guarantee a faultless and efficient work of your BEETLE. Therefore, you should connect your BEETLE or other IT-devices only to power supply systems with separately guided protective earth conductor (PE). This kind of electricity system is known as TN-S network. Do not use PEN conductors!  
Please also observe the recommendations of the norm DIN VDE 0100, Part 540, Appendix C2 as well as EN50174-2, §5.4.3. Thus you can help to avoid possible malfunctions.
- You can connect or disconnect USB devices during operation of your BEETLE, provided that these devices comply with the specifications according to [usb.org](http://usb.org). Other peripheral devices with higher power requirement (such as PoweredUSB printer) should be connected to or disconnected from your BEETLE system only after the BEETLE has been switched off.

# Introduction

The BEETLE /i8A-3 is the powerful POS System for multi-functional solutions. This entry level POS system unit with low power, state-of-the-art Intel Atom™ processor technology provides a basis for all of today's and future POS store and back office solutions.

The BEETLE /i8A-3 features numerous standard PC and retail-specific powered interfaces for connection of peripheral devices. Additional USB ports are accessible from the front for greater convenience. The type and number of interfaces can be customized very flexibly.

The BEETLE /i8A-3 uses cutting-edge Intel processors that offer better performance yet consume more than 30 % less power than those of previous generations. The power supply unit complies with the strict 80 PLUS Bronze supply standard, operating with a constant energy efficiency of over 82 %.

The addition of a powered interfaces for peripherals, power-saving functions in the BIOS and operating system results in a marked reduction in power consumption and the resulting CO<sub>2</sub> emissions. These technologies enable you not only to protect the environment but also to reduce running costs and total cost of ownership.

Whatever configuration you need: Wincor Nixdorf International GmbH offers a suitable solution. If you want to know more about our products visit us on Internet:

[http://www.wincor-nixdorf.com/internet/site\\_EN/EN/Home/homepage\\_node.htm](http://www.wincor-nixdorf.com/internet/site_EN/EN/Home/homepage_node.htm)

## About this manual

This documentation is intended to help you to work with the POS system and to serve as a reference work. The detailed table of contents help you find the desired information quickly and easily.



Notes in the manual are marked by this symbol.



This symbol is used for warnings.

The type and scope of application programs depend on the customer's own choice; therefore, software will not be discussed further in this manual.

You will find a description of the BIOS Setup and the Central Processing Unit in a separate manual ("POS Motherboard"), see:


<http://www.wincor-nixdorf.com/internet/us/Services/Support/TechnicalSupport/POSSystems/index.html>.

## Care of the BEETLE /i8A-3

Clean your BEETLE /i8A-3 at regular intervals with a suitable plastic-surface cleaner which can be ordered from Wincor Nixdorf International GmbH.

Make sure that the **power plug is disconnected** and that no liquid finds its way into the device.

# Recycling the BEETLE /i8A-3

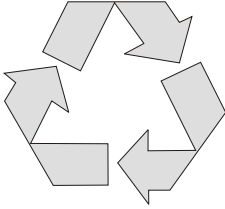

Environmental protection does not begin when the time has come to dispose of the BEETLE; it begins with the manufacturer. This product was designed according to our internal norm "Environmental conscious product design and development".

The modular BEETLE /i8A-3 system is manufactured without the use of CFCs and CCHS and is produced mainly from reusable components and materials.

The processed plastics can, for the most part, be recycled. Even the precious metals can be recovered, thus saving energy and costly raw materials.

Please do not stick labels onto plastic case parts. This would help us to re-use components and material.

At this time, there are still some parts that are not reusable. Wincor Nixdorf International GmbH guarantees the environmentally safe disposal of these parts in a Recycling Center, which is certified pursuant to ISO 9001 and ISO 14001.

So don't discard your BEETLE /i8A-3 system on the garbage when it has served its time, but take advantage of the environmentally smart, up-to-date recycling methods!

Please contact your competent branch or the Recycling Center Paderborn (for European countries) for information on how to return and re-use devices and disposable materials under the following mail address.

Email: [info@wincor-nixdorf.com](mailto:info@wincor-nixdorf.com)  
or on the internet.

We look forward to your mail.

# Warranty

Generally, Wincor Nixdorf guarantees a warranty engagement for twelve months beginning with the date of delivery. This warranty engagement covers all damages which occur despite a normal use of the product.

Damages because of

- improper or insufficient maintenance,
- improper use of the product or unauthorized modifications of the product,
- inadequate location or surroundings

will not be covered by the warranty.

For further information on the stipulation consult your contract.

All parts of the product which are subject to wear and tear are not included in the warranty engagement. For detailed warranty arrangements please consult your contract documents.

Please order spare parts at the Wincor Nixdorf customer service.

# BEETLE /i8A-3- the POS System

## Overview

You can connect a variety of peripherals to your modular POS system BEETLE /i8A-3 and thus implement a wide range of expansion stages. You can connect a four-line alphanumeric customer display and a four line cashier display. Alternatively, you can connect flat screens.

You can

- use various types of scanners such as distance, touch or stationary scanners,
- use scales and scanner scales (please take into account the official certification regulations),
- connect various printers,
- use POS keyboards,
- use different types of cash drawers,
- integrate the BEETLE /i8A-3 in a network and
- upgrade the BEETLE /i8A-3, since it can accommodate one expansion card (1x PCI).

This means that the BEETLE /i8A-3 can meet your requirements at all times, without having to exchange the complete system for a new one.

# Before switching on the System


## Unpacking and checking the System

Unpack the components and verify that the scope of delivery is identical to the information on the delivery ticket.

The carton contains the basic unit and a country-specific accessories kit. Some ordered composition may be installed.

Should you notice any transport damages or discrepancies between package contents and delivery ticket or functional defects please inform your contracting parties or the branch office of Wincor Nixdorf immediately. Please indicate the number of your delivery ticket and delivery ticket position and serial numbers of the respective devices.

The serial numbers can be found on the sample label illustrated below which are located at the bottom side of the housing.

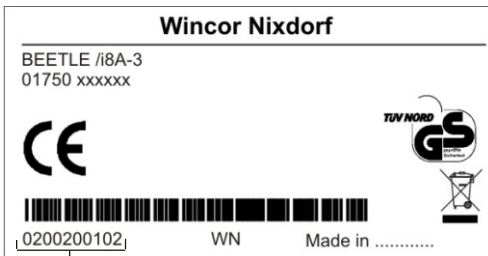

serial number

Transport the device only in its original packaging (to protect it against impact and shock).


## Setting up the device



Set up the BEETLE /i8A-3 system where it will not be exposed to extreme environmental conditions. Protect the device from vibrations, dust, moisture, heat and strong magnetic fields.


### Horizontal installation

Mind the **minimum distances** indicated below! If the equipment is to be fitted, you also must ensure that the specified minimum distances are maintained and constant ventilation is provided. The immediate ambient temperature of the system must not exceed 40° C (104° F).

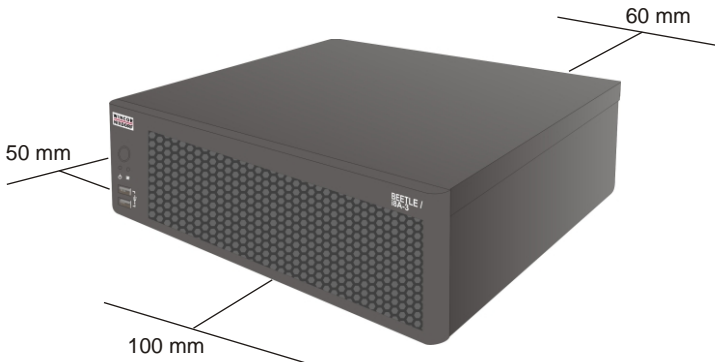

### Vertical installation of the equipment

The minimum top and bottom distances listed in the figure must be maintained; otherwise, a sufficient ventilation of the equipment is not guaranteed.

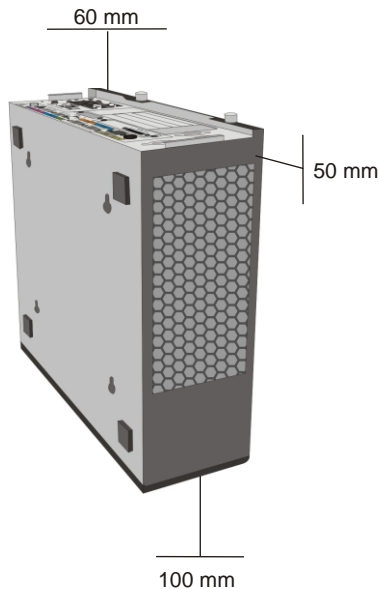



If you install the BEETLE /i8A-3 in vertical position, you have attend to the following:

- Three breakable bore holes are located at the underside, which allow the BEETLE /i8A-3 to be suspended by means of the screws.
- Mind the following minimum clearances also for vertical mounting to ensure sufficient ventilation (**100 mm = 3.94 inch**):

forward: 100 mm,

backward: 60 mm

sideways (left): 50 mm

- A surface made of nonflammable material (e.g. concrete or metal) must be located underneath the vertically mounted system.


# Cabling of the BEETLE /i8A-3

Follow the steps below in the order given when installing devices:

- Plug one end of the power cable into the socket of the BEETLE /i8A-3.
- Plug in and secure the data cable.
- Plug the other end of the power cable into the main power supply.



Always make sure that all power plugs from the grounded-contact power sockets are unplugged.

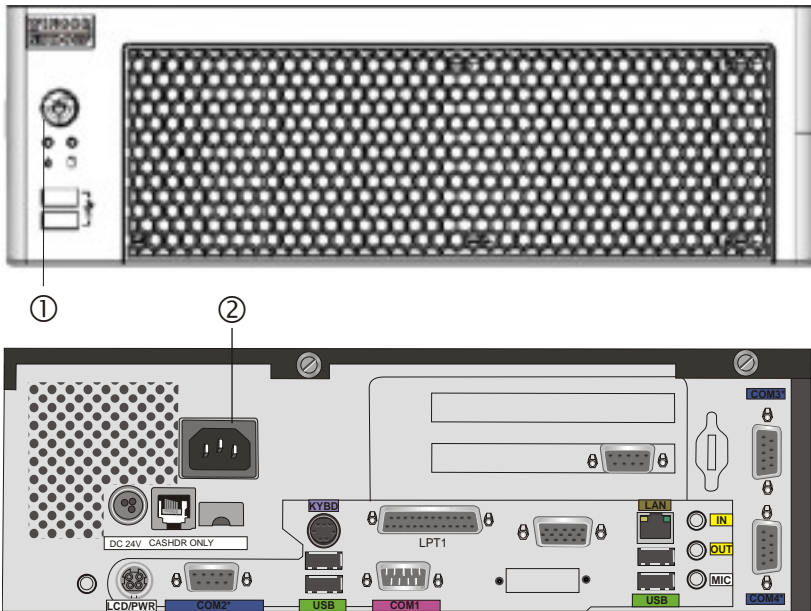

①	ON Button
②	Power Input Jack

Now push the power ON button on the front side of the system.


The power supply can be connected to all conventional power supply networks. It automatically adjusts itself to the particular voltage. The power output of the power pack is maximum 304 W.

## **Basic settings**

Ex works, the BEETLE /i8A-3 is configured to your order. Your configuration must be subsequently adapted to support supplementary devices such as scanners. For more information, contact the Wincor Nixdorf International GmbH branch office responsible for your area.

# The System BEETLE /i8A-3

## Front Side View

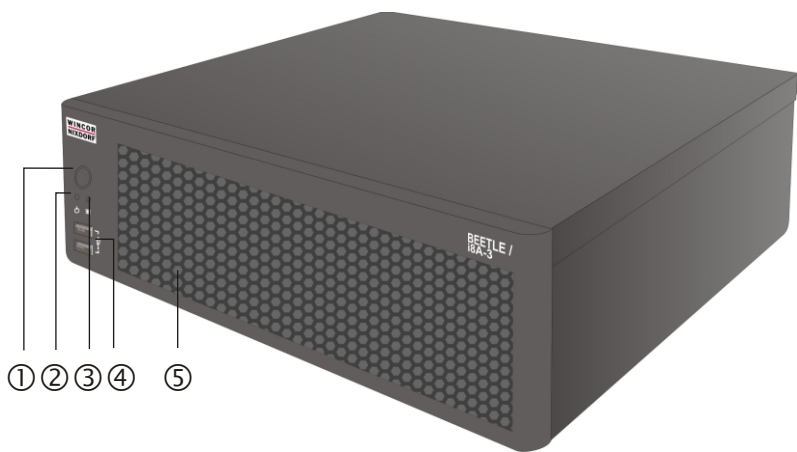



①	ON Button
②	Power LED
③	HDD- LED
④	2 USB Interfaces
⑤	Ventilation Slots (NOT COVERING)

# ON Button

With a power supplied power unit you switch on the system with the power ON button on the front side of the system unit.

# Light-emitting Diode (LED)

The LEDs are labelled with:

HDD		right LED <b>flashes</b> yellow	While the hard disk is beeing accessed
POWER		left LED <b>flashes</b> green	Stand by mode (S3)
		left LED lights green	Device is switched on (S0)
		left LED is off	Hibernation (S4)/ Soft off (S5)


# USB (Universal Serial Bus)- A, USB 2.0

Interface (USB-A) for connecting different USB peripheral devices such as scanners or scales.



You must use only shielded cables for the connection of USB devices.

# Interior view

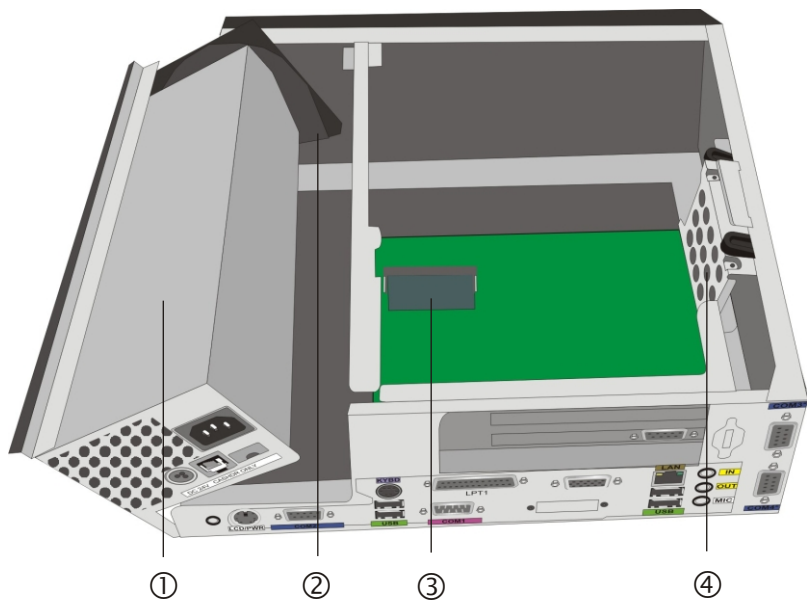

①	Power Supply
②	Ventilator
③	RAM
④	Hard Disk


# Power Supply

The power supply can be connected to all conventional power supply networks. It automatically adjusts itself to the particular voltage and is fan-cooled. The power output of the power pack is maximum 304 W.



The Power Supply Unit (PSU) carries the 80plus bronze certificate. So, less energy is needed and less noise is generated as the fan is much lesser activated with a low revolution speed.

## Connector Panel

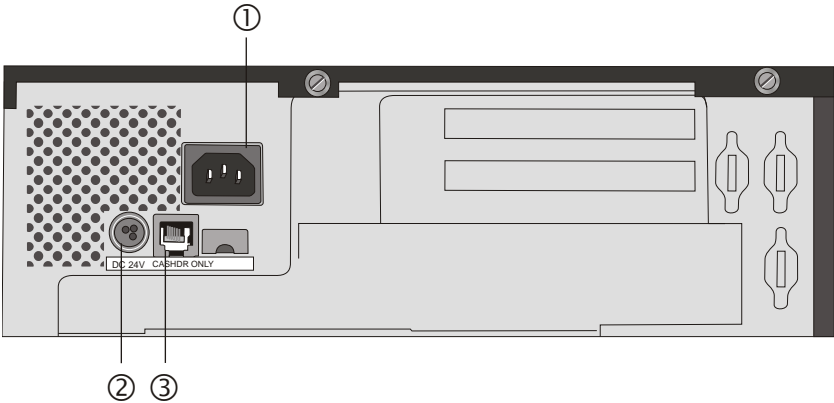

①	Power connector
②	DC24V (Power supply for the printer, HOSIDEN socket)
③	RJ12 (Cashdrawer socket)

At the front side of the box you will find the ON button to switch on the system.

The system is automatically switched off, when the operating system is shut down. Pushing (approx. 5 seconds) the ON button at any time will shut down the system. The proper function of the On button is defined by the settings of the operating system and the BIOS. The power cord receptacle and the power socket for the printer are located on the back of the BEETLE system.



The power pack must be removed or replaced by authorized qualified personnel only. Only replace power packs released by Wincor Nixdorf.



To disconnect the device from the supply voltage completely, switch off the device and disconnect the power plug.

## Power Connector

This connector provides the power. Connect the according end of the power cable to this port and the other end to the power socket.

Pull the mains plug to power-off the device.

## DC24V (Modular Printer)

Appropriate POS printers can be connected via the low-voltage jack 24V, max. 3A via non-UPS. A connecting cable with a HOSIDEN plug is required for this.



Connect only cables to the 24V connector which are marked with DP-1 or DP-2.



Do not connect the HOSIDEN plug when the system is turned on, this can lead to an automatical reboot of the system.

## RJ12 (CASHDR)

The power supply unit has one RJ12 socket for connecting a cash drawer. Make sure that the connector is plugged firmly into the socket to prevent malfunctioning. RJ12 plugs lock in when you insert them. Power is supplied to the cash drawer via this socket, P24V +5% / -15%.





Connecting daisy chained cash drawers and 12V OEM-drawers is prohibited!




Connect cash drawers only (no telephon).

# System Unit

Always make sure that the system is switched off when you do cabling works.

Connecting peripherals with the system switched on is not allowed (exception: USB devices).

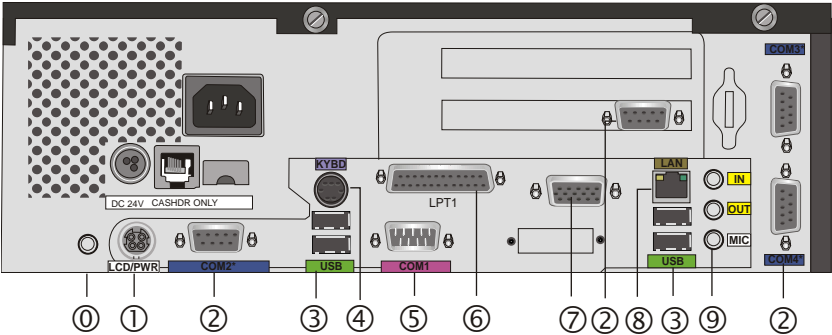

①	12V DC Out (power supply display)
①	LCD PWR (power supply display)
②	D- Sub power supplied (COM2*/COM3*/COM4*/COM5*)
③	4 x USB- A (USB 2.0)
④	Mini DIN (KYBD)
⑤	D- Sub (COM1)
⑥	25 pin D-sub (LPT1)
⑦	D- Sub, 15 pin (VGA)
⑧	LAN (RJ45 socket)
⑨	Jack plug, 3.5 mm (IN, OUT, MIC)


## 12V DC Jack

This port is intended to supply 12V power to LCD monitor.  
Rated current is 3A.

If you connect cables to these output connectors for connecting external devices, the connecting cables must be marked with dp-1 or dp-2.

## 4-pin 12V LCD Out

This port is intended to supply 12V power to LCD monitor. Rated current is 3A. Use only appropriate power cable supplied by Wincor Nixdorf.

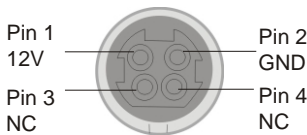

Before connecting the LCD monitor to the 12V DC jack or the 4- pin 12V LCD Out make sure that the power requirement of the LCD monitor does not exceed the rated current of the ports.

If you connect cables to these output connectors for connecting external devices, the connecting cables must be marked with dp-1 or dp-2.

## D- Sub- Jack power supplied (COM2\*-COM5\*)

The interface connection is a 9-pin D-sub jack for scanner, user or customer displays without own power supply.

Make sure that the connector for the customer display is screwed firmly to the socket to prevent possible malfunctioning. Power is supplied via this jack.



Connect the customer display to COM3\* only.

## USB (Universal Serial Bus)- A, USB 2.0

You can connect several USB peripheral devices to the USB or powered USB interface (12V or 24V).



Only connect devices equipped with a shielded cable to the USB-interfaces.

## Mini-DIN (KYBD)

The BEETLE /i8A-3 has a 6-pin mini-DIN jack for connecting a keyboard. Make sure that the connector is plugged firmly into the socket to prevent malfunctioning. Power is supplied to the keyboard via this socket. If you wish to connect an older standard PC keyboard with DIN connector, you must use a special adapter cable, obtainable from the WN branch office responsible for your area.

When removing cables always take hold of the connector casing. Latching connectors can only be released that way.

## D- Sub Plug (COM1)

Connect scales with their own power supply to the COM1 interface. COM1 is designed as a 9-pin D-sub plug. Make sure that the connector is plugged securely into the socket to prevent possible malfunctioning.



If scales which are not supplied by Wincor Nixdorf International GmbH are connected to the BEETLE /i8A-3, you must obtain a Wincor Nixdorf licence for the driver software.

## Jack Plug 3.5 mm (IN, OUT, MIC)

Physically the microphone (MIC) and IN and OUT jacks are identical as all require 3.5 mm phone jack for data transfer. However, both differ concerning the pin assignment so that a faultless transmission is only ensured with the designated connection.

Besides a microphone a headset can be used alternatively via this interface.

# D- Sub, 25 pin (LPT1, Modular Printer)

The standard parallel interface LPT1 is intended for connecting a printer.

# D- Sub, 15 pin (VGA)

You can connect a monitor to the BEETLE /i8A-3 via the 15-pin D-sub jack on the CRT adapter.

# LAN (RJ45)

The system can be connected to a network (LAN) from the POS terminal back panel.

LEDs

right LED	constant yellow	Connected with network
	flashes yellow	Data transfer
left LED	off	10mBit/s
	constant green	100mBit/s









Only connect shielded LAN cables (CAT5/CAT5e) as these offer a better protection in case of interferences in a network.

# Disconnecting cables

Never unplug a cable by pulling on the cable; always take direct hold of the plug itself. Follow the procedure below when disconnecting cables:

- Turn off all power and equipment switches.
- Unplug all data communication cables from the sockets of the data networks.
- Unplug all power plugs from the grounded-contact power sockets.
- Unplug all cables from the devices.

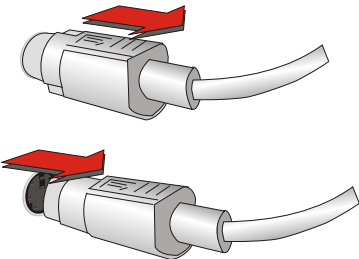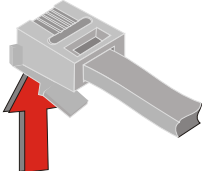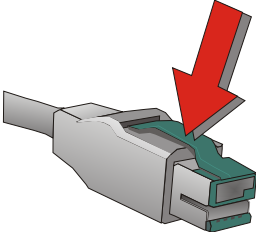	<p>With MINI-DIN plugs (for Wincor Nixdorf keyboards), the plug remains inserted until released.</p> <p>Pull the plastic covering from the connecting socket with your thumb. The lock is released. The metal of the plug is visible.</p>
	<p>RJ12 plugs lock in when you insert them. To release them push the latch under the plug to the top.</p>
	<p>The powered P-USB connector is disengaged by pressing the spring that is marked by an arrow.</p>

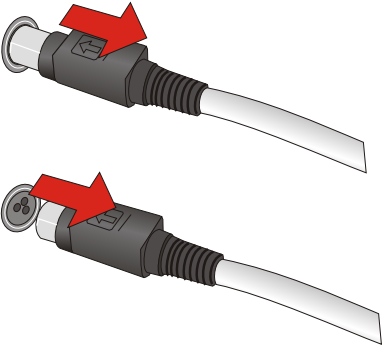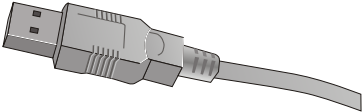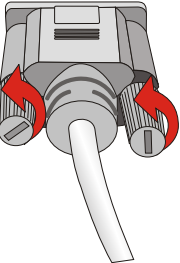	<p>With HOSIDEN-connector (24V Power supply, e.g. for printer) the plug remains inserted until released.</p> <p>Pull the plastic covering from the connecting socket with your thumb. The lock is released. The metal of the plug is visible.</p>
	<p>You loosen the USB-A- connector by pushing the covering of the connector.</p>
	<p>Manually loosen the knurled screws of the COM connector.</p>

# Storage Media

Following storage media are available


- one or two 2.5" SATA- hard disk or
- one or two 2.5" solid state disk drive.

A solid state disk drive is a data storage drive that uses memory elements in place of a rotating disk to store data. The SSD easily substitutes the hard disk and emulates a hard disk drive interface. The most SSDs are flash memory based.

## Change of the Data Store


First ensure that the device is switched off and that the power connector is disconnected.

Open your BEETLE /i8A-3. Loosen the two screws at the back side (1) and pull it out of the front guide (2). Lift the top cover at the back side (3).

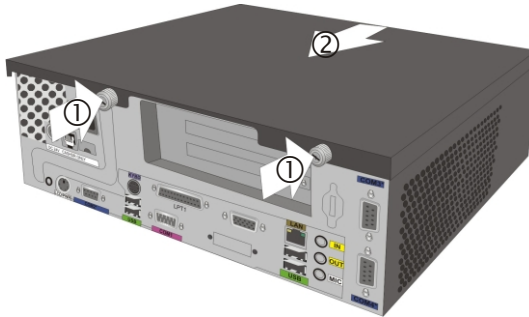





Push the metal plate (1). Tilt the hard disk holder in direction of arrow (2).

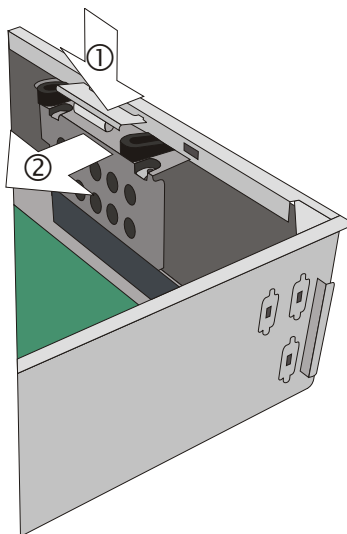

Lift up the drive and remove it. Loosen the connecting cables.

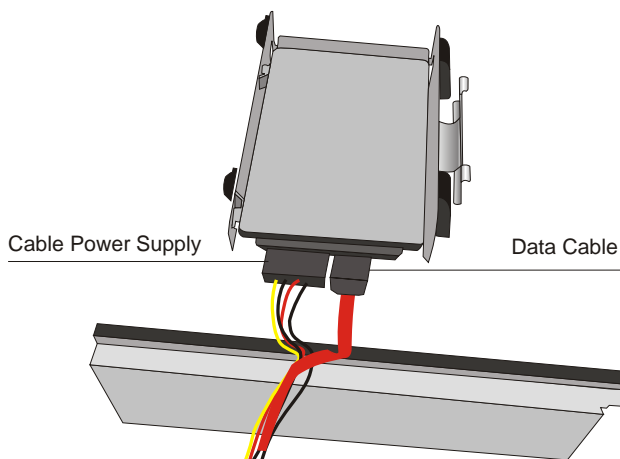

Take the holder out. Loosen the four Phillips head screws (see arrows) at the holder with a screwdriver.

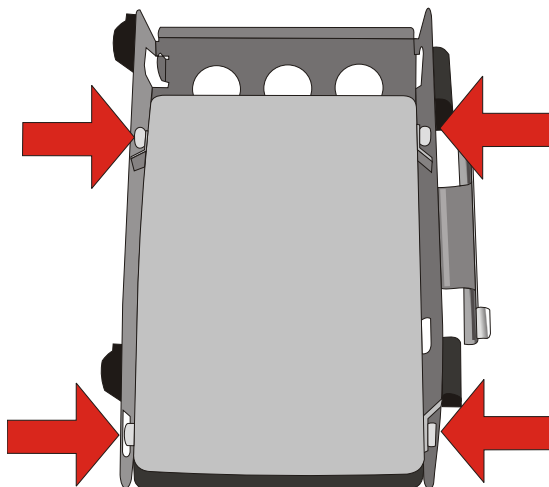


Ensure that you handle the hard disk with extreme caution during the installation. Never touch bare electronics.

Change the hard disk.

Please pay regard to the correct fitting position.


**One** 2.5" hard disk is being installed at the upper position on the drive holder.

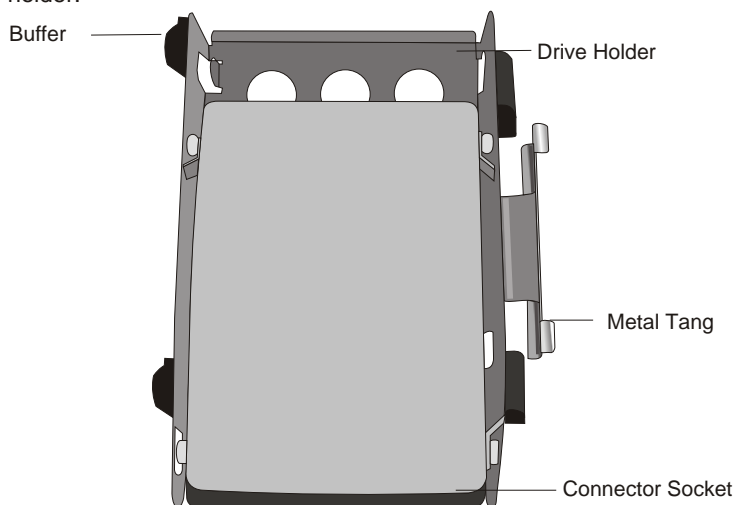

Connect both cables to the hard disk.

Insert the drive holder.

Make sure that the buffers are corresponding to the stampings in the base plate (see arrows).

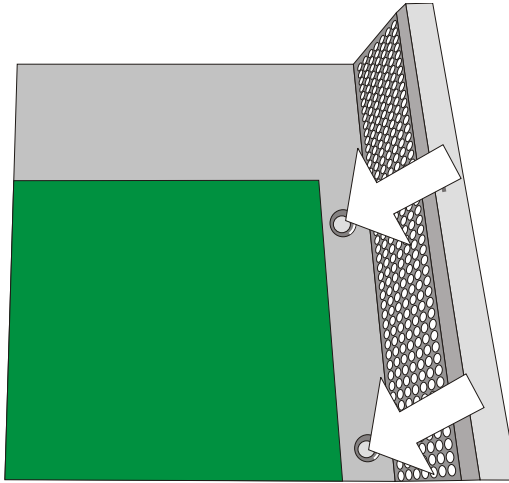


Carefully tilt the hard disk carrier into the originally position. Make sure that the drive holder will not pinsh cables. The metal tangs snap in place.

Close the cover and connect the main plugs. Now you can switch on the system.

## P- USB- Hub (optional)

There are three 12V P-USB interfaces and one 24V P- USB on an optional available board. They allow the connection of peripherals such as printers and scanners. Devices like Hard Disks may also be connected via a USB interface.

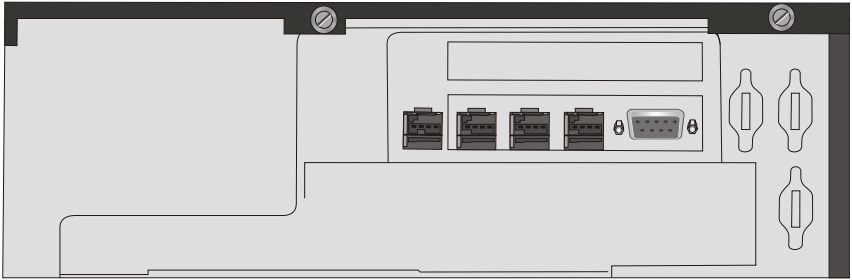

You can connect or disconnect USB devices during operation of your BEETLE, provided that these devices comply with the specifications according to *usb.org*.


Peripheral devices with a high power requirement (such as PoweredUSB printer) should be connected to or disconnected from your BEETLE system only after the BEETLE has been switched off.

# COM6\*, COM7\*- Interfaces (optional)

The standard system is configured with four COM\* interfaces. In addition expansions are possible via a com board.

Scanners, customer and operator displays without power supply of their own are connected to these serial interfaces. The interface connection is a 9-pin D-sub jack. Power (5V or 12V) is supplied via this jack.

Make sure that the connector for the customer display is screwed firmly to the socket to prevent possible malfunctioning.

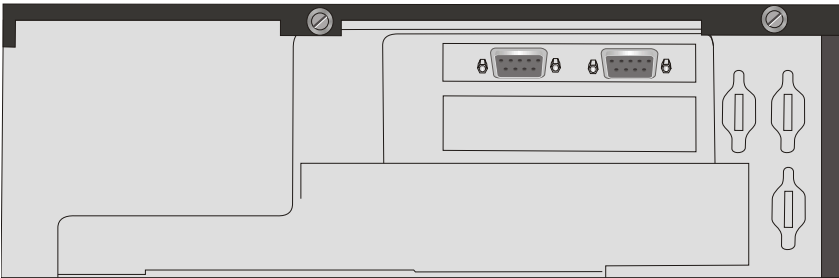

## NOTE



Expansion cards with electrostatically sensitive devices (ESD) can be marked with this sticker.

When you handle boards fitted with ESDs (electronical components), you must observe the following aspects under all circumstances:


- You must always discharge yourself (e. g. by touching a grounded object) before working with boards containing ESDs.
- The equipment and tools you use must be free of static charges.
- Pull out the power plug before inserting or pulling out boards containing ESDs.
- Always hold boards with ESDs by their edges.

Never touch pins or conductors on boards fitted with ESDs.

## CF- Card Adapter (optional)

Optionally the BEETLE can be equipped with a CF (Compact Flash)- card adapter. The CF is a mass storage device format and uses a flash memory interior of a standardized enclosure. The low power and shock resistant CF media can be used as a direct replacement of a hard drive and appears to any OS.

The adapter provides an IDE interface.

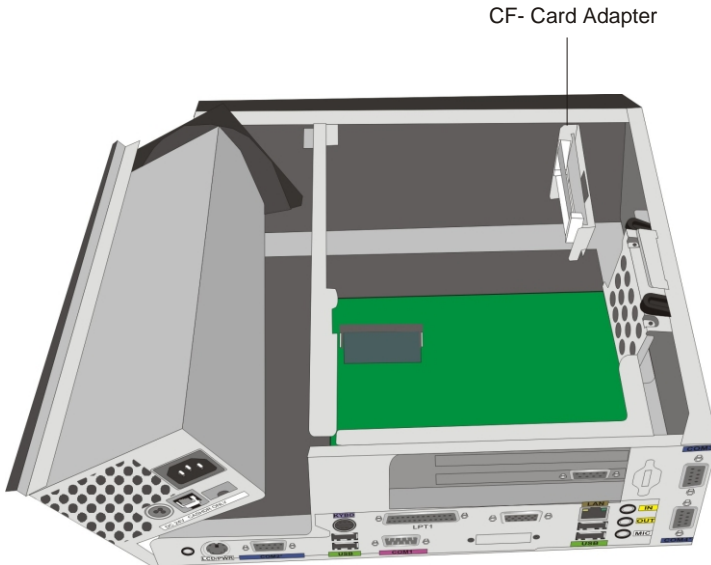


# Starting up the system

After installing the BEETLE /i8A-3, switch on the POS system using the ON/OFF button on the front panel and the power switch on the power supply.

The system first performs an automatic self-test to test its basic functions.

For example, you may see the following message (irrespective of processor type) on the four-line cashier display or on the monitor:

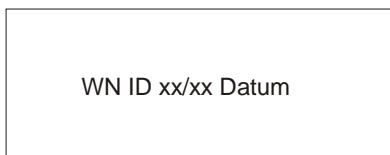

xx/xx is the placeholder of the BIOS version number.

The system then determines the medium from which the operating system and POS application are to be booted. Each medium is assigned a logical drive according to the configuration of your BEETLE /i8A-3.

The following media can be assigned a drive:

- Network
- Hard disk
- DVD
- USB drive

The logical drives are designated C: and D:.

The network is always assigned to the C: drive during the runup procedure. The hard disk can be assigned to the C: or D: drive. The system can only be started from the hard disk if the disk has been configured as the C: drive.

Corresponding to the Setup configuration the modular BEETLE /i8A-3 system can be booted from the following drives:

- Hard Disk in drive C:
- DVD
- LAN module with BOOTPROM
- USB drive

Please mind that the storage medium must be system-boot-capable.

If the POS system does not find a DVD, it automatically continues the loading process from drive C:.

If the operating system has started up without error, the POS application software is automatically booted if necessary.

A message is displayed as soon as the BEETLE is ready for operation. For more detailed information, see the description of your application program.



# Appendix

## Technical Data BEETLE /i8A-3

<b>Dimensions</b>	
Width	310 mm
Depth	280 mm (w/o cable cover) 352 mm (with cable cover)
Height	103 mm
<b>Weight</b>	approx. 6 kg
<b>Climatic category</b>	
Class 3K3	DIN IEC 721-3-3
Class 2K2	DIN IEC 721-3-2
Class 1K2	DIN IEC 721-3-1
<b>Temperature:</b>	
Operating(3K3)	+5°C up to +40°C
Transport (2K2)	-25 C up to +60 C
Storage (1K2)	+5 C up to +40 C
<b>Input voltage</b>	100- 120 V 200- 240 V
<b>Max. power consumption</b>	3A / 6A
<b>Frequency of the system voltage</b>	50/60 Hz
<b>Noise development</b>	60 dB(A) or less

## Interfaces

COM	COM1 (w/o power supply), COM2* -COM5* (with power supply) <b>Optional:</b> COM6*, COM7* via Powered COM Hub
USB	4 Standard USB (rear), 2 Standard USB (front) <b>Optional:</b> 3 x 12V P-USB, 1x 24V P-USB via USB-Controller
LPT1	1 x parallel interface
MIC, IN, OUT	Ports for audio devices
PS/2	1 (e.g. keyboard, mouse)
RJ12	Cash drawer, the jack is situated on the integrated power supply
DC24V	POS- printer with low voltage on the integrated power supply
LAN	RJ45- jack, 10/100 Mbit/s
PCI-Bus	1 x PCI 2.1, 32 Bit, 33MHz
Serial ATA II	3.0 Gbit/s, for internal Hard Disk
12V DC Jack	12V output port (rated 3A)
4-pin 12V LCD out	12V output port (rated 3A)

# Total Current Consumption Of Interfaces

The total current consumption at **5V interfaces** must not exceed **5A**.

each COM*	= 300mA, in total 1000mA
each USB	= 500mA, in total 2A
each USB (Hub)	= 500mA, in total 2A

**Max. 5A @ 5V**

The total current consumption at **12V interfaces** must not exceed **5A**.

each COM*(2/3/4/5)	= 600mA, in total 900mA
each COM*(6/7)	= 600mA, in total 900mA

each PUSB 12V (*)	= 3A
each PUSB 12V	= 1.5A

**Max. 5A @ 12V**

The total current consumption at **24V interfaces** must not exceed **3A**.

each PUSB 24V	= 3,0A
---------------	--------

**Max. 3A @ 24V**

Power loss of implemented PCI- Controller is - for thermic reasons - limited to 10W.

# Glossary

## **Bit**

A bit is a binary digit (0 or 1). It is the smallest unit used in data processing.

## **Controller**

Serves to control data input and output in a data processing system or between a computer and the connected peripherals.

## **CPU**

Abbreviation of central processing unit. It includes the main components of a data processing system. The CPU monitors all operations and provides data and programs. It comprises the control unit for input and output, the computer and the main memory, divided into ROM and immediate access storage.

## **DVI**

It is a new standard for digital data transfer. A DVI connection transfers a digital signal to the monitor without converting it to analog, thereby making sure that no information is lost or garbled in the digital-to-analog conversion and following analog-to-digital conversion that can occur in current digital display devices. DVI has three subsets: DVI-A, for analog signals, DVI-D, for digital signals, and DVI-I (*integrated*), for both analog and digital signals. In the future PCs and laptops are not only equipped with DVI, but also video devices as DVD.

## **Interface**

Designates the transition point between different hardware units and software units or between hardware and software units of computers or their peripherals.

## **JEIDA**

Abbreviation of Japan Electronic Industry Development Association. Industry standard for memory cards.

## **Panel Link (PLINK)**

Panel Link is a procedure for signal transmission based on the VESA standard serving the connection of (LCD or Plasma) displays and monitors to a PC or POS system e.g. BEETLE. PLINK is an interface for many graphics and display standards such as VGA, SVGA, XGA or SXGA.

**PCIe**

Abbreviation of Peripheral Component Interconnect Express. The basis for the „classical“ bus structure is a parallel architecture, i.e. all connected terminals share an available bandwidth. With the new technology - PCI

Express - the transfer rates are increased by switched point-to-point connections. A switch connects two PCIe components at a time with full bandwidth and speed.

**PCMCIA**

Abbreviation for Personal Computer Memory Card International Association. Industry standard for memory cards.

**Plug and PLayer (PnP)**

PnP means the automatic recognition of hardware components by the system. Thus the installation, integration and configuration of new components is made substantially easier.

**Peripherals**

Devices serving as an input/output device or storage for a computer. This includes, for example, document readers, keyboards, printers and disk storage.

**SATA**

Abbreviation for “Serial Advanced Technology Attachments”, a serial interface. By using the serial transmission SATA will do with a thin four-wired conductor and a small plug. ATA so far was known for the broad ribbon cable.

**Server**

This is a computer connected to a local network and whose services are available to all of the network subscribers, e.g. a print server for printing the data from all of the network subscribers on the printer connected to the server.

**VGA**

Stands for Video Graphics Array and is the interface for connecting colour monitors.

# Abbreviations

CE	European Symbol of Conformity
COM	RS 232 Schnittstelle
CPU	Central Processor Unit (for example INTEL Celeron-M)
CRT	Cathode Ray Tube
cUL	Canadian Registration (Recognized by UL)
DIMM	Dual Inline Memory Module
DIN	Deutsches Institut für Normen (German Institute for Standards)
D-Sub	D- Shaped Subminiature
DVD-ROM	Digital Versatile Disc Random Access Memory
DVD-RW	Digital Versatile Disc Rewritable
EMV	Electromagnetic Compatibility
FCKW/CKW	Fluorchlorkohlenwasserstoffe/Chlorkohlenwasserstoffe
HDD	Hard Disk Drive
IEC	International Electrotechnical Commission
ISO	International Organization for Standardization,
LAN	Local Area Network
LCD	Liquid Crystal Display
LED	Light Emitting Diode
NV RAM	non volatile RAM
OS	Operating System
PCI	Peripheral Component Interconnect
PCle	Peripheral Component Interconnect express
PEN-Leiter	Protective Earth Neutral- Leiter
PLINK	Panel-Link
PnP	Plug and Play, Plug & Play
POS	Point Of Sales
PS	Power Supply
RAID	Redundante Anordnung unabhängiger Festplatten (Redundant Array of Independent Disks)
RAM	Random Access Memory
S-ATA	Serial Advanced Technology Attachment
SSD	Solid State Disk (flash medium)
TCO	Total Cost of Ownership
TDP	Thermal Design Power (INTEL specification)
TFT	Thin Film Transistor
TN-S	Terre Neutre- Separé
UL	Underwriters Laboratory (standard)
UPS	Uninterruptable Power Supply
USB	Universal Serial Bus

VDE	Verband der Elektrotechnik, Elektronik und Informationstechnik e.V. German Association for Electrical, Electronic and Information Technologies
WAN	Wide Area Network
WLAN	Wireless Local Area Network
WN	Wincor Nixdorf International GmbH
ZC	Zero Cache

Published by Wincor Nixdorf International GmbH  
D-33094 Paderborn

Order No.: **01750220871C**