



UWP 3.0 WEB APP

INSTRUCTION MANUAL

April 2023

Contents

Introduction	8
General description	8
System architecture	9
Main features	10
Compatible systems (M2M)	10
Installation and first access	11
How to access/First access	11
User interface	12
Things to know	13
Installation	13
User types	13
Free access	13
Home page	14
User interface	15
How to set the home page	16
Main menu	17
How to access the main menu	17
User interface	17
Services (Automation server)	19
How to access the services	19
User interface	20
Data push service	21
Azure IoT Hub service	22
AWS IoT service	23
Remote support VPN	24
API	24
EDP push service	25
UWP secure bridge function	26
EnelX IoT push services	27
Things to know	29
Data push service functions	30
Azure IoT Hub service	30
AWS IoT service	30
Modbus gateway service	31
Remote support VPN service	33
API	34

EDP push service	34
UWP secure bridge function	34
EnelX IoT push services	35
How to	36
Configure the Data push service	37
Configure the Azure IoT Hub service	38
Configure the AWS IoT service	39
Manage the Modbus gateway service	40
Manage the remote support VPN service	40
Enable the VPN service for MAIA Cloud	40
Configure the EPD push service	41
Enable the UWP secure bridge function	41
Configure the EnelX IoT push services	41
System settings	42
How to access the System settings	42
User interface	43
Settings menu	44
How to access the settings menu	44
User interface	44
Dashboards	46
How to access a function dashboard	46
How to access a custom dashboard	46
User interface	47
Common elements	47
Widget dashboard	48
Custom chart dashboard	49
Chart template dashboard	50
Energy summary dashboard	51
Things to know	52
What is a dashboard	52
Function dashboard	52
Custom dashboard	52
How to	53
Create a custom dashboard	54
Manage a chart template	55
Widgets	56
User interface	57

Common elements	57
Things to know	58
What is a widget	58
Types of widget	59
How to	63
Create a new widget	64
Create a chart	66
Remove a widget	70
Move a widget to another page	70
Copy a widget	71
Schedule an event	71
Manage the widget settings	71
Types of Function	73
User interface	74
Light function	74
Dimmable light function	76
Constant light function	77
Smart light function	78
Zone temperature function	79
Cooling temperature system function	80
Heating temperature system function	81
Roller blind function	82
Tilting roller blind function	83
Window control function	83
Program function	84
Dimmer sequence function	85
Car heating function	86
Simulated habitation function	87
Multigate function	88
Interval timer function	90
Delay timer function	91
Recycling timer function	92
Analogue comparator function	93
Switch Function	94
Master zone counter	95
Detection point (DPO) function	96
Things to know	97

What is a function	97
Light functions.....	98
Temperature control functions.....	98
Rolling shutters functions	98
Sequence functions	99
Carpark functions.....	99
How to.....	100
Manage the Program function.....	100
Execute a set of steps one time only.....	103
Alarms	104
How to access the alarm dashboard.....	104
User interface.....	105
Main page.....	106
Water alarm function.....	107
Smoke alarm function	108
Main intruder alarm function.....	109
Zone intruder alarm function	110
Hour counter function.....	111
Siren alarm function.....	111
Things to know	112
What is an alarm.....	113
Types of alarm functions	114
How to.....	117
Manage the alarms	118
Report.....	119
How to access the report page	119
User interface.....	120
Main page.....	121
Accounts tab.....	122
Schedules tab	122
Templates tab.....	123
History tab	124
Things to know	125
What is a report	126
How to (for admin users only).....	126
Create an FTP/FTPS account.....	127
Create an SMTP account.....	127

Create an SFTP account.....	129
Schedule a report	129
Create a template	130
Re-generate a report.....	131
Search	133
How to access the search menu.....	133
User interface.....	134
Search benefits	135
How to search a function	135
Useful links	136

Updated version



Content subject to change.

Download the updated version: www.gavazziautomation.com

Introduction

This chapter includes the following sections:

General description

System architecture

Main features

Compatible systems (M2M)

General description

UWP 3.0 is a monitoring gateway and controller that allows to monitor and control installations where Energy Efficiency Management, Building Automation and Car Park Guidance functions are needed.

The system:


- monitors and controls connected devices via its local bus management functions;
- includes a web server with a powerful and intuitive user interface that displays custom dashboards
- interacts with local devices and remote systems.

The UWP 3.0 embedded automation server (see **Services** (Automation server)) allows you to exchange data locally or remotely via standard Internet protocols.

The UWP 3.0 Web App is the UWP 3.0 Web Interface accessible through standard browsers such as Google Chrome, Mozilla Firefox or Microsoft Edge, from Mobile or Desktop devices. Through widgets contained in predefined and custom dashboards, it allows you to:

- view and export collected data;
- control the automation functions;
- define specific settings.

System architecture

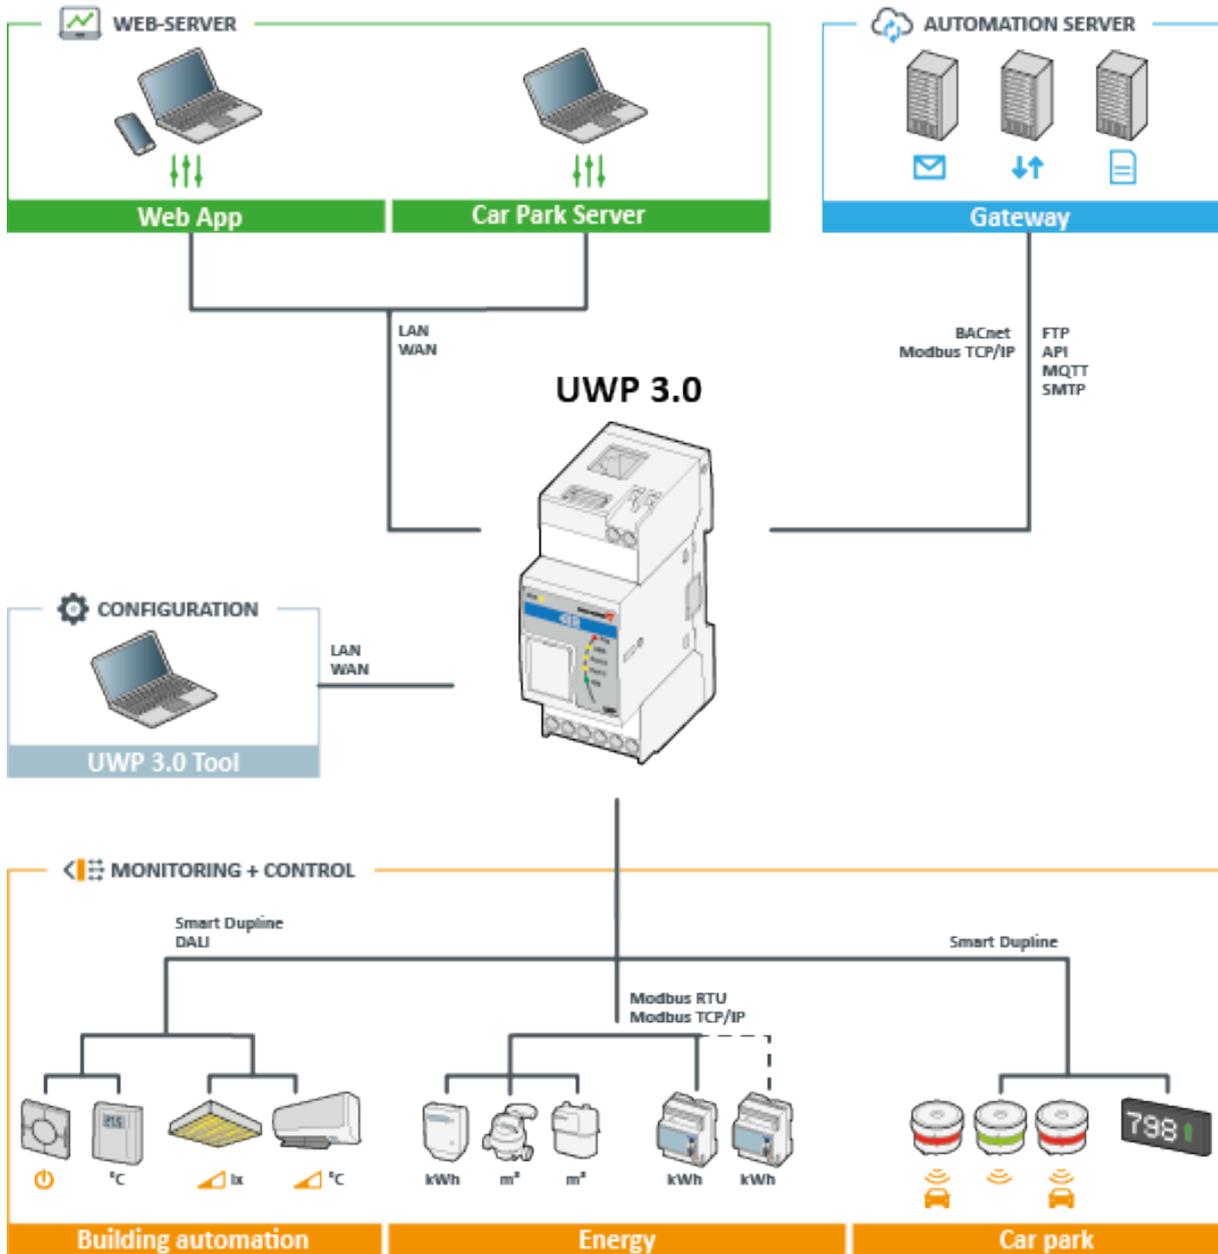

Main features

The Web App allows you to perform the following tasks:

- view collected data as real time values or charts;
- generate data and events reports;
- manage and adjust the functions parameters (e.g. to modify temperature set points);
- send commands (e.g. to switch on/off or to select scenarios);
- configure Data Push Services to FTP/SFTP/FTPS servers or Em2-Server (Carlo Gavazzi);
- configure MQTT link to IoT Hubs (Microsoft Azure).

Compatible systems (M2M)

The UWP 3.0 compatible systems are the following:

- Em²-Server (Carlo Gavazzi);
- FTP/SFTP/FTPS servers;
- Microsoft Azure IoT Hub.

Installation and first access

This chapter includes the following sections:

How to access/First access

User interface

Things to know

How to access/First access

1. From any standard web browser, access by typing the IP address.
2. In the access area, enter valid credentials.
3. Click **Login**.
4. Read and accept the **Terms and Conditions**.

Notes:

- *If you do not accept our terms and conditions, you cannot access the Web App.*
- *The **Terms and Conditions** will appear only at the very first access to the Web App.*
- *After in the login, you are redirected to the **Home page**.*

User interface

Element	Description
	Custom logo (for more information, see Settings menu).
Username / Password	Credentials (depending on the type of user*). <i>Further information: See User types.</i>
Free access	Access without credentials. <i>Further information: See Free access.</i>
LOGIN	Access to web app.
Terms and Conditions	Use conditions. <i>Notice: Read and accept them to access the web app.</i>

Things to know

This section includes the following topics:

Installation

User types

Free access

Installation

For installing the HW part and for the system commissioning, refer to the ***UWP 3.0 Tool (Configuration software) manual***.

User types

The UWP 3.0 Web App manages two types of user: **admin** and **user**.

The **admin** user can access more functions than the **user** (see in the following chapters).

Further information: See the **UWP 3.0 Tool manual**.

Free access

If you select the **Free access**, the following options will not be available:

- **Settings menu** (see **Settings menu**);
- **Editing mode** (see the following chapters);
- **Main menu** options (except the logout; see **Main menu**).


Home page

This chapter includes the following sections:

User interface

How to set the home page

User interface

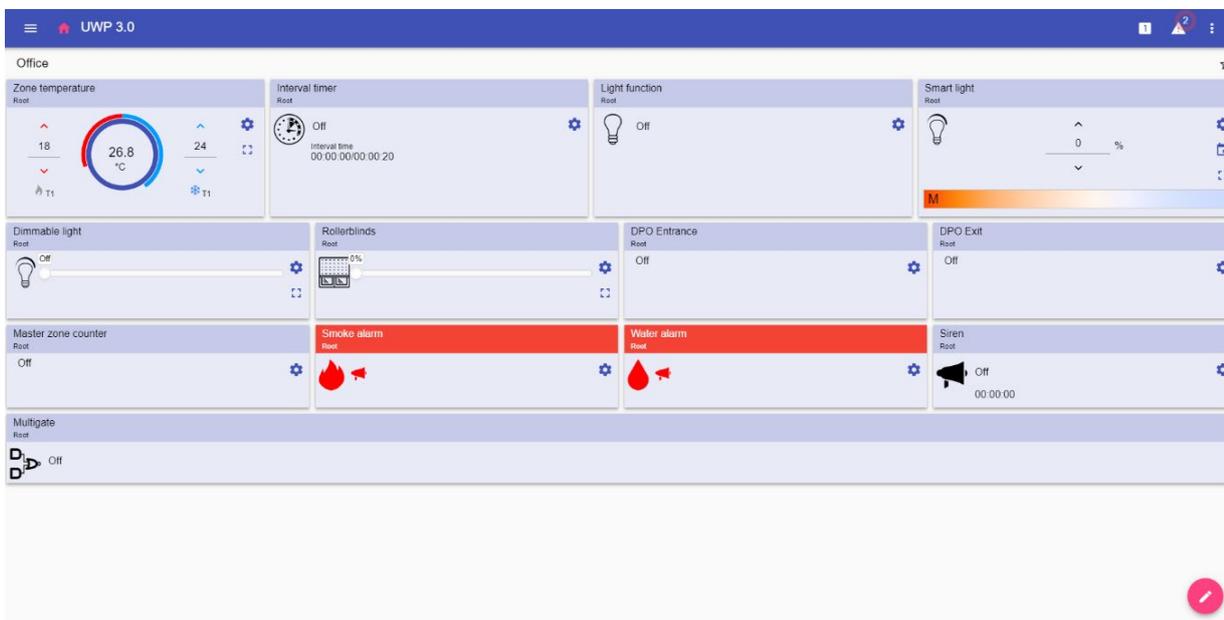

1. Home page

Area	Description	
Navigation bar	Icon	Function
		To access the Main menu .
		To go back to the previous page. <i>Notice: This option is available only when you are navigating the Main menu options (see Main menu).</i>
		To go back to the Home page .
		To access the Settings menu .
Widget area	Icon	Function
	FIRST FLOOR	Page selector , to select the dashboard to view.
		<i>Favourites menu: you can add or remove the dashboard to/from the favourites list, displayed in the navigation bar. Note: Once you have marked a dashboard as a favourite, the relevant icon will appear in the navigation bar.</i>
		To access the editing mode .

How to set the home page

1. From the desired dashboard, click  to enter the editing mode.
2. From the Edit toolbar, click  to open the Dashboard management menu.

Further information: See **Dashboards**.

3. Click **Set as homepage**.
4. Click  to save.

Note: The icon  will change the colour in the selected **Home page**.

Main menu

This chapter includes the following sections:

How to access the main menu

User interface

How to access the main menu

1. From the Navigation bar, click ☰ to open the Main menu.
2. Select the desired option (see the following chapter).

*Notice: This menu is not available if you choose the **Free access**.*

User interface

In this section, you can find information concerning the **Main menu** options.

Element	Description
	Custom Logo <i>Further information: Go to the Settings menu to change the logo.</i>
➔	Logout
Lights > Temperature Control > Roller blinds > Sequence >	Functions dashboard menu. <i>Notice: It depends on the configuration made by means of the UWP 3.0 Tool (see the UWP 3.0 Tool manual).</i>
Alarms > Reports > Search >	Widgets and data management.
Services >	Services (automation server) menu: <ul style="list-style-type: none"> • Data push service; • Azure IoT Hub service; • Modbus gateway; • Remote support VPN; • API. <i>Further information: See Services (Automation server).</i>
System info >	Information concerning the system: <ul style="list-style-type: none"> • Serial number, Mac address and Firmware version (Information); • UWP date / time and time zone (Date and time*); • Connected automation bus subnet, Modbus RTU COM1/COM2 devices, TCP devices, Total processed signals (Signals); • Ethernet and Modem Status (Connection status). <i>*Note: these fields can be changed by means of the Settings menu.</i>
System settings >	To manage Network settings and Dynamic DNS .
Online guide ?	Web App Instruction manual (online version).

Services (Automation server)

This chapter includes the following sections:

How to access the services

User interface

Things to know

How to

How to access the services

1. From the Navigation bar, click ☰ to open the Main menu.
2. Select **Services**.

User interface

This section includes the following topics:

Data push service

Azure IoT Hub service

AWS IoT service

Remote support VPN

API

EDP push service

UWP secure bridge function

EnelX IoT push services

Data push service

Tile	Description														
	UWP 3.0 installation position.														
 Service configuration	<table border="1"> <thead> <tr> <th>Element</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Start date</td> <td>Sending data date/time 🕒 = Apply</td> </tr> <tr> <td>Host address</td> <td>Em²-Server address ↔ = Connection test</td> </tr> <tr> <td>Upload interval</td> <td>Data pushing interval expressed in minutes.</td> </tr> <tr> <td>Command verify interval</td> <td>It indicates how often the UWP 3.0 verifies the presence in the Em²-Server of commands to execute.</td> </tr> <tr> <td>Service</td> <td>Disabling/Enabling</td> </tr> </tbody> </table>	Element	Description	Start date	Sending data date/time 🕒 = Apply	Host address	Em ² -Server address ↔ = Connection test	Upload interval	Data pushing interval expressed in minutes.	Command verify interval	It indicates how often the UWP 3.0 verifies the presence in the Em ² -Server of commands to execute.	Service	Disabling/Enabling		
	Element	Description													
	Start date	Sending data date/time 🕒 = Apply													
	Host address	Em ² -Server address ↔ = Connection test													
	Upload interval	Data pushing interval expressed in minutes.													
Command verify interval	It indicates how often the UWP 3.0 verifies the presence in the Em ² -Server of commands to execute.														
Service	Disabling/Enabling														
 Coordinates	UWP 3.0 installation position.														
Information	Information concerning the service.														
	<table border="1"> <thead> <tr> <th>Element</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Status</td> <td>Service status: ● Active / ○ Inactive</td> </tr> <tr> <td>Last data transmission</td> <td>Date/time of the last data transmission.</td> </tr> <tr> <td>Last sample sent</td> <td>Date/time of the last sent sample.</td> </tr> <tr> <td>Show logs - OK</td> <td>Logs list successfully loaded.</td> </tr> <tr> <td>Show logs - Errors</td> <td>Logs list errors.</td> </tr> <tr> <td>Server version</td> <td>Installed software version on Em²-Server.</td> </tr> </tbody> </table>	Element	Description	Status	Service status: ● Active / ○ Inactive	Last data transmission	Date/time of the last data transmission.	Last sample sent	Date/time of the last sent sample.	Show logs - OK	Logs list successfully loaded.	Show logs - Errors	Logs list errors.	Server version	Installed software version on Em ² -Server.
	Element	Description													
	Status	Service status: ● Active / ○ Inactive													
	Last data transmission	Date/time of the last data transmission.													
	Last sample sent	Date/time of the last sent sample.													
	Show logs - OK	Logs list successfully loaded.													
Show logs - Errors	Logs list errors.														
Server version	Installed software version on Em ² -Server.														
 Commands	Configuration manual commands.														
	<table border="1"> <thead> <tr> <th>ELEMENT</th> <th>DESCRIPTION</th> </tr> </thead> <tbody> <tr> <td>Partial configuration</td> <td>To send the last changes of the device configurations.</td> </tr> <tr> <td>Complete configuration</td> <td>To send all the devices configurations.</td> </tr> <tr> <td>Commands request</td> <td>To subscribe to the commands published by the connected Em²-Server.</td> </tr> </tbody> </table>	ELEMENT	DESCRIPTION	Partial configuration	To send the last changes of the device configurations.	Complete configuration	To send all the devices configurations.	Commands request	To subscribe to the commands published by the connected Em ² -Server.						
	ELEMENT	DESCRIPTION													
	Partial configuration	To send the last changes of the device configurations.													
Complete configuration	To send all the devices configurations.														
Commands request	To subscribe to the commands published by the connected Em ² -Server.														
	To save the configuration.														

Azure IoT Hub service

Tile	Description																							
 Service configuration	<p>The options depend on the enabling of the DPS (Enable DPS slider). See the table below:</p> <table border="1"> <thead> <tr> <th>Options available</th> <th>DPS ON</th> <th>DPS OFF</th> </tr> </thead> <tbody> <tr> <td>Scope ID</td> <td rowspan="3">To be filled in.</td> <td rowspan="3">-</td> </tr> <tr> <td>Registration ID</td> </tr> <tr> <td>Primary key</td> </tr> <tr> <td>Connection string</td> <td>Automatically filled in.</td> <td>For device registration/un-registration. ↔ = Connection test (available only if you are not using a DPS).</td> </tr> <tr> <td>Start date</td> <td colspan="2">Sending data date/time 🕒 = Apply (available only if you are not using a DPS).</td> </tr> <tr> <td>Upload interval</td> <td colspan="2">Data pushing interval expressed in minutes.</td> </tr> <tr> <td>Service</td> <td colspan="2">Disabling/Enabling the Azure IoT Hub service on your UWP 3.0.</td> </tr> <tr> <td>Reprovisioning</td> <td>Allows you to redo the device provisioning procedure.</td> <td>-</td> </tr> </tbody> </table>	Options available	DPS ON	DPS OFF	Scope ID	To be filled in.	-	Registration ID	Primary key	Connection string	Automatically filled in.	For device registration/un-registration. ↔ = Connection test (available only if you are not using a DPS).	Start date	Sending data date/time 🕒 = Apply (available only if you are not using a DPS).		Upload interval	Data pushing interval expressed in minutes.		Service	Disabling/Enabling the Azure IoT Hub service on your UWP 3.0.		Reprovisioning	Allows you to redo the device provisioning procedure.	-
	Options available	DPS ON	DPS OFF																					
	Scope ID	To be filled in.	-																					
	Registration ID																							
	Primary key																							
	Connection string	Automatically filled in.	For device registration/un-registration. ↔ = Connection test (available only if you are not using a DPS).																					
	Start date	Sending data date/time 🕒 = Apply (available only if you are not using a DPS).																						
	Upload interval	Data pushing interval expressed in minutes.																						
	Service	Disabling/Enabling the Azure IoT Hub service on your UWP 3.0.																						
Reprovisioning	Allows you to redo the device provisioning procedure.	-																						
Information	Information concerning the service.																							
	<table border="1"> <thead> <tr> <th>Element</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Status</td> <td>Service status: ● Active / ○ Inactive</td> </tr> <tr> <td>Last data transmission</td> <td>Date/time of the last data transmission.</td> </tr> <tr> <td>Show logs – OK</td> <td>Logs list successfully loaded.</td> </tr> <tr> <td>Show logs - Errors</td> <td>Logs list errors.</td> </tr> </tbody> </table>	Element	Description	Status	Service status: ● Active / ○ Inactive	Last data transmission	Date/time of the last data transmission.	Show logs – OK	Logs list successfully loaded.	Show logs - Errors	Logs list errors.													
	Element	Description																						
	Status	Service status: ● Active / ○ Inactive																						
	Last data transmission	Date/time of the last data transmission.																						
Show logs – OK	Logs list successfully loaded.																							
Show logs - Errors	Logs list errors.																							
 Selected devices	The data are collected from the Selected devices .																							
	To save the configuration.																							

For further information, see [Azure IoT Hub concepts overview](#) and [How to set up a Microsoft-Azure IoT-based system with UWP 3.0](#)

AWS IoT service

Tile	Description																
 Service configuration	<table border="1"> <thead> <tr> <th>Element</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Connection string</td> <td>For device registration/un-registration. ↔ = Connection test <i>Notice: It is available only when the service is enabled.</i></td> </tr> <tr> <td>Client ID</td> <td>Client ID</td> </tr> <tr> <td>Topic</td> <td>Defined by the user</td> </tr> <tr> <td>Security certificates</td> <td>Uploading of the Device Certificate and the Private Key generated using AWS online tools. <i>Notice: Both certificates have to be uploaded.</i></td> </tr> <tr> <td>Start date</td> <td>Sending data date/time 🕒 = Apply</td> </tr> <tr> <td>Upload interval</td> <td>Data pushing interval expressed in minutes.</td> </tr> <tr> <td>Service</td> <td>Disabling/Enabling</td> </tr> </tbody> </table>	Element	Description	Connection string	For device registration/un-registration. ↔ = Connection test <i>Notice: It is available only when the service is enabled.</i>	Client ID	Client ID	Topic	Defined by the user	Security certificates	Uploading of the Device Certificate and the Private Key generated using AWS online tools. <i>Notice: Both certificates have to be uploaded.</i>	Start date	Sending data date/time 🕒 = Apply	Upload interval	Data pushing interval expressed in minutes.	Service	Disabling/Enabling
	Element	Description															
	Connection string	For device registration/un-registration. ↔ = Connection test <i>Notice: It is available only when the service is enabled.</i>															
	Client ID	Client ID															
	Topic	Defined by the user															
	Security certificates	Uploading of the Device Certificate and the Private Key generated using AWS online tools. <i>Notice: Both certificates have to be uploaded.</i>															
	Start date	Sending data date/time 🕒 = Apply															
	Upload interval	Data pushing interval expressed in minutes.															
Service	Disabling/Enabling																
Information	Information concerning the service.																
	<table border="1"> <thead> <tr> <th>Element</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Status</td> <td>Service status: ● Active / ○ Inactive</td> </tr> <tr> <td>Last data transmission</td> <td>Date/time of the last data transmission.</td> </tr> <tr> <td>Show logs - OK</td> <td>Logs list successfully loaded.</td> </tr> <tr> <td>Show logs - Errors</td> <td>Logs list errors.</td> </tr> </tbody> </table>	Element	Description	Status	Service status: ● Active / ○ Inactive	Last data transmission	Date/time of the last data transmission.	Show logs - OK	Logs list successfully loaded.	Show logs - Errors	Logs list errors.						
	Element	Description															
	Status	Service status: ● Active / ○ Inactive															
	Last data transmission	Date/time of the last data transmission.															
Show logs - OK	Logs list successfully loaded.																
Show logs - Errors	Logs list errors.																
 Selected devices	The data are collected from the Selected devices .																
	To save the configuration.																

Remote support VPN

Title	Description
 Service configuration	Service Enabling/Disabling. Activation Code: this code allows to enable VPN service for Maia Cloud system. <i>Note: this service is available in the UWP 3.0 Tool 8.4.0.3 onwards.</i>
Information	Service status: ● Active / ○ Inactive / ● Disconnected
	To save the configuration.


API

For further information, go to www.productselection.net/Documents/UK/uwp3.0_API.pdf.

EDP push service

Tile	Description												
 Service configuration	<table border="1"> <thead> <tr> <th>Element</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>EDP service address</td> <td>Server address the user enters ↔ = Connexion test</td> </tr> <tr> <td>Serial number</td> <td>Serial number of the UWP 3.0 gateway. <i>Notice: Non-modifiable value.</i></td> </tr> <tr> <td>Start date</td> <td>Sending data date/time <i>Note: Available only when the service is enabled.</i></td> </tr> <tr> <td>Upload interval</td> <td>Data pushing interval expressed in minutes.</td> </tr> <tr> <td>Service</td> <td>Disabling/Enabling</td> </tr> </tbody> </table>	Element	Description	EDP service address	Server address the user enters ↔ = Connexion test	Serial number	Serial number of the UWP 3.0 gateway. <i>Notice: Non-modifiable value.</i>	Start date	Sending data date/time <i>Note: Available only when the service is enabled.</i>	Upload interval	Data pushing interval expressed in minutes.	Service	Disabling/Enabling
	Element	Description											
	EDP service address	Server address the user enters ↔ = Connexion test											
	Serial number	Serial number of the UWP 3.0 gateway. <i>Notice: Non-modifiable value.</i>											
	Start date	Sending data date/time <i>Note: Available only when the service is enabled.</i>											
	Upload interval	Data pushing interval expressed in minutes.											
Service	Disabling/Enabling												
Information	Information concerning the service.												
	<table border="1"> <thead> <tr> <th>Element</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Status</td> <td>Service status: ● Active / ○ Inactive</td> </tr> <tr> <td>Last data transmission</td> <td>Date/time of the last data transmission.</td> </tr> <tr> <td>Show logs - OK</td> <td>Logs list successfully loaded.</td> </tr> <tr> <td>Show logs - Errors</td> <td>Logs list errors.</td> </tr> </tbody> </table>	Element	Description	Status	Service status: ● Active / ○ Inactive	Last data transmission	Date/time of the last data transmission.	Show logs - OK	Logs list successfully loaded.	Show logs - Errors	Logs list errors.		
	Element	Description											
	Status	Service status: ● Active / ○ Inactive											
	Last data transmission	Date/time of the last data transmission.											
Show logs - OK	Logs list successfully loaded.												
Show logs - Errors	Logs list errors.												
 Select variables	<p>The data are collected according to the selected variables. The selection is possible thanks to the normalized Tool of variables selection.</p> <p><i>Note: It is possible to reorder the variables thanks to the drag-and-drop.</i></p>												
	To save the configuration.												

UWP secure bridge function

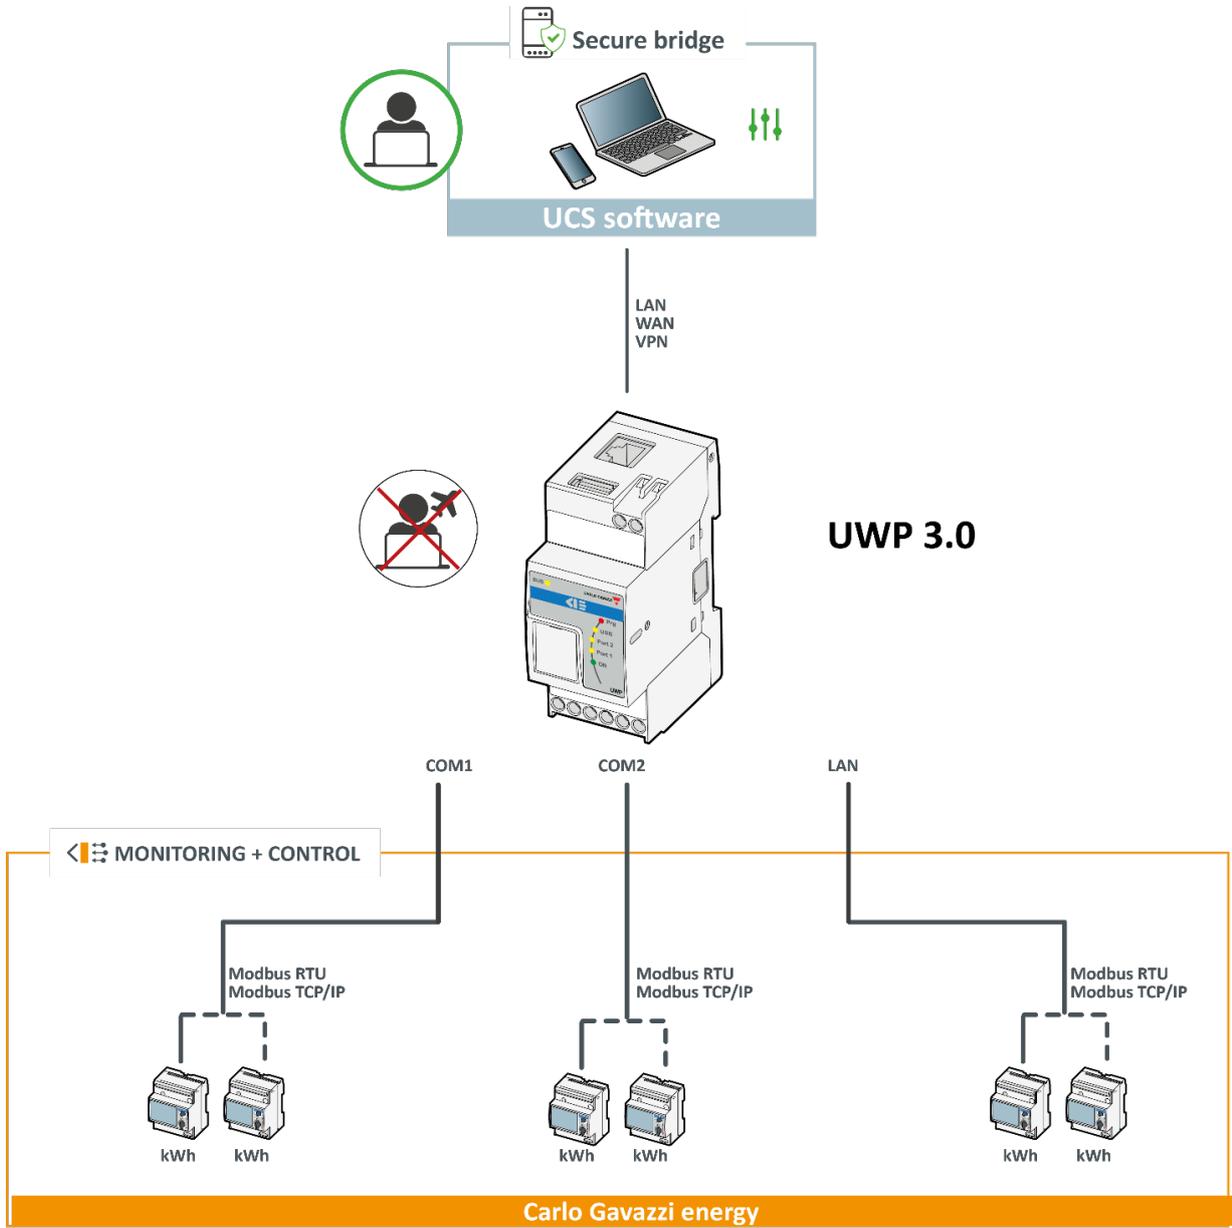


EnelX IoT push services

The EnelX IoT push services page has two tabs: **Service configuration** and **Variables**.

Service configuration

Tile	Description										
 Service configuration	Parameters (provided as part of the proprietary EnelX connection procedure) for the gateway connection.										
 S3 Configuration	Information required to download the certificates and for a correct gateway registration. <i>Notice: The fields marked with * are mandatory for the registration and the correct functioning of the gateway.</i>										
Information	Information concerning the service.										
	<table border="1"> <thead> <tr> <th>Element</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Status</td> <td>Service status: ● Active / ○ Inactive</td> </tr> <tr> <td>Last data transmission</td> <td>Date/time of the last data transmission.</td> </tr> <tr> <td>Show logs - OK</td> <td>Log of successful transactions</td> </tr> <tr> <td>Show logs - Errors</td> <td>Log of connection errors</td> </tr> </tbody> </table>	Element	Description	Status	Service status: ● Active / ○ Inactive	Last data transmission	Date/time of the last data transmission.	Show logs - OK	Log of successful transactions	Show logs - Errors	Log of connection errors
	Element	Description									
	Status	Service status: ● Active / ○ Inactive									
	Last data transmission	Date/time of the last data transmission.									
Show logs - OK	Log of successful transactions										
Show logs - Errors	Log of connection errors										
	Save*										
	Restore the last saved configuration*										
	Open the task buttons										
	<i>*Note: these fields are enabled only if the configuration changes. You can save the data only if the gateway configuration is completed.</i>										

Variables

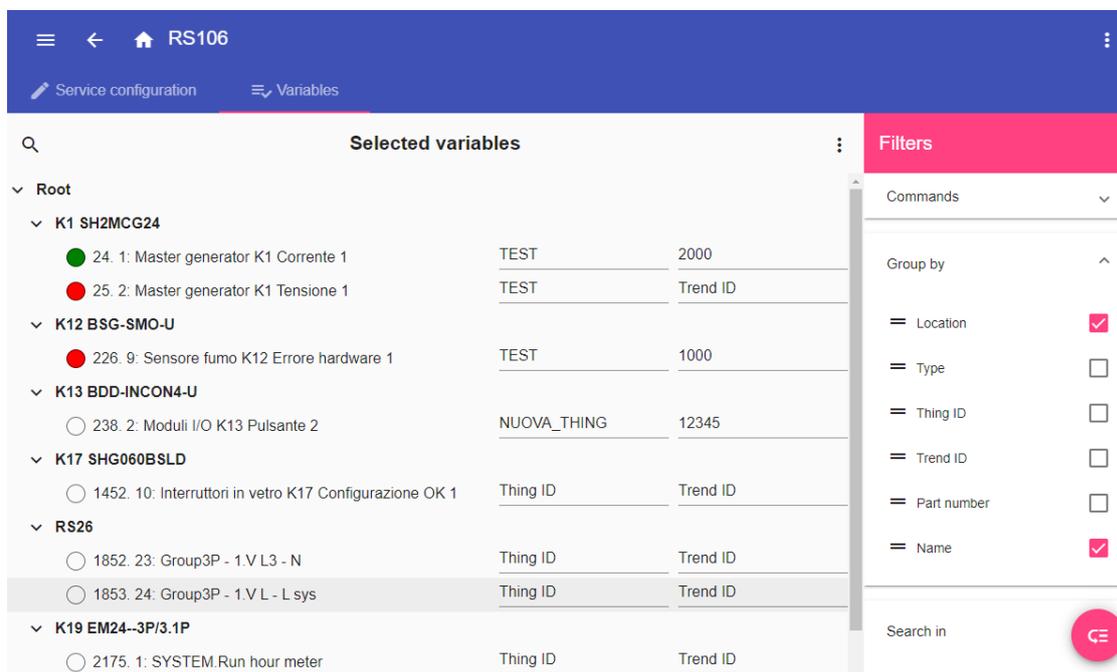

Icon	Description										
	Enter the variables' selection										
	Save*										
	Restore*										
	Open the task buttons										
	<i>*Note: these fields are enabled only if the configuration changes. You can save the data only if the gateway configuration is completed.</i>										
	Service status led										
	<table border="1"> <thead> <tr> <th>Colour</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td></td> <td>OFF</td> </tr> <tr> <td></td> <td>Started, variable configured and activated</td> </tr> <tr> <td></td> <td>Started, registration verification</td> </tr> <tr> <td></td> <td>Connectivity issues and/or communication error during all the operative phases (certificates download, registration, telemetry sending...)</td> </tr> </tbody> </table>	Colour	Status		OFF		Started, variable configured and activated		Started, registration verification		Connectivity issues and/or communication error during all the operative phases (certificates download, registration, telemetry sending...)
	Colour	Status									
		OFF									
		Started, variable configured and activated									
	Started, registration verification										
	Connectivity issues and/or communication error during all the operative phases (certificates download, registration, telemetry sending...)										

Notice: You have to compile the Things ID and Trend ID fields according to the EnelX proprietary procedure (refer to the EnelX documentation).

Things to know

This section includes the following topics:

Data push service functions

Azure IoT Hub service

AWS IoT service

Modbus gateway service

Remote support VPN service

API

EDP push service

UWP secure bridge function

EnelX IoT push services

Data push service functions

The **Data push** service allows you to send data from the UWP 3.0 to the Em²-Server.

Azure IoT Hub service

UWP 3.0 is Microsoft Azure Certified. Thanks to data available on Microsoft Azure IoT, you can leverage the powerful Azure IoT tools for:

- a) Integrating other data source data;
- b) Sharing information with other systems;
- c) Using the best Business Intelligence tools to dig into data.

For further information, see [Azure IoT Hub concepts overview](#) and [How to set up a Microsoft-Azure IoT-based system with UWP 3.0](#)

AWS IoT service

UWP 3.0 is compatible with Amazon AWS IoT. Thanks to data available on Amazon AWS, you can leverage the powerful Amazon tools for:

- a) Integrating other data source data;
- b) Sharing information with other systems;
- c) Using the best Business Intelligence tools to dig into data.

For further information, go to www.productselection.net/MANUALS/UK/uwp3.0_azure-aws.pdf

Modbus gateway service

This bridging feature allows you to use the UWP 3.0 as a **Modbus gateway**, in order to route any Modbus TCP/IP request to a specific meter connected on the serial ports (COM1 and COM2) of the UWP 3.0.

Once the service has been activated, two specific slave IDs are available, connecting to the relevant TCP port (default: 503):

- slave ID 248: dedicated ID to configure all Modbus gateway parameters. Specific registers allow to set properly all communication parameters that are needed to reach the desired meter connected on the serial ports (COM1 and COM2) of the UWP 3.0.
- slave ID 249: dedicated ID that collects all Modbus TCP/IP requests from the remote SCADA/software, to be routed to the desired slave ID (Target slave ID) connected on the ports (COM1 and COM2) of the UWP 3.0.

Modbus gateway configuration parameters

All following registers are available in reading/writing mode by means of Modbus request to slave 248:

Register address	Name	Type	Default	Values
0x0000	Target slave ID	int16	99	1..247
0x0001	Baud rate	int16	7 [9600bps]	0=110, 1=150, 2=300, 3=600, 4=1200, 5=2400, 6=4800, 7=9600, 8=19200, 9=38400, 10=57600, 11=115200, 12=256000
0x0002	Data bits	int16	8	
0x0003	Parity	int16	0 [none]	0=none, 1=odd, 2=even
0x0004	Stop bit	int16	1	
0x0005	Time out	int16	1000	

Accepted Modbus functions for Modbus ID 248 are:

- 0x03 read holding register
- 0x06 Write single register
- 0x10 Write multiple registers

Accepted Modbus functions for Modbus ID 249 are all standard Modbus function (if supported by the slave).

Notes:

- All registers that refer to the ID 248 are reset to default values at every restart of the service or UWP 3.0 reboot.
- All configuration parameters that refer to the ID 248 are not reported in the PDF or XML Modbus map exported from UWP 3.0.

Example 1: reading of all default Modbus gateway parameters

To read all default parameters, using the UWP 3.0 IP address and Modbus ID 248, the following request must be sent:

Request [00h] [00h] [00h] [00h] [00h] [06h] [F8h] [03h] [00h] [00h] [00h] [05h]

Where...

[00h] [00h] : Transaction Identifier
 [00h] [00h] : Protocol Identifier
 [00h] [06h] : Message Length, 6 bytes
 [F8h] : Modbus ID 248
 [03h] : Function code
 [00h] [00h] : Address of the first register to be read
 [00h] [05h] : Number of registers to be read

Response [00h] [00h] [00h] [00h] [00h] [0Dh] [F8h] [03h] [0Ah] [00h] [63h] [00h] [07h] [00h] [08h] [00h] [00h] [00h] [01h]

Where...

[00h] [00h] : Transaction Identifier
 [00h] [00h] : Protocol Identifier
 [00h] [0Dh] : Message Length, 13 bytes
 [F8h] : Modbus ID 248
 [03h] : Function code
 [0Ah] : Byte count (number of following bytes)
 [00h] [63h] : Target slave ID (63h = 99d)
 [00h] [07h] : Baud rate (7 = 9600)
 [00h] [08h] : Data bits
 [00h] [00h] : Parity (0 = None)
 [00h] [01h] : Stop bit

Example 2: reading of 10 registers from slave ID 99, starting from register 0050h.

To read 10 registers from slave ID 99, starting from register 0050h, using the VMU-C IP address and Modbus ID 249, the following request must be sent:

Request [00h] [00h] [00h] [00h] [00h] [06h] [F9h] [03h] [00h] [50h] [00h] [0Ah]

Where...

[00h] [00h] : Transaction Identifier
 [00h] [00h] : Protocol Identifier
 [00h] [06h] : Message Length, 6 bytes
 [F9h] : Modbus ID 249
 [03h] : Function code
 [00h] [50h] : Address of the first register to be read
 [00h] [0Ah] : Number of registers to be read (Ah = 10d)

Response [00h] [00h] [00h] [00h] [00h] [17h] [F9h] [03h] [14h] [5Fh] [8Bh] [43h] [62h] [66h] [56h] [43h] [62h] [64h]
 [E0h] [43h] [62h] [63h] [95h] [43h] [62h] [00h] [00h] [00h] [00h]

Where...

[00h] [00h] : Transaction Identifier
 [00h] [00h] : Protocol Identifier
 [00h] [17h] : Message Length, 23 bytes
 [F9h] : Modbus ID 249
 [03h] : Function code
 [14h] : Byte count (number of following bytes)
 [5Fh] [8Bh] : value of register 1
 [43h] [62h] : value of register 2
 [66h] [56h] : value of register 3
 [43h] [62h] : value of register 4
 [64h] [E0h] : value of register 5
 [43h] [62h] : value of register 6
 [63h] [95h] : value of register 7
 [43h] [62h] : value of register 8
 [00h] [00h] : value of register 9
 [00h] [00h] : value of register 10

The **VPN** service is a remote access which allows **Carlo Gavazzi Controls** technical support to provide remote assistance and permits users to use MAIA Cloud system to remotely manage and connect to UWP 3.0.

Note: MAIA Cloud is available in the UWP 3.0 Tool 8.4.0.3 onwards.

API

The UWP Rest-API is a RESTful application programming interface (A.P.I.) that allows other systems to interact with UWP by means of Web Services in a secure, scalable and reliable way.

Through this service, it's possible to system integrators, software developers and system administrators to access the UWP resources via URL paths, using standard HTTP commands such as GET, POST, PUT, and DELETE. As a result, a JSON file is returned.

Note: The description of UWP's Rest-API is beyond the scope of this document.

For further information, go to www.productselection.net/Documents/UK/uwp3.0_API.pdf.

EDP push service

The EPD push service permits sending data by using the EDP¹ proprietary protocol for the connection to their applicative servers. The communication is through HTTP communications.

UWP secure bridge function

The **UWP secure bridge function** permits establishing a secure connection through LAN or Internet network between the UCS software and Carlo Gavazzi Modbus meters connected to UWP 3.0 via RS485 or LAN network.

This way you can perform the following tasks remotely:

- configure a wired device via UCS without disconnecting UWP 3.0;
- check the proper functioning of the devices, the real time measures, the status of alarms and the inputs/outputs
- modify or correct the configuration parameters, in case of measures anomalies or of project structure changes.

Note: This function will be available from September 2020.

¹ *Energias de Portugal (prima Electricidade de Portugal), S.A.*

EnelX IoT push services

The EnelX IoT push services are completely based on the SDK AWS IoT. This function has been developed exclusively for the EnelX users.

EnelX provides the **Host URL** and the **Client ID (Gateway ID)** and from the EnelX platform you can download the certificates and the secret key through an S3 bucket without change them.

Note: This function will be available from September 2020.

How to

This section includes the following topics:

Configure the Data push service

Configure the Azure IoT Hub service

Configure the AWS IoT service

Manage the Modbus gateway service

Manage the remote support VPN service

Configure the EPD push service

Enable the UWP secure bridge function

Configure the EnelX IoT push services

Configure the Data push service

1. From the Navigation bar, click ☰ to open the Main menu.
2. From the Services menu, select the **Data Push service** to open the configuration page.
3. In the **Service configuration** tile, enter the:
 - Start date
 - Host (Em2-Server) address
 - Upload interval
 - Command verify interval.
4. From the same tile, click ▼ (under **Service**) to select **Enable**.
5. From the **Commands** tile, select the **Configuration** option:

If you want to...	Then select...
send the last changes of devices configurations	The Partial configuration .
send all the devices configurations	The Complete configuration .
request a verification of the presence (in the server) of commands to execute without waiting for the automatic check	Commands request.

6. Click  to save the configuration.
7. From the **Information** tile, check the service status.

Configure the Azure IoT Hub service

1. From the Navigation bar, click  to open the Main menu.
2. From the **Services** menu, select the **Azure IoT Hub service** to open the configuration page.
3. From the **Service configuration** tile, click  (under **Service**) to select **Enable**.
4. In the same tile, add the **Connection string** and **Upload interval**.

*Notice: The **Start date** is not available when the service is enabled.*

5. From the **Selected devices** tile, click **Select devices** to choose the variables.
6. Click  to save the configuration.
7. From the **Information** tile, check on the service status.

Configure the AWS IoT service

1. From the Navigation bar, click ☰ to open the Main menu.
2. From the **Services** menu, select the **AWS IoT service** to open the configuration page.
3. From the **Service configuration** tile, click ▼ (under **Service**) to select **Enable**.
4. In the same tile, add the:
 - **Connection string**
 - **Client ID**
 - **Topic**
 - **Security certificates** and
 - **Upload interval**.

Notice: The Start date is not available when the service is enabled.

5. From the **Selected devices** tile, click **Select devices** to choose the variables.
6. Click  to save the configuration.
7. From the **Information** tile, check on the service status.

Manage the Modbus gateway service

1. From the Navigation bar, click ☰ to open the Main menu.
2. From the **Services** menu, select the **Modbus gateway service**.
3. Choose a port by typing the number in the relevant field.
4. Enable the service.
5. Configure the parameters following the instructions described in the Modbus gateway configuration parameters paragraph.
6. Click  to save the configuration.

Manage the remote support VPN service

1. From the Navigation bar, click ☰ to open the Main menu.
2. From the **Services** menu, select the **Remote support VPN**.
3. Enable the service.
4. Click  to save the configuration.

Enable the VPN service for MAIA Cloud

1. Go to your MAIA Cloud organization and activate your UWP 3.0

For further information about Maia Cloud read the [user manual](#).

2. Open the **main menu**
3. Go to **Devices > VPN**
4. Click  > **Assign credit** to enable the VPN service for your UWP 3.0
5. Update your UWP 3.0.

Note: the VPN service is available in the UWP 3.0 Tool 8.4.0.3 onwards.

6. Log into the UWP 3.0 web app
7. Click ☰ to open the **main menu**
8. Go to **Service > Remote VPN Services**
9. Enable the service
10. Enter the **activation code** included in your UWP-ACTIVATION-KEY kit

*Note: please ensure to set **Standard Maia Cloud Server**.*

11. Click  to save

Note: when the status icon is green, the procedure is successfully finished.

Configure the EPD push service

1. From the Navigation bar, click  to open the Main menu.
2. From the **Services** menu, select the **EDP push service** to open the configuration page.
3. From the **Service configuration** tile, click  (under **Service**) to select **Enable**.
4. In the same tile, add the **EDP service address** and **Upload interval**.

Notice: The Start date is not available when the service is enabled.

5. From the **Select variables** tile, click **Select parameters** to choose the variables.
6. Click  to save the configuration.
7. From the **Information** tile, check on the service status.

Enable the UWP secure bridge function

1. Open the UWP 3.0 Web App
2. From the **Main Menu**, select **Services > UWP Secure Bridge**
3. Enable the **Bridge function**
4. Enter a password
5. Click  to save

Notice: This function is available only by September 2020.

Configure the EnelX IoT push services

1. Open the UWP 3.0 Web App.
2. From the **Main Menu**, select **Services > EnelX push IoT services**.
3. Enter the parameters **from the Service configuration tab**.
4. Set the **Service** status to **Enable** to start the gateway.

*Note: You can check the gateway status from the **Information** tile (**Service configuration** tab).*

5. **Access the editing mode from the Variables tab by clicking  (lower right-hand corner).**
6. **Select and group the variables according to your needs.**

*Note: From the **Select variables** window, you see the variables previously selected from the **UWP 3.0 Tool**.*

7. **Click Apply.**
8. From the **Variables** tab, associate the selected variables to a Thing or Trend ID.

Note: You can filter/sort the selected variables from the right-hand column so to obtain the desired combination.

From the **EnelX portal**, you can see if the registered gateway is connected or not.

System settings

This chapter includes the following sections:


How to access the System settings

User interface

How to access the System settings

1. From the Navigation bar, click ☰ to open the Main menu.
2. Select **System** settings

User interface

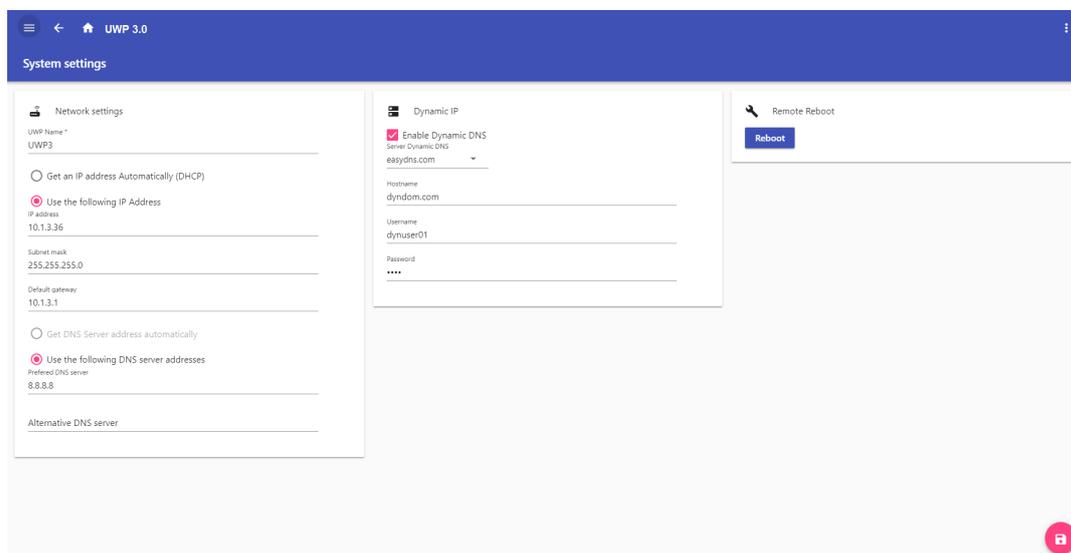

Tile	Description	
Network settings	Element	Function
	UWP Name*	You can change the UWP name.
	Get an IP address Automatically (DHCP, Dynamic Host Configuration Protocol)	By selecting this option, an IP address will be automatically assigned.
	Use the following IP Address	You can assign a static IP address by filling in the fields: <ul style="list-style-type: none"> • IP address • Subnet mask • Default gateway.
	Get DNS Server address automatically	By selecting this option, a DNS Server address will be automatically assigned. <i>Note: This option is available only if you choose the DHCP.</i>
	Use the following DNS Server addresses	You can assign a DNS Server address, by filling in the fields: <ul style="list-style-type: none"> • Preferred DNS server • Alternative DNS server.
<i>Notice: The field marked with (*) is mandatory.</i>		
Dynamic IP	Element	Function
	Enable Dynamic DNS	To enable the relevant options
	Dynamic Server DNS	You can select a DNS Server address from the list below
	Hostname	To type the Hostname
	Username	To type the Username
	Password	To type the Password
Reboot	To reboot UWP 3.0	

Settings menu

This chapter includes the following sections:

How to access the settings menu

User interface

How to access the settings menu

1. From the Navigation bar, click  to access the drop-down list.
2. Select the settings to change.

*Notice: This menu is not available if you choose the **Free access**.*

User interface

Menu	Description
------	-------------

<p>Theme and colours ▼</p>	<p>You can:</p> <ul style="list-style-type: none"> • change the Web App Theme colours • change the Icon colours (Colour for icon ON/OFF); • change the Font and its size (Zoom); • select another Logo (displayed in the main menu and in the access page) * <p><i>Notice: Once you have changed the logo, the previous image will be lost. Be sure to make a backup before changing it.</i></p> <ul style="list-style-type: none"> • restore the default Logo. <p><i>*Note: Max dimensions: 300px per 95px (width x height). Max weight: 200kB.</i></p>
<p>Language ▼</p>	<p>To change the Web App language.</p>
<p>Date and time ▼</p>	<p>You can:</p> <ul style="list-style-type: none"> • Change the UWP date and time; • Select a Time zone; • Enable Network Time Protocol (NTP) for clock synchronization. For this function, you can indicate the server address (server 1 or server 2). <p><i>Note: This Information will appear in the System Info page (see Main menu).</i></p>
<p>User ▼</p>	<p>You can change:</p> <ul style="list-style-type: none"> • the username; • the password; • the name; • the surname.
<p>Others ▼</p>	<p>You can change:</p> <ul style="list-style-type: none"> • the Project name* and • the Naming levels. <p><i>*Note: This option is available only for the Admin user.</i></p>
<p>Maintenance* ▼</p>	<p>You can:</p> <ul style="list-style-type: none"> • save the Web App configuration as a .zip file (Web App Database backup), • load the Web App configuration from a previously saved file (Restore database) and • restore the UWP 3.0 Tool configurated locations, displayed as dashboards in the Web App, that contain functions, displayed as widgets in the Web App (Set to default Web App) • Clean the Web App • Switch to Developer mode (to see the labels keys). <p><i>*Note: This field is available only for the Admin user.</i></p>
<p>Restore / Close ▼</p>	<p>To restore the Web App settings / To close the Settings menu.</p>

Dashboards

This chapter includes the following sections:

How to access a function dashboard

How to access a custom dashboard

User interface

Things to know

How to

How to access a function dashboard

1. From the Navigation bar, click ☰ to access the Main menu.
2. Select the desired Function dashboard.

Note: The function dashboards list depends on the configuration made by means of the UWP 3.0 Tool (see UWP 3.0 Tool manual).

How to access a custom dashboard

1. Click the Dashboard title / Page selector (under the Navigation bar).
2. From the list box, select the Custom dashboard to manage.

User interface

This section includes the following topics:

Common elements

Widget dashboard

Custom chart dashboard


Chart template dashboard

Energy summary dashboard

Common elements

Element	Description										
Office	Dashboard title / Page selector to change the viewed dashboard .										
	<p>Editing mode access:</p>										
	<table border="1"> <thead> <tr> <th>Element</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td></td> <td> Dashboard management menu. You can: <ul style="list-style-type: none"> • Add a new Dashboard; • Move/Clone/Delete/Set as home page an existing Dashboard or • Set the background colour • Manage the Template editor • Allow/Remove free access. </td> </tr> <tr> <td>Root</td> <td>To change the Dashboard title.</td> </tr> <tr> <td></td> <td>To save the changes.</td> </tr> <tr> <td></td> <td>To discard the changes.</td> </tr> </tbody> </table>	Element	Function		Dashboard management menu. You can: <ul style="list-style-type: none"> • Add a new Dashboard; • Move/Clone/Delete/Set as home page an existing Dashboard or • Set the background colour • Manage the Template editor • Allow/Remove free access. 	Root	To change the Dashboard title.		To save the changes.		To discard the changes.
Element	Function										
	Dashboard management menu. You can: <ul style="list-style-type: none"> • Add a new Dashboard; • Move/Clone/Delete/Set as home page an existing Dashboard or • Set the background colour • Manage the Template editor • Allow/Remove free access. 										
Root	To change the Dashboard title.										
	To save the changes.										
	To discard the changes.										


Widget dashboard

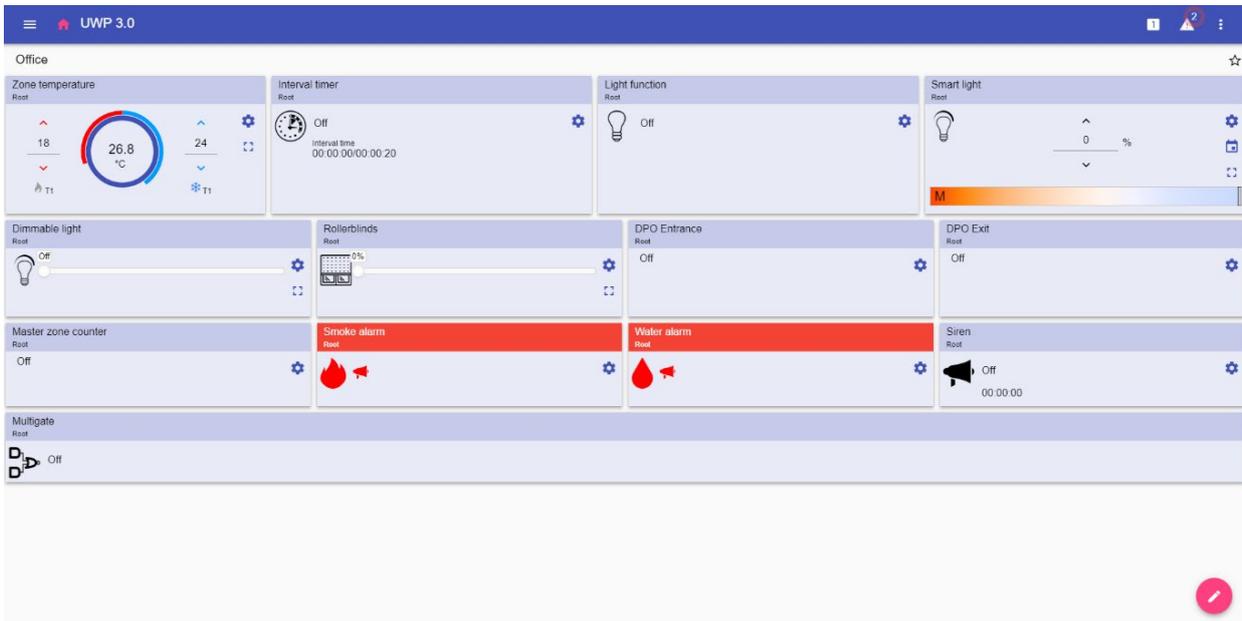

2. Widget dashboard

Icon	Description				
	<p>Editing mode access:</p> 				
	<table border="1"> <thead> <tr> <th>Icon</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">+</td> <td> <p>Add widget elements, such as:</p> <ul style="list-style-type: none"> • Functions • Real-time • History • Separator. <p><i>For further information concerning the widgets, see Types of widget.</i></p> </td> </tr> </tbody> </table>	Icon	Function	+	<p>Add widget elements, such as:</p> <ul style="list-style-type: none"> • Functions • Real-time • History • Separator. <p><i>For further information concerning the widgets, see Types of widget.</i></p>
Icon	Function				
+	<p>Add widget elements, such as:</p> <ul style="list-style-type: none"> • Functions • Real-time • History • Separator. <p><i>For further information concerning the widgets, see Types of widget.</i></p>				

Custom chart dashboard

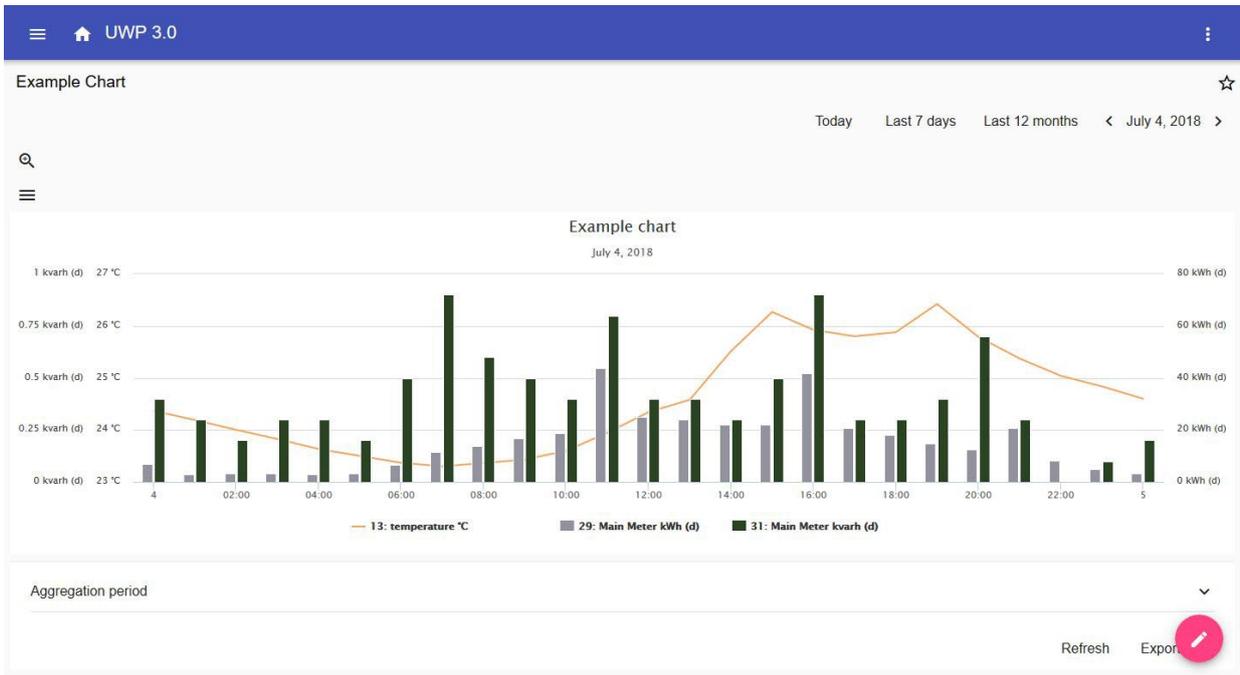

3. Custom chart dashboard

Icon	Description								
	<p>Editing mode access:</p> 								
	<table border="1"> <thead> <tr> <th>Element</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td></td> <td> <p>Layout preferences menu:</p> <ul style="list-style-type: none"> • No column; • Left column; • Right column; • Two columns. <p><i>Note: These options are available in the Chart template and the Energy summary dashboard too.</i></p> </td> </tr> <tr> <td></td> <td>Add a type of widget</td> </tr> <tr> <td></td> <td>To lock/Unlock the column(s).</td> </tr> </tbody> </table>	Element	Function		<p>Layout preferences menu:</p> <ul style="list-style-type: none"> • No column; • Left column; • Right column; • Two columns. <p><i>Note: These options are available in the Chart template and the Energy summary dashboard too.</i></p>		Add a type of widget		To lock/Unlock the column(s).
Element	Function								
	<p>Layout preferences menu:</p> <ul style="list-style-type: none"> • No column; • Left column; • Right column; • Two columns. <p><i>Note: These options are available in the Chart template and the Energy summary dashboard too.</i></p>								
	Add a type of widget								
	To lock/Unlock the column(s).								
	<p><i>Notice: If you select a layout and then you select another one, the content of the first selected layout will be lost.</i></p>								

Note: The other Dashboard elements are described in the previous chapter (**Widget dashboard**).

Chart template dashboard



4. Chart template dashboard

Element	Description
	To lock/Unlock the column(s).
	Chart template selector.
	Devices selector: you can select the devices whose variables will be displayed in the chart. <i>Notice: If you open it, the widgets you have added in the relevant column disappear. As you close it, the widgets appear again.</i>

*Note: The structure is described in the previous chapter (Custom chart dashboard). For information concerning the template creation, go to **Widgets > How to > Manage a chart template**.*

Energy summary dashboard

This Dashboard contains the **Energy summary**: for each device (first column), the energy consumption (or production) is shown for different aggregation period (the last four columns).



5. Energy summary dashboard

Area	Description														
Charts summary	<table border="1"> <thead> <tr> <th>Icon</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td></td> <td>Layout preferences menu: <ul style="list-style-type: none"> • Daily Chart; • Monthly Chart; • Yearly Chart; • Total options. </td> </tr> <tr> <td>Device</td> <td>Device whose data are displayed.</td> </tr> <tr> <td>Daily</td> <td>Daily data viewing.</td> </tr> <tr> <td>Monthly</td> <td>Monthly data viewing.</td> </tr> <tr> <td>Yearly</td> <td>Yearly data viewing.</td> </tr> <tr> <td>Total</td> <td>Total data viewing.</td> </tr> </tbody> </table>	Icon	Description		Layout preferences menu: <ul style="list-style-type: none"> • Daily Chart; • Monthly Chart; • Yearly Chart; • Total options. 	Device	Device whose data are displayed.	Daily	Daily data viewing.	Monthly	Monthly data viewing.	Yearly	Yearly data viewing.	Total	Total data viewing.
	Icon	Description													
		Layout preferences menu: <ul style="list-style-type: none"> • Daily Chart; • Monthly Chart; • Yearly Chart; • Total options. 													
	Device	Device whose data are displayed.													
	Daily	Daily data viewing.													
	Monthly	Monthly data viewing.													
Yearly	Yearly data viewing.														
Total	Total data viewing.														
Widgets viewing area	Configurable columns.														
Editing mode	If you access this area (clicking on ) , you can select: <ul style="list-style-type: none"> • The conversion type; • The device; • The variables; • The engineering unit; • The scale. 														

Things to know

This section includes the following topics:

What is a dashboard

Function dashboard

Custom dashboard

What is a dashboard

A **dashboard** is a widgets container where you can easily perform the following actions:

- To view real-time data and charts;
- To verify the alarms;
- To send commands (e.g. switch lights on/off, set the temperature, etc.),
- To set function parameters.

UWP 3.0 Web App allows you to view two types of dashboard: The **Function dashboard** and the **Custom dashboard**.

Note: To get from one dashboard to another, it is possible to swipe left and right.

Function dashboard

A **Function dashboard** is automatically generated by the system during the configuration process.

Each **Function dashboard** contains all the widgets belonging to a specific type of function, whose name is given to the dashboard.

Notice: From the Web App, only the functions that have been set from the configuration software are available and they cannot be modified.

Custom dashboard

A **Custom dashboard** contains the widgets that you choose from the Web App.

In each dashboard, it is possible to set:

- the dashboard title and
- the associated widgets.

Moreover, there are four types of **Custom dashboards**:

- **Widget dashboard.** It allows you to manage and create widgets (see **Create a new widget**).
- **Custom chart dashboard.** This dashboard is dedicated to the charts creation and management.
- **Chart template dashboard.** This dashboard is dedicated to the chart templates that you can add, change or remove to create custom chart.
- **Energy summary dashboard.** This dashboard displays Daily, Monthly and Yearly consumption data for an ordered list of meters (selected by the user). Furthermore, by means of this page it is possible to:
 1. Select the variables out of the list of the available variables in the target meter.
 2. Change the engineering unit so as to align all the data to a common unit; a set of conversion scale factors is available. Nonetheless, you are free to change the scale according to the needs.

How to

This section includes the following topics:

Create a custom dashboard

Manage a chart template

Create a custom dashboard

1. Go back to the Home page.
2. Access the editing mode by clicking .
3. From the edit toolbar, click  to open the Dashboard management menu.
4. Hover over Add to select the type of Custom dashboard to add.
5. Give the selected type of Custom dashboard a title.
6. Complete the selected Custom dashboard.

7. Save by clicking  or click  to exit the editing mode.

If you choose a...	Then...	And...
Widget dashboard	select a type of widget to add	click Apply to save the selection
Custom chart or an Energy summary dashboard	select the layout preferences: <ul style="list-style-type: none"> • No column • Left column • Right column • Two columns 	select the widget to add
Chart template		select the template (set of variables)

Further Information: see *Custom chart dashboard*, *Energy summary dashboard* and *Chart template dashboard*

Manage a chart template

1. From a dashboard, click  to access the editing mode.
2. Click  to select the Template editor option.
3. From the Template editor page, click  to access the editing mode.

If you want...	Then...	And...
To create a new template	Click + , select the variables to include in the template	Click Apply to save the selection
To modify an existing template	Flag the template to modify, click  to change the variables to include	Click  to save the new selection
To delete an existing template	Flag the template to delete	Click  to delete it

Notice: The default templates (the grey ones) can be not modified or removed.

4. Click  to save the changes.

Widgets

This chapter includes the following sections:

User interface
Things to know
How to

User interface

This section includes the following topics:

Common elements

Common elements



6. Different types of widgets

Icon	Function
	Access the widget settings page. <i>Note: For each type of widget, there are different parameters to manage (see Manage the widget settings).</i>
	Calendar: Events scheduling (see Schedule an event).
	Expand the widget drawer . <i>Further information: go to Types of Function > User interface.</i>
	To show the history chart and the relevant parameters.

Things to know

This section includes the following topics:

What is a widget

Types of widget

What is a widget

A widget is a graphic element contained in a dashboard that allows the user to interact with the system managed by UWP 3.0.

According to the type of widget, the user can:

- View real-time data, the status of a function or an alarm condition;
- Access the settings of a function;
- Access the viewing area of a chart;
- Send commands;
- Customize the distribution of widgets.

Types of widget

This topic includes the following options:


- Function widget
- Real-time widget
- History widget
- Separator widget

Function widget

This type of widget is associated to a specific function, previously configured from the **UWP 3.0 Tool**.

Depending on the associated function, it allows you to:

- send commands (e.g. Switch on/off light, raise/lower blinds, etc.),
- change set points (e.g. Heating set point) or other parameters (e.g. Delays) and
- view function status or alarms.

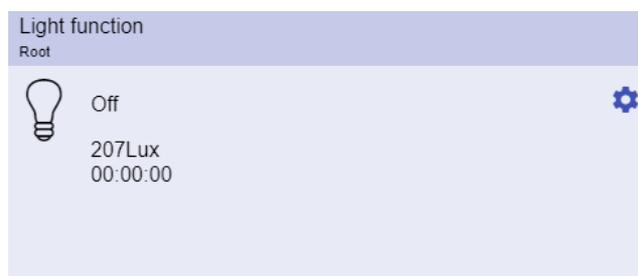

7. Example of function widget

Real-time widget

The **Real-time widget** shows the real-time value or status of the selected variables.



8.

9. Example of Real-time widget

*Note: You can assign a title to the **Real-time widget**.*


History widget

The **History widget**:


- shows the real-time value or status of the selected variables* and
- allows you to view the trend of these variables*.

*Notes:

- The variables are plotted on a chart that is displayed in another page (click  from the **history widget**)
- The same variables displayed in the **history widget** and in the **real-time widget** may have different names.



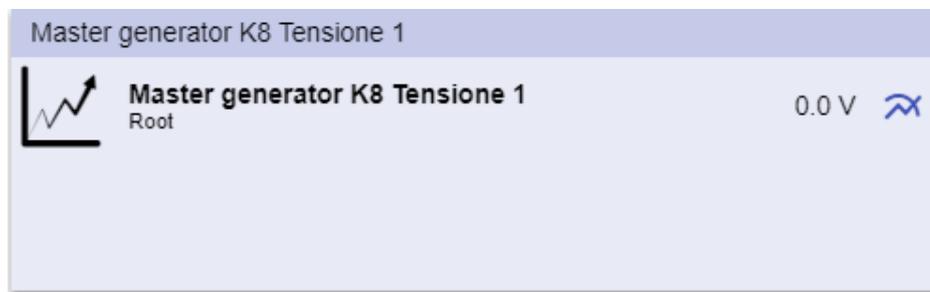


10. Example of History widget

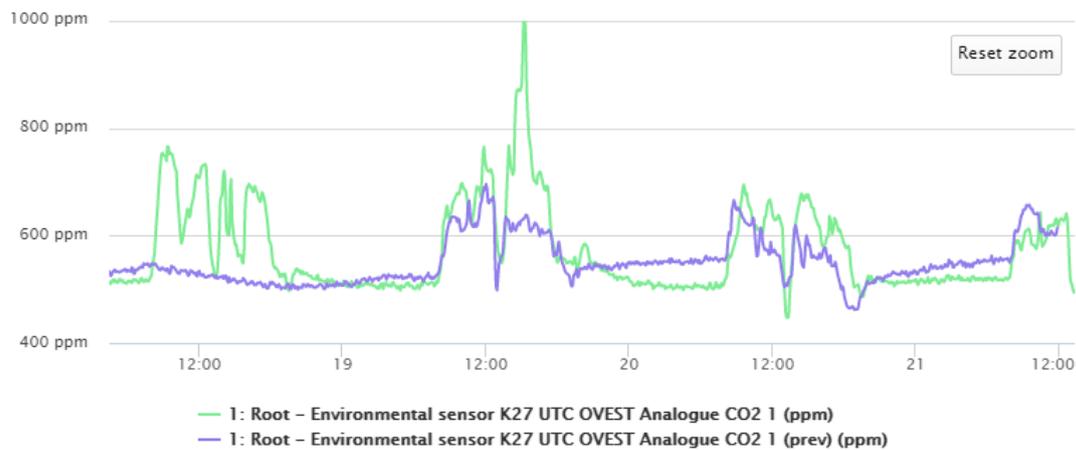

11. Example of Chart

For each variable, you can select the type of chart for average, MIN and MAX values:

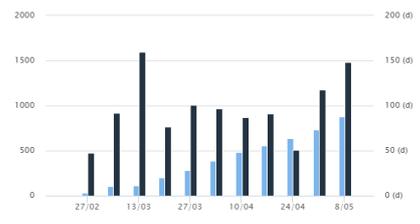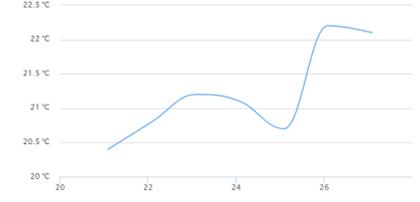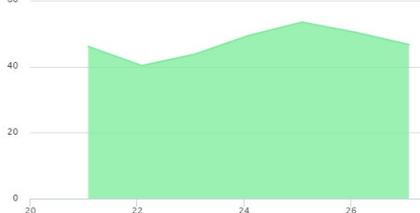
Type	Example
<p style="text-align: center;">Line</p>	
<p style="text-align: center;">Bar</p>	
<p style="text-align: center;">Spline</p>	
<p style="text-align: center;">Area</p>	

Separator widget


It allows you to customize the widgets distribution in the dashboard.

It can be used to:

- change the automatic widgets distribution,
- tile horizontally two or more widgets (up to 4), chosen by the user and
- regroup widgets by function.

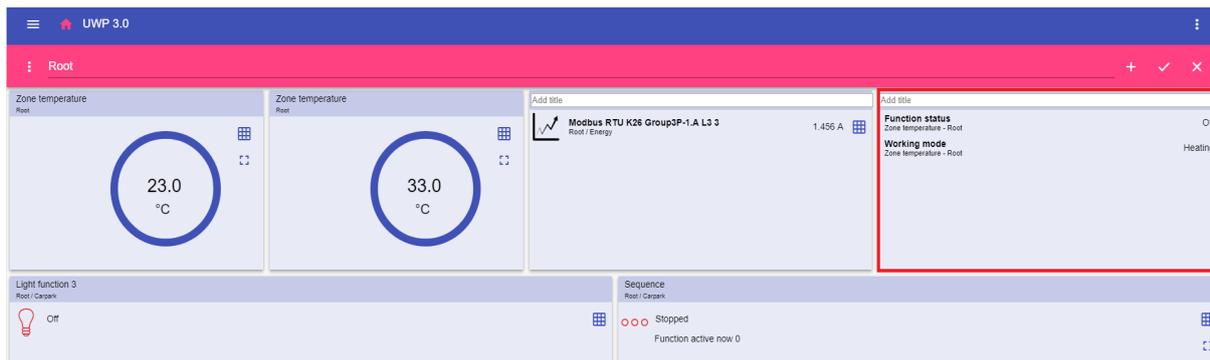

12. Widget distribution without separator

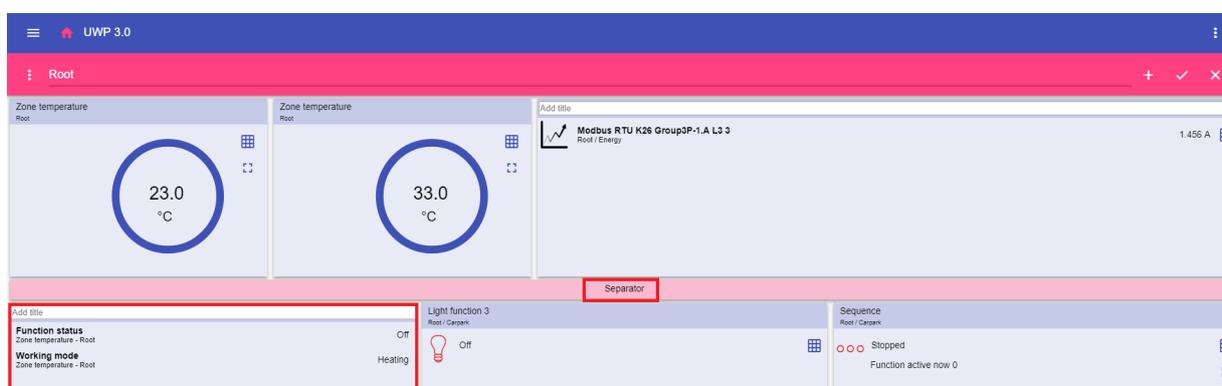

13. Widgets distribution with separator (the widget has been moved by the user)



14. Widgets distribution on mobile phone with separator

*Notice: This widget is not available in the **Custom chart dashboard**.*

How to

This section includes the following topics:

Create a new widget

Create a chart

Remove a widget

Move a widget to another page

Copy a widget

Schedule an event

Manage the widget settings

Create a new widget

This topic includes the following options:

In the Widget dashboard

In the Custom chart / Chart template/ Energy summary dashboard

In the Widget dashboard

1. Click  to access the editing mode.
2. From the edit toolbar, click  to select the type of widget to add.
- 3.

If you choose a...	Then...
Function widget	Select the available parameters or signals to add and click Apply .
Real-time widget	
History widget*	
Separator	Choose a position.

*Further information: see **Create a chart**.

4. From the edit toolbar, click  to save the changes.

In the Custom chart / Chart template/ Energy summary dashboard

1. Click  to access the editing mode.
2. From the column, click  to select the type of widget to add.
3. From the edit toolbar, click  to add the widget.
4. Click again  to save the changes.

Create a chart

This topic includes the following options:

In the Widget dashboard

In the Custom chart dashboard

In the Chart template dashboard

In the Energy summary dashboard

In the Widget dashboard

1. Add a history widget (see Create a new widget).
2. Click Select variables to open the available parameters page.

Icon	Description
<input type="checkbox"/>	To select the variables (max. 16)
	To search the variables
	To access the Filters : <ul style="list-style-type: none"> • Group by (None/Module/Name/Signal Class/Location) • Search in (Module/Name/Signal Class/Location) • Show (All items/Selected items/Unselected items)

3. Click Apply to save the selection.
4. Assign the widget a title
5. Click ✓ to save the widget.
6. Enter the chart page by clicking
7. Assign the chart another title.
8. From the list, select the type of chart.
9. Select the Aggregation period (under the Select variables list box)
10. Complete the chart by choosing one of these options.

If you select...	Then...
Compare	It will compare the data of the current period with the data of another selected period.
Preview	The chart will be refreshed with the updated parameters.
Save chart	The chart will be saved and added to the Widget dashboard .
Export data	The chart will be sent to the Reports page <div style="text-align: center; border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;"> Report request sent Go to the reports page </div>
Cancel	Discard the changes.

In the Custom chart dashboard

1. Create a new Custom chart dashboard (see Create a custom dashboard).
2. Assign the chart another title.
3. Click Select variables to open the available parameters page.

Icon	Description
<input type="checkbox"/>	To select the variables (max. 16)
🔍	To search the variables
⋮	To access the Filters : <ul style="list-style-type: none"> • Group by (None/Module/Name/Signal Class/Location) • Search in (Module/Name/Signal Class/Location) • Show (All items/Selected items/Unselected items)

4. From the list, select the type of chart
5. Select the Aggregation period (under the Select variables list box)
6. Complete the chart by choosing one of these options.

If you select...	Then...
Compare	It will compare the data of the current period with the data of another selected period.
Preview	The chart will be refreshed with the updated parameters.

7. Click ✓ to save the dashboard.
- 8.

If you want to...	Then click...	And...
Refresh the chart	Refresh	View the updated chart
Export the chart	Export data to choose a file format	Go to the Reports page to see the export

In the Chart template dashboard

1. Create a new Chart template dashboard (see Create a custom dashboard).
2. Select a template from the list.
3. Assign the chart another title.
4. Select the Aggregation period (under the Title section)
5. Complete the chart by choosing one of these options.

If you select...	Then...
Compare	It will compare the data of the current period with the data of another selected period.
Preview	The chart will be refreshed with the updated parameters.

6. Click ✓ to save the dashboard.

In the Energy summary dashboard

1. Create (see Create a custom dashboard) or select an Energy summary dashboard.
2. From the column, click  to select the Chart widget.
3. Follow the same procedure described in **How create a chart > In the Widget dashboard** (from the Step 2).

Remove a widget

1. Click  to access the editing mode.
2. Click the widget to modify.
3. From the edit menu, click  to remove the widget.
4. Click  to save.

Move a widget to another page

1. From the widget dashboard, click  to access the editing mode.
2. Click the widget to modify.
3. From the edit menu, click the icon to move the widget.
4. Select the dashboard and the column where to move the widget.
5. Click  to save.

Copy a widget

1. Click  to access the editing mode.
2. Click the widget to modify.
3. From the edit menu, click  (copy).
4. Select the dashboard and the column where to copy the widget.
5. Click  to save.

Schedule an event

1. From a widget, click  to access the event-scheduling page.
2. Click  to open the configuration window.
3. Fill in all the fields.

Element	Description
Name	In this field, you define the name of the event that will appear on the calendar.
Start date	Date at which the event will start
Start time	Time at which the event will start.
End date	Date at which the event will finish.
End time	Time at which the event will finish.
Event Action at start/end time	You can decide the action to be performed as the time period starts or finishes.
Action during the whole period	You can choose to: <ul style="list-style-type: none"> • disable the automation or • perform no action during the selected period.

4. Click Save.

Manage the widget settings

You can manage each type of widget settings, without adding or removing the available parameters from the Web App. Indeed, the available parameters list can be added or removed only by means of the **UWP 3.0 Tool**.

*Notice: This function is available only for the **Admin users**.*

1. From a widget, access the settings page by clicking .
2. Select the parameter(s) to adjust.
3. Send the parameter(s) by clicking .

Types of Function

This chapter includes the following sections:

User interface

Things to know

How to

User interface

This section includes the following topics:

Light function

Dimmable light function

Constant light function

Smart light function

Zone temperature function

Cooling temperature system function

Heating temperature system function

Roller blind function

Tilting roller blind function

Window control function

Program function

Dimmer sequence function

Car heating function

Simulated habitation function

Multigate function

Interval timer function

Delay timer function

Recycling timer function

Analogue comparator function

Switch Function

Master zone counter


Detection point (DPO) function

Notes:

- Only the **Admin** users can adjust the functions settings described below.
- The available parameters list can be added or removed only by means of the UWP 3.0 Tool. From the Web App, you can only adjust them.

Light function

You can either manage the basic function to switch the light on /off or implement an automated system by adjusting the settings.

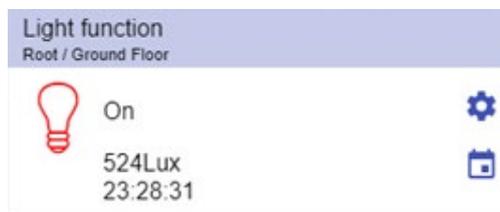

15. Light function

Icon	Meaning	Description
	Light is OFF	These icons show the current status of the function. It is possible to switch a light on/off clicking on the push button.
	Light is ON	
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).
524Lux	Lux sensor value	It shows the Lux sensor value (if the related sensor is available).
23:28:31	Energy save timer	This field shows the Energy save timer value.
	Calendar	To schedule the events related to this function (see Schedule an event).

Dimmable light function

You can either configure a basic function to switch the light on /off and adjust the light intensity or implement an automated system by adjusting the settings.



16. Dimmable light function

Icon	Meaning	Description
	Light is OFF	These icons show the current status of the function. Toggle the light ON / OFF to S1 (the last valid value stored).
	Light is ON	
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).
	Expand / reduce the drawer*	It shows the Scenario buttons (S2 – S3 – S4 – S5). <i>Note: The Only the Scenarios available in the configuration will be shown.</i>
	Slider	To dim the light.
224Lux	Lux sensor value	It shows the Lux sensor value (if the related sensor is available).
00:00:00	Energy save timer	This field shows the Energy save timer value.
	Calendar	To schedule the events related to this function (see Schedule an event).

**Note: this function is available only for the “admin” user.*

Constant light function

This function automatically regulates a **constant light** level using dimmers. In the **settings**, you can select different ways of controlling the constant light: with timers and/or schedulers, according to the presence of people. Up to 5 different predefined scenarios can be set.



17. Constant light function


Icon	Meaning	Description
	Light is OFF	These icons show the current status of the function. Toggle the light ON / OFF to S1 (the last valid value stored).
	Light is ON	Note: The icons colour can be changed (see Settings menu).
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).
	Expand / reduce the drawer*	It shows the Scenario buttons (S2 – S3 – S4 – S5). Note: Only the Scenarios available in the configuration will be shown.
	Up/down arrows	To change the target lux level.
117Lux	Lux value	It shows the Lux sensor value (if the related sensor is available).
00:05:00	Energy save timer	This field shows the Energy save timer value.
	Calendar	To schedule the events related to this function (see Schedule an event)

***Note:** this function is available only for the “admin” user.

Smart light function

There are different types of lighting control you can choose:

- Dimmer: see the **Dimmable light function**
- Constant light: see the **Constant light function**
- **Dimmer + Colour and Constant light + colour**: managed as a standard Dimmable light /Constant light with the additional control of the temperature colour. The light intensity is managed according to the standard Dimmable/Constant light control, whilst, the tuneable white control can be set manually by you or can be dynamically changed creating a relationship between day time and Table colour.

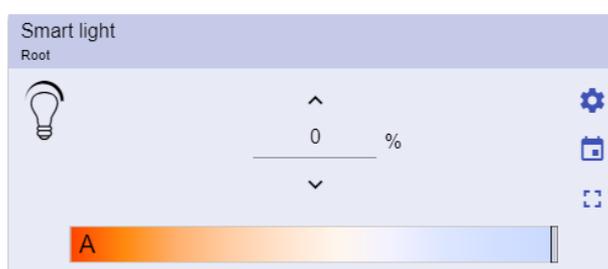


18. Smart light function

Icon	Meaning	Description						
	Light is OFF	These icons show the current status of the function. Toggle the light ON / OFF to S1 (the last valid value stored).						
	Light is ON							
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).						
	Expand / reduce the drawer*	Once opened, you can select: <ul style="list-style-type: none"> • a Scenario (S2 – S3 – S4 –S5) • the options to be displayed Note: Only the Scenarios available in the configuration will be shown.						
	Up/down arrows	<table border="1"> <thead> <tr> <th>If you select a....</th> <th>Then you can adjust...</th> </tr> </thead> <tbody> <tr> <td>Dimmable light</td> <td>The light intensity</td> </tr> <tr> <td>Constant light</td> <td>The lux level</td> </tr> </tbody> </table>	If you select a....	Then you can adjust...	Dimmable light	The light intensity	Constant light	The lux level
If you select a....	Then you can adjust...							
Dimmable light	The light intensity							
Constant light	The lux level							
	Slider	To set the colour temperature (A: automatically; M: manually).						
	Calendar	To schedule the events related to this function (see Schedule an event)						

***Note:** this function is available only for the “admin” user.

Zone temperature function

You can monitor the temperature of different zones, created according to the requirements.

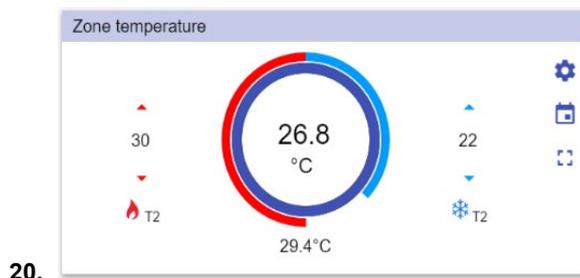


21. Zone temperature function

Icon	Meaning	Description
	Heating is OFF	It indicates when the heating setpoint is ON/OFF.
	T(x)	It indicates the active setpoint for Heating .
	Cooling is OFF	It indicated when the cooling setpoint is ON/OFF.
	T(x)	It indicates the active setpoint for Cooling .
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).
	Expand / reduce the drawer*	Once opened, it is possible: <ul style="list-style-type: none"> To use the set point buttons for H/C. Only the setpoints in the configuration will be shown. To click directly on a setpoint (T1, T2, T3, OFF) that is automatically activated (without saving). The selected setpoint changes colour to be quickly identified.
	Up/down arrows	To adjust the heating/cooling set point.
26.8°C	Auxiliary temperature	This field shows the Auxiliary temperature, if the related sensor is available.
	Calendar	To schedule the events related to this function (see Schedule an event)

***Note:** this function is available only for the “admin” user.

Cooling temperature system function

The **cooling temperature system** function is used to manage the cooling/ventilation of the building.

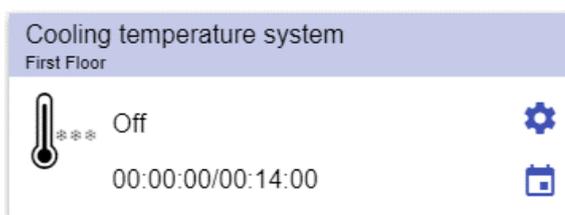


22. Cooling temperature system function

Icon	Meaning	Description
	The function is active	This icon shows the current status of the function. By clicking on the icon, the toggle action is performed (start/stop).
	The function is not active	<i>Note: The icons colour can be changed (see Settings menu).</i>
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).
00:00:00/ 00:14:00	Disabling timer	When the timer expires, the function automatically is disabled.
	Calendar	To schedule the events related to this function (see Schedule an event)

Heating temperature system function

The **heating temperature system** function is used to manage the heating/ventilation of the building.

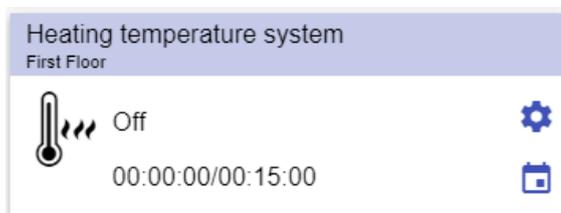

23. Heating temperature system function

Icon	Meaning	Description
	The function is active	These icons show the current status of the function. By clicking on the icon, the toggle action is performed (start/stop). Note: The icons colour can be changed (see Settings menu).
	The function is not active	
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).
00:00:00/ 00:15:00	Disabling timer	When the timer expires, the function automatically is disabled.
	Calendar	To schedule the events related to this function (see Schedule an event)

Roller blind function

You can either configure a basic function to move blinds up and down or implement an automated system by adjusting the settings.




24. Roller blind function

Icon	Meaning	Description
	Motor is moving DOWN	These icons show the current status of the function. <i>Note: The icons colour can be changed (see Settings menu).</i>
	Motor is moving UP	
	Motor is stopped	
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).
	Expand / reduce the drawer*	To select Fully up/down.
	Slider	To adjust the blind opening.
0.0m/s	Wind speed	These fields show the following information, if the related sensors are available: <ul style="list-style-type: none"> • Lux sensor value; • Wind speed; • Raining condition.
208Lux	Lux sensor value	
	Calendar	To schedule the events related to this function (see Schedule an event).

**Note: this function is available only for the “admin” user.*

Tilting roller blind function

The automation of the tilting slats can be managed by accessing the Settings, where you can select different kinds of automation: wind sensors, rain sensors, lux sensors, calendar.

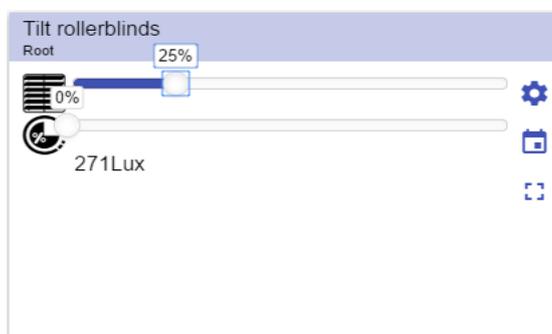


25. Tilting roller blind function

Icon	Meaning	Description
	Motor is moving DOWN	These icons show the current status of the function.
	Motor is moving UP	
	Motor is stopped	
	Tilt is stopped	
	Tilt is moving	<i>Note: The icons colour can be changed (see Settings menu).</i>
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).
	Expand / reduce the drawer*	To select Fully up/down.
	Sliders	To change the curtains and the tilt position.
271Lux	Lux sensor value	These fields show the following information, if the related sensors are available: <ul style="list-style-type: none"> • Lux sensor value; • Wind speed; • Raining condition.
	Calendar	To schedule the events related to this function (see Schedule an event)

**Note: this function is available only for the “admin” user.*

Window control function

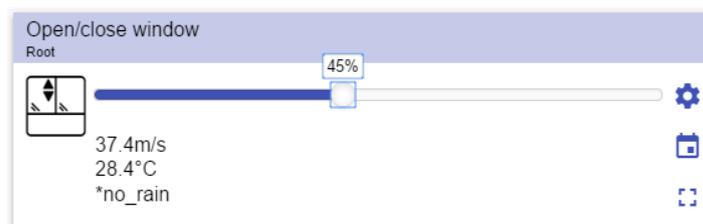

26. Window control function

Icon	Meaning	Description
	Motor is moving DOWN	These icons show the current status of the function. <i>Note: The icons colour can be changed (see Settings menu).</i>
	Motor is moving UP	
	Motor is stopped	
	Slider	To change the curtains position.
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).
37.4m/s 28.4°C No rain		These fields show the following information, if the related sensors are available: <ul style="list-style-type: none"> • Lux sensor value; • Wind speed; • Raining condition.
	Calendar	To schedule the events related to this function (see Schedule an event)

Program function

A **Program function** is a sequence that is just an ordered list of steps: each step in a sequence is identified by an index number that represents the sequential order in which the steps will be executed when the sequence is started.

A **Program function** allows you to define, for the selected **Switch** functions, the activation time and the sequential order in which the steps are executed.

From the Web App, you can:

- Send actions (Start – Pause -Stop the sequence)
- Change the *On time* value of one or more steps
- Change the *On time* of all steps by a percentage value
- Enable/disable the steps that have to be executed.




27. Example of a Program function widget in running mode

Icon	Description
	<ul style="list-style-type: none"> • Start: The function is started • Pause: The function is paused • Stop: The function is stopped
	<p>These icons show the Program function status (toggle the function Start/Stop).</p> <p><i>Note: The icons colour can be changed (see Settings menu).</i></p>
Switch 1 Running	It shows the name of the current active step.
Step time 00:00:00/00:00:00	It shows the countdown of the current active step [Step time] / [Step countdown]
Sequence time 00:00:00/00:00:00	It shows the total execution time of the entire sequence [sequence time] / [Sequence countdown]
	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).

Dimmer sequence function

The **Dimmer sequence** function allows you to manage, together, the **dimnable light functions** already created. The light level of all the added functions is set according to those defined in each step of the sequence, with the aim of making all the dimmers reach the final level at the same time.

This function can be used to create different scenarios, such as switching all the lights off at the same time regardless of the starting level of each single light.

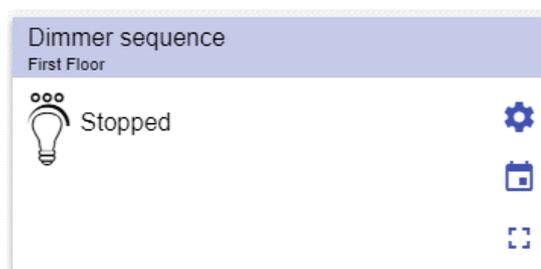


28. Dimmer sequence

Icon	Meaning	Description
	Sequence is OFF	These icons show the current status of the function. By clicking on the icon, the toggle action is performed (start/stop). <i>Note: The icons colour can be changed (see Settings menu).</i>
	Sequence is ON	
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).
	Expand / reduce the drawer*	It shows the following options: <ul style="list-style-type: none"> • Play / Pause / Stop buttons; • Disable timeout value.
	Calendar	To schedule the events related to this function (see Schedule an event)

**Note: this function is available only for the “admin” user.*

Car heating function

The **car heating** function allows you to heat the car so that it is ready at a predefined set time. You must set a time, two external temperatures limits (SP 1 and SP 2) and two timers (T1 and T2) so as to define the extreme points of a straight line. The straight line is used in the algorithm to define when the output should be on to heat the car.

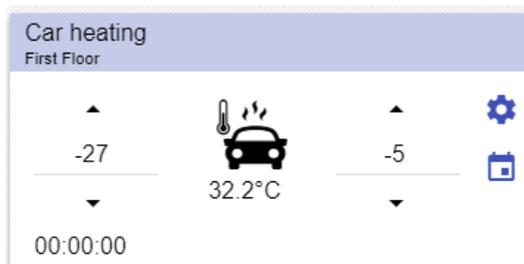


29. Car heating function

Icon	Meaning	Description
	Function is not active	These icons show the current status of the function. By clicking on the icon, the toggle action is performed (start/stop). Note: <i>The icons colour can be changed (see Settings menu).</i>
	Function is active	
	Up/down arrows	To adjust the temperature limits (high/low).
00:00:00	Counting timer	For automation enabling(s).
32.2°C	Temperature	Outdoor temperature
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).
	Calendar	To schedule the events related to this function (see Schedule an event).

Simulated habitation function

The **simulated habitation** function can be used to give the impression that the house is inhabited even if the user is out.

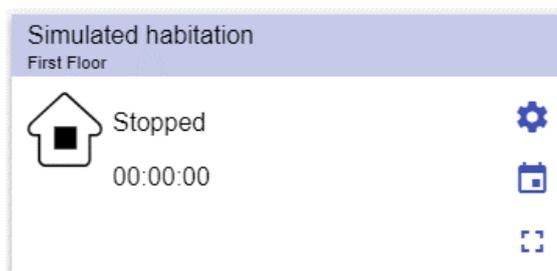

30. Simulated habitation function

Icon	Meaning	Description
	The function is stopped	These icons show the current status of the function. By clicking on the icon, the toggle action is performed (start/stop).
	The function is running	
	The function is paused	
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).
	Expand / reduce drawer*	Play/Pause/Stop buttons.
00:00:00	Counting timer	For automation enabling(s).
	Calendar	To schedule the events related to this function (see Schedule an event).

***Note:** this function is available only for the “admin” user.

Multigate function

The multigate function can be used to perform a logical operation with one or more inputs to have a single logic output status.




31. Multigate function

Icon	Meaning	Description
	Function is not active	These icons show the current status of the function. By clicking on the icon, the toggle action is performed (start/stop). Note: <i>The icons colour can be changed (see Settings menu).</i>
	Function is active	

Interval timer function

The timer function can be used to control an output where an automated temporization is required.

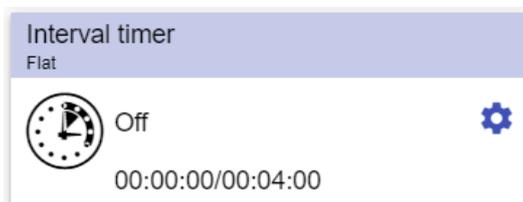

32. Interval timer function

Icon	Meaning	Description
	Function is not active	These icons show the current status of the function. By clicking on the icon, the toggle action is performed (start/stop).
	Function is active	
00:00:00/00:04:00	Interval timer	This field shows: <i>Counting delay off timer / Timer off value</i>
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).

Delay timer function

Using the delay timer, the output replicates the status of the input, applying a **delay on** and/or a **delay off timer**.



33. Delay timer function

Icon	Meaning	Description
	Function is not active	These icons show the current status of the function. By clicking on the icon, the toggle action is performed (start/stop).
	Function is active	Note: The icons colour can be changed (see Settings menu).
00:00:00/00:05:00 ON 00:04:58/00:05:00 OFF	Delay ON/OFF Timer	These fields show: <ul style="list-style-type: none"> Counting delay on timer / Timer On value Counting delay off timer / Timer Off value
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).

Recycling timer function

In the recycling timer function, until the trigger input is on, the output goes on and off with fixed timing.

As soon as the trigger signal is activated, the output starts going on/off according to the Ton and Toff times; when the stop signal is activated, the output goes off.




34. Recycling timer function

Icon	Meaning	Description
	Function is not active	These icons show the current status of the function. By clicking on the icon, the toggle action is performed (start/stop).
	Function is active	
00:00:00/00:05:00 ON 00:04:58/00:05:00 OFF	Delay ON/OFF Timer	These fields show: <ul style="list-style-type: none"> Counting delay on timer / Timer On value Counting delay off timer / Timer Off value
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).

Analogue comparator function

The analogue comparator function can be used to compare two values.

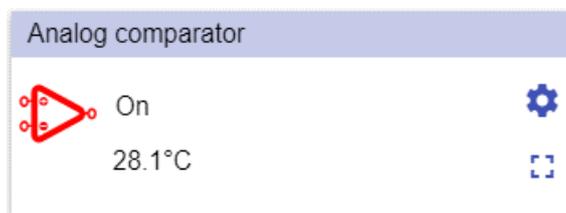


35. Analogue comparator function

Icon	Meaning	Description
	Function is not active	These icons show the current status of the function. By clicking on the icon, the toggle action is performed (start/stop).
	Function is active	
	Expand / reduce drawer*	It shows the: <ul style="list-style-type: none"> • Type of comparison; • Delay ON timer; • Delay OFF timer.
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).
28.1°C	Degrees	Output value (average of input signals).

**Note: this function is available only for the “admin” user.*

Switch Function

The switch function allows you to activate or deactivate any type of load (e.g. a relay).

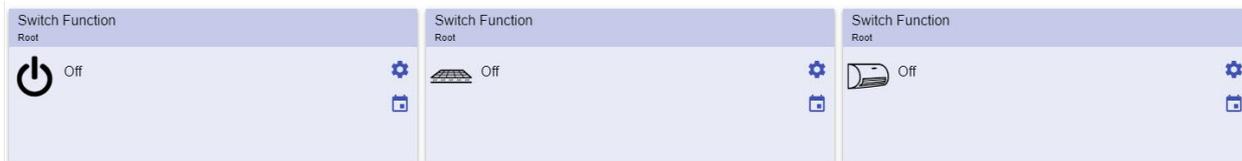


36. Examples of switch functions

Icon	Meaning	Description
	Switch On / Off	Custom icons
	Under floor heating	
	Air conditioner	
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).
	Calendar	To schedule the events related to this function (see Schedule an event).

Master zone counter

This function permits the monitoring of the available bays.

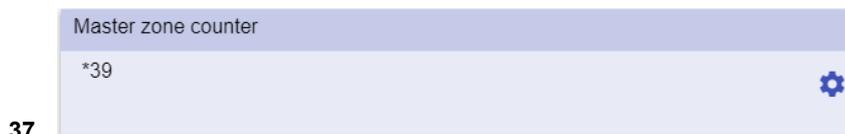


37.

38. Master zone counter

Element	Meaning	Description
*39	Available car bays	This number indicates the amount of available parking spaces. It changes every time a car enters or leaves the MZC.

Detection point (DPO) function

A **detection point** is a lane or driveway where cars enter or leave an MZC.

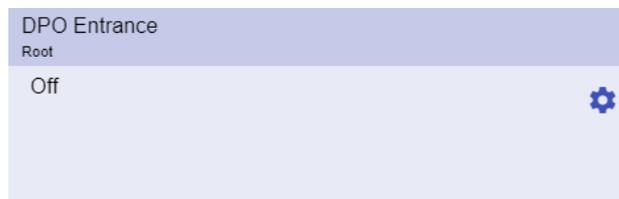

39. DPO function

Icon	Meaning	Description
Off/On	Detection of car entrance/exit	<p>Every time a car enters/exits, the status changes from Off to On for a while.</p> <p>Note: To view the number of entering/exiting cars, refer to the Master zone counter.</p>

Things to know

This section includes the following topics:

What is a function

Light functions

Temperature control functions

Rolling shutters functions

Sequence functions

Carpark functions

What is a function

A **function** is a set of instructions that in presence of

- one or more commands (e.g., button pressing) and
- one or more conditions (e.g., the temperature is lower than a defined set point),

generates one or more actions, such as

- commands (e.g. switch on/off the light or activate the boiler) and
- alerts.

There are predefined functions used to manage a whole series of automations, from lights to roller blinds:

Function type	Description
Light	ON/OFF switching of one or more lights, dimming of lights, setting of a constant light and settings of light intensity and colour.
Temperature control	Heating, ventilation and air conditioning control.
Rolling shutters	Blind control.
Sequence	Set of functions executed in sequence.

Note: There are further available functions that can be defined and configured by means of the wizard tool (see the **UWP 3.0 Tool manual**).

Light functions

These functions allow you to manage one or more lights at the same time.

You can either configure:

- a basic function to switch the light on manually, or
- an automatic system by programming the relevant objects of the function.

From the Web App, you can:

- Switch a light on/off (**Light function**)
- Dim the light (**Dimmable light function**)
- Set a constant light (**Constant light function**)
- Set the light intensity and colour (**Smart light function**).

Temperature control functions

From the **UWP 3.0 Tool**, you can manage the temperature inside the building, creating different zones depending on the different requirements. Each zone function can correspond to a part of the building (e.g. an office) where the user wants to control the heating/cooling.

On the Web App, the functions dedicated to the **temperature control** are:

- **Zone temperature function;**
- **Cooling temperature system function;**
- **Heating temperature system function.**

Rolling shutters functions

These functions allow you to manage the motor to control roller blinds.

You can either configure:

- a basic function to move blinds up and down or
- an automated system by programming the relevant objects of the function.

From the Web App, you can:

- Control the roller blind movement;
- Adjust the tilting slats;
- Control the window movement.

Sequence functions

The **sequence** functions allow you to put together the functions already created and activate/deactivate them with just one click. All the selected functions are activated according to a certain time and order. The sequence starts activating the first function in the list and goes on to activate the others following the predefined order, until the last function in the list is executed.

The functions that can be controlled are:

- lights,
- roller blinds and windows,
- intruder alarm,
- sirens,
- timers and
- zone temperature functions.

From the Web App, you can manage a:

- **Program function,**
- **Sequence function** or
- **Dimmer sequence function.**

Carpark functions

The **Carpark** functions permit the monitoring of the **Carpark system** status (e.g. number of available/occupied bays).

*Further information: see the **CP3 installation manual**.*

How to

This section includes the following topics:

Manage the Program function

Execute a set of steps one time only

Manage the Program function

1. From the Program function widget, click  to access its Settings menu.
2. Choose the procedure to follow:

Type	Procedure
Sequence programming	<ul style="list-style-type: none">• Set a steps sequence once• Change the sequence programming
Set parameters	<ul style="list-style-type: none">• Change the <i>On time</i> (individually)• Change the <i>On time</i> (multi-change)

Check which Switch functions belong to a step

1. From the Program function widget, click  to access its Settings menu.
2. Click  to check which Switch functions belong to a step.

Note: The relation between the step and the Switch functions cannot be changed by means of the Program function widget.

Change the *On time* value

1. From the **Program function widget**, click the  button to access its **Settings menu**.
2. There are two ways to change the *on time* value for each step in the sequence.

If you want to change it...	Then...	And...
Individually	In the <i>Time on</i> column, click the <i>time</i> field	Change the <i>Hours, Minutes, Seconds</i> values.
Multi-change	Click the  or  button in the <i>On time</i> column	Select the percentage value that will be applied to all the steps of the sequence

Change the sequence programming

1. From the **Program function widget**, click the  button to access its **Settings menu**.
2. Click  to select the steps to execute when the sequence starts.

Note: Each time the sequence starts, only the flagged steps will be executed.

3. Click  and select  to save the changes.
4. Otherwise, click  to restore the last valid set of steps.
5. Click  and select  to play the sequence.
6. Check the status of each step of the sequence:

Indicator	Behaviour
	Current active step
	Enabled steps
	Disabled steps

7.

If you want to...	Then click...
Pause the sequence	
Stop the sequence	

Note: When the sequence is running, you are not able to change the sequence set. In order to change it, the sequence must first be stopped.

Execute a set of steps one time only

1. From the widget **Settings menu**, flag the steps that have to be executed one time.

Notes:

- *This configuration overwrites the behaviour of the sequence, allowing the execution of a specific set of steps.*
- *When the sequence ends, the previous configuration will be restored.*
- *This procedure can be followed only if the sequence is not running.*
- *The steps that are not enabled will not be selectable and playable.*

2. Click  and select  to play the sequence.
- 3.

If you want to...	Then click...
Pause the sequence	
Stop the sequence	

Note: *When the sequence is running, you are not able to change the sequence set. In order to change it, the sequence must first be stopped.*

Alarms

This chapter includes the following sections:

How to access the alarm dashboard

User interface

Things to know

How to

How to access the alarm dashboard

1. Click  to access the **Main menu**.
2. Select **Alarms** >

User interface

This section includes the following topics:

Main page

Water alarm function

Smoke alarm function


Main intruder alarm function

Zone intruder alarm function

Hour counter function

Siren alarm function

Main page

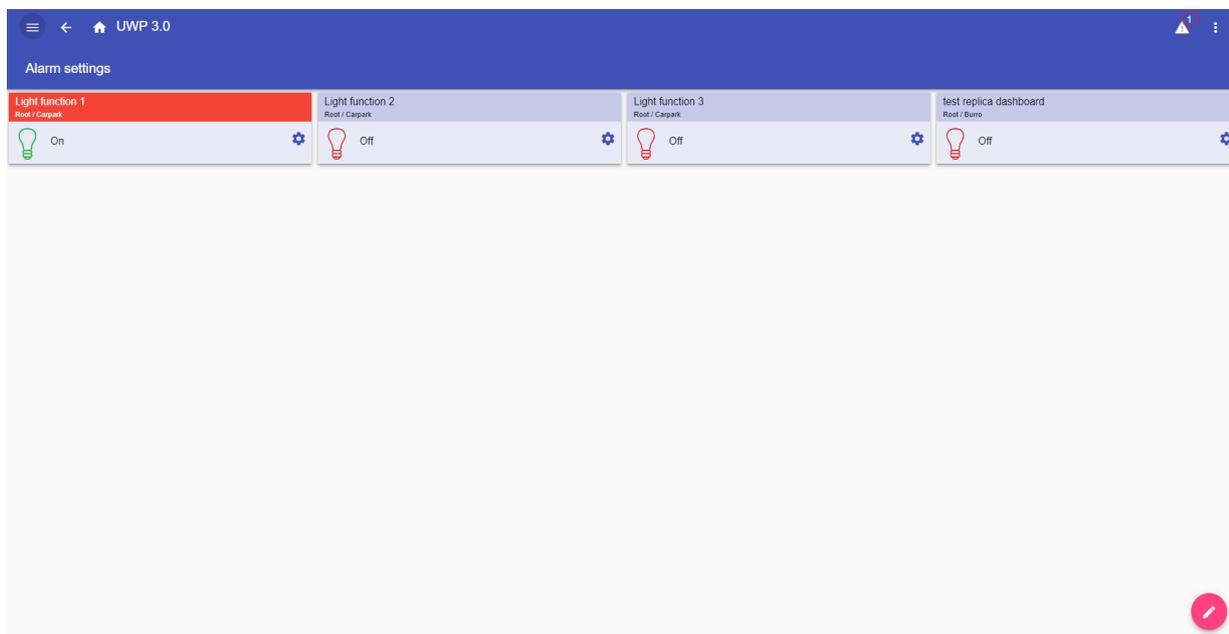

40. Alarms dashboard

Icon	Description
	The Add alarms button.
	The Active alarms counter . <i>Note: Clicking this icon when you are navigating other dashboards, you will be redirected to the Alarm dashboard.</i>

Water alarm function



42. Water alarm function widget

Icon	Meaning	Description
	Armed with no sensor active	These icons show the current status of the function. Note: The icons colour can be changed (see Settings menu).
	In Alarm	
	Disabled <i>Note: It is silenced after the Disabling timeout value.</i>	
00:00:00	Disabling timeout	The function is silenced after this period of time.
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).


Smoke alarm function



43. Smoke alarm function widget

Icon	Meaning	Description
	Armed with no sensor active	These icons show the current status of the function. <i>Note: The icons colour can be changed (see Settings menu).</i>
	In Alarm	
	Disabled <i>Note: It is silenced after the Disabling timeout value.</i>	
00:00:00	Disabling timeout	The function is silenced after this period of time.
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).

Main intruder alarm function

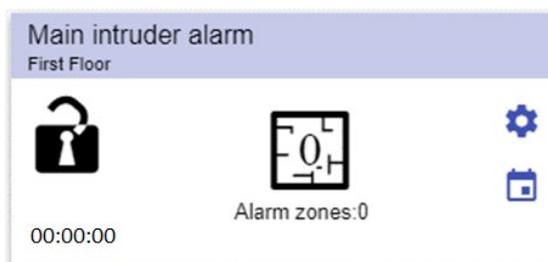

44.

45. Main intruder alarm function widget

Icon	Meaning	Description
	Main intruder alarm is not armed	These icons show the current status of the function. Clicking on the icon, the toggle action is performed: <ul style="list-style-type: none"> • If it is Disarmed, it will be Armed • If it is Armed, it will be Disarmed • If it is in Alarm, it will be Reset.
	Main intruder alarm is armed	
	Main intruder alarm is in alarm	
00:00:00	Disabling timeout	<i>Note: The icons colour can be changed (see Settings menu).</i> The function is silenced after this period of time.
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).
 Alarm zones:0	Alarm zones number	It shows the total amount of the Zone alarm function in alarm . Clicking on the icon, it will be displayed the detailed page of the linked Zone alarm functions.
	Calendar	To schedule events related to this function.

Zone intruder alarm function




46. Zone intruder alarm function widget

Icon	Meaning	Description
	Deactivated with no sensor active	These icons show the current status of the function. Clicking the icon, the toggle action is performed: if it is in Alarm , it will be deactivated with sensor active (it is reset for the deactivated time value).
	Deactivated with sensor active	
	Armed with no sensor active	
	In Alarm	
00:00:00	Disabling timeout	
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).

*Note: The icons colour can be changed (see **Settings menu**).*

Hour counter function

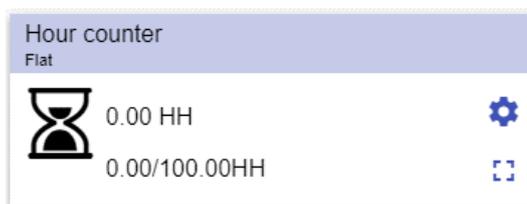

47. Hour counter function widget

Icon	Meaning	Description
	Hour counter running	These icons show the current status of the function. Note: The icons colour can be changed (see Settings menu).
	Working time has been reached	
0.00 HH 0.00/100.00HH	Working time Threshold reached	These fields show: <ul style="list-style-type: none"> The worked hours Threshold of worked hours reached (value set from the settings menu).
	Expand / reduce the drawer*	To open the reset (0 or another value) of the hour counter.
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).

***Note:** this function is available only for the “admin” user.

Siren alarm function



48. Siren alarm function widget

Icon	Meaning	Description
	Function is armed with no sensor active	These icons show the current status of the function. <i>Note: The icons colour can be changed (see Settings menu).</i>
	Function is in Alarm	
00:00:00	Counting timer	This field shows period during which the function is active (output of siren).
	Settings	The settings list depends on the configuration made by means of the configuration software (see UWP 3.0 Tool manual).

Things to know

This section includes the following topics:

What is an alarm

Types of alarm functions

What is an alarm

The alarm warns about the change/variation of a status, graphically represented by:

- the icon  that appears in the navigation bar;
- the widget colour;
- the widgets contained in the alarms dashboard.

There are two categories of alarms:

Category	Configuration	Types
Alarm function	From software	<ol style="list-style-type: none"> 1. Water 2. Smoke 3. Intruder 4. Hour counter 5. Siren. <p><i>Further information: see Types of alarm functions</i></p>
Monitoring alarm	By the user	<i>Further information: see Type of Functions</i>

Types of alarm functions

This topic includes the following options:

Water alarm function

Smoke alarm function

Main and zone intruder alarm function

Hour counter function

Siren alarm function

Water alarm function

From the **UWP 3.0 Tool**, you can configure a basic **Water alarm function** in order to monitor water flood on the floor.

From the Web App, you can monitor the function by adding the relevant widget.

Smoke alarm function

From the **UWP 3.0 Tool**, you can configure a basic **Smoke alarm function** in order to be warned about smoke in the house.

From the Web App, you can monitor the function by adding the relevant widget.

Main and zone intruder alarm function

The intruder alarm function is used to protect the house against burglars and undesired intruders. To create an **Intruder alarm function** you have to create at least one **Zone alarm function**. Each zone function might correspond to a part of the house that has to be monitored or just to a single sensor. Then, you have to create a **Main alarm function**, used to manage all the zone functions.

This functions is used for arming/disarming and collecting all the zone status.

From the Web App, you can monitor the function by adding the relevant widget.

Hour counter function

The purpose of the **Hour counter function** is to count the hours a function output has been ON, since the last reset.

It is typically used in the **Lighting control** for preventive replacement of fluorescent light tubes before they burning out and for keeping track of HVAC (Heating – Ventilation – Air conditioner) pump running hours (for early replacement and for planning maintenance).

From the Web App, you can monitor the function by adding the relevant widget.

Siren alarm function

The **Siren alarm function** allows you to manage an output when an alarm is detected. It allows you to have the maximum flexibility for the activation of the output and to use a single output signal as a common output for more alarms.

From the Web App, you can monitor the function by adding the relevant widget.

How to

This section includes the following topics:

Manage the alarms

Manage the alarms

1. Access the **Alarms dashboard** ( > **Alarms**).
2. Click  to access the **functions list box**.
3. Click **+** to enter the available signals list.
4. Select the monitoring alarm(s).
- 5. Click **Apply**.**
6. To remove an Alarm, click the relevant widget and click .
7. Click  to **save** the configuration.
8. Verify the presence of the **Active alarms counter**.

Report

This chapter includes the following sections:

How to access the report page

User interface

Things to know

How to (for admin users only)

How to access the report page

1. Click ☰ to access the **main menu**.
2. Select **Reports** >

User interface

This section includes the following topics:

Main page


Accounts tab

Schedules tab

Templates tab

History tab

Main page

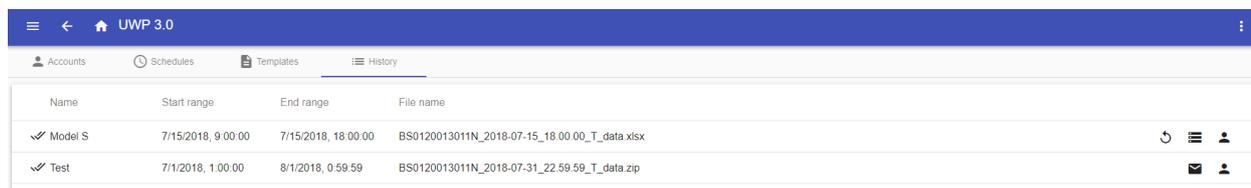


Name	Start range	End range	File name	
✓ Model S	7/15/2018, 9:00:00	7/15/2018, 18:00:00	BS0120013011N_2018-07-15_18:00:00_T_data.xlsx	🔄 ☰ 👤
✓ Test	7/1/2018, 1:00:00	8/1/2018, 0:59:59	BS0120013011N_2018-07-31_22:59:59_T_data.zip	✉ 👤

49. Reports main page

Tab	Description
Accounts	You can manage the FTP/SMTP accounts to which the Report has to be sent, also through scheduling.
Schedules	The reports can be generated automatically through scheduling (see <i>Schedule a report</i>).
Templates	You can create new Reports manually (see <i>Create a template</i>).
History	You can check the list of <i>Reports</i> , which have been already generated (see <i>History tab</i>).


Accounts tab

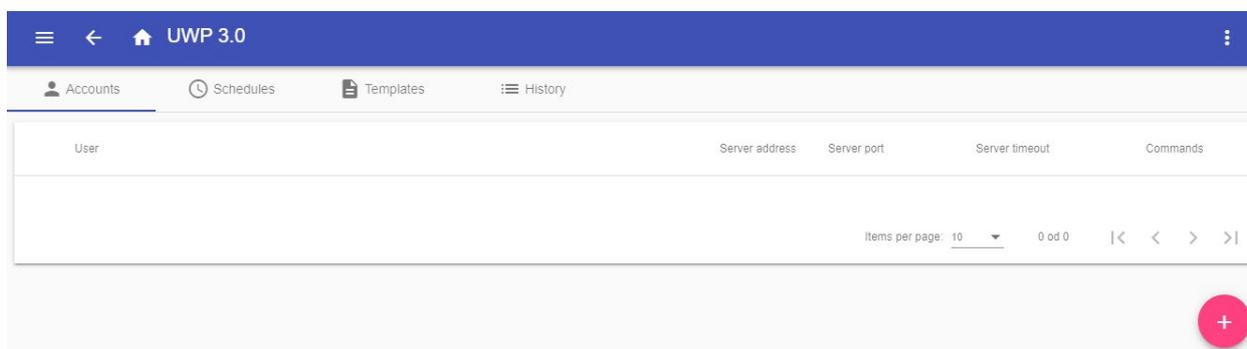

50. Accounts tab (viewing area)

Element	Description
User	Recipient's email
Server address	SMTP address
Server port	SMTP port
Server timeout	Timeout (s)
Commands	<ul style="list-style-type: none">  To create a new template / modify an existing one.  To send request.  To delete the item.
	To select the items per page.
	To navigate the pages.
	To create a new account (see Create an FTP/FTPS and Create an SMTP account).

Schedules tab

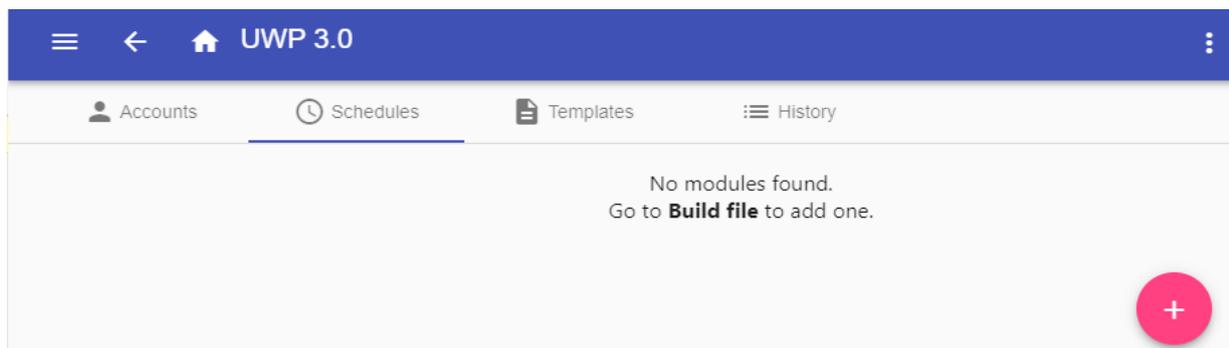


51. Schedules tab (viewing area)

Icon	Description
	To enter the <i>editing mode</i> .

Templates tab

In the **Templates** tab, you can view the reports that have been already generated and create new reports.

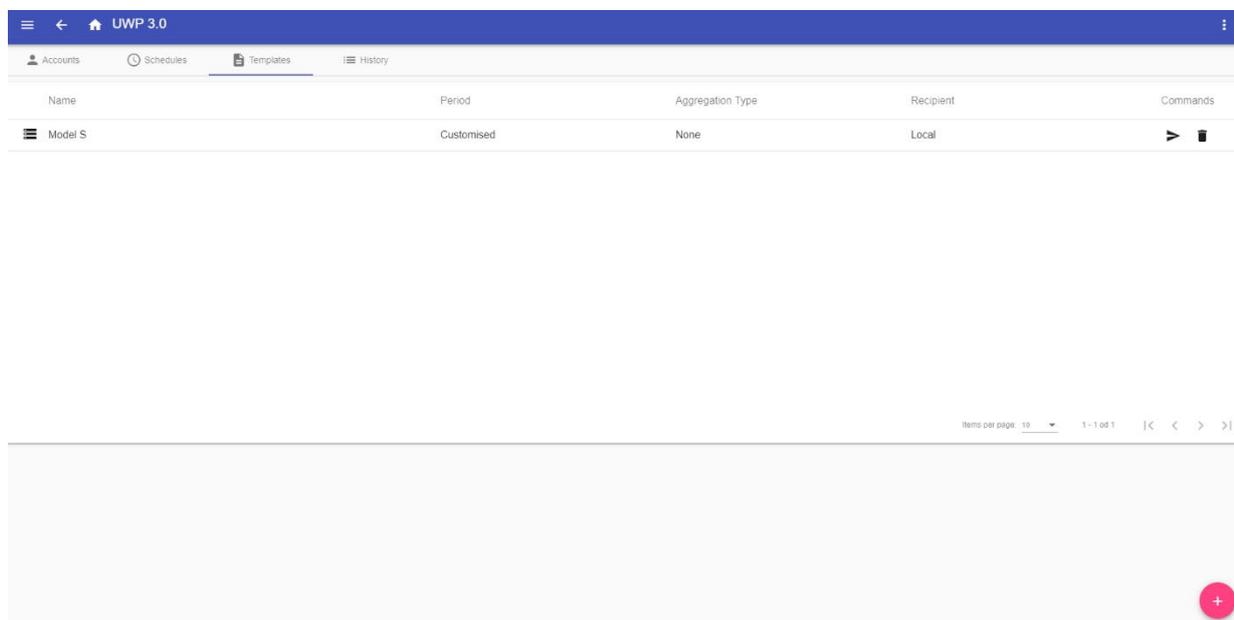


52. Templates tab (viewing area)

Icon	Description
	To create a new template / modify an existing one.
	To send request.
	To delete template.
	To add a report (see Create a template).

History tab

The **History** tab allows you to view the list of reports that have been already generated.

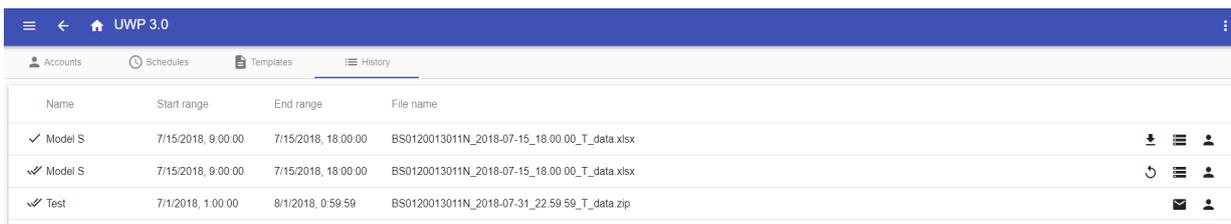

Name	Start range	End range	File name
✓ Model S	7/15/2018, 9:00:00	7/15/2018, 18:00:00	BS0120013011N_2018-07-15_18:00:00_T_data.xlsx
✓ Model S	7/15/2018, 9:00:00	7/15/2018, 18:00:00	BS0120013011N_2018-07-15_18:00:00_T_data.xlsx
✓ Test	7/1/2018, 1:00:00	8/1/2018, 0:59:59	BS0120013011N_2018-07-31_22:59:59_T_data.zip

53. History tab (default page)

Icon	Function
	To download the selected Report.
	To re-generate the selected Report.
	To show/hide the details for the selected Report.
	To show/hide the details for the selected Report.
	To show/hide the details for the selected Report.

Things to know

This section includes the following topics:

What is a report

What is a report

A report is a file containing a log of data or events related to a determined period of time.

It is based on a model defined by the user and it can be downloaded manually or sent automatically to an FTP/FTPS/SFTP server or to an email address through SMTP.

How to (for admin users only)

This section includes the following topics:

Create an FTP/FTPS account

Create an SMTP account

Create an SFTP account

Schedule a report

Create a template

Re-generate a report

Create an FTP/FTPS account

1. Access the **Report** page (☰ > **Reports**).
2. From the **Accounts** tab, click ⊕.
3. From the **Account type** list, select the **FTP** or the **FTPS** account.
4. Fill in the fields described below:

Element	Description
FTP server*	Fill in with the address of the FTP server to which the system has to send the file.
FTP port	Usually, the FTP service uses port 21. However, the port that the server listens to for FTP connections can be any port (if it is not already reserved for another service). The server administrator also configures it.
Timeout	Specify the period, expressed in seconds, within which the FTP account has to try to connect to the FTP server before timing out.
FTP user and password	Fill in with valid credentials to access the remote FTP directory.
FTP remote directory	Fill in with the directory of the FTP server where the reports have to be stored.
User / Password	Data pull info:

Note: The field marked with (*) is mandatory.

5. Click **Save**.

Create an SMTP account

1. Access the **Report** page (☰ > **Reports**).
2. From the **Accounts** tab, click ⊕.
3. From the **Account type** list, select the **SMTP** account.

Element	Description
SMTP server*	Fill in this field with the address of the server used for sending the email.

SMTP port	Usually the mail service uses port 25. However, some providers have changed it to another one in order to limit SPAM (e.g., the GMAIL account uses port 587). <i>Note: Check on the provider requirements to configure an SMTP account.</i>
Timeout (s)	Specify the period, expressed in seconds, within which the SMTP account has to try to connect to the SMTP server before timing out.
SMTP user	Fill in with the email address used for sending the email.
SMTP password	Fill in with the password for the email account.
Recipients*	Fill in with the email address of the receiver(s).
Sender name	Fill in by typing the name used for the sender (e.g. <i>Web-app</i>).
Sender email	Fill in with the address the email is sent to.
Email subject	Fill in with the name used as the subject for outgoing emails.
Email text	Type a text that informs the receiver about the content of the Report file(s).
User / Password	Data pull info

4. Fill in the fields described below:

Note: The fields marked with (*) are mandatory.

5. Click **Save**.

Create an SFTP account

1. Access the **Report** page ( > **Reports**).
2. From the **Accounts** tab, click .
3. From the **Account type** list, select the **SFTP** account.
4. From the **Authentication Method** list, choose between:

Option	Description
User/Password	Fill in the fields.
User/Public key	 : Authentication key request.  : Save . An encrypted file will be downloaded.  : Delete .

5. Fill in the fields described below:

Element	Description
FTP server*	Fill in with the address of the FTP server to which the system has to send the file.
FTP port	Usually, the FTP service uses port 22. However, the port that the server listens to for FTP connections can be any port (if it is not already reserved for another service). The server administrator also configures it.
Timeout	Specify the period, expressed in seconds, within which the FTP account has to try to connect to the FTP server before timing out.
FTP user and password*	Fill in with valid credentials to access the remote FTP directory.
FTP remote directory	Fill in with the directory of the FTP server where the reports have to be stored.
User / Password	Data pull info

Notes:

- This option is not available if you choose the **User/Public key** option;
 - The fields marked with (*) are mandatory.
6. Click **Save**.

Schedule a report

1. Access the **Report** page (☰ > **Reports**).
2. From the **Schedule** tab, click ⊕ to enter the *editing mode*.
3. Fill in the fields:

Element	Description
Name	Report name
Model	<ul style="list-style-type: none"> • Test Module Events • Test Fx Event • Test History
Recipient	Report recipient
Data interval	<ul style="list-style-type: none"> • Punctual • Daily • Weekly • Monthly • Yearly
Aggregation Type	<ul style="list-style-type: none"> • None • Daily
Start date	Start date

54.

4. Click **Save**.

1. Access the **Report** page (see (☰ > Reports)).
2. Access the **Templates** tab from the multifunction bar.
3. Click to open the **configuration report** part and fill the following fields:

Element	Description								
Name	Enter the name of the report that is going to be generated.								
Report type	<p>Select the type of logged file to send:</p> <table border="1"> <thead> <tr> <th>If you choose...</th> <th>Then it will be available...</th> </tr> </thead> <tbody> <tr> <td>History</td> <td> <ul style="list-style-type: none"> • All the formats¹ • Name layout² • No measure type³ </td> </tr> <tr> <td>Events</td> <td> <ul style="list-style-type: none"> • All the formats except for the Zipped • Only the Record layout style • No measure type </td> </tr> <tr> <td>Legacy FTP push</td> <td> <ul style="list-style-type: none"> • Only the CSV format⁴ • AVG, MIN, MAX • All devices instead of All variables⁵ </td> </tr> </tbody> </table>	If you choose...	Then it will be available...	History	<ul style="list-style-type: none"> • All the formats¹ • Name layout² • No measure type³ 	Events	<ul style="list-style-type: none"> • All the formats except for the Zipped • Only the Record layout style • No measure type 	Legacy FTP push	<ul style="list-style-type: none"> • Only the CSV format⁴ • AVG, MIN, MAX • All devices instead of All variables⁵
If you choose...	Then it will be available...								
History	<ul style="list-style-type: none"> • All the formats¹ • Name layout² • No measure type³ 								
Events	<ul style="list-style-type: none"> • All the formats except for the Zipped • Only the Record layout style • No measure type 								
Legacy FTP push	<ul style="list-style-type: none"> • Only the CSV format⁴ • AVG, MIN, MAX • All devices instead of All variables⁵ 								
Layout style	<p>Select the layout style:</p> <ul style="list-style-type: none"> • Record • Table (available only for History) 								
File format	<p>Select the file format to generate and receive:</p> <ul style="list-style-type: none"> • XLSX • CSV⁴ • XML • Zipped¹ (only for History). 								
Name layout ²	Select a layout for the file name								
Saving mode	Single / Archive / Stream / Worksheet								
Decimal separator	Dot / Comma								
Null value	Null / Customised								
Midnight format	23:59 / 24:00 / 00:00								
Select variables ⁵	The variables to be included in the report: if you select All variables , you can select the Measure type ³ .								
Export	The report will be generated without saving the changes.								
Save and export	The report will be generated and saved.								
Save	The report will be only saved.								
Cancel	The changes will be discarded.								

Re-generate a report

1. Access the **Report** page (☰ > **Reports**).
2. From the **History** tab, click ↺ to **restore** the report.
3. Click ⬇️ to **download** the re-generated report.

Search

This chapter includes the following sections:

How to access the search menu

User interface

Search benefits

How to

How to access the search menu

1. Click **☰** to access the **Main menu**.
2. Select **Search** **>**

User interface



55.

56. Search page

Icon	Description
	Search button

Search benefits

You can choose a function by clicking on  and by selecting a function from the drop-down list.

Notice: Leaving this page, the changes will be lost.

How to search a function

1. Access the **Search** page ( > **Search**).
2. Click  to open the available signals.
3. From the *list box*, select the function.
4. Click **Apply** to save the selection.
5. Verify the presence of the selected **functions**.

Useful links

Information	Where to find it
UWP 3.0 Tool – Instruction manual	www.gavazziautomation.com/MANUALS/UWP3.0_TOOL_ENG.pdf
UWP 3.0 – Data sheet	www.gavazziautomation.com/DATASHEET/UWP_3.0_DS_ENG.pdf
API	www.productselection.net/Documents/UK/uwp3.0_API.pdf

Intellectual property

Copyright © 2023, CARLO GAVAZZI Controls SpA

All rights reserved in all countries.

CARLO GAVAZZI Controls SpA reserves the right to apply modifications or make improvements to the relative documentation without the obligation of advance notice.