



Super Titan Owner's Manual


Thank you for purchasing a SnapSafe® Super Titan. The **SnapSafe Kwik-Lock™ Modular Assembly System** offers all the impregnability of a welded safe in an easy-to-assemble modular design. Now, you have the peace-of-mind knowing your valuables are protected from loss due to fire or theft. Best of all, you can easily locate and relocate this protection anywhere, piece-by-piece, to any room, in minutes.

CUSTOMER SERVICE

For all Customer Service questions call toll free:
1-877-214-4470 fax: 1-772-288-6824
Or write: SnapSafe Inc. Customer Service
 3721 Doubleton Drive Stuart, FL 34997
Or Email: info@snapsafe.com

SNAPSAFE® SUPER TITAN FEATURES:

- Kwik-Lock™ system assembles in minutes without tools
- Sledgehammer and pry bar resistant 3/16" solid steel door
- Commercial grade "non breach seal" dead bolt door
- Solid steel body panels
- 2300°F one-hour Fire Shield protection
- Heat activated door fire seals
- Auto door detent
- UL Security Listed SecuRam® digital lock
- Eight 3/4" chrome steel locking bolts
- Spring-loaded relocker
- Powder coated finish
- Lined interior
- Adjustable gun rack and shelf
- Pre-drilled for floor mounting
- Full-year warranty

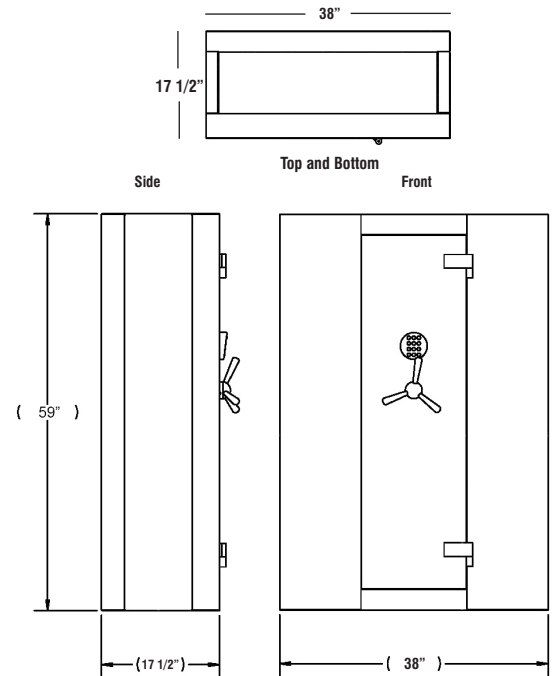

SNAPSAFE® SUPER TITAN SPECIFICATIONS:

MODEL : Super Titan

EXTERIOR : 59"H x 38"W x 17 1/2"D
(add 3" for handle)

INTERIOR : 53 1/2"H x 33"W x 14 1/2"D

DOOR OPENING : 52"H x 14 3/4"W

LOCKING BOLTS : 8

CAPACITY : 24 + Gun

WEIGHT : 425 lb.



ASSEMBLING YOUR SNAPSAFE® CLOSET VAULT

1. Unpack and lay out all parts.
2. Thread DOOR HANDLE SPOKES (Part #11) onto the hub on DOOR (Part #12).
3. **Install a fresh high-quality 9V battery in the Entry Keypad.** (See pgs 8 and 9).
4. **Important – Remove temporary door hinge bolts from door hinges.**
5. Enter the factory combination code and open the DOOR, then lift it off the DOOR FRAME (Part #6) and set aside.
6. Assemble Top, Bottom and Sides (Parts #1 through #4) first. Then Kwik-Lock the entire assembly onto the BACK (Part #5).
7. For additional help watch our “Live Action Assembly Video” on the “Features” page at www.snapsafe.com.

Notes:

1. Each part is marked with an assembly number, orientation and instructions.
2. Each part's orientation e.g. TOP, BOTTOM, FRONT, etc. matches its orientation in the assembled vault. LEFT and RIGHT are as you face the front of the vault.
3. For easier assembly of the Kwik-Locks, remove the FIRESHIELD blankets from the TOP, BOTTOM and SIDEWALLS. Stuff them back into place before interior assembly.
4. Screw on Kwik-Locks loosely at first. Once all Exterior Panels are aligned and seated, tighten the Kwik-Locks. Tightening with a tool is NOT necessary.
5. The INTERIOR SIDE PANELS are designed to fit snugly. Insert them through the door opening bottom-to-top and then slide into final position front-to-back.
6. Insert the INTERIOR BOTTOM PANEL through the door opening between the front and back shelf strips and then drop into position front-to-back.

BOLTING DOWN YOUR VAULT


We recommend bolting your vault to the floor using two ¼” wedge anchor concrete bolts through the predrilled holes in the BOTTOM of the vault.

DOUBLE SAFEGUARDING VALUABLE PAPERS

Your SnapSafe has a fire protection rating of 2300°F for one-hour. However, we recommend that if you are going to be putting important papers in the vault, you first put it in a fire resistant document box, and then put it in the vault.

YOUR COMBINATION CODE

- Your factory preset combination code is 1-2-3-4-5-6.
 - It is recorded in a small envelope wired to the door handle of your vault.
- Store this combination in a location other than your vault.**

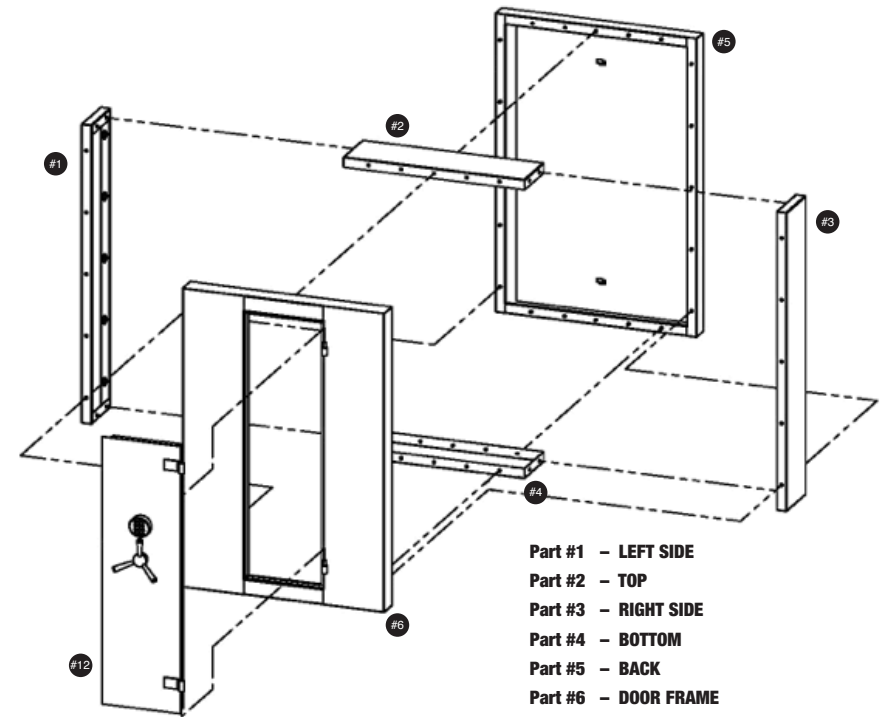

- Part #1 – LEFT SIDE
- Part #2 – TOP
- Part #3 – RIGHT SIDE
- Part #4 – BOTTOM
- Part #5 – BACK
- Part #6 – DOOR FRAME
- Part #7 – TOP INTERIOR PANEL*
- Part #8 – LEFT INTERIOR PANEL*
- Part #9 – RIGHT INTERIOR PANEL*
- Part #10 – BOTTOM INTERIOR PANEL*
- Part #11 – DOOR HANDLE SPOKES
- Part #12 – DOOR
- Part #15 – SHELF HARDWARE *
- Part #18 – UPPER SHELF*
- Part #19 – KWIK-LOCK HARDWARE*
- Part #20 – GUN RACK*

Parts followed by an * are not shown

OPENING AND CLOSING

Opening:

1. Enter the 6-digit combination code.
2. Rotate 3-spoke handle clockwise into the open position and pull door open.
3. The Entry Keypad relocks in 4 seconds after a valid code has been entered.
4. The Entry Keypad will return to “standby” status with a long beep sound if there is no operation in 10 seconds after the system has been activated.
5. If you enter an incorrect combination 4-times in a row, the lock will shut down for 5-minutes.

Closing:

1. Close vault door.
2. Rotate 3-spoke handle counter-clockwise to the closed position until you hear bolts engage.

CHANGING YOUR COMBINATION CODE

Write down and store a new 6-digit code (Do not store in vault).
You cannot set the combination code to six (6) zeros (0).

1. Open vault door and lock it in open position.
2. Enter zero (0) six (6) times. One beep sounds indicating the entry is valid and the system is awaiting a code change.
3. Enter the existing 6-digit code. One beep sounds, indicating the entry is valid.
4. Enter a new 6-digit code. One beep sounds, indicating the entry is valid.
5. Re-enter the new 6-digit code. One beep sounds, indicating that the code in step 4 and 5 are the same and that the code change is successful.
6. If three beeps sound, the code change was unsuccessful, and the existing code is still valid. Repeat steps 2 – 5.
7. Enter and check new code 3-times before closing door.

Note: Each step in the code change process must be completed in 10 seconds or the system reverts back to "standby" status.


INSTALLING AND REPLACING ENTRY KEYPAD BATTERY

Your vault is equipped with an electronic lock made with non-volatile memory, meaning your combination code is retained even if the batteries are no longer powering the lock. If this happens, simply replace the batteries.

Install only a high-quality alkaline battery in the compartment in the back of the Entry Keypad following these steps.

1. Remove Entry Keypad. Slide it up and carefully pull it away from the vault door. (Fig.1)
2. Snap new battery into the connector clip, and slide it into the battery compartment top down so that the wires will not be pinched between the battery and the vault door. (Fig.2)
3. Fold the connection cable inside the Keypad. (Fig.3)
4. Position the keypad over the mounting screws, and slide it down into position.

Note: Make sure the connection cable is not trapped between the Keypad and the door or rubs or tangles on the mounting screws. (Fig.4)

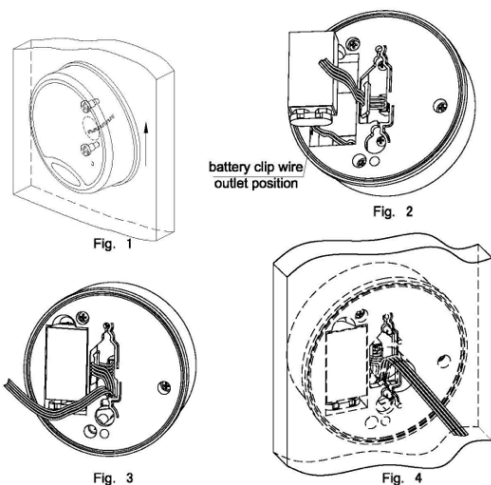

LOW BATTERY ALERT

Your lock has a "Low Battery Alert." If the Entry Keypad beeps repeatedly during an unlocking, the battery is low and needs immediate replacement.

CARE AND MAINTENANCE

With a little care and maintenance your SnapSafe Closet Vault will last a lifetime. Keep the door hinge pins lightly greased so that the door opens smoothly. Vacuum the inside from time to time, and wipe down the outside with a soft cloth and mild detergent. Never use harsh solvents or abrasives on any surfaces, as they may damage the exterior finish or interior materials.

SNAPSAFE® ONE-YEAR LIMITED WARRANTY

SNAPSAFE extends a One-Year Limited Warranty from date of receipt to the original purchaser of the vault that this product will be free from defects in materials and workmanship under normal and proper use from the date of purchase.

The SNAPSAFE One-Year Limited Warranty is on the vault body, door, hinges and lock only and excludes natural environmental issues such as lightning, water or wind damage.

This warranty does not extend to normal wear and tear, surface scratches, or damage due to misuse, negligence or accident, improper or exposure to volatile or corrosive agents, waxes, cleaning agents and moisture.

The SNAPSAFE One-Year Limited Warranty is contingent upon the proper installation, maintenance and use of the product and shall not apply in the case(s) of misuse, burglary attack, accidents, freight damage, or tampering in any way so as to affect the vault's normal performance.

SnapSafe is not liable for the lost contents of any vault for any reason and disavows any other expressed or implied representations related to the conditions or use of this product.

The SnapSafe one-year limited warranty does not cover any defects or costs caused by:

1. Modification, alteration, repair or service of this product by any persons or company other than a SnapSafe Service Technician;
2. Physical abuse to, overload of, or misuse of, the product or operation thereof in a manner inconsistent with the use indicated in the instructions;
3. Any use of the product other than that for which it was intended; or
4. Shipment of the product to SNAPSAFE for service.

This warranty does not cover labor costs outside the continental United States nor does it cover emergency labor.

SNAPSAFE is not liable for any special incidental or consequential damages, including, but not limited to, personal injury, property damage, damage to or loss of equipment, loss of profits or revenue, costs of renting replacements and/or any other additional expenses, even if SNAPSAFE has been informed of the prospect of such damages. Any express warranty not provided herein, and any remedy, which other than the warranty contained herein might arise by inference or operation of law, is hereby excluded and disclaimed including the implied warranties of merchantability and of the fitness for a particular purpose.

LOST COMBINATION CODE

Our Technical Support at **1-877-214-4470** will help you once you have completed a Master Reset Code Request Form. This form can be faxed during regular business hours and must be returned completed along with a copy of a valid State ID. You will then be given a secured code that allows you to reset the vault to its original factory setting.

THIS CODE DOES NOT OPEN THE VAULT. Once this step is complete, you will be given further instructions to open the vault. A fee of \$75 will be charged to the owner's credit card for this service.

CUSTOMER SERVICE

Call toll free:

P: 1-877-214-4470

F: 1-772-288-6824

Email: info@snapsafe.com

Write:

SnapSafe Inc.

Customer Service

3721 Doubleton Drive

Stuart, FL 34997

<p style="text-align: center;">IMPORTANT!</p> <p style="text-align: center;">Keep for Your Records.</p> <p>Do not store this booklet and information in your vault.</p> <p>Date of receipt of safe _____</p> <p>Vault Serial number _____</p> <p><small>(Located on the plate in the lower right corner of the front of the vault)</small></p>



3721 Doubleton Drive Stuart, FL 34997

1-877-214-4470 Fax: 772-288-6824 Email: info@snapsafe.com