



IMB-1232-WV

User Manual

Version 1.4

Updated October, 2023

Copyright©2023 ASRockInd INC. All rights reserved.

Version 1.4

Updated October 2023

Copyright©2023 ASRockInd INC. All rights reserved.

Copyright Notice:

No part of this documentation may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRockInd Inc.

Products and corporate names appearing in this documentation may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer:

Specifications and information contained in this documentation are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRockInd. ASRockInd assumes no responsibility for any errors or omissions that may appear in this documentation.

With respect to the contents of this documentation, ASRockInd does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose.

In no event shall ASRockInd, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRockInd has been advised of the possibility of such damages arising from any defect or error in the documentation or product.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CALIFORNIA, USA ONLY

The Lithium battery adopted on this motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance.

“Perchlorate Material-special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate”

ASRockInd Website: <http://www.asrockind.com>

The terms HDMI® and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



CAUTION:

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Contents

1 Introduction	5
1.1 Package Contents	5
1.2 Specifications.....	6
1.3 Motherboard Layout.....	8
1.4 I/O Panel.....	10
2 Installation	11
2.1 Screw Holes.....	11
2.2 Pre-installation Precautions.....	11
2.3 Installation of Memory Modules (SO-DIMM).....	12
2.4 Expansion Slots	13
2.5 Jumpers Setup.....	14
2.6 Onboard Headers and Connectors.....	16
2.7 Installation of ROM Socket	22
3 UEFI SETUP UTILITY	23
3.1 Introduction	23
3.1.1 UEFI Menu Bar	23
3.1.2 Navigation Keys	24
3.2 Main Screen.....	24
3.3 Advanced Screen.....	25
3.3.1 CPU Configuration	26
3.3.2 Chipset Configuration.....	28
3.3.3 Storage Configuration	30
3.3.4 Super IO Configuration	31
3.3.5 ACPI Configuration.....	32
3.3.6 USB Configuration	33
3.3.7 Trusted Computing.....	34
3.4 Hardware Health Event Monitoring Screen	35
3.5 Security Screen	36
3.6 Boot Screen	37
3.7 Exit Screen	38
4 Software Support	39
4.1 Install Operating System.....	39

Chapter 1: Introduction

Thank you for purchasing ASRockInd **IMB-1232-WV** motherboard, a reliable motherboard produced under ASRockInd's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRockInd's commitment to quality and endurance.

In this manual, chapter 1 and 2 contain introduction of the motherboard and step-by-step guide to the hardware installation. Chapter 3 and 4 contain the configuration guide to BIOS setup and software support.



Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRockInd website without further notice. You may find the latest VGA cards and CPU support lists on ASRockInd website as well. ASRockInd website <http://www.asrockind.com>

If you require technical support related to this motherboard, please visit our website for specific information about the model you are using.
www.asrockind.com/support/index.asp

1.1 Package Contents

ASRockInd **IMB-1232-WV** Motherboard (Mini-ITX (6.7-in x 6.7-in))


1 x I/O Panel Shield

1.2 Specifications

Form Factor	Dimensions	Mini-ITX (6.7-in x 6.7-in x 1.0-in, 17.0 cm x 17.0 cm x 2.5 cm)
Processor System	CPU	Intel® 14th/13th/12th Gen (Raptor Lake-S Refresh/Raptor Lake-S/Alder Lake-S) Core™ Processors, up to 65W
	Chipset	Intel® H610
	Socket	LGA1700
	BIOS	AMI SPI 256 Mbit
Memory	Technology	Dual Channel DDR4 3200 MHz
	Capacity	64GB (32 GB per DIMM)
	Socket	2 x 260-pin SO-DIMM
Graphics	Controller	Intel® UHD Graphics
	DisplayPort	DisplayPort 1.4a, DP++ Max resolution up to 4096x2160@60Hz
	HDMI	HDMI 2.0b Max resolution up to 4096x2160@60Hz
	eDP	eDP1.4b Max resolution up to 4096x2160@60Hz
	LVDS	Dual channel 24 bit up to 1920x1200@60Hz
	MultiDisplay	Triple Display
Expansion Slot	PCIe	1 x PCIe x16 (Gen4)
	M.2	1 x M.2 (Key E, 2230) with PCIe x1, USB 2.0 and CNVi for Wireless 1 x M.2 (Key B, 3042/3052) with PCIe x1/USB3.2 Gen1/USB 2.0 and SIM for 4G/5G
	SIM Socket	1 x Socket connected to M.2 Key B
Audio	Interface	Realtek ALC897, High Definition Audio. Line-out, Mic-in
Ethernet	Controller/Speed	LAN1: Intel® I225LM/I225V with 10/100/1000/2500 Mbps LAN2: Intel® I225LM/I225V with 10/100/1000/2500 Mbps
	Connector	2 x RJ-45

Rear I/O	Ethernet	2 x 2.5 Gigabit LAN
	USB	2 x USB 3.2 (Gen2) 2 x USB 2.0
	HDMI	1 x HDMI 2.0b
	DisplayPort	2 x DP 1.4a++
	Audio	2 (Mic-in, Line-out)
Internal Connector	USB	1 x USB 3.2 Gen1 (1 x USB 3.2 header) 3 x USB 2.0 (1 x 2.54 pitch header)
	COM	COM1, COM2 (RS-232/422/485) COM3, COM4 (RS-232)
	GPIO	4 x GPI, 4 x GPO
	TPM	TPM 2.0 onboard IC
	LVDS	1
	eDP	1
	SATA PWR Output	1
	Speaker Header	1
Storage	M.2	1 x M.2 (Key M, 2242/2260/2280) with PCIe Gen3 x4 for SSD
	SATA	2 x SATA3 (6Gb/s)
Watchdog Timer	Output	From Super I/O to drag RESETCON#
	Interval	256 Segments, 0, 1, 2, ...255sec
Power Requirements	Input PWR	12~28V DC-In with 4-pin wafer PWR cable or DC Jack(Screw type)
	Power On	AT/ATX Supported - AT: Directly PWR on as power input ready - ATX: Press button to PWR on after power input ready
Environment	Operating Temp	0°C ~ 70°C
	Storage Temp	-40°C ~ 85°C
	Operating Humidity	5% ~ 90%
	Storage Humidity	5% ~ 90%

1.3 Motherboard Layout

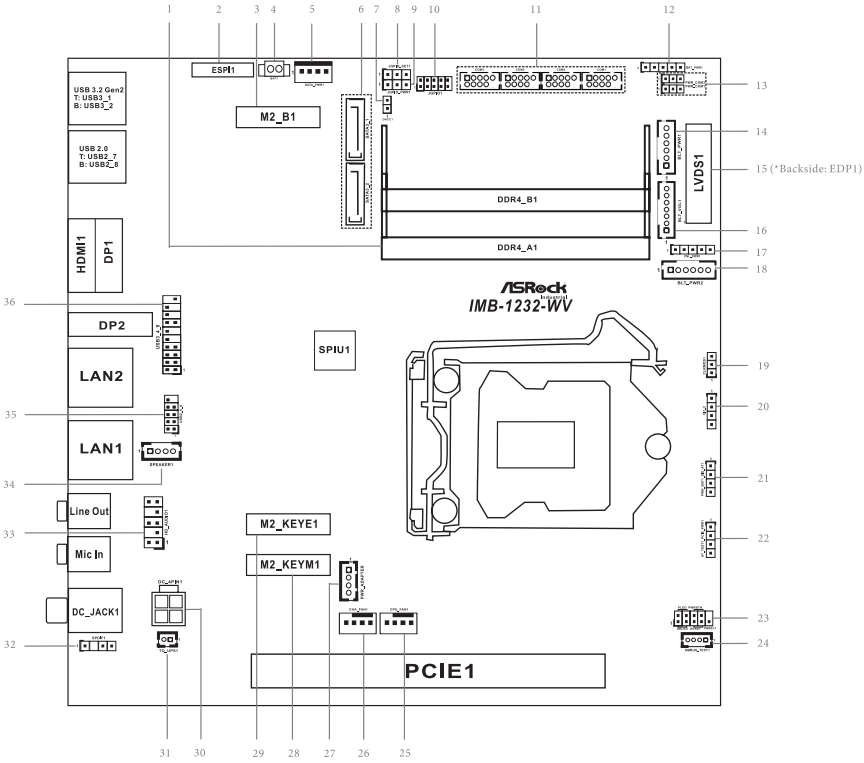


-
- 1 : DDR4 SO-DIMM Sockets
 - 2 : ESPI Header (ESPI1)
 - 3 : M.2 Key-B Socket (M2_B1)
 - 4 : Battery Connector
 - 5 : SATA Power Output Connector
 - 6 : SATA3 Connectors (SATA3_1, SATA3_2)
 - 7 : DACC1
 - 8 : Digital Input / Output Default Value Setting (JGPIO_SET1)
 - 9 : Digital Input / Output Power Select (JGPIO_PWR1)
 - 10 : Digital Input/Output Pin Header (JGPIO1)
 - 11 : COM Port Headers (COM1, 2, 3, 4)
 - 12 : Backlight Power Select (LCD_BLT_VCC) (BKT_PWR1)
 - 13 : COM Port PWR Setting Jumpers
 - PWR_COM3 (For COM Port3)
 - PWR_COM1 (For COM Port1)
 - 14 : Inverter Power Control Wafer (BLT_PWR1)
 - 15 : LVDS Panel Connector*
 - * eDP Connector (on the Backside of PCB)
 - 16 : Backlight Volume Control (BLT_VOL1)
 - 17 : Panel Power Select (LCD_VCC) (PNL_PWR1)
 - 18 : Inverter Power Control Wafer (BLT_PWR2)
 - 19 : Clear CMOS Header (CLRMOS1)
 - 20 : Chassis Intrusion Header (CI1_2)
 - 21 : PWR_BAT1_SIO_AT1
 - 22 : AT_TEST1_PCIE_PWR1
 - 23 : System Panel Header
 - 24 : SMBUS_TEST1
 - 25 : CPU FAN Connector (+12V)
 - 26 : Chassis FAN Connector (+12V)
 - 27 : Power Adapter
 - 28 : M.2 Key-M Socket (M2_KEYM1)
 - 29 : M.2 Key-E Socket (M2_KEYE1)
 - 30 : 4-pin ATX PWR Connector
 - 31 : 2-pin UPS Module Power Input Connector
 - 32 : SPDIF Header
 - 33 : Front Panel Audio Header
 - 34 : 3W Audio AMP Output Wafer
 - 35 : USB2.0 Header (USB2_5_6)
 - 36 : USB3.2 Gen1 Header (USB3_4_9)

Back Side :

SIM Card Socket (SIM1)

eDP Connector (EDP1, refer to No. 15)

1.4 I/O Panel

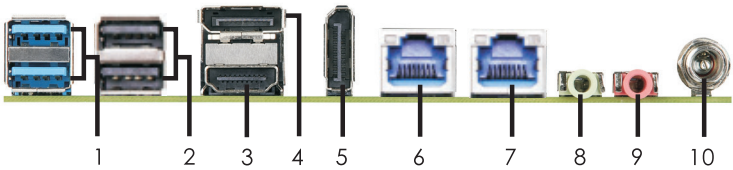

- | | | | |
|---|-------------------------------|----|------------------------|
| 1 | USB 3.2 Gen2 Ports (USB3_1_2) | 6 | LAN RJ-45 Port (LAN2)* |
| 2 | USB 2.0 Ports (USB2_7_8) | 7 | LAN RJ-45 Port (LAN1)* |
| 3 | HDMI Port (HDMI1) | 8 | Line out (Lime) |
| 4 | DisplayPort (DP1) | 9 | Microphone (Pink) |
| 5 | DisplayPort (DP2) | 10 | DC Jack (DC_JACK1) |

* There are two LED next to the LAN port. Please refer to the table below for the LAN port LED indications.

LAN Port LED Indications

Activity/Link LED


Status	Description
Off	No Link
Blinking	Data Activity
On	Link

SPEED LED

Status	Description
Off	10Mbps connection
Orange	100Mbps/1Gbps connection
Green	2.5Gbps connection

ACT/LINK
LED

SPEED
LED



LAN Port

Chapter 2: Installation

This is a Mini-ITX form factor (6.7" x 6.7") motherboard. Before you install the motherboard, study the configuration of your chassis to ensure that the motherboard fits into it.



Make sure to unplug the power cord before installing or removing the motherboard. Failure to do so may cause physical injuries to you and damages to motherboard components.

2.1 Screw Holes

Place screws into the holes to secure the motherboard to the chassis.



Do not over-tighten the screws! Doing so may damage the motherboard.

2.2 Pre-installation Precautions

Take note of the following precautions before you install motherboard components or change any motherboard settings.

1. Unplug the power cord from the wall socket before touching any component.
2. To avoid damaging the motherboard components due to static electricity, NEVER place your motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before you handle components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever you uninstall any component, place it on a grounded antistatic pad or in the bag that comes with the component.




Before you install or remove any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.

2.3 Installation of Memory Modules (SO-DIMM)

This motherboard provides two 260-pin DDR4 (Double Data Rate 4) SO-DIMM slots.

- Step 1. Align a SO-DIMM on the slot such that the notch on the SO-DIMM matches the break on the slot.

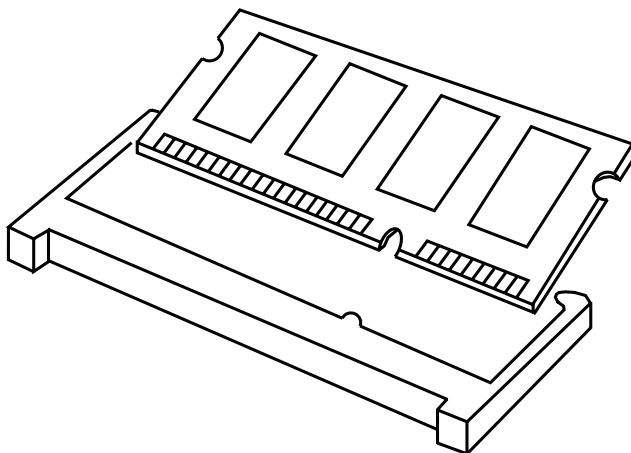

1. The SO-DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the SO-DIMM if you force the SO-DIMM into the slot at incorrect orientation.
2. Please do not intermix different voltage SO-DIMMs on this motherboard.

- Step 2. Firmly insert the SO-DIMM into the slot until the retaining clips at both ends fully snap back in place and the SO-DIMM is properly seated.

2.4 Expansion Slots

There is 1 PCI Express slot, 4 M.2 sockets and 1 SIM socket on this motherboard.

PCIE slot: PCIE1 (PCIE 4.0 x16 slot) is used for PCI Express x16 lane width cards.

M.2 sockets:

1 x M.2 (Key E, 2230) with PCIe x1, USB 2.0 and CNVi for Wireless.

1 x M.2 (Key B, 3042/3052) with PCIe x1/USB3.2 Gen1/USB 2.0 and SIM for 4G/5G.

1 x M.2 (Key M, 2242/2260/2280) with PCIe Gen3 x4 for SSD.

SIM socket:

1 x SIM socket connected to M.2 key B.

M.2 Key-E Socket (M2_KEYE1): M.2 Key-M Socket (M2_KEYM1):

Pin	Signal	Signal	Pin
1	GND	+3.3V	2
3	USB_D+	+3.3V	4
5	USB_D-	NA	6
7	GND	NA	8
9	CNV_WD_RST	CNV_WD_RESET	10
11	CNV_WD_RST	NA	12
13	GND	MODEM_CLKREQ	14
15	CNV_WD_RST	NA	16
17	CNV_WD_RST	GND	18
19	GND	NA	20
21	CNV_WD_RST	CNV_WD_RST	22
23	CNV_WD_RST	NA	24
25	GND	CNV_WD_RST	26
27	PE1A	CNV_WD_RST	28
29	GND	CNV_WD_RST	30
31	GND	NA	32
33	PE1A	NA	34
35	PE1A	NA	36
37	PE1A	NA	38
39	GND	NA	40
41	PE1A	NA	42
43	GND	NA	44
45	PE1A	NA	46
47	PE1A	NA	48
49	PE1A	NA	50
51	GND	WAKEUP	52
53	CLAREQW	PERSTW	54
55	WAKEUP	W_DISABLEW	56
57	GND	W_DISABLEW	58
59	CNV_WD_RST	W_DISABLEW	60
61	CNV_WD_RST	W_DISABLEW	62
63	GND	W_DISABLEW	64
65	GND	W_DISABLEW	66
67	CNV_WD_RST	W_DISABLEW	68
69	GND	W_DISABLEW	70
71	CNV_WD_RST	W_DISABLEW	72
73	CNV_WD_RST	W_DISABLEW	74
75	GND	W_DISABLEW	76


Pin	Signal	Signal	Pin
1	GND	+3.3V	2
3	GND	+3.3V	4
5	PE1A	NA	6
7	PE1A	NA	8
9	GND	WAKEUP	10
11	PE1A	+3.3V	12
13	PE1A	+3.3V	14
15	GND	+3.3V	16
17	PE1A	+3.3V	18
19	PE1A	NA	20
21	GND	NA	22
23	PE1A	NA	24
25	PE1A	NA	26
27	GND	NA	28
29	PE1A	NA	30
31	PE1A	NA	32
33	GND	NA	34
35	PE1A	NA	36
37	PE1A	WAKEUP	38
39	GND	WAKEUP	40
41	WAKEUP	WAKEUP	42
43	WAKEUP	NA	44
45	GND	NA	46
47	WAKEUP	NA	48
49	WAKEUP	PERSTW	50
51	GND	CLAREQW	52
53	PE1A	WAKEUP	54
55	PE1A	WAKEUP	56
57	GND	NA	58
59	NA	NA	60
61	NA	NA	62
63	NA	NA	64
65	NA	NA	66
67	NA	NA	68
69	NA	NA	70
71	GND	+3.3V	72
73	GND	+3.3V	74
75	GND	+3.3V	76



M.2 Key-B Socket (M2_B1):

Pin	Signal	Signal	Pin
1	NA	+3.3V	2
3	GND	+3.3V	4
5	GND	Full_Card_Power-off	6
7	USB_D+	W_DISABLEW	8
9	USB_D-	W_DISABLEW	10
11	GND	W_DISABLEW	12
13	GND	NA	14
15	NA	NA	16
17	NA	NA	18
19	NA	NA	20
21	USB3_RX+	UIM_RESET	22
23	GND	UIM_CLK	24
25	USB3_TX+	UIM_DATA	26
27	GND	UIM_DATA	28
29	USB3_TX+	UIM_PWR	30
31	GND	NA	32
33	PE1A	NA	34
35	PE1A	NA	36
37	PE1A	NA	38
39	GND	NA	40
41	PE1A	NA	42
43	PE1A	NA	44
45	GND	NA	46
47	PE1A	NA	48
49	PE1A	NA	50
51	GND	PERSTW	52
53	PE1A	CLAREQW	54
55	PE1A	WAKEUP	56
57	GND	NA	58
59	NA	NA	60
61	NA	NA	62
63	NA	NA	64
65	NA	NA	66
67	NA	NA	68
69	NA	NA	70
71	GND	+3.3V	72
73	GND	+3.3V	74
75	NA	+3.3V	76


2.5 Jumpers Setup

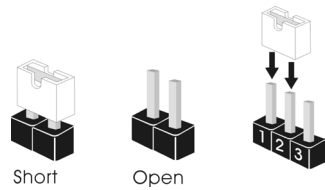The illustration shows how jumpers are setup. When the jumper cap is placed on pins, the jumper is “Short”. If no jumper cap is placed on pins, the jumper is “Open”. The illustration shows a 3-pin jumper whose pin1 and pin2 are “Short” when jumper cap is placed on these 2 pins.




Jumper	Setting	Description
Clear CMOS Jumpers (3-pin CLRMOS1) (see p.8, No. 19)	 1_2 Default	CLRMOS1 : 1-2 : Normal 2-3 : Clear CMOS
	 2_3 Clear CMOS	

Note: CLRMOS1 allows you to clear the data in CMOS. To clear and reset the system parameters to default setup, please turn off the computer and unplug the power cord from the power supply. After waiting for 15 seconds, use a jumper cap to short pin2 and pin3 on CLRMOS1 for 5 seconds. However, please do not clear the CMOS right after you update the BIOS. If you need to clear the CMOS when you just finish updating the BIOS, you must boot up the system first, and then shut it down before you do the clear-CMOS action. Please be noted that the date, time and user default profile will be cleared only if the CMOS battery is removed.

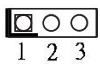COM Port PWR Setting Jumpers (3-pin PWR_COM1 (For COM Port1)) (3-pin PWR_COM3 (For COM Port3)) (see p.8, No. 13)	 1 2 3	1-2 : +5V 2-3 : +12V
---	---	-------------------------

DACC1 (2-pin DACC1) (see p.8, No. 7)		Open : no ACC Short : ACC
--	---	------------------------------

Note: Auto clear CMOS when system boot improperly.

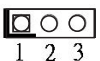Digital Input / Output Default Value Setting (3-pin JGPIO_SET1) (see p.8, No. 8)	 1 2 3	1-2 : Pull-High 2-3 : Pull-Low
--	--	-----------------------------------

Digital Input / Output Power Select

(3-pin JGPIO_PWR1)

(see p.8, No. 9)



1-2 : +12V

2-3 : +5V

2.6 Onboard Headers and Connectors




Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage of the motherboard!

CPU Fan Connector

(4-pin CPU_FAN1)

(see p.8 No. 25)



Please connect the CPU fan cable to the connector and match the black wire to the ground pin.




Though this motherboard provides 4-Pin CPU fan (Quiet Fan) support, the 3-Pin CPU fan still can work successfully even without the fan speed control function. If you plan to connect the 3-Pin CPU fan to the CPU fan connector on this motherboard, please connect it to Pin 1-3.

Chassis Fan Connector

(4-pin CHA_FAN1)

(see p.8 No. 26)

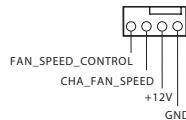

Please connect the chassis fan cable to the connector and match the black wire to the ground pin.




Though this motherboard provides 4-Pin chassis fan (Quiet Fan) support, the 3-Pin chassis fan still can work successfully even with the fan speed control function. If you plan to connect the 3-Pin chassis fan to the chassis fan connector on this motherboard, please connect it to Pin 1-3.

System Panel Header

(9-pin PANEL1)

(see p.8, No. 23)

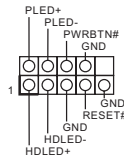

This header accommodates several system front panel functions.



Connect the power switch, reset switch and system status indicator on the chassis to this header according to the pin assignments below. Note the positive and negative pins before connecting the cables.

PWRBTN (Power Switch):

Connect to the power switch on the chassis front panel. You may configure the way to turn off your system using the power switch.

RESET (Reset Switch):

Connect to the reset switch on the chassis front panel. Press the reset switch to restart the computer if the computer freezes and fails to perform a normal restart.

PLED (System Power LED):

Connect to the power status indicator on the chassis front panel. The LED is on when the system is operating. The LED keeps blinking when the system is in S1/S3 sleep state. The LED is off when the system is in S4 sleep state or powered off (S5).


HDLED (Hard Drive Activity LED):

Connect to the hard drive activity LED on the chassis front panel. The LED is on when the hard drive is reading or writing data.

The front panel design may differ by chassis. A front panel module mainly consists of power switch, reset switch, power LED, hard drive activity LED, speaker and etc. When connecting your chassis front panel module to this header, make sure the wire assignments and the pin assignments are matched correctly.

COM Port Headers

(9-pin COM1, 2, 3, 4: see p.8, No. 11)



PIN	Signal Name	PIN	Signal Name	PIN	Signal Name	PIN	Signal Name	PIN	Signal Name
1	DDCD#	3	TTXD	5	GND	7	RRTS#	9	PWR
2	RRXD	4	DDTR#	6	DDSR#	8	CCTS#		


* This motherboard supports RS232/422/485 on COM1, 2 ports.

Please refer to below table for the pin definition. In addition, COM1, 2 ports (RS232/422/485) can be adjusted in BIOS setup utility > Advanced Screen > Super IO Configuration. You may refer to page 31 for details.

COM1, 2 Port Pin Definition


PIN	RS232	RS422	RS485
1	DCD	TX-	RTX-
2	RXD	TX+	RTX+
3	TXD	RX+	N/A
4	DTR	RX-	N/A
5	GND	GND	GND
6	DSR	N/A	N/A
7	RTS	N/A	N/A
8	CTS	N/A	N/A
9	PWR	PWR	PWR

see p.8, No. 35)

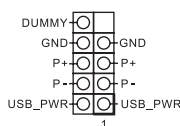

There is one header on this motherboard. This USB 2.0 header can support two ports.

(see p.8, No. 36)

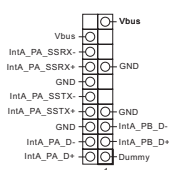


There is one header on this motherboard. This USB 3.2 Gen1 header can support one port USB3.2 Gen1 and one port USB2.0.

(SATA3_1~2: see p.8, No. 6)



These two Serial ATA3 (SATA3) connectors support SATA data cables for internal storage devices. The current SATA3 interface allows up to 6.0 Gb/s data transfer rate.

(see p.8 No. 33)

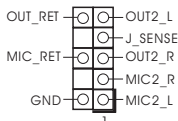


This is an interface for front panel audio cable that allows convenient connection and control of audio devices.



1. High Definition Audio supports Jack Sensing, but the panel wire on the chassis must support HDA to function correctly. Please follow the instruction in our manual and chassis manual to install your system.
2. If you use AC'97 audio panel, please install it to the front panel audio header as below:
 - A. Connect Mic_IN (MIC) to MIC2_L.
 - B. Connect Audio_R (RIN) to OUT2_R and Audio_L (LIN) to OUT2_L.
 - C. Connect Ground (GND) to Ground (GND).
 - D. MIC_RET and OUT_RET are for HD audio panel only. You don't need to connect them for AC'97 audio panel.
 - E. To activate the front mic.

Go to the “FrontMic” Tab in the Realtek Control panel. Adjust “Recording Volume”.

(see p.8 No. 34)




PIN	Signal Name	PIN	Signal Name	PIN	Signal Name	PIN	Signal Name
1	OUTLN	2	OUTLP	3	OUTRP	4	OUTRN

LVDS Panel Connector*

(40-pin LVDS1)

(see p.8 No. 15)



PIN	Signal Name	PIN	Signal Name
39	LCD_BLT_VCC	40	LCD_BLT_VCC
37	CON_LBKLT_CTL	38	LCD_BLT_VCC
35	GND	36	CON_LBKLT_EN
33	LVDS_B_CLK#	34	LVDS_B_CLK
31	LVDS_B_DATA3	32	GND
29	DPLVDD_EN	30	LVDS_B_DATA3#
27	LVDS_B_DATA2#	28	LVDS_B_DATA2
25	LVDS_B_DATA1	26	GND
23	GND	24	LVDS_B_DATA1#
21	LVDS_B_DATA0#	22	LVDS_B_DATA0
19	LVDS_A_CLK	20	GND
17	GND	18	LVDS_A_CLK#
15	LVDS_A_DATA3#	16	LVDS_A_DATA3
13	LVDS_A_DATA2	14	GND
11	GND	12	LVDS_A_DATA2#
9	LVDS_A_DATA1#	10	LVDS_A_DATA1
7	LVDS_A_DATA0	8	PD (Panel Detection)
5	LDDC_DATA	6	LVDS_A_DATA0#
3	+3.3V	4	LDDC_CLK
1	LCD_VCC	2	LCD_VCC

*eDP Connector (on the Backside of PCB)




PIN	Signal Name
40	NA
39	LCD_BLT_VCC
38	LCD_BLT_VCC
37	LCD_BLT_VCC
36	LCD_BLT_VCC
35	SMB_CLK_MAIN
34	SMB_DATA_MAIN
33	eDP_BKLTCTL_R
32	eDP_BKLTEN
31	GND
30	GND
29	GND
28	GND
27	eDP_HPD_CON
26	GND
25	GND
24	GND
23	GND
22	NA
21	LCD_VCC
20	LCD_VCC
19	LCD_VCC
18	LCD_VCC
17	GND
16	eDP_AUX#_CON
15	eDP_AUX_CON
14	GND
13	eDP_TX0_CON
12	eDP_TX#0_CON
11	GND
10	eDP_TX1_CON
9	eDP_TX#1_CON
8	GND
7	eDP_TX2_CON
6	eDP_TX#2_CON
5	GND
4	eDP_TX3_CON
3	eDP_TX#3_CON
2	GND
1	NA

* PD (Panel Detection): Connect this pin to LVDS Panel's Ground pin to detect Panel detection.

SPDIF Header

(3-pin SPDIF1)

(see p.8, No. 32)




SPDIF header, providing SPDIF audio output to HDMI VGA card, allows the system to connect HDMI Digital TV/ projector/LCD devices. Please connect the SPDIF connector of HDMI VGA card to this header.

SATA Power Connector

(SATA_PWR1)

(see p.8 No. 5)




Please connect a SATA power cable to this connector.

ATX Power Connector

(4-pin DC_4PIN1)

(see p.8 No. 30)



Please connect a DC power supply to this connector.

1-2 : GND

3-4 : DC Input

UPS Module Power Input Connector

(2-pin TO_UPS1)

(see p.8 No. 31)




Pin1 : GND

Pin2 : DC Input

Digital Input/Output Pin Header

(10-pin JGPIO1)

(see p.8 No. 10)



PIN	Signal Name	PIN	Signal Name	PIN	Signal Name	PIN	Signal Name	PIN	Signal Name
2	GPP_H23	4	GPP_I10	6	GPP_E5	8	GPP_E6	10	GND
1	SIO_GP71	3	SIO_GP72	5	SIO_GP73	7	SIO_GP74	9	JGPIOPWR_R

Inverter Power Control Wafer

(6-pin BLT_PWR1)

(see p.8 No. 14)



PIN	Signal Name
6	LCD_BLT_VCC
5	LCD_BLT_VCC
4	CON_LBKLT_EN
3	CON_LBKLT_CTL
2	GND
1	GND

Backlight Volume Control

(7-pin BLT_VOL1)

(see p.8 No. 16)



PIN	Signal Name
7	GND
6	GND
5	BLT_DW
4	BLT_UP
3	PWRDN
2	GPIO_VOL_DW
1	GPIO_VOL_UP

Backlight Power Select (LCD_BLT_VCC)

(5-pin BKT_PWR1)

(see p.8 No. 12)



1-2 : LCD_BLT_VCC: +5V


2-3 : LCD_BLT_VCC: +12V

4-5 : LCD_BLT_VCC: DC_IN

SMBUS_TEST1

(4-pin SMBUS_TEST1)

(see p.8 No. 24)



Power Adapter

(4-pin POWER_ADAPTER)

(see p.8 No. 27)



PIN	Signal Name
1	GND
2	5VA_CONTROL
3	5VA
4	GND

AT_TEST1_PCIE_PWR1

(4-pin AT_TEST1_PCIE_PWR1)

(see p.8 No. 22)



PIN	Signal Name
1	AT_TEST1
2	
3	PCIE_PWR1 (For VGA Power Card Only): Pin3: PSON# Pin4: GND
4	

Panel Power Select (LCD_VCC)

(5-pin PNL_PWR1)

(see p.8 No. 17)



1-2 : LCD_VCC: +3V

2-3 : LCD_VCC: +5V

4-5 : LCD_VCC: +12V

Inverter Power Control Wafer

(6-pin BLT_PWR2)

(see p.8 No. 18)



PIN	Signal Name	PIN	Signal Name	PIN	Signal Name	PIN	Signal Name	PIN	Signal Name	PIN	Signal Name
1	GND	2	GND	3	eDP_LBKLT_CTL	4	eDP_LBKLT_EN	5	+12 FUSE	6	+12 FUSE

PWR_BAT1_SIO_AT1

(4-pin PWR_BAT1_SIO_AT1)

(see p.8 No. 21)



PIN	Signal Name
1	PWR_BAT1: Open: Normal Short: Charge Battery
2	SIO_AT1: Open: ATX Mode Short: AT Mode
3	
4	

Chassis Intrusion Header



(4-pin C11_2: see p.8 No. 20)




PIN	Signal Name
1	C11 Signal
2	GND
3	C12 Signal
4	GND

This motherboard supports CASE OPEN detection feature that detects if the chassis cover has been removed. This feature requires a chassis with chassis intrusion detection design.

2.7 Installation of ROM Socket

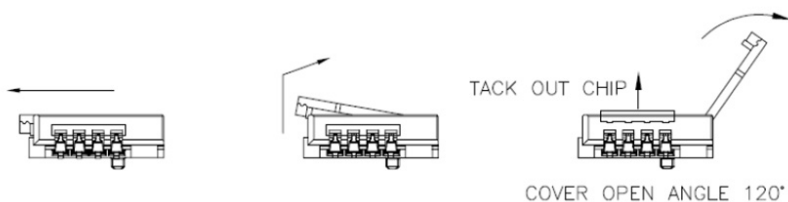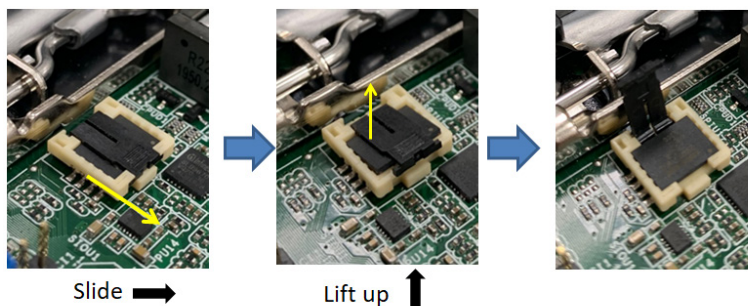

- * Do not apply force to the actuator cover after ic is inserted.
- * Do not apply force to actuator cover when it is opening over 120 degree, Otherwise, the actuator cover may be broken.

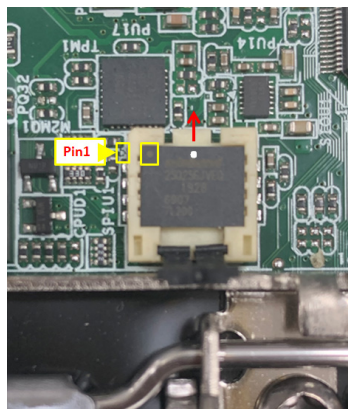

- * The yellow dot (Pin1) on the ROM must be installed at pin1 position of the socket (white arrow area).
- * Make sure the white dot on the ROM is installed outwards of the socket.
- * For further details of how to install ROM, please refer to ASRI website.

Warning: If the installation does not follow as the picture, then it may cause severe damage to chipset & MB.

Chapter 3: UEFI SETUP UTILITY

3.1 Introduction

This section explains how to use the UEFI SETUP UTILITY to configure your system. The UEFI chip on the motherboard stores the UEFI SETUP UTILITY. You may run the UEFI SETUP UTILITY when you start up the computer. Please press <F2> or during the Power-On-Self-Test (POST) to enter the UEFI SETUP UTILITY, otherwise, POST will continue with its test routines.

If you wish to enter the UEFI SETUP UTILITY after POST, restart the system by pressing <Ctl> + <Alt> + <Delete>, or by pressing the reset button on the system chassis. You may also restart by turning the system off and then back on.



Because the UEFI software is constantly being updated, the following UEFI setup screens and descriptions are for reference purpose only, and they may not exactly match what you see on your screen.

3.1.1 UEFI Menu Bar

The top of the screen has a menu bar with the following selections:

Main	To set up the system time/date information
Advanced	To set up the advanced UEFI features
H/W Monitor	To display current hardware status
Security	To set up the security features
Boot	To set up the default system device to locate and load the Operating System
Exit	To exit the current screen or the UEFI SETUP UTILITY

Use <←> key or <→> key to choose among the selections on the menu bar, and then press <Enter> to get into the sub screen. You can also use the mouse to click your required item.


3.1.2 Navigation Keys

Please check the following table for the function description of each navigation key.

Navigation Key(s)	Function Description
← / →	Moves cursor left or right to select Screens
↑ / ↓	Moves cursor up or down to select items
+ / -	To change option for the selected items
<Enter>	To bring up the selected screen
<F1>	To display the General Help Screen
<F7>	Discard changes
<F9>	To load optimal default values for all the settings
<F10>	To save changes and exit the UEFI SETUP UTILITY
<F12>	Print screen
<ESC>	To jump to the Exit Screen or exit the current screen


3.2 Main Screen

When you enter the UEFI SETUP UTILITY, the Main screen will appear and display the system overview.

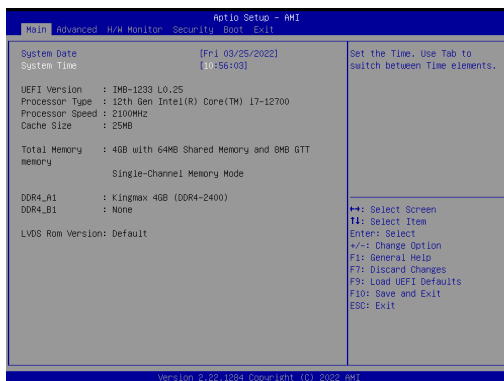

3.3 Advanced Screen

In this section, you may set the configurations for the following items: CPU Configuration, Chipset Configuration, Storage Configuration, Super IO Configuration, ACPI Configuration, USB Configuration and Trusted Computing.

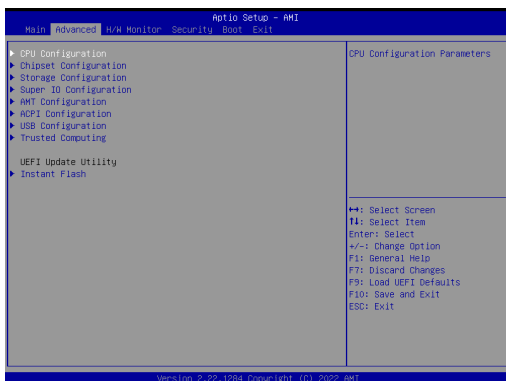


Setting wrong values in this section may cause the system to malfunction.

Instant Flash

Instant Flash is a UEFI flash utility embedded in Flash ROM. This convenient UEFI update tool allows you to update system UEFI without entering operating systems first like MS-DOS or Windows®. Just launch this tool and save the new UEFI file to your USB flash drive, floppy disk or hard drive, then you can update your UEFI only in a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system. If you execute Instant Flash utility, the utility will show the UEFI files and their respective information. Select the proper UEFI file to update your UEFI, and reboot your system after UEFI update process completes.

3.3.1 CPU Configuration

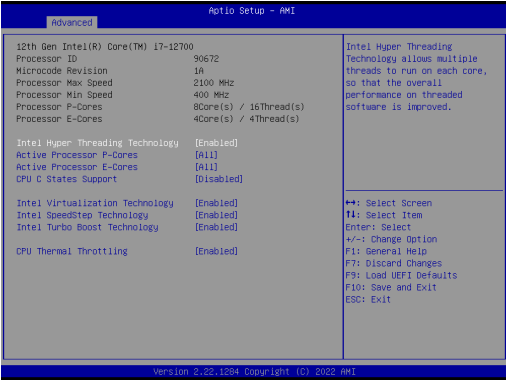

Intel Hyper Threading Technology

Intel Hyper Threading Technology allows multiple threads to run on each core, so that the overall performance on threaded software is improved.

Active Processor P-Cores

Select the number of cores to enable in each processor package.

Active Processor E-Cores

Select the number of E-Cores to enable in each processor package.

CPU C States Support

Enable CPU C States Support for power saving. It is recommended to keep C3, C6 and C7 all enabled for better power saving.

Intel Virtualization Technology

When this option is set to [Enabled], a VMM (Virtual Machine Architecture) can utilize the additional hardware capabilities provided by Vanderpool Technology. This option will be hidden if the installed CPU does not support Intel Virtualization Technology.

Intel SpeedStep Technology

Intel SpeedStep technology is Intel's new power saving technology. Processors can switch between multiple frequencies and voltage points to enable power saving. The default value is [Enabled]. Configuration options: [Enabled] and [Disabled]. If you install Windows® OS and want to enable this function, please set this item to [Enabled]. This item will be hidden if the current CPU does not support Intel SpeedStep technology.



Please note that enabling this function may reduce CPU voltage and lead to system stability or compatibility issues with some power supplies. Please set this item to [Disabled] if above issues occur.


Intel Turbo Boost Technology

Use this item to enable or disable Intel Turbo Boost Mode Technology. Turbo Boost Mode allows processor cores to run faster than marked frequency in specific conditions. The default value is [Enabled].

CPU Thermal Throttling

You may select [Enabled] to enable CPU internal thermal control mechanism to keep the CPU from overheating.

3.3.2 Chipset Configuration

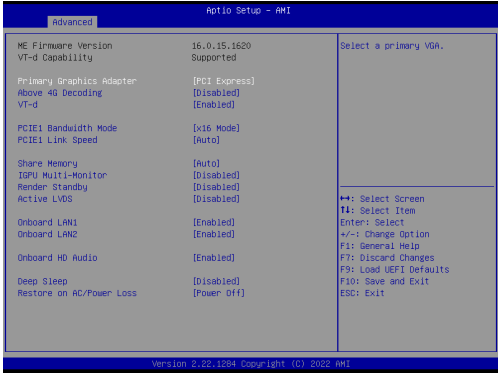

Primary Graphics Adapter

This allows you to select [Onboard] or [PCI Express] as the boot graphic adapter priority. The default value is [PCI Express].

Above 4G Decoding

Enable or disable 64bit capable Devices to be decoded in Above 4G Address Space (only if the system supports 64 bit PCI decoding).

VT-d

Use this to enable or disable Intel® VT-d technology (Intel® Virtualization Technology for Directed I/O). The default value of this feature is [Disabled].

PCIE1 Bandwidth Mode

Select the bandwidth mode for PCIE1.

PCIE1 Link Speed

Select the link speed for PCIE1.

Share Memory

Configure the size of memory that is allocated to the integrated graphics processor when the system boots up.

IGPU Multi-Monitor

Select disable to disable the integrated graphics when an external graphics card is installed. Select enable to keep the integrated graphics enabled at all times.

Render Standby

Power down the render unit when the GPU is idle for lower power consumption.

Active LVDS

Use this to enable or disable the LVDS. The default value is [Disabled]. Set the item to [enable]. Then press <F10> to save the setting and restart the system. Now the default value of Active LVDS is changed to ENABLE

(F9 load default is also set to ENABLE). Change the setting from [Enable] to [Disable], and then press <F10> to save the setting and restart the system. Likewise, the default value of Active LVDS is changed to DISABLE (F9 load default is also set to DISABLE)

Onboard LAN1

This allows you to enable or disable the Onboard LAN1 feature.

Onboard LAN2

This allows you to enable or disable the Onboard LAN2 feature.

Onboard HD Audio

Select [Auto], [Enabled] or [Disabled] for the onboard HD Audio feature. If you select [Auto], the onboard HD Audio will be disabled when PCI Sound Card is plugged.


Deep Sleep

Mobile platforms support Deep S4/S5 in DC only and desktop platforms support Deep S4/S5 in AC only. The default value is [Disabled].

Restore on AC/Power Loss

Select the power state after a power failure. If [Power Off] is selected, the power will remain off when the power recovers. If [Power On] is selected, the system will start to boot up when the power recovers.

3.3.3 Storage Configuration

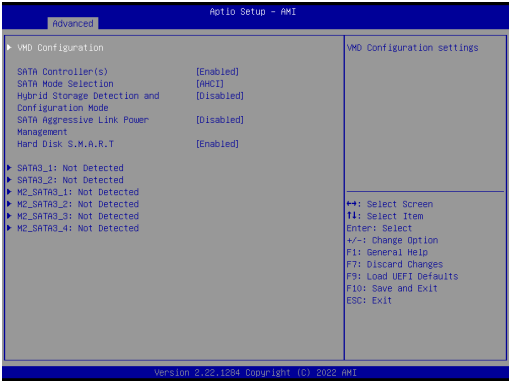

VMD Configuration

This item allows you to enable or disable the Intel VMD support function.

SATA Controller(s)

Use this item to enable or disable the SATA Controller feature.

SATA Mode Selection

Use this to select SATA mode. The default value is [AHCI Mode].



AHCI (Advanced Host Controller Interface) supports NCQ and other new features that will improve SATA disk performance but IDE mode does not have these advantages.

Hybrid Storage Detection and Configuration Mode

Use this item to enable or disable Hybrid Storage Detection and Configuration Mode.


SATA Aggressive Link Power Management

Use this item to configure SATA Aggressive Link Power Management.

Hard Disk S.M.A.R.T.

Use this item to enable or disable the S.M.A.R.T. (Self-Monitoring, Analysis, and Reporting Technology) feature. Configuration options: [Disabled] and [Enabled].

3.3.4 Super IO Configuration

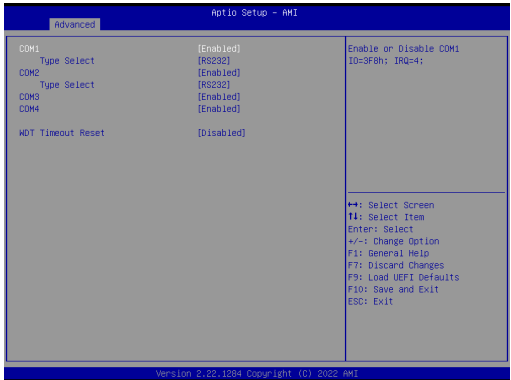

COM1 Configuration

Use this to set parameters of COM1.

Type Select

Use this to select COM1 port type: [RS232], [RS422] or [RS485].

COM2 Configuration

Use this to set parameters of COM2.

Type Select

Use this to select COM2 port type: [RS232], [RS422] or [RS485].

COM3 Configuration

Use this to set parameters of COM3.


COM4 Configuration

Use this to set parameters of COM4.

WDT Timeout Reset

Use this to set the Watch Dog Timer.

3.3.5 ACPI Configuration

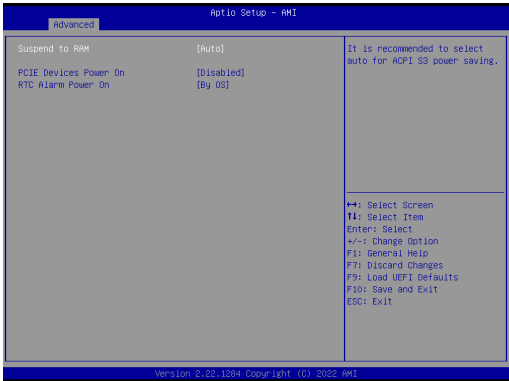

Suspend to RAM

Use this item to select whether to auto-detect or disable the Suspend-to-RAM feature. Select [Auto] will enable this feature if the OS supports it.


PCIE Devices Power On

Use this item to enable or disable PCIE devices to turn on the system from the power-soft-off mode.

RTC Alarm Power On

Use this item to enable or disable RTC (Real Time Clock) to power on the system.

3.3.6 USB Configuration

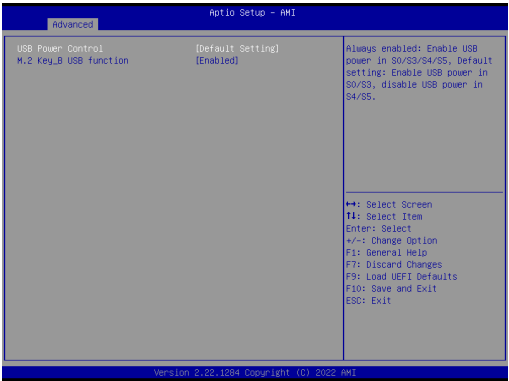


USB Power Control

Use this option to control USB power.

M.2 Key_B USB Configuration

Enable or disable M.2 Key_B USB Configuration.

3.3.7 Trusted Computing

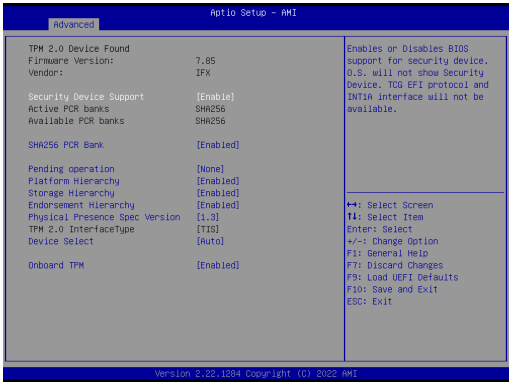


Security Device Support

Enable or disable BIOS support for security device.

3.4 Hardware Health Event Monitoring Screen

In this section, it allows you to monitor the status of the hardware on your system, including the parameters of the CPU temperature, motherboard temperature, CPU fan speed, chassis fan speed, and the critical voltage.

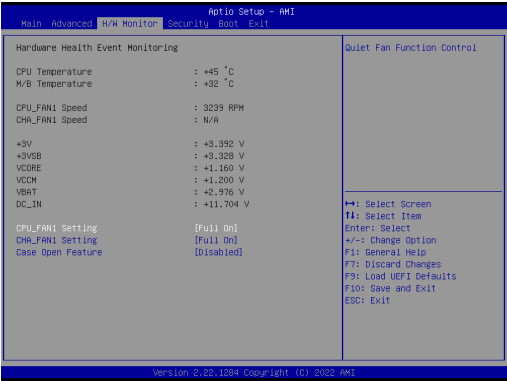

CPU_FAN1 Setting

This allows you to set CPU fan 1's speed. Configuration options: [Full On] and [Automatic Mode]. The default value is [Full On].

CHA_FAN1 Setting

This allows you to set chassis fan 1's speed. Configuration options: [Full On] and [Automatic Mode]. The default value is [Full On].

Case Open Feature


This allows you to enable or disable case open detection feature. The default is value [Disabled].

Clear Status

This option appears only when the case open has been detected. Use this option to keep or clear the record of previous chassis intrusion status.

3.5 Security Screen

In this section, you may set, change or clear the supervisor/user password for the system.

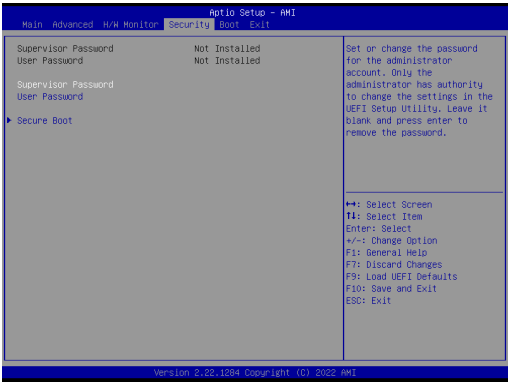

Supervisor Password

Set or change the password for the administrator account. Only the administrator has authority to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

User Password


Set or change the password for the user account. Users are unable to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

Secure Boot

Use this item to enable or disable support for Secure Boot.

3.6 Boot Screen

In this section, it will display the available devices on your system for you to configure the boot settings and the boot priority.

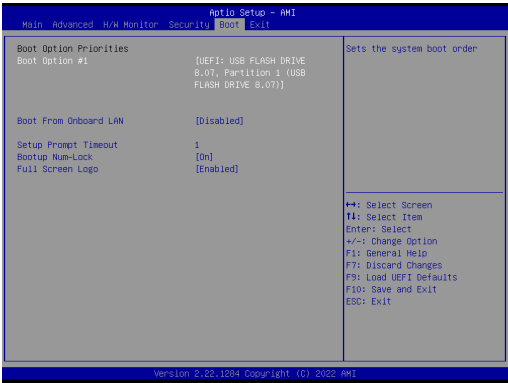

Boot From Onboard LAN

Use this item to enable or disable the Boot From Onboard LAN feature.

Setup Prompt Timeout

This shows the number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.


Startup Num-Lock

If this item is set to [On], it will automatically activate the Numeric Lock function after boot-up.

Full Screen Logo

Use this item to enable or disable OEM Logo. The default value is [Disabled].

3.7 Exit Screen

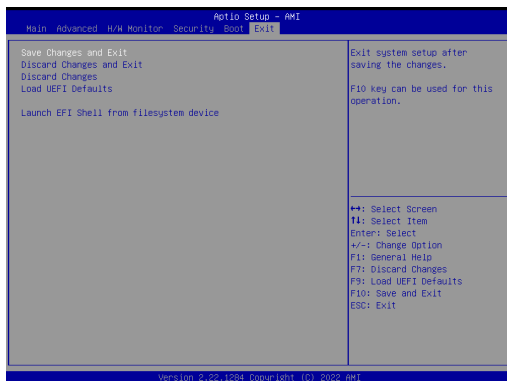

Save Changes and Exit

When you select this option, it will pop-out the following message, “Save configuration changes and exit setup?” Select [OK] to save the changes and exit the UEFI SETUP UTILITY.

Discard Changes and Exit

When you select this option, it will pop-out the following message, “Discard changes and exit setup?” Select [OK] to exit the UEFI SETUP UTILITY without saving any changes.

Discard Changes

When you select this option, it will pop-out the following message, “Discard changes?” Select [OK] to discard all changes.

Load UEFI Defaults

Load UEFI default values for all the setup questions. F9 key can be used for this operation.

Launch EFI Shell from filesystem device

Attempts to Launch EFI Shell application (Shell64.efi) from one of the available filesystem devices.

Chapter 4: Software Support

4.1 Install Operating System

This motherboard supports various Microsoft® Windows® operating systems: 11 64-bit / 10 64-bit. Because motherboard settings and hardware options vary, use the setup procedures in this chapter for general reference only. Refer your OS documentation for more information.