

Godox 神牛

AD200

口袋灯 | Pocket Flash



深圳市神牛摄影器材有限公司
GODOX Photo Equipment Co., Ltd.

地址/Add: 深圳市宝安区福永镇福洲大道西新和村华发工业园A4栋
Building A4, Xinhe Huafa Industrial Zone, Fuzhou RD West, Fuyong
Town, Baoan District, Shenzhen 518103, China
电话/Tel: +86-755-29609320(8062) 传真/Fax: +86-755-25723423
邮箱/E-mail: godox@godox.com http://www.godox.com

705-AD2000-00

Made in China

FC CE RoHS 回收标志

中英文双语 / Chinese English Bilingual

说明手册 / INSTRUCTION MANUAL

前言

在使用本产品之前

请先仔细阅读本手册，以确保您能安全使用。
请保存好本手册以备将来查询参考。

感谢您购买神牛产品。

AD200闪光灯是一款无线TTL闪光灯，配备2种类型灯管，采用内置神牛2.4G无线X系统，配合本司X1系列触发器可远程控制TTL/M/Multi模式触发AD200闪光；同时，它还可以跟神牛TTL机顶灯、TTL外拍灯、TTL影室灯利用TTL主从属功能组合使用。使用AD200闪光灯，您将获得更简单的拍摄体验，在光线变化复杂的情况下，可以自动获得准确的闪光曝光，拍摄轻松自如。

威客闪光系统是一个由闪光灯、无线遥控触发器和各种光效附件组成的便携闪光解决方案。AD200威客闪光灯，小巧便携，功率强劲，电池容量大，支持全程高速，外露灯管和标罩反光罩为户外拍摄和实景拍摄提供了良好的光质。便携与高效光质兼具，实为自由商业摄影师、新闻记者、发烧友、摄影爱好者、婚纱纪实摄影师等的理想光源。

产品有以下亮点：

无线TTL系统全面兼容：采用内置神牛2.4G无线X系统，可支持佳能E-TTL、尼康i-TTL、索尼TTL等TTL自动闪光系统；可作为无线多灯闪光系统的从属单元，拍摄简单快捷。

功率强大，小巧便携：闪光灯功率高达200W，大约是机顶灯(如600EX)的3倍，但体积相差无几，携带很方便。

可换式灯头，多种出光方式：直管灯头：携带方便，自带多组光学镜片，出光均匀，带LED造型灯。
裸管灯头：360°角度出光，卡口采用神牛AD200卡口，10种以上光效附件组合轻巧便携，丰富实用。

高品质AV显示屏：显示直观，操作更加简易

内置2.4G无线传输：100米超远距离，创意无限

影棚光质：功率高达200Ws，闪光指数GN60(裸管灯头)/GN52(直管灯头)

专业电源：使用国际品牌电池，大容量电源盒(14.4V/2900mAh)，0.01-2.1s回电，全光500次闪光以上

无线操控：内置使用神牛2.4G无线X系统，可实现TTL控制，外置可使用神牛FT-16遥控器，可无线控制闪光灯功率大小等，并同步触发引闪；同时留有3.5mm同步插孔，可实现多种同步触发方式。

调光精准：功率调节范围大（1/1-1/128），22级精确微调，光效把握更随心。

色温恒定：色温全程保持在5600±200K范围内。

高级功能：支持1/8000秒高速同步，高速频闪，高速遥控器同步触发等。

警告

- ⚠ 请保持干燥。
- ⚠ 请勿私自拆卸产品，如产品出现故障须由本公司或授权的维修人员进行检查维修。
- ⚠ 请勿让儿童接触本产品。
- ⚠ 禁止拆卸、撞击、挤压或投入火中，若出现严重鼓胀，请勿继续使用。请勿放置在超过50度的高温环境中。
- ⚠ 请勿将闪光灯头正对人眼闪光(特别是婴儿的眼睛)，否则可能会在短时间内造成视力障碍。
- ⚠ 请勿在化学品、可燃性气体或其他特殊物质附近使用闪光灯，这些物质在特殊情况下可能对闪光灯发出的瞬间强光敏感，有可能导致火灾或电磁干扰。在这些场合下，请注意相关警告标识。
- ⚠ 本产品不能防水，在雨天及潮湿环境下请注意防水。
- ⚠ 若发生任何故障，请立即关闭闪光灯电源。

目录

01	前言
02	警告
05	部件名称
	机身
	灯头
	AV显示屏
	所配物品
	可选购附件
	如何装卸裸管灯头闪光灯管
09	电池
10	电源管理
10	造型灯
10	无线模式选择
11	闪光模式-- TTL自动闪光模式
	TTL模式
	 闪光曝光补偿
	 高速同步
12	闪光模式-- M: 手动闪光
14	闪光模式-- Multi: 频闪闪光
15	无线传输闪光 : 无线电(2.4G)传输
17	C.Fn : 设置自定义功能
18	其他应用
	外置无线控制功能
	同步插孔触发
18	保护功能
20	规格参数
21	故障排除指南
21	固件升级
21	维护保养

本说明书中使用的约定



- 此使用说明书中的操作步骤假定相机和闪光灯的电源开关已开启。
- 参考页码由(第**页)表示。
- 此使用说明书中使用以下警告符号：

 该“小心”符号表示避免出现拍摄问题的警告。

 该“注意”符号提供补充信息。

部件名称

机身：

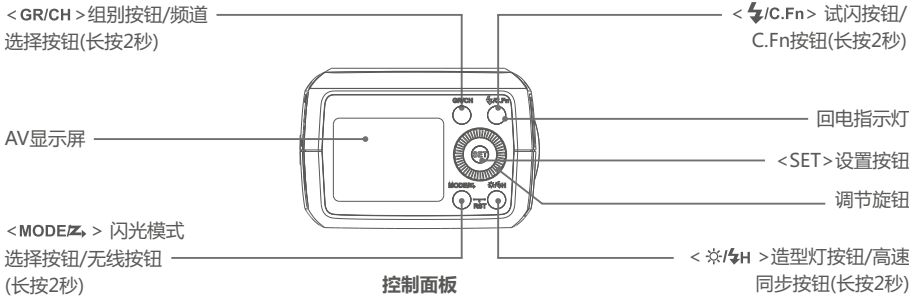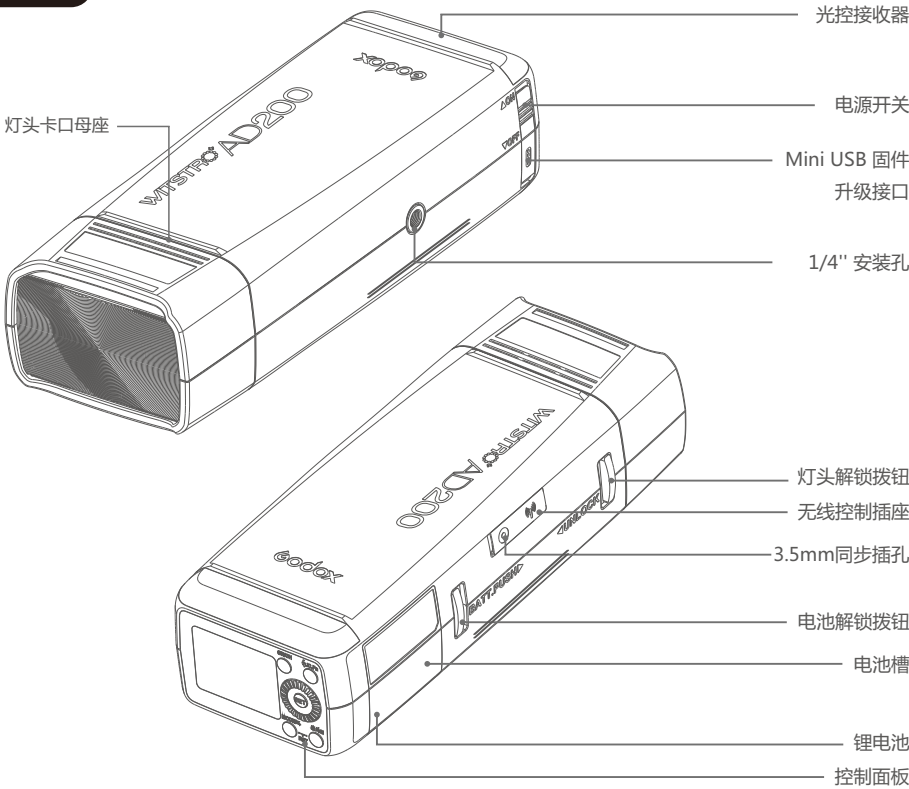

部件名称

灯头：

直管灯头：




裸管灯头：




部件名称

AV显示屏


(1)显示屏

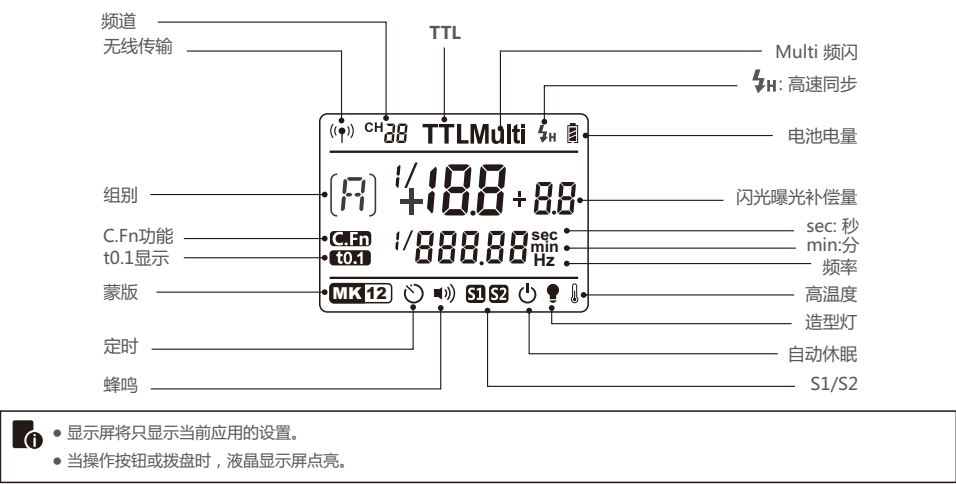

(2)M手动闪光

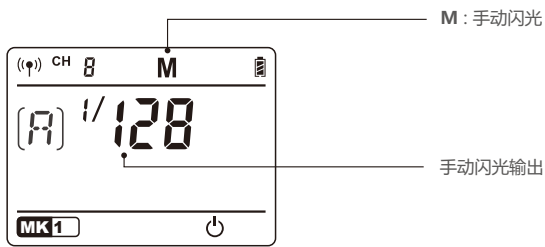


(3)Multi频闪闪光

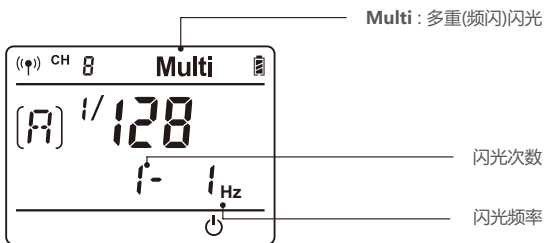

部件名称

(4)无线电传输拍摄

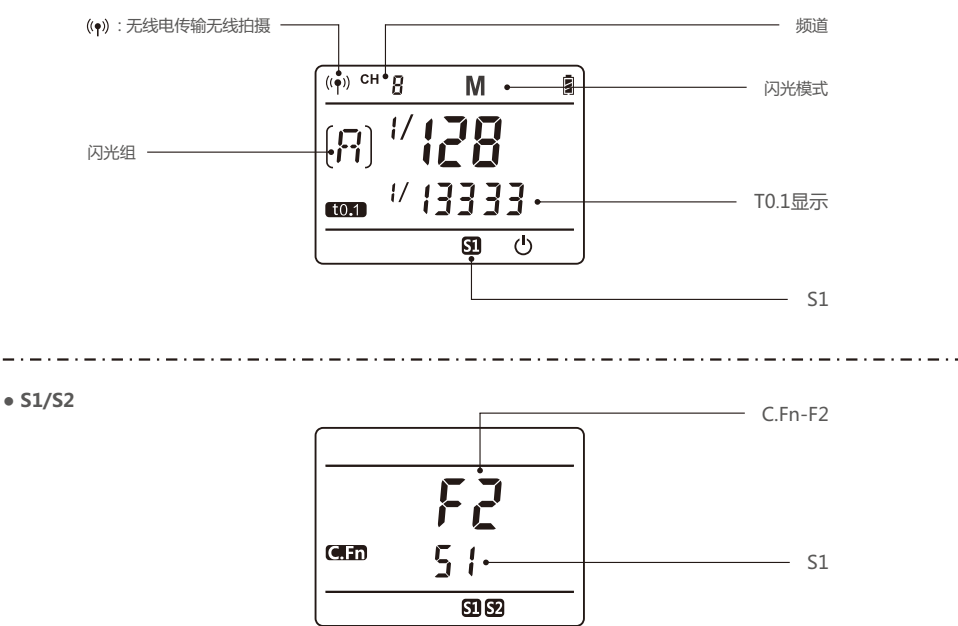


所配附件

- 1、直管灯头 2、裸管灯头 3、AD-E支架 4、充电器 5、电池 6、保护袋 7、说明书




可选购附件

可搭配本公司以下摄影附件使用，以获得最佳的拍摄效果和使用体验：
X1系列发射器、FT-16遥控器、小蜂巢套件、柔光箱、雷达罩、折叠柔光伞、束光筒、灯架等。

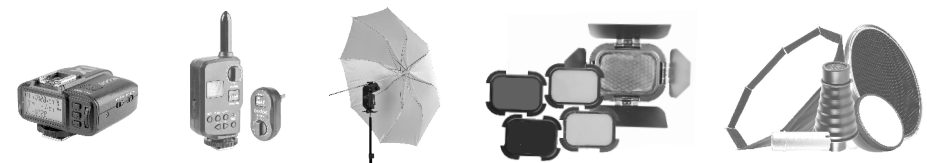

部件名称

如何装卸裸管灯头闪光灯管

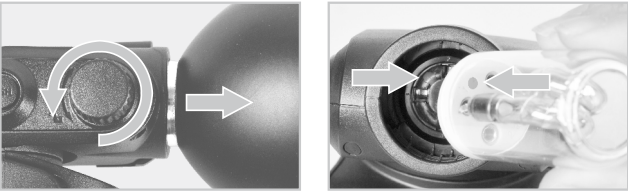

- 1、卸下反光罩或者其他附件。
- 2、将闪光灯管的红点标志对准闪光灯插座的红点标志，插入闪光灯。

电池

特性

1. 本品采用国际著名品牌锂电池，支持反复充放电500次，使用寿命长；
2. 安全可靠，内置电路有过充保护、过放保护、过流保护、短路保护；
3. 使用标配电池充电器只需4个小时左右。

注意事项

1. 避免正负极短路；
2. 电池没有防水功能，不要把电池浸泡在雾、水中；
3. 放置于儿童不易接触的地方；
4. 电池充电不要放置超过24小时；
5. 电池应放置于凉爽、干燥及通风的地方存储；
6. 电池不要靠近和放置于火中；
7. 电池使用报废后请按当地的规定处理；
8. 长期不使用，请充电至60%再放置；
9. 如果电池超过3个月不使用，请对电池进行充电。

电池电量指示

把锂电池正确安装在闪光灯上，即可给闪光灯供电。使用时请查看闪光灯屏幕上电池图标，即可随时掌握电量状态。

AV屏电量符号显示	意义
3格	满电
2格	中电
1格	低电
无格	电量少，请及时充电。
无格闪烁	电量即将用尽，此状态不支持闪光灯工作，1分钟后将自动关机。 注：此状态请尽快(10天内)充电，方可使用或放置。

电源管理

电源开关控制该产品的打开和关闭，长时间不使用时请关闭电源。本产品设计有电源自动休眠功能，在长时间无人操作时（30/60/90分钟），闪光灯会自动休眠。

 **C.Fn** 离机使用时，建议通过自定义功能使“自动休眠”无效。(C.Fn-F3 第17页)

造型灯

只有直管灯头有造型灯功能，造型灯点亮30分钟会自动熄灭。
短按造型灯按钮可控制造型灯开关。

无线模式选择

AD200只能作为从属单元（接收端），通过长按无线按钮2秒进行切换无线电功能。

无线模式	闪光模式
OFF	M / Multi
无线电	TTL / M / Multi

闪光模式——TTL自动闪光模式

该闪光灯有TTL自动闪光，M手动闪光，Multi频闪光三种模式。在TTL模式下，相机的测光系统会侦查从主体反射回来的闪光照明，从而自动调节闪光输出量，使主体和背景得到均衡曝光。

按下<MODE/Z>模式选择按钮，三种闪光模式将会依次出现在液晶屏上。


TTL模式

通过按<MODE/Z>模式选择按钮，将闪光灯设置为<TTL>，可以使闪光灯进入TTL模式。


闪光曝光补偿

该闪光灯可以在±3档间以1/3档为增量调节闪光曝光补偿。由于环境的需求而需要微调TTL系统时，这个功能非常有用。


设置闪光曝光补偿：

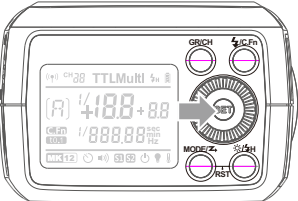

1 按下<SET>设置按钮，闪光曝光补偿量闪烁显示。

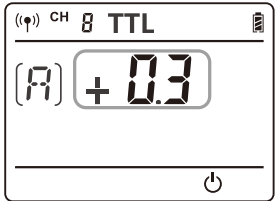


2 设置闪光曝光补偿量。
• 转动调节旋钮设置曝光补偿量。
• "0.3"表示1/3档，"0.7"表示2/3档。
• 要取消闪光曝光补偿，将闪光曝光补偿量设为"+0"。

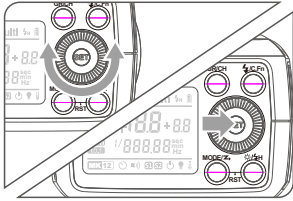


3 按下<SET>设置按钮，确定闪光曝光补偿。

高速同步

使用高速同步(FP闪光)，您可以在所有的快门速度下同步使用闪光灯。高速同步闪光在使用光圈优先对人像进行填充闪光时特别方便。

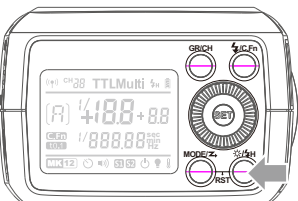

1 长按高速同步按钮2秒，令屏幕显示<FP>图标。

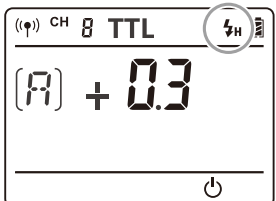


2 发射器请使用X1系列发射器。


- 使用高速同步，快门速度越高，有效的闪光范围就越小。
- 在高速同步模式下，无法设置频闪光。
- 连续高速同步闪光20次后，闪光灯热保护功能可能会被激活。

闪光模式——M: 手动闪光


您可以在1/128功率至1/1全功率间以1/3档为增量设置闪光输出。为获得正确的闪光曝光，请使用手持的闪光测光表确定所需的闪光输出。

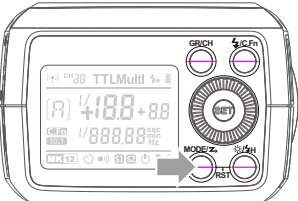

1 按<MODE/Z>模式选择按钮，屏幕显示<M>。

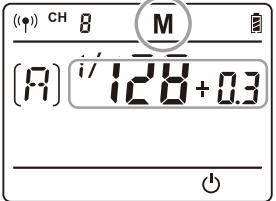

2 转动调节旋钮设置闪光输出功率。

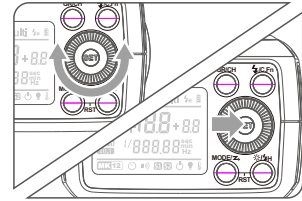

3 按下<SET>设置按钮，确定闪光曝光补偿。

显示闪光输出

拍摄过程中更改闪光输出时，下表将清楚地显示光圈值是如何更改的，如1/2-0.3→1/2+0.3。您可以在增加或减少闪光输出时查看光圈值的更改规律。例如，将闪光输出量减少至1/2、1/2-0.3或1/2-0.7，然后再将其增加至大于1/2、1/2+0.3、1/2+0.7时，将显示1/1。

减少闪光输出指数→							
1/1	1/1-0.3	1/1-0.7	1/2	1/2-0.3	1/2-0.7	1/4	
	1/2+0.7	1/2+0.3		1/4+0.7	1/4+0.3		

←增加闪光输出指数

闪光模式——M: 手动闪光

S1光控单元设置

在M手动闪光模式下，长按C.Fn按钮2秒进入C.FN-F2选择S1功能，闪光灯可作为副灯使用，创造多种照明效果，适用于手动闪光环境。它会与主闪光灯的第一次闪光同步触发闪光，效果与使用无线引闪器一致。


S2光控单元设置

在M手动闪光模式下，长按C.Fn按钮2秒进入C.FN-F2选择S2功能，闪光灯可作为副灯使用，适用于TTL闪光环境。具有防预闪功能，使用带一次预闪功能的相机能用光控实现同步拍摄。它会与主闪光灯的第二次闪光同步触发闪光，即2次光控引闪。

● 只有在M模式下才支持S1/S2光控引闪模式。

显示闪光持续时间


闪光持续时间是指闪光灯从开始发光到达发光半峰值的时间长度。半峰值的表示为t=0.5。为了给摄影师提供更详细的拍摄数值，本产品采用t=0.1。如下图：t=0.5与t=0.1区别。

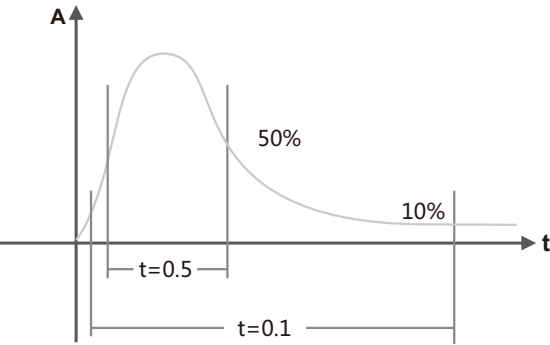

显示闪光持续时间操作：

- 1、长按C.Fn按钮2秒进入C.FN功能
- 2、拨动调节旋钮至F6，此时t0.1图标显示。
- 3、按下<SET>设置按钮进入调整状态。
- 4、拨动调节旋钮进行选择。

ON：显示闪光持续时间；OFF：不显示。

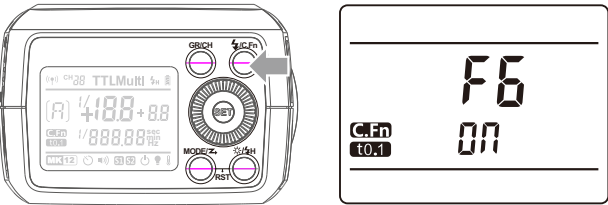

● 只有在M模式下才会显示持续时间。

闪光模式——Multi: 频闪闪光

使用频闪闪光，可以发出一系列快速的闪光。它可以在一张照片上拍摄移动物体的多个图像。您可以设置闪光频率(每秒的闪光次数，以Hz表示)、闪光次数和闪光输出。

1 按<MODE/Z>闪光模式选择按钮，屏幕显示<MULTI>。

2 转动调节旋钮设置闪光输出功率。

3 设置闪光频率和闪光次数。

- 按<SET>按钮选择闪光频率，旋转调节旋钮设定数字。
- 按<SET>按钮选择闪光次数，旋转调节旋钮设定数字。
- 按下<SET>设置按钮确定，所有设置都将显示出来。

计算快门速度

在频闪闪光过程中，到闪光停止为止快门应保持开启状态。使用下面的公式计算快门速度，然后用相机进行设置。

闪光次数/闪光频率 = 快门速度

例如，如果闪光次数是10，闪光频率是5Hz，快门速度则至少为2秒。

- 为防止闪光灯过热并损坏，请勿执行连续10次以上的频闪闪光连拍。闪光10次后，请让闪光灯至少冷却15分钟。如果您试图执行连续10次以上的频闪闪光连拍，为防止闪光灯过热，闪光可能自动停止。如果发生了这种情况，请让闪光灯至少冷却15分钟。
- 反光很强的被摄体在暗背景前使用频闪闪光更加有效。
- 推荐使用三脚架和遥控开关。
- 闪光输出为1/1和1/2时不能设置频闪闪光。
- 频闪闪光时也可以使用“bulb”。
- 如果闪光次数显示为--，则闪光灯会连续闪光，直到快门或电池耗尽。如下表所示，闪光次数将受到限制。

最大频闪闪光次数


闪光输出 \ Hz	1	2	3	4	5	6-7	8-9	10	11	12-14	15-19	20-50	60-99
1/4	7	6	5	4	4	3	3	2	2	2	2	2	2
1/8	14	14	12	10	8	6	5	4	4	4	4	4	4
1/16	30	30	30	20	20	20	10	8	8	8	8	8	8
1/32	60	60	60	50	50	40	30	20	20	20	18	16	12
1/64	90	90	90	80	80	70	60	50	40	40	35	30	20
1/128	90	90	90	90	90	90	80	70	70	60	50	40	40

无线闪光拍摄：无线电(2.4G)传输

AD200使用神牛2.4G无线X系统，可以与本厂其他型号完美结合使用。
作为从属单元可兼容佳能/尼康/索尼TTL系统，根据主控单元自动切换，无需手动设置。
尼康相机(使用X1T-N)和佳能相机(使用X1T-C)和索尼相机(使用X1T-S等)可同时同地共享一台或多台AD200-TTL，无缝结合，无懈可击！


1、无线设置

长按<MODE/Z>无线按钮2秒可以切换无线功能的开关。
无线功能打开时，显示屏上会显示<(P)>。
用本厂FT-16和其他品牌引闪器时请关闭无线功能。

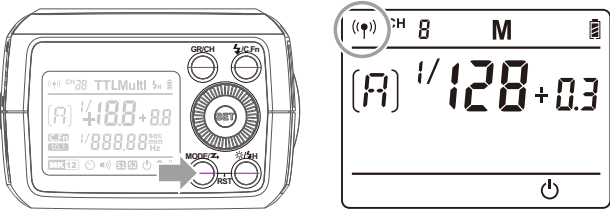


2、设置通讯频道

如果在拍摄现场不止一个无线闪光系统，您可以通过更改通讯频道来防止信号干扰。保证主控单元和从属单元设置为相同的频道编号即可。

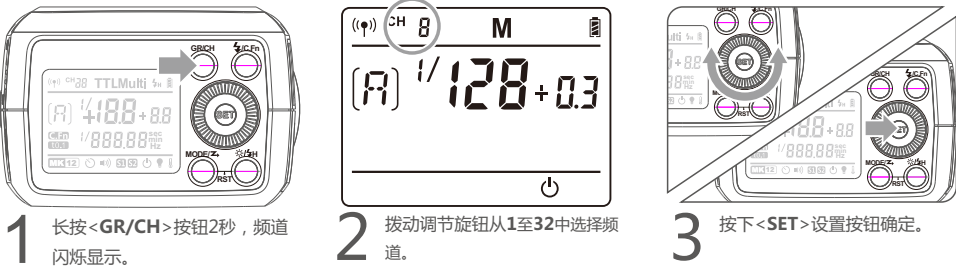

3、设置通讯组别


短按<GR/CH>按钮，A~E组别依次改变。

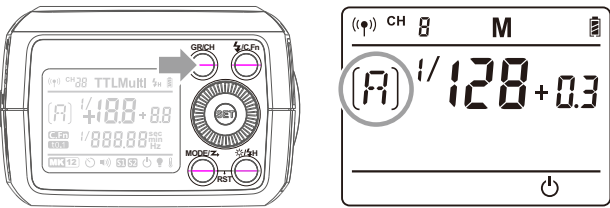

无线闪光拍摄：无线电(2.4G)传输

定位和操作范围(无线闪光拍摄的示例)

- 使用一个从属单元进行自动闪光拍摄

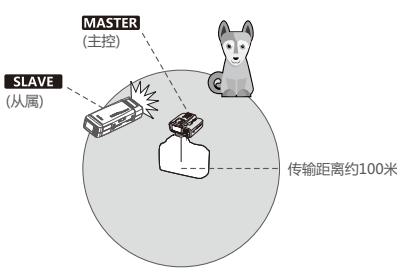


- 使用附带的支架定位从属单元。
- 开始拍摄前请进行测试闪光和试拍。
- 受从属单元的位置、周围环境、天气状况等影响，传输距离可能更短。
- 无线信号干扰很多，如果漏闪，请改变频道避免干扰。


无线多重闪光拍摄

可以将从属单元分割为两个或三个组并在改变闪光光比(倍率)的同时进行TTL自动闪光拍摄。此外，可以为各闪光组(最多5个组)设定并用不同的闪光模式拍摄。

- 用两个从属组进行自动闪光拍摄。

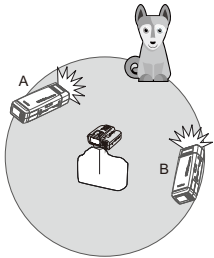

- 用三个从属组进行自动闪光拍摄。

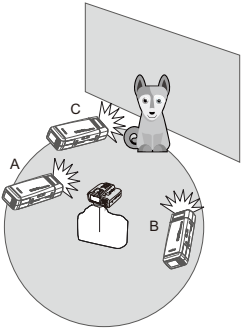

- AD200和神牛X1系列发射器一起使用时，闪光灯下列功能都可以通过X1控制：
 - 闪光模式：TTL、M、Multi
 - 同步引闪：前帘、后帘、高速同步
 - 功率大小调控
 - 造型灯开关
 - 蜂鸣器开关

C.Fn: 设置自定义功能

请对照以下图表本机应用栏，使用自定义功能来完成设置。

自定义功能符号	功能	设置符号	设置和说明	使用范围限制
F1	蜂鸣器	ON	启动	无
		OFF	关闭	
F2	S1/S2模式选择	OFF	关闭	M模式
		S1	S1模式	
		S2	S2模式	
F3	自动休眠	OFF	关闭	无
		30 min	没有任何操作	
		60 min	自动休眠	
		90 min		
F4	延时闪光	OFF, 0.01~30s	可作为后帘引闪	M/Multi 模式
F5	蒙板	OFF	蒙板功能关闭	M模式
		N1	蒙板功能开启:触发2次为1个周期，触发第1次引闪。	
		N2	蒙板功能开启:触发2次为1个周期，触发第2次引闪。	
F6	t0.1显示	ON	显示	M模式
		OFF	不显示	


- 长按 < C.Fn > 按钮2秒进入C.Fn菜单。
- 选择自定义功能符号。
旋转调节旋钮设置自定义功能符号。
- 更改设置。
 - 按 < SET > 设置按钮，自定义功能编号闪烁。
 - 旋转调节旋钮设置想要的编号，按 < SET > 按钮确定。
- 退出C.Fn菜单。
 - 按<MODE/Z> 按钮退出。

其他应用

外置无线控制功能

闪光灯内置无线控制插座，配合特定遥控器使用，您可以实现对闪光灯的无线控制。将FT系列遥控器的接收端插入无线控制插座，手持遥控器发射端，即可远程控制闪光灯的功率开关和大小、闪光灯触发等。您也可以将发射端置于相机热靴上，通过相机快门来进行同步引闪。

- 
 - 更多遥控器的使用方法，请查阅FT系列遥控器的说明书。
 - 关闭AD200无线功能。

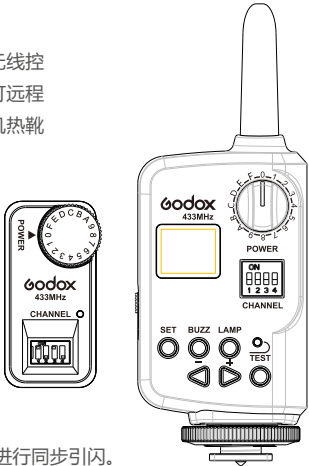

同步插孔触发

同步插孔规格为Φ3.5mm，此处可插入同步线或者触发器触发插头对闪光灯进行同步引闪。

保护功能

1. 热保护

- 为防止闪光灯头过热并损坏，请勿在 1/1 功率时进行超过 40 次的快速连续闪光。40 次连续闪光后，要让闪光灯至少冷却 10 分钟。
- 如您在进行超过 40 次连续闪光后马上继续进行更多次闪光，内部的防过热功能可能会被激活，使充电时间变为 10 秒以上。如果发生这种现象，请让闪光灯冷却约 10 分钟，闪光灯便会恢复正常。
- 热保护启动后，显示屏上  的符号会显示。

激活热保护功能的连续闪光次数：

功率	闪光次数	
	直管灯头	裸管灯头
1/1	40	60
1/2+0.7	50	80
1/2+0.3	60	100
1/2	75	120
1/4(+0.3,+0.7)	100	150
1/8(+0.3,+0.7)	200	200
1/16(+0.3,+0.7)	300	300
1/32(+0.3,+0.7)	500	500
1/64(+0.3,+0.7)	1000	1000
1/128(+0.3,+0.7)		

高速同步模式下，激活热保护功能的连续闪光次数：

功率	闪光次数	
	直管灯头	裸管灯头
1/1	20	50
1/2(+0.3,+0.7);	30	60
1/4(+0.3,+0.7);	50	75
1/8(+0.3,+0.7);	75	100
1/16(+0.3,+0.7)	80	150
1/32(+0.3,+0.7)	100	200
1/64(+0.3,+0.7);		
1/128(+0.3,+0.7);		

2. 其他保护

- 为了保证设备安全的工作，系统时刻进行预防保护，以下提示符号供您参考：

LCD显示	警示内容
E1	闪光灯回电系统出现问题，无法回电引闪，请重新开机，如无法解决请维修
E2	设备内温度过高，请停止引闪10分钟
E3	闪光灯管两端电压过高，请维修
E9	固件升级有误，请进行正确固件升级

规格参数

型号	AD200	
无线从属单元模式	*无线电模式 (兼容Nikon&Canon&Sony)	
闪光模式	无线关闭	M/Multi
	无线电从属模式	TTL/ M/Multi
无线电从属单元兼容相机	Nikon相机(主控单元X1TN)	
	Canon EOS相机(主控单元X1TC)	
	Sony相机(主控单元X1TS)	
闪光指数(1/1档位)	直管灯头：52(m ISO 100, @35mm)	
	裸管灯头：60(m ISO 100, 使用AD-S2标准反光罩, @28mm)	
闪光持续时间t0.1(约)	直管灯头：1/220秒 - 1/13000秒	
	裸管灯头：1/220秒 - 1/11300秒	
POWER	200W	
档位	8级：1/128~1/1	
频闪闪光	具备(次数：90次；频率：99)	
闪光曝光补偿(FEC)	在±3档间以1/3档为增量调节	
同步方式	高速同步(最高1/8000秒)，前帘同步，后帘同步	
延时引闪	0.01~30秒	
蒙板	√	
蜂鸣器	√	
Model造型灯(LED)	√	
光控引闪	S1/S2	
显示闪光持续时间	√	
•无线闪光(无线电2.4G传输)		
无线功能	从属单元，关闭	
可控制从属单元组	5组：A, B, C, D, E	
传输距离	100m	
频道	1~32	
•电源		
电源	锂电池：14.4V/2900mAh	
全功率闪光次数	500次	
回电时间	约0.01-2.1秒	
电池电量指示	√	
节能	闪光灯在无人操作30分钟(可调)将会自动休眠。	
•同步触发方式	3.5mm同步线，无线控制插座	
•色温	5600±200k	
•尺寸		
体积	168x75x50mm(不含灯头)	
净重	560g(不含灯头和电池)	

固件升级

本机通过USB插座可进行固件升级。软件最新公告及说明将会发布在官方网站上。



注：本品出厂不配USB升级线，请另行购买。普通的USB线可使用，本产品USB口为Micro USB 接口。
按住**MODE/↵** 按键，然后开机将显示版本号，如U-1.0，表示版本1.0。

维护保养

- 闪光灯在工作时，如发现异常，应立即关掉电源，查明原因。
- 灯体应避免震动，平时注意表面除尘。
- 灯体稍有发热为正常现象，无特别需要时，勿连续引闪。
- 闪光灯的所有维修概由本厂指定可供原厂配件之维修部负责。
- 1年保修，消耗品如灯管等，不在1年保修范围。
- 经发现，擅自检修此闪光灯的，将取消闪光灯之一年保修期，维修需要收取相关费用。
- 如果本品出现故障或者被水淋湿，在专业人员维修后方可继续使用。
- 如有技术更改，恕不另行通知。

Foreword

Before using this product

Please read this user manual carefully in order to ensure your safety and the proper operation of this product. Keep for future reference.

Thank you for purchasing a GODOX product.

WITSTRO TTL Powerful & Portable Flash AD200 include two kinds of flash tube and adopts Godox 2.4G wireless X system. When using GODOX 2.4G wireless X system of camera, AD200 can be triggered by X1 series flash trigger in TTL/M/Muilt mode, etc. AD200 can also use in combination with GODOX TTL camera flashes, TTL outdoor flashes, TTL studio flashes, etc. With this AD200 flash, your shooting will become simpler. You can easily achieve a correct flash exposure even in complex light-changing environments.

WITSTRO flash system is a portable photo lighting solution consist of camera flashes, wireless trigger and a range of dedicated light shaping accessories. AD200 with lightweight and portable body, strong power, large capacity battery and full speed supply. It offers studio quality light for outdoor and live shooting. The AD200 offers:

- **Compatible wireless TTL system:** Fully support Canon E-TTL, Nikon i-TTL, Sony TTL and other TTL systems in Godox 2.4G wireless X system. Workable as Slave unit in a wireless flash group.
- **Lightweight and portable:** up to 200Ws, is to 3 times powerful as camera flashes (600EX), and the size almost the same.
- **Changeable flash head: Speedlite flash head:** Portability, comes with multiple sets of optical glass, even illumination and modeling lamp (LED). **Bare bulb flash head:** Lighting out with 360 degree angles, all lighting accessories fit for barebulb flashes from most brands.
- **High-quality AV panel:** with clear and convenient operation.
- **Built-in 2.4G wireless transmission:** with all-in-one functions and 100 meters further transmission
- **Studio quality light:** up to 200Ws, GN 60 (m ISO 100, with bare bulb flash head) / GN52 (Speedlite flash head).
- **Battery pack:** Large-capacity power supply (lithium, 14.4V/2900mAh), 0.01- 2.1s recycling and 500 full power flashes.
- **Wireless control:** With built-in Godox 2.4G wireless X system to achieve TTL control. Godox FT-16 flash trigger can also be used to wirelessly adjust flash power level and trigger the flash. AD200 has 3.5mm sync cord jack to achieve various sync triggering mode.
- **Power adjusts from full power to 1/128 in 1/3 stop increments.**
- **Stable color temperature at 5600±200K over the entire power range.**
- **1/8000s high-speed sync flash, high-speed sync triggering.**

The powerful and portable AD200 meets the demands of freelance commercial photographers, photojournalists, wedding and beach portraiture shooters, event and backpack photographers, photograph enthusiasts, etc.

! Warning

- ⚠ Always keep this product dry. Do not use in rain or in damp conditions.
- ⚠ Do not disassemble. Should repairs become necessary, this product must be sent to an authorized maintenance center.
- ⚠ Keep out of reach of children.
- ⚠ Stop using this product if it breaks open due to extrusion, falling or strong hit. Otherwise, electric shock may occur if you touch the electronic parts inside it.
- ⚠ Do not fire the flash directly into the eyes (especially those of babies) within short distances. Otherwise visual impairment may occur.
- ⚠ Do not use the flash unit in the presence of flammable gases, chemicals and other similar materials. In certain circumstance, these materials may be sensitive to the strong light emitting from this flash unit and fire or electromagnetic interference may result.
- ⚠ Do not leave or store the flash unit if the ambient temperature reads over 50°C. Otherwise the electronic parts may be damaged.
- ⚠ Turn off the flash unit immediately in the event of malfunction.

Contents



23	Foreword
24	Warning
27	Name of Parts
	Body
	Flash Head
	AV Panel
	Included Accessories
	Separately Sold Accessories
	Attaching Bare bulb flash head
31	Battery
32	Power Management
32	Modeling Lamp
32	Wireless Flash Mode
33	Flash Mode— TTL Autoflash
	TTL Mode
	 FEC (Flash Exposure Compensation)
	 High-Speed Sync
34	Flash Mode—M: Manual Flash
36	Flash Mode—Multi/Stroboscopic Flash
37	Wireless Flash Shooting: Ratio (2.4G) Transmission
39	C.Fn: Setting Custom Functions
40	Other Applications
	Wireless Control Function
	Sync Triggering
40	Protection Function
42	Technical Data
43	Troubleshooting
43	Firmware Upgrade
43	Maintenance

Conventions used in this Manual

- This manual is based on the assumption that both the camera and camera flash's power switches are powered on.
- Reference page numbers are indicated by "p.**".
- The following alert symbols are used in this manual:
 -  The Caution symbol indicates a warning to prevent shooting problem.
 -  The Note symbol gives supplemental information.

Name of Parts

Body:

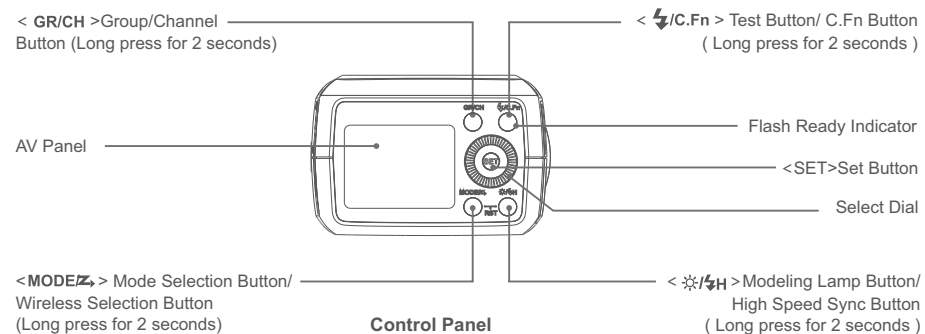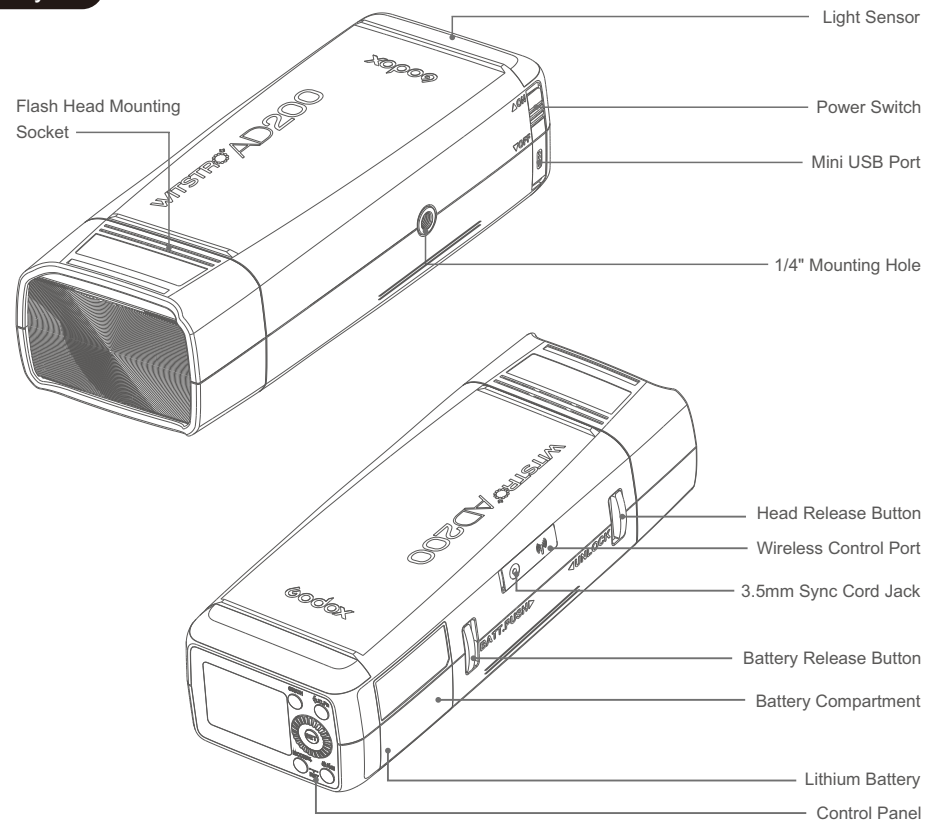

Name of Parts

Flash Head :

Speedlite flash head:




Bare bulb flash head:



Name of Parts


AV Panel

(1) AV Panel

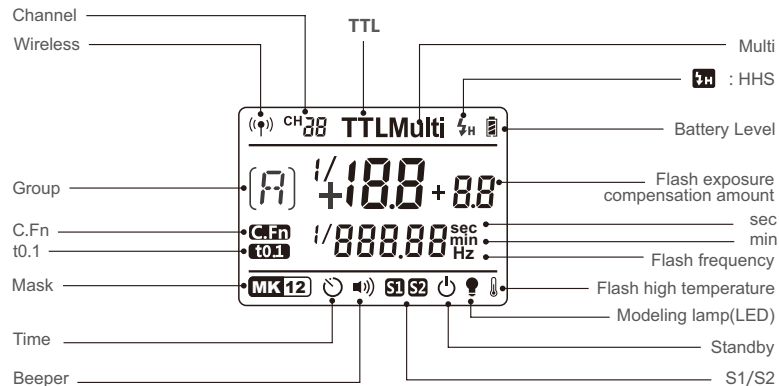


- The display will only show the settings currently applied.
- The functions displayed above function buttons 1 to 4, such as **SYNC** and **±**, change according to settings' status.
- When a button or dial is operated, the AV panel illuminated.

(2) M Manual Flash

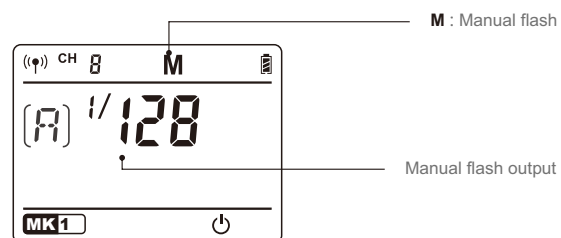


(3) Multi Flash

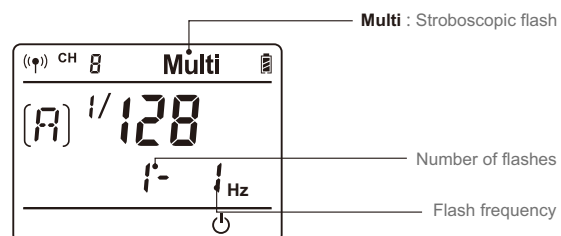


Name of Parts

(4) Radio Transmission Shooting

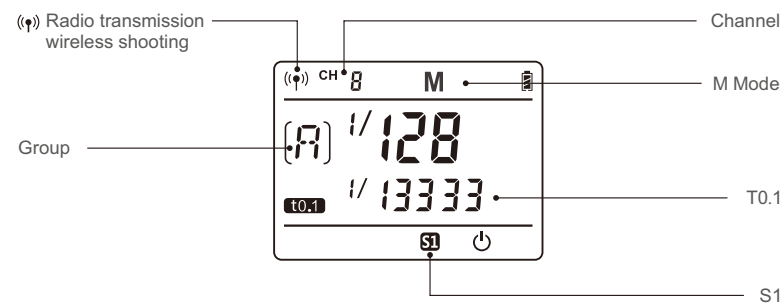

• S1/S2

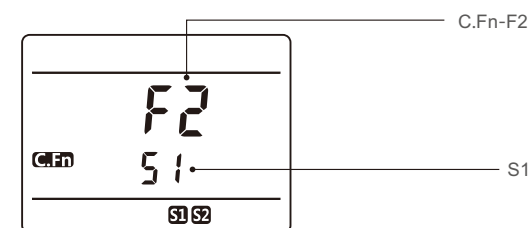


Included Accessories

- (1) Speedlite flash head
- (2) Bare bulb flash head
- (3) AD-E holder*1
- (4) Battery charger*1
- (5) Lithium battery pack*1
- (6) Protecting bag*1
- (7) Instruction manual*1




Separately Sold Accessories

The product can be used in combination with the following accessories sold separately, so as to achieve best photography effects: X1 Wireless Flash Trigger, FT-16 Remote Control, Barn door with 4 wings, Softbox, Beauty Dish, Fold up umbrella, Snoots, Light stand, etc.

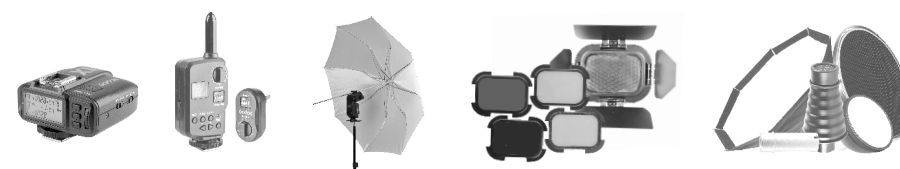


Name of Parts

Attaching Bare bulb flash head

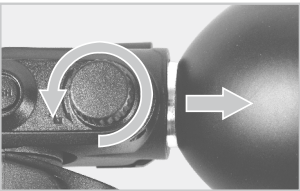

1. Remove the reflector or other accessories from the flash head.

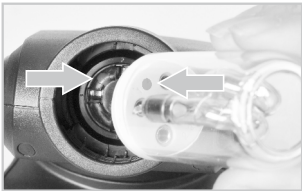

2. Match the red dot on the base of the flash tube with the red dot in the Tube Socket (4). Push the flash tube in until it is securely seated into the socket.

Lithium Battery

Features

- 1. This flash unit uses Li-ion polymer battery which has long runtime. The available charge-and-discharge times are 500.
- 2. It is reliably safe. The inner circuit is against overcharge, overdischarge, overcurrent, and short circuit.
- 3. Take only 4 hours to fully charge the battery by using the standard battery charger.

Cautions:

- Do not short circuit.
- Do not expose to rain or immerse into water. This battery is not water proof.
- Keep out of reach of children.
- No over 24 hours' continuous charging.
- Store in dry, cool, ventilated places.
- Do not put aside or into fire.
- Dead batteries should be disposed according to local regulations.
- Long time not to use, please charge it to 60% and then placed.
- If the battery had ceased using for over 3 months, please make a full recharge.

Battery Level Indication

Make sure the battery pack is securely loaded in the flash. Check the battery level indication on the AV panel to see the remaining battery level.

Battery Level Indication on the AV Panel	Meaning
3 grids	Full battery
2 grids	Medium battery
1 grid	Low battery
Blank grid	Lower battery, please recharge it.
Blinking	The battery level is going to be used out immediately. And the flash will auto power off in 1 minute. Note: Please recharge the battery as soon as possible (within 10 days). Then, the battery can be used or be placed for long period.

Power Management

ON/OFF Power Switch controls the on/off of the flash unit, turn off the power pack if the flash unit will not be used for an extended period. The product design of power supply with automatic hibernation feature, When unattended operation for a long time (approx. 30/60/90 minutes), the flash will automatically standby.



C.Fn Disabling Auto Power standby function is recommended when the flash is used off camera.
(C.Fn-F3, Page 39)

Modeling Lamp

With only the speedlite flash head have modeling lamp function, it will automatic turn off after 30 minutes. Short press the modeling lamp button will control the modeling lamp turn on or off.

Wireless Flash Mode

AD200 can only be set as slave unit (receiver end). Long press the wireless selection button for 2 seconds to switch the radio transmission function.

Wireless Mode	Flash Mode
OFF	M / Multi
Radio Transmission	TTL / M / Multi

Flash Mode — TTL Autoflash

This flash has three flash modes: TTL, Manual (M), and Multi (Stroboscopic). In TTL mode, the camera and the flash will work together to calculate the correct exposure for the subject and the background. In this mode, multiple TTL functions are available: FEC, FEB, FEL, HSS, second curtain sync, modeling flash, control with the camera's menu screen.

* Press <MODE/Z> Mode Selection Button and three flash modes will display on the AV panel one by one with each pressing.


TTL Mode

Press <MODE/Z> Mode Selection Button to enter TTL mode. The AV panel is displayed <TTL>.


FEC: Flash Exposure Compensation

With FEC function, this flash can adjust from -3 to +3 in 1/3rd stops. It is useful in situations where minor adjusting of the TTL system is needed based on the environment.

Setting FEC:

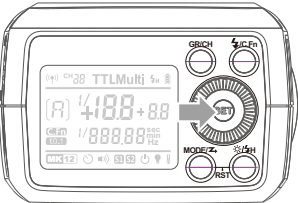


1 Press the <SET> Function Button and flash exposure compensation amount will be highlighted on the AV panel.

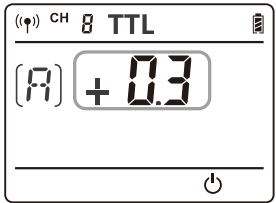

2 Set the flash exposure compensation amount.


- Turn the Select Dial to set the amount.
- "0.3" means 1/3 step, "0.7" means 2/3 step.
- To cancel the flash exposure compensation, set the amount to "+0".

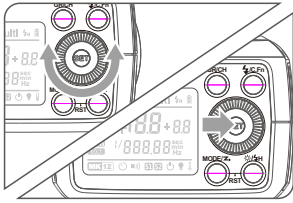


3 Press <SET> button again to confirm the setting.

High-Speed Sync

High Speed Sync (FP flash) enables the flash to synchronize with all camera shutter speeds. This is convenient when you want to use aperture priority for fill-flash portraits.

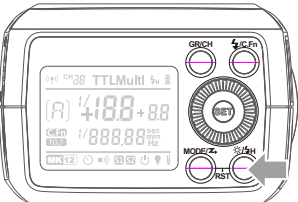

1 Long Press Function Button <F/SH> for 2 seconds so that <F/SH> is displayed.

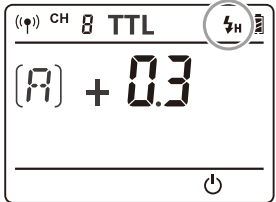


2 Please use the X1 series transmitter to trigger.


- With high-speed sync, the faster the shutter speed, the shorter the effective flash range.
- Multi flash mode cannot be set in high-speed sync mode.
- Over-temperature protection may be activated after 20 consecutive high-speed sync flashes.

Flash Mode — M: Manual Flash


The flash output is adjustable from 1/1 full power to 1/128th power in 1/3rd stop increments. To obtain a correct flash exposure, use a hand-held flash meter to determine the required flash output.

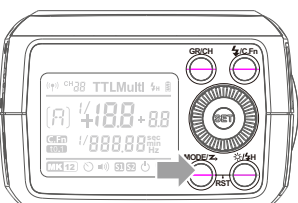

1 Press <MODE/Z> button so that <M> is displayed.

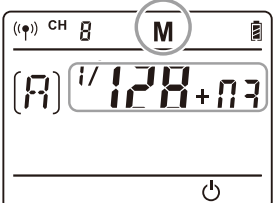

2 Turn the Select Dial to choose a desired flash output amount.

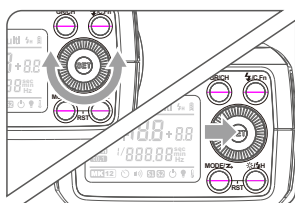

3 Press <SET> button again to confirm the setting.

Flash Output Range

The following table makes it easier to see how the stop changes in terms of f/stop when you increase or decrease the flash output. For example, when you decrease the flash output to 1/2, 1/2-0.3, or 1/2-0.7, and then increase the flash output to more than 1/2, 1/2+0.3, 1/2+0.7, and 1/1 will be displayed.

Figures displayed when reducing flash output level→							
1/1	1/1-0.3	1/1-0.7	1/2	1/2-0.3	1/2-0.7	1/4	
	1/2+0.7	1/2+0.3		1/4+0.7	1/4+0.3		

←Figures displayed when increasing flash output level

Optic S1 Secondary Unit Setting

In M manual flash mode, Long press <C.Fn> button for 2 seconds to enter C.FN-F2 to choose S1 function, so that this flash can function as an optic S1 secondary flash with optic sensor. With this function, the flash will fire synchronously when the main flash fires, the same effect as that by the use of radio triggers. This helps create multiple lighting effects.


Optic S2 Secondary Unit Setting

Long press <C.Fn> button for 2 seconds to enter C.FN-F2 to choose S2 function, so that this flash can also function as an optic S2 secondary flash with optic sensor in M manual flash mode. This is useful when cameras have pre-flash function. With this function, the flash will ignore a single "pre-flash" from the main flash and will only fire in response to the second, actual flash from the main unit.

- S1 and S2 optic triggering is only available in M manual flash mode.



Display Flash Duration

Flash duration refers to the length of time that from flash's firing to reach the half peak at maximum. The half peak at maximum is usually expressed as $t=0.5$. In order to provide the photographer with more concrete data, this product adopts $t=0.1$. The difference between $t=0.5$ and $t=0.1$ is shown in the following picture.

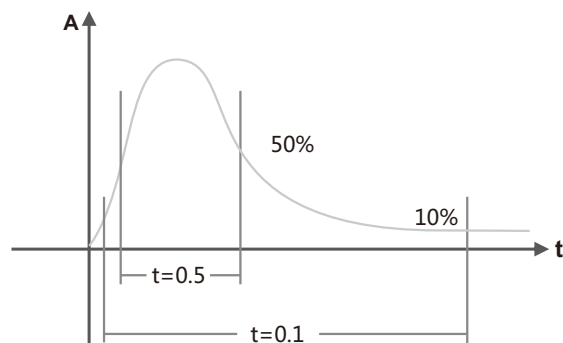

Display Flash Duration Operation :

1. Long press the **C.Fn** button for 2 seconds to enter C.FN function.
2. Adjust the Select Dial to F6, the $t0.1$ icon will be displayed on the AV panel.
3. Press <SET> button to enter the adjustment condition.
4. Turn the Select Dial to choose the ON/OFF.

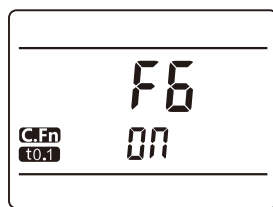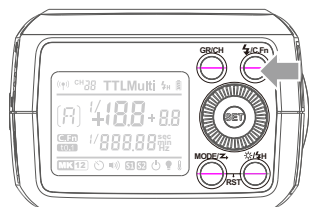


- The flash duration will only be displayed on the AV panel in M mode.


Flash Mode — Multi: Stroboscopic Flash

With stroboscopic flash, a rapid series of flashes is fired. It can be used to capture multiple images of a moving subject in a single photograph.


You can set the firing frequency (number of flashes per sec. expressed as Hz), the number of flashes, and the flash output.

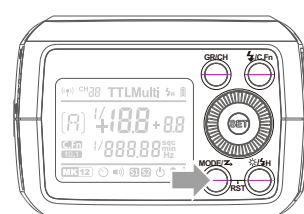

- 1 Press <MODE> button so that <MULTI> is displayed.

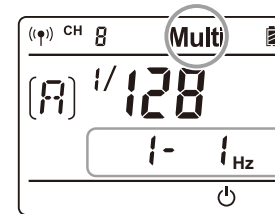

- 2 Turn the Select Dial to choose a desired flash output.

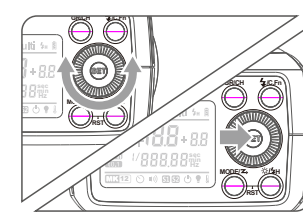

- 3 Set the flash frequency and flash times.

- Press <SET> button to select the flash frequency. Turn the Select Dial to set the number.
- Press <SET> button to select the flash times. Turn the Select Dial to set the number.
- After finish the setting, press <SET> button and all the settings will be displayed.

Calculating the Shutter Speed

During stroboscopic flash, the shutter remains open until the firing stops. Use the formula below to calculate the shutter speed and set it with the camera.

Number of Flashes / Flash Frequency = Shutter Speed

For example, if the number of flashes is 10 and the firing frequency is 5 Hz, the shutter speed should be at least 2 seconds.

- ⚠ To avoid overheating and deteriorating the flash head, do not use stroboscopic flash more than 10 times in succession. After 10 times, allow the camera flash to rest for at least 15 minutes. If you try to use the stroboscopic flash more than 10 times in succession, the firing might stop automatically to protect the flash head. If this happens, allow at least 15 minutes' rest for the camera flash.

- Stroboscopic flash is most effective with a highly reflective subject against a dark background.
- Using a tripod and a remote control is recommended.
- A flash output of 1/1 and 1/2 cannot be set for stroboscopic flash.
- Stroboscopic flash can be used with "bulb".
- If the number of flashes is displayed as "--", the firing will continue until the shutter closes or the battery is exhausted. The number of flashes will be limited as shown by the following table.

Maximum Stroboscopic Flashes:

Flash Output \ Hz	1	2	3	4	5	6-7	8-9	10	11	12-14	15-19	20-50	60-99
1/4	7	6	5	4	4	3	3	2	2	2	2	2	2
1/8	14	14	12	10	8	6	5	4	4	4	4	4	4
1/16	30	30	30	20	20	20	10	8	8	8	8	8	8
1/32	60	60	60	50	50	40	30	20	20	20	18	16	12
1/64	90	90	90	80	80	70	60	50	40	40	35	30	20
1/128	90	90	90	90	90	90	80	70	70	60	50	40	40

Wireless Flash Shooting


Ad200 adopts Godox 2.4G wireless X system, which has good compatibility with other products of our company. As a slave unit, AD200 is automatically compatible with Canon/ Nikon/ Sony TTL system according to the master unit. Nikon cameras (use X1T-N), Canon cameras (use X1T-C) and Sony cameras (use X1T-S) can use one or more AD200-TTL flashes simultaneously.

1. Wireless Settings

Long press <MODE/Z> button for 2 seconds to switch wireless function ON/ OFF.


Turn the wireless function on, the <(P)> icon will be displayed on the AV panel.

When using the FT-16 remote control or others trigger, please turn off the wireless function.

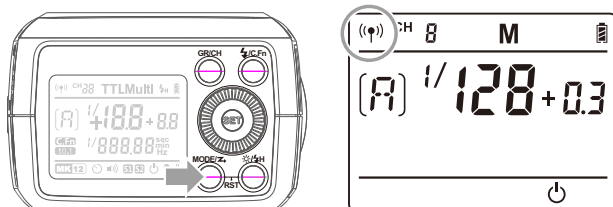

2. Setting the Communication Channel

If there are other wireless flash systems nearby, you can change the channel IDs to prevent signal interference. The channel IDs of the master unit and the slave unit(s) must be set to the same.

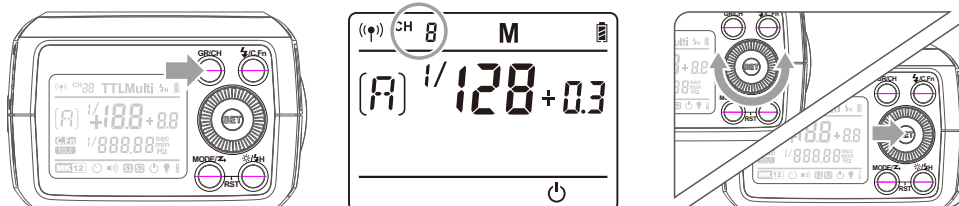


1 Long press the <GR/CH> Button for 2 seconds, so that the icon will be displayed on the AV panel.

2 Turn the Select Dial to choose a channel ID from 1 to 32.

3 Press the <SET> button to confirm.


3. Setting the Communication Group

Short press the <GR/CH> button to choose group ID from A to E.

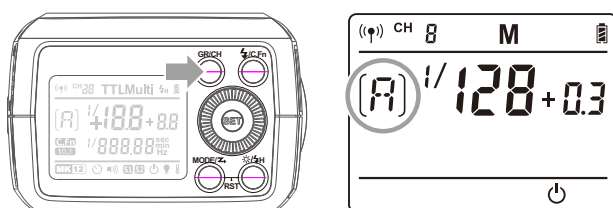

Positioning and Operation Range (Example of wireless flash shooting)

- Autoflash Shooting with One Slave Unit

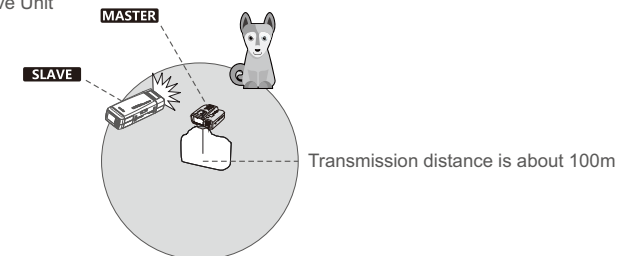


- Use the supplied stand to position the slave unit.
- Before shooting, perform a test flash and test shooting.
- The transmission distance might be shorter depending on the conditions such as positioning of slave units, the surrounding environment and whether conditions.
- With a lot of wireless signal interference conditions, if you miss flash, please change the wireless communication channel.


Wireless Multiple Flash Shooting

You can divide the slave units into two or three groups and perform TTL autoflash while changing the flash ratio (factor). In addition, you can set and shoot with a different flash mode for each firing group, for up to 5 groups.

- Auto Shooting with Two Slave Groups

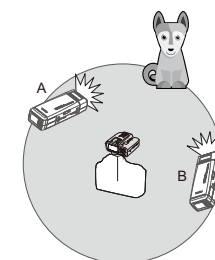

- Auto Shooting with Three Slave Groups

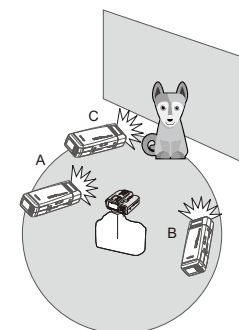

- When using the AD200 and Godox X1 series trigger together, the X1 can control the flash function such as:
- Flash Mode: TTL, M, Multi
 - Sync Mode: First-curtain sync, second-curtain sync and High-speed sync
 - Control the power level
 - Modeling Lamp turn on or off
 - Beeper turn on or off

C.Fn: Setting Custom Functions

The following table lists the available and unavailable custom functions of this flash.

Custom Function Signs	Functions	Setting Signs	Settings & Descriptions	Restrictions
F1	Beeper	ON	ON	NO
		OFF	OFF	
F2	S1/S2 mode selection	OFF	OFF	M mode
		S1	S1 mode	
		S2	S2 mode	
F3	Auto standby	OFF	OFF	NO
		30 min	Auto standby	
		60 min	without	
		90 min	any operation	
F4	Delay flash	OFF, 0.01~30s	Can be triggered as second curtain	M/Multi mode
F5	Mask	OFF	OFF	M mode
		N1	ON: Trigger 2 times for 1 cycles, 1th flash of trigger.	
		N2	ON: Trigger 2 times for 1 cycles, 2th flash of trigger.	
F6	t0.1 display	ON	Display	M mode
		OFF	Not display	


- Long press **<C.Fn>** button for 2 seconds to enter the **C.Fn** menu.
- Select the custom function No.
 - Turn the Selection Dial to select the custom function No.
- Change the setting
 - Press **<SET>** button and the Setting No. blinks.
 - Turn the Select Dial to set the desired number. Press **<SET>** button will confirm the settings.
- Exit C.Fn menu
 - Press **<MODE/Z>** button to exit.

Other Applications

Wireless Control Function

The flash unit is built in with a Wireless Control Port so that you can wirelessly adjust the power level of the flash and the flash triggering. To control the flash wirelessly, you need a FT-16 remote control set (on-camera and on-flash). Insert its receive end into the Wireless Control Port on the flash and insert the transmit end into the camera hot shoe. Settings made on the hotshoe-mounted transmit and receive ends will be wirelessly communicated to the flash. Then you can press the camera shutter release button to trigger the flash. You can also hold the transmit end at hand to control your off-camera flash.

- For full instructions on the use of FT series remote control, see its user manual.
- Turn off the AD200 wireless function.

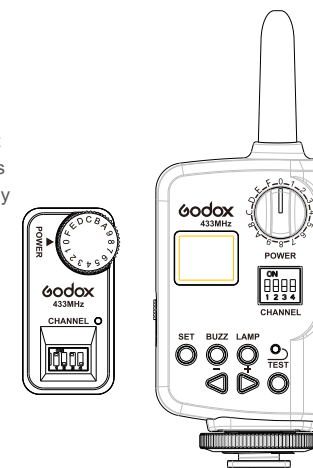

Sync Triggering

The Sync Cord Jack is a $\Phi 3.5\text{mm}$ plug. Insert a trigger plug here and the flash will be fired synchronously with the camera shutter.

Protection Function

1. Over-Temperature Protection

- To avoid overheating and deteriorating the flash head, do not fire more than 40 continuous flashes in fast succession at 1/1 full power. After 40 continuous flashes, allow a rest time of at least 10 minutes.
 - If you fire more than 40 continuous flashes and then fire more flashes in short intervals, the inner over-temperature protection function may be activated and make the recycling time over 10 seconds. If this occurs, allow a rest time of about 10 minutes, and the flash unit will then return to normal.
 - When the over-temperature protection is started, is shown on the AV display.
- Number of flashes that will activate over-temperature protection:**

Power Output Level	Number of Flashes	
	Speedlite flash head	Bare bulb flash head
1/1	40	60
1/2+0.7	50	80
1/2+0.3	60	100
1/2	75	120
1/4(+0.3,+0.7)	100	150
1/8(+0.3,+0.7)	200	200
1/16(+0.3,+0.7)	300	300
1/32(+0.3,+0.7)	500	500
1/64(+0.3,+0.7)	1000	1000
1/128(+0.3,+0.7)		

Number of flashes that will activate over-temperature protection in high-speed sync triggering mode:

Power Output	Times	
	Speedlite flash head	Bare bulb flash head
1/1	20	50
1/2(+0.3,+0.7);	30	60
1/4(+0.3,+0.7);	50	75
1/8(+0.3,+0.7);	75	100
1/16(+0.3,+0.7)	80	150
1/32(+0.3,+0.7)	100	200
1/64(+0.3,+0.7);		
1/128(+0.3,+0.7);		

2. Other Protections

- The system provides real-time protection to secure the device and your safety. The following lists prompts for your reference:

Prompts on LCD Panel	Meaning
E1	A failure occurs on the recycling system so that the flash cannot fire. Please restart the flash unit. If the problem still exists, please send this product to a maintenance center.
E2	The system gets excessive heat. Please allow a rest time of 10 minutes.
E3	The voltage on two outlets of the flash tube is too high. Please send this product to a maintenance center.
E9	There are some errors occurred during the upgrading process. Please using the correct firmware upgrade method.

Technical Data

Model	AD200	
Wireless Slave Unit Mode	Radio transmission mode (compatible with Nikon & Canon & Sony)	
Flash Mode	Wireless off	M/Multi
	Slave unit of radio transmission	TTL/ M/Multi
Compatible Cameras under Radio Transmission (as slave unit)	Nikon cameras (X1N as master unit)	
	Canon EOS cameras (X1C as master unit)	
	Sony cameras (X1S as master unit)	
Guide No. (1/1 Output)	Speedlite flash head: 52 (m ISO 100, @35mm)	
	Bare bulb flash head: 60 (m ISO 100, with the AD-S2 standard reflector, @28mm)	
Flash Duration t.01 (approx.)	Speedlite flash head: 1/220 to 1/13000 seconds	
	Bare bulb flash head: 1/220 to 1/11300 seconds	
POWER	200W	
Power Output	8 steps: 1/128~1/1	
Stroboscopic Flash	Provided (up to 90 times, 99Hz)	
Flash Exposure Compensation (FEC)	Manual. FEB: ±3 stops in 1/3 stop increments.	
Sync mode	High-speed sync (up to 1/8000 seconds), first-curtain sync, and second-curtain sync	
Delay Flash	0.01~30 seconds	
Mask	√	
Beeper	√	
Modeling Lamp (LED)	√	
Optic Slave Flash	S1/S2	
Flash Duration Indication	√	
Wireless Flash (2.4G transmission)		
Wireless flash function	Slave, Off	
Controllable slave groups	5 (A, B, C, D, and E)	
Transmission range (approx.)	100m	
Channels	32 (1~32)	
Power Supply		
Power Supply	Lithium battery pack (14.4V/2900mAh)	
Full Power Flashes	500	
Recycle Time	Approx. 0.01-2.1s	
Battery Indicator	√	
Power Indication	Power standby automatically after approx. 30 minutes of idle operation.	
Sync Triggering Mode	3.5mm sync line, Wireless control port	
Color Temperature	5600±200k	
Dimensions		
Dimension	168x75x50mm (flash head not included)	
Net Weight	560g (flash head & battery not included)	

Firmware Upgrade

This flash supports firmware upgrade through the USB port. Update information will be released on our official website.



- USB connection line is not included in this product. The USB port is a standard Micro USB socket. Common USB connection line is applicable.

Note: Press <MODE/ZA> button and turn the flash on, the firmware update version (e.g. Version 1.0 will read U-1.0) will be displayed on the panel.

Maintenance

- Shut down the device immediately should abnormal operation be detected.
- Avoid sudden impacts and the product should be dedusted regularly.
- It is normal for the flash tube to be warm when in use. Avoid continuous flashes if unnecessary.
- Maintenance of the flash must be performed by our authorized maintenance department which can provide original accessories.
- This product, except consumables e.g. flash tube, is supported with a one-year warranty.
- Unauthorized service will void the warranty.
- If the product had failures or was wetted, do not use it until it is repaired by professionals.
- Changes made to the specifications or designs may not be reflected in this manual.