

SAILOR 6248 VHF



Thrane & Thrane

www.busse-yachtshop.de | info@busse-yachtshop.de

SAILOR 6248 VHF

User manual

Document number: 98-131186-A

Release date: May 24, 2011

Disclaimer

Any responsibility or liability for loss or damage in connection with the use of this product and the accompanying documentation is disclaimed by Thrane & Thrane. The information in this manual is provided for information purposes only, is subject to change without notice and may contain errors or inaccuracies.

Manuals issued by Thrane & Thrane are periodically revised and updated. Anyone relying on this information should acquire the most current version e.g. from <http://www.thrane.com> or from the distributor.

Thrane & Thrane is not responsible for the content or accuracy of any translations or reproductions, in whole or in part, of this manual from any other source.

Copyright

© 2011 Thrane & Thrane A/S. All rights reserved.

Trademark Acknowledgements

- **Thrane & Thrane** is a registered trademark of Thrane & Thrane A/S in the European Union and the United States.
- **SAILOR** is a registered trademarks of Thrane & Thrane A/S.
- Other product and company names mentioned in this manual may be trademarks or trade names of their respective owners.

GPL notification

The software included in this product contains copyrighted software that is licensed under the GPL/LGPL. The verbatim licenses can be found online at:

<http://www.gnu.org/licenses/old-licenses/gpl-2.0.html>

<http://www.gnu.org/licenses/old-licenses/lgpl-2.1.html>

You may obtain the complete corresponding source code from us for a period of three years after our last shipment of this product, which will be no earlier than December 31, 2015, by sending a money order or check for DKK 50 to:

SW Technology/GPL Compliance,
Thrane & Thrane A/S,
Lundtoftegaardsvej 93D
2800 Lyngby
DENMARK

Please write "source for product SAILOR 6248 VHF" in the memo line of your payment.

You may also find a copy of the source at <http://www.thrane.com/foss>.

This offer is valid to anyone in receipt of this information.

Warranties

Any attempt to install or execute software not supplied by Thrane & Thrane on this device will result in the warranty being void. Any attempt to modify the software on this device in a way not specified by Thrane & Thrane will result in the warranty being void.

Safety warning

The following general safety precautions must be observed during all phases of operation, service and repair of this equipment. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture and intended use of the equipment. Thrane & Thrane assumes no liability for the customer's failure to comply with these requirements.

Ground the equipment

To minimise shock hazard, the SAILOR 6248 VHF unit must be connected to an electrical ground and the cable instructions must be followed.

RF exposure hazards and instructions

Your Thrane & Thrane radio set generates electromagnetic RF (radio frequency) energy when transmitting. To ensure that you and those around you are not exposed to excessive amounts of energy and thus to avoid health hazards from excessive exposure to RF energy, all persons must be at least 3ft (0.9 m) away from the antenna when the radio is transmitting.

Warranty limitation

IMPORTANT - The radio is a sealed waterproof unit (classified IPX8). To create and maintain its waterproof integrity it was assembled in a controlled environment using special equipment. The radio is not a user maintainable unit, and under no circumstances should the unit be opened except by authorized personnel. Unauthorized opening of the unit will invalidate the warranty.

Installation and service


Installation and general service must be done by skilled service personnel.

Compass safe distance

Minimum safety distance: 0.85 m from the SAILOR 6248 VHF.

Emergency calls

Make sure your VHF Radio is on CH16

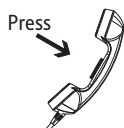

or



Use the **HANDSET** or **SPEAKER MICROPHONE** for voice calling

MAYDAY-MAYDAY-MAYDAY

This is

NAME-NAME-NAME

CALLSIGN

or other **IDENTIFICATION**

OWN ID

SHIP's NAME: _ _ _ _ _

CALLSIGN: _ _ _ _ _



MAYDAY

NAME of the **VESSEL** in distress
CALLSIGN or other **IDENTIFICATION**

POSITION

given as latitude and longitude

or

If latitude and longitude are not known
or if time is insufficient,
in relation to a known geographical location
NATURE of distress

Kind of **ASSISTANCE** required

Any other useful **INFORMATION**

99-133789

Preface

Radio for occupational use

The SAILOR 6248 VHF fulfils the requirements of the EC directive 1999/5/EC, Radio and Telecommunications Terminal Equipment and is intended for use in maritime environment.

SAILOR 6248 VHF is designed for *occupational use only* and must be operated by licensed personnel only.

SAILOR 6248 VHF is not intended for use in an uncontrolled environment by general public.

SAILOR 6248 VHF is designed for installation by a skilled service person.

Training information

The SAILOR 6248 VHF is designed for *occupational use only* and is also classified as such. It must be operated by licensed personnel only. It must only be used in the course of employment by individuals aware of both the hazards as well as the way to minimize those hazards

The radio is thus NOT intended for use in an uncontrolled environment by general public. The SAILOR 6248 VHF has been tested and complies with the FCC RF exposure limits for *Occupational Use Only*. The radio also complies with the following guidelines and standards regarding RF energy and electromagnetic energy levels including the recommended levels for human exposure:

- FCC OET Bulletin 65 Supplement C, evaluating compliance with FCC guidelines for human exposure to radio frequency electromagnetic fields.
- American National Standards Institute (C95.1) IEEE standard for safety levels with respect to human exposure to radio frequency electromagnetic fields, 3 kHz to 300 GHz
- American National Standards Institute (C95.3) IEEE recommended practice for the measurement of potentially hazardous electromagnetic fields - RF and microwaves.

Below the RF exposure hazards and instructions in safe operation of the radio within the FCC RF exposure limits established for it are described.

Warning

Your Thrane & Thrane radio set generates electromagnetic RF (radio frequency) energy when it is transmitting. To ensure that you and those around you are not exposed to excessive amounts of that energy (beyond FCC allowable limits for occupational use) and thus to avoid health hazards from excessive exposure to RF energy, FCC OET bulletin 65 establishes an Maximum Permissible Exposure (MPE) radius of 3 ft. (0.9m) for the maximum power of your radio (25W selected) with an half wave omni-directional

antenna having a maximum gain of 3 dB (5.2dBi). This means all persons must be at least 3 ft. (0.9m) away from the antenna when the radio is transmitting.

Installation

1. An omni-directional antenna with a maximum power gain of 5.2 dBi must be mounted at least 9.6 ft. (2.9m) above the highest deck where people may be staying during radio transmissions. The distance is to be measured vertically from the lowest point of the antenna. This provides the minimum separation distance which is in compliance with RF exposure requirements and is based on the MPE radius of 3 ft. (0,9m) plus the 6.6 ft. (2m) height of an adult.
2. On vessels that cannot fulfil requirements in item 1, the antenna must be mounted so that its lowest point is at least 3 ft. (0.9m) vertically above the heads of people on deck and all persons must be outside the 3 ft. (0.9m) MPE radius during radio transmission.
 - Always mount the antenna at least 3ft (0.9m) from possible human access.
 - Never touch the antenna when transmitting
 - Use only authorized T&T accessories.
3. If the antenna has to be placed in public areas or near people with no awareness of the radio transmission, the antenna must be placed at a distance not less than 6 ft. (1.8m) from possible human access.

Failure to observe any of these warnings may cause you or other people to exceed FCC RF exposure limits or create other dangerous conditions.

Manual overview

This manual has the following chapters and appendices:

- *Introduction* contains a description of the VHF radio.
- *Operation* explains how to make and receive voice calls over VHF, including how to use and set-up scanning, watch and replay.
- *Service & maintenance* contains support information including lists of accessories and a troubleshooting guide.
- Appendix with *Specifications & Approval* and *Maritime channels*.

Important

All installation information and instructions are not covered in this manual. Please download the SAILOR 6248 VHF **Installation manual** (98-133233) at <http://extranet.thrane.com/>.

In the installation manual you can read how to mount the VHF radio and how to connect accessories and external equipment, including detailed system configuration examples with cable specifications.

Related documents

Title and description	Document number
SAILOR 6248 VHF, Installation guide	98-132282
SAILOR 6248 VHF Installation manual (download only)	98-133233
Emergency call sheet	98-133795

Table of Contents

Chapter 1 Introduction

VHF radio	1
Accessories available	4

Chapter 2 Operation

Overview	7
General use and navigation	8
VHF radio communication	11
Watch	15
Scan	15
Phone book	16
Replay function	18
Setup	19

Chapter 3 Service & maintenance

Contact for support	25
Maintenance	25
Troubleshooting guide	26
Warranty and returning units for repair	29

App. A Specifications & Approval

Transceiver unit SAILOR 6248 VHF	31
SAILOR 6090 Power Converter 24–12 V	34
Declaration of conformity	35

App. B	Maritime channels	
	International channels (INT)	37
	US channels	38
	CA channels	39
	BI channels	40
Glossary	41
Index	43

Introduction

VHF radio

SAILOR 6248 VHF is approved to R&TTE, FCC and Industry Canada and is waterproof to the IPx8 and IPx6 standard. As part of the required safety equipment, use the SAILOR 6248 VHF in an emergency situation. However the best way to guarantee functionality in an emergency situation, is to use the radio in daily communication on board.



The VHF radio is a simplex/semi duplex VHF radio. It is designed with an easy-to-use menu-driven setup. You use the soft-keys and the keypad to enter the desired functions, you browse and select a setting using the right selection knob. The large display can be customized for optimum readability and visibility both day and night with several color themes.

The VHF radio can replay the last 240 s of received voice messages. This is a useful feature to minimize misunderstandings and to record messages when the radio is unattended.

With SAILOR connection boxes the VHF radio connects easily to external equipment like additional handsets, water proof hand microphones, control speaker microphone or external speaker. The Ethernet interface enables the VHF radio to be connected to ThraneLINK for remote control and service updates.

For a list of accessories available for the VHF radio see *Accessories available* on page 4 and check with your nearest distributor.

Controls on the front plate




1. Loudspeaker.
2. Four soft keys with function title in the display.
3. Large display.
4. Keys 0 to 9 to enter numbers or text.
5. **DW** button to toggle the watch function (dual or triple).
6. **16/C** quick selection key for channel 16 and the programmed call channel.
7. Connector for Handset or Handmicrophone.
8. Squelch control to mute background noise.
9. Volume knob with key-press function for volume control and power on/off.
10. Selector and dim knob with key-press function for general operation, display color selection and dimming.
11. **1W** button to toggle between high and low power.
12. Replay button to play back up to 240 s voice message.





SAILOR 6248 VHF display

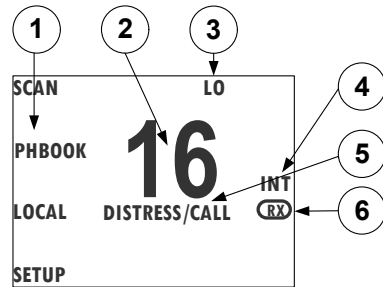



The picture shows the display after start-up. The display holds various fields of information, depending on the currently selected function.

1. Functions you can select with the soft keys.
 2. Current working channel.
 3. **System property icons** with information relevant for the currently selected functions.
 4. Channel properties next to the currently selected VHF channel (if any).
 5. **Service line** containing current temporary information relevant for the current channel or function.
 6. Current state: RX or TX.
- For a detailed description of the information shown for each of the functions available see the chapter *Operation* on page 7.




Accessories available

Accessory	Description
SAILOR 6201 Handset with cradle (additional)	One SAILOR 6201 Handset with cradle is included in the delivery of the SAILOR 6248 VHF. You can connect another 2 SAILOR 6201 Handsets. 
SAILOR 6203 Handset with cradle	SAILOR 6203 Handset with cradle, waterproof to IPx6. 
SAILOR 6202 Hand Microphone	You can use the SAILOR 6202 (waterproof to IPx6 and IPx8) Hand Microphone instead of the handset. 
SAILOR 6204 Control Speaker Microphone	With the SAILOR 6204 Control Speaker Microphone you can control the VHF functions of the SAILOR 6248 VHF. 
SAILOR 6207 Connection Box for parallel handsets	The SAILOR 6207 Connection Box including Connection Cable 406209-941 is used for easy installation of several SAILOR 6201/03 Handsets. 

Accessory	Description
SAILOR 6208 Control Unit Connection Box	<p>The SAILOR 6208 Connection Box including Connection Cable 406208-941 is used for easy installation of external equipment and accessories:</p> <ul style="list-style-type: none"> • Max. 4 SAILOR 6204 Control Speaker Microphones • VDR • SAILOR 6270 External loudspeaker 
Connection cables	<p>5m connection cable for bulkhead mount: Use this cable in installations where the SAILOR 6201 or 6203 Handset is not connected directly to the SAILOR 6248 VHF, but located in a different position.</p> <p>5m Connection cable, 1x10 pole: Use this cable in installations when connecting external equipment to the SAILOR 6248 VHF. This cable is included in the SAILOR 6207 Connection Box for parallel handsets.</p> <p>5 m Connection cable for SAILOR 6204 Control Speaker Microphone, 1x12 pole (part number: 406204-940)</p>
SAILOR 6270 External loudspeaker	<p>If you need an additional external loudspeaker you can connect a SAILOR 6270 Loudspeaker. It provides 6 W output power.</p> 
SAILOR 6197 Ethernet Switch	<p>The SAILOR 6197 Ethernet Switch is used in installations with ThraneLINK. The Ethernet switch has 5 ports.</p> 
SAILOR 6090 Power Converter 24 V to 12 V DC	<p>The SAILOR 6090 Power Converter is used to provide 12 V DC for the SAILOR 6248 VHF from a 24 V DC power source.</p> 

System configuration – example

The SAILOR 6248 VHF can be customized to suit your installation. The following illustration is one example of a system. For further configuration examples see the installation manual, Appendix B, *System configurations*.

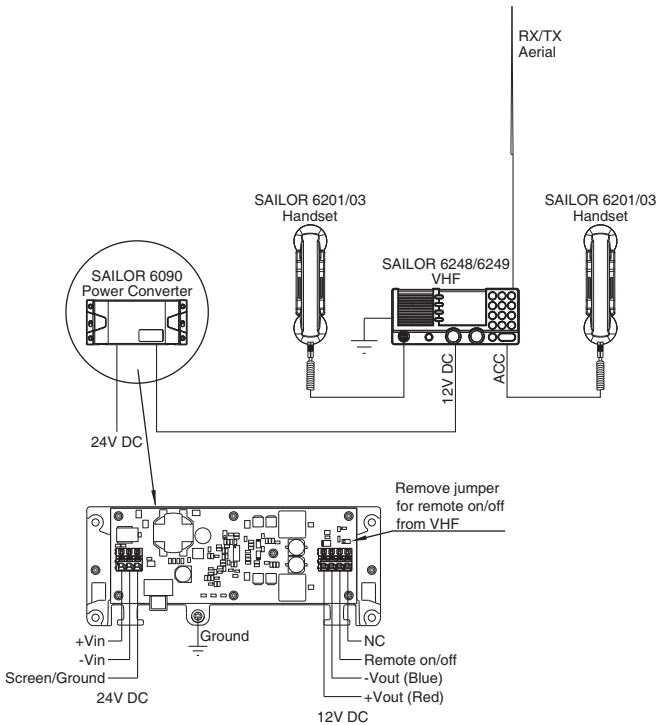

99-133232-A

Operation

Note

Before using the VHF radio make sure that the VHF, power cable and other external equipment are connected properly. For installation instructions see the *SAILOR 6248 VHF Installation manual (download only)*.

Overview

In this chapter you find detailed instructions and guidelines for:

- *General use and navigation*
- *VHF radio communication*
- *Watch*
- *Scan*
- *Phone book*
- *Replay function*
- *Setup*


General use and navigation

Power on and volume in handset and speaker

The VHF radio has a dual-function on/off knob for power on/off and volume control.

To power on the VHF radio press the on/off knob.

To power off the VHF radio, press and hold the on/off knob and follow the instructions in the display.

To adjust the speaker volume, turn the volume knob (clockwise = louder, counter clockwise = softer, until muted). When muted,  is shown in the display.

To adjust the volume of the handset earpiece see *Radio setup* on page 19.



Working channel and changing settings

Use the **selector knob** to browse and select:

- To browse and select **settings**, turn the selector knob and press for accept.
- To select a **working channel** use the selector knob or enter the channel number using the keypad. You can change channels whenever the channel designator is displayed.



Note

A single, short press on the **16/C** key always brings you to **channel 16**, the international calling and distress channel, no matter what state the radio is in.



Speaker devices

The VHF radio can be equipped with the following speaker devices:


- SAILOR 6201/6203 Handset with cradle and PTT (Push To Talk) button.
- SAILOR 6202 Hand Microphone with PTT button.
- SAILOR 6204 Control Speaker Microphone with PTT button.

See *Radio setup* on page 19 for controlling the connected speaker devices.

Soft-key functions

A number of functions of the SAILOR 6248 VHF are accessed and set using the four soft keys to the left of the display. The current function of a soft key is shown in the display next to the soft key.

The following soft-key functions are available from top-level standby:

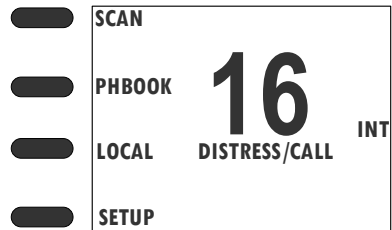

Soft key	Function
SCAN	Scanning menu with start, stop and tag function
PHBOOK	Phone book
LOCAL	Local mode, 10 dB attenuation
SETUP	Setup pages for <i>Radio setup</i> , <i>Channel setup</i> , <i>Power Supply</i> , <i>System setup</i> and <i>Controller setup</i> .

Changing the display light, night view

Red text on black background is available for optimal night vision.

To **dim the display backlight**, e.g. to give comfortable night vision, press, hold and turn the selector knob anti-clockwise. The display shows a brightness bar. At the brightness value 45 the display changes to **night view** with red text on black background.

To return to day vision press, hold and turn the selector knob clockwise until the display changes and it reaches the desired brightness.

The radio has two colour themes: Black text on a white background (default) or white text on black background. To change the **color theme** see *System setup* on page 22.



Alternative colour scheme

Adjusting the squelch level

With the Squelch control you can manually adjust and suppress noise in order to optimize the quality of the received radio communication.



When hearing noise or an unwanted signal, turn the squelch button clockwise until the speaker is muted.

VHF radio communication

Basic VHF operation

You can make VHF calls using the Handset or another speaker device.

Note

A single, short press on the **16/C** key always brings you to **channel 16**, the international calling and distress channel, no matter what state the radio is in.



Quick guide to radio telephone calls

1. Press the **PTT** button on the speaker device. When the TX indicator lights up in the display, the transmission is active.
2. To enable reception of a radio signal release the **PTT** button.



Note

Press **PTT** only when you are talking. Always say “Over.” just before releasing the PTT button.

One transmission is limited to **5 minutes** duration.

Receiving a radio telephone call on channel 16

When you hear your call name in the loudspeaker, proceed as follows:

1. The symbol **RX** shows that the radio is receiving on the channel displayed.
2. Lift the Handset or take another speaker device.
3. Press the **PTT** button. The symbol **TX** shows that the radio is transmitting on the channel displayed.
4. Repeat the name of the station calling you and say: “This is [your ship’s name]”.
5. Suggest a working channel other than 16 by saying: “Channel [suggested channel number]”.

6. Say: “Over.” and release the **PTT** button to allow the caller to confirm the suggested new channel.
7. Switch to the new channel using the keypad or by turning the selector knob to the agreed channel and begin your conversation. Press **PTT** only when you are talking.

Making a radio telephone call on channel 16

To make a radio telephone call, proceed as follows:

1. Select channel 16.
2. Lift the Handset or take another speaker device.
3. Press the **PTT** button. The symbol **TX** shows that the VHF radio is transmitting on the working channel displayed.
4. Say the name of the station you are calling three times.
5. Say: “This is [your ship’s name]”.
6. Say: “Over.” and release the **PTT** button to listen. The symbol **RX** shows that the radio is receiving on the working channel displayed.
7. When answered, agree upon a working channel other than 16.
8. Switch to the new channel by entering the channel number to the agreed channel and begin your conversation.

VHF channels

You can change channels whenever the channel designator is displayed. Enter the channel using the keypad or turn the selector knob to browse through all channels that are available in the selected channel table. Only valid channel numbers are accepted. When browsing channels they appear in the display in the following order:

- Primary channels
- Weather channels (if any)
- Private channels (if any)

With a long press on the **16/C** key the radio changes to the call channel (channel 16 for the channel tables INT and BI, and channel 9 for the channel tables US and CA).




VHF channel table	Description
Primary channels (no prefix)	For details see <i>Maritime channels</i> on page 37. For instructions how to change a channel table see <i>Channel setup</i> on page 21.
Weather (WX)	Weather channels have the prefix W . (For US and CA channels only.)
Private (PRIV)	Up to 100 user-defined private channels.

For more information on how to setup channels setup see *Channel setup* on page 21. Contact your local dealer if you are interested in having private channels.

Channel information always available in the display

For some functions and for setup pages, the channel and radio information has moved to the bottom section of the display. You can change channels whenever the channel designator is displayed.

The channel number displayed in this section always reflects the communication channel on which the radio is tuned into for communication. If **PTT** is pressed the radio transmits on the displayed channel. If a signal is received, it is received on the displayed channel.

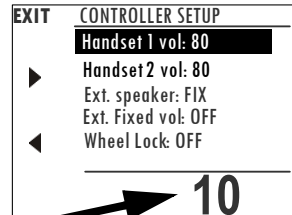

(Example: Radio setup)

Reduced transmission power LO

Press the key **1W** to toggle the transmit power between low (1 W, **LO** is displayed) and high (25 W).

1W

US channels: Local mode, 10 dB attenuation

Press the soft key **LOCAL** to add 10 dB attenuation.

Note

Local mode is automatically exited when using channel 16. If you want to use attenuation on channel 16 or a call channel, you must set it manually each time.

US channels: Overriding LOW power for channels 13 and 67

When running in US mode you can override low power on the alternative call channels 13 and 67. Do as follows:

1. With the VHF radio set to 13 and 67, press **PTT** on the speaking device.
2. Press the soft key **OVERRIDE** to transmit with full power.
When you release the **PTT** button, the transmission power goes back to low.

Watch


The SAILOR 6248 VHF radio has a watch function with dual or triple watch. In dual watch, the working channel and channel 16 are watched. In triple watch (available for channel tables US and CA) the working channel, channel 16 and the programmed call channel are watched. You can select the working channel in any watch mode by turning

the selector knob. If there is a signal in one of the watched channels, the display shows the channel in which the signal is received. For instructions how to setup **TRIPLE WATCH** see *Radio setup* on page 19.

To start the watch function press the key **DW**. The radio enters the watch mode and the text WATCH with the channel numbers watched is shown below the current channel number.



To stop the watch function press the key **DW** again or **PTT** on the speaking device.

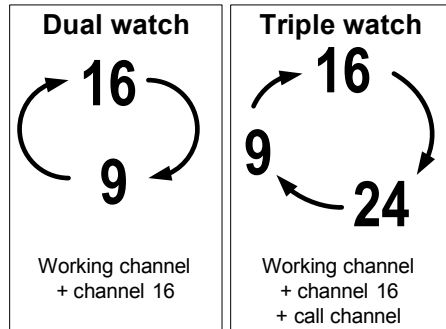

Scan

The radio has a scanning function for tagged voice channels. Any available voice channel, including weather and private channels, can be tagged and added to the scanning sequence. As default the radio scans with priority scanning of channel 16. If a signal is received while in any scanning mode, only channel 16 continues to be watched.

If there is a signal in one of the scanned channels, the display shows the channel in which the signal is received. If PTT is pressed while scanning, the scanning stops, the radio is tuned into the displayed channel and transmission starts immediately on the displayed working channel.

To start scanning press the soft key **SCAN**. The SCAN menu is shown. Press **START** to start scanning. To leave the SCAN menu, but not the scanning procedure, press **EXIT**.

To stop scanning press **STOP, QUIT** if not in the SCAN menu, or press **PTT** on the speaking device.

To tag a channel for scanning turn the selector knob until the wanted channel is in the display. Then press the soft key **TAG**. The display shows the channel number and the word **TAG** at the right side of the display.



To remove a channel from the scanning sequence turn the selector knob until the tagged channel is displayed. Then press the soft key **TAG** to remove the tag.

To see all tagged channels press the soft key **FILTER** and turn the selector knob. Press the soft key **EXIT** to leave the FILTER function.

For details how to set up the scanning function see *Radio setup* on page 19.

Note

The displayed working channel is temporarily included in the scanning list (although no TAG icon is shown).

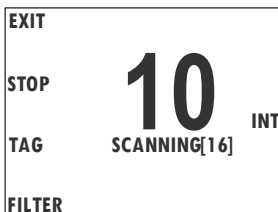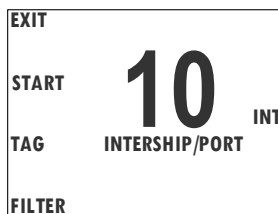

Phone book

You can enter up to 200 contacts. A contact has the following details:

- Name (up to 20 characters)
- Type (SHIP, GROUP or COAST STATION)
- Channel

The phone book is always sorted alphabetically by contact names. Use the soft key **FILTER** to toggle between CONTACTS - ALL, COAST, SHIP or GROUP.

Use the phone book to switch to the preferred channel for a particular contact. Select the contact to display details and select **USE**. The channel is selected and the phone book closes automatically.

Adding a contact to the phone book

To add a contact to the phone book do as follows:

1. Press the soft key **PHBOOK**.
2. Press the soft key **ADD** and fill in the details for the new contact.

Contact	Description
NAME	Enter the name by turning the selector knob to the desired letter, press the selector knob to accept the letter and advance to the next letter. To finish press the soft key OK .
TYPE	Press and turn the selector knob to select SHIP, GROUP or COAST STATION.
Ch (optional)	Press and turn the selector knob to select the preferred channel for this contact, press the soft key OK .

3. Press the soft key **SAVE** to save the contact information.
4. Press the soft key **EXIT** to leave the phone book.

Editing a contact

1. Press the soft key **PHBOOK**.
2. Select the contact.
3. Press and turn the selector knob to browse through the details of the contact and continue as described in *Adding a contact to the phone book* from step 2 onwards.

Deleting a contact

1. Press the soft key **PHBOOK**.
2. Turn the selector knob to browse to the contact you want to delete.
3. Press the soft key **DELETE**.
4. Press **EXIT** to leave the phone book and return to VHF operation.

Replay function

Replay allows the operator to playback received voice messages in the loudspeaker. Recording is activated automatically when a signal is received. Recording is not possible during playback. Up to 60 tracks or 240 seconds can be handled. During a power cycle the recorded tracks are deleted.

The recorded channel is displayed. The message length is shown in seconds. The display shows how old the message is. If the 240 s storage limit is reached, the oldest data is overwritten.

Replaying recorded messages

Press the Replay button (short press). The latest message (message) is repeated. Information about this message is shown in the display.



To stop replaying the message press the soft key **STOP**.

To rewind through the recorded messages make a long press on the Replay button.

To stop replaying a message press **STOP** or the PTT button on the speaking device.

If a signal is received while in replay mode the display shows **RX** in the display.

Setup

The following setup pages are described in this section of the manual:

- *Radio setup*
- *Channel setup*
- *Power Supply*
- *System setup*
- *Controller setup*


Accessing a setup page

To change a setting in one of the **SETUP** pages, do as follows

1. Press the soft key **SETUP**.
2. Press the arrow soft key ► or ◀ to advance to **SETUP** page you want to edit.
3. Turn the selector knob to go to a setting, then press the selector knob to change the setting.
4. Press **EXIT** to return to normal radio operation.

Radio setup

Parameter	Description
Scan Hang Time	Scan hang time, in seconds on an active receiving working channel. The time is measured from the signal is detected. The radio remains on the channel for the set time interval, if a signal was detected. OFF: Resumes scanning when signal disappears (default) 4, 6, 8, 10: Hang time in seconds.

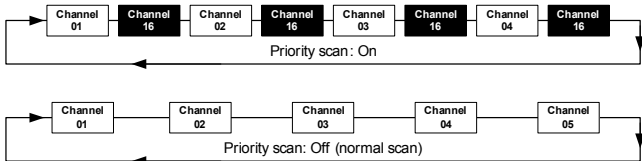Parameter	Description
Watch Mode	<p>DUAL: Dual watch monitoring the working channel and the priority channel (channel 16, default for international channels).</p> <p>TRIPLE: Triple watch. The working channel is watched with the priority channel (channel 16) and the programmed call channel (if any, otherwise dual watch).</p>
Priority Scan	<p>ON: All channels tagged for scanning are scanned while monitoring channel 16. (default).</p> <p>OFF: Only the channels tagged for scanning are scanned in sequence, not channel 16, unless it is tagged for scanning.</p> 
ATIS code	<p>The ATIS code (Automatic Transmitter Identification System) is used for identification to marine coast and inland stations and its use is mandatory in a number of European inland waterways such as e.g. the river Rhine. Like the MMSI number the ATIS number is issued by the relevant authority.</p> <p>ATIS for foreign leisure crafts: For ships coming from states which are not member of the Regional Arrangement the ATIS-Code is based on the MMSI with a 9 as the first digit.^a</p> <p>Note: The ATIS number can be programmed once. If a wrong number has been entered and stored, or if there is a requirement to change it, contact your authorized dealer.</p>

- a. The Committee Rainwat in its 12.Meeting (October 2008) decided to change the building rules of the ATIS code for vessels coming from a country outside the RAINWAT arrangement.

Channel setup

Parameter	Description
Channel Mode	To select the channel table for the primary channel. Channel tables available: INT, BI, US, CA, ALT . See also <i>VHF channel table</i> on page 13.
Bandwidth	Selection of the bandwidth for the fixed pre-programmed channels. This is recommended from Radio Regulations: Wide: Wide band is 25kHz channel bandwidth (default) Narrow: Narrow band defines a channel bandwidth of 12.5kHz In narrow band mode the channel number is displayed as: <ul style="list-style-type: none"> • 2xx if the new frequency is between the original frequency in wideband mode • 4xx if the new frequency is the same as the original frequency in wideband mode
INT. Channels	<p>You can view the channel settings. Press the soft key ► to advance the channel numbers.</p> <p>Bandwidth: WIDE (default) or NARROW Tagged for scan: OFF (default) or ON</p> <p>For customizing, contact your authorized dealer. Press the soft key EXIT to return to CHANNEL SETUP.</p> <div data-bbox="714 794 1005 1013"> <p>EXIT INT. Channels Ch: 1 Rx: 160.6500 MHz Tx: 156.0500 MHz PORT-PUBLIC Bandwidth: WIDE Tagged for scan: OFF 10</p> </div>
BI. Channels	As described above.
US. Channels	As described above.
CA. Channels	As described above.
ALT. Channels	For customizing, contact your authorized dealer.
Private Channels	For customizing, contact your authorized dealer.

Power Supply

Parameter	Description
Monitor	Set this to ENABLED if the radio is connected to a SAILOR 6081 Power Supply Unit and Charger. Set this to DISABLED for any other power supply.
Status	Visible if ENABLED. Current status of the connected power supply.
Voltage	Visible if ENABLED. Current voltage.
Current	Visible if ENABLED. Current current.

System setup

SYSTEM SETUP	Description
System time & Date	View and set system time and date
Inactivity timeout	Inactivity time-out to exit functions (e.g. in setup) and return to the application. Range: 1 to 30 minutes, in 1 minute steps Default: 10 min.
Language	English
Theme	Changes the display colour. BlackOnWhite (default) WhiteOnBlack
Factory Defaults	Resets the radio to factory defaults. Press the selector knob and confirm the reset to factory default.
Radio Info:	SW Version: Software version of the radio S/N: Serial number of the radio TU IP: IP address of the radio
Password	If you need to change the identity of the radio (ATIS code), contact your local dealer.

Controller setup

Each of the controlling devices connected and powered has its own setting. The available settings may vary from controllers applied.

Controlling device	Description
Handset 1 vol:	Adjust earpiece volume for handset 1: ON, can be adjusted OFF and from 5 to 100, in steps of 5. Note: The handset connected to the front connector has top priority and is configured to ON. The volume can be adjusted from 0 to 500, in steps of 5.
Handset 2 vol:	Adjust earpiece volume for handset 2: OFF, can be adjusted from 5 to 100, in steps of 5. Note: If a handset is connected to the rear connector this value must be configured to a value (1-14).
Ext. speaker	FIX: Fixed level is set for external speaker REL: Relative level following volume adjustment of the internal speaker
Ext. fixed vol:	External speaker fixed volume: OFF , 5 to 100 in steps of 5
Wheel lock:	You can set a time interval after which the SQ, volume and selector knobs are locked and protected against unintentional use. Then a lock symbol is shown in the display. Press any key to unlock the knobs. OFF , 10s, 20s, 30s, 40s, 50s, 60s

Top-level standby soft-key functions and setup pages

TOP-LEVEL STAND-BY	
SCAN	EXIT START TAG FILTER
PHBOOK	EXIT ADD FILTER
LOCAL	
SETUP	EXIT ▶ ◀

SETUP PAGES	
RADIO SETUP	Scan Hang Time Watch mode* Priority Scan ATIS code
CHANNEL SETUP	Channel Mode Bandwidth Int. Channels Bl. Channels US. Channels CA. Channels ALT. Channels Private Channels
POWER SUPPLY	Monitor:
SYSTEM SETUP	System time & date Inactivity timeout Language Theme Factory Defaults Password Radio Info
CONTROLLER SETUP	Handset 1 vol Handset 2 vol Ext. Speaker Ext. fixed vol Wheel Lock

* for channel table US and CA

Service & maintenance

Contact for support

Contact your authorized dealer for technical service and support of the VHF radio. Before contacting your authorized dealer you can go through the troubleshooting guide to solve some of the most common operational problems.

Maintenance

Preventive maintenance

Maintenance of the SAILOR 6248 VHF can be reduced to a maintenance check at each visit of the service staff. Inspect the radio for mechanical damages, salt deposits, corrosion and any foreign material. Due to its robust construction and ruggedness the radio has a long lifetime. Anyway it must carefully be checked at intervals not longer than 12 months - dependent on the current working conditions.

Salt deposits

In case the equipment has been exposed to sea water there is a risk of salt crystallization on the keys and knobs and they may become inoperable. Clean the VHF radio and speaker microphones with fresh water.

Error messages and warnings

Errors and warning messages are shown in the display and are read-only.

Troubleshooting guide


Action	Symptom	Remedy
The radio will not turn on	The display is empty.	Check if power is present. Check fuse which is placed in the power connector. Check performance of power supply if connected to one.
No communication	The loudspeaker is mute.	Check the antenna installation. Check antenna cable. Check handset/Handmicrophone and cable.
Handset configuration	No sound in earpiece	The earpiece volume may be configured to OFF. See section <i>Controller setup in the user manual</i> on how to adjust the earpiece volume of the handset.
Device failure		If any of the checks and tests described in this section do not assist in resolving the difficulties experienced in the operation and/or performance of the VHF installation, a fault may have developed in the VHF radio itself. When contacting an authorized Thrane & Thrane representative be sure to provide as much information as possible describing the observed behavior - also including the type of the VHF radio, its serial number, and software release version (both found in the setup menu Controller Setup).

Action	Symptom	Remedy
WARNING: POWER SUPPLY LOST CONTACT	Power supply status cannot be monitored.	In Setup, Power Supply, set Monitor to disabled. You can only monitor the power supply if the radio is powered by a SAILOR 6081 Power Supply Unit and Charger.

Replacing the fuse in the power connector

One fuse is installed in the power connector. If the fuse is blown, do as follows:


1. Track down why the fuse was blown and solve the problem.
2. Take out the old fuse.
3. Insert the new fuse. The fuse rating is 10 A.T.

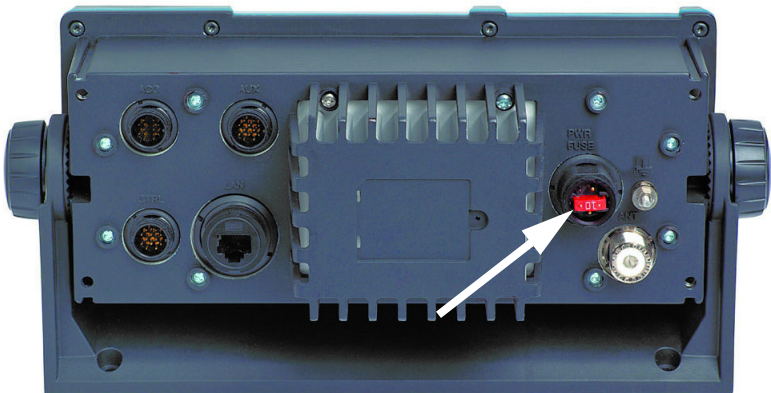

Replacing the fuse in the SAILOR 6090 Power Converter

One fuse is installed in the SAILOR 6090 Power Converter. If the fuse is blown, do as follows:

1. Track down why the fuse was blown and solve the problem.
2. Take out the old fuse.
3. Insert the new fuse. The fuse rating is 10 A T.

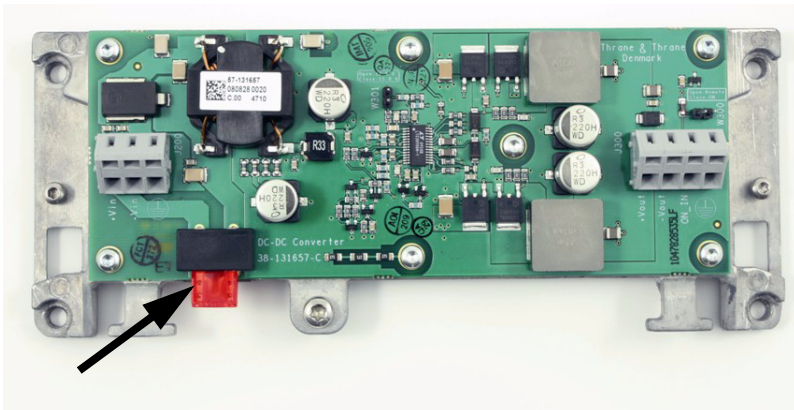

Warranty and returning units for repair

Should your Thrane & Thrane product fail, please contact your dealer or installer, or the nearest Thrane & Thrane partner. You will find the partner details on www.thrane.com where you also find the Thrane & Thrane Self Service Center web-portal, which may help you solving the problem.

Your dealer, installer or Thrane & Thrane partner will assist you whether the need is user training, technical support, arranging on-site repair or sending the product for repair.

Your dealer, installer or Thrane & Thrane partner will also take care of any warranty issue.

Repacking for shipment

Should you need to send the product for repair, please read the below information before packing the product.

The shipping carton has been carefully designed to protect the SAILOR 6248 VHF and its accessories during shipment. This carton and its associated packing material should be used when repacking for shipment. Attach a tag indicating the type of service required, return address, part number and full serial number. Mark the carton FRAGILE to ensure careful handling.

Note

Correct shipment is the customer's own responsibility.

If the original shipping carton is not available, the following general instructions should be used for repacking with commercially available material.

1. Wrap the defective unit in heavy paper or plastic. Attach a tag indicating the type of service required, return address, part number and full serial number.
2. Use a strong shipping container, e.g. a double walled carton of 160 kg test material.

3. Protect the front- and rear panel with cardboard and insert a 7 cm to 10 cm layer of shock-absorbing material between all surfaces of the equipment and the sides of the container.
 4. Seal the shipping container securely.
 5. Mark the shipping container FRAGILE to ensure careful handling.
- Failure to do so may invalidate the warranty.

Specifications & Approval

Transceiver unit SAILOR 6248 VHF

Item	Specification
Weight SAILOR 6248 VHF	< 1.50 kg (3.3 lbs) approximately
Box weight SAILOR 6248 VHF	3.8 kg (8.4 lbs) approximately, including SAILOR 6201 Handset and wall mount cradle, SAILOR 6090 Power Converter and Installation and user manual in box.
Dimensions	<p>Height: Outer dimension 107 mm, hole height for flush mount 89 mm</p> <p>Width: Outer dimension 241 mm, hole width for flush mount 227 mm</p> <p>Depth: Outer dimension from front of knobs 132 mm, depth for flush mount 94 mm</p>
Operating temperature	-25°C to 55°C (5°F to 131°F)
Storage temperature	-30°C to 80°C (-22°F to 176°F)
Power supply	12 VDC Nominal (10,8– 15,6 VDC)
Current consumption	Max. 7 A
Current consumption at 12 VDC without any accessories connected	<p>RX: 0.5 A</p> <p>TX: 5 A</p>

Item	Specification
Current consumption at 12 VDC with all accessories connected	RX: 0.7 A TX: 7 A
Frequency range	TX: 156,000 MHz – 157,425 MHz, RX: 156,000 MHz – 163.425 MHz

Item	Specification
Channel spacing	12.5 kHz and 25 kHz, all international maritime channels
Number of P channels	The radio may be programmed with up to 100 private channels that can be managed in all channel modes.
Modulation 25 kHz 12.5 kHz	16K0G3E 8K05G3E
Antenna	50 Ohm antenna, 50 Ohm female SO239 for PL259 plug
Water ingress	IPx8 and IPx6 all over. For flush-mount installations a sealing gasket is included in the delivery.
Transmitter	
Transmit power	Hi/Lo: 25 W and 1 W
RF output power	High: 25 W +0 dB / - 1.5 dB Low: 1 W +0 dB / - 1.5 dB
RF output power, Canada	High: 21 W ± 0.75 dB Low: 0.8 W ± 0.75 dB

Item	Specification
Frequency error	Below 500 Hz
Adjacent channel power	Below 75 dB
Conducted spurious emission	Below 0.25 μ W
Distortion	Below 3%
S/N ratio	Better than 46 dB
Receiver	
Sensitivity	< -119 dBm typically @ 20 dB SINAD CCITT weighted
LF power	Built-in loudspeaker: 6 W (at 5 kHz dev./1 kHz tone) External loudspeaker: 6 W / 8 Ohm
Distortion	Below 5%
S/N ratio	Better than 43 dB
Spurious emissions	Below 2 nW
Spurious response rejection	More than 74 dB
Intermodulation response	More than 73 dB
Co-channel rejection	Better than -10 dB
Adjacent channel selectivity	More than 74 dB
Blocking level	More than 94 dB μ V

SAILOR 6090 Power Converter 24–12 V

Item	Description
Weight	300 g
Dimensions	Height: 33 mm Width: 190 mm Depth: 85 mm
Operating temperature	-25°C to 55°C (5°F to 131°F)
Storage temperature	-30°C to 80°C (-22°F to 176°F)
Input voltage	21–32 VDC
Output voltage	12.5 VDC
Output current (max.)	8 A

Declaration of conformity

The SAILOR 6248 VHF complies with the specifications of EC directive 1999/5/EC concerning Radio & Telecommunications Terminal Equipment, enclosed in electronic copy on the next page.

Thrane & Thrane

Thrane & Thrane A/S

Declaration of Conformity with R&TTE Directive

The undersigned of this letter declares that the following equipment complies with the specifications of EC directive 1999/5/EC concerning Radio & Telecommunications Terminal Equipment.

Equipment included in this declaration

TT-6248A	SAILOR 6248 VHF transceiver	PN = 406248A
TT-6201A	SAILOR 6201 Handset	PN = 406201A
TT-6203A	SAILOR 6203 Handset WP	PN = 406203A
TT-6202A	SAILOR 6202 Hand microphone	PN = 406202A
TT-6207A	SAILOR 6207 Accessory Connection box	PN = 406207A
TT-6208A	SAILOR 6208 Control Unit Connection box	PN = 406208A

Equipment Applicability

SAILOR 6248 is a simplex/semi-duplex VHF radiotelephone designed for maritime communication within the frequency range 156.000 MHz to 163.425 MHz.

Declaration

SAILOR 6248 conforms to the RTTE directive with respect to
Article 3(1)(a) the protection of health and safety
Article 3(1)(b) electromagnetic compatibility requirements
Article 3(2) effective use of the spectrum and avoidance of harmful interference

Which is shown by conforming to EU harmonized standards

EN 300 162-2 V1.2.1,
EN 300 698-2 V1.2.1,
EN 60945 ed. 4,
EN 60950-1 ed. 2.

Manufacturer

Thrane & Thrane A/S Lundtoftegårdsvej 93D, DK-2800 Kgs. Lyngby, Denmark
Porsvej 2, DK-9200 Aalborg SV, Denmark

Place and Date

Aalborg, 16th May 2011



Chief Financial Officer
Svend Åge Lundgaard Jensen

CE 0470

Doc. no TT99-133814-A

Thrane & Thrane A/S · Lundtoftegårdsvej 93D · DK-2800 Kgs. Lyngby · Denmark
T +45 39 55 88 00 · F +45 39 55 88 88 · info@thrane.com · www.thrane.com
Bank: Danske Bank · Comp. reg.: 65 72 46 18 · VAT: DK-20 64 64 46



Maritime channels

International channels (INT)

Channels	TX MHz	RX MHz	SIMPLEX		DUPLEX	
			Intership	Port	Port	Public
1	156,050	160,650			●	●
2	156,100	160,700			●	●
3	156,150	160,750			●	●
4	156,200	160,800			●	●
5	156,250	160,850			●	●
6	156,300	156,300	●			
7	156,350	160,950			●	●
8	156,400	156,400	●			
9	156,450	156,450	●	●		
10	156,500	156,500	●	●		
11	156,550	156,550		●		
12	156,600	156,600		●		
13	156,650	156,650	●	●		
14	156,700	156,700		●		
15	156,750	156,750	●	●		
16	156,800	156,800	Distress and calling			
17	156,850	156,850	●	●		
18	156,900	161,500			●	●
19	156,950	161,550			●	●
20	157,000	161,600			●	●
21	157,050	161,650			●	●
22	157,100	161,700			●	●
23	157,150	161,750			●	●
24	157,200	161,800			●	●
25	157,250	161,850			●	●
26	157,300	161,900			●	●
27	157,350	161,950			●	●
28	157,400	162,000			●	●

Channels	TX MHz	RX MHz	SIMPLEX		DUPLEX	
			Intership	Port	Port	Public
60	156,025	160,625			●	●
61	156,075	160,675			●	●
62	156,125	160,725			●	●
63	156,175	160,775			●	●
64	156,225	160,825			●	●
65	156,275	160,875			●	●
66	156,325	160,925			●	●
67	156,375	156,375	●	●		
68	156,425	156,425		●		
69	156,475	156,475	●	●		
70	156,525	156,525	DSC			
71	156,575	156,575		●		
72	156,625	156,625	●			
73	156,675	156,675	●	●		
74	156,725	156,725		●		
75	156,775	156,775		● L)		
76	156,825	156,825		● L)		
77	156,875	156,875	●			
78	156,925	161,525		●	●	
79	156,975	161,575		●	●	
80	157,025	161,625		●	●	
81	157,075	161,675		●	●	
82	157,125	161,725		●	●	
83	157,175	161,775		●	●	
84	157,225	161,825		●	●	
85	157,275	161,875		●	●	
86	157,325	161,925		●	●	
87	157,375	157,375		● *)		
88	157,425	157,425		● *)		

L) 1 W TX power

*) Channel 87 and 88 became simplex channels following the introduction of AIS1 at 161.975 MHz and AIS2 on 162.025 MHz.

These are the default channels. Additional narrowband channels can be enabled, see *Channel setup* on page 21.

US channels

Channels	TX MHz	RX MHz	SIMPLEX	DUPLEX
1A	156.050	156.050	●	
2				B)
3				B)
4				B)
5A	156.250	156.250	●	
6	156.300	156.300	●	
7A	156.350	156.350	●	
8	156.400	156.400	●	
9	156.450	156.450	●	
10	156.500	156.500	●	
11	156.550	156.550	●	
12	156.600	156.600	●	
13	156.650	156.650	● L)	
14	156.700	156.700	●	
15B		156.750	● RX)	
16	156.800	156.800	Distress and calling	
17	156.850	156.850	●	
18A	156.900	156.900	●	
19A	156.950	156.950	●	
20	157.000	161.600		●
20A	157.000	157.000	●	
21A	157.050	157.050	● I)	
22A	157.100	157.100	● I)	
23A	157.150	157.150	● I)	
24	157.200	161.800		●
25	157.250	161.850		●
26	157.300	161.900		●
27	157.350	161.950		●
28	157.400	162.000		●

Channels	TX MHz	RX MHz	SIMPLEX	DUPLEX
60				B)
61				B)
62				B)
63A	156.175	156.175	●	
64				B)
65A	156.275	156.275	●	
66A	156.325	156.325	●	
67	156.375	156.375	● L)	
68	156.425	156.425	●	
69	156.475	156.475	●	
70	156.525	156.525	DSC	
71	156.575	156.575	● L)	
72	156.625	156.625	●	
73	156.675	156.675	●	
74	156.725	156.725	●	
75			B)	
76			B)	
77	156.875	156.875	●	
78A	156.925	156.925	●	
79A	156.975	156.975	●	
80A	157.025	157.025	●	
81A	157.075	157.075	● I)	
82A	157.125	157.125	● I)	
83A	157.175	157.175	● I)	
84	157.225	161.825		●
85	157.275	161.875		●
86	157.325	161.925		●
87A	157.375	157.375	● *)	
88A	157.425	157.425	● *)	

Channels	RX MHz
W1	162.550
W2	162.400
W3	162.475
W4	162.425
W5	162.450
W6	162.500
W7	162.525

- L) 1 W TX power. Channels 13, 67 and 77 are limited to low transmission power.
- B) Channels 2, 3, 4, 60, 61, 62, 64, 75 and 76 cannot be selected in US mode.
- I) Channels 21A, 22A, 23A, 81A, 82A and 83A may be legally used in some circumstances but not by the general public in US waters.
- RX) Only RX: transmissions are blocked.
- *) Channels 87 and 88 became simplex channels following the introduction of AIS1 at 161.975 MHz and AIS2 on 162.025 MHz.

These are the default channels. Additional narrowband channels can be enabled, see *Channel setup* on page 21.

CA channels

Channels	TX MHz	RX MHz	SIMPLEX	DUPLEX
1	156.050	160.650		●
2	156.100	160.700		●
3	156.150	160.750		●
4A	156.200	156.200	● I)	
5A	156.250	156.250	●	
6	156.300	156.300	● I)	
7A	156.350	156.350	●	
8	156.400	156.400	●	
9	156.450	156.450	●	
10	156.500	156.500	●	
11	156.550	156.550	●	
12	156.600	156.600	●	
13	156.650	156.650	●	
14	156.700	156.700	●	
15	156.750	156.750	● L)	
16	156.800	156.800	Distress and calling	
17	156.850	156.850	● L)	
18A	156.900	156.900	●	
19A	156.950	156.950	● I)	
20	157.000	161.600		● L)
21A	157.050	157.050	● I)	
21B	157.050	161.650	● RX)	
22A	157.100	157.100	● I)	
23	157.150	161.750		●
24	157.200	161.800		●
25	157.250	161.850		●
26	157.300	161.900		●
27	157.350	161.950		●
28	157.400	162.000		●

Channels	TX MHz	RX MHz	SIMPLEX	DUPLEX
60	156.025	160.625		●
61A	156.075	156.075	● I)	
62A	156.125	156.125	● I)	
63A	156.175	156.175	● I)	
64	156.225	160.825		●
64A	156.225	156.225	●	
65A	156.275	156.275	● L)	
66A	156.325	156.325	● L)	
67	156.375	156.375	● I)	
68	156.425	156.425	●	
69	156.475	156.475	●	
70	156.525	156.525	DSC	
71	156.575	156.575	●	
72	156.625	156.625	● I)	
73	156.675	156.675	● I)	
74	156.725	156.725	●	
75	156.775	156.775	● L)	
76	156.825	156.825	● L)	
77	156.875	156.875	● L)	
78A	156.925	156.925	●	
79A	156.975	156.975	●	
80A	157.025	157.025	●	
81A	157.075	157.075	● I)	
82A	157.125	157.125	● I)	
83A	157.175	157.175	● I)	
83B	157.175	161.775	● RX)	
84	157.225	161.825		●
85	157.275	161.875		●
86	157.325	161.925		●
87	157.375	157.375	● *)	
88	157.425	157.425	● *)	

Channels	RX MHz
W1	162.550
W2	162.400
W3	162.475
W4	162.425
W5	162.450
W6	162.500
W7	162.525

- L) 1 W TX power. Channels 15, 17, 20, 65, 66, 75, 76 and 77 are limited to 1 W transmission power.
- I) Channels 4A, 6, 19A, 21A, 22A, 61A, 62A, 63A, 67, 72, 73, 81A, 82A and 83A may be legally used in some circumstances but not by the general public in CA waters.
- RX) Only RX: transmission is blocked.
- *) Channels 87 and 88 became simplex channels following the introduction of AIS1 at 161.975 MHz and AIS2 on 162.025 MHz.

These are the default channels. Additional narrowband channels can be enabled, see *Channel setup* on page 21.

BI channels

Channels	TX MHz	RX MHz	SIMPLEX		DUPLEX	
			Intership	Port	Port	Public
1	156.050	160.650			●	●
2	156.100	160.700			●	●
3	156.150	160.750			●	●
4	156.200	160.800			●	●
5	156.250	160.850			●	●
6	156.300	156.300	● L)			
7	156.350	160.950			●	●
8	156.400	156.400	● L)			
9	156.450	156.450	●	●		
10	156.500	156.500	● L)	● L)		
11	156.550	156.550		● L)		
12	156.600	156.600		● L)		
13	156.650	156.650	● L)	● L)		
14	156.700	156.700		● L)		
15	156.750	156.750	● L)	● L)		
16	156.800	156.800	Distress and calling			
17	156.850	156.850	● L)	● L)		
18	156.900	161.500			●	●
19	156.950	161.550			●	●
20	157.000	161.600			●	●
21	157.050	161.650			●	●
22	157.100	161.700			●	●
23	157.150	161.750			●	●
24	157.200	161.800			●	●
25	157.250	161.850			●	●
26	157.300	161.900			●	●
27	157.350	161.950			●	●
28	157.400	162.000			●	●

Channels	TX MHz	RX MHz	SIMPLEX		DUPLEX	
			Intership	Port	Port	Public
60	156.025	160.625			●	●
61	156.075	160.675			●	●
62	156.125	160.725			●	●
63	156.175	160.775			●	●
64	156.225	160.825			●	●
65	156.275	160.875			●	●
66	156.325	160.925			●	●
67	156.375	156.375	●	●		
68	156.425	156.425		●		
69	156.475	156.475	●	●		
70	156.525	156.525	DSC	DSC		
71	156.575	156.575		● L)		
72	156.625	156.625	● L)			
73	156.675	156.675		●		
74	156.725	156.725		● L)		
75				B)		
76				B)		
77	156.875	156.875	● L)			
78	156.925	161.525		●	●	●
79	156.975	161.575		●	●	●
80	157.025	161.625		●	●	●
81	157.075	161.675		●	●	●
82	157.125	161.725		●	●	●
83	157.175	161.775		●	●	●
84	157.225	161.825		●	●	●
85	157.275	161.875		●	●	●
86	157.325	161.925		●	●	●
87	157.375	157.375		● *)		
88	157.425	157.425		● *)		

L) 1 W TX power on channels 6, 8, 10, 11, 12, 13, 14, 15, 17, 71, 72, 74 and 77.

B) Channels 75 and 76 cannot be selected in BI mode.

*) Channels 87 and 88 became simplex channels following the introduction of AIS1 at 161.975 MHz and AIS2 on 162.025 MHz.

NB! The ATIS function is enabled on all channels.

Dual Watch & Scanning modes are disabled.

Alternative channels

If the radio is used in regions where neither of the four described standard channels are allowed, a reduced channel table with international channel designators and frequencies can be made. Contact your local dealer for programming the alternative channels.

Private channels

Up to 100 licensed private channels may be specified. For programming the private channels contact your local dealer.

A

AIS Automatic Identification System, a short range coastal tracking system used on ships and by Vessel Traffic Services for identifying and locating vessels by electronically exchanging data with other nearby ships.

ATIS Automatic Transmission Identification System

G

GPL General Public License

L

LGPL Lesser General Public License

P

PTT Push To Talk

T

TU Transceiver Unit

V

VDR Voyage Data Recorder, a data recording system designed for all vessels required to comply with the IMO's International Convention SOLAS Requirements in order to collect data from various sensors on board the vessel.

VHF Very High Frequency

Numerics

16/C, 8, 11

A

action line, display, 3

activate

scanning, 16

watch, 15

ADD, 17

add a contact, 17

adjust

speaker volume, 8

squelch, 10

ALT, 40

ALT channel table, 21

ATIS code, 20

change, 22

attenuation control, 14

B

backlight, 1

dim, 8

bandwidth, 21

Bi, 40

Bi channels, 40

browse channels, 8

C

CA channel table, 21

CA channels, 39

call

Distress procedure, v

change

dual and triple watch, 15

channel

add to scan, 16

bandwidth, 21

remove from scan, 16

select, 8, 9

working, 8, 9

channel table

ALT, 21, 40

Bi, 40

CA, 21, 39

INT, 37

PRIV, 21, 40

US, 21, 38

channels

Bi, 40

CA, 39

international, 37

primary, 13

private, 13

US, 38

weather, 13

Colour theme, 22

configuration

system example, 6

contact, 25

adding, 17

deleting, 18

editing, 17

controls, front plate, 2

cradle for 6201, installation, 4

D

deactivate

watch, 15

default reset, 22
DELETE, 18
delete contact, 18
dim, 8
display, 3
display colour
 change, 22
distress channel, 8, 11
Distress procedure, v
document number, this manual, i
dual watch, 20
 change to triple, 15

E

editing a contact, 17
Emergency call sheet, ix
emergency calls, v
error messages, 25

F

factory defaults, 22
FILTER, 16
frequency range, VHF, 32
front plate, controls, 2
fuse
 Power Converter, 28
 VHF radio, 27

H

Hand Microphone, 9
handset cradle
 installation, 4
hang time, 19
how to replace, 28

I

installation
 cradle for 6201, 4
 handset cradle, 4
installation guide, A3, ix
installation manual, ix
INT, 37
IP address, 22
IP rating, 32

K

key 16/C, 8, 11
keys on front plate, 2
knob
 selector, 2
 volume, 2

L

license
 software, ii
louder, volume, 8
low power
 override, 14
 set to 1 W, 14

M

manual, document number, i
maritime channels, 37
MAYDAY, v
menu, overview, 24
message
 replay, 18
monitor power supply, 22

mute
speaker, 10

N

narrow band, 21
night vision, how to dim, 8

O

overriding low power, 14

P

password, 22
phone book, 16
 add contact, 17
 delete a contact, 18
 edit a contact, 17
power
 fuse, 27
 off, 8
 on, 8
Power Converter
 fuse, 28
power supply
 monitor, 22
priority scan, 20
PRIV, 40
 channel table, 21
private channels, 13, 32, 40
PTT button, 11

R

radio call
 making, 12
 receiving, 11
reduced transmission power, 14
replay, 1, 18
 button, 2
reset to default, 22
RF exposure hazards, iv

S

safety summary, iv
salt deposits, 25
scan
 add channel, 16
 hang time, 19
 priority, 20
 remove channel, 16
 start, 16
selector knob, 2, 8
semi duplex, 1
serial number, 22
service line, display, 3
setup
 controller, 23
 overview, 24
 parameters, 24
 Radio, 19
 system, 22
 watch, 19
simplex, 1

- soft key, 9
 - ADD, 17
 - DELETE, 18
 - FILTER, 16
 - OVERRIDE, 14
 - STOP, 18
 - TAG, 16
 - WATCH, 15
- softer, volume, 8
- software license, ii
- Software version, 22
- speaker volume, 8
- speaking devices, 9
- specifications, 31
- squelch, 10
- squelch control, 2, 10
- STOP, 18
- stop
 - replaying a message, 18
 - watch or scan, 15, 16
- support, 25
- system configuration
 - example, 6
- system setup, 22

T

- TAG, 16
 - remove, 16
- tagged channels
 - view, 16
- technical data, 31
- temperature
 - operational, 31, 34
 - storage, 31, 34
- theme
 - colour, change, 22
- timeout, 22

- triple watch, 20
 - change to dual, 15

U

- US, 38
- US channel table, 21, 38
- UTC time, 3

V

- VHF
 - channels, 12
 - frequency range, 32
- volume
 - louder, 8
 - softer, 8
 - speaker, 8
- Volume knob, 2

W

- warnings, 25
- warranty, 29
 - limitation, iv
- WATCH, 15
- watch
 - dual and triple, 15
 - dual or triple, 20
 - setup, 19
 - start, 15
 - stop, 15
- water ingress, 32
- weather channels, 13
- weight, 31, 34
- wide band, 21
- working channel, 8, 9

98-131186-A

info@thrane.com · thrane.com

Thrane & Thrane

www.busse-yachtshop.de | info@busse-yachtshop.de