GA-8EGXDR Dual Xeon[™] Processor Motherboard

USER'S MANUAL

Dual Xeon[™] Processor Motherboard Rev. 1001 12ME-8EGXDR-1001

Table of Content

Item Checkli	st	4
WARNING! .		4
Chapter 1 Int	troduction	5
Features	Summary	5
GA-8EGX	DR Motherboard Layout	7
Chapter 2 Ha	ardware Installation Process	8
Step 1: Ins	stall the CPU (Central Processing Unit)	9
	Step 1-1: Installation Kit Preparation	9
	Step 1-2: CPU Installation	10
	Step 1-3: CPU Heat Sink Installation	11
Step 2: Ins	stall memory modules	13
Step 3: Ins	stall expansion cards	14
Step 4: Co	onnect ribbon cables, cabinet wires, and power supply	
	Step 4-1: I/O Back Panel Introduction	
	Step 4-2: Connectors Introduction	17
	Step 4-3: Jumper Setting Introduction	
	Step 4-4: PCI Slot Introduction	27
Chapter 3 Bl	OS Setup	
Main		
Advanced		
	Advanced Configuration	35
	Chipset Configuration	37
	Power Management Configuration	39
	Plug and Play Configuration	
	Peripheral Configuration	
Security		
Boot		
Exit		

Table of Content
Table of Content

Chapter 4 Technical Reference	54
Block Diagram	54
Chapter 5 Appendix	55

Item Checklist

- ☑ The GA-8EGXDR motherboard
- ☑ IDE cable x 1/ Floppy cable x 1
- ☑ Driver CD for motherboard driver & utility ☑ SCSI Cable x 1 (Optional)
- ☑ GA-8EGXDR user's manual

Computer motherboards and expansion cards contain very delicate Integrated Circuit (IC) chips. To protect them against damage from static electricity, you should follow some precautions whenever you work on your computer.

☑ I/O Back Panel

✓ USB Cable x 1(Optional)

- 1. Unplug your computer when working on the inside.
- Use a grounded wrist strap before handling computer components. If you do not have one, touch both of your hands to a safely grounded object or to a metal object, such as the power supply case.
- Hold components by the edges and try not touch the IC chips, leads or connectors, or other components.
- 4. Place components on a grounded antistatic pad or on the bag that came with the components whenever the components are separated from the system.
- 5. Ensure that the ATX power supply is switched off before you plug in or remove the ATX power connector on the motherboard.

Installing the motherboard to the chassis...

If themotherboard has mounting holes, but they don't line up with the hdes on the base and there are no slots to attach the spacers, do not become alarmed you can still attach the spacers to the mounting holes. Just cut the bottom portion of the spacers (the spacer may be a little hard to cut off, so be careful of your hands). In this way you can still attach the motherboard to the base without worrying about short circuits. Sometimes you may need to use the plastic springs to isolate the screw from the motherboard PCB surface, because the circuit wire may be near by the hole. Be careful, don't let the screw contact any printed circuit write or parts on the PCB that are near the fixing hole, otherwise it may damage the board or cause board malfunctioning.



Introduction


Chapter 1 Introduction Features Summary

Form Factor	• 30.5cm x 33cm Extend ATX size form factor, 8 layers PCB.		
СРИ	• Dual socket 603 for Intel [®] FC-PGA Xeon processor suopprts		
	1.8 GB to 2.8GB and upper		
	Intel Pentium [®] 4 Xeon 400MHz FSB		
	 512KB internal cache depend on CPU 		
Chipset	Serverworks CMIC-SL Northbridge		
	Serverworks CIOB-X2 PCI-X Bridge		
	Serverworks CSB6 Southbridge		
Memory	4 184-pin DDR DIMM sockets		
	Supports 4 ECC Register DIMM DDR200		
	Supports up to 4 GB DRAM (Max)		
	Supports 2.5V DDR DIMM only		
I/O Control	• NS PC87417		
Slots	Support PCI-X 100MHz x 2 slots		
	PCI 64/66 MHz x 2 Slots		
	PCI 64/33 MHz x 1 Slot		
	PCI 32/33 MHz x 1Slot		
On-Board IDE	2 IDE bus master (ATA100) IDE ports for up to 4 ATAPI device:		
	• 1 IDE bus master (ATA66) IDE ports for up to 2 ATAPI		
	devices (Optioanl)		
	• Support LSI software IDE RAID 0,1,5 (Optional)		
On-Board Peripherals	• 1 Floppy port supports 360K, 720K, 1.2M, 1.44M		
	and 2.88M bytes.		
	 1 Parallel port supports Normal/EPP/ECP mode 		
	• 2 COM ports (COM1 & COM2; one at front and one at rear)		
	• 2 LAN ports (LAN1: 10/100 ; & GLAN1: Gigabit Ethernet)		
	• 4 USB ports (Rear USB x 2, Front USB x 2)		
Hardware Monitor	CPU/Power/System Fan speed detection		
	CPU/Power/System Fan Control		
	CPU Overheat Warning to be continued		

GA-8EGXDR Motherboa	rd
	System Intrution Detect
	System Voltage Detect
On-Board LAN	Build in Intel RC82544GC 10/100/1000 Gigabit Ethernet
	Chipset (Server Adapter)
	Build-in Intel 82550PM 10/100 Fast Ethernet
On-Board VGA	Build in ATI Rage XL VGA PCI Chipset with 8M SDRAM on board
On-Board SCSI	Adaptec 7899W SCSI Chipset supports dual ultra 160 SCSI channels
PS/2 Connector • PS/2 Keyboard interface and PS/2 Mouse interace	
BIOS	Licensed Award BIOS, 4Mb flash ROM
Additional Features	Wake on LAN (On board LAN 1)
	AC Recovery
	IPMI V1.0 (Optioal)
	Support Adaptec ASR-2000s Zero Channel RAID (ZCR) card

●[™] Please use the same speed CPU when your system runs in the dual CPU configuration. Whether your system can run under these specific bus frequencies properly, it will depend on your hardware configurations, including CPU, Chipsets, SDRAM, Cards... .etc.




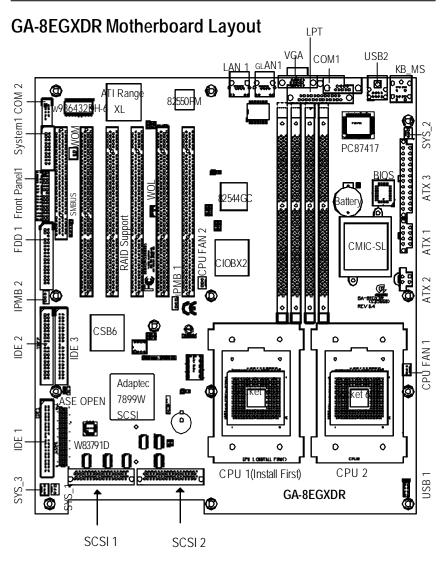

Chapter 2 Hardware Installation Process

To set up your computer, you must complete the following setups:

- Step 1- Install the CPU1(If you are installing one CPU ONLY)
- Step 2- Install memory modules
- Step 3- Install expansion cards
- Step 4- Connect cables, cabinet wires, and power supply
- Step 5- Setup BIOS software

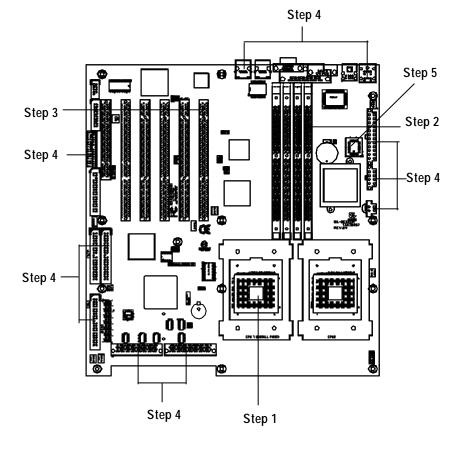

Hardware Installation Process

Step 1: Install the CPU (Central Processing Unit) Step 1-1: Installation Kit Preparation

You may use the 4 screws which come with the mainboard to reinforce the support between P4 CPU heat-sink on the mainboard and chassis.

Step1: The 4 new mounting holes on the chassis arefor additional support for P4 C PU heatsink on the mainboard.

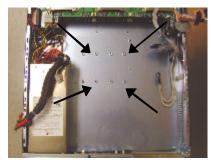


Figure 1

Step 3: Preparing retention module kit.

Step2: Apppearance of mainboard.



Figure 2



Figure 3

Step 4: Fit the 4 screws with 2 CPU retention modules on the chassis. Push screw into the motherboard firmly as shown below

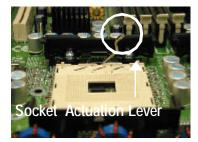


Figure 4

Step 1-2: CPU Installation




CPU Top View



1. Pull the lever out, than lift up the Lever.



CPU Bottom View

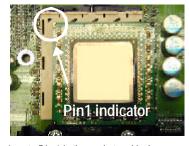

- Locate Pin 1 in the socket and look for a (golden) cut edge on the CPU upper corner. Then insert the CPU into the socket.
- 3. Press down the CPU socket lever and finish CPU installation.
- Please make sure the CPU type is supported by the motherboard.
- If you do not match the CPU socket Pin 1 and CPU cut edge well, it will cause improper installation. Please change the insert orientation.
- Warning: If your install one CPU ONLY, please refer to the Motherboard Layout (page 7) to install the CPU 1 frist.
- Note that if you insall two CPUs, please install the same speed CPUs.




Hardware Installation Process

Step 1-3: CPU Heat Sink Installation




1. Use qualified fan approved by Intel.

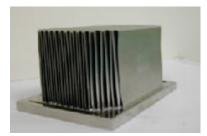


2. Heat Sink




3. First step of assembling.

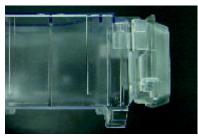


4. Completive picture for Step 3.

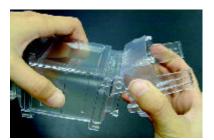

5. Second step of assembling.

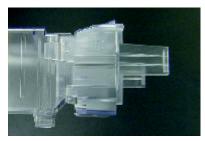

6. Completive picture for Step 5.

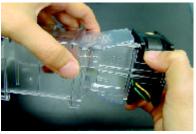

7. Fan assembly.



8. Hook one end of the cooler bracket to the CPU socket first.



9. Picture of device set on the motherboard.

- ◆ You should apply the thermal paste to provide better heat conduction between your CPU and heatsink.
- ●[™] Make sure the CPU fan power cable is plugged in to the CPU fan connector, this completes the installation.
- ◆[™] Please refer to CPU heat sink user's manual for more detail installation procedure.



Hardware Installation Process

Step 2: Install memory modules

The motherboard has 4 dual inline memory module (DIMM) sockets. The BIOS will automatically detects memory type and size. To install the memory module, just push it vertically into the DIMM Slot.

The DIMM module can only fit in one direction due to the notch. Memory size can vary between sockets.




DDR



- 1. The DIMM slot has a notch, so the DIMM memory module can only fit in one direction.
- 2. Insert the DIMM memory module vertically into the DIMM slot. Then push it down.
- C lose the plastic clip at both edges of theDIMM slots to lock the DIMM module. Reverse the installation steps when you wish to remove the DIMM module.
- Please note that the DIMM module can only fit in one direction due to the one notches. Wrong orientation will cause improper installation. Please change the insert orientation.

Step 3: Install expansion cards


- 1. Discharge any static electricity from your body before handling the sensitive board of the card.
- 2. Turn off and unplug your computer before removing your computer's chassis. Failure do so may endamger you and damage the expansion or computer.
- 3. Read the related expansion card's instruction document before install the expansion card into the computer.
- 4. Remove your computer's chassis cover, screws and slot bracket from the computer.
- 5. Press the expansion card firmly into expansion slot in motherboard.
- 6. Be sure the metal contacts on the card are indeed seated in the slot.
- 7. Replace the screw to secure the slot bracket of the expansion card.
- 8. Replace your computer's chassis cover.
- 9. Power on the computer, if necessary, setup BIOS utility of expansion card from BIOS.
- 10. Install related driver from the operating system.

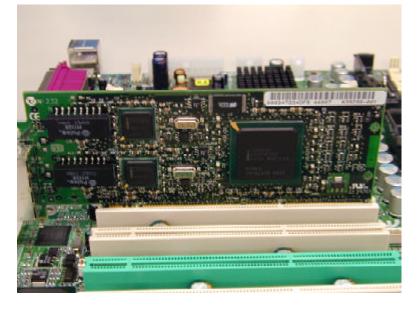

Hardware Installation Process

Step 4: Connect ribbon cables, cabinet wires, and power supply

Step 4-1: I/O Back Panel Introduction

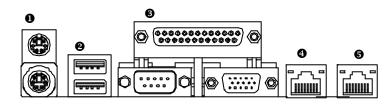


PS/2 Keyboard and PS/2 Mouse Connector



PS/2 Mouse Connector (6 pin Female)


- PS/2 Keyboard Connector (6 pin Female)
- This connector supports standard PS/2 keyboard and mouse.

USB2 Connector

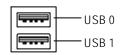


Before you connect your device(s) into USB connector(s), please make sure your device(s) such as USB keyboard, mouse, scanner, zip, speaker..etc. Have a standard USB interface. Also make sure your OS (Windows 2000, Win dows ME, Win NT with SP 6) supports USB controller. If your OS does not support USB controller, please contact the OS vendor for pos sible patch or driver upgrade. For more information please contact your OS or device(s) vendors.

Parallel Port / Serial Port / VGA Port (LPT/COMA/VGA)

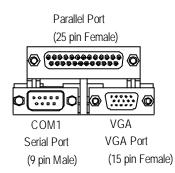


This connector supports 1 standard COM port ,1 Parallel port and 1 VGA port. Device like printercan be connected to Parallel port; mouse and modem etc can be connected to Serial ports.

④/⑤ LAN1 / LAN2 Port

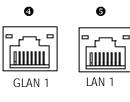


≻GLAN 1: Giagbit Ethernet≻LAN 1: 10/100 Ethernet



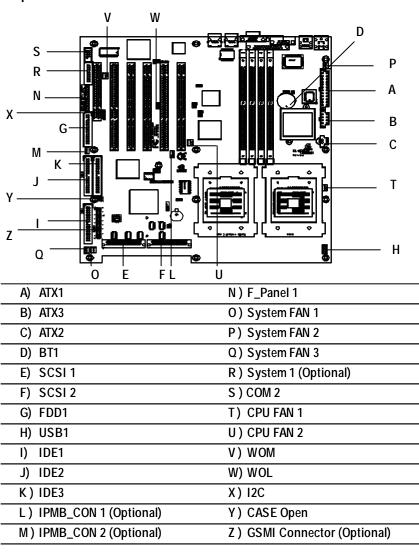


Step 4-2: Connectors Introduction

A) ATX3 (2x12 Pin ATX Power)

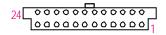


AC power cord should only be connected by our power supply unit after ATX power cable and other related devices are firmly connected to the mainboard.

B) ATX1 (ATX1 Power)

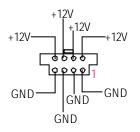

➤This connector (ATX +12V) is used only for CPU Core Voltage.

C) ATX2 (+12V Power Connector)

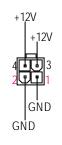


This connector (ATX +12V) is used only for CPU Core Voltage.

Hardware Installation Process


T/U) CPU FAN 1/2 Connectors




O/P/Q) System FAN 1/2/3 Connectors

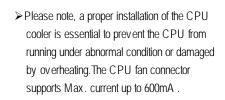



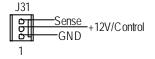


Y) Power FAN Connector

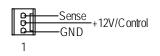


W) Wake On LAN Connector



INOTE that when CPU FAN connector and S) COM 2 Connector Power FAN connector exist in the motherboard, you are ONLY allowed to connect either CPU FAN 1 or Power FAN.

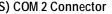


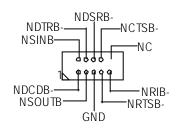

E/F) SCSI1/SCSI2 Connector




I) IDE 1/ IDE 2/ IDE 3 [IDE1 / IDE2 / Connectors(Primary/Secondary)]

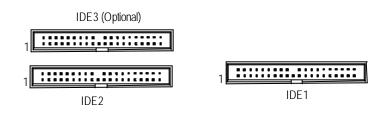

G) FDD1 (Floppy Connector) Z) CASE OPEN Floppy
I
GND
Signal


Hardware Installation Process

H) USB1 (Front USB Connector)

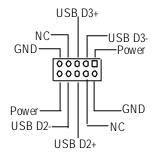

Be careful with the polarity of the front panel USB connector. Check the pin assignment while you connect the front panel USB cable. Please contact your nearest dealer for optional front panel USB cable.

J) IPMB_CON1/IPMB_CON2

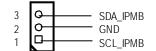

1) GSMI 1: IPMI Moudule Interface (2X35 Pins IPMI Connector)

		nnánnn ná nr	nnhnM
	וחחחחחחחח	၂၂၂၂၂၂၂၂၂၂၂၂၂	JUUUUU
<u>.</u> 1000000000000000000000000000000000000	ת תחתחת החרחה	nnnnnnnn	יחחחחו
000000000000		4000040000	

We have IPMI module to customer used for option.

D) BT1 (Battery)

Li-Battery 3V




CAUTION

- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to the manufacturer's instructions.



GA-8EGXDR Motherboard


K) F_PANEL1 (2x15 Pins connector)

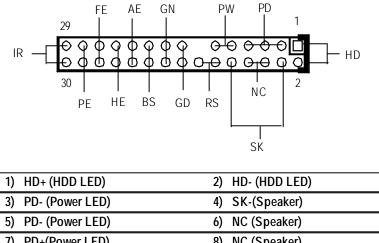

3) PD- (Power LED)	4) SK-(Speaker)
5) PD- (Power LED)	6) NC (Speaker)
7) PD+(Power LED)	8) NC (Speaker)
9) PW- (Power Button)	10) SK+ (Speaker)
11) PW+ (Power Button)	12) RS+ (Reset Button)
13) KEY	14) RS- (Reset Button)
15) GD+ (Green LED)	16) GD- (Green LED)
17) GN+ (Green Button)	18) GN- (Green Button)
19)BS+ (Buzzer Stop Button)	20) BS- (Buzzer Stop Button)
21) AE+ (All Error LED)	22) AE- (All Error LED)
23)HE+ (HDD Error LED)	24) HE- (HDD Error LED)
25) FE+ (Fan Error LED)	26) FE- (Fan Error LED)
27) PE+ (Power Supply Error LED)	28) PE- (Power Supply Error LED)
29) IR+ (NC)	30) IR- (NC)

Please connect the power LED, PC speaker, reset switch and power switch etc of your chassis front panel to the F_PANEL1 connector according to the pin assignment above.



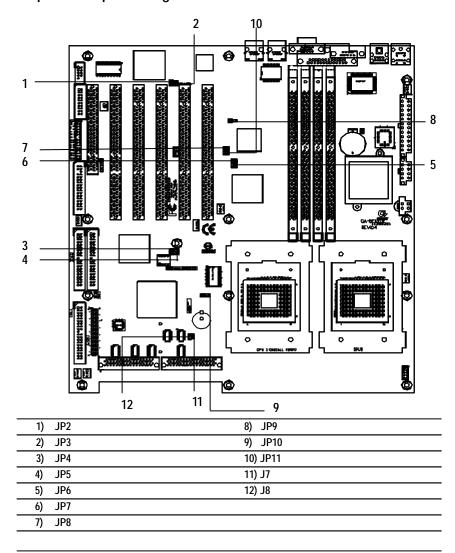

Step 4-3: Jumper Setting Introduction


- Please note that the highlight white mark on the motherboard is presented as
 - 23

1) JP2 (10/100 LAN Function)

1	000	1-2 close: LAN Enabled (Default)	
---	-----	----------------------------------	--

1000 2-3 close: LAN Disabled

2) JP3 (Onboard VGA Functon)

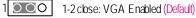



2-3 close: VGA Disabled

3) JP4 (Clear CMOS Function)

0001	1-2 close: Clear CMOS
0001	2-3 close: Normal (Default)

▶ Please note, You may clear the CMOS data to its default values by this jumper

I Please note that the the highlight white mark is

presented as Pin 1.

4) JP5 (SCSI Function)



1-2 close: SCSI Enables (Default)

2-3 close: SCSI Disabled

5) JP6 (Primary PCI-X Bus Speed Function)




1-2 close: 100MHz (Default)



2-3 close: 133MHz

6) JP7 (Secondary PCI-X Bus Speed Function)

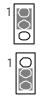


1-2 close: 100MHz (Default)

2-3 close: 133MHz

Jumper Setting

7) JP8 (Primary PCI-X Bus Speed Functon)

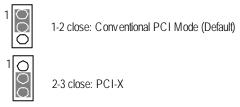


> Note: PCI-X - Slot 3, PCI-X - Slot 4, On board SCSI

8) JP9 (Secondary PCI-X Bus Speed Functon)


1000	1-2 close: Conventional PCI Mode
1000	2-3 close: PCI-X (Default)

> Note: PCI-X - Slot 1, PCI-X - Slot 2, On board Gigabit Ethernet

9) JP10 (Host Clock Frequency Setting Functon)

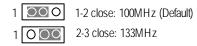

10) JP11 (Gigabit LAN Functon)

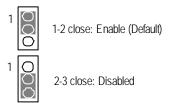

11) J8 (SCSI 1 On-Board Terminator Functon)



Close: Enable (Default)


12) J7 (SCSI 2 On-Board Terminator Functon)



Close: Enable (Default)


Open: Auot



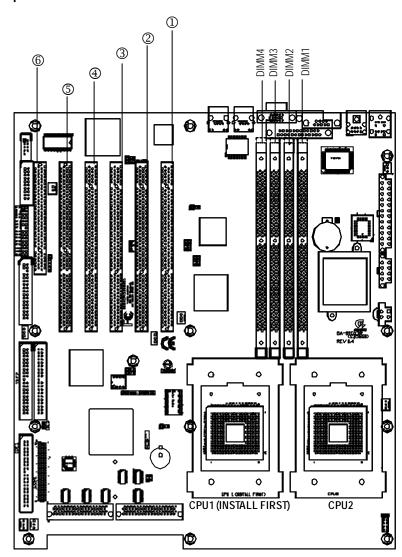

Step 4-4: PCI Slot Introduction


① PCI_X_SLOT1 Supports PCI-X 100MHz

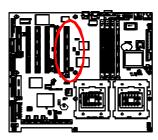


③ PCI_X_SLOT3

Supports PCI 64/66MHz
For ZCR Installation


② PCI_X_SLOT2 Supports PCI-X 100MHz

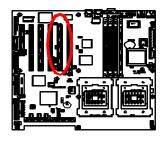


PCI_X_SLOT4 Supports PCI 64/66MHz

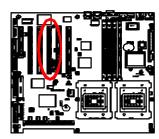


Supports PCI 64/33MHz

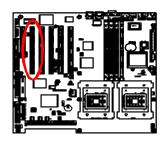

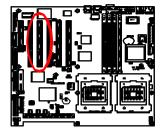

PCI_32_SLOT6
 Supports PCI 32/33MHz

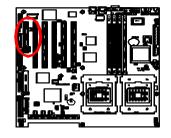

BIOS Setup

Chapter 3 BIOS Setup

BIOS Setup is an overview of the BIOS Setup Program. The program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

ENTERING SETUP

Power ON the computer and press immediately will allow you to enter Setup.

CONTROL KEYS

< ^ >	Move to previous item			
< \ >	Move to next item			
< ← >	Move to the item in the left hand			
< > >	Move to the item in the right hand			
<esc></esc>	Main Menu - Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu - Exit current page and return to Main Menu			
<+/PgUp>	Increase the numeric value or make changes			
<-/PgDn>	Decrease the numeric value or make changes			
<f1></f1>	General help, only for Status Page Setup Menu and Option Page Setup Menu			
<f2></f2>	Reserved			
<f3></f3>	Reserved			
<f4></f4>	Reserved			
<f5></f5>	Restore the previous CMOS value from CMOS, only for Option Page Setup Menu			
<f6></f6>	Reserved			
<f7></f7>	Load the Optimized Defaults			
<f8></f8>	Reserved			
<f9></f9>	Reserved			
<f10></f10>	Save all the CMOS changes, only for Main Menu			

GEITING HELP

Main Menu

The on-line description of the highlighted setup function is displayed at the bottom of the screen. Status Page Setup Menu / Option Page Setup Menu

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc>.

• Main

This setup page includes all the items in standard compatible BIOS.

• Advanced

This setup page includes all the items of AMI special enhanced features. (ex: Auto detect fan and temperature status, automatically configure hard disk parameters.)

• Boot

This setup page include all the items of first boot function features.

• Security

Change, set, or disable password. It allows you to limit access the system and setup.

• Exit

There are five options this selection: Exit Saving Changes, Exit Discarding Changes, Load Optimal Defaults, Load Failsafe Defaults, and Discard Changes.

BIOS Setup

Main

Once you enter AMI BIOS CMOS Setup Utility, the Main Menu (Figure 1) will appear on the screen. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

AMI EASY Setup Utility					
Main	Advanced	Security	Boot	Exit	
System	Date:	Jan 30 20	002		[Setup Help]
System	Time:	[00:13:12	?]		
Floppy	Drive A:	1.44MB 3	31/2		
Floppy	Drive B:	Not Instal	led		
▶ Prim	ary IDE Master	ST38002	1A		
► Prim	nary IDE Slave				
► Sec	ondary IDE Master				
► Sec	ondary IDE Slave				
► Sys	tem Information				
F1: Help	↑↓ : Sele	ect Item	+ -: Chang		
Esc: Exit	Esc: Exit $\leftarrow \rightarrow$: Select Menu Enter: Select \blacktriangleright Sub-Menu F10: Sav e&Exit				

Figure 1: Main

∽ System Date

Set the System Date. Note that the "Day" automatically changed after you set the date. (Weekend: DD: MM: YY) (YY: 1099~2099)

∽ System Time

The time is calculated based on the 24-hour military time clock. Set the System Time (HH:MM:SS)

∽ Floppy Drive A/B

This category identifies the type of floppy disk drive A or drive B that have been installed in the computer.

► None	No floppy drive installed				
▶1.2MB, 3.5 in.	3.5 inch AT-type high-density drive; 1.2M byte capacity				
▶720K, 3.5 in.	3.5 inch double-sided drive; 720K byte capacity				
▶1.44M, 3.5 in.	3.5 inch double-sided drive; 1.44M byte capacity.				
▶2.88M, 3.5 in.	3.5 inch double-sided drive; 2.88M byte capacity.				

∽ IDE Primary Master, Slave / Secondary Master, Slave

The category identifies the types of hard disk from driveC to F that has been installed in the computer. There are two types: auto type, and manual type. Manual type is user-definable; Auto type which will automatically detect HDD type.

Note that the specifications of your drive must match with the drive table. The hard disk will not work properly if you enter improper information for this category.

If you select User Type, related information will be asked to enter to the following items. Enter the information directly from the keyboard and press <Enter>. Such information should be provided in the documentation form your hard disk vendor or the system manufacturer.

TYPE

- ▶ 1-50: Predefined types.
- ► Users: Set parameters by User.
- → Auto: Set parameters automatically. (Default Vaules)
- ➤ CD-ROM: Use for ATAPI CD-ROM drives or double click [Auto] to set all HDD parameters automatically.

► Cy linders	Number of cylinders
➡Write Precompensati	on Write precompensation
➡ SECTORS	Number of sectors
► Maximum Capacity	Maximum Capacity
► LBA Mode	This field shows if the device type in the specific IDE channel support LBA Mode
➡Block Mode	This field only shows the information of Block Mode.

BIOS	Setup
------	-------

► Fast Programmed I/O Mode	This field only shows the information of Fast Programmed I/O Mode.
⇒ 32 Bit Transfer Mode	Enables 32 bit access to maximize the hard disk data transfer rate.
	Option: On (Default Value); Off

If a hard disk has not been installed select NONE and press <Enter>.

∽ System Information

This category displays the system information on **Processor type**, **speed**, **cache** and **Total Memory Size**.

Advanced

AMI EASY Setup Utility						
Main	Adv anced	Security	Boot	Ex it		
					[Setup Help]	
► Advanced Configuration						
Chipset Configuration						
► Pow er Management Configuration						
► Plug & Play Configuration						
▶Periphe	eral Configuration					
F1: Help	↑ ↓: Sel	ect Item	+ -: Change	e Values	F5: Setup Defaults	
Esc: Exit $\leftarrow \rightarrow$: Select Menu Enter: Select \blacktriangleright Sub-Menu F10: Save&Exit						

Figure 2: Advanced

About This Section: Advanced

This section "Advanced" will be divided into five sub-menus.

- Advanced Configuration
- Chipset Configuration
- Power Management Configuration
- Plug & Play Configuration
- Peripheral Redirection

With this section, allowing user to configure your system for basic operation. A user can change the system's default boot-up sequence, keyboard operation, shadowing and security, etc.

BIOS Setup

Advanced Configuration

AMI EASY Setup Utility					
Main	Adv anced	Security	Boot	Exit	
Advanced C	configuration				[Setup Help]
MPS Versio BootUp Nun Intel Hyper	n-Lock	[Disabled] 1.4 On [Disabled] [Disabled]			
F1: Help Esc: Exit	↑↓: Selec ←→: Sele		+ -: Change ' Enter: Select		

Figure 2-1: Advanced Configuration

∽ Advanced Configuration

S.M.A.R.T for Hard Disk

This filed shows if the device in the specific IDE channel supports S.M.A.R.T. S.M.A.R.T stands for Self-Monitoring Analysis and Reporting Technology. Set this option "Enable" to permit BIOS to use S.M.A.R.T. ➡ Enabled Set this option "Enable" to permit BIOS to use S.M.A.R.T.

► Disabled Disable S.M.A.R.T function. (Default Value)

► MPS Version for 0.S

This option allows a user to select MP (Multi Processors) system supported version. Note: Some old MPS OS support 1.1 version only.

- ▶1.4 Support MPS Version 1.4. (Default Value)
- ▶1.1 Support MPS Version 1.1.

BootUp Num-Lock

Set this option "On" to turn the Num Lock On at a system boot.

→ON Set this option "On" to turn the Num Lock On at a system boot. (Default Value) ► OFF Disable this function.

▶ Intel Hyer Threading

- ➡ Enabled Enable Intel Hyper Threading. (Default Value)
- Disable Inel Hyper Threading. ➡ Disabled

Clock Gen Spread Spectrum

Enables reduction of EMI and overall system cost.

- ➡ Enabled Enable Clock Gen SpreadSpectrum.
- ➡ Disabled Disable this function. (Default Value)



Chipset Configuration

AMI EASY Setup Utility					
Main Advand	ced Se	ecurity	Boot	Exi	t
Chipset Configurati	ion				[Setup Help]
ECC Check		Enabled			
Memory Scrubbing	9	Enabled			
Fatal# CPU Parity Error		Enabled			
Fatal# IMBus Bus	Error	Enabled			
Fatal# For MultiBit	Error	Enabled			
Fatal# For SingleBi	it Error	Enabled			
Alert# on IMB Parit	y Error	Enabled			
F1: Help	↑↓: Select Ite	m	+ -: Change V	alue:	s F5: Setup Defaults
Esc: Exit ←→: Select Menu Enter				▶ Su	b-Menu F10: Save&Exit

Figure 2-2: Chipset Configuration

◦ Chipset Configuration

ECC Check

Check and correct memory data path to pocessor.

- ► Enabled Enable ECC Check. (Default Value)
- ➡ Disabled Disable this function.

▶ Memory Scrubbing

Enables this option to write back the ECC corrected memory data to the DRAM.

- ► Enabled Enabled Memory Srubbing (Default Value)
- ► Disabled Disable this function.

▶ Fatal# CPU Parity Error

Enables this option to report the CPU Parity Error.

- ➡ Enabled Enable CPU Parity Error Checking (Default Values)
- ➡ Disabled Disable this function.

Fatal# IMBus Bus Error

Enables this option to report the IMBus Bus Error.

- ➡ Enabled Enable IMBus Bus Error Checking (Default Values)
- ➡ Disabled Disable this function.

▶ Fatal# For MultiBit Error

Enables this option to report the Multibit Error.

- ► Enabled Enable MultiBit Error Checking (Default Values)
- ► Disabled Disable this function.

▶ Fatal# For SingleBit Error

Enables this option to report the Singlebit Error.

- ► Enabled Enable SingleBit Error Checking (Default Values)
- ➡ Disabled Disable this function.

► Alert# on IMB Parity Error

- ► Enabled Enable IMB Parity Alerting (Default Values)
- ➡ Disabled Disable this function.

BIOS	Setup
------	-------

I UWCI .	Manageme	ni Comigi	nauon			
		AMI EASY	Setup Utili	ty		
Main	Adv anced	Security	Boot	Exit		
Power Management Configuration			[Setup Help]			
Soft-Off B	y Power Button	Instant off				
Sleep Button		Enabled				
Wake Up On Ring System After AC Back		Enabled Enabled				
F1: Help	↑↓ : Sele	ct Item	+ -: Chang	e Values	F5: Setup Defaults	
Esc: Exit	←→: Se	lect Menu	Enter: Sele	ect > Sub-Me	enu F10: Save&Exit	

Power Management Configuration

Figure 2-3: Power Management Configuration

\frown Power Management Configuration

The Power Management Configuration allows you to reduce system power consumption through different saving power methods for various devices.

Soft-Off by Power Button

▶ Instant-off: Soft switch ON/OFF for Power Button.

► Sleep Button

Leaves on the default for best compatibility

- ➡ Enabled Enables Sleep button(Default Value)
- ► Disabled Disabled this function.

► Wake Up On Ring

- ► Enabled Enabled Wake Up On Ring(Default Value)
- ➡ Disabled Disabled this function.
- System After AC Back
- ► Options: Pre-State (Default Value); OFF

		AMI EASY	/ Setup Utilit	у	
Main	Adv anced	Security	Boot	Exit	
Plug ar	nd Play Configuration				[Setup Help]
PCI Slo	ot 1/5 IRQ Priority	Auto			
PCI Slo	ot 2/6 IRQ Priority	Auto			
PCI Slo	ot 3 IRQ Priority	Auto			
PCI Slo	ot 4 IRQ Priority	Auto			
IRQ 3		PCI/PnP			
IRQ 4		PCI/PnP			
IRQ 5		PCI/PnP			
IRQ 7		PCI/PnP			
IRQ 9		PCI/PnP			
IRQ 10		PCI/PnP			
IRQ 11		PCI/PnP			
IRQ 14		PCI/PnP			
IRQ 15		PCI/PnP			
F1: Help	↑ ↓: Selec	t Item	+ -: Chang	e Values	F5: Setup Defaults
Esc: Exit	t ←→: Sele	ect Menu	Enter: Sele	ect ► Sub-M	lenu F10: Save&Exit

Plug and Play Configuration

Figure 2-4: Plug and Play Configuration

∽ Plug and Play Configuration

This option describes the configuration of PCI bus system, or Personal Conputer Interconnect, is a system which allows I/O devices to operate at a speeds nearing the speed the CPU itself uses when communicating withits own special components. This section covers some technical items and it si stongly recommended that only experienced users should make any changes to the default settings.

▶ PCI Slot 1/5 IRQ Priority

 Select PCI Slot 1/5 IRQ Priority.

 Auto
 Auto assign IRQ to PCI 1/5 (Default Value)

 >3, 4, 5, 7, 9, 10, 11
 Set 3, 4, 5, 7, 9, 10, 11 to PCI 1/5

▶ PCI Slot 2/6 IRQ Priority

Select PC1 Slot 2/6 IRQ Priority.				
▶ Auto	Auto assign IRQ to PCI 2/6 (Default Value)			
▶ 3, 4, 5, 7, 9, 10, 11	Set 3, 4, 5, 7, 9, 10, 11 to PCI 2/6			

▶ PCI Slot 3 IRQ Priority

 Select PCI Slot 3 IRQ Priority.

 Auto
 Auto assign IRQ to PCI 3 (Default Value)

 3, 4, 5, 7, 9, 10, 11
 Set 3, 4, 5, 7, 9, 10, 11 to PCI 3

▶ PCI Slot 4 IRQ Priority

 Select PCI Slot 4 IRQ Priority.

 >> Auto
 Auto assign IRQ to PCI 4 (Default Value)

 >> 3, 4, 5, 7, 9, 10, 11
 Set 3, 4, 5, 7, 9, 10, 11 to PCI 4

▶ IRQ 3, 4, 5, 7, 9, 10, 11, 14, 15

Peripheral Configuration

	AMI EASY	/ Setup Utilit	y	
Main Advanced	Security	Boot	Exit	
Peripheral Configuration				[Setup Help]
OnBoard IDE	Both			
OnBoard FDC	Enabled			
Onboard Serial Port A	3F8/COM	1		
Onboard Serial Port B	2F8/COM	2		
Onboard Parallel Port	378			
Parallel Port Mode	ECP			
Parallel Port IRQ	7			
Parallel Port DMA	3			
USB Function	Enabled			
USB Legacy Support	Enabled			
Port 64/60 Emulation	Disabled			
F1: Help $\uparrow \downarrow$: SelectEsc: Exit $\leftarrow \rightarrow$: Select		+ -: Chang Enter: Sele		F5: Setup Defaults lenu F10: Save&Exit

Figure 2-5: Peripheral Configuration

◦ Peripheral Configuration

► OnBoard IDE

▶ Option: Both (Default Value), Primary, Secondary, Disabled

► OnBoard FDC

- ► Enabled Select "Enabled" to active Onboard Floppy Controller. (Default Value)
- ➡ Disabled Disable this function.

BIOS	Setup
------	-------

OnBoard Serial Port A

This option specifies the base I/O port address of serial prot A.

₩3F	8/COM1	Enable onboard serial port A and set I/O address to 3F8/COM1. (Default value)
₩2F	8/COM2	Enable onboard serial port A and set I/O address to 2F8/COM2.
₩3E	8/COM3	Enable onboard serial port A and set I/O address to 3E8/COM3.
▶2E	8/COM4	Enable onboard serial port A and set I/O address to 2E8/COM4.

• OnBoard Serial Port B

This option specifies the base I/O port address of serial prot B.

Note: If one port address is assigned to serial portA, than that address will not be able b resign to serial port B.

▶3F8/COM1	Enable onboard serial port A and set I/O address to 3F8/COM1.
▶2F8/COM2	Enable onboard serial port A and set I/O address to 2F8/COM2. (Default value)
▶3E8/COM3	Enable onboard serial port A and set I/O address to 3E8/COM3.
▶2E8/COM4	Enable onboard serial port A and set I/O address to 2E8/COM4.

▶ OnBoard Parallel Port

This option specifies the base I/O address of the parallel prot on the motherboard.

•• 570 Enable of board Er 1 port and Set 1/O address to 570. (Defadit Value)	▶ 378	Enable onboard LPT port and set I/O address to 378. (Default value)
--	-------	---

- ▶ 278 Enable onboard LPT port and set I/O address to 278
- ➡ 3BC Enable onboard LPT port and set I/O address to 3BC

▶ Parallel Port Mode

This option specifies the parallel mode.

Normal	The normal parallel pro is used.
Bi-Directional ■	Use this setting to support bi-directional transfers on the parallel port.
₩EPP	The parallel port can be used with devices that adhere to the
	enhanced Parallel Port (EPP) specifications. EPP uses the
	existing parallel port signal to provide asymmetric bi-directional
	data transfer driven by the host device.
➡ ECP	The parallel port can be used with devices that adhere to the
	extended Capabilities Port specifications. ECP uses the DMA
	protocd to achieve data transfer rate up to 2.5Mbit/s. ECP provides
	the symmetric bi-directional communication. (Default value)

▶ Parallel Port IRQ

This option is to select Parallel Port IRQ → Option: 7 (Default Value) , 5

▶ Parallel Port DMA

This option iallows user to select Parallel Port DMA. → Option: 3 (Default Value) , 1

► USB Function

This option allows user to enable USB host controller.

- ➡ Enable USB host controller (Default Value)
- ► Disabled Disable this function.

▶ USB Legacy Support

This option allows user to function support for legacy USB.

- ► Enabled Enables support for legacy USB
- ➡ Disabled Disables support for legacy USB (Default Value)

▶ Port 64/60 Emulation

This option allows user to enable or disable the Port 64/60 Emulation function.

► Enable Enables the Port 64/60 Emulation function

✤ Disabled Disable this function. (Default Value)

Security

	AMI EASY Setup Utility						
Main	Adv anced	Security	Boot	Ex it			
					[Setup Help]		
Set Supervisor Password: [Enter]							
Set User Password:		[Enter]					
Password Check [Setup]							
F1: Help	↑↓ : Sele	ct Item	+ -: Change	e Values	F5: Setup Defaults		
Esc: Exit $\leftarrow \rightarrow$: Select Menu			Enter: Selee	ct ► Sub-I	Menu F10: Save&Exit		

Figure 3: Security

About This Section: Security

In this section, user can set either supervisor or user passwords, or both for different level of password securities. In addition, user also can set the virus protection for boot sector.

∽ Set Supervis or Password

You can install and change this options for the setup menus. Type the password up to 6 characters in lengh and press <Enter>. The password typed now will clear any previously entered password from the CMOS memory. You will be asked to confirm the entered password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a specified password or press <Enter> key to disable this option.

∽ Set User Password

You can only enter but do not have the right to change the options of the setup menus. When you select this function, the following message will appear at the center of the screen o assist you in creating a password.

Type the password up to 6 characters in lengh and press <Enter>. The password typed now will clear any previously entered password from the CMOS memory. You will be asked to confirm the entered password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a specified password.

The Pass word Check

Setup will check password while invlolking setup. (Default Value)

Always will check the password while involking setup as well as on each boot.

Boot

		AMI EAS	Y Setup Utility		
Main	Adv anced	Security	Boot	Exit	1
					[Setup Help]
Boot Dev	ice Priority				
Floppy: 1	1.44 MB 3 ^{1/2}				
Disabled					
IDE-0: ST	380021A				
F1: Help	t↓: Sel	ect Item	+ -: Change V	alues F5	: Setup Defaults
Esc: Exit	←→: S	elect Menu	Enter: Select	▶ Sub-Menu	F10: Save&Exit
		F	igure 4: Boot		

About This Section: Boot

The "Boot" menu allows user to select among four possible types of boot devices listed using the up and down arrow keys. By applying <+> and <Space> key, you can promote devices and by using the <-> key, you can demote devices. Promotion or demotion of devices alerts the priority that the system uses to search for boot device on system power on.

☞ Boot Device Priority

▶ 1st / 2nd / 3 rd Boot Device

These three fields determines which type of device the system attempt to boot from after **AMIBIOS Post** completed. Specifies the boot sequence from the available devices. If the first device is not a bootable device, the system will seek for next available device.

- ▶ The Choice for 1st Boot Device: ,
- ► Removable Device (Default Value)
- ➡ ATAPI CDROM
- Hard Disk
- ➡ Disabled.
- ► The Choice for 2nd Boot Device:
- ▶ ATAPI C DROM (Default Value)
- Hard Disk
- ➡ Disabled.

Exit

		AMIEAS	Y Setup Utility		
Main	Adv anced	Security	Boot	Exit	
					[Setup Help]
Exit Saving Changes		[Enter]		_	
Exit Discarding Changes		[Enter]			
Load Defaul Settings		[Enter]			
Load Original Values		[Enter]			
F1: Help	↑↓ : Sele	ct Item	+ -: Change	Values	F5: Setup Defaults
Esc: Exit	←→: Sel	ect Menu	Enter: Selec	t > Sub-N	1enu F10: Save&Exit

Figure 5: Exit

About This Section: Security

Once you have changed all of the set values in the BIOS setup, you should save your changes and exit BIOS setup program. Select **"Exit"** from the menu bar, to display the following sub-menu.

- ← Exit Saving Changes
- ✓ Exit Discarding Changes
- Load Default Settings
- Load Original Values

◦ Exit Saving Changes

This option allows user to exit system setup with saving the changes. Press <Enter> on this item to ask for the following confirmation message: Pressing Υ' to store all the present setting values tha user made in this time into CMOS. Therefore, whenyou boot up y our computer next time, the BIOS will re-configure your system according data in CMOS.

∽ Exit Discarding Changes

This option allow s user to exit system setup without changing any previous settings values in CMOS. The previous selection remain in effect. This will exit the Setup Utility and restart your computer when selecting this option. Press <Enter> on this item to ask for confirmation message.

∽ Load Default Settings

Press <Enter> on this item to load the default values for all the setup options. Enable this function you will get a confirmation dialog box with a message as below:

Press [Enter] to continue Or press [ESC] to Abort

Press [Enter] to load the default settings that are factory settings for default performance system operations.

∽ Load Original Values

Press <Enter> on this item to discard changes without exiting setup. Enable this function you will get a confirmation dialog box with a message as below:


Press [Enter] to continue Or press [ESC] to Abort

Press [Enter] to load the original values that are factory settings for factory original value system operations.



Chapter 4 Technical Reference

Block Diagram

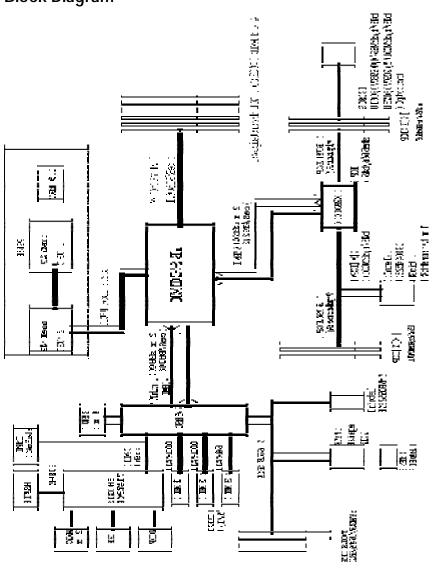


Appendix

Chapter 5 Appendix


Appendix A: Intel Network Driver Installation

(For example: Driver CD Ver. : 1.0)

Insert the driver CD-title that came with your motherboard into your CD-ROM driver, the driver CD-title will auto start and show a series of Setup Wizard dialog boxes. If not, please double click the CD-ROM device icon in "My computer", and execute the setup.exe.

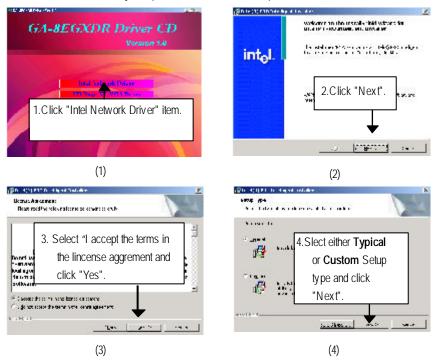


Step 4. Note that user can select either Typical or Custom Setup Types. Typical setup type allows users to install basic connectivity and the adapter management utility. Custom setup type embraces installing features and subfeatures user selects, including modern utilities, manage ment components and drivers. Recommended for advanced users.

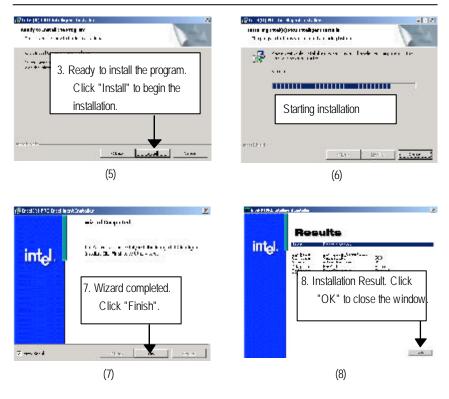

Appendix


Appendix B: ATI Rage XL VGA Driver Installation

Insert the driver CD-title that came with your motherboard into your CD-ROM driver, the driver CD-title will auto start and show the installation guide. If not, please double click the CD-ROM device icon in "My computer", and execute the setup.exe.

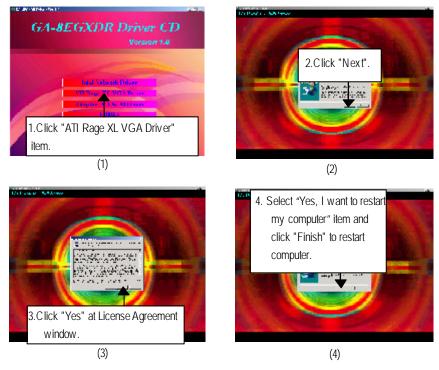

Appendix C: Adaptec SCSI Driver Installation

Insert the driver CD-title that came with your motherboard into your CD-ROM driver, the driver CD-title will auto start and show the installation guide. If not, please double click the CD-ROM device icon in "My computer", and execute the setup.exe.

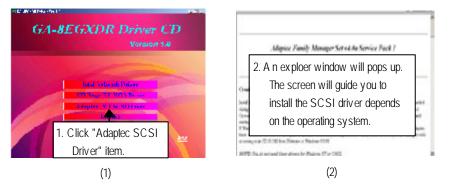

Appendix

Appendix D: Utilities Installation

Insert the driver CD-title that came with your motherboard into your CD-ROM driver, the driver CD-title will auto start and show the installation guide. If not, please double click the CD-ROM device icon in "My computer", and execute the setup.exe.

The Utilities item contains the utility of DirectX 8.1, Adabe Acrobate Reader V.5.0, and Norton Internet Security 2002



Appendix E: About Updating latest version of BIOS

To update the latest BIOS version, please go to Gigabyte Networking official web site: Http://networking.gigabyte.com.tw

Appendix F: ZCR Software and Hardware Installation

For detail information of ZCR Software and Hardware Installation, please refer to **Promise RAID Function (For 20276 Chipset Used) User's Manual** that come with your motherboard.

Appendix G: Acronyms

Acronyms	Meaning
ACPI	Advanced Configuration and Power Interface
APM	Advanced Power Management
AGP	Accelerated Graphics Port
AMR	Audio Modem Riser
ACR	Advanced Communications Riser
BBS	BIOS Boot Specification
BIOS	Basic Input / Output System
CPU	Central Processing Unit
CMOS	Complementary Metal Oxide Semiconductor
CRIMM	Continuity RIMM
CNR	Communication and Networking Riser
DMA	Direct Memory Access
DMI	Desktop Management Interface
DIMM	Dual Inline Memory Module
DRM	Dual Retention Mechanism
DRAM	Dynamic Random Access Memory
DDR	Double Data Rate
ECP	Extended Capabilities Port
ESCD	Extended System Configuration Data
ECC	Error Checking and Correcting
EMC	Electromagnetic Compatibility
EPP	Enhanced Parallel Port
ESD	Electrostatic Discharge
FDD	Floppy Disk Device
FSB	Front Side Bus
HDD	Hard Disk Device
IDE	Integrated Dual Channel Enhanced
IRQ	Interrupt Request
I/O	Input / Output
IOAPIC	Input Output Advanced Programmable Input Controller
ISA	Industry Standard Architecture

to be continued.....

Appendix

Acronyms	Meaning
LAN	Local Area Network
LBA	Logical Block Addressing
LED	Light Emitting Diode
MHz	Megahertz
MIDI	Musical Instrument Digital Interface
MTH	Memory Translator Hub
MPT	Memory Protocol Translator
NIC	Network Interface Card
OS	Operating System
OEM	Original Equipment Manufacturer
PAC	PCI A.G.P. Controller
POST	Power-On Self Test
PCI	Peripheral Component Interconnect
RIMM	Rambus in-line Memory Module
SCI	Special Circumstance Instructions
SECC	Single Edge Contact Cartridge
SRAM	Static Random Access Memory
SMP	Symmetric Multi-Processing
SMI	System Management Interrupt
USB	Universal Serial Bus
VID	Voltage ID
ZCR	Zero Channel RAID

Customer/Cour	ntry :	C ompany:	C ompany:		
Contact Person:		E-mail Add. :			
Model name/Lo	t Number:			PCB revision:	
BIOS version:		0.S./A.S.:		·	
Hardware	Mfs.	Model name	Size:	Driver/Utility:	
Configuration					
CPU					
Memory					
Brand					
Video Card					
Audio Card					
HDD					
CD-ROM /					
DVD-ROM					
Modem					
Network					
AMR/CNR					
Keyboard					
Mouse					
Power supply					
Other Device					
Problem Descri					