

i686

User's Guide

Copyright & Trademarks

Motorola Mobility, Inc. Consumer Advocacy Office 600 N US Hwy 45 Libertyville, IL 60048 www.hellomoto.com

Note: Do not ship your product to the above address. If you need to return your product for repairs, replacement, or warranty service, please contact the Motorola Customer Support Center at:

1 (800) 453-0920 (United States)

1 (877) 483-2840 (TTY, TDD United States for hearing impaired) 1-800-461-4575 (Canada)

Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Contact your service provider for details.

All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA, the Stylized M Logo, MOTOBLUR and the MOTOBLUR logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. The Bluetooth trademarks are owned by their proprietor and used by Motorola Mobility, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© 2010 Motorola Mobility, Inc. All rights reserved.


Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Product ID: MOTOROLA BRUTE i686


Manual Number: NNTN8086A

HELLOMOTO

Introducing your new Motorola i686 wireless phone. Here's a quick anatomy lesson.

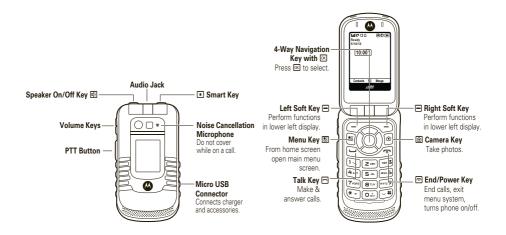

check it out

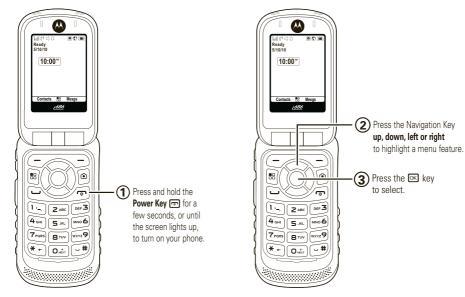

contents

check it out	2
menu map	5
essentials	7
about this guide	7
SIM card	8
microSD card	8
battery	10
turn handset on & off .	13
enable security	13
make a phone call	14
answer a phone call	14
advanced calling	14
make a private call	15
answer a private call	16
store a phone number	
or private ID	18
contacts	18

call a stored phone number or private ID . finding your phone	19
number and private	
ID	19
messaging	19
MMS features	20
inbox	24
outbox	29
sent items	30
customize messaging.	31
using your handset as	
a modem	36
basics	37
display	37
main menu	38
carousel menu	38
text entry	39

volume	42
navigation key	42
handsfree speaker	43
transmitters	43
use GPS with map	
software	43
features for the	
hearing impaired	43
ΤΤΥ	45
security features	45
main attractions	47
water resistance	47
multimedia	47
my music	52
my images	60
my videos	61
camera	62
camcorder	65

PTX features	67
one touch PTT	75
PT manager	76
Mike wireless web	
services	76
Bluetooth [®]	78
dual microphone noise	
cancellation	82
call features	83
turn off a call alert	83
recent calls	83
redial	84
caller ID	84
call forward	85
voice names	85
emergency calls	86
international calls	87
speed dial	87
voicemail	87
net alerts	89

Mike Talk Around 90
switching to Mike Talk
Around
exiting Mike Talk
Around
channels and codes 91
private Mike Talk
Around calls
making emergency
calls while in Mike
Talk Around mode 96
setup options
customize
ring tones
backlight
wallpaper
datebook 100
hide or show location
information 101
reorder apps menu 103

Safety,	R	е	g	u	la	a1	to	r	y	8	Ś		
Legal.	•			•							•	•	104
index.													124

menu map

main menu



Recent Calls

- Contacts
 - [New Contact]



Messages

- ICreate Messagel
- Voice Mail
- Inhox
- Drafts
- Outbox
- · Sent Items
- Fax Mail
- Net Alert

Web

R

((4

Browser

Multimedia

- Shop Media Center
- My Images My Music
- My Videos
- Camera
- Camcorder
- Ring Tones
- VoiceRecord



- Call Alert
- PT Manager
- PTT Options
- Talk Around

n Games and Apps

- Buy More
- Alarm Clock Plus
- My Images
- My Music
- My Videos
- iHélp
- Java System
- Memory Card

Tools

- My Info
 - My Name
 - Mobile
 - Private1
 - Private2
 - Work1
 - Work2
 - Home
 - Email1
 - Email2
 - Fax
 - Pager
 - Talkgroup
 - IP
 - Other
 - IP1 Address
 - IP2 Address
- Profiles
 - [New Profile]
 - Standard
 - Vibration
 - In-Car

- Browser
- Phone Only
- DC Only
- Alarm Clock Plus
- Bluetooth
 - Audio Devices
 - Pair to Devices
 - Device History .
 - Setup
 - Find Me
 - File Transfer Help
- GPS
 - Position
 - Privacy
 - Interface
- Datebook
 - [New Event]
- Call Timers
 - Last Call
 - Phone Reset
 - Phone Lifetime
 - Prvt/Grp Reset
 - Prvt/Grp Lifetime
 - Kbytes Reset
- Memo



Settings (see next page)

This is the standard main menu layout. Your phone's menu may be a little different.

settings menu

Display/Info

- Wallpaper
 - Internal
 - External
- Text Size
- Theme
- Backlight
 - Timer
 - Java Timer
- Clock
 - Display
 - Screen Saver
 - Time Format
 - Date Format
 - Year
- Menu View
 - Icon View
 - List View
 - Tab View
- Large Dialing
- Language

Phone Calls

- Set Line
- Any Key Ans
- Auto Redial
- Call Waiting
- Auto Ans
- Flip Activation

- Minute Beep
- Call Duration
- Noise Cancellation
- TTY
- Hearing Aid
- Notifications
- DTMF Dialing
- Call Forward
- Prepend

Personalize

- Reorder Menu
- Shortcuts
- Carousel
- Up Key
- Down Key
- Left Softkey
- Right Softkey
- Power Up

Volume

- Ringers/Alerts
- Speaker
- Earpiece
- Multimedia
- Keypad

Voice Playback

- Speak Text
- Speak Caller
- Voice
- Multimedia Volume

Memory Card

- Remove Card
- Store Media
- Format Card
- Help

Security

- Phone Lock
- Keypad Lock
- SIM PIN
- GPS PIN
- Change Passwords

Advanced

- Alert Timeout
- Call Completion
- Headset/Spkr
- Connectivity
- Reset Defaults
- Return to Home
- Transmitters
- Phone Only

Connections

- Bluetooth
- USB
 - Memory Card Access
 - Data Modem
 - Application Access
 - GPS NMEA
 - Help

essentials

Caution: Before using the phone for the first time, read the Important Safety and Legal information included in the gray-edged pages at the back of this guide.

about this guide

This guide shows how to locate a menu feature as follows:

Find it: $\blacksquare >$ > Phone Calls

This means that, from the home screen:

1 Press the *menu key* 💼 and then press the **Settings** menu option 💝.

2 Press the *navigation keys* ⊕ to scroll to Phone Calls, and press the *center key* ⊡ to select it.

symbols



This means a feature is network or subscription dependent and may not be available in all areas, or might not be offered by your service provider. Contact customer service for more information.



This means a feature requires an optional accessory.

SIM card

insert the SIM card



Warning: To avoid loss or damage, do not remove your SIM card from your phone unless absolutely necessary.

microSD card



A microSD card is removable flash memory you can use to store pictures, videos, and audio files.

You can connect your phone using a Motorola data cable directly to your computer, access the microSD card loaded in the phone to save or delete music, images, videos, or audio files.

Find it: $\blacksquare >$ > Connections > USB

insert the microSD card

1 Remove the battery door, lift the black plastic indicator and slide the microSD card in place. Return the battery cover when you are done.



Note: The first time you insert a microSD card in your phone, you will see the following options: [Do Nothing], Go To Music Player, Go To Camera, and Go To Media Center. Select the option of your choice and continue.

remove the microSD card

Warning: Do not remove the microSD card before selecting the **Remove Card** option under **Settings**. Removing the microSD card before selecting the **Remove Card** option could result in loss of data.

- 1 From the home screen press → ★ > Memory Card > Remove Card.
- 2 Once the handset confirms it is safe to remove the micorSD card, press ☐ under OK.
- **3** Remove the battery door.

4 Lift the black plastic indicator and, with your fingernail, slide the memory card out of the slot.



5 Close the memory card slot cover.

battery



Note: Please consult "Battery Use & Safety" on page 104 before using this product.

battery installation

1 Press down on the battery door latch, and with a coin, turn it counterclockwise to the unlocked position.



Warning: Do not use a sharp object as it may damage the lock.

2 Using the recess, lift the battery door to remove it from thethe phone.



3 Push the battery down until it clicks in place.



4 Replace the battery door, pressing firmly down on it to ensure a proper, watertight seal. With a coin, turn the battery door latch to the locked position.



Warning: In order for your phone to be water resistant, the battery door must be properly attached and locked.

battery charging

New batteries are not fully charged.

charge using the charger

1 Pull out the connector cover, and insert the charger into the micro USB connector on your phone as shown.



battery indicators

Ũ	The battery is at approximately 100% to 90% capacity when the indicator is blue and displaying three bars.
	The battery is at approximately 65% capacity when the indicator is green and displaying two bars.
	The battery is at approximately 10% capacity when the indicator is yellow and displaying one bar.
	The battery is at approximately 5% capacity when the indicator is red and has a flashing red bar.
æ	The battery is charging.

charge from your computer

1

You can partially charge your phone's battery by connecting a Motorola-approved USB cable from your phone's micro-USB port to a high power USB connector on a computer (not a low-power one, such as the USB connector on your keyboard or bus-powered USB hub). Typically, USB high-power connectors are located directly on your computer.

turn handset on & off

To turn on your phone, press and hold r for a few seconds or until the display turns on. If prompted, enter your four-digit unlock code.

Note: If you press the ratio for more than four seconds, the handset will power "On" in Transmitters Off mode. See "transmitters" on page 43.

To turn off your phone, press and hold r for two seconds.



enable security

You must enable security the first time you power on your phone or within 10 days of first activation of your phone.

- 1 Press 🖃 under Ok.
- 2 You are prompted to enable security. Press — under Yes. A series of screens followed by the default home page displays.
- **3** Press **1** to return to the home screen.

make a phone call

Enter a phone number and press i or use a voice command. See "place a call using a voice name" on page 86.



To hang up press 📼.

answer a phone call

- 1 If you want to answer the call on speaker phone, press the speaker key 🖾 on the top of the phone.
- **3** If you are using a Bluetooth headset, press the answer key on your headset. To hang up press the key again.

advanced calling



feature call waiting To accept the second call and put the active call on hold press 🖃 under Yes. To accept the second call and end the active call press 3-way call Make or receive a phone call and press 🔠 > 3 Way. Enter the second phone number, press 🖵 and 🖃 under .loin You cannot make any other calls during a three-way call, even if one party hangs up.

feature	
any key	To answer phone calls by
answer	pressing any key on the keypad press 🗊 > 💖 > Phone Calls > Any Key Ans > On.

make a private call

Your Private ID is the number at which you receive one-to-one Private calls.

Talkgroup numbers are numbers through which you receive one-to-many group calls.

to make a Private call

- 1 Enter the Private ID you want to call.
- 2 Press and hold the PTT button. Begin talking after your phone emits a chirping sound.



3 Release the PTT button to listen.

To end the call press 🝙.

Note: A Private call ends automatically if there is no activity on the call for a few seconds.

send call alerts

Sending a call alert discretely lets the recipient know that you want to talk to him or her on a Private call.

When you send a call alert, the recipient's handset displays your name and emits a series of beeps or vibrations.

to send a call alert

- 1 Enter the Private ID you want to call as you would when making a Private call.
- 2 Press 🖃 under Alert.

When the message **Ready To Alert** appears on the display, press the PTT button until the message **Alert Successful** appears.

answer a private call

- 1 When your phone emits a chirping sound or vibrates to indicate you are receiving a Private call, wait for the caller to finish speaking.
- 2 Press and hold the PTT button and begin talking after your phone emits a chirping sound.
- **3** Release the PTT button to listen.

To end the call press 🝙.

answer a call alert

When you receive a call alert, you cannot receive phone calls or Private calls until you do one of the following:

option

Answer: Begin a Private call with the sender.

option

Queue: Store the call alert to the call alert queue.

Clear: Dismiss and delete the call alert.

to answer a call alert

1 Press the PTT button to start a Private call with the sender.

or

2 Queue the call alert by pressing 🖃 under **Queue**.

or

3 Clear the call alert by pressing 🖃 under Clear.

making a phone call while in a private call

When you are in a Private call, you can make a phone call to the other participant if that person's mobile phone number is stored in **Contacts.**

- 1 While in a Private call press 🗔.
- 2 A confirmation screen will appear asking to **Start Call To:**.
- 3 Press 🖃 under Yes to begin the call.

call status and completion

This allows you the option of sending a message to a caller after declining an incoming call, PTT call or call alert.

Find it: $\blacksquare > > Advanced > Call Completion$

To setup a message for incoming calls or outgoing calls

- 1 Press > ♥ > Advanced> Call Completion > Incoming call or Outgoing calls.
- 2 Select Off, Ask First or Automatic.
- 4 Press 🐼 and then press 🖃 Back.

To send a message after receiving or making a call

- 1 After a failed incoming or outgoing, PTT call or call alert, within five seconds, **Send Text Message To** will appear.

store a phone number or private ID

You can store a phone number or private ID in **Contacts**:

Find it: $\blacksquare > \triangledown > [New Contact]$

- 1 Enter a name for the new entry. Each entry's name can contain 20 characters.
- 2 Select a specific Ring Tone.
- 3 Select a type for the entry (Mobile, Private1, Private2, Work1, Work2, Home, Email1, Email2, Fax, Pager, Talkgroup, IP or Other). To store a private ID choose Private1 or Private2.

contacts

feature	
edit/delete contact entry	Press — under Contacts . Select a contact and press E > Edit . Change the desired content and press K. Press — under Save .
set ringer ID	Press in under Contacts. Select a contact and press Select Binger and chose your desired ring tone. Press in under Back .
set picture ID	Press in under Contacts. Select a contact and press B > Edit > [Ring Tone/Picture]. Select Picture and choose your desired picture and press I. Press I under Back > I under Save.

call a stored phone number or private ID

Find it: 🔠 > 💐.

- 1 Scroll to the **Contacts** entry.
- 2 If the Contacts entry contains more than one number, scroll left or right until the type of the number you want to call is displayed (Mobile, Private1, Private2, Work1, Work2, Home, etc.).
- 3 If you chose a phone number, press ☐ to call the entry, or if you chose a Private ID, Talkgroup ID, or SDG List, press and hold the PTT button to call the number.

finding your phone number and private ID

Find it: 🔠 > 🖄 > My Info.

messaging

Your phone has the ability to use both MOSMS and Multimedia Messaging Service (MMS) messaging. The type of messaging your phone uses will be determined by your service provider. If your service provider offers messaging through MOSMS, your phone sends and receive messages using MOSMS.

If your service provider offers MMS, your phone sends and receives messages using MMS. Additionally, MMS allows you to send and receive messages that may include text, pictures, videos, and audio files.

create and send messages

- 1 From the home screen press ☐ under Messages > [Create Message].
- 2 Enter the phone number of the person you want to send the message to and press ∞ or press ullet under Search. Select



 $\ensuremath{\textit{Contacts}}$ or $\ensuremath{\textit{Recent Calls}}$ to find the number you want.

quick notes

When you are filling in the **Message** and **Subject** fields, you can add ready-made words or short phrases called Quick Notes. After you add these words or phrases, you can edit them as you would any other text.

- 1 While you are creating a message, scroll to or select **Message** or **Subject**.
- 2 Press 🖃 under QNotes.

- **3** Select the quick note you want to insert into the message.
- 4 Press 🖃 under Send.

MMS features

Note: The following features are available only when using MMS.

more message options

To view more message fields in a message you are creating, select **....More...**

The following options become available:

option

Subject: Create or edit the subject line.

Attach: Attach a picture, audio file, voice record or video file.

Cc: Send a copy of this message to someone else.

option

Auto Replies: Allows you to create a list of possible short answers for the recipient to choose when replying to your message.

Priority: Set priority Normal or High.

Valid Until: Set a date after which attempts to deliver the message end, or press — under No Date.

insert a picture, video, and audio recording

You can insert one or more pictures, videos, and audio files from the media center into the body of the message. You can include text in the body of your message in addition to these items.

insert items

While you are filling in the **Message** field, press 🗐, select **Insert** and choose from **Insert QNotes**,

Insert Picture, Insert Audio, Insert Video, Capture Video, Capture Picture or Record Voice.

A list of available pictures, videos, or audio files appears. You can only insert one item at a time.

Select the picture, video, or audio recording you want to insert.

remove an inserted item

To remove an item from the message you are creating, highlight it and press — under **Delete**.

attach a picture, video, or audio recording

You can attach one or more pictures, audio or voice recordings from your phone into the body of the message. You can include text in the body of your message in addition to these items. 1 While you are filling in the Attach field, press [New Attach] > and select from Browse Pictures, Capture Picture, Browse Audio, Record Voice, Browse Video, or Record Video.

A list of available pictures, audio files, or voice recordings appears.

2 Select the picture, audio or voice record you want to attach.

If you want to attach more items, select [New Attach].

3 When finished, press 🖃 under Done.

Note: You can only attach audio files, video files, and pictures if they are not forward locked and if their DRM settings do not prevent you from sending.

Forward locked items are usually copyright protected, and you cannot share them with anyone, such as in Private calls or by uploading them from your phone.

take a new picture

- 2 Select Capture Picture. This accesses the camera.
- **3** Take the picture. For instructions on how to take the picture see "camera" on page 62.
- 4 When you have captured the picture you want, press
 under Save.

To discard the picture, press 🖃 under **Discard**. You can then take another picture.

5 When finished, press 🖃 under Done.

The picture is attached to the message and saved to the default storage location.

record a video

You can record a video to send with a message:

- 1 Select Attach > [New Attach] > Record Video.
- 2 Record and adjust video.

To view the video without saving it, press I under Review.

- To save the video, press ISS.
 To discard the video without saving it, press ISS
 under Discard.
- **4** The video is attached to the message and saved to the media center in the default storage location.

create a new voice record

You can create a new voice record to send with a message:

1 Press 🐻 or select Attach > [New Attach].

- 2 Select Record Voice.
- **3** Say the message you want to record into the microphone.
- 4 When you are finished recording, press OK.
- 5 When finished, press 🖃 under Done.
- 6 The voice record is attached to the message and saved to the media center and the list of voice records.

remove an attachment

To remove an attachment in a message you are creating:

- 1 Select Attach.
- 2 Scroll to the attachment you want to remove.
- 3 Press 📰 > Unattach.

use drafts

When you save a message as a draft, it is saved in the drafts folder.

Find it: Press $\blacksquare > \textcircled{>} > Drafts.$

- **1** Select the draft you want to edit.
- 2 To edit the fields you want to change, follow step 2 through step 4 in "create and send messages" above.

delete a draft

When you send a draft, it is removed from the Drafts folder.

- 1 To delete a message in the Drafts folder without sending it, scroll to the message you want to delete and press ☐ under **Delete**.
- 2 Press 🖃 under Yes to confirm.

inbox

Find it: Press $\mathbb{B} > \mathfrak{S} > hbox.$

receive a message

- 1 To view the message press 🖃 under **Read**.
- 2 To dismiss the message notification press under Exit.

While reading a text and numeric message that contains a phone number, you can press to call that number.

threaded inbox

The threaded Inbox allows you to organize your messages by subject or sender.

1 From the Message Center, Press ⇒ Threading, and select from None, Subject, or Sender. **Note:** Threading by subject is dependant upon your service provider.

read from the message center

- **2** Select the message you want to read.
- 3 To reply to the message, press 🖃 under Reply.

delete unread messages

- **1** Scroll to the message you want to delete.
- 2 Press in under Delete and in under Yes to confirm.

forward a message

1 Press 🔳 > Forward.

 Create and send your message. Embedded objects and attachments are included when you forward a message.

lock and unlock messages

Locked messages cannot be deleted until you unlock them.

- 1 View the message you want to lock or unlock.
- 2 Press 🕄 > Lock Message or Unlock Message.

call a number in a message

If a message you receive contains a phone number, Private ID, or Talkgroup ID in the From field, the T_0 field, the C_c field, the Subject field, or the body of the message, you can call or send a call alert to that number.

send a call alert

1 View the message.

- 2 Highlight the Private ID or Talkgroup ID you want to alert.
- 3 Press 🔠 > Alert.
- 4 Push the PTT button.

make a group call



- 1 View the message.
- 2 Highlight the Talkgroup ID you want to call.
- 3 Press 🔳.
- 4 Select Talkgroup.
- **5** Push the PTT button.

store message information to contacts

If a message you receive contains a phone number, Private ID, Talkgroup ID, or an email address in the From field, the To field, the Cc

field, the **Subject** field, or the body of the message, you can store this information to **Contacts**.

- **1** View the message.
- 2 Highlight the number or email address you want to save.
- $\textbf{3} \quad \text{Press} \ \textbf{BB} > \textbf{Save Number or Save Address}.$
- 4 To store the number or email address as a new entry, select [New Contact].

To store the number or email address to an existing entry, select the entry.

- 5 With the Contacts type field highlighted, press ⊕ left or right to display the Contacts type you want to assign the number or email address.
- 6 Press 🖃 under Save.

reply to a message

To reply to a message:

- **1** View the message you want to reply to.
- 2 To reply to the sender only, press under **Reply** or press and select **Reply All** to reply to all recipients.
- **3** A list of short phrases appears. Select any of these phrases to add it to your messages or select [Create Reply].
- 4 Edit any message fields you want to change.
- 5 Press 🖃 under Send.

use auto replies

If the message you are replying to was sent with auto replies, it contains a numbered list of possible replies for you to send. Press the number of the reply you want to send. The reply is sent immediately without further action.

go to a website

If a message contains one or more website URLs, you can go to that website.

- 1 View the message.
- 2 Highlight the website URL you want to go to.

3 Press 📧 > Go To Website.

Note: The entire URL must appear in the message to allow you to open the website.

embedded objects and attachments

If a message contains pictures, videos, or audio files in the body of the message, highlight each picture, video, or audio recording to view or play it.

If a message contains a picture, video, or audio recording as an attachment, open the

attachment to view the picture or play the video or audio recording.

open attachments

- 1 View the message.
- 2 Highlight the attachment you want to open. Attachments appear at the end of a message.
- 3 Press OK.

Attachments of an unknown type cannot be opened, but can be deleted.

save an embedded picture, video, or audio recording

To save a picture, video, or audio recording that is part of the body of a message you receive:

1 View the message.

- 2 Highlight the picture, video, or audio recording you want to save.
- 3 Press 🔠.
- 4 Select Save Picture, Save Video, or Save Audio. The item will save in the default storage location.

delete an embedded picture, video, or audio recording

To delete a picture, video, or audio recording that is part of the body of a message you receive:

- 1 View the message.
- 2 Highlight the picture, video, or audio recording you want to delete and press 🗐.
- 3 Select Delete Picture, Delete Video, or Delete Audio.

save attachments

- 1 View the message.
- 2 Highlight the attachment you want to save.
- 3 Press 📰 > Save Attachment.

Selected items save to the default storage location.

delete attachments

- 1 View the message.
- 2 Highlight the attachment you want to delete.
- 3 Press 🔠 > Delete Attachment.
- 4 Press 🖃 under Yes to confirm.

outbox

The Outbox holds all unsent messages.

Find it: Press \blacksquare > \bigcirc > Outhox.

resending failed messages from the outbox

- 1 Scroll to the message you want to resend or press the number of the message you want to resend.
- 2 Press 🖃 under Resend.

cancel an unsent message

- 1 Highlight the message you want to cancel.
- 2 Press 🔠.
- 3 Press 🖃 under Cancel.

sent items

The Sent Items box holds sent messages.

forward items from sent items

- 1 Scroll to the message you want to forward.
- 2 Press 🔠 > Forward.

setting up read receipts

While creating a message you can set up read receipts. Press 🔳 > **Report** to view the options.

Off: read receipts will not be generated.

On Delivery: read receipt will be generated when a message is delivered.

When Read: read receipt will be generated when a message is read.

Both: read receipt will be generated when a message is delivered and read.

Note: Available with MMS only.

check delivery status

If a message was successfully sent and you set the message to confirm delivery, you can check the delivery status:

- 1 Scroll to the message you want to view.
- 2 Press 📰 > Delivery Status.

delete sent messages

- **1** Scroll to the message you want to delete.
- 2 Press 🖃 under Delete.
- 3 Press 🖃 under Yes to confirm.

delete all unlocked sent messages

- 1 Press 📰 > Delete All.
- 2 Press 🖃 under Yes to confirm.

customize messaging

Find it: $\mathbb{B} > \mathfrak{S} > \mathbb{B} > \mathsf{Setup}$.

This option is available from many context-sensitive menus.

The following options become available:

option

Signature: Allows you to create a signature that is automatically inserted at the end of your messages. Signatures can be edited before sending the message.

Quick Notes: Lets you create new Quick Notes and edit or delete Quick Notes you created.

option

Cleanup: Controls how long messages remain in the **Inbox** and **Sent Items** before being deleted.

Report Default: Allows you to be automatically notified when your message is delivered.

Memory Size: Shows a report on used and free memory in your phone.

MMS Setup: opens a submenu to set MMS options.

Note: Available with MMS only.

Text Message Setup: opens a submenu to set text messaging options.

Note: Available with MOSMS only.

manage memory

Your text Inbox and Sent Items hold 200 messages each. The Outbox, and Drafts folder hold up to 30 messages each. If they

are full, you cannot receive messages, send messages, or save drafts until you delete some items.

Note: Media files and Java applications can affect the available amount of memory on your phone. If you run out of memory and your Inbox, Sent Items, Outbox, and Drafts folder are empty, delete unwanted media files and Java applications to free up memory.

To view the amount of memory available in your text inbox:

Find it: Press $\blacksquare > \textcircled{>} > \blacksquare > Setup > Memory Size.$

MMS setup

Find it: $\square > \bigcirc > \square > Setup > MMS$ Setup.

This option is available from many context-sensitive menus when you are using MMS.

The following options become available:

option

Friendly Name: Allows you to create a friendly name. Your friendly name is displayed in the From field on other iDEN handsets when your message is received.

Download Options: Controls whether your phone downloads new messages. Set this option to **Automatic** if you want your phone to download new messages automatically. Select **Manual** if you want your phone to prompt you before downloading new messages.

Replies: Lets you create or edit and delete reply phrases you created.

text message setup

Find it: $\blacksquare > \diamondsuit > \blacksquare >$ Setup > Text Msg setup.

This option is available from many context-sensitive menus when you are using MOSMS.

The following options become available:

option

Srvc Cntr No: Allows you to enter a service center number.

Expire After: Allows you to set the number of days before a message expires.

new quick notes and reply phrases

create quick notes or replies

- 1 From the Setup menu, select Quick Notes, or select MMS Setup > Replies.
- 2 Select [New Quicknote], or [New Reply].

3 Enter text from the keypad and press 🖾.

edit quick notes or replies

You can edit only Reply phrases you have created.

- 1 From the Setup menu, select Quick Notes, or select MMS Setup > Replies.
- 2 Select the quick note or reply you want to edit.
- **3** Edit the text and press **CK**.

delete quick notes and reply phrases

- 1 From the Setup menu, select Quick Notes or MMS Setup > Replies.
- 2 Scroll to the quick note or reply you want to delete.
- 3 Press 🖃 under Delete.
- 4 Press 🖃 under Yes to confirm.

Note: You can delete only reply phrases you have created.

delete all quick notes

- 1 From the Setup menu, select Quick Notes.
- 2 Press 📧 > Delete All.
- 3 Press 🖃 under Yes to confirm.

cleanup options

The cleanup option controls how long messages remain in the Inbox and Sent Items before they are deleted. You set the cleanup option for the Inbox and Sent Items separately.

The clean up option deletes only read, unlocked messages and sent messages.

Find it: $\blacksquare> \diamondsuit> \blacksquare>$ Setup > Cleanup.

1 Select Inbox or Sent Items.

2 Choose a clean up option from the following list:

option

Off: Messages are never automatically deleted.

5 Messages: If you have more than 5 messages, messages are deleted in the order they were received, starting with the oldest, until 5 are left.

10 Messages: If you have more than 10 messages, messages are deleted in the order they were received, starting with the oldest, until 10 are left.

1 Day: Messages are deleted if they are older than 1 day.

3 Days: Messages are deleted if they are older than 3 days.

With these options, messages are deleted when you exit the message center after setting the option.

FirstIn FirstOut: Messages are deleted as necessary on a FirstIn FirstOut basis.

Custom: Lets you create a clean-up option of up to 199 messages or 99 days for the Inbox and Sent Items.

delete all messages

To delete all read, unlocked messages from the Inbox, all messages in the Drafts folder, all successfully sent messages in Sent Items, or unsent messages in the Outbox:

Find it: 🔠 > 🔄.

- 1 Select Inbox, Drafts, Sent Items, or Outbox.
- 2 Press 🔠 > Delete All.

3 Press 🖃 under Yes to confirm.

delete a thread

To delete a thread from the Inbox:

- 1 From the Inbox, select a thread.
- 2 Press 📧 > Delete Thread.
- 3 Press 🖃 under Yes to confirm.

message notifications

When you receive a message, your phone notifies you with text on the display, a notification tone or vibration.

You can access the message or dismiss the notification.

If you dismiss the notification, the message is not deleted. It can be accessed through the message center.

If you are not on a phone call when you receive a message, your phone sounds a

notification tone every 30 seconds until you access the message or dismiss the alert.

If you are on a call when you receive a message, your phone may sound a notification tone during the call or after you end the call, depending on how you set your notification options.

set notification options

To control whether your phone sounds message notification tones while you are on a phone call:

Find it: $\square >$ > Phone Calls> Notifications.

Select from the following options:

option

Receive All: Tones sound during calls for all types of messages.

option

Message Mail Only: Tones sound during calls for mail messages; tones for all other types of messages are held until you end calls.

Delay All: Tones for all types of messages are held until you end calls.

Note: Delay All is the default setting.

To set notification options during a call press B > Call Setup > Notifications.

using your handset as a modem



Your phone can be connected to a computer via USB for use as a modem. For more specific information on how to setup your phone for use with your computer please visit **www.motorola.com/support** and look under the FAQ section.


basics

See page 1 for a basic phone diagram.

display

The home screen shows when you turn on the phone. To dial a number from the home screen, press number keys and press \square .

Note: Your home screen may look different.

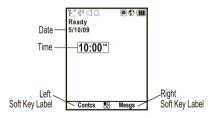

Soft key labels show the current soft key functions. For soft key locations, see page 1.

status indicators

Status indicators are shown at the top of the home screen:



1 Signal Strength Indicator: Vertical bars show the strength of the network connection. You can't make or receive calls when lo shows.

- 2 Active Phone Line: G1 indicates phone line 1 is ready to make calls; G2 indicates phone line 2 is ready to make calls.
- **3 Speaker On/Off:** Sounds associated with Private calls and group calls can be set to come through the earpiece rather than through the speaker.
- 4 Ringer Vibe On/Off: Your phone is set to not ring.
- 5 Message Indicator: Shows when you receive a text message, MMS message, and voice mail.



- 6 **Packet Data:** Your handset is ready to transfer packet data or is transferring packet data when it shows a blinking arrow.
- 7 Battery Charge Indicator: A fuller battery indicates a greater charge. Recharge the battery when your phone shows Low Battery.

main menu

All your phone's features can be accessed through the main menu. You can set the main menu to appear as List View, Tab View or Icon View.

Find it: 🖽 > 💖 > Display/Info > Menu View.

carousel menu

The Carousel Menu allows you to access up to nine applications from your phone's idle screen.

accessing an application

- 1 Using the navigation key, scroll left or right until you highlight the desired application.
- 2 Press 🖾 to launch the application.

Note: Availability of the Carousel Menu is dependent on your service provider.

auto hide

- 1 Press : > ♥ > Personalize > Carousel > Auto Hide.
- 2 Select from Always On, 2 seconds, 4 seconds, or 8 seconds.

Note: When **Auto Hide** is set to **Always On**, the Carousel Menu will always be visible on the idle screen.

assigning applications

- 1 Press $\square >$ Personalize > Carousel.
- 2 Highlight the position on the Carousel Menu you would like the application to occupy and press ∞.
- 3 Highlight an application and press imes to select it.

text entry

Your phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry or when using Text Messaging).

change the character input mode

- 1 When you see a screen where you can enter text, press 🖪 to change the character input mode.
- 2 Select one of the following options:

entry method		
Alpha	Press a key several times for different characters.	
Word	Enter words using a predictive text entering system that lets you enter a word with fewer keypresses.	

entry method		
Symbols	Enter symbols.	
Numeric	Enter numbers by pressing the numbers on the keypad.	
Text Input Settings	Selects the desired entry languages and Word Prediction features.	
Insert	Selects a item to be inserted, such a picture, an audio/video clip or a voice recording.	
	Note: available only when using MMS messaging.	

Tip: When entering text, press and hold **#** to change letter capitalization (Abc > ABC > abc).

word method

The Word text input method lets you enter text into your phone by pressing keys just once per letter. The Word text input method combines the groups of letters found on each phone key with a fast-access dictionary of words, and recognizes what you want to text as you type. It first offers the most commonly-used word for the key sequence you enter and lets you access other choices with one or more presses of the ① key or ny pressing the navigation key up or down. You may also hold the navigation key down to display a pop-up list of choices.

enter a word using "word" method character input

- 1 Select the **Word** character input method.
- 2 Press the corresponding keys once per letter to enter a word (for example, to enter the word Bill, press ② ④ ⑤ ⑤). (If you make a mistake, press ※ to erase a single character. Press and hold ※ to delete an entire entry.)

3 To accept a word and insert a space, press ≇.

To accept a word completion (such as Billion when you entered Bill), press ③ right.

If you get a word you don't want, you can press the ① key to see more word choices and pick the one you want.

alpha method

To enter characters by tapping the keypad:

- 1 Select the Alpha method.
- 2 Press the corresponding keys repeatedly until the desired letter appears. (For example, to enter the word **Bill**, press **2** twice, **4** three times, **5** three times, and **5** three times again. If you make a mistake, press **Delete** to erase a single character. Press and hold **Delete** to erase an entire word.)

By default, the first letter of an entry is capitalized and the following letters are lowercased. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Characters scroll in the following order:

characters		
1	Space . 1 ? ! , @ & : ; " - () ' ¿ ¡ % £ \$ ¥	
2	A B C 2 Á Ã Â À Ç	
3	D E F 3 É Ê È	
4	GHI4ÍÌ	
5	J K L 5	
6	M N O 6 ñ Ó Õ Ô Ò	
7	PQRS7ß	
8	ΤUV8ÚÜÛÙ	
9	W X Y Z 9	

characters		
0	+ - 0 * / \ [] = > < # §	
#	Space / Shift	
×	Back	

When entering text, press and hold # to switch between lowercase and uppercase letters. The icons in the upper left-hand corner of the screen show the character type.

character type		
a* or a#	Lowercase	
A* or A#	Uppercase	
At or At	Shift Lock	
123	Numerical	
@?!	Symbols	

volume

Press the volume keys up or down to:

• change the earpiece volume during calls



• change the ringer volume from the home screen

Tip: You can quickly set your ringer to **Vibrate All** by holding the down volume key in the home screen.

navigation key

Press the *navigation key* up, down, left, or right to scroll to items in the display. When you highlight the desired item, press 🖎 to select it



handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

During a call, press 🖨 under **Speaker** to turn the handsfree speaker On.

The handsfree speaker stays on until you press — under **Speaker** again.

transmitters

Consult airline staff about the use of the *Transmitters Off* feature during flight. Turn off your phone whenever instructed to do so by airline staff.

Transmitters Off turns off your phone's calling and Bluetooth features in situations where wireless phone use is prohibited, but you can use the phone's other non-calling features when Transmitters is turned Off. Find it: $\square >$ > Advanced > Transmitters > Off.

use GPS with map software

Your phone can be connected to a PC, laptop, or PDA via Bluetooth and USB for use as a GPS receiver. For more specific information on how to setup your phone for use with your computer please visit **www.motorola.com/support** and look under the FAQ section.

features for the hearing impaired


using your phone with a hearing aid

For best results use the following optimization procedures and handset setting. They

generally apply as well for users with cochlear implants:

optimize your handset position and orientation

While in a phone call slide your phone up and down, then left and right until best microphone coupling is obtained. You also may need to adjust your hearing aid (HA) volume setting.

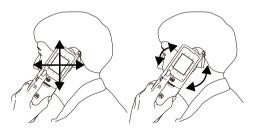

If your HA has a telecoil, activate its switch, then also rotate the handset as illustrated to align the telecoils. **Note:** Some automatically switched hearing aids may need an auxiliary switching magnet.

If you are unsure whether your HA is telecoil equipped or needs an auxiliary magnet, please refer to your HA user guide or contact a hearing aid professional or supplier.



choose your hearing aid setting Find it: 📰 > 💖 > Phone Calls > Hearing Aid.

1 Set this option to **Microphone**. Microphone coupling is now optimized.

or

2 Set this option to **Telecoil**. Handset meets US federal requirements for telecoil coupling sound or set this option to **Off** (factory default). This is the setting for non HA users.

TTY

feature	
turn On TTY	Press 📰 > 💖 >
feature	Phone Calls > TTY > Use TTY > On.
choose TTY	Press 📰 > 💖 >
mode	Phone Calls > TTY > Type.
	Select from TTY, VCO or HCO.
change the	Press 📧 > 💖 >
TTY baud	Phone Calls > TTY > Baud.
rate	Select 45.45 or 50.00 .

feature

change TTY	While in the TTY call, press
mode	> In Call Setup > TTY > Type.
during a call	Select from TTY, VCO or HCO.

Note: The TTY device must be connected to the phone through the micro-USB port. A 2.5 mm to micro USB adapter is required to support TTY.

security features

feature	
phone lock	To lock the phone press > 🏶 > Security > Phone Lock > Lock Now or Auto Lock.

feature		
keypad lock	To lock the keypad press Image: Security > Keypad Lock > Lock Now or Auto Lock.	
enable SIM PIN	Press 📧 > 💖 > Security > SIM PIN > On.	
enable GPS PIN	Note: When you receive your phone, your GPS PIN is 0000.	
	To change your GPS PIN press 🗊 > 😵 > Security > Change Passwords > GPS PIN. Enter the current GPS PIN and enter the new four to eight digit GPS PIN. Re-enter the new four- to eight-digit GPS PIN to confirm.	

feature

change SIM	Press 🕮 > > Security >
PIN	Change Passwords > SIM PIN.

Note: You can make emergency calls on a locked phone (see page 86).

lock and unlock keypad

To lock your phone's keypad, press ⊞ 🔀.

main attractions

water resistance



Your phone is designed to withstand being exposed to water for up to 30 minutes, and up to a depth of one meter. In order for your phone to be water resistant, the battery door must be properly attached and locked, and the audio jack and microUSB connector must be properly sealed.

Warning: Exposing your phone to water outside of these limits, or not using the precautions stated, can result in water damage.

multimedia

Your phone comes with several multimedia applications to let you access pictures, videos, and audio files stored in your phone's memory or in the Audio, Music, Podcast, Image and Video folders on a memory card inserted in your phone's memory card slot: Media Center is a central repository to view all supported multimedia files on your device or your memory card.

Note: The Media Center cannot read the Music and Podcast folder from the SD card.

- My Music provides an enhanced music player for music and podcast files.
- My Images provides a slide show, image browser and image editor.
- My Videos plays video files on the display.
- Camera lets you take still pictures.
- Camcorder lets you take short movies.
- **Ringtones** lets you purchase and preview ringtones for your phone.
- VoiceRecord lets you record audio notes to yourself.

In addition, the following audio files can be accessed through the media center:

- VoiceRecords
- Musical ring tones in the list of ring tones
- Audio files saved from MMS messages received
- Audio files downloaded to your phone

Because the memory card inserted in your phone may contain files saved to it using a device other than your phone, not all types of pictures, videos, and audio files on the memory card may be accessed through your phone's media center.

Items in the media center can be sent in MMS messages and with Bluetooth. See "MMS features" on page 20 and "Bluetooth®" on page 78. Pictures in the media center can be sent in Private calls using Send via PTT. See "PTX features" on page 67.

Note: If the picture size exceeds 95k, it will be resized before it is sent in an MMS message. However, the original image stored in the Media Center will remain unchanged.

Media files supported by the Media Center include:

Format	Bit Rate / Info	Sampling Rate
AAC (MPEG4 AAC-LC) .aac* , .3gp, .m4a, .3ga, .mp4	Up to 320kbps	48 kHz
AAC+ .aac*, m4a, .3ga, .mp4	Up to 128 kbps (16 to 128 kbps)	Max: 48 kHz

Format	Bit Rate / Info	Sampling Rate
AAC+ Enhanced .aac*, .m4a, .3ga, .mp4	Up to 320 kbps (16 to 320 kbps)	Up to 48 kHz
AMR-NB .amr, .3gp, .3ga, .mp4	4.75 kbps – 12.20 kbps (supports all 3GPP specified rates)	8 kHz
AMR-WB .awb, .3ga, .3gp	6.6 kbps - 23.85 Kbps (supports all 3GPP specified rates)	16 kHz
iMelody .imy	1 – 3.5 kHz Monophonic	N/A
MIDI XMF .xmf, .mmf, .xmf0, .xmf1, .mxmf	64 channels	N/A

Format	Bit Rate / Info	Sampling Rate
MIDI Stand .mid, .midi, .smf	64 channels	N/A
MP3 .mp3*, .mpga*	Up to 320kbps	Up to 48 kHz
PCM 16-bit Linear .wav, .au	Up to 1536 kbps	Up to 48 kHz (8, 11.05, 12, 16, 22, 24, 3, 44, 48 kHz)
PCM 8-bit Linear .wav, .au	Up to 1536kbps	Up to 48 kHz
PCM 8-bit A-law .wav, .au	Up to 704 kbps	Up to 48 kHz

Format	Bit Rate / Info	Sampling Rate
PCM 8-bit mu-law .wav, .au	Up to 704 kbps	Up to 44 kHz (8, 11.05, 12, 16, 22, 44 kHz)
Real Audio LBR (Cook) .rm, .ra, ram	Up to 96 kbps	Up to 44.1 kHz (8, 11, 22, 44 kHz)
Real Audio Sipro	5 kbps (fixed rate)	8 kHz
(ACELP [®] .net) .rm, .ra, ram	8.5/6.5 kbps (dual rate)	8 kHz
	16 kpbs (wide band)	16 kHz
Real Audio 10 .rm, .ra, ram	Up to 192 kbps	Up to 48 kHz (8, 11, 12, 16, 22.05, 24, 32, 44.1, 48 kHz)

Format	Bit Rate / Info	Sampling Rate
WMA v9 L2 (also WMA v3, v7, v8) .wma*	Up to 320 kbps	48 kHz

(*) These formats support album art and lyrics.

Supported video file formats include:

Format	Resolution / Bit and Frame Rate	Extension
MPEG4 + AMR-NB MPEG4 + AMR-WB MPEG4 + AAC / AAC+ /Enhanced AAC+	352 x 288 and 320 x 240 (up to 256 kbps); 176 x 144 and 128 x 96 (up to 128 kbps); up to 30 fps	.mp4, .3gp

Format	Resolution / Bit and Frame Rate	Extension
H.263 + AMR-NB H.263 + AMR-WB H.263 + AAC / AAC+ /Enhanced AAC+	352 x 288 (up to 256 kbps); 176 x 144 and 128 x 96 (up to 64 kbps); 15 fps	.3gp
Real Video G2 / 8 / 9	Up to 320 kbps, 320 x 240, 15 fps	.rm, .rmvb
H.264	Up to 320 kbps, 320 x 240, 15 fps	.mp4, .3gp
WMV8 / WMV 9	Up to 384 kbps, 320 x 240, 24 fps	.wmv, .asf

The Media Center also supports the **GIF**, **JPEG**, **PNG**, and **WBMP** image file formats.

my music

Your handset includes a music player that you can use to play music files stored in the phone memory and the MUSIC/AUDIO/ PODCAST directories on the memory card inserted in your phone.

The music player will display the name of the song playing and the artist.



The music player groups the music files into folders and lists. When you select a music file

to play, the music player plays this file, then plays the other music files grouped with it.

The music player also plays podcasts you download to your computer and then save on the Podcast directory on your phone's memory card. You can mark highlights within a podcast file to help you find the parts you most want to listen to.

If your service provider offers MMS, you can send details of the podcast to a friend and send feedback to the podcast creator using MMS messages.

understanding the memory card folder structure

When you first insert the memory card into your phone, five folders are created: **Audio**, **Image**, **Music**, **Podcast**, and **Video**. In order to view files stored on the memory card, you must store the given file in its corresponding format folder: audio files such as ring tones, and voice recordings to the **Audio** folder, pictures to the **Image** folder, music files such as songs to the **Music** folder, Podcasts to the **Podcast** folder and videos to the **Video** folder.

filename rules

When naming files stored on the memory card, the following rules apply:

- The filename can contain UTF8 characters, including ASCII, however only supported characters will be displayed.
- The filename can be up to 255 characters long, including the file extension, however only the first 32 characters will be displayed.

Warning: If a music file name is longer than 255 characters, including the file format (.MP3), the song will not be visible on the player and therefore can not be played. This

can be corrected by renaming the file and replacing it on the card.

play music files

Find it: $\blacksquare > \mbox{\ensuremath{\mathbb{R}}} > \mbox{My Music.}$

1 Scroll to choose how you want your music played (Songs, Playlists, Albums, etc.).

Tip: The Songs folder contains all the music files on the memory card in a single list.

2 To play the first music file in the folder, press in under Play. (If the selected folder contains subfolders, this plays the first music file in the first of the subfolders.)

Press 💌 to view the folder's contents. Scroll to a music file and press 🚍 under **Play** to play the first music file in it.

Any time you are viewing a list of folders with the music player, you can scroll to a folder and press I under **Play** to start playing the contents of that folder or press I to view the contents of the folder.

To stop viewing a folder and return to the folder or list that contains it, press 🖃 under Back.

play music while loading files

The first time the music player finds music files on your memory card, it loads and organizes these files. This may take a long time for a large number of files.

To play music while files are loading:

Find it: $\square > \ > \ > My$ Music.

- 1 Scroll through songs and folders while loading is going on the background.

The following options become available through the navigation panel:

option

Skip to Next or Previous: Press and release right or left to skip to the next or previous music file.

Fast Forward and Rewind: Press and hold ③ right or left for 2 seconds to fast forward or to rewind.

set up the music player

The music player can be set up with the following options by pressing **E** > **Setup**:

option

Shuffle: Lets you set the music player to play the music files in a list or folder in random order.

Repeat: Lets you set the music player to play one or all the music files in a list or folder repeatedly.

Visuals: Lets you choose among different types of visual equalizers which sync with the Music.

3D Music: Lets you experience surround effects when the handset is tethered to a stereo headset.



Setting the 3D Music feature to ${\rm On},$ allows you to select effects from the list of Music Reverbs.

Album View: Lets you choose to view either a list view or an image view.

option

Auto Update: Lets you reload all music files every time you launch My Music. If you set Auto Update to Off, it will follow the last known music library configuration in order to save loading time.

Equalizer: Lets you customize the sound of the music player.

View: Lets you choose between Default view and Folder view.

Music Reverbs: Lets you choose a 3D sound effect for use with the 3D Music feature.

work with playlists

Playlists are lists of music files you create from the files already available through My Music.

Playlists enable you to organize music files, but they do not change anything in other folders or on the memory card. Adding or deleting a file on a playlist does not copy, delete or move it.

create a playlist Find it: III > R > My Music > Playlists > [Create New].

1 Enter a playlist name.

Note: If you do not assign a name, the playlist is named **Playlist** followed by a number. For example, the first playlist you create without naming is automatically named **Playlist-1**.

2 Select [Add Songs]. A list of all music files appears.

Tip: For options to help you sort through this list, press 🗐.

3 Select each file you want on the playlist. A checkmark appears by each selected file.

Tip: To deselect a selected item, scroll to a selected file and press \bigcirc .

The following options are available for existing playlists:

option

Remove Songs: You can remove some or all songs while creating or editing a playlist.

Before you have saved a new playlist or while editing a playlist, scroll to the song you want to remove and press B > **Remove Song** and press M, or you can select **Remove All Songs**. Press M under **Yes** to confirm and M under **Save**.

Reorder Playlists: You can change the order of the playlists in the **Playlists** folder. Press \square > **Edit playlist** > **Reorder Playlists**. Scroll to the playlist you want to move and press \square under **Grab**, and then scroll to the place where you want the playlist to appear and press \square under **Insert**.

Edit a Playlist: You can change a playlist name, add music files, remove music files, and change the order of the music files. Select a playlist and press E > Edit Playlist. Make changes and press under Save.

option

Note: This deletes all playlists except the Favorites playlist.

Reload Music: Searches your memory card for music files.

use the favorites playlist

The **Favorites** playlist is a permanent playlist. You can **Add To Favorites**, remove and change the order of the music files, but you cannot rename or delete music files.

Find it: $\mathbb{B} > \mathbb{R} > My$ Music > Songs.

Select the song you want to add to your favorites and press \square > Add To Favorites.

work with podcasts



Find it: $\mathbb{B} > \mathbb{R} > My$ Music > Podcasts.

Note: The Podcasts folder is empty until you download podcasts from your computer.

- 1 Scroll to view individual podcast episodes or folders containing multiple episodes of the same program.
- 2 Press 🖾 to view the podcast episodes within a folder or the details screen of an individual podcast episode.

You can pause, resume, fast-forward, and rewind just as with any other music file.

Some functions differ when playing a podcast:

podcast, pressing 💌 pauses and resumes the podcast.

 If the podcast you are playing contains highlights, pressing and releasing the
 right or left skips to the next or previous highlight within the podcast, or to the beginning or end of the podcast.

highlights

Highlights are portions of a podcast that are marked to help you find them more easily. You can use the music player to add and delete highlight markers. Press and release (don't hold) the ③ right or left to find them.

You can play all the highlights in a podcast and skip everything that is not marked as a highlight using **Highlights Only**.

add a highlight marker

- 1 While playing a Podcast press ᠍ > Add Highlights.
- 2 Press 🖃 under **On** to mark the beginning.
- 4 Press 🖃 under Back.

Tip: Highlight markers can be deleted by pressing → Clear or pressing > Edit Highlights > → Clear All Highlights from the Podcasts menu.

send podcast information



You can only share podcast details with others. If you want to share podcast details, you have saved to your memory card, you can send it in an MMS message that can be saved and downloaded onto their computer. Find it: $\mathbb{E} > \mathbb{R} > My$ Music > Podcasts > $\mathbb{E} >$ Forward Details > Send.

background music

Your handset has the capability to play music in the background while you are accessing other features like Settings, Media Center, Bluetooth, GPS, Contacts, MMS, Datebook, Memo, Recent Calls, and others.

You can also enjoy listening to your favorite background music while browsing the web, reading news or checking the weather.

play music in the background Find it: $\mathbb{B} > \mathcal{P} > My$ Music > Songs.

1 Select a music file and press 📧 to play the song.

2 Press 🔠 > Hide Player.

The music player continues playing and the handset returns to the home screen. To jump

back to the music player, press 🖃 under Music.

my images

My Images lets you easily browse, edit and view a slide show of images on your phone or memory card.

my images menu

The My Images menu has many photo management features. The following options are available for images by pressing $\blacksquare > \mbox{\ensuremath{\mathbb{R}}} > \mbox{\ensuremath{\mathbb{N}}} > \mbox{\ensuremath{\mathsf{My}}}$ mages > \blacksquare > and choose one of the following:

option

Edit: Displays several options for editing your photos including: Crop, Rotate/Flip, Color Adjustment, Resize, Borders, Stamps, Text and Text Bubble.

Slideshow: Starts a slide show containing images from the currently highlighted image.

Save as New: Lets you save an image with a new filename.

Preview: Displays the highlighted image.

Rename: Lets you rename the image filename.

Delete Current: Deletes the current highlighted image.

Delete Multiple: Lets you chose multiple images to delete at one time.

Switch to Card/Switch to Phone: Toggles between images stored on the phone or memory card.

Set as Wallpaper: Sets the highlighted image as the device wallpaper.

Set As Caller ID: Allows you to assign the highlighted image to a Contact.

Send Via BLuetooth: Lets you send the image via Bluetooth.

viewing images

Find it: $\blacksquare > \ensuremath{\mathbb{R}} > \ensuremath{\mathbb{N}} > \ensuremath{\mathbb{N}} > \ensuremath{\mathbb{N}}$ by Images.

- 1 Press > Slideshow to view a show of all images in the current folder.

my videos

My Videos lets you easily browse and view video files on your phone or memory card.

Find it: $\square > \bar{e} > My$ Videos.

viewing videos

To view a video, select a folder, highlight the video file you want to play, and press number **Play** or ok to begin playback.

My Videos will display the video in portrait mode by default.

Tip: To change the default to landscape mode press \square > **Full Screen**.

my videos setup menu

Find it: $\blacksquare > \bar{R} > My$ Videos $> \blacksquare >$ Setup

The My Videos Setup Menu allows you to change the following settings:

option

View: Displays options for viewing your videos as **Default** and **Folder** view.

3D Audio: Lets you turn 3D audio ${\rm On}$ and ${\rm Off.}$

Reverbs: Lets you choose from a number of 3D audio settings.

camera

You can save pictures taken with the integrated camera in your phone's memory or memory card, and can access them through the Media Center.

Pictures can be sent via Private Calls, Bluetooth, or MMS message. You can also assign them to Contacts entries, or set them as your phone's wallpaper.

access the camera

To access the camera with the flip open, press (a) or press (b) > ${\mathbb{R}}$ > Camera.

To take pictures aim the camera lens and press \square under **Capture** or press \boxdot .

To save the picture, press 🖾.

To discard the picture without saving it, press under **Discard**.

To take a picture with the flip closed, press or press $\blacksquare > \mathbf{A} > \mathbf{Camera}$, close the flip, and press \blacksquare to take the picture.

From the camera viewfinder, you can press 🗃 to enter Menu Options.

The following options become available:

option

[Help]: Provides information on taking a picture with the flip closed.

Record Video: To switch the camera to camcorder mode.

Media Center: Opens the Media Center application.

Zoom: To set the camera's zoom to $1 \ensuremath{x}, \ensuremath{2x},$ or $4 \ensuremath{x}.$

Remove Card: To safely remove the memory card from the phone.

Spotlight: Allows you to turn the spotlight on or off. **Session On** keeps spotlight turned on when phone is in camera mode. **Only Once** turns the spotlight on for a single picture. **Session Off** keeps the spotlight turned off.

Self Timer: Delay capturing the picture for a selected number of seconds. The values are: Off (default), 10 seconds, 15 seconds, 20 seconds.

To turn off the timer before the picture is captured, press 🖃 under **Cancel**.

option

GPS Tag: Allows you to turn GPS Tag feature On or Off.

Picture Quality: Adjust the picture quality to **Normal** or **Fine**.

Picture Size: Set up the picture size to Max (1200x1600), XL (1024x1280), L (480x640), M (240x320), S (96x128), Wallpaper1(176x220) or Wallpaper2 (120x160). You can also set picture size from the viewfinder by pressing ③ left and right.

White Balance: Sets the white balance to Automatic, Sunny, Cloudy, Fluorescent, Tungsten or Night.

Exposure Control: Adjusts the exposure of the picture from -2 to +2.

Style: Sets the type of picture effect to Normal, Black and White, Sepia, Solarization and Negative.

Memory Usage: Shows the total amount of **Used**, **Free**, and total **Capacity** of the phone's memory and of the SD memory card.

Memory Card: Allows you to remove the memory card, set where videos are stored: On Phone or Prefer On Card, format the memory card, and to display Help.

Camera Setup: To access the camera set up screen.

access the media center

You can access the media center from the camera at any time by pressing 🔝 > Media Center, except when you are using the Camera Setup menu or viewing the memory screen.

The media center contains all your pictures, music files, and videos located on your

phone's memory. Press 포 or 进 to filter your results.

customize the camera

Find it: $\blacksquare > \ensuremath{\mathbb{R}} > \ensuremath{\mathbb{C}}$ Camera $> \ensuremath{\mathbb{B}} = \ensuremath{\mathbb{C}}$ Camera Setup

The following options become available:

option

Ask for Name: If this option is **O**n, you are prompted to enter a name for each picture before saving. Otherwise, pictures are automatically saved with the date and a number as their names.

Shutter Sound: Set the default sound the camera makes when is taking a picture.

Default Size: Sets the default value for the **Picture Size** option.

Default Quality: Sets the default value for the quality of the picture.

Spotlight Setting: Select from Always On or Off

GPS Tag : If this option is **On**, pictures will be tagged with the geographic location of where they were taken.

camcorder

You can use your phone's camcorder feature to record videos.

Find it: $\blacksquare > \bar{l} > \bar{l} > \bar{Camcorder}$

record video

- 1 Press 🖃 under Record, or press 💌.
- 2 To stop recording and discard the partially recorded video, press
 under Cancel.
- 3 To stop recording the video press number Stop.
- 4 To save the recorded video, press 🔍.

From the camcorder viewfinder, you can press 🐻 to enter Menu Options.

The following options become available:

option

Media Center: Opens the Media Center application.

Capture Picture: To switch the camera to picture mode.

Zoom: To set the camera's zoom to $1 \ensuremath{x}, 2 \ensuremath{x},$ or $4 \ensuremath{x}.$

Remove Card: To safely remove the memory card from the phone.

Spatlight: Allows you to turn the spatlight on or off. **Session On** keeps spatlight turned on when phone is in camcorder mode. **Only Once** turns the spatlight on for a single video. **Session Off** keeps the spatlight turned off.

Video Size: Set up the picture size to Min (128x96), Med (176x144), or Max (352x288). You can also set picture size from the viewfinder by pressing O left and right.

Video Length: Allows you to choose between Short, to limit video length for sending via MMS message, or Maximum for longer videos.

Note: When set to **Maximum**, video length is limited to 60 seconds when stored to your phone's memory. When stored to a memory card, video length is limited to available space on the memory card, or two hours.

Memory Usage: Shows the total amount of Used, Free, and total Capacity of the phone's memory and of the memory card.

option

Memory Card: Allows you to remove the memory card, set where videos are stored: On Phone or Prefer On Card, format the memory card, and to display Help.

Camera Setup: To access the camera set up screen.

customize the camcorder

Find it: $\blacksquare > {\ensuremath{\overline{R}}} > \ensuremath{\mathsf{Camcorder}} > \blacksquare > \ensuremath{\mathsf{Camera}}$ Setup

The following options become available:

option

Ask for Name: If this option is **On**, you are prompted to enter a name for each picture before saving. Otherwise, pictures are automatically saved with the date and a number as their names.

Shutter Sound: Set the default sound the camera makes when is taking a picture.

Default Video Size: Sets the default value for the **Video Size** option.

Spotlight Setting: Select from Always On or Off

deleting a recorded video

If you do not want to save the recorded video, press — under **Discard** to delete the recorded video and return to the video viewfinder.

sending video via MMS message

To send the recorded video via an MMS message, press in under **Send**. The video will be automatically attached to a new MMS message.

Note: To ensure the video file is small enough to be sent via MMS, set the **Camcorder** video length to **Short**.

PTX features



With *Push To View* features, your phone can send and receive the following items through Private calls with other phones that have this capability:

- Short text messages¹
- Pictures¹
- Datebook events
- My Info
- Contact information
- Location information¹

You can choose to send messages, pictures, events, **My Info**, **Contacts** or **Location** information to the Private ID you are engaged in a Private call with, Private IDs on the **Recent Calls** list, and Private IDs stored in **Contacts**.

1. Additional charges may apply.

When you make or receive a Private call, your phone automatically determines whether the phone you are engaged in a Private call with is able to receive each of these items. Your phone saves this information for as long as the Private ID is on your **Recent Calls** list or is saved in your **Contacts**. Your phone updates the saved information each time you make or receive a call to or from that Private ID.

Note: You cannot send PTT feature items during Talkgroup calls.

send messages



The Push to Send Messages feature lets you send short text messages through Private calls.

When you send a message, it appears on the display of the phone you are engaged in the Private call with.

begin a message and choose a recipient

You can begin a message during a Private call, from the **Contacts** list, the **Recent Calls** list, or from the **PT Manager**.

begin a message during a Private call While in a Private call, press 🗊 > Use PTT Feature > Send Message.

Note: The first time you send a message, Messaging Fees May Apply Continue? appears and you are prompted to respond. Press — under Yes to acknowledge the message.

begin a message from the Contacts or the Recent Calls list

- 1 From the **Contacts** or the **Recent Calls** list, select the entry containing the Private ID you want to send the message to.
- 2 Press 📰 > Use PTT Feature > Send Message.

begin a message from the PT Manager

The **PT Manager** lets you select the Private ID you want to send the message to from **Contacts** or the **Recent Calls** list.

Find it: $\blacksquare > \blacksquare > PT$ Manager > Send Message.

Then select A Contact or A Recent Call to see a list of entries from the Contacts or the Recent Calls list that can receive messages.

create messages

After you have begun a message and chosen a recipient, a screen appears that lets you create the text of the message you want to send. Your message may be up to 765 characters long.

You can choose from a list of ready-made words or short phrases called Quick Notes. You can use a Quick Note as it is or edit it before you send it. Editing a Quick Note changes the Quick Note for this message only and will not change the Quick Note on the list.

send a completed message

After you have completed your message, press the PTT button to send it.

receive messages

When you receive a message, a message notification appears on the display.

To view the message: Press 🖃 under View.

To dismiss the message: Press 🖃 under **Dismiss**.

reply to a message

- 1 View the message.
- 2 Press 🖃 under Reply.
- **3** Create the message and press the PTT button to send it.

send pictures

You can send pictures stored in the **Media Center** through Private calls. The picture you send appears on the Private call recipient's display.

If the recipient accepts the picture, their phone saves the picture. The picture then appears in that phone's recent call list.

The first time you send a stored picture after turning the phone on, **Picture Fees May Apply Continue?** appears and you are prompted to respond.

Note: You cannot make or receive Private calls while transmitting or receiving a picture.

send a picture during a call

1 While in a Private call, press 🖃 under **Picture**.

Press 🔳 > Use PTT Feature > Send Picture.

2 Select Capture Picture to take a new picture.

or

(Å)

Browse Picture to select a picture stored on the phone or microSD memory card.

or

From the list of pictures, select the picture you want to send.

- **4** Press the PTT button to send the picture.
- **5** Wait while the picture is transmitted. The Private call is temporarily interrupted while a picture is transmitted.
- **6** When prompted, press the PTT button to resume the Private call.

or

start a call by sending a picture

from the media center

Find it: $\blacksquare > \ensuremath{\mathbb{R}} >$ Media Center

- 1 Scroll left or right to Phone: Pictures or Card: Pictures.
- 2 Select the picture you want to send.
- $\textbf{3} \quad \text{Press} \; \textbf{B} > \textbf{Send Via...} > \textbf{Send Via} \; \textbf{PTT}.$
- 4 Select A Contact or A Recent Call

A list of contacts that have Private IDs and are able to receive pictures appears.

- **5** Select the name of the person you want to send the picture to.
- 6 Press the PTT button to send the picture.
- 7 When prompted, press the PTT button to resume the Private call.

from the PT Manager: Find it: 🗊 > «🖷 > PT Manager > Send Picture.

1 Select A Contact or A Recent Call

A list of contacts that have Private IDs and are able to receive pictures appears.

- 2 Select the name of the person you want to send the picture to.
- 3 Select Browse Picture or Capture Picture.
- 4 Press the PTT button to send the picture.
- **5** Once picture has been sent, when prompted press the PTT button to resume the call.

receive a picture

When someone sends you a picture, your phone emits a tone or vibrates and a message appears asking if you want to accept the picture.

Pictures you receive are saved either to your phone's memory or SD card. They are accessible through the media center.

When you see a message asking if you want to accept the picture, press Yes to accept or $\ensuremath{\text{No}}$ to decline.

clear a picture from the display

send a datebook event



to send a datebook event during a private call

1 While in a Private call press ᠍ > Use PTT Feature > Send Event.

Note: If these options do not appear on the menu, the Private ID you are engaged in a private call with is not able to receive Datebook events.

2 If you want to create a new datebook event, press 🖃 under New and create the

event in your datebook. If you want to chose an existing event do so.

- 3 If the event is a recurring event: Select This Event Only to send only the event selected. Select Repeat Events to send all occurrences of the event.
- 4 Push the PTT button to send the event.

send my info

1 While in a Private Call press ■ > Send My Info via PTT., and push the PTT button to send.

or

set my info sending option



You can control what portion of the information in **My Info** is sent and whether it is sent automatically in every call or only when you choose to send it.

- 1 Select or remove the fields you want to send.
- 2 Press 🖃 under Done.

The information your phone sends always includes My Name, and Private ID1. You may also send Mobile, Other, IP, Private2, Work1, Work2, Home, Email1, Email2, Fax and Pager depending on your sending options.

automatic sending

To control whether you send your information automatically:

Find it: $\blacksquare > {\it ee} > {\it PT}$ Manager > Configure > PTT My Info > Auto Send

- 1 Select On or Off
- 2 When you make a call in which your information is sent automatically, the name you entered in the **My Name** field of **My Info** appears on the display of the recipient's phone, even if your name and Private ID are not stored in the recipient's Contacts.

send contact information

- 2 Select Send Contact and select the contact information you want to send.
- **3** Push the PTT button to send.

or

- 1 From the home screen press → « > PT Manager > Send Contact.
- 2 Enter the Private ID number of the person you want to send the Contact information to or press under **Browse**.
- 3 Select from Recent Calls, Contacts, or Memo.

Select the contact information you want to send and push the PTT button.

send your location



You can transfer your approximate location information through Private calls to other enabled phones. Using the integrated GPS feature, the following location information can be shared:

- Time Stamped Latitude/Longitude
- Relative Location or Direction and distance from the sender in Miles or Kilometers

Find it: $\blacksquare > {\it cell} > PT$ Manager > Send Location.

1 Select A Contact or A Recent Call.

A list of contacts that have Private IDs and are able to receive locations appears.

- 2 Select the name of the person you want to send your location to.
- **3** Press the PTT button to send your location.

Note: The location information can be stored in the recipient's recent call list.

turn PTT features on and off

You can turn your phone's ability to send and receive messages, pictures, and Datebook events and location info on and off.

You cannot turn your phone's ability to send and receive My Info and contact information on and off.

Find it: $\blacksquare > @ PTT Options > On/Off PTT Features.$

74 main attractions

1 Check or uncheck Messages, Pictures, Events or Location.

one touch PTT

Find it: $\blacksquare > {\it ee} > {\it PTT}$ Options > One Touch PTT.

One Touch PTT sets your phone to do any of the following each time you press the PTT button from the home screen:

option

Off: Nothing happens when you press the PTT button from the home screen.

Last Call: Call the most recent Private ID or Group on the recent calls list.

Assigned Number: Call a Private ID you assign. Enter the number using your keypad, or press — under Search. Select Contacts, Recent Calls, or Memo.

Note: If you are entering a Talkgroup number, enter **#** before the number.

option

PT Manager: Go to PT Manager. See "PT manager" on page 76.

Send Message: Go to the first screen to send a message.

Send Picture: Go to the first screen to send pictures. See "send pictures" on page 70.

Send Event: Go to the first screen to send a Datebook event.

Send My Info: Go to the first screen to send My Info. See "send my info" on page 72.

Send Contact: Go to the first screen to send a contact. See "send contact information" on page 73.

Send Location: Go to the first screen to send your location. See "send your location" on page 74.

PT manager



The **PT Manager** lets you quickly access PTT features, and other Private call features, from the main menu.

Find it: 📧 > «🖷 > PT Manager

1 Select Quick PTT, Send Message, Send Picture, Send Event, Send My Info, Send Contact, Send Location, or Configure. After choosing what PTT item you are sending, select a contact and press the PTT button to send.

or

2 Select Configure to configure your PTT Quick Notes, PTT My Info, PTT Location, One Touch PTT, or On/Off PTT Features.

Mike wireless web services

Your handset is equipped with a microbrowser that can be used to access Mike's Wireless Web Services and other up-to-the-minute information. You can view specially designed text versions of popular Internet sites that provide news, sports, weather, entertainment, stock quote sites, and other useful information.

access the microbrowser

The first time you use the microbrowser, you will be required to go through a security setup process that takes approximately one to three minutes. Please follow the on-screen prompts to complete the security setup process. This setup process will only occur the first time you use the service.

Find it: 🔠 > Browser

- Once connected, the Homepage (or the last page visited) will be displayed. To access the Home menu page from any other menu in the microbrowser, press
 T.
- 2 To view additional text while visiting a site, use the navigation key to scroll to read it.

navigate the microbrowser

When you use the microbrowser, some keys on your handset operate differently than during a normal phone call. These keys are explained below:

ē	Home key - press to return to the default Home page (the page first seen when you launch the browser). Press and hold for two seconds to exit the
	two seconds to exit the browser.

×	Asterisk/Back key - press to return to
	the previous page viewed
	before the current page.

access the browser menu

- 1 Press and hold 🔝 to access the browser menu.
- 2 Scroll to select the desired option.
- 3 Press 🖃 under Ok to initiate the option.

option

Exit Browser - closes the browser and returns you to the idle screen. Use this option when you want to return to the page currently viewed at a later time, without navigating through the entire menu structure again.

option

Reload - reloads the current Wireless Web page viewed, refreshing the information with the most current from the information provider.

Home - returns you to your default Home page, the first page you see when launching the microbrowser.

Bookmarks - allows you to access bookmarks you have created using the Bookmark option.

Mark Site - identifies sites you would like to visit easily and quickly from your microbrowser.

About Phone.com - contains information about the version of the Phone.com browser loaded on your handset.

Advanced Options - helps troubleshoot any service issues you may have with your browser.

end the microbrowser session

At any point in the session, press and hold references for two seconds to exit the microbrowser.

Bluetooth®

Find it: 🔠 > ₿

turn Bluetooth on or off

You can turn your phone's Bluetooth feature on or off. While Bluetooth power is on, your phone can communicate with other devices.

Find it: $\square > \bigotimes > \bigcirc >$ Setup > Power

- **1** Select **On** to power Bluetooth On.
- 2 Select Name if you wish to assign a name to your handset.
- **3** Select **Find Me** to determine the amount of time in which your handset can be found by other Bluetooth devices.

You can turn off Bluetooth if you want to prolong battery life or if you enter an area where Bluetooth is prohibited.

make a Bluetooth connection

connect your handset with a Bluetooth headset

Find it: BB>S>O> Audio Devices> [Look for Devices]

- 1 Follow the instructions on your Bluetooth headset to set it up to be found.
- 2 Once your Bluetooth headset is set to be found press ☞ on your handset. Your phone will scan for the Bluetooth headset until it finds it. Press ☞ when you see the name of the Bluetooth headset on your screen.
- **3** Your handset requires that you create a bond in order to connect with a Bluetooth

headset. Press 🖃 under Yes when you are prompted to bond with the headset.

4 Enter the Bluetooth pass key.

Some Bluetooth devices ship with Bluetooth PINs. Please refer to your Bluetooth device's user guide to locate this information.

If a device ships without a Bluetooth PIN, then you can enter any PIN for that device. To establish a connection to that device, enter the same PIN for both your phone and the device. For example, if you enter 1234 as the device's PIN, then enter 1234 as your phone's PIN.

5 Press 🖃 under Ok.

This handset offers the Bluetooth auto pair feature with auto pair compatible Motorola devices. When bonded via Bluetooth with a certain device, the pin will not be required

pair your handset with another Bluetooth device

Find it: $\blacksquare > \textcircled{P} > \textcircled{O} > Pair to Devices$

- 1 Select the device you want from the list of found devices on your screen.
- 2 Create a bond if you are prompted to do so.

If you have previously paired to a device, the device will be stored in the device history so you can connect with it easily.

use Bluetooth during a call

You can connect with available Bluetooth devices during a call.

- 1 While in a call, press \blacksquare > Use Bluetooth.
- 2 Select the audio device you want to connect to from the list of **Audio Devices**.

If the **Audio Devices** list contains only one device, your phone will try to connect to it.

send information via Bluetooth

Your handset can transfer Contacts entries, Datebook events, audio files, pictures and videos to another Bluetooth device.

The receiving device must be within 32 feet (10 meters) of your phone in order to connect.

Note: Files sent or received may be up to 10 MB, depending on your service provider. Bluetooth FTP file transfers will not work if a microSD card is not installed in your phone.

sending information

- 1 From within **Contacts**, **Datebook**, or **Media Center**, select the Contacts entry, Datebook event, audio file, video, or picture you want to send.
- 2 Press \blacksquare > Send Via... > Bluetooth.

- **3** Select the device you want to transfer the contact information to, or search for the device by selecting **[Look for Devices]**.
- 4 If prompted, bond with the device.

Your phone connects with the devices and transfers the information.

how to check if your PC supports Bluetooth FTP

- Right click on the Bluetooth icon in the system tray and open Bluetooth configuration.
- 2 Click on the Client Applications tab and check that File Transfer is active.

Note: This process may be different depending on the PC manufacturer.

file browsing with the Bluetooth file transfer service

- 1 Double click the My Computer Icon on the desktop.
- 2 Double click on My Bluetooth Places.
- 3 Double click on FIIe Transfer Service.
- **4** Drag and drop the files to the appropriate folder.¹ See "understanding the memory card folder structure" on page 52.

Note: This process may be different depending on the PC manufacturer.

If a music file is not visible in My Music, press E > Reload Music while in the music player application. All music files within the Music folder on your microSD card will be loaded into My Music.

dual microphone noise cancellation

The Dual Microphone Noise Cancellation feature improves call audio quality by removing ambient noise around you. It provides a cleaner clearer sound to the person you are calling.

Note: Dual Microphone Noise Cancellation is turned on by default. Covering the noise cancellation microphone, located right next to the camera, may result in poor audio quality.

To turn off the Dual Microphone Noise Cancellation feature, press $\textcircled{\baselinetwise}{1.5}$ > $\textcircled{\base$

To activate the feature, select **On** instead of **Off**.

turn off a call alert

You can press the volume keys to turn off a call alert before answering the call.

recent calls

The recent calls list contains information associated with calls you have made and received and call alerts you have received.

When you send or receive Private calls, the recent call list contains the following PTX items with those calls:

- contact information received
- My Info received
- short text messages received

- pictures sent or received
- Datebook events received

The recent calls list displays up to 20 of the most recent calls and call alerts.

- 1 Press Pre
- **2** Scroll through the list.
- **3** To view more details of the item press **I**.

Note: All Private, Blocked or Anonymous calls received will be displayed as Private in recent calls.

store an item to contacts from recent calls

Phone calls, Private calls, My Info, Contacts or Location entries received from other phones can be stored to the Contacts list from the Recent Calls list.

Find it: 📧 > Recent Calls.

- 1 Scroll to or select the item you want to store.
- 2 Press under Save to store the information as a new entry in the Contacts list.

or

- **3** Select an existing contact and update the information.
- 4 Press 🖃 under Save to save your changes.

redial

To redial your last outgoing call, press and hold . If your last outgoing call was a Private Call, and you have set **One Touch PTT** to **Last Call**, push the PTT button to initiate a new Private call.

caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, just follow these easy steps.

PA

To block your phone number from being displayed for a specific outgoing call:

- 1 Press 🗶 6 7.
- 2 Enter the number you want to call.
- 3 Press 🖵.

To permanently block your number, call your customer service provider.

call forward

Call forwarding sends calls to the phone numbers you specify. You can forward all calls to one number or forward missed calls to different numbers depending on the reason you missed the call. You can forward phone lines 1 and 2 independently.

Find it: \blacksquare \circledast > Phone Calls > Call Forward.

1 To forward all calls select **All Calls** and select **To** to enter the phone number you want all your calls forwarded to.

or

 You can specify a forwarding number for each type of missed call by selecting
 Detailed and choosing the following options: **If Busy**: When your handset is on a call or transferring data.

If No Answer: When you do not answer on the first 4 rings.

If Unreachable: When your handset is out of coverage or powered off.

voice names



You can place calls by speaking commands to your phone if you have previously assigned a voice name to your contacts.

assign voice names to contacts

- 1 Press 🖃 under Contacts and select [New Contact].
- 2 Assign a name, phone number and select [Options].

- 3 Select Voice Name and follow the prompt to record the voice name. Press 🐼 to stop recording and store the voice name.
- 4 Press 🖃 under Back and press 🖃 under Save.

place a call using a voice name

1 Press the speaker key 🕢 until you are prompted to say the voice name.

The handset will automatically place the call.

emergency calls

Your service provider programs one or more emergency phone numbers that you can call under any circumstances. Emergency calls can be made without a SIM card, when your phone is locked, or when the SIM card is blocked.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Dial 911 or your local emergency number to be connected to an emergency response center. If you are on an active call, you must end it before making an emergency call.

When you make an emergency call, your phone's GPS Enabled feature can help emergency service personnel find you, if you are in a location where your phone's GPS antenna has established a clear view of the open sky and your local emergency response center has the equipment to process location information. Because of the limitations of this feature, always provide your location, to the best of your knowledge, to the emergency response center when you make an emergency call. Note: Emergency calls cannot be placed while the keypad is locked, or if your phone is displaying a **No Service** message on the screen. To unlock the keypad, if the flip is closed, open the flip to reveal the keypad. If the flip is open, press III ★.

international calls



If your phone service includes international dialing, press and hold ① to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.

speed dial

Each phone number stored in Contacts is assigned a Speed Dial number, which you can use to call that number.

- 1 From the home screen, use the keypad to enter the Speed Dial number assigned to the phone number you want to call.
- 2 Press **#**.
- 3 Press 🖵.

turbo dial

The first nine entries in your contacts are set for turbo dial. They can be called by pressing and holding the speed dial number (1 through 9).

voicemail



To receive voice mail messages, you must first set up a voice mail account with your service provider.

receiving a message

When you receive a voice mail message, **New VoiceMail Message** appears on the display.

To call your service provider's voice mail system and listen to the message:

- 1 Press 🖃 under Call.
- **2** To dismiss the message notification:
 - Press 🖾 or 🖃 under Back.

If the caller leaves a message, this icon appears on the display, reminding you that you have a new message.

advanced voice mail with fax

Mike's Advanced Voice Mail with Fax allows you to receive faxes directly to your handset and store them along with your voice messages until you are ready to print. Follow the voice mail prompts to print the fax to a fax machine. It ensures privacy, convenience and eliminates the need for a separate fax line.

When you subscribe to Mike's Advanced Voice Mail with Fax, you will receive a fax number from your point of feature activation. If you have not received a fax number, please contact the nearest TELUS dealer or call TELUS client care.

Please see **www.telusmobility.com** for more details of TELUS Voice Messaging services.

fax mail Indicator

Your handset is equipped with a Fax Mail indicator to notify you when you have received a fax through Mike's Advanced Voice Mail with Fax.

Shortcut: From the home screen press under Mesg > Fax Mail. When you receive a new fax, New FaxMail Message appears on the display.

Your handset will alert you audibly until you press
under Call or
under Exit.

net alerts

When you receive a **Net Alert**, a notification appears on the display.

If you dismiss the notification, this icon \square appears on the display, reminding you that you have a new message.

Mike Talk Around

Note: This feature may not be offered by your service provider.

With Mike Talk Around, you can make and receive Two-Way Radio calls without network coverage. If you are travelling outside your service provider's coverage area, receiving a poor signal, or otherwise want to temporarily avoid using your service provider's network, you can switch to Mike Talk Around and talk with anyone on your code and channel who is within range.

Note: Range will vary based on terrain, man-made structures and atmospheric conditions.

Mike Talk Around lets you:

• Use code or private mode operation

- Use up to 10 channels
- Communicate with standalone Mike Talk Around radios

Note: You cannot use Mike Talk Around with older Family Radio Services products.

The following features and main menu items are unavailable while in Mike Talk Around:

- On-network phone or Private calls
- Data transmission
- Incoming message notification
- Datebook
- Call forwarding
- Call Timers
- Call alerts

switching to Mike Talk Around

To set your phone to Mike Talk Around:

- 2 Select Go to Talk Around.

Switching to Talk Around Please Wait displays.

After a few seconds, the Mike Talk Around idle screen displays. When **TA Ready** displays, you can begin using Mike Talk Around.

While in Mike Talk Around, this icon la displays.

exiting Mike Talk Around

To switch to network mode:

- 2 Select Exit Talk Around.

Switching to Network Please Wait displays. After a few seconds, the network idle screen appears.

talk range

While in Mike Talk Around mode, phones should be a minimum of 6 feet apart to maximize performance and improve transmission range.

channels and codes

Your phone has 10 channels and 15 codes. Channels are divided into sets of frequencies. Other parties may be talking on the same channel. Codes minimize interference from other parties when you are sharing the same channel.

Mike Talk Around opens to the last code and channel used on your phone. You can view the code and channel your phone is currently set to on the Mike Talk Around idle screen.

For code calls, all parties must be on the same channel and code. For private Mike Talk Around calls, the person you are calling must be in Mike Talk Around and set to the same channel to receive your call.

Note: When making a code call, all parties that are on your code and channel can hear your conversation.

setting channels and codes

To set a channel:

- 1 From the Mike Talk Around idle screen, press 🖃 under Edit.
- 2 Scroll to Channel.
- 3 Press 🖃 under Edit.
- 4 Select a channel.
- 5 When you are finished, press ☐ under Back to return to the Mike Talk Around idle screen.

To set a code:

- 2 Scroll to Code.
- 3 Press 🖃 under Edit.
- 4 Select a code.
- 5 When you are finished, press under **Back** to return to the Mike Talk Around idle screen.

making code calls

To make a code call:

1 From the Mike Talk Around idle screen or the channel and code edit screen, press and hold the PTT button. **Transmit** appears on the first line of display. Begin speaking after your phone emits the Mike Talk Around tone.

Note: The Mike Talk Around tone consists of 4 rapid beeps.

2 Release the PTT button to listen.

If you receive an error message:

- No one is on your channel or code.
- You are out of range.

receiving code calls

When you receive a code call, **Receive** will appear on the display. After hearing the Mike

Talk Around tone, you have 6 seconds to reply before the call times out.

To reply to the call, press the PTT button.

Note: An incoming Mike Talk Around call can be terminated at any time by pressing **(**...)

receiving all Mike Talk Around calls

If you set the code to **Receive All**, your phone can receive Mike Talk Around transmissions from any phone that is set to the same channel, regardless of the code (1-15). When you receive transmissions with the code set to **Receive All**, the code that the transmission was received on will replace **Receive All** on the display.

Note: You cannot initiate a code call when the code is set to **Receive All**.

To set the code to Receive All:

- 1 From the Mike Talk Around idle screen, press 🖃 under Edit.
- 2 Scroll to Code.
- 3 Press 🖃 under Edit.
- 4 Select Receive All.
- 5 When you are finished, press ☐ under Back to return to the Mike Talk Around idle screen.

To reply to a call with the code set to Receive All:

• Press the PTT button.

private Mike Talk Around calls

If you want to have a private conversation without other parties listening in, you can make a private Mike Talk Around call. The person you are calling must be in Mike Talk Around and set to the same channel to receive your call.

private only

To set Mike Talk Around to ignore code calls, so that you only make or receive private Mike Talk Around calls, set your code to **Pvt Only**.

To set the code to **Pvt Only**:

- 1 From the Mike Talk Around idle screen, press
 under Edit.
- 2 Scroll to Code.
- 3 Press 🖃 under Edit.
- 4 Select Pvt Only.
- 5 When you are finished, press ☐ under Back to return to the Mike Talk Around idle screen.

making a private Mike Talk Around call

- 1 Enter the PTN of the person you want to call on your channel. If the PTN is more than 10-digits, enter the last 10-digits of the PTN, or scroll to a number or name in Contacts or the Recent Calls List.
- 2 Press and hold the PTT button. Begin speaking after your phone emits the Mike Talk Around tone.
- **3** Release the PTT button to listen.

The number or name of the person you are calling will appear in the display.

If you receive an error message:

- The PTN you entered is invalid.
- The person that you are trying to reach is in network mode.

- The person that you are trying to reach is set to a different channel.
- The person that you are trying to reach is out of range.

receiving a private Mike Talk Around call

The number or name of the person who is calling will appear in the display.

To reply, press the PTT button.

ending code calls and private Mike Talk Around calls

Code calls and private Mike Talk Around calls will end automatically after 6 seconds of inactivity.

The Mike Talk Around idle screen will display.

Note: A private or code Mike Talk Around call can be interrupted during the 6 second idle time by another code call or private call.

making emergency calls while in Mike Talk Around mode

If you attempt to make an Emergency 911 call while in Mike Talk Around mode, your phone will automatically exit Mike Talk Around mode and attempt to find a network signal.

If you are out of network coverage your phone will not be able to make an emergency 911 cellular call until you go back into the network coverage area.

You must wait until the phone reconnects to the network before attempting to make an emergency 911 cellular call.

setup options

You can set up Mike Talk Around options on the TA Options screen. You can access this screen in both network and Mike Talk Around modes.

To access setup options:

- 1 Press B > Around or TA Options.
- 2 Select Setup.

You can set the following Mike Talk Around options:

- **Direct Launch**: Launch directly into Mike Talk Around when you select **Talk Around** from the main menu.
- **State Tone**: Have an alert sound notify you that you have used Mike Talk Around for a specified interval.

using direct launch

To set your phone to launch Mike Talk Around when you select **Talk Around** from the main menu:

- 2 Select On.

Note: If **Direct Launch** is set to **On**, the Mike Talk Around setup options will be unavailable from the main menu. However, you can still access setup options while in Mike Talk Around by pressing **E** and selecting > **TA Options** > **Setup**.

To turn off Direct Launch:

- 1 From the Setup screen, scroll to **Direct Launch** and press **○**K.
- 2 Select Off.

TA Options will now display when you select Talk Around from the main menu.

using state tone

To set your phone to alert you after you have used Mike Talk Around for a specified interval:

- 1 From the Setup screen, scroll to State Tone and press OK.
- 2 Select the interval after which you want the tone to sound.

For example, if you select 1 hour, you will be notified every hour that you are in Mike Talk Around.

To turn off State Tone:

- 1 From the Setup screen, scroll to State Tone and press oK.
- 2 Select Off.

customize

ring tones

To set the ring tone your phone makes when you receive phone calls, call alerts, message notifications, pictures sent using Send via PTT or Datebook reminders:

Find it: ः > ₹ > Ring Tones

- 1 Make sure Vibrate All is set to Off.
- Scroll through the list of ring tones and select the one you want to assign.
 Vibrate sets your phone to vibrate instead of making a sound. Silent sets your phone to neither vibrate nor make a sound.
- **3** Select the features you want to assign the ring tone to.

4 When you are finished, press ☐ under Done.

Note: This icon (appears on the display if you set your phone to Silent. This icon (E) appears on the display if you set the phone to Vibrate All.

set your phone to vibrate

You can set your phone to vibrate instead of making a sound when you receive all phone calls, Private calls, group calls, SDG calls, call alerts, message notifications, pictures sent using Send via PTT, and Datebook reminders.

Find it: $\blacksquare > \ensuremath{\mathbb{R}} > \ensuremath{\operatorname{Ring}}$ Tones $> \ensuremath{\operatorname{Vibrate}}$ All

Set this option to **On** or **Locked**.

Setting this option to **On** lets you turn **Vibrate All** off by pressing the up volume control. Setting this option to **Locked** requires you to press and hold the up volume control to turn **Vibrate All** off. The **Locked** option helps prevent you from accidentally turning **Vibrate All** off.

To set $\ensuremath{\textit{Vibrate}}$ All to $\ensuremath{\textit{On}}$ or $\ensuremath{\textit{Locked}}$ using the volume controls:

Press the volume controls to turn down the volume as far as possible to set **Vibrate All** to **On**. Continue to hold the down volume control to set **Vibrate All** to **Locked**.

To set your phone to vibrate instead of making a sound for some features but not others:

Find it: $\blacksquare > \ensuremath{\mathbb{R}} > \ensuremath{\mathbb{R}}$ > Ring Tones

- 1 Make sure Vibrate All is set to Off.
- 2 Select Vibrate from the list of ring tones.
- **3** Select the features you want to set to make no sound.

4 When you are finished, press ☐ under Done.

backlight

Set the amount of time that the display and java apps. backlights remain on.

Find it: 🔠 > 🏶 > Display/Info > Backlight

wallpaper

Set a previously saved photo or picture as a wallpaper (background) image in your phone's external display, internal screen or throughout all menu screens.

Find it: 🔠 > 🐲 > Display/Info > Wallpaper

- 1 Select External or Internal.
- 2 Scroll through the list of pictures and press 💌 to select a picture.

You can set the internal and external wallpapers to change automatically after a certain period of time by turning on the Auto Cycle feature located in the Wallpaper menu. You can select from Off, 5 minutes, 15 minutes, 1 hour, 8 hours, Daily, or Startup.

datebook

feature	
create datebook events	To create a new Datebook event press > ॡ > Datebook > [New Event].
see datebook event	To see a calendar event press ᡂ > ॆ > ॆ > ॊ > Datebook. Press ⓒ left or right to see the day and ⓒ up or down to see the events.

feature	
event reminder	When an event reminder occurs press 🖃 under View.
	Press 🖃 under Back to close the reminder.
receive datebook events via	To view the information while still in the Private call press 📧.
PTT	The 5 most recent events received from a Private ID are stored with that Private ID on the recent calls list.
	To store events to the Datebook press 🖨 under Save while viewing the event you want to store.

datebook setup

Find it: B > S > Datebook > B > Setup

You can view or change these options:

options

Start View: Sets Datebook to start in day view, week view, or month view when you access Datebook.

Daily Begin: Sets the beginning of your day. This is the earliest time of day displayed in week view, if you have a 12-hour day view.

Delete After: Sets the amount of time Datebook waits to delete an event after it occurs.

Time Shift: Lets you shift the times of all Datebook events. This is useful if you are traveling to a different time zone.

Alert Timeout: Sets the amount of time a tone continues to sound when you receive a Datebook reminder.

options

Clock: Controls whether the time and date appear on the home screen; sets time and date format; sets year.

hide or show location information

Your phone is equipped with a Location feature for use in connection with location-based services that may be available in the future.

Turning Location **On** will allow the network to detect your position using GPS technology, making some applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location

without your request or permission. GPS-enhanced 911 is not available in all areas.

set your privacy options Find it: 📧 > 🛐 > GPS > Privacy

Select from the following options:

option

Restricted: No Java or similar software applications may view the location of your phone. However, location information may still be available to the phone's owner, fleet manager, or account administrator.

Unrestricted: All applications may view the location of your phone, without notifying you.

option

By Permission: When an application attempts to view the location of your phone, you will be prompted to give permission. However, location information may still be available to the phone's owner, fleet manager, or account administrator.

change GPS PIN

When you receive your phone, your GPS PIN is 0000.

To change your GPS PIN press B > P > Security > Change Passwords > GPS PIN. Enter the current GPS PIN and enter the new four to eight digit GPS PIN. Re-enter the new four-to eight-digit GPS PIN to confirm.

reorder apps menu

Java applications can be reordered to change the order in which they appear in your phone.

Find it: $\blacksquare >$ Games and Apps

to reorder apps menu

- 1 Press 🔳 > Games and Apps.
- 2 Highlight Java System and press 🔳.
- 3 Select Reorder Apps Menu.
- 4 Scroll to the java application you want to move and press 🖃 under Grab.
- 5 Scroll to the place where you want the java application to appear and press in under Insert.

Safety, Regulatory & Legal

Battery Use & Safety

Important: Handle and store batteries properly to avoid

injury or damage. Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

DON'Ts

- Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.
- Don't let the mobile device or battery come in contact with water.* Water can get into the mobile device's circuits, leading to corrosion. If the mobile device and/or battery get wet, have them checked by your service provider or contact Motorola, even if they appear to be working properly.*
- Don't allow the battery to touch metal objects. If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot.
- Don't place your mobile device or battery near a heat source.* Excessive heat can damage the mobile

device or the battery. High temperatures can cause the battery to swell, leak, or malfunction. Therefore:

 Don't dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven.

DOs

- Do avoid leaving your mobile device in your car in high temperatures.*
- Do avoid dropping the battery or mobile device.* Dropping these items, especially on a hard surface, can potentially cause damage.*
- Do contact your service provider or Motorola if your mobile device or battery has been damaged from dropping or high temperatures.

* Note: Always make sure that the battery compartment is closed and secure to avoid direct exposure of the battery to any of these conditions.

Important: Use Motorola Original products for quality assurance and safeguards. To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection), Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a "Motorola Original" hologram.

Motorola recommends you always use Motorola-branded batteries and chargers. Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display such as Invalid Battery or Unable to Charge, take the following steps:

- Remove the battery and inspect it to confirm that it has a "Motorola Original" hologram;
- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and try charging it again;
- If the message remains, contact a Motorola authorized service center.

Important: Motorola's warranty does not cover damage to the mobile device caused by non-Motorola batteries and/or chargers.

Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard.

Proper and safe battery disposal and recycling: Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web:

• <u>www.motorola.com/recycling</u>

<u>www.rbrc.org/call2recycle/</u> (in English only)

Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national recycling organizations for more information on how to dispose of batteries.



Warning: Never dispose of batteries in a fire because they may explode.

Battery Charging

Notes for charging your product's battery:

- When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.
- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.

Driving Precautions

Responsible and safe driving is your primary responsibility when behind the wheel of a vehicle. Using a mobile device or accessory for a call or other application while driving may cause distraction. Using a mobile device or accessory may be prohibited or restricted in certain areas, always obey the laws and regulations on the use of these products.

While driving, NEVER:

- Type or read texts.
- Enter or review written data.
- Surf the web.
- Input navigation information.
- Perform any other functions that divert your attention from driving.

While driving, ALWAYS:

- Keep your eyes on the road.
- Use a handsfree device if available or required by law in your area.
- Enter destination information into a navigation device **before** driving.
- Use voice activated features (such as voice dial) and speaking features (such as audible directions), if available.
- Obey all local laws and regulations for the use of mobile devices and accessories in the vehicle.
- End your call or other task if you cannot concentrate on driving.

Remember to follow the "Smart Practices While Driving" in this guide and at <u>www.motorola.com/callsmart</u> (in English only).

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing videos or games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing videos or games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are tired.

Caution About High Volume Usage

Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected. To protect your hearing:



• Limit the amount of time you use headsets or headphones at high volume.

- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.

For more information about hearing, see our Web site at <u>direct.motorola.com/hellomoto/nss/AcousticSafety.asp</u> (in English only).

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

[Nov0109]

Small Children

Keep your mobile device and its accessories away from small children. These products are not toys and may be

hazardous to small children. For example:

A choking hazard may exist for small, detachable parts.

- Improper use could result in loud sounds, possibly causing hearing injury.
- Improperly handled batteries could overheat and cause a burn.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Operational Warnings

Obey all posted signs when using mobile devices in public areas.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries unless it is a radio product type especially qualified for use in such areas as "Intrinsically Safe" (for example, Factory Mutual, CSA, or UL approved). In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition	
\triangle	Important safety information follows.	
B	Do not dispose of your battery or mobile device in a fire.	
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.	
X	Do not dispose of your battery or mobile device with your household waste. See "Recycling" for more information.	
	For indoor use only.	
	Listening at full volume to music or voice through a headset may damage your hearing.	

Radio Frequency (RF) Energy

Exposure to RF Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

RF Energy Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions:

- When placing or receiving a phone call, hold your mobile device just like you would a landline phone.
- If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola and are not using the mobile device in the intended use positions along side the head in the phone mode or in front of the face in the two-way radio mode, keep the

device at least 2.5 centimeters (1 inch) from your body when transmitting.

 Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

Two-Way Radio Operation

Your radio product has been designed and tested to comply with national and international standards and guidelines regarding human exposure to RF electromagnetic energy, when operated in the two-way mode (at the face, or at the abdomen when using an audio accessory) at usage factors of up to 50% talk/50% listen.

Transmit no more than the rated duty factor of 50% of the time. To transmit (talk), push the PTT button. To receive calls, release the PTT button. Transmitting 50% of the time or less, is important because this radio generates measurable RF energy only when transmitting (in terms of measuring for standards compliance).

When using your radio product as a traditional two-way radio, hold the radio product in a vertical position with the microphone 2.5 to 5 centimeters (1 to 2 inches) away from the lips.



RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances, your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.

- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

Portable Radio Product Operation and EME Exposure

Your Motorola radio product is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy (EME):

- United States Federal Communications Commission, Code of Federal Regulations; 47 CFR part 2 sub-part J.
- American National Standards Institute (ANSI) / Institute of Electrical and Electronics Engineers (IEEE). C95. 1-1992.
- Institute of Electrical and Electronics Engineers (IEEE). C95. 1-2005 Edition.
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998.
- Ministry of Health (Canada). Safety Code 6. Limits of Human Exposure to Radio frequency Electromagnetic

Fields in the Frequency Range from 3 kHz to 300 GHz, 1999.

- Australian Communications Authority Radio communications (Electromagnetic Radiation - Human Exposure) Standard 2003.
- ANATEL, Brazil Regulatory Authority, Resolution 303 (July 2, 2002) "Regulation of the limitation of exposure to electrical, magnetic, and electromagnetic fields in the radio frequency range between 9 kHz and 300 GHz." "Attachment to Resolution 303 from July 2, 2002."

Specific Absorption Rate (IEEE)

Your model wireless phone meets the governmental requirements for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed and manufactured to not exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed for the safety of all persons, regardless of age or health, and to account for any variations in measurements.

The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate (SAR). The IEEE SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 watts per kilogram (W/kg), averaged over one gram of tissue. Tests for SAR are conducted using procedures accepted by the FCC and by Industry Canada with the mobile device transmitting at its highest certified power level in all tested frequencies. Although the SAR is determined at the highest certified power level, the actual SAR level of the mobile device while operating can be below the maximum value. This is because the mobile device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a mobile device is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) submitted to the FCC and available for review by Industry Canada. The highest SAR value for this mobile device when tested for use at the ear is 0.71 W/kg, and when worn on the body, as described in this guide, is 0.86 W/kg. Body-worn measurements can differ, depending upon available accessories and regulatory requirements. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

While there may be differences between the SAR levels of various mobile devices and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

http://www.phonefacts.net

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

http://www.cwta.ca

Information from the World Health Organization

"Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body."

Source: WHO Fact Sheet 193

Further information: http://www.who.int/peh-emf

FCC Declaration of Conformity

Per FCC CFR 47 Part 2 Section 2.1077(a) Responsible Party Name: Motorola Mobility, Inc.



Address: 8000 West Sunrise Boulevard, Plantation, FL 33322 USA Phone Number: 1 (800) 453-0920 Hereby declares that the product: Product Name: i686 Model Number: H85XAH6JR5AN FCC ID: IHDT56KD1 Conforms to the following regulations: FCC Part 15, subpart B, section 15.107(a), 15.107(d) and section 15.109(a)

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any

112 Safety, Regulatory & Legal

interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to readio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Notice to Users

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept

any interference, including interference that may cause undesired operation of the device. See RSS-GEN 7.1.5. This Class B digital apparatus complies with Canadian ICES-003.

GPS & AGPS

Your mobile device can use *Global Positioning System* (GPS) signals for location-based applications. GPS uses satellites controlled by the U.S. government that are subject to changes implemented in accordance with the Department of Defense policy and the Federal Radio Navigation Plan. These changes may affect the performance of location technology on your mobile device.

Your mobile device can also use *Assisted Global Positioning System* (AGPS), which obtains information from the cellular network to improve GPS performance. AGPS uses your wireless service provider's network and therefore airtime, data charges, and/or additional charges may apply in accordance with your service plan. Contact your wireless service provider for details.

Your Location

Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile devices which are connected to a wireless network transmit location-based information. Devices enabled with GPS or AGPS technology also transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. This location-based information may be shared with

third parties, including your wireless service provider, applications providers, Motorola, and other third parties providing services.

Emergency Calls

When you make an emergency call, the cellular network may activate the AGPS technology in your mobile device to tell the emergency responders your approximate location.

AGPS has limitations and **might not work in your area**. Therefore:

- Always tell the emergency responder your location to the best of your ability; and
- Remain on the phone for as long as the emergency responder instructs you.

Performance Tips

- Go outside and away from underground locations, covered vehicles, structures with metal or concrete roofs, tall buildings, and foliage. Indoor performance might improve if you move closer to windows, but some window sun shielding films can block satellite signals.
- Move away from radios, entertainment equipment, and other electronic devices.

Navigation

When using navigation features, note that mapping information, directions and other navigational data may contain inaccurate or

incomplete data. In some countries, complete information may not be available. Therefore, you should visually confirm that the navigational instructions are consistent with what you see. All drivers should pay attention to road conditions, closures, traffic, and all other factors that may impact driving. Always obey posted road signs.

Smart Practices While Driving

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas—for example, handsfree use only may be required. Go to www.motorola.com/callsmattint (in English only) for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- Get to know your Motorola mobile device and its features such as speed dial, redial and voice dial. If available, these features help you to place your call without taking your attention off the road.
- When available, use a handsfree device. If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.

- Position your mobile device within easy reach. Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
- Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or going through your address book takes attention away from your primary responsibility—driving safely.
- Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic. If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- Use your mobile device to call for help. Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies (wherever wireless phone service is available).

114 Safety, Regulatory & Legal

- Use your mobile device to help others in emergencies. If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number (wherever wireless phone service is available), as you would want others to do for you.
- Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number (wherever wireless phone service is available).

Privacy & Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- Monitor access—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available.
- Keep software up to date—If Motorola or a software/application vendor releases a patch or software

fix for your mobile device that updates the device's security, install it as soon as possible.

 Secure Personal Information—Your mobile device can store personal information in various locations including your SIM card, memory card, and phone memory. Be sure to remove or clear all personal information before you recycle, return, or give away your device. You can also backup your personal data to transfer to a new device.

Note: For information on how to backup or wipe data from your mobile device, go to <u>www.motorola.com/support</u>

- Online accounts—Some mobile devices provide a Motorola online account (such as MOTOBLUR). Go to your account for information on how to manage the account, and how to use security features such as remote wipe and device location (where available).
- Applications—Install third party applications from trusted sources only. Applications can have access to private information such as call data, location details and network resources.
- Location-based information—Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile phones which are connected to a wireless network transmit location-based information. Devices enabled with GPS or AGPS technology also transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit

Safety, Regulatory & Legal 115

location-based information. This location-based information may be shared with third parties, including your wireless service provider, applications providers, Motorola, and other third parties providing services.

Other information your device may transmit—Your . device may also transmit testing and other diagnostic (including location-based) information, and other non-personal information to Motorola or other third-party servers. This information is used to help improve products and services offered by Motorola.

If you have further questions regarding how the use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

Use & Care

Your mobile device is designed to resist damage from exposure to certain rugged conditions, as stated in your product information. However, to help care for your mobile device avoid prolonged or extreme exposure to those conditions and please observe the following:



protection

To help protect your mobile device, always make sure that the battery compartment and any connector covers are closed and secure.





drvina

Don't try to dry your mobile device using a microwave oven, conventional oven, or drver, as this may damage the mobile device

cleaning



To clean your mobile device, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.

Recycling

Mobile Devices & Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste, or in a fire. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at: www.motorola.com/recycling

Packaging & Product Guides

Product packaging and product guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

California Perchlorate Label

Some mobile phones use an internal, permanent backup battery on the printed circuit board that may contain very small amounts of perchlorate. In such cases, California law requires the following label:

Perchlorate Material – special handling may apply when the battery is recycled or disposed of. See www.dtsc.ca.gov/hazardouswaste/perchlorate

There is no special handling required by consumers.

Hearing Aid Compatibility with Mobile Phones

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has "Rated for Hearing Aids" printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box. To maintain the published Hearing

Aid Compatibility (HAC) rating for this mobile phone, use only the original equipment battery model.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Software Copyright Notice

Motorola products may include copyrighted Motorola and third-party software stored in semiconductor memories or other

media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Content Copyright

The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

Open Source Software Information

For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device, you may send your request in writing to the address below. Please make sure that the request includes the model number and the software version number.

MOTOROLA MOBILITY, INC. OSS Management 600 North US Hwy 45 Libertyville, IL 60048 USA

The Motorola website <u>opensource.motorola.com</u> also contains information regarding Motorola's use of open source.

Motorola has created the <u>opensource.motorola.com</u> to serve as a portal for interaction with the software community-at-large.

To view additional information regarding licenses, acknowledgments and required copyright notices for open source packages used in this Motorola mobile device, please select **Main Menu > Games and Apps > Open Source Notices**. In addition, this Motorola device may include self-contained applications that present supplemental notices for open source packages used in those applications.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Product Registration

Online Product Registration:

www.motorola.com/us/productregistration

Product registration is an important step toward enjoying your new Motorola product. Registering permits us to contact you for product or software updates and allows you to subscribe to updates on new products or special promotions. Registration is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

Service & Repairs

If you have questions or need assistance, we're here to help.

Go to <u>www.motorola.com/repair</u> (United States), where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1 (800) 453-0920 (United States), 1 (877) 483-2840 (TTY, TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Note: FOR IDEN SUBSCRIBER PRODUCTS, ACCESSORIES AND SOFTWARE PURCHASED IN THE UNITED STATES OR CANADA.

Subject to the exclusions contained below, Motorola Mobility, Inc. warrants its Motorola iDEN Digital Mobile and Portable Handsets ("Products"), Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-Roms or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products Covered	Length of Coverage	
Products as defined above.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.	

Products Covered	Length of Coverage
Accessories as defined above.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Products or Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.
Software as defined above. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

What is Not Covered? (Exclusions)

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Ornamental Decorations. Ornamental decorations such as emblems, graphics, rhinestones, jewels, gemstones and their settings, and other decorative elements, are excluded from coverage.

a date of consumer uct unless r below. this limited warranty. Abuse & Misuse. Defects or damage that result from abuse, misuse or accidents, including but not limited to: (a) improper handling, usage, operation or storage (e.g. operating the Product

handling, usage, operation or storage (e.g. operating the Product outside its permitted or intended uses including as set forth by Motorola in the Products specification sheets or other documentation, or failing to comply with the Products usage documentation); abuse/neglect (e.g. broken/bent/missingclips/fasteners/ connectors); (b) contact with liquids, water, rain, extreme humidity, heavy perspiration or other moisture, sand, food, dirt or similar substances caused from incorrectly securing the phone's protective elements or subjecting the Products to conditions beyond any stated specification or limits; (c) use of the Products for commercial rental purposes; or (d) external causes or acts which are not the fault of Motorola, including but not limited to flood, fire, earthquake, tornado or other acts of God, are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, including without limitation, software changes, or modification in any way by someone other than

Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, antennas, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products, Accessories or Software is excluded from coverage.

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided "as is" and without warranty.

Who is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

To obtain service or information, please call:

Motorola iDEN Customer Services: 1-800-453-0920 (United States), 954-723-4910 (United States), or 1-800-461-4575 (Canada)

TTY: 877-483-2840

Or visit us online at <u>www.motorola.com/repair</u> (United States) or <u>www.motorola.com/support</u> (Canada).

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations are There?

ANY IMPLIED WARRANTIES. INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SHALL BE LIMITED TO THE DUBATION OF THIS LIMITED WARBANTY OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER AND IS PROVIDED IN LIFU OF ALL OTHER WARBANTIES, EXPRESS OF IMPLIED, IN NO EVENT SHALL MOTOROLA BE LIABLE. WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE. OR FOR ANY INDIRECT. INCIDENTAL. SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS. ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific

legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

Patent and Software Provisions:

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a patent, and Motorola will pay those costs and damages finally awarded against the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

- That MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim;
- That MOTOROLA will have sole control of the defense of such suit and all negotiations for its settlement or compromise; and
- Should the Product or parts become, or in MOTOROLA'S opinion be likely to become, the subject of a claim of

infringement of a patent, that such purchaser will permit MOTOROLA, at its option and expense, either to procure for such purchaser the right to continue using the Product or parts or to replace or modify the same so that it becomes non infringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA.

MOTOROLA will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by MOTOROLA, nor will MOTOROLA have any liability for the use of ancillary equipment or software not furnished by MOTOROLA which is attached to or sued in connection with the Product or any parts thereof. In no event shall MOTOROLA be liable for any incidental, special or consequential damages arising from any claim of patent infringement or alleged infringement.

Laws in the United States and other countries preserve for MOTOROLA certain exclusive rights for copyrighted MOTOROLA software, such as the exclusive rights to reproduce in copies and distribute copies of such MOTOROLA software. MOTOROLA software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA software or exercise or rights in such MOTOROLA software is permitted. No license is granted by implication, estoppel or otherwise under MOTOROLA patent rights or copyrights.

index

Α

accessories 7 active phone line 38 advanced calling 14 3-way calls 14 call waiting 14 alert set 42, 98 turn off 42, 83 answer a call 14 auto replies 27

В

backlight 99 battery charging 12 battery charging indicators 12 battery installation 10 Bluetooth 78 connect 79 send information 80 setting your phone 78 turning on or off 78

С

call answer 14 any key answer 15 end 14 make 14 call completion 17 call forward 85 caller ID 84 camcorder 48 camera 48, 59, 62 media center 63, 65 self-timer 63 carousel menu 38 center key 42 center select key 7 contacts 100 edit/delete 18 set picture ID 18 set ringer ID 18

D

datebook 100 create events 100 receive events via PTT 100 setup 101 view reminders 100 dial a phone number 14 dialed calls 83 direct launch 97 display 37 drafts see also text messages, drafts 24 dual microphone noise cancellation 82

Ε

earpiece volume 42 emergency number 86 end a call 14 end key 14

G

GPS enabled emergency calls 86 GPS PIN enable GPS PIN 46 GPS, see GPS enabled

Н

handsfree speaker 43 hearing aid 43 home screen 37

I

images editing 60 menu 60 my images 60 slideshow 60 viewing 61 international calls 87, 88

L

lock keypad 46

Μ

main menu 38 make a call 14 media center 47, 48 memory card 8 insert 9 remove 9 message center text messages 25 message indicator 38 messages fax mail indicator 88 messaging 19 modem using your handset as a 36 multimedia 47 my images 48, 60 my music 48, 52 my videos 48, 61

Ν

navigation key 7, 42 net alerts 89

0

one touch PTT 75 optional accessory 7 optional feature 7

Ρ

packet data 38 phone number 19 power key 13 private calls answer 16 call alerts 15 make 15 receive a call alert 16 PT Manager 76 PTX features 67

R

received calls 83 recent calls 83 redial 84 reorder apps menu 103 ring style indicator 38 ring style, setting 42 ring tones 48 off 98 setting 98 vibrate 98, 99 ringer volume 42

S

security 45 send key 14 signal strength indicator 37 SIM card 8 change SIM PIN 46 enable SIM PIN 46 soft keys 37 speaker 38 speed dial 87 state tone 97 store your number 19

Т

talk around calls, ending 95 channels 91 channels, setting 92 code calls, making 93 code calls, receiving 93 codes 91 codes, setting 92 direct launch 97 emergency calls 96 private only setting 94 private talk around calls 94 receiving all calls 93 setup options 96 state tone 97

switching to 91 switching to network mode 91 talk range 91 text entry 39 alpha method 41 word method 40 text messages 19, 36 creating 19 deleting 30 drafts 24 memory 31 message center 25 receiving 24 resend messages 30 sending 19 sent messages 30

۷

videos my videos 61 viewing 61 voice names 85 voicemail 87 message indicator 88 receiving 88 setting up 87 voicerecord 48 volume 42

W

wallpaper 99 wireless web 76 microbrowser navigation 77

Υ

your phone number 19

128 index

www.motorola.com



