

**TP-LINK®*****User's Guide*****TL-SL1109****8+1G Gigabit Ethernet Switch****TL-SL1117****16+1G Gigabit Ethernet Switch****TL-SL1226****24+2G Gigabit Ethernet Switch****TP-LINK®**

TP-LINK TECHNOLOGIES CO., LTD.

E-mail: support@tp-link.comWebsite: <http://www.tp-link.com>

Add: Fl.3,Bldg.R1-B,High-Tech Industrial Park,Shennan Road,Shenzhen,China

COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice. **TP-LINK®** is a registered trademark of TP-LINK Technologies Co., Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-LINK Technologies Co., Ltd. Copyright © 2005 TP-LINK Technologies Co., Ltd. All rights reserved.

FCC STATEMENT

The Switch has been tested and found to comply with the limits for a class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

EC DECLARATION OF CONFORMITY (EUROPE)

In compliance with the EMC Directive 89/336/EEC, Low Voltage Directive 73/23/EEC, this product meets the requirements of the following standards:

EN55022

EN55024

EN60950

SAFETY NOTICES



Caution:

Do not use this product near water, for example, in a wet basement or near a swimming pool.

Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning.

TABLE OF CONTENTS

Package Contents.....	1
Chapter 1: Introduction of the Product.....	1
1.1 Overview of the product.....	1
1.2 Features.....	2
Chapter 2: Installation.....	3
2.1 Mounting the Switch on a Desk.....	3
2.2 Mounting the Switch in a Rack.....	3
2.3 Power on.....	4
Chapter 3: Identifying External Components.....	4
3.1 Front Panel.....	4
3.2 Rear Panel.....	5
3.3 LED indicators.....	5
Appendix A: Specifications.....	6
Appendix B: Troubleshooting.....	7
Appendix C: Contact Information.....	7

Package Contents

The following contents should be found in your box:

One Switch

One power cord

This User's Guide

Rubber footpads for Desk-mount

Rack-mount kit for installing the switch in a 19-inch rack



Note: If any of the above contents is damaged or missing, please contact the retailer from whom you purchased the TL-SL1109/TL-SL1117/TL-SL1226 Gigabit Ethernet Switch for assistance.

Chapter 1: Introduction of the Product

This chapter describes the features of the TL-SL1109/TL-SL1117/TL-SL1226 Gigabit Ethernet Switch.

1.1 Overview of the product

The TL-SL1109/TL-SL1117/TL-SL1226 Gigabit Ethernet Switch provides you with a high-performance, low-cost, easy-to-use, seamless and standard upgrade to boost your old network to 1000Mbps. Increase the speed of your network server and backbone connections, make Gigabit connection to a server or uplink a network necessarily.

The TP-LINK TL-SL1109/TL-SL1117/TL-SL1226 features a non-blocking switching architecture that forwards and filters packets at full wire-speed for maximum throughput. MAC address auto-learning and auto-aging,

IEEE802.3x flow control for Full Duplex mode and backpressure for Half Duplex mode. It is compatible with all 10,100, and 1000Mbps Ethernet devices because it is standard-based.

The TP-LINK TL-SL1109/TL-SL1117/TL-SL1226 is plug-and-play and no configuration is required. Auto MDI/MDI-X cable detection on all ports eliminate the need for crossover cable or Uplink port. Each port can be used as general ports or Uplink ports, and any port can be simply plugged into a server, a hub, a router or a switch, using the straight cable or crossover cable. Diagnostic LEDs which display link status and activity, allowing you to quickly detect and correct problems on the network.

1.2 Features

- Complies with IEEE802.3, IEEE802.3u, IEEE802.3ab standards
- 8/16/24 10/100Mbps Auto-Sense RJ45 ports supporting Auto-MDI/MDIX
- 1/1/2 10/100/1000Mbps Auto-Sense RJ45 ports supporting Auto-MDI/MDIX
- Supports IEEE802.3x flow control for full-duplex model and backpressure for half-duplex transfer model
- Non-blocking switching architecture that forwards and filters packets at full wire-speed for maximum throughput
- Supports MAC address auto-learning and auto-aging
- LED indicators for monitoring power, link, activity, speed
- 19" rack-mountable steel case
- Internal power supply

Chapter 2: Installation

2.1 Mounting the Switch on a Desk

Before place the Switch on a desk, attach four rubber footpads to the flutes on the Switch bottom, then lay the Switch on the desktop, where can be have as much as 5kg placed on top.



Note: Make sure there is a grounded AC outlet within 1.5 meters, and working well.

Make sure there is free space for radiating heat and air.

Make sure not to place anything to heavy on top of the switch.

2.2 Mounting the Switch in a Rack

The dimension of TL-SL1117/TL-SL1226 is designed according to the standard 19" rack-mountable steel case of Electronic Industries Association. TL-SL1109 can't mount in Rack.

Turn off all the equipment connected to the Switch before mounting it in the rack, then rivet the two "L" brackets onto each side of the Switch, fasten it with screws in the rack.

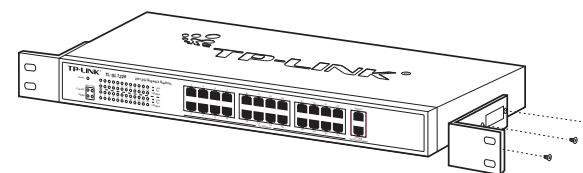


Figure 2-1 Rivet the "L" brackets onto the Switch

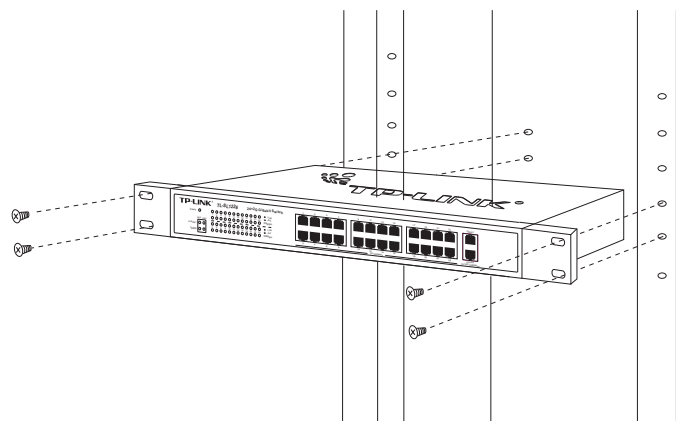


Figure 2-2 Fasten the Switch in the rack

2.3 Power on

TL-SL1109/TL-SL1117/TL-SL1226 Gigabit Ethernet Switch is powered by AC power supply. Powering on the Switch, it will automatically initialize and its LED indicators should respond as follows:

- 1) All of the LED indicators will flash momentarily for one second, which represent a resetting of the system.
- 2) The power LED indicator will remain ON.

Chapter 3: Identifying External Components

This Chapter describes the front panel, rear panel and LED indicators of the Switch, for example, only the TL-SL1226 is show.

3.1 Front Panel

The front panel of the TL-SL1226 consists of switch LED indicators, 24

10/100Mbps RJ-45 ports and 2 10/100/1000Mbps RJ-45 ports.

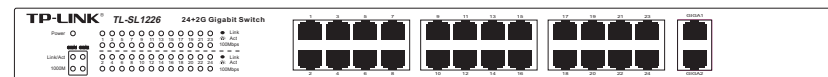


Figure 3-1 TL-SL1226 Switch Front Panel sketch

3.2 Rear Panel

The rear panel of the TL-SL1226 only features a power receptacle, which is an AC power receptacle. Connect the female of the power cord head here, and the male head to the AC power outlet.



Figure 3-2 TL-SL1226 Switch Rear Panel sketch

3.3 LED indicators

The LED indicators include Power, Link/Act, 1000Mbps and 100Mbps LED indicators, which are used for monitoring and pre-troubleshooting of the Switch. The following section shows the LED indicators for the Switch along with an explanation of each indicator.

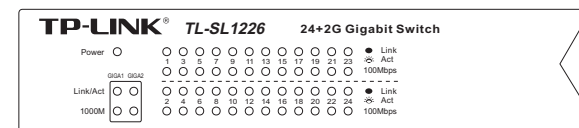


Figure 3-3 TL-SL1226 Switch LEDs sketch

Power LED: This indicator will light solid red when the Switch powers

up. If the LED is not lit, please check the power supply and connection.

LINK/ACT LED: The LED indicates Link/Active status. It flashes green when data is being transmitted or received on the working connection.

1000M LED: The corresponding gigabit port LED indicator will light solid green when the gigabit port connected to a 1000Mbps device.

100M LED: The corresponding 100M port LED indicator will light solid green when the 10/100M port connected to a 100Mbps device.

Appendix A: Specifications

General	
Standards	IEEE802.3 10Base-T IEEE802.3u 100Base-TX IEEE802.3ab 1000Base-T
Topology	Star
Protocol	CSMA/CD
Data Transfer Rate	Ethernet: 10Mbps (Half Duplex), 20Mbps (Full Duplex) Fast Ethernet: 100Mbps (Half Duplex), 200Mbps (Full Duplex) Gigabit Ethernet: 2000Mbps (Full Duplex)
Network Media (Cable)	10Base-T: UTP category 3, 4, 5 cable (maximum 100m) EIA/TIA-568 100Ω STP (maximum 100m) 100Base-TX: UTP category 5, 5e cable (maximum 100m) EIA/TIA-568 100Ω STP (maximum 100m) 1000Base-TX: UTP category 5, 5e cable (maximum 100m) EIA/TIA-568 100Ω STP (maximum 100m)
Number of Ports	8/16/24 10/100Mbps Auto-Negotiation RJ-45 ports 1/1/2 10/100/1000Mbps Auto-Negotiation RJ-45 ports
LED indicators	Power, Link/Act, 100M, 1000M
Transfer Method	Store-and-Forward
MAC Address Learning	Automatically learning, automatically Update
Frame Filter Rate	10Base-T: 14880pps/Port 100Base-Tx: 148800pps/Port 1000Base-T: 1488000pps/Port
Frame Forward Rate	10Base-T: 14880pps/Port 100Base-Tx: 148800pps/Port 1000Base-T: 1488000pps/Port
Safety & Emissions	FCC, CE (TL-SL1226)

Environmental and Physical	
Dimensions	17.3×7.1×1.7in. (440×180×44mm) (W×D×H)(TL-SL1117/1226) 11.6×7.1×1.7in. (294×180×44mm) (W×D×H) (TL-SL1109)
Power Supply Output	100-240V~ 50-60Hz (Internal universal power supply) (TL-SL1117/1226) 220V~ 50Hz (Internal universal power supply) (TL-SL1109)
Operating Temperature	0°C~40°C (32°F~104°F)
Storage Temperature	-40°C~70°C (-40°F~158°F)
Operating Humidity	10%~90% non-condensing
Storage Humidity	5%~95% non-condensing

Appendix B: Troubleshooting

1. The Power LED is not lit
Make sure the AC power cord connected the Switch with power source properly.
Make sure the power source is ON.
2. The Link/Act LED is not lit when a device is connected to the corresponding port
Make sure that the cable connectors are firmly plugged into the Switch and the device.
Make sure the connected device is turned on and working well.
The cable must be less than 100 meters long(328 feet).

Appendix C: Contact Information

For help with the installation or operation of the TP-LINK TL-SL1109/TL-SL1117/TL-SL1226 Gigabit Ethernet Switch, please contact us.

E-mail: support@tp-link.com

Website: <http://www.tp-link.com>