

GB Dear Customer,

Congratulations on acquiring your new microwave oven, which from now on will make your kitchen chores considerably easier.

You will be pleasantly surprised by the kinds of things you can do with your combined microwave oven. Not only can you use it for rapid defrosting or heating up of food, you can also prepare whole meals. The combination of microwave, hot air convection and grill means that food can cook and brown at the same time, and much faster, than by using the conventional method.

In our test kitchen our microwave team has gathered together a selection of the most delicious international recipes which are quick and simple to prepare.

Be inspired by the recipes we have included and prepare your own favourite dishes in your microwave oven.

There are so many advantages to having a microwave oven which we are sure you will find exciting:

- Food can be prepared directly in the serving dishes, leaving less to wash up.
- Shorter cooking times and the use of little water and fat ensure that many vitamins, minerals and characteristic flavours are preserved.

We advise you to read the cookery book guide and operating instructions carefully.

You will then easily understand how to use your oven.

Enjoy using your combined microwave oven and trying out the delicious recipes.

Your Microwave-Team.

GB CONTENTS

Operation manual

DEAR CUSTOMER	GB-1
OVEN	GB-2
ACCESSORIES	GB-3
OPTION	GB-3
CONTROL PANEL	GB-4
IMPORTANT SAFETY INSTRUCTIONS	GB-5-7
INSTALLATION	GB-7
BEFORE OPERATION	GB-8
SELECTING THE LANGUAGE	GB-8
USING THE STOP BUTTON	GB-9
MICROWAVE POWER LEVELS	GB-10
MICROWAVE COOKING	GB-11
GRILL COOKING	GB-12
HEATING WITHOUT FOOD	GB-12
CONVECTION COOKING	GB-13-14
DUAL COOKING	GB-15-16
OTHER CONVENIENT FUNCTIONS	GB-17-19
AUTOMATIC OPERATIONS	GB-20-21
EXPRESS COOK CHART	GB-21
EXPRESS DEFROST CHART	GB-22
EXPRESS DEFROST NOTES	GB-23
AUTO REHEAT CHART	GB-23
AUTO COOK CHART	GB-24


RECIPES FOR USING RK-T11-A (SQUARE TIN/SHELF)	GB-25-27
CARE AND CLEANING	GB-28
SERVICE CALL CHECK	GB-29

Cookbook

WHAT ARE MICROWAVES?	GB-30
WHAT YOUR NEW COMBI-MICROWAVE OVEN CAN DO	GB-30
SUITABLE COOKWARE	GB-31-32
TIPS AND TECHNIQUES	GB-32-34
HEATING	GB-35
THAWING	GB-35
THAWING AND COOKING	GB-36
COOKING OF MEAT, FISH AND POULTRY	GB-36
COOKING FRESH VEGETABLES	GB-36
LEGEND	GB-37
TABLES	GB-38-40
RECIPES	GB-41-67
SPECIFICATIONS	GB-68
INFORMATION ON PROPER DISPOSAL	GB-68
SERVICE ADDRESSES	I-IV





OVEN

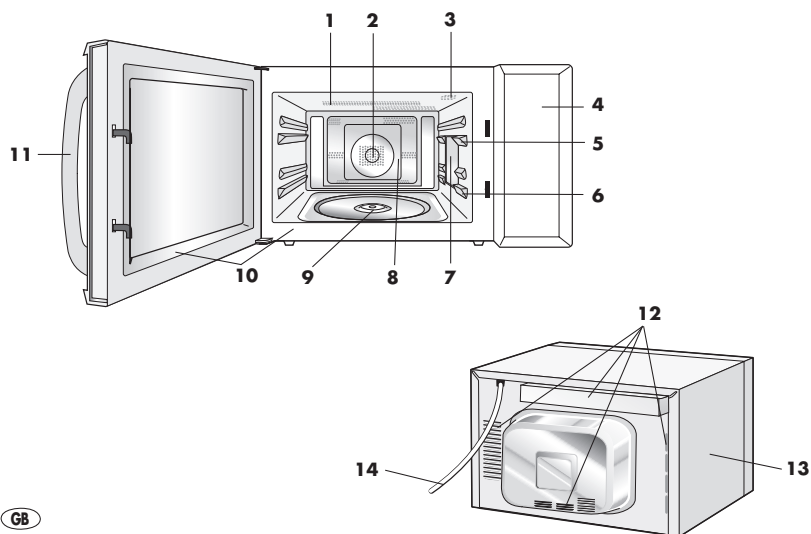


GB

- 1** Grill heating element
- 2** Convection heating element
- 3** Oven lamp
- 4** Control panel
- 5** Shelf rail (rail 1)
- 6** Shelf rail (rail 2)
- 7** Waveguide cover
- 8** Oven cavity
- 9** Coupling
- 10** Door seals and sealing surfaces
- 11** Door opening handle
- 12** Air-vent openings
- 13** Outer cabinet
- 14** Power cord

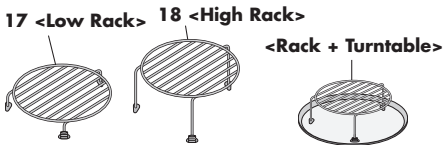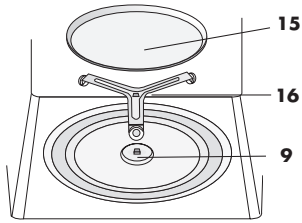

19 <Baking tin>

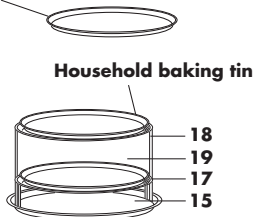

ACCESSORIES

Check to make sure the following accessories are supplied:

15 Turntable **16** Turntable support **17** Low rack (height: 4 cm) **18** High rack (height: 15,5 cm) **19** Baking tin.

- Place the turntable support into the coupling in the centre of the oven floor, ensuring you place it TOP side up, (TOP is engraved on one side). It should be able to freely rotate around the coupling.
- Place the turntable on to the turntable support.
- Place the high/low racks onto the turntable if necessary. These racks are used for cooking in Convection, Dual or Grill mode.
- The baking tins are only recommended for baking pastries in convection mode. Place the tin on the low rack. In case of two stage baking place additionally another household baking tin (not supplied with oven) on the high rack as shown opposite.

NOTES:

- Always operate the oven with the turntable and support fitted correctly. This promotes thorough even cooking. A badly fitted turntable may rattle, may not rotate properly and damage the oven.
 - The turntable rotates clockwise or counter clockwise. The rotary direction may change each time you start the oven. This does not affect cooking performance.
 - When you order accessories, please mention two items: part name and model name to your dealer or SHARP authorised service agent.
- This oven will be supplied with 2 racks (High and Low) and 1 baking tin.

OPTION





20 <Square Shelf> 21 <Square baking Tin>



GB


OPTIONAL ACCESSORIES (RK-T11-A):

- You can order a square shelf (20) and a Square baking tin (21) for this oven as optional accessories.
- When using either the square shelf or the square tin, we recommend you place it at rail 2 as shown in the diagram A. When using both of them, place the square tin at rail 2 and the square shelf at rail 1 as shown in the diagram B. When using the square shelf, ensure the shelf locator (22) is on the right side.
- These item are included with the oven R-940 (BK). Use for convection only. See page GB-14.

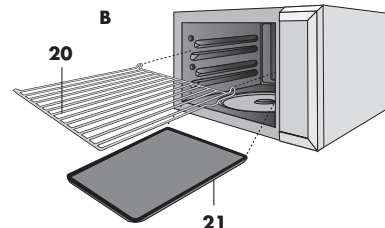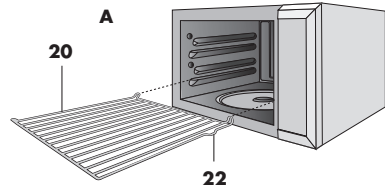



CONTROL PANEL

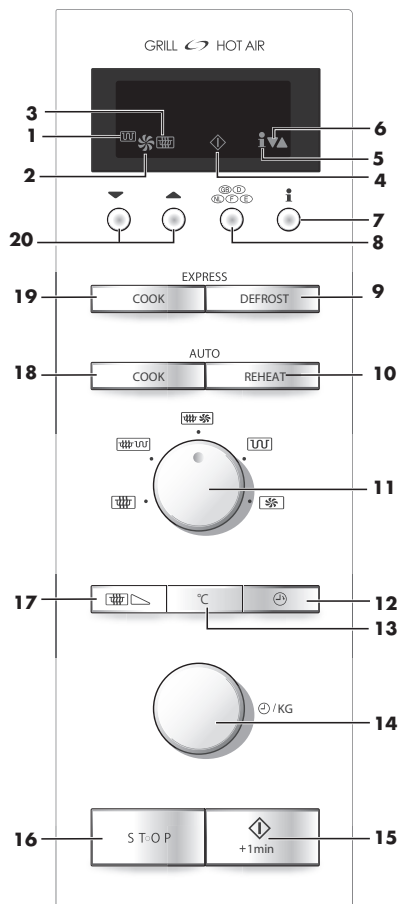

GB CONTROL PANEL

Digital display and indicators:

- 1 **GRILL** indicator
- 2 **CONVECTION** indicator
- 3 **MICROWAVE** indicator
- 4 **COOKING IN PROGRESS** indicator
- 5 **INFO** indicator
- 6 **LESS/MORE** indicator

Operating buttons:

- 7 **INFORMATION** button
- 8 **LANGUAGE** button
- 9 **EXPRESS DEFROST** button
- 10 **AUTO REHEAT** button
- 11 **COOKING MODE** dial
 - for microwave cooking
 - for microwave cooking with GRILL
 - for microwave cooking with CONVECTION
 - for GRILL
 - for CONVECTION
- 12 **TIMER** button
- 13 **CONVECTION** button
 - Press to change the convection temperature.
- 14 **TIME/WEIGHT** knob
 - Rotate the knob to enter either the cooking/defrosting time or weight of food.
- 15 **◇ (START)/+1min** button
- 16 **STOP** button
- 17 **MICROWAVE POWER LEVEL** button
 - Press to change the microwave power setting.
- 18 **AUTO COOK** button
- 19 **EXPRESS COOK** button
- 20 **LESS/MORE** buttons

IMPORTANT SAFETY INSTRUCTIONS



ENGLISH

IMPORTANT SAFETY INSTRUCTIONS: READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

1. This oven is designed to be used on a countertop only. It is not designed to be built into a kitchen unit. Do not place the oven in a cabinet.
2. The oven door may become hot during cooking. Place or mount the oven so that the bottom of the oven is 85 cm or more above the floor. Keep children away from the door to prevent them burning themselves.
3. Ensure there is a minimum of free space above the oven of 13 cm.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
7. **WARNING:** When the appliance is operated in the GRILL, CONVECTION, DUAL, EXPRESS COOK modes, children should only use the oven under adult supervision due to the temperature generated.
8. **WARNING:** Accessible parts may become hot during use. Young children should be kept away.
9. **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
10. **WARNING:** Never adjust, repair or modify the oven yourself. It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to microwave energy.
11. If the power supply cord of this appliance is damaged, it must be replaced with a special cord. The exchange must be made by an authorised SHARP service agent.
12. **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
13. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
14. Do not cook eggs in their shells, and whole hard boiled eggs should not be heated in microwave ovens since they may explode even after microwave cooking has ended. To cook or reheat eggs which have not been scrambled or mixed, pierce the yolks and the whites, or the eggs may explode. Shell and slice hard boiled eggs before reheating them in the microwave oven.
15. Utensils should be checked to ensure that they are suitable for use in the oven. See Page GB-31. Use only microwave safe containers and utensils on microwave modes.
16. The contents of feeding bottles and baby food jars must be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
17. The door, outer cabinet, oven cavity, dishes, accessories and especially the grill heating elements will become very hot during operation. Care should be taken to avoid touching these areas. To prevent burns, always use thick oven gloves. Before cleaning make sure they are not hot.
18. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
19. If smoke is observed, switch off or unplug the oven and keep the door closed in order to stifle any flames.
20. Clean the oven at regular intervals and remove any food deposits.
21. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
22. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
23. Steam cleaner is not to be used.
24. See instructions for cleaning door seals, cavities and adjacent parts on page GB-28.



IMPORTANT SAFETY INSTRUCTIONS

To avoid the danger of fire.

- The microwave oven should not be left unattended during operation. Power levels that are too high, or cooking times that are too long, may overheat foods resulting in a fire.**
- The electrical outlet must be readily accessible so that the unit can be unplugged easily in an emergency.
- The AC power supply must be 230V, 50Hz, with a minimum 16A distribution line fuse, or a minimum 16A distribution circuit breaker.
- A separate circuit serving only this appliance should be provided.
- Do not place the oven in areas where heat is generated. For example, close to a conventional oven.
- Do not install the oven in an area of high humidity or where moisture may collect.
- Do not store or use the oven outdoors.
- Clean the waveguide cover, the oven cavity, the turntable and turntable support after use. These must be dry and free from grease. Built-up grease may overheat and begin to smoke or catch fire.
- Do not place flammable materials near the oven or ventilation openings.
- Do not block the ventilation openings.
- Remove all metallic seals, wire twists, etc., from food and food packages. Arcing on metallic surfaces may cause a fire.
- Do not use the microwave oven to heat oil for deep frying. The temperature cannot be controlled and the oil may catch fire.
- To make popcorn, use only special microwave popcorn makers.
- Do not store food or any other items inside the oven.
- Check the settings after you start the oven to ensure the oven is operating as desired.
- To avoid overheating and fire, special care must be taken when cooking or reheating foods with a high sugar or fat content, for example, Sausage rolls, Pies or Christmas pudding.
- See the corresponding hints in operation manual and the cookery book section.

To avoid the possibility of injury

- WARNING:**
Do not operate the oven if it is damaged or malfunctioning. Check the following before use:
 - The door; make sure the door closes properly and ensure it is not misaligned or warped.
 - The hinges and safety door latches; check to make sure they are not broken or loose.
 - The door seals and sealing surfaces; ensure that they have not been damaged.
 - Inside the oven cavity or on the door; make sure there are no dents.
 - The power supply cord and plug; ensure that they are not damaged.

- Do not operate the oven with the door open or alter the door safety latches in any way.
- Do not operate the oven if there is an object between the door seals and sealing surfaces.

- Do not allow grease or dirt to build up on the door seals and adjacent parts. Clean the oven at regular intervals and remove any food deposits. Follow the instructions for "Care and Cleaning" on page GB-28.**

- Individuals with PACEMAKERS should check with their doctor or the manufacturer of the pacemaker for precautions regarding microwave ovens.

To avoid the possibility of electric shock

- Under no circumstances should you remove the outer cabinet.
- Never spill or insert any objects into the door lock openings or ventilation openings. In the event of a spill, turn off and unplug the oven immediately, and call an authorised SHARP service agent.
- Do not immerse the power supply cord or plug in water or any other liquid.
- Do not let the power supply cord hang over the edge of a table or work surface.
- Keep the power supply cord away from heated surfaces, including the rear of the oven.
- Do not attempt to replace the oven lamp yourself or allow anyone who is not an electrician authorised by SHARP to do so. If the oven lamp fails, please consult your dealer or an authorised SHARP service agent.

To avoid the possibility of explosion and sudden boiling:

- Never use sealed containers. Remove seals and lids before use. Sealed containers can explode due to a build up of pressure even after the oven has been turned off.
- Take care when microwaving liquids. Use a widemouthed container to allow bubbles to escape.

Never heat liquids in narrow necked containers such as baby bottles, as this may result in the contents erupting from the container when heated and cause burns.

To prevent sudden eruption of boiling liquid and possible scalding:

- Do not use excessive amount of time (See page GB-39).
- Stir liquid prior to heating/reheating.
- It is advisable to insert a glass rod or similar utensil (not metal) into the liquid whilst reheating.
- Let liquid stand for at least 20 seconds in the oven at the end of cooking time to prevent delayed eruptive boiling.
- Pierce the skin of such foods as potatoes, sausages and fruit before cooking, or they may explode.

IMPORTANT SAFETY INSTRUCTIONS



ENGLISH

To avoid the possibility of burns

1. Use pot holders or oven gloves when removing food from the oven to prevent burns.
2. Always open containers, popcorn makers, oven cooking bags, etc., away from the face and hands to avoid steam burns and eruption of boiling.
- 3.

To avoid burns, always test food temperature and stir before serving and pay special attention to the temperature of food and drink given to babies, children or the elderly.

Temperature of the container is not a true indication of the temperature of the food or drink; always check the food temperature.

4. Always stand back from the oven door when opening it to avoid burns from escaping steam and heat.
5. Slice stuffed baked foods after heating to release steam and avoid burns.

To avoid misuse by children

1. Do not lean or swing on the oven door.
2. Children should be taught all important safety instructions: use of pot holders, careful removal of food coverings; paying special attention to packaging (e.g. self-heating materials) designed to make food crisp, as they may be extra hot.

Other warnings

1. Never modify the oven in any way.
2. Do not move the oven while it is in operation.
3. This oven is for home food preparation only and may only be used for cooking food. It is not suitable for commercial or laboratory use.

To promote troublefree use of your oven and avoid damage.

1. Never operate the oven when it is empty except where recommended in the operation manual. Doing so may damage the oven.
2. When using a browning dish or self-heating material, always place a heat-resistant insulator such as a porcelain plate under it to prevent damage to the turntable and turntable support due to heat stress. The preheating time specified in the dish's instructions must not be exceeded.
3. Do not use metal utensils, which reflect microwaves and may cause electrical arcing. Use only the turntable and the turntable support designed for this oven. Do not operate the oven without the turntable.
4. Do not place anything on the outer cabinet during operation.

NOTE:

If you are unsure how to connect your oven, please consult an authorised, qualified electrician. Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the correct electrical connection procedure. Water vapour or drops may occasionally form on the oven walls or around the door seals and sealing surfaces. This is a normal occurrence and is not an indication of microwave leakage or a malfunction.

INSTALLATION




1. Remove all packing materials from the inside of the oven cavity. Discard the loose polythene sheet from between the door and cavity. Remove the feature sticker, if attached, from the outside of the door.
2. Check the oven carefully for any signs of damage.
3. Place the oven on a flat, level surface strong enough to support the oven's weight plus the heaviest item likely to be cooked.

This oven is designed for countertop use only.
Do not place the oven in a cabinet.

4. **The oven door may become hot during cooking. Place or mount the oven so that the bottom of the oven is 85 cm or more above the floor. Keep children away from the door to prevent them burning themselves.**

5. **Do not allow the power supply cord to run over any hot or sharp surfaces, such as the hot air vent area at the top rear of the oven.**

6. Ensure there is a minimum of free space above the oven of 13 cm.

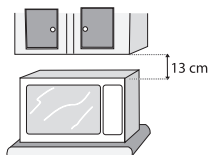

7. Securely connect the plug of the oven to a standard earthed (grounded) household electrical outlet.



BEFORE OPERATION

Your oven has an energy save mode.

1. Plug in the oven. Nothing will appear on the display at this time.
2. Open the door.
The oven display will show "SELECT LANGUAGE" in 5 languages.
NOTE: Once you select the language using the **LANGUAGE** button, the display will show ". 0".
3. Close the door.
The oven display will show ". 0".
4. Select a language (See below).
NOTE: If you use the oven in English, you do not have to select language, and go to step 5.
5. Heat the oven without food (See page GB-12).

In Energy Save Mode, if you do not operate the oven for 3 minutes or more (e.g. closing the door, pressing the **STOP** button, or at the end of cooking), you will not be able to operate the oven until you open and close the oven door.

COOKING HINTS:

The oven has an 'Information Display System' which offers you step by step instructions to easily guide you through each feature, and enable you to gain information in your desired language. The oven has an **INFO** button for getting instructions for each button. Indicators will appear in the display, after pressing a button, to inform you of the next operation step.



SELECTING THE LANGUAGE

Press LANGUAGE button	LANGUAGE
once	ENGLISH
twice	DEUTSCH
3 times	NEDERLANDS
4 times	FRANÇAIS
5 times	ESPAÑOL

The oven comes set for English. You can change the language. To change, press the **LANGUAGE** button until the desired language is displayed. Then press the **◇ (START)/+ 1 min** button.

Example:

Suppose you want to select **German**:

1. Choose the desired language by pressing the **LANGUAGE** button.



2. Press the **◇ (START)/+ 1 min** button to start the setting.



x1



Check the display.



NOTE: The selected language will be memorised even if the electrical power supply is interrupted.

USING THE STOP BUTTON




Use the **STOP** button to:

1. Erase a mistake during programming.
2. Stop the oven temporarily during cooking.
3. Cancel a programme during cooking, press the **STOP** button twice.



MICROWAVE POWER LEVELS

Power Level	Press the MICROWAVE POWER LEVEL button 	Display	Watt
HIGH	X1	100 P	1050 W
	X2	90 P	945 W
MEDIUM HIGH	X3	80 P	840 W
	X4	70 P	735 W
MEDIUM	X5	60 P	630 W
	X6	50 P	525 W
MEDIUM LOW (Defrost)	X7	40 P	420 W
	X8	30 P	315 W
LOW (Defrost)	X9	20 P	210 W
	X10	10 P	105 W
	X11	0 P	0 W

IMPORTANT: The Microwave power level will default to 100 P unless you press the **MICROWAVE POWER LEVEL** button.

- Your oven has 11 power levels, as shown.

Generally the following recommendations apply:

100 P/90 P - (HIGH output = 1050/945 W) used for fast cooking or reheating e.g. for casseroles, hot beverages, vegetables etc.

80 P/70 P - (MEDIUM HIGH output = 840/735 W) used for longer cooking of dense foods such as roast joints, meat loaf and plated meals, also for sensitive dishes such as sponge cakes. At this reduced setting, the food will cook evenly without over cooking at the sides.

60 P/50 P - (MEDIUM output = 630/525 W) for dense foods which require a long cooking time when cooked conventionally, e.g. beef casserole, it is advisable to use this power setting to ensure the meat will be tender.

40 P/30 P - (MEDIUM LOW output = 420/315 W defrost setting) to defrost, select this power setting, to ensure that the dish defrosts evenly. This setting is also ideal for simmering rice, pasta, dumplings and cooking egg custard.

20 P/10 P - (LOW output = 210/105 W) For gentle defrosting, e.g. cream gateaux or pastry.

To set the microwave power level:

1. Rotate the **COOKING MODE** dial to the microwave setting.
2. Rotate the **TIME/WEIGHT** knob clockwise or counter-clockwise to select cooking time.
3. Press the **MICROWAVE POWER LEVEL** button until the desired power level appears on the display.
(If the **MICROWAVE POWER LEVEL** button is pressed once, **100 P** will be displayed. If you miss your desired level, continue pressing the **MICROWAVE POWER LEVEL** button until you reach the level again).
4. Press the **(START)/+1min** button.

NOTE: If the power level is not selected, 100 P is automatically set.

MICROWAVE COOKING



Your oven can be programmed for up to 90 minutes. (90.00). The input unit of cooking (defrosting) time varies from 10 seconds to five minutes. It depends on the total length of the cooking (defrosting) time as shown on the table opposite:

Cooking Time:

0-5 minutes
5-10 minutes
10-30 minutes
30-90 minutes


Increasing unit:

10 seconds
30 seconds
1 minute
5 minutes


Example:

Suppose you want to heat soup for 2 minutes and 30 seconds on 70 P microwave power.


1. Rotate the **COOKING MODE** dial to the microwave setting.

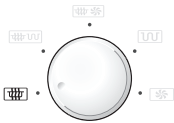


2. Enter desired cooking time by rotating the **TIME/WEIGHT** knob clockwise.



3. Press the **MICROWAVE POWER LEVEL** button four times for 70 P microwave power.



4. Press the (**START**)/**+1min** button once to start cooking.



Check the display.



NOTES:

1. When the door is opened during the cooking process, the cooking time on the digital display stops automatically. The cooking time starts to count down again when the door is closed and the (**START**)/**+1min** button is pressed.
2. If you wish to know the power level during cooking, press the **MICROWAVE POWER LEVEL** button. As long as your finger is pressing the **MICROWAVE POWER LEVEL** button, the power level which you have input will be displayed.
3. When the operation of the oven has finished, "0" will reappear on the display.
4. You can rotate the **TIME/WEIGHT** knob clockwise or counter-clockwise. If you rotate the dial counter-clockwise, the cooking time will decrease from 90 minutes by degrees.

WARNING:

1. Never use the square shelf and square tin (RK-T1 1-A) for microwave cooking and dual cooking as this may cause arcing.
2. After cooking and opening the door, the display may show "NOW COOLING".



GRILL COOKING

The grill heating element at the top of the oven cavity has one power setting only.

Example: Suppose you want to cook cheese on toast for 5 minutes (Place toast on the high rack.)

1. Rotate the **COOKING MODE** dial to the **GRILL** setting.
2. Enter the desired cooking time by rotating the **TIME/WEIGHT** knob clockwise.
3. Press the **(START)/+1min** button to start cooking.



Check the display.



1. The high or low racks are recommended when grilling. It is not recommended to use the square shelf and square tin (RK-T11-A) for grilling.
2. You may detect smoke or a burning smell when using the grill for the first time, this is normal and

not a sign that the oven is out of order.
(Please see heating without food below.)

3. After cooking and opening the door, the display may show "NOW COOLING".

WARNING: The oven cavity, door, outer cabinet, accessories and dishes will become very hot, always use thick oven gloves when removing the food or turntable from the oven to prevent burns.




HEATING WITHOUT FOOD

You may detect smoke or a burning smell when using the grill and convection for the first time. This is normal and not a sign that the oven is out of order.

To avoid this problem, when first using the oven, heat the oven without food for 20 minutes on grill and then at convection 250°C.

IMPORTANT: During operation, to allow smoke or smells to disperse open a window or switch the kitchen ventilation on. Make sure there is no food in the oven.

1. Rotate the **COOKING MODE** dial to the **GRILL** or **CONVECTION** setting.
2. Enter the required heating time. (20 min.)
3. Start operation by pressing the **(START)/+1min** button.

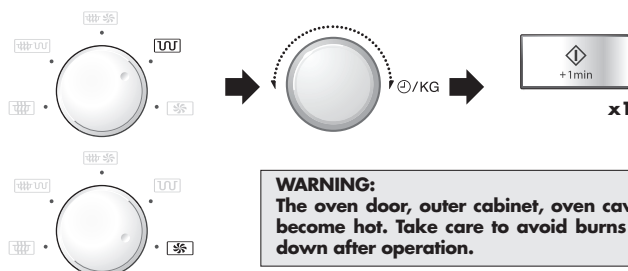

The oven will count down. When the oven has finished heating, open the door to cool the oven cavity.

WARNING:
The oven door, outer cabinet, oven cavity and accessories will become hot. Take care to avoid burns when cooling the oven down after operation.

CONVECTION COOKING



Your oven can be used as a conventional oven using the convection facility and 10 pre-set oven temperatures. Preheating is recommended for better results (especially when using the square shelf or the square tin RK-T11-A).

Press CONVECTION button	1	2	3	4	5	6	7	8	9	10
Oven Temp (°C)	250	230	220	200	190	180	160	130	100	40

Example 1: To cook with preheating

Suppose you want to pre-heat to 180°C and cook for 20 minutes at 180°C.

1. Select the cooking mode by rotating the **COOKING MODE** dial to [CON].
 2. Enter the desired preheat temperature by pressing the **CONVECTION** button six times. The display will show 180°C.
 3. Press the **(START)/+1min** button to start pre-heating.
- When the pre-heated temperature has been reached the audible signal sounds, the display will show 180°C, open the door and place the food inside the oven. Close the door.



4. Use the **TIME/WEIGHT** knob to input the cooking time (20 mins).

5. Press the **(START)/+1min** button.

Check the display.



NOTES:

1. When the oven is preheated the turntable should be in the oven.
2. After preheating, if you want to cook at a different temperature press the **CONVECTION** button until the desired setting appears on the display. In the example above, to change the temperature you would press the **CONVECTION** button after entering the cooking time.
3. When the oven reaches the programmed preheating temperature, it will automatically hold at the pre-heated temperature for 30 minutes. After 30 minutes the display will change to ". 0". The selected convection programme will be cancelled.
4. After cooking and opening the door, the display may show "NOW COOLING".
5. To get the best results when following pack instructions for convection, please follow the instructions for "conventional oven".
6. If you purchase the RK-T11-A accessory pack, please follow the INFORMATION & RECIPES booklet included with the pack.




CONVECTION COOKING

Example 2: To cook without preheating

Suppose you want to cook at 250°C for 20 minutes.

1. Select the cooking mode by rotating the **COOKING MODE** dial to .
2. Use the **TIME/WEIGHT** knob to input the cooking time (20 mins).
3. Select the desired cooking temperature. (250°C).
4. Press the (**START**)/**+1min** button.

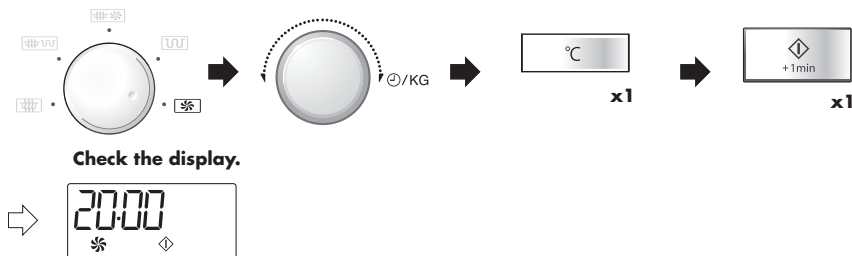


NOTES:

1. After cooking and opening the door, the display may show “NOW COOLING”.
2. To change the convection temperature, press the **CONVECTION** button until the desired temperature appears on the display.
3. You may detect smoke or a burning smell when using convection for the first time. This is normal and is not a sign that the oven is out of order. (Please see Heating Without Food on page GB-12).

WARNING: The oven cavity, door, outer cabinet, accessories and dishes will become very hot, always use thick oven gloves when removing the food or turntable from the oven to prevent burns.

SPECIAL NOTES FOR RK-T11-A (SQUARE SHELF & SQUARE TIN):

1. When using either the square shelf or the square tin, we recommend you place it at rail 2. When using both of them, place the square tin at rail 2 and the square shelf at rail 1 as shown in the diagram. Please also refer to the diagram B on page GB-3.
2. When using the square shelf and/or the square tin, leave the turntable in the oven.
3. When using the square shelf or the square tin, rotate the square tin or the container on the square shelf 180° halfway to achieve better results.
4. When using the square shelf follow the notes below to prevent them slipping out:
 - Do not place container with food weighing more than 5 kg on the square shelf.
 - Ensure that the square shelf is in the correct position and does not rattle.
 - When removing the food, pull the square shelf until it is slightly locked, and then remove the food.
5. Some recipes for using the square shelf or the square tin are included in this operation manual. Please refer to pages GB-25-27.
6. To get the best results when following pack instructions for convection, please follow the instructions for “conventional oven”.

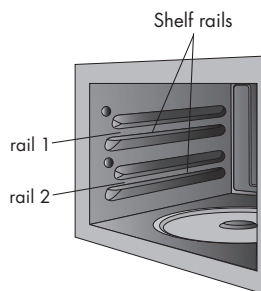

DUAL COOKING



Your oven has 2 **DUAL** cooking modes combining the heat of the convection or grill with the power of the microwave.

To select the **DUAL** cooking mode, rotate the **COOKING MODE** dial to the desired setting, then choose the cooking time. Generally, dual cooking time shortens the total cooking time.

Cooking mode	Cooking method (initial setting)	Microwave Power Range
DUAL CONV.	MICRO 30 P CONV 250°C	10 P - 60 P
DUAL GRILL	MICRO 30 P GRILL	10 P - 80 P


NOTES:

- To adjust the microwave power, press the **MICROWAVE POWER LEVEL** button.
- To adjust the convection temperature, press the **CONVECTION** button until the desired temperature appears on the display.
- For **DUAL CONV.** the oven temperature can be changed from 40°C to 250°C in ten levels.


Example 1:

Suppose you want to cook for 20 minutes on DUAL CONV. using 10 P microwave power and 200°C convection.

1. Select the cooking mode by rotating the **COOKING MODE** dial to
2. Enter the desired cooking time (20 minutes).
3. Press the **MICROWAVE POWER LEVEL** button three times.

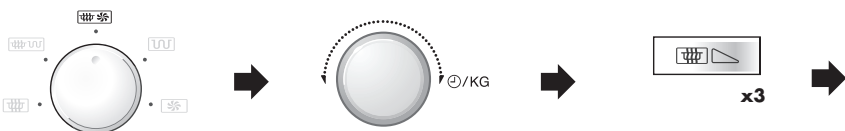

4. Press **CONVECTION** button four times (200°C).
5. Press the (**START**)/+1min button. **Check the display.**







DUAL COOKING

Example 2:

Suppose you want to cook for 20 minutes on DUAL GRILL using 10 P microwave power and GRILL.

1. Select the cooking mode by rotating the **COOKING MODE** dial to .
2. Enter the desired cooking time (20 min.).
3. Press the **MICROWAVE POWER LEVEL** button three times (10 P).

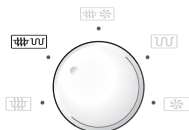

x3



4. Press the  (**START**)/+1min button.



x1



Check the display.



NOTE: After cooking and opening the door, the display may show "NOW COOLING".

WARNINGS:

1. The oven cavity, door, outer cabinet, accessories and dishes will become very hot, use thick oven gloves when removing the food or turntable from the oven to prevent burns.
2. Never use the square shelf and square tin (RK-T11-A) for microwave cooking and dual cooking as this may cause arcing.

OTHER CONVENIENT FUNCTIONS



1. LESS (▼) / MORE (▲) button


The **LESS** (▼) and **MORE** (▲) buttons allow you to easily decrease or increase programmed setting times, (for a less well or more well cooked result), used in automatic operations or cooking time while in operation.

a) Changing the pre-programmed time setting:

(See pages GB-23-24 for menus that use **LESS** and **MORE**).

Example: Suppose you want to cook 1,5 kg Gratin using the **AUTO COOK** button and **LESS** (▼) button.

1. Choose the desired result (less cooked) by pressing the **LESS** (▼) button once.
2. Choose the **AUTO COOK** menu for Gratin by pressing the **AUTO COOK** button.
3. Enter the amount (1,5 kg).



4. Press the **(START)/+1min** button.



The oven will start to cook.
Check the display.

ENGLISH

NOTES:

To cancel **LESS** or **MORE** press the same button again.

To change **MORE** to **LESS** simply press the **LESS** (▼) button.

To change **LESS** to **MORE** simply press the **MORE** (▲) button.

b) Changing the heating time while the oven is operating:

During the manual cooking process, the cooking time can be decreased or increased in 1 minute steps each time the **LESS** (▼) and **MORE** (▲) buttons are pressed.

NOTE: You can use this function for manual cooking only.



OTHER CONVENIENT FUNCTIONS

2. +1min function

The (START)/+1min button allows you to operate the two following functions:


a) 1 minute cooking

You can cook on your desired cooking mode for 1 minute without entering the cooking time.

Example:

Suppose you want to cook for 1 minute on 70 P microwave power.

1. Select the cooking mode by rotating the **COOKING MODE** dial to (Microwave).
2. Change the power by pressing the **MICROWAVE POWER LEVEL** button.
3. Press the (START)/+1min button once to begin cooking.

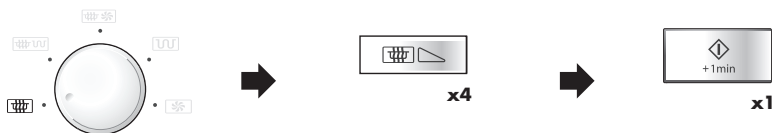

NOTES:

1. You can use this function for manual cooking only.
2. When the **COOKING MODE** dial is on microwave () and you press the (START)/+1min button, the microwave power is always 100 P.
When the **COOKING MODE** dial is on dual (or) and you press the (START)/+1min button, the microwave power is always 30 P.
When the **COOKING MODE** dial is on convection or dual conv. (or) and you press the (START)/+1min button, the convection temperature is always 250°C.
3. To avoid misuse by children the **1 minute cooking** function can be used only within 3 minutes after the preceding operation, i.e. closing the door, pressing the **STOP** button or end of cooking.

b) Extend the cooking time

You can extend the cooking time in multiples of one minute if the (START)/+1min button is pressed while the oven is in operation.

NOTE: You can use this function for manual cooking only.

3. TIMER FUNCTION

You can use the timer for timing where microwave cooking is not involved for example, to time boiled eggs cooked on a conventional hob.

Example:

To set the timer for 5 minutes.

1. Open and Close the door to activate timer function. Press the **TIMER** button once.
2. Rotate the **TIME/WEIGHT** knob until the desired time is displayed. (Ex: 5min)
3. Press the (START)/+1min button.



OTHER CONVENIENT FUNCTIONS



4. TO CHECK SETTINGS WHILE THE OVEN IS OPERATING

You can check the power level and the actual oven temperatures while the oven is in operation ie: when preheating.

You can use this function for manual cooking only.

TO CHECK THE POWER LEVEL:

To check the microwave power level during cooking press the **MICROWAVE POWER LEVEL** button.

The oven continues to count down, although the display shows the power level which you have input.

As long as your finger is pressing the button, the power level will be displayed.



TO CHECK THE CONVECTION TEMPERATURE:

To check the convection temperature which you have input during cooking press the **CONVECTION** button.

When the oven is preheating, you can check the actual oven temperature.

As long as your finger is pressing the button, the convection temperature in °C will be displayed.



5. INFORMATION button

Each button carries useful information. If you wish to get the information, press the **INFORMATION** button before pressing the desired button.


Example:

Suppose you want to get information about AUTO COOK menu number 3, Roast chicken:

1. Choose the **INFORMATION** button function.



2. Press the **AUTO COOK** button 3 times to select Roast Chicken.



NOTE:

1. The information message will be repeated twice, and then the display will show ". 0".
2. If you want to cancel the information press the **STOP** button.





AUTOMATIC OPERATIONS

The **AUTOMATIC OPERATIONS** automatically work out the correct cooking mode and cooking time. You can choose from 2 **AUTO REHEAT** menus, 3 **EXPRESS COOK** menus, 6 **AUTO COOK** menus and 7 **EXPRESS DEFROST** menus.

Warning:

For EXPRESS COOK and AUTO COOK:

The oven cavity, door, outer cabinet, accessories and dishes will become very hot. Use thick oven gloves when removing food or the turntable from the oven to prevent burns.


What you need to know when using this automatic function:

1. The menu you wish to use can be selected by pressing the **AUTO REHEAT**, **AUTO COOK**, **EXPRESS COOK** or **EXPRESS DEFROST** button until the desired menu number appears in the display. (See pages GB-21-24)
2. The weight or quantity of the food can be input by rotating the **TIME/WEIGHT** knob until the desired weight/quantity is displayed.
 - Enter the weight of the food only. Do not include the weight of the container.
 - For food weighing more or less than weights/quantities given in the cooking chart, cook using manual programmes.
3. The programmed cooking times are average times. If you want to alter cooking times pre-programmed in the automatic operations, use the **LESS (▼)** or **MORE (▲)** buttons. See page GB-17 for details. For best results, follow cooking chart instructions.
4. To start cooking press **◇ (START)/+1min** button.



When action is required (e.g. to turn food over) the oven stops and the audible signals sound, the display shows the necessary action. To continue cooking, press the **◇ (START)/+1min** button.

The final temperature will vary according to the initial temperature. Check food is piping hot after cooking. If necessary, you can extend the cooking time and change the power level.

NOTE: Please refer to the menu label for list of AUTOMATIC menus and weight ranges.



1.



Menu Number

2.



TIME/WEIGHT knob

3.



LESS/MORE buttons

4.



◇ (START)/+1min button

AUTOMATIC OPERATIONS



Example: Suppose you want to cook 300 g of Rice using **AUTO COOK**.

1. Press the **AUTO COOK** button once to select Rice.
2. Enter the weight by rotating the **TIME/WEIGHT** knob until the desired weight is displayed.
3. Press the **◇ (START)/+1 min** button to start cooking.



EXPRESS COOK CHART










ENGLISH

MENU NO.	WEIGHT (Increasing Unit) / UTENSILS	PROCEDURE
C-1 Cook Frozen Ready Meals (initial temp -18°C) Stirrable type (e.g. Noodles Bolognese, Chinese Menus.)	0,3 - 1,0 kg* (100 g) Casserole dish & lid * If the manufacturer instructs to add water or oil, please calculate the total amount for the program with additional liquid.	<ul style="list-style-type: none"> • Transfer meal to suitable casserole dish. • Add some liquid or oil if recommended by the manufacturer. • Cover with a lid. • When the audible signals sound, stir and re-cover. • After cooking, stir and let stand for approx. 1-2 minutes.
C-2 Cook Frozen Vegetables (initial temp -18°C) e.g. Brussel sprouts, cauliflower, peas, mixed vegetables, broccoli	0,1 - 0,8 kg (100 g) Casserole dish & lid	<ul style="list-style-type: none"> • Add 1tbsp water per 100 g. (For mushrooms no additional water is necessary). • Cover with a lid. • When the oven stops and the audible signals sound, stir and re-cover. • After cooking, let stand for approx. 1-2 minutes. <p>NOTE: If frozen vegetables are compacted together, cook manually.</p>
C-3 Cook Frozen Gratin (initial temp -18°C) e.g. Frozen lasagne, Potato gratin	0,2 - 0,6 kg (100 g) Gratin dish Low rack	<ul style="list-style-type: none"> • Remove the gratin from original container and place in a suitable gratin dish. • Add 3-4 tbsp water if necessary. • Do not cover. • Place on the low rack. • After cooking, let stand, covered in aluminium foil for approximately 5 minutes.



EXPRESS DEFROST CHART


MENU NO.	WEIGHT (Increasing Unit) / UTENSILS	PROCEDURE
D-1 Defrost  Steaks, Chops (initial temp -18°C)	0,2 - 1,0 kg (100 g) Plate (see note on page GB-23)	<ul style="list-style-type: none"> Place the food on a plate in the centre of the turntable. When the oven stops and the audible signals sound, turn the food over, rearrange and separate. Shield the thin parts and warm spots with aluminium foil. After defrosting, wrap in aluminium foil for 10-20 minutes, until thoroughly defrosted.
D-2 Defrost  Meat Joint (initial temp -18°C)	0,6 - 2,0 kg (100 g) Plate (see note on page GB-23)	<ul style="list-style-type: none"> Place a plate upside down on the turntable and put the meat on it. When the oven stops and the audible signals sound, turn the food over. Shield the defrosted parts with aluminium foil. If audible signals sound, turn the food over and shield again. After defrosting, cover with aluminium foil and stand for 15-30 minutes until thoroughly defrosted.
D-3 Defrost  Minced Meat , mix of beef and pork (initial temp -18°C)	0,2 - 1,0 kg (100 g) Cling film (see note on page GB-23)	<ul style="list-style-type: none"> Cover the turntable with cling film. Place the block of minced meat onto the turntable. When the oven stops and the audible signals sound, turn the food over. Remove the defrosted parts if possible. After defrosting, cover in aluminium foil for 5-10 minutes, until thoroughly defrosted.
D-4 Defrost  Chicken Legs (initial temp -18°C)	0,2 - 1,0 kg (50 g) (see note on page GB-23)	<ul style="list-style-type: none"> Place the food on a plate in the centre of the turntable. When the oven stops and the audible signals sound, turn the food over, rearrange and separate. Shield the thin parts and warm spots with aluminium foil. After defrosting, wrap in aluminium foil for 10-20 minutes, until thoroughly defrosted.
D-5 Defrost  Poultry (initial temp -18°C) Only poultry without giblets is recommended for this programme.	0,9 - 2,0 kg (100 g) (see note on page GB-23)	<ul style="list-style-type: none"> Place a plate upside down on the turntable and put the poultry breast side down on the plate. When the oven stops and the audible signals sound, turn over and shield the thin parts and warm spots with aluminium foil. After defrosting, cover with aluminium foil and stand for 15-30 minutes until thoroughly defrosted. Finally clean the poultry under running water.
D-6 Defrost  Cake (initial temp -18°C)	0,1 - 1,4 kg (100 g) Plate	<ul style="list-style-type: none"> Remove all packaging from the cake. Place on a plate in the centre of the turntable. After defrosting, cut the cake into similar sized pieces. Keep space between each piece and let stand for 15-30 minutes until thoroughly defrosted.
D-7 Defrost  Bread (initial temp -18°C)	0,1 - 1,0 kg (100 g) Plate	<ul style="list-style-type: none"> Distribute on a plate in the centre of the turntable. Only sliced bread is recommended for this programme. When the audible signals sound rearrange, and remove defrosted slices. After defrosting separate all slices and distribute on a large plate. Cover the bread with aluminium foil and let stand for 5-15 minutes until thoroughly defrosted.

EXPRESS DEFROST NOTES



NOTES:

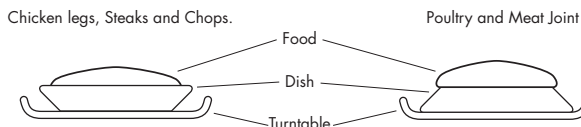

- 1 Steaks, Chops and Chicken legs should be frozen in one layer.
- 2 Minced meat should be frozen in the thin shape.
- 3 After turning over, shield the defrosted portions with small, flat pieces of aluminium foil.
- 4 The poultry and the minced meat should be processed immediately after defrosting.
- 5 For D-1, D-2, D-4 and D-5 arrange the food in the oven as shown:



AUTO REHEAT CHART









ENGLISH

MENU NO.	WEIGHT (Increasing Unit) / UTENSILS	PROCEDURE
AR-1 Beverages (initial temp 20°C)	 1-6 cups (1 cup) (150 ml per cup) Cup	<ul style="list-style-type: none"> Place the beverage off centre on the turntable. After heating, stir and let stand for approx. 1-2 minutes. <p>NOTE: If initial beverage is (5°C) refrigerator temperature, cook with the MORE (▲) button.</p>
AR-2 Soups, Casseroles (initial temp 20°C)	 1-4 cups (1 cup) (200 ml per cup) Cup with plastic wrap	<ul style="list-style-type: none"> Cover with microwave plastic wrap. Place cups off centre on the turntable. After cooking, stir and let stand for approx. 1-2 minutes. <p>NOTE: If initial soup is (5°C) refrigerator temperature, cook with the MORE (▲) button.</p>



AUTO COOK CHART

MENU NO.	WEIGHT (Increasing Unit) / UTENSILS	PROCEDURE								
AC-1 Rice (par-boiled) (initial temp rice 20°C) 	0,1 - 0,3 kg (100 g) Big bowl & lid <table border="1"><thead><tr><th>Rice</th><th>Boiling Water</th></tr></thead><tbody><tr><td>100 g</td><td>250 ml</td></tr><tr><td>200 g</td><td>450 ml</td></tr><tr><td>300 g</td><td>650 ml</td></tr></tbody></table>	Rice	Boiling Water	100 g	250 ml	200 g	450 ml	300 g	650 ml	<ul style="list-style-type: none">Place in a big bowl and add boiling water.Cover with a lid.Place the dish in the centre of the turntable.When the audible signals sound, stir and recover.When the audible signals sound again, stir and recover, replace into the oven and press start.Stand for approx. 10 mins after cooking.
Rice	Boiling Water									
100 g	250 ml									
200 g	450 ml									
300 g	650 ml									
AC-2 French Fried Potato (recommended for conventional ovens) (initial temp -18°C) 	0,2 - 0,4 kg (50 g) Flan Dish High Rack	<ul style="list-style-type: none">Remove the frozen french fried potatoes from the package and place them on a flan dish.Place the dish on the high rack in the oven.When the audible signals sound, turn over.After cooking, remove from the dish and put on a plate for serving. (No standing time is necessary).Add salt to taste. <p>NOTE: For thin type of French fried potatoes, cook with the LESS (▼) button.</p>								
AC-3 Roast Chicken (initial temp 5°C)  Ingredients for 1,2 kg Roast chicken: ½ tsp salt and pepper, 1 tsp sweet paprika, 2 tbsp oil	0,9 - 2,0 kg (100 g) Low Rack	<ul style="list-style-type: none">Mix the ingredients and spread on the chicken.Pierce the skin of the chicken.Put chicken breast side down on the low rack.When audible signals sound, turn the chicken over.After cooking, let the food stand for 3 minutes in the oven.								
AC-4 Roast Pork (initial temp 5°C)  Ingredients for 1 kg rolled lean pork: 1 garlic clove, crushed, 2 tbsp oil, 1 tsp sweet paprika, a little cumin powder, 1 tsp salt	0,6 - 2,0 kg (100 g) Low Rack	<ul style="list-style-type: none">Lean rolled roast pork is recommended.Mix all ingredients and spread them onto the pork.Place the pork on the low rack and cook.When audible signals sound, turn the food over.After cooking, let the food stand wrapped in aluminium foil for approx. 10 minutes.								
AC-5 Gratin (initial temp 20°C) e.g. Courgette pasta gratin, Broccoli-potato-gratin with mushrooms 	0,5 - 2,0 kg (100 g) Shallow, oval or round gratin dish Low Rack	<ul style="list-style-type: none">Prepare the gratin referring to page GB-55 or 57.Place the gratin dish on the low rack.After cooking, let the food stand covered for approx. 5-10 minutes.								
AC-6 Cake (initial temp 20°C) e.g. Carrot cake, Gugelhupf, Apple cake with Calvados 	0,5 - 1,5 kg (100 g) Baking tin, Saucer Low rack	<ul style="list-style-type: none">Prepare the cake referring to page GB-63 or 65.Put a saucer upside down on the low rack and place the baking tin on it.Let the cake stand for approximately 10 minutes after baking.Remove the cake from the baking tin.								



ONION GATEAU

Total Cooking Time: 60-67 minutes

Utensils: Bowl with lid (3 l capacity)
Square tin
greaseproof paper

Ingredients - for the dough

375 g Flour
30 g Yeast
1 Egg
125 ml Milk
½ tsp. Salt
75 g Butter

Ingredients - for the topping

650-700 g Onions
100 g Streaky bacon
30 g Butter
Cheyenne pepper
3 Eggs
200 g Soured cream
½ tsp. Salt

LEEK TART

Total Cooking Time: 27-33 minutes

Utensils: Bowl with lid (3 l capacity)
Square tin
greaseproof paper

Ingredients - for the dough

150 g Wholemeal flour
120 g Rye flour (type 1150)
(you can use normal flour type 405 instead)
4 tsp. Baking powder (12 g)
1 Egg
125 g Low fat yoghurt
1 ½ tbsp. Vegetable oil
½ tsp. Salt

Ingredients - for the topping

450 g Leek, cut into rings
3 tbsp. Water
Salt
1 pinch Curry powder
150 g Soured cream
3 Eggs
2 tbsp. Wholemeal flour
Herb salt
Pepper
1 pinch Nutmeg
1 tsp. Parsley, chopped finely
1 tsp. Chives, chopped into small rings
1 tsp. Dill, chopped finely
100 g Grated Emmenthal cheese

Preparation

This recipe makes approx. 1,7 kg.

1. Prepare from the mentioned ingredients a yeast dough. Cover the dough with heat-resistant film or a damp tea-cloth and allow to rise. Cook for 20 minutes on CONVECTION 40°C.
2. Peel and dice the onions and the streaky bacon. Place the butter, the onions and bacon in a bowl, cover and braise for 8-12 minutes on 100 P. After cooking cool the mixture and blend the eggs, soured cream and salt into the mixture.
3. Preheat the oven to 200°C. Line the square tin with greaseproof paper. Roll out the dough and place inside the tin.
4. Spread the mixture evenly over the pastry case. Let the dough rise again before baking.
5. After preheating, place the square tin on the shelf rail (rail 2) and cook. 32-35 minutes on CONVECTION 200°C.
6. Stop the oven after 18 minutes and rotate the square tin by 180 degrees, then press "Start".

Preparation

This recipe makes approx. 1,3 kg.

1. Place leek and water in a bowl. Cover and cook for 5-8 minutes on 100 P. Drain, add salt and curry powder to taste.
2. Mix the flour and the baking powder. Add the egg, the yoghurt, oil and the salt. Blend together using the kneading hook on a hand-held blender. Preheat the oven to 200°C.
3. Line the square tin with greaseproof paper. Roll out the dough and place inside the tin. Raise the rim by about 1 cm.
4. Stir the soured cream, eggs and flour together. Season with herb salt, pepper, nutmeg and herbs. Mix in the grated cheese.
5. Blend the mixture into the leek and spread it evenly over the pastry case.
6. After preheating, place the square tin on the shelf rail (rail 2) and cook. 22-25 minutes on CONVECTION 200°C.
7. Stop the oven after 18 minutes and rotate the square tin by 180 degrees, then press "Start".



RECIPES FOR USING RK-T1 1-A (SQUARE TIN/SHELF)

PIZZA

Total Cooking Time: 39-42 minutes

Utensils: Square tin
greaseproof paper

Ingredients - for the dough

230 g Flour
20 g Yeast
1 tsp. Sugar
Salt
4 tsps. Oil
135 ml Lukewarm water

Ingredients - for the topping

250 g Tinned tomatoes, mashed
Basil, Oregano, Thyme, Salt, Pepper
250 g Topping as desired e.g. Pepper, Salami,
Mushrooms etc.
100 g Grated cheese

Preparation

This recipe makes approx. 1,0 kg.

1. Dissolve the yeast in lukewarm water.
2. Place the flour in a bowl and make a well in the centre. Add the yeast mixture to the flour and stir in gradually. Add salt and oil. Knead well.
3. Cover the dough with heat-resistant film or a damp tea-cloth and allow it to rise. Cook for 20 minutes on CONVECTION 40°C.
4. Preheat the oven to 220°C. Line the square tin with greaseproof paper. Roll out the dough and place inside the tin.
5. Cover the dough with the tomatoes. Season to taste and cover with the desired topping. Finally spread over the grated cheese.
6. After preheating, place the square tin on the shelf rail (rail 2) and cook for 19-22 minutes on CONVECTION 220°C.
7. Stop the oven after 14 minutes and rotate the square tin by 180 degrees, then press "Start".

TURKEY BREAST IN ONION-CREAM SAUCE

Total Cooking time: 26-28 minutes

Utensils: Square tin

Ingredients

1000 g Turkey breast (9 pieces)
1 bag Onion soup mixture (dried, 1 bag for 750 ml)
500 ml Cream
200 g Mushrooms, sliced
9 slices Processed cheese

Preparation

1. Preheat the oven to 200°C.
2. Cut the turkey breast into similar sized pieces (9) and place on the square tin.
3. Mix together the dried onion soup with the cream (don't add water). Add the sliced mushrooms. Pour over the meat and finally cover with the cheese slices.
4. Place the square tin on the shelf rail (rail 2) in the oven and cook for 26-28 minutes on CONVECTION 200°C.
5. After half of cooking time rotate the square tin by 180 degrees and press "Start" for the remaining cooking time.

LINZER BISCUITS

Total Cooking time: 10-11 minutes

Utensils: Square tin
Square shelf
Bottom of a round baking tin (28 cm)
greaseproof paper

Preparation

1. Prepare the biscuits referring to page GB-66.
2. Preheat the oven to 200°C.
3. Line the square tin and the baking tin with greaseproof paper. Place 20 biscuits on the square tin and 12 pieces on the round baking tin. Place the square tin on the shelf rail (rail 2) and the square shelf with the round baking tin on the shelf rail (rail 1) and bake for 10-11 minutes on CONVECTION 200°C.

Prepare the remaining dough in the same way.

RECIPES FOR USING RK-T11-A (SQUARE TIN/SHELF)



LASAGNE AL FORNO

Total Cooking time: 44-49 minutes

Utensils: Bowl with lid (3l capacity)
Rectangular gratin dish (35x29 cm)
Square shelf

Ingredients

600 g Tinned tomatoes
100 g Onion, finely chopped
100 g Ham, finely cubed
1 Clove of garlic, crushed
500 g Minced meat (beef)
4 tsps. Mashed tomato
Salt, Pepper
Oregano, Thyme, Basil
450 g Cream (crème fraîche)
300 ml Milk
100 g Grated Parmesan cheese
3 tsp. Mixed chopped herbs
2 tsp. Olive oil
Salt, Pepper, Nutmeg
1 tsp. Vegetable oil to grease gratin dish
250 g Lasagne verde
2 tbsp. Grated Parmesan cheese
1 tbsp. Butter

Preparation

1. Cut the tomatoes into slices, mix with the ham and onion cubes, garlic, minced meat and mashed tomato. Season and cook with the lid on for 12-14 minutes on MICROWAVE 100 P. Stir after half of cooking time.
2. Mix the cream with the milk, Parmesan cheese, herbs, oil and spices.
3. Preheat the oven to 230°C.
4. Grease the gratin dish and cover the bottom of the dish with about 1/3 of the pasta. Put half of the minced meat mixture on the pasta and pour on some sauce. Put an additional 1/3 of the pasta on top followed by another layer of the minced meat mixture and some sauce, finishing with the remaining pasta on top. Finally, cover the pasta with lots of sauce and sprinkle with Parmesan cheese. Place butterflakes on top and cook on the square shelf on the shelf rail (rail 2) for 32-35 minutes on CONVECTION 230°C.

After cooking, let the lasagne stand for approx. 5-10 minutes.

GYPSY'S ARM ROLL

Total Cooking time: 22-24 minutes

Utensils: Square tin
greaseproof paper
Bowl with lid (2 l capacity)

Ingredients - for the dough

4 Eggs
125 g Sugar
125 g Flour
1 tsp. Baking powder (3 g)

Ingredients - for the topping

250 ml Milk
1 Stick of cinnamon
The peel of a lemon
75 g Sugar
2 tbsps. Starch-flour (20 g)
2 Egg yolks
2 tbsps. Icing sugar (20 g)

Preparation

1. Cream the eggs and sugar using the hand-held blender, until it is frothy with air bubbles. Mix the flour and baking powder and sift over the egg and sugar mixture, then fold in carefully. Preheat the oven to 180°C.
2. Line the square tin with greaseproof paper, fill with the cake mixture and bake on the shelf rail (rail 2) for 18-20 minutes on CONVECTION 180°C. After half of cooking time rotate the square tin by 180 degrees and press "Start" for the remaining cooking time.
3. Turn out the cake onto a damp tea-cloth onto which you have sprinkled sugar. Carefully remove the greaseproof paper and immediately roll the cake up using the tea-cloth to assist you.
4. Place 200 ml of the milk with the cinnamon stick, lemon peel and sugar into the bowl, cover and heat for about 2 minutes on MICROWAVE 100 P.
5. Mix the rest of the milk with the starch-flour and the egg yolk. Take the lemon and cinnamon out of the 200 ml of milk, and stir in the starch-flour mixture. Cover and cook. Stir half-way through and at the end of cooking. Cook for 2 minutes on MICROWAVE 100 P.
6. Unroll the cake, brush on the cream mixture and then carefully roll it up again. Dust with icing sugar.

NOTE: When using the square shelf or the square tin, rotate the square tin or the container on the square shelf 180° halfway to achieve better results.



CARE AND CLEANING

CAUTION: DO NOT USE COMMERCIAL OVEN CLEANERS, STEAM CLEANERS, ABRASIVE, HARSH CLEANERS, ANY THAT CONTAIN SODIUM HYDROXIDE OR SCOURING PADS ON ANY PART OF YOUR MICROWAVE OVEN.

Before cleaning, make sure the oven cavity, door, oven cabinet and accessories are completely cool.

CLEAN THE OVEN AT REGULAR INTERVALS AND REMOVE ANY FOOD DEPOSITS - Keep the oven clean, or the oven could lead to a deterioration of the surface. This could adversely affect the life of the appliance and possibly result in a hazardous situation.

Oven exterior

The outside of your oven can be cleaned easily with mild soap and water. Make sure the soap is wiped off with a moist cloth, and dry the exterior with a soft towel.

Oven controls

Open the door before cleaning to de-activate the oven controls. Care should be taken when cleaning the oven control. Using a cloth dampened with water only, gently wipe the panel until it becomes clean. Avoid using excessive amounts of water. Do not use any sort of chemical or abrasive cleaner.

Oven Interior


1. For cleaning, wipe any splatters or spills with a soft damp cloth or sponge after each use while the oven is still warm. For heavier spills, use a mild soap and wipe several times with a damp cloth until all residues are removed. Built-up splashes may overheat and begin to smoke or catch fire, and cause arcing. Do not remove the waveguide cover.
2. Make sure that mild soap or water does not penetrate the small vents in the walls which may cause damage to the oven.
3. Do not use spray type cleaners on the oven interior.
4. Heat up your oven regularly by using the convection and grill, refer to "Heating without food" on page GB-12. Remaining food or fat splashed can cause smoke or bad smell.

Accessories

The accessories should be washed in a mild washing up liquid solution and dried. They are dishwasher safe.

SPECIAL NOTE for TURNTABLE SUPPORT

After cooking, always clean the turntable support, especially around the rollers. These must be free from food splashes and grease. Built-up splashes or grease may overheat and cause arcing, begin to smoke or catch fire.



Door

To remove all trace of dirt, regularly clean both sides of the door, the door seals and adjacent parts with a soft, damp cloth. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

NOTE: Keep the waveguide cover and accessories clean at all times. If you leave grease or fat in the cavity or accessories, it may overheat, cause arcing, smoke or even catch fire when next using the oven.



PLEASE CHECK THE FOLLOWING BEFORE CALLING FOR SERVICE.

1. Power Supply
Check the power plug is properly connected to a suitable wall outlet.
Check the line fuse/circuit breaker is functioning properly.
2. When the door is opened, does the oven lamp light? YES _____ NO _____
3. Place a cup of water (approx. 150 ml) in the oven and close the door securely.
Set the cooking mode to microwave cooking mode.
Programme the oven for one minute on 100 P power and start the oven.
Does the oven lamp light? YES _____ NO _____
Does the turntable rotate? YES _____ NO _____
NOTE: The turntable turns in either direction.
Does the ventilation work? YES _____ NO _____
(Place your hand over the ventilation openings and check for air flow.)
After 1 minute does the signal sound? YES _____ NO _____
Does cooking in progress indicator go off? YES _____ NO _____
Is the water warm after the above operation? YES _____ NO _____
4. Take the cup out of the oven and close the door.
Set the **GRILL** cooking mode [Grill] for 3 minutes.
After 3 minutes does the grill heating element become red? YES _____ NO _____
5. Set the **CONVECTION** cooking mode [Convection] for three minutes at 250°C.
Is the inside of the oven hot after 3 minutes? YES _____ NO _____

If you answer "NO" to any of the above questions, call a Service Technician appointed by SHARP and report the results of your check. See inside back cover for details of address.

IMPORTANT: If the display shows nothing even if the power plug is properly connected, the energy save mode should carry on. To release it, open and then close the oven door. See page GB-8.

NOTES:

1. In 100 P, 90 P, 80 P microwave power level, output power will gradually be reduced to avoid overheating.
2. If you cook the food over the standard time with only the same cooking mode, the power of the oven will lower automatically to avoid overheating. (The microwave power level will be reduced and the grill heating elements will begin to light on and off.)

Cooking mode	Standard time
Grill cooking	15 min.
Dual Conv. [Grill] (60 P microwave power)	Micro - 15 min.
Dual Grill [Grill] (80 P microwave power)	Micro - 15 min. Grill - 15 min.

3. After **cooking**, and opening the door, "NOW COOLING" may appear on the display. Also, when you press the **STOP** button and open the door during cooking, the cooling fan will run; you may, therefore, feel air blowing from the ventilation openings.



WHAT ARE MICROWAVES?

Microwaves are electromagnetic waves, similar to radio and TV-waves.

Microwaves are generated by a magnetron inside the microwave oven and cause the water molecules in food to vibrate. This causes friction, which in turn generates heat, which then thaws, heats or cooks your food.

The secret of the shorter cooking time is that microwaves enter your food from all sides. Energy is used optimally. In comparison with a stove, the energy used on a burner reaches the food only through the hot plate and the cooking pot. This "detour" loses a lot of energy.

FEATURES OF MICROWAVES

Microwaves penetrate all non-metal objects, like glass, porcelain, ceramics, plastic, wood or paper. This is why

microwaves do not heat these materials. Cookware is heated only indirectly through the heat of the food.

Foods absorb microwaves and heat up.

Microwaves cannot penetrate material made of metal because metal reflects microwaves. Therefore, objects made of metal are not usually suitable for use in a microwave. There are some exceptions to this rule, where you may use this exact attribute. You might cover certain areas of some foods with aluminum foil during thawing or cooking. This way you can avoid areas that are too warm or too hot or overcooked. Please remember the following notes.



WHAT YOUR NEW COMBI-MICROWAVE OVEN CAN DO

MICROWAVE OPERATION

By using microwaves in your new combi-microwave oven, you can quickly heat individual servings or drinks, or melt butter or chocolate in a very short time. The microwave is also exceptionally well suited for thawing foods. In many cases it is beneficial to combine microwaves with hot air or the grill.

This enables you to cook and brown your foods in a short time. Compared to conventional roasting, the cooking time is usually much shorter.

COMBI OPERATION (MICROWAVE WITH HOT AIR OR GRILL)

By joining two different modes of operation, the benefits of your microwave oven will improve functionality.

You may choose between

- Microwave + Hot air (ideal for roasts, poultry, casseroles, pizza, bread and cakes) and
- Microwave + Grill (ideal for quick-fried, roasts, poultry, chicken drum sticks, shish kabobs, cheese toast and "au gratin").

By using the combi operation you can cook and brown foods simultaneously.

One benefit is that the hot air or the heat of the grill element will quickly seal the pores of the food's outer surface. Microwaves ensure a short cooking time. The food will stay moist on the inside and be crunchy brown on the outside.

HOT AIR OPERATION

You can also use hot air without the microwaves. The result will be just like in a conventional hot air stove. Circulating air quickly heats the outer surfaces of your food. Meat, for example, will stay moist and your food will not dry out.

This sealing process ensures that your foods will stay tasty and cook faster than regular stoves with top and bottom heating elements.

GRILL OPERATION

Your new microwave oven is equipped with a quartz grill located on the ceiling of the cooking chamber. Just like any conventional grill, it can be used without the microwaves. You can quickly brown or grill foods. This is especially suitable for steaks, cutlets or gratinating foods.



COOKWARE SUITABLE FOR MICROWAVE OPERATION

GLASS AND GLASS-CERAMIC



Heat-resistant glassware is very suitable. You can observe the cooking process from all sides. It cannot contain any metal (e.g. lead crystal) or a metal coating (e.g. gold frame, china blue).



CERAMIC


In general, ceramic is very suitable. Ceramic must be glazed because moisture can penetrate the ceramic if it is unglazed. In a microwave oven, this moisture will heat up and can cause the ceramic to shatter. If

you are not sure whether your cookware is suitable for use in a microwave, please do a suitability test. See Page GB-32.

PORCELAIN

In general, porcelain is very suitable. Be sure that your porcelain does not contain any metal or gold or silver plating.

PLASTIC

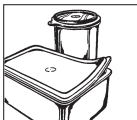


Heat resistant, microwave-safe plastic ware is suitable for thawing, heating and cooking. Please note the manufacturer's instructions.

PAPER DISHWARE

Heat resistant, microwave-safe paper dishware is also suitable. Please note the manufacturer's instructions.

PAPER TOWELS

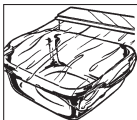

can be used to absorb excess moisture in short heating processes, e.g. for bread or breaded items. Put the paper towel between the food and the turning plate. The surface of your food will stay dry and crunchy. Covering the food with paper towels


will contain splatters from greasy foods.

MICROWAVE FOIL

or heat resistant foil is suitable for covering or wrapping foods. Please note the manufacturer's instructions.

ROASTING BAGS

can be used in the microwave oven. Metal clips are not suited to close such bags, as they might cause the foil to melt. Use kitchen string to close these bags and pierce the bag with a fork. Do not use foils that are not heat resistant, e.g. cling film, in your microwave.

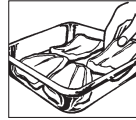

METAL

should not be used, because the microwaves cannot penetrate it and can therefore not reach your foods. There are some exceptions: Narrow strips of aluminum foil can be used to cover parts of food, so that these parts do not thaw or cook too fast (e.g. the wings of a chicken).



Small metal spikes and aluminum bowls (e.g. in ready-to-serve meals) can be used.

They must be small in relation to the food, e.g. the food must fill the aluminum bowl at least $\frac{2}{3}$ to $\frac{3}{4}$. We recommend transferring such foods to dishes suitable for use in a microwave. When using aluminum bowls or other metal dishes, you must keep a minimum distance of about 2.0 cm to the walls of the cooking chamber, otherwise they can be damaged by possible sparks.




DO NOT USE DISHES WITH METAL PLATING, or metal parts, e.g. screws, bands or handles.



SUITABLE COOKWARE

SUITABILITY TEST



If you are not sure whether your dishes are suitable for the use in a microwave, please do the following test: Place the dish into the microwave oven. Place a glass vessel filled with 150 ml of water on top of or next to the dish. Turn the microwave oven on for 1 to 2 minutes at 100P power. If the dish stays cool or at room-temperature, it is suitable for use in the microwave oven. Do not use this test for plastic dishware as it might melt.

COOKWARE SUITABLE FOR MICROWAVE OPERATION

In general, heat resistant microwave dishes, e.g. made of porcelain, ceramic or glass, are also suitable for the combi operation (microwave and hot air, microwave and grill). Please remember that the hot air or the grill will

also heat up your dish. Plastic dishware and foil are not suitable for combi-operation. Do not use paper towels or baking parchment. It could overheat and ignite.

METAL

should not be used. Exceptions are coated backing pans, which allow the outer surface of the food, e.g. bread or cakes, to brown. Please remember the notes for cookware suitable for microwave operation. If sparks develop, put heat resistant insulating material, e.g. small porcelain plate, between the metal object and the grill. If sparks develop, do not use such materials for cooking in COMBI OPERATION

COOKWARE SUITABLE FOR HOT AIR AND GRILL OPERATION

For cooking with hot air or grill without microwave operation, you may use any dish that is suitable for use in a conventional stove or grill.



TIPS AND TECHNIQUES

BEFORE YOU BEGIN...

To make the use of your microwave as easy as possible, please read the following notes and tips: Only turn your microwave on when food is placed inside the cooking chamber.

ENTER THE TIME

Times for thawing, heating and cooking are usually much shorter than in a conventional stove or oven. Please adhere to the times recommended in this cookbook. You should enter a shorter time rather than a longer one. After cooking, test for doneness. It is better to add some time after testing for doneness than to overcook the food.

INITIAL TEMPERATURE

The time required to thaw, heat or cook a food are dependent on the initial temperature of the food. Frozen or refrigerated foods, for example, require a longer heating time than foods at room temperature.

For heating and cooking of foods, we assume normal storage temperature (refrigerator temperature, about

5°C, room temperature about 20°C). We assume a temperature of -18°C for thawing frozen foods.

Popcorn must only be made in special popcorn containers suitable for use in microwave. Adhere exactly to the manufacturer's instructions. Do not use



regular paper containers or glass cookware.

Do not cook **Eggs** in their shell. Pressure will build inside the shell, which could lead to an explosion of the egg. Pierce the egg yellow with a fork prior to cooking.



Do not heat oil or grease used for frying in the microwave. The oil temperature cannot be controlled. The oil could splatter.

Do not heat closed vessels, like jars or cans. The pressure could cause such vessels to explode. (Exception: Canning/Preserves).

**ALL STATED TIMES...**

are guidelines, which vary depending on initial temperature, weight and consistency (water or oil content, etc.) of the foods.

SALT, SPICES AND HERBS

Foods cooked in the microwave retain their flavor better than foods cooked by conventional methods. Use salt sparingly and salt your foods only after cooking. Salt will retain fluid and dry out the surface. Herbs and spices can be used as usual.

TEST FOR DONENESS:

Foods can be tested for doneness just like when used with conventional methods:

- Food thermometer: After cooking or heating, every food has a certain interior temperature. This temperature can be measured with a food thermometer.
- Fork: Fish can be tested with a fork. If the fish meat is no longer translucent and easily detaches from the fish bones, the meat is done. If it is overdone, it is dry and tough.
- Wood picks: Cake and bread can be tested for doneness by using a wooden pick. Insert the wood stick and pull it out. If it remains clean and dry, the food is done.

DETERMINING COOKING TIME WITH A FOOD THERMOMETER

When food is cooked, every drink and every food has a certain interior temperature, which indicates that the food is done and the result will be good. You can measure this interior temperature with a food thermometer. The most important temperatures are listed in the temperature table.

TABLE: DETERMINING COOKING TIME WITH A FOOD THERMOMETER

Drink/Food	Interior temperature after cooking time is completed	Interior temperature 10 to 15 minutes of standing time
Heat drinks (Coffee, Water, Tea, etc.)	65-75°C	
Heat milk	75-80°C	
Heat soups	75-80°C	
Heat stews	75-80°C	
Poultry	80-85°C	85-90°C
Lamb		
Roasted pink	70°C	70-75°C
Well-done	75-80°C	80-85°C
Roast beef		
Rare	50-55°C	55-60°C
Medium	60-65°C	65-70°C
Well-done	75-80°C	80-85°C
Pork and veal	80-85°C	80-85°C

ADDING WATER

Vegetables and other foods with high water content can be cooked in their own fluid or with very little additional water. Many vitamins and minerals will remain in the food.

FOODS WITH SKIN OR SHELL

like sausage, chicken, chicken drum sticks, potatoes, tomatoes, apples, egg yolk or similar should be pierced with a fork or a wooden pick.

Steam can release without shattering the skin or shell.

GREASY FOODS

Marbled meat and outer, fatty parts cook faster than lean meat. Cover such parts with aluminum foil or place them with the fatty side down.



TIPS AND TECHNIQUES

BLANCH VEGETABLES

Vegetables should be blanched prior to freezing. This retains the quality and aroma of the food. Process: Wash and cut the vegetable. Put 250 g vegetables and 275 ml water into a bowl, cover and heat for 3-5 minutes. Put blanched foods immediately into ice water to stop the foods from cooking and allow to drip dry. Seal the blanched vegetables in an airtight container and freeze.

PRESERVING FRUIT AND VEGETABLES



Preserving fruits and vegetables using your microwave is quick and easy. Special jars, sealing rings and clamps suitable for microwave use are available. The manufacturers will supply detailed user instructions.


SMALL AND LARGE AMOUNTS

The microwave times are dependent on the amount of food you thaw, heat or cook. This means that small portions will be done faster than large ones. A basic rule is:

DOUBLE THE AMOUNT = ALMOST DOUBLE THE TIME
HALF THE AMOUNT = HALF THE TIME

HIGH AND FLAT CONTAINERS

Both containers will have the same capacity, but cooking will take longer in the high container than in the flat one. We recommend that you use flat containers with a large surface whenever possible. Use high containers only for foods that might boil over, e.g. noodles, rice, milk, etc.




ROUND AND OVAL CONTAINERS

Foods in round or oval containers cook more evenly than foods in square containers, because the microwave energy concentrates in corners. The food located in the corner will overcook.

COVERS


Covering your food will help retain moisture and shorten the cooking time. Use a lid, microwave foil



or a cover cap. Foods that should develop a crust, e.g. roast or chicken, should not be covered. Follow this rule: If it should be covered when using a conventional stove, it should be covered in the microwave. If it is cooked uncovered

on a conventional stove, it should also be cooked uncovered in the microwave.

IRREGULAR SHAPED FOODS

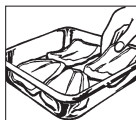

should be placed with the thicker or more compact side to the outside. Vegetables (e.g. Broccoli) should be placed with the stems toward the outside. Thicker parts will require a longer cooking time and will receive more microwave energy when

placed on the outside. The food will be cooked more evenly.

STIRRING

Foods must be stirred, because microwaves reach the outer areas first. Stirring will even the temperature and the food will be more evenly heated.



ARRANGEMENT

Several individual portions, e.g. pudding molds, cups or potatoes, should be placed in a ring-shape on the turntable. Leave some space between portions, so that the microwave energy will penetrate the food from all sides.

TURNING

Medium size parts, like mincemeat and steaks, should be turned over once during the cooking process to shorten the cooking time. Large pieces, like roast and chicken, should be turned over because the topside will receive more microwave energy than the bottom side, it could dry out if it is not turned.

STANDING TIME

Allowing standing time is one of the most important rules of microwave cooking. Almost all foods thawed, heated or cooked in the microwave require a short or longer standing time, which allows the equalization of temperature. Fluids then can evenly flow through the food.



HEATING



- Ready-to-eat meals in aluminum containers should be removed from the container and heated on a plate or a bowl.
- Foods should be covered with microwave foil, plates or cover caps (sold in stores) to prevent the surface from drying out. Drinks should not be covered.
- Remove the lid of tightly closed containers. When cooking fluids like water, coffee, tea or milk, insert a glass stick into the container.
- If possible, stir larger amounts occasionally to even the temperature.
- All times are listed for foods at a room temperature of 20°C. The heating time will increase slightly for foods at refrigerator temperatures.
- Allow foods to stand for 1-2 minutes after heating to allow the temperature to even out throughout the food (standing time).
- All times are guidelines and can vary depending on initial temperature, weight, water content, fat content and the desired final state of the food.

THAWING



ENGLISH

The microwave is ideal for thawing foods. Time required for thawing is usually much shorter than when thawing foods with conventional methods. Some tips.

Remove the frozen food from its wrapping and put it on a plate.

WRAPPING AND CONTAINERS

Wrappings and containers suitable for use in microwave and also freezing (up to about -40°C) and heat resistant (up to about 220°C) are very appropriate for thawing and heating foods. You can use such material for thawing, heating and cooking without having to transfer the food to other containers.


COVERS



Thinner parts should be covered with aluminum foil during thawing. Thawed or warm parts should also be covered with aluminum foil. This prevents that thin parts overheat while thick parts are still frozen.

THE MICROWAVE POWER...

should be set lower rather than higher. This helps you achieve even thawing. If the microwave power is too high, the food surface will be cooked while the interior of the food is still frozen.

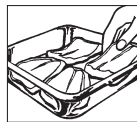

TURNING/STIRRING

Almost all foods must be turned or stirred once. Parts sticking to each other should be separated as soon as possible and rearranged.

SMALLER AMOUNTS...

will thaw more evenly and quicker than large amounts. We recommend that you freeze your food in small portions. You can quickly and easily create a whole menu.

DELICATE FOODS,

like tortes, cream, cheese and bread should not be completely thawed. Only the outer surface should be thawed, the rest of the food should thaw at room temperature. This will avoid outer surfaces overheating while inner parts are still frozen.

STANDING TIME...

after thawing food is very important, because the thawing process is finished during this time. In the thawing table you can find standing times for various foods. Thick, compact foods will require a longer standing time than flat or porous foods. If the food is not sufficiently thawed, you can keep thawing it in the microwave or extend the standing time correspondingly. After standing time, foods should be processed as soon as possible and not refrozen.



THAWING AND COOKING

In a microwave oven, frozen meals can be thawed and cooked in one process. The table will show you some examples. (See Page GB-38.)

Also remember the general notes on “Heating” and “Thawing” of foods.

To prepare commercially available frozen meals, please follow the manufacturers instructions as indicated on the package. Usually, the exact cooking times and notes for the preparation in a microwave are listed.



COOKING OF MEAT, FISH AND POULTRY

- When shopping, make sure that all pieces are as even as possible. This will ensure a good cooking result.
- Thoroughly wash meat, fish and poultry in cold, running water and dry with a paper towel prior to preparation. Process as usual.
- Beef should be well hung and with few tendons.
- The cooking result can vary even with similar size meat pieces. This is, in part, due to the type of food, various fat and water content and also the initial temperature.
- Larger meat, fish and poultry pieces should be turned once during cooking to ensure more even cooking on all sides.
- After cooking, cover roasts with aluminum foil and let it stand for about 10 minutes (standing time). The roast will continue to cook during this time, i.e. fluid will be evenly distributed, so that less moisture is lost when cutting.



COOKING FRESH VEGETABLES

- When shopping, make sure that all pieces are as even as possible. This is very important if you'd like to cook the vegetables in one piece (e.g. potatoes).
- Wash and clean vegetables prior to preparation, then measure and cut the amount required for your recipe.
- Season the food like usual, but salt your foods only after cooking.
- Add about 5 tablespoons of water for each 500 g of vegetables. Fibrous vegetables will require more water.
- Vegetables are usually cooked in a covered bowl. Vegetables with a high water content, e.g. onions or potatoes, can be cooked in a microwave foil without any additional water.
- Stir or turn the vegetable once while cooking.
- After cooking, allow the vegetables to stand for about 2 minutes, so that the temperature will distribute evenly (standing time).
- All times are guidelines and can vary depending on initial temperature, weight and the consistency of the vegetable. The cooking time will be shorter the fresher the vegetables are.



LEGEND



MICROWAVE OPERATION

Your microwave has 11 power levels. You should select the microwave power according to the guidelines in this cookbook. In general, follow the recommendations on page GB-10.



GRILL OPERATION

Multifunctional use for gratinating or grilled fish, meat and poultry.



HOT AIR OPERATION (CONVECTION)

You may select between 10 Hot Air levels (40°C - 250°C).



COMBI OPERATION (DUAL CONV.)

MICROWAVE AND HOT AIR

This type of operation allows you to combine the various microwave power levels 10P to 60P with a desired Hot Air temperature (40°C - 250°C).



COMBI OPERATION (DUAL GRILL)

MICROWAVE AND GRILL

This type of operation allows you to combine the various microwave power levels 10P to 80P with the Grill.

ABBREVIATIONS

P = Percentage

tbsp = tablespoon

tsp = teaspoon

Cup = cupful

min = minutes

kg = kilogram

g = gram

l = Liter

ml = milliliter

cm = centimeter

dm. = diameter

pck = package

sec = seconds

DF = deep frozen

DFC = dry fat content

approx. = approximate



TABLES

TABLE: THAWING WITH MICROWAVE

Foods	Amount -g-	Power level	Thawing time -Min-	Process notes	Standing -Min-
Sausages	300	30 P	3½-4	Place next to each other, turn after ½ of the thawing time	5-10
Deli meat	200	30 P	2-4	Remove the outermost slices after 1 minute each	5
Whole fish	700	30 P	9-11	Turn after ½ of the thawing time	30-60
Crab	300	30 P	4-6	Turn after ½ of thawing time, remove thawed parts	5
Fish filet	400	30 P	5-7	Turn after ½ of the thawing time	5-10
Whole bread	1000	30 P	8-10	Turn after ½ of the thawing time	15
Cream	200	30 P	2+2	Remove lid: after 2 min. of thawing time put into a bowl and thaw further	5-10
Butter	250	30 P	2-3	Thaw only for short time	15
Fruit such as strawberries, raspberries, cherries, plums	250	30 P	2-4	Place evenly next to each other, turn after ½ of the thawing time	5

To thaw poultry, chicken drumsticks, cutlets, steaks, roast, mincemeat, sliced bread and cream tortes, please use the automatic thawing program.

TABLE: THAWING AND COOKING

Foods	Amount -g-	Setting	Power level	Cooking -Min-	Water addition	Process notes	Standing -Min-
Fish filet e.g. Filet "Bordelaise"	400		100 P	10-12	-	Remove from package, put into a casserole dish and cover with microwave foil	1-2
Trout, 1 piece	250-300		100 P	5-6	-	Cover	1-2
Single serving plate	400		100 P	6-8	-	Cover, stir after 5 minutes	2
Vegetables	300		100 P	6½-8	5 tbsp	Cover, stir after ½ of cooking time	2
Vegetables	450		100 P	8-10	5 tbsp	Cover, stir after ½ of cooking time	2

TABLE: COOKING FRESH VEGETABLES

Foods	Amount -g-	Power level	Thawing time -Min-	Process notes	Water amount -Tbsp-
Vegetables (e.g. Cauliflower, leek, fennel, broccoli, bell peppers, zucchini)	300	100 P	5-7	Prepare as usual, cover and stir occasionally	5
	500	100 P	8-10		5



TABLE: HEATING DRINKS AND FOODS

Drink/Foods	Amount -g/ml-	Power level	Time -Min-	Process notes
Drink 1 cup	150	100 P	½-1	Do not cover
Single serving plate (Vegetables, meat and side dishes)	400	100 P	2½-4	Drip water onto sauce, cover, stir occasionally
Stew, soup	200	100 P	1-2	Cover, stir after heating
Side dishes	200	100 P	approx. 1½	Drip water onto food, cover, stir occasionally
Meat, 1 slice ¹	200	100 P	approx. 2	Drip water onto food, cover
Sausages, 2 pieces	180	40 P	2-2½	Pierce the skin several times
Baby food, 1 jar	190	40 P	½-1	Remove lid, stir well after heating and test the temperature
Melt margarine or Butter ¹	50	100 P	approx. ½	Cover
Melt chocolate	100	40 P	approx. 3	Stir occasionally
Dissolve 6 sheets of gelatin	10	40 P	½-1	Soak in water, squeeze dry and put into a soup bowl. Stir occasionally

¹ at refrigerator temperature.

TABLE: ROASTING MEAT AND POULTRY

Meat and poultry	Amount -g-	Setting	Power level/ temp	Cooking -Min-	Process notes	Standing -Min-
Roasts (pork, veal, lamb)	500		50 P/160°C	8-10 (*)	Season as desired, put onto the lowest grill, turn after (*)	5
			50 P/160°C	8-10		
	1000		50 P/130°C	17-20 (*)		10
			50 P/130°C	14-16		
	1500		50 P/130°C	28-32 (*)		10
			50 P/130°C	23-27		
Roast beef medium	1000		30 P/200°C	17-19 (*)	Season as desired, put onto the lowest grill, position with fatty side down turn after (*)	10
			30 P/200°C	6-8		
	1500		30 P/200°C	25-27 (*)		10
Meat loaf	1000		30 P/200°C	13-15		
			60 P/230°C	21-23		
Chicken	1200		30 P/220°C	17-20 (*)	Prepare meat for meatloaf (half pork/half beef), lay flat into casserole dish, and cook on the lowest grill rack.	
			30 P/220°C	17-20		
Chicken drumsticks	600		30 P/220°C	17-20	Pierce the chicken skin, season with oil, paprika, salt and pepper, position with breast side down onto the lowest grill rack, turn after (*)	3
			10 P/230°C	11-13 (*)		
			10 P/230°C	9-11	Pierce the chicken skin, season with oil, paprika, salt and pepper, position with skin side down onto the lowest grill rack, turn after (*)	
			10 P/230°C	9-11		



TABLES

TABLE: GRILLING, GRATINATING






















Dish	Amount -g-	Setting	Power level	Cooking -Min-	Process notes	Standing -Min-
Steaks 2 pieces	400	 		7-9 (*) 4-6	Position onto the highest grill rack, turn after (*), season after grilling is done	2
Lamb cutlets 2 pieces	300	 		9-12 6-8	Position onto the highest grill rack, turn after (*), season after grilling is done	2
Grill sausages	400	 		7-9 (*) 5-6	Position onto the highest grill rack, turn after (*)	2
Gratinating				10-14	Position casserole dish onto the lowest grill rack	10
Cheese toast 4 pieces		 	50 P	½ 5-7	Toast and butter the bread, add one slice of ham, one slice of pineapple and one slice of melting cheese. Place slice of cheese in the center and position onto the highest grill rack	

TABLE: HEATING FROZEN SNACKS

Frozen snacks	Amount -g-	Setting	Power level/ temp	Cooking -Min-	Process notes
French fries (normal)	250	  	60 P	4-5 2-4 (*) 3-4	Place into a flat casserole dish, position onto the highest grill rack, turn after (*)
(thin)	250	  	60 P	3-4 3-5 (*) 3-4	
"Stone oven" pizza (thin base, pre-baked)	300-400	 	20 P/220°C	10-12	Preheat to 220°C Position onto the highest grill rack
American pizza (thick base, pre-baked)	400-500	 	30 P/220°C	9-11	Preheat to 220°C Position onto the highest grill rack
Baguette sandwiches	250	 	20 P/230°C	8-10 approx.2	Position onto the highest grill rack



MODIFICATION OF CONVENTIONAL RECIPES

● For microwave operation

If you'd like to modify your favorite recipes to use a microwave, you should note the following:

Shorten cooking time by $\frac{1}{3}$ or $\frac{1}{2}$. Use the recipes in this cookbook as a guideline.

Foods with a high water content, like fish, meat, poultry, vegetables, fruit, stews and soups, can easily be prepared in the microwave. When cooking foods with a low water content, like plate servings, the food surface should be moistened with water prior to cooking or heating.

When adding fluids to raw foods that should be steamed, reduce the amount of fluid listed in the original recipe to $\frac{2}{3}$. If necessary, add more fluid during cooking.

The addition of cooking fat can be greatly reduced. A small amount of butter, margarine or oil is sufficient to add flavor to your foods. The microwave is therefore great for preparing low-fat foods for dieting.

● For combi operation

In general, the same rules apply for microwave operation. Additionally, please remember the following notes.

1. Use the recipes in this cookbook as a guideline when selecting the Hot Air temperature. The temperature should not be too high even for long cooking times, since the foods will brown too much on the outside while still being raw on the inside.
2. The microwave power should correspond to the type of food and the cooking time. Use the recipes in this cookbook as a guideline.
3. If you prepare foods using the combi microwave-grill operation, you should observe the following: For large, big foods, e.g. pork roast, the microwave time is correspondingly longer than for small, flat foods. It is exactly opposite when using the grill. The closer the food is located to the grill, the faster it will brown. This means that when you prepare large pieces of roast in the combi operation, the grill time might be shorter than for smaller pieces of roast.
4. For cooking in combi operation or with hot air only, the lowest grill rack is usually used. Use the highest grill rack for grilling, to achieve a faster and more even browning (exception: large, big foods and casseroles should be grilled on the lowest grill rack).

USING THESE RECIPES

- All recipes in this cookbook will make – unless otherwise noted – 4 portions.
- Recommendations for suitable dishware and the total cooking time can be found at the beginning of each recipe.
- If the use of the lowest or highest rack is indicated in the recipe, please use exclusively the round racks.

- Usually the recipes will result in ready-to-eat amounts of food, unless another amount is specifically noted.
- All eggs listed in these recipes have a weight of about 55 g (weight class M)



Appetizers and Snacks

Germany

Mushroom on toast

"Champignon toast"

Total cooking time: approx. 3-4 minutes

Utensils: High rack

Ingredients

2	tbsps	Butter or margarine
2		Garlic cloves, crushed
4		Bread slices
75	g	Mushrooms, in slices, salt, pepper
75	g	Shredded cheese
4	tsp	Parsley, finely chopped, paprika

Preparation

1. Mix butter, garlic and salt.
2. Toast the bread slices and butter with garlic-butter mixture. Put mushrooms on top and season with salt and pepper.
3. Mix the cheese and parsley and add on top of the mushrooms. Season with paprika.
4. Place the toasts onto the high rack and bake.

3-4 Min. 30 P



Switzerland

Swiss Cheese Pie

"Schweizer Käsewähe"

Total cooking time: approx. 32-36 minutes

Utensils: Round baking or quiche dish
(dm. approx. 30-32 cm)

Ingredients

250	g	Flour
120	g	Butter or margarine
80	ml	Water
1	tsp	Salt
1	tsp	Butter or margarine to grease the pan
1		Onion (50 g), finely chopped
170	g	Shredded Emmentaler cheese
170	g	Shredded Gruyere cheese
4	tbsps	Flour (40g)
3		Eggs
270	ml	Milk
120	g	Yoghurt, low fat
1	tsp	Salt
		Nutmeg

Preparation

1. Mix flour, butter, water and salt. Roll dough onto a floured surface. Grease the pan, put the dough evenly into the pan and pull up around the edge. Pierce with fork several times.
2. Position the pan onto the low rack, pre-bake the dough.

12-14 Min. 40 P/230°C

3. Mix onion with cheese and flour. Mix eggs, milk, yoghurt and spices. Add the cheese mixture.
4. Evenly distribute the filling on the dough. Place the pan onto the low rack and bake.

20-22 Min. 30 P/230°C



Italy

Pizza Artichoke

"Pizza ai carciofi"

Total cooking time: approx. 20-24 minutes

Utensils: Pizza pan (dm. approx. 30 cm)

Ingredients

15	g	Yeast, fresh, or
½	pck.	Dry yeast (4 g)
1	pinch	Sugar
120	ml	lukewarm water
200	g	Flour
½	tsp	Salt
1	tbsp	Olive oil
300	g	Tomatoes from a jar, drip-dried
50	g	Salami, in slices
70	g	Ham, in slices
120	g	Artichoke hearts from a jar
1	tsp	Olive oil to grease the pan.
		Basil, oregano, thyme, salt and pepper
10		Olives
100	g	Shredded Emmentaler cheese

Preparation

1. Dissolve yeast and sugar in lukewarm water.
2. Put flour into a bowl, make a small depression in the center. Add yeast mixture into this depression and slowly stir. Add salt and oil. Thoroughly knead dough.
3. Cover the dough with heat resistant foil or a moist kitchen towel, let rise.

20 Min. 40°C

4. Slice the tomatoes, quarter the salami and ham slices and the artichoke hearts.
5. Grease the pizza pan with oil. Roll out the yeast dough, put into the pizza pan and put tomatoes on top. Season as desired, add all other ingredients. Add olives and top with shredded cheese.
6. Bake the pizza on the low rack in the pre-heated microwave oven.

10-12 Min. 40 P/230°C

10-12 Min. 230°C



Appetizers and Snacks

Austria

Sausages in Crust

"Würstchen im Teigmantel"

Makes 8 servings

Total cooking time: approx. 25-27 minutes

Utensils: Baking pan (dm. approx. 30 cm)
greaseproof paper

Ingredients

8	Small Sausages (each 50 g)
300 g	Puff pastry, frozen
1	Egg Yolk
	Some Water
	Salt
	Cumin

Preparation

1. Pierce the sausage skin several times.
2. Thaw the puff pastry according to package directions, roll out thinly. Cut the dough into 8 squares; roll up one sausage in each square.
3. Thin the egg yolk with a little water. Brush the puff pastry rolls with this mixture, sprinkle with salt and cumin.
4. Cover the baking pan with greaseproof paper, put the dough rolls on top and bake on the low rack in the pre-heated microwave oven.

25-27 Min. 230°C

Spain

Mushrooms with Rosemary

"Champif ones rellenos al romero"

Total cooking time: 11½-16½ minutes

Utensils: Bowl with cover (1 l contents), flat,
round casserole dish
(dm. approx. 26 cm), microwave foil

Ingredients

8	Large mushrooms (about 500 g), whole
2 tbsps	Butter or margarine (20 g)
1	Onion (50 g), finely chopped
50 g	Ham, finely diced,
	Black pepper, ground rosemary,
125 ml	Dry white wine
125 ml	heavy whipping cream
2 tbsps	Flour (20 g)

Preparation

1. Remove stems from mushrooms, finely chop the stems.
2. Add butter to the bowl and distribute evenly on the bottom of the bowl. Add onions, diced ham and mushroom stems, season with pepper and rosemary, cover and cook.

3-5 Min. 100 P

Let cool.

3. In a covered casserole dish, heat 100 ml. Wine and the Heavy whipping cream.

1-2 Min. 100 P

4. Mix the rest of the wine and the flour to make a thin dough, add the hot liquid, cover and cook.
Stir once.

approx. ½ Min. 100 P

5. Fill the mushroom caps with the ham mixture, place into the sauce and bake on the high rack.

7-9 Min. 30 P

After cooking, let the mushrooms stand for about 2 minutes.

France

Quiche with Shrimp

"Quiche aux crevettes"

Total cooking time: approx. 25-30½ minutes

Utensils: round baking or quiche dish
(dm. approx. 26 cm)
Bowl with cover (2 l contents)

Ingredients

100 g	Flour
60 g	Butter or margarine
2 tbsps	Cold water
1 tsp	Butter or margarine to grease the pan
2	Onion (100 g), finely chopped
100 g	Bacon (2 slices), finely diced
100 g	Shelled Shrimp
2 tbsps	Butter or margarine (20 g)
2	Eggs
100 ml	Sour cream
	Salt and pepper
	Nutmeg
1 tbsp	Parsley, chopped

Preparation

1. Mix flour, butter, water and salt, let stand in cool place for 30 minutes.
2. Grease the pan. Roll out the dough and place into the pan, pierce with a fork several times and pre-bake.

4-5 Min. 100 P

3. Distribute the butter evenly in the bowl. Add onions, bacon and shrimps to the bowl. Cover and cook.
Stir once.

3-5 Min. 100 P

Drain fluid after cooling.

4. Mix eggs, sour cream and spices.
5. Mix all other ingredients and distribute on the quiche dough. Place onto the low rack and cook.

15-17 Min. 20 P/230°C

3-3½ Min.

6. Sprinkle parsley on top prior to serving.



Soups

Sweden

Crab soup

"Kräftsoppa"

Total cooking time: approx. 11-15 minutes

Utensils: Bowl with cover (2 l contents)

Ingredients

1	Onion (50 g), finely chopped
50 g	Carrots, in slices
2 tbsps	Butter or margarine (20 g)
500 ml	Meat broth
100 ml	White wine
100 ml	Madeira
200 g	Crabmeat from a jar
½	Bay leaf
3	White pepper corns
	Thyme
3 tbsps	Flour (30 g)
100 ml	heavy whipping cream
1 tbsp	Butter or margarine

Preparation

- Put vegetables and butter or margarine into the bowl, cover and heat.

2-3 Min. 100 P

- Add the meat broth, wine, Madeira, crabmeat and spices to the vegetables. Cover and cook.

7-9 Min. 40 P

- Remove the bay leaf and peppercorns from the soup. Mix the flour with a little bit of cold water and add to the soup. Add the Heavy whipping cream, stir and reheat.

2-3 Min. 100 P

- Stir the soup and let stand for about 5 minutes. Add butter just prior to serving.



Switzerland

Barley soup from the Grisons Canton

"Bündner Gerstensuppe"

Total cooking time: approx. 30-35 minutes

Utensils: Bowl with cover (2 l contents)

Ingredients

2 tbsps	Butter or margarine (20 g)
1	Onion (50 g), finely chopped
1-2	Carrots (130 g), in slices
15 g	Celery, diced
1	Leek (130 g), sliced in rings
3	White cabbage leaves (100 g), sliced
200 g	Veal bones
50 g	Marbled ham, sliced
50 g	Barley seeds
700 ml	Meat broth
	Pepper
4	Wiener sausages (300 g)

Preparation

- Add butter and onions to the bowl, cover and steam.

1-2 Min. 100 P

- Put vegetables into the bowl. Add bones, ham slices and barley, fill with meat broth. Season with pepper, cover and cook.

9-11 Min. 100 P

20-22 Min. 40 P

- Cut the sausages into small pieces, add to soup during the last 5 minutes of cooking time.
- After cooking, let the soup stand for about 5 minutes. Remove the bones from the soup.



Netherlands

Mushroomsoup

"Champignonsoep"

Total cooking time: approx. 10-13 minutes

Utensils: Bowl with cover (2 l contents)

Ingredients

200 g	Mushrooms, in slices,
1	Onion (50 g), finely chopped
300 ml	Meat stock
300 ml	Heavy whipping cream
2½ tbsps	Flour (25 g)
2½ tbsps	Butter or margarine (25 g),
	Salt, Pepper
150 g	Cream (Crème Fraiche)

Preparation

- Put vegetables and meat stock into a bowl, cover and heat.

7-9 Min. 100 P

- Puree all ingredients with a blender. Add heavy whipping cream.
- Knead the flour and butter into dough and mix into the mushroom soup until smooth. Season with salt and pepper, cover and continue to cook.

3-4 Min. 100 P

- After cooking stir in crème fraîche, if desired.



Soups

Spain

Potato cream soup

"Crema de patata"

Total cooking time: approx. 16-22 minutes

Utensils: Two bowls with cover (2 l contents)

Ingredients

300 ml	Meat broth
300 g	Celery, diced
1	Onion (50 g), finely chopped
1	Bay leaf
500 ml	Milk
2-3 tbsps	Butter or margarine (20-30 g)
2 tbsps	Flour (20 g), Salt, Pepper
	Nutmeg, powdered
3 tbsps	Cream (Crème Fraiche)

Preparation

1. Add broth, potatoes, onion and bay leaf to a bowl. Cover and cook.

8-10 Min.  100 P

2. Remove the bay leaf; puree all ingredients with a blender.

3. Heat the milk.

3-5 Min.  100 P

4. Mix butter and flour and add to milk.

5. Add potatoes mixture, spices and cream. Cover and cook, stirring occasionally.

5-7 Min.  100 P

France

Onion soup

"Soupe à l'oignon et au fromage"

Total cooking time: approx. 15-19 minutes

Utensils: Bowl with cover (2 l contents)
4 soup bowls (each 200 ml)

Ingredients

1 tbsp	Butter or margarine
2	Onions (100 g), in slices
800 ml	Meat broth
	Salt, pepper
2	Toast slices
4 tbsps	Shredded cheese (40 g)

Preparation

1. Distribute the butter evenly in the bowl. Add onion slices, meat broth and spices, cover and cook.

9-11 Min.  100 P

2. Toast the bread slices, dice them and distribute evenly among the soup bowls. Pour soup over toast cubes, top with shredded cheese.

3. Place the soup bowls onto the high rack and bake.

6-8 Min. 



Meat, Fish and Poultry

Germany

Meat Kebab

"Bunte Fleischspieße"

Total cooking time: approx. 17-20 minutes

Utensils: High rack
Four wooden sticks (approx. 25 cm long)

Ingredients


400 g	escalope of pork
100 g	Bacon
2	Onions (100 g), quartered
4	Tomatoes (250 g), quartered
½	Green bell peppers (100 g) divided into eights
3 tbsps	Oil
4 tps	Paprika
	Salt
1 tsp	Cayenne pepper
1 tsp	Worcester sauce

Preparation

1. Cut the escalope of pork and bacon into 2-3 cm large dices.

2. Alternate meat and vegetables and place onto the four wooden sticks.

3. Mix oil and spices, cover sticks with the oil mixture. Place the kebabs onto the high rack and bake. Turn the kebabs after ⅔ of the cooking time.

17-20 Min.  40 P

4. After cooking, let the sticks stand for about 2 minutes.

Italy

Lamb cutlets with herb butter

"Costolette di agnello al burro verde"

Total cooking time: approx. 22-27 minutes

Utensils: High rack

Ingredients


1-2 tbsps	Parsley, finely chopped
1	Garlic clove, crushed
50 g	Soft butter
2 tbsps	Dry white wine
	Pepper, fresh ground
8	Lamb cutlets (each 100 g)
	Salt

Preparation

1. Mix parsley, garlic and butter. Slowly add wine, season with pepper.

2. Wash cutlets, pat dry, slightly cut with a sharp knife on the thickest part. Put herb butter mixture into this opening. Cover the cutlets with the rest of the herb-butter mixture.

3. Place the cutlets onto the high rack and bake.

14-16 Min.  Turn over.

8-11 Min. 

4. Salt after grilling, let stand for about 2 minutes.



Meat, Fish and Poultry

Spain

Stuffed Ham

"Jamón relleno"

Total cooking time: approx. 13½-17 minutes

Utensils: Bowl with cover (2 l contents)
Flat, oval, casserole dish
(approx. 32 cm long)

Ingredients

150 g Leaf spinach, stems removed
150 g Curd, 20 % D.m.f.c.
50 g Shredded Emmentaler Cheese
Pepper
Paprika
8 Dry yeast (400 g)
125 ml Water
125 ml heavy whipping cream
2 tbsps Flour (20 g)
2 tbsps Butter or margarine (20 g)
1 tsp Butter or margarine to grease the pan

Preparation

1. Finely cut the spinach; mix with curd and cheese, season to taste.
2. Place one tablespoon of filling onto each slice of ham, roll ham up. Secure with a wooden stick.
3. Prepare a béchamel sauce. Add the fluid into the bowl. Cover and cook.

approx. 2 Min. 100 P

4. Mix butter and flour, add to fluid, stir with a wire whisk until smooth. Cover, cook and wait until it solidifies slightly.

approx. ½-1 Min. 100 P

Stir the soup and season to taste.

5. Place the ham rolls into the greased casserole dish, pour the sauce over it, cook on the low rack.

11-14 Min. 60 P

After cooking, let the ham rolls stand for about 2 minutes.

Tip:

You can also use a commercially available béchamel sauce.



Greece

Aubergines stuffed with minced meat

"Melitsánes jemistés mé kimú"

Total cooking time: approx. 18-20 minutes

Utensils: Bowl with cover (1 l contents)
Flat, oval casserole dish with cover
(approx. 30 cm long)

Ingredients

2 Aubergines, without stalks (each about 250 g)
Salt
3 Tomatoes (approx. 200 g)
1 tsp Olive oil to grease the pan
2 Onion (100 g), finely chopped
4 Mild, green peppers
200 g Mince meat (beef or lamb)
2 Garlic clove, crushed
2 tbsps Parsley, chopped
Salt
Pepper
Rose paprika
60 g Greek feta cheese, diced
1 tsp Olive oil to grease the pan

Preparation

1. Cut the aubergines in half lengthwise. Remove the flesh with a teaspoon, leaving an edge about 1 cm thick. Season the aubergine with salt. Dice the flesh.
2. Remove skin from two tomatoes, remove stem remnants, dice.
3. Grease the bottom of the bowl with olive oil, add onions, cover and steam.
4. Remove stems of peppers, core and slice into rings. Set aside ⅓ for garnish. Mix mince meat, aubergine, onion, tomato dice, pepper rings, crushed garlic and parsley.
5. Pat the aubergines dry. Fill half of the mince meat mixture into the aubergine, cover with feta cheese, add the rest of the filling.
6. Garnish the aubergine halves with the tomato slices and pepper rings, place into the greased casserole dish, put onto the low rack and bake.

16-18 Min. 60 P

After cooking, let the aubergines stand for about 2 minutes.

Tip:

You can also use zucchini instead of aubergine.



Meat, Fish and Poultry

China

Pork with cashew nuts

"Guangzhou"

Total cooking time: approx. 16-19 minutes

Utensils: Quiche pan
Bowl with cover (2 l contents)

Ingredients


- 2 Dried black mushrooms
- 1 tbsp Rice wine (sake)
- 1 tbsp Oil
- 1 tsp Salt
- 1 tbsp Sugar
- 1 tbsp Olive oil to grease the quiche pan
- 300 g Pork fillet, diced
- 100 g Cashew nuts
- 1 Shallot onion (20 g), finely chopped
- 2 Garlic clove, crushed
- 50 g Red bell pepper, diced
- 50 g Green bell pepper, diced
- 1 tbsp Corn starch
- 200 ml Water
- 1 tsp Soy sauce
- Salt, sugar, white pepper

Preparation


1. As per package directions, pour boiling water over the mushrooms and soak for at least 30 minutes.
2. Mix rice wine with oil, salt and sugar. Marinate meat cubes for 20 minutes.
3. Cover the quiche pan with oil. Distribute meat evenly in quiche pan. Position onto the high rack and bake. Turn once after about 7 minutes, add cashew nuts.

9-11 Min.  100 P

4. Transfer the meat and cashew nuts into a bowl, add the prepared vegetables, cover and cook.

5-6 Min.  100 P

5. Mix the cornstarch with water, soy sauce and spices, add to the meat-vegetable-mixture and stir. Cover and cook. Stir occasionally and after cooking is finished.

approx. 2 Min.  100 P

Switzerland

Zurich Veal in Cream

"Zürcher Geschnetzeltes"

Total cooking time: approx. 8-13 minutes


Utensils: Bowl with cover (2 l contents)

Ingredients

- 600 g Veal fillet
- 1 tbsp Butter or margarine
- 1 onion (50 g), finely chopped
- 100 ml White wine
- Seasoned gravy thickener, dark, for about ½ l sauce
- 300 ml heavy whipping cream
- 1 tbsp Parsley, chopped

Preparation

1. Cut the fillet into finger thick strips.
2. Distribute the butter evenly in the bowl. Put vegetables and meat into a bowl, cover and heat. Stir once.

6-9 Min.  100 P

3. Add white wine, gravy thickener and heavy whipping cream, stir, cover and cook. Stir once during cooking.

2-4 Min.  100 P

4. Season to taste, stir again and let stand for about 5 minutes. Garnish with parsley and serve.

France

Rabbit with Thyme

"Lapereau au thym"

Total cooking time: approx. 38-43 minutes


Utensils: Casserole with cover (2 l contents)

Ingredients

- 1 Rabbit (1 kg)
- 2 tbsps Butter, soft
- 1 tbsp Butter or margarine to grease the pan
- 100 g Bacon, diced
- 15 Small onion (300 g), whole, peeled
- Salt
- Pepper
- 100 ml Water
- 1 tbsp Fresh thyme, finely chopped
- 150 ml Cream (Crème Fraiche)
- 1 Egg yolk
- Salt, Pepper

Preparation


1. Preheat the microwave oven to 230°C. Wash the rabbit, pat dry and divide into 8 portions. Cover with butter. Place onto the high rack and bake.

21-23 Min.  230°C

2. Grease the casserole pan. Add bacon and onions to the pan. Add meat pieces, season and add water. Cover and cook.

15-18 Min.  100 P

3. Remove meat pieces, keep warm. Add the finely chopped thyme to the casserole dish, carefully fold in the cream.
4. Stir the egg yolk in a cup. Add sauce, spoon by spoon, and stir. Now add the egg yolk to the sauce and stir. Cover and cook.

approx. 2 Min.  60 P

5. Season the sauce, stir and pour over the meat.



Meat, Fish and Poultry

Italy

Veal cutlet with Mozzarella

"Scaloppe alla pizzaiaola"

Total cooking time: approx. 18-22 minutes

Utensils: Flat, square casserole dish with cover
(approx. 25 cm long)

Ingredients

2	Mozzarella cheese (each 150 g)
400 g	Tomatoes without skin, from a jar
4	Veal cutlets (600 g)
20 ml	Olive oil
2	Garlic cloves, in slices
	Pepper, fresh ground
2 tbsps	Capers (20 g)
	Oregano
	Salt

Preparation

1. Cut the mozzarella into slices. Puree the tomatoes with a blender.
2. Wash the cutlets, pat dry and tenderize. Distribute oil and garlic slices in the casserole dish. Add cutlets, pour tomato puree on top of meat. Sprinkle with pepper, capers and oregano, cover and cook.

9-11 Min. 60 P

Turn meat slices.

3. Place several slices of mozzarella on each slice of meat, season with salt, bake on high rack uncovered.

9-11 Min. 50 P

After baking, let stand for about 5 minutes.

Tip:

Serve with spaghetti and fresh salad.



Greece

Braised Lamb with Green Beans

"Krás mé fasólia"

Total cooking time: approx. 17-21 minutes

Utensils: Bowl with cover (2 l contents)

Ingredients

1-2	Tomatoes (100 g)
400 g	Lamb meat, without bones
1 tsp	Butter or margarine for greasing the pan
1	onion (50 g), finely chopped
1	Garlic clove, crushed
	Salt
	Pepper
	Sugar
250 g	Green beans, from a can

Preparation

1. Remove skin from tomatoes, remove stem pieces, puree in a blender.
2. Cut lamb meat into large cubes. Grease the pan. Add the meat, onion and crushed garlic clove, season, cover and cook.

7-9 Min. 100 P

3. Add green beans and pureed tomatoes to the meat, cover and cook.

10-12 Min. 60 P

After cooking, let the stewed meat stand for about 5 minutes.

Tip:

If you use fresh green beans, you must first pre-cook them.



Netherlands

Mincemeat Bowl

"Gehacktschotel"

Total cooking time: approx. 23-25 minutes

Utensils: Bowl with cover (2 l contents)

Ingredients

500 g	Mincemeat (half pork, half beef)
3	Onion (150 g), finely chopped
1	Egg
50 g	Breadcrumbs
	Salt and pepper
350 ml	Meat stock
70 g	Tomato puree
2	Potatoes (200 g), diced
2	Carrots (200 g), diced
2 tbsps	Parsley, chopped

Preparation

1. Mix the mincemeat with onion, egg and breadcrumbs to make a dough, season with salt and pepper. Add the mincemeat dough to the bowl.
2. Mix the meat stock and the tomato puree.
3. Cover the mincemeat with potatoes, carrots and the fluid, mix well, cover and cook. Stir once during cooking.

23-25 Min. 100 P

Stir the mincemeat bowl again, let stand for about 5 minutes. Sprinkle with parsley and serve.



Meat, Fish and Poultry

Germany

Beef Fillet in Puff Pastry

Total cooking time: approx. 34-41 minutes

Utensils: Bowl with cover (2 l contents)
Casserole dish (approx. 26 cm long)

Ingredients

300 g	Puff pastry, frozen
1 tbsp	Butter or margarine
150 g	Marbled bacon, diced
4-5	Spring onions (150 g), sliced in rings
300 g	Mushrooms, in slices,
1 kg	Beef fillet
1 tbsp	Vegetable oil
1 tbsp	Parsley, finely chopped
1	Garlic clove, crushed
1	Egg
	Salt
	Pepper
1-2 tbsps	Milk

Preparation

1. Thaw the puff pastry according to package directions. Distribute butter in the bowl, add bacon, onions and mushrooms, cover and steam. Stir once during cooking.


4-6 Min.  100 P

Drain the fluid.

2. Wash the beef fillet, pat dry with paper towels, and rub with oil. Place onto the high rack and bake. Stir once during cooking.

15-17 Min.  30 P

3. Mix the parsley and garlic clove with the steamed vegetables, season with salt and pepper.
4. With a rolling pin, roll the puff pastry into a square (35 x 35 cm). Reserve some dough for garnish.
5. Separate the egg. Baste the egg onto the edges of the dough, place half of the vegetable mixture on the center of the dough.
6. Season the meat with salt and pepper and place on top of the vegetables. Evenly distribute the rest of the vegetable mixture on top of the meat. Fold the puff pastry over the meat-vegetable-mix and push the edges closed. Pierce the dough several times with a fork.
7. Rinse the casserole dish with cold water, place the puff pastry into the casserole dish with the closed edge on the bottom.
8. For garnish, cut out shapes from the rest of the puff pastry and decorate.
9. Mix the egg yolk and milk, baste the dough with this mixture and bake on the low rack in the pre-heated microwave oven.

15-18 Min.  50 P/230°C

After cooking, let the beef fillet in puff pastry stand for 10 minutes.

China

Prawn Chili

Makes 2 servings

Total cooking time: approx. 6-8 minutes

Utensils: Bowl with cover (1 l contents)
Bowl with cover (2 l contents)

Ingredients

6	Prawn (240 g without shell)
45 ml	White wine
2	Small leek (200 g)
1-2	Chili pepper, hot
20 g	Ginger
1 tbsp	Food starch
2 tbsps	Vegetable oil (20 g)
1½ tbsps	Soy sauce (20 ml)
1 tbsp	Sugar
1 tbsp	Vinegar

Preparation

1. Wash the prawns. Remove the shell and tail. Cut the backside and remove the veins. Cut each prawn into 2 or 3 pieces. Place one shallow cut into each piece, so that the prawn won't shrink. Place the prawn into a bowl, sprinkle with white wine, cover and marinate.
2. Wash the leek and chili peppers, pat dry. Cut leek into 5 cm long pieces, cut chili peppers in half and remove seeds. Peel the ginger and cut into slices.
3. Remove the prawn from the wine marinade, sprinkle with food starch.
4. Put oil, leek, chili peppers and ginger slices into the bowl, cover and heat.

approx. 2 Min.  100 P

5. Add the prawns. Season with soy sauce, sugar and vinegar, stir, cover and cook.

4-6 Min.  100 P

After baking, let stand for about 1-2 minutes. Serve hot.



Meat, Fish and Poultry

France

Sole fillets

"Filets de sole"

Makes 2 servings

Total cooking time: approx. 11-13 minutes

Utensils: Flat, oval casserole dish with cover
(approx. 26 cm long)

Ingredients

400 g	Sole fillets
1	Lemon, untreated
2	Tomatoes (150 g)
1 tsp	Butter or margarine to grease the pan
1 tbsp	Vegetable oil
1 tbsp	Parsley, chopped
	Salt and pepper
4 tbsps	White wine (30 ml)
2 tbsps	Butter or margarine (20 g)

Preparation

1. Wash the fillets, pat dry. Remove any bones.
2. Cut lemon and tomatoes into thin slices.
3. Grease the casserole pan. Place fish fillets in the pan, sprinkle vegetable oil on top.
4. Sprinkle with parsley, put tomato slices on top, season. Put lemon slices on top of tomatoes, pour white wine over all ingredients.
5. Cover the lemon slices with butter flakes, cover and cook.

11-13 Min. 60 P

After baking, let stand for about 2 minutes.

Tip:

You can also use other fish, e.g. rose fish, halibut, mullet or cod.



Norway

Fish Casserole "Sandefjord"

"Fiskegratin Sandefjord"

Total cooking time: approx. 21-23 minutes

Utensils: Flat, oval, casserole dish
(approx. 30 cm long)

Ingredients

800 g	Fish fillet, ling or cod
	Juice of one lemon
	Salt
1 tsp	Butter or margarine to grease the pan
4	Tomatoes (300 g), in slices
100 g	Crab, shelled
3	Eggs
125 ml	Cream
2 tsps	Green peppercorns
	Salt
1 tbsp	Parsley, finely chopped

Preparation

1. Wash the fillets, pat dry. Sprinkle with lemon juice. Let sit for about 15 minutes, pat dry again, salt.
2. Grease the pan, place tomatoes, crab and fish fillet in layers.
3. Mix eggs, cream, spices and parsley. Pour sauce over casserole. Position uncovered onto the low rack and cook.

21-23 Min. 50 P/200°C

4. After cooking, let the casserole stand for about 5-10 minutes.



Switzerland

Fish Fillet with Cheese Sauce

Total cooking time: approx. 17½-20½ minutes

Utensils: Bowl with cover (1 l contents)
Flat, oval casserole dish
(approx. 26-30 cm long)

Ingredients

4	Fish fillet (about 800 g) (e.g. Egli-fish, flounder of cod)
2 tbsps	Lemon juice
	Salt
1 tbsp	Butter or margarine
1	Onion (50 g), finely chopped
2 tbsps	Flour (20 g)
100 ml	White wine
1 tsp	Olive oil to grease the pan.
100 g	Shredded Emmentaler cheese
2 tbsps	Parsley, chopped

Preparation

1. Wash the fillets, pat dry and dribble with lemon juice. Let stand for about 15 minutes, pat dry one more time, salt.
2. Distribute the butter evenly in the bowl. Add onion, cover and steam.

approx. 1½ Min. 100 P

3. Sprinkle flour over onions, stir. Add white wine and mix.
4. Grease the casserole pan and place the fillets in pan. Pour sauce over the fillets, sprinkle with cheese, bake on low rack.

16-19 Min. 50 P

After baking, let stand for about 2 minutes. Garnish with parsley and serve.



Meat, Fish and Poultry

Germany

Spicy Turkey Pan

for 2 servings

Total cooking time: approx. 21-26 minutes

Utensils: Flat, oval casserole dish with cover
(approx. 26 cm long)

Ingredients

- 1 120 g Rice, parboiled
- 1 Package Saffron
- 1 tsp Butter or margarine to grease the pan
- 1 Onions (50 g), in slices
- 1 Red bell peppers (100 g), in strips
- 1 Small Leek (100 g), cut in strips
- 300 g Turkey breast, diced
- Pepper, Paprika powder
- 2 tbsps Butter or margarine (20 g)
- 250 ml Meat stock

Preparation

- Mix rice and saffron, put into greased casserole pan. Mix onions, bell pepper, leek and turkey breast, season to taste. Place on top of rice. Distribute butter in flakes on top.
- Pour meat stock over, cover and cook.

5-7 Min. 100 P

16-19 Min. 20 P

After baking, let stand for about 5 minutes.

Tip:

You can use chicken breast instead of turkey breast.

France

Chicken with Curry

"Poulet au curry"

Total cooking time: approx. 26-30 minutes

Utensils: Bowl with cover (3 l contents)

Ingredients

- 1 Chicken (1000 g)
- 1 tsp Butter or margarine to grease the pan
- 2 Carrots (200 g), finely diced
- 1 1 Stick celery (150 g), finely diced
- 1 Garlic clove
- 1 Apple, peeled (125 g), finely diced
- 1 Onion (50 g), finely chopped
- Salt, pepper
- 1-2 tbsps Curry
- 1 tbsp Flour
- 150 ml Water (1 cup)
- 3 Tomatoes (200 g), peeled

Preparation

- Wash the chicken, pat dry and divide into 8 portions.
- Grease the pan. Place chicken pieces in pan, add vegetables and season with salt and pepper. Dust with curry and flour, mix well. Add water and peeled, crushed tomatoes. Cover and cook on low rack. After half of cooking time, stir once and continue cooking, uncovered.

26-30 Min. 60 P/220°C

After baking, let stand for about 3 minutes.

Tip:

Serve with rice, some shaved coconut, mango chutney and banana slices to soften the spiciness.

Austria

Stuffed Chicken

"Gefülltes Brathendl"

for 2 servings

Total cooking time: approx. 27½-31 minutes

Utensils: Small bowl with cover
Kitchen string

Ingredients

- 1 Chicken (1000 g)
- Salt
- Rosemary, ground
- Marjoram, ground
- 1 Old, hard bread roll (40 g)
- Salt
- 1 Bunch of Parsley, finely chopped (10 g)
- 1 pinch Nutmeg
- 2 tbsps Butter or margarine (20 g)
- 1 Egg yolk
- 3 tbsps Butter or margarine (30 g)
- 1 tbsp Paprika
- Salt

Preparation

- Wash the chicken, pat dry and rub inside with salt, rosemary and marjoram.
- To prepare the filling, soak the bread roll in cold water for about 10 minutes, squeeze excess moisture out. Mix with salt, parsley, nutmeg, butter and egg yolk, fill the chicken with this mixture. Tie the opening closed using kitchen string.
- Place the butter into the bowl, cover and heat.

approx. ½-1 Min. 100 P

Mix paprika, salt and melted butter, brush the chicken.

- Place the chicken with breast side down onto the low rack, cook. ½ of the thawing time.

27-30 Min. 50 P/200°C

After cooking, let the filled chicken stand for about 5 minutes.



Meat, Fish and Poultry

France

Duck in Orange Sauce

"Carmad à l'orange"

Total cooking time: approx. 62-70 minutes

Utensils: Round baking pan
(dm. approx. 32 cm)
Soup bowls
Two bowls with cover (2 l contents)

Ingredients

1	Young duck (1800 to 2000 g) without Innards
	Salt
	Pepper
1	Twig of Marjoram
200 ml	Water
1	Duck liver (50 g)
6	Oranges, untreated (1200 g)
1 tbsp	Sugar (10 g)
1 tbsp	Water
1 tbsp	Vinegar
250 ml	Meat broth
150 ml	Port wine
1 tbsp	Potato flour (10 g)

Preparation

1. Wash the inside and outside of the duck, pat dry, season with salt and pepper. Place the twig of marjoram in the inside of the duck.
2. Pour water into the baking pan and place a soup bowl, upside-down, into it. Place the duck on top of the plate, bake on low rack. Turn after ½ of cooking time.

58-62 Min. 30 P/230°C

Place the duck on a pre-warmed serving platter.

3. Carefully remove excess fat from the roast drippings and put into a bowl. Add duck liver, cover and cook.

1-2 Min. 100 P

4. Thinly peel two oranges, cut the peel into very thin strips. Put into the second bowl, add sugar and water, cover and heat.

1-2 Min. 100 P

5. Add the orange peel, vinegar, meat broth and port wine to the liver.
6. Squeeze the juice of one orange. Mix the potato flour with the orange juice and stir into the sauce. Cover, cook and wait until the sauce slightly thickens. Stir occasionally and after cooking is finished.

2-4 Min. 100 P

7. Peel the leftover oranges, filet (remove fruit pulp from skin) and also place on serving platter. If required, remove excess fat from sauce, remove the duck liver and season to taste.
8. Pour some sauce over the orange filets. Fill rest of sauce into a sauce boat and serve alongside the duck.

Tip:

If required, place the duck on the low rack and bake for an additional 5 minutes prior to serving.



Italy

Quails in Cheese and Herb Sauce

"Quaglie in salsa vellutata"

Total cooking time: approx. 17½-21½ minutes

Utensils: Kitchen string
Flat, square casserole dish
(approx. 20 x 20 x 6 cm)
Bowl with cover (1 l contents)

Ingredients

4	Quails (600 - 800 g)
	Salt
	Pepper
200 g	Marbled bacon, thinly sliced
1 tsp	Butter or margarine to grease the pan
1 tbsp each	Fresh Parsley per quail
	Sage
	Rosemary
	Basil, finely chopped
150 ml	Port wine
250 ml	Meat broth
2 tbsps	Butter or margarine (20 g)
2 tbsps	Flour (20 g)
50 g	Shredded Emmentaler cheese

Preparation

1. Wash the quails and carefully pat dry. Salt and pepper the inside and outside, wrap bacon slices around outside, tie with kitchen string.
2. Place the quails onto the high rack and bake.

8-10 Min. 50 P

3. Grease the casserole dish, place the quail with the grilled side down into the casserole dish. Finely chop the herbs, sprinkle over quail and pour port wine over it. Place the quails onto the low rack and cook.

6-8 Min. 50 P

Remove the quail from the gravy.

4. Put sauce into a bowl, cover and heat.

approx. 2 Min. 100 P

Mix butter and flour, add to sauce, let come to a boil and cook.

Stir once during cooking.

approx. 1½ Min. 100 P

5. Stir cheese into the sauce. Add the cheese sauce to the gravy, mix well, pour over quail and serve.



Meat, Fish and Poultry

Japan

Japanese Stew

"Nikujaga"

Total cooking time: approx. 30-34 minutes

Utensils: Bowl with cover (3 l contents)

Ingredients

200 g	Lean beef
500 g	Potatoes, quartered or cut in eights.
400 g	Onions, quartered or cut in eights.
400 ml	Water
3 tbsps	Sugar (30 g)
3 tbsps	Rice wine
3 tbsps	Mirin (sweet rice wine)
70 ml	Soy sauce

Preparation

1. Cut the meat lengthwise into very thin strips (3-4 cm), put into bowl.
2. Layer the prepared vegetables on top of the meat. Mix all other ingredients and pour over top. Cover and cook.

Stir twice during cooking time.

11-13 Min.		100 P
21-23 Min.		40 P

3. After cooking, let stand for about 10 minutes.

Tip:

You can use pork or veal instead of beef.

Spain

Chicken Rolls with Raisins

"Rollitos de Pollo y pasas"

Total cooking time: approx. 17-19 minutes

Utensils: Bowl with cover (2 l contents)

Ingredients

4	Thin chicken breast fillet (600 g)
	Salt
	Pepper
4	Slices ham (200 g)
50 g	Quesitos (span. Cheese)
1	Can leek soup (400 g)
50 g	Raisins, washed

Preparation

1. Wash the fillets, pat dry and tenderize. Season with salt and pepper. Place one slice of ham and cheese on top of each fillet.
2. Roll the fillets up. Secure with a small wooden pick, place into bowl.
3. Pour soup over chicken rolls, add raisins. Cover and cook.

17-19 Min.		100 P
------------	--	-------

Let stand for about 10 minutes prior to serving.

Vegetables

Germany

Leek Tart

Total cooking time: approx. 28-36 minutes

Utensils: Bowl with cover (2 l contents),
spring form (diam. approx. 26 cm)

Ingredients

450 g	Leek, in thin rings
3 tbsps	Water
	Salt
1 pinch	Curry
100 g	Whole-wheat flour
80 g	Rye flour type 1150
3 tps	Baking powder
1	Egg
75 g	Low-fat yoghurt
1 tbsp	Vegetable oil
½ tsp	Salt
1 tsp	Butter or margarine to grease the pan
150 g	Sour Cream
3	Eggs
2 tbsps	Whole wheat flour (20 g)
	Herbal salt
	Pepper
1 pinch	Nutmeg
1 tsp	Parsley, finely chopped
1 tsp	Chives, finely chopped
1 tsp	Dill, finely chopped
100 g	Shredded Emmentaler cheese

Preparation

1. Put leek and water into the bowl. Cover and cook.

5-8 Min.		100 P
----------	--	-------

2. Drain the fluid. Season the leeks with salt and curry.
3. Mix flour and baking powder. Add the egg, yoghurt, oil and salt; knead the dough with a handheld blender.
4. Grease the spring form. Roll the dough to the size of the baking pan, place into baking pan. Pull up an edge of about 1 cm
5. Mix sour cream, eggs and milk. Season with herbal salt, pepper, nutmeg and herbs. Mix with cheese.
6. Stir this mixture with the leek. Evenly spread this mixture onto the dough.

Position onto the low rack and bake.

10-12 Min.		20 P/230°C
11-13 Min.		230°C
2-3 Min.		

After baking, let stand for about 2 minutes.



Vegetables

Austria

Cauliflower with Cheese Sauce

"Karfiol mit Käsesauce"

Total cooking time: approx. 17½-19½ minutes

Utensils: Bowl with cover (2 l contents)
Bowl with cover (1 l contents)

Ingredients

800 g Cauliflower (1 head)
1 Cup water (150 ml)
Salt
125 ml Milk
125 ml Cream
75-100 g Soft cheese
2-3 tbsps Gravy thickener, light color (20-30 g)

Preparation

1. Slice the stem of the cauliflower several times.
Place cauliflower, head up, into the bowl, add water with salt, if desired, cover and cook.

15-17 Min. 100 P

Let cauliflower stand for a few minutes, covered, then drain the fluid.

2. Add milk and heavy whipping cream to the bowl. Coarsely chop soft cheese, add. Cover and cook.

approx. 2 Min. 100 P

3. Stir the Gravy thickener in, cover and reheat.

approx. ½ Min. 100 P

Stir the sauce and pour over cauliflower.

Tip:

You may also sprinkle chopped parsley on top of the cauliflower prior to serving.



France

Ratatouille

"Ratatouille special"

Total cooking time: approx. 15-18 minutes

Utensils: Bowl with cover (2 l contents)

Ingredients

5 tbsps Olive Oil (50 ml)
1 Garlic clove, crushed
1 Onions (50 g), in slices
1 Small aubergine (250 g), cut into Large cubes
1 Zucchini (200 g), cut into Large cubes
1 Bell pepper (200 g), cut into Large cubes
1 Small fennel (75 g), finely diced
Pepper
1 Bouquet Garni
200 g Artichoke hearts from a jar, quartered
Salt
Pepper

Preparation

1. Put olive oil and garlic into the bowl. Add the prepared vegetables, except the artichoke hearts, season with pepper. Add the Bouquet Garni, cover and cook.
Stir once during cooking.

15-18 Min. 100 P

During the last 5 minutes of cooking time add artichoke hearts and heat.

2. Season the ratatouille with salt and pepper. Remove the Bouquet Garni prior to serving. After cooking let stand for about 2 minutes.

Tip:

Serve this hot vegetable stew alongside meat dishes.

It tastes great served cold as an appetizer.

A Bouquet Garni is made of:

- One parsley root
- One bunch soup greens
- One twig lovage
- One twig thyme
- Some bay leaves



France

Dauphin Potatoes

"Gratin dauphinois"

Total cooking time: approx. 23-25 minutes

Utensils: Flat, oval casserole dish
(approx. 26 cm long)

Ingredients

1 tbsp Butter or margarine
500 g Potatoes, peeled, thinly sliced
Salt
Pepper
2 Garlic clove, crushed
300 g Cream (Crème Fraiche)
150 ml Milk
50 g Shredded cheese (Gouda)

Preparation

1. Evenly distribute butter in pan. Layer potato slices in pan. Season each layer with salt, pepper and garlic.
2. Mix cream and milk, pour over potatoes. Sprinkle with cheese, bake on low rack.

23-25 Min. 50 P/200°C

After baking, let stand for about 10 minutes.



Vegetables

Netherlands

Chicory au Gratin

"Gegratineerde Brussels Iof"

Total cooking time: approx. 18-23 minutes

Utensils: Bowl with cover (2 l contents)
Flat, oval, casserole dish
(approx. 32 cm long)

Ingredients

- 8 Small Chicory (800 g)
- 125 ml Water
- 125 ml Milk
- 2 tbsps Gravy thickener, light color (20 g)
- 2 Egg yolk
- 4 tbsps Shredded, aged Gouda cheese (20 g)
- Salt
- Pepper
- 1 tsp Butter or margarine to grease the pan
- 4 Slices ham (200 g)
- 2 tbsps Shredded, aged Gouda cheese (10 g)

Preparation

1. With sharp knife, remove the bitter part of the chicory. Put water into a bowl, add chicory, cover and cook. Turn chicory once during cooking.

9-11 Min.  100 P

2. Remove the chicory. Add milk to the bowl, stir in Gravy thickener. Cover, cook and wait until the sauce slightly thickens. Stir occasionally and after cooking is finished.

3-4 Min.  60 P

3. Stir the egg yolk in a cup. Slowly, spoon by spoon, add sauce to the egg yolk. Stir egg mixture into the sauce, and add cheese.

Mix everything well, season to taste.

4. Grease the casserole pan and place chicory in it. Cut ham slices in half, place on top of the chicory, pour sauce over everything. Sprinkle the casserole with Gouda cheese, bake on high rack.

6-8 Min.  50 P

After baking, let stand for about 5 minutes.

Germany

Broccoli-Potato-Gratin with Mushrooms

Total cooking time: approx. 36-39 minutes

Utensils: Bowl with cover (2 l contents)
Round casserole dish (dm. 26 cm)

Ingredients

- 400 g Potatoes, peeled and halved, if required.
- 400 g Broccoli, in flowerets
- 6 tbsps Water (60 ml)
- 1 tsp Butter or margarine to grease the pan
- 400 g Mushrooms, in slices,
- 1 tbsps Parsley, finely chopped
- Salt
- Pepper
- 3 Eggs
- 125 ml Heavy whipping cream
- 125 ml Milk
- Salt
- Pepper
- Nutmeg
- 100 g Gouda cheese, freshly shredded

Preparation

1. Add the potatoes and broccoli to the bowl. Add the Water, cover and cook. Stir once during cooking.

9-12 Min.  100 P

2. Cut the potatoes into slices.
3. Grease the casserole pan. Layer the broccoli, mushrooms and potatoes. Sprinkle with parsley, season with salt and pepper.
4. Mix eggs, liquids and spices and pour this mixture over the vegetables. Sprinkle cheese on top and cook. (This recipe will make about 1.5 kg)

AUTO COOK No.5 

After baking, let stand for about 10 minutes.



Vegetables

Italy

Roman Artichokes

"Carciofi alla Romana"

makes 2 servings

Total cooking time: approx. 16-18 minutes

Utensils: Deep, oval casserole dish with cover
(approx. 26 cm long)

Ingredients

2	Artichokes (800 g)
1 l	Water
	Juice of one lemon
2	Garlic clove, crushed
1	Bunch of Parsley, finely chopped (10 g)
10	Leaves mint, chopped
2 tbsps	Bread crumbs (20 g)
5 tbsps	Olive Oil (50 ml)
	Salt
	Black pepper, freshly ground
100 ml	Olive Oil
400 ml	Water
	Black pepper, freshly ground
	Salt

Preparation

1. Remove the outer, dry leaves and the prickly top of the artichoke. Cut the stem down to a 3 cm long stump. Place artichokes in a bowl filled with cold water and lemon juice, this will prevent discoloration of cuts.
2. Mix garlic, parsley, mint, breadcrumbs and olive oil, season with salt and pepper.
3. Remove the artichokes from the water, pat dry. Slightly push the leaves apart, so that each leaf makes a little opening. Remove the straw from this opening. Push a small amount of filling into this opening. Carefully push the leaves back together, to secure the filling.
4. Place artichokes into the casserole dish. Add oil and water. Sprinkle with freshly ground pepper and salt, cover and cook.

16-18 Min. 100 P

After baking, let stand for about 2 minutes.



Germany

Filled Tomatoes with Spring Onions

Total cooking time: approx. 22-27 minutes

Utensils: Bowl with cover (about 1 l content)
Flat, oval casserole dish with cover
(approx. 26 cm long)

Ingredients

½	Bunch thyme (5 g)
35 g	Buckwheat seeds
2 tbsps	Butter or margarine (20 g)
1	Onion (50 g), finely chopped
2	Garlic clove, crushed
100 ml	Vegetable broth
1	Bunch fresh parsley, smooth (10 g)
100 g	Gouda cheese, whole piece
	Salt
	Black pepper, fresh ground
4	Butcher tomatoes (600 g)
1 tsp	Butter or margarine for greasing the pan
4-5	Spring onions (150 g)
1	Bunch basil (10 g)

Preparation

1. Remove stems from thyme. Wash buckwheat seeds. Distribute the butter evenly in the bowl. Put onion, garlic, buckwheat and thyme into the bowl, cover and heat.

approx. 2 Min. 100 P

2. Add broth, cover and cook.

8-10 Min. 60 P

3. Remove stems from parsley, cut into thin strips. Cut 4 slices of Gouda, dice the rest. Add parsley and cheese dices to the cooled buckwheat, season.
4. Remove the caps of the tomatoes, remove the pulp. Loosely fill the tomatoes with buckwheat. Place one slice of cheese on each tomato, place lid on top.
5. Cut the spring onions into diagonal slices. Remove stem from basil.
6. Grease the casserole pan. Evenly distribute onions, basil leaves and tomato pulp in pan.
7. Place tomatoes on top of the onion mixture, cover and cook.

12-15 Min. 60 P

After cooking, let the filled tomatoes stand for about 2 minutes.



Noodles, Rice and Dumplings

Italy

Tagliatelle with Cream and Basil

"Tagliatelle alla panna e basilico" makes 2 servings

Total cooking time: approx. 15-21 minutes

Utensils: Bowl with cover (2 l contents)
Round soufflé pan (dm. approx. 20 cm)

Ingredients

1 l	Water
1 tsp	Salt
200 g	Tagliatelle (ribbon noodles)
1	Garlic clove
15-20	Basil leaves
200 g	Cream (Crème Fraîche)
30 g	Shredded Parmesan cheese
	Salt
	Pepper

Preparation

1. Add water and salt in a bowl, cover and bring to a boil.

8-10 Min. 100 P

2. Add noodles, bring again to a boil, let cook using low heat.

1-2 Min. 100 P

6-9 Min. 20 P

3. Meanwhile, rub the soufflé pan with a garlic clove. Finely chop the basil leaves. Reserve some leaves for garnish.
4. Let noodles drain well. Mix cream and noodles, sprinkle basil on top.
5. Add Parmesan, salt and pepper, fill this mixture into the soufflé pan, stir. Garnish with basil leaves, serve hot.

Germany

Courgette-Paste-Gratin

Total cooking time: approx. 39-43 minutes

Utensils: Bowl with cover (2 l contents)
Casserole dish (approx. 30 cm long)

Ingredients

500 ml	Water
½ tsp	Oil
	Salt
80 g	Macaroni noodles
400 g	Tomatoes from a jar, chopped
3	Onion (150 g), finely chopped
	Basil leaves
	Thyme
	Salt
	Pepper
1 tbsp	Oil to grease the pan
450 g	Courgette in slices
150 g	Sour cream
2	Eggs
100 g	Shredded cheddar cheese

Preparation

1. Add water, oil and salt in a bowl, cover and bring to a boil.

3-5 Min. 100 P

2. Break macaroni noodles into small pieces, add, stir and let soak.

9-11 Min. 30 P

Let noodles drain well and cool.

3. Mix tomatoes and onion, season well. Grease the casserole pan. Add the macaroni noodles and pour tomato sauce on top. Evenly place zucchini slices on top.
4. Mix sour cream and eggs, pour over casserole. Sprinkle with shredded cheese. Place onto the low rack and cook. (This recipe will make about 1.5 kg)

AUTO COOK No.5

After baking, let dish stand for 5-10 minutes.

Sauce for Noodles

Sauce Bolognese

Total cooking time: approx. 12-17 minutes

Utensils: Bowl with cover (2 l contents)

Ingredients

30 g	Marbled bacon
100 g	Mushrooms, finely diced
½	Onion (25 g), finely chopped
1	Carrots (50 g), finely diced
50 g	Celery, finely diced
200 g	Mincemeat, beef
100 ml	White wine
½	Bunch of Parsley, finely chopped (5 g)
3 tbsps	Tomato sauce (45 g)
1 pinch	sugar
1 pinch	Nutmeg
	Salt
	Pepper

Preparation

1. Finely dice ham, add ham and vegetables into bowl, cover and steam.

4-6 Min. 100 P

2. Puree the vegetables. Add the mincemeat, wine, parsley and tomato sauce. Season with spices. Cover bowl, leave a small opening for steam ventilation. Cook the sauce Stir once during cooking.

4-5 Min. 100 P

4-6 Min. 60 P



Noodles, Rice and dumplings

Sauce for Noodles

Tomato sauce

Total cooking time: approx. 7½ minutes

Utensils: Bowl with cover (2 l contents)

Ingredients

- 5-7 Tomatoes (500 g)
 1 tbsp Butter or margarine
 1 Onion (50 g), finely chopped
 2 tbsps Tomato sauce (30 g)
 200 ml Meat broth
 Salt and pepper
 Sugar, oregano, basil
 2 tbsps Butter or margarine (20 g)
 2 tbsps Flour (20 g)

Preparation

1. Remove skin from tomatoes, remove stem pieces, remove seeds, dice the pulp.
2. Distribute the butter evenly in the bowl. Add onion, cover and steam.

approx. 1½ Min. 100 P

3. Add tomato dices, tomato sauce and meat broth, season, cover and steam.

approx. 3 Min. 100 P

4. Mix butter and flour, use wire whisk to add to sauce. Reheat, covered. Stir occasionally and after cooking is finished.

approx. 3 Min. 100 P



Sauce for Noodles

Gorgonzola Sauce

Total cooking time: approx. 4½ minutes

Utensils: Bowl with cover (1 l contents)

Ingredients

- 200 g Gorgonzola Cheese
 150 ml Heavy whipping cream
 approx. 1 tbsp Gravy thickener, light color

Preparation

1. Puree the Gorgonzola and cream in a blender or handheld blender.
2. Pour mixture in a bowl, cover and heat.

approx. 2 Min. 60 P

3. Add the Gravy thickener, cover and reheat.

approx. 2½ Min. 60 P

Stir again after heating.

Tip:

This sauce is sufficient for about 400 g of noodles. Farfalle (butterfly-shaped noodles) are very suitable.



Austria

Bread dumplings

makes 5 servings

Total cooking time: approx. 7-10 minutes

Utensils: 5 cups or pudding molds

Ingredients

- 2 tbsps Butter or margarine (20 g)
 1 Onion (50 g), finely chopped
 approx. 500 ml Milk
 200 g Dry bread roll, diced
 (approx. 5 rolls / bread rolls)
 3 Eggs

Preparation

1. Grease the bottom of the pan, add onions, cover and steam.

1-2 Min. 100 P

2. Cut roll into small cubes, cover with milk and let sit for 10 minutes. Beat eggs.
3. Mix onions, eggs and roll cubes well to form an even dough. If necessary, add some more milk.
4. Evenly distribute this dough in 5 cups or pudding molds, cover with microwave foil, place around the outer side of the turntable and cook.

6-8 Min. 100 P

After baking, let stand for about 2 minutes. Empty dumplings onto a plate prior to serving.



Switzerland

"Tessin Risotto"

Total cooking time: approx. 20-24 minutes

Utensils: Bowl with cover (2 l contents)

Ingredients

- 50 g Marbled bacon
 2 tbsps Butter or margarine (20 g)
 1 Onion (50 g), finely chopped
 200 g Rice (Arboris)
 400 ml Meat broth
 70 g Sbrinz cheese, shredded
 (alternatively use shredded Emmentaler cheese)
 1 pinch Saffron
 Salt and pepper

Preparation

1. Dice the ham. Distribute the butter evenly in the bowl. Add onion and ham, cover and steam.

approx. 2 Min. 100 P

2. Add the rice, fill with meat broth, boil and let soak.

3-5 Min. 100 P

15-17 Min. 20 P

After baking, let stand for about 3-5 minutes.

3. Stir cheese and saffron into this mixture, season to taste.

Tip:

Serve with baked chanterelle mushrooms or white cap mushrooms and a mixed salad.



Noodles, Rice and Dumplings

Switzerland

Semolina Gnocchi

"Griessnockerl"

makes about 12-15 servings

Total cooking time: approx. 19-23 minutes

Utensils: Bowl with cover (2 l contents)
Round, flat casserole dish
(dm. approx. 26 cm)

Ingredients


250 ml	Milk
1 tsp	Butter or margarine
1 pinch	Salt
50 g	Semolina
1	Egg white
1	Egg yolk
50 ml	Cream (Crème Fraîche)
1 tsp	Butter or margarine for greasing the pan
1 tbsp	Butter or margarine
30 g	Shredded Sbrinz Cheese (alternatively use shredded Emmentaler cheese)

Preparation

- Put milk, butter and salt into a bowl, cover and heat.


approx. 3 Min.  100 P

- Add semolina, stir well, cover and let soak. Stir once during cooking.

9-11 Min.  30 P

Let cool.

- Beat egg whites until they are stiff. Mix egg yolk with cream and stir into semolina mixture, fold egg whites in.
- Grease the casserole pan. With two soup spoons, form small ovals, place next to each other into the dish. Cover with butter flakes, sprinkle with shredded cheese. Place onto the high rack and bake.

7-9 Min.  30 P

After baking, let stand for about 2 minutes.

Tip:

Gnocchi are served as a main entree. Serve with spinach.

Italy

Lasagne al forno

Total cooking time: approx. 23-25 minutes


Utensils: Bowl with cover (2 l contents)
Flat, square casserole dish
(approx. 20x20x6 cm)

Ingredients

300 g	Tomatoes from a jar
50 g	Mushrooms, finely diced
1	Onion (50 g), finely chopped
1	Garlic clove, crushed
250 g	Mince meat, beef
2 tbsps	Tomato sauce (30 g)
	Salt and pepper
	Oregano, Thyme, Basil
150 ml	Cream (Crème Fraîche)
100 ml	Milk
50 g	Shredded parmesan cheese
1 tsp	Mixed, chopped herbs
1 tsp	Olive oil
	Salt and pepper
	Nutmeg
1 tsp	Olive oil to grease the pan.
125 g	Green sheet noodles
1 tbsp	Shredded Parmesan cheese (5 g)
1 tbsp	Butter or margarine


Preparation

- Slice tomatoes, mix with ham, onions, garlic, beef mince meat and tomato sauce. Season, cover and steam, stir after half of cooking time.

6-7 Min.  100 P

- Mix cream and milk, Parmesan cheese, herbs and oil, season.
- Grease the casserole pan. Cover bottom of pan with one third of sheet noodles. Place half of mince meat on top of noodles, pour some sauce over it. Place the second third of noodles on top, layer mince meat, sauce and the final layer of noodles.

Top with sauce, sprinkle with parmesan cheese. Cover with butter flakes, cook on low rack and cook.

14-15 Min.  50 P/230°C

approx. 3 Min. 

After baking, let dish stand for 5 to 10 minutes.



Cakes, Bread, Desserts and Drinks

Germany

Semolina Flummery with Raspberry Sauce

Total cooking time: approx. 15-20 minutes

Utensils: Bowl with cover (2 l contents)

Ingredients

500 ml	Milk
40 g	Sugar
15 g	Almonds, chopped
50 g	Semolina
1	Egg yolk
1 tbsp	Water
1	Egg white
250 g	Raspberries
50 ml	Water
40 g	Sugar

Preparation

- Put milk, sugar and almonds into a bowl, cover and heat.

3-5 Min. 100 P

- Add semolina, stir, cover and cook. Stir once during cooking.

10-12 Min. 20 P

- Mix egg yolk and water in a cup, stir into the hot porridge. Beat egg white stiff, carefully fold in. Transfer semolina flummery into small bowls.

- To prepare the sauce, wash raspberries, carefully pat dry, put into bowl with water and sugar. Cover and heat.

2-3 Min. 100 P

- Puree raspberries and serve hot or cold along with the semolina flummery.



France

Pears in Chocolate

"Paires au chocolat"

Total cooking time: approx. 8-13 minutes

Utensils: Bowl with cover (2 l contents)

Bowl with cover (1 l contents)

Ingredients

4	Pears (600 g)
60 g	Sugar
1 pck.	Vanilla sugar (10 g)
1 tbsp	Pear liquor, 30 Vol.-%
150 ml	Water
130 g	Semi-sweet chocolate
100 g	Cream (Crème Fraîche)

Preparation

- Leave pears whole and peel.
- Put sugar, vanilla sugar, liquor and water into a bowl, mix, cover and heat.

1-2 Min. 100 P

- Place pears into the liquid, cover and cook.

6-10 Min. 100 P

Remove pears from liquid, let cool.

- Pour 50 ml of the liquid into a smaller bowl. Add chocolate and cream, cover and heat.

approx. 1 Min. 100 P

- Stir sauce well. Pour sauce over pears and serve.

Tip:

Can be served with some vanilla ice cream.



Austria

"Salzburger Nockerl"

makes 3 servings

Total cooking time: approx. 5-6 minutes

Utensils: Round, flat casserole dish
(approx. 30 cm long)

Ingredients

4	Egg white
1 pinch	Salt
50 g	Powdered sugar
1 tsp	Vanilla sugar
4	Egg yolk
2 tbsps	Flour (20 g)
1 tsp	Butter or margarine for greasing the pan
1 tbsp	Powdered sugar

Preparation

- In a large bowl, beat egg white until it forms a stiff foam, add salt. Slowly add powdered and vanilla sugar, keep beating until stiff.
- Mix egg yolk with a little bit of egg whites, gently turn under beaten egg whites. Sieve flour over this mixture and also fold in.
- Grease the casserole pan. Divide the dough into three parts, place all three parts next to each other into the casserole dish.
Bake the ovals immediately onto the low rack in the pre-heated microwave oven.

5-6 Min. 20 P/230°C

Immediately dust with powdered sugar, serve hot.



Cakes, Bread, Desserts and Drinks

Denmark

Fruit Jelly with Vanilla Sauce

"Rødgrød med vanilje sovs"

Total cooking time: approx. 8-12 minutes


Utensils: Bowl with cover (2 l contents)
Bowl with cover (1 l contents)

Ingredients

150 g Wash and sort red currants
150 g Wash and sort strawberries
150 g Wash and sort raspberries
250 ml White wine
100 g Sugar
50 ml Lemon juice
8 Leaf Gelatin
300 ml Milk
Core of ½ vanilla bean
30 g Sugar
15 g Food starch


Preparation

1. Reserve some fruits for garnish. Puree rest of berries with white wine, add to bowl, cover and cook.

5-7 Min.  100 P

Carefully turn sugar and lemon juice under.

2. Soak gelatin in cold water for about 10 minutes, then squeeze excess moisture out. Stir gelatin into the hot fruit puree until it is dissolved. Refrigerate jelly until it solidifies.
3. Add milk and vanilla sauce into bowl. Cut open vanilla bean, remove the core. Stir vanilla core, sugar and food starch into the milk, cover and cook.
Stir occasionally and after cooking is finished.

2½-3½ Min.  100 P

4. Empty jelly onto a plate, garnish with whole fruits. Serve with vanilla sauce.

Tip:

Can also be served with ice-cold cream or yoghurt.

Austria

Curd strudel

"Topfenstrudel"

Total cooking time: approx. 17½-20 minutes

Utensils: Bowl with cover (1 l content)
Oval, flat casserole dish
(approx. 30 cm long)

Ingredients

125 g Flour
1 tbsp Oil
½ Egg
50 ml Water
¼ Core of one vanilla bean
50 g Butter or margarine
Egg yolk
75 g Sugar
250 g Curd (20% fat content)
50 ml Heavy whipping cream
2 Egg white
Flour for dusting
40 g Butter or margarine
20 g Breadcrumbs
30 g Raisins
1 tsp Butter or margarine for greasing the pan


Preparation

1. To make a dough, knead flour, ½ tbsp. oil and the egg with the kneading attachment of a handheld blender. Slowly add enough water to form a smooth, elastic dough. The dough should not be sticky. Brush the dough with the rest of the oil
2. Cover the dough with a hot, wet kitchen towel, let stand for 30 minutes.
3. Cut open vanilla bean, remove the core. With a handheld blender, stir the butter, egg yolk, sugar and vanilla core until creamy. Stir in the curd and cream. Beat egg white until stiff, carefully fold in.
4. Dust a dry kitchen towel with flour. Roll dough onto this surface until it is very thin.
5. Melt the butter covered in a bowl.

approx. ½-1 Min.  100 P

Baste the dough with butter and sprinkle with breadcrumbs. Place an even layer of curd mixture on the dough, sprinkle raisins on top.

6. Using the kitchen towel, carefully turn the dough to form a roll.
7. Grease the pan. Put the strudel roll, seam side down, onto the baking pan and bake on the low rack in the pre-heated microwave oven.

17-19 Min.  40 P/230°C

Tip:

Serve the strudel hot or cold. May be served with vanilla sauce.



Cakes, Bread, Desserts and Drinks

Spain

White Peach Mount

"Melocotones nevados"

makes about 8 servings

Total cooking time: approx. 6-7 minutes

Utensils: Round, flat glass pan (dm. approx. 24 cm)

Ingredients

470 g	Peach halves from a jar, drip dried
2	Egg white
35 g	Sugar
75 g	Ground almonds
35 g	Sugar
2	Egg yolk
2 tbsps	Cognac
1 tsp	Butter or margarine for greasing the pan

Preparation

1. Pat the peach halves dry.
2. Beat egg white until stiff. Sprinkle a little sugar into the beaten egg whites.
3. Mix the almonds, the rest of the sugar, egg yolk and cognac.
4. Fill the peach halves with this mixture. Using a pastry bag, squeeze the egg whites onto the filling.
5. Grease the pan. Place the peaches into the baking dish, bake on the low rack.

6-7 Min. 50 P



Sweden

Pistachio Rice with Strawberries

"Pistaschris med zordgubbe"

Total cooking time: approx. 23-26 minutes

Utensils: High bowl with cover (2 l contents)

Ingredients

125 g	Long grain rice
175 ml	Milk
175 ml	Water
1	Vanilla bean
1 pinch	salt
50 g	Sugar
250 g	Strawberries
40 g	Sugar
40 ml	Cointreau (Orange liquor, 40 Vol.-%)
200 ml	Heavy whipping cream
1	Egg white
50 g	Pistachios

Preparation

1. Add the rice to a bowl, fill with the liquid. Cut open the vanilla bean, add the vanilla bean, salt and sugar to the rice, cover and cook.

3-4 Min. 100 P

20-22 Min. 30 P

After baking, let stand for about 5 minutes.

2. Cut strawberries in half, mix with sugar and orange liquor.
3. Remove vanilla bean from rice, place rice in a double boiler to cool, stirring constantly. Beat the cream and egg white, separately, until stiff. Carefully fold the pistachios under the cold rice, then the cream and finally the egg whites.
4. Serve the rice in a large bowl. Make a little hollow, place the strawberries in the hollow.



Germany

Cherry Pudding

"Kirschenmichel"

Total cooking time: approx. 16-18 minutes

Utensils: High, round casserole dish (dm. approx. 20 cm)

Ingredients

4	Old, hard bread roll (160 g)
375 ml	Milk
60 g	Butter or margarine
8 tbsps	Sugar (80 g)
4	Egg yolk
1 tbsps	Flour
30 g	Chopped almonds
	Shredded skin of one Lemon
4	Egg white
1 tsp	Butter or margarine for greasing the pan
350 g	Sour cherries from a jar, drip dried.
2 tbsps	Breadcrumbs
1 tbsps	Butter or margarine

Preparation

1. Cut rolls into small pieces, soak in milk.
 2. Beat butter, sugar and egg yolk with a handheld blender until creamy. Add flour, almonds, lemon rind and soaked rolls (squeeze excess moisture out).
 3. Beat egg white until stiff, carefully fold in.
 4. Grease the pan. Place the bread dough and the cherries into the casserole dish in layers. The uppermost layer should be dough.
 5. Sprinkle breadcrumbs onto the top, cover with butter flakes.
- Place onto the low rack and bake in a pre-heated microwaveoven.

16-18 Min. 60 P/230°C

After baking, let dish stand for 5-10 minutes.



Cakes, Bread, Desserts and Drinks

Switzerland

Carrot Cake

"Rueblitorte"

makes about 16 servings

Total cooking time: approx. 24 minutes

Utensils: Round baking pan
(dm. approx. 28 cm)

Ingredients

1	tsp	Butter or margarine for greasing the pan
5		Egg yolk
250	g	Sugar
250	g	Carrots, finely diced
		Juice of one lemon
250	g	Ground almonds
80	g	Flour
1	tbsp	Baking powder
5		Egg white

Preparation

1. Grease the pan.
2. Beat egg yolk and sugar with a handheld blender until creamy. Add carrots, lemon juice and almonds. Mix flour and baking powder, add to mixture, mix well.
3. Beat egg white until stiff, carefully fold in. Fill dough into the baking dish. Place onto the low rack and bake. (This recipe will make about 1,1 kg).

AUTO COOK No.6



4. Let cool in the baking dish for 5 minutes.

France

Apple Cake with Calvados

"Tarte aux pommes avec calvados"

makes about 12-16 pieces

Total cooking time: approx. 26 minutes

Utensils: Spring form (dm. approx. 28 cm)

Ingredients

200	g	Flour
1	tsp	Baking powder
100	g	Sugar
1	pck.	Vanilla sugar
1	pinch	Salt
1		Egg
3-4		Drops Bitter almond flavor
125	g	Butter
1	tsp	Butter or margarine for greasing the pan
50	g	Chopped hazelnuts
600	g	Apples (Boscop, approx. 3-4 pieces)
		Cinnamon
2		Eggs
1	pinch	Salt
4	tbsps	Sugar
1	pck.	Vanilla sugar
4	tbsps	Calvados (apple brandy)
1½	tbsps	Food starch
125	g	Crème double
		Powdered sugar for dusting

Preparation

1. Mix flour and baking powder. Mix sugar, vanilla sugar, salt, egg, bitter almond flavor and butter. Add to flour mixture and knead with the kneading attachment of a handheld blender. Cover the dough and stand in a cool place for 30 minutes.

2. Grease the pan, roll the dough between two layers of foil and place into the pan. Form an edge of about 3 cm high.
3. Evenly spread hazelnuts onto the dough.
4. Peel, core and quarter the apples, cut into thin slices. Place apple slices in an overlapping pattern onto the hazelnuts, thinly dust with cinnamon.
5. Separate eggs. Beat egg whites until stiff, add a dash of salt and 1 Tbls. sugar. Beat egg yolk, rest of the sugar and vanilla bean until foamy. Add Calvados, food starch and Crème double, carefully fold in. Fold the beaten egg whites in this mixture and evenly spread on top of the apple slices. Place onto the low rack and bake. (This recipe will make about 1.3 kg).

AUTO COOK No.6



Tip:

Let the cake cool in the baking pan, dust with powdered sugar just prior to serving.

Germany

Cheese Cake

makes about 12-16 servings

Total cooking time: approx. 43-47 minutes

Utensils: Spring form (dm. approx. 28 cm)

Ingredients

250	g	Flour
1	tsp	Baking powder (3 g)
125	g	Butter or margarine
30	g	Sugar
1		Egg yolk
1-2	tbsps	Water
1	tsp	Butter or margarine for greasing the pan
750	g	Curd, 20% fat content
300	g	Sugar
3		Egg yolk
1	pck.	Pudding powder vanilla (40 g)
125	ml	Milk
		Juice of ½ lemon
30	g	Raisins, washed
4		Egg white

Preparation

1. Mix flour and baking powder. Add butter, sugar, egg yolk and water, knead with a handheld blender. Cover the dough and stand in a cool place for 30 minutes.
2. Grease the pan, roll the dough and place into the pan. Slightly pull up an edge. Pierce the dough with a fork several times, pre-bake the dough on the low rack.

11-13 Min.



30 P/230°C

3. Mix the curd, sugar, egg, pudding powder, milk, lemon Juice and raisins.
4. Beat egg white until stiff, carefully fold in. Evenly spread the curd mixture onto the dough. Place onto the low rack and bake.

32-34 Min.



30 P/160°C

5. Let the cheese cake cool off, remove from baking pan.



Cakes, Bread, Desserts and Drinks

France

Pear Tart

"Tarte aux poires"

makes about 12-14 servings

Total cooking time: approx. 18-21 minutes.

Utensils: Round baking pan (dm. approx. 28 cm)
Bowl with cover (2 l contents)
Small bowl with cover

Ingredients

150 g Flour
75 g Butter or margarine
30 g Powdered sugar
1 pinch Salt
1 Egg
1 tsp Butter or margarine for greasing the pan
250 ml Milk
1 pinch Salt
2 Egg yolk
20 g Sugar
½ pck. Vanilla sugar (5 g)
1 tbsp Food starch
540 g Pears from a jar, drip dried
120 g Gooseberry jam
1 tbsp Candied fruits
1 tbsp Shaved almonds

Preparation

1. Knead flour, butter, powdered sugar, salt and egg yolk with the kneading attachment of a handheld blender to form a dough. Cover and place in a cool place for 30 minutes.
2. Grease the baking pan. Roll the dough and place into the pan. Pull up the edges. Pierce the dough several times with a fork.
Place onto the low rack and bake.

14-16 Min. 20 P/230°C

3. Remove the dough from the baking pan, set onto a backing rack to cool completely.
4. Put milk and salt into a bowl, cover and heat.

approx. 2 Min. 100 P

5. Stir the egg yolk, sugar and vanilla sugar, until it forms a light-colored cream. Add the starch, mix well. Slowly add the hot milk. Pour this mixture back into the bowl, cover and heat. Stir occasionally and after cooking is finished.

1-2 Min. 100 P

6. Baste the dough with the cream. Evenly place pears on top. Put gooseberry jam into the small bowl, cover and heat.

approx. 1 Min. 100 P

7. Sprinkle over pears, garnish with the candied fruits and shaved almonds.

Tip:

You should place the cream and pears on the dough only shortly before serving, otherwise it might soak up the moisture.

Germany

Four-Fruit-Cake

makes about 12-16 servings

Total cooking time: approx. 20-24 minutes.

Utensils: Round fruit cake pan (dm. approx. 28 cm)
Two bowls with cover (2 l contents)

Ingredients

75 g Butter or margarine
75 g Sugar
1 tsp Vanilla flavor
2 Eggs
150 g Flour
1 tsp Baking powder (3 g)
4 tbsps Milk
1 tsp Butter or margarine to grease the pan
150 g Almond paste base
½ pck. Pudding powder vanilla (20 g)
2 tbsps Sugar (20 g)
250 ml Milk
1 Onions (100 g), in slices
50 g Seedless grapes, cut in half
150 g Mandarin-Oranges, from a jar, drip dried
100 g Peaches, sliced, from a jar, drip dried
1 pck. Glazing powder (11 g), clear
250 ml Clear fruit juice

Preparation

1. Beat butter, sugar, vanilla flavor and egg yolk with a handheld blender for about 3 minutes until creamy. Mix flour and baking powder. Alternately mix flour and milk into the butter mixture.
2. Grease the pan and spread the dough evenly into the pan. Place on the low rack and bake.

13-15 Min. 20 P/230°C

Remove the cake from the baking pan and let it cool of.

3. Roll out the almond paste between two foils, to the size of the cake bottom. Place on top of the cake bottom
4. Add pudding powder, sugar and milk into bowl. Stir until it is free of clumps, cover and cook. Stir occasionally and after cooking is finished.

approx. 3 Min. 100 P

5. Baste the pudding onto the cake bottom. Evenly distribute the fruit on top.
6. Dissolve the glazing powder in fruit juice, pour into bowl and cook. Stir occasionally and after cooking is finished.

4-6 Min. 40 P

Distribute the glaze over the fruit, let it cool off.

Tip:

The almond paste will have a more intensive flavor, if you let the torte rest for a few hours.



Cakes, Bread, Desserts and Drinks

Germany

Curd Puff Pastries

makes about 12 servings

Total cooking time: approx. 14-16 minutes.

Utensils: Baking pan (dm. approx. 30 cm)
greaseproof paper

Ingredients

200 g	Flour
1 tsp	Baking powder (3 g)
200 g	Low-fat curd
200 g	Butter
1 pinch	Salt
	Jam for filling
1	Egg white
1	Egg yolk
1 tbsp	Water
	Powdered sugar

Preparation

1. Mix flour and baking powder. Add low-fat curd, butter and salt, knead with the kneading attachment of a handheld blender to make a dough. Cover the dough and place in a cool area for 30 minutes.
2. Roll half of the dough on a floured surface about ½ cm thick. Cut the dough into 6 squares (about 12x12 cm), place one teaspoon of jam into each center.
3. Baste the edges with egg white and fold to form a triangle.
4. Cover the baking pan with greaseproof paper. Mix egg yolk and water, baste the pastries with this mixture and place on baking pan. Bake on the low rack in the pre-heated microwave oven.

14-16 Min. 230°C

After cooling, dust with powdered sugar.

5. Prepare the other 6 puff-pastry squares and bake.

Tip:

Also try other fillings, e.g. nuts, almonds, almond paste, curd, whole fruits, fruit stew or hearty fillings.

Austria

Gugelhupf

makes about 16 servings

Total cooking time: approx. 23 minutes.

Utensils: Gugelhupf pan (dm. approx. 22 cm)

Ingredients

1 tsp	Butter or margarine to grease the pan
170 g	Butter or margarine
140 g	Powdered sugar
4	Egg yolk
40 g	Almond slivers
40 g	Raisins, washed and some shredded
	Lemon rind
4	Egg white
280 g	Flour
1 pck.	Baking powder (15 g)

Preparation

1. Grease the Gugelhupf pan.
2. Beat butter and powdered sugar with a handheld blender until creamy. Slowly add egg yolk. Add almond slivers, raisins and the shredded lemon rind. Mix well.
3. Beat egg whites until they are stiff and carefully fold in. Mix flour and baking powder, sieve and carefully fold in.
4. Fill dough into the baking pan and bake on low rack. (This recipe will make about 0.9 kg).

AUTO COOK No.6



Spain

Almond Cake

"Tarta de almendras"

makes about 12 servings

Total cooking time: approx. 26-30 minutes.

Utensils: Spring form (dm. approx. 24 cm)

Ingredients

2	Puff pastry sheet (200 g) frozen
1 tsp	Butter or margarine to grease the pan
100 g	Butter or margarine
100 g	Sugar
	Shredded skin of one lemon
4	Eggs
½ tsp	Cinnamon
200 g	Almond powder

Preparation

1. Thaw the puff pastry according to package directions. Grease the pan.
2. Roll the dough to the size of the baking pan and place into the pan. Pierce dough several times with a fork and place on the low rack in the pre-heated microwave oven.
3. Beat butter and sugar with a handheld blender until creamy. Add eggs slowly, one at a time, keep mixing. Add shredded lemon rind and cinnamon. Slowly add almonds.
4. Distribute almond mixture evenly on puff pastry, bake on low rack.

8-10 Min. 230°C

18-20 Min. 200°C

5. Sprinkle with powdered sugar and serve.



Cakes, Bread, Desserts and Drinks

Spain

Biscuit Roll "Gypsy's Arm"

"Brazo gitano" makes about 8-10 servings

Total cooking time: approx. 13½-15½ minutes.

Utensils: Square pan (approx. 24x24 cm)
greaseproof paper
Bowl with cover (2 l contents)

Ingredients

3	Eggs
90 g	Sugar
90 g	Flour
1 tsp	Baking powder (3 g)
250 ml	Milk
1	Cinnamon stick
	Peel of one lemon
75 g	Sugar
2 tbsps	Food starch (20 g)
2	Egg yolk
2 tbsps	Powdered sugar (20 g)

Preparation

1. Beat eggs and sugar with a handheld blender until creamy, until air bubbles rise. Mix flour and baking powder, sieve and carefully fold in.
2. Cover the baking pan with greaseproof paper, pour the dough into the pan and bake on the low rack in the pre-heated oven.

10-12 Min. 20 P/200°C

3. Place the biscuit cake onto a slightly wet kitchen towel, sprinkled with sugar. Carefully remove the baking parchment and immediately roll up the biscuit, starting on one side, with a kitchen towel.
4. 200 ml milk with the cinnamon stick, lemon peel and sugar into a bowl, cover and heat.

approx. 2 Min. 100 P

5. Mix the rest of the milk with the food starch and the egg yolk. Remove lemon and cinnamon stick from the milk and mix in the food starch mixture. Cover and cook. Stir occasionally and after cooking is finished.

approx. 1½ Min. 100 P

6. Unroll the biscuit roll, baste with the Crème and carefully roll back up. Dust with powdered sugar.

Austria

Linzer Bakeries

makes about 70 cookies

Total cooking time: approx. 8-10 minutes.

Utensils: Round Baking pan (dm. approx. 30 cm)
greaseproof paper

Ingredients

280 g	Flour
210 g	Butter
100 g	Sugar
100 g	Almonds, with peel, powdered
1	Egg yolk
25 ml	Lemon juice (½ lemon)
	Some cinnamon

Preparation

1. Knead all ingredients into a short crust dough, place in cool area for ½ hour.
2. Roll the dough to about 3 mm thickness, cut out round shapes of about 5 cm diameter. Place 12 cookies on a baking pan covered with greaseproof paper. Bake on the low rack in the pre-heated oven.

8-10 Min. 200°C

Let cool after baking.

Remove from the greaseproof paper only when cookies are completely dry.

3. Prepare the next 12 cookies and bake, and so on.

Tip:

These cookies are very decorative, if you dip one half of each cookie into melted semi-sweet chocolate.



Austria

Chocolate with Cream

"Schokolade mit Schlagobers" makes 1 serving

Total cooking time: approx. 1 minute

Utensils: Large cup (200 ml content)

Ingredients

150 ml	Milk
30 g	Block chocolate, shredded
30 ml	Heavy whipping cream
	Chocolate granules

Preparation

1. Pour milk into cup. Add block chocolate to the milk, stir and heat.
Stir occasionally during heating.

approx. 1 Min. 100 P

2. Beat cream until stiff, place on top of chocolate, garnish with chocolate granules and serve.



Austria

Vienna Milk Coffee

makes 1 serving

Total cooking time: approx. 1-1½ minutes

Utensils: Large cup (200 ml content)

Ingredients

1	Egg yolk
1 tbsp	Sugar
75 ml	Milk
75 ml	Water
2 tps	Instant coffee
20 ml	Rum

Preparation

1. Add all ingredients except rum into cup, stir well.
Heat, stirring once during cooking.

1-1½ Min. 100 P

2. Add rum to the hot drink.



Cakes, Bread, Desserts and Drinks

Netherlands

Fire Drink

"Vuurdrank"

makes 10 servings

Total cooking time: approx. 8-10 minutes


Utensils: Bowl with cover (2 l contents)

Ingredients

500 ml	White wine
500 ml	Red wine, dry
500 ml	Rum, 54 Vol.-%
1	Untreated Orange
3	Cinnamon sticks
75 g	Sugar
10 tsps	Kluntjes (Rock sugar)

Preparation

1. Pour alcohol into a bowl. Thinly peel orange, add orange peel, cinnamon and sugar to the alcohol. Cover and heat.

8-10 Min.  100 P

Remove the orange peel and the cinnamon.

Place one teaspoon rock sugar into each Grog glass, pour Fire Drink on top and serve.



Great Britain

Raspberry Jam

Raspberry Jam

makes 30 servings

Total cooking time: approx. 10-12 minutes

Utensils: Bowl with cover (2 l contents)

Jam glasses
preserving film

Ingredients

500 g	Raspberries
250 g	Preserving sugar (2:1)

Preparation

1. Wash raspberries, mix, cover and heat.

4-5 Min.  100 P

2. Stir, cover again and cook.

6-7 Min.  30 P

3. Thoroughly clean jam glasses, fill with jam and immediately close with preserving film.

Tip:

You can also use a frozen and thawed fruits.



Switzerland

Apple Chutney with Raisins

makes 30 servings

Total cooking time: approx. 22-28 minutes


Utensils: Bowl with cover (3 l contents)
Small canning or jam glasses
preserving film

Ingredients

4	Hard apples (500 g), peeled and diced
1	Zucchini (200 g), diced
3	Onion (150 g), finely chopped
50 g	Plums, dried and pitted
250 g	Raisins
1 tsp	Juniper berries
	Salt
	Black pepper, ground
150 ml	White wine
100 ml	Apple vinegar
250 g	Sugar

Preparation

1. Place all ingredients except sugar into a bowl, cover and heat. Stir once during cooking.

9-11 Min.  100 P

2. Mix sugar and fruits, cover and continue to cook. Stir occasionally and after cooking is finished.

3-5 Min.  100 P

10-12 Min.  40 P

3. Clean and dry glasses thoroughly. Fill glasses with chutney and immediately close with preserving film.

Tip:

This chutney is great when served with meat fondue, baked meat and rice dishes.



AC Line Voltage	: 230 V, 50 Hz, single phase
Distribution line fuse/circuit breaker	: Minimum 16 A
AC Power required:	Microwave : 1.34 kW (steady)
	: 1.88 kW (initial)
	Grill : 2.8 kW
	Grill/Microwave : 3.18 kW
	Convection : 2.8 kW
	Convection/Microwave : 3.33 kW
	Off Mode (Energy Save Mode) : less than 0.5W
Output power:	Microwave : 1050 W (IEC 60705)
	Grill heating elements : 1300 W (650 W x2)
	Convection : 1450 W
Microwave Frequency	: 2450 MHz (Group 2/Class B) *
Outside Dimensions:	R-940 : 550 mm (W) x 368 mm (H) x 537 mm (D) **
	R-94ST : 550 mm (W) x 368 mm (H) x 535 mm (D) **
Cavity Dimensions	: 375 mm (W) x 272 mm (H) x 395 mm (D) ***
Oven Capacity	: 40 litres ***
Turntable	: ø362 mm, ceramic
Weight	: 20 kg
Oven lamp	: 25 W/240 - 250 V

* This Product fulfils the requirement of the European standard EN55011.
In conformity with this standard, this product is classified as group 2 class B equipment.
Group 2 means that the equipment intentionally generates radio-frequency energy in the form of electromagnetic radiation for heating treatment of food.
Class B equipment means that the equipment suitable to be used in domestic establishments.

** The depth does not include the door opening handle

*** Internal capacity is calculated by measuring maximum width, depth and height.
Actual capacity for holding food is less.

As part of a policy of continuous improvement, we reserve the right to alter design and specifications without notice.

GB Information on Disposal for Users (private households)



Attention:
Your product is marked with this symbol. It means that used electrical and electronic products should not be mixed with general household waste. There is a separate collection system for these products.

1. In the European Union

Attention: If you want to dispose of this equipment, please do not use the ordinary dust bin! Used electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment.

Following the implementation by member states, private households within the EU states may return their used electrical and electronic equipment to designated collection facilities free of charge*. In some countries* your local retailer may also take back your old product free of charge if you purchase a similar new one.

* Please contact your local authority for further details.

If your used electrical or electronic equipment has batteries or accumulators, please dispose of these separately beforehand according to local requirements.

By disposing of this product correctly you will help ensure that the waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.

2. In other Countries outside the EU

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

For Switzerland: Used electrical or electronic equipment can be returned free of charge to the dealer, even if you don't purchase a new product. Further collection facilities are listed on the homepage of www.swico.ch or www.sens.ch.

- SEULEMENT VALIDE POUR L'ALLEMAGNE ET L'AUTRICHE • SLECHTS GELDIG VOOR DUITSLAND EN OOSTENRIJK •
- SOLTANTO VALIDO PER LA GERMANIA E L'AUSTRIA • SOLAMENTE VÁLIDO PARA ALEMANIA Y AUSTRIA •
- ONLY VALID FOR GERMANY AND AUSTRIA •

Vorgehensweise bei Vorliegen eines Produktmangels:

- Wurde Ihr Gerät durch einen Fachbetrieb mit einem von Sharp genehmigten Einbaurahmen oder rahmenlos ein-/untergebaut, können Sie die unter Ziffer 1. aufgeführten Garantieansprüche im Rahmen des Quick 48 Vor-Ort-Service geltend machen und sich direkt an den KUNDEN-SERVICE wenden oder Sachmängel gegenüber Ihrem Verkäufer geltend machen.
- Für alle übrigen Geräte können Sie die unter Ziffer 2. aufgeführten Garantieansprüche ohne Quick 48 Stunden Vor-Ort-Service oder Sachmängel gegenüber Ihrem Verkäufer geltend machen.



1. Garantie mit Quick 48 Stunden Vor-Ort-Service

Gilt für Deutschland und Österreich

Haushalts-Mikrowellengeräte im Quick 48 Stunden Vor-Ort-Service

Sehr geehrter Sharp Kunde,

alle ein-/ untergebauten Haushalts-Mikrowellengeräte, die durch einen Fachbetrieb fachgerecht mit einem von SHARP genehmigten Einbaurahmen oder rahmenlos ein-/ bzw. untergebaut worden sind, werden im Quick 48 Vor-Ort-Service abgewickelt. Die in dieser Garantie beschriebenen Ansprüche stehen Ihnen zusätzlich neben den gesetzlichen Sachmängelansprüchen gegen Ihren Verkäufer zu.

Umfang der Garantie: Sollte Ihr Mikrowellengerät trotz sorgfältiger Herstellung und Endkontrolle einen Mangel aufweisen, können Sie innerhalb der Garantiezeit, Garantieleistungen gegen Sharp Electronics (Europe) GmbH in Anspruch nehmen. Diese stehen Ihnen zu, wenn ein herstellungsbedingter Material- und/oder Verarbeitungsmangel (nachfolgend „Mangel“) bei dem Mikrowellengerät oder Teilen davon - mit Ausnahme der Garraum-Glühlampe - innerhalb von 24 Monaten auftritt. Die Garantie umfasst nicht Mängel, die durch unsachgemäße Behandlung, Bedienungsfehler oder durch Fremdeinwirkung entstanden sind. Transportschäden bei Neugeräten müssen Sie bei Ihrem Verkäufer geltend machen. Die Garantiefrist von 24 Monaten beginnt mit dem Tag, an dem Sie das fabrikneue Gerät von einem Händler gekauft haben. Die Erbringung von Garantieleistungen verlängert nicht die Garantiezeit.

Garantieleistungen: Sharp Electronics (Europe) GmbH erfüllt seine Garantieverpflichtungen für Mängel durch kostenlose Reparatur und einen **Quick 48 Stunden Vor-Ort-Service**. Etwa anfallende Transportkosten innerhalb Deutschlands und Österreich übernehmen wir.

Im Quick 48 Stunden Vor-Ort-Service werden alle Reklamationen, die montags bis freitags zwischen 8:00 und 18:00 Uhr beim Quick 48 Deutschland, **Tel.: 0180 / 5 23 46 74** *(0,14 €/Min. aus dem deutschen Festnetz, max. 0,42 €/Min. aus dem deutschen Mobilfunknetz) und in Österreich **Tel.: 0820 / 500 820** ***(€ 0,145/Min) eingehen, ab dem darauffolgenden Werktag gerechnet, im Regelfall innerhalb 48 Stunden bei Ihnen im Vor-Ort-Service repariert.

Geltendmachung der Garantie: Der Mangel des Gerätes muss innerhalb der Garantiefrist unter Angabe des Kaufdatums, der Modellbezeichnung und der Seriennummer des Gerätes unter den oben aufgeführten Telefonnummern geltend gemacht werden. Bei der Vor-Ort-Reparatur ist dann der Kaufbeleg, aus dem sich das Kaufdatum, die Modellbezeichnung und die Seriennummer des Gerätes ergibt, vorzulegen.

Achtung:

Wird dieser Service für von Ihnen selbst ein-/untergebaute Geräte in Anspruch genommen, sind für Aus- und Einbau, Fahrzeit und Km die entstehenden Kosten von Ihnen zu tragen!

Bitte erkundigen Sie sich vor Anforderung des Kundendienstes bei diesem über die anfallenden Kosten. Den für Sie nächstgelegenen Kundendienst nennt Ihnen gern unsere o.g. Hotline.

Als Nachweis für Sachmängel-/ Garantiarbeiten dient Ihr Kaufbeleg / Rechnung.

Selbstverständlich können Sie unseren QUICK 48 Vor-Ort-Service für Mikrowellengeräte auch nach Ablauf der Verjährungsfristen für Sachmängel-/Garantiefristen in Anspruch nehmen, dann jedoch gegen Aufwandsberechnung des jeweiligen Kundendienstes.

Garantiegeber: SHARP Electronics (Europe) GmbH, Sonninstrasse 3, 20097 Hamburg
www.sharp.de

- SEULEMENT VALIDE POUR L'ALLEMAGNE ET L'AUTRICHE • SLECHTS GELDIG VOOR DUITSLAND EN OOSTENRIJK •
 • SOLTANTO VALIDO PER LA GERMANIA E L'AUSTRIA • SOLAMENTE VÁLIDO PARA ALEMANIA Y AUSTRIA •
 ONLY VALID FOR GERMANY AND AUSTRIA •

Vorgehensweise bei Vorliegen eines Produktmangels:

- Wurde Ihr Gerät durch einen Fachbetrieb mit einem von Sharp genehmigten Einbaurahmen oder rahmenlos ein-/untergebaut, können Sie die unter Ziffer 1. aufgeführten Garantieansprüche im Rahmen des Quick 48 Vor-Ort-Service geltend machen und sich direkt an den KUNDEN-SERVICE wenden oder Sachmängel gegenüber Ihrem Verkäufer geltend machen.
- Für alle übrigen Geräte können Sie die unter Ziffer 2. aufgeführten Garantieansprüche ohne Quick 48 Stunden Vor-Ort-Service oder Sachmängel gegenüber Ihrem Verkäufer geltend machen.

2. Garantie ohne Quick 48 Stunden Vor-Ort-Service

Gilt für Deutschland und Österreich

Haushalts - Mikrowellengeräte

Wichtiger Endkunden – Hinweis: Serviceabwicklung nur über den Verkäufer. Die in dieser Garantie beschriebenen Ansprüche stehen Ihnen zusätzlich neben den gesetzlichen Sachmängelanprüchen gegen Ihren Verkäufer zu.

Sehr geehrter SHARP Kunde,

SHARP: Geräte sind Markenartikel, die mit Präzision und Sorgfalt nach modernen Fertigungsmethoden hergestellt werden. Bei sachgemäßer Handhabung und unter Beachtung der Bedienungsanleitung wird Ihnen Ihr Gerät lange Zeit gute Dienste leisten. Das Auftreten von Fehlern ist aber nie auszuschließen. Sollte Ihr Gerät innerhalb der gesetzlichen oder mit Ihrem Verkäufer vereinbarten Verjährungsfristen für Sachmängel-/ Garantiefristen einen Mangel aufweisen und das Gerät wurde **nicht von Ihrem Handelspartner ein-/untergebaut**, so wenden Sie sich bitte an den Verkäufer, bei dem Sie das Gerät erworben haben und geben Sie das defekte Gerät dort ab, denn dieser ist Ihr Ansprechpartner für Sachmängel.

Umfang der Garantie: Sollte Ihr Mikrowellengerät trotz sorgfältiger Herstellung und Endkontrolle einen Mangel aufweisen, können Sie innerhalb der Garantiezeit, Garantieleistungen gegen Sharp Electronics (Europe) GmbH in Anspruch nehmen. Diese stehen Ihnen zu, wenn ein herstellungsbedingter Material- und/oder Verarbeitungsmangel (nachfolgend „Mangel“) bei dem Mikrowellengerät oder Teilen davon - mit Ausnahme der Garraum-Glühlampe - innerhalb von 24 Monaten auftritt. Die Garantie umfasst nicht Mängel, die durch unsachgemäße Behandlung, Bedienungsfehler oder durch Fremdeinwirkung entstanden sind. Transportschäden bei Neugeräten müssen Sie bei Ihrem Verkäufer geltend machen. Die Garantiefrist von 24 Monaten beginnt mit dem Tag, an dem Sie das fabrikneue Gerät von einem Händler gekauft haben. Die Erbringung von Garantieleistungen verlängert nicht die Garantiezeit.

Garantieleistung:

Sharp Electronics (Europe) GmbH erfüllt seine Garantieverpflichtung für Mängel nach seiner Wahl durch kostenlose Reparatur oder durch Austausch des mangelhaften Gerätes gegen ein mangelfreies. Etwa anfallende Transportkosten innerhalb Deutschlands und Österreich werden von uns übernommen.

Geltendmachung der Garantie:

Um die Garantie in Anspruch nehmen zu können, benötigen Sie den Kaufbeleg (Rechnung, Quittung) aus dem sich das Kaufdatum, die Modellbezeichnung und Seriennummer des Gerätes ergibt. Der Mangel des Gerätes muss innerhalb der Garantiefrist von Ihnen gegenüber einem Sharp Service-Partner oder einem autorisierten Händler von Sharp Electronics (Europe) GmbH geltend gemacht werden. Bei weiteren Fragen wenden Sie sich bitte von montags bis freitags zwischen 8:00 und 18:00 Uhr an **unsere Service-Hotline 01805-29 95 29 *** (0,14 €/Min. aus dem deutschen Festnetz, max. 0,42 €/Min. aus dem deutschen Mobilfunknetz)

Selbstverständlich können Sie unseren Kundendienst für Sharp-Mikrowellengeräte auch nach Ablauf der Verjährungsfristen für Sachmängel-/Garantiefristen in Anspruch nehmen, dann jedoch gegen Aufwandsberechnung des jeweiligen Kundendienstes.

Garantiegeber: SHARP Electronics (Europe) GmbH, Sonninstrasse 3, 20097 Hamburg

www.sharp.de

• ADRESSES D'ENTRETIEN • ONDERHOUDSADRESSEN • CENTRI DI ASSISTENZA • DIRECCIONES DE SERVICIO •

BELGIUM - <http://www.sharp.be>

En cas d'une réclamation concernant une four a micro-onde SHARP, nous vous prions de vous adresser à votre spécialiste ou à une adresse des SHARP Services suivantes.

Indien uw magnetron problemen geeft kunt u zich wenden tot uw dealer of een van de onderstaande Sharp service centra.

SHARP ELECTRONICS, Phone: 0900-10158

AVTC, Kleine Winkellaan 54, 1853 Strombeek-Bever, 02/2674019 / **ETS HENROTTE**, Rue Du Campinaire 154, 6240 Farciennes, 071/396290 / **Nouvelle Central Radio (N.C.R.)**, Rue des Jongs 15 L-1818 HOWALD, 00352404078 / **Service Center Deinze**, Kapellestraat, 95, 9800 DEINZE, 09-386.76.67

NEDERLAND - <http://www.sharp.nl>

Indien uw magnetron problemen geeft kunt u zich wenden tot uw dealer of naar onderstaand Sharp Service Centrum.

SHARP ELECTRONICS BENELUX BV, - Helpdesk -, Postbus 900, 3990 DW Houten, 0900-7427273

FRANCE - <http://www.sharp.fr> centralized hotline = 0820 856 333

En cas de réclamation pour les fours micro-ondes SHARP, nous vous prions de vous adresser à votre spécialiste ou à l'une des stations techniques agréées SHARP suivantes:

A.A.V.I. : Rue des Bourreliers - Parc des Pyramides - ZAC Moulin Lambin 2 - 59320 Hallennes Lez Haubourdin ; Tél : 0892 236 246 ; Fax : 03 20 86 20 60 / **ATELIER ROUSSEL** : 12, Bld Flandre Dunkerque - 56100 Lorient ; Tél : 02 97 83 07 41 ; Fax : 02 97 87 02 36 / **MONSIEUR SAV** : 8 Av Noël Franchini - 20090 AJACCIO ; Tél : 04 95 23 67 63 ; Fax 04 95 23 67 67 / **ELECTRONIC SERVICE PLUS** : 5, bd LOUIS XI - ZI le Menneton - 37000 Tours ; Tél : 02 47 77 90 90 ; Fax : 02 47 77 90 91 / **ELECTRO SERVICE** : 21, rue de Mulhouse - B.P 122 - 68313 Illzach ; Tél : 0820 20 10 15 ; Fax : 03 89 50 80 14 / **ELECTRO TECH** : 26, Rue Cyrano - 69003 Lyon ; Tél : 0892 691 032 ; Fax : 04 72 33 18 90 / **M.R.T.** : 1-3, rue André CITROEN - 72000 Le Mans ; Tél : 02 22 66 50 20 ; Fax : 02 22 66 50 21 / **SETELEC** : 23, Rue de l'Argillière - 76420 Bihorel les Rouen ; Tél : 02 35 60 64 39 ; Fax : 02 35 59 93 48 / **S.T.E.** : 3, chemin de l'Industrie - 06110 Le Cannet Rocheville ; Tél : 04 93 46 05 00 ; Fax : 04 93 46 51 18 / **TECH SERVICE** : 15, rue du château de Ribaute - ZA Ribaute 2 - 31130 Quint Fonsegrives ; Tél : 05 62 57 63 90 ; Fax : 05 62 57 63 99 / **TIMO VIDEO** : 6, avenue des boutons d'or - Batiment A - Parc d'activité des petits carreaux - 94370 Sucy en Brie ; Tél : 01 43 39 08 18 ; Fax : 01 43 39 08 07

ESPAÑA - <http://www.sharp.es> customer service department telephone: 902 10 13 88

En caso de una reclamación con vuestra SHARP Microwave, preguntan por favor la casa dónde han comprado su máquina o informanse en una de las SHARP Service casas siguientes.

ANDALUCIA: JEREZ DE LA FRA.; **ELECTR. Y CLIMAT. JEDA**, Pintor Paco Toro, 5 Tel.: 956 33 64 99 / **CADIZ**: J. J. COLLADO NORIEGA, Pza. de los Porches, 6, LG-1 Tel.: 856 17 21 75 / **CORDOBA**: **CAYRO**, Hermano Juan Fdez, 15 Tel.: 957 26 35 06 / **CORDOBA (PUENTE GENIL)**: **GEISHA ELECTROCASH**, S.L, Avda. poeta Manuel Reina, 86 Tel.: 987 60 57 23 / **SERPRIEGO DE CORDOBA**: **SERPRIEGO, S. L.**, San Luis, 4 Bjo. Izda Tel.: 95 754 15 11 / **GRANADA**: **FERMASA**, Azorin, 7 Tel.: 958 25 64 77 / **GRANADA**: **SERVIGON**, Hospital de la Virgen 22 Tel.: 958 20 52 81 / **ALMUNECA**: **SERVICOSTA, S. L.**, Pza. Dr. Alvarez Riosol, 1b1 Tel.: 958 63 11 43 / **HUELVA**: **AIRSEXT HUELVA, S. L.**, Paseo de la Glorieta, 6 Tel.: 959 22 88 13 / **HUELVA**: **TELEJARA**, Polig. Polirrosa, C/A, Nave 27 Tel.: 959 22 60 74 / **JAEN**: **ELECTRO HIMEGA, S. A.**, Adarves Bajos, 4 C Tel.: 953 24 22 56 / **LINARES**: **LORENZO MARTINEZ OSUNA**, Don Luis, 10 Tel.: 953 69 52 03 / **ALHURIN DE LA TORRE**: **REMEDIOS CAMARGO ESPADA**, C/ Junco, 5 Tel.: 952 41 33 93 / **SEVILLA**: **LUIS RIVAS CALDAS**, Res. I Los Milanos-3a fase, núm. 41 Tel.: 95 451 73 55 / **SEVILLA**: **INTERSAT REPARACIONES**, Beethoven, 5 Tel.: 95 443 02 26 / **ECIJA**: **AGASOLAR**, Merinos, 15A Tel.: 95 483 04 72 / **MAIRENA DEL AJARAFE**: **VILLASANTE GARCIA JOAQUIN**, Pablo Neruda, 5, [SEVILLA] Tel.: 95 417 06 24 / **CANTILLANA**: **SERVIN CANTILLANA**, Juan XXIII, 60 Tel.: 95 573 11 69 / **DOS HERMANAS**: **ELECTRO 93 S. L.**, Melliza, 1-3 Tel.: 95 566 48 56

ARAGON: **ZARAGOZA**: **RENALES SABATER JAVIER**, Florentino Ballesteros, 17 Tel.: 976 59 01 28

ASTURIAS: **OVIEDO Y GIJON**: **PRINCIPADO CAMILO**, Avda. Santander, 12 Bajos Tel.: 985 21 28 65

BALEARES: **PALMA**: **INSTALACIONES MAES**, Son Nadal, 63B Tel.: 971 24 91 16

CANTABRIA: **SANTANDER**: **ELECTRONICA SEYMA**, Camilo Alonso Vega, 48 Tel.: 942 32 50 60

CASTILLA LA MANCHA: **ALBACETE**: **PARREÑO S. T.**, Franciscanos, 40 Tel.: 967 23 96 68 / **MOTA DEL CUERVO (CUENCA)**: **SERVI-TRASGU**, Alfaleria, 12 Tel.: 967 18 10 50 / **CIUDAD REAL**: **ELECTRONICA JOPAL**, Zarza, 2 Tel.: 926 25 68 10 / **TOLEDO**: **ELECTRONICA JOPAL**, Av. Purísima Concepción, 31 Tel.: 925 25 04 42 / **FUENSALIDA**: **ELECTRO SERVICE**, Calvo Sotelo, 15 Tel.: 925 73 07 85 / **TALAVERA DE LA REINA**: **SERVIELECTRO**, Nlta. Sra. De la Piedad, 6 Tel.: 925 81 91 81

CASTILLA Y LEON: **AVILA**: **ANTONIO SAN SEGUNDO**, Soria, 6 Tel.: 920 22 33 21 / **LEON**: **TECNSERV ELECTRO, S. L.**, Relojero Losada, 25 Tel.: 987 22 77 87 / **LEON**: **PROSAT**, Pza. Doce Martires, 5 Tel.: 987 20 34 10 / **OLVEGA (SORIA)**: **TECO ELECTRONICA**, Reyes Catolicos, 1 Tel.: 976 64 58 54 / **VALLADOLID**: **TEODORO NEGRO**, Glorieta del Descubrimiento, 4 Tel.: 983 39 17 81

CATALUÑA: **BARCELONA**: **4 EN 1 REPARACIONES**, Taquígrafo Martí, 19 Tel.: 93 430 97 26 / **BARCELONA**: **DOMOTICA**, Ada. Diagonal, 296 Tel.: 93 244 88 66 / **TERRASSA**: **ASISTEL STORY, S. L.**, Pedrell, 9 Bjos Tel.: 93 789 96 47 / **MALGRAT DE MAR**: **SERVEI TECNIC JOYMA**, Avda. Virgen de Montserrat, 19 Tel.: 93 765 36 33 / **MANRESA**: **ELDE**, Bruc, 55 Tel.: 93 872 85 42 / **VILAFRANCA DEL PENEDÉS**: **FRED VILAFRANCA**, Progrès 42 Tel.: 93 8904852 / **VIC**: **SERVEIS ASS.T. JUVANTENY**, Nou, 109-111 Tel.: 93 886 20 23 / **IGUALADA**: **JACINTO SANCHEZ NARVAEZ**, Clavells, 6 Tel.: 93 805 40 32 / **TREMP**: **JORDI DURO FORT**, Industria, 6-3 Tel.: 973 65 25 15 / **TARRAGONA**: **SERTECS, S. C.**, Caputxins, 22 Tel.: 977 22 18 51 / **CALAFEL**: **MAÑE GRIFOLLS, S.C.P.**, Jesus, 21 Tel.: 977 69 18 01 / **EURO**: **TECNIKS**, Monasterio de Poblet, 4 Tel.: 977 32 24 89 / **TORTOSA**: **ELECTRO SERVEI, C. B.**, Passeig Moreira, 10 Tel.: 977 51 04 42 / **GERONA**: **SUREDA I ASSOCIATS**, Francesc Artau, 2 Tel.: 972 23 65 88 / **PALAFRUGELL**: **NEW MARESA**, SURENA BERTAN 23 Tel.: 972 30 44 54

EXTREMADURA: **ALMENDRALEJO**: **INDALICIO AMAYA**, Carreras, 11 Tel.: 924 67 25 17 / **PUEBLA SANCHO PEREZ**: **ELECTRONICA CENTENO**, Avda. de Zafra, Bl. 1 Tel.: 924 55 27 03 / **CACERES**: **TECNOSATV**, Bellavista, 2 Bjo Tel.: 927 24 11 68

GALICIA: **CEE**: **RAMSAT**, Avda. Finisterre, 117-8 Tel.: 981 74 74 61 / **SANTIAGO DE COMPOSTELA**: **VICTOR PEREZ GUINTELA**, Entrerios, 35 Tel.: 981 58 43 92 / **BURELA**: **S. T. PASFER**, Avda. Arcadio Pardiñas, 77 bj Tel.: 696 17 86 45 / **PONTEVEDRA**: **MONT. Y SERV. TECN. IMAGSON**, Loureiro crespo, 43 Tel.: 986 84 16 36 / **VIGO**: **ALVIMO, S. A.**, Conde de Torrecederia, 92 Tel.: 986 29 93 01 / **LUGO**: **PROSAT**, Obispo Rouco Varela, 52-54, Bjo. Tel.: 982 51 22 35

LA RIOJA: **LOGROÑO**: **ROBERTO AGUADO GIL, C/.** Velez de Guevara, 26 Bjo Tel.: 941 25 25 53

• ADRESSES D'ENTRETIEN • ONDERHOUDSADRESSEN • CENTRI DI ASSISTENZA • DIRECCIONES DE SERVICIO •

ALCORCÓN; UGENASA, La Canaleja, 4 Tel.: 91 611 52 51

MURCIA; MURCIA; ELECTROSERVICIOS SEBA, Isaac Albeniz, 4 bjos. Tel.: 968 29 85 93 / **MURCIA; ELECT. SERV. PLAZA**, Sierra de Peñarubia, 7 Tel.: 968 27 40 14 / **MURCIA; ANGEL LOPEZ ALCARAZ**, Sierra del Espartal, 6 [Edif. Ana] Tel.: 968 29 39 10 / **CARTAGENA; R.E.G. C.B.**, Ramon y Cajal, 27 Tel.: 968 51 00 06 / **LORCA; JOSE LUIS HARO CALVO**, La Seda, 8 Edif. Las Terrazas Tel.: 968 47 18 79

NAVARRA; PAMPLONA; ALEXSU TECNOTRADE, S.L., C/ Ciudad de Sueca, 10 [bajo] Tel.: 948 14 47 00

PAIS VASCO; BILBAO; DANIEL NEGREDO, Padre Pernet, 8 Tel.: 94 411 22 82 / **PORTUGALETE; ONOFRE COLLANTES**, Ortuño Alango, 7 Tel.: 94 483 21 22 / **ERANDIO; TELNOR**, Plaza Juanene, 5 Tel.: 94 417 04 97

COMUNIDAD DE VALENCIA; ALICANTE; JOAQUIN SAEZ, Escorpión, 6-8 Tel.: 96 528 73 33 / **ALICANTE; LUIS SOLER REQUENA**, Sto. Domingo, 16 Bjo Tel.: 965 92 02 95 / **ALCOY; IMECLIMA, S.L.** Cavaller Merita, 21 Tel.: 96 554 21 10 / **ELCHE (ALICANTE); TRINITARIO GEA, C. B.**, Jaime Pomares Javaloyes, 47 Tel.: 96 545 56 25 / **ORIHUELA; ELECTROSERV. PLAZA**, Monseñor Espinosa, 3 Tel.: 96 674 18 67 / **SAX; E. ELECTROSAX, S.L.** Rio Turia, 1 Bjos. Tel.: 96 547 42 32 / **ALTEA; MIQUEL REIG**, Camí del Pontet, 6 Tel.: 965 84 08 34 / **TORREVIEJA; MATEO BELDA, S.L.** Concordia, 120 Tel.: 96 670 49 78 / **CASTELLON; ASISTE, S. L.** Avda. Valencia, s/n Pol. "Los Cipresses", Nave 19 Tel.: 964 21 57 69 / **GANDIA; TECNITOT REPARACIONES I MANTENIMENTS, S.L.** C/ Primer de Maig, 51 Tel.: 96 286 04 69

SWITZERLAND - <http://www.sharp.ch>

Sharp Electronics (Schweiz) AG, Moosstrasse 2, CH-8803 Rüschlikon, +41 1 846 61 11

SWEDEN - www.sharp.se Helpdesk 013 35 39 00

Assist Workshop Linköping, Roxviksgatan 8, 582 73 Linköping, 013-35 62 50 / **Tomi Elektronik**, Svandammsplan 2, 126 47 Hägersten, 08 18 61 70 / **Tv Trim**, St Pauligatan 37, 416 90 Göteborg, 031-84 72 00

NORWAY - www.sharp.no Helpdesk +46 13 35 39 00

Service Eksperten, Trondheimsvn 436B, N-0962 Oslo, 22 90 19 30

ICELAND

Ormsson, Sidumuli 9, 108 Reykjavik, 533 28 00

DENMARK - www.sharp.dk Helpdesk +46 13 35 39 00

Assist Workshop Linköping, Roxviksgatan 8, 582 73 Linköping, Sweden +46 13 35 62 50.

SUOMI - www.sharp.fi Helpdesk 09 14 61 500

Theho Video Oy, Niittyläntie 3, SF-0620 Helsinki, 09 14 61 500

SHARP



SHARP ELECTRONICS (Europe) GmbH
Sonninstraße 3, D-20097 Hamburg
Germany

TCADCB080WRRZ-H1 1

Impreso en Tailandia
Printed in Thailand