

SINEAX DME 440 with RS 485 interface

Programmable multi-transducer



for the measurement of electrical variables in heavy-current power system



Application

SINEAX DME 440 (Fig. 1) is a programmable transducer with a **RS 485 bus interface (MODBUS®)**. It supervises several variables of an electrical power system **simultaneously** and generates 4 proportional analogue output signals.

The **RS 485** interface enables the user to determine the number of variables to be supervised (up to the maximum available). The levels of all internal energy meters that have been configured (max. 4) can also viewed. Provision is made for programming the SINEAX DME 440 via the bus. A standard EIA 485 interface can be used, but there is no dummy load resistor for the bus.

The transducers are also equipped with an **RS 232** serial interface to which a PC with the corresponding software can be connected for programming or accessing and executing useful ancillary functions. This interface is needed for bus operation to configure the device address, the Baud rate and possibly increasing the telegram waiting time (if the master is too slow) defined in the MODBUS® protocol.

The usual methods of connection, the types of measured variables, their ratings, the transfer characteristic for each output and the type of internal energy meter are the main parameters that can be programmed.

The ancillary functions include a power system check, provision for displaying the measured variable on a PC monitor, the simulation of the outputs for test purposes and a facility for printing name-plates.

The transducer fulfils all the essential requirements and regulations concerning electromagnetic compatibility (**EMC**) and **safety** (IEC 1010 resp. EN 61 010). It was developed and is manufactured and tested in strict accordance with the **quality assurance standard** ISO 9001.

Features / Benefits


- **Simultaneous measurement of several variables of a heavy-current power system / Full supervision of an asymmetrically loaded four-wire power system, rated current 1 to 6 A, rated voltage 57 to 400 V (phase-to-neutral) or 100 to 693 V (phase-to-phase)**

Measured variables	Output	Types
Current, voltage (rms), active/reactive/apparent power $\cos\varphi$, $\sin\varphi$, power factor RMS value of the current with wire setting range (bimetal measuring function) Slave pointer function for the measurement of the RMS value IB Frequency Average value of the currents with sign of the active power (power system only)	4 analogue outputs and bus RS 485 (MODBUS)	DME 440
	2 analogue outputs and 4 digital outputs or 4 analogue outputs and 2 digital outputs see data sheet DME 424/442-1 Le	DME 424 DME 442
	Data bus LON see data sheet DME 400-1 Le	DME 400
Without analogue outputs, with bus RS 485 (MODBUS) see data sheet DME 401-1 Le PROFIBUS DP see data sheet DME 406-1 Le		DME 401
		DME 406



Fig. 1. SINEAX DME 440 in housing T24, clipped onto a top-hat rail.

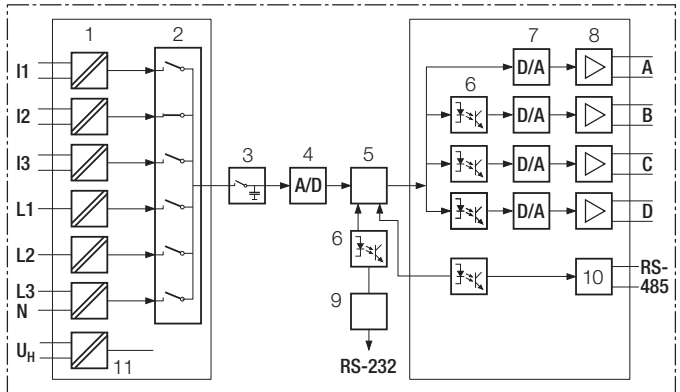- For all heavy-current power system variables
- 4 analogue outputs
- Input voltage up to 693 V (phase-to-phase)
- Universal analogue outputs (programmable)
- High accuracy: U/I 0.2% and P 0.25% (under reference conditions)
- 4 integrated energy meters, storage every each 203 s, storage for: 20 years
- Windows software with password protection for programming, data analysis, power system status simulation, acquisition of meter data and making settings
- DC-, AC-power pack with wide power supply tolerance / universal
- Provision for either snapping the transducer onto top-hat rails or securing it with screws to a wall or panel



- 1 = Input transformer
- 2 = Multiplexer
- 3 = Latching stage
- 4 = A/D converter
- 5 = Microprocessor
- 6 = Electrical insulation
- 7 = D/A converter
- 8 = Output amplifier / Latching stage
- 9 = Programming interface RS-232
- 10 = Bus RS 485 (MODBUS)
- 11 = Power supply

Fig. 2. Block diagram.

SINEAX DME 440 with RS 485 interface

Programmable multi-transducer

Symbols

Symbols	Meaning	Symbols	Meaning (Continuation)
X	Measured variable	Q	Reactive power of the system $Q = Q1 + Q2 + Q3$
X0	Lower limit of the measured variable	Q1	Reactive power phase 1 (phase-to-neutral L1 – N)
X1	Break point of the measured variable	Q2	Reactive power phase 2 (phase-to-neutral L2 – N)
X2	Upper limit of the measured variable	Q3	Reactive power phase 3 (phase-to-neutral L3 – N)
Y	Output variable	S	Apparent power of the system $S = \sqrt{I_1^2 + I_2^2 + I_3^2} \cdot \sqrt{U_1^2 + U_2^2 + U_3^2}$
Y0	Lower limit of the output variable	S1	Apparent power phase 1 (phase-to-neutral L1 – N)
Y1	Break point of the output variable	S2	Apparent power phase 2 (phase-to-neutral L2 – N)
Y2	Upper limit of the output variable	S3	Apparent power phase 3 (phase-to-neutral L3 – N)
U	Input voltage	Sr	Rated value of the apparent power of the system
Ur	Rated value of the input voltage	PF	Active power factor $\cos\varphi = P/S$
U 12	Phase-to-phase voltage L1 – L2	PF1	Active power factor phase 1 $P1/S1$
U 23	Phase-to-phase voltage L2 – L3	PF2	Active power factor phase 2 $P2/S2$
U 31	Phase-to-phase voltage L3 – L1	PF3	Active power factor phase 3 $P3/S3$
U1N	Phase-to-neutral voltage L1 – N	QF	Reactive power factor $\sin\varphi = Q/S$
U2N	Phase-to-neutral voltage L2 – N	QF1	Reactive power factor phase 1 $Q1/S1$
U3N	Phase-to-neutral voltage L3 – N	QF2	Reactive power factor phase 2 $Q2/S2$
UM	Average value of the voltages $(U1N + U2N + U3N) / 3$	QF3	Reactive power factor phase 3 $Q3/S3$
I	Input current	LF	Power factor of the system $LF = \text{sgn}Q \cdot (1 - PF)$
I1	AC current L1	LF1	Power factor phase 1 $\text{sgn}Q1 \cdot (1 - PF1)$
I2	AC current L2	LF2	Power factor phase 2 $\text{sgn}Q2 \cdot (1 - PF2)$
I3	AC current L3	LF3	Power factor phase 3 $\text{sgn}Q3 \cdot (1 - PF3)$
Ir	Rated value of the input current	c	Factor for the intrinsic error
IM	Average value of the currents $(I1 + I2 + I3) / 3$	R	Output load
IMS	Average value of the currents and sign of the active power (P)	Rn	Rated burden
IB	RMS value of the current with wire setting range (bimetal measuring function)	H	Power supply
IBT	Response time for IB	Hn	Rated value of the power supply
BS	Slave pointer function for the measurement of the RMS value IB	CT	c.t. ratio
BST	Response time for BS	VT	v.t. ratio
φ	Phase-shift between current and voltage		
F	Frequency of the input variable		
F _n	Rated frequency		
P	Active power of the system $P = P1 + P2 + P3$		
P1	Active power phase 1 (phase-to-neutral L1 – N)		
P2	Active power phase 2 (phase-to-neutral L2 – N)		
P3	Active power phase 3 (phase-to-neutral L3 – N)		

SINEAX DME 440 with RS 485 interface

Programmable multi-transducer

Applicable standards and regulations

EN 60 688	Electrical measuring transducers for converting AC electrical variables into analogue and digital signals
IEC 1010 or EN 61 010	Safety regulations for electrical measuring, control and laboratory equipment
EN 60529	Protection types by case (code IP)
IEC 255-4 Part E5	High-frequency disturbance test (static relays only)
IEC 1000-4-2, 3, 4, 6	Electromagnetic compatibility for industrial-process measurement and control equipment
VDI/VDE 3540, page 2	Reliability of measuring and control equipment (classification of climates)
DIN 40 110	AC quantities
DIN 43 807	Terminal markings
IEC 68 /2-6	Basic environmental testing procedures, vibration, sinusoidal
EN 55011	Electromagnetic compatibility of data processing and telecommunication equipment Limits and measuring principles for radio interference and information equipment
IEC 1036	Alternating current static watt-hour meters for active energy (classes 1 and 2)
DIN 43864	Current interface for the transmission of impulses between impulse encoder counter and tariff meter
UL 94	Tests for flammability of plastic materials for parts in devices and appliances

Consumption:

Voltage circuit: $\leq U^2 / 400 \text{ k}\Omega$
 Condition:
 Characteristic XH01 ... XH10
 Current circuit: $0.3 \text{ VA} \cdot I/5 \text{ A}$

Continuous thermal ratings of inputs

Current circuit	10 A 400 V single-phase AC system 693 V three-phase system
Voltage circuit	480 V single-phase AC system 831 V three-phase system

Short-time thermal rating of inputs

Input variable	Number of inputs	Duration of overload	Interval between two overloads
Current circuit	400 V single-phase AC system 693 V three-phase system		
100 A	5	3 s	5 min.
250 A	1	1 s	1 hour
Voltage circuit	1 A, 2 A, 5 A		
Single-phase AC system 600 V $H_{\text{intern}}: 1.5 U_r$	10	10 s	10 s
Three-phase system 1040 V $H_{\text{intern}}: 1.5 U_r$	10	10 s	10 s


MODBUS® (Bus interface RS-485)

Terminals:	Screw terminals, terminals 23, 24, 25 and 26
Connecting cable:	Screened twisted pair
Max. distance:	Approx. 1200 m (approx. 4000 ft.)
Baudrate:	1200 ... 9600 Bd (programmable)
Number of bus stations:	32 (including master)
Dummy load:	Not required

Technical data

Inputs →

Input variables:	see Table 2 and 3
Measuring ranges:	see Table 2 and 3
Waveform:	Sinusoidal
Rated frequency:	50...60 Hz; 16 2/3 Hz

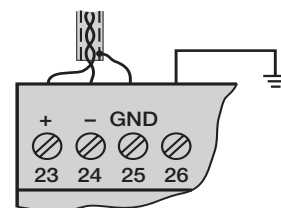

MODBUS® is a registered trademark of the Schneider Automation Inc.

SINEAX DME 440 with RS 485 interface

Programmable multi-transducer

Analogue outputs

For the outputs A, B, C and D:

Output variable Y	Impressed DC current	Impressed DC voltage
Full scale Y2	see "Ordering information"	see "Ordering information"
Limits of output signal for input overload and/or $R = 0$ $R \rightarrow \infty$	$1.25 \cdot Y2$ 30 V	40 mA $1.25 Y2$
Rated useful range of output load	$0 \leq \frac{7.5 \text{ V}}{Y2} \leq \frac{15 \text{ V}}{Y2}$	$\frac{Y2}{2 \text{ mA}} \leq \frac{Y2}{1 \text{ mA}} \leq \infty$
AC component of output signal (peak-to-peak)	$\leq 0.005 Y2$	$\leq 0.005 Y2$

The outputs A, B, C and D may be either short or open-circuited. They are electrically insulated from each other and from all other circuits (floating).

All the full-scale output values can be reduced subsequently using the programming software, but a supplementary error results.

The hardware full-scale settings for the analogue outputs may also be changed subsequently. Conversion of a current to a voltage output or vice versa is also possible. This necessitates changing resistors on the output board. The full-scale values of the current and voltage outputs are set by varying the effective value of two parallel resistors (better resolution). The values of the resistors are selected to achieve the minimum absolute error. Calibration with the programming software is always necessary following conversion of the outputs. Refer to the Operating Instructions. **Caution: The warranty is void if the device is tampered with!**

Reference conditions

Ambient temperature:	15 ... 30 °C
Pre-conditioning:	30 min. acc. to EN 60 688 Section 4.3, Table 2
Input variable:	Rated useful range
Power supply:	$H = H_n \pm 1\%$
Active/reactive factor:	$\cos\varphi = 1$ resp. $\sin\varphi = 1$
Frequency:	50 ... 60 Hz, 16 2/3 Hz
Waveform:	Sinusoidal, form factor 1.1107
Output load:	DC current output: $R_n = \frac{7.5 \text{ V}}{Y2} \pm 1\%$ DC voltage output: $R_n = \frac{Y2}{1 \text{ mA}} \pm 1\%$
Miscellaneous:	EN 60 688

System response

Accuracy class: (the reference value is the full-scale value Y2)

Measured variable	Condition	Accuracy class*
System: Active, reactive and apparent power	$0.5 \leq X2/Sr \leq 1.5$ $0.3 \leq X2/Sr < 0.5$	0.25 c 0.5 c
Phase: Active, reactive and apparent power	$0.167 \leq X2/Sr \leq 0.5$ $0.1 \leq X2/Sr < 0.167$	0.25 c 0.5 c
Power factor, active power factor and reactive power factor	$0.5Sr \leq S \leq 1.5 Sr$, $(X2 - X0) = 2$	0.25 c
	$0.5Sr \leq S \leq 1.5 Sr$, $1 \leq (X2 - X0) < 2$	0.5 c
	$0.5Sr \leq S \leq 1.5 Sr$, $0.5 \leq (X2 - X0) < 1$	1.0 c
	$0.1Sr \leq S < 0.5Sr$, $(X2 - X0) = 2$	0.5 c
	$0.1Sr \leq S < 0.5Sr$, $1 \leq (X2 - X0) < 2$	1.0 c
	$0.1Sr \leq S < 0.5Sr$, $0.5 \leq (X2 - X0) < 1$	2.0 c
AC voltage	$0.1 Ur \leq U \leq 1.2 Ur$	0.2 c
AC current/ current averages	$0.1 Ir \leq I \leq 1.5 Ir$	0.2 c
System frequency	$0.1 Ur \leq U \leq 1.2 Ur$ resp. $0.1 Ir \leq I \leq 1.5 Ir$	$0.15 + 0.03 \text{ c}$ ($f_N = 50...60 \text{ Hz}$) $0.15 + 0.1 \text{ c}$ ($f_N = 16 \text{ 2/3 Hz}$)
Energy meter	acc. to IEC 1036 $0.1 Ir \leq I \leq 1.5 Ir$	1.0

* Basic accuracy 0.5 c for applications with phase-shift

Duration of the measurement cycle: Approx. 0.5 to s 1.2 s at 50 Hz, depending on measured variable and programming

Response time: 1 ... 2 times the measurement cycle

Factor c (the highest value applies):

Linear characteristic:	$c = \frac{1 - \frac{Y0}{Y2}}{1 - \frac{X0}{X2}}$ or $c = 1$
Bent characteristic: $X0 \leq X \leq X1$	$c = \frac{Y1 - Y0}{X1 - X0} \cdot \frac{X2}{Y2}$ or $c = 1$
$X1 < X \leq X2$	$c = \frac{1 - \frac{Y1}{Y2}}{1 - \frac{X1}{X2}}$ or $c = 1$

SINEAX DME 440 with RS 485 interface

Programmable multi-transducer

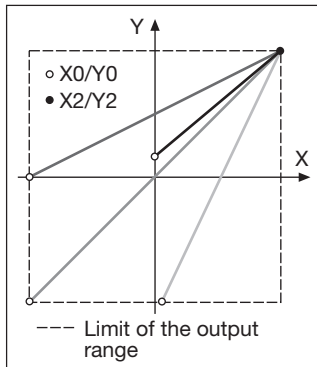


Fig. 3. Examples of settings with linear characteristic.

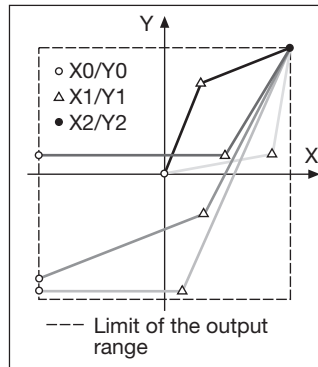


Fig. 4. Examples of settings with bent characteristic.

Influencing quantities and permissible variations

Acc. to EN 60 688

Electrical safety

Protection class:	II
Enclosure protection:	IP 40, housing IP 20, terminals
Installation category:	III
Insulation test (versus earth):	Input voltage: AC 400 V Input current: AC 400 V Output: DC 40 V Power supply: AC 400 V DC 230 V
Surge test:	5 kV; 1.2/50 µs; 0.5 Ws
Test voltages:	50 Hz, 1 min. according to EN 61 010-1 5550 V, inputs versus all other circuits as well as outer surface 3250 V, input circuits versus each other 3700 V, power supply versus outputs and SCI as well as outer surface 490 V, outputs and SCI versus each other and versus outer surface

Power supply →

DC-, AC-power pack (DC and 50 ... 60 Hz)


Table 1: Rated voltages and tolerances

Rated voltage U_N	Tolerance
24 ... 60 V DC/AC	DC – 15 ... + 33%
85 ... 230 V DC/AC	AC ± 10%

Consumption: ≤ 9 W resp. ≤ 10 VA

Programming connector on transducer

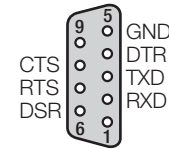Interface: RS 232 C
DSUB socket: 9-pin



The interface is electrically insulated from all other circuits.

Installation data

Housing: Housing **T24**
See Section "Dimensioned drawings"

Housing material: Lexan 940 (polycarbonate), flammability class V-0 acc. to UL 94, self-extinguishing, non-dripping, free of halogen

Mounting: For snapping onto top-hat rail (35 × 15 mm or 35 × 7.5 mm) acc. to EN 50 022
or
directly onto a wall or panel using the pull-out screw hole brackets

Orientation: Any

Weight: Approx. 0.7 kg

Terminals

Type: Screw terminals with wire guards

Max. wire gauge: ≤ 4.0 mm² single wire or
2 × 2.5 mm² fine wire

Vibration withstand

(tested according to DIN EN 60 068-2-6)

Acceleration: ± 2 g

Frequency range: 10 ... 150 ... 10 Hz, rate of frequency sweep: 1 octave/minute

Number of cycles: 10 in each of the three axes

Result: No faults occurred, no loss of accuracy and no problems with the snap fastener

Ambient conditions

Variations due to ambient temperature: ± 0.2% / 10 K

Nominal range of use for temperature: 0...15...30...45 °C (usage group II)

Operating temperature: – 10 to + 55 °C

Storage temperature: – 40 to + 85 °C

Annual mean relative humidity: ≤ 75%

Altitude: 2000 m max.

Indoor use statement

SINEAX DME 440 with RS 485 interface

Programmable multi-transducer

Table 2: Ordering Information

DESCRIPTION	MARKING
1. Mechanical design Housing T24 for rail and wall mounting	440 - 1
2. Rated frequency 1) 50 Hz (60 Hz possible without additional error; 16 2/3 Hz, additional error 1.25 · c) 2) 60 Hz (50 Hz possible without additional error; 16 2/3 Hz, additional error 1.25 · c) 3) 16 2/3 Hz (not re-programming by user, 50/60 Hz possible, but with additional error 1.25 · c)	1 2 3
3. Power supply Nominal range 7) DC/AC 24 ... 60 V 8) DC/AC 85 ... 230 V	7 8
4. Power supply connection 1) External (standard) 2) Internal from voltage input (not allowed for CSA) Line 2: Not available for rated frequency 16 2/3 Hz and applications A15 / A16 / A24 (see Table 3) Caution: The power supply voltage must agree with the input voltage (Table 3)	1 2
5. Full-scale output signal, output A 1) Output A, Y2 = 20 mA (standard) 9) Output A, Y2 [mA] Z) Output A, Y2 [V] Line 9: Full-scale current Y2 [mA] 1 to 20 Line Z: Full-scale voltage Y2 [V] 1 to 10	1 9 Z
6. Full-scale output signal, output B 1) Output B, Y2 = 20 mA (standard) 9) Output B, Y2 [mA] Z) Output B, Y2 [V]	1 9 Z
7. Full-scale output signal, output C 1) Output C, Y2 = 20 mA (standard) 9) Output C, Y2 [mA] Z) Output C, Y2 [V]	1 9 Z
8. Full-scale output signal, output D 1) Output D, Y2 = 20 mA (standard) 9) Output D, Y2 [mA] Z) Output D, Y2 [V]	1 9 Z
9. Test certificate 0) None supplied 1) Supplied	0 1
10. Programming 0) Basic 9) According to specification Line 0: Not available if the power supply is taken from the voltage input Line 9: All the programming data must be entered on Form W 2389e (see appendix) and the form must be included with the order.	0 9

SINEAX DME 440 with RS 485 interface

Programmable multi-transducer

Table 3: Programming

DESCRIPTION	A11 ... A16	Application A34	A24 / A44
1. Application (system)			
Single-phase AC	A11	—	—
3-wire, 3-phase symmetric load, phase-shift U: L1-L2, I: L1 *	A12	—	—
3-wire, 3-phase symmetric load	A13	—	—
4-wire, 3-phase symmetric load	A14	—	—
3-wire, 3-phase symmetric load, phase-shift U: L3-L1, I: L1 *	A15	—	—
3-wire, 3-phase symmetric load, phase-shift U: L2-L3, I: L1 *	A16	—	—
3-wire, 3-phase asymmetric load	—	A34	—
4-wire, 3-phase asymmetric load	—	—	A44
4-wire, 3-phase asymmetric load, open-Y	—	—	A24
2. Input voltage			
Rated value $U_r = 57.7 \text{ V}$	U01	—	—
Rated value $U_r = 63.5 \text{ V}$	U02	—	—
Rated value $U_r = 100 \text{ V}$	U03	—	—
Rated value $U_r = 110 \text{ V}$	U04	—	—
Rated value $U_r = 120 \text{ V}$	U05	—	—
Rated value $U_r = 230 \text{ V}$	U06	—	—
Rated value U_r [V] <input type="text"/>	U91	—	—
Rated value $U_r = 100 \text{ V}$	U21	U21	U21
Rated value $U_r = 110 \text{ V}$	U22	U22	U22
Rated value $U_r = 115 \text{ V}$	U23	U23	U23
Rated value $U_r = 120 \text{ V}$	U24	U24	U24
Rated value $U_r = 400 \text{ V}$	U25	U25	U25
Rated value $U_r = 500 \text{ V}$	U26	U26	U26
Rated value U_r [V] <input type="text"/>	U93	U93	U93
Lines U01 to U06: Only for single phase AC current or 4-wire, 3-phase symmetric load			
Line U91: U_r [V] 57 to 400			
Line U93: U_r [V] > 100 to 693			
3. Input current			
Rated value $I_r = 1 \text{ A}$ V1	V1	V1	
Rated value $I_r = 2 \text{ A}$ V2	V2	V2	
Rated value $I_r = 5 \text{ A}$ V3	V3	V3	
Rated value $I_r > 1 \text{ to } 6$ [A] <input type="text"/>	V9	V9	V9
4. Primary rating (primary transformer)			
Without specification of primary rating	W0	W0	W0
CT = <input type="text"/> A / <input type="text"/> A VT = <input type="text"/> kV / <input type="text"/> V	W9	W9	W9
Line W9: Specify transformer ratio prim./sec., e.g. 1000/5 A; 33 kV/110 V			

* Basic accuracy 0.5 c

Table 3 continued on next page!

SINEAX DME 440 with RS 485 interface

Programmable multi-transducer

Continuation "Table 3: Programming"

DESCRIPTION					A11 ... A16	Application A34	A24 / A44
5. Measured variable, output A							
Not used					AA000	AA000	AA000
Initial value X0 Final value X2							
U	System	X0 = 0	X2 = Ur*		AA001	—	—
U12	L1-L2	X0 = 0	X2 = Ur*		—	AA001	AA001
U	System	$0 \leq X0 \leq 0.9 \cdot X2$	$0.8 \cdot Ur \leq X2 \leq 1.2 \cdot Ur^*$		AA901	—	—
U1N	L1-N	$0 \leq X0 \leq 0.9 \cdot X2$	$0.8 \cdot Ur/\sqrt{3} \leq X2 \leq 1.2 \cdot Ur/\sqrt{3}^*$		—	—	AA902
U2N	L2-N	$0 \leq X0 \leq 0.9 \cdot X2$	$0.8 \cdot Ur/\sqrt{3} \leq X2 \leq 1.2 \cdot Ur/\sqrt{3}^*$		—	—	AA903
U3N	L3-N	$0 \leq X0 \leq 0.9 \cdot X2$	$0.8 \cdot Ur/\sqrt{3} \leq X2 \leq 1.2 \cdot Ur/\sqrt{3}^*$		—	—	AA904
U12	L1-L2	$0 \leq X0 \leq 0.9 \cdot X2$	$0.8 \cdot Ur \leq X2 \leq 1.2 \cdot Ur^*$		—	AA905	AA905
U23	L2-L3	$0 \leq X0 \leq 0.9 \cdot X2$	$0.8 \cdot Ur \leq X2 \leq 1.2 \cdot Ur^*$		—	AA906	AA906
U31	L3-L1	$0 \leq X0 \leq 0.9 \cdot X2$	$0.8 \cdot Ur \leq X2 \leq 1.2 \cdot Ur^*$		—	AA907	AA907
I	System	$0 \leq X0 \leq 0.8 \cdot X2$	$0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$		AA908	—	—
I1	L1	$0 \leq X0 \leq 0.8 \cdot X2$	$0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$		—	AA909	AA909
I2	L2	$0 \leq X0 \leq 0.8 \cdot X2$	$0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$		—	AA910	AA910
I3	L3	$0 \leq X0 \leq 0.8 \cdot X2$	$0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$		—	AA911	AA911
P	System	$-X2 \leq X0 \leq 0.8 \cdot X2$	$0.3 \leq X2 / Sr \leq 1.5$		AA912	AA912	AA912
P1	L1	$-X2 \leq X0 \leq 0.8 \cdot X2$	$0.1 \leq X2 / Sr \leq 0.5$		—	—	AA913
P2	L2	$-X2 \leq X0 \leq 0.8 \cdot X2$	$0.1 \leq X2 / Sr \leq 0.5$		—	—	AA914
P3	L3	$-X2 \leq X0 \leq 0.8 \cdot X2$	$0.1 \leq X2 / Sr \leq 0.5$		—	—	AA915
Q	System	$-X2 \leq X0 \leq 0.8 \cdot X2$	$0.3 \leq X2 / Sr \leq 1.5$		AA916	AA916	AA916
Q1	L1	$-X2 \leq X0 \leq 0.8 \cdot X2$	$0.1 \leq X2 / Sr \leq 0.5$		—	—	AA917
Q2	L2	$-X2 \leq X0 \leq 0.8 \cdot X2$	$0.1 \leq X2 / Sr \leq 0.5$		—	—	AA918
Q3	L3	$-X2 \leq X0 \leq 0.8 \cdot X2$	$0.1 \leq X2 / Sr \leq 0.5$		—	—	AA919
PF	System	$-1 \leq X0 \leq (X2 - 0.5)$	$0 \leq X2 \leq 1$		AA920	AA920	AA920
PF1	L1	$-1 \leq X0 \leq (X2 - 0.5)$	$0 \leq X2 \leq 1$		—	—	AA921
PF2	L2	$-1 \leq X0 \leq (X2 - 0.5)$	$0 \leq X2 \leq 1$		—	—	AA922
PF3	L3	$-1 \leq X0 \leq (X2 - 0.5)$	$0 \leq X2 \leq 1$		—	—	AA923
QF	System	$-1 \leq X0 \leq (X2 - 0.5)$	$0 \leq X2 \leq 1$		AA924	AA924	AA924
QF1	L1	$-1 \leq X0 \leq (X2 - 0.5)$	$0 \leq X2 \leq 1$		—	—	AA925
QF2	L2	$-1 \leq X0 \leq (X2 - 0.5)$	$0 \leq X2 \leq 1$		—	—	AA926
QF3	L3	$-1 \leq X0 \leq (X2 - 0.5)$	$0 \leq X2 \leq 1$		—	—	AA927
F	$15.3 \text{ Hz} \leq X0 \leq X2 - 1 \text{ Hz}$		$X0 + 1 \text{ Hz} \leq X2 \leq 65 \text{ Hz}$		AA928	AA928	AA928
S	System	$0 \leq X0 \leq 0.8 \cdot X2$	$0.3 \leq X2 / Sr \leq 1.5$		AA929	AA929	AA929
S1	L1	$0 \leq X0 \leq 0.8 \cdot X2$	$0.1 \leq X2 / Sr \leq 0.5$		—	—	AA930
S2	L2	$0 \leq X0 \leq 0.8 \cdot X2$	$0.1 \leq X2 / Sr \leq 0.5$		—	—	AA931
S3	L3	$0 \leq X0 \leq 0.8 \cdot X2$	$0.1 \leq X2 / Sr \leq 0.5$		—	—	AA932
IM	System	$0 \leq X0 \leq 0.8 \cdot X2$	$0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$		—	AA933	AA933
IMS	System	$-X2 \leq X0 \leq 0.8 \cdot X2$	$0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$		—	AA934	AA934
LF	System	$-1 \leq X0 \leq (X2 - 0.5)$	$0 \leq X2 \leq 1$		AA935	AA935	AA935
LF1	L1	$-1 \leq X0 \leq (X2 - 0.5)$	$0 \leq X2 \leq 1$		—	—	AA936
LF2	L2	$-1 \leq X0 \leq (X2 - 0.5)$	$0 \leq X2 \leq 1$		—	—	AA937
LF3	L3	$-1 \leq X0 \leq (X2 - 0.5)$	$0 \leq X2 \leq 1$		—	—	AA938
IB	System	$X0 = 0$ $1 \leq IBT \leq 30 \text{ min}$	$0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$		AA939	—	—
IB1	L1	$X0 = 0$ $1 \leq IBT \leq 30 \text{ min}$	$0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$		—	AA940	AA940
IB2	L2	$X0 = 0$ $1 \leq IBT \leq 30 \text{ min}$	$0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$		—	AA941	AA941
IB3	L3	$X0 = 0$ $1 \leq IBT \leq 30 \text{ min}$	$0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$		—	AA942	AA942
BS	System	$X0 = 0$ $1 \leq BST \leq 30 \text{ min}$	$0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$		AA943	—	—
BS1	L1	$X0 = 0$ $1 \leq BST \leq 30 \text{ min}$	$0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$		—	AA944	AA944
BS2	L2	$X0 = 0$ $1 \leq BST \leq 30 \text{ min}$	$0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$		—	AA945	AA945
BS3	L3	$X0 = 0$ $1 \leq BST \leq 30 \text{ min}$	$0.5 \cdot Ir \leq X2 \leq 1.5 \cdot Ir$		—	AA946	AA946
UM	System	$0 \leq X0 \leq 0.8 \cdot X2$	$0.8 \cdot Ur \leq X2 \leq 1.2 \cdot Ur^*$		—	—	AA947

* Where the power supply is taken from the measured voltage, the transmitter only operates in the range $U = 0.8 Ur \dots 1.2 Ur$ and the specified accuracy is only guaranteed in the range $U = 0.9 Ur \dots 1.1 Ur$.

Table 3 continued on next page!

SINEAX DME 440 with RS 485 interface

Programmable multi-transducer

Continuation "Table 3: Programming"

DESCRIPTION	A11 ... A16	Application A34	A24 / A44
6. Output signal, output A Initial value Y0 Final value Y2 DC current Y0 = 0 Y2 = 20 mA $-Y2 \leq Y0 \leq 0.2 \cdot Y2$ $1 \text{ mA} \leq Y2 \leq 20 \text{ mA}$ DC voltage $-Y2 \leq Y0 \leq 0.2 \cdot Y2$ $1 \text{ V} \leq Y2 \leq 10 \text{ V}$	AB01 AB91 AB92	AB01 AB91 AB92	AB01 AB91 AB92
7. Characteristic, output A Linear Bent $(X0 + 0.015 \cdot X2) \leq X1 \leq 0.985 \cdot X2$ $Y0 \leq Y1 \leq Y2$	AC01 AC91	AC01 AC91	AC01 AC91
8. Limits, output A Standard $Y_{\min} = Y0 - 0.25 Y2$ $Y_{\max} = 1.25 Y2$ $(Y0 - 0.25 Y2) \leq Y_{\min} \leq Y0$ $Y2 \leq Y_{\max} \leq 1.25 Y2$	AD01 AD91	AD01 AD91	AD01 AD91
9. Measured variable, output B Same as output A, but markings start with a capital B	BA ...	BA ...	BA ...
10. Output signal, output B Same as output A, but markings start with a capital B	BB ..	BB ..	BB ..
11. Characteristic, output B Same as output A, but markings start with a capital B	BC ..	BC ..	BC ..
12. Limits, output B Same as output A, but markings start with a capital B	BD ..	BD ..	BD ..
13. Measured variable, output C Same as output A, but markings start with a capital C	CA ...	CA ...	CA ...
14. Output signal, output C Same as output A, but markings start with a capital C	CB ..	CB ..	CB ..
15. Characteristic, output C Same as output A, but markings start with a capital C	CC ..	CC ..	CC ..
16. Limits, output C Same as output A, but markings start with a capital C	CD ..	CD ..	CD ..
17. Measured variable, output D Same as output A, but markings start with a capital D	DA ..	DA ..	DA ..
18. Output signal, output D Same as output A, but markings start with a capital D	DB ..	DB ..	DB ..

Table 3 continued on next page!

SINEAX DME 440 with RS 485 interface

Programmable multi-transducer








Continuation "Table 3: Programming"


DESCRIPTION	Application		
	A11 ... A16	A34	A24 / A44
19. Characteristic, output D Same as output A, but markings start with a capital D	DC ..	DC ..	DC ..
20. Limits, output D Same as output A, but markings start with a capital D	DD ..	DD ..	DD ..
21. Energy meter 1 Not used	EA00	EA00	EA00
I System [Ah]	EA50	—	—
I1 L1 [Ah]	—	EA51	EA51
I2 L2 [Ah]	—	EA52	EA52
I3 L3 [Ah]	—	EA53	EA53
S System [VAh]	EA54	EA54	EA54
S1 L1 [VAh]	—	—	EA55
S2 L2 [VAh]	—	—	EA56
S3 L3 [VAh]	—	—	EA57
P System (incoming) [Wh]	EA58	EA58	EA58
P1 L1 (incoming) [Wh]	—	—	EA59
P2 L2 (incoming) [Wh]	—	—	EA60
P3 L3 (incoming) [Wh]	—	—	EA61
Q System (inductive) [Varh]	EA62	EA62	EA62
Q1 L1 (inductive) [Varh]	—	—	EA63
Q2 L2 (inductive) [Varh]	—	—	EA64
Q3 L3 (inductive) [Varh]	—	—	EA65
P System (outgoing) [Wh]	EA66	EA66	EA66
P1 L1 (outgoing) [Wh]	—	—	EA67
P2 L2 (outgoing) [Wh]	—	—	EA68
P3 L3 (outgoing) [Wh]	—	—	EA69
Q System (capacitive) [Varh]	EA70	EA70	EA70
Q1 L1 (capacitive) [Varh]	—	—	EA71
Q2 L2 (capacitive) [Varh]	—	—	EA72
Q3 L3 (capacitive) [Varh]	—	—	EA73
22. Energy meter 2 Same as energy meter 1, but markings start with a capital F	FA ..	FA ..	FA ..
23. Energy meter 3 Same as energy meter 1, but markings start with a capital G	GA ..	GA ..	GA ..
24. Energy meter 4 Same as energy meter 1, but markings start with a capital H	HA ..	HA ..	HA ..

SINEAX DME 440 with RS 485 interface

Programmable multi-transducer

Electrical connections




Function			Connect.
Measuring input 	AC current	IL1	1 / 3
		IL2	4 / 6
		IL3	7 / 9
	AC voltage	UL1	2
		UL2	5
		UL3	8
		N	11
Outputs 	Analogue		
		 A	+
			-
		 B	+
			-
		 C	+
			-
		 D	+
RS 485 (MODBUS)	Tx+/Rx+		23
		Tx-/Rx-	24
		GND	25
			26
Power supply 	AC	~	13
		~	14
	DC	+	13
		-	14

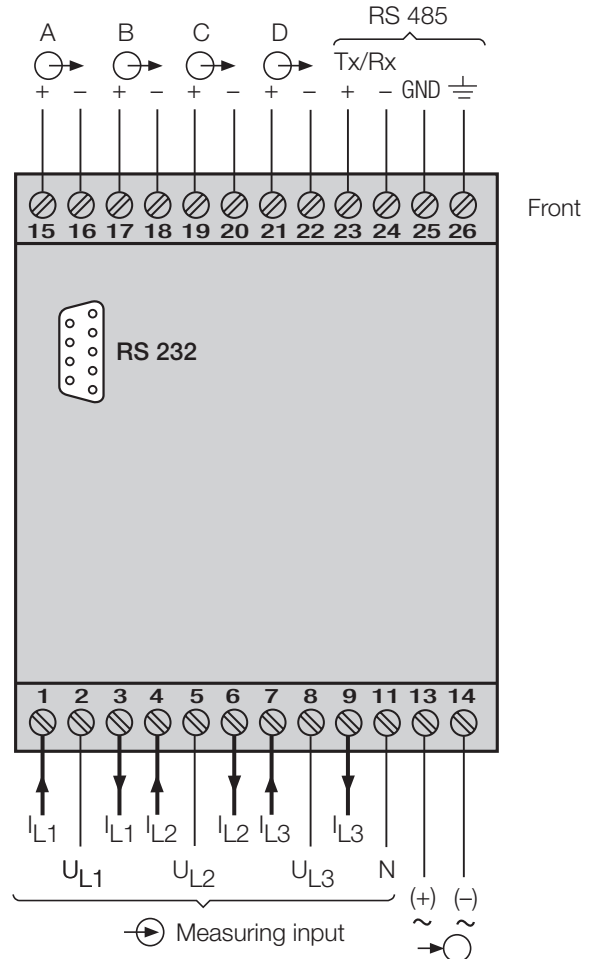

If power supply is taken from the measured voltage internal connections are as follow:










Application (system)	Internal connection Terminal / System
Single-phase AC current	2 / 11 (L1 - N)
4-wire 3-phase symmetric load	2 / 11 (L1 - N)
All other (apart from A15 / A16 / A24)	2 / 5 (L1 - L2)

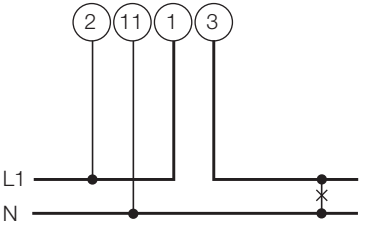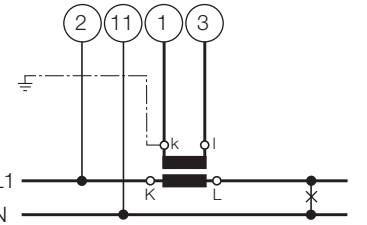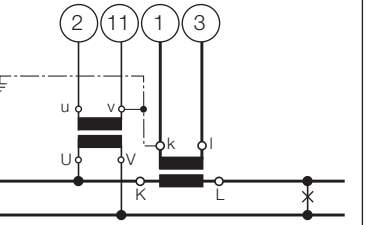Measuring inputs

System / application	Terminals
Single-phase AC system	  

SINEAX DME 440 with RS 485 interface

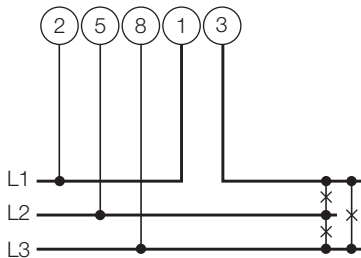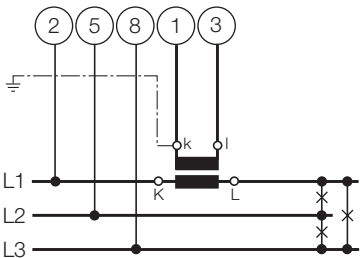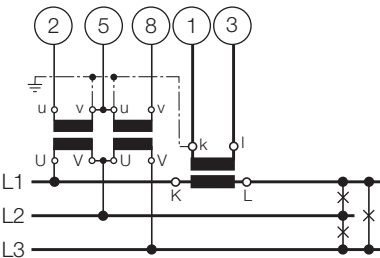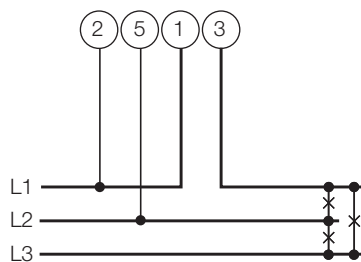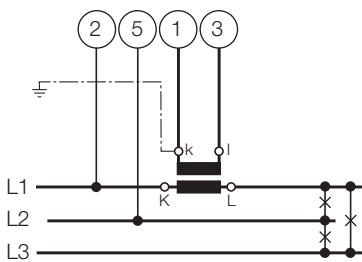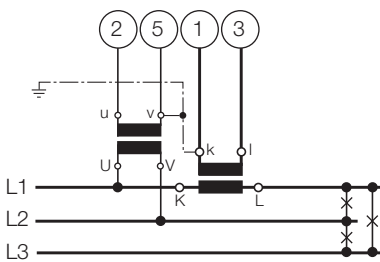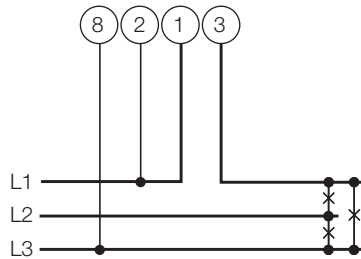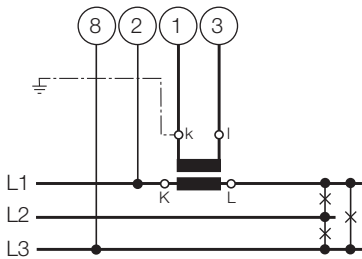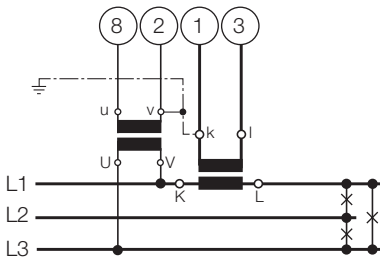Programmable multi-transducer

Measuring inputs																			
System / application	Terminals																		
3-wire 3-phase symmetric load I: L1	<div></div> <div></div> <div></div> <p>Connect the voltage according to the following table for current measurement in L2 or L3:</p> <table><tr><th>Current transf.</th><th colspan="2">Terminals</th><th>2</th><th>5</th><th>8</th></tr><tr><td>L2</td><td>1</td><td>3</td><td>L2</td><td>L3</td><td>L1</td></tr><tr><td>L3</td><td>1</td><td>3</td><td>L3</td><td>L1</td><td>L2</td></tr></table>	Current transf.	Terminals		2	5	8	L2	1	3	L2	L3	L1	L3	1	3	L3	L1	L2
Current transf.	Terminals		2	5	8														
L2	1	3	L2	L3	L1														
L3	1	3	L3	L1	L2														
3-wire 3-phase symmetric load Phase-shift U: L1 – L2 I: L1	<div></div> <div></div> <div></div> <p>Connect the voltage according to the following table for current measurement in L2 or L3:</p> <table><tr><th>Current transf.</th><th colspan="2">Terminals</th><th>2</th><th>5</th></tr><tr><td>L2</td><td>1</td><td>3</td><td>L2</td><td>L3</td></tr><tr><td>L3</td><td>1</td><td>3</td><td>L3</td><td>L1</td></tr></table>	Current transf.	Terminals		2	5	L2	1	3	L2	L3	L3	1	3	L3	L1			
Current transf.	Terminals		2	5															
L2	1	3	L2	L3															
L3	1	3	L3	L1															
3-wire 3-phase symmetric load Phase-shift U: L3 – L1 I: L1	<div></div> <div></div> <div></div> <p>Connect the voltage according to the following table for current measurement in L2 or L3:</p> <table><tr><th>Current transf.</th><th colspan="2">Terminals</th><th>8</th><th>2</th></tr><tr><td>L2</td><td>1</td><td>3</td><td>L1</td><td>L2</td></tr><tr><td>L3</td><td>1</td><td>3</td><td>L2</td><td>L3</td></tr></table>	Current transf.	Terminals		8	2	L2	1	3	L1	L2	L3	1	3	L2	L3			
Current transf.	Terminals		8	2															
L2	1	3	L1	L2															
L3	1	3	L2	L3															

SINEAX DME 440 with RS 485 interface

Programmable multi-transducer

Measuring inputs																			
System / application	Terminals																		
3-wire 3-phase symmetric load Phase-shift U: L2 – L3 I: L1																			
	Connect the voltage according to the following table for current measurement in L2 or L3:																		
	<table><tr><th>Current transf.</th><th colspan="2">Terminals</th><th>5</th><th>8</th></tr><tr><td>L2</td><td>1</td><td>3</td><td>L3</td><td>L1</td></tr><tr><td>L3</td><td>1</td><td>3</td><td>L1</td><td>L2</td></tr></table>		Current transf.	Terminals		5	8	L2	1	3	L3	L1	L3	1	3	L1	L2		
Current transf.	Terminals		5	8															
L2	1	3	L3	L1															
L3	1	3	L1	L2															
4-wire 3-phase symmetric load I: L1																			
	Connect the voltage according to the following table for current measurement in L2 or L3:																		
	<table><tr><th>Current transf.</th><th colspan="2">Terminals</th><th>2</th><th>11</th></tr><tr><td>L2</td><td>1</td><td>3</td><td>L2</td><td>N</td></tr><tr><td>L3</td><td>1</td><td>3</td><td>L3</td><td>N</td></tr></table>		Current transf.	Terminals		2	11	L2	1	3	L2	N	L3	1	3	L3	N		
Current transf.	Terminals		2	11															
L2	1	3	L2	N															
L3	1	3	L3	N															
3-wire 3-phase asymmetric load																			

SINEAX DME 440 with RS 485 interface

Programmable multi-transducer

Measuring inputs	
System / application	Terminals
4-wire 3-phase asymmetric load	
	<p>3 single-pole insulated voltage transformers in high-voltage system</p>
4-wire 3-phase asymmetric load, Open Y connection	<p>Low-voltage system</p>
	<p>2 single-pole insulated voltage transformers in high-voltage system</p>

Relationship between PF, QF and LF

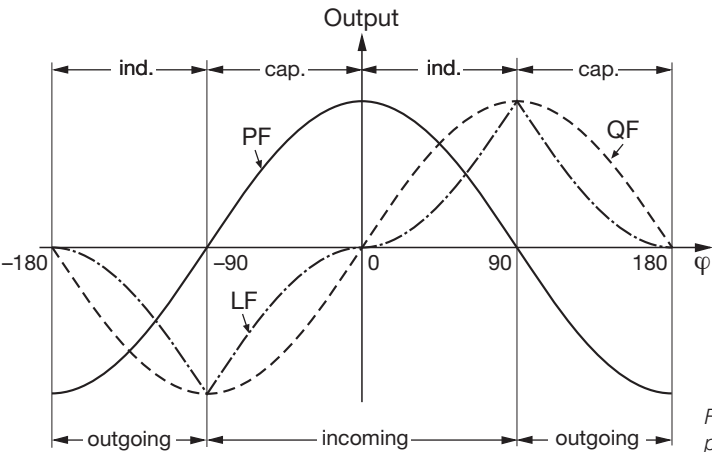


Fig. 5. Active power PF —, reactive power QF -----, power factor LF -----.

SINEAX DME 440 with RS 485 interface

Programmable multi-transducer

Dimensioned drawings

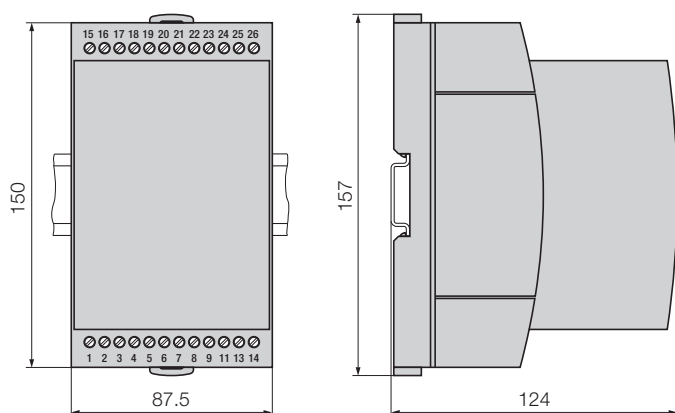


Fig. 7. SINEAX DME 440 in housing **T24** clipped onto a top-hat rail (35 x 15 mm or 35 x 7.5 mm, acc. to EN 50 022).

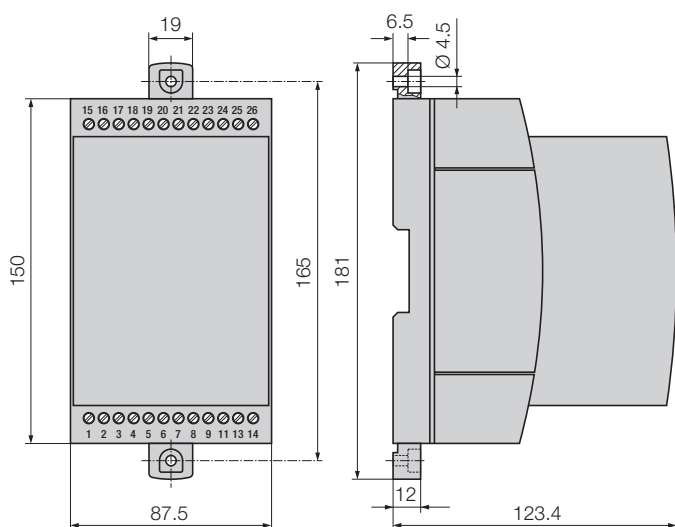


Fig. 8. SINEAX DME 440 in housing **T24**, screw hole mounting brackets pulled out.

Table 4: Accessories

Description	Order No.
Programming cable	980 179
Configuration software DME 4 for SINEAX/EURAX DME 424, 440, 442, SINEAX DME 400, 401 and 406 Windows 3.1x, 95, 98, NT and 2000 on CD in German, English, French, Italian and Dutch (Download free of charge under http://www.camillebauer.com) In addition, the CD contains all configuration programmes presently available for Camille Bauer products.	146 557
Software METRAWin 10 / DME 440	128 373
Operating Instructions DME 440-1 B d-f-e	127 127



Description	Order No.
SINEAX A 200	154 063
Interconnecting cable sub D 9 pol. male/male 1.8 m	154 071

Standard accessories

- 1 Operating Instructions for SINEAX DME 440 in three languages:
German, French, English
- 1 blank type label, for recording programmed settings
- 1 Interface definition DME 440: German, French or English

Appendix: PROGRAMMING FOR SINEAX TYPE DME 440

with 4 analogue outputs and bus interface RS 485 (MODBUS®)

(see Data Sheet DME 440-1 Le, Table 3: «Programming»)



Customer / Agent: _____	Date: _____
Order No. / Item: _____	Delivery date: _____
No of instruments: _____	
Type of instruments (marking): _____	

1. Application			
<input type="text" value="A"/>	<input type="text"/>	System _____	
2. Input voltage, rated value			
<input type="text" value="U"/>	<input type="text"/>	Ur = _____	
3. Input current, rated value			
<input type="text" value="V"/>	<input type="text"/>	Ir = _____	
4. Primary transformer			
<input type="text" value="W"/>	<input type="text"/>	CT = _____ A / _____ A	VT = _____ kV / _____ V
Output A			
<input type="text" value="A"/>	<input type="text" value="A"/>	5. Measured variable	Type: _____ X0 = _____ X2 = _____
<input type="text" value="A"/>	<input type="text" value="B"/>	6. Output signal	Y0 = _____ Y2 = _____
<input type="text" value="A"/>	<input type="text" value="C"/>	7. Characteristic linear / bent	X1 = _____ Y1 = _____
<input type="text" value="A"/>	<input type="text" value="D"/>	8. Limits	Standard / Ymin = _____ Ymax = _____
Output B			
<input type="text" value="B"/>	<input type="text" value="A"/>	9. Measured variable	Type: _____ X0 = _____ X2 = _____
<input type="text" value="B"/>	<input type="text" value="B"/>	10. Output signal	Y0 = _____ Y2 = _____
<input type="text" value="B"/>	<input type="text" value="C"/>	11. Characteristic linear / bent	X1 = _____ Y1 = _____
<input type="text" value="B"/>	<input type="text" value="D"/>	12. Limits	Standard / Ymin = _____ Ymax = _____
Output C			
<input type="text" value="C"/>	<input type="text" value="A"/>	13. Measured variable	Type: _____ X0 = _____ X2 = _____
<input type="text" value="C"/>	<input type="text" value="B"/>	14. Output signal	Y0 = _____ Y2 = _____
<input type="text" value="C"/>	<input type="text" value="C"/>	15. Characteristic linear / bent	X1 = _____ Y1 = _____
<input type="text" value="C"/>	<input type="text" value="D"/>	16. Limits	Standard / Ymin = _____ Ymax = _____
Output D			
<input type="text" value="D"/>	<input type="text" value="A"/>	17. Measured variable	Type: _____ X0 = _____ X2 = _____
<input type="text" value="D"/>	<input type="text" value="B"/>	18. Output signal	Y0 = _____ Y2 = _____
<input type="text" value="D"/>	<input type="text" value="C"/>	19. Characteristic linear / bent	X1 = _____ Y1 = _____
<input type="text" value="D"/>	<input type="text" value="D"/>	20. Limits	Standard / Ymin = _____ Ymax = _____

Continued on next page!



E	A			21. Energy meter 1
F	A			22. Energy meter 2
G	A			23. Energy meter 3
H	A			24. Energy meter 4