



Internal Use Only

<http://biz.lgservice.com>

***MULTI V*[™] System**

Indoor Unit R410A

SERVICE MANUAL R410A

**MODEL : ARNU Series
URNU Series**

CAUTION

Before Servicing the unit, read the safety precautions in General SVC manual.
Only for authorized service personnel.

TABLE OF CONTENTS

Safety Precautions	3
Part 1 General Information	10
Model Names	11
External Appearance	12
Nomenclature	15
Part 2 Indoor Units	7
Ceiling Mounted Cassette Type (1 way).....	8
Ceiling Mounted Cassette Type (2 way).....	13
Ceiling Mounted Cassette Type (4 way)(1)	20
Ceiling Mounted Cassette Type (4 way)(2)	23
Art Cool Type(Mirror).....	30
Art Cool Type(Gallery)	41
Ceiling Concealed Duct Type (Low static).....	51
Ceiling Concealed Duct Type (Built in).....	57
Ceiling Concealed Duct Type (High static).....	63
Wall Mounted Type.....	72
Ceiling & Floor Ceiling Suspended	83
Floor Standing Type	90
Part 3 Trouble shooting guide	97

Part 1

General Information

1. Model Names	4
2. External Appearance	5
3. Nomenclature	6

1. Model Names

Category		Chassis Name	Capacity(Btu/h(kW))											
			7k (2.2)	9k (2.8)	12k (3.6)	15k (4.5)	18k (5.6)	24k (7.1)	28k (8.2)	36k (10.6)	42k (12.3)	48k (14.1)	76k (22.4)	96k (28)
Wall Mounted (General)		SE	ARNU07 GSE*2	ARNU09 GSE*2	ARNU12 GSE*2	ARNU15 GSE*2								
		S5					ARNU18G S5*2	ARNU24G S5*2						
ART COOL	Mirror	SE	ARNU07 GSE*2	ARNU09 GSE*2	ARNU12 GSE*2	ARNU15 GSE*2								
		S3					ARNU18 GS3*2	ARNU24 GS3*2						
	ART Cool Gallery	SF	ARNU07 GSF*2	ARNU09 GSF*2	ARNU12 GSF*2									
Ceiling Cassette	1 Way	TJ	ARNU07 GTJ*2	ARNU09 GTJ*2	ARNU12 GTJ*2									
	2 Way	TL					ARNU18 GTL*2	ARNU24 GTL*2						
	4 Way	TE	ARNU07 GTE*2	ARNU09 GTE*2	ARNU12 GTE*2	ARNU15 GTE*2	ARNU18 GTE*2							
		TP						ARNU24G TP*2	ARNU28G TP*2					
		TN								ARNU36 GTN*2				
		TM									ARNU42G TM*2	ARNU48G TM*2		
Ceiling Concealed Duct	High Static	BH	ARNU07 GBHA2	ARNU09 GBHA2	ARNU12 GBHA2	ARNU15 GBHA2	ARNU18 GBHA2	ARNU24 GBHA2						
		BG							ARNU28 GBGA2	ARNU36 GBGA2	ARNU42 GBGA2			
		BR										ARNU48 GBRA2		
		B8											URNU76 GB8A2	URNU96 GB8A2
	Low Static	B1	ARNU07 GB1G2	ARNU09 GB1G2	ARNU12 GB1G2	ARNU15 GB1G2								
		B2					ARNU18 GB2G2	ARNU24 GB2G2						
	Built In	B3	ARNU07 GB3G2	ARNU09 GB3G2	ARNU12 GB3G2	ARNU15 GB3G2								
		B4					ARNU18 GB4G2	ARNU24 GB4G2						
Ceiling & Floor		VE		ARNU09G VEA2	ARNU12G VEA2									
Ceiling Suspended		VJ				ARNU18 GVJA2	ARNU24 GVJA2							
Floor Standing	With Case	CE	ARNU07 GCEA2	ARNU09 GCEA2	ARNU12 GCEA2	ARNU15 GCEA2								
		CF					ARNU18 GCFA2	ARNU24 GCFA2						
	Without Case	CE	ARNU07 GCEU2	ARNU09 GCEU2	ARNU12 GCEU2	ARNU15 GCEU2								
		CF					ARNU18 GCFU2	ARNU24 GCFU2						

* ART COOL- B: Blue, M: Metal, D: Wood, R: Mirror, W: White Wood, V: Silver, E: Red, G: Gold, 1: Kiss (Photo changeable)


* Wall Mounted- A: Basic, L: Plasma

* Ceiling Cassette- A: Basic, C: Plasma

2. External Appearance

<p>Ceiling Cassette- 1Way ARNU07GTJ*2 ARNU09GTJ*2 ARNU12GTJ*2</p>  <p>* A:Basic, C:Plasma</p>	<p>Ceiling Cassette -2Way ARNU18GTL*2 ARNU24GTL*2</p>  <p>* A:Basic, C:Plasma</p>
<p>Ceiling Cassette- 4Way ARNU07GTE*2 ARNU24GTP*2 ARNU09GTE*2 ARNU28GTP*2 ARNU12GTE*2 ARNU36GTM*2 ARNU15GTE*2 ARNU42GTM*2 ARNU18GTE*2 ARNU48GTM*2</p>  <p>* A:Basic, C:Plasma</p>	<p>Ceiling Concealed Duct - High Static ARNU07GBHA2 ARNU36GBGA2 ARNU09GBHA2 ARNU42GBGA2 ARNU12GBHA2 ARNU48GBRA2 ARNU15GBHA2 URNU76GB8A2 ARNU18GBHA2 URNU96GB8A2 ARNU24GBHA2 ARNU28GBGA2</p> 
<p>Ceiling Concealed Duct - Low Static ARNU07GB1G2 ARNU15GB1G2 ARNU09GB1G2 ARNU18GB2G2 ARNU12GB1G2 ARNU24GB2G2</p> 	<p>Wall Mounted ARNU07GSE*2 ARNU15GSE*2 ARNU09GSE*2 ARNU18GS5*2 ARNU12GSE*2 ARNU24GS5*2</p>  <p>* A:Basic, L:Plasma</p>
<p>Ceiling Concealed Duct – Built-in ARNU07GB3G2 ARNU15GB3G2 ARNU09GB3G2 ARNU18GB4G2 ARNU12GB3G2 ARNU24GB4G2</p> 	<p>ART COOL Gallery ARNU07GSF*2 ARNU09GSF*2 ARNU12GSF*2</p>  <p>* E:Red V:Silver G:Gold 1: Kiss (Photo changeable)</p>
<p>ART COOL Mirror ARNU07GSE*2 S3: * B : Blue SE: * R:Mirror ARNU09GSE*2 M : Metal V:Silver ARNU12GSE*2 D : Wood B : Blue ARNU15GSE*2 R : Mirror ARNU18GS3*2 W : White Wood ARNU24GS3*2</p> 	<p>Floor Standing With case ARNU07GCEA2 ARNU09GCEA2 ARNU12GCEA2 ARNU15GCEA2 ARNU18GCFA2 ARNU24GCFA2</p> 
<p>Ceiling & Floor ARNU09GVEA2 ARNU12GVEA2</p>  <p>Ceiling Suspended ARNU18GVJA2 ARNU24GVJA2</p>	<p>Without case ARNU07GCEU2 ARNU09GCEU2 ARNU12GCEU2 ARNU15GCEU2 ARNU18GCFU2 ARNU24GCFU2</p> 

3. Nomenclature

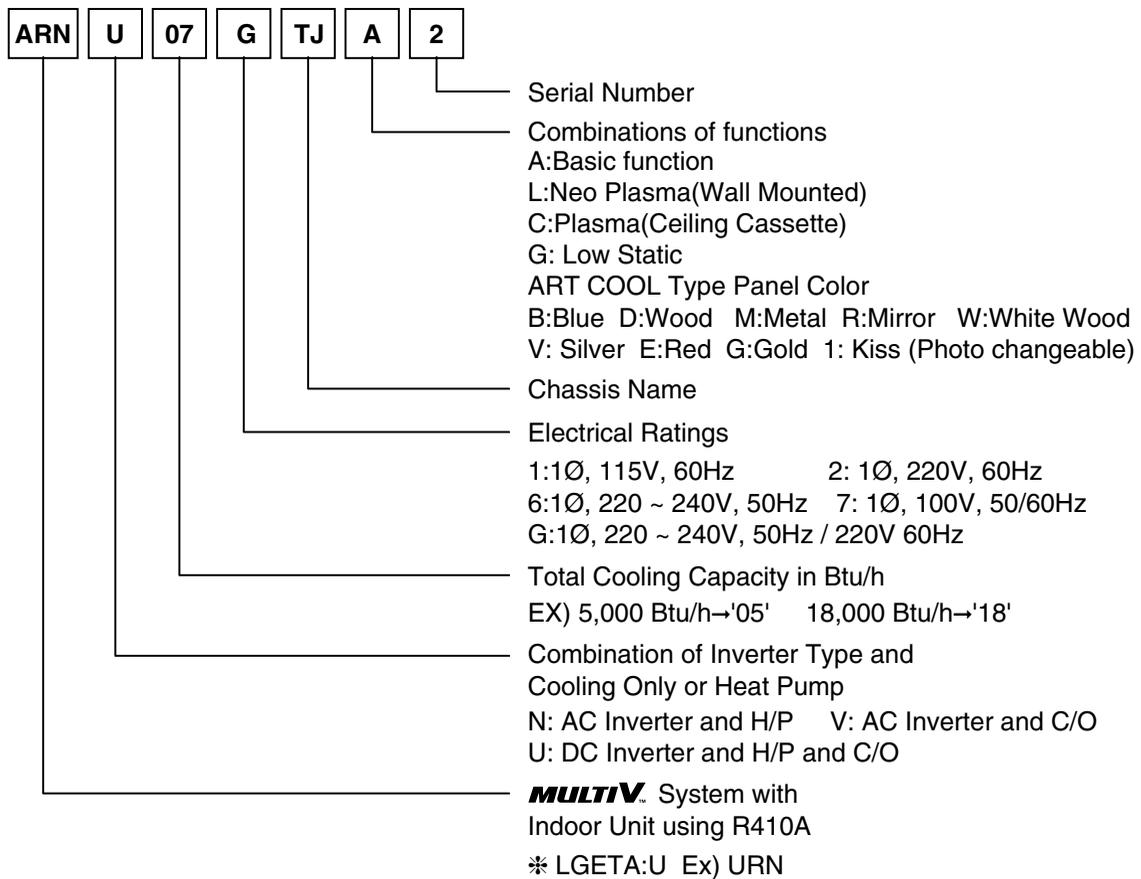

Part 2

Indoor Units

Ceiling Cassette	
1 Way	8
2 Way	13
4 Way(1).....	20
4 Way(2).....	23
Art Cool Series	
ART COOL Miror	30
ART COOL Gallery	41
Ceiling Concealed Duct	
Low Static	51
Built In	57
High Static.....	63
Wall Mounted(General)	
Wall Mounted	72
Ceiling & Floor	
Ceiling & Floor	
Ceiling Suspended.....	83
Floor Standing	
Floor Standing.....	90

Ceiling Mounted Cassette Type (1Way)

1. Functions	9
2. Operation Details.....	10
3. Dimensions	12

1. Functions

Indoor Unit

Operation ON/OFF by Remote controller

Sensing the Room Temperature

- Room temperature sensor. (Thermistor)

Room temperature control

- Maintains the room temperature in accordance with the Setting Temperature.

Starting Current Control

- Indoor fan is delayed for 5 seconds at the starting.

Indoor Fan Speed Control

- Jet, High, Med, Low, Lolow

Soft Dry Operation Mode

- Intermittent operation of fan at low speed.

Airflow Direction Control

- The louver can be set at swing up and down automatically.

Auto Restart

- Although the air-conditioner is turned off by a power failure, it is restarted automatically previous operation mode after power supply.

Deice (defrost) control (Heating)

- Both the indoor and outdoor fan stops during defrosting.
- Hot start after defrost ends.

Hot-start Control (Heating)

- The indoor fan does not rotate until the evaporator piping temperature will be reached at 25°C.

Compact and light design

- To install a unit is very convenient because of smaller size than textile.

Low noise

- The most advanced low-noise design.
- The adoption of turbo fan and round type heat exchanger give the quietest operation.

Long life filter

- Long life wrinkle(type) and washable and anti-bacteria filter is adopted.

High head Drain pump

- Built-in drain pump automatically drains water.
- A standard drain-head height of up to 700mm is possible.

High-Ceiling corresponding Function

- According to the height of ceiling, the RPM of indoor fan motor is selected to increase air reaching distance.

Central Control(Optional)

- It is operating individually or totally by central control function.

2. Operation Detail

(1) The function of main control

■ Auto Swing Control


- This function is to swing the louver up and down automatically.

■ Soft-Dry Operation

- The indoor fan speed is automatically set to the low, so the shift of the indoor fan speed is impossible because of already being set to the best speed for Dry Operation by microcontroller control.

■ Cooling Mode Operation


- When selecting the Cooling(※) Mode Operation, the unit will operate according to the setting by the remote controller and the operation diagram is as following

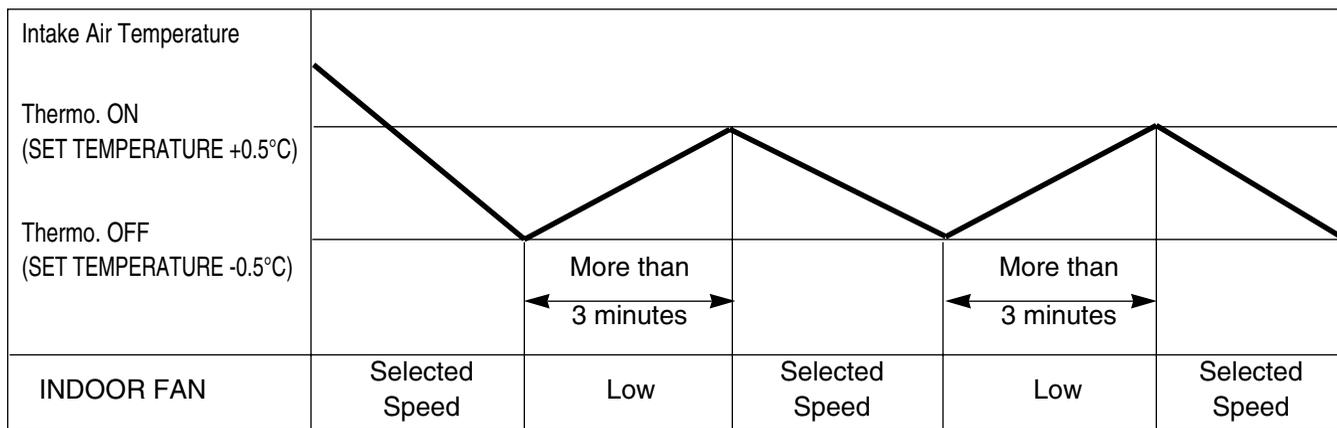

	Thermal ON	Thermal OFF
Indoor Unit mode	ST+0.5	ST-0.5
2TH (Remo.+Indoor)	To be selected higher temperature contrast Indoor Unit and Remo.	To be selected higher temperature contrast Indoor Unit and Remo.
Remo. Mode	ST+0.5	ST-0.5

■ Heating Mode Operation


The unit will operate according to the setting by the remote controller and the operation diagram is shown as following.

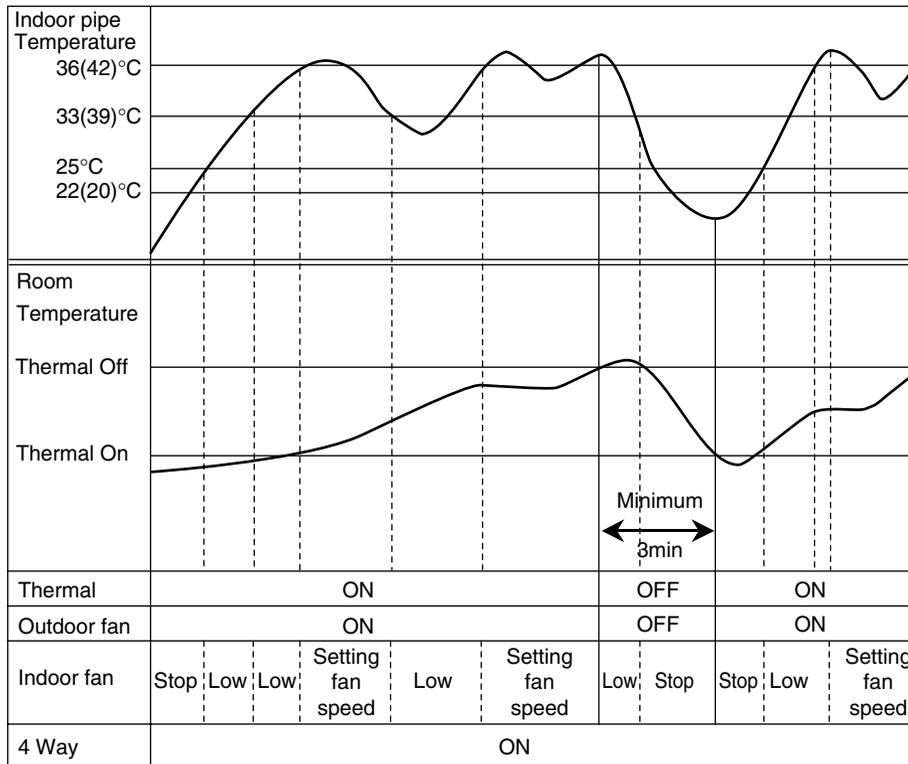

	Thermal ON	Thermal OFF
Indoor Unit mode	ST+2	ST+4
2TH (Remo.+Indoor)	To be selected lower temperature contrast Indoor Unit and Remo.	To be selected lower temperature contrast Indoor Unit and Remo.
Remo. mode	ST+0	ST+2

■ Hot-start Control

- The indoor fan does not rotate until the evaporator piping temperature will be reached to 25°C.
- The operation diagram is as following.

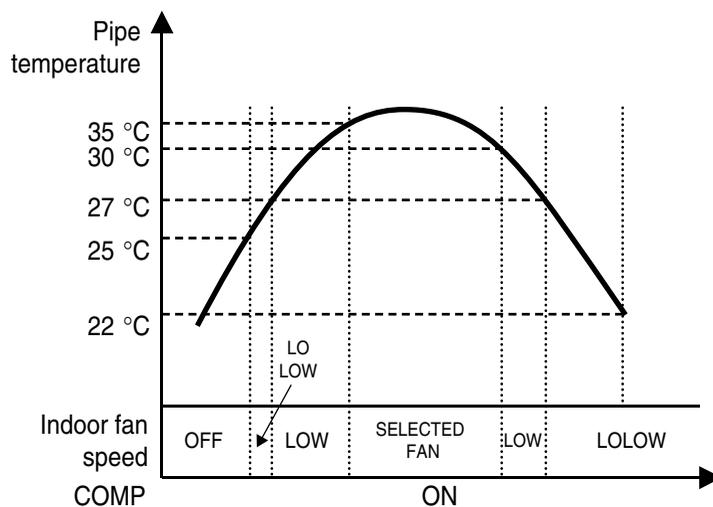

3. Dimensions

Ceiling Cassette 1-way

ARNU07GTJ*2
ARNU09GTJ*2
ARNU12GTJ*2

(unit : mm)

Number	Name	Description
1	Liquid pipe connection	ø6.35 flare
2	Gas pipe connection	ø12.7 flare
3	Air suction grill	
4	Air discharge grill	

Note

- Unit should be installed in compliance with the installation manual in the product box.
- Unit shall be grounded in accordance with the local regulations or applicable national codes.

The technical drawings include:

- Top View:** Shows a rectangular unit with dimensions 961.2 mm (width) and 860 mm (depth). Mounting hole spacing is 19.1 mm and 16.5 mm. Internal dimensions include 32.8 mm, 344.4 mm, and 410 mm.
- Side View:** Shows the unit's profile with dimensions 198.8 mm (height), 131 mm (width), 16.4 mm (thickness), and 110 mm (depth).
- Detail View:** Shows the rear panel with dimensions 173 mm, 242.5 mm, 151 mm, 100 mm, 56 mm, 30 mm, 25.4 mm, and 83 mm.
- Front View:** Shows the air discharge grill with dimensions 1070 mm (width) and 939 mm (height). The air suction grill width is 480 mm.

76, Seongsan-dong, Changwon City, Gyeongnam,
641-713, Korea
www.lgeaircon.com

LG Electronics

CHASSIS CODE:TJ

Ceiling Mounted Cassette Type (2Way)

1. Functions	14
2. Operation Details.....	15
3. Dimensions	17

1. Functions

Indoor Unit

Operation ON/OFF by Remote controller

Sensing the Room Temperature

- Room temperature sensor. (Thermistor)

Room temperature control

- Maintains the room temperature in accordance with the Setting Temperature.

Starting Current Control

- Indoor fan is delayed for 5 seconds at the starting.

Indoor Fan Speed Control

- Jet, High, Med, Low, Lolow

Soft Dry Operation Mode

- Intermittent operation of fan at low speed.

Airflow Direction Control

- The louver can be set at swing up and down automatically.

Auto Restart

- Although the air-conditioner is turned off by a power failure, it is restarted automatically previous operation mode after power supply.

Deice (defrost) control (Heating)

- Both the indoor and outdoor fan stops during defrosting.
- Hot start after defrost ends.

Hot-start Control (Heating)

- The indoor fan does not rotate until the evaporator piping temperature will be reached at 25°C.

Compact and light design

- To install a unit is very convenient because of smaller size than textile.

Low noise

- The most advanced low-noise design.
- The adoption of turbo fan and round type heat exchanger give the quietest operation.

Long life filter

- Long life wrinkle(type) and washable and anti-bacteria filter is adopted.

High head Drain pump

- Built-in drain pump automatically drains water.
- A standard drain-head height of up to 700mm is possible.

High-Ceiling corresponding Function

- According to the height of ceiling, the RPM of indoor fan motor is selected to increase air reaching distance.

Central Control(Optional)

- It is operating individually or totally by central control function.

2. Operation Detail

(1) The function of main control

■ Auto Swing Control


- This function is to swing the louver up and down automatically.

■ Soft-Dry Operation

- The indoor fan speed is automatically set to the low, so the shift of the indoor fan speed is impossible because of already being set to the best speed for Dry Operation by microcontroller control.

■ Cooling Mode Operation


- When selecting the Cooling(※) Mode Operation, the unit will operate according to the setting by the remote controller and the operation diagram is as following

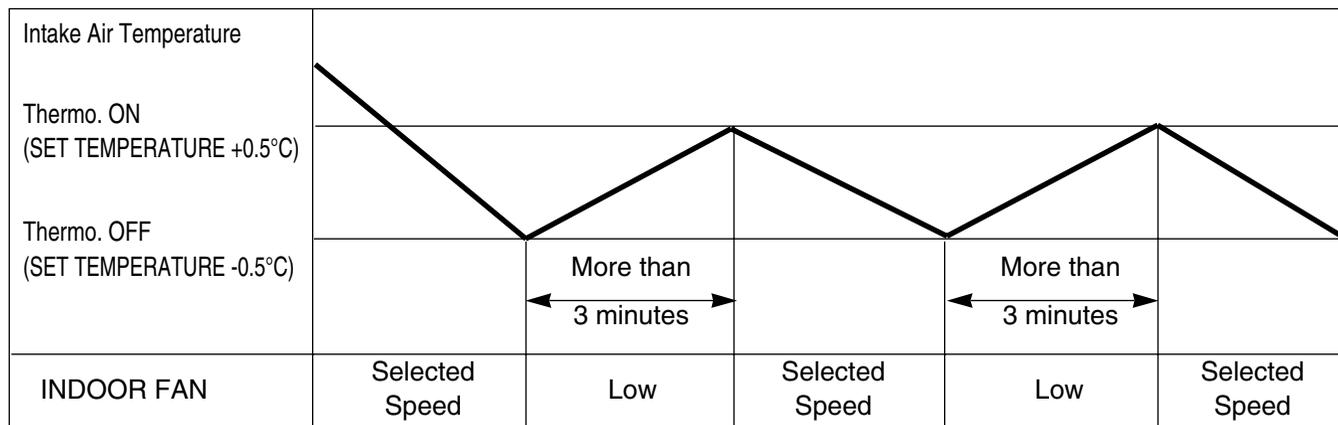

	Thermal ON	Thermal OFF
Indoor Unit mode	ST+0.5	ST-0.5
2TH (Remo.+Indoor)	To be selected higher temperature contrast Indoor Unit and Remo.	To be selected higher temperature contrast Indoor Unit and Remo.
Remo. Mode	ST+0.5	ST-0.5

■ Heating Mode Operation


The unit will operate according to the setting by the remote controller and the operation diagram is shown as following.

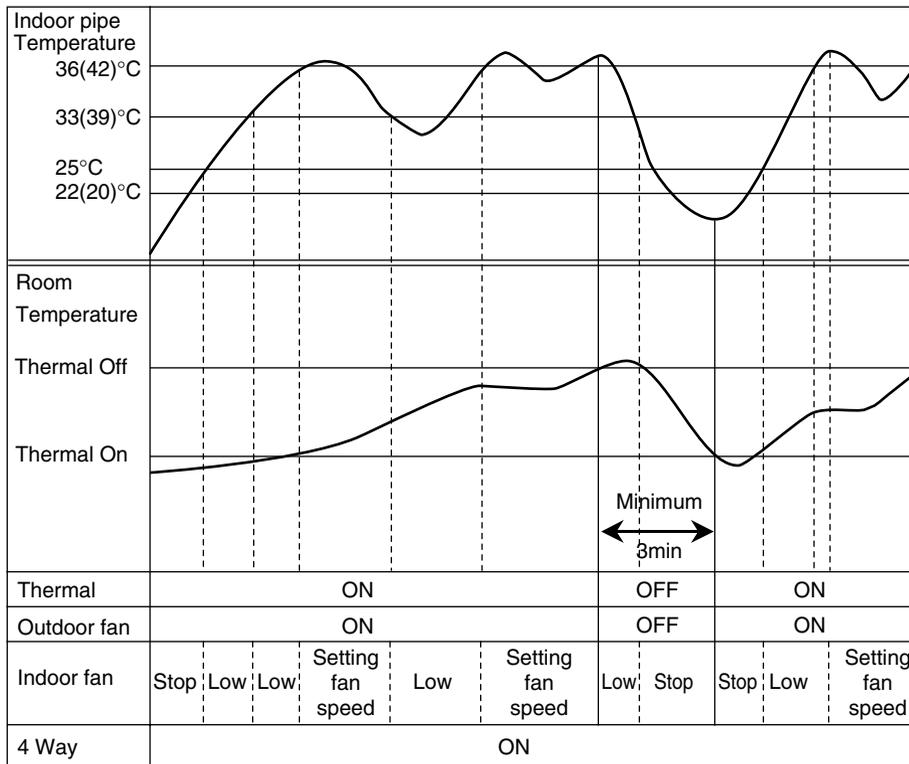

	Thermal ON	Thermal OFF
Indoor Unit mode	ST+2	ST+4
2TH (Remo.+Indoor)	To be selected lower temperature contrast Indoor Unit and Remo.	To be selected lower temperature contrast Indoor Unit and Remo.
Remo. mode	ST+0	ST+2

■ Hot-start Control

- The indoor fan does not rotate until the evaporator piping temperature will be reached to 25°C.
- The operation diagram is as following.

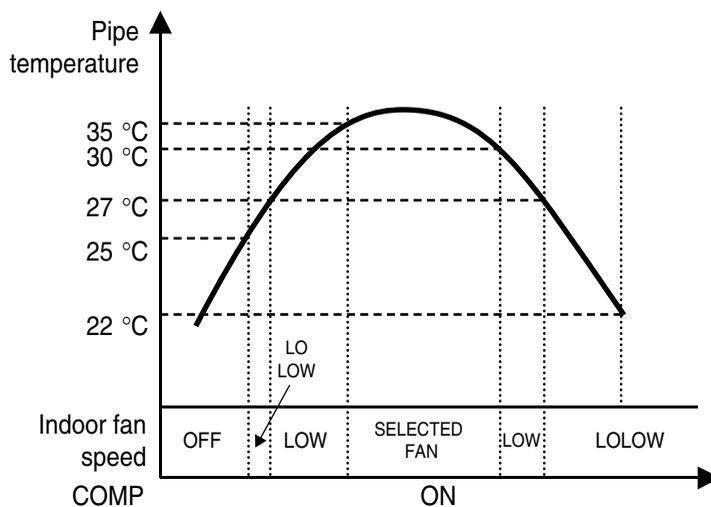

3. Dimensions

Ceiling Cassette 2-way

ARNU18GTL*2
ARNU24GTL*2

Number	Name	Description
1	Liquid pipe connection	(18k) ϕ 6.35, (24k) ϕ 9.52
2	Gas pipe connection	(18k) ϕ 12.7, (24k) ϕ 15.88
3	Air suction grill	
4	Air discharge grill	

(unit : mm)

Note

1. Unit should be installed in compliance with the installation manual in the product box.

2. Unit shall be grounded in accordance with the local regulations or applicable national codes.

TL	225
A	225
B	126.5

LG Electronics

76, Seongsan-dong, Changwon City, Gyeongnam,
641-713, Korea
www.lgeaircon.com

CHASSIS CODE: TL

Copyright ©2008 LG Electronics, Inc. All right reserved.
Only for training and service purposes

- 17 -

LGE Internal Use Only

Ceiling Mounted Cassette Type (4Way) (1)

1. Functions	19
2. Operation Details.....	20
3. Dimensions	22

1. Functions

Indoor Unit

Operation ON/OFF by Remote controller

Sensing the Room Temperature • Room temperature sensor. (Thermistor)

Room temperature control • Maintains the room temperature in accordance with the Setting Temperature.

Starting Current Control • Indoor fan is delayed for 5 seconds at the starting.

Indoor Fan Speed Control • Jet, High, Med, Low, Lolow

Soft Dry Operation Mode • Intermittent operation of fan at low speed.

Airflow Direction Control • The louver can be set at swing up and down automatically.

Auto Restart • Although the air-conditioner is turned off by a power failure, it is restarted automatically previous operation mode after power supply.

Deice (defrost) control (Heating) • Both the indoor and outdoor fan stops during defrosting.
• Hot start after defrost ends.

Hot-start Control (Heating) • The indoor fan does not rotate until the evaporator piping temperature will be reached at 25°C.

Compact and light design • To install a unit is very convenient because of smaller size than textile.

Low noise • The most advanced low-noise design.
• The adoption of turbo fan and round type heat exchanger give the quietest operation.

Long life filter • Long life wrinkle(type) and washable and anti-bacteria filter is adopted.

High head Drain pump • Built-in drain pump automatically drains water.
• A standard drain-head height of up to 700mm is possible.

High-Ceiling corresponding Function • According to the height of ceiling, the RPM of indoor fan motor is selected to increase air reaching distance.

Central Control(Optional) • It is operating individually or totally by central control function.

Swirl Swing Control • It is operating swirl swing

2. Operation Detail

(1) The function of main control

■ Auto Swing Control


- This function is to swing the louver up and down automatically.

■ Soft-Dry Operation

- The indoor fan speed is automatically set to the low, so the shift of the indoor fan speed is impossible because of already being set to the best speed for Dry Operation by microcontroller control.

■ Cooling Mode Operation

- When selecting the Cooling(*) Mode Operation, the unit will operate according to the setting by the remote controller and the operation diagram is as following

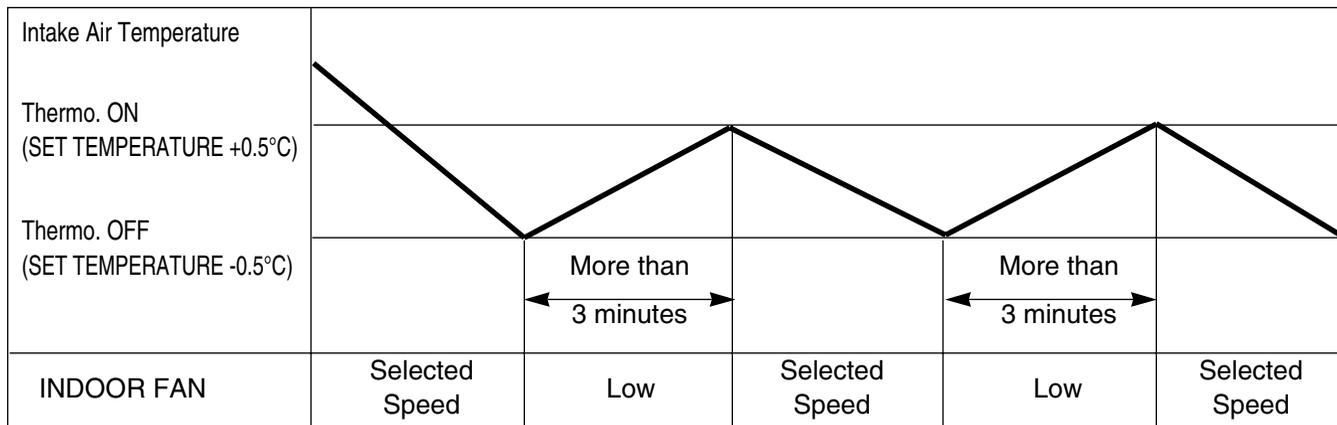


	Thermal ON	Thermal OFF
Indoor Unit mode	ST+0.5	ST-0.5
2TH (Remo.+Indoor)	To be selected higher temperature contrast Indoor Unit and Remo.	To be selected higher temperature contrast Indoor Unit and Remo.
Remo. Mode	ST+0.5	ST-0.5

■ Swirl Swing Control


Vane 2, 4 is almost vane closed while vane1, 3 is opened.

Vane 1, 3 and vane 2,4 turn over minutely

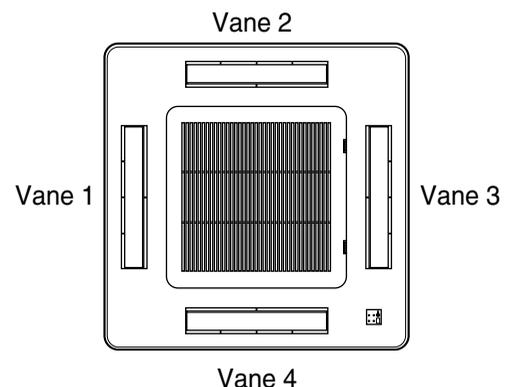

■ Heating Mode Operation


The unit will operate according to the setting by the remote controller and the operation diagram is shown as following.

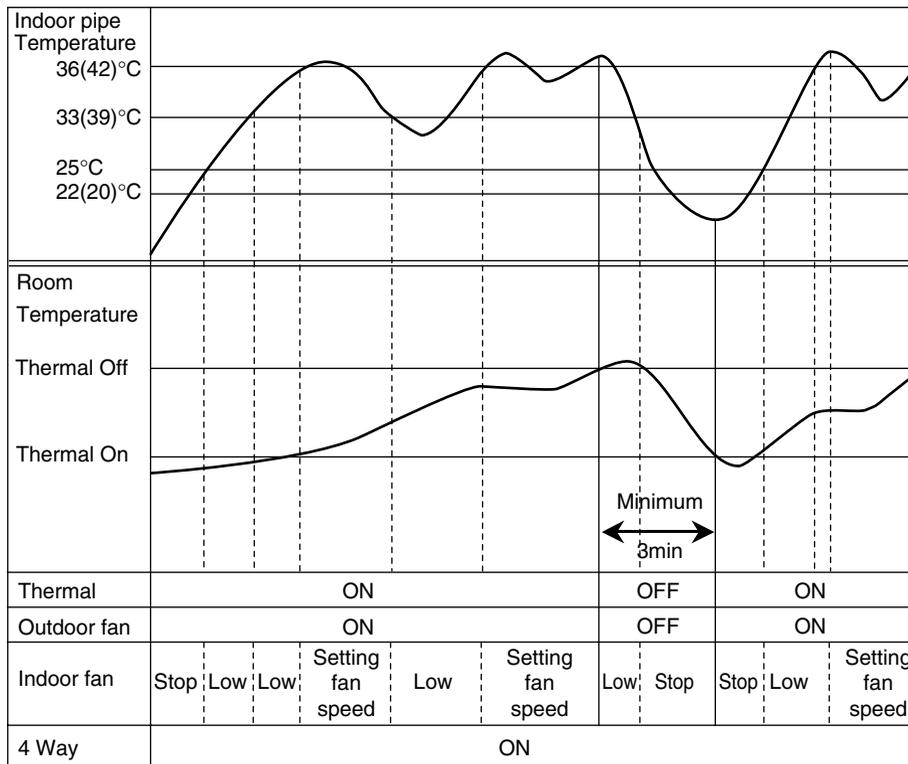

	Thermal ON	Thermal OFF
Indoor Unit mode	ST+2	ST+4
2TH (Remo.+Indoor)	To be selected lower temperature contrast Indoor Unit and Remo.	To be selected lower temperature contrast Indoor Unit and Remo.
Remo. mode	ST+0	ST+2

■ Hot-start Control

- The indoor fan does not rotate until the evaporator piping temperature will be reached to 25°C.
- The operation diagram is as following.

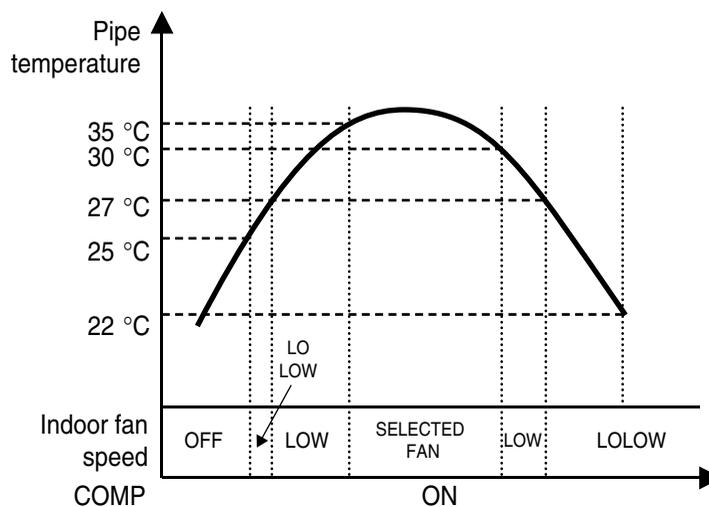

3. Dimensions

<p>Ceiling Cassette 4-way</p>	<p>ARNU07GTE*2 ARNU09GTE*2 ARNU12GTE*2 ARNU15GTE*2 ARNU18GTE*2</p>	<p>(unit : mm)</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 10%;">Number</th> <th style="width: 20%;">Name</th> <th style="width: 70%;">Description</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">1</td> <td>Liquid pipe connection</td> <td>Unit size(7k, 9k, 12k, 18k)ø6.35</td> </tr> <tr> <td style="text-align: center;">2</td> <td>Gas pipe connection</td> <td>Unit size(7k, 9k, 12k, 18k)ø12.7</td> </tr> <tr> <td style="text-align: center;">3</td> <td>Drain pipe connection</td> <td></td> </tr> <tr> <td style="text-align: center;">4</td> <td>Power supply connection</td> <td></td> </tr> <tr> <td style="text-align: center;">5</td> <td>Air discharge grill</td> <td></td> </tr> <tr> <td style="text-align: center;">6</td> <td>Air suction grill</td> <td></td> </tr> </tbody> </table> <p>■ Note</p> <ol style="list-style-type: none"> 1. Unit should be installed in compliance with the installation manual in the product box. 2. Unit shall be grounded in accordance with the local regulations or applicable national codes. 	Number	Name	Description	1	Liquid pipe connection	Unit size(7k, 9k, 12k, 18k)ø6.35	2	Gas pipe connection	Unit size(7k, 9k, 12k, 18k)ø12.7	3	Drain pipe connection		4	Power supply connection		5	Air discharge grill		6	Air suction grill	
Number	Name	Description																					
1	Liquid pipe connection	Unit size(7k, 9k, 12k, 18k)ø6.35																					
2	Gas pipe connection	Unit size(7k, 9k, 12k, 18k)ø12.7																					
3	Drain pipe connection																						
4	Power supply connection																						
5	Air discharge grill																						
6	Air suction grill																						

269
670
670

670
521
670

670
30

570
450
570
450
120.4

269
110
90
30
40

76, Seongsan-dong, Changwon City, Gyeongnam,
641-713, Korea
www.lgeaircon.com

LG Electronics

CHASSIS CODE: TE

Ceiling Mounted Cassette Type (4Way) (2)

1. Functions	24
2. Operation Details.....	25
3. Dimensions	27

1. Functions

Indoor Unit

Operation ON/OFF by Remote controller

Sensing the Room Temperature

- Room temperature sensor. (Thermistor)

Room temperature control

- Maintains the room temperature in accordance with the Setting Temperature.

Starting Current Control

- Indoor fan is delayed for 5 seconds at the starting.

Indoor Fan Speed Control

- Jet, High, Med, Low, Lolow

Soft Dry Operation Mode

- Intermittent operation of fan at low speed.

Airflow Direction Control

- The louver can be set at swing up and down automatically.

Auto Restart

- Although the air-conditioner is turned off by a power failure, it is restarted automatically previous operation mode after power supply.

Deice (defrost) control (Heating)

- Both the indoor and outdoor fan stops during defrosting.
- Hot start after defrost ends.

Hot-start Control (Heating)

- The indoor fan does not rotate until the evaporator piping temperature will be reached at 25°C.

Compact and light design

- To install a unit is very convenient because of smaller size than textile.

Low noise

- The most advanced low-noise design.
- The adoption of turbo fan and round type heat exchanger give the quietest operation.

Long life filter

- Long life wrinkle(type) and washable and anti-bacteria filter is adopted.

High head Drain pump

- Built-in drain pump automatically drains water.
- A standard drain-head height of up to 700mm is possible.

High-Ceiling corresponding Function

- According to the height of ceiling, the RPM of indoor fan motor is selected to increase air reaching distance.

Central Control(Optional)

- It is operating individually or totally by central control function.

Swirl Swing Control

- It is operating swirl swing

2. Operation Detail

(1) The function of main control

■ Auto Swing Control


- This function is to swing the louver up and down automatically.

■ Soft-Dry Operation

- The indoor fan speed is automatically set to the low, so the shift of the indoor fan speed is impossible because of already being set to the best speed for Dry Operation by microcontroller control.

■ Cooling Mode Operation

- When selecting the Cooling(※) Mode Operation, the unit will operate according to the setting by the remote controller and the operation diagram is as following

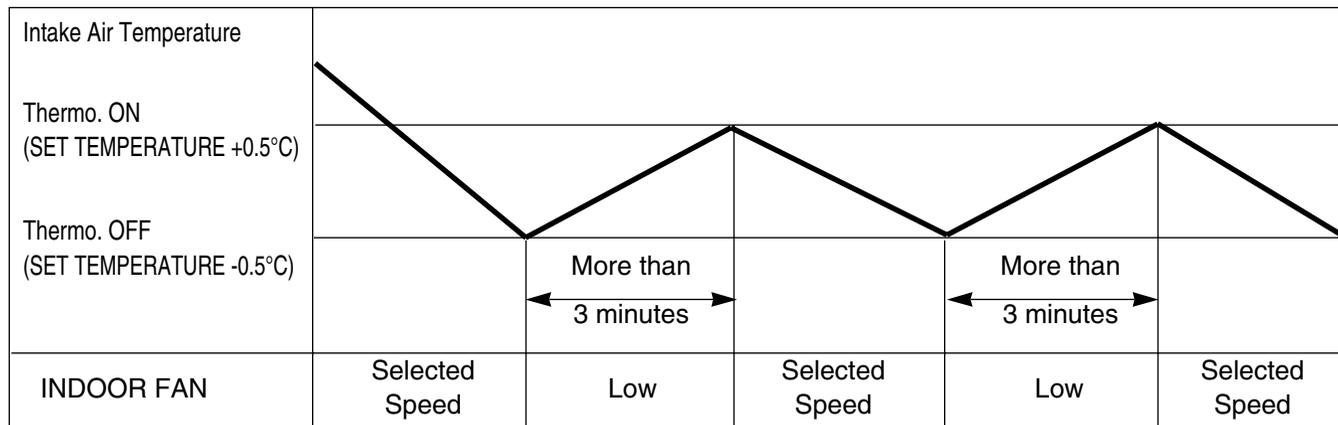


	Thermal ON	Thermal OFF
Indoor Unit mode	ST+0.5	ST-0.5
2TH (Remo.+Indoor)	To be selected higher temperature contrast Indoor Unit and Remo.	To be selected higher temperature contrast Indoor Unit and Remo.
Remo. Mode	ST+0.5	ST-0.5

■ Swirl Swing Control


Vane 2, 4 is almost vane closed while vane1, 3 is opened.

Vane 1, 3 and vane 2,4 turn over minutely

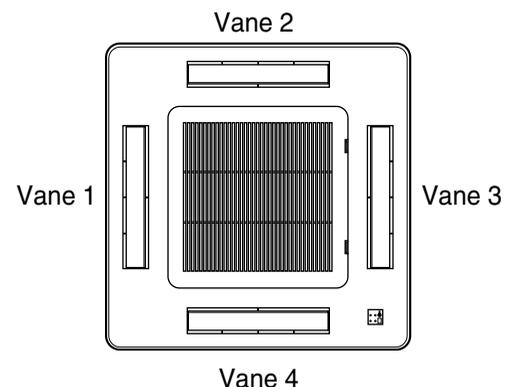

■ Heating Mode Operation


The unit will operate according to the setting by the remote controller and the operation diagram is shown as following.

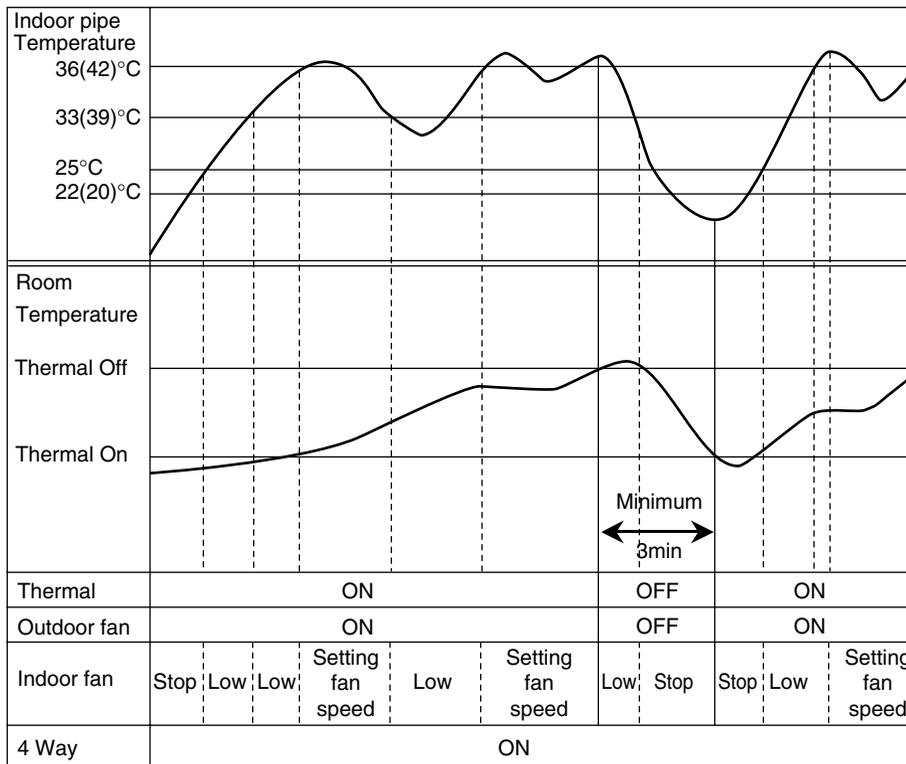

	Thermal ON	Thermal OFF
Indoor Unit mode	ST+2	ST+4
2TH (Remo.+Indoor)	To be selected lower temperature contrast Indoor Unit and Remo.	To be selected lower temperature contrast Indoor Unit and Remo.
Remo. mode	ST+0	ST+2

■ Hot-start Control

- The indoor fan does not rotate until the evaporator piping temperature will be reached to 25°C.
- The operation diagram is as following.

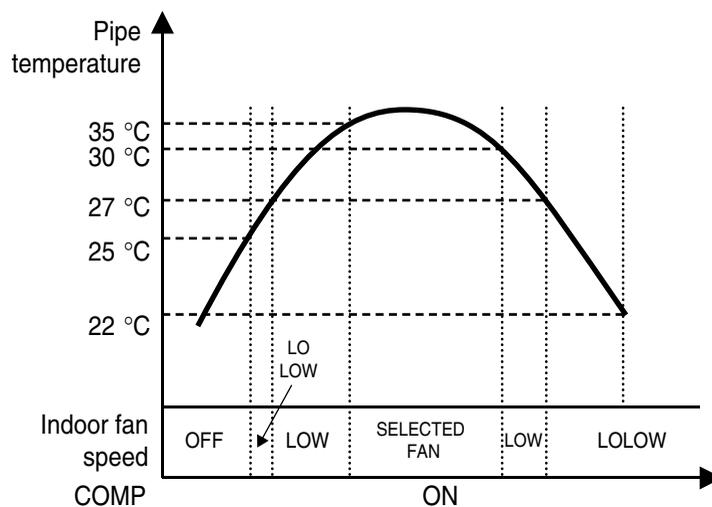

3. Dimensions

Ceiling Cassette 4-way

ARNU24GTP*2
ARNU28GTP*2

Number	Name	Description
1	Liquid pipe connection	Unit size(24k, 28k);ø9.52
2	Gas pipe connection	Unit size(24k, 28k);ø15.88
3	Drain pipe connection	
4	Power supply connection	
5	Air discharge grill	
6	Air suction grill	

(unit : mm)

The technical drawings show the following dimensions:

- Top View:** Overall width 840mm, depth 840mm. Internal width 787mm, depth 787mm. Mounting hole offset 671mm from the left edge.
- Side View:** Total height 204mm. Mounting hole offset 154mm from the bottom edge.
- Detail View (Right):** Shows connections with dimensions: 204mm total height, 108mm offset for connection 1, 60mm offset for connection 2, 85.40mm offset for connection 3, 80mm offset for connection 4, and 180mm offset for connection 5.
- Detail View (Bottom):** Shows air outlet holes with dimensions: 618mm width, 292mm height, 54mm offset from the left edge, 734mm offset for the 500mm hole, and 950mm total width.

Note

- Unit should be installed in compliance with the installation manual in the product box.
- Unit shall be grounded in accordance with the local regulations or applicable national codes.


76, Seongsan-dong, Changwon City, Gyeongnam,
641-713, Korea
www.lgeaircon.com

CHASSIS CODE: TP




Dimensions

Ceiling Cassette 4-way

ARNU36GTN*2

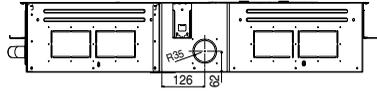

A direction View

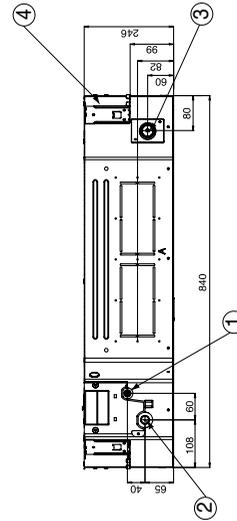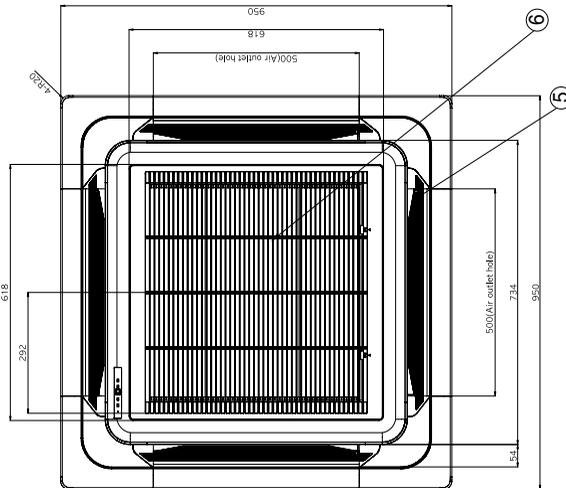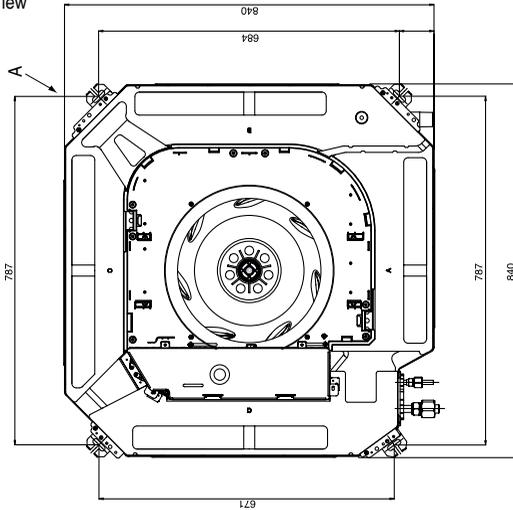

Number	Name	Description
1	Liquid pipe connection	Unit size(36k):ø9.52
2	Gas pipe connection	Unit size(36k):ø15.88
3	Drain pipe connection	
4	Power supply connection	
5	Air discharge grill	
6	Air suction grill	

(unit : mm)

Note

1. Unit should be installed in compliance with the installation manual in the product box.
2. Unit shall be grounded in accordance with the local regulations or applicable national codes.

CHASSIS CODE: TN

76, Seongsan-dong, Changwon City, Gyeongnam,
641-713, Korea
www.lgeaircon.com



Ceiling Cassette 4-way

ARNU42GTM*2
ARNU48GTM*2

A direction View

Number	Name	Description
1	Liquid pipe connection	Unit size(42k):ø9.52
2	Gas pipe connection	Unit size(48k):ø15.88
3	Drain pipe connection	
4	Power supply connection	
5	Air discharge grill	
6	Air suction grill	

(unit : mm)

Note

- Unit should be installed in compliance with the installation manual in the product box.
- Unit shall be grounded in accordance with the local regulations or applicable national codes.

LG Electronics

76, Seongsan-dong, Changwon City, Gyeongnam,
641-713, Korea
www.lgeaircon.com

CHASSIS CODE: TM

Art Cool Type(Mirror)

1. Functions	31
2. Operation Details.....	32
3. Dimensions	39

1. Functions

Indoor Unit

Operation ON/OFF by Remote controller

Sensing the Room Temperature

- Room temperature sensor. (THERMISTOR)

Room temperature control

- Maintains the room temperature in accordance with the Setting Temp.

Starting Current Control

- Indoor fan is delayed for 5 sec at the starting.

Indoor Fan Speed Control

- High, Med, Low, CHAOS

Operation indication Lamps (LED)

Signal Receptor

Receives the signals from the remote control.(Signal receiving sound: two short beeps or one long beep.)

Operation Indication Lamps

- | | | |
|--------|--------------|---|
| ⓪ | On/Off | : Lights up during the system operation. |
| ☆ | Sleep Mode | : Lights up during Sleep Mode Auto operation. |
| ⌚ | Timer | : Lights up during Timer operation. |
| *
⓪ | Defrost Mode | : Lights up during Defrost Mode or Hot Start operation. |

Soft Dry Operation Mode

- Intermittent operation of fan at low speed.

Sleep Mode Auto Control

- The fan is switched to low(Cooling), med(Heating) speed.
- The unit will be stopped after 1, 2, 3, 4, 5, 6, 7 hours.

Natural Air Control by CHAOS Logic

- The fan is switched to intermittent or irregular operation
- The fan speed is automatically switched from high to low speed.

Airflow Direction Control

- The louver can be set at the desired position or swing up and down automatically.

Defrost(Deice) control (Heating)

- Both the indoor and outdoor fan stops during defrosting.

Hot-start Control (Heating)

- The indoor fan does not rotate until the evaporator pipe temperature will be reached at 28°C.

2. Operation Details

Function of Controls

DISPLAY

1) High quality LCD remote controller supplied

Operation Indicator

- On while in appliance operation, off while in appliance pause

Timer Indicator

- On while in timer mode (on/off) and in sleep timer mode, off when timer mode is completed or canceled

Defrost Indicator

- Off except when hot start during heating mode operation or while in defrost control.

Plasma Indicator

- On while in plasma mode, off while plasma mode is canceled.

Auto restart Indicator

- On while auto restart mode, off while auto restart mode is canceled.

Auto restart

- In case the power comes on again after a power failure, Auto Restarting Operation is the function to operate procedures automatically to the previous operating conditions.
If you want to use this operation, press the Auto Restart Button.

Power(Forced Operation)

- Operation starts, when this button is pressed and stops when you press the button again.

■ Cooling Mode Operation

- When the intake air temperature reaches 0.5°C below the setting temp, the compressor and the outdoor fan stop.
- When it reaches 0.5°C above the setting temp, they start to operate again.
Compressor ON Temp => Setting Temp+0.5°C
Compressor OFF Temp => Setting Temp-0.5°C
- While in compressor running, operating with the airflow speed set by the remote controller. While in compressor not running, operating with the low airflow speed regardless of the setting.

■ Healthy Dehumidification Mode

- When the dehumidification operation input by the remote controller is received, the intake air temperature is detected and the setting temp is automatically set according to the intake air temperature.
 $26^{\circ}\text{C} \leq \text{Intake Air Temp} \Rightarrow 25^{\circ}\text{C}$
 $24^{\circ}\text{C} \leq \text{Intake Air Temp} < 26^{\circ}\text{C} \Rightarrow \text{Intake Air Temp}-1^{\circ}\text{C}$
 $18^{\circ}\text{C} \leq \text{Intake Air Temp} < 24^{\circ}\text{C} \Rightarrow \text{Intake Air Temp}-0.5^{\circ}\text{C}$
 $\text{Intake Air Temp} < 18^{\circ}\text{C} \Rightarrow 18^{\circ}\text{C}$
- While in compressor off, the indoor fan repeats low airflow speed and pause.
- While the intake air temp is between compressor on temp. and compressor off temp., 10-min dehumidification operation and 4-min compressor off repeat
 Compressor ON Temp. \Rightarrow Setting Temp+0.5°C
 Compressor OFF Temp. \Rightarrow Setting Temp-0.5°C
- In 10-min dehumidification operation, the indoor fan operates with the low airflow speed.

■ Heating Mode Operation

- When the intake air Temp. reaches Compressor OFF Temp., the compressor is turned off.
 When the intake air Temp. reaches Compressor ON Temp., the compressor is turned on.
 Thermo ON Temp. \Rightarrow Setting Temp. +2°C
 Thermo OFF Temp. \Rightarrow Setting Temp.+4°C
- While in compressor on, when above 38°C, it operates with setting airflow speed (while in sleep mode, with the medium airflow speed).
- While in compressor off, the indoor fan is off when the indoor pipe temp is below 33°C , when above 35°C , it operates with the low airflow speed.
- While in defrost control, both of the indoor and outdoor fans are turned off.

■ Defrost Control

- While in heating mode operation in order to protect outdoor unit from freezing, reversed to cooling cycle to defrost of the outdoor unit.

■ Fuzzy Operation (Outdoor unit C/O Model)

- According to the temperature set by Fuzzy rule, when the intake air temp is 0.5°C or more below the setting temp, the compressor is turned off. When 0.5°C or more above the setting temp, the compressor is turned on.
 Compressor ON Temp \Rightarrow Setting Temp+0.5°C
 Compressor OFF Temp \Rightarrow Setting Temp+0.5°C
- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.
 $26^{\circ}\text{C} \leq \text{Intake Air Temp} \Rightarrow 25^{\circ}\text{C}$
 $24^{\circ}\text{C} \leq \text{Intake Air Temp} < 26^{\circ}\text{C} \Rightarrow \text{Intake Air Temp}+1^{\circ}\text{C}$
 $22^{\circ}\text{C} \leq \text{Intake Air Temp} < 24^{\circ}\text{C} \Rightarrow \text{Intake Air Temp}+0.5^{\circ}\text{C}$
 $18^{\circ}\text{C} \leq \text{Intake Air Temp} < 22^{\circ}\text{C} \Rightarrow \text{Intake Air Temp}$
 $\text{Intake Air Temp} < 18^{\circ}\text{C} \Rightarrow 18^{\circ}\text{C}$
- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan is automatically selected according to the temperature

■ Fuzzy Operation (Outdoor unit H/P Model)

- When any of operation mode is not selected like the moment of the power on or when 3 hrs has passed since the operation off, the operation mode is selected.
- When determining the operation mode, the compressor, the outdoor fan, and the 4 way valve are off and only the indoor fan is operated for 15 seconds. Then an operation mode is selected according to the intake air temp at that moment as follows.
24°C ≤ Inatake Air Temp ⇒ Fuzzy Operation for Cooling
21°C ≤ Inatake Air Temp < 24°C ⇒ Fuzzy Operation for Dehumidification
Inatake Air Temp < 21°C ⇒ Fuzzy Operation for Heating
- If any of the operation modes among cooling / dehumidification / heating mode operations is carried out for 10 sec or longer before Fuzzy operation, the mode before Fuzzy operation is operated.

1) Fuzzy Operation for Cooling

- According to the setting temperature selected by Fuzzy rule, when the intake air temp is 0.5°C or more below the setting temp, the compressor is turned off. When 0.5°C or more above the setting temp, the compressor is turned on.
Compressor ON Temp ⇒ Setting Temp + 0.5°C
Compressor OFF Temp ⇒ Setting Temp - 0.5°C
- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.
26°C ≤ Intake Air Temp ⇒ 25°C
24°C ≤ Intake Air Temp < 26°C ⇒ Intake Air Temp + 1°C
22°C ≤ Intake Air Temp < 24°C ⇒ Intake Air Temp + 0.5°C
18°C ≤ Intake Air Temp < 22°C ⇒ Intake Air Temp
Intake Air Temp < 18°C ⇒ 18°C
- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan is automatically selected according to the temperature.

2) Fuzzy Operation for Dehumidification

- According to the setting temperature selected by Fuzzy rule, when the intake air temp is 0.5°C or more below the setting temp, the compressor is turned off. When 0.5°C or more above the setting temp, the compressor is turned on.
Compressor ON Temp ⇒ Setting Temp + 0.5°C
Compressor OFF Temp ⇒ Setting Temp - 0.5°C

- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.
 $26^{\circ}\text{C} \leq \text{Intake Air Temp} \Rightarrow 25^{\circ}\text{C}$
 $24^{\circ}\text{C} \leq \text{Intake Air Temp} < 26^{\circ}\text{C} \Rightarrow \text{Intake Air Temp} + 1^{\circ}\text{C}$
 $22^{\circ}\text{C} \leq \text{Intake Air Temp} < 24^{\circ}\text{C} \Rightarrow \text{Intake Air Temp} + 0.5^{\circ}\text{C}$
 $18^{\circ}\text{C} \leq \text{Intake Air Temp} < 22^{\circ}\text{C} \Rightarrow \text{Intake Air Temp}$
 $\text{Intake Air Temp} < 18^{\circ}\text{C} \Rightarrow 18^{\circ}\text{C}$
- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan repeats the low airflow speed or pause as in dehumidification operation.

3) Fuzzy Operation for Heating

- According to the setting temperature selected by Fuzzy rule, when the intake air temp is 3°C or more above the setting temp, the compressor is turned off. When below the setting temp, the compressor is turned on.
 $\text{Compressor ON Temp} \Rightarrow \text{Setting Temp} + 2^{\circ}\text{C}$
 $\text{Compressor OFF Temp} \Rightarrow \text{Setting Temp} + 4^{\circ}\text{C}$
- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.
 $20^{\circ}\text{C} \leq \text{Intake Air Temp} \Rightarrow \text{Intake Air Temp} + 0.5^{\circ}\text{C}$
 $\text{Intake Air Temp} < 20^{\circ}\text{C} \Rightarrow 20^{\circ}\text{C}$
- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan is set to the high or the medium according to the intake air temperature and the setting temperature.

■ Airflow Speed Selection

- The airflow speed of the indoor fan is set to high, medium, low, or chaos by the input of the airflow speed selection key on the remote controller.

■ On-Timer Operation

- When the set time is reached after the time is input by the remote controller, the appliance starts to operate.
- The timer LED is on when the on-timer is input. It is off when the time set by the timer is reached.
- If the appliance is operating at the time set by the timer, the operation continues.

■ Off-Timer Operation

- When the set time is reached after the time is input by the remote controller, the appliance stops operating.
- The timer LED is on when the off-timer is input. It is off when the time set by the timer is reached.
- If the appliance is on pause at the time set by the timer, the pause continues.

■ Off-Timer <=> On-Timer Operation

- When the set time is reached after the on/off time is input by the remote controller, the on/off-timer operation is carried out according to the set time.

■ Sleep Timer Operation

- When the sleep time is reached after <1,2,3,4,5,6,7,0(cancel) hr> is input by the remote controller while in appliance operation, the operation of the appliance stops.
- While the appliance is on pause, the sleep timer mode cannot be input.
- While in cooling mode operation, 30 min later since the start of the sleep timer, the setting temperature increases by 1°C. After another 30 min elapse, it increases by 1°C again.
- When the sleep timer mode is input while in cooling cycle mode, the airflow speed of the indoor fan is set to the low.
- When the sleep timer mode is input while in heating cycle mode, the airflow speed of the indoor fan is set to the medium.

■ Chaos Swing Mode

- By the Chaos Swing key input, the vane automatically operates with the Chaos Swing or they are fixed to the desired direction.

■ Chaos Natural Wind Mode

- When the Chaos Natural Wind mode is selected and then operated, the high, medium, or low speed of the airflow mode is operated for 2~15 sec randomly by the Chaos Simulation.”

■ Jet Cool Mode Operation (Outdoor unit C/O Model)

- If the Jet Cool key is input at any operation mode while in appliance operation, the Jet Cool mode operates.
- In the Jet Cool mode, the indoor fan is operated at super-high speed for 30 min at cooling mode operation.
- In the Jet Cool mode operation, the room temperature is controlled to the setting temperature, 18°C
- When the sleep timer mode is input while in the Jet Cool mode operation, the Jet Cool mode has the priority.
- When the Jet Cool key is input, the upper/lower vanes are reset to those of the initial cooling mode and then operated in order that the air outflow could reach further.

■ Jet Cool Mode Operation (Outdoor unit H/P Model)

- While in heating mode or Fuzzy operation, the Jet Cool key cannot be input. When it is input while in the other mode operation (cooling, dehumidification, ventilation), the Jet Cool mode is operated.”
- In the Jet Cool mode, the indoor fan is operated at super-high speed for 30 min at cooling mode operation.
- In the Jet Cool mode operation, the room temperature is controlled to the setting temperature, 18°C
- When the sleep timer mode is input while in the Jet Cool mode operation, the Jet Cool mode has the priority.
- When the Jet Cool key is input, the upper/lower vanes are reset to those of the initial cooling mode and then operated in order that the air outflow could reach further.

■ Auto Restarting Operation

- When the power is restored after a sudden power failure while in appliance operation, the mode before the power failure is kept on the memory and the appliance automatically operates in the mode on the memory.
- Operation Mode that is kept on the memory

- State of Operation ON/OFF
- Operation Mode/Setting Temp/Selected Airflow Speed
- Sleep Timer Mode/Remaining Time of Sleep Timer (unit of hour)

■ Forced Operation (Outdoor unit C/O Model)

- To operate the appliance by force in case that the remote controller is lost, the forced operation button is on the main unit of the appliance to operate the appliance in the standard conditions.
- Press the forced operation button, the forced operation is carried out.
- Press the forced operation button once again to stop operation.
- The forced operation is carried out in cooling mode with the setting temperature 22°C and the high speed of airflow.

■ Forced Operation (Outdoor unit H/P Model)

- To operate the appliance by force in case that the remote controller is lost, the forced operation selection switch is on the main unit of the appliance to operate the appliance in the standard conditions.
- Press the forced operation button, the forced operation is carried out.
- Press the forced operation button once again to stop operation.
- In the forced operation mode, the indoor fan is operated at low speed for around 15 sec and then the operation condition is set according to the intake air temperature as follows.
 - 24°C ≤ Intake Air Temp => Cooling Mode Operation, 22°C, High Speed
 - 21°C ≤ Intake Air Temp < 24°C => Dehumidification Operation, 23°C, High Speed
 - Intake Air Temp < 21°C => Heating Mode Operation, 24°C, High Speed

■ Test Operation Control

- To check the condition of the installation when installing the appliance, the appliance is operated at cooling mode, high speed of airflow, compressor-on for 18 min without controlling the room temperature.
- After supplying power to the main body, keep pressing the forced operation button for about 3 seconds.
- While in test operation, a key can be input by the remote controller.
 - When a key (operation start/stop, operation mode selection, airflow speed selection, temperature control, Jet Cool) is input by the remote controller, the test operation is canceled and the appliance is operated according to the setting by the remote controller.

■ Protection of the evaporator pipe from frosting

- In the temperature of the indoor pipe is below 0°C after 7 minutes from starting the compressor, the compressor and outdoor fan are stopped, and 3 minutes delay of operating of the compressor, when the temperature of the indoor pipe is over 7°C, the compressor and the outdoor fan are reoperated.
- Outdoor fan motor stops when indoor pipe temperature is below 3°C and restarts at the pipe temperature above 6°C or after 90 seconds, if the pipe temperature does not rise to 6°C, outdoor fan motor runs continuously at even below 3°C.

■ Buzzer Sounding Operation

- When the appliance-operation key is input by the remote controller, the short “beep-beep-” sounds.
- When the appliance-pause key is input by the remote controller, the long “beep—” sounds.

■ Air Cleaner Operation

- When an air cleaner function is selected during Air Conditioner operation
 - Plasma air cleaner function will be operated while in any operation mode with selecting the function.
 - The function is to be stopped while it is operating with selecting the function.
- When an air cleaner function is selected during operation off
 - The function will be only operated.
- When inlet grille of air conditioner is opened during plasma operation, High Voltage Generator(H.V.B) is to be stopped. When inlet grille of air conditioner is closed during plasma operation, High Voltage Generator(H.V.B) will be operated again.

3. Dimensions

ART COOL Mirror			
ARNU07GSE*2 ARNU09GSE*2 ARNU12GSE*2 ARNU15GSE*2			
(unit : mm)			
Model	W	H	D
ARNU07GSE*2 ARNU09GSE*2 ARNU12GSE*2 ARNU15GSE*2	915	282	169

Number	Name	Description
1	Air discharge grill	
2	Air suction grill	

Note
 1. Unit should be installed in compliance with the installation manual in the product box.
 2. Unit shall be grounded in accordance with the local regulations or applicable national codes.

</

<p>ART COOL Mirror</p> <p>ARNU18GS3*2 ARNU24GS3*2</p>										
	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="text-align: center;">Model</td> <td style="text-align: center;">W</td> <td style="text-align: center;">H</td> <td style="text-align: center;">D</td> </tr> <tr> <td style="text-align: center;">ARNU18GS3*2 ARNU24GS3*2</td> <td style="text-align: center;">1170</td> <td style="text-align: center;">315</td> <td style="text-align: center;">173</td> </tr> </table> <p style="text-align: center;">(unit : mm)</p>	Model	W	H	D	ARNU18GS3*2 ARNU24GS3*2	1170	315	173	
Model	W	H	D							
ARNU18GS3*2 ARNU24GS3*2	1170	315	173							
	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="text-align: center;">Number</td> <td style="text-align: center;">Name</td> <td style="text-align: center;">Description</td> </tr> <tr> <td style="text-align: center;">1</td> <td style="text-align: center;">Air discharge grill</td> <td></td> </tr> <tr> <td style="text-align: center;">2</td> <td style="text-align: center;">Air suction grill</td> <td></td> </tr> </table> <p style="text-align: center;">(unit : mm)</p>	Number	Name	Description	1	Air discharge grill		2	Air suction grill	
Number	Name	Description								
1	Air discharge grill									
2	Air suction grill									
<p>Note</p> <ol style="list-style-type: none"> 1. Unit should be installed in compliance with the installation manual in the product box. 2. Unit shall be grounded in accordance with the local regulations or applicable national codes. 										
	<p style="text-align: center;">315</p>									
	<p style="text-align: center;">304</p>									
	<p style="text-align: center;">1170</p> <p style="text-align: center;">173</p>									
	<p style="text-align: center;">567</p>									
<p>76, Seongsan-dong, Changwon City, Gyeongnam, 641-713, Korea www.lgeaircon.com</p>										
<p>LG Electronics</p>										
<p>CHASSIS CODE: S3</p>										

ArtCoolGallery

- 1. Functions42
- 2. Operation Details.....43
- 3. Dimensions50

1. Functions

Indoor Unit

Operation ON/OFF by Remote controller

Sensing the Room Temperature

- Room temperature sensor. (THERMISTOR)

Room temperature control

- Maintains the room temperature in accordance with the Setting Temp.

Starting Current Control

- Indoor fan is delayed for 5 sec at the starting.

Indoor Fan Speed Control

- High, Med, Low, CHAOS

Operation indication Lamps (LED)

Signal Receptor

Receives the signals from the remote control.(Signal receiving sound: two short beeps or one long beep.)

Operation Indication Lamps

- | | | |
|--------|--------------|---|
| ① | On/Off | : Lights up during the system operation. |
| ☆ | Sleep Mode | : Lights up during Sleep Mode Auto operation. |
| ⌚ | Timer | : Lights up during Timer operation. |
| *
⊖ | Defrost Mode | : Lights up during Defrost Mode or Hot Start operation. |

Soft Dry Operation Mode

- Intermittent operation of fan at low speed.

Sleep Mode Auto Control

- The fan is switched to low(Cooling), med(Heating) speed.
- The unit will be stopped after 1, 2, 3, 4, 5, 6, 7 hours.

Natural Air Control by CHAOS Logic

- The fan is switched to intermittent or irregular operation
- The fan speed is automatically switched from high to low speed.

Airflow Direction Control

- The louver can be set at the desired position or swing up and down automatically.

Defrost(Deice) control (Heating)

- Both the indoor and outdoor fan stops during defrosting.

Hot-start Control (Heating)

- The indoor fan does not rotate until the evaporator pipe temperature will be reached at 28°C.

2. Operation Details

Function of Controls

DISPLAY

1) High quality LCD remote controller supplied

Operation Indicator

- On while in appliance operation, off while in appliance pause

Timer Indicator

- On while in timer mode (on/off) and in sleep timer mode, off when timer mode is completed or canceled

Defrost Indicator

- Off except when hot start during heating mode operation or while in defrost control.

Plasma Indicator

- On while in plasma mode, off while plasma mode is canceled.

Auto restart Indicator

- On while auto restart mode, off while auto restart mode is canceled.

Auto restart

- In case the power comes on again after a power failure, Auto Restarting Operation is the function to operate procedures automatically to the previous operating conditions.
If you want to use this operation, press the Auto Restart Button.

Power(Forced Operation)

- Operation starts, when this button is pressed and stops when you press the button again.

■ Cooling Mode Operation

- When the intake air temperature reaches 0.5°C below the setting temp, the compressor and the outdoor fan stop.
- When it reaches 0.5°C above the setting temp, they start to operate again.
Compressor ON Temp => Setting Temp+0.5°C
Compressor OFF Temp => Setting Temp-0.5°C
- While in compressor running, operating with the airflow speed set by the remote controller. While in compressor not running, operating with the low airflow speed regardless of the setting.

■ Healthy Dehumidification Mode

- When the dehumidification operation input by the remote controller is received, the intake air temperature is detected and the setting temp is automatically set according to the intake air temperature.
26°C ≤ Intake Air Temp ⇒ 25°C
24°C ≤ Intake Air Temp < 26°C ⇒ Intake Air Temp-1°C
18°C ≤ Intake Air Temp < 24°C ⇒ Intake Air Temp-0.5°C
Intake Air Temp < 18°C ⇒ 18°C
- While in compressor off, the indoor fan repeats low airflow speed and pause.
- While the intake air temp is between compressor on temp. and compressor off temp., 10-min dehumidification operation and 4-min compressor off repeat
Compressor ON Temp. ⇒ Setting Temp+0.5°C
Compressor OFF Temp. ⇒ Setting Temp-0.5°C
- In 10-min dehumidification operation, the indoor fan operates with the low airflow speed.

■ Heating Mode Operation

- When the intake air Temp. reaches Compressor OFF Temp., the compressor is turned off.
When the intake air Temp. reaches Compressor ON Temp., the compressor is turned on.
Thermo ON Temp. ⇒ Setting Temp. +2°C
Thermo OFF Temp. ⇒ Setting Temp.+4°C
- While in compressor on, when above 38°C, it operates with setting airflow speed (while in sleep mode, with the medium airflow speed).
- While in compressor off, the indoor fan is off when the indoor pipe temp is below 33°C , when above 35°C , it operates with the low airflow speed.
- While in defrost control, both of the indoor and outdoor fans are turned off.

■ Defrost Control

- While in heating mode operation in order to protect outdoor unit from freezing, reversed to cooling cycle to defrost of the outdoor unit.

■ Fuzzy Operation (Outdoor unit C/O Model)

- According to the temperature set by Fuzzy rule, when the intake air temp is 0.5°C or more below the setting temp, the compressor is turned off. When 0.5°C or more above the setting temp, the compressor is turned on.
Compressor ON Temp ⇒ Setting Temp+0.5°C
Compressor OFF Temp ⇒ Setting Temp+0.5°C
- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.
26°C ≤ Intake Air Temp ⇒ 25°C
24°C ≤ Intake Air Temp < 26°C ⇒ Intake Air Temp+1°C
22°C ≤ Intake Air Temp < 24°C ⇒ Intake Air Temp+0.5°C
18°C ≤ Intake Air Temp < 22°C ⇒ Intake Air Temp
Intake Air Temp < 18°C ⇒ 18°C
- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan is automatically selected according to the temperature

■ Fuzzy Operation (Outdoor unit H/P Model)

- When any of operation mode is not selected like the moment of the power on or when 3 hrs has passed since the operation off, the operation mode is selected.
- When determining the operation mode, the compressor, the outdoor fan, and the 4 way valve are off and only the indoor fan is operated for 15 seconds. Then an operation mode is selected according to the intake air temp at that moment as follows.
 - 24°C ≤ Inatake Air Temp ⇒ Fuzzy Operation for Cooling
 - 21°C ≤ Inatake Air Temp < 24°C ⇒ Fuzzy Operation for Dehumidification
 - Inatake Air Temp < 21°C ⇒ Fuzzy Operation for Heating
- If any of the operation modes among cooling / dehumidification / heating mode operations is carried out for 10 sec or longer before Fuzzy operation, the mode before Fuzzy operation is operated.

1) Fuzzy Operation for Cooling

- According to the setting temperature selected by Fuzzy rule, when the intake air temp is 0.5°C or more below the setting temp, the compressor is turned off. When 0.5°C or more above the setting temp, the compressor is turned on.
 - Compressor ON Temp ⇒ Setting Temp + 0.5°C
 - Compressor OFF Temp ⇒ Setting Temp + 0.5°C
- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.
 - 26°C ≤ Intake Air Temp ⇒ 25°C
 - 24°C ≤ Intake Air Temp < 26°C ⇒ Intake Air Temp + 1°C
 - 22°C ≤ Intake Air Temp < 24°C ⇒ Intake Air Temp + 0.5°C
 - 18°C ≤ Intake Air Temp < 22°C ⇒ Intake Air Temp
 - Intake Air Temp < 18°C ⇒ 18°C
- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan is automatically selected according to the temperature.

2) Fuzzy Operation for Dehumidification

- According to the setting temperature selected by Fuzzy rule, when the intake air temp is 0.5°C or more below the setting temp, the compressor is turned off. When 0.5°C or more above the setting temp, the compressor is turned on.
 - Compressor ON Temp ⇒ Setting Temp + 0.5°C
 - Compressor OFF Temp ⇒ Setting Temp + 0.5°C

- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.
26°C ≤ Intake Air Temp ⇒ 25°C
24°C ≤ Intake Air Temp < 26°C ⇒ Intake Air Temp + 1°C
22°C ≤ Intake Air Temp < 24°C ⇒ Intake Air Temp + 0.5°C
18°C ≤ Intake Air Temp < 22°C ⇒ Intake Air Temp
Intake Air Temp < 18°C ⇒ 18°C
- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan repeats the low airflow speed or pause as in dehumidification operation.

3) Fuzzy Operation for Heating

- According to the setting temperature selected by Fuzzy rule, when the intake air temp is 3°C or more above the setting temp, the compressor is turned off. When below the setting temp, the compressor is turned on.
Compressor ON Temp ⇒ Setting Temp + 2°C
Compressor OFF Temp ⇒ Setting Temp + 4°C
- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.
20°C ≤ Intake Air Temp ⇒ Intake Air Temp + 0.5°C
Intake Air Temp < 20°C ⇒ 20°C
- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan is set to the high or the medium according to the intake air temperature and the setting temperature.

■ Airflow Speed Selection

- The airflow speed of the indoor fan is set to high, medium, low, or chaos by the input of the airflow speed selection key on the remote controller.

■ On-Timer Operation

- When the set time is reached after the time is input by the remote controller, the appliance starts to operate.
- The timer LED is on when the on-timer is input. It is off when the time set by the timer is reached.
- If the appliance is operating at the time set by the timer, the operation continues.

■ Off-Timer Operation

- When the set time is reached after the time is input by the remote controller, the appliance stops operating.
- The timer LED is on when the off-timer is input. It is off when the time set by the timer is reached.
- If the appliance is on pause at the time set by the timer, the pause continues.

■ Off-Timer <=> On-Timer Operation

- When the set time is reached after the on/off time is input by the remote controller, the on/off-timer operation is carried out according to the set time.

■ Sleep Timer Operation

- When the sleep time is reached after <1,2,3,4,5,6,7,0(cancel) hr> is input by the remote controller while in appliance operation, the operation of the appliance stops.
- While the appliance is on pause, the sleep timer mode cannot be input.
- While in cooling mode operation, 30 min later since the start of the sleep timer, the setting temperature increases by 1°C. After another 30 min elapse, it increases by 1°C again.
- When the sleep timer mode is input while in cooling cycle mode, the airflow speed of the indoor fan is set to the low.
- When the sleep timer mode is input while in heating cycle mode, the airflow speed of the indoor fan is set to the medium.

■ Chaos Swing Mode

- By the Chaos Swing key input, the vane automatically operates with the Chaos Swing or they are fixed to the desired direction.

■ Chaos Natural Wind Mode

- When the Chaos Natural Wind mode is selected and then operated, the high, medium, or low speed of the air-flow mode is operated for 2~15 sec randomly by the Chaos Simulation.”

■ Jet Cool Mode Operation (Outdoor unit C/O Model)

- If the Jet Cool key is input at any operation mode while in appliance operation, the Jet Cool mode operates.
- In the Jet Cool mode, the indoor fan is operated at super-high speed for 30 min at cooling mode operation.
- In the Jet Cool mode operation, the room temperature is controlled to the setting temperature, 18°C
- When the sleep timer mode is input while in the Jet Cool mode operation, the Jet Cool mode has the priority.
- When the Jet Cool key is input, the upper/lower vanes are reset to those of the initial cooling mode and then operated in order that the air outflow could reach further.

■ Jet Cool Mode Operation (Outdoor unit H/P Model)

- While in heating mode or Fuzzy operation, the Jet Cool key cannot be input. When it is input while in the other mode operation (cooling, dehumidification, ventilation), the Jet Cool mode is operated.”
- In the Jet Cool mode, the indoor fan is operated at super-high speed for 30 min at cooling mode operation.
- In the Jet Cool mode operation, the room temperature is controlled to the setting temperature, 18°C
- When the sleep timer mode is input while in the Jet Cool mode operation, the Jet Cool mode has the priority.
- When the Jet Cool key is input, the upper/lower vanes are reset to those of the initial cooling mode and then operated in order that the air outflow could reach further.

■ Auto Restarting Operation

- When the power is restored after a sudden power failure while in appliance operation, the mode before the power failure is kept on the memory and the appliance automatically operates in the mode on the memory.
- Operation Mode that is kept on the memory

- State of Operation ON/OFF
- Operation Mode/Setting Temp/Selected Airflow Speed
- Sleep Timer Mode/Remaining Time of Sleep Timer (unit of hour)

■ Forced Operation (Outdoor unit C/O Model)

- To operate the appliance by force in case that the remote controller is lost, the forced operation button is on the main unit of the appliance to operate the appliance in the standard conditions.
- Press the forced operation button, the forced operation is carried out.
- Press the forced operation button once again to stop operation.
- The forced operation is carried out in cooling mode with the setting temperature 22°C and the high speed of airflow.

■ Forced Operation (Outdoor unit H/P Model)

- To operate the appliance by force in case that the remote controller is lost, the forced operation selection switch is on the main unit of the appliance to operate the appliance in the standard conditions.
- Press the forced operation button, the forced operation is carried out.
- Press the forced operation button once again to stop operation.
- In the forced operation mode, the indoor fan is operated at low speed for around 15 sec and then the operation condition is set according to the intake air temperature as follows.

24°C ≤ Intake Air Temp => Cooling Mode Operation, 22°C, High Speed

21°C ≤ Intake Air Temp < 24°C => Dehumidification Operation, 23°C, High Speed

Intake Air Temp < 21°C => Heating Mode Operation, 24°C, High Speed

■ Test Operation Control

- To check the condition of the installation when installing the appliance, the appliance is operated at cooling mode, high speed of airflow, compressor-on for 18 min without controlling the room temperature.
- After supplying power to the main body, keep pressing the forced operation button for about 3 seconds.
- While in test operation, a key can be input by the remote controller.
When a key (operation start/stop, operation mode selection, airflow speed selection, temperature control, Jet Cool) is input by the remote controller, the test operation is canceled and the appliance is operated according to the setting by the remote controller.

■ Protection of the evaporator pipe from frosting

- In the temperature of the indoor pipe is below 0°C after 7 minutes from starting the compressor, the compressor and outdoor fan are stopped, and 3 minutes delay of operating of the compressor, when the temperature of the indoor pipe is over 7°C, the compressor and the outdoor fan are reoperated.
- Outdoor fan motor stops when indoor pipe temperature is below 3°C and restarts at the pipe temperature above 6°C or after 90 seconds, if the pipe temperature does not rise to 6°C, outdoor fan motor runs continuously at even below 3°C.

■ Buzzer Sounding Operation

- When the appliance-operation key is input by the remote controller, the short “beep-beep-” sounds.
- When the appliance-pause key is input by the remote controller, the long “beep—” sounds.

■ Air Cleaner Operation

- When an air cleaner function is selected during Air Conditioner operation
 - Plasma air cleaner function will be operated while in any operation mode with selecting the function.
 - The function is to be stopped while it is operating with selecting the function.
- When an air cleaner function is selected during operation off
 - The function will be only operated.
- When inlet grille of air conditioner is opened during plasma operation, High Voltage Generator(H.V.B) is to be stopped. When inlet grille of air conditioner is closed during plasma operation, High Voltage Generator(H.V.B) will be operated again.

3. Dimensions

Technical drawings of the ART COOL Gallery unit. The front view shows a square grille with width W and height H. The side view shows the depth D. The top view shows a circular fan with a diameter of 500 mm and a square frame with a side length of 525 mm. Callouts indicate the location of the Pipe Hole, Hanger Hole, and Fix Hole.

ART COOL Gallery			
ARNU07GSF*2 ARNU09GSF*2 ARNU12GSF*2			
(unit : mm)			
Model	W	H	D
ARNU07GSF*2 ARNU09GSF*2 ARNU12GSF*2	600	600	146

(unit : mm)	
Number	Description
1	Air discharge grill
2	Air suction grill

Note
 1. Unit should be installed in compliance with the installation manual in the product box.
 2. Unit shall be grounded in accordance with the local regulations or applicable national codes.

76, Seongsan-dong, Changwon City, Gyeongnam,
641-713, Korea
www.lgeaircon.com

CHASSIS CODE: SF

LG Electronics

Ceiling Concealed Duct Type (Low static)

1. Functions	52
2. Operation Details.....	53
3. Dimensions	56

1. Functions

Indoor Unit

Operation ON/OFF by Remote controller

Sensing the Room Temperature • Room temperature sensor. (Thermistor)

Room temperature control • Maintains the room temperature in accordance with the Setting Temperature.

Starting Current Control • Indoor fan is delayed for 5 seconds at the starting.

Indoor Fan Speed Control • High, Med, Low

Soft Dry Operation Mode • Intermittent operation of fan at low speed.

Auto Restart • Although the air-conditioner is turned off by a power failure, it is restarted automatically previous operation mode after power supply.

Deice (defrost) control (Heating) • Both the indoor and outdoor fan stops during defrosting.
• Hot start after defrost ends.

Hot-start Control (Heating) • The indoor fan does not rotate until the evaporator piping temperature reaches 25°C.

High head height Drain pump • A standard drain-head height of up to 700mm is possible.

Central Control(Optional) • It is operating individually or totally by central control function.

2. Operation Details


(1) The function of main control

■ Soft-Dry Operation

- The indoor fan speed is automatically set to the low, so the shift of the indoor fan speed is impossible because of already being set to the best speed for Dry Operation by microcontroller control.

■ Cooling Mode Operation


- When selecting the Cooling(※) Mode Operation, the unit will operate according to the setting by the remote controller and the operation diagram is as following.

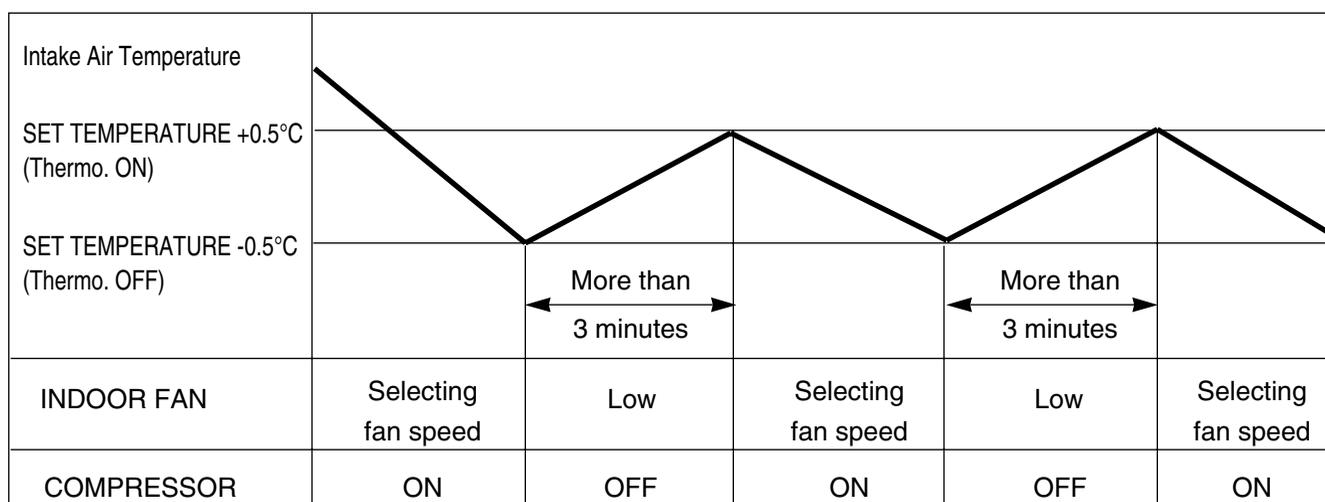

	Thermal ON	Thermal OFF
Indoor Unit mode	ST+0.5	ST-0.5
2TH (Remo.+Indoor)	To be selected higher temperature contrast Indoor Unit and Remo.	To be selected higher temperature contrast Indoor Unit and Remo.
Remo. Mode	ST+0.5	ST-0.5

■ Heating Mode Operation

The unit will operate according to the setting by the remote controller and the operation diagram is shown as following.

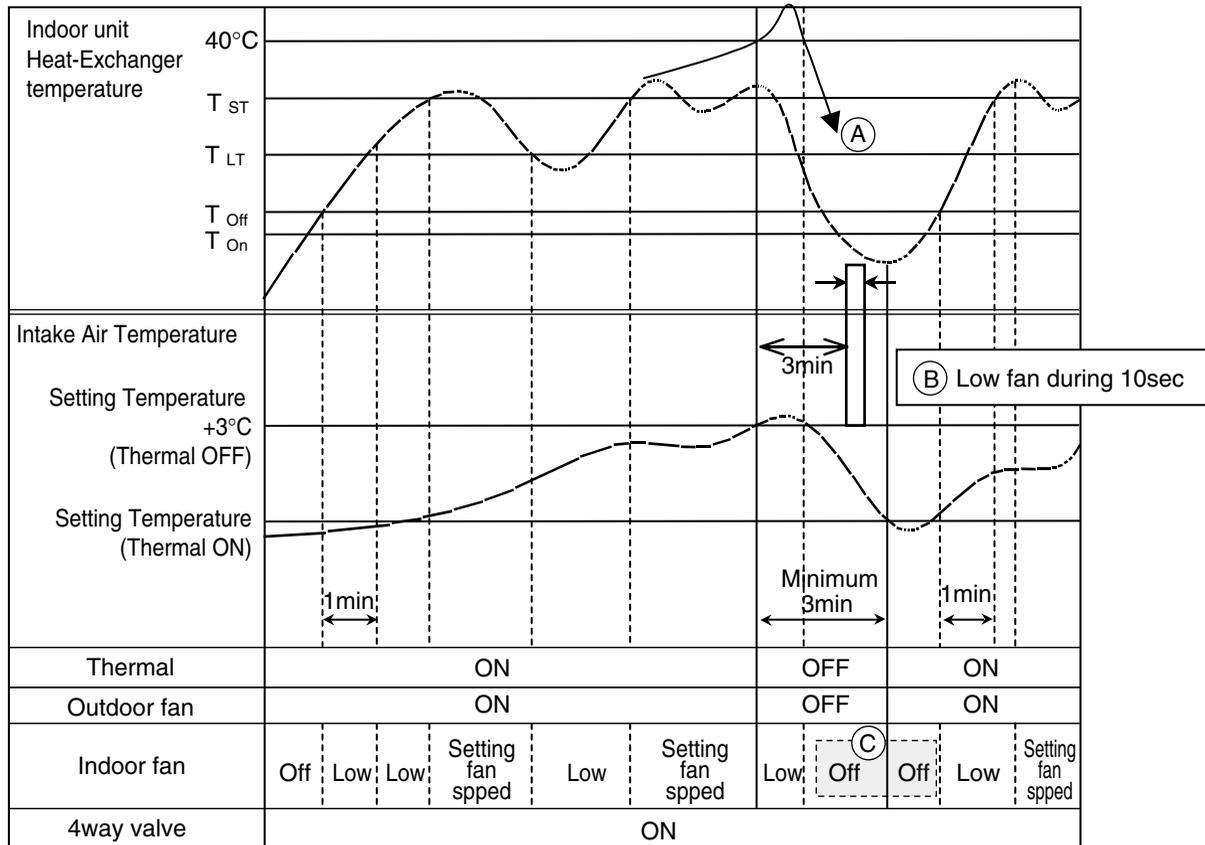


- **Compressor-off interval** : - (A) While the indoor Heat-Exchanger temperature is higher than 40°C, fan operates at low speed, when it becomes lower than 40°C fan stops.
- (B) For eliminating latent heat-loss, fan operates at low speed for 10 seconds periodically.
- (C) To be operated "Low" except initial Hotstart operation

	High Static			Low Static				Convertible	
Chassis	BH	BG	BR	B1	B2	CE	CF	VE	VJ
Hotstart On T _{On}	19°C	19°C	19°C	19°C	19°C	19°C	19°C	26°C	26°C
Hotstart Off T _{Off}	22°C	22°C	22°C	22°C	22°C	22°C	22°C	27°C	27°C
Low temperature T _{LT}	25°C	25°C	25°C	25°C	25°C	25°C	25°C	28°C	28°C
Setting Temperature T _{ST}	27°C	27°C	27°C	27°C	27°C	27°C	27°C	30°C	30°C

■ Hot-Start Control

- The indoor fan does not rotate until the indoor unit Hex-Exchanger temperature reaches 30°C.
- The operation diagram is as following.

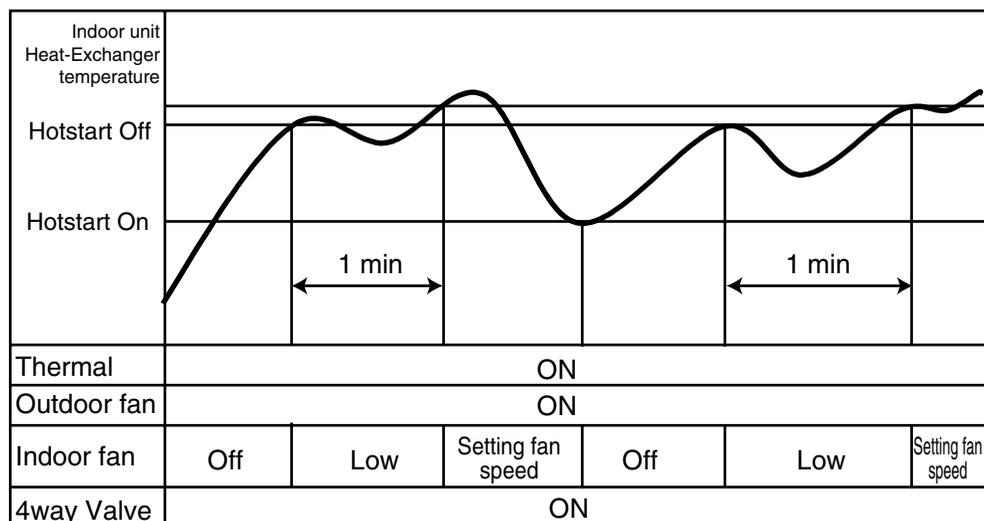

- Initial Hotstart On state
 - ① Power Off ➡ On
 - ② Operation Off ➡ On
 - ③ Cooling operation ➡ Heating operation
 - ④ Defrost operation

3. Dimensions

Ceiling Concealed Duct (Low Static)

ARNU07GB1G2
ARNU09GB1G2
ARNU12GB1G2
ARNU15GB1G2
ARNU18GB2G2
ARNU24GB2G2

(unit: mm)

	A	B	C	D
ARNU07GB1G2				
ARNU09GB1G2	820	728	856	794
ARNU12GB1G2				
ARNU15GB1G2				
ARNU18GB2G2	1100	1008	1131	1072
ARNU24GB2G2				

(unit : mm)

Number	Name	Description
1	Liquid pipe connection	Unit size(7k,9k,12k,18k):ø6.35 Unit size(24k):ø9.52
2	Gas pipe connection	Unit size(7k,9k,12k,18k):ø12.7 Unit size(24k):ø15.88
3	Drain pipe connection	
4	Power supply connection	
5	Air discharge	
6	Air suction	

■ Note

- Unit should be installed in compliance with the installation manual in the product box.
- Unit shall be grounded in accordance with the local regulations or applicable national codes.

76, Seongsan-dong, Changwon City, Gyeongnam,
641-713, Korea
www.lgeaircon.com

LG Electronics

CHASSIS CODE: B1/B2

Ceiling Concealed Duct Type (Built in)

1. Functions	58
2. Operation Details.....	59
3. Dimensions	62

1. Functions

Indoor Unit

Operation ON/OFF by Remote controller

Sensing the Room Temperature

- Room temperature sensor. (Thermistor)

Room temperature control

- Maintains the room temperature in accordance with the Setting Temperature.

Starting Current Control

- Indoor fan is delayed for 5 seconds at the starting.

Indoor Fan Speed Control

- High, Med, Low

Soft Dry Operation Mode

- Intermittent operation of fan at low speed.

Auto Restart

- Although the air-conditioner is turned off by a power failure, it is restarted automatically previous operation mode after power supply.

Deice (defrost) control (Heating)

- Both the indoor and outdoor fan stops during defrosting.
- Hot start after defrost ends.

Hot-start Control (Heating)

- The indoor fan does not rotate until the evaporator piping temperature reaches 25°C.

High head height Drain pump

- A standard drain-head height of up to 700mm is possible.

Central Control(Optional)

- It is operating individually or totally by central control function.

2. Operation Details


(1) The function of main control

■ Soft-Dry Operation

- The indoor fan speed is automatically set to the low, so the shift of the indoor fan speed is impossible because of already being set to the best speed for Dry Operation by microcontroller control.

■ Cooling Mode Operation


- When selecting the Cooling(※) Mode Operation, the unit will operate according to the setting by the remote controller and the operation diagram is as following.

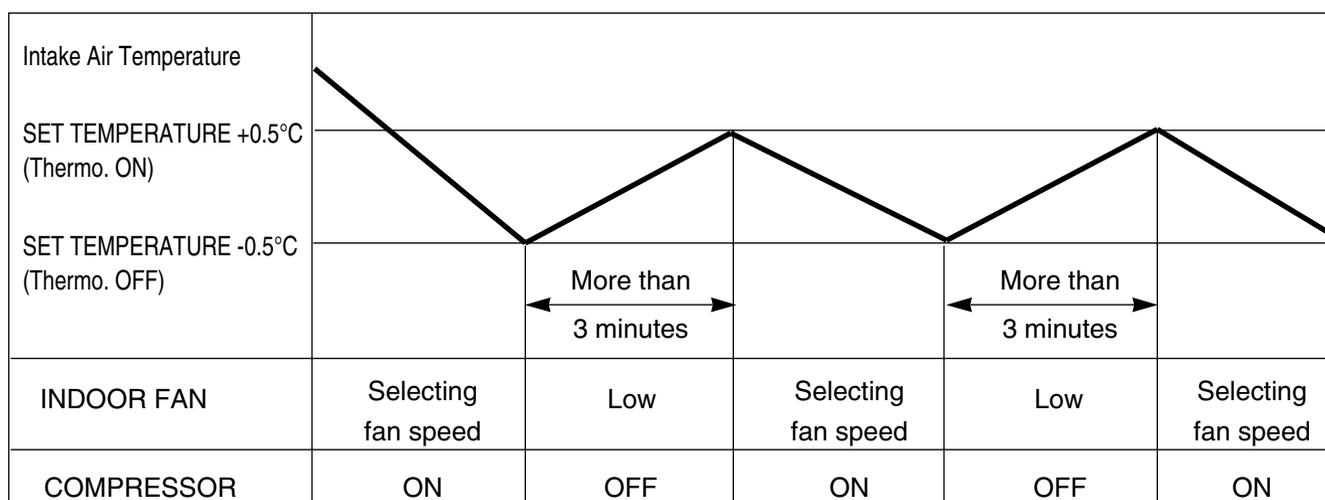

	Thermal ON	Thermal OFF
Indoor Unit mode	ST+0.5	ST-0.5
2TH (Remo.+Indoor)	To be selected higher temperature contrast Indoor Unit and Remo.	To be selected higher temperature contrast Indoor Unit and Remo.
Remo. Mode	ST+0.5	ST-0.5

■ Heating Mode Operation

The unit will operate according to the setting by the remote controller and the operation diagram is shown as following.

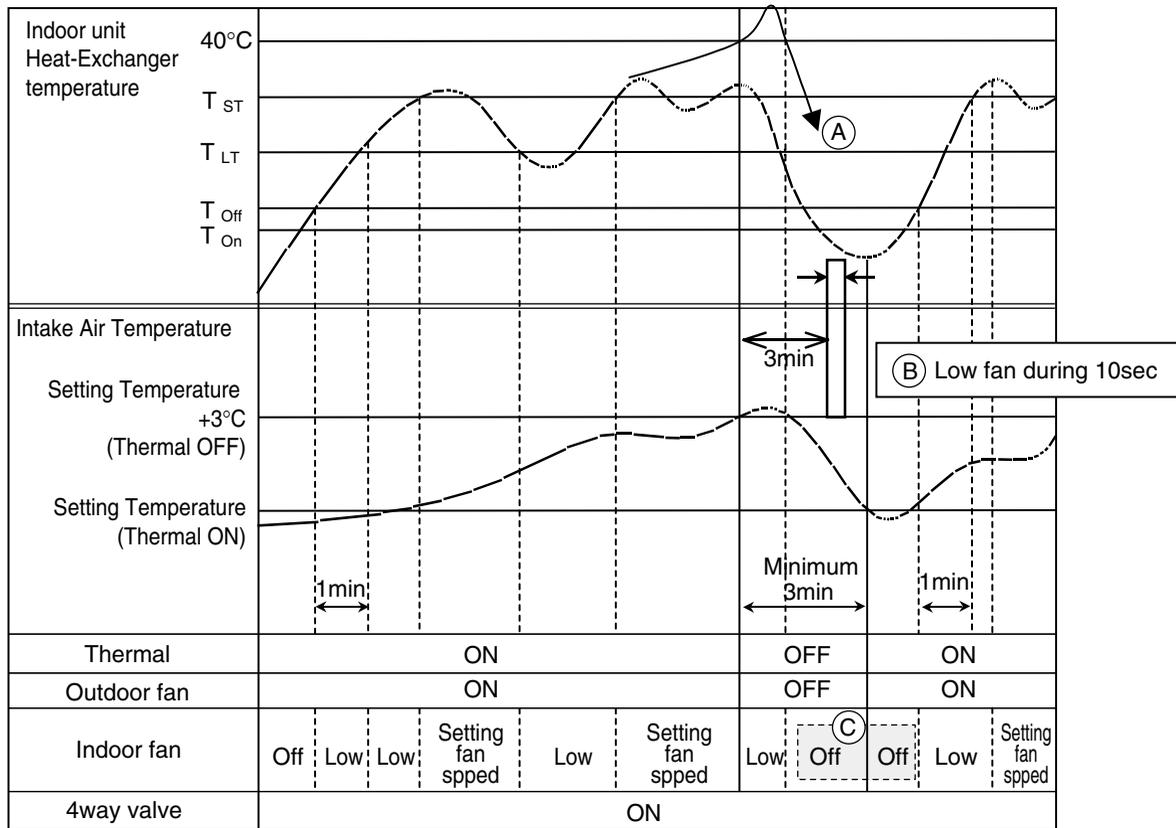


- **Compressor-off interval** : - (A) While the indoor Heat-Exchanger temperature is higher than 40°C, fan operates at low speed, when it becomes lower than 40°C fan stops.
- (B) For eliminating latent heat-loss, fan operates at low speed for 10 seconds periodically.
- (C) To be operated "Low" except initial Hotstart operation

	High Static			Low Static				Convertible	
Chassis	BH	BG	BR	B1	B2	CE	CF	VE	VJ
Hotstart On T _{On}	19°C	19°C	19°C	19°C	19°C	19°C	19°C	26°C	26°C
Hotstart Off T _{Off}	22°C	22°C	22°C	22°C	22°C	22°C	22°C	27°C	27°C
Low temperature T _{LT}	25°C	25°C	25°C	25°C	25°C	25°C	25°C	28°C	28°C
Setting Temperature T _{ST}	27°C	27°C	27°C	27°C	27°C	27°C	27°C	30°C	30°C

■ Hot-Start Control

- The indoor fan does not rotate until the indoor unit Hex-Exchanger temperature reaches 30°C.
- The operation diagram is as following.

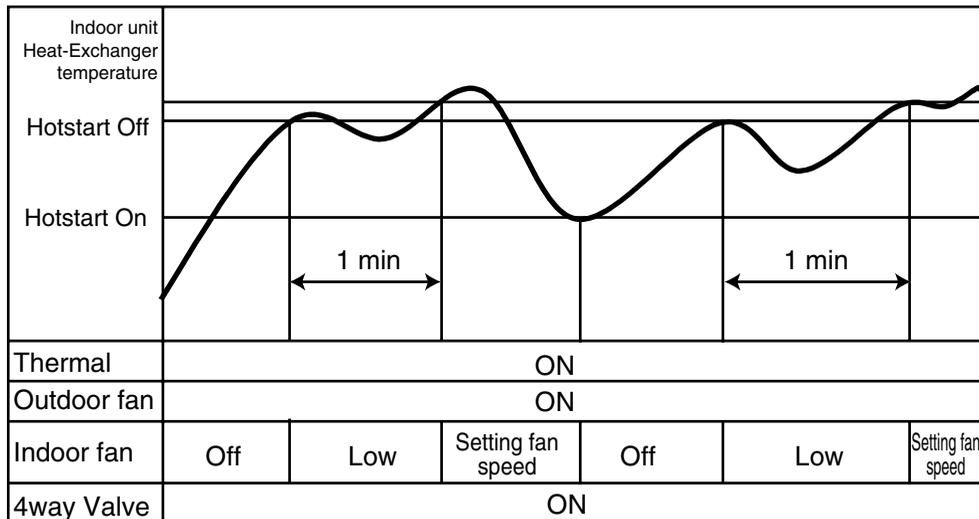

- Initial Hotstart On state
 - ① Power Off ➡ On
 - ② Operation Off ➡ On
 - ③ Cooling operation ➡ Heating operation
 - ④ Defrost operation

Ceiling Concealed Duct Type (High Static)

1. Functions	64
2. Operation Details.....	65
3. Dimensions	68

1. Funtions

Indoor Unit

Operation ON/OFF by Remote controller

Sensing the Room Temperature • Room temperature sensor. (Thermistor)

Room temperature control • Maintains the room temperature in accordance with the Setting Temperature.

Starting Current Control • Indoor fan is delayed for 5 seconds at the starting.

Indoor Fan Speed Control • High, Med, Low

Soft Dry Operation Mode • Intermittent operation of fan at low speed.

Auto Restart • Although the air-conditioner is turned off by a power failure, it is restarted automatically previous operation mode after power supply.

Deice (defrost) control (Heating) • Both the indoor and outdoor fan stops during defrosting.
• Hot start after defrost ends.

Hot-start Control (Heating) • The indoor fan does not rotate until the evaporator piping temperature reaches 30°C.

High head height Drain pump • A standard drain-head height of up to 700mm is possible.

Central Control(Optional) • It is operating individually or totally by central control function.

2. Operation Details


(1) The function of main control

■ Soft-Dry Operation

- The indoor fan speed is automatically set to the low, so the shift of the indoor fan speed is impossible because of already being set to the best speed for Dry Operation by microcontroller control.


■ Cooling Mode Operation

- When selecting the Cooling (✳) Mode Operation, the unit will operate according to the setting by the remote controller and the operation diagram is as following.

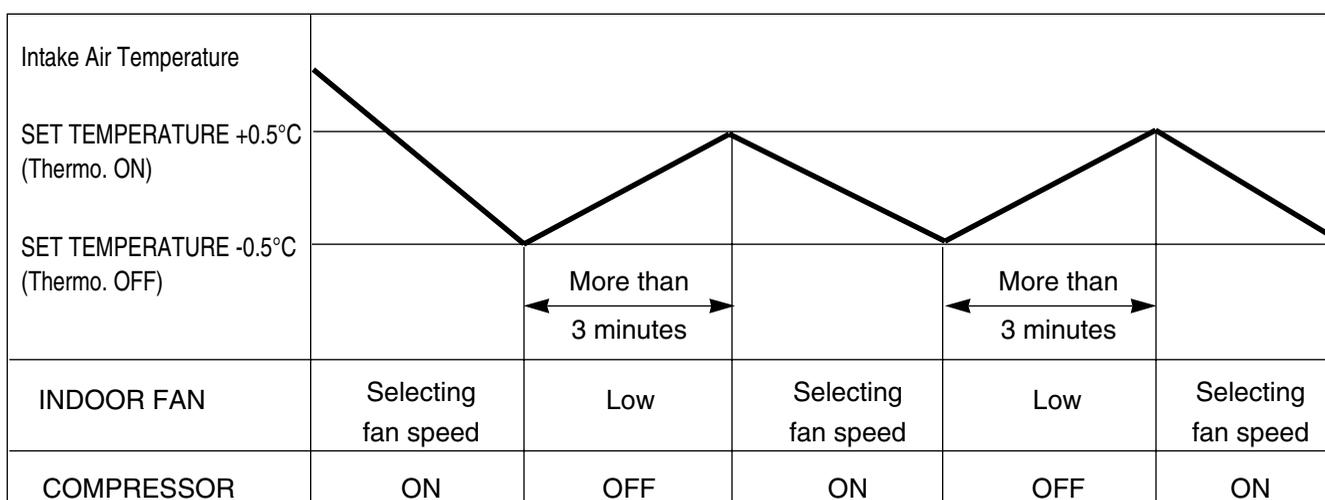

■ Heating Mode Operation

The unit will operate according to the setting by the remote controller and the operation diagram is shown as following.

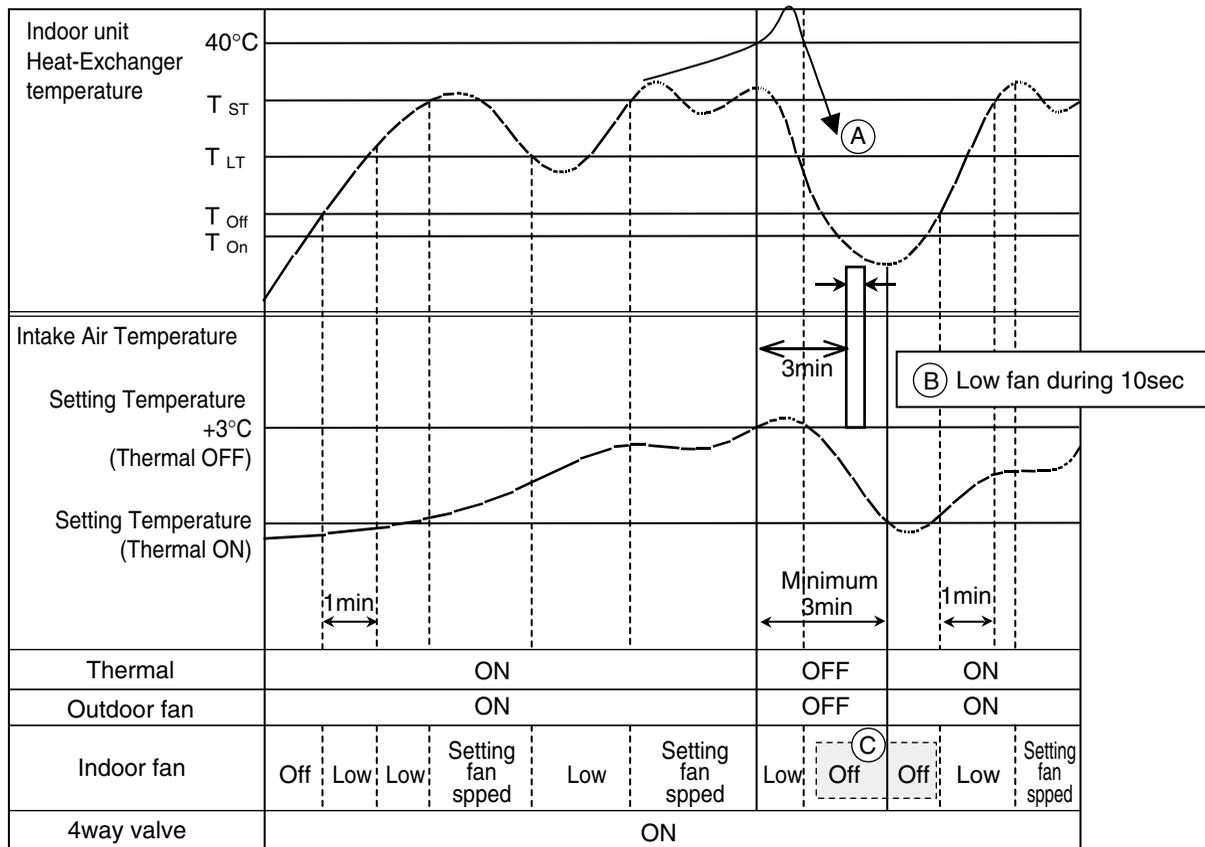


- **Compressor-off interval** : - (A) While the indoor Heat-Exchanger temperature is higher than 40°C, fan operates at low speed, when it becomes lower than 40°C fan stops.
- (B) For eliminating latent heat-loss, fan operates at low speed for 10 seconds periodically.
- (C) To be operated "Low" except initial Hotstart operation

	High Static			Low Static				Convertible	
	BH	BG	BR	B1	B2	CE	CF	VE	VJ
Hotstart On T_{On}	19°C	19°C	19°C	19°C	19°C	19°C	19°C	26°C	26°C
Hotstart Off T_{Off}	22°C	22°C	22°C	22°C	22°C	22°C	22°C	27°C	27°C
Low temperature T_{LT}	25°C	25°C	25°C	25°C	25°C	25°C	25°C	28°C	28°C
Setting Temperature T_{ST}	27°C	27°C	27°C	27°C	27°C	27°C	27°C	30°C	30°C

■ Hot-Start Control

- The indoor fan does not rotate until the indoor unit Hex-Exchanger temperature reaches 22°C.
- The operation diagram is as following.

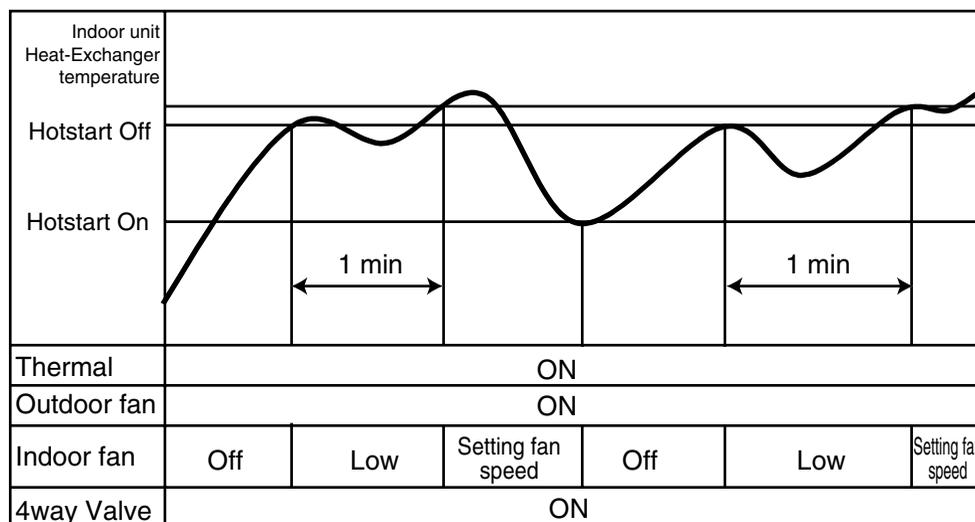

- Initial Hotstart On state
 - ① Power Off ➡ On
 - ② Operation Off ➡ On
 - ③ Cooling operation ➡ Heating operation
 - ④ Defrost operation

3. Dimensions

Ceiling Concealed Duct (High Static)

ARNU07GBHA2
ARNU09GBHA2
ARNU12GBHA2
ARNU15GBHA2
ARNU18GBHA2
ARNU24GBHA2

(unit : mm)

Number	Name	Description
1	Liquid pipe connection	Unit size(7k,9k, 12k, 18k)ø6.35 Unit size(24k)ø9.52
2	Gas pipe connection	Unit size(7k,9k, 12k, 18k)ø12.7 Unit size(24k)ø15.88
3	Drain pipe connection	
4	Power supply connection	
5	Air discharge	
6	Air suction	


Note

- Unit should be installed in compliance with the installation manual in the product box.
- Unit shall be grounded in accordance with the local regulations or applicable national codes.

76, Seongsan-dong, Changwon City, Gyeongnam,
641-713, Korea
www.lgeaircon.com

LG Electronics

CHASSIS CODE: BH

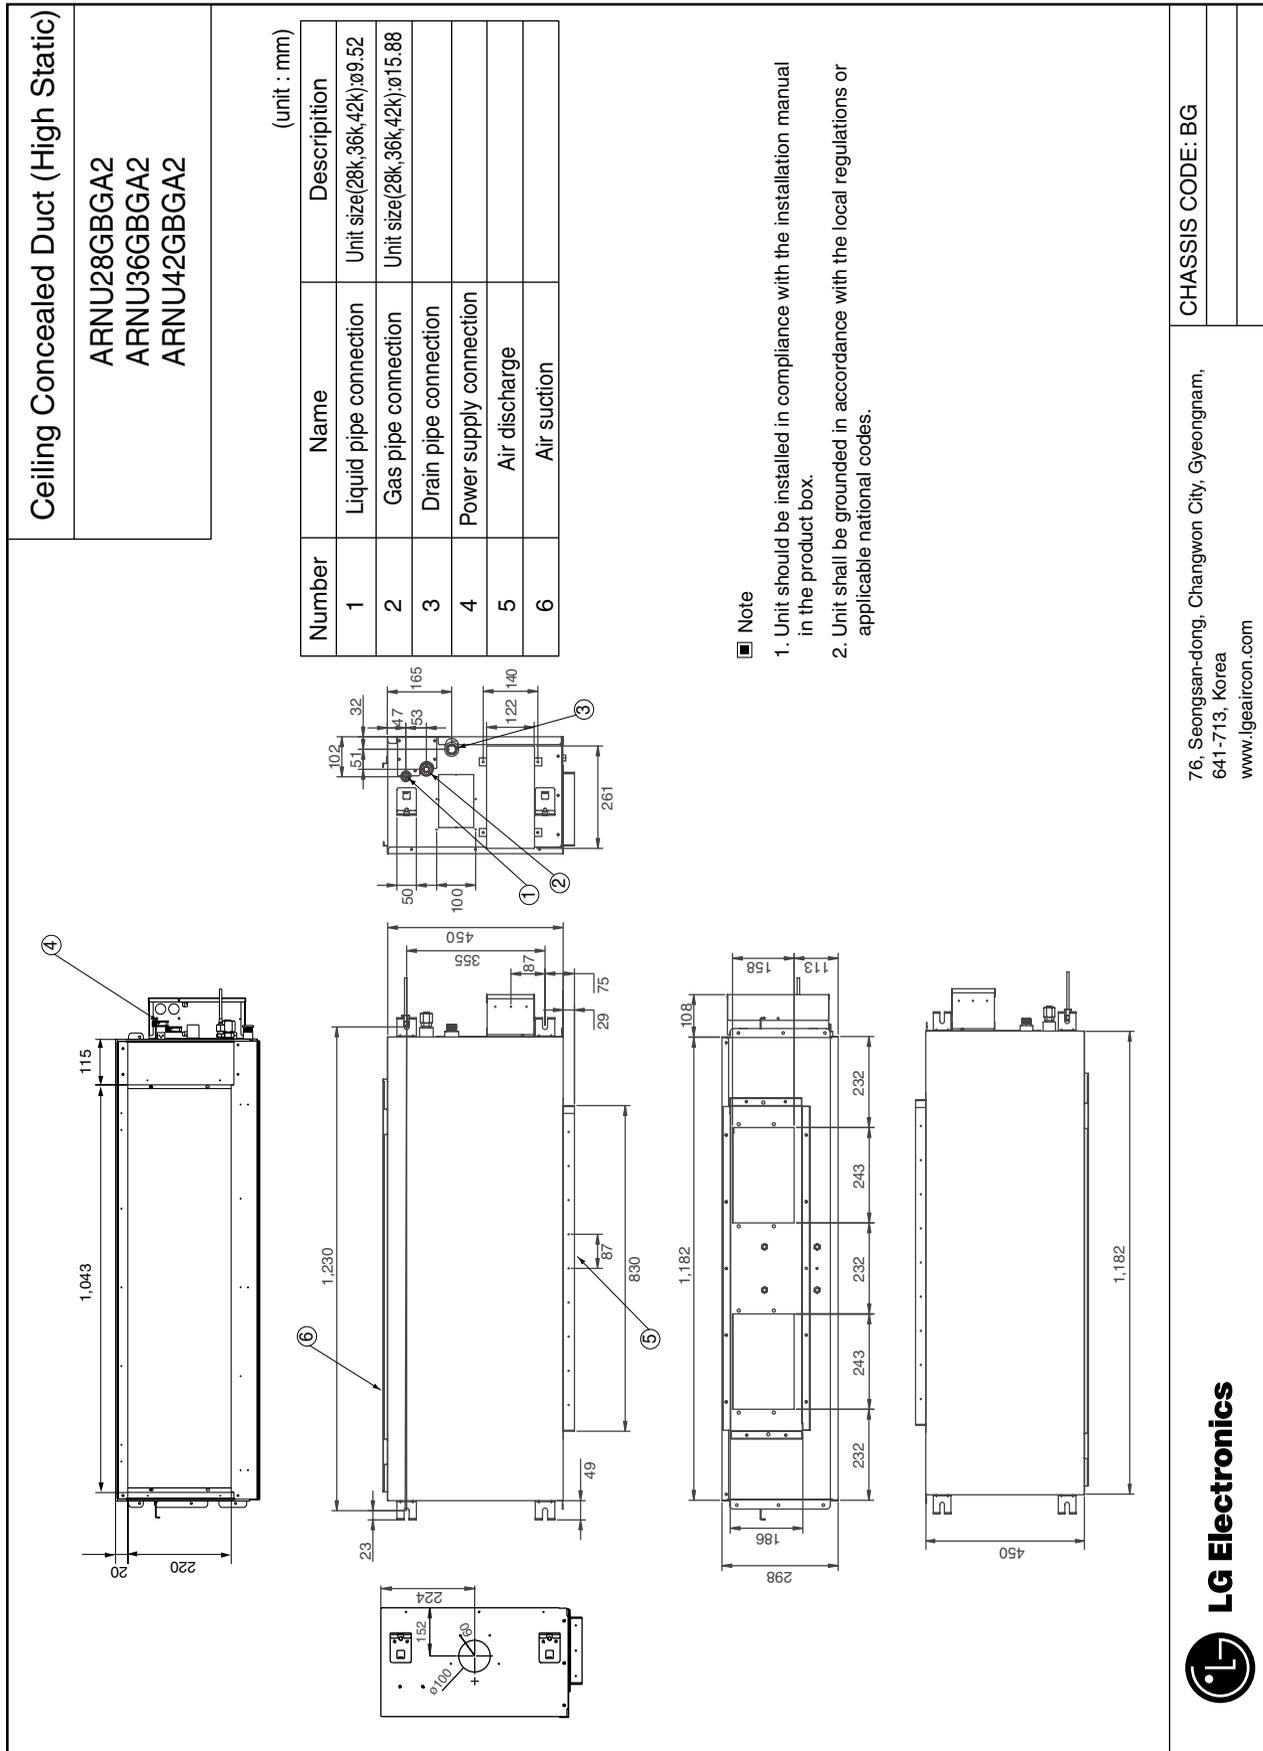

76, Seongsan-dong, Changwon City, Gyeongnam,
641-713, Korea
www.lgeaircon.com

CHASSIS CODE: BG

Ceiling Concealed Duct (High Static)

ARNJU48GBRA2

(unit : mm)

Number	Name	Description
1	Liquid pipe connection	Unit size(48k)ø9.52
2	Gas pipe connection	Unit size(48k)ø15.88
3	Drain pipe connection	
4	Power supply connection	
5	Air discharge	
6	Air suction	

■ Note

1. Unit should be installed in compliance with the installation manual in the product box.
2. Unit shall be grounded in accordance with the local regulations or applicable national codes.

LG Electronics

76, Seongsan-dong, Changwon City, Gyeongsangnam,
641-713, Korea
www.lgeaircon.com

CHASSIS CODE: BR

Ceiling Concealed Duct (High Static)

URNU76GB8A2
URNU96GB8A2

(unit : mm)

Number	Name	Description
1	Liquid pipe connection	Unit size(76k,96k);ø9.52
2	Gas pipe connection	Unit size(76k);ø19.05 Unit size(96k);ø22.2
3	Drain pipe connection	
4	Power supply connection	
5	Air discharge	
6	Air suction	

Note

- Unit should be installed in compliance with the installation manual in the product box.
- Unit shall be grounded in accordance with the local regulations or applicable national codes.

LG Electronics

76, Seongsan-dong, Changwon City, Gyeongnam,
641-713, Korea
www.lgeaircon.com

CHASSIS CODE: B8

Wall Mounted Type

1. Functions	73
2. Operation Details.....	74
3. Dimensions	81

1. Functions

Indoor Unit

Operation ON/OFF by Remote controller

Sensing the Room Temperature

- Room temperature sensor. (THERMISTOR)

Room temperature control

- Maintains the room temperature in accordance with the Setting temperature

Starting Current Control

- Indoor fan is delayed for 5 sec at the starting.

Indoor Fan Speed Control

- High, Med, Low, CHAOS

Operation indication Lamps (LED)

Signal Receptor

Receives the signals from the remote control.(Signal receiving sound: two short beeps or one long beep.)

Operation Indication Lamps

- ⓘ On/Off : Lights up during the system operation.
- ☆ Sleep Mode : Lights up during Sleep Mode Auto operation.
- ⌚ Timer : Lights up during Timer operation.
- * Defrost Mode : Lights up during Defrost Mode or Hot Start operation.
- BB Temperature : Indicate the setting temperature.

Soft Dry Operation Mode

- Intermittent operation of fan at low speed.

Sleep Mode Auto Control

- The fan is switched to low(Cooling), med(Heating) speed.
- The unit will be stopped after 1, 2, 3, 4, 5, 6, 7 hours.

Natural Air Control by CHAOS Logic

- The fan is switched to intermittent or irregular operation
- The fan speed is automatically switched from high to low speed.

Airflow Direction Control

- The louver can be set at the desired position or swing up and down automatically.

Defrost(Deice) control (Heating)

- Both the indoor and outdoor fan stops during defrosting.

Hot-start Control (Heating)

- The indoor fan does not rotate until the evaporator pipe temperature will be reached at 28°C.

2. Operation Details

Function of Controls

DISPLAY

(1) High quality LCD remote controller supplied

Operation Indicator

- On while in appliance operation, off while in appliance pause

Timer(on/off) and Sleep timer Indicator

- On while in timer mode (on/off) and in sleep timer mode, off when timer mode is completed or canceled

Defrost Indicator

- Off except when hot start during heating mode operation or while in defrost control.

Plasma Indicator

- On while in plasma mode, off while plasma mode is canceled.

Auto restart

- In case the power comes on again after a power failure, Auto Restarting Operation is the function to operate procedures automatically to the previous operating conditions.
If you want to use this operation, press the Auto Restart Button.

Power(Forced Operation)

- Operation starts, when this button is pressed and stops when you press the button again.

■ Cooling Mode Operation

- When the intake air temperature reaches 0.5°C below the setting temp, the compressor and the outdoor fan stop.
- When it reaches 0.5°C above the setting temp, they start to operate again.
Compressor ON Temp=> Setting Temp+0.5°C
Compressor OFF Temp => Setting Temp-0.5°C
- While in compressor running, operating with the airflow speed set by the remote controller. While in compressor not running, operating with the low airflow speed regardless of the setting.

■ Healthy Dehumidification Mode

- When the dehumidification operation input by the remote controller is received, the intake air temperature is detected and the setting temp is automatically set according to the intake air temperature.
 - $26^{\circ}\text{C} \leq \text{Intake Air Temp} \Rightarrow 25^{\circ}\text{C}$
 - $24^{\circ}\text{C} \leq \text{Intake Air Temp} < 26^{\circ}\text{C} \Rightarrow \text{Intake Air Temp} - 1^{\circ}\text{C}$
 - $18^{\circ}\text{C} \leq \text{Intake Air Temp} < 24^{\circ}\text{C} \Rightarrow \text{Intake Air Temp} - 0.5^{\circ}\text{C}$
 - $\text{Intake Air Temp} < 18^{\circ}\text{C} \Rightarrow 18^{\circ}\text{C}$
- While in compressor off, the indoor fan repeats low airflow speed and pause.
- While the intake air temp is between compressor on temp. and compressor off temp., 10-min dehumidification operation and 4-min compressor off repeat
 - Compressor ON Temp. \Rightarrow Setting Temp+0.5°C
 - Compressor OFF Temp. \Rightarrow Setting Temp-0.5°C
- In 10-min dehumidification operation, the indoor fan operates with the low airflow speed.

■ Heating Mode Operation

- When the intake air temp reaches +3°C above the setting temp, the compressor is turned off. When below the setting temp, the compressor is turned on.
 - Thermo ON Temp. \Rightarrow Setting Temp. +2°C
 - Thermo OFF Temp. \Rightarrow Setting Temp. +4°C
- While in compressor on, when above 38°C, it operates with or setting airflow speed (while in sleep mode, with the medium airflow speed).
- While in compressor off, the indoor fan is off when the indoor pipe temp is below 33°C, when above 35°C, it operates with the low airflow speed.
- While in defrost control, both of the indoor and outdoor fans are turned off.

■ Defrost Control

- While in heating mode operation in order to protect outdoor unit from freezing, reversed to cooling cycle to defrost the outdoor unit.

■ Fuzzy Operation (Outdoor unit C/O Model)

- According to the temperature set by Fuzzy rule, when the intake air temp is 0.5°C or more below the setting temp, the compressor is turned off. When 0.5°C or more above the setting temp, the compressor is turned on.
 - Compressor ON Temp \Rightarrow Setting Temp+0.5°C
 - Compressor OFF Temp \Rightarrow Setting Temp+0.5°C
- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.

$26^{\circ}\text{C} \leq \text{Intake Air Temp} \Rightarrow 25^{\circ}\text{C}$
 $24^{\circ}\text{C} \leq \text{Intake Air Temp} < 26^{\circ}\text{C} \Rightarrow \text{Intake Air Temp} + 1^{\circ}\text{C}$
 $22^{\circ}\text{C} \leq \text{Intake Air Temp} < 24^{\circ}\text{C} \Rightarrow \text{Intake Air Temp} + 0.5^{\circ}\text{C}$
 $18^{\circ}\text{C} \leq \text{Intake Air Temp} < 22^{\circ}\text{C} \Rightarrow \text{Intake Air Temp}$
 $\text{Intake Air Temp} < 18^{\circ}\text{C} \Rightarrow 18^{\circ}\text{C}$

- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan is automatically selected according to the temperature

■ Fuzzy Operation (Outdoor unit H/P Model)

- When any of operation mode is not selected like the moment of the power on or when 3 hrs has passed since the operation off, the operation mode is selected.
- When determining the operation mode, the compressor, the outdoor fan, and the 4 way valve are off and only the indoor fan is operated for 15 seconds. Then an operation mode is selected according to the intake air temp at that moment as follows.
 $24^{\circ}\text{C} \leq \text{Intake Air Temp} \Rightarrow \text{Fuzzy Operation for Cooling}$
 $21^{\circ}\text{C} \leq \text{Intake Air Temp} < 24^{\circ}\text{C} \Rightarrow \text{Fuzzy Operation for Dehumidification}$
 $\text{Intake Air Temp} < 21^{\circ}\text{C} \Rightarrow \text{Fuzzy Operation for Heating}$
- If any of the operation modes among cooling / dehumidification / heating mode operations is carried out for 10 sec or longer before Fuzzy operation, the mode before Fuzzy operation is operated.

1) Fuzzy Operation for Cooling

- According to the setting temperature selected by Fuzzy rule, when the intake air temp is 0.5°C or more below the setting temp, the compressor is turned off. When 0.5°C or more above the setting temp, the compressor is turned on.
Compressor ON Temp $\Rightarrow \text{Setting Temp} + 0.5^{\circ}\text{C}$
Compressor OFF Temp $\Rightarrow \text{Setting Temp} + 0.5^{\circ}\text{C}$
- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.
 $26^{\circ}\text{C} \leq \text{Intake Air Temp} \Rightarrow 25^{\circ}\text{C}$
 $24^{\circ}\text{C} \leq \text{Intake Air Temp} < 26^{\circ}\text{C} \Rightarrow \text{Intake Air Temp} + 1^{\circ}\text{C}$
 $22^{\circ}\text{C} \leq \text{Intake Air Temp} < 24^{\circ}\text{C} \Rightarrow \text{Intake Air Temp} + 0.5^{\circ}\text{C}$
 $18^{\circ}\text{C} \leq \text{Intake Air Temp} < 22^{\circ}\text{C} \Rightarrow \text{Intake Air Temp}$
 $\text{Intake Air Temp} < 18^{\circ}\text{C} \Rightarrow 18^{\circ}\text{C}$
- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan is automatically selected according to the temperature.

2) Fuzzy Operation for Dehumidification

- According to the setting temperature selected by Fuzzy rule, when the intake air temp is 0.5°C or more below the setting temp, the compressor is turned off. When 0.5°C or more above the setting temp, the compressor is turned on.
Compressor ON Temp $\Rightarrow \text{Setting Temp} + 0.5^{\circ}\text{C}$
Compressor OFF Temp $\Rightarrow \text{Setting Temp} + 0.5^{\circ}\text{C}$

- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.

$26^{\circ}\text{C} \leq \text{Intake Air Temp} \Rightarrow 25^{\circ}\text{C}$

$24^{\circ}\text{C} \leq \text{Intake Air Temp} < 26^{\circ}\text{C} \Rightarrow \text{Intake Air Temp} + 1^{\circ}\text{C}$

$22^{\circ}\text{C} \leq \text{Intake Air Temp} < 24^{\circ}\text{C} \Rightarrow \text{Intake Air Temp} + 0.5^{\circ}\text{C}$

$18^{\circ}\text{C} \leq \text{Intake Air Temp} < 22^{\circ}\text{C} \Rightarrow \text{Intake Air Temp}$

$\text{Intake Air Temp} < 18^{\circ}\text{C} \Rightarrow 18^{\circ}\text{C}$

- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan repeats the low airflow speed or pause as in dehumidification operation.

3) Fuzzy Operation for Heating

- According to the setting temperature selected by Fuzzy rule, when the intake air temp is 3°C or more above the setting temp, the compressor is turned off. When below the setting temp, the compressor is turned on.

Compressor ON Temp \Rightarrow Setting Temp. $+2^{\circ}\text{C}$

Compressor OFF Temp \Rightarrow Setting Temp. $+4^{\circ}\text{C}$

- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.

$20^{\circ}\text{C} \leq \text{Intake Air Temp} \Rightarrow \text{Intake Air Temp} + 0.5^{\circ}\text{C}$

$\text{Intake Air Temp} < 20^{\circ}\text{C} \Rightarrow 20^{\circ}\text{C}$

- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan is set to the high or the medium according to the intake air temperature and the setting temperature.

■ Airflow Speed Selection

- The airflow speed of the indoor fan is set to high, medium, low, or chaos by the input of the airflow speed selection key on the remote controller.

■ On-Timer Operation

- When the set time is reached after the time is input by the remote controller, the appliance starts to operate.
- The timer LED is on when the on-timer is input. It is off when the time set by the timer is reached.
- If the appliance is operating at the time set by the timer, the operation continues.

■ Off-Timer Operation

- When the set time is reached after the time is input by the remote controller, the appliance stops operating.
- The timer LED is on when the off-timer is input. It is off when the time set by the timer is reached.
- If the appliance is on pause at the time set by the timer, the pause continues.

■ Off-Timer <=> On-Timer Operation

- When the set time is reached after the on/off time is input by the remote controller, the on/off-timer operation is carried out according to the set time.

■ Sleep Timer Operation

- When the sleep time is reached after <1,2,3,4,5,6,7,0(cancel) hr> is input by the remote controller while in appliance operation, the operation of the appliance stops.
- While the appliance is on pause, the sleep timer mode cannot be input.
- While in cooling mode operation, 30 min later since the start of the sleep timer, the setting temperature increases by 1°C. After another 30 min elapse, it increases by 1°C again.
- When the sleep timer mode is input while in cooling cycle mode, the airflow speed of the indoor fan is set to the low.
- When the sleep timer mode is input while in heating cycle mode, the airflow speed of the indoor fan is set to the medium.

■ Chaos Swing Mode

- By the Chaos Swing key input, the vane automatically operates with the Chaos Swing or they are fixed to the desired direction.

■ Chaos Natural Wind Mode

- When the Chaos Natural Wind mode is selected and then operated, the high, medium, or low speed of the airflow mode is operated for 2~15 sec randomly by the Chaos Simulation.”

■ Jet Cool Mode Operation (Outdoor unit C/O Model)

- If the Jet Cool key is input at any operation mode while in appliance operation, the Jet Cool mode operates.
- In the Jet Cool mode, the indoor fan is operated at super-high speed for 30 min at cooling mode operation.
- In the Jet Cool mode operation, the room temperature is controlled to the setting temperature, 18°C
- When the sleep timer mode is input while in the Jet Cool mode operation, the Jet Cool mode has the priority.
- During the JET COOL function at any moment, the A/C starts to blow the cool air with side louvers closed at extremely high speed for 30 minutes setting the room temp. automatically to 18°C.

■ Jet Cool Mode Operation (Outdoor unit H/P Model)

- While in heating mode or Fuzzy operation, the Jet Cool key cannot be input. When it is input while in the other mode operation (cooling, dehumidification, ventilation), the Jet Cool mode is operated.”
- In the Jet Cool mode, the indoor fan is operated at super-high speed for 30 min at cooling mode operation.
- In the Jet Cool mode operation, the room temperature is controlled to the setting temperature, 18°C
- When the sleep timer mode is input while in the Jet Cool mode operation, the Jet Cool mode has the priority.
- During the JET HEAT function at any moment, the A/C starts to blow the hot air with side louvers closed at extremely high speed for 60 minutes setting the room temp. automatically to 30°C.

■ Auto Restarting Operation

- When the power is restored after a sudden power failure while in appliance operation, the mode before the power failure is kept on the memory and the appliance automatically operates in the mode on the memory.
- Operation Mode that is kept on the memory
 - State of Operation ON/OFF

- Operation Mode/Setting Temp/Selected Airflow Speed
- Sleep Timer Mode/Remaining Time of Sleep Timer (unit of hour)

■ Forced Operation

- Operation procedures when the remote control can't be used.
- The operation will be started if the power button is pressed.
- If you want to stop operation, re-press the button.

	Cooling Model	Heat pump Model		
		Room Temp. $\geq 24^{\circ}\text{C}$	$21^{\circ}\text{C} \leq$ Room Temp. $< 24^{\circ}\text{C}$	Room Temp. $< 21^{\circ}\text{C}$
Operating mode	Cooling	Cooling	Healthy Dehumidification	Heating
Indoor Fan Speed	High	High	High	High
Setting Temperature	22°C	22°C	23°C	24°C

- While in forced operation, the key input by the remote control has no effect and the buzzer sounds 10 times to indicate the forced operation.

■ Test operation

- During the TEST OPERATION, the unit operates in cooling mode at high speed fan, regardless of room temperature and resets in 18±1 minutes.
- During test operation, if remote controller signal is received, the unit operates as remote controller sets. If you want to use this operation, Press and hold ON/OFF button 3~5 seconds, then the buzzer sound 1 "beep".
- If you want to stop the operation, re-press the button.

■ Protection of the evaporator pipe from frosting

- If the indoor pipe temp is below 0°C in 7 min. after the compressor operates without any pause while in cooling cycle operation mode, the compressor and the outdoor fan are turned off in order to protect the indoor evaporator pipe from frosting.
- When the indoor pipe temp is 7°C or higher after 3 min. pause of the compressor, the compressor and the outdoor fan is turned on according to the condition of the room temperature.

■ Buzzer Sounding Operation

- When the appliance-operation key is input by the remote control, the short "beep-beep-" sounds.
- When the appliance-pause key is input by the remote control, the long "beep—" sounds.
- When a key is input by the remote control while the slide switch on the main unit of the appliance is on the forced operation position, the error sound "beep-beep-beep-beep-beep-" is made 10 times to indicate that the remote control signal cannot be received.

■ Air Cleaner Operation

- When an air cleaner function is selected during Air Conditioner operation
 - Plasma air cleaner function will be operated while in any operation mode with selecting the function.
 - The function is to be stopped while it is operating with selecting the function.
- When an air cleaner function is selected during operation off
 - The function will be only operated.
- When inlet grille of air conditioner is opened during plasma operation, High Voltage Generator(H.V.B) is to be stopped. When inlet grille of air conditioner is closed during plasma operation, High Voltage Generator(H.V.B) will be operated again.

3. Dimensions

<p>Wall Mounted</p> <p>ARNU07GSE*2 ARNU09GSE*2 ARNU12GSE*2 ARNU15GSE*2</p>	<p>(unit : mm)</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Model</th> <th>W</th> <th>H</th> <th>D</th> </tr> </thead> <tbody> <tr> <td>ARNU07GSE*2 ARNU09GSE*2 ARNU12GSE*2 ARNU15GSE*2</td> <td style="text-align: center;">895</td> <td style="text-align: center;">282</td> <td style="text-align: center;">165</td> </tr> </tbody> </table>	Model	W	H	D	ARNU07GSE*2 ARNU09GSE*2 ARNU12GSE*2 ARNU15GSE*2	895	282	165	<p>(unit : mm)</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Number</th> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">1</td> <td style="text-align: center;">Air discharge grill</td> <td></td> </tr> <tr> <td style="text-align: center;">2</td> <td style="text-align: center;">Air suction grill</td> <td></td> </tr> </tbody> </table>	Number	Name	Description	1	Air discharge grill		2	Air suction grill	
Model	W	H	D																
ARNU07GSE*2 ARNU09GSE*2 ARNU12GSE*2 ARNU15GSE*2	895	282	165																
Number	Name	Description																	
1	Air discharge grill																		
2	Air suction grill																		

165

895

282

265

567

Note

- Unit should be installed in compliance with the installation manual in the product box.
- Unit shall be grounded in accordance with the local regulations or applicable national codes.

LG Electronics

76, Seongsan-dong, Changwon City, Gyeongnam,
641-713, Korea
www.lgeaircon.com

CHASSIS CODE: SE

Dimensions

Wall Mounted	
ARNU18GS5*2 ARNU24GS5*2	

Model	W	H	D
ARNU18GS5*2	1090	300	178
ARNU24GS5*2			

(unit : mm)

Number	Name	Description
1	Air discharge grill	
2	Air suction grill	

(unit : mm)

Note

- Unit should be installed in compliance with the installation manual in the product box.
- Unit shall be grounded in accordance with the local regulations or applicable national codes.

Ceiling & Floor Ceiling Suspended

1. Funtions	84
2. Operation Details.....	85
3. Dimensions	88

1. Function

Indoor Unit

Operation ON/OFF by Remote controller

Sensing the Room Temperature

- Room temperature sensor. (Thermistor)

Room temperature control

- Maintains the room temperature in accordance with the Setting Temperature.

Starting Current Control

- Indoor fan is delayed for 5 seconds at the starting.

Indoor Fan Speed Control

- High, Med, Low

Soft Dry Operation Mode

- Intermittent operation of fan at low speed.

Auto Restart

- Although the air-conditioner is turned off by a power failure, it is restarted automatically previous operation mode after power supply.

Deice (defrost) control (Heating)

- Both the indoor and outdoor fan stops during defrosting.
- Hot start after defrost ends.

Hot-start Control (Heating)

- The indoor fan does not rotate until the evaporator piping temperature reaches 25°C.

High head height Drain pump

- A standard drain-head height of up to 700mm is possible.

Central Control(Optional)

- It is operating individually or totally by central control function.

2. Operation Details


(1) The function of main control

■ Soft-Dry Operation

- The indoor fan speed is automatically set to the low, so the shift of the indoor fan speed is impossible because of already being set to the best speed for Dry Operation by microcontroller control.

■ Cooling Mode Operation


- When selecting the Cooling(※) Mode Operation, the unit will operate according to the setting by the remote controller and the operation diagram is as following.

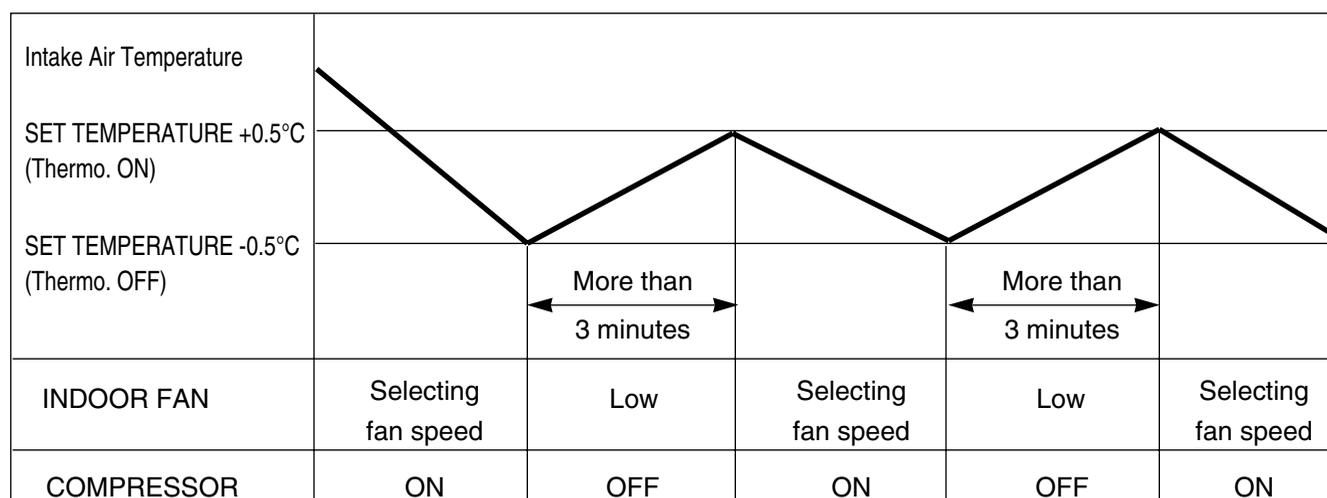

	Thermal ON	Thermal OFF
Indoor Unit mode	ST+0.5	ST-0.5
2TH (Remo.+Indoor)	To be selected higher temperature contrast Indoor Unit and Remo.	To be selected higher temperature contrast Indoor Unit and Remo.
Remo. Mode	ST+0.5	ST-0.5

■ Heating Mode Operation

The unit will operate according to the setting by the remote controller and the operation diagram is shown as following.

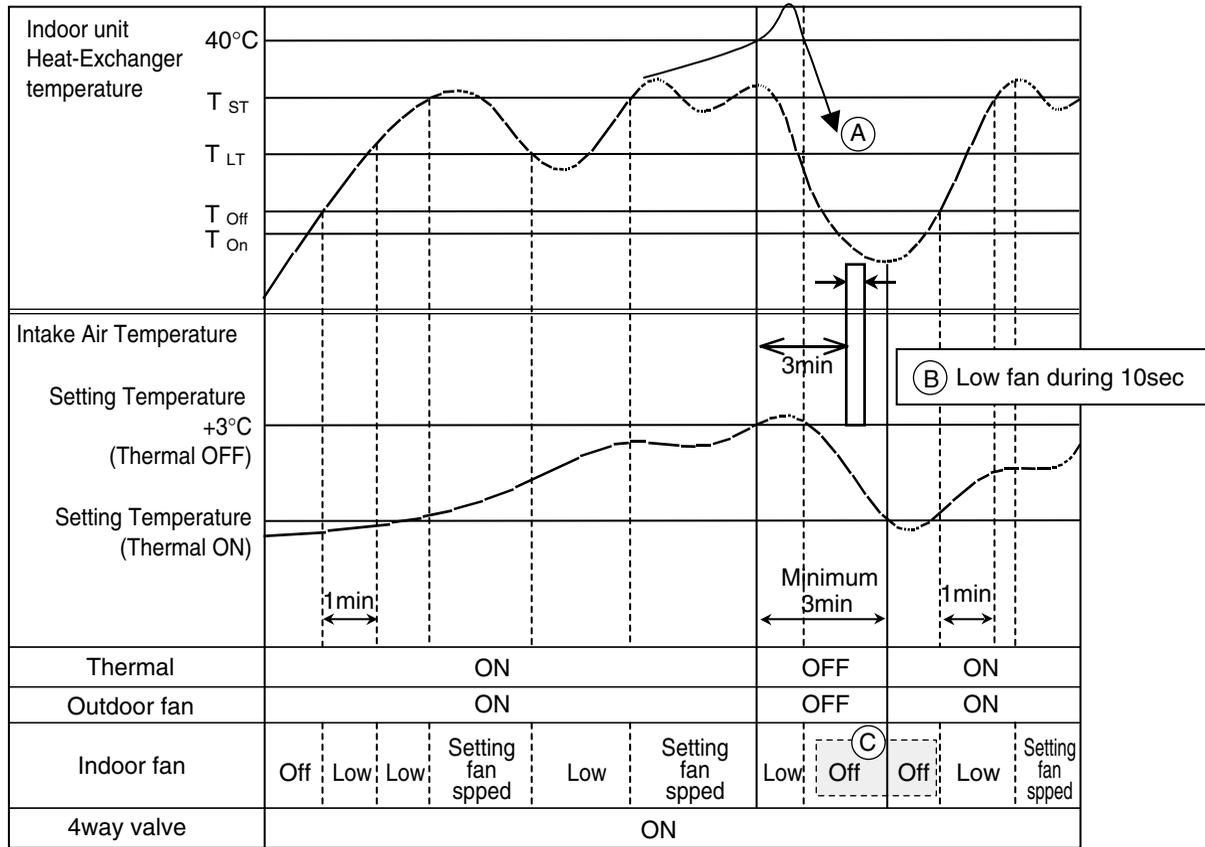


- **Compressor-off interval** : - (A) While the indoor Heat-Exchanger temperature is higher than 40°C, fan operates at low speed, when it becomes lower than 40°C fan stops.
- (B) For eliminating latent heat-loss, fan operates at low speed for 10 seconds periodically.
- (C) To be operated "Low" except initial Hotstart operation

	High Static			Low Static				Convertible	
Chassis	BH	BG	BR	B1	B2	CE	CF	VE	VJ
Hotstart On T_{On}	19°C	19°C	19°C	19°C	19°C	19°C	19°C	26°C	26°C
Hotstart Off T_{Off}	22°C	22°C	22°C	22°C	22°C	22°C	22°C	27°C	27°C
Low temperature T_{LT}	25°C	25°C	25°C	25°C	25°C	25°C	25°C	28°C	28°C
Setting Temperature T_{ST}	27°C	27°C	27°C	27°C	27°C	27°C	27°C	30°C	30°C

■ Hot-Start Control

- The indoor fan does not rotate until the indoor unit Hex-Exchanger temperature reaches 30°C.
- The operation diagram is as following.

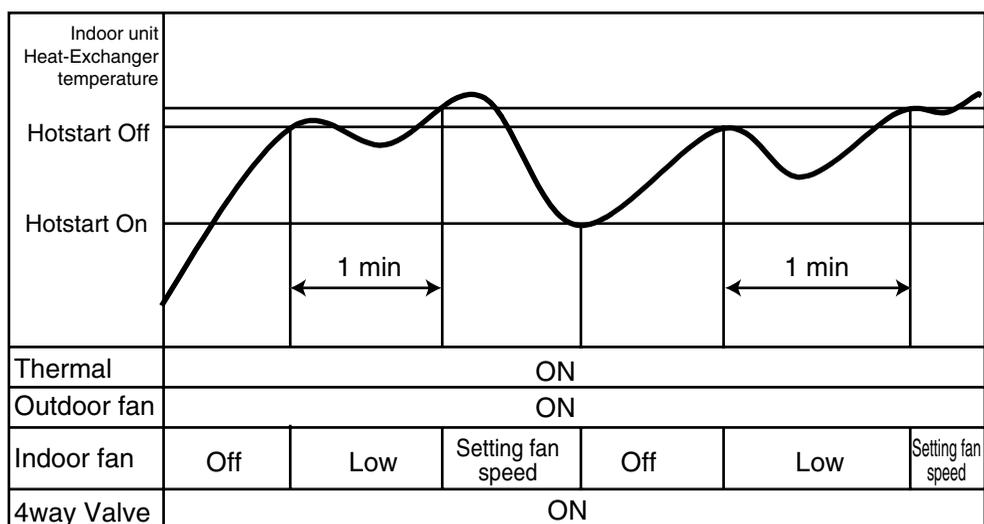

- Initial Hotstart On state
 - ① Power Off ➡ On
 - ② Operation Off ➡ On
 - ③ Cooling operation ➡ Heating operation
 - ④ Defrost operation

3. Dimensions

Ceiling & Floor			
ARNU09GVEA2 ARNU12GVEA2			

(unit : mm)			
Model	W	H	D
ARNU09GVEA2 ARNU12GVEA2	900	490	200

(unit : mm)	
Number	Description
1	Air discharge grill
2	Air suction grill

Note
 1. Unit should be installed in compliance with the installation manual in the product box.
 2. Unit shall be grounded in accordance with the local regulations or applicable national codes.

<Ceiling Installation>

<Floor Installation>



LG Electronics

76, Seongsan-dong, Changwon City, Gyeongnam,
641-713, Korea
www.lgeaircon.com

CHASSIS CODE: VE

Ceiling Suspended

ARNU18GVJA2
ARNU24GVJA2

Model	W	H	D
ARNU18GVJA2 ARNU24GVJA2	950	650	220

(unit : mm)

Number	Name	Description
1	Air discharge grill	
2	Air suction grill	

(unit : mm)

Note

1. Unit should be installed in compliance with the installation manual in the product box.
2. Unit shall be grounded in accordance with the local regulations or applicable national codes.

(Ceiling Suspended type)

LG Electronics

76, Seongsan-dong, Changwon City, Gyeongnam,
641-713, Korea
www.lgeaircon.com

CHASSIS CODE: VJ

Floor Standing Type

1. Function	91
2. Operation Details.....	92
3. Dimensions	95

1. Function

Indoor Unit

Operation ON/OFF by Remote controller

Sensing the Room Temperature

- Room temperature sensor. (Thermistor)

Room temperature control

- Maintains the room temperature in accordance with the Setting Temperature.

Starting Current Control

- Indoor fan is delayed for 5 seconds at the starting.

Indoor Fan Speed Control

- High, Med, Low

Soft Dry Operation Mode

- Intermittent operation of fan at low speed.

Auto Restart

- Although the air-conditioner is turned off by a power failure, it is restarted automatically previous operation mode after power supply.

Deice (defrost) control (Heating)

- Both the indoor and outdoor fan stops during defrosting.
- Hot start after defrost ends.

Hot-start Control (Heating)

- The indoor fan does not rotate until the evaporator piping temperature reaches 25°C.

High head height Drain pump

- A standard drain-head height of up to 700mm is possible.

Central Control(Optional)

- It is operating individually or totally by central control function.

2. Operation Details


(1) The function of main control

■ Soft-Dry Operation

- The indoor fan speed is automatically set to the low, so the shift of the indoor fan speed is impossible because of already being set to the best speed for Dry Operation by microcontroller control.

■ Cooling Mode Operation


- When selecting the Cooling(✳) Mode Operation, the unit will operate according to the setting by the remote controller and the operation diagram is as following.

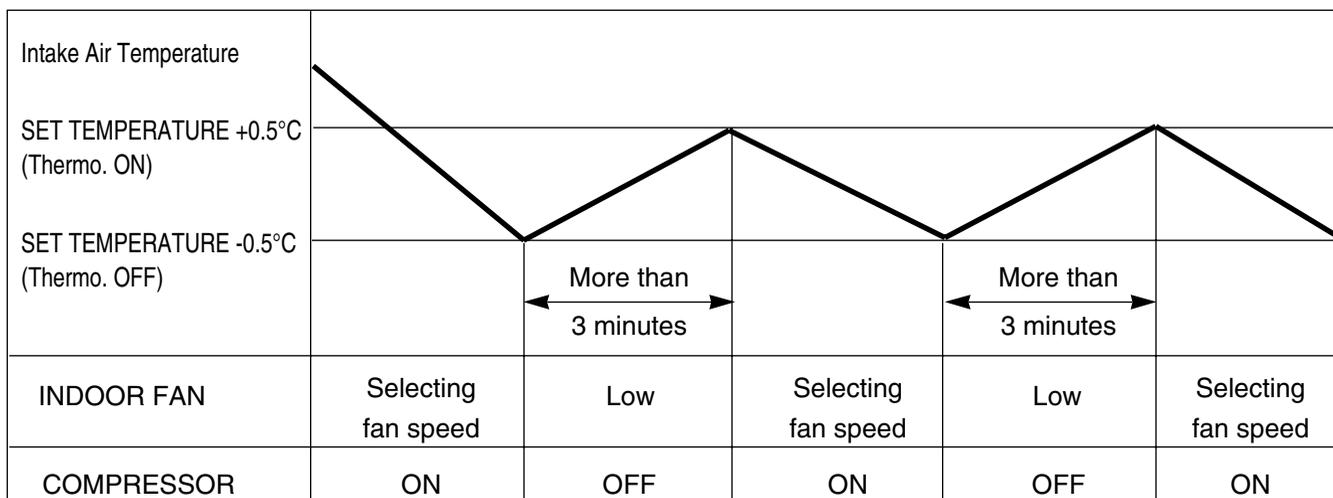

	Thermal ON	Thermal OFF
Indoor Unit mode	ST+0.5	ST-0.5
2TH (Remo.+Indoor)	To be selected higher temperature contrast Indoor Unit and Remo.	To be selected higher temperature contrast Indoor Unit and Remo.
Remo. Mode	ST+0.5	ST-0.5

■ Heating Mode Operation

The unit will operate according to the setting by the remote controller and the operation diagram is shown as following.

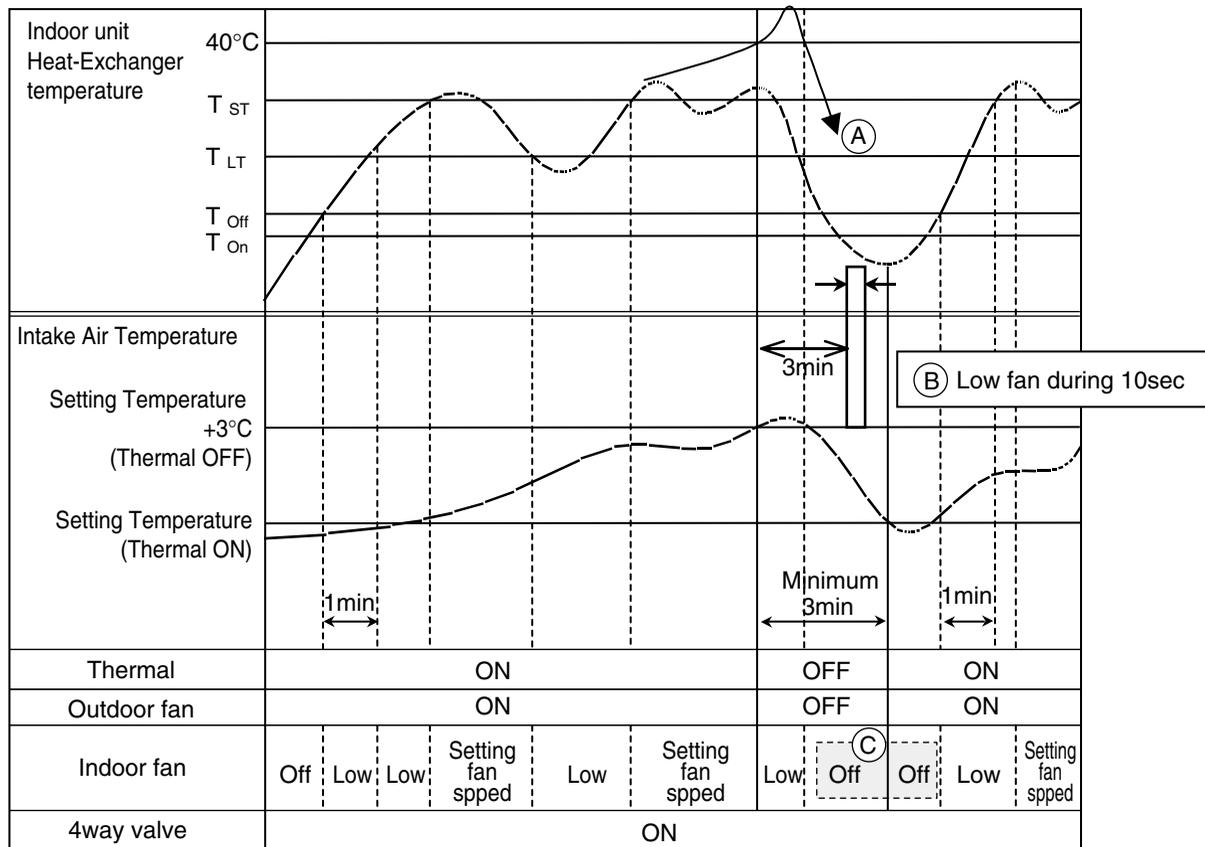


- **Compressor-off interval** : - (A) While the indoor Heat-Exchanger temperature is higher than 40°C, fan operates at low speed, when it becomes lower than 40°C fan stops.
- (B) For eliminating latent heat-loss, fan operates at low speed for 10 seconds periodically.
- (C) To be operated "Low" except initial Hotstart operation

	High Static			Low Static				Convertible	
Chassis	BH	BG	BR	B1	B2	CE	CF	VE	VJ
Hotstart On T _{On}	19°C	19°C	19°C	19°C	19°C	19°C	19°C	26°C	26°C
Hotstart Off T _{Off}	22°C	22°C	22°C	22°C	22°C	22°C	22°C	27°C	27°C
Low temperature T _{LT}	25°C	25°C	25°C	25°C	25°C	25°C	25°C	28°C	28°C
Setting Temperature T _{ST}	27°C	27°C	27°C	27°C	27°C	27°C	27°C	30°C	30°C

■ Hot-Start Control

- The indoor fan does not rotate until the indoor unit Hex-Exchanger temperature reaches 30°C.
- The operation diagram is as following.

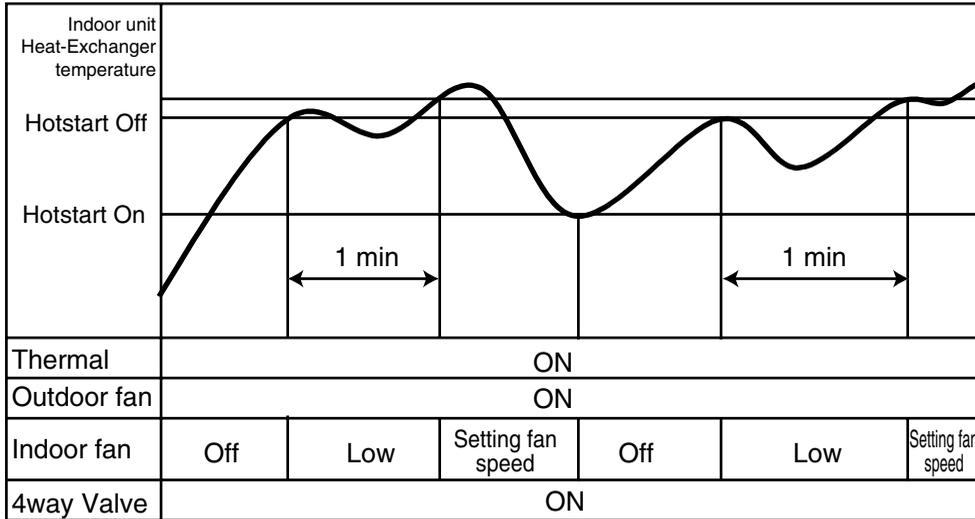

- Initial Hotstart On state
 - ① Power Off ➡ On
 - ② Operation Off ➡ On
 - ③ Cooling operation ➡ Heating operation
 - ④ Defrost operation

3. Dimensions

Floor Standing	
ARNU07GCEA2	ARNU07GCEU2
ARNU09GCEA2	ARNU09GCEU2
ARNU12GCEA2	ARNU12GCEU2
ARNU15GCEA2	ARNU15GCEU2

(unit : mm)			
Model	W	H	D
ARNU07GCEA2 ARNU09GCEA2 ARNU12GCEA2 ARNU15GCEA2	1067	635	203
ARNU07GCEU2 ARNU09GCEU2 ARNU12GCEU2 ARNU15GCEU2	978	639	190

(unit : mm)	
Number	Description
1	Air discharge grill
2	Air suction grill

Note

- Unit should be installed in compliance with the installation manual in the product box.
- Unit shall be grounded in accordance with the local regulations or applicable national codes.

LG Electronics

76, Seongsan-dong, Changwon City, Gyeongnam,
641-713, Korea
www.lgeaircon.com

CHASSIS CODE: CE

Floor Standing			
ARNU18GCFA2 ARNU24GCFA2	ARNU18GCFU2 ARNU24GCFU2		

<With Case>

<Without Case>

(unit : mm)			
Model	W	H	D
ARNU18GCFA2 ARNU24GCFA2	1345	635	203
ARNU18GCFU2 ARNU24GCFU2	1256	639	190

(unit : mm)	
Number	Description
1	Air discharge grill
2	Air suction grill

Note

1. Unit should be installed in compliance with the installation manual in the product box.
2. Unit shall be grounded in accordance with the local regulations or applicable national codes.

76, Seongsan-dong, Changwon City, Gyeongnam,
641-713, Korea
www.lgeaircon.com

CHASSIS CODE: CF

Part 3

Trouble shooting guide

Trouble shooting guide

Self-diagnosis function	99
--------------------------------------	-----------

Self-diagnosis function

Self-Diagnosis Function

Error Indicator

- This function indicates types of failure in self-diagnosis and occurrence of failure for air condition.
- Error mark is displayed on display window of indoor units and wired remote controller, and 7-segment LED of outdoor unit control board as shown in the table.
- If more than two troubles occur simultaneously, lower number of error code is first displayed.
- After error occurrence, if error is released, error LED is also released simultaneously.

Error Display

1st,2nd LED of 7-segment indicates error number, 3rd LED indicates unit number.

Ex) 211 : No.21 error of master unit

213 : No.21 error of slave2


011 → 051 : No.105 error of master unit

	Display			Title	Cause of Error
Indoor unit related error	0	1	-	Air temperature sensor of indoor unit	Air temperature sensor of indoor unit is open or short
	0	2	-	Inlet pipe temperature sensor of indoor unit	Inlet pipe temperature sensor of indoor unit is open or short
	0	3	-	Transmission error : wired remote controller ↔ indoor unit	Failing to receive wired remote controller signal in indoor unit PCB
	0	4	-	Drain pump	Malfunction of drain pump
	0	5	-	Transmission error : outdoor unit ↔ indoor unit	Failing to receive outdoor unit signal in indoor unit PCB
	0	6	-	Outlet pipe temperature sensor of indoor unit	Outlet pipe temperature sensor of indoor unit is open or short
	0	7	-	Different operation mode	Operation mode between indoor unit and outdoor unit is different
	0	9	-	Serial No.	In case when the serial number marked on EEPROM of Indoor unit is 0 or FFFFFFFF
	1	0	-	Poor fan motor operation	Disconnecting the fan motor connector/Failure of indoor fan motor lock
	1	1	-	Transmission error: indoor unit → main PCB of outdoor.	When the addressing signal doesn't respond for 3mins. suddenly, while the indoor unit gets the calling signal from the outdoor unit,

Self-diagnosis function

Error No.	Error Type	Error Point	Main Reasons
01	Indoor unit air sensor error	Indoor unit sensor is open/short	1. Indoor unit PCB wrong connection 2. Indoor unit PCB failure 3. Sensor problem (main reason)
02	Indoor unit pipe inlet sensor error		
06	Indoor unit pipe outlet sensor error		

■ Error diagnosis and countermeasure flow chart

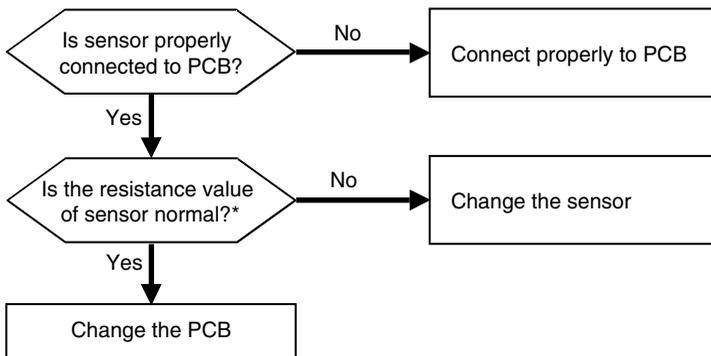

** In case the value is more than 100kΩ (open) or less than 100Ω (short), Error occurs

Refer: Resistance value maybe change according to temperature of temp sensor,
It shows according to criteria of current temperature(±5% margin) → Normal

Air temp sensor: 10°C = 20.7kΩ : 25°C= 10kΩ : 50°C= 3.4kΩ

Pipe temp sensor: 10°C = 10kΩ : 25°C= 5kΩ : 50°C= 1.8kΩ




- ← **CN-ROOM** : Indoor air temp sensor
- ← **CN-PIPE2** : Pipe outlet temp sensor
- ← **CN-PIPE1** : Pipe inlet temp sensor



← Measure the resistance of outlet pipe temp sensor.

Error No.	Error Type	Error Point	Main Reasons
03	No transmission between cabled remote controller & indoor unit	The remote controller did not receive the signal from indoor unit during specific time	1. Remote controller fault 2. Indoor unit PCB fault 3. Connector fault, Wrong connection 4. transmission cable problem

■ Error diagnosis and countermeasure flow chart

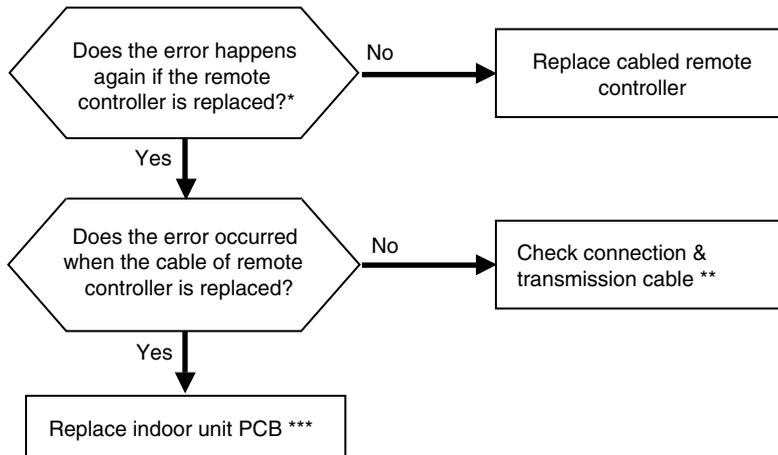

* If there is no remote controller to replace : Use another unit's remote controller doing well


** Check cable : Contact failure of connected portion or extension of cable are main cause
 Check any surrounded noise (check the distance with main power cable)
 → make safe distance from the devices generate electromagnetic wave

*** After replacing indoor unit PCB, do Auto Addressing & input unit's address if connected to central controller.
 (All the indoor units connected should be turned on before Auto Addressing



← **CN-REMO** : Remote controller connection

※ The PCB can differ from model to model.
 Check from the right source.

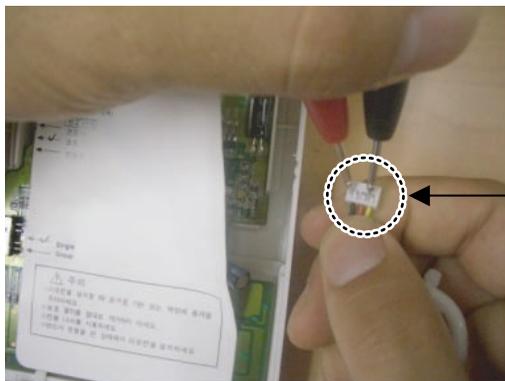


← Checking transmission cable connection status


Self-diagnosis function

Error No.	Error Type	Error Point	Main Reasons
04	Drain pump error	Float switch is open due to rising of condensate water level because of drain pump fault or drain pipe clogging	<ol style="list-style-type: none"> 1. Drain pump/float switch fault 2. Improper drain pipe location, clogging of drain pipe 3. Indoor unit PCB fault

■ Error diagnosis and countermeasure flow chart

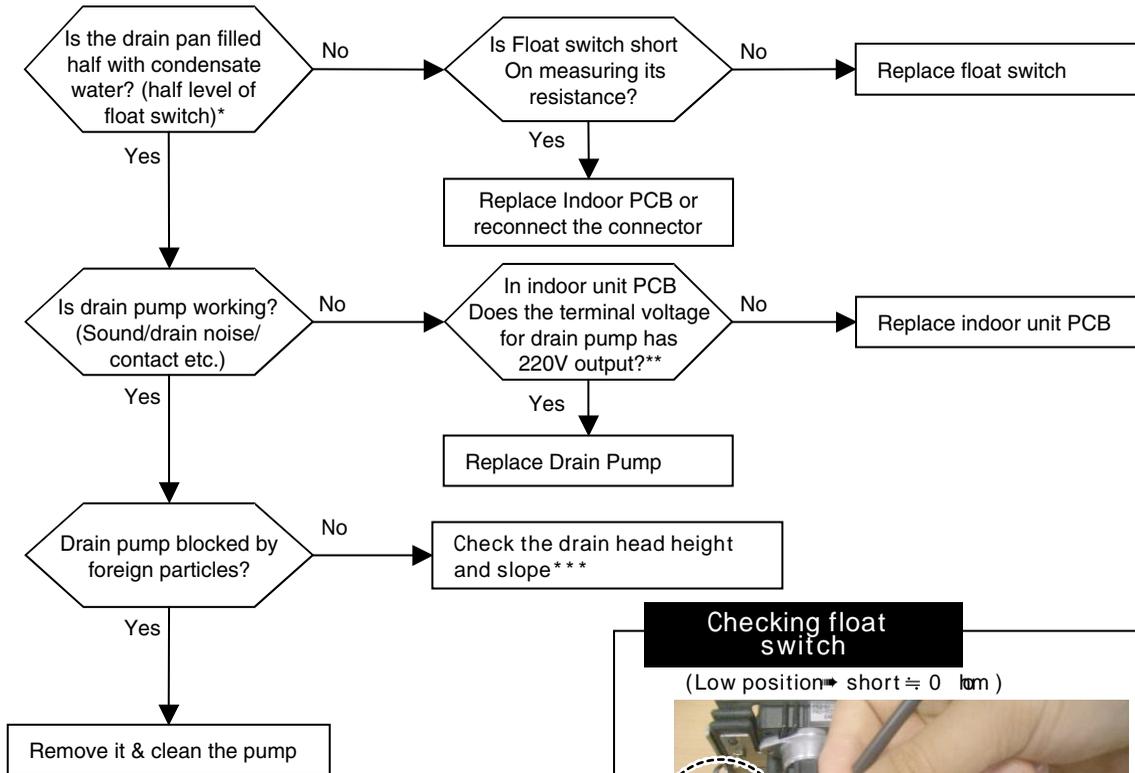

* If the float goes up higher than a half of float switch then the circuit is open & the unit is stopped automatically.

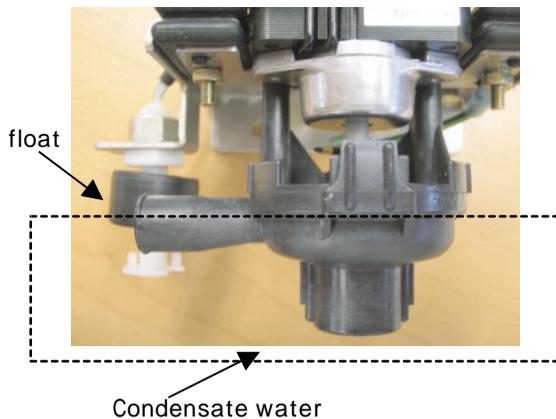


Checking float switch

(Low position → short ≈ 0 Ω)




(High position → Open)




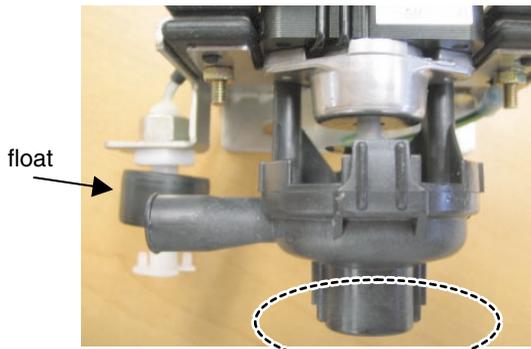

A:Point to check rotating

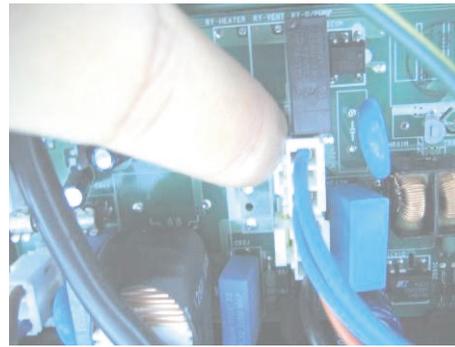


*** Indoor PCB drain pump connector
(Check input of 220V)
(Marked as **CN-DPUMP**)

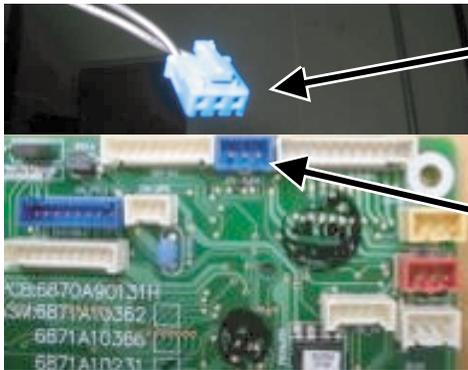

Float switch connector

Float switch Housing (**CN-FLOAT**)


[***] Standard of drain pipe head height / slope

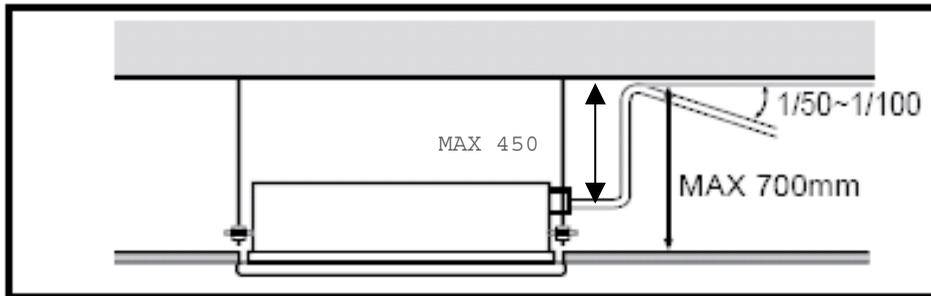

Self-diagnosis function


Error No.	Error Type	Error Point	Main Reasons
05	Indoor & Outdoor unit transmission error	No signal transmission between indoor & outdoor units.	<ol style="list-style-type: none"> 1. Auto addressing is not done 2. transmission cable is not connected 3. Short circuit of transmission cable 4. Indoor unit transmission circuit fault 5. Outdoor unit transmission circuit fault 6. Not enough distance between power and transmission cable?

■ Error diagnosis and countermeasure flow chart

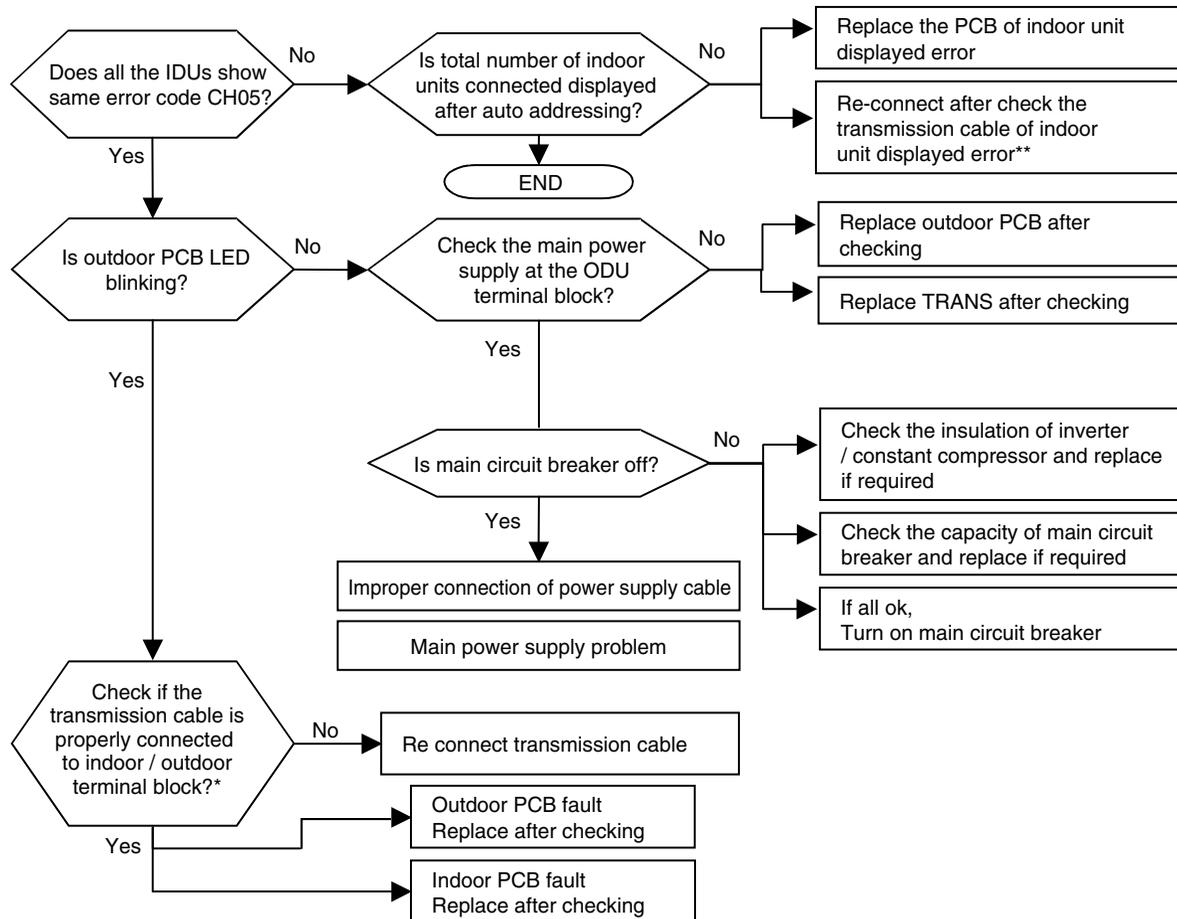


* (Note1) Transmission from IDU is normal if voltage fluctuation(-9V ~ +9V) exists when checking DC voltage of communication terminal between IDU and ODU

* If the DC voltage between transmission terminal A, B of indoor unit is fluctuate within (-9V~+9V) then transmission from outdoor unit is normal

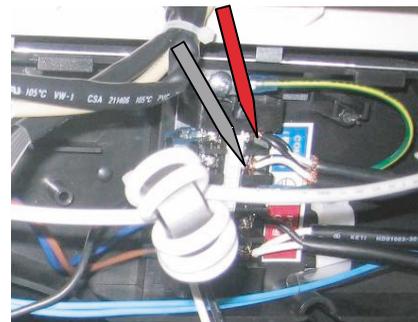

Error No.	Error Type	Error Point	Main Reasons
06	Indoor unit outlet pipe temperature sensor error	Indoor unit outlet pipe temperature sensor open or short	Refer to CH02
07	All Indoor units are not running in same mode	The Indoor units started later are operated in different mode from earlier one.	1. Indoor units are in different mode 2. PCB fault 3. cabled remote controller fault * Checking ch07 method IDU doesn't operate as Operation mode is flickering at IDU wired remote controller and IDU display window.


■ Error diagnosis and countermeasure flow chart

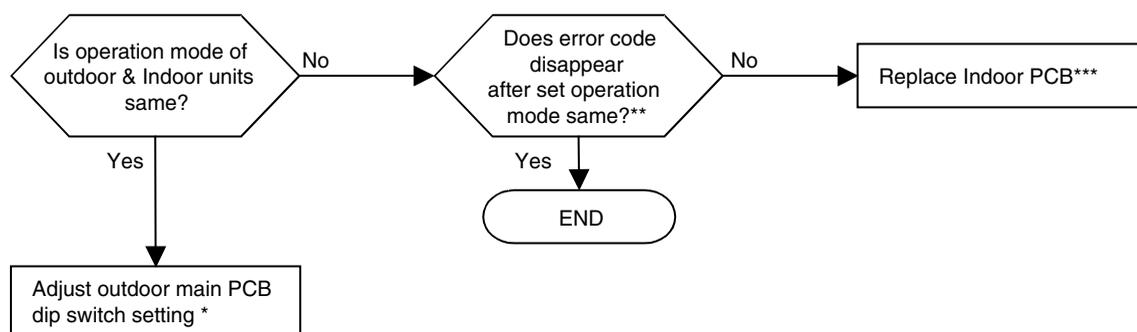

* Check mode selection setting of wired remote controller.

** Outdoor main PCB dip switch no.5 (Cooling) or no.6 (heating) is in On, different mode operation error may occur because the operation mode is fixed by dip switch setting.

◆ Dip switch Setting ◆

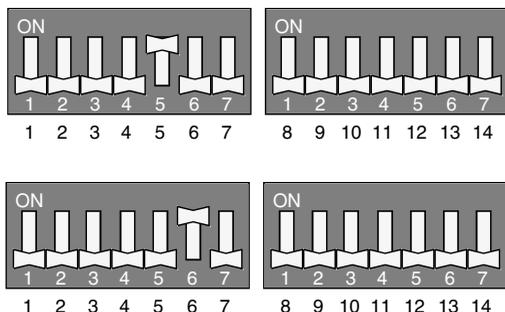

*** Dissolution method CH07 with remote controller

- 1) Error removal method : Turn off remote controller by pressing the On/Off button on the cabled remote controller. The error code will be removed automatically after few seconds.
 With cableless remote controller: Turn off indoor unit, and then turn on by changing the operation mode. The error will disappear.

Self-diagnosis function

**** After replacing the indoor unit PCB, make sure to be done to do Auto addressing and input the address of central control

**** If ODU Dry Contact function is set , different mode operation error may be occurred because the operation mode is fixed.


Error No.	Error Type	Error Point	Main Reasons
09	Indoor unit EEPROM error		1. Error developed in transmission between the micro-processor and the EEPROM on the surface of the PCB. 2. ERROR due to the EEPROM damage

■ Error diagnosis and countermeasure flow chart


- Replace the indoor unit PCB, and then make sure to perform Auto addressing and input the address of central control

Error No.	Error Type	Error Point	Main Reasons
10	Indoor unit BLDC fan motor failure	Indoor BLDC fan motor feedback signal is absent (for 50 sec.)	1. Motor connector connection fault 2. Indoor PCB fault 3. Motor fault

■ Error diagnosis and countermeasure flow chart

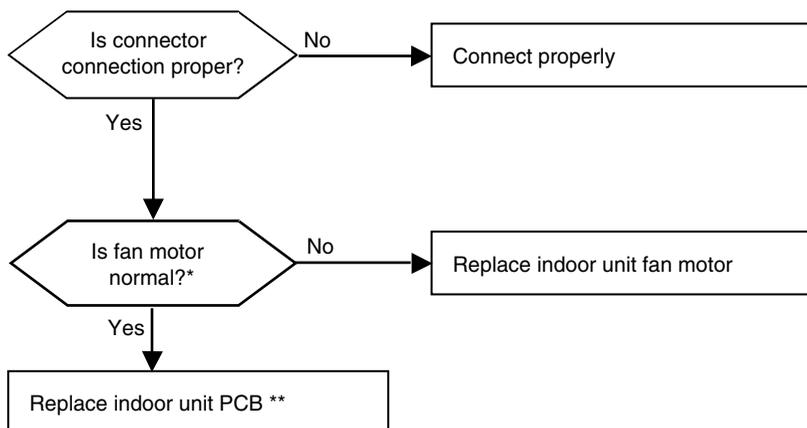


* It is normal when check hall sensor of indoor fan motor as shown below

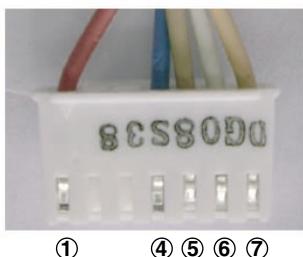

Each terminal with the tester

Tester		Normal resistance(±10%)	
+	-	TH chassis	TD chassis
①	④	∞	∞
⑤	④	hundreds kΩ	hundreds kΩ
⑥	④	∞	∞
⑦	④	hundreds kΩ	hundreds kΩ

<Checking connection state of fan motor connector>

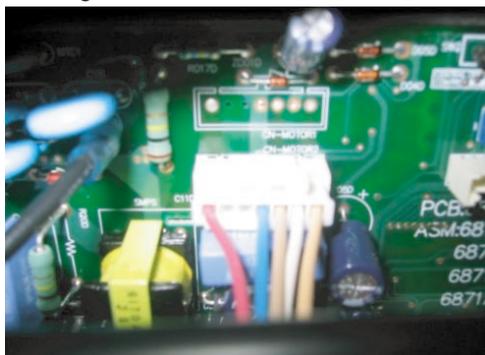


** Replace the indoor unit PCB, and then make sure to do Auto addressing and input the address of central control
(Notice: The connection of motor connector to PCB should be done under no power supplying to PCB)

Self-diagnosis function

Error No.	Error Type	Error Point	Main Reasons
11	Indoor unit transmission error	Indoor unit doesn't get signal from ODU for 3 minutes continuously	1. Indoor 485 transmission PCB fault 2. After PCB replacing, auto addressing was not done

■ Error diagnosis and countermeasure flow chart

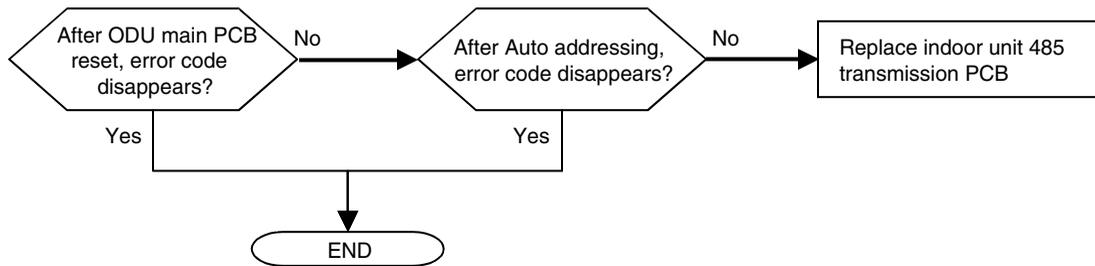



P/NO : MFL50459501

APRIL, 2008